



---

Junos<sup>®</sup> OS

Interfaces Fundamentals for Routing Devices



---

Modified: 2018-09-03

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. and/or its affiliates in the United States and other countries. All other trademarks may be property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Junos® OS Interfaces Fundamentals for Routing Devices*  
Copyright © 2018 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://www.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

About the Documentation .....	xlili
Documentation and Release Notes .....	xlili
Using the Examples in This Manual .....	xlili
Merging a Full Example .....	xliv
Merging a Snippet .....	xliv
Documentation Conventions .....	xlvi
Documentation Feedback .....	xlvi
Requesting Technical Support .....	xlvi
Self-Help Online Tools and Resources .....	xlvi
Opening a Case with JTAC .....	xlvi

## Part 1

### Chapter 1

## Router Interfaces

<b>Router Interfaces Overview .....</b>	<b>3</b>
Router Interfaces Overview .....	4
Types of Interfaces Overview .....	4
Understanding Permanent Interfaces .....	5
Understanding Transient Interfaces .....	5
Understanding Services Interfaces .....	7
Understanding Container Interfaces .....	8
Understanding Traditional APS Concept .....	8
Container Interfaces Concept .....	9
APS Support for Container-Based Interfaces .....	9
Autocopy of APS Parameters .....	9
Understanding Management Ethernet Interfaces .....	10
Understanding Interfaces on ACX Series Universal Metro Routers .....	11
T1 and E1 Time-Division Multiplexing (TDM) Interfaces .....	12
Inverse Multiplexing for ATM (IMA) .....	13
Gigabit Ethernet interfaces .....	13
TX Matrix Plus and T1600 Router (Routing Matrix) Management Ethernet Interfaces .....	14
Understanding Internal Ethernet Interfaces .....	15
T1600 Routers (Routing Matrix) Internal Ethernet Interfaces .....	17
Supported Routing Engines by Router .....	17
M7i Routing Engines .....	18
M10i Routing Engines .....	19
M40e Routing Engines .....	19
M120 Routing Engines .....	19
M320 Routing Engines .....	20
MX5, MX10, MX40, and MX80 Routing Engine .....	21
MX104 Routing Engines .....	21

MX240 Routing Engines . . . . .	21
MX480 Routing Engines . . . . .	22
MX960 Routing Engines . . . . .	23
MX2008 Routing Engines . . . . .	24
MX2010 Routing Engines . . . . .	25
MX2020 Supported Routing Engines . . . . .	25
MX10003 Routing Engines . . . . .	26
MX10008 Routing Engines . . . . .	26
PTX1000 Routing Engines . . . . .	27
PTX3000 Routing Engines . . . . .	27
PTX5000 Routing Engines . . . . .	27
PTX10008 and PTX10016 Routing Engines . . . . .	28
T320 Routing Engines . . . . .	29
T640 Routing Engines . . . . .	29
T1600 Routing Engines . . . . .	30
T4000 Routing Engines . . . . .	31
TX Matrix Routing Engines . . . . .	31
TX Matrix Plus Routing Engines . . . . .	32
TX Matrix Plus (with 3D SIBs) Routing Engines . . . . .	32
Interface Naming Overview . . . . .	33
Physical Part of an Interface Name . . . . .	33
Logical Part of an Interface Name . . . . .	39
Separators in an Interface Name . . . . .	39
Channel Part of an Interface Name . . . . .	39
Interface Naming for a Routing Matrix Based on a TX Matrix Router . . . . .	40
Interface Naming for a Routing Matrix Based on a TX Matrix Plus Router . . . . .	42
Chassis Interface Naming . . . . .	45
Examples: Interface Naming . . . . .	45
Interface Encapsulations Overview . . . . .	47
Interface Descriptors Overview . . . . .	58
Physical Part of an Interface Name . . . . .	59
Interface Names for ACX Series Universal Metro Routers . . . . .	59
Interface Names for M Series and T Series Routers . . . . .	60
MX Series Router Interface Names . . . . .	60
Interface Names for PTX Series Routers . . . . .	61
Displaying Interface Configurations Overview . . . . .	61
<b>Chapter 2</b>	
<b>Configuring Physical Interface Properties . . . . .</b>	<b>63</b>
Physical Interface Configuration Statements Overview . . . . .	64
Physical Interfaces Properties Statements List . . . . .	74
Configuring Interface Ranges . . . . .	90
Configuring Interface Ranges . . . . .	90
Expanding Interface Range Member and Member Range Statements . . . . .	94
Configuration Inheritance for Member Interfaces . . . . .	95
Member Interfaces Inheriting Configuration from Configuration Groups . . . . .	97
Interfaces Inheriting Common Configuration . . . . .	98
Configuring Inheritance Range Priorities . . . . .	98
Configuration Expansion Where Interface Range Is Used . . . . .	99
Specifying an Aggregated Interface . . . . .	100

Media MTU Overview . . . . .	100
Media MTU Sizes by Interface Type . . . . .	101
. . . . .	101
Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers . . . . .	102
Media MTU Sizes by Interface Type for M40e Routers . . . . .	103
Media MTU Sizes by Interface Type for M160 Routers . . . . .	104
Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers . . . . .	104
Media MTU Sizes by Interface Type for MX Series Routers . . . . .	105
Media MTU Sizes by Interface Type for T320 Routers . . . . .	107
Media MTU Sizes by Interface Type for T640 Platforms . . . . .	107
Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers . . . . .	108
Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers . . . . .	108
Configuring the Media MTU on ACX Series Routers . . . . .	109
Media MTU Overview . . . . .	109
How to Configure the Media MTU . . . . .	110
Encapsulation Overhead by Encapsulation Type . . . . .	111
Media MTU Sizes by Interface Type for ACX Series Routers . . . . .	112
Encapsulation Overhead by Interface Encapsulation Type . . . . .	112
Configuring Interface Description . . . . .	113
Configuring the Media MTU . . . . .	115
Configuring the Interface Speed . . . . .	116
Configuring the Interface Speed on Ethernet Interfaces . . . . .	116
Configuring Aggregated Ethernet Link Speed . . . . .	117
Configuring SONET/SDH Interface Speed . . . . .	120
Configuring the Link Characteristics . . . . .	121
Interface Alias Names Overview . . . . .	122
Example: Adding an Interface Alias Name . . . . .	123
Clock Source Overview . . . . .	127
Configuring the Clock Source . . . . .	128
Configuring Interface Encapsulation on Physical Interfaces . . . . .	129
Understanding Interface Encapsulation on Physical Interfaces . . . . .	129
Encapsulation Capabilities of Physical Interfaces . . . . .	129
Configuring the Encapsulation on a Physical Interface . . . . .	131
Displaying the Encapsulation on a Physical SONET/SDH Interface . . . . .	131
Configuring Interface Encapsulation on PTX Series Packet Transport Routers . . . . .	132
Configuring Keepalives . . . . .	134
Configuring the PPP Challenge Handshake Authentication Protocol . . . . .	136
PPP Challenge Handshake Authentication Protocol . . . . .	136
Configuring the PPP Challenge Handshake Authentication Protocol . . . . .	137
Displaying the Configured PPP Challenge Handshake Authentication Protocol . . . . .	138

Configuring the PPP Password Authentication Protocol On a Physical Interface . . . . .	139
Understanding PPP Password Authentication Protocol . . . . .	139
Configuring the PPP Password Authentication Protocol On a Physical Interface . . . . .	140
Configuring the PPP Password Authentication Protocol On a Logical Interface . . . . .	141
Configuring the PPP Authentication Protocol . . . . .	142
PPP Encapsulation on ACX Series Routers . . . . .	143
Configuring Interface Encapsulation on Physical Interfaces in ACX Series . . . . .	145
Configuring the Encapsulation on a Physical Interface . . . . .	145
Encapsulation Capabilities . . . . .	147
Example: Configuring the Encapsulation on a Physical Interface . . . . .	148
Configuring PPP Address and Control Field Compression . . . . .	149
Configuring the PPP Protocol Field Compression . . . . .	151
Monitoring a PPP Session . . . . .	152
Tracing Operations of the pppd Process . . . . .	153
Configuring the Router as a DCE with Frame Relay Encapsulation . . . . .	154
Receive and Transmit Leaky Bucket Properties Overview . . . . .	155
Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion . . . . .	156
Understanding Unidirectional Traffic Flow on Physical Interfaces . . . . .	157
Enabling Unidirectional Traffic Flow on Physical Interfaces . . . . .	158
Physical Interface Damping Overview . . . . .	159
Damping Overview for Shorter Physical Interface Transitions . . . . .	159
Damping Overview for Longer Physical Interface Transitions . . . . .	160
Damping Shorter Physical Interface Transitions . . . . .	165
Damping Longer Physical Interface Transitions . . . . .	166
Example: Configuring Physical Interface Damping . . . . .	167
Configuring Multiservice Physical Interface Properties . . . . .	170
Enabling or Disabling SNMP Notifications on Physical Interfaces . . . . .	171
Configuring Accounting for the Physical Interface . . . . .	171
Accounting Profiles Overview . . . . .	171
Configuring Accounting for the Physical Interface . . . . .	172
Displaying Accounting Profile for the Physical Interface . . . . .	173
Disabling a Physical Interface . . . . .	174
Disabling a Physical Interface . . . . .	174
Example: Disabling a Physical Interface . . . . .	175
Effect of Disabling Interfaces on T series PICs . . . . .	175
<b>Chapter 3</b>	
<b>Configuring Logical Interface Properties . . . . .</b>	<b>177</b>
Logical Interfaces Configuration Properties Overview . . . . .	177
Logical Interfaces Configuration Statements . . . . .	178
Logical Interfaces Statements List . . . . .	181
Specifying the Logical Interface Number . . . . .	188
Adding a Logical Unit Description to the Configuration . . . . .	188

Configuring the Interface Bandwidth . . . . .	189
Configuring Interface Encapsulation on Logical Interfaces . . . . .	190
Understanding Interface Encapsulation on Logical Interfaces . . . . .	190
Configuring the Encapsulation on a Logical Interface . . . . .	191
Displaying the Encapsulation on a Logical Interface . . . . .	191
Configuring Interface Encapsulation on PTX Series Packet Transport Routers . . . . .	192
Configuring a Point-to-Point Connection . . . . .	193
Configuring a Multipoint Connection . . . . .	193
Configuring the PPP Restart Timers . . . . .	193
Configuring the PPP Clear Loop Detected Timer . . . . .	194
Configuring the LCP Configure-Request Maximum Sent . . . . .	195
Configuring the NCP Configure-Request Maximum Sent . . . . .	195
Configuring Dynamic Profiles for PPP . . . . .	195
Configuring PPP CHAP Authentication . . . . .	196
Configuring the PPP Password Authentication Protocol On a Logical Interface . . . . .	196
Understanding PPP Password Authentication Protocol . . . . .	196
Configuring the PPP Password Authentication Protocol On a Logical Interface . . . . .	197
Configuring Accounting for the Logical Interface . . . . .	198
Accounting Profiles Overview . . . . .	198
Configuring Accounting for the Logical Interface . . . . .	199
Displaying Accounting Profile for the Logical Interface . . . . .	200
Enabling or Disabling SNMP Notifications on Logical Interfaces . . . . .	200
Disabling a Logical Interface . . . . .	201
Configuring Logical System Interface Properties . . . . .	201
<b>Chapter 4      Configuring Protocol Family and Interface Address Properties . . . . .</b>	<b>203</b>
Protocol Family Configuration and Interface Address Statements . . . . .	203
Configuring the Protocol Family . . . . .	206
Configuring the Interface Address . . . . .	207
Configuring Default, Primary, and Preferred Addresses and Interfaces . . . . .	209
Default, Primary, and Preferred Addresses and Interfaces . . . . .	209
Configuring the Primary Interface for the Router . . . . .	210
Configuring the Primary Address for an Interface . . . . .	210
Configuring the Preferred Address for an Interface . . . . .	211
Operational Behavior of Interfaces When the Same IPv4 Address Is Assigned to Them . . . . .	211
Configuring ICCP for MC-LAG . . . . .	214
Configuring IPCP Options for Interfaces with PPP Encapsulation . . . . .	216
Configuring an Unnumbered Interface . . . . .	218
Overview of Unnumbered Interfaces . . . . .	218
Configuring an Unnumbered Point-to-Point Interface . . . . .	218
Configuring an Unnumbered Ethernet or Demux Interface . . . . .	219

Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces . . . . .	220
Restrictions for Configuring Unnumbered Ethernet Interfaces . . . . .	221
Displaying the Unnumbered Ethernet Interface Configuration . . . . .	222
Displaying the Configured Preferred Source Address for an Unnumbered Ethernet Interface . . . . .	223
Displaying the Configuration for Unnumbered Ethernet Interface as the Next Hop for a Static Route . . . . .	224
Setting the Protocol MTU . . . . .	224
Disabling the Removal of Address and Control Bytes . . . . .	225
Disabling the Transmission of Redirect Messages on an Interface . . . . .	226
Applying Policers . . . . .	226
Overview of Applying Policers . . . . .	226
Applying Aggregate Policers . . . . .	227
Applying Aggregate Policers . . . . .	227
Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs . . . . .	229
Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs . . . . .	229
Configuring Hierarchical Policers . . . . .	231
Configuring a Single-Rate Two-Color Policer . . . . .	232
Configuring a Single-Rate Color-Blind Policer . . . . .	233
Configuring a Two-Rate Tricolor Marker Policer . . . . .	233
Applying a Filter to an Interface . . . . .	235
Defining Interface Groups in Firewall Filters . . . . .	235
Filter-Based Forwarding on the Output Interface . . . . .	236
Applying a Filter to an Interface . . . . .	236
Guidelines for Configuring Unicast RPF on ACX Series Routers . . . . .	240
Configuring Unicast RPF . . . . .	241
Configuring Unicast RPF . . . . .	242
Unicast RPF and Default Route . . . . .	242
Unicast RPF Behavior with a Default Route . . . . .	243
Unicast RPF Behavior Without a Default Route . . . . .	243
Unicast RPF with Routing Asymmetry . . . . .	244
Configuring Unicast RPF Strict Mode . . . . .	244
Configuring Unicast RPF Loose Mode . . . . .	246
Configuring Unicast RPF Loose Mode with Ability to Discard Packets . . . . .	247
Configuring Unicast RPF on a VPN . . . . .	249
Configuring Unicast RPF . . . . .	250
Verifying Unicast RPF Status . . . . .	250
Example: Configuring Unicast Reverse-Path-Forwarding Check . . . . .	253
Understanding How Unicast Reverse Path Forwarding Prevents Spoofed IP Packet Forwarding . . . . .	253
Example: Configuring Unicast Reverse-Path-Forwarding Checking to Prevent DoS and DDoS Attacks . . . . .	254

	Enabling Source Class and Destination Class Usage . . . . .	262
	Source Class and Destination Class Usage . . . . .	262
	Enabling Source Class and Destination Class Usage . . . . .	266
	Understanding Targeted Broadcast . . . . .	271
	Configuring Targeted Broadcast . . . . .	272
	Configuring Targeted Broadcast and Its Options . . . . .	272
	Display Targeted Broadcast Configuration Options . . . . .	273
	Forward IP Packets On the Egress Interface and To the Routing Engine . . . . .	273
	Forward IP Packets On the Egress Interface Only . . . . .	274
<b>Chapter 5</b>	<b>Configuring Circuit and Translational Cross-Connects . . . . .</b>	<b>275</b>
	Circuit and Translational Cross-Connects Overview . . . . .	275
	Defining the Encapsulation for Switching Cross-Connects . . . . .	277
	Defining the Encapsulation for Switching Cross-Connects . . . . .	277
	Configuring PPP or Cisco HDLC Circuits . . . . .	278
	Configuring ATM Circuits . . . . .	278
	Configuring Frame Relay Circuits . . . . .	278
	Configuring Ethernet CCC Circuits . . . . .	280
	Configuring Ethernet VLAN Circuits . . . . .	280
	Defining the Connection for Switching Cross-Connects . . . . .	281
	Configuring MPLS for Switching Cross-Connects . . . . .	281
	Configuring IS-IS or MPLS Traffic for TCC Interfaces . . . . .	281
	Configuring ATM-to-Ethernet Interworking . . . . .	282
	ATM-to-Ethernet Interworking . . . . .	282
	Enabling ATM-to-Ethernet Interworking . . . . .	283
	Configuring the Ethernet Interface . . . . .	283
	Configuring Ethernet Encapsulation . . . . .	284
	Configuring the Outer VLAN Identifier . . . . .	284
	Configuring the Inner VLAN Identifier Range . . . . .	284
	Configuring the Physical Interface VPI . . . . .	284
	Configuring the ATM Logical Interface . . . . .	285
	Configuring the Protocol Family . . . . .	285
	Configuring the Logical Interface VPI . . . . .	285
	Configuring the Logical Interface VCI . . . . .	286
	ATM-To-Ethernet Interworking on ATM MICs . . . . .	286
	Limitations . . . . .	287
	Example: Configuring a CCC over Frame Relay Encapsulated Interface . . . . .	287
	Example: Configuring a TCC . . . . .	288
	Example: Configuring CCC over Aggregated Ethernet . . . . .	290
	Example: Configuring a Remote LSP CCC over Aggregated Ethernet . . . . .	291
	Example: Configuring ATM-to-Ethernet Interworking . . . . .	294
	Example: Configuring ATM-to-Ethernet Interworking on ATM MIC . . . . .	295
	Verifying ATM-to-Ethernet Interworking Configuration on ATM MICs . . . . .	300
	Verifying That The ATM Interface on Router1 Is Configured Correctly . . . . .	301
	Verifying The Status of the MIC on Router1 . . . . .	301
	Verify That OSPF Configuration on Router1 Is Accurate . . . . .	301
	Verify That LDP Configuration on Router1 Is Accurate . . . . .	302

	Verify That Layer 2 Virtual Circuit Session Configuration on Router1 Is Accurate . . . . .	302
	Verifying That the Ethernet Interface on Router2 Is Configured Correctly . .	303
	Verifying the Status of the MIC on Router2 . . . . .	303
	Verify That OSPF Configuration on Router2 Is Accurate . . . . .	303
	Verify That LDP Configuration on Router2 Is Accurate . . . . .	304
	Verify That Layer 2 Virtual Circuit Session Configuration on Router2 Is Accurate . . . . .	304
<b>Part 2</b>	<b>Special Router Interfaces</b>	
<b>Chapter 6</b>	<b>Configuring Discard Interfaces . . . . .</b>	<b>309</b>
	Discard Interfaces Overview . . . . .	309
	Understanding Discard Interfaces . . . . .	309
	Guidelines to Follow When Configuring a Discard Interface . . . . .	309
	Configuring Discard Interfaces . . . . .	310
	Configure a Discard Interface . . . . .	310
	Configure an Input Policy . . . . .	311
	Configure an Output Policy . . . . .	312
<b>Chapter 7</b>	<b>Configuring IP Demultiplexing Interfaces . . . . .</b>	<b>313</b>
	Demultiplexing Interface Overview . . . . .	313
	IP Demux Interface Overview . . . . .	313
	VLAN Demux Interface Overview . . . . .	314
	Guidelines to Remember When Configuring A Demux Interface . . . . .	314
	Points to Remember When Configuring an IP Demux Interface . . . . .	314
	Points to Remember When Configuring a VLAN Demux Interface . . . .	315
	MAC Address Validation on Static Demux Interfaces . . . . .	315
	Loose . . . . .	315
	Strict . . . . .	316
	Configuring an IP Demultiplexing Interface . . . . .	316
	Configuring an IP Demux Underlying Interface . . . . .	316
	Configuring the IP Demux Interface . . . . .	318
	Configuring MAC Address Validation on Static IP Demux Interfaces . . . .	320
	Configuring a VLAN Demultiplexing Interface . . . . .	320
	Configuring a VLAN Demux Underlying Interface . . . . .	321
	Configuring the VLAN Demux Interface . . . . .	322
	Configuring MAC Address Validation on Static VLAN Demux Interfaces . .	324
	Verifying a Demux Interface Configuration . . . . .	325
<b>Chapter 8</b>	<b>Configuring the Loopback Interface . . . . .</b>	<b>327</b>
	Understanding the Loopback Interface . . . . .	327
	Configuring the Loopback Interface . . . . .	328
	Configuring the Loopback Interface . . . . .	328
	Example: Configuring Two Addresses on the Loopback Interface with Host Routes . . . . .	329
	Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes . . . . .	329
	Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes . . . . .	330

<b>Part 3</b>	<b>Serial Interfaces</b>	
<b>Chapter 9</b>	<b>Serial Interfaces Overview</b>	<b>335</b>
	Serial Interfaces Overview	335
<b>Chapter 10</b>	<b>Configuring Serial Interfaces</b>	<b>337</b>
	Example: Physical Interface Configuration Statements for Serial Interfaces	337
	Configuring the Serial Line Protocol	338
	Configuring the Serial Line Protocol	338
	Serial Interface Default Settings	338
	Serial Interface Default Settings	339
	Invalid Serial Interface Statements	340
	Configuring the Serial Clocking Mode	342
	Configuring the Serial Clocking Mode	342
	Inverting the Serial Interface Transmit Clock	343
	Configuring the DTE Clock Rate	343
	Configuring the Serial Signal Handling	344
	Configuring the Serial DTR Circuit	347
	Configuring Serial Signal Polarities	347
	Configuring Serial Loopback Capability	348
	Configuring Serial Line Encoding	350
	Specifying a USB Modem Interface on J Series Routers	350
<b>Part 4</b>	<b>Monitoring and Troubleshooting Interfaces</b>	
<b>Chapter 11</b>	<b>Monitoring Interfaces</b>	<b>355</b>
	Tracing Interface Operations Overview	355
	Tracing Operations of an Individual Router Interface	355
	Tracing Operations of the Interface Process	356
	Monitoring a PPP Session	357
	Tracing Operations of the pppd Process	358
<b>Chapter 12</b>	<b>Troubleshooting Interfaces</b>	<b>361</b>
	Configuring Interface Diagnostics Tools to Test the Physical Layer	
	Connections	361
	Configuring Loopback Testing	361
	Configuring BERT Testing	363
	Starting and Stopping a BERT Test	366
	Troubleshooting: em0 Management Interface Link is Down	367
	Troubleshooting: fxp0 Management Interface Link is Down	369
	Troubleshooting: Faulty Ethernet Physical Interface on an M Series, an MX Series, or a T Series Router	370
	Checking the Cable Connection	371
	Checking the Physical Link Status of the Interface	372
	Checking the Interface Statistics in Detail	373
	Performing the Loopback Diagnostic Test	375
	Checking Other Possibilities	377
	To Enable a Physical Interface	378
	Time Domain Reflectometry on ACX Series Routers Overview	378
	Diagnosing a Faulty Twisted-Pair Cable on ACX Series Routers	381

<b>Part 5</b>	<b>Configuration Statements and Operational Commands</b>	
<b>Chapter 13</b>	<b>Configuration Statements</b>	<b>387</b>
	802.3ad	406
	accept	407
	accept-source-mac	409
	access-concentrator	411
	access-profile	412
	accounting	413
	accounting-profile	414
	acfc	415
	acknowledge-retries	416
	acknowledge-timer	417
	action (OAM)	417
	action (Policer)	418
	action-profile (Applying to CFM)	418
	action-profile (Defining for CFM)	419
	action-profile	420
	action-red-differential-delay	421
	activation-delay	422
	activation-priority	423
	address	424
	advertise-interval	426
	age	427
	agent-specifier	428
	aggregate (Gigabit Ethernet CoS Policer)	429
	aggregate (Hierarchical Policer)	430
	aggregate (SONET/SDH)	431
	aggregate-ports	431
	aggregated-ether-options	432
	aggregated-sonet-options	433
	alarm (optics-options)	434
	alias (Interfaces)	435
	allow-any-vci	435
	allow-fragmentation	436
	allow-remote-loopback	437
	annex	437
	apply-action-profile	438
	aps	439
	arp (Interfaces)	440
	asynchronous-notification	442
	atm-encapsulation	443
	atm-options	444
	atm-scheduler-map	445
	authentication	446
	authentication-key	447
	authentication-profile-name	447
	authenticator	448
	auto-configure	449

auto-discovery . . . . .	450
auto-negotiation . . . . .	451
backup-destination . . . . .	453
backup-interface . . . . .	453
backup-options . . . . .	454
bandwidth (Interfaces) . . . . .	455
bandwidth-limit (Hierarchical Policer) . . . . .	456
bandwidth-limit (Policer for Gigabit Ethernet Interfaces) . . . . .	457
bearer-bandwidth-limit . . . . .	458
bert-algorithm . . . . .	459
bert-error-rate . . . . .	461
bert-period . . . . .	463
bridge-domain . . . . .	464
broadcast . . . . .	465
buildout (E3 or T3 over ATM Interfaces) . . . . .	466
buildout (T1 Interfaces) . . . . .	467
bundle . . . . .	468
burst-size-limit (Hierarchical Policer) . . . . .	469
burst-size-limit (Policer for Gigabit Ethernet Interfaces) . . . . .	470
byte-encoding . . . . .	471
bytes . . . . .	472
calculation-weight . . . . .	473
callback . . . . .	474
callback-wait-period . . . . .	475
caller . . . . .	476
calling-number . . . . .	477
cbit-parity . . . . .	477
cbr . . . . .	478
cell-bundle-size . . . . .	479
chap . . . . .	480
chap-secret . . . . .	481
circuit-type . . . . .	482
cisco-interoperability . . . . .	482
classifier . . . . .	483
clear-dont-fragment-bit . . . . .	484
clock-rate . . . . .	485
clocking . . . . .	486
clocking-mode . . . . .	487
community (Policy Options) . . . . .	488
compatibility-mode . . . . .	491
compression (PPP Properties) . . . . .	492
compression (Voice Services) . . . . .	493
compression-device . . . . .	493
connections . . . . .	494
connection-protection-tlv . . . . .	494
connectivity-fault-management . . . . .	495
container-devices . . . . .	497
container-list . . . . .	498
container-options . . . . .	499

container-type . . . . .	500
continuity-check . . . . .	501
control-channel . . . . .	502
control-polarity . . . . .	503
control-signal . . . . .	503
copy-tos-to-outer-ip-header . . . . .	504
core-dump . . . . .	504
crc-major-alarm-threshold . . . . .	505
crc-minor-alarm-threshold . . . . .	506
cts . . . . .	507
cts-polarity . . . . .	507
cycle-time . . . . .	508
damping (Interfaces) . . . . .	509
data-channel . . . . .	511
data-tlv-size . . . . .	512
dcd . . . . .	513
dcd-polarity . . . . .	513
dce . . . . .	514
deactivation-delay . . . . .	514
dce-options . . . . .	515
default-actions . . . . .	516
default-chap-secret . . . . .	517
default-pap-password . . . . .	518
delimiter . . . . .	518
demux-destination (Underlying Interface) . . . . .	519
demux-destination (Demux Interface) . . . . .	520
demux-options (Static Interface) . . . . .	521
demux-source (Demux Interface) . . . . .	521
demux-source (Underlying Interface) . . . . .	522
demux0 (Static Interface) . . . . .	523
demux0 (Dynamic Interface) . . . . .	524
description (Interfaces) . . . . .	526
destination (IPCP) . . . . .	527
destination (Routing Instance) . . . . .	528
destination (Tunnels) . . . . .	529
destination-class-usage . . . . .	530
destination-profile . . . . .	531
dial-options . . . . .	532
dial-string . . . . .	533
dialer . . . . .	533
dialer-options . . . . .	534
dialin . . . . .	535
direction . . . . .	536
disable (Interface) . . . . .	537
disable (Link Protection) . . . . .	538
disable-mlppp-inner-ppp-pfc . . . . .	539
dlci . . . . .	540
do-not-fragment . . . . .	541
domain-name . . . . .	542

dot1x .....	543
down-count .....	544
drop (PPPoE Service Name Tables) .....	545
drop-timeout .....	546
ds0-options .....	547
dsl-options .....	548
dsr .....	549
dsr-polarity .....	549
dte-options .....	550
dtr .....	551
dtr-circuit .....	552
dtr-polarity .....	552
dump-on-flow-control .....	553
dynamic-call-admission-control .....	554
dynamic-profile (PPP) .....	555
dynamic-profile (PPPoE Service Name Tables) .....	556
dynamic-profile (Stacked VLAN) .....	557
dynamic-profile (VLAN) .....	558
dynamic-profiles .....	559
e1-options .....	568
e3-options .....	569
east-interface .....	570
egress-policer-overhead .....	571
encapsulation (Container Interface) .....	572
encapsulation (Logical Interface) .....	573
encapsulation .....	577
encoding .....	584
epd-threshold (Logical Interface) .....	585
epd-threshold (Physical Interface) .....	586
es-options .....	587
ethernet (Protocols OAM) .....	588
ethernet-policer-profile .....	594
ethernet-ring .....	595
ethernet-switch-profile .....	596
eui-64 .....	598
evcs .....	599
event (LFM) .....	600
event-thresholds .....	601
fast-aps-switch .....	602
f-max-period .....	603
facility-override .....	603
failover-delay .....	604
family (Dynamic Standard Interface) .....	605
family .....	607
fastether-options .....	612
fcs .....	613
feac-loop-respond .....	614
fec (gigether) .....	615
filter .....	616

filter (Applying to an Interface) . . . . .	617
flexible-vlan-tagging . . . . .	618
flow-control . . . . .	619
flow-control-options . . . . .	620
force . . . . .	621
forward-and-send-to-re . . . . .	622
forwarding-class (ATM2 IQ Scheduler Maps) . . . . .	623
forwarding-class (Gigabit Ethernet IQ Classifier) . . . . .	624
forward-only . . . . .	625
fragment-threshold . . . . .	625
frame-error . . . . .	626
frame-period . . . . .	627
frame-period-summary . . . . .	628
framing (E1, E3, and T1 Interfaces) . . . . .	629
framing (10-Gigabit Ethernet Interfaces) . . . . .	630
framing (SONET and SDH Interfaces) . . . . .	631
gether-options . . . . .	632
gratuitous-arp-reply . . . . .	633
guard-interval . . . . .	634
hardware-assisted-timestamping . . . . .	635
high-plp-threshold . . . . .	636
hello-timer . . . . .	637
hierarchical-policer . . . . .	638
hierarchical-scheduler (Subscriber Interfaces on MX Series Routers) . . . . .	639
high-plp-max-threshold . . . . .	640
high-plp-threshold . . . . .	641
hold-interval (OAM) . . . . .	642
hold-interval (Protection Group) . . . . .	643
hold-time (APS) . . . . .	643
hold-time (Physical Interface) . . . . .	644
hold-time (SONET/SDH Defect Triggers) . . . . .	646
host (Interfaces) . . . . .	647
host-prefix-only . . . . .	648
iccp . . . . .	649
idle-cycle-flag . . . . .	650
idle-timeout . . . . .	651
ieee802.1p . . . . .	652
if-exceeding (Hierarchical Policer) . . . . .	653
if-exceeding-pps (Hierarchical Policer) . . . . .	654
igmp-snooping . . . . .	655
ignore . . . . .	658
ignore-all . . . . .	659
ignore-l3-incompletes . . . . .	659
ilmi . . . . .	660
ima-group-options . . . . .	661
ima-link-options . . . . .	663
inactivity-timeout . . . . .	663
incoming-map . . . . .	664
indication . . . . .	665

indication-polarity	665
ingress-policer-overhead	666
ingress-rate-limit	668
init-command-string	669
initial-route-check	670
inner-tag-protocol-id	671
inner-vlan-id	672
inner-vlan-id-range	673
input	674
input-list	675
input-policer	676
input-priority-map	677
input-three-color	678
input-vlan-map (Aggregated Ethernet)	679
input-vlan-map	680
instance	681
interface (Hierarchical CoS Schedulers)	681
interface (IEEE 802.1x)	682
interface (IEEE 802.1ag OAM Connectivity-Fault Management)	683
interface (OAM Link-Fault Management)	684
interface (Port Mirroring)	685
interface-down	686
interface-name	686
interface-none	687
interface-range	688
interface-transmit-statistics	689
interface-set (Ethernet Interfaces)	689
interface-set (IP Demux Interfaces)	690
interface-shared-with	691
interface-status-tlv	692
interface-switch	693
interface-type (Interfaces)	694
interfaces	696
interfaces (Static and Dynamic Subscribers)	697
interleave-fragments	701
interval	702
inverse-arp	703
invert-data	704
ipsec-sa	705
isdn-options	706
iteration-count	707
iteration-period	708
keep-address-and-control	709
keepalives	710
key	711
l2tp-interface-id	712
lACP (Protocols)	713
lACP (802.3ad)	714
lACP (Aggregated Ethernet)	715

layer2-policer	718
lcp-max-conf-req	719
lcp-restart-timer	720
level	721
line-encoding	722
line-protocol	723
line-rate	724
linear-red-profile	725
linear-red-profiles	726
link-adjacency-loss	726
link-discovery	727
link-down	727
link-event-rate	728
link-fault-management	729
link-layer-overhead	730
link-mode	731
link-protection	733
link-speed (Aggregated Ethernet)	734
link-speed (Aggregated SONET/SDH)	736
linktrace	737
lmi (Frame Relay)	738
lmi (Ethernet OAM)	740
lmi-type	741
load-interval	742
load-threshold	743
local-name	744
local-password	745
lockout	745
log-prefix (Interfaces)	746
logical-interface-fpc-redundancy (Aggregated Ethernet Subscriber Interfaces)	746
logical-interface-policer	747
logical-systems	749
long-buildout	750
loop-timing	751
loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3)	752
loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)	754
loopback (Serial)	755
loopback-clear-timer	756
loss-priority	757
loss-threshold	758
low-plp-max-threshold	759
low-plp-threshold	760
lowest-priority-defect	761
lsq-failure-options	762
mac	763
mac-address (Accept Source Mac)	764
mac-address (VLAN and Stacked VLAN Interfaces)	764
mac-learn-enable	765

mac-validate .....	766
maintenance-association .....	767
maintenance-domain .....	768
master-only .....	769
maximum-contexts .....	770
maximum-requests .....	771
maximum-vcs .....	772
mc-ae .....	773
member-interface-speed .....	776
member-interface-type .....	776
mep .....	777
minimum-links .....	778
mip-half-function .....	779
mlfr-uni-nni-bundle-options .....	780
mode (Dynamic Profiles) .....	781
mode (Interfaces) .....	782
modem-options .....	782
monitor-session .....	783
mpls (Interfaces) .....	784
mrru .....	785
mtu .....	786
multi-chassis-protection .....	790
multicast-dlci .....	791
multicast-only .....	792
multicast-statistics .....	792
multicast-vci .....	793
multilink-max-classes .....	794
multipoint .....	794
multipoint-destination .....	795
multiservice-options .....	796
n391 .....	797
n392 .....	798
n393 .....	799
name-format .....	800
native-vlan-id .....	801
ncp-max-conf-req .....	803
ncp-restart-timer .....	804
nd6-stale-time .....	805
negotiate-address .....	806
negotiation-options .....	806
neighbor (Automatic Protection Switching for SONET/SDH) .....	807
no-allow-link-events .....	807
no-aggregate-delegate-processing .....	808
asynchronous-notification .....	809
no-auto-mdix .....	810
auto-negotiation .....	811
cbit-parity .....	813
core-dump .....	814
feac-loop-respond .....	815

flow-control	816
gratuitous-arp-reply	817
no-gratuitous-arp-request	817
no-keepalives	818
long-buildout	819
loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)	820
mac-learn-enable	821
no-partition	822
payload-scrambler	824
no-pre-classifier	825
no-redirects	826
source-filtering	827
syslog (Monitoring)	828
no-termination-request	828
translate-discard-eligible	829
translate-fecn-and-becn	829
unframed	830
z0-increment	830
node-id	831
non-revertive (Interfaces)	831
oam	832
oam-liveness	835
oam-period	836
oc-slice	837
open-timeout	838
operating-mode	839
optics-options	840
option-82	841
otn-options	842
output	843
output-list	844
output-policer	845
output-priority-map	846
output-three-color	847
output-vlan-map (Aggregated Ethernet)	848
output-vlan-map	849
overflow (Receive Bucket)	850
overflow (Transmit Bucket)	850
override	851
pado-advertise	852
paired-group	852
pap	853
pap-password	854
partition	855
passive (CHAP)	856
passive (PAP)	857
passive-monitor-mode	858
password (Interfaces)	859
path-database-size	859

path-trace	860
payload-scrambler	861
payload-size	862
pdu-interval	863
pdu-threshold	864
peer	865
peer-unit	866
per-unit-scheduler	867
performance-monitoring	869
periodic	870
pfc	871
pic-type	871
plp-to-clp	872
plp1	873
point-to-point	874
policer (CFM Firewall)	874
policer (CFM Global)	875
policer (CFM Session)	876
policer (CoS)	877
policer (Interface)	878
policer (MAC)	879
policy-statement	880
pool	884
pop	885
pop-all-labels	886
pop-pop	887
pop-swap	888
port	889
port-priority	890
port-status-tlv	891
post-service-filter	891
ppp-options	892
pppoe-options	894
pppoe-underlying-options (Static and Dynamic Subscribers)	895
preferred	896
preferred-source-address	897
preferred-source-address	898
premium (Hierarchical Policer)	899
premium (Output Priority Map)	900
premium (Policer)	900
preserve-interface	901
primary (Address on Interface)	902
primary (Interface for Router)	903
primary (AS PIC or Multiservices PIC Interfaces)	904
priority (OAM Connectivity-Fault Management)	904
priority (Schedulers)	905
promiscuous-mode	906
protect-circuit	907
protection-group	908

protocol-down	910
protocols	910
proxy	911
proxy-arp	912
push	913
push-push	914
queue-depth	915
queue-length	916
queues	917
quiet-period	917
radius-realm	918
ranges (Dynamic Stacked VLAN)	918
ranges (Dynamic VLAN)	919
rate	919
rate	920
rdi	920
reassemble-packets	921
reauthentication	921
receive-bucket	922
receive-options-packets	923
receive-ttl-exceeded	923
red-differential-delay	924
redial-delay	925
redundancy-options	926
remote	927
remote-loopback	928
remote-loopback-respond	929
remote-mep	930
remove-when-no-subscribers	931
request	931
required-depth	932
restore-interval	933
retries	934
revert-time (Interfaces)	935
revertive	936
rfc-2615	936
ring-protection-link-end	937
ring-protection-link-owner	937
routing-instance	938
routing-instance (PPPoE Service Name Tables)	939
rpf-check (Dynamic Profiles)	940
rpf-check	941
rpf-loose-mode-discard	942
rtp	943
rts	944
rts-polarity	944
rtvbr	945
sa-multicast (100-Gigabit Ethernet)	947
sampling (Interfaces)	948

satop-options	949
shared-interface	950
scheduler-maps (For ATM2 IQ Interfaces)	951
schedulers	952
secondary	952
send-critical-event	953
serial-options	954
server	955
server-timeout	956
service (Logical Interfaces)	957
service (PPPoE)	958
service-domain	959
service-filter (Interfaces)	960
service-name-table	961
service-name-tables	962
service-set	963
services (Priority Level)	964
services-options	965
shaping	966
shdsl-options	967
short-name-format	968
short-sequence	969
sla-iterator-profile	970
sla-iterator-profiles	971
snr-margin	972
snext	973
sonet-options	974
source	976
source-address-filter	977
source-class-usage	978
source-filtering	979
speed (Ethernet)	980
speed (MX Series DPC)	984
speed (SONET/SDH)	985
spid1	985
spid2	986
stacked-vlan-ranges	987
stacked-vlan-tagging	988
start-end-flag	989
static-interface	990
static-tei-val	991
supplicant	992
supplicant-timeout	993
swap	994
swap-push	995
swap-swap	996
switch-options	996
switch-port	997
switch-type	998

switching-mode	999
symbol-period	1000
syslog (Interfaces)	1001
syslog (Monitoring)	1001
syslog (OAM Action)	1002
system-priority	1003
t1-options	1004
t310	1005
t391	1006
t392	1007
t3-options	1008
tag-protocol-id (TPIDs Expected to Be Sent or Received)	1009
tag-protocol-id (TPID to Rewrite)	1010
targeted-broadcast	1011
targeted-distribution (Static Interfaces over Aggregated Ethernet)	1012
tei-option	1013
terminate (PPPoE Service Name Tables)	1014
then	1015
threshold	1016
timeslots	1017
tm	1018
tm-polarity	1019
traceoptions (Individual Interfaces)	1020
traceoptions (Individual Interfaces)	1027
traceoptions (LACP)	1034
traceoptions (PPP Process)	1036
traceoptions (PPPoE)	1039
translate-discard-eligible	1041
translate-fecn-and-becn	1042
translate-plp-control-word-de	1042
transmit-bucket	1043
transmit-clock	1043
transmit-period	1044
transmit-weight (ATM2 IQ CoS Forwarding Class)	1045
transmit-weight (ATM2 IQ Virtual Circuit)	1046
traps	1047
trigger	1048
trigger-link-failure	1049
trunk-bandwidth	1050
trunk-id	1051
ttl	1051
tunnel	1052
underlying-interface	1053
unframed	1054
unidirectional	1054
unit (Dynamic Profiles Standard Interface)	1055
unit	1059
unnumbered-address (Demux)	1066
unnumbered-address (Dynamic Profiles)	1067

unnumbered-address (Ethernet) .....	1069
unnumbered-address (PPP) .....	1070
up-count .....	1071
user-prefix .....	1072
username-include (Interfaces) .....	1073
vbr .....	1075
vc-cos-mode .....	1076
vci .....	1077
vci-range .....	1078
virtual-switch .....	1078
vlan-id (Logical Port in Bridge Domain) .....	1079
vlan-id (Outer VLAN ID) .....	1080
vlan-id (VLAN ID to Be Bound to a Logical Interface) .....	1081
native-vlan-id .....	1082
vlan-id-list (Ethernet VLAN Circuit) .....	1085
vlan-id-list (Interface in Bridge Domain) .....	1087
vlan-id-range .....	1088
vlan-ranges .....	1089
vlan-rewrite .....	1090
vlan-rule (100-Gigabit Ethernet Type 4 PIC with CFP) .....	1091
vlan-steering (100-Gigabit Ethernet Type 4 PIC with CFP) .....	1092
vlan-tagging .....	1093
vlan-tags (Dual-Tagged Logical Interface) .....	1095
vlan-tags (Stacked VLAN Tags) .....	1097
vlan-tags-outer .....	1098
vlan-vci-tagging .....	1099
vpi (ATM CCC Cell-Relay Promiscuous Mode) .....	1099
vpi (Define Virtual Path) .....	1100
vpi (Logical Interface and Interworking) .....	1101
vtmapping .....	1102
warning .....	1103
watch-list .....	1104
wavelength .....	1105
west-interface .....	1109
working-circuit .....	1110
yellow-differential-delay .....	1110
z0-increment .....	1111
<b>Chapter 14</b>	
<b>Interface Operational Commands .....</b>	<b>1113</b>
Common Output Fields Description .....	1114
Damping Field .....	1114
Destination Class Field .....	1114
Enabled Field .....	1114
Filters Field .....	1115
Flags Fields .....	1115
Addresses, Flags Field .....	1115
Device Flags Field .....	1116
Family Flags Field .....	1116
Interface Flags Field .....	1117

Link Flags Field . . . . .	1118
Logical Interface Flags Field . . . . .	1118
Label-Switched Interface Traffic Statistics Field . . . . .	1119
Policer Field . . . . .	1120
Protocol Field . . . . .	1120
RPF Failures Field . . . . .	1121
Source Class Field . . . . .	1121
Improvements to Interface Transmit Statistics Reporting . . . . .	1121
show interfaces . . . . .	1123
show interfaces (ATM) . . . . .	1202
show interfaces (Channelized DS3-to-DS0) . . . . .	1237
show interfaces (Channelized DS3-to-DS1) . . . . .	1248
show interfaces (Channelized E1 IQ) . . . . .	1251
show interfaces (Channelized E1) . . . . .	1255
show interfaces (Channelized OC12 IQ and IQE) . . . . .	1266
show interfaces (Channelized OC12) . . . . .	1270
show interfaces (Channelized OC3 IQ and IQE) . . . . .	1274
show interfaces (Channelized STM1 IQ) . . . . .	1293
show interfaces (Channelized STM1) . . . . .	1296
show interfaces (Channelized T1 IQ) . . . . .	1311
show interfaces (Channelized T3 IQ) . . . . .	1323
show interfaces (Discard) . . . . .	1325
show interfaces (Fast Ethernet) . . . . .	1330
show interfaces . . . . .	1347
show interfaces (M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet) . . . . .	1426
show interfaces (PPPoE) . . . . .	1442
show interfaces (PTX Series Packet Transport Routers) . . . . .	1452
show interfaces (SONET/SDH) . . . . .	1466
show interfaces (Serial) . . . . .	1494
show interfaces (T1, E1, or DS) . . . . .	1507
show interfaces (T3 or E3) . . . . .	1532
show interfaces demux0 (Demux Interfaces) . . . . .	1549
show interfaces extensive . . . . .	1559
show interfaces lsi (Label-Switched Interface) . . . . .	1603
show interfaces media . . . . .	1606
show interfaces terse . . . . .	1609
<b>Chapter 15</b>	
<b>ANCP Operational Commands . . . . .</b>	<b>1613</b>
clear ancp neighbor . . . . .	1614
clear ancp statistics . . . . .	1616
clear ancp subscriber . . . . .	1618
request ancp oam interface . . . . .	1620
request ancp oam neighbor . . . . .	1621
show ancp cos . . . . .	1623
show ancp neighbor . . . . .	1628
show ancp statistics . . . . .	1636
show ancp subscriber . . . . .	1641
show ancp summary . . . . .	1647

	show ancp summary neighbor . . . . .	1649
	show ancp summary subscriber . . . . .	1651
<b>Chapter 16</b>	<b>BFD Operational Commands . . . . .</b>	<b>1653</b>
	clear bfd adaptation . . . . .	1654
	clear bfd session . . . . .	1655
	show bfd session . . . . .	1656
<b>Chapter 17</b>	<b>BGP Operational Commands . . . . .</b>	<b>1667</b>
	clear bgp damping . . . . .	1668
	clear bgp neighbor . . . . .	1669
	clear bgp table . . . . .	1672
	show bgp bmp . . . . .	1674
	show bgp group . . . . .	1676
	show bgp group traffic-statistics . . . . .	1684
	show bgp neighbor . . . . .	1687
	show bgp replication . . . . .	1705
	show bgp summary . . . . .	1708
	show policy damping . . . . .	1714
<b>Chapter 18</b>	<b>ES-IS Operational Commands . . . . .</b>	<b>1717</b>
	clear esis adjacency . . . . .	1718
	clear esis statistics . . . . .	1719
	show esis adjacency . . . . .	1720
	show esis interface . . . . .	1723
	show esis statistics . . . . .	1725
<b>Chapter 19</b>	<b>IP Multicast Operational Commands . . . . .</b>	<b>1727</b>
	clear amt statistics . . . . .	1730
	clear amt tunnel . . . . .	1731
	clear igmp membership . . . . .	1733
	clear igmp snooping membership . . . . .	1736
	clear igmp snooping statistics . . . . .	1738
	clear igmp statistics . . . . .	1739
	clear mld membership . . . . .	1741
	clear mld statistics . . . . .	1742
	clear msdp cache . . . . .	1743
	clear msdp statistics . . . . .	1744
	clear multicast bandwidth-admission . . . . .	1745
	clear multicast forwarding-cache . . . . .	1747
	clear multicast scope . . . . .	1748
	clear multicast sessions . . . . .	1750
	clear multicast snooping statistics . . . . .	1751
	clear multicast statistics . . . . .	1752
	clear pim join . . . . .	1754
	clear pim join-distribution . . . . .	1756
	clear pim register . . . . .	1758
	clear pim snooping join . . . . .	1760
	clear pim snooping statistics . . . . .	1762
	clear pim statistics . . . . .	1764

request pim multicast-tunnel rebalance .....	1767
show amt statistics .....	1768
show amt summary .....	1771
show amt tunnel .....	1773
show dvmrp interfaces .....	1777
show dvmrp neighbors .....	1780
show dvmrp prefix .....	1782
show dvmrp prunes .....	1785
show igmp group .....	1787
show igmp interface .....	1791
show igmp snooping interface .....	1795
show igmp snooping membership .....	1801
show igmp snooping statistics .....	1806
show igmp statistics .....	1811
show mld group .....	1814
show mld interface .....	1818
show mld statistics .....	1822
show msdp .....	1825
show msdp source .....	1828
show msdp source-active .....	1830
show msdp statistics .....	1833
show multicast backup-pe-groups .....	1837
show multicast flow-map .....	1839
show multicast forwarding-cache statistics .....	1841
show multicast interface .....	1843
show multicast mrinfo .....	1846
show multicast next-hops .....	1848
show multicast pim-to-igmp-proxy .....	1852
show multicast pim-to-mld-proxy .....	1854
show multicast route .....	1856
show multicast rpf .....	1867
show multicast scope .....	1871
show multicast snooping next-hops .....	1873
show multicast sessions .....	1876
show multicast snooping route .....	1880
show multicast statistics .....	1884
show multicast usage .....	1889
show pim bootstrap .....	1892
show pim interfaces .....	1894
show pim join .....	1897
show pim mdt .....	1912
show pim mdt data-mdt-joins .....	1916
show pim mdt data-mdt-limit .....	1918
show pim neighbors .....	1920
show pim rps .....	1924
show pim snooping interfaces .....	1932
show pim snooping join .....	1935
show pim snooping neighbors .....	1939
show pim snooping statistics .....	1944

	show pim source . . . . .	1949
	show pim statistics . . . . .	1952
	show sap listen . . . . .	1965
	test msdp . . . . .	1967
<b>Chapter 20</b>	<b>IPv6 Operational Commands . . . . .</b>	<b>1969</b>
	clear ipv6 neighbors . . . . .	1970
	clear ipv6 router-advertisement . . . . .	1972
	show ipv6 neighbors . . . . .	1973
	show ipv6 router-advertisement . . . . .	1976
<b>Chapter 21</b>	<b>IS-IS Operational Commands . . . . .</b>	<b>1979</b>
	clear isis adjacency . . . . .	1980
	clear isis database . . . . .	1982
	clear isis overload . . . . .	1984
	clear isis statistics . . . . .	1986
	show isis adjacency . . . . .	1988
	show isis authentication . . . . .	1993
	show isis backup coverage . . . . .	1995
	show isis backup label-switched-path . . . . .	1997
	show isis backup spf results . . . . .	1999
	show isis context-identifier . . . . .	2003
	show isis database . . . . .	2005
	show isis hostname . . . . .	2020
	show isis interface . . . . .	2022
	show isis overview . . . . .	2027
	show isis route . . . . .	2031
	show isis spf . . . . .	2035
	show isis statistics . . . . .	2040
<b>Chapter 22</b>	<b>LLDP Operational Commands . . . . .</b>	<b>2043</b>
	clear lldp neighbors . . . . .	2044
	clear lldp statistics . . . . .	2045
	show lldp . . . . .	2046
	show lldp local-information . . . . .	2049
	show lldp neighbors . . . . .	2052
	show lldp remote-global-statistics . . . . .	2058
	show lldp statistics . . . . .	2060
<b>Chapter 23</b>	<b>MVRP Operational Commands . . . . .</b>	<b>2063</b>
	show mvrp . . . . .	2064
	show mvrp applicant-state . . . . .	2067
	show mvrp dynamic-vlan-memberships . . . . .	2069
	show mvrp interface . . . . .	2071
	show mvrp registration-state . . . . .	2073
	show mvrp statistics . . . . .	2075
<b>Chapter 24</b>	<b>OSPF Operational Commands . . . . .</b>	<b>2081</b>
	clear (ospf   ospf3) database . . . . .	2082
	clear (ospf   ospf3) io-statistics . . . . .	2085
	clear (ospf   ospf3) neighbor . . . . .	2086

	clear (ospf   ospf3) overload . . . . .	2088
	clear (ospf   ospf3) statistics . . . . .	2089
	show (ospf   ospf3) backup coverage . . . . .	2092
	show (ospf   ospf3) backup lsp . . . . .	2095
	show (ospf   ospf3) backup neighbor . . . . .	2097
	show (ospf   ospf3) backup spf . . . . .	2099
	show ospf context-identifier . . . . .	2106
	show ospf database . . . . .	2108
	show ospf3 database . . . . .	2119
	show (ospf   ospf3) interface . . . . .	2130
	show (ospf   ospf3) io-statistics . . . . .	2136
	show (ospf   ospf3) log . . . . .	2138
	show (ospf   ospf3) neighbor . . . . .	2141
	show (ospf   ospf3) overview . . . . .	2148
	show (ospf   ospf3) route . . . . .	2153
	show (ospf   ospf3) statistics . . . . .	2159
<b>Chapter 25</b>	<b>Protocol-Independent Routing Operational Commands . . . . .</b>	<b>2165</b>
	show as-path . . . . .	2167
	show as-path domain . . . . .	2172
	show as-path summary . . . . .	2175
	show route . . . . .	2177
	show route active-path . . . . .	2198
	show route advertising-protocol . . . . .	2203
	show route all . . . . .	2209
	show route aspath-regex . . . . .	2211
	show route best . . . . .	2213
	show route brief . . . . .	2216
	show route ccc . . . . .	2218
	show route community . . . . .	2219
	show route community-name . . . . .	2221
	show route damping . . . . .	2223
	show route detail . . . . .	2228
	show route exact . . . . .	2248
	show route export . . . . .	2250
	show route export vrf-target . . . . .	2253
	show route extensive . . . . .	2255
	show route flow validation . . . . .	2273
	show route forwarding-table . . . . .	2275
	show route forwarding-table interface-name . . . . .	2293
	show route hidden . . . . .	2296
	show route inactive-path . . . . .	2299
	show route inactive-prefix . . . . .	2303
	show route instance . . . . .	2305
	show route label . . . . .	2313
	show route label-switched-path . . . . .	2318
	show route localization . . . . .	2320
	show route martians . . . . .	2322
	show route match-prefix . . . . .	2325

	show route next-hop . . . . .	2326
	show route no-community . . . . .	2332
	show route output . . . . .	2335
	show route protocol . . . . .	2340
	show route range . . . . .	2353
	show route receive-protocol . . . . .	2358
	show route resolution . . . . .	2368
	show route snooping . . . . .	2373
	show route source-gateway . . . . .	2376
	show route summary . . . . .	2382
	show route table . . . . .	2386
	show route terse . . . . .	2424
<b>Chapter 26</b>	<b>RIP Operational Commands . . . . .</b>	<b>2427</b>
	clear rip general-statistics . . . . .	2428
	clear rip statistics . . . . .	2429
	show rip general-statistics . . . . .	2431
	show rip neighbor . . . . .	2433
	show rip statistics . . . . .	2435
<b>Chapter 27</b>	<b>RIPng Operational Commands . . . . .</b>	<b>2439</b>
	clear ripng general-statistics . . . . .	2440
	clear ripng statistics . . . . .	2441
	show ripng general-statistics . . . . .	2442
	show ripng neighbor . . . . .	2444
	show ripng statistics . . . . .	2446
<b>Chapter 28</b>	<b>Firewall Filter Operational Commands . . . . .</b>	<b>2449</b>
	clear firewall . . . . .	2450
	show firewall . . . . .	2452
	show firewall filter version . . . . .	2460
	show firewall log . . . . .	2461
	show firewall prefix-action-stats . . . . .	2464
	show firewall templates-in-use . . . . .	2466
	show policer . . . . .	2468
<b>Chapter 29</b>	<b>Layer 2 Bridging and Switching Operational Commands . . . . .</b>	<b>2471</b>
	clear bridge mac-table . . . . .	2472
	clear error bpd interface . . . . .	2473
	clear error mac-rewrite . . . . .	2474
	show bridge domain . . . . .	2475
	show bridge flood . . . . .	2477
	show bridge mac-table . . . . .	2484
	show bridge statistics . . . . .	2490
	show l2-learning global-information . . . . .	2493
	show l2-learning global-mac-count . . . . .	2495
	show l2-learning instance . . . . .	2496
	show l2-learning interface . . . . .	2498
	show mac-rewrite interface . . . . .	2500

<b>Chapter 30</b>	<b>VPN Operational Commands</b> . . . . .	<b>2503</b>
	clear vpls mac-address . . . . .	2504
	clear vpls mac-table . . . . .	2505
	request l2circuit-switchover . . . . .	2506
	show dynamic-tunnels database . . . . .	2507
	show hfr profiles . . . . .	2510
	show ingress-replication mvpn . . . . .	2512
	show l2circuit connections . . . . .	2514
	show l2vpn connections . . . . .	2522
	show mvpn c-multicast . . . . .	2529
	show mvpn instance . . . . .	2532
	show mvpn neighbor . . . . .	2536
	show vpls connections . . . . .	2541
	show vpls flood event-queue . . . . .	2552
	show vpls flood instance . . . . .	2554
	show vpls flood route . . . . .	2556
	show vpls mac-table . . . . .	2558
	show vpls statistics . . . . .	2563

# List of Figures

<b>Part 1</b>	<b>Router Interfaces</b>	
<b>Chapter 1</b>	<b>Router Interfaces Overview . . . . .</b>	<b>3</b>
	Figure 1: APS Interface . . . . .	8
	Figure 2: Container Interface . . . . .	9
	Figure 3: Routing Matrix . . . . .	41
	Figure 4: Routing Matrix Based on a TX Matrix Plus Router . . . . .	43
	Figure 5: Interface Slot, PIC, and Port Locations . . . . .	46
<b>Chapter 2</b>	<b>Configuring Physical Interface Properties . . . . .</b>	<b>63</b>
	Figure 6: Two Router Interfaces Connected Through Transport Equipment . . . . .	159
	Figure 7: Multiple Flaps of Short Duration (Milliseconds) . . . . .	160
	Figure 8: Periodic Flaps of Long Duration (Seconds) . . . . .	161
	Figure 9: Physical-Level Link Is Down When the Penalty Falls Below the Reuse Level . . . . .	163
	Figure 10: Physical-Level Link Is Up When the Penalty Falls Below the Reuse Level . . . . .	164
<b>Chapter 4</b>	<b>Configuring Protocol Family and Interface Address Properties . . . . .</b>	<b>203</b>
	Figure 11: Hierarchical Policer . . . . .	230
	Figure 12: Unicast RPF with Routing Asymmetry . . . . .	244
	Figure 13: Unicast RPF Sample Topoolgy . . . . .	255
	Figure 14: Prefix Accounting with Source and Destination Classes . . . . .	263
	Figure 15: Prefix Accounting with Source and Destination Classes . . . . .	266
<b>Chapter 5</b>	<b>Configuring Circuit and Translational Cross-Connects . . . . .</b>	<b>275</b>
	Figure 16: Layer 2 Switching Circuit Cross-Connect . . . . .	276
	Figure 17: Example Topology of a Switching Circuit Cross-Connect with Frame Relay CCC Encapsulation . . . . .	288
	Figure 18: Layer 2.5 Switching Translational Cross-Connect . . . . .	289
	Figure 19: Interface-to-Interface Circuit Cross-Connect over Aggregated Ethernet Interfaces . . . . .	290
	Figure 20: Remote Interface-LSP-Interface Circuit Cross-Connect over Aggregated Ethernet Interfaces . . . . .	292
	Figure 21: ATM-to-Ethernet Interworking . . . . .	294
<b>Part 3</b>	<b>Serial Interfaces</b>	
<b>Chapter 10</b>	<b>Configuring Serial Interfaces . . . . .</b>	<b>337</b>
	Figure 22: Serial Interface Clocking Mode . . . . .	342
	Figure 23: Serial Interface LIU Loopback . . . . .	348
	Figure 24: Serial Interface Local Loopback . . . . .	348



# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xlili</b>
	Table 1: Notice Icons . . . . .	xlvi
	Table 2: Text and Syntax Conventions . . . . .	xlvi
<b>Part 1</b>	<b>Router Interfaces</b>	
<b>Chapter 1</b>	<b>Router Interfaces Overview</b> . . . . .	<b>3</b>
	Table 3: M7i Routing Engines . . . . .	18
	Table 4: M10i Routing Engines . . . . .	19
	Table 5: M40e Routing Engines . . . . .	19
	Table 6: M120 Routing Engines . . . . .	19
	Table 7: M320 Routing Engines . . . . .	20
	Table 8: MX5, MX10, MX40, and MX80 Routing Engine . . . . .	21
	Table 9: MX104 Routing Engines . . . . .	21
	Table 10: MX240 Supported Routing Engines . . . . .	21
	Table 11: MX480 Supported Routing Engines . . . . .	22
	Table 12: MX960 Supported Routing Engines . . . . .	23
	Table 13: MX2008 Supported Routing Engines . . . . .	24
	Table 14: MX2010 Supported Routing Engines . . . . .	25
	Table 15: MX2020 Supported Routing Engines . . . . .	26
	Table 16: MX10003 Supported Routing Engines . . . . .	26
	Table 17: MX10008 Routing Engines . . . . .	27
	Table 18: PTX1000 Routing Engines . . . . .	27
	Table 19: PTX3000 Routing Engines . . . . .	27
	Table 20: PTX5000 Routing Engines . . . . .	28
	Table 21: PTX10008 and PTX10016 Routing Engines . . . . .	28
	Table 22: T320 Routing Engines . . . . .	29
	Table 23: T640 Routing Engines . . . . .	29
	Table 24: T1600 Routing Engines . . . . .	30
	Table 25: T4000 Routing Engines . . . . .	31
	Table 26: TX Matrix Routing Engines . . . . .	32
	Table 27: TX Matrix Plus Routing Engines . . . . .	32
	Table 28: Routing Engines on TX Matrix Plus with 3D SIBs . . . . .	33
	Table 29: FPC Numbering for T640 Routers in a Routing Matrix . . . . .	42
	Table 30: One-to-One FPC Numbering for T640 Routers in a Routing Matrix . . . . .	42
	Table 31: FPC Numbering for T1600 Routers in a Routing Matrix . . . . .	44
	Table 32: One-to-One FPC Numbering for T1600 Routers in a Routing Matrix . . . . .	44
	Table 33: Encapsulation Support by Interface Type . . . . .	47
<b>Chapter 2</b>	<b>Configuring Physical Interface Properties</b> . . . . .	<b>63</b>
	Table 34: Statements for Physical Interface Properties . . . . .	74

	Table 35: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers . . . . .	102
	Table 36: Media MTU Sizes by Interface Type for M40e Routers . . . . .	103
	Table 37: Media MTU Sizes by Interface Type for M160 Routers . . . . .	104
	Table 38: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers . . . . .	104
	Table 39: Media MTU Sizes by Interface Type for MX Series Routers . . . . .	105
	Table 40: Media MTU Sizes by Interface Type for T320 Routers . . . . .	107
	Table 41: Media MTU Sizes by Interface Type for T640 Platforms . . . . .	107
	Table 42: Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers . . . . .	108
	Table 43: Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers . . . . .	108
	Table 44: Encapsulation Overhead by Encapsulation Type . . . . .	111
	Table 45: Media MTU Sizes by Interface Type for ACX Series Routers . . . . .	112
	Table 46: Encapsulation Overhead by Encapsulation Type . . . . .	112
	Table 47: Effect of set interfaces disable <interface_name> on T series PICs . . . . .	175
<b>Chapter 3</b>	<b>Configuring Logical Interface Properties . . . . .</b>	<b>177</b>
	Table 48: Statements for Logical Interface Properties . . . . .	181
<b>Chapter 4</b>	<b>Configuring Protocol Family and Interface Address Properties . . . . .</b>	<b>203</b>
	Table 49: Protocol Family Configuration Tasks . . . . .	206
<b>Part 3</b>	<b>Serial Interfaces</b>	
<b>Chapter 10</b>	<b>Configuring Serial Interfaces . . . . .</b>	<b>337</b>
	Table 50: Signal Handling by Serial Interface Type . . . . .	344
<b>Part 4</b>	<b>Monitoring and Troubleshooting Interfaces</b>	
<b>Chapter 12</b>	<b>Troubleshooting Interfaces . . . . .</b>	<b>361</b>
	Table 51: Loopback Modes by Interface Type . . . . .	362
	Table 52: BERT Capabilities by Interface Type . . . . .	365
<b>Part 5</b>	<b>Configuration Statements and Operational Commands</b>	
<b>Chapter 13</b>	<b>Configuration Statements . . . . .</b>	<b>387</b>
	Table 53: Options for speed . . . . .	982
	Table 54: Options for traceoptions . . . . .	1023
	Table 55: Options for traceoptions . . . . .	1030
<b>Chapter 14</b>	<b>Interface Operational Commands . . . . .</b>	<b>1113</b>
	Table 56: show interfaces (Gigabit Ethernet) Output Fields . . . . .	1127
	Table 57: Gigabit and 10 Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type . . . . .	1156
	Table 58: show interfaces Output Fields . . . . .	1157
	Table 59: ATM show interfaces Output Fields . . . . .	1203
	Table 60: Channelized DS3 show interfaces Output Fields . . . . .	1237
	Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields . . . . .	1255

	Table 62: Channelized OC show interfaces Output Fields . . . . .	1275
	Table 63: Channelized STM1 show interfaces Output Fields . . . . .	1296
	Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields . . . . .	1312
	Table 65: Discard show interfaces Output Fields . . . . .	1325
	Table 66: show interfaces Fast Ethernet Output Fields . . . . .	1330
	Table 67: show interfaces (Gigabit Ethernet) Output Fields . . . . .	1351
	Table 68: Gigabit and 10 Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type . . . . .	1380
	Table 69: show interfaces Output Fields . . . . .	1381
	Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface . . . . .	1427
	Table 71: show interfaces (PPPoE) Output Fields . . . . .	1442
	Table 72: show interfaces PTX Series Output Fields . . . . .	1453
	Table 73: SONET/SDH show interfaces Output Fields . . . . .	1467
	Table 74: show interfaces (Serial) Output Fields . . . . .	1494
	Table 75: T1 or E1 show interfaces Output Fields . . . . .	1508
	Table 76: T3 or E3 show interfaces Output Fields . . . . .	1532
	Table 77: show interfaces demux0 (Demux Interfaces) Output Fields . . . . .	1549
	Table 78: Logical Tunnel show interfaces Output Fields . . . . .	1603
	Table 79: show interfaces terse Output Fields . . . . .	1609
<b>Chapter 15</b>	<b>ANCP Operational Commands . . . . .</b>	<b>1613</b>
	Table 80: show ancp cos Output Fields . . . . .	1623
	Table 81: show ancp neighbor Output Fields . . . . .	1628
	Table 82: show ancp statistics Output Fields . . . . .	1636
	Table 83: show ancp subscriber Output Fields . . . . .	1642
	Table 84: show ancp summary Output Fields . . . . .	1647
	Table 85: show ancp summary neighbor Output Fields . . . . .	1649
	Table 86: show ancp summary subscriber Output Fields . . . . .	1651
<b>Chapter 16</b>	<b>BFD Operational Commands . . . . .</b>	<b>1653</b>
	Table 87: show bfd session Output Fields . . . . .	1658
<b>Chapter 17</b>	<b>BGP Operational Commands . . . . .</b>	<b>1667</b>
	Table 88: show bgp bmp Output Fields . . . . .	1674
	Table 89: show bgp group Output Fields . . . . .	1677
	Table 90: show bgp group traffic-statistics Output Fields . . . . .	1684
	Table 91: show bgp neighbor Output Fields . . . . .	1688
	Table 92: show bgp replication Output Fields . . . . .	1706
	Table 93: show bgp summary Output Fields . . . . .	1709
	Table 94: show policy damping Output Fields . . . . .	1715
<b>Chapter 18</b>	<b>ES-IS Operational Commands . . . . .</b>	<b>1717</b>
	Table 95: show esis adjacency Output Fields . . . . .	1720
	Table 96: show esis interface Output Fields . . . . .	1723
	Table 97: show esis statistics Output Fields . . . . .	1725
<b>Chapter 19</b>	<b>IP Multicast Operational Commands . . . . .</b>	<b>1727</b>
	Table 98: show amt statistics Output Fields . . . . .	1768
	Table 99: show amt summary Output Fields . . . . .	1771
	Table 100: show amt tunnel Output Fields . . . . .	1774

Table 101: show dvmrp interfaces Output Fields . . . . .	1777
Table 102: show dvmrp neighbors Output Fields . . . . .	1780
Table 103: show dvmrp prefix Output Fields . . . . .	1782
Table 104: show dvmrp prunes Output Fields . . . . .	1785
Table 105: show igmp group Output Fields . . . . .	1788
Table 106: show igmp interface Output Fields . . . . .	1792
Table 107: show igmp snooping interface Output Fields . . . . .	1796
Table 108: show igmp snooping membership Output Fields . . . . .	1802
Table 109: show igmp snooping statistics Output Fields . . . . .	1807
Table 110: show igmp statistics Output Fields . . . . .	1811
Table 111: show mld group Output Fields . . . . .	1814
Table 112: show mld interface Output Fields . . . . .	1818
Table 113: show mld statistics Output Fields . . . . .	1822
Table 114: show msdp Output Fields . . . . .	1825
Table 115: show msdp source Output Fields . . . . .	1829
Table 116: show msdp source-active Output Fields . . . . .	1831
Table 117: show msdp statistics Output Fields . . . . .	1833
Table 118: show multicast backup-pe-groups Output Fields . . . . .	1837
Table 119: show multicast flow-map Output Fields . . . . .	1839
Table 120: show multicast forwarding-cache statistics Output Fields . . . . .	1841
Table 121: show multicast interface Output Fields . . . . .	1843
Table 122: show multicast minfo Output Fields . . . . .	1846
Table 123: show multicast next-hops Output Fields . . . . .	1849
Table 124: show multicast pim-to-igmp-proxy Output Fields . . . . .	1853
Table 125: show multicast pim-to-mld-proxy Output Fields . . . . .	1854
Table 126: show multicast route Output Fields . . . . .	1858
Table 127: show multicast rpf Output Fields . . . . .	1868
Table 128: show multicast scope Output Fields . . . . .	1871
Table 129: show multicast snooping next-hops Output Fields . . . . .	1873
Table 130: show multicast sessions Output Fields . . . . .	1877
Table 131: show multicast snooping route Output Fields . . . . .	1881
Table 132: show multicast statistics Output Fields . . . . .	1884
Table 133: show multicast usage Output Fields . . . . .	1890
Table 134: show pim bootstrap Output Fields . . . . .	1892
Table 135: show pim interfaces Output Fields . . . . .	1894
Table 136: show pim join Output Fields . . . . .	1899
Table 137: show pim mdt Output Fields . . . . .	1913
Table 138: show pim mdt data-mdt-joins Output Fields . . . . .	1917
Table 139: show pim mdt data-mdt-limit Output Fields . . . . .	1918
Table 140: show pim neighbors Output Fields . . . . .	1921
Table 141: show pim rps Output Fields . . . . .	1925
Table 142: show pim snooping interface Output Fields . . . . .	1932
Table 143: show pim snooping join Output Fields . . . . .	1935
Table 144: show pim snooping neighbors Output Fields . . . . .	1940
Table 145: show pim snooping statistics Output Fields . . . . .	1944
Table 146: show pim source Output Fields . . . . .	1950
Table 147: show pim statistics Output Fields . . . . .	1953
Table 148: show sap listen Output Fields . . . . .	1965

## Chapter 20

## IPv6 Operational Commands . . . . . 1969

	Table 149: show ipv6 neighbors Output Fields . . . . .	1974
	Table 150: show ipv6 router-advertisement Output Fields . . . . .	1977
<b>Chapter 21</b>	<b>IS-IS Operational Commands . . . . .</b>	<b>1979</b>
	Table 151: show isis adjacency Output Fields . . . . .	1989
	Table 152: show isis authentication Output Fields . . . . .	1993
	Table 153: show isis backup coverage Output Fields . . . . .	1995
	Table 154: show isis backup label-switched-path Output Fields . . . . .	1997
	Table 155: show isis backup spf results Output Fields . . . . .	2000
	Table 156: show isis context-identifier Output Fields . . . . .	2003
	Table 157: show isis database Output Fields . . . . .	2006
	Table 158: show isis hostname Output Fields . . . . .	2020
	Table 159: show isis interface Output Fields . . . . .	2023
	Table 160: show isis overview Output Fields . . . . .	2027
	Table 161: show isis route Output Fields . . . . .	2032
	Table 162: show isis spf Output Fields . . . . .	2036
	Table 163: show isis statistics Output Fields . . . . .	2041
<b>Chapter 22</b>	<b>LLDP Operational Commands . . . . .</b>	<b>2043</b>
	Table 164: show lldp Output Fields . . . . .	2046
	Table 165: show lldp local-information Output Fields . . . . .	2049
	Table 166: show lldp neighbors Output Fields . . . . .	2052
	Table 167: show lldp remote-global-statistics Output Fields . . . . .	2058
	Table 168: show lldp statistics Output Fields . . . . .	2060
<b>Chapter 23</b>	<b>MVRP Operational Commands . . . . .</b>	<b>2063</b>
	Table 169: show mvrp Output Fields . . . . .	2064
	Table 170: show mvrp applicant-state Output Fields . . . . .	2067
	Table 171: show mvrp dynamic-vlan-memberships Output Fields . . . . .	2069
	Table 172: show mvrp interface Output Fields . . . . .	2071
	Table 173: show mvrp registration-state Output Fields . . . . .	2073
	Table 174: show mvrp statistics Output Fields . . . . .	2076
	Table 175: show mvrp statistics Output Fields . . . . .	2077
<b>Chapter 24</b>	<b>OSPF Operational Commands . . . . .</b>	<b>2081</b>
	Table 176: show (ospf   ospf3) backup coverage Output Fields . . . . .	2093
	Table 177: show (ospf   ospf3) backup lsp Output Fields . . . . .	2095
	Table 178: show (ospf   ospf3) backup neighbor Output Fields . . . . .	2098
	Table 179: show (ospf   ospf3) backup spf Output Fields . . . . .	2100
	Table 180: show ospf context-identifier Output Fields . . . . .	2107
	Table 181: show ospf database Output Fields . . . . .	2109
	Table 182: show ospf3 database Output Fields . . . . .	2121
	Table 183: show (ospf   ospf3) interface Output Fields . . . . .	2131
	Table 184: show (ospf   ospf3) io-statistics Output Fields . . . . .	2136
	Table 185: show (ospf   ospf3) log Output Fields . . . . .	2139
	Table 186: show (ospf   ospf3) neighbor Output Fields . . . . .	2142
	Table 187: show ospf overview Output Fields . . . . .	2149
	Table 188: show (ospf   ospf3) route Output Fields . . . . .	2154
	Table 189: show (ospf   ospf3) statistics Output Fields . . . . .	2160
<b>Chapter 25</b>	<b>Protocol-Independent Routing Operational Commands . . . . .</b>	<b>2165</b>

	Table 190: show as-path Output Fields . . . . .	2168
	Table 191: show as-path domain Output Fields . . . . .	2172
	Table 192: show as-path summary Output Fields . . . . .	2175
	Table 193: show route Output Fields . . . . .	2178
	Table 194: show route advertising-protocol Output Fields . . . . .	2204
	Table 195: show route damping Output Fields . . . . .	2224
	Table 196: show route detail Output Fields . . . . .	2228
	Table 197: Next-hop Types Output Field Values . . . . .	2234
	Table 198: State Output Field Values . . . . .	2236
	Table 199: Communities Output Field Values . . . . .	2238
	Table 200: show route export Output Fields . . . . .	2251
	Table 201: show route export vrf-target Output Fields . . . . .	2253
	Table 202: show route extensive Output Fields . . . . .	2255
	Table 203: show route flow validation Output Fields . . . . .	2273
	Table 204: show route forwarding-table Output Fields . . . . .	2278
	Table 205: show route forwarding-table interface-name Output Fields . . . . .	2293
	Table 206: show route instance Output Fields . . . . .	2306
	Table 207: show route localization Output Fields . . . . .	2320
	Table 208: show route martians Output Fields . . . . .	2322
	Table 209: show route receive-protocol Output Fields . . . . .	2359
	Table 210: show route resolution Output Fields . . . . .	2370
	Table 211: show route summary Output Fields . . . . .	2383
	Table 212: show route table Output Fields . . . . .	2387
	Table 213: Next-hop Types Output Field Values . . . . .	2393
	Table 214: State Output Field Values . . . . .	2394
	Table 215: Communities Output Field Values . . . . .	2396
	Table 216: show route terse Output Fields . . . . .	2424
<b>Chapter 26</b>	<b>RIP Operational Commands . . . . .</b>	<b>2427</b>
	Table 217: show rip general-statistics Output Fields . . . . .	2431
	Table 218: show rip neighbor Output Fields . . . . .	2434
	Table 219: show rip statistics Output Fields . . . . .	2436
<b>Chapter 27</b>	<b>RIPng Operational Commands . . . . .</b>	<b>2439</b>
	Table 220: show ripng general-statistics Output Fields . . . . .	2442
	Table 221: show ripng neighbor Output Fields . . . . .	2444
	Table 222: show ripng statistics Output Fields . . . . .	2447
<b>Chapter 28</b>	<b>Firewall Filter Operational Commands . . . . .</b>	<b>2449</b>
	Table 223: show firewall Output Fields . . . . .	2454
	Table 224: show firewall filter version Output Fields . . . . .	2460
	Table 225: show firewall log Output Fields . . . . .	2461
	Table 226: show firewall prefix-action-stats Output Fields . . . . .	2465
	Table 227: show firewall templates-in-use Output Fields . . . . .	2466
	Table 228: show policer Output Fields . . . . .	2468
<b>Chapter 29</b>	<b>Layer 2 Bridging and Switching Operational Commands . . . . .</b>	<b>2471</b>
	Table 229: show bridge mac-table Output Fields . . . . .	2485
	Table 230: show l2-learning global-information Output Fields . . . . .	2493
	Table 231: show l2-learning instance Output Fields . . . . .	2496

**Chapter 30**

Table 232: show l2-learning interface	Output Fields . . . . .	2498
Table 233: show mac-rewrite interface	Output Fields . . . . .	2500
<b>VPN Operational Commands . . . . .</b>		<b>2503</b>
Table 234: show dynamic-tunnels database	Output Fields . . . . .	2507
Table 235: show hfrp profiles	Output Fields . . . . .	2510
Table 236: show ingress-replication mvpn	Output Fields . . . . .	2512
Table 237: show l2circuit connections	Output Fields . . . . .	2515
Table 238: show l2vpn connections	Output Fields . . . . .	2523
Table 239: show mvpn c-multicast	Output Fields . . . . .	2529
Table 240: show mvpn instance	Output Fields . . . . .	2532
Table 241: show mvpn neighbor	Output Fields . . . . .	2536
Table 242: show vpls connections	Output Fields . . . . .	2542
Table 243: show vpls flood event-queue	Output Fields . . . . .	2552
Table 244: show vpls flood instance	Output Fields . . . . .	2554
Table 245: show vpls flood route	Output Fields . . . . .	2556
Table 246: show vpls mac-table	Output fields . . . . .	2559
Table 247: show vpls statistics	Output Fields . . . . .	2563



# About the Documentation

- Documentation and Release Notes on page xliii
- Using the Examples in This Manual on page xliii
- Documentation Conventions on page xlv
- Documentation Feedback on page xlvii
- Requesting Technical Support on page xlvii

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
```

```
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:







```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

## Documentation Conventions

[Table 1 on page xlv](#) defines notice icons used in this guide.

*Table 1: Notice Icons*

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

[Table 2 on page xlv](#) defines the text and syntax conventions used in this guide.

*Table 2: Text and Syntax Conventions*

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>

Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	<pre>user@host&gt; show chassis alarms</pre> <p>No alarms currently active</p>
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	<p>Configure the machine's domain name:</p> <pre>[edit] root@# set system domain-name domain-name</pre>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the <code>[edit protocols ospf area area-id]</code> hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<code>stub &lt;default-metric metric&gt;;</code>
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<pre>broadcast   multicast</pre> <p><i>(string1   string2   string3)</i></p>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<code>rsvp { # Required for dynamic MPLS only</code>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<code>community name members [ community-ids ]</code>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	<pre>[edit] routing-options {   static {     route default {       nexthop address;       retain;     }   } }</pre>
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
<b>GUI Conventions</b>		
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>


Table 2: Text and Syntax Conventions (continued)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

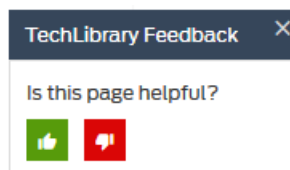

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <https://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <https://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://www.juniper.net/support/requesting-support.html>.

## PART 1

# Router Interfaces

- [Router Interfaces Overview on page 3](#)
- [Configuring Physical Interface Properties on page 63](#)
- [Configuring Logical Interface Properties on page 177](#)
- [Configuring Protocol Family and Interface Address Properties on page 203](#)
- [Configuring Circuit and Translational Cross-Connects on page 275](#)



## CHAPTER 1

# Router Interfaces Overview

- [Router Interfaces Overview on page 4](#)
- [Types of Interfaces Overview on page 4](#)
- [Understanding Permanent Interfaces on page 5](#)
- [Understanding Transient Interfaces on page 5](#)
- [Understanding Services Interfaces on page 7](#)
- [Understanding Container Interfaces on page 8](#)
- [Understanding Management Ethernet Interfaces on page 10](#)
- [Understanding Interfaces on ACX Series Universal Metro Routers on page 11](#)
- [TX Matrix Plus and T1600 Router \(Routing Matrix\) Management Ethernet Interfaces on page 14](#)
- [Understanding Internal Ethernet Interfaces on page 15](#)
- [T1600 Routers \(Routing Matrix\) Internal Ethernet Interfaces on page 17](#)
- [Supported Routing Engines by Router on page 17](#)
- [Interface Naming Overview on page 33](#)
- [Interface Encapsulations Overview on page 47](#)
- [Interface Descriptors Overview on page 58](#)
- [Physical Part of an Interface Name on page 59](#)
- [Displaying Interface Configurations Overview on page 61](#)

## Router Interfaces Overview

---

Routers typically contain several different types of interfaces suited to various functions. For the interfaces on a router to function, you must configure them. Specify the interface location (that is, the slot where the Flexible PIC Concentrator [FPC], Dense Port Concentrator [DPC], or Modular Port Concentrator [MPC] is installed. You must also specify the location of the Physical Interface Card [PIC] or Modular Interface Card [MIC], and the interface type, for example, SONET/SDH, Asynchronous Transfer Mode [ATM], or Ethernet). Finally, you must specify the encapsulation type and any interface-specific properties that may apply.

You can configure interfaces that are currently present in the router, as well as interfaces that are not currently present but that are expected to be added in the future. Junos OS detects the interface once the hardware has been installed and applies the pre-set configuration to it.

To see which interfaces are currently installed in the router, issue the **show interfaces terse** operational mode command. If an interface is listed in the output, it is physically installed in the router. If an interface is not listed in the output, it is not installed in the router.

For information about which interfaces are supported on your router, see your router's *Interface Module Reference*.

You can configure Junos OS class-of-service (CoS) properties to provide a variety of classes of service for different applications, including multiple forwarding classes for managing packet transmission, congestion management, and CoS-based forwarding. For more information about configuring CoS properties, see the *Class of Service Feature Guide for Routing Devices and EX9200 Switches*.

**Related Documentation**

- *Interfaces Fundamentals for Routing Devices*

## Types of Interfaces Overview

---

Interfaces can be permanent or transient, and are used for networking or services:

- Permanent interfaces—Interfaces that are always present in the router.
- Transient interfaces—Interfaces that can be inserted into or removed from the router depending on your network configuration needs.
- Networking interfaces—Interfaces, such as Ethernet or SONET/SDH interfaces, that primarily provide traffic connectivity.
- Services interfaces—Interfaces that provide specific capabilities for manipulating traffic before it is delivered to its destination.
- Container interfaces—Interfaces that support automatic protection switching (APS) on physical SONET links using a virtual container infrastructure.

Junos OS internally generates nonconfigurable interfaces which are described in *Interfaces Command Reference* and *Services Interfaces*.

**Related Documentation**

- [Understanding Permanent Interfaces on page 5](#)
- [Understanding Transient Interfaces on page 5](#)
- [Understanding Services Interfaces on page 7](#) and *Junos OS Services Interfaces Library for Routing Devices*
- [Understanding Container Interfaces on page 8](#)
- See also the following sections regarding specific networking interface technologies used in your routers:
  - *ATM Interfaces Overview*
  - *Channelized Interfaces Overview*
  - *Circuit Emulation Interfaces: Understanding Mobile Backhaul*
  - *E1 Interfaces Overview* and *E3 Interfaces Overview*
  - *Ethernet Interfaces Overview*
  - *Frame Relay Overview*
  - *SONET/SDH Interfaces Overview*
  - *T1 Interfaces Overview* and *T3 Interfaces Overview*

---

## Understanding Permanent Interfaces

Permanent interfaces in the router consist of management Ethernet interfaces and internal Ethernet interfaces, which are described separately in the following topics:

- [Understanding Management Ethernet Interfaces on page 10](#)
- [Understanding Internal Ethernet Interfaces on page 15](#)

---

## Understanding Transient Interfaces

The M Series, MX Series, and T Series routers contain slots for installing Flexible PIC Concentrator [FPC] or Dense Port Concentrator [DPC] (for MX Series routers) or Modular Port Concentrator [MPC] (for MX Series routers). Physical Interface Card [PIC] can be installed in FPCs. Modular Interface Card [MIC] can be inserted into MPCs.

The number of PICs that can be installed varies by router and type of FPC. The PICs provide the actual physical interfaces to the network. The MX Series routers contain slots for installing either DPC boards that provide the physical interfaces to the network or for installing FPCs in which PICs can be installed.

You can insert any DPC or FPC into any slot that supports them in the appropriate router. Typically, you can place any combination of PICs, compatible with your router, in any location on an FPC. (You are limited by the total FPC bandwidth, and by the fact that

some PICs physically require two or four of the PIC locations on the FPC. In some cases, power limitations or microcode limitations may also apply.) To determine DPC and PIC compatibility, see the see your router's *Interface Module Reference*.

You can insert MPC into any slot that supports them in the appropriate router. You can install up to two MICs of different media types in the same MPC as long as the MPC supports those MICs.

These physical interfaces are transient interfaces of the router. They are referred to as transient because you can hot-swap a DPC or FPC or MPC and its PICs or MICs at any time.

You must configure each transient interface based on the slot in which the FPC or DPC or MPC is installed, the location in which the PIC or MIC is installed, and for multiple port PICs or MICs , the port to which you are connecting.

You can configure the interfaces on PICs or MICs that are already installed in the router as well as interfaces on PICs or MICs that you plan to install later. The Junos OS detects which interfaces are actually present, so when the software activates its configuration, it activates only the present interfaces and retains the configuration information for the interfaces that are not present. When the Junos OS detects that an FPC containing PICs or MPC containing MICs has been inserted into the router, the software activates the configuration for those interfaces.

**Related  
Documentation**

- [Types of Interfaces Overview on page 4](#)
- [Understanding Permanent Interfaces on page 5](#)
- [Understanding Management Ethernet Interfaces on page 10](#)
- [Understanding Internal Ethernet Interfaces on page 15](#)
- [Supported Routing Engines by Router on page 17](#)
- [Understanding Services Interfaces on page 7](#)
- [Understanding Container Interfaces on page 8](#)
- [Interface Encapsulations Overview on page 47](#)
- [Interface Descriptors Overview on page 58](#)
- [Interface Naming Overview on page 33](#)
- [Displaying Interface Configurations Overview on page 61](#)

## Understanding Services Interfaces

Services interfaces enable you to incrementally add services to your network. The Junos OS supports the following services PICs:

- **Adaptive Services (AS) PICs**—Allow you to provide multiple services on a single PIC by configuring a set of services and applications. The AS PICs offer a special range of services you configure in one or more service sets.
- **ES PIC**—Provides a security suite for the IP version 4 (IPv4) and IP version 6 (IPv6) network layers. The suite provides functionality such as authentication of origin, data integrity, confidentiality, replay protection, and nonrepudiation of source. It also defines mechanisms for key generation and exchange, management of security associations, and support for digital certificates.
- **Monitoring Services PICs**—Enable you to monitor traffic flow and export the monitored traffic. Monitoring traffic allows you to gather and export detailed information about IPv4 traffic flows between source and destination nodes in your network; sample all incoming IPv4 traffic on the monitoring interface and present the data in cflowd record format; perform discard accounting on an incoming traffic flow; encrypt or tunnel outgoing cflowd records, intercepted IPv4 traffic, or both; and direct filtered traffic to different packet analyzers and present the data in its original format. On a Monitoring Services II PIC, you can configure either monitoring interfaces or collector interfaces. A collector interface allows you to combine multiple cflowd records into a compressed ASCII data file and export the file to an FTP server.
- **Multilink Services, MultiServices, Link Services, and Voice Services PICs**—Enable you to split, recombine, and sequence datagrams across multiple logical data links. The goal of multilink operation is to coordinate multiple independent links between a fixed pair of systems, providing a virtual link with greater bandwidth than any of the members.
- **Tunnel Services PIC**—By encapsulating arbitrary packets inside a transport protocol, tunneling provides a private, secure path through an otherwise public network. Tunnels connect discontinuous subnetworks and enable encryption interfaces, virtual private networks (VPNs), and Multiprotocol Label Switching (MPLS).
- On M Series and T Series routers, logical tunnel interfaces allow you to connect logical systems, virtual routers, or VPN instances. For more information about VPNs, see the *Junos OS VPNs Library for Routing Devices*. For more information about configuring tunnels, see the *Junos OS Services Interfaces Library for Routing Devices*.

### Related Documentation

- [Types of Interfaces Overview on page 4](#)

## Understanding Container Interfaces

Container interfaces provide the following features:

- Automatic protection switching (APS) on SONET/SDH and ATM links are supported using the container infrastructure.
- Container physical interfaces and logical interfaces remain up on switchover.
- APS parameters are auto-copied from the container interface to the member links.



**NOTE:** Paired groups and true unidirectional APS are not currently supported.

For more information on SONET/SDH configuration, see *Configuring Container Interfaces for APS on SONET Links*.


Container interfaces features are described in the following sections:

- [Understanding Traditional APS Concept on page 8](#)
- [Container Interfaces Concept on page 9](#)
- [APS Support for Container-Based Interfaces on page 9](#)
- [Autocopy of APS Parameters on page 9](#)

## Understanding Traditional APS Concept

Traditional APS is configured on two independent physical SONET/SDH interfaces: one configured as the working circuit and the other as the protect circuit (see [Figure 1 on page 8](#)). The circuit, named Circuit X in the figure, is the link between the two SONET interfaces.

**Figure 1: APS Interface**

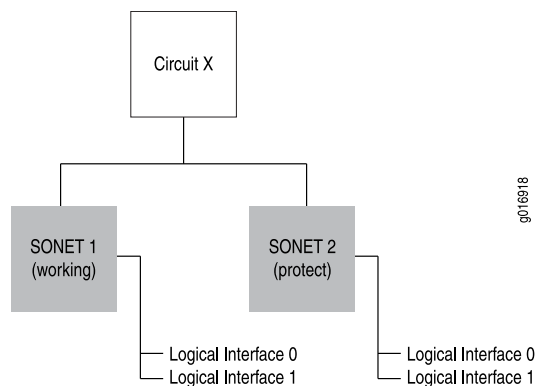


Traditional APS uses routing protocols that run on each individual SONET/SDH interface (since circuit is an abstract construct, instead of being an actual interface). When the working link goes down, the APS infrastructure brings up the protect link and its underlying logical interfaces, and brings down the working link and its underlying logical interfaces,

causing the routing protocols to reconverge. This consumes time and leads to traffic loss even though the APS infrastructure has performed the switch quickly.

## Container Interfaces Concept

To solve this problem, the Junos OS provides a soft interface construct called a container interface (see [Figure 2 on page 9](#)).

**Figure 2: Container Interface**

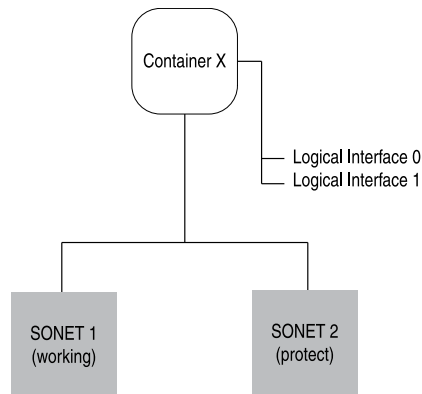

The container interface allows routing protocols to run on the logical interfaces associated with a virtual *container interface* instead of on the physical SONET/SDH and ATM interfaces. When APS switches the underlying physical link based on a fault condition, the container interface remains up, and the logical interface on the container interface does not flap. The routing protocols remain unaware of the APS switching.

## APS Support for Container-Based Interfaces

With the container interface, APS is configured on the container interface itself. Individual member SONET/SDH and ATM links are either marked as primary (corresponding to the working circuit) or standby (corresponding to the protect circuit) in the configuration. No circuit or group name is specified in the container interface model; physical SONET/SDH and ATM links are put in an APS group by linking them to a single container interface. APS parameters are specified at the container interface level, and are propagated to the individual SONET/SDH and ATM links by the APS daemon.

## Autocopy of APS Parameters

Typical applications require copying APS parameters from the working circuit to the protect circuit, since most of the parameters must be the same for both circuits. This is automatically done in the container interface. APS parameters are specified only once under the container physical interface configuration, and are internally copied over to the individual physical SONET/SDH and ATM links.

### Related Documentation

- *Configuring Container Interfaces for APS on SONET Links*
- *Displaying APS Using a Container Interface with ATM Encapsulation*

## Understanding Management Ethernet Interfaces

---

Management interfaces are the primary interfaces for accessing the device remotely. Typically, a management interface is not connected to the in-band network, but is connected instead to the device's internal network. Through a management interface you can access the device over the network using utilities such as **ssh** and **telnet** and configure the device from anywhere, regardless of its physical location. SNMP can use the management interface to gather statistics from the device.

A management interface lets authorized users and management systems connect to the device over the network. Some Juniper Networks devices have a dedicated management port on the front panel. For other types of platforms, you can configure a management interface on one of the network interfaces. This interface can be dedicated to management or shared with other traffic. Before users can access the management interface, you must configure it. Information required to set up the management interface includes its IP address and prefix. In many types of Junos OS devices (or recommended configurations), it is not possible to route traffic between the management interface and the other ports. Therefore, you should select an IP address in a separate (logical) network, with a separate prefix (netmask).

For devices with dedicated management ports, Junos OS automatically configures the router's management Ethernet interface, as either **em0** or **fxp0**. You can use the **show interfaces terse | match fxp0** or **show interfaces terse | match em0** command to display management interface information.

To use the management Ethernet interface as a management port, you must configure its logical port, **em0.0** or **fxp0.0**, with a valid IP address.

For some SRX Series Services Gateways and J Series Services Routers, you can use any of the built-in Ethernet ports as a management interface. (Platform support depends on the Junos OS release in your installation.) To use a built-in interface as a management Ethernet interface, configure it with a valid IP address. To manually configure J-Web access, include the **interface interface-name** statement at the **[edit system services web-management http]** hierarchy level.

For PTX Series Packet Transport Routers, the Junos OS automatically creates the router's management Ethernet interface, **em0**. To use **em0** as an out-of-band management port, you must configure its logical port (for example, **em0.0**) with a valid IP address.

Internal Ethernet interfaces are automatically created to connect the Routing Engines to the Packet Forwarding Engines in the FPCs.

When you enter the **show interfaces** command on a PTX Series Packet Transport Router, the management Ethernet interface and internal Ethernet interfaces (and logical interfaces) are displayed:

```
user@host> show interfaces ?
...
em0
  em0.0
  ixgbe0
```

```

ixgbe0.0
ixgbe1
ixgbe1.0
...

```



**NOTE:** *Routing Engine upgrade considerations*—When upgrading to a Routing Engine that supports em0 from a Routing Engine that supports fxp0, you must convert existing management Ethernet interface references in the router configuration files from fxp0, fxp1, or fxp2 interfaces to em0 interfaces. Whether you use an automated script or edit the configuration files manually, you must revise any command lines that reference the fxp0 management Ethernet interface by replacing “fxp0” with “em0.”

*Reusing scripts for standalone T1600 routers on T1600 routers in a routing matrix*—Automated scripts that you have developed for standalone T1600 routers (T1600 routers that are not in a routing matrix) might contain references to the fxp0 management Ethernet interface. Before reusing the scripts on T1600 routers in a routing matrix, edit the command lines that reference the fxp0 management Ethernet interface so that the commands reference the em0 management Ethernet interface instead.

*Restricted load-sharing next hops with fxp0*—On M Series Multiservices Edge Routers and T Series Core Routers running Junos OS later than Release 7.0R2.7 or Release 7.1R2.2, the fxp0 interface does not support load-sharing next hops. This restriction only affects fxp0 routes.

*CoS not supported on fxp0*—The fxp0 interface does not support class of service (CoS).

The Routing Engines in the PTX Series Packet Transport Routers do not support the management Ethernet interface fxp0, or the internal Ethernet interfaces fxp1 or fxp2.

**Related Documentation**

- [Supported Routing Engines by Router on page 17](#)

## Understanding Interfaces on ACX Series Universal Metro Routers

The ACX Series routers support time-division multiplexing (TDM) T1 and E1 interfaces and Ethernet (1 GbE copper, 1GbE, 10 GbE, and 40 GbE fiber) interfaces to support both the legacy and evolution needs of the mobile network. Support for Power over Ethernet (PoE+) at 65 watts per port mitigates the need for additional electrical cabling for microwaves or other access interfaces.

The ACX Series routers support the following:

- TDM T1 and E1 ports:
  - The ACX1000 router contains eight T1 or E1 ports.

- The ACX2000 router contains 16 T1 or E1 ports.
- Inverse Multiplexing for ATM (IMA)



**NOTE:** ACX5048 and ACX5096 routers do not support T1 or E1 ports and Inverse Multiplexing for ATM (IMA).

- Gigabit Ethernet ports:
  - The ACX1000 router contains eight Gigabit Ethernet ports. The ACX1000 router also supports either four RJ45 (Cu) ports or installation of four Gigabit Ethernet small form-factor pluggable (SFP) transceivers.
  - The ACX2000 router contains 16 Gigabit Ethernet ports and two PoE ports. The ACX2000 router also supports installation of two Gigabit Ethernet SFP transceivers and two 10-Gigabit Ethernet SFP+ transceivers.
  - The ACX5448 router is a 10-Gigabit Ethernet enhanced small form-factor pluggable (SFP+) top-of-rack router with 48 SFP+ ports, and four 100-Gigabit Ethernet QSFP28 ports. Each SFP+ port can operate as a native 10-Gigabit Ethernet port, or as a 1-Gigabit Ethernet port when 1-Gigabit optics are inserted. The 48 ports on ACX5448 router can be configured as 1GE or 10GE modes and these ports are represented by **xe** interface type. The PIC 1 of FPC 0 has 4x100GE ports, where each port can be channelized as 1x100GE, or 1x40GE, or 4x25GE modes and these ports are represented by **et** interface type. By default, the port speed in PIC 1 is 100GE.



**NOTE:** The ACX5448 router do not support Pseudowire Services interface.



**NOTE:** 40GbE is supported only on ACX5048 and ACX5096 routers.

## T1 and E1 Time-Division Multiplexing (TDM) Interfaces

On the ACX Series routers, existing Junos OS TDM features are supported without changes to statements or functionality. The following key TDM features for T1 (**ct1**) interfaces and E1 (**ce1**) interfaces are supported:

- T1 and E1 channelization
- T1 and E1 encapsulation
- Alarms, defects, and statistics
- External and internal loopback
- TDM class of service (CoS)

T1 and E1 mode selection is at the PIC level. To set the T1 or E1 mode at the PIC level, include the **framing** statement with the **t1** or **e1** option at the [**chassis fpc slot-number pic slot-number**] hierarchy level. All ports can be T1 or E1. Mixing T1s and E1s is not supported.

### T1 or E1 BITS Interface (ACX2000)

The ACX2000 router has a T1 or E1 building-integrated timing supply (BITS) interface that you can connect to an external clock. After you connect the interface to the external clock, you can configure the BITS interface so that the BITS interface becomes a candidate source for chassis synchronization to the external clock. The frequency of the BITS interface depends on the Synchronous Ethernet equipment slave clock (EEC) selected with the **network-option** statement at the [**edit chassis synchronization**] hierarchy level.



**NOTE:** The ACX1000 router does not support the BITS interface.

### Inverse Multiplexing for ATM (IMA)

Defined by the ATM Forum, IMA specification version 1.1 is a standardized technology used to transport ATM traffic over a bundle of T1 and E1 interfaces, also known as an IMA group. Up to eight links per bundle and 16 bundles per PIC are supported. The following key IMA features are supported:

- IMA Layer 2 encapsulation
- ATM CoS
- ATM policing and shaping
- Denied packets counter in the output for the **show interfaces at-fpc/pic/port extensive** command

### Gigabit Ethernet interfaces

On the ACX Series routers, existing Junos OS Ethernet features are supported without changes to statements or functionality. The following key features are supported:

- Media type specification (ACX1000 router with Gigabit Ethernet SFP and RJ45 interfaces)
- Autonegotiation for RJ45 Gigabit Ethernet interfaces
- Event handling of SFP insertion and removal
- Explicit disabling of the physical interface
- Flow control



**NOTE:** The ACX Series router does not support flow control based on PAUSE frames.

- Loopback

- Loss of signal (LOS) alarm
- Media access control (MAC) layer features
- Maximum transmission unit (MTU)
- Remote fault notification for 10-Gigabit Ethernet interfaces
- Statistics collection and handling
- Power over Ethernet (PoE) (ACX2000 router)
- High power mode

The Gigabit Ethernet ports on the router have the capacity to work as a 1 or 10-Gigabit Ethernet interface, depending on the type of small form-factor pluggable (SFP) transceiver inserted. When you insert an SFP+ transceiver, the interface works at the 10-Gigabit speed. When you insert an SFP transceiver, the interface works at the 1-Gigabit speed. Configuration is not required because the speed is determined automatically based on the type of inserted SFP transceiver. The dual-speed interface is automatically created with the **xe** prefix, for example, **xe-4/0/0**.

The same configuration statements are used for both speeds and CoS parameters are scaled as a percentage of the port speed. To configure a dual-speed Gigabit Ethernet interface, include the **interface xe-fpc/pic/port** statement at the [edit interfaces] hierarchy level. To display the interface speed and other details, issue the **show interfaces** command.



**NOTE:** You need to use industrial grade of SFP below 0dC for ACX 1100 and ACX 2100 boards.

#### Related Documentation

- *Understanding Encapsulation on an Interface*
- *Configuring Inverse Multiplexing for ATM (IMA) on ACX Series*
- [Interface Names for ACX Series Universal Metro Routers on page 59](#)

---

## TX Matrix Plus and T1600 Router (Routing Matrix) Management Ethernet Interfaces

For TX Matrix Plus Routers and for T1600 Core Routers with RE-C1800 configured in a routing matrix, the Junos OS automatically creates the router's management Ethernet interface, **em0**. To use **em0** as a management port, you must configure its logical port, **em0.0**, with a valid IP address.

When you enter the **show interfaces** command on a TX Matrix Plus router, the management Ethernet interfaces (and logical interfaces) are displayed:

```
user@host> show interfaces ?
...
em0
em0.0
...
```



**NOTE:** The Routing Engines in the TX Matrix Plus router and in the T1600 routers with RE-C1800 configured in a routing matrix do not support the management Ethernet interface `fxp0`, or the internal Ethernet interfaces `fxp1` or `fxp2`.

#### Related Documentation

- [Understanding Internal Ethernet Interfaces on page 15](#)
- [T1600 Routers \(Routing Matrix\) Internal Ethernet Interfaces on page 17](#)
- [Displaying Internal Ethernet Interfaces for a Routing Matrix with a TX Matrix Plus Router](#)
- [show interfaces \(M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet\) on page 1426](#)

## Understanding Internal Ethernet Interfaces

Within a router or packet transport router, internal Ethernet interfaces provide communication between the Routing Engine and the Packet Forwarding Engines. The Junos OS automatically configures internal Ethernet interfaces when the Junos OS boots. The Junos OS boots the packet-forwarding component hardware. When these components are running, the Control Board uses the internal Ethernet interface to transmit hardware status information to the Routing Engine. Information transmitted includes the internal router temperature, the condition of the fans, whether an FPC has been removed or inserted, and information from the LCD on the craft interface.

To determine the supported internal Ethernet interfaces for your router, see “[Supported Routing Engines by Router](#)” on page 17.



**NOTE:** Do not modify or remove the configuration for the internal Ethernet interface that the Junos OS automatically configures. If you do, the router or packet transport router will stop functioning.

- M Series, and MX Series routers and T Series routers—The Junos OS creates the internal Ethernet interface. The internal Ethernet interface connects the Routing Engine `re0` to the Packet Forwarding Engines.

If the router has redundant Routing Engines, another internal Ethernet interface is created on each Routing Engine (`re0` and `re1`) in order to support fault tolerance, two physical links between `re0` and `re1` connect the independent control planes. If one of the links fails, both Routing Engines can use the other link for IP communication.

- TX Matrix Plus routers—On a TX Matrix Plus router, the Routing Engine and Control Board function as a unit, or host subsystem. For each host subsystem in the router, the Junos OS automatically creates two internal Ethernet interfaces, `ixgbe0` and `ixgbe1`.

The **ixgbe0** and **ixgbe1** interfaces connect the TX Matrix Plus Routing Engine to the Routing Engines of every line-card chassis (LCC) configured in the routing matrix.

The TX Matrix Plus Routing Engine connects to a high-speed switch through a 10-Gbps link within the host subsystem. The switch provides a 1-Gbps link to each T1600 Routing Engine. The 1-Gbps links are provided through the UTP Category 5 Ethernet cable connections between the TXP-CBs and the LCC-CBs in the LCCs.

- The TX Matrix Plus Routing Engine connects to a high-speed switch in the local Control Board through a 10-Gbps link within the host subsystem.
- The Gigabit Ethernet switch connects the Control Board to the remote Routing Engines of every LCC configured in the routing matrix.

If a TX Matrix Plus router contains redundant host subsystems, the independent control planes are connected by two physical links between the two 10-Gigabit Ethernet ports on their respective Routing Engines.

- The primary link to the remote Routing Engine is at the **ixgbe0** interface; the 10-Gigabit Ethernet switch on the local Control Board also connects the Routing Engine to the 10-Gigabit Ethernet port accessed by the **ixgbe1** interface on the remote Routing Engine.
- The alternate link to the remote Routing Engine is the 10-Gigabit Ethernet port at the **ixgbe1** interface. This second port connects the Routing Engine to the 10-Gigabit Ethernet switch on the remote Control Board, which connects to the 10-Gigabit Ethernet port at the **ixgbe0** interface on the remote Routing Engine.

If one of the two links between the host subsystems fails, both Routing Engines can use the other link for IP communication.

- LCC in a routing matrix—On an LCC configured in a routing matrix, the Routing Engine and Control Board function as a unit, or host subsystem. For each host subsystem in the LCC, the Junos OS automatically creates two internal Ethernet interfaces, **bcm0** and **em1**, for the two Gigabit Ethernet ports on the Routing Engine.

The **bcm0** interface connects the Routing Engine in each LCC to the Routing Engines of every other LCC configured in the routing matrix.

- The Routing Engine connects to a Gigabit Ethernet switch on the local Control Board through a.
- The switch connects the Control Board to the remote Routing Engines of every other LCC configured in the routing matrix.

If an LCC in a routing matrix contains redundant host subsystems, the independent control planes are connected by two physical links between the Gigabit Ethernet ports on their respective Routing Engines.

- The primary link to the remote Routing Engine is at the **bcm0** interface; the Gigabit Ethernet switch on the local Control Board also connects the Routing Engine to the Gigabit Ethernet port accessed by the **em1** interface on the remote Routing Engine.

- The alternate link to the remote Routing Engine is at the **em1** interface. This second port connects the Routing Engine to the Gigabit Ethernet switch on the remote Control Board, which connects to the Gigabit Ethernet port at the **bcm0** interface on the remote Routing Engine.

If one of the two links between the host subsystems fails, both Routing Engines can use the other link for IP communication.

Each router also has two serial ports, labeled *console* and *auxiliary*, for connecting tty type terminals to the router using standard PC-type tty cables. Although these ports are not network interfaces, they do provide access to the router.

#### Related Documentation

- [Understanding Permanent Interfaces on page 5](#)
- [Supported Routing Engines by Router on page 17](#)
- [TX Matrix Plus and T1600 Router \(Routing Matrix\) Management Ethernet Interfaces on page 14](#)
- [T1600 Routers \(Routing Matrix\) Internal Ethernet Interfaces on page 17](#)
- [Displaying Internal Ethernet Interfaces for a Routing Matrix with a TX Matrix Plus Router](#)
- [show interfaces \(M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet\) on page 1426](#)

## T1600 Routers (Routing Matrix) Internal Ethernet Interfaces

On a T1600 router configured in a routing matrix, the Routing Engine (RE-TXP-LCC) and Control Board (LCC-CB) function as a unit, or host subsystem. For each host subsystem in the router, the Junos OS automatically creates two internal Ethernet interfaces, **bcm0** and **em1**, for the two Gigabit Ethernet ports on the Routing Engine.

#### Related Documentation

- [Understanding Internal Ethernet Interfaces on page 15](#)
- [Displaying Internal Ethernet Interfaces for a Routing Matrix with a TX Matrix Plus Router](#)
- [show interfaces \(M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet\) on page 1426](#)

## Supported Routing Engines by Router

The following tables list the Routing Engines that each router supports, the first supported release for the Routing Engine in the specified router, the management Ethernet interface, and the internal Ethernet interfaces for each Routing Engine.

- [M7i Routing Engines on page 18](#)
- [M10i Routing Engines on page 19](#)
- [M40e Routing Engines on page 19](#)
- [M120 Routing Engines on page 19](#)

- [M320 Routing Engines on page 20](#)
- [MX5, MX10, MX40, and MX80 Routing Engine on page 21](#)
- [MX104 Routing Engines on page 21](#)
- [MX240 Routing Engines on page 21](#)
- [MX480 Routing Engines on page 22](#)
- [MX960 Routing Engines on page 23](#)
- [MX2008 Routing Engines on page 24](#)
- [MX2010 Routing Engines on page 25](#)
- [MX2020 Supported Routing Engines on page 25](#)
- [MX10003 Routing Engines on page 26](#)
- [MX10008 Routing Engines on page 26](#)
- [PTX1000 Routing Engines on page 27](#)
- [PTX3000 Routing Engines on page 27](#)
- [PTX5000 Routing Engines on page 27](#)
- [PTX10008 and PTX10016 Routing Engines on page 28](#)
- [T320 Routing Engines on page 29](#)
- [T640 Routing Engines on page 29](#)
- [T1600 Routing Engines on page 30](#)
- [T4000 Routing Engines on page 31](#)
- [TX Matrix Routing Engines on page 31](#)
- [TX Matrix Plus Routing Engines on page 32](#)
- [TX Matrix Plus \(with 3D SIBs\) Routing Engines on page 32](#)

## M7i Routing Engines

[Table 3 on page 18](#) lists the Routing Engines supported by the M7i router. The M7i router supports 32-bit Junos OS only.

**Table 3: M7i Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: <a href="#">TSB16445</a> )	RE-5.0	9.0	fxp0	fxp1
RE-850-1536 (EOL details: <a href="#">TSB15553</a> )	RE-850	7.2	fxp0	fxp1
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

## M10i Routing Engines

Table 4 on page 19 lists the Routing Engines supported by the M10i router. The M10i router supports 32-bit Junos OS only.

Table 4: M10i Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: <a href="#">TSB16445</a> )	RE-5.0	9.0	fxp0	fxp1 fxp2
RE-850-1536 (EOL details: <a href="#">TSB15553</a> )	RE-850	7.2	fxp0	fxp1 fxp2
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

## M40e Routing Engines

Table 5 on page 19 lists the Routing Engines supported by the M40e router.

Table 5: M40e Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-A-1000-2048	RE-A-1000	8.1	fxp0	fxp1 fxp2

## M120 Routing Engines

Table 6 on page 19 lists the Routing Engines supported by the M120 router.

Table 6: M120 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1000-2048	RE-A-1000	8.0R2	–	fxp0	fxp1 fxp2

Table 6: M120 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-2000-4096	RE-A-2000	8.0R2	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	fxp1 fxp2
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	fxp1 fxp2
RE-A-1800X4-16G	RE-A-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1

## M320 Routing Engines

Table 7 on page 20 lists the Routing Engines supported by the M320 router.

Table 7: M320 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 bcm0
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 bcm0
RE-A-1800X4-8G	RE-A-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> <li>12.2</li> </ul>	10.4	fxp0	em0 em1

## MX5, MX10, MX40, and MX80 Routing Engine

Table 8 on page 21 lists the Routing Engines supported by the MX5, MX10, MX40, and MX80 routers.

**Table 8: MX5, MX10, MX40, and MX80 Routing Engine**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	<b>Routing Engine RE-MX80</b>	12.3	-	fxp0	em0 em1  <small>NOTE: em1 is used to communicate with the MS-MIC when it is inserted.</small>

## MX104 Routing Engines

Table 9 on page 21 lists the Routing Engines supported by MX104 routers.

**Table 9: MX104 Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-MX104	<b>Routing Engine</b>	13.2	—	fxp0	fxp1 fxp2

## MX240 Routing Engines

Table 10 on page 21 lists the Routing Engines supported by MX240 routers.

**Table 10: MX240 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: <a href="#">TSB16556</a> )	<b>RE-S-1300</b>	9.0	—	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: <a href="#">TSB16735</a> )	<b>RE-S-2000</b>	9.0	—	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: <a href="#">TSB16556</a> )	<b>RE-S-1800x2</b>	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1

Table 10: MX240 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800x2-16G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800x4-8G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800x4-16G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800x4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0, em1
RE-S-X6-64G	RE-S-2X00x6	—	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	—	18.1R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	—	18.1R1	fxp0	ixlv0, igb0 em0

## MX480 Routing Engines

Table 11 on page 22 lists the Routing Engines supported by MX480 routers.

Table 11: MX480 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: <a href="#">TSB16556</a> )	RE-S-1300	8.4	—	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: <a href="#">TSB16735</a> )	RE-S-2000	8.4	—	fxp0	fxp1 fxp2
RE-S-1800x2-8G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1

Table 11: MX480 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X2-16G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	—	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	—	18.1R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	—	18.1R1	fxp0	ixlv0, igb0 em0

## MX960 Routing Engines

Table 12 on page 23 lists the Routing Engines supported by MX960 routers.

Table 12: MX960 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: <a href="#">TSB16556</a> )	RE-S-1300	8.2	—	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: <a href="#">TSB16735</a> )	RE-S-2000	8.2	—	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1

Table 12: MX960 Supported Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X2-16G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	—	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G (For MX960-VC)	RE-S-2X00x6	—	17.1R2	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	—	18.1R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	—	18.1R1	fxp0	ixlv0, igb0 em0

## MX2008 Routing Engines

Table 13 on page 24 lists the Routing Engines supported by MX2008 routers.

Table 13: MX2008 Supported Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-64G	RE-MX2008-X8-64G	15.1F7	fxp0	ixlv0 ixlv1
REMX2008-X8-64G-LT	REMX2008-X8-64G-LT	17.2R1	fxp0	ixlv0 ixlv1

**Table 13: MX2008 Supported Routing Engines (continued)**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-128G	RE-MX2008-X8-128G	18.2R1	fxp0	ixlv0 ixlv1

## MX2010 Routing Engines

Table 14 on page 25 lists the Routing Engines supported by MX2010 routers.

**Table 14: MX2010 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> <li>15.1F5-S1</li> <li>16.1R2</li> <li>16.2R1</li> </ul>	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-64G-LT	RE-S-2X00x8	17.2R1	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-128G	RE-MX200X8-128G	18.1R1	fxp0	ixlv0 ixlv1

## MX2020 Supported Routing Engines

Table 15 on page 26 lists the Routing Engines supported by MX2020 routers.

**Table 15: MX2020 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> <li>15.1F5-S1</li> <li>16.1R2</li> <li>16.2R1</li> </ul>	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-64G-LT	RE-S-2X00x8	17.2R1	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-128G	RE-MX200X8-128G	18.1R1	fxp0	ixlv0 ixlv1 em0

## MX10003 Routing Engines

Table 16 on page 26 lists the Routing Engines supported by MX10003 routers.

**Table 16: MX10003 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10003-RE1	RE-S-2X00x6	17.3R1	fxp0	em3 em4
JNP10003-RE1-LT	RE-S-1600x8	18.1R1	fxp0	em3 em4

## MX10008 Routing Engines

Table 17 on page 27 lists the Routing Engines supported on the MX10008 router.

Table 17: MX10008 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1	RE X10	18.2R1	em0	bme0 bme1

## PTX1000 Routing Engines

Table 18 on page 27 lists the Routing Engine supported on the PTX1000.



**NOTE:** The PTX1000 supports 64-bit Junos OS only.

Table 18: PTX1000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-PTX1000	<ul style="list-style-type: none"> <li>16.1X65-D30</li> <li>17.2R1</li> </ul>	em0	bme0 em1

## PTX3000 Routing Engines

Table 19 on page 27 lists the Routing Engines supported on the PTX3000.



**NOTE:** The PTX3000 supports 64-bit Junos OS only.

Table 19: PTX3000 Routing Engines

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	13.2R2	em0	ixgbe0 ixgbe1
RCB-PTX-X6-32G	RE-PTX-2X00x6	16.1R4 17.1R1 This Routing Engine does not support Junos OS Release 16.2.	em0	ixlv0 ixlv1

## PTX5000 Routing Engines

Table 20 on page 28 lists the Routing Engines supported on the PTX5000.

**NOTE:**

- PTX5000 supports 64-bit Junos OS only.
- The PTX5000 router supports two midplanes. The midplane identified as **Midplane-8S** in the CLI output is supported in Junos OS releases, 12.1X48, 12.3, and 13.2. The enhanced midplane, identified as **Midplane-8SeP** is supported from Junos OS release 14.1 onwards.

The RE-DUO-2600 routing engine with Junos OS 13.2 or earlier is not supported on the PTX5000BASE2 midplane.

**Table 20: PTX5000 Routing Engines**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	12.1X48	em0	ixgbe0
		12.3		ixgbe1
		13.2		
		NOTE: The PTX5000 does not support Junos OS Releases 12.1, 12.2, or 13.1.		
RE-PTX-X8-64G	RE-PTX-2X00x8	15.1F4	em0	ixlv0
		16.1R1		ixlv1
				em1
RE-PTX-X8-128G	RE-PTX-2X00x8-128G	18.1R1	em0	ixlv0
				ixlv1
				em1

**PTX10008 and PTX10016 Routing Engines**

Table 21 on page 28 lists the Routing Engines supported on the PTX10008 and PTX10016 routers.

**Table 21: PTX10008 and PTX10016 Routing Engines**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE0	RE-PTX-2X00x4	17.2R1	em0, em1	bme0
				bme1

*Table 21: PTX10008 and PTX10016 Routing Engines (continued)*

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1 (on PTX10008)	RE X10	18.2R1	em0	bme0 bme1

## T320 Routing Engines

Table 22 on page 29 lists the Routing Engines supported by the T320 router.

*Table 22: T320 Routing Engines*

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0	6.2	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	fxp0	fxp1 fxp2

The T320 router supports the CB-T control board.

## T640 Routing Engines

Table 23 on page 29 lists the Routing Engines supported by the T640 router.

*Table 23: T640 Routing Engines*

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	5.3	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0

Table 23: T640 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	<b>RE-DUO-1800</b>	32-bit Junos OS on a standalone T640 router: 11.2	64-bit Junos OS on a standalone T640 router: 11.3	em0	bcm0
		32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a T640 router in a routing matrix: 11.4R9		em1
RE-DUO-C1800-16G	<b>RE-DUO-1800</b>	32-bit Junos OS on a standalone T640 router: 11.4R2	64-bit Junos OS on a standalone T640 router: 11.4R2	em0	bcm0
		32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a T640 router in a routing matrix: 11.4R9		em1

The T640 standalone router supports CB-T control board and CB-LCC in a T640 routing matrix.

## T1600 Routing Engines

Table 24 on page 30 lists the Routing Engines supported by the T1600 router.



**NOTE:** (Two RE-DUO-C1800-8G or two RE-DUO-C1800-16G are required to connect to a Routing Matrix)

Table 24: T1600 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	<b>RE-3.0</b> or <b>RE-3.0 (RE-600)</b>	8.5	—	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	<b>RE-4.0 (RE-1600)</b>	8.5	—	fxp0	fxp1 fxp2
RE-A-2000-4096	<b>RE-A-2000</b>	8.5	—	fxp0	em0 bcm0

Table 24: T1600 Routing Engines (continued)

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-TXP-LCC or RE-DUO-1800	32-bit Junos OS on a T1600 router in a routing matrix: 9.6  <i>NOTE:</i> Junos OS Releases 9.6 through 10.4 support RE-DUO-C1800-8G only during upgrade to a line-card chassis (LCC) in a routing matrix.  32-bit Junos OS on a standalone T1600 router: 11.1	64-bit Junos OS on a T1600 router in a routing matrix: 9.6  64-bit Junos OS on a standalone T1600 router: 11.1	em0	bcm0  em1
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T1600 router: 11.4R2  32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	64-bit Junos OS on a standalone T1600 router: 11.4R2  64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	em0	bcm0  em1

## T4000 Routing Engines

Table 25 on page 31 lists the Routing Engines supported by the T4000 router.



**NOTE:** The T4000 router supports 64-bit Junos OS only.

Table 25: T4000 Routing Engines

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	Standalone T4000 router: 12.1  T4000 router in a routing matrix: 13.1	em0	bcm0  em1
RE-DUO-C1800-16G	RE-DUO-1800	Standalone T4000 router: 12.1R2  T4000 router in a routing matrix: 13.1	em0	bcm0  em1

The T4000 router supports the CB-LCC control board.

## TX Matrix Routing Engines

Table 26 on page 32 lists the Routing Engines supported by the TX Matrix router.

**Table 26: TX Matrix Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	7.0	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0 (RE-1600)	7.0	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1

The TXP router supports two control boards, CB-TX and CB-LCC. The CB-LCC is required for both RE-DUO-C1800-8G and RE-DUO-C1800-16G Routing Engines.

## TX Matrix Plus Routing Engines

Table 27 on page 32 lists the Routing Engines supported by the TX Matrix Plus router.

**Table 27: TX Matrix Plus Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	32-bit Junos OS: 9.6	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

The TX Matrix Plus router supports the CB-TXP control board.

## TX Matrix Plus (with 3D SIBs) Routing Engines

Table 28 on page 33 lists the Routing Engines supported by the TX Matrix Plus router with 3D SIBs.

Table 28: Routing Engines on TX Matrix Plus with 3D SIBs

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	-	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

**Related Documentation**

- [Routing Engine Specifications](#)
- [Understanding Internal Ethernet Interfaces on page 15](#)
- [Understanding Management Ethernet Interfaces on page 10](#)

## Interface Naming Overview

Each interface has an interface name, which specifies the media type, the slot in which the FPC or DPC is located, the location on the FPC where the PIC is installed, and the PIC or DPC port. The interface name uniquely identifies an individual network connector in the system. You use the interface name when configuring interfaces and when enabling various functions and properties, such as routing protocols, on individual interfaces. The system uses the interface name when displaying information about the interface, for example, in the **show interfaces** command.

The interface name is represented by a physical part, a channel part, and a logical part in the following format:

**physical<:channel>.logical**

The channel part of the name is optional for all interfaces except channelized DS3, E1, OC12, and STM1 interfaces.

The following sections provide interface naming configuration guidelines:

- [Physical Part of an Interface Name on page 33](#)
- [Logical Part of an Interface Name on page 39](#)
- [Separators in an Interface Name on page 39](#)
- [Channel Part of an Interface Name on page 39](#)
- [Interface Naming for a Routing Matrix Based on a TX Matrix Router on page 40](#)
- [Interface Naming for a Routing Matrix Based on a TX Matrix Plus Router on page 42](#)
- [Chassis Interface Naming on page 45](#)
- [Examples: Interface Naming on page 45](#)

### Physical Part of an Interface Name

The physical part of an interface name identifies the physical device, which corresponds to a single physical network connector.

**NOTE:**

The internal interface is dependent on the Routing Engine. To identify if the Routing Engine is using this type of interface, use the following command:

```
user@host> show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
pfe-1/0/0	up	up			
pfe-1/0/0.16383	up	up	inet		
			inet6		
pfh-1/0/0	up	up			
pfh-1/0/0.16383	up	up	inet		
[.....]					
bcm0	up	up	<-----		
bcm0.0	up	up	inet	10.0.0.1/8	
[.....]					
lsi	up	up			
mtun	up	up			
pimd	up	up			
pime	up	up			
tap	up	up			

For more information on the Routing Engines that each chassis supports, the first supported release for the Routing Engine in the specified chassis, the management Ethernet interface, and the internal Ethernet interfaces for each Routing Engine, please refer the link titled *Supported Routing Engines by Chassis* under Related Documentation section.

This part of the interface name has the following format:

*type-fpc/pic/port*

**type** is the media type, which identifies the network device that can be one of the following:

- **ae**—Aggregated Ethernet interface. This is a virtual aggregated link and has a different naming format from most PICs; for more information, see *Aggregated Ethernet Interfaces Overview*.
- **as**—Aggregated SONET/SDH interface. This is a virtual aggregated link and has a different naming format from most PICs; for more information, see *Configuring Aggregated SONET/SDH Interfaces*.
- **at**—ATM1 or ATM2 intelligent queuing (IQ) interface or a virtual ATM interface on a circuit emulation (CE) interface.
- **bcm**—The bcm0 internal Ethernet process is supported on specific Routing engines for various M series and T series routers. For more information please refer the link titled *Supported Routing Engines by Chassis* under Related Documentation section.
- **cau4**—Channelized AU-4 IQ interface (configured on the Channelized STM1 IQ or IQE PIC or Channelized OC12 IQ and IQE PICs).
- **ce1**—Channelized E1 IQ interface (configured on the Channelized E1 IQ PIC or Channelized STM1 IQ or IQE PIC).

- **ci**—Container interface.
- **coc1**—Channelized OC1 IQ interface (configured on the Channelized OC12 IQ and IQE or Channelized OC3 IQ and IQE PICs).
- **coc3**—Channelized OC3 IQ interface (configured on the Channelized OC3 IQ and IQE PICs).
- **coc12**—Channelized OC12 IQ interface (configured on the Channelized OC12 IQ and IQE PICs).
- **coc48**—Channelized OC48 interface (configured on the Channelized OC48 and Channelized OC48 IQE PICs).
- **cp**—Collector interface (configured on the Monitoring Services II PIC).
- **cstm1**—Channelized STM1 IQ interface (configured on the Channelized STM1 IQ or IQE PIC).
- **cstm4**—Channelized STM4 IQ interface (configured on the Channelized OC12 IQ and IQE PICs).
- **cstm16**—Channelized STM16 IQ interface (configured on the Channelized OC48/STM16 and Channelized OC48/STM16 IQE PICs).
- **ct1**—Channelized T1 IQ interface (configured on the Channelized DS3 IQ and IQE PICs, Channelized OC3 IQ and IQE PICs, Channelized OC12 IQ and IQE PICs, or Channelized T1 IQ PIC).
- **ct3**—Channelized T3 IQ interface (configured on the Channelized DS3 IQ and IQE PICs, Channelized OC3 IQ and IQE PICs, or Channelized OC12 IQ and IQE PICs).
- **demux**—Interface that supports logical IP interfaces that use the IP source or destination address to demultiplex received packets. Only one demux interface (**demux0**) exists per chassis. All demux logical interfaces must be associated with an underlying logical interface.
- **dfc**—Interface that supports dynamic flow capture processing on T Series or M320 routers containing one or more Monitoring Services III PICs. Dynamic flow capture enables you to capture packet flows on the basis of dynamic filtering criteria. Specifically, you can use this feature to forward passively monitored packet flows that match a particular filter list to one or more destinations using an on-demand control protocol.
- **ds**—DS0 interface (configured on the Multichannel DS3 PIC, Channelized E1 PIC, Channelized OC3 IQ and IQE PICs, Channelized OC12 IQ and IQE PICs, Channelized DS3 IQ and IQE PICs, Channelized E1 IQ PIC, Channelized STM1 IQ or IQE PIC, or Channelized T1 IQ).
- **dsc**—Discard interface.
- **e1**—E1 interface (including channelized STM1-to-E1 interfaces).
- **e3**—E3 interface (including E3 IQ interfaces).
- **em**—Management and internal Ethernet interfaces. For M Series routers, MX Series routers, T Series routers, and TX Series routers, you can use the **show chassis hardware**

command to display hardware information about the router, including its Routing Engine model. To determine which management interface is supported on your router and Routing Engine combination, see [“Understanding Management Ethernet Interfaces” on page 10](#) and [“Supported Routing Engines by Router” on page 17](#).

- **es**—Encryption interface.
- **et**—100-Gigabit Ethernet interfaces (10, 40, and 100-Gigabit Ethernet interface for PTX Series Packet Transport Routers only).
- **fe**—Fast Ethernet interface.
- **fxp**—Management and internal Ethernet interfaces. For M Series routers, MX Series routers, T Series routers, and TX Series routers, you can use the **show chassis hardware** command to display hardware information about the router, including its Routing Engine model. To determine which management interface is supported on your router and Routing Engine combination, see [“Understanding Management Ethernet Interfaces” on page 10](#) and [“Supported Routing Engines by Router” on page 17](#).
- **ge**—Gigabit Ethernet interface.



**NOTE:**

- The XENPAK 10-Gigabit Ethernet interface PIC, which is supported only on M series routers, is configured using the **ge** interface naming convention instead of the **xe** interface naming convention. Refer the following show commands for more information:

```
user@host> show chassis hardware
```

```
..
FPC 4          REV 02   710-015839   CZ1853          M120 FPC
Type 3
  PIC 0        REV 09   750-009567   NH1857          1x
10GE(LAN), XENPAK
  Xcvr 0       REV 01   740-012045   535TFZX6        XENPAK-SR
```

```
user@host> show configuration interfaces ge-4/0/0
```

```
unit 0 {
  family inet {
    address 100.0.0.1/24;
  }
}
```

- In MX and SRX series devices, the 1 and 10-Gigabit SFP or SFP+ optical interfaces are always named as **xe** even if a 1-Gigabit SFP is inserted. However, in EX and QFX series devices, the interface name is shown as **ge** or **xe** based on the speed of the optical device inserted.

- **gr**—Generic routing encapsulation (GRE) tunnel interface.
- **gre**—Internally generated interface that is configurable only as the control channel for Generalized MPLS (GMPLS). For more information about GMPLS, see the *Junos OS MPLS Applications Library for Routing Devices*.



**NOTE:** You can configure GRE interfaces (`gre-x/y/z`) only for GMPLS control channels. GRE interfaces are not supported or configurable for other applications..

- **ip**—IP-over-IP encapsulation tunnel interface.
- **ipip**—Internally generated interface that is not configurable.
- **ixgbe**—The internal Ethernet process `ixgbe0` and `ixgbe1` are used by the RE-DUO-C2600-16G Routing Engine, which is supported on TX Matrix Plus and PTX5000.
- **iw**—Logical interfaces associated with the endpoints of Layer 2 circuit and Layer 2 VPN connections (pseudowire stitching Layer 2 VPNs). For more information about VPNs, see the *Junos OS VPNs Library for Routing Devices*.
- **lc**—Internally generated interface that is not configurable.
- **lo**—Loopback interface. The Junos OS automatically configures one loopback interface (`lo0`). The logical interface **lo0.16383** is a nonconfigurable interface for router control traffic.
- **ls**—Link services interface.
- **lsi**—Internally generated interface that is not configurable.
- **ml**—Multilink interface (including Multilink Frame Relay and MLPPP).
- **mo**—Monitoring services interface (including monitoring services and monitoring services II). The logical interface **mo-fpc/pic/port.16383** is an internally generated, nonconfigurable interface for router control traffic.
- **ms**—Multiservices interface.
- **mt**—Multicast tunnel interface (internal router interface for VPNs). If your router has a Tunnel PIC, the Junos OS automatically configures one multicast tunnel interface (**mt**) for each virtual private network (VPN) you configure. Although it is not necessary to configure multicast interfaces, you can use the **multicast-only** statement to configure the unit and family so that the tunnel can transmit and receive multicast traffic only. For more information, see [multicast-only](#).
- **mtun**—Internally generated interface that is not configurable.
- **oc3**—OC3 IQ interface (configured on the Channelized OC12 IQ and IQE PICs or Channelized OC3 IQ and IQE PICs).
- **pd**—Interface on the rendezvous point (RP) that de-encapsulates packets.
- **pe**—Interface on the first-hop PIM router that encapsulates packets destined for the RP router.
- **pimd**—Internally generated interface that is not configurable.
- **pime**—Internally generated interface that is not configurable.

- **rlsq**—Container interface, numbered from 0 through 127, used to tie the primary and secondary LSQ PICs together in high availability configurations. Any failure of the primary PIC results in a switch to the secondary PIC and vice versa.
- **rms**—Redundant interface for two multiservices interfaces.
- **rsp**—Redundant virtual interface for the adaptive services interface.
- **se**—Serial interface (including EIA-530, V.35, and X.21 interfaces).
- **si**—Services-inline interface, which is hosted on a Trio-based line card.
- **so**—SONET/SDH interface.
- **sp**—Adaptive services interface. The logical interface **sp-fpc/pic/port.16383** is an internally generated, nonconfigurable interface for router control traffic.
- **stm1**—STM1 interface (configured on the OC3/STM1 interfaces).
- **stm4**—STM4 interface (configured on the OC12/STM4 interfaces).
- **stm16**—STM16 interface (configured on the OC48/STM16 interfaces).
- **t1**—T1 interface (including channelized DS3-to-DS1 interfaces).
- **t3**—T3 interface (including channelized OC12-to-DS3 interfaces).
- **tap**—Internally generated interface that is not configurable.
- **umd**—USB modem interface.
- **vsp**—Voice services interface.
- **vc4**—Virtually concatenated interface.
- **vt**—Virtual loopback tunnel interface.
- **xe**—10-Gigabit Ethernet interface. Some older 10-Gigabit Ethernet interfaces use the **ge** media type (rather than **xe**) to identify the physical part of the network device.
- **xt**—Logical interface for Protected System Domains to establish a Layer 2 tunnel connection.

**fpc** identifies the number of the FPC or DPC card on which the physical interface is located. Specifically, it is the number of the slot in which the card is installed.

M40, M40e, M160, M320, M120, T320, T640, and T1600 routers each have eight FPC slots that are numbered 0 through 7, from left to right as you are facing the front of the chassis. For information about compatible FPCs and PICs, see the hardware guide for your router.

On PTX1000 routers, the FPC number is always 0.

The M20 router has four FPC slots that are numbered 0 through 3, from top to bottom as you are facing the front of the chassis. The slot number is printed adjacent to each slot.

MX Series routers support DPCs, FPCs, and Modular Interface Cards (MICs). For information about compatible DPCs, FPCs, PICs, and MICs, see the [MX Series Interface Module Reference](#).

For M5, M7i, M10, and M10i routers, the FPCs are built into the chassis; you install the PICs into the chassis.

The M5 and M7i routers have space for up to four PICs. The M7i router also comes with an integrated Tunnel PIC, or an optional integrated AS PIC, or an optional integrated MS PIC.

The M10 and M10i routers have space for up to eight PICs.

A routing matrix can have up to 32 FPCs (numbered 0 through 31).

For more information about interface naming for a routing matrix, see “[Interface Naming for a Routing Matrix Based on a TX Matrix Router](#)” on page 40.

**pic** identifies the number of the PIC on which the physical interface is located. Specifically, it is the number of the PIC location on the FPC. FPCs with four PIC slots are numbered 0 through 3. FPCs with three PIC slots are numbered 0 through 2. The PIC location is printed on the FPC carrier board. For PICs that occupy more than one PIC slot, the lower PIC slot number identifies the PIC location.

**port** identifies a specific port on a PIC or DPC. The number of ports varies depending on the PIC. The port numbers are printed on the PIC.

## Logical Part of an Interface Name

The logical unit part of the interface name corresponds to the logical unit number, which can be a number from 0 through 16,385 for all interface types except demux and PPPoE. For these two interface types only, the range is 0 through 65,535.

In the virtual part of the name, a period (.) separates the port and logical unit numbers:

- Other platforms:

***type-fpc/pic/port.logical***

## Separators in an Interface Name

There is a separator between each element of an interface name.

In the physical part of the name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers.

In the virtual part of the name, a period (.) separates the channel and logical unit numbers.

A colon (:) separates the physical and virtual parts of the interface name.

## Channel Part of an Interface Name

The channel identifier part of the interface name is required only on channelized interfaces. For channelized interfaces, channel 0 identifies the first channelized interface. For

channelized IQ and channelized IQE interfaces, channel 1 identifies the first channelized interface. A nonconcatenated (that is, channelized) SONET/SDH OC48 interface has four OC12 channels, numbered 0 through 3.

To determine which types of channelized PICs are currently installed in the router, use the **show chassis hardware** command from the top level of the command-line interface (CLI). Channelized IQ and IQE PICs are listed in the output with “intelligent queuing IQ” or “enhanced intelligent queuing IQE” in the description. For more information, see *Channelized Interfaces Overview*.

For ISDN interfaces, you specify the B-channel in the form **bc-pim/0/port:n**. *n* is the B-channel ID and can be 1 or 2. You specify the D-channel in the form **dc-pim/0/port:0**.



**NOTE:** For ISDN, the B-channel and D-channel interfaces do not have any configurable parameters. However, when interface statistics are displayed, B-channel and D-channel interfaces have statistical values.



**NOTE:** In the Junos OS implementation, the term *logical interfaces* generally refers to interfaces you configure by including the unit statement at the [edit interfaces *interface-name*] hierarchy level. Logical interfaces have the *.logical* descriptor at the end of the interface name, as in ge-0/0/0.1 or t1-0/0/0:0.1, where the logical unit number is 1.


Although channelized interfaces are generally thought of as logical or virtual, the Junos OS sees T3, T1, and NxDS0 interfaces within a channelized IQ or IQE PIC as physical interfaces. For example, both t3-0/0/0 and t3-0/0/0:1 are treated as physical interfaces by the Junos OS. In contrast, t3-0/0/0.2 and t3-0/0/0:1.2 are considered logical interfaces because they have the .2 at the end of the interface names.

---

## Interface Naming for a Routing Matrix Based on a TX Matrix Router

A routing matrix based on a Juniper Networks TX Matrix router is a multichassis architecture composed of one TX Matrix router and from one to four interconnected T640 routers. From the perspective of the user interface, the routing matrix appears as a single router. The TX Matrix router controls all the T640 routers, as shown in [Figure 3 on page 41](#).

Figure 3: Routing Matrix

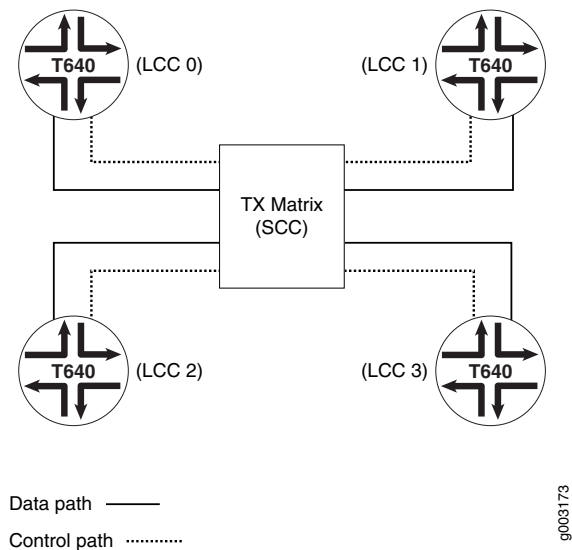

A TX Matrix router is also referred to as a *switch-card chassis* (SCC). The CLI uses **scc** to refer to the TX Matrix router. A T640 router in a routing matrix is also referred to as a *line-card chassis* (LCC). The CLI uses **lcc** as a prefix to refer to a specific T640 router.

LCCs are assigned numbers 0 through 3, depending on the hardware setup and connectivity to the TX Matrix router. For more information, see the [TX Matrix Router Hardware Guide](#). A routing matrix can have up to four T640 routers, and each T640 router has up to eight FPCs. Therefore, the routing matrix as a whole can have up to 32 FPCs (0 through 31).

In the Junos OS CLI, an interface name has the following format:

*type-fpc/pic/port*

When you specify the **fpc** number for a T640 router in a routing matrix, the Junos OS determines which T640 router contains the specified FPC based on the following assignment:

- On LCC 0, FPC hardware slots 0 through 7 are configured as 0 through 7.
- On LCC 1, FPC hardware slots 0 through 7 are configured as 8 through 15.
- On LCC 2, FPC hardware slots 0 through 7 are configured as 16 through 23.
- On LCC 3, FPC hardware slots 0 through 7 are configured as 24 through 31.

For example, the 1 in **se-1/0/0** refers to FPC hardware slot 1 on the T640 router labeled **lcc0**. The 11 in **t1-11/2/0** refers to FPC hardware slot 3 on the T640 router labeled **lcc1**. The 20 in **so-20/0/1** refers to FPC hardware slot 4 on the T640 router labeled **lcc2**. The 31 in **t3-31/1/0** refers to FPC hardware slot 7 on the T640 router labeled **lcc3**.

[Table 29 on page 42](#) summarizes the FPC numbering for a T640 router in a routing matrix.

*Table 29: FPC Numbering for T640 Routers in a Routing Matrix*

LCC Numbers Assigned to the T640 Router	Configuration Numbers
0	0 through 7
1	8 through 15
2	16 through 23
3	24 through 31

Table 30 on page 42 lists each FPC hardware slot and the corresponding configuration numbers for LCCs 0 through 3.


*Table 30: One-to-One FPC Numbering for T640 Routers in a Routing Matrix*

FPC Numbering	T640 Routers							
LCC 0								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	0	1	2	3	4	5	6	7
LCC 1								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	8	9	10	11	12	13	14	15
LCC 2								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	16	17	18	19	20	21	22	23
LCC 3								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	24	25	26	27	28	29	30	31

## Interface Naming for a Routing Matrix Based on a TX Matrix Plus Router

A routing matrix based on a Juniper Networks TX Matrix Plus Router is a multichassis architecture composed of one TX Matrix Plus router and from one to four interconnected T1600 routers. From the perspective of the user interface, the routing matrix appears as a single router. The TX Matrix Plus router controls all the T1600 routers, as shown in Figure 4 on page 43.

Figure 4: Routing Matrix Based on a TX Matrix Plus Router

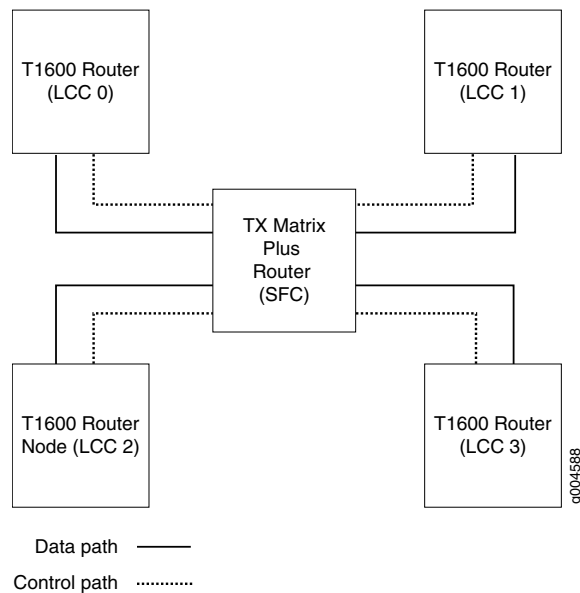

A TX Matrix Plus router is also referred to as a *switch-fabric chassis* (SFC). The CLI uses **sfc** to refer to the TX Matrix Plus router. A T1600 router in a routing matrix is also referred to as a *line-card chassis* (LCC). The CLI uses **lcc** as a prefix to refer to a specific T1600 router.

LCCs are assigned numbers, 0 through 3, depending on the hardware setup and connectivity to the TX Matrix Plus router. For more information, see the *TX Matrix Plus Router Hardware Guide*. A routing matrix based on a TX Matrix Plus router can have up to four T1600 routers, and each T1600 router has up to eight FPCs. Therefore, the routing matrix as a whole can have up to 32 FPCs (0 through 31).

In the Junos OS CLI, an interface name has the following format:

*type-fpc/pic/port*

When you specify the **fpc** number for a T1600 router in a routing matrix, the Junos OS determines which T1600 router contains the specified FPC based on the following assignment:

- On LCC 0, FPC hardware slots 0 through 7 are configured as 0 through 7.
- On LCC 1, FPC hardware slots 0 through 7 are configured as 8 through 15.
- On LCC 2, FPC hardware slots 0 through 7 are configured as 16 through 23.
- On LCC 3, FPC hardware slots 0 through 7 are configured as 24 through 31.

For example, the 1 in **se-1/0/0** refers to FPC hardware slot 1 on the T1600 router labeled **lcc0**. The 11 in **t1-11/2/0** refers to FPC hardware slot 3 on the T1600 router labeled **lcc1**. The 20 in **so-20/0/1** refers to FPC hardware slot 4 on the T1600 router labeled **lcc2**. The 31 in **t3-31/1/0** refers to FPC hardware slot 7 on the T1600 router labeled **lcc3**.

Table 31 on page 44 summarizes the FPC numbering for a routing matrix based on a TX Matrix Plus router.

**Table 31: FPC Numbering for T1600 Routers in a Routing Matrix**

LCC Numbers Assigned to the T1600 Router	Configuration Numbers
0	0 through 7
1	8 through 15
2	16 through 23
3	24 through 31

Table 32 on page 44 lists each FPC hardware slot and the corresponding configuration numbers for LCCs 0 through 3.

**Table 32: One-to-One FPC Numbering for T1600 Routers in a Routing Matrix**

FPC Numbering	T1600 Routers							
LCC 0								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	0	1	2	3	4	5	6	7
LCC 1								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	8	9	10	11	12	13	14	15
LCC 2								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	16	17	18	19	20	21	22	23
LCC 3								
Hardware Slots	0	1	2	3	4	5	6	7
Configuration Numbers	24	25	26	27	28	29	30	31

## Chassis Interface Naming

You configure some PIC properties, such as framing, at the **[edit chassis]** hierarchy level. Chassis interface naming varies depending on the routing hardware.

- To configure PIC properties for a standalone router, you must specify the FPC and PIC numbers, as follows:

```
[edit chassis]
fpc slot-number {
  pic pic-number {
    ...
  }
}
```

- To configure PIC properties for a T640 or T1600 router configured in a routing matrix, you must specify the LCC, FPC, and PIC numbers, as follows:

```
[edit chassis]
lcc lcc-number {
  fpc slot-number { # Use the hardware FPC slot number
    pic pic-number {
      ...
    }
  }
}
```


For the FPC slot in a T640 router in a routing matrix, specify the actual hardware slot number, as labeled on the T640 router chassis. Do not use the corresponding software FPC configuration numbers shown in [Table 30 on page 42](#).

For the FPC slot in a T1600 router in a routing matrix, specify the actual hardware slot number, as labeled on the T1600 router chassis. Do not use the corresponding software FPC configuration numbers shown in [Table 31 on page 44](#).

For more information about the **[edit chassis]** hierarchy, see the *Junos OS Administration Library*.

## Examples: Interface Naming

This section provides examples of naming interfaces. For an illustration of where slots, PICs, and ports are located, see [Figure 5 on page 46](#).

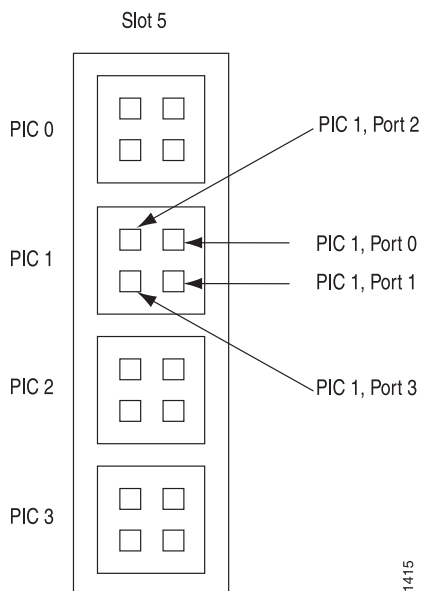*Figure 5: Interface Slot, PIC, and Port Locations*

For an FPC in slot 1 with two OC3 SONET/SDH PICs in PIC positions 0 and 1, each PIC with two ports uses the following names:

```
so-1/0/0.0
so-1/0/1.0
so-1/1/0.0
so-1/1/1.0
```

An OC48 SONET/SDH PIC in slot 1 and in concatenated mode appears as a single FPC with a single PIC, which has a single port. If this interface has a single logical unit, it has the following name:

```
so-1/0/0.0
```

An OC48 SONET/SDH PIC in slot 1 and in channelized mode has a number for each channel. For example:

```
so-1/0/0:0
so-1/0/0:1
```

For an FPC in slot 1 with a Channelized OC12 PIC in PIC position 2, the DS3 channels have the following names:

```
t3-1/2/0:0
t3-1/2/0:1
t3-1/2/0:2
...
t3-1/2/0:11
```

For an FPC in slot 1 with four OC12 ATM PICs (the FPC is fully populated), the four PICs, each with a single port and a single logical unit, have the following names:

```
at-1/0/0.0
at-1/1/0.0
at-1/2/0.0
```

at-1/3/0.0

In a routing matrix on the T640 router labeled **lcc1**, for an FPC in slot 5 with four SONET OC192 PICs, the four PICs, each with a single port and a single logical unit, have the following names:

so-13/0/0.0  
so-13/1/0.0  
so-13/2/0.0  
so-13/3/0.0

For an FPC in slot 1 with one 4-port ISDN BRI interface card, port 4 has the following name:

br-1/0/4

The first B-channel, the second B-channel, and the control channel have the following names:

bc-1/0/4:1  
bc-1/0/4:2  
dc-1/0/4:0

- Related Documentation**
- [Router Interfaces Overview on page 4](#)
  - [Physical Part of an Interface Name on page 59](#)
  - [Supported Routing Engines by Chassis](#)

## Interface Encapsulations Overview

Table 33 on page 47 lists encapsulation support by interface type.

*Table 33: Encapsulation Support by Interface Type*

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>ae</b> —Aggregated Ethernet interface	<b>ethernet-ccc</b> —Ethernet cross-connect	<b>dix</b> —Ethernet DIXv2 (RFC 894)
	<b>extended-vlan-ccc</b> —Nonstandard TPID tagging for a cross-connect	<b>vlan-ccc</b> —802.1Q tagging for a cross-connect
	<b>extended-vlan-vpls</b> —Extended VLAN virtual private LAN service	
	<b>flexible-ethernet-services</b> —Allows per-unit Ethernet encapsulation configuration	
	<b>vlan-ccc</b> —802.1Q tagging for a cross-connect	
	<b>ethernet-vpls</b> —Ethernet virtual private LAN service	
	<b>vlan-vpls</b> —VLAN virtual private LAN service	

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>as</b> —Aggregated SONET/SDH interface	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing <b>ppp</b> —Serial PPP device	NA
<b>at</b> —ATM1 interface	<b>atm-ccc-cell-relay</b> —ATM cell relay encapsulation for a cross-connect <b>atm-pvc</b> —ATM permanent virtual circuits <b>ethernet-over-atm</b> —Ethernet over ATM encapsulation	<b>atm-ccc-cell-relay</b> —ATM cell relay for CCC <b>atm-ccc-vc-mux</b> —ATM VC for CCC <b>atm-cisco-nlpid</b> —Cisco-compatible ATM NLPID encapsulation <b>atm-nlpid</b> —ATM NLPID encapsulation <b>atm-snap</b> —ATM LLC/SNAP encapsulation <b>atm-tcc-snap</b> —ATM LLC/SNAP for a translational cross-connect <b>atm-tcc-vc-mux</b> —ATM VC for a translational cross-connect <b>atm-vc-mux</b> —ATM VC multiplexing <b>ether-over-atm-llc</b> —Ethernet over ATM (LLC/SNAP) encapsulation
<b>at</b> —ATM2 intelligent queuing (IQ) interface	<b>atm-ccc-cell-relay</b> —ATM cell relay encapsulation for a cross-connect <b>atm-pvc</b> —ATM permanent virtual circuits <b>ethernet-over-atm</b> —Ethernet over ATM encapsulation	<b>atm-ccc-cell-relay</b> —ATM cell relay for CCC <b>atm-ccc-vc-mux</b> —ATM VC for CCC <b>atm-cisco-nlpid</b> —Cisco-compatible ATM NLPID encapsulation <b>atm-mlppp-llc</b> —ATM MLPPP over AAL5/LLC <b>atm-nlpid</b> —ATM NLPID encapsulation <b>atm-ppp-llc</b> —ATM PPP over AAL5/LLC <b>atm-ppp-vc-mux</b> —ATM PPP over raw AAL5 <b>atm-snap</b> —ATM LLC/SNAP encapsulation <b>atm-tcc-snap</b> —ATM LLC/SNAP for a translational cross-connect <b>atm-tcc-vc-mux</b> —ATM VC for a translational cross-connect <b>atm-vc-mux</b> —ATM VC multiplexing <b>ether-over-atm-llc</b> —Ethernet over ATM (LLC/SNAP) encapsulation <b>ether-vpls-over-atm-llc</b> —Ethernet VPLS over ATM (bridging) encapsulation

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>bcm</b> —Gigabit Ethernet internal interfaces	NA	NA
<b>br</b> —Integrated Services Digital Network (ISDN) interface	NA	NA
<b>ci</b> —Container interface	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing <b>ppp</b> —Serial PPP device	<b>aps</b> —SONET interface required for APS configuration.
<b>ds</b> —DS0 interface	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing  <b>cisco-hdlc-ccc</b> —Cisco-compatible HDLC framing for a cross-connect  <b>cisco-hdlc-tcc</b> —Cisco-compatible HDLC framing for a translational cross-connect  <b>extended-frame-relay-ccc</b> —Any Frame Relay DLCI for a cross-connect  <b>extended-frame-relay-tcc</b> —Any Frame Relay DLCI for a translational cross-connect  <b>flexible-frame-relay</b> —Multiple Frame Relay encapsulations  <b>frame-relay</b> —Frame Relay encapsulation  <b>frame-relay-ccc</b> —Frame Relay for a cross-connect  <b>frame-relay-port-ccc</b> —Frame Relay port encapsulation for a cross-connect  <b>frame-relay-tcc</b> —Frame Relay for a translational cross-connect  <b>multilink-frame-relay-uni-nni</b> —Multilink Frame Relay UNI NNI (FRF.16) encapsulation  <b>ppp</b> —Serial PPP device  <b>ppp-ccc</b> —Serial PPP device for a cross-connect  <b>ppp-tcc</b> —Serial PPP device for a translational cross-connect	<b>frame-relay-ccc</b> —Frame Relay DLCI for CCC  <b>frame-relay-ppp</b> —PPP over Frame Relay  <b>frame-relay-tcc</b> —Frame Relay DLCI for a translational cross-connect
<b>dsc</b> —Discard interface	NA	NA

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>e1</b> —E1 interface (including channelized STM1-to-E1 interfaces)	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing	<b>frame-relay-ccc</b> —Frame Relay DLCI for CCC
	<b>cisco-hdlc-ccc</b> —Cisco-compatible HDLC framing for a cross-connect	<b>frame-relay-ppp</b> —PPP over Frame Relay
	<b>cisco-hdlc-tcc</b> —Cisco-compatible HDLC framing for a translational cross-connect	<b>frame-relay-tcc</b> —Frame Relay DLCI for a translational cross-connect
	<b>extended-frame-relay-ccc</b> —Any Frame Relay DLCI for a cross-connect	
	<b>extended-frame-relay-tcc</b> —Any Frame Relay DLCI for a translational cross-connect	
	<b>flexible-frame-relay</b> —Multiple Frame Relay encapsulations	
	<b>frame-relay</b> —Frame Relay encapsulation	
	<b>frame-relay-ccc</b> —Frame Relay for a cross-connect	
	<b>frame-relay-port-ccc</b> —Frame Relay port encapsulation for a cross-connect	
	<b>frame-relay-tcc</b> —Frame Relay for a translational cross-connect	
	<b>multilink-frame-relay-uni-nni</b> —Multilink Frame Relay UNI NNI (FRF.16) encapsulation	
	<b>ppp</b> —Serial PPP device	
	<b>ppp-ccc</b> —Serial PPP device for a cross-connect	
	<b>ppp-tcc</b> —Serial PPP device for a translational cross-connect	

*Table 33: Encapsulation Support by Interface Type (continued)*

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>e3</b> —E3 interface (including E3 IQ and IQE interfaces)	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing	<b>frame-relay-ccc</b> —Frame Relay DLCI for CCC
	<b>cisco-hdlc-ccc</b> —Cisco-compatible HDLC framing for a cross-connect	<b>frame-relay-ppp</b> —PPP over Frame Relay
	<b>cisco-hdlc-tcc</b> —Cisco-compatible HDLC framing for a translational cross-connect	<b>frame-relay-tcc</b> —Frame Relay DLCI for a translational cross-connect
	<b>extended-frame-relay-ccc</b> —Any Frame Relay DLCI for a cross-connect	
	<b>extended-frame-relay-tcc</b> —Any Frame Relay DLCI for a translational cross-connect	
	<b>flexible-frame-relay</b> —Multiple Frame Relay encapsulations	
	<b>frame-relay</b> —Frame Relay encapsulation	
	<b>frame-relay-ccc</b> —Frame Relay for a cross-connect	
	<b>frame-relay-port-ccc</b> —Frame Relay port encapsulation for a cross-connect	
	<b>frame-relay-tcc</b> —Frame Relay for a translational cross-connect	
	<b>ppp</b> —Serial PPP device	
	<b>ppp-ccc</b> —Serial PPP device for a cross-connect	
	<b>ppp-tcc</b> —Serial PPP device for a translational cross-connect	
<b>em</b> —Management and internal Ethernet interfaces	NA	NA

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>fe</b> —Fast Ethernet interface	<b>ethernet-ccc</b> —Ethernet cross-connect  <b>ethernet-tcc</b> —Ethernet translational cross-connect  <b>ethernet-vpls</b> —Ethernet virtual private LAN service  <b>extended-vlan-ccc</b> —Nonstandard TPID tagging for a cross-connect  <b>extended-vlan-tcc</b> —802.1Q tagging for a translational cross-connect  <b>extended-vlan-vpls</b> —Extended VLAN virtual private LAN service  <b>vlan-ccc</b> —802.1Q tagging for a cross-connect  <b>vlan-vpls</b> —VLAN virtual private LAN service	<b>dix</b> —Ethernet DIXv2 (RFC 894)  <b>vlan-ccc</b> —802.1Q tagging for a cross-connect  <b>vlan-vpls</b> —VLAN virtual private LAN service
<b>fxp</b> —Management and internal Ethernet interfaces	NA	NA
<b>ge</b> —Gigabit Ethernet interface (including Gigabit Ethernet IQ interfaces)	<b>ethernet-ccc</b> —Ethernet cross-connect  <b>ethernet-tcc</b> —Ethernet translational cross-connect  <b>ethernet-vpls</b> —Ethernet virtual private LAN service  <b>extended-vlan-ccc</b> —Nonstandard TPID tagging for a cross-connect  <b>extended-vlan-tcc</b> —802.1Q tagging for a translational cross-connect  <b>extended-vlan-vpls</b> —Extended VLAN virtual private LAN service  <b>flexible-ethernet-services</b> —Allows per-unit Ethernet encapsulation configuration  <b>vlan-ccc</b> —802.1Q tagging for a cross-connect  <b>vlan-vpls</b> —VLAN virtual private LAN service	<b>dix</b> —Ethernet DIXv2 (RFC 894)  <b>vlan-ccc</b> —802.1Q tagging for a cross-connect  <b>vlan-tcc</b> —802.1Q tagging for a translational cross-connect  <b>vlan-vpls</b> —VLAN virtual private LAN service
<b>ixgbe</b> —10-Gigabit Ethernet internal interfaces	NA	NA
<b>lo</b> —Loopback interface; the Junos OS automatically configures one loopback interface ( <b>lo0</b> )	NA	NA

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>ls</b> —Link services interface	<b>multilink-frame-relay-uni-nni</b> —Multilink Frame Relay UNI NNI (FRF.16) encapsulation	<b>multilink-frame-relay-end-to-end</b> —Multilink Frame Relay end-to-end (FRF.15)  <b>multilink-ppp</b> —Multilink PPP
<b>lsq</b> —Link services IQ interface	<b>multilink-frame-relay-uni-nni</b> —Multilink Frame Relay UNI NNI (FRF.16) encapsulation	<b>multilink-frame-relay-end-to-end</b> —Multilink Frame Relay end-to-end (FRF.15)  <b>multilink-ppp</b> —Multilink PPP
<b>lt</b> —Logical tunnel interface	NA	<b>ethernet</b> —Ethernet service  <b>ethernet-vpls</b> —Ethernet virtual private LAN service  <b>ethernet-ccc</b> —Ethernet cross-connect  <b>frame-relay</b> —Frame Relay encapsulation  <b>frame-relay-ccc</b> —Frame Relay for a cross-connect  <b>vlan</b> —VLAN service  <b>vlan-ccc</b> —802.1Q tagging for a cross-connect  <b>vlan-vpls</b> —VLAN virtual private LAN service
<b>ml</b> —Multilink interface (including Multilink Frame Relay and MLPPP)	NA	<b>multilink-frame-relay-end-to-end</b> —Multilink Frame Relay end-to-end (FRF.15)  <b>multilink-ppp</b> —Multilink PPP

*Table 33: Encapsulation Support by Interface Type (continued)*

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>se</b> —Serial interface (including EIA-530, V.35, and X.21 interfaces)	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing	<b>frame-relay-ccc</b> —Frame Relay DLCI for CCC
	<b>cisco-hdlc-ccc</b> —Cisco-compatible HDLC framing for a cross-connect	<b>frame-relay-ppp</b> —PPP over Frame Relay
	<b>cisco-hdlc-tcc</b> —Cisco-compatible HDLC framing for a translational cross-connect	<b>frame-relay-tcc</b> —Frame Relay DLCI for a translational cross-connect
	<b>frame-relay</b> —Frame Relay encapsulation	
	<b>frame-relay-ccc</b> —Frame Relay for a cross-connect	
	<b>frame-relay-port-ccc</b> —Frame Relay port encapsulation for a cross-connect	
	<b>frame-relay-tcc</b> —Frame Relay for a translational cross-connect	
	<b>ppp</b> —Serial PPP device	
	<b>ppp-ccc</b> —Serial PPP device for a cross-connect	
	<b>ppp-tcc</b> —Serial PPP device for a translational cross-connect	

*Table 33: Encapsulation Support by Interface Type (continued)*

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
so—SONET/SDH interface	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing	<b>frame-relay-ccc</b> —Frame Relay DLCI for CCC
	<b>cisco-hdlc-ccc</b> —Cisco-compatible HDLC framing for a cross-connect	<b>frame-relay-ppp</b> —PPP over Frame Relay
	<b>cisco-hdlc-tcc</b> —Cisco-compatible HDLC framing for a translational cross-connect	<b>frame-relay-tcc</b> —Frame Relay DLCI for a translational cross-connect
	<b>extended-frame-relay-ccc</b> —Any Frame Relay DLCI for a cross-connect	<b>multilink-frame-relay-end-to-end</b> —IQE SONET PICs support Multilink Frame Relay end-to-end (FRF.15)
	<b>extended-frame-relay-tcc</b> —Any Frame Relay DLCI for a translational cross-connect	<b>multilink-ppp</b> —IQE SONET PICs support Multilink PPP
	<b>flexible-frame-relay</b> —Multiple Frame Relay encapsulations	
	<b>frame-relay</b> —Frame Relay encapsulation	
	<b>frame-relay-ccc</b> —Frame Relay for a cross-connect	
	<b>frame-relay-port-ccc</b> —Frame Relay port encapsulation for a cross-connect	
	<b>frame-relay-tcc</b> —Frame Relay for a translational cross-connect	
	<b>ppp</b> —Serial PPP device	
	<b>ppp-ccc</b> —Serial PPP device for a cross-connect	
	<b>ppp-tcc</b> —Serial PPP device for a translational cross-connect	

*Table 33: Encapsulation Support by Interface Type (continued)*

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
t1—T1 interface (including channelized DS3-to-DS1 interfaces)	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing	<b>frame-relay-ccc</b> —Frame Relay DLCI for CCC
	<b>cisco-hdlc-ccc</b> —Cisco-compatible HDLC framing for a cross-connect	<b>frame-relay-ppp</b> —PPP over Frame Relay
	<b>cisco-hdlc-tcc</b> —Cisco-compatible HDLC framing for a translational cross-connect	<b>frame-relay-tcc</b> —Frame Relay DLCI for a translational cross-connect
	<b>extended-frame-relay-ccc</b> —Any Frame Relay DLCI for a cross-connect	
	<b>extended-frame-relay-tcc</b> —Any Frame Relay DLCI for a translational cross-connect	
	<b>flexible-frame-relay</b> —Multiple Frame Relay encapsulations	
	<b>frame-relay</b> —Frame Relay encapsulation	
	<b>frame-relay-ccc</b> —Frame Relay for a cross-connect	
	<b>frame-relay-port-ccc</b> —Frame Relay port encapsulation for a cross-connect	
	<b>frame-relay-tcc</b> —Frame Relay for a translational cross-connect	
	<b>multilink-frame-relay-uni-nni</b> —Multilink Frame Relay UNI NNI (FRF.16) encapsulation	
	<b>ppp</b> —Serial PPP device	
	<b>ppp-ccc</b> —Serial PPP device for a cross-connect	
	<b>ppp-tcc</b> —Serial PPP device for a translational cross-connect	

Table 33: Encapsulation Support by Interface Type (continued)

Interface Type	Physical Interface Encapsulation	Logical Interface Encapsulation
<b>t3</b> —T3 interface (including channelized OC12-to-DS3 interfaces)	<b>cisco-hdlc</b> —Cisco-compatible HDLC framing <b>cisco-hdlc-ccc</b> —Cisco-compatible HDLC framing for a cross-connect <b>cisco-hdlc-tcc</b> —Cisco-compatible HDLC framing for a translational cross-connect <b>extended-frame-relay-ccc</b> —Any Frame Relay DLCI for a cross-connect <b>extended-frame-relay-tcc</b> —Any Frame Relay DLCI for a translational cross-connect <b>flexible-frame-relay</b> —Multiple Frame Relay encapsulations <b>frame-relay</b> —Frame Relay encapsulation <b>frame-relay-ccc</b> —Frame Relay for a cross-connect <b>frame-relay-port-ccc</b> —Frame Relay port encapsulation for a cross-connect <b>frame-relay-tcc</b> —Frame Relay for a translational cross-connect <b>ppp</b> —Serial PPP device <b>ppp-ccc</b> —Serial PPP device for a cross-connect <b>ppp-tcc</b> —Serial PPP device for a translational cross-connect	<b>frame-relay-ccc</b> —Frame Relay DLCI for CCC <b>frame-relay-ppp</b> —PPP over Frame Relay <b>frame-relay-tcc</b> —Frame Relay DLCI for a translational cross-connect
Controller-level channelized IQ interfaces ( <b>cau4</b> , <b>coc1</b> , <b>coc3</b> , <b>coc12</b> , <b>cstm1</b> , <b>ct1</b> , <b>ct3</b> , <b>ce1</b> )	NA	NA
Services interfaces ( <b>cp</b> , <b>gr</b> , <b>ip</b> , <b>mo</b> , <b>vt</b> , <b>es</b> , <b>mo</b> , <b>rsp</b> , <b>sp</b> )	NA	NA
Unconfigurable, internally generated interfaces ( <b>gre</b> , <b>ipip</b> , <b>learning-chip</b> ( <b>lc</b> ), <b>lsi</b> , <b>tap</b> , <b>mt</b> , <b>mtun</b> , <b>pd</b> , <b>pe</b> , <b>pimd</b> , <b>pime</b> )	NA	NA



**NOTE:** You can configure GRE interfaces (**gre-x/y/z**) only for GMPLS control channels. GRE interfaces are not supported or configurable for other applications. For more information about GMPLS, see the *Junos OS MPLS Applications Library for Routing Devices*.

- Related Documentation**
- [Understanding Transient Interfaces on page 5](#)
  - [Router Interfaces Overview on page 4](#)
  - [Types of Interfaces Overview on page 4](#)

---

## Interface Descriptors Overview

When you configure an interface, you are effectively specifying the properties for a physical interface descriptor. In most cases, the physical interface descriptor corresponds to a single physical device and consists of the following parts:

- The interface name, which defines the media type
- The slot in which the FPC or DPC is located
- The location on the FPC in which the PIC is installed
- The PIC or DPC port
- The interface's channel and logical unit numbers (optional)

Each physical interface descriptor can contain one or more logical interface descriptors. These allow you to map one or more logical (or virtual) interfaces to a single physical device. Creating multiple logical interfaces is useful for ATM, Frame Relay, and Gigabit Ethernet networks, in which you can associate multiple virtual circuits, data-link connections, or virtual LANs (VLANs) with a single interface device.

Each logical interface descriptor can have one or more family descriptors to define the protocol family that is associated with and allowed to run over the logical interface.

The following protocol families are supported:

- Internet Protocol version 4 (IPv4) suite (inet)
- Internet Protocol version 6 (IPv6) suite (inet6)
- Circuit cross-connect (CCC)
- Translational cross-connect (TCC)
- International Organization for Standardization (ISO)
- Multilink Frame Relay end-to-end (MLFR end-to-end)
- Multilink Frame Relay user-to-network interface network-to-network interface (MLFR UNI NNI)
- Multilink Point-to-Point Protocol (MLPPP)
- Multiprotocol Label Switching (MPLS)
- Trivial Network Protocol (TNP)
- (M Series, T Series, and MX Series routers only) Virtual private LAN service (VPLS)

Finally, each family descriptor can have one or more address entries, which associate a network address with a logical interface and hence with the physical interface.

You configure the various interface descriptors as follows:

- You configure the physical interface descriptor by including the **interfaces** *interface-name* statement.
- You configure the logical interface descriptor by including the **unit** statement within the **interfaces** *interface-name* statement or by including the **.logical** descriptor at the end of the interface name, as in **t3-0/0/0.1**, where the logical unit number is 1, as shown in the following examples:

```
[edit]
user@host# set interfaces t3-0/0/0 unit 1
[edit]
user@host# edit interfaces t3-0/0/0.1
[edit interfaces t3-0/0/0]
user@host# set unit 1
```

- You configure the family descriptor by including the **family** statement within the **unit** statement.
- You configure address entries by including the **address** statement within the **family** statement.
- You configure tunnels by including the **tunnel** statement within the **unit** statement.



**NOTE:** The address of a logical interface cannot be the same as a tunnel interface's source or destination address. If you try to configure a logical interface with a tunnel interface's address or vice versa, a commit failure will occur.

#### Related Documentation

- [Router Interfaces Overview on page 4](#)

## Physical Part of an Interface Name

- [Interface Names for ACX Series Universal Metro Routers on page 59](#)
- [Interface Names for M Series and T Series Routers on page 60](#)
- [MX Series Router Interface Names on page 60](#)
- [Interface Names for PTX Series Routers on page 61](#)

## Interface Names for ACX Series Universal Metro Routers

ACX Series routers do not have actual PIC devices. Instead they have built-in network ports on the front panel of the router. These ports are named using the same naming convention used for routers with PIC devices with the understanding that the FPC, PIC and port are pseudo devices. When you display information about one of these ports,

you specify the interface type, the slot for the Flexible PIC Concentrator (FPC), the slot on the FPC for the Physical Interface Card (PIC), and the configured port number.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

***type-fpc/pic/port***

- See Also**
- *Understanding Encapsulation on an Interface*
  - *Configuring Inverse Multiplexing for ATM (IMA) on ACX Series*

## Interface Names for M Series and T Series Routers

On M Series and T Series routers, when you display information about an interface, you specify the interface type, the slot in which the Flexible PIC Concentrator (FPC) is installed, the slot on the FPC in which the Physical Interface Card (PIC) is located, and the configured port number.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

***type-fpc/pic/port***



**NOTE:** Exceptions to the ***type-fpc/pic/port*** physical description include the aggregated Ethernet and aggregated SONET/SDH interfaces, which use the syntax ***ae number*** and ***as number***, respectively.

## MX Series Router Interface Names

On MX Series routers when you display information about an interface, you specify the interface type, the Dense Port Concentrator (DPC), Flexible PIC Concentrator (FPC), or Modular Port Concentrator (MPC) slot, the PIC or MIC slot, and the configured port number.



**NOTE:** Although the MX Series routers use DPCs, FPCs, MPCs, MICs, and PICs, command syntax in this book is shown as ***fpc/pic/port*** for simplicity.

In the physical part of the interface name, a hyphen (-) separates the media type from the FPC number, and a slash (/) separates the DPC, FPC or MPC, MIC or PIC, and port numbers:

***type-fpc/pic/port***

- ***fpc***—Slot in which the DPC, FPC, or MPC is installed.
- ***pic***—Slot on the FPC in which the PIC is located.

For DPCs, MICs, and the 16-port MPC, the PIC value is a logical grouping of ports and varies on different platforms.

- *port*—Port number on the DPC, PIC, MPC, or MIC.

## Interface Names for PTX Series Routers

On PTX Series Packet Transport Routers, when you display information about an interface, you specify the interface type, the slot in which the Flexible PIC Concentrator (FPC) is installed, the slot on the FPC in which the Physical Interface Card (PIC) is located, and the configured port number.



### NOTE:

- The PTX router supports Ethernet type interfaces only. The media type portion of the physical interface name, *type* supports the Ethernet interface type only: *et*.
- In the CLI, all PTX3000 PICs are represented as *pic0*. For more information, see *PTX3000 PIC Description*

In the physical part of the interface name, a hyphen (-) separates the media type (**et**) from the FPC number, and a slash (/) separates the FPC, PIC, and port numbers:

*type-fpc/pic/port*

### Related Documentation

- [Interface Naming Overview on page 33](#)
- [Logical Part of an Interface Name on page 39](#)

## Displaying Interface Configurations Overview

To display a configuration, use either the **show** command in configuration mode or the **show configuration** top-level command. Interfaces are listed in numerical order, from lowest to highest slot number, then from lowest to highest PIC number, and finally from lowest to highest port number.

### Related Documentation

- [Router Interfaces Overview on page 4](#)



## CHAPTER 2

# Configuring Physical Interface Properties

- [Physical Interface Configuration Statements Overview on page 64](#)
- [Physical Interfaces Properties Statements List on page 74](#)
- [Configuring Interface Ranges on page 90](#)
- [Specifying an Aggregated Interface on page 100](#)
- [Media MTU Overview on page 100](#)
- [Media MTU Sizes by Interface Type on page 101](#)
- [Configuring the Media MTU on ACX Series Routers on page 109](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 112](#)
- [Configuring Interface Description on page 113](#)
- [Configuring the Media MTU on page 115](#)
- [Configuring the Interface Speed on page 116](#)
- [Configuring the Link Characteristics on page 121](#)
- [Interface Alias Names Overview on page 122](#)
- [Example: Adding an Interface Alias Name on page 123](#)
- [Clock Source Overview on page 127](#)
- [Configuring the Clock Source on page 128](#)
- [Configuring Interface Encapsulation on Physical Interfaces on page 129](#)
- [Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 132](#)
- [Configuring Keepalives on page 134](#)
- [Configuring the PPP Challenge Handshake Authentication Protocol on page 136](#)
- [Configuring the PPP Password Authentication Protocol On a Physical Interface on page 139](#)
- [Configuring the PPP Authentication Protocol on page 142](#)
- [PPP Encapsulation on ACX Series Routers on page 143](#)
- [Configuring Interface Encapsulation on Physical Interfaces in ACX Series on page 145](#)
- [Configuring PPP Address and Control Field Compression on page 149](#)
- [Configuring the PPP Protocol Field Compression on page 151](#)
- [Monitoring a PPP Session on page 152](#)

- [Tracing Operations of the pppd Process on page 153](#)
- [Configuring the Router as a DCE with Frame Relay Encapsulation on page 154](#)
- [Receive and Transmit Leaky Bucket Properties Overview on page 155](#)
- [Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 156](#)
- [Understanding Unidirectional Traffic Flow on Physical Interfaces on page 157](#)
- [Enabling Unidirectional Traffic Flow on Physical Interfaces on page 158](#)
- [Physical Interface Damping Overview on page 159](#)
- [Damping Shorter Physical Interface Transitions on page 165](#)
- [Damping Longer Physical Interface Transitions on page 166](#)
- [Example: Configuring Physical Interface Damping on page 167](#)
- [Configuring Multiservice Physical Interface Properties on page 170](#)
- [Enabling or Disabling SNMP Notifications on Physical Interfaces on page 171](#)
- [Configuring Accounting for the Physical Interface on page 171](#)
- [Disabling a Physical Interface on page 174](#)

---

## Physical Interface Configuration Statements Overview

---

The software driver for each network media type sets reasonable default values for general interface properties, such as the interface's maximum transmission unit (MTU) size, receive and transmit leaky bucket properties, link operational mode, and clock source.

M Series, MX Series, and T Series routers are factory configured according to the specific router, its features, and its physical interfaces. This section includes a default configuration example showing the statements used to configure the physical interfaces properties. Additional statements are used to set properties for specific interface types and are described in "[Physical Interfaces Properties Statements List](#)" on [page 74](#).

To modify any of the default general interface properties, include the appropriate statements at the `[edit interfaces interface-name]` hierarchy level:



**NOTE:** The following configuration hierarchy and its included statements are shown only as an example of a configuration statement hierarchy and should not be referenced for resolving actual configurations. For information on a specific hierarchy level, see the hierarchy level document for that specific hierarchy, for example `[edit interfaces]` Hierarchy Level.

```
interfaces {  
  traceoptions {  
    file filename <files number> <match regular-expression> <size size> <world-readable |  
      no-world-readable>;  
    flag flag <disable>;  
  }  
  interface-name {  
    accounting-profile name;  
    aggregated-ether-options {
```

```

(flow-control | no-flow-control);
lACP {
    (active | passive);
    link-protection {
        disable;
        (revertive | non-revertive (Interfaces));
        periodic interval;
        system-priority priority;
    }
    link-protection;
    link-speed speed;
    (loopback | no-loopback);
    minimum-links number;
    source-address-filter {
        mac-address
    }
    (source-filtering | no-source-filtering);
}
aggregated-sonet-options {
    link-speed speed | mixed;
    minimum-links number;
}
atm-options {
    cell-bundle-size cells;
    ilmi;
    linear-red-profiles profile-name {
        high-plp-max-threshold percent;
        low-plp-max-threshold percent;
        queue-depth cells high-plp-threshold percent low-plp-threshold percent;
    }
}
mpls {
    pop-all-labels {
        required-depth number;
    }
}
pic-type (atm1 | atm2);
plp-to-clp;
promiscuous-mode {
    vpi vpi-identifier;
}
scheduler-maps map-name {
    forwarding-class class-name {
        epd-threshold cells plp1 cells;
        linear-red-profile profile-name;
        priority (high | low);
        transmit-weight (cells number | percent number);
    }
    vc-cos-mode (alternate | strict);
}
vpi vpi-identifier {
    maximum-vcs maximum-vcs;
    oam-liveness {
        up-count cells;
        down-count cells;
    }
    oam-period (seconds | disable);
}

```

```
    shaping {
        (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained
         rate burst length);
        queue-length number;
    }
}
clocking clock-source;
data-input (system | interface interface-name);
dce;
serial-options {
    clock-rate rate;
    clocking-mode (dce | internal | loop);
    control-polarity (negative | positive);
    cts-polarity (negative | positive);
    dcd-polarity (negative | positive);
    dce-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dsr-polarity (negative | positive);
    dte-options {
        control-signal (assert | de-assert | normal);
        cts (ignore | normal | require);
        dcd (ignore | normal | require);
        dsr (ignore | normal | require);
        dtr signal-handling-option;
        ignore-all;
        indication (ignore | normal | require);
        rts (assert | de-assert | normal);
        tm (ignore | normal | require);
    }
    dtr-circuit (balanced | unbalanced);
    dtr-polarity (negative | positive);
    encoding (nrz | nrzi);
    indication-polarity (negative | positive);
    line-protocol protocol;
    loopback mode;
    rts-polarity (negative | positive);
    tm-polarity (negative | positive);
    transmit-clock invert;
}
description text;
dialer-options {
    pool pool-name <priority priority>;
}
disable;
dsO-options {
    bert-algorithm algorithm;
```

```

    bert-error-rate rate;
    bert-period seconds;
    byte-encoding (nx56 | nx64);
    fcs (16 | 32);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback payload;
    start-end-flag (filler | shared);
}
e1-options {
    bert-error-rate rate;
    bert-period seconds;
    fcs (16 | 32);
    framing (g704 | g704-no-crc4 | unframed);
    idle-cycle-flag (flags | ones);
    invert-data;
    loopback (local | remote);
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
e3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout feet;
    compatibility-mode (digital-link | kentrox | larscom) <subrate value>;
    fcs (16 | 32);
    framing (g.751 | g.832);
    idle-cycle-flag (filler | shared);
    invert-data;
    loopback (local | remote);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
    (unframed | no-unframed);
}
encapsulation type;
es-options {
    backup-interface es-fpc/pic/port;
}
fastether-options {
    802.3ad aex;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    ingress-rate-limit rate;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
    source-address-filter {
        mac-address;
    }
    (source-filtering | no-source-filtering);
}

```

```

flexible-vlan-tagging;
gigether-options {
    802.3ad aex;
    (asynchronous-notification | no-asynchronous-notification);
    (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |
        local-interface-offline>;
    auto-reconnect seconds;
    (flow-control | no-flow-control);
    ignore-l3-incompletes;
    (loopback | no-loopback);
    mpls {
        pop-all-labels {
            required-depth number;
        }
    }
    source-address-filter {
        mac-address;
    }
    (source-filtering | no-source-filtering);
    ethernet-switch-profile {
        (mac-learn-enable | no-mac-learn-enable);
        tag-protocol-id [ tpids ];
        ethernet-policer-profile {
            input-priority-map {
                ieee802.1p premium [ values ];
            }
            output-priority-map {
                classifier {
                    premium {
                        forwarding-class class-name {
                            loss-priority (high | low);
                        }
                    }
                }
            }
        }
        policer cos-policer-name {
            aggregate {
                bandwidth-limit bps;
                burst-size-limit bytes;
            }
            premium {
                bandwidth-limit bps;
                burst-size-limit bytes;
            }
        }
    }
}
(gratuitous-arp-reply | no-gratuitous-arp-reply);
hold-time up milliseconds down milliseconds;
interface-set interface-set-name {
    interface ethernet-interface-name {
        (unit unit-number | vlan-tags-outer vlan-tag);
    }
}
isdn-options {

```

```

bchannel-allocation (ascending | descending);
calling-number number;
pool pool-name <priority priority>;
spid1 spid-string;
spid2 spid-string;
static-tei-val value;
switch-type (att5e | etsi | nil | ntdms100 | ntt);
t310 seconds;
tei-option (first-call | power-up);
}
keepalives <down-count number> <interval seconds> <up-count number>;
link-mode mode;
lmi {
    lmi-type (ansi | itu | c-lmi);
    n391dte number;
    n392dce number;
    n392dte number;
    n393dce number;
    n393dte number;
    t391dte seconds;
    t392dce seconds;
}
lsq-failure-options {
    no-termination-request;
    [ trigger-link-failure interface-name ];
}
mac mac-address;
mlfr-uni-nni-bundle-options {
    acknowledge-retries number;
    acknowledge-timer milliseconds;
    action-red-differential-delay (disable-tx | remove-link);
    cisco-interoperability send-lip-remove-link-for-link-reject;
    drop-timeout milliseconds;
    fragment-threshold bytes;
    hello-timer milliseconds;
    link-layer-overhead percent;
    lmi-type (ansi | itu | c-lmi);
    minimum-links number;
    mrru bytes;
    n391 number;
    n392 number;
    n393 number;
    red-differential-delay milliseconds;
    t391 seconds;
    t392 seconds;
    yellow-differential-delay milliseconds;
    encapsulation type;
}
modem-options {
    dialin (console | routable);
    init-command-string initialization-command-string;
}
mtu bytes;
multiservice-options {
    (core-dump | no-core-dump);
    (syslog | no-syslog);
}

```

```
(dump-on-flow-control);
flow-control-options {
    down-on-flow-control;
    dump-on-flow-control;
    reset-on-flow-control;
}
}
native-vlan-id number;
no-gratuitous-arp-request;
no-keepalives;
no-partition {
    interface-type type;
}
optics-options {
    wavelength nm;
    alarm-alarm-name {
        (syslog | link-down);
    }
    warning-warning-name {
        (syslog | link-down);
    }
}
partition partition-number oc-slice oc-slice-range interface-type type;
timeslots time-slot-range;
passive-monitor-mode;
per-unit-scheduler;
ppp-options {
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    no-termination-request;
    pap {
        access-profile name;
        local-name name;
        local-password password;
        passive;
    }
}
}
receive-bucket {
    overflow (discard | tag);
    rate percentage;
    threshold bytes;
}
redundancy-options {
    primary sp-fpc/pic/port;
    secondary sp-fpc/pic/port;
}
schedulers number;
```

```

serial-options {
  clock-rate rate;
  clocking-mode (dce | internal | loop);
  control-polarity (negative | positive);
  cts-polarity (negative | positive);
  dcd-polarity (negative | positive);
  dce-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
  }
  dsr-polarity (negative | positive);
  dte-options {
    control-signal (assert | de-assert | normal);
    cts (ignore | normal | require);
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
  }
  dtr-circuit (balanced | unbalanced);
  dtr-polarity (negative | positive);
  encoding (nrz | nrzi);
  indication-polarity (negative | positive);
  line-protocol protocol;
  loopback mode;
  rts-polarity (negative | positive);
  tm-polarity (negative | positive);
  transmit-clock invert;
}
services-options {
  inactivity-timeout seconds;
  open-timeout seconds;
  syslog {
    host hostname {
      facility-override facility-name;
      log-prefix prefix-number;
      services priority-level;
    }
  }
}
shdsl-options {
  annex (annex-a | annex-b);
  line-rate line-rate;
  loopback (local | remote);
  snr-margin {
    snext margin;
  }
}

```

```
    }
  }
  sonet-options {
    aggregate asx;
    aps {
      advertise-interval milliseconds;
      authentication-key key;
      force;
      hold-time milliseconds;
      lockout;
      neighbor address;
      paired-group group-name;
      preserve-interface;
      protect-circuit group-name;
      request;
      revert-time seconds;
      switching-mode (bidirectional | unidirectional);
      working-circuit group-name;
    }
    bytes {
      c2 value;
      e1-quiet value;
      f1 value;
      f2 value;
      s1 value;
      z3 value;
      z4 value;
    }
    fcs (16 | 32);
    loopback (local | remote);
    mpls {
      pop-all-labels {
        required-depth number;
      }
    }
    path-trace trace-string;
    (payload-scrambler | no-payload-scrambler);
    rfc-2615;
    trigger {
      defect ignore;
      hold-time up milliseconds down milliseconds;
    }
    vtmapping (itu-t | klm);
    (z0-increment | no-z0-increment);
  }
  (speed (10m | 100m | 1g | auto) | speed (auto | 1Gbps | 100Mbps | 10Mbps) | speed
  (oc3 | oc12 | oc48));
  stacked-vlan-tagging;
  switch-options {
    switch-port port-number {
      (auto-negotiation | no-auto-negotiation);
      speed (10m | 100m | 1g);
      link-mode (full-duplex | half-duplex);
    }
  }
  multicast-statistics
```

```

t1-options {
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout value;
    byte-encoding (nx56 | nx64);
    crc-major-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);
    crc-minor-alarm-threshold (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);
    fcs (16 | 32);
    framing (esf | sf);
    idle-cycle-flag (flags | ones);
    invert-data;
    line-encoding (ami | b8zs);
    loopback (local | payload | remote);
    remote-loopback-respond;
    start-end-flag (filler | shared);
    timeslots time-slot-range;
}
t3-options {
    atm-encapsulation (direct | plcp);
    bert-algorithm algorithm;
    bert-error-rate rate;
    bert-period seconds;
    buildout feet;
    (cbit-parity | no-cbit-parity);
    compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
        value>;
    fcs (16 | 32);
    (feac-loop-respond | no-feac-loop-respond);
    idle-cycle-flag value;
    (long-buildout | no-long-buildout);
    (loop-timing | no-loop-timing);
    loopback (local | payload | remote);
    (mac | no-mac);
    (payload-scrambler | no-payload-scrambler);
    start-end-flag (filler | shared);
}
traceoptions {
    flag flag <flag-modifier> <disable>;
}
transmit-bucket {
    overflow discard;
    rate percentage;
    threshold bytes;
}
(traps | no-traps);
unidirectional;
vlan-tagging;
vlan-vci-tagging;
unit logical-unit-number {
    logical-interface-statements;
}
}
}

```

Related Documentation • [Router Interfaces Overview on page 4](#)

## Physical Interfaces Properties Statements List

Table 34 on page 74 lists statements that you can use to configure physical interfaces.

Table 34: Statements for Physical Interface Properties

Statement	Interface Types	Usage Guidelines
<a href="#">802.3ad aex</a>	Aggregated Ethernet interfaces	<a href="#">Aggregated Ethernet Interfaces Overview</a>
<a href="#">access-profile name</a>	Interfaces with Point-to-Point Protocol (PPP) encapsulation	<a href="#">"Configuring the PPP Challenge Handshake Authentication Protocol" on page 136</a>
<a href="#">accounting-profile name</a>	All	<a href="#">"Configuring Accounting for the Physical Interface" on page 171</a>
<a href="#">acfc</a>	Interfaces with PPP encapsulation	<a href="#">Identifying the Access Concentrator</a>
<a href="#">acknowledge-retries number</a>	Link services and voice services interfaces	<a href="#">Junos OS Services Interfaces Library for Routing Devices</a>
<a href="#">acknowledge-timer milliseconds</a>	Link services and voice services interfaces	<a href="#">Junos OS Services Interfaces Library for Routing Devices</a>
<a href="#">action-red-differential-delay (disable-tx   remove-link)</a>	Link services and voice services interfaces	<a href="#">Junos OS Services Interfaces Library for Routing Devices</a>
<a href="#">advertise-interval milliseconds</a>	SONET/SDH interfaces	<a href="#">Configuring APS Timers</a>
<a href="#">aggregate</a>	Gigabit Ethernet intelligent queuing (IQ and IQE) interfaces and Gigabit Ethernet interfaces with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<a href="#">Configuring Gigabit Ethernet Policers</a>
<a href="#">aggregate asx</a>	Aggregated SONET/SDH interfaces	<a href="#">Configuring Aggregated SONET/SDH Interfaces</a>
<a href="#">aggregated-ether-options</a>	Aggregated Ethernet interfaces	<a href="#">Aggregated Ethernet Interfaces Overview</a>
<a href="#">aggregate-ports</a>	SONET/SDH interfaces	<a href="#">Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode</a>
<a href="#">aggregated-sonet-options</a>	Aggregated SONET/SDH interfaces	<a href="#">Configuring Aggregated SONET/SDH Interfaces</a>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>alarm</code> <code>alarm-name</code> ( <code>syslog</code>   <code>link-down</code> )	10-Gigabit Ethernet interfaces	<i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i>
<code>alias</code> <code>alias-name</code> ;	All	<a href="#">“Example: Adding an Interface Alias Name” on page 123</a>
<code>annex</code> ( <code>annex-a</code>   <code>annex-b</code> )	SONET interfaces using annex-b for MSP switching on M320 and M120 Routers	<i>Configuring Basic Automatic Protect Switching</i>
<code>aps</code>	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
<code>atm-encapsulation</code> ( <code>direct</code>   <code>plcp</code> )	E3 and T3 traffic over Asynchronous Transfer Mode (ATM) interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces</i>
<code>atm-options</code>	ATM1 and ATM2 IQ interfaces	<a href="#">“Interface Encapsulations Overview” on page 47</a>
<code>authentication-key</code> <code>key</code>	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
<code>bandwidth-limit</code> <code>bps</code>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
<code>bert-algorithm</code> <code>algorithm</code>	E3, T1, T3, multichannel DS3, channelized interfaces (DS3, OC12, and STM1), and channelized IQ and IQE interfaces (E1 and DS3)	<i>Configuring Interface Diagnostics Tools to Test the Physical Layer Connections</i>
<code>bert-error-rate</code> <code>rate</code>	E1, E3, T1, T3, and channelized interfaces (DS3, OC3, OC12, and STM1)	<i>Configuring Interface Diagnostics Tools to Test the Physical Layer Connections</i>
<code>bert-period</code> <code>seconds</code>	E1, E3, T1, T3, and channelized interfaces (DS3, OC12, and STM1)	<i>Configuring Interface Diagnostics Tools to Test the Physical Layer Connections</i>
Configuring the T1 Buildout <code>value</code>	T1 interfaces	<i>Configuring the T1 Buildout</i>
<code>buildout</code> <code>feet</code>	E3 and T3 traffic over ATM interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces</i>
<code>burst-size-limit</code> <code>bytes</code>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
<code>byte-encoding</code> ( <code>nx56</code>   <code>nx64</code> )	DS0 and T1 interfaces	<i>Configuring T1 Byte Encoding</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<b>bytes</b> [ <i>values</i> ]	SONET/SDH interfaces	<i>Configuring SONET/SDH Header Byte Values to Identify Error Conditions</i>
<b>cbit-parity</b>   no-cbit-parity	T3 interfaces	<i>Disabling T3 C-Bit Parity Mode</i>
<b>cbr rate</b>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
<b>cell-bundle-size</b> <i>cells</i>	ATM2 IQ interfaces using ATM Layer 2 circuit cell-relay transport mode	<i>Configuring the Layer 2 Circuit Cell-Relay Cell Maximum Overview</i>
<b>chap</b>	Interfaces with PPP encapsulation	<a href="#">“Configuring the PPP Challenge Handshake Authentication Protocol” on page 136</a>
<b>cisco-interoperability</b> send-lip-remove-link-for-link-reject	link services IQ (lsq) interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>classifier</b>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<b>clocking</b> <i>clock-source</i>	ATM, DS0, E1, E3, SONET/SDH, T1, and T3 interfaces	<a href="#">“Configuring the Clock Source” on page 128</a>
<b>clocking-mode</b> (dce   internal   loop)	Serial interfaces (EIA-530 and V.35)	<a href="#">“Configuring the Serial Clocking Mode” on page 342</a>
<b>clock-rate</b> <i>rate</i>	Serial interfaces (EIA-530 and V.35)	<a href="#">“Configuring the DTE Clock Rate” on page 343</a>
<b>compatibility-mode</b> <i>mode</i>	E3 and T3 interfaces	<i>Configuring the E3 CSU Compatibility Mode and Configuring the T3 CSU Compatibility Mode</i>
<b>compression</b>	Interfaces with PPP encapsulation	<a href="#">“Configuring the PPP Protocol Field Compression” on page 151</a>
<b>control-polarity</b> (negative   positive)	Serial interfaces (X.21)	<a href="#">“Configuring Serial Signal Polarities” on page 347</a>
<b>control-signal</b> (assert   de-assert   normal)	Serial interfaces (X.21)	<a href="#">“Configuring the Serial Signal Handling” on page 344</a>
<b>core-dump</b>   no-core-dump)	Adaptive services, monitoring services, and collector interfaces	<a href="#">“Configuring Multiservice Physical Interface Properties” on page 170</a>
<b>cts</b> (ignore   normal   require)	Serial interfaces (EIA-530 and V.35)	<a href="#">“Configuring the Serial Signal Handling” on page 344</a>
<b>cts-polarity</b> (negative   positive)	Serial interfaces (EIA-530 and V.35)	<a href="#">“Configuring Serial Signal Polarities” on page 347</a>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<b>dcd</b> (ignore   normal   require)	Serial interfaces (EIA-530 and V.35)	<a href="#">"Configuring the Serial Signal Handling" on page 344</a>
<b>dcd-polarity</b> (negative   positive)	Serial interfaces (EIA-530 and V.35)	<a href="#">"Configuring Serial Signal Polarities" on page 347</a>
<b>dce</b>	Interfaces with Frame Relay encapsulation	<a href="#">"Configuring the Router as a DCE with Frame Relay Encapsulation" on page 154</a>
<b>default-chap-secret</b> <i>name</i>	Interfaces with Point-to-Point Protocol (PPP) encapsulation	<i>Configuring the PPP Challenge Handshake Authentication Protocol</i>
<b>description</b> <i>text</i>	All	<a href="#">"Configuring Interface Description" on page 113</a>
<b>disable</b>	All	<a href="#">"Disabling a Physical Interface" on page 174</a> and <a href="#">"Tracing Operations of an Individual Router Interface" on page 355</a>
<b>dot1x</b>	802.1x Port-Based Network Access Control	<i>IEEE 802.1x Port-Based Network Access Control Overview</i>
<b>down-count</b>	ATM interfaces	<i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>
<b>drop-timeout</b> <i>milliseconds</i>	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>ds0-options</b>	DS0 interfaces	<i>Channelized Interfaces Overview</i>
<b>dsr</b> (ignore   normal   require)	Serial interfaces (EIA-530 and V.35)	<a href="#">"Configuring the Serial Signal Handling" on page 344</a>
<b>dsr-polarity</b> (negative   positive)	Serial interfaces (EIA-530 and V.35)	<a href="#">"Configuring Serial Signal Polarities" on page 347</a>
<b>dte-options</b>	Serial interfaces (EIA-530, V.35, and X.21) on M Series and T Series routers	<a href="#">"Configuring the Serial Signal Handling" on page 344</a>
<b>dtr</b> <i>signal-handling-option</i>	Serial interfaces (EIA-530 and V.35)	<a href="#">"Configuring the Serial Signal Handling" on page 344</a>
<b>dtr-circuit</b> (balanced   unbalanced)	Serial interfaces (EIA-530 and V.35)	<a href="#">"Configuring the Serial DTR Circuit" on page 347</a>
<b>dtr-polarity</b> (negative   positive)	Serial interfaces (EIA-530 and V.35)	<a href="#">"Configuring Serial Signal Polarities" on page 347</a>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<a href="#">e1-options</a>	E1 interfaces	<i>E1 Interfaces Overview</i>
<a href="#">e3-options</a>	E3 interfaces	<i>E3 Interfaces Overview</i>
<a href="#">encapsulation type</a>	All interfaces, except loopback and multicast tunnel	<a href="#">“Configuring Interface Encapsulation on Physical Interfaces” on page 129</a>
<a href="#">encoding (nrz   nrzi)</a>	Serial interfaces (EIA-530, V.35, and X.21)	<a href="#">“Configuring Serial Line Encoding” on page 350</a>
<a href="#">epd-threshold cells</a>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<a href="#">es-options</a>	ES interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">ethernet-policer-profile</a>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC, and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
<a href="#">ethernet-switch-profile</a>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC, Aggregated Ethernet with Gigabit Ethernet IQ interfaces, and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers, Configuring MAC Address Filtering, and Configuring the Management Ethernet Interface</i>
<a href="#">facility-override facility-name</a>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">fastether-options</a>	Fast Ethernet interfaces	<i>Ethernet Interfaces Overview</i>
<a href="#">fcs (16   32)</a>	E1/E3, SONET/SDH, and T1/T3 interfaces	<i>Configuring the E1 Frame Checksum, Configuring the E3 Frame Checksum, Configuring the SONET/SDH Frame Checksum, Configuring the T1 Frame Checksum, and Configuring the T3 Frame Checksum</i>
<a href="#">feac-loop-respond   no-feac-loop-respond</a>	T3 interfaces	<i>Configuring the T3 FEAC Response</i>
<a href="#">flow-control   no-flow-control</a>	Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces	<i>Configuring Flow Control</i>
<a href="#">force</a>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>forwarding-class class-name</code>	ATM2 IQ interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>forwarding-class class-name</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<code>fragment-threshold bytes</code>	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>framing framing-type</code>	E1, E3, and T1 interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces, Configuring E1 Framing, and Configuring T1 Framing</i>
<code>framing framing-type</code>	10-Gigabit Ethernet interfaces	<i>10-Gigabit Ethernet Framing Overview</i>
<code>framing framing-type</code>	SONET interfaces	<i>Configuring SONET/SDH Framing Mode for Ports</i>
<code>gether-options</code>	Gigabit Ethernet and Tri-Rate Ethernet copper interfaces	<i>Ethernet Interfaces Overview</i>
<code>(gratuitous-arp-reply   no-gratuitous-arp-reply)</code>	Ethernet interfaces	<i>Configuring Gratuitous ARP</i>
<code>hello-timer milliseconds</code>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>high-plp-max-threshold</code>	ATM2 interfaces	<i>Configuring ATM2 IQ VC Tunnel CoS Components</i>
<code>high-plp-threshold percent</code>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>hold-time milliseconds</code>	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
<code>hold-time up milliseconds down milliseconds</code>	All interfaces, except aggregated SONET/SDH, generalized routing encapsulation (GRE) tunnel, and IP tunnel	<i>Configuring SONET/SDH Defect Triggers</i>
<code>host hostname</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>ieee802.1p premium [values]</code>	Gigabit Ethernet IQ interfaces	<i>Specifying an Input Priority Map</i>
<code>idle-cycle-flag value</code>	E1, E3, T1, and T3 interfaces	<i>Configuring the E1 Idle Cycle Flag, Configuring the E3 Idle Cycle Flag, Configuring the T1 Idle Cycle Flag, and Configuring the T3 Idle Cycle Flag</i>
<code>ignore-all</code>	Serial interfaces (EIA-530, V.35, and X.21)	<i>"Configuring the Serial Signal Handling" on page 344</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>ilmi</code>	ATM interfaces	<i>Configuring Communication with Directly Attached ATM Switches and Routers</i>
<code>inactivity-timeout seconds</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>indication</code> (ignore   normal   require)	Serial interfaces (X.21)	<a href="#">“Configuring the Serial Signal Handling” on page 344</a>
<code>indication-polarity</code> (negative   positive)	Serial interfaces (X.21)	<a href="#">“Configuring Serial Signal Polarities” on page 347</a>
<code>ingress-rate-limit rate</code>	8-port, 12-port, and 48-port Fast Ethernet interfaces	<i>Configuring the Ingress Rate Limit</i>
<code>input-priority-map</code>	Gigabit Ethernet IQ interfaces	<i>Specifying an Input Priority Map</i>
<code>interface-type type</code>	Channelized IQ and IQE interfaces	<i>Channelized Interfaces Overview</i>
<code>invert-data</code>	DS0, E1, E3, and T1 interfaces	<i>Configuring E1 Data Inversion, Configuring E3 Data Inversion, and Configuring T1 Data Inversion</i>
<code>keepalives</code> <down-count <i>number</i> <interval <i>seconds</i> > <up-count <i>number</i> >	Aggregated SONET/SDH, DS0, E1, E3, SONET/SDH, T1, and T3 interfaces	<a href="#">“Configuring Keepalives” on page 134</a>
<code>lacp mode</code>	Aggregated Ethernet interfaces	<i>Configuring LACP for Aggregated Ethernet Interfaces</i>
<code>line-encoding</code> (ami   b8zs)	T1 interfaces	<i>Configuring T1 Line Encoding</i>
<code>line-protocol protocol</code>	Serial interfaces (EIA-530, V.35, and X.21)	<a href="#">“Configuring the Serial Line Protocol” on page 338</a>
<code>linear-red-profile profile-name</code>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>linear-red-profiles profile-name</code>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>link-layer-overhead percent</code>	AS PIC link services IQ interfaces ( <code>lsq</code> )	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>link-mode mode</code>	Management Ethernet ( <code>fxp0</code> or <code>em0</code> ) and Fast Ethernet interfaces	<a href="#">“Configuring the Link Characteristics” on page 121</a> , <a href="#">“Understanding Management Ethernet Interfaces” on page 10</a>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>link-speed speed</code>	Aggregated Ethernet interfaces	<a href="#">"Configuring Aggregated Ethernet Link Speed" on page 117</a>
<code>link-speed speed</code>	Aggregated SONET/SDH interfaces	<i>Configuring Aggregated SONET/SDH Interfaces</i>
<code>lmi lmi-options</code>	Interfaces with Frame Relay encapsulation	<i>Configuring Frame Relay Keepalives and Junos OS Services Interfaces Library for Routing Devices</i>
<code>lmi</code>	OAM CFM Ethernet Local Management Interface	<i>Configuring Ethernet Local Management Interface</i>
<code>lmi-type (ansi   itu   c-lmi)</code>	Link services interfaces and interfaces with Frame Relay encapsulation	<i>Configuring Frame Relay Keepalives</i>
<code>local-name name</code>	Interfaces with PPP encapsulation	<a href="#">"Configuring the PPP Challenge Handshake Authentication Protocol" on page 136</a>
<code>lockout</code>	SONET/SDH interfaces	<i>Configuring Lockout of Protection for SDH Interfaces</i>
<code>log-prefix prefix-number</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>(long-buildout   no-long-buildout)</code>	T3 interfaces	<i>Configuring the T3 Line Buildout</i>
<code>(loop-timing   no-loop-timing)</code>	Channelized IQ interfaces	<i>Configuring the Channelized T3 Loop Timing</i>
<code>loopback mode</code>	DS0, E1, E3, T1, T3, SHDSL on ATM and SONET/SDH interfaces	<i>Configuring E1 Loopback Capability, Configuring E3 Loopback Capability, Configuring T1 Loopback Capability, Configuring T3 Loopback Capability, Configuring SHDSL Operating Mode on an ATM Physical Interface, Configuring SONET/SDH Loopback Capability to Identify a Problem as Internal or External, and Configuring Ethernet Loopback Capability</i>
<code>loopback mode</code>	Ethernet and 10-Gigabit Ethernet interfaces in WAN PHY mode	<i>Configuring Ethernet Loopback Capability</i>
<code>loopback mode</code>	Serial interfaces	<a href="#">"Configuring Serial Loopback Capability" on page 348</a>
<code>(loopback   no-loopback)</code>	Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces	<i>Configuring Ethernet Loopback Capability</i>
<code>loss-priority (high   low)</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<a href="#">lowest-priority-defect</a> (all-defects   err-xcon   mac-rem-err-xcon   no-defect   rem-err-xcon   xcon)	Configuring IEEE 802.1ag OAM connectivity-fault management	<i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>
<a href="#">low-plp-max-threshold</a> percent	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<a href="#">low-plp-threshold</a> percent	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<a href="#">lsq-failure-options</a>	Link services IQ (lsq) interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">mac</a> mac-address	Management Ethernet interface (fxp0 or em0)	<i>Configuring the MAC Address on the Management Ethernet Interface, "Understanding Management Ethernet Interfaces" on page 10</i>
( <a href="#">mac-learn-enable</a>   no-mac-learn-enable)	Gigabit Ethernet IQ and IQE, Tri-Rate Ethernet copper, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring MAC Address Filtering</i>
<a href="#">master-only</a> ;	Management Ethernet (fxp0 or em0) and Fast Ethernet interfaces	<i>Configuring a Consistent Management IP Address, "Understanding Management Ethernet Interfaces" on page 10</i>
<a href="#">maximum-vcs</a> maximum-vcs	ATM interfaces	<i>Configuring the Maximum Number of ATM1 VCs on a VP</i>
<a href="#">mc-ae</a>	Aggregated Ethernet interfaces	<i>Configuring Multichassis Link Aggregation on MX Series Routers</i>
<a href="#">minimum-links</a> number	Multilink, link services, and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">mip-half-function</a>	Connectivity Fault Management	<i>Configuring IEEE 802.3ah OAM Link-Fault Management</i>
<a href="#">mlfr-uni-nni-bundle-options</a> bundle-options	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">mpls</a>	10-Gigabit Ethernet interfaces in WAN PHY mode and ATM and SONET/SDH interfaces in passive monitoring mode	<i>Removing MPLS Labels from Incoming Packets, Enabling Packet Flow Monitoring on SONET/SDH Interfaces, and SONET/SDH Interfaces Overview</i>
<a href="#">mrru</a> bytes	Link services and voice services interfaces	<i>Junos Services Interfaces Configuration Guide</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<b>mtu bytes</b>	All interfaces, except management Ethernet ( <b>fxp0</b> or <b>em0</b> ), loopback, multilink, and multicast tunnel	<a href="#">“Understanding Management Ethernet Interfaces” on page 10</a> , <a href="#">“Media MTU Overview” on page 100</a> , <a href="#">“Configuring the Media MTU” on page 115</a>
<b>multicast-statistics</b>	Ethernet, SONET, aggregated Ethernet, and aggregated SONET interfaces.	<a href="#">Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces</a> , <a href="#">Configuring Multicast Statistics Collection on SONET Interfaces</a> , <a href="#">Configuring Multicast Statistics Collection on Ethernet Interfaces</a> , and <a href="#">Configuring Multicast Statistics Collection on Aggregated SONET Interfaces</a>
<b>multiservice-options</b>	Adaptive services, monitoring services, and collector interfaces	<a href="#">“Configuring Multiservice Physical Interface Properties” on page 170</a>
<b>n391 number</b>	Link services and voice services interfaces	<a href="#">Junos OS Services Interfaces Library for Routing Devices</a>
<b>n392 number</b>	Link services and voice services interfaces	<a href="#">Junos OS Services Interfaces Library for Routing Devices</a>
<b>n393 number</b>	Link services and voice services interfaces	<a href="#">Junos OS Services Interfaces Library for Routing Devices</a>
<b>neighbor address</b>	SONET/SDH interfaces	<a href="#">SONET/SDH Interfaces Overview</a>
<b>no-gratuitous-arp-request</b>	Ethernet interfaces	<a href="#">Configuring Gratuitous ARP</a>
<b>no-keepalives</b>	Interfaces with PPP, Frame Relay, or Cisco High-level Data Link Control (HDLC) encapsulation	<a href="#">“Configuring Keepalives” on page 134</a>
<b>no-partition</b>	Channelized IQ interfaces	<a href="#">Channelized Interfaces Overview</a>
<b>no-termination-request</b>	Link Services IQ (LSQ) interfaces	<a href="#">Junos OS Services Interfaces Library for Routing Devices</a>
<b>oam-liveness</b>	ATM interfaces	<a href="#">Configuring the OAM F4 Cell Flows</a>
<b>oam-period (seconds   disable)</b>	ATM interfaces	<a href="#">Defining the ATM OAM F5 Loopback Cell Period</a>
<b>oc-slice oc-slice-range</b>	Channelized OC12 IQ interfaces	<a href="#">Channelized OC12/STM4 IQ and IQE Interfaces Overview</a>
<b>open-timeout seconds</b>	Adaptive services interfaces	<a href="#">Junos OS Services Interfaces Library for Routing Devices</a>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<a href="#">optics-options</a>	Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces	<i>Ethernet DWDM Interface Wavelength Overview</i>
<a href="#">output-priority-map</a>	Gigabit Ethernet IQ interfaces	<i>Configuring Gigabit Ethernet Policers</i>
<a href="#">overflow</a> (discard   tag) (Receive bucket)	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ interfaces	<a href="#">"Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion" on page 156</a>
<a href="#">overflow</a> (discard) (Transmit bucket)		
<a href="#">paired-group</a> <i>group-name</i>	SONET/SDH interfaces	<i>Configuring APS Load Sharing</i>
<a href="#">partition</a> <i>partition-number</i>	Channelized IQ interfaces	<i>Channelized Interfaces Overview</i>
<a href="#">passive</a>	Interfaces with PPP encapsulation	<a href="#">"Configuring the PPP Challenge Handshake Authentication Protocol" on page 136</a>
<a href="#">passive-monitor-mode</a>	SONET/SDH interfaces	<i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>
<a href="#">path-trace</a> <i>trace-string</i>	10-Gigabit Ethernet interfaces in WAN PHY mode and SONET/SDH interfaces	<i>Configuring the SONET/SDH Path Trace Identifier for a Circuit</i>
( <a href="#">payload-scrambler</a>   <a href="#">no-payload-scrambler</a> )	E3, SONET/SDH, and T3 interfaces	<i>Configuring E3 and T3 Parameters on ATM Interfaces, Configuring E3 HDLC Payload Scrambling, Configuring SONET/SDH HDLC Payload Scrambling for Link Stability, and Configuring T3 HDLC Payload Scrambling</i>
<a href="#">periodic</a> <i>interval</i>	Aggregated Ethernet interfaces	<i>Configuring LACP for Aggregated Ethernet Interfaces</i>
<a href="#">per-unit-scheduler</a>	IQ interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">pfc</a>	Interfaces with PPP encapsulation	<a href="#">"Configuring the PPP Protocol Field Compression" on page 151</a>
<a href="#">pic-type</a> (atm1   atm2)	ATM2 IQ interfaces	<i>Configuring the ATM PIC Type</i>
<a href="#">plp1</a> <i>cells</i>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<a href="#">plp-to-clp</a>	ATM2 IQ interfaces	<i>Enabling the PLP Setting to Be Copied to the CLP Bit</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<b>policer</b> <i>cos-policer-name</i>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring Gigabit Ethernet Policers</i>
<b>pop-all-labels</b>	ATM and SONET/SDH interfaces in passive monitoring mode	<i>Removing MPLS Labels from Incoming Packets and Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>
<b>ppp-options</b>	Interfaces with PPP encapsulation	<a href="#">“Configuring the PPP Challenge Handshake Authentication Protocol” on page 136</a>
<b>premium</b>	Enhanced Intelligent Queuing (IQE) interfaces (hierarchical policer)	<a href="#">“Applying Policers” on page 226</a> and <i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i>
<b>premium</b>	Gigabit Ethernet IQ interfaces (policer)	<i>Configuring Gigabit Ethernet Policers</i>
<b>premium</b>	Gigabit Ethernet IQ interfaces (output priority map)	<i>Configuring MAC Address Filtering</i>
<b>primary</b> <i>sp-fpc/pic/port</i>	Redundant interfaces for adaptive services interfaces ( <b>rsp-</b> )	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>priority</b> (high   low)	ATM2 IQ interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<b>priority</b> <i>number</i>	Ethernet protocols (OAM CFM)	<i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i>
<b>promiscuous-mode</b>	ATM2 IQ interfaces	<i>Configuring ATM Cell-Relay Promiscuous Mode</i>
<b>protect-circuit</b> <i>group-name</i>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
<b>queue-depth</b> <i>cells</i>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<b>queue-length</b> <i>number</i>	ATM1 interfaces	<i>Configuring the ATM1 Queue Length</i>
<b>rate</b> <i>percentage</i>	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ	<a href="#">“Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion” on page 156</a>
<b>receive-bucket</b>	All interfaces, except ATM, Fast Ethernet, and Gigabit Ethernet	<a href="#">“Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion” on page 156</a>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<a href="#">red-differential-delay</a> <i>milliseconds</i>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">redundancy-options</a>	Redundant interfaces for adaptive services interfaces ( <b>rsp-</b> )	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">remote-loopback-respond</a>	T1 interfaces	<i>Configuring the T1 Remote Loopback Response</i>
<a href="#">request</a>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
<a href="#">required-depth</a> <i>number</i>	ATM and SONET/SDH interfaces in passive monitoring mode	<i>Removing MPLS Labels from Incoming Packets and Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>
<a href="#">revert-time</a> <i>seconds</i>	SONET/SDH interfaces	<i>Configuring Revertive Mode</i>
<a href="#">rfc-2615</a>	SONET/SDH interfaces	<i>Configuring PPP Support on SONET/SDH Interfaces</i>
<a href="#">rts</a> (assert   de-assert   normal)	Serial interfaces (EIA-530 and V.35)	<a href="#">“Configuring the Serial Signal Handling” on page 344</a>
<a href="#">rts-polarity</a> (negative   positive)	Serial interfaces (EIA-530 and V.35)	<a href="#">“Configuring Serial Signal Polarities” on page 347</a>
<a href="#">rtvbr</a> <i>peak rate sustained rate burst length</i>	ATM interfaces	<i>Configuring ATM CBR</i>
<a href="#">scheduler-maps</a> <i>map-name</i>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<a href="#">schedulers</a> <i>number</i>	Ethernet IQ2 and IQ2-E PICs port interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">secondary</a> <i>sp-fpc/pic/port</i>	Redundant interfaces for adaptive services interfaces ( <b>rsp-</b> )	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">services-options</a>	Services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">serial-options</a>	Serial interfaces (EIA-530, V.35, and X.21)	<a href="#">“Serial Interfaces Overview” on page 335</a>
<a href="#">services</a> <i>priority-level</i>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<a href="#">size</a>	All	<a href="#">“Tracing Operations of the Interface Process” on page 356</a>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<a href="#">shaping</a>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
<a href="#">shaping</a>	Circuit Emulation PICs	<i>Configuring ATM QoS or Shaping</i>
<a href="#">sonet-options</a>	SONET/SDH interfaces	<i>SONET/SDH Interfaces Overview</i>
<a href="#">source-address-filter</a> <a href="#">mac-address</a>	Aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet interfaces	<i>Configuring MAC Address Filtering for Ethernet Interfaces</i>
( <a href="#">source-filtering</a>   <a href="#">no-source-filtering</a> )	Aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, Gigabit Ethernet IQ and IQE, and Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring MAC Address Filtering for Ethernet Interfaces</i>
<a href="#">speed</a> (10m   100m   1g   auto)	Management Ethernet interface ( <a href="#">fxp0</a> or <a href="#">em0</a> ), Tri-Rate Ethernet copper interfaces, and 12-port and 48-port Fast Ethernet interfaces	<a href="#">“Configuring the Interface Speed on Ethernet Interfaces” on page 116</a> , <a href="#">“Understanding Management Ethernet Interfaces” on page 10</a>
<a href="#">speed</a> (oc3   oc12   oc48)	SONET/SDH PICs with SFP	<a href="#">“Configuring SONET/SDH Interface Speed” on page 120</a>
<a href="#">stacked-vlan-tagging</a>	Gigabit Ethernet IQ interfaces	<i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i>
<a href="#">start-end-flag</a> (filler   shared)	DS0, E1, E3, T1, and T3 interfaces	<i>Configuring E1 Start and End Flags, Configuring the E3 Start and End Flags, Configuring T1 Start and End Flags, and Configuring T3 Start and End Flags</i>
<a href="#">switching-mode</a> (bidirectional   unidirectional)	Unchannelized OC3, OC12, and OC48 SONET/SDH interfaces on T Series routers	<i>Configuring Switching Mode</i>
<a href="#">syslog</a>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
( <a href="#">syslog</a>   <a href="#">no-syslog</a> )	Adaptive services, monitoring services, and collector interfaces	<a href="#">“Configuring Multiservice Physical Interface Properties” on page 170</a>
<a href="#">t1-options</a>	T1 interfaces	<i>T1 Interfaces Overview</i>
<a href="#">t3-options</a>	T3 interfaces	<i>T3 Interfaces Overview</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<b>t391 seconds</b>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>t392 number</b>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>threshold bytes</b>	All interfaces, except ATM, channelized E1, E1, Fast Ethernet, Gigabit Ethernet, and channelized IQ	<a href="#">“Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion” on page 156</a>
<b>timeslots time-slot-range</b>	Channelized T1 IQ and channelized E1 IQ interfaces	<i>Channelized Interfaces Overview</i>
<b>tm (ignore   normal   require)</b>	Serial interfaces (EIA-530)	<a href="#">“Configuring the Serial Signal Handling” on page 344</a>
<b>tm-polarity (negative   positive)</b>	Serial interfaces (EIA-530)	<a href="#">“Configuring Serial Signal Polarities” on page 347</a>
<b>traceoptions</b>	All	<a href="#">“Tracing Operations of an Individual Router Interface” on page 355</a>
<b>traceoptions</b>	All	<a href="#">“Tracing Operations of the Interface Process” on page 356</a>
<b>transmit-bucket</b>	All interfaces, except ATM, Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet	<a href="#">“Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion” on page 156</a>
<b>transmit-clock invert</b>	Serial interfaces (EIA-530, V.35, and X.21)	<a href="#">“Configuring the Serial Clocking Mode” on page 342</a>
<b>transmit-weight (cells number   percent number)</b>	ATM2 IQ interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<b>(traps   no-traps)</b>	All	<a href="#">“Enabling or Disabling SNMP Notifications on Physical Interfaces” on page 171</a>
<b>trigger defect ignore   defect hold-time up milliseconds down milliseconds;</b>	10-Gigabit Ethernet interfaces in WAN PHY mode and ATM over SONET/SDH and SONET/SDH interfaces	<i>Configuring SONET/SDH Defect Triggers</i>
<b>(unframed   no-unframed)</b>	E3 IQ interfaces	<i>Configuring E3 IQ and IQE Unframed Mode</i>

Table 34: Statements for Physical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>unidirectional</code>	10-Gigabit Ethernet interfaces on: <ul style="list-style-type: none"> <li>MX960 4-Port 10-Gigabit Ethernet DPC</li> <li>T Series 10-Gigabit Ethernet IQ2 PIC</li> <li>T Series 10-Gigabit Ethernet IQ2E PIC</li> </ul>	<a href="#">“Enabling Unidirectional Traffic Flow on Physical Interfaces” on page 158</a>
<code>vbr peak rate sustained rate burst length</code>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
<code>vc-cos-mode (alternate   strict)</code>	ATM2 interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>vlan-tagging</code>	Fast Ethernet, Tri-Rate Ethernet copper, and Gigabit Ethernet interfaces	<i>802.1Q VLANs Overview</i>
<code>vlan-vci-tagging</code>	Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet interfaces	<a href="#">“Configuring ATM-to-Ethernet Interworking” on page 282</a>
<code>vpi vpi-identifier</code>	ATM interfaces	<i>Configuring ATM Cell-Relay Promiscuous Mode and Configuring the Maximum Number of ATM1 VCs on a VP</i>
<code>vtmapping</code>	Channelized STM1 interfaces	<i>Configuring Virtual Tributary Mapping of Channelized STM1 Interfaces</i>
<code>warning warning-name (syslog   link-down)</code>	10-Gigabit Ethernet interfaces	<i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i>
<code>wavelength nm</code>	Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces	<i>Ethernet DWDM Interface Wavelength Overview</i>
<code>working-circuit group-name</code>	SONET/SDH interfaces	<i>Configuring Switching Between the Working and Protect Circuits</i>
<code>yellow-differential-delay milliseconds</code>	Link services and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>(z0-increment   no-z0-increment)</code>	SONET/SDH interfaces	<i>Configuring an Incrementing STM ID to Interoperate with Older Equipment in SDH Mode</i>

**Related Documentation** • [Junos OS Services Interfaces Library for Routing Devices](#)

## Configuring Interface Ranges

---



**NOTE:** This task uses Junos OS for EX Series switches that does not support the Enhanced Layer 2 Software (ELS) configuration style. If your switch runs software that supports ELS, see *Configuring Interface Ranges for EX Series Switches with ELS*. For ELS details, see *Using the Enhanced Layer 2 Software CLI*.

The Junos OS allows you to group a range of identical interfaces into an *interface range*. You first specify the group of identical interfaces in the interface range. Then you can apply a common configuration to the specified interface range, reducing the number of configuration statements required and saving time while producing a compact configuration.

- [Configuring Interface Ranges on page 90](#)
- [Expanding Interface Range Member and Member Range Statements on page 94](#)
- [Configuration Inheritance for Member Interfaces on page 95](#)
- [Member Interfaces Inheriting Configuration from Configuration Groups on page 97](#)
- [Interfaces Inheriting Common Configuration on page 98](#)
- [Configuring Inheritance Range Priorities on page 98](#)
- [Configuration Expansion Where Interface Range Is Used on page 99](#)

## Configuring Interface Ranges

To configure an interface range, include the **interface-range** statement at the **[edit interfaces]** hierarchy level.

The **interface-range** statement accepts only physical networking interface names in its definition. The following interface types are supported and example CLI descriptors are shown:

- ATM—**at-*fpc/pic/port***
- Channelized—**(coc | cstm)*n-fpc/pic/port***
- DPC—**xe-*fpc/pic/port***
- E1/E3—**(e1 | e3)-*fpc/pic/port***
- Ethernet—**(xe | ge | fe)-*fpc/pic/port***
- ISDN—**isdn-*fpc/pic/port***
- Serial—**se-*fpc/pic/port***
- SONET/SDH—**so-*fpc/pic/port***
- T1/T3—**(t1 | t3)-*fpc/pic/port***

Interfaces can be grouped either as a range of interfaces or using a number range under the **interface-range** statement definition.

Interfaces in an **interface-range** definition can be added as part of a member range or as individual members or multiple members using a number range.

To specify a member range, use the **member-range** statement at the **[edit interfaces interface-range name]** hierarchy level.

To specify interfaces in lexical order, use the **member-range start-range to end-range** statement.

A range for a member statement should contain the following:

- **\***—All, specifies sequential interfaces from 0 through 47.



**CAUTION:** The wildcard **\*** in a member statement does not take into account the interface numbers supported by a specific interface type. Irrespective of the interface type, **\*** includes interface numbers ranging from 0 through 47 to the interface group. Therefore, use **\*** in a member statement with caution.

- **num**—Number, specifies one specific interface by its number.
- **[low-high]**—Numbers between low to high, specifies a range of sequential interfaces.
- **[num1, num2, num3]**—Numbers **num1**, **num2**, and **num3** specify multiple specific interfaces.

**Example: Specifying an  
Interface Range  
Member Range**

```
member-range ge-0/0/0 to ge-4/0/40;
```

To specify one or multiple members, use the **member** statement at the **[edit interfaces interface-range name]** hierarchy level.

To specify the list of interface range members individually or for multiple interfaces using regex, use the **member list of interface names** statement.

**Example: Specifying an  
Interface Range  
Member**

```
member ge-0/0/0;  
member ge-0/*/*  
member ge-0/[1-10]/0;  
member ge-0/[1,2,3]/3;
```

Regex or wildcards are not supported for interface-type prefixes. For example, prefixes **ge**, **fe**, and **xe** must be mentioned explicitly.

An **interface-range** definition can contain both **member** and **member-range** statements within it. There is no maximum limit on the number of **member** or **member-range** statements within an interface-range. However, at least one **member** or **member-range** statement must exist within an **interface-range** definition.

**Example: Interface Range Common Configuration**

Configuration common to an interface range can be added as a part of the **interface-range** definition, as follows:

```
[edit]
interfaces {
  + interface-range foo {
  + member-range ge-1/0/0 to ge-4/0/40;
  + member ge-0/1/1;
  + member ge-5/[1-10]/*;
  /*Common configuration is added as part of interface-range definition*/
  mtu 256;
  hold-time up 10;
  ether-options {
    flow-control;
    speed {
      100m;
    }
    802.3ad primary;
  }
}
```

An **interface-range** definition having just **member** or **member-range** statements and no common configurations statements is valid.

These defined interface ranges can be used in other configuration hierarchies, in places where an **interface** node exists.

**Example: Interface-Range foo Used Under the Protocols Hierarchy**

```
protocols {
  dot1x {
    authenticator {
      interface foo{
        retries 1;
      }
    }
  }
}
```

**foo** should be an **interface-range** defined at the **[interfaces]** hierarchy level. In the above example, the **interface** node can accept both individual interfaces and interface ranges.



**TIP:** To view an interface range in expanded configuration, use the (**show | display inheritance**) command. For more information, see the *CLI User Guide*.

By default, **interface-range** is not available to configure in the CLI where the **interface** statement is available. The following locations are supported; however, some of the hierarchies shown in this list are product specific:

- protocols dot1x authentication interface
- protocols dvmrp interface
- protocols oam ethernet lmi interface

- protocols esis interface
- protocols igmp interface
- protocols igmp-host client *num* interface
- protocols mld-host client *num* interface
- protocols router-advertisement interface
- protocols isis interface
- protocols ldp interface
- protocols oam ethernet link-fault-management interface
- protocols lldp interface
- protocols link-management peer lmp-control-channel interface
- protocols link-management peer control-channel
- protocols link-management te-link *name* interface
- protocols mld interface
- protocols ospf area *id* interface
- protocols pim interface
- protocols router-discovery interface
- protocols rip group *name* neighbour
- protocols ripng group *name* neighbour
- protocols rsvp interface
- protocols snmp interface
- protocols layer2-control bpdu-block interface
- protocols layer2-control mac-rewrite interface
- protocols mpls interface
- protocols stp interface
- protocols rstp interface
- protocols mstp interface
- protocols vstp interface
- protocols mstp msti *id* interface
- protocols mstp msti vlan *id* interface
- protocols vstp vlan *name* interface
- protocols gvrp interface
- protocols igmp-snooping vlan *name* interface
- protocols lldp interface

- protocols lldp-med interface
- protocols sflow interfaces
- ethernet-switching-options analyzer *name* input [egress | ingress ] interface
- ethernet-switching-options analyzer *name* output interface
- ethernet-switching-options secure-access-port interface
- ethernet-switching-options interfaces ethernet-switching-options voip interface
- ethernet-switching-options redundant-trunk-group group *g1* interface
- ethernet-switching-options redundant-trunk-group group *g1* interface
- ethernet-switching-options bpdu-block interface
- poe interface vlans pro-bng-mc1-bsd1 interface

- See Also**
- [Expanding Interface Range Member and Member Range Statements on page 94](#)
  - [Configuration Inheritance for Member Interfaces on page 95](#)
  - [Member Interfaces Inheriting Configuration from Configuration Groups on page 97](#)
  - [Interfaces Inheriting Common Configuration on page 98](#)
  - [Configuring Inheritance Range Priorities on page 98](#)
  - [Configuration Expansion Where Interface Range Is Used on page 99](#)
  - *Physical Interfaces*

## Expanding Interface Range Member and Member Range Statements

All **member** and **member-range** statements in an interface range definition are expanded to generate the final list of interface names for the specified interface range.

### Example: Expanding Interface Range Member and Member Range Statements

```
[edit]
interfaces {
  interface-range range-1 {
    member-range ge-0/0/0 to ge-4/0/20;
    member ge-10/1/1;
    member ge-5/[0-5]/*;
    /*Common configuration is added part of the interface-range definition*/
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
      speed {
        100m;
      }
      802.3ad primary;
    }
  }
}
```

```
}

```

For the **member-range** statement, all possible interfaces between **start-range** and **end-range** are considered in expanding the members. For example, the following **member-range** statement:

```
member-range ge-0/0/0 to ge-4/0/20
```

expands to:

```
[ge-0/0/0, ge-0/0/1 ... ge-0/0/max_ports
ge-0/1/0 ge-0/1/1 ... ge-0/1/max_ports
ge-0/2/0 ge-0/2/1 ... ge-0/2/max_ports
.
.
ge-0/MAX_PICS/0 ... ge-0/max_pics/max_ports
ge-1/0/0 ge-1/0/1 ... ge-1/0/max_ports
.
ge-1/MAX_PICS/0 ... ge-1/max_pics/max_ports
.
.
ge-4/0/0 ge-4/0/1 ... ge-4/0/max_ports]
```

The following **member** statement:

```
ge-5/[0-5]/*
```

expands to:

```
ge-5/0/0 ... ge-5/0/max_ports
ge-5/1/0 ... ge-5/0/max_ports
.
.
ge-5/5/0 ... ge-5/5/max_ports
```

The following **member** statement:

```
ge-5/1/[2,3,6,10]
```

expands to:

```
ge-5/1/2
ge-5/1/3
ge-5/1/6
ge-5/1/10
```

**See Also** • *Physical Interfaces*

## Configuration Inheritance for Member Interfaces

When the Junos OS expands the **member** and **member-range** statements present in an **interface-range**, it creates *interface objects* if they are not explicitly defined in the configuration. The common configuration is copied to all its member interfaces in the **interface-range**.

**Example:** Foreground interface configuration takes priority compared to configuration inherited by the interface through the **interface-range**.

**Configuration Priorities**

```
interfaces {
  interface-range range-1 {
    member-range ge-1/0/0/ to ge-10/0/47;
    mtu 256;
  }
  ge-1/0/1 {
    mtu 1024;
  }
}
```

In the preceding example, interface **ge-1/0/1** will have an MTU value of 1024.

This can be verified with output of the **show interfaces | display inheritance** command, as follows:

```
user@host: # show interfaces | display inheritance
## 'ge-1/0/0' was expanded from interface-range 'range-1'
##
ge-1/0/0 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}
ge-1/0/1 {
  mtu 1024;
}
##
## 'ge-1/0/2' was expanded from interface-range 'range-1'
##
ge-1/0/2 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}
.....
.....
##
## 'ge-10/0/47' was expanded from interface-range 'range-1'
##
ge-10/0/47 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
}
```

**See Also** • *Physical Interfaces*

## Member Interfaces Inheriting Configuration from Configuration Groups

Interface range member interfaces inherit the config-groups configuration like any other foreground configuration. **interface-range** is similar to any other foreground configuration statement. The only difference is that the **interface-range** goes through a member interfaces expansion before Junos OS reads this configuration.

```
groups {
  global {
    interfaces {
      <*> {
        hold-time up 10;
      }
    }
  }
  apply-groups [global];
  interfaces {
    interface-range range-1 {
      member-range ge-1/0/0 to ge-10/0/47;
      mtu 256;
    }
  }
}
```

The **hold-time** configuration is applied to all members of **interface-range range-1**.

This can be verified with **show interfaces | display inheritance** as follows:

```
user@host# show interfaces | display inheritance
ge-1/0/0 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
  ##
  ## 'hold-time' was inherited from group 'global'
  ## '10' was inherited from group 'global'
  ##
  hold-time up 10;
}
ge-1/0/1 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
  ##
  ## 'hold-time' was inherited from group 'global'
  ## '10' was inherited from group 'global'
  ##
  hold-time up 10;
}
ge-10/0/47 {
  ##
  ## '256' was expanded from interface-range 'range-1'
  ##
  mtu 256;
  ##
  ## 'hold-time' was inherited from group 'global'
```

```
## '10' was inherited from group 'global'
##
hold-time up 10;
}
```

**See Also** • *Using Wildcards with Configuration Groups*

## Interfaces Inheriting Common Configuration

If an interface is a member of several interface ranges, that interface will inherit the common configuration from all of those interface ranges.

```
[edit]
interfaces {
  interface-range range-1 {
    member-range ge-1/0/0 to ge-10/0/47;
    mtu 256;
  }
}
interfaces {
  interface-range range-1 {
    member-range ge-10/0/0 to ge-10/0/47;
    hold-time up 10;
  }
}
```

In this example, interfaces **ge-10/0/0** through **ge-10/0/47** will have both **hold-time** and **mtu**.

## Configuring Inheritance Range Priorities

The interface ranges are defined in the order of inheritance priority, with the first interface range configuration data taking priority over subsequent interface ranges.

```
[edit]
interfaces {
  interface-range int-grp-one {
    member-range ge-0/0/0 to ge-4/0/40;
    member ge-1/1/1;
    /*Common config is added part of the interface-range definition*/
    mtu 256;
    hold-time up 10;
  }
}
interfaces {
  interface-range int-grp-two {
    member-range ge-5/0/0 to ge-10/0/40;
    member ge-1/1/1;
    mtu 1024;
  }
}
```

Interface **ge-1/1/1** exists in both **interface-range int-grp-one** and **interface-range int-grp-two**. This interface inherits **mtu 256** from **interface-range int-grp-one** because it was defined first.

See Also • *Physical Interfaces*

## Configuration Expansion Where Interface Range Is Used

In this example, **interface-range range-1** is used under the **protocols** hierarchy:

```
[edit]
interfaces {
  interface-range range-1 {
    member ge-10/1/1;
    member ge-5/5/1;
    mtu 256;
    hold-time up 10;
    ether-options {
      flow-control;
      speed {
        100m;
      }
      802.3ad primary;
    }
  }
}
protocols {
  dot1x {
    authenticator {
      interface range-1 {
        retries 1;
      }
    }
  }
}
```

The **interface** node present under **authenticator** is expanded into member interfaces of the **interface-range range-1** as follows:

```
protocols {
  dot1x {
    authenticator {
      interface ge-10/1/1 {
        retries 1;
      }
      interface ge-5/5/1 {
        retries 1;
      }
    }
  }
}
```

The **interface range-1** statement is expanded into two interfaces, ge-10/1/1 and ge-5/5/1, and configuration **retries 1** is copied under those two interfaces.

This configuration can be verified using the **show protocols dot1x | display inheritance** command.

See Also • *Physical Interfaces*

**Related Documentation** • *Physical Interfaces*

---

## Specifying an Aggregated Interface

The M Series, MX Series, and T Series routers support aggregated interfaces. To specify an aggregated interface assign a number with the aggregated interface name. For example, configure **aex** at the **[edit interfaces]** hierarchy level, where *x* is an integer ranging 0 through 127 for M Series and T Series routers and 0 through 479 on MX Series routers.

For aggregated SONET/SDH interfaces, configure **asx** at the **[edit interfaces]** hierarchy level.



**NOTE:** SONET/SDH aggregation is proprietary to the Junos OS and might not work with other software.

---

If you are configuring VLANs for aggregated Ethernet interfaces, you must include the **vlan-tagging** statement at the **[edit interfaces aex]** hierarchy level to complete the association.

**Related Documentation** • *Aggregated Ethernet Interfaces Overview*  
• *Configuring Aggregated SONET/SDH Interfaces*

---

## Media MTU Overview

The media maximum transmission unit (MTU) is the largest data unit that can be forwarded without fragmentation.

The default media MTU size used on a physical interface depends on the encapsulation used on that interface. In some cases, the default IP Protocol MTU depends on whether the protocol used is IP version 4 (IPv4) or International Organization for Standardization (ISO).

The default media MTU is calculated as follows:

**Default media MTU = Default IP MTU + encapsulation overhead**

When you are configuring point-to-point connections, the MTU sizes on both sides of the connections must be the same. Also, when you are configuring point-to-multipoint connections, all interfaces in the subnet must use the same MTU size.



**NOTE:** The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the media MTU. For example, the media MTU for a Gigabit Ethernet Version 2 interface is specified as 1514 bytes, but the largest possible frame size is actually 1518 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

The physical MTU for Ethernet interfaces does not include the 4-byte frame check sequence (FCS) field of the Ethernet frame.

A SONET/SDH interface operating in concatenated mode has a “c” added to the rate descriptor. For example, a concatenated OC48 interface is referred to as OC48c.

If you do not configure an MPLS MTU, the Junos OS derives the MPLS MTU from the physical interface MTU. From this value, the software subtracts the encapsulation-specific overhead and space for the maximum number of labels that might be pushed in the Packet Forwarding Engine. Currently, the software provides for three labels of four bytes each, for a total of 12 bytes.

In other words, the formula used to determine the MPLS MTU is the following:

$$\text{MPLS MTU} = \text{physical interface MTU} - \text{encapsulation overhead} - 12$$

#### Related Documentation

- [Configuring the Media MTU on page 115](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 112](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 112](#)

## Media MTU Sizes by Interface Type

The media maximum transmission unit (MTU) is the largest data unit that can be forwarded without fragmentation.

If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead.

This topic includes following information:

- [Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers on page 102](#)
- [Media MTU Sizes by Interface Type for M40e Routers on page 103](#)
- [Media MTU Sizes by Interface Type for M160 Routers on page 104](#)
- [Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers on page 104](#)
- [Media MTU Sizes by Interface Type for MX Series Routers on page 105](#)
- [Media MTU Sizes by Interface Type for T320 Routers on page 107](#)
- [Media MTU Sizes by Interface Type for T640 Platforms on page 107](#)

- [Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers on page 108](#)
- [Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers on page 108](#)

### Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers

**Table 35: Media MTU Sizes by Interface Type for M5 and M7i Routers with CFEB, M10 and M10i Routers with CFEB, and M20 and M40 Routers**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	9192	1500
E3/T3	4474	9192	4470
Fast Ethernet	1514	1533 (4-port) 1532 (8-port) 1532 (12-port)  <b>NOTE:</b> The maximum MTU for two 100Base-TX Fast Ethernet port FIC is 9192 bytes.	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192  <b>NOTE:</b> The maximum MTU for one Gigabit Ethernet port FIC is 9192 bytes.	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470

### Media MTU Sizes by Interface Type for M40e Routers

*Table 36: Media MTU Sizes by Interface Type for M40e Routers*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	4500	1500
E3/T3	4474	4500 9192 (4-port)	4470
E3/DS3 IQ	4474	9192	4470
Fast Ethernet	1514	1533	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 (1- or 2-port) 9192 (4-port)	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	4500 (1-port nonconcatenated) 9192 (4-port OC3) 9192 (4-port OC3c) 4500 (1-port OC12) 4500 (4-port OC12) 4500 (4-port OC12c) 4500 (1-port OC48) 9192 (2-port OC3) 9192 (2-port OC3c) 9192 (1-port OC12c) 9192 (1-port OC48c) 4500 (1-port OC192) 9192 (1-port OC192c)	4470

### Media MTU Sizes by Interface Type for M160 Routers

*Table 37: Media MTU Sizes by Interface Type for M160 Routers*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Adaptive Services (MTU size not configurable)	9192	N/A	N/A
ATM	4482	9192	4470
E1/T1	1504	4500	1500
E3/T3	4474	4500	4470
E3/DS3 IQ	4474	9192	4470
Fast Ethernet	1514	1533	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192 (1- or 2-port) 4500 (4-port)	1500 (IPv4), 1497 (ISO)
Serial	1504	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	4500 (1-port nonconcatenated) 9192 (1- or 2-port) 4500 (4-port)	4470

### Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers

*Table 38: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM2 IQ	4482	9192	4470
Channelized DS3 IQ	4471	4500	4470
Channelized E1 IQ	1504	4500	1500
Channelized OC12 IQ	4474	9192	4470

**Table 38: Media MTU Sizes by Interface Type for M7i Routers with CFEB-E, M10i Routers with CFEB-E, and M320 and M120 Routers (continued)**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Channelized STM1 IQ	4474	9192	4470
DS3	4471	4500	4470
E1	1504	4500	1500
E3 IQ	4471	4500	4470
Fast Ethernet	1514	1533 (4-port) 1532 (8-, 12- and 48-port)	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
T1	1504	4500	1500
CT3 IQ (excluding M120)	4474	9192	4470

#### Media MTU Sizes by Interface Type for MX Series Routers

**Table 39: Media MTU Sizes by Interface Type for MX Series Routers**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	<ul style="list-style-type: none"> <li>9192</li> <li>9500 (Junos OS 16.1R1 and later releases)</li> </ul>	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
10-Gigabit Ethernet	1514	<ul style="list-style-type: none"> <li>9192</li> <li>9500 (Junos OS 16.1R1 and later releases)</li> </ul>	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Multi-Rate Ethernet	1514	<ul style="list-style-type: none"> <li>9192</li> <li>9500 (Junos OS 16.1R1 and later releases)</li> </ul>	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
Tri-Rate Ethernet	1514	<ul style="list-style-type: none"> <li>9192</li> <li>9500 (Junos OS 16.1R1 and later releases)</li> </ul>	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

**Table 39: Media MTU Sizes by Interface Type for MX Series Routers (continued)**

Channelized SONET/SDH OC3/STM1 (Multi-Rate)	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
DS3/E3 (Multi-Rate)	1514	9192	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

**NOTE:** Starting in Junos OS Release 16.1R1, the MTU size for a media or protocol is increased from 9192 to 9500 for Ethernet interfaces on the following MX Series MPCs:

- MPC1
- MPC2
- MPC2E
- MPC3E
- MPC4E
- MPC5E
- MPC6E



**NOTE:** Starting in Junos OS Release 16.1R1, the MTU size for a media or protocol is increased from 9192 to 9500 for Ethernet interfaces on the following MX Series MPCs:

- MPC1
- MPC2
- MPC2E
- MPC3E
- MPC4E
- MPC5E
- MPC6E

Starting in Junos OS Release 16.1R1, the MTU size has been increased to 16,000 bytes for certain MPCs. The MTU size for the following MPCs has been increased to 16000 bytes:

- MPC7E (MPC7E-MRATE and MP7E-10G)
- MPC8E (MX2K-MPC8E)
- MPC9E (MX2K-MPC9E)

Starting in Junos OS Release 17.3R1, the MTU size for MX10003 MPC is 16,000 bytes.

Starting in Junos OS Release 17.4R1, the MTU size for MX204 is 16,000 bytes.

### Media MTU Sizes by Interface Type for T320 Routers

*Table 40: Media MTU Sizes by Interface Type for T320 Routers*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM	4482	9192	4470
ATM2 IQ	4482	9192	4470
Channelized OC12 IQ	4474	9192	4470
Channelized STM1 IQ	4474	9192	4470
DS3	4471	4500	4470
Fast Ethernet	1514	1533 (4-port) 1532 (12- and 48-port)	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
CT3 IQ	4474	9192	4470

### Media MTU Sizes by Interface Type for T640 Platforms

*Table 41: Media MTU Sizes by Interface Type for T640 Platforms*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
ATM2 IQ	4482	9192	4470
48-port Fast Ethernet	1514	1532	1500 (IPv4), 1497 (ISO)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
SONET/SDH	4474	9192	4470
CT3 IQ	4474	9192	4470

### Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers

**Table 42: Media MTU Sizes by Interface Type for EX Series Switches and ACX Series Routers**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
10-Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)



**NOTE:** On ACX Series routers, you can configure the protocol MTU by including the `mtu` statement at the `[edit interfaces interface-name unit logical-unit-number family inet]` or `[edit interfaces interface-name unit logical-unit-number family inet6]` hierarchy level.

- If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.
- If you are configuring the protocol MTU for both `inet` and `inet6` families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for `inet` and `inet6` families that are configured on the same logical interface.

### Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers

**Table 43: Media MTU Sizes by Interface Type for PTX Series Packet Transport Routers**

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
10-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
40-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)
100-Gigabit Ethernet	1514	9500	1500 (IPv4), 1488 (MPLS), 1497 (ISO)

**Release History Table**

Release	Description
17.4R1	Starting in Junos OS Release 17.4R1, the MTU size for MX204 is 16,000 bytes.
17.3R1	Starting in Junos OS Release 17.3R1, the MTU size for MX10003 MPC is 16,000 bytes.
16.1R1	Starting in Junos OS Release 16.1R1, the MTU size has been increased to 16,000 bytes for certain MPCs.

**Related Documentation**

- [Encapsulation Overhead by Interface Encapsulation Type on page 112](#)
- [Configuring the Media MTU on page 115](#)
- [Media MTU Overview on page 100](#)
- [Setting the Protocol MTU on page 224](#)

## Configuring the Media MTU on ACX Series Routers

- [Media MTU Overview on page 109](#)
- [How to Configure the Media MTU on page 110](#)
- [Encapsulation Overhead by Encapsulation Type on page 111](#)
- [Media MTU Sizes by Interface Type for ACX Series Routers on page 112](#)

### Media MTU Overview

The default media MTU size used on a physical interface depends on the encapsulation used on that interface. In some cases, the default IP Protocol MTU depends on whether the protocol used is IP version 4 (IPv4) or International Organization for Standardization (ISO).

The default media MTU is calculated as follows:

$$\text{Default media MTU} = \text{Default IP MTU} + \text{encapsulation overhead}$$

When you are configuring point-to-point connections, the MTU sizes on both sides of the connections must be the same. Also, when you are configuring point-to-multipoint connections, all interfaces in the subnet must use the same MTU size. For details about encapsulation overhead, see [“Encapsulation Overhead by Encapsulation Type” on page 111](#).



**NOTE:** The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the media MTU. For example, the media MTU for a Gigabit Ethernet Version 2 interface is specified as 1514 bytes, but the largest possible frame size is actually 1518 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

The physical MTU for Ethernet interfaces does not include the 4-byte frame check sequence (FCS) field of the Ethernet frame.

If you do not configure an MPLS MTU, the Junos OS derives the MPLS MTU from the physical interface MTU. From this value, the software subtracts the encapsulation-specific overhead and space for the maximum number of labels that might be pushed in the Packet Forwarding Engine. Currently, the software provides for three labels of four bytes each, for a total of 12 bytes.

In other words, the formula used to determine the MPLS MTU is the following:

$$\text{MPLS MTU} = \text{physical interface MTU} - \text{encapsulation overhead} - 12$$

If you configure an MTU value by including the `mtu` statement at the `[edit interfaces interface-name unit logical-unit-number family mpls]` hierarchy level, the configured value is used. Junos OS Release 16.2R1.6 and later releases do not support `family mpls` MTU.

---

## How to Configure the Media MTU

To modify the default media MTU size for a physical interface, include the `mtu` statement at the `[edit interfaces interface-name]` hierarchy level:

```
[edit interfaces interface-name]  
mtu bytes;
```

If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead.



**NOTE:** Changing the media MTU or protocol MTU causes an interface to be deleted and added again.

You configure the protocol MTU by including the `mtu` statement at the following hierarchy levels:

- `[edit interfaces interface-name unit logical-unit-number family inet]`
- `[edit interfaces interface-name unit logical-unit-number family inet6]`

If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.



**NOTE:** If you are configuring the protocol MTU for both `inet` and `inet6` families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for `inet` and `inet6` families that are configured on the same logical interface.

## Encapsulation Overhead by Encapsulation Type

*Table 44: Encapsulation Overhead by Encapsulation Type*

Interface Encapsulation	Encapsulation Overhead (Bytes)
802.1Q/Ethernet 802.3	21
802.1Q/Ethernet Subnetwork Access Protocol (SNAP)	26
802.1Q/Ethernet version 2	18
ATM Cell Relay	4
ATM permanent virtual connection (PVC)	12
Cisco HDLC	4
Ethernet 802.3	17
Ethernet circuit cross-connect (CCC) and virtual private LAN service (VPLS)	4
Ethernet over ATM	32
Ethernet SNAP	22
Ethernet translational cross-connect (TCC)	18
Ethernet version 2	14
Extended virtual local area network (VLAN) CCC and VPLS	4
Extended VLAN TCC	22
Frame Relay	4
PPP	4
VLAN CCC	4
VLAN VPLS	4

*Table 44: Encapsulation Overhead by Encapsulation Type (continued)*

Interface Encapsulation	Encapsulation Overhead (Bytes)
VLAN TCC	22

## Media MTU Sizes by Interface Type for ACX Series Routers

*Table 45: Media MTU Sizes by Interface Type for ACX Series Routers*

Interface Type	Default Media MTU (Bytes)	Maximum MTU (Bytes)	Default IP Protocol MTU (Bytes)
Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)
10-Gigabit Ethernet	1514	9192	1500 (IPv4), 1497 (ISO)

### Related Documentation

- [Configuring Interface Encapsulation on Physical Interfaces on page 129](#)
- [Setting the Protocol MTU on page 224](#)

## Encapsulation Overhead by Interface Encapsulation Type

If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead. The following table lists the interface encapsulation and corresponding encapsulation overhead.

*Table 46: Encapsulation Overhead by Encapsulation Type*

Interface Encapsulation	Encapsulation Overhead (Bytes)
802.1Q/Ethernet 802.3	21
802.1Q/Ethernet Subnetwork Access Protocol (SNAP)	26
802.1Q/Ethernet version 2	18
ATM Cell Relay	4
ATM permanent virtual connection (PVC)	12
Cisco HDLC	4
Ethernet 802.3	17
Ethernet circuit cross-connect (CCC) and virtual private LAN service (VPLS)	4
Ethernet over ATM	32

*Table 46: Encapsulation Overhead by Encapsulation Type (continued)*

Interface Encapsulation	Encapsulation Overhead (Bytes)
Ethernet SNAP	22
Ethernet translational cross-connect (TCC)	18
Ethernet version 2	14
Extended virtual local area network (VLAN) CCC and VPLS	4
Extended VLAN TCC	22
Frame Relay	4
PPP	4
VLAN CCC	4
VLAN VPLS	4
VLAN TCC	22

**Related  
Documentation**

- [Media MTU Overview on page 100](#)
- [Configuring the Media MTU on page 115](#)
- [Encapsulation Overhead by Interface Encapsulation Type on page 112](#)
- [Setting the Protocol MTU on page 224](#)

## Configuring Interface Description

You can include a text description of each physical interface in the configuration file. Any descriptive text you include is displayed in the output of the **show interfaces** commands, and is also exposed in the **ifAlias** Management Information Base (MIB) object. It has no impact on the interface's configuration.

To add a text description, include the **description** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# set interfaces interface-name description text
```

For example:

```
[edit]
user@host# set interfaces fe-0/0/1 description "Backbone connection to PHL01"
```

The description can be a single line of text. If the text contains spaces, enclose it in quotation marks.



**NOTE:** You can configure the extended DHCP relay to include the interface description in the option 82 Agent Circuit ID suboption. See *Using DHCP Relay Agent Option 82 Information* in the *Junos OS Broadband Subscriber Management and Services Library*.

For information about describing logical units, see [“Adding a Logical Unit Description to the Configuration” on page 188](#).

To display the description from the router or switch CLI, use the **show interfaces** command:

```
user@host> show interfaces fe-0/0/1
Physical interface: fe-0/0/1, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 23
  Description: Backbone connection to PHL01
  ...
```

To display the interface description from the interfaces MIB, use the **snmpwalk** command from a server. To isolate information for a specific interface, search for the interface index shown in the **SNMP ifIndex** field of the **show interfaces** command output. The **ifAlias** object is in **ifXTable**.

```
user-server> snmpwalk host-fxp0.mylab public ifXTable | grep -e '\.23'
snmpwalk host-fxp0.mylab public ifXTable | grep -e '\.23'
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifName.23 = fe-0/0/1
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifInMulticastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifInBroadcastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifOutMulticastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifOutBroadcastPkts.23 = Counter32: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInOctets.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInUcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInMulticastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCInBroadcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOutOctets.23 = Counter64: 42
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOutUcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOutMulticastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHCOutBroadcastPkts.23 = Counter64: 0
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifLinkUpDownTrapEnable.23 = enabled(1)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifHighSpeed.23 = Gauge32: 100
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifPromiscuousMode.23 = false(2)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifConnectorPresent.23 = true(1)
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifAlias.23 = Backbone connection to PHL01
ifMIB.ifMIBObjects.ifXTable.ifXEntry.ifCounterDiscontinuityTime.23 = Timeticks:
(0) 0:00:00.00
```

#### Related Documentation

- [Using DHCP Relay Agent Option 82 Information](#)
- [Adding a Logical Unit Description to the Configuration on page 188](#)

## Configuring the Media MTU

The media maximum transmission unit (MTU) is the largest data unit that can be forwarded without fragmentation. The default media MTU size used on a physical interface depends on the encapsulation being used on that interface. For a listing of MTU sizes for each encapsulation type, see [“Media MTU Sizes by Interface Type” on page 101](#).

To configure the media-MTU size:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# [edit interfaces interface-name]
```

2. Include the **mtu** statement.

```
[edit interfaces interface-name]
mtu bytes;
```

- If you change the size of the media MTU, you must ensure that the size is equal to or greater than the sum of the protocol MTU and the encapsulation overhead. You configure the protocol MTU by including the **mtu** statement at the following hierarchy levels:
  - **[edit interfaces *interface-name* unit *logical-unit-number* family *family*]**
  - **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]**



### NOTE:

- Changing the media MTU or protocol MTU causes an interface to be deleted and added again.
- Because tunnel services interfaces are considered logical interfaces, you cannot configure the MTU setting for the physical interface. This means you cannot include the **mtu** statement at the **[edit interfaces *interface-name*]** hierarchy level for the following interface types: generic routing encapsulation (*gr-*), IP-IP (*ip-*), loopback (*lo-*), link services (*ls-*), multilink services (*ml-*), and multicast (*pe-*, *pd-*). You can, however, configure the protocol MTU on all tunnel interfaces except virtual tunnel (*vt*) interfaces. Starting in Junos OS Release 17.1R3, you cannot configure the maximum transmission unit (MTU) size for *vt* interfaces because the **mtu bytes** option is deprecated for *vt* interfaces. Junos OS sets the MTU size for *vt* interfaces by default to unlimited.
- If you configure an MTU value by including the **mtu** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* family *mpls*]** hierarchy level, the configured value is used.

- Related Documentation**
- [Media MTU Overview on page 100](#)
  - [Media MTU Sizes by Interface Type on page 101](#)
  - [Encapsulation Overhead by Interface Encapsulation Type on page 112](#)
  - [Setting the Protocol MTU on page 224](#)

---

## Configuring the Interface Speed

You can configure the interface speed in following ways:

- [Configuring the Interface Speed on Ethernet Interfaces on page 116](#)
- [Configuring Aggregated Ethernet Link Speed on page 117](#)
- [Configuring SONET/SDH Interface Speed on page 120](#)

### Configuring the Interface Speed on Ethernet Interfaces

For M Series and T Series Fast Ethernet 12-port and 48-port PIC interfaces, the management Ethernet interface (**fxp0** or **em0**), and the MX Series Tri-Rate Ethernet copper interfaces, you can explicitly set the interface speed. The Fast Ethernet, **fxp0**, and **em0** interfaces can be configured for 10 Mbps or 100 Mbps (**10m** | **100m**). The MX Series Tri-Rate Ethernet copper interfaces can be configured for 10 Mbps, 100 Mbps, or 1 Gbps (**10m** | **100m** | **1g**). For information about management Ethernet interfaces and to determine the management Ethernet interface type for your router, see “[Understanding Management Ethernet Interfaces](#)” on page 10 and “[Supported Routing Engines by Router](#)” on page 17. MX Series routers, with MX-DPC and Tri-Rate Copper SFPs, support 20x1 Copper to provide backwards compatibility with 100/10BASE-T and 1000BASE-T operation through an Serial Gigabit Media Independent Interface (SGMII) interface.

1. In configuration mode, go to the **[edit interfaces interface-name]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. To configure the speed, include the **speed** statement at the **[edit interfaces interface-name]** hierarchy level.

```
[edit interfaces interface-name]
user@host# set speed (10m | 100m | 1g | auto | auto-10m-100m);
```

**NOTE:**

- By default, the M Series and T Series routers management Ethernet interface autonegotiates whether to operate at 10 megabits per second (Mbps) or 100 Mbps. All other interfaces automatically choose the correct speed based on the PIC type and whether the PIC is configured to operate in multiplexed mode (using the `no-concatenate` statement in the `[edit chassis]` configuration hierarchy.
- Starting with Junos OS Release 14.2 the `auto-10m-100m` option allows the fixed tri-speed port to auto negotiate with ports limited by 100m or 10m maximum speed. This option must be enabled only for Tri-rate MPC port, that is, 3D 40x 1GE (LAN) RJ45 MIC on MX platform. This option does not support other MICs on MX platform.,
- When you manually configure Fast Ethernet interfaces on the M Series and T Series routers, link mode and speed must both be configured. If both these values are not configured, the router uses autonegotiation for the link and ignores the user-configured settings.
- If the link partner does not support autonegotiation, configure either Fast Ethernet port manually to match its link partner's speed and link mode. When the link mode is configured, autonegotiation is disabled.
- On MX Series routers with tri-rate copper SFP interfaces, if the port speed is negotiated to the configured value and the negotiated speed and interface speed do not match, the link will not be brought up.
- When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled.
- Starting with Junos OS Release 11.4, half-duplex mode is not supported on Tri-Rate Ethernet copper interfaces. When you include the `speed` statement, you must include the `link-mode full-duplex` statement at the same hierarchy level.

See Also • [speed on page 980](#)

- *Ethernet Interfaces Overview*
- *Ethernet Interfaces Feature Guide for Routing Devices*

## Configuring Aggregated Ethernet Link Speed

On aggregated Ethernet interfaces, you can set the required link speed for all interfaces included in the bundle. Generally, all interfaces that make up a bundle must have the same speed. If you include in the aggregated Ethernet interface an individual link that has a speed different from the speed that you specify in the `link-speed` parameter, an error message is logged. However, there are exceptions.

Starting with Junos OS Release 13.2, aggregated Ethernet supports mixed rates and mixed modes on T640, T1600, T4000, and TX Matrix Plus routers. For example, these mixes are supported:

- Member links of different modes (WAN and LAN) for 10-Gigabit Ethernet links.
- Member links of different rates: 10-Gigabit Ethernet, 40-Gigabit Ethernet, 50-Gigabit Ethernet, 100-Gigabit Ethernet, and OC192 (10-Gigabit Ethernet WAN mode)

Starting with Junos OS Release 14.1R1 and 14.2, support for mixed rates on aggregated Ethernet bundles is extended to MX240, MX480, MX960, MX2010, and MX2020 routers.

Starting with Junos OS Release 14.2, aggregated Ethernet supports mixed link speeds on PTX Series Packet Transport Routers.



**NOTE:**

- Member links of 50-Gigabit Ethernet can only be configured using the 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP (PD-1CE-CFP-FPC4).
- Starting with Junos OS Release 13.2, 100-Gigabit Ethernet member links can be configured using the two 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP. This 100-Gigabit Ethernet member link can be included in an aggregated Ethernet link that includes member links of other interfaces as well. In releases before Junos OS Release 13.2, the 100-Gigabit Ethernet member link configured using the two 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP cannot be included in an aggregated Ethernet link that includes member links of other interfaces.

---

To configure member links of mixed rates and mixed modes on T640, T1600, T4000, TX Matrix Plus, and PTX routers, you need to configure the **mixed** option for the `[edit interfaces aex aggregated-ether-options link-speed]` statement.

To set the required link speed:

1. Specify that you want to configure the aggregated Ethernet options.

```
user@host# edit interfaces interface-name aggregated-ether-options
```

2. Configure the link speed.

```
[edit interfaces interface-name aggregated-ether-options ]  
user@host# set link-speed speed
```

**speed** can be in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

Aggregated Ethernet interfaces on the M120 router can have one of the following speeds:

- **100m**—Links are 100 Mbps.
- **10g**—Links are 10 Gbps.
- **1g**—Links are 1 Gbps.
- **oc192**—Links are OC192 or STM64c.

Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speeds:

- **10m**—Links are 10 Mbps.
- **100m**—Links are 100 Mbps.
- **1g**—Links are 1 Gbps.
- **10g**—Links are 10 Gbps.
- **50g**—Links are 50 Gbps.

Aggregated Ethernet links on T Series, MX Series, PTX Series routers, and QFX5100, QFX10002, QFX10008, and QFX10016 switches can be configured to operate at one of the following speeds:

- **100g**—Links are 100 Gbps.
- **100m**—Links are 100 Mbps.
- **10g**—Links are 10 Gbps.
- **1g**—Links are 1 Gbps.
- **40g**—Links are 40 Gbps.
- **50g**—Links are 50 Gbps.
- **80g**—Links are 80 Gbps.
- **8g**—Links are 8 Gbps.
- **mixed**—Links are of various speeds.
- **oc192**—Links are OC192.

- See Also**
- [aggregated-ether-options on page 432](#)
  - *Configuring Mixed Rates and Mixed Modes on Aggregated Ethernet Bundles*
  - *Ethernet Interfaces Feature Guide for Routing Devices*

## Configuring SONET/SDH Interface Speed

To configure the speed of SONET/SDH interfaces in concatenated mode:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level, where the *interface-name* is *so-fpc/pic/port*.

```
[edit]
user@host# edit interfaces so-fpc/pic/port
```

2. Configure interface speed in concatenated mode.

For example, each port of 4-port OC12 PIC can be configured to be in OC3 or OC12 speed independently when this PIC is in 4xOC12 concatenated mode.

```
[edit interfaces so-fpc/pic/port]
user@host# set speed (oc3 | oc12 | oc48)
```

To configure the speed of SONET/SDH interfaces in nonconcatenated mode:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level, where the *interface-name* is *so-fpc/pic/port*.

```
[edit]
user@host# edit interfaces so-fpc/pic/port
```

2. Configure interface speed in nonconcatenated mode.

For example, each port of 4-port OC12 PIC can be configured to be in OC3 or OC12 speed independently when this PIC is in 4xOC12 concatenated mode.

```
[edit interfaces so-fpc/pic/port]
user@host# set speed (oc3 | oc12)
```

To configure the PIC to operate in channelized (multiplexed) mode:

1. In configuration mode, go to the **[edit chassis fpc *slot-number* pic *pic-number*]** hierarchy level.

```
[edit]
user@host# [edit chassis fpc slot-number pic pic-number]
```

2. Configure the **no-concatenate** option.

```
[edit interfaces so-fpc/pic/port]
user@host# set no-concatenate
```



**NOTE:** On SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, and Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP, you cannot set the interface speed at the [edit interfaces] hierarchy level. To enable the speed on these MICs, you need to set the port speed at the [edit chassis fpc slot-number pic pic-number port port-number] hierarchy level.

For more information about using the `non-concatenate` statement, see the *Junos OS Administration Library*.

- See Also**
- *Configuring SONET/SDH Physical Interface Properties*
  - *SONET/SDH Interface Speed Overview*
  - *SONET/SDH Interfaces Overview*

Release History Table

Release	Description
14.2	Starting with Junos OS Release 14.2 the <b>auto-10m-100m</b> option allows the fixed tri-speed port to auto negotiate with ports limited by <b>100m</b> or <b>10m</b> maximum speed. This option must be enabled only for Tri-rate MPC port, that is, 3D 40x 1GE (LAN) RJ45 MIC on MX platform. This option does not support other MICs on MX platform.
14.2	Starting with Junos OS Release 14.2, aggregated Ethernet supports mixed link speeds on PTX Series Packet Transport Routers.
14.1	Starting with Junos OS Release 14.1R1 and 14.2, support for mixed rates on aggregated Ethernet bundles is extended to MX240, MX480, MX960, MX2010, and MX2020 routers.
13.2	Starting with Junos OS Release 13.2, aggregated Ethernet supports mixed rates and mixed modes on T640, T1600, T4000, and TX Matrix Plus routers.
13.2	Starting with Junos OS Release 13.2, 100-Gigabit Ethernet member links can be configured using the two 50-Gigabit Ethernet interfaces of 100-Gigabit Ethernet PIC with CFP.
11.4	Starting with Junos OS Release 11.4, half-duplex mode is not supported on Tri-Rate Ethernet copper interfaces. When you include the <b>speed</b> statement, you must include the <b>link-mode full-duplex</b> statement at the same hierarchy level.

- Related Documentation**
- 

## Configuring the Link Characteristics

By default, the router's management Ethernet interface, **fxp0** or **em0**, autonegotiates whether to operate in full-duplex or half-duplex mode. Fast Ethernet interfaces can

operate in either full-duplex or half-duplex mode, and all other interfaces can operate only in full-duplex mode. For Gigabit Ethernet, the link partner must also be set to full duplex.



**NOTE:** When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled.



**NOTE:** When you manually configure Fast Ethernet interfaces on the M Series and T Series routers, link mode and speed must both be configured. If both these values are not configured, the router uses autonegotiation for the link and ignores the user-configured settings.



**NOTE:** When the Fast Ethernet interface on Juniper Networks routers with autonegotiation enabled interoperates with a device configured to operate in half-duplex mode (autonegotiation disabled), the interface defaults to half-duplex mode after the PIC is taken offline and brought back online. This results in packet loss and cyclic redundancy check (CRC) errors.

To explicitly configure an Ethernet interface to operate in either full-duplex or half-duplex mode, include the **link-mode** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
link-mode (full-duplex | half-duplex);
```

---

## Interface Alias Names Overview

You can configure a textual description of a logical unit on a physical interface to be the alias of an interface name. Interface aliasing is supported only at the unit level. If you configure an alias name, the alias name is displayed instead of the interface name in the output of all **show**, **show interfaces**, and other operational mode commands. In Junos OS Release 12.3R8 and later, display of the alias can be suppressed in favor of the actual interface name by using the **display no-interface-alias** parameter along with the **show** command. Configuring an alias for a logical unit of an interface has no effect on how the interface on the router or switch operates.

When you configure the alias name of an interface, the CLI saves the alias name as the value of the ***interface-name*** variable in the configuration database. To enable backward compatibility with Junos OS releases in which the support for interface aliases is not available, when the Junos OS processes query the configuration database for the ***interface-name*** variable, the actual, exact value of the ***interface-name*** variable is returned instead of the alias name for system operations and computations.

This capability to define interface alias names for physical and logical interfaces is useful in a Junos Node Unifier (JNU) environment that contains a Juniper Networks MX Series

3D Universal Edge Router as a controller and EX Series Ethernet switches, QFX Series devices, and ACX Series Universal Metro Routers as satellite devices. The following are the benefits of configuring an alias name, which enables a meaningful, single, and easily identifiable name to be allocated to an interface:

- You can group physical interfaces as one aggregated interface (link aggregation group or LAG bundle) and name that bundle as a satellite connection interface (for example, sat1).
- You can select a logical interface as a member of the LAG bundle or the entire LAG, and name that interface to represent a satellite device port or a service instance (for example, ge-0/0/1).
- You can combine the satellite name and the interface name aliases to wholly represent the satellite port name (for example, sat1:ge-0/0/1 or ge-sat1/0/0/1 or ge-1/0/0/1) in the most easily distinguishable format that denotes a combination of port and satellite parts of the name.

To specify an interface alias, you can use the **alias** statement at the **[edit interfaces interface-name unit logical-unit-number]** and **[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]** hierarchy levels.



**NOTE:** In Juniper Networks M Series Multiservice Edge Routers, if the same alias name is configured on more than one logical interface, the router displays an error message and commit fails.

#### Related Documentation

- [Example: Adding an Interface Alias Name on page 123](#)
- [alias on page 435](#)

## Example: Adding an Interface Alias Name

This example shows how to add an alias to the logical unit of an interface. Using an alias to identify interfaces as they appear in the output for operational commands can allow for more meaningful naming conventions and easier identification.

- [Requirements on page 123](#)
- [Overview on page 124](#)
- [Configuration on page 124](#)
- [Verification on page 126](#)

### Requirements

This example uses the following hardware and software components:

- One MX Series router that acts as a controller
- One EX4200 switch that acts as a satellite device

- Junos OS Release 13.3R1 or later

## Overview

You can create an alias for each logical unit on a physical interface. The descriptive text you define for the alias is displayed in the output of the **show interfaces** commands. In Junos OS Release 12.3R8 and later, display of the alias can be suppressed in favor of the actual interface name by using the **display no-interface-alias** parameter along with the show command. The alias configured for a logical unit of an interface has no effect on how the interface on the router or switch operates – it is only a cosmetic label.

## Configuration

Consider a scenario in which alias names are configured on the interfaces of a JNU controller that are connected to a satellite, sat1, in the downlink direction in the JNU management network by using two links. The alias names enable effective, streamlined identification of these interfaces in the operational mode commands that are run on the controller and satellites.

- [Configuring Alias Names for the Controller Interfaces on page 124](#)
- [Results on page 125](#)

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them in a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level:

```
set interfaces ae0 unit 0 alias "controller-sat1-downlink1"
set interfaces ae0.0 family inet address 10.0.0.1/24
set interfaces ae1 unit 0 alias "controller-sat1-downlink1"
set interfaces ae0.0 family inet address 192.0.2.128/25
set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 unit 0 alias "ge-to-corp-gw1"
set interfaces ge-0/0/0.0 vlan-id 101
set interfaces ge-0/0/0.0 family inet address 1.1.1.1/23
set interfaces ge-0/1/0 gigether-options 802.3ad ae0
set interfaces ge-0/1/1 gigether-options 802.3ad ae0
set protocols rip group corporate-firewall neighbor ge-to-corp-gw1
```

---

### Configuring Alias Names for the Controller Interfaces

### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To add an alias name to the controller interfaces that are used to connect to the satellite devices in the downlink direction:

1. Configure an alias name for the logical unit of an aggregated Ethernet interface that is used to connect to a satellite, sat1, in the downlink direction. Configure **inet** family and address for the interface.

```
[edit]
user@host# set interfaces ae0 unit 0 alias "controller-sat1-downlink1"
user@host# set interfaces ae0.0 family inet address 10.0.0.1/24
```

2. Configure an alias name for the logical unit of another aggregated Ethernet interface that is used to connect to the same satellite, sat1, in downlink direction. Configure INET family and address for the interface.

```
[edit]
user@host# set interfaces ae0 unit 1 alias "controller-sat1-downlink2"
user@host# set interfaces ae0.0 family inet address 10.0.0.3/24
```

3. Configure an alias name for the Gigabit Ethernet interface on the controller and configure its parameters.

```
[edit]
user@host# set interfaces ge-0/0/0 vlan-tagging
user@host# set interfaces ge-0/0/0 unit 0 alias "ge-to-corp-gw1"
user@host# set interfaces ge-0/0/0.0 vlan-id 101
user@host# set interfaces ge-0/0/0.0 family inet address 1.1.1.1/23
```

4. Configure Gigabit Ethernet interfaces to be member links of an ae- logical interface.

```
[edit]
user@host# set interfaces ge-0/1/0 aggregated-options 802.3ad ae0
user@host# set interfaces ge-0/1/1 aggregated-options 802.3ad ae0
```

5. Configure RIP in the network between the controller and the firewall gateway.

```
[edit]
user@host# set protocols rip group corporate-firewall neighbor ge-to-corp-gw1
```

## Results

In configuration mode, confirm your configuration by entering the **show** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
interfaces {
  ae0 {
    unit 0 {
      alias "controller-sat1-downlink1";
      family inet {
        address 10.0.0.1/24;
      }
    }
    unit 1 {
      alias "controller-sat1-downlink2";
      family inet {
        address 10.0.0.3/24;
      }
    }
  }
}
```

```
ge-0/0/0 {
  vlan-tagging;
  unit 0 {
    alias "ge-to-corp-gw1";
    vlan-id 101;
    family inet {
      address 1.1.1.1/23;
    }
  }
}
ge-0/1/0 {
  gigether-options {
    802.3ad ae0;
  }
}
ge-0/1/1 {
  gigether-options {
    802.3ad ae0;
  }
}
protocols rip {
  group corporate-firewall {
    neighbor ge-to-corp-gw1;
  }
}
```

After you have confirmed that the interfaces are configured, enter the **commit** command in configuration mode.



**NOTE:** In Juniper Networks M Series Multiservice Edge Routers, if the same alias name is configured on more than one logical interface, the router displays an error message and commit fails.

## Verification

To verify that the alias name is displayed instead of the interface name, perform these steps:

- [Verifying the Configuration of the Alias Name for the Controller Interfaces on page 126](#)

### Verifying the Configuration of the Alias Name for the Controller Interfaces

**Purpose** Verify that the alias name is displayed instead of the interface name.

**Action** Display information about all RIP neighbors.

```
user@router> show rip neighbor
```

Neighbor	Local State	Source Address	Destination Address	Send Mode	Receive Mode	In Met
ge-to-corp-gw1	DN	(null)	255.255.255.255	mcast	both	1

**Meaning** The output displays the details of the benchmarking test that was performed. For more information about the **show rip neighbor** operational command, see **show rip neighbor** in the [CLI Explorer](#).

**Related Documentation**

- [Interface Alias Names Overview on page 122](#)
- [alias on page 435](#)

## Clock Source Overview

For both the router and interfaces, the clock source can be an external clock that is received on the interface or the router's internal Stratum 3 clock.

For example, interface A can transmit on interface A's received clock (external, loop timing) or the Stratum 3 clock (internal, line timing, or normal timing). Interface A cannot use a clock from any other source. For interfaces such as SONET/SDH that can use different clock sources, you can configure the source of the transmit clock on each interface.

The clock source resides on the System Control Board (SCB) for M40 routers, the System and Switch Board (SSB) for M20 routers, the Control Board (CB) for M120 routers, and the Miscellaneous Control Subsystem (MCS) for M40e and M160 routers. M7i and M10i routers have a clock source on the Compact Forwarding Engine Board (CFEB) and Enhanced Compact Forwarding Engine Board (CFEB-E).

For T Series and MX Series, the clock source internal Stratum 3 clock resides on the SONET Clock Generator and Switch Control Board (SCB) respectively. By default, the 19.44-MHz Stratum 3 reference clock generates the clock signal for all serial PICs (SONET/SDH) and Plesiochronous Digital Hierarchy (PDH) PICs. PDH PICs include DS3, E3, T1, and E1 PICs.



**NOTE:** M7i and M10i routers do not support external clocking of SONET interfaces.

For information about clocking on channelized interfaces, see *Channelized IQ and IQE Interfaces Properties*. Also see *Configuring the Clock Source on SONET/SDH Interfaces* and *Configuring the Channelized T3 Loop Timing*.

For information about configuring an external synchronization interface that can be used to synchronize the internal Stratum 3 clock to an external source on the M40e, M120,

M320, routers and T Series routers, see *Junos OS Administration Library, Configuring Junos OS to Support an External Clock Synchronization Interface for M Series, MX Series, and T Series Routers*.

For information about configuring Synchronous Ethernet on MX 80, MX240, MX480, and MX960 Universal Routing Platforms, see *Junos OS Administration Library, Synchronous Ethernet Overview and Configuring Clock Synchronization Interface on MX Series Routers*.

**Related  
Documentation**

- *Configuring an External Synchronization Interface*
- [Configuring the Clock Source on page 128](#)
- *Configuring Junos OS to Support an External Clock Synchronization Interface for M Series, MX Series, and T Series Routers*
- *Synchronous Ethernet Overview*
- *Configuring Clock Synchronization Interface on MX Series Routers*

---

## Configuring the Clock Source

---

For both the router and interfaces, the clock source can be an external clock that is received on the interface or the router's internal Stratum 3 clock.

To set the clock source as external or internal:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]  
user@host# edit interfaces interface-name
```

2. Configure the **clocking** option as external or internal.

```
[edit interfaces interface-name]  
user@host# set clocking (external | internal)
```



**NOTE:** M7i and M10i routers do not support external clocking of SONET interfaces.



**NOTE:** On Channelized SONET/SDH PICs, if you set the parent (or the master) controller clock to external, then you must set the child controller clocks to the default value—that is, internal.

For example, on the Channelized STM1 PIC, if the clock on the Channelized STM1 interface (which is the master controller) is set to external, then you must not configure the CE1 interface (which is the child controller) clock to external. Instead you must configure the CE1 interface clock to internal.

---

For information about clocking on channelized interfaces, see *Channelized IQ and IQE Interfaces Properties*. Also see *Configuring the Clock Source on SONET/SDH Interfaces* and *Configuring the Channelized T3 Loop Timing*.

For information about configuring an external synchronization interface that can be used to synchronize the internal Stratum 3 clock to an external source on the M40e, M120, and M320 routers and on the T Series routers, see *Junos OS Administration Library, Configuring Junos OS to Support an External Clock Synchronization Interface for M Series, MX Series, and T Series Routers*.

For information about configuring Synchronous Ethernet on MX80, MX240, MX480, and MX960 Universal Routing Platforms, see *Junos OS Administration Library, Synchronous Ethernet Overview* and *Configuring Clock Synchronization Interface on MX Series Routers*.

**Related  
Documentation**

- [Configuring an External Synchronization Interface](#)
- [clocking on page 486](#)
- [Clock Source Overview on page 127](#)
- [Configuring Junos OS to Support an External Clock Synchronization Interface for M Series, MX Series, and T Series Routers](#)
- [Synchronous Ethernet Overview](#)
- [Configuring Clock Synchronization Interface on MX Series Routers](#)

---

## Configuring Interface Encapsulation on Physical Interfaces

- [Understanding Interface Encapsulation on Physical Interfaces on page 129](#)
- [Encapsulation Capabilities of Physical Interfaces on page 129](#)
- [Configuring the Encapsulation on a Physical Interface on page 131](#)
- [Displaying the Encapsulation on a Physical SONET/SDH Interface on page 131](#)

### Understanding Interface Encapsulation on Physical Interfaces

Point-to-Point Protocol (PPP) encapsulation is the default encapsulation type for physical interfaces. You need not configure encapsulation for any physical interfaces that support PPP encapsulation. If you do not configure encapsulation, PPP is used by default.

For physical interfaces that do not support PPP encapsulation, you must configure an encapsulation to use for packets transmitted on the interface. You can optionally configure an encapsulation on a logical interface, which is the encapsulation used within certain packet types.

### Encapsulation Capabilities of Physical Interfaces

When you configure a point-to-point encapsulation (such as PPP or Cisco HDLC) on a physical interface, the physical interface can have only one logical interface (that is, only one **unit** statement) associated with it. When you configure a multipoint encapsulation (such as Frame Relay), the physical interface can have multiple logical units, and the units can be either point-to-point or multipoint.

Ethernet CCC encapsulation for Ethernet interfaces with standard TPID tagging requires that the physical interface have only a single logical interface. Ethernet interfaces in VLAN mode can have multiple logical interfaces.

For Ethernet interfaces in VLAN mode, VLAN IDs are applicable as follows:

- VLAN ID 0 is reserved for tagging the priority of frames.
- For encapsulation type **vlan-ccc**, VLAN IDs 1 through 511 are reserved for normal VLANs. VLAN IDs 512 and above are reserved for VLAN CCCs.
- For encapsulation type **vlan-vpls**, VLAN IDs 1 through 511 are reserved for normal VLANs, and VLAN IDs 512 through 4094 are reserved for VPLS VLANs. For 4-port Fast Ethernet interfaces, you can use VLAN IDs 512 through 1024 for VPLS VLANs.
- For Gigabit Ethernet interfaces and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), you can configure flexible Ethernet services encapsulation on the physical interface. For interfaces with **flexible-ethernet-services** encapsulation, all VLAN IDs are valid. VLAN IDs from 1 through 511 are not reserved.
- For encapsulation types **extended-vlan-ccc** and **extended-vlan-vpls**, all VLAN IDs are valid.

The upper limits for configurable VLAN IDs vary by interface type.

When you configure a TCC encapsulation, some modifications are needed to handle VPN connections over unlike Layer 2 and Layer 2.5 links and terminate the Layer 2 and Layer 2.5 protocol locally.

The router performs the following media-specific changes:

- PPP TCC—Both Link Control Protocol (LCP) and Network Control Protocol (NCP) are terminated on the router. Internet Protocol Control Protocol (IPCP) IP address negotiation is not supported. The Junos OS strips all PPP encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to PPP encapsulation.
- Cisco HDLC TCC—Keepalive processing is terminated on the router. The Junos OS strips all Cisco HDLC encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to Cisco HDLC encapsulation.
- Frame Relay TCC—All Local Management Interface (LMI) processing is terminated on the router. The Junos OS strips all Frame Relay encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to Frame Relay encapsulation.
- ATM—Operation, Administration, and Maintenance (OAM) and Interim Local Management Interface (ILMI) processing is terminated at the router. Cell relay is not supported. The Junos OS strips all ATM encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to ATM encapsulation.

## Configuring the Encapsulation on a Physical Interface

By default, PPP is the encapsulation type for physical interfaces. To configure the encapsulation on a physical interface, include the encapsulation statement at the **[edit interfaces *interface-name*]** hierarchy level:

To configure encapsulation on a physical interface:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit]
user@host# set interfaces so-fpc/pic/port
```

2. Configure the encapsulation type as described in [encapsulation](#).

```
[edit interfaces mo-fpc/pic/port]
user@host# set encapsulation encapsulation-type
```



### NOTE:

- When you configure a point-to-point encapsulation (such as PPP or Cisco HDLC) on a physical interface, the physical interface can have only one logical interface (that is, only one unit statement) associated with it. When you configure a multipoint encapsulation (such as Frame Relay), the physical interface can have multiple logical units, and the units can be either point-to-point or multipoint.
- When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.
- When vlan-vpls encapsulation is set at the physical interface level, commit check will validate that there should not be any inet family configured within it.

## Displaying the Encapsulation on a Physical SONET/SDH Interface

**Purpose** To display the configured encapsulation and its associated set options on a physical interface when the following are set at the **[edit interfaces *interface-name*]** hierarchy level:

- interface-name—so-7/0/0
- Encapsulation—**ppp**
- Unit—0
- Family—**inet**
- Address—192.168.1.113/32
- Destination—192.168.1.114
- Family—**iso** and **mpls**

**Action** Run the **show** command at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces so-7/0/0]
user@host# show
encapsulation ppp;
unit 0 {
  point-to-point;
  family inet {
    address 192.168.1.113/32 {
      destination 192.168.1.114;
    }
  }
  family iso;
  family mpls;
}
```

**Meaning** The configured encapsulation and its associated set options are displayed as expected. Note that the second set of two **family** statements allow IS-IS and MPLS to run on the interface.

**Related Documentation**

- [encapsulation on page 577](#)
- [Configuring the Media MTU on page 115](#)

---

## Configuring Interface Encapsulation on PTX Series Packet Transport Routers

This topic describes how to configure interface encapsulation on PTX Series Packet Transport Routers. Use the **flexible-ethernet-services** configuration statement to configure different encapsulation for different logical interfaces under a physical interface. With flexible Ethernet services encapsulation, you can configure each logical interface encapsulation without range restrictions for VLAN IDs.

Supported encapsulations for physical interfaces include:

- **flexible-ethernet-services**
- **ethernet-ccc**
- **ethernet-tcc**

Supported encapsulations for logical interfaces include:

- **ethernet**
- **vlan-ccc**
- **vlan-tcc**



**NOTE:** PTX Series Packet Transport Routers do not support `extended-vlan-cc` and `extended-vlan-tcc` encapsulation on logical interfaces. Instead, you can configure a tag protocol ID (TPID) value of 0x9100 to achieve the same results.

To configure flexible Ethernet services encapsulation, include the `encapsulation flexible-ethernet-services` statement at the `[edit interfaces et-fpc/pic/port ]` hierarchy level. For example:

```
interfaces {
  et-fpc/pic/port {
    vlan-tagging;
    encapsulation flexible-ethernet-services;
    unit 0 {
      vlan-id 1000;
      family inet {
        address 11.0.0.20/24;
      }
    }
    unit 1 {
      encapsulation vlan-ccc;
      vlan-id 1010;
    }
    unit 2 {
      encapsulation vlan-tcc;
      vlan-id 1020;
      family tcc {
        proxy {
          inet-address 11.0.2.160;
        }
        remote {
          inet-address 11.0.2.10;
        }
      }
    }
  }
}
```

#### Related Documentation

- [Configuring Interface Encapsulation on Physical Interfaces on page 129](#)

## Configuring Keepalives

---

By default, physical interfaces configured with Cisco HDLC or PPP encapsulation send keepalive packets at 10-second intervals. The Frame Relay term for keepalives is LMI packets; the Junos OS supports both ANSI T1.617 Annex D LMIs and ITU Q933 Annex A LMIs. On ATM networks, OAM cells perform the same function. You configure OAM cells at the logical interface level; for more information, see [Defining the ATM OAM F5 Loopback Cell Period](#).

To disable the sending of keepalives:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]
no-keepalives;
```

To disable the sending of keepalives on a physical interface configured with Cisco HDLC encapsulation for a translational cross-connection:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement with the **encapsulation cisco-hdlc-tcc** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]
encapsulation cisco-hdlc-tcc;
no-keepalives;
```

To disable the sending of keepalives on a physical interface configured with PPP encapsulation for a translational cross-connection:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **no-keepalives** statement with the **encapsulation ppp-tcc** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]
encapsulation ppp-tcc;
no-keepalives;
```

For more information about translation cross-connections, see Circuit and Translational Cross-Connects Overview.

When you configure PPP over ATM or Multilink PPP over ATM encapsulation, you can enable or disable keepalives on the logical interface. For more information, see Configuring PPP over ATM2 Encapsulation.

To explicitly enable the sending of keepalives:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **keepalives** statement at the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit interfaces interface-name]
keepalives;
```

To change one or more of the default keepalive values:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name
```

2. Include the **keepalives** statement with the appropriate option as **interval *seconds***, **down-count *number***, and the **up-count *number***.

```
[edit interfaces interface-name]
keepalives;
keepalives <interval seconds> <down-count number> <up-count number>;
```

On interfaces configured with Cisco HDLC or PPP encapsulation, you can include the following three keepalive statements; note that Frame Relay encapsulation is not affected by these statements:

- **interval *seconds***—The time in seconds between successive keepalive requests. The range is from 1 second through 32767 seconds, with a default of 10 seconds.
- **down-count *number***—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is from 1 through 255, with a default of 3.
- **up-count *number***—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is from 1 through 255, with a default of 1.



**CAUTION:** If interface keepalives are configured on an interface that does not support the keepalives configuration statement (for example, 10-Gigabit Ethernet), the link layer may go down when the PIC is restarted. Avoid

configuring the keepalives on interfaces that do not support the `keepalives` configuration statement.

.....

For information about Frame Relay keepalive settings, see [Configuring Frame Relay Keepalives](#).

On MX Series routers with Modular Port Concentrators/Modular Interface Cards (MPCs/MICs), the Packet Forwarding Engine on an MPC/MIC processes and responds to Link Control Protocol (LCP) Echo-Request keepalive packets that the PPP subscriber (client) initiates and sends to the router. The mechanism by which LCP Echo-Request packets are processed by the Packet Forwarding Engine instead of by the Routing Engine is referred to as *PPP fast keepalive*. For more information about how PPP fast keepalive works on an MX Series router with MPCs/MICs, see the *Junos OS Subscriber Access Configuration Guide*.

**Related  
Documentation**

- [Defining the ATM OAM F5 Loopback Cell Period](#)
- [Disabling the Sending of PPPoE Keepalive Messages](#)
- [Understanding How the Router Processes Subscriber-Initiated PPP Fast Keepalive Requests](#)
- [keepalives on page 710](#)
- [no-keepalives on page 818](#)
- [Configuring Frame Relay Keepalives](#)
- [Circuit and Translational Cross-Connects Overview on page 275](#)
- [Configuring PPP over ATM2 Encapsulation Overview](#)

---

## Configuring the PPP Challenge Handshake Authentication Protocol

- [PPP Challenge Handshake Authentication Protocol on page 136](#)
- [Configuring the PPP Challenge Handshake Authentication Protocol on page 137](#)
- [Displaying the Configured PPP Challenge Handshake Authentication Protocol on page 138](#)

### PPP Challenge Handshake Authentication Protocol

For interfaces with PPP encapsulation, you can configure interfaces to support the PPP Challenge Handshake Authentication Protocol (CHAP), as defined in RFC 1994, PPP Challenge Handshake Authentication Protocol (CHAP). When you enable CHAP on an interface, the interface can authenticate its peer and can be authenticated by its peer. By default, PPP CHAP is disabled. If CHAP is not explicitly enabled, the interface makes no CHAP challenges and denies all incoming CHAP challenges. To enable CHAP, you must create an access profile, and you must configure the interfaces to use CHAP.

## Configuring the PPP Challenge Handshake Authentication Protocol

When you configure an interface to use CHAP, you must assign an access profile to the interface. When an interface receives CHAP challenges and responses, the access profile in the packet is used to look up the shared secret, as defined in RFC 1994. If no matching access profile is found for the CHAP challenge that was received by the interface, the optionally configured default CHAP secret is used. The default CHAP secret is useful if the CHAP name of the peer is unknown, or if the CHAP name changes during PPP link negotiation.

To enable CHAP, you must create an access profile, and you must configure the interfaces to use PAP. For more information on how to configure access profile, see *Configuring Access Profiles for L2TP or PPP Parameters*.

To configure the PPP challenge handshake authentication protocol, on each physical interface with PPP encapsulation, perform the following steps.

1. To assign an access profile to an interface, include the **access-profile** statement at the **[edit interfaces interface-name ppp-options chap]** hierarchy level.

```
[edit interfaces interface-name ppp-options chap]
user@host# set access-profile name
```



**NOTE:** You must include the **access-profile** statement when you configure the CHAP authentication method. If an interface receives a CHAP challenge or response from a peer that is not in the applied access profile, the link is immediately dropped unless a default CHAP secret has been configured.

2. The default CHAP secret is used when no matching CHAP access profile exists, or if the CHAP name changes during PPP link negotiation. To configure a default CHAP secret for an interface, include the **default-chap-secret** statement at the **[edit interfaces interface-name ppp-options chap]** hierarchy level.

```
[edit interfaces interface-name ppp-options chap]
user@host# set default-chap-secret name
```

3. To configure the name the interface uses in CHAP challenge and response packets, include the **local-name** statement at the **[edit interfaces interface-name ppp-options chap]** hierarchy level:

```
[edit interfaces interface-name ppp-options chap]
user@host# set local-name name
```

**NOTE:**

- The local name is any string from 1 through 32 characters in length, starting with an alphanumeric or underscore character, and including only the following characters:

a-z A-Z 0-9 % @ # / \ . \_ -

- By default, when CHAP is enabled on an interface, the interface uses the router's system hostname as the name sent in CHAP challenge and response packets.

4. You can configure the interface not to challenge its peer, and only respond when challenged. To configure the interface not to challenge its peer, include the **passive** statement at the **[edit interfaces *interface-name* ppp-options chap]** hierarchy level:

```
[edit interfaces interface-name ppp-options chap]
user@host# set passive;
```



**NOTE:** By default, when CHAP is enabled on an interface, the interface always challenges its peer and responds to challenges from its peer.

**See Also** • [Configuring the PPP Authentication Protocol on page 142](#)

## Displaying the Configured PPP Challenge Handshake Authentication Protocol

**Purpose** To display the configured PPP CHAP at the **[edit access]** and **[edit interfaces]** hierarchy levels.

- Access profile—**pe-A-ppp-clients**
- default CHAP secret data—"**\$ABC123**"
- hostname for the CHAP challenge and response packets—"**pe-A-so-1/1/1**"
- Interface—**so-1/1/2**

**Action** • Run the **show** command at the **[edit access]** hierarchy level.

```
profile pe-A-ppp-clients;
client cpe-1 chap-secret "$ABC123";
    # SECRET-DATA
[edit interfaces so-1/2/0]
encapsulation ppp;
ppp-options {
    chap {
        access-profile pe-A-ppp-clients;
        default-chap-secret "$ABC123";
        local-name "pe-A-so-1/1/1";
    }
}
```

```
}
```

- Run the **show** command at the **[edit interfaces s0-1/1/2]** hierarchy level.

```
ppp-options {
  chap {
    access-profile pe-A-ppp-clients;
    default-chap-secret "$ABC123";
    local-name "pe-A-so-1/1/2";
  }
}
```

**Meaning** The configured CHAP and its associated set options are displayed as expected.

## Configuring the PPP Password Authentication Protocol On a Physical Interface

- [Understanding PPP Password Authentication Protocol on page 139](#)
- [Configuring the PPP Password Authentication Protocol On a Physical Interface on page 140](#)
- [Configuring the PPP Password Authentication Protocol On a Logical Interface on page 141](#)

### Understanding PPP Password Authentication Protocol

For interfaces with PPP encapsulation, you can configure interfaces to support the Password Authentication Protocol (PAP), as defined in RFC 1334, *PAP Authentication Protocols*. If authentication is configured, the PPP link negotiates using CHAP or PAP protocol for authentication during the Link Control Protocol (LCP) negotiation phase. PAP is only performed after the link establishment phase (LCP up) portion of the authentication phase.

During authentication, the PPP link sends a PAP authentication-request packet to the peer with an ID and password. The authentication-request packet is sent every 2 seconds, similar to the CHAP challenge, until a response is received (acknowledgment packet, nonacknowledgment packet). If an acknowledgment packet is received, the PPP link transitions to the next state, the network phase. If a nonacknowledgment packet is received, an LCP terminate request is sent, and the PPP link goes back to the link establishment phase. If no response is received, and an optional retry counter is set to **true**, a new request acknowledgment packet is resent. If the retry counter expires, the PPP link transitions to the LCP negotiate phase.

You can configure the PPP link with PAP in passive mode. By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

## Configuring the PPP Password Authentication Protocol On a Physical Interface

When you configure an interface to use PAP, you must assign an access profile to the interface. When an interface receives PAP authentication requests, the access profile in the packet is used to look up the password.

To enable PAP, you must create an access profile, and you must configure the interfaces to use PAP. For more information on how to configure access profile, see *Configuring Access Profiles for L2TP or PPP Parameters*.

To configure the PPP password authentication protocol, on each physical interface with PPP encapsulation, perform the following steps.

1. To assign an access profile to an interface, include the **access-profile** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level.

```
[edit interfaces interface-name ppp-options pap]
user@host# set access-profilename
```

2. To configure the name the interface uses in PAP request and response packets, include the **local-name** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set local-name name
```

3. You need to configure the password to be used for authentication. To configure the host password for sending PAP requests, include the **local-password** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set local-password password
```



**NOTE:** By default, when PAP is enabled on an interface, the interface uses the router's system hostname as the name sent in PAP request and response packets.

4. To configure the interface to authenticate with PAP in passive mode, include the **passive** statement at the **[edit interfaces interface-name ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set passive
```



**NOTE:** By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

**See Also** • [Configuring the PPP Authentication Protocol on page 142](#)

## Configuring the PPP Password Authentication Protocol On a Logical Interface

When you configure an interface to use PAP, you must assign an access profile to the interface. When an interface receives PAP authentication requests, the access profile in the packet is used to look up the password. If no matching access profile is found for the PAP authentication request that was received by the interface, the optionally configured default PAP password is used.

To configure the PPP password authentication protocol, on each logical interface with PPP encapsulation, perform the following steps.

1. To configure the default PAP password, include the **pap-password** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set default-pap-password password
```

2. To configure the name the interface uses in PAP request and response packets, include the **local-name** statement at the **[edit interfaces *interface-name* unit *logical-unt-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set local-name name
```

3. You need to configure the password to be used for authentication. To configure the host password for sending PAP requests, include the **local-password** statement at the **[edit interfaces *interface-name* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set local-password password
```



**NOTE:** By default, when PAP is enabled on an interface, the interface uses the router's system hostname as the name sent in PAP request and response packets.

4. To configure the interface to authenticate with PAP in passive mode, include the **passive** statement at the **[edit interfaces *interface-name* unit *logical-unt-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set passive
```

---



**NOTE:** By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

---

**See Also** • [Configuring the PPP Authentication Protocol on page 142](#)

---

## Configuring the PPP Authentication Protocol

---

The Point-to-Point Protocol (PPP) is an encapsulation protocol for transporting IP traffic across point-to-point links. To configure PPP, you can configure the Challenge Handshake Authentication Protocol (CHAP). CHAP allows each end of a PPP link to authenticate its peer, as defined in RFC 1994. The authenticator sends its peer a randomly-generated challenge that the peer must encrypt using a one-way hash; the peer must then respond with that encrypted result. The key to the hash is a secret known only to the authenticator and authenticated. When the response is received, the authenticator compares its calculated result with the peer's response. If they match, the peer is authenticated.

Each end of the link identifies itself to its peer by including its name in the CHAP challenge and response packets it sends to the peer. This name defaults to the local hostname, or you can explicitly set it using the **local-name** option. When a host receives a CHAP challenge or CHAP response packet on a particular interface, it uses the peer identity to look up the CHAP secret key to use.

To configure CHAP, include the **profile** statement at the **[edit access]** hierarchy level:

```
[edit access]
profile profile-name {
  client client-name chap-secret chap-secret;
}
```

Then reference the CHAP profile name at the **[edit interfaces]** hierarchy level.

You can configure multiple CHAP profiles, and configure multiple clients for each profile.

## Definitions:

- **profile** is the mapping between peer identifiers and CHAP secret keys. The identity of the peer contained in the CHAP challenge or response queries the profile for the secret key to use.
- **client** is the peer identity.
- **chap-secret** is the secret key associated with that peer.

**Related  
Documentation**

- *Example: Configuring PPP CHAP*
- *Example: Configuring CHAP Authentication with RADIUS*

## PPP Encapsulation on ACX Series Routers

You can configure Point-to-Point Protocol (PPP) encapsulation on physical interfaces on ACX Series routers. PPP provides a standard method for transporting multiprotocol datagrams over a point-to-point link. PPP uses the High-Speed Data Link Control (HDLC) protocol for its physical interface and provides a packet-oriented interface for the network-layer protocols.

PPP is supported on the following MICs on ACX Series routers:

- On ACX1000 routers with 8-port built-in T1/E1 TDM MICs.
- On ACX2000, ACX2100, ACX2200, and ACX4000 routers with 16-port built-in T1/E1 TDM MICs.
- On ACX4000 routers with 16-Port Channelized E1/T1 Circuit Emulation MICs.

Starting with Release 12.3X54, you can configure Point-to-Point Protocol (PPP) encapsulation on physical interfaces on Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP on ACX4000 Series routers

On ACX Series routers, E1, T1, and NxDS0 interfaces support PPP encapsulation.

PPP is the default encapsulation type for physical interfaces. You need not configure encapsulation for any physical interfaces that support PPP encapsulation. If you do not configure encapsulation, PPP is used by default. For physical interfaces that do not support PPP encapsulation, you must configure an encapsulation to use for packets transmitted on the interface.

To configure the encapsulation on a physical interface, include the **encapsulation ppp** statement at the **[edit interfaces *interface-name*]** hierarchy level.

IP class of service (CoS) is not supported on PPP interfaces. All the traffic is sent to the best effort queue (queue 0) and CoS code points are not processed. Also, fixed classifiers are not supported. Circuit cross-connect (CCC) version of PPP (**ppp-ccc** option) and translational cross-connect (TCC) version of PPP (**ppp-tcc** option) are not supported for configuration with the **encapsulation** statement.

PPP is supported only for IPv4 networks. If you configure PPP encapsulation, you can configure an INET family by including the **family inet** statement at the **[edit interfaces interface-name unit logical-unit-number]** hierarchy level. MPLS family is not supported on logical interfaces if you configured PPP encapsulation. On interfaces with PPP encapsulation, configure PPP-specific interface properties by including the **ppp-options** statement at the **[edit interfaces interface-name]** hierarchy level. For interfaces with PPP encapsulation, you can configure interfaces to support the PPP Challenge Handshake Authentication Protocol (CHAP) and Password Authentication Protocol (PAP).

For full T1/E1 interfaces on which PPP encapsulation needs to be enabled, create the T1/E1 interfaces out of channelized T1/E1 interfaces (CT1/CE1) by including the **framing** statement at the **[edit chassis fpc fpc-slot pic pic-slot]** hierarchy level:

```
[edit chassis fpc fpc-slot pic pic-slot]
user@host# set framing (t1 | e1);
```

Configure a CT1 port down to a T1 channel. On the CT1 interface, set the **no-partition** option and then set the interface type as T1.

```
[edit interfaces ct1-mpc-slot/mic-slot/port-number]
user@host# set no-partition interface-type t1
```

Configure a CE1 port down to an E1 channel. On the CE1 interface, set the **no-partition** option and then set the interface type as E1.

```
[edit interfaces ce1-mpc-slot/mic-slot/port-number]
user@host# set no-partition interface-type t1
```

For NxDS0 interfaces on which PPP encapsulation needs to be enabled, partition the CE1 and CT1 interfaces by including the **ce1-x/y/z partition partition-number timeslots timeslots interface-type ds** and **ct1-x/y/z partition partition-number timeslots timeslots interface-type ds** statements at the **[edit interfaces interface-name]** hierarchy level.

The following operational mode commands can be used to view PPP configuration settings and statistical details:

- The **show ppp address-pool** command is used to display PPP address pool information.
- The **show ppp interface** command is used to display PPP session information for an interface.
- The **show ppp statistics** command is used to display PPP session statistics.
- The **show ppp summary** command is used to display summary information about PPP-configured interfaces.
- The **show interfaces e1-fpc/pic/port**, **show interfaces t1-fpc/pic/port**, and **show interfaces ds-fpc/pic/port** commands are used to display the PPP settings of a specific E1, T1, and DS interface, respectively.

#### Related Documentation

- [Configuring Interface Encapsulation on Physical Interfaces in ACX Series on page 145](#)
- [encapsulation](#)
- [ppp-options on page 892](#)

## Configuring Interface Encapsulation on Physical Interfaces in ACX Series

Point-to-Point Protocol (PPP) encapsulation is the default encapsulation type for physical interfaces. You need not configure encapsulation for any physical interfaces that support PPP encapsulation. If you do not configure encapsulation, PPP is used by default. For physical interfaces that do not support PPP encapsulation, you must configure an encapsulation to use for packets transmitted on the interface.

You can optionally configure an encapsulation on a logical interface, which is the encapsulation used within certain packet types. For more information about logical interface encapsulation, see *Configuring Interface Encapsulation on Logical Interfaces*.

This section contains the following topics:

- [Configuring the Encapsulation on a Physical Interface on page 145](#)
- [Encapsulation Capabilities on page 147](#)

### Configuring the Encapsulation on a Physical Interface

By default, PPP is the encapsulation type for physical interfaces. To configure the encapsulation on a physical interface, include the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
encapsulation (atm-ccc-cell-relay | atm-pvc | cisco-hdlc | cisco-hdlc-ccc | cisco-hdlc-tcc
| ethernet-ccc | ethernet-over-atm | ethernet-tcc | ethernet-vpls |
extended-frame-relay-ccc | extended-frame-relay-ether-type-tcc |
extended-frame-relay-tcc | extended-vlan-ccc | extended-vlan-tcc | extended-vlan-vpls
| flexible-ethernet-services | flexible-frame-relay | frame-relay | frame-relay-ccc |
frame-relay-ether-type | frame-relay-ether-type-tcc | frame-relay-port-ccc |
frame-relay-tcc | multilink-frame-relay-uni-nni | ppp | ppp-ccc | ppp-tcc | vlan-ccc |
vlan-vpls);
```



**NOTE:** ACX Series routers do not support *cisco-hdlc* encapsulation.

The physical interface encapsulation can be one of the following:

- ATM CCC cell relay—Connects two remote virtual circuits or ATM physical interfaces with a label-switched path (LSP). Traffic on the circuit is ATM cells.

For more information, see the *Junos OS Administration Library*.

- ATM PVC—Defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*. When you configure physical ATM interfaces with ATM PVC encapsulation, an RFC 2684-compliant ATM Adaptation Layer 5 (AAL5) tunnel is set up to route the ATM cells over a Multiprotocol Label Switching (MPLS) path that is typically established between two MPLS-capable routers using the Label Distribution Protocol (LDP).
- Ethernet cross-connect—Ethernet interfaces without VLAN tagging can use Ethernet CCC encapsulation. Two related versions are supported:

- CCC version (**ethernet-ccc**)—Ethernet interfaces with standard Tag Protocol ID (TPID) tagging can use Ethernet CCC encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
- TCC version (**ethernet-tcc**)—Similar to CCC, but used for circuits with different media on either side of the connection.

For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

- VLAN CCC (**vlan-ccc**)—Ethernet interfaces with VLAN tagging enabled can use VLAN CCC encapsulation. VLAN CCC encapsulation supports TPID 0x8100 only. When you use this encapsulation type, you can configure the **ccc** family only.
- Extended VLAN cross-connect—Gigabit Ethernet interfaces with VLAN 802.1Q tagging enabled can use extended VLAN cross-connect encapsulation. (Ethernet interfaces with standard TPID tagging can use VLAN CCC encapsulation.) Two related versions of extended VLAN cross-connect are supported:
  - CCC version (**extended-vlan-ccc**)—Extended VLAN CCC encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. When you use this encapsulation type, you can configure the **ccc** family only.
  - TCC version (**extended-vlan-tcc**)—Similar to CCC, but used for circuits with different media on either side of the connection.

For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC and extended VLAN TCC are not supported.



**NOTE:** In ACX Series routers, VPLS is supported only on ACX5048 and ACX5096 routers.

---

- Ethernet VPLS (**ethernet-vpls**)—Ethernet interfaces with VPLS enabled can use Ethernet VPLS encapsulation. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices*.
- Ethernet VLAN VPLS (**vlan-vpls**)—Ethernet interfaces with VLAN tagging and VPLS enabled can use Ethernet VLAN VPLS encapsulation. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices*.
- Extended VLAN VPLS (**extended-vlan-vpls**)—Ethernet interfaces with VLAN 802.1Q tagging and VPLS enabled can use Ethernet Extended VLAN VPLS encapsulation. (Ethernet interfaces with standard TPID tagging can use Ethernet VLAN VPLS encapsulation.) Extended Ethernet VLAN VPLS encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices*.
- Flexible Ethernet services (**flexible-ethernet-services**)—Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router) can use flexible Ethernet services encapsulation. Aggregated Ethernet bundles can use this encapsulation type. You use this encapsulation type when you want to configure multiple per-unit Ethernet

encapsulations. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.

- PPP—Defined in RFC 1661, *The Point-to-Point Protocol (PPP) for the Transmission of Multiprotocol Datagrams over Point-to-Point Links*. PPP is the default encapsulation type for physical interfaces. E1, E3, SONET/SDH, T1, and T3 interfaces can use PPP encapsulation.



**NOTE:** When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.

In ACX Series routers, VPLS is supported only on ACX5048 and ACX5096 routers.

## Encapsulation Capabilities

When you configure a point-to-point encapsulation (such as PPP or Cisco HDLC) on a physical interface, the physical interface can have only one logical interface (that is, only one **unit** statement) associated with it. When you configure a multipoint encapsulation (such as Frame Relay), the physical interface can have multiple logical units, and the units can be either point-to-point or multipoint.

Ethernet CCC encapsulation for Ethernet interfaces with standard TPID tagging requires that the physical interface have only a single logical interface. Ethernet interfaces in VLAN mode can have multiple logical interfaces.

For Ethernet interfaces in VLAN mode, VLAN IDs are applicable as follows:

- VLAN ID 0 is reserved for tagging the priority of frames.
- For encapsulation type **vlan-ccc**, VLAN IDs 1 through 511 are reserved for normal VLANs. VLAN IDs 512 and above are reserved for VLAN CCCs.

When you configure Ethernet virtual LAN (VLAN) encapsulation on CCC circuits (by using the **encapsulation vlan-ccc** statement at the **[edit interfaces interface-name]** hierarchy level), you can bind a list of VLAN IDs to the interface by using the **vlan-id-list [ vlan-id-numbers ]** statement to configure a CCC for multiple VLANs. Configuring this statement creates a CCC for:

- Each VLAN listed—for example, **vlan-id-list [ 100 200 300 ]**
- Each VLAN in a range—for example, **vlan-id-list [ 100-200 ]**
- Each VLAN in a list and range combination—for example, **vlan-id-list [ 50, 100-200, 300 ]**
- For encapsulation type **vlan-vpls**, VLAN IDs 1 through 511 are reserved for normal VLANs, and VLAN IDs 512 through 4094 are reserved for VPLS VLANs. For 4-port Fast Ethernet interfaces, you can use VLAN IDs 512 through 1024 for VPLS VLANs.

- For Gigabit Ethernet interfaces and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), you can configure flexible Ethernet services encapsulation on the physical interface. For interfaces with **flexible-ethernet-services** encapsulation, all VLAN IDs are valid. VLAN IDs from 1 through 511 are not reserved.
- For encapsulation types **extended-vlan-ccc** and **extended-vlan-vpls**, all VLAN IDs are valid.

The upper limits for configurable VLAN IDs vary by interface type.

When you configure a TCC encapsulation, some modifications are needed to handle VPN connections over unlike Layer 2 and Layer 2.5 links and terminate the Layer 2 and Layer 2.5 protocol locally.

The router performs the following media-specific change:

- ATM—Operation, Administration, and Maintenance (OAM) and Interim Local Management Interface (ILMI) processing is terminated at the router. Cell relay is not supported. The Junos OS strips all ATM encapsulation data from incoming frames before forwarding them. For output, the next hop is changed to ATM encapsulation.

### Example: Configuring the Encapsulation on a Physical Interface

Configure PPP encapsulation on a SONET/SDH interface. The second and third **family** statements allow Intermediate System-to-Intermediate System (IS-IS) and MPLS to run on the interface.

```
[edit interfaces]
so-7/0/0 {
  encapsulation ppp;
  unit 0 {
    point-to-point;
    family inet {
      address 192.168.1.113/32 {
        destination 192.168.1.114;
      }
    }
    family iso;
    family mpls;
  }
}
```

#### Related Documentation

- *Configuring Interface Encapsulation on Logical Interfaces*

## Configuring PPP Address and Control Field Compression

For interfaces with PPP, PPP CCC, or PPP TCC encapsulation, you can configure compression of the Data Link Layer address and control fields, as defined in RFC 1661, *The Point-to-Point Protocol (PPP)*. By default, the address and control fields are not compressed. This means PPP-encapsulated packets are transmitted with two 1-byte fields (0xff and 0x03). If you configure address and control field compression (ACFC) and ACFC is successfully negotiated with the local router's peer, the local router transmits packets without these 2 bytes. ACFC allows you to conserve bandwidth by transmitting less data.

On M320, M120, and T Series routers, ACFC is not supported for any ISO family protocols. Do not include the **acfc** statement at the **[edit interfaces *interface-name* ppp-options compression]** hierarchy level when you include the **family iso** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.



**NOTE:** The address and control fields cannot be compressed in Link Control Protocol (LCP) packets.

The PPP session restarts when you configure or modify compression options.

To configure ACFC:

1. In configuration mode, go to the **[edit interfaces *interface-name* ppp-options]** hierarchy level.

```
[edit ]
user@host# edit interfaces interface-name ppp-options
```

2. Include the **compression** statement at the **[edit interfaces *interface-name* ppp-options]** hierarchy level, and specify **acfc**.

```
[edit interfaces interface-name ppp-options]
compression acfc;
```

To monitor the configuration, issue the **show interfaces *interface-name*** command. Configured options are displayed in the **link flags** field for the physical interface. Successfully negotiated options are displayed in the **flags** field for the logical interface. In this example, both ACFC and PFC are configured, but neither compression feature has been successfully negotiated.

```
user@router# run show interfaces so-0/1/1
Physical interface: so-0/1/1, Enabled, Physical link is Up
  Interface index: 133, SNMP ifIndex: 27
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: 0C3,
  Loopback: None, FCS: 16
  Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : No-Keepalives ACFC PFC
```

```
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Not-configured
CoS queues      : 4 supported
Last flapped    : 2004-12-29 10:49:32 PST (00:18:35 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
SONET alarms    : None
SONET defects   : None
Logical interface so-0/1/1.0 (Index 68) (SNMP ifIndex 169)
Flags: Point-To-Point SNMP-Traps ACFC Encapsulation: PPP
Protocol inet, MTU: 4470
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 3.3.3/24, Local: 3.3.3.2, Broadcast: 3.3.3.255
```

This configuration causes the local router to try to negotiate ACFC with its peer. If ACFC is successfully negotiated, the local router sends packets with compressed address and control fields. When you include the **compression acfc** statement in the configuration, the PPP session restarts, and the local router sends the ACFC option in the LCP Configure-Request packet. The ACFC option informs the local router's peer that the local router can receive packets with compression. If the peer indicates that it, too, can receive packets with compression, then ACFC is negotiated. If ACFC is successfully negotiated, the local router can receive packets with or without the address and control bytes included.

- Related Documentation**
- [ppp-options on page 892](#)
  - [compression on page 492](#)
  - [acfc on page 415](#)

## Configuring the PPP Protocol Field Compression

For interfaces with PPP, PPP CCC, or PPP TCC encapsulation, you can configure protocol field compression. By default, the protocol field is not compressed. This means PPP-encapsulated packets are transmitted with a two-byte protocol field. For example, IPv4 packets are transmitted with the protocol field set to 0x0021, and MPLS packets are transmitted with the protocol field set to 0x0281.

For all protocols with identifiers in the range 0x0000 through 0x00ff, you can configure the router to compress the protocol field to one byte, as defined in RFC 1661, *The Point-to-Point Protocol (PPP)*. Protocol field compression (PFC) allows you to conserve bandwidth by transmitting less data.



**NOTE:** The protocol field cannot be compressed in Link Control Protocol (LCP) packets.

The PPP session restarts when you configure or modify compression options.

To configure PFC:

1. In configuration mode, go to the `[edit interfaces interface-name ppp-options]` hierarchy level.

`[edit ]`

`user@host# edit interfaces interface-name ppp-options`

2. Include the **compression** statement at the `[edit interfaces interface-name ppp-options]` hierarchy level, and specify **pfc**.

`[edit interfaces interface-name ppp-options]`

`compression pfc;`

To monitor the configuration, issue the **show interfaces *interface-name*** command.

Configured options are displayed in the **link flags** field for the physical interface.

Successfully negotiated options are displayed in the **flags** field for the logical interface.

In this example, both ACFC and PFC are configured, but neither compression feature has been successfully negotiated.

```
user@router# run show interfaces so-0/1/1
```

```
Physical interface: so-0/1/1, Enabled, Physical link is Up
```

```
Interface index: 133, SNMP ifIndex: 27
```

```
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,
Loopback: None, FCS: 16,
```

```
Payload scrambler: Enabled
```

```
Device flags : Present Running
```

```
Interface flags: Point-To-Point SNMP-Traps 16384
```

```
Link flags : No-Keepalives ACFC PFC
```

```
LCP state: Opened
```

```
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
```

```
CHAP state: Not-configured
```

```
CoS queues      : 4 supported
Last flapped    : 2004-12-29 10:49:32 PST (00:18:35 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
SONET alarms    : None
SONET defects   : None
Logical interface so-0/1/1.0 (Index 68) (SNMP ifIndex 169)
  Flags: Point-To-Point SNMP-Traps ACFC Encapsulation: PPP
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 3.3.3/24, Local: 3.3.3.2, Broadcast: 3.3.3.255
```

This configuration causes the local router to try to negotiate PFC with its peer. If PFC is successfully negotiated, the local router sends packets with compressed protocol fields. When you include the **compression pfc** statement in the configuration, the PPP session restarts, and the local router sends the PFC option in the LCP Configure-Request packet. The PFC option informs the local router's peer that the local router can receive packets with compression. If the peer indicates that it, too, can receive packets with compression, then PFC is negotiated. If PFC is successfully negotiated, the local router can receive packets with either 2-byte (uncompressed) or 1-byte (compressed) protocol fields.

**Related Documentation** [ppp-options on page 892](#)  
[compression on page 492](#)  
[pfc on page 871](#)

---

## Monitoring a PPP Session

You can monitor PPP packet exchanges. When monitoring is enabled, packets exchanged during a session are logged by default to `/var/log/pppd`, or to the file specified in the **traceoptions** statement.

To monitor a PPP session:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **monitor-session** statement.

```
[edit protocols ppp]
user@host# monitor-session (interface-name | all);
```

When monitoring is configured, the operational mode commands **show ppp summary** and **show ppp interface** display a **Monitored** flag in the **Session flags** column or line.

**Related Documentation** [monitor-session on page 783](#)

## Tracing Operations of the pppd Process

You can trace the operations of the router's pppd process.

To trace the router's pppd process:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **traceoptions** statement.

```
[edit protocols ppp]
traceoptions {
  file filename <files number> <match regular-expression> <size size> <world-readable |
    no-world-readable>;
  flag flag;
  level severity-level;
  no-remote-trace;
}
```

- To specify more than one tracing operation, include multiple **flag** statements.

You can specify the following flags in the **traceoptions** statement:

- **access**—Trace access code
- **address-pool**—Trace address pool code
- **all**—Trace all areas of code
- **auth**—Trace authentication code
- **chap**—Trace challenge handshake authentication protocol code
- **ci**—Trace CI code
- **config**—Trace configuration code
- **ifdb**—Trace interface database code
- **lcp**—Trace LCP state machine code
- **memory**—Trace memory management code
- **message**—Trace message processing code
- **mlppp**—Trace multilink point-to-point protocol code
- **ncp**—Trace NCP state machine code
- **pap**—Trace password authentication protocol code
- **ppp**—Trace PPP protocol processing code
- **radius**—Trace RADIUS processing code
- **redundancy**—Trace redundancy code

- **rtsock**—Trace routing socket code
- **session**—Trace session management code
- **signal**—Trace signal handling code
- **timer**—Trace timer code
- **ui**—Trace user interface code

Related [traceoptions on page 1036](#)  
Documentation

---

## Configuring the Router as a DCE with Frame Relay Encapsulation

---

By default, when you configure an interface with Frame Relay encapsulation, the routing platform is assumed to be data terminal equipment (DTE). That is, the routing platform is assumed to be at a terminal point on the network.

When you configure the router to be a data circuit-terminating equipment (DCE), keepalives are disabled by default.

To configure the router to be DCE:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]  
user@host# edit interfaces interface-name
```

2. Configure the **dce** option to respond to Frame Relay status enquiry messages.

```
[edit interfaces interface-name]  
user@host# set dce
```

Perform one of the following tasks for back-to-back Frame Relay connections:

- Disable sending of keepalives on both sides of the connection.
- Configure one side of the connection as a DTE (the default Junos configuration) by removing the **dce** statement from the configuration and the other as a DCE.

Related [dce on page 514](#)  
Documentation

## Receive and Transmit Leaky Bucket Properties Overview

Congestion control is particularly difficult in high-speed networks with high volumes of traffic. When congestion occurs in such a network, it is usually too late to react. You can avoid congestion by regulating the flow of packets into your network. Smoother flows prevent bursts of packets from arriving at (or being transmitted from) the same interface and causing congestion.

For all interface types except ATM, Fast Ethernet, Gigabit Ethernet, and channelized IQ and IQE, you can configure leaky bucket properties, which allow you to limit the amount of traffic received on and transmitted by a particular interface. You effectively specify what percentage of the interface's total capacity can be used to receive or transmit packets. You might want to set leaky bucket properties to limit the traffic flow from a link that is known to transmit high volumes of traffic.



**NOTE:** Instead of configuring leaky bucket properties, you can limit traffic flow by configuring policers. Policers work on all interfaces. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

The leaky bucket is used at the host-network interface to allow packets into the network at a constant rate. Packets might be generated in a bursty manner, but after they pass through the leaky bucket, they enter the network evenly spaced. In some cases, you might want to allow short bursts of packets to enter the network without smoothing them out. By controlling the number of packets that can accumulate in the bucket, the **threshold** property controls burstiness. The maximum number of packets entering the network in time units is **threshold + rate \* t**.

By default, leaky buckets are disabled and the interface can receive and transmit packets at the maximum line rate.

For each DS3 channel on a channelized OC12 interface, you can configure unique receive and transmit buckets.



**NOTE:** HDLC payload scrambling conflicts with traffic shaping configured using leaky bucket properties. If you configure leaky bucket properties, you must disable payload scrambling, because the Junos OS rejects configurations that have both features enabled. For more information, see *Configuring SONET/SDH HDLC Payload Scrambling for Link Stability*.

### Related Documentation

- [Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 156](#)
- [SONET/SDH Interfaces Overview](#)
- [receive-bucket on page 922](#)

- [transmit-bucket on page 1043](#)

## Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion

---

You can configure leaky bucket properties which allow you to limit the amount of traffic received on and transmitted by a particular interface. You can specify what percentage of the interface's total capacity can be used to receive or transmit packets. You might want to set leaky bucket properties to limit the traffic flow from a link that is known to transmit high volumes of traffic.

To configure leaky bucket properties:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level.

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **receive-bucket** statement.

```
[edit interfaces interface-name]
user@host# set receive-bucket
```

3. Configure the **overflow** option, the **threshold** option, and the **rate** option for the receive leaky bucket, which specifies what percentage of the interface's total capacity can be used to receive packets.

```
[edit interfaces interface-name receive-bucket]
user@host# set overflow (discard | tag)
user@host# set threshold bytes
user@host# set rate percentage
```

4. Configure the **transmit-bucket** statement.

```
[edit interfaces interface-name]
user@host# set transmit-bucket
```

5. Configure the **overflow** option, the **threshold** option, and the **rate** option for the transmit leaky bucket, which specifies what percentage of the interface's total capacity can be used to transmit packets.

```
[edit interfaces interface-name transmit-bucket]
user@host# set overflow (discard | tag)
user@host# set threshold bytes
user@host# set rate percentage
```

### Related Documentation

- [Receive and Transmit Leaky Bucket Properties Overview on page 155](#)
- [SONET/SDH Interfaces Overview](#)
- [receive-bucket on page 922](#)

- [transmit-bucket on page 1043](#)

## Understanding Unidirectional Traffic Flow on Physical Interfaces

By default, physical interfaces are bidirectional; that is, they both transmit and receive traffic. You can configure unidirectional link mode on a 10-Gigabit Ethernet interface that creates two new physical interfaces that are unidirectional. The new transmit-only and receive-only interfaces operate independently, but both are subordinate to the original parent interface.

The unidirectional interfaces enable the configuration of a unidirectional link topology. Unidirectional links are useful for applications such as broadband video services where almost all traffic flow is in one direction, from the provider to the user. Unidirectional link mode conserves bandwidth by enabling it to be differentially dedicated to transmit and receive interfaces. In addition, unidirectional link mode conserves ports for such applications because the transmit-only and receive-only interfaces act independently. Each can be connected to different routers, for example, reducing the total number of ports required.



**NOTE:** Unidirectional link mode is currently supported on only the following hardware:

- 4-port 10-Gigabit Ethernet DPC on the MX960 router
- 10-Gigabit Ethernet IQ2 PIC and 10-Gigabit Ethernet IQ2E PIC on the T Series router

The transmit-only interface is always operationally up. The operational status of the receive-only interface depends only on local faults; it is independent of remote faults and of the status of the transmit-only interface.

On the parent interface, you can configure attributes common to both interfaces, such as clocking, framing, `gether-options`, and `sonet-options`. On each of the unidirectional interfaces, you can configure encapsulation, MAC address, MTU size, and logical interfaces.

Unidirectional interfaces support IP and IPv6. Packet forwarding takes place by means of static routes and static ARP entries, which you can configure independently on both unidirectional interfaces.

Only transmit statistics are reported on the transmit-only interface (and shown as zero on the receive-only interface). Only receive statistics are reported on the receive-only interface (and shown as zero on the transmit-only interface). Both transmit and receive statistics are reported on the parent interface.

### Related Documentation

- [unidirectional on page 1054](#)
- [Enabling Unidirectional Traffic Flow on Physical Interfaces on page 158](#)

## Enabling Unidirectional Traffic Flow on Physical Interfaces

---

By default, physical interfaces are bidirectional; that is, they both transmit and receive traffic. You can configure unidirectional link mode on a 10-Gigabit Ethernet interface that creates two new physical interfaces that are unidirectional. The new transmit-only and receive-only interfaces operate independently, but both are subordinate to the original parent interface.

To enable unidirectional link mode on a physical interface, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **unidirectional** option to create two new, unidirectional (transmit-only and receive-only) physical interfaces subordinate to the original parent interface.

```
[edit interfaces interface-name]
user@host# set unidirectional
```



**NOTE:** Unidirectional link mode is currently supported on only the following hardware:

- 4-port 10-Gigabit Ethernet DPC on the MX960 router
  - 10-Gigabit Ethernet IQ2 PIC and 10-Gigabit Ethernet IQ2E PIC on the T Series router
- 

**Related  
Documentation**

- [unidirectional on page 1054](#)
- [Understanding Unidirectional Traffic Flow on Physical Interfaces on page 157](#)

## Physical Interface Damping Overview

Physical interface damping limits the advertisement of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements.

From the viewpoint of network deployment, physical interface flaps fall into the following categories:

- Nearly instantaneous multiple flaps of short duration (milliseconds).
- Periodic flaps of long duration (seconds).

Figure 6 on page 159 is used to describe these types of interface flaps and the damping configuration that you can use in each case.

Figure 6: Two Router Interfaces Connected Through Transport Equipment



**NOTE:** We recommend that you use similar damping configurations on both ends of the physical interface. Configuring damping on one end and not having interface damping on the other end can result in undesired behavior.

The following sections describe the types of interface damping depending upon the transition time length.

- [Damping Overview for Shorter Physical Interface Transitions on page 159](#)
- [Damping Overview for Longer Physical Interface Transitions on page 160](#)

### Damping Overview for Shorter Physical Interface Transitions


Figure 6 on page 159 shows two routers with two transport devices between them. If a redundant link between the two transport devices fails, link switching is performed. Link switching takes a number of milliseconds. As shown in Figure 7 on page 160, during switching, both router interfaces might encounter multiple flaps with an up-and-down duration of several milliseconds. These multiple flaps, if advertised to the upper-level routing protocols, might result in undesired route updates. This is why you might want to damp these interface flaps.



**NOTE:** Damping is suitable only with routing protocols.

For shorter physical interface transitions, you configure interface damping with the **hold-time** statement on the interface. The hold timer enables interface damping by not advertising interface transitions until the hold timer duration has passed. When a hold-down timer is configured and the interface goes from up to down, the down hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still *down*, then the router begins to advertise the interface as being down. Similarly, when a hold-up timer is configured and an interface goes from down to up, the up hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still *up*, then the router begins to advertise the interface as being up.


*Figure 7: Multiple Flaps of Short Duration (Milliseconds)*

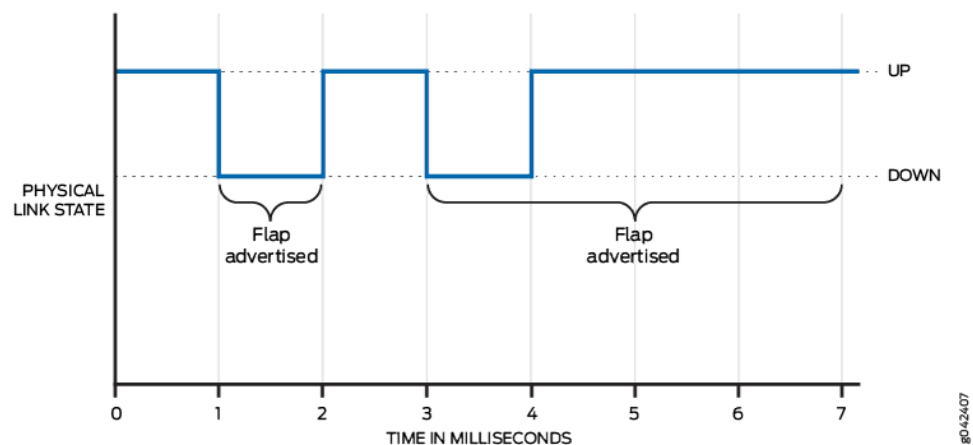

## Damping Overview for Longer Physical Interface Transitions

When the link between a router interface and the transport devices is not stable, this can lead to periodic flapping, as shown in [Figure 8 on page 161](#). Flaps occur in the order of seconds or more, with an up-and-down flap duration in the order of a second or more. In this case, using the hold timer feature might not produce optimal results as it cannot suppress the relatively longer and repeated interface flaps. Increasing the hold time duration to seconds still allows the system to send route updates on the flapping interface, so fails to suppress periodically flapping interfaces on the system.

Figure 8: Periodic Flaps of Long Duration (Seconds)

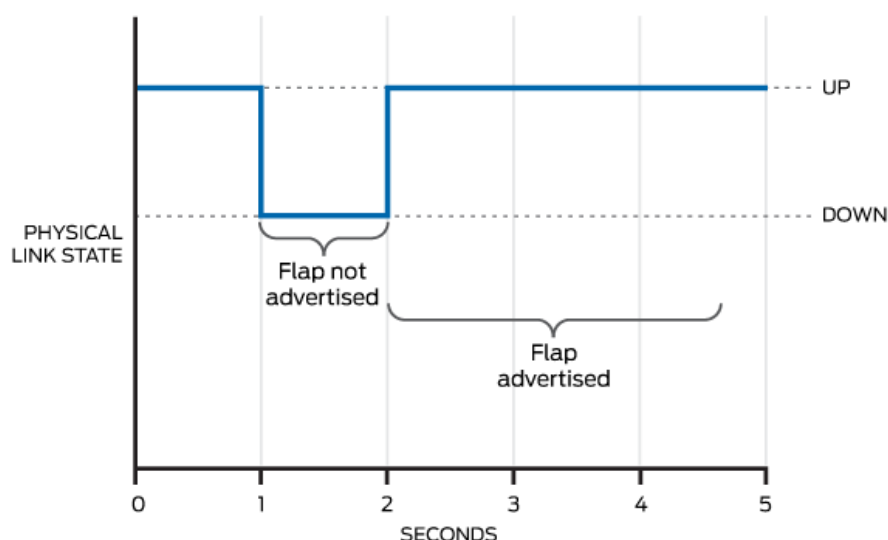

g042408

For longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up-and-down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level, the interface is placed in the suppress state, and further interface link up and down events are not reported to the upper-level protocols.

**NOTE:**

- Only PTX Series routers, T Series routers, MX960 routers, MX480 routers, MX240 routers, MX80 routers, and M10i routers support interface damping for longer periodic interface flaps on all the line cards.
- Penalty added on every interface flap is 1000.
- The system does not indicate whether an interface is down because of suppression or that is the actual state of the physical interface. Because of this, SNMP link traps and Operation, Administration, and Maintenance (OAM) protocols cannot differentiate the damped version of the link state from the real version. Therefore, the traps and protocols might not work as expected.
- You can verify suppression by viewing the information in the Damping field of the `show interface extensive` command output.

At all times, the interface penalty counter follows an exponential decay process.

[Figure 9 on page 163](#) and [Figure 10 on page 164](#) show the decay process as it applies to recovery when the physical level link is down or up. As soon as the accumulated penalty reaches the lower boundary of the reuse level, the interface is marked as unsuppressed,

and further changes in the interface link state are again reported to the upper-level protocols. You use the **max-suppress** option to configure the maximum time for restricting the accumulation of the penalty beyond the value of the maximum penalty. The value of the maximum penalty is calculated by the software. The maximum penalty corresponds to the time it would take max-suppress to decay and reach the reuse level. The penalty continues to decay after crossing the reuse level.

[Figure 9 on page 163](#) and [Figure 10 on page 164](#) show the accumulated penalty, and the decay over time as a curve. Whenever the penalty is below the reuse level and the physical level link changes state, state changes are advertised to the system and cause SNMP state changes.

[Figure 9 on page 163](#) shows the penalty dropping below the reuse level when the physical link is down. The system is notified of a state change only after the physical level link transitions to up.

Figure 9: Physical-Level Link Is Down When the Penalty Falls Below the Reuse Level


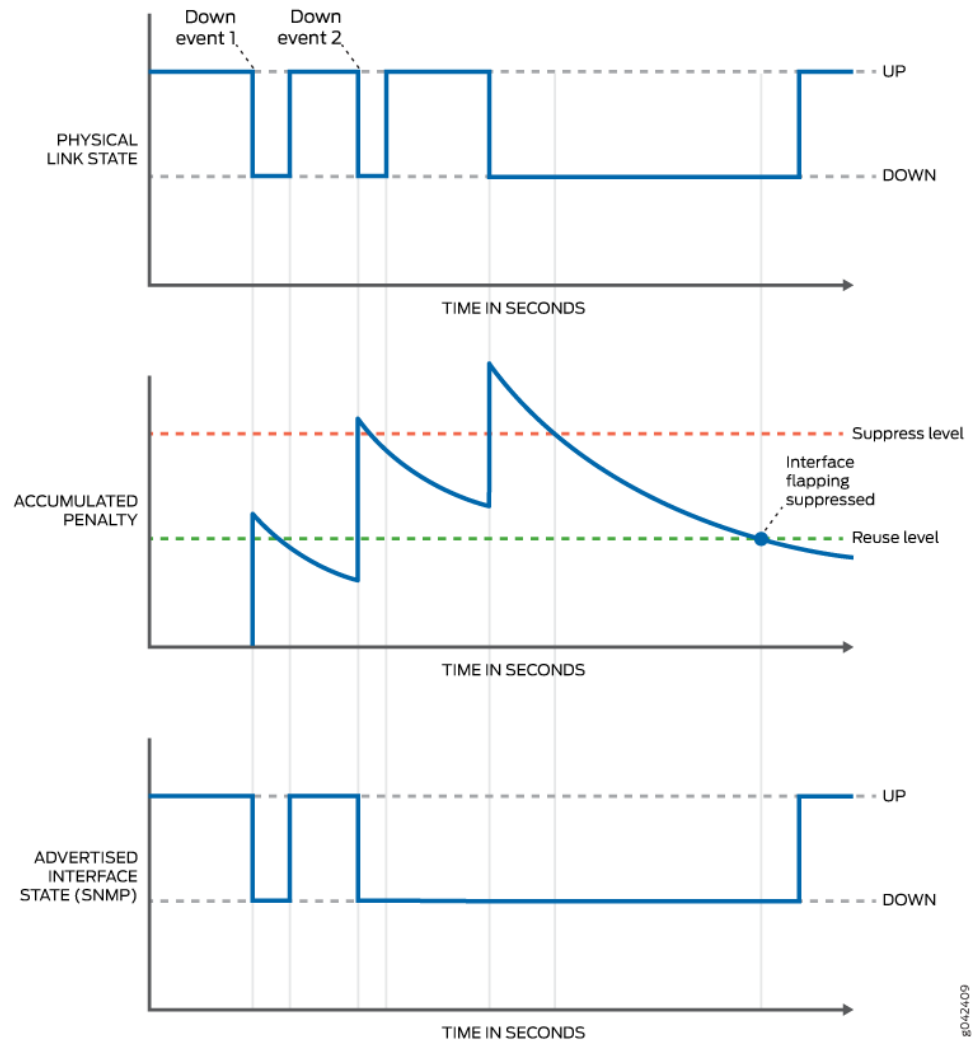


Figure 10 on page 164 shows the penalty dropping below the reuse level when the physical link is up. The system is notified of a state change immediately.

Figure 10: Physical-Level Link Is Up When the Penalty Falls Below the Reuse Level

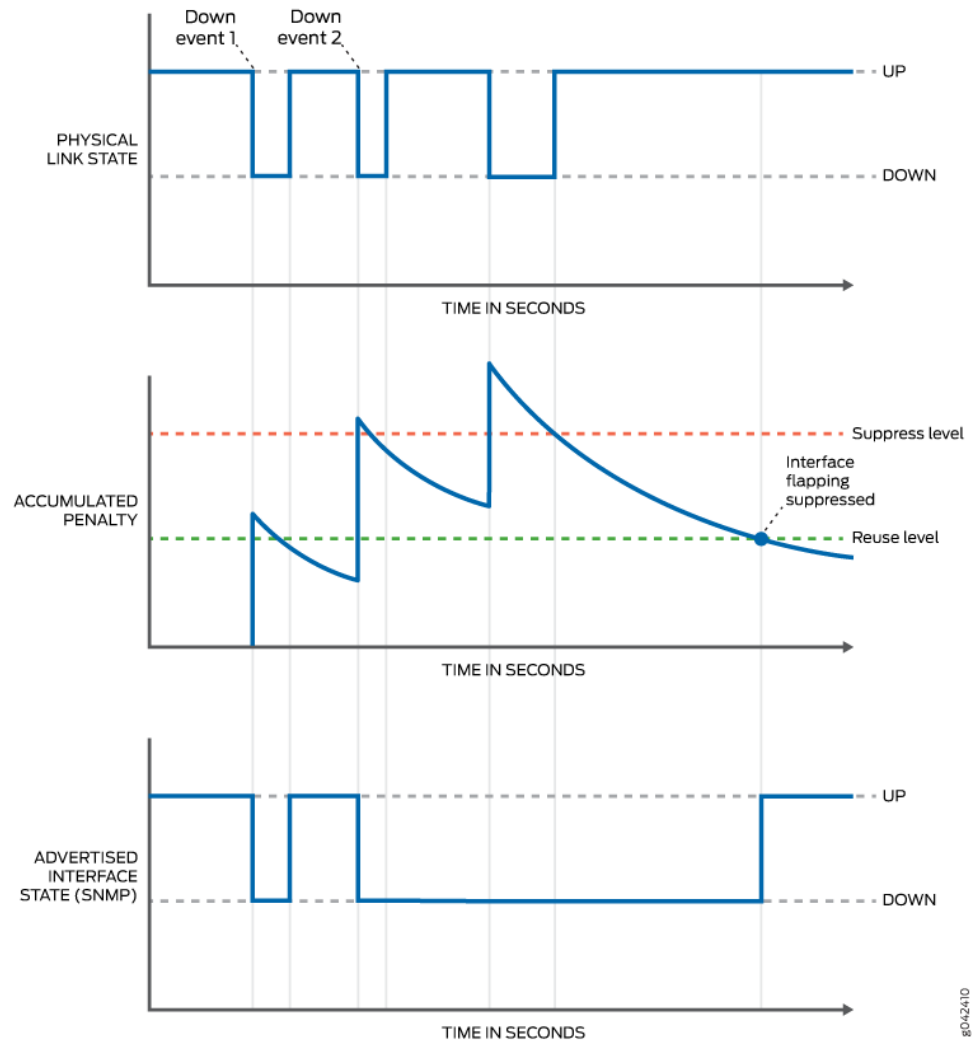

#### Related Documentation

- [Damping Shorter Physical Interface Transitions on page 165](#)
- [Damping Longer Physical Interface Transitions on page 166](#)
- [Understanding Damping Parameters](#)
- [damping on page 509](#)
- [hold-time on page 644](#)

## Damping Shorter Physical Interface Transitions

By default, when an interface changes from being up to being down, or from down to up, this transition is advertised immediately to the hardware and Junos OS. In some situations—for example, when an interface is connected to an add/drop multiplexer (ADM) or wavelength-division multiplexer (WDM), or to protect against SONET/SDH framer holes—you might want to damp interface transitions. This means not advertising the interface's transition until a certain period of time has passed, called the *hold-time*. When you have damped interface transitions and the interface goes from up to down, the down hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still *down*, then the router begins to advertise the interface as being down. Similarly, when an interface goes from down to up, the up hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still *up*, then the router begins to advertise the interface as being up. For information about physical interface damping, see [“Physical Interface Damping Overview” on page 159](#).

This task applies to damping shorter physical interface transitions in milliseconds. To damp longer physical interface transitions in seconds, see [“Damping Longer Physical Interface Transitions” on page 166](#).

To configure damping of shorter physical interface transitions:

1. Select the interface to damp, where the interface name is *interface-type-fpc/pic/port*:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the hold-time for link up and link down.

```
[edit interfaces interface-name]
user@host# set hold-time up milliseconds down milliseconds
```

The hold time can be a value from 0 through 4,294,967,295 milliseconds. The default value is 0, which means that interface transitions are not damped. Junos OS advertises the transition within 100 milliseconds of the time value you specify.

For most Ethernet interfaces, hold timers are implemented using a one-second polling algorithm. For 1-port, 2-port, and 4-port Gigabit Ethernet interfaces with small form-factor pluggable transceivers (SFPs), hold timers are interrupt-driven.



**NOTE:** The hold-time option is not available for controller interfaces.

### Related Documentation

- [Physical Interface Damping Overview on page 159](#)
- [Damping Longer Physical Interface Transitions on page 166](#)
- [SONET/SDH Defect Hold Times for Damping Interface Transitions Overview](#)

- *Configuring SONET/SDH Defect Triggers*
- [hold-time on page 644](#)

## Damping Longer Physical Interface Transitions

---

Physical interface damping limits the advertisement of the up and down transitions (flapping) on an interface. An unstable link between a router interface and the transport devices can lead to periodic flapping. Longer flaps occur with a period of about five seconds or more, with an up-and-down duration of one second. For these longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up and down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level **max-suppress**, the interface is placed in the suppress state, and further interface state up and down transitions are not reported to the upper-level protocols.



---

### NOTE:

- Only PTX Series routers, T Series routers, MX2010 routers, MX2020 routers, MX960 routers, MX480 routers, MX240 routers, MX80 routers, and M10i routers support interface damping for longer periodic interface flaps.
- The system does not indicate whether an interface is down because of suppression or that is the actual state of the physical interface. Because of this, SNMP link traps and Operation, Administration, and Maintenance (OAM) protocols cannot differentiate the damped version of the link state from the real version. Therefore, the traps and protocols might not work as expected.
- You can verify suppression by viewing the information in the Damping field of the **show interface extensive** command output.

---

You can view the damping parameters with the **show interfaces extensive** command.

To configure damping of longer physical interface transitions:

1. Select the interface to damp, where the interface name is *interface-type-fpc/pic/port* or an interface range:

```
[edit]  
user@host# edit interfaces interface-name
```

2. Enable longer interface transition damping on a physical interface:

```
[edit interfaces interface-name damping]  
user@host# set enable
```

3. (Optional) Set the maximum time in seconds that an interface can be suppressed no matter how unstable the interface has been.



**NOTE:** Configure `max-suppress` to a value that is greater than the value of `half-life`; otherwise, the configuration is rejected.

```
[edit interfaces interface-name damping]
user@host# set max-suppress maximum-seconds
```

4. (Optional) Set the decay half-life in seconds, which is the interval after which the accumulated interface penalty counter is reduced by half if the interface remains stable.



**NOTE:** Configure `max-suppress` to a value that is greater than the value of `half-life`; otherwise, the configuration is rejected.

```
[edit interfaces interface-name damping]
user@host# set half-life seconds
```

5. (Optional) Set the reuse threshold (no units). When the accumulated interface penalty counter falls below this value, the interface is no longer suppressed.

```
[edit interfaces interface-name damping]
user@host# set reuse number
```

6. (Optional) Set the suppression threshold (no units). When the accumulated interface penalty counter exceeds this value, the interface is suppressed.

```
[edit interfaces interface-name damping]
user@host# set suppress number
```

#### Related Documentation

- [Physical Interface Damping Overview on page 159](#)
- [show interfaces extensive on page 1559](#)
- [Damping Shorter Physical Interface Transitions on page 165](#)
- [damping on page 509](#)

## Example: Configuring Physical Interface Damping

This example shows how to configure damping for a physical interface on a PTX Series Packet Transport Router.

- [Requirements on page 168](#)
- [Overview on page 168](#)

- [Configuration on page 168](#)
- [Verification on page 169](#)

## Requirements

This example uses the following hardware and software components:

- One PTX Series Packet Transport Router
- One or more routers that provide input packets and receive output packets
- Junos OS Release 14.1 or later

## Overview

Physical interface damping provides a smoothing of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements.

From the viewpoint of network deployment, physical interface flaps fall into these categories:

- Nearly instantaneous multiple flaps of short duration (milliseconds). For shorter physical interface transitions, you configure interface damping with the **hold-time** statement on the interface. The hold timer enables interface damping by not advertising interface transitions until the hold timer duration has passed. When a hold-down timer is configured and the interface goes from up to down, the interface is not advertised to the rest of the system as being down until it has remained down for the hold-down timer period. Similarly, when a hold-up timer is configured and an interface goes from down to up, it is not advertised as being up until it has remained up for the hold-up timer period.
- Periodic flaps of long duration (seconds). For longer periodic interface flaps, you configure interface damping with the **damping** statement on the interface. This damping method uses an exponential back-off algorithm to suppress interface up and down event reporting to the upper-level protocols. Every time an interface goes down, a penalty is added to the interface penalty counter. If at some point the accumulated penalty exceeds the suppress level, the interface is placed in the suppress state, and further interface state up transitions are not reported to the upper-level protocols.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set interfaces xe-6/0/0 damping half-life 11 max-suppress 2222 reuse 3333 suppress 4444
```

**Step-by-Step Procedure**

To configure damping on the PTX Series Packet Transport Router:

1. Enable damping on the interface, set the half-life interval, maximum suppression, reuse, and suppress values:

```
[edit interface]
user@router# set xe-6/0/0 damping half-life 11 max-suppress 2222 reuse 3333
suppress 4444
```

2. Commit configuration:

```
[edit]
user@router# commit
```

### Results

From configuration mode, confirm your configuration by entering the **show interfaces** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@router# show interfaces
xe-6 {
  damping {
    half-life 11;
    max-suppress 2222;
    reuse 3333;
    suppress 4444;
  }
}
```

### Verification

To confirm that the configuration is working properly, perform this task:

- [Verifying Interface Damping on xe6 on page 169](#)

#### Verifying Interface Damping on xe6

**Purpose** Verify that damping is enabled on the interface and that the damping parameter values are correctly set.

**Action** From operational mode, run the **show interfaces extensive** command.

```
user@router# run show interfaces xe-6/0/0 extensive
Physical interface: xe-6/0/0, Enabled, Physical link is Up
Interface index: 158, SNMP ifIndex: 535, Generation: 161
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None,
Source filtering: Disabled, Flow control: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues    : 8 supported, 8 maximum usable queues
Hold-times    : Up 0 ms, Down 0 ms
Damping       : half-life: 11 sec, max-suppress: 2222 sec, reuse: 3333,
suppress: 4444, state: unsuppressed
```

**Meaning** Damping is enabled and configured successfully on the xe-6 interface.

**Related Documentation**

- [Physical Interface Damping Overview on page 159](#)
- [damping on page 509](#)

---

## Configuring Multiservice Physical Interface Properties

The adaptive services (AS), collector, monitoring services, and monitoring services II interfaces are multiservice interfaces specifically designed to enable IP services. To configure multiservice physical interface properties on the collector, monitoring services, and AS interfaces, include the **multiservice-options** statement:

```
multiservice-options {
  (core-dump | no-core-dump);
  (syslog | no-syslog);
  flow-control-options {
    down-on-flow-control;
    dump-on-flow-control;
    reset-on-flow-control;
  }
}
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces cp-fpc/pic/port]**
- **[edit interfaces mo-fpc/pic/port]**
- **[edit interfaces sp-fpc/pic/port]**

For more information about the services interfaces, see the *Junos OS Services Interfaces Library for Routing Devices*.

## Enabling or Disabling SNMP Notifications on Physical Interfaces

By default, Simple Network Management Protocol (SNMP) notifications are sent when the state of an interface or a connection changes. You can enable or disable these notification based on you requirements.

To explicitly enable sending SNMP notifications on the physical interface, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **traps** option to enable sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.

```
[edit interfaces interface-name]
user@host# set traps
```

To disable sending SNMP notifications on the physical interface, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]
user@host# edit interfaces interface-name
```

2. Configure the **no-traps** option to disable sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.

```
[edit interfaces interface-name]
user@host# set no-traps
```

Related Documentation

- [traps on page 1047](#)

## Configuring Accounting for the Physical Interface

- [Accounting Profiles Overview on page 171](#)
- [Configuring Accounting for the Physical Interface on page 172](#)
- [Displaying Accounting Profile for the Physical Interface on page 173](#)

### Accounting Profiles Overview

Juniper Networks routers and switches can collect various kinds of data about traffic passing through the router and switch. You can set up one or more *accounting profiles* that specify some common characteristics of this data, including the following:

- The fields used in the accounting records

- The number of files that the router or switch retains before discarding, and the number of bytes per file
- The polling period that the system uses to record the data

You configure the profiles and define a unique name for each profile using statements at the **[edit accounting-options]** hierarchy level. There are two types of accounting profiles: interface profiles and filter profiles. You configure interface profiles by including the **interface-profile** statement at the **[edit accounting-options]** hierarchy level. You configure filter profiles by including the **filter-profile** statement at the **[edit accounting-options]** hierarchy level. For more information, see the *Network Management and Monitoring Guide*.

You apply filter profiles by including the **accounting-profile** statement at the **[edit firewall filter *filter-name*]** and **[edit firewall family *family* filter *filter-name*]** hierarchy levels. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

## Configuring Accounting for the Physical Interface

### Before you begin

---

You must configure a profile to collect error and statistic information for input and output packets on a particular physical interface. An accounting profile specifies what statistics should be collected and written to a log file. For more information on how to configure an accounting-data log file, see the *Configuring Accounting-Data Log Files*.

An interface profile specifies the information collected and written to a log file. You can configure a profile to collect error and statistic information for input and output packets on a particular physical interface.

1. To configure which statistics should be collected for an interface, include the **fields** statement at the **[edit accounting-options interface-profile *profile-name*]** hierarchy level.

```
[edit accounting-options interface-profile profile-name]  
user@host# set fields field-name
```

2. Each accounting profile logs its statistics to a file in the **/var/log** directory. To configure which file to use, include the **file** statement at the **[edit accounting-options interface-profile *profile-name*]** hierarchy level.

```
[edit accounting-options interface-profile profile-name]  
user@host# set file filename
```



**NOTE:** You must specify a **file** statement for the interface profile that has already been configured at the **[edit accounting-options]** hierarchy level. For more information, see the [Configuring Accounting-Data Log Files](#)

---

3. Each interface with an accounting profile enabled has statistics collected once per interval time specified for the accounting profile. Statistics collection time is scheduled

evenly over the configured interval. To configure the interval, include the interval statement at the `[edit accounting-options interface-profile profile-name]` hierarchy level.

```
[edit accounting-options interface-profile profile-name]
user@host# set interval minutes
```



**NOTE:** The minimum interval allowed is 1 minute. Configuring a low interval in an accounting profile for a large number of interfaces might cause serious performance degradation.

4. To configure the interfaces on which the accounting needs to be performed, apply the interface profile to a physical interface by including the **accounting-profile** statement at the `[edit interfaces interface-name]` hierarchy level.

```
[edit interfaces]
user@host# set interface-name accounting-profile profile-name
```

- See Also**
- *Accounting Options Overview*
  - *Configuring Accounting-Data Log Files*

## Displaying Accounting Profile for the Physical Interface

**Purpose** To display the configured accounting profile a particular physical interface at the `[edit accounting-options interface-profile profile-name]` hierarchy level:

- interface-name—ge-1/0/1
- Interface profile —if\_profile
- File name—if\_stats
- Interval—15 minutes

- Action**
- Run the **show** command at the `[edit edit interfaces ge-1/0/1]` hierarchy level.

```
[edit interfaces ge-1/0/1]
accounting-profile if_profile;
```

- Run the **show** command at the `[edit accounting-options]` hierarchy level.

```
interface-profile if_profile {
  interval 15;
  file if_stats {
    fields {
      input-bytes;
      output-bytes;
      input-packets;
      output-packets;
      input-errors;
      output-errors;
```

```
}  
}  
}
```

**Meaning** The configured accounting and its associated set options are displayed as expected.

---

## Disabling a Physical Interface

- [Disabling a Physical Interface on page 174](#)
- [Example: Disabling a Physical Interface on page 175](#)
- [Effect of Disabling Interfaces on T series PICs on page 175](#)

### Disabling a Physical Interface

You can disable a physical interface, marking it as being down, without removing the interface configuration statements from the configuration.



**CAUTION:** Dynamic subscribers and logical interfaces use physical interfaces for connection to the network. The Junos OS allows you to set the interface to disable and commit the change while dynamic subscribers and logical interfaces are still active. This action results in the loss of all subscriber connections on the interface. Use care when disabling interfaces.

To disable a physical interface:

1. In configuration mode, go to **[edit interfaces *interface-name*]** hierarchy level.

```
[edit]  
user@host# edit interfaces ge-fpc/pic/port
```

2. Include the **disable** statement.

```
[edit interfaces at-fpc/pic/port ]  
user@host# set disable
```



**NOTE:** On the router, when you use the disable statement at the edit interfaces hierarchy level, depending on the PIC type, the interface might or might not turn off the laser. Older PIC transceivers do not support turning off the laser, but newer Gigabit Ethernet PICs with SFP and XFP transceivers do support it and the laser will be turned off when the interface is disabled.



**WARNING:** Do not stare into the laser beam or view it directly with optical instruments even if the interface has been disabled.

## Example: Disabling a Physical Interface

Sample interface configuration:

```
[edit interfaces]
user@host# show
ge-0/3/2 {
  unit 0 {
    description CE2-to-PE1;
    family inet {
      address 20.1.1.6/24;
    }
  }
}
```

Disabling the interface:

```
[edit interfaces ge-0/3/2]
user@host# set disable
```

Verifying the interface configuration:

```
[edit interfaces ge-0/3/2]
user@host# show
disable; # Interface is marked as disabled.
unit 0 {
  description CE2-to-PE1;
  family inet {
    address 20.1.1.6/24;
  }
}
```

## Effect of Disabling Interfaces on T series PICs

The following table describes the effect of using the **set interfaces disable *interface\_name*** statement on T series PICs.

*Table 47: Effect of set interfaces disable <interface\_name> on T series PICs*

PIC Model Number	PIC Description	Type of PIC	Behaviour
PF-12XGE-SFPP	10-Gigabit Ethernet LAN/WAN PIC with SFP+ (T4000 Router)	5	Tx laser disabled
PF-24XGE-SFPP	10-Gigabit Ethernet LAN/WAN PIC with Oversubscription and SFP+ (T4000 Router)	5	Tx laser disabled
PF-10GGE-CFP	100-Gigabit Ethernet PIC with CFP (T4000 Router)	5	Tx laser disabled
PD-4XGE-XFP	10-Gigabit Ethernet, 4-port LAN/WAN XFP	4	Tx laser disabled
PD-5-10XGE-SFPP	10-Gigabit LAN/WAN with SFP+	4	Tx laser disabled

*Table 47: Effect of set interfaces disable <interface\_name> on T series PICs (continued)*

PIC Model Number	PIC Description	Type of PIC	Behaviour
PD-1XLE-CFP	40-Gigabit with CFP	4	Tx laser disabled
PD-1CE-CFP-FPC4	100-Gigabit with CFP	4	Tx laser disabled
PD-TUNNEL	40-Gigabit Tunnel Services	4	NA
PD-4OC192-SON-XFP	OC192/STM64, 4-port XFP	4	Tx laser not disabled
PD-1OC768-SON-SR	OC768c/STM256, 1-port	4	Tx laser not disabled

**Related Documentation** • [disable on page 537](#)

## CHAPTER 3

# Configuring Logical Interface Properties

- [Logical Interfaces Configuration Properties Overview on page 177](#)
- [Logical Interfaces Configuration Statements on page 178](#)
- [Logical Interfaces Statements List on page 181](#)
- [Specifying the Logical Interface Number on page 188](#)
- [Adding a Logical Unit Description to the Configuration on page 188](#)
- [Configuring the Interface Bandwidth on page 189](#)
- [Configuring Interface Encapsulation on Logical Interfaces on page 190](#)
- [Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 192](#)
- [Configuring a Point-to-Point Connection on page 193](#)
- [Configuring a Multipoint Connection on page 193](#)
- [Configuring the PPP Restart Timers on page 193](#)
- [Configuring the PPP Clear Loop Detected Timer on page 194](#)
- [Configuring the LCP Configure-Request Maximum Sent on page 195](#)
- [Configuring the NCP Configure-Request Maximum Sent on page 195](#)
- [Configuring Dynamic Profiles for PPP on page 195](#)
- [Configuring PPP CHAP Authentication on page 196](#)
- [Configuring the PPP Password Authentication Protocol On a Logical Interface on page 196](#)
- [Configuring Accounting for the Logical Interface on page 198](#)
- [Enabling or Disabling SNMP Notifications on Logical Interfaces on page 200](#)
- [Disabling a Logical Interface on page 201](#)
- [Configuring Logical System Interface Properties on page 201](#)

## Logical Interfaces Configuration Properties Overview

---

For a physical interface device to function, you must configure at least one logical interface on that device. For each logical interface, you must specify the protocol family that the interface supports. You can also configure other logical interface properties. These vary by Physical Interface Card (PIC) and encapsulation type, but include the IP address of the interface, and whether the interface supports multicast traffic, data-link connection

identifiers (DLCIs), virtual channel identifiers (VCIs) and virtual path identifiers (VPIs), and traffic shaping.

**Related Documentation** • [Logical Part of an Interface Name on page 39](#)

---

## Logical Interfaces Configuration Statements

---

To configure logical interface properties, include the following statements:

```
unit logical-unit-number {
  accept-source-mac {
    mac-address mac-address {
      policer {
        input cos-policer-name;
        output cos-policer-name;
      }
    }
  }
  accounting-profile name;
  allow-any-vci;
  atm-scheduler-map (map-name | default);
  backup-options {
    interface interface-name;
  }
  bandwidth rate;
  cell-bundle-size cells;
  clear-dont-fragment-bit;
  compression {
    rtp {
      f-max-period number;
      queues [ queue-numbers ];
      port {
        minimum port-number;
        maximum port-number;
      }
    }
  }
  compression-device interface-name;
  copy-tos-to-outer-ip-header;
  demux-destination family;
  demux-source family;
  demux-options {
    underlying-interface interface-name;
  }
  description text;
  interface {
    l2tp-interface-id name;
    (dedicated | shared);
  }
  dialer-options {
    activation-delay seconds;
    callback;
    callback-wait-period time;
```

```

deactivation-delay seconds;
dial-string [ dial-string-numbers ];
idle-timeout seconds;
incoming-map {
    caller (caller-id| accept-all);
    initial-route-check seconds;
    load-interval seconds;
    load-threshold number;
    pool pool-name;
    redial-delay time;
    watch-list {
        [ routes ];
    }
}
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold plp1 cells;
filter filter-name;
fragment-threshold bytes;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    inner-tag-protocol-id;
    inner-vlan-id;
    (pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
link-layer-overhead percent;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
    output-policer policer-name;
    output-three-color policer-name;
}
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}
oam-period (seconds | disable);
output-vlan-map {

```

```
inner-tag-protocol-id;  
inner-vlan-id;  
(pop | pop-pop | pop-swap | push | push-push | swap | swap-push | swap-swap);  
tag-protocol-id tpid;  
vlan-id number;  
}  
passive-monitor-mode;  
peer-unit unit-number;  
plp-to-clp;  
point-to-point;  
ppp-options {  
    chap {  
        access-profile name;  
        default-chap-secret name;  
        local-name name;  
        passive;  
    }  
    compression {  
        acfc;  
        pfc;  
    }  
    dynamic-profile profile-name;  
    lcp-restart-timer milliseconds;  
    loopback-clear-timer seconds;  
    ncp-restart-timer milliseconds;  
    pap {  
        default-pap-password password;  
        local-name name;  
        local-password password;  
        passive;  
    }  
    pppoe-options {  
        access-concentrator name;  
        auto-reconnect seconds;  
        (client | server);  
        service-name name;  
        underlying-interface interface-name;  
    }  
    proxy-arp;  
    service-domain (inside | outside);  
    shaping {  
        (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst length);  
        queue-length number;  
    }  
    short-sequence;  
    transmit-weight number;  
    (traps | no-traps);  
    trunk-bandwidth rate;  
    trunk-id number;  
    tunnel {  
        backup-destination address;  
        destination address;  
        key number;  
        routing-instance {  
            destination routing-instance-name;
```

```

    }
    source source-address;
    ttl number;
  }
  vci vpi-identifier.vci-identifier;
  vci-range start start-vci end end-vci;
  vpi vpi-identifier;
  vlan-id number;
  vlan-id-range number-number;
  vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
  family family {
    [ family-statements ];
  }
}

```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

For information about interface-specific logical properties, see [Table 48 on page 181](#).

## Logical Interfaces Statements List

[Table 48 on page 181](#) lists statements that you can use to configure logical interfaces.

*Table 48: Statements for Logical Interface Properties*

Statement	Interface Types	Usage Guidelines
<code>access-profile</code> <i>name</i>	ATM2 IQ interfaces	"Configuring the PPP Password Authentication Protocol On a Logical Interface" on page 196
<code>accept-source-mac</code>	Gigabit Ethernet intelligent queuing (IQ) interfaces	<i>Configuring MAC Address Filtering</i>
<code>accounting-profile</code> <i>name</i>	All	"Configuring Accounting for the Logical Interface" on page 198
<code>allow-any-vci</code>	Asynchronous Transfer Mode (ATM) interfaces	<i>Configuring ATM Interface Encapsulation</i>
<code>atm-scheduler-map</code> ( <i>map-name</i>   <code>default</code> )	ATM2 IQ interfaces	<i>ATM2 IQ VC Tunnel CoS Components Overview</i>
<code>backup-destination</code> <i>address</i>	Encryption interfaces	<i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i>
<code>bandwidth</code> <i>rate</i>	All interfaces, except multilink and aggregated	"Configuring the Interface Bandwidth" on page 189

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<b>cbr rate</b>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
<b>cell-bundle-size cells</b>	ATM2 IQ interfaces	<i>Configuring the Layer 2 Circuit Cell-Relay Cell Maximum Overview</i>
<b>clear-dont-fragment-bit</b>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>compression</b>	AS PIC or MultiServices PIC link services IQ interfaces ( <b>lsq</b> ) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>copy-tos-to-outer-ip-header</b>	GRE tunnel interfaces	<i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i>
<b>demux-destination family</b>	IP demux interfaces	"Configuring an IP Demultiplexing Interface" on page 316
<b>demux-options family</b>	IP demux interfaces	"Configuring an IP Demultiplexing Interface" on page 316
<b>demux-source family</b>	IP demux interfaces	"Configuring an IP Demultiplexing Interface" on page 316
<b>description text</b>	All	"Adding a Logical Unit Description to the Configuration" on page 188
<b>destination (address   routing-instance-name)</b>	Encryption generic routing encapsulation (GRE) tunnel, and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>disable</b>	All	"Disabling a Logical Interface" on page 201
<b>disable-mlppp-inner-ppp-pfc</b>	MLPPP interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>dlci dlci-identifier</b>	Point-to-point interfaces with Frame Relay encapsulation	<i>Configuring Frame Relay DLCIs</i>
<b>drop-timeout milliseconds</b>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<b>dynamic-profile profile-name</b>	1-Gigabit Ethernet and 10-Gigabit Ethernet interfaces configured with PPP over Ethernet on M120 and M320 routers	<i>Junos Subscriber Access Configuration Guide</i>
<b>encapsulation type</b>	All interfaces, except aggregated SONET/SDH and loopback	<i>Configuring Interface Encapsulation on Logical Interfaces</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>epd-threshold cells</code>	ATM2 IQ interfaces	<i>Configuring the ATM2 IQ EPD Threshold</i>
<code>f-max-period number</code>	AS PIC or MultiServices link services IQ interfaces ( <b>lsq-</b> ) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>family</code>	All	<a href="#">"Configuring the Protocol Family" on page 206</a>
<code>fragment-threshold bytes</code>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>inner-tag-protocol-id</code>	Gigabit Ethernet IQ interfaces	<i>802.1Q VLANs Overview</i>
<code>inner-vlan-id</code>	Gigabit Ethernet IQ interfaces	<i>802.1Q VLANs Overview</i>
<code>inner-vlan-id-range</code>	Gigabit Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet IQ interfaces	<a href="#">"Configuring ATM-to-Ethernet Interworking" on page 282</a>
<code>input</code>	AS PIC or MultiServices link services	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>input-policer policer-name</code>	For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series and T Series routers	<i>Junos OS Services Interfaces Library for Routing Devices and Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>input-three-color policer-name</code>	For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series and T Series routers	<i>Class of Service Feature Guide for Routing Devices and EX9200 Switches and Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>input-vlan-map</code>	Gigabit Ethernet IQ interfaces	<i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i>
<code>interleave-fragments</code>	Link services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>inverse-arp</code>	Interfaces with ATM and Frame Relay encapsulation	<i>Configuring Inverse ATM1 or ATM2 ARP and Configuring Inverse Frame Relay ARP</i>
<code>key number</code>	GRE tunnel interfaces on Adaptive Services PICs	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>layer2-policer</code>	1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces	<i>Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>lcp-restart-timer</code>	Interfaces with PPP encapsulation	<a href="#">“Configuring the PPP Restart Timers” on page 193</a>
<code>l2tp-interface-id name</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>link-layer-overhead percent</code>	AS PIC or MultiServices link services IQ interfaces (lsq)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>local-name name</code>	ATM2 IQ interfaces	<a href="#">“Configuring PPP CHAP Authentication” on page 196</a> and <a href="#">“Configuring the PPP Password Authentication Protocol On a Logical Interface” on page 196</a>
<code>mac-address mac-address</code>	Gigabit Ethernet interfaces and Gigabit Ethernet IQ and IQE interfaces with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring MAC Address Filtering</i>
<code>minimum-links number</code>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>mrru bytes</code>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>multicast-dlci dlci-identifier</code>	Point-to-multipoint Frame Relay interfaces	<i>Configuring a Multicast-Capable Frame Relay Connection</i>
<code>multicast-vci vpi-identifier vci-identifier</code>	Point-to-multipoint ATM1 and ATM2 IQ interfaces	<i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>
<code>multilink-max-classes number</code>	AS PIC or MultiServices link services IQ interfaces (lsq-)	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>multipoint</code>	All	<a href="#">“Configuring a Multipoint Connection” on page 193</a>
<code>ncp-restart-timer</code>	Interfaces with PPP encapsulation	<a href="#">“Configuring the PPP Restart Timers” on page 193</a>
<code>oam-liveness</code>	ATM1 and ATM2 IQ interfaces	<i>Configuring the ATM OAM F5 Loopback Cell Threshold</i>
<code>oam-period (disable   seconds)</code>	ATM1 and ATM2 IQ interfaces	<i>Defining the ATM OAM F5 Loopback Cell Period</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>output</code>	All	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>output-policer</code> <i>policer-name</i>	For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series and T Series routers	<i>Class of Service Feature Guide for Routing Devices and EX9200 Switches and Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>output-three-color</code> <i>policer-name</i>	For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series and T Series routers	<i>Class of Service Feature Guide for Routing Devices and EX9200 Switches and Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i>
<code>output-vlan-map</code>	Gigabit Ethernet IQ interfaces	<i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i>
<code>passive</code> (CHAP)	ATM2 IQ interfaces	<i>"Configuring PPP CHAP Authentication" on page 196</i>
<code>passive</code> (PAP)	ATM2 IQ interfaces	<i>"Configuring the PPP Password Authentication Protocol On a Logical Interface" on page 196</i>
<code>passive-monitor-mode</code>	SONET/SDH interfaces	<i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i>
<code>peer-unit</code> <i>unit-number</i>	Logical tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>pfc</code>	Interfaces with PPP, PPP CCC, or PPP TCC encapsulation	<i>"Configuring the PPP Protocol Field Compression" on page 151</i>
<code>plp1 cells</code>	ATM2 IQ interfaces	<i>Configuring the ATM2 IQ EPD Threshold</i>
<code>plp-to-clp</code>	ATM2 IQ interfaces	<i>Enabling the PLP Setting to Be Copied to the CLP Bit</i>
<code>point-to-point</code>	All	<i>"Configuring a Point-to-Point Connection" on page 193</i>
<code>policer</code>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router)	<i>Configuring MAC Address Filtering</i>
<code>pop</code>	Gigabit Ethernet IQ interfaces	<i>Removing a VLAN Tag</i>
<code>pop-pop</code>	Gigabit Ethernet IQ interfaces	<i>Removing the Outer and Inner VLAN Tags</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>pop-swap</code>	Gigabit Ethernet IQ interfaces	<i>Removing the Outer VLAN Tag and Rewriting the Inner VLAN Tag</i>
<code>port</code>	AS PIC or MultiServices or MultiServices link services IQ interfaces ( <code>lsq</code> ) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>ppp-options</code>	Interfaces with PPP, PPP CCC, or PPP TCC encapsulation	<a href="#">“Configuring PPP CHAP Authentication” on page 196</a> and <a href="#">“Configuring the PPP Password Authentication Protocol On a Logical Interface” on page 196</a>
<code>proxy-arp</code>	Ethernet interfaces	<i>Configuring Restricted and Unrestricted Proxy ARP</i>
<code>push</code>	Gigabit Ethernet IQ interfaces	<i>Stacking a VLAN Tag</i>
<code>push-push</code>	Gigabit Ethernet IQ interfaces	<i>Stacking Two VLAN Tags</i>
<code>queue-length number</code>	ATM1 interfaces	<i>Configuring the ATM1 Queue Length</i>
<code>queues [ queue-numbers ]</code>	AS PIC or MultiServices link services IQ interfaces ( <code>lsq</code> ) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>routing-instance</code>	GRE tunnel and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>rtp</code>	AS PIC or MultiServices link services IQ interfaces ( <code>lsq</code> ) and voice services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>rtvbr peak rate sustained rate burst length</code>	ATM2 interfaces	<i>Configuring ATM CBR</i>
<code>service-domain (inside   outside)</code>	Adaptive services interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>shaping</code>	ATM1 and ATM2 IQ interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
<code>short-sequence</code>	Multilink interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>source source-address</code>	Encryption, GRE tunnel, and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>swap</code>	Gigabit Ethernet IQ interfaces	<i>Configuring Frames with Particular TPIDs to Be Processed as Tagged Frames</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>swap-push</code>	Gigabit Ethernet IQ interfaces	<i>Rewriting a VLAN Tag and Adding a New Tag</i>
<code>swap-swap</code>	Gigabit Ethernet IQ interfaces	<i>Rewriting the Inner and Outer VLAN Tags</i>
<code>tag-protocol-id</code> <i>tpid</i>	Gigabit Ethernet and Gigabit Ethernet IQ and IQE PICs with SFPs (except the 10-port Gigabit Ethernet PIC, Aggregated Ethernet with Gigabit Ethernet IQ interfaces, and the built-in Gigabit Ethernet port on the M7i router)	<i>Rewriting the VLAN Tag on Tagged Frames</i>
<code>transmit-weight</code> <i>number</i>	ATM2 IQ interfaces	<i>Configuring the ATM2 IQ Transmission Weight</i>
<code>(traps   no-traps)</code>	All	<i>"Enabling or Disabling SNMP Notifications on Logical Interfaces" on page 200</i>
<code>trunk-bandwidth</code> <i>rate</i>	ATM2 IQ interfaces	<i>Configuring Layer 2 Circuit Trunk Mode Scheduling Overview</i>
<code>trunk-id</code> <i>number</i>	ATM2 IQ interfaces	<i>Configuring Layer 2 Circuit Transport Mode</i>
<code>ttl</code> <i>number</i>	GRE tunnel and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>tunnel</code>	Encryption, GRE tunnel, and IP tunnel interfaces	<i>Junos OS Services Interfaces Library for Routing Devices</i>
<code>underlying-interface</code>	IP demux interfaces	<i>"Configuring an IP Demultiplexing Interface" on page 316</i>
<code>vbr</code> <i>peak rate</i> <i>sustained rate</i> <i>burst length</i>	ATM interfaces	<i>Defining the ATM Traffic-Shaping Profile Overview</i>
<code>vci</code> <i>vpi-identifier</i> <i>vci-identifier</i>	ATM1 and ATM2 IQ point-to-point interfaces	<i>Configuring a Point-to-Point ATM1 or ATM2 IQ Connection</i>
<code>vci-range</code>	ATM2 IQ interfaces	<i>"Configuring ATM-to-Ethernet Interworking" on page 282</i>
<code>vpi</code> <i>vpi-identifier</i>	ATM1 and ATM2 IQ point-to-point interfaces	<i>Configuring a Point-to-Point ATM1 or ATM2 IQ Connection</i>
<code>vlan-id</code> <i>number</i>	Fast Ethernet, Gigabit Ethernet, and Gigabit Ethernet IQ interfaces and aggregated Ethernet using Gigabit Ethernet IQ interfaces	<i>Binding VLAN IDs to Logical Interfaces and Rewriting the VLAN Tag on Tagged Frames</i>

Table 48: Statements for Logical Interface Properties (continued)

Statement	Interface Types	Usage Guidelines
<code>vlan-tags inner <i>tpidvlan-id</i></code> <code>outer <i>tpidvlan-id</i></code>	Gigabit Ethernet IQ interfaces	<i>Configuring Dual VLAN Tags</i>

## Specifying the Logical Interface Number

Each logical interface must have a logical unit number. The logical unit number corresponds to the logical unit part of the interface name. For more information, see [“Interface Naming Overview” on page 33](#).

Point-to-Point Protocol (PPP), Cisco High-level Data Link Control (HDLC), and Ethernet circuit cross-connect (CCC) encapsulations support only a single logical interface, whose logical unit number must be 0. Frame Relay and ATM encapsulations support multiple logical interfaces, so you can configure one or more logical unit numbers.

You specify the logical unit number by including the **unit** statement:

```
unit logical-unit-number {
  ...
}
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces *interface-name*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name*]**

The logical unit number can be in the range 0 through 65,535 for demux and PPPoE static interfaces only. The logical unit number can be in the range 0 through 16,385 for all other static interface types.

## Adding a Logical Unit Description to the Configuration

You can include a text description of each logical unit in the configuration file. Any descriptive text you include is displayed in the output of the **show interfaces** commands, and is also exposed in the **ifAlias** Management Information Base (MIB) object. It has no impact on the interface's configuration. To add a text description, include the **description** statement:

```
description text;
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]**

The description can be a single line of text. If the text contains spaces, enclose it in quotation marks.



**NOTE:** You can configure the extended DHCP relay to include the interface description in the option 82 Agent Circuit ID suboption. See “*Using DHCP Relay Agent Option 82 Information*” in the *Junos OS Broadband Subscriber Management and Services Library*.

For information about describing physical interfaces, see “[Configuring Interface Description](#)” on page 113.

## Configuring the Interface Bandwidth

By default, the Junos OS uses the physical interface’s speed for the MIB-II object, **ifSpeed**. You can configure the logical unit to populate the **ifSpeed** variable by configuring a bandwidth value for the logical interface. The **bandwidth** statement sets an informational-only parameter; you cannot adjust the actual bandwidth of an interface with this statement.



**NOTE:** We recommend that you be careful when setting this value. Any interface bandwidth value that you configure using the **bandwidth** statement affects how the interface cost is calculated for a dynamic routing protocol, such as OSPF. By default, the interface cost for a dynamic routing protocol is calculated using the following formula:

$$\text{cost} = \text{reference-bandwidth} / \text{bandwidth},$$

where bandwidth is the physical interface speed. However, if you specify a value for bandwidth using the **bandwidth** statement, that value is used to calculate the interface cost, rather than the actual physical interface bandwidth.

To configure the bandwidth value for a logical interface, include the **bandwidth** statement:

**bandwidth** *rate*;

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

**rate** is the peak rate, in bps or cps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation **c**; values expressed in cells per second are converted to bits per second using the formula 1 cps = 384 bps. The value can be any positive integer. The **bandwidth** statement is valid for all logical interfaces, except multilink interfaces.

## Configuring Interface Encapsulation on Logical Interfaces

---

- [Understanding Interface Encapsulation on Logical Interfaces on page 190](#)
- [Configuring the Encapsulation on a Logical Interface on page 191](#)
- [Displaying the Encapsulation on a Logical Interface on page 191](#)

### Understanding Interface Encapsulation on Logical Interfaces

You can configure an encapsulation on a logical interface, which is the encapsulation used within certain packet types.

The following restrictions apply to logical interface encapsulation:

- With the atm-nlpid, atm-cisco-nlpid, and atm-vc-mux encapsulations, you can configure the inet family only.
- With the CCC circuit encapsulations, you cannot configure a family on the logical interface.
- A logical interface cannot have frame-relay-ccc encapsulation unless the physical device also has frame-relay-ccc encapsulation.
- A logical interface cannot have frame-relay-tcc encapsulation unless the physical device also has frame-relay-tcc encapsulation. In addition, you must assign this logical interface a DLCI from 512 through 1022 and configure it as point-to-point.
- A logical interface cannot have frame-relay-ether-type or frame-relay-ether-type-tcc encapsulation unless the physical interface has flexible-frame-relay encapsulation and is on an IQ or IQE PIC.
- For frame-relay-ether-type-tcc encapsulation, you must assign this logical interface a DLCI from 512 through 1022.
- For interfaces that carry IP version 6 (IPv6) traffic, you cannot configure ether-over-atm-llc encapsulation.
- When you use ether-over-atm-llc encapsulation, you cannot configure multipoint interfaces.
- A logical interface cannot have vlan-ccc or vlan-vpls encapsulation unless the physical device also has vlan-ccc or vlan-vpls encapsulation, respectively. In addition, you must assign this logical interface a VLAN ID from 512 through 1023; if the VLAN ID is 511 or lower, it is subject to the normal destination filter lookups in addition to source address filtering. For more information, see *Configuring VLAN and Extended VLAN Encapsulation*.
- You can create an ATM cell-relay circuit by configuring an entire ATM physical device or an individual virtual circuit (VC). When you configure an entire device, only cell-relay encapsulation is allowed on the logical interfaces. For more information, see *Configuring an ATM Cell-Relay Circuit Overview*.

## Configuring the Encapsulation on a Logical Interface

Generally, you configure an interface's encapsulation at the `[edit interfaces interface-name]` hierarchy level. However, for some encapsulation types, such as Frame Relay, ATM, and Ethernet virtual local area network (VLAN) encapsulations, you can also configure the encapsulation type that is used inside the Frame Relay, ATM, or VLAN circuit itself.

To configure encapsulation on a logical interface:

1. In configuration mode, go to the `[edit interfaces interface-name unit logical-unit-number]` or `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]` hierarchy level.

```
[edit]
user@host# set interfaces at-fpc/pic/port unit logical-unit-number
```

2. Configure the encapsulation type as described in [encapsulation \(Logical Interface\)](#).

```
[edit interfaces at-fpc/pic/port unit logical-unit-number]
user@host# set encapsulation encapsulation-type
```

## Displaying the Encapsulation on a Logical Interface

**Purpose** To display the configured encapsulation and its associated set options on a physical interface when the following are set at the `[edit interfaces interface-name]` or `[edit logical-systems logical-system-name interfaces interface-name]` hierarchy level:

- interface-name—at-1/1/0
- Encapsulation—atm-ccc-cell-relay
- Unit—120

**Action** Run the `show` command at the `[edit interfaces interface-name]` hierarchy level.

```
[edit interfaces at-1/1/0]
user@host# show
encapsulation atm-ccc-cell-relay;
unit 120 {
  encapsulation atm-ccc-cell-relay;
}
```

**Meaning** The configured encapsulation and its associated set options are displayed as expected.

**Related Documentation**

- [encapsulation \(Logical Interface\) on page 573](#)
- [Configuring VLAN and Extended VLAN Encapsulation](#)
- [Configuring an ATM1 Cell-Relay Circuit Overview](#)

## Configuring Interface Encapsulation on PTX Series Packet Transport Routers

---

This topic describes how to configure interface encapsulation on PTX Series Packet Transport Routers. Use the **flexible-ethernet-services** configuration statement to configure different encapsulation for different logical interfaces under a physical interface. With flexible Ethernet services encapsulation, you can configure each logical interface encapsulation without range restrictions for VLAN IDs.

Supported encapsulations for physical interfaces include:

- **flexible-ethernet-services**
- **ethernet-ccc**
- **ethernet-tcc**

Supported encapsulations for logical interfaces include:

- **ethernet**
- **vlan-ccc**
- **vlan-tcc**



**NOTE:** PTX Series Packet Transport Routers do not support **extended-vlan-ccc** and **extended-vlan-tcc** encapsulation on logical interfaces. Instead, you can configure a tag protocol ID (TPID) value of 0x9100 to achieve the same results.

To configure flexible Ethernet services encapsulation, include the **encapsulation flexible-ethernet-services** statement at the **[edit interfaces et-fpc/pic/port ]** hierarchy level. For example:

```
interfaces {
  et-fpc/pic/port {
    vlan-tagging;
    encapsulation flexible-ethernet-services;
    unit 0 {
      vlan-id 1000;
      family inet {
        address 11.0.0.20/24;
      }
    }
    unit 1 {
      encapsulation vlan-ccc;
      vlan-id 1010;
    }
    unit 2 {
      encapsulation vlan-tcc;
      vlan-id 1020;
      family tcc {
        proxy {
```

```

        inet-address 11.0.2.160;
    }
    remote {
        inet-address 11.0.2.10;
    }
}
}
}
}
}

```

**Related Documentation** • [Configuring Interface Encapsulation on Physical Interfaces on page 129](#)

## Configuring a Point-to-Point Connection

By default, all interfaces are assumed to be point-to-point connections. You must ensure that the maximum transmission unit (MTU) sizes on both sides of the connection are the same.

For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, you can explicitly configure an interface to be a point-to-point connection by including the **point-to-point** statement:

```
point-to-point;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

## Configuring a Multipoint Connection

By default, all interfaces are assumed to be point-to-point connections. To configure an interface to be a multipoint connection, include the **multipoint** statement:

```
multipoint;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

## Configuring the PPP Restart Timers

You can configure a restart timer for the Link Control Protocol (LCP) and Network Control Protocol (NCP) components of a PPP session. You can configure the LCP restart timer on interfaces with PPP, PPP TCC, PPP over Ethernet, PPP over ATM, and PPP over Frame Relay encapsulations. You can configure the NCP restart timer on interfaces with PPP and PPP TCC encapsulations and on multilink PPP bundle interfaces.

To configure the restart timer for the NCP component of a PPP session, include the **ncp-restart-timer** statement, and specify the number of milliseconds.

To configure the restart timer for the LCP component of a PPP session, include the **lcp-restart-timer** statement, and specify the number of milliseconds:

```
lcp-restart-timer milliseconds;  
ncp-restart-timer milliseconds;
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* ppp-options]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* ppp-options]

To monitor the configuration, issue the **show interfaces *interface-name*** command. Configured options are displayed in the **PPP parameters** field for the physical interface.

```
user@host> run show interfaces t1-0/0/0:1:1.0 detail  
Logical interface t1-0/0/0:1:1.0 (Index 67) (SNMP ifIndex 40)  
(Generation 156)  
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps 0x4000  
Encapsulation: PPP  
PPP parameters:  
  LCP restart timer: 2000 msec  
  NCP restart timer: 2000 msec  
Protocol inet, MTU: 1500, Generation: 163, Route table: 0  
Flags: Protocol-Down  
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary  
  Destination: 1.1.1/24, Local: 1.1.1.2, Broadcast: 1.1.1.255,
```

---

## Configuring the PPP Clear Loop Detected Timer

When a Point-to-Point Protocol (PPP) session detects a loop, the loop detected flag is set. If the flag is not cleared by the protocol after the loopback is cleared, the clear loop detected timer clears the flag after the specified time has elapsed.

To configure the clear loop detected timer for the LCP component of a PPP session, include the **loopback-clear-timer** statement, and specify the number of seconds.

```
loopback-clear-timer seconds;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* ppp-options]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* ppp-options]

To monitor the configuration, issue the **show interfaces *interface-name* extensive** command.

## Configuring the LCP Configure-Request Maximum Sent

Link Control Protocol (LCP) Configure-Request is used to establish a link. You can configure the maximum number of LCP Configure-Requests to send. The router stops sending LCP Configure-Requests after the specified maximum number is sent. To configure the LCP Configure-Request maximum, use the **lcp-max-conf-req** statement at the **[edit interfaces *interface-name* unit *number* ppp-options]** hierarchy level. The *number* range is from 0 to 65,535; where 0 specifies no limit and the LCP Configure-Request is sent indefinitely. The default is 254.

Related Documentation

- [lcp-max-conf-req on page 719](#)

## Configuring the NCP Configure-Request Maximum Sent

Network Control Protocol (NCP) Configure-Request is used to establish a link. You can configure the maximum number of NCP Configure-Requests to send. The router stops sending NCP Configure-Requests after the specified maximum number is sent. To configure the NCP Configure-Request maximum, use the **ncp-max-conf-req** statement at the **[edit interfaces *interface-name* unit *number* ppp-options]** hierarchy level. The *number* range is from 0 to 65,535; where 0 specifies no limit and NCP Configure-Request is sent indefinitely. The default is 254.

Related Documentation

- [ppp-options on page 892](#)

## Configuring Dynamic Profiles for PPP

A dynamic profile acts as a template that enables you to create, update, or remove a configuration that includes attributes for client access (for example, interface or protocol) or service (for example, IGMP). Using these profiles you can consolidate all of the common attributes of a client (and eventually a group of clients) and apply the attributes simultaneously.

After they are created, the profiles reside in a profile library on the router. You can then use the **dynamic-profile** statement to attach profiles to interfaces. To assign a dynamic profile to a PPP interface, you can include the **dynamic-profile** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* ppp-options]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number ppp-options]
  dynamic-profile profile-name;
```

To monitor the configuration, issue the **show interfaces *interface-name*** command.

For information about dynamic profiles, see *Dynamic Profiles Overview* in the *Junos Subscriber Access Configuration Guide*.

For information about creating dynamic profiles, see *Configuring a Basic Dynamic Profile* in the *Junos Subscriber Access Configuration Guide*.

For information about assigning a dynamic profile to a PPP interface, see *Attaching Dynamic Profiles to Static PPP Subscriber Interfaces* in the *Junos Subscriber Access Configuration Guide*.



**NOTE:** Dynamic profiles for PPP subscribers are supported only on PPPoE interfaces for this release.

**Related Documentation**

- [Configuring Dynamic Authentication for PPP Subscribers](#)

---

## Configuring PPP CHAP Authentication

For interfaces with PPP encapsulation, you can configure interfaces to support the PPP Challenge Handshake Authentication Protocol (CHAP), as defined in RFC 1994, *PPP Challenge Handshake Authentication Protocol (CHAP)*. When you enable CHAP on an interface, the interface can authenticate its peer and can be authenticated by its peer.

For information about configuring CHAP, see [“Configuring the PPP Challenge Handshake Authentication Protocol” on page 136](#).

---

## Configuring the PPP Password Authentication Protocol On a Logical Interface

- [Understanding PPP Password Authentication Protocol on page 196](#)
- [Configuring the PPP Password Authentication Protocol On a Logical Interface on page 197](#)

### Understanding PPP Password Authentication Protocol

The Password Authentication Protocol (PAP) provides a simple method for the peer to establish its identity using a two-way handshake. This is done only upon initial link establishment.

After the link is established, an ID and password pair is repeatedly sent by the peer to the authenticator until authentication is acknowledged or the connection is terminated.

For interfaces with PPP encapsulation, you can configure interfaces to support the Password Authentication Protocol (PAP), as defined in RFC 1334, *PAP Authentication Protocols*. If authentication is configured, the PPP link negotiates using CHAP or PAP protocol for authentication during the Link Control Protocol (LCP) negotiation phase. PAP is only performed after the link establishment phase (LCP up) portion of the authentication phase.

During authentication, the PPP link sends a PAP authentication-request packet to the peer with an ID and password. The authentication-request packet is sent every 2 seconds, similar to the CHAP challenge, until a response is received (acknowledgment packet, nonacknowledgment packet). If an acknowledgment packet is received, the PPP link transitions to the next state, the network phase. If a nonacknowledgment packet is received, an LCP terminate request is sent, and the PPP link goes back to the link

establishment phase. If no response is received, and an optional retry counter is set to **true**, a new request acknowledgment packet is resent. If the retry counter expires, the PPP link transitions to the LCP negotiate phase.

You can configure the PPP link with PAP in passive mode. By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

## Configuring the PPP Password Authentication Protocol On a Logical Interface

When you configure an interface to use PAP, you must assign an access profile to the interface. When an interface receives PAP authentication requests, the access profile in the packet is used to look up the password. If no matching access profile is found for the PAP authentication request that was received by the interface, the optionally configured default PAP password is used.

To configure the PPP password authentication protocol, on each logical interface with PPP encapsulation, perform the following steps.

1. The default PAP password is used when no matching PAP access profile exists, or if the PAP access profile name changes during PPP link negotiation. To configure the default PAP password, include the **pap-password** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set default-pap-password password
```

2. To configure the name the interface uses in PAP request and response packets, include the **local-name** statement at the **[edit interfaces *interface-name* unit *logical-unt-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name ppp-options pap]
user@host# set local-name name
```



**NOTE:** By default, when PAP is enabled on an interface, the interface uses the router's system hostname as the name sent in PAP request and response packets.

3. You need to configure the password to be used for authentication. To configure the host password for sending PAP requests, include the **local-password** statement at the **[edit interfaces *interface-name* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set local-password password
```

4. To configure the interface to authenticate with PAP in passive mode, include the **passive** statement at the **[edit interfaces *interface-name* unit *logical-unt-number* ppp-options pap]** hierarchy level:

```
[edit interfaces interface-name unit logical-unt-number ppp-options pap]
user@host# set passive
```

---



**NOTE:** By default, when PAP is enabled on an interface, the interface expects authenticate-request packets from the peer. However, the interface can be configured to send authentication request packets to the peer by configuring PAP to operate in passive mode. In PAP passive mode, the interface sends the authenticate-request packets to the peer only if the interface receives the PAP option from the peer during LCP negotiation—in passive mode, the interface does not authenticate the peer.

---

**See Also** [Configuring the PPP Authentication Protocol on page 142](#)

---

## Configuring Accounting for the Logical Interface

---

- [Accounting Profiles Overview on page 198](#)
- [Configuring Accounting for the Logical Interface on page 199](#)
- [Displaying Accounting Profile for the Logical Interface on page 200](#)

### Accounting Profiles Overview

Juniper Networks routers and switches can collect various kinds of data about traffic passing through the router and switch. You can set up one or more *accounting profiles* that specify some common characteristics of this data, including the following:

- The fields used in the accounting records
- The number of files that the router or switch retains before discarding, and the number of bytes per file
- The polling period that the system uses to record the data

You configure the profiles and define a unique name for each profile using statements at the **[edit accounting-options]** hierarchy level. There are two types of accounting profiles: interface profiles and filter profiles. You configure interface profiles by including the **interface-profile** statement at the **[edit accounting-options]** hierarchy level. You configure filter profiles by including the **filter-profile** statement at the **[edit accounting-options]** hierarchy level. For more information, see the *Network Management and Monitoring Guide*.

You apply filter profiles by including the **accounting-profile** statement at the **[edit firewall filter *filter-name*]** and **[edit firewall family *family* filter *filter-name*]** hierarchy levels. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

## Configuring Accounting for the Logical Interface

### Before you begin

You must configure a profile to collect error and statistic information for input and output packets on a particular logical interface. An accounting profile specifies what statistics should be collected and written to a log file. For more information on how to configure an accounting-data log file, see the *Configuring Accounting-Data Log Files*.

An interface profile specifies the information collected and written to a log file. You can configure a profile to collect error and statistic information for input and output packets on a particular logical interface.

1. To configure which statistics should be collected for an interface, include the **fields** statement at the **[edit accounting-options interface-profile *profile-name*]** hierarchy level.

```
[edit accounting-options interface-profile profile-name]  
user@host# set fields field-name
```

2. Each accounting profile logs its statistics to a file in the **/var/log** directory. To configure which file to use, include the **file** statement at the **[edit accounting-options interface-profile *profile-name*]** hierarchy level.

```
[edit accounting-options interface-profile profile-name]  
user@host# set file filename
```



**NOTE:** You must specify a **file** statement for the interface profile that has already been configured at the **[edit accounting-options]** hierarchy level. For more information, see the [Configuring Accounting-Data Log Files](#)

3. Each interface with an accounting profile enabled has statistics collected once per interval time specified for the accounting profile. Statistics collection time is scheduled evenly over the configured interval. To configure the interval, include the **interval** statement at the **[edit accounting-options interface-profile *profile-name*]** hierarchy level.

```
[edit accounting-options interface-profile profile-name]  
user@host# set interval minutes
```



**NOTE:** The minimum interval allowed is 1 minute. Configuring a low interval in an accounting profile for a large number of interfaces might cause serious performance degradation.

4. To configure the interfaces on which the accounting needs to be performed, apply the interface profile to a logical interface by including the **accounting-profile** statement at the **[edit interfaces interface-name unit *logical-unit-number*]** hierarchy level.

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number accounting-profile profile-name
```

- See Also**
- *Accounting Options Overview*
  - *Configuring Accounting-Data Log Files*

## Displaying Accounting Profile for the Logical Interface

**Purpose** To display the configured accounting profile a particular logical interface at the `[edit accounting-options interface-profile profile-name]` hierarchy level:

- *interface-name*—ge-1/0/1
- Logical unit number—1
- Interface profile —*if\_profile*
- File name—*if\_stats*
- Interval—15 minutes

- Action**
- Run the **show** command at the `[edit interfaces ge-1/0/1 unit 1]` hierarchy level.

```
[edit interfaces ge-1/0/1 unit 1]
accounting-profile if_profile;
```

- Run the **show** command at the `[edit accounting-options]` hierarchy level.

```
interface-profile if_profile {
  interval 15;
  file if_stats {
    fields {
      input-bytes;
      output-bytes;
      input-packets;
      output-packets;
      input-errors;
      output-errors;
    }
  }
}
```

**Meaning** The configured accounting and its associated set options are displayed as expected.

---

## Enabling or Disabling SNMP Notifications on Logical Interfaces

By default, Simple Network Management Protocol (SNMP) notifications are sent when the state of an interface or a connection changes. To explicitly enable these notifications on the logical interface, include the **traps** statement; to disable these notifications on the logical interface, include the **no-traps** statement:

```
(traps | no-traps);
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

## Disabling a Logical Interface

You can unconfigure a logical interface, effectively disabling that interface, without removing the logical interface configuration statements from the configuration. To do this, include the **disable** statement:

```
disable;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

When an interface is disabled, a route (pointing to the reserved target “REJECT”) with the IP address of the interface and a 32-bit subnet mask is installed in the routing table. See *Routing Protocols*.

## Configuring Logical System Interface Properties

With Junos OS, you can partition a single physical router into multiple logical devices that perform independent routing tasks. Because logical systems perform a subset of the tasks once handled by the physical router, logical systems offer an effective way to maximize the use of a single router.

1. Configure the physical interface that needs to be partitioned into multiple logical systems.

```
[edit]
user@host# set interfaces interface-name description description
```

2. Create the logical system interface on the logical unit.

```
[edit]
user@host# set logical-systems name interfaces interface-name unit
logical-unit-number description description
```

3. Configure the required properties for the logical system.

```
[edit logical-systems name]
user@host# set interfaces interface-name unit logical-unit-number family name
address address
```

**Related Documentation** • *Examples: Using Logical Systems*

## CHAPTER 4

# Configuring Protocol Family and Interface Address Properties

- [Protocol Family Configuration and Interface Address Statements on page 203](#)
- [Configuring the Protocol Family on page 206](#)
- [Configuring the Interface Address on page 207](#)
- [Configuring Default, Primary, and Preferred Addresses and Interfaces on page 209](#)
- [Operational Behavior of Interfaces When the Same IPv4 Address Is Assigned to Them on page 211](#)
- [Configuring ICCP for MC-LAG on page 214](#)
- [Configuring IPCP Options for Interfaces with PPP Encapsulation on page 216](#)
- [Configuring an Unnumbered Interface on page 218](#)
- [Setting the Protocol MTU on page 224](#)
- [Disabling the Removal of Address and Control Bytes on page 225](#)
- [Disabling the Transmission of Redirect Messages on an Interface on page 226](#)
- [Applying Policers on page 226](#)
- [Applying a Filter to an Interface on page 235](#)
- [Guidelines for Configuring Unicast RPF on ACX Series Routers on page 240](#)
- [Configuring Unicast RPF on page 241](#)
- [Verifying Unicast RPF Status on page 250](#)
- [Example: Configuring Unicast Reverse-Path-Forwarding Check on page 253](#)
- [Enabling Source Class and Destination Class Usage on page 262](#)
- [Understanding Targeted Broadcast on page 271](#)
- [Configuring Targeted Broadcast on page 272](#)

## Protocol Family Configuration and Interface Address Statements

---

For each logical interface, you must configure one or more protocol families. You can also configure interface address properties. To do this, include the following statements:

```
family family {  
    accounting {
```

```
    destination-class-usage;
    source-class-usage {
        direction;
    }
}
address address {
    destination address;
}
bundle interface-name;
filter {
    dialer filter-name;
    input filter-name;
    output filter-name;
    group filter-group-number;
}
interface-mode (access | trunk);
ipsec-sa sa-name;
keep-address-and-control;
mtu bytes;
multicast-only;
negotiate-address;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
protocols [inet iso mpls];
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check <fail-filter filter-name>;
sampling {
    direction;
}
service {
    input {
        service-set service-set-name <service-filter filter-name>;
        post-service-filter filter-name;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
targeted-broadcast {
    forward-and-send-to-re;
    forward-only;
}
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
vlan-id number;
vlan-id-list [number number-number];
```

```

unnumbered-address interface-name destination address destination-profile
    profile-name;
address address {
    arp ip-address (mac | multicast-mac) mac-address <publish>;
    broadcast address;
    destination address;
    destination-profile name;
    eui-64;
    multipoint-destination address dlcid dlcid-identifier;
    multipoint-destination address {
        epd-threshold cells;
        inverse-arp;
        oam-liveness {
            up-count cells;
            down-count cells;
        }
        oam-period (disable | seconds);
        shaping {
            (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate
                burst length);
            queue-length number;
        }
        vci vpi-identifier.vci-identifier;
    }
    primary;
    preferred;
    (vrrp-group | vrrp-inet6-group) group-number {
        (accept-data | no-accept-data);
        advertise-interval seconds;
        authentication-type authentication;
        authentication-key key;
        fast-interval milliseconds;
        (preempt | no-preempt) {
            hold-time seconds;
        }
        priority-number number;
        track {
            priority-cost seconds;
            priority-hold-time interface-name {
                interface priority;
                bandwidth-threshold bits-per-second {
                    priority;
                }
            }
        }
        route ip-address/mask routing-instance instance-name priority-cost cost;
    }
    virtual-address [ addresses ];
}
}
}

```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]

- `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]`

For information about interface-specific protocol and address properties, see *Configuring T1 and NxDSO Interfaces*.

**Related Documentation**

- *Configuring T1 and NxDSO Interfaces*

## Configuring the Protocol Family

A protocol family is a group of logical properties within an interface configuration. Protocol families include all the protocols that make up a protocol suite. To use a protocol within a particular suite, you must configure the entire protocol family as a logical property for an interface.

Junos OS protocol families include the following common protocol suites:

- Inet—Supports IP protocol traffic, including OSPF, BGP, and Internet Control Message Protocol (ICMP).
- Inet6—Supports IPv6 protocol traffic, including RIP for IPv6 (RIPng), IS-IS, and BGP.
- ISO—Supports IS-IS traffic.
- MPLS—Supports MPLS.

In addition to the common protocol suites, JUNOS protocol families sometimes use the following protocol suites. For more information see, [family](#).

To configure the logical interface's protocol family, include the **family** statement, specifying the selected family. To configure the protocol family, following are the minimum configuration tasks under the `[edit interfaces interface-name unit logical-unit-number family family]` hierarchy.

*Table 49: Protocol Family Configuration Tasks*

Task	Find Details Here
Configure MTU	<a href="#">"Configuring the Media MTU" on page 115</a>
Configure the unit and family so that the interface can transmit and receive multicast traffic only	<a href="#">Restricting Tunnels to Multicast Traffic</a>
Disable the sending of redirect messages by the router	<a href="#">Configuring Junos OS to Disable Protocol Redirect Messages on the Router or Switch</a>
Assign an address to an interface	<a href="#">"Configuring the Interface Address" on page 207</a>

**Related Documentation**

- [family on page 607](#)

## Configuring the Interface Address

---

You assign an address to an interface by specifying the address when configuring the protocol family. For the **inet** or **inet6** family, configure the interface IP address. For the **iso** family, configure one or more addresses for the loopback interface. For the **ccc**, **ethernet-switching**, **tcc**, **mpls**, **tnp**, and **vppls** families, you never configure an address.



**NOTE:** The point-to-point (PPP) address is taken from the loopback interface address that has the primary attribute. When the loopback interface is configured as an unnumbered interface, it takes the primary address from the donor interface.

To assign an address to an interface, perform the following steps:

1. Configure the interface address at the **[edit interfaces *interface-name* unit *logical-unit-number* family *family*]** hierarchy level.
  - To configure an IPv4 address on routers and switches running Junos OS, use the **interface *interface-name* unit *number* family inet address *a.b.c.d/nn*** statement at the **[edit interfaces]** hierarchy level.

```
[edit interfaces ]
```

```
user@host# set interface-name unit logical-unit-number family inet address a.b.c.d/nn
```

---

**NOTE:**

- Juniper Networks routers and switches support /31 destination prefixes when used in point-to-point Ethernet configurations; however, they are not supported by many other devices, such as hosts, hubs, routers, or switches. You must determine if the peer system also supports /31 destination prefixes before configuration.
  - You can configure the same IPv4 address on multiple physical interfaces. When you assign the same IPv4 address to multiple physical interfaces, the operational behavior of those interfaces differs, depending on whether they are implicitly or explicitly point-to-point .
  - By default, all interfaces are assumed to be point-to-point (PPP) interfaces. For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, you can explicitly configure an interface to be a point-to-point connection.
  - If you configure the same IP address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration. The remaining IP address configurations are ignored, leaving some interfaces without an assigned address. Interfaces without an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.
- 

- To configure an IPv6 address on routers and switches running Junos OS, use the **interface *interface-name* unit *number* family inet6 address *aaaa:bbbb:::zzzz/nn*** statement at the **[edit interfaces]** hierarchy level.

```
[edit interfaces ]
```

```
user@host# set interface-name unit logical-unit-number family inet6 address  
aaaa:bbbb:::zzzz/nn
```

---

**NOTE:**

- You represent IP version 6 (IPv6) addresses in hexadecimal notation using a colon-separated list of 16-bit values. The double colon (::) represents all bits set to 0.
  - You must manually configure the router or switch advertisement and advertise the default prefix for autoconfiguration to work on a specific interface.
-

2. [Optional] Set the broadcast address on the network or subnet .

```
[edit interfaces interface-name unit logical-unit-number family family address address],
user@host# set broadcast address
```



**NOTE:** The broadcast address must have a host portion of either all ones or all zeros. You cannot specify the addresses 0.0.0.0 or 255.255.255.255

3. [Optional] specify the remote address of the connection for the encrypted, PPP-encapsulated, and tunnel interfaces.

```
[edit logical-systems logical-system-name interfaces interface-name unit
  logical-unit-number family family address address]
user@host# set destination address
```

4. [Optional] For interfaces that carry IP version 6 (IPv6) traffic, configure the host to assign itself a unique 64-Bit IP Version 6 interface identifier (EUI-64).

```
[edit logical-systems logical-system-name interfaces interface-name unit
  logical-unit-number family family address address]
user@host# set eui-64
```

#### Related Documentation

- [Configuring Default, Primary, and Preferred Addresses and Interfaces on page 209](#)

## Configuring Default, Primary, and Preferred Addresses and Interfaces

- [Default, Primary, and Preferred Addresses and Interfaces on page 209](#)
- [Configuring the Primary Interface for the Router on page 210](#)
- [Configuring the Primary Address for an Interface on page 210](#)
- [Configuring the Preferred Address for an Interface on page 211](#)

### Default, Primary, and Preferred Addresses and Interfaces

The router has a default address and a primary interface, and interfaces have primary and preferred addresses.

The *default address* of the router is used as the source address on unnumbered interfaces. The routing protocol process tries to pick the default address as the router ID, which is used by protocols, including OSPF and internal BGP (IBGP).

The *primary interface* for the router is the interface that packets go out when no interface name is specified and when the destination address does not imply a particular outgoing interface.

An interface's *primary address* is used by default as the local address for broadcast and multicast packets sourced locally and sent out the interface. An interface's *preferred address* is the default local address used for packets sourced by the local router to destinations on the subnet.

The default address of the router is chosen using the following sequence:

1. The primary address on the loopback interface **lo0** that is not **127.0.0.1** is used.
2. The primary address on the primary interface is used.

## Configuring the Primary Interface for the Router

The *primary interface* for the router has the following characteristics:

- It is the interface that packets go out when you type a command such as ping 255.255.255.255—that is, a command that does not include an interface name (there is no interface **type-0/0/0.0** qualifier) and where the destination address does not imply any particular outgoing interface.
- It is the interface on which multicast applications running locally on the router, such as Session Announcement Protocol (SAP), do group joins by default.
- It is the interface from which the default local address is derived for packets sourced out an unnumbered interface if there are no non-127 addresses configured on the loopback interface, **lo0**.

By default, the multicast-capable interface with the lowest-index address is chosen as the primary interface. If there is no such interface, the point-to-point interface with the lowest index address is chosen. Otherwise, any interface with an address could be picked. In practice, this means that, on the router, the **fxp0** or **em0** interface is picked by default.

To configure a different interface to be the primary interface, include the **primary** statement:

```
primary;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

## Configuring the Primary Address for an Interface

The *primary address* on an interface is the address that is used by default as the local address for broadcast and multicast packets sourced locally and sent out the interface. For example, the local address in the packets sent by a **ping interface so-0/0/0.0 255.255.255.255** command is the primary address on interface **so-0/0/0.0**. The primary address flag also can be useful for selecting the local address used for packets sent out unnumbered interfaces when multiple non-127 addresses are configured on the loopback interface, **lo0**. By default, the primary address on an interface is selected as the numerically lowest local address configured on the interface.

To set a different primary address, include the **primary** statement:

```
primary;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family* address *address*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family* address *address*]

## Configuring the Preferred Address for an Interface

The *preferred address* on an interface is the default local address used for packets sourced by the local router to destinations on the subnet. By default, the numerically lowest local address is chosen. For example, if the addresses 172.16.1.1/12, 172.16.1.2/12, and 172.16.1.3/12 are configured on the same interface, the preferred address on the subnet (by default, 172.16.1.1) would be used as a local address when you issue a **ping 172.16.1.5** command.

To set a different preferred address for the subnet, include the **preferred** statement:

**preferred;**

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family* address *address*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family* address *address*]

**See Also** • [Configuring the Interface Address on page 207](#)

- *Junos OS Administration Library*

## Operational Behavior of Interfaces When the Same IPv4 Address Is Assigned to Them

You can configure the same IPv4 address on multiple physical interfaces. When you assign the same IPv4 address to multiple physical interfaces, the operational behavior of those interfaces differs, depending on whether they are implicitly or explicitly point-to-point.



**NOTE:** By default, all interfaces are assumed to be point-to-point (PPP) interfaces. For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, you can explicitly configure an interface to be a point-to-point connection.



**NOTE:** If you configure the same IP address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration. The remaining IP address configurations are ignored, leaving some interfaces without an assigned address. Interfaces without an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

In the following example, the IP address configuration for interface xe-0/0/1.0 is ignored:

```
interfaces {
  xe-0/0/0 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
  xe-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
}
```

The following examples show the sample configuration of assigning the same IPv4 address to implicitly and explicitly point-to-point interfaces, and their corresponding **show interfaces terse** command outputs to see their operational status.

#### Configuring same IPv4 address on implicitly PPP interfaces:

```
[edit]
user@host# show
ge-0/1/0 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
ge-3/0/1 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
```

The sample output shown below for the above configuration reveals that only **ge-0/1/0.0** was assigned the same IPv4 address **200.1.1.1/24** and its **link** state was **up**, while **ge-3/0/1.0** was not assigned the IPv4 address, though its **link** state was up,

which means that it will be operational only when it gets a unique IPv4 address other than **200.1.1.1/24**.

```
user@host> show interfaces terse ge*
Interface           Admin Link Proto  Local          Remote
      ge-0/1/0             up   up
      ge-0/1/0.0           up   up   inet    200.1.1.1/24
                        multiservice
      ge-0/1/1             up   down
      ge-3/0/0             up   down
      ge-3/0/1             up   up
      ge-3/0/1.0           up   up   inet
                        multiservice
```

Configuring same IPv4 address on explicitly PPP interfaces:

```
[edit]
user@host# show
so-0/0/0 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
so-0/0/3 {
  unit 0 {
    family inet {
      address 200.1.1.1/24;
    }
  }
}
```

The sample output shown below for the above configuration reveals that both **so-0/0/0.0** and **so-0/0/3.0** were assigned the same IPv4 address **200.1.1.1/24** and that their **link** states were down, which means that to make them operational atleast one of them will have be configured with a unique IPv4 address other than **200.1.1.1/24**.

```
user@host> show interfaces terse so*
Interface           Admin Link Proto  Local          Remote
so-0/0/0             up   up
so-0/0/0.0           up   down inet    200.1.1.1/24
so-0/0/1             up   up
so-0/0/2             up   down
so-0/0/3             up   up
so-0/0/3.0           up   down inet    200.1.1.1/24
so-1/1/0             up   down
so-1/1/1             up   down
so-1/1/2             up   up
so-1/1/3             up   up
so-2/0/0             up   up
so-2/0/1             up   up
so-2/0/2             up   up
so-2/0/3             up   down
```

- Related Documentation**
- [Configuring IPCP Options for Interfaces with PPP Encapsulation on page 216](#)
  - [Configuring Default, Primary, and Preferred Addresses and Interfaces on page 209](#)

---

## Configuring ICCP for MC-LAG

For multichassis link aggregation (MC-LAG), you must configure Inter-Control Center Communications Protocol (ICCP) to exchange information between two MC-LAG peers.

To enable ICCP, include the **iccp** statement at the **[edit protocols]** hierarchy level:

```
[edit protocols]
iccp {
  authentication-key string;
  local-ip-addr ipv4-address;
  peer ip-address {
    authentication-key string;
    liveness-detection {
      detection-time {
        threshold milliseconds;
      }
      minimum-interval milliseconds;
      minimum-receive-interval milliseconds;
      multiplier number;
      no-adaptation;
      transmit-interval {
        minimum-interval milliseconds;
        threshold milliseconds;
      }
      version (1 | automatic);
    }
    local-ip-addr ipv4-address;
    redundancy-group-id-list [ redundancy-groups ];
    session-establishment-hold-time value;
  }
  session-establishment-hold-time value;
  traceoptions;
}
```

The **local-ip-address** statement sets the source address. This could be a specified address or interface address. The **session-establishment-hold-time** statement determines whether a chassis takes over as the master at the ICCP session.

The **authentication-key** statement is provided by TCP Message Digest 5 (md5) option for an ICCP TCP session. The **redundancy-group-id-list** statement specifies the redundancy groups between ICCP peers and the **liveness-detection** hierarchy configures Bidirectional Forwarding Detection (BFD) protocol options.



**NOTE:** ICCP is based on TCP and it uses IP routes to reach the MC-LAG peer. To ensure that the ICCP session is as resilient as possible, we recommend that you configure alternative routes between the ICCP end-point IP addresses. Alternatively, configure a LAG interface that has two or more interfaces between the MC-LAG pairs to prevent session failure when there are no alternative routes.

For Inter-Control Center Communications Protocol (ICCP) in a multichassis link aggregation group (MC-LAG) configured in an active-active bridge domain, you must ensure that you configure the same peer IP address hosting the MC-LAG by including the **peer ip-address** statement at the **[edit protocols iccp]** hierarchy level and the **multi-chassis-protection peer ip-address** statement at the **[edit interfaces interface-name]** hierarchy level. Multichassis protection reduces the configuration at the logical interface level for MX Series routers with multichassis aggregated Ethernet (MC-AE) interfaces. If the ICCP is UP and the interchassis data link (ICL) comes UP, the router configured as standby will bring up the MC-AE interfaces shared with the peer active-active node specified by the **peer** statement.

For example, the following statements illustrate how the same peer IP address can be configured for both the ICCP peer and multichassis protection link:

```
set interfaces ae1 unit 0 multi-chassis-protection 10.255.34.112 interface ae0
set protocols iccp peer 10.255.34.112 redundancy-group-id-list 1
```

Although you can commit an MC-LAG configuration with various parameters defined for it, you can configure multichassis protection between two peers without configuring the ICCP peer address. You can also configure multiple ICCP peers and commit such a configuration.

**Related  
Documentation**

## Configuring IPCP Options for Interfaces with PPP Encapsulation

For interfaces with PPP encapsulation, you can configure IPCP to negotiate IP address assignments and to pass network-related information such as Windows Name Service (WINS) and Domain Name System (DNS) servers, as defined in RFC 1877, *PPP Internet Protocol Control Protocol Extensions for Name Server Addresses*.

When you enable a PPP interface, you can configure an IP address, enable the interface to negotiate an IP address assignment from the remote end, or allow the interface to be unnumbered. You can also assign a destination profile to the remote end. The destination profile includes PPP properties, such as primary and secondary DNS and NetBIOS Name Servers (NBNSs). These options are described in the following sections:



**NOTE:** The Junos OS does not request name servers from the remote end; the software does, however, send name servers to the remote end if requested.

### Before you begin

You must configure the PPP encapsulation on the interface before configuring the IPCP option. On the logical interface, the following PPP encapsulation types are supported:

- `atm-mlppp-llc`
- `atm-ppp-llc`
- `atm-ppp-vc-mux`
- `multilink-ppp`

For more information about PPP encapsulation, see [“Configuring Interface Encapsulation on Logical Interfaces” on page 190](#) and *Configuring ATM Interface Encapsulation*

- To configure an IP address for the interface, include the **address** statement in the configuration. For more information, see [“Configuring the Interface Address” on page 207](#).

If you include the **address** statement in the configuration, you cannot include the **negotiate-address** or **unnumbered-address** statement in the configuration.

When you include the **address** statement in the interface configuration, you can assign PPP properties to the remote end.



**NOTE:** The option to negotiate an IP address is not allowed in MLFR and MFR encapsulations.

- To enable the interface to obtain an IP address from the remote end, include the **negotiate-address** statement at the `[edit interfaces interface-name unit logical-unit-number family inet]` hierarchy level.

`[edit interfaces interface-name unit logical-unit-number family inet]`

```
user@host# set negotiate-address
```



**NOTE:** If you include the `negotiate-address` statement in the configuration, you cannot include the `address` or `unnumbered-address` statement in the configuration.

- To configure an interface to be unnumbered, include the `unnumbered-address` and `destination` statements in the configuration.

```
[edit interfaces interface-name unit logical-unit-number family inet]
user@host# set unnumbered-address interface-name
user@host# set destination address
```



**NOTE:**

- The `unnumbered-address` statement enables the local address to be derived from the specified interface. The interface name must include a logical unit number and must have a configured address (see “[Configuring the Interface Address](#)” on page 207). Specify the IP address of the remote interface with the `destination` statement.
- If you include the `unnumbered-address` statement in the configuration, you cannot include the `address` or `negotiate-address` statement in the interface configuration.

- To assign PPP properties to the remote end include the `destination-profile` statement:

```
[edit interfaces interface-name unit logical-unit-number family inet address address]
user@host# set destination-profile name

[edit interfaces interface-name unit logical-unit-number family inet unnumbered-address
 interface-name]
user@host# set destination-profile name
```



**NOTE:**

- You can assign PPP properties to the remote end, after you include the `address` or `unnumbered-address` statement in the interface configuration.
- You define the profile at the `[edit access group-profile name ppp]` hierarchy level. For more information, see *Example: Group Profile Configuration*

#### Related Documentation

- *Example: Group Profile Configuration*
- [Configuring Interface Encapsulation on Logical Interfaces on page 190](#)

## Configuring an Unnumbered Interface

---

This topic includes the following information:

- [Overview of Unnumbered Interfaces on page 218](#)
- [Configuring an Unnumbered Point-to-Point Interface on page 218](#)
- [Configuring an Unnumbered Ethernet or Demux Interface on page 219](#)
- [Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces on page 220](#)
- [Restrictions for Configuring Unnumbered Ethernet Interfaces on page 221](#)
- [Displaying the Unnumbered Ethernet Interface Configuration on page 222](#)
- [Displaying the Configured Preferred Source Address for an Unnumbered Ethernet Interface on page 223](#)
- [Displaying the Configuration for Unnumbered Ethernet Interface as the Next Hop for a Static Route on page 224](#)

### Overview of Unnumbered Interfaces

When you need to conserve IP addresses, you can configure unnumbered interfaces. Setting up an unnumbered interface enables IP processing on the interface without assigning an explicit IP address to the interface. For IPv6, in which conserving addresses is not a major concern, you can configure unnumbered interfaces to share the same subnet across multiple interfaces. IPv6 unnumbered interfaces are only supported on Ethernet interfaces. The statements you use to configure an unnumbered interface depend on the type of interface you are configuring: a point-to-point interface or an Ethernet interface:

### Configuring an Unnumbered Point-to-Point Interface

1. In configuration mode, go to the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.

**[edit ]**

user@host# edit interfaces *interface-name* unit *logical-unit-number*

2. To configure an unnumbered point-to-point interface, configure the protocol family, but do not include the **address** statement.

**[edit interfaces *interface-name* unit *logical-unit-number*]**

user@host# set **family**



## NOTE:

- For interfaces with PPP encapsulation, you can configure an unnumbered interface by including the `unnumbered-interface` statement in the configuration. For more information, see [“Configuring IPCP Options for Interfaces with PPP Encapsulation” on page 216](#).
- When configuring unnumbered interfaces, you must ensure that a source address is configured on some interface in the router. This address is the default address. We recommend that you do this by assigning an address to the loopback interface (lo0), as described in [“Configuring the Loopback Interface” on page 328](#). If you configure an address (other than a martian) on the lo0 interface, that address is always the default address, which is preferable because the loopback interface is independent of any physical interfaces and therefore is always accessible.

## Configuring an Unnumbered Ethernet or Demux Interface

1. In configuration mode, go to the `[edit interfaces interface-name unit logical-unit-number family family-name]` hierarchy level.

```
[edit ]
```

```
user@host# edit interfaces interface-name unit logical-unit-number family family-name
```

2. To configure an unnumbered Ethernet or demultiplexing interface, include the `unnumbered-address` statement in the configuration.

```
[edit interfaces interface-name unit logical-unit-number family family-name]
```

```
user@host# set unnumbered-address interface-name
```

3. (Optional) To specify the unnumbered Ethernet interface as the next-hop interface for a configured static route, include the `qualified-next-hop` statement at the `[edit routing-options static route destination-prefix]` hierarchy level. This feature enables you to specify independent preferences and metrics for static routes on a next-hop basis.

```
[edit routing-options static route destination-prefix]
```

```
user@host# set qualified-next-hop (address | interface-name)
```



---

**NOTE:**

- The `unnumbered-address` statement currently supports configuration of unnumbered demux interfaces only for the IPv4 address family. You can configure unnumbered Ethernet interfaces for both IPv4 and IPv6 address families.
  - The interface that you configure to be unnumbered *borrow*s an assigned IP address from another interface, and is referred to as the *borrower interface*. The interface from which the IP address is borrowed is referred to as the *donor interface*. In the `unnumbered-address` statement, *interface-name* specifies the donor interface. For an unnumbered Ethernet interface, the donor interface can be an Ethernet, ATM, SONET, or loopback interface that has a logical unit number and configured IP address and is not itself an unnumbered interface. For an unnumbered IP demultiplexing interface, the donor interface can be an Ethernet or loopback interface that has a logical unit number and configured IP address and is not itself an unnumbered interface. In addition, for either Ethernet or demux, the donor interface and the borrower interface must be members of the same routing instance and the same logical system.
  - When you configure an unnumbered Ethernet or demux interface, the IP address of the donor interface becomes the source address in packets generated by the unnumbered interface.
  - You can configure a host route that points to an unnumbered Ethernet or demux interface. For information about host routes, see the *MPLS Applications Feature Guide*.
- 

## Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces

When a loopback interface with multiple secondary IP addresses is configured as the donor interface for an unnumbered Ethernet or demux interface, you can optionally specify any one of the loopback interface's secondary addresses as the preferred source address for the unnumbered Ethernet or demux interface. This feature enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet or demux interfaces in your network.

1. In configuration mode, go to the `[edit interfaces interface-name unit logical-unit-number family family-name]` hierarchy level.

`[edit ]`

`user@host# edit interfaces interface-name unit logical-unit-number family family-name`

2. To configure a secondary address on a loopback donor interface as the preferred source address for an unnumbered Ethernet or demux interface, include the `preferred-source-address` option in the `unnumbered-address` statement:

`[edit interfaces interface-name unit logical-unit-number family family-name]`

`user@host# set unnumbered-address interface-name <preferred-source-address  
address`

**NOTE:**

The following considerations apply when you configure a preferred source address on an unnumbered Ethernet or demux interface:

- The **unnumbered-address** statement currently supports the configuration of a preferred source address only for the IPv4 address family for demux interfaces, and for IPv4 and IPv6 address families for Ethernet interfaces.
- If you do not specify the preferred source address, the router uses the default primary IP address of the donor interface.
- You cannot delete an address on a donor loopback interface while it is being used as the preferred source address for an unnumbered Ethernet or demux interface.

## Restrictions for Configuring Unnumbered Ethernet Interfaces

The following restrictions apply when you configure unnumbered Ethernet interfaces:

- The **unnumbered-address** statement currently supports the configuration of unnumbered Ethernet interfaces for IPv4 and IPv6 address families.
- You cannot assign an IP address to an Ethernet interface that is already configured as an unnumbered interface.
- The donor interface for an unnumbered Ethernet interface must have one or more configured IP addresses.
- The donor interface for an unnumbered Ethernet interfaced cannot be configured as unnumbered.
- An unnumbered Ethernet interface does not support configuration of the following **address** statement options: **arp**, **broadcast**, **primary**, **preferred**, and **vrrp-group**. For information about these options, see [“Configuring the Interface Address” on page 207](#).
- Running IGMP and PIM are supported only on unnumbered Ethernet interfaces that directly face the host and have no downstream PIM neighbors. IGMP and PIM are not supported on unnumbered Ethernet interfaces that act as upstream interfaces in a PIM topology.
- Running OSPF and IS-IS on unnumbered Ethernet interfaces is not supported. However, you can run OSPF over unnumbered Ethernet interfaces configured as a Point-to-Point connection.



**NOTE:** If you configure the same address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration, the remaining address configurations are ignored and can leave interfaces without an address. Interfaces that do not have an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

For example, in the following configuration the address configuration of interface xe-0/0/1.0 is ignored:

```
interfaces {
  xe-0/0/0 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
  xe-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.1.1/24;
      }
    }
  }
}
```

For more information on configuring the same address on multiple interfaces, see [“Configuring the Interface Address” on page 207](#).

## Displaying the Unnumbered Ethernet Interface Configuration

**Purpose** To display the configured unnumbered interface at the `[edit interfaces interface-name unit logical-unit-number]` hierarchy level:

- Unnumbered interface —ge-1/0/0
- Donor interface —ge-0/0/0
- Donor interface address —4.4.4.1/24

The unnumbered interface “borrows” an IP address from the donor interface.

**Action** • Run the `show` command at the `[edit]` hierarchy level.

```
interfaces {
  ge-0/0/0 {
    unit 0 {
      family inet {
        address 4.4.4.1/24;
      }
    }
  }
  ge-1/0/0 {
    unit 0 {
```

```

        family inet {
            unnumbered-address ge-0/0/0.0;
        }
    }
}

```

**Meaning** The sample configuration that is described works correctly on M and T Series routers. For unnumbered interfaces on MX Series routers, you must additionally configure static routes on an unnumbered Ethernet interface by including the **qualified-next-hop** statement at the **[edit routing-options static route destination-prefix]** hierarchy level to specify the unnumbered Ethernet interface as the next-hop interface for a configured static route.

## Displaying the Configured Preferred Source Address for an Unnumbered Ethernet Interface

**Purpose** To display the configuration of preferred source address for an unnumbered interface at the **[edit interfaces *interface-name* unit *logical-unit-number* family inet]** hierarchy level:

- Unnumbered interface —ge-4/0/0
- Donor interface —lo0
- Donor interface primary address—2.2.2.1/32
- Donor interface secondary address—3.3.3.1/32

**Action** • Run the **show** command at the **[edit]** hierarchy level.

```

interfaces {
  lo0 {
    unit 0 {
      family inet {
        address 2.2.2.1/32;
        address 3.3.3.1/32;
      }
    }
  }
}
interfaces {
  ge-4/0/0 {
    unit 0 {
      family inet {
        unnumbered-address lo0.0 preferred-source-address 3.3.3.1;
      }
    }
  }
}

```

**Meaning** The loopback interface **lo0** is the donor interface from which unnumbered Ethernet interface **ge-4/0/0** “borrows” an IP address.

The example shows one of the loopback interface's secondary addresses, 3.3.3.1, as the preferred source address for the unnumbered Ethernet interface.

## Displaying the Configuration for Unnumbered Ethernet Interface as the Next Hop for a Static Route

**Purpose** To display the unnumbered interface configured as the next hop for the static route at the `[edit interfaces interface-name unit logical-unit-number family inet]` hierarchy level:

- Unnumbered interface —ge-0/0/0
- Donor interface —lo0
- Donor interface primary address—5.5.5.1/32
- Donor interface secondary address—6.6.6.1/32
- Static route—7.7.7.1/32

**Action** • Run the `show` command at the `[edit]` hierarchy level.

```
interfaces {
  lo0 {
    unit 0 {
      family inet {
        address 5.5.5.1/32;
        address 6.6.6.1/32;
      }
    }
  }
}
```

**Meaning** In this example, `ge-0/0/0` is the unnumbered interface and a loopback interface, `lo0`, is the donor interface from which `ge-0/0/0` “borrows” an IP address. The example also configures a static route to `7.7.7.1/32` with a next hop through unnumbered interface `ge-0/0/0.0`.

---

## Setting the Protocol MTU

When you initially configure an interface, the protocol maximum transmission unit (MTU) is calculated automatically. If you subsequently change the media MTU, the protocol MTU on existing address families automatically changes.

For a list of default protocol MTU values, see [“Media MTU Sizes by Interface Type” on page 101](#).

To modify the MTU for a particular protocol family, include the `mtu` statement:

```
mtu bytes;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

If you increase the size of the protocol MTU, you must ensure that the size of the media MTU is equal to or greater than the sum of the protocol MTU and the encapsulation overhead. For a list of encapsulation overhead values, see “[Encapsulation Overhead by Interface Encapsulation Type](#)” on page 112. If you reduce the media MTU size, but there are already one or more address families configured and active on the interface, you must also reduce the protocol MTU size. (You configure the media MTU by including the **mtu** statement at the [edit interfaces *interface-name*] hierarchy level.)



**NOTE:** Changing the media MTU or protocol MTU causes an interface to be deleted and added again.

The maximum number of data-link connection identifiers (DLCIs) is determined by the MTU on the interface. If you have keepalives enabled, the maximum number of DLCIs is 1000, with the MTU set to 5012.

The actual frames transmitted also contain cyclic redundancy check (CRC) bits, which are not part of the MTU. For example, the default protocol MTU for a Gigabit Ethernet interface is 1500 bytes, but the largest possible frame size is actually 1504 bytes; you need to consider the extra bits in calculations of MTUs for interoperability.

- Related Documentation**
- [Media MTU Overview on page 100](#)
  - [Configuring the Media MTU on page 115](#)

## Disabling the Removal of Address and Control Bytes

For Point-to-Point Protocol (PPP) CCC-encapsulated interfaces, the address and control bytes are removed by default before the packet is encapsulated into a tunnel.

You can disable the removal of address and control bytes. To do this, include the **keep-address-and-control** statement:

```
keep-address-and-control;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *ccc*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *ccc*]

- Related Documentation**
- [keep-address-and-control on page 709](#)

## Disabling the Transmission of Redirect Messages on an Interface

---

By default, the interface sends protocol redirect messages. To disable the sending of these messages on an interface, include the **no-redirects** statement:

```
no-redirects;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

To disable the sending of protocol redirect messages for the entire router or switch, include the **no-redirects** statement at the [edit system] hierarchy level.

### Related Documentation

- [no-redirects on page 826](#)

## Applying Policers

---

- [Overview of Applying Policers on page 226](#)
- [Applying Aggregate Policers on page 227](#)
- [Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs on page 229](#)
- [Configuring Hierarchical Policers on page 231](#)
- [Configuring a Single-Rate Two-Color Policer on page 232](#)
- [Configuring a Single-Rate Color-Blind Policer on page 233](#)
- [Configuring a Two-Rate Tricolor Marker Policer on page 233](#)

### Overview of Applying Policers

Policies allow you to perform simple traffic policing on specific interfaces or Layer 2 virtual private networks (VPNs) without configuring a firewall filter. To apply policies, include the **policer** statement:

```
policer {  
  arp policer-template-name;  
  input policer-template-name;  
  output policer-template-name;  
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

In the **family** statement, the protocol family can be **ccc**, **inet**, **inet6**, **mpls**, **tcc**, or **vpls**.

In the **arp** statement, list the name of one policer template to be evaluated when Address Resolution Protocol (ARP) packets are received on the interface. By default, an ARP policer is installed that is shared among all the Ethernet interfaces on which you have configured the **family inet** statement. If you want more stringent or lenient policing of ARP packets, you can configure an interface-specific policer and apply it to the interface. You configure an ARP policer just as you would configure any other policer, at the **[edit firewall policer]** hierarchy level. If you apply this policer to an interface, the default ARP packet policer is overridden. If you delete this policer, the default policer takes effect again.

In the **input** statement, list the name of one policer template to be evaluated when packets are received on the interface.

In the **output** statement, list the name of one policer template to be evaluated when packets are transmitted on the interface.



**NOTE:** To use policing on a CCC or TCC interface, you must configure the CCC or TCC protocol family.

You can configure a different policer on each protocol family on an interface, with one input policer and one output policer for each family. When you apply policers, you can configure the family **ccc**, **inet**, **inet6**, **mpls**, **tcc**, or **vpls** only, and one ARP policer for the family **inet** protocol only. Each time a policer is referenced, a separate copy of the policer is installed on the packet forwarding components for that interface.

If you apply both policers and firewall filters to an interface, input policers are evaluated before input firewall filters, and output policers are evaluated after output firewall filters.

If you apply the policer to the interface **lo0**, it is applied to packets received or transmitted by the Routing Engine.

On T Series, M120, and M320 platforms, if the interfaces are on the same FPC, the filters or policers do not act on the sum of traffic entering and exiting the interfaces.

For more information about policers, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

## Applying Aggregate Policers

- [Applying Aggregate Policers on page 227](#)

### Applying Aggregate Policers

By default, if you apply a policer to multiple protocol families on the same logical interface, the policer restricts traffic for each protocol family individually. For example, a policer with a 50 Mbps bandwidth limit applied to both IPv4 and IPv6 traffic would allow the interface to accept 50 Mbps of IPv4 traffic and 50 Mbps of IPv6 traffic. If you apply an aggregate policer, the policer would allow the interface to receive only 50 Mbps of IPv4 and IPv6 traffic combined.

To configure an aggregate policer, include the **logical-interface-policer** statement at the **[edit firewall policer *policer-template-name*]** hierarchy level:

```
[edit firewall policer policer-template-name]  
logical-interface-policer;
```

For the policer to be treated as an aggregate, you must apply it to multiple protocol families on a single logical interface by including the **policer** statement:

```
policer {  
  arp policer-template-name;  
  input policer-template-name;  
  output policer-template-name;  
}
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number* family *family*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]**

In the **family** statement, the protocol family can be **ccc**, **inet**, **inet6**, **mpls**, **tcc**, or **vpls**.

The protocol families on which you do not apply the policer are not affected by the policer. For example, if you configure a single logical interface to accept MPLS, IPv4, and IPv6 traffic and you apply the logical interface policer **policer1** to only the IPv4 and IPv6 protocol families, MPLS traffic is not subject to the constraints of **policer1**.

If you apply **policer1** to a different logical interface, there are two instances of the policer. This means the Junos OS polices traffic on separate logical interfaces separately, not as an aggregate, even if the same logical-interface policer is applied to multiple logical interfaces on the same physical interface port.

#### ***Example: Applying Aggregate Policers***

Configure two logical interface policers: **aggregate\_police1** and **aggregate\_police2**. Apply **aggregate\_police1** to IPv4 and IPv6 traffic received on logical interface **fe-0/0/0.0**. Apply **aggregate\_police2** to CCC and MPLS traffic received on logical interface **fe-0/0/0.0**. This configuration causes the software to create only one instance of **aggregate\_police1** and one instance of **aggregate\_police2**.

Apply **aggregate\_police1** to IPv4 and IPv6 traffic received on another logical interface **fe-0/0/0.1**. This configuration causes the software to create a new instance of **aggregate\_police1**, one that applies to unit 0 and another that applies to unit 1.

```
[edit firewall]  
policer aggregate_police1 {  
  logical-interface-policer;  
  if-exceeding {  
    bandwidth-limit 100m;  
    burst-size-limit 500k;  
  }  
  then {  
    discard;
```

```

    }
  }
  policer aggregate_police2 {
    logical-interface-policer;
    if-exceeding {
      bandwidth-limit 10m;
      burst-size-limit 200k;
    }
    then {
      discard;
    }
  }
}
[edit interfaces fe-0/0/0]
unit 0 {
  family inet {
    policer {
      input aggregate_police1;
    }
  }
  family inet6 {
    policer {
      input aggregate_police1;
    }
  }
  family ccc {
    policer {
      input aggregate_police2;
    }
  }
  family mpls {
    policer {
      input aggregate_police2;
    }
  }
}
unit 1 {
  family inet {
    policer {
      input aggregate_police1;
    }
  }
  family inet6 {
    policer {
      input aggregate_police1;
    }
  }
}
}

```

## Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs

- [Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs on page 229](#)

### Applying Hierarchical Policers on Enhanced Intelligent Queuing PICs

M40e, M120, and M320 edge routers and T Series core routers with Enhanced Intelligent Queuing (IQE) PICs support hierarchical policers in the ingress direction and allow you

to apply a hierarchical policer for the premium and aggregate (premium plus normal) traffic levels to an interface. Hierarchical policers provide cross-functionality between the configured physical interface and the Packet Forwarding Engine.


Before you begin, there are some general restrictions that apply to hierarchical policers:

- Only one type of policer can be configured for a logical or physical interface. For example, a hierarchical policer and a regular policer in the same direction for the same logical interface is not allowed.
- The chaining of the policers—that is, applying policers to both a port and the logical interfaces of that port—is not allowed.
- There is a limit of 64 policers per interface in case there is no BA classification, providing a single policer per DLCI.
- Only one kind of policer can be applied on a physical or logical interface.
- The policer should be independent of BA classification. Without BA classification, all traffic on an interface will be treated either as EF or non-EF, based on the configuration. With BA classification, an interface can support up to 64 policers. Again, the interface here may be a physical interface or logical interface (for example, DLCI).
- With BA classification, the miscellaneous traffic (the traffic *not* matching with any of the BA classification DSCP/EXP bits) will be policed as non-EF traffic. No separate policers will be installed for this traffic.

### **Hierarchical Policer Overview**

Hierarchical policing uses two token buckets, one for aggregate (non-EF) traffic and one for premium (EF) traffic. Which traffic is EF and which is non-EF is determined by the class-of-service configuration. Logically, hierarchical policing is achieved by chaining two policers.

**Figure 11: Hierarchical Policer**

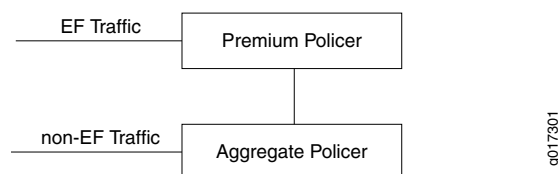

In the example in [Figure 11 on page 230](#), EF traffic is policed by Premium Policer and non EF traffic is policed by Aggregate Policer. What that means is, for EF traffic the out-of-spec action will be the one that is configured for Premium Policer, but the in-spec EF traffic will still consume the tokens from the Aggregate Policer.

But EF traffic will never be submitted to the out-of-spec action of the Aggregate Policer. Also, if the out-of-spec action of the Premium Policer is not set to Discard, those out-of-spec packets will not consume the tokens from the Aggregate Policer. Aggregate Policer only polices the non-EF traffic. As you can see, the Aggregate Policer token bucket can go negative, if all the tokens are consumed by the non-EF traffic and then you get bursts of EF traffic. But that will be for a very short time, and over a period of time it will average out. For example:

- *Premium Policer*: Bandwidth 2 Mbps, OOS Action: Discard
- *Aggregate Policer*: Bandwidth 10 Mbps, OOS Action: Discard

In the above case, EF traffic is guaranteed 2 Mbps and the non-EF traffic will get from 8 Mbps to 10 Mbps, depending on the input rate of the EF traffic.

### ***Hierarchical Policing Characteristics***

Hierarchical token bucket features include:

- Ingress traffic is first classified into EF and non-EF traffic prior to applying a policer:
  - Classification is performed by Q-tree lookup
- Channel number selects a shared token bucket policer:
  - Dual token bucket policer is divided into two single bucket policers:
    - Policer1—EF traffic
    - Policer2—non-EF traffic
- Shared token bucket is used to police the traffic as follows:
  - Policer1 is set to EF rate (for example, 2 Mbps)
  - Policer2 is set to aggregate interface policed rate (for example, 10 Mbps).
  - EF traffic gets applied to Policer1.
    - If traffic is in-spec it is allowed to pass and decrement from both Policer1 and Policer2.
    - If traffic is out-of-spec it can be discarded or marked with a new FC or loss priority. Policer2 will not do anything with out-of-spec EF traffic.
  - Non-EF traffic gets applied only to Policer2.
    - If traffic is in-spec it is allowed to pass through and decremented Policer2.
    - If traffic is out-of-spec it is discarded or marked with a new FC or set with a new drop priority.
- Rate-limit the port speed to a desired rate at Layer 2
- Rate-limit the EF traffic
- Rate-limit the non-EF traffic
- Policing drops counted per color

**See Also** • *Class of Service Feature Guide for Routing Devices and EX9200 Switches*

## **Configuring Hierarchical Policers**

To configure a hierarchical policer, apply the **policing-priority** statement to the proper forwarding class and configure a hierarchical policer for the aggregate and premium

level. For more information about class of service, see the *Class of Service Feature Guide for Routing Devices and EX9200 Switches*.



**NOTE:** Hierarchical policers can only be configured on SONET physical interfaces hosted on an IQE PIC. Only aggregate and premium levels are supported.

#### CoS Configuration of Forwarding Classes for Hierarchical Policers

```
[edit class-of-service forwarding-classes]
class fc1 queue-num 0 priority high policing-priority premium;
class fc2 queue-num 1 priority low policing-priority normal;
class fc3 queue-num 2 priority low policing-priority normal;
class fc4 queue-num 3 priority low policing-priority normal;
```

For detailed information on class-of-service configuration and statements, see the *Class of Service Feature Guide for Routing Devices and EX9200 Switches*.

#### Firewall Configuration for Hierarchical Policers

```
[edit firewall hierarchical-policer foo]
aggregate {
  if-exceeding {
    bandwidth-limit 70m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
}
premium {
  if-exceeding {
    bandwidth-limit 50m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
}
```

You can apply the hierarchical policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]
input-hierarchical-policer foo;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]
input-hierarchical-policer foo;
```

### Configuring a Single-Rate Two-Color Policer

You can configure a single-rate two-color policer as follows:

```
[edit firewall policer foo]
if-exceeding {
  bandwidth-limit 50m;
  burst-size-limit 1500;
}
```

```
then {  
  discard;  
}
```

You can apply the policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]  
input-policer foo;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]  
input-policer foo;
```

## Configuring a Single-Rate Color-Blind Policer

This section describes single-rate color blind and color aware policers.

You can configure a single-rate color blind policer as follows:

```
[edit firewall three-color-policer foo]  
single-rate {  
  color-blind;  
  committed-information-rate 50m;  
  committed-burst-size 1500;  
  excess-burst-size 1500;  
}
```

You can apply the single-rate color blind policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]  
input-three-color foo;
```

You can configure a single-rate color-aware policer as follows:

```
[edit firewall three-color-policer bar]  
single-rate {  
  color-aware;  
  committed-information-rate 50m;  
  committed-burst-size 1500;  
  excess-burst-size 1500;  
}
```

You can apply the single-rate color-aware policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]  
input-three-color foo;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]  
input-three-color bar;
```

## Configuring a Two-Rate Tricolor Marker Policer

Ingress policing is implemented using a two-rate tricolor marker (trTCM). This is done with a dual token bucket (DTB) that maintains two rates, committed, and a peak. Egress static policing also uses a token bucket.

The token buckets perform the following ingress policing functions:

- (1K) trTCM - Dual token bucket (red, yellow, and green marking)
- Policing is based on Layer 2 packet size:
  - After +/- byte adjust offset
- Marking is color aware and color blind:
  - Color aware needs to have the color set by q-tree lookup based on:
    - ToS
    - EXP
- Programmable marking actions:
  - Color (red, yellow, green)
  - Drop based on color and congestion profile
- Policer is selected based on the arriving channel number:
  - Channel number LUT produces policer index and queue index
  - Multiple channels can share the same policer (LUT produces same policer index)
- Support ingress policing and trTCM at the following levels:
  - Queue
  - Logical interface (ifl/DLCI)
  - Physical interface (ifd)
  - Physical port (controller ifd)
  - Any combinations of logical interface, physical interface, and port
- Support percentage of interface speed and bits per second

Rate limits may be applied to selected queues on ingress and on predefined queues at egress. The token bucket operates in color aware and color blind modes (specified by RFC 2698).

#### **Configuring a Color-Blind trTCM**

```
[edit firewall three-color-policer foo]
two-rate {
  color-blind;
  committed-information-rate 50m;
  committed-burst-size 1500;
  peak-information-rate 100m;
  peak-burst-size 3k;
}
```

You can apply the three-color two-rate color-blind policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]
input-three-color foo;
```

You also have the option to apply the policer at the physical port level as follows:

<b>Configuring a Color-Aware trTCM</b>	<pre>[edit interfaces so-0/1/0 layer2-policer] input-three-color foo;  [edit firewall three-color-policer bar] two-rate {   color-aware;   committed-information-rate 50m;   committed-burst-size 1500;   peak-information-rate 100m;   peak-burst-size 3k; }</pre>
--	---

You can apply the three-color two-rate color-aware policer as follows:

```
[edit interfaces so-0/1/0 unit 0 layer2-policer]
input-three-color bar;
```

You also have the option to apply the policer at the physical port level as follows:

```
[edit interfaces so-0/1/0 layer2-policer]
input-three-color bar;
```

**See Also** • *Class of Service Feature Guide for Routing Devices and EX9200 Switches*

## Applying a Filter to an Interface

- [Defining Interface Groups in Firewall Filters on page 235](#)
- [Applying a Filter to an Interface on page 236](#)

### Defining Interface Groups in Firewall Filters

When applying a firewall filter, you can define an interface to be part of an *interface group*. Packets received on that interface are tagged as being part of the group. You can then match these packets using the **interface-group** match statement, as described in the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

To define the interface to be part of an interface group, include the **group** statement:

```
group filter-group-number;
```

You can include this statement at the following hierarchy levels:

- `[edit interfaces interface-name unit logical-unit-number family family filter]`
- `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family family filter]`



**NOTE:** The number 0 is not a valid interface group number.

### Filter-Based Forwarding on the Output Interface

---

If port-mirrored packets are to be distributed to multiple monitoring or collection interfaces, based on patterns in packet headers, it is helpful to configure a filter-based forwarding (FBF) filter on the port-mirroring egress interface.

When an FBF filter is installed as an output filter, a packet that is forwarded to the filter has already undergone at least one route lookup. After the packet is classified at the egress interface by the FBF filter, it is redirected to another routing table for additional route lookup. To avoid packet looping inside the Packet Forwarding Engine, the route lookup in the latter routing table (designated by an FBF routing instance) must result in a different next hop from any next hop specified in a table that has already been applied to the packet.

If an input interface is configured for FBF, the source lookup is disabled for those packets headings to a different routing instance, since the routing table is not set up to handle the source lookup.

For more information about FBF configuration, see the *Junos OS Routing Protocols Library*. For more information about port mirroring, see the *Junos OS Services Interfaces Library for Routing Devices*.

### Applying a Filter to an Interface

To apply firewall filters to an interface, include the **filter** statement:

```
filter {  
  group filter-group-number;  
  input filter-name;  
  input-list [ filter-names ];  
  output filter-name;  
  output-list [ filter-names ];  
}
```

To apply a single filter, include the **input** statement:

```
filter {  
  input filter-name;  
}
```

To apply a list of filters to evaluate packets received on an interface, include the **input-list** statement.

```
filter {  
  input-list [ filter-names ];  
}
```

Up to 16 filter names can be included in an input list.

To apply a list of filters to evaluate packets transmitted on an interface, include the **output-list** statement.

```
filter {  
  output-list [ filter-names ];  
}
```

When you apply filters using the **input-list** statement or the **output-list** statement, a new filter is created with the name *<interface-name>.<unit-direction>*. This filter is exclusively interface-specific.

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

In the **family** statement, the protocol family can be **ccc**, **inet**, **inet6**, **mpls**, or **vpls**.

In the **group** statement, specify the interface group number to associate with the filter.

In the **input** statement, list the name of one firewall filter to be evaluated when packets are received on the interface.

In the **input-list** statement, list the names of filters to evaluate when packets are received on the interface. You can include up to 16 filter names.

In the **output** statement, list the name of one firewall filter to be evaluated when packets are transmitted on the interface.



**NOTE:** Output filters do not work for broadcast and multicast traffic, including VPLS traffic (except in MX Series routers with MPC/MIC interfaces), as shown in “[Applying a Filter to an Interface](#)” on page 236.



**NOTE:** On an MX Series router, you cannot apply as an output filter, a firewall filter configured at the [edit firewall filter family **ccc**] hierarchy level. Firewall filters configured for the family **ccc** statement can be applied only as input filters.

In the **output-list** statement, list the names of filters to evaluate when packets are transmitted on the interface. You can include up to 16 filter names.

You can use the same filter one or more times. On M Series routers (except the M320 and M120 routers), if you apply a firewall filter or policer to multiple interfaces, the filter or policer acts on the sum of traffic entering or exiting those interfaces.

On T Series, M120, and M320 routers, interfaces are distributed among multiple packet forwarding components. Therefore, on these routers, if you apply a firewall filter or policer to multiple interfaces, the filter or policer acts on the traffic stream entering or exiting each interface, regardless of the sum of traffic on the multiple interfaces.

For more information on Understanding Ethernet Frame Statistics, see the *MX Series Layer 2 Configuration Guide*.

If you apply the filter to the interface **lo0**, it is applied to packets received or transmitted by the Routing Engine. You cannot apply MPLS filters to the management interface (**fxp0** or **em0**) or the loopback interface (**lo0**).

Filters applied at the **[set interfaces lo0 unit 0 family any filter input]** hierarchy level are not installed on T4000 Type 5 FPCs.

For more information about firewall filters, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*. For more information about MPLS filters, see the *MPLS Applications Feature Guide*.

**Example: Input Filter  
for VPLS Traffic**

For M Series and T Series routers only, apply an input filter to VPLS traffic. Output filters do not work for broadcast and multicast traffic, including VPLS traffic. Note that on MX Series routers with MPC/MIC interfaces, the VPLS filters on the egress is applicable to broadcast, multicast, and unknown unicast traffic.

```
[edit interfaces]
fe-2/2/3 {
  vlan-tagging;
  encapsulation vlan-vpls;
  unit 601 {
    encapsulation vlan-vpls;
    vlan-id 601;
    family vpls {
      filter {
        input filter1; # Works for multicast destination MAC address
        output filter1; # Does not work for multicast destination MAC address
      }
    }
  }
}
[edit firewall]
family vpls {
  filter filter1 {
    term 1 {
      from {
        destination-mac-address {
          01:00:0c:cc:cc:cd/48;
        }
      }
      then {
        discard;
      }
    }
    term 2 {
      then {
        accept;
      }
    }
  }
}
```

**Example: Filter-Based Forwarding at the Output Interface**

The following example illustrates the configuration of filter-based forwarding at the output interface. In this example, the packet flow follows this path:

1. A packet arrives at interface **fe-1/2/0.0** with source and destination addresses **10.50.200.1** and **10.50.100.1** respectively.
2. The route lookup in routing table **inet.0** points to the egress interface **so-0/0/3.0**.
3. The output filter installed at **so-0/0/3.0** redirects the packet to routing table **fbf.inet.0**.
4. The packet matches the entry **10.50.100.0/25** in the **fbf.inet.0** table, and finally leaves the router from interface **so-2/0/0.0**.

```
[edit interfaces]
so-0/0/3 {
  unit 0 {
    family inet {
      filter {
        output fbf;
      }
      address 10.50.10.2/25;
    }
  }
}
fe-1/2/0 {
  unit 0 {
    family inet {
      address 10.50.50.2/25;
    }
  }
}
so-2/0/0 {
  unit 0 {
    family inet {
      address 10.50.20.2/25;
    }
  }
}
[edit firewall]
filter fbf {
  term 0 {
    from {
      source-address {
        10.50.200.0/25;
      }
    }
    then routing-instance fbf;
  }
  term d {
    then count d;
  }
}
[edit routing-instances]
fbf {
  instance-type forwarding;
  routing-options {
```

```
static {
    route 10.50.100.0/25 next-hop so-2/0/0.0;
}
}
[edit routing-options]
interface-routes {
    rib-group inet fbf-group;
}
static {
    route 10.50.100.0/25 next-hop 10.50.10.1;
}
rib-groups {
    fbf-group {
        import-rib [inet.0 fbf.inet.0];
    }
}
```

---

## Guidelines for Configuring Unicast RPF on ACX Series Routers

Observe the following guidelines while configuring unicast RPF on ACX Series routers:

- Support for physical interfaces impacts inet families only.
- The RPF check to be used when routing is asymmetrical is not supported because the **unicast-reverse-path (active-paths | feasible-paths)** statement at the **[edit routing-instances *routing-instance-name* instance-type *name* routing-options forwarding-table]** hierarchy level is not supported.
- Even if uRPF checking is enabled, the reverse path checking is not performed if the following conditions apply:
  - The destination IP address is not a unicast address. This applies for both IPV4 and IPV6 packets.
  - The source IP address is IPV6 and the address is a link local address (FE80::/10)
  - The received packet is a BOOTP/DHCP packet (SIP=0.0.0.0 and DIP=255.255.255.255)
- If you enable/disable unicast RPF on live traffic, some packets are dropped while the packet forwarding components are updating. This behavior occurs because route reinstallation is initiated while you enable or disable uRPF.
- uRPF is supported at the logical interface level. Due to hardware limitations, support is available only at the logical interface level.
- Strict mode on ECMP routes is not supported in ACX. This condition occurs because the hardware treats ECMP routes as Loose Mode although the port is configured as Strict mode. Because ECMP uses multiple physical paths for the route the reverse path check results in utilizing many paths (routes) and the source port validation method is not used in case of Strict mode. As a result, such a network scenario operates in the same manner as loose mode.

- When the strict mode is enabled on the interface, if the packet is coming with an SIP address which ARP resolution is pending will be dropped as it points to RESOLVE\_NH.
- uRPF fail filter can be configured for family *<inet | inet6>* in ACX.



**NOTE:** The uRPF fail filter cannot match packets failed at ingress port check (strict mode).

The uRPF fail filter can match packets failing source IP lookup but cannot match packets failing the input interface check (strict mode).

The uRPF fail filter applies only to interface-specific instances of the firewall filter.

The uRPF fail filters do not support reject and routing-instance actions.

- uRPF can be configured for family *<inet | inet6>* on IRB interfaces in ACX.
- uRPF implementation in ACX does not consider all feasible paths for reverse path verification and only active path based verification is supported.
- uRPF failure packets statistics are not supported in ACX.
- You can use either the **show interfaces extensive** command or the **show interfaces detail** command to verify that unicast RPF is enabled and working on the interface. In the **Flags** section of the output, if unicast reverse-path forwarding (RPF) is explicitly configured on the specified interface, the uRPF flag is displayed. If unicast RPF was configured on a different interface (and therefore is enabled on all switch interfaces) but was not explicitly configured on the specified interface, the uRPF flag is not displayed even though unicast RPF is enabled.
- The uRPF detail in the **Flags** section of the output of the **show interfaces (detail | extensive)** commands is displayed only for logical interfaces on which uRPF is configured. Otherwise, this information is not shown.

**Related  
Documentation**

## Configuring Unicast RPF

- [Configuring Unicast RPF on page 242](#)
- [Unicast RPF and Default Route on page 242](#)
- [Configuring Unicast RPF Strict Mode on page 244](#)
- [Configuring Unicast RPF Loose Mode on page 246](#)
- [Configuring Unicast RPF Loose Mode with Ability to Discard Packets on page 247](#)
- [Configuring Unicast RPF on a VPN on page 249](#)
- [Configuring Unicast RPF on page 250](#)

## Configuring Unicast RPF

For interfaces that carry IPv4 or IPv6 traffic, you can reduce the impact of denial of service (DoS) attacks by configuring unicast reverse path forwarding (RPF). Unicast RPF helps determine the source of attacks and rejects packets from unexpected source addresses on interfaces where unicast RPF is enabled.



---

### NOTE:

- You can protect a network by applying unicast RPF check feature at the edge (on customer facing interfaces) of the network. In an ISP environment, this can impact the network which can impose on a scaled setup. In case if you have already protected the edge of your network, a packet with a spoofed IP source address would not even appear in a core facing interface. In this case, unicast RPF check is not necessary. Enabling unicast RPF feature can impact the control plane performance, so use it where it is required. So it is strongly recommended not to enable this feature on the network core (internal) interfaces.
- 

The following sections describe unicast RPF in detail:

### Unicast RPF and Default Route

When the active route cannot be chosen from the routes in a routing table, the router chooses a default route. A default route is equivalent to an IP address of 0.0.0.0/0. If you configure a default route, and you configure unicast RPF on an interface that the default route uses, unicast RPF behaves differently than it does otherwise. For information about configuring default routes, see the *Junos OS Routing Protocols Library*.

To determine whether the default route uses an interface, enter the **show route** command:

```
user@host> show route address
```

**address** is the next-hop address of the configured default route. The default route uses the interfaces shown in the output of the **show route** command.

The following sections describe how unicast RPF behaves when a default route uses an interface and when a default route does not use an interface:

- [Unicast RPF Behavior with a Default Route on page 243](#)
- [Unicast RPF Behavior Without a Default Route on page 243](#)
- [Unicast RPF with Routing Asymmetry on page 244](#)

### Unicast RPF Behavior with a Default Route

---

On all routers except those with MPCs and the MX80 router, unicast RPF behaves as follows if you configure a default route that uses an interface configured with unicast RPF:

- Loose mode—All packets are automatically accepted. For this reason, we recommend that you not configure unicast RPF loose mode on interfaces that the default route uses.
- Strict mode—The packet is accepted when the source address of the packet matches any of the routes (either default or learned) that can be reachable through the interface. Note that routes can have multiple destinations associated with them; therefore, if one of the destinations matches the incoming interface of the packet, the packet is accepted.

On all routers with MPCs and the MX80 router, unicast RPF behaves as follows if you configure a default route that uses an interface configured with unicast RPF:

- Loose mode—All packets except the packets whose source is learned from the default route are accepted. All packets whose source is learned from the default route are dropped at the Packet Forwarding Engine. The default route is treated as if the route does not exist.
- Strict mode—The packet is accepted when the source address of the packet matches any of the routes (either default or learned) that can be reachable through the interface. Note that routes can have multiple destinations associated with them; therefore, if one of the destinations matches the incoming interface of the packet, the packet is accepted.

On all routers, the packet is not accepted when either of the following is true:

- The source address of the packet does not match a prefix in the routing table.
- The interface does not expect to receive a packet with this source address prefix.

### Unicast RPF Behavior Without a Default Route

---


If you do not configure a default route, or if the default route does not use an interface configured with unicast RPF, unicast RPF behaves as described in [“Configuring Unicast RPF Strict Mode” on page 244](#) and [“Configuring Unicast RPF Loose Mode” on page 246](#). To summarize, unicast RPF without a default route behaves as follows:

- Strict mode—The packet is not accepted when either of the following is true:
  - The packet has a source address that does not match a prefix in the routing table.
  - The interface does not expect to receive a packet with this source address prefix.
- Loose mode—The packet is not accepted when the packet has a source address that does not match a prefix in the routing table.

### Unicast RPF with Routing Asymmetry

In general, we recommend that you not enable unicast RPF on interfaces that are internal to the network because internal interfaces are likely to have *routing asymmetry*. Routing asymmetry means that a packet's outgoing and return paths are different. Routers in the core of the network are more likely to have asymmetric reverse paths than routers at the customer or provider edge. [Figure 12 on page 244](#) shows unicast RPF in an environment with routing asymmetry.

**Figure 12: Unicast RPF with Routing Asymmetry**

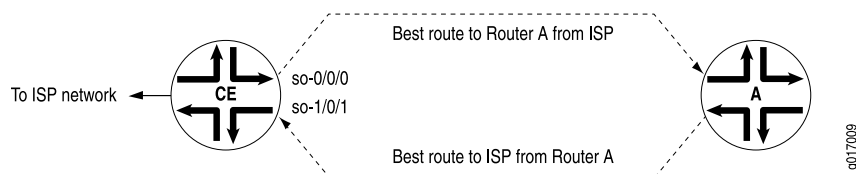

In [Figure 12 on page 244](#), if you enable unicast RPF on interface `so-0/0/0`, traffic destined for Router A is not rejected. If you enable unicast RPF on interface `so-1/0/1`, traffic from Router A is rejected.

If you need to enable unicast RPF in an asymmetric routing environment, you can use fail filters to allow the router to accept incoming packets that are known to be arriving by specific paths. For an example of a fail filter that accepts packets with a specific source and destination address, see [“Configuring Unicast RPF” on page 250](#).

### Configuring Unicast RPF Strict Mode

In strict mode, unicast RPF checks whether the incoming packet has a source address that matches a prefix in the routing table, and whether the interface expects to receive a packet with this source address prefix.

If the incoming packet fails the unicast RPF check, the packet is not accepted on the interface. When a packet is not accepted on an interface, unicast RPF counts the packet and sends it to an optional fail filter. If the fail filter is not configured, the default action is to silently discard the packet.

The optional fail filter allows you to apply a filter to packets that fail the unicast RPF check. You can define the fail filter to perform any filter operation, including accepting, rejecting, logging, sampling, or policing.

When unicast RPF is enabled on an interface, Bootstrap Protocol (BOOTP) packets and Dynamic Host Configuration Protocol (DHCP) packets are not accepted on the interface. To allow the interface to accept BOOTP packets and DHCP packets, you must apply a fail filter that accepts all packets with a source address of `0.0.0.0` and a destination address of `255.255.255.255`. For a configuration example, see [“Configuring Unicast RPF” on page 250](#).

For more information about unicast RPF, see the *Junos OS Routing Protocols Library*. For more information about defining fail filters, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide*.

To configure unicast RPF, include the **rpf-check** statement:

```
rpf-check <fail-filter filter-name>;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family (inet | inet6)]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family (inet | inet6)]

Using unicast RPF can have several consequences when implemented with traffic filters:

- RPF fail filters are evaluated after input filters and before output filters.
- If you configure a filter counter for packets dropped by an input filter, and you want to know the total number of packets dropped, you must also configure a filter counter for packets dropped by the RPF check.
- To count packets that fail the RPF check and are accepted by the RPF fail filter, you must configure a filter counter.
- If an input filter forwards packets anywhere other than the inet.0 or inet6.0 routing tables, the unicast RPF check is not performed.
- If an input filter forwards packets anywhere other than the routing instance the input interface is configured for, the unicast RPF check is not performed.

Configure unicast RPF strict mode, and apply a fail filter that allows the interface to accept BOOTP packets and DHCP packets. The filter accepts all packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255.

To configure unicast RPF in strict mode:

1. Configure the fail filter:

```
[edit firewall]
filter rpf-special-case-dhcp-bootp {
  term allow-dhcp-bootp {
    from {
      source-address {
        0.0.0.0/32;
      }
      address {
        255.255.255.255/32;
      }
    }
    then {
      count rpf-dhcp-bootp-traffic;
      accept;
    }
  }
  term default {
    then {
      log;
      reject;
    }
  }
}
```

```
}  
}
```

2. Configure unicast RPF on interfaces:

```
[edit]  
interfaces {  
  so-0/0/0 {  
    unit 0 {  
      family inet {  
        rpf-check fail-filter rpf-special-case-dhcp-bootp;  
      }  
    }  
  }  
}
```

3. Commit the configuration.

```
[edit]  
commit;
```

## Configuring Unicast RPF Loose Mode

By default, unicast RPF uses strict mode. Unicast RPF loose mode is similar to unicast RPF strict mode and has the same configuration restrictions. The only check in loose mode is whether the packet has a source address with a corresponding prefix in the routing table; loose mode does not check whether the interface expects to receive a packet with a specific source address prefix. If a corresponding prefix is not found, unicast RPF loose mode does not accept the packet. As in strict mode, loose mode counts the failed packet and optionally forwards it to a fail filter, which either accepts, rejects, logs, samples, or polices the packet.

To configure unicast RPF loose mode, include the **mode**:

1. **mode** loose;

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family (inet | inet6) rpf-check <fail-filter *filter-name*>]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family (inet | inet6) rpf-check <fail-filter *filter-name*>]

2. For example:

In this example, no special configuration beyond device initialization is required.

Configure unicast RPF loose mode, and apply a fail filter that allows the interface to accept BOOTP packets and DHCP packets. The filter accepts all packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255.

To configure unicast RPF in loose mode:

- a. Configure the fail filter:

```
[edit firewall]
filter rpf-special-case-dhcp-bootp {
  term allow-dhcp-bootp {
    from {
      source-address {
        0.0.0.0/32;
      }
      address {
        255.255.255.255/32;
      }
    }
    then {
      count rpf-dhcp-bootp-traffic;
      accept;
    }
  }
  term default {
    then {
      log;
      reject;
    }
  }
}
}
```

- b. Configure unicast RPF on interfaces:

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        rpf-check fail-filter rpf-special-case-dhcp-bootp;
        mode loose;
      }
    }
  }
}
}
```

- c. Commit the configuration.

```
[edit]
commit;
```

## Configuring Unicast RPF Loose Mode with Ability to Discard Packets

Starting with Junos OS Release 12.1, unicast RPF loose mode has the ability to discard packets with the source address pointing to the discard interface. This feature is supported on MX Series routers and on T Series routers with Type 1 FPCs, Type 2 FPCs, and Type 3 FPCs. Using unicast RPF loose mode, along with Remote Triggered Black Hole (RTBH) filtering, provides an efficient way to discard packets coming from known attack sources. BGP policies in edge routers ensure that packets with untrusted source addresses have their next hop set to a discard route. When a packet arrives at the router with an untrusted source address, unicast RPF performs a route lookup of the source address. Because the

source address route points to a discard next hop, the packet is dropped and a counter is incremented. This feature is supported on both IPv4 (inet) and IPv6 (inet6) address families.

To configure unicast RPF loose mode with the ability to discard packets, include the **rpf-loose-mode-discard family inet** statement at the **[edit forwarding-options]** hierarchy level:

```
rpf-loose-mode-discard {  
  family {  
    inet;  
  }  
}
```

In this example, no special configuration beyond device initialization is required.

Configure unicast RPF loose mode, and apply a fail filter that allows the interface to accept BOOTP packets and DHCP packets. The filter accepts all packets with a source address of **0.0.0.0** and a destination address of **255.255.255.255**.

To configure unicast RPF loose mode with the ability to discard packets:

1. Configure the fail filter:

```
[edit firewall]  
filter rpf-special-case-dhcp-bootp {  
  term allow-dhcp-bootp {  
    from {  
      source-address {  
        0.0.0.0/32;  
      }  
      address {  
        255.255.255.255/32;  
      }  
    }  
    then {  
      count rpf-dhcp-bootp-traffic;  
      accept;  
    }  
  }  
  term default {  
    then {  
      log;  
      reject;  
    }  
  }  
}
```

2. Configure unicast RPF on interfaces:

```
[edit]  
interfaces {  
  so-0/0/0 {  
    unit 0 {  
      family inet {
```

```

        rpf-check fail-filter rpf-special-case-dhcp-bootp;
        mode loose;
    }
}
}

```

3. Configure the ability to discard packets.

```

[edit]
forwarding-options{
  rpf-loose-mode-discard {
    family {
      inet;
    }
  }
}

```

4. Commit the configuration.

```

[edit]
commit;

```

## Configuring Unicast RPF on a VPN

You can configure unicast RPF on a VPN interface by enabling unicast RPF on the interface and including the **interface** statement at the **[edit routing-instances routing-instance-name]** hierarchy level.

You can configure unicast RPF only on the interfaces you specify in the routing instance. This means the following:

- For Layer 3 VPNs, unicast RPF is supported on the CE router interface.
- Unicast RPF is not supported on core-facing interfaces.
- For virtual-router routing instances, unicast RPF is supported on all interfaces you specify in the routing instance.
- If an input filter forwards packets anywhere other than the routing instance the input interface is configured for, the unicast RPF check is not performed.

For more information about VPNs and virtual-router routing instances, see the *Junos OS VPNs Library for Routing Devices*. For more information about FBF, see the *Junos OS Routing Protocols Library*.

Configure unicast RPF on a Layer 3 VPN interface:

```

[edit interfaces]
so-0/0/0 {
  unit 0 {
    family inet {
      rpf-check;
    }
  }
}

```

```
}  
[edit routing-instance]  
VPN-A {  
  interface so-0/0/0.0;  
}
```

## Configuring Unicast RPF

Configure unicast RPF strict mode, and apply a fail filter that allows the interface to accept BOOTP packets and DHCP packets. The filter accepts all packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255.

```
[edit firewall]  
filter rpf-special-case-dhcp-bootp {  
  term allow-dhcp-bootp {  
    from {  
      source-address {  
        0.0.0.0/32;  
      }  
      address {  
        255.255.255.255/32;  
      }  
    }  
    then {  
      count rpf-dhcp-bootp-traffic;  
      accept;  
    }  
  }  
  term default {  
    then {  
      log;  
      reject;  
    }  
  }  
}  
[edit]  
interfaces {  
  so-0/0/0 {  
    unit 0 {  
      family inet {  
        rpf-check fail-filter rpf-special-case-dhcp-bootp;  
      }  
    }  
  }  
}
```

- See Also**
- *unicast-reverse-path*
  - [Example: Configuring Unicast Reverse-Path-Forwarding Check on page 253](#)

---

## Verifying Unicast RPF Status

**Purpose** Verify that unicast reverse-path forwarding (RPF) is enabled and is working on the interface.

**Action** Use one of the **show interfaces *interface-name*** commands with either the **extensive** or **detail** options to verify that unicast RPF is enabled and working on the switch. The example below displays output from the **show interfaces ge- extensive** command.

```

user@switch> show interfaces ge1/0/10 extensive
Physical interface: ge-1/0/10, Enabled, Physical link is Down
  Interface index: 139, SNMP ifIndex: 58, Generation: 140
  Link-level type: Ethernet, MTU: 1514, Speed: Auto, MAC-REWRITE Error: None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled,
  Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:19:e2:50:95:ab, Hardware address: 00:19:e2:50:95:ab
  Last flapped   : Never
  Statistics last cleared: Never
Traffic statistics:
  Input bytes :                0                0 bps
  Output bytes :                0                0 bps
  Input packets:                0                0 pps
  Output packets:                0                0 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :                0
  Input packets:                0
  Output packets:                0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort                0                0                0
  1 assured-forw                0                0                0
  5 expedited-fo                0                0                0
  7 network-cont                0                0                0

Active alarms : LINK
Active defects : LINK
MAC statistics:
  Total octets      Receive      Transmit
  Total packets      0                0
  Unicast packets    0                0
  Broadcast packets  0                0
  Multicast packets  0                0
  CRC/Align errors   0                0
  FIFO errors        0                0
  MAC control frames 0                0
  MAC pause frames   0                0
  Oversized frames   0

```

```
Jabber frames                                0
Fragment frames                              0
VLAN tagged frames                           0
Code violations                               0
Filter statistics:
  Input packet count                          0
  Input packet rejects                        0
  Input DA rejects                            0
  Input SA rejects                            0
  Output packet count                         0
  Output packet pad count                     0
  Output packet error count                   0
  CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Incomplete
Packet Forwarding Engine configuration:
  Destination slot: 1

Logical interface ge-1/0/10.0 (Index 69) (SNMP ifIndex 59) (Generation 135)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
  Input bytes :                               0
  Output bytes :                              0
  Input packets:                             0
  Output packets:                             0
IPv6 transit statistics:
  Input bytes :                               0
  Output bytes :                              0
  Input packets:                             0
  Output packets:                             0
Local statistics:
  Input bytes :                               0
  Output bytes :                              0
  Input packets:                             0
  Output packets:                             0
Transit statistics:
  Input bytes :                               0
  Output bytes :                              0
  Input packets:                             0
  Output packets:                             0
IPv6 transit statistics:
  Input bytes :                               0
  Output bytes :                              0
  Input packets:                             0
  Output packets:                             0
  Protocol inet, Generation: 144, Route table: 0
Flags: uRPF
Addresses, Flags: Is-Preferred Is-Primary
```

**Meaning** The `show interfaces ge-1/0/10 extensive` command (and the `show interfaces ge-1/0/10 detail` command) displays in-depth information about the interface. The **Flags:** output field near the bottom of the display reports the unicast RPF status. If unicast RPF has not been enabled, the **uRPF** flag is not displayed.

On EX3200 and EX4200 switches, unicast RPF is implicitly enabled on *all* switch interfaces, including aggregated Ethernet interfaces (also referred to as link aggregation groups or LAGs) and routed VLAN interfaces (RVIs) when you enable unicast RPF on a

single interface. However, the unicast RPF status is shown as enabled only on interfaces for which you have explicitly configured unicast RPF. Thus, the **uRPF** flag is not displayed on interfaces for which you have not explicitly configured unicast RPF even though unicast RPF is implicitly enabled on all interfaces on EX3200 and EX4200 switches.

#### Related Documentation

- [show interfaces xe](#)
- [Example: Configuring Unicast RPF on an EX Series Switch](#)
- [Configuring Unicast RPF on ACX Series Routers](#)
- [Configuring Unicast RPF \(CLI Procedure\)](#)
- [Disabling Unicast RPF \(CLI Procedure\)](#)
- [Troubleshooting Unicast RPF](#)

### Example: Configuring Unicast Reverse-Path-Forwarding Check

- [Understanding How Unicast Reverse Path Forwarding Prevents Spoofed IP Packet Forwarding on page 253](#)
- [Example: Configuring Unicast Reverse-Path-Forwarding Checking to Prevent DoS and DDoS Attacks on page 254](#)

### Understanding How Unicast Reverse Path Forwarding Prevents Spoofed IP Packet Forwarding

IP spoofing can occur during a denial-of-service (DoS) attack. IP spoofing allows an intruder to pass IP packets to a destination as genuine traffic, when in fact the packets are not actually meant for the destination. This type of spoofing is harmful because it consumes the destination's resources.

A unicast reverse-path-forwarding (RPF) check is a tool to reduce forwarding of IP packets that might be spoofing an address. A unicast RPF check performs a route table lookup on an IP packet's source address, and checks the incoming interface. The router or switch determines whether the packet is arriving from a path that the sender would use to reach the destination. If the packet is from a valid path, the router or switch forwards the packet to the destination address. If it is not from a valid path, the router or switch discards the packet. Unicast RPF is supported for the IPv4 and IPv6 protocol families, as well as for the virtual private network (VPN) address family.



**NOTE:** Reverse path forwarding is not supported on the interfaces you configure as tunnel sources. This affects only the transit packets exiting the tunnel.

#### See Also

- [Example: Configuring Unicast Reverse-Path-Forwarding Checking to Prevent DoS and DDoS Attacks on page 254](#)

## Example: Configuring Unicast Reverse-Path-Forwarding Checking to Prevent DoS and DDoS Attacks

Unicast reverse path forwarding (RPF) helps protect against DoS and DDoS attacks by verifying the unicast source address of each packet that arrives on an ingress interface where unicast RPF is enabled.

This example shows how to help defend ingress interfaces against denial-of-service (DoS) and distributed denial-of-service (DDoS) attacks by configuring unicast RPF to filter incoming traffic.

- [Requirements on page 254](#)
- [Overview on page 254](#)
- [Configuration on page 255](#)
- [Verification on page 260](#)

---

### Requirements

In this example, no special configuration beyond device initialization is required.

---

### Overview

Large amounts of unauthorized traffic such as attempts to flood a network with fake (bogus) service requests in a DoS attack can consume network resources and deny service to legitimate users. One way to help prevent DoS and DDoS attacks is to verify that incoming traffic originates from legitimate network sources.

Unicast RPF helps ensure that a traffic source is legitimate (authorized) by comparing the source address of each packet that arrives on an interface to the forwarding table entry for its source address. If the device uses the same interface that the packet arrived on to reply to the packet's source, this verifies that the packet originated from an authorized source, and the device forwards the packet. If the device does not use the same interface that the packet arrived on to reply to the packet's source, the packet might have originated from an unauthorized source, and the device discards the packet.


In this example, Device B has unicast RPF configured. Device A is using OSPF to advertise a prefix for the link that connects to Device D. OSPF is enabled on the links between Device B and Device C and the links between Device A and Device C, but not on the links between Device A and Device B. Therefore, Device B learns about the route to Device D through Device C.

If ingress filtering is used in an environment where DHCP or BOOTP is used, it should be ensured that the packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255 are allowed to reach the relay agent in routers when appropriate.

This example also includes a fail filter. When a packet fails the unicast RPF check, the fail filter is evaluated to determine if the packet should be accepted anyway. The fail filter in this example allows Device B's interfaces to accept Dynamic Host Configuration Protocol (DHCP) packets. The filter accepts all packets with a source address of 0.0.0.0 and a destination address of 255.255.255.255.

Figure 13 on page 255 shows the sample network.

Figure 13: Unicast RPF Sample Topoolgy

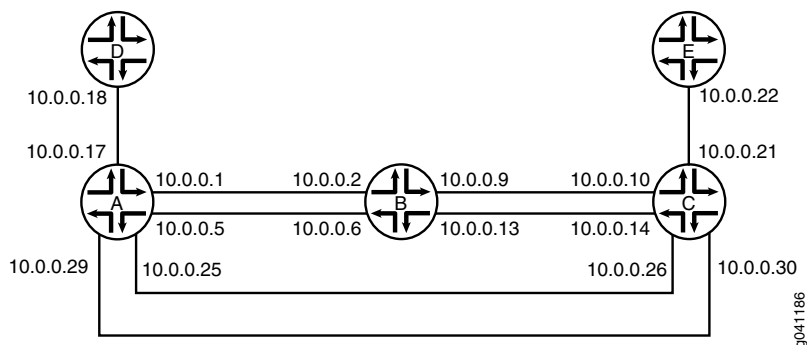

### Configuration

#### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device A

```
set interfaces fe-1/2/0 unit 1 family inet address 10.0.0.1/30
set interfaces fe-0/0/2 unit 5 family inet address 10.0.0.5/30
set interfaces fe-0/0/1 unit 17 family inet address 10.0.0.17/30
set interfaces fe-0/1/1 unit 25 family inet address 10.0.0.25/30
set interfaces fe-1/1/1 unit 29 family inet address 10.0.0.29/30
set protocols ospf export send-direct
set protocols ospf area 0.0.0.0 interface fe-0/1/1.25
set protocols ospf area 0.0.0.0 interface fe-1/1/1.29
set policy-options policy-statement send-direct from protocol direct
set policy-options policy-statement send-direct from route-filter 10.0.0.16/30 exact
set policy-options policy-statement send-direct then accept
```

#### Device B

```
set interfaces fe-1/2/0 unit 2 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-1/2/0 unit 2 family inet address 10.0.0.2/30
set interfaces fe-1/1/1 unit 6 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-1/1/1 unit 6 family inet address 10.0.0.6/30
set interfaces fe-0/1/1 unit 9 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-0/1/1 unit 9 family inet address 10.0.0.9/30
set interfaces fe-0/1/0 unit 13 family inet rpf-check fail-filter rpf-special-case-dhcp
set interfaces fe-0/1/0 unit 13 family inet address 10.0.0.13/30
set protocols ospf area 0.0.0.0 interface fe-0/1/1.9
set protocols ospf area 0.0.0.0 interface fe-0/1/0.13
set routing-options forwarding-table unicast-reverse-path active-paths
set firewall filter rpf-special-case-dhcp term allow-dhcp from source-address 0.0.0.0/32
set firewall filter rpf-special-case-dhcp term allow-dhcp from destination-address 255.255.255.255/32
set firewall filter rpf-special-case-dhcp term allow-dhcp then count rpf-dhcp-traffic
set firewall filter rpf-special-case-dhcp term allow-dhcp then accept
set firewall filter rpf-special-case-dhcp term default then log
set firewall filter rpf-special-case-dhcp term default then reject
```

**Device C**      `set interfaces fe-1/2/0 unit 10 family inet address 10.0.0.10/30`  
`set interfaces fe-0/0/2 unit 14 family inet address 10.0.0.14/30`  
`set interfaces fe-1/0/2 unit 21 family inet address 10.0.0.21/30`  
`set interfaces fe-1/2/2 unit 26 family inet address 10.0.0.26/30`  
`set interfaces fe-1/2/1 unit 30 family inet address 10.0.0.30/30`  
`set protocols ospf area 0.0.0.0 interface fe-1/2/0.10`  
`set protocols ospf area 0.0.0.0 interface fe-0/0/2.14`  
`set protocols ospf area 0.0.0.0 interface fe-1/2/2.26`  
`set protocols ospf area 0.0.0.0 interface fe-1/2/1.30`

**Device D**      `set interfaces fe-1/2/0 unit 18 family inet address 10.0.0.18/30`

**Device E**      `set interfaces fe-1/2/0 unit 22 family inet address 10.0.0.22/30`

### *Configuring Device A*

**Step-by-Step Procedure**      The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device A:

1.    Configure the interfaces.  
  
      `[edit interfaces]`  
      `user@A# set fe-1/2/0 unit 1 family inet address 10.0.0.1/30`  
  
      `user@A# set fe-0/0/2 unit 5 family inet address 10.0.0.5/30`  
  
      `user@A# set fe-0/0/1 unit 17 family inet address 10.0.0.17/30`  
  
      `user@A# set fe-0/1/1 unit 25 family inet address 10.0.0.25/30`  
  
      `user@A# set fe-1/1/1 unit 29 family inet address 10.0.0.29/30`
2.    Configure OSPF.  
  
      `[edit protocols ospf]`  
      `user@A# set export send-direct`  
      `user@A# set area 0.0.0.0 interface fe-0/1/1.25`  
      `user@A# set area 0.0.0.0 interface fe-1/1/1.29`
3.    Configure the routing policy.  
  
      `[edit policy-options policy-statement send-direct]`  
      `user@A# set from protocol direct`  
      `user@A# set from route-filter 10.0.0.16/30 exact`  
      `user@A# set then accept`
4.    If you are done configuring Device A, commit the configuration.  
  
      `[edit]`

```
user@A# commit
```

### Configuring Device B

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Device B:

1. Configure the interfaces.

```
[edit interfaces]
user@B# set fe-1/2/0 unit 2 family inet address 10.0.0.2/30

user@B# set fe-1/1/1 unit 6 family inet address 10.0.0.6/30

user@B# set fe-0/1/1 unit 9 family inet address 10.0.0.9/30

user@B# set fe-0/1/0 unit 13 family inet address 10.0.0.13/30
```

2. Configure OSPF.

```
[edit protocols ospf area 0.0.0.0]
user@B# set interface fe-0/1/1.9
user@B# set interface fe-0/1/0.13
```

3. Configure unicast RPF, and apply the optional fail filter.

```
[edit interfaces]
user@B# set fe-1/2/0 unit 2 family inet rpf-check fail-filter rpf-special-case-dhcp

user@B# set fe-1/1/1 unit 6 family inet rpf-check fail-filter rpf-special-case-dhcp

user@B# set fe-0/1/1 unit 9 family inet rpf-check fail-filter rpf-special-case-dhcp

user@B# set fe-0/1/0 unit 13 family inet rpf-check fail-filter rpf-special-case-dhcp
```

4. (Optional) Configure the fail filter that gets evaluated if a packet fails the RPF check.

```
[edit firewall filter rpf-special-case-dhcp]
user@B# set term allow-dhcp from source-address 0.0.0.0/32
user@B# set term allow-dhcp from destination-address 255.255.255.255/32
user@B# set term allow-dhcp then count rpf-dhcp-traffic
user@B# set term allow-dhcp then accept
user@B# set term default then log
user@B# set term default then reject
```

5. (Optional) Configure only active paths to be considered in the RPF check.

This is the default behavior.

```
[edit routing-options forwarding-table]
user@B# set unicast-reverse-path active-paths
```

6. If you are done configuring Device B, commit the configuration.

```
[edit]
user@B# commit
```

### Results

Confirm your configuration by issuing the **show firewall**, **show interfaces**, **show protocols**, **show routing-options**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
Device A user@A# show interfaces
fe-1/2/0 {
  unit 1 {
    family inet {
      address 10.0.0.1/30;
    }
  }
}
fe-0/0/2 {
  unit 5 {
    family inet {
      address 10.0.0.5/30;
    }
  }
}
fe-0/0/1 {
  unit 17 {
    family inet {
      address 10.0.0.17/30;
    }
  }
}
fe-0/1/1 {
  unit 25 {
    family inet {
      address 10.0.0.25/30;
    }
  }
}
fe-1/1/1 {
  unit 29 {
    family inet {
      address 10.0.0.29/30;
    }
  }
}

user@A# show protocols
```

```

ospf {
  export send-direct;
  area 0.0.0.0 {
    interface fe-0/1/1.25;
    interface fe-1/1/1.29;
  }
}

user@A# show policy-options
policy-statement send-direct {
  from {
    protocol direct;
    route-filter 10.0.0.16/30 exact;
  }
  then accept;
}

```

**Device B**

```

user@B# show firewall
filter rpf-special-case-dhcp {
  term allow-dhcp {
    from {
      source-address {
        0.0.0.0/32;
      }
      destination-address {
        255.255.255.255/32;
      }
    }
    then {
      count rpf-dhcp-traffic;
      accept;
    }
  }
  term default {
    then {
      log;
      reject;
    }
  }
}

user@B# show interfaces
fe-1/2/0 {
  unit 2 {
    family inet {
      rpf-check fail-filter rpf-special-case-dhcp;
      address 10.0.0.2/30;
    }
  }
}
fe-1/1/1 {
  unit 6 {
    family inet {
      rpf-check fail-filter rpf-special-case-dhcp;
      address 10.0.0.6/30;
    }
  }
}

```

```
}
fe-0/1/1 {
  unit 9 {
    family inet {
      rpf-check fail-filter rpf-special-case-dhcp;
      address 10.0.0.9/30;
    }
  }
}
fe-0/1/0 {
  unit 13 {
    family inet {
      rpf-check fail-filter rpf-special-case-dhcp;
      address 10.0.0.13/30;
    }
  }
}
```

user@B# show protocols

```
ospf {
  area 0.0.0.0 {
    interface fe-0/1/1.9;
    interface fe-0/1/0.13;
  }
}
```

user@B# show routing-options

```
forwarding-table {
  unicast-reverse-path active-paths;
}
```

Enter the configurations on Device C, Device D, and Device E, as shown in [“CLI Quick Configuration” on page 255](#).

---

## Verification

Confirm that the configuration is working properly.

- [Confirm That Unicast RPF Is Enabled on page 260](#)
- [Confirm That the Source Addresses Are Blocked on page 261](#)
- [Confirm That the Source Addresses Are Unblocked on page 261](#)

### ***Confirm That Unicast RPF Is Enabled***

**Purpose** Make sure that the interfaces on Device B have unicast RPF enabled.

**Action** user@B> show interfaces fe-0/1/0.13 extensive

```

Logical interface fe-0/1/0.13 (Index 73) (SNMP ifIndex 553) (Generation 208)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          999390
  Output bytes :        1230122
  Input packets:         12563
  Output packets:        12613
Local statistics:
  Input bytes :          998994
  Output bytes :        1230122
  Input packets:         12563
  Output packets:        12613
Transit statistics:
  Input bytes :           396          0 bps
  Output bytes :           0          0 bps
  Input packets:           0          0 pps
  Output packets:          0          0 pps
Protocol inet, MTU: 1500, Generation: 289, Route table: 22
Flags: Sendbcst-pkt-to-re, uRPF
RPF Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.0.0.12/30, Local: 10.0.0.13, Broadcast: 10.0.0.15,
Generation: 241

```

**Meaning** The **uRPF** flag confirms that unicast RPF is enabled on this interface.

#### *Confirm That the Source Addresses Are Blocked*

**Purpose** Use the **ping** command to make sure that Device B blocks traffic from unexpected source addresses.

**Action** From Device A, ping Device B's interfaces, using 10.0.0.17 as the source address.

```

user@A> ping 10.0.0.6 source 10.0.0.17
PING 10.0.0.6 (10.0.0.6): 56 data bytes
^C
--- 10.0.0.6 ping statistics ---
3 packets transmitted, 0 packets received, 100% packet loss

```

**Meaning** As expected, the ping operation fails.

#### *Confirm That the Source Addresses Are Unblocked*

**Purpose** Use the **ping** command to make sure that Device B does not block traffic when the RPF check is deactivated.

**Action** 1. Deactivate the RPF check on one of the interfaces.

2. Rerun the ping operation.

```
user@B> deactivate interfaces fe-1/1/1.6 family inet rpf-check

user@A> ping 10.0.0.6 source 10.0.0.17
PING 10.0.0.2 (10.0.0.2): 56 data bytes
64 bytes from 10.0.0.2: icmp_seq=0 ttl=63 time=1.316 ms
64 bytes from 10.0.0.2: icmp_seq=1 ttl=63 time=1.263 ms
^C
--- 10.0.0.2 ping statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.263/1.289/1.316/0.027 ms
```

**Meaning** As expected, the ping operation succeeds.

**See Also**

- [Understanding How Unicast Reverse Path Forwarding Prevents Spoofed IP Packet Forwarding on page 253](#)

**Related Documentation**

- [Example: Enabling Indirect Next Hops on the Packet Forwarding Engine](#)

---

## Enabling Source Class and Destination Class Usage

---

- [Source Class and Destination Class Usage on page 262](#)
- [Enabling Source Class and Destination Class Usage on page 266](#)

### Source Class and Destination Class Usage

For interfaces that carry IPv4, IPv6, MPLS, or peer AS billing traffic, you can maintain packet counts based on the entry and exit points for traffic passing through your network. Entry and exit points are identified by source and destination prefixes grouped into disjoint sets defined as *source classes* and *destination classes*. You can define classes based on a variety of parameters, such as routing neighbors, autonomous systems, and route filters.

Source class usage (SCU) counts packets sent to customers by performing lookup on the IP source address. SCU makes it possible to track traffic originating from specific prefixes on the provider core and destined for specific prefixes on the customer edge. You must enable SCU accounting on both the inbound and outbound physical interfaces, and the route for the source of the packet must be in located in the forwarding table.



**NOTE:** SCU and DCU accounting do not work with directly connected interface routes. Source class usage does not count packets coming from sources with direct routes in the forwarding table because of software architecture limitations.

---

Destination class usage (DCU) counts packets from customers by performing lookup of the IP destination address. DCU makes it possible to track traffic originating from the customer edge and destined for specific prefixes on the provider core router.




**NOTE:** We recommend that you stop the network traffic on an interface before you modify the DCU or SCU configuration for that interface. Modifying the DCU or SCU configuration without stopping the traffic might corrupt the DCU or SCU statistics. Before you restart the traffic after modifying the configuration, enter the clear interfaces statistics command.

Figure 14 on page 263 illustrates an Internet service provider (ISP) network. In this topology, you can use DCU to count packets customers send to specific prefixes. For example, you can have three counters, one per customer, that count the packets destined for prefix 210.210/16 and 220.220/16.

You can use SCU to count packets the provider sends from specific prefixes. For example, you can count the packets sent from prefix 210.210/16 and 215.215/16 and transmitted on a specific output interface.

Figure 14: Prefix Accounting with Source and Destination Classes

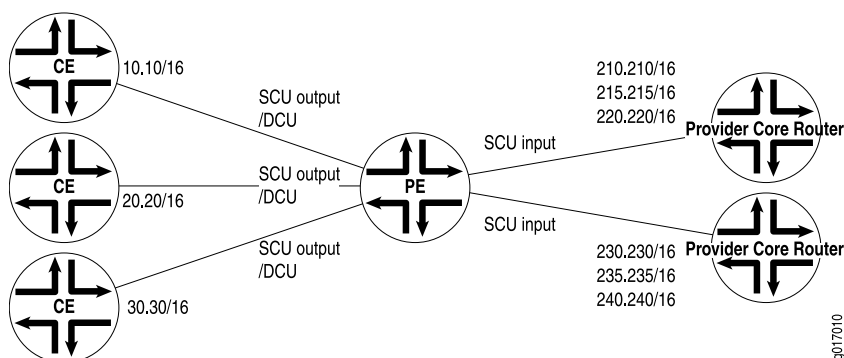

You can configure up to 126 source classes and 126 destination classes. For each interface on which you enable destination class usage and source class usage, the Junos OS maintains an interface-specific counter for each corresponding class up to the 126 class limit.



**NOTE:** For transit packets exiting the router through the tunnel, forwarding path features, such as RPF, forwarding table filtering, source class usage, and destination class usage, are not supported on the interfaces you configure as the output interface for tunnel traffic. For firewall filtering, you must allow the output tunnel packets through the firewall filter applied to input traffic on the interface that is the next-hop interface towards the tunnel destination.

**NOTE:**

Performing DCU accounting when an output service is enabled produces inconsistent behavior in the following configuration:

- Both SCU input and DCU are configured on the packet input interface.
- SCU output is configured on the packet output interface.
- Interface services is enabled on the output interface.

For an incoming packet with source and destination prefixes matching the SCU and DCU classes respectively configured in the router, both SCU and DCU counters will be incremented. This behavior is not harmful or negative. However, it is inconsistent with non-serviced packets, in that only the SCU count will be incremented (because the SCU class ID will override the DCU class ID in this case).

To enable packet counting on an interface, include the **accounting** statement:

```
accounting {  
  destination-class-usage;  
  source-class-usage {  
    direction;  
  }  
}
```

*direction* can be one of the following:

- **input**—Configure at least one expected ingress point.
- **output**—Configure at least one expected egress point.
- **input output**—On a single interface, configure at least one expected ingress point and one expected egress point.

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family (inet | inet6 | mpls)]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family (inet | inet6 | mpls)]

For SCU to work, you must configure at least one input interface and at least one output interface.

The ability to count a single packet for both SCU and DCU accounting depends on the underlying physical interface.

- For traffic over MPC/MIC interfaces, a single incoming packet is counted for both SCU and DCU accounting if both SCU and DCU are configured. To ensure the outgoing packet is counted, include the **source-class-usage output** statements in the configuration of the outgoing interface.

- For traffic over DPC interfaces, an incoming packet is counted only once, and SCU takes priority over DCU. This means that when a packet arrives on an interface on which you include the **source-class-usage input** and **destination-class-usage** statements in the configuration, and when the source and destination both match accounting prefixes, the Junos OS associates the packet with the source class only.

For traffic over MPC interfaces, SCU and DCU accounting is performed after output filters are evaluated. If a packet matches a firewall filter match condition, the packet is included in SCU or DCU accounting except in the case where the action of the matched term is **discard**.

On T Series, M120, and M320 routers, the source class and destination classes are not carried across the router fabric. The implications of this are as follows:

- On T Series, M120, and M320 routers, SCU and DCU accounting is performed before the packet enters the fabric.
- On M7i, M10i, M120, and M320 routers, on MX Series routers with non-MPC, and on T Series routers, SCU and DCU accounting is performed before output filters are evaluated. Consequently, if a packet matches a firewall filter match condition, the packet is included in SCU or DCU accounting; the packet is counted for any term action (including the **discard** action).
- On M120, M320, and T Series routers, the **destination-class** and **source-class** statements are supported at the **[edit firewall family *family-name* filter *filter-name* term *term-name* from]** hierarchy level only for the filter applied to the forwarding table. On M7i, M10i, and MX Series routers, these statements are supported.

Once you enable accounting on an interface, the Junos OS maintains packet counters for that interface, with separate counters for **inet**, **inet6**, and **mpls** protocol families. You must then configure the source class and destination class attributes in policy action statements, which must be included in forwarding-table export policies.



**NOTE:** When configuring policy action statements, you can configure only one source class for each matching route. In other words, more than one source class cannot be applied to the same route.

In Junos OS Release 9.3 and later, you can configure SCU accounting for Layer 3 VPNs configured with the **vrf-table-label** statement. Include the **source-class-usage** statement at the **[edit routing-instances *routing-instance-name* vrf-table-label]** hierarchy level. The **source-class-usage** statement at this hierarchy level is supported only for the virtual routing and forwarding (VRF) instance type.




**NOTE:** DCU counters cannot be enabled on the label-switched interface (LSI) that is created dynamically when the **vrf-table-label** statement is configured within a VRF. For more information, see the *Junos OS VPNs Library for Routing Devices*.

For a complete discussion about source and destination class accounting profiles, see the *Network Management and Monitoring Guide*. For more information about MPLS, see the *MPLS Applications Feature Guide*.

## Enabling Source Class and Destination Class Usage

Figure 15: Prefix Accounting with Source and Destination Classes

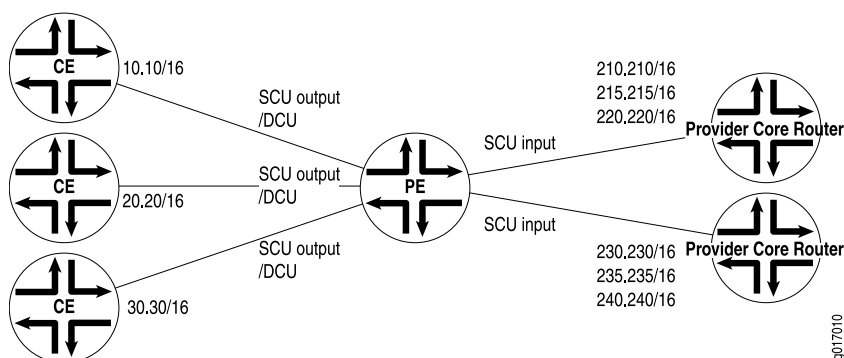

Configure DCU and SCU output on one interface:

```
[edit]
interfaces {
  so-6/1/0 {
    unit 0 {
      family inet {
        accounting {
          destination-class-usage;
          source-class-usage {
            output;
          }
        }
      }
    }
  }
}
```

### 1. Complete SCU Configuration

Source routers A and B use loopback addresses as the prefixes to be monitored. Most of the configuration tasks and actual monitoring occur on transit Router SCU.

The loopback address on Router A contains the origin of the prefix that is to be assigned to source class A on Router SCU. However, no SCU processing happens on this router. Therefore, configure Router A for basic OSPF routing and include your loopback interface and interface **so-0/0/2** in the OSPF process.

### 2. Router A

```
[edit]
interfaces {
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.255.50.2/24;
      }
    }
  }
}
```

```

    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.192.10/32;
    }
  }
}
}
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/2.0;
      interface lo0.0;
    }
  }
}
}

```

### 3. Router SCU

Last, apply the policy to the forwarding table.

Router SCU handles the bulk of the activity in this example. On Router SCU, enable source class usage on the inbound and outbound interfaces at the **[edit interfaces interface-name unit unit-number family inet accounting]** hierarchy level. Make sure you specify the expected traffic: input, output, or, in this case, both.

Next, configure a route filter policy statement that matches the prefixes of the loopback addresses from routers A and B. Include statements in the policy that classify packets from Router A in one group named **scu-class-a** and packets from Router B in a second class named **scu-class-b**. Notice the efficient use of a single policy containing multiple terms.

```

[edit]
interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        accounting {
          source-class-usage {
            input;
            output;
          }
        }
      }
      address 10.255.50.1/24;
    }
  }
}
so-0/0/3 {
  unit 0 {
    family inet {
      accounting {
        source-class-usage {
          input;

```

```
        output;
      }
    }
    address 10.255.10.3/24;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.6.111/32;
    }
  }
}
}
protocols {
  ospf {
    area 0.0.0.0 {
      interface so-0/0/1.0;
      interface so-0/0/3.0;
    }
  }
}
routing-options {
  forwarding-table {
    export scu-policy;
  }
}
policy-options {
  policy-statement scu-policy {
    term 0 {
      from {
        route-filter 10.255.192.0/24 orlonger;
      }
      then source-class scu-class-a;
    }
    term 1 {
      from {
        route-filter 10.255.165.0/24 orlonger;
      }
      then source-class scu-class-b;
    }
  }
}
```

#### 4. Router B

Just as Router A provides a source prefix, Router B's loopback address matches the prefix assigned to **scu-class-b** on Router SCU. Again, no SCU processing happens on this router, so configure Router B for basic OSPF routing and include your loopback interface and interface **so-0/0/4** in the OSPF process.

```
interfaces {
  so-0/0/4 {
    unit 0 {
      family inet {
```

```

        address 10.255.10.4/24;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.165.226/32;
        }
    }
}
protocols {
    ospf {
        area 0.0.0.0 {
            interface so-0/0/4.0;
            interface lo0.0;
        }
    }
}

```

### 5. Enabling Packet Counting for Layer 3 VPNs

You can use SCU and DCU to count packets on Layer 3 VPNs. To enable packet counting for Layer 3 VPN implementations at the egress point of the MPLS tunnel, you must configure a virtual loopback tunnel interface (**vt**) on the PE router, map the virtual routing and forwarding (VRF) instance type to the virtual loopback tunnel interface, and send the traffic received from the VPN out the source class output interface, as shown in the following example:

Configure a virtual loopback tunnel interface on a provider edge router equipped with a tunnel PIC:

```

[edit interfaces]
vt-0/3/0 {
    unit 0 {
        family inet {
            accounting {
                source-class-usage {
                    input;
                }
            }
        }
    }
}

```

6. Map the VRF instance type to the virtual loopback tunnel interface.

In Junos OS Release 9.3 and later, you can configure SCU accounting for Layer 3 VPNs configured with the **vrf-table-label** statement. Include the **source-class-usage** statement at the **[edit routing-instances routing-instance-name vrf-table-label]** hierarchy level. The **source-class-usage** statement at this hierarchy level is supported only for the virtual routing and forwarding (VRF) instance type. DCU is not supported when the **vrf-table-label** statement is configured. For more information, see the *Junos OS VPNs Library for Routing Devices*.

```
[edit routing-instances]
VPN-A {
  instance-type vrf;
  interface at-2/1/1.0;
  interface vt-0/3/0.0;
  route-distinguisher 10.255.14.225:100;
  vrf-import import-policy-A;
  vrf-export export-policy-A;
  protocols {
    bgp {
      group to-r4 {
        local-address 10.27.253.1;
        peer-as 400;
        neighbor 10.27.253.2;
      }
    }
  }
}
```

7. Send traffic received from the VPN out the source class output interface:

```
[edit interfaces]
at-2/1/0 {
  unit 0 {
    family inet {
      accounting {
        source-class-usage {
          output;
        }
      }
    }
  }
}
```

For more information about VPNs, see the *Junos OS VPNs Library for Routing Devices*.  
For more information about virtual loopback tunnel interfaces, see the *Junos OS Services Interfaces Library for Routing Devices*.

- See Also
- [accounting on page 413](#)
  - *destination-classes*
  - [family on page 607](#)
  - [forward-and-send-to-re on page 622](#)

- *source-classes*
- [targeted-broadcast on page 1011](#)
- [unit on page 1059](#)

## Understanding Targeted Broadcast

Targeted broadcast is a process of flooding a target subnet with Layer 3 broadcast IP packets originating from a different subnet. The intent of targeted broadcast is to flood the target subnet with the broadcast packets on a LAN interface without broadcasting to the entire network. Targeted broadcast is configured with various options on the egress interface of the router or switch and the IP packets are broadcast only on the LAN (egress) interface. Targeted broadcast helps you implement remote administration tasks such as backups and wake-on LAN (WOL) on a LAN interface, and supports virtual routing and forwarding (VRF) instances.

Regular Layer 3 broadcast IP packets originating from a subnet are broadcast within the same subnet. When these IP packets reach a different subnet, they are forwarded to the Routing Engine (to be forwarded to other applications). Because of this, remote administration tasks such as backups cannot be performed on a particular subnet through another subnet. As a workaround you can enable targeted broadcast, to forward broadcast packets that originate from a different subnet.

Layer 3 broadcast IP packets have a destination IP address that is a valid broadcast address for the target subnet. These IP packets traverse the network in the same way as unicast IP packets until they reach the destination subnet. In the destination subnet, if the receiving router has targeted broadcast enabled on the egress interface, the IP packets are forwarded to an egress interface and the Routing Engine or to an egress interface only. The IP packets are then translated into broadcast IP packets which flood the target subnet only through the LAN interface (if there is no LAN interface, the packets are discarded), and all hosts on the target subnet receive the IP packets. If targeted broadcast is not enabled on the receiving router, the IP packets are treated as regular Layer 3 broadcast IP packets and are forwarded to the Routing Engine. If targeted broadcast is enabled without any options, the IP packets are forwarded to the Routing Engine.

Targeted broadcast can be configured to forward the IP packets only to an egress interface, which is helpful when the router is flooded with packets to process, or to both an egress interface and the Routing Engine.



**NOTE:** Targeted broadcast does not work when the targeted broadcast option `forward-and-send-to-re` and the traffic sampling option `sampling` are configured on the same egress interface of an M320 router, a T640 router, or an MX960 router. To overcome this scenario, you must either disable one of these options or enable the sampling option with the targeted broadcast option `forward-only` on the egress interface. For information about traffic sampling, see *Configuring Traffic Sampling*.



**NOTE:** Any firewall filter that is configured on the Routing Engine loopback interface (lo0) cannot be applied to IP packets that are forwarded to the Routing Engine as a result of a targeted broadcast. This is because broadcast packets are forwarded as flood next hop and not as local next hop traffic, and you can only apply a firewall filter to local next hop routes for traffic directed towards the Routing Engine.

---

- Related Documentation**
- [Configuring Targeted Broadcast on page 272](#)
  - [targeted-broadcast on page 1011](#)

---

## Configuring Targeted Broadcast

The following sections explain how to configure targeted broadcast on an egress interface and its options:

- [Configuring Targeted Broadcast and Its Options on page 272](#)
- [Display Targeted Broadcast Configuration Options on page 273](#)

### Configuring Targeted Broadcast and Its Options

You can configure targeted broadcast on an egress interface with different options. You can either allow the IP packets destined for a Layer 3 broadcast address to be forwarded on the egress interface and to send a copy of the IP packets to the Routing Engine or you can allow the IP packets to be forwarded on the egress interface only. Note that the packets are broadcast only if the egress interface is a LAN interface.

To configure targeted broadcast and its options:

1. Configure the physical interface.  

```
[edit]  
user@host# set interfaces interface-name
```
2. Configure the logical unit number at the `[edit interfaces interface-name]` hierarchy level.  

```
[edit interfaces interface-name]  
user@host# set unit logical-unit-number
```
3. Configure the protocol family as `inet` at the `[edit interfaces interface-name unit interface-unit-number]` hierarchy level.  

```
[edit interfaces interface-name unit interface--unit-number]  
user@host# set family inet
```
4. Configure targeted broadcast at the `[edit interfaces interface-name unit interface-unit-number family inet]` hierarchy level.  

```
[edit interfaces interface-name unit interface--unit-number family inet]
```

```
user@host# set targeted-broadcast
```

5. Specify one of the following options as per requirement:

- To allow IP packets destined for a Layer 3 broadcast address to be forwarded on the egress interface and to send a copy of the IP packets to the Routing Engine.

```
[edit interfaces interface-name unit interface-unit-number family inet
targeted-broadcast]
user@host# set forward-and-send-to-re
```

- To allow IP packets to be forwarded on the egress interface only.

```
[edit interfaces interface-name unit interface-unit-number family inet
targeted-broadcast]
user@host# set forward-only
```



**NOTE:** Targeted broadcast does not work when the targeted broadcast option `forward-and-send-to-re` and the traffic sampling option `sampling` are configured on the same egress interface of an M320 router, a T640 router, or an MX960 router. To overcome this scenario, you must either disable one of these options or enable the `sampling` option with the targeted broadcast option `forward-only` on the egress interface. For information about traffic sampling, see *Configuring Traffic Sampling*.

## Display Targeted Broadcast Configuration Options

The following topics display targeted broadcast configuration with its various options:

- [Forward IP Packets On the Egress Interface and To the Routing Engine on page 273](#)
- [Forward IP Packets On the Egress Interface Only on page 274](#)

### Forward IP Packets On the Egress Interface and To the Routing Engine

**Purpose** Display the configuration when targeted broadcast is configured on the egress interface to forward the IP packets on the egress interface and to send a copy of the IP packets to the Routing Engine.

**Action** To display the configuration run the `show` command at the `[edit interfaces interface-name unit interface-unit-number family inet]` where the interface name is `ge-2/0/0`, the unit value is set to `0`, the protocol family is set to `inet`.

```
[edit interfaces interface-name unit interface-unit-number family inet]
user@host# show
targeted-broadcast {
    forward-and-send-to-re;
}
```

### Forward IP Packets On the Egress Interface Only

---

**Purpose** Display the configuration when targeted broadcast is configured on the egress interface to forward the IP packets on the egress interface only.

**Action** To display the configuration run the **show** command at the **[edit interfaces *interface-name* unit *interface-unit-number* family inet]** where the interface name is ge-2/0/0, the unit value is set to 0, the protocol family is set to inet.

```
[edit interfaces interface-name unit interface-unit-number family inet]
user@host#show
targeted-broadcast {
    forward-only;
}
```

**Related Documentation**

- [targeted-broadcast on page 1011](#)
- [Understanding Targeted Broadcast on page 271](#)

## CHAPTER 5

# Configuring Circuit and Translational Cross-Connects

- [Circuit and Translational Cross-Connects Overview on page 275](#)
- [Defining the Encapsulation for Switching Cross-Connects on page 277](#)
- [Defining the Connection for Switching Cross-Connects on page 281](#)
- [Configuring MPLS for Switching Cross-Connects on page 281](#)
- [Configuring IS-IS or MPLS Traffic for TCC Interfaces on page 281](#)
- [Configuring ATM-to-Ethernet Interworking on page 282](#)
- [ATM-To-Ethernet Interworking on ATM MICs on page 286](#)
- [Example: Configuring a CCC over Frame Relay Encapsulated Interface on page 287](#)
- [Example: Configuring a TCC on page 288](#)
- [Example: Configuring CCC over Aggregated Ethernet on page 290](#)
- [Example: Configuring a Remote LSP CCC over Aggregated Ethernet on page 291](#)
- [Example: Configuring ATM-to-Ethernet Interworking on page 294](#)
- [Example: Configuring ATM-to-Ethernet Interworking on ATM MIC on page 295](#)
- [Verifying ATM-to-Ethernet Interworking Configuration on ATM MICs on page 300](#)

## Circuit and Translational Cross-Connects Overview

---

Circuit cross-connect (CCC) and translational cross-connect (TCC) allow you to configure transparent connections between two circuits, where a circuit can be a Frame Relay data-link connection identifier (DLCI), an Asynchronous Transfer Mode (ATM) virtual circuit (VC), a Point-to-Point Protocol (PPP) interface, a Cisco High-level Data Link Control (HDLC) interface, or a Multiprotocol Label Switching (MPLS) label-switched path (LSP).

Using CCC or TCC, packets from the source circuit are delivered to the destination circuit with, at most, the Layer 2 address being changed. No other processing, such as header checksums, time-to-live (TTL) decrementing, or protocol processing, is done.

To connect interfaces of the same type, use CCC. To connect unlike interfaces, use TCC.

CCC and TCC circuits fall into three categories: logical interfaces, which include ATM VCs and Frame Relay DLCIs; physical interfaces, which include PPP and Cisco HDLC; and paths, which include LSPs. The three circuit categories provide three types of cross-connect:

- Layer 2 switching (interface-to-interface)—Cross-connects between logical interfaces provide what is essentially Layer 2 switching.
- MPLS tunneling (interface-to-LSP)—Cross-connects between interfaces and LSPs allow you to connect two distant interface circuits by creating MPLS tunnels that use LSPs as the conduit.
- LSP stitching (LSP-to-LSP)—Cross-connects between LSPs provide a way to “stitch” together two label-switched paths, including paths that fall in two different traffic engineering database (TED) areas.

The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first interface.

For most CCC connections that connect interfaces, the interfaces must be of the same type; that is, ATM to ATM, Frame Relay to Frame Relay, PPP to PPP, or Cisco HDLC to Cisco HDLC.


ATM-to-Ethernet interworking cross-connect circuits connect logical interfaces configured on an ATM2 and Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet IQ2 and IQ2-E physical interfaces.

For all TCC connections that connect interfaces, the interfaces can be of unlike types. Mainly, TCC is used for Layer 2.5 virtual private networks (VPNs), but it can also be used as a simple “unlike circuit” switch.

Switching cross-connects join logical interfaces to form what is essentially Layer 2 switching.

[Figure 16 on page 276](#) illustrates a Layer 2 switching circuit cross-connect. In this topology, Router A and Router C have Frame Relay connections to Router B, which is a Juniper Networks router. CCC allows you to configure Router B to act as a Frame Relay (Layer 2) switch. To do this, configure a circuit from Router A to Router C that passes through Router B, effectively configuring Router B as a Frame Relay switch with respect to these routers. This configuration allows Router B to transparently switch packets (frames) between Router A and Router C without regard to the packets’ contents or the Layer 3 protocols. The only processing that Router B performs is to translate DLCI 600 to 750.

**Figure 16: Layer 2 Switching Circuit Cross-Connect**

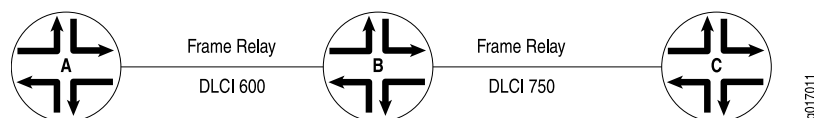

If the Router A-to-Router B and Router B-to-Router C circuits are PPP, for example, the Link Control Protocol and Network Control Protocol exchanges occur between Router A and Router C. These messages are handled transparently by Router B, allowing

Router A and Router C to use various PPP options (such as header or address compression and authentication) that Router B might not support. Similarly, Router A and Router C exchange keepalives, providing circuit-to-circuit connectivity status.

You can configure Layer 2 switching cross-connects on PPP, Cisco HDLC, Frame Relay, Ethernet CCC, Ethernet VLAN, and ATM circuits. With CCC, only like interfaces can be connected in a single cross-connect. With TCC, unlike interfaces can be connected in a single cross-connect. In Layer 2 switching cross-connects, the exchanges take place between point-to-point links.

This chapter discusses the Layer 2 switching cross-connect configuration tasks. For information about MPLS tunneling and LSP stitching, see the *Junos OS MPLS Applications Library for Routing Devices*.

For information about Layer 2 and Layer 2.5 VPNs, see the *Junos OS VPNs Library for Routing Devices*.

For restrictions for MPLS on QFX switches, see *MPLS Feature Support on QFX Series and EX4600 Switches*.

#### **Related Documentation**

- [Defining the Encapsulation for Switching Cross-Connects on page 277](#)
- [Defining the Connection for Switching Cross-Connects on page 281](#)
- [Configuring MPLS for Switching Cross-Connects on page 281](#)
- [Configuring IS-IS or MPLS Traffic for TCC Interfaces on page 281](#)
- [Configuring ATM-to-Ethernet Interworking on page 282](#)
- [Example: Configuring a CCC over Frame Relay Encapsulated Interface on page 287](#)
- [Example: Configuring a TCC on page 288](#)
- [Example: Configuring CCC over Aggregated Ethernet on page 290](#)
- [Example: Configuring a Remote LSP CCC over Aggregated Ethernet on page 291](#)
- [Example: Configuring ATM-to-Ethernet Interworking on page 294](#)

---

## **Defining the Encapsulation for Switching Cross-Connects**

- [Defining the Encapsulation for Switching Cross-Connects on page 277](#)
- [Configuring PPP or Cisco HDLC Circuits on page 278](#)
- [Configuring ATM Circuits on page 278](#)
- [Configuring Frame Relay Circuits on page 278](#)
- [Configuring Ethernet CCC Circuits on page 280](#)
- [Configuring Ethernet VLAN Circuits on page 280](#)

## **Defining the Encapsulation for Switching Cross-Connects**

To configure Layer 2 or Layer 2.5 switching cross-connects, configure the CCC or TCC encapsulation on the router that is acting as the switch (Router B in [Figure 16 on page 276](#)).



**NOTE:** When you use CCC encapsulation, you can configure the `ccc` family only. Likewise, when you use TCC encapsulation, you can configure the `tcc` family only.

This section contains the following topics:

## Configuring PPP or Cisco HDLC Circuits

For PPP or Cisco HDLC circuits, specify the encapsulation by including the **encapsulation** statement at the `[edit interfaces interface-name]` hierarchy level. This statement configures the entire physical device. For these circuits to work, you must configure a logical interface unit 0.

```
[edit interfaces interface-name]  
encapsulation (ppp-ccc | cisco-hdlc-ccc | ppp-tcc | cisco-hdlc-tcc);  
unit 0;
```

## Configuring ATM Circuits

For ATM circuits, include the **vpi** statement `[edit interfaces interface-name atm-options]` hierarchy level:

```
[edit interfaces at-fpc/pic/port]  
atm-options {  
  vpi vpi-identifier;  
}
```

On the logical interface, include the following statements:

```
point-to-point;  
encapsulation (atm-ccc-cell-relay | atm-ccc-vc-mux | atm-tcc-vc-mux | atm-tcc-snap);  
vci vpi-identifier.vci-identifier;
```

You can include the logical interface statements at the following hierarchy levels:

- `[edit interfaces at-fpc/pic/port unit logical-unit-number]`
- `[edit logical-systems logical-system-name interfaces at-fpc/pic/port unit logical-unit-number]`

For each VC, configure whether it is a circuit or a regular logical interface. The default interface type is point-to-point.

## Configuring Frame Relay Circuits

For Frame Relay circuits, include the **encapsulation** statement at the `[edit interfaces interface-name]` hierarchy level:

```
[edit interfaces interface-name]  
encapsulation type;
```

On the logical interface, include the following statements:

```
point-to-point;
```

```
encapsulation type;
dlci dlci-identifier;
```

You can include the logical interface statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

The encapsulation type can be one of the following:

- Flexible Frame Relay (**flexible-frame-relay**)—Intelligent queuing (IQ) interfaces can use flexible Frame Relay encapsulation. You use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any DLCI value from 1 through 1022.
- Frame Relay CCC version (**frame-relay-ccc**)—For E1, E3, SONET/SDH, T1, and T3 interfaces, this encapsulation type is the same as standard Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to CCC. The logical interface must also have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
- Frame Relay TCC version (**frame-relay-tcc**)—Similar to Frame Relay CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
- Extended CCC version (**extended-frame-relay-ccc**)—This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC. The logical interface must have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
- Extended TCC version (**extended-frame-relay-tcc**)—Similar to extended Frame Relay CCC, this encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC, which is used for circuits with different media on either side of the connection.
- Port CCC version (**frame-relay-port-ccc**)—Defined in the IETF document *Frame Relay Encapsulation over Pseudo-Wires* (expired December 2002). This encapsulation type allows you to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with Frame Relay transport. The connection between the two CE routers can be either user-to-network interface (UNI) or network-to-network interface (NNI); this is completely transparent to the PE routers. The logical interface does not require an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.

For each DLCI, configure whether it is a circuit or a regular logical interface. The DLCI for regular interfaces must be from 1 through 511. For CCC and TCC interfaces, it must be from 512 through 1022. This restriction does not apply to IQ interfaces. The default interface type is point to point.

## Configuring Ethernet CCC Circuits

You can configure Ethernet CCC encapsulation on Fast Ethernet, Gigabit Ethernet, and aggregated Ethernet interfaces.



**NOTE:** CCC over aggregated Ethernet requires an M Series Enhanced Flexible PIC Concentrator (FPC).

For Ethernet CCC circuits, specify the encapsulation by including the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level. This statement configures the entire physical device.

```
[edit interfaces interface-name]  
encapsulation ethernet-ccc;  
unit logical-unit-number {  
  ...  
}  
[edit interfaces aex]  
encapsulation ethernet-ccc;  
unit logical-unit-number {  
  ...  
}
```

## Configuring Ethernet VLAN Circuits

You can configure Ethernet virtual local area network (VLAN) circuits on Fast Ethernet, Gigabit Ethernet, and aggregated Ethernet interfaces. For Ethernet VLAN circuits, specify the encapsulation by including the **encapsulation** statement at the **[edit interfaces *interface-name*]** hierarchy level. This statement configures the entire physical device. You must also enable VLAN tagging. To do this, include the following statements:

```
[edit interfaces interface-name]  
vlan-tagging;  
encapsulation (extended-vlan-ccc | vlan-ccc);  
[edit interfaces aex]  
vlan-tagging;  
encapsulation vlan-ccc;
```

On the logical interface, include the following statements:

```
encapsulation vlan-ccc;  
vlan-id number;
```

You can include the logical interface statements at the following hierarchy levels:

- **[edit interfaces *interface-name* unit *logical-unit-number*]**
- **[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]**

Ethernet interfaces in VLAN mode can have multiple logical interfaces. For encapsulation type **vlan-ccc**, VLAN IDs 1 through 511 are reserved for normal VLANs, and VLAN IDs

512 through 1023 are reserved for CCC VLANs. For encapsulation type **extended-vlan-ccc**, VLAN IDs 1 through 4094 are valid. VLAN ID 0 is reserved for tagging the priority of frames.

- See Also**
- [Figure 16 on page 276](#)
  - [Circuit and Translational Cross-Connects Overview on page 275](#)

---

## Defining the Connection for Switching Cross-Connects

To configure Layer 2 switching cross-connects, define the connection between the two circuits. You configure this on the router that is acting as the switch (Router B in [Figure 16 on page 276](#)). The connection joins the interface that comes from the circuit's source to the interface that leads to the circuit's destination. When you specify the interface names, include the logical portion of the name, which corresponds to the logical unit number. The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first interface.

```
[edit protocols]
connections {
  remote-interface-switch connection-name {
    interface interface-name.unit-number;
  }
  lsp-switch connection-name {
    transmit-lsp lsp-number;
    receive-lsp lsp-number;
  }
}
```

---

## Configuring MPLS for Switching Cross-Connects

For Layer 2 switching cross-connects to work, you must configure MPLS. The following is a minimal MPLS configuration:

```
[edit protocols]
mpls {
  interface (interface-name | all);
}
```

For more information, see the *MPLS Applications Feature Guide*.

- Related Documentation**
- [Defining the Connection for Switching Cross-Connects on page 281](#)

---

## Configuring IS-IS or MPLS Traffic for TCC Interfaces

Layer 2.5 VPNs on T Series, M120, MX Series, and M320 routers support IPv4, IS-IS, and MPLS traffic types. By default, IPv4 traffic runs on T Series, M120, MX Series, and M320 routers and over TCC interfaces. To configure IS-IS (ISO traffic) or MPLS traffic on Layer 2.5 VPNs, you must configure the same traffic type on both ends of the Layer 2.5 VPN.



**NOTE:** Some platform and FPC combinations can not pass TCC encapsulated ISO traffic. See *Platforms/FPCs That Cannot Forward TCC Encapsulated ISO Traffic* for details.

To specify which traffic can run over a TCC interface, include the **protocols** statement with the appropriate value (**inet**, **mpls**, and **iso**) at the **[edit interfaces *interface-name* unit *logical-unit-number* family *tcc*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number family tcc]  
protocols [ inet iso mpls ];
```



**NOTE:** Layer 2.5 VPNs running on M Series Multiservice Edge Routers support only IPv4 traffic. IPv6 is not supported on Layer 2.5 VPNs.

When enabling ISO over a Layer 2.5 VPN that is configured on a CE Ethernet interface, you must also include the **point-to-point** statement at the **[edit protocols isis interface *interface-name*]** hierarchy level:

```
[edit protocols isis interface interface-name]  
point-to-point;
```

For more information about Layer 2.5 VPNs, see the *Junos OS VPNs Library for Routing Devices* and the *Translational Cross-Connect and Layer 2.5 VPNs Feature Guide*.

---

## Configuring ATM-to-Ethernet Interworking

- [ATM-to-Ethernet Interworking on page 282](#)
- [Enabling ATM-to-Ethernet Interworking on page 283](#)
- [Configuring the Ethernet Interface on page 283](#)
- [Configuring Ethernet Encapsulation on page 284](#)
- [Configuring the Outer VLAN Identifier on page 284](#)
- [Configuring the Inner VLAN Identifier Range on page 284](#)
- [Configuring the Physical Interface VPI on page 284](#)
- [Configuring the ATM Logical Interface on page 285](#)
- [Configuring the Protocol Family on page 285](#)
- [Configuring the Logical Interface VPI on page 285](#)
- [Configuring the Logical Interface VCI on page 286](#)

### ATM-to-Ethernet Interworking

The ATM-to-Ethernet interworking feature is useful where ATM2 interfaces are used to terminate ATM DSLAM traffic. The ATM traffic can be forwarded with encapsulation type **ccc** (circuit cross-connect) to a local or remote Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet IQ2 and IQ2-E interface or label-switched path (LSP). The ATM VPI and VCI are converted to stacked VLAN inner and outer VLAN tags.

These ATM-to-Ethernet interworking circuits can be mapped to individual logical interfaces configured on an ATM2 IQ interface and Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet IQ2 and IQ2-E physical interface.

The ATM-to-Ethernet interworking cross-connect essentially provides Layer 2 switching, and statistics are reported at the logical interface level.

During conversion from ATM to Ethernet, the least significant 12 bits of the ATM cell VCI are copied to the Ethernet frame inner VLAN tag. Cells received on an ATM logical interface configured with encapsulation type **vlan-vci-ccc** and falling within the configured VCI range are reassembled into packets and forwarded to a designated Ethernet logical interface that is configured with encapsulation type **vlan-vci-ccc**.

During conversion from Ethernet to ATM, the Ethernet frame inner VLAN tags that fall within the configured range, are copied to the least significant 12 bits of the ATM cell VCI. The ATM logical interface uses its configured VPI when segmenting the Ethernet packets into cells.

ATM-to-Ethernet interworking is supported on M120, M320, and T Series routers.

ATM-to-Ethernet interworking is supported on MX Series routers with aggregated Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces. This feature is available on all Enhanced Queuing (EQ) DPCs and Enhanced DPCS for MX Series routers.



**NOTE:** This feature is *not* supported on MX Series routers with ATM interfaces.

For more information on MX Series ATM-to-Ethernet interworking, see the *MX Series Solutions Guide*.

The following sections discuss ATM-to-Ethernet interworking:

## Enabling ATM-to-Ethernet Interworking

To enable the ATM-to-Ethernet interworking cross-connect function, include the **vlan-vci-tagging** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
vlan-vci-tagging;
```

## Configuring the Ethernet Interface

Configure the Ethernet or aggregated Ethernet physical interface by including the **encapsulation** statement with the **vlan-vci-ccc** option at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]  
encapsulation vlan-vci-ccc;
```

When the encapsulation type **vlan-vci-ccc** is configured on the physical interface, all logical interfaces configured on the Ethernet interface must also have the encapsulation type set to **vlan-vci-ccc**.

## Configuring Ethernet Encapsulation

Configure the Ethernet logical interface by including the **encapsulation** statement with the **vlan-vci-ccc** option at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
encapsulation vlan-vci-ccc;
```

The chassis configuration cannot contain the **atm-l2circuit-mode** statement if any logical interfaces are configured with the **vlan-vci-ccc** encapsulation option.

## Configuring the Outer VLAN Identifier

Configure the Ethernet logical interface outer VLAN ID by including the **vlan-id** statement specifying the outer VLAN ID at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
vlan-id outer-vlan-identifier;
```

It is the administrator's responsibility to ensure that the outer VLAN tag and VPI match and the inner VLAN tags fall within the VCI range of the VPI.

The allowable VPI range is from 0 to 255. So the outer VLAN tags must not be configured for values above 255.

## Configuring the Inner VLAN Identifier Range

Configure the Ethernet logical interface inner VLAN ID range by including the **inner-vlan-id-range** statement and specifying the starting VLAN ID and ending VLAN ID at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
inner-vlan-id-range start start-id end end-id;
```

VLAN IDs 0 and 4095 are reserved by IEEE 801.1q and must not be used for the inner or outer VLAN ID.

VCIs 0 through 31 are reserved for ATM management purposes by convention. Therefore inner VLAN IDs 1 through 31 should not be used.

VLAN ID 1 might be used by Ethernet switches for certain bridge management services, so using VLAN ID 1 for the inner or outer VLAN ID is discouraged.

## Configuring the Physical Interface VPI

Configure the ATM physical interface VPI by including the **vpi** statement at the **[edit interfaces *interface-name* atm-options]** hierarchy level:

```
[edit interfaces interface-name atm-options]  
vpi virtual-path-identifier;
```

VPI 0 is reserved, and must not be used.

ATM F4/F5 OAM is not supported for VPIs used in ATM-to-Ethernet interworking cross-connects. Any F4/F5 OAM cells received are discarded.

Only one logical interface may be declared per virtual path specified in the **atm-options** statement hierarchy.

It is not necessary to dedicate all the VPIs of an ATM2 interface for ATM-to-Ethernet interworking cross-connects.

## Configuring the ATM Logical Interface

Configure the ATM logical interface by including the **encapsulation** statement and specifying the encapsulation type **vlan-vci-ccc** at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]
  encapsulation vlan-vci-ccc;
```

An ATM logical interface configured with the encapsulation type **vlan-vci-ccc** only supports the **epd-threshold**, **shaping**, **traps | no-traps**, **disable**, and **description** statements. No other configuration statements are supported. ATM interface CoS features are not supported by logical interfaces configured with the encapsulation type **vlan-vci-ccc**.

The ATM2 OC48 PIC does not support the encapsulation type **vlan-vci-ccc**.

The encapsulation type **vlan-vci-ccc** only supports the **ccc** protocol family. Attempts to configure any other interface protocol family are rejected.

## Configuring the Protocol Family

Configure the ATM logical interface protocol family by including the **family** statement and specifying the **ccc** option at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]
  family ccc;
```

## Configuring the Logical Interface VPI

Configure the ATM logical interface virtual path identifier by including the **vpi** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]
  vpi virtual-path-identifier;
```

VPI 0 is reserved, and must not be used.

It is the administrator's responsibility to ensure the outer VLAN tag and VPI match and the inner VLAN tags fall within the VCI range of the VPI.

Once a VPI is used in an ATM-to-Ethernet interworking cross-connect, it cannot be used with any other logical interface, even if the **vpi.vci** value falls outside the VCI range for the cross-connect.

## Configuring the Logical Interface VCI

Configure the ATM logical interface virtual channel identifier range by including the **vci-range** statement and specifying the starting VCI and ending VCI at the **[edit interfaces interface-name unit logical-unit-number]** hierarchy level:

```
[edit interfaces interface-name unit logical-unit-number]  
vci-range start start-vci end end-vci;
```

Do not use VCIs 0 through 31, which are reserved for ATM management purposes by convention.

- See Also
- [encapsulation on page 573](#)
  - [family on page 607](#)
  - [inner-vlan-id-range on page 673](#)
  - [vci-range on page 1078](#)
  - [vlan-id on page 1080](#)
  - [vlan-vci-tagging on page 1099](#)
  - [vpi \(ATM CCC Cell-Relay Promiscuous Mode\) on page 1099](#)
  - [vpi \(Logical Interface and Interworking\) on page 1101](#)

---

## ATM-To-Ethernet Interworking on ATM MICs

ATM-to-Ethernet interworking supports transmission of ATM packets over Ethernet. It specifically provides support for exchange of Layer 2 and Layer 3 Protocol Data Units (PDUs) between ATM and Ethernet domains. On MX Series 5G Universal Routing Platforms with ATM MICs, you can exchange Ethernet frames between ATM and Ethernet domains over a MPLS pseudowire or a Layer 2 cross-connect by using translational cross connect (TCC). For more information about TCC, see [“Circuit and Translational Cross-Connects Overview” on page 275](#).

Consider the following basic ATM-to-Ethernet Interworking topology where the provider edge router PE1 is connected to an ATM domain and the Provider Edge router PE2 is connected to an Ethernet domain (see Figure 1). The customer edge routers CE1 and CE2 are customer-managed devices. The PE routers are connected by means of an MPLS pseudowire. The ATM traffic on the PE1–CE1 link can comprise untagged Ethernet frames over ATM format. The Ethernet traffic on PE2–CE2 link can comprise untagged, single-VLAN or double-VLAN tagged Ethernet frames depending on the configuration of the PE2 router.

For ATM-to-Ethernet Interworking, the virtual path identifier (VPI) and virtual circuit identifier (VCI) values on the ATM link are mapped to the outer and inner VLAN tag on the Ethernet link. Mapping implies that either the same value is copied or a one-to-one translation is performed. If VLAN translation is enabled, instead of copying the value, a one-to-one translation is performed on the Ethernet facing PE, using a lookup table.

ATM cells that are received on the PE1 router are reassembled into ATM Adaptation Layer 5 (AAL5) logical link control (LLC) frames. The router removes the header and footer and adds two VLAN tags (outer and inner) to the untagged Ethernet payload based on the configuration. The VLAN IDs must correspond to the VPI and VCI of the ATM cell. You must add an MPLS label before transmitting the dual-VLAN-tagged Ethernet frame over the MPLS pseudowire. You can also add other optional MPLS tags.



**NOTE:** If the AAL5 frame sent by CE1 is not encapsulated with LLC and if the untagged Ethernet payload includes the frame check sequence (FCS), PE1 rejects the AAL5 frame. Also, PE1 can transmit and receive only a dual VLAN-tagged Ethernet frame without FCS. Inclusion of FCS can result in packet drops or data corruption.

On the PE2 router, the MPLS label and optional MPLS tags are removed and the Ethernet frame is transmitted toward the CE2 router. You can modify or remove one or both VLAN tags before forwarding the frame to the CE2 router.

## Limitations

Following are the limitations of the ATM-to-Ethernet interworking feature on MX Series routers with ATM MICs:

- The ATM-to-Ethernet interworking feature is not backward compatible or does not interoperate with the ATM-Ethernet interworking feature supported on M Series and T Series Routers. The functionality is the same but the implementation is different.
- The total number of VCIs supported is 4000 for the ATM MIC. This is an existing system limit.
- If an ATM logical interface is configured with **vci-range** of *N* VCIs, then *N* VCIs are deducted from the available pool of 4000 VCIs.
- ATM quality of service (QoS) is not supported with the **vlan-vci-ccc** encapsulation. If you use the **vci-range** statement then the **vlan-vci-ccc** encapsulation supports multiple VCIs on a single logical interface. This is a hardware limitation.


### Related Documentation

- [Example: Configuring ATM-to-Ethernet Interworking on ATM MIC on page 295](#)

## Example: Configuring a CCC over Frame Relay Encapsulated Interface

Configure a full-duplex Layer 2 switching circuit cross-connect between Router A and Router C, using a Juniper Networks router, Router B, as the virtual switch. See the topology in [Figure 17 on page 288](#).

Figure 17: Example Topology of a Switching Circuit Cross-Connect with Frame Relay CCC Encapsulation

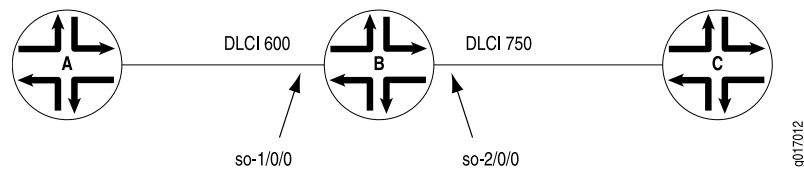

```
[edit]
interfaces {
  so-1/0/0 {
    encapsulation frame-relay-ccc;
    unit 1 {
      point-to-point;
      eui-64 frame-relay-ccc;
      dlci 600;
    }
  }
  so-2/0/0 {
    encapsulation frame-relay-ccc;
    unit 2 {
      point-to-point;
      encapsulation frame-relay-ccc;
      dlci 750;
    }
  }
}
protocols {
  connections {
    interface-switch router-a-router-c {
      interface so-1/0/0.1;
      interface so-2/0/0.2;
    }
  }
  mpls {
    interface all;
  }
}
```

**Related Documentation**

- [Configuring Layer 2 Switching Cross-Connects Using CCC](#)

## Example: Configuring a TCC

Configure a full-duplex switching translational cross-connect with PPP TCC encapsulation between Router A and Router C, using a Juniper Networks router, Router B, as the virtual switch. See the topology in [Figure 18 on page 289](#).

In this topology, Router B has a PPP connection to Router A and an ATM connection to Router C.

Figure 18: Layer 2.5 Switching Translational Cross-Connect



On Router A

```
[edit]
interfaces {
  so-0/1/0 {
    description "to Router B so-1/0/0";
    encapsulation ppp;
    unit 0 {
      family inet {
        address 10.1.1.1/30;
      }
    }
  }
}
```

On Router B

```
[edit]
interfaces {
  so-1/0/0 {
    description "to Router A so-0/1/0";
    encapsulation ppp-tcc;
    unit 0 {
    }
  }
  at-1/1/0 {
    description "to Router C at-0/3/0";
    atm-options {
      vpi 0 maximum-vcs 2000;
    }
    unit 32 {
      vci 32;
      encapsulation atm-tcc-vc-mux;
    }
  }
}
[edit]
protocols {
  mpls {
    interface so-1/0/0.0;
    interface at-1/1/0.32;
  }
  connections {
    interface-switch PPP-to-ATM {
      interface so-1/0/0.0;
      interface at-1/1/0.32;
    }
  }
}
```

On Router C

```
[edit]
interfaces {
```

```

at-0/3/0 {
  description "to Router B at-1/1/0";
  atm-options {
    vpi 0 maximum-vc 2000;
  }
  unit 32 {
    vci 32;
    encapsulation atm-vc-mux;
    family inet {
      address 10.1.1.2/30;
    }
  }
}

```


**Related Documentation**

- [Circuit and Translational Cross-Connects Overview on page 275](#)

## Example: Configuring CCC over Aggregated Ethernet

See the topology in [Figure 19 on page 290](#). In this topology, CE Routers A and C have aggregated Ethernet connections to PE Router B. With CCC, you specify that the circuit from Router A is connected to the circuit from Router C. Router B functions as a cross-connect switch between the two circuits. For a back-to-back connection, all VLAN IDs must be the same on Router A through Router C. You configure Router A and Router C as standard aggregated Ethernet interfaces. For more information about aggregated Ethernet, see *Aggregated Ethernet Interfaces Overview*.

**Figure 19: Interface-to-Interface Circuit Cross-Connect over Aggregated Ethernet Interfaces**

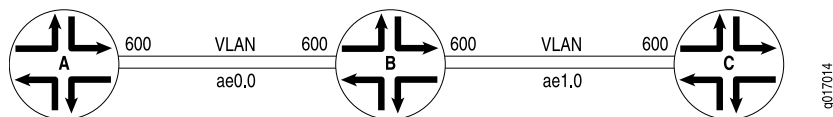

**On Router A**

```

[edit interfaces]
ae0 {
  vlan-tagging;
  aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
  }
  unit 0 {
    vlan-id 600;
    family inet {
      address 192.168.1.1/30;
    }
  }
}

```

**On Router B**

```

[edit interfaces]
ae0 {

```

```

encapsulation vlan-ccc;
vlan-tagging;
aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
}
unit 0 { # CCC switch
    encapsulation vlan-ccc;
    vlan-id 600;
    family ccc;
}
ae1 {
    encapsulation vlan-ccc;
    vlan-tagging;
    aggregated-ether-options {
        minimum-links 1;
        link-speed 100m;
    }
    unit 0 {
        encapsulation vlan-ccc;
        vlan-id 600;
        family ccc;
    }
}
[edit protocols]
mpls {
    interface all;
}
connections {
    interface-switch layer2-cross-connect {
        interface ae0.0;
        interface ae1.0;
    }
}

```

On Router C

```

[edit interfaces]
ae1 {
    vlan-tagging;
    aggregated-ether-options {
        minimum-links 1;
        link-speed 1g;
    }
    unit 0 {
        vlan-id 600;
        family inet {
            address 192.168.1.2/30;
        }
    }
}


```

## Example: Configuring a Remote LSP CCC over Aggregated Ethernet

See the topology in [Figure 20 on page 292](#). In this topology, CE Router G has an aggregated Ethernet connection to PE Router F. CE Router D has an aggregated Ethernet connection

to PE Router E. Router E and Router F have an MPLS LSP between them. With remote CCC, you specify that the circuit from Router D is connected to the circuit from Router G. The circuit from Router D is connected to the LSP on Router E; the circuit from Router G is connected to the LSP on Router F. In other words, **ae0.0** and **ae1.0** are connected using **lsp1-2** and **lsp2-1**. You configure Router D and Router G as standard aggregated Ethernet interfaces. For more information about aggregated Ethernet, see *Aggregated Ethernet Interfaces Overview*.

**Figure 20: Remote Interface-LSP-Interface Circuit Cross-Connect over Aggregated Ethernet Interfaces**

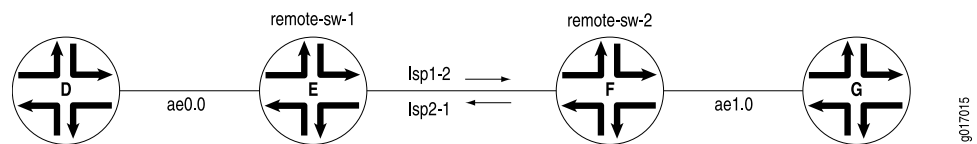

On Router D

```
[edit interface]
ae0 {
  aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
    lacp {
      active;
      periodic fast;
    }
  }
  unit 0 {
    family inet {
      address 192.168.2.1/30;
    }
  }
}
```

On Router E

```
[edit interfaces]
ae0 {
  encapsulation ethernet-ccc;
  aggregated-ether-options {
    minimum-links 1;
    link-speed 100m;
    lacp {
      active;
      periodic fast;
    }
  }
  unit 0 {
    encapsulation vlan-ccc; # default
    family ccc; # default
  }
}

[edit protocols]
mpls {
  interface all;
}

connections {
```

```

remote-interface-switch remote-sw-1 {
  interface ae0.0;
  receive-lsp lsp2_1;
  transmit-lsp lsp1_2;
}

```

**On Router F**

```

[edit interfaces]
ae1 {
  encapsulation ethernet-ccc;
  aggregated-ether-options {
    minimum-links 1;
    link-speed 100m;
    lacp {
      active;
      periodic fast;
    }
  }
}
unit 0 {
  encapsulation vlan-ccc; # default
  family ccc; # default
}
}
[edit protocols]
mpls {
  interface all;
}
connections {
  remote-interface-switch remote-sw-2 {
    interface ae1.0;
    receive-lsp lsp1_2;
    transmit-lsp lsp2_1;
  }
}

```

**On Router G**

```

[edit interface]
ae1 {
  aggregated-ether-options {
    minimum-links 1;
    link-speed 1g;
    lacp {
      active;
      periodic fast;
    }
  }
}
unit 0 {
  family inet {
    address 192.168.2.2/30;
  }
}
}

```

## Example: Configuring ATM-to-Ethernet Interworking

The following example shows the configuration of the ATM and Ethernet interfaces for an ATM-to-Ethernet interworking cross connect. In the example ATM DSLAM traffic is terminated on an ATM2 interface. The ATM traffic is forwarded using encapsulation type **vlan-vci-ccc** to a local Ethernet IQ2 and IQ2-E interface. See the topology in [Figure 21 on page 294](#).

Figure 21: ATM-to-Ethernet Interworking



In this example, the ATM traffic comes from the DSLAM to the router on ATM interface **at-4/0/0** and is forwarded out on Ethernet interface **ge-2/2/1**.

```

[edit interfaces]
ge-2/2/1 {
  vlan-vci-tagging;
  encapsulation vlan-vci-ccc;
  unit 0 {
    encapsulation vlan-vci-ccc;
    vlan-id 100;
    inner-vlan-id-range start 100 end 500;
  }
}
at-4/0/0 {
  atm-options {
    vpi 100;
  }
  unit 0 {
    encapsulation vlan-vci-ccc;
    family ccc;
    vpi 100;
    vci-range start 100 end 500;
  }
}

```

**Related Documentation**

- [Configuring ATM-to-Ethernet Interworking on page 282](#)

## Example: Configuring ATM-to-Ethernet Interworking on ATM MIC

---

This example shows how to configure the ATM and Ethernet interfaces for an ATM-to-Ethernet interworking cross-connect.

- [Requirements on page 295](#)
- [Overview on page 295](#)
- [Configuration on page 296](#)

### Requirements

This example uses the following hardware and software components:

- One MX Series router with ATM MIC
- One MX Series router with Ethernet MIC
- Junos OS Release 16.1R1 or later release

### Overview

Configuring ATM-to-Ethernet Interworking enables exchange of Ethernet frames between an ATM domain and an Ethernet domain on MX Series routers with ATM MIC. The ATM domain can be connected to the Ethernet domain over an MPLS pseudowire.

### Topology

---

Consider a sample topology in which provider edge (PE) router (ATMRouter) is an MX Series router with an ATM MIC and PE router (EthernetRouter) is an MX Series router with an Ethernet MIC. CE1 and CE2 are the customer edge routers or customer-managed devices. ATMRouter and EthernetRouter are connected by means of an MPLS pseudowire. The ATM traffic between ATMRouter and CE1 comprises untagged Ethernet over ATM cells. The Ethernet traffic between EthernetRouter and CE2 comprises double-VLAN-tagged Ethernet frames.

When a packet is sent from CE1 to CE2 (ATM-to-Ethernet), ATMRouter accepts ATM cells from CE1 with virtual circuit identifier (VCI) in the range 10/50 to 10/100 and reassembles ATM cells into AAL5 frames. ATMRouter extracts the Ethernet frame from the AAL5 frame payload. ATMRouter adds two VLAN tags with VLAN IDs corresponding to the virtual path identifier (VPI) and VCI of the received ATM cell. The dual-tagged-Ethernet frame is then encapsulated into a MPLS packet and sent over the pseudowire to EthernetRouter.

EthernetRouter strips the MPLS encapsulation and the dual-VLAN-tagged Ethernet frame is sent to CE2. The outer VLAN ID is rewritten to 20 and the inner VLAN ID remains the same. The packet arrives at CE2.

The reverse happens when a packet is sent from CE2 to CE1.

## Configuration

To enable exchange of Ethernet frames between an ATM domain and an Ethernet domain according to the topology mentioned in the overview section, perform these tasks:

- [Configuring ATMRouter on page 296](#)
- [Configuring EthernetRouter on page 298](#)

---

### Configuring ATMRouter

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure the interfaces on ATMRouter:

1. To configure the MIC to use SONET framing, include the **framing** statement at the **[edit chassis]** hierarchy level.

```
[edit chassis]
user@host# set fpc 1 pic 0 framing sonet port 0 framing sonet speed oc3-stm1
```

2. In configuration mode, go to the **[edit interfaces]** hierarchy level. Configure the Ethernet core interface that connects ATMRouter to EthernetRouter and specify the description of the Ethernet interface for your reference.

```
[edit]
user@host# edit interfaces
user@host# edit ge-1/0/0
user@host# set description PE2Facing
```

3. Configure a logical unit for the Ethernet interface, specify the family as **inet**, and assign an IP address to the interface. Also, specify the family as **mpls** to enable ATMRouter to connect to EthernetRouter.

```
[edit interfaces ge-1/0/0]
user@host# edit unit 0
user@host# set family inet address 192.0.0.1/24
user@host# set family mpls
user@host# top
```

4. In configuration mode, at the **[edit interfaces]** hierarchy level, configure the ATM interface that connects to CE1 and specify the description of the ATM interface for your reference. Also, define the virtual path identifier for this interface by using the **vpi** statement and specify a value from 1 through 255. The value zero (0) is reserved and must not be used.

```
[edit]
user@host# edit interfaces
user@host# edit at-1/2/0
user@host# set description CE1Facing
user@host# set atm-options vpi 10
```

5. Configure a logical unit for the ATM interface. Also, configure the ATM logical interface by specifying the encapsulation and the protocol family. The encapsulation type **vlan-vci-vcc** supports only the **ccc** protocol family. Any attempts to configure any other interface protocol family is rejected.

```
[edit interfaces at-1/2/0]
user@host# edit unit 0
user@host# set encapsulation vlan-vci-vcc family ccc
```

6. Configure the VPI and VCI for the logical interface. The VPI value 0 is reserved and must not be used. VCI values from 0 through 31 are reserved for ATM management purposes by convention.

```
[edit interfaces at-1/2/0 unit 0]
user@host# set vpi 10 vci-range start 100 end 110
user@host# top
```

7. Configure the physical loopback interface at the **[edit interfaces]** hierarchy level.

```
[edit]
user@host# set interfaces lo0 unit 0 family inet address 198.51.100.1/32
```

8. Configure the route identifier that specifies the routing device's IP address. The router identifier is used by BGP and OSPF to identify the routing device from which a packet originated. The router identifier is usually the IP address of the local routing device. If you do not configure a router identifier, the IP address of the first interface to come online is used. This is usually the loopback interface. Otherwise, the first hardware interface with an IP address is used.

```
[edit]
user@host # set router-options router-id 198.51.100.1
```

9. At the **[edit protocols]** hierarchy level, configure the interface on which to configure MPLS as well as the loopback interface.

```
[edit protocols]
user@host# edit mpls
user@host# set interface ge-1/0/0.0
user@host# set interface lo0.0
user@host# top
```

10. At the **[edit protocols]** hierarchy level, configure a single-area OSPF network by specifying the area ID and associated interfaces (Ethernet interface and the loopback interface).

```
[edit protocols]
user@host# edit ospf
user@host# set area 0.0.0.0 interface ge-1/0/0.0
user@host# set area 0.0.0.0 interface lo0.0
user@host# top
```

11. Create an LDP instance on the Ethernet interface and the loopback interface at the **[edit]** hierarchy level. LDP is required as the signaling protocol for Layer 2 circuits.

```
[edit]
user@host# edit protocols ldp
user@host# set interface ge-1/0/0.0
user@host# set interface lo0.0
user@host# top
```

12. Establish the Layer 2 circuit by specifying the **l2circuit** statement at the **[edit protocols]** hierarchy level. The neighbor parameter specifies the IP address of the PE neighbor. The interface name refers to the local CE-facing interface that forms the Layer 2 circuit. The VCI ID must match the ID of the PE neighbor.

```
[edit]
user@host# edit protocols l2circuit
user@host# edit neighbor 198.51.100.2 interface at-1/2/0.0
user@host# set static incoming label 1000000 outgoing label 1000000
user@host# set virtual-circuit-id 5
user@host# set no-control-word
user@host# set ignore-encapsulation-mismatch
user@host# set ignore-mtu-mismatch
```

---

### Configuring EthernetRouter

---

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure the interfaces on EthernetRouter:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level. Configure the Ethernet core interface that connects EthernetRouter to ATMRouter and specify the description of the Ethernet interface for your reference.

```
[edit]
user@host# edit interfaces
user@host# edit ge-1/0/0
user@host# set description PE1Facing
```

2. Configure a logical unit for the Ethernet interface and specify the family as **inet** and assign an IP address to the Ethernet interface. Also, specify the family as **mpls** to enable EthernetRouter to connect to ATMRouter.

```
[edit interfaces ge-1/0/0]
user@host# edit unit 0
user@host# set family inet address 192.0.0.2/24
user@host# set family mpls
user@host# top
```

3. At the **[edit interfaces]** hierarchy level, configure the Ethernet interface that connects to CE2 and specify the description of the interface for your reference. Also, specify

**flexible-vlan-tagging** to support transmission of 802.1Q VLAN single-tag and dual-tag frames on the same port. Specify **extended-vlan-ccc** as the encapsulation to enable tagging for translational cross-connect (TCC).

```
[edit]
user@host# edit interfaces
user@host# edit ge-1/0/1
user@host# set description CE2Facing
user@host# set flexible-vlan-tagging
user@ost# set encapsulation extended-vlan-ccc
user@host# set gigether-options ethernet-switch-profile tag-protocol-id [0x8100
0x9100 0x88a8]
```

4. Configure a logical unit for the Ethernet interface. Also, configure mixed tagging. Mixed tagging enables you to configure two logical interfaces on the same Ethernet port, one with single-tag framing and one with dual-tag framing. You can also specify the protocol family.

```
[edit interfaces ge-1/0/1]
user@host# edit unit 0
user@host# set vlan-tags outer 0x88a8.10 inner-range 0x8100.100-110
user2host# set family ccc;
```

5. Configure the physical loopback interface at the **[edit interfaces]** hierarchy level.

```
[edit]
user@host# set interfaces lo0 unit 0 family inet address 198.51.100.2/32
```

6. Configure the route identifier that specifies the routing device's IP address. The router identifier is used by BGP and OSPF to identify the routing device from which a packet originated. The router identifier is usually the IP address of the local routing device. If you do not configure a router identifier, the IP address of the first interface to come online is used. This is usually the loopback interface. Otherwise, the first hardware interface with an IP address is used.

```
[edit]
user@host # set router-options router-id 198.51.100.2
```

7. At the **[edit protocols]** hierarchy level, configure the interface on which to configure MPLS as well as the loopback interface.

```
[edit protocols]
user@host# edit mpls
user@host# set interface ge-1/0/0.0
user@host# set interface lo0.0
user@host# top
```

8. At the **[edit protocols]** hierarchy level, configure a single-area OSPF network by specifying the area ID and associated interfaces (Ethernet interface and the loopback interface).

```
[edit protocols]
user@host# edit ospf
```

```
user@host# set area 0.0.0.0 interface ge-1/0/0.0
user@host# set area 0.0.0.0 interface lo0.0
user@host# top
```

9. Create an LDP instance on the Ethernet interface and the loopback interface at the **[edit]** hierarchy level. LDP is required as the signaling protocol for Layer 2 circuits.

```
[edit]
user@host# edit protocols ldp
user@host# set interface ge-1/0/0.0
user@host# set interface lo0.0
user@host# top
```

10. Establish the Layer 2 circuit by specifying the **l2circuit** statement at the **[edit protocols]** hierarchy level. The neighbor parameter specifies the IP address of the PE neighbor. The interface name refers to the local CE-facing interface that forms the Layer 2 circuit. The VCI ID must match the ID of the PE neighbor.

```
[edit]
user@host# edit protocols l2circuit
user@host# edit neighbor 198.51.100.1 interface ge-1/0/1.0
user@host# set static incoming label 1000000 outgoing label 1000000
user@host# set virtual-circuit-id 5
user@host# set no-control-word
user@host# set ignore-encapsulation-mismatch
user@host# set ignore-mtu-mismatch
```

- Related Documentation**
- [ATM-To-Ethernet Interworking on ATM MICs on page 286](#)
  - [Verifying ATM-to-Ethernet Interworking Configuration on ATM MICs on page 300](#)

---

## Verifying ATM-to-Ethernet Interworking Configuration on ATM MICs

To verify that the ATM-to-Ethernet interworking feature is configured correctly, perform these tasks on both the routers:

- [Verifying That The ATM Interface on Router1 Is Configured Correctly on page 301](#)
- [Verifying The Status of the MIC on Router1 on page 301](#)
- [Verify That OSPF Configuration on Router1 Is Accurate on page 301](#)
- [Verify That LDP Configuration on Router1 Is Accurate on page 302](#)
- [Verify That Layer 2 Virtual Circuit Session Configuration on Router1 Is Accurate on page 302](#)
- [Verifying That the Ethernet Interface on Router2 Is Configured Correctly on page 303](#)
- [Verifying the Status of the MIC on Router2 on page 303](#)
- [Verify That OSPF Configuration on Router2 Is Accurate on page 303](#)

- [Verify That LDP Configuration on Router2 Is Accurate on page 304](#)
- [Verify That Layer 2 Virtual Circuit Session Configuration on Router2 Is Accurate on page 304](#)

## Verifying That The ATM Interface on Router1 Is Configured Correctly

**Purpose** To verify that the ATM interface (at-1/2/0) on Router1 is configured correctly.

**Action** From operational mode, enter the **show interfaces** command.

```
user@host> show interfaces at-1/2/0 terse
Interface          Admin Link Proto  Local          Remote
at-1/2/0           up   up
at-1/2/0.0         up   up   ccc
at-1/2/0.32767     up   up
```

**Meaning** The ATM interface on Router1 is operational.

## Verifying The Status of the MIC on Router1

**Purpose** To verify the status of the MIC.

**Action** From operational mode, enter the **show chassis fpc pic-status** command.

```
user@host> show chassis fpc pic-status
Slot 0 Online
  PIC 2 Online 10x 1GE(LAN) -EH SFP
  PIC 3 Online 10x 1GE(LAN) -EH SFP
Slot 1 Online
  PIC 0 Online 2x0C12/8x0C3 CC-CE
  PIC 2 Online 10x 1GE(LAN) SFP
  PIC 3 Online 10x 1GE(LAN) SFP
Slot 2 Online
  PIC 0 Online 4x 10GE(LAN) SFP+
```

**Meaning** ATM MIC on FPC slot 1 is online and operational.

## Verify That OSPF Configuration on Router1 Is Accurate

**Purpose** To verify that routers are adjacent and able to exchange OSPF data.

**Action** From operational mode, enter the **show ospf neighbor** command.

```
user@host> show ospf neighbor
Address      Interface      State      ID              Pri  Dead
192.0.0.1    ge-1/0/0.0     Full       198.51.100.2    128  36
```

**Meaning** The adjacent router is online and can accept OSPF data.

## Verify That LDP Configuration on Router1 Is Accurate

**Purpose** To view LDP session information.

**Action** From operational mode, enter the **show ldp session** command.

```
user@host> show ldp session
Address State Connection Hold time Adv. Mode
198.51.100.2 Operational Open 26 DU
```

**Meaning** The output indicates that the session is operational and that the connection is open. It also indicates that the session will close in 26 seconds.

## Verify That Layer 2 Virtual Circuit Session Configuration on Router1 Is Accurate

**Purpose** To view the Layer 2 virtual circuits from the local PE router (Router1) to its neighbors.

**Action** From operational mode, enter the **show l2circuit connections** command.

```
user@host> show l2circuit connections
Layer-2 Circuit Connections:
Legend for connection status (St)
EI -- encapsulation invalid NP -- interface h/w not present
MM -- mtu mismatch Dn -- down
EM -- encapsulation mismatch VC-Dn -- Virtual circuit Down
CM -- control-word mismatch Up -- operational
VM -- vlan id mismatch CF -- Call admission control failure
OL -- no outgoing label IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC TM -- TDM misconfiguration
BK -- Backup Connection ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down RS -- remote site standby
RD -- remote site signaled down HS -- Hot-standby Connection
XX -- unknown
Legend for interface status
Up -- operational
Dn -- down

Neighbor: 198.51.100.2
Interface Type St Time last up # Up
trans
at-1/0/0.0(vc 5) rmt Up May 24 22:01:44 2016
1
Remote PE: 198.51.100.2, Negotiated control-word: No Encapsulation:
VLAN
Incoming label: 299776, Outgoing label: 300192
Negotiated PW status TLV: No
Local interface: at-1/0/0.0, Status: Up, Encapsulation: VLAN Qin-Q
```

and VCI Interworking  
Flow Label Transmit: No, Flow Label Receive: No

**Meaning** The command output displays the Layer 2 virtual circuits from Router1 to its neighbors.

## Verifying That the Ethernet Interface on Router2 Is Configured Correctly

**Purpose** To verify that the Ethernet interface (ge-1/0/1) on Router2 is configured correctly.

**Action** From operational mode, enter the **show interfaces** command.

```
user@host> show interfaces ge-1/0/1 terse
Interface Admin Link Proto Local Remote
ge-1/0/1      up   up
ge-1/0/1.0    up   up   ccc
ge-1/0/1.32767 up   up   multiservice
```

**Meaning** The Ethernet interface on Router2 is operational.

## Verifying the Status of the MIC on Router2

**Purpose** To verify the status of the MIC.

**Action** From operational mode, enter the **show chassis fpc pic-status** command.

```
user@host> show chassis fpc pic-status
Slot 2 Online MPC Type 1 3D Q
PIC 0 Online 10x 1GE(LAN) SFP
PIC 1 Online 10x 1GE(LAN) SFP
PIC 2 Online 2x0C12/8x0C3 CC-CE
PIC 0 Online 4x 10GE(LAN) SFP+
```

**Meaning** MIC 2 on MPC slot 2 is online and operational.

## Verify That OSPF Configuration on Router2 Is Accurate

**Purpose** To verify that routers are adjacent and able to exchange OSPF data.

**Action** From operational mode, enter the **show ospf neighbor** command.

```
user@host> show ospf neighbor
Address      Interface      State      ID              Pri  Dead
192.0.0.1    ge-1/0/0.0    Full      198.51.100.0    128  32
```

**Meaning** The adjacent router is online and can accept OSPF data.

### Verify That LDP Configuration on Router2 Is Accurate

**Purpose** To view LDP session information.

**Action** From operational mode, enter the **show ldp session** command.

```
user@host> show ldp session
Address State Connection Hold time Adv. Mode
198.51.100.0 Operational Open 22 DU
```

**Meaning** The output indicates that the session is operational and that the connection is open. It also indicates that the session will close in 22 seconds.

### Verify That Layer 2 Virtual Circuit Session Configuration on Router2 Is Accurate

**Purpose** To view the Layer 2 virtual circuits from the local PE router (Router2) to its neighbors.

**Action** From operational mode, enter the **show l2circuit connections** command.

```
user@host> show l2circuit connections
Layer-2 Circuit Connections:
Legend for connection status (St)
EI -- encapsulation invalid NP -- interface h/w not present
MM -- mtu mismatch Dn -- down
EM -- encapsulation mismatch VC-Dn -- Virtual circuit Down
CM -- control-word mismatch Up -- operational
VM -- vlan id mismatch CF -- Call admission control failure
OL -- no outgoing label IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC TM -- TDM misconfiguration
BK -- Backup Connection ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down RS -- remote site standby
RD -- remote site signaled down HS -- Hot-standby Connection
XX -- unknown
Legend for interface status
Up -- operational
Dn -- down

Neighbor: 198.51.100.0
Interface Type St Time last up # Up
trans
ge-1/0/1.0(vc 5) rmt Up May 24 22:01:45 2016
1
Remote PE: 198.51.100.0, Negotiated control-word: No Encapsulation:
VLAN Qin-Q and VCI Interworking
Incoming label: 300192, Outgoing label: 299776 Negotiated PW
status TLV: No
Local interface: ge-1/0/1.0, Status: Up, Encapsulation: VLAN
Flow Label Transmit: No, Flow Label Receive: No
```

**Meaning** The command output displays the Layer 2 virtual circuits from Router2 to its neighbors.

- Related Documentation**
- [ATM-To-Ethernet Interworking on ATM MICs on page 286](#)
  - [Example: Configuring ATM-to-Ethernet Interworking on ATM MIC on page 295](#)



## PART 2

# Special Router Interfaces

- [Configuring Discard Interfaces on page 309](#)
- [Configuring IP Demultiplexing Interfaces on page 313](#)
- [Configuring the Loopback Interface on page 327](#)



## CHAPTER 6

# Configuring Discard Interfaces

- [Discard Interfaces Overview on page 309](#)
- [Configuring Discard Interfaces on page 310](#)

### Discard Interfaces Overview

---

The discard interface *dsc* is not a physical interface, but a virtual interface that discards packets.

The following sections explain discard interfaces in detail:

- [Understanding Discard Interfaces on page 309](#)
- [Guidelines to Follow When Configuring a Discard Interface on page 309](#)

### Understanding Discard Interfaces

The discard interface allows you to identify the ingress point of a denial-of-service (DoS) attack. When your network is under attack, the target host IP address is identified, and the local policy forwards attacking packets to the discard interface. When traffic is routed out of the discard interface, the traffic is silently discarded.

The discard interface allows you to protect a network from DoS attacks by identifying the target IP address that is being attacked and configuring a policy to forward all packets to a discard interface. All packets forwarded to the discard interface are dropped. See *Example: Forwarding Packets to the Discard Interface*.

You can configure the **inet** family protocol on the discard interface, which allows you to apply an output filter to the interface. If you apply an output filter to the interface, the action specified by the filter is executed before the traffic is discarded.

Once you configure a discard interface, you must then configure a local policy to forward attacking traffic to the discard interface.

### Guidelines to Follow When Configuring a Discard Interface

Keep the following guidelines in mind when configuring the discard interface:

- Only the logical interface unit 0 is supported.
- The **filter** and **address** statements are optional.

- Although you can configure an input filter and a filter group, these configuration statements have no effect because traffic is not transmitted from the discard interface.
- The discard interface does not support class of service (CoS).

**Related  
Documentation**

- [Configuring Discard Interfaces on page 310](#)
- [Example: Forwarding Packets to the Discard Interface](#)

---

## Configuring Discard Interfaces

The discard (dsc) interface is not a physical interface, but a virtual interface that discards packets. You can configure one discard interface. This interface allows you to identify the ingress point of a denial-of-service (DoS) attack. When your network is under attack, the target host IP address is identified, and the local policy forwards attacking packets to the discard interface. Traffic routed out of the discard interface is silently discarded.

The following sections explain how to forward packets to a discard interface by configuring a discard interface with an input filter and an output filter along with an input policy to associate a community with the discard interface and an output policy to set up the community on the routes injected into the network:

- [Configure a Discard Interface on page 310](#)
- [Configure an Input Policy on page 311](#)
- [Configure an Output Policy on page 312](#)

### Configure a Discard Interface

To configure a discard interface:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level.

```
[edit]
user@host# edit interfaces
```

2. Configure the discard interface.

```
[edit interfaces]
user@host# edit dsc
```

3. Configure the logical interface and the protocol family.

```
[edit interfaces dsc]
user@host# edit unit 0 family family
```

4. Configure an input filter to be applied to received packets.

```
[edit interfaces dsc unit 0 family family]
user@host# set filter input filter-name
```

5. Configure an output filter to be applied to transmitted packets.

```
[edit interfaces dsc unit 0 family family]
user@host# set filter output filter-name
```

6. Configure the interface IP address and the remote address of the connection.

```
[edit interfaces dsc unit 0 family family]
user@host# set address ip-address destination ip-address
```

7. Commit the configuration and go to the top of the hierarchy level.

```
[edit interfaces dsc unit 0 family family]
user@host# commit
user@host# top
```

## Configure an Input Policy

You must configure an input policy to associate a community with the discard interface.

To configure an input policy to associate a community with the discard interface:

1. In configuration mode, go to the **[edit policy-options]** hierarchy level.

```
[edit]
user@host# edit policy-options
```

2. Configure the BGP community information option with a name and configure the number of community members as needed.

```
[edit policy-options]
user@host# set community community-name members community-id
```

3. Configure a routing policy.

```
[edit policy-options]
user@host# edit policy-statement statement-name
```

4. Configure a policy term with a name.

```
[edit policy-options policy-statement statement-name]
user@host# edit term term-variable
```

5. Configure the conditions to match the source of a route with the **from** statement with the BGP community members.

```
[edit policy-options policy-statement statement-name term term-variable]
user@host# set from community value
```

6. Configure the action that is to be taken when the if and to conditions match with the **then** statement. In this case, configure the next-hop address of the remote end of the point-to-point interface and accept the action.

```
[edit policy-options policy-statement statement-name term term-variable]
user@host# set then next-hop address
```

```
user@host# set then accept
```

7. Commit the configuration and go to the top of the hierarchy level.

```
[edit policy-options policy-statement statement-name term term-variable]  
user@host# commit  
user@host# top
```

## Configure an Output Policy

You must configure an output policy to set up the community on the routes injected into the network.

To configure an output policy.

1. In configuration mode, go to the **[edit policy-options]** hierarchy level.

```
[edit]  
user@host# edit policy-options
```

2. Configure a routing policy.

```
[edit policy-options]  
user@host# edit policy-statement statement-name
```

3. Configure a policy term with a name.

```
[edit policy-options policy-statement statement-name]  
user@host# edit term term-variable
```

4. Configure the list of prefix-lists of routes to match with a name.

```
[edit policy-options policy-statement statement-name term term-variable]  
user@host# set from prefix-list name
```

5. Configure the action that is to be taken when the if and to conditions match with the **then** statement. In this case, configure the BGP community properties (set, add, and delete) associated with a route.

```
[edit policy-options policy-statement statement-name term term-variable]  
user@host# set then community (set | add | delete) community-name
```

6. Commit the configuration and go to the top of the hierarchy level.

```
[edit interfaces dsc unit 0 family family]  
user@host# commit  
user@host# top
```

**Related Documentation** • [Discard Interfaces Overview on page 309](#)

## CHAPTER 7

# Configuring IP Demultiplexing Interfaces

- [Demultiplexing Interface Overview on page 313](#)
- [Configuring an IP Demultiplexing Interface on page 316](#)
- [Configuring a VLAN Demultiplexing Interface on page 320](#)

## Demultiplexing Interface Overview

---

Demultiplexing (demux) interfaces are logical interfaces that share a common, underlying interface. You can create logical subscriber interfaces using static or dynamic demultiplexing interfaces. In addition, you can use IP demultiplexing interfaces or VLAN demultiplexing interfaces when creating logical subscriber interfaces.

Demux interfaces are supported on M120 or MX Series routers only.

Demux interfaces support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.



**NOTE:** You can also configure demux interfaces dynamically. For information about how to configure dynamic IP demux or dynamic VLAN demux interfaces, see *Configuring Dynamic Subscriber Interfaces Using IP Demux Interfaces in Dynamic Profiles* or *Configuring Dynamic Subscriber Interfaces Using VLAN Demux Interfaces in Dynamic Profiles*.

To configure static demux interfaces, see “[Configuring a VLAN Demultiplexing Interface](#)” on page 320 and “[Configuring an IP Demultiplexing Interface](#)” on page 316.

- [IP Demux Interface Overview on page 313](#)
- [VLAN Demux Interface Overview on page 314](#)
- [Guidelines to Remember When Configuring A Demux Interface on page 314](#)
- [MAC Address Validation on Static Demux Interfaces on page 315](#)

## IP Demux Interface Overview

IP demux interfaces use the IP source address or IP destination address to demultiplex received packets when the subscriber is not uniquely identified by a Layer 2 circuit.

To determine which IP demux interface to use, the destination or source prefix is matched against the destination or source address of packets that the underlying interface receives. The underlying interface family type must match the demux interface prefix type.

## VLAN Demux Interface Overview

VLAN demux interfaces use the VLAN ID to demultiplex received packets when the subscriber is not uniquely identified. A VLAN demux interface uses an underlying logical interface to receive packets.

To determine which VLAN demux interface to use, the VLAN ID is matched against that which the underlying interface receives.



**NOTE:** VLAN demux subscriber interfaces over aggregated Ethernet physical interfaces are supported only for MX Series routers that have only Trio MPCs installed. If the router has other MPCs in addition to Trio MPCs, the CLI accepts the configuration but errors are reported when the subscriber interfaces are brought up.

## Guidelines to Remember When Configuring A Demux Interface

Keep the following guidelines in mind when configuring the demux interface:

- Demux interfaces are supported on M120 or MX Series routers only.
- You can configure only one **demux0** interface per chassis, but you can define logical demux interfaces on top of it (for example, **demux0.1**, **demux0.2**, and so on).
- If the address in a received packet does not match any demux prefix, the packet is logically received on the underlying interface. For this reason, the underlying interface is often referred to as the *primary* interface.
- [Points to Remember When Configuring an IP Demux Interface on page 314](#)
- [Points to Remember When Configuring a VLAN Demux Interface on page 315](#)

### Points to Remember When Configuring an IP Demux Interface

---

In addition to the guidelines in “[Guidelines to Remember When Configuring A Demux Interface](#)” on page 314, the following guidelines are to be noted when configuring an IP demux interface:

- You must associate demux interfaces with an underlying logical interface.



**NOTE:** IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

- The demux underlying interface must reside on the same logical system as the demux interfaces that you configure over it.

- IP demux interfaces currently supports the Internet Protocol version 4 (IPv4) suite inet and Internet Protocol version 6 (IPv6) suite inet6 family types.
- You can configure more than one demux prefix for a given demux unit. However, you cannot configure the exact same demux prefix on two different demux units with the same underlying interface.
- You can configure overlapping demux prefixes on two different demux units with the same underlying prefix. However, under this configuration, best match rules apply (in other words, the most specific prefix wins).

### Points to Remember When Configuring a VLAN Demux Interface

In addition to the guidelines in “[Guidelines to Remember When Configuring A Demux Interface](#)” on page 314, the following guidelines are to be noted when configuring a VLAN demux interface:

- You must associate VLAN demux interfaces with an underlying logical interface.



**NOTE:** VLAN demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

- The demux underlying interface must reside on the same logical system as the demux interfaces that you configure over it.
- VLAN demux interfaces currently supports the Internet Protocol version 4 (IPv4) suite inet and Internet Protocol version 6 (IPv6) suite inet6 family types.

### MAC Address Validation on Static Demux Interfaces

MAC address validation enables the router to validate that received packets contain a trusted IP source and an Ethernet MAC source address.

MAC address validation is supported on static demux interfaces on MX Series routers only.

There are two types of MAC address validation that you can configure:

- [Loose on page 315](#)
- [Strict on page 316](#)

#### Loose

Forwards packets when both the IP source address and the MAC source address match one of the trusted address tuples.

Drops packets when the IP source address matches one of the trusted tuples, but the MAC address does not support the MAC address of the tuple

Continues to forward packets when the source address of the incoming packet does not match any of the trusted IP addresses.

### Strict

---

Forwards packets when both the IP source address and the MAC source address match one of the trusted address tuples.

Drops packets when the MAC address does not match the tuple's MAC source address, or when IP source address of the incoming packet does not match any of the trusted IP addresses.

#### Related Documentation

- [Associating VLAN IDs to VLAN Demux Interfaces](#)
- [Binding VLAN IDs to Logical Interfaces](#)
- [Configuring an IP Demultiplexing Interface on page 316](#)
- [Configuring a VLAN Demultiplexing Interface on page 320](#)
- [Subscriber Interfaces and Demultiplexing Overview](#)

## Configuring an IP Demultiplexing Interface

---

Demultiplexing (demux) interfaces are logical interfaces that share a common, underlying interface. You can configure IP demultiplexing interfaces or VLAN demultiplexing interfaces.

To configure an IP demux interface, you must configure the demux prefixes that are used by the underlying interface and then configure the IP demultiplexing interface as explained in the following tasks:

1. [Configuring an IP Demux Underlying Interface on page 316](#)
2. [Configuring the IP Demux Interface on page 318](#)
3. [Configuring MAC Address Validation on Static IP Demux Interfaces on page 320](#)

### Configuring an IP Demux Underlying Interface

An IP demux interface uses an underlying logical interface to receive packets. To determine which IP demux interface to use, the destination or source prefix is matched against the destination or source address of packets that the underlying interface receives. The underlying interface family type must match the demux interface prefix type.



**NOTE:** IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

---

To configure a logical interface as an IP demux underlying interface with demux source:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]  
user@host# edit interfaces
```

2. Configure the interface as fe-x/y/z and the logical interface with the **unit** statement. Note that IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces. In this procedure, we show a Fast Ethernet interface as an example.

```
[edit interfaces]
user@host# edit fe-x/y/z unit logical-unit-number
```

3. Configure the logical demux source family type on the IP demux underlying interface as inet or inet6, or both.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set demux-source (inet | inet6)
```

or

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set demux-source [inet inet6]
```

4. (Optional) To improve datapath performance for DHCPv4 subscribers, specify that only subscribers with 32-bit prefixes are allowed to come up on the interface.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set host-prefix-only
```



**NOTE:** This step requires that you specify the **demux-source** as only **inet**. A commit error occurs if you specify only **inet6** or both **inet** and **inet6**.

5. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# commit
user@host# top
```

To configure a logical interface as an IP demux underlying interface with demux destination:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as fe-x/y/z and the logical interface with the **unit** statement. Note that IP demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

```
[edit interfaces]
user@host# edit fe-x/y/z unit logical-unit-number unit logical-unit-number
```

3. Configure the logical demux destination family type on the IP demux underlying interface as inet or inet6.

```
[edit interfaces fe-x/y/z unit logical-unit-number]  
user@host# set demux-destination (inet | inet6)
```

4. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces fe-x/y/z unit logical-unit-number]  
user@host# commit  
user@host# top
```

## Configuring the IP Demux Interface

You can configure one or more logical demux source prefixes or destination prefixes after specifying an underlying interface for the static demux interface to use. This underlying interface must reside on the same logical system as the demux interface.

You configure demux prefixes for use by the underlying interface. The demux prefixes can represent individual hosts or networks. For a given demux interface unit, you can configure either demux source or demux destination prefixes but not both.

You can choose not to configure a demux source or demux destination prefix. This type of configuration results in a transmit-only interface.

To configure the IP demux interface with source prefix:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]  
user@host# edit interfaces
```

2. Configure the interface as a logical demux interface (for example, demux0 interface) and configure the logical interface with the **unit** statement.



**NOTE:** You can configure only one demux0 interface per chassis, but you can define logical demux interfaces on top of it (for example, demux0.1, demux0.2, and so on).

```
[edit interfaces]  
user@host# edit demux0 unit logical-unit-number
```

3. Configure the underlying interface on which the demux interface is running under the **demux-options** statement.

```
[edit interfaces demux0 unit logical-unit-number]  
user@host# set demux-options underlying-interface interface-name
```

4. Configure the protocol family.

```
[edit interfaces demux0 unit logical-unit-number]  
user@host# edit family family
```

5. Configure one or more logical demux source prefixes (IP address). The prefixes are matched against the source address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# set demux-source source-prefix
```

6. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# commit
user@host# top
```

To configure the IP demux interface with destination prefix:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as a logical demux interface (for example, demux0 interface) and configure the logical interface with the **unit** statement.



**NOTE:** You can configure only one demux0 interface per chassis, but you can define logical demux interfaces on top of it (for example, demux0.1, demux0.2, and so on).

```
[edit interfaces]
user@host# edit demux0 unit logical-unit-number
```

3. Configure the underlying interface on which the demux interface is running under the **demux-options** statement.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# set demux-options underlying-interface interface-name
```

4. Configure the protocol family.

```
[edit interfaces demux0 unit logical-unit-number]
user@host# edit family family
```

5. Configure one or more logical demux destination prefixes. The prefixes are matched against the destination address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# set demux-destination destination-prefix
```

6. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]  
user@host# commit  
user@host# top
```

## Configuring MAC Address Validation on Static IP Demux Interfaces

MAC address validation enables the router to validate that received packets contain a trusted IP source and an Ethernet MAC source address.

To configure MAC address validation for an IP demux interface:

1. In configuration mode, go to the **[edit interfaces demux0 unit *logical-unit-number*]** hierarchy level:

```
[edit]  
user@host# edit interfaces demux0 unit logical-unit-number
```

2. Configure the protocol family for the interface.

```
[edit interfaces demux0 unit logical-unit-number]  
user@host# edit family family
```

3. Configure the **mac-validate** statement to validate source MAC address with loose or strict options.

```
[edit interfaces demux0 unit logical-unit-number family family]  
user@host# set mac-validate (loose | strict)
```

4. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]  
user@host# commit  
user@host# top
```

- Related Documentation**
- [Configuring a VLAN Demultiplexing Interface on page 320](#)
  - [Demultiplexing Interface Overview on page 313](#)

---

## Configuring a VLAN Demultiplexing Interface

Demultiplexing (demux) interfaces are logical interfaces that share a common, underlying interface. You can configure IP demultiplexing interfaces or VLAN demultiplexing interfaces.

To configure a VLAN demux interface, you must configure the demux prefixes that are used by the underlying interface and then configure the VLAN demultiplexing interface as explained by the following tasks:

1. [Configuring a VLAN Demux Underlying Interface on page 321](#)
2. [Configuring the VLAN Demux Interface on page 322](#)

3. [Configuring MAC Address Validation on Static VLAN Demux Interfaces on page 324](#)
4. [Verifying a Demux Interface Configuration on page 325](#)

## Configuring a VLAN Demux Underlying Interface

A VLAN demux interface uses an underlying logical interface to receive packets. To determine which VLAN demux interface to use, the VLAN ID is matched against that which the underlying interface receives.



**NOTE:** VLAN demux interfaces currently support only Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet, and aggregated Ethernet underlying interfaces.

VLAN demux subscriber interfaces over aggregated Ethernet physical interfaces are supported only for MX Series routers that have only Trio MPCs installed. If the router has other MPCs in addition to Trio MPCs, the CLI accepts the configuration but errors are reported when the subscriber interfaces are brought up

To configure a logical interface as a VLAN demux underlying interface with demux source:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as fe-x/y/z and the logical interface with the **unit** option.

```
[edit interfaces]
user@host# edit fe-x/y/z unit logical-unit-number unit logical-unit-number
```

3. Configure the VLAN ID. The VLAN ID is used to determine which VLAN demux interface to use, that is the VLAN ID is matched against that which the underlying interface receives.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set vlan-id number
```

4. Configure the logical demux source family type on the VLAN demux underlying interface as inet or inet6.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set demux-source (inet | inet6)
```

5. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# commit
user@host# top
```

To configure a logical interface as a VLAN demux underlying interface with demux destination:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as fe-x/y/z and the logical interface with the **unit** option.

```
[edit interfaces]
user@host# edit fe-x/y/z unit logical-unit-number unit logical-unit-number
```

3. Configure the VLAN ID. The VLAN ID is used to determine which VLAN demux interface to use, that is the VLAN ID is matched against that which the underlying interface receives.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set vlan-id number
```

4. Configure the logical demux destination family type on the VLAN demux underlying interface as inet or inet6.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# set demux-destination (inet | inet6)
```

5. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces fe-x/y/z unit logical-unit-number]
user@host# commit
user@host# top
```

## Configuring the VLAN Demux Interface

You can configure one or more logical demux source prefixes or destination prefixes after specifying an underlying interface for the static demux interface to use. This underlying interface must reside on the same logical system as the demux interface.

You configure demux prefixes for use by the underlying interface. The demux prefixes can represent individual hosts or networks. For a given demux interface unit, you can configure either demux source prefix or demux destination prefixes but not both.

You can choose not to configure a demux source prefix or a demux destination prefix. This type of configuration results in a transmit-only interface

To configure VLAN demux interface with demux source prefix:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the interface as a logical demux interface (for example, demux0 interface) and configure the logical interface with the **unit** statement.



**NOTE:** You can configure only one demux0 interface per chassis, but you can define logical demux interfaces on top of it (for example, demux0.1, demux0.2, and so on).

[edit interfaces]

user@host# edit demux0 unit *logical-unit-number*

3. Configure the underlying interface on which the demux interface is running under the **demux-options** statement.

[edit interfaces demux0 unit *logical-unit-number*]

user@host# set demux-options underlying-interface *interface-name*

4. Configure the protocol family for the interface.

[edit interfaces demux0 unit *logical-unit-number*]

user@host# edit family *family*

5. Configure one or more logical demux source prefixes. The prefixes are matched against the source address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.

[edit interfaces demux0 unit *logical-unit-number* family *family*]

user@host# set demux-source *source-prefix*

6. Save the configuration and move to top of the hierarchy level.

[edit interfaces demux0 unit *logical-unit-number*]

user@host# commit

user@host# top

To configure VLAN demux interface with demux destination prefix:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

[edit]

user@host# edit interfaces

2. Configure the interface as a logical demux interface (for example, demux0 interface) and configure the logical interface with the **unit** statement.



**NOTE:** You can configure only one demux0 interface per chassis, but you can define logical demux interfaces on top of it (for example, demux0.1, demux0.2, and so on).

[edit interfaces]

```
user@host# edit demux0 unit logical-unit-number
```

3. Configure the underlying interface on which the demux interface is running under the **demux-options** statement.

```
[edit interfaces demux0 unit logical-unit-number]  
user@host# set demux-options underlying-interface interface-name
```

4. Configure the protocol family for the interface.

```
[edit interfaces demux0 unit logical-unit-number]  
user@host# edit family family
```

5. Configure one or more logical demux destination prefixes. The prefixes are matched against the destination address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.

```
[edit interfaces demux0 unit logical-unit-number family family]  
user@host# set demux-destination destination-prefix
```

6. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number]  
user@host# commit  
user@host# top
```

## Configuring MAC Address Validation on Static VLAN Demux Interfaces

MAC address validation enables the router to validate that received packets contain a trusted IP source and an Ethernet MAC source address.

To configure MAC address validation for a VLAN demux interface:

1. In configuration mode, go to the **[edit interfaces demux0 unit *logical-unit-number*]** hierarchy level:

```
[edit]  
user@host# edit interfaces demux0 unit logical-unit-number
```

2. Configure the protocol family for the interface.

```
[edit interfaces demux0 unit logical-unit-number]  
user@host# edit family family
```

3. Configure the **mac-validate** statement to validate source MAC address with loose or strict options.

```
[edit interfaces demux0 unit logical-unit-number family family]  
user@host# set mac-validate (loose | strict)
```

4. Save the configuration and move to top of the hierarchy level.

```
[edit interfaces demux0 unit logical-unit-number family family]
user@host# commit
user@host# top
```

## Verifying a Demux Interface Configuration

**Purpose** Check the configuration of a demux interface and its underlying interface when the following are configured:

- Two VLANs are configured, where each VLAN consists of two IP demux interfaces.
- One VLAN demultiplexes based on the source address
- The other VLAN demultiplexes based on the destination address.

**Action** From configuration mode on the MX Series router, run the **show interfaces fe-0/0/0** and **show interfaces demux0** configuration mode commands.

```
user@host> show interfaces fe-0/0/0
```

```
vlan-tagging;
unit 100 {
  vlan-id 100;
  demux-source inet; # Enable demux of inet prefixes
  family inet {
    address 10.1.1.1/24;
    filter {
      input vlan1-primary-in-filter;
      output vlan1-primary-out-filter;
    }
    mac-validate loose;
  }
}
unit 200 {
  vlan-id 200;
  demux-destination inet; # Enable demux of inet using destination addresses
  family inet {
    address 20.1.1.1/24;
  }
}
unit 300 {
  vlan-id 300;
  demux-source inet; # Enable demux of inet using source addresses
  family inet {
    address 20.1.2.1/24;
  }
}
```

```
user@host> show interfaces demux0
```

```
unit 101 {
  description vlan1-sub1;
  demux-options {
    underlying-interface fe-0/0/0.100;
  }
  family inet {
    demux-source 10.1.1.0/24;
  }
}
```

```
filter {
  input vlan1-sub1-in-filter;
  output vlan1-sub1-out-filter;
}
mac-validate loose;
}
}
unit 102 {
  description vlan1-sub2;
  demux-options {
    underlying-interface fe-0/0/0.100;
  }
  family inet {
    demux-source {
      10.1.0.0/16;
      10.2.1.0/24;
    }
    filter {
      input vlan1-sub2-in-filter;
      output vlan1-sub2-out-filter;
    }
    mac-validate loose;
  }
}
unit 202 {
  description vlan2-sub2;
  demux-options {
    underlying-interface fe-0/0/0.200;
  }
  family inet {
    demux-destination 100.1.2.0/24;
  }
}
unit 302 {
  description vlan2-sub2;
  demux-options {
    underlying-interface fe-0/0/0.300;
  }
  family inet {
    demux-source 100.1.2.0/24;
  }
}
```

- Related Documentation**
- [Configuring an IP Demultiplexing Interface on page 316](#)
  - [Demultiplexing Interface Overview on page 313](#)

## CHAPTER 8

# Configuring the Loopback Interface

- [Understanding the Loopback Interface on page 327](#)
- [Configuring the Loopback Interface on page 328](#)

### Understanding the Loopback Interface

---

The loopback address (**lo0**) has several uses, depending on the particular Junos feature being configured. It can perform the following functions:

- **Device identification**—The loopback interface is used to identify the device. While any interface address can be used to determine if the device is online, the loopback address is the preferred method. Whereas interfaces might be removed or addresses changed based on network topology changes, the loopback address never changes.

When you ping an individual interface address, the results do not always indicate the health of the device. For example, a subnet mismatch in the configuration of two endpoints on a point-to-point link makes the link appear to be inoperable. Pinging the interface to determine whether the device is online provides a misleading result. An interface might be unavailable because of a problem unrelated to the device's configuration or operation.

- **Routing information**—The loopback address is used by protocols such as OSPF to determine protocol-specific properties for the device or network. Further, some commands such as **ping mpls** require a loopback address to function correctly.
- **Packet filtering**—Stateless firewall filters can be applied to the loopback address to filter packets originating from, or destined for, the Routing Engine.

The Internet Protocol (IP) specifies a loopback network with the (IPv4) address **127.0.0.0/8**. Most IP implementations support a loopback interface (**lo0**) to represent the loopback facility. Any traffic that a computer program sends on the loopback network is addressed to the same computer. The most commonly used IP address on the loopback network is **127.0.0.1** for IPv4 and **::1** for IPv6. The standard domain name for the address is **localhost**.

The device also includes an internal loopback address (**lo0.16384**). The internal loopback address is a particular instance of the loopback address with the logical unit number 16384. Junos OS creates the loopback interface for the internal routing instance. This interface prevents any filter on **lo0.0** from disrupting internal traffic.

- Related Documentation**
- [Configuring a Loopback Interface](#)
  - [Understanding Interfaces](#)
  - [Understanding Management Interfaces](#)
  - [Understanding the Discard Interface](#)

---

## Configuring the Loopback Interface

- [Configuring the Loopback Interface on page 328](#)
- [Example: Configuring Two Addresses on the Loopback Interface with Host Routes on page 329](#)
- [Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes on page 329](#)
- [Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes on page 330](#)

### Configuring the Loopback Interface

When specifying the loopback address, do not include a destination prefix. Also, in most cases, do not specify a loopback address on any unit other than unit 0.



**NOTE:** For Layer 3 virtual private networks (VPNs), you can configure multiple logical units for the loopback interface. This allows you to configure a logical loopback interface for each virtual routing and forwarding (VRF) routing instance. For more information, see the *Junos OS VPNs Library for Routing Devices*.

For some applications, such as SSL for Junos XML protocol, the address for the interface `lo0.0` must be `127.0.0.1`.

You can configure loopback interfaces using a subnetwork address for both `inet` and `inet6` address families. Many protocols require a subnetwork address as their source address. Configuring a subnetwork loopback address as a donor interface enables these protocols to run on unnumbered interfaces.

If you configure the loopback interface, it is automatically used for unnumbered interfaces. If you do not configure the loopback interface, the router chooses the first interface to come online as the default. If you configure more than one address on the loopback interface, we recommend that you configure one to be the primary address to ensure that it is selected for use with unnumbered interfaces. By default, the primary address is used as the source address when packets originate from the interface.

For more information about unnumbered interfaces, see [“Configuring an Unnumbered Interface” on page 218](#). For more information about primary addresses, see [“Configuring the Interface Address” on page 207](#).

On the router, you can configure one physical loopback interface, **lo0**, and one or more addresses on the interface.

1. To configure the physical loopback interface, include the following statements at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      address loopback-address;
      address <loopback-address2>;
      ...
    }
    family inet6 {
      address loopback-address;
    }
  }
}
```

### Example: Configuring Two Addresses on the Loopback Interface with Host Routes

To configure two addresses on the loopback interface with host routes:

```
[edit]
user@host# edit interfaces lo0 unit 0 family inet
[edit interfaces lo0 unit 0 family inet]
user@host# set address 172.16.0.1
[edit interfaces lo0 unit 0 family inet]
user@host# set address 10.0.0.1
[edit interfaces lo0 unit 0 family inet]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        10.0.0.1;
        127.0.0.1;
        172.16.0.1;
      }
    }
  }
}
```

### Example: Configuring Two Addresses on the Loopback Interface with Subnetwork Routes

To configure two addresses on the loopback interface with subnetwork routes:

```
[edit]
user@host# edit interfaces lo0 unit 0 family inet
[edit interfaces lo0 unit 0 family inet]
user@host# set address 192.16.0.1/24
[edit interfaces lo0 unit 0 family inet]
```

```
user@host# set address 10.2.0.1/16
[edit interfaces lo0 unit 0 family inet]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        10.2.0.1/16;
        127.0.0.1/32;
        192.16.0.1/24;
      }
    }
  }
}
```

### Example: Configuring an IPv4 and an IPv6 Address on the Loopback Interface with Subnetwork Routes

To configure an IPv4 and an IPv6 address on the loopback interface with subnetwork routes:

```
[edit]
user@host# edit interfaces lo0 unit 0 family inet
[edit interfaces lo0 unit 0 family inet]
user@host# set address 192.16.0.1/24
[edit interfaces lo0 unit 0 family inet]
user@host# up
[edit interfaces lo0 unit 0 family]
user@host# edit interfaces lo0 unit 0 family inet6
[edit interfaces lo0 unit 0 family inet6]
user@host# set address 3ffe::1:200:f8ff:fe75:50df/64
[edit interfaces lo0 unit 0 family inet6]
user@host# top
[edit]
user@host# show
interfaces {
  lo0 {
    unit 0 {
      family inet {
        127.0.0.1/32;
        192.16.0.1/24;
      }
      family inet6 {
        3ffe::1:200:f8ff:fe75:50df/64;
      }
    }
  }
}
```

- Related Documentation**
- [Junos OS VPNs Library for Routing Devices](#)
  - [Configuring an Unnumbered Interface on page 218](#)

- [Configuring the Interface Address on page 207](#)



## PART 3

# Serial Interfaces

- [Serial Interfaces Overview on page 335](#)
- [Configuring Serial Interfaces on page 337](#)



## CHAPTER 9

# Serial Interfaces Overview

- [Serial Interfaces Overview on page 335](#)

### Serial Interfaces Overview

---

Devices that communicate over a serial interface are divided into two classes: data terminal equipment (DTE) and data circuit-terminating equipment (DCE). Juniper Networks Serial Physical Interface Cards (PICs) have two ports per PIC and support full-duplex data transmission. These PICs support DTE mode only. On the Serial PIC, you can configure three types of serial interfaces:

- EIA-530—An Electronics Industries Alliance (EIA) standard for the interconnection of DTE and DCE using serial binary data interchange with control information exchanged on separate control circuits.
- V.35—An ITU-T standard describing a synchronous, physical layer protocol used for communications between a network access device and a packet network. V.35 is most commonly used in the United States and in Europe.
- X.21—An ITU-T standard for serial communications over synchronous digital lines. The X.21 protocol is used primarily in Europe and Japan.

The following standards apply to serial interfaces:

- TIA/EIA Standard 530, *High-Speed 25-Position Interface for Data Terminal Equipment and Data Circuit-Terminating Equipment*, defines the signals on the cable and specifies the connector at the end of the cable.
- TIA/EIA Standard 232, *Interface between Data Terminal Equipment and Data Circuit-Terminating Equipment Employing Serial Binary Data Interchange*, describes the physical interface and protocol for serial data communication.
- ITU-T Recommendation V.35, *Data Transmission at 48 kbit/s Using 60-108 kHz Group Band Circuits*. Note that the Juniper Networks Serial PIC supports V.35 interfaces with speeds higher than 48 kilobits per second.
- ITU-T Recommendation X.21, *Interface Between Data Terminal Equipment and Data Circuit-Terminating Equipment for Synchronous Operation on Public Data Networks*.

There are no serial interface-specific logical properties. For information about general logical properties that you can configure, see *Configuring Logical Interface Properties*. This

support on serial interfaces is the same as the existing LFI and MLPPP support on T1 and E1 interfaces.

**Related  
Documentation**

- [Example: Physical Interface Configuration Statements for Serial Interfaces on page 337](#)
- [Configuring the Serial Line Protocol on page 338](#)
- [Configuring the Serial Clocking Mode on page 342](#)
- [Configuring the Serial Signal Handling on page 344](#)
- [Configuring the Serial DTR Circuit on page 347](#)
- [Configuring Serial Signal Polarities on page 347](#)
- [Configuring Serial Loopback Capability on page 348](#)
- [Configuring Serial Line Encoding on page 350](#)

## CHAPTER 10

# Configuring Serial Interfaces

- [Example: Physical Interface Configuration Statements for Serial Interfaces on page 337](#)
- [Configuring the Serial Line Protocol on page 338](#)
- [Configuring the Serial Clocking Mode on page 342](#)
- [Configuring the Serial Signal Handling on page 344](#)
- [Configuring the Serial DTR Circuit on page 347](#)
- [Configuring Serial Signal Polarities on page 347](#)
- [Configuring Serial Loopback Capability on page 348](#)
- [Configuring Serial Line Encoding on page 350](#)
- [Specifying a USB Modem Interface on J Series Routers on page 350](#)

### Example: Physical Interface Configuration Statements for Serial Interfaces

---

To configure serial physical interface properties, include the **serial-options** statement at the **[edit interfaces se- *fpc/pic/port*]** hierarchy level .

```
[edit interfaces se-fpc/pic/port]  
serial-options {  
  clock-rate rate;  
  clocking-mode (dce | internal | loop);  
  control-polarity (negative | positive);  
  cts-polarity (negative | positive);  
  dcd-polarity (negative | positive);  
  dce-options {  
    control-signal (assert | de-assert | normal);  
    cts (ignore | normal | require);  
    dcd (ignore | normal | require);  
    dsr (ignore | normal | require);  
    dtr signal-handling-option;  
    ignore-all;  
    indication (ignore | normal | require);  
    rts (assert | de-assert | normal);  
    tm (ignore | normal | require);  
  }  
  dsr-polarity (negative | positive);  
  dte-options {  
    control-signal (assert | de-assert | normal);  
    cts (ignore | normal | require);
```

```
    dcd (ignore | normal | require);
    dsr (ignore | normal | require);
    dtr signal-handling-option;
    ignore-all;
    indication (ignore | normal | require);
    rts (assert | de-assert | normal);
    tm (ignore | normal | require);
}
dtr-circuit (negative | positive);
dtr-polarity (negative | positive);
encoding (nrz | nrzi);
idle-cycle-flag flag;
indication-polarity (negative | positive);
line-protocol protocol;
loopback mode;
rts-polarity (negative | positive);
tm-polarity (negative | positive);
transmit-clock invert;
}
```

---

## Configuring the Serial Line Protocol

- [Configuring the Serial Line Protocol on page 338](#)
- [Serial Interface Default Settings on page 338](#)

### Configuring the Serial Line Protocol

By default, serial interfaces use the EIA-530 line protocol. You can configure each port on the PIC independently to use one of the following line protocols:

- EIA-530
- V.35
- X.21

To configure the serial line protocol:

1. Include the **line-protocol** statement, specifying the **eia530**, **v.35**, or **x.21** option:

```
    line-protocol protocol;
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces se-*pim*/0/*port* serial-options]**
- **[edit interfaces se-*fpc*/*pic*/*port* serial-options]**

For more information about serial interfaces, see the following sections:

### Serial Interface Default Settings

- [Serial Interface Default Settings on page 339](#)
- [Invalid Serial Interface Statements on page 340](#)

## Serial Interface Default Settings

- [EIA-530 Interface Default Settings on page 339](#)
- [V.35 Interface Default Settings on page 339](#)
- [X.21 Interface Default Settings on page 340](#)

### EIA-530 Interface Default Settings

If you do not include the **line-protocol** statement or if you explicitly configure the default EIA-530 line protocol, the default settings are as follows:

```
dce-options | dte-options {
  cts normal;
  dcd normal;
  dsr normal;
  dtr normal;
  rts normal;
  tm normal;
}
clock-rate 16.384mhz;
clocking-mode loop;
cts-polarity positive;
dcd-polarity positive;
dsr-polarity positive;
dtr-circuit balanced;
dtr-polarity positive;
encoding nrz;
rts-polarity positive;
tm-polarity positive;
```



**NOTE:** On M Series routers, you can set the DCE clocking mode for EIA-530 interfaces and commit. An error message is not displayed and the CLI is not blocked.

You can include the **line-protocol** statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**
- **[edit interfaces se-fpc/pic/port serial-options]**

### V.35 Interface Default Settings

If you include the **line-protocol v.35** statement, the default settings are as follows:

```
dce-options | dte-options {
  cts normal;
  dcd normal;
  dsr normal;
  dtr normal;
  rts normal;
}
clock-rate 16.384mhz;
clocking-mode loop;
```

```
cts-polarity positive;
dcd-polarity positive;
dsr-polarity positive;
dtr-circuit balanced;
dtr-polarity positive;
encoding nrz;
rts-polarity positive;
```

You can include the **line-protocol** statement at the following hierarchy levels:

- **[edit interfaces se-*pim*/0/*port* serial-options]**
- **[edit interfaces se-*fpc*/*pic*/*port* serial-options]**

### ***X.21 Interface Default Settings***

If you include the **line-protocol x.21** statement, the default settings are as follows:

```
dce-options | dte-options {
  control-signal normal;
  indication normal;
}
clock-rate 16.384mhz;
clocking-mode loop;
control-polarity positive;
encoding nrz;
indication-polarity positive;
```

You can include the **line-protocol** statement at the following hierarchy levels:

- **[edit interfaces se-*pim*/0/*port* serial-options]**
- **[edit interfaces se-*fpc*/*pic*/*port* serial-options]**

---

### **Invalid Serial Interface Statements**

The following sections show the invalid configuration statements for each type of serial interface. If you include the following statements in the configuration, an error message indicates the location of the error and the configuration is not activated.

- [Invalid EIA-530 Interface Statements on page 340](#)
- [Invalid V.35 interface Statements on page 341](#)
- [Invalid X.21 Interface Statements on page 341](#)

### ***Invalid EIA-530 Interface Statements***

If you do not include the **line-protocol** statement or if you explicitly configure the default EIA-530 line protocol, the following statements are invalid:

```
dce-options | dte-options {
  control-signal (assert | de-assert | normal);
  indication (ignore | normal | require);
}
control-polarity (negative | positive);
indication-polarity (negative | positive);
```

You can include the **line-protocol** statement at the following hierarchy levels:

- [\[edit interfaces se-pim/0/port serial-options\]](#)
- [\[edit interfaces se-fpc/pic/port serial-options\]](#)

### ***Invalid V.35 Interface Statements***

If you include the **line-protocol v.35** statement, the following statements are invalid:

```
dce-options | dte-options {
  control-signal (assert | de-assert | normal);
  indication (ignore | normal | require);
  tm (ignore | normal | require);
}
control-polarity (negative | positive);
indication-polarity (negative | positive);
loopback (dce-local | dce-remote);
tm-polarity (negative | positive);
```

You can include the **line-protocol** statement at the following hierarchy levels:

- [\[edit interfaces se-pim/0/port serial-options\]](#)
- [\[edit interfaces se-fpc/pic/port serial-options\]](#)

### ***Invalid X.21 Interface Statements***

If you include the **line-protocol x.21** statement, the following statements are invalid:

```
dce-options | dte-options {
  cts (ignore | normal | require);
  dcd (ignore | normal | require);
  dsr (ignore | normal | require);
  dtr (assert | de-assert | normal);
  rts (assert | de-assert | normal);
  tm (ignore | normal | require);
}
clocking-mode (dce | internal);
cts-polarity (negative | positive);
dce-polarity (negative | positive);
dsr-polarity (negative | positive);
dtr-circuit (balanced | unbalanced);
dtr-polarity (negative | positive);
loopback (dce-local | dce-remote);
rts-polarity (negative | positive);
tm-polarity (negative | positive);
```

You can include the **line-protocol** statement at the following hierarchy levels:

- [\[edit interfaces se-pim/0/port serial-options\]](#)
- [\[edit interfaces se-fpc/pic/port serial-options\]](#)

**See Also** [Serial Interfaces Overview on page 335](#)

## Configuring the Serial Clocking Mode

- [Configuring the Serial Clocking Mode on page 342](#)
- [Inverting the Serial Interface Transmit Clock on page 343](#)
- [Configuring the DTE Clock Rate on page 343](#)

### Configuring the Serial Clocking Mode

By default, serial interfaces use loop clocking mode. For EIA-530 and V.35 interfaces, you can configure each port on the PIC independently to use loop, DCE, or internal clocking mode. For X.21 interfaces, only loop clocking mode is supported.


The three clocking modes work as follows:

- Loop clocking mode—Uses the DCE's RX clock to clock data from the DCE to the DTE.
- DCE clocking mode—Uses the TXC clock, which is generated by the DCE specifically to be used by the DTE as the DTE's transmit clock.
- Internal clocking mode—Also known as line timing, uses an internally generated clock. You can configure the speed of this clock by including the **clock-rate** statement at the **[edit interfaces se-pim/0/port serial-options]** or **[edit interfaces se-fpc/pic/port dte-options]** hierarchy levels. For more information about the DTE clock rate, see [“Configuring the DTE Clock Rate” on page 343](#).

Note that DCE clocking mode and loop clocking mode use external clocks generated by the DCE.

[Figure 22 on page 342](#) shows the clock sources of loop, DCE, and internal clocking modes.

*Figure 22: Serial Interface Clocking Mode*

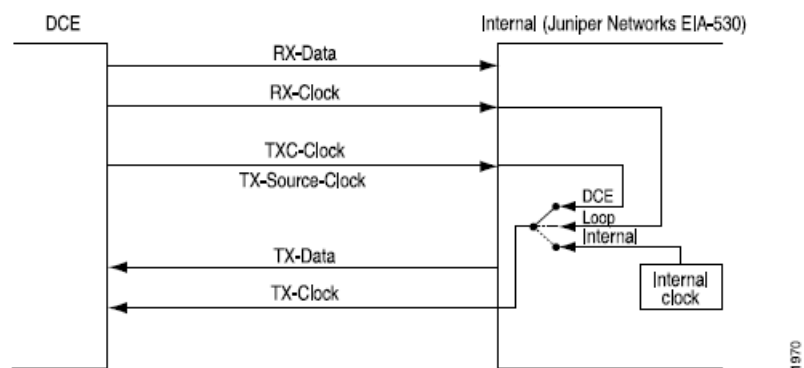

To configure the clocking mode of a serial interface, include the **clocking-mode** statement:

```
clocking-mode (dce | internal | loop);
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**

- [edit interfaces *se-fpc/pic/port* serial-options]

## Inverting the Serial Interface Transmit Clock

When an externally timed clocking mode (DCE or loop) is used, long cables might introduce a phase shift of the DTE-transmitted clock and data. At high speeds, this phase shift might cause errors. Inverting the transmit clock corrects the phase shift, thereby reducing error rates.

By default, the transmit clock is not inverted. To invert the transmit clock, include the **transmit-clock invert** statement:

```
transmit-clock invert;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

## Configuring the DTE Clock Rate

By default, the serial interface has a clock rate of 16.384 MHz. For EIA-530 and V.35 interfaces with internal clocking mode configured, you can configure the clock rate.

To configure the clock rate, include the **clock-rate** statement:

```
clock-rate rate;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

You can configure the following interface speeds:

- 2.048 MHz
- 2.341 MHz
- 2.731 MHz
- 3.277 MHz
- 4.096 MHz
- 5.461 MHz
- 8.192 MHz
- 16.384 MHz

Although the serial interface is intended for use at the default rate of 16.384 MHz, you might need to use a slower rate if any of the following conditions prevail:

- The interconnecting cable is too long for effective operation.
- The interconnecting cable is exposed to an extraneous noise source that might cause an unwanted voltage in excess of +1 volt measured differentially between the signal conductor and circuit common at the load end of the cable, with a 50-ohm resistor substituted for the generator.
- You need to minimize interference with other signals.
- You need to invert signals.

For detailed information about the relationship between signaling rate and interface cable distance, see the following standards:

- EIA-422-A, *Electrical Characteristics of Balanced Voltage Digital Interface Circuits*
- EIA-423-A, *Electrical Characteristics of Unbalanced Voltage Digital Interface Circuits*

#### Related Documentation

- [Serial Interfaces Overview on page 335](#)

## Configuring the Serial Signal Handling

By default, normal signal handling is enabled for all signals. For each signal, the **normal** option applies to the normal signal handling for that signal, as defined by the following standards:

- TIA/EIA Standard 530
- ITU-T Recommendation V.35
- ITU-T Recommendation X.21

[Table 50 on page 344](#) shows the serial interface modes that support each signal type.

**Table 50: Signal Handling by Serial Interface Type**

Signal	Serial Interfaces
<b>From-DCE signals</b>	
Clear to send (CTS)	EIA-530 and V.35
Data carrier detect (DCD)	EIA-530 and V.35
Data set ready (DSR)	EIA-530 and V.35
Indication	X.21 only
Test mode (TM)	EIA-530 only
<b>To-DCE signals</b>	
Control signal	X.21 only

Table 50: Signal Handling by Serial Interface Type (continued)

Signal	Serial Interfaces
Data transfer ready (DTR)	EIA-530 and V.35
Request to send (RTS)	EIA-530 and V.35

You configure serial interface signal characteristics by including the **dce-options** or **dte-options** statement:

```
dce-options | dte-options {
  control-signal (assert | de-assert | normal);
  cts (ignore | normal | require);
  dcd (ignore | normal | require);
  dsr (ignore | normal | require);
  dtr signal-handling-option;
  ignore-all;
  indication (ignore | normal | require);
  rts (assert | de-assert | normal);
  tm (ignore | normal | require);
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

For EIA-530 and V.35 interfaces, configure to-DCE signals by including the **dtr** and **rts** statements, specifying the **assert**, **de-assert**, or **normal** option:

```
dtr (assert | de-assert | normal);
rts (assert | de-assert | normal);
```

For X.21 interfaces, configure to-DCE signals by including the **control-signal** statement, specifying the **assert**, **de-assert**, or **normal** option:

```
control-signal (assert | de-assert | normal);
```

*Assertion* is when the positive side of a given signal is at potential high-level output voltage (Voh), while the negative side of the same signal is at potential low-level output voltage (Vol). *Deassertion* is when the positive side of a given signal is at potential Vol, while the negative side of the same signal is at potential Voh.

For the DTR signal, you can configure normal signal handling using the signal for automatic resynchronization by including the **dtr** statement, and specifying the **auto-synchronize** option:

```
dtr {
  auto-synchronize {
    duration milliseconds;
    interval seconds;
  }
}
```

The pulse duration of resynchronization can be from 1 through 1000 milliseconds. The offset interval for resynchronization can be from 1 through 31 seconds.

For EIA-530 and V.35 interfaces, configure from-DCE signals by including the **cts**, **dcd**, and **dsr** statements, specifying the **ignore**, **normal**, or **require** option:

```
cts (ignore | normal | require);  
dcd (ignore | normal | require);  
dsr (ignore | normal | require);
```

For X.21 interfaces, configure from-DCE signals by including the **indication** statement, specifying the **ignore**, **normal**, or **require** option:

```
indication (ignore | normal | require);
```

For EIA-530 interfaces only, you can configure from-DCE test-mode (TM) signaling by including the **tm** statement, specifying the **ignore**, **normal**, or **require** option:

```
tm (ignore | normal | require);
```

To specify that the from-DCE signal must be asserted, include the **require** option in the configuration. To specify that the from-DCE signal must be ignored, include the **ignore** option in the configuration.



**NOTE:** For V.35 and X.21 interfaces, you cannot include the **tm** statement in the configuration.

For X.21 interfaces, you cannot include the **cts**, **dcd**, **dsr**, **dtr**, and **rts** statements in the configuration.

For EIA-530 and V.35 interfaces, you cannot include the **control-signal** and **indication** statements in the configuration.

For a complete list of serial options statements that are not supported by each serial interface mode, see [“Invalid Serial Interface Statements” on page 340](#).

---

To return to the default normal signal handling, delete the **require**, **ignore**, **assert**, **de-assert**, or **auto-synchronize** statement from the configuration, as shown in the following example:

```
[edit]  
user@host# delete interfaces se-fpc/pic/port dte-options control-leads cts require
```

To explicitly configure normal signal handling, include the **control-signal** statement with the **normal** option:

```
control-signal normal;
```

You can configure the serial interface to ignore all control leads by including the **ignore-all** statement:

```
ignore-all;
```

You can include the **ignore-all** statement in the configuration only if you do not explicitly enable other signal handling options at the **[edit interfaces se-pim/0/port serial-options dce-options]** or **[edit interfaces se-fpc/pic/port serial-options dte-options]** hierarchy levels.

You can include the **control-signal**, **cts**, **dcd**, **dsr**, **dtr**, **indication**, **rts**, and **tm** statements at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options dte-options]**
- **[edit interfaces se-fpc/pic/port serial-options dte-options]**

## Configuring the Serial DTR Circuit

A balanced circuit has two currents that are equal in magnitude and opposite in phase. An unbalanced circuit has one current and a ground; if a pair of terminals is unbalanced, one side is connected to electrical ground and the other carries the signal. By default, the DTR circuit is balanced.

For EIA-530 and V.35 interfaces, configure the DTR circuit by including the **dtr-circuit** statement:

```
dtr-circuit (balanced | unbalanced);
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**
- **[edit interfaces se-fpc/pic/port serial-options]**

## Configuring Serial Signal Polarities

Serial interfaces use a differential protocol signaling technique. Of the two serial signals associated with a circuit, the one referred to as the A signal is denoted with a plus sign, and the one referred to as the B signal is denoted with a minus sign; for example, DTR+ and DTR-. If DTR is low, then DTR+ is negative with respect to DTR-. If DTR is high, then DTR+ is positive with respect to DTR-.

By default, all signal polarities are positive. You can reverse this polarity on a Juniper Networks serial interface. You might need to do this if signals are miswired as a result of reversed polarities.

For EIA-530 and V.35 interfaces, configure signal polarities by including the **cts-polarity**, **dcd-polarity**, **dsr-polarity**, **dtr-polarity**, **rts-polarity**, and **tm-polarity** statements:

```
cts-polarity (negative | positive);
dcd-polarity (negative | positive);
dsr-polarity (negative | positive);
dtr-polarity (negative | positive);
rts-polarity (negative | positive);
tm-polarity (negative | positive);
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

For X.21 interfaces, configure signal polarities by including the **control-polarity** and **indication-polarity** statements:

**control-polarity** (negative | positive);  
**indication-polarity** (negative | positive);


You can include these statements at the following hierarchy levels:

- [edit interfaces *se-pim/0/port* serial-options]
- [edit interfaces *se-fpc/pic/port* serial-options]

## Configuring Serial Loopback Capability

From the router, remote line interface unit (LIU) loopback loops the TX (transmit) data and TX clock back to the router as RX (receive) data and RX clock. From the line, LIU loopback loops the RX data and RX clock back out the line as TX data and TX clock, as shown in [Figure 23 on page 348](#).


**Figure 23: Serial Interface LIU Loopback**

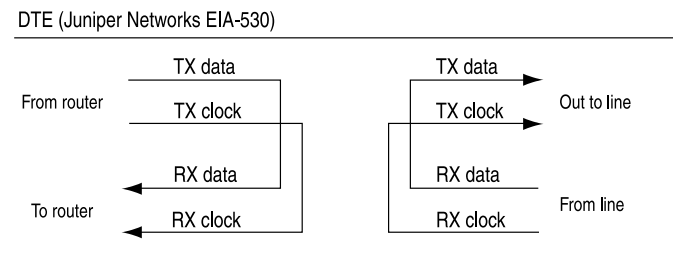

1972

DCE local and DCE remote control the EIA-530 interface-specific signals for enabling local and remote loopback on the link partner DCE. Local loopback is shown in [Figure 24 on page 348](#).

**Figure 24: Serial Interface Local Loopback**

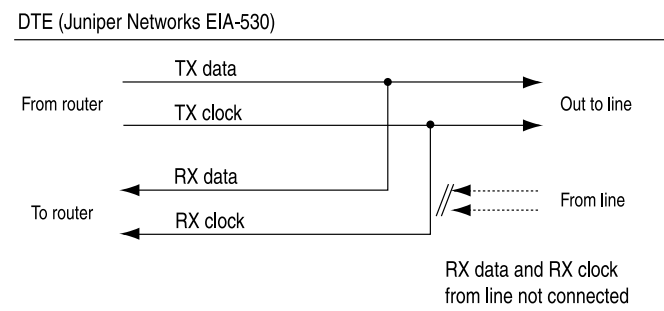

1971

For EIA-530 interfaces, you can configure DCE local, DCE remote, local, and remote (LIU) loopback capability.

For V.35, you can configure remote LIU and local loopback capability. DCE local and DCE remote loopbacks are not supported on V.35 and X.21 interfaces. Local and remote loopbacks are not supported on X.21 interfaces.

To configure the loopback capability on a serial interface, include the **loopback** statement, specifying the **dce-local**, **dce-remote**, **local**, or **remote** option:

**loopback mode;**

You can include this statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**
- **[edit interfaces se-fpc/pic/port serial-options]**

To disable the loopback capability, remove the **loopback** statement from the configuration:

```
[edit]
user@host# delete interfaces se-fpc/pic/port serial-options loopback
```

You can determine whether there is an internal or external problem by checking the error counters in the output of the **show interface se-fpc/pic/port extensive** command:

```
user@host> show interfaces se-fpc/pic/port extensive
```

To Configure Serial Loopback Capability:

1. To determine the source of a problem, loop the packets on the local router, the local DCE, the remote DCE, and the remote line interface unit (LIU).
2. To do this, include the **no-keepalives** and **encapsulation cisco-hdlc** statements at the **[edit interfaces se-fpc/pic/port]** hierarchy level, and the **loopback local** option at the **[edit interfaces se-pim/0/port serial-options]** or **[edit interfaces se-fpc/pic/port serial-options]** hierarchy level. With this configuration, the link stays up, so you can loop ping packets to a remote router. The **loopback local** statement causes the interface to loop within the PIC just before the data reaches the transceiver.

```
[edit interfaces]
se-1/0/0 {
  no-keepalives;
  encapsulation cisco-hdlc;
  serial-options {
    loopback local;
  }
  unit 0 {
    family inet {
      address 10.100.100.1/24;
    }
  }
}
```

**Related Documentation**

- [Serial Interfaces Overview on page 335](#)

## Configuring Serial Line Encoding

---

By default, serial interfaces use non-return to zero (NRZ) line encoding. You can configure non-return to zero inverted (NRZI) line encoding if necessary.

To have the interface use NRZI line encoding, include the **encoding** statement, specifying the **nrzi** option:

```
encoding nrzi;
```

To explicitly configure the default NRZ line encoding, include the **encoding** statement, specifying the **nrz** option:

```
encoding nrz;
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces se-pim/0/port serial-options]**
- **[edit interfaces se-fpc/pic/port serial-options]**

When setting the line encoding parameter, you must set the same value for paired ports. Ports 0 and 1 must share the same value.

## Specifying a USB Modem Interface on J Series Routers

---

The J Series routers contain two USB ports controlled by a single USB controller. One USB port can support USB devices, while the other one can act as a USB modem.

The USB modem provides a dial-in remote management interface, and supports dialer interface features by sharing the same dial pool as a dialer interface. The dial pool allows the logical dialer interface (**dln**) and the physical interface (**umd0**) to be bound together dynamically on a per-call basis.

The following dialer interface features are supported by the USB modem interface:

- Encapsulation PPP
- CoS
- NAT
- Interface statistics
- Packet capture
- GRE tunnel
- Stateful firewall
- Traffic sampling

To configure a USB modem interface, include the following statements at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
```

```

umd0 {
  dialer-options {
    pool pool-name <priority priority>;
  }
  modem-options {
    dialin (console | routable);
    init-command-string initialization-command-string;
  }
}

```

The pool name specified at the **[edit interfaces umd0 dialer-options pool]** hierarchy level must be the same as the pool name specified at the **[edit interfaces dl*n* unit logical-unit-number dialer-options pool]** hierarchy level.

Configure the USB modem to operate as a dial-in WAN backup interface by including the **dialin** statement and specifying the **routable** option. If the USB modem is to be used as a dial-in console, specify the **console** option in the **dialin** statement.

When the Services Router applies the modem AT commands configured in the **init-command-string** statement or the default sequence of initialization commands to the modem, it compares them to the initialization commands already configured on the modem and makes the following changes:

- If the commands are the same, the router overrides the existing modem values that do not match. For example, if the initialization commands on the modem include S0=0 and the router's **init-command-string** configuration includes S0=2, the Services Router applies S0=2.
- If the initialization commands on the modem do not include a command in the router's **init-command-string** statement configuration, the router adds it. For example, if the **init-command-string** statement includes the command L2, but the modem commands do not include it, the router adds L2 to the initialization commands configured on the modem.

Include the following statements at the **[edit interfaces dl*n*]** hierarchy level to support a minimum configuration for a dialer interface connected to a USB modem:

```

[edit interfaces dln]
encapsulation ppp;
unit logical-unit-number;
dialer-options {
  dial-string dial-string-numbers;
  pool pool-name <priority priority>;
}
ppp-options {
  chap;
  access-profile name;
  local-name name;
  passive;
}
family inet {
  mtu bytes;
  address address {
    destination address;
  }
}

```

```
}  
}
```

## PART 4

# Monitoring and Troubleshooting Interfaces

- [Monitoring Interfaces on page 355](#)
- [Troubleshooting Interfaces on page 361](#)



# Monitoring Interfaces

- [Tracing Interface Operations Overview on page 355](#)
- [Tracing Operations of an Individual Router Interface on page 355](#)
- [Tracing Operations of the Interface Process on page 356](#)
- [Monitoring a PPP Session on page 357](#)
- [Tracing Operations of the pppd Process on page 358](#)

## Tracing Interface Operations Overview

---

You can trace the operations of individual router interfaces and those of the interface process (dcd). For a general discussion of tracing and of the precedence of multiple tracing operations, see the *Junos OS Administration Library*.

For information about the operations of Virtual Router Resolution Protocol (VRRP)-enabled interfaces, see the *Junos OS High Availability Library for Routing Devices*.

**Related  
Documentation**

- [Tracing Operations of an Individual Router Interface on page 355](#)
- [Tracing Operations of the Interface Process on page 356](#)

## Tracing Operations of an Individual Router Interface

---

To trace the operations of individual router interfaces, perform the following steps:

1. In configuration mode, go to the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit]  
user@host# edit interfaces interface-name
```

2. Configure the **traceoptions** option.

```
[edit interfaces interface-name]  
user@host# edit traceoptions
```

3. Configure the tracing flag.

```
[edit interfaces interface-name traceoptions]  
user@host# set flag flag-option
```

You can specify the following interface tracing flags:

- **all**—Trace all interface operations.
- **event**—Trace all interface events.
- **ipc**—Trace all interface interprocess communication (IPC) messages.
- **media**—Trace all interface media changes.

The interfaces **traceoptions** statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system **syslog** files.

For more information about trace operations, see [“Tracing Operations of the Interface Process” on page 356](#).

**Related Documentation**   • [traceoptions on page 1020](#)

---

## Tracing Operations of the Interface Process

---

To trace the operations of the router or switch interface process, dcd, perform the following steps:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the **traceoptions** statement.

```
[edit interfaces]
user@host# edit traceoptions
```

3. Configure the **no-remote-trace** option to disable remote tracing.

```
[edit interfaces traceoptions]
user@host# set no-remote-trace
```

4. Configure the **file filename** option.

```
[edit interfaces traceoptions]
user@host# edit file
```

5. Configure the **files number** option, **match regular-expression** option, **size size** option, and **world-readable | no-world-readable** option.

```
[edit interfaces traceoptions file]
user@host# set files number
user@host# set match regular-expression
user@host# set size size
user@host# set word-readable | no-world-readable
```

6. Configure the tracing flag.

```
[edit interfaces traceoptions]
user@host# set flag flag-option
```

7. Configure the **disable** option in **flag *flag-option*** statement to disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as **all**.

```
[edit interfaces traceoptions]
user@host# set flag flag-option disable
```

You can specify the following flags in the **interfaces traceoptions** statement:

- **all**—Enable all configuration logging.
- **change-events**—Log changes that produce configuration events.
- **gres-events**—Log the events related to GRES.
- **resource-usage**—Log the resource usage for different states.
- **config-states**—Log the configuration state machine changes.
- **kernel**—Log configuration IPC messages to kernel.
- **kernel-detail**—Log details of configuration messages to kernel.
- **select-events**—Log the events on select state machine.

By default, interface process operations are placed in the file named `dcd` and three 1-MB files of tracing information are maintained.

For general information about tracing, see the tracing and logging information in the *Junos OS Administration Library*.

#### Related Documentation

- [Tracing Interface Operations Overview on page 355](#)
- [Tracing Operations of an Individual Router Interface on page 355](#)
- [traceoptions on page 1020](#)

## Monitoring a PPP Session

You can monitor PPP packet exchanges. When monitoring is enabled, packets exchanged during a session are logged by default to `/var/log/pppd`, or to the file specified in the **traceoptions** statement.

To monitor a PPP session:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **monitor-session** statement.

```
[edit protocols ppp]
user@host# monitor-session (interface-name | all);
```

When monitoring is configured, the operational mode commands **show ppp summary** and **show ppp interface** display a **Monitored** flag in the **Session flags** column or line.

Related [monitor-session on page 783](#)  
Documentation

---

## Tracing Operations of the pppd Process

---

You can trace the operations of the router's pppd process.

To trace the router's pppd process:

1. In configuration mode, go to the **[edit protocols ppp]** hierarchy level.

```
[edit ]
user@host# edit protocols ppp
```

2. Include the **traceoptions** statement.

```
[edit protocols ppp]
traceoptions {
  file filename <files number> <match regular-expression> <size size> <world-readable |
    no-world-readable>;
  flag flag;
  level severity-level;
  no-remote-trace;
}
```

- To specify more than one tracing operation, include multiple **flag** statements.

You can specify the following flags in the **traceoptions** statement:

- **access**—Trace access code
- **address-pool**—Trace address pool code
- **all**—Trace all areas of code
- **auth**—Trace authentication code
- **chap**—Trace challenge handshake authentication protocol code
- **ci**—Trace CI code
- **config**—Trace configuration code
- **ifdb**—Trace interface database code
- **lcp**—Trace LCP state machine code
- **memory**—Trace memory management code
- **message**—Trace message processing code

- **mlppp**—Trace multilink point-to-point protocol code
- **ncp**—Trace NCP state machine code
- **pap**—Trace password authentication protocol code
- **ppp**—Trace PPP protocol processing code
- **radius**—Trace RADIUS processing code
- **redundancy**—Trace redundancy code
- **rtsock**—Trace routing socket code
- **session**—Trace session management code
- **signal**—Trace signal handling code
- **timer**—Trace timer code
- **ui**—Trace user interface code

Related [traceoptions on page 1036](#)  
Documentation



## CHAPTER 12

# Troubleshooting Interfaces

- [Configuring Interface Diagnostics Tools to Test the Physical Layer Connections on page 361](#)
- [Troubleshooting: em0 Management Interface Link is Down on page 367](#)
- [Troubleshooting: fxp0 Management Interface Link is Down on page 369](#)
- [Troubleshooting: Faulty Ethernet Physical Interface on an M Series, an MX Series, or a T Series Router on page 370](#)
- [Time Domain Reflectometry on ACX Series Routers Overview on page 378](#)
- [Diagnosing a Faulty Twisted-Pair Cable on ACX Series Routers on page 381](#)

### Configuring Interface Diagnostics Tools to Test the Physical Layer Connections

- [Configuring Loopback Testing on page 361](#)
- [Configuring BERT Testing on page 363](#)
- [Starting and Stopping a BERT Test on page 366](#)

### Configuring Loopback Testing

Loopback testing allows you to verify the connectivity of a circuit. You can configure any of the following interfaces to execute a loopback test: aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, E1, E3, NxDSO, serial, SONET/SDH, T1, and T3.

The physical path of a network data circuit usually consists of segments interconnected by devices that repeat and regenerate the transmission signal. The transmit path on one device connects to the receive path on the next device. If a circuit fault occurs in the form of a line break or a signal corruption, you can isolate the problem by using a loopback test. Loopback tests allow you to isolate segments of the circuit and test them separately.

To do this, configure a *line loopback* on one of the routers. Instead of transmitting the signal toward the far-end device, the line loopback sends the signal back to the originating router. If the originating router receives back its own Data Link Layer packets, you have verified that the problem is beyond the originating router. Next, configure a line loopback farther away from the local router. If this originating router does not receive its own Data Link Layer packets, you can assume that the problem is on one of the segments between the local router and the remote router's interface card. In this case, the next troubleshooting step is to configure a line loopback closer to the local router to find the source of the problem.

The following types of loopback testing are supported by Junos OS:

- DCE local—Loops packets back on the local data circuit-terminating equipment (DCE).
- DCE remote—Loops packets back on the remote DCE.
- Local—Useful for troubleshooting physical PIC errors. Configuring local loopback on an interface allows transmission of packets to the channel service unit (CSU) and then to the circuit toward the far-end device. The interface receives its own transmission, which includes data and timing information, on the local router's PIC. The data received from the CSU is ignored. To test a local loopback, issue the **show interfaces *interface-name*** command. If PPP keepalives transmitted on the interface are received by the PIC, the **Device Flags** field contains the output **Loop-Detected**.
- Payload—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A payload loopback loops data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated.
- Remote—Useful for troubleshooting the physical circuit problems between the local router and the remote router. A remote loopback loops packets, including both data and timing information, back on the remote router's interface card. A router at one end of the circuit initiates a remote loopback toward its remote partner. When you configure a remote loopback, the packets received from the physical circuit and CSU are received by the interface. Those packets are then retransmitted by the PIC back toward the CSU and the circuit. This loopback tests all the intermediate transmission segments.

Table 51 on page 362 shows the loopback modes supported on the various interface types.

**Table 51: Loopback Modes by Interface Type**

Interface	Loopback Modes	Usage Guidelines
Aggregated Ethernet, Fast Ethernet, Gigabit Ethernet	Local	<i>Configuring Ethernet Loopback Capability</i>
Circuit Emulation E1	Local and remote	<i>Configuring E1 Loopback Capability</i>
Circuit Emulation T1	Local and remote	<i>Configuring T1 Loopback Capability</i>
E1 and E3	Local and remote	<i>Configuring E1 Loopback Capability and Configuring E3 Loopback Capability</i>
NxDSO	Payload	<i>Configuring NxDSO IQ and IQE Interfaces, Configuring T1 and NxDSO Interfaces, Configuring Channelized OC12/STM4 IQ and IQE Interfaces (SONET Mode), Configuring Fractional E1 IQ and IQE Interfaces, and Configuring Channelized T3 IQ Interfaces</i>
Serial (V.35 and X.21)	Local and remote	<a href="#">"Configuring Serial Loopback Capability" on page 348</a>

*Table 51: Loopback Modes by Interface Type (continued)*

Interface	Loopback Modes	Usage Guidelines
Serial (EIA-530)	DCE local, DCE remote, local, and remote	<a href="#">"Configuring Serial Loopback Capability" on page 348</a>
SONET/SDH	Local and remote	<i>Configuring SONET/SDH Loopback Capability to Identify a Problem as Internal or External</i>
T1 and T3	Local, payload, and remote	<i>Configuring T1 Loopback Capability and Configuring T3 Loopback Capability</i>  <i>See also Configuring the T1 Remote Loopback Response</i>

To configure loopback testing, include the **loopback** statement:

```
user@host# loopback mode;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* [aggregated-ether-options](#)]
- [edit interfaces *interface-name* [ds0-options](#)]
- [edit interfaces *interface-name* [e1-options](#)]
- [edit interfaces *interface-name* [e3-options](#)]
- [edit interfaces *interface-name* [fastether-options](#)]
- [edit interfaces *interface-name* [gigether-options](#)]
- [edit interfaces *interface-name* [serial-options](#)]
- [edit interfaces *interface-name* [sonet-options](#)]
- [edit interfaces *interface-name* [t1-options](#)]
- [edit interfaces *interface-name* [t3-options](#)]

## Configuring BERT Testing

To configure BERT:

- Configure the duration of the test.

```
[edit interfaces interface-name interface-type-options]
user@host# bert-period seconds;
```

You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs. By default, the BERT period is 10 seconds.

- Configure the error rate to monitor when the inbound pattern is received.

```
[edit interfaces interface-name interface-type-options]
user@host# bert-error-rate rate;
```

*rate* is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from  $10^{-0}$  (1 error per bit) to  $10^{-7}$  (1 error per 10 million bits).

- Configure the bit pattern to send on the transmit path.

```
[edit interfaces interface-name interface-type-options]
user@host# bert-algorithm algorithm;
```

*algorithm* is the pattern to send in the bit stream. For a list of supported algorithms, enter a ? after the **bert-algorithm** statement; for example:

```
[edit interfaces t1-0/0/0 t1-options]
user@host# set bert-algorithm ?
Possible completions:
pseudo-2e11-o152      Pattern is 2^11 -1 (per 0.152 standard)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.152 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153      Pattern is 2^20 - 1 (per 0.153 standard)
...
```

For specific hierarchy information, see the individual interface types.



**NOTE:** The four-port E1 PIC supports only the following algorithms:

```
pseudo-2e11-o152      Pattern is 2^11 -1 (per 0.152 standard)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e23-o151      Pattern is 2^23 (per 0.151 standard)
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



**NOTE:** The 12-port T1/E1 Circuit Emulation (CE) PIC supports only the following algorithms:

```
all-ones-repeating    Repeating one bits
all-zeros-repeating    Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e11-o152      Pattern is 2^11 -1 (per 0.152 standard)
pseudo-2e15-o151      Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151      Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e7             Pattern is 2^7 - 1
pseudo-2e9-o153        Pattern is 2^9 - 1 (per 0.153 standard)
repeating-1-in-4        1 bit in 4 is set
repeating-1-in-8        1 bit in 8 is set
repeating-3-in-24       3 bits in 24 are set
```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



**NOTE:** The IQE PICs support only the following algorithms:

```

all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e9-o153      Pattern is 2^9 -1 (per 0.153 (511 type) standard)
pseudo-2e11-o152     Pattern is 2^11 -1 (per 0.152 and 0.153 (2047 type)
standards)
pseudo-2e15-o151     Pattern is 2^15 -1 (per 0.151 standard)
pseudo-2e20-o151     Pattern is 2^20 -1 (per 0.151 standard)
pseudo-2e20-o153     Pattern is 2^20 -1 (per 0.153 standard)
pseudo-2e23-o151     Pattern is 2^23 -1 (per 0.151 standard)
repeating-1-in-4      1 bit in 4 is set
repeating-1-in-8      1 bit in 8 is set
repeating-3-in-24     3 bits in 24 are set

```

When you issue the help command from the CLI, all BERT algorithm options are displayed, regardless of the PIC type, and no commit check is available. Unsupported patterns for a PIC type can be viewed in system log messages.



**NOTE:** BERT is supported on the PDH interfaces of the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP and the DS3/E3 MIC. The following BERT algorithms are supported:

```

all-ones-repeating    Repeating one bits
all-zeros-repeating   Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
repeating-1-in-4      1 bit in 4 is set
repeating-1-in-8      1 bit in 8 is set
repeating-3-in-24     3 bits in 24 are set
pseudo-2e9-o153      Pattern is 2^9 - 1 (per 0.153 standard)
pseudo-2e11-o152     Pattern is 2^11 - 1 (per 0.152 standard)
pseudo-2e15-o151     Pattern is 2^15 - 1 (per 0.151 standard)
pseudo-2e20-o151     Pattern is 2^20 - 1 (per 0.151 standard)
pseudo-2e20-o153     Pattern is 2^20 - 1 (per 0.153 standard)
pseudo-2e23-o151     Pattern is 2^23 (per 0.151 standard)

```

Table 52 on page 365 shows the BERT capabilities for various interface types.

**Table 52: BERT Capabilities by Interface Type**

Interface	T1 BERT	T3 BERT	Comments
12-port T1/E1 Circuit Emulation	Yes (ports 0–11)	—	<ul style="list-style-type: none"> <li>Limited algorithms</li> </ul>
4-port Channelized OC3/STM1 Circuit Emulation	Yes (port 0–3)	—	<ul style="list-style-type: none"> <li>Limited algorithms</li> </ul>

Table 52: BERT Capabilities by Interface Type (continued)

Interface	T1 BERT	T3 BERT	Comments
E1 or T1	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> <li>Single port at a time</li> <li>Limited algorithms</li> </ul>
E3 or T3	Yes (port 0–3)	Yes (port 0–3)	<ul style="list-style-type: none"> <li>Single port at a time</li> </ul>
Channelized OC12	—	Yes (channel 0–11)	<ul style="list-style-type: none"> <li>Single channel at a time</li> <li>Limited algorithms</li> <li>No bit count</li> </ul>
Channelized STM1	Yes (channel 0–62)	—	<ul style="list-style-type: none"> <li>Multiple channels</li> <li>Only one algorithm</li> <li>No error insert</li> <li>No bit count</li> </ul>
Channelized T3 and Multichannel T3	Yes (channel 0–27)	Yes (port 0–3 on channel 0)	<ul style="list-style-type: none"> <li>Multiple ports and channels</li> <li>Limited algorithms for T1</li> <li>No error insert for T1</li> <li>No bit count for T1</li> </ul>

These limitations do not apply to channelized IQ interfaces. For information about BERT capabilities on channelized IQ interfaces, see *Channelized IQ and IQE Interfaces Properties*.

## Starting and Stopping a BERT Test

Before you can start the BERT test, you must disable the interface. To do this, include the **disable** statement at the **[edit interfaces *interface-name*]** hierarchy level:

```
[edit interfaces interface-name]
  disable;
```

After you configure the BERT properties and commit the configuration, begin the test by issuing the **test interface *interface-name interface-type-bert-start*** operational mode command:

```
user@host> test interface interface-name interface-type-bert-start
```

The test runs for the duration you specify with the **bert-period** statement. If you want to terminate the test sooner, issue the **test interface *interface-name interface-type-bert-stop*** command:

```
user@host> test interface interface-name interface-type-bert-stop
```

For example:

```
user@host> test interface t3-1/2/0 t3-bert-start
user@host> test interface t3-1/2/0 t3-bert-stop
```

To view the results of the BERT test, issue the **show interfaces extensive | find BERT** command:

```
user@host> show interfaces interface-name extensive | find BERT
```

For more information about running and evaluating the results of the BERT procedure, see the [CLI Explorer](#).



**NOTE:** To exchange BERT patterns between a local router and a remote router, include the `loopback remote` statement in the interface configuration at the remote end of the link. From the local router, issue the `test interface` command.

**Related Documentation**

- *show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, 100-Gigabit Ethernet, and Virtual Chassis Port)*

## Troubleshooting: em0 Management Interface Link is Down

**Problem** **Description:** **Ethernet Link Down** alarm is raised when you run the `show chassis alarm` operational mode command on a T640 router, a T1600 router, T4000 router, or a TX Matrix Plus router.

**Diagnosis** Perform the following tests to check if the em0 management interface is down on the master Routing Engine or the backup Routing Engine:

1. Run the `show chassis alarms` command.

### show chassis alarms

```
user@host0> show chassis alarms
1 alarms currently active
Alarm time Class Description
2011-10-19 11:13:02 MYT Major Host 1 em0 : Ethernet Link Down
```

Is the alarm **Ethernet Link Down** displayed against the em0 interface of the master Routing Engine (Host 0)?

- Yes: Contact JTAC for further assistance.
- No: Continue to the next diagnostic test.

2. Run the `show interfaces em0` and the `show interfaces em0 terse` operational mode commands.

### show interfaces em0

```
user@host> show interfaces em0
Physical interface: em0, Enabled, Physical link is Up
Interface index: 1, SNMP ifIndex: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
Device flags : Present Running
Interface flags: SNMP-Traps
...
```

### show interfaces em0 terse

```
user@host> show interfaces em0 terse
Interface Admin Link Proto Local Remote
em0 up up
em0.0 up up inet 10.100.100.1/30
```

Is the em0 interface on the master Routing Engine **up**?

- Yes: Continue to resolution.
- No: Contact JTAC for further assistance

#### Resolution *To Resolve This Issue*

From the aforementioned diagnosis, we ascertain that the chassis alarm has been raised for the em0 management interface in the backup Routing Engine (Host 1) and not for the master Routing Engine (Host 0).

Implement one of the following solutions on the backup Routing Engine to resolve this issue:

- Disable the em0 interface in the backup Routing Engine:
  1. In configuration mode, go to the **[edit groups re1]** hierarchy level.

```
user@host1# edit groups re1
```
  2. Disable the em0 interface.

```
[edit groups re1]
user@host1# set interfaces em0 disable
```
- Ignore the alarm:
  1. In configuration mode, go to the **[edit chassis]** hierarchy level.

```
user@host1# edit chassis
```
  2. Ignore the **Ethernet link down** alarm on the management interface by setting the **management-ethernet link-down** alarm option to **ignore**.

```
[edit chassis]
user@host1# set alarm management-ethernet link-down ignore
```

- Related Documentation**
- [Supported Routing Engines by Router on page 17](#)
  - *show chassis alarms*

## Troubleshooting: fxp0 Management Interface Link is Down

**Problem** **Description:** **Ethernet Link Down** alarm is raised when you run the **show chassis alarm** operational mode command on an M Series router, an MX Series router, a T320 router, a T640 router, a T1600 router, or on a TX Matrix router.

**Diagnosis** Perform the following tests to check if the fxp0 interface is down on the master Routing Engine or the backup Routing Engine:

1. Run the **show chassis alarms** command.

### show chassis alarms

```
user@host0> show chassis alarms
1 alarms currently active
Alarm time Class Description
2011-10-19 11:13:02 MYT Major Host 1 fxp0 : Ethernet Link Down
```

Is the alarm **Ethernet Link Down** displayed against the fxp0 interface of the master Routing Engine (Host 0)?

- Yes: Contact JTAC for further assistance.
- No: Continue to the next diagnostic test.

2. Run the **show interfaces fxp0** and the **show interfaces fxp0 terse** operational mode commands.

### show interfaces fxp0

```
user@host> show interfaces fxp0
Physical interface: fxp0, Enabled, Physical link is Up
Interface index: 1, SNMP ifIndex: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
Device flags : Present Running
Interface flags: SNMP-Traps
...
```

### show interfaces fxp0 terse

```
user@host> show interfaces fxp0 terse
Interface Admin Link Proto Local Remote
fxp0 up up
fxp0.0 up up inet 10.100.100.1/30
```

Is the fxp0 interface on the master Routing Engine **up**?

- Yes: Continue to resolution.

- No: Contact JTAC for further assistance

**Resolution**    *To Resolve This Issue*

From the diagnosis, we ascertain that the chassis alarm has been raised for the fxp0 management interface in the backup Routing Engine (Host 1) and not for the master Routing Engine (Host 0).

Implement one of the following solutions on the backup Routing Engine to avoid this issue:

- Disable the fxp0 interface in the backup Routing Engine:
  1. In configuration mode, go to the **[edit groups re1]** hierarchy level.  
`user@host1# edit groups re1`
  2. Disable the fxp0 interface.  
`[edit groups re1]  
user@host1# set interfaces fxp0 disable`
- Ignore the alarm:
  1. In configuration mode, go to the **[edit chassis]** hierarchy level.  
`user@host1# edit chassis`
  2. Ignore the **Ethernet link down** alarm on the management interface by setting the **management-ethernet link-down** alarm option to **ignore**.  
`[edit chassis]  
user@host1# set alarm management-ethernet link-down ignore`

- Related Documentation**
- [Supported Routing Engines by Router on page 17](#)
  - [show chassis alarms](#)

---

## Troubleshooting: Faulty Ethernet Physical Interface on an M Series, an MX Series, or a T Series Router

---

You can follow the basic troubleshooting checklist as explained in the following topics from one through five to troubleshoot an Ethernet physical interface on an M Series, MX Series, or a T Series router.

1. [Checking the Cable Connection on page 371](#)
2. [Checking the Physical Link Status of the Interface on page 372](#)
3. [Checking the Interface Statistics in Detail on page 373](#)

4. [Performing the Loopback Diagnostic Test on page 375](#)
5. [Checking Other Possibilities on page 377](#)
6. [To Enable a Physical Interface on page 378](#)

## Checking the Cable Connection

**Problem**    **Description:** Packets are not received or transmitted over the Ethernet physical interface.

- Diagnosis**
1. Is the correct cable connected to the correct port?
    - Yes: Continue to [“Checking the Physical Link Status of the Interface” on page 372](#).
    - No: See [“Resolving Cabling Issue” on page 371](#).

**Resolution**    ***Resolving Cabling Issue***

Perform one or more of the following steps to resolve the cabling issue:

1. Connect the cable properly on the local and remote ends without any loose connections.
2. Swap the Ethernet cable for a known good cable if the existing cable is damaged.
3. Connect a single-mode fiber cable to a single-mode interface only and a multimode fiber cable to a multimode interface only. To check fiber optic cable integrity, see [“Checking Fiber Optic Cable Integrity” on page 371](#).
4. Connect the correct small form-factor pluggable transceiver (SFP) on both sides of the cable.

***Checking Fiber Optic Cable Integrity***

To check the integrity of fiber optic cable with an external cable diagnostic testing tool:



**NOTE:** A single-mode fiber cable must be connected to a single-mode interface and a multi-mode fiber cable must be connected to a multi-mode interface.

1. Measure the received light level at the receiver ( $R_x$ ) port to see whether the received light level is within the receiver specification of the Ethernet interface.

2. Measure transmitted light level at the transmitter ( $T_x$ ) port to see whether the transmitted light level is within the transmitter specification of the Ethernet interface.

## Checking the Physical Link Status of the Interface

**Problem**    **Description:** Unable to transmit and receive packets on the Ethernet interface even though the cable connection is correct.

**Solution**    To display the physical link status of the interface, run the **show interface *interface-name* media** operational mode command. For example, on the ge-5/0/1 interface.

```
user@host> show interfaces ge-5/0/1 media
Physical interface: ge-5/0/1, Enabled, Physical link is Up
  Interface index: 317, SNMP ifIndex: 1602
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online, Speed-negotiation: Disabled,
  Auto-MDIX: Enabled
  Device flags      : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags       : None
  CoS queues       : 8 supported, 8 maximum usable queues
  Current address: 2c:6b:f5:4c:26:73, Hardware address: 2c:6b:f5:4c:26:73
  Last flapped    : 2012-11-30 01:25:37 UTC (03:46:55 ago)
  Input rate      : 880 bps (1 pps)
  Output rate     : 312 bps (0 pps)
  Active alarms   : None
  Active defects  : None
  MAC statistics:
    Input bytes: 901296, Input packets: 9799, Output bytes: 976587, Output packets:
10451
  Filter statistics:
    Filtered packets: 68, Padded packets: 0, Output packet errors: 0
  Autonegotiation information:
    Negotiation status: Complete
    Link partner:
      Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
    Local resolution:
      Flow control: Symmetric, Remote fault: Link OK
  Interface transmit statistics: Disabled
```

For information about **show interfaces *interface-name* media**, see [show interfaces](#).

- 
- Diagnosis**    1. Are there any connectivity problems such as input errors and packet loss even though the **Enabled** field displays **Physical link is Up** status and the **Active alarms** and **Active defect** field displays **None**?
- Yes: Go to “[Checking the Interface Statistics in Detail](#)” on page 373.

- No: Continue to the next diagnostic test.
2. Does the **Enabled** field display **Physical link is Down** status and the **Active alarms** and **Active defect** field display **Link**?
- Yes: The interface is either not connected correctly or is not receiving a valid signal. Go to [“Resolving Cabling Issue” on page 371](#).
  - No: Continue.

## Checking the Interface Statistics in Detail

**Problem**    **Description:** The physical interface is not working even though the **Enabled** field displays **Physical link is Up** status and the **Active alarms** and **Active defect** field displays **None**.

**Solution**    To display the interface statistics in detail, run the **show interface *interface-name* extensive** operational command. For example, on ge-5/0/1 interface.

```
user@host> show interfaces ge-5/0/1 extensive
Physical interface: ge-5/0/1, Enabled, Physical link is Up
  Interface index: 317, SNMP ifIndex: 1602, Generation: 322
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online, Speed-negotiation: Disabled,
  Auto-MDIX: Enabled
  Device flags       : Present Running
  Interface flags:   SNMP-Traps Internal: 0x4000
  Link flags         : None
  CoS queues         : 8 supported, 8 maximum usable queues
  Hold-times         : Up 0 ms, Down 0 ms
  Current address:   2c:6b:f5:4c:26:73, Hardware address: 2c:6b:f5:4c:26:73
  Last flapped      : 2012-11-30 01:25:37 UTC (04:38:32 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes  :           806283           0 bps
  Output bytes :          1153215          424 bps
  Input packets:           10818           0 pps
  Output packets:          11536           0 pps
IPv6 transit statistics:
  Input bytes  :              0
  Output bytes :              0
  Input packets:              0
  Output packets:             0
Label-switched interface (LSI) traffic statistics:
  Input bytes  :              0           0 bps
  Input packets:              0           0 pps
Dropped traffic statistics due to STP State:
  Input bytes  :              0
  Output bytes :              0
  Input packets:              0
  Output packets:             0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 233060,
```

```

L3 incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 11, Errors: 0, Drops: 0, Collisions: 0, Aged packets:
0, FIFO errors: 0, HS link CRC errors: 0,
  MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      3216      3216      0

  1 expedited-fo      0      0      0

  2 assured-forw      0      0      0

  3 network-cont      8320      8320      0

Queue number:      Mapped forwarding classes
  0      best-effort
  1      expedited-forwarding
  2      assured-forwarding
  3      network-control

Active alarms : None
Active defects : None
MAC statistics:
  Total octets      Receive      Transmit
  Total packets      10886      11536
  Unicast packets      4350      4184
  Broadcast packets      32      77
  Multicast packets      6504      7275
  CRC/Align errors      0      0
  FIFO errors      0      0
  MAC control frames      0      0
  MAC pause frames      0      0
  Oversized frames      0
  Jabber frames      0
  Fragment frames      0
  VLAN tagged frames      0
  Code violations      0
Filter statistics:
  Input packet count      10886
  Input packet rejects      68
  Input DA rejects      68
  Input SA rejects      0
  Output packet count      11536
  Output packet pad count      0
  Output packet error count      0
  CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Complete
  Link partner:
    Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
  Local resolution:
    Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
  Destination slot: 5
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit

```

```

          0 best-effort          %          bps          %          usec
none          3 network-control  5          50000000    5          0          low
none
Interface transmit statistics: Disabled

```

For information about `show interfaces interface-name detail`, see [show interfaces](#).

- Diagnosis** 1. Does the **Policed discards**, **L2 channel errors**, **Input DA rejects**, or the **Input SA rejects** field display any errors?

For information about the errors, see [show interfaces](#).

- Yes: Resolve the errors as needed. Resolving these errors is beyond the scope of this topic.
- No: Continue with “Performing the Loopback Diagnostic Test” on page 375.

## Performing the Loopback Diagnostic Test

**Problem** **Description:** The interface cable is connected correctly and there are no alarms or errors associated with the Ethernet physical interface yet the interface is not working.

**Solution** To check whether the Ethernet port or PIC is faulty, you must perform the internal loopback test and hardware loopback test.

To perform a internal loopback diagnostic test on an Ethernet interface, for example on ge-5/0/1 interface:

1. In configuration mode, go to the `[edit interfaces ge-5/0/1]` hierarchy level.

```

[edit]
user@host# edit interface ge-5/0/1

```

2. Set the **gigether-options** option as loopback, commit the configuration and quit configuration mode.

```

[edit interfaces ge-5/0/1]
user@host# set gigether-options loopback
user@host# commit
user@host# quit

```

3. In operational mode, execute the `show interfaces ge-5/0/1 media` command.

```

user@host> show interfaces ge-5/0/1 media
Physical interface: ge-5/0/1, Enabled, Physical link is Up
Interface index: 317, SNMP ifIndex: 1602
Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, BPDU Error: None,

```

```

MAC-REWRITE Error: None, Loopback: Enabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online, Speed-negotiation: Disabled,
Auto-MDIX: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 2c:6b:f5:4c:26:73, Hardware address: 2c:6b:f5:4c:26:73
Last flapped   : 2012-11-30 01:25:37 UTC (03:46:55 ago)
Input rate     : 880 bps (1 pps)
Output rate    : 312 bps (0 pps)
Active alarms  : None
Active defects : None
MAC statistics:
  Input bytes: 901296, Input packets: 9799, Output bytes: 976587, Output
  packets: 10451
  Filter statistics:
    Filtered packets: 68, Padded packets: 0, Output packet errors: 0
  Autonegotiation information:
    Negotiation status: Complete
  Link partner:
    Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote
    fault: OK
  Local resolution:
    Flow control: Symmetric, Remote fault: Link OK
  Interface transmit statistics: Disabled

```



**NOTE:** Delete the loopback statement after completing your diagnosis.

Execute one of the following steps for a hardware loopback diagnostic test as needed:

- For an Ethernet PIC with a fiber optic interface—Physically loop the  $T_x$  and  $R_x$  port and check the status of the physical link with the **show interfaces *interface-name* media** operational mode command.
- For an Ethernet PIC with an RJ-45 Ethernet interface—Build a loopback plug by crossing pin 1 ( $T_x +$ ) to pin 3 ( $R_x +$ ) together and pin 2 ( $T_x -$ ) and pin 6 ( $R_x -$ ) together and check the status of the physical link with the **show interfaces *interface-name* media** operational mode command.



**NOTE:** For information about loopback testing, see *Performing Loopback Testing for Fast Ethernet and Gigabit Ethernet Interfaces*.

- Diagnosis**
1. Does the **Enabled** field display **Physical link is Up** status and the **Active alarms and Active defect** field display **None** when you perform the loopback test?

- Yes: Go to the [“Checking Other Possibilities” on page 377](#) section.
  - No: Continue to the next diagnostic test.
2. When the Ethernet interface is connected to a remote Ethernet device over multiple patch panels, check to see whether the connection can be looped back at the different patch panels so you can conduct a loopback diagnostic test. Is the loopback diagnostic test successful?
- Yes: Go to the [“Checking Other Possibilities” on page 377](#) section.
  - No: Contact JTAC for further assistance.

## Checking Other Possibilities

**Problem**    **Description:** Loopback diagnostic test is successful but unable to transmit and receive packets on the Ethernet interface.

**Solution**    Use the following commands as needed to troubleshoot an Ethernet interface, for example, an ge-5/0/1 interface:

- Run the **show interfaces *interface-name* terse** operational command to check if the physical interface and logical interfaces are administratively disabled. For example, on ge-5/0/1 interface.

```
user@host> show interfaces ge-5/0/1 terse
Interface      Admin Link Proto  Local          Remote
ge-5/0/1       up    up
ge-5/0/1.0     up    up   inet   20.1.1.2/24
```

- Diagnosis**
1. Does the physical interface and its corresponding logical interfaces display **down** in the output of the **show interfaces *interface-name* terse** operational mode command?
    - Yes: Enable the interfaces as shown in [“To Enable a Physical Interface” on page 378](#).
    - No: Continue to the next diagnostic test.
  2. Are the **speed**, **duplex**, and **auto-negotiation** fields in the output of **show interfaces *interface-name* extensive** operational mode command correctly set for the interface?



**NOTE:** Check if the associated Flexible PIC Concentrator (FPC), Modular Port Concentrator (MPC), or Dense Port Concentrator (DPC) and its Modular Interface Card (MIC) or PIC with its 10-gigabit small form-factor pluggable transceiver (XFP) or SFP supports speed and auto-negotiation settings.

- Yes: Check *Monitoring Fast Ethernet and Gigabit Ethernet Interfaces* for more troubleshooting tips.
- No: Contact JTAC for further assistance.

## To Enable a Physical Interface

To enable a physical interface:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level.

```
[edit]  
user@host# edit interfaces
```

2. Check if the interface is administratively disabled by executing the **show** command on the interface. For example on ge-5/0/1 interface.

```
user@host# show ge-5/0/1
```

```
disable;
```

3. Enable the interface and commit.

```
[edit interfaces  
user@host# delete interface-name disable  
user@host# commit
```

See Also • [show interfaces on page 1123](#)

---

## Time Domain Reflectometry on ACX Series Routers Overview

Time Domain Reflectometry (TDR) is a technology used for diagnosing copper cable states. This technique can be used to determine if cabling is at fault when you cannot establish a link. TDR detects the defects by sending a signal through a cable, and reflecting it from the end of the cable. Open circuits, short circuits, sharp bends and other defects in the cable, reflects the signal back, at different amplitudes, depending on the severity of the defect.

Several factors that result in degraded or low-quality cable plants can cause packet loss, suboptimal connection speed, reduced network efficiency, and complete connection failures. These types of problems can occur because of poor cable construction, identification of pair twists, loose connectors, poor contacts between the points, and stretched or broken pairs of cables. Broadcom transceivers enable you to analyze the condition of the cable plant or topology and identify any problems that have occurred. This functionality is effectively used in the following scenarios:

- Troubleshooting during initial network equipment installation.
- Discovery of failures when network problems occur.

- Maintenance of optimally functioning cable plants.
- Fault determination during the testing of network equipment in production cable networks.

TDR supports the following capabilities for examination of cable faults on ACX Series routers:

- Cable status pair (open or short)—When the router operates in Gigabit Ethernet mode, all the four pairs (8 wires) are used. Only Pair-A and Pair-B are required to operate in 10/100BASE-T Ethernet mode. If either of these required pairs is open or short-circuited, the transceiver reports the following faults:
  - Any open wire
  - Wires of a particular pair that are shorted
- Distance to fault per pair—Distance at which an open or a short-circuit is detected in meters. This measurement is also termed as cable length. The transceiver reports the following faults:
  - Cable length when the cable status is normal
  - Distance to fault when the cable status is not normal
- Pair Swap—Swapping of twisted-pairs in straight-through and cross-over cable plants are detected.
- Polarity Swap—Each cable pair carries a differential signal from one end to the other end of the cable. Each wire within the pair is assigned a polarity. The wires in a pair are normally connected in a one-to-one form. This connection enables the transmitter at one end to be connected to the receiver at the other end with same polarity. Sometimes, the wiring within the pair is also swapped. This type of connection is called polarity swap. Broadcom transceivers can detect such swapping and automatically adjust the connection to enable the links to operate normally. However, the transceiver reports polarity swaps that it detects in the cable plant.

On 4-port Gigabit Ethernet and 8-port Gigabit Ethernet MICs with copper SFP transceivers (using BCM54880) and 4-port Gigabit Ethernet, 6-port Gigabit Ethernet, and 8-port Gigabit Ethernet MICs with copper and optical SFP transceivers (using BCM54640E PHY), only 10BASE-T pair polarity is supported. 100BASE-T and 1000BASE-T polarities are not supported.

When the Gigabit Ethernet link cannot be established (for example, if only two pairs are present that are fully functional), TDR in the physical layer (PHY) brings down the link to a 100 MB link, which is called a downshift in the link. The physical layer might require 10-20 seconds for the link to come up if a downgrade in wire speed occurs because it attempts to connect at 1000 MB five times before it falls back to 100BASE-TX.

TDR diagnostics is supported only on copper interfaces and not on fiber interfaces.

Keep the following points in mind when you configure TDR:

- If you connect a port undergoing a TDR test to a Gigabit Ethernet interface that is enabled to automatically detect MDI (Media Dependent Interface) and MDIX (Media Dependent Interface with Crossover) port connections, the TDR result might be invalid.
- If you connect a port undergoing a TDR test to a 100BASE-T copper interface, the unused pairs are reported as faulty because the remote end does not terminate these pairs.
- You must not modify the port configuration while the TDR test is running.
- Because of cable characteristics, you need to run the TDR test multiple times to get accurate results.
- Do not change the port status (such as removing the cable at the near or far end) because such a change can result in inaccurate statistics in the results.
- While measuring the cable length or distance to fault (per pair), sometimes, a few cable length inconsistencies might be observed during a TDR test. Broadcom transceivers have the following cable length limitations:
  - For a properly-terminated good cable, the accuracy of the cable length reported is plus or minus 10 meters.
  - If a pair is open or short-circuited, the far-end termination does not affect the computed result for that pair.
  - The accuracy of the measured cable length, when open and short-circuit conditions are detected, is plus or minus 5 meters.
  - The accuracy of a good pair, when one or more pairs are open or short-circuited, is plus or minus 10 meters.
- Polarity swap detection is supported only in 10BASE-T mode.
- The TDR test does not impact the traffic if the interface operates at 10-Gigabit Ethernet per second of bandwidth, which is the default configuration. However, if the speed of the interface is configured to be other than 10-Gigabit Ethernet, running the TDR test affects the traffic.

TDR diagnostics might bring the link down and initialize the physical layer (PHY) with default configuration to perform its operation.

When the TDR validation test is completed, the PHY layer resumes operation in the same manner as before the cable diagnostics test was performed. However, link flaps might be momentarily observed. We recommend that you run the TDR test at a speed of 1 gigabit per second, which is the default configuration, to obtain more accurate results.

TDR is supported on the following interfaces on ACX Series routers:

- On ACX1000 routers, 4 RJ45 (Cu) ports or 8-port Gigabit Ethernet MICs with small form-factor pluggable (SFP) transceivers and RJ45 connectors.

On ACX1100 routers, 4-port or 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.

- On ACX2000 routers, 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX2100 and ACX2200 routers, 4-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX4000 routers, 4-port, 6-port, or 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.

You must select the media type as copper for the 1-Gigabit Ethernet interfaces. To specify the media type, include the **media-type** statement with the **copper** option at the **[edit interfaces interface-name]** hierarchy level. Media type selection is applicable to ports only in slot 2. When media-type is not set, the port accepts either type of connection. The media type is fiber if a transceiver is installed in the SFP connection. If no transceiver is installed, the media type is copper. The COMBO ports (combination ports) on ACX routers support both the copper and fiber-optic media types. On such ports or interfaces, you must configure the media type as copper to run the TDR test.

You can run the TDR test from operational mode and view the success or failure results of the test. To start a test on a specific interface, issue the **request diagnostics tdr start interface interface-name** command. To stop the TDR test currently in progress on the specified interface, issue the **request diagnostics tdr abort interface interface-name** command. To display the test results for all copper interfaces, enter the **show diagnostics tdr** command. To display the test results for a particular interface, enter the **show diagnostics tdr interface interface-name** command.

#### Related Documentation

- [Diagnosing a Faulty Twisted-Pair Cable on ACX Series Routers on page 381](#)

## Diagnosing a Faulty Twisted-Pair Cable on ACX Series Routers

**Problem**     **Description:** A 10/100BASE-T Ethernet interface has connectivity problems that you suspect might be caused by a faulty cable.

**Solution**     Use the time domain reflectometry (TDR) test to determine whether a twisted-pair Ethernet cable is faulty.

The TDR test:

- Detects and reports faults for each twisted pair in an Ethernet cable. Faults detected include open circuits, short circuits, and impedance mismatches.
- Reports the distance to fault to within 1 meter.
- Detects and reports pair swaps, pair polarity reversals, and excessive pair skew.

The TDR test is supported on the following ACX routers and interfaces:

- On ACX1000 routers, 4 RJ45 (Cu) ports or 8-port Gigabit Ethernet MICs with small form-factor pluggable (SFP) transceivers and RJ45 connectors.
- On ACX1100 routers, 4-port or 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX2000 routers, 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX2100 and ACX2200 routers, 4-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.
- On ACX4000 routers, 4-port, 6-port, or 8-port Gigabit Ethernet MICs with SFP transceivers and RJ45 connectors.



**NOTE:** We recommend running the TDR test on an interface when there is no traffic on the interface.

TDR diagnostics are applicable for copper ports only and not for optical fiber ports.

---

To diagnose a cable problem by running the TDR test:

1. Run the **request diagnostics tdr** command.

```
user@host> request diagnostics tdr start interface ge-0/0/10
```

```
Interface TDR detail:
```

```
Test status                : Test successfully executed ge-0/0/10
```

2. View the results of the TDR test with the **show diagnostics tdr** command.

```
user@host> show diagnostics tdr interface ge-0/0/10
```

```
Interface TDR detail:
```

```
Interface name              : ge-0/0/10
Test status                 : Passed
Link status                 : Down
MDI pair                    : 1-2
  Cable status              : Normal
  Distance fault            : 0 Meters
  Polartiy swap             : N/A
  Skew time                 : N/A
MDI pair                    : 3-6
  Cable status              : Normal
  Distance fault            : 0 Meters
  Polartiy swap             : N/A
  Skew time                 : N/A
MDI pair                    : 4-5
  Cable status              : Open
  Distance fault            : 1 Meters
  Polartiy swap             : N/A
  Skew time                 : N/A
```

```

MDI pair           : 7-8
Cable status       : Normal
Distance fault     : 0 Meters
Polarity swap      : N/A
Skew time          : N/A
Channel pair       : 1
Pair swap          : N/A
Channel pair       : 2
Pair swap          : N/A
Downshift          : N/A

```

3. Examine the **Cable status** field for the four MDI pairs to determine if the cable has a fault. In the preceding example, the twisted pair on pins 4 and 5 is broken or cut at approximately one meter from the **ge-0/0/10** port connection.



**NOTE:** The **Test Status** field indicates the status of the TDR test, not the cable. The value **Passed** means the test completed—it does not mean that the cable has no faults.

The following is additional information about the TDR test:

- The TDR test can take some seconds to complete. If the test is still running when you execute the **show diagnostics tdr** command, the **Test status** field displays **Started**. For example:

```
user@host> show diagnostics tdr interface ge-0/0/22
```

Interface TDR detail:

```

Interface name      : ge-0/0/22
Test status         : Started

```

- You can terminate a running TDR test before it completes by using the **request diagnostics tdr abort interface interface-name** command. The test terminates with no results, and the results from any previous test are cleared.
- You can display summary information about the last TDR test results for all interfaces on the router that support the TDR test by not specifying an interface name with the **show diagnostics tdr** command. For example:

```
user@host> show diagnostics tdr
```

Interface	Test status	Link status	Cable status	Max distance fault
ge-0/0/0	Passed	UP	OK	0
ge-0/0/1	Not Started	N/A	N/A	N/A
ge-0/0/2	Passed	UP	OK	0
ge-0/0/3	Not Started	N/A	N/A	N/A
ge-0/0/4	Passed	UP	OK	0
ge-0/0/5	Passed	UP	OK	0
ge-0/0/6	Passed	UP	OK	0
ge-0/0/7	Not Started	N/A	N/A	N/A
ge-0/0/8	Passed	Down	OK	0
ge-0/0/9	Not Started	N/A	N/A	N/A
ge-0/0/10	Passed	Down	Fault	1
ge-0/0/11	Passed	UP	OK	0

ge-0/0/12	Not Started	N/A	N/A	N/A
ge-0/0/13	Not Started	N/A	N/A	N/A
ge-0/0/14	Not Started	N/A	N/A	N/A
ge-0/0/15	Not Started	N/A	N/A	N/A
ge-0/0/16	Not Started	N/A	N/A	N/A
ge-0/0/17	Not Started	N/A	N/A	N/A
ge-0/0/18	Not Started	N/A	N/A	N/A
ge-0/0/19	Passed	Down	OK	0
ge-0/0/20	Not Started	N/A	N/A	N/A
ge-0/0/21	Not Started	N/A	N/A	N/A
ge-0/0/22	Passed	UP	OK	0
ge-0/0/23	Not Started	N/A	N/A	N/A

- Related Documentation**
- [Time Domain Reflectometry on ACX Series Routers Overview on page 378](#)
  - *request diagnostics tdr*
  - *show diagnostics tdr*

## PART 5

# Configuration Statements and Operational Commands

- [Configuration Statements on page 387](#)
- [Interface Operational Commands on page 1113](#)
- [ANCP Operational Commands on page 1613](#)
- [BFD Operational Commands on page 1653](#)
- [BGP Operational Commands on page 1667](#)
- [ES-IS Operational Commands on page 1717](#)
- [IP Multicast Operational Commands on page 1727](#)
- [IPv6 Operational Commands on page 1969](#)
- [IS-IS Operational Commands on page 1979](#)
- [LLDP Operational Commands on page 2043](#)
- [MVRP Operational Commands on page 2063](#)
- [OSPF Operational Commands on page 2081](#)
- [Protocol-Independent Routing Operational Commands on page 2165](#)
- [RIP Operational Commands on page 2427](#)
- [RIPng Operational Commands on page 2439](#)
- [Firewall Filter Operational Commands on page 2449](#)
- [Layer 2 Bridging and Switching Operational Commands on page 2471](#)
- [VPN Operational Commands on page 2503](#)



## CHAPTER 13

# Configuration Statements

- [802.3ad on page 406](#)
- [accept on page 407](#)
- [accept-source-mac on page 409](#)
- [access-concentrator on page 411](#)
- [access-profile on page 412](#)
- [accounting on page 413](#)
- [accounting-profile on page 414](#)
- [acfc on page 415](#)
- [acknowledge-retries on page 416](#)
- [acknowledge-timer on page 417](#)
- [action \(OAM\) on page 417](#)
- [action \(Policer\) on page 418](#)
- [action-profile \(Applying to CFM\) on page 418](#)
- [action-profile \(Defining for CFM\) on page 419](#)
- [action-profile on page 420](#)
- [action-red-differential-delay on page 421](#)
- [activation-delay on page 422](#)
- [activation-priority on page 423](#)
- [address on page 424](#)
- [advertise-interval on page 426](#)
- [age on page 427](#)
- [agent-specifier on page 428](#)
- [aggregate \(Gigabit Ethernet CoS Policer\) on page 429](#)
- [aggregate \(Hierarchical Policer\) on page 430](#)
- [aggregate \(SONET/SDH\) on page 431](#)
- [aggregate-ports on page 431](#)
- [aggregated-ether-options on page 432](#)
- [aggregated-sonet-options on page 433](#)

- [alarm \(optics-options\) on page 434](#)
- [alias \(Interfaces\) on page 435](#)
- [allow-any-vci on page 435](#)
- [allow-fragmentation on page 436](#)
- [allow-remote-loopback on page 437](#)
- [annex on page 437](#)
- [apply-action-profile on page 438](#)
- [aps on page 439](#)
- [arp \(Interfaces\) on page 440](#)
- [asynchronous-notification on page 442](#)
- [atm-encapsulation on page 443](#)
- [atm-options on page 444](#)
- [atm-scheduler-map on page 445](#)
- [authentication on page 446](#)
- [authentication-key on page 447](#)
- [authentication-profile-name on page 447](#)
- [authenticator on page 448](#)
- [auto-configure on page 449](#)
- [auto-discovery on page 450](#)
- [auto-negotiation on page 451](#)
- [backup-destination on page 453](#)
- [backup-interface on page 453](#)
- [backup-options on page 454](#)
- [bandwidth \(Interfaces\) on page 455](#)
- [bandwidth-limit \(Hierarchical Policer\) on page 456](#)
- [bandwidth-limit \(Policer for Gigabit Ethernet Interfaces\) on page 457](#)
- [bearer-bandwidth-limit on page 458](#)
- [bert-algorithm on page 459](#)
- [bert-error-rate on page 461](#)
- [bert-period on page 463](#)
- [bridge-domain on page 464](#)
- [broadcast on page 465](#)
- [buildout \(E3 or T3 over ATM Interfaces\) on page 466](#)
- [buildout \(T1 Interfaces\) on page 467](#)
- [bundle on page 468](#)
- [burst-size-limit \(Hierarchical Policer\) on page 469](#)
- [burst-size-limit \(Policer for Gigabit Ethernet Interfaces\) on page 470](#)

- [byte-encoding on page 471](#)
- [bytes on page 472](#)
- [calculation-weight on page 473](#)
- [callback on page 474](#)
- [callback-wait-period on page 475](#)
- [caller on page 476](#)
- [calling-number on page 477](#)
- [cbit-parity on page 477](#)
- [cbr on page 478](#)
- [cell-bundle-size on page 479](#)
- [chap on page 480](#)
- [chap-secret on page 481](#)
- [circuit-type on page 482](#)
- [cisco-interoperability on page 482](#)
- [classifier on page 483](#)
- [clear-dont-fragment-bit on page 484](#)
- [clock-rate on page 485](#)
- [clocking on page 486](#)
- [clocking-mode on page 487](#)
- [community \(Policy Options\) on page 488](#)
- [compatibility-mode on page 491](#)
- [compression \(PPP Properties\) on page 492](#)
- [compression \(Voice Services\) on page 493](#)
- [compression-device on page 493](#)
- [connections on page 494](#)
- [connection-protection-tlv on page 494](#)
- [connectivity-fault-management on page 495](#)
- [container-devices on page 497](#)
- [container-list on page 498](#)
- [container-options on page 499](#)
- [container-type on page 500](#)
- [continuity-check on page 501](#)
- [control-channel on page 502](#)
- [control-polarity on page 503](#)
- [control-signal on page 503](#)
- [copy-tos-to-outer-ip-header on page 504](#)
- [core-dump on page 504](#)

- [crc-major-alarm-threshold](#) on page 505
- [crc-minor-alarm-threshold](#) on page 506
- [cts](#) on page 507
- [cts-polarity](#) on page 507
- [cycle-time](#) on page 508
- [damping \(Interfaces\)](#) on page 509
- [data-channel](#) on page 511
- [data-tlv-size](#) on page 512
- [dcd](#) on page 513
- [dcd-polarity](#) on page 513
- [dce](#) on page 514
- [deactivation-delay](#) on page 514
- [dce-options](#) on page 515
- [default-actions](#) on page 516
- [default-chap-secret](#) on page 517
- [default-pap-password](#) on page 518
- [delimiter](#) on page 518
- [demux-destination \(Underlying Interface\)](#) on page 519
- [demux-destination \(Demux Interface\)](#) on page 520
- [demux-options \(Static Interface\)](#) on page 521
- [demux-source \(Demux Interface\)](#) on page 521
- [demux-source \(Underlying Interface\)](#) on page 522
- [demux0 \(Static Interface\)](#) on page 523
- [demux0 \(Dynamic Interface\)](#) on page 524
- [description \(Interfaces\)](#) on page 526
- [destination \(IPCP\)](#) on page 527
- [destination \(Routing Instance\)](#) on page 528
- [destination \(Tunnels\)](#) on page 529
- [destination-class-usage](#) on page 530
- [destination-profile](#) on page 531
- [dial-options](#) on page 532
- [dial-string](#) on page 533
- [dialer](#) on page 533
- [dialer-options](#) on page 534
- [dialin](#) on page 535
- [direction](#) on page 536
- [disable \(Interface\)](#) on page 537

- [disable \(Link Protection\)](#) on page 538
- [disable-mlppp-inner-ppp-pfc](#) on page 539
- [dlci](#) on page 540
- [do-not-fragment](#) on page 541
- [domain-name](#) on page 542
- [dot1x](#) on page 543
- [down-count](#) on page 544
- [drop \(PPPoE Service Name Tables\)](#) on page 545
- [drop-timeout](#) on page 546
- [ds0-options](#) on page 547
- [dsl-options](#) on page 548
- [dsr](#) on page 549
- [dsr-polarity](#) on page 549
- [dte-options](#) on page 550
- [dtr](#) on page 551
- [dtr-circuit](#) on page 552
- [dtr-polarity](#) on page 552
- [dump-on-flow-control](#) on page 553
- [dynamic-call-admission-control](#) on page 554
- [dynamic-profile \(PPP\)](#) on page 555
- [dynamic-profile \(PPPoE Service Name Tables\)](#) on page 556
- [dynamic-profile \(Stacked VLAN\)](#) on page 557
- [dynamic-profile \(VLAN\)](#) on page 558
- [dynamic-profiles](#) on page 559
- [e1-options](#) on page 568
- [e3-options](#) on page 569
- [east-interface](#) on page 570
- [egress-policer-overhead](#) on page 571
- [encapsulation \(Container Interface\)](#) on page 572
- [encapsulation \(Logical Interface\)](#) on page 573
- [encapsulation](#) on page 577
- [encoding](#) on page 584
- [epd-threshold \(Logical Interface\)](#) on page 585
- [epd-threshold \(Physical Interface\)](#) on page 586
- [es-options](#) on page 587
- [ethernet \(Protocols OAM\)](#) on page 588
- [ethernet-policer-profile](#) on page 594

- [ethernet-ring](#) on page 595
- [ethernet-switch-profile](#) on page 596
- [eui-64](#) on page 598
- [evcs](#) on page 599
- [event \(LFM\)](#) on page 600
- [event-thresholds](#) on page 601
- [fast-aps-switch](#) on page 602
- [f-max-period](#) on page 603
- [facility-override](#) on page 603
- [failover-delay](#) on page 604
- [family \(Dynamic Standard Interface\)](#) on page 605
- [family](#) on page 607
- [fastether-options](#) on page 612
- [fcs](#) on page 613
- [feac-loop-respond](#) on page 614
- [fec \(gigether\)](#) on page 615
- [filter](#) on page 616
- [filter \(Applying to an Interface\)](#) on page 617
- [flexible-vlan-tagging](#) on page 618
- [flow-control](#) on page 619
- [flow-control-options](#) on page 620
- [force](#) on page 621
- [forward-and-send-to-re](#) on page 622
- [forwarding-class \(ATM2 IQ Scheduler Maps\)](#) on page 623
- [forwarding-class \(Gigabit Ethernet IQ Classifier\)](#) on page 624
- [forward-only](#) on page 625
- [fragment-threshold](#) on page 625
- [frame-error](#) on page 626
- [frame-period](#) on page 627
- [frame-period-summary](#) on page 628
- [framing \(E1, E3, and T1 Interfaces\)](#) on page 629
- [framing \(10-Gigabit Ethernet Interfaces\)](#) on page 630
- [framing \(SONET and SDH Interfaces\)](#) on page 631
- [gigether-options](#) on page 632
- [gratuitous-arp-reply](#) on page 633
- [guard-interval](#) on page 634
- [hardware-assisted-timestamping](#) on page 635

- [high-plp-threshold](#) on page 636
- [hello-timer](#) on page 637
- [hierarchical-policer](#) on page 638
- [hierarchical-scheduler \(Subscriber Interfaces on MX Series Routers\)](#) on page 639
- [high-plp-max-threshold](#) on page 640
- [high-plp-threshold](#) on page 641
- [hold-interval \(OAM\)](#) on page 642
- [hold-interval \(Protection Group\)](#) on page 643
- [hold-time \(APS\)](#) on page 643
- [hold-time \(Physical Interface\)](#) on page 644
- [hold-time \(SONET/SDH Defect Triggers\)](#) on page 646
- [host \(Interfaces\)](#) on page 647
- [host-prefix-only](#) on page 648
- [iccp](#) on page 649
- [idle-cycle-flag](#) on page 650
- [idle-timeout](#) on page 651
- [ieee802.1p](#) on page 652
- [if-exceeding \(Hierarchical Policer\)](#) on page 653
- [if-exceeding-pps \(Hierarchical Policer\)](#) on page 654
- [igmp-snooping](#) on page 655
- [ignore](#) on page 658
- [ignore-all](#) on page 659
- [ignore-l3-incompletes](#) on page 659
- [ilmi](#) on page 660
- [ima-group-options](#) on page 661
- [ima-link-options](#) on page 663
- [inactivity-timeout](#) on page 663
- [incoming-map](#) on page 664
- [indication](#) on page 665
- [indication-polarity](#) on page 665
- [ingress-policer-overhead](#) on page 666
- [ingress-rate-limit](#) on page 668
- [init-command-string](#) on page 669
- [initial-route-check](#) on page 670
- [inner-tag-protocol-id](#) on page 671
- [inner-vlan-id](#) on page 672
- [inner-vlan-id-range](#) on page 673

- [input](#) on page 674
- [input-list](#) on page 675
- [input-policer](#) on page 676
- [input-priority-map](#) on page 677
- [input-three-color](#) on page 678
- [input-vlan-map \(Aggregated Ethernet\)](#) on page 679
- [input-vlan-map](#) on page 680
- [instance](#) on page 681
- [interface \(Hierarchical CoS Schedulers\)](#) on page 681
- [interface \(IEEE 802.1x\)](#) on page 682
- [interface \(IEEE 802.1ag OAM Connectivity-Fault Management\)](#) on page 683
- [interface \(OAM Link-Fault Management\)](#) on page 684
- [interface \(Port Mirroring\)](#) on page 685
- [interface-down](#) on page 686
- [interface-name](#) on page 686
- [interface-none](#) on page 687
- [interface-range](#) on page 688
- [interface-transmit-statistics](#) on page 689
- [interface-set \(Ethernet Interfaces\)](#) on page 689
- [interface-set \(IP Demux Interfaces\)](#) on page 690
- [interface-shared-with](#) on page 691
- [interface-status-tlv](#) on page 692
- [interface-switch](#) on page 693
- [interface-type \(Interfaces\)](#) on page 694
- [interfaces](#) on page 696
- [interfaces \(Static and Dynamic Subscribers\)](#) on page 697
- [interleave-fragments](#) on page 701
- [interval](#) on page 702
- [inverse-arp](#) on page 703
- [invert-data](#) on page 704
- [ipsec-sa](#) on page 705
- [isdn-options](#) on page 706
- [iteration-count](#) on page 707
- [iteration-period](#) on page 708
- [keep-address-and-control](#) on page 709
- [keepalives](#) on page 710
- [key](#) on page 711

- [l2tp-interface-id](#) on page 712
- [lcp \(Protocols\)](#) on page 713
- [lcp \(802.3ad\)](#) on page 714
- [lcp \(Aggregated Ethernet\)](#) on page 715
- [layer2-policer](#) on page 718
- [lcp-max-conf-req](#) on page 719
- [lcp-restart-timer](#) on page 720
- [level](#) on page 721
- [line-encoding](#) on page 722
- [line-protocol](#) on page 723
- [line-rate](#) on page 724
- [linear-red-profile](#) on page 725
- [linear-red-profiles](#) on page 726
- [link-adjacency-loss](#) on page 726
- [link-discovery](#) on page 727
- [link-down](#) on page 727
- [link-event-rate](#) on page 728
- [link-fault-management](#) on page 729
- [link-layer-overhead](#) on page 730
- [link-mode](#) on page 731
- [link-protection](#) on page 733
- [link-speed \(Aggregated Ethernet\)](#) on page 734
- [link-speed \(Aggregated SONET/SDH\)](#) on page 736
- [linktrace](#) on page 737
- [lmi \(Frame Relay\)](#) on page 738
- [lmi \(Ethernet OAM\)](#) on page 740
- [lmi-type](#) on page 741
- [load-interval](#) on page 742
- [load-threshold](#) on page 743
- [local-name](#) on page 744
- [local-password](#) on page 745
- [lockout](#) on page 745
- [log-prefix \(Interfaces\)](#) on page 746
- [logical-interface-fpc-redundancy \(Aggregated Ethernet Subscriber Interfaces\)](#) on page 746
- [logical-interface-policer](#) on page 747
- [logical-systems](#) on page 749

- [long-buildout on page 750](#)
- [loop-timing on page 751](#)
- [loopback \(ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3\) on page 752](#)
- [loopback \(Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet\) on page 754](#)
- [loopback \(Serial\) on page 755](#)
- [loopback-clear-timer on page 756](#)
- [loss-priority on page 757](#)
- [loss-threshold on page 758](#)
- [low-plp-max-threshold on page 759](#)
- [low-plp-threshold on page 760](#)
- [lowest-priority-defect on page 761](#)
- [lsq-failure-options on page 762](#)
- [mac on page 763](#)
- [mac-address \(Accept Source Mac\) on page 764](#)
- [mac-address \(VLAN and Stacked VLAN Interfaces\) on page 764](#)
- [mac-learn-enable on page 765](#)
- [mac-validate on page 766](#)
- [maintenance-association on page 767](#)
- [maintenance-domain on page 768](#)
- [master-only on page 769](#)
- [maximum-contexts on page 770](#)
- [maximum-requests on page 771](#)
- [maximum-vcs on page 772](#)
- [mc-ae on page 773](#)
- [member-interface-speed on page 776](#)
- [member-interface-type on page 776](#)
- [mep on page 777](#)
- [minimum-links on page 778](#)
- [mip-half-function on page 779](#)
- [mlfr-uni-nni-bundle-options on page 780](#)
- [mode \(Dynamic Profiles\) on page 781](#)
- [mode \(Interfaces\) on page 782](#)
- [modem-options on page 782](#)
- [monitor-session on page 783](#)
- [mpls \(Interfaces\) on page 784](#)
- [mrru on page 785](#)
- [mtu on page 786](#)

- [multi-chassis-protection](#) on page 790
- [multicast-dlci](#) on page 791
- [multicast-only](#) on page 792
- [multicast-statistics](#) on page 792
- [multicast-vci](#) on page 793
- [multilink-max-classes](#) on page 794
- [multipoint](#) on page 794
- [multipoint-destination](#) on page 795
- [multiservice-options](#) on page 796
- [n391](#) on page 797
- [n392](#) on page 798
- [n393](#) on page 799
- [name-format](#) on page 800
- [native-vlan-id](#) on page 801
- [ncp-max-conf-req](#) on page 803
- [ncp-restart-timer](#) on page 804
- [nd6-stale-time](#) on page 805
- [negotiate-address](#) on page 806
- [negotiation-options](#) on page 806
- [neighbor \(Automatic Protection Switching for SONET/SDH\)](#) on page 807
- [no-allow-link-events](#) on page 807
- [no-aggregate-delegate-processing](#) on page 808
- [asynchronous-notification](#) on page 809
- [no-auto-mdix](#) on page 810
- [auto-negotiation](#) on page 811
- [cbit-parity](#) on page 813
- [core-dump](#) on page 814
- [feac-loop-respond](#) on page 815
- [flow-control](#) on page 816
- [gratuitous-arp-reply](#) on page 817
- [no-gratuitous-arp-request](#) on page 817
- [no-keepalives](#) on page 818
- [long-buildout](#) on page 819
- [loopback \(Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet\)](#) on page 820
- [mac-learn-enable](#) on page 821
- [no-partition](#) on page 822
- [payload-scrambler](#) on page 824

- [no-pre-classifier](#) on page 825
- [no-redirects](#) on page 826
- [source-filtering](#) on page 827
- [syslog \(Monitoring\)](#) on page 828
- [no-termination-request](#) on page 828
- [translate-discard-eligible](#) on page 829
- [translate-fecn-and-becn](#) on page 829
- [unframed](#) on page 830
- [z0-increment](#) on page 830
- [node-id](#) on page 831
- [non-revertive \(Interfaces\)](#) on page 831
- [oam](#) on page 832
- [oam-liveness](#) on page 835
- [oam-period](#) on page 836
- [oc-slice](#) on page 837
- [open-timeout](#) on page 838
- [operating-mode](#) on page 839
- [optics-options](#) on page 840
- [option-82](#) on page 841
- [otn-options](#) on page 842
- [output](#) on page 843
- [output-list](#) on page 844
- [output-policer](#) on page 845
- [output-priority-map](#) on page 846
- [output-three-color](#) on page 847
- [output-vlan-map \(Aggregated Ethernet\)](#) on page 848
- [output-vlan-map](#) on page 849
- [overflow \(Receive Bucket\)](#) on page 850
- [overflow \(Transmit Bucket\)](#) on page 850
- [override](#) on page 851
- [pado-advertise](#) on page 852
- [paired-group](#) on page 852
- [pap](#) on page 853
- [pap-password](#) on page 854
- [partition](#) on page 855
- [passive \(CHAP\)](#) on page 856
- [passive \(PAP\)](#) on page 857

- [passive-monitor-mode](#) on page 858
- [password \(Interfaces\)](#) on page 859
- [path-database-size](#) on page 859
- [path-trace](#) on page 860
- [payload-scrambler](#) on page 861
- [payload-size](#) on page 862
- [pdu-interval](#) on page 863
- [pdu-threshold](#) on page 864
- [peer](#) on page 865
- [peer-unit](#) on page 866
- [per-unit-scheduler](#) on page 867
- [performance-monitoring](#) on page 869
- [periodic](#) on page 870
- [pfc](#) on page 871
- [pic-type](#) on page 871
- [plp-to-clp](#) on page 872
- [plp1](#) on page 873
- [point-to-point](#) on page 874
- [policer \(CFM Firewall\)](#) on page 874
- [policer \(CFM Global\)](#) on page 875
- [policer \(CFM Session\)](#) on page 876
- [policer \(CoS\)](#) on page 877
- [policer \(Interface\)](#) on page 878
- [policer \(MAC\)](#) on page 879
- [policy-statement](#) on page 880
- [pool](#) on page 884
- [pop](#) on page 885
- [pop-all-labels](#) on page 886
- [pop-pop](#) on page 887
- [pop-swap](#) on page 888
- [port](#) on page 889
- [port-priority](#) on page 890
- [port-status-tlv](#) on page 891
- [post-service-filter](#) on page 891
- [ppp-options](#) on page 892
- [pppoe-options](#) on page 894
- [pppoe-underlying-options \(Static and Dynamic Subscribers\)](#) on page 895

- [preferred](#) on page 896
- [preferred-source-address](#) on page 897
- [preferred-source-address](#) on page 898
- [premium \(Hierarchical Policer\)](#) on page 899
- [premium \(Output Priority Map\)](#) on page 900
- [premium \(Policer\)](#) on page 900
- [preserve-interface](#) on page 901
- [primary \(Address on Interface\)](#) on page 902
- [primary \(Interface for Router\)](#) on page 903
- [primary \(AS PIC or Multiservices PIC Interfaces\)](#) on page 904
- [priority \(OAM Connectivity-Fault Management\)](#) on page 904
- [priority \(Schedulers\)](#) on page 905
- [promiscuous-mode](#) on page 906
- [protect-circuit](#) on page 907
- [protection-group](#) on page 908
- [protocol-down](#) on page 910
- [protocols](#) on page 910
- [proxy](#) on page 911
- [proxy-arp](#) on page 912
- [push](#) on page 913
- [push-push](#) on page 914
- [queue-depth](#) on page 915
- [queue-length](#) on page 916
- [queues](#) on page 917
- [quiet-period](#) on page 917
- [radius-realm](#) on page 918
- [ranges \(Dynamic Stacked VLAN\)](#) on page 918
- [ranges \(Dynamic VLAN\)](#) on page 919
- [rate](#) on page 919
- [rate](#) on page 920
- [rdi](#) on page 920
- [reassemble-packets](#) on page 921
- [reauthentication](#) on page 921
- [receive-bucket](#) on page 922
- [receive-options-packets](#) on page 923
- [receive-ttl-exceeded](#) on page 923
- [red-differential-delay](#) on page 924

- [redial-delay](#) on page 925
- [redundancy-options](#) on page 926
- [remote](#) on page 927
- [remote-loopback](#) on page 928
- [remote-loopback-respond](#) on page 929
- [remote-mep](#) on page 930
- [remove-when-no-subscribers](#) on page 931
- [request](#) on page 931
- [required-depth](#) on page 932
- [restore-interval](#) on page 933
- [retries](#) on page 934
- [revert-time \(Interfaces\)](#) on page 935
- [revertive](#) on page 936
- [rfc-2615](#) on page 936
- [ring-protection-link-end](#) on page 937
- [ring-protection-link-owner](#) on page 937
- [routing-instance](#) on page 938
- [routing-instance \(PPPoE Service Name Tables\)](#) on page 939
- [rpf-check \(Dynamic Profiles\)](#) on page 940
- [rpf-check](#) on page 941
- [rpf-loose-mode-discard](#) on page 942
- [rtp](#) on page 943
- [rts](#) on page 944
- [rts-polarity](#) on page 944
- [rtvbr](#) on page 945
- [sa-multicast \(100-Gigabit Ethernet\)](#) on page 947
- [sampling \(Interfaces\)](#) on page 948
- [satop-options](#) on page 949
- [shared-interface](#) on page 950
- [scheduler-maps \(For ATM2 IQ Interfaces\)](#) on page 951
- [schedulers](#) on page 952
- [secondary](#) on page 952
- [send-critical-event](#) on page 953
- [serial-options](#) on page 954
- [server](#) on page 955
- [server-timeout](#) on page 956
- [service \(Logical Interfaces\)](#) on page 957

- [service \(PPPoE\) on page 958](#)
- [service-domain on page 959](#)
- [service-filter \(Interfaces\) on page 960](#)
- [service-name-table on page 961](#)
- [service-name-tables on page 962](#)
- [service-set on page 963](#)
- [services \(Priority Level\) on page 964](#)
- [services-options on page 965](#)
- [shaping on page 966](#)
- [shdsl-options on page 967](#)
- [short-name-format on page 968](#)
- [short-sequence on page 969](#)
- [sla-iterator-profile on page 970](#)
- [sla-iterator-profiles on page 971](#)
- [snr-margin on page 972](#)
- [snext on page 973](#)
- [sonet-options on page 974](#)
- [source on page 976](#)
- [source-address-filter on page 977](#)
- [source-class-usage on page 978](#)
- [source-filtering on page 979](#)
- [speed \(Ethernet\) on page 980](#)
- [speed \(MX Series DPC\) on page 984](#)
- [speed \(SONET/SDH\) on page 985](#)
- [spid1 on page 985](#)
- [spid2 on page 986](#)
- [stacked-vlan-ranges on page 987](#)
- [stacked-vlan-tagging on page 988](#)
- [start-end-flag on page 989](#)
- [static-interface on page 990](#)
- [static-tei-val on page 991](#)
- [supplicant on page 992](#)
- [supplicant-timeout on page 993](#)
- [swap on page 994](#)
- [swap-push on page 995](#)
- [swap-swap on page 996](#)
- [switch-options on page 996](#)

- [switch-port](#) on page 997
- [switch-type](#) on page 998
- [switching-mode](#) on page 999
- [symbol-period](#) on page 1000
- [syslog \(Interfaces\)](#) on page 1001
- [syslog \(Monitoring\)](#) on page 1001
- [syslog \(OAM Action\)](#) on page 1002
- [system-priority](#) on page 1003
- [t1-options](#) on page 1004
- [t310](#) on page 1005
- [t391](#) on page 1006
- [t392](#) on page 1007
- [t3-options](#) on page 1008
- [tag-protocol-id \(TPIDs Expected to Be Sent or Received\)](#) on page 1009
- [tag-protocol-id \(TPID to Rewrite\)](#) on page 1010
- [targeted-broadcast](#) on page 1011
- [targeted-distribution \(Static Interfaces over Aggregated Ethernet\)](#) on page 1012
- [tei-option](#) on page 1013
- [terminate \(PPPoE Service Name Tables\)](#) on page 1014
- [then](#) on page 1015
- [threshold](#) on page 1016
- [timeslots](#) on page 1017
- [tm](#) on page 1018
- [tm-polarity](#) on page 1019
- [traceoptions \(Individual Interfaces\)](#) on page 1020
- [traceoptions \(Individual Interfaces\)](#) on page 1027
- [traceoptions \(LACP\)](#) on page 1034
- [traceoptions \(PPP Process\)](#) on page 1036
- [traceoptions \(PPPoE\)](#) on page 1039
- [translate-discard-eligible](#) on page 1041
- [translate-fecn-and-becn](#) on page 1042
- [translate-plp-control-word-de](#) on page 1042
- [transmit-bucket](#) on page 1043
- [transmit-clock](#) on page 1043
- [transmit-period](#) on page 1044
- [transmit-weight \(ATM2 IQ CoS Forwarding Class\)](#) on page 1045
- [transmit-weight \(ATM2 IQ Virtual Circuit\)](#) on page 1046

- [traps](#) on page 1047
- [trigger](#) on page 1048
- [trigger-link-failure](#) on page 1049
- [trunk-bandwidth](#) on page 1050
- [trunk-id](#) on page 1051
- [ttl](#) on page 1051
- [tunnel](#) on page 1052
- [underlying-interface](#) on page 1053
- [unframed](#) on page 1054
- [unidirectional](#) on page 1054
- [unit \(Dynamic Profiles Standard Interface\)](#) on page 1055
- [unit](#) on page 1059
- [unnumbered-address \(Demux\)](#) on page 1066
- [unnumbered-address \(Dynamic Profiles\)](#) on page 1067
- [unnumbered-address \(Ethernet\)](#) on page 1069
- [unnumbered-address \(PPP\)](#) on page 1070
- [up-count](#) on page 1071
- [user-prefix](#) on page 1072
- [username-include \(Interfaces\)](#) on page 1073
- [vbr](#) on page 1075
- [vc-cos-mode](#) on page 1076
- [vci](#) on page 1077
- [vci-range](#) on page 1078
- [virtual-switch](#) on page 1078
- [vlan-id \(Logical Port in Bridge Domain\)](#) on page 1079
- [vlan-id \(Outer VLAN ID\)](#) on page 1080
- [vlan-id \(VLAN ID to Be Bound to a Logical Interface\)](#) on page 1081
- [native-vlan-id](#) on page 1082
- [vlan-id-list \(Ethernet VLAN Circuit\)](#) on page 1085
- [vlan-id-list \(Interface in Bridge Domain\)](#) on page 1087
- [vlan-id-range](#) on page 1088
- [vlan-ranges](#) on page 1089
- [vlan-rewrite](#) on page 1090
- [vlan-rule \(100-Gigabit Ethernet Type 4 PIC with CFP\)](#) on page 1091
- [vlan-steering \(100-Gigabit Ethernet Type 4 PIC with CFP\)](#) on page 1092
- [vlan-tagging](#) on page 1093
- [vlan-tags \(Dual-Tagged Logical Interface\)](#) on page 1095



- [vlan-tags \(Stacked VLAN Tags\) on page 1097](#)
- [vlan-tags-outer on page 1098](#)
- [vlan-vci-tagging on page 1099](#)
- [vpi \(ATM CCC Cell-Relay Promiscuous Mode\) on page 1099](#)
- [vpi \(Define Virtual Path\) on page 1100](#)
- [vpi \(Logical Interface and Interworking\) on page 1101](#)
- [vtmapping on page 1102](#)
- [warning on page 1103](#)
- [watch-list on page 1104](#)
- [wavelength on page 1105](#)
- [west-interface on page 1109](#)
- [working-circuit on page 1110](#)
- [yellow-differential-delay on page 1110](#)
- [z0-increment on page 1111](#)

## 802.3ad

---

Syntax	<pre>802.3ad {     primary   backup;     ae <i>interface-number</i> ;     lacp {         port-priority <i>priority-number</i>;     }     link-index <i>index-number</i>     distribution-list <i>distribution-list-number</i> }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> <b>fastether-options</b> ], [edit interfaces <i>interface-name</i> <b>gigether-options</b> ]
Release Information	Statement introduced before Junos OS Release 7.4. <b>primary</b> and <b>backup</b> options added in Junos OS Release 8.3.
Description	Specify aggregated Ethernet logical interface number.
Options	<p><b>bundle</b>—Join an aggregated Ethernet interface.</p> <p><b>ae <i>interface-number</i></b>—Aggregated Ethernet logical interface number. For MX Series routers running Junos release 14.2R3 and later you can configure a maximum of 1000 aggregated interfaces. On MX2010 and MX2020 routers you can configure a maximum of 800 aggregated interfaces.</p> <p><b>primary   backup</b>—For link protection configurations, specify the link as primary link or backup link for egress traffic.</p> <p><b>lacp</b>—Configure Link Aggregation Control Protocol. Specify the port priority in the range 0 through 65535. Default port-priority is 127.</p> <p><b>link-index</b>—Specify the desired child link index within the aggregated Ethernet Interface. Index number of the logical interface reflects its initialization sequence.</p> <p><b>distribution-list</b>—For targeted distribution, specify the distribution list to which the interface belongs.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Configuring an Aggregated Ethernet Interface</i></li><li>• <i>Configuring Aggregated Ethernet Link Protection</i></li></ul>

## accept

<b>Syntax</b>	<code>accept (any   dhcp-v4   dhcp-v6   inet   inet6   pppoe);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges <b>dynamic-profile</b> <i>profile-name</i> ], [edit interfaces <i>interface-name</i> auto-configure vlan-ranges <b>dynamic-profile</b> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5. <b>dhcp-v4</b> option added in Junos OS Release 10.0. <b>dhcp-v6</b> , <b>inet6</b> and <b>pppoe</b> options added in Junos OS Release 10.2. <b>any</b> option added in Junos OS Release 10.4.
<b>Description</b>	Specify the type of VLAN Ethernet packet accepted by an interface that is associated with a VLAN dynamic profile or stacked VLAN dynamic profile.
<b>Options</b>	<p><b>any</b>—Any packet type. Specifies that any incoming packets trigger the dynamic creation of a VLAN with properties determined by the auto-configure interface configuration stanza and associated profile attributes. This option is used when configuring wholesaling in a Layer 2 network.</p> <p><b>dhcp-v4</b>—IPv4 DHCP packet type. Specifies that incoming IPv4 DHCP discover packets trigger the dynamic creation of a VLAN with properties determined by the auto-configure interface configuration stanza and associated profile attributes</p> <p>.....</p> <p> <b>NOTE:</b> The DHCP-specific <b>mac-address</b> and <b>option-82</b> options are rejected if the <b>accept</b> statement is not set to <b>dhcp-v4</b>.</p> <p>.....</p> <p><b>dhcp-v6</b>—IPv6 DHCP packet type. Specifies that incoming IPv6 DHCP discover packets trigger the dynamic creation of a VLAN with properties determined by the auto-configure interface configuration stanza and associated profile attributes.</p> <p><b>inet</b>—IPv4 Ethernet and ARP packet type.</p> <p><b>inet6</b>—IPv6 Ethernet packet type.</p> <p><b>pppoe</b>—Point-to-Point Protocol over Ethernet packet type.</p> <p>.....</p> <p> <b>NOTE:</b> The <b>pppoe</b> VLAN Ethernet packet type option is supported only for MPC/MIC interfaces.</p> <p>.....</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

**Related  
Documentation**

- *Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs*
- *Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs*
- *Configuring VLAN Interfaces for the Layer 2 Wholesale Solution*
- *Configuring Subscriber Packet Types to Trigger VLAN Authentication*

## accept-source-mac

<b>Syntax</b>	<pre> accept-source-mac {   mac-address mac-address {     policer {       input cos-policer-name;       output cos-policer-name;     }   } } </pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p>
<b>Description</b>	<p>For Gigabit Ethernet intelligent queuing (IQ) interfaces only, accept traffic from and to the specified remote media access control (MAC) address.</p> <p>The <b>accept-source-mac</b> statement is equivalent to the <b>source-address-filter</b> statement, which is valid for aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only. To allow the interface to receive packets from specific MAC addresses, include the <b>accept-source-mac</b> statement.</p> <p>On untagged Gigabit Ethernet interfaces, you should not configure the <b>source-address-filter</b> statement and the <b>accept-source-mac</b> statement simultaneously. On tagged Gigabit Ethernet interfaces, you should not configure the <b>source-address-filter</b> statement and the <b>accept-source-mac</b> statement with an identical MAC address specified in both filters.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>



**NOTE:** The **policer** statement is not supported on PTX Series Packet Transport Routers.




**NOTE:** On QFX platforms, if you configure source MAC addresses for an interface using the *static-mac* or *persistent-learning* statements and later configure a different MAC address for the same interface using the **accept-source-mac** statement, the MAC addresses that you previously configured for the interface remain in the ethernet-switching table and can still be used to send packets to the interface.

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring MAC Address Filtering*
- *Configuring MAC Address Filtering on PTX Series Packet Transport Routers*
- [source-filtering on page 827](#)

## access-concentrator

<b>Syntax</b>	<code>access-concentrator <i>name</i>;</code>
<b>Hierarchy Level</b>	<p>[edit dynamic-profiles <i>profile-name</i> interfaces demux0 unit <i>logical-unit-number</i> family pppoe],</p> <p>[edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> pppoe],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>pppoe-options</b>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>pppoe-underlying-options</b>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> pppoe],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>pppoe-options</b>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>pppoe-underlying-options</b>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Support at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>pppoe-underlying-options</b>] and [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>pppoe-underlying-options</b>] hierarchy levels introduced in Junos OS Release 10.1.</p> <p>Support at the [edit ... <b>family pppoe</b>] hierarchies introduced in Junos OS Release 11.2.</p>
<b>Description</b>	Configure an alternative access concentrator name in the AC-NAME tag in a PPPoE control packet for use with a dynamic PPPoE subscriber interface. If you do not configure the access concentrator name, the AC-NAME tag contains the system name.
<div>  <p><b>NOTE:</b> The [edit ... <b>family pppoe</b>] hierarchies are supported only on MX Series routers with MPCs.</p> </div>	
<b>Options</b>	<b><i>name</i></b> —Name of the access concentrator.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Identifying the Access Concentrator</li> <li>Configuring the PPPoE Family for an Underlying Interface</li> <li>Configuring Dynamic PPPoE Subscriber Interfaces</li> <li>PPPoE Overview</li> </ul>

## access-profile

---

<b>Syntax</b>	<code>access-profile name;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces interface-name ppp-options chap],</code> <code>[edit interfaces interface-name ppp-options pap],</code> <code>[edit interfaces interface-name unit logical-unit-number ppp-options chap],</code> <code>[edit interfaces interface-name unit logical-unit-number ppp-options pap],</code> <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number ppp-options chap],</code> <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number ppp-options pap]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Support for PAP added in Junos OS Release 8.3. Support for VLAN and stacked VLAN ranges added in Junos OS Release 10.0.
<b>Description</b>	<p>For CHAP authentication, the mapping between peer names (or “clients”) and the secrets associated with their respective links. For PAP authentication, the peer’s username and password.</p> <p>For Asynchronous Transfer Mode 2 (ATM2) IQ interfaces only, you can configure a Challenge Handshake Authentication Protocol (CHAP) access profile on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"><li>• <code>atm-ppp-llc</code>—PPP over AAL5 logical link control (LLC) encapsulation.</li><li>• <code>atm-ppp-vc-mux</code>—PPP over AAL5 multiplex encapsulation.</li></ul>
<b>Options</b>	<code>name</code> —Name of the access profile.
<b>Required Privilege Level</b>	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the PPP Challenge Handshake Authentication Protocol on page 136</a></li><li>• <a href="#">Configuring the PPP Password Authentication Protocol On a Physical Interface on page 139</a></li><li>• <i>Junos OS Administration Library</i></li></ul>

## accounting

---

<b>Syntax</b>	<pre> accounting {     destination-class-usage;     source-class-usage {         direction;     } } </pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Enable IP packet counters on an interface.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Enabling Source Class and Destination Class Usage on page 262</a></li> </ul>

## accounting-profile

---

<b>Syntax</b>	<code>accounting-profile <i>name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit interfaces interface-range <i>name</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 15.1F6 for PTX Series routers with third-generation FPCs installed.
<b>Description</b>	Enable collection of accounting data for the specified physical or logical interface or interface range.
<b>Options</b>	<i>name</i> —Name of the accounting profile.
<b>Required Privilege Level</b>	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Applying an Accounting Profile to the Physical Interface</i></li><li>• <i>Applying an Accounting Profile to the Logical Interface</i></li></ul>

## acfc

<b>Syntax</b>	acfc;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>ppp-options compression</b> ], [edit interfaces <i>interface-name</i> <b>unit logical-unit-number</b> <b>ppp-options compression</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit logical-unit-number</b> <b>ppp-options compression</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For interfaces with PPP encapsulation, configure compression of the Data Link Layer address and control fields. The <b>acfc</b> option is not supported with <b>frame-relay-ppp</b> encapsulation.</p> <p>On M320, M120, and T Series routers, address and control field compression (ACFC) is not supported for any ISO family protocols. Do not include the <b>acfc</b> statement at the [edit interfaces <i>interface-name</i> <b>ppp-options compression</b>] hierarchy level when you include the <b>family iso</b> statement at the [edit interfaces <i>interface-name</i> <b>unit logical-unit-number</b>] hierarchy level.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring PPP Address and Control Field Compression on page 149</a></li> </ul>

## acknowledge-retries

---

<b>Syntax</b>	<code>acknowledge-retries <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">mlfr-uni-nni-bundle-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voice services interfaces only, configure the number of retransmission attempts to be made for consecutive hello or remove link messages following the expiration of the acknowledgment timer.
<b>Options</b>	<b><i>number</i></b> —Number of retransmission attempts to be made following the expiration of the acknowledgment timer. <b>Range:</b> 1 through 5 <b>Default:</b> 2
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">action-red-differential-delay on page 421</a></li><li>• <a href="#">hello-timer on page 637</a></li></ul>

## acknowledge-timer

<b>Syntax</b>	<code>acknowledge-timer <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>mlfr-uni-nni-bundle-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voice services interfaces only, configure the maximum time, in milliseconds, to wait for an add link acknowledgment, hello acknowledgment, or remove link acknowledgment message.
<b>Options</b>	<p><b>milliseconds</b>—Time, in milliseconds, to wait for an add link acknowledgment, hello acknowledgment, or remove link acknowledgment message.</p> <p><b>Range:</b> 1 through 10 milliseconds</p> <p><b>Default:</b> 4 milliseconds</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> <li>• <a href="#">address on page 424</a>, <a href="#">hello-timer on page 637</a></li> <li>• <a href="#">hello-timer on page 637</a></li> </ul>

## action (OAM)

<b>Syntax</b>	<pre>action {   link-down;   send-critical-event;   syslog; }</pre>
<b>Hierarchy Level</b>	[edit protocols <b>oam ethernet link-fault-management action-profile</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Define the action or actions to be taken when the OAM fault event occurs.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Specifying the Actions to Be Taken for Link-Fault Management Events</i></li> </ul>

## action (Policer)

---

<b>Syntax</b>	<pre>action {   loss-priority high then discard; }</pre>
<b>Hierarchy Level</b>	[edit firewall three-color-policer <i>policer-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	This statement discards high loss priority traffic as part of a configuration using tricolor marking on a logical interface.
<b>Required Privilege Level</b>	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i></li><li>• <a href="#">logical-interface-policer on page 747</a></li></ul>

## action-profile (Applying to CFM)

---

<b>Syntax</b>	<pre>action-profile <i>profile-name</i>;</pre>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i> <a href="#">remote-mep</a> <i>mep-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Identify the action profile to use.
<b>Options</b>	<i>profile-name</i> —Name of the action profile to use.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i></li></ul>

## action-profile (Defining for CFM)

```
Syntax  action-profile profile-name {
        event {
            ais-trigger-condition {
                adjacency-loss;
                all-defects;
                cross-connect-ccm;
                erroneous-ccm;
                receive-ais;
            }
            interface-status-tlv (down | lower-layer-down);
            port-status-tlv blocked;
            rdi;
        }
        action {
            interface-down;
            log-and-generate-ais {
                interval(1m | 1s);
                level value;
                priority value;
            }
        }
        default-actions {
            interface-down;
        }
    }
```

**Hierarchy Level** [edit protocols oam ethernet [connectivity-fault-management](#)]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** Configure a name and default action for an action profile.

**Options** *profile-name*—Name of the action profile.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring a CFM Action Profile to Specify CFM Actions for CFM Events](#)
- [default-actions on page 516](#)
- [event \(CFM\)](#)
- [interface-down on page 686](#)

## action-profile

<b>List of Syntax</b>	<p>Syntax: T, M, MX and ACX Series Routers, SRX Series Firewalls and EX Series Switches on page 420</p> <p>Syntax: EX Series Switches and NFX Series Devices on page 420</p>
<p><b>Syntax: T, M, MX and ACX Series Routers, SRX Series Firewalls and EX Series Switches</b></p>	<pre> action-profile <i>profile-name</i> {   action {     link-down;     send-critical-event;     syslog;   }   event {     link-adjacency-loss;     link-event-rate {       frame-error <i>count</i>;       frame-period <i>count</i>;       frame-period-summary <i>count</i>;       symbol-period <i>count</i>;     }     protocol-down;   } }</pre>
<p><b>Syntax: EX Series Switches and NFX Series Devices</b></p>	<pre> action-profile <i>profile-name</i>; action {   syslog;   link-down; } event {   link-adjacency-loss;   link-event-rate {     frame-error <i>count</i>;     frame-period <i>count</i>;     frame-period-summary <i>count</i>;     symbol-period <i>count</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management</a> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.5 for T, M, MX and ACX Series Routers, SRX Series Firewalls, and EX Series Switches, .</p> <p>Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.</p>
<b>Description</b>	<p>Configure an Ethernet OAM link fault management (LFM) action profile by specifying a profile name.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>

**Options** *profile-name*—Name of the action profile.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.  
 routing—To view this statement in the configuration.  
 routing-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring an OAM Action Profile*
- *Configuring Ethernet OAM Link Fault Management (CLI Procedure)*

## action-red-differential-delay

**Syntax** action-red-differential-delay (disable-tx | remove-link);

**Hierarchy Level** [edit interfaces *interface-name* [mlfr-uni-nni-bundle-options](#)]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For link services and voice services interfaces only, configure the action to be taken when the differential delay exceeds the red limit.

**Options** **disable-tx**—Disable transmission on the bundle link.  
**remove-link**—Remove bundle link from service.  
**Default:** disable-tx

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation**

- *Junos OS Services Interfaces Library for Routing Devices*
- [remote on page 927](#)
- [yellow-differential-delay on page 1110](#)

## activation-delay

---

<b>Syntax</b>	<code>activation-delay <i>seconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>dl</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	(J Series Services Routers) For ISDN interfaces, configure the ISDN dialer activation delay. Used only for dialer backup and dialer watch cases.
<b>Options</b>	<b><i>seconds</i></b> —Interval before the backup interface is activated after the primary interface has gone down. <b>Range:</b> 1 through 4,294,967,295 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## activation-priority

<b>Syntax</b>	<code>activation-priority <i>priority</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>dynamic-call-admission-control</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>dynamic-call-admission-control</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	(J4350 and J6350 Services Routers supporting voice over IP with the TGM550 media gateway module) For Fast Ethernet and Gigabit Ethernet interfaces, ISDN BRI interfaces, and serial interfaces with PPP or Frame Relay encapsulation, configure the dynamic call admission control (dynamic CAC) activation priority value.
<b>Options</b>	<p><b>priority</b>—The activation priority in which the interface is used for providing call bandwidth. The interface with the highest activation priority value is used as the primary link for providing call bandwidth. If the primary link becomes unavailable, the TGM550 switches over to the next active interface with the highest activation priority value, and so on.</p> <p><b>Range:</b> 0 through 255</p> <p><b>Default:</b> 50</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## address

```

Syntax  address address {
        arp ip-address (mac | multicast-mac) mac-address <publish>;
        broadcast address;
        destination address;
        destination-profile name;
        eui-64;
        master-only;
        multipoint-destination address dlci dlci-identifier;
        multipoint-destination address {
            epd-threshold cells;
            inverse-arp;
            oam-liveness {
                up-count cells;
                down-count cells;
            }
            oam-period (disable | seconds);
            shaping {
                (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
                 length);
                queue-length number;
            }
            vci vpi-identifier.vci-identifier;
        }
        primary;
        preferred;
        virtual-gateway-address
        (vrrp-group | vrrp-inet6-group) group-number {
            (accept-data | no-accept-data);
            advertise-interval seconds;
            authentication-type authentication;
            authentication-key key;
            fast-interval milliseconds;
            (preempt | no-preempt) {
                hold-time seconds;
            }
            priority-number number;
            track {
                priority-cost seconds;
                priority-hold-time interface-name {
                    interface priority;
                    bandwidth-threshold bits-per-second {
                        priority;
                    }
                }
            }
            route ip-address/mask routing-instance instance-name priority-cost cost;
        }
        virtual-address [ addresses ];
    }
}

```

**Hierarchy Level** [edit interfaces *interface-name* unit *logical-unit-number* family *family*],

[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 11.1 for the QFX Series.

**Description** Configure the interface address.



**NOTE:** If you configure the same address on multiple interfaces in the same routing instance, Junos OS uses only the first configuration, and the remaining address configurations are ignored and can leave interfaces without an address. Interfaces that do not have an assigned address cannot be used as a donor interface for an unnumbered Ethernet interface.

For example, in the following configuration the address configuration of interface xe-0/0/1.0 is ignored:

```
interfaces {
  xe-0/0/0 {
    unit 0 {
      family inet {
        address 192.168.1.1/8;
      }
    }
  }
  xe-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.1.1/8;
      }
    }
  }
}
```

For more information on configuring the same address on multiple interfaces, see [“Configuring the Interface Address” on page 207](#).

- In Junos OS Release 13.3 and later, when you configure an IPv6 host address and an IPv6 subnet address on an interface, the commit operation fails.
- In releases earlier than Junos OS Release 13.3, when you use the same configuration on an interface, the commit operation succeeds, but only one of the IPv6 addresses that was entered is assigned to the interface. The other address is not applied.

**Options** *address*—Address of the interface.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.



**NOTE:** The edit logical-systems hierarchy is not available on QFabric systems.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the Protocol Family on page 206](#)
- *Junos OS Administration Library*
- *family*
- [negotiate-address on page 806](#)
- [unnumbered-address \(Ethernet\) on page 1069](#)

---

## advertise-interval

---

**Syntax** advertise-interval *milliseconds*;

**Hierarchy Level** [edit interfaces *interface-name* sonet-options [aps](#)]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Modify the Automatic Protection Switching (APS) interval at which the protect and working routers send packets to their neighbors to advertise that they are operational. A router considers its neighbor to be operational for a period, called the hold time, that is, by default, three times the advertisement interval.

**Options** *milliseconds*—Interval between advertisement packets.  
**Range:** 1 through 65,534 milliseconds  
**Default:** 1000 milliseconds

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring APS Timers*

---

## age

---

<b>Syntax</b>	age (30m   10m   1m   30s   10s);
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management linktrace</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Time to wait (in minutes or seconds) for a response. If no response is received, the request and response entry is deleted from the linktrace database.
<b>Default</b>	10 minutes
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Linktrace Protocol in CFM</i></li></ul>

## agent-specifier

---

<b>Syntax</b>	<pre>agent-specifier {   aci <i>circuit-id-string</i> ari <i>remote-id-string</i> {     drop;     delay <i>seconds</i>;     terminate;     dynamic-profile <i>profile-name</i>;     routing-instance <i>routing-instance-name</i>;     static-interface <i>interface-name</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit protocols pppoe service-name-tables <i>table-name</i> <b>service</b> <i>service-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0. <b>drop</b> , <b>delay</b> , <b>terminate</b> , <b>dynamic-profile</b> , <b>routing-instance</b> , and <b>static-interface</b> options introduced in Junos OS Release 10.2.
<b>Description</b>	<p>Specify the action taken by the interface for the specified agent circuit identifier/agent remote identifier (ACI/ARI) pair when the interface receives a PPPoE Active Discovery Initiation (PADI) control packet that includes the vendor-specific tag with ACI/ARI pair information. You can configure an ACI/ARI pair for a named service, <b>empty</b> service, or <b>any</b> service in a PPPoE service name table. A maximum of 8000 ACI/ARI pairs are supported per PPPoE service name table. You can distribute the ACI/ARI pairs in any combination among the named, <b>empty</b>, and <b>any</b> service entries in the service name table.</p> <p>You can use an asterisk (*) as a wildcard character to match ACI/ARI pairs, the ACI alone, or the ARI alone. The asterisk can be placed only at the beginning, the end, or both the beginning and end of the identifier string. You can also specify an asterisk alone for either the ACI or the ARI. You cannot specify only an asterisk for both the ACI and the ARI. When you specify a single asterisk as the identifier, that identifier is ignored in the PADI packet.</p> <p>For example, suppose you care about matching only the ACI and do not care what value the ARI has in the PADI packet, or even whether the packet contains an ARI value. In this case you can set the <b>remote-id-string</b> to a single asterisk. Then the interface ignores the ARI received in the packet and the interface takes action based only on matching the specified ACI.</p>
<b>Default</b>	The default action is terminate.
<b>Options</b>	<p><b>aci <i>circuit-id-string</i></b>—Identifier for the agent circuit ID that corresponds to the DSLAM interface that initiated the service request. This is a string of up to 63 characters.</p> <p><b>ari <i>remote-id-string</i></b>—Identifier for the subscriber associated with the DSLAM interface that initiated the service request. This is a string of up to 63 characters.</p>

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring PPPoE Service Name Tables*
- *Assigning an ACI/ARI Pair to a Service Name and Configuring the Action Taken When the Client Request Includes ACI/ARI Information*

## aggregate (Gigabit Ethernet CoS Policer)

**Syntax**

```
aggregate {
    bandwidth-limit bps;
    burst-size-limit bytes;
}
```

**Hierarchy Level** [edit interfaces *interface-name* gigether-options [ethernet-switch-profile](#) [ethernet-policer-profile](#) [policer](#) *cos-policer-name*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Define a policer to apply to nonpremium traffic.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Gigabit Ethernet Policers*
- [premium \(Hierarchical Policer\) on page 899](#)
- [ieee802.1p on page 652](#)

## aggregate (Hierarchical Policer)

---

**Syntax**    aggregate {  
              if-exceeding {  
                  bandwidth-limit *bandwidth*;  
                  burst-size-limit *burst*;  
              }  
              then {  
                  discard;  
              }  
          }

**Hierarchy Level**    [edit firewall [hierarchical-policer](#)]

**Release Information**    Statement introduced in Junos OS Release 9.5.

**Description**    On M40e, M120, and M320 (with FFPC and SFPC) edge routers and T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs, T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, configure an aggregate hierarchical policer.

**Options**    Options are described separately.

**Required Privilege Level**    firewall—To view this statement in the configuration.  
                                  firewall-control—To add this statement to the configuration.

**Related Documentation**

- [Applying Policers on page 226](#)
- *Class of Service Feature Guide for Routing Devices and EX9200 Switches*

## aggregate (SONET/SDH)

---

<b>Syntax</b>	aggregate asx;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify aggregated SONET/SDH logical interface number.
<b>Options</b>	<b>asx</b> —Aggregated SONET/SDH logical interface number. <b>Range:</b> 0 through 15
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Aggregated SONET/SDH Interfaces</i></li> </ul>

## aggregate-ports

---

<b>Syntax</b>	aggregate-ports;
<b>Hierarchy Level</b>	[edit chassis fpc <i>slot-number</i> pic <i>pic-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For T Series routers only, specify OC768-over-OC192 mode on the 4-port OC192C PIC. Four OC192 links are aggregated into one OC768 link with one logical interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring 4-Port OC192 PIC to Operate in OC768-over-OC192 Mode</i></li> </ul>

## aggregated-ether-options

```
Syntax  aggregated-ether-options {
        ethernet-switch-profile {
            ethernet-policer-profile {
                input-priority-map {
                    ieee802.1p premium [ values ];
                }
                output-priority-map {
                    classifier {
                        premium {
                            forwarding-class class-name {
                                loss-priority (high | low);
                            }
                        }
                    }
                }
            }
            policer cos-policer-name {
                aggregate {
                    bandwidth-limit bps;
                    burst-size-limit bytes;
                }
                premium {
                    bandwidth-limit bps;
                    burst-size-limit bytes;
                }
            }
        }
        (mac-learn-enable | no-mac-learn-enable);
    }
    (flow-control | no-flow-control);
    lacp {
        (active | passive);
        link-protection {
            disable;
            (revertive | non-revertive);
            periodic interval;
            system-priority priority;
            system-id system-id;
        }
        link-protection;
        load-balance;
        link-speed speed;
        logical-interface-chassis-redundancy;
        logical-interface-fpc-redundancy;
        (loopback | no-loopback);
        minimum-links number;
        rebalance-periodic time hour:minute <interval hours>;
        source-address-filter {
            mac-address;
            (source-filtering | no-source-filtering);
        }
    }
}
```

**Hierarchy Level** [edit interfaces aex]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Configure aggregated Ethernet-specific interface properties.  
The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation** • *Ethernet Interfaces Overview*

## aggregated-sonet-options

---

**Syntax** aggregated-sonet-options {  
    [link-speed](#) *speed*;  
    [minimum-links](#) *number*;  
}

**Hierarchy Level** [edit interfaces asx]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Configure aggregated SONET/SDH-specific interface properties.  
The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation** • *Configuring Aggregated SONET/SDH Interfaces*

## alarm (optics-options)

---

<b>Syntax</b>	<pre>alarm low-light-alarm {   (link-down   syslog); }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>optics-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 18.3R1 for PTX10K-LC1104 on the PTX10008 and PTX10016 routers.
<b>Description</b>	Specify the action to take if the receiving optics signal is below the optics low-light alarm threshold.
<b>Options</b>	<b>link-down</b> —Drop the 10-Gigabit Ethernet link and marks link as down.  <b>syslog</b> —Write the optics information to the system log.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i></li><li>• <i>100-Gigabit Ethernet OTN Options Configuration Overview</i></li></ul>

## alias (Interfaces)

<b>Syntax</b>	<code>alias <i>alias-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 13.3.
<b>Description</b>	Configure a textual description of a physical interface or the logical unit of an interface to be the alias of an interface name. The alias name can be a single line of text. If the text contains spaces, enclose it in quotation marks. If you configure an alias name, the alias name is displayed instead of the interface name in the output of all <b>show</b> , <b>show interfaces</b> , and other operational mode commands. In Junos OS Release 12.3R8 and later, display of the alias can be suppressed in favor of the actual interface name by using the <b>display no-interface-alias</b> parameter along with the show command.
<b>Options</b>	<b><i>alias-name</i></b> —Text to denote an easily identifiable, meaningful alias name for the interface. If the text includes spaces, enclose the entire text in quotation marks.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Adding an Interface Alias Name on page 123</a></li> <li>• <i>Junos OS Network Interfaces Library for Routing Devices</i></li> </ul>

## allow-any-vci

<b>Syntax</b>	<code>allow-any-vci;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit 0], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit 0]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro routers.
<b>Description</b>	Dedicate entire ATM device to ATM cell relay circuit.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring an ATM1 Cell-Relay Circuit Overview</i></li> </ul>

## allow-fragmentation

---

<b>Syntax</b>	allow-fragmentation;
<b>Hierarchy Level</b>	[edit interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i> tunnel]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.
<b>Description</b>	<p>For a generic routing encapsulation (GRE) tunnel, enable fragmentation of GRE-encapsulated packets whose size exceeds the maximum transmission unit (MTU) value of a link that the packet passes through. The don't-fragment (DF) bit is not set in the outer IP header of GRE-encapsulated packets.</p> <p>To enable the reassembly of fragmented GRE-encapsulated packets on GRE tunnel interfaces at the endpoint of the GRE tunnel, include the <i>reassemble-packets</i> statement for the interface.</p>
<b>Default</b>	If you do not include the <b>allow-fragmentation</b> statement, fragmentation of GRE-encapsulated packets is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>reassemble-packets</i></li><li>• <i>Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## allow-remote-loopback

---

<b>Syntax</b>	allow-remote-loopback;
<b>Hierarchy Level</b>	[edit protocols <b>oam link-fault-management interface</b> <i>interface-name</i> <b>negotiation-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Enable the remote loopback on IQ2 and IQ2-E Gigabit Ethernet interfaces, and Ethernet interfaces on the MX Series routers and EX Series switches.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Enabling Remote Loopback Support on the Local Interface</i></li> </ul>

## annex

---

<b>Syntax</b>	annex (annex-a   annex-b);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>shdsl-options</b> ], [edit interfaces <i>interface-name</i> sonet-options aps], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>shdsl-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.4.
<b>Description</b>	For M320 and M120 routers only, for Multiplex Section Protection (MSP) switching on SDH interfaces, set <b>annex-b</b> . You must also configure the <b>working protection circuit</b> under the [edit interfaces <i>so-fpc/pic/port</i> sonet-options aps] hierarchy level.
<b>Default</b>	<b>annex-b</b>
<b>Options</b>	<b>annex-a</b> —Use for North American SHDSL network implementations.  <b>annex-b</b> —Use for European SHDSL network implementations.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## apply-action-profile

---

<b>Syntax</b>	<code>apply-action-profile <i>profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management interface</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Apply the specified action profile to the interface for link-fault management.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Applying an Action Profile</i></li></ul>

## aps

**Syntax**

```
aps {
  advertise-interval milliseconds;
  annex-b
  authentication-key key;
  (break-before-make | no-break-before-make);
  fast-aps-switch;
  force;
  hold-time milliseconds;
  lockout;
  neighbor address;
  paired-group group-name;
  preserve-interface;
  protect-circuit group-name;
  request;
  revert-time seconds;
  switching-mode (bidirectional | unidirectional);
  working-circuit group-name;
}
```

**Hierarchy Level** [edit interfaces *interface-name* **sonet-options**]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Configure Automatic Protection Switching (APS) on the router.

For DS3 channels on a channelized OC12 interface, configure APS on channel 0 only. If you configure APS on channels 1 through 11, it is ignored.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**

interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Automatic Protection Switching and Multiplex Section Protection Overview*

## arp (Interfaces)

---

**Syntax** `arp ip-address (mac | multicast-mac) mac-address publish;`

```
arp {
  aging-timer minutes;
  gratuitous-arp-delayseconds;
  gratuitous-arp-on-ifup;
  interfaces {
    interface-name {
      aging-timer minutes;
    }
  }
  passive-learning;
  purging;
}
```

**Syntax (EX Series)** `arp {
 aging-timer minutes;
}`

**Hierarchy Level** [edit system]  
[edit interfaces *interface-name* unit *logical-unit-number* family inet address *address*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family inet address *address*]



**NOTE:** The edit logical-systems hierarchy is not available on QFabric systems.

---

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 9.0 for EX Series switches.  
Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** For Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, configure Address Resolution Protocol (ARP) table entries, mapping IP addresses to MAC addresses. You can enable backup VRRP routers to learn ARP requests for VRRP-IP to VRRP-MAC address translation. You can also set the time interval between ARP updates.



**NOTE:** By default, an ARP policer is installed that is shared among all the Ethernet interfaces on which you have configured the family inet statement. By including the arp statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet policer] hierarchy level, you can apply a specific ARP-packet policer to an interface. This feature is not available on EX Series switches.

When you need to conserve IP addresses, you can configure an Ethernet interface to be unnumbered by including the `unnumbered-address` statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet] hierarchy level.



**NOTE:** For EX-Series switches, set only the time interval between ARP updates.

**Options** **ip-address**—IP address to map to the MAC address. The IP address specified must be part of the subnet defined in the enclosing **address** statement.

**mac mac-address**—MAC address to map to the IP address. Specify the MAC address as six hexadecimal bytes in one of the following formats: *nnnn.nnnn.nnnn* or *nn:nn:nn:nn:nn:nn*. For example, **0000.5e00.5355** or **00:00:5e:00:53:55**.

**multicast-mac mac-address**—Multicast MAC address to map to the IP address. Specify the multicast MAC address as six hexadecimal bytes in one of the following formats: *nnnn.nnnn.nnnn* or *nn:nn:nn:nn:nn:nn*. For example, **0000.5e00.5355** or **00:00:5e:00:53:55**.

**publish**—(Optional) Have the router or switch reply to ARP requests for the specified IP address. If you omit this option, the router or switch uses the entry to reach the destination but does not reply to ARP requests.



**NOTE:** For unicast MAC addresses only, if you include the **publish** option, the router or switch replies to proxy ARP requests.

**aging-timer**—Time interval in minutes between ARP updates. In environments where the number of ARP entries to update is high (for example, on routers only, metro Ethernet environments), increasing the time between updates can improve system performance.

**passive-learning** (QFX-Series only)—Configure backup VRRP routers or switches to learn the ARP mappings (IP-to-MAC address) for hosts sending the requests. By default, the backup VRRP router drops these requests; therefore, if the master router fails, the backup router must learn all entries present in the ARP cache of the master router. Configuring passive learning reduces transition delay when the backup router is activated.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Static ARP Table Entries For Mapping IP Addresses to MAC Addresses</i></li><li>• <i>Configuring Junos OS ARP Learning and Aging Options for Mapping IPv4 Network Addresses to MAC Addresses</i></li><li>• <i>Junos OS Network Interfaces Library for Routing Devices</i></li><li>• <a href="#">Junos OS System Basics Configuration Guide</a> .</li></ul>

---

## asynchronous-notification

---

<b>Syntax</b>	(asynchronous-notification   no-asynchronous-notification);
<b>Hierarchy Level</b>	[edit interfaces ge- <i>fpc/pic/port</i> together-options ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	<p>(MX Series routers, T Series routers) For all Gigabit Ethernet interfaces (1-Gigabit, 10-Gigabit, and 100-Gigabit), configure support for notification of link down alarm generation and transfer.</p> <p>(M120 and M320 routers) For all 10-Gigabit Ethernet PIC interfaces, configure support for notification of link down alarm generation and transfer.</p> <ul style="list-style-type: none"><li>• <b>asynchronous-notification</b>—Support notification of link down alarm generation and transfer.</li><li>• <b>no-asynchronous-notification</b>—Prohibit notification of link down alarm generation and transfer.</li></ul>
<b>Default</b>	Support for notification of link down alarm generation and transfer is not enabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Gigabit Ethernet Notification of Link Down Alarm Overview</i></li><li>• <i>Configuring Gigabit Ethernet Notification of Link Down Alarm</i></li></ul>

## atm-encapsulation

---

<b>Syntax</b>	<code>atm-encapsulation (direct   plcp);</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> e3-options], [edit interfaces at- <i>fpc/pic/port</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure encapsulation for E3 and T3 traffic over ATM interfaces.
<b>Default</b>	Physical Layer Convergence Protocol (PLCP) encapsulation is the default for T3 traffic and for E3 traffic using G.751 framing.
<b>Options</b>	<p><b>direct</b>—Use direct encapsulation. G.832 framing on E3 interfaces requires direct encapsulation.</p> <p><b>plcp</b>—Use PLCP encapsulation.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i></li> <li>• <a href="#">encapsulation on page 577</a></li> </ul>

## atm-options

```
Syntax  atm-options {
        cell-bundle-size cells;
        ilmi;
        linear-red-profiles profile-name {
            high-plp-max-threshold percent;
            low-plp-max-threshold percent;
            queue-depth cells high-plp-threshold percent low-plp-threshold percent;
        }
        mpls {
            pop-all-labels {
                required-depth number;
            }
        }
        pic-type (atm1 | atm2);
        plp-to-clp;
        promiscuous-mode {
            vpi vpi-identifier;
        }
        scheduler-maps map-name {
            forwarding-class class-name {
                epd-threshold cells plp1 cells;
                linear-red-profile profile-name;
                priority (high | low);
                transmit-weight (cells number | percent number);
            }
            vc-cos-mode (alternate | strict);
        }
        use-null-cw;
        vpi vpi-identifier {
            maximum-vcs maximum-vcs;
            oam-liveness {
                up-count cells;
                down-count cells;
            }
            oam-period (disable | seconds);
            shaping {
                (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst
                length);
                queue-length number;
            }
        }
    }
```

**Hierarchy Level** [edit interfaces *interface-name*]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

**Description** Configure ATM-specific physical interface properties.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.



**NOTE:** Certain options apply only to specific platforms.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Interface Encapsulations Overview on page 47](#)
- [multipoint-destination on page 795](#)
- [shaping on page 966](#)
- [vci on page 1077](#)

## atm-scheduler-map

**Syntax** atm-scheduler-map (*map-name* | default);

**Hierarchy Level** [edit interfaces *interface-name* [unit](#) *logical-unit-number*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* [unit](#) *logical-unit-number*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Associate a scheduler map with a virtual circuit on a logical interface.

**Options** *map-name*—Name of scheduler map that you define at the [edit interfaces *interface-name* [atm-options scheduler-maps](#)] hierarchy level.  
*default*—The default scheduler mapping.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [ATM2 IQ VC Tunnel CoS Components Overview](#)
- [scheduler-maps \(For ATM2 IQ Interfaces\) on page 951](#)

## authentication

---

<b>Syntax</b>	<pre>authentication {   packet-types [<i>packet-types</i>];   password <i>password-string</i>;   username-include {     circuit-id;     circuit-type;     delimiter <i>delimiter-character</i>;     domain-name <i>domain-name-string</i>;     interface-name;     mac-address;     option-18;     option-37;     option-82 &lt;circuit-id&gt; &lt;remote-id&gt;;     radius-realm <i>radius-realm-string</i>;     remote-id;     user-prefix <i>user-prefix-string</i>;     vlan-tags <i>outer-vlan-tag-inner-vlan-tag</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	<p>Specify the authentication parameters that trigger the Access-Request message to AAA for the interface.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Subscribers over Static Interfaces Configuration Overview</i></li><li>• <i>Configuring the Static Subscriber Global Authentication Password</i></li><li>• <i>Configuring a Username for Authentication of Out-of-Band Triggered Dynamic VLANs</i></li><li>• <i>Layer 2 Wholesale with ANCP-Triggered VLANs Overview</i></li></ul>

## authentication-key

<b>Syntax</b>	<code>authentication-key key;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the Automatic Protection Switching (APS) authentication key (password).
<b>Options</b>	<b>key</b> —Authentication password. It can be 1 through 8 characters long. Configure the same key for both the working and protect routers.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Basic Automatic Protect Switching</i></li> <li>• For information about the <b>authentication-key</b> statement at the [edit interfaces <i>interface-name</i> unit <i>unit-number</i> family inet address <i>address</i> (vrrp-group   vrrp-inet6-group) <i>group-number</i>] or [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>unit-number</i> family (inet   inet6) address <i>address</i> (vrrp-group   vrrp-inet6-group) <i>group-number</i>] hierarchy level, see the <i>Junos OS High Availability Library for Routing Devices</i>.</li> </ul>

## authentication-profile-name

<b>Syntax</b>	<code>authentication-profile-name access-profile-name;</code>
<b>Hierarchy Level</b>	[edit protocols dot1x <a href="#">authenticator</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Specify the RADIUS authentication profile to use for user authentication when establishing an IEEE 802.1x Port-Based Network Access Control ( <b>dot1x</b> ) connection.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li> <li>• <a href="#">authenticator on page 448</a></li> <li>• <a href="#">dot1x on page 543</a></li> </ul>

## authenticator

---

**Syntax**     authenticator {  
              authentication-profile-name *access-profile-name*;  
              **interface** *interface-id* {  
                  maximum-requests *integer*;  
                  quiet-period *seconds*;  
                  reauthentication (disable | interval *seconds*);  
                  retries *integer*;  
                  server-timeout *seconds*;  
                  supplicant (*single*);  
                  supplicant-timeout *seconds*;  
                  transmit-period *seconds*;  
              }  
           }

**Hierarchy Level**     [edit protocols dot1x]

**Release Information**     Statement introduced in Junos OS Release 9.3.

**Description**     Specify an authentication profile for user or client authentication and configure the Ethernet interface for 802.1x protocol operation.

**Options**     **authentication-profile-name** *access-profile-name*—Specifies the RADIUS authentication profile for user or client authentication.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**     protocols—To view this statement in the configuration.  
                                 protocols-control—To add this statement to the configuration.

**Related Documentation**

- *IEEE 802.1x Port-Based Network Access Control Overview*
- [authentication-profile-name on page 447](#)
- [dot1x on page 543](#)

## auto-configure

```
Syntax auto-configure {
  vlan-ranges {
    access-profile profile-name;
    authentication {
      packet-types [packet-types];
      password password-string;
      username-include {
        circuit-id;
        circuit-type;
        delimiter delimiter-character;
        domain-name domain-name-string;
        interface-name;
        mac-address;
        option-18;
        option-37;
        option-82 <circuit-id> <remote-id>;
        radius-realm radius-realm-string;
        remote-id;
        user-prefix user-prefix-string;
      }
    }
    dynamic-profile profile-name {
      accept (any | dhcp-v4 | dhcp-v6 | inet | inet6 | pppoe);
      accept-out-of-band protocol;
      ranges (any | low-tag)–(any | high-tag);
    }
    override;
  }
  stacked-vlan-ranges {
    access-profile profile-name;
    authentication {
      packet-types [packet-types];
      password password-string;
      username-include {
        circuit-type;
        delimiter delimiter-character;
        domain-name domain-name-string;
        interface-name;
        mac-address;
        option-18;
        option-37;
        option-82 <circuit-id> <remote-id>;
        radius-realm radius-realm-string;
        user-prefix user-prefix-string;
      }
    }
    dynamic-profile profile-name {
      accept (any | dhcp-v4 | dhcp-v6 | inet | inet6 | pppoe);
      ranges (any | low-tag–high-tag), (any | low-tag–high-tag);
    }
    override;
  }
}
```

```
    remove-when-no-subscribers;  
}
```

**Hierarchy Level** [edit [interfaces](#) *interface-name*]

**Release Information** Statement introduced in Junos OS Release 9.5.

**Description** Enable the configuration of dynamic, auto-sensed VLANs.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs*
- *Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs*

---

## auto-discovery

---

**Syntax** auto-discovery;

**Hierarchy Level** [edit protocols [oam](#) [ethernet](#) [connectivity-fault-management](#) maintenance-domain *domain-name* maintenance-association *ma-name* [mep](#) *mep-id*]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** Enable the MEP to accept continuity check messages from all remote MEPs.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring a MEP to Generate and Respond to CFM Protocol Messages*

## auto-negotiation

<b>Syntax</b>	(auto-negotiation   no-auto-negotiation) <remote-fault (local-interface-online   local-interface-offline)>;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> <b>gigether-options</b> ], [edit interfaces <i>ge-pim</i> /0/0 <b>switch-options switch-port</b> <i>port-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.6. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	For Gigabit Ethernet interfaces on M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers explicitly enable autonegotiation and remote fault. For EX Series switches, explicitly enable autonegotiation only. <ul style="list-style-type: none"> <li>• <b>auto-negotiation</b>—Enables autonegotiation. This is the default.</li> <li>• <b>no-auto-negotiation</b>—Disable autonegotiation. When autonegotiation is disabled, you must explicitly configure the link mode and speed.</li> </ul> <p>When you configure Tri-Rate Ethernet copper interfaces to operate at 1 Gbps, autonegotiation must be enabled.</p>



**NOTE:** On EX Series switches, an interface configuration that disables autonegotiation and manually sets the link speed to 1 Gbps is accepted when you commit the configuration; however, if the interface you are configuring is a Tri-Rate Ethernet copper interface, the configuration is ignored as invalid and autonegotiation is enabled by default.

To correct the invalid configuration and disable autonegotiation:

1. Delete the **no-auto-negotiation** statement and commit the configuration.
2. Set the link speed to 10 or 100 Mbps, set **no-auto-negotiation**, and commit the configuration.

On EX Series switches, if the link speed and duplex mode are also configured, the interfaces use the values configured as the desired values in the negotiation. If autonegotiation is disabled, the link speed and link mode must be configured.



**NOTE:** On T4000 routers, the **auto-negotiation** command is ignored for interfaces other than Gigabit Ethernet.



**NOTE:** On ACX Series routers, when you configure fiber interfaces (fiber media mode) to operate at 1 Gbps, you need to always enable autonegotiation (auto-negotiation) to negotiate the speed and duplex settings. You cannot disable autonegotiation (no-auto-negotiation) in the fiber media mode. In copper interfaces (copper media mode), autonegotiation is enabled by default. To disable autonegotiation, you need to explicitly configure the link speed to 10 or 100 Mbps, set no-auto-negotiation, and commit the configuration.

**Default** Autonegotiation is automatically enabled. No explicit action is taken after the autonegotiation is complete or if the negotiation fails.

**Options** **remote-fault (local-interface-online | local-interface-offline)**—(Optional) For M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers only, manually configure remote fault on an interface.

**Default:** local-interface-online

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Gigabit Ethernet Autonegotiation Overview*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure) for EX Series Switches with ELS support*

## backup-destination

<b>Syntax</b>	<code>backup-destination <i>address</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>tunnel</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>tunnel</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For tunnel interfaces, specify the remote address of the backup tunnel.
<b>Options</b>	<b><i>address</i></b> —Address of the remote side of the connection.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> <li>• <a href="#">destination (Tunnels) on page 529</a></li> </ul>

## backup-interface

<b>Syntax</b>	<code>backup-interface <i>es-fpc/pic/port</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>es-fpc/pic/port</i> <b>es-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure a backup ES Physical Interface Card (PIC). If the primary ES PIC fails, the backup becomes active, inherits all the tunnels and security associations (SAs), and acts as the new next hop for IP Security (IPsec) traffic.
<b>Options</b>	<b><i>es-fpc/pic/port</i></b> —Name of ES interface to serve as the backup.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## backup-options

---

<b>Syntax</b>	<pre>backup-options {   interface <i>interface-name</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure an interface to be used as a backup interface if the primary interface goes down. This is used to support ISDN dial backup operation.</p> <p>The remaining statement is explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## bandwidth (Interfaces)

<b>Syntax</b>	<code>bandwidth rate;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Configure the bandwidth value for an interface. This statement is valid for all logical interface types except multilink and aggregated interfaces.



**NOTE:** We recommend that you be careful when setting this value. Any interface bandwidth value that you configure using the **bandwidth** statement affects how the interface cost is calculated for a dynamic routing protocol, such as OSPF. By default, the interface cost for a dynamic routing protocol is calculated using the following formula:


$$\text{cost} = \text{reference-bandwidth} / \text{bandwidth},$$

where bandwidth is the physical interface speed. However, if you specify a value for bandwidth using the **bandwidth** statement, that value is used to calculate the interface cost, rather than the actual physical interface bandwidth.

<b>Options</b>	<b>rate</b> —Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation <b>c</b> ; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps. <b>Range:</b> Not limited.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Configuring the Interface Bandwidth on page 189</a></li> </ul>

## bandwidth-limit (Hierarchical Policer)

---

<b>Syntax</b>	<code>bandwidth-limit <i>bps</i>;</code>
<b>Hierarchy Level</b>	[edit <a href="#">dynamic-profiles profile-name</a> firewall hierarchical-policer aggregate <a href="#">if-exceeding</a> ], [edit <a href="#">dynamic-profiles profile-name</a> firewall hierarchical-policer <a href="#">premium if-exceeding</a> ], [edit firewall hierarchical-policer aggregate <a href="#">if-exceeding</a> ], [edit firewall hierarchical-policer <a href="#">premium if-exceeding</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5. Support at the [edit <a href="#">dynamic-profiles ... if-exceeding</a> ] hierarchy level introduced in Junos OS Release 11.4.
<b>Description</b>	On M40e, M120, and M320 (with FFPC and SFPC) edge routers; on MPCs hosted on MX Series routers; on T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs; and on T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, configure the maximum average bandwidth for premium or aggregate traffic in a hierarchical policer.
<b>Options</b>	<b><i>bps</i></b> —You can specify the number of bits per second either as a decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000).  <b>Range:</b> <ul style="list-style-type: none"><li>• 32,000 through 50,000,000,000 on M Series routers</li><li>• 32,000 through 100,000,000,000 on T Series routers</li><li>• 32,000 through 18,446,744,073,709,551,615 on MX Series routers</li></ul>
<div> <b>NOTE:</b> When you specify a numeric value beyond the supported bandwidth of the PFE, the router caps the bandwidth at the maximum supported bandwidth of the PFE.</div>	
<b>Required Privilege Level</b>	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Hierarchical Policer Configuration Overview</i></li><li>• <i>Policer Bandwidth and Burst-Size Limits</i></li><li>• <i>Policer Color-Marking and Actions</i></li><li>• <i>Single Token Bucket Algorithm</i></li><li>• <i>Determining Proper Burst Size for Traffic Policers</i></li><li>• <i>aggregate (Hierarchical Policer)</i></li></ul>

- [burst-size-limit \(Hierarchical Policer\) on page 469](#)
- [premium \(Hierarchical Policer\) on page 899](#)

## bandwidth-limit (Policer for Gigabit Ethernet Interfaces)

<b>Syntax</b>	<code>bandwidth-limit <i>bps</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile ethernet-policer-profile</a> policer <i>cos-policer-name</i> <a href="#">aggregate</a> ], [edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile ethernet-policer-profile</a> policer <i>cos-policer-name</i> <a href="#">premium</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Define a policer to apply to nonpremium traffic.
<b>Options</b>	<p><b><i>bps</i></b>—Bandwidth limit, in bits per second. Specify either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000).</p> <p><b>Range:</b> 32 Kbps through 32 gigabits per second (Gbps). For IQ2 and IQ2-E interfaces 65,536 bps through 1 Gbps. For 10-Gigabit IQ2 and IQ2-E interfaces 65,536 bps through 10 Gbps.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Gigabit Ethernet Policers</a></li> <li>• <a href="#">burst-size-limit (Policer for Gigabit Ethernet Interfaces) on page 470</a></li> </ul>

## bearer-bandwidth-limit

---

<b>Syntax</b>	<code>bearer-bandwidth-limit <i>kilobits-per-second</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">dynamic-call-admission-control</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">dynamic-call-admission-control</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	(J4350 and J6350 Services Routers supporting voice over IP with the TGM550 media gateway module) For Fast Ethernet and Gigabit Ethernet interfaces, ISDN BRI interfaces, and serial interfaces with PPP or Frame Relay encapsulation, configure the bearer bandwidth limit (BBL). BBL is used for dynamic call admission control (dynamic CAC) to provide enhanced control over WAN bandwidth.
<b>Options</b>	<b><i>kilobits-per-second</i></b> —The bearer bandwidth limit to be reported to a TGM550 media gateway module, in kilobits per second (kbps). <b>Range:</b> 0 through 9999 kbps <b>Default:</b> 1 (dynamic CAC is not enabled on the interface)
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## bert-algorithm

**Syntax** `bert-algorithm algorithm;`

**Hierarchy Level** `[edit interfaces ce1-fpc/pic/port],`  
`[edit interfaces ct1-fpc/pic/port],`  
`[edit interfaces interface-name ds0-options],`  
`[edit interfaces interface-name e1-options],`  
`[edit interfaces interface-name e3-options],`  
`[edit interfaces interface-name t1-options],`  
`[edit interfaces interface-name t3-options]`

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

**Description** Configure the pattern to send in the bit stream during a bit error rate test (BERT). Applies to T1, E3, T3, and multichannel DS3 interfaces, the channelized interfaces (DS3, OC12, STM1), and channelized IQ and IQE interfaces (E1, E3 and DS3).



**NOTE:** When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the `bert-algorithm` statement must be included at the `[edit interfaces ce1-fpc/pic/port]` or `[edit interfaces ct1-fpc/pic/port]` hierarchy level as appropriate.

**Options** *algorithm*—Pattern to send in the bit stream. There are two categories of test patterns: pseudorandom and repetitive. Both patterns conform to CCITT/ITU O.151, O.152, O.153, and O.161 standards. The algorithm can be one of the following patterns:

- **all-ones-repeating**—Pattern is all ones.
- **all-zeros-repeating**—Pattern is all zeros.
- **alternating-double-ones-zeros**—Pattern is alternating pairs of ones and zeros.
- **alternating-ones-zeros**—Pattern is alternating ones and zeros.
- **pseudo-2e3**—Pattern is  $2^3 - 1$ .
- **pseudo-2e4**—Pattern is  $2^4 - 1$ .
- **pseudo-2e5**—Pattern is  $2^5 - 1$ .
- **pseudo-2e6**—Pattern is  $2^6 - 1$ .
- **pseudo-2e7**—Pattern is  $2^7 - 1$ .
- **pseudo-2e9-o153**—Pattern is  $2^9 - 1$ , as defined in the O153 standard.
- **pseudo-2e10**—Pattern is  $2^{10} - 1$ .
- **pseudo-2e11-o152**—Pattern is  $2^{11} - 1$ , as defined in the O152 standard.


- **pseudo-2e15-o151**—Pattern is  $2^{15} - 1$ , as defined in the O151 standard.
- **pseudo-2e17**—Pattern is  $2^{17} - 1$ .
- **pseudo-2e18**—Pattern is  $2^{18} - 1$ .
- **pseudo-2e20-o151**—Pattern is  $2^{20} - 1$ , as defined in the O151 standard.
- **pseudo-2e20-o153**—Pattern is  $2^{20} - 1$ , as defined in the O153 standard.
- **pseudo-2e21**—Pattern is  $2^{21} - 1$ .
- **pseudo-2e22**—Pattern is  $2^{22} - 1$ .
- **pseudo-2e23-o151**—Pattern is  $2^{23} - 1$ , as defined in the O151 standard.
- **pseudo-2e25**—Pattern is  $2^{25} - 1$ .
- **pseudo-2e28**—Pattern is  $2^{28} - 1$ .
- **pseudo-2e29**—Pattern is  $2^{29} - 1$ .
- **pseudo-2e31**—Pattern is  $2^{31} - 1$ .
- **pseudo-2e32**—Pattern is  $2^{32} - 1$ .
- **repeating-1-in-4**—One bit in four is set to 1; the others are set to 0.
- **repeating-1-in-8**—One bit in eight is set to 1; the others are set to 0.
- **repeating-3-in-24**—Three bits in twenty four are set to 1; the others are set to 0.

**Default:** pseudo-2e3

<b>Required Privilege</b>	interface—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.


<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Interface Diagnostics</i></li><li>• <i>Configuring E1 BERT Properties</i></li><li>• <i>Configuring E3 BERT Properties</i></li><li>• <i>Configuring T1 BERT Properties</i></li><li>• <i>Configuring T3 BERT Properties</i></li><li>• <i>Examples: Configuring T3 Interfaces</i></li><li>• <a href="#">bert-error-rate on page 461</a></li><li>• <a href="#">bert-period on page 463</a></li></ul>
------------------------------	---

## bert-error-rate

<b>Syntax</b>	<code>bert-error-rate rate;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces ce1-fpc/pic/port],</code> <code>[edit interfaces ct1-fpc/pic/port],</code> <code>[edit interfaces interface-name ds0-options],</code> <code>[edit interfaces interface-name e1-options],</code> <code>[edit interfaces interface-name e3-options],</code> <code>[edit interfaces interface-name t1-options],</code> <code>[edit interfaces interface-name t3-options]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
<b>Description</b>	Configure the bit error rate to use in a BERT procedure. Applies to E1, E3, T1, or T3 interfaces, and to the channelized interfaces (DS3, OC3, OC12, and STM1).
	<div>  <p><b>NOTE:</b> When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>bert-error-rate</code> statement must be included at the <code>[edit interfaces ce1-fpc/pic/port]</code> or <code>[edit interfaces ct1-fpc/pic/port]</code> hierarchy level as appropriate.</p> </div>
<b>Options</b>	<p><b>rate</b>—Bit error rate.</p> <p><b>Range:</b> 0 through 7, which corresponds to <math>10^{-1}</math> (1 error per bit) to <math>10^{-7}</math> (1 error per 10 million bits)</p> <p><b>Default:</b> 0</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">bert-algorithm on page 459</a></li> <li>• <a href="#">bert-period on page 463</a></li> <li>• <a href="#">ds0-options on page 547</a></li> <li>• <a href="#">e1-options on page 568</a></li> <li>• <a href="#">e3-options on page 569</a></li> <li>• <a href="#">t1-options on page 1004</a></li> <li>• <a href="#">t3-options on page 1008</a></li> <li>• <i>Interface Diagnostics</i></li> <li>• <i>Configuring E1 BERT Properties</i></li> </ul>

- *Configuring E3 BERT Properties*
- *Configuring T1 BERT Properties*
- *Configuring T3 BERT Properties*
- *Examples: Configuring T3 Interfaces*

## bert-period

<b>Syntax</b>	<code>bert-period <i>seconds</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>ce1-fpc/pic/port</i>],</code> <code>[edit interfaces <i>ct1-fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i> <a href="#">ds0-options</a>],</code> <code>[edit interfaces <i>interface-name</i> <a href="#">e1-options</a>],</code> <code>[edit interfaces <i>interface-name</i> <a href="#">e3-options</a>],</code> <code>[edit interfaces <i>interface-name</i> <a href="#">t1-options</a>],</code> <code>[edit interfaces <i>interface-name</i> <a href="#">t3-options</a>]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
<b>Description</b>	<p>Configure the duration of a BERT test. Applies to E1, E3, T1, and T3 interfaces, and to E1, E3, T1, and T3 partitions on the channelized interfaces (CE1, CT1, DS3, OC3, OC12, OC48, STM1, STM4, and STM16).</p> <p>E1 and T1 IQ, IQE, and standard interfaces support an extended BERT period range, up to 86,400 seconds (24 hours).</p>
	<p> <b>NOTE:</b> When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <code>bert-period</code> statement must be included at the <code>[edit interfaces <i>ce1-fpc/pic/port</i>]</code> or <code>[edit interfaces <i>ct1-fpc/pic/port</i>]</code> hierarchy level as appropriate.</p>
<b>Options</b>	<p><b><i>seconds</i></b>—Test duration. Range and default values vary by interface type.</p> <p><b>Range:</b></p> <ul style="list-style-type: none"> <li>PIC-dependent—Normal BERT period: either 1 through 239 seconds or 1 through 240 seconds</li> <li>PIC-dependent—Extended BERT period: from 1 through 86,400 seconds</li> </ul> <p><b>Default:</b></p> <ul style="list-style-type: none"> <li>Normal BERT period: 10 seconds</li> <li>Extended BERT period (on supported E1 interfaces): 10 seconds</li> <li>Extended BERT period (on supported T1 interfaces): 240 seconds</li> </ul>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- *Interface Diagnostics*
  - *Configuring E1 BERT Properties*
  - *Configuring E3 BERT Properties*
  - *Configuring T1 BERT Properties*
  - *Configuring T3 BERT Properties*
  - [bert-algorithm on page 459](#)
  - [bert-error-rate on page 461](#)


---

## bridge-domain

---

<b>Syntax</b>	<pre>bridge-domain <i>name</i>;   vlan-id [ <i>vlan-identifiers</i> ]; }</pre>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>maintenance-domain-name</i> ], [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>maintenance-domain-name</i> virtual-switch <i>virtual-switch-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	(MX Series routers only) Specify the OAM Ethernet CFM maintenance domain bridge domain.
<b>Options</b>	<i>name</i> —Specify the name of the bridge domain.  <i>vlan-identifiers</i> —Specify one or more VLAN identifiers.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Maintenance Intermediate Points (MIPs)</i></li><li>• <a href="#">maintenance-domain on page 768</a></li></ul>

## broadcast


<b>Syntax</b>	<code>broadcast <i>address</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> <b>address</b> <i>address</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Set the broadcast address on the network or subnet. On a subnet you cannot specify a host address of 0 (0.0.0.0), nor can you specify a broadcast address (255.255.255.255). For example, in the statement <b>set interface ge-0/0/0 unit 0 family inet address 10.1.1.0/24</b> , the subnet address 10.1.1.0 has the host address of 0. Hence, you cannot configure this address. Similarly, for the subnet, you cannot use the broadcast address 10.1.1.255/24.
<b>Default</b>	The default broadcast address has a host portion of all ones.
<b>Options</b>	<b>address</b> —Broadcast address. The address must have a host portion of either all ones or all zeros. You cannot specify the addresses 0.0.0.0 or 255.255.255.255.
<div>  <b>NOTE:</b> The edit logical-systems hierarchy is not available on QFabric systems. </div>	
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Interface Address on page 207</a></li> </ul>

## buildout (E3 or T3 over ATM Interfaces)

---


<b>Syntax</b>	<code>buildout <i>feet</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> e3-options], [edit interfaces at- <i>fpc/pic/port</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For E3 and T3 traffic over ATM interfaces, set the buildout value.
<b>Options</b>	<b><i>feet</i></b> —The buildout value in feet. <b>Range:</b> 0 through 450 feet (137 meters) <b>Default:</b> 10 feet (3 meters)
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i></li></ul>

## buildout (T1 Interfaces)

<b>Syntax</b>	<code>buildout value;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>ct1-fpc/pic/port</i> ] [edit interfaces <i>interface-name</i> <b>t1-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	For T1 interfaces, set the buildout value.
<div>  <p><b>NOTE:</b> When configuring CT1 interfaces on 10-port Channelized E1/T1 IQE PICs and 16-Port Channelized E1/T1 Circuit Emulation MICs, the <b>buildout</b> statement must be included at the hierarchy level.</p> </div>	
<b>Default</b>	The default buildout value is 0 through 132 feet.
<b>Options</b>	<p>You can set the buildout value to one of the following:</p> <ul style="list-style-type: none"> <li>• <b>0-132</b>—0 through 132 feet (0 through 40 meters)</li> <li>• <b>133-265</b>—133 through 265 feet (40 through 81 meters)</li> <li>• <b>266-398</b>—266 through 398 feet (81 through 121 meters)</li> <li>• <b>399-531</b>—399 through 531 feet (121 through 162 meters)</li> <li>• <b>532-655</b>—532 through 655 feet (162 through 200 meters)</li> <li>• <b>long-7.5db</b>—For MX Series only, long buildout with 7.5 dB transmit attenuation</li> <li>• <b>long-15db</b>—For MX Series only, long buildout with 15 dB transmit attenuation</li> <li>• <b>long-22.5db</b>—For MX Series only, long buildout with 22.5 dB transmit attenuation</li> </ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the T1 Buildout</i></li> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## bundle

---

<b>Syntax</b>	<code>bundle (ml-<i>fpc/pic/port</i>   ls-<i>fpc/pic/port</i>);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> <i>family</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>family</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Associate the multilink interface with the logical interface it is joining. You can include this statement for the <b>mlfr-end-to-end</b> and <b>mlfr-uni-nni</b> protocol families only.
<div> <b>NOTE:</b> For M Series routers and T Series routers, the following caveats apply:</div> <ul style="list-style-type: none"><li>• Maximum supported throughput on the bundle interfaces is 45 Mbps.</li><li>• Bundling of the logical interfaces under a T3 physical interface into the same or different bundles is not supported.</li></ul>	
<b>Options</b>	<b>ml-<i>fpc/pic/port</i></b> —Name of the multilink interface you are linking.  <b>ls-<i>fpc/pic/port</i></b> —Name of the link services interface you are linking.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## burst-size-limit (Hierarchical Policer)


<b>Syntax</b>	<code>burst-size-limit bytes;</code>
<b>Hierarchy Level</b>	[edit <a href="#">dynamic-profiles profile-name</a> firewall hierarchical-policer aggregate <a href="#">if-exceeding</a> ], [edit <a href="#">dynamic-profiles profile-name</a> firewall hierarchical-policer <a href="#">premium if-exceeding</a> ], [edit firewall hierarchical-policer aggregate <a href="#">if-exceeding</a> ], [edit firewall hierarchical-policer <a href="#">premium if-exceeding</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5. Support at the [edit <a href="#">dynamic-profiles ... if exceeding</a> ] hierarchy level introduced in Junos OS Release 11.4.
<b>Description</b>	On M40e, M120, and M320 (with FFPC and SFPC) edge routers; on MPCs hosted on MX Series routers; on T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs; and on T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, configure the burst-size limit for premium or aggregate traffic in a hierarchical policer.
<b>Options</b>	<b>bytes</b> —Burst-size limit in bytes. The minimum recommended value is the maximum transmission unit (MTU) of the IP packets being policed. You can specify the value either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000). <b>Range:</b> 1500 through 2,147,450,880 (1500 through 100,000,000,000 on MPCs hosted on MX Series routers)
<b>Required Privilege Level</b>	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Hierarchical Policer Configuration Overview</i></li> <li>• <i>Policer Bandwidth and Burst-Size Limits</i></li> <li>• <i>Policer Color-Marking and Actions</i></li> <li>• <i>Single Token Bucket Algorithm</i></li> <li>• <i>Determining Proper Burst Size for Traffic Policers</i></li> <li>• <i>Hierarchical Policers</i></li> <li>• <i>aggregate (Hierarchical Policer)</i></li> <li>• <a href="#">bandwidth-limit (Hierarchical Policer) on page 456</a></li> <li>• <a href="#">premium (Hierarchical Policer) on page 899</a></li> </ul>

## burst-size-limit (Policer for Gigabit Ethernet Interfaces)

---

<b>Syntax</b>	<code>burst-size-limit bytes;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile ethernet-policer-profile</a> policer <i>cos-policer-name</i> aggregate], [edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile ethernet-policer-profile</a> policer <i>cos-policer-name</i> premium]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Define a policer to apply to nonpremium traffic.
<b>Options</b>	<b>bytes</b> —Burst length. <b>Range:</b> 1500 through 100,000,000 bytes
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Gigabit Ethernet Policers</a></li><li>• <a href="#">bandwidth-limit (Policer for Gigabit Ethernet Interfaces)</a> on page 457</li></ul>

## byte-encoding

<b>Syntax</b>	byte-encoding (nx56   nx64);
<b>Hierarchy Level</b>	[edit interfaces <i>t1-fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> <b>ds0-options</b> ], [edit interfaces <i>interface-name</i> <b>t1-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Set the byte encoding on a DS0 or T1 interface to use 7 bits per byte or 8 bits per byte.
<div>  <p><b>NOTE:</b> When configuring T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the <b>byte-encoding</b> statement must be included at the [edit interfaces <i>t1-fpc/pic/port</i>] hierarchy level.</p> </div>	
<b>Default</b>	The default byte encoding is 8 bits per byte (nx64).
<b>Options</b>	<b>nx56</b> —Use 7 bits per byte. <b>nx64</b> —Use 8 bits per byte.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring T1 Byte Encoding</i></li> </ul>

## bytes

---

<b>Syntax</b>	<pre>bytes {     c2 <i>value</i>;     e1-quiet <i>value</i>;     f1 <i>value</i>;     f2 <i>value</i>;     s1 <i>value</i>;     z3 <i>value</i>;     z4 <i>value</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>sonet-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Set values in some SONET/SDH header bytes.
<b>Options</b>	<p><b>c2 <i>value</i></b>—Path signal label SONET/SDH overhead byte. SONET/SDH frames use the C2 byte to indicate the contents of the payload inside the frame. SONET/SDH interfaces use the C2 byte to indicate whether the payload is scrambled.</p> <p><b>Range:</b> 0 through 255</p> <p><b>Default:</b> 0xCF</p> <p><b>e1-quiet <i>value</i></b>—Default idle byte sent on the orderwire SONET/SDH overhead bytes. The router does not support the orderwire channel, and hence sends this byte continuously.</p> <p><b>Range:</b> 0 through 255</p> <p><b>Default:</b> 0x7F</p> <p><b>f1 <i>value</i>, f2 <i>value</i>, z3 <i>value</i>, z4 <i>value</i></b>—SONET/SDH overhead bytes.</p> <p><b>Range:</b> 0 through 255</p> <p><b>Default:</b> 0x00</p> <p><b>s1 <i>value</i></b>—Synchronization message SONET overhead byte. This byte is normally controlled as a side effect of the system reference clock configuration and the state of the external clock coming from an interface if the system reference clocks have been configured to use an external reference.</p> <p><b>Range:</b> 0 through 255</p> <p><b>Default:</b> 0xCC</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring SONET/SDH Header Byte Values to Identify Error Conditions</i></li><li>• <i>no-concatenate</i></li></ul>

## calculation-weight

<b>Syntax</b>	calculation-weight { delay <i>delay-value</i> ; delay-variation <i>delay-variation-value</i> ; }
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management performance-monitoring sla-iterator-profiles</a> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1. Statement introduced in Junos OS Release 11.4 for EX Series switches.
<b>Description</b>	Configure the calculation weight for delay and delay variation.




**NOTE:** This option is applicable only for two-way delay measurement.

The remaining statements are explained separately. See [CLI Explorer](#).

<b>Required Privilege Level</b>	Configure—To enter configuration mode. Control—To modify any configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring an Iterator Profile</i></li> <li>• <i>Configuring an Iterator Profile on a Switch (CLI Procedure)</i></li> <li>• <i>delay</i></li> <li>• <i>delay-variation</i></li> </ul>

## callback

---

Syntax	callback;
Hierarchy Level	[edit interfaces <i>dl n</i> unit <i>logical-unit-number</i> <b>dialer-options incoming-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>dl n</i> unit <i>logical-unit-number</i> <b>dialer-options incoming-map</b> ]
Release Information	Statement introduced in Junos OS Release 7.5.
Description	On J Series Services Routers with interfaces configured for ISDN, configure the dialer to terminate the incoming call and call back the originator after the callback wait period. The default wait time is 5 seconds. To configure the wait time, include the <b>callback-wait-period</b> statement at the [edit interfaces <i>dl n</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ] hierarchy level.
<div> <b>NOTE:</b> The <b>incoming-map</b> statement is mandatory for the router to accept any incoming ISDN calls.</div>	
If the <b>callback</b> statement is configured, you cannot use the <b>caller caller-id</b> statement at the [edit interfaces <i>dl n</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ] hierarchy level.	
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li><li>• <a href="#">callback-wait-period</a> on page 475</li></ul>

## callback-wait-period

<b>Syntax</b>	<code>callback-wait-period <i>time</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>dl</i> <i>n</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>dl</i> <i>n</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.5.
<b>Description</b>	<p>On J Series Services Routers with interfaces configured for ISDN with callback, specify the amount of time the dialer waits before calling back the caller. The default wait time is 5 seconds. The wait time is necessary because, when a call is rejected, the switch waits for up to 4 seconds on point-to-multipoint connections to ensure no other device accepts the call before sending the DISCONNECT message to the originator of the call. However, the default time of 5 seconds may not be sufficient for different switches or may not be needed on point-to-point connections.</p> <p>To configure callback mode, include the <b>callback</b> statement at the [edit interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> <b>dialer-options</b>] hierarchy level.</p> <p>If the <b>callback</b> statement is configured, you cannot use the <b>caller <i>caller-id</i></b> statement at the [edit interfaces <i>dl</i><i>n</i> unit <i>logical-unit-number</i> <b>dialer-options</b>] hierarchy level.</p>
<b>Options</b>	<b><i>time</i></b> —Time the dialer waits before calling back the caller.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## caller

---

<b>Syntax</b>	<code>caller (caller-id   accept-all);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>dlr</i> unit <i>logical-unit-number</i> <b>dialer-options incoming-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>dlr</i> unit <i>logical-unit-number</i> <b>dialer-options incoming-map</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.5.
<b>Description</b>	On J Series Services Routers with interfaces configured for ISDN, specify the dialer to accept a specified caller number or accept all incoming calls.
<b>Options</b>	<p><b>caller-id</b>—Incoming caller number. You can configure multiple caller IDs on a dialer. The caller ID of the incoming call is matched against all caller IDs configured on all dialers. The dialer matching the caller ID is looked at for further processing. Only a precise match is a valid match. For example, the configured caller ID 1-222-333-4444 or 222-333-4444 will match the incoming caller ID 1-222-333-4444.</p> <p>If the incoming caller ID has fewer digits than the number configured, it is not a valid match. Duplicate caller IDs are not allowed on different dialers; however, for example, the numbers 1-408-532-1091, 408-532-1091, and 532-1091 can still be configured on different dialers.</p> <p>Only one B-channel can map to one dialer. If one dialer is already mapped, any other call mapping to the same dialer is rejected (except in the case of a multilink dialer). If no dialer caller is configured on a dialer, that dialer will not accept any calls.</p> <p><b>accept-all</b>—Any incoming call in an associated interface is accepted.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## calling-number

<b>Syntax</b>	<code>calling-number <i>number</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>br-pim</i>/0/<i>port</i> <b>isdn-options</b>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	On J Series Services Routers with ISDN interfaces, configure the calling number to include in outgoing calls.
<b>Options</b>	<i>number</i> —Calling number.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring ISDN Physical Interface Properties</i></li> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## cbit-parity


<b>Syntax</b>	<code>(cbit-parity   no-cbit-parity);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> <b>t3-options</b>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For T3 interfaces only, enable or disable C-bit parity mode, which controls the type of framing that is present on the transmitted T3 signal. When C-bit parity mode is enabled, the C-bit positions are used for the far-end block error (FEBE), far-end alarm and control (FEAC), terminal data link, path parity, and mode indicator bits, as defined in ANSI T1.107a-1989. For ATM and ATM2 IQ2 and IQ2-E interfaces, M23 framing is used when the <b>no-cbit-parity</b> statement is included. For all other interfaces, M13 framing is used when the <b>no-cbit-parity</b> statement is included.
<b>Default</b>	C-bit parity mode is enabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i></li> <li>• <i>Disabling T3 C-Bit Parity Mode</i></li> </ul>

## cbr


---

<b>Syntax</b>	<code>cbr rate;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> atm-options vpi <i>vpi-identifier</i> shaping], [edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping], [edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> shaping], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> shaping]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM encapsulation only, define a constant bit rate bandwidth utilization in the traffic-shaping profile.
<b>Default</b>	Unspecified bit rate (UBR); that is, bandwidth utilization is unlimited.
<b>Options</b>	<p><b>rate</b>—Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation <b>c</b>; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p> <p>For ATM1 and ATM2 OC3 interfaces, the maximum available rate is 100 percent of <i>line-rate</i>, or 135,600,000 bps. For ATM1 OC12 interfaces, the maximum available rate is 50 percent of <i>line-rate</i>, or 271,263,396 bps. For ATM2 IQ interfaces, the maximum available rate is 542,526,792 bps.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining the ATM Traffic-Shaping Profile Overview</a></li><li>• <a href="#">rtvbr on page 945</a></li><li>• <a href="#">shaping on page 966</a></li><li>• <a href="#">vbr on page 1075</a></li></ul>

## cell-bundle-size

<b>Syntax</b>	<code>cell-bundle-size <i>cells</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> atm-options], [edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces using ATM Layer 2 circuit cell-relay transport mode only, configure the maximum number of ATM cells per frame.
<div>  <p><b>NOTE:</b> For MIC-3D-8OC3-2OC12-ATM on MX104 routers, ensure that the configured <code>cell-bundle-size</code> is less than 30 for an ATM interface that is configured with <code>atm-ccc-cell-relay</code> encapsulation. If the configured <code>cell-bundle-size</code> is greater than or equal to 30 and the traffic is passing through the interface at line rate, it might lead to AFEB crash.</p> </div>	
<b>Options</b>	<p><b><i>cells</i></b>—Maximum number of cells.</p> <p><b>Default:</b> 1 cell</p> <p><b>Range:</b> 1 through 176 cells</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring the Layer 2 Circuit Cell-Relay Cell Maximum Overview</i></li> </ul>

## chap

<b>Syntax</b>	<pre> chap {   access-profile name;   challenge-length minimum <i>minimum-length</i> maximum <i>maximum-length</i>;   default-chap-secret name;   local-name name;   passive; } </pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <a href="#">ppp-options</a>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">ppp-options</a>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">ppp-options</a>]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Allow each side of a link to challenge its peer, using a “secret” known only to the authenticator and that peer. The secret is not sent over the link.</p> <p>By default, PPP CHAP is disabled. If CHAP is not explicitly enabled, the interface makes no CHAP challenges and denies all incoming CHAP challenges.</p> <p>For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"> <li>• <b>atm-ppp-llc</b>—PPP over AAL5 LLC encapsulation.</li> <li>• <b>atm-ppp-vc-mux</b>—PPP over AAL5 multiplex encapsulation.</li> </ul>
	<p>.....</p> <div>  <p><b>BEST PRACTICE:</b> On inline service (si) interfaces for L2TP, only the <b>chap</b> statement itself is typically used for subscriber management. We recommend that you leave the subordinate statements at their default values.</p> </div> <p>.....</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the PPP Challenge Handshake Authentication Protocol on page 136</a></li> <li>• <a href="#">Applying PPP Attributes to L2TP LNS Subscribers with a User Group Profile</a></li> <li>• <a href="#">Applying PPP Attributes to L2TP LNS Subscribers per Inline Service Interface</a></li> </ul>

## chap-secret

---

**Syntax** `chap-secret chap-secret;`

**Hierarchy Level** [edit access profile *profile-name* client *client-name*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For interfaces with PPP encapsulation on which the PPP Challenge Handshake Authentication Protocol (CHAP) is configured, configure the shared secret (the CHAP secret key associated with a peer), as defined in RFC 1994.



**NOTE:** This statement is not supported for L2TP LNS on MX Series routers.

**Options** *chap-secret*—The secret key associated with a peer.

**Required Privilege Level**  
 admin—To view this statement in the configuration.  
 admin-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the CHAP Secret for an L2TP Profile](#)
- [Configuring PPP CHAP Authentication on page 196](#)
- [pap-password on page 854](#)
- [Junos OS Administration Library](#)

## circuit-type

---

<b>Syntax</b>	circuit-type;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication username-include</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication username-include</a> ],
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify that the circuit type is concatenated with the username during the subscriber authentication process.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring VLAN Interface Username Information for AAA Authentication</i></li></ul>

## cisco-interoperability

---

<b>Syntax</b>	cisco-interoperability send-lip-remove-link-for-link-reject;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.4.
<b>Description</b>	FRF.16 interoperability settings.
<b>Options</b>	<b>send-lip-remove-link-for-link-reject</b> —Send Link Integrity Protocol remove link when an add-link rejection message is received.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## classifier

<b>Syntax</b>	<pre> classifier {   per-unit-scheduler {     forwarding-class <i>class-name</i> {       loss-priority (high   low);     }   } } </pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> output-priority-map]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the classifier for the output priority map to be applied to outgoing frames on this interface.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Specifying an Output Priority Map</i></li> <li><a href="#">input-priority-map on page 677</a></li> </ul>

## clear-dont-fragment-bit

---

<b>Syntax</b>	clear-dont-fragment-bit;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Clear the don't-fragment (DF) bit on all IP version 4 (IPv4) packets entering a generic routing encapsulation (GRE) tunnel. If the encapsulated packet's size exceeds the tunnel's maximum transmission unit (MTU), the packet is fragmented before encapsulation. The statement is supported only on MX Series routers and all M Series routers except the M320 router.</p> <p>When you configure the <b>clear-dont-fragment-bit</b> statement on an interface with the MPLS protocol family enabled, you must specify an MTU value. This MTU value must not be greater than maximum supported value, which is 9192.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

---


## clock-rate

---

<b>Syntax</b>	<code>clock-rate rate;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces, configure the interface speed, in megahertz (MHz).
<b>Options</b>	<p><b>rate</b>—You can specify one of the following rates:</p> <ul style="list-style-type: none"><li>• 2.048 MHz</li><li>• 2.341 MHz</li><li>• 2.731 MHz</li><li>• 3.277 MHz</li><li>• 4.096 MHz</li><li>• 5.461 MHz</li><li>• 8.192 MHz</li><li>• 16.384 MHz</li></ul> <p><b>Default:</b> 16.384 MHz</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Serial Clocking Mode on page 342</a></li></ul>

## clocking

---

<b>Syntax</b>	<code>clocking (external [interface <i>interface-name</i> ]   internal);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. <b>interface</b> option added in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	For interfaces that can use various clock sources, configure the source of the transmit clock on each interface.  <div> <b>NOTE:</b> On Channelized SONET/SDH PICs, if you set the parent (or the master) controller clock to external, then you must set the child controller clocks to the default value—that is, internal.  For example, on the Channelized STM1 PIC, if the clock on the Channelized STM1 interface (which is the master controller) is set to external, then you must not configure the CE1 interface (which is the child controller) clock to external. Instead you must configure the CE1 interface clock to internal.</div>
<b>Options</b>	<b>external</b> —The clock source is provided by the data communication equipment (DCE).  <b>interface <i>interface-name</i></b> —Configure clocking for the drop-and insert feature. When configuring this feature, both ports must use the same clock source: either the router's internal clock or an external clock on one of the interfaces. If an external clock source is required, one interface must specify clocking external and the other must specify the same clock.  <b>internal</b> —Use the internal stratum 3 clock as the reference clock. <b>Default:</b> internal
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Clock Source on page 128</a></li><li>• <a href="#">Configuring the Clock Source on SONET/SDH Interfaces</a></li><li>• <a href="#">Clock Sources on Channelized Interfaces</a></li><li>• <a href="#">Configuring a Channelized T1/E1 Interface to Drop and Insert Time Slots</a></li><li>• <a href="#">loop-timing on page 751</a></li></ul>

---

## clocking-mode

---

<b>Syntax</b>	clocking-mode (dce   internal   loop);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces, configure the clock mode. You cannot configure <b>clocking-mode dce</b> on a DTE router using an X.21 serial line protocol (detected automatically when an X.21 cable is plugged into the serial interface).
<b>Options</b>	<b>dce</b> —DCE timing (DTE mode only, not valid for X.21).  <b>internal</b> —Internal baud timing.  <b>loop</b> —Loop timing. <b>Default:</b> loop
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Serial Clocking Mode on page 342</a></li></ul>

## community (Policy Options)

---

<b>Syntax</b>	<pre>community <i>name</i> {     invert-match;     members [ <i>community-ids</i> ]; }</pre>
<b>Hierarchy Level</b>	[edit dynamic policy-options], [edit logical-systems <i>logical-system-name</i> policy-options], [edit policy-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Support for configuration in the dynamic database introduced in Junos OS Release 9.5. Support for configuration in the dynamic database introduced in Junos OS Release 9.5 for EX Series switches. Support for BGP large community introduced in Junos OS Release 17.3 for MX Series, PTX Series, and QFX Series.
<b>Description</b>	Define a community, extended community or large community for use in a routing policy match condition.
<b>Options</b>	<p><b><i>name</i></b>—Name that identifies the regular expression. The name can contain letters, numbers, and hyphens (-) and can be up to 255 characters. To include spaces in the name, enclose it in quotation marks (" ").</p> <p><b><i>invert-match</i></b>—Invert the results of the community expression matching. The <b>community</b> match condition defines a regular expression and if it matches the community attribute of the received prefix, Junos OS returns a TRUE result. If not, Junos OS returns a FALSE result. The <b><i>invert-match</i></b> statement makes Junos OS behave to the contrary. If there is a match, Junos OS returns a FALSE result. If there is no match, Junos OS returns a TRUE result.</p> <p><b><i>members community-ids</i></b>—One or more community members. If you specify more than one member, you must enclose all members in brackets.</p> <p>The format for <b><i>community-ids</i></b> is:</p> <p><b><i>as-number:community-value</i></b></p> <p>Starting in Junos OS Release 15.1, you can apply a wildcard member <b><i>segmented-nh.*:0</i></b> to apply the BGP policy to all the S-PMSI A-D routes carrying extended community information.</p> <p><b><i>as-number</i></b> is the AS number and can be a value in the range from 0 through 65,535. <b><i>community-value</i></b> is the community identifier and can be a number in the range from 0 through 65,535.</p> <p>You also can specify <b><i>community-ids</i></b> for communities as one of the following well-known community names, which are defined in RFC 1997, <i>BGP Communities Attribute</i>:</p>

- **no-export**—Routes containing this community name are not advertised outside a BGP confederation boundary.
- **no-advertise**—Routes containing this community name are not advertised to other BGP peers.
- **no-export-subconfed**—Routes containing this community name are not advertised to external BGP peers, including peers in other members' ASs inside a BGP confederation.

You can explicitly exclude BGP community information with a static route using the **none** option. Include **none** when configuring an individual route in the **route** portion of the **static** statement to override a **community** option specified in the **defaults** portion of the statement.

The format for extended **community-ids** is the following:

*type:administrator:assigned-number*

**type** is the type of extended community and can be either a **bandwidth**, **target**, **origin**, **domain-id**, **src-as**, or **rt-import** community or a 16-bit number that identifies a specific BGP extended community. The **target** community identifies the destination to which the route is going. The **origin** community identifies where the route originated. The **domain-id** community identifies the OSPF domain from which the route originated. The **src-as** community identifies the autonomous system from which the route originated. The **rt-import** community identifies the route to install in the routing table.



**NOTE:** For **src-as**, you can specify only an AS number and not an IP address. For **rt-import**, you can specify only an IP address and not an AS number.

**administrator** is the administrator. It is either an AS number or an IPv4 address prefix, depending on the type of extended community.

**assigned-number** identifies the local provider.

The format for linking a bandwidth with an AS number is:

*bandwidth:as-number:bandwidth*

**as-number** specifies the AS number and **bandwidth** specifies the bandwidth in bytes per second.



**NOTE:** In Junos OS Release 9.1 and later, you can specify 4-byte AS numbers as defined in RFC 4893, *BGP Support for Four-octet AS Number Space*, as well as the 2-byte AS numbers that are supported in earlier releases of the Junos OS. In plain-number format, you can configure a value in the range from 1 through 4,294,967,295. To configure a target or origin extended community that includes a 4-byte AS number in the plain-number format, append the letter “L” to the end of number. For example, a target community with the 4-byte AS number 334,324 and an assigned number of 132 is represented as `target:334324L:132`.

In Junos OS Release 9.2 and later, you can also use AS-dot notation when defining a 4-byte AS number for the target and origin extended communities. Specify two integers joined by a period: *16-bit high-order value in decimal.16-bit low-order value in decimal*. For example, the 4-byte AS number represented in plain-number format as 65546 is represented in AS-dot notation as 1.10.

As defined in RFC 8092, BGP large community uses 12-byte encoding and the format for BGP large **community-ids** is:

`large: global-administrator:assigned-number:assigned-number`

**large** indicates BGP large community.



**global-administrator** is the administrator. It is a 4-byte AS number.

**assigned-number** is a 4-byte value used to identify the local provider. BGP large community uses two 4-byte assigned number to identify the local provider.

<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
---------------------------------	---

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Understanding BGP Communities, Extended Communities, and Large Communities as Routing Policy Match Conditions</i></li><li>• <i>Understanding How to Define BGP Communities and Extended Communities</i></li><li>• <i>dynamic-db</i></li></ul>
------------------------------	--

## compatibility-mode

<b>Syntax</b>	<code>compatibility-mode (adtran   digital-link   kentrox   larscom   verilink) &lt;subrate value&gt;;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> e3-options]</code> , <code>[edit interfaces <i>interface-name</i> t3-options]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the E3 or T3 interface to be compatible with the channel service unit (CSU) at the remote end of the line.
	<div>  <p><b>NOTE:</b> The <code>compatibility-mode</code> statement at the <code>[edit interfaces <i>interface-name</i> e3-options]</code> hierarchy level is not valid for IQE PICs.</p> </div>
<b>Default</b>	If you omit this option, the full E3 or T3 rate is used.
<b>Options</b>	<p><b>adtran</b>—For T3 IQ interfaces only, configure compatibility with Adtran CSUs.</p> <p><b>digital-link</b>—Configure compatibility with Digital Link CSUs. If you include this option on an E3 interface, you must also disable payload scrambling.</p> <p><b>kentrox</b>—Configure compatibility with Kentrox CSUs. Kentrox subrate is valid for E3 IQ and T3 IQ interfaces only.</p> <p><b>larscom</b>—For T3 and T3 IQ interfaces only, configure compatibility with Larscom CSUs.</p> <p><b>verilink</b>—For T3 IQ and T3 IQE interfaces only, configure compatibility with Verilink CSUs.</p>
	<div>  <p><b>NOTE:</b> Verilink configuration is not functional if an IQ interface is paired with an IQE interface.</p> </div>
	<p><b>subrate value</b>—Subrate of the E3 or T3 line.</p> <p><b>Range:</b> For Kentrox CSUs on E3 IQ interfaces and T3 IQ interfaces the subrate value must match the value configured on the CSU. Each increment of the subrate value corresponds to a rate increment of about 0.5 Mbps.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring the E3 CSU Compatibility Mode</i></li> </ul>

- [Configuring the T3 CSU Compatibility Mode](#)
- [payload-scrambler on page 824](#)

## compression (PPP Properties)

---

<b>Syntax</b>	<pre>compression {     acfc;     pfc; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">ppp-options</a> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">ppp-options</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">ppp-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For interfaces with PPP encapsulation, set Link Control Protocol (LCP) compression options.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring PPP Address and Control Field Compression on page 149</a></li><li>• <a href="#">Configuring the PPP Protocol Field Compression on page 151</a></li></ul>

## compression (Voice Services)

<b>Syntax</b>	<pre>compression {   rtp {     f-max-period <i>number</i>;     queues [ <i>queue-numbers</i> ];     port {       minimum <i>port-number</i>;       maximum <i>port-number</i>;     }   } }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the compression properties for voice services traffic.  The remaining statements are described separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## compression-device

<b>Syntax</b>	<code>compression-device <i>interface-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the compression interface for voice services traffic.
<b>Options</b>	<i>interface-name</i> —Logical interface used for compression.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## connections

---

<b>Syntax</b>	<pre>connections {     interface-switch connection-name {         interface interface-name.unit-number;         interface interface-name.unit-number;     } }</pre>
<b>Hierarchy Level</b>	[edit protocols]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Define the connection between two circuits in a circuit cross-connect (CCC) connection.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining the Connection for Switching Cross-Connects on page 281</a></li><li>• <i>MPLS Applications Feature Guide</i></li></ul>

## connection-protection-tlv

---

<b>Syntax</b>	<pre>connection-protection-tlv;</pre>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain domain-name maintenance-association ma-name <a href="#">continuity-check</a> ]
<b>Description</b>	<p>Includes connection protection OUI TLV in continuity check messages (CCM) .The TLV is responsible for carrying the flag information within CCM PDUs. Though this OUI TLV will be included in the CCM frames by provider edge devices, the value is updated by the provider routers in case the traffic to the other end of the network is forwarded by the facility protection tunnel .</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">connectivity-fault-management on page 495</a></li><li>• <i>Configuring MAC Flush Message Processing in CET Mode</i></li><li>• <i>Example: Configuring an Action Profile Based on Connection Protection TLVs</i></li></ul>

## connectivity-fault-management

```

Syntax  connectivity-fault-management {
        action-profile profile-name {
            action {
                interface-down;
                log-and-generate-ais {
                    interval(1m | 1s);
                    level value;
                    priority value;
                }
            }
        }
        default-actions {
            interface-down;
        }
        event {
            ais-trigger-condition {
                adjacency-loss;
                all-defects;
                cross-connect-ccm;
                erroneous-ccm;
                receive-ais;
            }
            adjacency-loss;
            interface-status-tlv (down | lower-layer-down);
            port-status-tlv blocked;
            rdi;
        }
    }
    linktrace {
        age (30m | 10m | 1m | 30s | 10s);
        path-database-size path-database-size;
    }
    maintenance-domain domain-name {
        bridge-domain <vlan-id [ vlan-ids ]>;
        instance routing-instance-name;
        interface interface-name;
        level number;
        name-format (character-string | none | dns | mac+2oct);
        maintenance-association ma-name {
            protect-maintenance-association protect-ma-name;
            remote-maintenance-association remote-ma-name;
            short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
            continuity-check {
                convey-loss-threshold;
                hold-interval minutes;
                interface-status-tlv;
                interval (10m | 10s | 1m | 1s | 100ms);
                loss-threshold number;
                port-status-tlv;
            }
            mep mep-id {
                auto-discovery;
                direction (up | down);
            }
        }
    }

```

```

interface interface-name (protect | working);
lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
    rem-err-xcon | xcon );
priority number;
remote-mep mep-id {
    action-profile profile-name;
    sla-iterator-profile profile-name {
        data-tlv-size size;
        iteration-count count-value;
        priority priority-value;
        detect-loc;
    }
}
}
virtual-switch routing-instance-name {
    bridge-domain name <vlan-ids [ vlan-ids ]>;
}
}
no-aggregate-delegate-processing;
performance-monitoring {
    delegate-server-processing;
    hardware-assisted-timestamping;
    hardware-assisted-keepalives;
    sla-iterator-profiles {
        profile-name {
            avg-fd-twoway-threshold;
            avg-ifdv-twoway-threshold;
            avg-flr-forward-threshold;
            avg-flr-backward-threshold;
            disable;
            calculation-weight {
                delay delay-weight;
                delay-variation delay-variation-weight;
            }
            cycle-time milliseconds;
            iteration-period connections;
            measurement-type (loss | statistical-frame-loss | two-way-delay);
        }
    }
}
}

```

**Hierarchy Level** [edit protocols [oam](#) [ethernet](#)]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** For Ethernet interfaces on M7i and M10i routers with Enhanced CFEB (CFEB-E), and on M120, M320, MX Series, and T Series routers, specify connectivity fault management for IEEE 802.1ag Operation, Administration, and Management (OAM) support. In Junos OS Release 9.3 and later, this statement is also supported on aggregated Ethernet interfaces.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation**

- *IEEE 802.1ag OAM Connectivity Fault Management Overview*

## container-devices

**Syntax**

```
container-devices {
  device-count number;
}
```

**Hierarchy Level** [edit chassis]

**Release Information** Statement introduced in Junos OS Release 9.2.

**Description** Specify the container devices configuration. The **number** option specifies the number of sequentially numbered container interfaces, from **ci0** to **ci127** maximum.

**Options** **number**—Number of container devices.  
**Range:** 1 through 128

**Required Privilege Level** chassis—To view this statement in the configuration.  
 chassis-control—To add this statement to the configuration.

**Related Documentation**

- *Displaying APS Using a Container Interface with ATM Encapsulation*
- *Configuring Container Interfaces for APS on SONET Links*

## container-list

---

<b>Syntax</b>	<code>container-list [ <i>container-interface-names</i> ];</code>
<b>Hierarchy Level</b>	[edit interfaces <a href="#">container-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2.
<b>Description</b>	Specify a list of container interfaces; for example: <code>ci0</code> , <code>ci1</code> , and up to <code>ci127</code> .
<b>Options</b>	<i>container-interface-names</i> —Name of each container interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i></li><li>• <i>Configuring Container Interfaces for APS on SONET Links</i></li><li>• <a href="#">container-options on page 499</a></li></ul>

## container-options

<b>Syntax</b>	<pre> container-options {   container-list [ container-interface-names ];   container-type aps;   member-interface-type sonet {     member-interface-speed [ speed ];   } } </pre>
<b>Hierarchy Level</b>	[edit interfaces]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2.
<b>Description</b>	Specify the container interface options.
<b>Options</b>	<p><b>interface-name</b>—Name of the SONET or the container interface.</p> <p><b>aps</b>—Specify the member link interface type of the container as APS.</p> <p><b>sonet</b>—Protocol type of the container interface.</p> <p><b>speed</b>—Set interface speed to OC3, OC12, OC48, OC192, OC768, or mixed.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i></li> <li>• <i>Configuring Container Interfaces for APS on SONET Links</i></li> </ul>

## container-type

---

<b>Syntax</b>	container-type <i>aps</i> ;
<b>Hierarchy Level</b>	[edit interfaces <a href="#">container-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2.
<b>Description</b>	Specify the container-options interface type.
<b>Options</b>	<b>aps</b> —Configure the interface type to be Automatic Protection Switching (APS).
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i></li><li>• <i>Configuring Container Interfaces for APS on SONET Links</i></li></ul>

## continuity-check

<b>Syntax</b>	<pre>continuity-check {   convey-loss-threshold;   hold-interval <i>minutes</i>;   interface-status-tlv;   interval (10m   10s   1m   1s  100ms   10ms);   loss-threshold <i>number</i>;   port-status-tlv; }</pre>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> <b>maintenance-association</b> <i>ma-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Specify continuity check protocol options.
<b>Options</b>	<p><b>convey-loss-threshold</b>—Enable loss-threshold-tlv transmission.</p> <p><b>hold-interval</b> <i>minutes</i>—Specify the continuity check hold-interval, in minutes.</p> <p><b>interface-status-tlv</b>—Enable interface-status-tlv transmission.</p> <p><b>interval</b> (<i>10m   10s   1m   1s  100ms   10ms</i>)—Specify the continuity check interval.</p> <p><b>loss-threshold</b> <i>minutes</i>—Specify the loss-threshold, in minutes.</p> <p><b>port-status-tlv</b>—Enable port-status-tlv transmission.</p>
<b>Required Privilege Level</b>	<p><b>interface</b>—To view this statement in the configuration.</p> <p><b>interface-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Continuity Check Protocol Parameters for Fault Detection</i></li> </ul>

## control-channel

---

<b>Syntax</b>	<code>control-channel <i>channel-name</i> {     vlan <i>vlan-id</i>;     interface name <i>interface-name</i> }</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">protection-group ethernet-ring name (east-interface   west-interface)</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.
<b>Description</b>	Configure the Ethernet RPS control channel logical interface to carry the RAPS PDU. The related physical interface is the physical ring port.
<b>Options</b>	<b>vlan <i>vlan-id</i></b> —If the control channel logical interface is a trunk port, then a dedicated <b>vlan <i>vlan-id</i></b> defines the dedicated VLAN channel to carry the RAPS traffic. Only configure the <b>vlan <i>vlan-id</i></b> when the control channel logical interface is the trunk port.  <b>interface name <i>interface-name</i></b> —Interface name of the control channel.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Ethernet Ring Protection Switching Overview</i></li><li>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i></li><li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li><li>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i></li></ul>

## control-polarity

<b>Syntax</b>	<code>control-polarity (negative   positive);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For X.21 interfaces only, configure the control signal polarity.
<b>Options</b>	<p><b>positive</b>—Positive signal polarity.</p> <p><b>negative</b>—Negative signal polarity.</p> <p><b>Default:</b> positive</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Serial Signal Polarities on page 347</a></li> </ul>

## control-signal

<b>Syntax</b>	<code>control-signal (assert   de-assert   normal);</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dce-options</a>],</p> <p>[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dte-options</a>]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For X.21 interfaces only, configure the to-DCE signal.
<b>Options</b>	<p><b>assert</b>—The to-DCE signal must be asserted.</p> <p><b>de-assert</b>—The to-DCE signal must be deasserted.</p> <p><b>normal</b>—Normal request-to-send (RTS) signal handling, as defined by ITU-T Recommendation X.21.</p> <p><b>Default:</b> normal</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li> </ul>

## copy-tos-to-outer-ip-header

---

<b>Syntax</b>	<code>copy-tos-to-outer-ip-header;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	For GRE tunnel interfaces only, enable the inner IP header's TOS bits to be copied to the outer IP packet header.
<b>Default</b>	If you omit this statement, the TOS bits in the outer IP header are set to 0.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i></li></ul>

## core-dump

---

<b>Syntax</b>	<code>(core-dump   no-core-dump);</code>
<b>Hierarchy Level</b>	[edit interfaces mo- <i>fpc/pic/port</i> <b>multiservice-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For monitoring services interfaces only, a useful tool for isolating the cause of a problem. Core dumping is enabled by default. The directory <b>/var/tmp</b> contains core files. The Junos OS saves the current core file (0) and the four previous core files, which are numbered 1 through 4 (from newest to oldest): <ul style="list-style-type: none"><li>• <b>core-dump</b>—Enable the core dumping operation.</li><li>• <b>no-core-dump</b>—Disable the core dumping operation.</li></ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Multiservice Physical Interface Properties on page 170</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## crc-major-alarm-threshold

<b>Syntax</b>	crc-major-alarm-threshold (1e-3   5e-4   1e-4   5e-5   1e-5);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> t1-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Major alarm error thresholds for T1 CRC errors. When the threshold is exceeded for one second, a defect condition is declared. If the defect condition continues for the monitoring period, an alarm condition is declared.
<b>Default</b>	10-second monitoring period for all settings except 1e-5. The 1e-5 value uses a 50-second monitoring period.
<b>Options</b>	<p>1e-3—Error rate expressed as the number of errors per number of bits. The value 1e-3 is one crc error in <math>10^3</math> bits.</p> <p>1e-4—Error rate expressed as the number of errors per number of bits. The value 1e-4 is one crc error in <math>10^4</math> bits.</p> <p>1e-5—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in <math>10^5</math> bits.</p> <p>5e-4—Error rate expressed as the number of errors per number of bits. The value 5e-4 is five crc errors in <math>10^4</math> bits.</p> <p>5e-5—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in <math>10^5</math> bits.</p> <p><b>Default: 5e-5</b></p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring T1 CRC Error Major Alarm Thresholds</li> </ul>

## crc-minor-alarm-threshold

---

<b>Syntax</b>	crc-minor-alarm-threshold (1e-3   5e-4   1e-4   5e-5   1e-5   5e-6   1e-6);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> t1-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Minor alarm error thresholds for T1 CRC errors. When the threshold is exceeded for one second, a defect condition is declared. If the defect condition continues for the monitoring period, an alarm condition is declared.
<b>Default</b>	10-second monitoring period for values 1e-3, 5e-4, 1e-4, and 5e-5. The 1e-5 value uses a 50-second monitoring period. The 5e-6 value uses a 100-second monitoring period. The 1e-6 value uses a 500-second monitoring period.
<b>Options</b>	<p>1e-3—Error rate expressed as the number of errors per number of bits. The value 1e-3 is one crc error in 10<sup>3</sup> bits.</p> <p>1e-4—Error rate expressed as the number of errors per number of bits. The value 1e-4 is one crc error in 10<sup>4</sup> bits.</p> <p>1e-5—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in 10<sup>5</sup> bits.</p> <p>1e-6—Error rate expressed as the number of errors per number of bits. The value 1e-5 is one crc error in 10<sup>6</sup> bits.</p> <p>5e-4—Error rate expressed as the number of errors per number of bits. The value 5e-4 is five crc errors in 10<sup>4</sup> bits.</p> <p>5e-5—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in 10<sup>5</sup> bits.</p> <p>5e-6—Error rate expressed as the number of errors per number of bits. The value 5e-5 is five crc errors in 10<sup>6</sup> bits.</p> <p><b>Default: 5e-6</b></p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Configuring T1 CRC Error Minor Alarm Thresholds</li></ul>

## cts

<b>Syntax</b>	cts (ignore   normal   require);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dce-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dte-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, clear-to-send (CTS).
<b>Options</b>	<p><b>ignore</b>—The from-DCE signal is ignored.</p> <p><b>normal</b>—Normal CTS signal handling as defined by the TIA/EIA Standard 530.</p> <p><b>require</b>—The from-DCE signal must be asserted.</p> <p><b>Default:</b> normal</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li> </ul>

## cts-polarity


<b>Syntax</b>	cts-polarity (negative   positive);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure CTS signal polarity.
<b>Options</b>	<p><b>positive</b>—Positive signal polarity.</p> <p><b>negative</b>—Negative signal polarity.</p> <p><b>Default:</b> positive</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Serial Signal Polarities on page 347</a></li> </ul>

## cycle-time

---

<b>Syntax</b>	<code>cycle-time cycle-time-value;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management performance-monitoring sla-iterator-profiles</a> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1. Statement introduced in Junos OS Release 11.4 for EX Series switches.
<b>Description</b>	Configure the time (in milliseconds) taken between back-to-back transmissions of SLA frames for a single connection.
<b>Options</b>	<b><i>cycle-time-value</i></b> —Cycle time value in milliseconds. <b>Range:</b> 10 through 3,600,000 <b>Default:</b> 1000
<b>Required Privilege Level</b>	Configure—To enter configuration mode. Control—To modify any configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring an Iterator Profile</i></li><li>• <i>Configuring an Iterator Profile on a Switch (CLI Procedure)</i></li></ul>

## damping (Interfaces)

<b>Syntax</b>	<pre>damping {   enable;   half-life <i>seconds</i>;   max-suppress <i>seconds</i>;   reuse <i>number</i>;   suppress <i>number</i>; }</pre>
<b>Hierarchy Level</b>	<pre>[edit interfaces <i>interface--name</i>], [edit interfaces <i>interface--range</i>]</pre>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 14.1 for PTX Series Packet Transport Routers and T Series Core Routers.</p> <p>Statement introduced in Junos OS Release 14.2 for MX960, MX480, MX240, and MX80 Universal Routing Platforms and M10i Multiservice Edge Routers.</p>
<b>Description</b>	<p>Limit the number of advertisements of the up and down transitions (flapping) on an interface. Each time a transition occurs, the interface state is changed, which generates an advertisement to the upper-level routing protocols. Damping helps reduce the number of these advertisements. Every time an interface goes down, a penalty is added to the interface penalty counter. Penalty added on every interface flap is 1000.</p> <p>If at some point the accumulated penalty exceeds the suppress level <b>max-suppress</b>, the interface is placed in the suppress state, and further interface state up and down transitions are not reported to the upper-level protocols.</p>
<b>Options</b>	<p><b>enable</b>—Enable damping on a per-interface basis. If damping is enabled on an interface, it is suppressed during interface flaps that match the configuration settings.</p> <p><b>Default:</b> Disabled</p> <p><b>half-life <i>seconds</i></b>—Decay half-life. <i>seconds</i> is the interval after which the accumulated interface penalty counter is reduced by half if the interface remains stable.</p> <hr/> <div style="display: flex; align-items: flex-start;"> <div style="margin-right: 10px;">  </div> <div> <p><b>NOTE:</b> For the half-life, configure a value that is less than the max-suppress value. If you do not, the configuration is rejected.</p> </div> </div> <hr/> <p><b>Range:</b> 1 through 30</p> <p><b>Default:</b> 5</p> <p><b>max-suppress <i>seconds</i></b>—Maximum hold-down time. <i>seconds</i> is the maximum time that an interface can be suppressed no matter how unstable the interface has been.</p>



**NOTE:** For max-suppress, configure a value that is greater than the half-life. If you do not, the configuration is rejected.

**Range:** 1 through 20,000

**Default:** 20

**reuse *number***—Reuse threshold. When the accumulated interface penalty counter falls below *number*, the interface is no longer suppressed.

**Range:** 1 through 20,000

**Default:** 1000

**suppress *number***—Cutoff (suppression) threshold. When the accumulated interface penalty counter exceeds *number*, the interface is suppressed.

**Range:** 1 through 20,000

**Default:** 2000

<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
---------------------------------	---


<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Physical Interface Damping Overview on page 159</a></li><li>• <a href="#">Damping Shorter Physical Interface Transitions on page 165</a></li><li>• <a href="#">Damping Longer Physical Interface Transitions on page 166</a></li><li>• <a href="#">show interfaces extensive on page 1559</a></li><li>• <a href="#">hold-time on page 644</a></li></ul>
------------------------------	---

## data-channel

<b>Syntax</b>	data-channel { vlan <i>number</i> ; }
<b>Hierarchy Level</b>	[edit protocols <a href="#">protection-group ethernet-ring</a> <i>ring-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.
<b>Description</b>	For Ethernet ring protection, configure a data channel to define a set of VLAN IDs that belong to a ring instance.  VLANs specified in the data channel use the same topology used by the ERPS PDU in the control channel. Therefore, if a ring interface is blocked in the control channel, all traffic in the data channel is also blocked on that interface.
<b>Options</b>	<b>vlan <i>number</i></b> —Specify (by VLAN ID) one or more VLANs that belong to a ring instance.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Ring Protection Using Ring Instances for Load Balancing</i></li> <li>• <i>Example: Configuring Load Balancing Within Ethernet Ring Protection for MX Series Routers</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li> <li>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i></li> </ul>

## data-tlv-size

---

Syntax	<code>data-tlv-size size;</code>
Hierarchy Level	[edit protocols <a href="#">oam ethernet connectivity-fault-management maintenance-domain md-name maintenance-association ma-name mep mep-id remote-mep remote-mep-id sla-iterator-profile profile-name</a> ]
Release Information	Statement introduced in Junos OS Release 11.1.
Description	Configure the size of the data TLV portion of the Y.1731 data frame.
Options	<b>size</b> —Size of the data TLV portion of the Y.1731 data frame.
<div> <b>NOTE:</b> This option is applicable only for two-way delay measurement.</div>	
<b>Range:</b> 1 through 1400 bytes	
<b>Default:</b> 1	
Required Privilege Level	Configure—To enter configuration mode. Control—To modify any configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">sla-iterator-profile on page 970</a></li><li>• <i>Configuring a Remote MEP with an Iterator Profile</i></li></ul>

## dcd

---

<b>Syntax</b>	dcd (ignore   normal   require);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options dce-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options dte-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, data-carrier-detect (DCD).
<b>Options</b>	<p><b>ignore</b>—The from-DCE signal is ignored.</p> <p><b>normal</b>—Normal DCD signal handling as defined by the TIA/EIA Standard 530.</p> <p><b>require</b>—The from-DCE signal must be asserted.</p> <p><b>Default:</b> normal</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li> </ul>

## dcd-polarity

---

<b>Syntax</b>	dcd-polarity (negative   positive);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure DCD signal polarity.
<b>Options</b>	<p><b>positive</b>—Positive signal polarity.</p> <p><b>negative</b>—Negative signal polarity.</p> <p><b>Default:</b> positive</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Serial Signal Polarities on page 347</a></li> </ul>

## dce

---

<b>Syntax</b>	dce;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options clocking-mode</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For Frame Relay only, respond to status enquiry message keepalives.  When you configure the router to be a DCE, keepalives are disabled by default.
<b>Default</b>	The router operates in DTE mode.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Router as a DCE with Frame Relay Encapsulation on page 154</a></li></ul>

## deactivation-delay

---

<b>Syntax</b>	deactivation-delay <i>seconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>dl</i> unit <i>logical-unit-number</i> <a href="#">dialer-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	On J Series Services Routers with ISDN interfaces, configure the ISDN deactivation delay. Used only for dialer backup and dialer watch cases.
<b>Options</b>	<b><i>seconds</i></b> —Interval before the backup interface is deactivated after the primary interface has comes up. <b>Range:</b> 1 through 4,294,967,295 seconds <b>Default:</b> 0 (zero)
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Junos OS Interfaces and Routing Configuration Guide</a></li></ul>

## dce-options

<b>Syntax</b>	<pre> dce-options {   control-signal (assert   de-assert   normal);   cts (ignore   normal   require);   dcd (ignore   normal   require);   dsr (ignore   normal   require);   dtr signal-handling-option;   ignore-all;   indication (ignore   normal   require);   rts (assert   de-assert   normal);   tm (ignore   normal   require); } </pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>serial-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3. Statement previously known as <b>control-leads</b> .
<b>Description</b>	<p>For J Series Services Routers, configure the serial interface signal characteristics.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li> </ul>

## default-actions

---

<b>Syntax</b>	<code>default-actions {     interface-down; }</code>
<b>Hierarchy Level</b>	[edit protocols oam ethernet <a href="#">connectivity-fault-management action-profile</a> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Define the action to be taken when connectivity to the remote MEP is lost.
<b>Default</b>	If no action is configured, no action is taken.
<b>Options</b>	<b>interface-down</b> —When a remote MEP connectivity failure is detected, bring the interface down.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a CFM Action Profile to Specify CFM Actions for CFM Events</i></li></ul>

## default-chap-secret

<b>Syntax</b>	<code>default-chap-secret name;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> ppp-options <a href="#">chap</a>],          [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options <a href="#">chap</a>],          [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ppp-options <a href="#">chap</a>]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.0.
<b>Description</b>	<p>Define the default CHAP secret to be used when no matching CHAP access profile exists.</p> <p>For ATM2 IQ interfaces only, you can configure a default CHAP secret on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"> <li>• <b>atm-ppp-llc</b>—PPP over AAL5 LLC encapsulation.</li> <li>• <b>atm-ppp-vc-mux</b>—PPP over AAL5 multiplex encapsulation.</li> </ul>
<b>Default</b>	If you do not include the <b>default-chap-secret</b> statement in the configuration, and an interface receives a CHAP challenge or response from a peer that is not in the applied access profile, the link is immediately dropped.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring a Default CHAP Secret</i></li> <li>• <a href="#">access-profile on page 412</a></li> </ul>

## default-pap-password

---


<b>Syntax</b>	<code>default-pap-password <i>password</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">ppp-options pap</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">ppp-options pap</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	For PAP authentication, the default PAP password.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring a Default PAP Password</a></li><li>• <a href="#">access-profile on page 412</a></li></ul>

## delimiter

---

<b>Syntax</b>	<code>delimiter <i>delimiter-character</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication username-include</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication username-include</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify the character used as the delimiter between the concatenated components of the username. You cannot use the semicolon (;) as a delimiter.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring VLAN Interface Username Information for AAA Authentication</a></li></ul>

## demux-destination (Underlying Interface)

<b>Syntax</b>	<code>demux-destination <i>family</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
<b>Description</b>	Configure the logical demultiplexing (demux) destination family type on the IP demux underlying interface.
<div>  <p><b>NOTE:</b> The IP demux interface feature currently supports only Fast Ethernet, Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.</p> </div>	
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li> <li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li> </ul>

## demux-destination (Demux Interface)

---

<b>Syntax</b>	<code>demux-destination {     <i>destination-prefix</i>; }</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
<b>Description</b>	Configure one or more logical demultiplexing (demux) destination prefixes. The prefixes are matched against the destination address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li><li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li></ul>

## demux-options (Static Interface)


<b>Syntax</b>	demux-options { underlying-interface <i>interface-name</i> }
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0.
<b>Description</b>	Configure logical demultiplexing (demux) interface options.  The remaining statement is explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li> <li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li> </ul>

## demux-source (Demux Interface)

<b>Syntax</b>	demux-source { source-prefix; }
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
<b>Description</b>	Configure one or more logical demultiplexing (demux) source prefixes. The prefixes are matched against the source address of packets that the underlying interface receives. When a match occurs, the packet is processed as if it was received on the demux interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li> <li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li> </ul>

## demux-source (Underlying Interface)

---

<b>Syntax</b>	<code>demux-source <i>family</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces</code> <code>  <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0. Support for aggregated Ethernet added in Junos OS Release 9.4.
<b>Description</b>	Configure the logical demultiplexing (demux) source family type on the IP demux underlying interface.
<div> <b>NOTE:</b> The IP demux interface feature currently supports only Fast Ethernet, Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet underlying interfaces.</div>	
<b>Options</b>	<i>family</i> —Protocol family: <ul style="list-style-type: none"><li>• <b>inet</b>—Internet Protocol version 4 suite</li><li>• <b>inet6</b>—Internet Protocol version 6 suite</li></ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li><li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li></ul>

## demux0 (Static Interface)

<b>Syntax</b>	<pre> demux0 {     unit <i>logical-unit-number</i> {         demux-options {             underlying-interface <i>interface-name</i>         }         family <i>family</i> {             access-concentrator <i>name</i>;             {                 destination-prefix;             }             direct-connect;             duplicate-protection;             dynamic-profile <i>profile-name</i>;             {                 source-prefix;             }             max-sessions <i>number</i>;             service-name-table <i>table-name</i>             targeted-distribution;             unnumbered-address <i>interface-name</i> &lt;preferred-source-address <i>address</i>&gt;;         }         vlan-id <i>number</i>;         vlan-tags outer [<i>tpid</i>].<i>vlan-id</i> [inner [<i>tpid</i>].<i>vlan-id</i>];     } } </pre>
<b>Hierarchy Level</b>	<p>[edit interfaces],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0.
<b>Description</b>	<p>Configure the logical demultiplexing (demux) interface.</p> <p>Logical IP demux interfaces do not support IPv4 and IPv6 dual stack.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li> <li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li> </ul>

## demux0 (Dynamic Interface)

```
Syntax  demux0 {
        unit logical-unit-number {
            demux-options {
                underlying-interface interface-name
            }
            family family {
                access-concentrator name;
                address address;
                demux-source {
                    source-prefix;
                }
                direct-connect;
                duplicate-protection;
                dynamic-profile profile-name;
                filter {
                    input filter-name;
                    output filter-name;
                }
                mac-validate (loose | strict);
                max-sessions number;
                max-sessions-vsa-ignore;
                rpf-check {
                    fail-filter filter-name;
                    mode loose;
                }
                service-name-table table-name
                short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
                    maximum-seconds>;
                unnumbered-address interface-name <preferred-source-address address>;
            }
            filter {
                input filter-name;
                output filter-name;
            }
            vlan-id number;
        }
    }
```

**Hierarchy Level** [edit [dynamic-profiles](#) *profile-name* [interfaces](#)]

**Release Information** Statement introduced in Junos OS Release 9.3.

**Description** Configure the logical demultiplexing (demux) interface in a dynamic profile.

Logical IP demux interfaces do not support IPv4 and IPv6 dual stack.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege** interface—To view this statement in the configuration.

**Level** interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring Dynamic Subscriber Interfaces Using IP Demux Interfaces in Dynamic Profiles*
  - [Demultiplexing Interface Overview on page 313](#)

## description (Interfaces)

---

<b>Syntax</b>	<code>description text;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Provide a textual description of the interface or the logical unit. Any descriptive text you include is displayed in the output of the <b>show interfaces</b> commands, and is also exposed in the <b>ifAlias</b> Management Information Base (MIB) object. It has no effect on the operation of the interface on the router or switch.</p> <p>The textual description can also be included in the extended DHCP relay option 82 Agent Circuit ID suboption.</p>
<b>Options</b>	<b>text</b> —Text to describe the interface. If the text includes spaces, enclose the entire text in quotation marks.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Interface Description on page 113</a></li><li>• <a href="#">Adding a Logical Unit Description to the Configuration on page 188</a></li><li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li><li>• <i>Configuring Gigabit and 10-Gigabit Ethernet Interfaces for OCX Series Switches</i></li><li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure) for EX Series Switches with ELS support</i></li><li>• <i>Configuring Gigabit and 10-Gigabit Ethernet Interfaces for EX4600 and QFX Series Switches</i></li><li>• <i>Using DHCP Relay Agent Option 82 Information</i></li><li>• <i>Junos OS Network Interfaces Library for Routing Devices</i></li><li>• <i>Example: Connecting Access Switches with ELS Support to a Distribution Switch with ELS Support</i></li></ul>

## destination (IPCP)

---

<b>Syntax</b>	<code>destination address <a href="#">destination-profile</a> <i>profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For unnumbered interfaces with PPP encapsulation, specify the IP address of the remote interface.
<b>Options</b>	<b><i>address</i></b> —IP address of the remote interface.  The remaining statement is explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring IPCP Options for Interfaces with PPP Encapsulation on page 216</a></li> <li>• <a href="#">address on page 424</a></li> <li>• <a href="#">negotiate-address on page 806</a></li> <li>• <i>Junos OS Administration Library</i></li> </ul>

## destination (Routing Instance)

---

<b>Syntax</b>	<code>destination <i>routing-instance-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> tunnel routing-instance], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> tunnel routing-instance]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the destination routing instance that points to the routing table containing the tunnel destination address.
<b>Default</b>	The default Internet routing table <b>inet.0</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## destination (Tunnels)

<b>Syntax</b>	<code>destination address;</code>
<b>Hierarchy Level</b>	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <i>family</i> inet address <i>address</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <i>family</i> inet <i>unnumbered-address</i> <i>interface-name</i>], [edit interfaces <i>interface-name</i> <i>unit</i> <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <i>family</i> inet address <i>address</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <i>family</i> inet <i>unnumbered-address</i> <i>interface-name</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <i>unit</i> <i>logical-unit-number</i> tunnel]</pre>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	For encrypted, PPP-encapsulated, and tunnel interfaces, specify the remote address of the connection.
<b>Options</b>	<b><i>address</i></b> —Address of the remote side of the connection.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Interface Address on page 207</a></li> <li>• <a href="#">Configuring Generic Routing Encapsulation Tunneling (CLI Procedure)</a></li> <li>• <a href="#">Junos OS Services Interfaces Library for Routing Devices</a></li> </ul>

## destination-class-usage

---

<b>Syntax</b>	<code>destination-class-usage;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> inet <b>accounting</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet <b>accounting</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Enable packet counters on an interface that count packets that arrive from specific customers and are destined for specific prefixes on the provider core router.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Enabling Source Class and Destination Class Usage on page 262</a></li><li>• <a href="#">accounting on page 413</a></li><li>• <a href="#">source-class-usage on page 978</a></li></ul>

## destination-profile

<b>Syntax</b>	<code>destination-profile <i>name</i>;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i> destination <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet unnumbered-address <i>interface-name</i> destination <i>address</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
<b>Description</b>	For interfaces with PPP encapsulation, assign PPP properties to the remote destination end. You define the profile at the [edit access group-profile <i>name</i> ppp] hierarchy level.
<b>Options</b>	<i>name</i> —Profile name defined at the [edit access group-profile <i>name</i> ppp] hierarchy level.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring IPCP Options for Interfaces with PPP Encapsulation on page 216</a></li> <li>• <a href="#">destination (IPCP) on page 527</a></li> <li>• <i>Junos OS Administration Library</i></li> </ul>

## dial-options

---

<b>Syntax</b>	<pre>dial-options {     ipsec-interface-id <i>name</i>;     l2tp-interface-id <i>name</i>;     (shared   dedicated); }</pre>
<b>Hierarchy Level</b>	<pre>[edit interfaces sp-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit interfaces si-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces sp-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces si-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>]</pre>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. The <b>[edit ...si-...]</b> hierarchy levels introduced in Junos OS Release 11.4.
<b>Description</b>	Specify the options for configuring logical interfaces for group and user sessions in L2TP or IPsec dynamic endpoint tunneling.
<b>Options</b>	<p><b>dedicated</b>—(LNS on M Series routers and MX Series routers only) Specify that a logical interface can host only one session at a time.</p> <p><b>ipsec-interface-id <i>name</i></b>—(M Series routers only) Interface identifier for group of dynamic peers. This identifier must be replicated at the <b>[edit access profile <i>name</i> client * ike]</b> hierarchy level.</p> <p><b>l2tp-interface-id <i>name</i></b>—Interface identifier that must be replicated at the <b>[edit access profile <i>name</i>]</b> hierarchy level.</p> <p><b>shared</b>—(LNS on M Series routers only) Specify that a logical interface can host multiple (shared) sessions at a time.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the Identifier for Logical Interfaces that Provide L2TP Services</i></li><li>• <i>Configuring Dynamic Endpoints for IPsec Tunnels</i></li><li>• <i>Configuring Options for the LNS Inline Services Logical Interface</i></li></ul>

## dial-string

<b>Syntax</b>	<code>dial-string [ <i>dial-string-numbers</i> ];</code>
<b>Hierarchy Level</b>	[edit interfaces <i>br-pim</i> /0/ <i>port</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>br-pim</i> /0/ <i>port</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	On J Series Services Routers with ISDN interfaces, specify one or more ISDN dial strings used to reach a destination subnetwork.
<b>Options</b>	<b><i>dial-string-numbers</i></b> —One or more strings of numbers to call.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	None

## dialer

<b>Syntax</b>	<code>dialer <i>filter-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> family <i>family</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> family <i>family</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Apply a dialer filter to an interface. To create the dialer filter, include the <b>dialer-filter</b> statement at the [edit firewall filter family <i>family</i> ] hierarchy level.
<b>Options</b>	<b><i>filter-name</i></b> —Dialer filter name.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## dialer-options

---

<b>Syntax</b>	<pre>dialer-options {   activation-delay seconds;   callback;   callback-wait-period time;   deactivation-delay seconds;   dial-string [ dial-string-numbers ];   idle-timeout seconds;   incoming-map {     caller caller-number   accept-all;     initial-route-check seconds;     load-interval seconds;     load-threshold percent;     pool pool-name;     redial-delay time;     watch-list {       [ routes ];     }   } }</pre>
<b>Hierarchy Level</b>	<pre>[edit interfaces umd0], [edit interfaces dln unit logical-unit-number], [edit logical-systems logical-system-name interfaces dln unit logical-unit-number]</pre>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Specify the dialer options for configuring logical interfaces for group and user sessions.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

---

## dialin

---

<b>Syntax</b>	dialin (console   routable);
<b>Hierarchy Level</b>	[edit interfaces umd0 modem-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	For J Series Services Routers, configure a USB modem port to act as a dial-in console or WAN backup port.
<b>Options</b>	<b>console</b> —Configure the USB modem port to operate as a dial-in console for management. <b>routable</b> —Configure the USB modem port to operate as a dial-in WAN backup interface. <b>Default:</b> console
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Specifying a USB Modem Interface on J Series Routers on page 350</a></li></ul>

## direction

---

<b>Syntax</b>	direction (up   down);
<b>Hierarchy Level</b>	[edit protocols <b>oam ethernet connectivity-fault-management</b> maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> <b>mep</b> <i>mep-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Configure the direction of the MEP.
<b>Options</b>	<b>up</b> —An UP MEP CCM is transmitted out of every logical interface which is part of the same bridging or vpls instance except for the interface configured on this MEP.



**NOTE:** The up direction for MEP is not supported on T Series routers.

---

**down**—Down MEP CCMs are transmitted only out the interface configured on this MEP.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i></li><li>• <i>IEEE 802.1ag OAM Connectivity Fault Management Overview</i></li></ul>

## disable (Interface)

<b>Syntax</b>	<code>disable;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	Disable a physical or a logical interface, effectively unconfiguring it.



### CAUTION:

- Dynamic subscribers and logical interfaces use physical interfaces for connection to the network. The Junos OS allows you to set the interface to disable and commit the change while dynamic subscribers and logical interfaces are still active. This action results in the loss of all subscriber connections on the interface. Use care when disabling interfaces.
- If aggregated SONET links are configured between a T1600 router and a T4000 router, interface traffic is disrupted when you disable the physical interface configured on the T1600 router. If you want to remove the interface, we recommend that you deactivate the interface instead of disabling it.



### NOTE:

- When you use the `disable` statement at the `[edit interfaces]` hierarchy level, depending on the PIC type, the interface might or might not turn off the laser. Older PIC transceivers do not support turning off the laser, but newer Gigabit Ethernet (GE) PICs with SFP and XFP transceivers and ATM MIC with SFP do support it and the laser will be turned off when the interface is disabled. If the ATM MIC with SFP is part of an APS group, then the laser will not be turned off when you use the `disable` statement at the `[edit interfaces]` hierarchy level..
- When you disable or deactivate an interface, then all the references made to the deactivated interface must be removed from the routing instance.
- For abstracted fabric interfaces, the `disable` command disables AF interface on the local GNF only.



**WARNING:** Do not stare into the laser beam or view it directly with optical instruments even if the interface has been disabled.

---

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Disabling a Physical Interface on page 174](#)
- [Disabling a Logical Interface on page 201](#)

---

## disable (Link Protection)

---

**Syntax** disable;

**Hierarchy Level** [edit interfaces aeX aggregated-ether-options lacp link-protection]

**Release Information** Statement introduced in Junos OS Release 9.3.  
Statement introduced in Junos OS Release 11.4 for EX Series switches.  
Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.

**Description** Disable LACP link protection on the interface.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring LACP for Aggregated Ethernet Interfaces*
- *Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches*

---

## disable-mlppp-inner-ppp-pfc

---

<b>Syntax</b>	disable-mlppp-inner-ppp-pfc;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	For MLPPP interfaces only, disable compression of the inner PPP header in the MLPPP payload. By default, compression is enabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## dlci

---

<b>Syntax</b>	<code>dlci <i>dlci-identifier</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Starting with Junos OS Release 18.2R1, the SRX Series devices support frame-relay encapsulation and adds DLCI information to the given frame.
<b>Description</b>	<p>For Frame Relay and Multilink Frame Relay (MLFR) user-to-network interface (UNI) network-to-network interface (NNI) encapsulation only, and for link services, voice services and point-to-point interfaces only, configure the data-link connection identifier (DLCI) for a permanent virtual circuit (PVC) or an switched virtual circuit (SVC). The DLCI setups a frame-relay PVC to form a L2 point-to-point connection. This is used for peering different LT IFL pairs.</p> <p>To configure a DLCI for a point-to-multipoint interface, use the <b>multipoint-destination</b> statement to specify the DLCI.</p>
<b>Options</b>	<p><b><i>dlci-identifier</i></b>—Data-link connection identifier.</p> <p><b>Range:</b> 16 through 1022.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Data-Link Connection Identifiers on Channelized Interfaces</i></li><li>• <i>Configuring Frame Relay DLCIs</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">encapsulation (Logical Interface) on page 573</a></li><li>• <a href="#">multicast-dlci on page 791</a></li><li>• <a href="#">multipoint-destination on page 795</a></li></ul>

## do-not-fragment

---

<b>Syntax</b>	do-not-fragment;
<b>Hierarchy Level</b>	[edit interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i> tunnel]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.
<b>Description</b>	For a generic routing encapsulation (GRE) tunnel, disable fragmentation of GRE-encapsulated packets. This sets the do-not-fragment (DF) bit in the outer IP header of the GRE-encapsulated packets so that they do not get fragmented anywhere in the path. When the size of a GRE-encapsulated packet is greater than the MTU of a link that the packet passes through, the GRE-encapsulated packet is dropped.
<b>Default</b>	By default, fragmentation of GRE-encapsulated packets is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">allow-fragmentation on page 436</a></li> <li>• <i>reassemble-packets</i></li> <li>• <i>Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation</i></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## domain-name

---

<b>Syntax</b>	<code>domain-name <i>domain-name-string</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication username-include</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication username-include</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify the domain name that is concatenated with the username during the subscriber authentication process.
<b>Options</b>	<i>domain-name-string</i> —The domain name formatted string.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring VLAN Interface Username Information for AAA Authentication</a></li></ul>

## dot1x

<b>Syntax</b>	<pre>dot1x {   authenticator {     authentication-profile-name <i>access-profile-name</i>;     interface <i>interface-id</i> {       maximum-requests <i>integer</i>;       quiet-period <i>seconds</i>;       reauthentication (<i>disable</i>   <i>interval seconds</i>);       retries <i>integer</i>;       server-timeout <i>seconds</i>;       supplicant (<i>single</i>);       supplicant-timeout <i>seconds</i>;       transmit-period <i>seconds</i>;     }   } }</pre>
<b>Hierarchy Level</b>	[edit protocols]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	<p>For the MX Series only, specifies settings for using 802.1x Port-Based Network Access Control.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li> <li>• <a href="#">authenticator on page 448</a></li> <li>• <a href="#">authentication-profile-name on page 447</a></li> <li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li> </ul>

## down-count

---

<b>Syntax</b>	<code>down-count <i>cells</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> <b>oam-liveness</b>],</code> <code>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>oam-liveness</b>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>address</b> <i>address</i></code> <code>    multipoint-destination <i>address</i> <b>oam-liveness</b>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i></code> <code>    <b>oam-liveness</b>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>    <b>family</b> <i>family</i> <b>address</b> <i>address</i> multipoint-destination <i>address</i> <b>oam-liveness</b>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For ATM encapsulation only, configure Operation, Administration, and Maintenance (OAM) F5 loopback cell count thresholds. This feature is not supported on ATM-over-SHDSL interfaces.</p> <p>For ATM2 IQ PICs only, configure OAM F4 loopback cell count thresholds at the <code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>]</code> hierarchy level.</p>
<b>Options</b>	<p><b>cells</b>—Minimum number of consecutive OAM F4 or F5 loopback cells lost before a VC is declared down.</p> <p><b>Range:</b> 1 through 255</p> <p><b>Default:</b> 5 cells</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the ATM OAM F5 Loopback Cell Threshold</i></li></ul>

## drop (PPPoE Service Name Tables)

<b>Syntax</b>	drop;
<b>Hierarchy Level</b>	[edit protocols pppoe service-name-tables <i>table-name</i> <b>service</b> <i>service-name</i> ], [edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> <b>agent-specifier</b> <i>aci circuit-id-string ari remote-id-string</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0. Support at [edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> <b>agent-specifier</b> <i>aci circuit-id-string ari remote-id-string</i> ] hierarchy level introduced in Junos OS Release 10.2.
<b>Description</b>	Direct the router to drop (ignore) a PPPoE Active Discovery Initiation (PADI) control packet received from a PPPoE client that contains the specified service name tag or agent circuit identifier/agent remote identifier (ACI/ARI) information. This action effectively denies the client's request to provide the specified service, or to accept requests from the subscriber or subscribers represented by the ACI/ARI information.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring PPPoE Service Name Tables</i></li> </ul>

## drop-timeout

---

<b>Syntax</b>	<code>drop-timeout <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">mlfr-uni-nni-bundle-options</a> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services, multilink, and voice services interfaces only, configure the drop timeout period, in milliseconds.
<b>Options</b>	<i>milliseconds</i> —Drop timeout period. <b>Range:</b> 0 through 2000 milliseconds <b>Default:</b> 0 ms (disabled)
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## ds0-options

<b>Syntax</b>	<pre>ds0-options {   bert-algorithm <i>algorithm</i>;   bert-error-rate <i>rate</i>;   bert-period <i>seconds</i>;   byte-encoding (nx56   nx64);   fcs (16   32);   idle-cycle-flag (flags   ones);   invert-data;   loopback <i>payload</i>;   start-end-flag (filler   shared); }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure DS0-specific physical interface properties.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Channelized DS3-to-DS0 Interfaces</i></li> </ul>

## dsl-options

---

**Syntax**    `dsl-options {  
              loopback local;  
              operating-mode mode;  
          }`

**Hierarchy Level**    [edit interfaces at-*fpc/pic/port*]

**Release Information**    Statement introduced before Junos OS Release 7.4.

**Description**    For J Series Services Routers only, modify the properties of the digital subscriber line for an ATM interface.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**

- *ATM-over-ADSL Overview*
- *Junos OS Interfaces and Routing Configuration Guide*

## dsr

---

<b>Syntax</b>	<code>dsr (ignore   normal   require);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options dce-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options dte-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, data-set-ready (DSR).
<b>Options</b>	<p><b>ignore</b>—The from-DCE signal is ignored.</p> <p><b>normal</b>—Normal DSR signal handling as defined by the TIA/EIA Standard 530.</p> <p><b>require</b>—The from-DCE signal must be asserted.</p> <p><b>Default:</b> normal</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li> </ul>

## dsr-polarity

---

<b>Syntax</b>	<code>dsr-polarity (negative   positive);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure DSR signal polarity.
<b>Options</b>	<p><b>positive</b>—Positive signal polarity.</p> <p><b>negative</b>—Negative signal polarity.</p> <p><b>Default:</b> positive</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Serial Signal Polarities on page 347</a></li> </ul>

## dte-options

---

**Syntax**    `dte-options {`  
              `control-signal (assert | de-assert | normal);`  
              `cts (ignore | normal | require);`  
              `dcd (ignore | normal | require);`  
              `dsr (ignore | normal | require);`  
              `dtr signal-handling-option;`  
              `ignore-all;`  
              `indication (ignore | normal | require);`  
              `rts (assert | de-assert | normal);`  
              `tm (ignore | normal | require);`  
              `}`

**Hierarchy Level**    [edit interfaces *interface-name* [serial-options](#)]

**Release Information**    Statement introduced in Junos OS Release 8.3.  
                              Statement previously known as **control-leads**.

**Description**    For M Series and T Series routers, configure the serial interface signal characteristics.  
  
                      The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege**    interface—To view this statement in the configuration.  
                          **Level**    interface-control—To add this statement to the configuration.

**Related**    • [Configuring the Serial Signal Handling on page 344](#)  
**Documentation**

## dtr

---

<b>Syntax</b>	<code>dtr <i>signal-handling-option</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dce-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dte-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces only, configure the to-DCE signal, data-transmit-ready (DTR).
<b>Options</b>	<p><b><i>signal-handling-option</i></b>—Signal handling for the DTR signal. The signal handling can be one of the following:</p> <p><b>assert</b>—The to-DCE signal must be asserted.</p> <p><b>auto-synchronize</b>—Normal DTR signal with automatic synchronization. This statement has two substatements:</p> <p><b>duration <i>milliseconds</i></b>—Pulse duration of resynchronization.  <b>Range:</b> 1 through 1000 milliseconds  <b>Default:</b> 1000 milliseconds</p> <p><b>interval <i>seconds</i></b>—Offset interval for resynchronization.  <b>Range:</b> 1 through 31 seconds  <b>Default:</b> 15 seconds</p> <p><b>de-assert</b>—The to-DCE signal must be deasserted.</p> <p><b>normal</b>—Normal DTR signal handling as defined by the TIA/EIA Standard 530.  <b>Default:</b> normal</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Configuring the Serial Signal Handling on page 344</a></li> </ul>

## dtr-circuit

---

<b>Syntax</b>	dtr-circuit (balanced   unbalanced);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces only, configure a DTR circuit.
<b>Options</b>	<b>balanced</b> —Balanced DTR signal. <b>unbalanced</b> —Unbalanced DTR signal. <b>Default:</b> balanced
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Serial DTR Circuit on page 347</a></li></ul>

## dtr-polarity

---

<b>Syntax</b>	dtr-polarity (negative   positive);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure DTR signal polarity.
<b>Options</b>	<b>positive</b> —Positive signal polarity. <b>negative</b> —Negative signal polarity. <b>Default:</b> positive
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Serial Signal Polarities on page 347</a></li></ul>

## dump-on-flow-control

---

<b>Syntax</b>	dump-on-flow-control;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> multiservice-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	This option supports high availability functionality and can be used with various service interfaces, including <b>rsp</b> , <b>rms</b> , <b>lsq</b> , and <b>rlsq</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Multiservice Physical Interface Properties on page 170</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">passive-monitor-mode on page 858</a></li></ul>

## dynamic-call-admission-control

---

<b>Syntax</b>	<pre>dynamic-call-admission-control {     activation-priority <i>priority</i>;     bearer-bandwidth-limit <i>kilobits-per-second</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	<p>(J4350 and J6350 Services Routers supporting voice over IP with the TGM550 media gateway module) For Fast Ethernet and Gigabit Ethernet interfaces, ISDN BRI interfaces, and serial interfaces with PPP or Frame Relay encapsulation, configure dynamic call admission control (CAC). Dynamic CAC provides enhanced control over WAN bandwidth. When dynamic CAC is configured on an interface responsible for providing call bandwidth, the TGM550 informs the Media Gateway Controller (MGC) of the bandwidth limit available for voice packets on the interface and requests the MGC to block new calls when the bandwidth is exhausted.</p> <p>Dynamic CAC must be configured on each Services Router interface responsible for providing call bandwidth.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Dynamic Call Admission Control</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## dynamic-profile (PPP)

<b>Syntax</b>	<code>dynamic-profile <i>profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5. Support for MLPPP on LSQ interfaces introduced in Junos OS Release 10.2.
<b>Description</b>	Specify the dynamic profile that is attached to the interface. On the MX Series routers, this statement is supported on PPPoE interfaces only.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Dynamic Profiles Overview</i></li> <li>• <i>Configuring a Basic Dynamic Profile</i></li> <li>• <i>Attaching Dynamic Profiles to Static PPP Subscriber Interfaces</i></li> <li>• <i>Attaching Dynamic Profiles to MLPPP Bundles</i></li> <li>• For hardware requirements, see <i>Hardware Requirements for PPP Subscriber Services on Non-Ethernet Interfaces</i></li> </ul>

## dynamic-profile (PPPoE Service Name Tables)

---

<b>Syntax</b>	<code>dynamic-profile <i>profile-name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit protocols pppoe service-name-tables <i>table-name</i> <b>service</b> <i>service-name</i>],</code> <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> <b>agent-specifier</b></code> <code>aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	<p>Specify a dynamic profile to instantiate a dynamic PPPoE interface. You can associate a dynamic profile with a named service entry, <b>empty</b> service entry, or <b>any</b> service entry configured in a PPPoE service name table, or with an agent circuit identifier/agent remote identifier (ACI/ARI) pair defined for these services.</p> <p>The dynamic profile associated with a service entry in a PPPoE service name table overrides the dynamic profile associated with the PPPoE underlying interface on which the dynamic PPPoE interface is created.</p> <p>If you include the <b>dynamic-profile</b> statement at the <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code> hierarchy level, you cannot also include the <b>static-interface</b> statement at this level. The <b>dynamic-profile</b> and <b>static-interface</b> statements are mutually exclusive for ACI/ARI pair configurations.</p>
<b>Options</b>	<b><i>profile-name</i></b> —Name of the dynamic profile that the router uses to instantiate a dynamic PPPoE interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring PPPoE Service Name Tables</i></li><li>• <i>Assigning a Dynamic Profile and Routing Instance to a Service Name or ACI/ARI Pair for Dynamic PPPoE Interface Creation</i></li></ul>

## dynamic-profile (Stacked VLAN)

<b>Syntax</b>	<pre>dynamic-profile <i>profile-name</i> {     <b>accept</b> (any   dhcp-v4   dhcp-v6   inet   inet6   pppoe);     access-profile <i>vlan-dynamic-profile-name</i>;     <b>ranges</b> (any   <i>low-tag-high-tag</i>),(any   <i>low-tag-high-tag</i>); }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>auto-configure stacked-vlan-ranges</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	Configure a dynamic profile for use when configuring dynamic stacked VLANs.
<b>Options</b>	<p><b><i>profile-name</i></b>—Name of the dynamic profile that you want to use when configuring dynamic stacked VLANs.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Dynamic Profiles Overview</i></li> <li>• <i>Configuring a Basic Dynamic Profile</i></li> <li>• <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs</i></li> </ul>

## dynamic-profile (VLAN)

---

<b>Syntax</b>	<pre>dynamic-profile <i>profile-name</i> {     <b>accept</b> (any   dhcp-v4   dhcp-v6   inet   inet6   pppoe);     accept-out-of-band <i>protocol</i>;     access-profile <i>vlan-dynamic-profile-name</i>;     <b>ranges</b> (any   <i>low-tag</i>)–(any   <i>high-tag</i>); }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>auto-configure</b> <i>vlan-ranges</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	Configure a dynamic profile for use when configuring dynamic VLANs.
<b>Options</b>	<p><b><i>profile-name</i></b>—Name of the dynamic profile that you want to use when configuring dynamic VLANs.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Dynamic Profiles Overview</i></li><li>• <i>Configuring a Basic Dynamic Profile</i></li><li>• <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs</i></li></ul>

## dynamic-profiles

```

Syntax  dynamic-profiles {
        profile-name {
            class-of-service {
                interfaces {
                    interface-name ;
                }
                unit logical-unit-number {
                    classifiers {
                        type (classifier-name | default);
                    }
                    output-traffic-control-profile (profile-name | $junos-cos-traffic-control-profile);
                    report-ingress-shaping-rate bps;
                    rewrite-rules {
                        dscp (rewrite-name | default);
                        dscp-ipv6 (rewrite-name | default);
                        ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);
                        inet-precedence (rewrite-name | default);
                    }
                }
            }
        }
    }
    scheduler-maps {
        map-name {
            forwarding-class class-name scheduler scheduler-name;
        }
    }
    schedulers {
        (scheduler-name) {
            buffer-size (seconds | percent percentage | remainder | temporal microseconds);
            drop-profile-map loss-priority (any | low | medium-low | medium-high | high)
                protocol (any | non-tcp | tcp) drop-profile profile-name;
            excess-priority (low | high | $junos-cos-scheduler-excess-priority);
            excess-rate (percent percentage | percent $junos-cos-scheduler-excess-rate);
            overhead-accounting (shaping-mode) <bytes (byte-value)>;
            priority priority-level;
            shaping-rate (rate | predefined-variable);
            transmit-rate (percent percentage | rate | remainder) <exact | rate-limit>;
        }
    }
    traffic-control-profiles profile-name {
        delay-buffer-rate (percent percentage | rate | $junos-cos-delay-buffer-rate);
        excess-rate (percent percentage | proportion value | percent $junos-cos-excess-rate);
        guaranteed-rate (percent percentage | rate | $junos-cos-guaranteed-rate);
        overhead-accounting (shaping-mode) <bytes (byte-value)>;
        scheduler-map map-name;
        shaping-rate (rate | predefined-variable);
    }
}
    firewall {
        family family {
            fast-update-filter filter-name {
                interface-specific;
            }
        }
    }

```

```
match-order [match-order];
term term-name {
    from {
        match-conditions;
    }
    then {
        action;
        action-modifiers;
    }
    only-at-create;
}
}
filter filter-name {
    enhanced-mode-override;
    fast-lookup-filter;
    instance-shared;
    interface-shared;
    interface-specific;
    term term-name {
        from {
            match-conditions;
        }
        then {
            action;
            action-modifiers;
        }
        only-at-create;
    }
}
filter filter-name {
    interface-specific;
    term term-name {
        from {
            match-conditions;
        }
        then {
            action;
            action-modifiers;
        }
    }
}
hierarchical-policer uid {
    aggregate {
        if-exceeding {
            bandwidth-limit-limit bps;
            burst-size-limit bytes;
        }
        then {
            policer-action;
        }
    }
}
premium {
    if-exceeding {
        bandwidth-limit bps;
        burst-size-limit bytes;
    }
    then {
        policer-action;
    }
}
```

```

    }
  }
  policer uid {
    filter-specific;
    if-exceeding {
      (bandwidth-limit bps | bandwidth-percent percentage);
      burst-size-limit bytes;
    }
    logical-bandwidth-policer;
    logical-interface-policer;
    physical-interface-policer;
    then {
      policer-action;
    }
  }
  three-color-policer uid {
    action {
      loss-priority high then discard;
    }
    logical-interface-policer;
    single-rate {
      (color-aware | color-blind);
      committed-burst-size bytes;
      committed-information-rate bps;
      excess-burst-size bytes;
    }
    two-rate {
      (color-aware | color-blind);
      committed-burst-size bytes;
      committed-information-rate bps;
      peak-burst-size bytes;
      peak-information-rate bps;
    }
  }
}
}
interfaces interface-name {
  interface-set interface-set-name {
    interface interface-name {
      unit logical unit number {
        advisory-options {
          downstream-rate rate;
          upstream-rate rate;
        }
      }
    }
  }
}
unit logical-unit-number {
  actual-transit-statistics;
  auto-configure {
    agent-circuit-identifier {
      dynamic-profile profile-name;
    }
    line-identity {
      include {
        accept-no-ids;
      }
    }
  }
}

```

```

        circuit-id;
        remote-id;
    }
    dynamic-profile profile-name;
}
}
encapsulation (atm-ccc-cell-relay | atm-ccc-vc-mux | atm-cisco-nlpid |
    atm-tcc-vc-mux | atm-mlppp-llc | atm-nlpid | atm-ppp-llc | atm-ppp-vc-mux |
    atm-snap | atm-tcc-snap | atm-vc-mux | ether-over-atm-llc |
    ether-vpls-over-atm-llc | ether-vpls-over-fr | ether-vpls-over-ppp | ethernet |
    frame-relay-ccc | frame-relay-ppp | frame-relay-tcc | frame-relay-ether-type |
    frame-relay-ether-type-tcc | multilink-frame-relay-end-to-end | multilink-ppp |
    ppp-over-ether | ppp-over-ether-over-atm-llc | vlan-bridge | vlan-ccc | vlan-vci-ccc
    | vlan-tcc | vlan-vpls);
family family {
    address address;
    filter {
        adf {
            counter;
            input-precedence precedence;
            not-mandatory;
            output-precedence precedence;
            rule rule-value;
        }
        input filter-name (
            precedence precedence;
            shared-name filter-shared-name;
        )
        output filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
    }
}
rpf-check {
    fail-filter filter-name;
    mode loose;
}
service {
    input {
        service-set service-set-name {
            service-filter filter-name;
        }
        post-service-filter filter-name;
    }
    input-vlan-map {
        inner-tag-protocol-id tpid;
        inner-vlan-id number;
        (push | swap);
        tag-protocol-id tpid;
        vlan-id number;
    }
    output {
        service-set service-set-name {
            service-filter filter-name;
        }
    }
}

```

```

        output-vlan-map {
            inner-tag-protocol-id tpid;
            inner-vlan-id number;
            (pop | swap);
            tag-protocol-id tpid;
            vlan-id number;
        }
        pcef pcef-profile-name {
            activate rule-name | activate-all;
        }
    }
    unnumbered-address interface-name <preferred-source-address address>;
}
filter {
    input filter-name (
        shared-name filter-shared-name;
    )
    output filter-name {
        shared-name filter-shared-name;
    }
}
host-prefix-only;
ppp-options {
    aaa-options aaa-options-name;
    authentication [ authentication-protocols ];
    chap {
        challenge-length minimum minimum-length maximum maximum-length;
        local-name name;
    }
    ignore-magic-number-mismatch;
    initiate-ncp (dual-stack-passive | ipv6 | ip)
    ipcp-suggest-dns-option;
    mru size;
    mtu (size | use-lower-layer);
    on-demand-ip-address;
    pap;
    peer-ip-address-optional;
    local-authentication {
        password password;
        username-include {
            circuit-id;
            delimiter character;
            domain-name name;
            mac-address;
            remote-id;
        }
    }
}
    vlan-id number;
    vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
}
}
interfaces {
    demux0 {...}
}
interfaces {

```

```
    pp0 {...}
  }
  policy-options {
    prefix-list uid {
      ip-addresses;
      dynamic-db;
    }
  }
  predefined-variable-defaults predefined-variable <variable-option> default-value;
  profile-type type;
  protocols {
    igmp {
      interface interface-name {
        accounting;
        disable;
        group-limit limit;
        group-policy;
        group-threshold value;
        immediate-leave
        log-interval seconds;
        no-accounting;
        oif-map;
        passive;
        promiscuous-mode;
        ssm-map ssm-map-name;
        ssm-map-policy ssm-map-policy-name
        static {
          group group {
            source source;
          }
        }
        version version;
      }
    }
  }
  mld {
    interface interface-name {
      (accounting | no-accounting);
      disable;
      group-limit limit;
      group-policy;
      group-threshold value;
      immediate-leave;
      log-interval seconds;
      oif-map;
      passive;
      ssm-map ssm-map-name;
      ssm-map-policy ssm-map-policy-name;
      static {
        group multicast-group-address {
          exclude;
          group-count number;
          group-increment increment;
          source ip-address {
            source-count number;
            source-increment increment;
          }
        }
      }
    }
  }
}
```

```

    }
  }
  version version;
}
}
router-advertisement {
  interface interface-name {
    current-hop-limit number;
    default-lifetime seconds;
    (managed-configuration | no-managed-configuration);
    max-advertisement-interval seconds;
    min-advertisement-interval seconds;
    (other-stateful-configuration | no-other-stateful-configuration);
    prefix prefix;
    reachable-time milliseconds;
    retransmit-timer milliseconds;
  }
}
}
routing-instances routing-instance-name {
  interface interface-name;
  routing-options {
    access {
      route prefix {
        next-hop next-hop;
        metric route-cost;
        preference route-distance;
        tag route-tag;
        tag2 route-tag2;
      }
    }
  }
  access-internal {
    route subscriber-ip-address {
      qualified-next-hop underlying-interface {
        mac-address address;
      }
    }
  }
  multicast {
    interface interface-name {
      no-qos-adjust;
    }
  }
}
rib routing-table-name {
  access {
    route prefix {
      next-hop next-hop;
      metric route-cost;
      preference route-distance;
      tag route-tag;
      tag2 route-tag2;
    }
  }
  access-internal {
    route subscriber-ip-address {

```

```

        qualified-next-hop underlying-interface {
            mac-address address;
        }
    }
}
}
}
routing-options {
    access {
        route prefix {
            next-hop next-hop;
            metric route-cost;
            preference route-distance;
            tag route-tag;
            tag2 route-tag2;
        }
    }
    access-internal {
        route subscriber-ip-address {
            qualified-next-hop underlying-interface {
                mac-address address;
            }
        }
    }
    multicast {
        interface interface-name {
            no-qos-adjust;
        }
    }
}
services {
    captive-portal-content-delivery {
        rule name {
            match-direction (input | input-output | output);
            term name {
                from {
                    applications application-name {
                        application-protocol type;
                        destination-port port-type;
                        protocol ip-protocol-type;
                        source-port port-type;
                    }
                    destination-address name <except>;
                    destination-address-range low minimum-value high maximum-value <except>;
                    destination-prefix-list name <except>;
                }
                then {
                    accept;
                    redirect url;
                    rewrite destination-address address <destination-port port-number>;
                    syslog;
                }
            }
        }
    }
}
}

```

```

variables {
  variable-name {
    default-value default-value;
    equals expression;
    mandatory;
    uid;
    uid-reference;
  }
}

```

**Hierarchy Level** [\[edit\]](#)

**Release Information** Statement introduced in Junos OS Release 9.2.  
Support at the **filter**, **policer**, **hierarchical-policer**, **three-color-policer**, and **policy options** hierarchy levels introduced in Junos OS Release 11.4.

**Description** Create dynamic profiles for use with DHCP or PPP client access.

**Options** *profile-name*—Name of the dynamic profile; string of up to 80 alphanumeric characters.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring a Basic Dynamic Profile*
- *Configuring Dynamic VLANs Based on Agent Circuit Identifier Information*
- *Dynamic Profiles Overview*

## e1-options

---

<b>Syntax</b>	<pre>e1-options {     bert-algorithm <i>algorithm</i>;     bert-error-rate <i>rate</i>;     bert-period <i>seconds</i>;     fcs (16   32);     framing (g704   g704-no-crc4   unframed);     idle-cycle-flag (flags   ones);     invert-data;     loopback (local   remote);     start-end-flag (filler   shared);     timeslots <i>time-slot-range</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Configure E1-specific physical interface properties.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Channelized E1 IQ and IQE Interfaces Overview</i></li><li>• <i>Channelized STM1 Interfaces Overview</i></li><li>• <i>E1 Interfaces Overview</i></li><li>• <i>T1 Interfaces Overview</i></li></ul>

## e3-options

<b>Syntax</b>	<pre>e3-options {   atm-encapsulation (direct   plcp);   bert-algorithm <i>algorithm</i>;   bert-error-rate <i>rate</i>;   bert-period <i>seconds</i>;   buildout <i>feet</i>;   compatibility-mode (digital-link   kentrox   larscom) &lt;subrate <i>value</i>&gt;;   fcs (16   32);   framing (g.751   g.832);   idle-cycle-flag <i>value</i>;   invert-data;   loopback (local   remote);   (payload-scrambler   no-payload-scrambler);   start-end-flag <i>value</i>;   (unframed   no-unframed); }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure E3-specific physical interface properties.</p> <p>For ATM1 interfaces, you can configure a subset of E3 options statements.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>E3 Interfaces Overview</i></li> <li>• <i>T3 Interfaces Overview</i></li> <li>• <a href="#">atm-options on page 444</a></li> </ul>

## east-interface

---

**Syntax** east-interface {  
    node-id mac-address;  
    control-channel channel-name {  
        vlan number;  
        interface name interface-name  
    }  
    interface-none  
    ring-protection-link-end;  
}

**Hierarchy Level** [edit protocols [protection-group ethernet-ring ring-name](#)]

**Release Information** Statement introduced in Junos OS Release 9.4.  
Statement introduced in Junos OS Release 12.1 for EX Series switches.  
Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.

**Description** Define one of the two interface ports for Ethernet ring protection, the other being defined by the **west-interface** statement at the same hierarchy level. The interface must use the control channel's logical interface name. The control channel is a dedicated VLAN channel for the ring port.

EX Series switches do not use the node-id statement--the node ID is automatically configured on the switches using the MAC address.



**NOTE:** Always configure this port first, before configuring the **west-interface** statement.



**NOTE:** The Node ID is not configurable on EX Series switches. The node ID is automatically configured using the MAC address.

The remaining statements are explained separately. See [CLI Explorer](#).


**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Ethernet Ring Protection Switching Overview](#)
- [Ethernet Ring Protection Using Ring Instances for Load Balancing](#)
- [west-interface on page 1109](#)
- [ethernet-ring on page 595](#)

- *Example: Configuring Ethernet Ring Protection Switching on EX Series Switches*
- *Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS*
- *Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)*

## egress-policer-overhead

<b>Syntax</b>	<code>egress-policer-overhead bytes;</code>
<b>Hierarchy Level</b>	<code>[edit chassis fpc slot-number pic pic-number]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 11.1.
<b>Description</b>	<p>Add the specified number of bytes to the actual length of an Ethernet frame when determining the actions of Layer 2 policers, MAC policers, or queue rate limits applied to output traffic on the line card. You can configure egress policer overhead to account for egress <i>shaping</i> overhead bytes added to output traffic on the line card.</p> <p>On M Series and T Series routers, this statement is supported on Gigabit Ethernet Intelligent Queuing 2 (IQ2) PICs and Enhanced IQ2 (IQ2E) PICs. On MX Series routers, this statement is supported for interfaces configured on Dense Port Concentrators (DPCs).</p>
	<div>  <p><b>NOTE:</b> This statement is not supported on Modular Interface Cards (MICs) or Modular Port Concentrators (MPCs) in MX Series routers.</p> </div>
<b>Options</b>	<p><b>bytes</b>—Number of bytes added to a packet exiting an interface.</p> <p><b>Range:</b> 0–255 bytes</p> <p><b>Default:</b> 0</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>egress-shaping-overhead</i></li> <li>• <i>Policer Overhead to Account for Rate Shaping Overview</i></li> <li>• <i>Example: Configuring Policer Overhead to Account for Rate Shaping</i></li> <li>• <i>Configuring a Policer Overhead</i></li> <li>• <i>CoS on Enhanced IQ2 PICs Overview</i></li> </ul>

## encapsulation (Container Interface)

---

<b>Syntax</b>	<code>encapsulation (cisco-hdlc   ppp);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces cin]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2.
<b>Description</b>	Container link-layer encapsulation type.
<b>Options</b>	<b>cisco-hdlc</b> —Use Cisco-compatible High-Level Data Link Control (HDLC) framing. <b>ppp</b> —Use serial PPP encapsulation.
<b>Required Privilege Level</b>	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i></li><li>• <i>Configuring Container Interfaces for APS on SONET Links</i></li></ul>

## encapsulation (Logical Interface)

<b>Syntax</b>	encapsulation (atm-ccc-cell-relay   atm-ccc-vc-mux   atm-cisco-nlpid   atm-mlppp-llc   atm-nlpid   atm-ppp-llc   atm-ppp-vc-mux   atm-snap   atm-tcc-snap   atm-tcc-vc-mux   atm-vc-mux   ether-over-atm-llc   ether-vpls-over-atm-llc   ether-vpls-over-fr   ether-vpls-over-ppp   ethernet   ethernet-ccc   ethernet-vpls   ethernet-vpls-fr   frame-relay-ccc   frame-relay-ether-type   frame-relay-ether-type-tcc   frame-relay-ppp   frame-relay-tcc   gre-fragmentation   multilink-frame-relay-end-to-end   multilink-ppp   ppp-over-ether   ppp-over-ether-over-atm-llc   vlan-bridge   vlan-ccc   vlan-vci-ccc   vlan-tcc   vlan-vpls   vxlan);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit interfaces rlsq <i>number</i> <b>unit</b> <i>logical-unit-number</i> ] [edit protocols evpn]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers ( <b>ethernet</b> , <b>vlan-ccc</b> , and <b>vlan-tcc</b> options only). Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers. Only the <b>atm-ccc-cell-relay</b> and <b>atm-ccc-vc-mux</b> options are supported on ACX Series routers. Statement introduced in Junos OS Release 17.3R1 for QFX10000 Series switches ( <b>ethernet-ccc</b> and <b>vlan-ccc</b> options only).
<b>Description</b>	Configure a logical link-layer encapsulation type. Not all encapsulation types are supported on the switches. See the switch CLI.
<b>Options</b>	<p><b>atm-ccc-cell-relay</b>—Use ATM cell-relay encapsulation.</p> <p><b>atm-ccc-vc-mux</b>—Use ATM virtual circuit (VC) multiplex encapsulation on CCC circuits. When you use this encapsulation type, you can configure the <b>ccc</b> family only.</p> <p><b>atm-cisco-nlpid</b>—Use Cisco ATM network layer protocol identifier (NLPID) encapsulation. When you use this encapsulation type, you can configure the <b>inet</b> family only.</p> <p><b>atm-mlppp-llc</b>—For ATM2 IQ interfaces only, use Multilink Point-to-Point (MLPPP) over AAL5 LLC. For this encapsulation type, your router must be equipped with a Link Services or Voice Services PIC. MLPPP over ATM encapsulation is not supported on ATM2 IQ OC48 interfaces.</p> <p><b>atm-nlpid</b>—Use ATM NLPID encapsulation. When you use this encapsulation type, you can configure the <b>inet</b> family only.</p> <p><b>atm-ppp-llc</b>—(ATM2 IQ interfaces and MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP only) Use PPP over AAL5 LLC encapsulation.</p> <p><b>atm-ppp-vc-mux</b>—(ATM2 IQ interfaces and MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP only) Use PPP over ATM AAL5 multiplex encapsulation.</p>

**atm-snap**—(All interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) Use ATM subnetwork attachment point (SNAP) encapsulation.

**atm-tcc-snap**—Use ATM SNAP encapsulation on translational cross-connect (TCC) circuits.

**atm-tcc-vc-mux**—Use ATM VC multiplex encapsulation on TCC circuits. When you use this encapsulation type, you can configure the **tcc** family only.

**atm-vc-mux**—(All interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) Use ATM VC multiplex encapsulation. When you use this encapsulation type, you can configure the **inet** family only.

**ether-over-atm-llc**—(All IP interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) For interfaces that carry IP traffic, use Ethernet over ATM LLC encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces.

**ether-vpls-over-atm-llc**—For ATM2 IQ interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.

**ether-vpls-over-fr**—For E1, T1, E3, T3, and SONET interfaces only, use the Ethernet virtual private LAN service (VPLS) over Frame Relay encapsulation to support Bridged Ethernet over Frame Relay encapsulated TDM interfaces for VPLS applications, per RFC 2427, *Multiprotocol Interconnect over Frame Relay*.



**NOTE:** The SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, and the DS3/E3 MIC do not support Ethernet over Frame Relay encapsulation.

---

**ether-vpls-over-ppp**—For E1, T1, E3, T3, and SONET interfaces only, use the Ethernet virtual private LAN service (VPLS) over Point-to-Point Protocol (PPP) encapsulation to support Bridged Ethernet over PPP-encapsulated TDM interfaces for VPLS applications.

**ethernet**—Use Ethernet II encapsulation (as described in RFC 894, *A Standard for the Transmission of IP Datagrams over Ethernet Networks*).

**ethernet-ccc**—Use Ethernet CCC encapsulation on Ethernet interfaces.

**ethernet-vpls**—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard Tag Protocol ID (TPID) values.



**NOTE:** The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

**ethernet-vpls-fr**—Use in a VPLS setup when a CE device is connected to a PE router over a time-division multiplexing (TDM) link. This encapsulation type enables the PE router to terminate the outer layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.

**frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

**frame-relay-ether-type**—Use Frame Relay ether type encapsulation for compatibility with Cisco Frame Relay. The physical interface must be configured with flexible-frame-relay encapsulation.

**frame-relay-ether-type-tcc**—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media. The physical interface must be configured with flexible-frame-relay encapsulation.

**frame-relay-ppp**—Use PPP over Frame Relay circuits. When you use this encapsulation type, you can configure the **ppp** family only.

**frame-relay-tcc**—Use Frame Relay encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.

**gre-fragmentation**—For adaptive services interfaces only, use GRE fragmentation encapsulation to enable fragmentation of IPv4 packets in GRE tunnels. This encapsulation clears the do not fragment (DF) bit in the packet header. If the packet's size exceeds the tunnel's maximum transmission unit (MTU) value, the packet is fragmented before encapsulation.

**multilink-frame-relay-end-to-end**—Use MLFR FRF.15 encapsulation. This encapsulation is used only on multilink, link services, and voice services interfaces and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.

**multilink-ppp**—Use MLPPP encapsulation. This encapsulation is used only on multilink, link services, and voice services interfaces and their constituent T1 or E1 interfaces.

**ppp-over-ether**—Use PPP over Ethernet encapsulation to configure an underlying Ethernet interface for a dynamic PPPoE logical interface on M120 and M320 routers with Intelligent Queuing 2 (IQ2) PICs, and on MX Series routers with MPCs.

**ppp-over-ether-over-atm-llc**—(MX Series routers with MPCs using the ATM MIC with SFP only) For underlying ATM interfaces, use PPP over Ethernet over ATM LLC encapsulation. When you use this encapsulation type, you cannot configure the interface address. Instead, configure the interface address on the PPP interface.

**vlan-bridge**—Use Ethernet VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q tagging, flexible-ethernet-services, and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.

**vlan-ccc**—Use Ethernet virtual LAN (VLAN) encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

**vlan-vci-ccc**—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

**vlan-tcc**—Use Ethernet VLAN encapsulation on TCC circuits. When you use this encapsulation type, you can configure the **tcc** family only.


**vlan-vpls**—Use Ethernet VLAN encapsulation on VPLS circuits.

**vxlan**—Use VXLAN data plane encapsulation for EVPN.

<b>Required Privilege Level</b>	interface— To view this statement in the configuration. interface-control— To add this statement to the configuration.
---------------------------------	---

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Layer 2 Switching Cross-Connects Using CCC</i></li><li>• <i>Configuring the Encapsulation for Layer 2 Switching TCCs</i></li><li>• <a href="#">Configuring Interface Encapsulation on Logical Interfaces on page 190</a></li><li>• <i>Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects</i></li><li>• <a href="#">Circuit and Translational Cross-Connects Overview on page 275</a></li><li>• <i>Identifying the Access Concentrator</i></li><li>• <i>Configuring ATM Interface Encapsulation</i></li><li>• <i>Configuring VLAN and Extended VLAN Encapsulation</i></li><li>• <a href="#">Configuring ATM-to-Ethernet Interworking on page 282</a></li><li>• <a href="#">Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 132</a></li><li>• <i>Configuring CCC Encapsulation for Layer 2 VPNs</i></li><li>• <i>Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits</i></li><li>• <i>Configuring ATM for Subscriber Access</i></li><li>• <i>Understanding CoS on ATM IMA Pseudowire Interfaces Overview</i></li><li>• <i>Configuring Policing on an ATM IMA Pseudowire</i></li></ul>
------------------------------	--

## encapsulation

<b>List of Syntax</b>	<a href="#">Syntax for Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series on page 577</a> <a href="#">Syntax for Logical Interfaces: SRX Series on page 577</a>
<b>Syntax for Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series</b>	<pre>encapsulation (atm-ccc-cell-relay   atm-pvc   cisco-hdlc   cisco-hdlc-ccc   cisco-hdlc-tcc   ethernet-bridge   ethernet-ccc   ethernet-over-atm   ethernet-tcc   ethernet-vpls   ethernet-vpls-fr   ether-vpls-over-atm-llc   ethernet-vpls-ppp   extended-frame-relay-ccc   extended-frame-relay-ether-type-tcc   extended-frame-relay-tcc   extended-vlan-bridge   extended-vlan-ccc   extended-vlan-tcc   extended-vlan-vpls   flexible-ethernet-services   flexible-frame-relay   frame-relay   frame-relay-ccc   frame-relay-ether-type   frame-relay-ether-type-tcc   frame-relay-port-ccc   frame-relay-tcc   generic-services   multilink-frame-relay-uni-nni   ppp   ppp-ccc   ppp-tcc   vlan-ccc   vlan-vci-ccc   vlan-vpls);</pre>
<b>Syntax for Logical Interfaces: SRX Series</b>	<pre>encapsulation (ether-vpls-ppp   ethernet-bridge   ethernet-ccc   ethernet-tcc   ethernet-vpls   extended-frame-relay-ccc   extended-frame-relay-tcc   extended-vlan-bridge   extended-vlan-ccc   extended-vlan-tcc   extended-vlan-vpls   frame-relay-port-ccc   vlan-ccc   vlan-vpls);</pre>
<b>Physical Interfaces: M Series, MX Series, QFX Series, T Series, PTX Series</b>	<pre>[edit interfaces <i>interface-name</i>], [edit interfaces rlsq <i>number:number</i>]</pre>
<b>Logical Interfaces: SRX Series</b>	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]</pre>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.5.</p> <p>Statement introduced in Junos OS Release 11.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers (<b>flexible-ethernet-services</b>, <b>ethernet-ccc</b>, and <b>ethernet-tcc</b> options only).</p>
<b>Description</b>	<p>For M Series, MX Series, QFX Series, T Series, PTX Series, specify the physical link-layer encapsulation type.</p> <p>For SRX Series, specify logical link layer encapsulation.</p>
	<p> <b>NOTE:</b> Not all encapsulation types are supported on the switches. See the switch CLI.</p>
<b>Default</b>	<b>ppp</b> —Use serial PPP encapsulation.

**Physical Interface  
Options and Logical  
Interface Options**

[Warning: element unresolved in stylesheets: <title> (in <config-options>). This is probably a new element that is not yet supported in the stylesheets.]

Physical Interface Options and Logical Interface Options

For physical interfaces:



**NOTE:** Frame Relay, ATM, PPP, SONET, and SATSOP options are not supported on EX Series switches.

- **atm-ccc-cell-relay**—Use ATM cell-relay encapsulation.
- **atm-pvc**—Defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*. When you configure physical ATM interfaces with ATM PVC encapsulation, an RFC 2684-compliant ATM Adaptation Layer 5 (AAL5) tunnel is set up to route the ATM cells over a Multiprotocol Label Switching (MPLS) path that is typically established between two MPLS-capable routers using the Label Distribution Protocol (LDP).
- **cisco-hdlc**—Use Cisco-compatible High-Level Data Link Control (HDLC) framing. E1, E3, SONET/SDH, T1, and T3 interfaces can use Cisco HDLC encapsulation. Two related versions are supported:
  - CCC version (**cisco-hdlc-ccc**)—The logical interface does not require an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.
  - TCC version (**cisco-hdlc-tcc**)—Similar to CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
- **cisco-hdlc-ccc**—Use Cisco-compatible HDLC framing on CCC circuits.
- **cisco-hdlc-tcc**—Use Cisco-compatible HDLC framing on TCC circuits for connecting different media.
- **ethernet-bridge**—Use Ethernet bridge encapsulation on Ethernet interfaces that have bridging enabled and that must accept all packets.
- **ethernet-over-atm**—For interfaces that carry IPv4 traffic, use Ethernet over ATM encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces. As defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*, this encapsulation type allows ATM interfaces to connect to devices that support only bridge protocol data units (BPDUs). Junos OS does not completely support bridging, but accepts BPDUs packets as a default gateway. If you use the router as an edge device, then the router acts as a default gateway. It accepts Ethernet LLC/SNAP frames with IP or ARP in the payload, and drops the rest. For packets destined to the Ethernet LAN, a route lookup is done using the destination IP address. If the route lookup yields a full address match, the packet is encapsulated with an LLC/SNAP and MAC header, and the packet is forwarded to the ATM interface.
- **ethernet-tcc**—For interfaces that carry IPv4 traffic, use Ethernet TCC encapsulation on interfaces that must accept packets carrying standard TPID values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

- **ethernet-vpls**—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard TPID values. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.
- **ethernet-vpls-fr**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.
- **ethernet-vpls-ppp**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 PPP connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use it to forward the packet into a given VPLS instance.
- **ether-vpls-over-atm-llc**—For ATM intelligent queuing (IQ) interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.
- **extended-frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC. When you use this encapsulation type, you can configure the **ccc** family only.
- **extended-frame-relay-ether-type-tcc**—Use extended Frame Relay ether type TCC for Cisco-compatible Frame Relay for DLCIs 1 through 1022. This encapsulation type is used for circuits with different media on either side of the connection.
- **extended-frame-relay-tcc**—Use Frame Relay encapsulation on TCC circuits to connect different media. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC.
- **extended-vlan-bridge**—Use extended VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q VLAN tagging and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.
- **extended-vlan-ccc**—Use extended VLAN encapsulation on CCC circuits with Gigabit Ethernet and 4-port Fast Ethernet interfaces that must accept packets carrying 802.1Q values. Extended VLAN CCC encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. When you use this encapsulation type, you can configure the **ccc** family only. For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC is not supported.
- **extended-vlan-tcc**—For interfaces that carry IPv4 traffic, use extended VLAN encapsulation on TCC circuits with Gigabit Ethernet interfaces on which you want to use 802.1Q tagging. For 4-port Gigabit Ethernet PICs, extended VLAN TCC is not supported.

- **extended-vlan-vpls**—Use extended VLAN VPLS encapsulation on Ethernet interfaces that have VLAN 802.1Q tagging and VPLS enabled and that must accept packets carrying TPIDs 0x8100, 0x9100, and 0x9901. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.



**NOTE:** The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

- **flexible-ethernet-services**—For Gigabit Ethernet IQ interfaces and Gigabit Ethernet PICs with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and for Gigabit Ethernet interfaces, use flexible Ethernet services encapsulation when you want to configure multiple per-unit Ethernet encapsulations. Aggregated Ethernet bundles can use this encapsulation type. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.
- **flexible-frame-relay**—For IQ interfaces only, use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any DLCI value from 1 through 1022.
- **frame-relay**—Use Frame Relay encapsulation is defined in RFC 1490, *Multiprotocol Interconnect over Frame Relay*. E1, E3, link services, SONET/SDH, T1, T3, and voice services interfaces can use Frame Relay encapsulation.
- **frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation is same as standard Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to CCC. The logical interface must also have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.
- **frame-relay-ether-type**—Use Frame Relay ether type encapsulation for compatibility with the Cisco Frame Relay. IETF frame relay encapsulation identifies the payload format using NLPID and SNAP formats. Cisco-compatible Frame Relay encapsulation uses the Ethernet type to identify the type of payload.



**NOTE:** When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.

- **frame-relay-ether-type-tcc**—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media. This encapsulation is Cisco-compatible Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to TCC.

- **frame-relay-port-ccc**—Use Frame Relay port CCC encapsulation to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with Frame Relay transport. The connection between the two CE routers can be either user-to-network interface (UNI) or network-to-network interface (NNI); this is completely transparent to the PE routers. When you use this encapsulation type, you can configure the **ccc** family only.
- **frame-relay-tcc**—This encapsulation is similar to Frame Relay CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.
- **generic-services**—Use generic services encapsulation for services with a hierarchical scheduler.
- **multilink-frame-relay-uni-nni**—Use MLFR UNI NNI encapsulation. This encapsulation is used on link services, voice services interfaces functioning as FRF.16 bundles, and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.
- 
- **ppp**—Use serial PPP encapsulation. This encapsulation is defined in RFC 1661, *The Point-to-Point Protocol (PPP) for the Transmission of Multiprotocol Datagrams over Point-to-Point Links*. PPP is the default encapsulation type for physical interfaces. E1, E3, SONET/SDH, T1, and T3 interfaces can use PPP encapsulation.
- **ppp-ccc**—Use serial PPP encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.
- **ppp-tcc**—Use serial PPP encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.
- **vlan-ccc**—Use Ethernet VLAN encapsulation on CCC circuits. VLAN CCC encapsulation supports TPID 0x8100 only. When you use this encapsulation type, you can configure the **ccc** family only.

- **vlan-vci-ccc**—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only. All logical interfaces configured on the Ethernet interface must also have the encapsulation type set to **vlan-vci-ccc**.
- **vlan-vpls**—Use VLAN VPLS encapsulation on Ethernet interfaces with VLAN tagging and VPLS enabled. Interfaces with VLAN VPLS encapsulation accept packets carrying standard TPID values only. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.

**NOTE:**

- Label-switched interfaces (LSIs) do not support VLAN VPLS encapsulation. Therefore, you can only use VLAN VPLS encapsulation on a PE-router-to-CE-router interface and not a core-facing interface.
  - Starting with Junos OS release 13.3, a commit error occurs when you configure **vlan-vpls** encapsulation on a physical interface and configure **family inet** on one of the logical units. Previously, it was possible to commit this invalid configuration.
- 

For logical interfaces:

- **frame-relay**—Configure a Frame Relay encapsulation when the physical interface has multiple logical units, and the units are either point to point or multipoint.
- **multilink-frame-relay-uni-nni**—Link services interfaces functioning as FRF.16 bundles can use Multilink Frame Relay UNI NNI encapsulation.
- **ppp**—For normal mode (when the device is using only one ISDN B-channel per call). Point-to-Point Protocol is for communication between two computers using a serial interface.
- **ppp-over-ether**—This encapsulation is used for underlying interfaces of pp0 interfaces.

<b>Required Privilege</b>	interface—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.

- Related Documentation**
- *Understanding Physical Encapsulation on an Interface*
  - [Configuring Interface Encapsulation on Physical Interfaces on page 129](#)
  - *Configuring CCC Encapsulation for Layer 2 VPNs*
  - *Configuring Layer 2 Switching Cross-Connects Using CCC*
  - *Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits*
  - *Configuring ATM Interface Encapsulation*
  - [Configuring ATM-to-Ethernet Interworking on page 282](#)
  - *Configuring VLAN and Extended VLAN Encapsulation*
  - *Configuring VLAN and Extended VLAN Encapsulation*
  - *Configuring Encapsulation for Layer 2 Wholesale VLAN Interfaces*
  - *Configuring Interfaces for Layer 2 Circuits*
  - [Configuring Interface Encapsulation on PTX Series Packet Transport Routers on page 132](#)
  - *Configuring MPLS LSP Tunnel Cross-Connects Using CCC*
  - *Configuring TCC*
  - *Configuring VPLS Interface Encapsulation*
  - *Configuring Interfaces for VPLS Routing*
  - [Defining the Encapsulation for Switching Cross-Connects on page 277](#)
  - *Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)*

## encoding

---

<b>Syntax</b>	encoding (nrz   nrzi);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For serial interfaces, set the line encoding format.
<b>Default</b>	The default line encoding is non-return to zero (NRZ).
<b>Options</b>	<b>nrz</b> —Use NRZ line encoding. <b>nrzi</b> —Use non-return to zero inverted (NRZI) line encoding.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Serial Line Encoding on page 350</a></li></ul>

## epd-threshold (Logical Interface)

<b>Syntax</b>	<code>epd-threshold cells <b>plp1</b> cells;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],          [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>],          [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],          [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> <b>family</b> <i>family</i> multipoint-destination <i>address</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
<b>Description</b>	<p>For ATM2 IQ interfaces only, define the early packet discard (EPD) threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded. For interfaces configured in trunk mode, you can also configure dual EPD thresholds depending on the packet loss priorities (PLPs).</p>
<b>Default</b>	<p>Approximately 1 percent of the available cell buffers. If shaping is enabled, the default EPD threshold is proportional to the shaping rate according to the following formula:</p> $\text{default epd-threshold} = \text{number of buffers} * \text{shaping rate} / \text{line rate}$ <p>The minimum EPD threshold value is 48 cells. If the default EPD threshold formula results in an EPD threshold of less than 48 cells, the result will be ignored, and the minimum value of 48 cells will be used.</p>
<b>Options</b>	<p><b>cells</b>—Maximum number of cells.</p> <p><b>Range:</b> For 1-port and 2-port OC12 interfaces, 48 through 425,984 cells</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the ATM2 IQ EPD Threshold</i></li> <li>• <i>Configuring Two EPD Thresholds per Queue</i></li> </ul>

## epd-threshold (Physical Interface)

---

<b>Syntax</b>	<code>epd-threshold cells <b>plp1</b> cells;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> <b>forwarding-class</b> <i>class-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define the EPD threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded.
<b>Default</b>	If you do not include either the <b>epd-threshold</b> or the <b>linear-red-profile</b> statement in the forwarding class configuration, the Junos OS uses an EPD threshold based on the available bandwidth and other parameters.
<b>Options</b>	<b>cells</b> —Maximum number of cells. <b>Range:</b> For 1-port and 2-port OC12 interfaces, 48 through 425,984 cells. For 1-port OC48 interfaces, 48 through 425,984 cells. For 2-port OC3, DS3, and E3 interfaces, 48 through 212,992 cells. For 4-port DS3 and E3 interfaces, 48 through 106,496 cells.  The <b>plp1</b> statement is explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring an ATM Scheduler Map</i></li><li>• <a href="#">linear-red-profile on page 725</a></li></ul>

---

## es-options

---

<b>Syntax</b>	<pre>es-options {   backup-interface interface-name; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>es-fpc/pic/port</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>On ES interfaces, configure ES interface-specific interface properties.</p> <p>The <b>backup-interface</b> statement is explained separately.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## ethernet (Protocols OAM)

**List of Syntax**    Syntax: MX, T, ACX Series Routers, SRX Firewalls, M320 and EX Series Switches on page 588  
 Syntax: EX Series Switches and NFX Series Devices on page 591

Syntax: MX, T, ACX  
 Series Routers, SRX  
 Firewalls, M320 and EX  
 Series Switches

```
ethernet {
  connectivity-fault-management {
    action-profile profile-name {
      default-actions {
        interface-down;
      }
    }
  }
  performance-monitoring {
    delegate-server-processing;
    hardware-assisted-timestamping;
    hardware-assisted-keepalives;
    sla-iterator-profiles {
      profile-name {
        avg-fd-twoway-threshold;
        avg-ifdv-twoway-threshold;
        avg-flr-forward-threshold;
        avg-flr-backward-threshold;
        disable;
        calculation-weight {
          delay delay-weight;
          delay-variation delay-variation-weight;
        }
        cycle-time milliseconds;
        iteration-period connections;
        measurement-type (loss | statistical-frame-loss | two-way-delay);
      }
    }
  }
  linktrace {
    age (30m | 10m | 1m | 30s | 10s);
    path-database-size path-database-size;
  }
  maintenance-domain domain-name {
    level number;
    name-format (character-string | none | dns | mac+2octet);
    maintenance-association ma-name {
      short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
      protect-maintenance-association protect-ma-name;
      remote-maintenance-association remote-ma-name;
      continuity-check {
        convey-loss-threshold;
        hold-interval minutes;
        interface-status-tlv;
        interval (10m | 10s | 1m | 1s | 100ms);
        loss-threshold number;
        port-status-tlv;
      }
    }
    mep mep-id {
```

```

    auto-discovery;
    direction (up | down);
    interface interface-name (protect | working);
    lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
        rem-err-xcon | xcon );
    priority number;
    remote-mep mep-id {
        action-profile profile-name;
        sla-iterator-profile profile-name {
            data-tlv-size size;
            iteration-count count-value;
            priority priority-value;
        }
    }
}

}

}

}

}

}

evcs evc-id {
    evc-protocol cfm management-domain domain-id (management-association
        association-id | vpls (routing-instance instance-id);
    remote-uni-count count;
    multipoint-to-multipoint;
}

link-fault-management {
    action-profile profile-name {
        action {
            link-down;
            send-critical-event;
            syslog;
        }
        event {
            link-adjacency-loss;
            link-event-rate {
                frame-error count;
                frame-period count;
                frame-period-summary count;
                symbol-period count;
            }
            protocol-down;
        }
    }
}

interface interface-name {
    apply-action-profile;
    link-discovery (active | passive);
    loopback-tracking;
    pdu-interval interval;
    pdu-threshold threshold-value;
    remote-loopback;
    event-thresholds {
        frame-error count;
        frame-period count;
        frame-period-summary count;
        symbol-period count;
    }
    negotiation-options {

```

```
        allow-remote-loopback;
        no-allow-link-events;
    }
}
lmi {
    status-counter count;
    polling-verification-timer value;
    interface name {
        uni-id uni-name;
        status-counter number;
        polling-verification-timer value;
        evc-map-type (all-to-one-bundling | bundling | service-multiplexing);
        evc evc-name {
            default-evc;
            vlan-list vlan-id-list;
        }
    }
}
```

**Syntax: EX Series  
Switches and NFX  
Series Devices**

```

ethernet {
  connectivity-fault-management {
    action-profile profile-name {
      action {
        interface-down;
      }
      default-actions {
        interface-down;
      }
      event {
        adjacency-loss;
      }
    }
  }
  esp-traceoptions {
    file filename <files number> <no-stamp> <replace> <size size> <world-readable |
      no-world-readable>;
    flag (all |error | esp | interface | krt | lib |normal |task |timer);
  }
  linktrace {
    age (30m | 10m | 1m | 30s | 10s);
    path-database-size path-database-size;
  }
  maintenance-domain domain-name {
    level number;
    mip-half-function (none | default |explicit);
    name-format (character-string | none | dns | mac+2oct);
    maintenance-association ma-name {
      continuity-check {
        hold-interval minutes;
        interface-status-tlv;
        interval (10m | 10s | 1m | 1s| 100ms);
        loss-threshold number;
        port-status-tlv;
      }
      mep mep-id {
        auto-discovery;
        direction down;
        interface interface-name;
        priority
      }
      remote-mep mep-id {
        action-profile profile-name;
        sla-iterator-profile profile-name {
          data-tlv-size size;
          iteration-count count-value;
          priority priority-value;
        }
      }
    }
    short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
  }
}
performance-monitoring {
  sla-iterator-profiles {
    profile-name {
      calculation-weight {
        delay delay-value;
      }
    }
  }
}

```

```

        delay-variation delay-variation-value;
    }
    cycle-time cycle-time-value;
    iteration-period iteration-period-value;
    measurement-type two-way-delay;
    passive;
}
}
}
traceoptions {
    file filename <files number> <match regex> <size size> <world-readable |
        no-world-readable>;
    flag flag ;
    no-remote-trace;
}
}
link-fault-management {
    action-profile profile-name;
    action {
        syslog;
        link-down;
    }
    event {
        link-adjacency-loss;
        link-event-rate {
            frame-error count;
            frame-period count;
            frame-period-summary count;
            symbol-period count;
        }
    }
}
interface interface-name {
    link-discovery (active | passive);
    pdu-interval interval;
    pdu-threshold threshold-value;
    remote-loopback;
    event-thresholds {
        frame-error count;
        frame-period count;
        frame-period-summary count;
        symbol-period count;
    }
    negotiation-options {
        allow-remote-loopback;
        no-allow-link-events;
    }
}
traceoptions {
    file filename <files number> <match regex> <size size> <world-readable |
        no-world-readable>;
    flag flag ;
    no-remote-trace;
}
}
}

```

<b>Hierarchy Level</b>	[edit protocols <a href="#">oam</a> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.2 for MX, T, ACX Series routers, SRX firewalls, M320 and EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.</p> <p><b>connectivity-fault-management</b> introduced in Junos OS Release 10.2 for EX Series switches.</p>
<b>Description</b>	<p>Provide IEEE 802.3ah Operation, Administration, and Maintenance (OAM) support for Ethernet interfaces or configure connectivity fault management (CFM) for IEEE 802.1ag Operation, Administration, and Management (OAM) support.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p> <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Enabling IEEE 802.3ah OAM Support</i></li> <li>• <i>Example: Configuring Ethernet OAM Link Fault Management</i></li> </ul>

## ethernet-policer-profile

```
Syntax ethernet-policer-profile {
    input-priority-map {
        ieee802.1p premium [ values ];
    }
    output-priority-map {
        classifier {
            premium {
                forwarding-class class-name {
                    loss-priority (high | low);
                }
            }
        }
    }
    policer cos-policer-name {
        aggregate {
            bandwidth-limit bps;
            burst-size-limit bytes;
        }
        premium {
            bandwidth-limit bps;
            burst-size-limit bytes;
        }
    }
}
```

**Hierarchy Level** [edit interfaces *interface-name* gigether-options [ethernet-switch-profile](#)],  
[edit interfaces *interface-name* aggregated-ether-options [ethernet-switch-profile](#)]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description**



**NOTE:** On QFX Series standalone switches, this statement hierarchy is only supported on the Enhanced Layer 2 Switching CLI.

For Gigabit Ethernet IQ, 10-Gigabit Ethernet, Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and 100-Gigabit Ethernet Type 5 PIC with CFP, configure a class of service (CoS)-based policer. Policing applies to the inner VLAN identifiers, not to the outer tag. For Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), the **premium** policer is not supported.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation** • *Configuring Gigabit Ethernet Policers*

## ethernet-ring

**Syntax**

```
ethernet-ring ring-name {
  control-vlan (vlan-id | vlan-name);
  data-channel {
    vlan number
  }
  east-interface {
    control-channel channel-name {
      vlan number;
      interface name interface-name
    }
  }
  guard-interval number;
  node-id mac-address;
  restore-interval number;
  ring-protection-link-owner;
  west-interface {
    control-channel channel-name {
      vlan number;
    }
  }
}
```

**Hierarchy Level** [edit protocols [protection-group](#)]

**Release Information** Statement introduced in Junos OS Release 9.4.  
Statement introduced in Junos OS Release 12.1 for EX Series switches.  
Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.

**Description** For Ethernet PICs on MX Series routers or for EX Series switches, , specify the Ethernet ring in an Ethernet ring protection switching configuration.

**Options** *ring-name*—Name of the Ethernet protection ring.  
  
The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Ethernet Ring Protection Switching Overview*
- *Example: Configuring Ethernet Ring Protection Switching on EX Series Switches*
- *Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS*
- *Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)*

## ethernet-switch-profile

**Syntax**

```

ethernet-switch-profile {
  ethernet-policer-profile {
    input-priority-map {
      ieee802.1p premium [values];
    }
    output-priority-map {
      classifier {
        premium {
          forwarding-class class-name {
            loss-priority (high | low);
          }
        }
      }
    }
  }
  policer cos-policer-name {
    aggregate {
      bandwidth-limit bps;
      burst-size-limit bytes;
    }
    premium {
      bandwidth-limit bps;
      burst-size-limit bytes;
    }
  }
  storm-control storm-control-profile;
  tag-protocol-id tpid;
}
mac-learn-enable;
}

```

**Hierarchy Level** [edit interfaces *interface-name* [gigether-options](#)],  
 [edit interfaces *interface-name* [aggregated-ether-options](#)],  
 [edit interfaces *interface-name* aggregated-ether-options],  
 [edit interfaces *interface-name* ether-options]

**Release Information** Statement introduced before Junos OS Release 7.4.  
 Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.  
 Statement introduced in Junos OS Release 13.2 for the QFX Series.  
 Statement introduced in Junos OS Release 13.2X50-D15 for the EX Series switches.

**Description**



**NOTE:** On QFX Series standalone switches, the `ethernet-policer-profile` CLI hierarchy and the `mac-learn-enable` statement are supported only on the Enhanced Layer 2 Switching CLI.

For Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2 and IQ2-E, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC, aggregated Ethernet with Gigabit Ethernet IQ interfaces, the built-in Gigabit Ethernet port on the M7i router); 100-Gigabit

Ethernet Type 5 PIC with CFP; and Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces on EX Series switches, configure VLAN tag and MAC address accounting and filtering properties.

The remaining statements are explained separately. See [CLI Explorer](#).



**NOTE:** When you gather interfaces into a bridge domain, the `no-mac-learn-enable` statement at the [edit interfaces *interface-name* *gigether-options* ethernet-switch-profile] hierarchy level is not supported. You must use the `no-mac-learning` statement at the [edit bridge-domains *bridge-domain-name* bridge-options interface *interface-name*] hierarchy level to disable MAC learning on an interface in a bridge domain. For information on disabling MAC learning for a bridge domain, see the *MX Series Layer 2 Configuration Guide*.

**Default** If the `ethernet-switch-profile` statement is not configured, Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router) behave like Gigabit Ethernet interfaces.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Gigabit Ethernet Policers*
- *Configuring MAC Address Filtering*
- *Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview*
- *Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support (CLI Procedure)*

## eui-64

---

<b>Syntax</b>	eui-64;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>number</i> <b>family</b> inet6 address <i>address</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.3 for EX Series switches. Statement introduced in Junos OS Release 12.2 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	For interfaces that carry IP version 6 (IPv6) traffic, automatically generate the host number portion of interface addresses.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Interface Address on page 207</a></li></ul>

## evcs

---

<b>Syntax</b>	<pre>evcs evc-id {     evc-protocol cfm;     remote-uni-count count;     multipoint-to-multipoint; }</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	On MX Series routers with <b>ge</b> , <b>xe</b> , or <b>ae</b> interfaces, configure an OAM Ethernet virtual connection.
<b>Options</b>	<p><b>remote-uni-count <i>count</i></b>—(Optional) Specify the number of remote UNIs in the EVC configuration, the default is 1.</p> <p><b>multipoint-to-multipoint</b>—(Optional) Specify multiple points in the EVC configuration, the default is point-to-point if <b>remote-uni-count</b> is 1.</p> <p>Remaining options are explained separately.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Ethernet Local Management Interface</i></li> <li><a href="#">lmi (Ethernet OAM) on page 740</a></li> </ul>

## event (LFM)

---

<b>List of Syntax</b>	<a href="#">Syntax: MX, M, T, ACX Series Routers, SRX Firewalls and EX Series Switches on page 600</a> <a href="#">Syntax: EX Series Switches and NFX Series Devices on page 600</a>
<b>Syntax: MX, M, T, ACX Series Routers, SRX Firewalls and EX Series Switches</b>	<pre>event {   link-adjacency-loss;   link-event-rate {     frame-error count;     frame-period count;     frame-period-summary count;     symbol-period count;   }   protocol-down; }</pre>
<b>Syntax: EX Series Switches and NFX Series Devices</b>	<pre>event {   link-adjacency-loss;   link-event-rate {     frame-error count;     frame-period count;     frame-period-summary count;     symbol-period count;   } }</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5 for MX, M, T, ACX Series routers, SRX Series firewalls and EX Series switches. Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX devices.
<b>Description</b>	Configure link events in an action profile for Ethernet OAM link fault management (LFM).  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring Protocol Status</i></li><li>• <i>Configuring Ethernet OAM Link Fault Management (CLI Procedure)</i></li></ul>

---

## event-thresholds

---

<b>Syntax</b>	<pre>event-thresholds {     frame-error count;     frame-period count;     frame-period-summary count;     symbol-period count; }</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam link-fault-management interface interface-name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	<p>Configure threshold limit values for link events in periodic OAM PDUs.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Threshold Values for Local Fault Events on an Interface</i></li></ul>

## fast-aps-switch

---

<b>Syntax</b>	<code>fast-aps-switch;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <b>aps</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1.
<b>Description</b>	(M320 routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only, EX Series switches, and MX series routers with Channelized OC3/STM1 Circuit Emulation PIC with SFP only using container interfaces) Reduce the Automatic Protection Switching (APS) switchover time in Layer 2 circuits.



---

**NOTE:**

- The fast APS switching feature is supported only within a single chassis on a MX series router using a container interface.
  - Configuring this statement reduces the APS switchover time only when the Layer 2 circuit encapsulation type for the interface receiving traffic from a Layer 2 circuit neighbor is SAToP.
  - When the `fast-aps-switch` statement is configured in revertive APS mode, you must configure an appropriate value for revert time to achieve reduction in APS switchover time.
  - To prevent the logical interfaces in the data path from being shut down, configure appropriate hold-time values on all the interfaces in the data path that support TDM.
  - The `fast-aps-switch` statement cannot be configured when the APS annex-b option is configured.
  - The interfaces that have the `fast-aps-switch` statement configured cannot be used in virtual private LAN service (VPLS) environments.
- 

<b>Required Privilege</b>	interface—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Reducing APS Switchover Time in Layer 2 Circuits</i></li></ul>
------------------------------	---

## f-max-period

<b>Syntax</b>	<code>f-max-period <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">rtp</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For all adaptive services interfaces and for ISDN interfaces on J Series Services Routers. Specify the maximum number of compressed packets allowed between the transmission of full headers in a compressed Real-Time Transport Protocol (RTP) traffic stream.
<b>Options</b>	<i>number</i> —Maximum number of packets. The value can be from 1 through <b>65535</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Bandwidth on Demand</i></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## facility-override

<b>Syntax</b>	<code>facility-override <i>facility-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">services-options</a> <a href="#">sysloghost</a> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Override default facility for system log reporting.
<b>Options</b>	<i>facility-name</i> —Name of facility that overrides the default assignment.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## failover-delay

---

<b>Syntax</b>	<code>failover-delay <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	[edit protocols vrrp]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	Configure the failover delay for VRRP and VRRP for IPv6 operations.
<b>Options</b>	<b><i>milliseconds</i></b> —Specify the failover delay time, in milliseconds. <b>Range:</b> 50 through 2000
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring VRRP and VRRP for IPv6</i></li></ul>

## family (Dynamic Standard Interface)

```
Syntax  family family {
    access-concentrator name;
    address address;
    direct-connect;
    duplicate-protection;
    dynamic-profile profile-name;
    filter {
        adf {
            counter;
            input-precedence precedence;
            not-mandatory;
            output-precedence precedence;
            rule rule-value;
        }
        input filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
        output filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
    }
    mac-validate (loose | strict);
    max-sessions number;
    max-sessions-vs-a-ignore;
    rpf-check {
        fail-filter filter-name;
        mode loose;
    }
    service {
        input {
            service-set service-set-name {
                service-filter filter-name;
            }
            post-service-filter filter-name;
        }
        output {
            service-set service-set-name {
                service-filter filter-name;
            }
        }
    }
    service-name-table table-name;
    short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
        maximum-seconds> <filter [aci]>;
    unnumbered-address interface-name <preferred-source-address address>;
}
```

Hierarchy Level [edit [dynamic-profiles](#) *profile-name* [interfaces](#) *interface-name* [unit](#) *logical-unit-number*]

**Release Information** Statement introduced in Junos OS Release 9.2.  
**ppoe** option added in Junos OS Release 11.2.

**Description** Configure protocol family information for the logical interface.



**NOTE:** Not all subordinate stanzas are available to every protocol family.

**Options** *family*—Protocol family:

- **inet**—IP version 4 suite
- **inet6**—IP version 6 suite
- **ppoe**—(MX Series routers with MPCs only) Point-to-Point Protocol over Ethernet
- **vpls**—Virtual private LAN service

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** *interface*—To view this statement in the configuration.  
*interface-control*—To add this statement to the configuration.

**Related Documentation**

- *Example: Configuring Static Routing on Logical Systems*
- [Configuring the Protocol Family on page 206](#)

## family

```

Syntax  family family {
        accounting {
            destination-class-usage;
            source-class-usage {
                (input | output | input output);
            }
        }
        access-concentrator name;
        address address {
            ... the address subhierarchy appears after the main [edit interfaces interface-name unit
                logical-unit-number family family-name] hierarchy ...
        }
        bundle interface-name;
        core-facing;
        demux-destination {
            destination-prefix;
        }
        demux-source {
            source-prefix;
        }
        direct-connect;
        duplicate-protection;
        dynamic-profile profile-name;
        filter {
            group filter-group-number;
            input filter-name;
            input-list [ filter-names ];
            output filter-name;
            output-list [ filter-names ];
        }
        interface-mode (access | trunk);
        ipsec-sa sa-name;
        keep-address-and-control;
        mac-validate (loose | strict);
        max-sessions number;
        max-sessions-vsa-ignore;
        mtu bytes;
        multicast-only;
        negotiate-address;
        no-redirects;
        policer {
            arp policer-template-name;
            input policer-template-name;
            output policer-template-name;
        }
        primary;
        protocols [inet iso mpls];
        proxy inet-address address;
        receive-options-packets;
        receive-ttl-exceeded;
        remote (inet-address address | mac-address address);
        rpf-check {

```

```

fail-filter filter-name
mode loose;
}
sampling {
input;
output;
}
service {
input {
post-service-filter filter-name;
service-set service-set-name <service-filter filter-name>;
}
output {
service-set service-set-name <service-filter filter-name>;
}
}
service-name-table table-name;
short-cycle-protection < lockout-time-min minimum-seconds lockout-time-max
maximum-seconds> <filter [aci]>;
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name destination address destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];
address address {
arp ip-address (mac | multicast-mac) mac-address <publish>;
broadcast address;
destination address;
destination-profile name;
eui-64;
master-only;
multipoint-destination address dlci dlci-identifier;
multipoint-destination address {
epd-threshold cells;
inverse-arp;
oam-liveness {
up-count cells;
down-count cells;
}
oam-period (disable | seconds);
shaping {
(cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
sustained rate);
queue-length number;
}
vci vpi-identifier.vci-identifier;
}
preferred;
primary;
vrrp-group group-id {
(accept-data | no-accept-data);
advertise-interval seconds;
authentication-key key;
authentication-type authentication;
fast-interval milliseconds;

```

```

    (preempt | no-preempt) {
        hold-time seconds;
    }
    priority number;
    track {
        interface interface-name {
            bandwidth-threshold bits-per-second priority-cost priority;
            priority-cost priority;
        }
        priority-hold-time seconds;
        route prefix routing-instance instance-name priority-cost priority;
    }
    }
    virtual-address [ addresses ];
    }
    virtual-link-local-address ipv6-address;
    }
}

```

**Hierarchy Level** [edit interfaces *interface-name* **unit** *logical-unit-number*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* **unit** *logical-unit-number*]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Option **max-sessions-vs-a-ignore** introduced in Junos OS Release 11.4.

**Description** Configure protocol family information for the logical interface.



**NOTE:** Not all subordinate statements are available to every protocol family.

**Options** *family*— Protocol family:

- **any**—Protocol-independent family used for Layer 2 packet filtering



**NOTE:** This option is not supported on T4000 Type 5 FPCs.

- **bridge**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation. You can optionally configure this protocol family for the logical interface on which you configure VPLS.
- **ethernet-switching**—(M Series and T Series routers only) Configure only when the physical interface is configured with **ethernet-bridge** type encapsulation or when the logical interface is configured with **vlan-bridge** type encapsulation
- **ccc**—Circuit cross-connect protocol suite. You can configure this protocol family for the logical interface of CCC physical interfaces. When you use this encapsulation type, you can configure the **ccc** family only.
- **inet**—Internet Protocol version 4 suite. You must configure this protocol family for the logical interface to support IP protocol traffic, including Open Shortest Path First (OSPF), Border Gateway Protocol (BGP), Internet Control Message Protocol (ICMP), and Internet Protocol Control Protocol (IPCP).
- **inet6**—Internet Protocol version 6 suite. You must configure this protocol family for the logical interface to support IPv6 protocol traffic, including Routing Information Protocol for IPv6 (RIPng), Intermediate System-to-Intermediate System (IS-IS), BGP, and Virtual Router Redundancy Protocol for IPv6 (VRRP).
- **iso**—International Organization for Standardization Open Systems Interconnection (ISO OSI) protocol suite. You must configure this protocol family for the logical interface to support IS-IS traffic.
- **mlfr-end-to-end**—Multilink Frame Relay FRF.15. You must configure this protocol or multilink Point-to-Point Protocol (MLPPP) for the logical interface to support multilink bundling.
- **mlfr-uni-nni**—Multilink Frame Relay FRF.16. You must configure this protocol or **mlfr-end-to-end** for the logical interface to support link services and voice services bundling.
- **multilink-ppp**—Multilink Point-to-Point Protocol. You must configure this protocol (or **mlfr-end-to-end**) for the logical interface to support multilink bundling.
- **mpls**—Multiprotocol Label Switching (MPLS). You must configure this protocol family for the logical interface to participate in an MPLS path.
- **pppoe**—Point-to-Point Protocol over Ethernet
- **tcc**—Translational cross-connect protocol suite. You can configure this protocol family for the logical interface of TCC physical interfaces.

- **tnp**—Trivial Network Protocol. This protocol is used to communicate between the Routing Engine and the router's packet forwarding components. The Junos OS automatically configures this protocol family on the router's internal interfaces only, as discussed in [“Understanding Internal Ethernet Interfaces” on page 15](#).
- **vpls**—(M Series and T Series routers only) Virtual private LAN service. You can optionally configure this protocol family for the logical interface on which you configure VPLS. VPLS provides an Ethernet-based point-to-multipoint Layer 2 VPN to connect customer edge (CE) routers across an MPLS backbone. When you configure a VPLS encapsulation type, the **family vpls** statement is assumed by default.

MX Series routers support dynamic profiles for VPLS pseudowires, VLAN identifier translation, and automatic bridge domain configuration.

For more information about VPLS, see the *Junos OS VPNs Library for Routing Devices*.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

<b>Required Privilege</b>	interface— To view this statement in the configuration.
<b>Level</b>	interface-control— To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Protocol Family on page 206</a></li> </ul>
------------------------------	---

## fastether-options

---

**Syntax**    fastether-options {  
              802.3ad {  
                  aex (primary | backup);  
                  lACP {  
                      port-priority;  
                  }  
              }  
              (flow-control | no-flow-control);  
              ignore-l3-incompletes;  
              ingress-rate-limit *rate*;  
              (loopback | no-loopback);  
              mpls {  
                  pop-all-labels {  
                      required-depth *number*;  
                  }  
              }  
              source-address-filter {  
                  mac-address;  
              }  
              (source-filtering | no-source-filtering);  
          }

**Hierarchy Level**    [edit interfaces *interface-name*]

**Release Information**    Statement introduced before Junos OS Release 7.4.


**Description**    Configure Fast Ethernet-specific interface properties.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**    • *Ethernet Interfaces Overview*

## fcs

<b>Syntax</b>	fcs (16   32);
<b>Hierarchy Level</b>	[edit interfaces e1- <i>fpc/pic/port</i> ], [edit interfaces t1- <i>fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> ds0- <a href="#">options</a> ], [edit interfaces <i>interface-name</i> e1- <a href="#">options</a> ], [edit interfaces <i>interface-name</i> e3- <a href="#">options</a> ], [edit interfaces <i>interface-name</i> sonet- <a href="#">options</a> ], [edit interfaces <i>interface-name</i> t1- <a href="#">options</a> ], [edit interfaces <i>interface-name</i> t3- <a href="#">options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	<p>For E1/E3, SONET/SDH, and T1/T3 interfaces, configure the frame checksum (FCS) on the interface. The checksum must be the same on both ends of the interface.</p> <p>On a channelized OC12 interface, the SONET/SDH <b>fcs</b> statement is not supported. To configure FCS on each DS3 channel, you must include the <b>t3-options fcs</b> statement in the configuration for each channel. For SONET/SDH, the channelized OC12 interface supports DS3 to STS-1 to OC12. For SDH, the channelized OC12 interface supports NxDS3 to NxVC3 to AU3 to STM.</p>
	<div>  <p><b>NOTE:</b> When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the <b>fcs</b> statement must be included at the [edit interfaces e1-<i>fpc/pic/port</i>] or [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</p> </div>
<b>Options</b>	<p><b>16</b>—Use a 16-bit frame checksum on the interface.</p> <p><b>32</b>—Use a 32-bit frame checksum on the interface. Using a 32-bit checksum provides more reliable packet verification, but some older equipment might not support 32-bit checksums.</p> <p><b>Default:</b> 16</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the E1 Frame Checksum</i></li> <li>• <i>Configuring the E3 Frame Checksum</i></li> <li>• <i>Configuring the SONET/SDH Frame Checksum</i></li> <li>• <i>Configuring the T1 Frame Checksum</i></li> </ul>

- *Configuring the T3 Frame Checksum*

## feac-loop-respond


---

<b>Syntax</b>	(feac-loop-respond   no-feac-loop-respond);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>t3-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For T3 interfaces only, configure the router so a remote CSU can place the local router into loopback.</p> <p>If you configure remote or local loopback with the T3 <b>loopback</b> statement, the router does not respond to FEAC requests from the CSU even if you include the <b>feac-loop-respond</b> statement in the configuration. For the router to respond, you must delete the <b>loopback</b> statement from the configuration.</p> <p>You must rollback the setting done on the remote CSU prior to deactivating the <b>feac-loop-respond</b> statement. If the remote CSU cannot comply, clear the remote loop through local configuration to achieve the cleanup. For example, configure remote loopback on the interface and then delete the remote loopback.</p>
<b>Default</b>	The router does not respond to FEAC requests.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the T3 FEAC Response</i></li><li>• <a href="#">loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3) on page 752</a></li><li>• <a href="#">remote-loopback-respond on page 929</a></li></ul>

## fec (gigether)

<b>Syntax</b>	fec (fec91   none)
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 16.1R1</p> <p>Statement introduced in Junos OS Release 16.1X65D30 for PTX1000 routers</p> <p>Statement introduced in Junos OS Release 17.1R1 for PTX5000 routers</p> <p>Statement introduced in Junos OS Release 17.3R1 for MX10003 routers</p> <p>Statement introduced in Junos OS Release 17.4R1 for MX204 routers</p>
<b>Description</b>	<p>(MX Series Routers with MPC7E, MPC8E, and MPC9E, MX10003 Router with MX10003 MPC, MX204 Router, PTX1000, PTX5000) Enable or disable RS-FEC (Reed-Solomon Forward Error Correction) for a 100-Gigabit Ethernet interface. By default, the Junos OS software enables or disables forward error correction based on the plugged-in optics. For instance, Junos OS software enables RS-FEC for 100G SR4 optics and disables RS-FEC for 100G LR4 optics.</p> <p>This statement allows you to override the default behavior and explicitly enable or disable RS-FEC. For instance, you can extend the reach of 100G LR4 optics when you explicitly enable RS-FEC for the optics. RS-FEC is compliant with IEEE 802.3-2015 Clause 91.</p> <p>Once you enable or disable RS-FEC using this statement, this behavior applies to any 100-Gigabit Ethernet optical transceiver installed in the port associated with the interface. Delete the statement and commit the configuration to return to the default behavior.</p>
<b>Default</b>	Junos OS software automatically enables or disables RS-FEC based on the type of pluggable optics used.
<b>Options</b>	<p><b>fec91</b>—Enables RS-FEC. RS-FEC is compliant with IEEE 802.3-2015 Clause 91.</p> <p><b>none</b>—Disables RS-FEC.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>MPC7E (Multi-Rate) on MX Series Routers Overview</i></li> <li>• <i>MPC8E on MX Series Routers Overview</i></li> <li>• <i>MPC9E on MX Series Routers Overview</i></li> <li>• <i>Determining Transceiver Support for the PTX1000</i></li> </ul>

## filter

Syntax	<pre>filter {   group <i>filter-group-number</i>;   input <i>filter-name</i>;   input-list [ <i>filter-names</i> ];   output <i>filter-name</i>;   output-list [ <i>filter-names</i> ]; }</pre>
Hierarchy Level	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> <i>family</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>family</i>]</pre>
Release Information	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p>
Description	<p> <b>NOTE:</b> On EX Series switches, the <code>group</code>, <code>input-list</code>, <code>output-filter</code> statements are not supported under the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> inet]</code>, <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> inet6]</code>, and <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> mpls]</code> hierarchies.</p> <p>Apply a filter to an interface. You can also use filters for encrypted traffic. When you configure filters, you can configure them under the <b>family</b> <code>ethernet-switching</code>, <code>inet</code>, <code>inet6</code>, <code>mpls</code>, or <code>vpls</code> only.</p>
Options	<p><b>group</b> <i>filter-group-number</i>—Define an interface to be part of a filter group. The default filter group number is 0.</p> <p><b>Range:</b> 0 through 255</p> <p><b>input</b> <i>filter-name</i>—Name of one filter to evaluate when packets are received on the interface.</p> <p><b>output</b> <i>filter-name</i>—Name of one filter to evaluate when packets are transmitted on the interface.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li>• <a href="#">Applying a Filter to an Interface on page 235</a></li> <li>• <a href="#">Junos OS Administration Library</a></li> </ul>

- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Firewall Filters (CLI Procedure)*
- *family*

## filter (Applying to an Interface)

<b>Syntax</b>	<pre>filter {   input <i>filter-name</i>;   output <i>filter-name</i>; }</pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i>]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Apply a filter to an interface. You can also use filters for encrypted traffic. When you configure filters, you can configure the family <b>inet</b> , <b>inet6</b> , <b>mpls</b> , or <b>vpls</b> only.
<b>Options</b>	<p><b>input <i>filter-name</i></b>—Name of one filter to evaluate when packets are received on the interface.</p> <p><b>output <i>filter-name</i></b>—Name of one filter to evaluate when packets are transmitted on the interface.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>simple-filter</i></li> <li>• <i>Configuring and Applying Tricolor Marking Policers</i></li> <li>• <i>Example: Classifying Packets Based on Their Destination Address</i></li> <li>• <i>Example: Configuring and Verifying a Complex Multifield Filter</i></li> <li>• <i>Example: Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets</i></li> <li>• <i>Configuring a Simple Filter</i></li> <li>• <i>Configuring Policers Based on Logical Interface Bandwidth</i></li> <li>• <i>Effect of Two-Color Policers on Shaping Rate Changes</i></li> </ul>

## flexible-vlan-tagging

---

<b>Syntax</b>	flexible-vlan-tagging;
<b>Hierarchy Level</b>	[edit interfaces aex], [edit interfaces ge- <i>fpc/pic/port</i> ], [edit interfaces et- <i>fpc/pic/port</i> ], [edit interfaces ps0], [edit interfaces xe- <i>fpc/pic/port</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1. Support for aggregated Ethernet added in Junos OS Release 9.0. Statement introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers. Statement introduced in Junos OS Release 13.2X50-D15 for EX Series switches. Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.
<b>Description</b>	<p>Support simultaneous transmission of 802.1Q VLAN single-tag and dual-tag frames on logical interfaces on the same Ethernet port, and on pseudowire logical interfaces.</p> <p>This statement is supported on M Series and T Series routers, for Fast Ethernet and Gigabit Ethernet interfaces only on Gigabit Ethernet IQ2 and IQ2-E, IQ, and IQE PICs, and for aggregated Ethernet interfaces with member links in IQ2, IQ2-E, and IQ PICs or in MX Series DPCs, or on Ethernet interfaces for PTX Series Packet Transport Routers or 100-Gigabit Ethernet Type 5 PIC with CFP.</p> <p>This statement is supported on Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces on EX Series and QFX Series switches.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Enabling VLAN Tagging</i></li><li>• <i>Configuring Flexible VLAN Tagging on PTX Series Packet Transport Routers</i></li><li>• <i>Configuring Double-Tagged VLANs on Layer 3 Logical Interfaces</i></li></ul>

## flow-control

**Syntax** (flow-control | no-flow-control);

**Hierarchy Level** [edit interfaces *interface-name* [aggregated-ether-options](#)],  
[edit interfaces *interface-name* ether-options],  
[edit interfaces *interface-name* [fastether-options](#)],  
[edit interfaces *interface-name* [gigether-options](#)],  
[edit interfaces *interface-name* [multiservice-options](#)],  
[edit interfaces interface-range *name* [aggregated-ether-options](#)],  
[edit interfaces interface-range *name* ether-options]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 9.0 in EX Series switches.  
Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.

**Description** For aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, explicitly enable flow control, which regulates the flow of packets from the router or switch to the remote side of the connection. Enabling flow control is useful when the remote device is a Gigabit Ethernet switch. Flow control is not supported on the 4-port Fast Ethernet PIC.



**NOTE:** On the Type 5 FPC, to prioritize control packets in case of ingress oversubscription, you must ensure that the neighboring peers support MAC flow control. If the peers do not support MAC flow control, then you must disable flow control.

**Default** Flow control is enabled.



**NOTE:** Flow control is enabled by default only on physical interfaces and it is disabled by default on aggregated Ethernet interfaces.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Flow Control*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure) for EX Series Switches with ELS support*

## flow-control-options

---

**Syntax**    flow-control-options {  
              down-on-flow-control;  
              dump-on-flow-control;  
              reset-on-flow-control;  
              up-on-flow-control;  
              }

**Hierarchy Level**    [edit interfaces *mo-fpc/pic/port* multiservice-options]

**Release Information**    Statement introduced before Junos OS Release 8.4.

**Description**    Configure the flow control options for application recovery in case of a prolonged flow control failure.

- **down-on-flow-control**—Bring interface down during prolonged flow control.
- **dump-on-flow-control**—Cause core dump during prolonged flow control.



**NOTE:** Starting with Junos OS Release 15.1, on MX Series routers with MS-MICs and MS-MPCs, instead of an eJunos kernel core file, the multiservices PIC management daemon (mispmand) core file is generated when a prolonged flow control failure occurs and when you configure the setting to generate a core dump during prolonged flow control (by using the **dump-on-flow-control** option with the **flow-control-options** statement). The watchdog functionality continues to generate a kernel core file in such scenarios.

- 
- **reset-on-flow-control**—Reset interface during prolonged flow control.



**NOTE:** Starting in Junos OS Release 16.1R7, the **reset-on-flow-control** option has no effect on the MS-MIC, MS-MPC, MS-DPC, MS-PIC 100, MS-PIC 400, and MS-PIC 500 line cards. This is because starting in Release 16.1R7, Junos OS restarts these line cards to recover them from stuck state due to prolonged flow control.

- 
- **up-on-flow-control**—Cause interface to remain in stuck state until you manually restart the PICs.



**NOTE:** Starting in Junos OS Release 16.1R7, if interfaces on an MS-PIC or MS-DPC are in stuck state because of prolonged flow control, Junos OS restarts the service PICs to recover them from this state. However, if you want the PICs to remain in stuck state until you manually restart the PICs,

configure the **up-on-flow-control** option. In releases before Release 16.1R7, there is no action taken to recover service PICs from this state unless one of the options for the **flow-control-options** statement is configured, or service PIC is manually restarted.

---

**Usage Guidelines** See *Configuring Flow Monitoring on T Series and M Series Routers and EX9200 Switches*.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

## force

---

**Syntax** force (protect | working);

**Hierarchy Level** [edit interfaces *interface-name* sonet-options [aps](#)]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Perform a forced switch between the protect and working circuits. This statement is honored only if there are no higher-priority reasons to switch. It can be overridden by a signal failure on the protect circuit, thus causing a switch to the working circuit.

**Options** **protect**—Request the circuit to become the protect circuit.  
**working**—Request the circuit to become the working circuit.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Switching Between the Working and Protect Circuits*
- [request on page 931](#)

## forward-and-send-to-re

---

<b>Syntax</b>	forward-and-send-to-re;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet <b>targeted-broadcast</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet <b>targeted-broadcast</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	Specify that IP packets destined for a Layer 3 broadcast address be forwarded to an egress interface and the Routing Engine. The packets are broadcast only if the egress interface is a LAN interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Targeted Broadcast on page 272</a></li><li>• <a href="#">targeted-broadcast on page 1011</a></li><li>• <a href="#">Understanding Targeted Broadcast on page 271</a></li></ul>

## forwarding-class (ATM2 IQ Scheduler Maps)

<b>Syntax</b>	<pre>forwarding-class <i>class-name</i> {     <b>epd-threshold</b> <i>cells plp1 cells</i>;     <b>linear-red-profile</b> <i>profile-name</i>;     <b>priority</b> (high   low);     <b>transmit-weight</b> (<i>cells number</i>   <i>percent number</i>); }</pre>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> atm-options <b>scheduler-maps</b> <i>map-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define forwarding class name and option values.
<b>Options</b>	<p><b><i>class-name</i></b>—Name of forwarding class.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li> <li>• <i>Applying Scheduler Maps to ATM Interfaces</i></li> </ul>

## forwarding-class (Gigabit Ethernet IQ Classifier)

---

<b>Syntax</b>	<code>forwarding-class <i>class-name</i> {     <code>loss-priority</code> (high   low); }</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <code>ethernet-switch-profile</code> <code>ethernet-policer-profile output-priority-map classifier premium</code> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For Gigabit Ethernet IQ interfaces only, define forwarding class name and option values.
<b>Options</b>	<p><code>class-name</code>—Name of forwarding class.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Specifying an Output Priority Map</i></li><li>• <a href="#">input-priority-map on page 677</a></li><li>• <code>forwarding-class</code> statement in the <i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i></li></ul>

## forward-only

---

<b>Syntax</b>	forward-only;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet <b>targeted-broadcast</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet <b>targeted-broadcast</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	Specify that IP packets destined for a Layer 3 broadcast address be forwarded to an egress interface only. The packets are broadcast only if the egress interface is a LAN interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Targeted Broadcast on page 272</a></li> <li>• <a href="#">targeted-broadcast on page 1011</a></li> <li>• <a href="#">Understanding Targeted Broadcast on page 271</a></li> </ul>

## fragment-threshold

---

<b>Syntax</b>	fragment-threshold <i>bytes</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>mlfr-uni-nni-bundle-options</b> ], [edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For multilink, link services, and voice services interfaces, set the fragmentation threshold.
<b>Options</b>	<b>bytes</b> —Maximum size, in bytes, for multilink packet fragments. Any nonzero value must be a multiple of 64 bytes. <b>Range:</b> 128 through 16,320 bytes <b>Default:</b> 0 bytes (no fragmentation)
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Junos OS Services Interfaces Library for Routing Devices</a></li> </ul>

## frame-error

---

<b>Syntax</b>	<code>frame-error count;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile event link-event-rate</a> ], [edit protocols <a href="#">oam link-fault-management interface <i>interface-name</i> event-thresholds</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	<p>Threshold for sending frame error events or taking the action specified in the action profile.</p> <p>A frame error is any frame error on the underlying physical layer. The threshold is reached when the number of frame errors reaches the configured value within the window.</p> <p>The window or period during which frame errors are counted is 5 seconds or multiples of it (with a maximum value of 1 minute). This window denotes the duration as intervals of 100 milliseconds, encoded as a 16-bit unsigned integer. This window is not configurable in Junos OS. According to the IEEE 802.3ah standard, the default value of the frame-errors window is 1 second. This window has a lower bound of 1 second and an upper bound of 1 minute.</p>
<b>Options</b>	<p><b>count</b>—Threshold count for frame error events.</p> <p><b>Range:</b> 0 through 100</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Threshold Values for Local Fault Events on an Interface</i></li><li>• <i>Configuring Threshold Values for Fault Events in an Action Profile</i></li></ul>

## frame-period

---


<b>Syntax</b>	<code>frame-period count;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile event link-event-rate</a> ], [edit protocols <a href="#">oam link-fault-management interface interface-name event-thresholds</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	<p>Threshold for sending frame period error events or taking the action specified in the action profile.</p> <p>A frame error is any frame error on the underlying physical layer. The frame period threshold is reached when the number of frame errors reaches the configured value within the period window. The default period window is the number of minimum-size frames that can be transmitted on the underlying physical layer in 1 second. The window is not configurable.</p>
<b>Options</b>	<p><b>count</b>—Threshold count for frame period error events.</p> <p><b>Range:</b> 0 through 100</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Threshold Values for Local Fault Events on an Interface</i></li> <li>• <i>Configuring Threshold Values for Fault Events in an Action Profile</i></li> </ul>

## frame-period-summary

---

<b>Syntax</b>	<code>frame-period-summary count;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile event link-event-rate</a> ], [edit protocols <a href="#">oam link-fault-management interface interface-name event-thresholds</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	<p>Threshold for sending frame period summary error events or taking the action specified in the action profile.</p> <p>An errored frame second is any 1-second period that has at least one errored frame. This event is generated if the number of errored frame seconds is equal to or greater than the specified threshold for that period window. The default window is 60 seconds. The window is not configurable.</p>
<b>Options</b>	<p><b>count</b>—Threshold count for frame period summary error events.</p> <p><b>Range:</b> 0 through 100</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Threshold Values for Local Fault Events on an Interface</i></li><li>• <i>Configuring Threshold Values for Fault Events in an Action Profile</i></li></ul>

## framing (E1, E3, and T1 Interfaces)

<b>Syntax</b>	framing (g704   g704-no-crc4   g.751   g.832   unframed   sf   esf);
<b>Hierarchy Level</b>	[edit interfaces ce1- <i>fpc/pic/port</i> ], [edit interfaces ct1- <i>fpc/pic/port</i> ], [edit interfaces at- <i>fpc/pic/port</i> e3-options], [edit interfaces e1- <i>fpc/pic/port</i> e1-options], [edit interfaces t1- <i>fpc/pic/port</i> t1-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Configure the framing format.
	<div>  <p><b>NOTE:</b> When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the framing statement must be included at the [edit interfaces ce1-<i>fpc/pic/port</i>] or [edit interfaces ct1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</p> </div>
<b>Default</b>	esf for T1 interfaces; g704 for E1 interfaces. There is no default value for E3 over ATM interfaces.
<b>Options</b>	<p>esf—Extended superframe (ESF) mode for T1 interfaces.</p> <p>g704—G.704 framing format for E1 interfaces.</p> <p>g704-no-crc4—G.704 framing with no cyclic redundancy check 4 (CRC4) for E1 interfaces.</p> <p>g.751—G.751 framing format for E3 over ATM interfaces.</p> <p>g.832—G.832 framing format for E3 over ATM interfaces.</p> <p>sf—Superframe (SF) mode for T1 interfaces.</p> <p>unframed—Unframed mode for E1 interfaces.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring E1 Framing</li> <li>Configuring E3 and T3 Parameters on ATM Interfaces</li> <li>Configuring T1 Framing</li> </ul>

## framing (10-Gigabit Ethernet Interfaces)

<b>Syntax</b>	<code>framing (lan-phy   wan-phy);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces xe-fpc/pic/port]</code> <code>[edit interfaces et-fpc/pic/port]</code> (PTX Series Packet Transport Routers and MX Series Routers)
<b>Release Information</b>	Statement introduced in Junos OS Release 8.0. Statement introduced in Junos OS Release 12.3R2 for PTX Series Packet Transport Routers.
<b>Description</b>	For routers supporting the 10-Gigabit Ethernet interface, configure the framing format. WAN PHY mode is supported on MX240, MX480, MX960, T640, T1600, T4000, and PTX Series Packet Transport Routers routers only.



### NOTE:

- The T4000 Core Router supports only LAN PHY mode in Junos OS Release 12.1R1. Starting with Junos OS Release 12.1R2, WAN PHY mode is supported on the T4000 routers with the 12-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-12XGE-SFPP). Starting with Junos OS Release 12.2, WAN PHY mode is supported on the T4000 routers with the 24-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-24XGE-SFPP).
- On PTX Series routers, WAN PHY mode is supported only on the 24-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ .
- When the PHY mode changes, interface traffic is disrupted because of port reinitialization.

<b>Default</b>	Operates in LAN PHY mode.
<b>Options</b>	<p><b>lan-phy</b>—10GBASE-R interface framing format that bypasses the WIS sublayer to directly stream block-encoded Ethernet frames on a 10-Gigabit Ethernet serial interface.</p> <p><b>wan-phy</b>—10GBASE-W interface framing format that allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and SONET devices.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>10-Gigabit Ethernet Framing Overview</i></li> <li>• <i>Configuring SONET Options for 10-Gigabit Ethernet Interfaces</i></li> </ul>

## framing (SONET and SDH Interfaces)

<b>Syntax</b>	<code>framing (sdh   sonet);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>so-fpc/pic/port</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	<p>This functionality allows you to mix SONET and SDH modes on interfaces on the same PIC.</p> <ul style="list-style-type: none"> <li>For the 4-port OC48 PIC with SFP installed and the 4-port OC192 PIC in T Series and M Series routers, configure SONET or SDH framing on a per-port basis.</li> <li>For 1-port OC192/STM64 MICs with XFP on MX Series routers, configure the SONET or SDH framing on the single port.</li> </ul>
<b>Default</b>	Default framing mode is <b>SONET</b> .
<b>Options</b>	<p><b>sdh</b>—SDH framing.</p> <p><b>sonet</b>—SONET framing.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring SONET/SDH Framing Mode for Ports</i></li> </ul>

## gigether-options

```
Syntax  gigether-options {
        802.3ad {
            aex (primary | backup);
            lacp {
                port-priority;
            }
        }
        (asynchronous-notification | no-asynchronous-notification);
        (auto-negotiation | no-auto-negotiation) remote-fault <local-interface-online |
        local-interface-offline>;
        fec
        (flow-control | no-flow-control);
        ignore-l3-incompletes;
        (loopback | no-loopback);
        mpls {
            pop-all-labels {
                required-depth number;
            }
        }
        no-auto-mdix
        source-address-filter {
            mac-address;
        }
        (source-filtering | no-source-filtering);
        speed
        ethernet-switch-profile {
            (mac-learn-enable | no-mac-learn-enable);
            tag-protocol-id [ tpids ];
            ethernet-policer-profile {
                input-priority-map {
                    ieee802.1p premium [ values ];
                }
                output-priority-map {
                    classifier {
                        premium {
                            forwarding-class class-name {
                                loss-priority (high | low);
                            }
                        }
                    }
                }
            }
        }
        policer cos-policer-name {
            aggregate {
                bandwidth-limit bps;
                burst-size-limit bytes;
            }
            premium {
                bandwidth-limit bps;
                burst-size-limit bytes;
            }
        }
    }
```

```
}
}
```

<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure Gigabit Ethernet specific interface properties.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Interfaces Overview</i></li> <li>• <i>gether-options (ACX Series)</i></li> </ul>

## gratuitous-arp-reply

<b>Syntax</b>	(gratuitous-arp-reply   no-gratuitous-arp-reply);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ] [edit interfaces <i>interface-range</i> <i>interface-range-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 in EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	For Ethernet interfaces, enable updating of the Address Resolution Protocol (ARP) cache for gratuitous ARPs.
<b>Default</b>	Updating of the ARP cache is disabled on all Ethernet interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Gratuitous ARP</i></li> <li>• <a href="#">no-gratuitous-arp-request on page 817</a></li> </ul>

## guard-interval

---

<b>Syntax</b>	<code>guard-interval <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit protocols <code>protection-group ethernet-ring <i>ring-name</i></code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.
<b>Description</b>	When a link goes down, the ring protection link (RPL) activates. When the downed link comes back up, the RPL link receives notification, restores the link, and waits for the restore interval before issuing another block on the same link. This configuration is a global configuration and applies to all Ethernet rings if the Ethernet ring does not have a more specific configuration for this value. If no parameter is configured at the protection group level, the global configuration of this parameter uses the default value.
<b>Options</b>	<b><i>number</i></b> —Guard timer interval, in milliseconds. <b>Range:</b> 10 through 2000 ms <b>Default:</b> 500 ms
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Ethernet Ring Protection Switching Overview</i></li><li>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i></li><li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li><li>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i></li></ul>

## hardware-assisted-timestamping

<b>Syntax</b>	hardware-assisted-timestamping;
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam</a> <a href="#">ethernet</a> <a href="#">connectivity-fault-management</a> <a href="#">performance-monitoring</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	<p>For Ethernet interfaces on Enhanced and Enhanced Queuing Dense Port Concentrators (DPCs) in MX Series routers only, enable hardware-assisted timestamping support for Ethernet frame delay measurement.</p> <p>By default, the ETH-DM feature calculates frame delays using software-based timestamping of the ETH-DM PDU frames sent and received by the MEPs in the session. As an option that can increase the accuracy of ETH-DM calculations when the DPC is loaded with heavy traffic in the receive direction, you can enable hardware-assisted timestamping of session frames in the receive direction.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Frame Delay Measurements Overview</i></li> <li>• <i>Guidelines for Configuring Routers to Support an ETH-DM Session</i></li> <li>• <i>Enabling the Hardware-Assisted Timestamping Option</i></li> </ul>

## high-plp-threshold

---

<b>Syntax</b>	<code>high-plp-threshold percent;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <a href="#">atm-options linear-red-profiles profile-name</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define CoS VC drop profile fill-level percentage when linear RED is applied to cells with high PLP. When the fill level exceeds the defined percentage, packets with high PLP are randomly dropped by RED. This statement is mandatory.
<b>Options</b>	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with PLP.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li><li>• <a href="#">high-plp-max-threshold on page 640</a></li><li>• <a href="#">low-plp-max-threshold on page 759</a></li><li>• <a href="#">low-plp-threshold on page 760</a></li><li>• <a href="#">queue-depth on page 915</a></li></ul>

---

## hello-timer

---

<b>Syntax</b>	hello-timer <i>milliseconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>mlfr-uni-nni-bundle-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voice services interfaces only, configure the rate at which hello messages are sent. A hello message is transmitted after a period defined in milliseconds has elapsed.
<b>Options</b>	<b>milliseconds</b> —The rate at which hello messages are sent. <b>Range:</b> 1 through 180 milliseconds <b>Default:</b> 10 milliseconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">acknowledge-timer on page 417</a></li><li>• <a href="#">address on page 424</a></li></ul>

## hierarchical-policer

---

**Syntax** hierarchical-policer *name* {  
    aggregate {  
        if-exceeding {  
            bandwidth-limit *bandwidth*;  
            burst-size-limit *burst*;  
        }  
        then {  
            discard;  
        }  
    }  
    premium {  
        if-exceeding {  
            bandwidth-limit *bandwidth*;  
            burst-size-limit *burst*;  
        }  
        then {  
            discard;  
        }  
    }  
}

**Hierarchy Level** [edit firewall]

**Release Information** Statement introduced in Junos OS Release 9.5.

**Description** For M40e, M120, and M320 (with FFPC and SFPC) edge routers and T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs, specify a hierarchical policer.

**Options** Options are described separately.

**Required Privilege Level** firewall—To view this statement in the configuration.  
firewall-control—To add this statement to the configuration.

**Related Documentation**

- [Applying Policers on page 226](#)
- *Class of Service Feature Guide for Routing Devices and EX9200 Switches*

## hierarchical-scheduler (Subscriber Interfaces on MX Series Routers)

<b>Syntax</b>	<pre> hierarchical-scheduler {     implicit-hierarchy;     maximum-hierarchy-levels <i>number</i>; } </pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 10.1.</p> <p><b>implicit-hierarchy</b> option added in Junos OS Release 13.1.</p> <p>Support on GRE tunnel interfaces configured on physical interfaces on MICs or MPCs in MX Series routers added in Junos OS Release 13.3.</p> <p>Support for up to four hierarchy levels added in Junos OS Release 16.1.</p>
<b>Description</b>	<p>Configure hierarchical scheduling options on the interface.</p> <p>The statement is supported on the following interfaces:</p> <ul style="list-style-type: none"> <li>• MIC and MPC interfaces in MX Series routers</li> <li>• GRE tunnel interfaces configured on physical interfaces hosted on MIC or MPC line cards in MX Series routers</li> </ul> <p>To enable hierarchical scheduling on MX Series routers, configure the <b>hierarchical-scheduler</b> statement at each member physical interface level of a particular aggregated Ethernet interface as well as at that aggregated Ethernet interface level. On other routing platforms, it is enough if you include this statement at the aggregated Ethernet interface level.</p>
<b>Options</b>	<p><b>implicit-hierarchy</b>—Configure four-level hierarchical scheduling. When you include the <b>implicit-hierarchy</b> option, a hierarchical relationship is formed between the CoS scheduler nodes at level 1, level 2, level 3, and level 4. The <b>implicit-hierarchy</b> option is supported only on MPC/MIC subscriber interfaces and interface sets on MX Series routers.</p> <p><b>maximum-hierarchy-levels <i>number</i></b>—Specify the maximum number of hierarchical scheduling levels allowed for node scaling, from 2 through 4 levels. The default number of levels is 3. The <b>maximum-hierarchy-levels</b> option is supported on MPC/MIC or EQ DPC subscriber interfaces and interface sets on MX Series routers.</p> <ul style="list-style-type: none"> <li>• If you set <b>maximum-hierarchy-levels</b> to 2, interface sets are not allowed. In this case, if you configure a level 2 interface set, you generate Packet Forwarding Engine errors.</li> <li>• If you do not include the <b>maximum-hierarchy-levels</b> option, keeping the default number of hierarchy levels at 3, interface sets can be at either level 2 or level 3, depending on whether the member logical interfaces within the interface set have a traffic control profile. If any member logical interface has a traffic control profile, then the interface set is a level 2 CoS scheduler node. If no member logical interface has a traffic control profile, the interface set is at level 3.</li> </ul>



**CAUTION:** MPC3E, 32x10GE MPC4E, and 2x100GE + 8x10GE MPC4E MPCs support only two levels of scheduling hierarchy. When enabling hierarchical scheduling on these cards, you must explicitly set `maximum-hierarchy-levels` to 2.

---

**Required Privilege Level** view-level—To view this statement in the configuration.  
control-level—To add this statement to the configuration.

**Related Documentation**

- *Understanding Hierarchical CoS for Subscriber Interfaces*
- *Configuring Hierarchical CoS for a Subscriber Interface of Aggregated Ethernet Links*
- *Configuring Hierarchical Schedulers for CoS*
- *Configuring Hierarchical CoS on a Static PPPoE Subscriber Interface*
- *Hierarchical CoS on MPLS Pseudowire Subscriber Interfaces Overview*

---

## high-plp-max-threshold

---

**Syntax** `high-plp-max-threshold percent;`

**Hierarchy Level** [edit interfaces *at-fpc/pic/port* [atm-options linear-red-profiles profile-name](#)]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For ATM2 IQ interfaces only, define the drop profile fill-level for the high PLP CoS VC. When the fill level exceeds the defined percentage, all packets are dropped.

**Options** *percent*—Fill-level percentage when linear random early discard (RED) is applied to cells with PLP.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *ATM2 IQ VC Tunnel CoS Components Overview*
- [low-plp-max-threshold on page 759](#)
- [low-plp-threshold on page 760](#)
- [queue-depth on page 915](#)


## high-plp-threshold

---

<b>Syntax</b>	<code>high-plp-threshold percent;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <a href="#">atm-options linear-red-profiles profile-name</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define CoS VC drop profile fill-level percentage when linear RED is applied to cells with high PLP. When the fill level exceeds the defined percentage, packets with high PLP are randomly dropped by RED. This statement is mandatory.
<b>Options</b>	<i>percent</i> —Fill-level percentage when linear RED is applied to cells with PLP.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li> <li>• <a href="#">high-plp-max-threshold on page 640</a></li> <li>• <a href="#">low-plp-max-threshold on page 759</a></li> <li>• <a href="#">low-plp-threshold on page 760</a></li> <li>• <a href="#">queue-depth on page 915</a></li> </ul>

## hold-interval (OAM)

---

<b>Syntax</b>	hold-interval <i>minutes</i> ;
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> <a href="#">continuity-check</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	The time to wait in minutes before flushing the maintenance association end point (MEP) database, if no updates occur. The configurable range is 1 minute through 30240 minutes. The default value is 10 minutes.
<div> <b>NOTE:</b> Hold timer based flushing is applicable only for auto discovered remote MEPs and not for statically configured remote MEPs.</div>	
<b>Options</b>	<i>minutes</i> —Time to wait, in minutes.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Continuity Check Protocol Parameters Overview</i></li><li>• <i>Configuring Continuity Check Protocol Parameters for Fault Detection</i></li></ul>

## hold-interval (Protection Group)



<b>Syntax</b>	hold-interval <i>number</i> ;
<b>Hierarchy Level</b>	[edit protocols <a href="#">protection-group ethernet-ring name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	Specify the hold-off timer interval <i>for all rings</i> in 100 millisecond (ms) increments.
<b>Options</b>	<i>number</i> —Hold-timer interval, in milliseconds. <b>Range:</b> 0 through 10,000 ms <b>Default:</b> 100 ms
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Ring Protection Switching Overview</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li> </ul>

## hold-time (APS)

<b>Syntax</b>	hold-time <i>milliseconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Hold-time value to use to determine whether a neighbor APS router is operational.
<b>Options</b>	<i>milliseconds</i> —Hold-time value. <b>Range:</b> 1 through 65,534 milliseconds <b>Default:</b> 3000 milliseconds (3 times the advertisement interval)
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring APS Timers</i></li> <li>• <a href="#">advertise-interval on page 426</a></li> </ul>

## hold-time (Physical Interface)

---

<b>Syntax</b>	<code>hold-time up <i>milliseconds</i> down <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces interface-range <i>interface-range-name</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 10.4R5 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series. Statement introduced in Junos OS Release 12.1 for the SRX Series.
<b>Description</b>	<p>Specify the <b>hold-time</b> value to use to damp shorter interface transitions milliseconds. The hold timer enables interface damping by not advertising interface transitions until the hold timer duration has passed. When a hold-down timer is configured and the interface goes from up to down, the down hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still down, then the router begins to advertise the interface as being down. Similarly, when a hold-up timer is configured and an interface goes from down to up, the up hold-time timer is triggered. Every interface transition that occurs during the hold-time is ignored. When the timer expires and the interface state is still up, then the router begins to advertise the interface as being up.</p>
<hr/>	
<div> <b>NOTE:</b></div> <ul style="list-style-type: none"><li>• We recommend that you configure the hold-time value after determining an appropriate value by performing repeated tests in the actual hardware environment. This is because the appropriate value for hold-time depends on the hardware (XFP, SFP, SR, ER, or LR) used in the networking environment.</li><li>• The hold-time option is not available for controller interfaces.</li></ul> <div><hr/></div>	
<div> <b>NOTE:</b> On MX Series routers with MPC3E and MPC4E, we recommend that you do not configure the hold-down timer to be less than 1 second. On MX Series routers with MPC5EQ-100G10G (MPC5EQ) or MPC6E (MX2K-MPC6E) with 100-Gigabit Ethernet MIC with CFP2 OTN interfaces, we recommend that you do not configure the hold-down timer to be less than 3 seconds.</div> <div><hr/></div>	
<b>Default</b>	Interface transitions are not damped.

**Options**    **down *milliseconds***—Hold time to use when an interface transitions from up to down. Junos OS advertises the transition within 100 milliseconds of the time value you specify.

**Range:** 0 through 4,294,967,295

**Default:** 0 (interface transitions are not damped)

**up *milliseconds***—Hold time to use when an interface transitions from down to up. Junos OS advertises the transition within 100 milliseconds of the time value you specify.

**Range:** 0 through 4,294,967,295

**Default:** 0 (interface transitions are not damped)

**Required Privilege**    interface—To view this statement in the configuration.  
**Level**                    interface-control—To add this statement to the configuration.

**Related Documentation**

- [advertise-interval on page 426](#)
- [interfaces \(EX Series switches\)](#)
- [Physical Interface Damping Overview on page 159](#)
- [Damping Shorter Physical Interface Transitions on page 165](#)
- [Damping Longer Physical Interface Transitions on page 166](#)

## hold-time (SONET/SDH Defect Triggers)

---

<b>Syntax</b>	<code>hold-time up <i>milliseconds</i> down <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <b>trigger defect</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM over SONET/SDH and SONET/SDH interfaces only, apply up and down hold times to SONET/SDH defect triggers. When you apply a down hold time to a defect, the defect must remain present for at least the hold-time period before the interface is marked down. When you apply an up hold time to a defect, the defect must remain absent for at least the hold-time period before the interface is marked up, assuming no other defect is outstanding.



### NOTE:

- When up or down hold times are applied to SONET defect triggers of a 10-Gigabit Ethernet WAN-PHY interface, only the defects generated in the WAN Interface Sublayer (WIS) are damped. Therefore, if the hold times are applied to SONET defect triggers only, a 10-Gigabit Ethernet WAN-PHY interface might be marked up or down because of the faults that are generated in other layers, such as the Physical Coding Sublayer (PCS) or Physical Medium Attachment Sublayer (PMA), 10 Gigabit Media Independent Interface (XGMII) Extender Sublayer (XGXS), and Media Access Control (MAC). To damp the interface up or down events of a 10-Gigabit Ethernet WAN-PHY interface, you need to apply up or down hold-times for the interface at the [edit interfaces *interface-name*] hierarchy level.
  - On M Series and T Series platforms with Channelized SONET IQ PICs and Channelized SONET IQE PICs, the SONET defect alarm trigger hold-time statement is not supported.
- 

**Default** If you do not include this statement, when a defect is detected the interface is marked down immediately, and when the defect becomes absent the interface is marked up immediately.

**Options** **down *milliseconds***—Hold time to wait before the interface is marked down.

**Range:** 1 through 65,534 milliseconds

**Default:** No hold time

**up *milliseconds***—Hold time to wait before the interface is marked up.

**Range:** 1 through 65,534 milliseconds

**Default:** No hold time

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring SONET/SDH Defect Triggers*
- [hold-time \(Physical Interface\) on page 644](#)

## host (Interfaces)

**Syntax**

```
host hostname {
    services severity-level;
    facility-override facility-name;
    log-prefix prefix-value;
    port port-number;
}
```

**Hierarchy Level** [edit interfaces *interface-name* services-options syslog]

**Release Information** Statement introduced before Junos OS Release 7.4.  
 You can configure multiple system log hosts from Junos OS Release 17.4R1 onwards.

**Description** Specify the hostname for the system logging utility.

Starting with Junos OS release 17.4R1, you can configure up to a maximum of four system log servers (combination of local system log hosts and remote system log collectors) for each service set for ms interface under **[edit interfaces *interface-name* services-options]** hierarchy.

**Options** *hostname*—Name of the system logging utility host machine. This can be the local Routing Engine or an external server address.

From Junos OS Release 17.4R1, you can configure up to four system log hosts.

The remaining statements are explained separately. See [CLI Explorer](#).



**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation**

- *Applying Filters and Services to Interfaces*

## host-prefix-only

---

<b>Syntax</b>	host-prefix-only;
<b>Hierarchy Level</b>	[edit <a href="#">dynamic-profiles interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit <a href="#">logical-systems</a> <i>logical-system-name</i> <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit <a href="#">logical-systems</a> <i>logical-system-name</i> <a href="#">routing-instances</a> <i>routing-instance-name</i> <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 17.2 on MX Series routers.
<b>Description</b>	(MPC5 and MPC6 cards) Improve datapath performance by allowing only DHCPv4 subscribers that negotiate a 32-bit prefix to come up on the underlying VLAN interface. All DHCP subscribers on the underlying interface must negotiate a 32-bit prefix. Subscribers that negotiate a subnet prefix are not brought up. You can configure this statement for static or dynamic subscribers.
	<div> <b>NOTE:</b> You must add or remove this statement before subscribers become active. The configuration fails if you attempt to configure the statement while subscribers are active.</div> <div> <b>NOTE:</b> You must also configure <code>demux-source inet</code> for the logical interface. Only <code>inet</code> is supported. A commit error occurs if you specify <code>demux-source inet6</code> or <code>demux-source [inet inet6]</code>.</div>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li><li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li></ul>

## iccp

<b>Syntax</b>	<pre>iccp {     traceoptions; {         file &lt;filename&gt; &lt;files number&gt; &lt;match regular-expression&gt; &lt;microsecond-stamp&gt;         &lt;size size&gt; &lt;world-readable   no-world-readable&gt;;         flag &lt;flag&gt;;         no-remote-trace;     }     local-ip-address &lt;ip address&gt;;     session-establishment-hold-time &lt;value&gt;;     authentication-key &lt;string&gt;;     peer &lt;ip-address&gt; {         local-ip-address &lt;ip address&gt;;         session-establishment-hold-time &lt;value&gt;;         authentication-key &lt;string&gt;;         redundancy-group-id-list &lt;redundancy-group-id-list&gt;;         liveness-detection;     } }</pre>
<b>Hierarchy Level</b>	<p>[edit protocols iccp]</p> <p>[edit logical-systems <i>logical-system-name</i> protocols iccp]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 10.0.</p> <p>Support for logical systems introduced in Junos OS Release 14.1.</p>
<b>Description</b>	<p>Configure Interchassis Control Protocol (ICCP) between the multichassis link aggregation group (MC-LAG) peers. ICCP replicates forwarding information, validates configurations, and propagates the operational state of the MC-LAG members.</p>
<b>Default</b>	<p>If you do not include this statement, no ICCP protocol tracing operations are performed.</p>
<b>Options</b>	<p><b>traceoptions</b>—Set Interchassis Control Protocol (ICCP) tracing options.</p> <p><b>local-ip-address</b>—Specify the source address where the ICCP packet is routed.</p> <p><b>session-establishment-hold-time</b>—Specify if the chassis takes over as the master at the ICCP session.</p> <p><b>authentication-key</b>—Specify TCP Message Digest 5 (MD5) option for an ICCP TCP session.</p> <p><b>peer ip-address</b>—Specify the IP address of the peer that hosts an MC-LAG. You must configure ICCP for both peers that host the MC-LAG.</p> <p><b>redundancy-group-id-list</b>—Specify the redundancy groups between two ICCP peers.</p> <p><b>liveness-detection</b>—Specify Bidirectional Forwarding Detection (BFD) protocol options.</p>

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring ICCP for MC-LAG on page 214](#)

---

## idle-cycle-flag

---

**Syntax** `idle-cycle-flag value;`

**Hierarchy Level**

[edit interfaces *e1-fpc/pic/port*],  
[edit interfaces *t1-fpc/pic/port*],  
[edit interfaces *interface-name* [ds0-options](#)],  
[edit interfaces *interface-name* [e1-options](#)],  
[edit interfaces *interface-name* [e3-options](#)],  
[edit interfaces *interface-name* [serial-options](#)],  
[edit interfaces *interface-name* [t1-options](#)],  
[edit interfaces *interface-name* [t3-options](#)]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

**Description** Configure the value that the DSO, E1, E3, T1, or T3 interface transmits during idle cycles.



**NOTE:** When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the `idle-cycle-flag` statement must be included at the [edit interfaces *e1-fpc/pic/port*] or [edit interfaces *t1-fpc/pic/port*] hierarchy level as appropriate.

---

**Options** **value**—Value to transmit in the idle cycles:

- **flags**—Transmit the value 0x7E.
- **ones**—Transmit the value 0xFF (all ones).

**Default:** **Flags**

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the E1 Idle Cycle Flag](#)
- [Configuring the E3 Idle Cycle Flag](#)
- [Configuring the T1 Idle Cycle Flag](#)
- [Configuring the T3 Idle Cycle Flag](#)

---

## idle-timeout

---

<b>Syntax</b>	<code>idle-timeout seconds;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>dl</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	On J Series Services Routers with ISDN interfaces, configure the number of seconds the link is idle before losing connectivity.
<b>Options</b>	<b>seconds</b> —Time for which the connection can remain idle. For interfaces configured to use a filter for traffic, the idle timeout is based on traffic. <b>Range:</b> 1 through 429497295 <b>Default:</b> 120 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## ieee802.1p

---

<b>Syntax</b>	ieee802.1p premium [ <i>values</i> ];
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> <a href="#">input-priority-map</a> ] [edit interfaces <i>interface-name</i> ether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> <a href="#">input-priority-map</a> ]
<b>Release Information</b>	Statement introduced before Junos Release 7.4. Statement introduced in Junos OS Release 13.2 for the QFX Series.
<b>Description</b>	For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, configure premium priority values for IEEE 802.1p input traffic.
<b>Options</b>	<b>values</b> —Define IEEE 802.1p priority values to be treated as premium. <b>Range:</b> 0 through 7
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Specifying an Input Priority Map</i></li></ul>

## if-exceeding (Hierarchical Policer)

<b>Syntax</b>	<pre>if-exceeding {     bandwidth-limit <i>bps</i>;     burst-size-limit <i>bytes</i>; }</pre>
<b>Hierarchy Level</b>	[edit <a href="#">dynamic-profiles</a> <i>profile-name</i> firewall hierarchical-policer aggregate], [edit <a href="#">dynamic-profiles</a> <i>profile-name</i> firewall hierarchical-policer <a href="#">premium</a> ], [edit firewall hierarchical-policer aggregate], [edit firewall hierarchical-policer <a href="#">premium</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5. Support at the [edit <a href="#">dynamic-profiles ... aggregate</a> ] and [edit <a href="#">dynamic-profiles ... premium</a> ] hierarchy level introduced in Junos OS Release 11.4.
<b>Description</b>	<p>For M40e, M120, and M320 (with FFPC and SFPC) edge routers and T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs, T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, specify bandwidth and burst limits for a premium or aggregate component of a hierarchical policer.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Hierarchical Policer Configuration Overview</i></li> <li>• <i>Hierarchical Policers</i></li> <li>• <i>aggregate (Hierarchical Policer)</i></li> <li>• <a href="#">bandwidth-limit (Hierarchical Policer) on page 456</a></li> <li>• <a href="#">burst-size-limit (Hierarchical Policer) on page 469</a></li> <li>• <i>hierarchical-policer</i></li> <li>• <a href="#">premium (Hierarchical Policer) on page 899</a></li> </ul>

## if-exceeding-pps (Hierarchical Policier)

---

<b>Syntax</b>	<pre>if-exceeding-pps {     pps-limit <i>pps</i>;     packet-burst <i>packets</i>; }</pre>
<b>Hierarchy Level</b>	[edit <a href="#">dynamic-profiles</a> <i>profile-name</i> firewall hierarchical-policer <i>hierarchical-policer-name</i> aggregate], [edit <a href="#">dynamic-profiles</a> <i>profile-name</i> firewall hierarchical-policer <i>hierarchical-policer-name</i> <a href="#">premium</a> ], [edit firewall hierarchical-policer <i>hierarchical-policer-name</i> aggregate], [edit firewall hierarchical-policer <i>hierarchical-policer-name</i> <a href="#">premium</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.2 for MX Series routers with MPCs.
<b>Description</b>	<p>For MX Series routers, <b>if-exceeding-pps</b> allows you to configure a packets-per-second (pps)-based trigger for a premium or aggregate component of a hierarchical policer. When applied to the loopback interface (lo0), this kind of trigger can help protect the Routing Engine from DDoS attacks. When applied in other areas, to either transit or control traffic, it is a more fine-grained monitor.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Hierarchical Policier Configuration Overview</i></li><li>• <i>Hierarchical Policers</i></li><li>• <i>aggregate (Hierarchical Policier)</i></li><li>• <a href="#">bandwidth-limit (Hierarchical Policier) on page 456</a></li><li>• <a href="#">burst-size-limit (Hierarchical Policier) on page 469</a></li><li>• <i>hierarchical-policer</i></li><li>• <a href="#">premium (Hierarchical Policier) on page 899</a></li></ul>

## igmp-snooping

**List of Syntax**    [Syntax \(EX Series, QFX Series, and NFX Series\) on page 655](#)  
                           [Syntax \(MX Series\) on page 655](#)  
                           [Syntax \(SRX Series\) on page 657](#)

**Syntax (EX Series, QFX Series, and NFX Series)**

```
igmp-snooping {
  traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable> <match
      regex>;
    flag flag (detail | disable | receive | send);
  }
  vlan (vlan-name | all) {
    data-forwarding {
      receiver {
        install;
        mode (proxy | transparent);
        (source-list | source-vlans) vlan-list;
        translate;
      }
      source {
        groups group-prefix;
      }
    }
    disable;
    immediate-leave;
    interface interface-name {
      group-limit limit;
      host-only-interface;
      immediate-leave;
      multicast-router-interface;
      static {
        group multicast-ip-address;
      }
    }
    l2-querier {
      source-address ip-address;
    }
    proxy {
      source-address ip-address;
    }
    query-interval seconds;
    query-last-member-interval seconds;
    query-response-interval seconds;
    robust-count number;
    version number;
  }
}
```

**Syntax (MX Series)**

```
igmp-snooping {
  immediate-leave;
  interface interface-name {
    group-limit limit;
```

```
    host-only-interface;
    immediate-leave;
    multicast-router-interface;
    static {
        group ip-address {
            source ip-address;
        }
    }
}
proxy {
    source-address ip-address;
}
query-interval seconds;
query-last-member-interval seconds;
query-response-interval seconds;
robust-count number;
vlan vlan-id {
    immediate-leave;
    interface interface-name {
        group-limit limit;
        host-only-interface;
        immediate-leave;
        multicast-router-interface;
        static {
            group ip-address {
                source ip-address;
            }
        }
    }
}
proxy {
    source-address ip-address;
}
query-interval seconds;
query-last-member-interval seconds;
query-response-interval seconds;
robust-count number;
}
```

<b>Syntax (SRX Series)</b>	<pre> igmp-snooping {   vlan (all   <i>vlan-name</i>) {     immediate-leave;     interface <i>interface-name</i> {       group-limit <i>range</i>;       host-only-interface;       multicast-router-interface;       immediate-leave;       static {         group <i>multicast-ip-address</i> {           source <i>ip-address</i>;         }       }     }   }   l2-querier {     source-address <i>ip-address</i>;   }   proxy {     source-address <i>ip-address</i>;   }   qualified-vlan <i>vlan-id</i>;   query-interval number;   query-last-member-interval number;   query-response-interval number;   robust-count <i>number</i>;   traceoptions {     file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;     flag <i>flag</i> &lt;flag-modifier&gt;;   } } </pre>
<b>Hierarchy Level</b>	<p>[edit bridge-domains <i>bridge-domain-name</i> protocols],</p> <p>[edit routing-instances <i>routing-instance-name</i> bridge-domains <i>bridge-domain-name</i> protocols]</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols]</p> <p>[edit protocols]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.5.</p> <p>Statement introduced in Junos OS Release 18.1R1 for SRX1500 devices.</p> <p>Statement introduced in Junos OS Release 9.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p>
<b>Description</b>	<p>Configure IGMP snooping to constrain multicast traffic to only the ports that have receivers attached. IGMP snooping enables the device to selectively send out multicast packets on only the ports that need them. Without IGMP snooping, the device floods the packets on every port. The device listens for the exchange of IGMP messages by the device and the end hosts. In this way, the device builds an IGMP snooping table that has a list of all the ports that have requested a particular multicast group. The factory default configuration enables IGMP snooping on all VLANs.</p>



**NOTE:** IGMP snooping must be disabled on the device before enabling ISSU.

<b>Default</b>	IGMP snooping is disabled on the device.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>IGMP Snooping in MC-LAG Active-Active Mode</i></li><li>• <i>Example: Configuring IGMP Snooping on SRX Series Devices</i></li><li>• <i>IGMP Snooping Overview</i></li></ul>

---

## ignore

---

<b>Syntax</b>	ignore;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">trigger defect</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM over SONET/SDH and SONET/SDH interfaces only, ignore a specific SONET/SDH defect trigger.
<b>Default</b>	If you do not include this statement, all defects are honored with no hold time.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring SONET/SDH Defect Triggers</i></li><li>• <a href="#">hold-time (Physical Interface) on page 644</a></li></ul>

## ignore-all

---

<b>Syntax</b>	ignore-all;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options dce-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options dte-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Ignore all control leads. You can include the <b>ignore-all</b> statement in the configuration only if you do not explicitly enable other signal handling options at the <b>dte-options</b> hierarchy level.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li> </ul>

## ignore-l3-incompletes

---

<b>Syntax</b>	ignore-l3-incompletes;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">fastether-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">gigether-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	Ignore the counting of Layer 3 incomplete errors on Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Ignoring Layer 3 Incomplete Errors</a></li> </ul>

## ilmi

---

<b>Syntax</b>	ilmi;
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> atm-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Enable the router to communicate with directly attached ATM switches and routers. The router uses the VC 0.16 to communicate with the ATM switch or router. Once configured, you can display the IP address and port number of an ATM switch or router using the <b>show interfaces <i>interface-name</i> switch-id</b> command.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Communication with Directly Attached ATM Switches and Routers</i></li><li>• <i>show ilmi</i></li><li>• <i>show ilmi statistics</i></li></ul>

## ima-group-options

<b>Syntax</b>	<pre> ima-group-options {     differential-delay <i>number</i>;     frame-length (32  64  128  256);     frame-synchronization {         alpha <i>number</i>;         beta <i>number</i>;         gamma <i>number</i>;     }     minimum-links <i>number</i>;     symmetry (symmetrical-config-and-operation       symmetrical-config-asymmetrical-operation);     test-procedure {         ima-test-start;         ima-test-stop;         interface <i>name</i>;         pattern <i>number</i>;         period <i>number</i>;     }     transmit-clock (common  independent);     version (1.0  1.1); } </pre>
<b>Hierarchy Level</b>	[edit interfaces (t1-fpc/pic/port:m:n   e1-fpc/pic/port:n   t1 e1-fpc/pic/port)]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Specify IMA group options.
<b>Options</b>	<p><b>differential-delay <i>msec</i></b>—Maximum differential delay among links in msec.  <b>Range:</b> 1 through 56  <b>Default:</b> 25</p> <p><b>frame-length (32  64  128  256)</b>—IMA frame length in number of cells.  <b>Default:</b> 128</p> <p><b>frame-synchronization</b>—IMA group frame synchronization selection.</p> <p><b>alpha <i>number</i></b>—Number of consecutive invalid ICP cells for IFSM.  <b>Range:</b> 1 through 2  <b>Default:</b> 2</p> <p><b>beta <i>number</i></b>—Number of consecutive errored ICP cells for IFSM.  <b>Range:</b> 1 through 2  <b>Default:</b> 2</p> <p><b>gamma <i>number</i></b>—Number of consecutive valid ICP cells for IFSM.</p>

**Range:** 1 through 5

**Default:** 1

**minimum-links *number***—IMA group minimum active links.

**Range:** 1 through 8

**Default:** 1

**symmetry (symmetrical-config-and-operation |  
symmetrical-config-asymmetrical-operation)**—IMA group symmetry mode selection.

**test-procedure**—Specify an IMA link interface test.

**ima-test-start**—Start IMA group test.

**ima-test-stop**—Stop IMA group test.

**interface *name***—Interface name of the IMA link to test.

**pattern *number***—IMA test pattern.

**Range:** 1 through 254

**Default:** 170

**period *seconds***—Length of IMA pattern test in seconds.

**Range:** 1 through 4,294,967,294.

**Default:** 10

**transmit-clock (common |independent)**—Transmit clock configuration.

**Default:** common

**version (1.0 |1.1)**—IMA specification version.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>ATM Support on Circuit Emulation PICs Overview</i></li><li>• <a href="#">ima-link-options on page 663</a></li><li>• <i>Understanding Inverse Multiplexing for ATM</i></li></ul>
------------------------------	--

## ima-link-options

<b>Syntax</b>	<code>ima-link-options group <i>g</i></code>
<b>Hierarchy Level</b>	<code>[edit interfaces (t1-<i>fpc/pic/port:m:n</i>   e1-<i>fpc/pic/port:n</i>   t1 e1-<i>fpc/pic/port</i>)]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Specify an interface as a member of an IMA group.
<b>Options</b>	<b>group <i>g</i></b> —Implying <b>at-x/y/g</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ATM Support on Circuit Emulation PICs Overview</i></li> <li>• <a href="#">ima-group-options on page 661</a></li> </ul>

## inactivity-timeout

<b>Syntax</b>	<code>inactivity-timeout <i>seconds</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> <a href="#">services-options</a>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For adaptive services interfaces, configure the inactivity timeout period for established flows. The timeout configured in the application protocol definition overrides this value.
<b>Options</b>	<b><i>seconds</i></b> —Timeout period, in seconds. <b>Range:</b> 4 through 86,400 seconds <b>Default:</b> 30 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## incoming-map

---

**Syntax**    incoming-map {  
                  `caller caller-number` | accept-all;  
                  }

**Hierarchy Level**    [edit interfaces *dl* unit *logical-unit-number* `dialer-options`],  
                          [edit logical-systems *logical-system-name* interfaces *dl* unit *logical-unit-number*  
                          `dialer-options`]

**Release Information**    Statement introduced in Junos OS Release 7.5.

**Description**    On J Series Services Routers with interfaces configured for ISDN, specify the dialer to accept incoming calls.

The remaining statements are explained separately. See [CLI Explorer](#).



**NOTE:** The `incoming-map` statement is mandatory for the router to accept any incoming ISDN calls.

---

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**    • *Junos OS Interfaces and Routing Configuration Guide*

## indication

<b>Syntax</b>	indication (ignore   normal   require);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dce-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dte-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For X.21 interfaces only, configure the from-DCE signal indication.
<b>Options</b>	<p><b>ignore</b>—The from-DCE signal is ignored.</p> <p><b>normal</b>—Normal indication signal handling as defined by ITU-T Recommendation X.21.</p> <p><b>require</b>—The from-DCE signal must be asserted.</p> <p><b>Default:</b> normal</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li> </ul>

## indication-polarity

<b>Syntax</b>	indication-polarity (negative   positive);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For X.21 interfaces only, configure the indication signal polarity.
<b>Options</b>	<p><b>positive</b>—Positive signal polarity.</p> <p><b>negative</b>—Negative signal polarity.</p> <p><b>Default:</b> positive</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Serial Signal Polarities on page 347</a></li> </ul>

## ingress-policer-overhead

---

<b>Syntax</b>	<code>ingress-policer-overhead bytes;</code>
<b>Hierarchy Level</b>	<code>[edit chassis fpc slot-number pic pic-number]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 11.1. Statement introduced in Junos OS Release 15.1X49-D30 for vSRX.
<b>Description</b>	<p>Add the configured number of bytes to the length of a packet entering the interface.</p> <p>Configure a policer overhead to control the rate of traffic received on an interface. Use this feature to help prevent denial-of-service (DoS) attacks or to enforce traffic rates to conform to the service-level agreement (SLA). When you configure a policer overhead, the configured policer overhead value (bytes) is added to the length of the final Ethernet frame. This calculated length of frame is used to determine the policer or the rate-limiting action.</p> <p>Traffic policing combines the configured policy bandwidth limits and the burst size to determine how to meter the incoming traffic. If you configure a policer overhead on an interface, Junos OS adds those bytes to the length of incoming Ethernet frames. This added overhead fills each frame closer to the burst size, allowing you to control the rate of traffic received on an interface.</p> <p>You can configure the policer overhead to rate-limit queues and Layer 2 and Layer 3 policers, for standalone (SA) and high-availability (HA) deployments. The policer overhead and the shaping overhead can be configured simultaneously on an interface.</p>



**NOTE:** vSRX supports policer overhead on Layer 3 policers only.

---

The policer overhead applies to all interfaces on the PIC. In the following example, Junos OS adds 10 bytes of overhead to all incoming Ethernet frames on ports ge-0/0/0 through ge-0/0/4.

```
set chassis fpc 0 pic 0 ingress-policer-overhead 10
```



**NOTE:** vSRX only supports fpc 0 pic 0. When you commit the `ingress-policer-overhead` statement, the vSRX takes the PIC offline and then back online.

---

You need to craft the policer overhead size to match your network traffic. A value that is too low will have minimal impact on traffic bursts. A value that is too high will rate-limit too much of your incoming traffic.

In this example, the policer overhead of 255 bytes is configured for ge-0/0/0 through ge-0/0/4. The firewall policer is configured to discard traffic when the burst size is over 1500 bytes. This policer is applied to ge-0/0/0 and ge 0/0/1. Junos OS adds 255 bytes to every Ethernet frame that comes into the configured ports. If, during a burst of traffic, the combined length of incoming frames and the overhead bytes exceeds 1500 bytes, the policer starts to discard further incoming traffic.

```
set chassis fpc 0 pic 0 ingress-policer-overhead 255
set interfaces ge-0/0/0 unit 0 family inet policer input overhead_policer
set interfaces ge-0/0/0 unit 0 family inet address 10.9.1.2/24
set interfaces ge-0/0/1 unit 0 family inet policer input overhead_policer
set interfaces ge-0/0/1 unit 0 family inet address 10.9.2.2/24
set firewall policer overhead_policer if-exceeding bandwidth-limit 32k
set firewall policer overhead_policer if-exceeding burst-size-limit 1500
set firewall policer overhead_policer then discard
```

**Options** *bytes*—Number of bytes added to a frame entering an interface.

**Range:** 0–255 bytes

**Default:** 0

```
[edit chassis fpc 0 pic 0]
user@host# set ingress-policer-overhead 10;
```

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation**

- *ingress-shaping-overhead*
- *Policer Overhead to Account for Rate Shaping Overview*
- *Example: Configuring Policer Overhead to Account for Rate Shaping*
- *Configuring a Policer Overhead*
- *CoS on Enhanced IQ2 PICs Overview*

## ingress-rate-limit

---

<b>Syntax</b>	<code>ingress-rate-limit rate;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> fastether-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Perform port-based rate limiting on ingress traffic arriving on Fast Ethernet 8-port, 12-port, and 48-port PICs.
<b>Options</b>	<b>rate</b> —Traffic rate, in megabits per second (Mbps). <b>Range:</b> 1 through 100 Mbps
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the Ingress Rate Limit</i></li></ul>

## init-command-string

<b>Syntax</b>	<code>init-command-string <i>initialization-command-string</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces umd0 <a href="#">modem-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	<p>For J Series Services Routers, configure the command string used to initialize the USB modem.</p> <p>When you connect the USB modem to the USB port on a Services Router, the router applies the modem AT commands configured in the <b>init-command-string</b> command to the initialization commands on the modem.</p> <p>For example, the initialization command string <b>ATS0 = 2\n</b> configures the USB modem to pick up a call after 2 rings.</p> <p>If you do not include the <b>init-command-string</b> statement, the router applies the default initialization string to the modem.</p>
<b>Options</b>	<p><b><i>initialization-command-string</i></b>—Specify an initialization command string using the following AT command values:</p> <ul style="list-style-type: none"> <li>• <b>%C0</b>—Disables data compression.</li> <li>• <b>&amp;C1</b>—Disables reset of the modem when it loses the carrier signal.</li> <li>• <b>&amp;Q8</b>—Enables Microcom Networking Protocol (MNP) error control mode.</li> <li>• <b>AT</b>—Attention. Informs the modem that a command follows.</li> <li>• <b>E0</b>—Disables the display on the local terminal of commands issued to the modem from the local terminal.</li> <li>• <b>Q0</b>—Enables the display of result codes.</li> <li>• <b>S0=0</b>—Disables the auto-answer feature, whereby the modem automatically answers calls.</li> <li>• <b>S7=45</b>—Instructs the modem to wait 45 seconds for a telecommunications service provider (carrier) signal before terminating the call.</li> <li>• <b>V1</b>—Displays result codes as words.</li> </ul> <p><b>Default:</b> <code>AT S7=45 S0=0 V1 X4 &amp;C1 E0 Q0 &amp;Q8 %C0</code></p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Specifying a USB Modem Interface on J Series Routers on page 350</a></li> </ul>

## initial-route-check

---

<b>Syntax</b>	<code>initial-route-check seconds;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>dl</i> unit <i>logical-unit-number</i> <b>dialer-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	On J Series Services Routers with ISDN interfaces, allows the router to check whether the primary route is up after the initial startup of the router is complete and the timer expires.
<b>Options</b>	<b>seconds</b> —How long to wait to check if the primary interface is up after the router comes up. <b>Range:</b> 1 through 300 seconds <b>Default:</b> 120 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>ISDN Interfaces Overview</i></li><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## inner-tag-protocol-id

<b>Syntax</b>	<code>inner-tag-protocol-id <i>tpid</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">input-vlan-map</a>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">output-vlan-map</a>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i></code> <code><a href="#">input-vlan-map</a>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code><a href="#">output-vlan-map</a>]</code>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.1.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
<b>Description</b>	<p>Configure the IEEE 802.1Q TPID value to rewrite for the inner tag.</p> <p>All TPIDs you include in input and output VLAN maps must be among those you specify at the <code>[edit interfaces <i>interface-name</i> <a href="#">gather-options</a> <a href="#">ethernet-switch-profile</a> <a href="#">tag-protocol-id</a> [ <i>tpids</i> ]]</code> hierarchy level.</p> <p>On MX Series routers, you can use this statement for Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs.</p>
<b>Default</b>	If the <code>inner-tag-protocol-id</code> statement is not configured, the TPID value is 0x8100.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Inner and Outer TPIDs and VLAN IDs</i></li> </ul>

## inner-vlan-id

---

<b>Syntax</b>	<code>inner-vlan-id number;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces interface-name unit logical-unit-number input-vlan-map]</code> , <code>[edit interfaces interface-name unit logical-unit-number output-vlan-map]</code> , <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number input-vlan-map]</code> , <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number output-vlan-map]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	<p>For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers or 100-Gigabit Ethernet Type 5 PIC with CFP, or on Ethernet interfaces on EX Series switches, specify the VLAN ID to rewrite for the inner tag of the final packet.</p> <p>You cannot include the <code>inner-vlan-id</code> statement with the <code>swap</code> statement, <code>swap-push</code> statement, <code>push-push</code> statement, or <code>push-swap</code> statement and the <code>inner-vlan-id</code> statement at the <code>[edit interfaces interface-name unit logical-unit-number output-vlan-map]</code> hierarchy level. If you include any of those statements in the output VLAN map, the VLAN ID in the outgoing frame is rewritten to the <code>inner-vlan-id</code> statement you include at the <code>[edit interfaces interface-name unit logical-unit-number]</code> hierarchy level.</p>
<b>Options</b>	<code>number</code> —VLAN ID number. <b>Range:</b> 0 through 4094
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Inner and Outer TPIDs and VLAN IDs</i></li></ul>

## inner-vlan-id-range

---

<b>Syntax</b>	<code>inner-vlan-id-range start <i>start-id</i> end <i>end-id</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>],</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0.
<b>Description</b>	The range of VLAN IDs to be used in the ATM-to-Ethernet interworking cross-connect. Specify the starting VLAN ID and ending VLAN ID.
<b>Options</b>	<b><i>start-id</i></b> —The lowest VLAN ID to be used. <b><i>end-id</i></b> —The highest VLAN ID to be used. <b>Range:</b> 32 through 4094
<b>Required Privilege Level</b>	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring ATM-to-Ethernet Interworking on page 282</a></li> </ul>

## input

---

<b>Syntax</b>	<pre>input {   service-set service-set-name &lt;service-filter filter-name&gt;;   post-service-filter filter-name; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet service], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet service]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Define one or more input service sets and filters, and one postservice filter to be applied to traffic.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## input-list

---

<b>Syntax</b>	<code>input-list [ <i>filter-names</i> ];</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>filter</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>filter</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.6.
<b>Description</b>	Apply a group of filters to evaluate when packets are received on an interface.
<b>Options</b>	<b>[ <i>filter-names</i> ]</b> —Name of a filter to evaluate when packets are received on the interface. Up to 16 filters can be included in a filter input list.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Applying a Filter to an Interface on page 235</a></li> <li>• <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide</i></li> <li>• <i>Junos OS Administration Library</i></li> <li>• <a href="#">output-list on page 844</a></li> </ul>

## input-policer

---

<b>Syntax</b>	<code>input-policer <i>policer-name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">layer2-policer</a>]</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">layer2-policer</a>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Apply a single-rate two-color policer to the Layer 2 input traffic at the logical interface. The <b>input-policer</b> and <b>input-three-color</b> statements are mutually exclusive.
<b>Options</b>	<b><i>policer-name</i></b> —Name of the single-rate two-color policer that you define at the <code>[edit firewall]</code> hierarchy level.
<b>Usage Guidelines</b>	See <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Two-Color and Three-Color Policers at Layer 2</i></li><li>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i></li><li>• <i>Configuring a Gigabit Ethernet Policer</i></li><li>• <a href="#">input-three-color on page 678</a></li><li>• <a href="#">layer2-policer on page 718</a></li><li>• <a href="#">logical-interface-policer on page 747</a></li><li>• <a href="#">output-policer on page 845</a></li><li>• <a href="#">output-three-color on page 847</a></li></ul>

## input-priority-map

---

<b>Syntax</b>	input-priority-map { <code>ieee802.1p</code> premium [ <i>values</i> ]; }
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> ] [edit interfaces <i>interface-name</i> ether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 13.2 for the QFX Series.
<b>Description</b>	For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the input policer priority map to be applied to incoming frames on this interface.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Specifying an Input Priority Map</i></li> <li>• <a href="#">output-priority-map on page 846</a></li> </ul>

## input-three-color


---

<b>Syntax</b>	<code>input-three-color <i>policer-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">layer2-policer</a> ] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">layer2-policer</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Apply a single-rate or two-rate three-color policer to the Layer 2 input traffic at the logical interface. The <b>input-three-color</b> and <b>input-policer</b> statements are mutually exclusive.
<b>Options</b>	<b><i>policer-name</i></b> —Name of the single-rate or two-rate three-color policer.
<b>Usage Guidelines</b>	See <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Two-Color and Three-Color Policers at Layer 2</i></li><li>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i></li><li>• <i>Configuring a Gigabit Ethernet Policer</i></li><li>• <a href="#">input-policer on page 676</a></li><li>• <a href="#">layer2-policer on page 718</a></li><li>• <a href="#">logical-interface-policer on page 747</a></li><li>• <a href="#">output-policer on page 845</a></li><li>• <a href="#">output-three-color on page 847</a></li></ul>

## input-vlan-map (Aggregated Ethernet)

<b>Syntax</b>	<pre>input-vlan-map {   (pop   push   swap);   tag-protocol-id <i>tpid</i>;   vlan-id <i>number</i>; }</pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.2.</p> <p>Starting in Junos OS Release 17.3R1, input-vlan-map for outer vlan is supported for L2 circuit over aggregated Ethernet interfaces for QFX10000 Series switches.</p>
<b>Description</b>	<p>Define the rewrite profile to be applied to incoming frames on this logical interface. On MX Series routers, this statement only applies to aggregated Ethernet interfaces using Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2 and IQ2-E interfaces and 100-Gigabit Ethernet Type 5 PIC with CFP.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Stacking a VLAN Tag</a></li> <li>• <a href="#">output-vlan-map (Aggregated Ethernet) on page 848</a></li> </ul>

## input-vlan-map

<b>Syntax</b>	<pre>input-vlan-map {   (pop   pop-pop   pop-swap   push   push-push   swap   swap-push   swap-swap);   inner-tag-protocol-id <i>tpid</i>;   inner-vlan-id <i>number</i>;   tag-protocol-id <i>tpid</i>;   vlan-id <i>number</i>; }</pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p><b>pop-pop</b>, <b>pop-swap</b>, <b>push-push</b>, <b>swap-push</b>, and <b>swap-swap</b> statements introduced in Junos OS Release 8.1.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X50-D15 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.</p>
<b>Description</b>	<p>For Gigabit Ethernet IQ, 10-Gigabit Ethernet SFPP interfaces, 100-Gigabit Ethernet Type 5 PIC with CFP only as well as Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces, define the rewrite profile to be applied to incoming frames on this logical interface.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<div>  <p><b>NOTE:</b> Connectivity fault management (CFM) sessions for all interfaces in which <b>input-vlan-map</b> is configured are supported only if the interface also has an explicit configuration for <b>output-vlan-map</b> as <b>output-vlan-map pop</b>. See <a href="#">output-vlan-map</a>. This configuration is required for all the interfaces in the topology even when the CFM session is on that interface or on a different interface in the data path of the same topology.</p> </div>	
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Stacking a VLAN Tag</i></li> <li>• <a href="#">output-vlan-map on page 849</a></li> <li>• <i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support (CLI Procedure)</i></li> </ul>

## instance

---

<b>Syntax</b>	<code>instance <i>vpls-instance-name</i>;</code>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	Specify the VPLS instance of the default maintenance domain.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Maintenance Intermediate Points (MIPs)</i></li> <li>• <a href="#">maintenance-domain on page 768</a></li> </ul>

## interface (Hierarchical CoS Schedulers)

---

<b>Syntax</b>	<code>interface <i>interface-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <a href="#">interface-set</a> <i>interface-set-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Specify an interface that is a member of the interface set. Supported on Ethernet interfaces on an MX Series router, Ethernet interfaces on IQ2E PIC on M Series and T Series routers, and IP demux interfaces on an MX Series router.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i></li> </ul>

## interface (IEEE 802.1x)

---

<b>Syntax</b>	<pre>interface <i>interface-id</i> {     maximum-requests <i>integer</i>;     quiet-period <i>seconds</i>;     reauthentication (disable   interval <i>seconds</i>);     retries <i>integer</i>;     server-timeout <i>seconds</i>;     supplicant (<i>single</i>);     supplicant-timeout <i>seconds</i>;     transmit-period <i>seconds</i>; }</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">dot1x authenticator</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Use this statement to configure the 802.1x Port-Based Network Access Control protocol-specific Ethernet interface options.
<b>Default</b>	The default values are provided for the options below on the respective statement pages.
<b>Options</b>	<p><b>maximum-requests</b>—Specify the maximum number of retransmission times for an EAPOL Request packet to the client before it times out the authentication session.</p> <p><b>quiet-period</b>—Specify the number of seconds the port remains in the wait state following a failed authentication exchange with the client, before reattempting the authentication.</p> <p><b>reauthentication</b>—Includes two options:</p> <ul style="list-style-type: none"><li>• <b>disable</b>—Periodic reauthentication of the client is disabled.</li><li>• <b>interval</b>—Specify the periodic reauthentication time interval.</li></ul> <p><b>retries</b>—Specify the number of tries after which the port remains in the wait state for <b>quiet-period</b> seconds before reattempting the authentication.</p> <p><b>server-timeout</b>—Specify the number of seconds the port waits for a reply when relaying a response from the client to the authentication server before timing out and invoking the server-fail action.</p> <p><b>supplicant (<i>single</i>)</b>—Specify supplicant single mode. See the usage guidelines to configure other modes.</p> <p><b>supplicant-timeout</b>—Specify the number of seconds the port waits for a response when relaying a request from the authentication server to the client before resending the request.</p>

**transmit-period**—Specify the number of seconds the port waits before retransmitting the initial EAPOL PDUs to the client.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *IEEE 802.1x Port-Based Network Access Control Overview*
- [authenticator on page 448](#)
- [dot1x on page 543](#)

## interface (IEEE 802.1ag OAM Connectivity-Fault Management)

**Syntax** `interface (interface-name | ((ge- | xe-) (fpc/pic/port | fpc/pic/port.unit-number | fpc/pic/port.unit-number vlan vlan-id)));`

**Hierarchy Level** [edit protocols [oam ethernet connectivity-fault-management](#) maintenance-domain *domain-name* maintenance-association *ma-name* [mep mep-id](#)]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** For Ethernet interfaces on M320, MX Series, and T Series routers, configure IEEE 802.1ag Operation, Administration, and Management (OAM) support.

For Gigabit Ethernet interfaces and 10-Gigabit Ethernet interfaces on MX Series routers, configure IEEE 802.1ag Connectivity Fault Management (CFM) support on trunk interface ports.

Starting in Junos OS 17.4R1, you can enable support for IEEE 802.1ag CFM on pseudowire service interfaces by configuring maintenance intermediate points (MIPs) on the pseudowire service interfaces.



**NOTE:** The CFM MIP session is supported only on the pseudowire services interface and not on the pseudowire services tunnel interface.

**Options** **interface-name**—Interface to which the MEP is attached. It could be a physical Ethernet interface, logical Ethernet interface, pseudowire services interfaces, or on a specific VLAN of a trunk port interface (MX Series only).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring a MEP to Generate and Respond to CFM Protocol Messages*

## interface (OAM Link-Fault Management)

---

<b>List of Syntax</b>	Syntax: T, M, MX and ACX Series Routers, SRX Series Firewalls and EX Series Switches on page 684 Syntax: EX Series Switches and NFX Series Devices on page 684
<b>Syntax: T, M, MX and ACX Series Routers, SRX Series Firewalls and EX Series Switches</b>	<pre>interface <i>interface-name</i> {     <b>apply-action-profile</b> <i>profile-name</i>;     <b>link-discovery</b> (active   passive);     <b>pdu-interval</b> <i>interval</i>;     <b>pdu-threshold</b> <i>threshold-value</i>;     <b>remote-loopback</b>;     <b>event-thresholds</b> {         <b>frame-error</b> <i>count</i>;         <b>frame-period</b> <i>count</i>;         <b>frame-period-summary</b> <i>count</i>;         <b>symbol-period</b> <i>count</i>;     }     <b>negotiation-options</b> {         <b>allow-remote-loopback</b>;         <b>no-allow-link-events</b>;     } }</pre>
<b>Syntax: EX Series Switches and NFX Series Devices</b>	<pre>interface <i>interface-name</i> {     <b>link-discovery</b> (active   passive);     <b>pdu-interval</b> <i>interval</i>;     <b>pdu-threshold</b> <i>threshold-value</i>;     <b>remote-loopback</b>;     <b>event-thresholds</b> {         <b>frame-error</b> <i>count</i>;         <b>frame-period</b> <i>count</i>;         <b>frame-period-summary</b> <i>count</i>;         <b>symbol-period</b> <i>count</i>;     }     <b>negotiation-options</b> {         <b>allow-remote-loopback</b>;         <b>no-allow-link-events</b>;     } }</pre>
<b>Hierarchy Level</b>	[edit protocols <b>oam</b> <b>ethernet</b> <b>link-fault-management</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2 for T, M, MX and ACX Series Routers, SRX Series firewalls and EX Series switches. Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.
<b>Description</b>	Configure Ethernet OAM link fault management (LFM) for all interfaces or for specific interfaces.

For Ethernet interfaces on M320, MX Series, and T Series routers, configure IEEE 802.3ah Operation, Administration, and Management (OAM) support.

**Options** `interface interface-name`—Interface to be enabled for IEEE 802.3ah link fault management OAM support.

The remaining statements are described separately.

**Required Privilege Level**

interface	—To view this statement in the configuration.
interface-control	—To add this statement to the configuration.
routing	—To view this statement in the configuration.
routing-control	—To add this statement to the configuration.

**Related Documentation**

- *Enabling IEEE 802.3ah OAM Support*
- *Example: Configuring Ethernet OAM Link Fault Management*
- *Configuring Ethernet OAM Link Fault Management (CLI Procedure)*

## interface (Port Mirroring)

**Syntax**

```
interface interface-name {
    next-hop address;
}
```

**Hierarchy Level** [edit forwarding-options port-mirroring family (inet | inet6) output]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Specify the output interface for sending copies of packets elsewhere to be analyzed.

**Options** `interface-name`—Name of the interface.

The remaining statements are explained separately. See [CLI Explorer](#).

**Usage Guidelines** See *Configuring Port Mirroring on M, T and MX Series Routers*.

**Required Privilege Level**

interface	—To view this statement in the configuration.
interface-control	—To add this statement to the configuration.

## interface-down

---

<b>Syntax</b>	interface-down;
<b>Hierarchy Level</b>	[edit protocols oam ethernet <a href="#">connectivity-fault-management action-profile</a> <i>profile-name</i> <a href="#">default-actions</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Bring the interface down when a remote MEP connectivity failure is detected.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a CFM Action Profile to Specify CFM Actions for CFM Events</i></li></ul>

## interface-name

---

<b>Syntax</b>	interface-name;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication username-include</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication username-include</a> ],
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Append the interface name and VLAN ID or stacked VLAN ID to the username string used for authentication. The appended information takes the following format: <ul style="list-style-type: none"><li>• For single VLAN—&lt;<b>interface-name</b>&gt;:&lt;<b>4-digit-vlan-id</b>&gt;</li><li>• For stack VLANs—&lt;<b>interface-name</b>&gt;:&lt;<b>4-digit-svlan-id</b>&gt;-&lt;<b>4-digit-vlan-id</b>&gt;</li></ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring VLAN Interface Username Information for AAA Authentication</i></li></ul>

---

## interface-none

---

<b>Syntax</b>	interface-none;
<b>Hierarchy Level</b>	[edit protocols <a href="#">protection-group ethernet-ring ring-name east-interface</a> ] [edit protocols <a href="#">protection-group ethernet-ring ring-name west-interface</a> ]
<b>Description</b>	Designates port as not used for Ethernet ring protection.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Ethernet Ring Protection Switching Overview</i></li><li>• <i>Ethernet Ring Protection Using Ring Instances for Load Balancing</i></li><li>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i></li><li>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i></li></ul>

## interface-range

---

**Syntax** `interface-range name {  
 member-range interface-name-fpc/pic/port to interface-name-fpc/pic/port;  
 member interface-name-fpc/pic/port;  
 member interface-name-fpc/[low-high]/*;  
 member interface-name-fpc/[pic1,pic2,pic3...picN]/port  
 /*Common config is added as part of interface-range definition, as follows*/  
 mtu 256;  
 hold-time up 10;  
 ether-options {  
 flow-control;  
 speed {  
 100m;  
 }  
 802.3ad primary;  
 }  
}`

**Hierarchy Level** [edit [interfaces](#)]

**Release Information** Statement introduced in Junos OS Release 10.0.

**Description** Specify a set of identical interfaces as an interface group, to which you can apply a common configuration to the entire set of interfaces. This group can consist of both lexical member ranges of interfaces specified using the **member-range** *interface-type-fpc/pic/port* to *xx-fpc/pic/port* option (regex not supported), and of individual or non-sequential members using the **member** *interface-type-fpc/pic/port* option (with regex support to specify the *fpc/pic/port* values).

**Options** **member-range**—Adds interfaces in lexical order. Regex is not supported.

**Format:**—`member-range <start-range> to <end-range>`

**Example:**—`member-range ge-0/0/0 to ge-4/0/40;`

**member**—To add individual interfaces or multiple interfaces using regex.

**Format:**—`member <list of interface names>`

**Example:**—`member ge-0/0/0;`

`member ge-0/1/1;`

`member ge-0/*/*;`

`member ge-0/[1-10]/0;`

`member ge-1/[1,3,6,10]/12`

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation** • [Configuring Interface Ranges on page 90](#)

## interface-transmit-statistics

**Syntax** interface-transmit-statistics;

**Hierarchy Level** [edit interface *interface-name*]

**Release Information** Statement introduced in Junos OS Release 11.4 R3 for MX Series devices.

**Description** Configure the interface to report the transmitted load statistics. If this statement is not included in the configuration, the interface statistics show the offered load on the interface, and not the actual transmitted load.

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation** • [Improvements to Interface Transmit Statistics Reporting on page 1121](#)  
 • [show interfaces on page 1123](#)

## interface-set (Ethernet Interfaces)

**Syntax** interface-set *interface-set-name* {  
     [interface](#) *ethernet-interface-name* {  
         (unit *unit-number* | [vlan-tags-outer](#) *vlan-tag*);  
     }  
 }

**Hierarchy Level** [edit interfaces]

**Release Information** Statement introduced in Junos OS Release 8.5.

**Description** The set of interfaces used to configure hierarchical CoS schedulers on Ethernet interfaces on the MX Series router and IQ2E PIC on M Series and T Series routers.

The remaining statements are described separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation** • [interface-set \(Hierarchical Schedulers\)](#)

## interface-set (IP Demux Interfaces)

---

**Syntax**    `interface-set interface-set-name {  
                  interface interface-name {  
                          unit unit-number;  
                  }  
                  }`

**Hierarchy Level**    [edit interfaces]

**Release Information**    Statement introduced in Junos OS Release 9.2.

**Description**    The set of interfaces used to configure hierarchical CoS schedulers for subscribers on IP demux interfaces on the MX Series router.

The remaining statements are described separately.

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**

- *Junos Subscriber Access Configuration Guide*
- *Interfaces Fundamentals for Routing Devices*

---

## interface-shared-with

---

<b>Syntax</b>	interface-shared-with psdn;
<b>Hierarchy Level</b>	[edit interfaces ge- <i>fpc/pic/slot</i> unit <i>logical-unit-number</i> ], [edit interfaces so- <i>fpc/pic/slot</i> unit <i>logical-unit-number</i> ], [edit interfaces xe- <i>fpc/pic/slot</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Assign a logical interface under a shared physical interface to a Protected System Domain (PSD).
<b>Options</b>	<i>n</i> —PSD identification as a numeric value. <b>Range:</b> 1 through 31
<b>Required Privilege Level</b>	view-level—To view this statement in the configuration. control-level—To add this statement to the configuration.
<b>Related Documentation</b>	

## interface-status-tlv

---

<b>Syntax</b>	interface-status-tlv [ down lower-layer-down ];
<b>Hierarchy Level</b>	[edit protocols <b>oam</b> <b>ethernet</b> connectivity-fault-management <b>action-profile</b> <i>profile-name</i> event] [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> <b>continuity-check</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Defines an <b>action-profile</b> consisting of various events and the action. Based on values of <b>interface-status-tlv</b> in the received CCM packets, specific action such as <i>interface-down</i> can be taken using <b>action-profile</b> options.
<b>Options</b>	<b>down</b> —When the incoming CCM packet contains interface status TLV with value down, the action will be triggered for this action-profile.  <b>lower-layer-down</b> —When the incoming CCM packet contains interface status TLV with value lower-layer-down, the action will be triggered for this action-profile.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Remote MEP Action Profile Support</i></li></ul>

## interface-switch

---

<b>Syntax</b>	<pre>interface-switch <i>connection-name</i> {     interface <i>interface-name.unit-number</i>; }</pre>
<b>Hierarchy Level</b>	[edit logical-systems <i>logical-system-name</i> protocols connections], [edit protocols connections]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure Layer 2 switching cross-connects. The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first.</p> <p>For Layer 2 switching cross-connects to work, you must also configure MPLS.</p>
<b>Options</b>	<p><b><i>connection-name</i></b>—Connection name (up to 128 characters in Junos 12.3 and later).</p> <p><b><i>interface interface-name.unit-number</i></b>—Interface name. Include the logical portion of the name, which corresponds to the logical unit number.</p>
<b>Required Privilege Level</b>	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the CCC Connection for Layer 2 Switching Cross-Connects</i></li> <li>• <a href="#">Defining the Connection for Switching Cross-Connects on page 281</a></li> <li>• <i>MPLS Applications Feature Guide</i></li> </ul>

## interface-type (Interfaces)

---

<b>Syntax</b>	<code>interface-type (bc   coc1   ct1   ct3   dc   ds   so   t1   t3);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-range name</i> no-partition],</code> <code>[edit interfaces <i>interface-range name</i> partition <i>partition-number</i>],</code> <code>[edit interfaces <i>interface-range name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i>],</code> <code>[edit interfaces <i>interface-range name</i> partition <i>partition-number</i> timeslot <i>timeslot-range</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For IQ and IQE interfaces only, configure the sublevel interface type.
<b>Options</b>	<p><b>bc</b>—Dual—Port Channelized E1 and T1 ISDN PRI interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> timeslot <i>timeslot-range</i>]</code> hierarchy level to create a bearer (B) channel <code>bc-pim/0/port:channel</code> interface for each time you want to function as an ISDN PRI B-channel.</p> <p><b>coc1</b>—Channelized OC1 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc12-fpc/pic/port]</code> hierarchy level.</p> <p><b>ct1</b>—Channelized T1 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> interface-type ct3-fpc/pic/port&lt;:channel&gt;]</code> hierarchy level.</p> <p><b>ct3</b>—Channelized T3 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc1-fpc/pic/port:channel no-partition]</code> hierarchy level.</p> <p><b>dc</b>—Dual-Port Channelized E1 and T1 ISDN PRI interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> timeslot <i>timeslot-range</i>]</code> hierarchy level to create a (D) channel <code>dc-pim/0/port</code> to control the B-channels.</p> <p><b>ds</b>—DS0 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> interface-type (ce1-fpc/pic/port   ct1-fpc/pic/port&lt;:channel&gt;)]</code> hierarchy level.</p> <p><b>so</b>—SONET/SDH interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type coc12-fpc/pic/port]</code> hierarchy level.</p> <p><b>t1</b>—T1 interface type. You can specify this interface type at the <code>[edit interfaces <i>interface-name</i> partition <i>partition-number</i> oc-slice <i>oc-slice-range</i> interface-type (coc12-fpc/pic/port   coc1-fpc/pic/port)]</code> hierarchy level.</p>

**t3**—T3 interface type. You can specify this interface type at the **[edit interfaces interface-name partition partition-number oc-slice oc-slice-range interface-type (coc12-fpc/pic/port | coc1-fpc/pic/port:channel no-partition)]** hierarchy level.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Channelized E1 IQ and IQE Interfaces Overview*
- *Channelized OC12/STM4 IQ and IQE Interfaces Overview*
- *Configuring Channelized T3 IQ Interfaces*

## interfaces

---

<b>List of Syntax</b>	<a href="#">Syntax (QFX Series) on page 696</a> <a href="#">Syntax (EX Series, MX Series and T Series) on page 696</a>
<b>Syntax (QFX Series)</b>	<pre>interfaces <i>interface-name</i> {     no-mac-learning; }</pre>
<b>Syntax (EX Series, MX Series and T Series)</b>	<pre>interfaces { ... }</pre>
<b>QFX Series</b>	[edit ethernet-switching-options]
<b>EX Series, MX Series and T Series</b>	[edit]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Configure settings for interfaces that have been assigned to family <b>ethernet-switching</b> .
<b>Default</b>	The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.
<b>Options</b>	<b><i>interface-name</i></b> —Name of an interface that is configured for family <b>ethernet-switching</b> .  The remaining statement is explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration. interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Physical Interface Configuration Statements Overview on page 64</a></li><li>• <a href="#">Configuring Aggregated Ethernet Link Protection</a></li></ul>

## interfaces (Static and Dynamic Subscribers)

```
Syntax  interfaces {
        interface-name {
            unit logical-unit-number {
                actual-transit-statistics;
                auto-configure {
                    agent-circuit-identifier {
                        dynamic-profile profile-name;
                    }
                    line-identity {
                        include {
                            accept-no-ids;
                            circuit-id;
                            remote-id;
                        }
                        dynamic-profile profile-name;
                    }
                }
            }
        }
        family family {
            access-concentrator name;
            address address;
            direct-connect;
            duplicate-protection;
            dynamic-profile profile-name;
            filter {
                adf {
                    counter;
                    input-precedence precedence;
                    not-mandatory;
                    output-precedence precedence;
                    rule rule-value;
                }
                input filter-name {
                    precedence precedence;
                    shared-name filter-shared-name;
                }
                output filter-name {
                    precedence precedence;
                    shared-name filter-shared-name;
                }
            }
            max-sessions number;
            max-sessions-vsa-ignore;
            rpf-check {
                mode loose;
            }
            service {
                input {
                    service-set service-set-name {
                        service-filter filter-name;
                    }
                }
                post-service-filter filter-name;
            }
        }
    }
```

```

        output {
            service-set service-set-name {
                service-filter filter-name;
            }
        }
    }
    service-name-table table-name
    short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
        maximum-seconds>;
    unnumbered-address interface-name <preferred-source-address address>;
}
filter {
    input filter-name (
        precedence precedence;
        shared-name filter-shared-name;
    )
    output filter-name {
        precedence precedence;
        shared-name filter-shared-name;
    }
}
host-prefix-only;
ppp-options {
    chap;
    pap;
}
proxy-arp;
service {
    pcef pcef-profile-name {
        activate rule-name | activate-all;
    }
}
vlan-id;
vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
}
vlan-tagging;
}
interface-set interface-set-name {
    interface interface-name {
        unit logical unit number {
            advisory-options {
                downstream-rate rate;
                upstream-rate rate;
            }
        }
    }
}
pppoe-underlying-options {
    max-sessions number;
}
}
demux0 {
    unit logical-unit-number {
        demux-options {
            underlying-interface interface-name
        }
        family family {

```

```

access-concentrator name;
address address;
direct-connect;
duplicate-protection;
dynamic-profile profile-name;
demux-source {
    source-prefix;
}
filter {
    input filter-name (
        precedence precedence;
        shared-name filter-shared-name;
    )
    output filter-name {
        precedence precedence;
        shared-name filter-shared-name;
    }
}
mac-validate (loose | strict);
max-sessions number;
max-sessions-vsa-ignore;
rpf-check {
    fail-filter filter-name;
    mode loose;
}
service-name-table table-name
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
    maximum-seconds>;
unnumbered-address interface-name <preferred-source-address address>;
}
filter {
    input filter-name;
    output filter-name;
}
vlan-id number;
vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
}
}
pp0 {
    unit logical-unit-number {
        keepalives interval seconds;
        no-keepalives;
        pppoe-options {
            underlying-interface interface-name;
            server;
        }
        ppp-options {
            aaa-options aaa-options-name;
            authentication [ authentication-protocols ];
            chap {
                challenge-length minimum minimum-length maximum maximum-length;
                local-name name;
            }
        }
        ignore-magic-number-mismatch;
        initiate-ncp (dual-stack-passive | ipv6 | ip)
        ipcp-suggest-dns-option;
    }
}

```

```

    mru size;
    mtu (size | use-lower-layer);
    on-demand-ip-address;
    pap;
    peer-ip-address-optional;
    local-authentication {
        password password;
        username-include {
            circuit-id;
            delimiter character;
            domain-name name;
            mac-address;
            remote-id;
        }
    }
}
family inet {
    unnumbered-address interface-name;
    address address;
    service {
        input {
            service-set service-set-name {
                service-filter filter-name;
            }
            post-service-filter filter-name;
        }
        output {
            service-set service-set-name {
                service-filter filter-name;
            }
        }
    }
    filter {
        input filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
        output filter-name {
            precedence precedence;
            shared-name filter-shared-name;
        }
    }
}
}
}
}

```

**Hierarchy Level** [edit [dynamic-profiles](#) *profile-name*]

**Release Information** Statement introduced in Junos OS Release 9.2.

**Description** Define interfaces for dynamic client profiles.

**Options** *interface-name*—The interface variable (*\$junos-interface-ifd-name*). The interface variable is dynamically replaced with the interface the DHCP client accesses when connecting to the router.



**NOTE:** Though we do not recommend it, you can also enter the specific name of the interface you want to assign to the dynamic profile.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Dynamic Subscriber Interfaces Using IP Demux Interfaces in Dynamic Profiles*
- *Configuring Dynamic PPPoE Subscriber Interfaces*
- *Configuring Dynamic VLANs Based on Agent Circuit Identifier Information*
- *DHCP Subscriber Interface Overview*
- *Subscribers over Static Interfaces Configuration Overview*
- [Demultiplexing Interface Overview on page 313](#)

## interleave-fragments

**Syntax** `interleave-fragments;`

**Hierarchy Level** [edit interfaces *interface-name* [unit](#) *logical-unit-number*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* [unit](#) *logical-unit-number*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For link services interfaces only, interleave long packets with high-priority packets.

Allows small delay-sensitive packets, such as Voice over IP (VoIP) packets, to interleave with long fragmented packets. This minimizes the latency of delay-sensitive packets.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Junos OS Services Interfaces Library for Routing Devices*

## interval

---

**Syntax** interval (100ms | 10m | 10ms | 10s | 1m | 1s);

**Hierarchy Level** [edit protocols oam ethernet connectivity-fault-management maintenance-domain *domain-name* maintenance-association *ma-name* **continuity-check**]

**Release Information** Statement introduced in Junos OS Release 8.4.  
Option **10ms** introduced in Junos OS Release 9.1.  
Third-party interoperability during a unified in-service software upgrade (ISSU) introduced in Junos OS Release 17.1.

**Description** Configure the interval between successive transmissions of continuity check messages (CCMs) as part of the connectivity fault detection strategy. When the receiving maintenance association end point (MEP) does not receive a CCM at the configured interval, the **loss-threshold** statement determines how many CCMs can be lost before the sending MEP is marked as down. The **hold-interval** statement then determines the frequency at which the database of MEPs in the maintenance association (MA) is flushed in the absence of updates.

During a unified in-service software upgrade (ISSU), Junos OS connectivity fault management (CFM) works when the peer device is not a Juniper Networks router. Interoperating with the router of another vendor, the Juniper Networks router retains session information and continues to transmit CCM (continuity check message) PDUs during the unified ISSU upgrade. For this feature to work, you must enable Packet Forwarding Engine keepalives with the **hardware-assisted-keepalives** statement, and configure the interval between CCMs to be 1 second with **interval** statement.



**NOTE:** For the continuity check message interval to be configured for 10 milliseconds, periodic packet management (PPM) runs on the Routing Engine and Packet Forwarding Engine by default. You can disable PPM only on the Packet Forwarding Engine. To disable PPM on the Packet Forwarding Engine, use the **no-delegate-processing** statement at the [edit routing-options ppm] hierarchy level.



**NOTE:** A continuity check interval of 10 milliseconds is not supported for CFM sessions over a label-switched interface (LSI).

**Options** 100ms—100 milliseconds.

10m—10 minutes.

10ms—10 milliseconds.

10s—10 seconds.

1m—1 minute.

1s—1 second.

**Default:** 1m

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Continuity Check Protocol Parameters Overview*
- *Configuring Continuity Check Protocol Parameters for Fault Detection*
- *Configuring Connectivity Fault Management for Interoperability During Unified In-Service Software Upgrades*

## inverse-arp

**Syntax** inverse-arp;

**Hierarchy Level** [edit interfaces *interface-name* unit *logical-unit-number*],  
[edit interfaces *interface-name* unit *logical-unit-number* family inet address *address* multipoint-destination *destination*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family inet *address* *address* multipoint-destination *destination*]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 11.1 for the QFX Series.

**Description** For ATM encapsulation, enable responses to receive inverse ATM ARP requests. For Frame Relay encapsulation, enable responses to receive inverse Frame Relay ARP requests.

**Default** Inverse ARP is disabled on all ATM and Frame Relay interfaces.


**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Inverse ATM1 or ATM2 ARP*
- *Configuring Inverse Frame Relay ARP*

## invert-data

---

<b>Syntax</b>	invert-data;
<b>Hierarchy Level</b>	[edit interfaces e1- <i>fpc/pic/port</i> ], [edit interfaces t1- <i>fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> <a href="#">ds0-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">e1-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">t1-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">e3-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Invert the transmission of unused data bits on the DS0, E1, E3, and T1 interface.  <div> <b>NOTE:</b> When configuring E1 or T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the invert-data statement must be included at the [edit interfaces e1-<i>fpc/pic/port</i>] or [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</div>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring E1 Data Inversion</i></li><li>• <i>Configuring E3 Data Inversion</i></li><li>• <i>Configuring T1 Data Inversion</i></li></ul>

---

## ipsec-sa

---

<b>Syntax</b>	<code>ipsec-sa sa-name;</code>
<b>Hierarchy Level</b>	[edit interfaces es-fpc/pic/port <b>unit</b> logical-unit-number <b>family</b> inet], [edit logical-systems logical-system-name interfaces es-fpc/pic/port <b>unit</b> logical-unit-number <b>family</b> inet]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the IP Security (IPsec) security association (SA) name associated with the interface.
<b>Options</b>	<b>sa-name</b> —IPsec security association name.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <i>Junos OS Administration Library</i></li></ul>

## isdn-options

---

<b>Syntax</b>	<pre>isdn-options {     bchannel-allocation (ascending   descending);     calling-number <i>number</i>;     incoming-called-number <i>number</i> &lt;reject&gt;;     spid1 <i>spid-string</i>;     spid2 <i>spid-string</i>;     static-tei-val <i>value</i>;     switch-type (att5e   etsi   nil   ntdms100   ntt);     t310 <i>seconds</i>;     tei-option (first-call   power-up); }</pre>
<b>Hierarchy Level</b>	<pre>[edit interfaces br-<i>pim</i>/0/<i>port</i>], [edit interfaces ct1-<i>pim</i>/0/<i>port</i>], [edit interfaces ce1-<i>pim</i>/0/<i>port</i>]</pre>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. <b>bchannel-allocation</b> option added in Junos OS Release 8.3.
<b>Description</b>	<p>For J Series Services Routers only. Specify the ISDN options for configuring ISDN interfaces for group and user sessions.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring ISDN Physical Interface Properties</i></li><li>• <i>Allocating B-Channels for Dialout</i></li><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## iteration-count

---

<b>Syntax</b>	<code>iteration-count</code> <i>count-value</i> ;
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management maintenance-domain</a> <i>md-name</i> <a href="#">maintenance-association</a> <i>ma-name</i> <a href="#">mep</a> <i>mep-id</i> <a href="#">remote-mep</a> <i>remote-mep-id</i> <a href="#">sla-iterator-profile</a> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1.
<b>Description</b>	Configure the number of iterations for which the connection partakes in the iterator for acquiring SLA measurements.
<b>Options</b>	<p><b>count-value</b>—Number of iterations for which the connection should partake in the iterator for acquiring SLA measurements.</p> <p><b>Range:</b> 1 through 65,535</p> <p><b>Default:</b> 0 (or infinite iterations)</p>
<b>Required Privilege Level</b>	<p>Configure—To enter configuration mode.</p> <p>Control—To modify any configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">sla-iterator-profile on page 970</a></li> <li>• <i>Configuring a Remote MEP with an Iterator Profile</i></li> </ul>

## iteration-period

---

<b>Syntax</b>	<code>iteration-period <i>iteration-period-value</i>;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management performance-monitoring sla-iterator-profiles</a> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1. Statement introduced in Junos OS Release 11.4 for EX Series switches.
<b>Description</b>	Configure the iteration period, which is the maximum number of cycles per iteration (that is, the number of connections registered to an iterator cannot exceed this value).
<b>Options</b>	<i>iteration-period-value</i> —Maximum number of cycles per iteration. <b>Range:</b> 1 through 2000 <b>Default:</b> 2000
<b>Required Privilege Level</b>	Configure—To enter configuration mode. Control—To modify any configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring an Iterator Profile</i></li><li>• <i>Configuring an Iterator Profile on a Switch (CLI Procedure)</i></li></ul>

---

## keep-address-and-control

---

<b>Syntax</b>	keep-address-and-control;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> ccc], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> ccc]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For interfaces with encapsulation type PPP CCC, do not remove the address and control bytes before encapsulating the packet into a tunnel.
<b>Default</b>	If you do not include this statement, address and control bytes are removed before encapsulating the packet into a tunnel.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Disabling the Removal of Address and Control Bytes on page 225</a></li></ul>

## keepalives

---

<b>Syntax</b>	<code>keepalives &lt;interval seconds&gt; &lt;down-count number&gt; &lt;up-count number&gt;;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>],</code> <code>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Enable the sending of keepalives on a physical interface configured with PPP, Frame Relay, or Cisco HDLC encapsulation.</p> <p>For ATM2 IQ interfaces only, you can enable keepalives on a logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"><li>• <b>atm-ppp-llc</b>—PPP over AAL5 LLC encapsulation.</li><li>• <b>atm-ppp-vc-mux</b>—PPP over AAL5 multiplex encapsulation.</li></ul>
<b>Default</b>	Sending of keepalives is enabled by default. The default keepalive interval is 10 seconds for PPP, Frame Relay, or Cisco HDLC. The default down-count is 3 and the default up-count is 1 for PPP or Cisco HDLC.
<b>Options</b>	<p><b>down-count <i>number</i></b>—The number of keepalive packets a destination must fail to receive before the network takes down a link.</p> <p><b>Range:</b> 1 through 255</p> <p><b>Default:</b> 3</p> <p><b>interval <i>seconds</i></b>—The time in seconds between successive keepalive requests.</p> <p><b>Range:</b> 1 through 32767 seconds</p> <p><b>Default:</b> 10 seconds</p> <p><b>up-count <i>number</i></b>—The number of keepalive packets a destination must receive to change a link's status from down to up.</p> <p><b>Range:</b> 1 through 255</p> <p><b>Default:</b> 1</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Keepalives on page 134</a></li><li>• <a href="#">Configuring Frame Relay Keepalives</a></li><li>• <a href="#">Applying PPP Attributes to L2TP LNS Subscribers per Inline Service Interface</a></li></ul>

## key

---

<b>Syntax</b>	<code>key number;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>tunnel</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>tunnel</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For Adaptive Services PICs on M Series routers (except the M320 and M120 routers), identify an individual traffic flow within a tunnel, as defined in RFC 2890, <i>Key and Sequence Number Extensions to GRE</i> .
<b>Options</b>	<b>number</b> —Value of the key. <b>Range:</b> 0 through 4,294,967,295
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## l2tp-interface-id

---

<b>Syntax</b>	<code>l2tp-interface-id <i>name</i>;</code> ( <code>dedicated</code>   <code>shared</code> );
<b>Hierarchy Level</b>	[ <code>edit interfaces sp-fpc/pic/port <b>unit</b> logical-unit-number <b>interface</b></code> ], [ <code>edit logical-systems logical-system-name interfaces sp-fpc/pic/port <b>unit</b> logical-unit-number <b>interface</b></code> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the L2TP options for configuring logical interfaces for group and user sessions.
<b>Options</b>	<b>(dedicated   shared)</b> —Specifies whether a logical interface can host one (dedicated) or multiple (shared) sessions at one time.  <b><i>name</i></b> —Interface identifier that must be replicated at the [ <code>edit access profile <i>name</i></code> ] hierarchy level.
<b>Required Privilege Level</b>	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## lACP (Protocols)

<b>Syntax</b>	<pre>lACP {     traceoptions {         file &lt;filename&gt; &lt;files number&gt; &lt;size size&gt; &lt;world-readable   no-world-readable&gt;;         flag flag;         no-remote-trace;     }     fast-hello-issu;     ppm (Ethernet Switching) centralized; }</pre>
<b>Hierarchy Level</b>	[edit protocols]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 9.3.</p> <p>The <b>ppm centralized</b> option introduced in Junos OS Release 9.4.</p> <p>The <b>fast-hello-issu</b> option introduced in Junos OS Release 14.1.</p>
<b>Description</b>	<p>On MX and T Series routers, you can specify periodic packet management (PPM) as centralized. By default, the PPM is distributed.</p> <p>MX Series routers support Link Aggregation Control Protocol (LACP) with fast hellos during unified ISSU. This support is disabled by default. You must enable the <b>fast-hello-issu</b> option on the main router and on the peer routers before starting unified ISSU. Note that the peer router must also be an MX Series router for this functionality to work.</p>
<b>Default</b>	Distributed PPM processing is enabled for all packets that use PPM.
<b>Options</b>	<p><b>ppm</b>—Set PPM to centralized.</p> <p><b>fast-hello-issu</b>—Enable LACP with fast hellos during unified ISSU.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Tracing LACP Operations</i></li> </ul>

## lACP (802.3ad)

---

<b>Syntax</b>	<pre>lACP {     port-priority <i>port-priority</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> fastether-options <a href="#">802.3ad</a> ], [edit interfaces <i>interface-name</i> gigether-options <a href="#">802.3ad</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Configure the Link Aggregation Control Protocol (LACP) port priority for Ethernet interfaces.
<b>Options</b>	<i>port-priority</i> —Priority for being elected as the active port to collect and distribute traffic. A smaller value indicates a higher priority for selection. <b>Range:</b> 0 through 65,535 <b>Default:</b> 127
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring LACP for Aggregated Ethernet Interfaces</i></li><li>• <a href="#">port-priority on page 890</a></li></ul>

## lacp (Aggregated Ethernet)

<b>List of Syntax</b>	<a href="#">Syntax (NFX Series) on page 715</a> <a href="#">Syntax (EX Series) on page 715</a>
<b>Syntax (NFX Series)</b>	<pre>lacp (active   passive) {   admin-key key;   fast-failover;   link-protection {     disable;     (revertive   non-revertive);   }   <a href="#">periodic interval</a>   system-ID mac-address;   system-priority priority;   force-up; }</pre>
<b>Syntax (EX Series)</b>	<pre>lacp {   (active   passive);   admin-key key;   accept-data;   fast-failover;   <a href="#">link-protection</a> {     <a href="#">disable</a>;     (revertive   <a href="#">non-revertive</a>);   }   <a href="#">periodic interval</a>;   system-id mac-address;   <a href="#">system-priority priority</a>; }</pre>
<b>Hierarchy Level (EX Series)</b>	[edit interfaces aeX <a href="#">aggregated-ether-options</a> ] [edit logical-systems <i>logical-system-name</i> interfaces aeX aggregated-ether-options]
<b>Hierarchy Level (NFX Series)</b>	[edit interfaces <i>interface-name</i> aggregated-ether-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Configure the Link Aggregation Control Protocol (LACP) parameters for interfaces. The remaining statement is explained separately.</p> <p>For EX Series, when you configure the <b>accept-data</b> statement at the <b>[edit interfaces aeX aggregated-ether-options lacp]</b> hierarchy level, the router processes packets received on a member link irrespective of the LACP state if the aggregated Ethernet bundle is up.</p>



**NOTE:** When you configure the `accept-data` statement at the `[edit interfaces aeX aggregated-ether-options lacp]` hierarchy level, this behavior occurs:

- By default, the `accept-data` statement is not configured when LACP is enabled.
- You can configure the `accept-data` statement to improve convergence and reduce the number of dropped packets when member links in the bundle are enabled or disabled.
- When LACP is down and a member link receives packets, the router or switch does not process packets as defined in the IEEE 802.1ax standard. According to this standard, the packets should be dropped, but they are processed instead because the `accept-data` statement is configured.



**NOTE:** The `force-up` statement is not supported on QFX10002 switches.

**Default** If you do not specify LACP as either **active** or **passive**, LACP remains passive.

**Options** **active**—Initiate transmission of LACP packets.

**admin-key *number***—Specify an administrative key for the router or switch.



**NOTE:** You must also configure multichassis link aggregation (MC-LAG) when you configure the `admin-key`.

**fast-failover**—Specify to override the IEEE 802.3ad standard and allow the standby link to receive traffic. Overriding the default behavior facilitates subsecond failover.

**passive**—Respond to LACP packets.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** **interface**—To view this statement in the configuration.  
**interface-control**—To add this statement to the configuration.

- Related Documentation**
- *Configuring Link Aggregation*
  - *Configuring Aggregated Ethernet LACP (CLI Procedure)*
  - *Understanding Aggregated Ethernet Interfaces and LACP for Switches*
  - *Configuring LACP for Aggregated Ethernet Interfaces*

## layer2-policer

---

Syntax	<pre>layer2-policer {     input-policer <i>policer-name</i>;     input-three-color <i>policer-name</i>;     output-policer <i>policer-name</i>;     output-three-color <i>policer-name</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ],
Release Information	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
Description	<p>For 1-Gigabit Ethernet and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces on M Series, MX Series, and T Series routers, and for aggregated Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces on EX Series switches, apply Layer 2 logical interface policers. The following policers are supported:</p> <ul style="list-style-type: none"><li>• Two-color</li><li>• Single-rate tricolor marking (srTCM)</li><li>• Two-rate tricolor marking (trTCM)</li></ul> <p>Two-color and tricolor policers are configured at the <b>[edit firewall]</b> hierarchy level.</p>
Options	<p><b>input-policer <i>policer-name</i></b>—Two-color input policer to associate with the interface. This statement is mutually exclusive with the <b>input-three-color</b> statement.</p> <p><b>input-three-color <i>policer-name</i></b>—Tricolor input policer to associate with the interface. This statement is mutually exclusive with the <b>input-policer</b> statement.</p> <p><b>output-policer <i>policer-name</i></b>—Two-color output policer to associate with the interface. This statement is mutually exclusive with the <b>output-three-color</b> statement.</p> <p><b>output-three-color <i>policer-name</i></b>—Tricolor output policer to associate with the interface. This statement is mutually exclusive with the <b>output-policer</b> statement.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i></li><li>• <i>Configuring Gigabit Ethernet Two-Color and Tricolor Policers</i></li></ul>

---

## **lcp-max-conf-req**

---

<b>Syntax</b>	<code>lcp-max-conf-req <i>number</i></code>
<b>Hierarchy Level</b>	[edit interfaces <i>so-fpc/pic/port</i> <b>unit</b> <i>number</i> <b>ppp-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Set the maximum number of LCP Configure-Requests to be sent, after which the router goes to LCP down state.
<b>Options</b>	<b><i>number</i></b> —From 0 to 65,535, where 0 means send infinite LCP Configure-Requests, and any other value specifies the maximum number LCP Configure-Requests to send and then stop sending.  <b><i>Default</i></b> —254
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the LCP Configure-Request Maximum Sent on page 195</a></li><li>• <a href="#">ppp-options on page 892</a></li></ul>

## **lcp-restart-timer**

---

<b>Syntax</b>	<code>lcp-restart-timer <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>ppp-options</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>ppp-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For interfaces with PPP, PPP TCC, PPP over Ethernet, PPP over ATM, and PPP over Frame Relay encapsulations, configure a restart timer for the Link Control Protocol (LCP) component of a PPP session.
<b>Options</b>	<b>milliseconds</b> —The time, in milliseconds, between successive LCP configuration requests. <b>Range:</b> 20 through 10000 milliseconds <b>Default:</b> 3 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the PPP Restart Timers on page 193</a></li></ul>


## level

---

<b>Syntax</b>	<code>level <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management <b>maintenance-domain</b> <i>domain-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4. Statement introduced in junos os release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	A number used in connectivity fault management (CFM) messages to identify the maintenance association. The number is embedded in each of the CFM frames. CFM messages within a given level are processed by maintenance end points (MEPs) at the same level. For example, the operator domain can be level 0, the provider domain can be level 3, and the customer domain can be level 7.
<b>Options</b>	<b><i>number</i></b> —A number used to identify the maintenance domain to which the CFM message belongs. <b>Range:</b> 0 through 7
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Creating a Maintenance Domain</i></li> </ul>

## line-encoding

---

<b>Syntax</b>	line-encoding (ami   b8zs);
<b>Hierarchy Level</b>	[edit interfaces ct1- <i>fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> t1- <i>options</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	Set the line encoding format on the T1 interface.
<div> <b>NOTE:</b> When configuring CT1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the line-encoding statement must be included at the [edit interfaces ct1-<i>fpc/pic/port</i>] hierarchy level.</div>	
<b>Default</b>	The default line encoding is B8ZS.
<b>Options</b>	<b>ami</b> —Use Alternate Mark Inversion (AMI) line encoding. <b>b8zs</b> —Use bipolar with 8-zeros substitution (B8ZS) line encoding.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring T1 Line Encoding</i></li></ul>

---

## line-protocol

---

<b>Syntax</b>	<code>line-protocol <i>protocol</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For serial interfaces only, configure the line protocol.
<b>Options</b>	<b><i>protocol</i></b> —You can specify the one of the following line protocols: <ul style="list-style-type: none"><li>• <b>eia530</b>—Line protocol EIA-530</li><li>• <b>v.35</b>—Line protocol V.35</li><li>• <b>x.21</b>—Line protocol X.21</li></ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Serial Line Protocol on page 338</a></li></ul>

## line-rate

---

<b>Syntax</b>	<code>line-rate <i>line-rate</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">shdsl-options</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">shdsl-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.4.
<b>Description</b>	For J Series Services Routers only, configure the SHDSL line rate.
<b>Options</b>	<p><b><i>line-rate</i></b>—SHDSL line rate, in Kbps. Possible values are:</p> <p>2-wire (Kbps): 192, 256, 320, 384, 448, 512, 576, 640, 704, 768, 832, 896, 960, 1024, 1088, 1152, 1216, 1280, 1344, 1408, 1472, 1536, 1600, 1664, 1728, 1792, 1856, 1920, 1984, 2048, 2112, 2176, 2240, 2304, <b>auto</b></p> <p>4-wire (Kbps): 384, 512, 640, 768, 896, 1024, 1152, 1280, 1408, 1536, 1664, 1792, 1920, 2048, 2176, 2304, 2432, 2560, 2688, 2816, 2944, 3072, 3200, 3328, 3456, 3584, 3712, 3840, 3968, 4096, 4224, 4352, 4480, 4608</p> <p><b>Default:</b> For 2-wire mode, <b>auto</b>; for 4-wire mode, 4608 Kbps</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## linear-red-profile

<b>Syntax</b>	<code>linear-red-profile <i>profile-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, assign a linear RED profile to a specified forwarding class. To define the linear RED profiles, include the <a href="#">linear-red-profiles</a> statement at the [edit interfaces at- <i>fpc/pic/port</i> atm-options] hierarchy level.
<b>Default</b>	If you do not include either the <b>epd-threshold</b> or the <b>linear-red-profile</b> statement in the forwarding class configuration, the Junos OS uses an EPD threshold based on the available bandwidth and other parameters.
<b>Options</b>	<i>profile-name</i> —Name of the linear RED profile.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring an ATM Scheduler Map</i></li> <li>• <a href="#">linear-red-profiles on page 726</a></li> <li>• <i>Applying Scheduler Maps to ATM Interfaces</i></li> <li>• <i>epd-threshold</i></li> </ul>

## linear-red-profiles

---

<b>Syntax</b>	<pre>linear-red-profiles <i>profile-name</i> {     high-plp-threshold <i>percent</i>;     low-plp-threshold <i>percent</i>;     queue-depth <i>cells</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <a href="#">atm-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define CoS virtual circuit drop profiles for RED. When a packet arrives, RED checks the queue fill level. If the fill level corresponds to a nonzero drop probability, the RED algorithm determines whether to drop the arriving packet.
<b>Options</b>	<p><i>profile-name</i>—Name of the drop profile.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li><li>• <i>Configuring Linear RED Profiles on ATM Interfaces</i></li></ul>

## link-adjacency-loss

---

<b>Syntax</b>	<pre>link-adjacency-loss;</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile</a> event]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Loss of adjacency with IEEE 802.3ah link-fault management peer event. When included, the loss-of-adjacency event triggers the action specified under the <b>action</b> statement.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Monitoring the Loss of Link Adjacency</i></li></ul>

## link-discovery

---

<b>Syntax</b>	link-discovery (active   passive);
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management interface</a> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	For Ethernet interfaces on EX Series switches, and M320, M120, MX Series, and T Series routers, specify the discovery mode used for IEEE 802.3ah Operation, Administration, and Management (OAM) support. The discovery process is triggered automatically when OAM 802.3ah functionality is enabled on a port. Link monitoring is done when the interface sends periodic OAM PDUs.
<b>Options</b>	( <b>active   passive</b> )—Passive or active mode. In active mode, the interface discovers and monitors the peer on the link if the peer also supports IEEE 802.3ah OAM functionality. In passive mode, the peer initiates the discovery process. Once the discovery process is initiated, both sides participate in discovery.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Link Discovery</i></li> </ul>

## link-down

---

<b>Syntax</b>	link-down;
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Mark the interface down for transit traffic.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Specifying the Actions to Be Taken for Link-Fault Management Events</i></li> </ul>

## link-event-rate

---

**Syntax**    link-event-rate {  
              frame-error *count*;  
              frame-period *count*;  
              frame-period-summary *count*;  
              symbol-period *count*;  
              }

**Hierarchy Level**    [edit protocols [oam ethernet link-fault-management action-profile event](#)]

**Release Information**    Statement introduced in Junos OS Release 8.5.

**Description**    Configure the number of link-fault management events per second.

**Required Privilege**    interface—To view this statement in the configuration.  
**Level**    interface-control—To add this statement to the configuration.

**Related Documentation**    • *Configuring Threshold Values for Fault Events in an Action Profile*

## link-fault-management

```
Syntax  link-fault-management {
        action-profile profile-name {
            action {
                link-down;
                send-critical-event;
                syslog;
            }
            event {
                link-adjacency-loss;
                link-event-rate {
                    frame-error count;
                    frame-period count;
                    frame-period-summary count;
                    symbol-period count;
                }
                protocol-down;
            }
        }
    }
    interface interface-name {
        apply-action-profile profile-name;
        link-discovery (active | passive);
        loopback-tracking;
        pdu-interval interval;
        pdu-threshold threshold-value;
        remote-loopback;
        event-thresholds {
            frame-error count;
            frame-period count;
            frame-period-summary count;
            symbol-period count;
        }
        negotiation-options {
            allow-remote-loopback;
            no-allow-link-events;
        }
    }
}
```

**Hierarchy Level** [edit protocols [oam](#) [ethernet](#)]

**Release Information** Statement introduced in Junos OS Release 8.2.

**Description** For Ethernet interfaces on M320, M120, MX Series, and T Series routers and EX Series switches, specify fault signaling and detection for IEEE 802.3ah Operation, Administration, and Management (OAM) support.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Enabling IEEE 802.3ah OAM Support*

---

## link-layer-overhead

---

**Syntax** link-layer-overhead *percent*;

**Hierarchy Level** [edit interfaces *interface-name* [mlfr-uni-nni-bundle-options](#)],  
[edit interfaces *interface-name* unit *logical-unit-number*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For AS PIC or MultiServices PIC link services IQ interfaces (**lsq**) only, configure the percentage of total bundle bandwidth to be set aside for link-layer overhead.



**Options** *percent*—Percentage of total bundle bandwidth to be set aside for link-layer overhead.  
**Range:** 0 through 50 percent  
**Default:** 4 percent

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Junos OS Services Interfaces Library for Routing Devices*

## link-mode

<b>Syntax</b>	link-mode <i>mode</i> (automatic   full-duplex   half-duplex);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit interfaces <i>interface-name</i> ether-options], [edit interfaces ge-pim/0/0 <i>switch-options</i> <i>switch-port</i> <i>port-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	Set the device's link connection characteristic.
<b>Options</b>	<p><i>mode</i>—Link characteristics:</p> <ul style="list-style-type: none"> <li>• <b>automatic</b>—Link mode is negotiated. This is the default for EX Series switches.</li> <li>• <b>full-duplex</b>—Connection is full duplex.</li> <li>• <b>half-duplex</b>—Connection is half duplex.</li> </ul> <p><b>Default:</b> Fast Ethernet interfaces can operate in either full-duplex or half-duplex mode. The router's or switch's management Ethernet interface, <b>fxp0</b> or <b>em0</b>, and the built-in Fast Ethernet interfaces on the FIC (M7i router) autonegotiate whether to operate in full-duplex or half-duplex mode. Unless otherwise noted here, all other interfaces operate only in full-duplex mode.</p>
	<p> <b>NOTE:</b> On EX Series switches, if no-auto-negotiation is specified in [edit interfaces <i>interface-name</i> ether-options], you can select only full-duplex or half-duplex. If auto-negotiation is specified, you can select any mode.</p>
	<p> <b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• Member links of an aggregated Ethernet bundle must not be explicitly configured with a link mode. You must remove any such link-mode configuration before committing the aggregated Ethernet configuration.</li> <li>• Starting with Junos OS release 17.4R1 and later, the link-mode configuration is not supported for 10-Gigabit Ethernet interfaces.</li> </ul>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

**Related  
Documentation**

- *Configuring the Link Characteristics on Ethernet Interfaces*
- [Understanding Management Ethernet Interfaces on page 10](#)
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure) for EX Series Switches with ELS support*

## link-protection

<b>Syntax</b>	<pre>link-protection {     disable;     (revertive   non-revertive); }</pre>
<b>Hierarchy Level</b>	<p>[edit interfaces aex <b>aggregated-ether-options</b>]          [edit interfaces aex aggregated-ether-options <i>lcp</i>]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.3.          Statement introduced in Junos OS Release 9.0 for EX Series switches.          Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.          Support for <b>disable</b>, <b>revertive</b>, and <b>non-revertive</b> statements added in Junos OS Release 9.3.</p>
<b>Description</b>	<p>On the router, for aggregated Ethernet interfaces only, configure link protection. In addition to enabling link protection, a primary and a secondary (backup) link must be configured to specify what links egress traffic should traverse. To configure primary and secondary links on the router, include the <b>primary</b> and <b>backup</b> statements at the [edit interfaces <i>ge-fpc/pic/port</i> <b>gigether-options 802.3ad aex</b>] hierarchy level or the [edit interfaces <i>fe-fpc/pic/port</i> <b>fastether-options 802.3ad aex</b>] hierarchy level.</p> <p>On the switch, you can configure either Junos OS link protection for aggregated Ethernet interfaces or the LACP standards link protection for aggregated Ethernet interfaces.</p> <p>For Junos OS link protection, specify <b>link-protection</b> at the following hierarchy levels:</p> <ul style="list-style-type: none"> <li>• [edit interfaces <i>ge-fpc/pic/port</i> <b>ether-options 802.3ad aex</b>]</li> <li>• [edit interfaces <i>xe-fpc/pic/port</i> <b>ether-options 802.3ad aex</b>] hierarchy level or at the [edit interfaces <i>xe-fpc/pic/port</i> <b>ether-options 802.3ad aex</b>] hierarchy level.</li> </ul> <p>To disable link protection, use the <b>delete interface ae aggregate-ether-options link-protection</b> statement at the [edit interfaces aex <b>aggregated-ether-options</b>] hierarchy level or the [edit interfaces aex <b>aggregated-ether-options lcp</b>] hierarchy level.</p>
<b>Options</b>	<p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.          interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Aggregated Ethernet Link Protection</i></li> <li>• <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches</i></li> </ul>

## link-speed (Aggregated Ethernet)

---

<b>Syntax</b>	<code>link-speed <i>speed</i>;</code>
<b>Hierarchy Level (EX Series)</b>	[edit interfaces aex <a href="#">aggregated-ether-options</a> ], [edit interfaces interface-range <i>name</i> aggregated-ether-options], [edit interfaces interface-range <i>name</i> <a href="#">aggregated-sonet-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. <b>mixed</b> option added in Junos OS Release 15.1F3 and 16.1R2 for PTX5000 routers and 15.1F6 and 16.1R2 for PTX3000 routers.
<b>Description</b>	For aggregated Ethernet interfaces only, set the required link speed.
<b>Options</b>	<p><b><i>speed</i></b>—For aggregated Ethernet links, you can specify <b><i>speed</i></b> in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000).</p> <p>Aggregated Ethernet links on the M120 router can have one of the following speeds:</p> <ul style="list-style-type: none"><li>• <b>100m</b>—Links are 100 Mbps.</li><li>• <b>10g</b>—Links are 10 Gbps.</li><li>• <b>1g</b>—Links are 1 Gbps.</li><li>• <b>oc192</b>—Links are OC192 or STM64c.</li></ul> <p>Aggregated Ethernet links on EX Series switches can be configured to operate at one of the following speeds:</p> <ul style="list-style-type: none"><li>• <b>10m</b>—Links are 10 Mbps.</li><li>• <b>100m</b>—Links are 100 Mbps.</li><li>• <b>1g</b>—Links are 1 Gbps.</li><li>• <b>10g</b>—Links are 10 Gbps.</li></ul> <p>Aggregated Ethernet links on T Series, MX Series, PTX Series routers, and QFX5100, QFX10002, QFX10008, and QFX10016 switches can be configured to operate at one of the following speeds:</p> <ul style="list-style-type: none"><li>• <b>100g</b>—Links are 100 Gbps.</li><li>• <b>100m</b>—Links are 100 Mbps.</li><li>• <b>10g</b>—Links are 10 Gbps.</li><li>• <b>1g</b>—Links are 1 Gbps.</li><li>• <b>40g</b>—Links are 40 Gbps.</li></ul>

- **50g**—Links are 50 Gbps.
- **80g**—Links are 80 Gbps.
- **8g**—Links are 8 Gbps.
- **mixed**—Links are of various speeds.
- **oc192**—Links are OC192.

**mixed**—Enables bundling of different Ethernet rate links in the same Aggregated Ethernet interface.

**Required Privilege Level**    interface—To view this statement in the configuration.  
   interface-control—To add this statement to the configuration.

**Related Documentation**

- *Aggregated Ethernet Interfaces Overview*
- [Configuring Aggregated Ethernet Link Speed on page 117](#)
- *Configuring Mixed Rates and Mixed Modes on Aggregated Ethernet Bundles*
- *Configuring Aggregated Ethernet Links (CLI Procedure)*
- *Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*

## link-speed (Aggregated SONET/SDH)

---

<b>Syntax</b>	link-speed ( <i>speed</i>   mixed);
<b>Hierarchy Level</b>	[edit interfaces asx aggregated-sonet-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. <b>mixed</b> option added in Release 8.0.
<b>Description</b>	For aggregated SONET/SDH interfaces only, set the required link speed.
<b>Options</b>	<p><b>speed</b>—Aggregated SONET/SDH links can have one of the following speed values.</p> <ul style="list-style-type: none"><li>• <b>oc3</b>—Links are OC3c or STM1c.</li><li>• <b>oc12</b>—Links are OC12c or STM4c.</li><li>• <b>oc48</b>—Links are OC48c or STM16c.</li><li>• <b>oc192</b>—Links are OC192c or STM64c.</li><li>• <b>oc768</b>—Links are OC768c or STM256c.</li></ul> <p><b>mixed</b>—For aggregated SONET/SDH links on T Series routers, you can mix interface speeds in SONET/SDH aggregation bundles. Interface speeds from OC3 through OC768 are supported.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Aggregated Ethernet Link Speed on page 117</a></li><li>• <i>Configuring Aggregated SONET/SDH Interfaces</i></li></ul>

---

## linktrace

---

<b>Syntax</b>	<pre>linktrace {   age (30m   10m   1m   30s   10s);   path-database-size path-database-size; }</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Configure connectivity fault management linktrace parameters.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Linktrace Protocol in CFM</i></li></ul>

## lmi (Frame Relay)

---

**Syntax**    lmi {  
              lmi-type (ansi | itu | c-lmi);  
              n391dte number;  
              n392dce seconds;  
              n392dte number;  
              n393dce number;  
              n393dte number;  
              t391dte number;  
              t392dce seconds;  
              }

**Hierarchy Level**    [edit interfaces *interface-name*]

**Release Information**    Statement introduced before Junos OS Release 7.4.

**Description**    Set Frame Relay keepalive parameters.

**Options**    n391dte—DTE full status polling interval.  
              **Range:** 1 through 255  
              **Default:** 6

              n392dce—DCE error threshold, in number of errors.  
              **Range:** 1 through 10  
              **Default:** 3

              n392dte—DTE error threshold, in number of errors.  
              **Range:** 1 through 10  
              **Default:** 3

              n393dce—DCE monitored event-count.  
              **Range:** 1 through 10  
              **Default:** 4

              n393dte—DTE monitored event-count.  
              **Range:** 1 through 10  
              **Default:** 4

              t391dte—DTE polling timer.  
              **Range:** 5 through 30 seconds  
              **Default:** 10 seconds

              t392dce—DCE polling timer.  
              **Range:** 5 through 30 seconds  
              **Default:** 15 seconds

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Tunable Keepalives for Frame Relay LMI*
- [lmi-type on page 741](#)
- [mlfr-uni-nni-bundle-options on page 780](#)

## lmi (Ethernet OAM)

---

**Syntax**

```
lmi {
  status-counter count;
  polling-verification-timer value;
  interface name {
    uni-id uni-name;
    status-counter number;
    polling-verification-timer value;
    evc-map-type (all-to-one-bundling | bundling | service-multiplexing);
    evc evc-name {
      default-evc;
      vlan-list vlan-id-list;
    }
  }
}
```

**Hierarchy Level** [edit protocols [oam](#) [ethernet](#)]

**Release Information** Statement introduced in Junos OS Release 9.5.

**Description** On routers with **ge**, **xe**, or **ae** interfaces, configure an OAM Ethernet Local Management Interface (E-LMI).



**NOTE:** On MX Series routers, E-LMI is supported on Gigabit Ethernet (**ge**), 10-Gigabit Ethernet (**xe**), and Aggregated Ethernet (**ae**) interfaces configured on MX Series routers with DPC only.

---

**Options**

- status-counter *count***—Status counter (N393), defaults to 4.
- interface *name***—Polling verification timer (T392), defaults to 15 seconds.
- uni-id *uni-name***—(Optional) Defaults to the physical interface name.
- status-counter *number***—(Optional) Defaults to a global value.
- polling-verification-timer *value***—(Optional) Defaults to a global value.
- evc-map-type (all-to-one-bundling | bundling | service-multiplexing)**—Specify the Ethernet virtual connection (EVC) map type.
- evc *evc-name***—Specify the name of the EVC.
- default-evc**—Set the specified EVC as the default EVC.
- vlan-list *vlan-id-list***—Specify a group of VLANs to assign to the EVC.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Ethernet Local Management Interface*
- [evcs on page 599](#)

## lmi-type

**Syntax** lmi-type (ansi | itu | c-lmi);

**Hierarchy Level** [edit interfaces *interface-name* [lmi](#)],  
[edit interfaces *interface-name* [mlfr-uni-nni-bundle-options](#)]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Set Frame Relay Local Management Interface (LMI) type.



**NOTE:** Consortium LMI is supported on all MPCs and I-chip based FPCs.

**Options** ansi—Use ANSI T1.617 Annex D LMIs.

itu—Use ITU Q933 Annex A LMIs.

c-lmi—Use Consortium LMI.

**Default:** ansi

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Frame Relay Keepalives*
- [mlfr-uni-nni-bundle-options on page 780](#)
- [lmi \(Frame Relay\) on page 738](#)
- *Junos OS Services Interfaces Library for Routing Devices*

## load-interval

---

<b>Syntax</b>	<code>load-interval seconds;</code>
<b>Hierarchy Level</b>	[edit interfaces dln <a href="#">unit logical-unit-number dialer-options</a> ], [edit logical-systems <i>logical-system-name</i> interfaces dln <a href="#">unit logical-unit-number dialer-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	On J Series Services Routers with ISDN logical interfaces, specify the interval used to calculate the average load on the network. By default, the average interface load is calculated every 60 seconds.
<b>Options</b>	<b>seconds</b> —Number of seconds at which the average load calculation is triggered. <b>Range:</b> 20 through 180, in 10-second intervals <b>Default:</b> 60 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## load-threshold

<b>Syntax</b>	<code>load-threshold <i>percent</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces dln <b>unit</b> <i>logical-unit-number</i> <b>dialer-options</b> ], [edit logical-systems <i>logical-system-name</i> interfaces dln <b>unit</b> <i>logical-unit-number</i> <b>dialer-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	On J Series Services Routers with ISDN logical interfaces, specify the bandwidth threshold percentage used for adding interfaces. Another link is added to the multilink bundle when the load reaches the threshold value you set. Specify a percentage between 0 and 100.
<b>Options</b>	<b>percent</b> —Bandwidth threshold percentage used for adding interfaces. When set to 0, all available channels are dialed. <b>Range:</b> 0 through 100 seconds <b>Default:</b> 100 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## local-name

---

<b>Syntax</b>	<code>local-name <i>name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> ppp-options pap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options chap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap]</code> <code>[edit dynamic-profiles <i>profile-name</i> interfaces pp0 unit "\$junos-interface-unit" ppp-options],</code> <code>[edit dynamic-profiles <i>profile-name</i> interfaces "\$junos-interface-ifd-name" unit "\$junos-interface-unit" ppp-options]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Support for PAP added in Junos OS Release 8.3. Support at the <code>[edit dynamic-profiles <i>profile-name</i> interfaces "\$junos-interface-ifd-name" unit "\$junos-interface-unit" ppp-options]</code> hierarchy level introduced in Junos OS Release 14.2.
<b>Description</b>	<p>Specify the name of the interface used for CHAP or PAP authentication. Dynamic interfaces are supported only for CHAP authentication.</p> <p>For ATM2 IQ interfaces only, you can configure a CHAP local name on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"><li>• <b>atm-ppp-llc</b>—PPP over AAL5 LLC encapsulation.</li><li>• <b>atm-ppp-vc-mux</b>—PPP over AAL5 multiplex encapsulation.</li></ul>
<b>Options</b>	<p><b>name</b>—Name of the interface used as an identifier in CHAP challenge and response packets or PAP request and response packets.</p> <p><b>Default:</b> When you do not include the <b>local-name</b> statement in the configuration, the interface sends the router's system hostname in CHAP challenge and response packets or PAP request and response packets.</p> <p><b>Range:</b> For CHAP authentication, a string of 1 through 32 characters. For PAP authentication, a string of 1 through 8 characters.</p>
<b>Required Privilege Level</b>	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the PPP Challenge Handshake Authentication Protocol on page 136</a></li><li>• <a href="#">Configuring the PPP Password Authentication Protocol On a Physical Interface on page 139</a></li></ul>

- *Junos OS Administration Library*

## local-password

<b>Syntax</b>	<code>local-password password;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">ppp-options pap</a> ], [edit interfaces <i>interface-name</i> <a href="#">unit logical-unit-number ppp-options pap</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit logical-unit-number ppp-options pap</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	Configure the host password for sending PAP requests.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the Local Password</i></li> <li>• <a href="#">Configuring the PPP Password Authentication Protocol On a Physical Interface on page 139</a></li> </ul>

## lockout

<b>Syntax</b>	<code>lockout;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure a lockout of protection, forcing the use of the working circuit and locking out the protect circuit regardless of anything else.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Switching Between the Working and Protect Circuits</i></li> </ul>

## log-prefix (Interfaces)

---

<b>Syntax</b>	<code>log-prefix <i>prefix-value</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> services-options syslog <b>host</b> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Set the system logging prefix value.
<b>Options</b>	<i>prefix-value</i> —System logging prefix value.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <i>Configuring System Logging for Services Interfaces</i></li></ul>

## logical-interface-fpc-redundancy (Aggregated Ethernet Subscriber Interfaces)

---

<b>Syntax</b>	<code>logical-interface-fpc-redundancy;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>aenumber</i> <b>aggregated-ether-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.2. Statement introduced in Junos OS Release 13.2R2 for EX Series switches.
<b>Description</b>	<p>Provide module redundancy for demux subscribers on aggregated Ethernet bundles configured with targeted distribution. Backup links for a subscriber are chosen on a different EQ DPC or MPC from the primary link, based on the link with the fewest number of subscribers among the links on different modules. If all links are on a single module when this is configured, backup links are not provisioned.</p> <p>By default, link redundancy is provided for the aggregated Ethernet bundle.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Link and Module Redundancy for Demux Subscribers in an Aggregated Ethernet Interface</i></li><li>• <i>Configuring Module Redundancy for a Virtual Chassis</i></li></ul>

## logical-interface-policer

**Syntax** `logical-interface-policer;`

**Hierarchy Level** `[edit dynamic-profiles profile-name firewall policer policer-name],`  
`[edit dynamic-profiles profile-name firewall three-color-policer name],`  
`[edit firewall atm-policer atm-policer-name],`  
`[edit firewall policer policer-name],`  
`[edit firewall policer policer-template-name],`  
`[edit firewall three-color-policer policer-name],`  
`[edit logical-systems logical-system-name firewall policer policer-name],`  
`[edit logical-systems logical-system-name firewall three-color-policer name]`

**Release Information** Statement introduced before Junos OS Release 7.4.  
 Support at the `[edit firewall three-color-policer policer-name]` hierarchy level introduced in Junos OS Release 8.2.  
 Logical systems support introduced in Junos OS Release 9.3.  
 Support at the `[edit dynamic-profiles ... policer policer-name]` and `[edit dynamic-profiles ... three-color-policer name]` hierarchy levels introduced in Junos OS Release 11.4.  
 Statement introduced in Junos OS Release 12.3R2 for EX Series switches.  
 Support for PTX series routers with third-generation FPCs added in Junos OS Release 18.3R1.

**Description** Configure a logical interface policer. For PTX series routers running Junos OS Release 18.3R1 or later, you can use this command to configure separate firewall filters for different family address types (IPv4 and IPv6) that share the same interface, and configure the same policer as an action for the filter.

To configure the aggregate policer, configure the firewall policer you want to use as **logical-interface-policer**. And at the **firewall family *family-name* filter *filter-name*** hierarchy level where you will reference the policer, make the policer an **interface-specific** firewall filter action.

The sample configuration shows the relationship.

```
firewall {
  policer Shared_Policer {
    logical-interface-policer;
    if-exceeding {
      bandwidth-limit 100m;
      burst-size-limit 500k;
    }
    then {
      discard;
    }
  }
}

family inet {
  filter filter_name {
    interface-specific;
    term term_name {
```

```
        then {  
            policer Shared_Policer;  
            count cinet;  
        }  
    }  
}
```



**NOTE:** Starting in Junos OS Release 12.2R2, on T Series Core Routers only, you can configure an MPLS LSP policer for a specific LSP to be shared across different protocol family types. You must include the `logical-interface-policer` statement to do so.

---

**Required Privilege Level** firewall—To view this statement in the configuration.  
firewall-control—To add this statement to the configuration.

**Related Documentation**

- *Two-Color and Three-Color Logical Interface Policers*
- *Traffic Policer Types*
- *Configuring and Applying Tricolor Marking Policers*
- *action*
- *Configuring Gigabit Ethernet Two-Color and Tricolor Policers*
- [action on page 418](#)

---

## logical-systems

---

<b>Syntax</b>	<pre>logical-systems {     <i>logical-system-name</i> {         ...<i>logical-system-configuration</i>...     } }</pre>
<b>Hierarchy Level</b>	[edit]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement name changed from <b>logical-routers</b> in Junos OS Release 9.3.
<b>Description</b>	Configure a logical system.
<b>Options</b>	<i>logical-system-name</i> —Name of the logical system.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Logical Systems Feature Guide</i></li></ul>

## long-buildout

---

<b>Syntax</b>	(long-buildout   no-long-buildout);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure the T3 line buildout. A T3 interface has two settings for the T3 line buildout: a short setting, which is less than 255 feet (68 meters), and a long setting, which is greater than 255 feet and shorter than 450 feet (137 meters).</p> <p>This statement applies to copper-cable-based T3 interfaces only. You cannot configure a line buildout for a DS3 channel on a channelized OC12 interface, which runs over fiber-optic cable.</p>
<b>Default</b>	A T3 interface uses the short line buildout setting ( <b>no-long-buildout</b> ) for wires shorter than 255 feet (68 meters).
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the T3 Line Buildout</i></li></ul>

## loop-timing

<b>Syntax</b>	(loop-timing   no-loop-timing);
<b>Hierarchy Level</b>	[edit interfaces ct3- <i>fpc/pic/port</i> <b>t3-options</b> ], [edit interfaces e1- <i>fpc/pic/port:0</i> <b>sonet-options</b> ], [edit interfaces stm1- <i>fpc/pic/port</i> <b>sonet-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For channelized IQ interfaces and non-IQ channelized STM1 interfaces only, configure the SONET/SDH or DS3-level clocking source.



**NOTE:** On M Series, MX Series, and T Series routers, under E1 channels, loop timing can be configured only at channel 0. When you configure on channel 0, it is applicable on all channels as internal by default.

<b>Options</b>	<b>loop-timing</b> —Configure loop timing (external) clocking. <b>no-loop-timing</b> —Configure line timing (internal) clocking. <b>Default:</b> no-loop-timing
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Channelized IQ and IQE SONET/SDH Loop Timing</i></li> <li>• <i>Configuring the Channelized T3 Loop Timing</i></li> <li>• <a href="#">clocking on page 486</a></li> </ul>

## loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3)

**Syntax** `loopback (local | payload | remote);`

**Hierarchy Level** `[edit interfaces ce1-fpc/pic/port],`  
`[edit interfaces ct1-fpc/pic/port],`  
`[edit interfaces t1-fpc/pic/port],`  
`[edit interfaces interface-name ds0-options],`  
`[edit interfaces interface-name dsl-options],`  
`[edit interfaces interface-name e1-options],`  
`[edit interfaces interface-name e3-options],`  
`[edit interfaces interface-name shdsl-options],`  
`[edit interfaces interface-name sonet-options],`  
`[edit interfaces interface-name t1-options],`  
`[edit interfaces interface-name t3-options]`

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

**Description** Configure a loopback connection. To turn off the loopback capability, remove the **loopback** statement from the configuration.



**NOTE:** When configuring CE1 or CT1 interfaces on 10-port Channelized E1/T1 IQE PICs, the loopback statement must be included with the **local** or **remote** option at the `[edit interfaces ce1-fpc/pic/port]` or `[edit interfaces ct1-fpc/pic/port]` hierarchy level as appropriate.

When configuring T1 interfaces on 10-port Channelized E1/T1 IQE PICs, the loopback statement must be included with the **payload** option at the `[edit interfaces t1-fpc/pic/port]` hierarchy level.



**NOTE:** When configuring CE1 or CT1 interfaces on the 16-port Channelized E1/T1 MIC (MIC-3D-16CHE1-T1-CE), you must include the loopback statement at the `[edit interfaces ce1-fpc/pic/port]` hierarchy level, or `[edit interfaces ct1-fpc/pic/port]`

To configure loopback on channelized IQ and IQE PICs, SONET/SDH level, use the **sonet-options loopback** statement **local** and **remote** options at the controller interface (coc48, cstm16, coc12, cstm4, coc3, cstm1). It is ignored for path-level interfaces **so-fpc/pic/port** or **so-fpc/pic/port:channel**.

**Options** **local**—Loop packets, including both data and timing information, back on the local router's PIC. NxDS0 IQ interfaces do not support local loopback.

**payload**—For channelized T3, T1, and NxDSO IQ interfaces only, loop back data only (without clocking information) on the remote router's PIC. With payload loopback, overhead is recalculated. Neither ATM-over-asymmetrical digital subscriber line (ADSL) interfaces nor ATM-over-SHDSL interfaces support payload loopback.

**remote**—Loop packets, including both data and timing information, back on the remote router's interface card. NxDSO IQ interfaces do not support remote loopback.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring E3 and T3 Parameters on ATM Interfaces*
- *Configuring E1 Loopback Capability*
- *Configuring E3 Loopback Capability*
- *Configuring SONET/SDH Loopback Capability to Identify a Problem as Internal or External*
- *Configuring SHDSL Operating Mode on an ATM Physical Interface*
- *Configuring T1 Loopback Capability*
- *Configuring T3 Loopback Capability*
- [feac-loop-respond on page 614](#)

## loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)

**Syntax** (loopback | no-loopback);

**Hierarchy Level** [edit interfaces *interface-name* aggregated-ether-options],  
[edit interfaces *interface-name* ether-options],  
[edit interfaces *interface-name* fastether-options],  
[edit interfaces *interface-name* gigether-options],  
[edit interfaces interface-range *name* ether-options]

For QFX Series and EX Series:

[edit interfaces *interface-name* aggregated-ether-options],  
[edit interfaces *interface-name* ether-options],

For SRX Series Devices and vSRX:

[edit interfaces *interface-name* redundant-ether-options]

**Release Information** Statement introduced before Junos OS Release 7.4 for MX Series.  
Statement introduced in Junos OS Release 9.0 for EX Series switches.  
Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.  
Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
Statement modified in Junos OS Release 9.2 for the SRX Series.

**Description** For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces, enable or disable loopback mode.



### NOTE:

- By default, local aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces connect to a remote system.
- IPv6 Neighbor Discovery Protocol (NDP) addresses are not supported on Gigabit Ethernet interfaces when loopback mode is enabled on the interface. That is, if the loopback statement is configured at the [edit interfaces *ge-fpc/pic/port* gigether-options] hierarchy level, an NDP address cannot be configured at the [edit interfaces *ge-fpc/pic/port* unit *logical-unit-number* family inet6 address] hierarchy level.

**Default** By default, loopback is disabled.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

- Related Documentation**
- [Configuring Ethernet Loopback Capability](#)
  - [Understanding Interfaces](#)

## loopback (Serial)

---

<b>Syntax</b>	<code>loopback <i>mode</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure a loopback connection.
<b>Default</b>	If you do not include this statement, there is no loopback connection.
<b>Options</b>	<p><i>mode</i>—You can specify the one of the following loopback modes:</p> <ul style="list-style-type: none"> <li>• <b>dce-local</b>—For EIA-530 interfaces only, loop packets back on the local DCE.</li> <li>• <b>dce-remote</b>—For EIA-530 interfaces only, loop packets back on the remote DCE.</li> <li>• <b>local</b>—Loop packets back on the local router's PIC.</li> <li>• <b>remote</b>—Loop packets back on the line interface unit (LIU).</li> </ul>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Serial Loopback Capability on page 348</a></li> </ul>

## loopback-clear-timer

---

<b>Syntax</b>	<code>loopback-clear-timer <i>seconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">ppp-options</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">ppp-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	For interfaces with PPP, PPP TCC, PPP over Ethernet, PPP over ATM, and PPP over Frame Relay encapsulations, configure a loop detection clear timer for the Link Control Protocol (LCP) component of a PPP session.
<b>Options</b>	<b><i>seconds</i></b> —The time in seconds to wait before the loop detection flag is cleared if it is not cleared by the protocol. <b>Range:</b> 1 through 60 seconds <b>Default:</b> 9 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the PPP Clear Loop Detected Timer on page 194</a></li></ul>

---

## loss-priority

---

<b>Syntax</b>	loss-priority (high   low);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> output-priority-map classifier premium forwarding-class <i>class-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the packet loss priority value.
<b>Options</b>	<b>high</b> —Packet has high loss priority. <b>low</b> —Packet has low loss priority.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Specifying an Output Priority Map</i></li></ul>

## loss-threshold

---

<b>Syntax</b>	<code>loss-threshold <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> <a href="#">continuity-check</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	Specify the number of continuity check messages lost before marking the remote MEP as down. The value can be from 3 to 256 protocol data units (PDUs). The default value is 3 PDUs.
<b>Options</b>	<i>number</i> —The number of continuity check messages that can be lost before the remote MEP is considered down.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Continuity Check Protocol Parameters Overview</i></li><li>• <i>Configuring Continuity Check Protocol Parameters for Fault Detection</i></li></ul>

## low-plp-max-threshold

---

<b>Syntax</b>	<code>low-plp-max-threshold percent;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <a href="#">atm-options linear-red-profiles profile-name</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define the drop profile fill-level for the low PLP CoS VC. When the fill level exceeds the defined percentage, all packets are dropped.
<b>Options</b>	<b>percent</b> —Fill-level percentage when linear RED is applied to cells with PLP.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li> <li>• <a href="#">high-plp-max-threshold on page 640</a></li> <li>• <a href="#">low-plp-threshold on page 760</a></li> <li>• <i>Configuring Linear RED Profiles on ATM Interfaces</i></li> <li>• <i>high-plp-max-threshold</i></li> <li>• <a href="#">queue-depth on page 915</a></li> </ul>

## low-plp-threshold

---

<b>Syntax</b>	<code>low-plp-threshold percent;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <a href="#">atm-options linear-red-profiles profile-name</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define the CoS VC drop profile fill-level percentage when linear RED is applied to cells with low PLP. When the fill level exceeds the defined percentage, packets with low PLP are randomly dropped by RED. This statement is mandatory.
<b>Options</b>	<b>percent</b> —Fill-level percentage when linear RED is applied to cells with low PLP.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li><li>• <a href="#">high-plp-max-threshold on page 640</a></li><li>• <a href="#">high-plp-threshold on page 636</a></li><li>• <i>Configuring Linear RED Profiles on ATM Interfaces</i></li><li>• <i>high-plp-max-threshold</i></li><li>• <i>high-plp-threshold</i></li><li>• <a href="#">low-plp-max-threshold on page 759</a></li><li>• <a href="#">queue-depth on page 915</a></li></ul>

## lowest-priority-defect

<b>Syntax</b>	lowest-priority-defect (all-defects   err-xcon   mac-rem-err-xcon   no-defect   rem-err-xcon   xcon)
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify the lowest priority defect that is allowed to generate a Fault Alarm whenever CFM detects a defect. This configuration is done at the MEP level.
<b>Options</b>	<p>Specify one of the following lowest priority defect options:</p> <p><b>all-defects</b>—Allows all defects.</p> <p><b>err-xcon</b>—Allows only erroneous CCM and cross-connect CCM defects.</p> <p><b>mac-rem-err-xcon</b>—Allows only MAC, not receiving CCM, erroneous CCM, and cross-connect defects.</p> <p><b>no-defect</b>—Allows no defects.</p> <p><b>rem-err-xcon</b>—Allows only not receiving CCM, erroneous CCM, and cross-connect CCM defects.</p> <p><b>xcon</b>—Allows only cross-connect CCM defects.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the Maintenance End Point Lowest Priority Defect</i></li> </ul>

## lsq-failure-options

---

<b>Syntax</b>	lsq-failure-options { no-termination-request; [trigger-link-failure <i>interface-name</i> ]; }
<b>Hierarchy Level</b>	[edit interfaces lsq- <i>fpc/pic/port</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.4.
<b>Description</b>	For AS PIC or MultiServices PIC link services IQ ( <b>lsq</b> ) interfaces only, define the failure recovery option settings.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## mac

---

<b>Syntax</b>	<code>mac mac-address;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces interface-name]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Set the MAC address of the interface.</p> <p>Use this statement at the <b>[edit interfaces ... ps0]</b> hierarchy level to configure the MAC address for a pseudowire logical device that is used for subscriber interfaces over point-to-point MPLS pseudowires.</p>
<b>Options</b>	<p><b>mac-address</b>—MAC address. Specify the MAC address as six hexadecimal bytes in one of the following formats: <i>nnnn.nnnn.nnnn</i> or <i>nn:nn:nn:nn:nn:nn</i>. For example, <b>0000.5e00.5355</b> or <b>00:00:5e:00:53:55</b>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the MAC Address on the Management Ethernet Interface</i></li> <li>• <i>Configuring a Pseudowire Subscriber Logical Interface Device</i></li> </ul>

## mac-address (Accept Source Mac)

---

<b>Syntax</b>	<code>mac-address <i>mac-address</i> <a href="#">policer</a>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">accept-source-mac</a>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i></code> <code>    <a href="#">accept-source-mac</a> ]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), for Gigabit Ethernet DPCs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP, specify a remote MAC address on which to count incoming and outgoing packets.
<b>Options</b>	<b><i>mac-address</i></b> —MAC address. Specify the MAC address as six hexadecimal bytes in one of the following formats: <i>nnnn.nnnn.nnnn</i> or <i>nn:nn:nn:nn:nn:nn</i> . For example, 0011.2233.4455 or 00:11:22:33:44:55.  <b><i>policer</i></b> —MAC policer. For more information, see <a href="#">policer (MAC)</a> .
<b>Required Privilege Level</b>	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring MAC Address Filtering</i></li></ul>

## mac-address (VLAN and Stacked VLAN Interfaces)

---

<b>Syntax</b>	<code>mac-address;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges</a> <a href="#">authentication</a> <a href="#">username-include</a>],</code> <code>[edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges</a> <a href="#">authentication</a></code> <code>    <a href="#">username-include</a>],</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify that the client hardware address (chaddr) from the incoming DHCP discover packet be concatenated with the username during the subscriber authentication process.
<b>Required Privilege Level</b>	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring VLAN Interface Username Information for AAA Authentication</i></li></ul>

## mac-learn-enable

<b>Syntax</b>	mac-learn-enable;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> ] [edit interfaces aex aggregated-ether-options ethernet-switch-profile]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Support for statement under the <b>[edit interfaces aex aggregated-ether-options ethernet-switch-profile]</b> hierarchy introduced in Junos OS Release 15.1.
<b>Description</b>	<p>For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), for Gigabit Ethernet DPCs on MX Series routers, for 100-Gigabit Ethernet Type 5 PIC with CFP, and for MPC3E, MPC4E, MPC5E, MPC5EQ, and MPC6E MPCs, configure dynamic learning of the source and destination MAC addresses. By default, the interface is not allowed to dynamically learn source and destination MAC addresses.</p> <p>To disable dynamic learning of the source and destination MAC addresses after it has been configured, you must delete <b>mac-learn-enable</b> from the configuration.</p> <p>MPCs support MAC address accounting for an individual interface or an aggregated Ethernet interface member link only after the interface has received traffic from the MAC source. If traffic is only exiting an interface, the MAC address is not learned and MAC address accounting does not occur.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring MAC Address Filtering</i></li> <li>• <i>Configuring MAC Address Accounting</i></li> </ul>

## mac-validate

---

<b>Syntax</b>	mac-validate (loose   strict);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>family</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Enable IP and MAC address validation for static Ethernet and IP demux interfaces.
<b>Options</b>	<p><b>loose</b>—Forwards incoming packets when both the IP source address and the MAC source address match one of the trusted address tuples. Drops packets when the IP source address matches one of the trusted tuples, but the MAC address does not match the MAC address of the tuple. Continues to forward incoming packets when the source address of the incoming packet does not match any of the trusted IP addresses.</p> <p><b>strict</b>—Forwards incoming packets when both the IP source address and the MAC source address match one of the trusted address tuples. Drops packets when the MAC address does not match the tuple's MAC source address, or when IP source address of the incoming packet does not match any of the trusted IP addresses.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>MAC Address Validation on Static Ethernet Interfaces Overview</i></li><li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li><li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li></ul>

## maintenance-association

<b>Syntax</b>	<pre> maintenance-association <i>ma-name</i> {   <b>short-name-format</b> (character-string   vlan   2octet   rfc-2685-vpn-id);   protect-maintenance-association <i>protect-ma-name</i>;   remote-maintenance-association <i>remote-ma-name</i>;   <b>continuity-check</b> {     <b>hold-interval</b> <i>minutes</i>;     <b>interval</b> (10m   10s   1m   1s   100ms);     <b>loss-threshold</b> <i>number</i>;   }   <b>mep</b> <i>mep-id</i> {     <b>auto-discovery</b>;     <b>direction</b> (up   down);     <b>interface</b> <i>interface-name</i> (protect   working);     <b>lowest-priority-defect</b> (all-defects   err-xcon   mac-rem-err-xcon   no-defect         rem-err-xcon   xcon );     <b>priority</b> <i>number</i>;     <b>remote-mep</b> <i>mep-id</i> {       <b>action-profile</b> <i>profile-name</i>;       <b>sla-iterator-profile</b> <i>profile-name</i> {         <b>data-tlv-size</b> <i>size</i>;         <b>iteration-count</b> <i>count-value</i>;         <b>priority</b> <i>priority-value</i>;       }     }   } } </pre>
<b>Hierarchy Level</b>	[edit protocols <b>oam ethernet connectivity-fault-management maintenance-domain</b> <i>domain-name</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.4.</p> <p>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.</p>
<b>Description</b>	Configure the name of the maintenance association in IEEE-compliant format.
<b>Options</b>	<p><b>ma-name</b>—The name of the maintenance association within the maintenance domain.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Creating a Maintenance Association</i></li> <li>• <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i></li> </ul>

## maintenance-domain

```
Syntax maintenance-domain domain-name {
    bridge-domain name <vlan-id [ vlan-ids ]>;
    instance vpls-instance-name;
    level number;
    maintenance-association ma-name {
        protect-maintenance-association protect-ma-name;
        remote-maintenance-association remote-ma-name;
        short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
        continuity-check {
            hold-interval minutes;
            interval (10m | 10s | 1m | 1s | 100ms);
            loss-threshold number
        }
        mep mep-id {
            auto-discovery;
            direction (up | down);
            interface interface-name (protect | working);
            lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
                rem-err-xcon | xcon );
            priority number;
            remote-mep mep-id {
                action-profile profile-name;
                sla-iterator-profile profile-name {
                    data-tlv-size size;
                    iteration-count count-value;
                    priority priority-value;
                }
            }
        }
        mip-half-function (none | default | explicit);
        name-format (character-string | none | dns | mac+2oct);
    }
    virtual-switch name {
        bridge-domain name <vlan-id [ vlan-ids ]>;
    }
}
```

**Hierarchy Level** [edit protocols **oam** **ethernet** **connectivity-fault-management**]

**Release Information** Statement introduced in Junos OS Release 8.4.  
Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.  
Support for multiple down MEP introduced in Junos OS Release 15.1R1 for MX Series Routers.

**Description** Configure the name of the maintenance domain in IEEE-compliant format.



**NOTE:** For MX Series Routers, you can configure multiple down MEPs for a single instance of maintenance domain identifier and maintenance

association name to monitor services provided on Virtual Private LAN Service (VPLS), bridge, circuit cross-connect (CCC), and IPv4 domains.

**Options** *domain-name*—Name of the maintenance domain.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Creating a Maintenance Domain*
- *Configuring a MEP to Generate and Respond to CFM Protocol Messages*

## master-only

**Syntax** master-only;

**Hierarchy Level** [edit groups rex interfaces (fxp0 | em0) unit *logical-unit-number* family *family address*],  
[edit groups rex logical-systems *logical-system-name* interfaces fxp0 unit *logical-unit-number* family *family address*],  
[edit interfaces (fxp0 | em0) unit *logical-unit-number* family *family address*],  
[edit logical-systems *logical-system-name* interfaces fxp0 unit *logical-unit-number* family *family address*]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 11.1 for the QFX Series.

**Description** Configure the IP address to be used when the Routing Engine is the current master.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring a Consistent Management IP Address*
- *CLI User Guide*

## maximum-contexts

---

<b>Syntax</b>	<code>maximum-contexts <i>number</i> &lt;force&gt;;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">compression</a> rtp], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">compression</a> rtp]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.5.
<b>Description</b>	Specify the maximum number of RTP contexts to accept during negotiation.
<b>Options</b>	<b><i>number</i></b> —Maximum number of contexts.  <b><i>force</i></b> —(Optional) Requires the PIC to use the value specified for maximum RTP contexts, regardless of the negotiated value. This option allows the software to interoperate with Junos OS Releases that base the RTP context value on link speed.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## maximum-requests

---

<b>Syntax</b>	maximum-requests <i>times</i> ;
<b>Hierarchy Level</b>	[edit protocols dot1x authenticator interface <i>interface-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Specify the maximum number of retransmission times of an EAPOL Request packet to the client before it times out the authentication session.
<b>Options</b>	<p><b>times</b>—Specify the maximum number of retransmission times.</p> <p><b>Range:</b> 1 through 10 times</p> <p><b>Default:</b> 2 times</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li> <li>• <a href="#">authenticator on page 448</a></li> <li>• <a href="#">dot1x on page 543</a></li> <li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li> </ul>

## maximum-vcs

---

<b>Syntax</b>	<code>maximum-vcs <i>maximum-vcs</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <b>atm-options</b> <b>vpi</b> <i>vpi-identifier</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For ATM1 interfaces, configure the maximum number of virtual circuits (VCs) allowed on a virtual path (VP). When configuring ATM1 interfaces on the router, you must include this statement.</p> <p>For a configured virtual path identifier (VPI), valid virtual channel identifier (VCI) numbers are from 0 through (<i>maximum-vcs</i> value – 1). VCI numbers 0 through 31 are reserved by the ATM Forum. It is recommended that you use a VCI number higher than 31 when connecting to an ATM switch.</p>
<b>Options</b>	<p><i>maximum-vcs</i>—Maximum number of VCs on the VP.</p> <p><b>Range:</b> 1 through 4090</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the Maximum Number of ATM1 VCs on a VP</i></li><li>• <a href="#">multipoint-destination on page 795</a></li><li>• <a href="#">promiscuous-mode on page 906</a></li><li>• <a href="#">vci on page 1077</a></li></ul>

## mc-ae

<b>Syntax</b>	<pre> mc-ae {   chassis-id <i>chassis-id</i>;   events {     iccp-peer-down;     force-icl-down;     prefer-status-control-active;   }   init-delay-time <i>seconds</i>;   mc-ae-id <i>mc-ae-id</i>;   mode (active-active   active-standby);   redundancy-group <i>group-id</i>;   revert-time <i>revert-time</i>;   status-control (active   standby);   switchover-mode (non-revertive   revertive); } </pre>
<b>Hierarchy Level</b>	<p>[edit interfaces aeX aggregated-ether-options],  [edit logical-systems <i>logical-system-name</i> interfaces aeX aggregated-ether-options]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 9.6 for MX Series routers.</p> <p><b>events</b> statement introduced in Junos OS Release 11.4R4 for MX Series routers.</p> <p>Statement introduced in Junos OS Release 12.2 for the QFX Series. Only the <b>chassis-id</b>, <b>mc-ae-id</b>, <b>mode active-active</b>, and <b>status-control (active   standby)</b> options are supported on QFX Series devices.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p><b>prefer-status-control-active</b> statement introduced in Junos OS Release 13.2R1 for EX Series switches.</p> <p><b>init-delay-time <i>seconds</i></b> statement introduced in Junos OS Release 13.2R3 for EX Series switches.</p> <p><b>switchover-mode</b> and <b>revert-time</b> statements introduced in Junos OS Release 13.3.</p> <p>Support for logical systems introduced in Junos OS Release 14.1.</p>
<b>Description</b>	<p>Enable multichassis link aggregation groups (MC-LAG), which enables one device to form a logical LAG interface with two or more other devices.</p>
<b>Options</b>	<p><b>chassis-id</b>—Specify the chassis ID for Link Aggregation Control Protocol (LACP) to calculate the port number of MC-LAG physical member links.</p> <p><b>Values:</b> 0 or 1</p> <p><b>events</b>—Specify an action if a specific MC-LAG event occurs.</p> <p><b>iccp-peer-down</b>—Specify an action if the ICCP peer of this node goes down.</p> <p><b>force-icl-down</b>—If the node's ICCP peer goes down, bring down the interchassis-link logical interface.</p>

**prefer-status-control-active**—Specify that the node configured as **status-control active** become the active node if the peer of this node goes down.

When ICCP goes down, you can use this keyword to make a mc-lag PE to become the active PE. For example, if you want mc-lag PE1 to be Active on ICCP down, then configure this keyword in PE1. It is not recommended to configure this keyword in both the mc-lag PEs.



**NOTE:** The **prefer-status-control-active** statement can be configured with the **status-control standby** configuration to prevent the LACP MC-LAG system ID from reverting to the default LACP system ID on ICCP failure. Use this configuration only if you can ensure that ICCP will not go down unless the router or switch is down. You must also configure the hold-time down value (at the [edit interfaces *interface-name*] hierarchy level) for the interchassis link with the **status-control standby** configuration to be higher than the ICCP BFD timeout. This configuration prevents data traffic loss by ensuring that when the router or switch with the **status-control active** configuration goes down, the router or switch with the **status-control standby** configuration does not go into standby mode.

To make the **prefer-status-control-active** configuration work with the **status-control standby** configuration when an interchassis-link logical interface is configured on aggregate Ethernet interface, you must either configure the **lacp periodic interval** statement at the [edit interface *interface-name* aggregated-ether-options] hierarchy level as **slow** or configure the **detection-time threshold** statement at the [edit protocols iccp peer liveness-detection] hierarchy level as less than 3 seconds.

**init-delay-time seconds**—To minimize traffic loss, specify the number of seconds in which to delay bringing the multichassis aggregated Ethernet interface back to the up state when you reboot an MC-LAG peer.

**mc-ae-id mc-ae-id**—Specify the identification number of the MC-LAG device. The two MC-LAG network devices that manage a given MC-LAG must have the same identification number.

**Range:** 1 through 65,535

**mode (active-active | active-standby)**—Specify whether the MC-LAG is in active-active or active-standby mode.



**NOTE:** You can configure IPv4 (inet) and IPv6 (inet6) addresses on mc-ae interfaces when the active-standby mode is configured.

**redundancy-group *group-id***—Specify the redundancy group identification number. The Inter-Chassis Control Protocol (ICCP) uses the redundancy group ID to associate multiple chassis that perform similar redundancy functions.

**Range:** 1 through 4,294,967,294

**revert-time**—Wait interval (in minutes) before the switchover to the preferred node is performed when the **switchover-mode** is configured as revertive.

**Range:** 1 through 10

**status-control (active | standby)**—Specify whether the chassis becomes active or remains in standby mode when an interchassis link failure occurs.

**switchover-mode (non-revertive | revertive)**—Specify whether Junos OS should trigger a link switchover to the preferred node when the active node is available.



**NOTE:** For revertive mode to automatically switch over to the preferred node, the **status-control** statement should be configured as active.

**init-delay-time *seconds***—To minimize traffic loss, specify the number of seconds by which to delay bringing the multichassis aggregated Ethernet (mc-ae) interface back to the up state when you reboot an MC-LAG peer.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration.
	interface-control—To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Active-Active Bridging and VRRP over IRB Functionality Overview</i></li> <li>• <i>Configuring Multichassis Link Aggregation on MX Series Routers</i></li> <li>• <i>Configuring Multichassis Link Aggregation on EX Series Switches</i></li> <li>• <i>Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers and QFX Series Switches</i></li> <li>• <i>Example: Configuring Multichassis Link Aggregation in Active-Active Mode</i></li> <li>• <i>Configuring Manual and Automatic Link Switchover for MC-LAG Interfaces on MX Series Routers</i></li> </ul>
------------------------------	---

## member-interface-speed

---

<b>Syntax</b>	<code>member-interface-speed <i>speed</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces container-options <a href="#">member-interface-type</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2.
<b>Description</b>	Specify container-interface member-interface speed options.
<b>Options</b>	<b><i>speed</i></b> —Set interface speed to OC3, OC12, OC48, OC192, OC768, or mixed.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i></li><li>• <i>Configuring Container Interfaces for APS on SONET Links</i></li><li>• <a href="#">container-options on page 499</a></li></ul>

## member-interface-type

---

<b>Syntax</b>	<code>member-interface-type sonet {     <a href="#">member-interface-speed</a> [ <i>speed</i> ]; }</code>
<b>Hierarchy Level</b>	[edit interfaces <a href="#">container-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2.
<b>Description</b>	Specify container-interface member-interface type as sonet and speed options.
<b>Options</b>	<b><i>sonet</i></b> —Protocol type of the container interface, specify sonet. <b><i>speed</i></b> —Set interface speed to OC3, OC12, OC48, OC192, OC768, or mixed.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Displaying APS Using a Container Interface with ATM Encapsulation</i></li><li>• <i>Configuring Container Interfaces for APS on SONET Links</i></li><li>• <a href="#">container-options on page 499</a></li></ul>

## mep

<b>Syntax</b>	<pre> mep mep-id {   action-profile action-profile-name   auto-discovery;   direction (up   down);   interface interface-name (protect   working);   priority number;   remote-mep mep-id {     action-profile profile-name;     sla-iterator-profile profile-name {       data-tlv-size size;       iteration-count count-value;       priority priority-value;     }   } } </pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management maintenance-domain md-name</a> <a href="#">maintenance-association ma-name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	The numeric identifier of the maintenance association end point (MEP) within the maintenance association.
<b>Options</b>	<p><b>mep mep-id</b>—Specify the numeric identifier of the MEP.</p> <p><b>Range:</b> 1 through 8191</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Alarm Indication Signal (ETH-AIS) Function Overview</i></li> <li>• <i>Configuring ETH-AIS on a CFM MEP</i></li> <li>• <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i></li> </ul>

## minimum-links

---

<b>Syntax</b> (SRX, MX, T, M, EX, QFX Series, EX4600, Qfabric System)	<code>minimum-links</code> <i>number</i> ;
<b>Hierarchy Level</b> (EX Series)	[edit interfaces <i>aex</i> <a href="#">aggregated-ether-options</a> ], [edit interfaces <i>aex</i> <a href="#">aggregated-sonet-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">mlfr-uni-nni-bundle-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">unit logical-unit-number</a> ], [edit interfaces <i>interface-range range</i> <a href="#">aggregated-ether-options</a> ], [edit interfaces <i>interface-range range</i> <a href="#">aggregated-sonet-options</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit logical-unit-number</a> ]
<b>Hierarchy Level</b> (QFX Series)	[edit interfaces <i>aex</i> <a href="#">aggregated-ether-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	For aggregated Ethernet, SONET/SDH, multilink, link services, and voice services interfaces only, set the minimum number of links that must be up for the bundle to be labeled up.
<b>Options</b>	<p><i>number</i>—Number of links.</p> <p><b>Range:</b> On M120, M320, MX Series, T Series, and TX Matrix routers with Ethernet interfaces, the valid range for minimum-links number is 1 through 64. When the maximum value (16) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On all other routers and on EX Series switches, other than EX8200 switches, the range of valid values for minimum-links number is 1 through 8. When the maximum value (8) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On EX8200 switches, the range of valid values for minimum-links number is 1 through 12. When the maximum value (12) is specified, all configured links of a bundle must be up for the bundle to be labeled up. On EX4600, QFX Series and Q Fabric Systems, the range of valid values for minimum-links number is 1 through 8. When the maximum value (8) is specified, all configured links of a bundle must be up for the bundle to be labeled up.</p> <p><b>Default:</b> 1</p>
<b>Required Privilege Level</b>	<i>interface</i> —To view this statement in the configuration. <i>interface-control</i> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Aggregated Ethernet Minimum Links</i></li><li>• <i>Configuring Aggregated SONET/SDH Interfaces</i></li><li>• <i>Configuring Aggregated Ethernet Links (CLI Procedure)</i></li></ul>

- *Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch*
- *Junos OS Services Interfaces Library for Routing Devices*
- *Configuring Link Aggregation*

## mip-half-function

<b>Syntax</b>	mip-half-function (none   default   explicit);
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-managementmaintenance-domain md-name</a> ], [edit protocols <a href="#">oam ethernet connectivity-fault-managementmaintenance-association ma-name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Specify the OAM Ethernet CFM maintenance domain MIP half functions.



**NOTE:** Whenever a MIP is configured and a bridge domain is mapped to multiple maintenance domains or maintenance associations, it is essential that the `mip-half-function` value for all maintenance domains and maintenance associations are the same.

<b>Options</b>	<p><b>none</b>—Specify to not use the mip-half-function.</p> <p><b>default</b>—Specify to use the default mip-half-function.</p> <p><b>explicit</b>—Specify an explicit mip-half-function.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Creating a Maintenance Domain</i></li> <li>• <a href="#">maintenance-domain on page 768</a></li> </ul>

## mlfr-uni-nni-bundle-options

---

**Syntax**    mlfr-uni-nni-bundle-options {  
              [acknowledge-retries](#) *number*;  
              [acknowledge-timer](#) *milliseconds*;  
              [action-red-differential-delay](#) (disable-tx | remove-link);  
              [drop-timeout](#) *milliseconds*;  
              [fragment-threshold](#) *bytes*;  
              [hello-timer](#) *milliseconds*;  
              [link-layer-overhead](#) *percent*;  
              [lmi-type](#) (ansi | itu | c-lmi);  
              [minimum-links](#) *number*;  
              [mrru](#) *bytes*;  
              [n391](#) *number*;  
              [n392](#) *number*;  
              [n393](#) *number*;  
              [red-differential-delay](#) *milliseconds*;  
              [t391](#) *seconds*;  
              [t392](#) *number*;  
              [yellow-differential-delay](#) *milliseconds*;  
              }

**Hierarchy Level**    [edit interfaces *interface-name*]

**Release Information**    Statement introduced before Junos OS Release 7.4.

**Description**    Configure link services and voice services interface management properties.  
  
The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Frame Relay Keepalives*
- [lmi \(Frame Relay\) on page 738](#)
- [lmi-type on page 741](#)
- *Junos OS Services Interfaces Library for Routing Devices*

---

## mode (Dynamic Profiles)

---

<b>Syntax</b>	mode loose;
<b>Hierarchy Level</b>	[edit dynamic-profiles <i>profile-name</i> <b>interfaces</b> <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> (inet) <b>rpf-check</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Check whether the packet has a source address with a corresponding prefix in the routing table. If a corresponding prefix is not found, unicast reverse path forwarding (RPF) loose mode does not accept the packet. Unlike strict mode, loose mode does not check whether the interface expects to receive a packet with a specific source address prefix.
<b>Default</b>	If you do not include this statement, unicast RPF is in strict mode.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Unicast RPF Strict Mode on page 244</a></li></ul>

## mode (Interfaces)

---

<b>Syntax</b>	mode loose;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family (inet   inet6) <b>rpf-check</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family (inet   inet6) <b>rpf-check</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 15.1F6 for PTX Series routers with third-generations FPCs installed.
<b>Description</b>	Check whether the packet has a source address with a corresponding prefix in the routing table. If a corresponding prefix is not found, unicast reverse path forwarding (RPF) loose mode does not accept the packet. Unlike strict mode, loose mode does not check whether the interface expects to receive a packet with a specific source address prefix.
<b>Default</b>	If you do not include this statement, unicast RPF is in strict mode.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Unicast RPF Strict Mode on page 244</a></li></ul>

## modem-options

---

<b>Syntax</b>	modem-options { <b>dialin</b> (console   routable); <b>init-command-string</b> <i>initialization-command-string</i> ; }
<b>Hierarchy Level</b>	[edit interfaces umd0]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	For J Series Services Routers, configure a USB port to act as a USB modem.  The remaining statement is explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Specifying a USB Modem Interface on J Series Routers on page 350</a></li></ul>

---

## monitor-session

---

<b>Syntax</b>	<code>monitor-session (<i>interface-name</i>   all);</code>
<b>Hierarchy Level</b>	[edit protocols ppp]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.5.
<b>Description</b>	Monitor PPP packet exchanges. When monitoring is enabled, packets exchanged during a session are logged to the default log of <code>/var/log/pppd</code> .
<b>Default</b>	If you do not include this statement, no PPPD-specific monitoring operations are performed.
<b>Options</b>	<code>all</code> —Monitor PPP packet exchanges on all sessions.  <code><i>interface-name</i></code> —Logical interface name on which to enable session monitoring.
<b>Required Privilege Level</b>	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Monitoring a PPP Session on page 152</a></li></ul>

## mpls (Interfaces)

---

<b>Syntax</b>	<pre>mpls {     pop-all-labels {         required-depth <i>number</i>;     } }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> atm-options], [edit interfaces <i>interface-name</i> sonet-options], [edit interfaces <i>interface-name</i> fastether-options], [edit interfaces <i>interface-name</i> gigether-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For passive monitoring on ATM and SONET/SDH interfaces and 10-Gigabit Ethernet interfaces in WAN PHY mode, process incoming IP packets that have MPLS labels.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Removing MPLS Labels from Incoming Packets</i></li><li>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## mrru

<b>Syntax</b>	<code>mrru bytes;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">mlfr-uni-nni-bundle-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For multilink, link services, voice services, and J Series Services Routers ISDN interfaces only, set the maximum received reconstructed unit (MRRU). The MRRU is similar to the MTU, but is specific to multilink interfaces.
<b>Options</b>	<b>bytes</b> —MRRU size. <b>Range:</b> 1500 through 4500 bytes <b>Default:</b> 1500 bytes
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">mtu on page 786</a></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## mtu

**Syntax** `mtu bytes;`

**Hierarchy Level**

```
[edit interfaces interface-name],
[edit interfaces interface-name unit logical-unit-number family family],
[edit interfaces interface-range name],
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number
family family],
[edit logical-systems logical-system-name protocols l2circuit local-switching interface
interface-name backup-neighbor address],
[edit logical-systems logical-system-name protocols l2circuit neighbor address interface
interface-name],
[edit logical-systems logical-system-name protocols l2circuit neighbor address interface
interface-name backup-neighbor address],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols
l2vpn interface interface-name],
[edit logical-systems logical-system-name routing-instances routing-instance-name protocols
vpls],
[edit protocols l2circuit local-switching interface interface-name backup-neighbor address],
[edit protocols l2circuit neighbor address interface interface-name],
[edit protocols l2circuit neighbor address interface interface-name backup-neighbor address],
[edit routing-instances routing-instance-name protocols l2vpn interface interface-name],
[edit routing-instances routing-instance-name protocols vpls],
[edit logical-systems name protocols ospf area name interface ],
[edit logical-systems name routing-instances name protocols ospf area name interface],
[edit protocols ospf area name interface ],
[edit routing-instances name protocols ospf area name interface]
```

**Release Information**

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Support for Layer 2 VPNs and VPLS introduced in Junos OS Release 10.4.

Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.

Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.

Support at the `[set interfaces interface-name unit logical-unit-number family ccc]` hierarchy level introduced in Junos OS Release 12.3R3 for MX Series routers.

Statement introduced in Junos OS 17.3R1 Release for MX Series Routers.

**Description** Specify the maximum transmission unit (MTU) size for the media or protocol. The default MTU size depends on the device type. Changing the media MTU or protocol MTU causes an interface to be deleted and added again.

To route jumbo data packets on an integrated routing and bridging (IRB) interface or routed VLAN interface (RVI) on EX Series switches, you must configure the jumbo MTU size on the member physical interfaces of the VLAN that you have associated with the IRB interface or RVI, as well as on the IRB interface or RVI itself (the interface named `irb` or `vlan`, respectively).



.....

**CAUTION:** For EX Series switches, setting or deleting the jumbo MTU size on an IRB interface or RVI while the switch is transmitting packets might cause packets to be dropped.

.....



.....

**NOTE:**

The MTU for an IRB interface is calculated by removing the Ethernet header overhead  $[6(\text{DMAC}) + 6(\text{SMAC}) + 2(\text{EtherType})]$ . Because, the MTU is the lower value of the MTU configured on the IRB interface and the MTU configured on the IRB's associated bridge domain IFDs or IFLs, the IRB MTU is calculated as follows:

- In case of Layer 2 IFL configured with the `flexible-vlan-tagging` statement, the IRB MTU is calculated by including 8 bytes overhead (SVLAN+CVLAN).
  - In case of Layer 2 IFL configured with the `vlan-tagging` statement, the IRB MTU is calculated by including a single VLAN 4 bytes overhead.
- .....



---

**NOTE:**

- If a packet whose size is larger than the configured MTU size is received on the receiving interface, the packet is eventually dropped. The value considered for MRU (maximum receive unit) size is also the same as the MTU size configured on that interface.
- Not all devices allow you to set an MTU value, and some devices have restrictions on the range of allowable MTU values. You cannot configure an MTU for management Ethernet interfaces (fxp0, em0, or me0) or for loopback, multilink, and multicast tunnel devices.
- On ACX Series routers, you can configure the protocol MTU by including the `mtu` statement at the [edit interfaces *interface-name* unit *logical-unit-number* family inet] or [edit interfaces *interface-name* unit *logical-unit-number* family inet6] hierarchy level.
  - If you configure the protocol MTU at any of these hierarchy levels, the configured value is applied to all families that are configured on the logical interface.
  - If you are configuring the protocol MTU for both inet and inet6 families on the same logical interface, you must configure the same value for both the families. It is not recommended to configure different MTU size values for inet and inet6 families that are configured on the same logical interface.
- Starting in Release 14.2, MTU for IRB interfaces is calculated by removing the Ethernet header overhead (6(DMAC)+6(SMAC)+2(EtherType)), and the MTU is a minimum of the two values:
  - Configured MTU
  - Associated bridge domain's physical or logical interface MTU
    - For Layer 2 logical interfaces configured with flexible-vlan-tagging, IRB MTU is calculated by including 8 bytes overhead (SVLAN+CVLAN).
    - For Layer 2 logical interfaces configured with vlan-tagging, IRB MTU is calculated by including single VLAN 4 bytes overhead.



---

**NOTE:** Changing the Layer 2 logical interface option from vlan-tagging to flexible-vlan-tagging or vice versa adjusts the logical interface MTU by 4 bytes with the existing MTU size. As a result, the Layer 2 logical interface is deleted and re-added, and the IRB MTU is re-computed appropriately.

---

For more information about configuring MTU for specific interfaces and router or switch combinations, see [“Configuring the Media MTU” on page 115](#).

**Options** *bytes*—MTU size.

**Range:** 256 through 9192 bytes, 256 through 9216 (EX Series switch interfaces), 256 through 9500 bytes (Junos OS 12.1X48R2 for PTX Series routers), 256 through 9500 bytes (Junos OS 16.1R1 for MX Series routers)



**NOTE:** Starting in Junos OS Release 16.1R1, the MTU size for a media or protocol is increased from 9192 to 9500 for Ethernet interfaces on the following MX Series MPCs:

- MPC1
- MPC2
- MPC2E
- MPC3E
- MPC4E
- MPC5E
- MPC6E

**Default:** 1500 bytes (INET, INET6, and ISO families), 1448 bytes (MPLS), 1514 bytes (EX Series switch interfaces)

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the Media MTU on page 115](#)
- [Configuring the MTU for Layer 2 Interfaces](#)
- [Setting the Protocol MTU on page 224](#)

## multi-chassis-protection

---

**Syntax**    multi-chassis-protection {  
              peer *a.b.c.d* {  
                  interface *interface-name*;  
              }  
          }

**Hierarchy Level**    [edit interfaces *interface-name*]

**Release Information**    Statement introduced in Junos OS Release 11.1.

**Description**    For MX Series routers with multichassis aggregated Ethernet (MC-AE) interfaces, you can use this statement under the physical interface level to reduce the configuration at the logical interface level if the following assumption exists:

If there are  $n + 1$  logical interfaces under **ae0**, from **ae0.0** through **ae0.n**, there will be  $n + 1$  logical interfaces under **ge-0/0/0** as well, from **ge-0/0/0.0** through **ge-0/0/0.n**, and each **ge-0/0/0** logical interface will be a protection link for the **ae0** logical interface.



**NOTE:** A bridge domain cannot have MC-AE logical interfaces which belong to different redundancy groups.

---

If the Inter-Chassis Control Protocol (ICCP) connection is UP and the interchassis data link (ICL) comes UP, the router configured as standby will bring up the MC-AE interfaces shared with the peer.

The remaining statements are explained separately. See [CLI Explorer](#).

**Options**    interface *interface-name*—Specify the interface: interface *interface-name-fpc/pic/port*

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Multichassis Link Aggregation on MX Series Routers](#)
- [Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers and QFX Series Switches](#)
- [Configuring Aggregated Ethernet Link Protection](#)
- [Example: Configuring Aggregated Ethernet Link Protection](#)
- [peer on page 865](#)

## multicast-dlci

---

<b>Syntax</b>	<code>multicast-dlci <i>dlci-identifier</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For point-to-multipoint Frame Relay, link services, and voice services interfaces only, enable multicast support on the interface. You can configure multicast support on the interface if the Frame Relay switch performs multicast replication.
<b>Options</b>	<i>dlci-identifier</i> —DLCI identifier, a number from 16 through 1022 that defines the Frame Relay DLCI over which the switch expects to receive multicast packets for replication.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring a Multicast-Capable Frame Relay Connection</i></li> <li>• <a href="#">dlci on page 540</a></li> <li>• <a href="#">multipoint-destination on page 795</a></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## multicast-only

---

<b>Syntax</b>	multicast-only;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the unit and family so that it can transmit and receive multicast traffic only. You can configure this property on the IP family only.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Protocol Family on page 206</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">tunnel on page 1052</a></li></ul>

## multicast-statistics

---

<b>Syntax</b>	multicast-statistics;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 10.2.
<b>Description</b>	For Ethernet, SONET, aggregated Ethernet, and aggregated SONET interfaces in T Series or TX Matrix routers, specify support for multicast statistics on a physical interface to enable multicast accounting for all the logical interfaces below the physical interface.
<b>Default</b>	not enabled—must be configured to enable
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Multicast Statistics Collection on Aggregated Ethernet Interfaces</i></li><li>• <i>Configuring Multicast Statistics Collection on Aggregated SONET Interfaces</i></li><li>• <i>Configuring Multicast Statistics Collection on Ethernet Interfaces</i></li><li>• <i>Configuring Multicast Statistics Collection on SONET Interfaces</i></li></ul>

## multicast-vci

---

<b>Syntax</b>	<code>multicast-vci vpi-identifier.vci-identifier;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM encapsulation only, and for point-to-multipoint ATM logical interfaces only, enable the support of multicast on the interface. You can configure multicast support on the interface if the ATM switch performs multicast replication.
<b>Options</b>	<p><b>vci-identifier</b>—ATM virtual circuit identifier.</p> <p><b>Range:</b> 0 through 16,384</p> <p><b>vpi-identifier</b>—ATM virtual path identifier.</p> <p><b>Range:</b> 0 through 255</p> <p><b>Default:</b> 0</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring a Multicast-Capable ATM1 or ATM2 IQ Connection</a></li> <li>• <a href="#">multipoint-destination on page 795</a></li> <li>• <a href="#">vci on page 1077</a></li> </ul>

## multilink-max-classes

---

<b>Syntax</b>	<code>multilink-max-classes <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For Adaptive Services (AS) PIC link services IQ interfaces ( <b>lsq</b> ) only, configure the number of multilink classes to be negotiated when a link joins the bundle.
<b>Options</b>	<b><i>number</i></b> —The number of multilink classes to be negotiated when a link joins the bundle. <b>Range:</b> 1 through 8 <b>Default:</b> None
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">multipoint on page 794</a></li></ul>

## multipoint

---

<b>Syntax</b>	<code>multipoint;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the interface unit as a multipoint connection.
<b>Default</b>	If you omit this statement, the interface unit is configured as a point-to-point connection.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring a Multipoint Connection on page 193</a></li><li>• <a href="#">point-to-point on page 874</a></li></ul>

## multipoint-destination

<b>Syntax</b>	<pre> multipoint-destination address dlcidlcid-identifier; multipoint-destination address {     epd-threshold cells;     inverse-arp;     oam-liveness {         down-count cells;         up-count cells;     }     oam-period (disable   seconds);     shaping {         (cbr rate   rtvbr peak rate sustained rate burst length   vbr peak rate sustained rate burst         length);         queue-length number;     }     vci vpi-identifier.vci-identifier; } </pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For point-to-multipoint Frame Relay or ATM interfaces only, enable the support of multicast on the interface. You can configure multicast support on the interface if the Frame Relay or ATM switch performs multicast replication.
<b>Options</b>	<p><b>address</b>—Address of the remote side of the point-to-multipoint connection.</p> <p><b>dlcid-identifier</b>—For Frame Relay interfaces, the data-link connection identifier. <b>Range:</b> 0 through 0xFFFFFFFF (24 bits)</p> <p><b>vci-identifier</b>—For ATM interfaces, the virtual circuit identifier. <b>Range:</b> 0 through 16,384</p> <p><b>vpi-identifier</b>—For ATM interfaces, the virtual path identifier. <b>Range:</b> 0 through 255 <b>Default:</b> 0</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring a Point-to-Point ATM1 or ATM2 IQ Connection</li> <li>Configuring a Point-to-Multipoint Frame Relay Connection</li> </ul>

- [dlci on page 540](#)
- [encapsulation \(Logical Interface\) on page 573](#)

## [multiservice-options](#)

---

**Syntax** multiservice-options {  
    ([syslog](#) | [no-syslog](#));  
    ([core-dump](#) | [no-core-dump](#));  
    ([dump-on-flow-control](#));  
    [flow-control-options](#) {  
        down-on-flow-control;  
        dump-on-flow-control;  
        reset-on-flow-control;  
    }  
}

**Hierarchy Level** [edit interfaces *mo-fpc/pic/port*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For monitoring services interfaces only, configure multiservice-specific interface properties.  
  
The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Multiservice Physical Interface Properties on page 170](#)
- *Junos OS Services Interfaces Library for Routing Devices*
- [passive-monitor-mode on page 858](#)

---

## n391

---

<b>Syntax</b>	n391 <i>number</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voice services interfaces only, set the Frame Relay full status polling interval.
<b>Options</b>	<i>number</i> —Polling interval. <b>Range:</b> 1 through 255 <b>Default:</b> 6
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">n392 on page 798</a></li><li>• <a href="#">n393 on page 799</a></li><li>• <a href="#">timeslots on page 1017</a></li><li>• <a href="#">t392 on page 1007</a></li></ul>

## n392

---

<b>Syntax</b>	n392 <i>number</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voices interfaces only, set the Frame Relay error threshold, in number of errors.
<b>Options</b>	<i>number</i> —Error threshold. <b>Range:</b> 1 through 10 <b>Default:</b> 3
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">n391 on page 797</a></li><li>• <a href="#">n393 on page 799</a></li><li>• <a href="#">timeslots on page 1017</a></li><li>• <a href="#">t392 on page 1007</a></li></ul>

---

## n393

---

<b>Syntax</b>	n393 <i>number</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voices interfaces only, set the Frame Relay monitored event count.
<b>Options</b>	<i>number</i> —Number of event count. <b>Range:</b> 1 through 10 <b>Default:</b> 4
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">n391 on page 797</a></li><li>• <a href="#">n392 on page 798</a></li><li>• <a href="#">timeslots on page 1017</a></li><li>• <a href="#">t392 on page 1007</a></li></ul>

## name-format

---

<b>Syntax</b>	name-format (character-string   none   dns   mac+2oct);
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management <b>maintenance-domain</b> domain-name]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	Specify the format of the maintenance domain name.
<b>Options</b>	<b>character-string</b> —The name is an ASCII character string. <b>none</b> —The maintenance domain name is not used. <b>dns</b> —The name is in domain name service (DNS) format. For example: www.juniper.net. <b>mac+2oct</b> —Name is the MAC address plus a two-octet maintenance association identifier. For example: 08:00:22:33:44:55.100. <b>Default:</b> character-string
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Creating a Maintenance Association</i></li><li>• <i>Creating a Maintenance Domain</i></li></ul>

## native-vlan-id

<b>Syntax</b>	<code>native-vlan-id <i>vlan-id</i>;</code>
<b>Hierarchy Level (QFX Series and EX4600)</b>	<p>For platforms without ELS:</p> <p>[edit interfaces (QFX Series) <i>interface-name</i> unit 0 family ethernet-switching]</p> <p>For platforms with ELS:</p> <p>[edit interfaces (QFX Series) <i>interface-name</i>]</p>
<b>Hierarchy Level (ACX Series, EX Series, SRX Series, M Series, MX Series, and T Series)</b>	<p>[edit interfaces <i>ge-fpc/pic/port</i>],</p> <p>[edit interfaces <i>interface-name</i>]</p>
<b>Hierarchy Level (SRX Series)</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.3.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.5 for SRX Series.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.</p>
<b>Description</b>	<p>Configure the VLAN identifier to associate with untagged packets received on the physical interface of a trunk mode interface for the following:</p> <ul style="list-style-type: none"> <li>• QFX Series and EX4600</li> <li>• M Series routers with Gigabit Ethernet IQ PICs with SFP and Gigabit Ethernet IQ2 PICs with SFP configured for 802.1Q flexible VLAN tagging</li> <li>• MX Series routers with Gigabit Ethernet DPCs and MICs, Tri-Rate Ethernet DPCs and MICs, and 10-Gigabit Ethernet DPCs and MICs and MPCs configured for 802.1Q flexible VLAN tagging</li> <li>• T4000 routers with 100-Gigabit Ethernet Type 5 PIC with CFP</li> <li>• EX Series switches with Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces</li> </ul> <p>The logical interface on which untagged packets are received must be configured with the same VLAN ID as the native VLAN ID configured on the physical interface, otherwise the untagged packets are dropped. To configure the logical interface, include the <b>vlan-id</b> statement (matching the <b>native-vlan-id</b> statement on the physical interface) at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>] hierarchy level.</p>

When the **native-vlan-id** statement is included with the **flexible-vlan-tagging** statement, untagged packets are accepted on the same mixed VLAN-tagged port and on the interfaces that are configured for Q-in-Q tunneling.

When the **native-vlan-id** statement is combined with the *interface-mode* statement, untagged packets are accepted and forwarded within the bridge domain or VLAN that is configured with the matching VLAN ID.

To configure the logical interface, include the **vlan-id** statement (matching the **native-vlan-id** statement on the physical interface) at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.



**NOTE:** Starting in Junos OS Release 17.1R1, you can send untagged traffic without a native VLAN ID to the remote end of the network. To do this, remove the native VLAN ID from the untagged traffic configuration by setting the **no-native-vlan-insert** statement. If you do not configure this statement, the native VLAN ID is added to the untagged traffic.

- Default** By default, the untagged packets are dropped. That is, if you do not configure the **native-vlan-id** option, the untagged packets are dropped.
- Options** **vlan-id**—Numeric identifier of the VLAN.  
**Range:** 1 through 4094
- number**—VLAN ID number.  
**Range:** (ACX Series routers, SRX Series devices and EX Series switches) 0 through 4094.
- Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.  
interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Gigabit Ethernet Interfaces (CLI Procedure)</i></li> <li>• <i>Configuring Gigabit Ethernet Interfaces (J-Web Procedure)</i></li> <li>• <i>Understanding Bridging and VLANs on Switches</i></li> <li>• <i>Enabling VLAN Tagging</i></li> <li>• <i>Configuring Access Mode on a Logical Interface</i></li> <li>• <i>Configuring the Native VLAN Identifier on Switches With ELS Support (CLI Procedure)</i></li> <li>• <i>Understanding Interfaces</i></li> <li>• <i>Understanding Q-in-Q Tunneling and VLAN Translation</i></li> <li>• <i>no-native-vlan-insert</i></li> <li>• <i>Sending Untagged Traffic Without VLAN ID to Remote End</i></li> <li>• <i>show ethernet-switching interfaces</i></li> <li>• <i>show vlans</i></li> <li>• <a href="#">flexible-vlan-tagging on page 618</a></li> <li>• <i>Junos OS Network Interfaces Configuration Guide</i></li> </ul>
------------------------------	---

## ncp-max-conf-req


<b>Syntax</b>	<code>ncp-max-conf-req <i>number</i></code>
<b>Hierarchy Level</b>	[edit interfaces <i>so-fpc/pic/port</i> <b>unit</b> <i>number</i> <b>ppp-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Set the maximum number of NCP Configure-Requests to be sent, after which the router goes to NCP down state.
<b>Options</b>	<p><b><i>number</i></b>—Ranges from 0 to 65535, where 0 means send infinite NCP Configure-Requests and any other value specifies the maximum number NCP Configure-Requests to send and then stop sending.</p> <p><b>Default</b>—254</p> <p><b>Range:</b> 0 through 65,535</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the NCP Configure-Request Maximum Sent on page 195</a></li> <li>• <a href="#">ppp-options on page 892</a></li> </ul>

## ncp-restart-timer

---

<b>Syntax</b>	<code>ncp-restart-timer <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">ppp-options</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">ppp-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1.
<b>Description</b>	For interfaces with PPP and PPP TCC encapsulations and on multilink PPP bundle interfaces, configure a restart timer for the Network Control Protocol (NCP) component of a PPP session.
<b>Options</b>	<b><i>milliseconds</i></b> —The time in milliseconds between successive NCP configuration requests. <b>Range:</b> 500 through 10,000 milliseconds <b>Default:</b> 3 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the PPP Restart Timers on page 193</a></li></ul>

## nd6-stale-time

<b>Syntax</b>	<code>nd6-stale-time <i>seconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet6]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1. Statement introduced in Junos OS Release 11.1 for EX Series switches.
<b>Description</b>	Set the stale timer for IPv6 neighbor reachability confirmation. Reachability of the IPv6 neighbors is confirmed only after the stale timer has expired. For example, by setting the stale timer to 180 seconds, users can specify that IPv6 neighbor reachability be confirmed every 180 seconds.
	<div>  <p><b>NOTE:</b> When the Routing Engine sends a control packet to an IPv6 neighbor, the stale timer is the maximum interval in which neighbor reachability is confirmed. In such cases, IPv6 neighbor reachability is confirmed before the stale timer expires.</p> </div>
<b>Default</b>	Default is 20 minutes (1200 seconds)
<b>Options</b>	<b><i>seconds</i></b> —Duration in seconds. <b>Range:</b> 1 to 18000
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>IPv6 Neighbor Discovery Overview</i></li> <li>• <a href="#">show ipv6 neighbors on page 1973</a></li> </ul>

## negotiate-address

---

<b>Syntax</b>	negotiate-address;
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For interfaces with PPP encapsulation, enable the interface to be assigned an IP address by the remote end.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring IPCP Options for Interfaces with PPP Encapsulation on page 216</a></li><li>• <a href="#">address on page 424</a></li><li>• <a href="#">unnumbered-address (PPP) on page 1070</a></li><li>• <i>Junos OS Administration Library</i></li></ul>

## negotiation-options

---

<b>Syntax</b>	negotiation-options { <a href="#">allow-remote-loopback</a> ; <a href="#">no-allow-link-events</a> ; }
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam</a> <a href="#">link-fault-management</a> <a href="#">interface</a> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Enable and disable IEEE 802.3ah Operation, Administration, and Management (OAM) features for Ethernet interfaces.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>IEEE 802.3ah OAM Link-Fault Management Overview</i></li></ul>

## neighbor (Automatic Protection Switching for SONET/SDH)

<b>Syntax</b>	<code>neighbor address;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>If you are configuring one router to be the working router and a second to be the protect router, configure the address of the remote interface. You configure this on one or both of the interfaces.</p> <p>The address you specify for the neighbor must never be routed through the interface on which APS is configured, or instability will result. We strongly recommend that you directly connect the working and protect routers and that you configure the interface address of this shared network as the neighbor address.</p>
<b>Options</b>	<i>address</i> —Neighbor's address.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Basic Automatic Protect Switching</i></li> </ul>

## no-allow-link-events

<b>Syntax</b>	<code>no-allow-link-events;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam</a> <a href="#">ethernet</a> <a href="#">link-fault-management</a> <a href="#">interface</a> <i>interface-name</i> <a href="#">negotiation-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Disable the sending of link event TLVs.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Disabling the Sending of Link Event TLVs</i></li> </ul>

## **no-aggregate-delegate-processing**

---

<b>Syntax</b>	no-aggregate-delegate-processing;
<b>Hierarchy Level</b>	[edit protocols oam ethernet <a href="#">connectivity-fault-management</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 14.1.
<b>Description</b>	Disable distribution of connectivity fault management (CFM) sessions on aggregated Ethernet interfaces.
<b>Default</b>	CFM sessions on aggregated Ethernet interfaces are distributed by default.
<b>Required Privilege Level</b>	Configure—To enter configuration mode. Control—To modify any configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>IEEE 802.1ag OAM Connectivity Fault Management Overview</i></li></ul>

## asynchronous-notification

<b>Syntax</b>	(asynchronous-notification   no-asynchronous-notification);
<b>Hierarchy Level</b>	[edit interfaces <i>ge-fpc/pic/port</i> gigether-options ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	<p>(MX Series routers, T Series routers) For all Gigabit Ethernet interfaces (1-Gigabit, 10-Gigabit, and 100-Gigabit), configure support for notification of link down alarm generation and transfer.</p> <p>(M120 and M320 routers) For all 10-Gigabit Ethernet PIC interfaces, configure support for notification of link down alarm generation and transfer.</p> <ul style="list-style-type: none"> <li>• <b>asynchronous-notification</b>—Support notification of link down alarm generation and transfer.</li> <li>• <b>no-asynchronous-notification</b>—Prohibit notification of link down alarm generation and transfer.</li> </ul>
<b>Default</b>	Support for notification of link down alarm generation and transfer is not enabled.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Gigabit Ethernet Notification of Link Down Alarm Overview</i></li> <li>• <i>Configuring Gigabit Ethernet Notification of Link Down Alarm</i></li> </ul>

## no-auto-mdix

---

<b>Syntax</b>	no-auto-mdix;
<b>Hierarchy Level</b>	[edit interface <i>ge-fpc/port/pic</i> gigether-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	<p>Disable the Auto MDI/MDIX feature.</p> <p>MX Series routers with Gigabit Ethernet interfaces automatically detect MDI and MDIX port connections. Use this statement to override the default setting. Remove this statement to return to the default setting.</p>
<b>Default</b>	Auto MDI/MDIX is enabled by default.
<b>Options</b>	There are no options for this statement.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Ethernet Interfaces Overview</i></li><li>• <a href="#">gigether-options on page 632</a>.</li></ul>

## auto-negotiation

<b>Syntax</b>	(auto-negotiation   no-auto-negotiation) <remote-fault (local-interface-online   local-interface-offline)>;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ether-options], [edit interfaces <i>interface-name</i> <b>gigether-options</b> ], [edit interfaces <i>ge-pim</i> /0/0 <b>switch-options switch-port</b> <i>port-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.6. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	For Gigabit Ethernet interfaces on M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers explicitly enable autonegotiation and remote fault. For EX Series switches, explicitly enable autonegotiation only. <ul style="list-style-type: none"> <li>• <b>auto-negotiation</b>—Enables autonegotiation. This is the default.</li> <li>• <b>no-auto-negotiation</b>—Disable autonegotiation. When autonegotiation is disabled, you must explicitly configure the link mode and speed.</li> </ul> <p>When you configure Tri-Rate Ethernet copper interfaces to operate at 1 Gbps, autonegotiation must be enabled.</p>



**NOTE:** On EX Series switches, an interface configuration that disables autonegotiation and manually sets the link speed to 1 Gbps is accepted when you commit the configuration; however, if the interface you are configuring is a Tri-Rate Ethernet copper interface, the configuration is ignored as invalid and autonegotiation is enabled by default.

To correct the invalid configuration and disable autonegotiation:

1. Delete the **no-auto-negotiation** statement and commit the configuration.
2. Set the link speed to 10 or 100 Mbps, set **no-auto-negotiation**, and commit the configuration.

On EX Series switches, if the link speed and duplex mode are also configured, the interfaces use the values configured as the desired values in the negotiation. If autonegotiation is disabled, the link speed and link mode must be configured.



**NOTE:** On T4000 routers, the **auto-negotiation** command is ignored for interfaces other than Gigabit Ethernet.



**NOTE:** On ACX Series routers, when you configure fiber interfaces (fiber media mode) to operate at 1 Gbps, you need to always enable autonegotiation (auto-negotiation) to negotiate the speed and duplex settings. You cannot disable autonegotiation (no-auto-negotiation) in the fiber media mode. In copper interfaces (copper media mode), autonegotiation is enabled by default. To disable autonegotiation, you need to explicitly configure the link speed to 10 or 100 Mbps, set no-auto-negotiation, and commit the configuration.

**Default** Autonegotiation is automatically enabled. No explicit action is taken after the autonegotiation is complete or if the negotiation fails.

**Options** **remote-fault (local-interface-online | local-interface-offline)**—(Optional) For M Series, MX Series, T Series, TX Matrix routers, and ACX Series routers only, manually configure remote fault on an interface.

**Default:** local-interface-online

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Gigabit Ethernet Autonegotiation Overview*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure) for EX Series Switches with ELS support*

## cbit-parity

<b>Syntax</b>	(cbit-parity   no-cbit-parity);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>t3-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For T3 interfaces only, enable or disable C-bit parity mode, which controls the type of framing that is present on the transmitted T3 signal. When C-bit parity mode is enabled, the C-bit positions are used for the far-end block error (FEBE), far-end alarm and control (FEAC), terminal data link, path parity, and mode indicator bits, as defined in ANSI T1.107a-1989. For ATM and ATM2 IQ2 and IQ2-E interfaces, M23 framing is used when the <b>no-cbit-parity</b> statement is included. For all other interfaces, M13 framing is used when the <b>no-cbit-parity</b> statement is included.
<b>Default</b>	C-bit parity mode is enabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i></li> <li>• <i>Disabling T3 C-Bit Parity Mode</i></li> </ul>

## core-dump

---

<b>Syntax</b>	(core-dump   no-core-dump);
<b>Hierarchy Level</b>	[edit interfaces mo- <i>fpc/pic/port</i> multiservice-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For monitoring services interfaces only, a useful tool for isolating the cause of a problem. Core dumping is enabled by default. The directory <b>/var/tmp</b> contains core files. The Junos OS saves the current core file (0) and the four previous core files, which are numbered 1 through 4 (from newest to oldest):</p> <ul style="list-style-type: none"><li>• <b>core-dump</b>—Enable the core dumping operation.</li><li>• <b>no-core-dump</b>—Disable the core dumping operation.</li></ul>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Multiservice Physical Interface Properties on page 170</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## feac-loop-respond

<b>Syntax</b>	(feac-loop-respond   no-feac-loop-respond);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>t3-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For T3 interfaces only, configure the router so a remote CSU can place the local router into loopback.</p> <p>If you configure remote or local loopback with the T3 <b>loopback</b> statement, the router does not respond to FEAC requests from the CSU even if you include the <b>feac-loop-respond</b> statement in the configuration. For the router to respond, you must delete the <b>loopback</b> statement from the configuration.</p> <p>You must rollback the setting done on the remote CSU prior to deactivating the <b>feac-loop-respond</b> statement. If the remote CSU cannot comply, clear the remote loop through local configuration to achieve the cleanup. For example, configure remote loopback on the interface and then delete the remote loopback.</p>
<b>Default</b>	The router does not respond to FEAC requests.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the T3 FEAC Response</i></li> <li>• <a href="#">loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3) on page 752</a></li> <li>• <a href="#">remote-loopback-respond on page 929</a></li> </ul>

## flow-control

---

**Syntax** (flow-control | no-flow-control);

**Hierarchy Level** [edit interfaces *interface-name* [aggregated-ether-options](#)],  
[edit interfaces *interface-name* ether-options],  
[edit interfaces *interface-name* [fastether-options](#)],  
[edit interfaces *interface-name* [gigether-options](#)],  
[edit interfaces *interface-name* [multiservice-options](#)],  
[edit interfaces interface-range *name* [aggregated-ether-options](#)],  
[edit interfaces interface-range *name* ether-options]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 9.0 in EX Series switches.  
Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.

**Description** For aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet interfaces only, explicitly enable flow control, which regulates the flow of packets from the router or switch to the remote side of the connection. Enabling flow control is useful when the remote device is a Gigabit Ethernet switch. Flow control is not supported on the 4-port Fast Ethernet PIC.



**NOTE:** On the Type 5 FPC, to prioritize control packets in case of ingress oversubscription, you must ensure that the neighboring peers support MAC flow control. If the peers do not support MAC flow control, then you must disable flow control.

---

**Default** Flow control is enabled.



**NOTE:** Flow control is enabled by default only on physical interfaces and it is disabled by default on aggregated Ethernet interfaces.

---

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Flow Control*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure) for EX Series Switches with ELS support*

## gratuitous-arp-reply

<b>Syntax</b>	(gratuitous-arp-reply   no-gratuitous-arp-reply);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ] [edit interfaces <i>interface-range</i> <i>interface-range-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 in EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	For Ethernet interfaces, enable updating of the Address Resolution Protocol (ARP) cache for gratuitous ARPs.
<b>Default</b>	Updating of the ARP cache is disabled on all Ethernet interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Gratuitous ARP</i></li> <li>• <a href="#">no-gratuitous-arp-request on page 817</a></li> </ul>

## no-gratuitous-arp-request

<b>Syntax</b>	no-gratuitous-arp-request;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	For Ethernet interfaces and pseudowire logical interfaces, do not respond to gratuitous ARP requests.
<b>Default</b>	Gratuitous ARP responses are enabled on all Ethernet interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Gratuitous ARP</i></li> </ul>

## no-keepalives

---


<b>Syntax</b>	no-keepalives;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Disable the sending of keepalives on a physical interface configured with PPP, Frame Relay, or Cisco HDLC encapsulation. The default keepalive interval is 10 seconds.</p> <p>For ATM2 IQ interfaces only, you can disable keepalives on a logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"><li>• <b>atm-ppp-llc</b>—PPP over AAL5 LLC encapsulation.</li><li>• <b>atm-ppp-vc-mux</b>—PPP over AAL5 multiplex encapsulation.</li></ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Keepalives on page 134</a></li><li>• <i>Disabling the Sending of PPPoE Keepalive Messages</i></li><li>• <i>Configuring Frame Relay Keepalives</i></li></ul>

## long-buildout

---

<b>Syntax</b>	(long-buildout   no-long-buildout);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure the T3 line buildout. A T3 interface has two settings for the T3 line buildout: a short setting, which is less than 255 feet (68 meters), and a long setting, which is greater than 255 feet and shorter than 450 feet (137 meters).</p> <p>This statement applies to copper-cable-based T3 interfaces only. You cannot configure a line buildout for a DS3 channel on a channelized OC12 interface, which runs over fiber-optic cable.</p>
<b>Default</b>	A T3 interface uses the short line buildout setting ( <b>no-long-buildout</b> ) for wires shorter than 255 feet (68 meters).
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the T3 Line Buildout</i></li> </ul>

## loopback (Aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet)

<b>Syntax</b>	(loopback   no-loopback);
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> aggregated-ether-options],  [edit interfaces <i>interface-name</i> ether-options],  [edit interfaces <i>interface-name</i> fastether-options],  [edit interfaces <i>interface-name</i> gigether-options],  [edit interfaces interface-range <i>name</i> ether-options]</p> <p>For QFX Series and EX Series:</p> <p>[edit interfaces <i>interface-name</i> aggregated-ether-options],  [edit interfaces <i>interface-name</i> ether-options],</p> <p>For SRX Series Devices and vSRX:</p> <p>[edit interfaces <i>interface-name</i> redundant-ether-options]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4 for MX Series.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Statement modified in Junos OS Release 9.2 for the SRX Series.</p>
<b>Description</b>	For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces, enable or disable loopback mode.
	<div>  <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>By default, local aggregated Ethernet, Fast Ethernet, Tri-Rate Ethernet copper, Gigabit Ethernet, and 10-Gigabit Ethernet interfaces connect to a remote system.</li> <li>IPv6 Neighbor Discovery Protocol (NDP) addresses are not supported on Gigabit Ethernet interfaces when loopback mode is enabled on the interface. That is, if the loopback statement is configured at the [edit interfaces <i>ge-fpc/pic/port</i> gigether-options] hierarchy level, an NDP address cannot be configured at the [edit interfaces <i>ge-fpc/pic/port</i> unit <i>logical-unit-number</i> family inet6 address] hierarchy level.</li> </ul> </div>
<b>Default</b>	By default, loopback is disabled.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- *Configuring Ethernet Loopback Capability*
  - *Understanding Interfaces*

## mac-learn-enable

<b>Syntax</b>	mac-learn-enable;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> ] [edit interfaces aex aggregated-ether-options ethernet-switch-profile]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Support for statement under the <b>[edit interfaces aex aggregated-ether-options ethernet-switch-profile]</b> hierarchy introduced in Junos OS Release 15.1.
<b>Description</b>	<p>For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), for Gigabit Ethernet DPCs on MX Series routers, for 100-Gigabit Ethernet Type 5 PIC with CFP, and for MPC3E, MPC4E, MPC5E, MPC5EQ, and MPC6E MPCs, configure dynamic learning of the source and destination MAC addresses. By default, the interface is not allowed to dynamically learn source and destination MAC addresses.</p> <p>To disable dynamic learning of the source and destination MAC addresses after it has been configured, you must delete <b>mac-learn-enable</b> from the configuration.</p> <p>MPCs support MAC address accounting for an individual interface or an aggregated Ethernet interface member link only after the interface has received traffic from the MAC source. If traffic is only exiting an interface, the MAC address is not learned and MAC address accounting does not occur.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring MAC Address Filtering</i></li> <li>• <i>Configuring MAC Address Accounting</i></li> </ul>

## no-partition


---

<b>Syntax</b>	no-partition <b>interface-type</b> (e1   (cau4   so)   (ct3   t3)   so   t3);
<b>Hierarchy Level</b>	[edit interfaces ce1- <i>fpc/pic/port</i> ], [edit interfaces coc1- <i>fpc/pic/port:channel</i> ], [edit interfaces coc12- <i>fpc/pic/port</i> ], [edit interfaces cstm1- <i>fpc/pic/port</i> ], [edit interfaces ct3- <i>fpc/pic/port</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For Channelized E1 IQ PICs only, configure the channelized E1 interface as an unpartitioned, clear channel.</p> <p>For Channelized OC12 PIC only, convert the channelized OC1 IQ interface into a channelized T3 interface or a T3 interface. You perform this configuration task for C-bit parity and M13-mapped configurations.</p> <p>For Channelized OC12 IQ PICs only, configure the channelized OC12 interface as an unpartitioned, clear channel.</p> <p>For Channelized STM1 PIC only, convert the channelized STM1 IQ interface into a channelized Administrative Unit 4 (AU-4) interface or a SONET/SDH STM1 interface.</p> <p>For Channelized DS3 PIC only, configure the channelized T3 interface as an unpartitioned, clear channel.</p>
<b>Default</b>	If you do not include either this statement or the <b>partition</b> statement, the Channelized IQ PIC is not partitioned, and no data channels are configured.
<b>Options</b>	<p>The option used must correspond to the physical interface type:</p> <p><b>e1</b>—E1 interface type.</p> <p><b>coc12 so</b>—Channelized OC12 interface type, in SONET mode.</p> <p><b>cau4</b>—Channelized AU-4 interface type.</p> <p><b>cstm1</b>—SONET/SDH STM1 interface type, in SDH mode.</p> <p><b>ct3</b>—Channelized T3 interface type.</p> <p><b>t3</b>—T3 interface type.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>


- Related Documentation**
- *Channelized E1 IQ and IQE Interfaces Overview*
  - *Channelized OC12/STM4 IQ and IQE Interfaces Overview*
  - *Configuring an OC12/STM4 Interface*
  - *Configuring Channelized STM1 IQ and IQE Interfaces*
  - *Configuring T3 IQ Interfaces*
  - [partition on page 855](#)
  - *no-partition*

## payload-scrambler

---

<b>Syntax</b>	(payload-scrambler   no-payload-scrambler);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>e3-options</b> ], [edit interfaces <i>interface-name</i> <b>sonet-options</b> ], [edit interfaces <i>interface-name</i> <b>t3-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Enable or disable HDLC scrambling on an E3, a SONET/SDH, or a T3 interface. This type of scrambling provides better link stability. Both sides of a connection must either use or not use scrambling.</p> <p>If you commit a T3 interface configuration that has HDLC payload scrambling enabled, the interface must also be configured to be compatible with the channel service unit (CSU) at the remote end of the line.</p> <p>Disable payload scrambling on an E3 interface if Digital Link compatibility mode is used.</p> <p>On a channelized OC12 interface, the <b>sonet payload-scrambler</b> statement is ignored. To configure scrambling on the DS3 channels on the interface, you can include the <b>t3-options payload-scrambler</b> statement in the configuration for each DS3 channel.</p>
	<div> <b>NOTE:</b> The <b>payload-scrambler</b> statement at the [edit interfaces <i>interface-name</i> <b>e3-options</b>] hierarchy level is not valid for IQE PICs.</div>
<b>Default</b>	Payload scrambling is disabled on all E3 and T3 interfaces; it is enabled by default on E3/T3 over ATM interfaces and on SONET/SDH interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i></li><li>• <i>Configuring E3 HDLC Payload Scrambling</i></li><li>• <i>Configuring SONET/SDH HDLC Payload Scrambling for Link Stability</i></li><li>• <i>Configuring T3 HDLC Payload Scrambling</i></li><li>• <i>Examples: Configuring T3 Interfaces</i></li><li>• <a href="#">compatibility-mode on page 491</a></li></ul>

## no-pre-classifier

<b>Syntax</b>	no-pre-classifier;
<b>Hierarchy Level</b>	[edit chassis fpc <i>n</i> pic <i>n</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.4.
<b>Description</b>	Specify disabling the control queue for all ports on the 10-Gigabit Ethernet LAN/WAN PIC. Deleting this configuration re-enables the control queue feature on all ports of the 10-Gigabit Ethernet LAN/WAN PIC.
	<div>  <p><b>NOTE:</b> For the 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (model number PD-5-10XGE-SFPP), the control queue has a rate limiter to limit the control traffic to 2 Mbps (fixed, not user-configurable) per port. If the transit control traffic crosses this limit, then it can cause drops on locally terminating control traffic, causing flap of protocols such as BGP and OSPF. To avoid the control traffic being dropped, configure the no-pre-classifier statement to disable the control queue.</p> </div>
<b>Default</b>	The no-pre-classifier statement is not configured and the control queue is operational.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>10-port 10-Gigabit Ethernet LAN/WAN PIC Overview</li> <li>Configuring Control Queue Disable on a 10-port 10-Gigabit Ethernet LAN/WAN PIC</li> </ul>

## no-redirects

---

<b>Syntax</b>	no-redirects;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>family</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	<p>Do not send protocol redirect messages on the interface.</p> <p>To disable the sending of protocol redirect messages for the entire router or switch, include the <b>no-redirects</b> statement at the <b>[edit system]</b> hierarchy level.</p>
<b>Default</b>	Interfaces send protocol redirect messages.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Disabling the Transmission of Redirect Messages on an Interface on page 226</a></li><li>• <i>Junos OS Administration Library</i></li></ul>

## source-filtering

<b>Syntax</b>	(source-filtering   no-source-filtering);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">aggregated-ether-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">fastether-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">gigether-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
<b>Description</b>	<p>For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and Gigabit Ethernet IQ interfaces only, enable the filtering of MAC source addresses, which blocks all incoming packets to that interface. To allow the interface to receive packets from specific MAC addresses, include the <b>source-address-filter</b> statement.</p> <p>If the remote Ethernet card is changed, the interface is no longer able to receive packets from the new card because it has a different MAC address.</p>
<b>Default</b>	Source address filtering is disabled.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring MAC Address Filtering for Ethernet Interfaces</i></li> <li>• <i>Configuring MAC Address Filtering on PTX Series Packet Transport Routers</i></li> <li>• <a href="#">accept-source-mac on page 409</a></li> <li>• <a href="#">source-address-filter on page 977</a></li> </ul>

## syslog (Monitoring)

---

<b>Syntax</b>	(syslog   no-syslog);
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>mo-fpc/pic/port</i> <a href="#">multiservice-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>System logging is enabled by default. The system log information of the Monitoring Services PIC is passed to the kernel for logging in the <code>/var/log</code> directory.</p> <ul style="list-style-type: none"><li>• <b>syslog</b>—Enable PIC system logging.</li><li>• <b>no-syslog</b>—Disable PIC system logging.</li></ul>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Multiservice Physical Interface Properties on page 170</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## no-termination-request

---

<b>Syntax</b>	no-termination-request;
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">ppp-options</a> ], [edit <a href="#">interfaces</a> <i>lsq-fpc/pic/port</i> <a href="#">lsq-failure-options</a> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 7.4.</p> <p>Support at the [edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">ppp-options</a>] hierarchy level added in Junos OS Release 8.3.</p>
<b>Description</b>	For LSQ PICs or link PICs in redundant LSQ configurations, you can inhibit the router from sending PPP termination-request messages to the remote host if the PIC fails.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Link PIC Failover on Channelized OC3 IQ and IQE Interfaces</i></li><li>• <i>Configuring Link PIC Failover on Channelized OC12/STM4 IQ and IQE Interfaces</i></li><li>• <i>Configuring Link PIC Failover on Channelized STM1 Interfaces</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## translate-discard-eligible

<b>Syntax</b>	(translate-discard-eligible   no-translate-discard-eligible);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>ccc</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>ccc</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For interfaces with encapsulation type Frame Relay CCC, enable or disable translation of Frame Relay discard eligible (DE) control bits.
<b>Default</b>	DE bit translation is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Frame Relay Control Bit Translation</i></li> </ul>

## translate-fecn-and-becn

<b>Syntax</b>	(translate-fecn-and-becn   no-translate-fecn-and-becn);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>ccc</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>ccc</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For interfaces with encapsulation type Frame Relay CCC, enable or disable translation of Frame Relay forward explicit congestion notification (FECN) control bits and Frame Relay backward explicit congestion notification (BECN) control bits.
<b>Default</b>	FECN and BECN bit translation is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Frame Relay Control Bit Translation</i></li> </ul>

## unframed

---

<b>Syntax</b>	(unframed   no-unframed);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">e3-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For E3 IQ interfaces only, enable or disable unframed mode. In unframed mode, the E3 IQ interface do not detect yellow ( <b>ylw</b> ) or loss-of-frame ( <b>lof</b> ) alarms.
<b>Default</b>	Unframed mode is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring E3 IQ and IQE Unframed Mode</a></li></ul>

## z0-increment

---

<b>Syntax</b>	(z0-increment   no-z0-increment);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure an incremental STM ID rather than a static one.
<b>Default</b>	no-Z0-increment
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring an Incrementing STM ID to Interoperate with Older Equipment in SDH Mode</a></li><li>• <a href="#">sonet-options on page 974</a></li></ul>

## node-id

<b>Syntax</b>	<code>node-id mac-address;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">protection-group ethernet-ring ring-name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>For EX Series switches and QFX Series switches, node-id is not configurable.</p> <p>For MX Series routers, optionally specify the MAC address of a node in the protection group. If this statement is not included, the router assigns the node's MAC address.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Ring Protection Switching Overview</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li> </ul>

## non-revertive (Interfaces)

<b>Syntax</b>	<code>non-revertive;</code>
<b>Hierarchy Level</b>	[edit interfaces aeX aggregated-ether-options lacp link-protection]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 9.3.</p> <p>Statement introduced in Junos OS Release 11.4 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.</p>
<b>Description</b>	Disable the ability to switch to a better priority link (if one is available) once a link is established as active and collection distribution is enabled.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">link-protection on page 733</a></li> <li>• <i>Configuring Aggregated Ethernet Link Protection</i></li> <li>• <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches</i></li> </ul>

## oam

```

Syntax  oam {
    ethernet {
        connectivity-fault-management {
            action-profile profile-name {
                default-actions {
                    interface-down;
                }
            }
        }
        performance-monitoring {
            delegate-server-processing;
            hardware-assisted-timestamping;
            hardware-assisted-keepalives;
            sla-iterator-profiles {
                profile-name {
                    avg-fd-twoway-threshold;
                    avg-ifdv-twoway-threshold;
                    avg-flr-forward-threshold;
                    avg-flr-backward-threshold;
                    disable;
                    calculation-weight {
                        delay delay-weight;
                        delay-variation delay-variation-weight;
                    }
                    cycle-time milliseconds;
                    iteration-period connections;
                    measurement-type (loss | statistical-frame-loss | two-way-delay);
                }
            }
        }
    }
    linktrace {
        age (30m | 10m | 1m | 30s | 10s);
        path-database-size path-database-size;
    }
    maintenance-domain domain-name {
        level number;
        name-format (character-string | none | dns | mac+2octet);
        maintenance-association ma-name {
            short-name-format (character-string | vlan | 2octet | rfc-2685-vpn-id);
            protect-maintenance-association protect-ma-name;
            remote-maintenance-association remote-ma-name;
            continuity-check {
                convey-loss-threshold;
                hold-interval minutes;
                interface-status-tlv;
                interval (100ms | 10m | 10ms | 10s | 1m | 1s);
                loss-threshold number;
                port-status-tlv;
            }
            mep mep-id {
                auto-discovery;
                direction (up | down);
                interface interface-name (protect | working);
            }
        }
    }
}

```

```

lowest-priority-defect (all-defects | err-xcon | mac-rem-err-xcon | no-defect |
rem-err-xcon | xcon );
priority number;
remote-mep mep-id {
  action-profile profile-name;
  sla-iterator-profile profile-name {
    data-tlv-size size;
    iteration-count count-value;
    priority priority-value;
  }
}
}
}
}
}
link-fault-management {
  action-profile profile-name {
    action {
      link-down;
      send-critical-event;
      syslog;
    }
    event {
      link-adjacency-loss;
      link-event-rate {
        frame-error count;
        frame-period count;
        frame-period-summary count;
        symbol-period count;
      }
      protocol-down;
    }
  }
}
interface interface-name {
  apply-action-profile
  link-discovery (active | passive);
  loopback-tracking;
  pdu-interval interval;
  pdu-threshold threshold-value;
  remote-loopback;
  event-thresholds {
    frame-error count;
    frame-period count;
    frame-period-summary count;
    symbol-period count;
  }
  negotiation-options {
    allow-remote-loopback;
    no-allow-link-events;
  }
}
}
}
}
}

```

<b>Hierarchy Level</b>	[edit protocols]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	For Ethernet interfaces on M320, M120, MX Series, and T Series routers and PTX Series Packet Transport Routers, provide IEEE 802.3ah Operation, Administration, and Maintenance (OAM) support.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>IEEE 802.3ah OAM Link-Fault Management Overview</i></li></ul>

## oam-liveness

<b>Syntax</b>	<pre>oam-liveness {     down-count cells;     up-count cells; }</pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>],          [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],          [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>],          [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],          [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.          Statement introduced in Junos OS Release 11.1 for the QFX Series.</p>
<b>Description</b>	<p>For ATM encapsulation only, configure Operation, Administration, and Maintenance (OAM) F5 loopback cell count thresholds. Not supported on ATM-over-SHDSL interfaces.</p> <p>For ATM2 IQ PICs only, configure OAM F4 loopback cell count thresholds at the <b>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>]</b> hierarchy level.</p>
<b>Options</b>	<p><b>down-count cells</b>—Minimum number of consecutive OAM F4 or F5 loopback cells lost before a VC is declared down.  <b>Range:</b> 1 through 255  <b>Default:</b> 5 cells</p> <p><b>up-count cells</b>—Minimum number of consecutive OAM F4 or F5 loopback cells received before a VC is declared up.  <b>Range:</b> 1 through 255  <b>Default:</b> 5 cells</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.          interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the ATM OAM F5 Loopback Cell Threshold</i></li> </ul>

## oam-period

---

<b>Syntax</b>	<code>oam-period (disable   seconds);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i></code> <code>    multipoint-destination <i>address</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code>    family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	For ATM encapsulation only, configure the OAM F5 loopback cell period. Not supported on ATM-over-SHDSL interfaces.  For ATM2 IQ PICs only, configure the OAM F4 loopback cell period at the <code>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>]</code> hierarchy level.
<b>Default</b>	If you omit this statement, OAM F5 loopback cells are not initiated, but the interface still responds if it receives OAM F5 loopback cells.
<b>Options</b>	<b>disable</b> —Disable the OAM loopback cell transmit feature.  <b>seconds</b> —OAM loopback cell period. <b>Range:</b> 1 through 900 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Defining the ATM OAM F5 Loopback Cell Period</i></li></ul>

## oc-slice

<b>Syntax</b>	<code>oc-slice <i>oc-slice-range</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>partition</b> <i>partition-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For channelized OC12 IQ interfaces only, configure the range of SONET/SDH slices.
<b>Default</b>	If you do not include either this statement or the <b>no-partition</b> statement, the Channelized OC12 IQ PICs not partitioned, and no data channels are configured.
<b>Options</b>	<p><b>oc-slice-range</b>—Range of SONET/SDH slices. OC3 interfaces must occupy three consecutive OC slices per interface, in the form 1–3, 4–6, 7–9, or 10–12. The T3, T1, and DS0 interface types each occupy one OC slice per interface.</p> <p><b>Range:</b> For OC3 interfaces, 1–3, 4–6, 7–9, or 10–12; for SONET/SDH and T3 interfaces, 1–12</p> <p>The remaining statement is explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i></li> </ul>

## open-timeout

---

<b>Syntax</b>	<code>open-timeout seconds;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces interface-name services-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure timeout period for Transmission Control Protocol (TCP) session establishment.
<b>Options</b>	<b>seconds</b> —Timeout period in seconds. <b>Range:</b> 4 through 224 seconds <b>Default:</b> 5 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## operating-mode


<b>Syntax</b>	<code>operating-mode mode;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <b>dsl-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For J Series Services Routers only, modify the operating mode of the digital subscriber line for an ATM interface.
<b>Options</b>	<p><b>mode</b>—Operating mode for ATM-over-ADSL interfaces. The mode can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>adsl2plus</b>—Set the ADSL line to train in the ITU G.992.5 mode.</li> <li>• <b>ansi-dmt</b>—Set the ADSL line to train in the ANSI T1.413 Issue 2 mode.</li> <li>• <b>auto</b>—Set the ADSL line to autonegotiate the setting to match the setting of the DSL access multiplexer (DSLAM) located at the central office. The ADSL line trains in the ANSI T1.413 Issue 2 (<b>ansi-dmt</b>) or ITU G.992.1 (<b>itu-dmt</b>) mode.</li> <li>• <b>etsi</b>—Set the ADSL line to train in the ETSI TS 101 388 V1.3.1 mode.</li> <li>• <b>itu-annexb-ur2</b>—Set the ADSL line to train in the ITU G.992.1 UR-2 mode.</li> <li>• <b>itu-annexb-non-ur2</b>—Set the ADSL line to train in the ITU G.992.1 non-UR-2 mode.</li> <li>• <b>itu-dmt</b>—Set the ADSL line to train in the ITU G.992.1 mode.</li> <li>• <b>itu-dmt-bis</b>—Set the ADSL line to train in the ITU G.992.3 mode.</li> </ul> <p><b>Default:</b> auto</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ATM-over-ADSL Overview</i></li> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## optics-options

---

<b>Syntax</b>	<pre>optics-options {     alarm low-light-alarm {         (link-down   syslog);     }     tca <i>tca-identifier</i> (enable-tca   no-enable-tca) (threshold <i>number</i>   threshold-24hrs <i>number</i>);     tx-power <i>dbm</i>;     warning low-light-warning {         (link-down   syslog);     }     wavelength <i>nm</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p><b>alarm</b> option and <b>warning</b> options introduced in Junos OS Release 10.0.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement and <b>tx-power</b> option introduced in Junos OS Release 13.2 for PTX Series routers.</p> <p><b>tca</b> option introduced in Junos OS Release 14.2 for PTX Series routers.</p> <p>Statement introduced in Junos OS Release 18.3R1 for PTX10K-LC1104 on the PTX10008 and PTX10016 routers.</p>
<b>Description</b>	For 10-Gigabit Ethernet or 100-Gigabit Ethernet dense wavelength-division multiplexing (DWDM) interfaces only, configure full C-band International Telecommunication Union (ITU)-Grid tunable optics.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Ethernet DWDM Interface Wavelength Overview</i></li><li>• <i>100-Gigabit Ethernet OTN Options Configuration Overview</i></li></ul>

## option-82

<b>Syntax</b>	<code>option-82 &lt;circuit-id&gt; &lt;remote-id&gt;;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication username-include</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication username-include</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0. Options <b>circuit-id</b> and <b>remote-id</b> introduced in Junos OS Release 11.4.
<b>Description</b>	<p>Specify that the option 82 information from the client PDU is concatenated with the username during the subscriber authentication process.</p> <p>For autosense VLANs, you can additionally specify Option 82 suboption information that is concatenated with the username. You can specify either both or neither of the Agent Circuit ID (suboption 1) and Agent Remote ID (suboption 1). If you specify both, the Agent Circuit ID is supplied first, followed by a delimiter, and then the Agent Remote ID. If you specify that neither suboption is supplied, the raw payload of Option 82 from the PDU is concatenated to the username.</p>
	<div>  <p><b>NOTE:</b> The option 82 value used in creating the username is based on the option 82 value that is encoded in the incoming DHCP discover packet. The use of suboptions is supported for DHCPv4 only.</p> </div>
<b>Options</b>	<p><b>none</b>—Use the raw payload of Option 82 from the PDU.</p> <p><b>circuit-id</b>—(Optional) Use the Agent Circuit ID suboption (suboption 1).</p> <p><b>remote-id</b>—(Optional) Use the Agent Remote ID suboption (suboption 2).</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring VLAN Interface Username Information for AAA Authentication</i></li> <li><i>Using DHCP Option 82 Suboptions in Authentication Usernames for Autosense VLANs</i></li> </ul>

## otn-options

**Syntax** `otn-options` {

```

    bytes (otn-options) transmit-payload-type value;
    fec (efec | gfec | gfec-sdfec | none );
    (is-ma | no-is-ma);
    (laser-enable | no-laser-enable);
    (line-loopback | no-line-loopback);
    (local-loopback | no-local-loopback);
    (odu-ttim-action-enable | no-odu-ttim-action-enable);
    (otu-ttim-action-enable | no-otu-ttim-action-enable);
    odu-delay-management {
        (bypass | no-bypass);
        (monitor-end-point | no-monitor-end-point);
        number-of-frames value;
        (no-start-measurement | start-measurement);
    }
    odu-signal-degrade {
        ber-threshold-clear value;
        ber-threshold-signal-degrade value;
        interval value;
    }
    (prbs | no-prbs);
    preemptive-fast-reroute {
        (backward-frr-enable | no-backward-frr-enable);
        (signal-degrade-monitor-enable | no-signal-degrade-monitor-enable);
        odu-backward-frr-enable | no-odu-backward-frr-enable;
        odu-signal-degrade-monitor-enable | no-odu-signal-degrade-monitor-enable;
    }
    rate {
        (fixed-stuff-bytes | no-fixed-stuff-bytes);
        oc192;
        otu4;
        (pass-through | no-pass-through);
    }
    signal-degrade {
        ber-threshold-clear value;
        ber-threshold-signal-degrade value;
        interval value;
    }
    tca tca-identifier (enable-tca | no-enable-tca) (threshold number | threshold-24hrs number);
    transport-monitoring;
    trigger trigger-identifier;
    tti tti-identifier;
}
```

**Hierarchy Level** [edit interfaces ge-fpc/pic/port]  
 [edit interfaces xe-fpc/pic/port]  
 [edit interfaces et-fpc/pic/port]

**Release Information** Statement introduced in Junos OS Release 9.4.  
**bytes**, **is-ma**, **local-loopback**, **no-is-ma**, **no-local-loopback**, **no-odu-ttim-action-enable**,  
**no-otu-ttim-action-enable**, **no-prbs**, **odu-delay-management**, **odu-ttim-action-enable**,

**otu-ttim-action-enable**, **prbs**, **preemptive-fast-reroute**, and **signal-degrade** statements introduced in Junos OS Release 13.2 for PTX Series routers.

**oc192** statement introduced in Junos OS Release 13.3R3 for MX Series routers.

**odu-signal-degrade**, **odu-backward-frr-enable** | **no-odu-backward-frr-enable**, **odu-signal-degrade-monitor-enable** | **no-odu-signal-degrade-monitor-enable** statements introduced in Junos OS Release 14.1R2 and 14.2 for P2-100GE-OTN PIC in PTX5000 routers.

**tca** option introduced in Junos OS Release 14.2 for PTX Series routers.

<b>Description</b>	Specify the Ethernet optical transport network (OTN) interface and options.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interfaces-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>10-Gigabit Ethernet OTN Options Configuration Overview</i></li> <li>• <i>100-Gigabit Ethernet OTN Options Configuration Overview</i></li> <li>• <i>Configuring 100-Gigabit DWDM OTN PICs</i></li> </ul>

## output

<b>Syntax</b>	<pre>output {   <b>service-set</b> <i>service-set-name</i> &lt;<b>service-filter</b> <i>filter-name</i>&gt;; }</pre>
<b>Hierarchy Level</b>	[edit <b>interfaces</b> <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet service], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet service]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Define one or more output service sets and filters to be applied to traffic.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## output-list

---

<b>Syntax</b>	<code>output-list [ <i>filter-names</i> ];</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>filter</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>filter</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.6.
<b>Description</b>	Apply a group of filters to evaluate when packets are transmitted on an interface.
<b>Options</b>	[ <i>filter-names</i> ]—Name of a filter to evaluate when packets are transmitted on the interface. Up to 16 filters can be included in a filter input list.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Applying a Filter to an Interface on page 235</a></li><li>• <a href="#">input-list on page 675</a></li><li>• <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <i>Junos OS Administration Library</i></li></ul>

## output-policer

---

<b>Syntax</b>	<code>output-policer <i>policer-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">layer2-policer</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">layer2-policer</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Apply a single-rate two-color policer to the Layer 2 output traffic at the logical interface. The <b>output-policer</b> and <b>output-three-color</b> statements are mutually exclusive.
<b>Options</b>	<b><i>policer-name</i></b> —Name of the single-rate two-color policer that you define at the [edit firewall] hierarchy level.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Two-Color and Three-Color Policers at Layer 2</i></li> <li>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i></li> <li>• <i>Configuring a Gigabit Ethernet Policer</i></li> <li>• <a href="#">input-policer on page 676</a></li> <li>• <a href="#">input-three-color on page 678</a></li> <li>• <a href="#">layer2-policer on page 718</a></li> <li>• <a href="#">logical-interface-policer on page 747</a></li> <li>• <a href="#">output-three-color on page 847</a></li> </ul>

## output-priority-map

---

<b>Syntax</b>	<pre>output-priority-map {   classifier {     premium {       forwarding-class <i>class-name</i> {         loss-priority (high   low);       }     }   } }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> ] [edit interfaces <i>interface-name</i> ether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 13.2 for the QFX Series.
<b>Description</b>	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet interfaces only, define the output policer priority map to be applied to outgoing frames on this interface.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Specifying an Output Priority Map</a></li><li>• <a href="#">input-priority-map on page 677</a></li></ul>

## output-three-color

<b>Syntax</b>	<code>output-three-color <i>policer-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">layer2-policer</a> ] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">layer2-policer</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Apply a single-rate or two-rate three-color policer to the Layer 2 output traffic at the logical interface. The <b>output-three-color</b> and <b>output-policer</b> statements are mutually exclusive.
<b>Options</b>	<b><i>policer-name</i></b> —Name of the single-rate or two-rate three-color policer.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Two-Color and Three-Color Policers at Layer 2</i></li> <li>• <i>Applying Layer 2 Policers to Gigabit Ethernet Interfaces</i></li> <li>• <i>Configuring a Gigabit Ethernet Policer</i></li> <li>• <a href="#">input-three-color on page 678</a></li> <li>• <a href="#">input-policer on page 676</a></li> <li>• <a href="#">layer2-policer on page 718</a></li> <li>• <a href="#">logical-interface-policer on page 747</a></li> <li>• <a href="#">output-policer on page 845</a></li> </ul>

## output-vlan-map (Aggregated Ethernet)

---

<b>Syntax</b>	<pre>output-vlan-map {     (pop   push   swap);     tag-protocol-id <i>tpid</i>;     vlan-id <i>number</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2. Starting in Junos OS Release 17.3R1, input-vlan-map for outer vlan is supported for L2 circuit over aggregated Ethernet interfaces for QFX10000 Series switches.
<b>Description</b>	<p>Define the rewrite profile to be applied to outgoing frames on this logical interface. On MX Series routers, this statement only applies to aggregated Ethernet interfaces using Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2 and IQ2-E interfaces and 100-Gigabit Ethernet Type 5 PIC with CFP..</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Stacking and Rewriting Gigabit Ethernet VLAN Tags</i></li><li>• <a href="#">input-vlan-map (Aggregated Ethernet) on page 679</a></li></ul>

## output-vlan-map

<b>Syntax</b>	<pre>output-vlan-map {   (pop   pop-pop   pop-swap   push   push-push   swap   swap-push   swap-swap);   inner-tag-protocol-id <i>tpid</i>;   inner-vlan-id <i>number</i>;   tag-protocol-id <i>tpid</i>;   vlan-id <i>number</i>; }</pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p><b>pop-pop</b>, <b>pop-swap</b>, <b>push-push</b>, <b>swap-push</b>, and <b>swap-swap</b> statements added in Junos OS Release 8.1.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
<b>Description</b>	<p>For EX Series switches, defines the rewrite operation to be applied to outgoing frames.</p> <p>For MX Series routers and NFX Series devices' Gigabit Ethernet IQ and 10-Port 10-Gigabit Ethernet SFPP interfaces only, defines the rewrite operation to be applied to outgoing frames on this logical interface.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Stacking and Rewriting Gigabit Ethernet VLAN Tags</i></li> <li>• <a href="#">input-vlan-map on page 680</a></li> </ul>

## overflow (Receive Bucket)

---

<b>Syntax</b>	overflow (discard   tag);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> receive-bucket]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify how to handle packets that exceed the threshold for the receive leaky bucket.
<b>Options</b>	<b>tag</b> —Tag, count, and process received packets that exceed the threshold. <b>discard</b> —Discard received packets that exceed the threshold. No counting is done.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 156</a></li></ul>

## overflow (Transmit Bucket)

---

<b>Syntax</b>	overflow discard;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> transmit-bucket]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Discard packets that exceed the threshold for the transmit leaky bucket.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 156</a></li></ul>

## override

---

<b>Syntax</b>	<code>override tag <i>vlan-tag</i> dynamic-profile <i>profile name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">auto-configure vlan-ranges</a> ], [edit interfaces <i>interface-name</i> <a href="#">auto-configure stacked-vlan-ranges</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.2.
<b>Description</b>	Override dynamic profile assignment to individual VLANs that are already part of a previously defined VLAN range and dynamic profile.
<b>Options</b>	<p><b><i>vlan-tag</i></b>—VLAN tag that you want to override.</p> <p><b><i>profile-name</i></b>—Name of the dynamic profile that you want to use when overriding the specified VLAN tag.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Overriding the Dynamic Profile Used for an Individual VLAN</i></li> <li>• <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs</i></li> <li>• <i>Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs</i></li> </ul>

## pado-advertise

---

<b>Syntax</b>	<code>pado-advertise;</code>
<b>Hierarchy Level</b>	[edit protocols pppoe]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	Enable named services configured in PPPoE service name tables to be advertised in PPPoE Active Discovery Offer (PADO) control packets. By default, advertisement of named services in PADO packets is disabled.



**NOTE:** If you enable advertisement of named services in PADO packets, make sure the number and length of all advertised service entries does not exceed the maximum transmission unit (MTU) size of the PPPoE underlying interface.


<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring PPPoE Service Name Tables</i></li><li>• <i>Enabling Advertisement of Named Services in PADO Control Packets</i></li></ul>

## paired-group

---

<b>Syntax</b>	<code>paired-group <i>group-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure load sharing between two working protect circuit pairs.
<b>Options</b>	<b><i>group-name</i></b> —Circuit's group name, as configured with the <b>protect-circuit</b> or <b>working-circuit</b> statement.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring APS Load Sharing</i></li><li>• <a href="#">working-circuit on page 1110</a></li></ul>

## pap

<b>Syntax</b>	<pre>pap {   access-profile name;   default-pap-password password;   local-name name;   local-password password;   passive; }</pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <b>ppp-options</b>],  [edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>ppp-options</b>],  [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>ppp-options</b>]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	<p>Configure the Password Authentication Protocol (PAP). Use PAP authentication as a means to provide a simple method for the peer to establish its identity using a two-way handshake. This is done only upon initial link establishment.</p> <p>After the link is established, an ID and password pair is repeatedly sent by the peer to the authenticator until authentication is acknowledged or the connection is terminated.</p>
	<p> <b>BEST PRACTICE:</b> On inline service (si) interfaces for L2TP, only the <b>pap</b> statement itself is typically used for subscriber management. We recommend that you leave the subordinate statements at their default values.</p>
	<p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.  interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the PPP Challenge Handshake Authentication Protocol on page 136</a></li> <li>• <a href="#">Configuring the PPP Password Authentication Protocol On a Logical Interface on page 196</a></li> <li>• <a href="#">Tracing Operations of the pppd Process on page 153</a></li> <li>• <a href="#">traceoptions (PPP Process) on page 1036</a></li> <li>• <i>Example: Configuring PAP for an L2TP Profile</i></li> <li>• <i>Applying PPP Attributes to L2TP LNS Subscribers per Inline Service Interface</i></li> </ul>

## pap-password

---

<b>Syntax</b>	<code>pap-password password;</code>
<b>Hierarchy Level</b>	[edit access profile <i>profile-name</i> client <i>client-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Configure the Password Authentication Protocol (PAP) password.



**NOTE:** This statement is not supported for L2TP LNS on MX Series routers.

---

<b>Options</b>	<code>password</code> —PAP password.
<b>Required Privilege Level</b>	admin—To view this statement in the configuration. admin-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the PAP Password for an L2TP Profile</i></li></ul>

## partition

<b>Syntax</b>	<code>partition <i>partition-number</i> <b>oc-slice</b> <i>oc-slice-range</i> <b>interface-type</b> <i>type</i> <b>timeslots</b> <i>time-slot-range</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	The partition number is correlated with the channel number. Partition and channel numbering on IQ interfaces begins with :1, not :0.
<b>Default</b>	If you omit this statement, the channelized PIC or PIM is not partitioned, and no data channels are configured.
<b>Options</b>	<p><b><i>partition-number</i></b>—Sublevel interface partition index.</p> <p><b>Range:</b></p> <ul style="list-style-type: none"> <li>• 1 through 4 for an OC3 interface on a channelized OC12 IQ interface.</li> <li>• 1 through 12 for a T3 interface on a channelized OC12 IQ interface.</li> <li>• 1 through 4 for a T3 interface on a channelized T3 IQ interface.</li> <li>• 1 through 28 for a T1 IQ interface on a channelized OC12 IQ or channelized T3 IQ interface.</li> <li>• 1 through 10 for an E1 interface on a channelized E1 IQ interface.</li> <li>• 1 through 30 on a channelized E1 interface.</li> <li>• 1 through 23 on a channelized T1 interface.</li> <li>• 1 through 24 for NxDS0 interfaces on either channelized OC12 IQ or channelized DS3 IQ interfaces.</li> <li>• 0 through 31 (with 0 reserved for framing) for NxDS0 interfaces on channelized E1 IQ interfaces.</li> </ul> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Channelized E1 IQ and IQE Interfaces Overview</i></li> <li>• <i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i></li> <li>• <i>Configuring Channelized T3 IQ Interfaces</i></li> <li>• <a href="#">no-partition on page 822</a></li> </ul>

## passive (CHAP)

---

<b>Syntax</b>	<code>passive;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> ppp-options chap],</code> <code>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ppp-options chap],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ppp-options chap]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Do not challenge the peer, but respond if challenged. If you omit this statement from the configuration, the interface always challenges its peer.</p> <p>For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:</p> <ul style="list-style-type: none"><li>• <b>atm-ppp-llc</b>—PPP over AAL5 LLC encapsulation.</li><li>• <b>atm-ppp-vc-mux</b>—PPP over AAL5 multiplex encapsulation.</li></ul>
<b>Required Privilege Level</b>	<code>interface</code> —To view this statement in the configuration. <code>interface-control</code> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Passive Mode</i></li></ul>

## passive (PAP)

---

<b>Syntax</b>	<code>passive;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <code>ppp-options pap</code>],</p> <p>[edit interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options pap</code>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options pap</code>]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	Initiate an authentication request when the PAP option is received from a peer. If you omit this statement from the configuration, the interface requires the peer to initiate an authentication request.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Passive Mode</i></li> <li>• <i>Junos OS Administration Library</i></li> </ul>

## passive-monitor-mode

---

<b>Syntax</b>	<code>passive-monitor-mode;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Monitor packet flows from another router. If you include this statement in the configuration, the interface does not send keepalives or alarms, and does not participate actively on the network.</p> <p>This statement is supported on ATM, Ethernet, and SONET/SDH interfaces. For more information, see <i>ATM Interfaces Feature Guide for Routing Devices</i>.</p> <p>For ATM and Ethernet interfaces, you can include this statement on the physical interface only.</p> <p>For SONET/SDH interfaces, you can include this statement on the logical interface only.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Enabling Passive Monitoring on ATM Interfaces</i></li><li>• <i>Passive Monitoring on Ethernet Interfaces Overview</i></li><li>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i></li><li>• <a href="#">multiservice-options on page 796</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## password (Interfaces)

<b>Syntax</b>	<code>password password-string;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Configure the password that is sent to the external AAA authentication server for subscriber VLAN or stacked VLAN interface authentication.
<b>Options</b>	<b>password-string</b> —Authentication password.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring an Authentication Password for VLAN or Stacked VLAN Ranges</i></li> </ul>

## path-database-size


<b>Syntax</b>	<code>path-database-size path-database-size;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management linktrace</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Number of linktrace reply entries to be stored per linktrace request.
<b>Options</b>	<b>path-database-size</b> —Database size. <b>Range:</b> 1 through 255 <b>Default:</b> 64
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Linktrace Protocol in CFM</i></li> </ul>

## path-trace

---

Syntax	<code>path-trace <i>trace-string</i>;</code>
Hierarchy Level	<code>[edit interfaces <i>interface-name</i> <a href="#">sonet-options</a>]</code>
Release Information	Statement introduced before Junos OS Release 7.4.
Description	<p>For SONET/SDH interfaces and 10-Gigabit Ethernet interfaces in WAN PHY mode, configure a path trace identifier, which is a text string that identifies the circuit.</p> <p>On SONET/SDH OC48 interfaces that are configured for channelized (multiplexed) mode (by including the <b>no-concatenate</b> statement at the <code>[edit chassis fpc slot-number pic pic-number]</code> hierarchy level), the <b>bytes e1-quiet</b> and <b>bytes f1</b> options have no effect. The <b>bytes f2</b>, <b>bytes z3</b>, <b>bytes z4</b>, and <b>path-trace</b> options work correctly on channel 0 and work in the transmit direction only on channels 1, 2, and 3.</p> <p>For DS3 channels on a channelized OC12 interface, you can configure a unique path trace for each of the 12 channels. Each path trace can be up to 16 bytes. For channels on a channelized OC12 IQ interface, each path trace can be up to 64 bytes.</p>
Options	<p><b>trace-string</b>—Text string that identifies the circuit. If the string contains spaces, enclose it in quotation marks. A common convention is to use the circuit identifier as the path trace identifier. If you do not configure an identifier, the Junos OS uses the system and interface names to construct the default <b>trace-string</b>. For all nonchannelized SONET/SDH interfaces, the default <b>trace-string</b> is <b>system-name interface-name</b>. For channelized SONET/SDH interfaces and 10-Gigabit Ethernet WAN-PHY interfaces, the default <b>trace-string</b> is <b>interface-name</b>.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"><li>• <i>Configuring the SONET/SDH Path Trace Identifier for a Circuit</i></li><li>• <a href="#">sonet-options on page 974</a></li></ul>

## payload-scrambler

<b>Syntax</b>	(payload-scrambler   no-payload-scrambler);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>e3-options</b> ], [edit interfaces <i>interface-name</i> <b>sonet-options</b> ], [edit interfaces <i>interface-name</i> <b>t3-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Enable or disable HDLC scrambling on an E3, a SONET/SDH, or a T3 interface. This type of scrambling provides better link stability. Both sides of a connection must either use or not use scrambling.</p> <p>If you commit a T3 interface configuration that has HDLC payload scrambling enabled, the interface must also be configured to be compatible with the channel service unit (CSU) at the remote end of the line.</p> <p>Disable payload scrambling on an E3 interface if Digital Link compatibility mode is used.</p> <p>On a channelized OC12 interface, the <b>sonet payload-scrambler</b> statement is ignored. To configure scrambling on the DS3 channels on the interface, you can include the <b>t3-options payload-scrambler</b> statement in the configuration for each DS3 channel.</p>
	<p> <b>NOTE:</b> The <b>payload-scrambler</b> statement at the [edit interfaces <i>interface-name</i> <b>e3-options</b>] hierarchy level is not valid for IQE PICs.</p>
<b>Default</b>	Payload scrambling is disabled on all E3 and T3 interfaces; it is enabled by default on E3/T3 over ATM interfaces and on SONET/SDH interfaces.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring E3 and T3 Parameters on ATM Interfaces</i></li> <li>• <i>Configuring E3 HDLC Payload Scrambling</i></li> <li>• <i>Configuring SONET/SDH HDLC Payload Scrambling for Link Stability</i></li> <li>• <i>Configuring T3 HDLC Payload Scrambling</i></li> <li>• <i>Examples: Configuring T3 Interfaces</i></li> <li>• <a href="#">compatibility-mode on page 491</a></li> </ul>

## payload-size

---

<b>Syntax</b>	<code>payload-size bytes ;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> satop-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Specify the <b>satop-options</b> payload size in integer number of bytes.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>ATM Support on Circuit Emulation PICs Overview</i></li><li>• <a href="#">satop-options on page 949</a></li></ul>

## pdu-interval

<b>Syntax</b>	<code>pdu-interval <i>interval</i>;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam</a> <a href="#">ethernet link-fault-management interface</a> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2 for MX, M, T, ACX, Series routers, SRX Series firewalls, and EX Series Switches. Statement introduced in Junos OS Release 9.4 for EX Series switches.
<b>Description</b>	For Ethernet interfaces on EX Series switches and M320, M120, MX Series, and T Series routers, specify the periodic OAM PDU sending interval for fault detection. Used for IEEE 802.3ah Operation, Administration, and Management (OAM) support.
<b>Options</b>	<p><b>interval</b>—Periodic OAM PDU sending interval.</p> <p><b>Range:</b> For MX, M, T, ACX, Series routers, SRX Series firewalls and EX Series switches – 100 through 1000 milliseconds</p> <p><b>Default:</b> For EX Series switches –1000 milliseconds</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p> <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the OAM PDU Interval</i></li> <li>• <i>Example: Configuring Ethernet OAM Link Fault Management</i></li> <li>• <i>Configuring Ethernet OAM Link Fault Management (CLI Procedure)</i></li> </ul>

## pdu-threshold

---

<b>Syntax</b>	<code>pdu-threshold <i>threshold-value</i>;</code>
<b>Hierarchy Level</b>	[edit protocols <b>oam</b> <b>ethernet link-fault-management interface</b> <i>interface-name</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.2 for T, M, MX and ACX Series routers, SRX Series firewalls and EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.</p>
<b>Description</b>	<p>Configure how many protocol data units (PDUs) are missed before declaring the peer lost in Ethernet OAM link fault management (LFM) for all interfaces or for specific interfaces.</p> <p>For Ethernet interfaces on EX Series switches and M320, M120, MX Series, and T Series routers, specify the number of OAM PDUs to miss before an error is logged. Used for IEEE 802.3ah Operation, Administration, and Management (OAM) support.</p>
<b>Options</b>	<p><b><i>threshold-value</i></b>—The number of PDUs missed before declaring the peer lost.</p> <p><b>Range:</b> 3 through 10 PDUs</p> <p><b>Default:</b> 3 PDUs</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the OAM PDU Threshold</i></li><li>• <i>Configuring Ethernet OAM Link Fault Management (CLI Procedure)</i></li></ul>

## peer

<b>Syntax</b>	<code>peer a.b.c.d {     interface <i>interface-name</i>; }</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">multi-chassis-protection</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1.
<b>Description</b>	For MX Series routers with multichassis aggregated Ethernet (MC-AE) interfaces, use the <b>multi-chassis-protection</b> statement under the physical interface level to reduce the configuration at the logical interface level. If the interchassis control protocol connection (ICCP) is UP and the interchassis data link (ICL) comes UP, the router configured as standby will bring up the MC-AE interfaces shared with the peer active-active node specified by the <b>peer</b> statement. You must also specify the peer's physical interface.
<b>Options</b>	<p><b>a.b.c.d</b>—Specify the IP address of the peer.</p> <p><b>interface <i>interface-name</i></b>—Specify the peer's physical interface: interface <i>interface-name-fpc/pic/port</i></p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Multichassis Link Aggregation on MX Series Routers</i></li> <li>• <i>Configuring Active-Active Bridging and VRRP over IRB in Multichassis Link Aggregation on MX Series Routers and QFX Series Switches</i></li> <li>• <i>Configuring Aggregated Ethernet Link Protection</i></li> <li>• <i>Example: Configuring Aggregated Ethernet Link Protection</i></li> <li>• <a href="#">multi-chassis-protection on page 790</a></li> </ul>

## peer-unit

---

<b>Syntax</b>	<code>peer-unit <i>unit-number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure a peer relationship between two logical systems.
<b>Options</b>	<b><i>unit-number</i></b> —Peering logical system unit number.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## per-unit-scheduler

**Syntax** per-unit-scheduler;

**Hierarchy Level** [edit interfaces *interface-name*]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 13.2 on 16x10GE MPC and MPC3E line cards.  
Statement introduced in Junos OS Release 13.2 on PTX Series Packet Transport Routers.  
Statement introduced in Junos OS Release 13.3 on MPC4E line cards.  
Statement introduced in Junos OS Release 15.1 on MPC6E line cards.

**Description** For Channelized OC3 IQ, Channelized OC12 IQ, Channelized STM1 IQ, Channelized T3 IQ, Channelized E1 IQ, E3 IQ, link services IQ interfaces (lsq-), Gigabit Ethernet IQ, Gigabit Ethernet IQ2 and IQ2-E, and 10-, 40-, and 100-Gigabit Ethernet interfaces (including the 16x10GE MPC), enable the association of scheduler maps with logical interfaces.



**CAUTION:** Turning on per-unit scheduling causes the interface to reinitialize, which means all logical interfaces (units) on the interface are deleted and recreated.



**NOTE:** To enable per-unit scheduling on MX80 and MX104 routers, configure the per-unit-scheduler statement at each member physical interface level of a particular aggregated Ethernet interface as well as at that aggregated Ethernet interface level. On other routing platforms, it is enough if you include this statement at the aggregated Ethernet interface level.



**NOTE:** Per-unit scheduling is not supported on T1 interfaces configured on the Channelized OC12 IQ PIC.



**NOTE:** On Gigabit Ethernet IQ2 and IQ2-E PICs without the per-unit-scheduler statement, the entire PIC supports 4071 VLANs and the user can configure all the VLANs on the same port.

On Gigabit Ethernet IQ2 and IQ2-E PICs with the per-unit-scheduler statement, the entire PIC supports  $1024 - 2 * \text{number of ports}$  (1024 minus two times the number of ports), because each port is allocated two default schedulers.

When including the **per-unit-scheduler** statement, you must also include the **vlan-tagging** statement or the **flexible-vlan-tagging** statement (to apply scheduling to VLANs) or the **encapsulation frame-relay** statement (to apply scheduling to DLCIs) at the **[edit interfaces interface-name]** hierarchy level.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs</i></li><li>• <a href="#">vlan-tagging on page 1093</a></li><li>• <a href="#">flexible-vlan-tagging on page 618</a></li><li>• <i>Example: Applying Scheduling and Shaping to VLANs</i></li><li>• <i>Configuring Virtual LAN Queuing and Shaping on PTX Series Routers</i></li></ul>
------------------------------	--

## performance-monitoring

**Syntax**

```
performance-monitoring {
  delegate-server-processing;
  hardware-assisted-timestamping;
  hardware-assisted-keepalives;
  sla-iterator-profiles {
    profile-name {
      avg-fd-twoway-threshold;
      avg-ifdv-twoway-threshold;
      avg-flr-forward-threshold;
      avg-flr-backward-threshold;
      disable;
      calculation-weight {
        delay delay-weight;
        delay-variation delay-variation-weight;
      }
      cycle-time milliseconds;
      iteration-period connections;
      measurement-type (loss | statistical-frame-loss | two-way-delay);
    }
  }
}
```

**Hierarchy Level** [edit protocols [oam ethernet connectivity-fault-management](#)]

**Release Information** Statement introduced in Junos OS Release 9.5.

**Description** Specify performance monitoring support for Ethernet frame delay measurement.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** Configure—To enter configuration mode.  
Control—To modify any configuration.

**Related Documentation**

- *Ethernet Frame Delay Measurements Overview*
- *Guidelines for Configuring Routers to Support an ETH-DM Session*
- *Enabling the Hardware-Assisted Timestamping Option*

## periodic

---

<b>List of Syntax</b>	<a href="#">Syntax (EX Series) on page 870</a> <a href="#">Syntax (QFX Series) on page 870</a>
<b>Syntax (EX Series)</b>	<code>periodic interval;</code>
<b>Syntax (QFX Series)</b>	<code>periodic (fast   slow);</code>
<b>Hierarchy Level (EX Series)</b>	[edit interfaces aex <a href="#">aggregated-ether-options lacp</a> ], [edit interfaces interface-range <i>name</i> <a href="#">aggregated-ether-options lacp</a> ]
<b>Hierarchy Level (QFX Series)</b>	[edit interfaces aex aggregated-ether-options <a href="#">lacp</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
<b>Description</b>	For aggregated Ethernet interfaces only, configure the interval for periodic transmission of LACP packets.
<b>Options</b>	<b>interval</b> —Interval for periodic transmission of LACP packets. <ul style="list-style-type: none"><li><b>fast</b>—Transmit packets every second.</li><li><b>slow</b>—Transmit packets every 30 seconds.</li></ul> <b>Default:</b> fast
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li><i>Configuring LACP for Aggregated Ethernet Interfaces</i></li><li><i>Configuring Aggregated Ethernet LACP (CLI Procedure)</i></li><li><i>Example: Configuring Aggregated Ethernet High-Speed Uplinks Between an EX4200 Virtual Chassis Access Switch and an EX4200 Virtual Chassis Distribution Switch</i></li><li><i>Configuring Aggregated Ethernet LACP (CLI Procedure)</i></li><li><i>Understanding Aggregated Ethernet Interfaces and LACP for Switches</i></li><li><i>Junos OS Network Interfaces Library for Routing Devices</i></li></ul>

## pfc

<b>Syntax</b>	<code>pfc;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <code>ppp-options compression</code> ], [edit interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options compression</code> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <code>unit logical-unit-number ppp-options compression</code> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For interfaces with PPP encapsulation, configure the router to compress the protocol field to one byte.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the PPP Protocol Field Compression on page 151</a></li> </ul>

## pic-type

<b>Syntax</b>	<code>pic-type (atm1   atm2);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>at-fpc/pic/port</i> <code>atm-options</code> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM interfaces, configure the type of ATM PIC installed in your router.
<b>Options</b>	<code>atm1</code> —ATM1 PIC.  <code>atm2</code> —ATM2 IQ PIC.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the ATM PIC Type</a></li> </ul>

## plp-to-clp

---

<b>Syntax</b>	plp-to-clp;
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <b>atm-options</b> ], [edit interfaces at- <i>fpc/pic/port</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, enable the PLP setting to be copied to the cell-loss priority (CLP) bit.
<b>Default</b>	If you omit this statement, the Junos OS does not copy the PLP setting to the CLP bit.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Enabling the PLP Setting to Be Copied to the CLP Bit</i></li><li>• <i>Copying the Packet Loss Priority to the CLP Bit on ATM Interfaces</i></li></ul>

## plp1

<b>Syntax</b>	<code>plp1 cells;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],          [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>],          [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],          [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for QFX Series switches.</p>
<b>Description</b>	For ATM2 IQ interfaces only, define the EPD threshold on a VC. The EPD threshold is a limit on the number of transmit packets that can be queued. Packets that exceed the limit are discarded. This threshold applies to packets that have a PLP of 1.
<b>Default</b>	EPD threshold is unregulated.
<b>Options</b>	<p><b>cells</b>—Maximum number of cells.</p> <p><b>Range:</b> For 1-port and 2-port OC12 interfaces, 1 through 425,984 cells          For 1-port OC48 interfaces, 1 through 425,984 cells          For 2-port OC3, DS3, and E3 interfaces, 1 through 212,992 cells          For 4-port DS3 and E3 interfaces, 1 through 106,496 cells</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Two EPD Thresholds per Queue</i></li> <li>• <i>Configuring an ATM Scheduler Map</i></li> <li>• <a href="#">linear-red-profile on page 725</a></li> </ul>

## point-to-point

---

<b>Syntax</b>	point-to-point;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For all interfaces except aggregated Ethernet, Fast Ethernet, and Gigabit Ethernet, configure the interface unit as a point-to-point connection. This is the default connection type.
<b>Default</b>	If you omit this statement, the interface unit is configured as a point-to-point connection.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring a Point-to-Point Connection on page 193</a></li><li>• <a href="#">multipoint on page 794</a></li></ul>

## policer (CFM Firewall)

---

<b>Syntax</b>	<pre>policer <i>cfm-policer</i> {   if-exceeding {     bandwidth-limit 8k;     burst-size-limit 2k;   }   then discard; }</pre>
<b>Hierarchy Level</b>	[edit firewall]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Attach an explicit policer to CFM sessions.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Rate Limiting of Ethernet OAM Messages</a></li><li>• <a href="#">policer (CFM Global) on page 875</a></li><li>• <a href="#">policer (CFM Session) on page 876</a></li></ul>

## policer (CFM Global)

---

<b>Syntax</b>	<pre> policer {     all <i>cfm-policer-name</i>;     continuity-check <i>cfm-policer-name</i>;     other <i>cfm-policer-name</i>; } </pre>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify a policer at the global level to police the CFM traffic belonging to all sessions.
<b>Options</b>	<p><b>continuity-check <i>cfm-policer-name</i></b>—Police all continuity check packets with the policer specified.</p> <p><b>other <i>cfm-policer-name</i></b>—Police all non-continuity check packets with the policer specified.</p> <p><b>all <i>cfm-policer-name</i></b>—Police all CFM packets with policer specified. If the <b>all</b> option is used, then you cannot specify above two options.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Rate Limiting of Ethernet OAM Messages</i></li> <li>• <a href="#">policer (CFM Session) on page 876</a></li> </ul>

## policer (CFM Session)

---

<b>Syntax</b>	<pre>policer {     all <i>cfm-policer-name</i>;     continuity-check <i>cfm-policer-name</i>;     other <i>cfm-policer-name</i>; }</pre>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>name</i> level <i>number</i> maintenance-association <i>name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify a separate policer to rate-limit packets specific to that session.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>continuity-check <i>cfm-policer-name</i></b>—Police continuity check packets belonging to this session.</li><li>• <b>other <i>cfm-policer-name</i></b>—Police all non-continuity check packets belonging to this session.</li><li>• <b>all <i>cfm-policer-name</i></b>—Police all CFM packets belonging to this session. If the <b>all</b> option is used, then you cannot specify the above two options.</li></ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Rate Limiting of Ethernet OAM Messages</i></li><li>• <a href="#">policer (CFM Global) on page 875</a></li></ul>

## policer (CoS)


<b>Syntax</b>	<pre> policer <i>cos-policer-name</i> {     aggregate {         bandwidth-limit <i>bps</i>;         burst-size-limit <i>bytes</i>;     }     premium {         bandwidth-limit <i>bps</i>;         burst-size-limit <i>bytes</i>;     } } </pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For Gigabit Ethernet IQ, Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and 100-Gigabit Ethernet Type 5 PIC with CFP, define a CoS policer template to specify the premium bandwidth and burst-size limits, and the aggregate bandwidth and burst-size limits. The premium policer is not supported on MX Series routers or for Gigabit Ethernet interfaces with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router).</p>
<b>Options</b>	<p><b><i>cos-policer-name</i></b>—Name of one policer to specify the premium bandwidth and burst-size limits, and the aggregate bandwidth and burst-size limits.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">Configuring Gigabit Ethernet Policers</a></li> </ul>

## policer (Interface)

---

Syntax	<pre>policer {     arp <i>policer-template-name</i>;     input <i>policer-template-name</i>;     output <i>policer-template-name</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> <i>family</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> <i>family</i> ]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Apply a policer to an interface.
Options	<p><b>arp <i>policer-template-name</i></b>—For <i>inet</i> family only, name of one policer to evaluate when ARP packets are received on the interface.</p> <p><b>input <i>policer-template-name</i></b>—Name of one policer to evaluate when packets are received on the interface.</p> <p><b>output <i>policer-template-name</i></b>—Name of one policer to evaluate when packets are transmitted on the interface.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Applying Policers on page 226</a></li><li>• <i>Configuring Firewall Filters and Policers for VPLS</i></li><li>• <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## policer (MAC)

<b>Syntax</b>	<pre> policer {     input <i>cos-policer-name</i>;     output <i>cos-policer-name</i>; } </pre>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>accept-source-mac</b> <i>mac-address</i> <i>mac-address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>accept-source-mac</b> <i>mac-address</i> <i>mac-address</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>
<b>Description</b>	<p>For Gigabit Ethernet IQ and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), and 100-Gigabit Ethernet Type 5 PIC with CFP, configure MAC policing.</p>
<div>  <p><b>NOTE:</b></p> <p>On MX Series routers with Gigabit Ethernet or Fast Ethernet PICs, the following considerations apply:</p> <ul style="list-style-type: none"> <li>Interface counters do not count the 7-byte preamble and 1-byte frame delimiter in Ethernet frames.</li> <li>In MAC statistics, the frame size includes MAC header and CRC before any VLAN rewrite/imposition rules are applied.</li> <li>In traffic statistics, the frame size encompasses the L2 header without CRC after any VLAN rewrite/imposition rule.</li> </ul> </div>	
<b>Options</b>	<p><b>input <i>cos-policer-name</i></b>—Name of one policer to specify the premium bandwidth and aggregate bandwidth.</p> <p><b>output <i>cos-policer-name</i></b>—Name of one policer to specify the premium bandwidth and aggregate bandwidth.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring MAC Address Filtering</i></li> </ul>

## policy-statement

```
Syntax  policy-statement policy-name {
        term term-name {
            from {
                as-path-unique-count count (equal | orhigher | orlower);
                family family-name;
                match-conditions;
                policy subroutine-policy-name;
                prefix-list prefix-list-name;
                prefix-list-filter prefix-list-name match-type <actions>;
                protocol protocol-name;
                route-filter destination-prefix match-type <actions>;
                source-address-filter source-prefix match-type <actions>;
                tag value;
                traffic-engineering;
            }
            to {
                match-conditions;
                policy subroutine-policy-name;
            }
            then actions;
        }
    }
    then {
        aggregate-bandwidth;
        dynamic-tunnel-attributes dynamic-tunnel-attributes;
        limit-bandwidth limit-bandwidth;
        multipath-resolve multipath-resolve;
        no-entropy-label-capability;
        prefix-segment {
            index index;
            node-segment;
        }
        priority (high | medium | low);
    }
}
```

**Hierarchy Level** [edit dynamic-profiles *profile-name* policy-options],  
[edit logical-systems *logical-system-name* policy-options],  
[edit policy-options]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 9.0 for EX Series switches.  
Support for configuration in the dynamic database introduced in Junos OS Release 9.5.  
Support for configuration in the dynamic database introduced in Junos OS Release 9.5 for EX Series switches.  
**inet-mdt** option introduced in Junos OS Release 10.0R2.  
Statement introduced in Junos OS Release 11.3 for the QFX Series.  
**route-target** option introduced in Junos OS Release 12.2.  
Statement introduced in Junos OS 14.1X53-D20 for the OCX Series.  
**protocol** and **traffic-engineering** options introduced in Junos OS Release 14.2.  
**no-entropy-label-capability** option introduced in Junos OS Release 15.1.

**priority** and **tag value** options introduced in Junos OS Release 17.1.

**as-path-unique-count** option introduced in Junos OS Release 17.2R1.

**prefix-segment** option introduced in Junos OS Release 17.2R1 for MX Series routers, PTX Series routers, QFX5100 switches, and QFX10000 switches.

**multipath-resolve** and **dynamic-tunnel-attributes** options introduced in Junos OS Release 17.3R1.

**aggregate-bandwidth** and **limit-bandwidth** *limit-bandwidth* options introduced in Junos OS Release 17.4R1 for MX Series, PTX Series, and QFX Series.

**Description** Define a routing policy, including subroutine policies.

A *term* is a named structure in which match conditions and actions are defined. Routing policies are made up of one or more terms. Each routing policy term is identified by a term name. The name can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose the entire name in double quotation marks.

Each term contains a set of match conditions and a set of actions:

- Match conditions are criteria that a route must match before the actions can be applied. If a route matches all criteria, one or more actions are applied to the route.
- Actions specify whether to accept or reject the route, control how a series of policies are evaluated, and manipulate the characteristics associated with a route.

Generally, a router compares a route against the match conditions of each term in a routing policy, starting with the first and moving through the terms in the order in which they are defined, until a match is made and an explicitly configured or default action of **accept** or **reject** is taken. If none of the terms in the policy match the route, the router compares the route against the next policy, and so on, until either an action is taken or the default policy is evaluated.

If none of the match conditions of each term evaluates to true, the final action is executed. The final action is defined in an unnamed term. Additionally, you can define a default action (either **accept** or **reject**) that overrides any action intrinsic to the protocol.

The order of match conditions in a term is not relevant, because a route must match all match conditions in a term for an action to be taken.

To list the routing policies under the **[edit policy-options]** hierarchy level by **policy-statement** *policy-name* in alphabetical order, enter the **show policy-options** configuration command.

The statements are explained separately.

**Options** *actions*—(Optional) One or more actions to take if the conditions match. The actions are described in *Configuring Flow Control Actions*.

**family** *family-name*—(Optional) Specify an address family protocol. Specify **inet** for IPv4. Specify **inet6** for 128-bit IPv6, and to enable interpretation of IPv6 router filter addresses. For IS-IS traffic, specify **iso**. For IPv4 multicast VPN traffic, specify **inet-mvpn**. For IPv6 multicast VPN traffic, specify **inet6-mvpn**. For multicast-distribution-tree (MDT) IPv4 traffic, specify **inet-mdt**. For BGP route target VPN traffic, specify **route-target**. For traffic engineering, specify **traffic-engineering**.



**NOTE:** When family is not specified, the routing device or routing instance uses the address family or families carried by BGP. If multiprotocol BGP (MP-BGP) is enabled, the policy defaults to the protocol family or families carried in the network layer reachability information (NLRI) as configured in the *family* statement for BGP. If MP-BGP is not enabled, the policy uses the default BGP address family unicast IPv4.

**from**—(Optional) Match a route based on its source address.

**as-path-unique-count** *count* (**equal** | **orhigher** | **orlower**)—(Optional) Specify a number from 0 through 1024 to filter routes based on the number of unique autonomous systems (ASs) in the AS path. Specify the match condition for the unique AS path count.

**aggregate-bandwidth**—(Optional) Enable BGP to advertise aggregate outbound link bandwidth for load balancing.

**dynamic-tunnel-attributes** *dynamic-tunnel-attributes*—(Optional) Choose a set of defined dynamic tunnel attributes for forwarding traffic over V4oV6 tunnels.

**match-conditions**—(Optional in **from** statement; required in **to** statement) One or more conditions to use to make a match. The qualifiers are described in *Routing Policy Match Conditions*.

**multipath-resolve** *multipath-resolve*—(Optional) Enable the use of all paths for resolution over the specified prefix.

**limit-bandwidth** *limit-bandwidth*—(Optional) Specify the limit for advertised aggregate outbound link bandwidth for load balancing.

**Range:** 0 through 4,294,967,295 bytes

**no-entropy-label-capability**—(Optional) Disable the entropy label capability advertisement at egress or transit routes specified in the policy.

**priority** (**high** | **medium** | **low**)—(Optional) Configure the priority for an IS-IS route to change the default order in which the routes are installed in the routing table, in the event of a network topology change.

**policy** *subroutine-policy-name*—Use another policy as a match condition within this policy. The name identifying the subroutine policy can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" "). Policy names cannot take the form `__.*-internal__`, as this form is reserved. For information about how to configure subroutines, see *Understanding Policy Subroutines in Routing Policy Match Conditions*.

**policy** *name*—Name that identifies the policy. The name can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. To include spaces in the name, enclose it in quotation marks (" ").

**prefix-list** *prefix-list-name*—Name of a list of IPv4 or IPv6 prefixes.

**prefix-list-filter** *prefix-list-name*—Name of a prefix list to evaluate using qualifiers; *match-type* is the type of match, and *actions* is the action to take if the prefixes match.

**protocol** *protocol-name*—Name of the protocol used to control traffic engineering database import at the originating point.

**route-filter** *destination-prefix match-type <actions>*—(Optional) List of routes on which to perform an immediate match; *destination-prefix* is the IPv4 or IPv6 route prefix to match, *match-type* is the type of match (see *Configuring Route Lists*), and *actions* is the action to take if the *destination-prefix* matches.

**source-address-filter** *source-prefix match-type <actions>*—(Optional) Unicast source addresses in multiprotocol BGP (MBGP) and Multicast Source Discovery Protocol (MSDP) environments on which to perform an immediate match. *source-prefix* is the IPv4 or IPv6 route prefix to match, *match-type* is the type of match (see *Configuring Route Lists*), and *actions* is the action to take if the *source-prefix* matches.

**tag** *value*—(Optional) A numeric value that identifies a route. You can tag certain routes to prioritize them over other routes. In the event of a network topology change, Junos OS updates these routes in the routing table before updating other routes with lower priority. You can also tag some routes to identify and reject them based on your requirement.

**term** *term-name*—Name that identifies the term. The term name must be unique in the policy. It can contain letters, numbers, and hyphens (-) and can be up to 64 characters long. To include spaces in the name, enclose the entire name in quotation marks (" "). A policy statement can include multiple terms. We recommend that you name all terms. However, you do have the option to include an unnamed term which must be the final term in the policy. To configure an unnamed term, omit the **term** statement when defining match conditions and actions.

**to**—(Optional) Match a route based on its destination address or the protocols into which the route is being advertised.

**then**—(Optional) Actions to take on matching routes. The actions are described in *Configuring Flow Control Actions* and *Configuring Actions That Manipulate Route Characteristics*.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- *dynamic-db*
- *Understanding Source Packet Routing in Networking (SPRING)*

---

## pool

---

**Syntax** `pool pool-name <priority priority>;`

**Hierarchy Level** [edit interfaces *br-pim/0/port* [dialer-options](#)],  
[edit interfaces *umd0* [dialer-options](#)],  
[edit interfaces *dlm unit logical-unit-number* [dialer-options](#)],  
[edit logical-systems *logical-system-name* interfaces *dlm unit logical-unit-number* [dialer-options](#)]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** On J Series Services Routers, for logical and physical ISDN interfaces, specify the dial pool. The dial pool allows logical (dialer) and physical (**br-pim/0/port**) interfaces to be bound together dynamically on a per-call basis. On a dialer interface, **pool** directs the dialer interface which dial pool to use. On **br-pim/0/port** interface, **pool** defines the pool to which the interface belongs.

**Options** *pool-name*—Pool identifier.


*priority priority*—(Physical **br-pim/0/port** interfaces only) Specify a priority value of 0 (lowest) to 255 (highest) for the interface within the pool.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Junos OS Interfaces and Routing Configuration Guide*

## pop

<b>Syntax</b>	<code>pop;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches. Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.
<b>Description</b>	<div>  <p><b>NOTE:</b> On EX4300 switches, <b>pop</b> is not supported at the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b>] hierarchy level.</p> </div> <p>For Gigabit Ethernet IQ, 10-Gigabit Ethernet IQ2, and IQ2-E interfaces; 10-Gigabit Ethernet LAN/WAN PIC; aggregated Ethernet interfaces using Gigabit Ethernet IQ interfaces; 100-Gigabit Ethernet Type 5 PIC with CFP; and Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces, specify the VLAN rewrite operation to remove a VLAN tag from the top of the VLAN tag stack. The outer VLAN tag of the frame is removed.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Removing a VLAN Tag</i></li> <li>• <i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support (CLI Procedure)</i></li> </ul>

## pop-all-labels

---

<b>Syntax</b>	<pre>pop-all-labels {     required-depth <i>number</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> atm-options mpls], [edit interfaces <i>interface-name</i> sonet-options mpls], [edit interfaces <i>interface-name</i> fastether-options mpls], [edit interfaces <i>interface-name</i> gigheter-options mpls]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	<p>For passive monitoring on ATM, SONET/SDH, Fast Ethernet, and Gigabit Ethernet interfaces only, removes up to two MPLS labels from incoming IP packets. For passive monitoring on T Series devices, removes up to five MPLS labels from incoming IP packets.</p> <p>This statement has no effect on IP packets with more than two MPLS labels, or IP packets with more than five MPLS labels on T Series devices. Packets with MPLS labels cannot be processed by the Monitoring Services PIC; if packets with MPLS labels are forwarded to the Monitoring Services PIC, they are discarded.</p> <p>The remaining statement is explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Default</b>	If you omit this statement, the MPLS labels are not removed, and the packet is not processed by the Monitoring Services PIC.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Removing MPLS Labels from Incoming Packets</i></li><li>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## pop-pop

<b>Syntax</b>	pop-pop;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">input-vlan-map</a> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">output-vlan-map</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">input-vlan-map</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">output-vlan-map</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	For Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP, and for 10-Gigabit Ethernet SFP interfaces on EX Series switches, specify the VLAN rewrite operation to remove both the outer and inner VLAN tags of the frame.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Removing the Outer and Inner VLAN Tags</i></li> </ul>

## pop-swap

---

<b>Syntax</b>	pop-swap;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	<p>Specify the VLAN rewrite operation to remove the outer VLAN tag of the frame, and replace the inner VLAN tag of the frame with a user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</p> <p>You can use this statement on Gigabit Ethernet IQ, IQ2, IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, on aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Removing the Outer VLAN Tag and Rewriting the Inner VLAN Tag</i></li></ul>

## port

---

<b>Syntax</b>	<pre>port {     minimum <i>port-number</i>;     maximum <i>port-number</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces vsp- <i>fpc/pic/port</i> <b>unit</b> <i>logical-unit-number</i> <b>compression rtp</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For voice services interfaces only, assign User Datagram Protocol (UDP) destination port numbers reserved for Real-Time Transport Protocol (RTP) traffic.
<b>Options</b>	<p><b>minimum <i>port-number</i></b>—Specify minimum port number.  <b>Range:</b> 0 through 65,535</p> <p><b>maximum <i>port-number</i></b>—Specify maximum port number.  <b>Range:</b> 0 through 65,535</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## port-priority

---

<b>Syntax</b>	<code>port-priority <i>priority</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <i>gigether-options</i> <b>802.3ad</b> lacp]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 11.4 for EX Series switches. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
<b>Description</b>	Define LACP port priority at the interface level.
<b>Options</b>	<b><i>priority</i></b> —Priority for being elected to be the active port and both collect and distribute traffic. A smaller value indicates a higher priority for being elected. <b>Range:</b> 0 through 65535 <b>Default:</b> 127
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches</i></li><li>• <i>Configuring Aggregated Ethernet LACP (CLI Procedure)</i></li></ul>

## port-status-tlv

<b>Syntax</b>	<code>port-status-tlv blocked;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet</a> connectivity-fault-management <a href="#">action-profile</a> <i>tlv-action</i> event] [edit protocols oam ethernet connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> <a href="#">continuity-check</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Define an <b>action-profile</b> consisting of various events and the action. Based on values of <b>port-status-tlv</b> in the received CCM packets, specific action such as <i>interface-down</i> can be taken using <a href="#">action-profile</a> options.
<b>Options</b>	<b>blocked</b> —When the incoming CCM packet contains port status TLV with value blocked, the action will be triggered for this action-profile.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring a CFM Action Profile to Specify CFM Actions for CFM Events</i></li> <li>• <i>Configuring Remote MEP Action Profile Support</i></li> </ul>

## post-service-filter

<b>Syntax</b>	<code>post-service-filter <i>filter-name</i>;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet <a href="#">service</a> <i>input</i> ], [edit logical-systems <i>logical-system-name</i> <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet <a href="#">service</a> <i>input</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Define the filter to be applied to traffic after service processing. The filter is applied only if a service set is configured and selected.
<b>Options</b>	<b><i>filter-name</i></b> —Identifier for postservice filter.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## ppp-options

---

**Syntax**    ppp-options {  
              authentication [ *authentication-protocols* ];  
              mru *size*;  
              mtu (*size* | use-lower-layer);  
              chap {  
                  access-profile *name*;  
                  challenge-length minimum *minimum-length* maximum *maximum-length*;  
                  default-chap-secret *name*;  
                  local-name *name*;  
                  passive;  
              }  
              compression {  
                  acfc;  
                  pfc;  
              }  
              dynamic-profile *profile-name*;  
              initiate-ncp (ip | ipv6 | dual-stack-passive)  
              ipcp-suggest-dns-option;  
              lcp-max-conf-req *number*  
              lcp-restart-timer *milliseconds*;  
              loopback-clear-timer *seconds*;  
              ncp-max-conf-req *number*  
              ncp-restart-timer *milliseconds*;  
              on-demand-ip-address  
              pap {  
                  access-profile *name*;  
                  default-pap-password *password*;  
                  local-name *name*;  
                  local-password *password*;  
                  passive;  
              }  
              }  
              }

**Hierarchy Level**    [edit interfaces *interface-name*],  
                         [edit interfaces *interface-name* unit *logical-unit-number*],  
                         [edit logical-systems *logical-system-name* interfaces *interface-name* **unit** *logical-unit-number*]

**Release Information**    Statement introduced before Junos OS Release 7.4.

**Description**    On interfaces with PPP encapsulation, configure PPP-specific interface properties.

For ATM2 IQ interfaces only, you can configure CHAP on the logical interface unit if the logical interface is configured with one of the following PPP over ATM encapsulation types:

- **atm-ppp-llc**—PPP over AAL5 LLC encapsulation.
- **atm-ppp-vc-mux**—PPP over AAL5 multiplex encapsulation.



**BEST PRACTICE:** On inline service (si) interfaces for L2TP, only the **chap** and **pap** statements are typically used for subscriber management. We recommend that you leave the other statements subordinate to **ppp-options**—including those subordinate to **chap** and **pap**—at their default values.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the PPP Challenge Handshake Authentication Protocol on page 136](#)
- [Applying PPP Attributes to L2TP LNS Subscribers per Inline Service Interface](#)

## pppoe-options

---


<b>Syntax</b>	<pre>pppoe-options {     access-concentrator <i>name</i>;     auto-reconnect <i>seconds</i>;     (client   server);     service-name <i>name</i>;     underlying-interface <i>interface-name</i>;     ppp-max-payload <i>ppp-max-payload</i> }</pre>
<b>Hierarchy Level</b>	<pre>[edit interfaces pp0 unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces pp0 unit <i>logical-unit-number</i>] [set interface <i>ppp interface</i> unit <i>logical-unit-number</i> ppp-max-payload <i>ppp-max-payload</i>],</pre>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p><b>client</b> Statement introduced in Junos OS Release 8.5.</p> <p><b>server</b> Statement introduced in Junos OS Release 8.5.</p> <p><b>client</b> Statement introduced in Junos OS Release 15.1X49-D100.</p>
<b>Description</b>	<p>Configure PPP over Ethernet-specific interface properties.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p> <p>The PPP-Max-Payload option allows you to override the default behavior of the PPPoE client by providing a maximum size that the PPP payload can support in both sending and receiving directions. The PPPoE server might allow the negotiation of an MRU larger than 1492 octets and the ability to use an MTU larger than 1500 octets.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a PPPoE Interface</i></li></ul>

## pppoe-underlying-options (Static and Dynamic Subscribers)

<b>Syntax</b>	<pre>pppoe-underlying-options {   access-concentrator <i>name</i>;   dynamic-profile <i>profile-name</i>;   direct-connect   duplicate-protection;   max-sessions <i>number</i>;   max-sessions-vsa-ignore;   service-name-table <i>table-name</i>;   short-cycle-protection &lt;lockout-time-min <i>minimum-seconds</i>&gt; &lt;lockout-time-max     <i>maximum-seconds</i>&gt; &lt;filter [<i>aci</i>]&gt;; }</pre>
<b>Hierarchy Level</b>	<pre>[edit interfaces <i>interface-name</i> <i>unit</i> <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <i>unit</i> <i>logical-unit-number</i>]</pre>
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	<p>Configure PPPoE-specific interface properties for the underlying interface on which the router creates a static or dynamic PPPoE logical interface. The underlying interface must be configured with PPPoE (<b>ppp-over-ether</b>) encapsulation.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring PPPoE</i> (for static interfaces)</li> <li>• <i>Configuring an Underlying Interface for Dynamic PPPoE Subscriber Interfaces</i></li> <li>• <i>Assigning a Service Name Table to a PPPoE Underlying Interface</i></li> </ul>

## preferred


---

<b>Syntax</b>	preferred;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Configure this address to be the preferred address on the interface. If you configure more than one address on the same subnet, the preferred source address is chosen by default as the source address when you initiate frame transfers to destinations on the subnet.
<div> <b>NOTE:</b> The edit logical-systems hierarchy is not available on QFabric systems.</div>	
<b>Default</b>	The lowest-numbered address on the subnet is the preferred address.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Interface Address on page 207</a></li></ul>

## preferred-source-address

<b>Syntax</b>	<code>preferred-source-address address;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>unnumbered-address</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>unnumbered-address</b> <i>interface-name</i>]</p>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0.
<b>Description</b>	<p>For unnumbered Ethernet interfaces configured with a loopback interface as the donor interface, specify one of the loopback interface's secondary addresses as the preferred source address for the unnumbered Ethernet interface. Configuring the preferred source address enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet interfaces in your network.</p> <p>Configuration of a preferred source address for unnumbered Ethernet interfaces is supported for the IPv4 and IPv6 address families.</p>
<b>Options</b>	<b>address</b> —Secondary IP address of the donor loopback interface.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring a Preferred Source Address for Unnumbered Ethernet or Demux Interfaces on page 218</a></li> <li>• <a href="#">address on page 424</a></li> <li>• <i>Junos OS Administration Library</i></li> </ul>

## preferred-source-address

<b>Syntax</b>	<code>preferred-source-address address;</code>
<b>Hierarchy Level</b>	<p>[edit <a href="#">dynamic-profiles interfaces interface-name</a> <a href="#">unit logical-unit-number</a> <a href="#">family family unnumbered-address interface-name</a>],</p> <p>[edit <a href="#">dynamic-profiles profile-name interfaces demux0</a> <a href="#">unit logical-unit-number</a> <a href="#">family family</a>],</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 9.2.</p> <p>Support for the <code>\$junos-preferred-source-address</code> and <code>\$junos-preferred-source-ipv6-address</code> predefined variables introduced in Junos OS Release 9.6.</p>
<b>Description</b>	<p>For unnumbered Ethernet interfaces configured with a loopback interface as the donor interface, specify one of the loopback interface's secondary addresses as the preferred source address for the unnumbered Ethernet interface. Configuring the preferred source address enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet interfaces in your network. To configure the preferred source address dynamically, instead of using this statement, you must include the <code>\$junos-preferred-source-address</code> predefined variable for IPv4 (family inet) addresses or the <code>\$junos-preferred-source-ipv6-address</code> predefined variable for IPv6 (family inet6) addresses.</p> <p>Configuration of a preferred source address for unnumbered Ethernet interfaces is supported for IPv4 and IPv6 address families.</p>
	<div>  <p><b>NOTE:</b> When you specify a static logical interface for the unnumbered interface in a dynamic profile that includes the <code>\$junos-routing-instance</code> predefined variable, you must not configure a preferred source address, whether with the <code>\$junos-preferred-source-address</code> predefined variable, the <code>\$junos-preferred-source-ipv6-address</code> predefined variable, or the <code>preferred-source-address</code> statement. Configuring the preferred source address in this circumstance causes a commit failure.</p> </div>
<b>Options</b>	<p><b>address</b>—Secondary IP address of the donor loopback interface. Alternatively, use the <code>\$junos-preferred-source-address</code> or the <code>\$junos-preferred-source-ipv6-address</code> predefined variable to dynamically apply a preferred source address to the unnumbered Ethernet interface.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an Unnumbered Interface on page 218</a></li> <li>• <a href="#">Junos OS Network Interfaces Library for Routing Devices</a></li> </ul>

- *Junos OS Administration Library*

## premium (Hierarchical Policer)

<b>Syntax</b>	<pre> premium {   if-exceeding {     bandwidth-limit <i>bandwidth</i>;     burst-size-limit <i>burst</i>;   }   then {     discard;   } } </pre>
<b>Hierarchy Level</b>	<p>[edit <a href="#">dynamic-profiles</a> <i>profile-name</i> firewall hierarchical-policer],  [edit firewall hierarchical-policer]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 9.5.  Support at the [edit <a href="#">dynamic-profiles ... hierarchical-policer</a> <i>name</i>] hierarchy level introduced in Junos OS Release 11.4.</p>
<b>Description</b>	<p>On M40e, M120, and M320 edge routers with FPC input as FFPC and FPC output as SFPC, and on MX Series, T320, T640, and T1600 edge routers with Enhanced Intelligent Queuing (IQE) PICs, T4000 routers with Type 5 FPC and Enhanced Scaling Type 4 FPC, specify a premium level for a hierarchical policer.</p>
<b>Options</b>	<p>Options are described separately.</p>
<b>Required Privilege Level</b>	<p>firewall—To view this statement in the configuration.  firewall-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Applying Policers on page 226</a></li> <li>• <i>Guidelines for Applying Traffic Policers</i></li> <li>• <i>Hierarchical Policer Configuration Overview</i></li> <li>• <i>Hierarchical Policers</i></li> <li>• <i>aggregate (Hierarchical Policer)</i></li> <li>• <a href="#">bandwidth-limit (Hierarchical Policer) on page 456</a></li> <li>• <a href="#">burst-size-limit (Hierarchical Policer) on page 469</a></li> <li>• <i>hierarchical-policer</i></li> <li>• <a href="#">if-exceeding (Hierarchical Policer) on page 653</a></li> </ul>

## premium (Output Priority Map)

---

Syntax	<pre>premium {     forwarding-class <i>class-name</i> {         loss-priority (high   low);     } }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> output-priority-map classifier]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	For Gigabit Ethernet IQ interfaces only, define the classifier for egress premium traffic.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Specifying an Output Priority Map</a></li><li>• <a href="#">input-priority-map on page 677</a></li></ul>

## premium (Policer)

---

Syntax	<pre>premium {     bandwidth-limit <i>bps</i>;     burst-size-limit <i>bytes</i>; }</pre>
Hierarchy Level	[edit interfaces <i>interface-name</i> gigether-options <a href="#">ethernet-switch-profile</a> <a href="#">ethernet-policer-profile</a> <a href="#">policer</a> <i>cos-policer-name</i> ]
Release Information	Statement introduced before Junos OS Release 7.4.
Description	Define a policer to apply to nonpremium traffic.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Configuring Gigabit Ethernet Policers</a></li><li>• <a href="#">aggregate (Gigabit Ethernet CoS Policer) on page 429</a></li><li>• <a href="#">ieee802.1p on page 652</a></li></ul>


## preserve-interface

---

<b>Syntax</b>	preserve-interface;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.6.
<b>Description</b>	<p>Provide link PIC replication, providing MLPPP link redundancy at the port level. This feature is supported with SONET APS and the following link PICs:</p> <ul style="list-style-type: none"> <li>• Channelized OC3 IQ PIC</li> <li>• Channelized OC12 IQ PIC</li> <li>• Channelized STM1 IQ PIC</li> </ul> <p>Link PIC replication provides the ability to add two sets of links, one from the active SONET PIC and the other from the standby SONET PIC, to the same bundle. If the active SONET PIC fails, links from the standby PIC are used without triggering link renegotiation. All the negotiated state is replicated from the active links to the standby links to prevent link renegotiation.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Link PIC Redundancy</i></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## primary (Address on Interface)

---

<b>Syntax</b>	primary;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Configure this address to be the primary address of the protocol on the interface. If the logical unit has more than one address, the primary address is used by default as the source address when packet transfer originates from the interface and the destination address does not indicate the subnet.
<div> <b>NOTE:</b> The edit logical-systems hierarchy is not available on QFabric systems.</div>	
<b>Default</b>	For unicast traffic, the primary address is the lowest non-127 (in other words, non-loopback) preferred address on the unit.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Interface Address on page 207</a></li></ul>

## primary (Interface for Router)

<b>Syntax</b>	primary;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure the primary interface for a device. By default, the multicast-capable interface with the lowest-index address is chosen as the primary interface. If there is no such interface, the point-to-point interface with the lowest-index address is chosen. Otherwise, any interface with an address can be picked. In practice, this means that, on the device, the <b>fxp0</b> or <b>em0</b> interface is picked by default. To configure a different interface to be the primary interface, you include this statement.</p> <p>The <i>primary interface</i> for the router has the following characteristics:</p> <ul style="list-style-type: none"> <li>• It is the interface through which the packets go out when you type a command such as ping 255.255.255.255—that is, a command that does not include an interface name (there is no interface <b>type-0/0/0.0</b> qualifier) and where the destination address does not imply any particular outgoing interface.</li> <li>• It is the interface on which multicast applications running locally on the router, such as Session Announcement Protocol (SAP), perform group joins by default.</li> <li>• It is the interface from which the default local address is derived for packets sourced out of an unnumbered interface if there are no non-127 addresses configured on the loopback interface, lo0.</li> </ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Default, Primary, and Preferred Addresses and Interfaces on page 209</a></li> </ul>

## primary (AS PIC or Multiservices PIC Interfaces)

---

<b>Syntax</b>	<code>primary interface-name;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> (rsp0   rsp1) <a href="#">redundancy-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the primary AS PIC or MultiServices PIC interface.
<b>Options</b>	<i>interface-name</i> —The identifier for the AS PIC interface or MultiServices PIC interface, which must be of the form <b>sp-fpc/pic/port</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## priority (OAM Connectivity-Fault Management)

---

<b>Syntax</b>	<code>priority number;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management maintenance-domain md-name maintenance-association ma-name mep mep-id</a> ]  For EX Series Switches:  [edit protocols oam <a href="#">ethernet</a> connectivity-fault-management maintenance-domain <i>domain-name</i> maintenance-association <i>ma-name</i> mep <i>mep-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	IEEE 802.1p priority bits used by the continuity check messages.
<b>Options</b>	<i>number</i> —Configure the IEEE 802.1p priority bits to be used in the VLAN header of the CFM packets. <b>Range:</b> 0 through 7
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i></li></ul>

---

## priority (Schedulers)

---

<b>Syntax</b>	<code>priority (high   low);</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, assign queuing priority to a forwarding class.
<b>Options</b>	<b>low</b> —Forwarding class has low priority. <b>high</b> —Forwarding class has high priority.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li></ul>

## promiscuous-mode

---

**Syntax**    promiscuous-mode {  
                  vpi vpi-identifier;  
                  }

**Hierarchy Level**    [edit interfaces *interface-name* atm-options]

**Release Information**    Statement introduced before Junos OS Release 7.4.  
                              Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

**Description**    For ATM interfaces with **atm-ccc-cell-relay** encapsulation, map all incoming cells from either an interface port or a VP to a single label-switched path (LSP) without restricting the VCI number. Promiscuous mode allows you to map traffic from all 65,535 VCIs to a single LSP, or from all 256 VPIs to a single LSP.



**NOTE:** In ACX Series routers, the statement supports only Inverse Multiplexing for ATM (IMA).

---

**Options**    vpi-identifier—Open this VPI in promiscuous mode.  
                  **Range:** 0 through 255

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**    • *Configuring ATM Cell-Relay Promiscuous Mode*  
                                  • [vpi \(ATM CCC Cell-Relay Promiscuous Mode\) on page 1099](#)

## protect-circuit

---

<b>Syntax</b>	<code>protect-circuit <i>group-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the protect router in an APS circuit pair. When the working interface fails, APS brings up the protection circuit and the traffic is moved to the protection circuit.
<b>Options</b>	<i>group-name</i> —Circuit's group name.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Basic Automatic Protect Switching</i></li><li>• <a href="#">working-circuit on page 1110</a></li></ul>

## protection-group

```
Syntax  protection-group {
        ethernet-ring ring-name {
            data-channel {
                vlan number
            }
            east-interface {
                control-channel channel-name {
                    vlan number;
                    interface name interface-name
                }
            }
            guard-interval number;
            node-id mac-address;
            restore-interval number;
            ring-protection-link-owner;
            non-revertive;
            wait-to-block-interval number;
            major-ring-name name;
            propagate-tc;
            compatibility-version (1|2);
            ring-id number;
            non-vc-mode;
            dot1p-priority number;
            west-interface {
                control-channel channel-name {
                    vlan number;
                    interface name interface-name
                }
                virtual-control-channel {
                    west-interface name;
                    east-interface name;
                }
            }
        }
    }
    control-vlan (vlan-id | vlan-name);
    east-interface {
        node-id mac-address;
        control-channel channel-name {
            vlan number;
            interface name interface-name
        }
        interface-none
        ring-protection-link-end;
    }
}
control-channel channel-name {
    vlan number;
    interface name interface-name
}
}
data-channel {
    vlan number
```

```

}
guard-interval number;
node-id mac-address;
restore-interval number;
ring-protection-link-owner;
west-interface {
    node-id mac-address;
    control-channel channel-name {
        vlan number;
        interface name interface-name
    }
    interface-none
    ring-protection-link-end;
}
control-channel channel-name {
    vlan number;
    interface name interface-name
}
}
}
guard-interval number;
restore-interval number;
traceoptions {
    file filename <no-stamp> <world-readable | no-world-readable> <replace> <size size>;
    flag flag;
}
}

```

<b>Hierarchy Level</b>	[edit protocols]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches.
<b>Description</b>	Configure Ethernet ring protection switching.  The statements are explained separately. All statements apply to MX Series routers. EX Series switches do not assign <b>node-id</b> and use <b>control-vlan</b> instead of <b>control-channel</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Ring Protection Switching Overview</i></li> <li>• <i>Ethernet Ring Protection Using Ring Instances for Load Balancing</i></li> <li>• <i>Example: Configuring Load Balancing Within Ethernet Ring Protection for MX Series Routers</i></li> <li>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li> </ul>


## protocol-down

---

<b>Syntax</b>	protocol-down;
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile event</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Upper layer indication of protocol down event. When the <b>protocol-down</b> statement is included, the protocol down event triggers the action specified under the <b>action</b> statement.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring an OAM Action Profile</a></li></ul>

## protocols

---

<b>Syntax</b>	protocols [inet iso mpls];
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">unit</a> logical-unit-number <a href="#">family tcc</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	For Layer 2.5 VPNs on T Series, MX Series, M120, and M320 routers support, configure IS-IS (ISO traffic) or MPLS traffic to traverse a TCC interface. By default, IPv4 (inet) traffic runs on T Series, MX, Series, M120, and M320 routers and over TCC interfaces. You must configure the same traffic type on both ends of the Layer 2.5 VPN.  <div> <b>NOTE:</b> Some platform and FPC combinations can not pass TCC encapsulated ISO traffic. See <i>Platforms/FPCs That Cannot Forward TCC Encapsulated ISO Traffic</i> for details.</div>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring IS-IS or MPLS Traffic for TCC Interfaces on page 281</a></li><li>• <a href="#">Platforms/FPCs That Cannot Forward TCC Encapsulated ISO Traffic</a></li></ul>


## proxy

---


<b>Syntax</b>	<code>proxy inet-address <i>address</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> tcc], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> tcc]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For Layer 2.5 VPNs using an Ethernet interface as the TCC router, configure the IP address for which the TCC router is proxying. Ethernet TCC is supported on interfaces that carry IPv4 traffic only. Ethernet TCC encapsulation is supported on 1-port Gigabit Ethernet, 2-port Gigabit Ethernet, 4-port Gigabit Ethernet, and 4-port Fast Ethernet PICs only. Ethernet TCC is not supported on the T640 router.
<b>Options</b>	<b>inet-address</b> —Configure the IP address of the neighbor to the TCC router.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Translation Cross-Connect Interface Switching</i></li> <li>• <i>Example: Configuring an Ethernet TCC or Extended VLAN TCC</i></li> <li>• <a href="#">remote on page 927</a></li> <li>• <i>Junos OS VPNs Library for Routing Devices</i></li> </ul>

## proxy-arp

---

<b>Syntax</b>	proxy-arp (restricted   unrestricted);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.6 for EX Series switches. <b>restricted</b> added in Junos OS Release 10.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for the QFX Series.
<b>Description</b>	For Ethernet interfaces only, configure the router or switch to respond to any ARP request, as long as the router or switch has an active route to the ARP request's target address.
<div> <b>NOTE:</b> You must configure the IP address and the inet family for the interface when you enable proxy ARP.</div>	
<b>Default</b>	Proxy ARP is not enabled. The router or switch responds to an ARP request only if the destination IP address is its own.
<b>Options</b>	<ul style="list-style-type: none"><li>• <b>none</b>—The router or switch responds to any ARP request for a local or remote address if the router or switch has a route to the target IP address.</li><li>• <b>restricted</b>—(Optional) The router or switch responds to ARP requests in which the physical networks of the source and target are different and does not respond if the source and target IP addresses are in the same subnet. The router or switch must also have a route to the target IP address.</li><li>• <b>unrestricted</b>—(Optional) The router or switch responds to any ARP request for a local or remote address if the router or switch has a route to the target IP address.</li></ul> <p><b>Default:</b> <b>unrestricted</b></p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Restricted and Unrestricted Proxy ARP</i></li><li>• <i>Configuring Proxy ARP on Switches (CLI Procedure)</i></li><li>• <i>Example: Configuring Proxy ARP on an EX Series Switch</i></li><li>• <i>Configuring Gratuitous ARP</i></li></ul>

## push

<b>Syntax</b>	<code>push;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code><b>input-vlan-map</b>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code><b>output-vlan-map</b>]</code>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.</p>
<b>Description</b>	<p> <b>NOTE:</b> On EX4300 switches, <b>push</b> is not supported at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b>]</code> hierarchy level.</p> <p>Specify the VLAN rewrite operation to add a new VLAN tag to the top of the VLAN stack. An outer VLAN tag is pushed in front of the existing VLAN tag.</p> <p>You can use this statement on Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces; 10-Gigabit Ethernet LAN/WAN PIC; aggregated Ethernet interfaces using Gigabit Ethernet IQ interfaces; 100-Gigabit Ethernet Type 5 PIC with CFP; and Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces.</p> <p>If you include the <b>push</b> statement in the configuration, you must also include the <b>pop</b> statement at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b>]</code> hierarchy level.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Stacking a VLAN Tag</i></li> <li><i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support (CLI Procedure)</i></li> </ul>

## push-push

---

<b>Syntax</b>	<code>push-push;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">input-vlan-map</a>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">output-vlan-map</a>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code><a href="#">input-vlan-map</a>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code><a href="#">output-vlan-map</a>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	<p>Specify the VLAN rewrite operation to push two VLAN tags in front of the frame.</p> <p>You can use this statement on Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, on aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Stacking Two VLAN Tags</i></li></ul>

## queue-depth

<b>Syntax</b>	<code>queue-depth <i>cells</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>atm-options</b> <b>linear-red-profiles</b> <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define maximum queue depth in the CoS VC drop profile. Packets are always dropped beyond the defined maximum. This statement is mandatory; there is no default configuration.
<b>Default</b>	Buffer usage is unregulated.
<b>Options</b>	<b>cells</b> —Maximum number of cells the queue can contain. <b>Range:</b> 1 through 64,000 cells
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li> <li>• <i>Configuring Linear RED Profiles on ATM Interfaces</i></li> <li>• <a href="#">high-plp-threshold on page 636</a></li> <li>• <a href="#">low-plp-threshold on page 760</a></li> </ul>

## queue-length

---

<b>Syntax</b>	<code>queue-length <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	For ATM1 interfaces only, define the maximum queue length in the traffic-shaping profile. For ATM1 PICs, each VC has its own independent shaping parameters.
<b>Default</b>	Buffer usage is unregulated.
<b>Options</b>	<b><i>number</i></b> —Maximum number of packets the queue can contain. <b>Range:</b> 1 through 16,383 packets <b>Default:</b> 16,383 packets
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the ATM1 Queue Length</i></li></ul>

## queues

<b>Syntax</b>	<code>queues [ <i>queue-numbers</i> ];</code>
<b>Hierarchy Level</b>	[edit interfaces vsp- <i>fpc/pic/port</i> <b>unit</b> <i>logical-unit-number</i> <b>compression</b> <i>rtp</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For voice services interfaces only, assign queue numbers for RTP traffic.
<b>Options</b>	<b>queues</b> <i>queue-numbers</i> —Assign one or more of the following queues: <b>q0</b> , <b>q1</b> , <b>q2</b> , <b>q3</b> . For VRRP services, specify the <b>q3</b> option instead of <b>q0</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## quiet-period

<b>Syntax</b>	<code>quiet-period <i>seconds</i>;</code>
<b>Hierarchy Level</b>	[edit protocols dot1x authenticator interface <i>interface-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Specify the number of seconds the port remains in the wait state following a failed authentication exchange with the client, before reattempting authentication.
<b>Options</b>	<b>seconds</b> —Specify the number of seconds the port remains in the wait state following a failed authentication exchange with the client, before reattempting authentication. <b>Range:</b> 0 through 65,535 seconds <b>Default:</b> 60 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li> <li>• <a href="#">authenticator on page 448</a></li> <li>• <a href="#">dot1x on page 543</a></li> <li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li> </ul>

## radius-realm

---

<b>Syntax</b>	<code>radius-realm <i>radius-realm-string</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication username-include</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication username-include</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify that the user-defined RADIUS realm string is appended as a last piece to the username and used by RADIUS to direct the authentication request to a profile that does not allocates addresses.
<b>Options</b>	<i>radius-realm-string</i> —A string to describe the RADIUS realm.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring VLAN Interface Username Information for AAA Authentication</a></li></ul>

## ranges (Dynamic Stacked VLAN)

---

<b>Syntax</b>	<code>ranges (any   <i>low-tag-high-tag</i>), (any   <i>low-tag-high-tag</i>);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure stacked-vlan-ranges <a href="#">dynamic-profile profile-name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	Configure VLAN ranges for dynamic, auto-sensed stacked VLANs.
<b>Options</b>	<i>any</i> —The entire VLAN range.  <i>low-tag</i> —The lower limit of the VLAN range.  <i>high-tag</i> —The upper limit of the VLAN range. <b>Range:</b> 1 through 4094
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs</a></li></ul>

## ranges (Dynamic VLAN)

<b>Syntax</b>	<code>ranges (any   <i>low-tag</i>)-(any   <i>high-tag</i>);</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure vlan-ranges <a href="#">dynamic-profile profile-name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	Configure VLAN ranges for dynamic, auto-sensed VLANs.
<b>Options</b>	<p><b>any</b>—The entire VLAN range.</p> <p><b><i>low-tag</i></b>—The lower limit of the VLAN range.</p> <p><b><i>high-tag</i></b>—The upper limit of the VLAN range.</p> <p><b>Range:</b> 1 through 4094</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs</a></li> </ul>

## rate

<b>Syntax</b>	<code>rate <i>percentage</i>;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <a href="#">receive-bucket</a>],</p> <p>[edit interfaces <i>interface-name</i> <a href="#">transmit-bucket</a>]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify percentage of the interface line rate that is available to receive or transmit packets.
<b>Options</b>	<p><b><i>percentage</i></b>—Percentage of the interface line rate that is available to receive or transmit packets.</p> <p><b>Range:</b> 0 through 100</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 156</a></li> </ul>

## rate

---

<b>Syntax</b>	<code>rate new-sessions-per-second;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> services-options session-limit]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Specify the maximum number of new sessions allowed per second.
<b>Options</b>	<b>rate new-sessions-per-second</b> —Specify the maximum number of new sessions allowed per second. <b>Range:</b> 0, which indicates no limit, and 500 or greater.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## rdi

---

<b>Syntax</b>	<code>rdi;</code>
<b>Hierarchy Level</b>	[edit protocols <b>oam ethernet</b> connectivity-fault-management <b>action-profile tlv-action</b> event]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.1.
<b>Description</b>	Define a new event <b>rdi</b> . The remote defect indication (rdi) event is triggered whenever CCM packets are received from a remote location with the rdi bit set.  This event is cleared and action is reverted when none of the remote MEPs send the CCM packets with the RDI bit.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a CFM Action Profile to Specify CFM Actions for CFM Events</i></li></ul>

## reassemble-packets

<b>Syntax</b>	reassemble-packets;
<b>Hierarchy Level</b>	[edit interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>gr-fpc/pic/port</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2.
<b>Description</b>	Enable reassembly of fragmented tunnel packets on generic routing encapsulation (GRE) tunnel interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> <li>• <i>Configuring Packet Reassembly</i></li> </ul>

## reauthentication

<b>Syntax</b>	reauthentication (disable   interval <i>seconds</i> );
<b>Hierarchy Level</b>	[edit protocols dot1x authenticator interface <i>interface-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Set or disable the periodic reauthentication of the client.
<b>Options</b>	<ul style="list-style-type: none"> <li>• <b>disable</b>—Disable the periodic reauthentication of the client.</li> <li>• <b>interval <i>seconds</i></b>—Specify the periodic reauthentication time interval.</li> </ul> <p><b>Range:</b> 1 through 65,535 seconds  <b>Default:</b> 3600 seconds</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li> <li>• <a href="#">dot1x on page 543</a></li> <li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li> <li>• <a href="#">quiet-period on page 917</a></li> </ul>

## receive-bucket

---

<b>Syntax</b>	<pre>receive-bucket {     <b>overflow</b> (discard   tag);     <b>rate</b> <i>percentage</i>;     <b>threshold</b> <i>bytes</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Set parameters for the receive leaky bucket, which specifies what percentage of the interface's total capacity can be used to receive packets.</p> <p>For each DS3 channel on a channelized OC12 interface, you can configure a unique receive bucket.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 156</a></li><li>• <a href="#">transmit-bucket on page 1043</a></li></ul>

## receive-options-packets

<b>Syntax</b>	receive-options-packets;
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For a Monitoring Services PIC and an ATM or SONET/SDH PIC installed in an M160, M40e, or T Series router, guarantee conformity with cflowd records structure. This statement is required when you enable passive monitoring.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Enabling Passive Monitoring on ATM Interfaces</i></li> <li>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i></li> </ul>

## receive-ttl-exceeded

<b>Syntax</b>	receive-ttl-exceeded;
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For Monitoring Services PIC and an ATM or SONET/SDH PIC installed in an M160, M40e, or T Series router, guarantee conformity with cflowd records structure. This statement is required when you enable passive monitoring.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Enabling Passive Monitoring on ATM Interfaces</i></li> <li>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i></li> </ul>

## red-differential-delay

---

<b>Syntax</b>	<code>red-differential-delay <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voice services interfaces only, configure the red differential delay among bundle links to give warning when a link has a differential delay that exceeds the configured threshold.
<b>Options</b>	<b><i>milliseconds</i></b> —Red differential delay threshold. <b>Range:</b> 1 through 2000 milliseconds <b>Default:</b> 10 milliseconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">action-red-differential-delay on page 421</a></li><li>• <a href="#">yellow-differential-delay on page 1110</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## redial-delay

<b>Syntax</b>	<code>redial-delay <i>time</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>dl</i> n unit <i>logical-unit-number</i> <b>dialer-options</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>dl</i> n unit <i>logical-unit-number</i> <b>dialer-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.5.
<b>Description</b>	<p>On J Series Services Routers with interfaces configured for ISDN with dialout, specify the delay (in seconds) between two successive calls made by the dialer. To configure callback mode, include the <b>callback</b> statement at the [edit interfaces <i>dl</i>n unit <i>logical-unit-number</i> <b>dialer-options</b>] hierarchy level.</p> <p>If the <b>callback</b> statement is configured, you cannot use the <b>caller <i>caller-id</i></b> statement at the [edit interfaces <i>dl</i>n unit <i>logical-unit-number</i> <b>dialer-options</b>] hierarchy level.</p>
<b>Options</b>	<p><b>time</b>—Delay (in seconds) between two successive calls.</p> <p><b>Range:</b> 2 through 255 seconds</p> <p><b>Default:</b> 3 seconds</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ISDN Interfaces Overview</i></li> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## redundancy-options

---

<b>Syntax</b>	<pre>redundancy-options {     primary <i>interface-name</i>;     secondary <i>interface-name</i>;     hot-standby; }</pre>
<b>Hierarchy Level</b>	<pre>[edit <a href="#">interfaces</a> (rsp0   rsp1)], [edit interfaces <i>rlsqnumber</i>] [edit interfaces <i>rspnumber</i>] [edit interfaces <i>rmsnumber</i>]</pre>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the primary and secondary (backup) AS PIC interfaces or MultiServices PIC interfaces.
<b>Options</b>	<p><b>primary <i>interface-name</i></b>—The identifier for the primary LSQ AS, rsp, or rms interface.</p> <p><b>secondary <i>interface-name</i></b>—The identifier for the secondary (backup) LSQ AS, rsp, or rmsinterface.</p> <p><b>hot-standby</b>—For one-to-one AS, rsp, or rms redundancy configurations, specify that the failure detection and recovery must take place in less than 5 seconds.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## remote

---

<b>Syntax</b>	remote { (inet-address <i>address</i>   mac-address <i>address</i> ); }
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> tcc], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> tcc]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For Layer 2.5 VPNs using an Ethernet interface as the TCC router, configure the location of the remote router. Ethernet TCC is supported on interfaces that carry IPv4 traffic only. Ethernet TCC encapsulation is supported on 1-port Gigabit Ethernet, 2-port Gigabit Ethernet, 4-port Gigabit Ethernet, and 4-port Fast Ethernet PICs only.
<b>Options</b>	<b>mac-address</b> —Configure the MAC address of the remote site.  <b>inet-address</b> —Configure the IP address of the remote site.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Translation Cross-Connect Interface Switching</i></li> <li>• <i>Example: Configuring an Ethernet TCC or Extended VLAN TCC</i></li> <li>• <a href="#">proxy on page 911</a></li> <li>• <i>Junos OS VPNs Library for Routing Devices</i></li> </ul>

## remote-loopback

---

<b>Syntax</b>	remote-loopback;
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam link-fault-management interface</a> <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	For Ethernet interfaces on EX Series switches and M320, M120, MX Series, and T Series routers, set the remote DTE into loopback mode. Remove the statement from the configuration to take the remote DTE out of loopback mode. Used for IEEE 802.3ah Operation, Administration, and Management (OAM) support.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Setting a Remote Interface into Loopback Mode</i></li></ul>

## remote-loopback-respond

<b>Syntax</b>	remote-loopback-respond;
<b>Hierarchy Level</b>	[edit interfaces ct1- <i>fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> t1- <i>options</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	For T1 interfaces only, configure the router to respond to remote loopback requests. Remote loopback requests can be from the facilities data link or inband.



**NOTE:** When configuring CT1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the remote-loopback-respond statement must be included at the [edit interfaces ct1-*fpc/pic/port*] hierarchy level.

<b>Default</b>	The router does not respond to remote loop requests.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring the T1 Remote Loopback Response</i></li> <li>• <a href="#">feac-loop-respond</a> on page 614</li> <li>• <a href="#">loopback (ADSL, DS0, E1/E3, SONET/SDH, SHDSL, and T1/T3)</a> on page 752</li> </ul>

## remote-mep

---

<b>Syntax</b>	<pre>remote-mep mep-id {   action-profile profile-name;   sla-iterator-profile profile-name {     data-tlv-size size;     iteration-count count-value;     priority priority-value;   }   detect-loc; }</pre>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet connectivity-fault-management maintenance-domain md-name maintenance-association ma-name mep mep-id</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Configure the numeric identifier of the remote maintenance association end point (MEP) within the maintenance association.
<b>Options</b>	<p><b>mep-id</b>—Numeric identifier of the MEP.</p> <p><b>Range:</b> 1 through 8191</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	Configure—To enter configuration mode. Control—To modify any configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring a MEP to Generate and Respond to CFM Protocol Messages</i></li><li>• <i>detect-loc</i></li></ul>

## remove-when-no-subscribers

---

<b>Syntax</b>	remove-when-no-subscribers;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">auto-configure</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.4.
<b>Description</b>	Remove subscriber VLANs automatically when no client sessions (for example, DHCP or PPPoE) exist on the VLAN.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Automatically Removing VLANs with No Subscribers</i></li> </ul>

## request

---

<b>Syntax</b>	request (protect   working);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Perform a manual switch between the protect and working circuits. This statement is honored only if there are no higher-priority reasons to switch.
<b>Options</b>	<p><b>protect</b>—Request that the circuit become the protect circuit.</p> <p><b>working</b>—Request that the circuit become the working circuit.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Switching Between the Working and Protect Circuits</i></li> <li>• <a href="#">force on page 621</a></li> </ul>

## required-depth

---

Syntax	<code>required-depth <i>number</i>;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> <a href="#">atm-options mpls pop-all-labels</a> ], [edit interfaces <i>interface-name</i> <a href="#">sonet-options mpls pop-all-labels</a> ], [edit interfaces <i>interface-name</i> <a href="#">fastether-options mpls pop-all-labels</a> ], [edit interfaces <i>interface-name</i> <a href="#">gigether-options mpls pop-all-labels</a> ]
Release Information	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
Description	<p>For passive monitoring on ATM and SONET/SDH interfaces only, specify the number of MPLS labels an incoming packet must have for the <b>pop-all-labels</b> statement to take effect.</p> <p>If you include the <b>required-depth 1</b> statement, the <b>pop-all-labels</b> statement takes effect for incoming packets with one label only. If you include the <b>required-depth 2</b> statement, the <b>pop-all-labels</b> statement takes effect for incoming packets with two labels only.</p>
Options	<p><b>number</b>—Number of MPLS labels on incoming IP packets.</p> <p><b>Range:</b> 1 or 2 labels</p> <p><b>Default:</b> If you omit this statement, the <b>pop-all-labels</b> statement takes effect for incoming packets with one or two labels. The default is equivalent to including the <b>required-depth [ 1 2 ]</b> statement.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Removing MPLS Labels from Incoming Packets</i></li><li>• <i>Enabling Packet Flow Monitoring on SONET/SDH Interfaces</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## restore-interval

---

<b>Syntax</b>	<code>restore-interval <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit protocols <b>protection-group ethernet-ring</b> <i>ring-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.
<b>Description</b>	Configures the number of minutes that the node does not process any Ethernet ring protection (ERP) protocol data units (PDUs).. This configuration is a global configuration and applies to all Ethernet rings if the Ethernet ring does not have a more specific configuration for this value. If no parameter is configured at the protection group level, the global configuration of this parameter uses the default value.
<b>Options</b>	<i>number</i> —Specify the restore interval. <b>Range:</b> 1 through 12 minutes
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Ring Protection Switching Overview</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li> <li>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i></li> </ul>

## retries

---

<b>Syntax</b>	<code>retries <i>integer</i>;</code>
<b>Hierarchy Level</b>	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Set a limit on the number of failed authentication attempts between a port and a client. When the limit is exceeded, the port waits to reattempt authentication for the number of seconds set by the <b>quiet-period</b> statement configured at the same hierarchy level.
<b>Options</b>	<b><i>integer</i></b> —Specify the number of retries. <b>Range:</b> 1 through 10 <b>Default:</b> 3 retries
<b>Required Privilege Level</b>	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">IEEE 802.1x Port-Based Network Access Control Overview</a></li><li>• <a href="#">dot1x on page 543</a></li><li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li><li>• <a href="#">quiet-period on page 917</a></li></ul>

---


## revert-time (Interfaces)

---

<b>Syntax</b>	<code>revert-time <i>seconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <b>aps</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure APS revertive mode.
<b>Default</b>	APS operates in nonrevertive mode.
<b>Options</b>	<b><i>seconds</i></b> —Amount of time to wait after the working circuit has again become functional before making the working circuit active again. <b>Range:</b> 1 through 65,535 seconds <b>Default:</b> None (APS operates in nonrevertive mode)
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Revertive Mode</i></li></ul>

## revertive

---

<b>Syntax</b>	revertive;
<b>Hierarchy Level</b>	[edit interfaces aeX aggregated-ether-options lacp link-protection]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 12.3 for EX Series switches. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
<b>Description</b>	Enable the ability to switch to a better priority link (if one is available).
	<div><b>NOTE:</b> By default, LACP link protection is revertive. However, you can use this statement to define a specific aggregated Ethernet interface as revertive to override a global non-revertive statement specified at the [edit chassis] hierarchy level.</div>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li><i>non-revertive (Chassis)</i></li><li><i>Configuring LACP Link Protection of Aggregated Ethernet Interfaces for Switches</i></li></ul>

## rfc-2615

---

<b>Syntax</b>	rfc-2615;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Include this statement to enable features described in RFC 2615, <i>PPP over SONET/SDH</i> .
<b>Default</b>	Settings required by RFC 1619, <i>PPP over SONET/SDH</i> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li><i>Configuring PPP Support on SONET/SDH Interfaces</i></li></ul>

## ring-protection-link-end

<b>Syntax</b>	ring-protection-link-end;
<b>Hierarchy Level</b>	[edit protocols <b>protection-group ethernet-ring</b> <i>ring-name</i> ( <b>east-interface</b>   <b>west-interface</b> )]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches.
<b>Description</b>	Specify that the port is one side of a ring protection link (RPL) by setting the RPL end flag.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Ring Protection Switching Overview</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li> <li>• <i>Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)</i></li> </ul>

## ring-protection-link-owner

<b>Syntax</b>	ring-protection-link-owner;
<b>Hierarchy Level</b>	[edit protocols <b>protection-group ethernet-ring</b> <i>ring-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.
<b>Description</b>	Specify the ring protection link (RPL) owner flag in the Ethernet protection ring. Include this statement only once for each ring (only one node can function as the RPL owner).
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Ethernet Ring Protection Switching Overview</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on EX Series Switches</i></li> <li>• <i>Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS</i></li> </ul>

## routing-instance

---

<b>Syntax</b>	<pre>routing-instance {     destination <i>routing-instance-name</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> tunnel]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	To configure <b>interfaces</b> and <b>logical-systems</b> , specify the destination routing instance that points to the routing table containing the tunnel destination address.
<b>Default</b>	The default Internet routing table is <b>inet.0</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## routing-instance (PPPoE Service Name Tables)

<b>Syntax</b>	<code>routing-instance <i>routing-instance-name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit protocols pppoe service-name-tables <i>table-name</i> <b>service</b> <i>service-name</i>],</code> <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> <b>agent-specifier</b></code> <code>aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	<p>Use in conjunction with the <b>dynamic-profile</b> statement at the same hierarchy levels to specify the routing instance in which to instantiate a dynamic PPPoE interface. You can associate a routing instance with a named service entry, <b>empty</b> service entry, or <b>any</b> service entry configured in a PPPoE service name table, or with an agent circuit identifier/agent remote identifier (ACI/ARI) pair defined for these services.</p> <p>The routing instance associated with a service entry in a PPPoE service name table overrides the routing instance associated with the PPPoE underlying interface on which the dynamic PPPoE interface is created.</p> <p>If you include the <b>routing-instance</b> statement at the <code>[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> agent-specifier aci <i>circuit-id-string</i> ari <i>remote-id-string</i>]</code> hierarchy level, you cannot also include the <b>static-interface</b> statement at this level. The <b>routing-instance</b> and <b>static-interface</b> statements are mutually exclusive for ACI/ARI pair configurations.</p>
<b>Options</b>	<b><i>routing-instance-name</i></b> —Name of the routing instance in which the router instantiates the dynamic PPPoE interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring PPPoE Service Name Tables</i></li> <li>• <i>Assigning a Dynamic Profile and Routing Instance to a Service Name or ACI/ARI Pair for Dynamic PPPoE Interface Creation</i></li> </ul>

## rpf-check (Dynamic Profiles)

---

<b>Syntax</b>	<pre>rpf-check {     fail-filter <i>filter-name</i>;     mode loose; }</pre>
<b>Hierarchy Level</b>	[edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> <i>family</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	<p>Check whether traffic is arriving on an expected path. You can include this statement with the <b>inet</b> protocol family only.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	interface— To view this statement in the configuration. interface-control— To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Unicast RPF Strict Mode on page 244</a></li><li>• <a href="#">Configuring Unicast RPF and Fail Filters in Dynamic Profiles for Subscriber Interfaces</a></li></ul>

## rpf-check

<b>List of Syntax</b>	<a href="#">Syntax (MX Series, SRX Series, M Series, T Series, PTX Series) on page 941</a> <a href="#">Syntax (EX Series) on page 941</a>
<b>Syntax (MX Series, SRX Series, M Series, T Series, PTX Series)</b>	<pre>rpf-check {     fail-filter <i>filter-name</i>;     mode loose; }</pre>
<b>Syntax (EX Series)</b>	<pre>rpf-check;</pre>
<b>Hierarchy Level (MX Series, SRX Series, M Series, T Series, PTX Series)</b>	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet6</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>] [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet6</i>]</pre>
<b>Hierarchy Level (EX Series)</b>	<pre>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>inet6</i>]</pre>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.3 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Support for interface <b>ps0</b> (pseudowire subscriber logical interface device) added in Junos OS Release 15.1.</p>
<b>Description</b>	<p>Enable a reverse-path forwarding (RPF) check on unicast traffic.</p> <p>On EX3200 and EX4200 switches, enable a reverse-path forwarding (RPF) check on unicast traffic (except ECMP packets) on all ingress interfaces.</p> <p>On EX4300 switches, enable a reverse-path forwarding (RPF) check on unicast traffic, including ECMP packets, on all ingress interfaces.</p> <p>On EX8200 and EX6200 switches, enable an RPF check on unicast traffic, including ECMP packets, on the selected ingress interfaces.</p> <p>On QFX Series switches, enable an RPF check on unicast traffic (except ECMP packets) on the selected ingress interfaces.</p> <p>The mode statement is explained separately.</p>
<b>Default</b>	<p>Unicast RPF is disabled on all interfaces.</p>

<b>Options</b>	<b>fail-filter</b> —A filter to evaluate when packets are received on the interface. If the RPF check fails, this optional filter is evaluated. If the fail filter is not configured, the default action is to silently discard the packet.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Unicast RPF Strict Mode on page 244</a></li><li>• <a href="#">Configuring Unicast RPF Loose Mode on page 246</a></li><li>• <a href="#">Example: Configuring Unicast Reverse-Path-Forwarding Check on page 253</a></li><li>• <i>Configuring a Pseudowire Subscriber Logical Interface Device</i></li><li>• <i>Example: Configuring Unicast RPF on an EX Series Switch</i></li><li>• <i>Configuring Unicast RPF (CLI Procedure)</i></li><li>• <i>Disabling Unicast RPF (CLI Procedure)</i></li><li>• <i>Understanding Unicast RPF</i></li></ul>

---

## rpf-loose-mode-discard

---

<b>Syntax</b>	<pre>rpf-loose-mode-discard {     family {         inet;         inet6;     } }</pre>
<b>Hierarchy Level</b>	[edit forwarding-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Configure unicast reverse path forwarding (unicast RPF) loose mode with the ability to discard packets with the source address pointing to the discard next hop.
<b>Options</b>	<b>inet</b> —IPv4 address family.  <b>inet6</b> —IPv6 address family.
<b>Required Privilege Level</b>	interface-control—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Unicast RPF on page 241</a></li></ul>

## rtp

---

**Syntax**

```
rtp {
  f-max-period number;
  queues [ queue-numbers ];
  port {
    minimum port-number;
    maximum port-number;
  }
}
```

**Hierarchy Level** [edit interfaces *interface-name* **unit** *logical-unit-number* **compression**]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Configure the real-time transport protocol (RTP) properties for voice services traffic.  
The remaining statements are described separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Junos OS Services Interfaces Library for Routing Devices*

## rts

---

<b>Syntax</b>	rts (assert   de-assert   normal);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dce-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options</a> <a href="#">dte-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces only, configure the to-DCE signal, request to send (RTS).
<b>Options</b>	<b>assert</b> —The to-DCE signal must be asserted.  <b>de-assert</b> —The to-DCE signal must be deasserted.  <b>normal</b> —Normal RTS signal handling, as defined by the TIA/EIA Standard 530. <b>Default:</b> normal
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li></ul>

## rts-polarity

---

<b>Syntax</b>	rts-polarity (negative   positive);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure RTS signal polarity.
<b>Options</b>	<b>negative</b> —Negative signal polarity.  <b>positive</b> —Positive signal polarity. <b>Default:</b> positive
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Serial Signal Polarities on page 347</a></li></ul>

## rtvbr

<b>Syntax</b>	<code>rtvbr peak rate sustained rate burst length;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> shaping ],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping ],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping ],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping ],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping ]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For ATM2 IQ PICs only, define the real-time variable bandwidth utilization in the traffic-shaping profile.</p> <p>When you configure the real-time bandwidth utilization, you must specify all three options (<b>burst</b>, <b>peak</b>, and <b>sustained</b>). You can specify the rate in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000). You can also specify the rate in cells per second by entering a decimal number followed by the abbreviation <b>c</b>; values expressed in cells per second are converted to bits per second using the formula 1 cps = 384 bps.</p>
<b>Default</b>	If the <b>rtvbr</b> statement is not included, bandwidth utilization is unlimited.
<b>Options</b>	<p><b>burst length</b>—Burst length, in cells. If you set the length to 1, the peak traffic rate is used. <b>Range:</b> 1 through 4000 cells</p> <p><b>peak rate</b>—Peak rate, in bits per second or cells per second. <b>Range:</b> For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure..</p> <p><b>sustained rate</b>—Sustained rate, in bps or cps. <b>Range:</b> For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring ATM CBR</i></li> </ul>

- *Configuring ATM2 IQ Real-Time VBR*
- *Applying Scheduler Maps to Logical ATM Interfaces*
- [cbr on page 478](#)
- [vbr on page 1075](#)

## sa-multicast (100-Gigabit Ethernet)

<b>Syntax</b>	sa-multicast;
<b>Hierarchy Level</b>	[edit chassis fpc slot pic slot forwarding-mode]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.4.
<b>Description</b>	Configure the 100-Gigabit Ethernet PIC or MIC to interoperate with other Juniper Networks 100-Gigabit Ethernet PICs.



**NOTE:** The default packet steering mode for PD-1CE-CFP-FPC4 is SA multicast bit mode. No SA multicast configuration is required to enable this mode.

sa-multicast supports interoperability between the following PICs and MICs:

- 100-Gigabit Ethernet Type 5 PIC with CFP (PF-1CGE-CFP) and the 100-Gigabit Ethernet Type 4 PIC with CFP (PD-1CE-CFP-FPC4) .
- 100-Gigabit Ethernet MICs and the 100-Gigabit Ethernet Type 4 PIC with CFP (PD-1CE-CFP-FPC4).

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Interoperability Between the 100-Gigabit Ethernet PICs PD-1CE-CFP-FPC4 and PF-1CGE-CFP</i></li> <li>• <i>Configuring the Interoperability Between the 100-Gigabit Ethernet PICs PF-1CGE-CFP and PD-1CE-CFP-FPC4</i></li> <li>• <i>Configuring 100-Gigabit Ethernet MICs to Interoperate with Type 4 100-Gigabit Ethernet PICs (PD-1CE-CFP-FPC4) Using SA Multicast Mode</i></li> <li>• <i>Interoperability Between MPC4E (MPC4E-3D-2CGE-8XGE) and 100-Gigabit Ethernet PICs on Type 4 FPC</i></li> <li>• <i>Configuring MPC4E (MPC4E-3D-2CGE-8XGE) to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode</i></li> <li>• <i>Interoperability Between the 100-Gigabit Ethernet PICs PD-1CE-CFP-FPC4 and P1-PTX-2-100GE-CFP</i></li> <li>• <i>Configuring the Interoperability Between the 100-Gigabit Ethernet PICs P1-PTX-2-100GE-CFP and PD-1CE-CFP-FPC4</i></li> <li>• <i>forwarding-mode (100-Gigabit Ethernet)</i></li> </ul>
------------------------------	---

- *sa-multicast (PTX Series Packet Transport Routers)*
- [vlan-steering \(100-Gigabit Ethernet Type 4 PIC with CFP\) on page 1092](#)
- *Configuring VLAN Steering Mode for 100-Gigabit Ethernet Type 4 PIC with CFP*

---

## sampling (Interfaces)

---

Syntax	<code>sampling <i>direction</i>;</code>
Hierarchy Level	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> <i>inet</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> <i>inet</i> ]
Release Information	Statement introduced before Junos OS Release 7.4. Support for <b>sampling</b> on both input and output for bridge family introduced in Junos OS Release 18.2R1. Support for <b>sampling</b> on both input and output for vpls family introduced in Junos OS Release 18.2R1.
Description	Configure the direction of traffic to be sampled.
Options	<i>direction</i> can be one of the following:  <b>input</b> —Configure at least one expected ingress point.  <b>output</b> —Configure at least one expected egress point.  <b>input output</b> —On a single interface, configure at least one expected ingress point and one expect egress point.
Required Privilege Level	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <i>Configuring Flow Monitoring on T Series and M Series Routers and EX9200 Switches</i></li></ul>

## satop-options

<b>Syntax</b>	<pre> satop-options {     excessive-packet-loss-rate {         apply-groups <i>group-name</i>         apply-groups-except <i>group-name</i>         groups <i>group-name</i>         sample-period <i>milliseconds</i>         threshold <i>percentile</i>     }     idle-pattern <i>pattern</i>     jitter-buffer-auto-adjust     jitter-buffer-latency <i>milliseconds</i>     jitter-buffer-packets <i>packets</i>     payload-size <i>bytes</i>; } </pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 9.3.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.</p>
<b>Description</b>	<p>Set Structure-Agnostic TDM over Packet (SATO)P protocol options.</p> <p>On ACX Series routers, the following statements are not supported:</p> <pre>     apply-groups <i>group-name</i>     apply-groups-except <i>group-name</i>     groups <i>group-name</i>     jitter-buffer-auto-adjust </pre>
<b>Options</b>	<p><b>excessive-packet-loss-rate options</b>—Set packet loss options.</p> <ul style="list-style-type: none"> <li><b>apply-groups <i>group-name</i></b>—Groups from which to inherit configuration data.</li> <li><b>apply-groups-except <i>group-name</i></b>—Don't inherit configuration data from these groups.</li> <li><b>groups <i>group-name</i></b>—Specify groups.</li> <li><b>sample-period <i>milliseconds</i></b>—Number of milliseconds over which excessive packet loss rate is calculated.</li> <li><b>threshold <i>percentile</i></b>—Percentile designating the threshold of excessive packet loss rate (from 1 to 100).</li> </ul> <p><b>idle-pattern <i>pattern</i></b>—An 8-bit hexadecimal pattern to replace TDM data in a lost packet (from 0 to 255).</p> <p><b>jitter-buffer-auto-adjust</b>—Automatically adjust the jitter buffer.</p>



**NOTE:** This option is not applicable on MX Series routers.

**jitter-buffer-latency** *milliseconds*—Number of milliseconds delay in jitter buffer (from 1 to 1000 milliseconds).

**jitter-buffer-packets** *packets*—Number of packets in jitter buffer (from 1 to 64).

**payload-size** *bytes*—Payload size in integer number of bytes.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring SAToP on 4-Port Channelized OC3/STM1 Circuit Emulation MICs*
- *Configuring SAToP Emulation on T1/E1 Interfaces on 12-Port Channelized T1/E1 Circuit Emulation PICs*
- *ATM Support on Circuit Emulation PICs Overview*

---

## shared-interface

---

**Syntax** shared-interface;

**Hierarchy Level** [edit interfaces ge-*fpc/pic/slot*],  
[edit interfaces so-*fpc/pic/slot*],  
[edit interfaces xe-*fpc/pic/slot*]

**Release Information** Statement introduced in Junos OS Release 9.3.

**Description** Configure a physical interface to be a shared interface. Logical interfaces configured under the shared physical interface can be assigned to different Protected System Domains (PSDs).

**Options** This statement has no options.

**Required Privilege Level** view-level—To view this statement in the configuration.  
control-level—To add this statement to the configuration.

**Related Documentation**

- [interface-shared-with on page 691](#)

## scheduler-maps (For ATM2 IQ Interfaces)

<b>Syntax</b>	<pre> scheduler-maps <i>map-name</i> {     forwarding-class (<i>class-name</i>   assured-forwarding   best-effort   expedited-forwarding       network-control);     vc-cos-mode (alternate   strict); } </pre>
<b>Hierarchy Level</b>	[edit at- <i>fpc/pic/port interface-name</i> <a href="#">atm-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, define CoS parameters assigned to forwarding classes.
<b>Options</b>	<p><b><i>map-name</i></b>—Name of the scheduler map.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li> <li>• <i>Applying Scheduler Maps to ATM Interfaces</i></li> <li>• <a href="#">atm-scheduler-map on page 445</a></li> </ul>

## schedulers

---

<b>Syntax</b>	<code>schedulers <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2.
<b>Description</b>	Specify the number of schedulers for Ethernet IQ2 and IQ2-E PIC port interfaces.
<b>Default</b>	If you omit this statement, the 1024 schedulers are distributed equally over all ports in multiples of 4.
<b>Options</b>	<i>number</i> —Number of schedulers to configure on the port. <b>Range:</b> 1 through 1024
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i></li></ul>

## secondary

---

<b>Syntax</b>	<code>secondary <i>interface-name</i>;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> (rsp0   rsp1) <a href="#">redundancy-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the secondary (backup) AS PIC interface or MultiServices PIC interface.
<b>Options</b>	<i>interface-name</i> —The identifier for the AS PIC interface or MultiServices PIC interface, which must be of the form <b>sp-fpc/pic/port</b> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

---

## send-critical-event

---

<b>Syntax</b>	send-critical-event;
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile action</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Send OAM PDUs with the critical event bit set.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Specifying the Actions to Be Taken for Link-Fault Management Events</i></li></ul>

## serial-options

```
Syntax  serial-options {
        clock-rate rate;
        clocking-mode (dce | loop);
        control-polarity (negative | positive);
        cts-polarity (negative | positive);
        dcd-polarity (negative | positive);
        dce-options {
            control-signal (assert | de-assert | normal);
            cts (ignore | normal | require);
            dcd (ignore | normal | require);
            dsr (ignore | normal | require);
            dtr signal-handling-option;
            ignore-all;
            indication (ignore | normal | require);
            rts (assert | de-assert | normal);
            tm (ignore | normal | require);
        }
        dsr-polarity (negative | positive);
        dte-options {
            control-signal (assert | de-assert | normal);
            cts (ignore | normal | require);
            dcd (ignore | normal | require);
            dsr (ignore | normal | require);
            dtr signal-handling-option;
            ignore-all;
            indication (ignore | normal | require);
            rts (assert | de-assert | normal);
            tm (ignore | normal | require);
        }
        dtr-circuit (balanced | unbalanced);
        dtr-polarity (negative | positive);
        encoding (nrz | nrzi);
        indication-polarity (negative | positive);
        line-protocol protocol;
        loopback (dce-local | dce-remote | local | remote);
        rts-polarity (negative | positive);
        tm-polarity (negative | positive);
        transmit-clock invert;
    }
```

**Hierarchy Level** [edit interfaces *se-pim*/0/*port*]

**Release Information** Statement introduced prior to Junos OS Release 7.4.

**Description** Configure serial-specific interface properties.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

- Related Documentation**
- [Serial Interfaces Overview on page 335](#)
  - *no-concatenate*

---

## server

---

<b>Syntax</b>	server;
<b>Hierarchy Level</b>	[edit interfaces pp0 unit <i>logical-unit-number</i> <a href="#">pppoe-options</a> ], [edit logical-systems <i>logical-system-name</i> interfaces pp0 unit <i>logical-unit-number</i> <a href="#">pppoe-options</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5.
<b>Description</b>	Configure the router to operate in the PPPoE server mode. Supported on M120 and M320 Multiservice Edge Routers and MX Series 5G Universal Routing Platforms operating as access concentrators.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the PPPoE Server Mode</i></li></ul>

## server-timeout

---

<b>Syntax</b>	<code>server-timeout <i>seconds</i>;</code>
<b>Hierarchy Level</b>	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Sets the number of seconds the port waits for a reply when relaying a response from the client to the authentication server before timing out and invoking the server-fail action.
<b>Options</b>	<p><b><i>seconds</i></b>—The number of seconds the port waits for a response when relaying a request from the authentication server to the client before resending the request.</p> <p><b>Range:</b> 1 through 60 seconds</p> <p><b>Default:</b> 30 seconds</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li><li>• <a href="#">authenticator on page 448</a></li><li>• <a href="#">dot1x on page 543</a></li><li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li></ul>

## service (Logical Interfaces)

<b>Syntax</b>	<pre> service {   input {     service-set service-set-name &lt;service-filter filter-name&gt;;     post-service-filter filter-name;   }   output {     service-set service-set-name &lt;service-filter filter-name&gt;;   } } </pre>
<b>Hierarchy Level</b>	<p>[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Define one or more service sets and filters, and one postservice filter to be applied to an interface.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## service (PPPoE)

---

**Syntax**    `service service-name {  
              drop;  
              delay seconds;  
              terminate;  
              dynamic-profile profile-name;  
              routing-instance routing-instance-name;  
              max-sessions number;  
              agent-specifier {  
                  aci circuit-id-string ari remote-id-string {  
                      drop;  
                      delay seconds;  
                      terminate;  
                      dynamic-profile profile-name;  
                      routing-instance routing-instance-name;  
                      static-interface interface-name;  
                  }  
              }  
          }  
}`

**Hierarchy Level**    [edit protocols pppoe [service-name-tables table-name](#)]

**Release Information**    Statement introduced in Junos OS Release 10.0.  
**any**, **dynamic-profile**, **routing-instance**, **max-sessions**, and **static-interface** options introduced in Junos OS Release 10.2.

**Description**    Specify the action taken by the interface on receipt of a PPPoE Active Discovery Initiation (PADI) control packet for the specified named service, **empty** service, or **any** service in a PPPoE service name table. You can also specify the dynamic profile and routing instance that the router uses to instantiate a dynamic PPPoE interface, and the maximum number of active PPPoE sessions that the router can establish with the specified service.

**Default**    The default action is terminate.

**Options**    **service-name**—Service entry in the PPPoE service name table:

- **service-name**—Named service entry of up to 32 characters; for example, **premiumService**. You can configure a maximum of 512 named service entries across all PPPoE service name tables on the router.
- **empty**—Service entry of zero length that represents an unspecified service. Each PPPoE service name table includes one **empty** service entry by default.
- **any**—Default service for non-empty service entries that do not match the named or **empty** service entries configured in the PPPoE service name table. Each PPPoE service name table includes one **any** service entry by default.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring PPPoE Service Name Tables</i></li> <li>• <i>Assigning a Service to a Service Name Table and Configuring the Action Taken When the Client Request Includes a Non-zero Service Name Tag</i></li> <li>• <i>Configuring the Action Taken When the Client Request Includes an Empty Service Name Tag</i></li> <li>• <i>Configuring the Action Taken for the Any Service</i></li> </ul>

## service-domain


<b>Syntax</b>	service-domain (inside   outside);
<b>Hierarchy Level</b>	[edit <b>interfaces</b> <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> <b>interfaces</b> <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For adaptive services interfaces, specify a service interface domain. If you specify this interface using the <b>next-hop-service</b> statement at the [edit <b>services service-set</b> <i>service-set-name</i> ] hierarchy level, the interface domain must match that used with the <b>inside-service-interface</b> and <b>outside-service-interface</b> statements.
<b>Options</b>	<b>inside</b> —Interface used within the network.  <b>outside</b> —Interface used outside the network.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## service-filter (Interfaces)

---

<b>Syntax</b>	<code>service-filter <i>filter-name</i>;</code>
<b>Hierarchy Level</b>	<code>[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet <a href="#">service</a> (<a href="#">input</a>   <a href="#">output</a>) service-set <i>service-set-name</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet <a href="#">service</a> (<a href="#">input</a>   <a href="#">output</a>) service-set <i>service-set-name</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Define the filter to be applied to traffic before it is accepted for service processing. Configuration of a service filter is optional; if you include the <b>service-set</b> statement without a <b>service-filter</b> definition, Junos OS assumes the match condition is true and selects the service set for processing automatically.
<b>Options</b>	<i>filter-name</i> —Identifies the filter to be applied in service processing. You can include special characters, such as a forward slash (/), colon (:), or a period (.).
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Applying Filters and Services to Interfaces</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## service-name-table

<b>Syntax</b>	<code>service-name-table <i>table-name</i>;</code>
<b>Hierarchy Level</b>	<p>[edit dynamic-profiles <i>profile-name</i> interfaces demux0 unit <i>logical-unit-number</i> family pppoe],</p> <p>[edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">pppoe-underlying-options</a>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family pppoe],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">pppoe-underlying-options</a>]</p>
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 10.0.</p> <p>Support at the <a href="#">[edit ... family pppoe]</a> hierarchies introduced in Junos OS Release 11.2.</p>
<b>Description</b>	Specify the PPPoE service name table assigned to a PPPoE underlying interface. This underlying interface is configured with either the <b>encapsulation ppp-over-ether</b> statement or the <b>family pppoe</b> statement; the two statements are mutually exclusive.
<div style="display: flex; align-items: center;">  <div> <p><b>NOTE:</b> The <a href="#">[edit ... family pppoe]</a> hierarchies are supported only on MX Series routers with MPCs.</p> </div> </div>	
<b>Options</b>	<b><i>table-name</i></b> —Name of the PPPoE service name table, a string of up to 32 alphanumeric characters.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring PPPoE Service Name Tables</a></li> <li>• <a href="#">Assigning a Service Name Table to a PPPoE Underlying Interface</a></li> <li>• <a href="#">Configuring the PPPoE Family for an Underlying Interface</a></li> </ul>

## service-name-tables

---

Syntax	<pre>service-name-tables <i>table-name</i> {   service <i>service-name</i> {     drop;     delay <i>seconds</i>;     terminate;     dynamic-profile <i>profile-name</i>;     routing-instance <i>routing-instance-name</i>;     max-sessions <i>number</i>;     agent-specifier {       aci <i>circuit-id-string</i> ari <i>remote-id-string</i> {         drop;         delay <i>seconds</i>;         terminate;         dynamic-profile <i>profile-name</i>;         routing-instance <i>routing-instance-name</i>;         static-interface <i>interface-name</i>;       }     }   } }</pre>
Hierarchy Level	[edit protocols pppoe]
Release Information	Statement introduced in Junos OS Release 10.0. <b>dynamic-profile</b> , <b>routing-instance</b> , <b>max-sessions</b> , and <b>static-interface</b> options introduced in Junos OS Release 10.2.
Description	Create and configure a PPPoE service name table. Specify the action taken for each service and remote access concentrator on receipt of a PPPoE Active Discovery Initiation (PADI) packet. You can also specify the dynamic profile and routing instance that the router uses to instantiate a dynamic PPPoE interface, and the maximum number of active PPPoE sessions that the router can establish with the specified service. A maximum of 32 PPPoE service name tables is supported per router.
Options	<p><b>table-name</b>—Name of the PPPoE service name table, a string of up to 32 alphanumeric characters.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Configuring PPPoE Service Name Tables</i></li><li>• <i>Creating a Service Name Table</i></li></ul>

## service-set

---

<b>Syntax</b>	<code>service-set service-set-name;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet <a href="#">service</a> ( <a href="#">input</a>   <a href="#">output</a> ) service-set <i>service-set-name</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">family</a> inet <a href="#">service</a> ( <a href="#">input</a>   <a href="#">output</a> ) service-set <i>service-set-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Define one or more service sets to be applied to an interface. If you define multiple service sets, the Junos OS evaluates the filters in the order in which they appear in the configuration.
<b>Options</b>	<i>service-set-name</i> —Identifies the service set.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## services (Priority Level)

---

<b>Syntax</b>	<code>services priority-level;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">services-options</a> <a href="#">sysloghost</a> <i>hostname</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify system logging priority level.
<b>Options</b>	<p><i>priority-level</i>—Assigns a priority level to the facility. Valid entries are as follows:</p> <ul style="list-style-type: none"><li>• <b>alert</b>—Conditions that should be corrected immediately.</li><li>• <b>any</b>—Matches any level.</li><li>• <b>emergency</b>—Panic conditions.</li><li>• <b>critical</b>—Critical conditions.</li><li>• <b>error</b>—Error conditions.</li><li>• <b>info</b>—Informational messages.</li><li>• <b>notice</b>—Conditions that require special handling.</li><li>• <b>warning</b>—Warning messages.</li></ul>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## services-options

**Syntax**

```

services-options {
  inactivity-timeout seconds;
  open-timeout seconds;
  session-limit {
    maximum number;
    rate new-sessions-per-second;
  }
  syslog {
    host hostname {
      facility-override facility-name;
      log-prefix prefix-number;
      services priority-level;
    }
  }
}

```

**Hierarchy Level** [edit [interfaces](#) *interface-name*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Define the service options to be applied on an interface.

**Options** The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Junos OS Services Interfaces Library for Routing Devices*

## shaping

---

<b>Syntax</b>	<pre>shaping {     (cbr rate   rtvbr peak rate sustained rate burst length   vbr peak rate sustained rate burst     length);     queue-length number; }</pre>
<b>Hierarchy Level</b>	<pre>[edit interfaces interface-name atm-options vpi vpi-identifier], [edit interfaces interface-name unit logical-unit-number], [edit interfaces interface-name unit logical-unit-number address address family family multipoint-destination address], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number], [edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number address address family family multipoint-destination address]</pre>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For ATM encapsulation only, define the traffic-shaping profile.</p> <p>For Circuit Emulation PICs, specify traffic shaping in the ingress and egress directions.</p> <p>For ATM2 IQ interfaces, changing or deleting VP tunnel traffic shaping causes all logical interfaces on a VP to be deleted and then re-added.</p> <p>VP tunnels are not supported on multipoint interfaces.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Defining Virtual Path Tunnels</i></li><li>• <i>Defining the ATM Traffic-Shaping Profile Overview</i></li><li>• <i>Configuring ATM QoS or Shaping</i></li><li>• <i>Applying Scheduler Maps to Logical ATM Interfaces</i></li></ul>

---

## shdsl-options

---

<b>Syntax</b>	<pre>shdsl-options {   annex (annex-a   annex-b);   line-rate <i>line-rate</i>;   loopback (local   remote   payload);   snr-margin {     snext <i>margin</i>;   } }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.4.
<b>Description</b>	For J Series Services Routers only, configure symmetric DSL (SHDSL) options.  The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## short-name-format

---

<b>Syntax</b>	short-name-format (character-string   vlan   2octet   rfc-2685-vpn-id);
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management maintenance-domain domain-name maintenance-association ma-name]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	Specify the name format of the maintenance association name.
<b>Options</b>	<b>character-string</b> —The name is an ASCII character string. <b>vlan</b> —The primary VLAN identifier. <b>2octet</b> —A number in the range 0 through 65,535. <b>rfc-2685-vpn-id</b> —A VPN identifier that complies with RFC 2685. <b>Default:</b> character-string



**NOTE:** The PTX Series Packet Transport Routers support the **vlan** and **2octet** options only.

---

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Creating a Maintenance Association</i></li></ul>

---

## short-sequence

---

<b>Syntax</b>	short-sequence;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For multilink interfaces only, set the length of the packet sequence identification number to 12 bits.
<b>Default</b>	If you omit this statement from the configuration, the length is set to 24 bits.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## sla-iterator-profile

---

Syntax	<pre>sla-iterator-profile <i>profile-name</i> {     <b>data-tlv-size</b> <i>size</i>;     <b>iteration-count</b> <i>count-value</i>;     priority <i>priority-value</i>; }</pre>
Hierarchy Level	[edit protocols <b>oam ethernet connectivity-fault-management maintenance-domain</b> <i>md-name maintenance-association ma-name mep mep-id remote-mep remote-mep-id</i> ]
Release Information	Statement introduced in Junos OS Release 11.1.
Description	Configure a remote MEP with an iterator profile and specify the options.
Options	<p><b>profile-name</b>—Name of the iterator profile configured for a remote MEP. For more information about configuring a remote MEP with an iterator profile, see <i>Configuring a Remote MEP with an Iterator Profile</i>.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
Required Privilege Level	Configure—To enter configuration mode. Control—To modify any configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <i>Configuring an Iterator Profile</i></li><li>• <i>Configuring a Remote MEP with an Iterator Profile</i></li><li>• <i>Verifying the Configuration of an Iterator Profile</i></li><li>• <i>Managing Iterator Statistics</i></li><li>• <a href="#">sla-iterator-profiles on page 971</a></li></ul>

## sla-iterator-profiles

**Syntax**

```
sla-iterator-profiles {
  profile-name {
    avg-fd-twoway-threshold;
    avg-ifdv-twoway-threshold;
    avg-flr-forward-threshold;
    avg-flr-backward-threshold;
    calculation-weight {
      delay delay-weight;
      delay-variation delay-variation-weight;
    }
    cycle-time milliseconds;
    flap-trap-monitor seconds
    iteration-period iteration-period-value;
    measurement-type (loss | statistical-frame-loss | two-way-delay);
  }
}
```

**Hierarchy Level** [edit protocols [oam ethernet connectivity-fault-management performance-monitoring](#)]

**Release Information** Statement introduced in Junos OS Release 11.1.

**Description** Configure an iterator application and specify the iterator profile options.

**Options** *profile-name*—Name of the iterator profile. For more information about configuring the iterator profile, see *Configuring an Iterator Profile*.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** Configure—To enter configuration mode.  
Control—To modify any configuration.

**Related Documentation**

- *Configuring an Iterator Profile*
- *Configuring a Remote MEP with an Iterator Profile*
- *Verifying the Configuration of an Iterator Profile*
- *Managing Iterator Statistics*

## snr-margin

---

<b>Syntax</b>	<code>snr-margin {     <b>snext</b> <i>margin</i>; }</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>shdsl-options</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>shdsl-options</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.4.
<b>Description</b>	<p>For J Series Services Routers only, configure the SHDSL signal-to-noise ratio (SNR) margin. The SNR margin is the difference between the desired SNR and the actual SNR. Configuring the SNR creates a more stable SHDSL connection by making the line train at a SNR margin higher than the threshold. If any external noise below the threshold is applied to the line, the line remains stable.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## snext

---

<b>Syntax</b>	<code>snext margin;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>shdsl-options</b> <b>snr-margin</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>shdsl-options</b> <b>snr-margin</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.4.
<b>Description</b>	For J Series Services Routers only, configure self-near-end crosstalk (SNEXT) signal-to-noise ratio (SNR) margin for a SHDSL line. When configured, the line trains at higher than SNEXT threshold. The SNR margin is the difference between the desired SNR and the actual SNR.
<b>Options</b>	<b>margin</b> —Desired SNEXT margin. Possible values are disabled or a margin between –10dB and 10 dB. <b>Default:</b> disabled
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li> </ul>

## sonet-options

---

```
Syntax  sonet-options {  
        aps {  
            advertise-interval milliseconds;  
            annex-b  
            authentication-key key;  
            (break-before-make | no-break-before-make);  
            fast-aps-switch;  
            force;  
            hold-time milliseconds;  
            lockout;  
            neighbor address;  
            paired-group group-name;  
            protect-circuit group-name;  
            request;  
            revert-time seconds;  
            switching-mode (bidirectional | unidirectional);  
            working-circuit group-name;  
        }  
        bytes {  
            c2 value;  
            e1-quiet value;  
            f1 value;  
            f2 value;  
            s1 value;  
            z3 value;  
            z4 value;  
        }  
        fcs (16 | 32);  
        loopback (local | remote);  
        mpls {  
            pop-all-labels {  
                required-depth number;  
            }  
        }  
        path-trace trace-string;  
        (payload-scrambler | no-payload-scrambler);  
        rfc-2615;  
        trigger {  
            defect ignore;  
            defect hold-time up milliseconds down milliseconds;  
        }  
    }  
    vtmapping (itu-t | klm);  
    (z0-increment | no-z0-increment);
```

**Hierarchy Level**    [edit interfaces *interface-name*]

**Release Information**    Statement introduced before Junos OS Release 7.4.

**Description**    Configure SONET/SDH-specific interface properties.

On SONET/SDH OC48 interfaces that you configure for channelized (multiplexed) mode (by including the **no-concatenate** statement at the **[edit chassis fpc slot-number pic pic-number]** hierarchy level), the **bytes e1-quiet** and **bytes f1** options have no effect. The **bytes f2**, **bytes z3**, **bytes z4**, and **path-trace** options work correctly on channel 0 and work in the transmit direction only on channels 1, 2, and 3.

On a channelized OC12 interface, the **bytes e1-quiet**, **bytes f1**, **bytes f2**, **bytes z3**, and **bytes z4** options are not supported. The **fcs** and **payload-scrambler** statements are also not supported; you must configure these for each DS3 channel using the **t3-options fcs** and **t3-options payload-scrambler** statements. The **aps** and **loopback** statements are supported only on channel 0 and are ignored if included in the configurations for channels 1 through 11. You can configure loopbacks for each DS3 channel with the **t3-options loopback** statement. The **path-trace** statement can be included in the configuration for each DS3 channel, thereby configuring a unique path trace for each channel.

To configure loopback on channelized IQ and IQE PICs, SONET/SDH level, use the **loopback** statement **local** and **remote** options at the controller interface (coc48, cstm16, coc12, cstm4, coc3, and cstm1). It is ignored for path-level interfaces **so-fpc/pic/port** or **so-fpc/pic/port:channel**.

If you are running Intermediate System-to-Intermediate System (IS-IS) over SONET/SDH interfaces, use PPP if you are running Cisco IOS Release 12.0 or later. If you need to run HDLC, configure an ISO family MTU of 4469 on the router.

The remaining statements are explained separately. See [CLI Explorer](#).

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring SONET/SDH Parameters on ATM Interfaces</i></li> <li>• <i>Channelized OC12/STM4 IQ and IQE Interfaces Overview</i></li> <li>• <i>Channelized STM1 Interfaces Overview</i></li> <li>• <i>SONET/SDH Interfaces Overview</i></li> <li>• <i>no-concatenate</i></li> </ul>

## source

---

<b>Syntax</b>	<code>source <i>source-address</i>;</code>
<b>Hierarchy Level (EX, NFX, OCX1100 and QFX Series)</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel]
<b>Hierarchy Level (M-series and T-series)</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>tunnel</b> <i>address</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>tunnel</b> <i>address</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1 for EX Series switches. Statement introduced in Junos OS Release 13.2 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify the source address of the tunnel.
<b>Default</b>	If you do not specify a source address, the tunnel uses the unit's primary address as the source address of the tunnel.
<b>Options</b>	<b><i>source-address</i></b> —Address of the local side of the tunnel. This is the address that is placed in the outer IP header's source field.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Tunnel Services Overview</i></li><li>• <a href="#">multicast-only on page 792</a></li><li>• <a href="#">primary (Address on Interface) on page 902</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## source-address-filter

<b>Syntax</b>	<pre>source-address-filter {     mac-address; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">aggregated-ether-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">fastether-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">gigether-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
<b>Description</b>	For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, Gigabit Ethernet IQ interfaces, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), specify the MAC addresses from which the interface can receive packets. For this statement to have any effect, you must include the <b>source-filtering</b> statement in the configuration to enable source address filtering.
<b>Options</b>	<p><b>mac-address</b>—MAC address filter. You can specify the MAC address as <i>nn:nn:nn:nn:nn:nn</i> or <i>nnnn.nnnn.nnnn</i>, where <i>n</i> is a decimal digit. To specify more than one address, include multiple <b>mac-address</b> options in the <b>source-address-filter</b> statement.</p> <p>If you enable the VRRP on a Fast Ethernet or Gigabit Ethernet interface, as described in <i>VRRP and VRRP for IPv6 Overview</i>, and if you enable MAC source address filtering on the interface, you must include the virtual MAC address in the list of source MAC addresses that you specify in the <b>source-address-filter</b> statement. MAC addresses ranging from <b>00:00:5e:00:01:00</b> through <b>00:00:5e:00:01:ff</b> are reserved for VRRP, as defined in RFC 3768, <i>Virtual Router Redundancy Protocol</i>. When you configure the VRRP group, the group number must be the decimal equivalent of the last hexadecimal byte of the virtual MAC address.</p> <p>On untagged Gigabit Ethernet interfaces, you should not configure the <b>source-address-filter</b> statement and the <b>accept-source-mac</b> statement simultaneously. On tagged Gigabit Ethernet interfaces, you should not configure the <b>source-address-filter</b> statement and the <b>accept-source-mac</b> statement with an identical MAC address specified in both filters.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring MAC Address Filtering for Ethernet Interfaces</i></li> <li>• <i>Configuring MAC Address Filtering on PTX Series Packet Transport Routers</i></li> <li>• <a href="#">source-filtering on page 827</a></li> </ul>

## source-class-usage

---

<b>Syntax</b>	<pre>source-class-usage {     direction; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> inet <b>accounting</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet <b>accounting</b> ], [edit routing-instances <i>routing-instance-name</i> vrf-table-label]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Support for the <b>vrf-table-label</b> statement added in Junos OS Release 9.3.
<b>Description</b>	Enable packet counters on an interface that count packets that arrive from specific prefixes on the provider core router and are destined for specific prefixes on the customer edge router.
<b>Options</b>	<p><b>direction</b> can be one of the following:</p> <p><b>input</b>—Configure at least one expected ingress point.</p> <p><b>output</b>—Configure at least one expected egress point.</p> <p><b>input output</b>—On a single interface, configure at least one expected ingress point and one expect egress point.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Enabling Source Class and Destination Class Usage on page 262</a></li><li>• <a href="#">accounting on page 413</a></li><li>• <a href="#">destination-class-usage on page 530</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <i>vrf-table-label</i></li></ul>

## source-filtering

<b>Syntax</b>	(source-filtering   no-source-filtering);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">aggregated-ether-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">fastether-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">gigether-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Packet Transport Routers.
<b>Description</b>	<p>For aggregated Ethernet, Fast Ethernet, Gigabit Ethernet, and Gigabit Ethernet IQ interfaces only, enable the filtering of MAC source addresses, which blocks all incoming packets to that interface. To allow the interface to receive packets from specific MAC addresses, include the <b>source-address-filter</b> statement.</p> <p>If the remote Ethernet card is changed, the interface is no longer able to receive packets from the new card because it has a different MAC address.</p>
<b>Default</b>	Source address filtering is disabled.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring MAC Address Filtering for Ethernet Interfaces</i></li> <li>• <i>Configuring MAC Address Filtering on PTX Series Packet Transport Routers</i></li> <li>• <a href="#">accept-source-mac on page 409</a></li> <li>• <a href="#">source-address-filter on page 977</a></li> </ul>

## speed (Ethernet)

---

<b>List of Syntax</b>	<a href="#">Syntax (EX Series) on page 980</a> <a href="#">Syntax (EX2300 and EX4300) on page 980</a> <a href="#">Syntax (EX Series, ACX Series, MX Series) on page 980</a> <a href="#">Syntax (QFX Series, OCX1100, EX4600) on page 980</a>
<b>Syntax (EX Series)</b>	<code>speed (auto-negotiation   <i>speed</i>) ;</code>
<b>Syntax (EX2300 and EX4300)</b>	<code>speed <i>speed</i>;</code>
<b>Syntax (EX Series, ACX Series, MX Series)</b>	<code>speed (10m   10g   100m   1g   2.5g   5g   auto   auto-10m-100m);</code>
<b>Syntax (QFX Series, OCX1100, EX4600)</b>	<code>speed (10g   1g   100m)</code>
<b>Hierarchy Level (EX Series)</b>	[edit interfaces <i>interface-name</i> ether-options]
<b>Hierarchy Level (EX2300 and EX4300)</b>	[edit interfaces <i>interface-name</i> ]
<b>Hierarchy Level (ACX Series, EX Series, MX Series)</b>	[edit interfaces <i>interface-name</i> ], [edit interfaces ge- <i>pim</i> /0/0 <a href="#">switch-options</a> <i>switch-port</i> <i>port-number</i> ]
<b>Hierarchy Level (QFX Series, EX4600, OCX Series)</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 13.2X50-D10 for EX Series switches. Speed option 2.5Gbps introduced in Junos OS Release 18.1R2 for EX2300 switch. Speed option 10Gbps and 5Gbps introduced in Junos OS Release 18.2R1 for EX4300 switch.
<b>Description</b>	Configure the interface speed. This statement applies to the management Ethernet interface ( <b>fxp0</b> or <b>em0</b> ), Fast Ethernet 12-port and 48-port PICs, the built-in Fast Ethernet port on the FIC (M7i router), Combo Line Rate DPCs and Tri-Rate Ethernet Copper interfaces on MX Series routers, and Gigabit Ethernet interfaces on EX Series switches.  When you configure the Tri-Rate Ethernet copper interface to operate at 1 Gbps, autonegotiation must be enabled. When you configure 100BASE-FX SFP, you must set the port speed at 100 Mbps.



**NOTE:** On MX Series routers with Tri-rate Enhanced DPC (DPCE-R-40GE-TX), when you configure the interface speed using the `auto-10m-100m` option, the speed is negotiated to the highest value possible (100 Mbps), if the same value is configured on both sides of the link. However, when you view the interface speed of the DPC, using the `show interfaces` command, the value of the speed is not accurately displayed. For instance, if you configure the speed of the Tri-rate enhanced DPC, as 100Mbps on both sides of the link, the interface speed of the DPC is negotiated to 100 Mbps. However, the interface speed of the DPC displays 1 bps. This is an issue with the `show interfaces` command only. The actual interface speed is 100 Mbps.

On 10-Gigabit Ethernet SFP interfaces, autonegotiation is enabled by default and auto-detects the speed to be either 1 Gbps or 10 Gbps. On QFX5100-48S, QFX5100-96S, and QFX5100-24Q devices using 10-Gigabit Ethernet SFP interfaces, the speed is set to 10 Gbps by default and cannot be configured to operate in a different speed. On QFX5100-48S and QFX5100-96S devices using 1-Gigabit Ethernet SFP interfaces, the speed is set to 1 Gbps by default and cannot be configured to operate in a different speed.



**NOTE:** In Junos OS Release 14.1X53-D35 on QFX5100-48T-6Q devices using 10-Gigabit Ethernet Copper interfaces, autonegotiation is disabled by default on the copper ports, and the interfaces operate at a speed of 100M. You can, however, enable auto-negotiation by issuing the `set interface name ether-options auto-negotiation` command on the interface for which you want to change the interface speed. With autonegotiation enabled, the interface auto-detects the speed in which to operate.



**NOTE:** Only 10 Gbps and 40 Gbps interfaces are supported on OCX Series switches.



**NOTE:** When displaying interface information with `show interfaces` commands, you might see speed values for 1 Gbps interfaces displayed as 1000mbps.

(For EX2300 only) Starting in Junos OS Release 18.1R2, the multi-rate speed is supported on EX2300-48MP and EX2300-24MP switches. The speed configuration statement is supported on both multi-rate gigabit ethernet interface (mge) and gigabit ethernet (ge) interface. The mge interface is a rate-selectable (multirate) Gigabit Ethernet interface that can support speeds of 10 Gbps, 5 Gbps, and 2.5 Gbps over CAT5e/CAT6/CAT6a cables. In the EX2300, the mge interface supports 100 Mbps, 1 Gbps, and 2.5 Gbps speeds, which can be configured by using the speed configuration statement. Note that 10Mbps speed is supported only on **ge** interfaces of EX2300 switch.

**Default (EX Series)** If the **auto-negotiation** statement at the **[edit interfaces interface-name ether-options]** hierarchy level is enabled, the auto-negotiation option is enabled by default.

**Options** You can specify the speed as either **10m** (10 Mbps), **100m** (100 Mbps), and on MX Series routers, **1g** (1 Gbps). You can also specify the **auto** option on MX Series routers.

For Gigabit Ethernet interfaces on EX Series switches, you can specify one of the following options:

*Table 53: Options for speed*

Platforms	Speed Supported	Auto-negotiation
EX Series Switches	100m—100 Mbps 10m—10 Mbps 1g—1 Gbps	auto-negotiation—Automatically negotiate the speed based on the speed of the other end of the link. This option is available only when the <b>auto-negotiation</b> statement at the <b>[edit interfaces interface-name ether-options]</b> hierarchy level is enabled.
ACX, MX Series	100m—100 Mbps 10m—10 Mbps 1g—1 Gbps	<b>auto</b> —Automatically negotiate the speed (10 Mbps, 100 Mbps, or 1 Gbps) based on the speed of the other end of the link.  <b>auto-10m-100m</b> —Automatically negotiate the speed (10 Mbps or 100 Mbps) based on the speed of the other end of the link.
EX4600, QFX Series, QFabric, OCX100, QFX Series	10g—10 Gbps 1g—1 Gbps 100m—100 Mbps	auto-negotiation—Automatically negotiate the speed based on the speed of the other end of the link. This option is available only when the <b>auto-negotiation</b> statement at the <b>[edit interfaces interface-name ether-options]</b> hierarchy level is enabled.
EX2300	10m—10 Mbps (supported on EX series switches and only on <b>ge</b> interfaces of EX2300 switch)  100m—100 Mbps  1g—1 Gbps  2.5g—2.5 Gbps (supported only on <b>mge</b> interfaces of EX2300 switch)  10g—10 Gbps (supported only on <b>mge</b> interfaces for EX4300 switches)  5g—5 Gbps (supported only on <b>mge</b> interfaces for EX4300 switches)	<b>speed</b> —Specify the interface speed. If the <b>auto-negotiation</b> statement at the <b>[edit interfaces interface-name ether-options]</b> hierarchy level is disabled, you must specify a specific value. This value sets the speed that is used on the link. If the <b>auto-negotiation</b> statement is enabled, you might want to configure a specific speed value to advertise the desired speed to the remote end.

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Release History Table**


Release	Description
18.2R1	Starting in Junos OS Release 18.1R2, the multi-rate speed is supported on EX2300-48MP and EX2300-24MP switches.

**Related Documentation**

- [Configuring the Interface Speed on page 116](#)
- [Configuring the Interface Speed on Ethernet Interfaces on page 116](#)
- *Configuring Gigabit Ethernet Autonegotiation*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure) for EX Series Switches with ELS support*
- *auto-negotiation*
- *Configuring Gigabit and 10-Gigabit Ethernet Interfaces for EX4600 and QFX Series Switches*
- *Junos OS Network Interfaces Library for Routing Devices*
- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (J-Web Procedure)*
- [Junos OS Ethernet Interfaces Configuration Guide](#)

## speed (MX Series DPC)

---

<b>Syntax</b>	<code>speed (auto   1Gbps   100Mbps   10Mbps);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces ge-<i>fpc/pic/port</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	<p>On MX Series routers with Combo Line Rate DPCs and Tri-Rate Copper SFPs you can set auto negotiation of speed. To specify the auto negotiation speed, use the <b>speed (auto   1Gbps   100Mbps   10Mbps)</b> statement under the <b>[edit interface ge-<i>fpc/pic/port</i>]</b> hierarchy level. The <b>auto</b> option will attempt to automatically match the rate of the connected interface. To set port speed negotiation to a specific rate, set the port speed to <b>1Gbps</b>, <b>100Mbps</b>, or <b>10Mbps</b>.</p>
	<div> <b>NOTE:</b> If the negotiated speed and the interface speed do not match, the link will not be brought up. Half duplex mode is not supported.</div>
<b>Options</b>	You can specify the speed as either <b>auto</b> (autonegotiate), <b>10Mbps</b> (10 Mbps), <b>100Mbps</b> (100 Mbps), or <b>1Gbps</b> (1 Gbps).
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Gigabit Ethernet Autonegotiation</i></li><li>• <a href="#">no-auto-mdix on page 810</a></li></ul>

## speed (SONET/SDH)

<b>Syntax</b>	<code>speed (oc3   oc12   oc48);</code>
<b>Hierarchy Level</b>	<code>[edit interfaces so-<i>fpc/pic/port</i>],</code> <code>[edit interfaces so-<i>fpc/pic/port:channel</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3.
<b>Description</b>	Configure the interface speed. This statement applies to SONET/SDH interfaces on next-generation SONET/SDH Type 1 and Type 2 PICs with SFP. Available speeds depend on whether the PIC is in concatenated mode or nonconcatenated mode. Include the channel in the interface name when configuring nonconcatenated interfaces.
<b>Options</b>	<p><b>oc3   oc12   oc48</b>—Speed when the PIC is in concatenated mode. For example, you can configure each port of a 4-port OC12 PIC to have a speed of <b>oc3</b>.</p> <p>You can configure port 0 of a 4-port OC12 PIC to have a speed of <b>oc12</b>.</p> <p><b>oc3   oc12</b>—Speed when the PIC is in nonconcatenated mode.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring SONET/SDH Interface Speed on page 120</a></li> </ul>

## spid1

<b>Syntax</b>	<code>spid1 <i>spid1-string</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces br-<i>pim</i>/0/<i>port</i> isdn-options]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the Service Profile Identifier (SPID).
<b>Options</b>	<b><i>spid1-string</i></b> —Numeric SPID.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Junos OS Interfaces and Routing Configuration Guide</a></li> </ul>

## spid2

---

<b>Syntax</b>	<code>spid2 <i>spid2-string</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>br-pim</i> /0/ <i>port</i> isdn-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure an additional SPID.
<b>Options</b>	<i>spid2-string</i> —Numeric SPID.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	

## stacked-vlan-ranges

```
Syntax  stacked-vlan-ranges {
        access-profile profile-name;
        authentication {
            packet-types [packet-types];
            password password-string;
            username-include {
                circuit-type;
                delimiter delimiter-character;
                domain-name domain-name-string;
                interface-name;
                mac-address;
                option-18
                option-37
                option-82;
                radius-realm radius-realm-string;
                user-prefix user-prefix-string;
                vlan-tags outer-vlan-tag-inner-vlan-tag;
            }
        }
        dynamic-profile profile-name {
            accept (any | dhcp-v4 | inet);
            access-profile vlan-dynamic-profile-name;
            ranges (any | low-tag-high-tag), (any | low-tag-high-tag);
        }
        override;
    }
```

**Hierarchy Level** [edit interfaces *interface-name* [auto-configure](#)]

**Release Information** Statement introduced in Junos OS Release 9.5.

**Description** Configure multiple VLANs. Each VLAN is assigned a VLAN ID number from the range.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**


- *Configuring an Interface to Use the Dynamic Profile Configured to Create Stacked VLANs*
- *Configuring Interfaces to Support Both Single and Stacked VLANs*

## stacked-vlan-tagging

---

<b>Syntax</b>	stacked-vlan-tagging;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.
<b>Description</b>	<p>For Gigabit Ethernet IQ interfaces, Gigabit Ethernet, 10-Gigabit Ethernet LAN/WAN PIC, and 100-Gigabit Ethernet Type 5 PIC with CFP, enable stacked VLAN tagging for all logical interfaces on the physical interface.</p> <p>For pseudowire subscriber interfaces, enable stacked VLAN tagging for logical interfaces on the pseudowire service.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Stacking and Rewriting Gigabit Ethernet VLAN Tags Overview</i></li></ul>

## start-end-flag

<b>Syntax</b>	start-end-flag (filler   shared);
<b>Hierarchy Level</b>	[edit interfaces e1- <i>fpc/pic/port</i> ], [edit interfaces t1- <i>fpc/pic/port</i> ], [edit interfaces <i>interface-name</i> ds0-options], [edit interfaces <i>interface-name</i> e1-options], [edit interfaces <i>interface-name</i> e3-options], [edit interfaces <i>interface-name</i> t1-options], [edit interfaces <i>interface-name</i> t3-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.
<b>Description</b>	For DS0, E1, E3, T1, and T3 interfaces, configure the interface to share the transmission of start and end flags.
<div>  <p><b>NOTE:</b> When configuring E1 or T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the start-end-flag statement must be included at the [edit interfaces e1-<i>fpc/pic/port</i>] or [edit interfaces t1-<i>fpc/pic/port</i>] hierarchy level as appropriate.</p> </div>	
<b>Options</b>	filler—Wait two idle cycles between the start and end flags.  shared—Share the transmission of the start and end flags. This is the default.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring E1 Start and End Flags</i></li> <li>• <i>Configuring the E3 Start and End Flags</i></li> <li>• <i>Configuring T1 Start and End Flags</i></li> <li>• <i>Configuring T3 Start and End Flags</i></li> </ul>

## static-interface

---

<b>Syntax</b>	<code>static-interface <i>interface-name</i>;</code>
<b>Hierarchy Level</b>	[edit protocols pppoe service-name-tables <i>table-name</i> service <i>service-name</i> <b>agent-specifier</b> <i>aci circuit-id-string</i> <i>ari remote-id-string</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.2.
<b>Description</b>	<p>Reserve the specified static PPPoE interface for use only by the PPPoE client with matching agent circuit identifier (ACI) and agent remote identifier (ARI) information. You can specify only one static interface per ACI/ARI pair configured for a named service entry, <b>empty</b> service entry, or <b>any</b> service entry in the PPPoE service name table.</p> <p>The static interface associated with an ACI/ARI pair takes precedence over the general pool of static interfaces associated with the PPPoE underlying interface.</p> <p>If you include the <b>static-interface</b> statement in the configuration, you cannot also include either the <b>dynamic-profile</b> statement or the <b>routing-instance</b> statement. The <b>dynamic-profile</b>, <b>routing-instance</b>, and <b>static-interface</b> statements are mutually exclusive for ACI/ARI pair configurations.</p>
<b>Options</b>	<b><i>interface-name</i></b> —Name of the static PPPoE interface reserved for use by the PPPoE client with matching ACI/ARI information. Specify the interface in the format <b>pp0.logical</b> , where <b>logical</b> is a logical unit number from 0 through 16385 for static interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring PPPoE Service Name Tables</i></li><li>• <i>Reserving a Static PPPoE Interface for Exclusive Use by a PPPoE Client</i></li></ul>

---

## static-tei-val

---

<b>Syntax</b>	<code>static-tei-val value;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>br-pim</i> /0/port <a href="#">isdn-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For J Series Services Routers only. Statically configure the Terminal Endpoint Identifier (TEI) value. The TEI value represents any ISDN-capable device attached to an ISDN network that is the terminal endpoint. TEIs are used to distinguish between several different devices using the same ISDN links.
<b>Options</b>	<b>value</b> —Value between 0 through 63.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## supplicant

---

<b>Syntax</b>	supplicant <i>single</i> ;
<b>Hierarchy Level</b>	[edit protocols dot1x authenticator interface <i>interface-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	<p>Specify the supplicant mode. Only single mode is supported.</p> <p>This option will authenticate only the first client that connects to a port. All other clients that connect later (802.1x compliant or non-compliant) will be allowed free access on that port without any further authentication. If the first authenticated client logs out, all other users are locked out until a client authenticates again.</p>
<b>Options</b>	<b>single</b> —Sets single mode.
<b>Required Privilege Level</b>	<b>interface</b> —To view this statement in the configuration. <b>interface-control</b> —To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li><li>• <a href="#">authenticator on page 448</a></li><li>• <a href="#">dot1x on page 543</a></li><li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li></ul>

---

## supplicant-timeout

---

<b>Syntax</b>	<code>supplicant-timeout <i>seconds</i>;</code>
<b>Hierarchy Level</b>	[edit protocols dot1x authenticator interface <i>interface-id</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Specify the number of seconds the port waits for a response when relaying a request from the authentication server to the client before resending the request.
<b>Options</b>	<b><i>seconds</i></b> —Specify the number of seconds the port waits for the supplicant timeout. <b>Range:</b> 1 through 60 seconds <b>Default:</b> 30 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li><li>• <a href="#">authenticator on page 448</a></li><li>• <a href="#">dot1x on page 543</a></li><li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li></ul>

## swap

---

<b>Syntax</b>	swap;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches. Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.
<b>Description</b>	<p>Specify the VLAN rewrite operation to replace a VLAN tag. The outer VLAN tag of the frame is overwritten with the user-specified VLAN tag information.</p> <p>On MX Series routers, you can enter this statement on Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, aggregated Ethernet using Gigabit Ethernet IQ interfaces, and 100-Gigabit Ethernet Type 5 PIC with CFP. On EX Series switches, you can enter this statement on Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Rewriting the VLAN Tag on Tagged Frames</i></li><li>• <i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support (CLI Procedure)</i></li></ul>

## swap-push

<b>Syntax</b>	swap-push;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>input-vlan-map</b> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>output-vlan-map</b> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	<p>Specify the VLAN rewrite operation to replace the outer VLAN tag of the frame with a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</p> <p>You can use this statement on Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, and for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and 100-Gigabit Ethernet Type 5 PIC with CFP.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Rewriting a VLAN Tag and Adding a New Tag</i></li> </ul>

## swap-swap

---

<b>Syntax</b>	swap-swap;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">input-vlan-map</a> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">output-vlan-map</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">input-vlan-map</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">output-vlan-map</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.1. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	<p>Specify the VLAN rewrite operation to replace both the inner and the outer VLAN tags of the frame with a user-specified VLAN tag value.</p> <p>You can use this statement on Gigabit Ethernet IQ, IQ2 and IQ2-E interfaces, 10-Gigabit Ethernet LAN/WAN PIC, for aggregated Ethernet interfaces using Gigabit Ethernet IQ2 and IQ2-E or 10-Gigabit Ethernet PICs on MX Series routers, and for 100-Gigabit Ethernet Type 5 PIC with CFP.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Rewriting the Inner and Outer VLAN Tags</i></li></ul>

## switch-options

---

<b>Syntax</b>	switch-options { switch-port <i>port-number</i> { ( <a href="#">auto-negotiation</a>   no-auto-negotiation); <a href="#">speed</a> (10m   100m   1g); <a href="#">link-mode</a> (full-duplex   half-duplex); } }
<b>Hierarchy Level</b>	[edit interfaces <i>ge-pim</i> /0/0]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	Configuration of the physical port characteristics is done under the single physical interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## switch-port

---

**Syntax** `switch-port port-number {  
     (auto-negotiation | no-auto-negotiation);  
     speed (10m | 100m | 1g);  
     link-mode (full-duplex | half-duplex);  
 }`

**Hierarchy Level** [edit interfaces *ge-pim/0/0* [switch-options](#)]

**Release Information** Statement introduced in Junos OS Release 8.4.

**Description** Configuration of the physical port characteristics, done under the single physical interface.

**Default** Autonegotiation is enabled by default. If the link speed and duplex are also configured, the interfaces use the values configured as the desired values in the negotiation.

**Options** *port-number*—Ports are numbered 0 through 5 on the 6-port Gigabit Ethernet uPIM, 0 through 7 on the 8-port Gigabit Ethernet uPIM, and 0 through 15 on the 16-port Gigabit Ethernet uPIM.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

## switch-type

---

<b>Syntax</b>	switch-type (att5e   etsi   ni1   ntdms-100)
<b>Hierarchy Level</b>	[edit interfaces br-pim/0/port isdn-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For J Series Services Routers only. Configure the ISDN variant supported.
<b>Options</b>	<p><b>att5e</b>—AT&amp;T switch variant.</p> <p><b>etsi</b>—European Telecommunications Standards Institute switch variant.</p> <p><b>ni1</b>—National ISDN 1 switch variant.</p> <p><b>ntdms-100</b>—Northern Telecom DMS-100.</p> <p><b>ntt</b>—NTT Group switch for Japan.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

---

## switching-mode

---

<b>Syntax</b>	switching-mode (bidirectional   unidirectional);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <b>aps</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For unchannelized OC3, OC12, and OC48 SONET/SDH interfaces on T Series routers only, configure the interface to interoperate with SONET/SDH line-terminating equipment (LTE) that is provisioned for unidirectional linear APS in 1+1 architecture.
<b>Default</b>	If the <b>switching-mode</b> statement is not configured, the mode is bidirectional, and the interface does not interoperate with a unidirectional SONET/SDH LTE.
<b>Options</b>	<b>bidirectional</b> —Support bidirectional mode only.  <b>unidirectional</b> —Interoperate with a SONET/SDH LTE provisioned for unidirectional mode.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Switching Mode</i></li></ul>

## symbol-period

---

<b>Syntax</b>	<code>symbol-period count;</code>
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile event</a> , <a href="#">link-event-rate</a> ], [edit protocols <a href="#">oam link-fault-management interface</a> <i>interface-name</i> <a href="#">event-thresholds</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4.
<b>Description</b>	<p>Configure the threshold for sending symbol period events or taking the action specified in the action profile.</p> <p>A symbol error is any symbol code error on the underlying physical layer. The symbol period threshold is reached when the number of symbol errors reaches the configured value within the period window. The default period window is the number of symbols that can be transmitted on the underlying physical layer in 1 second. The window is not configurable.</p>
<b>Options</b>	<p><b>count</b>—Threshold count for symbol period events.</p> <p><b>Range:</b> 0 through 100</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Threshold Values for Local Fault Events on an Interface</i></li><li>• <i>Configuring Threshold Values for Fault Events in an Action Profile</i></li></ul>

## syslog (Interfaces)

<b>Syntax</b>	<pre> syslog {     host hostname {         facility-override facility-name;         log-prefix prefix-number;         services priority-level;     } } </pre>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>interface-name</i> <a href="#">services-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For adaptive services interfaces, configure generation of system log messages for the service set. System log information is passed to the kernel for logging in the <b>/var/log</b> directory. Any values configured in the service set definition override these values.
<b>Options</b>	The remaining statements are explained separately. See <a href="#">CLI Explorer</a> .
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## syslog (Monitoring)

<b>Syntax</b>	(syslog   no-syslog);
<b>Hierarchy Level</b>	[edit <a href="#">interfaces</a> <i>mo-fpc/pic/port</i> <a href="#">multiservice-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>System logging is enabled by default. The system log information of the Monitoring Services PIC is passed to the kernel for logging in the <b>/var/log</b> directory.</p> <ul style="list-style-type: none"> <li>• <b>syslog</b>—Enable PIC system logging.</li> <li>• <b>no-syslog</b>—Disable PIC system logging.</li> </ul>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Multiservice Physical Interface Properties on page 170</a></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## syslog (OAM Action)

---

<b>Syntax</b>	syslog;
<b>Hierarchy Level</b>	[edit protocols <a href="#">oam ethernet link-fault-management action-profile action</a> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 8.5 for T, M, MX and ACX Series routers, SRX Series firewalls and EX Series switches.</p> <p>Statement introduced in Junos OS Release 9.4 for EX Series switches and NFX Series devices.</p>
<b>Description</b>	<p>Generate a syslog message for the Ethernet Operation, Administration, and Management (OAM) event.</p> <p>Generate a system log message for the Ethernet Operation, Administration, and Maintenance (OAM) link fault management (LFM) event.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p> <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Specifying the Actions to Be Taken for Link-Fault Management Events</i></li><li>• <i>Configuring Ethernet OAM Link Fault Management (CLI Procedure)</i></li></ul>

## system-priority

<b>Syntax</b>	<code>system-priority <i>priority</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces aeX aggregated-ether-options lacp]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3. Statement introduced in Junos OS Release 11.4 for EX Series switches. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
<b>Description</b>	<p>Define LACP system priority at the aggregated Ethernet interface level. This system priority value takes precedence over a system priority value configured at the global <b>[edit chassis]</b> hierarchy level.</p> <p>The device with the lower system priority value determines which links between LACP partner devices are active and which are in standby for each LACP group. The device on the controlling end of the link uses port priorities to determine which ports are bundled into the aggregated bundle and which ports are put in standby mode. Port priorities on the other device (the noncontrolling end of the link) are ignored. In priority comparisons, numerically lower values have higher priority. Therefore, the system with the numerically lower value (higher priority value) for LACP system priority becomes the controlling system. If both devices have the same LACP system priority (for example, they are both configured with the default setting of 127), the device MAC address determines which switch is in control.</p>
<b>Options</b>	<p><b>priority</b>—Priority for the aggregated Ethernet system. A smaller value indicates a higher priority.</p> <p><b>Range:</b> 0 through 65535</p> <p><b>Default:</b> 127</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

## t1-options

---

**Syntax**    t1-options {  
              **bert-algorithm** *algorithm*;  
              **bert-error-rate** *rate*;  
              **bert-period** *seconds*;  
              **buildout** *value*;  
              **byte-encoding** (nx56 | nx64);  
              **crc-major-alarm-threshold** (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5);  
              **crc-minor-alarm-threshold** (1e-3 | 5e-4 | 1e-4 | 5e-5 | 1e-5 | 5e-6 | 1e-6);  
              **fcs** (16 | 32);  
              **framing** (esf | sf);  
              **idle-cycle-flag** (flags | ones);  
              **invert-data**;  
              **line-encoding** (ami | b8zs);  
              **loopback** (local | payload | remote);  
              **remote-loopback-respond**;  
              **start-end-flag** (filler | shared);  
              **timeslots** *time-slot-range*;  
              }

**Hierarchy Level**    [edit interfaces *interface-name*]

**Release Information**    Statement introduced before Junos OS Release 7.4.  
                              Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro Routers.

**Description**    Configure T1-specific physical interface properties.  
  
                      The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**    • *T1 Interfaces Overview*

---

## t310

---

<b>Syntax</b>	t310-value <i>seconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>br-pim/0/port</i> isdn-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ISDN interfaces, configure the Q.931-specific timer for T310, in seconds. The Q.931 protocol is involved in the setup and termination of connections.
<b>Options</b>	<b>seconds</b> —Timer value, in seconds. <b>Range:</b> 1 through 65,536 seconds <b>Default:</b> 10 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## t391

---

<b>Syntax</b>	t391 <i>seconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voices interfaces only, set Frame Relay link integrity polling interval.
<b>Options</b>	<b>seconds</b> —Link integrity polling interval. <b>Range:</b> 5 through 30 seconds <b>Default:</b> 10 seconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">n391 on page 797</a></li><li>• <a href="#">n392 on page 798</a></li><li>• <a href="#">n393 on page 799</a></li><li>• <a href="#">t392 on page 1007</a></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## t392

---

<b>Syntax</b>	t392 <i>seconds</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voices interfaces only, set Frame Relay polling verification interval.
<b>Options</b>	<p><b>seconds</b>—Polling verification interval.</p> <p><b>Range:</b> 5 through 30 seconds</p> <p><b>Default:</b> 15 seconds</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">n391 on page 797</a></li> <li>• <a href="#">n392 on page 798</a></li> <li>• <a href="#">n393 on page 799</a></li> <li>• <a href="#">t391 on page 1006</a></li> <li>• <a href="#">timeslots on page 1017</a></li> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## t3-options

---

**Syntax**    t3-options {  
              `atm-encapsulation` (direct | plcp);  
              `bert-algorithm` *algorithm*;  
              `bert-error-rate` *rate*;  
              `bert-period` *seconds*;  
              (`cbit-parity` | no-`cbit-parity`);  
              `compatibility-mode` (digital-link | kentrox | larscom) <subrate *value*>;  
              `fcs` (16 | 32);  
              (`feac-loop-respond` | no-`feac-loop-respond`);  
              `idle-cycle-flag` *value*;  
              (`long-buildout` | no-`long-buildout`);  
              (`loop-timing` | no-`loop-timing`);  
              `loopback` (local | payload | remote);  
              `start-end-flag` *value*;  
              }

**Hierarchy Level**    [edit interfaces *interface-name*]

**Release Information**    Statement introduced before Junos OS Release 7.4.

**Description**    Configure T3-specific physical interface properties, including the properties of DS3 channels on a channelized OC12 interface. The **long-buildout** statement is not supported for DS3 channels on a channelized OC12 interface.

On T3 interfaces, the default encapsulation is PPP.

For ATM1 interfaces, you can configure a subset of E3 options statements.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**    • *T3 Interfaces Overview*

## tag-protocol-id (TPIDs Expected to Be Sent or Received)

<b>Syntax</b>	<code>tag-protocol-id [tpids];</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> <b>gi</b>gether-options <b>e</b>thernet-switch-profile],          [edit interfaces <i>interface-name</i> <b>agg</b>regated-ether-options <b>e</b>thernet-switch-profile],          [edit interfaces <i>interface-name</i> <b>agg</b>regated-ether-options <b>e</b>thernet-switch-profile],          [edit interfaces <i>interface-name</i> ether-options <b>e</b>thernet-switch-profile]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Statement introduced in Junos OS Release 13.2X50-D15 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 14.1X53-D15 for the QFX Series.</p>
<b>Description</b>	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces, aggregated Ethernet with Gigabit Ethernet IQ interfaces, and Gigabit Ethernet PICs with SFPs (except the 10-port Gigabit Ethernet PIC, and the built-in Gigabit Ethernet port on the M7i router), define the TPIDs expected to be sent or received on a particular VLAN. For each Gigabit Ethernet port, you can configure up to eight TPIDs using the <b>tag-protocol-id</b> statement; but only the first four TPIDs are supported on IQ2 and IQ2-E interfaces.</p> <p>For 10-Gigabit Ethernet LAN/WAN PIC interfaces on T Series routers only the default TPID value (<b>0x8100</b>) is supported.</p> <p>For Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces on EX Series switches, define the TPIDs expected to be sent or received on a particular VLAN. The default TPID value is <b>0x8100</b>. Other supported values are <b>0x88a8</b>, <b>0x9100</b>, and <b>0x9200</b>.</p>
<b>Options</b>	<i>tpids</i> —TPIDs to be accepted on the VLAN. Specify TPIDs in hexadecimal.
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Configuring Frames with Particular TPIDs to Be Processed as Tagged Frames</i></li> <li><i>Configuring Q-in-Q Tunneling on EX Series Switches with ELS Support (CLI Procedure)</i></li> </ul>

## tag-protocol-id (TPID to Rewrite)

---

<b>Syntax</b>	<code>tag-protocol-id <i>tpid</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">input-vlan-map</a>],</code> <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <a href="#">output-vlan-map</a>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code><a href="#">input-vlan-map</a>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i></code> <code><a href="#">output-vlan-map</a>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	<p>For Gigabit Ethernet IQ and 10-Gigabit Ethernet IQ2 and IQ2-E interfaces only, configure the outer TPID value. All TPIDs you include in input and output VLAN maps must be among those you specify at the <code>[edit interfaces <i>interface-name</i> <b>gigether-options ethernet-switch-profile tag-protocol-id</b> [ <i>tpids</i> ]]</code> hierarchy level.</p> <p>For 10-Gigabit Ethernet LAN/WAN PIC interfaces on T Series routers the default TPID value (0x8100) is supported.</p>
<b>Default</b>	If the <b>tag-protocol-id</b> statement is not configured, the TPID value is 0x8100.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Inner and Outer TPIDs and VLAN IDs</i></li></ul>

## targeted-broadcast

<b>Syntax</b> (EX Series, MX Series, ACX Series)	<pre>targeted-broadcast {     forward-and-send-to-re;     forward-only; }</pre>
<b>Syntax</b> (QFX Series, OCX1100, EX4600, NFX Series)	targeted-broadcast;
<b>Hierarchy Level</b> (EX Series, MX Series, ACX Series)	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet]
<b>Hierarchy Level</b> (QFX Series, OCX1100, EX4600, NFX Series)	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet], [edit interfaces interface-range <i>interface-range-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> inet]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4 for EX Series switches. Statement introduced in Junos OS Release 10.2. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Specify the IP packets destined for a Layer 3 broadcast address to be forwarded to both an egress interface and the Routing Engine, or to an egress interface only. The packets are broadcast only if the egress interface is a LAN interface.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Default</b>	When this statement is not included, broadcast packets are sent to the Routing Engine only.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Targeted Broadcast on page 272</a></li> <li>• <a href="#">Understanding Targeted Broadcast on page 271</a></li> </ul>

## targeted-distribution (Static Interfaces over Aggregated Ethernet)

---

<b>Syntax</b>	targeted-distribution;
<b>Hierarchy Level</b>	[edit interfaces <b>demux0 unit</b> <i>logical-unit-number</i> ], [edit interfaces <b>pp0 unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.2. Statement introduced in Junos OS Release 13.2R2 for EX Series switches.
<b>Description</b>	Configure egress data for a logical interface to be sent across a single member link in an aggregated Ethernet bundle. A backup link is provisioned and CoS scheduling resources are switched to the backup link in the event that the primary assigned link goes down. The aggregated Ethernet interface must be configured without link protection.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>CoS for PPPoE Subscriber Interfaces Overview</i></li><li>• <i>Configuring the Distribution Type for PPPoE Subscribers on Aggregated Ethernet Interfaces</i></li><li>• <i>Verifying the Distribution of PPPoE Subscribers in an Aggregated Ethernet Interface</i></li><li>• <i>Targeted Traffic Distribution on Aggregated Ethernet Interfaces in a Virtual Chassis</i></li><li>• <i>Configuring Module Redundancy for a Virtual Chassis</i></li><li>• <i>Configuring Chassis Redundancy for a Virtual Chassis</i></li></ul>

---

## tei-option

---

<b>Syntax</b>	tei-option (first-call   power-up);
<b>Hierarchy Level</b>	[edit interfaces <i>br-pim</i> /0/ <i>portisdn</i> -options ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ISDN interfaces, configure when the Terminal Endpoint Identifier (TEI) negotiates with the ISDN provider.
<b>Options</b>	<p><b>first-call</b>—Activation does not occur until the call setup is sent.</p> <p><b>power-up</b>—Activation occurs when the Services Router is powered on.</p> <p><b>Default:</b> power-up</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## terminate (PPPoE Service Name Tables)

---

<b>Syntax</b>	terminate;
<b>Hierarchy Level</b>	[edit protocols pppoe service-name-tables <i>table-name</i> <b>service</b> <i>service-name</i> ], [edit protocols pppoe service-name-tables <i>table-name</i> <b>service</b> <i>service-name</i> <b>agent-specifier</b> <i>aci circuit-id-string ari remote-id-string</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0. Support at [edit protocols pppoe service-name-tables <i>table-name</i> <b>service</b> <i>service-name</i> <b>agent-specifier</b> <i>aci circuit-id-string ari remote-id-string</i> ] hierarchy level introduced in Junos OS Release 10.2.
<b>Description</b>	Direct the router to immediately respond to a PPPoE Active Discovery Initiation (PADI) control packet received from a PPPoE client by sending the client a PPPoE Active Discovery Offer (PADO) packet. The PADO packet contains the name of the access concentrator (router) that can service the client request. The <b>terminate</b> action is the default action for a named service entry, <b>empty</b> service entry, <b>any</b> service entry, or agent circuit identifier/agent remote identifier (ACI/ARI) pair in a PPPoE service name table.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring PPPoE Service Name Tables</i></li></ul>

## then

---

<b>Syntax</b>	then { discard; }
<b>Hierarchy Level</b>	[edit firewall hierarchical-policer aggregate], [edit firewall hierarchical-policer premium]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	On M40e, M120, and M320 (with FFPC and SFPC) edge routers and T320, T640, and T1600 core routers with Enhanced Intelligent Queuing (IQE) PICs, discard packets when a specified bandwidth or burst limits for an aggregate level of a hierarchical policer is reached.
<b>Options</b>	<b>discard</b> —Discard packets if condition is met.
<b>Required Privilege Level</b>	firewall—To view this statement in the configuration. firewall-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Applying Policers on page 226</a></li> <li>• <i>Class of Service Feature Guide for Routing Devices and EX9200 Switches</i></li> </ul>

## threshold

---

<b>Syntax</b>	<code>threshold <i>bytes</i>;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i>]</code>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Specify the bucket threshold, which controls the burstiness of the leaky bucket mechanism. The larger the value, the more bursty the traffic, which means that over a very short amount of time, the interface can receive or transmit close to line rate, but the average over a longer time is at the configured bucket rate.
<b>Options</b>	<p><b>bytes</b>—Maximum size, in bytes, for traffic bursts. For ease of entry, you can enter <i>number</i> either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000). For example, the entry <b>threshold 2k</b> corresponds to a threshold of 2000 bytes.</p> <p><b>Range:</b> 0 through 65,535 bytes</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 156</a></li></ul>

## timeslots

**Syntax** `timeslots time-slot-range;`

**Hierarchy Level** [edit interfaces *e1-fpc/pic/port*],  
[edit interfaces *t1-fpc/pic/port*],  
[edit interfaces *interface-name* **e1-options**],  
[edit interfaces *interface-name* **partition** *partition-number*],  
[edit interfaces *interface-name* **t1-options**]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For E1 and T1 interfaces, allocate the specific time slots by number.



**NOTE:** When configuring E1 or T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the `timeslots` statement must be included at the [edit interfaces *e1-fpc/pic/port*] or [edit interfaces *t1-fpc/pic/port*] hierarchy level as appropriate.

**Options** *time-slot-range*—Actual time slot numbers allocated:

**Range:** Ranges vary by interface type and configuration option as follows:

- 1 through 24 for T1 interfaces (0 is reserved)
- 1 through 31 for 4-port E1 PICs (0 is reserved)
- 1 through 31 for NxDS0 interfaces (0 is reserved)
- 2 through 32 for 10-port Channelized E1 and 10-port Channelized E1 IQ PICs (1 is reserved)
- 2 through 32 for the setting under **e1-options** with IQE PICs (1 is reserved) (when creating fractional E1)
- 1 through 31 for the setting under **partition** with IQE PICs (0 is reserved) (when creating NxDS0)



**NOTE:** When creating fractional E1 interfaces only, if you connect a 4-port E1 PIC interface to a device that uses time slot numbering from 2 through 32, you must subtract 1 from the configured number of time slots.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

- Related Documentation**
- *Configuring Fractional E1 IQ and IQE Interfaces*
  - *Configuring Fractional T1 IQ and IQE Interfaces*
  - *Configuring Fractional E1 Time Slots*
  - *Configuring Fractional T1 Time Slots*
  - *Configuring a Channelized T1/E1 Interface to Drop and Insert Time Slots*

---

## tm

---

<b>Syntax</b>	tm (ignore   normal   require);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options dce-options</a> ], [edit interfaces <i>interface-name</i> <a href="#">serial-options dte-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For EIA-530 interfaces only, configure the from-DCE signal, test-mode (TM).
<b>Options</b>	<p><b>ignore</b>—The from-DCE signal is ignored.</p> <p><b>normal</b>—Normal TM signal handling as defined by the TIA/EIA Standard 530.</p> <p><b>require</b>—The from-DCE signal must be asserted.</p> <p><b>Default:</b> normal</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring the Serial Signal Handling on page 344</a></li></ul>

---

## tm-polarity

---

<b>Syntax</b>	tm-polarity (negative   positive);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure TM signal polarity.
<b>Options</b>	<b>negative</b> —Negative signal polarity. <b>positive</b> —Positive signal polarity. <b>Default:</b> positive
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring Serial Signal Polarities on page 347</a></li></ul>

## traceoptions (Individual Interfaces)

---

<b>List of Syntax</b>	<a href="#">Syntax (Individual interfaces with PTX Series, EX Series, ACX Series) on page 1020</a> <a href="#">Syntax (Individual interfaces with QFX Series, OCX1100, EX4600, NFX Series) on page 1020</a> <a href="#">Syntax (OAMLFM with EX Series, QFX Series, NFX Series) on page 1020</a> <a href="#">Syntax (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series) on page 1020</a>
<b>Syntax (Individual interfaces with PTX Series, EX Series, ACX Series)</b>	<pre>traceoptions {   file <i>filename</i> &lt;files <i>name</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;   flag <i>flag</i>;   match; }</pre>
<b>Syntax (Individual interfaces with QFX Series, OCX1100, EX4600, NFX Series)</b>	<pre>traceoptions {   flag <i>flag</i>; }</pre>
<b>Syntax (OAMLFM with EX Series, QFX Series, NFX Series)</b>	<pre>traceoptions {   file <i>filename</i> &lt;files <i>number</i>&gt; &lt;match <i>regex</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable       no-world-readable&gt;;   flag <i>flag</i> ;   no-remote-trace; }</pre>
<b>Syntax (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series)</b>	<pre>traceoptions {   file &lt;<i>filename</i>&gt; &lt;files <i>number</i>&gt; &lt;match <i>regular-expression</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable       no-world-readable&gt;;   flag <i>flag</i> &lt;disable&gt;;   no-remote-trace; }</pre>
<b>Hierarchy Level (Individual interfaces with PTX Series, EX Series, ACX Series, QFX Series, OCX1100, EX4600, NFX Series)</b>	[edit interfaces <i>interface-name</i> ]
<b>Hierarchy Level (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series)</b>	[edit interfaces]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in JUNOS Release 10.2 for EX Series switches.

Statement introduced in Junos OS Release 11.1 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Define tracing operations for individual interfaces.

To specify more than one tracing operation, include multiple **flag** statements.

The interfaces **traceoptions** statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system **syslog** file in the directory */var/log/dcd*.

On EX Series, QFX Series, and NFX Series platforms, configure tracing options the link fault management.

On ACX Series, SRX Series, MX Series, M Series, and T Series platforms define tracing operations for the interface process (dcd).

**Default** If you do not include this statement, no interface-specific tracing operations are performed.

**Options** [Table 54 on page 1023](#) lists options for traceoption command for the following platforms:

Table 54: Options for traceoptions

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
<b>file filename</b>	—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> . By default, interface process tracing output is placed in the file.		—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> .	—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> . By default, interface process tracing output is placed in the file <code>dcd</code> .
<b>files number</b>	—(Optional) Maximum number of trace files. When a trace file named <code>trace-file</code> reaches its maximum size, it is renamed <b>trace-file.0</b> , then <b>trace-file.1</b> , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.		—(Optional) Maximum number of trace files. When a trace file named <code>trace-file</code> reaches its maximum size, it is renamed <code>trace-file.0</code> , then <code>trace-file.1</code> , and so on, until the maximum <code>xk</code> to specify KB, <code>xm</code> to specify MB, or <code>xg</code> to specify GB number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <code>size</code> option.	—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b> , then <b>trace-file.1</b> , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.  If you specify a maximum number of files, you also must specify a maximum file size with the <code>size</code> option.  <i>Range: 2 through 1000</i>  <i>Default: 3 files</i>
<b>flag</b>	—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. The following are the interface-specific tracing options. <ul style="list-style-type: none"> <li><b>all</b>—All interface tracing operations</li> <li><b>event</b>—Interface events</li> <li><b>ipc</b>—Interface interprocess</li> </ul>	—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. The following are the interface-specific tracing options. <ul style="list-style-type: none"> <li><b>all</b>—All interface tracing operations</li> <li><b>event</b>—Interface events</li> <li><b>ipc</b>—Interface interprocess</li> </ul>	—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. You can include the following flags: <ul style="list-style-type: none"> <li><b>action-profile</b>—Trace action profile invocation events.</li> <li><b>all</b>—Trace all events.</li> <li><b>configuration</b>—Trace configuration events.</li> <li><b>protocol</b>—Trace</li> </ul>	—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. You can include the following flags: <ul style="list-style-type: none"> <li><b>all</b></li> <li><b>change-events</b>—Log changes that produce configuration events</li> <li><b>config-states</b>—Log the configuration</li> </ul>

Table 54: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
	communication (IPC) messages <ul style="list-style-type: none"> <li>• <b>media</b>—Interface media changes</li> <li>• <b>q921</b>—Trace ISDN Q.921 frames</li> <li>• <b>q931</b>—Trace ISDN Q.931 frames</li> </ul>	communication (IPC) messages <ul style="list-style-type: none"> <li>• <b>media</b>—Interface media changes</li> <li>• <b>q921</b>—Trace ISDN Q.921 frames</li> <li>• <b>q931</b>—Trace ISDN Q.931 frames</li> </ul>	protocol processing events. <ul style="list-style-type: none"> <li>• <b>routing socket</b>—Trace routing socket events.</li> </ul>	state machine changes <ul style="list-style-type: none"> <li>• <b>kernel</b>—Log configuration IPC messages to kernel</li> <li>• <b>kernel-detail</b>—Log details of configuration messages to kernel</li> </ul>
<b>match</b>	—(Optional) Regular expression for lines to be traced.		—(Optional) Refine the output to log only those lines that match the given regular expression.	
<b>size size</b>	—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches this size, it is renamed <b>trace-file.0</b> . When the <b>trace-file</b> again reaches its maximum size, <b>trace-file.0</b> is renamed <b>trace-file.1</b> and <b>trace-file</b> is renamed <b>trace-file.0</b> . This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.		—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b> , then <b>trace-file.1</b> , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <b>files</b> option. <p><i>Syntax:</i> <b>xk</b> to specify KB, <b>xm</b> to specify MB, or <b>xg</b> to specify GB</p> <p><i>Range:</i> 10 KB through 1 GB</p> <p><i>Default:</i> 128 KB</p> <p><i>Default:</i> If you do not include this option, tracing output is appended to an existing trace file.</p>	

Table 54: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
				<p>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches this size, it is renamed <b>trace-file.0</b>. When the <b>trace-file</b> again reaches its maximum size, <b>trace-file.0</b> is renamed <b>trace-file.1</b> and <b>trace-file</b> is renamed <b>trace-file.0</b>. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten. If you specify a maximum file size, you also must specify a maximum number of trace files with the <b>files</b> option.</p> <p><i>Syntax:</i> <b>xk</b> to specify kilobytes, <b>xm</b> to specify megabytes, or <b>xg</b> to specify gigabytes</p> <p><i>Range:</i> 10 KB through the maximum file size supported on your router</p> <p><i>Default:</i> 1 MB</p>
<b>no-world-readable</b>	—(Optional) Prevent any user from reading the log file.		—(Optional) Restrict file access to the user who created the file.	—(Optional) Disallow any user to read the log file.
<b>world-readable</b>	—(Optional) Allow any user to read the log file.		—(Optional) Enable unrestricted file access.	—(Optional) Allow any user to read the log file.
<b>disable</b>				

Table 54: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
				—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b> .
no-remote-trace			—(Optional) Disable the remote trace.	-
match <i>regex</i>				—(Optional) Refine the output to include only those lines that match the given regular expression.

**Required Privilege Level**

interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.  
routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

- Related Documentation**
- [Tracing Operations of an Individual Router Interface on page 355](#)
  - *Tracing Operations of an Individual Router or Switch Interface*
  - *Example: Configuring Ethernet OAM Link Fault Management*
  - *Configuring Ethernet OAM Link Fault Management (CLI Procedure)*
  - [Tracing Operations of the Interface Process on page 356](#)

## traceoptions (Individual Interfaces)

<b>List of Syntax</b>	<p>Syntax (Individual interfaces with PTX Series, EX Series, ACX Series) on page 1027</p> <p>Syntax (Individual interfaces with QFX Series, OCX1100, EX4600, NFX Series) on page 1027</p> <p>Syntax (OAMLFM with EX Series, QFX Series, NFX Series) on page 1027</p> <p>Syntax (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series) on page 1027</p>
<b>Syntax (Individual interfaces with PTX Series, EX Series, ACX Series)</b>	<pre>traceoptions {   file <i>filename</i> &lt;files <i>name</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;   flag <i>flag</i>;   match; }</pre>
<b>Syntax (Individual interfaces with QFX Series, OCX1100, EX4600, NFX Series)</b>	<pre>traceoptions {   flag <i>flag</i>; }</pre>
<b>Syntax (OAMLFM with EX Series, QFX Series, NFX Series)</b>	<pre>traceoptions {   file <i>filename</i> &lt;files <i>number</i>&gt; &lt;match <i>regex</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable       no-world-readable&gt;;   flag <i>flag</i> ;   no-remote-trace; }</pre>
<b>Syntax (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series)</b>	<pre>traceoptions {   file &lt;<i>filename</i>&gt; &lt;files <i>number</i>&gt; &lt;match <i>regular-expression</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable       no-world-readable&gt;;   flag <i>flag</i> &lt;disable&gt;;   no-remote-trace; }</pre>
<b>Hierarchy Level (Individual interfaces with PTX Series, EX Series, ACX Series, QFX Series, OCX1100, EX4600, NFX Series)</b>	[edit interfaces <i>interface-name</i> ]
<b>Hierarchy Level (Interface process with ACX Series, SRX Series, MX Series, M Series, T Series)</b>	[edit interfaces]
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p>

Statement introduced in Junos OS Release 9.0 for EX Series switches.

Statement introduced in JUNOS Release 10.2 for EX Series switches.

Statement introduced in Junos OS Release 11.1 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Define tracing operations for individual interfaces.

To specify more than one tracing operation, include multiple **flag** statements.

The interfaces **traceoptions** statement does not support a trace file. The logging is done by the kernel, so the tracing information is placed in the system **syslog** file in the directory */var/log/dcd*.

On EX Series, QFX Series, and NFX Series platforms, configure tracing options the link fault management.

On ACX Series, SRX Series, MX Series, M Series, and T Series platforms define tracing operations for the interface process (dcd).

**Default** If you do not include this statement, no interface-specific tracing operations are performed.

**Options** [Table 54 on page 1023](#) lists options for traceoption command for the following platforms:

Table 55: Options for traceoptions

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
<b>file filename</b>	—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> . By default, interface process tracing output is placed in the file.		—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> .	—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <code>/var/log/dcd</code> . By default, interface process tracing output is placed in the file <code>dcd</code> .
<b>files number</b>	—(Optional) Maximum number of trace files. When a trace file named <code>trace-file</code> reaches its maximum size, it is renamed <b>trace-file.0</b> , then <b>trace-file.1</b> , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.		—(Optional) Maximum number of trace files. When a trace file named <code>trace-file</code> reaches its maximum size, it is renamed <code>trace-file.0</code> , then <code>trace-file.1</code> , and so on, until the maximum <code>xk</code> to specify KB, <code>xm</code> to specify MB, or <code>xg</code> to specify GB number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <code>size</code> option.	—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b> , then <b>trace-file.1</b> , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.  If you specify a maximum number of files, you also must specify a maximum file size with the <code>size</code> option.  <i>Range: 2 through 1000</i>  <i>Default: 3 files</i>
<b>flag</b>	—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. The following are the interface-specific tracing options. <ul style="list-style-type: none"> <li><b>all</b>—All interface tracing operations</li> <li><b>event</b>—Interface events</li> <li><b>ipc</b>—Interface interprocess</li> </ul>	—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. The following are the interface-specific tracing options. <ul style="list-style-type: none"> <li><b>all</b>—All interface tracing operations</li> <li><b>event</b>—Interface events</li> <li><b>ipc</b>—Interface interprocess</li> </ul>	—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. You can include the following flags: <ul style="list-style-type: none"> <li><b>action-profile</b>—Trace action profile invocation events.</li> <li><b>all</b>—Trace all events.</li> <li><b>configuration</b>—Trace configuration events.</li> <li><b>protocol</b>—Trace</li> </ul>	—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. You can include the following flags: <ul style="list-style-type: none"> <li><b>all</b></li> <li><b>change-events</b>—Log changes that produce configuration events</li> <li><b>config-states</b>—Log the configuration</li> </ul>

Table 55: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
	communication (IPC) messages <ul style="list-style-type: none"> <li>• <b>media</b>—Interface media changes</li> <li>• <b>q921</b>—Trace ISDN Q.921 frames</li> <li>• <b>q931</b>—Trace ISDN Q.931 frames</li> </ul>	communication (IPC) messages <ul style="list-style-type: none"> <li>• <b>media</b>—Interface media changes</li> <li>• <b>q921</b>—Trace ISDN Q.921 frames</li> <li>• <b>q931</b>—Trace ISDN Q.931 frames</li> </ul>	protocol processing events. <ul style="list-style-type: none"> <li>• <b>routing socket</b>—Trace routing socket events.</li> </ul>	state machine changes <ul style="list-style-type: none"> <li>• <b>kernel</b>—Log configuration IPC messages to kernel</li> <li>• <b>kernel-detail</b>—Log details of configuration messages to kernel</li> </ul>
<b>match</b>	—(Optional) Regular expression for lines to be traced.		—(Optional) Refine the output to log only those lines that match the given regular expression.	
<b>size size</b>	—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches this size, it is renamed <b>trace-file.0</b> . When the <b>trace-file</b> again reaches its maximum size, <b>trace-file.0</b> is renamed <b>trace-file.1</b> and <b>trace-file</b> is renamed <b>trace-file.0</b> . This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten.		—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b> , then <b>trace-file.1</b> , and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten. If you specify a maximum number of files, you also must specify a maximum file size with the <b>files</b> option. <p><i>Syntax:</i> <b>xk</b> to specify KB, <b>xm</b> to specify MB, or <b>xg</b> to specify GB</p> <p><i>Range:</i> 10 KB through 1 GB</p> <p><i>Default:</i> 128 KB</p> <p><i>Default:</i> If you do not include this option, tracing output is appended to an existing trace file.</p>	

Table 55: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
				<p>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named <b>trace-file</b> reaches this size, it is renamed <b>trace-file.0</b>. When the <b>trace-file</b> again reaches its maximum size, <b>trace-file.0</b> is renamed <b>trace-file.1</b> and <b>trace-file</b> is renamed <b>trace-file.0</b>. This renaming scheme continues until the maximum number of trace files is reached. Then, the oldest trace file is overwritten. If you specify a maximum file size, you also must specify a maximum number of trace files with the <b>files</b> option.</p> <p><i>Syntax:</i> <b>xk</b> to specify kilobytes, <b>xm</b> to specify megabytes, or <b>xg</b> to specify gigabytes</p> <p><i>Range:</i> 10 KB through the maximum file size supported on your router</p> <p><i>Default:</i> 1 MB</p>
<b>no-world-readable</b>	—(Optional) Prevent any user from reading the log file.		—(Optional) Restrict file access to the user who created the file.	—(Optional) Disallow any user to read the log file.
<b>world-readable</b>	—(Optional) Allow any user to read the log file.		—(Optional) Enable unrestricted file access.	—(Optional) Allow any user to read the log file.
<b>disable</b>				

Table 55: Options for traceoptions (continued)

Option	Individual interfaces with PTX Series, ACX Series, EX Series	Individual interfaces with QFX Series, QFabric System, OCX1100, EX4600, NFX Series	Interface Process with OAMLFM with EX Series, QFX Series, NFX Series	Interface process with ACX Series, SRX Series, MX Series, M Series, T Series
				—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b> .
no-remote-trace			—(Optional) Disable the remote trace.	-
match <i>regex</i>				—(Optional) Refine the output to include only those lines that match the given regular expression.

**Required Privilege Level**

interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.  
 routing—To view this statement in the configuration.  
 routing-control—To add this statement to the configuration.

- Related Documentation**
- [Tracing Operations of an Individual Router Interface on page 355](#)
  - [Tracing Operations of an Individual Router or Switch Interface](#)
  - [Example: Configuring Ethernet OAM Link Fault Management](#)
  - [Configuring Ethernet OAM Link Fault Management \(CLI Procedure\)](#)
  - [Tracing Operations of the Interface Process on page 356](#)

## traceoptions (LACP)

---

<b>Syntax</b>	<pre>traceoptions {     file &lt;filename&gt; &lt;files number&gt; &lt;size size&gt; &lt;world-readable   no-world-readable&gt;;     flag flag;     no-remote-trace; }</pre>
<b>Hierarchy Level</b>	[edit protocols lacp]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.6. Statement introduced in Junos OS Release 15.1F4 for PTX Series routers.
<b>Description</b>	Define tracing operations for the LACP protocol.
<b>Default</b>	If you do not include this statement, no LACP protocol tracing operations are performed.
<b>Options</b>	<p><b>filename</b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>/var/log</b>. By default, interface process tracing output is placed in the file <b>lacpd</b>.</p> <p><b>files number</b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the <b>size</b> option.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 3 files</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. You can include the following flags:</p> <ul style="list-style-type: none"><li>• <b>all</b>—All LACP tracing operations</li><li>• <b>configuration</b>—Configuration code</li><li>• <b>packet</b>—Packets sent and received</li><li>• <b>process</b>—LACP process events</li><li>• <b>protocol</b>—LACP protocol state machine</li><li>• <b>routing-socket</b>—Routing socket events</li><li>• <b>startup</b>—Process startup events</li></ul> <p><b>no-world-readable</b>—(Optional) Prevent any user from reading the log file.</p>

**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option:

**Syntax:** **xk** to specify kilobytes, **xm** to specify megabytes, or **xg** to specify gigabytes

**Range:** 10 KB through the maximum file size supported on your router

**Default:** 1 MB

**world-readable**—(Optional) Allow any user to read the log file.

<b>Required Privilege</b>	interface—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Tracing LACP Operations</i></li></ul>

## traceoptions (PPP Process)

---

<b>Syntax</b>	<pre>traceoptions {     file <i>filename</i> &lt;files <i>number</i>&gt; &lt;match <i>regular-expression</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable           no-world-readable&gt;;     flag <i>flag</i>;     level <i>severity-level</i>;     no-remote-trace; }</pre>
<b>Hierarchy Level</b>	[edit protocols ppp]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.5.
<b>Description</b>	<p>Define tracing operations for the PPP process.</p> <p>To specify more than one tracing operation, include multiple <b>flag</b> statements.</p> <p>You cannot specify a separate trace tile. Tracing information is placed in the system <b>syslog</b> file in the directory <b>/var/log/pppd</b>.</p>
<b>Default</b>	If you do not include this statement, no PPPD-specific tracing operations are performed.
<b>Options</b>	<p><b>filename</b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>/var/log</b>. By default, commit script process tracing output is placed in the file <b>pppd</b>. If you include the <b>file</b> statement, you must specify a filename. To retain the default, you can specify <b>eventd</b> as the filename.</p> <p><b>files <i>number</i></b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the <b>size</b> option and a filename.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 3 files</p> <p><b>disable</b>—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b>.</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements. The following are the PPPD-specific tracing options.</p> <ul style="list-style-type: none"><li>• <b>access</b>—Access code</li><li>• <b>address-pool</b>—Address pool code</li></ul>

- **all**—All areas of code
- **auth**—Authentication code
- **chap**—Challenge Handshake Authentication Protocol (CHAP) code
- **config**—Configuration code
- **ifdb**—Interface database code
- **lcp**—LCP state machine code
- **memory**—Memory management code
- **message**—Message processing code
- **mlppp**—Trace MLPPP code
- **ncp**—NCP state machine code
- **pap**—Password Authentication Protocol (PAP) code
- **ppp**—PPP protocol processing code
- **radius**—RADIUS processing code
- **rtsock**—Routing socket code
- **session**—Session management code
- **signal**—Signal handling code
- **timer**—Timer code
- **ui**—User interface code

**match *regex***—(Optional) Refine the output to include only those lines that match the given regular expression.

**size *size***—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named ***trace-file*** reaches this size, it is renamed ***trace-file.0***. When the ***trace-file*** again reaches its maximum size, ***trace-file.0*** is renamed ***trace-file.1*** and ***trace-file*** is renamed ***trace-file.0***. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option and filename.

**Syntax:** *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB

**Range:** 10 KB through 1 GB

**Default:** 128 KB


**world-readable**—(Optional) Enable unrestricted file access.

**non-world-readable**—(Optional) By default, log files can be accessed only by the user who configures the tracing operation. Specify **non-world-readable** to reset the default.

**Required Privilege** interface—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

**Related Documentation** • [Tracing Operations of the pppd Process on page 153](#)

## traceoptions (PPPoE)

<b>Syntax</b>	<pre> traceoptions {     file &lt;filename&gt; &lt;files number&gt; &lt;match regular-expression&gt; &lt;size maximum-file-size&gt;       &lt;world-readable   no-world-readable&gt;;     filter {       aci regular-expression;       ari regular-expression;       service-name regular-expresion;       underlying-interface interface-name;     }     flag flag;     level (all   error   info   notice   verbose   warning);     no-remote-trace; } </pre>
<b>Hierarchy Level</b>	[edit protocols pppoe]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6. Option <b>filter</b> introduced in Junos OS Release 12.3
<b>Description</b>	Define tracing operations for PPPoE processes.
<b>Options</b>	<p><b>file filename</b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>/var/log</b>.</p> <p><b>files number</b>—(Optional) Maximum number of trace files to create before overwriting the oldest one. If you specify a maximum number of files, you also must specify a maximum file size with the <b>size</b> option.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 3 files</p> <p><b>disable</b>—Disable this trace flag.</p> <p><b>filter</b>—Additional filter to refine the output to display particular subscribers. Filtering based on the following subscriber identifiers simplifies troubleshooting in a scaled environment.</p>
	<div>  <p><b>BEST PRACTICE:</b> Due to the complexity of agent circuit identifiers and agent remote identifiers, we recommend that you do not try an exact match when filtering on these options. For service names, searching on the exact name is appropriate, but you can also use a regular expression with that option.</p> </div>
	<ul style="list-style-type: none"> <li>• <b>aci regular-expression</b>—Regular expression to match the agent circuit identifier provided by PPPoE client.</li> </ul>

- **ari *regular-expression***—Regular expression to match the agent remote identifier provided by PPPoE client.
- **service *regular-expression***—Regular expression to match the name of PPPoE service.
- **underlying-interface *interface-name***—Name of a PPPoE underlying interface. You cannot use a regular expression for this filter option.

**flag *flag***—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements. You can include the following flags:

- **all**—Trace all operations.
- **config**—Trace configuration events.
- **events**—Trace events.
- **gres**—Trace GRES events.
- **init**—Trace initialization events.
- **interface-db**—Trace interface database operations.
- **memory**—Trace memory processing events.
- **protocol**—Trace protocol events.
- **rtsock**—Trace routing socket events.
- **session-db**—Trace connection events and flow.
- **signal**—Trace signal operations.
- **state**—Trace state handling events.
- **timer**—Trace timer processing.
- **ui**—Trace user interface processing.

**level**—Level of tracing to perform. You can specify any of the following levels:

- **all**—Match all levels.
- **error**—Match error conditions.
- **info**—Match informational messages.
- **notice**—Match notice messages about conditions requiring special handling.
- **verbose**—Match verbose messages.
- **warning**—Match warning messages.

**Default:** error

**match *regular-expression***—(Optional) Refine the output to include lines that contain the regular expression.

**no-remote-trace**—Disable remote tracing.

**no-world-readable**—(Optional) Disable unrestricted file access.

**size** *maximum-file-size*—(Optional) Maximum size of each trace file. By default, the number entered is treated as bytes. Alternatively, you can include a suffix to the number to indicate kilobytes (KB), megabytes (MB), or gigabytes (GB). If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option.

**Syntax:** **size***k* to specify KB, **size***m* to specify MB, or **size***g* to specify GB

**Range:** 10240 through 1073741824

**Default:** 128 KB

**world-readable**—(Optional) Enable unrestricted file access.

**Required Privilege Level** trace—To view this statement in the configuration.  
trace-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring PPPoE Service Name Tables*
- *Tracing PPPoE Operations*

## translate-discard-eligible

**Syntax** (translate-discard-eligible | no-translate-discard-eligible);

**Hierarchy Level** [edit interfaces *interface-name* **unit** *logical-unit-number* **family** *ccc*],  
[edit logical-systems *logical-system-name* interfaces *interface-name* **unit** *logical-unit-number* **family** *ccc*]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** For interfaces with encapsulation type Frame Relay CCC, enable or disable translation of Frame Relay discard eligible (DE) control bits.

**Default** DE bit translation is disabled.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Frame Relay Control Bit Translation*

## translate-fecn-and-becn

---

<b>Syntax</b>	(translate-fecn-and-becn   no-translate-fecn-and-becn);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> ccc], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> ccc]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For interfaces with encapsulation type Frame Relay CCC, enable or disable translation of Frame Relay forward explicit congestion notification (FECN) control bits and Frame Relay backward explicit congestion notification (BECN) control bits.
<b>Default</b>	FECN and BECN bit translation is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Frame Relay Control Bit Translation</i></li></ul>

## translate-plp-control-word-de

---

<b>Syntax</b>	translate-plp-control-word-de
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>family</b> ccc]
<b>Release Information</b>	Statement introduced before Junos OS Release 11.1.
<b>Description</b>	For the interfaces with encapsulation type Frame Relay CCC, classify and rewrite the control word discard eligibility (DE) bit based on the packet loss priority (PLP).
<b>Default</b>	PLP bit translation is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Frame Relay Control Bit Translation</i></li><li>• <i>frame-relay-de</i></li></ul>

## transmit-bucket

---

<b>Syntax</b>	transmit-bucket { <code>overflow</code> discard; <code>rate</code> <i>percentage</i> ; <code>threshold</code> <i>bytes</i> ; }
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Set parameters for the transmit leaky bucket, which specifies what percentage of the interface's total capacity can be used to transmit packets.</p> <p>For each DS3 channel in a channelized OC12 interface, you can configure a unique transmit bucket.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring Receive and Transmit Leaky Bucket Properties to Reduce Network Congestion on page 156</a></li> <li>• <a href="#">receive-bucket on page 922</a></li> </ul>

## transmit-clock

---

<b>Syntax</b>	transmit-clock invert;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">serial-options</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the transmit clock signal.
<b>Options</b>	<code>invert</code> —Shift the clock phase 180 degrees.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring the Serial Clocking Mode on page 342</a></li> </ul>

## transmit-period

---

<b>Syntax</b>	<code>transmit-period <i>seconds</i>;</code>
<b>Hierarchy Level</b>	<code>[edit protocols dot1x authenticator interface <i>interface-id</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.3.
<b>Description</b>	Set the number of seconds the port waits before retransmitting the initial EAPOL PDUs to the client.
<b>Options</b>	<p><b><i>seconds</i></b>—The number of seconds the port waits before retransmitting the initial EAPOL PDUs to the client.</p> <p><b>Range:</b> 1 through 65,535 seconds</p> <p><b>Default:</b> 30 seconds</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>IEEE 802.1x Port-Based Network Access Control Overview</i></li><li>• <a href="#">authenticator on page 448</a></li><li>• <a href="#">dot1x on page 543</a></li><li>• <a href="#">interface (IEEE 802.1x) on page 682</a></li></ul>

## transmit-weight (ATM2 IQ CoS Forwarding Class)


<b>Syntax</b>	transmit-weight (cells <i>number</i>   percent <i>number</i> );
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> atm-options scheduler-maps <i>map-name</i> forwarding-class <i>class-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, assign a transmission weight to a forwarding class.
<b>Default</b>	95 percent for queue 0, 5 percent for queue 3.
<b>Options</b>	<p><b>percent <i>percent</i></b>—Transmission weight of the forwarding class as a percentage of the total bandwidth.  <b>Range:</b> 5 through 100</p> <p><b>cells <i>number</i></b>—Transmission weight of the forwarding class as a number of cells.  <b>Range:</b> 0 through 32,000</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li> </ul>

## transmit-weight (ATM2 IQ Virtual Circuit)

---

<b>Syntax</b>	<code>transmit-weight <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For ATM2 IQ PICs only, configure the transmission weight.</p> <p>Each VC is serviced in weighted round robin (WRR) mode. When VCs have data to send, they send the number of cells equal to their weight before passing control to the next active VC. This allows proportional bandwidth sharing between multiple VCs within a rate-shaped VP tunnel. VP tunnels are not supported on multipoint interfaces.</p>
<b>Options</b>	<p><b><i>number</i></b>—Number of cells a VC sends before passing control to the next active VC within a VP tunnel.</p> <p><b>Range:</b> 1 through 32,767</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring the ATM2 IQ Transmission Weight</i></li></ul>

## traps

<b>Syntax</b>	(traps   no-traps);
<b>Hierarchy Level (ACX Series, MX Series, T Series, M Series, SRX Series, EX Series)</b>	<p>[edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i>],</p> <p>[edit interfaces <i>interface-name</i>],</p> <p>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>],</p> <p>[edit interfaces interface-range <i>name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i>]</p>
<b>Hierarchy Level (QFX Series, EX4600)</b>	<p>[edit interfaces <i>interface-name</i>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</p> <p>[edit interfaces interface-range <i>interface-range-name</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers.</p> <p>Support at the [edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i>] hierarchy level introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management.</p>
<b>Description</b>	<p>Enable or disable the sending of Simple Network Management Protocol (SNMP) notifications when the state of the connection changes.</p> <p>(Enhanced subscriber management for MX Series routers) To enable SNMP notifications, you must first configure the <b>interface-mib</b> statement at the [edit dynamic-profiles <i>profile-name</i> interfaces <i>interface-name</i>] hierarchy level. If <b>interface-mib</b> is not configured, the <b>traps</b> statement has no effect.</p>
<div>  <p><b>BEST PRACTICE:</b> To achieve maximum performance when enhanced subscriber management is enabled, we recommend that you <i>not</i> enable SNMP notifications on all dynamic subscriber interfaces.</p> </div>	
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Enabling or Disabling SNMP Notifications on Physical Interfaces on page 171</a></li> <li>• <a href="#">Enabling or Disabling SNMP Notifications on Logical Interfaces on page 200</a></li> </ul>

## trigger

---

<b>Syntax</b>	<pre>trigger {     defect ignore;     defect <b>hold-time</b> up <i>milliseconds</i> down <i>milliseconds</i>; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>sonet-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM over SONET/SDH, SONET/SDH interfaces, and 10-Gigabit Ethernet interfaces in WAN PHY mode, configure SONET/SDH defect triggers to be ignored.
<b>Default</b>	If you do not include this statement, all SONET/SDH defect triggers are honored.
<b>Options</b>	<p><b>defect</b>—Defect to ignore or hold. It can be one of the following:</p> <ul style="list-style-type: none"><li>• <b>ais-l</b>—Line alarm indication signal</li><li>• <b>ais-p</b>—Path alarm indication signal</li><li>• <b>ber-sd</b>—Bit error rate signal degrade</li><li>• <b>ber-sf</b>—Bit error rate signal fault</li><li>• <b>locd</b> (ATM only)—Loss of cell delineation</li><li>• <b>lof</b>—Loss of frame</li><li>• <b>lol</b>—PHY loss of light</li><li>• <b>lop-p</b>—Path loss of pointer</li><li>• <b>los</b>—Loss of signal</li><li>• <b>pll</b>—PHY phase-locked loop out of lock</li><li>• <b>plm-p</b>—Path payload (signal) label mismatch</li><li>• <b>rfi-l</b>—Line remote failure indication</li><li>• <b>rfi-p</b>—Path remote failure indication</li><li>• <b>uneq-p</b>—Path unequipped</li></ul> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring SONET/SDH Defect Triggers</i></li></ul>

---

## trigger-link-failure

---

<b>Syntax</b>	[trigger-link-failure <i>interface-name</i> ];
<b>Hierarchy Level</b>	[edit interfaces lsq- <i>fpc/pic/port</i> lsq-failure-options]
<b>Release Information</b>	Statement introduced in Junos OS Release 7.4.
<b>Description</b>	List of SONET interfaces connected to the LSQ interface that can implement Automatic Protection Switching (APS) if the LSQ PIC fails.
<b>Options</b>	<i>interface-name</i> —Name of SONET interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## trunk-bandwidth

---

<b>Syntax</b>	<code>trunk-bandwidth rate;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For ATM2 IQ interfaces configured to use Layer 2 circuit trunk mode, configure a scheduler so that unused bandwidth from any inactive trunk is proportionally shared among the active trunks.</p> <p>During congestion, each trunk receives a proportional share of the leftover bandwidth, thus minimizing the latency on each trunk.</p>
<b>Options</b>	<p><b>rate</b>—Peak rate, in bits per second (bps) or cells per second (cps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000). You can also specify a value in cells per second by entering a decimal number followed by the abbreviation <b>c</b>; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p> <p><b>Range:</b> 1,000,000 through 542,526,792 bps</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Layer 2 Circuit Trunk Mode Scheduling Overview</i></li></ul>

## trunk-id

---

<b>Syntax</b>	<code>trunk-id <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces with ATM CCC cell-relay encapsulation, configure the trunk identification number.  When you associate a trunk ID number with a logical interface, you are in effect specifying the interfaces that are allowed to send ATM traffic over an LSP.
<b>Options</b>	<b>number</b> —A valid trunk identifier. <b>Range:</b> For UNI mode, 0 through 7. For NNI mode, 0 through 31.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Layer 2 Circuit Transport Mode</i></li> </ul>

## ttl

---


<b>Syntax</b>	<code>ttl <i>value</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>number</i> <b>tunnel</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4
<b>Description</b>	Set the time-to-live value bit in the header of the outer IP packet.
<b>Options</b>	<b>value</b> —Time-to-live value. <b>Range:</b> 0 through 255 <b>Default:</b> 64
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li> </ul>

## tunnel

---

<b>Syntax</b>	<pre>tunnel {     backup-destination address;     destination address;     key number;     routing-instance {         destination routing-instance-name;     }     source source-address;     ttl number; }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Configure a tunnel. You can use the tunnel for unicast and multicast traffic or just for multicast traffic. You can also use tunnels for encrypted traffic or VPNs.</p> <p>The remaining statements are explained separately. See <a href="#">CLI Explorer</a>.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <i>Junos OS VPNs Library for Routing Devices</i></li></ul>

## underlying-interface

<b>Syntax</b>	<code>underlying-interface <i>interface-name</i>;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces pp0 unit <i>logical-unit-number</i> <a href="#">pppoe-options</a>],          [edit interfaces demux0 unit <i>logical-unit-number</i> <a href="#">demux-options</a>],          [edit logical-systems <i>logical-system-name</i> interfaces demux0 unit <i>logical-unit-number</i> <a href="#">demux-options</a>],          [edit logical-systems <i>logical-system-name</i> interfaces pp0 unit <i>logical-unit-number</i> <a href="#">pppoe-options</a>],          [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces demux0 unit <i>logical-unit-number</i> <a href="#">demux-options</a>],          [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> interfaces pp0 unit <i>logical-unit-number</i> <a href="#">pppoe-options</a>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.          Support for aggregated Ethernet added in Junos OS Release 9.4.</p>
<b>Description</b>	<p>Configure the interface on which PPP over Ethernet is running.</p> <p>For demux interfaces, configure the underlying interface on which the demultiplexing (demux) interface is running.</p>
<b>Options</b>	<p><b><i>interface-name</i></b>—Name of the interface on which PPP over Ethernet or demux is running. For example, <b>at-0/0/1.0</b> (ATM VC), <b>fe-1/0/1.0</b> (Fast Ethernet interface), <b>ge-2/0/0.0</b> (Gigabit Ethernet interface), <b>ae1.0</b> (for IP demux on an aggregated Ethernet interface), or <b>ae1</b> (for VLAN demux on an aggregated Ethernet interface).</p>
<div>  <p><b>NOTE:</b> Demux interfaces are currently supported on Gigabit Ethernet, Fast Ethernet, 10-Gigabit Ethernet interfaces, or aggregated Ethernet devices.</p> </div>	
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.          interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an IP Demultiplexing Interface on page 316</a></li> <li>• <a href="#">Configuring a VLAN Demultiplexing Interface on page 320</a></li> <li>• <a href="#">Configuring the PPPoE Underlying Interface</a></li> <li>• <a href="#">Junos OS Interfaces and Routing Configuration Guide</a></li> </ul>

## unframed

---

<b>Syntax</b>	(unframed   no-unframed);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <b>e3-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For E3 IQ interfaces only, enable or disable unframed mode. In unframed mode, the E3 IQ interface do not detect yellow ( <b>ylw</b> ) or loss-of-frame ( <b>lof</b> ) alarms.
<b>Default</b>	Unframed mode is disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring E3 IQ and IQE Unframed Mode</a></li></ul>

## unidirectional

---

<b>Syntax</b>	unidirectional;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.5. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Create two new, unidirectional (transmit-only and receive-only) physical interfaces subordinate to the original parent interface. Unidirectional links are currently supported only on 10-Gigabit Ethernet interfaces on the following hardware: <ul style="list-style-type: none"><li>• 4-port 10-Gigabit Ethernet DPC on the MX960 router</li><li>• 10-Gigabit Ethernet IQ2 PIC and 10-Gigabit Ethernet IQ2E PIC on the T Series router</li></ul>
<b>Default</b>	Disabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Understanding Unidirectional Traffic Flow on Physical Interfaces on page 157</a></li><li>• <a href="#">Enabling Unidirectional Traffic Flow on Physical Interfaces on page 158</a></li></ul>

## unit (Dynamic Profiles Standard Interface)

```

Syntax  unit logical-unit-number {
        actual-transit-statistics;
        auto-configure {
            agent-circuit-identifier {
                dynamic-profile profile-name;
            }
            line-identity {
                include {
                    accept-no-ids;
                    circuit-id;
                    remote-id;
                }
                dynamic-profile profile-name;
            }
        }
        dial-options {
            ipsec-interface-id name;
            l2tp-interface-id name;
            (shared | dedicated);
        }
        encapsulation (atm-ccc-cell-relay | atm-ccc-vc-mux | atm-cisco-nlpid | atm-tcc-vc-mux
            | atm-mlppp-llc | atm-nlpid | atm-ppp-llc | atm-ppp-vc-mux | atm-snap | atm-tcc-snap
            | atm-vc-mux | ether-over-atm-llc | ether-vpls-over-atm-llc | ether-vpls-over-fr |
            ether-vpls-over-ppp | ethernet | frame-relay-ccc | frame-relay-ppp | frame-relay-tcc |
            frame-relay-ether-type | frame-relay-ether-type-tcc | multilink-frame-relay-end-to-end
            | multilink-ppp | ppp-over-ether | ppp-over-ether-over-atm-llc | vlan-bridge | vlan-ccc |
            vlan-vci-ccc | vlan-tcc | vlan-vpls);
        family family {
            address address;
            demux-destination,
            filter {
                adf {
                    counter;
                    input-precedence precedence;
                    not-mandatory;
                    output-precedence precedence;
                    rule rule-value;
                }
                input filter-name {
                    precedence precedence;
                    shared-name filter-shared-name;
                }
                output filter-name {
                    precedence precedence;
                    shared-name filter-shared-name;
                }
            }
            max-sessions number;
            max-sessions-vsa-ignore;
            rpf-check {
                fail-filter filter-name;
                mode loose;
            }
        }
    }

```

```

}
service {
  input {
    service-set service-set-name {
      service-filter filter-name;
    }
    post-service-filter filter-name;
  }
  input-vlan-map {
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    (push | swap);
    tag-protocol-id tpid;
    vlan-id number;
  }
  output {
    service-set service-set-name {
      service-filter filter-name;
    }
  }
  output-vlan-map {
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    (pop | swap);
    tag-protocol-id tpid;
    vlan-id number;
  }
}
service-name-table table-name
short-cycle-protection <lockout-time-min minimum-seconds lockout-time-max
  maximum-seconds>;
unnumbered-address interface-name <preferred-source-address address>;
}
keepalives {
  interval seconds;
}
ppp-options {
  aaa-options aaa-options-name;
  authentication [ authentication-protocols ];
  chap {
    challenge-length minimum minimum-length maximum maximum-length;
    local-name name;
  }
  ignore-magic-number-mismatch;
  initiate-ncp (dual-stack-passive | ipv6 | ip)
  ipcp-suggest-dns-option;
  mru size;
  mtu (size | use-lower-layer);
  on-demand-ip-address;
  pap;
  peer-ip-address-optional;
  local-authentication {
    password password;
    username-include {
      circuit-id;
      delimiter character;
    }
  }
}

```

```

        domain-name name;
        mac-address;
        remote-id;
    }
}
vlan-id number;
vlan-tags outer [tpid].vlan-id [inner [tpid].vlan-id];
filter {
    input filter-name {
        shared-name filter-shared-name;
    }
    output filter-name {
        shared-name filter-shared-name;
    }
}
host-prefix-only;
service {
    pcef pcef-profile-name {
        activate rule-name | activate-all;
    }
}
}

```

**Hierarchy Level** [edit [dynamic-profiles](#) *profile-name* [interfaces](#) *interface-name*]

**Release Information** Statement introduced in Junos OS Release 9.2.

**Description** Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

**Options** *logical-unit-number*—The specific unit number of the interface you want to assign to the dynamic profile, or one of the following predefined variables:

- **\$junos-underlying-interface-unit**—For static VLANs, the unit number variable. The static unit number variable is dynamically replaced with the client unit number when the client session begins. The client unit number is specified by the DHCP when it accesses the subscriber network.
- **\$junos-interface-unit**—The unit number variable on a dynamic underlying VLAN interface for which you want to enable the creation of dynamic VLAN subscriber interfaces based on the ACI.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related  
Documentation**

- *Configuring Dynamic Underlying VLAN Interfaces to Use Agent Circuit Identifier Information*
- *Configuring Static Underlying VLAN Interfaces to Use Agent Circuit Identifier Information*
- *Agent Circuit Identifier-Based Dynamic VLANs Overview*

## unit

```

Syntax  unit logical-unit-number {
        accept-source-mac {
            mac-address mac-address {
                policer {
                    input cos-policer-name;
                    output cos-policer-name;
                }
            }
        }
        accounting-profile name;
        advisory-options {
            downstream-rate rate;
            upstream-rate rate;
        }
        allow-any-vci;
        atm-scheduler-map (map-name | default);
        auto-configure {
            agent-circuit-identifier {
                dynamic-profile profile-name;
            }
            line-identity {
                include {
                    accept-no-ids;
                    circuit-id;
                    remote-id;
                }
                dynamic-profile profile-name;
            }
        }
        backup-options {
            interface interface-name;
        }
        bandwidth rate;
        cell-bundle-size cells;
        clear-dont-fragment-bit;
        compression {
            rtp {
                maximum-contexts number <force>;
                f-max-period number;
                queues [queue-numbers];
                port {
                    minimum port-number;
                    maximum port-number;
                }
            }
        }
        compression-device interface-name;
        copy-tos-to-outer-ip-header;
        demux-destination family;
        demux-source family;
        demux-options {
            underlying-interface interface-name;

```

```

}
description text;
etree-ac-role (leaf | root);
interface {
    l2tp-interface-id name;
    (dedicated | shared);
}
dialer-options {
    activation-delay seconds;
    callback;
    callback-wait-period time;
    deactivation-delay seconds;
    dial-string [dial-string-numbers];
    idle-timeout seconds;
    incoming-map {
        caller caller-id | accept-all;
        initial-route-check seconds;
        load-interval seconds;
        load-threshold percent;
        pool pool-name;
        redial-delay time;
        watch-list {
            [routes];
        }
    }
}
disable;
disable-mlppp-inner-ppp-pfc;
dlci dlci-identifier;
drop-timeout milliseconds;
dynamic-call-admission-control {
    activation-priority priority;
    bearer-bandwidth-limit kilobits-per-second;
}
encapsulation type;
epd-threshold cells plp1 cells;
family family-name {
    ... the family subhierarchy appears after the main [edit interfaces interface-name unit
        logical-unit-number] hierarchy ...
}
fragment-threshold bytes;
host-prefix-only;
inner-vlan-id-range start start-id end end-id;
input-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap |
    swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
    vlan-id number;
}
interleave-fragments;
inverse-arp;
layer2-policer {
    input-policer policer-name;
    input-three-color policer-name;
}

```

```

    output-policer policer-name;
    output-three-color policer-name;
}
link-layer-overhead percent;
minimum-links number;
mrru bytes;
multicast-dlci dlci-identifier;
multicast-vci vpi-identifier.vci-identifier;
multilink-max-classes number;
multipoint;
oam-liveness {
    up-count cells;
    down-count cells;
}
oam-period (disable | seconds);
output-vlan-map {
    (pop | pop-pop | pop-swap | push | push-push | swap |
    swap-push | swap-swap);
    inner-tag-protocol-id tpid;
    inner-vlan-id number;
    tag-protocol-id tpid;
}
passive-monitor-mode;
peer-unit unit-number;
plp-to-clp;
point-to-point;
ppp-options {
    mru size;
    mtu (size | use-lower-layer);
    chap {
        access-profile name;
        default-chap-secret name;
        local-name name;
        passive;
    }
    compression {
        acfc;
        pfc;
    }
    dynamic-profile profile-name;
    ipcp-suggest-dns-option;
    lcp-restart-timer milliseconds;
    loopback-clear-timer seconds;
    ncp-restart-timer milliseconds;
    pap {
        access-profile name;
        default-pap-password password;
        local-name name;
        local-password password;
        passive;
    }
}
pppoe-options {
    access-concentrator name;
    auto-reconnect seconds;
    (client | server);
}

```

```

    service-name name;
    underlying-interface interface-name;
}
ppoe-underlying-options {
    access-concentrator name;
    direct-connect;
    dynamic-profile profile-name;
    max-sessions number;
}
proxy-arp;
service-domain (inside | outside);
shaping {
    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst length);
    queue-length number;
}
short-sequence;
targeted-distribution;
transmit-weight number;
(traps | no-traps);
trunk-bandwidth rate;
trunk-id number;
tunnel {
    backup-destination address;
    destination address;
    key number;
    routing-instance {
        destination routing-instance-name;
    }
    source source-address;
    ttl number;
}
vci vpi-identifier.vci-identifier;
vci-range start start-vci end end-vci;
vpi vpi-identifier;
vlan-id number;
vlan-id-range number-number;
vlan-tags inner tpid.vlan-id outer tpid.vlan-id;
family family {
    accounting {
        destination-class-usage;
        source-class-usage {
            (input | output | input output);
        }
    }
}
access-concentrator name;
address address {
    ... the address subhierarchy appears after the main [edit interfaces interface-name unit
        logical-unit-number family family-name] hierarchy ...
}
bundle interface-name;
core-facing;
demux-destination {
    destination-prefix;
}
demux-source {

```

```

    source-prefix;
}
direct-connect;
duplicate-protection;
dynamic-profile profile-name;
filter {
    group filter-group-number;
    input filter-name;
    input-list [filter-names];
    output filter-name;
    output-list [filter-names];
}
interface-mode (access | trunk);
ipsec-sa sa-name;
keep-address-and-control;
mac-validate (loose | strict);
max-sessions number;
mtu bytes;
multicast-only;
no-redirects;
policer {
    arp policer-template-name;
    input policer-template-name;
    output policer-template-name;
}
primary;
protocols [inet iso mpls];
proxy inet-address address;
receive-options-packets;
receive-ttl-exceeded;
remote (inet-address address | mac-address address);
rpf-check {
    fail-filter filter-name
    mode loose;
}
sampling {
    input;
    output;
}
service {
    input {
        post-service-filter filter-name;
        service-set service-set-name <service-filter filter-name>;
    }
    output {
        service-set service-set-name <service-filter filter-name>;
    }
}
service-name-table table-name
(translate-discard-eligible | no-translate-discard-eligible);
(translate-fecn-and-becn | no-translate-fecn-and-becn);
translate-plp-control-word-de;
unnumbered-address interface-name destination address
    destination-profile profile-name;
vlan-id number;
vlan-id-list [number number-number];

```

```

address address {
  arp ip-address (mac | multicast-mac) mac-address <publish>;
  broadcast address;
  destination address;
  destination-profile name;
  eui-64;
  master-only;
  multipoint-destination address {
    dlcid dlcid-identifier;
    epd-threshold cells <plp1 cells>;
    inverse-arp;
    oam-liveness {
      up-count cells;
      down-count cells;
    }
    oam-period (disable | seconds);
    shaping {
      (cbr rate | rtvbr burst length peak rate sustained rate | vbr burst length peak rate
        sustained rate);
      queue-length number;
    }
    vci vpi-identifier.vci-identifier;
  }
  preferred;
  primary;
  (vrrp-group | vrrp-inet6-group) group-number {
    (accept-data | no-accept-data);
    advertise-interval seconds;
    authentication-type authentication;
    authentication-key key;
    fast-interval milliseconds;
    (preempt | no-preempt) {
      hold-time seconds;
    }
    priority number;
    track {
      interface interface-name {
        bandwidth-threshold bits-per-second priority-cost number;
      }
      priority-hold-time seconds;
      route ip-address/prefix-length routing-instance instance-name priority-cost cost;
    }
    virtual-address [addresses];
    virtual-link-local-address ipv6-address;
    vrrp-inherit-from {
      active-interface interface-name;
      active-group group-number;
    }
  }
}
}
}

```

<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ], [edit interfaces <b>interface-set</b> <i>interface-set-name</i> interface <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Range increased for static pseudowire interfaces to 1,073,741,823 in Junos OS Release 18.3R1.
<b>Description</b>	Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.
<b>Options</b>	<b><i>logical-unit-number</i></b> —Number of the logical unit. <b>Range:</b> 0 through 1,073,741,823 for demux, PPPoE, and pseudowire static interfaces. 0 through 16,385 for all other static interface types. <b><i>etree-ac-role (leaf   root)</i></b> —To configure an interface as either leaf or root.  The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Logical Interface Properties</i></li><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li></ul>

## unnumbered-address (Demux)

---

<b>Syntax</b>	<code>unnumbered-address interface-name &lt;preferred-source-address address&gt;;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces interface-name unit logical-unit-number family inet</a> ], [edit <a href="#">logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2. <b>preferred-source-address</b> option introduced in Junos OS Release 9.0. IP demultiplexing interfaces supported in Junos OS Release 9.2.
<b>Description</b>	For IP demultiplexing interfaces, enable the local address to be derived from the specified interface. Configuring an unnumbered interface enables IP processing on the interface without assigning an explicit IP address to the interface.
<b>Options</b>	<b>interface-name</b> —Name of the interface from which the local address is derived. The specified interface must have a logical unit number and a configured IP address, and must not be an unnumbered interface.  The <b>preferred-source-address</b> statement is explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring an Unnumbered Interface on page 218</a></li><li>• <a href="#">address on page 424</a></li><li>• <i>Junos System Basics Configuration Guide</i></li></ul>

## unnumbered-address (Dynamic Profiles)

<b>Syntax</b>	<code>unnumbered-address interface-name &lt;preferred-source-address address&gt;;</code>
<b>Hierarchy Level</b>	[edit <code>dynamic-profiles profile-name interfaces interface-name unit logical-unit-number family family</code> ], [edit <code>dynamic-profiles profile-name interfaces demux0 unit logical-unit-number family family</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2. Support for the <code>\$junos-preferred-source-address</code> and <code>\$junos-preferred-source-ipv6-address</code> predefined variables introduced in Junos OS Release 9.6. Support for the <code>\$junos-loopback-interface</code> predefined variable introduced in Junos OS Release 9.6.
<b>Description</b>	For Ethernet interfaces, enable the local address to be derived from the specified interface. Configuring unnumbered Ethernet interfaces enables IP processing on the interface without assigning an explicit IP address to the interface. To configure unnumbered address dynamically, include the <code>\$junos-loopback-interface-address</code> predefined variable.  You can configure unnumbered address support on Ethernet interfaces for IPv4 and IPv6 address families.
<b>Options</b>	<b>interface-name</b> —Name of the interface from which the local address is derived. The specified interface must have a logical unit number, a configured IP address, and must not be an unnumbered interface. This value can be a specific interface name or the <code>\$junos-loopback-interface</code> predefined variable.  When defining the <code>unnumbered-address</code> statement using a static interface, keep the following in mind: <ul style="list-style-type: none"> <li>If you choose to include the <code>routing-instance</code> statement at the [edit <code>dynamic-profiles</code>] hierarchy level, that statement must be configured with a dynamic value by using the <code>\$junos-routing-instance</code> predefined variable. In addition, whatever static unnumbered interface you specify must belong to that routing instance; otherwise, the profile instantiation fails.</li> <li>If you choose to not include the <code>routing-instance</code> statement at the [edit <code>dynamic-profiles</code>] hierarchy level, the <code>unnumbered-address</code> statement uses the default routing instance. The use of the default routing instance requires that the unnumbered interface be configured statically and that it reside in the default routing instance.</li> </ul>



**NOTE:** When you specify a static logical interface for the unnumbered interface in a dynamic profile that includes the `$junos-routing-instance` predefined variable, you must not configure a preferred source address, whether with the `$junos-preferred-source-address` predefined variable, the `$junos-preferred-source-ipv6-address` predefined variable, or the

**preferred-source-address** statement. Configuring the preferred source address in this circumstance causes a commit failure.

When defining the **unnumbered-address** statement using the **\$junos-loopback-interface** predefined variable, keep the following in mind:

- To use the **\$junos-loopback-interface** predefined variable, the dynamic profile must also contain the **routing-instance** statement configured with the **\$junos-routing-instance** predefined variable at the [edit dynamic-profiles] hierarchy level.
- The applied loopback interface is based on the dynamically obtained routing instance of the subscriber.

**address**—(Optional) Secondary IP address of the donor interface. Configuring the preferred source address enables you to use an IP address other than the primary IP address on some of the unnumbered Ethernet interfaces in your network. This value can be a static IP address, the **\$junos-preferred-source-address** predefined variable for the inet family, or the **\$junos-preferred-source-ipv6-address** predefined variable for the inet6 family.

When defining the **preferred-source-address** value using a static IP address, keep the following in mind:

- The unnumbered interface must be statically configured.
- The IP address specified as the **preferred-source-address** must be configured in the specified unnumbered interface.

When defining the **preferred-source-address** value using the **\$junos-preferred-source-address** or the **\$junos-preferred-source-ipv6-address** predefined variables, keep the following in mind:

- You must configure the **unnumbered-address** statement using the **\$junos-loopback-interface** predefined variable.
- You must configure the **routing-instance** statement using the **\$junos-routing-instance** predefined variable at the [edit dynamic-profiles] hierarchy level.
- The preferred source address chosen is based on the dynamically applied loopback address which is in turn derived from the dynamically obtained routing instance of the subscriber. The configured loopback address with the closest network match to the user IP address is selected as the preferred source address.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Dynamic Profiles Overview</i></li></ul>
------------------------------	--

## unnumbered-address (Ethernet)

<b>Syntax</b>	<code>unnumbered-address interface-name &lt;preferred-source-address address&gt;;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces interface-name</a> <a href="#">unit logical-unit-number</a> <a href="#">family family</a> ], [edit <a href="#">logical-systems logical-system-name</a> <a href="#">interfaces interface-name</a> <a href="#">unit logical-unit-number</a> <a href="#">family family</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 8.2. <b>preferred-source-address</b> option introduced in Junos OS Release 9.0.
<b>Description</b>	For Ethernet interfaces, enable the local address to be derived from the specified interface. Configuring an unnumbered Ethernet interface enables IP processing on the interface without assigning an explicit IP address to the interface.
<b>Options</b>	<b>interface-name</b> —Name of the interface from which the local address is derived. The specified interface must have a logical unit number and a configured IP address, and must not be an unnumbered interface.  The <b>preferred-source-address</b> statement is explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring an Unnumbered Interface on page 218</a></li> <li>• <a href="#">address on page 424</a></li> <li>• <i>Junos System Basics Configuration Guide</i></li> </ul>

## unnumbered-address (PPP)

---

<b>Syntax</b>	<code>unnumbered-address interface-name destination address destination-profile profile-name;</code>
<b>Hierarchy Level</b>	[edit <a href="#">interfaces interface-name unit logical-unit-number family inet</a> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number family inet</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For interfaces with PPP encapsulation, enable the local address to be derived from the specified interface.
<b>Options</b>	<p><i>interface-name</i>—Interface from which the local address is derived. The interface name must include a logical unit number and must have a configured address.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring IPCP Options for Interfaces with PPP Encapsulation on page 216</a></li><li>• <i>Junos OS Administration Library</i></li></ul>

## up-count

<b>Syntax</b>	<code>up-count <i>cells</i>;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> <b>oam-liveness</b>],</p> <p>[edit interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>oam-liveness</b>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>address</b> <i>address</i> multipoint-destination <i>address</i> <b>oam-liveness</b>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> <b>unit</b> <i>logical-unit-number</i> <b>oam-liveness</b>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> <b>family</b> <i>family</i> <b>address</b> <i>address</i> multipoint-destination <i>address</i> <b>oam-liveness</b>]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For ATM encapsulation only, configure Operation, Administration, and Maintenance (OAM) F5 loopback cell count thresholds. Not supported on ATM-over-SHDSL interfaces.</p> <p>For ATM2 IQ PICs only, configure OAM F4 loopback cell count thresholds at the [edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i>] hierarchy level.</p>
<b>Options</b>	<p><b>cells</b>—Minimum number of consecutive OAM F4 or F5 loopback cells received before a VC is declared up.</p> <p><b>Range:</b> 1 through 255</p> <p><b>Default:</b> 5 cells</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Configuring the ATM OAM F5 Loopback Cell Threshold</li> </ul>

## user-prefix

---

<b>Syntax</b>	<code>user-prefix <i>user-prefix-string</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication username-include</a> ], [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication username-include</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.0.
<b>Description</b>	Specify the user prefix that is concatenated with the username during the subscriber authentication process.
<b>Options</b>	<i>user-prefix-string</i> —The user prefix string.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring VLAN Interface Username Information for AAA Authentication</i></li></ul>

## username-include (Interfaces)

Syntax	<pre>username-include {   circuit-id;   circuit-type;   delimiter <i>delimiter-character</i>;   domain-name <i>domain-name-string</i>;   interface-name;   mac-address;   option-18;   option-37;   option-82 &lt;circuit-id&gt; &lt;remote-id&gt;;   radius-realm <i>radius-realm-string</i>;   remote-id;   user-prefix <i>user-prefix-string</i>;   vlan-tags <i>outer-vlan-tag-inner-vlan-tag</i>; }</pre>
Hierarchy Level	<p>[edit interfaces <i>interface-name</i> auto-configure <a href="#">vlan-ranges authentication</a>],  [edit interfaces <i>interface-name</i> auto-configure <a href="#">stacked-vlan-ranges authentication</a>]</p>
Release Information	<p>Statement introduced in Junos OS Release 10.0.</p> <p><b>vlan-tags</b> option added in Junos OS Release 18.3R1 on MX Series routers.</p>
Description	<p>Configure the username that the router passes to the external AAA server. You must include at least one of the optional statements for the username to be valid. If you do not configure a username, the router accesses the local authentication service only and does not use external authentication services, such as RADIUS.</p> <p>The username takes the format <b><i>user-prefix mac-address circuit-type circuit-id remote-id option-82 interface-name domain-name radius-realm</i></b>. By default, each component is separated by a period (.), but you can specify a different delimiter with the <b>delimiter</b> statement.</p>
Options	<p><b>vlan-tags <i>outer-vlan-tag-inner-vlan-tag</i></b>—Include the subscriber session VLAN tags, excluding the name of the underlying physical interface, in the subscription ID. Both single-tagged and double-tagged VLANs are supported. You always include the outer tag; for double-tagged VLANs, also include the inner tag.</p> <p>The remaining statements are explained separately. Search for a statement in <a href="#">CLI Explorer</a> or click a linked statement in the Syntax section for details.</p>
Required Privilege Level	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
Related Documentation	<ul style="list-style-type: none"> <li>• <i>Configuring VLAN Interface Username Information for AAA Authentication</i></li> <li>• <i>Using DHCP Option 82 Suboptions in Authentication Usernames for Autosense VLANs</i></li> </ul>

- *Using DHCP Option 18 and Option 37 in Authentication Usernames for DHCPv6 Autosense VLANs*
- *Configuring a Username for Authentication of Out-of-Band Triggered Dynamic VLANs*

## vbr

<b>Syntax</b>	<code>vbr peak rate sustained rate burst length;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces <i>interface-name</i> atm-options vpi <i>vpi-identifier</i> <b>shaping</b>],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping ],</p> <p>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping ],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> address <i>address</i> family <i>family</i> multipoint-destination <i>address</i> shaping ],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> shaping ]</p>
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For ATM encapsulation only, define the variable bandwidth utilization in the traffic-shaping profile.</p> <p>When you configure the variable bandwidth utilization, you must specify all three options (<b>burst</b>, <b>peak</b>, and <b>sustained</b>). You can specify the rate in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation <b>k</b> (1000), <b>m</b> (1,000,000), or <b>g</b> (1,000,000,000). You can also specify the rate in cells per second by entering a decimal number followed by the abbreviation <b>c</b>; values expressed in cells per second are converted to bits per second by means of the formula 1 cps = 384 bps.</p>
<b>Default</b>	If the <b>vbr</b> statement is not specified, bandwidth utilization is unlimited.
<b>Options</b>	<p><b>burst length</b>—Burst length, in cells. If you set the length to 1, the peak traffic rate is used.  <b>Range:</b> 1 through 4000 cells</p> <p><b>peak rate</b>—Peak rate, in bits per second or cells per second.  <b>Range:</b> For ATM1 interfaces, 33 Kbps through 135.6 Mbps (ATM OC3); 33 Kbps through 276 Mbps (ATM OC12). For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p> <p><b>sustained rate</b>—Sustained rate, in bits per second or cells per second.  <b>Range:</b> For ATM1 interfaces, 33 Kbps through 135.6 Mbps (ATM OC3); 33 Kbps through 276 Mbps (ATM OC12). For ATM2 IQ OC3 and OC12 interfaces, 33 Kbps through 542,526,792 bps. For ATM2 IQ OC48 interfaces, 33 Kbps through 2,170,107,168 bps. For ATM2 IQ DS3 and E3 interfaces, from 33 Kbps through the maximum rate, which depends on the ATM encapsulation and framing you configure.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

- Related Documentation**
- *Configuring ATM CBR*
  - *Applying Scheduler Maps to Logical ATM Interfaces*
  - [cbr on page 478](#)
  - [rtvbr on page 945](#)
  - [shaping on page 966](#)

---

## vc-cos-mode

---

<b>Syntax</b>	vc-cos-mode (alternate   strict);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> <a href="#">atm-options</a> <a href="#">scheduler-maps</a> <i>map-name</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For ATM2 IQ interfaces only, specify packet-scheduling priority value for ATM2 IQ VC tunnels.
<b>Options</b>	<p><b>alternate</b>—VC CoS queue has high priority. The scheduling of the queues alternates between the high-priority queue and the remaining queues, so every other scheduled packet is from the high-priority queue.</p> <p><b>strict</b>—VC CoS queue has strictly high priority. A queue with strict high priority is always scheduled before the remaining queues. The remaining queues are scheduled in round-robin fashion.</p> <p><b>Default:</b> alternate</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>ATM2 IQ VC Tunnel CoS Components Overview</i></li><li>• <i>Applying Scheduler Maps to ATM Interfaces</i></li></ul>

## vci

<b>Syntax</b>	<code>vci vpi-identifier.vci-identifier;</code>
<b>Hierarchy Level</b>	<p>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>],</p> <p>[edit interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> interfaces at-<i>fpc/pic/port</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> multipoint-destination <i>address</i>]</p>
<b>Release Information</b>	<p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro routers.</p>
<b>Description</b>	<p>For ATM point-to-point logical interfaces only, configure the virtual circuit identifier (VCI) and virtual path identifier (VPI).</p> <p>To configure a VPI for a point-to-multipoint interface, specify the VPI in the <a href="#">multipoint-destination</a> statement.</p> <p>VCIs 0 through 31 are reserved for specific ATM values designated by the ATM Forum.</p>
<b>Options</b>	<p><b>vci-identifier</b>—ATM virtual circuit identifier. Unless you configure the interface to use promiscuous mode, this value cannot exceed the highest-numbered VC configured for the interface with the <b>maximum-vcs</b> option of the <b>vpi</b> statement.</p> <p><b>Range:</b> 0 through 4089 or 0 through 65,535 with promiscuous mode, with VCIs 0 through 31 reserved.</p> <p><b>vpi-identifier</b>—ATM virtual path identifier.</p> <p><b>Range:</b> 0 through 255</p> <p><b>Default:</b> 0</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring a Point-to-Point ATM1 or ATM2 IQ Connection</i></li> <li>• <i>Applying Scheduler Maps to Logical ATM Interfaces</i></li> </ul>

## vci-range

---

<b>Syntax</b>	<code>vci-range start <i>start-vci</i> end <i>end-vci</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0.
<b>Description</b>	Range of VCI values used in ATM-to-Ethernet interworking cross-connects. VCI 0 through 31 are reserved. VCI 0 through 31 should not be used.
<b>Options</b>	<b><i>start-vci</i></b> —Lowest number VCI in the range. <b><i>end-vci</i></b> —Highest number VCI in the range. <b>Range:</b> 0 through 255
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring ATM-to-Ethernet Interworking on page 282</a></li></ul>

## virtual-switch

---

<b>Syntax</b>	<code>virtual-switch <i>name</i> bridge-domain <i>name</i> vlan-id [<i>vlan-ids</i> ];</code>
<b>Hierarchy Level</b>	[edit protocols oam ethernet connectivity-fault-management <b>maintenance-domain</b> <i>domain-name</i> default- <i>x</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.6.
<b>Description</b>	Specify the routing-instance type as a virtual switch, under which bridge-domain MIPs must be enabled.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring MIP for Bridge Domains of a Virtual Switch</a></li></ul>

## vlan-id (Logical Port in Bridge Domain)

<b>Syntax</b>	<code>vlan-id <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 15.1.
<b>Description</b>	The VLAN ID configured on the logical port. Received packets with no VLAN tags are forwarded within the bridge domain with the matching VLAN ID.
<b>Options</b>	<b>number</b> —The VLAN ID. <b>Range:</b> 1 through 4095
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Access Mode on a Logical Interface</i></li> <li>• <i>Tunnel Services Overview</i></li> <li>• <i>Tunnel Interface Configuration on MX Series Routers Overview</i></li> </ul>

## vlan-id (Outer VLAN ID)

---

<b>Syntax</b>	<code>vlan-id <i>outer-vlan-id</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0.
<b>Description</b>	The outer VLAN ID to be used in ATM-to-Ethernet interworking cross-connects. Outer VLAN IDs are converted to the ATM VPI. The outer VLAN ID must match the VPI value configured. The allowable VPI range is 0 to 255. Do not configure the outer VLAN ID to be greater than 255.
<b>Options</b>	<b>outer-vlan-id</b> —Outer VLAN ID number. <b>Range:</b> 0 through 4094
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring ATM-to-Ethernet Interworking on page 282</a></li></ul>

## vlan-id (VLAN ID to Be Bound to a Logical Interface)

<b>Syntax</b>	<code>vlan-id <i>number</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For Fast Ethernet, Gigabit Ethernet, and Aggregated Ethernet interfaces only, bind a 802.1Q VLAN tag ID to a logical interface.
<b>Options</b>	<p><i>number</i>—A valid VLAN identifier.</p> <p><b>Range:</b> For aggregated Ethernet, 4-port, 8-port, and 12-port Fast Ethernet PICs, and for management and internal Ethernet interfaces, 1 through 1023.</p> <p>For 48-port Fast Ethernet and Gigabit Ethernet PICs, 1 through 4094.</p> <p>VLAN ID 0 is reserved for tagging the priority of frames.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Enabling VLAN Tagging</i></li> </ul>

## native-vlan-id

---

<b>Syntax</b>	<code>native-vlan-id <i>vlan-id</i>;</code>
<b>Hierarchy Level (QFX Series and EX4600)</b>	For platforms without ELS: <code>[edit interfaces (QFX Series) <i>interface-name</i> unit 0 family ethernet-switching]</code>  For platforms with ELS:  <code>[edit interfaces (QFX Series) <i>interface-name</i>]</code>
<b>Hierarchy Level (ACX Series, EX Series, SRX Series, M Series, MX Series, and T Series)</b>	<code>[edit interfaces <i>ge-fpc/pic/port</i>],</code> <code>[edit interfaces <i>interface-name</i>]</code>
<b>Hierarchy Level (SRX Series)</b>	<code>[edit interfaces <i>interface-name</i> ]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.3. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 9.5 for SRX Series. Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 12.3R2 for EX Series switches. Statement introduced in Junos OS Release 13.2X51-D20 for the QFX Series.
<b>Description</b>	<p>Configure the VLAN identifier to associate with untagged packets received on the physical interface of a trunk mode interface for the following:</p> <ul style="list-style-type: none"><li>• QFX Series and EX4600</li><li>• M Series routers with Gigabit Ethernet IQ PICs with SFP and Gigabit Ethernet IQ2 PICs with SFP configured for 802.1Q flexible VLAN tagging</li><li>• MX Series routers with Gigabit Ethernet DPCs and MICs, Tri-Rate Ethernet DPCs and MICs, and 10-Gigabit Ethernet DPCs and MICs and MPCs configured for 802.1Q flexible VLAN tagging</li><li>• T4000 routers with 100-Gigabit Ethernet Type 5 PIC with CFP</li><li>• EX Series switches with Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, and aggregated Ethernet interfaces</li></ul> <p>The logical interface on which untagged packets are received must be configured with the same VLAN ID as the native VLAN ID configured on the physical interface, otherwise the untagged packets are dropped. To configure the logical interface, include the <b>vlan-id</b> statement (matching the <b>native-vlan-id</b> statement on the physical interface) at the <code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code> hierarchy level.</p>

When the **native-vlan-id** statement is included with the **flexible-vlan-tagging** statement, untagged packets are accepted on the same mixed VLAN-tagged port and on the interfaces that are configured for Q-in-Q tunneling.

When the **native-vlan-id** statement is combined with the **interface-mode** statement, untagged packets are accepted and forwarded within the bridge domain or VLAN that is configured with the matching VLAN ID.

To configure the logical interface, include the **vlan-id** statement (matching the **native-vlan-id** statement on the physical interface) at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.



**NOTE:** Starting in Junos OS Release 17.1R1, you can send untagged traffic without a native VLAN ID to the remote end of the network. To do this, remove the native VLAN ID from the untagged traffic configuration by setting the **no-native-vlan-insert** statement. If you do not configure this statement, the native VLAN ID is added to the untagged traffic.

- Default** By default, the untagged packets are dropped. That is, if you do not configure the **native-vlan-id** option, the untagged packets are dropped.
- Options**
- vlan-id***—Numeric identifier of the VLAN.  
**Range:** 1 through 4094
- number***—VLAN ID number.  
**Range:** (ACX Series routers, SRX Series devices and EX Series switches) 0 through 4094.
- Required Privilege Level**
- routing—To view this statement in the configuration.  
 routing-control—To add this statement to the configuration.  
 interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related  
Documentation**

- *Configuring Gigabit Ethernet Interfaces (CLI Procedure)*
- *Configuring Gigabit Ethernet Interfaces (J-Web Procedure)*
- *Understanding Bridging and VLANs on Switches*
- *Enabling VLAN Tagging*
- *Configuring Access Mode on a Logical Interface*
- *Configuring the Native VLAN Identifier on Switches With ELS Support (CLI Procedure)*
- *Understanding Interfaces*
- *Understanding Q-in-Q Tunneling and VLAN Translation*
- *no-native-vlan-insert*
- *Sending Untagged Traffic Without VLAN ID to Remote End*
- *show ethernet-switching interfaces*
- *show vlans*
- [flexible-vlan-tagging on page 618](#)
- [Junos OS Network Interfaces Configuration Guide](#)

## vlan-id-list (Ethernet VLAN Circuit)

**Syntax** `vlan-id-list [vlan-id vlan-id–vlan-id];`

**Hierarchy Level** `[edit interfaces interface-name unit logical-unit-number],`  
`[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]`

**Release Information** Statement introduced in Junos OS Release 9.5.

**Description** Binds a single-tag logical interface to a list of VLAN IDs. Configures a logical interface to receive and forward any tag frame whose VLAN ID tag matches the list of VLAN IDs you specify.



### NOTE:

When you create a circuit cross-connect (CCC) using VLAN-bundled single-tag logical interfaces on Layer 2 VPN routing instances, the circuit automatically uses ethernet encapsulation. For Layer 2 VPN, you need to include the `encapsulation-type` statement and specify the value `ethernet` at either of the following hierarchy levels:

- `[edit routing-instances routing-instance-name protocols l2vpn]`
- `[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn]`

For more information about the `encapsulation-type` configuration statement and the Layer 2 encapsulation types `ethernet` and `ethernet-vlan`, see the *Junos OS VPNs Library for Routing Devices*.

**Options** `[vlan-id vlan-id–vlan-id]`—A list of valid VLAN ID numbers. Specify the VLAN IDs individually by using a space to separate each ID, as an inclusive list by separating the starting VLAN ID and ending VLAN ID with a hyphen, or as a combination of both.

**Range:** 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames.



**NOTE:** Configuring `vlan-id-list` with the entire `vlan-id` range is an unnecessary waste of system resources and is not best practice. It should be used only when a subset of VLAN IDs (not the entire range) needs to be associated with a logical interface. If you specify the entire range (1-4094), it has the same result as not specifying a range; however, it consumes PFE resources such as VLAN lookup tables entries, and so on.

The following examples illustrate this further:

```
[edit interfaces interface-name]
vlan-tagging;
```

```
unit number {  
    vlan-id-range 1-4094;  
}  
  
[edit interfaces interface-name]  
unit 0;
```

---

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Binding VLAN IDs to Logical Interfaces*
- [encapsulation \(Logical Interface\) on page 573](#)
- [encapsulation on page 577](#)
- encapsulation-type (Layer 2 VPN routing instance), see the *Junos OS VPNs Library for Routing Devices*
- [flexible-vlan-tagging on page 618](#)
- [vlan-tagging on page 1093](#)
- [vlan-tags \(Dual-Tagged Logical Interface\) on page 1095](#)

## vlan-id-list (Interface in Bridge Domain)

<b>Syntax</b>	<code>vlan-id-list [ <i>number number-number</i> ];</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family bridge]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 15.1.
<b>Description</b>	Configure a logical interface to forward packets and learn MAC addresses within each bridge domain configured with a VLAN ID that matches a VLAN ID specified in the list. VLAN IDs can be entered individually using a space to separate each ID, entered as an inclusive list separating the starting VLAN ID and ending VLAN ID with a hyphen, or a combination of both.
<b>Options</b>	<i>number number</i> —Individual VLAN IDs separated by a space.  <i>number-number</i> —Starting VLAN ID and ending VLAN ID in an inclusive range. <b>Range:</b> 1 through 4095
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring a Logical Interface for Trunk Mode</i></li> <li>• <i>Configuring the VLAN ID List for a Trunk Interface</i></li> <li>• <i>Tunnel Services Overview</i></li> <li>• <i>Tunnel Interface Configuration on MX Series Routers Overview</i></li> </ul>

## vlan-id-range

---

<b>Syntax</b>	<code>vlan-id-range <i>vlan-id-vlan-id</i></code>
<b>Hierarchy Level</b>	<code>[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>],</code> <code>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 8.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Bind a range of VLAN IDs to a logical interface.
<b>Options</b>	<b>number</b> —The first number is the lowest VLAN ID in the range the second number is the highest VLAN ID in the range. <b>Range:</b> 1 through 4094



**NOTE:** Configuring `vlan-id-range` with the entire `vlan-id` range is an unnecessary waste of system resources and is not best practice. It should be used only when a subset of VLAN IDs (not the entire range) needs to be associated with a logical interface. If you specify the entire range (1-4094), it has the same result as not specifying a range; however, it consumes PFE resources such as VLAN lookup tables entries, and so on.

The following examples illustrate this further:

```
[edit interfaces interface-name]  
vlan-tagging;  
unit number {  
    vlan-id-range 1-4094;  
}  
  
[edit interfaces interface-name]  
unit 0;
```

---

VLAN ID 0 is reserved for tagging the priority of frames.

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Binding a Range of VLAN IDs to a Logical Interface</i></li></ul>

## vlan-ranges

```
Syntax  vlan-ranges {
        access-profile profile-name;
        authentication {
            packet-types [packet-types];
            password password-string;
            username-include {
                circuit-type;
                circuit-id;
                delimiter delimiter-character;
                domain-name domain-name-string;
                interface-name;
                mac-address;
                option-18;
                option-37;
                option-82 <circuit-id> <remote-id>;
                radius-realm radius-realm-string;
                remote-id;
                user-prefix user-prefix-string;
            }
            vlan-tags outer-vlan-tag-inner-vlan-tag;
        }
        dynamic-profile profile-name {
            accept (any | dhcp-v4 | inet);
            accept-out-of-band protocol;
            access-profile vlan-dynamic-profile-name;
            ranges (any | low-tag)–(any | high-tag);
        }
        override;
    }
```

**Hierarchy Level** [edit interfaces *interface-name* [auto-configure](#)]

**Release Information** Statement introduced in Junos OS Release 9.5.

**Description** Configure multiple VLANs. Each VLAN is assigned a VLAN ID number from the range.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing—control—To add this statement to the configuration.

**Related Documentation**

- *Configuring an Interface to Use the Dynamic Profile Configured to Create Single-Tag VLANs*
- *Configuring Interfaces to Support Both Single and Stacked VLANs*

## vlan-rewrite

---

<b>Syntax</b>	vlan-rewrite translate (200 500   201 501)
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>number</i> family bridge interface-mode trunk] [edit interfaces <i>interface-name</i> unit <i>number</i> family ethernet-switching interface-mode trunk]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4. Statement introduced in Junos OS Release 12.3R2 for EX Series switches.
<b>Description</b>	Translates an incoming VLAN to a bridge-domain VLAN, corresponding counter translation at egress. Supports translation of VLAN 200 to VLAN 500 and VLAN 201 to VLAN 501. Other valid VLANs pass through without translation.
<b>Options</b>	<b>translate 200 500</b> —Translates incoming packets with VLAN 200 to 500. <b>translate 201 501</b> —Translates incoming packets with VLAN 201 to 501. <b>translate 202 502</b> —Translates incoming packets with VLAN 202 to 502.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Rewriting a VLAN Tag and Adding a New Tag</i></li></ul>

## vlan-rule (100-Gigabit Ethernet Type 4 PIC with CFP)


<b>Syntax</b>	vlan-rule (high-low   odd-even);
<b>Hierarchy Level</b>	[edit chassis fpc slot pic slot forwarding-mode <a href="#">vlan-steering</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 10.4.
<b>Description</b>	<p>Configure the interoperation mode of the 100-Gigabit Ethernet Type 4 PIC with CFP (PD-ICE-CFP-FPC4) when interoperating with 100 gigabit Ethernet interfaces from other vendors.</p> <p>If no VLAN rule is configured, all tagged packets are distributed to PFE0.</p>
<b>Options</b>	<p><b>high-low</b>—VLAN IDs 1 through 2047 are distributed to PFE0 and VLAN IDs 2048 through 4096 are distributed to PFE1.</p> <p><b>odd-even</b>—Odd number VLAN IDs are distributed to PFE1 and even number VLAN IDs are distributed to PFE0.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring VLAN Steering Mode for 100-Gigabit Ethernet Type 4 PIC with CFP</i></li> <li>• <i>forwarding-mode (100-Gigabit Ethernet)</i></li> <li>• <a href="#">vlan-steering (100-Gigabit Ethernet Type 4 PIC with CFP) on page 1092</a></li> </ul>

## vlan-steering (100-Gigabit Ethernet Type 4 PIC with CFP)

---

<b>Syntax</b>	<code>vlan-steering {     <a href="#">vlan-rule</a> (high-low   odd-even); }</code>
<b>Hierarchy Level</b>	[edit chassis fpc slot pic slot forwarding-mode]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Configure the 100-Gigabit Ethernet Type 4 PIC with CFP (PD-1CE-CFP-FPC4) to interoperate with 100 gigabit Ethernet interfaces from other vendors.</p> <p>The other statement is explained separately.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring VLAN Steering Mode for 100-Gigabit Ethernet Type 4 PIC with CFP</i></li><li>• <i>forwarding-mode (100-Gigabit Ethernet)</i></li><li>• <a href="#">sa-multicast (100-Gigabit Ethernet) on page 947</a></li><li>• <a href="#">vlan-rule (100-Gigabit Ethernet Type 4 PIC with CFP) on page 1091</a></li></ul>

## vlan-tagging

<b>Syntax</b>	vlan-tagging;
<b>Syntax (QFX Series, NFX Series, and EX4600)</b>	vlan-tagging;
<b>Syntax (SRX Series Interfaces)</b>	vlan-tagging native-vlan-id <i>vlan-id</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ]
<b>QFX Series, NFX Series, and EX4600 Interfaces</b>	[edit interfaces (QFX Series) <i>interface-name</i> ] [edit interfaces (QFX Series) interface-range <i>interface-range-name</i> ]
<b>SRX Series Interfaces</b>	[edit interfaces <i>interface</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 9.5. Statement introduced in Junos OS Release 11.3 for the QFX Series. Statement introduced in Junos OS Release 12.2 for ACX Series Universal Metro Routers. Statement introduced in Junos OS Release 13.2 for PTX Series Routers. Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series.
<b>Description</b>	For Fast Ethernet and Gigabit Ethernet interfaces, aggregated Ethernet interfaces configured for VPLS, and pseudowire subscriber interfaces, enable the reception and transmission of 802.1Q VLAN-tagged frames on the interface.
<div>  <p><b>NOTE:</b> For QFX Series configure VLAN identifier for untagged packets received on the physical interface of a trunk mode interface. Enable VLAN tagging. The platform receives and forwards single-tag frames with 802.1Q VLAN tags.</p> <p>On EX Series switches except for EX4300 and EX9200 switches, the <code>vlan-tagging</code> and <code>family ethernet-switching</code> statements cannot be configured on the same interface. Interfaces on EX2200, EX3200, EX3300, EX4200, and EX4500 switches are set to <code>family ethernet-switching</code> by the default factory configuration. EX6200 and EX8200 switch interfaces do not have a default family setting.</p> </div>	
<b>Default</b>	VLAN tagging is disabled by default.

**Options**    **native-vlan-id**— (SRX Series) Configures a VLAN identifier for untagged packets. Enter a number from 0 through 4094.



**NOTE:** The **native-vlan-id** can be configured only when either **flexible-vlan-tagging** mode or **interface-mode trunk** is configured.

**Required Privilege Level**    interface—To view this statement in the configuration.  
    interface-control—To add this statement to the configuration.

- Related Documentation**
- [802.1Q VLANs Overview](#)
  - [Configuring a Layer 3 Subinterface \(CLI Procedure\)](#)
  - [Configuring Tagged Aggregated Ethernet Interfaces](#)
  - [Example: Configuring Layer 3 Subinterfaces for a Distribution Switch and an Access Switch](#)
  - [vlan-id](#)
  - [Configuring a Layer 3 Logical Interface](#)
  - [Configuring VLAN Tagging](#)

## vlan-tags (Dual-Tagged Logical Interface)

<b>Syntax</b>	<code>vlan-tags inner-list [vlan-id vlan-id-vlan-id ] outer &lt;tpid.&gt;vlan-id;</code>
<b>Hierarchy Level</b>	<code>[edit interfaces interface-name unit logical-unit-number],</code> <code>[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]</code>
<b>Release Information</b>	Statement introduced in Junos OS Release 9.5.
<b>Description</b>	(MX Series routers only) Binds a dual-tag logical interface to a list of VLAN IDs. Configures the logical interface to receive and forward any dual-tag frame whose inner VLAN ID tag matches the list of VLAN IDs you specify.



### NOTE:

To create a circuit cross-connect (CCC) using VLAN-bundled dual-tag logical interfaces on Layer 2 VPN routing instances, you must include the `encapsulation-type` statement and specify the value `ethernet-vlan` at the one of the following hierarchy levels:

- `[edit routing-instances routing-instance-name protocols l2vpn]`
- `[edit logical-systems logical-system-name routing-instances routing-instance-name protocols l2vpn]`

For more information about the `encapsulation-type` configuration statement and the Layer 2 encapsulation types `ethernet` and `ethernet-vlan`, see the *Junos OS VPNs Library for Routing Devices*.

**Options** `inner-list [vlan-id vlan-id vlan-id-vlan-id]`—A list of valid VLAN ID numbers. Specify the VLAN IDs individually by using a space to separate each ID, as an inclusive list by separating the starting VLAN ID and ending VLAN ID with a hyphen, or as a combination of both.

**Range:** 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames.

`outer <tpid.>vlan-id`—An optional Tag Protocol ID (TPID) and a valid VLAN ID.

**Range:** For TPID, specify a hexadecimal value in the format `0xnnnn`.

**Range:** For VLAN ID, 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames.



**NOTE:** Configuring `inner-list` with the entire `vlan-id` range is an unnecessary waste of system resources and is not best practice. It should be used only when a subset of VLAN IDs of inner tag (not the entire range) needs to be associated with a logical interface. If you specify the entire range (1 through

4094), it has the same result as not specifying a range; however, it consumes PFE resources such as VLAN lookup tables entries, and so on.

The following examples illustrate this further:

```
[edit interfaces interface-name]  
vlan-tagging;  
unit number {  
    vlan-tags outer vid inner-list 1-4094;  
}  
  
[edit interfaces interface-name]  
vlan-tagging;  
unit number {  
    vlan-id vid;  
}
```

---

<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
---------------------------------	---

- |                              |   |
|------------------------------|---|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Binding VLAN IDs to Logical Interfaces</a></li><li>• <a href="#">encapsulation (Logical Interface) on page 573</a></li><li>• <a href="#">encapsulation on page 577</a></li><li>• encapsulation-type (Layer 2 VPN routing instance), see the <i>Junos OS VPNs Library for Routing Devices</i>.</li><li>• <a href="#">flexible-vlan-tagging on page 618</a></li><li>• <a href="#">vlan-id-list (Ethernet VLAN Circuit) on page 1085</a></li><li>• <a href="#">vlan-tagging on page 1093</a></li></ul> |
|------------------------------|---|

## vlan-tags (Stacked VLAN Tags)

<b>Syntax</b>	<code>vlan-tags inner <i>tpid.vlan-id</i> inner-list <i>value</i> inner-range <i>vid1—vid2</i> outer <i>tpid.vlan-id</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers.
<b>Description</b>	Bind TPIDs and 802.1Q VLAN tag IDs to a logical interface. TPID fields are used to identify the frame as an IEEE 802.1Q-tagged frame.
<b>Options</b>	<p><b>inner <i>tpid.vlan-id</i></b>—A TPID and a valid VLAN identifier. TPID is a 16-bit field set to a value of 0x8100 in order to identify the frame as an IEEE 802.1Q-tagged frame.</p> <p><b>Range:</b> (most routers) For VLAN ID, 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames. For PTX Series, VLAN ID 0 is not supported.</p> <p><b>inner-list <i>value</i></b>— List or a set of VLAN identifiers.</p>



**NOTE:** This is supported on MX Series routers with Trio-based FPCs.

**inner-range *tpid. vid1—vid2***—Specify a TPID and a range of VLAN IDs where vid1 is the start of the range and vid2 is the end of the range.



**NOTE:** On the network-to-network (NNI) or egress interfaces of provider edge (PE) routers, you cannot configure the inner-range *tpid. vid1—vid2* option with the `vlan-tags` statement for ISP-facing interfaces.

**Range:** For VLAN ID, 1 through 4094. VLAN ID 0 is reserved for tagging the priority of frames.

**outer *tpid.vlan-id***—A TPID and a valid VLAN identifier.

**Range:** (most routers) For VLAN ID, 1 through 511 for normal interfaces, and 512 through 4094 for VLAN CCC interfaces. VLAN ID 0 is reserved for tagging the priority of frames. For PTX Series, VLAN ID 0 is not supported.



**NOTE:** Configuring inner-range with the entire `vlan-id` range consumes system resources and is not a best practice. The inner-range must be used only when a subset of VLAN IDs of inner tag (not the entire range) needs to be associated with a logical interface. If you specify the entire range (1 through 4094), it

has the same result as not specifying a range; however, it consumes Packet Forwarding Engine resources such as VLAN lookup table entries, and so on.

The following examples illustrate this further:

```
[edit interfaces interface-name]  
stacked-vlan-tagging;  
unit number {  
    vlan-tags outer vid inner-range 1-4094;  
}  
  
[edit interfaces interface-name]  
vlan-tagging;  
unit number {  
    vlan-id vid;  
}
```

---

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Configuring Dual VLAN Tags*
- *Configuring Flexible VLAN Tagging on PTX Series Packet Transport Routers*
- [stacked-vlan-tagging on page 988](#)

---

## vlan-tags-outer

---

**Syntax** `vlan-tags-outer vlan-tag;`

**Hierarchy Level** [edit interfaces [interface-set](#) *interface-set-name* interface *interface-name*]

**Release Information** Statement introduced in Junos OS Release 8.5.

**Description** The S-VLAN outer tag that belongs to a set of interfaces used to configure hierarchical CoS schedulers.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Class of Service Feature Guide for Routing Devices and EX9200 Switches*

## vlan-vci-tagging

<b>Syntax</b>	<code>vlan-vci-tagging;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0.
<b>Description</b>	Enable the ATM-to-Ethernet interworking cross-connect function on a Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring ATM-to-Ethernet Interworking on page 282</a></li> </ul>

## vpi (ATM CCC Cell-Relay Promiscuous Mode)

<b>Syntax</b>	<code>vpi vpi-identifier;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <a href="#">atm-options promiscuous-mode</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4. Junos OS Release 12.2 for the ACX Series Universal Metro routers.
<b>Description</b>	<p>For ATM interfaces, allow all VCI in this VPI to open in ATM CCC cell-relay mode.</p> <p>When you include <code>vpi</code> statements at the [edit interfaces <i>interface-name</i> <a href="#">atm-options promiscuous-mode</a>] hierarchy level, the specified VPIs open in promiscuous mode.</p>
<b>Options</b>	<p><b>vpi-identifier</b>—ATM virtual path identifier. This is one of the VPIs that you define in the <code>vci</code> statement. (For a list of hierarchy levels at which you can include the <code>vci</code> statement, see <code>vci</code>.)</p> <p><b>Range:</b> 0 through 255</p>
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Configuring ATM Cell-Relay Promiscuous Mode</a></li> </ul>

## vpi (Define Virtual Path)

---

**Syntax**    `vpi vpi-identifier {  
                  maximum-vcs maximum-vcs;  
                  oam-liveness {  
                    up-count cells;  
                    down-count cells;  
                  }  
                  oam-period (disable | seconds);  
                  shaping {  
                    (cbr rate | rtvbr peak rate sustained rate burst length | vbr peak rate sustained rate burst  
                      length);  
                    queue-length number;  
                  }  
                }`

**Hierarchy Level**    [edit interfaces at-*fpc/pic/port* atm-options]

**Release Information**    Statement introduced before Junos OS Release 7.4.

**Description**    For ATM interfaces, configure the virtual path (VP).



**NOTE:** Certain options apply only to specific platforms.

---

**Options**    *vpi-identifier*—ATM virtual path identifier. This is one of the VPIs that you define in the *vci* statement. (For a list of hierarchy levels at which you can include the *vci* statement, see *vci*.)

**Range:** 0 through 255

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

**Required Privilege Level**    interface—To view this statement in the configuration.  
                                  interface-control—To add this statement to the configuration.

**Related Documentation**    • *Configuring the Maximum Number of ATM1 VCs on a VP*

---


## vpi (Logical Interface and Interworking)

---

<b>Syntax</b>	<code>vpi virtual-path-identifier;</code>
<b>Hierarchy Level</b>	[edit interfaces at- <i>fpc/pic/port</i> <b>unit</b> <i>logical-unit-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces at- <i>fpc/pic/port</i> <b>unit</b> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 9.0. Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Metro routers.
<b>Description</b>	VPI used in an ATM-to-Ethernet interworking cross-connect.
<b>Options</b>	<b>virtual-path-identifier</b> —VPI to be used. <b>Range:</b> 0 through 255
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Configuring ATM-to-Ethernet Interworking on page 282</a></li><li>• <i>Configuring ATM Cell-Relay Promiscuous Mode</i></li></ul>

## vtmapping

---

<b>Syntax</b>	vtmapping (itu-t   klm);
<b>Hierarchy Level</b>	[edit chassis fpc <i>number</i> pic <i>number</i> ], [edit interfaces <i>interface-name</i> sonet-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	<p>For the Channelized STM1 IQ PIC or Channelized STM1 PIC, configure virtual tributary mapping.</p> <p>For the Channelized STM1 PIC, you configure virtual tributary mapping at the [edit chassis fpc <i>number</i> pic <i>number</i>] hierarchy level.</p>
	<div> <b>NOTE:</b> The vtmapping statement is not supported for cau4 interfaces on the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H).</div>
<b>Options</b>	<p>itu-t—International Telephony Union standard.</p> <p>klm—KLM standard.</p> <p><b>Default:</b> klm</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>Configuring Virtual Tributary Mapping of Channelized STM1 Interfaces</li><li>Configuring the Junos OS to Support Channelized STM1 Interface Virtual Tributary Mapping</li></ul>

## warning

---

<b>Syntax</b>	<pre>warning low-light-warning {   (link-down   syslog); }</pre>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> optics-options]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 10.0.</p> <p>Statement introduced in Junos OS Release 12.1 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 13.2 for PTX Series routers.</p> <p>Statement introduced in Junos OS Release 18.3R1 for PTX10K-LC1104 on the PTX10008 and PTX10016 routers.</p>
<b>Description</b>	Specifies the action to take if the receiving optics signal is below the optics low-light warning threshold.
<b>Options</b>	<p><b>link-down</b>—Drop the 10-Gigabit Ethernet link and marks link as down.</p> <p><b>syslog</b>—Write the optics information to the system log.</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring 10-Gigabit Ethernet Link Down Notification for Optics Options Alarm or Warning</i></li> <li>• <a href="#">optics-options on page 840</a></li> <li>• <i>100-Gigabit Ethernet OTN Options Configuration Overview</i></li> </ul>

## watch-list

---

<b>Syntax</b>	<code>watch-list {     [ <i>routes</i> ]; }</code>
<b>Hierarchy Level</b>	[edit interfaces <i>dl</i> n unit <i>logical-unit-number</i> <b>dialer-options</b> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	On J Series Services Routers with ISDN interfaces, configure an ISDN list of routes to watch. Used only for dialer watch.
<b>Options</b>	<b>routes</b> —IP prefix of a route. Specify one or more. The primary interface is considered up if there is at least one valid route for any of the addresses in the watch list to an interface other than the backup interface.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Interfaces and Routing Configuration Guide</i></li></ul>

## wavelength

**Syntax** `wavelength nm;`

**Hierarchy Level** [edit interfaces *interface-name* **optics-options**]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 12.1 for EX Series switches.  
Statement introduced in Junos OS Release 13.2 for PTX Series routers.

**Description** For 10-Gigabit or 100-Gigabit Ethernet DWDM interfaces only, configure full C-band ITU-Grid tunable optics.

**Options** *nm*—Wavelength value. It can be one of the following:



**NOTE:** All values are displayed. However, if you configure a value that is not supported by the device, an error message is displayed and the device is not tuned to the specified wavelength.

- **1528.38**—1528.38 nanometers (nm), corresponds to a 50-GHz grid
- **1528.77**—1528.77 nm, corresponds to 50-GHz and 100-GHz grids
- **1529.16**—1529.16 nm, corresponds to a 50-GHz grid
- **1529.55**—1529.55 nm, corresponds to 50-GHz and 100-GHz grids
- **1529.94**—1529.94 nm, corresponds to a 50-GHz grid
- **1530.33**—1530.33 nm, corresponds to 50-GHz and 100-GHz grids
- **1530.72**—1530.72 nm, corresponds to a 50-GHz grid
- **1531.12**—1531.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1531.51**—1531.51 nm, corresponds to a 50-GHz grid
- **1531.90**—1531.90 nm, corresponds to 50-GHz and 100-GHz grids
- **1532.29**—1532.29 nm, corresponds to a 50-GHz grid
- **1532.68**—1532.68 nm, corresponds to 50-GHz and 100-GHz grids
- **1533.07**—1533.07 nm, corresponds to a 50-GHz grid
- **1533.47**—1533.47 nm, corresponds to 50-GHz and 100-GHz grids
- **1533.86**—1533.86 nm, corresponds to a 50-GHz grid
- **1534.25**—1534.25 nm, corresponds to 50-GHz and 100-GHz grids
- **1534.64**—1534.64 nm, corresponds to a 50-GHz grid

- **1535.04**—1535.04 nm, corresponds to 50-GHz and 100-GHz grids
- **1535.43**—1535.43 nm, corresponds to a 50-GHz grid
- **1535.82**—1535.82 nm, corresponds to 50-GHz and 100-GHz grids
- **1536.22**—1536.22 nm, corresponds to a 50-GHz grid
- **1536.61**—1536.61 nm, corresponds to 50-GHz and 100-GHz grids
- **1537.00**—1537.00 nm, corresponds to a 50-GHz grid
- **1537.40**—1537.40 nm, corresponds to 50-GHz and 100-GHz grids
- **1537.79**—1537.79 nm, corresponds to a 50-GHz grid
- **1538.19**—1538.19 nm, corresponds to 50-GHz and 100-GHz grids
- **1538.58**—1538.58 nm, corresponds to a 50-GHz grid
- **1538.98**—1538.98 nm, corresponds to 50-GHz and 100-GHz grids
- **1539.37**—1539.37 nm, corresponds to a 50-GHz grid
- **1539.77**—1539.77 nm, corresponds to 50-GHz and 100-GHz grids
- **1540.16**—1540.16 nm, corresponds to a 50-GHz grid
- **1540.56**—1540.56 nm, corresponds to 50-GHz and 100-GHz grids
- **1540.95**—1540.95 nm, corresponds to a 50-GHz grid
- **1541.35**—1541.35 nm, corresponds to 50-GHz and 100-GHz grids
- **1541.75**—1541.75 nm, corresponds to a 50-GHz grid
- **1542.14**—1542.14 nm, corresponds to 50-GHz and 100-GHz grids
- **1542.54**—1542.54 nm, corresponds to a 50-GHz grid
- **1542.94**—1542.94 nm, corresponds to 50-GHz and 100-GHz grids
- **1543.33**—1543.33 nm, corresponds to a 50-GHz grid
- **1543.73**—1543.73 nm, corresponds to 50-GHz and 100-GHz grids
- **1544.13**—1544.13 nm, corresponds to a 50-GHz grid
- **1544.53**—1544.53 nm, corresponds to 50-GHz and 100-GHz grids
- **1544.92**—1544.92 nm, corresponds to a 50-GHz grid
- **1545.32**—1545.32 nm, corresponds to 50-GHz and 100-GHz grids
- **1545.72**—1545.72 nm, corresponds to a 50-GHz grid
- **1546.12**—1546.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1546.52**—1546.52 nm, corresponds to a 50-GHz grid
- **1546.92**—1546.92 nm, corresponds to 50-GHz and 100-GHz grids
- **1547.32**—1547.32 nm, corresponds to a 50-GHz grid
- **1547.72**—1547.72 nm, corresponds to 50-GHz and 100-GHz grids

- **1548.11**—1548.11 nm, corresponds to a 50-GHz grid
- **1548.51**—1548.51 nm, corresponds to 50-GHz and 100-GHz grids
- **1548.91**—1548.91 nm, corresponds to a 50-GHz grid
- **1549.32**—1549.32 nm, corresponds to 50-GHz and 100-GHz grids
- **1549.72**—1549.72 nm, corresponds to a 50-GHz grid
- **1550.12**—1550.12 nm, corresponds to 50-GHz and 100-GHz grids
- **1550.52**—1550.52 nm, corresponds to a 50-GHz grid
- **1550.92**—1550.92 nm, corresponds to 50-GHz and 100-GHz grids
- **1551.32**—1551.32 nm, corresponds to a 50-GHz grid
- **1551.72**—1551.72 nm, corresponds to 50-GHz and 100-GHz grids
- **1552.12**—1552.12 nm, corresponds to a 50-GHz grid
- **1552.52**—1552.52 nm, corresponds to 50-GHz and 100-GHz grids
- **1552.93**—1552.93 nm, corresponds to a 50-GHz grid
- **1553.33**—1554.33 nm, corresponds to 50-GHz and 100-GHz grids
- **1553.73**—1554.73 nm, corresponds to a 50-GHz grid
- **1554.13**—1554.13 nm, corresponds to 50-GHz and 100-GHz grids
- **1554.54**—1554.54 nm, corresponds to a 50-GHz grid
- **1554.94**—1554.94 nm, corresponds to 50-GHz and 100-GHz grids
- **1555.34**—1555.34 nm, corresponds to a 50-GHz grid
- **1555.75**—1555.75 nm, corresponds to 50-GHz and 100-GHz grids
- **1556.15**—1556.15 nm, corresponds to a 50-GHz grid
- **1556.55**—1556.55 nm, corresponds to 50-GHz and 100-GHz grids
- **1556.96**—1556.96 nm, corresponds to a 50-GHz grid
- **1557.36**—1557.36 nm, corresponds to 50-GHz and 100-GHz grids
- **1557.77**—1557.77 nm, corresponds to a 50-GHz grid
- **1558.17**—1558.17 nm, corresponds to 50-GHz and 100-GHz grids
- **1558.58**—1558.58 nm, corresponds to a 50-GHz grid
- **1558.98**—1558.98 nm, corresponds to 50-GHz and 100-GHz grids
- **1559.39**—1559.39 nm, corresponds to a 50-GHz grid
- **1559.79**—1559.79 nm, corresponds to 50-GHz and 100-GHz grids
- **1560.20**—1560.20 nm, corresponds to a 50-GHz grid
- **1560.61**—1560.61 nm, corresponds to 50-GHz and 100-GHz grids
- **1561.01**—1561.01 nm, corresponds to a 50-GHz grid

- **1561.42**—1561.42 nm, corresponds to 50-GHz and 100-GHz grids
- **1561.83**—1561.83 nm, corresponds to a 50-GHz grid
- **1562.23**—1562.23 nm, corresponds to 50-GHz and 100-GHz grids
- **1562.64**—1562.64 nm, corresponds to a 50-GHz grid
- **1563.05**—1563.05 nm, corresponds to 50-GHz and 100-GHz grids
- **1563.45**—1563.45 nm, corresponds to a 50-GHz grid
- **1563.86**—1563.86 nm, corresponds to 50-GHz and 100-GHz grids
- **1564.27**—1564.27 nm, corresponds to a 50-GHz grid
- **1564.68**—1564.68 nm, corresponds to 50-GHz and 100-GHz grids
- **1565.09**—1565.09 nm, corresponds to a 50-GHz grid
- **1565.50**—1565.50 nm, corresponds to 50-GHz and 100-GHz grids
- **1565.90**—1565.90 nm, corresponds to a 50-GHz grid
- **1566.31**—1566.31 nm, corresponds to 50-GHz and 100-GHz grids
- **1566.72**—1566.72 nm, corresponds to a 50-GHz grid
- **1567.13**—1567.13 nm, corresponds to 50-GHz and 100-GHz grids
- **1567.54**—1567.54 nm, corresponds to a 50-GHz grid
- **1567.95**—1567.95 nm, corresponds to 50-GHz and 100-GHz grids
- **1568.36**—1568.36 nm, corresponds to a 50-GHz grid
- **1568.77**—1568.77 nm, corresponds to 50-GHz and 100-GHz grids

**Default:** 1550.12—1550.12 nm, corresponds to 50-GHz and 100-GHz grids

<b>Required Privilege</b>	interface—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.

<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Ethernet DWDM Interface Wavelength Overview</i></li><li>• <i>Configuring the 10-Gigabit or 100-Gigabit Ethernet DWDM Interface Wavelength</i></li><li>• <i>show interfaces diagnostics optics (Gigabit Ethernet, 10-Gigabit Ethernet, 40-Gigabit Ethernet, 100-Gigabit Ethernet, and Virtual Chassis Port)</i></li></ul>
------------------------------	---

## west-interface

**Syntax**

```
west-interface {
  node-id mac-address;
  control-channel channel-name {
    vlan number;
    interface name interface-name
  }
  interface-none
  ring-protection-link-end;
  virtual-control-channel {
    west-interface name;
    east-interface name;
  }
}
```

**Hierarchy Level** [edit protocols [protection-group ethernet-ring ring-name](#)]

**Release Information** Statement introduced in Junos OS Release 9.5.  
Statement introduced in Junos OS Release 12.1 for EX Series switches.  
Statement introduced in Junos OS Release 14.153-D10 for QFX Series switches.

**Description** Define one of the two interface ports for Ethernet ring protection, the other being defined by the **east-interface** statement at the same hierarchy level. The interface must use the control channel's logical interface name. The control channel is a dedicated VLAN channel for the ring port.



**NOTE:** Always configure this port second, after configuring the **east-interface** statement.

The remaining statements are explained separately. See [CLI Explorer](#).

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- *Ethernet Ring Protection Switching Overview*
- *Ethernet Ring Protection Using Ring Instances for Load Balancing*
- [east-interface on page 570](#)
- [ethernet-ring on page 595](#)
- *Example: Configuring Ethernet Ring Protection Switching on EX Series Switches*
- *Example: Configuring Ethernet Ring Protection Switching on QFX Series and EX Series Switches Supporting ELS*
- *Configuring Ethernet Ring Protection Switching on Switches (CLI Procedure)*

## working-circuit

---

<b>Syntax</b>	<code>working-circuit <i>group-name</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options <a href="#">aps</a> ]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure the working router in an APS circuit pair.
<b>Options</b>	<i>group-name</i> —Circuit's group name.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring Basic Automatic Protect Switching</i></li><li>• <a href="#">protect-circuit on page 907</a></li></ul>

## yellow-differential-delay

---

<b>Syntax</b>	<code>yellow-differential-delay <i>milliseconds</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	For link services and voices interfaces only, configure the yellow differential delay among bundle links to give warning when a link has a differential delay that exceeds the configured threshold.
<b>Options</b>	<i>milliseconds</i> —Yellow differential delay threshold. <b>Range:</b> 1 through 2000 milliseconds <b>Default:</b> 6 milliseconds
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Junos OS Services Interfaces Library for Routing Devices</i></li><li>• <a href="#">action-red-differential-delay on page 421</a></li><li>• <a href="#">remote on page 927</a></li></ul>

---

## z0-increment

---

<b>Syntax</b>	(z0-increment   no-z0-increment);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> sonet-options]
<b>Release Information</b>	Statement introduced before Junos OS Release 7.4.
<b>Description</b>	Configure an incremental STM ID rather than a static one.
<b>Default</b>	no-Z0-increment
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Configuring an Incrementing STM ID to Interoperate with Older Equipment in SDH Mode</i></li><li>• <a href="#">sonet-options on page 974</a></li></ul>



# Interface Operational Commands

- [Common Output Fields Description on page 1114](#)
- [Improvements to Interface Transmit Statistics Reporting on page 1121](#)
- [show interfaces](#)
- [show interfaces \(ATM\)](#)
- [show interfaces \(Channelized DS3-to-DS0\)](#)
- [show interfaces \(Channelized DS3-to-DS1\)](#)
- [show interfaces \(Channelized E1 IQ\)](#)
- [show interfaces \(Channelized E1\)](#)
- [show interfaces \(Channelized OC12 IQ and IQE\)](#)
- [show interfaces \(Channelized OC12\)](#)
- [show interfaces \(Channelized OC3 IQ and IQE\)](#)
- [show interfaces \(Channelized STM1 IQ\)](#)
- [show interfaces \(Channelized STM1\)](#)
- [show interfaces \(Channelized T1 IQ\)](#)
- [show interfaces \(Channelized T3 IQ\)](#)
- [show interfaces \(Discard\)](#)
- [show interfaces \(Fast Ethernet\)](#)
- [show interfaces](#)
- [show interfaces \(M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet\)](#)
- [show interfaces \(PPPoE\)](#)
- [show interfaces \(PTX Series Packet Transport Routers\)](#)
- [show interfaces \(SONET/SDH\)](#)
- [show interfaces \(Serial\)](#)
- [show interfaces \(T1, E1, or DS\)](#)
- [show interfaces \(T3 or E3\)](#)
- [show interfaces demux0 \(Demux Interfaces\)](#)
- [show interfaces extensive](#)

- `show interfaces lsi` (Label-Switched Interface)
- `show interfaces media`
- `show interfaces terse`

## Common Output Fields Description

---

This chapter explains the content of the output fields, which appear in the output of most **show interfaces** commands.

### Damping Field

For the physical interface, the Damping field shows the setting of the following damping parameters:

- **half-life**—Decay half-life. The number of seconds after which the accumulated interface penalty counter is reduced by half if the interface remains stable.
- **max-suppress**—Maximum hold-down time. The maximum number of seconds that an interface can be suppressed irrespective of how unstable the interface has been.
- **reuse**—Reuse threshold. When the accumulated interface penalty counter falls below this number, the interface is no longer suppressed.
- **suppress**—Cutoff (suppression) threshold. When the accumulated interface penalty counter exceeds this number, the interface is suppressed.
- **state**—Interface damping state. If damping is enabled on an interface, it is suppressed during interface flaps that match the configured damping parameters.

### Destination Class Field

For the logical interface, the **Destination class** field provides the names of destination class usage (DCU) counters per family and per class for a particular interface. The counters display packets and bytes arriving from designated user-selected prefixes. For example:

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	1928095 ( 889)	161959980 ( 597762)
bronze	0 ( 0)	0 ( 0)
silver	0 ( 0)	0 ( 0)

### Enabled Field

For the physical interface, the **Enabled** field provides information about the state of the interface, displaying one or more of the following values:

- **Administratively down, Physical link is Down**—The interface is turned off, and the physical link is inoperable and cannot pass packets even when it is enabled. To change the interface state to **Enabled**, use the following command:

```
user@host# set interfaces interface enable
```

Manually verify the connections to bring the physical link up.

- **Administratively down, Physical link is Up**—The interface is turned off, but the physical link is operational and can pass packets when it is enabled. To change the interface state to **Enabled**, use the following command:

```
user@host# set interfaces interface enable
```

- **Enabled, Physical link is Down**—The interface is turned on, but the physical link is inoperable and cannot pass packets. Manually verify the connections to bring the physical link up.
- **Enabled, Physical link is Up**—The interface is turned on, and the physical link is operational and can pass packets.

## Filters Field

For the logical interface, the **Filters** field provides the name of the firewall filters to be evaluated when packets are received or transmitted on the interface. The format is **Filters: Input: *filter-name* and Filters: Output: *filter-name***. For example:

```
Filters: Input: sample-all
Filters: Output: cp-ftp
```

## Flags Fields

The following sections provide information about flags that are specific to interfaces:

- [Addresses, Flags Field on page 1115](#)
- [Device Flags Field on page 1116](#)
- [Family Flags Field on page 1116](#)
- [Interface Flags Field on page 1117](#)
- [Link Flags Field on page 1118](#)
- [Logical Interface Flags Field on page 1118](#)

### Addresses, Flags Field

The **Addresses, Flags** field provides information about the addresses configured for the protocol family on the logical interface and displays one or more of the following values:

- **Dest-route-down**—The routing process detected that the link was not operational and changed the interface routes to nonforwarding status
- **Is-Default**—The default address of the router used as the source address by SNMP, ping, traceroute, and other network utilities.
- **Is-Preferred**—The default local address for packets originating from the local router and sent to destinations on the subnet.
- **Is-Primary**—The default local address for broadcast and multicast packets originated locally and sent out the interface.
- **Preferred**—This address is a candidate to become the preferred address.

- **Primary**—This address is a candidate to become the primary address.
- **Trunk**—Interface is a trunk.
- **Trunk, Inter-Switch-Link**—Interface is a trunk, and InterSwitch Link protocol (ISL) is configured on the trunk port of the primary VLAN in order to connect the routers composing the PVLAN to each other.

---

### Device Flags Field

The **Device flags** field provides information about the physical device and displays one or more of the following values:

- **ASIC Error**—Device is down because of ASIC wedging and due to which PFE is disabled.
- **Down**—Device has been administratively disabled.
- **Hear-Own-Xmit**—Device receives its own transmissions.
- **Link-Layer-Down**—The link-layer protocol has failed to connect with the remote endpoint.
- **Loopback**—Device is in physical loopback.
- **Loop-Detected**—The link layer has received frames that it sent, thereby detecting a physical loopback.
- **No-Carrier**—On media that support carrier recognition, no carrier is currently detected.
- **No-Multicast**—Device does not support multicast traffic.
- **Present**—Device is physically present and recognized.
- **Promiscuous**—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.
- **Quench**—Transmission on the device is quenched because the output buffer is overflowing.
- **Recv-All-Multicasts**—Device is in multicast promiscuous mode and therefore provides no multicast filtering.
- **Running**—Device is active and enabled.

---

### Family Flags Field

The **Family flags** field provides information about the protocol family on the logical interface and displays one or more of the following values:

- **DCU**—Destination class usage is enabled.
- **Dest-route-down**—The software detected that the link is down and has stopped forwarding the link's interface routes.
- **Down**—Protocol is inactive.
- **Is-Primary**—Interface is the primary one for the protocol.
- **Mac-Validate-Loose**—Interface is enabled with loose MAC address validation.

- **Mac-Validate-Strict**—Interface is enabled with strict MAC address validation.
- **Maximum labels**—Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.
- **MTU-Protocol-Adjusted**—The effective MTU is not the configured value in the software.
- **No-Redirects**—Protocol redirects are disabled.
- **Primary**—Interface can be considered for selection as the primary family address.
- **Protocol-Down**—Protocol failed to negotiate correctly.
- **SCU-in**—Interface is configured for source class usage input.
- **SCU-out**—Interface is configured for source class usage output.
- **send-bcast-packet-to-re**—Interface is configured to forward IPv4 broadcast packets to the Routing Engine.
- **targeted-broadcast**—Interface is configured to forward IPv4 broadcast packets to the LAN interface and the Routing Engine.
- **Unnumbered**—Protocol family is configured for unnumbered Ethernet. An unnumbered Ethernet interface borrows an IPv4 address from another interface, which is referred to as the donor interface.
- **Up**—Protocol is configured and operational.
- **uRPF**—Unicast Reverse Path Forwarding is enabled.

---

### Interface Flags Field

The **Interface flags** field provides information about the physical interface and displays one or more of the following values:

- **Admin-Test**—Interface is in test mode and some sanity checking, such as loop detection, is disabled.
- **Disabled**—Interface is administratively disabled.
- **Down**—A hardware failure has occurred.
- **Hardware-Down**—Interface is nonfunctional or incorrectly connected.
- **Link-Layer-Down**—Interface keepalives have indicated that the link is incomplete.
- **No-Multicast**—Interface does not support multicast traffic.
- **No-receive No-transmit**—Passive monitor mode is configured on the interface.
- **OAM-On-SVLAN**—(MX Series routers with MPC/MIC interfaces only) Interface is configured to propagate the Ethernet OAM state of a static, single-tagged service VLAN (S-VLAN) on a Gigabit Ethernet, 10-Gigabit Ethernet, or aggregated Ethernet interface to a dynamic or static double-tagged customer VLAN (C-VLAN) that has the same S-VLAN (outer) tag as the S-VLAN.
- **Point-To-Point**—Interface is point-to-point.

- **Pop all MPLS labels from packets of depth**—MPLS labels are removed as packets arrive on an interface that has the **pop-all-labels** statement configured. The depth value can be one of the following:
  - **1**—Takes effect for incoming packets with one label only.
  - **2**—Takes effect for incoming packets with two labels only.
  - **[ 1 2 ]**—Takes effect for incoming packets with either one or two labels.
- **Promiscuous**—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.
- **Recv-All-Multicasts**—Interface is in multicast promiscuous mode and provides no multicast filtering.
- **SNMP-Traps**—SNMP trap notifications are enabled.
- **Up**—Interface is enabled and operational.

---

### Link Flags Field

The **Link flags** field provides information about the physical link and displays one or more of the following values:

- **ACFC**—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.
- **Give-Up**—Link protocol does not continue connection attempts after repeated failures.
- **Loose-LCP**—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.
- **Loose-LMI**—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.
- **Loose-NCP**—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.
- **No-Keepalives**—Link protocol keepalives are disabled.
- **PFC**—Protocol field compression is configured. The PPP session negotiates the PFC option.

---

### Logical Interface Flags Field

The **Logical interface flags** field provides information about the logical interface and displays one or more of the following values:

- **ACFC Encapsulation**—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).
- **Device-down**—Device has been administratively disabled.
- **Disabled**—Interface is administratively disabled.
- **Down**—A hardware failure has occurred.

- **Clear-DF-Bit**—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.
- **Hardware-Down**—Interface protocol initialization failed to complete successfully.
- **PFC**—Protocol field compression is enabled for the PPP session.
- **Point-To-Point**—Interface is point-to-point.
- **SNMP-Traps**—SNMP trap notifications are enabled.
- **Up**—Interface is enabled and operational.

## Label-Switched Interface Traffic Statistics Field

When you use the **vrf-table-label** statement to configure a VRF routing table, a label-switched interface (LSI) logical interface label is created and mapped to the VRF routing table.

Any routes present in a VRF routing table and configured with the **vrf-table-label** statement are advertised with the LSI logical interface label allocated for the VRF routing table. When packets for this VPN arrive on a core-facing interface, they are treated as if the enclosed IP packet arrived on the LSI interface and are then forwarded and filtered based on the correct table. For more information on the **vrf-table-label** statement, including a list of supported interfaces, see the *Junos VPNs Configuration Guide*.

If you configure the **family mpls** statement at the **[edit interfaces interface-name unit logical-unit-number]** hierarchy level and you also configure the **vrf-table-label** statement at the **[edit routing-instances routing-instance-name]** hierarchy level, the output for the **show interface interface-name extensive** command includes the following output fields about the LSI traffic statistics:

- **Input bytes**—Number of bytes entering the LSI and the current throughput rate in bits per second (bps).
- **Input packets**—Number of packets entering the LSI and the current throughput rate in packets per second (pps).



**NOTE:** If LSI interfaces are used with VPLS when **no-tunnel-services** is configured or L3VPN when **vrf-table-label** configuration is applied inside the routing-instance, the **Input packets** field associated with the core-facing interfaces may not display the correct value. Only the Input counter is affected because the LSI is used to receive traffic from the remote PEs. Traffic that arrives on an LSI interface might not be counted at both the Traffic Statistics and the Label-switched interface (LSI) traffic statistics levels.

This note applies to the following platforms:

- M Series routers with -E3 FPC model numbers or configured with an Enhanced CFEB (CFEB-E), and M120 routers
- MX Series routers with DPC or ADPC only

The following example shows the LSI traffic statistics that you might see as part of the output of the **show interface *interface-name* extensive** command:

Label-switched interface (LSI) traffic statistics:

Input bytes:	0	0 bps
Input packets:	0	0 pps

## Policer Field

For the logical interface, the **Policer** field provides the policers that are to be evaluated when packets are received or transmitted on the interface. The format is **Policer: Input: *type-fpc/pic*port-in-policer, Output: *type-fpc/pic/port*-out-policer**. For example:

**Policer: Input: at-1/2/0-in-policer, Output: at-2/4/0-out-policer**

## Protocol Field

For the logical interface, the **Protocol** field indicates the protocol family or families that are configured on the interface, displaying one or more of the following values:

- **aenet**—Aggregated Ethernet. Displayed on Fast Ethernet interfaces that are part of an aggregated Ethernet bundle.
- **ccc**—Circuit cross-connect (CCC). Configured on the logical interface of CCC physical interfaces.
- **inet**—IP version 4 (IPv4). Configured on the logical interface for IPv4 protocol traffic, including Open Shortest Path First (OSPF), Border Gateway Protocol (BGP), Internet Control Message Protocol (ICMP), and Internet Protocol Control Protocol (IPCP).
- **inet6**—IP version 6 (IPv6). Configured on the logical interface for IPv6 protocol traffic, including Routing Information Protocol for IPv6 (RIPng), Intermediate System-to-Intermediate System (IS-IS), and BGP.
- **iso**—International Organization for Standardization (ISO). Configured on the logical interface for IS-IS traffic.
- **mlfr-uni-nni**—Multilink Frame Relay (MLFR) FRF.16 user-to-network network-to-network (UNI NNI). Configured on the logical interface for link services bundling.
- **mlfr-end-to-end**—Multilink Frame Relay end-to-end. Configured on the logical interface for multilink bundling.
- **mlppp**—Multilink Point-to-Point Protocol (MLPPP). Configured on the logical interface for multilink bundling.
- **mpls**—Multiprotocol Label Switching (MPLS). Configured on the logical interface for participation in an MPLS path.
- **pppoe**—Point-to-Point Protocol over Ethernet (PPPoE). Configured on Ethernet interfaces enabled to support multiple protocol families.
- **tcc**—Translational cross-connect (TCC). Configured on the logical interface of TCC physical interfaces.

- **tnp**—Trivial Network Protocol (TNP). Used to communicate between the Routing Engine and the router's packet forwarding components. The Junos OS automatically configures this protocol family on the router's internal interfaces only.
- **vpls**—Virtual private LAN service (VPLS). Configured on the logical interface on which you configure VPLS.

## RPF Failures Field

For the logical interface, the **RPF Failures** field provides information about the amount of incoming traffic (in packets and bytes) that failed a unicast reverse path forwarding (RPF) check on a particular interface. The format is **RPF Failures: Packets: xx,Bytes: yy**. For example:

**RPF Failures: Packets: 0, Bytes:0**

## Source Class Field

For the logical interface, the **Source class** field provides the names of source class usage (SCU) counters per family and per class for a particular interface. The counters display packets and bytes arriving from designated user-selected prefixes. For example:

Source class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	1928095	161959980
(	889)	( 597762)
bronze	0	0
(	0)	( 0)
silver	0	0
(	0)	( 0)

## Improvements to Interface Transmit Statistics Reporting

The offered load on an interface can be defined as the amount of data the interface is capable of transmitting during a given time period. The actual traffic that goes out of the interface is the transmitted load. However, when outgoing interfaces are oversubscribed, there could be traffic drops in the schedulers attached to the outgoing interfaces. Hence, the offered load is not always the same as the actual transmitted load because the offered load calculation does not take into account possible packet drop or traffic loss.

On MX Series routers, the logical interface-level statistics show the offered load, which is often different from the actual transmitted load. To address this limitation, Junos OS introduces a new configuration option in Release 11.4 R3 and later. The new configuration option, **interface-transmit-statistics**, at the **[edit interface *interface-name*]** hierarchy level, enables you to configure Junos OS to accurately capture and report the transmitted load on interfaces.

When the **interface-transmit-statistics** statement is included at the **[edit interface *interface-name*]** hierarchy level, the following operational mode commands report the actual transmitted load:

- **show interface *interface-name* <detail | extensive>**

- `monitor interface interface-name`
- `show snmp mib get objectID.ifIndex`

The `show interface interface-name` command also shows whether the `interface-transmit-statistics` configuration is enabled or disabled on the interface.

- Related Documentation
- [interface-transmit-statistics on page 689](#)
  - [show interfaces on page 1123](#)

## show interfaces

<b>List of Syntax</b>	<a href="#">Syntax (Gigabit Ethernet) on page 1123</a> <a href="#">Syntax (10 Gigabit Ethernet) on page 1123</a> <a href="#">Syntax (SRX Series Devices) on page 1123</a>
<b>Syntax (Gigabit Ethernet)</b>	<pre>show interfaces ge-fpc/pic/port &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Syntax (10 Gigabit Ethernet)</b>	<pre>show interfaces xe-fpc/pic/port &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Syntax (SRX Series Devices)</b>	<pre>show interfaces (   &lt;interface-name&gt;   &lt;brief   detail   extensive   terse&gt;   &lt;controller interface-name&gt;    &lt;descriptions interface-name&gt;    &lt;destination-class (all   destination-class-name logical-interface-name)&gt;    &lt;diagnostics optics interface-name&gt;    &lt;far-end-interval interface-fpc/pic/port&gt;    &lt;filters interface-name&gt;    &lt;flow-statistics interface-name&gt;    &lt;interval interface-name&gt;    &lt;load-balancing (detail   interface-name)&gt;    &lt;mac-database mac-address mac-address&gt;    &lt;mc-ae id identifier unit number revertive-info&gt;    &lt;media interface-name&gt;    &lt;policers interface-name&gt;    &lt;queue both-ingress-egress egress forwarding-class forwarding-class ingress l2-statistics&gt;    &lt;redundancy (detail   interface-name)&gt;    &lt;routing brief detail summary interface-name&gt;    &lt;routing-instance (all   instance-name)&gt;    &lt;snmp-index snmp-index&gt;    &lt;source-class (all   destination-class-name logical-interface-name)&gt;    &lt;statistics interface-name&gt;    &lt;switch-port switch-port number&gt;    &lt;transport pm (all   optics   otn) (all   current   currentday   interval   previousday) (all       interface-name)&gt;    &lt;zone interface-name&gt; )</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4 for Gigabit interfaces.</p> <p>Command introduced in Junos OS Release 8.0 for 10 Gigabit interfaces.</p> <p>Command modified in Junos OS Release 9.5 for SRX Series devices.</p>

Command introduced in Junos OS Release 18.1 for Gigabit interfaces.

**Description** Display status information about the specified Gigabit Ethernet interface.

(M320, M120, MX Series, and T Series routers only) Display status information about the specified 10-Gigabit Ethernet interface.

Display the IPv6 interface traffic statistics about the specified Gigabit Ethernet interface for MX series routers. The input and output bytes (bps) and packets (pps) rates are not displayed for IFD and local traffic.

Display status information and statistics about interfaces on SRX Series appliance running Junos OS.



**NOTE:** On SRX Series appliances, on configuring identical IPs on a single interface, you will not see a warning message; instead, you will see a syslog message.

**Options** For Gigabit interfaces:

***ge-fpc/pic/port***—Display standard information about the specified Gigabit Ethernet interface.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index *snmp-index***—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

For 10 Gigabit interfaces:

***xe-fpc/pic/port***—Display standard information about the specified 10-Gigabit Ethernet interface.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index *snmp-index***—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

For SRX interfaces:

- **interface-name**—(Optional) Display standard information about the specified interface. Following is a list of typical interface names. Replace *pim* with the PIM slot and port with the port number.
  - **at-*pim*/0/*port***—ATM-over-ADSL or ATM-over-SHDSL interface.
  - **ce1-*pim*/0/ *port***—Channelized E1 interface.
  - **cl-0/0/8**—3G wireless modem interface for SRX320 devices.
  - **ct1-*pim*/0/*port***—Channelized T1 interface.
  - **dl0**—Dialer Interface for initiating ISDN and USB modem connections.
  - **e1-*pim*/0/*port***—E1 interface.
  - **e3-*pim*/0/*port***—E3 interface.
  - **fe-*pim*/0/*port***—Fast Ethernet interface.
  - **ge-*pim*/0/*port***—Gigabit Ethernet interface.
  - **se-*pim*/0/*port***—Serial interface.
  - **t1-*pim*/0/*port***—T1 (also called DS1) interface.
  - **t3-*pim*/0/*port***—T3 (also called DS3) interface.
  - **wx-slot/0/0**—WAN acceleration interface, for the WXC Integrated Services Module (ISM 200).
- **interface-name**—(Optional) Display standard information about the specified interface. Following is a list of typical interface names. Replace *pim* with the PIM slot and port with the port number.
  - **at-*pim*/0/*port***—ATM-over-ADSL or ATM-over-SHDSL interface.
  - **ce1-*pim*/0/ *port***—Channelized E1 interface.
  - **cl-0/0/8**—3G wireless modem interface for SRX320 devices.
  - **ct1-*pim*/0/*port***—Channelized T1 interface.
  - **dl0**—Dialer Interface for initiating ISDN and USB modem connections.
  - **e1-*pim*/0/*port***—E1 interface.
  - **e3-*pim*/0/*port***—E3 interface.
  - **fe-*pim*/0/*port***—Fast Ethernet interface.
  - **ge-*pim*/0/*port***—Gigabit Ethernet interface.
  - **se-*pim*/0/*port***—Serial interface.
  - **t1-*pim*/0/*port***—T1 (also called DS1) interface.

- **t3-pim/0/port**—T3 (also called DS3) interface.
- **wx-slot/0/0**—WAN acceleration interface, for the WXC Integrated Services Module (ISM 200).

**Additional Information** In a logical system, this command displays information only about the logical interfaces and not about the physical interfaces.

**Required Privilege Level** view

**Related Documentation**

- *Understanding Layer 2 Interfaces on Security Devices*
- *Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration*
- *Verifying and Managing Configurations for Dynamic VLANs Based on Access-Line Identifiers*

**List of Sample Output**

- [show interfaces \(Gigabit Ethernet\) on page 1164](#)
- [show interfaces \(Gigabit Ethernet on MX Series Routers\) on page 1164](#)
- [show interfaces \(link degrade status\) on page 1165](#)
- [show interfaces extensive \(Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration\) on page 1165](#)
- [show interfaces brief \(Gigabit Ethernet\) on page 1166](#)
- [show interfaces detail \(Gigabit Ethernet\) on page 1166](#)
- [show interfaces extensive \(Gigabit Ethernet IQ2\) on page 1168](#)
- [show interfaces \(Gigabit Ethernet Unnumbered Interface\) on page 1171](#)
- [show interfaces \(ACI Interface Set Configured\) on page 1171](#)
- [show interfaces \(ALI Interface Set\) on page 1171](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, IQ2\) on page 1172](#)
- [show interfaces extensive \(10-Gigabit Ethernet, WAN PHY Mode\) on page 1174](#)
- [show interfaces extensive \(10-Gigabit Ethernet, DWDM OTN PIC\) on page 1176](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode\) on page 1178](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only\) on page 1179](#)
- [show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only\) on page 1180](#)
- [Sample Output SRX Gigabit Ethernet on page 1181](#)
- [Sample Output SRX Gigabit Ethernet on page 1181](#)
- [show interfaces detail \(Gigabit Ethernet\) on page 1182](#)
- [show interfaces statistics st0.0 detail on page 1184](#)
- [show interfaces extensive \(Gigabit Ethernet\) on page 1185](#)
- [show interfaces terse on page 1187](#)
- [show interfaces controller \(Channelized E1 IQ with Logical E1\) on page 1188](#)
- [show interfaces controller \(Channelized E1 IQ with Logical DSO\) on page 1188](#)
- [show interfaces descriptions on page 1188](#)
- [show interfaces destination-class all on page 1188](#)

[show interfaces diagnostics optics on page 1189](#)  
[show interfaces far-end-interval coc12-5/2/0 on page 1189](#)  
[show interfaces far-end-interval coc1-5/2/1:1 on page 1190](#)  
[show interfaces filters on page 1190](#)  
[show interfaces flow-statistics \(Gigabit Ethernet\) on page 1190](#)  
[show interfaces interval \(Channelized OC12\) on page 1191](#)  
[show interfaces interval \(E3\) on page 1192](#)  
[show interfaces interval \(SONET/SDH\) \(SRX devices\) on page 1192](#)  
[show interfaces load-balancing \(SRX devices\) on page 1192](#)  
[show interfaces load-balancing detail \(SRX devices\) on page 1193](#)  
[show interfaces mac-database \(All MAC Addresses on a Port SRX devices\) on page 1193](#)  
[show interfaces mac-database \(All MAC Addresses on a Service SRX devices\) on page 1193](#)  
[show interfaces mac-database mac-address on page 1194](#)  
[show interfaces mc-ae \(SRX devices\) on page 1194](#)  
[show interfaces media \(SONET/SDH\) on page 1194](#)  
[show interfaces policers \(SRX devices\) on page 1195](#)  
[show interfaces policers interface-name \(SRX devices\) on page 1195](#)  
[show interfaces queue \(SRX devices\) on page 1195](#)  
[show interfaces redundancy \(SRX devices\) on page 1196](#)  
[show interfaces redundancy \(Aggregated Ethernet SRX devices\) on page 1197](#)  
[show interfaces redundancy detail \(SRX devices\) on page 1197](#)  
[show interfaces routing brief \(SRX devices\) on page 1197](#)  
[show interfaces routing detail \(SRX devices\) on page 1197](#)  
[show interfaces routing-instance all \(SRX devices\) on page 1198](#)  
[show interfaces snmp-index \(SRX devices\) on page 1198](#)  
[show interfaces source-class all \(SRX devices\) on page 1198](#)  
[show interfaces statistics \(Fast Ethernet SRX devices\) on page 1199](#)  
[show interfaces switch-port \(SRX devices\) on page 1199](#)  
[show interfaces transport pm \(SRX devices\) on page 1200](#)  
[show security zones \(SRX devices\) on page 1201](#)

**Output Fields** [Table 56 on page 1127](#) describes the output fields for the **show interfaces** (Gigabit Ethernet) command. Output fields are listed in the approximate order in which they appear. For Gigabit Ethernet IQ and IQE PICs, the traffic and MAC statistics vary by interface type. For more information, see [Table 57 on page 1156](#).

**Table 56: show interfaces (Gigabit Ethernet) Output Fields**

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>LAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
<b>WAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
<b>Unidirectional</b>	Unidirectional link mode status for 10-Gigabit Ethernet interface: <b>Enabled</b> or <b>Disabled</b> for parent interface; <b>Rx-only</b> or <b>Tx-only</b> for child interfaces.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the "Links Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Wavelength</b>	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
<b>Frequency</b>	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>

Table 56: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Schedulers</b>	(Gigabit Ethernet intelligent queuing 2 [IQ2] interfaces only) Number of CoS schedulers configured.	<b>extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds (ms).	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive none</b>
<b>Hardware address</b>	Hardware MAC address.	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
<b>Output Rate</b>	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Egress account overhead</b>	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	<b>detail extensive</b>
<b>Ingress account overhead</b>	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the <a href="#">show interfaces</a> command.</p>	<b>detail extensive</b>

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number must always be 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field must never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	<p>Total number of egress queues supported on the specified interface.</p> <p><b>NOTE:</b> In DPCs that are not of the enhanced type, such as DPC 40x 1GER, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the <b>show interfaces</b> command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	<b>detail extensive</b>

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	extensive
Queue counters (Ingress)	<p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	extensive
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	detail extensive none
Interface transmit statistics	<p>(On MX Series devices) Status of the <b>interface-transmit-statistics</b> configuration: Enabled or Disabled.</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—When the <b>interface-transmit-statistics</b> statement is included in the configuration. If this is configured, the interface statistics show the actual transmitted load on the interface.</li> <li>• <b>Disabled</b>—When the <b>interface-transmit-statistics</b> statement is not included in the configuration. If this is not configured, the interface statistics show the offered load on the interface.</li> </ul>	detail extensive
OTN FEC statistics	<p>The forward error correction (FEC) counters provide the following statistics:</p> <ul style="list-style-type: none"> <li>• <b>Corrected Errors</b>—Count of corrected errors in the last second.</li> <li>• <b>Corrected Error Ratio</b>—Corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits.</li> </ul>	detail extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>PCS statistics</b>	<p>(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device.</p> <ul style="list-style-type: none"> <li>• <b>Bit errors</b>—Number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode.</li> <li>• <b>Errored blocks</b>—Number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode.</li> </ul>	<b>detail extensive</b>
<b>Link Degrad</b>	<p>Shows the link degrade status of the physical link and the estimated bit error rates (BERs). This field is available only for the PICs supporting the physical link monitoring feature.</p> <ul style="list-style-type: none"> <li>• <b>Link Monitoring</b>—Indicates if physical link degrade monitoring is enabled on the interface. <ul style="list-style-type: none"> <li>• <b>Enable</b>—Indicates that link degrade monitoring has been enabled (using the <code>link-degrade-monitor</code> statement) on the interface.</li> <li>• <b>Disable</b>—Indicates that link degrade monitoring has not been enabled on the interface. If link degrade monitoring has not been enabled, the output does not show any related information, such as BER values and thresholds.</li> </ul> </li> <li>• <b>Link Degrad Set Threshold</b>—The BER threshold value at which the link is considered degraded and a corrective action is triggered.</li> <li>• <b>Link Degrad Clear Threshold</b>—The BER threshold value at which the degraded link is considered recovered and the corrective action applied to the interface is reverted.</li> <li>• <b>Estimated BER</b>—The estimated bit error rate.</li> <li>• <b>Link-degrade event</b>—Shows link degrade event information. <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Time (in seconds) elapsed after a link degrade event occurred.</li> <li>• <b>Count</b>—The number of link degrade events recorded.</li> <li>• <b>State</b>—Shows the link degrade status (example: <b>Defect Active</b>).</li> </ul> </li> </ul>	<b>detail extensive</b>

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the <code>show interfaces</code> command.</li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> <li>• Packet length exceeds 1518 octets, or</li> <li>• Packet length exceeds MRU</li> </ul> </li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. <p><b>NOTE:</b> The 20-port Gigabit Ethernet MIC (MIC-3D-20GE-SFP) does not have hardware counters for VLAN frames. Therefore, the <b>VLAN tagged frames</b> field displays 0 when the <code>show interfaces</code> command is executed on a 20-port Gigabit Ethernet MIC. In other words, the number of VLAN tagged frames cannot be determined for the 20-port Gigabit Ethernet MIC.</p> </li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet may enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field must increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field must not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields must be 0.</li> </ul>	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PHY Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>WIS section</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>
<b>WIS line</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>WIS path</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner</b>—Information from the remote Ethernet device: <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the link partner, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the link partner. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), <b>Symmetric/Asymmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> on transmit), and <b>None</b> (link partner does not support flow control).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the local Ethernet device: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the local device. For Gigabit Ethernet interfaces, advertised capabilities are <b>Symmetric/Asymmetric</b> (local device supports <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> on receive) and <b>None</b> (local device does not support flow control). Depending on the result of the negotiation with the link partner, local resolution flow control type will display <b>Symmetric</b> (local device supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (local device supports <b>PAUSE</b> on receive), and <b>None</b> (local device does not support flow control).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul>	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CoS information</b>	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (<b>Out</b>) VLAN tag or for both the outer and inner (<b>In</b>) VLAN tags.</p> <ul style="list-style-type: none"> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li>• <b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user-specified VLAN tag information.</li> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li>• <b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li>• <b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user-specified VLAN tag value.</li> <li>• <b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li>• <b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul>	brief detail extensive none
Demux	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> <li>• Source Family Inet</li> <li>• Destination Family Inet</li> </ul>	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
ACI VLAN	<p>Information displayed for agent circuit identifier (ACI) interface set configured with the <b>agent-circuit-id</b> autoconfiguration stanza.</p> <p><b>Dynamic Profile</b>—Name of the dynamic profile that defines the ACI interface set.</p> <p>If configured, the ACI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ACI information.</p> <p><b>NOTE:</b> The ACI VLAN field is replaced with the Line Identity field when an ALI interface set is configured with the <b>line-identity</b> autoconfiguration stanza.</p>	brief detail extensive none
Line Identity	<p>Information displayed for access-line-identifier (ALI) interface sets configured with the <b>line-identity</b> autoconfiguration stanza.</p> <ul style="list-style-type: none"> <li>• <b>Dynamic Profile</b>—Name of the dynamic profile that defines the ALI interface set.</li> <li>• Trusted option used to create the ALI interface set: <b>Circuit-id</b>, <b>Remote-id</b>, or <b>Accept-no-ids</b>. More than one option can be configured.</li> </ul> <p>If configured, the ALI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ALI information.</p> <p><b>NOTE:</b> The Line Identity field is replaced with the ACI VLAN field when an ACI interface set is configured with the <b>agent-circuit-id</b> autoconfiguration stanza.</p>	detail

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Neighbor Discovery Protocol (NDP) Queue Statistics</b>	NDP statistics for protocol <b>inet6</b> under logical interface statistics. <ul style="list-style-type: none"> <li>• <b>Max nh cache</b>—Maximum interface neighbor discovery nexthop cache size.</li> <li>• <b>New hold nh limit</b>—Maximum number of new unresolved nexthops.</li> <li>• <b>Curr nh cnt</b>—Current number of resolved nexthops in the NDP queue.</li> <li>• <b>Curr new hold cnt</b>—Current number of unresolved nexthops in the NDP queue.</li> <li>• <b>NH drop cnt</b>—Number of NDP requests not serviced.</li> </ul>	All levels
<b>Dynamic Profile</b>	Name of the dynamic profile that was used to create this interface configured with a Point-to-Point Protocol over Ethernet (PPPoE) family.	<b>detail extensive none</b>
<b>Service Name Table</b>	Name of the service name table for the interface configured with a PPPoE family.	<b>detail extensive none</b>
<b>Max Sessions</b>	Maximum number of PPPoE logical interfaces that can be activated on the underlying interface.	<b>detail extensive none</b>
<b>Duplicate Protection</b>	State of PPPoE duplicate protection: <b>On</b> or <b>Off</b> . When duplicate protection is configured for the underlying interface, a dynamic PPPoE logical interface cannot be activated when an existing active logical interface is present for the same PPPoE client.	<b>detail extensive none</b>
<b>Direct Connect</b>	State of the configuration to ignore DSL Forum VSAs: <b>On</b> or <b>Off</b> . When configured, the router ignores any of these VSAs received from a directly connected CPE device on the interface.	<b>detail extensive none</b>
<b>AC Name</b>	Name of the access concentrator.	<b>detail extensive none</b>
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive none</b>
<b>Traffic statistics</b>	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	<b>extensive</b>
<b>Local statistics</b>	Number and rate of bytes and packets destined to the router.	<b>extensive</b>

Table 56: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.  <b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	<b>extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive none</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b>
<b>Donor interface</b>	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	<b>detail extensive none</b>
<b>Preferred source address</b>	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	<b>detail extensive none</b>
<b>Input Filters</b>	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	<b>detail extensive</b>
<b>Output Filters</b>	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	<b>detail extensive</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b><i>protocol-family</i></b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Flags</b>	Information about the address flag. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>

Table 56: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Broadcast</b>	Broadcast address of the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

The following table describes the output fields for the **show interfaces** (10-Gigabit Ethernet) command.

Field Name	Field Description	Level of Output
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1114.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>LAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
<b>WAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
<b>Unidirectional</b>	Unidirectional link mode status for 10-Gigabit Ethernet interface: <b>Enabled</b> or <b>Disabled</b> for parent interface; <b>Rx-only</b> or <b>Tx-only</b> for child interfaces.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels

<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"><li>• <b>Online</b>—Autonegotiation is manually configured as online.</li><li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li></ul>	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Links Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Wavelength</b>	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
<b>Frequency</b>	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive</b> none
<b>Schedulers</b>	(Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	<b>extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive</b> none
<b>Hardware address</b>	Hardware MAC address.	<b>detail extensive</b> none
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive</b> none
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified
<b>Output Rate</b>	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Egress account overhead</b>	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	<b>detail extensive</b>
<b>Ingress account overhead</b>	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	<b>detail extensive</b>

<b>Traffic statistics</b>	Number and rate of bytes and packets received and transmitted on the physical interface.	<b>detail extensive</b>
	<ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	
<b>Input errors</b>	Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:	<b>extensive</b>
	<ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <code>ignore-l3-incompletes</code> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	

<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	<p>Total number of egress queues supported on the specified interface.</p> <p><b>NOTE:</b> In DPCs that are not of the enhanced type, such as DPC 40x 1GE R, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the <b>show interfaces</b> command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	<b>detail extensive</b>
<b>Queue counters (Egress)</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Ingress queues</b>	<p>Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.</p>	<b>extensive</b>

<b>Queue counters (Ingress)</b>	CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>extensive</b>
<b>Active alarms and Active defects</b>	Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the routing device configuration, an alarm can ring the red or yellow alarm bell on the routing device, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b> . <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>
<b>OTN alarms</b>	Active OTN alarms identified on the interface.	<b>detail extensive</b>
<b>OTN defects</b>	OTN defects received on the interface.	<b>detail extensive</b>
<b>OTN FEC Mode</b>	The FECmode configured on the interface. <ul style="list-style-type: none"> <li>• <b>efec</b>—Enhanced forward error correction (EFEC) is configured to detect and correct bit errors.</li> <li>• <b>gfec</b>—G.709 Forward error correction (GFEC) mode is configured to detect and correct bit errors.</li> <li>• <b>none</b>—FEC mode is not configured.</li> </ul>	<b>detail extensive</b>
<b>OTN Rate</b>	OTN mode. <ul style="list-style-type: none"> <li>• <b>fixed-stuff-bytes</b>—Fixed stuff bytes 11.0957 Gbps.</li> <li>• <b>no-fixed-stuff-bytes</b>—No fixed stuff bytes 11.0491 Gbps.</li> <li>• <b>pass-through</b>—Enable OTN passthrough mode.</li> <li>• <b>no-pass-through</b>—Do not enable OTN passthrough mode.</li> </ul>	<b>detail extensive</b>
<b>OTN Line Loopback</b>	Status of the line loopback, if configured for the DWDM OTN PIC. Its value can be: <b>enabled</b> or <b>disabled</b> .	<b>detail extensive</b>
<b>OTN FEC statistics</b>	The forward error correction (FEC) counters for the DWDM OTN PIC. <ul style="list-style-type: none"> <li>• <b>Corrected Errors</b>—The count of corrected errors in the last second.</li> <li>• <b>Corrected Error Ratio</b>—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits.</li> </ul>	<b>detail extensive</b>
<b>OTN FEC alarms</b>	OTN FEC excessive or degraded error alarms triggered on the interface. <ul style="list-style-type: none"> <li>• <b>FEC Degrade</b>—OTU FEC Degrade defect.</li> <li>• <b>FEC Excessive</b>—OTU FEC Excessive Error defect.</li> </ul>	<b>detail extensive</b>

<b>OTN OC</b>	OTN OC defects triggered on the interface. <ul style="list-style-type: none"><li>• <b>LOS</b>—OC Loss of Signal defect.</li><li>• <b>LOF</b>—OC Loss of Frame defect.</li><li>• <b>LOM</b>—OC Loss of Multiframe defect.</li><li>• <b>Wavelength Lock</b>—OC Wavelength Lock defect.</li></ul>	<b>detail extensive</b>
<b>OTN OTU</b>	OTN OTU defects detected on the interface <ul style="list-style-type: none"><li>• <b>AIS</b>—OTN AIS alarm.</li><li>• <b>BDI</b>—OTN OTU BDI alarm.</li><li>• <b>IAE</b>—OTN OTU IAE alarm.</li><li>• <b>TTIM</b>—OTN OTU TTIM alarm.</li><li>• <b>SF</b>—OTN ODU bit error rate fault alarm.</li><li>• <b>SD</b>—OTN ODU bit error rate defect alarm.</li><li>• <b>TCA-ES</b>—OTN ODU ES threshold alarm.</li><li>• <b>TCA-SES</b>—OTN ODU SES threshold alarm.</li><li>• <b>TCA-UAS</b>—OTN ODU UAS threshold alarm.</li><li>• <b>TCA-BBE</b>—OTN ODU BBE threshold alarm.</li><li>• <b>BIP</b>—OTN ODU BIP threshold alarm.</li><li>• <b>BBE</b>—OTN OTU BBE threshold alarm.</li><li>• <b>ES</b>—OTN OTU ES threshold alarm.</li><li>• <b>SES</b>—OTN OTU SES threshold alarm.</li><li>• <b>UAS</b>—OTN OTU UAS threshold alarm.</li></ul>	<b>detail extensive</b>
<b>Received DAPI</b>	Destination Access Port Interface (DAPI) from which the packets were received.	<b>detail extensive</b>
<b>Received SAPI</b>	Source Access Port Interface (SAPI) from which the packets were received.	<b>detail extensive</b>
<b>Transmitted DAPI</b>	Destination Access Port Interface (DAPI) to which the packets were transmitted.	<b>detail extensive</b>
<b>Transmitted SAPI</b>	Source Access Port Interface (SAPI) to which the packets were transmitted.	<b>detail extensive</b>
<b>PCS statistics</b>	(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device. <ul style="list-style-type: none"><li>• <b>Bit errors</b>—The number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode.</li><li>• <b>Errored blocks</b>—The number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode.</li></ul>	<b>detail extensive</b>

<b>MAC statistics</b>	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets and total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type.</li> <li>• <b>Unicast packets, Broadcast packets, and Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of frames that exceed 1518 octets.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	<b>extensive</b>
<b>OTN Received Overhead Bytes</b>	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	<b>extensive</b>
<b>OTN Transmitted Overhead Bytes</b>	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	<b>extensive</b>

<b>Filter statistics</b>	<p><b>Receive and Transmit</b> statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the routing device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local routing device (which the routing device is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0.</li> </ul>	<b>extensive</b>
<b>PMA PHY</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul>	<b>extensive</b>

<b>WIS section</b>	(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information: <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> Subfields are: <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>
<b>WIS line</b>	(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information. <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> Subfields are: <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>

<b>WIS path</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>
<b>Autonegotiation information</b>	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—<b>OK</b> when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner:</b> <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the attached Ethernet device, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is <b>None</b>. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the link partner: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul>	<b>extensive</b>

<b>Received path trace, Transmitted path trace</b>	(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the routing device at the other end of the fiber. The transmitted path trace value is the message that this routing device transmits.	<b>extensive</b>
<b>Packet Forwarding Engine configuration</b>	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	<b>extensive</b>
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive</b> <b>none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive</b> <b>none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels

<b>VLAN-Tag</b>	<p>Rewrite profile applied to incoming or outgoing frames on the outer (<b>Out</b>) VLAN tag or for both the outer and inner (<b>In</b>) VLAN tags.</p> <ul style="list-style-type: none"> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li>• <b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information.</li> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li>• <b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li>• <b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value.</li> <li>• <b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li>• <b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul>	<b>brief detail</b> <b>extensive</b> none
<b>Demux:</b>	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> <li>• Source Family Inet</li> <li>• Destination Family Inet</li> </ul>	<b>detail</b> <b>extensive</b> none
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail</b> <b>extensive</b> none
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail</b> <b>extensive</b> none
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail</b> <b>extensive</b> none
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail</b> <b>extensive</b>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	<b>extensive</b>
<b>Local statistics</b>	Number and rate of bytes and packets destined to the routing device.	<b>extensive</b>

<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.  <b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	<b>extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, <b>0</b> refers to the routing table inet.0.	<b>detail extensive</b> <b>none</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b>
<b>Donor interface</b>	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	<b>detail extensive</b> <b>none</b>
<b>Preferred source address</b>	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	<b>detail extensive</b> <b>none</b>
<b>Input Filters</b>	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Output Filters</b>	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive</b> <b>none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b> <b>none</b>
<b><i>protocol-family</i></b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Flags</b>	Information about address flag (possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b> <b>none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive</b> <b>none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive</b> <b>none</b>
<b>Broadcast</b>	Broadcast address of the logical interlace.	<b>detail extensive</b> <b>none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

For Gigabit Ethernet IQ PICs, traffic and MAC statistics output varies. The following table describes the traffic and MAC statistics for two sample interfaces, each of which is sending traffic in packets of 500 bytes (including 478 bytes for the Layer 3 packet, 18 bytes for the Layer 2 VLAN traffic header, and 4 bytes for cyclic redundancy check [CRC] information). The **ge-0/3/0** interface is the inbound physical interface, and the **ge-0/0/0** interface is the outbound physical interface. On both interfaces, traffic is carried on logical unit **.50** (VLAN 50).

**Table 57: Gigabit and 10 Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type**

Interface Type	Sample Command	Byte and Octet Counts Include	Comments
Inbound physical interface	<b>show interfaces ge-0/3/0 extensive</b>	Traffic statistics:  Input bytes: 496 bytes per packet, representing the Layer 2 packet  MAC statistics:  Received octets: 500 bytes per packet, representing the Layer 2 packet + 4 bytes	The additional 4 bytes are for the CRC.
Inbound logical interface	<b>show interfaces ge-0/3/0.50 extensive</b>	Traffic statistics:  Input bytes: 478 bytes per packet, representing the Layer 3 packet	
Outbound physical interface	<b>show interfaces ge-0/0/0 extensive</b>	Traffic statistics:  Input bytes: 490 bytes per packet, representing the Layer 3 packet + 12 bytes  MAC statistics:  Received octets: 478 bytes per packet, representing the Layer 3 packet	For input bytes, the additional 12 bytes include 6 bytes for the destination MAC address plus 4 bytes for VLAN plus 2 bytes for the Ethernet type.
Outbound logical interface	<b>show interfaces ge-0/0/0.50 extensive</b>	Traffic statistics:  Input bytes: 478 bytes per packet, representing the Layer 3 packet	

[Table 58 on page 1157](#) lists the output fields for the **show interfaces** command. Output fields are listed in the approximate order in which they appear.

Table 58: show interfaces Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Link mode</b>	Link mode: Full-duplex or Half-duplex.	
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>BPDU error</b>	Bridge protocol data unit (BPDU) error: Detected or None	
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>	All levels
<b>Device flags</b>	Information about the physical device.	All levels
<b>Interface flags</b>	Information about the interface.	All levels
<b>Link flags</b>	Information about the physical link.	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive none</b>

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None
<b>Output Rate</b>	Output rate in bps and pps.	None
<b>Active alarms and Active defects</b>	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface.</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <code>ignore-l3-incompletes</code>.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Output errors</b>	<p>Output errors on the interface.</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation; therefore, for Gigabit Ethernet PICs, this number must always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field must never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Ingress queues</b>	Total number of ingress queues supported on the specified interface.	<b>extensive</b>
<b>Queue counters and queue number</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>MAC statistics</b>	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets and total packets</b>—Total number of octets and packets.</li> <li>• <b>Unicast packets, Broadcast packets, and Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> <li>• Packet length exceeds 1518 octets, or</li> <li>• Packet length exceeds MRU</li> </ul> </li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	<b>extensive</b>

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local device (which the router is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields must be 0.</li> </ul>	extensive
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> </ul>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Interface transmit statistics</b>	Status of the <b>interface-transmit-statistics</b> configuration: Enabled or Disabled.	<b>detail extensive</b>
<b>Queue counters (Egress)</b>	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface.	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Traffic statistics</b>	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail extensive</b>

Table 58: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Local statistics</b>	Number and rate of bytes and packets destined to the device.	<b>extensive</b>
<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.  <b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	<b>extensive</b>
<b>Security</b>	Security zones that interface belongs to.	<b>extensive</b>
<b>Flow Input statistics</b>	Statistics on packets received by flow module.	<b>extensive</b>
<b>Flow Output statistics</b>	Statistics on packets sent by flow module.	<b>extensive</b>
<b>Flow error statistics (Packets dropped due to)</b>	Statistics on errors in the flow module.	<b>extensive</b>
<b>Protocol</b>	Protocol family.	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive none</b>
<b>Flags</b>	Information about protocol family flags. .	<b>detail extensive</b>
<b>Addresses, Flags</b>	Information about the address flags..	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address of the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

## Sample Output Gigabit Ethernet

### show interfaces (Gigabit Ethernet)

```
user@host> show interfaces ge-3/0/2
Physical interface: ge-3/0/2, Enabled, Physical link is Up
  Interface index: 167, SNMP ifIndex: 35
  Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues    : 4 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:7c, Hardware address: 00:00:5e:00:53:7c
  Last flapped  : 2006-08-10 17:25:10 PDT (00:01:08 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Ingress rate at Packet Forwarding Engine : 0 bps (0 pps)
  Ingress drop rate at Packet Forwarding Engine : 0 bps (0 pps)
  Active alarms : None
  Active defects: None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69)
  Flags: SNMP-Traps 0x4000
  VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
0x8100.512 0x8100.513)
  Encapsulation: VLAN-CCC
  Egress account overhead: 100
  Ingress account overhead: 90
  Input packets : 0
  Output packets: 0
  Protocol ccc, MTU: 1522
  Flags: Is-Primary
```

### show interfaces (Gigabit Ethernet on MX Series Routers)

```
user@host> show interfaces ge-2/2/2
Physical interface: ge-2/2/2, Enabled, Physical link is Up
  Interface index: 156, SNMP ifIndex: 188
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, MAC-REWRITE Error: None,
  Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 4 maximum usable queues
  Schedulers    : 0
  Current address: 00:00:5e:00:53:c0, Hardware address: 00:00:5e:00:53:76
  Last flapped  : 2008-09-05 16:44:30 PDT (3d 01:04 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Active alarms : None
  Active defects: None

Logical interface ge-2/2/2.0 (Index 82) (SNMP ifIndex 219)
  Flags: Up SNMP-Traps 0x4004000 Encapsulation: ENET2
  Input packets : 10232
  Output packets: 10294
  Protocol inet, MTU: 1500
  Flags: Sendbcst-pkt-to-re
```

```

Addresses, Flags: Is-Preferred Is-Primary
Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255
Protocol inet6, MTU: 1500
Max nh cache: 4, New hold nh limit: 100000, Curr nh cnt: 4, Curr new hold
cnt: 4, NH drop cnt: 0
Flags: Is-Primary
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: 2001:db8:/32, Local: 2001:db8::5
Addresses, Flags: Is-Preferred
Destination: 2001:db8:1::/32, Local: 2001:db8:223:9cff:fe9f:3e78
Protocol multiservice, MTU: Unlimited
Flags: Is-Primary

```

### show interfaces (link degrade status)

```

user@host> show interfaces et-3/0/0
Physical interface: et-3/0/0, Enabled, Physical link is Down
Interface index: 157, SNMP ifIndex: 537
Link-level type: Ethernet, MTU: 1514, MRU: 0, Speed: 100Gbps, BPDU Error: None,
Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Current address: 54:e0:32:23:9d:38, Hardware address: 54:e0:32:23:9d:38
Last flapped : 2014-06-18 02:36:38 PDT (02:50:50 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
Active alarms : LINK
Active defects : LINK
PCS statistics
  Bit errors : 0
  Errored blocks : 0
Link Degrade* :
Link Monitoring : Enable
Link Degrade Set Threshold: : 1E-7
Link Degrade Clear Threshold: : 1E-12
Estimated BER : 1E-7
Link-degrade event : Seconds Count State
                    782 1 Defect Active

```

### show interfaces extensive (Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration)

```

user@host> show interfaces ge-2/1/2 extensive | match "output|interface"
Physical interface: ge-2/1/2, Enabled, Physical link is Up
Interface index: 151, SNMP ifIndex: 530, Generation: 154
Interface flags: SNMP-Traps Internal: 0x4000
Output bytes : 240614363944 772721536 bps
Output packets: 3538446506 1420444 pps
Direction : Output
Interface transmit statistics: Enabled

Logical interface ge-2/1/2.0 (Index 331) (SNMP ifIndex 955) (Generation 146)
Output bytes : 195560312716 522726272 bps
Output packets: 4251311146 1420451 pps

user@host> show interfaces ge-5/2/0.0 statistics detail
Logical interface ge-5/2/0.0 (Index 71) (SNMP ifIndex 573) (Generation 135)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2

```

```

Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :          271524
  Output bytes :        37769598
  Input packets:         3664
  Output packets:       885790
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :       16681118
  Input packets:         0
  Output packets:      362633
Local statistics:
  Input bytes :          271524
  Output bytes :       308560
  Input packets:         3664
  Output packets:       3659
Transit statistics:
  Input bytes :          0
  Output bytes :       37461038
  Input packets:         0
  Output packets:      882131
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :       16681118
  Input packets:         0
  Output packets:      362633

```

### show interfaces brief (Gigabit Ethernet)

```

user@host> show interfaces ge-3/0/2 brief
Physical interface: ge-3/0/2, Enabled, Physical link is Up
Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None

Logical interface ge-3/0/2.0
Flags: SNMP-Traps 0x4000
VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
0x8100.512 0x8100.513)
Encapsulation: VLAN-CCC
ccc

Logical interface ge-3/0/2.32767
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2

```

### show interfaces detail (Gigabit Ethernet)

```

user@host> show interfaces ge-3/0/2 detail
Physical interface: ge-3/0/2, Enabled, Physical link is Up
Interface index: 167, SNMP ifIndex: 35, Generation: 177
Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None

```

```

CoS queues      : 4 supported, 4 maximum usable queues
Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:7c, Hardware address: 00:00:5e:00:53:7c
Last flapped    : 2006-08-09 17:17:00 PDT (01:31:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes : 0 0 bps
  Input packets: 0 0 pps
  Drop bytes : 0 0 bps
  Drop packets: 0 0 pps
Ingress queues: 4 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 best-effort 0 0 0
  1 expedited-fo 0 0 0
  2 assured-forw 0 0 0
  3 network-cont 0 0 0

Egress queues: 4 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 best-effort 0 0 0
  1 expedited-fo 0 0 0
  2 assured-forw 0 0 0
  3 network-cont 0 0 0

Active alarms : None
Active defects : None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69) (Generation 140)
Flags: SNMP-Traps 0x4000
VLAN-Tag [0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530)
Out(swap-push 0x8100.512 0x8100.513)
Encapsulation: VLAN-CCC
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps

```

```

Output packets:                0                0 pps
Protocol ccc, MTU: 1522, Generation: 149, Route table: 0
Flags: Is-Primary

```

Logical interface ge-3/0/2.32767 (Index 71) (SNMP ifIndex 70)  
(Generation 139)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2

Traffic statistics:

```

Input bytes :                0
Output bytes :                0
Input packets:               0
Output packets:              0

```

Local statistics:

```

Input bytes :                0
Output bytes :                0
Input packets:               0
Output packets:              0

```

Transit statistics:

```

Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:               0                0 pps
Output packets:              0                0 pps

```

### show interfaces extensive (Gigabit Ethernet IQ2)

user@host> show interfaces ge-7/1/3 extensive

Physical interface: ge-7/1/3, Enabled, Physical link is Up

Interface index: 170, SNMP ifIndex: 70, Generation: 171

Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,

Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,

Remote fault: Online

Device flags : Present Running

Interface flags: SNMP-Traps Internal: 0x4004000

Link flags : None

CoS queues : 8 supported, 4 maximum usable queues

Schedulers : 256

Hold-times : Up 0 ms, Down 0 ms

Current address: 00:00:5e:00:53:74, Hardware address: 00:00:5e:00:53:74

Last flapped : 2007-11-07 21:31:41 PST (02:03:33 ago)

Statistics last cleared: Never

Traffic statistics:

```

Input bytes :          38910844056          7952 bps
Output bytes :          7174605          8464 bps
Input packets:         418398473          11 pps
Output packets:         78903          12 pps

```

IPv6 transit statistics:

```

Input bytes :                0
Output bytes :                0
Input packets:               0
Output packets:              0

```

Ingress traffic statistics at Packet Forwarding Engine:

```

Input bytes :          38910799145          7952 bps
Input packets:         418397956          11 pps
Drop bytes :                0                0 bps
Drop packets:           0                0 pps

```

Input errors:

```

Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0

```

Output errors:

```

Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

```

```

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      418390823      418390823      0
  1 expedited-fo          0          0      0
  2 assured-forw          0          0      0
  3 network-cont      7133      7133      0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      1031      1031      0
  1 expedited-fo          0          0      0
  2 assured-forw          0          0      0
  3 network-cont      77872      77872      0

Active alarms : None
Active defects : None
MAC statistics:
      Receive      Transmit
Total octets      38910844056      7174605
Total packets      418398473      78903
Unicast packets      408021893366      1026
Broadcast packets          10      12
Multicast packets      418398217      77865
CRC/Align errors          0          0
FIFO errors          0          0
MAC control frames          0          0
MAC pause frames          0          0
Oversized frames          0
Jabber frames          0
Fragment frames          0
VLAN tagged frames          0
Code violations          0 OTN Received Overhead Bytes:
APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58
Payload Type: 0x08
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x08
Filter statistics:
Input packet count      418398473
Input packet rejects          479
Input DA rejects          479
Input SA rejects          0
Output packet count          78903
Output packet pad count          0
Output packet error count          0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: Symmetric/Asymmetric,
Remote fault: OK
Local resolution:

```

```

Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
  Destination slot: 7
CoS information:
  Direction : Output
  CoS transmit queue
    Bandwidth      Buffer      Priority  Limit
    %             bps      %      usec
  0 best-effort   95      950000000  95      0
low  none
  3 network-control 5      500000000  5      0
low  none
  Direction : Input
  CoS transmit queue
    Bandwidth      Buffer      Priority  Limit
    %             bps      %      usec
  0 best-effort   95      950000000  95      0
low  none
  3 network-control 5      500000000  5      0
low  none

Logical interface ge-7/1/3.0 (Index 70) (SNMP ifIndex 85) (Generation 150)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :      812400
  Output bytes :    1349206
  Input packets:      9429
  Output packets:    9449
IPv6 transit statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:      0
  Output packets:     0
Local statistics:
  Input bytes :      812400
  Output bytes :    1349206
  Input packets:      9429
  Output packets:    9449
Transit statistics:
  Input bytes :      0          7440 bps
  Output bytes :      0          7888 bps
  Input packets:      0          10 pps
  Output packets:     0          11 pps
IPv6 transit statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:      0
  Output packets:     0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
Flags: Is-Primary, Mac-Validate-Strict
Mac-Validate Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary
Input Filters: F1-ge-3/0/1.0-in, F3-ge-3/0/1.0-in
Output Filters: F2-ge-3/0/1.0-out (53)
Destination: 203.0.113/24, Local: 203.0.113.2, Broadcast: 203.0.113.255,
Generation: 196
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

**NOTE:** For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics displayed in the **show interfaces** command output might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output

shaping might drop packets after they are tallied by the interface counters. For detailed information, see the description of the logical interface **Transit statistics** fields in [Table 56 on page 1127](#).

#### show interfaces (Gigabit Ethernet Unnumbered Interface)

```
user@host> show interfaces ge-3/2/0
Physical interface: ge-3/2/0, Enabled, Physical link is Up
  Interface index: 148, SNMP ifIndex: 50
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:f8, Hardware address: 00:00:5e:00:53:f8
  Last flapped  : 2006-10-27 04:42:23 PDT (08:01:52 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 624 bps (1 pps)
  Active alarms : None
  Active defects: None

Logical interface ge-3/2/0.0 (Index 67) (SNMP ifIndex 85)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 0
  Output packets: 6
  Protocol inet, MTU: 1500
  Flags: Unnumbered
  Donor interface: lo0.0 (Index 64)
  Preferred source address: 203.0.113.22
```

#### show interfaces (ACI Interface Set Configured)

```
user@host> show interfaces ge-1/0/0.4001
Logical interface ge-1/0/0.4001 (Index 340) (SNMP ifIndex 548)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.4001 ] Encapsulation: PPP-over-

Ethernet
ACI VLAN:
  Dynamic Profile: aci-vlan-set-profile
  PPPoE:
    Dynamic Profile: aci-vlan-pppoe-profile,
    Service Name Table: None,
    Max Sessions: 32000, Max Sessions VSA Ignore: Off,
    Duplicate Protection: On, Short Cycle Protection: Off,
    Direct Connect: Off,
    AC Name: nbc
  Input packets : 9
  Output packets: 8
  Protocol multiservice, MTU: Unlimited
```

#### show interfaces (ALI Interface Set)

```
user@host> show interfaces ge-1/0/0.10
Logical interface ge-1/0/0.10 (Index 346) (SNMP ifIndex 554) (Generation 155)
  Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.10 ] Encapsulation: ENET2
  Line Identity:
```

```

Dynamic Profile: ali-set-profile
Circuit-id Remote-id Accept-no-ids
PPPoE:
  Dynamic Profile: ali-vlan-pppoe-profile,
  Service Name Table: None,
  Max Sessions: 32000, Max Sessions VSA Ignore: Off,
  Duplicate Protection: On, Short Cycle Protection: Off,
  Direct Connect: Off,
  AC Name: nbc
Input packets : 9
Output packets: 8
Protocol multiservice, MTU: Unlimited

```

## Sample Output Gigabit Ethernet

### show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, IQ2)

```

user@host> show interfaces xe-5/0/0 extensive
Physical interface: xe-5/0/0, Enabled, Physical link is Up
  Interface index: 177, SNMP ifIndex: 99, Generation: 178
  Link-level type: Ethernet, MTU: 1518, LAN-PHY mode, Speed: 10Gbps, Loopback:
  None, Source filtering: Enabled,
  Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 4 maximum usable queues
  Schedulers     : 1024
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:f6, Hardware address: 00:00:5e:00:53:f6
  Last flapped   : Never
  Statistics last cleared: Never
Traffic statistics:
  Input bytes :          6970332384          0 bps
  Output bytes :              0          0 bps
  Input packets:          81050506          0 pps
  Output packets:              0          0 pps
IPv6 transit statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes :          6970299398          0 bps
  Input packets:          81049992          0 pps
  Drop bytes :              0          0 bps
  Drop packets:              0          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
  MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          81049992          81049992          0

  1 expedited-fo              0              0          0

```

```

2 assured-forw          0          0          0
3 network-cont          0          0          0

Egress queues: 4 supported, 4 in use
Queue counters:         Queued packets  Transmitted packets  Dropped packets

0 best-effort           0          0          0
1 expedited-fo          0          0          0
2 assured-forw          0          0          0
3 network-cont          0          0          0

Active alarms : None
Active defects : None
PCS statistics
  Bit errors           0
  Errored blocks       0
MAC statistics:
  Receive              Transmit
Total octets          6970332384      0
Total packets         81050506       0
Unicast packets       81050000       0
Broadcast packets     506           0
Multicast packets     0             0
CRC/Align errors      0             0
FIFO errors           0             0
MAC control frames    0             0
MAC pause frames      0             0
Oversized frames      0
Jabber frames         0
Fragment frames       0
VLAN tagged frames    0
Code violations        0
Filter statistics:
Input packet count     81050506
Input packet rejects   506
Input DA rejects       0
Input SA rejects       0
Output packet count    0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 5
CoS information:
Direction : Output
CoS transmit queue    Bandwidth      Buffer Priority  Limit
                        %      bps      %      usec
0 best-effort         95    950000000    95      0      low    none
3 network-control     5     50000000     5      0      low    none

Direction : Input
CoS transmit queue    Bandwidth      Buffer Priority  Limit
                        %      bps      %      usec
0 best-effort         95    950000000    95      0      low    none
3 network-control     5     50000000     5      0      low    none

Logical interface xe-5/0/0.0 (Index 71) (SNMP ifIndex 95) (Generation 195)

```

```

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ] Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes : 0
  Output bytes : 46
  Input packets: 0
  Output packets: 1
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 46
  Input packets: 0
  Output packets: 1
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Protocol inet, MTU: 1500, Generation: 253, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.0.2/24, Local: 192.0.2.1, Broadcast: 192.0.2.255,
Generation: 265
  Protocol multiservice, MTU: Unlimited, Generation: 254, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

### show interfaces extensive (10-Gigabit Ethernet, WAN PHY Mode)

```

user@host> show interfaces xe-1/0/0 extensive
Physical interface: xe-1/0/0, Enabled, Physical link is Up
Interface index: 141, SNMP ifIndex: 34, Generation: 47
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled
WAN-PHY mode
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps 16384
Link flags : None
CoS queues : 4 supported
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:9d, Hardware address: 00:00:5e:00:53:9d
Last flapped : 2005-07-07 11:22:34 PDT (3d 12:28 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS Link CRC errors: 0, HS Link FIFO overflows: 0,

```

```

Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0,
  Aged packets: 0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
  Resource errors: 0
Queue counters:
  Queued packets    Transmitted packets    Dropped packets
0 best-effort      0                      0                      0
1 expedited-fo     0                      0                      0
2 assured-forw     0                      0                      0
3 network-cont     0                      0                      0
Active alarms : LOL, LOS, LBL
Active defects: LOL, LOS, LBL, SEF, AIS-L, AIS-P
PCS statistics
  Seconds          Count
  Bit errors       0          0
  Errored blocks   0          0
MAC statistics:
  Receive          Transmit
Total octets       0          0
Total packets     0          0
Unicast packets   0          0
Broadcast packets 0          0
Multicast packets 0          0
CRC/Align errors  0          0
FIFO errors       0          0
MAC control frames 0          0
MAC pause frames  0          0
Oversized frames  0
Jabber frames     0
Fragment frames   0
VLAN tagged frames 0
Code violations    0
Filter statistics:
  Input packet count      0
  Input packet rejects    0
  Input DA rejects        0
  Input SA rejects        0
  Output packet count      0
  Output packet pad count  0
  Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
PMA PHY:
  Seconds          Count  State
  PLL lock         0        0  OK
  PHY light        63159    1  Light Missing
WIS section:
  BIP-B1           0          0
  SEF              434430    434438  Defect Active
  LOS              434430    1  Defect Active
  LOF              434430    1  Defect Active
  ES-S             434430
  SES-S            434430
  SEFS-S           434430
WIS line:
  BIP-B2           0          0
  REI-L            0          0
  RDI-L            0          0  OK
  AIS-L            434430    1  Defect Active
  BERR-SF          0          0  OK
  BERR-SD          0          0  OK
  ES-L             434430
  SES-L            434430
  UAS-L            434420
  ES-LFE           0

```

```

SES-LFE                0
UAS-LFE                0
WIS path:
BIP-B3                 0          0
REI-P                  0          0
LOP-P                  0          0 OK
AIS-P                  434430      1 Defect Active
RDI-P                  0          0 OK
UNEQ-P                 0          0 OK
PLM-P                  0          0 OK
ES-P                   434430
SES-P                   434430
UAS-P                   434420
ES-PFE                 0
SES-PFE                 0
UAS-PFE                 0
Received path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: orissa so-1/0/0
6f 72 69 73 73 61 20 73 6f 2d 31 2f 30 2f 30 00 orissa so-1/0/0.
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                           %             bps        %         bytes
0 best-effort             95      950000000    95         0        low    none
3 network-control         5       500000000     5         0        low    none

```

#### show interfaces extensive (10-Gigabit Ethernet, DWDM OTN PIC)

```

user@host> show interfaces ge-7/0/0 extensive
Physical interface: ge-7/0/0, Enabled, Physical link is Down
Interface index: 143, SNMP ifIndex: 508, Generation: 208
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags : None
Wavelength : 1550.12 nm, Frequency: 193.40 THz
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:72, Hardware address: 00:00:5e:00:53:72
Last flapped : 2011-04-20 15:48:54 PDT (18:39:49 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 2, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

```

```

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort              0              0              0

  1 expedited-fo            0              0              0

  2 assured-forw            0              0              0

  3 network-cont
Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms : LINK
Active defects : LINK
MAC statistics:
Receive          Transmit
Total octets      0              0
Total packets     0              0
Unicast packets   0              0
Broadcast packets 0              0
Multicast packets 0              0
CRC/Align errors  0              0
FIFO errors       0              0
MAC control frames 0              0
MAC pause frames   0              0
Oversized frames   0
Jabber frames      0
Fragment frames    0
VLAN tagged frames 0
Code violations     0
Total octets      0              0
Total packets     0              0
Unicast packets   0              0
Broadcast packets 0              0
Multicast packets 0              0
CRC/Align errors  0              0
FIFO errors       0              0
MAC control frames 0              0
MAC pause frames   0              0
Oversized frames   0
Jabber frames      0
Fragment frames    0
VLAN tagged frames 0
Code violations     0
OTN alarms        : None
OTN defects       : None
OTN FEC Mode      : GFEC
OTN Rate          : Fixed Stuff Bytes 11.0957Gbps
OTN Line Loopback : Enabled
OTN FEC statistics :
Corrected Errors      0
Corrected Error Ratio ( 0 sec average) 0e-0
OTN FEC alarms:      Seconds  Count  State
FEC Degrade          0        0  OK
FEC Excessive         0        0  OK
OTN OC:              Seconds  Count  State
LOS                   2        1  OK
LOF                   67164    2  Defect Active

```

```

LOM                                67164          71 Defect Active
Wavelength Lock                    0             0 OK
OTN OTU:
AIS                                0             0 OK
BDI                                65919          4814 Defect Active
IAE                                67158          1 Defect Active
TTIM                               7             1 OK
SF                                 67164          2 Defect Active
SD                                 67164          3 Defect Active
TCA-ES                             0             0 OK
TCA-SES                             0             0 OK
TCA-UAS                             80            40 OK
TCA-BBE                             0             0 OK
BIP                                 0             0 OK
BBE                                 0             0 OK
ES                                  0             0 OK
SES                                 0             0 OK
UAS                                587            0 OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
APS/PCC0: 0x02, APS/PCC1: 0x42, APS/PCC2: 0xa2, APS/PCC3: 0x48
Payload Type: 0x03
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x03
Filter statistics:
Input packet count                  0
Input packet rejects                0
Input DA rejects                    0
Input SA rejects                    0
Output packet count                  0
Output packet pad count              0
Output packet error count            0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
Destination slot: 7
CoS information:
Direction : Output
CoS transmit queue                  Bandwidth          Buffer Priority
Limit
0 best-effort                       95      9500000000    95      usec      low
none
3 network-control                    5       500000000        5       0        low
none
...

```

### show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode)

```

user@host> show interfaces xe-7/0/0 extensive
Physical interface: xe-7/0/0, Enabled, Physical link is Up
Interface index: 173, SNMP ifIndex: 212, Generation: 174
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Enabled,

```

```

Loopback: None, Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
...

```

### show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only)

```

user@host> show interfaces xe-7/0/0-tx extensive
Physical interface: xe-7/0/0-tx, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 137, Generation: 177
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Tx-Only
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags : None
  CoS queues : 8 supported, 8 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:83, Hardware address: 00:00:5e:00:53:83
  Last flapped : 2007-06-01 09:08:19 PDT (3d 02:31 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 322891152287160 9627472888 bps
  Input packets: 0 0 pps
  Output packets: 328809727380 1225492 pps
...

Filter statistics:
  Output packet count 328810554250
  Output packet pad count 0
  Output packet error count 0
...

Logical interface xe-7/0/0-tx.0 (Index 73) (SNMP ifIndex 138) (Generation 139)

Flags: SNMP-Traps Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes : 0
  Output bytes : 322891152287160
  Input packets: 0
  Output packets: 328809727380
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 322891152287160 9627472888 bps
  Input packets: 0 0 pps
  Output packets: 328809727380 1225492 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0

```

```

      Input packets:          0
      Output packets:         0
      Protocol inet, MTU: 1500, Generation: 147, Route table: 0
      Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.11.12/24, Local: 10.11.12.13, Broadcast: 10.11.12.255,
      Generation: 141
      Protocol multiservice, MTU: Unlimited, Generation: 148, Route table: 0
      Flags: None
      Policer: Input: __default_arp_policer__

```

### show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only)

```

user@host> show interfaces xe-7/0/0-rx extensive
Physical interface: xe-7/0/0-rx, Enabled, Physical link is Up
  Interface index: 174, SNMP ifIndex: 118, Generation: 175
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
  Unidirectional: Rx-Only
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:83, Hardware address: 00:00:5e:00:53:83
  Last flapped   : 2007-06-01 09:08:22 PDT (3d 02:31 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :      322857456303482          9627496104 bps
    Output bytes :              0              0 bps
    Input packets:      328775413751          1225495 pps
    Output packets:              0              0 pps

...

  Filter statistics:
    Input packet count      328775015056
    Input packet rejects    1
    Input DA rejects        0

...

  Logical interface xe-7/0/0-rx.0 (Index 72) (SNMP ifIndex 120) (Generation 138)

  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes :      322857456303482          9627496104 bps
    Output bytes :              0              0 bps
    Input packets:      328775413751          1225495 pps
    Output packets:              0              0 pps
  IPv6 transit statistics:
    Input bytes :              0
    Output bytes :              0
    Input packets:              0
    Output packets:              0
  Local statistics:
    Input bytes :              0
    Output bytes :              0
    Input packets:              0
    Output packets:              0
  Transit statistics:
    Input bytes :      322857456303482          9627496104 bps
    Output bytes :              0              0 bps

```

```

Input packets:          328775413751          1225495 pps
Output packets:          0                    0 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Protocol inet, MTU: 1500, Generation: 145, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.0.2/24, Local: 192.0.2.1, Broadcast: 192.0.2.255,
Generation: 139
Protocol multiservice, MTU: Unlimited, Generation: 146, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

## Sample Output

### Sample Output SRX Gigabit Ethernet

```

user@host> show interfaces ge-0/0/1
Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped   : 2015-05-12 08:36:59 UTC (1w1d 22:42 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : LINK
Active defects : LINK
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514)
  Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
  Input packets : 0
  Output packets: 0
  Security: Zone: public
  Protocol inet, MTU: 1500
    Flags: Sendbcst-pkt-to-re
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

### Sample Output SRX Gigabit Ethernet

```

user@host> show interfaces ge-0/0/1
Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running Down

```

```

Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags      : None
CoS queues      : 8 supported, 8 maximum usable queues
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped    : 2015-05-12 08:36:59 UTC (1w1d 22:42 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
Active alarms   : LINK
Active defects  : LINK
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514)
  Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
  Input packets : 0
  Output packets: 0
  Security: Zone: public
  Protocol inet, MTU: 1500
    Flags: Sendbroadcast-pkt-to-re
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

### show interfaces detail (Gigabit Ethernet)

```

user@host> show interfaces ge-0/0/1 detail
Physical interface: ge-0/0/1, Enabled, Physical link is Down
  Interface index: 135, SNMP ifIndex: 510, Generation: 138
  Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,
  BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering:
  Disabled,
  Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running Down
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
  Last flapped   : 2015-05-12 08:36:59 UTC (1w2d 00:00 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0          0 bps
    Output bytes  : 0          0 bps
    Input packets : 0          0 pps
    Output packets: 0          0 pps
  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

```

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Active alarms   : LINK
  Active defects  : LINK

```

Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514) (Generation 136)

Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2

Traffic statistics:

Input bytes : 0  
Output bytes : 0  
Input packets: 0  
Output packets: 0

Local statistics:

Input bytes : 0  
Output bytes : 0  
Input packets: 0  
Output packets: 0

Transit statistics:

Input bytes : 0 0 bps  
Output bytes : 0 0 bps  
Input packets: 0 0 pps  
Output packets: 0 0 pps

Security: Zone: public

Flow Statistics :

Flow Input statistics :

Self packets : 0  
ICMP packets : 0  
VPN packets : 0  
Multicast packets : 0  
Bytes permitted by policy : 0  
Connections established : 0

Flow Output statistics:

Multicast packets : 0  
Bytes permitted by policy : 0

Flow error statistics (Packets dropped due to):

Address spoofing: 0  
Authentication failed: 0  
Incoming NAT errors: 0  
Invalid zone received packet: 0  
Multiple user authentications: 0  
Multiple incoming NAT: 0  
No parent for a gate: 0  
No one interested in self packets: 0  
No minor session: 0  
No more sessions: 0  
No NAT gate: 0  
No route present: 0  
No SA for incoming SPI: 0  
No tunnel found: 0  
No session for a gate: 0  
No zone or NULL zone binding: 0  
Policy denied: 0  
Security association not active: 0  
TCP sequence number out of window: 0  
Syn-attack protection: 0  
User authentication errors: 0

Protocol inet, MTU: 1500, Generation: 150, Route table: 0

Flags: Sendbroadcast-pkt-to-re

Addresses, Flags: Dest-route-down Is-Preferred Is-Primary

Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255, Generation:

150

## show interfaces statistics st0.0 detail

```

user@host> show interfaces statistics st0.0 detail
Logical interface st0.0 (Index 71) (SNMP ifIndex 609) (Generation 136)
Flags: Up Point-To-Point SNMP-Traps Encapsulation: Secure-Tunnel
Traffic statistics:
  Input bytes :      528152756774
  Output bytes :     575950643520
  Input packets:    11481581669
  Output packets:   12520666095
Local statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:     0
  Output packets:    0
Transit statistics:
  Input bytes :      0          121859888 bps
  Output bytes :     0          128104112 bps
  Input packets:     0          331141 pps
  Output packets:    0          348108 pps
Security: Zone: untrust
Allowed host-inbound traffic : any-service bfd bgp dvmrp igmp ldp msdp nhrp
ospf ospf3 pgm pim rip ripng router-discovery rsvp
sap vrrp
Flow Statistics :
Flow Input statistics :
  Self packets :      0
  ICMP packets :      0
  VPN packets :      0
  Multicast packets : 0
  Bytes permitted by policy : 525984295844
  Connections established : 7
Flow Output statistics:
  Multicast packets : 0
  Bytes permitted by policy : 576003290222
Flow error statistics (Packets dropped due to):
  Address spoofing:      0
  Authentication failed: 0
  Incoming NAT errors:   0
  Invalid zone received packet: 0
  Multiple user authentications: 0
  Multiple incoming NAT: 0
  No parent for a gate:  0
  No one interested in self packets: 0
  No minor session:      0
  No more sessions:      0
  No NAT gate:           0
  No route present:      2000280
  No SA for incoming SPI: 0
  No tunnel found:       0
  No session for a gate:  0
  No zone or NULL zone binding 0
  Policy denied:         0
  Security association not active: 0
  TCP sequence number out of window: 0
  Syn-attack protection: 0
  User authentication errors: 0
Protocol inet, MTU: 9192
Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
Generation: 155, Route table: 0

```

Flags: Sendbroadcast-pkt-to-re

### show interfaces extensive (Gigabit Ethernet)

```

user@host> show interfaces ge-0/0/1.0 extensive
Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510, Generation: 138
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped : 2015-05-12 08:36:59 UTC (1w1d 22:57 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort        0                0                0
1 expedited-fo       0                0                0
2 assured-forw       0                0                0
3 network-cont       0                0                0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control

Active alarms : LINK
Active defects : LINK
MAC statistics:
Total octets      Receive      Transmit
Total packets      0            0
Unicast packets    0            0
Broadcast packets  0            0
Multicast packets  0            0
CRC/Align errors   0            0
FIFO errors        0            0
MAC control frames 0            0

```

```

MAC pause frames          0          0
Oversized frames          0
Jabber frames             0
Fragment frames           0
VLAN tagged frames        0
Code violations            0
Filter statistics:
  Input packet count       0
  Input packet rejects     0
  Input DA rejects         0
  Input SA rejects         0
  Output packet count      0
  Output packet pad count  0
  Output packet error count 0
  CAM destination filters: 2, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Incomplete
Packet Forwarding Engine configuration:
  Destination slot: 0
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
  0 best-effort           95      950000000    95      0      low
none
  3 network-control       5      50000000    5      0      low
none
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514) (Generation 136)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:          0          0 pps
  Output packets:          0          0 pps
Security: Zone: public
Flow Statistics :
Flow Input statistics :
  Self packets :          0
  ICMP packets :          0
  VPN packets :          0
  Multicast packets :      0
  Bytes permitted by policy : 0
  Connections established : 0
Flow Output statistics:
  Multicast packets :      0
  Bytes permitted by policy : 0
Flow error statistics (Packets dropped due to):
  Address spoofing:        0

```

```

Authentication failed:          0
Incoming NAT errors:           0
Invalid zone received packet:   0
Multiple user authentications:  0
Multiple incoming NAT:          0
No parent for a gate:           0
No one interested in self packets: 0
No minor session:               0
No more sessions:               0
No NAT gate:                    0
No route present:               0
No SA for incoming SPI:         0
No tunnel found:                0
No session for a gate:          0
No zone or NULL zone binding    0
Policy denied:                  0
Security association not active: 0
TCP sequence number out of window: 0
Syn-attack protection:          0
User authentication errors:      0
Protocol inet, MTU: 1500, Generation: 150, Route table: 0
Flags: Sendbcast-pkt-to-re
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 150

```

### show interfaces terse

```

user@host> show interfaces terse

```

Interface	Admin	Link	Proto	Local	Remote
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	inet	10.209.4.61/18	
gr-0/0/0	up	up			
ip-0/0/0	up	up			
st0	up	up			
st0.1	up	ready	inet		
ls-0/0/0	up	up			
lt-0/0/0	up	up			
mt-0/0/0	up	up			
pd-0/0/0	up	up			
pe-0/0/0	up	up			
e3-1/0/0	up	up			
t3-2/0/0	up	up			
e1-3/0/0	up	up			
se-4/0/0	up	down			
t1-5/0/0	up	up			
br-6/0/0	up	up			
dc-6/0/0	up	up			
dc-6/0/0.32767	up	up			
bc-6/0/0:1	down	up			
bc-6/0/0:1.0	up	down			
d10	up	up			
d10.0	up	up	inet		
dsc	up	up			
gre	up	up			
ipip	up	up			
lo0	up	up			
lo0.16385	up	up	inet	10.0.0.1	--> 0/0
				10.0.0.16	--> 0/0

```

lsi                up    up
mtun               up    up
pimd              up    up
pime              up    up
pp0               up    up

```

#### show interfaces controller (Channelized E1 IQ with Logical E1)

```
user@host> show interfaces controller ce1-1/2/6
```

Controller	Admin	Link
ce1-1/2/6	up	up
e1-1/2/6	up	up

#### show interfaces controller (Channelized E1 IQ with Logical DSO)

```
user@host> show interfaces controller ce1-1/2/3
```

Controller	Admin	Link
ce1-1/2/3	up	up
ds-1/2/3:1	up	up
ds-1/2/3:2	up	up

#### show interfaces descriptions

```
user@host> show interfaces descriptions
```

Interface	Admin	Link	Description
so-1/0/0	up	up	M20-3#1
so-2/0/0	up	up	GSR-12#1
ge-3/0/0	up	up	SMB-OSPF_Area300
so-3/3/0	up	up	GSR-13#1
so-3/3/1	up	up	GSR-13#2
ge-4/0/0	up	up	T320-7#1
ge-5/0/0	up	up	T320-7#2
so-7/1/0	up	up	M160-6#1
ge-8/0/0	up	up	T320-7#3
ge-9/0/0	up	up	T320-7#4
so-10/0/0	up	up	M160-6#2
so-13/0/0	up	up	M20-3#2
so-14/0/0	up	up	GSR-12#2
ge-15/0/0	up	up	SMB-OSPF_Area100
ge-15/0/1	up	up	GSR-13#3

#### show interfaces destination-class all

```
user@host> show interfaces destination-class all
```

```
Logical interface so-4/0/0.0
```

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(silver	0)	0)
(	0)	0)

```
Logical interface so-0/1/3.0
```

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(	0)	0)

```

silver                                0                                0
(                                     0) (                               0)

```

### show interfaces diagnostics optics

```

user@host> show interfaces diagnostics optics ge-2/0/0
Physical interface: ge-2/0/0
Laser bias current                : 7.408 mA
Laser output power                : 0.3500 mW / -4.56 dBm
Module temperature                : 23 degrees C / 73 degrees F
Module voltage                    : 3.3450 V
Receiver signal average optical power : 0.0002 mW / -36.99 dBm
Laser bias current high alarm     : Off
Laser bias current low alarm      : Off
Laser bias current high warning   : Off
Laser bias current low warning    : Off
Laser output power high alarm     : Off
Laser output power low alarm      : Off
Laser output power high warning   : Off
Laser output power low warning    : Off
Module temperature high alarm     : Off
Module temperature low alarm      : Off
Module temperature high warning   : Off
Module temperature low warning    : Off
Module voltage high alarm         : Off
Module voltage low alarm          : Off
Module voltage high warning       : Off
Module voltage low warning        : Off
Laser rx power high alarm         : Off
Laser rx power low alarm         : On
Laser rx power high warning       : Off
Laser rx power low warning        : On
Laser bias current high alarm threshold : 17.000 mA
Laser bias current low alarm threshold : 1.000 mA
Laser bias current high warning threshold : 14.000 mA
Laser bias current low warning threshold : 2.000 mA
Laser output power high alarm threshold : 0.6310 mW / -2.00 dBm
Laser output power low alarm threshold : 0.0670 mW / -11.74 dBm
Laser output power high warning threshold : 0.6310 mW / -2.00 dBm
Laser output power low warning threshold : 0.0790 mW / -11.02 dBm
Module temperature high alarm threshold : 95 degrees C / 203 degrees F
Module temperature low alarm threshold : -25 degrees C / -13 degrees F
Module temperature high warning threshold : 90 degrees C / 194 degrees F
Module temperature low warning threshold : -20 degrees C / -4 degrees F
Module voltage high alarm threshold : 3.900 V
Module voltage low alarm threshold : 2.700 V
Module voltage high warning threshold : 3.700 V
Module voltage low warning threshold : 2.900 V
Laser rx power high alarm threshold : 1.2590 mW / 1.00 dBm
Laser rx power low alarm threshold : 0.0100 mW / -20.00 dBm
Laser rx power high warning threshold : 0.7940 mW / -1.00 dBm
Laser rx power low warning threshold : 0.0158 mW / -18.01 dBm

```

### show interfaces far-end-interval coc12-5/2/0

```

user@host> show interfaces far-end-interval coc12-5/2/0
Physical interface: coc12-5/2/0, SNMP ifIndex: 121
05:30-current:
ES-L: 1, SES-L: 1, UAS-L: 0

```

```

05:15-05:30:
    ES-L: 0, SES-L: 0, UAS-L: 0
05:00-05:15:
    ES-L: 0, SES-L: 0, UAS-L: 0
04:45-05:00:
    ES-L: 0, SES-L: 0, UAS-L: 0
04:30-04:45:
    ES-L: 0, SES-L: 0, UAS-L: 0
04:15-04:30:
    ES-L: 0, SES-L: 0, UAS-L: 0
04:00-04:15:
...

```

### show interfaces far-end-interval coc1-5/2/1:1

```

user@host> run show interfaces far-end-interval coc1-5/2/1:1
Physical interface: coc1-5/2/1:1, SNMP ifIndex: 342
05:30-current:
    ES-L: 1, SES-L: 1, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
05:15-05:30:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
05:00-05:15:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:45-05:00:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:30-04:45:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:15-04:30:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:00-04:15:

```

### show interfaces filters

```

user@host> show interfaces filters

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	inet		
			iso		
ge-5/0/0	up	up			
ge-5/0/0.0	up	up	any		f-any
			inet		f-inet
			multiservice		
gr-0/3/0	up	up			
ip-0/3/0	up	up			
mt-0/3/0	up	up			
pd-0/3/0	up	up			
pe-0/3/0	up	up			
vt-0/3/0	up	up			
at-1/0/0	up	up			
at-1/0/0.0	up	up	inet		
			iso		
at-1/1/0	up	down			
at-1/1/0.0	up	down	inet		
			iso		
....					

### show interfaces flow-statistics (Gigabit Ethernet)

```

user@host> show interfaces flow-statistics ge-0/0/1.0

```

```

Logical interface ge-0/0/1.0 (Index 70) (SNMP ifIndex 49)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 5161
  Output packets: 83
  Security: Zone: zone2
  Allowed host-inbound traffic : bootp bfd bgp dns dvmrp ldp msdp nhrp ospf
pgm
  pim rip router-discovery rsvp sap vrrp dhcp finger ftp tftp ident-reset http
https ike
  netconf ping rlogin rpm rsh snmp snmp-trap ssh telnet traceroute xnm-clear-text
xnm-ssl
  lsping
  Flow Statistics :
  Flow Input statistics :
    Self packets : 0
    ICMP packets : 0
    VPN packets : 2564
    Bytes permitted by policy : 3478
    Connections established : 1
  Flow Output statistics:
    Multicast packets : 0
    Bytes permitted by policy : 16994
  Flow error statistics (Packets dropped due to):
    Address spoofing: 0
    Authentication failed: 0
    Incoming NAT errors: 0
    Invalid zone received packet: 0
    Multiple user authentications: 0
    Multiple incoming NAT: 0
    No parent for a gate: 0
    No one interested in self packets: 0
    No minor session: 0
    No more sessions: 0
    No NAT gate: 0
    No route present: 0
    No SA for incoming SPI: 0
    No tunnel found: 0
    No session for a gate: 0
    No zone or NULL zone binding 0
    Policy denied: 0
    Security association not active: 0
    TCP sequence number out of window: 0
    Syn-attack protection: 0
    User authentication errors: 0
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 203.0.113.1/24, Local: 203.0.113.2, Broadcast: 2.2.2.255

```

### show interfaces interval (Channelized OC12)

```

user@host> show interfaces interval t3-0/3/0:0
Physical interface: t3-0/3/0:0, SNMP ifIndex: 23
17:43-current:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
17:28-17:43:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
17:13-17:28:

```

```

LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:58-17:13:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:43-16:58:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
...
Interval Total:
LCV: 230, PCV: 1145859, CCV: 455470, LES: 0, PES: 230, PSES: 230,
CES: 230, CSES: 230, SEFS: 230, UAS: 238

```

### show interfaces interval (E3)

```

user@host> show interfaces interval e3-0/3/0
Physical interface: e3-0/3/0, SNMP ifIndex: 23
17:43-current:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
17:28-17:43:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
17:13-17:28:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:58-17:13:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:43-16:58:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
....
Interval Total:
LCV: 230, PCV: 1145859, CCV: 455470, LES: 0, PES: 230, PSES: 230,
CES: 230, CSES: 230, SEFS: 230, UAS: 238

```

### show interfaces interval (SONET/SDH) (SRX devices)

```

user@host> show interfaces interval so-0/1/0
Physical interface: so-0/1/0, SNMP ifIndex: 19
20:02-current:
ES-S: 0, SES-S: 0, SEFS-S: 0, ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0,
SES-P: 0, UAS-P: 0
19:47-20:02:
ES-S: 267, SES-S: 267, SEFS-S: 267, ES-L: 267, SES-L: 267, UAS-L: 267,
ES-P: 267, SES-P: 267, UAS-P: 267
19:32-19:47:
ES-S: 56, SES-S: 56, SEFS-S: 56, ES-L: 56, SES-L: 56, UAS-L: 46, ES-P: 56,
SES-P: 56, UAS-P: 46
19:17-19:32:
ES-S: 0, SES-S: 0, SEFS-S: 0, ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0,
SES-P: 0, UAS-P: 0
19:02-19:17:
.....

```

### show interfaces load-balancing (SRX devices)

```

user@host> show interfaces load-balancing
Interface State      Last change  Member count
ams0      Up                1d 00:50    2
ams1      Up                00:00:59    2

```

**show interfaces load-balancing detail (SRX devices)**

```

user@host>show interfaces load-balancing detail
Load-balancing interfaces detail
Interface      : ams0
State          : Up
Last change    : 1d 00:51
Member count   : 2
Members        :
  Interface    Weight  State
  mams-2/0/0   10     Active
  mams-2/1/0   10     Active

```

**show interfaces mac-database (All MAC Addresses on a Port SRX devices)**

```

user@host> show interfaces mac-database xe-0/3/3
Physical interface: xe-0/3/3, Enabled, Physical link is Up
  Interface index: 372, SNMP ifIndex: 788
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2

```

MAC address	Input frames	Input bytes	Output frames	Output bytes
00:00:00:00:00:00	1	56	0	0
00:00:c0:01:01:02	7023810	323095260	0	0
00:00:c0:01:01:03	7023810	323095260	0	0
00:00:c0:01:01:04	7023810	323095260	0	0
00:00:c0:01:01:05	7023810	323095260	0	0
00:00:c0:01:01:06	7023810	323095260	0	0
00:00:c0:01:01:07	7023810	323095260	0	0
00:00:c0:01:01:08	7023809	323095214	0	0
00:00:c0:01:01:09	7023809	323095214	0	0
00:00:c0:01:01:0a	7023809	323095214	0	0
00:00:c0:01:01:0b	7023809	323095214	0	0
00:00:c8:01:01:02	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:03	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:04	30424716	1399536936	37448523	1722632058
00:00:c8:01:01:05	30424789	1399540294	37448598	1722635508
00:00:c8:01:01:06	30424788	1399540248	37448597	1722635462
00:00:c8:01:01:07	30424783	1399540018	37448597	1722635462
00:00:c8:01:01:08	30424783	1399540018	37448596	1722635416
00:00:c8:01:01:09	8836796	406492616	8836795	406492570
00:00:c8:01:01:0a	30424712	1399536752	37448521	1722631966
00:00:c8:01:01:0b	30424715	1399536890	37448523	1722632058

```

Number of MAC addresses : 21

```

**show interfaces mac-database (All MAC Addresses on a Service SRX devices)**

```

user@host> show interfaces mac-database xe-0/3/3
Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2

```

MAC address	Input frames	Input bytes	Output frames	Output bytes
00:00:00:00:00:00	1	56	0	0

00:00:c0:01:01:02	7023810	323095260	0	0
00:00:c0:01:01:03	7023810	323095260	0	0
00:00:c0:01:01:04	7023810	323095260	0	0
00:00:c0:01:01:05	7023810	323095260	0	0
00:00:c0:01:01:06	7023810	323095260	0	0
00:00:c0:01:01:07	7023810	323095260	0	0
00:00:c0:01:01:08	7023809	323095214	0	0
00:00:c0:01:01:09	7023809	323095214	0	0
00:00:c0:01:01:0a	7023809	323095214	0	0
00:00:c0:01:01:0b	7023809	323095214	0	0
00:00:c8:01:01:02	31016568	1426762128	38040381	1749857526
00:00:c8:01:01:03	31016568	1426762128	38040382	1749857572
00:00:c8:01:01:04	31016499	1426758954	38040306	1749854076
00:00:c8:01:01:05	31016573	1426762358	38040381	1749857526
00:00:c8:01:01:06	31016573	1426762358	38040381	1749857526
00:00:c8:01:01:07	31016567	1426762082	38040380	1749857480
00:00:c8:01:01:08	31016567	1426762082	38040379	1749857434
00:00:c8:01:01:09	9428580	433714680	9428580	433714680
00:00:c8:01:01:0a	31016496	1426758816	38040304	1749853984
00:00:c8:01:01:0b	31016498	1426758908	38040307	1749854122

### show interfaces mac-database mac-address

```

user@host> show interfaces mac-database xe-0/3/3 mac-address (SRX devices)
00:00:c8:01:01:09
Physical interface: xe-0/3/3, Enabled, Physical link is Up
  Interface index: 372, SNMP ifIndex: 788
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
MAC address: 00:00:c8:01:01:09, Type: Configured,
  Input bytes   : 202324652
  Output bytes  : 202324560
  Input frames  : 4398362
  Output frames : 4398360
Policer statistics:
Policer type    Discarded frames  Discarded bytes
Output aggregate      3992386        183649756

```

### show interfaces mc-ae (SRX devices)

```

user@host> show interfaces mc-ae ae0 unit 512
Member Links   : ae0
Local Status   : active
Peer Status    : active
Logical Interface      : ae0.512
Core Facing Interface : Label Ethernet Interface
ICL-PL          : Label Ethernet Interface

```

### show interfaces media (SONET/SDH)

The following example displays the output fields unique to the **show interfaces media** command for a SONET interface (with no level of output specified):

```

user@host> show interfaces media so-4/1/2
Physical interface: so-4/1/2, Enabled, Physical link is Up
  Interface index: 168, SNMP ifIndex: 495
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: 0C48,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 1783 (00:00:00 ago), Output: 1786 (00:00:08 ago)
  LCP state: Opened
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Not-configured
  CoS queues     : 8 supported
  Last flapped   : 2005-06-15 12:14:59 PDT (04:31:29 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  SONET alarms   : None
  SONET defects  : None
  SONET errors:
    BIP-B1: 121, BIP-B2: 916, REI-L: 0, BIP-B3: 137, REI-P: 16747, BIP-BIP2: 0
  Received path trace: routerb so-1/1/2
  Transmitted path trace: routera so-4/1/2

```

#### show interfaces policers (SRX devices)

```

user@host> show interfaces policers
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/0/0       up    up
ge-0/0/0.0     up    up    inet
               up    up    iso
gr-0/3/0       up    up
ip-0/3/0       up    up
mt-0/3/0       up    up
pd-0/3/0       up    up
pe-0/3/0       up    up
...
so-2/0/0       up    up
so-2/0/0.0     up    up    inet so-2/0/0.0-in-policer so-2/0/0.0-out-policer
               up    up    iso
so-2/1/0       up    down
...

```

#### show interfaces policers interface-name (SRX devices)

```

user@host> show interfaces policers so-2/1/0
Interface      Admin Link Proto Input Policer      Output Policer
so-2/1/0       up    down
so-2/1/0.0     up    down inet so-2/1/0.0-in-policer so-2/1/0.0-out-policer
               up    down iso
               up    down inet6

```

#### show interfaces queue (SRX devices)

The following truncated example shows the CoS queue sizes for queues 0, 1, and 3. Queue 1 has a queue buffer size (guaranteed allocated memory) of 9192 bytes.

```

user@host> show interfaces queue
Physical interface: ge-0/0/0, Enabled, Physical link is Up
  Interface index: 134, SNMP ifIndex: 509
  Forwarding classes: 8 supported, 8 in use
  Egress queues: 8 supported, 8 in use
  Queue: 0, Forwarding classes: class0
    Queued:
      Packets      :                0          0 pps
      Bytes       :                0          0 bps
    Transmitted:
      Packets      :                0          0 pps
      Bytes       :                0          0 bps
      Tail-dropped packets :                0          0 pps
      RL-dropped packets  :                0          0 pps
      RL-dropped bytes   :                0          0 bps
      RED-dropped packets :                0          0 pps
      Low              :                0          0 pps
      Medium-low       :                0          0 pps
      Medium-high      :                0          0 pps
      High             :                0          0 pps
      RED-dropped bytes :                0          0 bps
      Low              :                0          0 bps
      Medium-low       :                0          0 bps
      Medium-high      :                0          0 bps
      High             :                0          0 bps
    Queue Buffer Usage:
      Reserved buffer :          118750000 bytes
      Queue-depth bytes :
      Current         :                0
  ..
  ..
  Queue: 1, Forwarding classes: class1
  ..
  ..
  Queue Buffer Usage:
    Reserved buffer :          9192 bytes
    Queue-depth bytes :
    Current         :                0
  ..
  ..
  Queue: 3, Forwarding classes: class3
    Queued:
    ..
    ..
  Queue Buffer Usage:
    Reserved buffer :          6250000 bytes
    Queue-depth bytes :
    Current         :                0
  ..
  ..

```

#### show interfaces redundancy (SRX devices)

```

user@host> show interfaces redundancy
Interface  State      Last change  Primary  Secondary  Current status
rsp0       Not present
rsp1       On secondary  1d 23:56    sp-1/0/0  sp-0/2/0  both down
rsp2       On primary   10:10:27    sp-1/3/0  sp-0/2/0  secondary down
rlsq0      On primary   00:06:24    lsq-0/3/0  lsq-1/0/0  both up

```

**show interfaces redundancy (Aggregated Ethernet SRX devices)**

```

user@host> show interfaces redundancy
Interface State      Last change Primary      Secondary    Current status
r1sq0     On secondary  00:56:12    1sq-4/0/0    1sq-3/0/0    both up

ae0
ae1
ae2
ae3
ae4

```

**show interfaces redundancy detail (SRX devices)**

```

user@host> show interfaces redundancy detail
Interface      : r1sq0
State          : On primary
Last change    : 00:45:47
Primary        : 1sq-0/2/0
Secondary      : 1sq-1/2/0
Current status : both up
Mode           : hot-standby

Interface      : r1sq0:0
State          : On primary
Last change    : 00:45:46
Primary        : 1sq-0/2/0:0
Secondary      : 1sq-1/2/0:0
Current status : both up
Mode           : warm-standby

```

**show interfaces routing brief (SRX devices)**

```

user@host> show interfaces routing brief
Interface      State Addresses
so-5/0/3.0     Down ISO      enabled
so-5/0/2.0     Up   MPLS     enabled
               ISO      enabled
               INET    192.168.2.120
               INET    enabled
so-5/0/1.0     Up   MPLS     enabled
               ISO      enabled
               INET    192.168.2.130
               INET    enabled
at-1/0/0.3     Up   CCC      enabled
at-1/0/0.2     Up   CCC      enabled
at-1/0/0.0     Up   ISO      enabled
               INET    192.168.90.10
               INET    enabled
1o0.0          Up   ISO      47.0005.80ff.f800.0000.0108.0001.1921.6800.5061.00
               ISO      enabled
               INET    127.0.0.1
fxp1.0         Up
fxp0.0         Up   INET    192.168.6.90

```

**show interfaces routing detail (SRX devices)**

```

user@host> show interfaces routing detail
so-5/0/3.0
  Index: 15, Refcount: 2, State: Up <Broadcast PointToPoint Multicast> Change:<>

```

```

Metric: 0, Up/down transitions: 0, Full-duplex
Link layer: HDLC serial line Encapsulation: PPP Bandwidth: 155Mbps
ISO address (null)
  State: <Broadcast PointToPoint Multicast> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
so-5/0/2.0
  Index: 14, Refcount: 7, State: <Up Broadcast PointToPoint Multicast> Change:<>

Metric: 0, Up/down transitions: 0, Full-duplex
Link layer: HDLC serial line Encapsulation: PPP Bandwidth: 155Mbps
MPLS address (null)
  State: <Up Broadcast PointToPoint Multicast> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4458 bytes
ISO address (null)
  State: <Up Broadcast PointToPoint Multicast> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
INET address 192.168.2.120
  State: <Up Broadcast PointToPoint Multicast Localup> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
  Local address: 192.168.2.120
  Destination: 192.168.2.110/32
INET address (null)
  State: <Up Broadcast PointToPoint Multicast> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
...

```

#### show interfaces routing-instance all (SRX devices)

```

user@host> show interfaces terse routing-instance all
Interface  Admin  Link  Proto  Local          Remote Instance
at-0/0/1   up     up    inet   10.0.0.1/24
ge-0/0/0.0 up     up    inet   192.168.4.28/24      sample-a
at-0/1/0.0 up     up    inet6   fe80::a:0:0:4/64     sample-b
so-0/0/0.0 up     up    inet   10.0.0.1/32

```

#### show interfaces snmp-index (SRX devices)

```

user@host> show interfaces snmp-index 33
Physical interface: so-2/1/1, Enabled, Physical link is Down
Interface index: 149, SNMP ifIndex: 33
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: 0C48,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives
CoS queues     : 8 supported
Last flapped   : 2005-06-15 11:45:57 PDT (05:38:43 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
SONET alarms   : LOL, PLL, LOS
SONET defects  : LOL, PLL, LOF, LOS, SEF, AIS-L, AIS-P

```

#### show interfaces source-class all (SRX devices)

```

user@host> show interfaces source-class all
Logical interface so-0/1/0.0

Source class          Packets          Bytes
                    (packet-per-second) (bits-per-second)
gold                  1928095          161959980

```

```

( 889) ( 597762)
bronze 0 0
( 0) ( 0)
silver 0 0
( 0) ( 0)
Logical interface so-0/1/3.0
Source class Packets Bytes
(packet-per-second) (bits-per-second)
gold 0 0
( 0) ( 0)
bronze 0 0
( 0) ( 0)
silver 116113 9753492
( 939) ( 631616)

```

### show interfaces statistics (Fast Ethernet SRX devices)

```

user@host> show interfaces fe-1/3/1 statistics
Physical interface: fe-1/3/1, Enabled, Physical link is Up
Interface index: 144, SNMP ifIndex: 1042
Description: ford fe-1/3/1
Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues : 4 supported, 4 maximum usable queues
Current address: 00:90:69:93:04:dc, Hardware address: 00:90:69:93:04:dc
Last flapped : 2006-04-18 03:08:59 PDT (00:01:24 ago)
Statistics last cleared: Never
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
Input errors: 0, Output errors: 0
Active alarms : None
Active defects : None
Logical interface fe-1/3/1.0 (Index 69) (SNMP ifIndex 50)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500
Flags: Is-Primary, DCU, SCU-in
Destination class Packets Bytes
(packet-per-second) (bits-per-second)
silver1 0 0
( 0) ( 0)
silver2 0 0
( 0) ( 0)
silver3 0 0
( 0) ( 0)
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: 10.27.245/24, Local: 10.27.245.2,
Broadcast: 10.27.245.255
Protocol iso, MTU: 1497
Flags: Is-Primary

```

### show interfaces switch-port (SRX devices)

```

user@host# show interfaces ge-slot/0/0 switch-port port-number
Port 0, Physical link is Up
Speed: 100mbps, Auto-negotiation: Enabled
Statistics:
Total bytes          Receive      Transmit
Total packets       409145      88008

```

```

Unicast packets          9987          83817
Multicast packets        145002         0
Broadcast packets        254156        4191
Multiple collisions       23           10
FIFO/CRC/Align errors    0           0
MAC pause frames         0           0
Oversized frames         0
Runt frames              0
Jabber frames            0
Fragment frames          0
Discarded frames         0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: None, Remote fault: OK, Link
partner Speed: 100 Mbps
Local resolution:
Flow control: None, Remote fault: Link OK

```

### show interfaces transport pm (SRX devices)

```

user@host> show interfaces transport pm all current et-0/1/0
Physical interface: et-0/1/0, SNMP ifIndex 515
14:45-current          Elapse time:900 Seconds
Near End               Suspect Flag:False          Reason:None
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

OTU-BBE                0              800            No             No
OTU-ES                 0              135            No             No
OTU-SES                0              90             No             No
OTU-UAS                427            90             No             No
Far End               Suspect Flag:True          Reason:Unknown
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

OTU-BBE                0              800            No             No
OTU-ES                 0              135            No             No
OTU-SES                0              90             No             No
OTU-UAS                0              90             No             No
Near End               Suspect Flag:False          Reason:None
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

ODU-BBE                0              800            No             No
ODU-ES                 0              135            No             No
ODU-SES                0              90             No             No
ODU-UAS                427            90             No             No
Far End               Suspect Flag:True          Reason:Unknown
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

ODU-BBE                0              800            No             No
ODU-ES                 0              135            No             No
ODU-SES                0              90             No             No
ODU-UAS                0              90             No             No
FEC                   Suspect Flag:False          Reason:None
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

FEC-CorrectedErr       2008544300      0              NA             NA
FEC-UncorrectedWords   0               0              NA             NA
BER                   Suspect Flag:False          Reason:None
PM                     MIN            MAX            AVG            THRESHOLD      TCA-ENABLED
TCA-RAISED
BER                   3.6e-5         5.8e-5         3.6e-5         10.0e-3        No

```

```

Yes
Physical interface: et-0/1/0, SNMP ifIndex 515
14:45-current
Suspect Flag:True          Reason:Object Disabled
PM          CURRENT  MIN      MAX      AVG      THRESHOLD
TCA-ENABLED  TCA-RAISED
(MIN)
(MAX) (MIN) (MAX) (MIN) (MAX)
Lane chromatic dispersion 0 0 0 0 0
0 NA NA NA NA
Lane differential group delay 0 0 0 0 0
0 NA NA NA NA
q Value 120 120 120 120 0
0 NA NA NA NA
SNR 28 28 29 28 0
0 NA NA NA NA
Tx output power(0.01dBm) -5000 -5000 -5000 -5000 -300
-100 No No No No
Rx input power(0.01dBm) -3642 -3665 -3626 -3637 -1800
-500 No No No No
Module temperature(Celsius) 46 46 46 46 -5
75 No No No No
Tx laser bias current(0.1mA) 0 0 0 0 0
0 NA NA NA NA
Rx laser bias current(0.1mA) 1270 1270 1270 1270 0
0 NA NA NA NA
Carrier frequency offset(MHz) -186 -186 -186 -186 -5000
5000 No No No No

```

#### show security zones (SRX devices)

```

user@host> show security zones
Functional zone: management
  Description: This is the management zone.
  Policy configurable: No
  Interfaces bound: 1
  Interfaces:
    ge-0/0/0.0
Security zone: Host
  Description: This is the host zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    fxp0.0
Security zone: abc
  Description: This is the abc zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    ge-0/0/1.0
Security zone: def
  Description: This is the def zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    ge-0/0/2.0

```

## show interfaces (ATM)

---

<b>Syntax</b>	<code>show interfaces at-<i>fpc/pic/port</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;descriptions&gt;</code> <code>&lt;media&gt;</code> <code>&lt;snmp-index <i>snmp-index</i>&gt;</code> <code>&lt;statistics&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display status information about the specified ATM interface.
<b>Options</b>	<b>at-<i>fpc/pic/port</i></b> —Display standard information about the specified ATM interface. <b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output. <b>descriptions</b> —(Optional) Display interface description strings. <b>media</b> —(Optional) Display media-specific information about network interfaces. <b>snmp-index <i>snmp-index</i></b> —(Optional) Display the SNMP index of the interface. <b>statistics</b> —(Optional) Display static interface statistics.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces (ATM, IMA Group) on page 1217</a> <a href="#">show interfaces extensive (ATM IMA Group) on page 1218</a> <a href="#">show interfaces (ATM1, SONET Mode) on page 1219</a> <a href="#">show interfaces brief (ATM1, SONET Mode) on page 1220</a> <a href="#">show interfaces detail (ATM1, SONET Mode) on page 1220</a> <a href="#">show interfaces extensive (ATM1, SONET Mode) on page 1221</a> <a href="#">show interfaces (ATM2, SDH Mode) on page 1223</a> <a href="#">show interfaces brief (ATM2, SDH Mode) on page 1224</a> <a href="#">show interfaces detail (ATM2, SDH Mode) on page 1225</a> <a href="#">show interfaces extensive (ATM2, SDH Mode) on page 1226</a> <a href="#">show interfaces (ATM2, SONET Mode) on page 1229</a> <a href="#">show interfaces brief (ATM2, SONET Mode) on page 1230</a> <a href="#">show interfaces detail (ATM2, SONET Mode) on page 1231</a> <a href="#">show interfaces extensive (ATM2, SONET Mode) on page 1233</a>
<b>Output Fields</b>	<a href="#">Table 59 on page 1203</a> lists the output fields for the <b>show interfaces (ATM)</b> command. Output fields are listed in the approximate order in which they appear.

Table 59: ATM show interfaces Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Description</b>	Configured interface description.	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface: <ul style="list-style-type: none"> <li>• <b>ATM-CCC-CELL-RELAY</b>—ATM cell relay for CCC.</li> <li>• <b>ATM-CCC-VC-MUX</b>—ATM virtual circuit (VC) for CCC.</li> <li>• <b>ATM-CISCO-NLPID</b>—Cisco-compatible ATM NLPID encapsulation.</li> <li>• <b>ATM-MIPP-LLC</b>—ATM MLPPP over ATM Adaptation Layer 5 (AAL5)/logical link control (LLC).</li> <li>• <b>ATM-NLPID</b>—ATM NLPID encapsulation.</li> <li>• <b>ATM-PPP-LLC</b>—ATM PPP over AAL5/LLC.</li> <li>• <b>ATM-PPP-VC-MUX</b>—ATM PPP over raw AAL5.</li> <li>• <b>ATM-PVC</b>—ATM permanent virtual circuits.</li> <li>• <b>ATM-SNAP</b>—ATM LLC/SNAP encapsulation.</li> <li>• <b>ATM-TCC-SNAP</b>—ATM LLC/SNAP for translational cross-connection.</li> <li>• <b>ATM-TCC-VC-MUX</b>—ATM VC for translational cross-connection.</li> <li>• <b>ATM-VC-MUX</b>—ATM VC multiplexing.</li> <li>• <b>ETHER-OVER-ATM-LLC</b>—Ethernet over ATM (LLC/SNAP) encapsulation.</li> <li>• <b>ETHER-VPLS-OVER-ATM-LLC</b>—Ethernet VPLS over ATM (bridging) encapsulation.</li> </ul>	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source: <b>Internal</b> or <b>External</b> .	All levels
<b>framing Mode</b>	Framing mode: <b>SONET</b> or <b>SDH</b> .	All levels
<b>Speed</b>	Speed at which the interface is running as represented by the interface type (for example, <b>OC3</b> , <b>ADSL2+</b> , and <b>SHDSL(2-wire)</b> ).	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>Payload scrambler</b>	Whether payload scrambling is enabled.	All levels

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Ethernet MAC address for this interface for Ethernet over ATM encapsulation.	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output Rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	Statistics for traffic on the interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface whose definitions are as follows:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and frame check sequence (FCS) errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's random early detection (RED) mechanism.</li> <li>• <b>Invalid VCs</b>—Number of cells that arrived for a nonexistent VC.</li> <li>• <b>Framing errors</b>—Sum of AAL5 packets that have FCS errors, reassembly timeout errors, and length errors.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If it increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained so long in shared packet SDRAM that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>MTU errors</b>—Number of packets larger than the MTU threshold.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.	<b>detail extensive</b>

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Physical interface queue counters of ATM2 PICs displayed by the <b>show interfaces at-fpc/pic/port detail</b> command show the packet forwarding stream statistics associated with the ATM2 ports. Since multiple ports of the ATM2 PICs (except for the ATM2 dual-port OC12) share one packet forwarding stream, the physical interface queue counters reflect the aggregate of ATM2 port statistics.</p>	detail extensive
SONET alarms	SONET media-specific defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b> , <b>SONET section</b> , <b>SONET line</b> , and <b>SONET path</b> .	detail extensive none
SONET defects		
SONET PHY	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	extensive
SONET section	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SONET line</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault signal failure</li> <li>• <b>BERR-SD</b>—Bit error rate defect signal degradation</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>
<b>SONET path</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Received SONET overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SONET overhead	<ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1</b> and <b>K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>.</li> <li>• <b>Z3</b> and <b>Z4</b>—Allocated for future use.</li> </ul>	
SDH alarms	SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SDH PHY</b> , <b>SDH regenerator section</b> , <b>SDH multiplex section</b> , and <b>SDH path</b> .	All levels
SDH defects		
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>RS-BIP8</b>—24-bit BIP for multiplex section overhead (B2 bytes)</li> <li>• <b>OOF</b>—Out of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>RS-ES</b>—Errored seconds (near-end regenerator section)</li> <li>• <b>RS-SES</b>—Severely errored seconds (near-end regenerator section)</li> <li>• <b>RS-SEFS</b>—Severely errored framing seconds (regenerator section)</li> </ul>	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SDH multiplex section</b>	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>MS-BIP24</b>—8-bit BIP for high-order path overhead (B3 byte)</li> <li>• <b>MS-FEBE</b>—Far-end block error (multiplex section)</li> <li>• <b>MS-FERF</b>—Far-end remote fail (multiplex section)</li> <li>• <b>MS-AIS</b>—Alarm indication signal (multiplex section)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>MS-ES</b>—Errored seconds (near-end multiplex section)</li> <li>• <b>MS-SES</b>—Severely errored seconds (near-end multiplex section)</li> <li>• <b>MS-UAS</b>—Unavailable seconds (near-end multiplex section)</li> <li>• <b>MS-ES-FE</b>—Errored seconds (far-end multiplex section)</li> <li>• <b>MS-SES-FE</b>—Severely errored seconds (far-end multiplex section)</li> <li>• <b>MS-UAS-FE</b>—Unavailable seconds (far-end multiplex section)</li> </ul>	<b>extensive</b>
<b>SDH path</b>	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>HP-BIP8</b>—8-bit BIP for regenerator section overhead (B1 byte)</li> <li>• <b>HP-FEBE</b>—Far-end block error (high-order path)</li> <li>• <b>HP-LOP</b>—Loss of pointer (high-order path)</li> <li>• <b>HP-AIS</b>—High-order-path alarm indication signal</li> <li>• <b>HP-FERF</b>—Far-end remote fail (high-order path)</li> <li>• <b>HP-UNEQ</b>—Unequipped (high-order path)</li> <li>• <b>HP-PLM</b>—Payload label mismatch (high-order path)</li> <li>• <b>HP-ES</b>—Errored seconds (near-end high-order path)</li> <li>• <b>HP-SES</b>—Severely errored seconds (near-end high-order path)</li> <li>• <b>HP-UAS</b>—Unavailable seconds (near-end high-order path)</li> <li>• <b>HP-ES-FE</b>—Errored seconds (far-end high-order path)</li> <li>• <b>HP-SES-FE</b>—Severely errored seconds (far-end high-order path)</li> <li>• <b>HP-UAS-FE</b>—Unavailable seconds (far-end high-order path)</li> </ul>	<b>extensive</b>

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Received SDH overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SDH overhead	<ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. This byte is allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1</b> and <b>K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. This byte is used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>.</li> <li>• <b>Z3</b> and <b>Z4</b>—These bytes are allocated for future use.</li> </ul>	
Received path trace	SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.	extensive
Transmitted path trace		
ATM Status	ATM state information: <ul style="list-style-type: none"> <li>• <b>HCS State</b>—Status of the header check sequence. ATM uses the HCS field in the cell header in the cell delineation process to frame ATM cell boundaries. The HCS is an FCS-8 calculation over the first four octets of the ATM cell header.</li> <li>• <b>LOC</b>—Current loss of cell (LOC) delineation state. <b>OK</b> means that no LOC is currently asserted.</li> </ul>	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
ATM Statistics	<p>ATM statistics for the interface:</p> <ul style="list-style-type: none"> <li>• <b>Uncorrectable HCS errors</b>—Number of cells dropped because the cell delineation failed. These errors most likely indicate that a SONET/SDH layer problem has occurred.</li> <li>• <b>Correctable HCS errors</b>—Number of correctable HCS errors that occurred. The cell delineation process can recover from these errors and locate the ATM cell boundary, although the framing process is not quite stable. The ATM cell is not dropped. This counter increases when the cell delineation process changes its state from <b>present</b> to <b>sync</b> (for example, when a cable is plugged into the interface).</li> </ul> <p>The following error statistics are from the framer:</p> <ul style="list-style-type: none"> <li>• <b>Tx cell FIFO overruns</b>—Number of overruns in the transmit FIFO.</li> <li>• <b>Rx cell FIFO overruns</b>—Number of overruns in the receive FIFO.</li> <li>• <b>Rx cell FIFO underruns</b>—Number of underruns in the receive FIFO.</li> <li>• <b>Input cell count</b>—Number of ATM cells received by the interface (not including idle cells).</li> <li>• <b>Output cell count</b>—Number of ATM cells transmitted by the interface (including idle cells).</li> <li>• <b>Output idle cell count</b>—Number of idle cells sent by the port. When ATM has nothing to send, it sends idle cells to fill the time slot.</li> <li>• <b>Output VC queue drops</b>—Number of packets dropped by a port on the PIC. Packets are dropped because of queue limits on the VCs.</li> </ul> <p>The following error statistics are from the SAR:</p> <ul style="list-style-type: none"> <li>• <b>Input no buffers</b>—Number of AAL5 packets dropped because no channel blocks or buffers were available to handle them.</li> <li>• <b>Input length errors</b>—Number of AAL5 packets dropped because their length was incorrect. Usually, these errors occur because a cell has been corrupted or lost, or because the length field was corrupted. They can also mean the AAL5 length field was zero.</li> <li>• <b>Input timeouts</b>—Number of AAL5 packets dropped because of a reassembly timeout.</li> <li>• <b>Input invalid VCs</b>—Number of AAL5 packets dropped because the header was unrecognized (because the VC was not correct or not configured).</li> <li>• <b>Input bad CRCs</b>—Number of AAL5 packets dropped because of frame check sequence errors.</li> <li>• <b>Input OAM cell no buffers</b>—Number of received OAM cells or raw cells dropped because no buffers were available to handle them.</li> <li>• <b>L2 circuit out-of-sequence packets</b>—(Layer 2 AAL5 mode) Number of AAL5 packets that are out of sequential order.</li> <li>• <b>Denied packets count</b>—The number of packets dropped due to VLAN priority deny packets or due to an error forwarding configuration that might cause a negative frame length, that is, the stripping size is larger than the packet size.</li> </ul>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"><li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li><li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li><li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li><li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li><li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li><li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li><li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li></ul>	extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
VPI	<p>(ATM2) Virtual path identifier information:</p> <ul style="list-style-type: none"> <li>• <b>Flags</b>—VPI flags can be one or more of the following: <ul style="list-style-type: none"> <li>• <b>Active</b> (virtual path is up)</li> <li>• <b>OAM</b> (operation and maintenance is enabled)</li> <li>• <b>Shaping</b> (shaping is configured)</li> </ul> </li> <li>• <b>CBR, Peak</b></li> <li>• <b>OAM, Period</b>—Interval at which OAM F4 loopback cells are sent.</li> <li>• <b>Up count</b>—Number of F4 OAM cells required to consider the virtual path up; the range is 1 through 255.</li> <li>• <b>Down count</b>—Number of F4 OAM cells required to consider the virtual path down; the range is 1 through 255.</li> <li>• <b>Total down time</b>—Total number of seconds the VPI has been down since it was opened, using the format <b>Total down time: hh:mm:ss</b> or <b>Never</b>.</li> <li>• <b>Last down</b>—Time of last <b>Down</b> transition, using the format <b>Last down: hh:mm:ss ago</b> or <b>Never</b>.</li> <li>• <b>OAM F4 cell statistics</b>—(Nonpromiscuous mode) OAM F4 statistics: <ul style="list-style-type: none"> <li>• <b>Total received</b>—Number of OAM F4 cells received.</li> <li>• <b>Total sent</b>—Number of OAM F4 cells sent.</li> <li>• <b>Loopback received</b>—Number of OAM F4 loopback cells received.</li> <li>• <b>Loopback sent</b>—Number of OAM F4 loopback cells sent.</li> <li>• <b>Last received</b>—Time at which the last OAM F4 cell was received.</li> <li>• <b>Last sent</b>—Time at which the last OAM F4 cell was sent.</li> <li>• <b>RDI received</b>—Number of OAM F4 cells received with the remote defect indication bit set.</li> <li>• <b>RDI sent</b>—Number of OAM F4 cells sent with the RDI bit set.</li> <li>• <b>AIS received</b>—Number of OAM F4 cells received with the alarm indication signal bit set.</li> <li>• <b>AIS sent</b>—Number of OAM F4 cells sent with the AIS bit set.</li> </ul> </li> </ul> <p><b>Traffic statistics:</b></p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the VPI.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the VPI.</li> <li>• <b>Input packets</b>—Number of packets received on the VPI.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the VPI.</li> </ul>	detail extensive none
<b>Logical Interface</b>		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Input packets</b>	Number of packets received on the logical interface.	None specified
<b>Output packets</b>	Number of packets transmitted on the logical interface.	None specified
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Traffic statistics</b>	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Local statistics</b>	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Transit statistics</b>	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Input packets</b>	Number of packets received on the logical interface.	None specified
<b>Output packets</b>	Number of packets transmitted on the logical interface.	None specified
<b>protocol-family</b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Protocol</b>	Protocol family configured on the logical interface.	<b>detail extensive none</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive</b>
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>VCI</b>	Virtual circuit identifier number and information: <ul style="list-style-type: none"> <li>• <b>Flags</b>—VCI flags:               <ul style="list-style-type: none"> <li>• <b>Active</b>—VCI is up and in working condition.</li> <li>• <b>CCC down</b>—VCI CCC is not in working condition.</li> <li>• <b>Closed</b>—VCI is closed because the user disabled the logical or physical interface from the CLI.</li> <li>• <b>Configured</b>—VCI is configured.</li> <li>• <b>Down</b>—VCI is not in working condition. The VCI might have alarms, defects, F5 AIS/RDI, or no response to OAM loopback cells.</li> <li>• <b>ILMI</b>—VCI is up and in working condition.</li> <li>• <b>OAM</b>—OAM loopback is enabled.</li> <li>• <b>Multicast</b>—VCI is a multicast VCI or DLCI.</li> <li>• <b>Multipoint destination</b>—VCI is configured as a multipoint destination.</li> <li>• <b>None</b>—No VCI flags.</li> <li>• <b>Passive-OAM</b>—Passive OAM is enabled.</li> <li>• <b>Shaping</b>—Shaping is enabled.</li> <li>• <b>Sustained</b>—Shaping rate is set to <b>Sustained</b>.</li> <li>• <b>Unconfigured</b>—VCI is not configured.</li> </ul> </li> <li>• <b>Total down time</b>—Total number of seconds the VCI has been down, using the format <b>Total down time: hh:mm:ss</b> or <b>Never</b>.</li> <li>• <b>Last down</b>—Time of last <b>Down</b> transition, using the format <b>Last down: hh:mm:ss</b>.</li> <li>• <b>EPD threshold</b>—(ATM2 only) Threshold at which a packet is dropped when the queue size (in number of cells) exceeds the early packet-discard (EPD) value.</li> </ul>	All levels

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
VCI (continued)	<ul style="list-style-type: none"> <li>• <b>Transmit weight cells</b>—(ATM2 only) Amount of bandwidth assigned to this queue.</li> <li>• <b>ATM per-VC transmit statistics:</b> <ul style="list-style-type: none"> <li>• <b>Tail queue packet drops</b>—Number of packets dropped because of bandwidth constraints. This value indicates that packets are queued to send out at a rate faster than allowed.</li> </ul> </li> <li>• <b>OAM F4 cell statistics</b>—(Nonpromiscuous mode) OAM F4 statistics: <ul style="list-style-type: none"> <li>• <b>Total received</b>—Number of OAM F4 cells received.</li> <li>• <b>Total sent</b>—Number of OAM F4 cells sent.</li> <li>• <b>Loopback received</b>—Number of OAM F4 loopback cells received.</li> <li>• <b>Loopback sent</b>—Number of OAM F4 loopback cells sent.</li> <li>• <b>Last received</b>—Time at which the last OAM F4 cell was received.</li> <li>• <b>Last sent</b>—Time at which the last OAM F4 cell was sent.</li> <li>• <b>RDI received</b>—Number of OAM F4 cells received with the remote defect indication bit set.</li> <li>• <b>RDI sent</b>—Number of OAM F4 cells sent with the RDI bit set.</li> <li>• <b>AIS received</b>—Number of OAM F4 cells received with the alarm indication signal bit set.</li> <li>• <b>AIS sent</b>—Number of OAM F4 cells sent with the AIS bit set.</li> </ul> </li> <li>• <b>Traffic statistics</b>—Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> </li> </ul>	All levels
IMA group properties	<ul style="list-style-type: none"> <li>• <b>Version</b>—The specified IMA specification version, either IMA 1.0 or IMA 1.1.</li> <li>• <b>Frame length</b>—The specified frame size, which can be 32, 64, 128, or 256.</li> <li>• <b>Differential delay</b>—Maximum differential delay among links in milliseconds.</li> <li>• <b>Symmetry</b>—Either Common Transmit Clock or Independent Transmit Clock timing mode.</li> <li>• <b>Transmit clock</b>—The specified IMA clock mode, either common or independent.</li> <li>• <b>Minimum links</b>—The number of minimum active links specified in both transmit and receive directions. <ul style="list-style-type: none"> <li>• <b>Transmit</b>—The per-PIC limit on the number of minimum active links in the transmit direction.</li> <li>• <b>Receive</b>—The per-PIC limit on the number of minimum active links in the receive direction.</li> </ul> </li> <li>• <b>Frame synchronization</b>—The specified IMA frame synchronization state transition variables (Alpha, Beta, and Gamma) and their specified values. <ul style="list-style-type: none"> <li>• <b>Alpha</b>—The number of consecutive invalid ICP cells for IFSM.</li> <li>• <b>Beta</b>—The number of consecutive errored ICP cells for IFSM.</li> <li>• <b>Gamma</b>—The number of consecutive valid ICP cells for IFSM.</li> </ul> </li> <li>• <b>Links</b>—The number of IMA links assigned to the IMA group.</li> </ul>	detail extensive none

Table 59: ATM show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
IMA group alarms	<ul style="list-style-type: none"> <li>• <b>Start-up-FE</b>—Far-end group alarm status</li> <li>• <b>Config-Aborted</b>—Near-end configuration aborted group alarm status</li> <li>• <b>Config-Aborted-FE</b>—Far-end configuration aborted group alarm status</li> <li>• <b>Insufficient-Links</b>—Near-end insufficient links group alarm status</li> <li>• <b>Insufficient-Links-FE</b>—Far-end insufficient links group alarm status</li> <li>• <b>Blocked-FE</b>—Far-end blocked group alarm status</li> <li>• <b>GR-Timing-Mismatch</b>—Group timing mismatch alarm status</li> </ul>	detail extensive none
IMA group defects	<ul style="list-style-type: none"> <li>• <b>Start-up-FE</b>—Far-end group defect status</li> <li>• <b>Config-Aborted</b>—Near-end configuration aborted group defect status</li> <li>• <b>Config-Aborted-FE</b>—Far-end configuration aborted group defect status</li> <li>• <b>Insufficient-Links</b>—Near-end insufficient links group defect status</li> <li>• <b>Insufficient-Links-FE</b>—Far-end insufficient links group defect status</li> <li>• <b>Blocked-FE</b>—Far-end blocked group defect status</li> <li>• <b>GR-Timing-Mismatch</b>—Group timing mismatch defect status</li> </ul>	detail extensive none
IMA Group state	Near-end and far-end group status	detail extensive none
IMA group media	<p>IMA group media status, including seconds, count and state for the following media parameters:</p> <ul style="list-style-type: none"> <li>• FC</li> <li>• FC-FE</li> <li>• Addr-Mismatch</li> <li>• Running</li> <li>• UAS</li> </ul>	detail extensive none

## Sample Output

### show interfaces (ATM, IMA Group)

```

user@host> show interfaces at-1/0/0
Physical interface: at-1/0/0, Enabled, Physical link is Up
  IMA group properties:
    Version           : 1.1
    Frame length      : 128
    Differential delay : 25 milliseconds
    Symmetry          : Symmetrical Configuration and Operation
    Transmit clock     : Common
    Minimum links     : Transmit: 1, Receive: 1
    Frame synchronization: Alpha: 2, Beta: 2, Gamma: 1
    Links              : None
  IMA group alarms   : Start-up-FE Config-Aborted Config-Aborted-FE
  Insufficient-Links Insufficient-Links-FE Blocked-FE GR-Timing-Mismatch
  IMA group defects  : Start-up-FE Config-Aborted Config-Aborted-FE
  Insufficient-Links Insufficient-Links-FE Blocked-FE GR-Timing-Mismatch
  IMA Group state:
    Near end : Start up
    Far end  : Start up

```

IMA group media:	Seconds	Count	State
FC		0	
FC-FE		0	
Addr-Mismatch		0	
Running	0		
UAS	0		

### show interfaces extensive (ATM IMA Group)

```

user@host> show interfaces at-0/0/10 extensive
Physical interface: at-0/0/10, Enabled, Physical link is Up
  Interface index: 178, SNMP ifIndex: 540, Generation: 531
  Link-level type: ATM-PVC, MTU: 2048, Speed: Unspecified, Loopback: None, Payload
  scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 8 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:0a
  Last flapped   : 2012-03-16 16:49:15 PDT (2d 07:12 ago)
  Statistics last cleared: 2012-03-16 16:56:58 PDT (2d 07:05 ago)
  Traffic statistics:
    Input bytes   : 0                      0 bps
    Output bytes  : 0                      0 bps
    Input packets : 0                      0 pps
    Output packets: 0                      0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards:
0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors:
0, Resource errors: 0
  IMA group properties:
    Version           : 1.1
    Frame length      : 128
    Differential delay : 25 milliseconds
    Symmetry          : Symmetrical Configuration and Operation
    Transmit clock     : Common
    Minimum links      : Transmit: 1, Receive: 1
    Frame synchronization: Alpha: 2, Beta: 2, Gamma: 1
    Link #1           : t1-0/0/4          up
  IMA Group alarms   : None
  IMA Group defects  : None

  IMA Group state:
    Near end : Operational
    Far end  : Operational
  IMA group media:
    Seconds      Count  State
    FC           0
    FC-FE        0
    Addr-Mismatch 0
    Running      198306
    UAS          0
  ATM status:
    HCS state:    Sync

```

```

LOC      :      OK
ATM Statistics:
  Uncorrectable HCS errors: 0, Correctable HCS errors: 0, Tx cell FIFO overruns:
0, Rx cell FIFO overruns: 0,
  Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0, Output
idle cell count: 0,
  Output VC queue drops: 0, Input no buffers: 0, Input length errors: 0, Input
timeouts: 0, Input invalid VCs: 0,
  Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
  Destination slot: 0
  VPI 2
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes      :              0
    Output bytes     :              0
    Input packets    :              0
    Output packets   :              0

Logical interface at-0/0/10.602 (Index 71) (SNMP ifIndex 1057) (Generation
17226)
  Flags: Point-To-Point SNMP-Traps CCC-Down 0x0 Encapsulation:
ATM-CCC-Cell-Relay
  L2 circuit cell bundle size: 1, bundle timeout: 125 usec, timeout count: 0
  L2 circuit out-of-sequence count: 0, denied packets count: 0

```

### show interfaces (ATM1, SONET Mode)

```

user@host> show interfaces at-1/0/0
Physical interface: at-1/0/0, Enabled, Physical link is Up
  Interface index: 300, SNMP ifIndex: 194
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:fe
  Last flapped   : 2006-02-24 14:28:12 PST (6d 01:51 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  SONET alarms   : None
  SONET defects  : None

Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204)
  Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 192.168.220.24/30, Local: 192.168.220.26,
      Broadcast: 192.168.220.27
  Protocol iso, MTU: 4470
    Flags: None
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    Input packets : 0
    Output packets: 0

```

**show interfaces brief (ATM1, SONET Mode)**

```
user@host> show interfaces at-1/0/0 brief
Physical interface: at-1/0/0, Enabled, Physical link is Up
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None

Logical interface at-1/0/0.0
  Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
  inet 192.168.220.26/30
  iso
  VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
```

**show interfaces detail (ATM1, SONET Mode)**

```
user@host> show interfaces at-1/0/0 detail
Physical interface: at-1/0/0, Enabled, Physical link is Up
  Interface index: 300, SNMP ifIndex: 194, Generation: 183
  Description: to allspice at-1/0/0
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:fe
  Last flapped   : 2006-02-24 14:28:12 PST (6d 01:55 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0                               0 bps
    Output bytes  : 0                               0 bps
    Input packets : 0                               0 pps
    Output packets: 0                               0 pps
  Egress queues: 4 supported, 4 in use
  Queue counters:


|                | Queued packets | Transmitted packets | Dropped packets |
|----------------|----------------|---------------------|-----------------|
| 0 best-effort  | 0              | 0                   | 0               |
| 1 expedited-fo | 0              | 0                   | 0               |
| 2 assured-forw | 0              | 0                   | 0               |
| 3 network-cont | 0              | 0                   | 0               |


  SONET alarms   : None
  SONET defects  : None

Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204) (Generation 5)
  Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
  Traffic statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Local statistics:
```

```

Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 13, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.220.24/30, Local: 192.168.220.26,
Broadcast: 192.168.220.27, Generation: 14
Protocol iso, MTU: 4470, Generation: 14, Route table: 0
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

#### show interfaces extensive (ATM1, SONET Mode)

```

user@host> show interfaces at-1/0/0 extensive
Physical interface: at-1/0/0, Enabled, Physical link is Up
Interface index: 300, SNMP ifIndex: 194, Generation: 183
Description: to allspice at-1/0/0
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags : Present Running
Link flags : None
CoS queues : 4 supported, 4 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:fe
Last flapped : 2006-02-24 14:28:12 PST (6d 01:56 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Input errors:
Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

Resource errors: 0
Egress queues: 4 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 0 0

```

```

1 expedited-fo          0          0          0
2 assured-forw          0          0          0
3 network-cont          0          0          0

SONET alarms   : None
SONET defects  : None
SONET PHY:
Seconds      Count  State
  PLL Lock      0      0 OK
  PHY Light      0      0 OK
SONET section:
BIP-B1          0      0
SEF              0      0 OK
LOS              0      0 OK
LOF              0      0 OK
ES-S             0
SES-S            0
SEFS-S           0
SONET line:
BIP-B2          0      0
REI-L           0      0
RDI-L           0      0 OK
AIS-L           0      0 OK
BERR-SF         0      0 OK
BERR-SD         0      0 OK
ES-L            0
SES-L           0
UAS-L           0
ES-LFE          0
SES-LFE         0
UAS-LFE         0
SONET path:
BIP-B3          0      0
REI-P           0      0
LOP-P           0      0 OK
AIS-P           0      0 OK
RDI-P           0      0 OK
UNEQ-P          1      1 OK
PLM-P           0      0 OK
ES-P            1
SES-P           1
UAS-P           0
ES-PFE         0
SES-PFE        0
UAS-PFE        0
Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, C2(cmp) : 0x13, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
ATM status:
HCS state:   Sync
LOC         :    OK
ATM Statistics:
Uncorrectable HCS errors: 0, Correctable HCS errors: 0,
Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,

```

```

Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,
Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %      bps      %      usec
0 best-effort      95      147744000      95      0      low      none
3 network-control  5       7776000      5       0      low      none

Logical interface at-1/0/0.0 (Index 64) (SNMP ifIndex 204) (Generation 5)
Flags: Point-To-Point SNMP-Traps Encapsulation: ATM-SNAP
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 13, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.220.24/30, Local: 192.168.220.26,
    Broadcast: 192.168.220.27, Generation: 14
Protocol iso, MTU: 4470, Generation: 14, Route table: 0
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0

```

### show interfaces (ATM2, SDH Mode)

```

user@host> show interfaces at-0/2/1
Physical interface: at-0/2/1, Enabled, Physical link is Up
Interface index: 154, SNMP ifIndex: 42
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

Loopback: None, Payload scrambler: Enabled
Device flags : Present Running
Link flags : None
CoS queues : 4 supported, 4 maximum usable queues
Current address: 00:00:5e:00:53:3f
Last flapped : 2006-03-24 13:29:58 PST (00:04:48 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)

```

```
SDH  alarms   : None
SDH  defects   : None
VPI 0
  Flags: Active
  Total down time: 0 sec, Last down: Never
Traffic statistics:
  Input  packets:          0
  Output packets:          0

Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.12.6, Local: 10.0.12.5
  Protocol iso, MTU: 4470
    Flags: None
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 0
    Input packets : 0
    Output packets: 0

Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50)
  Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Input packets : 0
  Output packets: 0
  VCI 0.4
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 0, Transmit weight cells: 0
    Input packets : 0
    Output packets: 0
```

#### show interfaces brief (ATM2, SDH Mode)

```
user@host> show interfaces at-0/2/1 brief
Physical interface: at-0/2/1, Enabled, Physical link is Up
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
Logical interface at-0/2/1.0
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
  inet 10.0.12.5      --> 10.0.12.6
  iso
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 0

Logical interface at-0/2/1.32767
  Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  VCI 0.4
    Flags: Active
```

Total down time: 0 sec, Last down: Never  
 EPD threshold: 0, Transmit weight cells: 0

### show interfaces detail (ATM2, SDH Mode)

```

user@host> show interfaces at-0/2/1 detail
Physical interface: at-0/2/1, Enabled, Physical link is Up
  Interface index: 154, SNMP ifIndex: 42, Generation: 40
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

  Loopback: None, Payload scrambler: Enabled
  Device flags   : Present Running
  Link flags     : None
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:3f
  Last flapped   : 2006-03-24 13:29:58 PST (00:05:10 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  Egress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort    0                  0                  0
    1 expedited-fo   0                  0                  0
    2 assured-forw   0                  0                  0
    3 network-cont   0                  0                  0

  SDH  alarms   : None
  SDH  defects  : None
  VPI 0
    Flags: Active
    Total down time: 0 sec, Last down: Never
    Traffic statistics:
      Input bytes   :                0
      Output bytes  :                0
      Input packets :                0
      Output packets:                0

  Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51) (Generation 25)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
  Traffic statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Local statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Transit statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps

```

```

Output packets:                                0                0 pps
Protocol inet, MTU: 4470, Generation: 62, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.6, Local: 10.0.12.5, Broadcast: Unspecified,
    Generation: 58
Protocol iso, MTU: 4470, Generation: 63, Route table: 0
  Flags: None
VCI 0.128
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes :                                0
    Output bytes :                               0
    Input packets:                               0
    Output packets:                              0
Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50) (Generation 26)
  Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Traffic statistics:
    Input bytes :                                0
    Output bytes :                               0
    Input packets:                               0
    Output packets:                              0
  Local statistics:
    Input bytes :                                0
    Output bytes :                               0
    Input packets:                               0
    Output packets:                              0
VCI 0.4
  Flags: Active
  Total down time: 0 sec, Last down: Never
  EPD threshold: 0, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes :                                0
    Output bytes :                               0
    Input packets:                               0
    Output packets:                              0

```

### show interfaces extensive (ATM2, SDH Mode)

```

user@host> show interfaces at-0/2/1 extensive
Physical interface: at-0/2/1, Enabled, Physical link is Up
  Interface index: 154, SNMP ifIndex: 42, Generation: 40
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SDH mode, Speed: OC3,

  Loopback: None, Payload scrambler: Enabled
  Device flags : Present Running
  Link flags : None
  CoS queues : 4 supported, 4 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:3f
  Last flapped : 2006-03-24 13:29:58 PST (00:06:49 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :                                0                0 bps

```

```

Output bytes :                0                0 bps
Input packets:                0                0 pps
Output packets:               0                0 pps
Input errors:
  Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

  Resource errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort              0              0              0

  1 expedited-fo             0              0              0

  2 assured-forw             0              0              0

  3 network-cont             0              0              0

SDH  alarms   : None
SDH  defects  : None
SDH PHY:      Seconds      Count  State
  PLL Lock    0            0  OK
  PHY Light   1            1  OK
SDH regenerator section:
  RS-BIP8     2            8828
  OOF         2            2  OK
  LOS         2            1  OK
  LOF         2            1  OK
  RS-ES       4
  RS-SES      3
  RS-SEFS     2
SDH multiplex section:
  MS-BIP24    2            771
  MS-FEBE     1            17476
  MS-FERF     2            1  OK
  MS-AIS      2            1  OK
  BERR-SF     0            0  OK
  BERR-SD     0            0  OK
  MS-ES       4
  MS-SES      2
  MS-UAS      0
  MS-ES-FE    3
  MS-SES-FE   2
  MS-UAS-FE   0
SDH path:
  HP-BIP8     1            6
  HP-FEBE     1            251
  HP-LOP      0            0  OK
  HP-AIS      2            1  OK
  HP-FERF     3            2  OK
  HP-UNEQ     1            1  OK
  HP-PLM      2            1  OK
  HP-ES       4
  HP-SES      3
  HP-UAS      0
  HP-ES-FE    3

```

```

HP-SES-FE                      3
HP-UAS-FE                      0
Received SDH overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, C2(cmp) : 0x13, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SDH overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x13, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
ATM status:
HCS state:      Sync
LOC      :      OK
ATM Statistics:
Uncorrectable HCS errors: 0, Correctable HCS errors: 0,
Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,
Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,
Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
Destination slot: 0
VPI 0
Flags: Active
Total down time: 0 sec, Last down: Never
Traffic statistics:
Input bytes      :      0
Output bytes     :      0
Input packets    :      0
Output packets   :      0

Logical interface at-0/2/1.0 (Index 75) (SNMP ifIndex 51) (Generation 25)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: ATM-SNAP
Traffic statistics:
Input bytes      :      0
Output bytes     :      0
Input packets    :      0
Output packets   :      0
Local statistics:
Input bytes      :      0
Output bytes     :      0
Input packets    :      0
Output packets   :      0
Transit statistics:
Input bytes      :      0      0 bps
Output bytes     :      0      0 bps
Input packets    :      0      0 pps
Output packets   :      0      0 pps
Protocol inet, MTU: 4470, Generation: 62, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.0.12.6, Local: 10.0.12.5, Broadcast: Unspecified,
Generation: 58
Protocol iso, MTU: 4470, Generation: 63, Route table: 0
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 0
ATM per-VC transmit statistics:
Tail queue packet drops: 0

```

```

Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Logical interface at-0/2/1.32767 (Index 76) (SNMP ifIndex 50) (Generation 26)
Flags: Point-To-Multipoint No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
VCI 0.4
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 0, Transmit weight cells: 0
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0

```

### show interfaces (ATM2, SONET Mode)

```

user@host> show interfaces at-0/3/1
Physical interface: at-0/3/1, Enabled, Physical link is Up
Interface index: 139, SNMP ifIndex: 67
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags : Present Running
Link flags : None
CoS queues : 4 supported, 4 maximum usable queues
Current address: 00:00:5e:00:53:5e
Last flapped : 2006-03-13 17:46:36 PST (16:01:12 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
SONET alarms : None
SONET defects : None
VPI 0
Flags: Active, OAM, Shaping
CBR, Peak: 50kbps
OAM, Period 30 sec, Up count: 10, Down count: 10
Total down time: 0 sec, Last down: Never
OAM F4 cell statistics:
Total received: 4, Total sent: 4
Loopback received: 4, Loopback sent: 4
RDI received: 0, RDI sent: 0
AIS received: 0
Traffic statistics:
  Input packets: 4
  Output packets: 30
VPI 10
Flags: Active

```

```

    Total down time: 0 sec, Last down: Never
Traffic statistics:
    Input  packets:          0
    Output packets:          0
Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77)
  Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
  Encapsulation: ATM-SNAP
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.59.5, Local: 10.0.59.6
  Protocol iso, MTU: 4470
    Flags: None
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 10
      Input packets : 0
      Output packets: 0

Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76)
  Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
  Encapsulation: ATM-VCMUX
  Input packets : 4
  Output packets: 30
  VCI 0.16
    Flags: Active, ILMI
    Total down time: 0 sec, Last down: Never
    EPD threshold: 0, Transmit weight cells: 0
      Input packets : 0
      Output packets: 26
  VCI 0.4
    Flags: Active, OAM
    OAM, Period 30 sec, Up count: 10, Down count: 10
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 0
      Input packets : 4
      Output packets: 4
    OAM F4 cell statistics:
      Total received: 4, Total sent: 4
      Loopback received: 4, Loopback sent: 4
      RDI received: 0, RDI sent: 0
      AIS received: 0, AIS sent: 0

```

#### show interfaces brief (ATM2, SONET Mode)

```

user@host> show interfaces at-0/3/1 brief
Physical interface: at-0/3/1, Enabled, Physical link is Up
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None

Logical interface at-0/3/1.0
  Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
  Encapsulation: ATM-SNAP
  inet 10.0.59.6      --> 10.0.59.5
  iso
  VCI 0.128

```

```

Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 10

```

#### Logical interface at-0/3/1.32767

```

Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX

```

##### VCI 0.16

```

Flags: Active, ILMI
Total down time: 0 sec, Last down: Never
EPD threshold: 0, Transmit weight cells: 0

```

##### VCI 0.4

```

Flags: Active, OAM
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 0

```

### show interfaces detail (ATM2, SONET Mode)

```
user@host> show interfaces at-0/3/1 detail
```

```

Physical interface: at-0/3/1, Enabled, Physical link is Up
Interface index: 139, SNMP ifIndex: 67, Generation: 22
Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, Payload scrambler: Enabled
Device flags   : Present Running
Link flags     : None
CoS queues     : 4 supported, 4 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:5e
Last flapped   : 2006-03-13 17:46:36 PST (16:02:39 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          312          0 bps
Output bytes  :         2952          0 bps
Input packets :           6          0 pps
Output packets:          50          0 pps
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets

  0 best-effort          44             44              0
  1 expedited-fo         0              0              0
  2 assured-forw         0              0              0
  3 network-cont         6              6              0

SONET alarms   : None
SONET defects  : None
VPI 0
Flags: Active, OAM, Shaping
CBR, Peak: 50kbps
OAM, Period 30 sec, Up count: 10, Down count: 10
Total down time: 0 sec, Last down: Never
OAM F4 cell statistics:
Total received: 6, Total sent: 6
Loopback received: 6, Loopback sent: 6
Last received: 00:00:29, Last sent: 00:00:29
RDI received: 0, RDI sent: 0
AIS received: 0
Traffic statistics:
Input bytes   :          312

```

```

        Output bytes :          2952
        Input  packets:           6
        Output packets:         50
VPI 10
Flags: Active
Total down time: 0 sec, Last down: Never
Traffic statistics:
    Input bytes :              0
    Output bytes :              0
    Input  packets:            0
    Output packets:            0
Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77) (Generation 20)
Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
Encapsulation: ATM-SNAP
Traffic statistics:
    Input bytes :              0
    Output bytes :              0
    Input  packets:            0
    Output packets:            0
Local statistics:
    Input bytes :              0
    Output bytes :              0
    Input  packets:            0
    Output packets:            0
Transit statistics:
    Input bytes :              0          0 bps
    Output bytes :              0          0 bps
    Input  packets:            0          0 pps
    Output packets:            0          0 pps
Protocol inet, MTU: 4470, Generation: 38, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.59.5, Local: 10.0.59.6, Broadcast: Unspecified,
    Generation: 44
Protocol iso, MTU: 4470, Generation: 39, Route table: 0
Flags: None
VCI 0.128
Flags: Active
Total down time: 0 sec, Last down: Never
EPD threshold: 2129, Transmit weight cells: 10
ATM per-VC transmit statistics:
Tail queue packet drops: 0
Traffic statistics:
    Input bytes :              0
    Output bytes :              0
    Input  packets:            0
    Output packets:            0
Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76) (Generation 21)
Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000
Encapsulation: ATM-VCMUX
Traffic statistics:
    Input bytes :              360
    Output bytes :             3302
    Input  packets:            6
    Output packets:            50
Local statistics:
    Input bytes :              360
    Output bytes :             3302
    Input  packets:            6
    Output packets:            50

```

```

VCI 0.16
  Flags: Active, ILMI
  Total down time: 0 sec, Last down: Never
  EPD threshold: 0, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes :           0
    Output bytes :          2640
    Input packets:           0
    Output packets:          44
VCI 0.4
  Flags: Active, OAM
  OAM, Period 30 sec, Up count: 10, Down count: 10
  Total down time: 0 sec, Last down: Never
  EPD threshold: 2129, Transmit weight cells: 0
  ATM per-VC transmit statistics:
    Tail queue packet drops: 0
  Traffic statistics:
    Input bytes :           312
    Output bytes :          312
    Input packets:           6
    Output packets:          6
  OAM F4 cell statistics:
    Total received: 6, Total sent: 6
    Loopback received: 6, Loopback sent: 6
    Last received: 00:00:29, Last sent: 00:00:29
    RDI received: 0, RDI sent: 0
    AIS received: 0, AIS sent: 0

```

#### show interfaces extensive (ATM2, SONET Mode)

```

user@host> show interfaces at-0/3/1 extensive
Physical interface: at-0/3/1, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 67, Generation: 22
  Link-level type: ATM-PVC, MTU: 4482, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Payload scrambler: Enabled
  Device flags : Present Running
  Link flags : None
  CoS queues : 4 supported, 4 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:5e
  Last flapped : 2006-03-13 17:46:36 PST (16:04:12 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :           520           0 bps
    Output bytes :          4240           0 bps
    Input packets:           10           0 pps
    Output packets:           72           0 pps
  Input errors:
    Errors: 0, Drops: 0, Invalid VCs: 0, Framing errors: 0, Policed discards: 0,

    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

    Resource errors: 0
  Egress queues: 4 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

```

0 best-effort	62	62	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	10	10	0

SONET alarms : None  
SONET defects : None

SONET PHY:	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	0	0	OK

SONET section:

BIP-B1	0	0	
SEF	0	0	OK
LOS	0	0	OK
LOF	0	0	OK
ES-S	0		
SES-S	0		
SEFS-S	0		

SONET line:

BIP-B2	0	0	
REI-L	0	0	
RDI-L	0	0	OK
AIS-L	0	0	OK
BERR-SF	0	0	OK
BERR-SD	0	0	OK
ES-L	0		
SES-L	0		
UAS-L	0		
ES-LFE	0		
SES-LFE	0		
UAS-LFE	0		

SONET path:

BIP-B3	0	0	
REI-P	0	0	
LOP-P	0	0	OK
AIS-P	0	0	OK
RDI-P	0	0	OK
UNEQ-P	1	1	OK
PLM-P	0	0	OK
ES-P	1		
SES-P	1		
UAS-P	0		
ES-PFE	0		
SES-PFE	0		
UAS-PFE	0		

Received SONET overhead:

F1	: 0x00, J0	: 0x00, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0x13, C2(cmp)	: 0x13, F2	: 0x00
Z3	: 0x00, Z4	: 0x00, S1(cmp)	: 0x00	

Transmitted SONET overhead:

F1	: 0x00, J0	: 0x01, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0x13, F2	: 0x00, Z3	: 0x00
Z4	: 0x00			

ATM status:

HCS state:	Sync
LOC	: OK

ATM Statistics:

Uncorrectable HCS errors: 0, Correctable HCS errors: 0,

```

Tx cell FIFO overruns: 0, Rx cell FIFO overruns: 0,
Rx cell FIFO underruns: 0, Input cell count: 0, Output cell count: 0,
Output idle cell count: 0, Output VC queue drops: 0, Input no buffers: 0,
Input length errors: 0, Input timeouts: 0, Input invalid VCs: 0,
Input bad CRCs: 0, Input OAM cell no buffers: 0
Packet Forwarding Engine configuration:
Destination slot: 0
VPI 0
  Flags: Active, OAM, Shaping
  CBR, Peak: 50kbps
  OAM, Period 30 sec, Up count: 10, Down count: 10
  Total down time: 0 sec, Last down: Never
  OAM F4 cell statistics:
  Total received: 10, Total sent: 10
  Loopback received: 10, Loopback sent: 10
  Last received: 00:00:02, Last sent: 00:00:02
  RDI received: 0, RDI sent: 0
  AIS received: 0
  Traffic statistics:
    Input bytes :           520
    Output bytes :          4240
    Input packets:           10
    Output packets:          72
VPI 10
  Flags: Active
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:          0
Logical interface at-0/3/1.0 (Index 78) (SNMP ifIndex 77) (Generation 20)
  Flags: Point-To-Point Copy-PLP-To-CLP SNMP-Traps 0x4000
  Encapsulation: ATM-SNAP
  Traffic statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:          0
  Local statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:           0
    Output packets:          0
  Transit statistics:
    Input bytes :           0                0 bps
    Output bytes :           0                0 bps
    Input packets:           0                0 pps
    Output packets:          0                0 pps
  Protocol inet, MTU: 4470, Generation: 38, Route table: 0
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.59.5, Local: 10.0.59.6, Broadcast: Unspecified,
      Generation: 44
  Protocol iso, MTU: 4470, Generation: 39, Route table: 0
    Flags: None
  VCI 0.128
    Flags: Active
    Total down time: 0 sec, Last down: Never
    EPD threshold: 2129, Transmit weight cells: 10

```

## ATM per-VC transmit statistics:

Tail queue packet drops: 0

## Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0

Logical interface at-0/3/1.32767 (Index 79) (SNMP ifIndex 76) (Generation 21)

Flags: Point-To-Multipoint Copy-PLP-To-CLP No-Multicast SNMP-Traps 0x4000

Encapsulation: ATM-VCMUX

## Traffic statistics:

Input bytes :	660
Output bytes :	5473
Input packets:	11
Output packets:	83

## Local statistics:

Input bytes :	660
Output bytes :	5473
Input packets:	11
Output packets:	83

## VCI 0.16

Flags: Active, ILMI

Total down time: 0 sec, Last down: Never

EPD threshold: 0, Transmit weight cells: 0

## ATM per-VC transmit statistics:

Tail queue packet drops: 0

## Traffic statistics:

Input bytes :	0
Output bytes :	4320
Input packets:	0
Output packets:	72

## VCI 0.4

Flags: Active, OAM

OAM, Period 30 sec, Up count: 10, Down count: 10

Total down time: 0 sec, Last down: Never

EPD threshold: 2129, Transmit weight cells: 0

## ATM per-VC transmit statistics:

Tail queue packet drops: 0

## Traffic statistics:

Input bytes :	572
Output bytes :	572
Input packets:	11
Output packets:	11

## OAM F4 cell statistics:

Total received: 11, Total sent: 11

Loopback received: 11, Loopback sent: 11

Last received: 00:00:18, Last sent: 00:00:18

RDI received: 0, RDI sent: 0

AIS received: 0, AIS sent: 0

## show interfaces (Channelized DS3-to-DS0)

**Syntax** `show interfaces ds-fpc/pic/port:t1channel:ds0channel`  
`<brief | detail | extensive>`  
`<descriptions>`  
`<media>`  
`<snmp-index snmp-index>`  
`<statistics>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** (M Series and T Series routers only) Display status information about the specified channelized DS3-to-DS0 interface.

**Options** `ds-fpc/pic/port:t1channel:ds0channel`—Display standard information about the specified channelized DS3-to-DS0 interface.

**brief | detail | extensive**—(Optional) Display the specified level of output interface.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index snmp-index**—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

**Required Privilege Level** view

**List of Sample Output** [show interfaces extensive \(Channelized DS3-to-DS0\) on page 1245](#)

**Output Fields** [Table 60 on page 1237](#) lists the output fields for the **show interfaces** (all Channelized DS3 interfaces) command. Output fields are listed in the approximate order in which they appear.

*Table 60: Channelized DS3 show interfaces Output Fields*

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive</b> none

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source. It can be <b>Internal</b> or <b>External</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16</b> bits.	All levels
<b>Mode</b>	Whether C-bit parity mode or M13 mode is enabled.	All levels
<b>Framing</b>	Physical layer framing format used on the link. It can be <b>ESF</b> or <b>SF</b> . The default is <b>ESF</b> .	All levels
<b>Parent</b>	(Channelized IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. <b>None</b> indicates that this interface is the top level.	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the "Link Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Keepalive settings</b>	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> <li><b>interval seconds</b>—The time in seconds between successive keepalive requests. The range is <b>10</b> seconds through <b>32,767</b> seconds, with a default of <b>10</b> seconds.</li> <li><b>down-count number</b>—The number of keepalive packets that a destination must fail to receive before the network takes a link down. The range is <b>1</b> through <b>255</b>, with a default of <b>3</b>.</li> <li><b>up-count number</b>—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is <b>1</b> through <b>255</b>, with a default of <b>1</b>.</li> </ul>	<b>detail extensive none</b>

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li><b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>.</li> </ul> </li> <li><b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li><b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>.</li> </ul> </li> </ul>	detail extensive none
LMI settings	<p>(Frame Relay) Settings for Local Management Interface (LMI) can be either <b>ANSI LMI settings</b> or <b>ITU LMI settings</b>. ANSI LMI settings is the default. The format is (ANSI or ITU) <b>LMI settings: value, value, value...xx</b> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> <li><b>n391dte</b>—DTE full status polling interval (1–255)</li> <li><b>n392dce</b>—DCE error threshold (1–10)</li> <li><b>n392dte</b>—DTE error threshold (1–10)</li> <li><b>n393dce</b>—DCE monitored event count (1–10)</li> <li><b>n393dte</b>—DTE monitored event count (1–10)</li> <li><b>t391dte</b>—DTE polling timer (5–30 seconds)</li> <li><b>t392dce</b>—DCE polling verification timer (5–30 seconds)</li> </ul>	detail extensive none
LMI	<p>(Frame Relay) LMI packet statistics:</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: nn (last seen hh:mm:ss ago)</b>.</li> <li><b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: nn (last seen hh:mm:ss ago)</b>.</li> </ul>	detail extensive none
LCP state	<p>(PPP) Link Control Protocol state.</p> <ul style="list-style-type: none"> <li><b>Conf-ack-received</b>—Acknowledgement was received.</li> <li><b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li><b>Conf-req-sent</b>—Request was sent.</li> <li><b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li><b>Not-configured</b>—LCP is not configured on the interface.</li> <li><b>Opened</b>—LCP negotiation is successful.</li> </ul>	detail extensive none
NCP state	<p>(PPP) Network Control Protocol state.</p> <ul style="list-style-type: none"> <li><b>Conf-ack-received</b>—Acknowledgement was received.</li> <li><b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li><b>Conf-req-sent</b>—Request was sent.</li> <li><b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li><b>Not-configured</b>—NCP is not configured on the interface.</li> <li><b>Opened</b>—NCP negotiation is successful.</li> </ul>	detail extensive none

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CHAP state</b>	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> <li>• <b>Chap-Chal-received</b>—Challenge was received but response not yet sent.</li> <li>• <b>Chap-Chal-sent</b>—Challenge was sent.</li> <li>• <b>Chap-Resp-received</b>—Response was received for the challenge sent, but CHAP has not yet moved into the <b>Success</b> state. (Most likely with RADIUS authentication).</li> <li>• <b>Chap-Resp-sent</b>—Response was sent for the challenge received.</li> <li>• <b>Closed</b>—CHAP authentication is incomplete.</li> <li>• <b>Failure</b>—CHAP authentication failed.</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Success</b>—CHAP authentication was successful.</li> </ul>	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone hh:mm:ss ago</b> ). For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Counter increments when the software could not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Count of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>SRAM errors</b>—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value in this field increments, the PIC is malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Count of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul>	<b>extensive</b>
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly, (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> </ul>	<b>extensive</b>

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>DS1 alarms</b>	Media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm.	<b>detail extensive none</b>
<b>DS1 defects</b>	Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. <ul style="list-style-type: none"> <li>• <b>LOS</b>—Loss of signal.</li> <li>• <b>LOF</b>—Loss of frame.</li> <li>• <b>AIS</b>—Alarm indication signal.</li> <li>• <b>YLW</b>—Yellow alarm. Indicates errors at the remote site receiver.</li> </ul>	
<b>T1 media</b>	Counts of T1 media-specific errors. <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>The T1 media-specific error types can be:</p> <ul style="list-style-type: none"> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>BEE</b>—Bit error event</li> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>PCV</b>—Pulse code violation</li> <li>• <b>CS</b>—Carrier state</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>ES</b>—Errored seconds</li> <li>• <b>SEFS</b>—Severely errored framing seconds (section)</li> <li>• <b>SES</b>—Severely errored seconds</li> <li>• <b>BES</b>—Bit error seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> </ul>	<b>extensive</b>

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>DS3 media</b>	<p>Counts of T3 media-specific errors. For detailed definitions of the T3 (DS-3) error events (BPV, EXZ, LCV, PCV, and CCV) and performance parameters (LES, PES, PSES, CES, CSES, SEFS, and UAS), see RFC 2496.</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop out of lock</li> <li>• <b>Reframing</b>—Frame alignment recovery time</li> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>IDLE</b>—Idle code detected</li> <li>• <b>YELLOW</b>—Remote defect indication</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>PCV</b>—Pulse code violation</li> <li>• <b>CCV</b>—C-bit coding violation</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>PES</b>—P-bit errored seconds</li> <li>• <b>PSES</b>—P-bit errored seconds (section)</li> <li>• <b>CES</b>—C-bit errored seconds</li> <li>• <b>CSES</b>—C-bit severely errored seconds</li> <li>• <b>SEFS</b>—Severely errored framing seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> </ul>	<b>extensive</b>
<b>HDLC configuration</b>	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> <li>• <b>Timeslots</b>—Configured time slots for the interface.</li> <li>• <b>Byte encoding</b>—Byte encoding used: <b>Nx64K</b> or <b>Nx56K</b>.</li> <li>• <b>Data inversion</b>—HDLC data inversion setting: <b>Enabled</b> or <b>Disabled</b></li> </ul>	<b>extensive</b>
<b>Interface transmit queues</b>	<p>Name of the transmit queues and their associated statistics for each DS1 channel on the Channelized DS3-to-DS1 PIC.</p> <ul style="list-style-type: none"> <li>• <b>B/W</b>—Queue bandwidth as a percentage of the total interface bandwidth.</li> <li>• <b>WRR</b>—Weighted round-robin (in percent).</li> <li>• <b>Packets</b>—Number of packets transmitted.</li> <li>• <b>Bytes</b>—Number of bytes transmitted.</li> <li>• <b>Drops</b>—Number of packets dropped.</li> <li>• <b>Errors</b>—Number of packet errors.</li> </ul>	<b>extensive</b>

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>DS1 or DS3 BERT configuration</b>	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>BERT time period</b>—Configured total time period that the BERT is to run.</li> <li>• <b>Elapsed</b>—Actual time elapsed since the start of the BERT (in seconds).</li> <li>• <b>Induced error rate</b>—Configured rate at which the bit errors are induced in the BERT pattern.</li> <li>• <b>Algorithm</b>—Type of algorithm selected for the BERT.</li> </ul>	<b>detail extensive none</b>
<b>Packet Forwarding Engine configuration</b>	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	<b>extensive</b>
<b>CoS information</b>	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface; values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Bandwidth</b>	Bandwidth configured on the interface.	All levels
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , <b>mpls</b> .	<b>detail extensive none</b>

Table 60: Channelized DS3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “Common Output Fields Description” on page 1114.	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under “Common Output Fields Description” on page 1114.	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive none
Redundant Link	(LSQ redundancy) Backup link for Link Services IQ redundancy.	detail extensive none

## Sample Output

### show interfaces extensive (Channelized DS3-to-DS0)

```

user@host> show interfaces ds-0/0/0:0:0 extensive
Physical interface: ds-0/0/0:0:0, Enabled, Physical link is Up
  Interface index: 174, SNMP ifIndex: 4298, Generation: 177
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps, FCS: 16,
  Mode: C/Bit parity, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 280 (last seen 00:00:09 ago)
    Output: 286 (last sent 00:00:00 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Not-configured
  Last flapped   : 2002-05-23 17:53:29 PDT (00:46:46 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          6814          16 bps
    Output bytes :         28840          72 bps

```

```

Input packets:          568          0 pps
Output packets:         893          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 39, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 2, L2 mismatch timeouts: 0,
  HS link CRC errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0
DS1  alarms   : None
DS3  alarms   : None
DS1  defects  : None
DS3  defects  : None
T1  media:
Seconds      Count  State
SEF          0       0 OK
BEE          5       1 OK
AIS          0       0 OK
LOF          0       0 OK
LOS          0       0 OK
YELLOW       17       1 OK
BPV          0       0
EXZ          0       0
LCV          5      27765
PCV          0       0
CS           0       0
LES          0
ES           0
SES          5
SEFS         10
BES          0
UAS          0
DS3 media:
Seconds      Count  State
PLL Lock     0       0 OK
Reframing    0       0 OK
AIS          0       0 OK
LOF          0       0 OK
LOS          0       0 OK
IDLE         0       0 OK
YELLOW       0       0 OK
BPV          1      65535
EXZ          1      65535
LCV          2     131070
PCV          1      1825
CCV          0       0
LES          1
PES          1
PSES         1
CES          0
CSES         0
SEFS         0
UAS          0
Interface transmit queues:
      B/W  WRR    Packets    Bytes    Drops    Errors
Queue0  95  95        0        0        0        0
Queue1   5   5       893     28840        0        0
HDLC configuration:
  Giant threshold: 1514, Runt threshold: 3
  Timeslots      : 1-10
  Byte encoding: Nx64K, Data inversion: Disabled
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, Induced error rate: 10e-0

```

```

DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 2 (0x01)
CoS information:      CoS transmit queue      Bandwidth      Buffer
Priority  Limit
              %      bps  %      usec
  0 best-effort      95      608000  95      0      low  none
  3 network-control   5      32000   5      0      low  none
Logical interface ds-0/0/0:0:0.0 (Index 5) (SNMP ifIndex 4299)
(Generation 943)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 1500, Generation: 949, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
    Generation: 1849

```

## show interfaces (Channelized DS3-to-DS1)

---

<b>Syntax</b>	<code>show interfaces t1-fpc/pic/port:t1channel</code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;descriptions&gt;</code> <code>&lt;media&gt;</code> <code>&lt;snmp-index <i>snmp-index</i>&gt;</code> <code>&lt;statistics&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display status information about the specified channelized DS3-to-DS1 interface.
<b>Options</b>	<p><b>t1-fpc/pic/port:t1channel</b>—Display standard information about the specified channelized DS3-to-DS1 interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display brief, detail, extensive, or terse information about the interface.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces extensive (channelized DS3-to-DS1) on page 1248</a>
<b>Output Fields</b>	See the output field table for the <a href="#">show interfaces (Channelized DS3-to-DS0) command</a> .

## Sample Output

### show interfaces extensive (channelized DS3-to-DS1)

```
user@host> show interfaces t1-0/0/0:0 extensive
Physical interface: t1-0/0/0:0, Enabled, Physical link is Up
  Interface index: 210, SNMP ifIndex: 14, Generation: 2977
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: None, FCS: 16, Mode: C/Bit parity, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 30 (last seen 00:00:05 ago)
```

```

Output: 29 (last sent 00:00:00 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Not-configured
Last flapped   : 2002-05-23 17:30:12 PDT (17:29:43 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          944          16 bps
Output bytes :         1162          16 bps
Input packets:           66           0 pps
Output packets:          82           0 pps
Input errors:
Errors: 1, Drops: 0, Framing errors: 1, Policed discards: 8,
L3 incompletes: 0, L2 channel errors: 1, L2 mismatch timeouts: 0,
HS link CRC errors: 0, SRAM errors: 0
Output errors:
Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0
DS1  alarms : None
DS3  alarms : None
DS1  defects : None
DS3  defects : None
T1 media:
Seconds      Count  State
SEF           0         0 OK
BEE          11         5 OK
AIS          28         1 OK
LOF          27         1 OK
LOS           0         0 OK
YELLOW       23         1 OK
BPV           0         0
EXZ           0         0
LCV          11       20574
PCV           0         0
CS            0         0
LES          28
ES            28
SES          39
SEFS         50
BES           0
UAS           0
DS3 media:
Seconds      Count  State
PLL Lock     0         0 OK
Reframing    0         0 OK
AIS           0         0 OK
LOF           1         1 OK
LOS           1         1 OK
IDLE          0         0 OK
YELLOW        0         0 OK
BPV           2       131070
EXZ           3        49910
LCV           5       180980
PCV           2         327
CCV          12       264558
LES           3
PES           3
PSES          2
CES          13
CES           13
SEFS           1
UAS           35
Interface transmit queues:

```

	B/W	WRR	Packets	Bytes	Drops	Errors
Queue0	95	95	0	0	0	0
Queue1	5	5	82	1162	0	0

HDLC configuration:  
 Giant threshold: 1514, Runt threshold: 3  
 Timeslots : 1-10  
 Line encoding: B8ZS, Byte encoding: Nx64K, Data inversion: Disabled  
 DS3 BERT configuration:  
 BERT time period: 10 seconds, Elapsed: 0 seconds  
 Algorithm: 2^15 - 1, Induced error rate: 10e-0  
 DS1 BERT configuration:  
 BERT time period: 10 seconds, Elapsed: 0 seconds  
 Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)  
 Packet Forwarding Engine configuration:  
 Destination slot: 0, PLP byte: 2 (0x00) CoS information:  

CoS transmit queue	Bandwidth	Buffer	Priority	Limit
	% bps %	usec		
0 best-effort	95 608000 95	0	low	none
3 network-control	5 32000 5	0	low	none

 Logical interface t1-0/0/0:0.0 (Index 11) (SNMP ifIndex 23) (Generation 497)  
 Flags: Point-To-Point SNMP-Traps Encapsulation: PPP  
 Bandwidth: 0  
 Protocol inet, MTU: 1500, Generation: 576, Route table: 0  
 Flags: None  
 Addresses, Flags: Is-Preferred Is-Primary  
 Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:  
 198.51.100.255,  
 Generation: 977

## show interfaces (Channelized E1 IQ)

<b>Syntax</b>	<pre>show interfaces (ce1-fpc/pic/port   type-fpc/pic/port&lt;:channel&gt;) &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display status information about the specified channelized E1 IQ interface.
<b>Options</b>	<p><b>type-fpc/pic/port:&lt;channel&gt;</b>—Interface type with optional corresponding channel levels. For the physical channelized E1 IQ interface, <b>type</b> is <b>ce</b>. For the clear channel, <b>type</b> is <b>e1</b>. At the first level of channelization, <b>type</b> is <b>ds</b>.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index snmp-index</b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show interfaces (Channelized E1 IQ) (Physical) on page 1251</a></p> <p><a href="#">show interfaces extensive (Channelized E1 IQ Multilink PPP Encapsulation) on page 1252</a></p> <p><a href="#">show interfaces extensive (Channelized E1 IQ MLFR Encapsulation) on page 1253</a></p> <p><a href="#">show interfaces detail (Clear Channel E1) on page 1254</a></p>
<b>Output Fields</b>	For information about output fields, see the output field table for the <a href="#">show interfaces (Channelized E1)</a> command. Output fields are listed in the approximate order in which they appear.

## Sample Output

### show interfaces (Channelized E1 IQ) (Physical)

```
user@host> show interfaces ce1-1/2/3
Physical interface: ce1-1/2/3, Enabled, Physical link is Up
  Interface index: 18, SNMP ifIndex: 1128
  Link-level type: Frame-relay, Controller, MTU: 1504, Clocking: Internal,  Speed:
  E1, Loopback: None, FCS: 16, Framing: G704, Parent: None
```

```

Device flags      : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags       : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 0
Nonmatching DCE-end DLCIs:
  2
Last flapped      : 2002-10-04 17:52:51 PDT (00:32:57 ago)
Input rate        : 0 bps (0 pps)
Output rate       : 0 bps (0 pps)
DS1 alarms       : None
DS1 defects      : None

```

#### show interfaces extensive (Channelized E1 IQ Multilink PPP Encapsulation)

```

user@host> show interfaces ds-0/3/4:1 extensive
Physical interface: ds-0/3/4:1, Enabled, Physical link is Up
Interface index: 151, SNMP ifIndex: 63, Generation: 34
Link-level type: Multilink-PPP, MTU: 1518, Clocking: Internal, Speed: 64kbps,
Loopback: None, FCS: 16,
Parent: ce1-0/3/4 Interface index 150
Device flags      : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags       : None
Hold-times        : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 0 (last seen: never)
  Output: 0 (last sent: never)
LCP state: Down
CHAP state: Closed
CoS queues       : 4 supported, 4 maximum usable queues
Last flapped     : Never
Statistics last cleared: 2005-12-21 10:32:15 PST (1w0d 03:10 ago)
Traffic statistics:
  Input bytes      : 0                      0 bps
  Output bytes     : 6070570                224 bps
  Input packets    : 0                      0 pps
  Output packets   : 209330                 0 pps
Input errors:
  Errors: 3, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
  Resource errors: 0

```

```

HDLC configuration:
  Giant threshold: 1528, Runt threshold: 2
  Timeslots      : 1
  Data inversion: Disabled, Idle cycle flag: flags, Start end flag: shared
DSO BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x00)

Logical interface ds-0/3/4:1.0 (Index 74) (SNMP ifIndex 64) (Generation 13)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol mlppp, Multilink bundle: ls-0/1/0.0, MTU: 1514, Generation: 24,
  Route table: 0

```

### show interfaces extensive (Channelized E1 IQ MLFR Encapsulation)

```

user@host> show interfaces ds-0/3/4:5 extensive
Physical interface: ds-0/3/4:5, Enabled, Physical link is Up
  Interface index: 155, SNMP ifIndex: 72, Generation: 38
  Link-level type: Multilink-FR, MTU: 1518, Clocking: Internal, Speed: 64kbps,
  Loopback: None, FCS: 16,
  Parent: ce1-0/3/4 Interface index 150
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : No-Keepalives DCE
  Hold-times    : Up 0 ms, Down 0 ms
  ANSI LMI settings: n392dce 3, n393dce 4, t392dce 15 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  DTE statistics:
    Enquiries sent           : 0
    Full enquiries sent      : 0
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timeout : 0
  CoS queues : 4 supported, 4 maximum usable queues
  Last flapped : 2005-12-21 09:59:01 PST (1w0d 03:44 ago)
  Statistics last cleared: 2005-12-21 10:32:15 PST (1w0d 03:10 ago)
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  Input errors:
    Errors: 3, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
    Resource errors: 0

```

```

HDLC configuration:
  Giant threshold: 1528, Runt threshold: 2
  Timeslots      : 5
  Data inversion: Disabled, Idle cycle flag: flags, Start end flag: shared
DSO BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x01)

Logical interface ds-0/3/4:5.0 (Index 78) (SNMP ifIndex 73) (Generation 17)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes   : 0 0 bps
  Output bytes  : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol mlfrr, Multilink bundle: ls-0/1/0.1, MTU: 1514, Generation: 28, Route
table: 0
  DLCI 10
    Flags: Active
    Total down time: 0 sec, Last down: Never
    Traffic statistics:
      Input bytes   : 0
      Output bytes  : 0
      Input packets: 0
      Output packets: 0
  DLCI statistics:
    Active DLCI :1 Inactive DLCI :0

```

#### show interfaces detail (Clear Channel E1)

```

user@host> show interfaces e1-1/2/6 detail
Physical interface: e1-1/2/6, Enabled, Physical link is Up
  Interface index: 89, SNMP ifIndex: 1278, Generation: 341
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: E1, Loopback:None,
...
  Logical interface e1-1/2/6.0 (Index 52) (SNMP ifIndex 1279) (Generation 169)
    Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
    Bandwidth: 0
...

```

## show interfaces (Channelized E1)

**Syntax** `show interfaces ds-fpc/pic/port:ds0channel`  
`<brief | detail | extensive | terse>`  
`<descriptions>`  
`<media>`  
`<snmp-index snmp-index>`  
`<statistics>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** (M Series and T Series routers only) Display status information the specified channelized E1 interface.

**Options** `ds-fpc/pic/port:ds0channel`—Display standard information about the specified channelized E1 interface.

`brief | detail | extensive | terse`—(Optional) Display the specified level of output.

`descriptions`—(Optional) Display interface description strings.

`media`—(Optional) Display media-specific information about network interfaces.

`snmp-index snmp-index`—(Optional) Display information for the specified SNMP index of the interface.

`statistics`—(Optional) Display static interface statistics.

**Required Privilege Level** view

**List of Sample Output** [show interfaces extensive \(Channelized E1\) on page 1264](#)

**Output Fields** [Table 61 on page 1255](#) lists the output fields for the **show interfaces** (Channelized E1 and Channelized E1 IQ) command. Output fields are listed in the approximate order in which they appear.

*Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields*

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	detail extensive none

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source: <b>Internal</b> or <b>External</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16</b> bits.	All levels
<b>Framing</b>	Physical layer framing format used on the link. It can be <b>G704</b> , <b>G704-NO-CRC4</b> , or <b>Unframed</b> . The default is <b>G704</b> .	All levels
<b>Parent</b>	(Channelized E1 IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. <b>None</b> indicates that this interface is the top level.	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the "Link Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Keepalive settings</b>	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> <li><b>Interval <i>seconds</i></b>—Time in seconds between successive keepalive requests. The range is <b>10</b> seconds through <b>32,767</b> seconds, with a default of <b>10</b> seconds.</li> <li><b>Down-count <i>number</i></b>—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is <b>1</b> through <b>255</b>, with a default of <b>3</b>.</li> <li><b>Up-count <i>number</i></b>—Number of keepalive packets a destination must receive to change a link's status from down to up. The range is <b>1</b> through <b>255</b>, with a default of <b>1</b>.</li> </ul>	<b>detail extensive none</b>

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li>(<b>last seen 00:00:00 ago</b>)—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>.</li> </ul> </li> <li><b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li>(<b>last seen 00:00:00 ago</b>)—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>.</li> </ul> </li> </ul>	detail extensive none
LMI settings	<p>(Frame Relay) Settings for link management can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is (<b>ANSI or ITU</b>) <b>LMI settings: value, value...xx</b> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> <li><b>n391dte</b>—DTE full status polling interval (1–255)</li> <li><b>n392dce</b>—DCE error threshold (1–10)</li> <li><b>n392dte</b>—DTE error threshold (1–10)</li> <li><b>n393dce</b>—DCE monitored event count (1–10)</li> <li><b>n393dte</b>—DTE monitored event count (1–10)</li> <li><b>t391dte</b>—DTE polling timer (5–30 seconds)</li> <li><b>t392dce</b>—DCE polling verification timer (5–30 seconds)</li> </ul>	detail extensive none
LMI	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: nn (last seen hh:mm:ss ago)</b></li> <li><b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: nn (last sent hh:mm:ss ago)</b>.</li> </ul>	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> <li><b>Enquiries sent</b>—Number of link status enquiries sent from the DTE to the DCE.</li> <li><b>Full enquiries sent</b>—Number of full enquiries sent from the DTE to the DCE.</li> <li><b>Enquiry responses received</b>—Number of enquiry responses received by the DTE from the DCE.</li> <li><b>Full enquiry responses received</b>—Number of full enquiry responses sent from the DTE to the DCE.</li> </ul>	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> <li><b>Enquiries received</b>—Number of enquiries received by the DCE from the DTE.</li> <li><b>Full enquiries received</b>—Number of full enquiries received by the DCE from the DTE.</li> <li><b>Enquiry responses sent</b>—Number of enquiry responses sent from the DCE to the DTE.</li> <li><b>Full enquiry responses sent</b>—Number of full enquiry responses sent from the DCE to the DTE.</li> </ul>	detail extensive none

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Common statistics</b>	<p>(Frame Relay) Statistics about messages sent between the DTE and the DCE:</p> <ul style="list-style-type: none"> <li>• <b>Unknown messages received</b>—Number of received packets that do not fall into any category.</li> <li>• <b>Asynchronous updates received</b>—Number of link status peer changes received.</li> <li>• <b>Out-of-sequence packets received</b>—Number of packets for which the sequence of the packets received is different from the expected sequence.</li> <li>• <b>Keepalive responses timedout</b>—Number of keepalive responses that timed out when no LMI packet was reported for <code>n392dte</code> or <code>n393dce</code> intervals. (See <b>LMI settings</b>).</li> </ul>	<b>detail extensive none</b>
<b>Nonmatching DCE-end DLCIs</b>	(Frame Relay, displayed only from the DTE) Number of DLCIs configured from the DCE.	<b>detail extensive none</b>
<b>LCP state</b>	<p>(PPP) Link Control Protocol state.</p> <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—LCP is not configured on the interface.</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>CHAP state</b>	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> <li>• <b>Chap-Chal-received</b>—Challenge was received but response not yet sent.</li> <li>• <b>Chap-Chal-sent</b>—Challenge was sent.</li> <li>• <b>Chap-Resp-received</b>—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response was sent for the challenge received.</li> <li>• <b>Closed</b>—CHAP authentication is incomplete.</li> <li>• <b>Failure</b>—CHAP authentication failed.</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Success</b>—CHAP authentication was successful.</li> </ul>	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went down to up. The format is <b>Last flapped: <i>year-month-day hour:minute:second timezone (hour:minute:second ago)</i></b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>CoS Queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output Rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Traffic statistics</b>	<p>Number of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), then either the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>MTU errors</b>—Number of packets larger than the MTU threshold.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>DS1 alarms</b>	E1 media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm.	<b>detail extensive none</b>
<b>DS1 defects</b>	<p>Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> <li>• <b>LOS</b>—Loss of signal.</li> <li>• <b>LOF</b>—Loss of frame.</li> <li>• <b>AIS</b>—Alarm indication signal.</li> <li>• <b>YLW</b>—Yellow alarm. Indicates errors at the remote site receiver.</li> </ul>	

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>E1 media</b>	<p>Active alarms and defects, plus counts of specific E1 errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than OK indicates a problem.</li> </ul> <p>The E1 media-specific error types can be:</p> <ul style="list-style-type: none"> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>BEE</b>—Bit error</li> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>PCV</b>—Pulse code violation</li> <li>• <b>CS</b>—Carrier state</li> <li>• <b>FEBS</b>—Far-end block error</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>ES</b>—Errored seconds</li> <li>• <b>BES</b>—Bursty errored seconds</li> <li>• <b>SES</b>—Severely errored seconds</li> <li>• <b>SEFS</b>—Severely errored framing seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> </ul>	<b>extensive</b>
<b>HDLC configuration</b>	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> <li>• <b>Timeslots</b>—Configured time slots for the interface.</li> <li>• <b>Line encodingHDB3</b>—Line encoding used.</li> </ul>	<b>extensive</b>
<b>Interface transmit queues</b>	<p>Names of the transmit queues and their associated statistics for each DSO channel on the Channelized E1 to DSO PIC.</p> <ul style="list-style-type: none"> <li>• <b>B/W</b>—Queue bandwidth as a percentage of the total interface bandwidth.</li> <li>• <b>WRR</b>—Weighted round robin (in percent).</li> <li>• <b>Packets</b>—Number of packets transmitted.</li> <li>• <b>Bytes</b>—Number of bytes transmitted.</li> <li>• <b>Drops</b>—Number of packets dropped.</li> <li>• <b>Errors</b>—Number of packet errors.</li> </ul>	<b>extensive</b>

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>DSx BERT configuration</b>	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>BERT time period</b>—Configured total time period that the BERT is to run.</li> <li>• <b>Elapsed</b>—Actual time elapsed since the start of the BERT (in seconds).</li> <li>• <b>Induced error rate</b>—Configured rate at which the bit errors are induced in the BERT pattern.</li> <li>• <b>Algorithm</b>—Type of algorithm selected for the BERT.</li> </ul>	<b>detail extensive none</b>
<b>Packet Forwarding Engine configuration</b>	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	<b>extensive</b>
<b>CoS information</b>	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Input packets</b>	Number of packets received on the logical interface.	None specified

Table 61: Channelized E1 and Channelized E1 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output packets</b>	Number of packets transmitted on the logical interface.	None specified
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the logical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Local statistics</b>	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than one second) for this counter to stabilize.	<b>detail extensive</b>
<b>Transit statistics</b>	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , <b>mpls</b> .	<b>detail extensive none</b>
<b>Multilink bundle</b>	(Multilink) Interface name for the multilink bundle, if configured.	<b>detail extensive none</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .	<b>detail extensive</b>
<b>DLCI</b>	<p>(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: <b>Flags</b>, <b>Total down time</b>, <b>Last down</b>, and <b>Traffic statistics</b>. <b>Flags</b> is one or more of the following:</p> <ul style="list-style-type: none"> <li>• <b>Active</b>—Set when the link is active and the DTE and DCE are exchanging information.</li> <li>• <b>Down</b>—Set when link is active, but no information is received from the DCE.</li> <li>• <b>Unconfigured</b>—Set when the corresponding DLCI in the DCE is not configured.</li> <li>• <b>Configured</b>—Set when the corresponding DLCI in the DCE is configured.</li> <li>• <b>Dce-configured</b>—Displayed when the command is issued from the DTE.</li> </ul>	<b>detail extensive none</b>
<b>DLCI statistics</b>	<p>(Frame Relay) Data-link connection identifier (DLCI) statistics.</p> <ul style="list-style-type: none"> <li>• <b>Active DLCI</b>—Number of active DLCIs.</li> <li>• <b>Inactive DLCI</b>—Number of inactive DLCIs.</li> </ul>	<b>detail extensive none</b>

## Sample Output

### show interfaces extensive (Channelized E1)

```

user@host> show interfaces ds-0/1/1:1 extensive
Physical interface: ds-0/1/1:1, Enabled, Physical link is Down
  Interface index: 163, SNMP ifIndex: 37, Generation: 46
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: E1,
  Loopback: None, FCS: 16, Framing: G704
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  CoS queues     : 4 supported, 4 maximum usable queues
  Last flapped   : 2005-12-28 14:44:06 PST (00:00:30 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                  0          0 bps
    Output bytes  :                  0          0 bps
    Input packets :                  0          0 pps
    Output packets:                  0          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    HS link CRC errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
    Resource errors: 0
  DS1 alarms   : LOF, LOS
  DS1 defects  : LOF, LOS
  E1 media:
    Seconds      Count  State
    SEF          982318    1 Defect Active
    BEE           0         0 OK
    AIS           0         0 OK
    LOF          982318    1 Defect Active
    LOS          982318    1 Defect Active
    YELLOW        0         0 OK
    BPV           1         1
    EXZ           1         1
    LCV           1         1
    PCV           1         2
    CS            0         0
    FEBE          1         9
    LES           1
    ES           982318
    SES           982318
    SEFS          982318
    BES           1
    UAS           0
  Interface transmit queues:
    B/W  WRR    Packets    Bytes    Drops    Errors
  Queue0  95  95         0         0         0         0
  Queue1   5   5         0         0         0         0
  HDLC configuration:
    Giant threshold: 1514, Runt threshold: 3
    Timeslots      : 31
    Line encoding: HDB3, Data inversion: Disabled, Idle cycle flag: flags,
    Start end flag: shared
  DS1 BERT configuration:
    BERT time period: 0 seconds, Elapsed: 0 seconds

```

Induced Error rate: 10e-0, Algorithm: 2^11 - 1, 0.152 and 0.153 (2047 type),  
Pseudorandom (8)

Packet Forwarding Engine configuration:

Destination slot: 0, PLP byte: 2 (0x1b)

CoS information:

CoS	transmit queue	%	Bandwidth bps	%	Buffer usec	Priority	Limit
0	best-effort	95	1945600	95	0	low	none
3	network-control	5	102400	5	0	low	none

## show interfaces (Channelized OC12 IQ and IQE)

---

**Syntax** `show interfaces (type-fpc/pic/port<:channel><:channel><:channel>)  
<brief | detail | extensive | terse>  
<descriptions>  
<media>  
<snmp-index snmp-index>  
<statistics>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display status information about the specified channelized OC12 IQ and IQE interface.

**Options** **type-fpc/pic/port:channel:channel:channel**—Interface type with optional corresponding channel levels.

For SONET mode, the interface type can be one of the following:

- **type-fpc/pic/port**—For the physical channelized OC12 IQ or IQE interface, **type** is **coc12**. For the clear channel, **type** is **so** (for OC12).
- **type-fpc/pic/port:channel**—At the first level of channelization, **type** can be **coc1** (channelized OC1), **ct3** (from **coc1**), **so** (for OC3), or **t3**.
- **type-fpc/pic/port:channel:channel**—At the second level of channelization, **type** can be **ct1** (from **ct3** or **coc1**) or **t1** (from **ct3** or **coc1**).
- **type-fpc/pic/port:channel:channel:channel**—At the third level of channelization, **type** is **ds** (from **ct1**).

For SDH mode, the interface type can be one of the following:

- **type-fpc/pic/port**—For the physical channelized OC12 IQ or IQE interface, **type** is **cstm4**. For the clear channel, **type** is **so** (for SONET/SDH (vc-4-4c)).
- **type-fpc/pic/port:channel**—At the first level of channelization, **type** can be **so** (from **cstm4**) or **cau4** (from **cstm4**).
- **type-fpc/pic/port:channel:channel**—At the second level of channelization, **type** can be **ct3** or **t3** (from or **cau4**).
- **type-fpc/pic/port:channel:channel:channel**—At the third level of channelization, **type** is **ct1** or **t1** (from **ct3**).
- **type-fpc/pic/port:channel:channel:channel:channel**—At the fourth level of channelization, **type** is **ds** (from **ct1**).

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index** *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

**Required Privilege Level** view

**List of Sample Output**

- [show interfaces extensive \(CAU4 on Channelized OC-12 IQ\) on page 1267](#)
- [show interfaces extensive \(Channelized OC1 on Channelized OC12 IQ\) on page 1267](#)
- [show interfaces extensive \(Channelized OC12 IQ\) \(Physical\) on page 1267](#)
- [show interfaces extensive \(Channelized T1 from Channelized OC12 IQ\) on page 1268](#)
- [show interfaces extensive \(Channelized T3 on Channelized OC12 IQ\) on page 1268](#)
- [show interfaces extensive \(CSTM4 on Channelized OC-12 IQ\) on page 1268](#)
- [show interfaces extensive \(DS0 on Channelized OC12 IQ\) on page 1268](#)
- [show interfaces extensive \(SONET Interface on Channelized OC12 IQ\) on page 1268](#)
- [show interfaces extensive \(T1 on Channelized OC12 IQ\) on page 1269](#)

**Output Fields** See the output field table for the [show interfaces \(Channelized OC3 IQ and IQE\)](#) command.

## Sample Output

### [show interfaces extensive \(CAU4 on Channelized OC-12 IQ\)](#)

```
user@host> show interfaces cau4-0/2/0:1 extensive
Physical interface: cau4-0/2/0:1, Enabled, Physical link is Up
  Interface index: 219, SNMP ifIndex: 139, Generation: 221
  Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, Parent: cstm4-0/2/0 Interface index 216
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : None
...
```

### [show interfaces extensive \(Channelized OC1 on Channelized OC12 IQ\)](#)

```
user@host> show interfaces extensive coc1-4/2/0:7
Physical interface: coc1-4/2/0:7, Enabled, Physical link is Up
  Interface index: 381, SNMP ifIndex: 2524, Generation: 728
  Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: 51840kbps, Loopback: None,
  FCS: 16, Payload scrambler: Disabled, Parent: coc12-4/2/0 (Index 266)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

### [show interfaces extensive \(Channelized OC12 IQ\) \(Physical\)](#)

```
user@host> show interfaces extensive coc12-4/2/0
Physical interface: coc12-4/2/0, Enabled, Physical link is Up
  Interface index: 266, SNMP ifIndex: 1269, Generation: 601
  Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode,
```

```
Speed: OC12, Loopback: None,  
FCS: 16, Payload scrambler: Disabled, Parent: None Device flags : Present  
Running  
Interface flags: Point-To-Point SNMP-Traps  
Link flags : Keepalives DTE  
...
```

#### show interfaces extensive (Channelized T1 from Channelized OC12 IQ)

```
user@host> show interfaces extensive ct1-4/2/0:7:1  
Physical interface: ct1-4/2/0:4:1, Enabled, Physical link is Up  
Interface index: 305, SNMP ifIndex: 2410, Generation: 640  
Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: T1,  
Loopback: None, FCS: 16,  
Framing: ESF, Parent: coc1-4/2/0:7 (Index 304)  
Device flags : Present Running  
Interface flags: Point-To-Point SNMP-Traps  
Link flags : None  
...
```

#### show interfaces extensive (Channelized T3 on Channelized OC12 IQ)

```
user@host> show interfaces ct3-0/2/0:1 extensive  
Physical interface: ct3-0/2/0:1:1, Enabled, Physical link is Up  
Interface index: 220, SNMP ifIndex: 140, Generation: 222  
Link-level type: Controller, Clocking: Internal, Speed: T3, Loopback: None,  
Mode: C/Bit parity, Parent: cau4-0/2/0:1 Interface index 219  
Device flags : Present Running  
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000  
Link flags : None  
...
```

#### show interfaces extensive (CSTM4 on Channelized OC-12 IQ)

```
user@host> show interfaces cstm4-0/2/0 extensive  
Physical interface: cstm4-0/2/0, Enabled, Physical link is Up  
Interface index: 216, SNMP ifIndex: 33, Generation: 218  
Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC12,  
Loopback: None, Parent: None Device flags : Present Running  
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000  
Link flags : None  
...
```

#### show interfaces extensive (DSO on Channelized OC12 IQ)

```
user@host> show interfaces extensive ds-4/2/0:7:1:1  
Physical interface: ds-4/2/0:4:1:1, Enabled, Physical link is Up  
Interface index: 306, SNMP ifIndex: 2411, Generation: 641  
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 64kbps,  
Loopback: None, FCS: 16, Parent: ct1-4/2/0:7:1 (Index 305)  
Device flags : Present Running  
Interface flags: Point-To-Point SNMP-Traps  
Link flags : Keepalives  
...
```

#### show interfaces extensive (SONET Interface on Channelized OC12 IQ)

```
user@host> show interfaces so-0/2/0:1 extensive
```

```

Physical interface: so-0/2/0:1, Enabled, Physical link is Up
Interface index: 750, SNMP ifIndex: 23, Generation: 11709
Link-level type: Multilink-FR, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16,
Payload scrambler: Enabled, Parent: coc12-0/2/0 Interface index 749
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives DTE
...

```

#### show interfaces extensive (T1 on Channelized OC12 IQ)

```

user@host> show interfaces t1-0/2/0:1:1:1 extensive
Physical interface: t1-0/2/0:1:1:1, Enabled, Physical link is Up
Interface index: 222, SNMP ifIndex: 143, Generation: 226
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
Loopback: None, FCS: 16, Framing: ESF, Parent: ct3-0/2/0:1:1
Interface index 221
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
...

```

## show interfaces (Channelized OC12)

---

<b>Syntax</b>	<code>show interfaces t3-fpc/pic/port:t3channel</code> <brief   detail   extensive   terse> <descriptions> <media> <snmp-index <i>snmp-index</i> > <statistics>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display status information about the specified channelized OC12 interface.
<b>Options</b>	<b>t3-fpc/pic/port:t3channel</b> —Display standard information about the specified channelized OC12 interface.  <b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b>descriptions</b> —(Optional) Display interface description strings.  <b>media</b> —(Optional) Display media-specific information about network interfaces.  <b>snmp-index <i>snmp-index</i></b> —(Optional) Display information for the specified SNMP index of the interface.  <b>statistics</b> —(Optional) Display static interface statistics.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces extensive (Channelized OC12) on page 1270</a>
<b>Output Fields</b>	See the output field table for the <a href="#">show interfaces (Channelized OC3 IQ and IQE)</a> command.

## Sample Output

### show interfaces extensive (Channelized OC12)

```
user@host> show interfaces t3-0/3/0:0 extensive
Physical interface: t3-0/3/0:0, Enabled, Physical link is Up
  Interface index: 32, SNMP ifIndex: 21, Generation: 2719
  Link-level type: Frame-Relay, PPP, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: T3, Loopback: None, SONET Loopback: None, FCS: 16, Mode: C/Bit parity
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
  DTE statistics:
    Enquiries sent           : 43186
    Full enquiries sent      : 8515
```

```

    Enquiry responses received      : 43185
    Full enquiry responses received : 8515
DCE statistics:
    Enquiries received             : 0
    Full enquiries received         : 0
    Enquiry responses sent          : 0
    Full enquiry responses sent     : 0
Common statistics:
    Unknown messages received       : 0
    Asynchronous updates received   : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout     : 0
Nonmatching DCE-end DLCIs:
    2
Hold-times      : Up 0 ms, Down 0 ms
Last flapped    : 2002-05-23 16:59:03 PDT (18:23:58 ago)
Statistics last cleared: Never
Traffic statistics:
    Input bytes : 1700 0 bps
    Output bytes : 1714 0 bps
    Input packets: 123 0 pps
    Output packets: 124 0 pps
Input errors:
    Errors: 0, Drops: 0, Framing errors: 1100817, Bucket drops: 0,
    Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0
Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0
DS3 alarms : None
SONET alarms : None
DS3 defects : None
SONET defects : None
DS3 media:
    Seconds      Count  State
    AIS          0      0 OK
    LOF          18      1 OK
    LOS          0      0 OK
    IDLE         0      0 OK
    YELLOW       0      0 OK
    BPV          0      0
    EXZ          0      0
    LCV          0      0
    PCV          36     122399
    CCV          72     91948
    LES         0
    PES         18
    PSES        18
    CES         18
    CSES        18
    SEFS        18
    UAS         0
HDLC configuration:
    Policing bucket: Disabled
    Shaping bucket : Disabled
    Giant threshold: 4484, Runt threshold: 3
DSU configuration:
    Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
    FEAC loopback: Inactive, Response: Disabled, Count: 0
DS3 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Algorithm: Unknown (0), Induced error rate: 10e-0
Interface transmit queues:

```

	B/W	WRR	Packets	Bytes	Drops	Errors
Queue0	95	95	0	0	0	0
Queue1	5	5	529	6348	0	0

SONET PHY:

	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	20	1	OK

SONET section:

	Seconds	Count	State
BIP-B1	0	0	
SEF	20	1	OK
LOS	20	1	OK
LOF	20	1	OK
ES-S	20		
SES-S	20		
SEFS-S	20		

SONET line:

	Seconds	Count	State
BIP-B2	0	0	
REI-L	0	0	
RDI-L	0	0	OK
AIS-L	0	0	OK
BERR-SF	18	1	OK
BERR-SD	2	1	OK
ES-L	20		
SES-L	20		
UAS-L	10		
ES-LFE	0		
SES-LFE	0		
UAS-LFE	0		

SONET path:

	Seconds	Count	State
BIP-B3	0	0	
REI-P	0	0	
LOP-P	20	1	OK
AIS-P	0	0	OK
RDI-P	0	0	OK
UNEQ-P	0	0	OK
PLM-P	20	1	OK
ES-P	20		
SES-P	20		
UAS-P	10		
ES-PFE	0		
SES-PFE	0		
UAS-PFE	0		

Received SONET overhead:

F1	S1	Z3	V5(cmp)
: 0x00, J0	: 0x00, C2	: 0x00, Z4	: 0x00
: 0x00, K1	: 0x04, C2(cmp)	: 0x00, S1(cmp)	
: 0x00, K2	: 0x04, F2	: 0x00, V5	
: 0x00			

Transmitted SONET overhead:

F1	S1	Z4
: 0x00, J0	: 0x00, C2	: 0x00, V5
: 0x01, K1	: 0x04, F2	: 0x00
: 0x00, K2	: 0x00, Z3	
: 0x00		

Received path trace: t3-0/3/0:0

74 33 2d 30 2f 33 2f 30 3a 30 00 00 00 00 0d 0a t3-0/3/0:0:0.....

Transmitted path trace: t3-0/3/0:0

74 33 2d 30 2f 33 2f 30 3a 30 00 00 00 00 00 00 t3-0/3/0:0:0.....

Packet Forwarding Engine configuration:

Destination slot: 0, PLP byte: 1 (0x00)

CoS information:

CoS transmit queue	%	Bandwidth bps	%	Buffer usec	Priority	Limit
0 best-effort	95	42499200	95	0	low	none
3 network-control	5	2236800	5	0	low	none

```
Logical interface t3-0/3/0:0.0 (Index 11) (SNMP ifIndex 268) (Generation 499)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 4470, Generation: 578, Route table: 0
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
  Generation: 98
  DLCI 100
    Flags: Active, Dce-configured
    Total down time: 0 sec, Last down: Never
    Traffic statistics:
      Input bytes : 0
      Output bytes : 0
      Input packets: 0
      Output packets: 0
  DLCI statistics:
    Active DLCI :2 Inactive DLCI : 0
```

## show interfaces (Channelized OC3 IQ and IQE)

---

**Syntax** `show interfaces (type-fpc/pic/port <:channel><:channel><:channel>)  
<brief | detail | extensive | terse>  
<descriptions>  
<media>  
<snmp-index snmp-index>  
<statistics>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** (M Series and T Series routers only) Display status information about the specified channelized OC3 IQ or IQE interface.

**Options** *type-fpc/pic/port:channel:channel:channel*—Interface type with optional corresponding channel levels. The interface type can be one of the following:

- *type-fpc/pic/port*—For the physical interface, *type* is **coc3**. For the clear channel, *type* is **so** (for OC3).
- *type-fpc/pic/port:channel*—At the first level of channelization, *type* can be **coc1** (channelized OC1), **ct3** (from **coc1**), or **t3** (from **coc1**).
- *type-fpc/pic/port:channel:channel*—At the second level of channelization, *type* can be **ct1** (from **coc1** or **ct3**) or **t1** (from **coc1** or **ct3**).
- *type-fpc/pic/port:channel:channel:channel*—At the third level of channelization, *type* can be **ds** (from **ct1**).

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index *snmp-index***—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

**Required Privilege Level** view

**List of Sample Output** [show interfaces extensive \(Channelized OC3 IQ\) \(Physical\) on page 1288](#)  
[show interfaces extensive \(Channelized OC1 on Channelized OC3 IQ\) on page 1289](#)  
[show interfaces extensive \(Channelized T1 on Channelized OC3 IQ\) on page 1290](#)  
[show interfaces extensive \(DSO on Channelized OC3 IQ\) on page 1291](#)

**Output Fields** Table 62 on page 1275 lists the output fields for the **show interfaces** (all Channelized OC interfaces) command. Output fields are listed in the approximate order in which they appear.

*Table 62: Channelized OC show interfaces Output Fields*

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Description</b>	Interface description.	All levels
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	SONET/SDH reference clock source. It can be <b>Internal</b> or <b>External</b> . Clocking is configured and displayed only for channel 0.	All levels
<b>Framing mode</b>	Framing mode: <b>SONET</b> or <b>SDH</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>SONET loopback</b>	Whether loopback is enabled on a SONET/SDH interface, and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16-bit</b> .	All levels
<b>Payload scrambler</b>	Whether payload scrambling is enabled.	All levels
<b>Parent</b>	Name and interface index of the interface to which a particular child interface belongs. <b>None</b> indicates that this interface is the top level.	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>ANSI or ITU LMI settings</b>	<p>(Frame Relay) Settings for Local Management Interface (LMI). The format is (ANSI or ITU) LMI settings: <i>value, value... nn</i> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> <li>• <b>n391dte</b>—DTE full status polling interval (1–255)</li> <li>• <b>n392dce</b>—DCE error threshold (1–10)</li> <li>• <b>n392dte</b>—DTE error threshold (1–10)</li> <li>• <b>n393dce</b>—DCE monitored event count (1–10)</li> <li>• <b>n393dte</b>—DTE monitored event count (1–10)</li> <li>• <b>t391dte</b>—DTE polling timer (5–30 seconds)</li> <li>• <b>t392dce</b>—DCE polling verification timer (5–30 seconds)</li> </ul>	All levels
<b>LMI statistics</b>	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> <li>• <b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: <i>nn</i> (last sent <i>hh:mm:ss</i> ago)</b>.</li> <li>• <b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: <i>nn</i> (last sent <i>hh:mm:ss</i> ago)</b>.</li> </ul>	<b>detail extensive</b>
<b>DTE statistics</b>	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> <li>• <b>Enquiries sent</b>—Number of link status enquiries sent from the DTE to the DCE.</li> <li>• <b>Full enquiries sent</b>—Number of full enquiries sent from the DTE to the DCE.</li> <li>• <b>Enquiry responses received</b>—Number of enquiry responses received by the DTE from the DCE.</li> <li>• <b>Full enquiry responses received</b>—Number of full enquiry responses sent from the DTE to the DCE.</li> </ul>	<b>detail extensive none</b>
<b>DCE statistics</b>	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> <li>• <b>Enquiries received</b>—Number of enquiries received by the DCE from the DTE.</li> <li>• <b>Full enquiries received</b>—Number of full enquiries received by the DCE from the DTE.</li> <li>• <b>Enquiry responses sent</b>—Number of enquiry responses sent from the DCE to the DTE.</li> <li>• <b>Full enquiry responses sent</b>—Number of full enquiry responses sent from the DCE to the DTE.</li> </ul>	<b>detail extensive none</b>

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Common statistics</b>	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> <li>• <b>Unknown messages received</b>—Number of received packets that do not fall into any category.</li> <li>• <b>Asynchronous updates received</b>—Number of link status peer changes received.</li> <li>• <b>Out-of-sequence packets received</b>—Number of packets for which the sequence of the packets received is different from the expected sequence.</li> <li>• <b>Keepalive responses timedout</b>—Number of keepalive responses that timed out when no LMI packet was reported for <b>n392dte</b> or <b>n393dce</b> intervals. (See <b>LMI settings</b>.)</li> </ul>	<b>detail extensive none</b>
<b>Nonmatching DCE-end DLCIs</b>	(Frame Relay) Number of DLCIs configured from the DCE, displayed only from the DTE.	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hh:mm:ss timezone year-month-day (hh:mm:ss ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>CoS Queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>DS1 alarms</b> <b>DS1 defects</b>	E1 or T1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. See the following list for all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i> . <ul style="list-style-type: none"> <li>• <b>LOS</b>—Loss of signal.</li> <li>• <b>LOF</b>—Loss of frame.</li> <li>• <b>AIS</b>—Alarm indication signal.</li> <li>• <b>YLW</b>—Yellow alarm. Indicates errors at the remote site receiver.</li> </ul>	<b>detail extensive none</b>

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>T1 media</b>	<p>Counts of T1 or E1 media-specific errors.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>The T1 or E1 media-specific error types are:</p> <ul style="list-style-type: none"> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>BEE</b>—Bit error</li> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>PCV</b>—Pulse code violation</li> <li>• <b>CS</b>—Carrier state</li> <li>• <b>FEBE</b>—Far-end block error (E1 only)</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>ES</b>—Errored seconds</li> <li>• <b>BES</b>—Bit error seconds</li> <li>• <b>SES</b>—Severely errored seconds</li> <li>• <b>SEFS</b>—Severely errored framing seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> </ul>	<b>extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops caused by traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is off.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>SRAM errors</b>—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value of this field increments, the PIC is malfunctioning.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.	<b>detail extensive</b>
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Active alarms</b>	Defects that can prevent the interface from passing packets:	<b>detail extensive</b>
<b>Active defects</b>	<ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>LOF</b>—Loss of frame.</li> </ul>	
<b>SONET alarms</b>	Media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm.	<b>All levels</b>
<b>SONET defects</b>	Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b> , <b>SONET section</b> , <b>SONET line</b> , and <b>SONET path</b> .	

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SONET vt</b>	<p>SONET virtual-tributary (VT) alarms and defects:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-V</b>—Remote error indication (near-end VT)</li> <li>• <b>LOP-V</b>—Loss of pointer (near-end VT)</li> <li>• <b>AIS-V</b>—Alarm indication signal (near-end VT)</li> <li>• <b>RDI-V</b>—Remote defect indication (near-end VT)</li> <li>• <b>UNEQ-V</b>—Unequipped (near-end VT)</li> <li>• <b>PLM-V</b>—Payload label mismatch (near-end VT)</li> <li>• <b>ES-V</b>—Errored seconds (near-end VT)</li> <li>• <b>SES-V</b>—Severely errored seconds (near-end VT)</li> <li>• <b>UAS-V</b>—Unavailable seconds (near-end VT)</li> <li>• <b>ES-VFE</b>—Errored seconds (far-end VT)</li> <li>• <b>SES-VFE</b>—Severely errored seconds (far-end VT)</li> <li>• <b>UAS-VFE</b>—Unavailable seconds (far-end VT)</li> </ul>	<b>extensive</b>
<b>SONET PHY</b>	<p>Counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	<b>extensive</b>
<b>SONET section</b>	<p>Counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SONET line</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>
<b>SONET path</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Received SONET overhead	Values of the received and transmitted SONET/SDH overhead:	extensive
Transmitted SONET overhead	<p>F1—Section user channel byte. This byte is set aside for the purposes of users.</p> <p>S1—Synchronization Status (S1). The S1 byte is located in the first STS-1 of an STS-N. Bits 5 through 8 convey the synchronization status of the network element.</p> <p>Z3 and Z4—Path overhead.</p> <p>V5—Virtual Tributary (VT) path overhead byte.</p>	
SDH alarms SDH defects	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.</p> <p><b>NOTE:</b> For controller based SONET PICs, the SDH alarms and SDH defects output in the <b>show interface coc3 extensive</b> command output only shows the section and line level defects. The path level defects can be found under the SONET (so) interface output.</p>	All levels
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>RS-BIP8</b>—24-bit BIP for multiplex section overhead (B2 bytes)</li> <li>• <b>OOF</b>—Out of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>RS-ES</b>—Errored seconds (near-end regenerator section)</li> <li>• <b>RS-SES</b>—Severely errored seconds (near-end regenerator section)</li> <li>• <b>RS-SEFS</b>—Severely errored framing seconds (regenerator section)</li> </ul>	extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SDH multiplex section</b>	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>MS-BIP24</b>—8-bit BIP for high-order path overhead (B3 byte)</li> <li>• <b>MS-FEBE</b>—Far-end block error (multiplex section)</li> <li>• <b>MS-FERF</b>—Far-end remote fail (multiplex section)</li> <li>• <b>MS-AIS</b>—alarm indication signal (multiplex section)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>MS-ES</b>—Errored seconds (near-end multiplex section)</li> <li>• <b>MS-SES</b>—Severely errored seconds (near-end multiplex section)</li> <li>• <b>MS-UAS</b>—Unavailable seconds (near-end multiplex section)</li> <li>• <b>MS-ES-FE</b>—Errored seconds (far-end multiplex section)</li> <li>• <b>MS-SES-FE</b>—Severely errored seconds (far-end multiplex section)</li> <li>• <b>MS-UAS-FE</b>—Unavailable seconds (far-end multiplex section)</li> </ul>	<b>extensive</b>
<b>SDH path</b>	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>HP-BIP8</b>—8-bit BIP for regenerator section overhead (B1 byte)</li> <li>• <b>HP-FEBE</b>—Far-end block error (high-order path)</li> <li>• <b>HP-LOP</b>—Loss of pointer (high-order path)</li> <li>• <b>HP-AIS</b>—High-order-path alarm indication signal</li> <li>• <b>HP-FERF</b>—Far-end remote fail (high-order path)</li> <li>• <b>HP-UNEQ</b>—Unequipped (high-order path)</li> <li>• <b>HP-PLM</b>—Payload label mismatch (high-order path)</li> <li>• <b>HP-ES</b>—Errored seconds (near-end high-order path)</li> <li>• <b>HP-SES</b>—Severely errored seconds (near-end high-order path)</li> <li>• <b>HP-UAS</b>—Unavailable seconds (near-end high-order path)</li> <li>• <b>HP-ES-FE</b>—Errored seconds (far-end high-order path)</li> <li>• <b>HP-SES-FE</b>—Severely errored seconds (far-end high-order path)</li> <li>• <b>HP-UAS-FE</b>—Unavailable seconds (far-end high-order path)</li> </ul>	<b>extensive</b>

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Received SDH overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SDH overhead	<ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1</b> and <b>K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>.</li> <li>• <b>Z3</b> and <b>Z4</b>—Allocated for future use.</li> </ul>	
Received path trace	Channelized OC12 interfaces allow path trace bytes to be sent inband across the SONET/SDH link. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits. This information is specific to each of the 12 channelized OC12 interfaces.	extensive
Transmitted path trace		
DS3 media	<p>Counts of T3 media-specific errors. For detailed definitions of the T3 (DS-3) error events (BPV, EXZ, LCV, PCV, and CCV) and performance parameters (LES, PES, PSES, CES, CSES, SEFS, and UAS), see RFC 2496.</p> <p>The DS3 or E3 media-specific error types can be:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop out of lock</li> <li>• <b>Reframing</b>—Frame alignment recovery time</li> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>IDLE</b>—Idle code detected</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>PCV</b>—(DS3 only) Pulse code violation</li> <li>• <b>CCV</b>—(DS3 only) C-bit coding violation</li> <li>• <b>FEBE</b>—(DS3 only) Far-end block error</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>PES</b>—(DS3 only) P-bit errored seconds</li> <li>• <b>PSES</b>—(DS3 only) P-bit errored seconds (section)</li> <li>• <b>CES</b>—(DS3 only) C-bit errored seconds</li> <li>• <b>CSES</b>—(DS3 only) C-bit severely errored seconds</li> <li>• <b>SEFS</b>—Severely errored framing seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> </ul>	extensive

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> <li>• <b>Timeslots</b>—Configured time slots for the interface.</li> <li>• <b>Line encoding</b>—Line encoding used. It is always <b>HDB3</b>.</li> <li>• <b>Byte encoding</b>—(T1 only) Byte encoding used: <b>Nx64K</b> or <b>Nx56K</b>.</li> <li>• <b>Line encoding</b>—Line encoding used. For T1, the value can be <b>B8ZS</b> or <b>AMI</b>. For E1, the value is <b>HDB3</b>.</li> <li>• <b>Data inversion</b>—HDLC data inversion setting: <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Idle cycle flag</b>—Idle cycle flags.</li> <li>• <b>Start end flag</b>—Start and end flag.</li> </ul>	extensive
Interface transmit queues	<p>Name of the transmit queues and their associated statistics for each DS3 channel on the Channelized OC12 PIC.</p> <ul style="list-style-type: none"> <li>• <b>B/W</b>—Queue bandwidth as a percentage of the total interface bandwidth.</li> <li>• <b>WRR</b>—Weighted round-robin (in percent).</li> <li>• <b>Packets</b>—Number of packets transmitted.</li> <li>• <b>Bytes</b>—Number of bytes transmitted.</li> <li>• <b>Drops</b>—Number of packets dropped.</li> <li>• <b>Errors</b>—Number of packet errors.</li> </ul>	extensive
DSU configuration	<p>Information about the DSU configuration. The last three lines (<b>Bit count</b>, <b>Error bit count</b>, and <b>LOS information</b>) are displayed only if a BERT has ever been run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>Compatibility mode</b>—CSU/DSU compatibility mode: <b>None</b>, <b>Larscom</b>, <b>Kentrox</b>, or <b>Digital-Link</b>.</li> <li>• <b>Scrambling</b>—Payload scrambling. It can be <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Subrate</b>—Configured subrate setting. Applies only when <b>Digital-Link</b> compatibility mode is used. It can be <b>Disabled</b> or display units in kbps.</li> <li>• <b>FEAC loopback</b>—(T3) Whether a far-end alarm and control (FEAC) loopback is <b>Active</b> or <b>Inactive</b>. This feature is used to send alarm or status information from the far-end terminal back to the near-end terminal and to initiate T3 loopbacks at the far-end terminal from the near-end terminal.</li> <li>• <b>Response</b>—Whether the FEAC signal is <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Count</b>—Number of FEAC loopbacks.</li> </ul>	extensive
BERT configuration	<p>(DS interfaces) BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>BERT time period</b>—Configured total time period that the BERT is to run.</li> <li>• <b>Elapsed</b>—Actual time elapsed since the start of the BERT (in seconds).</li> <li>• <b>Induced error rate</b>—Configured rate at which the bit errors are induced in the BERT pattern.</li> <li>• <b>Algorithm</b>—Type of algorithm selected for the BERT.</li> </ul>	detail extensive none

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Packet Forwarding Engine configuration</b>	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	<b>extensive</b>
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Traffic statistics</b>	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize. <ul style="list-style-type: none"> <li>• <b>Input rate</b>—Rate of bits and packets received on the interface.</li> <li>• <b>Output rate</b>—Rate of bits and packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Local statistics</b>	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>

Table 62: Channelized OC show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Transit statistics</b>	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , or <b>mpls</b> .	<b>detail extensive none</b>
<b>Multilink bundle</b>	(If the logical interface is configured as part of a multilink bundle.) Interface name for the multilink bundle.	<b>detail extensive none</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .	<b>detail extensive</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address.	<b>detail extensive none</b>
<b>DLCI</b>	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: <b>Flags</b> , <b>Total down time</b> , <b>Last down</b> , and <b>Traffic statistics</b> . <b>Flags</b> is one or more of the following: <ul style="list-style-type: none"> <li>• <b>Active</b>—Set when the link is active and the DTE and DCE are exchanging information.</li> <li>• <b>Down</b>—Set when the link is active, but no information is received from the DCE.</li> <li>• <b>Unconfigured</b>—Set when the corresponding DLCI in the DCE is not configured.</li> <li>• <b>Configured</b>—Set when the corresponding DLCI in the DCE is configured.</li> <li>• <b>Dce-configured</b>—Displayed when the command is issued from the DTE.</li> </ul>	<b>detail extensive none</b>
<b>DLCI statistics</b>	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> <li>• <b>Active DLCI</b>—Number of active DLCIs.</li> <li>• <b>Inactive DLCI</b>—Number of inactive DLCIs.</li> </ul>	<b>detail extensive none</b>

## Sample Output

### show interfaces extensive (Channelized OC3 IQ) (Physical)

```
user@host> show interfaces extensive coc3-0/0/0
```

```

Physical interface: coc3-0/0/0, Enabled, Physical link is Down
Interface index: 128, SNMP ifIndex: 22, Generation: 11
Description: pink coc3-0/0/0
Link-level type: Controller, Clocking: Internal, SONET mode, Speed: OC3,
Loopback: None, Parent: None
Device flags : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags : None
Hold-times : Up 0 ms, Down 0 ms
CoS queues : 4 supported
Last flapped : 2005-01-27 16:39:21 PST (1w0d 22:09 ago)
Statistics last cleared: Never
SONET alarms : PLL, LOS
SONET defects : PLL, LOF, LOS, SEF, AIS-L
SONET PHY:
      Seconds      Count  State
  PLL Lock      681767      1  PLL Lock Error
  PHY Light         0        0  OK
SONET section:
      Seconds      Count  State
  BIP-B1         0        0
  SEF      681767      1  Defect Active
  LOS      681767      1  Defect Active
  LOF      681767      1  Defect Active
  ES-S      681767
  SES-S      681767
  SEFS-S      681767
SONET line:
      Seconds      Count  State
  BIP-B2         0        0
  REI-L         0        0
  RDI-L         0        0  OK
  AIS-L      681767      1  Defect Active
  BERR-SF         0        0  OK
  BERR-SD         0        0  OK
  ES-L      681767
  SES-L      681767
  UAS-L      681757
  ES-LFE         0
  SES-LFE         0
  UAS-LFE         0
Received SONET overhead:
  F1 : 0x00, J0 : 0x00, K1 : 0xff, K2 : 0xff
  S1 : 0xff
Transmitted SONET overhead:
  F1 : 0x00, J0 : 0x01, K1 : 0x00, K2 : 0x00
  S1 : 0x00

```

### show interfaces extensive (Channelized OC1 on Channelized OC3 IQ)

```

user@host> show interfaces extensive coc1-0/0/0:1
Physical interface: coc1-0/0/0:1, Enabled, Physical link is Down
Interface index: 133, SNMP ifIndex: 27, Generation: 16
Link-level type: Controller, Clocking: Internal, SONET mode, Speed: 51840kbps,

  Loopback: None, Parent: coc3-0/0/0
Interface index 128
Device flags : Present Running Down 16384
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags : None
Hold-times : Up 0 ms, Down 0 ms
CoS queues : 4 supported
Last flapped : 2005-02-04 14:51:07 PST (00:00:35 ago)
Statistics last cleared: Never

```

```

SONET alarms      : None
SONET defects     : AIS-P
SONET path:
  BIP-B3          0          0
  REI-P           0          0
  LOP-P           0          0 OK
  AIS-P          36          1 Defect Active
  RDI-P           0          0 OK
  UNEQ-P          0          0 OK
  PLM-P           0          0 OK
  ES-P            36
  SES-P           36
  UAS-P           26
  ES-PFE          0
  SES-PFE         0
  UAS-PFE         0
Received SONET overhead:
  C2      : 0xff, C2(cmp) : 0x01, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  C2      : 0x01, F2      : 0x00, Z3      : 0x00, Z4      : 0x00
Received path trace:
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: router-1 coc1-0/0/0:1
  6b 61 76 65 72 69 20 63 6f 63 31 2d 30 2f 30 2f   router-1 coc1-0/0/0:1
  30 3a 31 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

### show interfaces extensive (Channelized T1 on Channelized OC3 IQ)

```

user@host> show interfaces extensive ct1-0/0/0:1:1
Physical interface: ct1-0/0/0:1:1, Enabled, Physical link is Down
Interface index: 134, SNMP ifIndex: 62, Generation: 17
Link-level type: Controller, Clocking: Internal, Speed: T1, Loopback: None,
Framing: ESF, Parent: coc1-0/0/0:1 Interface index 133
Device flags   : Present Running Down 16384
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : None
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 4 supported
Last flapped   : 2005-02-04 14:54:35 PST (00:00:18 ago)
Statistics last cleared: Never
DS1 alarms     : None
DS1 defects    : AIS, LOF
T1 media:
  Seconds      Count  State
  SEF          1       1 OK
  BEE          1       1 OK
  AIS         18       1 Defect Active
  LOF         18       1 Defect Active
  LOS          0       0 OK
  YELLOW       0       0 OK
  BPV          0       0
  EXZ          0       0
  LCV          0       0
  PCV          0       0

```

```

CS                      0          0
LES                     18
ES                      18
SES                     18
SEFS                    18
BES                     0
UAS                     14
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SONET alarms   : None
SONET defects  : None
SONET vt:
  BIP-BIP2      0          0
  REI-V         0          0
  LOP-V         0          0 OK
  AIS-V        19          1 Defect Active
  RDI-V        19          1 Defect Active
  UNEQ-V       0          0 OK
  PLM-V        19          1 Defect Active
  ES-V         19
  SES-V        19
  UAS-V        9
  ES-VFE       0
  SES-VFE      0
  UAS-VFE      0
Received SONET overhead:
  V5           : 0x07, V5(cmp) : 0x02
Transmitted SONET overhead:
  V5           : 0x02
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

### show interfaces extensive (DS0 on Channelized OC3 IQ)

```

user@host> show interfaces extensive ds-0/0/0:1:1
Physical interface: ds-0/0/0:1:1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 63, Generation: 18
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 320kbps,
Loopback: None, FCS: 16, Parent: ct1-0/0/0:1:1 Interface index 134
Device flags   : Present Running
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
CoS queues     : 4 supported
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          0          0 bps
Output bytes  :          0          0 bps
Input packets :          0          0 pps
Output packets:         0          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, HS link CRC errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets

```

0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

## HDLC configuration:

Giant threshold: 1514, Runt threshold: 2

Timeslots : 1-5

Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,  
Start end flag: shared

## DSO BERT configuration:

BERT time period: 10 seconds, Elapsed: 0 seconds

Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)

## Packet Forwarding Engine configuration:

Destination slot: 0, PLP byte: 4 (0x00)

## show interfaces (Channelized STM1 IQ)

<b>Syntax</b>	<pre>show interfaces (type-fpc/pic/port &lt;:channel&gt;&lt;:channel&gt;) &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display status information about the specified channelized STM1 IQ interface.
<b>Options</b>	<p><b>type-fpc/pic/port:channel:channel</b>—Interface type with optional corresponding channel levels. The interface type can be one of the following types:</p> <ul style="list-style-type: none"> <li>• <b>type-fpc/pic/port:channel</b>—For the physical channelized STM1 IQ interface, <b>type</b> is <b>cstm1</b>. For the clear channel, <b>type</b> is <b>so</b>. For channelization, the STM1 IQ interface must be converted to interface type <b>cau4</b>.</li> <li>• <b>type-fpc/pic/port:channel</b>—At the first level of channelization, <b>type</b> can be <b>ce1</b> or <b>e1</b> (clear channel or fractional channel from <b>cau4</b>).</li> <li>• <b>type-fpc/pic/port:channel:channel</b>—At the second level of channelization, <b>type</b> is <b>ds</b> (from <b>ce1</b>).</li> </ul> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index snmp-index</b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces (Channelized STM1 IQ) (Physical) on page 1294</a> <a href="#">show interfaces (Channelized AU-4) (Physical) on page 1294</a> <a href="#">show interfaces (Channelized E1) (Physical) on page 1294</a> <a href="#">show interfaces (DS) on page 1295</a>
<b>Output Fields</b>	See the output field table for the <a href="#">show interfaces (Channelized STM1)</a> command.

## Sample Output

### show interfaces (Channelized STM1 IQ) (Physical)

```
user@host> show interfaces cstm1-0/0/0
Physical interface: cstm1-0/0/0, Enabled, Physical link is Up
  Interface index: 146, SNMP ifIndex: 35
  Link-level type: Frame-relay, Controller, Clocking: Internal, SDH mode,
  Speed: OC3, Loopback: None, Parent: None  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags      : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
  DTE statistics:
    Enquiries sent                : 43186
    Full enquiries sent           : 8515
    Enquiry responses received    : 43185
    Full enquiry responses received : 8515
  DCE statistics:
    Enquiries received            : 0
    Full enquiries received       : 0
    Enquiry responses sent        : 0
    Full enquiry responses sent   : 0
  Common statistics:
    Unknown messages received     : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timeout   : 0
  Nonmatching DCE-end DLCIs:
    2
  Last flapped   : 2003-02-06 15:01:56 PST (07:15:06 ago)
...
```

### show interfaces (Channelized AU-4) (Physical)

```
user@host> show interfaces cau4-0/0/0
Physical interface: cau4-0/0/0, Enabled, Physical link is Up
  Interface index: 147, SNMP ifIndex: 36
  Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, Parent: cstm1-0/0/0 Interface index 146
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags      : None
  Last flapped   : 2003-02-06 19:36:31 PST (02:40:42 ago)
  SDH alarms     : None
  SDH defects    : None
...
```

### show interfaces (Channelized E1) (Physical)

```
user@host> show interfaces ce1-0/0/0:11
Physical interface: ce1-0/0/0:11, Enabled, Physical link is Up
  Interface index: 169, SNMP ifIndex: 288
  Link-level type: Frame-relay, Controller, Clocking: Internal, Speed: E1,
  Loopback: None, Framing: G704, Parent: cau4-0/0/0 Interface index 147
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags      : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
```

```

LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 0
Nonmatching DCE-end DLCIs:
  2
Last flapped : 2003-02-06 22:05:23 PST (00:13:45 ago)
DS1  alarms : None
DS1  defects : None
SDH  alarms : None
SDH  defects : None
...

```

### show interfaces (DS)

```

user@host> show interfaces ds-0/0/0:11:1
Physical interface: ds-0/0/0:11:1, Enabled, Physical link is Up
  Interface index: 170, SNMP ifIndex: 289
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: Illegal, FCS: 16, Parent: ce1-0/0/0:11 Interface index 169
  Device flags : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags : Keepalives
  CoS Queues: 8 maximum usable queues, 4 in use
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Conf-req-sent
  Egress queues: 8 supported, 4 in use
...
Logical interface ds-0/0/0:11:1.0 (Index 77) (SNMP ifIndex 290)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.134.1.0/30, Local: 10.134.1.1
DLCI 100
  Flags: Active, Dce-configured
  Total down time: 0 sec, Last down: Never
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
...

```

## show interfaces (Channelized STM1)

**Syntax** `show interfaces e1-fpc/pic/port:e1channel`  
`<brief | detail | extensive | terse>`  
`<descriptions>`  
`<media>`  
`<snmp-index snmp-index>`  
`<statistics>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** (M Series and T Series routers only) Display status information about the specified channelized STM1 interface.

**Options** `e1-fpc/pic/port:e1channel`—Display standard status information about the specified channelized STM1 interface.

`brief | detail | extensive | terse`—(Optional) Display the specified level of output.

`descriptions`—(Optional) Display interface description strings.

`media`—(Optional) Display media-specific information about network interfaces.

`snmp-index snmp-index`—(Optional) Display information for the specified SNMP index of the interface.

`statistics`—(Optional) Display static interface statistics.

**Required Privilege Level** view

**List of Sample Output** [show interfaces extensive \(Channelized STM1, SDH\) on page 1307](#)

**Output Fields** [Table 63 on page 1296](#) lists the output fields for the **show interfaces** (all Channelized STM1 interfaces) command. Output fields are listed in the approximate order in which they appear.

**Table 63: Channelized STM1 show interfaces Output Fields**

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source. It can be <b>Internal</b> or <b>External</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16</b> bits.	All levels
<b>Framing</b>	Physical layer framing format used on the link. It can be <b>G704</b> , <b>G704-NO-CRC4</b> , or <b>Unframed</b> . The default is <b>G704</b> .	All levels
<b>Parent</b>	(Channelized STM1 IQ interfaces only) Name and interface index of the interface to which a particular child interface belongs. <b>None</b> indicates that this interface is the top level.	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the "Link Flags" section under " <a href="#">Common Output Fields Description</a> " on page 1114.	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Keepalive settings</b>	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> <li><b>intervalseconds</b>—The time in seconds between successive keepalive requests. The range is <b>10</b> seconds through <b>32,767</b> seconds, with a default of <b>10</b> seconds.</li> <li><b>down-count number</b>—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is <b>1</b> through <b>255</b>, with a default of <b>3</b>.</li> <li><b>up-count number</b>—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is <b>1</b> through <b>255</b>, with a default of <b>1</b>.</li> </ul>	<b>detail extensive none</b>

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li><b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>.</li> </ul> </li> <li><b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li><b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>.</li> </ul> </li> </ul>	detail extensive none
ANSI LMI settings or ITU LMI settings	<p>(Frame Relay) Local Management Interface settings. The format is (ANSI or ITU) LMI settings: <i>value, value...xx</i> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> <li><b>n391dte</b>—DTE full status polling interval (1- 255)</li> <li><b>n392dce</b>—DCE error threshold (1-10)</li> <li><b>n392dte</b>—DTE error threshold (1-10)</li> <li><b>n393dce</b>—DCE monitored event count (1-10)</li> <li><b>n393dte</b>—DTE monitored event count (1-10)</li> <li><b>t391dte</b>—DTE polling timer (5-30 seconds)</li> <li><b>t392dce</b>—DCE polling verification timer (5-30 seconds)</li> </ul>	detail extensive none
LMI	<p>(Frame Relay) Statistics about the link management.</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: <i>nn</i> (last seen <i>hh:mm:ss</i> ago)</b>.</li> <li><b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: <i>nn</i> (last seen <i>hh:mm:ss</i> ago)</b>.</li> </ul>	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> <li><b>Enquiries sent</b>—Number of link status enquiries sent from the DTE to the DCE.</li> <li><b>Full enquiries sent</b>—Number of full enquiries sent from the DTE to the DCE.</li> <li><b>Enquiry responses received</b>—Number of enquiry responses received by the DTE from the DCE.</li> <li><b>Full enquiry responses received</b>—Number of full enquiry responses sent from the DTE to the DCE.</li> </ul>	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> <li><b>Enquiries received</b>—Number of enquiries received by the DCE from the DTE.</li> <li><b>Full enquiries received</b>—Number of full enquiries received by the DCE from the DTE.</li> <li><b>Enquiry responses sent</b>—Number of enquiry responses sent from the DCE to the DTE.</li> <li><b>Full enquiry responses sent</b>—Number of full enquiry responses sent from the DCE to the DTE.</li> </ul>	detail extensive none

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Common statistics</b>	<p>(Frame Relay) Statistics about messages sent between the DTE and the DCE:</p> <ul style="list-style-type: none"> <li>• <b>Unknown messages received</b>—Number of received packets that do not fall into any category.</li> <li>• <b>Asynchronous updates received</b>—Number of link status peer changes received.</li> <li>• <b>Out-of-sequence packets received</b>—Number of packets for which the sequence of the packets received is different from the expected sequence.</li> <li>• <b>Keepalive responses timedout</b>—Number of keepalive responses that timed out when no LMI packet was reported for <b>n392dte</b> or <b>n393dce</b> intervals. (See <b>LMI settings</b>.)</li> </ul>	<b>detail extensive none</b>
<b>Nonmatching DCE-end DLCIs</b>	<p>(Frame Relay, displayed only from the DTE) Number of DLCIs configured from the DCE.</p>	<b>detail extensive none</b>
<b>LCP state</b>	<p>(PPP) Link Control Protocol state.</p> <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgment was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgment was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—LCP is not configured on the interface.</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>NCP state</b>	<p>(PPP) Network Control Protocol state.</p> <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgment was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgment was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—NCP is not configured on the interface.</li> <li>• <b>Opened</b>—NCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>CHAP state</b>	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> <li>• <b>Chap-Chal-received</b>—Challenge was received but response not yet sent.</li> <li>• <b>Chap-Chal-sent</b>—Challenge was sent.</li> <li>• <b>Chap-Resp-received</b>—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response was sent for the challenge received.</li> <li>• <b>Closed</b>—CHAP authentication is incomplete.</li> <li>• <b>Failure</b>—CHAP authentication failed.</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Success</b>—CHAP authentication was successful.</li> </ul>	<b>detail extensive none</b>
<b>Last flapped</b>	<p>Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago)</b>. For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b>.</p>	<b>detail extensive none</b>

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>SRAM errors</b>—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value of this field increments, the PIC is malfunctioning.</li> </ul>	<b>extensive</b>

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> </ul>	<b>extensive</b>
<b>DS1 alarms</b> <b>DS1 defects</b>	<p>E1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> <li>• <b>LOS</b>—Loss of signal.</li> <li>• <b>LOF</b>—Loss of frame.</li> <li>• <b>AIS</b>—Alarm indication signal.</li> <li>• <b>YLW</b>—Yellow alarm. Indicates errors at the remote site receiver.</li> </ul>	<b>detail extensive none</b>
<b>SDH alarms</b> <b>SDH defects</b>	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SDH PHY, SDH regenerator section, SDH multiplex section, and SDH path.</p> <p><b>NOTE:</b> For controller-based SONET PICs, the SDH alarms and SDH defects output in the <b>show interface cstm1 extensive</b> command output only shows the section and line level defects. The path level defects can be found under the SONET (so) interface output.</p>	<b>All levels</b>

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
E1 media	<p>Active alarms and defects, plus counts of specific E1 errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Error types can be:</p> <ul style="list-style-type: none"> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>BEE</b>—Bit error</li> <li>• <b>BES</b>—Bit error seconds</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>CS</b>—Carrier state</li> <li>• <b>ES</b>—Errored seconds</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>FEBE</b>—Far-end block error</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>PCV</b>—Pulse code violation</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> <li>• <b>SES</b>—Severely errored seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> </ul>	extensive
Interface transmit queues	<p>Names of the transmit queues and their associated statistics for each E1 channel on the Channelized STM1-to-E1 PIC.</p> <ul style="list-style-type: none"> <li>• <b>B/W</b>—Queue bandwidth as a percentage of the total interface bandwidth.</li> <li>• <b>WRR</b>—Weighted round-robin (in percent).</li> <li>• <b>Packets</b>—Number of packets transmitted.</li> <li>• <b>Bytes</b>—Number of bytes transmitted.</li> <li>• <b>Drops</b>—Number of packets dropped.</li> <li>• <b>Errors</b>—Number of packet errors.</li> </ul>	extensive
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> <li>• <b>Timeslots</b>—Configured time slots for the interface.</li> <li>• <b>Line encoding</b>—Line encoding used. It is always <b>HDB3</b>.</li> </ul>	extensive

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>DS1 BERT configuration</b>	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>BERT time period</b>—Configured total time period that the BERT is to run.</li> <li>• <b>Elapsed</b>—Actual time elapsed since the start of the BERT (in seconds).</li> <li>• <b>Induced error rate</b>—Configured rate at which the bit errors are induced in the BERT pattern.</li> <li>• <b>Algorithm</b>—Type of algorithm selected for the BERT.</li> </ul>	<b>detail extensive none</b>
<b>SDH PHY</b>	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	<b>extensive</b>
<b>SDH regenerator section</b>	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>RS-BIP8</b>—24-bit BIP for multiplex section overhead (B2 bytes)</li> <li>• <b>OOF</b>—Out of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>RS-ES</b>—Errored seconds (near-end regenerator section)</li> <li>• <b>RS-SES</b>—Severely errored seconds (near-end regenerator section)</li> <li>• <b>RS-SEFS</b>—Severely errored framing seconds (regenerator section)</li> </ul>	<b>extensive</b>

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>MS-BIP24</b>—8-bit BIP for high-order path overhead (B3 byte)</li> <li>• <b>MS-FEBE</b>—Far-end block error (multiplex section)</li> <li>• <b>MS-FERF</b>—Far-end remote fail (multiplex section)</li> <li>• <b>MS-AIS</b>—alarm indication signal (multiplex section)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>MS-ES</b>—Errored seconds (near-end multiplex section)</li> <li>• <b>MS-SES</b>—Severely errored seconds (near-end multiplex section)</li> <li>• <b>MS-UAS</b>—Unavailable seconds (near-end multiplex section)</li> <li>• <b>MS-ES-FE</b>—Errored seconds (far-end multiplex section)</li> <li>• <b>MS-SES-FE</b>—Severely errored seconds (far-end multiplex section)</li> <li>• <b>MS-UAS-FE</b>—Unavailable seconds (far-end multiplex section)</li> </ul>	extensive
SDH path	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>HP-BIP8</b>—8-bit BIP for regenerator section overhead (B1 byte)</li> <li>• <b>HP-FEBE</b>—Far-end block error (high-order path)</li> <li>• <b>HP-LOP</b>—Loss of pointer (high-order path)</li> <li>• <b>HP-AIS</b>—High-order-path alarm indication signal</li> <li>• <b>HP-FERF</b>—Far-end remote fail (high-order path)</li> <li>• <b>HP-UNEQ</b>—Unequipped (high-order path)</li> <li>• <b>HP-PLM</b>—Payload label mismatch (high-order path)</li> <li>• <b>HP-ES</b>—Errored seconds (near-end high-order path)</li> <li>• <b>HP-SES</b>—Severely errored seconds (near-end high-order path)</li> <li>• <b>HP-UAS</b>—Unavailable seconds (near-end high-order path)</li> <li>• <b>HP-ES-FE</b>—Errored seconds (far-end high-order path)</li> <li>• <b>HP-SES-FE</b>—Severely errored seconds (far-end high-order path)</li> <li>• <b>HP-UAS-FE</b>—Unavailable seconds (far-end high-order path)</li> </ul>	extensive

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH tu	<p>Active alarms and defects, plus counts of specific SDH tributary unit (TU) errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>TU-BIP-2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>TU-FEBE</b>—(near-end TU)</li> <li>• <b>TU-LOP</b>—Loss of pointer (near-end TU)</li> <li>• <b>TU-AIS</b>—Alarm indication signal (near-end TU)</li> <li>• <b>TU-FERF</b>—(near-end TU)</li> <li>• <b>TU-UNEQ</b>—Unequipped (near-end TU)</li> <li>• <b>TU-PLM</b>—Payload label mismatch (near-end TU)</li> <li>• <b>TU-ES</b>—Errored seconds (near-end TU)</li> <li>• <b>TU-SES</b>—Severely errored seconds (near-end TU)</li> <li>• <b>TU-UAS</b>—Unavailable seconds (near-end TU)</li> <li>• <b>TU-ES-FE</b>—Errored seconds (far-end TU)</li> <li>• <b>TU-SES-FE</b>—Severely errored seconds (far-end TU)</li> <li>• <b>TU-UAS-FE</b>—Unavailable seconds (far-end TU)</li> </ul>	extensive
Received SDH overhead	Values of the received and transmitted SONET overhead:	extensive
Transmitted SDH overhead	<ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1</b> and <b>K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i> signal.</li> <li>• <b>Z3</b> and <b>Z4</b>—Allocated for future use.</li> </ul>	
Received path trace	Channelized OC12 interfaces allow path trace bytes to be sent inband across the SONET/SDH link. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits. This information is specific to each of the 12 channelized OC12 interfaces.	extensive
Transmitted path trace		
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	extensive

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CoS information</b>	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , or <b>mpls</b> .	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table inet.0.	<b>detail extensive</b>
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>

Table 63: Channelized STM1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address.	<b>detail extensive none</b>
<b>DLCI</b>	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: <b>Flags</b> , <b>Total down time</b> , <b>Last down</b> , and <b>Traffic statistics</b> . <b>Flags</b> is one or more of the following: <ul style="list-style-type: none"> <li>• <b>Active</b>—Set when the link is active and the DTE and DCE are exchanging information.</li> <li>• <b>Down</b>—Set when the link is active, but no information is received from the DCE.</li> <li>• <b>Unconfigured</b>—Set when the corresponding DLCI in the DCE is not configured.</li> <li>• <b>Configured</b>—Set when the corresponding DLCI in the DCE is configured.</li> <li>• <b>Dce-configured</b>—Displayed when the command is issued from the DTE.</li> </ul>	<b>detail extensive none</b>
<b>DLCI statistics</b>	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> <li>• <b>Active DLCI</b>—Number of active DLCIs.</li> <li>• <b>Inactive DLCI</b>—Number of inactive DLCIs.</li> </ul>	<b>detail extensive none</b>

## Sample Output

### show interfaces extensive (Channelized STM1, SDH)

```

user@host> show interfaces e1-1/0/0:1 extensive
Physical interface: e1-1/0/0:1, Enabled, Physical link is Up
  Interface index: 148, SNMP ifIndex: 285, Generation: 2915
  Link-level type: Frame-relay, MTU: 1504, SDH mode, Speed: E1, Loopback: None,
  FCS: 16, Framing: G704
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
  DTE statistics:
    Enquiries sent           : 43186
    Full enquiries sent      : 8515
    Enquiry responses received : 43185
    Full enquiry responses received : 8515
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 0

```

```

Nonmatching DCE-end DLCIs:
    2
Hold-times      : Up 0 ms, Down 0 ms
Last flapped   : 2002-05-23 17:02:59 PDT (17:23:45 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          592          48 bps
  Output bytes :          644          48 bps
  Input packets:          46           0 pps
  Output packets:          46           0 pps
Input errors:
  Errors: 0, Drops: 9, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 11, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0
DS1 alarms : None
DS1 defects : None
SDH alarms : None
SDH defects : None
E1 media:
  Seconds      Count  State
SEF            0        0 OK
BEE            0        0 OK
AIS           124        1 OK
LOF           124        1 OK
LOS            0        0 OK
YELLOW         0        0 OK
BPV            0         0
EXZ            0         0
LCV            0         0
PCV            0         0
CS             0         0
FEBE           0         0
LES           124
ES            125
SES           124
SEFS          124
BES            0
UAS            37
Interface transmit queues:
  B/W  WRR  Packets  Bytes  Drops  Errors
Queue0  95  95        0      0      0      0
Queue1   5   5      529    6348    0      0
HDLC configuration:
  Giant threshold: 0, Runt threshold: 0
  Timeslots      : All active
  Line encoding: HDB3
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SDH PHY:
  Seconds      Count  State
PLL Lock       0        0 OK
PHY Light      0        0 OK
SDH regenerator section:
  RS-BIP8       0        0
OOF            125        1 OK
LOS            125        1 OK
LOF            125        1 OK
RS-ES          125
RS-SES         125
RS-SEFS        125

```

## SDH multiplex section:

MS-BIP24	0	0
MS-FEBE	0	0
MS-FERF	0	0 OK
MS-AIS	125	1 OK
BERR-SF	0	0 OK
BERR-SD	0	0 OK
MS-ES	125	
MS-SES	125	
MS-UAS	115	
MS-ES-FE	0	
MS-SES-FE	0	
MS-UAS-FE	0	

## SDH path:

HP-BIP8	0	0
HP-FEBE	0	0
HP-LOP	0	0 OK
HP-AIS	125	1 OK
HP-FERF	0	0 OK
HP-UNEQ	0	0 OK
HP-PLM	125	1 OK
HP-ES	125	
HP-SES	125	
HP-UAS	115	
HP-ES-FE	0	
HP-SES-FE	0	
HP-UAS-FE	0	

## SDH tu:

TU-BIP2	0	0
TU-FEBE	124	1
TU-LOP	0	0 OK
TU-AIS	124	1 OK
TU-FERF	124	1 OK
TU-UNEQ	0	0 OK
TU-PLM	124	1 OK
TU-ES	125	
TU-SES	125	
TU-UAS	115	
TU-ES-FE	0	
TU-SES-FE	0	
TU-UAS-FE	0	

## Received SDH overhead:

F1	: 0x00, J0	: 0x00, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0x02, C2(cmp)	: 0x02, F2	: 0x00
Z3	: 0x00, Z4	: 0x00, S1(cmp)	: 0x00, V5	: 0x02
V5(cmp)	: 0x02			

## Transmitted SDH overhead:

F1	: 0x00, J0	: 0x00, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0x02, F2	: 0x00, Z3	: 0x00
Z4	: 0x00, V5	: 0x02		

## Received path trace:

00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....

## Transmitted path trace:

00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....

## Packet Forwarding Engine configuration:

Destination slot: 1, PLP byte: 2 (0x07)

## CoS information:

CoS transmit queue	%	Bandwidth bps	%	Buffer usec	Priority	Limit
0 best-effort	95	1945600	95	0	low	none
3 network-control	5	102400	5	0	low	none

```

Logical interface e1-1/0/0:1.0 (Index 10) (SNMP ifIndex 369) (Generation 496)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 1500, Generation: 575, Route table: 0
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
      Generation: 975
    DLCI 100
      Flags: Active, Dce-configured
      Total down time: 0 sec, Last down: Never
      Traffic statistics:
        Input bytes :                0
        Output bytes :                0
        Input packets:                0
        Output packets:                0
    DLCI statistics:
      Active DLCI :2 Inactive DLCI : 0

```

## show interfaces (Channelized T1 IQ)

<b>Syntax</b>	<pre>show interfaces (ct1-fpc/pic/port   type-fpc/pic/port&lt;:channel&gt;&lt;:channel&gt;) &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display status information about the specified channelized T1 IQ interface.
<b>Options</b>	<p><b>type-fpc/pic/port:channel</b>—Interface type. With optional corresponding channel levels, the interface type can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>type-fpc/pic/port</b>—For the physical channelized T1 IQ interface, <b>type</b> is <b>ct1</b>.</li> <li>• <b>type-fpc/pic/port:channel</b>—For the clear channel, <b>type</b> is <b>t1</b>. At the first level of channelization, <b>type</b> can be <b>ct1</b> or <b>t1</b>.</li> <li>• <b>type-fpc/pic/port:channel:channel</b>—At the second level of channelization, <b>type</b> can be <b>ds</b>.</li> </ul> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index snmp-index</b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show interfaces extensive (CT1) on page 1319</a></p> <p><a href="#">show interfaces extensive (T1) on page 1320</a></p> <p><a href="#">show interfaces extensive (DS0) on page 1321</a></p>
<b>Output Fields</b>	Table 64 on page 1312 lists the output fields for the <b>show interfaces</b> (Channelized T1 IQ and T3 IQ interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source. It can be <b>Internal</b> or <b>External</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16</b> bits.	All levels
<b>Framing</b>	Physical layer framing format used on the link. It can be <b>ESF</b> or <b>SF</b> . The default is <b>ESF</b> .	All levels
<b>Parent</b>	Name and interface index of the interface to which a particular child interface belongs. <b>None</b> indicates that this interface is the top level.	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive settings	Configured settings for keepalives. <ul style="list-style-type: none"> <li><b>interval seconds</b>—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds.</li> <li><b>down-count number</b>—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3.</li> <li><b>up-count number</b>—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1.</li> </ul>	detail extensive none
Keepalive statistics	Information about keepalive packets. <ul style="list-style-type: none"> <li><b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li><b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>.</li> </ul> </li> <li><b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li><b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>.</li> </ul> </li> </ul>	detail extensive none
LMI settings	(Frame Relay) Settings for Local Management Interface (LMI) can be either <b>ANSI LMI settings</b> or <b>ITU LMI settings</b> . ANSI LMI settings is the default. The format is (ANSI or ITU) LMI settings: <i>value, value... xx seconds</i> , where <i>value</i> can be: <ul style="list-style-type: none"> <li><b>n391dte</b>—DTE full status polling interval (1–255)</li> <li><b>n392dce</b>—DCE error threshold (1–10)</li> <li><b>n392dte</b>—DTE error threshold (1–10)</li> <li><b>n393dce</b>—DCE monitored event count (1–10)</li> <li><b>n393dte</b>—DTE monitored event count (1–10)</li> <li><b>t391dte</b>—DTE polling timer (5–30 seconds)</li> <li><b>t392dce</b>—DCE polling verification timer (5–30 seconds)</li> </ul>	detail extensive none
LMI	(Frame Relay) LMI packet statistics: <ul style="list-style-type: none"> <li><b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: nn (last seen hh:mm:ss ago)</b>.</li> <li><b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: nn (last sent hh:mm:ss ago)</b>.</li> </ul>	detail extensive none
DTE statistics	(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communication equipment (DCE): <ul style="list-style-type: none"> <li><b>Enquiries sent</b>—Number of link status enquiries sent from the DTE to the DCE.</li> <li><b>Full enquiries sent</b>—Number of full enquiries sent from the DTE to the DCE.</li> <li><b>Enquiry responses received</b>—Number of enquiry responses received by the DTE from the DCE.</li> <li><b>Full enquiry responses received</b>—Number of full enquiry responses sent from the DTE to the DCE.</li> </ul>	detail extensive none

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>DCE statistics</b>	(Frame Relay) Statistics about messages transmitted from the DCE to the DTE: <ul style="list-style-type: none"> <li>• <b>Enquiries received</b>—Number of enquiries received by the DCE from the DTE.</li> <li>• <b>Full enquiries received</b>—Number of full enquiries received by the DCE from the DTE.</li> <li>• <b>Enquiry responses sent</b>—Number of enquiry responses sent from the DCE to the DTE.</li> <li>• <b>Full enquiry responses sent</b>—Number of full enquiry responses sent from the DCE to the DTE.</li> </ul>	<b>detail extensive none</b>
<b>Common statistics</b>	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> <li>• <b>Unknown messages received</b>—Number of received packets that do not fall into any category.</li> <li>• <b>Asynchronous updates received</b>—Number of link status peer changes received.</li> <li>• <b>Out-of-sequence packets received</b>—Number of packets for which the sequence of the packets received is different from the expected sequence.</li> <li>• <b>Keepalive responses timedout</b>—Number of keepalive responses that timed out when no LMI packet was reported for <b>n392dte</b> or <b>n393dce</b> intervals. (See <b>LMI settings</b>.)</li> </ul>	<b>detail extensive none</b>
<b>Nonmatching DCE-end DLCIs</b>	(Frame Relay) Number of DLCIs configured from the DCE, displayed only from the DTE.	<b>detail extensive none</b>
<b>LCP state</b>	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—LCP is not configured on the interface.</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>NCP state</b>	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—NCP is not configured on the interface.</li> <li>• <b>Opened</b>—NCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CHAP state</b>	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> <li>• <b>Chap-Chal-received</b>—Challenge was received but response not yet sent.</li> <li>• <b>Chap-Chal-sent</b>—Challenge was sent.</li> <li>• <b>Chap-Resp-received</b>—Response was received for the challenge sent, but CHAP has not yet moved into the <b>Success</b> state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response was sent for the challenge received.</li> <li>• <b>Closed</b>—CHAP authentication is incomplete.</li> <li>• <b>Failure</b>—CHAP authentication failed.</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Success</b>—CHAP authentication was successful.</li> </ul>	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Counter increments when the software could not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Count of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Count of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>SRAM errors</b>—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC. If the value in this field increments, the PIC is malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Queue counters</b>	CoS queue number and its associated user-configured forwarding class name.  <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>DS1 alarms DS1 defects</b>	Media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface.  <ul style="list-style-type: none"> <li>• <b>LOS</b>—Loss of signal.</li> <li>• <b>LOF</b>—Loss of frame.</li> <li>• <b>AIS</b>—Alarm indication signal.</li> <li>• <b>YLW</b>—Yellow alarm. Indicates errors at the remote site receiver.</li> </ul>	<b>detail extensive none</b>
<b>T1 media</b>	Counts of T1 media-specific errors.  <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>The T1 media-specific error types can be:</p> <ul style="list-style-type: none"> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>BEE</b>—Bit error event</li> <li>• <b>BES</b>—Bit error seconds</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>CS</b>—Carrier state</li> <li>• <b>ES</b>—Errored seconds</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>FEBE</b>—Far-end block error</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>PCV</b>—Pulse code violation</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>SEFS</b>—Severely errored framing seconds (section)</li> <li>• <b>SES</b>—Severely errored seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> </ul>	<b>extensive</b>
<b>Line encoding</b>	Line encoding used: <b>B8ZS</b> or <b>AMI</b> .	All levels
<b>Buildout</b>	Buildout setting.	All levels

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>HDLC configuration</b>	Information about the HDLC configuration. <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> <li>• <b>Timeslots</b>—Configured time slots for the interface.</li> <li>• <b>Line encoding</b>—Line encoding used: <b>B8ZS</b> or <b>AMI</b>.</li> <li>• <b>Byte encoding</b>—Byte encoding used: <b>Nx64K</b> or <b>Nx56K</b>.</li> <li>• <b>Data inversion</b>—HDLC data inversion setting: <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Idle cycle Flag</b>—Idle cycle flags.</li> <li>• <b>Start end Flag</b>—Start and end flag.</li> </ul>	<b>extensive</b>
<b>DSO or DS1 BERT configuration</b>	BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface. <ul style="list-style-type: none"> <li>• <b>BERT time period</b>—Configured total time period that the BERT is to run.</li> <li>• <b>Elapsed</b>—Actual time elapsed since the start of the BERT (in seconds).</li> <li>• <b>Induced error rate</b>—Configured rate at which the bit errors are induced in the BERT pattern.</li> <li>• <b>Algorithm</b>—Type of algorithm selected for the BERT.</li> </ul>	<b>detail extensive none</b>
<b>Packet Forwarding Engine configuration</b>	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	<b>All levels</b>
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface; values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>All levels</b>
<b>Encapsulation</b>	Encapsulation on the logical interface.	<b>All levels</b>
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , or <b>mpls</b> .	<b>detail extensive none</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

Table 64: Channelized T1 IQ and T3 IQ show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Route table</b>	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive</b>
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>DLCI</b>	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: <b>Flags</b> , <b>Total down time</b> , <b>Last down</b> , and <b>Traffic statistics</b> . <b>Flags</b> is one or more of the following: <ul style="list-style-type: none"> <li>• <b>Active</b>—Set when the link is active and the DTE and DCE are exchanging information.</li> <li>• <b>Down</b>—Set when the link is active, but no information is received from the DCE.</li> <li>• <b>Unconfigured</b>—Set when the corresponding DLCI in the DCE is not configured.</li> <li>• <b>Configured</b>—Set when the corresponding DLCI in the DCE is configured.</li> <li>• <b>Dce-configured</b>—Displayed when the command is issued from the DTE.</li> </ul>	<b>detail extensive none</b>
<b>DLCI statistics</b>	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> <li>• <b>Active DLCI</b>—Number of active DLCIs.</li> <li>• <b>Inactive DLCI</b>—Number of inactive DLCIs.</li> </ul>	<b>detail extensive none</b>

## Sample Output

### show interfaces extensive (CTI)

```

user@host> show interfaces extensive ct1-0/1/1
Physical interface: ct1-0/1/1, Enabled, Physical link is Up
Interface index: 145, SNMP ifIndex: 32, Generation: 28
Link-level type: Controller, Clocking: Internal, Speed: T1,
Loopback: None, Framing: ESF, Parent: None
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps 16384
Link flags     : None
Hold-times    : Up 0 ms, Down 0 ms
CoS queues    : 4 supported
Last flapped   : 2005-08-17 11:47:09 PDT (1d 03:38 ago)

```

```

Statistics last cleared: 2005-08-18 15:25:37 PDT (00:00:27 ago)
DS1  alarms   : None
DS1  defects  : None
T1  media:           Seconds      Count  State
SEF                      0          0  OK
BEE                      0          0  OK
AIS                      0          0  OK
LOF                      0          0  OK
LOS                      0          0  OK
YELLOW                   0          0  OK
BPV                      0          0
EXZ                      0          0
LCV                      0          0
PCV                      0          0
CS                       0          0
LES                      0
ES                       0
SES                      0
SEFS                     0
BES                      0
UAS                      0
Line encoding: B8ZS
Buildout      : 0 to 132 feet
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)

```

### show interfaces extensive (T1)

```

user@host> show interfaces extensive t1-0/2/0
Physical interface: t1-0/2/0, Enabled, Physical link is Up
  Interface index: 161, SNMP ifIndex: 33, Generation: 61
  Link-level type: PPP, MTU: 1504, Speed: T1, Loopback: None, FCS: 16,
  Parent: ct1-0/2/0 Interface index 148
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timeout : 0
Nonmatching DCE-end DLCIs:
  2
  Hold-times      : Up 0 ms, Down 0 ms
  CoS queues      : 4 supported
  Last flapped    : 2005-09-07 15:43:47 PDT (00:00:06 ago)

```

```

Statistics last cleared: Never
Traffic statistics:
  Input bytes :          0          0 bps
  Output bytes :         14          0 bps
  Input packets:          0          0 pps
  Output packets:         1          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0,
  MTU errors: 0, Resource errors: 0
Queue counters:      Queued packets  Transmitted packets  Dropped packets
  0 best-effort      0              0                  0
  1 expedited-fo     0              0                  0
  2 assured-forw     0              0                  0
  3 network-cont     1              1                  0
DS1  alarms   : None
DS1  defects  : None
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 1514, Runt threshold: 2
  Timeslots      : All active
  Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag:
  flags, Start end flag: shared
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x00)

```

### show interfaces extensive (DSO)

```

user@host> show interfaces extensive ds-0/1/0:0
Physical interface: ds-0/1/0:1, Enabled, Physical link is Up
  Interface index: 157, SNMP ifIndex: 52, Generation: 46
  Link-level type: Frame-Relay, PPP, MTU: 1504, Clocking: Internal,
  Speed: 640kbps, Loopback: None, FCS:16,
  Parent: ct1-0/1/0 Interface index 143
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 51700 (00:00:02 ago), Output: 51701 (00:00:02 ago)
DTE statistics:
  Enquiries sent           : 43186
  Full enquiries sent      : 8515
  Enquiry responses received : 43185
  Full enquiry responses received : 8515
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 0
Nonmatching DCE-end DLCIs:
  2

```

```

Hold-times      : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 8 (last seen 00:00:12 ago)
  Output: 8 (last sent 00:00:07 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Not-configured
CoS queues      : 4 supported
Last flapped    : 2005-08-18 15:23:46 PDT (00:03:17 ago)
Statistics last cleared: 2005-08-18 15:25:37 PDT (00:01:26 ago)
Traffic statistics:
  Input bytes :          840          0 bps
  Output bytes :          912          0 bps
  Input packets:           25          0 pps
  Output packets:          26          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0,
  MTU errors: 0, Resource errors: 0
Queue counters:      Queued packets  Transmitted packets  Dropped packets
0 best-effort        0                0                0
1 expedited-fo       0                0                0
2 assured-forw       0                0                0
3 network-cont       26                26                0
HDLC configuration:
  Giant threshold: 1514, Runt threshold: 2
  Timeslots      : 1-10
  Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,
  Start end flag: shared
DS0 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 4 (0x00)
Logical interface ds-0/1/0:1.0 (Index 67) (SNMP ifIndex 53) (Generation 11)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 1500, Generation: 26, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 11.11.11.0/30, Local: 11.11.11.2, Broadcast: 11.11.11.3,
    Generation: 39
  DLCI 100
    Flags: Active, Dce-configured
    Total down time: 0 sec, Last down: Never
    Traffic statistics:
      Input bytes :          0
      Output bytes :          0
      Input packets:         0
      Output packets:        0
  DLCI statistics:
    Active DLCI :2 Inactive DLCI : 0
...

```

## show interfaces (Channelized T3 IQ)

<b>Syntax</b>	<pre>show interfaces (ct3-fpc/pic/port   type-fpc/pic/port&lt;:channel&gt;&lt;:channel&gt;) &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display status information about the specified channelized T3 IQ interface.
<b>Options</b>	<p><b>type-fpc/pic/port:channel</b>—Interface type. With optional corresponding channel levels, the interface type can be one of the following:</p> <ul style="list-style-type: none"> <li>• <b>type-fpc/pic/port</b>—For the physical channelized T3 IQ interface, <b>type</b> is <b>ct3</b>.</li> <li>• <b>type-fpc/pic/port:channel</b>—For the clear channel, <b>type</b> is <b>t3</b>. At the first level of channelization, <b>type</b> can be <b>ct1</b> or <b>t1</b>.</li> <li>• <b>type-fpc/pic/port:channel:channel</b>—At the second level of channelization, <b>type</b> is <b>ds</b>.</li> </ul> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index snmp-index</b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show interfaces extensive (Channelized T3 IQ) (Physical) on page 1324</a></p> <p><a href="#">show interfaces extensive (Channelized T1 on Channelized T3 IQ) on page 1324</a></p> <p><a href="#">show interfaces extensive (DSO on Channelized T3 IQ) on page 1324</a></p>
<b>Output Fields</b>	See the output field table for the <a href="#">show interfaces (Channelized T1 IQ)</a> command.

## Sample Output

### show interfaces extensive (Channelized T3 IQ) (Physical)

```
user@host> show interfaces extensive ct3-0/0/1
Physical interface: ct3-0/0/1, Enabled, Physical link is Up
  Interface index: 30, SNMP ifIndex: 317, Generation: 29
  Link-level type: Controller, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

### show interfaces extensive (Channelized T1 on Channelized T3 IQ)

```
user@host> show interfaces extensive ct1-0/0/1:2
Physical interface: ct1-0/0/1:2, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 1505, Generation: 174
  Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF, Parent: ct3-0/0/1 (Index 32)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
...
```

### show interfaces extensive (DSO on Channelized T3 IQ)

```
user@host> show interfaces extensive ds-0/0/1:2:1
Physical interface: ds-0/0/1:2:1, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 1563, Generation: 175
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: None, FCS: 16, Parent: ct1-0/0/1:2(Index 175)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
...
```

## show interfaces (Discard)

<b>Syntax</b>	<pre>show interfaces dsc &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display status information about the specified discard interface.
<b>Options</b>	<p><b>dsc</b>—Display standard information about the specified discard interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—This option is not relevant for the discard interface and always shows a value of 0.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) This option is not relevant for the discard interface and always shows a value of 0.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show interfaces (ATM) on page 1202</a></li> <li>• <a href="#">show interfaces routing</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show interfaces dsc on page 1328</a> <a href="#">show interfaces dsc brief on page 1328</a> <a href="#">show interfaces dsc detail on page 1328</a> <a href="#">show interfaces dsc extensive on page 1329</a>
<b>Output Fields</b>	Table 65 on page 1325 lists the output fields for the <b>show interfaces</b> (discard) command. Output fields are listed in the approximate order in which they appear.

Table 65: Discard show interfaces Output Fields

Field Name	Field Description	Level of Output
------------	-------------------	-----------------

Physical Interface

Table 65: Discard show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Physical interface</b>	Name of the physical interface, whether the interface is enabled, and the state of the physical interface: <b>Up</b> or <b>Down</b> .	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive</b> none
<b>Type</b>	Type of interface. <b>Software-Pseudo</b> indicates a standard software interface with no associated hardware device.	All levels
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source. It can be <b>Internal</b> or <b>External</b> .	<b>brief detail extensive</b>
<b>Speed</b>	Speed at which the interface is running.	<b>brief detail extensive</b>
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Link type</b>	Encapsulation being used on the physical interface.	<b>detail extensive</b>
<b>Link flags</b>	Information about the link. Possible values are described in the "Link Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	<b>detail extensive</b>
<b>Physical info</b>	Information about the physical interface.	<b>detail extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down. Value is in milliseconds.	<b>detail extensive</b>
<b>Current address, Hardware address</b>	Configured MAC address and hardware MAC address.	<b>detail extensive</b>
<b>Alternate link address</b>	Backup address of the link.	<b>detail extensive</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive</b> none
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>

Table 65: Discard show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>detail extensive</b>
<b>Output errors</b>	<p>(Extensive only) Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>detail extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

Table 65: Discard show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , or <b>mpls</b> .	All levels
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .	<b>detail extensive</b>

## Sample Output

### show interfaces dsc

```

user@host> show interfaces dsc
Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5
  Type: Software-Pseudo, MTU: Unlimited
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
  Last flapped   : Never
    Input packets : 0
    Output packets: 0

  Logical interface dsc.0 (Index 66) (SNMP ifIndex 235)
    Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
    Protocol inet, MTU: Unlimited
    Flags: None

```

### show interfaces dsc brief

```

user@host> show interfaces dsc brief
Physical interface: dsc, Enabled, Physical link is Up
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
  Unspecified, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps

  Logical interface dsc.0
    Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
    inet

```

### show interfaces dsc detail

```

user@host> show interfaces dsc detail

```

```

Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5, Generation: 9
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
Unspecified, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Unspecified
  Link flags     : None
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0

Logical interface dsc.0 (Index 66) (SNMP ifIndex 235) (Generation 6)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
  Protocol inet, MTU: Unlimited, Generation: 14, Route table: 0
  Flags: None

```

#### show interfaces dsc extensive

```

user@host> show interfaces dsc extensive
Physical interface: dsc, Enabled, Physical link is Up
  Interface index: 5, SNMP ifIndex: 5, Generation: 9
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: Unlimited, Clocking:
Unspecified, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Unspecified
  Link flags     : None
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
    Resource errors: 0
Logical interface dsc.0 (Index 66) (SNMP ifIndex 235) (Generation 6)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Unspecified
  Protocol inet, MTU: Unlimited, Generation: 14, Route table: 0

```

## show interfaces (Fast Ethernet)

**Syntax** `show interfaces interface-type`  
`<brief | detail | extensive | terse>`  
`<descriptions>`  
`<media>`  
`<snmp-index snmp-index>`  
`<statistics>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display status information about the specified Fast Ethernet interface.

**Options** *interface-type*—On M Series and T Series routers, the interface type is **fe-fpc/pic/port**.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index *snmp-index***—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

**Required Privilege Level** view

**List of Sample Output** [show interfaces \(Fast Ethernet\) on page 1344](#)  
[show interfaces brief \(Fast Ethernet\) on page 1344](#)  
[show interfaces detail \(Fast Ethernet\) on page 1344](#)  
[show interfaces extensive \(Fast Ethernet\) on page 1345](#)

**Output Fields** [Table 66 on page 1330](#) lists the output fields for the **show interfaces (Fast Ethernet)** command. Output fields are listed in the approximate order in which they appear.

*Table 66: show interfaces Fast Ethernet Output Fields*

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Link-mode</b>	Type of link connection configured for the physical interface: <b>Full-duplex</b> or <b>Half-duplex</b>	<b>extensive</b>
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>LAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
<b>WAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
<b>Unidirectional</b>	Unidirectional link mode status for 10-Gigabit Ethernet interface: <b>Enabled</b> or <b>Disabled</b> for parent interface; <b>Rx-only</b> or <b>Tx-only</b> for child interfaces.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the "Links Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Wavelength</b>	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Frequency</b>	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
<b>CoS queues</b>	Number of CoS queues configured.	detail extensive none
<b>Schedulers</b>	(GigabitEthernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	extensive
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
<b>Current address</b>	Configured MAC address.	detail extensive none
<b>Hardware address</b>	Hardware MAC address.	detail extensive none
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	detail extensive none
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output Rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	detail extensive
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the <a href="#">show interfaces</a> command.</p>	detail extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	<p>Total number of egress queues supported on the specified interface.</p> <p><b>NOTE:</b> In DPCs that are not of the enhanced type, such as DPC 40x 1GE R, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the <b>show interfaces</b> command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	<b>detail extensive</b>
<b>Queue counters (Egress)</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Ingress queues</b>	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	<b>extensive</b>
<b>Queue counters (Ingress)</b>	CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>extensive</b>
<b>Active alarms and Active defects</b>	Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the routing device configuration, an alarm can ring the red or yellow alarm bell on the routing device, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b> . <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>
<b>OTN FEC statistics</b>	The forward error correction (FEC) counters provide the following statistics: <ul style="list-style-type: none"> <li>• <b>Corrected Errors</b>—The count of corrected errors in the last second.</li> <li>• <b>Corrected Error Ratio</b>—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits.</li> </ul>	
<b>PCS statistics</b>	(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device. <ul style="list-style-type: none"> <li>• <b>Bit errors</b>—The number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode.</li> <li>• <b>Errored blocks</b>—The number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode.</li> </ul>	<b>detail extensive</b>

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the <a href="#">show interfaces</a> command.</li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of frames that exceed 1518 octets.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Filter statistics</b>	<p><b>Receive</b> and <b>Transmit</b> statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the routing device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local routing device (which the routing device is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0.</li> </ul>	<b>extensive</b>
<b>PMA PHY</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PHY Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	<b>extensive</b>

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>WIS section</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>
<b>WIS line</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>

Table 66: *show interfaces Fast Ethernet Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>WIS path</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner:</b> <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the attached Ethernet device, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is <b>None</b>. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the link partner: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul>	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other routing device manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the routing device at the other end of the fiber. The transmitted path trace value is the message that this routing device transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 66: *show interfaces Fast Ethernet Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>CoS information</b>	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>VLAN-Tag</b>	<p>Rewrite profile applied to incoming or outgoing frames on the outer (<b>Out</b>) VLAN tag or for both the outer and inner (<b>In</b>) VLAN tags.</p> <ul style="list-style-type: none"> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li>• <b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information.</li> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li>• <b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li>• <b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value.</li> <li>• <b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li>• <b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul>	<b>brief detail extensive none</b>
<b>Demux:</b>	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> <li>• Source Family Inet</li> <li>• Destination Family Inet</li> </ul>	<b>detail extensive none</b>
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive none</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	<b>extensive</b>
<b>Local statistics</b>	Number and rate of bytes and packets destined to the routing device.	<b>extensive</b>

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.  <b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	<b>extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive none</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b>
<b>Donor interface</b>	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	<b>detail extensive none</b>
<b>Preferred source address</b>	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	<b>detail extensive none</b>
<b>Input Filters</b>	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Output Filters</b>	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>protocol-family</b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Flags</b>	Information about address flag (possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address of the logical interlace.	<b>detail extensive none</b>

Table 66: show interfaces Fast Ethernet Output Fields (continued)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

## Sample Output

### show interfaces (Fast Ethernet)

```

user@host> show interfaces fe-0/0/0
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:38, Hardware address: 00:00:5e:00:53:38
  Last flapped   : 2006-01-20 14:50:58 PST (2w4d 00:44 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Active alarms  : None
  Active defects : None
  Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198)
    Flags: SNMP-Traps Encapsulation: ENET2
    Protocol inet, MTU: 1500
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255

```

### show interfaces brief (Fast Ethernet)

```

user@host> show interfaces fe-0/0/0 brief
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Logical interface fe-0/0/0.0
    Flags: SNMP-Traps Encapsulation: ENET2
    inet 203.0.113.1/24

```

### show interfaces detail (Fast Ethernet)

```

user@host> show interfaces fe-0/0/0 detail
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22, Generation: 5391
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:38, Hardware address: 00:00:5e:00:53:3f:38
  Last flapped   : 2006-01-20 14:50:58 PST (2w4d 00:45 ago)
  Statistics last cleared: Never
  Traffic statistics:

```

```

Input bytes : 0 0 bps
Output bytes : 42 0 bps
Input packets: 0 0 pps
Output packets: 1 0 pps
Active alarms : None
Active defects : None
Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198) (Generation 67)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500, Generation: 105, Route table: 0
    Flags: Is-Primary, Mac-Validate-Strict
    Mac-Validate Failures: Packets: 0, Bytes: 0
    Addresses, Flags: Is-Preferred Is-Primary
    Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255,
    Generation: 136

```

### show interfaces extensive (Fast Ethernet)

```

user@host> show interfaces fe-0/0/0 extensive
Physical interface: fe-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 22, Generation: 5391
  Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed:
  100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues : 4 supported, 4 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:38, Hardware address: 00:00:5e:00:53:38
  Last flapped : 2006-01-20 14:50:58 PST (2w4d 00:46 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 42 0 bps
    Input packets: 0 0 pps
    Output packets: 1 0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    FIFO errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
    FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Active alarms : None
  Active defects : None
  MAC statistics:
    Receive Transmit
    Total octets 0 64
    Total packets 0 1
    Unicast packets 0 0
    Broadcast packets 0 1
    Multicast packets 0 0
    CRC/Align errors 0 0
    FIFO errors 0 0
    MAC control frames 0 0
    MAC pause frames 0 0
    Oversized frames 0
    Jabber frames 0
    Fragment frames 0
    VLAN tagged frames 0
    Code violations 0
  Filter statistics:

```

```
Input packet count          0
Input packet rejects        0
Input DA rejects            0
Input SA rejects            0
Output packet count         1
Output packet pad count     0
Output packet error count   0
CAM destination filters: 1, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
  Link partner: Full-duplex, Flow control: None, Remote fault: Ok
Local resolution:
Packet Forwarding Engine configuration:
Destination slot: 0
CoS information:
      Bandwidth      Buffer Priority  Limit
      %             bps  %           usec
0 best-effort      95    950000000  95         0    low  none
3 network-control  5     50000000    5         0    low  none
Logical interface fe-0/0/0.0 (Index 66) (SNMP ifIndex 198) (Generation 67)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 105, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255,

  Generation: 136
```

## show interfaces

<b>List of Syntax</b>	<a href="#">Syntax (Gigabit Ethernet) on page 1347</a> <a href="#">Syntax (10 Gigabit Ethernet) on page 1347</a> <a href="#">Syntax (SRX Series Devices) on page 1347</a>
<b>Syntax (Gigabit Ethernet)</b>	<pre>show interfaces ge-fpc/pic/port &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Syntax (10 Gigabit Ethernet)</b>	<pre>show interfaces xe-fpc/pic/port &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Syntax (SRX Series Devices)</b>	<pre>show interfaces (   &lt;interface-name&gt;   &lt;brief   detail   extensive   terse&gt;   &lt;controller interface-name&gt;    &lt;descriptions interface-name&gt;    &lt;destination-class (all   destination-class-name logical-interface-name)&gt;    &lt;diagnostics optics interface-name&gt;    &lt;far-end-interval interface-fpc/pic/port&gt;    &lt;filters interface-name&gt;    &lt;flow-statistics interface-name&gt;    &lt;interval interface-name&gt;    &lt;load-balancing (detail   interface-name)&gt;    &lt;mac-database mac-address mac-address&gt;    &lt;mc-ae id identifier unit number revertive-info&gt;    &lt;media interface-name&gt;    &lt;policers interface-name&gt;    &lt;queue both-ingress-egress egress forwarding-class forwarding-class ingress l2-statistics&gt;    &lt;redundancy (detail   interface-name)&gt;    &lt;routing brief detail summary interface-name&gt;    &lt;routing-instance (all   instance-name)&gt;    &lt;snmp-index snmp-index&gt;    &lt;source-class (all   destination-class-name logical-interface-name)&gt;    &lt;statistics interface-name&gt;    &lt;switch-port switch-port number&gt;    &lt;transport pm (all   optics   otn) (all   current   currentday   interval   previousday) (all       interface-name)&gt;    &lt;zone interface-name&gt; )</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4 for Gigabit interfaces.</p> <p>Command introduced in Junos OS Release 8.0 for 10 Gigabit interfaces.</p> <p>Command modified in Junos OS Release 9.5 for SRX Series devices.</p>

Command introduced in Junos OS Release 18.1 for Gigabit interfaces.

**Description** Display status information about the specified Gigabit Ethernet interface.

(M320, M120, MX Series, and T Series routers only) Display status information about the specified 10-Gigabit Ethernet interface.

Display the IPv6 interface traffic statistics about the specified Gigabit Ethernet interface for MX series routers. The input and output bytes (bps) and packets (pps) rates are not displayed for IFD and local traffic.

Display status information and statistics about interfaces on SRX Series appliance running Junos OS.



**NOTE:** On SRX Series appliances, on configuring identical IPs on a single interface, you will not see a warning message; instead, you will see a syslog message.

**Options** For Gigabit interfaces:

***ge-fpc/pic/port***—Display standard information about the specified Gigabit Ethernet interface.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index *snmp-index***—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

For 10 Gigabit interfaces:

***xe-fpc/pic/port***—Display standard information about the specified 10-Gigabit Ethernet interface.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index *snmp-index***—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

For SRX interfaces:

- **interface-name**—(Optional) Display standard information about the specified interface. Following is a list of typical interface names. Replace *pim* with the PIM slot and port with the port number.
  - **at-*pim*/0/*port***—ATM-over-ADSL or ATM-over-SHDSL interface.
  - **ce1-*pim*/0/ *port***—Channelized E1 interface.
  - **cl-0/0/8**—3G wireless modem interface for SRX320 devices.
  - **ct1-*pim*/0/*port***—Channelized T1 interface.
  - **dl0**—Dialer Interface for initiating ISDN and USB modem connections.
  - **e1-*pim*/0/*port***—E1 interface.
  - **e3-*pim*/0/*port***—E3 interface.
  - **fe-*pim*/0/*port***—Fast Ethernet interface.
  - **ge-*pim*/0/*port***—Gigabit Ethernet interface.
  - **se-*pim*/0/*port***—Serial interface.
  - **t1-*pim*/0/*port***—T1 (also called DS1) interface.
  - **t3-*pim*/0/*port***—T3 (also called DS3) interface.
  - **wx-slot/0/0**—WAN acceleration interface, for the WXC Integrated Services Module (ISM 200).
- **interface-name**—(Optional) Display standard information about the specified interface. Following is a list of typical interface names. Replace *pim* with the PIM slot and port with the port number.
  - **at-*pim*/0/*port***—ATM-over-ADSL or ATM-over-SHDSL interface.
  - **ce1-*pim*/0/ *port***—Channelized E1 interface.
  - **cl-0/0/8**—3G wireless modem interface for SRX320 devices.
  - **ct1-*pim*/0/*port***—Channelized T1 interface.
  - **dl0**—Dialer Interface for initiating ISDN and USB modem connections.
  - **e1-*pim*/0/*port***—E1 interface.
  - **e3-*pim*/0/*port***—E3 interface.
  - **fe-*pim*/0/*port***—Fast Ethernet interface.
  - **ge-*pim*/0/*port***—Gigabit Ethernet interface.
  - **se-*pim*/0/*port***—Serial interface.
  - **t1-*pim*/0/*port***—T1 (also called DS1) interface.

- **t3-pim/0/port**—T3 (also called DS3) interface.
- **wx-slot/0/0**—WAN acceleration interface, for the WXC Integrated Services Module (ISM 200).

**Additional Information** In a logical system, this command displays information only about the logical interfaces and not about the physical interfaces.

**Required Privilege Level** view

**Related Documentation**

- *Understanding Layer 2 Interfaces on Security Devices*
- *Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration*
- *Verifying and Managing Configurations for Dynamic VLANs Based on Access-Line Identifiers*

**List of Sample Output**

[show interfaces \(Gigabit Ethernet\) on page 1388](#)

[show interfaces \(Gigabit Ethernet on MX Series Routers\) on page 1388](#)

[show interfaces \(link degrade status\) on page 1389](#)

[show interfaces extensive \(Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration\) on page 1389](#)

[show interfaces brief \(Gigabit Ethernet\) on page 1390](#)

[show interfaces detail \(Gigabit Ethernet\) on page 1390](#)

[show interfaces extensive \(Gigabit Ethernet IQ2\) on page 1392](#)

[show interfaces \(Gigabit Ethernet Unnumbered Interface\) on page 1395](#)

[show interfaces \(ACI Interface Set Configured\) on page 1395](#)

[show interfaces \(ALI Interface Set\) on page 1395](#)

[show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, IQ2\) on page 1396](#)

[show interfaces extensive \(10-Gigabit Ethernet, WAN PHY Mode\) on page 1398](#)

[show interfaces extensive \(10-Gigabit Ethernet, DWDM OTN PIC\) on page 1400](#)

[show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode\) on page 1402](#)

[show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only\) on page 1403](#)

[show interfaces extensive \(10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only\) on page 1404](#)

[Sample Output SRX Gigabit Ethernet on page 1405](#)

[Sample Output SRX Gigabit Ethernet on page 1405](#)

[show interfaces detail \(Gigabit Ethernet\) on page 1406](#)

[show interfaces statistics st0.0 detail on page 1408](#)

[show interfaces extensive \(Gigabit Ethernet\) on page 1409](#)

[show interfaces terse on page 1411](#)

[show interfaces controller \(Channelized E1 IQ with Logical E1\) on page 1412](#)

[show interfaces controller \(Channelized E1 IQ with Logical DSO\) on page 1412](#)

[show interfaces descriptions on page 1412](#)

[show interfaces destination-class all on page 1412](#)

[show interfaces diagnostics optics on page 1413](#)  
[show interfaces far-end-interval coc12-5/2/0 on page 1413](#)  
[show interfaces far-end-interval coc1-5/2/1:1 on page 1414](#)  
[show interfaces filters on page 1414](#)  
[show interfaces flow-statistics \(Gigabit Ethernet\) on page 1414](#)  
[show interfaces interval \(Channelized OC12\) on page 1415](#)  
[show interfaces interval \(E3\) on page 1416](#)  
[show interfaces interval \(SONET/SDH\) \(SRX devices\) on page 1416](#)  
[show interfaces load-balancing \(SRX devices\) on page 1416](#)  
[show interfaces load-balancing detail \(SRX devices\) on page 1417](#)  
[show interfaces mac-database \(All MAC Addresses on a Port SRX devices\) on page 1417](#)  
[show interfaces mac-database \(All MAC Addresses on a Service SRX devices\) on page 1417](#)  
[show interfaces mac-database mac-address on page 1418](#)  
[show interfaces mc-ae \(SRX devices\) on page 1418](#)  
[show interfaces media \(SONET/SDH\) on page 1418](#)  
[show interfaces policers \(SRX devices\) on page 1419](#)  
[show interfaces policers interface-name \(SRX devices\) on page 1419](#)  
[show interfaces queue \(SRX devices\) on page 1419](#)  
[show interfaces redundancy \(SRX devices\) on page 1420](#)  
[show interfaces redundancy \(Aggregated Ethernet SRX devices\) on page 1421](#)  
[show interfaces redundancy detail \(SRX devices\) on page 1421](#)  
[show interfaces routing brief \(SRX devices\) on page 1421](#)  
[show interfaces routing detail \(SRX devices\) on page 1421](#)  
[show interfaces routing-instance all \(SRX devices\) on page 1422](#)  
[show interfaces snmp-index \(SRX devices\) on page 1422](#)  
[show interfaces source-class all \(SRX devices\) on page 1422](#)  
[show interfaces statistics \(Fast Ethernet SRX devices\) on page 1423](#)  
[show interfaces switch-port \(SRX devices\) on page 1423](#)  
[show interfaces transport pm \(SRX devices\) on page 1424](#)  
[show security zones \(SRX devices\) on page 1425](#)

**Output Fields** [Table 56 on page 1127](#) describes the output fields for the **show interfaces** (Gigabit Ethernet) command. Output fields are listed in the approximate order in which they appear. For Gigabit Ethernet IQ and IQE PICs, the traffic and MAC statistics vary by interface type. For more information, see [Table 57 on page 1156](#).

*Table 67: show interfaces (Gigabit Ethernet) Output Fields*

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>LAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
<b>WAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
<b>Unidirectional</b>	Unidirectional link mode status for 10-Gigabit Ethernet interface: <b>Enabled</b> or <b>Disabled</b> for parent interface; <b>Rx-only</b> or <b>Tx-only</b> for child interfaces.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the "Links Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Wavelength</b>	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
<b>Frequency</b>	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Schedulers</b>	(Gigabit Ethernet intelligent queuing 2 [IQ2] interfaces only) Number of CoS schedulers configured.	<b>extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds (ms).	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive none</b>
<b>Hardware address</b>	Hardware MAC address.	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
<b>Output Rate</b>	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Egress account overhead</b>	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	<b>detail extensive</b>
<b>Ingress account overhead</b>	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p>Gigabit Ethernet and 10-Gigabit Ethernet IQ PICs count the overhead and CRC bytes.</p> <p>For Gigabit Ethernet IQ PICs, the input byte counts vary by interface type. For more information, see Table 31 under the <a href="#">show interfaces</a> command.</p>	<b>detail extensive</b>

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number must always be 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field must never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	<p>Total number of egress queues supported on the specified interface.</p> <p><b>NOTE:</b> In DPCs that are not of the enhanced type, such as DPC 40x 1GER, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the <b>show interfaces</b> command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	<b>detail extensive</b>

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Queue counters (Egress)	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>	detail extensive
Ingress queues	Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.	extensive
Queue counters (Ingress)	<p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	extensive
Active alarms and Active defects	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	detail extensive none
Interface transmit statistics	<p>(On MX Series devices) Status of the <b>interface-transmit-statistics</b> configuration: Enabled or Disabled.</p> <ul style="list-style-type: none"> <li>• <b>Enabled</b>—When the <b>interface-transmit-statistics</b> statement is included in the configuration. If this is configured, the interface statistics show the actual transmitted load on the interface.</li> <li>• <b>Disabled</b>—When the <b>interface-transmit-statistics</b> statement is not included in the configuration. If this is not configured, the interface statistics show the offered load on the interface.</li> </ul>	detail extensive
OTN FEC statistics	<p>The forward error correction (FEC) counters provide the following statistics:</p> <ul style="list-style-type: none"> <li>• <b>Corrected Errors</b>—Count of corrected errors in the last second.</li> <li>• <b>Corrected Error Ratio</b>—Corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits.</li> </ul>	detail extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>PCS statistics</b>	<p>(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device.</p> <ul style="list-style-type: none"> <li>• <b>Bit errors</b>—Number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode.</li> <li>• <b>Errored blocks</b>—Number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode.</li> </ul>	<b>detail extensive</b>
<b>Link Degrad</b>	<p>Shows the link degrade status of the physical link and the estimated bit error rates (BERs). This field is available only for the PICs supporting the physical link monitoring feature.</p> <ul style="list-style-type: none"> <li>• <b>Link Monitoring</b>—Indicates if physical link degrade monitoring is enabled on the interface. <ul style="list-style-type: none"> <li>• <b>Enable</b>—Indicates that link degrade monitoring has been enabled (using the <b>link-degrade-monitor</b> statement) on the interface.</li> <li>• <b>Disable</b>—Indicates that link degrade monitoring has not been enabled on the interface. If link degrade monitoring has not been enabled, the output does not show any related information, such as BER values and thresholds.</li> </ul> </li> <li>• <b>Link Degrad Set Threshold</b>—The BER threshold value at which the link is considered degraded and a corrective action is triggered.</li> <li>• <b>Link Degrad Clear Threshold</b>—The BER threshold value at which the degraded link is considered recovered and the corrective action applied to the interface is reverted.</li> <li>• <b>Estimated BER</b>—The estimated bit error rate.</li> <li>• <b>Link-degrade event</b>—Shows link degrade event information. <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Time (in seconds) elapsed after a link degrade event occurred.</li> <li>• <b>Count</b>—The number of link degrade events recorded.</li> <li>• <b>State</b>—Shows the link degrade status (example: <b>Defect Active</b>).</li> </ul> </li> </ul>	<b>detail extensive</b>

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
MAC statistics	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type. For more information, see Table 31 under the <code>show interfaces</code> command.</li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> <li>• Packet length exceeds 1518 octets, or</li> <li>• Packet length exceeds MRU</li> </ul> </li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not. <p><b>NOTE:</b> The 20-port Gigabit Ethernet MIC (MIC-3D-20GE-SFP) does not have hardware counters for VLAN frames. Therefore, the <b>VLAN tagged frames</b> field displays 0 when the <code>show interfaces</code> command is executed on a 20-port Gigabit Ethernet MIC. In other words, the number of VLAN tagged frames cannot be determined for the 20-port Gigabit Ethernet MIC.</p> </li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	extensive
OTN Received Overhead Bytes	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	extensive
OTN Transmitted Overhead Bytes	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet may enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field must increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field must not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields must be 0.</li> </ul>	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PHY Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	extensive

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>WIS section</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>
<b>WIS line</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>WIS path</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner</b>—Information from the remote Ethernet device: <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the link partner, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the link partner. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), <b>Symmetric/Asymmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> on transmit), and <b>None</b> (link partner does not support flow control).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the local Ethernet device: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the local device. For Gigabit Ethernet interfaces, advertised capabilities are <b>Symmetric/Asymmetric</b> (local device supports <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> on receive) and <b>None</b> (local device does not support flow control). Depending on the result of the negotiation with the link partner, local resolution flow control type will display <b>Symmetric</b> (local device supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (local device supports <b>PAUSE</b> on receive), and <b>None</b> (local device does not support flow control).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul>	extensive
Received path trace, Transmitted path trace	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>CoS information</b>	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
VLAN-Tag	<p>Rewrite profile applied to incoming or outgoing frames on the outer (<b>Out</b>) VLAN tag or for both the outer and inner (<b>In</b>) VLAN tags.</p> <ul style="list-style-type: none"> <li><b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li><b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li><b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user-specified VLAN tag information.</li> <li><b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li><b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li><b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li><b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user-specified VLAN tag value.</li> <li><b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li><b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul>	brief detail extensive none
Demux	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> <li>Source Family Inet</li> <li>Destination Family Inet</li> </ul>	detail extensive none
Encapsulation	Encapsulation on the logical interface.	All levels
ACI VLAN	<p>Information displayed for agent circuit identifier (ACI) interface set configured with the <b>agent-circuit-id</b> autoconfiguration stanza.</p> <p><b>Dynamic Profile</b>—Name of the dynamic profile that defines the ACI interface set.</p> <p>If configured, the ACI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ACI information.</p> <p><b>NOTE:</b> The ACI VLAN field is replaced with the Line Identity field when an ALI interface set is configured with the <b>line-identity</b> autoconfiguration stanza.</p>	brief detail extensive none
Line Identity	<p>Information displayed for access-line-identifier (ALI) interface sets configured with the <b>line-identity</b> autoconfiguration stanza.</p> <ul style="list-style-type: none"> <li><b>Dynamic Profile</b>—Name of the dynamic profile that defines the ALI interface set.</li> <li>Trusted option used to create the ALI interface set: <b>Circuit-id</b>, <b>Remote-id</b>, or <b>Accept-no-ids</b>. More than one option can be configured.</li> </ul> <p>If configured, the ALI interface set enables the underlying Ethernet interface to create dynamic VLAN subscriber interfaces based on ALI information.</p> <p><b>NOTE:</b> The Line Identity field is replaced with the ACI VLAN field when an ACI interface set is configured with the <b>agent-circuit-id</b> autoconfiguration stanza.</p>	detail

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Neighbor Discovery Protocol (NDP) Queue Statistics</b>	NDP statistics for protocol <b>inet6</b> under logical interface statistics. <ul style="list-style-type: none"> <li>• <b>Max nh cache</b>—Maximum interface neighbor discovery nexthop cache size.</li> <li>• <b>New hold nh limit</b>—Maximum number of new unresolved nexthops.</li> <li>• <b>Curr nh cnt</b>—Current number of resolved nexthops in the NDP queue.</li> <li>• <b>Curr new hold cnt</b>—Current number of unresolved nexthops in the NDP queue.</li> <li>• <b>NH drop cnt</b>—Number of NDP requests not serviced.</li> </ul>	All levels
<b>Dynamic Profile</b>	Name of the dynamic profile that was used to create this interface configured with a Point-to-Point Protocol over Ethernet (PPPoE) family.	<b>detail extensive none</b>
<b>Service Name Table</b>	Name of the service name table for the interface configured with a PPPoE family.	<b>detail extensive none</b>
<b>Max Sessions</b>	Maximum number of PPPoE logical interfaces that can be activated on the underlying interface.	<b>detail extensive none</b>
<b>Duplicate Protection</b>	State of PPPoE duplicate protection: <b>On</b> or <b>Off</b> . When duplicate protection is configured for the underlying interface, a dynamic PPPoE logical interface cannot be activated when an existing active logical interface is present for the same PPPoE client.	<b>detail extensive none</b>
<b>Direct Connect</b>	State of the configuration to ignore DSL Forum VSAs: <b>On</b> or <b>Off</b> . When configured, the router ignores any of these VSAs received from a directly connected CPE device on the interface.	<b>detail extensive none</b>
<b>AC Name</b>	Name of the access concentrator.	<b>detail extensive none</b>
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive none</b>
<b>Traffic statistics</b>	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	<b>extensive</b>
<b>Local statistics</b>	Number and rate of bytes and packets destined to the router.	<b>extensive</b>

Table 67: show interfaces (Gigabit Ethernet) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.  <b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	<b>extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive none</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b>
<b>Donor interface</b>	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	<b>detail extensive none</b>
<b>Preferred source address</b>	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	<b>detail extensive none</b>
<b>Input Filters</b>	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	<b>detail extensive</b>
<b>Output Filters</b>	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	<b>detail extensive</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b><i>protocol-family</i></b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Flags</b>	Information about the address flag. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>

Table 67: *show interfaces (Gigabit Ethernet) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Broadcast</b>	Broadcast address of the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

The following table describes the output fields for the **show interfaces** (10-Gigabit Ethernet) command.

Field Name	Field Description	Level of Output
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1114.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>LAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Local Area Network Physical Layer Device (LAN PHY) mode. LAN PHY allows 10-Gigabit Ethernet wide area links to use existing Ethernet applications.	All levels
<b>WAN-PHY mode</b>	10-Gigabit Ethernet interface operating in Wide Area Network Physical Layer Device (WAN PHY) mode. WAN PHY allows 10-Gigabit Ethernet wide area links to use fiber-optic cables and other devices intended for SONET/SDH.	All levels
<b>Unidirectional</b>	Unidirectional link mode status for 10-Gigabit Ethernet interface: <b>Enabled</b> or <b>Disabled</b> for parent interface; <b>Rx-only</b> or <b>Tx-only</b> for child interfaces.	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels

<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"><li>• <b>Online</b>—Autonegotiation is manually configured as online.</li><li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li></ul>	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Links Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Wavelength</b>	(10-Gigabit Ethernet dense wavelength-division multiplexing [DWDM] interfaces) Displays the configured wavelength, in nanometers (nm).	All levels
<b>Frequency</b>	(10-Gigabit Ethernet DWDM interfaces only) Displays the frequency associated with the configured wavelength, in terahertz (THz).	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive</b> none
<b>Schedulers</b>	(Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces only) Number of CoS schedulers configured.	<b>extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive</b> none
<b>Hardware address</b>	Hardware MAC address.	<b>detail extensive</b> none
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive</b> none
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps). The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified
<b>Output Rate</b>	Output rate in bps and pps. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Egress account overhead</b>	Layer 2 overhead in bytes that is accounted in the interface statistics for egress traffic.	<b>detail extensive</b>
<b>Ingress account overhead</b>	Layer 2 overhead in bytes that is accounted in the interface statistics for ingress traffic.	<b>detail extensive</b>

<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface. The value in this field also includes the Layer 2 overhead bytes for ingress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface. The value in this field also includes the Layer 2 overhead bytes for egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	<p>Total number of egress queues supported on the specified interface.</p> <p><b>NOTE:</b> In DPCs that are not of the enhanced type, such as DPC 40x 1GE R, DPCE 20x 1GE + 2x 10GE R, or DPCE 40x 1GE R, you might notice a discrepancy in the output of the <b>show interfaces</b> command because incoming packets might be counted in the Egress queues section of the output. This problem occurs on non-enhanced DPCs because the egress queue statistics are polled from IMQ (Inbound Message Queuing) block of the I-chip. The IMQ block does not differentiate between ingress and egress WAN traffic; as a result, the combined statistics are displayed in the egress queue counters on the Routing Engine. In a simple VPLS scenario, if there is no MAC entry in DMAC table (by sending unidirectional traffic), traffic is flooded and the input traffic is accounted in IMQ. For bidirectional traffic (MAC entry in DMAC table), if the outgoing interface is on the same I-chip then both ingress and egress statistics are counted in a combined way. If the outgoing interface is on a different I-chip or FPC, then only egress statistics are accounted in IMQ. This behavior is expected with non-enhanced DPCs</p>	<b>detail extensive</b>
<b>Queue counters (Egress)</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Ingress queues</b>	<p>Total number of ingress queues supported on the specified interface. Displayed on IQ2 interfaces.</p>	<b>extensive</b>

<b>Queue counters (Ingress)</b>	CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces. <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>extensive</b>
<b>Active alarms and Active defects</b>	Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the routing device configuration, an alarm can ring the red or yellow alarm bell on the routing device, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b> . <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>
<b>OTN alarms</b>	Active OTN alarms identified on the interface.	<b>detail extensive</b>
<b>OTN defects</b>	OTN defects received on the interface.	<b>detail extensive</b>
<b>OTN FEC Mode</b>	The FECmode configured on the interface. <ul style="list-style-type: none"> <li>• <b>efec</b>—Enhanced forward error correction (EFEC) is configured to detect and correct bit errors.</li> <li>• <b>gfec</b>—G.709 Forward error correction (GFEC) mode is configured to detect and correct bit errors.</li> <li>• <b>none</b>—FEC mode is not configured.</li> </ul>	<b>detail extensive</b>
<b>OTN Rate</b>	OTN mode. <ul style="list-style-type: none"> <li>• <b>fixed-stuff-bytes</b>—Fixed stuff bytes 11.0957 Gbps.</li> <li>• <b>no-fixed-stuff-bytes</b>—No fixed stuff bytes 11.0491 Gbps.</li> <li>• <b>pass-through</b>—Enable OTN passthrough mode.</li> <li>• <b>no-pass-through</b>—Do not enable OTN passthrough mode.</li> </ul>	<b>detail extensive</b>
<b>OTN Line Loopback</b>	Status of the line loopback, if configured for the DWDM OTN PIC. Its value can be: <b>enabled</b> or <b>disabled</b> .	<b>detail extensive</b>
<b>OTN FEC statistics</b>	The forward error correction (FEC) counters for the DWDM OTN PIC. <ul style="list-style-type: none"> <li>• <b>Corrected Errors</b>—The count of corrected errors in the last second.</li> <li>• <b>Corrected Error Ratio</b>—The corrected error ratio in the last 25 seconds. For example, 1e-7 is 1 error per 10 million bits.</li> </ul>	<b>detail extensive</b>
<b>OTN FEC alarms</b>	OTN FEC excessive or degraded error alarms triggered on the interface. <ul style="list-style-type: none"> <li>• <b>FEC Degrade</b>—OTU FEC Degrade defect.</li> <li>• <b>FEC Excessive</b>—OTU FEC Excessive Error defect.</li> </ul>	<b>detail extensive</b>

<b>OTN OC</b>	OTN OC defects triggered on the interface. <ul style="list-style-type: none"><li>• <b>LOS</b>—OC Loss of Signal defect.</li><li>• <b>LOF</b>—OC Loss of Frame defect.</li><li>• <b>LOM</b>—OC Loss of Multiframe defect.</li><li>• <b>Wavelength Lock</b>—OC Wavelength Lock defect.</li></ul>	<b>detail extensive</b>
<b>OTN OTU</b>	OTN OTU defects detected on the interface <ul style="list-style-type: none"><li>• <b>AIS</b>—OTN AIS alarm.</li><li>• <b>BDI</b>—OTN OTU BDI alarm.</li><li>• <b>IAE</b>—OTN OTU IAE alarm.</li><li>• <b>TTIM</b>—OTN OTU TTIM alarm.</li><li>• <b>SF</b>—OTN ODU bit error rate fault alarm.</li><li>• <b>SD</b>—OTN ODU bit error rate defect alarm.</li><li>• <b>TCA-ES</b>—OTN ODU ES threshold alarm.</li><li>• <b>TCA-SES</b>—OTN ODU SES threshold alarm.</li><li>• <b>TCA-UAS</b>—OTN ODU UAS threshold alarm.</li><li>• <b>TCA-BBE</b>—OTN ODU BBE threshold alarm.</li><li>• <b>BIP</b>—OTN ODU BIP threshold alarm.</li><li>• <b>BBE</b>—OTN OTU BBE threshold alarm.</li><li>• <b>ES</b>—OTN OTU ES threshold alarm.</li><li>• <b>SES</b>—OTN OTU SES threshold alarm.</li><li>• <b>UAS</b>—OTN OTU UAS threshold alarm.</li></ul>	<b>detail extensive</b>
<b>Received DAPI</b>	Destination Access Port Interface (DAPI) from which the packets were received.	<b>detail extensive</b>
<b>Received SAPI</b>	Source Access Port Interface (SAPI) from which the packets were received.	<b>detail extensive</b>
<b>Transmitted DAPI</b>	Destination Access Port Interface (DAPI) to which the packets were transmitted.	<b>detail extensive</b>
<b>Transmitted SAPI</b>	Source Access Port Interface (SAPI) to which the packets were transmitted.	<b>detail extensive</b>
<b>PCS statistics</b>	(10-Gigabit Ethernet interfaces) Displays Physical Coding Sublayer (PCS) fault conditions from the WAN PHY or the LAN PHY device. <ul style="list-style-type: none"><li>• <b>Bit errors</b>—The number of seconds during which at least one bit error rate (BER) occurred while the PCS receiver is operating in normal mode.</li><li>• <b>Errored blocks</b>—The number of seconds when at least one errored block occurred while the PCS receiver is operating in normal mode.</li></ul>	<b>detail extensive</b>

<b>MAC statistics</b>	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets and total packets</b>—Total number of octets and packets. For Gigabit Ethernet IQ PICs, the received octets count varies by interface type.</li> <li>• <b>Unicast packets, Broadcast packets, and Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of frames that exceed 1518 octets.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	<b>extensive</b>
<b>OTN Received Overhead Bytes</b>	APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58 Payload Type: 0x08	<b>extensive</b>
<b>OTN Transmitted Overhead Bytes</b>	APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00 Payload Type: 0x08	<b>extensive</b>

Filter statistics	<p><b>Receive and Transmit</b> statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the routing device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local routing device (which the routing device is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0.</li> </ul>	extensive
PMA PHY	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul>	extensive

<b>WIS section</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET error information:</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>
<b>WIS line</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>

<b>WIS path</b>	<p>(10-Gigabit Ethernet interfaces, WAN PHY mode) Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. Any state other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>
<b>Autonegotiation information</b>	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—<b>OK</b> when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner:</b> <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the attached Ethernet device, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is <b>None</b>. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the link partner: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul>	<b>extensive</b>

<b>Received path trace, Transmitted path trace</b>	(10-Gigabit Ethernet interfaces, WAN PHY mode) SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the routing device at the other end of the fiber. The transmitted path trace value is the message that this routing device transmits.	<b>extensive</b>
<b>Packet Forwarding Engine configuration</b>	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	<b>extensive</b>
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive</b> <b>none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive</b> <b>none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels

<b>VLAN-Tag</b>	<p>Rewrite profile applied to incoming or outgoing frames on the outer (<b>Out</b>) VLAN tag or for both the outer and inner (<b>In</b>) VLAN tags.</p> <ul style="list-style-type: none"> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li>• <b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user specified VLAN tag information.</li> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li>• <b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li>• <b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user specified VLAN tag value.</li> <li>• <b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li>• <b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul>	<b>brief detail</b> <b>extensive</b> none
<b>Demux:</b>	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> <li>• Source Family Inet</li> <li>• Destination Family Inet</li> </ul>	<b>detail</b> <b>extensive</b> none
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail</b> <b>extensive</b> none
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail</b> <b>extensive</b> none
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail</b> <b>extensive</b> none
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail</b> <b>extensive</b>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	<b>extensive</b>
<b>Local statistics</b>	Number and rate of bytes and packets destined to the routing device.	<b>extensive</b>

<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.  <b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	<b>extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, <b>0</b> refers to the routing table inet.0.	<b>detail extensive</b> <b>none</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b>
<b>Donor interface</b>	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	<b>detail extensive</b> <b>none</b>
<b>Preferred source address</b>	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	<b>detail extensive</b> <b>none</b>
<b>Input Filters</b>	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Output Filters</b>	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parenthesis next to all interfaces.	<b>detail extensive</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive</b> <b>none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b> <b>none</b>
<b><i>protocol-family</i></b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Flags</b>	Information about address flag (possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b> <b>none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive</b> <b>none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive</b> <b>none</b>
<b>Broadcast</b>	Broadcast address of the logical interlace.	<b>detail extensive</b> <b>none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

For Gigabit Ethernet IQ PICs, traffic and MAC statistics output varies. The following table describes the traffic and MAC statistics for two sample interfaces, each of which is sending traffic in packets of 500 bytes (including 478 bytes for the Layer 3 packet, 18 bytes for the Layer 2 VLAN traffic header, and 4 bytes for cyclic redundancy check [CRC] information). The **ge-0/3/0** interface is the inbound physical interface, and the **ge-0/0/0** interface is the outbound physical interface. On both interfaces, traffic is carried on logical unit **.50** (VLAN 50).

**Table 68: Gigabit and 10 Gigabit Ethernet IQ PIC Traffic and MAC Statistics by Interface Type**

Interface Type	Sample Command	Byte and Octet Counts Include	Comments
Inbound physical interface	<b>show interfaces ge-0/3/0 extensive</b>	Traffic statistics:  Input bytes: 496 bytes per packet, representing the Layer 2 packet  MAC statistics:  Received octets: 500 bytes per packet, representing the Layer 2 packet + 4 bytes	The additional 4 bytes are for the CRC.
Inbound logical interface	<b>show interfaces ge-0/3/0.50 extensive</b>	Traffic statistics:  Input bytes: 478 bytes per packet, representing the Layer 3 packet	
Outbound physical interface	<b>show interfaces ge-0/0/0 extensive</b>	Traffic statistics:  Input bytes: 490 bytes per packet, representing the Layer 3 packet + 12 bytes  MAC statistics:  Received octets: 478 bytes per packet, representing the Layer 3 packet	For input bytes, the additional 12 bytes include 6 bytes for the destination MAC address plus 4 bytes for VLAN plus 2 bytes for the Ethernet type.
Outbound logical interface	<b>show interfaces ge-0/0/0.50 extensive</b>	Traffic statistics:  Input bytes: 478 bytes per packet, representing the Layer 3 packet	

[Table 58 on page 1157](#) lists the output fields for the **show interfaces** command. Output fields are listed in the approximate order in which they appear.

Table 69: show interfaces Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface.	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Link mode</b>	Link mode: Full-duplex or Half-duplex.	
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>BPDU error</b>	Bridge protocol data unit (BPDU) error: Detected or None	
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Autonegotiation status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status: <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>	All levels
<b>Device flags</b>	Information about the physical device.	All levels
<b>Interface flags</b>	Information about the interface.	All levels
<b>Link flags</b>	Information about the physical link.	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive none</b>

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None
<b>Output Rate</b>	Output rate in bps and pps.	None
<b>Active alarms and Active defects</b>	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> </ul>	<b>detail extensive none</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	<p>Input errors on the interface.</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b>.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Output errors</b>	<p>Output errors on the interface.</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation; therefore, for Gigabit Ethernet PICs, this number must always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field must never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Ingress queues</b>	Total number of ingress queues supported on the specified interface.	<b>extensive</b>
<b>Queue counters and queue number</b>	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>MAC statistics</b>	<p>Receive and Transmit statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets and total packets</b>—Total number of octets and packets.</li> <li>• <b>Unicast packets, Broadcast packets, and Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—There are two possible conditions regarding the number of oversized frames: <ul style="list-style-type: none"> <li>• Packet length exceeds 1518 octets, or</li> <li>• Packet length exceeds MRU</li> </ul> </li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets) and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	<b>extensive</b>

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p>Receive and Transmit statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the device from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local device (which the router is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields must be 0.</li> </ul>	extensive
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> </ul>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Interface transmit statistics</b>	Status of the <b>interface-transmit-statistics</b> configuration: Enabled or Disabled.	<b>detail extensive</b>
<b>Queue counters (Egress)</b>	CoS queue number and its associated user-configured forwarding class name. <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface.	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Traffic statistics</b>	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set. The value in this field also includes the Layer 2 overhead bytes for ingress or egress traffic on Ethernet interfaces if you enable accounting of Layer 2 overhead at the PIC level or the logical interface level.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul>	<b>detail extensive</b>

Table 69: show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Local statistics</b>	Number and rate of bytes and packets destined to the device.	<b>extensive</b>
<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.  <b>NOTE:</b> For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output shaping might drop packets after they are tallied by the <b>Output bytes</b> and <b>Output packets</b> interface counters. However, correct values display for both of these egress statistics when per-unit scheduling is enabled for the Gigabit Ethernet IQ2 physical interface, or when a single logical interface is actively using a shared scheduler.	<b>extensive</b>
<b>Security</b>	Security zones that interface belongs to.	<b>extensive</b>
<b>Flow Input statistics</b>	Statistics on packets received by flow module.	<b>extensive</b>
<b>Flow Output statistics</b>	Statistics on packets sent by flow module.	<b>extensive</b>
<b>Flow error statistics (Packets dropped due to)</b>	Statistics on errors in the flow module.	<b>extensive</b>
<b>Protocol</b>	Protocol family.	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive none</b>
<b>Flags</b>	Information about protocol family flags. .	<b>detail extensive</b>
<b>Addresses, Flags</b>	Information about the address flags..	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address of the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

## Sample Output Gigabit Ethernet

### show interfaces (Gigabit Ethernet)

```
user@host> show interfaces ge-3/0/2
Physical interface: ge-3/0/2, Enabled, Physical link is Up
  Interface index: 167, SNMP ifIndex: 35
  Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues    : 4 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:7c, Hardware address: 00:00:5e:00:53:7c
  Last flapped  : 2006-08-10 17:25:10 PDT (00:01:08 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Ingress rate at Packet Forwarding Engine : 0 bps (0 pps)
  Ingress drop rate at Packet Forwarding Engine : 0 bps (0 pps)
  Active alarms : None
  Active defects: None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69)
  Flags: SNMP-Traps 0x4000
  VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
0x8100.512 0x8100.513)
  Encapsulation: VLAN-CCC
  Egress account overhead: 100
  Ingress account overhead: 90
  Input packets : 0
  Output packets: 0
  Protocol ccc, MTU: 1522
  Flags: Is-Primary
```

### show interfaces (Gigabit Ethernet on MX Series Routers)

```
user@host> show interfaces ge-2/2/2
Physical interface: ge-2/2/2, Enabled, Physical link is Up
  Interface index: 156, SNMP ifIndex: 188
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, MAC-REWRITE Error: None,
  Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 4 maximum usable queues
  Schedulers    : 0
  Current address: 00:00:5e:00:53:c0, Hardware address: 00:00:5e:00:53:76
  Last flapped  : 2008-09-05 16:44:30 PDT (3d 01:04 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  Active alarms : None
  Active defects: None

Logical interface ge-2/2/2.0 (Index 82) (SNMP ifIndex 219)
  Flags: Up SNMP-Traps 0x4004000 Encapsulation: ENET2
  Input packets : 10232
  Output packets: 10294
  Protocol inet, MTU: 1500
  Flags: Sendbcst-pkt-to-re
```

```

Addresses, Flags: Is-Preferred Is-Primary
Destination: 203.0.113/24, Local: 203.0.113.1, Broadcast: 203.0.113.255
Protocol inet6, MTU: 1500
Max nh cache: 4, New hold nh limit: 100000, Curr nh cnt: 4, Curr new hold
cnt: 4, NH drop cnt: 0
Flags: Is-Primary
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: 2001:db8:/32, Local: 2001:db8::5
Addresses, Flags: Is-Preferred
Destination: 2001:db8:1::/32, Local: 2001:db8:223:9cff:fe9f:3e78
Protocol multiservice, MTU: Unlimited
Flags: Is-Primary

```

### show interfaces (link degrade status)

```

user@host> show interfaces et-3/0/0
Physical interface: et-3/0/0, Enabled, Physical link is Down
Interface index: 157, SNMP ifIndex: 537
Link-level type: Ethernet, MTU: 1514, MRU: 0, Speed: 100Gbps, BPDU Error: None,
Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Current address: 54:e0:32:23:9d:38, Hardware address: 54:e0:32:23:9d:38
Last flapped : 2014-06-18 02:36:38 PDT (02:50:50 ago)
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
Active alarms : LINK
Active defects : LINK
PCS statistics
  Bit errors : 0
  Errored blocks : 0
Link Degrade* :
Link Monitoring : Enable
Link Degrade Set Threshold: : 1E-7
Link Degrade Clear Threshold: : 1E-12
Estimated BER : 1E-7
Link-degrade event : Seconds Count State
                    782 1 Defect Active

```

### show interfaces extensive (Gigabit Ethernet on MX Series Routers showing interface transmit statistics configuration)

```

user@host> show interfaces ge-2/1/2 extensive | match "output|interface"
Physical interface: ge-2/1/2, Enabled, Physical link is Up
Interface index: 151, SNMP ifIndex: 530, Generation: 154
Interface flags: SNMP-Traps Internal: 0x4000
Output bytes : 240614363944 772721536 bps
Output packets: 3538446506 1420444 pps
Direction : Output
Interface transmit statistics: Enabled

Logical interface ge-2/1/2.0 (Index 331) (SNMP ifIndex 955) (Generation 146)
Output bytes : 195560312716 522726272 bps
Output packets: 4251311146 1420451 pps

user@host> show interfaces ge-5/2/0.0 statistics detail
Logical interface ge-5/2/0.0 (Index 71) (SNMP ifIndex 573) (Generation 135)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2

```

```

Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes :          271524
  Output bytes :        37769598
  Input packets:         3664
  Output packets:       885790
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :       16681118
  Input packets:         0
  Output packets:      362633
Local statistics:
  Input bytes :          271524
  Output bytes :       308560
  Input packets:         3664
  Output packets:       3659
Transit statistics:
  Input bytes :          0                0 bps
  Output bytes :      37461038            0 bps
  Input packets:         0                0 pps
  Output packets:     882131              0 pps
IPv6 transit statistics:
  Input bytes :          0                0 bps
  Output bytes :     16681118            0 bps
  Input packets:         0                0 pps
  Output packets:     362633            0 pps

```

#### show interfaces brief (Gigabit Ethernet)

```

user@host> show interfaces ge-3/0/2 brief
Physical interface: ge-3/0/2, Enabled, Physical link is Up
  Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

Logical interface ge-3/0/2.0
  Flags: SNMP-Traps 0x4000
  VLAN-Tag [ 0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530) Out(swap-push
  0x8100.512 0x8100.513)
  Encapsulation: VLAN-CCC
  ccc

Logical interface ge-3/0/2.32767
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2

```

#### show interfaces detail (Gigabit Ethernet)

```

user@host> show interfaces ge-3/0/2 detail
Physical interface: ge-3/0/2, Enabled, Physical link is Up
  Interface index: 167, SNMP ifIndex: 35, Generation: 177
  Link-level type: 52, MTU: 1522, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

```

```

CoS queues      : 4 supported, 4 maximum usable queues
Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:7c, Hardware address: 00:00:5e:00:53:7c
Last flapped    : 2006-08-09 17:17:00 PDT (01:31:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes : 0 0 bps
  Input packets: 0 0 pps
  Drop bytes : 0 0 bps
  Drop packets: 0 0 pps
Ingress queues: 4 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 best-effort 0 0 0
  1 expedited-fo 0 0 0
  2 assured-forw 0 0 0
  3 network-cont 0 0 0

Egress queues: 4 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 best-effort 0 0 0
  1 expedited-fo 0 0 0
  2 assured-forw 0 0 0
  3 network-cont 0 0 0

Active alarms : None
Active defects : None

Logical interface ge-3/0/2.0 (Index 72) (SNMP ifIndex 69) (Generation 140)
Flags: SNMP-Traps 0x4000
VLAN-Tag [0x8100.512 0x8100.513 ] In(pop-swap 0x8100.530)
Out(swap-push 0x8100.512 0x8100.513)
Encapsulation: VLAN-CCC
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps

```

```

Output packets:                0                0 pps
Protocol ccc, MTU: 1522, Generation: 149, Route table: 0
Flags: Is-Primary

```

Logical interface ge-3/0/2.32767 (Index 71) (SNMP ifIndex 70)  
(Generation 139)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2

Traffic statistics:

```

Input bytes :                0
Output bytes :                0
Input packets:               0
Output packets:              0

```

Local statistics:

```

Input bytes :                0
Output bytes :                0
Input packets:               0
Output packets:              0

```

Transit statistics:

```

Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:               0                0 pps
Output packets:              0                0 pps

```

### show interfaces extensive (Gigabit Ethernet IQ2)

user@host> show interfaces ge-7/1/3 extensive

Physical interface: ge-7/1/3, Enabled, Physical link is Up

Interface index: 170, SNMP ifIndex: 70, Generation: 171

Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,

Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,

Remote fault: Online

Device flags : Present Running

Interface flags: SNMP-Traps Internal: 0x4004000

Link flags : None

CoS queues : 8 supported, 4 maximum usable queues

Schedulers : 256

Hold-times : Up 0 ms, Down 0 ms

Current address: 00:00:5e:00:53:74, Hardware address: 00:00:5e:00:53:74

Last flapped : 2007-11-07 21:31:41 PST (02:03:33 ago)

Statistics last cleared: Never

Traffic statistics:

```

Input bytes :          38910844056          7952 bps
Output bytes :          7174605          8464 bps
Input packets:         418398473          11 pps
Output packets:         78903          12 pps

```

IPv6 transit statistics:

```

Input bytes :                0
Output bytes :                0
Input packets:               0
Output packets:              0

```

Ingress traffic statistics at Packet Forwarding Engine:

```

Input bytes :          38910799145          7952 bps
Input packets:         418397956          11 pps
Drop bytes :                0                0 bps
Drop packets:           0                0 pps

```

Input errors:

```

Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0

```

Output errors:

```

Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

```

```

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      418390823      418390823      0
  1 expedited-fo          0          0      0
  2 assured-forw          0          0      0
  3 network-cont      7133      7133      0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort      1031      1031      0
  1 expedited-fo          0          0      0
  2 assured-forw          0          0      0
  3 network-cont      77872      77872      0

Active alarms : None
Active defects : None
MAC statistics:
      Receive      Transmit
Total octets      38910844056      7174605
Total packets      418398473      78903
Unicast packets      408021893366      1026
Broadcast packets          10      12
Multicast packets      418398217      77865
CRC/Align errors          0          0
FIFO errors          0          0
MAC control frames          0          0
MAC pause frames          0          0
Oversized frames          0
Jabber frames          0
Fragment frames          0
VLAN tagged frames          0
Code violations          0 OTN Received Overhead Bytes:
APS/PCC0: 0x02, APS/PCC1: 0x11, APS/PCC2: 0x47, APS/PCC3: 0x58
Payload Type: 0x08
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x08
Filter statistics:
Input packet count      418398473
Input packet rejects          479
Input DA rejects          479
Input SA rejects          0
Output packet count          78903
Output packet pad count          0
Output packet error count          0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: Symmetric/Asymmetric,
Remote fault: OK
Local resolution:

```

```

Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
  Destination slot: 7
CoS information:
  Direction : Output
  CoS transmit queue
    %      Bandwidth      Buffer      Priority      Limit
    %      bps            %      usec
  0 best-effort      95      950000000    95      0
low  none
  3 network-control  5      50000000    5      0
low  none
  Direction : Input
  CoS transmit queue
    %      Bandwidth      Buffer      Priority      Limit
    %      bps            %      usec
  0 best-effort      95      950000000    95      0
low  none
  3 network-control  5      50000000    5      0
low  none

Logical interface ge-7/1/3.0 (Index 70) (SNMP ifIndex 85) (Generation 150)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :      812400
  Output bytes :    1349206
  Input packets:      9429
  Output packets:    9449
IPv6 transit statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:      0
  Output packets:     0
Local statistics:
  Input bytes :      812400
  Output bytes :    1349206
  Input packets:      9429
  Output packets:    9449
Transit statistics:
  Input bytes :      0      7440 bps
  Output bytes :      0      7888 bps
  Input packets:      0      10 pps
  Output packets:     0      11 pps
IPv6 transit statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:      0
  Output packets:     0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
Flags: Is-Primary, Mac-Validate-Strict
Mac-Validate Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary
Input Filters: F1-ge-3/0/1.0-in, F3-ge-3/0/1.0-in
Output Filters: F2-ge-3/0/1.0-out (53)
Destination: 203.0.113/24, Local: 203.0.113.2, Broadcast: 203.0.113.255,
Generation: 196
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

**NOTE:** For Gigabit Ethernet intelligent queuing 2 (IQ2) interfaces, the logical interface egress statistics displayed in the **show interfaces** command output might not accurately reflect the traffic on the wire when output shaping is applied. Traffic management output

shaping might drop packets after they are tallied by the interface counters. For detailed information, see the description of the logical interface **Transit statistics** fields in [Table 56 on page 1127](#).

#### show interfaces (Gigabit Ethernet Unnumbered Interface)

```
user@host> show interfaces ge-3/2/0
Physical interface: ge-3/2/0, Enabled, Physical link is Up
  Interface index: 148, SNMP ifIndex: 50
  Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
  Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 4 maximum usable queues
  Current address: 00:00:5e:00:53:f8, Hardware address: 00:00:5e:00:53:f8
  Last flapped   : 2006-10-27 04:42:23 PDT (08:01:52 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 624 bps (1 pps)
  Active alarms  : None
  Active defects : None

Logical interface ge-3/2/0.0 (Index 67) (SNMP ifIndex 85)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 0
  Output packets: 6
  Protocol inet, MTU: 1500
  Flags: Unnumbered
  Donor interface: lo0.0 (Index 64)
  Preferred source address: 203.0.113.22
```

#### show interfaces (ACI Interface Set Configured)

```
user@host> show interfaces ge-1/0/0.4001
Logical interface ge-1/0/0.4001 (Index 340) (SNMP ifIndex 548)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.4001 ] Encapsulation: PPP-over-

Ethernet
ACI VLAN:
  Dynamic Profile: aci-vlan-set-profile
  PPPoE:
    Dynamic Profile: aci-vlan-pppoe-profile,
    Service Name Table: None,
    Max Sessions: 32000, Max Sessions VSA Ignore: Off,
    Duplicate Protection: On, Short Cycle Protection: Off,
    Direct Connect: Off,
    AC Name: nbc
  Input packets : 9
  Output packets: 8
  Protocol multiservice, MTU: Unlimited
```

#### show interfaces (ALI Interface Set)

```
user@host> show interfaces ge-1/0/0.10
Logical interface ge-1/0/0.10 (Index 346) (SNMP ifIndex 554) (Generation 155)
  Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.10 ] Encapsulation: ENET2
  Line Identity:
```

```

Dynamic Profile: ali-set-profile
Circuit-id Remote-id Accept-no-ids
PPPoE:
  Dynamic Profile: ali-vlan-pppoe-profile,
  Service Name Table: None,
  Max Sessions: 32000, Max Sessions VSA Ignore: Off,
  Duplicate Protection: On, Short Cycle Protection: Off,
  Direct Connect: Off,
  AC Name: nbc
Input packets : 9
Output packets: 8
Protocol multiservice, MTU: Unlimited

```

## Sample Output Gigabit Ethernet

### show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, IQ2)

```

user@host> show interfaces xe-5/0/0 extensive
Physical interface: xe-5/0/0, Enabled, Physical link is Up
  Interface index: 177, SNMP ifIndex: 99, Generation: 178
  Link-level type: Ethernet, MTU: 1518, LAN-PHY mode, Speed: 10Gbps, Loopback:
  None, Source filtering: Enabled,
  Flow control: Enabled
  Device flags      : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags       : None
  CoS queues       : 8 supported, 4 maximum usable queues
  Schedulers       : 1024
  Hold-times       : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:f6, Hardware address: 00:00:5e:00:53:f6
  Last flapped    : Never
  Statistics last cleared: Never
Traffic statistics:
  Input bytes :          6970332384          0 bps
  Output bytes :              0          0 bps
  Input packets:          81050506          0 pps
  Output packets:              0          0 pps
IPv6 transit statistics:
  Input bytes :              0
  Output bytes :              0
  Input packets:              0
  Output packets:              0
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes :          6970299398          0 bps
  Input packets:          81049992          0 pps
  Drop bytes :              0          0 bps
  Drop packets:              0          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
  MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          81049992          81049992          0

  1 expedited-fo              0              0          0

```

```

2 assured-forw          0          0          0
3 network-cont          0          0          0

Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort         0          0          0
1 expedited-fo        0          0          0
2 assured-forw        0          0          0
3 network-cont        0          0          0

Active alarms : None
Active defects : None
PCS statistics
  Bit errors          0
  Errored blocks      0
MAC statistics:
  Receive
  Total octets        6970332384
  Total packets       81050506
  Unicast packets     81050000
  Broadcast packets   506
  Multicast packets   0
  CRC/Align errors    0
  FIFO errors         0
  MAC control frames  0
  MAC pause frames    0
  Oversized frames    0
  Jabber frames        0
  Fragment frames     0
  VLAN tagged frames  0
  Code violations      0
  Transmit
  Total octets        0
  Total packets       0
  Unicast packets     0
  Broadcast packets   0
  Multicast packets   0
  CRC/Align errors    0
  FIFO errors         0
  MAC control frames  0
  MAC pause frames    0
  Oversized frames    0
  Jabber frames        0
  Fragment frames     0
  VLAN tagged frames  0
  Code violations      0
Filter statistics:
  Input packet count   81050506
  Input packet rejects 506
  Input DA rejects     0
  Input SA rejects     0
  Output packet count  0
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 5
CoS information:
  Direction : Output
  CoS transmit queue  Bandwidth      Buffer Priority  Limit
                        %      bps      %      usec
0 best-effort         95      950000000  95      0      low      none
3 network-control     5      50000000   5      0      low      none

  Direction : Input
  CoS transmit queue  Bandwidth      Buffer Priority  Limit
                        %      bps      %      usec
0 best-effort         95      950000000  95      0      low      none
3 network-control     5      50000000   5      0      low      none

Logical interface xe-5/0/0.0 (Index 71) (SNMP ifIndex 95) (Generation 195)

```

```

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ] Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes : 0
  Output bytes : 46
  Input packets: 0
  Output packets: 1
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 46
  Input packets: 0
  Output packets: 1
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Protocol inet, MTU: 1500, Generation: 253, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.0.2/24, Local: 192.0.2.1, Broadcast: 192.0.2.255,
Generation: 265
Protocol multiservice, MTU: Unlimited, Generation: 254, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

### show interfaces extensive (10-Gigabit Ethernet, WAN PHY Mode)

```

user@host> show interfaces xe-1/0/0 extensive
Physical interface: xe-1/0/0, Enabled, Physical link is Up
Interface index: 141, SNMP ifIndex: 34, Generation: 47
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled
WAN-PHY mode
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps 16384
Link flags : None
CoS queues : 4 supported
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:9d, Hardware address: 00:00:5e:00:53:9d
Last flapped : 2005-07-07 11:22:34 PDT (3d 12:28 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS Link CRC errors: 0, HS Link FIFO overflows: 0,

```

```

Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0,
  Aged packets: 0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
  Resource errors: 0
Queue counters:
  Queued packets    Transmitted packets    Dropped packets
0 best-effort      0                      0                      0
1 expedited-fo     0                      0                      0
2 assured-forw     0                      0                      0
3 network-cont     0                      0                      0
Active alarms : LOL, LOS, LBL
Active defects: LOL, LOS, LBL, SEF, AIS-L, AIS-P
PCS statistics
  Seconds    Count
  Bit errors    0          0
  Errored blocks 0          0
MAC statistics:
  Receive    Transmit
Total octets    0          0
Total packets   0          0
Unicast packets 0          0
Broadcast packets 0          0
Multicast packets 0          0
CRC/Align errors 0          0
FIFO errors      0          0
MAC control frames 0          0
MAC pause frames 0          0
Oversized frames 0
Jabber frames    0
Fragment frames  0
VLAN tagged frames 0
Code violations   0
Filter statistics:
  Input packet count    0
  Input packet rejects   0
  Input DA rejects      0
  Input SA rejects      0
  Output packet count    0
  Output packet pad count 0
  Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
PMA PHY:
  Seconds    Count    State
  PLL lock    0          0    OK
  PHY light   63159    1    Light Missing
WIS section:
  BIP-B1      0          0
  SEF         434430    434438    Defect Active
  LOS         434430    1    Defect Active
  LOF         434430    1    Defect Active
  ES-S        434430
  SES-S       434430
  SEFS-S      434430
WIS line:
  BIP-B2      0          0
  REI-L       0          0
  RDI-L       0          0    OK
  AIS-L       434430    1    Defect Active
  BERR-SF     0          0    OK
  BERR-SD     0          0    OK
  ES-L        434430
  SES-L       434430
  UAS-L       434420
  ES-LFE      0

```

```

SES-LFE                                0
UAS-LFE                                0
WIS path:
BIP-B3                                0          0
REI-P                                  0          0
LOP-P                                  0          0 OK
AIS-P                                434430        1 Defect Active
RDI-P                                  0          0 OK
UNEQ-P                                0          0 OK
PLM-P                                  0          0 OK
ES-P                                  434430
SES-P                                  434430
UAS-P                                  434420
ES-PFE                                 0
SES-PFE                                 0
UAS-PFE                                 0
Received path trace:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted path trace: orissa so-1/0/0
6f 72 69 73 73 61 20 73 6f 2d 31 2f 30 2f 30 00 orissa so-1/0/0.
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                           %             bps        %      bytes
  0 best-effort            95          950000000  95         0        low    none
  3 network-control        5           500000000   5         0        low    none

```

#### show interfaces extensive (10-Gigabit Ethernet, DWDM OTN PIC)

```

user@host> show interfaces ge-7/0/0 extensive
Physical interface: ge-7/0/0, Enabled, Physical link is Down
Interface index: 143, SNMP ifIndex: 508, Generation: 208
Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
Link flags : None
Wavelength : 1550.12 nm, Frequency: 193.40 THz
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:72, Hardware address: 00:00:5e:00:53:72
Last flapped : 2011-04-20 15:48:54 PDT (18:39:49 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 2, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

```

```

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort              0              0              0

  1 expedited-fo            0              0              0

  2 assured-forw            0              0              0

  3 network-cont
Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms  : LINK
Active defects : LINK
MAC statistics:
Total octets          Receive          Transmit
Total packets        0              0
Unicast packets      0              0
Broadcast packets    0              0
Multicast packets    0              0
CRC/Align errors     0              0
FIFO errors          0              0
MAC control frames   0              0
MAC pause frames     0              0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0
Total octets          0              0
Total packets        0              0
Unicast packets      0              0
Broadcast packets    0              0
Multicast packets    0              0
CRC/Align errors     0              0
FIFO errors          0              0
MAC control frames   0              0
MAC pause frames     0              0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0
OTN alarms           : None
OTN defects           : None
OTN FEC Mode          : GFEC
OTN Rate              : Fixed Stuff Bytes 11.0957Gbps
OTN Line Loopback     : Enabled
OTN FEC statistics :
Corrected Errors      0
Corrected Error Ratio ( 0 sec average) 0e-0
OTN FEC alarms:      Seconds      Count  State
FEC Degrade          0            0      OK
FEC Excessive         0            0      OK
OTN OC:              Seconds      Count  State
LOS                   2            1      OK
LOF                   67164        2      Defect Active

```

```

LOM                                67164          71 Defect Active
Wavelength Lock                    0             0 OK
OTN OTU:
AIS                                0             0 OK
BDI                                65919          4814 Defect Active
IAE                                67158          1 Defect Active
TTIM                               7             1 OK
SF                                 67164          2 Defect Active
SD                                 67164          3 Defect Active
TCA-ES                             0             0 OK
TCA-SES                             0             0 OK
TCA-UAS                             80            40 OK
TCA-BBE                             0             0 OK
BIP                                 0             0 OK
BBE                                 0             0 OK
ES                                  0             0 OK
SES                                 0             0 OK
UAS                                587            0 OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
APS/PCC0: 0x02, APS/PCC1: 0x42, APS/PCC2: 0xa2, APS/PCC3: 0x48
Payload Type: 0x03
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x03
Filter statistics:
Input packet count                  0
Input packet rejects                0
Input DA rejects                    0
Input SA rejects                    0
Output packet count                  0
Output packet pad count              0
Output packet error count            0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
Destination slot: 7
CoS information:
Direction : Output
CoS transmit queue                  Bandwidth          Buffer Priority
Limit
                                %      bps      %      usec
0 best-effort                    95    9500000000    95      0      low
none
3 network-control                  5     500000000      5      0      low
none
...

```

#### show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode)

```

user@host> show interfaces xe-7/0/0 extensive
Physical interface: xe-7/0/0, Enabled, Physical link is Up
Interface index: 173, SNMP ifIndex: 212, Generation: 174
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Enabled,

```

```

Loopback: None, Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
...

```

### show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Transmit-Only)

```

user@host> show interfaces xe-7/0/0-tx extensive
Physical interface: xe-7/0/0-tx, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 137, Generation: 177
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
Unidirectional: Tx-Only
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags : None
  CoS queues : 8 supported, 8 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:83, Hardware address: 00:00:5e:00:53:83
  Last flapped : 2007-06-01 09:08:19 PDT (3d 02:31 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 322891152287160 9627472888 bps
  Input packets: 0 0 pps
  Output packets: 328809727380 1225492 pps
...

Filter statistics:
  Output packet count 328810554250
  Output packet pad count 0
  Output packet error count 0
...

Logical interface xe-7/0/0-tx.0 (Index 73) (SNMP ifIndex 138) (Generation 139)

Flags: SNMP-Traps Encapsulation: ENET2
Egress account overhead: 100
Ingress account overhead: 90
Traffic statistics:
  Input bytes : 0
  Output bytes : 322891152287160
  Input packets: 0
  Output packets: 328809727380
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 322891152287160 9627472888 bps
  Input packets: 0 0 pps
  Output packets: 328809727380 1225492 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0

```

```

      Input packets:          0
      Output packets:        0
      Protocol inet, MTU: 1500, Generation: 147, Route table: 0
      Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.11.12/24, Local: 10.11.12.13, Broadcast: 10.11.12.255,
      Generation: 141
      Protocol multiservice, MTU: Unlimited, Generation: 148, Route table: 0
      Flags: None
      Policer: Input: __default_arp_policer__

```

### show interfaces extensive (10-Gigabit Ethernet, LAN PHY Mode, Unidirectional Mode, Receive-Only)

```

user@host> show interfaces xe-7/0/0-rx extensive
Physical interface: xe-7/0/0-rx, Enabled, Physical link is Up
  Interface index: 174, SNMP ifIndex: 118, Generation: 175
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps,
  Unidirectional: Rx-Only
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:83, Hardware address: 00:00:5e:00:53:83
  Last flapped   : 2007-06-01 09:08:22 PDT (3d 02:31 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :      322857456303482          9627496104 bps
    Output bytes :              0              0 bps
    Input packets:      328775413751          1225495 pps
    Output packets:              0              0 pps

...

  Filter statistics:
    Input packet count      328775015056
    Input packet rejects    1
    Input DA rejects        0

...

  Logical interface xe-7/0/0-rx.0 (Index 72) (SNMP ifIndex 120) (Generation 138)

  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes :      322857456303482          9627496104 bps
    Output bytes :              0              0 bps
    Input packets:      328775413751          1225495 pps
    Output packets:              0              0 pps
  IPv6 transit statistics:
    Input bytes :              0
    Output bytes :              0
    Input packets:              0
    Output packets:              0
  Local statistics:
    Input bytes :              0
    Output bytes :              0
    Input packets:              0
    Output packets:              0
  Transit statistics:
    Input bytes :      322857456303482          9627496104 bps
    Output bytes :              0              0 bps

```

```

Input packets:          328775413751          1225495 pps
Output packets:          0                    0 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Protocol inet, MTU: 1500, Generation: 145, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.0.2/24, Local: 192.0.2.1, Broadcast: 192.0.2.255,
Generation: 139
Protocol multiservice, MTU: Unlimited, Generation: 146, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

## Sample Output

### Sample Output SRX Gigabit Ethernet

```

user@host> show interfaces ge-0/0/1
Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped   : 2015-05-12 08:36:59 UTC (1w1d 22:42 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : LINK
Active defects : LINK
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Input packets : 0
Output packets: 0
Security: Zone: public
Protocol inet, MTU: 1500
  Flags: Sendbcst-pkt-to-re
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

### Sample Output SRX Gigabit Ethernet

```

user@host> show interfaces ge-0/0/1
Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running Down

```

```

Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags      : None
CoS queues     : 8 supported, 8 maximum usable queues
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped   : 2015-05-12 08:36:59 UTC (1w1d 22:42 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
Active alarms  : LINK
Active defects : LINK
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514)
  Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
  Input packets : 0
  Output packets: 0
  Security: Zone: public
  Protocol inet, MTU: 1500
    Flags: Sendbcst-pkt-to-re
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255

```

### show interfaces detail (Gigabit Ethernet)

```

user@host> show interfaces ge-0/0/1 detail
Physical interface: ge-0/0/1, Enabled, Physical link is Down
  Interface index: 135, SNMP ifIndex: 510, Generation: 138
  Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,
  BDPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering:
  Disabled,
  Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running Down
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
  Last flapped   : 2015-05-12 08:36:59 UTC (1w2d 00:00 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes: 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

```

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Active alarms  : LINK
  Active defects : LINK

```

Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514) (Generation 136)

Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2

Traffic statistics:

Input bytes : 0  
Output bytes : 0  
Input packets: 0  
Output packets: 0

Local statistics:

Input bytes : 0  
Output bytes : 0  
Input packets: 0  
Output packets: 0

Transit statistics:

Input bytes : 0 0 bps  
Output bytes : 0 0 bps  
Input packets: 0 0 pps  
Output packets: 0 0 pps

Security: Zone: public

Flow Statistics :

Flow Input statistics :

Self packets : 0  
ICMP packets : 0  
VPN packets : 0  
Multicast packets : 0  
Bytes permitted by policy : 0  
Connections established : 0

Flow Output statistics:

Multicast packets : 0  
Bytes permitted by policy : 0

Flow error statistics (Packets dropped due to):

Address spoofing: 0  
Authentication failed: 0  
Incoming NAT errors: 0  
Invalid zone received packet: 0  
Multiple user authentications: 0  
Multiple incoming NAT: 0  
No parent for a gate: 0  
No one interested in self packets: 0  
No minor session: 0  
No more sessions: 0  
No NAT gate: 0  
No route present: 0  
No SA for incoming SPI: 0  
No tunnel found: 0  
No session for a gate: 0  
No zone or NULL zone binding: 0  
Policy denied: 0  
Security association not active: 0  
TCP sequence number out of window: 0  
Syn-attack protection: 0  
User authentication errors: 0

Protocol inet, MTU: 1500, Generation: 150, Route table: 0

Flags: Sendbroadcast-pkt-to-re

Addresses, Flags: Dest-route-down Is-Preferred Is-Primary

Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255, Generation:

150

## show interfaces statistics st0.0 detail

```

user@host> show interfaces statistics st0.0 detail
Logical interface st0.0 (Index 71) (SNMP ifIndex 609) (Generation 136)
Flags: Up Point-To-Point SNMP-Traps Encapsulation: Secure-Tunnel
Traffic statistics:
  Input bytes :      528152756774
  Output bytes :     575950643520
  Input packets:    11481581669
  Output packets:   12520666095
Local statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:     0
  Output packets:    0
Transit statistics:
  Input bytes :      0          121859888 bps
  Output bytes :     0          128104112 bps
  Input packets:     0          331141 pps
  Output packets:    0          348108 pps
Security: Zone: untrust
Allowed host-inbound traffic : any-service bfd bgp dvmrp igmp ldp msdp nhrp
ospf ospf3 pgm pim rip ripng router-discovery rsvp
sap vrrp
Flow Statistics :
Flow Input statistics :
  Self packets :      0
  ICMP packets :      0
  VPN packets :      0
  Multicast packets : 0
  Bytes permitted by policy : 525984295844
  Connections established : 7
Flow Output statistics:
  Multicast packets : 0
  Bytes permitted by policy : 576003290222
Flow error statistics (Packets dropped due to):
  Address spoofing:      0
  Authentication failed: 0
  Incoming NAT errors:   0
  Invalid zone received packet: 0
  Multiple user authentications: 0
  Multiple incoming NAT: 0
  No parent for a gate: 0
  No one interested in self packets: 0
  No minor session:      0
  No more sessions:      0
  No NAT gate:           0
  No route present:      2000280
  No SA for incoming SPI: 0
  No tunnel found:       0
  No session for a gate: 0
  No zone or NULL zone binding 0
  Policy denied:         0
  Security association not active: 0
  TCP sequence number out of window: 0
  Syn-attack protection: 0
  User authentication errors: 0
Protocol inet, MTU: 9192
Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
Generation: 155, Route table: 0

```

Flags: Sendbroadcast-pkt-to-re

### show interfaces extensive (Gigabit Ethernet)

```

user@host> show interfaces ge-0/0/1.0 extensive
Physical interface: ge-0/0/1, Enabled, Physical link is Down
Interface index: 135, SNMP ifIndex: 510, Generation: 138
Link-level type: Ethernet, MTU: 1514, Link-mode: Full-duplex, Speed: 1000mbps,

BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags : Present Running Down
Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:01, Hardware address: 00:00:5e:00:53:01
Last flapped : 2015-05-12 08:36:59 UTC (1w1d 22:57 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort        0              0              0
1 expedited-fo       0              0              0
2 assured-forw       0              0              0
3 network-cont       0              0              0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control

Active alarms : LINK
Active defects : LINK
MAC statistics:
Total octets      Receive      Transmit
Total packets      0            0
Unicast packets    0            0
Broadcast packets  0            0
Multicast packets  0            0
CRC/Align errors   0            0
FIFO errors        0            0
MAC control frames 0            0

```

```

MAC pause frames          0          0
Oversized frames          0
Jabber frames             0
Fragment frames           0
VLAN tagged frames        0
Code violations            0
Filter statistics:
  Input packet count       0
  Input packet rejects     0
  Input DA rejects         0
  Input SA rejects         0
  Output packet count      0
  Output packet pad count  0
  Output packet error count 0
  CAM destination filters: 2, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Incomplete
Packet Forwarding Engine configuration:
  Destination slot: 0
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
      0 best-effort        95      950000000    95      0      low
none
      3 network-control    5      50000000    5      0      low
none
Interface transmit statistics: Disabled

Logical interface ge-0/0/1.0 (Index 71) (SNMP ifIndex 514) (Generation 136)
Flags: Device-Down SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:         0
  Output packets:        0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:         0
  Output packets:        0
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :         0          0 bps
  Input packets:         0          0 pps
  Output packets:        0          0 pps
Security: Zone: public
Flow Statistics :
Flow Input statistics :
  Self packets :          0
  ICMP packets :          0
  VPN packets :          0
  Multicast packets :     0
  Bytes permitted by policy : 0
  Connections established : 0
Flow Output statistics:
  Multicast packets :     0
  Bytes permitted by policy : 0
Flow error statistics (Packets dropped due to):
  Address spoofing:       0

```

```

Authentication failed:          0
Incoming NAT errors:           0
Invalid zone received packet:   0
Multiple user authentications:  0
Multiple incoming NAT:         0
No parent for a gate:          0
No one interested in self packets: 0
No minor session:              0
No more sessions:              0
No NAT gate:                   0
No route present:              0
No SA for incoming SPI:        0
No tunnel found:               0
No session for a gate:         0
No zone or NULL zone binding   0
Policy denied:                 0
Security association not active: 0
TCP sequence number out of window: 0
Syn-attack protection:         0
User authentication errors:     0
Protocol inet, MTU: 1500, Generation: 150, Route table: 0
Flags: Sendbcast-pkt-to-re
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.1, Broadcast: 1.1.1.255,
Generation: 150

```

### show interfaces terse

```

user@host> show interfaces terse

```

Interface	Admin	Link	Proto	Local	Remote
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	inet	10.209.4.61/18	
gr-0/0/0	up	up			
ip-0/0/0	up	up			
st0	up	up			
st0.1	up	ready	inet		
ls-0/0/0	up	up			
lt-0/0/0	up	up			
mt-0/0/0	up	up			
pd-0/0/0	up	up			
pe-0/0/0	up	up			
e3-1/0/0	up	up			
t3-2/0/0	up	up			
e1-3/0/0	up	up			
se-4/0/0	up	down			
t1-5/0/0	up	up			
br-6/0/0	up	up			
dc-6/0/0	up	up			
dc-6/0/0.32767	up	up			
bc-6/0/0:1	down	up			
bc-6/0/0:1.0	up	down			
d10	up	up			
d10.0	up	up	inet		
dsc	up	up			
gre	up	up			
ipip	up	up			
lo0	up	up			
lo0.16385	up	up	inet	10.0.0.1 10.0.0.16	--> 0/0 --> 0/0

```

lsi                up    up
mtun               up    up
pimd              up    up
pime              up    up
pp0               up    up

```

#### show interfaces controller (Channelized E1 IQ with Logical E1)

```
user@host> show interfaces controller ce1-1/2/6
```

Controller	Admin	Link
ce1-1/2/6	up	up
e1-1/2/6	up	up

#### show interfaces controller (Channelized E1 IQ with Logical DSO)

```
user@host> show interfaces controller ce1-1/2/3
```

Controller	Admin	Link
ce1-1/2/3	up	up
ds-1/2/3:1	up	up
ds-1/2/3:2	up	up

#### show interfaces descriptions

```
user@host> show interfaces descriptions
```

Interface	Admin	Link	Description
so-1/0/0	up	up	M20-3#1
so-2/0/0	up	up	GSR-12#1
ge-3/0/0	up	up	SMB-OSPF_Area300
so-3/3/0	up	up	GSR-13#1
so-3/3/1	up	up	GSR-13#2
ge-4/0/0	up	up	T320-7#1
ge-5/0/0	up	up	T320-7#2
so-7/1/0	up	up	M160-6#1
ge-8/0/0	up	up	T320-7#3
ge-9/0/0	up	up	T320-7#4
so-10/0/0	up	up	M160-6#2
so-13/0/0	up	up	M20-3#2
so-14/0/0	up	up	GSR-12#2
ge-15/0/0	up	up	SMB-OSPF_Area100
ge-15/0/1	up	up	GSR-13#3

#### show interfaces destination-class all

```
user@host> show interfaces destination-class all
```

```
Logical interface so-4/0/0.0
```

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(silver	0)	0)
(	0)	0)

```
Logical interface so-0/1/3.0
```

Destination class	Packets (packet-per-second)	Bytes (bits-per-second)
gold	0	0
(	0)	0)

```

silver                                0                                0
(                                     0) (                             0)

```

### show interfaces diagnostics optics

```

user@host> show interfaces diagnostics optics ge-2/0/0
Physical interface: ge-2/0/0
Laser bias current                : 7.408 mA
Laser output power                : 0.3500 mW / -4.56 dBm
Module temperature                : 23 degrees C / 73 degrees F
Module voltage                    : 3.3450 V
Receiver signal average optical power : 0.0002 mW / -36.99 dBm
Laser bias current high alarm     : Off
Laser bias current low alarm      : Off
Laser bias current high warning   : Off
Laser bias current low warning    : Off
Laser output power high alarm     : Off
Laser output power low alarm      : Off
Laser output power high warning   : Off
Laser output power low warning    : Off
Module temperature high alarm     : Off
Module temperature low alarm      : Off
Module temperature high warning   : Off
Module temperature low warning    : Off
Module voltage high alarm         : Off
Module voltage low alarm          : Off
Module voltage high warning       : Off
Module voltage low warning        : Off
Laser rx power high alarm         : Off
Laser rx power low alarm          : On
Laser rx power high warning       : Off
Laser rx power low warning        : On
Laser bias current high alarm threshold : 17.000 mA
Laser bias current low alarm threshold : 1.000 mA
Laser bias current high warning threshold : 14.000 mA
Laser bias current low warning threshold : 2.000 mA
Laser output power high alarm threshold : 0.6310 mW / -2.00 dBm
Laser output power low alarm threshold : 0.0670 mW / -11.74 dBm
Laser output power high warning threshold : 0.6310 mW / -2.00 dBm
Laser output power low warning threshold : 0.0790 mW / -11.02 dBm
Module temperature high alarm threshold : 95 degrees C / 203 degrees F
Module temperature low alarm threshold : -25 degrees C / -13 degrees F
Module temperature high warning threshold : 90 degrees C / 194 degrees F
Module temperature low warning threshold : -20 degrees C / -4 degrees F
Module voltage high alarm threshold : 3.900 V
Module voltage low alarm threshold : 2.700 V
Module voltage high warning threshold : 3.700 V
Module voltage low warning threshold : 2.900 V
Laser rx power high alarm threshold : 1.2590 mW / 1.00 dBm
Laser rx power low alarm threshold : 0.0100 mW / -20.00 dBm
Laser rx power high warning threshold : 0.7940 mW / -1.00 dBm
Laser rx power low warning threshold : 0.0158 mW / -18.01 dBm

```

### show interfaces far-end-interval coc12-5/2/0

```

user@host> show interfaces far-end-interval coc12-5/2/0
Physical interface: coc12-5/2/0, SNMP ifIndex: 121
05:30-current:
ES-L: 1, SES-L: 1, UAS-L: 0

```

```

05:15-05:30:
    ES-L: 0, SES-L: 0, UAS-L: 0
05:00-05:15:
    ES-L: 0, SES-L: 0, UAS-L: 0
04:45-05:00:
    ES-L: 0, SES-L: 0, UAS-L: 0
04:30-04:45:
    ES-L: 0, SES-L: 0, UAS-L: 0
04:15-04:30:
    ES-L: 0, SES-L: 0, UAS-L: 0
04:00-04:15:
...

```

### show interfaces far-end-interval coc1-5/2/1:1

```

user@host> run show interfaces far-end-interval coc1-5/2/1:1
Physical interface: coc1-5/2/1:1, SNMP ifIndex: 342
05:30-current:
    ES-L: 1, SES-L: 1, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
05:15-05:30:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
05:00-05:15:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:45-05:00:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:30-04:45:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:15-04:30:
    ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0, SES-P: 0, UAS-P: 0
04:00-04:15:

```

### show interfaces filters

```

user@host> show interfaces filters

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/0/0	up	up			
ge-0/0/0.0	up	up	inet		
			iso		
ge-5/0/0	up	up			
ge-5/0/0.0	up	up	any		f-any
			inet		f-inet
			multiservice		
gr-0/3/0	up	up			
ip-0/3/0	up	up			
mt-0/3/0	up	up			
pd-0/3/0	up	up			
pe-0/3/0	up	up			
vt-0/3/0	up	up			
at-1/0/0	up	up			
at-1/0/0.0	up	up	inet		
			iso		
at-1/1/0	up	down			
at-1/1/0.0	up	down	inet		
			iso		

```

....

```

### show interfaces flow-statistics (Gigabit Ethernet)

```

user@host> show interfaces flow-statistics ge-0/0/1.0

```

```

Logical interface ge-0/0/1.0 (Index 70) (SNMP ifIndex 49)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 5161
  Output packets: 83
  Security: Zone: zone2
  Allowed host-inbound traffic : bootp bfd bgp dns dvmrp ldp msdp nhrp ospf
pgm
  pim rip router-discovery rsvp sap vrrp dhcp finger ftp tftp ident-reset http
https ike
  netconf ping rlogin rpm rsh snmp snmp-trap ssh telnet traceroute xnm-clear-text
xnm-ssl
  lsping
  Flow Statistics :
  Flow Input statistics :
    Self packets : 0
    ICMP packets : 0
    VPN packets : 2564
    Bytes permitted by policy : 3478
    Connections established : 1
  Flow Output statistics:
    Multicast packets : 0
    Bytes permitted by policy : 16994
  Flow error statistics (Packets dropped due to):
    Address spoofing: 0
    Authentication failed: 0
    Incoming NAT errors: 0
    Invalid zone received packet: 0
    Multiple user authentications: 0
    Multiple incoming NAT: 0
    No parent for a gate: 0
    No one interested in self packets: 0
    No minor session: 0
    No more sessions: 0
    No NAT gate: 0
    No route present: 0
    No SA for incoming SPI: 0
    No tunnel found: 0
    No session for a gate: 0
    No zone or NULL zone binding 0
    Policy denied: 0
    Security association not active: 0
    TCP sequence number out of window: 0
    Syn-attack protection: 0
    User authentication errors: 0
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 203.0.113.1/24, Local: 203.0.113.2, Broadcast: 2.2.2.255

```

### show interfaces interval (Channelized OC12)

```

user@host> show interfaces interval t3-0/3/0:0
Physical interface: t3-0/3/0:0, SNMP ifIndex: 23
17:43-current:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
17:28-17:43:
  LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
  SEFS: 0, UAS: 0
17:13-17:28:

```

```

LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:58-17:13:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:43-16:58:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
...
Interval Total:
LCV: 230, PCV: 1145859, CCV: 455470, LES: 0, PES: 230, PSES: 230,
CES: 230, CSES: 230, SEFS: 230, UAS: 238

```

### show interfaces interval (E3)

```

user@host> show interfaces interval e3-0/3/0
Physical interface: e3-0/3/0, SNMP ifIndex: 23
17:43-current:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
17:28-17:43:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
17:13-17:28:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:58-17:13:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
SEFS: 0, UAS: 0
16:43-16:58:
LCV: 0, PCV: 0, CCV: 0, LES: 0, PES: 0, PSES: 0, CES: 0, CSES: 0,
....
Interval Total:
LCV: 230, PCV: 1145859, CCV: 455470, LES: 0, PES: 230, PSES: 230,
CES: 230, CSES: 230, SEFS: 230, UAS: 238

```

### show interfaces interval (SONET/SDH) (SRX devices)

```

user@host> show interfaces interval so-0/1/0
Physical interface: so-0/1/0, SNMP ifIndex: 19
20:02-current:
ES-S: 0, SES-S: 0, SEFS-S: 0, ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0,
SES-P: 0, UAS-P: 0
19:47-20:02:
ES-S: 267, SES-S: 267, SEFS-S: 267, ES-L: 267, SES-L: 267, UAS-L: 267,
ES-P: 267, SES-P: 267, UAS-P: 267
19:32-19:47:
ES-S: 56, SES-S: 56, SEFS-S: 56, ES-L: 56, SES-L: 56, UAS-L: 46, ES-P: 56,
SES-P: 56, UAS-P: 46
19:17-19:32:
ES-S: 0, SES-S: 0, SEFS-S: 0, ES-L: 0, SES-L: 0, UAS-L: 0, ES-P: 0,
SES-P: 0, UAS-P: 0
19:02-19:17:
.....

```

### show interfaces load-balancing (SRX devices)

```

user@host> show interfaces load-balancing
Interface State      Last change  Member count
ams0      Up              1d 00:50    2
ams1      Up              00:00:59    2

```

**show interfaces load-balancing detail (SRX devices)**

```

user@host>show interfaces load-balancing detail
Load-balancing interfaces detail
Interface      : ams0
State          : Up
Last change    : 1d 00:51
Member count   : 2
Members        :
  Interface    Weight  State
  mams-2/0/0   10     Active
  mams-2/1/0   10     Active

```

**show interfaces mac-database (All MAC Addresses on a Port SRX devices)**

```

user@host> show interfaces mac-database xe-0/3/3
Physical interface: xe-0/3/3, Enabled, Physical link is Up
  Interface index: 372, SNMP ifIndex: 788
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2

```

MAC address	Input frames	Input bytes	Output frames	Output bytes
00:00:00:00:00:00	1	56	0	0
00:00:c0:01:01:02	7023810	323095260	0	0
00:00:c0:01:01:03	7023810	323095260	0	0
00:00:c0:01:01:04	7023810	323095260	0	0
00:00:c0:01:01:05	7023810	323095260	0	0
00:00:c0:01:01:06	7023810	323095260	0	0
00:00:c0:01:01:07	7023810	323095260	0	0
00:00:c0:01:01:08	7023809	323095214	0	0
00:00:c0:01:01:09	7023809	323095214	0	0
00:00:c0:01:01:0a	7023809	323095214	0	0
00:00:c0:01:01:0b	7023809	323095214	0	0
00:00:c8:01:01:02	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:03	30424784	1399540064	37448598	1722635508
00:00:c8:01:01:04	30424716	1399536936	37448523	1722632058
00:00:c8:01:01:05	30424789	1399540294	37448598	1722635508
00:00:c8:01:01:06	30424788	1399540248	37448597	1722635462
00:00:c8:01:01:07	30424783	1399540018	37448597	1722635462
00:00:c8:01:01:08	30424783	1399540018	37448596	1722635416
00:00:c8:01:01:09	8836796	406492616	8836795	406492570
00:00:c8:01:01:0a	30424712	1399536752	37448521	1722631966
00:00:c8:01:01:0b	30424715	1399536890	37448523	1722632058

```

Number of MAC addresses : 21

```

**show interfaces mac-database (All MAC Addresses on a Service SRX devices)**

```

user@host> show interfaces mac-database xe-0/3/3
Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2

```

MAC address	Input frames	Input bytes	Output frames	Output bytes
00:00:00:00:00:00	1	56	0	0

00:00:c0:01:01:02	7023810	323095260	0	0
00:00:c0:01:01:03	7023810	323095260	0	0
00:00:c0:01:01:04	7023810	323095260	0	0
00:00:c0:01:01:05	7023810	323095260	0	0
00:00:c0:01:01:06	7023810	323095260	0	0
00:00:c0:01:01:07	7023810	323095260	0	0
00:00:c0:01:01:08	7023809	323095214	0	0
00:00:c0:01:01:09	7023809	323095214	0	0
00:00:c0:01:01:0a	7023809	323095214	0	0
00:00:c0:01:01:0b	7023809	323095214	0	0
00:00:c8:01:01:02	31016568	1426762128	38040381	1749857526
00:00:c8:01:01:03	31016568	1426762128	38040382	1749857572
00:00:c8:01:01:04	31016499	1426758954	38040306	1749854076
00:00:c8:01:01:05	31016573	1426762358	38040381	1749857526
00:00:c8:01:01:06	31016573	1426762358	38040381	1749857526
00:00:c8:01:01:07	31016567	1426762082	38040380	1749857480
00:00:c8:01:01:08	31016567	1426762082	38040379	1749857434
00:00:c8:01:01:09	9428580	433714680	9428580	433714680
00:00:c8:01:01:0a	31016496	1426758816	38040304	1749853984
00:00:c8:01:01:0b	31016498	1426758908	38040307	1749854122

### show interfaces mac-database mac-address

```

user@host> show interfaces mac-database xe-0/3/3 mac-address (SRX devices)
00:00:c8:01:01:09
Physical interface: xe-0/3/3, Enabled, Physical link is Up
  Interface index: 372, SNMP ifIndex: 788
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, Loopback:
None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None

Logical interface xe-0/3/3.0 (Index 364) (SNMP ifIndex 829)
  Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
MAC address: 00:00:c8:01:01:09, Type: Configured,
  Input bytes   : 202324652
  Output bytes  : 202324560
  Input frames  : 4398362
  Output frames : 4398360
Policer statistics:
Policer type    Discarded frames  Discarded bytes
Output aggregate      3992386          183649756

```

### show interfaces mc-ae (SRX devices)

```

user@host> show interfaces mc-ae ae0 unit 512
Member Links   : ae0
Local Status   : active
Peer Status    : active
Logical Interface      : ae0.512
Core Facing Interface : Label Ethernet Interface
ICL-PL          : Label Ethernet Interface

```

### show interfaces media (SONET/SDH)

The following example displays the output fields unique to the **show interfaces media** command for a SONET interface (with no level of output specified):

```

user@host> show interfaces media so-4/1/2
Physical interface: so-4/1/2, Enabled, Physical link is Up
  Interface index: 168, SNMP ifIndex: 495
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC48,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 1783 (00:00:00 ago), Output: 1786 (00:00:08 ago)
  LCP state: Opened
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Not-configured
  CoS queues    : 8 supported
  Last flapped  : 2005-06-15 12:14:59 PDT (04:31:29 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  SONET alarms  : None
  SONET defects : None
  SONET errors:
    BIP-B1: 121, BIP-B2: 916, REI-L: 0, BIP-B3: 137, REI-P: 16747, BIP-BIP2: 0
  Received path trace: routerb so-1/1/2
  Transmitted path trace: routera so-4/1/2

```

#### show interfaces policers (SRX devices)

```

user@host> show interfaces policers
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/0/0       up    up
ge-0/0/0.0     up    up    inet
               up    up    iso
gr-0/3/0       up    up
ip-0/3/0       up    up
mt-0/3/0       up    up
pd-0/3/0       up    up
pe-0/3/0       up    up
...
so-2/0/0       up    up
so-2/0/0.0     up    up    inet so-2/0/0.0-in-policer so-2/0/0.0-out-policer
               up    up    iso
so-2/1/0       up    down
...

```

#### show interfaces policers interface-name (SRX devices)

```

user@host> show interfaces policers so-2/1/0
Interface      Admin Link Proto Input Policer      Output Policer
so-2/1/0       up    down
so-2/1/0.0     up    down inet so-2/1/0.0-in-policer so-2/1/0.0-out-policer
               up    down iso
               up    down inet6

```

#### show interfaces queue (SRX devices)

The following truncated example shows the CoS queue sizes for queues 0, 1, and 3. Queue 1 has a queue buffer size (guaranteed allocated memory) of 9192 bytes.

```

user@host> show interfaces queue
Physical interface: ge-0/0/0, Enabled, Physical link is Up
  Interface index: 134, SNMP ifIndex: 509
  Forwarding classes: 8 supported, 8 in use
  Egress queues: 8 supported, 8 in use
  Queue: 0, Forwarding classes: class0
    Queued:
      Packets      :                0          0 pps
      Bytes        :                0          0 bps
    Transmitted:
      Packets      :                0          0 pps
      Bytes        :                0          0 bps
      Tail-dropped packets :                0          0 pps
      RL-dropped packets  :                0          0 pps
      RL-dropped bytes    :                0          0 bps
      RED-dropped packets :                0          0 pps
      Low               :                0          0 pps
      Medium-low        :                0          0 pps
      Medium-high       :                0          0 pps
      High              :                0          0 pps
      RED-dropped bytes  :                0          0 bps
      Low               :                0          0 bps
      Medium-low        :                0          0 bps
      Medium-high       :                0          0 bps
      High              :                0          0 bps
    Queue Buffer Usage:
      Reserved buffer    :          118750000 bytes
      Queue-depth bytes  :
      Current            :                0
  ..
  ..
  Queue: 1, Forwarding classes: class1
  ..
  ..
  Queue Buffer Usage:
    Reserved buffer      :           9192 bytes
    Queue-depth bytes    :
    Current              :                0
  ..
  ..
  Queue: 3, Forwarding classes: class3
  Queued:
  ..
  ..
  Queue Buffer Usage:
    Reserved buffer      :           6250000 bytes
    Queue-depth bytes    :
    Current              :                0
  ..
  ..

```

#### show interfaces redundancy (SRX devices)

```

user@host> show interfaces redundancy
Interface  State      Last change  Primary  Secondary  Current status
rsp0       Not present
rsp1       On secondary  1d 23:56    sp-1/0/0 sp-0/2/0    both down
rsp2       On primary    10:10:27    sp-1/3/0 sp-0/2/0    secondary down
rlsq0      On primary    00:06:24    lsq-0/3/0 lsq-1/0/0    both up

```

**show interfaces redundancy (Aggregated Ethernet SRX devices)**

```

user@host> show interfaces redundancy
Interface State      Last change Primary      Secondary    Current status
r1sq0     On secondary  00:56:12    1sq-4/0/0    1sq-3/0/0    both up

ae0
ae1
ae2
ae3
ae4

```

**show interfaces redundancy detail (SRX devices)**

```

user@host> show interfaces redundancy detail
Interface      : r1sq0
State          : On primary
Last change    : 00:45:47
Primary        : 1sq-0/2/0
Secondary      : 1sq-1/2/0
Current status : both up
Mode           : hot-standby

Interface      : r1sq0:0
State          : On primary
Last change    : 00:45:46
Primary        : 1sq-0/2/0:0
Secondary      : 1sq-1/2/0:0
Current status : both up
Mode           : warm-standby

```

**show interfaces routing brief (SRX devices)**

```

user@host> show interfaces routing brief
Interface      State Addresses
so-5/0/3.0     Down  ISO    enabled
so-5/0/2.0     Up    MPLS   enabled
               ISO    enabled
               INET   192.168.2.120
               INET   enabled
so-5/0/1.0     Up    MPLS   enabled
               ISO    enabled
               INET   192.168.2.130
               INET   enabled
at-1/0/0.3     Up    CCC    enabled
at-1/0/0.2     Up    CCC    enabled
at-1/0/0.0     Up    ISO    enabled
               INET   192.168.90.10
               INET   enabled
1o0.0          Up    ISO    47.0005.80ff.f800.0000.0108.0001.1921.6800.5061.00
               ISO    enabled
               INET   127.0.0.1
fxp1.0         Up
fxp0.0         Up    INET   192.168.6.90

```

**show interfaces routing detail (SRX devices)**

```

user@host> show interfaces routing detail
so-5/0/3.0
  Index: 15, Refcount: 2, State: Up <Broadcast PointToPoint Multicast> Change:<>

```

```

Metric: 0, Up/down transitions: 0, Full-duplex
Link layer: HDLC serial line Encapsulation: PPP Bandwidth: 155Mbps
ISO address (null)
  State: <Broadcast PointToPoint Multicast> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
so-5/0/2.0
  Index: 14, Refcount: 7, State: <Up Broadcast PointToPoint Multicast> Change:<>

Metric: 0, Up/down transitions: 0, Full-duplex
Link layer: HDLC serial line Encapsulation: PPP Bandwidth: 155Mbps
MPLS address (null)
  State: <Up Broadcast PointToPoint Multicast> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4458 bytes
ISO address (null)
  State: <Up Broadcast PointToPoint Multicast> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
INET address 192.168.2.120
  State: <Up Broadcast PointToPoint Multicast Localup> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
  Local address: 192.168.2.120
  Destination: 192.168.2.110/32
INET address (null)
  State: <Up Broadcast PointToPoint Multicast> Change: <>
  Preference: 0 (120 down), Metric: 0, MTU: 4470 bytes
...

```

#### show interfaces routing-instance all (SRX devices)

```

user@host> show interfaces terse routing-instance all
Interface  Admin  Link  Proto  Local          Remote Instance
at-0/0/1   up     up    inet   10.0.0.1/24
ge-0/0/0.0 up     up    inet   192.168.4.28/24      sample-a
at-0/1/0.0 up     up    inet6  fe80::a:0:0:4/64     sample-b
so-0/0/0.0 up     up    inet   10.0.0.1/32

```

#### show interfaces snmp-index (SRX devices)

```

user@host> show interfaces snmp-index 33
Physical interface: so-2/1/1, Enabled, Physical link is Down
Interface index: 149, SNMP ifIndex: 33
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: 0C48,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives
CoS queues     : 8 supported
Last flapped   : 2005-06-15 11:45:57 PDT (05:38:43 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)
SONET alarms   : LOL, PLL, LOS
SONET defects  : LOL, PLL, LOF, LOS, SEF, AIS-L, AIS-P

```

#### show interfaces source-class all (SRX devices)

```

user@host> show interfaces source-class all
Logical interface so-0/1/0.0

Source class          Packets          Bytes
                     (packet-per-second) (bits-per-second)
gold                  1928095          161959980

```

```

( 889) ( 597762)
bronze 0 0
( 0) ( 0)
silver 0 0
( 0) ( 0)
Logical interface so-0/1/3.0
Source class Packets Bytes
(packet-per-second) (bits-per-second)
gold 0 0
( 0) ( 0)
bronze 0 0
( 0) ( 0)
silver 116113 9753492
( 939) ( 631616)

```

### show interfaces statistics (Fast Ethernet SRX devices)

```

user@host> show interfaces fe-1/3/1 statistics
Physical interface: fe-1/3/1, Enabled, Physical link is Up
Interface index: 144, SNMP ifIndex: 1042
Description: ford fe-1/3/1
Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues : 4 supported, 4 maximum usable queues
Current address: 00:90:69:93:04:dc, Hardware address: 00:90:69:93:04:dc
Last flapped : 2006-04-18 03:08:59 PDT (00:01:24 ago)
Statistics last cleared: Never
Input rate : 0 bps (0 pps)
Output rate : 0 bps (0 pps)
Input errors: 0, Output errors: 0
Active alarms : None
Active defects : None
Logical interface fe-1/3/1.0 (Index 69) (SNMP ifIndex 50)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500
Flags: Is-Primary, DCU, SCU-in
Destination class Packets Bytes
(packet-per-second) (bits-per-second)
silver1 0 0
( 0) ( 0)
silver2 0 0
( 0) ( 0)
silver3 0 0
( 0) ( 0)
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: 10.27.245/24, Local: 10.27.245.2,
Broadcast: 10.27.245.255
Protocol iso, MTU: 1497
Flags: Is-Primary

```

### show interfaces switch-port (SRX devices)

```

user@host# show interfaces ge-slot/0/0 switch-port port-number
Port 0, Physical link is Up
Speed: 100mbps, Auto-negotiation: Enabled
Statistics:
Total bytes 28437086 21792250
Total packets 409145 88008

```

```

Unicast packets          9987          83817
Multicast packets        145002         0
Broadcast packets        254156        4191
Multiple collisions       23           10
FIFO/CRC/Align errors    0           0
MAC pause frames         0           0
Oversized frames         0
Runt frames              0
Jabber frames            0
Fragment frames          0
Discarded frames         0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: None, Remote fault: OK, Link
partner Speed: 100 Mbps
Local resolution:
Flow control: None, Remote fault: Link OK

```

### show interfaces transport pm (SRX devices)

```

user@host> show interfaces transport pm all current et-0/1/0
Physical interface: et-0/1/0, SNMP ifIndex 515
14:45-current          Elapse time:900 Seconds
Near End               Suspect Flag:False          Reason:None
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

OTU-BBE                0              800            No              No
OTU-ES                 0              135            No              No
OTU-SES                0              90             No              No
OTU-UAS                427            90             No              No
Far End               Suspect Flag:True          Reason:Unknown
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

OTU-BBE                0              800            No              No
OTU-ES                 0              135            No              No
OTU-SES                0              90             No              No
OTU-UAS                0              90             No              No
Near End               Suspect Flag:False          Reason:None
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

ODU-BBE                0              800            No              No
ODU-ES                 0              135            No              No
ODU-SES                0              90             No              No
ODU-UAS                427            90             No              No
Far End               Suspect Flag:True          Reason:Unknown
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

ODU-BBE                0              800            No              No
ODU-ES                 0              135            No              No
ODU-SES                0              90             No              No
ODU-UAS                0              90             No              No
FEC                    Suspect Flag:False          Reason:None
PM                     COUNT          THRESHOLD      TCA-ENABLED    TCA-RAISED

FEC-CorrectedErr       2008544300      0              NA              NA
FEC-UncorrectedWords   0               0              NA              NA
BER                    Suspect Flag:False          Reason:None
PM                     MIN            MAX            AVG            THRESHOLD      TCA-ENABLED
TCA-RAISED
BER                    3.6e-5         5.8e-5         3.6e-5         10.0e-3        No

```

```

Yes
Physical interface: et-0/1/0, SNMP ifIndex 515
14:45-current
Suspect Flag:True          Reason:Object Disabled
PM          CURRENT  MIN      MAX      AVG      THRESHOLD
TCA-ENABLED      TCA-RAISED
(MIN)
(MAX)  (MIN) (MAX)  (MIN) (MAX)
Lane chromatic dispersion      0      0      0      0      0
0      NA  NA      NA  NA
Lane differential group delay  0      0      0      0      0
0      NA  NA      NA  NA
q Value      120      120      120      120      0
0      NA  NA      NA  NA
SNR      28      28      29      28      0
0      NA  NA      NA  NA
Tx output power(0.01dBm)      -5000      -5000      -5000      -5000      -300
-100    No  No      No  No
Rx input power(0.01dBm)      -3642      -3665      -3626      -3637      -1800
-500    No  No      No  No
Module temperature(Celsius)  46      46      46      46      -5
75      No  No      No  No
Tx laser bias current(0.1mA)  0      0      0      0      0
0      NA  NA      NA  NA
Rx laser bias current(0.1mA)  1270      1270      1270      1270      0
0      NA  NA      NA  NA
Carrier frequency offset(MHz) -186      -186      -186      -186      -5000
5000    No  No      No  No

```

#### show security zones (SRX devices)

```

user@host> show security zones
Functional zone: management
  Description: This is the management zone.
  Policy configurable: No
  Interfaces bound: 1
  Interfaces:
    ge-0/0/0.0
Security zone: Host
  Description: This is the host zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    fxp0.0
Security zone: abc
  Description: This is the abc zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    ge-0/0/1.0
Security zone: def
  Description: This is the def zone.
  Send reset for non-SYN session TCP packets: Off
  Policy configurable: Yes
  Interfaces bound: 1
  Interfaces:
    ge-0/0/2.0

```

## show interfaces (M Series, MX Series, T Series Routers, and PTX Series Management and Internal Ethernet)

<b>List of Syntax</b>	<a href="#">Syntax (M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface) on page 1426</a> <a href="#">Syntax (M Series, MX Series, T Series, and PTX Series Routers Internal Ethernet Interface) on page 1426</a>
<b>Syntax (M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface)</b>	<pre>show interfaces em0   fxp0 &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Syntax (M Series, MX Series, T Series, and PTX Series Routers Internal Ethernet Interface)</b>	<pre>show interfaces bcm0   em0   em1   fxp1   fxp2   ixgbe0   ixgbe1 &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.</p>
<b>Description</b>	(M Series, T Series, TX Matrix Plus, and PTX Series devices only) Display status information about the management Ethernet and internal Ethernet interfaces.
<b>Options</b>	<p><b>em0   fxp0</b>—(M Series, MX Series, T Series, and PTX Series) Display standard information about the management Ethernet interface. For supported Ethernet interface by chassis and Routing Engine, see <a href="#">“Supported Routing Engines by Router” on page 17</a>.</p> <p><b>bcm0   em0   em1   fxp1   fxp2   ixgbe0   ixgbe1</b>—(M Series, MX Series, T Series, and PTX Series) Display standard information about the internal Ethernet interfaces. See <a href="#">“Supported Routing Engines by Router” on page 17</a> for the internal Ethernet interface names for each Routing Engine by hardware platform.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>

**Required Privilege Level** view

**List of Sample Output**

- [show interfaces brief \(Management Ethernet\) on page 1430](#)
- [show interfaces \(Management Ethernet\) on page 1430](#)
- [show interfaces \(Management Ethernet \[TX Matrix Plus Router\]\) on page 1431](#)
- [show interfaces \(Management Ethernet \[PTX Series Packet Transport Routers\]\) on page 1431](#)
- [show interfaces detail \(Management Ethernet\) on page 1431](#)
- [show interfaces detail \(Management Ethernet \[TX Matrix Plus Router\]\) on page 1432](#)
- [show interfaces detail \(Management Ethernet \[PTX Packet Transport Routers\]\) on page 1433](#)
- [show interfaces extensive \(Management Ethernet\) on page 1433](#)
- [show interfaces extensive \(Management Ethernet \[TX Matrix Plus Router\]\) on page 1434](#)
- [show interfaces extensive \(Management Ethernet \[PTX Series Packet Transport Routers\]\) on page 1435](#)
- [show interfaces brief \(Management Ethernet\) on page 1436](#)
- [show interfaces brief \(Management Ethernet \[TX Matrix Plus Router\]\) on page 1436](#)
- [show interfaces brief \(Management Ethernet \[PTX Series Packet Transport Routers\]\) on page 1436](#)
- [show interfaces \(Internal Ethernet\) on page 1437](#)
- [show interfaces \(Internal Ethernet \[TX Matrix Plus Router\]\) on page 1437](#)
- [show interfaces detail \(Internal Ethernet\) on page 1438](#)
- [show interfaces detail \(Internal Ethernet \[TX Matrix Plus Router\]\) on page 1438](#)
- [show interfaces extensive \(internal Ethernet\) on page 1439](#)
- [show interfaces extensive \(internal Ethernet \[TX Matrix Plus Router\]\) on page 1440](#)

**Output Fields** [Table 70 on page 1427](#) lists the output fields for the **show interfaces** (management) command on the M Series routers, T Series routers, TX Matrix Plus routers, and PTX Series. Output fields are listed in the approximate order in which they appear.

*Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface*

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Physical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Type</b>	Type of interface.	All levels

*Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface (continued)*

Field Name	Field Description	Level of Output
<b>Link-level type</b>	Encapsulation type used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit (MTU)—Size of the largest packet to be transmitted.	All levels
<b>Clocking</b>	Reference clock source of the interface.	All levels
<b>Speed</b>	Network speed on the interface.	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Link type</b>	Data transmission type.	<b>detail extensive none</b>
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b>
<b>Physical info</b>	Information about the physical interface.	<b>detail extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down. Value is in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive none</b>
<b>Hardware address</b>	Media access control (MAC) address of the interface.	<b>detail extensive none</b>
<b>Alternate link address</b>	Backup link address.	<b>detail extensive</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Input packets</b>	Number of packets received on the physical interface.	None specified
<b>Output packets</b>	Number of packets transmitted on the physical interface.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	Number and rate of bytes and packets received and transmitted on the logical and physical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface.</li> </ul>	<b>detail extensive</b>

*Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface (continued)*

Field Name	Field Description	Level of Output
<b>Input errors</b>	<ul style="list-style-type: none"> <li>• <b>Errors</b>—Input errors on the interface.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Frames received smaller than the runt threshold.</li> <li>• <b>Giants</b>—Frames received larger than the giant threshold.</li> <li>• <b>Policed Discards</b>—Frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that Junos does not support.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Output errors</b>	<ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly, possibly once every 10 seconds, the cable, the remote system, or the interface is malfunctioning.</li> <li>• <b>Errors</b>—Sum of outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet dropped by the ASIC RED mechanism.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface; values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	<b>detail extensive none</b>
<b>inet</b>	IP address of the logical interface.	<b>brief</b>
<b>Protocol</b>	Protocol family configured on the logical interface (such as <b>iso</b> or <b>inet6</b> ).	<b>detail extensive none</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

*Table 70: show interfaces Output Fields for M Series, MX Series, T Series, and PTX Series Routers Management Ethernet Interface (continued)*

Field Name	Field Description	Level of Output
<b>Route table</b>	Route table in which this address exists. For example, <b>Route table:0</b> refers to inet.0.	<b>detail extensive</b>
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about address flags. Possible values are described in the “Addresses Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

## Sample Output

### show interfaces brief (Management Ethernet)

```

user@host> show interfaces fxp0 brief
Physical interface: fxp0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

Logical interface fxp0.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet 192.168.70.143/21

```

### show interfaces (Management Ethernet)

```

user@host> show interfaces fxp0
Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Half-Duplex
  Current address: 00:00:5E:00:53:89, Hardware address: 00:00:5E:00:53:89
  Last flapped   : Never
    Input packets : 80804
    Output packets: 1105

Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500
    Flags: Is-Primary

```

```

Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.64/21, Local: 192.168.70.143,
Broadcast: 192.168.71.255

```

### show interfaces (Management Ethernet [TX Matrix Plus Router])

```

user@host> show interfaces em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:c0, Hardware address: 00:00:5E:00:53:c0
  Last flapped   : Never
    Input packets : 1424
    Output packets: 5282

Logical interface em0.0 (Index 3) (SNMP ifIndex 18)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 1424
  Output packets: 5282
  Protocol inet, MTU: 1500
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
    192.168.178.127

```

### show interfaces (Management Ethernet [PTX Series Packet Transport Routers])

```

user@host> show interfaces em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:1b, Hardware address: 00:00:5E:00:53:1b
  Last flapped   : Never
    Input packets : 212581
    Output packets: 71

Logical interface em0.0 (Index 3) (SNMP ifIndex 0)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 212551
  Output packets: 71
  Protocol inet, MTU: 1500
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 192.168.3/24, Local: 192.168.3.30,
    Broadcast: 192.168.3.255

```

### show interfaces detail (Management Ethernet)

```

user@host> show interfaces fxp0 detail
Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1, Generation: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running

```

```
Interface flags: SNMP-Traps
Link type      : Half-Duplex
Physical info  : Unspecified
Hold-times    : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:89, Hardware address: 00:00:5E:00:53:89
Alternate link address: Unspecified
Last flapped   : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes  :          6484031
  Output bytes :          167503
  Input packets:          81008
  Output packets:         1110

Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500, Generation: 6, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.64/21, Local: 192.168.70.143,
    Broadcast: 192.168.71.255, Generation: 1
```

#### show interfaces detail (Management Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces em0 detail
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17, Generation: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:c0, Hardware address: 00:00:5E:00:53:c0
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes  :          124351
    Output bytes :         1353212
    Input packets:          1804
    Output packets:         5344
  IPv6 transit statistics:
    Input bytes  :              0
    Output bytes :              0
    Input packets:              0
    Output packets:             0

Logical interface em0.0 (Index 3) (SNMP ifIndex 18) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes  :          117135
    Output bytes :         1331647
    Input packets:          1804
    Output packets:         5344
  Local statistics:
    Input bytes  :          117135
    Output bytes :         1331647
    Input packets:          1804
    Output packets:         5344
```

```

Protocol inet, MTU: 1500, Generation: 1, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
192.168.178.127, Generation: 1

```

### show interfaces detail (Management Ethernet [PTX Packet Transport Routers])

```

user@host> show interfaces detail em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info  : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:1b, Hardware address: 00:00:5E:00:53:1b
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          15255909
    Output bytes  :           4608
    Input packets :          214753
    Output packets:           72
  IPv6 transit statistics:
    Input bytes   :           0
    Output bytes  :           0
    Input packets :           0
    Output packets:           0

  Logical interface em0.0 (Index 3) (SNMP ifIndex 0) (Generation 1)
  Flags: SNMP-Traps Encapsulation: ENET2
  Traffic statistics:
    Input bytes   :          14394630
    Output bytes  :           3024
    Input packets :          214723
    Output packets:           72
  Local statistics:
    Input bytes   :          14394630
    Output bytes  :           3024
    Input packets :          214723
    Output packets:           72
  Protocol inet, MTU: 1500, Generation: 1, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 192.168.3/24, Local: 192.168.3.30,
  Broadcast: 192.168.3.255, Generation: 1

```

### show interfaces extensive (Management Ethernet)

```

user@host> show interfaces fxp0 extensive
Physical interface: fxp0, Enabled, Physical link is Up
  Interface index: 1, SNMP ifIndex: 1, Generation: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running

```

```

Interface flags: SNMP-Traps
Link type       : Half-Duplex
Physical info   : Unspecified
Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:89, Hardware address: 00:00:5E:00:53:89
Alternate link address: Unspecified
Last flapped    : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          6678904
  Output bytes  :          169657
  Input packets :          83946
  Output packets:          1127
Input errors:
  Errors: 12, Drops: 0, Framing errors: 0, Runt: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

Logical interface fxp0.0 (Index 2) (SNMP ifIndex 13) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 6, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.64/21, Local: 192.168.70.143,
    Broadcast: 192.168.71.255, Generation: 1

```

#### show interfaces extensive (Management Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces em0 extensive
```

```

Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 17, Generation: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100Mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Physical info   : Unspecified
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:c0, Hardware address: 00:00:5E:00:53:c0
  Alternate link address: Unspecified
  Last flapped   : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          127120
    Output bytes  :          1357414
    Input packets :          1843
    Output packets:          5372
  IPv6 transit statistics:
    Input bytes   :          0
    Output bytes  :          0
    Input packets :          0
    Output packets:          0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Giants: 0, Policed discards:
0, Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

```

```

Logical interface em0.0 (Index 3) (SNMP ifIndex 18) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :          119748
  Output bytes :        1335719
  Input packets:          1843
  Output packets:        5372
Local statistics:
  Input bytes :          119748
  Output bytes :        1335719
  Input packets:          1843
  Output packets:        5372
Protocol inet, MTU: 1500, Generation: 1, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 192.168.178.0/25, Local: 192.168.178.11, Broadcast:
192.168.178.127, Generation: 1

```

### show interfaces extensive (Management Ethernet [PTX Series Packet Transport Routers])

```

user@host> show interfaces extensive em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags : Present Running
  Interface flags: SNMP-Traps
  Link type : Full-Duplex
  Physical info : Unspecified
  Hold-times : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:1b, Hardware address: 00:00:5E:00:53:1b
  Alternate link address: Unspecified
  Last flapped : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          15236459
    Output bytes :           4608
    Input packets:        214482
    Output packets:         72
  IPv6 transit statistics:
    Input bytes :           0
    Output bytes :           0
    Input packets:          0
    Output packets:         0
  Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
  Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

  Logical interface em0.0 (Index 3) (SNMP ifIndex 0) (Generation 1)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :          14376264
  Output bytes :           3024
  Input packets:        214452
  Output packets:         72
Local statistics:

```

```
Input bytes :          14376264
Output bytes :           3024
Input packets:         214452
Output packets:         72
Protocol inet, MTU: 1500, Generation: 1, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Default Is-Preferred Is-Primary
  Destination: 192.168.3/24, Local: 192.168.3.30,
  Broadcast: 192.168.3.255, Generation: 1
```

#### show interfaces brief (Management Ethernet)

```
user@host> show interfaces fxp1 brief
Physical interface: fxp1, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

Logical interface fxp1.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet  10.0.0.4/8
  inet6 fe80::200:ff:fe00:4/64
        fec0::10:0:0:4/64
  tnp   4
```

#### show interfaces brief (Management Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces em0 brief
Physical interface: em0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
  Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

Logical interface em0.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet  192.168.178.11/25
```

#### show interfaces brief (Management Ethernet [PTX Series Packet Transport Routers])

```
user@host> show interfaces em0 brief
Physical interface: em0, Enabled, Physical link is Up
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

  Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps

  Logical interface em0.0
  Flags: SNMP-Traps Encapsulation: ENET2
  inet  192.168.3.30/24
```

```
root@aboslutely> show interfaces em0 terse
Interface      Admin Link Proto  Local      Remote
em0            up    up
em0.0          up    up  inet    192.168.3.30/24
```

**show interfaces (Internal Ethernet)**

```

user@host> show interfaces fxp1
Physical interface: fxp1, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 2
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 100mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
  Last flapped   : Never
    Input packets : 30655
    Output packets: 33323

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14)
  Flags: SNMP-Traps Encapsulation: ENET2
  Protocol inet, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255
  Protocol inet6, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::200:ff:fe00:4
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: fec0::/64, Local: fec0::10:0:0:4
  Protocol tnp, MTU: 1500
    Flags: Primary, Is-Primary
    Addresses
      Local: 4

```

**show interfaces (Internal Ethernet [TX Matrix Plus Router])**

```

user@host> show interfaces ixgbe0
Physical interface: ixgbe0, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 116
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
  Last flapped   : Never
    Input packets : 2301738
    Output packets: 3951155

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 2301595
  Output packets: 3951155
  Protocol inet, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255
    Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary
      Destination: 192.168/16, Local: 192.168.0.4, Broadcast: 192.168.0.4
  Protocol inet6, MTU: 1500
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::200:ff:fe22:4
    Addresses, Flags: Is-Default Is-Preferred Is-Primary

```

```
Destination: fec0::/64, Local: fec0::a:22:0:4
Protocol tnp, MTU: 1500
Flags: Primary, Is-Primary
Addresses
Local: 0x22000004
```

### show interfaces detail (Internal Ethernet)

```
user@host> show interfaces fxp1 detail
Physical interface: fxp1, Enabled, Physical link is Up
Interface index: 2, SNMP ifIndex: 2, Generation: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: 100mbps
Device flags : Present Running
Interface flags: SNMP-Traps
Link type : Full-Duplex
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
Alternate link address: Unspecified
Last flapped : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes : 2339969
Output bytes : 15880707
Input packets: 30758
Output packets: 33443

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14) (Generation 2)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 7, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255,
Generation: 3
Protocol inet6, MTU: 1500, Generation: 8, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::200:ff:fe00:4,
Broadcast: Unspecified, Generation: 5
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: fec0::/64, Local: fec0::10:0:0:4, Broadcast: Unspecified,
Generation: 7
Protocol tnp, MTU: 1500, Generation: 9, Route table: 1
Flags: Primary, Is-Primary
Addresses, Flags: None
Destination: Unspecified, Local: 4, Broadcast: Unspecified,
Generation: 8
```

### show interfaces detail (Internal Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces ixgbe0 detail
Physical interface: ixgbe0, Enabled, Physical link is Up
Interface index: 2, SNMP ifIndex: 116, Generation: 3
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: 1000mbps
Device flags : Present Running
Interface flags: SNMP-Traps
Link type : Full-Duplex
Physical info : Unspecified
```

```

Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
Alternate link address: Unspecified
Last flapped    : Never
Statistics last cleared: Never
Traffic statistics:
Input bytes  :          238172825
Output bytes :          1338948955
Input packets:          2360984
Output packets:         4061512
IPv6 transit statistics:
Input bytes  :          0
Output bytes :          0
Input packets:          0
Output packets:          0

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117) (Generation 2)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
Input bytes  :          228720309
Output bytes :          1261387447
Input packets:          2360841
Output packets:         4061512
IPv6 transit statistics:
Input bytes  :          0
Output bytes :          0
Input packets:          0
Output packets:          0
Local statistics:
Input bytes  :          228720309
Output bytes :          1261387447
Input packets:          2360841
Output packets:         4061512
Protocol inet, MTU: 1500, Generation: 2, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Preferred
Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255, Generation:
2
Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary
Destination: 192.168/16, Local: 192.168.0.4, Broadcast: 191.255.255.255,
Generation: 3
Protocol inet6, MTU: 1500, Generation: 3, Route table: 1
Flags: Is-Primary
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::200:ff:fe22:4
Generation: 4
Addresses, Flags: Is-Default Is-Preferred Is-Primary
Destination: fec0::/64, Local: fec0::a:22:0:4
Protocol tnp, MTU: 1500, Generation: 5
Generation: 4, Route table: 1
Flags: Primary, Is-Primary
Addresses, Flags: None
Destination: Unspecified, Local: 0x22000004, Broadcast: Unspecified,
Generation: 6

```

### show interfaces extensive (internal Ethernet)

```

user@host> show interfaces fxp1 extensive
Physical interface: fxp1, Enabled, Physical link is Up
Interface index: 2, SNMP ifIndex: 2, Generation: 1
Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,

```

```
Speed: 100mbps
Device flags : Present Running
Interface flags: SNMP-Traps
Link type : Full-Duplex
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
Alternate link address: Unspecified
Last flapped : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 2349897
  Output bytes : 15888605
  Input packets: 30896
  Output packets: 33607
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0

Logical interface fxp1.0 (Index 3) (SNMP ifIndex 14) (Generation 2)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 7, Route table: 1
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 10/8, Local: 10.0.0.4, Broadcast: 10.255.255.255,
    Generation: 3
Protocol inet6, MTU: 1500, Generation: 8, Route table: 1
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::200:ff:fe00:4,
    Broadcast: Unspecified, Generation: 5
  Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: fec0::/64, Local: fec0::10:0:0:4, Broadcast: Unspecified,
    Generation: 7
Protocol tnp, MTU: 1500, Generation: 9, Route table: 1
  Flags: Primary, Is-Primary
  Addresses, Flags: None
    Destination: Unspecified, Local: 4, Broadcast: Unspecified,
    Generation: 8
```

#### show interfaces extensive (internal Ethernet [TX Matrix Plus Router])

```
user@host> show interfaces ixgbe0 extensive
Physical interface: ixgbe0, Enabled, Physical link is Up
  Interface index: 2, SNMP ifIndex: 116, Generation: 3
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Clocking: Unspecified,
Speed: 1000mbps
Device flags : Present Running
Interface flags: SNMP-Traps
Link type : Full-Duplex
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:04, Hardware address: 00:00:5E:00:53:04
Alternate link address: Unspecified
Last flapped : Never
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 242730780
```

```

Output bytes :          1348312269
Input packets:          2398737
Output packets:         4133510
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:         0
  Output packets:        0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface ixgbe0.0 (Index 4) (SNMP ifIndex 117) (Generation 2)
Flags: SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :          233127252
  Output bytes :         1269350897
  Input packets:         2398594
  Output packets:        4133510
IPv6 transit statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:         0
  Output packets:        0
Local statistics:
  Input bytes :          233127252
  Output bytes :         1269350897
  Input packets:         2398594
  Output packets:        4133510
Protocol inet, MTU: 1500, Generation: 2, Route table: 1
  Flags: Is-Primary
  Addresses, Flags: Is-Preferred
    Destination: 10/8, Local: 10.34.0.4, Broadcast: 10.255.255.255, Generation:
2
    Addresses, Flags: Primary Is-Default Is-Preferred Is-Primary
      Destination: 192.168/16, Local: 192.168.0.4, Broadcast: 191.255.255.255,
Generation: 3
  Protocol inet6, MTU: 1500, Generation: 3, Route table: 1
    Flags: Is-Primary
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::200:ff:fe22:4
Generation: 4
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
      Destination: fec0::/64, Local: fec0::a:22:0:4
  Protocol tnp, MTU: 1500, Generation: 5
  Generation: 4, Route table: 1
    Flags: Primary, Is-Primary
    Addresses, Flags: None
      Destination: Unspecified, Local: 0x22000004, Broadcast: Unspecified,
Generation: 6

```

## show interfaces (PPPoE)

<b>Syntax</b>	<pre>show interfaces pp0.logical &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M120 routers, M320 routers, and MX Series routers only). Display status information about the PPPoE interface.
<b>Options</b>	<p><b>pp0.logical</b>—Display standard status information about the PPPoE interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about PPPoE interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display PPPoE interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show interfaces (PPPoE) on page 1448</a></p> <p><a href="#">show interfaces (PPPoE over Aggregated Ethernet) on page 1448</a></p> <p><a href="#">show interfaces brief (PPPoE) on page 1449</a></p> <p><a href="#">show interfaces detail (PPPoE) on page 1449</a></p> <p><a href="#">show interfaces extensive (PPPoE on M120 and M320 Routers) on page 1450</a></p>
<b>Output Fields</b>	Table 71 on page 1442 lists the output fields for the <b>show interfaces (PPPoE)</b> command. Output fields are listed in the approximate order in which they appear.

Table 71: show interfaces (PPPoE) Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under “Common Output Fields Description” on page 1114.	All levels
<b>Interface index</b>	Physical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Type</b>	Physical interface type (PPPoE).	All levels
<b>Link-level type</b>	Encapsulation on the physical interface (PPPoE).	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source. It can be <b>Internal</b> or <b>External</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Link type</b>	Physical interface link type: <b>full duplex</b> or <b>half duplex</b> .	All levels
<b>Link flags</b>	Information about the interface. Possible values are described in the "Link Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Input rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output rate</b>	Output rate in bps and pps.	None specified
<b>Physical Info</b>	Physical interface information.	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive</b>
<b>Hardware address</b>	MAC address of the hardware.	<b>detail extensive</b>
<b>Alternate link address</b>	Backup address of the link.	<b>detail extensive</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	<p>Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <p><b>NOTE:</b> These fields include dropped traffic and exception traffic, as those fields are not separately defined.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of B chip Tx drops and IXP Tx net transmit drops.</li> </ul>	<b>extensive</b>
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b> —Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), then the cable, the far-end system, or the PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of B chip Tx drops and IXP Tx net transmit drops.</li> </ul>	<b>extensive</b>

---

### Logical Interface

---

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Logical interface index number (which reflects its initialization sequence).	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Encapsulation</b>	Type of encapsulation configured on the logical interface.	All levels
<b>PPP parameters</b>	PPP status: <ul style="list-style-type: none"> <li>• LCP restart timer—Length of time (in milliseconds) between successive Link Control Protocol (LCP) configuration requests.</li> <li>• NCP restart timer—Length of time (in milliseconds) between successive Network Control Protocol (NCP) configuration requests.</li> </ul>	<b>detail</b>
<b>PPPoE</b>	PPPoE status: <ul style="list-style-type: none"> <li>• <b>State</b>—State of the logical interface (<b>up</b> or <b>down</b>).</li> <li>• <b>Session ID</b>—PPPoE session ID.</li> <li>• <b>Service name</b>—Type of service required. Can be used to indicate an Internet service provider (ISP) name or a class or quality of service.</li> <li>• <b>Configured AC name</b>—Configured access concentrator name.</li> <li>• <b>Auto-reconnect timeout</b>—Time after which to try to reconnect after a PPPoE session is terminated, in seconds.</li> <li>• <b>Idle Timeout</b>—Length of time (in seconds) that a connection can be idle before disconnecting.</li> <li>• <b>Underlying interface</b>—Interface on which PPPoE is running.</li> </ul>	All levels
<b>Link</b>	Name of the physical interfaces for member links in an aggregated Ethernet bundle for a PPPoE over aggregated Ethernet configuration. PPPoE traffic goes out on these interfaces.	All levels
<b>Traffic statistics</b>	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.	<b>detail extensive</b>

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
IPv6 transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <p><b>NOTE:</b> The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	detail extensive
Local statistics	<p>Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.</p>	detail extensive
Transit statistics	<p>Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter usually takes less than 1 second to stabilize.</p> <p><b>NOTE:</b> The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p>	detail extensive
Keepalive settings	<p>(PPP and HDLC) Configured settings for keepalives.</p> <ul style="list-style-type: none"> <li>• <b>interval seconds</b>—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds.</li> <li>• <b>down-count number</b>—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3.</li> <li>• <b>up-count number</b>—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1.</li> </ul>	detail extensive
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> <li>• <b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li>• <b>(last seen 00:00:00 ago)</b>—Time the last keepalive packet was received, in the format <i>hh:mm:ss</i>.</li> </ul> </li> <li>• <b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li>• <b>(last seen 00:00:00 ago)</b>—Time the last keepalive packet was sent, in the format <i>hh:mm:ss</i>.</li> </ul> </li> </ul> <p>(MX Series routers with MPCs/MICs) When an MX Series router with MPCs/MICs is using PPP fast keepalive for a PPP link, the display does not include the number of keepalive packets received or sent, or the amount of time since the router received or sent the last keepalive packet.</p>	detail extensive
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>LCP state</b>	(PPP) Link Control Protocol state.  <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—LCP is not configured on the interface.</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	none <b>detail extensive</b>
<b>NCP state</b>	(PPP) Network Control Protocol state.  <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—NCP is not configured on the interface.</li> <li>• <b>Opened</b>—NCP negotiation is successful.</li> </ul>	<b>detail extensive</b> none
<b>CHAP state</b>	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.  <ul style="list-style-type: none"> <li>• <b>Chap-Chal-received</b>—Challenge was received but response not yet sent.</li> <li>• <b>Chap-Chal-sent</b>—Challenge was sent.</li> <li>• <b>Chap-Resp-received</b>—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response was sent for the challenge received.</li> <li>• <b>Closed</b>—CHAP authentication is incomplete.</li> <li>• <b>Failure</b>—CHAP authentication failed.</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Success</b>—CHAP authentication was successful.</li> </ul>	none <b>detail extensive</b>
<b>Protocol</b>	Protocol family configured on the logical interface.	<b>detail extensive</b> none
<i><b>protocol-family</b></i>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .	<b>detail extensive</b> none
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b> none

Table 71: show interfaces (PPPoE) Output Fields (continued)

Field Name	Field Description	Level of Output
Addresses, Flags	Information about the addresses configured for the protocol family. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address.	detail extensive none

## Sample Output

### show interfaces (PPPoE)

```

user@host> show interfaces pp0
Physical interface: pp0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 24
  Type: PPPoE, Link-level type: PPPoE, MTU: 1532
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)

Logical interface pp0.0 (Index 72) (SNMP ifIndex 72)
  Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionDown, Session ID: None,
    Service name: None, Configured AC name: sapphire,
    Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
    Underlying interface: at-5/0/0.0 (Index 70)
  Input packets : 0
  Output packets: 0
  LCP state: Not-configured
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mp1s: Not-configured
  CHAP state: Closed
    Protocol inet, MTU: 100
    Flags: User-MTU, Negotiate-Address

```

### show interfaces (PPPoE over Aggregated Ethernet)

```

user@host> show interfaces pp0.1073773821
Logical interface pp0.1073773821 (Index 80) (SNMP ifIndex 32584)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionUp, Session ID: 1,
    Session AC name: alcor, Remote MAC address: 00:00:5e:00:53:01,
    Underlying interface: demux0.100 (Index 88)
  Link:
    ge-1/0/0.32767
    ge-1/0/1.32767

```

```

    Input packets : 6
    Output packets: 6
    LCP state: Opened
    NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mp1s:
Not-configured
    CHAP state: Closed
    PAP state: Success
    Protocol inet, MTU: 1500
    Flags: Sendbcst-pkt-to-re
    Addresses, Flags: Is-Primary
    Local: 203.0.113.1

```

### show interfaces brief (PPPoE)

```

user@host> show interfaces pp0 brief
Physical interface: pp0, Enabled, Physical link is Up
  Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps

Logical interface pp0.0
  Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionDown, Session ID: None,
    Service name: None, Configured AC name: sapphire,
    Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
    Underlying interface: at-5/0/0.0 (Index 70)
  inet

```

### show interfaces detail (PPPoE)

```

user@host> show interfaces pp0 detail
Physical interface: pp0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 24, Generation: 9
  Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0          0 bps
    Output bytes  : 0          0 bps
    Input packets : 0          0 pps
    Output packets: 0          0 pps
Logical interface pp0.0 (Index 72) (SNMP ifIndex 72) (Generation 14)
  Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
  PPPoE:
    State: SessionDown, Session ID: None,
    Service name: None, Configured AC name: sapphire,
    Auto-reconnect timeout: 100 seconds, Idle timeout: Never,
    Underlying interface: at-5/0/0.0 (Index 70)
  Traffic statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0

```

```

Output packets:                                0
Local statistics:
Input bytes :                                  0
Output bytes :                                 0
Input packets:                                0
Output packets:                               0
Transit statistics:
Input bytes :                                  0          0 bps
Output bytes :                                 0          0 bps
Input packets:                                0          0 pps
Output packets:                               0          0 pps
LCP state: Not-configured
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
Protocol inet, MTU: 100, Generation: 14, Route table: 0
Flags: User-MTU, Negotiate-Address

```

### show interfaces extensive (PPPoE on M120 and M320 Routers)

```

user@host> show interfaces pp0 extensive
Physical interface: pp0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 93, Generation: 129
Type: PPPoE, Link-level type: PPPoE, MTU: 1532, Speed: Unspecified
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link type : Full-Duplex
Link flags : None
Physical info : Unspecified
Hold-times : Up 0 ms, Down 0 ms
Current address: Unspecified, Hardware address: Unspecified
Alternate link address: Unspecified
Statistics last cleared: Never
Traffic statistics:
Input bytes :          972192          0 bps
Output bytes :         975010          0 bps
Input packets:          1338          0 pps
Output packets:         1473          0 pps
IPv6 transit statistics:
Input bytes :          0
Output bytes :          0
Input packets:          0
Output packets:         0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface pp0.0 (Index 69) (SNMP ifIndex 96) (Generation 194)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPPoE
PPPoE:
State: SessionUp, Session ID: 26,
Session AC name: None, AC MAC address: 00:00:5e:00:53:12,
Service name: None, Configured AC name: None,
Auto-reconnect timeout: Never, Idle timeout: Never,
Underlying interface: ge-3/0/1.0 (Index 67)
Traffic statistics:
Input bytes :          252

```

```

Output bytes :                296
Input packets:                7
Output packets:               8
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :               0
  Input packets:              0
  Output packets:             0
Local statistics:
  Input bytes :                252
  Output bytes :               296
  Input packets:              7
  Output packets:             8
Transit statistics:
  Input bytes :                0                0 bps
  Output bytes :               0                0 bps
  Input packets:              0                0 pps
  Output packets:             0                0 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :               0
  Input packets:              0
  Output packets:             0
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 1 (last seen 00:00:00 ago)
  Output: 1 (last sent 00:00:03 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
PAP state: Closed
Protocol inet, MTU: 1492, Generation: 171, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 203.0.113.2, Local: 203.0.113.1, Broadcast: Unspecified,
Generation: 206

```

## show interfaces (PTX Series Packet Transport Routers)

---

<b>Syntax</b>	<code>show interfaces et-<i>fpc/pic/port</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;descriptions&gt;</code> <code>&lt;media&gt;</code> <code>&lt;snmp-index <i>snmp-index</i>&gt;</code> <code>&lt;statistics&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.0. Command introduced in Junos OS Release 12.1 for PTX Series Packet Transport Routers.
<b>Description</b>	(PTX Series Packet Transport Routers only) Display status information about the specified Ethernet interface.
<b>Options</b>	<b>et-<i>fpc/pic/port</i></b> —Display standard information about the specified Ethernet interface.  <b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b>descriptions</b> —(Optional) Display interface description strings.  <b>media</b> —(Optional) Display media-specific information about network interfaces.  <b>snmp-index <i>snmp-index</i></b> —(Optional) Display information for the specified SNMP index of the interface.  <b>statistics</b> —(Optional) Display static interface statistics.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces brief (PTX5000 Packet Transport Router) on page 1462</a> <a href="#">show interfaces extensive (PTX5000 Packet Transport Router) on page 1462</a> <a href="#">show interfaces terse (PTX5000 Packet Transport Router) on page 1463</a>
<b>Output Fields</b>	See <a href="#">Table 72 on page 1453</a> for the output fields for the <b>show interfaces</b> (PTX Series Packet Transport Routers) command.

Table 72: show interfaces PTX Series Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Index number of the physical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit size on the physical interface.	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>BPDU Error</b>	Bridge protocol data unit (BPDU) errors (if any).	All levels
<b>MAC-Rewrite</b>	MAC Rewrite errors (if any).	All levels
<b>Loopback</b>	Loopback status: <b>Enabled</b> or <b>Disabled</b> . If loopback is enabled, type of loopback: <b>Local</b> or <b>Remote</b> .	All levels
<b>Source filtering</b>	Source filtering status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Flow control</b>	Flow control status: <b>Enabled</b> or <b>Disabled</b> .	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Links Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive none</b>
<b>Hardware address</b>	Hardware MAC address.	<b>detail extensive none</b>

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul> <p><b>NOTE:</b> <b>Input bytes</b> and <b>output bytes</b> are counted as Layer 3 packet length.</p>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. L3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> </ul> <p><b>NOTE:</b> The L3 incompletes field is <i>not</i> supported on PTX Series Packet Transport Routers.</p> <ul style="list-style-type: none"> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the receive direction that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Collisions</b>—Number of Ethernet collisions. The Gigabit Ethernet PIC supports only full-duplex operation, so for Gigabit Ethernet PICs, this number should always remain 0. If it is nonzero, there is a software bug.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>FIFO errors</b>—Number of FIFO errors in the send direction as reported by the ASIC on the PIC. If this value is ever nonzero, the PIC is probably malfunctioning.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.	<b>detail extensive</b>
<b>Queue counters (Egress)</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Ingress queues</b>	Total number of ingress queues supported on the specified interface.	<b>extensive</b>
<b>Queue counters (Ingress)</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>extensive</b>

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Active alarms and Active defects</b>	<p>Ethernet-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. These fields can contain the value <b>None</b> or <b>Link</b>.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—There are no active defects or alarms.</li> <li>• <b>Link</b>—Interface has lost its link state, which usually means that the cable is unplugged, the far-end system has been turned off, or the PIC is malfunctioning.</li> <li>• <b>LOCAL-FAULT</b>—Link fault signaling operates between the remote PHY RS (Reconciliation sub-layer) and the local RS. A Local Fault is used to signal a detected fault between the remote RS and the local RS to the local Ethernet interface.</li> <li>• <b>REMOTE-FAULT</b>—When the Local Fault status reaches an RS, the RS stops sending MAC data and continuously generates the Remote Fault status on the transmit data path .</li> </ul>	<b>detail extensive none</b>
<b>MAC statistics</b>	<p><b>Receive</b> and <b>Transmit</b> statistics reported by the PIC's MAC subsystem, including the following:</p> <ul style="list-style-type: none"> <li>• <b>Total octets</b> and <b>total packets</b>—Total number of octets and packets.</li> <li>• <b>Unicast packets</b>, <b>Broadcast packets</b>, and <b>Multicast packets</b>—Number of unicast, broadcast, and multicast packets.</li> <li>• <b>CRC/Align errors</b>—Total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, and had either a bad FCS with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).</li> <li>• <b>FIFO error</b>—Number of FIFO errors that are reported by the ASIC on the PIC. If this value is ever nonzero, the PIC or a cable is probably malfunctioning.</li> <li>• <b>MAC control frames</b>—Number of MAC control frames.</li> <li>• <b>MAC pause frames</b>—Number of MAC control frames with <b>pause</b> operational code.</li> <li>• <b>Oversized frames</b>—Number of frames that exceed 1518 octets.</li> <li>• <b>Jabber frames</b>—Number of frames that were longer than 1518 octets (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. This definition of jabber is different from the definition in IEEE-802.3 section 8.2.1.5 (10BASE5) and section 10.3.1.4 (10BASE2). These documents define jabber as the condition in which any packet exceeds 20 ms. The allowed range to detect jabber is from 20 ms to 150 ms.</li> <li>• <b>Fragment frames</b>—Total number of packets that were less than 64 octets in length (excluding framing bits, but including FCS octets), and had either an FCS error or an alignment error. Fragment frames normally increment because both runts (which are normal occurrences caused by collisions) and noise hits are counted.</li> <li>• <b>VLAN tagged frames</b>—Number of frames that are VLAN tagged. The system uses the TPID of 0x8100 in the frame to determine whether a frame is tagged or not.</li> <li>• <b>Code violations</b>—Number of times an event caused the PHY to indicate "Data reception error" or "invalid data symbol error."</li> </ul>	<b>extensive</b>

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
Filter statistics	<p><b>Receive</b> and <b>Transmit</b> statistics reported by the PIC's MAC address filter subsystem. The filtering is done by the content-addressable memory (CAM) on the PIC. The filter examines a packet's source and destination MAC addresses to determine whether the packet should enter the system or be rejected.</p> <ul style="list-style-type: none"> <li>• <b>Input packet count</b>—Number of packets received from the MAC hardware that the filter processed.</li> <li>• <b>Input packet rejects</b>—Number of packets that the filter rejected because of either the source MAC address or the destination MAC address.</li> <li>• <b>Input DA rejects</b>—Number of packets that the filter rejected because the destination MAC address of the packet is not on the accept list. It is normal for this value to increment. When it increments very quickly and no traffic is entering the router from the far-end system, either there is a bad ARP entry on the far-end system, or multicast routing is not on and the far-end system is sending many multicast packets to the local router (which the router is rejecting).</li> <li>• <b>Input SA rejects</b>—Number of packets that the filter rejected because the source MAC address of the packet is not on the accept list. The value in this field should increment only if source MAC address filtering has been enabled. If filtering is enabled, if the value increments quickly, and if the system is not receiving traffic that it should from the far-end system, it means that the user-configured source MAC addresses for this interface are incorrect.</li> <li>• <b>Output packet count</b>—Number of packets that the filter has given to the MAC hardware.</li> <li>• <b>Output packet pad count</b>—Number of packets the filter padded to the minimum Ethernet size (60 bytes) before giving the packet to the MAC hardware. Usually, padding is done only on small ARP packets, but some very small IP packets can also require padding. If this value increments rapidly, either the system is trying to find an ARP entry for a far-end system that does not exist or it is misconfigured.</li> <li>• <b>Output packet error count</b>—Number of packets with an indicated error that the filter was given to transmit. These packets are usually aged packets or are the result of a bandwidth problem on the FPC hardware. On a normal system, the value of this field should not increment.</li> <li>• <b>CAM destination filters, CAM source filters</b>—Number of entries in the CAM dedicated to destination and source MAC address filters. There can only be up to 64 source entries. If source filtering is disabled, which is the default, the values for these fields should be 0.</li> </ul>	extensive

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
Autonegotiation information	<p>Information about link autonegotiation.</p> <ul style="list-style-type: none"> <li>• <b>Negotiation status:</b> <ul style="list-style-type: none"> <li>• <b>Incomplete</b>—Ethernet interface has the speed or link mode configured.</li> <li>• <b>No autonegotiation</b>—Remote Ethernet interface has the speed or link mode configured, or does not perform autonegotiation.</li> <li>• <b>Complete</b>—Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> </ul> </li> <li>• <b>Link partner status</b>—OK when Ethernet interface is connected to a device that performs autonegotiation and the autonegotiation process is successful.</li> <li>• <b>Link partner:</b> <ul style="list-style-type: none"> <li>• <b>Link mode</b>—Depending on the capability of the attached Ethernet device, either <b>Full-duplex</b> or <b>Half-duplex</b>.</li> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Fast Ethernet interfaces, the type is <b>None</b>. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information from the link partner—<b>Failure</b> indicates a receive link error. <b>OK</b> indicates that the link partner is receiving. <b>Negotiation error</b> indicates a negotiation error. <b>Offline</b> indicates that the link partner is going offline.</li> </ul> </li> <li>• <b>Local resolution</b>—Information from the link partner: <ul style="list-style-type: none"> <li>• <b>Flow control</b>—Types of flow control supported by the remote Ethernet device. For Gigabit Ethernet interfaces, types are <b>Symmetric</b> (link partner supports <b>PAUSE</b> on receive and transmit), <b>Asymmetric</b> (link partner supports <b>PAUSE</b> on transmit), and <b>Symmetric/Asymmetric</b> (link partner supports both <b>PAUSE</b> on receive and transmit or only <b>PAUSE</b> receive).</li> <li>• <b>Remote fault</b>—Remote fault information. <b>Link OK</b> (no error detected on receive), <b>Offline</b> (local interface is offline), and <b>Link Failure</b> (link error detected on receive).</li> </ul> </li> </ul>	extensive
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> </ul>	extensive

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CoS information</b>	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
<b>VLAN-Tag</b>	<p>Rewrite profile applied to incoming or outgoing frames on the outer (<b>Out</b>) VLAN tag or for both the outer and inner (<b>In</b>) VLAN tags.</p> <ul style="list-style-type: none"> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>pop</b>—The outer VLAN tag of the incoming frame is removed.</li> <li>• <b>swap</b>—The outer VLAN tag of the incoming frame is overwritten with the user-specified VLAN tag information.</li> <li>• <b>push</b>—An outer VLAN tag is pushed in front of the existing VLAN tag.</li> <li>• <b>push-push</b>—Two VLAN tags are pushed in from the incoming frame.</li> <li>• <b>swap-push</b>—The outer VLAN tag of the incoming frame is replaced by a user-specified VLAN tag value. A user-specified outer VLAN tag is pushed in front. The outer tag becomes an inner tag in the final frame.</li> <li>• <b>swap-swap</b>—Both the inner and the outer VLAN tags of the incoming frame are replaced by the user-specified VLAN tag value.</li> <li>• <b>pop-swap</b>—The outer VLAN tag of the incoming frame is removed, and the inner VLAN tag of the incoming frame is replaced by the user-specified VLAN tag value. The inner tag becomes the outer tag in the final frame.</li> <li>• <b>pop-pop</b>—Both the outer and inner VLAN tags of the incoming frame are removed.</li> </ul>	<b>brief detail extensive none</b>
<b>Demux</b>	<p>IP demultiplexing (demux) value that appears if this interface is used as the demux underlying interface. The output is one of the following:</p> <ul style="list-style-type: none"> <li>• Source Family Inet</li> <li>• Destination Family Inet</li> </ul>	<b>detail extensive none</b>
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive none</b>
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive none</b>
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive none</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the specified interface set.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> </ul> <p><b>NOTE:</b> <b>Input bytes</b> and <b>output bytes</b> are counted as Layer 3 packet length.</p>	<b>detail extensive</b>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.	<b>extensive</b>
<b>Local statistics</b>	Number and rate of bytes and packets destined to the router.	<b>extensive</b>

Table 72: show interfaces PTX Series Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Transit statistics</b>	Number and rate of bytes and packets transiting the switch.	<b>extensive</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive none</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive</b>
<b>Donor interface</b>	(Unnumbered Ethernet) Interface from which an unnumbered Ethernet interface borrows an IPv4 address.	<b>detail extensive none</b>
<b>Preferred source address</b>	(Unnumbered Ethernet) Secondary IPv4 address of the donor loopback interface that acts as the preferred source address for the unnumbered Ethernet interface.	<b>detail extensive none</b>
<b>Input Filters</b>	Names of any input filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	<b>detail extensive</b>
<b>Output Filters</b>	Names of any output filters applied to this interface. If you specify a precedence value for any filter in a dynamic profile, filter precedence values appear in parentheses next to all interfaces.	<b>detail extensive</b>
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>protocol-family</b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Flags</b>	Information about flags (possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address of the logical interlace.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>

## Sample Output

### show interfaces brief (PTX5000 Packet Transport Router)

```
user@host> show interfaces brief et-7/0/0
Physical interface: et-7/0/0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, Loopback: Disabled, Source
  filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
```

### show interfaces extensive (PTX5000 Packet Transport Router)

```
user@host> show interfaces et-7/0/0 extensive
Physical interface: et-7/0/0, Enabled, Physical link is Up
  Interface index: 168, SNMP ifIndex: 501, Generation: 171
  Link-level type: Ethernet, MTU: 1514, Speed: 10Gbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
  control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 88:e0:f3:3b:de:43, Hardware address: 88:e0:f3:3b:de:43
  Last flapped   : 2012-01-18 11:48:24 PST (01:51:00 ago)
  Statistics last cleared: 2012-01-18 13:38:54 PST (00:00:30 ago)
  Traffic statistics:
    Input bytes   : 0 0 bps
    Output bytes  : 0 0 bps
    Input packets : 0 0 pps
    Output packets: 0 0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
  incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
  Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort    0 0 0
    1 expedited-fo   0 0 0
    2 assured-forw   0 0 0
    3 network-cont   0 0 0

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
```

```

3 network-control
Active alarms : None
Active defects : None
MAC statistics:
Total octets          Receive      Transmit
Total packets        0          0
Unicast packets      0          0
Broadcast packets    0          0
Multicast packets    0          0
CRC/Align errors     0          0
FIFO errors          0          0
MAC control frames   0          0
MAC pause frames     0          0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0
Filter statistics:
Input packet count    0
Input packet rejects  0
Input DA rejects     0
Input SA rejects     0
Output packet count   0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Incomplete
Packet Forwarding Engine configuration:
Destination slot: 7
CoS information:
Direction : Output
CoS transmit queue    Bandwidth      Buffer Priority
Limit
0 best-effort         %      bps      %      usec      low
none
3 network-control     5      500000000  5      0      low
none
Interface transmit statistics: Disabled

```

#### show interfaces terse (PTX5000 Packet Transport Router)

```

user@host> show interfaces terse
Interface      Admin Link Proto  Local      Remote
et-2/0/0       up    up
et-2/0/1       up    up
et-2/0/2       up    up
et-2/0/3       up    up
et-2/0/4       up    up
et-2/0/5       up    down
et-2/0/6       up    up
et-2/0/7       up    up
et-2/0/8       up    up
et-2/0/9       up    down
et-2/0/10      up    up
et-2/0/11      up    up
et-2/0/12      up    up
et-2/0/13      up    down
et-2/0/14      up    up

```

et-2/0/15	up	up	
et-2/0/16	up	up	
et-2/0/17	up	down	
et-2/0/18	up	down	
et-2/0/19	up	up	
et-2/0/20	up	down	
et-2/0/21	up	up	
et-2/0/22	up	down	
et-2/0/23	up	up	
et-2/1/0	up	up	
et-2/1/1	up	up	
et-2/1/2	up	up	
et-2/1/3	up	up	
et-2/1/4	up	up	
et-2/1/5	up	up	
et-2/1/6	up	up	
et-2/1/7	up	up	
et-2/1/8	up	up	
et-2/1/9	up	up	
et-2/1/10	up	up	
et-2/1/11	up	up	
et-2/1/12	up	up	
et-2/1/13	up	up	
et-2/1/14	up	up	
et-2/1/15	up	up	
et-2/1/16	up	up	
et-2/1/17	up	up	
et-2/1/18	up	up	
et-2/1/19	up	up	
et-2/1/20	up	up	
et-2/1/21	up	up	
et-2/1/22	up	up	
et-2/1/23	up	up	
et-5/0/0	up	up	
et-5/0/0.0	up	up	ccc
et-5/0/0.32767	up	up	multiservice
et-5/0/1	up	up	
et-5/0/2	up	up	
et-5/0/3	up	down	
et-5/0/4	up	down	
et-5/0/5	up	up	
et-5/0/5.0	up	up	ccc
et-5/0/5.32767	up	up	multiservice
et-5/0/6	up	up	
et-5/0/7	up	up	
et-5/0/8	up	down	
et-5/0/9	up	up	
et-5/0/10	up	up	
et-5/0/11	up	up	
et-5/0/12	up	up	
et-5/0/13	up	down	
et-5/0/14	up	down	
et-5/0/15	up	up	
et-5/0/16	up	up	
et-5/0/17	up	up	
et-5/0/18	up	up	
et-5/0/19	up	up	
et-5/0/20	up	down	
et-5/0/21	up	down	
et-5/0/22	up	up	
et-5/0/23	up	up	

et-5/1/0	up	up		
et-5/1/1	up	up		
et-7/0/0	up	up		
et-7/0/1	up	up		
et-7/0/2	up	up		
et-7/0/3	up	up		
et-7/0/4	up	up		
et-7/0/5	up	up		
et-7/0/6	up	up		
et-7/0/7	up	up		
et-7/0/8	up	up		
et-7/0/9	up	up		
et-7/0/10	up	down		
et-7/0/11	up	down		
et-7/0/12	up	down		
et-7/0/13	up	down		
et-7/0/14	up	down		
et-7/0/15	up	down		
et-7/0/16	up	down		
et-7/0/17	up	down		
et-7/0/18	up	down		
et-7/0/19	up	down		
et-7/0/20	up	down		
et-7/0/21	up	down		
et-7/0/22	up	down		
et-7/0/23	up	down		
dsc	up	up		
em0	up	up		
em0.0	up	up	inet	192.168.177.61/25
gre	up	up		
ipip	up	up		
ixgbe0	up	up		
ixgbe0.0	up	up	inet	10.0.0.4/8
				128.0.0.1/2
				128.0.0.4/2
			inet6	fe80::200:ff:fe00:4/64
				fec0::a:0:0:4/64
			tnp	0x4
ixgbe1	up	up		
ixgbe1.0	up	up	inet	10.0.0.4/8
				128.0.0.1/2
				128.0.0.4/2
			inet6	fe80::200:1ff:fe00:4/64
				fec0::a:0:0:4/64
			tnp	0x4
lo0	up	up		
lo0.0	up	up	inet	10.255.177.61 --> 0/0
				127.0.0.1 --> 0/0
			iso	
				47.0005.80ff.f800.0000.0108.0001.0102.5517.7061
			inet6	abcd::10:255:177:61
				fe80::ee9e:cd0f:fc02:b01e
lo0.16384	up	up	inet	127.0.0.1 --> 0/0
lo0.16385	up	up	inet	
lsi	up	up		
mtun	up	up		
pimd	up	up		
pime	up	up		
tap	up	up		

## show interfaces (SONET/SDH)

---

<b>Syntax</b>	<code>show interfaces <i>so-fpc/pic/port</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;descriptions&gt;</code> <code>&lt;media&gt;</code> <code>&lt;snmp-index <i>snmp-index</i>&gt;</code> <code>&lt;statistics&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display status information about the specified SONET/SDH interface.
<b>Options</b>	<p><b><i>so-fpc/pic/port</i></b>—Display standard information about the specified SONET/SDH interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">SONET/SDH Interfaces Overview</a></li></ul>
<b>List of Sample Output</b>	<p><a href="#">show interfaces (SDH Mode, PPP) on page 1479</a></p> <p><a href="#">show interfaces brief (SDH Mode, PPP) on page 1480</a></p> <p><a href="#">show interfaces detail (SDH Mode, PPP) on page 1480</a></p> <p><a href="#">show interfaces extensive (SDH Mode, PPP) on page 1481</a></p> <p><a href="#">show interfaces brief (SONET Mode, Frame Relay) on page 1483</a></p> <p><a href="#">show interfaces (SONET Mode, Frame Relay) on page 1483</a></p> <p><a href="#">show interfaces detail (SONET Mode, Frame Relay) on page 1484</a></p> <p><a href="#">show interfaces extensive (SONET Mode, Frame Relay) on page 1486</a></p> <p><a href="#">show interfaces extensive (OC768-over-4xOC192 Mode) on page 1488</a></p> <p><a href="#">show interfaces detail (IPv6 Tracking) on page 1491</a></p> <p><a href="#">show interfaces (Shared Interface) on page 1492</a></p>
<b>Output Fields</b>	<a href="#">Table 73 on page 1467</a> lists the output fields for the <b>show interfaces</b> (SONET/SDH) command. Output fields are listed in the approximate order in which they appear.

Table 73: SONET/SDH show interfaces Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	SONET/SDH reference clock source: <b>Internal</b> or <b>External</b> . Clocking is configured and displayed only for channel 0.	All levels
<b>Framing mode</b>	Framing mode: <b>SONET</b> or <b>SDH</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16</b> bits.	All levels
<b>Payload scrambler</b>	Whether payload scrambling is enabled.	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Shared-interface</b>	Indicates whether the routing domain is the owner or non-owner of the shared interface. If the routing domain is the Root System Domain (RSD), the value is <b>Owner</b> . If the routing domain is a Protected System Domain (PSD) under the RSD, the value is <b>Non-owner</b> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>ANSI or ITU LMI settings</b>	<p>(Frame Relay) Settings for Local Management Interface (LMI). The format is <b>(ANSI or ITU) LMI settings: value, value... xx seconds</b>, where <i>value</i> can be:</p> <ul style="list-style-type: none"> <li>• <b>n391dte</b>—DTE full status polling interval (1-255)</li> <li>• <b>n392dce</b>—DCE error threshold (1-10)</li> <li>• <b>n392dte</b>—DTE error threshold (1-10)</li> <li>• <b>n393dce</b>—DCE monitored event count (1-10)</li> <li>• <b>n393dte</b>—DTE monitored event count (1-10)</li> <li>• <b>t391dte</b>—DTE polling timer (5-30 seconds)</li> <li>• <b>t392dce</b>—DCE polling verification timer (5-30 seconds)</li> </ul>	All levels
<b>LMI</b>	<b>Input: value (hh:mm:ss ago), Output: value (hh:mm:ss ago)</b>	<b>brief none</b>
<b>LMI statistics</b>	<p>(Frame Relay) LMI packet statistics:</p> <ul style="list-style-type: none"> <li>• <b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: nn (last seen hh:mm:ss ago)</b>.</li> <li>• <b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: nn (last sent hh:mm:ss ago)</b>.</li> </ul>	<b>detail extensive</b>
<b>DTE statistics</b>	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data circuit-terminating equipment (DCE):</p> <ul style="list-style-type: none"> <li>• <b>Enquiries sent</b>—Number of link status enquiries sent from the DTE to the DCE.</li> <li>• <b>Full enquiries sent</b>—Number of full enquiries sent from the DTE to the DCE.</li> <li>• <b>Enquiry responses received</b>—Number of enquiry responses received by the DTE from the DCE.</li> <li>• <b>Full enquiry responses received</b>—Number of full enquiry responses sent from the DTE to the DCE.</li> </ul>	<b>detail extensive none</b>
<b>DCE statistics</b>	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> <li>• <b>Enquiries received</b>—Number of enquiries received by the DCE from the DTE.</li> <li>• <b>Full enquiries received</b>—Number of full enquiries received by the DCE from the DTE.</li> <li>• <b>Enquiry responses sent</b>—Number of enquiry responses sent from the DCE to the DTE.</li> <li>• <b>Full enquiry responses sent</b>—Number of full enquiry responses sent from the DCE to the DTE.</li> </ul>	<b>detail extensive none</b>

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Common statistics</b>	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> <li>• <b>Unknown messages received</b>—Number of received packets that do not fall into any category.</li> <li>• <b>Asynchronous updates received</b>—Number of link status peer changes received.</li> <li>• <b>Out-of-sequence packets received</b>—Number of packets for which the sequence of the packets received is different from the expected sequence.</li> <li>• <b>Keepalive responses timedout</b>—Number of keepalive responses that timed out when no LMI packet was reported for <b>n392dte</b> or <b>n393dce</b> intervals. (See <b>LMI settings</b>.)</li> </ul>	<b>detail extensive none</b>
<b>Nonmatching DCE-end DLCIs</b>	(Frame Relay. Displayed only from the DTE) Number of DLCIs configured from the DCE.	<b>detail extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Keepalive settings</b>	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> <li>• <b>interval seconds</b>—The time in seconds between successive keepalive requests. The range is <b>10</b> seconds through <b>32,767</b> seconds, with a default of <b>10</b> seconds.</li> <li>• <b>down-count number</b>—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is <b>1</b> through <b>255</b>, with a default of <b>3</b>.</li> <li>• <b>up-count number</b>—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is <b>1</b> through <b>255</b>, with a default of <b>1</b>.</li> </ul>	All levels
<b>Keepalive or Keepalive statistics</b>	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> <li>• <b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li>• <b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was received, in the format <b>hh:mm:ss</b>.</li> </ul> </li> <li>• <b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li>• <b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was sent, in the format <b>hh:mm:ss</b>.</li> </ul> </li> </ul>	All levels
<b>LCP state</b>	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—LCP is not configured on the interface.</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>NCP state</b>	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—NCP is not configured on the interface.</li> <li>• <b>Opened</b>—NCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>CHAP state</b>	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> <li>• <b>Chap-Chal-received</b>—Challenge was received but response not yet sent.</li> <li>• <b>Chap-Chal-sent</b>—Challenge was sent.</li> <li>• <b>Chap-Resp-received</b>—Response was received for the challenge sent, but CHAP has not yet moved into the <b>Success</b> state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response was sent for the challenge received.</li> <li>• <b>Closed</b>—CHAP authentication is incomplete.</li> <li>• <b>Failure</b>—CHAP authentication failed.</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Success</b>—CHAP authentication was successful.</li> </ul>	<b>detail extensive none</b>
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Input rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	Number of bytes and packets received and transmitted on the physical interface, and the traffic rate in bits per seconds (bps). <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Label-switched interface (LSI) traffic statistics	(Frame Relay) LSI traffic statistics: <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes and speed, in bits per second (bps), received on the interface.</li> <li>• <b>Output packets</b>—Number of packets and speed, in bps, transmitted on the interface.</li> </ul>	extensive
Input errors	Input errors on the interface whose definitions are as follows: <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is <b>off</b>.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul>	extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> </ul>	<b>extensive</b>
<b>IPv6 transit statistics</b>	<p>Number of transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.	<b>detail extensive</b>
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>extensive</b>
<b>SONET alarms</b> <b>SONET defects</b>	(SONET) SONET media-specific alarms and defects that prevents the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b> , <b>SONET section</b> , <b>SONET line</b> , and <b>SONET path</b> .	All levels
<b>Link</b>	(For 4-port OC192c PIC operating in OC768-over-4xOC192 mode) The link number. Errors and alarms are displayed for each link.	<b>extensive</b>

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SONET PHY</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	<b>extensive</b>
<b>SONET section</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOL</b>—Loss of light</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>	<b>extensive</b>
<b>SONET line</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>	<b>extensive</b>

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SONET path</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>	<b>extensive</b>
<b>Received SONET overhead</b>  <b>Transmitted SONET overhead</b>	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1 and K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>.</li> <li>• <b>Z3 and Z4</b>—Allocated for future use.</li> </ul>	<b>extensive</b>
<b>SDH alarms</b>  <b>SDH defects</b>	<p>SDH media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SDH PHY</b>, <b>SDH regenerator section</b>, <b>SDH multiplex section</b>, and <b>SDH path</b>.</p>	All levels

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
SDH PHY	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>	extensive
SDH regenerator section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>RS-BIP8</b>—24-bit BIP for multiplex section overhead (B2 bytes)</li> <li>• <b>OOF</b>—Out of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>RS-ES</b>—Errored seconds (near-end regenerator section)</li> <li>• <b>RS-SES</b>—Severely errored seconds (near-end regenerator section)</li> <li>• <b>RS-SEFS</b>—Severely errored framing seconds (regenerator section)</li> </ul>	extensive
SDH multiplex section	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>MS-BIP24</b>—8-bit BIP for high-order path overhead (B3 byte)</li> <li>• <b>MS-FEBE</b>—Far-end block error (multiplex section)</li> <li>• <b>MS-FERF</b>—Far-end remote fail (multiplex section)</li> <li>• <b>MS-AIS</b>—Alarm indication signal (multiplex section)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>MS-ES</b>—Errored seconds (near-end multiplex section)</li> <li>• <b>MS-SES</b>—Severely errored seconds (near-end multiplex section)</li> <li>• <b>MS-UAS</b>—Unavailable seconds (near-end multiplex section)</li> <li>• <b>MS-ES-FE</b>—Errored seconds (far-end multiplex section)</li> <li>• <b>MS-SES-FE</b>—Severely errored seconds (far-end multiplex section)</li> <li>• <b>MS-UAS-FE</b>—Unavailable seconds (far-end multiplex section)</li> </ul>	extensive

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>SDH path</b>	<p>Active alarms and defects, plus counts of specific SDH errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem.</li> </ul> <p>Subfields are:</p> <ul style="list-style-type: none"> <li>• <b>HP-BIP8</b>—8-bit BIP for regenerator section overhead (B1 byte)</li> <li>• <b>HP-FEBE</b>—Far-end block error (high-order path)</li> <li>• <b>HP-LOP</b>—Loss of pointer (high-order path)</li> <li>• <b>HP-AIS</b>—High-order-path alarm indication signal</li> <li>• <b>HP-FERF</b>—Far-end remote fail (high-order path)</li> <li>• <b>HP-UNEQ</b>—Unequipped (high-order path)</li> <li>• <b>HP-PLM</b>—Payload label mismatch (high-order path)</li> <li>• <b>HP-ES</b>—Errored seconds (near-end high-order path)</li> <li>• <b>HP-SES</b>—Severely errored seconds (near-end high-order path)</li> <li>• <b>HP-UAS</b>—Unavailable seconds (near-end high-order path)</li> <li>• <b>HP-ES-FE</b>—Errored seconds (far-end high-order path)</li> <li>• <b>HP-SES-FE</b>—Severely errored seconds (far-end high-order path)</li> <li>• <b>HP-UAS-FE</b>—Unavailable seconds (far-end high-order path)</li> </ul>	<b>extensive</b>
<b>Received SDH overhead</b>  <b>Transmitted SDH overhead</b>	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1 and K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 of an STS-<i>N</i>.</li> <li>• <b>Z3 and Z4</b>—Allocated for future use.</li> </ul>	<b>extensive</b>
<b>Received path trace</b>  <b>Transmitted path trace</b>	<p>SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>	<b>extensive</b>

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>HDLC configuration</b>	Information about the HDLC configuration. <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> </ul>	<b>extensive</b>
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Packet Forwarding Engine configuration</b>	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>PPP parameters</b>	The PPP loopback clear timer value.	<b>extensive</b>

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Shared interface</b>	Provides the following information: <ul style="list-style-type: none"> <li><b>shared with</b>—(RSD only) Indicates which PSD owns the logical shared interface. For example, <b>psd3</b>.</li> <li><b>peer interface</b>—(PSD only) Lists the logical tunnel interface that peers with the logical shared interface. For example, <b>ut-2/1/0.2</b>.</li> <li><b>tunnel token</b>—Specifies the receive (RX) and transmit (TX) tunnel tokens. For example, <b>Rx: 5.519, Tx: 13.514</b>.</li> </ul>	All levels
<b>Input packets</b>	Number of packets received on the logical interface.	None specified
<b>Output packets</b>	Number of packets transmitted on the logical interface.	None specified
<b>Traffic statistics</b>	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Local statistics</b>	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Transit statistics</b>	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , or <b>mpls</b> .	<b>detail extensive none</b>
<b>protocol-family</b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the IP address of the interface is also displayed.	<b>brief</b>
<b>Multilink bundle</b>	(If the logical interface is configured as part of a multilink bundle.) Interface name for the multilink bundle.	<b>detail extensive none</b>
<b>AS bundle</b>	(If the logical interface is configured as part of an aggregated SONET bundle.) AS bundle number.	<b>detail extensive</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .	<b>detail extensive</b>
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the “Family Flags” section under “ <a href="#">Common Output Fields Description</a> ” on <a href="#">page 1114</a> .	<b>detail extensive none</b>

Table 73: SONET/SDH show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address of the interface.	<b>detail extensive none</b>
<b>DLCI</b>	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: <b>Flags</b> , <b>Total down time</b> , <b>Last down</b> , and <b>Traffic statistics</b> . <b>Flags</b> is one or more of the following: <ul style="list-style-type: none"> <li>• <b>Active</b>—Set when the link is active and the DTE and DCE are exchanging information.</li> <li>• <b>Down</b>—Set when the link is active, but no information is received from the DCE.</li> <li>• <b>Unconfigured</b>—Set when the corresponding DLCI in the DCE is not configured.</li> <li>• <b>Configured</b>—Set when the corresponding DLCI in the DCE is configured.</li> <li>• <b>Dce-configured</b>—Displayed when the command is issued from the DTE.</li> </ul>	<b>detail extensive</b>
<b>DLCI statistics</b>	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> <li>• <b>Active DLCI</b>—Number of active DLCIs.</li> <li>• <b>Inactive DLCI</b>—Number of inactive DLCIs.</li> </ul>	<b>detail extensive none</b>

## Sample Output

### show interfaces (SDH Mode, PPP)

```

user@host> show interfaces so-0/0/0
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 66
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 30 (00:00:07 ago), Output: 29 (00:00:05 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues    : 4 supported, 4 maximum usable queues
  Last flapped  : 2006-03-24 13:20:56 PST (00:05:09 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  SDH alarms   : None
  SDH defects   : None

```

```
Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3
  Protocol iso, MTU: 4470
    Flags: Protocol-Down
  Protocol mpls, MTU: 4458, Maximum labels: 3
    Flags: Protocol-Down, Is-Primary
```

### show interfaces brief (SDH Mode, PPP)

```
user@host> show interfaces so-0/0/0 brief
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 25 (00:00:01 ago), Output: 24 (00:00:04 ago)
  SDH  alarms    : None
  SDH  defects   : None

Logical interface so-0/0/0.0
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  inet 10.0.12.1/30
  iso
  mpls
```

### show interfaces detail (SDH Mode, PPP)

```
user@host> show interfaces so-0/0/0 detail
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 66, Generation: 35
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 33 (last seen 00:00:05 ago)
    Output: 32 (last sent 00:00:06 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 maximum usable queues
  Last flapped : 2006-03-24 13:20:56 PST (00:05:38 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          862          0 bps
    Output bytes:         3592         64 bps
    Input packets:           70          0 pps
    Output packets:          330          0 pps
  Egress queues: 4 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets
```

```

0 best-effort          0          0          0
1 expedited-fo         0          0          0
2 assured-forw         0          0          0
3 network-cont        329        329          0

SDH  alarms   : None
SDH  defects  : None

Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43) (Generation 19)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 48, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3,
    Generation: 48
  Protocol iso, MTU: 4470, Generation: 49, Route table: 0
    Flags: Protocol-Down
  Protocol mpls, MTU: 4458, Maximum labels: 3, Generation: 50, Route table: 0
    Flags: Protocol-Down, Is-Primary

```

#### show interfaces extensive (SDH Mode, PPP)

```

user@host> show interfaces so-0/0/0 extensive
Physical interface: so-0/0/0, Enabled, Physical link is Up
Interface index: 149, SNMP ifIndex: 66, Generation: 35
Link-level type: PPP, MTU: 4474, Clocking: Internal, SDH mode, Speed: OC3,
Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 36 (last seen 00:00:01 ago)
  Output: 35 (last sent 00:00:10 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
CoS queues   : 4 supported, 4 maximum usable queues
Last flapped : 2006-03-24 13:20:56 PST (00:06:08 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          922          0 bps
Output bytes :        3850         64 bps
Input packets:           75          0 pps
Output packets:        356          0 pps
Label-switched interface (LSI) traffic statistics:
Input bytes :           0          0 bps
Input packets:          0          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
  Bucket drops: 0, Policed discards: 218, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 2, HS link CRC errors: 0,
  HS link FIFO overflows: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0,

```

```

HS link FIFO underflows: 0, MTU errors: 0
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort          0              0              0

1 expedited-fo         0              0              0

2 assured-forw         0              0              0

3 network-cont        354            354            0

SDH  alarms   : None
SDH  defects  : None
SDH PHY:
Seconds      Count  State
  PLL Lock      0      0  OK
  PHY Light     2      1  OK
SDH regenerator section:
RS-BIP8        0      0
OOF            3      8  OK
LOS            3      2  OK
LOF            3      2  OK
RS-ES          3
RS-SES         3
RS-SEFS        3
SDH multiplex section:
MS-BIP24       0      0
MS-FEBE        0      0
MS-FERF        3      2  OK
MS-AIS         2      1  OK
BERR-SF        0      0  OK
BERR-SD        0      0  OK
MS-ES          3
MS-SES         3
MS-UAS         0
MS-SES-FE      3
MS-UAS-FE      0
SDH path:
HP-BIP8        0      0
HP-FEBE        0      0
HP-LOP         1      1  OK
HP-AIS         2      1  OK
HP-FERF        3      2  OK
HP-UNEQ        0      0  OK
HP-PLM         1      1  OK
HP-ES          3
HP-SES         3
HP-UAS         0
HP-ES-FE       3
HP-SES-FE      3
HP-UAS-FE      0
Received SDH overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SDH overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: R2 so-0/0/0
52 32 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00  R2 so-0/0/0.....

```

```

Transmitted path trace: R1 so-0/0/0
 52 31 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00  R1 so-0/0/0.....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue    Bandwidth      Buffer Priority  Limit
                        %          bps      %    usec
0 best-effort          95  147744000  95      0      low  none
3 network-control      5   7776000   5      0      low  none

Logical interface so-0/0/0.0 (Index 66) (SNMP ifIndex 43) (Generation 19)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
PPP parameters:
  PPP loopback clear timer: 3 sec
Protocol inet, MTU: 4470, Generation: 48, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.0.12.0/30, Local: 10.0.12.1, Broadcast: 10.0.12.3,
    Generation: 48
Protocol iso, MTU: 4470, Generation: 49, Route table: 0
  Flags: Protocol-Down
Protocol mpls, MTU: 4458, Maximum labels: 3, Generation: 50, Route table: 0
  Flags: Protocol-Down, Is-Primary
MS-ES-FE                      3

```

#### show interfaces brief (SONET Mode, Frame Relay)

```

user@host> show interfaces so-0/0/0 brief
Physical interface: so-0/0/0, Enabled, Physical link is Up
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 29 (00:00:02 ago), Output: 28 (00:00:01 ago)
SONET alarms   : None
SONET defects  : None

Logical interface so-0/0/0.0
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
inet  10.0.12.1      --> 10.0.12.2
iso
mpls
DLCI 16
  Flags: Down, DCE-Unconfigured
  Total down time: 00:04:12 sec, Last down: 00:04:12 ago

```

#### show interfaces (SONET Mode, Frame Relay)

```

user@host> show interfaces so-0/0/0
Physical interface: so-0/0/0, Enabled, Physical link is Up
Interface index: 128, SNMP ifIndex: 66
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running

```

```

Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags      : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 23 (00:00:05 ago), Output: 22 (00:00:03 ago)
DTE statistics:
  Enquiries sent           : 19
  Full enquiries sent      : 3
  Enquiry responses received : 20
  Full enquiry responses received : 3
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 1
CoS queues      : 4 supported, 4 maximum usable queues
Last flapped    : 2006-03-06 11:53:20 PST (3d 03:09 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 56 bps (0 pps)
SONET alarms    : None
SONET defects   : None

Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.0.12.2, Local: 10.0.12.1
  Protocol iso, MTU: 4470
    Flags: None
  Protocol mpls, MTU: 4450, Maximum labels: 3
  DLCI 16
    Flags: Down, DCE-Unconfigured
    Total down time: 00:03:11 sec, Last down: 00:03:11 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

### show interfaces detail (SONET Mode, Frame Relay)

```

user@host> show interfaces so-0/0/0 detail
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 66, Generation: 11
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags      : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags      : Keepalives DTE
  Hold-times      : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 33 (last seen 00:00:09 ago)
    Output: 32 (last sent 00:00:01 ago)
  DTE statistics:

```

```

Enquiries sent                : 27
Full enquiries sent           : 5
Enquiry responses received    : 28
Full enquiry responses received : 5
DCE statistics:
  Enquiries received          : 0
  Full enquiries received     : 0
  Enquiry responses sent      : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received   : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0
  Keepalive responses timedout : 1
CoS queues      : 4 supported, 4 maximum usable queues
Last flapped    : 2006-03-06 11:53:20 PST (3d 03:10 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          495368          0 bps
  Output bytes :        2765014         56 bps
  Input packets:         41165          0 pps
  Output packets:       133530          0 pps
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets

  0 best-effort                18                18                0
  1 expedited-fo                0                0                0
  2 assured-forw                0                0                0
  3 network-cont             133506             133506                0

SONET alarms   : None
SONET defects  : None
Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43) (Generation 28)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:          0          0 pps
  Output packets:          0          0 pps
Protocol inet, MTU: 4470, Generation: 49, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.0.12.2, Local: 10.0.12.1, Broadcast: Unspecified,
    Generation: 61
Protocol iso, MTU: 4470, Generation: 50, Route table: 0
  Flags: None
Protocol mpls, MTU: 4450, Maximum labels: 3, Generation: 51, Route table: 0
DLCI 16

```

```

Flags: Down, DCE-Unconfigured
Total down time: 00:04:54 sec, Last down: 00:04:54 ago
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1

```

#### show interfaces extensive (SONET Mode, Frame Relay)

```

user@host> show interfaces so-0/0/0 extensive
Physical interface: so-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 66, Generation: 11
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags : Keepalives DTE
  Hold-times : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 39 (last seen 00:00:02 ago)
    Output: 36 (last sent 00:00:07 ago)
  DTE statistics:
    Enquiries sent : 30
    Full enquiries sent : 6
    Enquiry responses received : 33
    Full enquiry responses received : 6
  DCE statistics:
    Enquiries received : 0
    Full enquiries received : 0
    Enquiry responses sent : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timeout : 1
  CoS queues : 4 supported, 4 maximum usable queues
  Last flapped : 2006-03-06 11:53:20 PST (3d 03:11 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 495452 56 bps
    Output bytes : 2765074 0 bps
    Input packets: 41171 0 pps
    Output packets: 133534 0 pps
  Label-switched interface (LSI) traffic statistics:
    Input bytes : 0 0 bps
    Input packets: 0 0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
    HS link FIFO overflows: 0
  Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Aged packets: 0,
    HS link FIFO underflows: 0, MTU errors: 0
  Egress queues: 4 supported, 4 in use
  Queue counters: Queued packets Transmitted packets Dropped packets

```

0 best-effort	18	18	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	133510	133510	0

SONET alarms : None

SONET defects : None

SONET PHY:	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	60	1	OK

SONET section:

BIP-B1	0	0	
SEF	108	158	OK
LOS	108	2	OK
LOF	108	2	OK
ES-S	108		
SES-S	108		
SEFS-S	108		

SONET line:

BIP-B2	0	0	
REI-L	0	0	
RDI-L	1	1	OK
AIS-L	107	1	OK
BERR-SF	0	0	OK
BERR-SD	44	2	OK
ES-L	108		
SES-L	108		
UAS-L	97		
ES-LFE	1		
SES-LFE	1		
UAS-LFE	0		

SONET path:

BIP-B3	0	0	
REI-P	0	0	
LOP-P	1	1	OK
AIS-P	107	1	OK
RDI-P	1	1	OK
UNEQ-P	0	0	OK
PLM-P	1	1	OK
ES-P	108		
SES-P	108		
UAS-P	97		
ES-PFE	1		
SES-PFE	1		
UAS-PFE	0		

Received SONET overhead:

F1	: 0x00, J0	: 0x00, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0xcf, C2(cmp)	: 0xcf, F2	: 0x00
Z3	: 0x00, Z4	: 0x00, S1(cmp)	: 0x00	

Transmitted SONET overhead:

F1	: 0x00, J0	: 0x01, K1	: 0x00, K2	: 0x00
S1	: 0x00, C2	: 0xcf, F2	: 0x00, Z3	: 0x00
Z4	: 0x00			

Received path trace: R2 so-0/0/0

52 32 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00	R2 so-0/0/0.....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00	.....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00	.....

```

00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: R1 so-0/0/0
52 31 20 73 6f 2d 30 2f 30 2f 30 00 00 00 00 00 R1 so-0/0/0.....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer  Priority  Limit
                           %      bps      %      usec
0 best-effort             95      147744000  95        0      low    none
3 network-control         5       7776000   5         0      low    none

Logical interface so-0/0/0.0 (Index 79) (SNMP ifIndex 43) (Generation 28)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Protocol inet, MTU: 4470, Generation: 49, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.0.12.2, Local: 10.0.12.1, Broadcast: Unspecified,
    Generation: 61
Protocol iso, MTU: 4470, Generation: 50, Route table: 0
  Flags: None
Protocol mpls, MTU: 4450, Maximum labels: 3, Generation: 51, Route table: 0
DLCI 16
  Flags: Down, DCE-Unconfigured
  Total down time: 00:05:42 sec, Last down: 00:05:42 ago
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
DLCI statistics:
  Active DLCI :0 Inactive DLCI :1

```

#### show interfaces extensive (OC768-over-4xOC192 Mode)

```

user@host> show interfaces so-7/0/0 extensive
Physical interface: so-7/0/0, Enabled, Physical link is Up
  Interface index: 163, SNMP ifIndex: 23, Generation: 186
  Link-level type: Cisco-HDLC, MTU: 4474, Clocking: Internal, SONET mode, Speed:
  OC768,

```

```

Loopback: Local, FCS: 16, Payload scrambler: Enabled
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags : No-Keepalives
Hold-times : Up 0 ms, Down 0 ms
CoS queues : 8 supported, 8 maximum usable queues
Last flapped : 2006-01-13 10:43:39 PST (01:05:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          76992          200 bps
  Output bytes :         83707          216 bps
  Input packets:          1343           0 pps
  Output packets:         1343           0 pps
Input errors:
  Errors: 0, Drops: 3885, Framing errors: 68154624, Runts: 0, Giants: 0, Bucket
drops: 0,
  Policed discards: 0, L3 incompletes: 95040248, L2 channel errors: 0, L2
mismatch timeouts: 0,
  HS link CRC errors: 0, HS link FIFO overflows: 30742070
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO
underflows: 0,
  MTU errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 best-effort          2              2              0

  1 expedited-fo         0              0              0

  2 assured-forw         0              0              0

  3 network-cont        1341          1341              0

SONET alarms : None
SONET defects : None
Link : 0
SONET alarms : None
SONET defects : None
SONET PHY:
Seconds      Count  State
  PLL Lock      0      0 OK
  PHY Light      0      0 OK
SONET section:
BIP-B1      0      0
SEF          2      1 OK
LOS          0      0 OK
LOF          3      2 OK
ES-S         2
SES-S         2
SEFS-S        2
SONET line:
BIP-B2      0      0
REI-L        0      0
RDI-L        1      1 OK
AIS-L        2      1 OK
BERR-SF      0      0 OK
BERR-SD      0      0 OK
ES-L         3
SES-L         3
UAS-L         0
ES-LFE        1

```

```

SES-LFE                1
UAS-LFE                0
SONET path:
BIP-B3                 0          0
REI-P                  0          0
LOP-P                  0          0 OK
AIS-P                  2          1 OK
RDI-P                  0          0 OK
UNEQ-P                 0          0 OK
PLM-P                  0          0 OK
ES-P                   3
SES-P                   3
UAS-P                   0
ES-PFE                 0
SES-PFE                 0
UAS-PFE                 0
Payload pointer:
Current pointer         : 522
Pointer increment count : 0
Pointer decrement count : 0
New pointer NDF count   : 0
Received SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: fold so-7/0/0
66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00 fold so-7/0/0...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: fold so-7/0/0
66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00 fold so-7/0/0...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Link : 1
SONET alarms      : None
SONET defects     : None
SONET PHY:
Seconds          Count   State
PLL Lock         0        0 OK
PHY Light        0        0 OK
SONET section:
BIP-B1           0        0
SEF              2        1 OK
LOS              0        0 OK
LOF              3        2 OK
ES-S             2
SES-S            2
SEFS-S           2
SONET line:
BIP-B2           0        0
REI-L            0        0
RDI-L            0        0 OK
AIS-L            2        1 OK
BERR-SF          0        0 OK
BERR-SD          0        0 OK
ES-L             3

```

```

SES-L          3
UAS-L          0
ES-LFE        0
SES-LFE        0
UAS-LFE        0
SONET path:
  BIP-B3        0          0
  REI-P         0          0
  LOP-P         0          0 OK
  AIS-P         2          1 OK
  RDI-P         0          0 OK
  UNEQ-P        0          0 OK
  PLM-P         0          0 OK
  ES-P          3
  SES-P          3
  UAS-P          0
  ES-PFE        0
  SES-PFE       0
  UAS-PFE       0
Payload pointer:
  Current pointer      : 522
  Pointer increment count : 0
  Pointer decrement count : 0
  New pointer NDF count : 0
Received SONET overhead:
  F1 : 0x00, J0 : 0x01, K1 : 0x00, K2 : 0x00
  S1 : 0x00, C2 : 0xcf, C2(cmp) : 0xcf, F2 : 0x00
  Z3 : 0x00, Z4 : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  F1 : 0x00, J0 : 0x01, K1 : 0x00, K2 : 0x00
  S1 : 0x00, C2 : 0xcf, F2 : 0x00, Z3 : 0x00
  Z4 : 0x00
Received path trace: fold so-7/0/0
  66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00 fold so-7/0/0...
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: fold so-7/0/0
  66 6f 6c 64 20 73 6f 2d 37 2f 30 2f 30 00 00 00 fold so-7/0/0...
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
...

```

### show interfaces detail (IPv6 Tracking)

```

user@host> show interfaces so-0/2/0 detail
Physical interface: so-0/2/0, Enabled, Physical link is Up
  Interface index: 130, SNMP ifIndex: 26, Generation: 131
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC3,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags : Keepalives
  Hold-times : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 7 (last seen 00:00:01 ago)
    Output: 6 (last sent 00:00:08 ago)
  LCP state: Opened

```

```

NCP state: inet: Not-configured, inet6: Opened, iso: Not- configured, mpls:
Not-configured
CHAP state: Closed
PAP state: Closed
CoS queues      : 4 supported, 4 maximum usable queues
Last flapped    : 2007-11-29 08:45:47 PST (1d 03:44 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          7407782          40 bps
  Output bytes  :          7307322          48 bps
  Input packets :          107570           0 pps
  Output packets:          108893           0 pps
IPv6 transit statistics:
  Input bytes   :          57328
  Output bytes  :          57400
  Input packets :           1024
  Output packets:           1025
Egress queues: 4 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets
0 best-effort        1191             1191                 0
1 expedited-fo       0                 0                     0
2 assured-forw       0                 0                     0
3 network-cont      107700            107700                 0
SONET alarms      : None
SONET defects     : None

Logical interface so-0/2/0.0 (Index 70) (SNMP ifIndex 47) (Generation 231)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet6, MTU: 4470, Generation: 433, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 2001:db8::2:1/32, Local: 2001:db8::2:2,
  Broadcast: Unspecified, Generation: 683
Addresses, Flags: Is-Preferred
  Destination: 2001:db8::1:2, Local: 2001:db8::1:3,
  Broadcast: Unspecified, Generation: 684

```

### show interfaces (Shared Interface)

```

user@rsd1> show interfaces so-7/2/0
Physical interface: so-7/2/0, Enabled, Physical link is Down
Interface index: 128, SNMP ifIndex: 109
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC192, Loopback: None, FCS: 16, Payload scrambler: Enabled
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x4000
Shared-interface : Owner
Link flags      : No-Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 0 (never), Output: 0 (never)
DTE statistics:
  Enquiries sent           : 0
  Full enquiries sent      : 0
  Enquiry responses received : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received       : 0
  Full enquiries received  : 0
  Enquiry responses sent   : 0
  Full enquiry responses sent : 0
Common statistics:

```

```
Unknown messages received      : 0
Asynchronous updates received  : 0
Out-of-sequence packets received : 0
Keepalive responses timedout    : 0
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2008-08-11 10:51:51 PDT (1w1d 04:47 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
SONET alarms    : LOL, PLL
SONET defects   : LOL, PLL, LOF, SEF, AIS-L, AIS-P

Logical interface so-7/2/0.0 (Index 67) (SNMP ifIndex 117)
Flags: Device-Down Point-To-Point SNMP-Traps 0x4000 Encapsulation: FR-NLPID
Shared interface:
  Shared with: psd5
  Tunnel token: Rx: 2.517, Tx: 1.517
Input packets : 0
Output packets: 0
DLCI 700
  Flags: Active
  Total down time: 00:01:09 sec, Last down: 284:58:21 ago
    Input packets : 0
    Output packets: 0
DLCI statistics:
  Active DLCI  :1  Inactive DLCI  :0
```

## show interfaces (Serial)

**Syntax** `show interfaces interface-type`  
`<brief | detail | extensive | terse>`  
`<descriptions>`  
`<media>`  
`<snmp-index snmp-index>`  
`<statistics>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display status information about serial interfaces, including RS-232, RS-422/449, EIA-530, X.21, and V.35.

**Options** *interface-type*—On M Series and T Series routers, the interface type is *se-fpc/pic/port*.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**snmp-index *snmp-index***—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

**Required Privilege Level** view

**List of Sample Output** [show interfaces \(Serial, EIA-530\) on page 1500](#)  
[show interfaces brief \(Serial, EIA-530\) on page 1500](#)  
[show interfaces detail \(Serial, EIA-530\) on page 1501](#)  
[show interfaces extensive \(Serial, EIA-530\) on page 1501](#)  
[show interfaces \(Serial, V.35\) on page 1502](#)  
[show interfaces brief \(Serial, V.35\) on page 1503](#)  
[show interfaces detail \(Serial, V.35\) on page 1503](#)  
[show interfaces extensive \(Serial, V.35\) on page 1504](#)  
[show interfaces statistics detail \(RS 449\) on page 1505](#)

**Output Fields** [Table 74 on page 1494](#) lists the output fields for the **show interfaces (Serial)** command. Output fields are listed in the approximate order in which they appear.

*Table 74: show interfaces (Serial) Output Fields*

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels

Table 74: *show interfaces (Serial) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Type</b>	Type of interface.	All levels
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	Maximum transmission unit (MTU) size on the physical interface.	All levels
<b>Maximum speed</b>	Maximum speed. The nonconfigurable value is 16,384 kbps.	<b>detail extensive none</b>
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Keepalive settings</b>	(PPP and HDLC) Configured settings for keepalive packets. <ul style="list-style-type: none"> <li><b>Interval <i>seconds</i></b>—Time between successive keepalive requests. The range of values, in seconds, is 10 to 32,767. The default value is 10.</li> <li><b>Up-count <i>number</i></b>—Number of keepalive packets a destination must receive to change a link's status from down to up. The range of values is 1 to 255. The default value is 1.</li> <li><b>Down-count <i>number</i></b>—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 to 255. The default value is 3.</li> </ul>	All levels
<b>Keepalive</b>	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> <li><b>Input: <i>number (hh:mm:ss ago)</i></b>—Number of keepalive packets received by PPP and the time since the last keepalive packet was received.</li> <li><b>Output: <i>number (hh:mm:ss ago)</i></b>—Number of keepalive packets sent by PPP and the time since the last keepalive packet was sent.</li> </ul>	<b>brief none</b>

Table 74: show interfaces (Serial) Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics	(PPP and HDLC) Information about keepalive packets. <ul style="list-style-type: none"> <li>• <b>Input:</b> <i>number (last seen hh:mm:ss ago)</i>—Number of keepalive packets received by PPP and the time since the last keepalive packet was received.</li> <li>• <b>Output:</b> <i>number (last seen hh:mm:ss ago)</i>—Number of keepalive packets sent by PPP and the time since the last keepalive packet was sent.</li> </ul>	detail extensive
LCP state	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—LCP is not configured on the interface.</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	detail extensive none
NCP state	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—NCP is not configured on the interface.</li> <li>• <b>Opened</b>—NCP negotiation is successful.</li> </ul>	detail extensive none
CHAP state	(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> <li>• <b>Chap-Chal-received</b>—Challenge was received but response not yet sent.</li> <li>• <b>Chap-Chal-sent</b>—Challenge was sent.</li> <li>• <b>Chap-Resp-received</b>—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response was sent for the challenge received.</li> <li>• <b>Closed</b>—CHAP authentication is incomplete.</li> <li>• <b>Failure</b>—CHAP authentication failed.</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Success</b>—CHAP authentication was successful.</li> </ul>	detail extensive none
CoS queues	Number of CoS queues configured.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	detail extensive none
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified

Table 74: show interfaces (Serial) Output Fields (continued)

Field Name	Field Description	Level of Output
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	extensive
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	extensive
Egress queues supported	Total number of egress queues supported on the specified interface. Displayed with the <b>statistics</b> option.	detail extensive
Egress queues in use	Total number of egress queues in use on the specified interface. Displayed with the <b>statistics</b> option.	detail extensive

Table 74: *show interfaces (Serial) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Queue counters</b>	CoS queue number and its associated user-configured forwarding class name. Displayed with the <b>statistics</b> option. <ul style="list-style-type: none"> <li><b>Queued packets</b>—Number of queued packets.</li> <li><b>Transmitted packets</b>—Number of transmitted packets.</li> <li><b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Serial media information</b>	Information about the physical media: <ul style="list-style-type: none"> <li><b>Line protocol</b>—<b>eia530</b>, <b>eia530a</b>, <b>rs232</b>, <b>rs449</b>, <b>v.35</b>, or <b>x.21</b>.</li> <li><b>Resync history</b>—Information about resynchronization events: <ul style="list-style-type: none"> <li><b>Sync loss count</b>—Number of times the synchronization was lost.</li> </ul> </li> <li><b>Data signal</b>—(X.21 and V.35) Information about the data signal: <ul style="list-style-type: none"> <li><b>Rx Clock</b>—Receive clock status: OK (DTE is receiving the receive clock signal) or Not detected (receive clock signal is not being received).</li> </ul> </li> <li><b>Control signals</b>—Information about modem control signals: <ul style="list-style-type: none"> <li><b>Local mode</b>: DCE (data communication equipment) or DTE (data terminal equipment)</li> <li><b>To DCE</b>—Control signals that the Serial PIC sent to the DCE: DTR (Data Terminal Ready: <b>up</b> or <b>down</b>) or RTS (Request To Send: <b>up</b> or <b>down</b>.)</li> <li><b>From DC</b>—Control signals that the Serial PIC received from the DCE: CTS (Clear To Send: <b>up</b> or <b>down</b>), DCD (Data Carrier Detect: <b>up</b> or <b>down</b>), DSR (Data Set Ready: <b>up</b> or <b>down</b>), or TM (Test Mode: <b>up</b> or <b>down</b>).</li> </ul> </li> <li><b>Clocking mode</b>—Clocking used for the transmit clock: <ul style="list-style-type: none"> <li><b>dte</b>—Transmit clock is generated by DTE.</li> <li><b>dce</b>—Transmit clock is generated by the DCE and is looped back as the transmit clock.</li> <li><b>loop-timed</b>—Receive clock from the DCE is looped back as the transmit clock.</li> </ul> </li> <li><b>Clock rate</b>—Rate, in megahertz (MHz), at which the clock is configured.</li> <li><b>Loopback</b>—Configured loopback mode for the interface: <b>dce-remote</b>, <b>dce-local</b>, <b>liu</b>, <b>local</b>, or <b>none</b>.</li> <li><b>Tx clock</b>—Clocking phase of the transmit clock: <b>invert</b> (transmit clock polarity is inverted) or <b>non-invert</b> (transmit clock polarity is not inverted).</li> <li><b>Line encoding</b>—Type of line encoding used: <b>nrz</b> (nonreturn to zero) or <b>nrzi</b> (return to zero inverted).</li> </ul>	<b>detail extensive</b>
<b>Packet Forwarding Engine configuration</b>	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li><b>Destination slot</b>—FPC slot number.</li> <li><b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	<b>extensive</b>

Table 74: *show interfaces (Serial) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>CoS information</b>	Information about the CoS queue for the physical interface: <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b><i>protocol-family</i></b>	Protocol family configured on the logical interface. If the protocol is <b>inet</b> , the source and destination address are also displayed.	<b>brief</b>
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , <b>mpls</b> .	<b>detail extensive none</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route Table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .	<b>detail extensive</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive</b>

Table 74: show interfaces (Serial) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	detail extensive none
<b>Destination</b>	IP address of the remote side of the connection.	detail extensive none
<b>Local</b>	IP address of the logical interface.	detail extensive none
<b>Broadcast</b>	Broadcast address of the logical interface.	detail extensive none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	detail extensive

## Sample Output

### show interfaces (Serial, EIA-530)

```

user@host> show interfaces se-5/0/1
Physical interface: se-5/0/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 41
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags   : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 32 (00:00:10 ago), Output: 31 (00:00:07 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues    : 8 supported, 8 maximum usable queues
  Last flapped  : 2006-04-26 15:10:18 PDT (00:05:22 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)

Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3

```

### show interfaces brief (Serial, EIA-530)

```

user@host> show interfaces se-5/0/1 brief
Physical interface: se-5/0/1, Enabled, Physical link is Up
  Type: Serial, Link-level type: PPP, MTU: 1504
  Device flags   : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 235 (00:00:10 ago), Output: 234 (00:00:00 ago)

Logical interface se-5/0/1.0

```

```
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
inet 12.0.0.1/30
```

### show interfaces detail (Serial, EIA-530)

```
user@host> show interfaces se-5/0/1 detail
Physical interface: se-5/0/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 41, Generation: 25
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags      : Present Running
  Interface flags: Point-To-Point Internal: 0x4000
  Link flags       : Keepalives
  Hold-times       : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 37 (last seen 00:00:06 ago)
    Output: 35 (last sent 00:00:01 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
  Not-configured
  CHAP state: Closed
  CoS queues      : 8 supported, 8 maximum usable queues
  Last flapped    : 2006-04-26 15:10:18 PDT (00:06:02 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          928          40 bps
    Output bytes  :         1023          48 bps
    Input packets :          76           0 pps
    Output packets:          77           0 pps
  Serial media information:
    Line protocol: eia530
    Resync history:
      Sync loss count: 0
    Data signal:
      Rx Clock: OK
    Control signals:
      Local mode: DTE
      To DCE: DTR: up, RTS: up
      From DCE: CTS: up, DCD: up, DSR: up
    Clocking mode: loop-timed
    Clock rate: 8.0 MHz
    Loopback: none
    Tx clock: non-invert
    Line encoding: nrz

Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45) (Generation 9)
  Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
  Protocol inet, MTU: 1500, Generation: 15, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3,
    Generation: 23
```

### show interfaces extensive (Serial, EIA-530)

```
user@host> show interfaces se-5/0/1 extensive
Physical interface: se-5/0/1, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 41, Generation: 25
  Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
  Device flags      : Present Running
```

```

Interface flags: Point-To-Point Internal: 0x4000
Link flags      : Keepalives
Hold-times      : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 40 (last seen 00:00:00 ago)
  Output: 37 (last sent 00:00:09 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
CoS queues      : 8 supported, 8 maximum usable queues
Last flapped    : 2006-04-26 15:10:18 PDT (00:06:28 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          988          40 bps
  Output bytes :         1088          48 bps
  Input packets:           81           0 pps
  Output packets:          82           0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 2, Runts: 0, Giants: 0,
  Policed discards: 0, Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, MTU errors: 0,
  Resource errors: 0
Serial media information:
  Line protocol: eia530
  Resync history:
    Sync loss count: 0
  Data signal:
    Rx Clock: OK
  Control signals:
    Local mode: DTE
    To DCE: DTR: up, RTS: up
    From DCE: CTS: up, DCD: up, DSR: up
  Clocking mode: loop-timed
  Clock rate: 8.0 MHz
  Loopback: none
  Tx clock: non-invert
  Line encoding: nrz
Packet Forwarding Engine configuration:
  Destination slot: 5, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %      bps      %      usec
  0 best-effort           95      15564800  95         0         low      none
  3 network-control        5       819200   5         0         low      none

Logical interface se-5/0/1.0 (Index 71) (SNMP ifIndex 45) (Generation 9)
Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 15, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 12.0.0.0/30, Local: 12.0.0.1, Broadcast: 12.0.0.3,
  Generation: 23

```

### show interfaces (Serial, V.35)

```

user@host> show interfaces se-5/0/0
Physical interface: se-5/0/0, Enabled, Physical link is Down
Interface index: 150, SNMP ifIndex: 39

```

```

Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
Link flags     : Loose-NCP
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 0 (never), Output: 0 (never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues     : 8 supported, 8 maximum usable queues
Last flapped   : 2006-04-26 14:51:27 PDT (01:02:23 ago)
Input rate     : 0 bps (0 pps)
Output rate    : 0 bps (0 pps)

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27)
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
Encapsulation: PPP
Protocol inet, MTU: 1500
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3

```

#### show interfaces brief (Serial, V.35)

```

user@host> show interfaces se-5/0/0 brief
Physical interface: se-5/0/0, Enabled, Physical link is Down
Type: Serial, Link-level type: PPP, MTU: 1504
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
Link flags     : Loose-NCP
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 0 (never), Output: 0 (never)

Logical interface se-5/0/0.0
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
Encapsulation: PPP
inet 13.0.0.2/30

```

#### show interfaces detail (Serial, V.35)

```

user@host> show interfaces se-5/0/0 detail
Physical interface: se-5/0/0, Enabled, Physical link is Down
Interface index: 150, SNMP ifIndex: 39, Generation: 31
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
Device flags   : Present Running Down
Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
Link flags     : Loose-NCP
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 0 (last seen: never)
  Output: 0 (last sent: never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues     : 8 supported, 8 maximum usable queues
Last flapped   : 2006-04-26 14:51:27 PDT (01:03:15 ago)
Statistics last cleared: Never

```

```

Traffic statistics:
Input bytes :          0          0 bps
Output bytes :          0          0 bps
Input packets:         0          0 pps
Output packets:        0          0 pps
Serial media information:
Line protocol: v.35
Resync history:
Sync loss count: 0
Data signal:
Rx Clock: Not Detected
Control signals:
Local mode: DCE
To DTE: CTS: down, DCD: down, DSR: up
From DTE: DTR: down, RTS: down
DCE loopback override: Off
Clocking mode: internal
Clock rate: 38.4 KHz
Loopback: none
Tx clock: non-invert
Line encoding: nrz

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27) (Generation 12)
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3,
Generation: 23

```

### show interfaces extensive (Serial, V.35)

```

user@host> show interfaces se-5/0/0 extensive
Physical interface: se-5/0/0, Enabled, Physical link is Down
Interface index: 150, SNMP ifIndex: 39, Generation: 31
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 16384kbps
Device flags : Present Running Down
Interface flags: Hardware-Down Point-To-Point Internal: 0x4000
Link flags : Loose-NCP
Hold-times : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
Input : 0 (last seen: never)
Output: 0 (last sent: never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues : 8 supported, 8 maximum usable queues
Last flapped : 2006-04-26 14:51:27 PDT (01:04:17 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          0          0 bps
Output bytes :          0          0 bps
Input packets:         0          0 pps
Output packets:        0          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, Resource errors: 0
Output errors:

```

```

Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
Resource errors: 0
Serial media information:
Line protocol: v.35
Resync history:
  Sync loss count: 0
Data signal:
  Rx Clock: Not Detected
Control signals:
  Local mode: DCE
  To DTE: CTS: down, DCD: down, DSR: up
  From DTE: DTR: down, RTS: down
DCE loopback override: Off
Clocking mode: internal
Clock rate: 38.4 KHz
Loopback: none
Tx clock: non-invert
Line encoding: nrz
Packet Forwarding Engine configuration:
  Destination slot: 5, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority  Limit
                           %      bps      %      usec
0 best-effort             95      15564800  95      0      low     none
3 network-control         5       819200   5       0      low     none

Logical interface se-5/0/0.0 (Index 73) (SNMP ifIndex 27) (Generation 12)
Flags: Hardware-Down Device-Down Point-To-Point SNMP-Traps
Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 13.0.0.0/30, Local: 13.0.0.2, Broadcast: 13.0.0.3,
  Generation: 23

```

#### show interfaces statistics detail (RS 449)

```

user@host> show interfaces se-6/0/0 statistics detail
Interface index: 149, SNMP ifIndex: 59, Generation: 150
Type: Serial, Link-level type: PPP, MTU: 1504, Maximum speed: 8mbps
Device flags   : Present Running
Interface flags: Point-To-Point Internal: 0x4000
Link flags     : No-Keepalives Loose-NCP
Hold-times     : Up 0 ms, Down 0 ms
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Closed
PAP state: Closed
CoS queues     : 8 supported, 8 maximum usable queues
Last flapped   : 2007-11-28 19:38:36 PST (00:14:06 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          744          0 bps
Output bytes  :         5978          0 bps
Input packets :          33          0 pps
Output packets:         129          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
Resource errors: 0

```

## Output errors:

Carrier transitions: 13, Errors: 0, Drops: 0, MTU errors: 0, Resource errors: 0

Egress queues: 8 supported, 5 in use

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0 best-effort	24	24	0
1 expedited-fo	0	0	0
2 bulk	0	0	0
3 assured-forw	105	105	0
4 voip	0	0	0

## Serial media information:

Line protocol: rs449

Resync history:

Sync loss count: 0

Data signal:

Rx Clock: OK

Control signals:

Local mode: DTE

To DCE: DTR: up, RTS: up

From DCE: CTS: up, DCD: up, DSR: up

Clocking mode: internal

Loopback: none

Tx clock: non-invert

Line encoding: nrz

Logical interface se-6/0/0.0 (Index 75) (SNMP ifIndex 69) (Generation 141)

Flags: Point-To-Point SNMP-Traps 0x4000 Encapsulation: PPP

Protocol inet, MTU: 256, Generation: 145, Route table: 0

Flags: None

Addresses, Flags: Is-Preferred Is-Primary

Destination: 11.11.11/24, Local: 11.11.11.2, Broadcast: 11.11.11.255,

Generation: 157

## show interfaces (T1, E1, or DS)

<b>Syntax</b>	<pre>show interfaces <i>interface-type</i> &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index <i>snmp-index</i>&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display status information about the specified T1, E1, or DS interface.
<b>Options</b>	<p><b><i>interface-type</i></b>—On ACX Series, M Series, MX Series, and T Series routers, the T1 interface type is <b>t1-<i>fpc/pic/port</i></b>, whereas the E1 interface type is <b>e1-<i>fpc/pic/port</i></b>, and DS interface type is <b>ds-<i>fpc/pic/port</i>:&lt;channel&gt;</b>.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Understanding Interfaces on ACX Series Universal Metro Routers on page 11</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show interfaces (T1, IMA Link) on page 1519</a></p> <p><a href="#">show interfaces (T1, PPP) on page 1520</a></p> <p><a href="#">show interfaces detail (T1, PPP) on page 1520</a></p> <p><a href="#">show interfaces extensive (T1 CRC Errors) on page 1521</a></p> <p><a href="#">show interfaces extensive (T1, PPP) on page 1521</a></p> <p><a href="#">show interfaces (E1, Frame Relay) on page 1523</a></p> <p><a href="#">show interfaces detail (E1, Frame Relay) on page 1524</a></p> <p><a href="#">show interfaces extensive (E1, Frame Relay) on page 1525</a></p> <p><a href="#">show interfaces (E1, IMA Link) on page 1527</a></p> <p><a href="#">show interfaces extensive (T1, TDM-CCC-SATOP) on page 1528</a></p> <p><a href="#">show interfaces extensive (DS, TDM-CCC-CESoPSN) on page 1530</a></p>
<b>Output Fields</b>	<p><a href="#">Table 75 on page 1508</a> lists the output fields for the <b>show interfaces</b> (T1 or E1) command. Output fields are listed in the approximate order in which they appear.</p>

Table 75: T1 or E1 show interfaces Output Fields

Field Name	Field Description	Level of Output
<b>Physical Interface</b>		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source: <b>Internal</b> or <b>External</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16</b> bits.	All levels
<b>Framing</b>	Physical layer framing format used for the E1 interface on the link: <b>G704</b> , <b>G704-NO-CRC4</b> , or <b>Unframed</b> . The default is <b>G704</b> .  Physical layer framing format used for the T1 interface on the link: <b>SF</b> and <b>ESF</b> . The default is <b>ESF</b> .	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>IMA Link alarms</b>	Current active IMA link alarms, including the following: <ul style="list-style-type: none"> <li>• LIF</li> <li>• LODS</li> <li>• RFI-IMA</li> <li>• Tx-Mis-Connected</li> <li>• Tx-Unusable-FE</li> <li>• Rx-Unusable-FE</li> <li>• Link Fault</li> </ul>	<b>detail extensive none</b>
<b>IMA Link defects</b>	Current active IMA link defects, including the following: <ul style="list-style-type: none"> <li>• LIF</li> <li>• LODS</li> <li>• RFI-IMA</li> <li>• Tx-Mis-Connected</li> <li>• Tx-Unusable-FE</li> <li>• Rx-Unusable-FE</li> <li>• Link Fault</li> </ul>	<b>detail extensive none</b>
<b>IMA Link state</b>	Current active IMA link status, including the following: <ul style="list-style-type: none"> <li>• <b>Line:</b> synchronized or not synchronized</li> <li>• <b>Near end:</b>—Status of near-end receive and transmit links <ul style="list-style-type: none"> <li>• <b>Rx:</b> Usable or Unusable</li> <li>• <b>Tx:</b> Usable or Unusable</li> </ul> </li> <li>• <b>Far end:</b>—Status of far-end receive and transmit links <ul style="list-style-type: none"> <li>• <b>Rx:</b> Usable or Unusable</li> <li>• <b>Tx:</b> Usable or Unusable</li> </ul> </li> </ul>	<b>detail extensive none</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
IMA link media	<p>IMA Link Media Status, which provides the seconds and count state for the following link media parameters:</p> <ul style="list-style-type: none"> <li>• LIF</li> <li>• LODS</li> <li>• Err-ICP</li> <li>• IV</li> <li>• Rx-FC</li> <li>• Tx-FC</li> <li>• FE-Defects</li> <li>• FE-Rx-FC</li> <li>• FE-Tx-FC</li> <li>• Rx-ICP</li> <li>• Rx-Stuff</li> <li>• Tx-ICP</li> <li>• Tx-Stuff</li> <li>• Rx-SES</li> <li>• Rx-UAS</li> <li>• Rx-UUS</li> <li>• Tx-UUS</li> <li>• FE-Rx-SES</li> <li>• FE-Rx-UAS</li> <li>• FE-Rx-UUS</li> <li>• FE-Tx-UUS</li> </ul>	detail extensive none
Keepalive settings	<p>(PPP and HDLC) Configured settings for keepalives.</p> <ul style="list-style-type: none"> <li>• <b>interval seconds</b>—The time in seconds between successive keepalive requests. The range is 10 seconds through 32,767 seconds, with a default of 10 seconds.</li> <li>• <b>down-count number</b>—The number of keepalive packets a destination must fail to receive before the network takes a link down. The range is 1 through 255, with a default of 3.</li> <li>• <b>up-count number</b>—The number of keepalive packets a destination must receive to change a link's status from down to up. The range is 1 through 255, with a default of 1.</li> </ul>	detail extensive none
Keepalive statistics	<p>(PPP and HDLC) Information about keepalive packets. (When no level of output is specified, the word <b>statistics</b> is not part of the field name and the <b>last seen</b> text is not displayed.)</p> <ul style="list-style-type: none"> <li>• <b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li>• <b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>.</li> </ul> </li> <li>• <b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li>• <b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>.</li> </ul> </li> </ul>	detail extensive none

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>LMI settings</b>	<p>(Frame Relay) Settings for Local Management Interface (LMI) which can be either ANSI LMI settings or ITU LMI settings. ANSI LMI settings is the default. The format is <b>(ANSI or ITU) LMI settings: value, value... xx</b> seconds, where <i>value</i> can be:</p> <ul style="list-style-type: none"> <li>• <b>n391dte</b>—DTE full status polling interval (1–255)</li> <li>• <b>n392dce</b>—DCE error threshold (1–10)</li> <li>• <b>n392dte</b>—DTE error threshold (1–10)</li> <li>• <b>n393dce</b>—DCE monitored event count (1–10)</li> <li>• <b>n393dte</b>—DTE monitored event count (1–10)</li> <li>• <b>t391dte</b>—DTE polling timer (5–30 seconds)</li> <li>• <b>t392dce</b>—DCE polling verification timer (5–30 seconds)</li> </ul>	<b>detail extensive none</b>
<b>LMI</b>	<p>(Frame Relay) Local Management Interface (LMI) packet statistics:</p> <ul style="list-style-type: none"> <li>• <b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: nn (last seen hh:mm:ss ago)</b>.</li> <li>• <b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: nn (last sent hh:mm:ss ago)</b>.</li> </ul>	<b>detail extensive none</b>
<b>DTE statistics</b>	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communications equipment (DCE):</p> <ul style="list-style-type: none"> <li>• <b>Enquiries sent</b>—Number of link status enquiries sent from the DTE to the DCE.</li> <li>• <b>Full enquiries sent</b>—Number of full enquiries sent from the DTE to the DCE.</li> <li>• <b>Enquiry responses received</b>—Number of enquiry responses received by the DTE from the DCE.</li> <li>• <b>Full enquiry responses received</b>—Number of full enquiry responses sent from the DTE to the DCE.</li> </ul>	<b>detail extensive none</b>
<b>DCE statistics</b>	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> <li>• <b>Enquiries received</b>—Number of enquiries received by the DCE from the DTE.</li> <li>• <b>Full enquiries received</b>—Number of full enquiries received by the DCE from the DTE.</li> <li>• <b>Enquiry responses sent</b>—Number of enquiry responses sent from the DCE to the DTE.</li> <li>• <b>Full enquiry responses sent</b>—Number of full enquiry responses sent from the DCE to the DTE.</li> </ul>	<b>detail extensive none</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Common statistics</b>	(Frame Relay) Statistics about messages sent between the DTE and the DCE: <ul style="list-style-type: none"> <li>• <b>Unknown messages received</b>—Number of received packets that do not fall into any category.</li> <li>• <b>Asynchronous updates received</b>—Number of link status peer changes received.</li> <li>• <b>Out-of-sequence packets received</b>—Number of packets for which the sequence of the packets received is different from the expected sequence.</li> <li>• <b>Keepalive responses timedout</b>—Number of keepalive responses that timed out when no Local Management Interface (LMI) packet was reported for n392dte or n393dce intervals. (See LMI settings.)</li> </ul>	<b>detail extensive none</b>
<b>Nonmatching DCE-end DLCIs</b>	(Frame Relay. Displayed only from the DTE.) Number of DLCIs configured from the DCE.	<b>detail extensive none</b>
<b>LCP state</b>	(PPP) Link Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not configured</b>—LCP is not configured on the interface.</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>NCP state</b>	(PPP) Network Control Protocol state. <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Not configured</b>—NCP is not configured on the interface.</li> <li>• <b>Opened</b>—NCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>CHAP state</b>	(PPP) State of the Challenge Handshake Authentication Protocol (CHAP) during its transaction. <ul style="list-style-type: none"> <li>• <b>Chap-Chal-received</b>—Challenge was received but response is not yet sent.</li> <li>• <b>Chap-Chal-sent</b>—Challenge was sent.</li> <li>• <b>Chap-Resp-received</b>—Response was received for the challenge sent, but CHAP has not yet moved into the Success state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response was sent for the challenge received.</li> <li>• <b>Down</b>—CHAP authentication is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Opened</b>—CHAP authentication was successful.</li> </ul>	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CoS Queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>
<b>Input rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>SRAM errors</b>—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC or PIM. If the value of this field increments, the PIC or PIM is malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>DS1 alarms</b> <b>DS1 defects</b>	<p>E1 media-specific defects that can prevent the interface from passing packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface. The following lists all possible alarms and defects. For complete explanations of most of these alarms and defects, see <i>Bellcore Telcordia GR-499-CORE</i>.</p> <ul style="list-style-type: none"> <li>• <b>AIS</b>—Alarm indication signal.</li> <li>• <b>LOF</b>—Loss of frame.</li> <li>• <b>LOS</b>—Loss of signal.</li> <li>• <b>YLW</b>—Yellow alarm. Indicates errors at the remote site receiver.</li> </ul>	<b>detail extensive none</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
T1 media or E1 media	<p>Counts of T1 or E1 media-specific errors.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than <b>OK</b> indicates a problem. The T1 or E1 media-specific error types are:</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>BEE</b>—Bit error</li> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> <li>• <b>CRC Major</b>—Cyclic redundancy check major alarm threshold exceeded</li> <li>• <b>CRC Minor</b>—Cyclic redundancy check minor alarm threshold exceeded</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>PCV</b>—Pulse code violation</li> <li>• <b>CS</b>—Carrier state</li> <li>• <b>CRC</b>—Cyclic redundancy check</li> <li>• <b>FEBE</b>—Far-end block error (E1 only)</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>ES</b>—Errored seconds</li> <li>• <b>BES</b>—Bursty errored seconds</li> <li>• <b>SES</b>—Severely errored seconds</li> <li>• <b>SEFS</b>—Severely errored framing seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> </ul>	extensive
SAToP Configuration	<p>Information about the SAToP configuration.</p> <ul style="list-style-type: none"> <li>• <b>payload-size</b>—Configure the payload size, in bytes (from 32 through 1024 bytes).</li> <li>• <b>idle-pattern</b>—An 8-bit hexadecimal pattern to replace TDM data in a lost packet (from 0 through 255).</li> <li>• <b>jitter-buffer-packets</b>—Number of packets in the jitter buffer (from 1 through 64 packets).</li> <li>• <b>jitter-buffer-latency</b>—Time delay in the jitter buffer (from 1 through 1000 milliseconds).</li> <li>• <b>excessive-packet-loss-rate</b>—Set packet loss options. The options are <b>groups</b>, <b>sample-period</b>, and <b>threshold</b>.</li> <li>• <b>sample-period</b>—Time required to calculate excessive packet loss rate (from 1000 through 65,535 milliseconds).</li> <li>• <b>threshold</b>—Percentile designating the threshold of excessive packet loss rate (1–100 percent).</li> </ul>	extensive

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CESoPSN Configuration</b>	<p>Information about the CESoPSN configuration.</p> <ul style="list-style-type: none"> <li>• <b>packetization-latency</b>—Time required to create packets (from 1000 through 8000 microseconds).</li> <li>• <b>idle-pattern</b>—An 8-bit hexadecimal pattern to replace TDM data in a lost packet (from 0 through 255).</li> <li>• <b>jitter-buffer-packets</b>—Number of packets in the jitter buffer (from 1 through 64 packets).</li> <li>• <b>jitter-buffer-latency</b>—Time delay in the jitter buffer (from 1 through 1000 milliseconds).</li> <li>• <b>excessive-packet-loss-rate</b>—Set packet loss options. The options are <b>sample-period</b> and <b>threshold</b>.</li> <li>• <b>sample-period</b>—Time required to calculate excessive packet loss rate (from 1000 through 65,535 milliseconds).</li> <li>• <b>threshold</b>—Percentile designating the threshold of excessive packet loss rate (1–100 percent).</li> </ul>	<b>extensive</b>
<b>HDLC configuration</b>	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> <li>• <b>Timeslots</b>—Time slots configured on the interface.</li> <li>• <b>Buildout</b>—(T1 only) Buildout setting: 0-132, 133-265, 266-398, 399-531, or 532-655 feet.</li> <li>• <b>Timeslots</b>—Configured time slots for the interface.</li> <li>• <b>Byte encoding</b>—(T1 only) Byte encoding used: <b>Nx64K</b> or <b>Nx56K</b>.</li> <li>• <b>Line encoding</b>—Line encoding used. For T1, the value can be <b>B8ZS</b> or <b>AMI</b>. For E1, the value is <b>HDB3</b>.</li> <li>• <b>Data inversion</b>—HDLC data inversion setting: <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Idle cycle flag</b>—Idle cycle flags.</li> <li>• <b>Start end flag</b>—Start and end flag.</li> </ul>	<b>extensive</b>
<b>DS1 BERT configuration</b>	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>BERT time period</b>—Configured total time period that the BERT is to run.</li> <li>• <b>Elapsed</b>—Actual time elapsed since the start of the BERT (in seconds).</li> <li>• <b>Induced error rate</b>—Configured rate at which the bit errors are induced in the BERT pattern.</li> <li>• <b>Algorithm</b>—Type of algorithm selected for the BERT.</li> </ul>	<b>detail extensive none</b>
<b>Packet Forwarding Engine configuration</b>	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	<b>extensive</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>CoS information</b>	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	<b>extensive</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	All levels
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
<b>Encapsulation</b>	Encapsulation on the logical interface.	All levels
<b>Input packets</b>	Number of packets received on the logical interface.	None specified
<b>Output packets</b>	Number of packets transmitted on the logical interface.	None specified
<b>Traffic statistics</b>	(Frame Relay) Number and rate of bytes and packets received and transmitted on the logical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Local statistics</b>	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes a while (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Transit statistics</b>	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter normally stabilizes in less than 1 second.	<b>detail extensive</b>
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , <b>mlfr</b> , or <b>mpls</b> .	<b>detail extensive none</b>
<b>Multilink bundle</b>	Interface name for the multilink bundle, if configured.	<b>detail extensive none</b>
<b>MTU</b>	MTU size on the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Routing table in which the logical interface address is located. For example, <b>0</b> refers to the routing table <b>inet.0</b> .	<b>detail extensive</b>
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive none</b>
<b>DLCI</b>	<p>(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: <b>Flags</b>, <b>Total down time</b>, <b>Last down</b>, and <b>Traffic statistics</b> or (<b>Input packets</b>, <b>Output packets</b>). <b>Flags</b> can be one or more of the following:</p> <ul style="list-style-type: none"> <li>• <b>Active</b>—Set when the link is active and the DTE and DCE are exchanging information.</li> <li>• <b>Down</b>—Set when the link is active, but no information is received from the DCE.</li> <li>• <b>DCE-Unconfigured</b>—Set when the corresponding DLCI in the DCE is not configured.</li> <li>• <b>Configured</b>—Set when the corresponding DLCI in the DCE is configured.</li> <li>• <b>DCE-configured</b>—Displayed when the command is issued from the DTE.</li> </ul>	<b>detail extensive none</b>
<b>DLCI statistics</b>	<p>(Frame Relay) Data-link connection identifier (DLCI) statistics.</p> <ul style="list-style-type: none"> <li>• <b>Active DLCI</b>—Number of active DLCIs.</li> <li>• <b>Inactive DLCI</b>—Number of inactive DLCIs.</li> </ul>	<b>detail extensive none</b>

Table 75: T1 or E1 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
CE Info	<p>Information related to the circuit emulation statistics.</p> <ul style="list-style-type: none"> <li>• <b>CE Tx</b>—Number of transmitted packets and bytes (TDM to PSN flow).</li> <li>• <b>CE Rx</b>—Number of received packets and bytes and forward bytes (PSN to TDM flow).</li> <li>• <b>CE Rx Forwarded</b>—Number of forwarded bytes.</li> <li>• <b>CE Strayed</b>—Number of stray packets.</li> <li>• <b>CE Lost</b>—Number of lost packets.</li> <li>• <b>CE Malformed</b>—Number of malformed packets</li> <li>• <b>CE Misinserted</b>—Number of misinserted packets.</li> <li>• <b>CE AIS dropped</b>—Number of dropped bytes due to buffer overrun (PSN to TDM).</li> <li>• <b>CE Dropped</b>—Number of dropped packets during resynchronization</li> <li>• <b>CE Overrun Events</b>—Number of overrun events.</li> <li>• <b>CE Underrun Events</b>—Number of underrun events.</li> </ul>	extensive

## Sample Output

### show interfaces (T1, IMA Link)

```

user@host> show interfaces t1-1/0/0
IMA Link alarms   : None
IMA Link defects  : LIF, LODS
IMA Link state:
  Line           : Not synchronized
  Near end       : Rx: Unusable, Tx: Usable
  Far end        : Rx: Unusable, Tx: Usable
IMA link media:   Seconds      Count   State
LIF               0           0      OK
LODS              0           0      OK
Err-ICP          0           0      OK
IV               0           0      OK
Rx-FC            0           0      OK
Tx-FC            0           0      OK
FE-Defects       0
FE-Rx-FC         0
FE-Tx-FC         0
Rx-ICP           0
Rx-Stuff         0
Tx-ICP           11
Tx-Stuff         0
Rx-SES           0
Rx-UAS           0
Rx-UUS           1
Tx-UUS           0
FE-Rx-SES        0
FE-Rx-UAS        0
FE-Rx-UUS        0
FE-Tx-UUS        0

```

**show interfaces (T1, PPP)**

```

user@host> show interfaces t1-1/1/0
Physical interface: t1-1/1/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 45
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Opened
  NCP state: Opened
  CHAP state: Opened
  CoS queues    : 4 supported, 4 in use
  Last flapped  : 2005-12-05 08:43:06 PST (02:13:35 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 72 bps (0 pps)
  DS1 alarms   : None
  DS1 defects   : None

Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255

```

**show interfaces detail (T1, PPP)**

```

user@host> show interfaces t1-1/1/0 detail
Physical interface: t1-1/1/0, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 45, Generation: 32
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Opened
  NCP state: Opened
  CHAP state: Opened
  CoS queues    : 4 supported, 4 in use
  Last flapped  : 2005-12-05 08:43:06 PST (02:13:52 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 798 0 bps
    Input packets: 0 0 pps
    Output packets: 42 0 pps
  Queue counters:   Queued packets  Transmitted packets  Dropped packets

    0 best-effort           0           0           0

```

```

1 expedited-fo          0          0          0
2 assured-forw          0          0          0
3 network-cont          40         40          0

DS1  alarms   : None
DS1  defects  : None
DS1  BERT configuration:
      BERT time period: 10 seconds, Elapsed: 0 seconds
      Induced Error rate: 10e-0, Algorithm: 2^15 - 1
Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51) (Generation 5)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 14, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 18

```

### show interfaces extensive (T1 CRC Errors)

```

user@host> show interfaces t1-3/2/0:1:1 extensive
Physical interface: t1-3/2/0:1:1, Enabled, Physical link is Down
Interface index: 179, SNMP ifIndex: 79, Generation: 180
:
:
DS1  alarms   : AIS, LOF, CRC Major, CRC Minor
DS1  defects  : AIS, LOF, CRC Major, CRC Minor
T1  media:      Seconds      Count  State
SEF              1           1  OK
BEE              1           1  OK
AIS            1128           1  Defect Active
LOF            1128           1  Defect Active
LOS              0           0  OK
YELLOW          0           0  OK
CRC Major       154           1  Defect Active
CRC Minor       154           1  Defect Active
BPV              0           0
EXZ              0           0
LCV              0           0
PCV              0           0
CS               0           0
CRC             154          15400
...

```

### show interfaces extensive (T1, PPP)

```

user@host> show interfaces t1-1/1/0 extensive
Physical interface: t1-1/1/0, Enabled, Physical link is Up
Interface index: 149, SNMP ifIndex: 45, Generation: 32
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1,
Loopback: None, FCS: 16, Framing: ESF
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
Link flags     : Keepalives
Hold-times    : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
Input : 0 (last seen: never)

```

```

Output: 0 (last sent: never)
LCP state: Down
NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Closed
CoS queues      : 4 supported, 4 in use
Last flapped    : 2005-12-05 08:43:06 PST (02:13:54 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes      :                0                0 bps
Output bytes     :               817               72 bps
Input packets    :                0                0 pps
Output packets   :               43               0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

Resource errors: 0
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort                0                0                0
1 expedited-fo              0                0                0
2 assured-forw              0                0                0
3 network-cont              42               42                0

DS1  alarms   : None
DS1  defects  : None
T1  media:      Seconds      Count  State
SEF              1           1  OK
BEE              0           0  OK
AIS              0           0  OK
LOF              1           1  OK
LOS              0           0  OK
YELLOW           1           1  OK
BPV              1           1
EXZ              1           1
LCV              1        65535
PCV              1        1023
CS               0           0
LES              1
ES               1
SES              1
SEFS             1
BES              0
UAS              0

HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 1514, Runt threshold: 3
  Timeslots      : All active
  Line encoding: B8ZS
  Buildout       : 0 to 132 feet
  Byte encoding: Nx64K, Data inversion: Disabled, Idle cycle flag: flags,
  Start end flag: shared
DS1 BERT configuration:

```

```

BERT time period: 10 seconds, Elapsed: 0 seconds
Induced Error rate: 10e-0, Algorithm: 2^15 - 1
Packet Forwarding Engine configuration:
  Destination slot: 1, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %      bps      %      usec
0 best-effort      95      1459200      95      0      low      none
3 network-control  5      76800      5      0      low      none

Logical interface t1-1/1/0.0 (Index 66) (SNMP ifIndex 51) (Generation 5)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 14, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
  Generation: 18

```

### show interfaces (E1, Frame Relay)

```

user@host> show interfaces e1-3/0/0
Physical interface: e1-3/0/0, Enabled, Physical link is Up
  Interface index: 146, SNMP ifIndex: 37
  Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
  Loopback: None, FCS: 16, Framing: G704
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives DTE
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI: Input: 0 (never), Output: 11 (00:00:05 ago)
  DTE statistics:
    Enquiries sent           : 10
    Full enquiries sent      : 1
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timeout : 1
  CoS queues      : 8 supported
  Last flapped    : 2005-11-30 14:50:34 PST (4d 20:33 ago)
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)
  DS1 alarms     : None
  DS1 defects    : None
  Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255
  DLCI 100

```

```

Flags: Down, DCE-Unconfigured
Total down time: 00:01:13 sec, Last down: 00:01:13 ago
Input packets : 0
Output packets: 0
DLCI statistics:
Active DLCI :0 Inactive DLCI :1

```

### show interfaces detail (E1, Frame Relay)

```

user@host> show interfaces e1-3/0/0 detail
Physical interface: e1-3/0/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 37, Generation: 69
Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
Loopback: None, FCS: 16, Framing: G704
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
Link flags : Keepalives DTE
Hold-times : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
Input : 0 (last seen: never)
Output: 12 (last sent 00:00:02 ago)
DTE statistics:
Enquiries sent : 10
Full enquiries sent : 2
Enquiry responses received : 0
Full enquiry responses received : 0
DCE statistics:
Enquiries received : 0
Full enquiries received : 0
Enquiry responses sent : 0
Full enquiry responses sent : 0
Common statistics:
Unknown messages received : 0
Asynchronous updates received : 0
Out-of-sequence packets received : 0
Keepalive responses timeout : 1
CoS queues : 8 supported
Last flapped : 2005-11-30 14:50:34 PST (4d 20:33 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 225 56 bps
Input packets: 0 0 pps
Output packets: 15 0 pps
Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 limited	0	0	0
1 expedited-fo	0	0	0
2 real-plus	0	0	0
3 network-cont	15	15	0

```

DS1 alarms : None
DS1 defects : None
DS1 BERT configuration:
BERT time period: 10 seconds, Elapsed: 0 seconds
Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32) (Generation 26)

```

```

Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Local statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Transit statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 32, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255,
    Generation: 42
  DLCI 100
    Flags: Down, DCE-Unconfigured
    Total down time: 00:01:18 sec, Last down: 00:01:18 ago
    Traffic statistics:
      Input bytes : 0
      Output bytes : 0
      Input packets: 0
      Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

### show interfaces extensive (E1, Frame Relay)

```

user@host> show interfaces e1-3/0/0 extensive
Physical interface: e1-3/0/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 37, Generation: 69
Link-level type: Frame-Relay, MTU: 1504, Clocking: Internal, Speed: E1,
Loopback: None, FCS: 16, Framing: G704
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
Link flags : Keepalives DTE
Hold-times : Up 0 ms, Down 0 ms
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI statistics:
  Input : 0 (last seen: never)
  Output: 12 (last sent 00:00:05 ago)
DTE statistics:
  Enquiries sent : 10
  Full enquiries sent : 2
  Enquiry responses received : 0
  Full enquiry responses received : 0
DCE statistics:
  Enquiries received : 0
  Full enquiries received : 0
  Enquiry responses sent : 0
  Full enquiry responses sent : 0
Common statistics:
  Unknown messages received : 0
  Asynchronous updates received : 0
  Out-of-sequence packets received : 0

```

```

    Keepalive responses timeout      : 1
CoS queues      : 8 supported
Last flapped   : 2005-11-30 14:50:34 PST (4d 20:33 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          0          0 bps
  Output bytes :        225          0 bps
  Input packets:          0          0 pps
  Output packets:        15          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
  HS link CRC errors: 0, SRAM errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 17, Errors: 0, Drops: 0, Aged packets: 0,
  MTU errors: 0, Resource errors: 0
Queue counters:
  Queued packets  Transmitted packets  Dropped packets

  0 limited              0              0              0
  1 expedited-fo         0              0              0
  2 real-plus            0              0              0
  3 network-cont         15             15             0

DS1  alarms  : None
DS1  defects  : None
E1  media:
Seconds      Count  State
SEF          0      0 OK
BEE          5      5 OK
AIS          0      0 OK
LOF         245     15 OK
LOS         245      4 OK
YELLOW       0     11 OK
BPV          0      0
EXZ          9      9
LCV          0      0
PCV          0      0
CS           0      0
FEBE         0      0
LES          0
ES           0
SES          0
SEFS         0
BES          0
UAS         271

HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 1506, Runt threshold: 0
  Timeslots      : All active
  Line encoding: HDB3, Data inversion: Disabled, Idle cycle flag: flags,
  Start end flag: shared
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 3, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue  Bandwidth      Buffer  Priority  Limit

```

```

          %          bps          %          usec
0 limited          95        1945600        95           0          low        none
3 network-control   5         102400         5           0          low        none
Logical interface e1-3/0/0.0 (Index 72) (SNMP ifIndex 32) (Generation 26)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:          0          0 pps
  Output packets:          0          0 pps
Protocol inet, MTU: 1500, Generation: 32, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 10.1.3/24, Local: 10.1.3.1, Broadcast: 10.1.3.255,
  Generation: 42
DLCI 100
Flags: Down, DCE-Unconfigured
Total down time: 00:01:21 sec, Last down: 00:01:21 ago
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
DLCI statistics:
Active DLCI :0 Inactive DLCI :1

```

### show interfaces (E1, IMA Link)

```

user@host> show interfaces e1-1/0/0
IMA Link alarms : None
IMA Link defects : LIF, LODS
IMA Link state:
  Line : Not synchronized
  Near end : Rx: Unusable, Tx: Usable
  Far end : Rx: Unusable, Tx: Usable
IMA link media:          Seconds          Count          State
LIF                      0          0
LODS                     0          0
Err-ICP                  0          0
IV                        0          0
Rx-FC                     0          0
Tx-FC                     0          0
FE-Defects                0          0
FE-Rx-FC                  0          0
FE-Tx-FC                  0          0
Rx-ICP                    0          0
Rx-Stuff                  0          0
Tx-ICP                    0          0
Tx-Stuff                  0          0
Rx-SES                     0          0
Rx-UAS                     0          0

```

Rx-UUS	1
Tx-UUS	0
FE-Rx-SES	0
FE-Rx-UAS	0
FE-Rx-UUS	0
FE-Tx-UUS	0

### show interfaces extensive (T1, TDM-CCC-SATOP)

```

user@host> show interfaces t1-1/0/0:1:1 extensive
Physical interface: t1-1/0/0:1:1, Enabled, Physical link is Down
  Interface index: 153, SNMP ifIndex: 579, Generation: 817
  Link-level type: TDM-CCC-SATOP, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF,
  Parent: coc1-1/0/0:1 Interface index 152
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x0
  Link flags     : None
  Hold-times    : Up 0 ms, Down 0 ms
  CoS queues    : 8 supported, 8 maximum usable queues
  Last flapped  : 2012-10-28 02:12:40 PDT (22:32:13 ago)
  Statistics last cleared: 2012-10-29 00:44:52 PDT (00:00:01 ago)
  Egress queues: 8 supported, 4 in use
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort      0                0                0
    1 expedited-fo     0                0                0
    2 assured-forw     0                0                0
    3 network-cont     0                0                0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
DS1  alarms       : None
DS1  defects      : None
T1  media:        Seconds      Count  State
  SEF              0           0  OK
  BEE              0           0  OK
  AIS              0           0  OK
  LOF              0           0  OK
  LOS              0           0  OK
  YELLOW           0           0  OK
  CRC Major        0           0  OK
  CRC Minor        0           0  OK
  BPV              0           0
  EXZ              0           0
  LCV              0           0
  PCV              0           0
  CS               0           0
  CRC              0           0
  LES              0
  ES               0
  SES              0
  SEFS             0
  BES              0
  UAS              0

```

```

SAToP configuration:
  Payload size: 192
  Idle pattern: 0xFF
  Octet aligned: Disabled
  Jitter buffer: packets: 8, latency: 7 ms, auto adjust: Disabled
  Excessive packet loss rate: sample period: 10000 ms, threshold: 30%
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SONET alarms : None
SONET defects : AIS-V, RDI-V
SONET vt:
  BIP-BIP2          0          0
  REI-V             0          0
  LOP-V             0          0 OK
  AIS-V             2          0 Defect Active
  RDI-V             2          0 Defect Active
  UNEQ-V            0          0 OK
  PLM-V             0          0 OK
  ES-V              0
  SES-V             0
  UAS-V             2
  ES-VFE            0
  SES-VFE            0
  UAS-VFE           0
Received SONET overhead:
V5 : 0x07
V5(cmp) : 0x02
Transmitted SONET overhead:
V5 : 0x02
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  Direction : Output
  CoS transmit queue
Limit          %          bps          %          usec          Priority
0 best-effort  95          1459200  95          0          low
none
3 network-control  5          76800    5          0          low
none

Logical interface t1-1/0/0:1:1.0 (Index 69) (SNMP ifIndex 580) (Generation 525)

  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: TDM-CCC-SATOP
CE info          Packets          Bytes          Count
CE Tx            1005          192960
CE Rx            1004          192768
CE Rx Forwarded          0
CE Strayed          0
CE Lost             0
CE Malformed        0
CE Misinserted      0
CE AIS dropped       0
CE Dropped          1005          192960
CE Overrun Events          0
CE Underrun Events        0
Protocol ccc, MTU: 1504, Generation: 814, Route table: 0
  Flags: Is-Primary

```

## show interfaces extensive (DS, TDM-CCC-CESoPSN)

```

user@host> show interfaces ds-1/0/0:1:1:1 extensive
Physical interface: ds-1/0/0:1:1:1, Enabled, Physical link is Down
  Interface index: 154, SNMP ifIndex: 597, Generation: 819
  Link-level type: TDM-CCC-CESoPSN, MTU: 1504, Speed: 1536kbps, Loopback: None,
FCS: 16, Parent: ct1-1/0/0:1:1 Interface index 153
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point SNMP-Traps Internal: 0x0
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  CoS queues     : 8 supported, 8 maximum usable queues
  Last flapped   : 2012-10-29 00:49:03 PDT (00:00:35 ago)
  Statistics last cleared: Never
  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	0	0	0

```

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
CESoPSN configuration:
  Packetization latency: 1000 us
  Idle pattern: 0xFF
  Jitter buffer: packets: 8, latency: 8 ms, auto adjust: Disabled
  Excessive packet loss rate: sample period: 10000 ms, threshold: 30%
DSO BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
Packet Forwarding Engine configuration:
  Destination slot: 1
CoS information:
  Direction : Output
  CoS transmit queue

```

Limit	CoS transmit queue	Bandwidth		Buffer Priority	
		%	bps	%	usec
0 best-effort	95	1459200	95	0	low
none					
3 network-control	5	76800	5	0	low
none					

```

Logical interface ds-1/0/0:1:1:1.0 (Index 69) (SNMP ifIndex 598) (Generation 549)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: TDM-CCC-CESoPSN
CE info

```

	Packets	Bytes	Count
CE Tx	0	0	
CE Rx	35712	6856704	
CE Rx Forwarded		0	
CE Strayed	0		
CE Lost	0		
CE Malformed	0		
CE Misinserted	0		

```
CE AIS dropped          0
CE Dropped              0          0
CE Overrun Events       0
CE Underrun Events      1
Protocol ccc, MTU: 1504, Generation: 857, Route table: 0
  Flags: Is-Primary
```

## show interfaces (T3 or E3)

<b>Syntax</b>	show interfaces <i>interface-type</i> <brief   detail   extensive   terse> <descriptions> <media> <snmp-index <i>snmp-index</i> > <statistics>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display status information about the specified T3 or E3 interface.
<b>Options</b>	<p><b><i>interface-type</i></b>—On M Series and T Series routers, the T3 interface type is <b>t3-fpc/pic/port</b>, whereas the E3 interface type is <b>e3-fpc/pic/port</b>.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index <i>snmp-index</i></b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces (T3, PPP) on page 1541</a> <a href="#">show interfaces detail (T3, PPP) on page 1542</a> <a href="#">show interfaces extensive (T3, PPP) on page 1543</a> <a href="#">show interfaces (E3, Frame Relay) on page 1544</a> <a href="#">show interfaces detail (E3, Frame Relay) on page 1545</a> <a href="#">show interfaces extensive (E3, Frame Relay) on page 1547</a>
<b>Output Fields</b>	Table 76 on page 1532 lists the output fields for the <b>show interfaces</b> (T3 or E3) command. Output fields are listed in the approximate order in which they appear.

Table 76: T3 or E3 show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.	<b>detail extensive</b> none
<b>SNMP ifIndex</b>	SNMP index number for the physical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link-level type</b>	Encapsulation being used on the physical interface.	All levels
<b>MTU</b>	MTU size on the physical interface.	All levels
<b>Clocking</b>	Reference clock source. It can be <b>Internal</b> or <b>External</b> .	All levels
<b>Speed</b>	Speed at which the interface is running.	All levels
<b>Loopback</b>	Whether loopback is enabled and the type of loopback ( <b>local</b> or <b>remote</b> ).	All levels
<b>FCS</b>	Frame check sequence on the interface (either <b>16</b> or <b>32</b> ). The default is <b>16</b> bits.	All levels
<b>Mode</b>	(T3 only) Whether C-bit parity mode or M13 mode is enabled.	All levels
<b>Long buildout</b>	(T3 only) Buildout setting: less than 255 feet (68 meters) or greater than 255 feet and shorter than 450 feet (137 meters).	All levels
<b>Framing</b>	(E3 only) Physical layer framing format used on the link. It can be <b>G751</b> or <b>Unframed</b> . The default is <b>G751</b> .	All levels
<b>Device flags</b>	Information about the physical device. Possible values are described in the "Device Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Interface flags</b>	Information about the interface. Possible values are described in the "Interface Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Link flags</b>	Information about the link. Possible values are described in the "Link Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	All levels
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Keepalive settings</b>	(PPP and HDLC) Configured settings for keepalives. <ul style="list-style-type: none"> <li><b>interval seconds</b>—Time in seconds between successive keepalive requests. The range is <b>10</b> seconds through <b>32,767</b> seconds, with a default of <b>10</b> seconds.</li> <li><b>down-count number</b>—Number of keepalive packets a destination must fail to receive before the network takes a link down. The range is <b>1</b> through <b>255</b>, with a default of <b>3</b>.</li> <li><b>up-count number</b>—Number of keepalive packets a destination must receive to change a link's status from down to up. The range is <b>1</b> through <b>255</b>, with a default of <b>1</b>.</li> </ul>	<b>detail extensive</b> none

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Keepalive statistics or Keepalive	<p>(PPP and HDLC) Information about keepalive packets.</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of keepalive packets received by PPP. <ul style="list-style-type: none"> <li><b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was received, in the format <i>hh:mm:ss</i>.</li> </ul> </li> <li><b>Output</b>—Number of keepalive packets sent by PPP and how long ago the last keepalive packets were sent and received. <ul style="list-style-type: none"> <li><b>(last seen 00:00:00 ago)</b>—Time since the last keepalive packet was sent, in the format <i>hh:mm:ss</i>.</li> </ul> </li> </ul>	detail extensive none
LMI settings	<p>(Frame Relay) Local Management Interface (LMI) settings (ANSI or ITU). ANSI LMI settings is the default. The format is <b>LMI settings: value, value... xx seconds</b>, where <i>value</i> can be:</p> <ul style="list-style-type: none"> <li><b>n391dte</b>—DTE full status polling interval (1–255)</li> <li><b>n392dce</b>—DCE error threshold (1–10)</li> <li><b>n392dte</b>—DTE error threshold (1–10)</li> <li><b>n393dce</b>—DCE monitored event count (1–10)</li> <li><b>n393dte</b>—DTE monitored event count (1–10)</li> <li><b>t391dte</b>—DTE polling timer (5–30 seconds)</li> <li><b>t392dce</b>—DCE polling verification timer (5–30 seconds)</li> </ul>	detail extensive none
LMI	<p>(Frame Relay) LMI statistics:</p> <ul style="list-style-type: none"> <li><b>Input</b>—Number of packets coming in on the interface (<i>nn</i>) and how much time has passed since the last packet arrived. The format is <b>Input: nn (last seen hh:mm:ss ago)</b>.</li> <li><b>Output</b>—Number of packets sent out on the interface (<i>nn</i>) and how much time has passed since the last packet was sent. The format is <b>Output: nn (last sent hh:mm:ss ago)</b>.</li> </ul>	detail extensive none
DTE statistics	<p>(Frame Relay) Statistics about messages transmitted from the data terminal equipment (DTE) to the data communications equipment (DCE):</p> <ul style="list-style-type: none"> <li><b>Enquiries sent</b>—Number of link status enquiries sent from the DTE to the DCE.</li> <li><b>Full enquiries sent</b>—Number of full enquiries sent from the DTE to the DCE.</li> <li><b>Enquiry responses received</b>—Number of enquiry responses received by the DTE from the DCE.</li> <li><b>Full enquiry responses received</b>—Number of full enquiry responses sent from the DTE to the DCE.</li> </ul>	detail extensive none
DCE statistics	<p>(Frame Relay) Statistics about messages transmitted from the DCE to the DTE:</p> <ul style="list-style-type: none"> <li><b>Enquiries received</b>—Number of enquiries received by the DCE from the DTE.</li> <li><b>Full enquiries received</b>—Number of full enquiries received by the DCE from the DTE.</li> <li><b>Enquiry responses sent</b>—Number of enquiry responses sent from the DCE to the DTE.</li> <li><b>Full enquiry responses sent</b>—Number of full enquiry responses sent from the DCE to the DTE.</li> </ul>	detail extensive none

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Common statistics</b>	<p>(Frame Relay) Statistics about messages sent between the DTE and the DCE:</p> <ul style="list-style-type: none"> <li>• <b>Unknown messages received</b>—Number of received packets that do not fall into any category.</li> <li>• <b>Asynchronous updates received</b>—Number of link status peer changes received.</li> <li>• <b>Out-of-sequence packets received</b>—Number of packets for which the sequence of the packets received is different from the expected sequence.</li> <li>• <b>Keepalive responses timedout</b>—Number of keepalive responses that timed out when no LMI packet was reported for <b>n392dte</b> or <b>n393dce</b> intervals. (See <b>LMI settings</b>.)</li> </ul>	<b>detail extensive none</b>
<b>Nonmatching DCE-end DLCIs</b>	(Frame Relay. Displayed only from the DTE.) Number of DLCIs configured from the DCE.	<b>detail extensive none</b>
<b>LCP state</b>	<p>(PPP) Link Control Protocol state.</p> <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—LCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Opened</b>—LCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>NCP state</b>	<p>(PPP) Network Control Protocol state.</p> <ul style="list-style-type: none"> <li>• <b>Conf-ack-received</b>—Acknowledgement was received.</li> <li>• <b>Conf-ack-sent</b>—Acknowledgement was sent.</li> <li>• <b>Conf-req-sent</b>—Request was sent.</li> <li>• <b>Down</b>—NCP negotiation is incomplete (not yet completed or has failed).</li> <li>• <b>Opened</b>—NCP negotiation is successful.</li> </ul>	<b>detail extensive none</b>
<b>CHAP state</b>	<p>(PPP) Displays the state of the Challenge Handshake Authentication Protocol (CHAP) during its transaction.</p> <ul style="list-style-type: none"> <li>• <b>Chap-Resp-received</b>—Response received for the challenge sent, but CHAP not yet moved into the Success state. (Most likely with RADIUS authentication.)</li> <li>• <b>Chap-Resp-sent</b>—Response sent for the challenge received.</li> <li>• <b>Chap-Chal-sent</b>—Challenge sent.</li> <li>• <b>Chap-Chal-received</b>—Challenge received but response not yet sent.</li> <li>• <b>Down</b>—CHAP authentication is incomplete (not yet completed or has failed).</li> <li>• <b>Not-configured</b>—CHAP is not configured on the interface.</li> <li>• <b>Opened</b>—CHAP authentication was successful.</li> </ul>	<b>detail extensive none</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second timezone (year-month-day hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>CoS queues</b>	Number of CoS queues configured.	<b>detail extensive none</b>

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input rate</b>	Input rate in bits per second (bps) and packets per second (pps).	None specified
<b>Output rate</b>	Output rate in bps and pps.	None specified
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface</li> <li>• <b>Output packets</b>—Number of packets received on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input errors</b>	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—(T3 only) Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—(T3 only) Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit/receive leaky bucket configuration. The default is <b>off</b>.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>SRAM errors</b>—Number of hardware errors that occurred in the static RAM (SRAM) on the PIC or PIM. If the value of this field increments, the PIC or PIM is malfunctioning.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Output errors</b>	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>	<b>detail extensive</b>
<b>Active alarms</b> <b>Active defects</b>	<p>E3 media-specific defects that can render the interface unable to pass packets. When a defect persists for a certain amount of time, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router, or turn on the red or yellow alarm LED on the craft interface.</p> <ul style="list-style-type: none"> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>FERF</b>—Far-end receive failures</li> <li>• <b>IDLE</b>—Idle code detected</li> <li>• <b>LCD</b>—Loss of cell delineation</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>PLL</b>—Phase-locked loop</li> <li>• <b>YLW</b>—Remote defect indication</li> </ul>	<b>detail extensive none</b>

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>DS3 media or E3 media</b>	<p>Counts of DS3 (T3) or E3 media-specific errors.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. State other than OK indicates a problem.</li> </ul> <p>The DS3 or E3 media-specific error types can be:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop out of lock</li> <li>• <b>Reframing</b>—Frame alignment recovery time</li> <li>• <b>AIS</b>—Alarm indication signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>IDLE</b>—Idle code detected</li> <li>• <b>YELLOW</b>—Errors at the remote site receiver</li> <li>• <b>BPV</b>—Bipolar violation</li> <li>• <b>EXZ</b>—Excessive zeros</li> <li>• <b>LCV</b>—Line code violation</li> <li>• <b>PCV</b>—(DS3 only) Pulse code violation</li> <li>• <b>CCV</b>—(DS3 only) C-bit coding violation</li> <li>• <b>FEBE</b>—(DS3 only) Far-end block error</li> <li>• <b>LES</b>—Line error seconds</li> <li>• <b>PES</b>—(DS3 only) P-bit errored seconds</li> <li>• <b>PSSES</b>—(DS3 only) P-bit errored seconds (section)</li> <li>• <b>CES</b>—(DS3 only) C-bit errored seconds</li> <li>• <b>CSES</b>—(DS3 only) C-bit severely errored seconds</li> <li>• <b>SEFS</b>—Severely errored framing seconds</li> <li>• <b>UAS</b>—Unavailable seconds</li> </ul>	<b>extensive</b>
<b>HDLC configuration</b>	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> <li>• <b>Idle cycle flag</b>—Idle cycle flags.</li> <li>• <b>Start end flag</b>—Start and end flag.</li> </ul>	<b>extensive</b>

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
DSU configuration	<p>Information about the DSU configuration. The last three lines (<b>Bit count</b>, <b>Error bit count</b>, and <b>LOS information</b>) are displayed only if a BERT has ever been run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>Compatibility mod</b>—CSU/DSU compatibility mode: <b>None</b>, <b>Larscom</b>, <b>Kentrox</b>, or <b>Digital-Link</b>.</li> <li>• <b>Scrambling</b>—Payload scrambling: <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Subrate</b>—Configured subrate setting. Applies only when <b>Digital-Link</b> compatibility mode is used. The subrate can be <b>Disabled</b> or display units in Kbps.</li> <li>• <b>FEAC loopbac</b>—(T3) Whether a far-end alarm and control (FEAC) loopback is <b>Active</b> or <b>Inactive</b>. This feature is used to send alarm or status information from the far-end terminal back to the near-end terminal and to initiate T3 loopbacks at the far-end terminal from the near-end terminal.</li> <li>• <b>Response</b>—Whether the FEAC signal is <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Count</b>—Number of FEAC loopbacks.</li> </ul>	extensive
DS3 (or E3) BERT configuration	<p>BERT (bit error rate test) checks the quality of the line. This output appears only when a BERT is run on the interface.</p> <ul style="list-style-type: none"> <li>• <b>BERT time period</b>—Configured total time period that the BERT is to run.</li> <li>• <b>Elapsed</b>—Actual time elapsed since the start of the BERT (in seconds).</li> <li>• <b>Induced error rate</b>—Configured rate at which the bit errors are induced in the BERT pattern.</li> <li>• <b>Algorithm</b>—Type of algorithm selected for the BERT.</li> </ul>	detail extensive none
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>	extensive
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>	extensive

---

#### Logical Interface

---

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Logical interface</b>	Name of the logical interface.	detail extensive none
<b>Index</b>	Logical interface index number, which reflects its initialization sequence.	detail extensive none
<b>SNMP ifIndex</b>	Logical interface SNMP interface index number.	detail extensive none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	extensive
<b>Flags</b>	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	detail extensive none
<b>Encapsulation</b>	Encapsulation on the logical interface.	detail extensive none
<b>Input packets</b>	Number of packets received on the logical interface.	None specified
<b>Output packets</b>	Number of packets transmitted on the logical interface.	None specified
<b>Traffic statistics</b>	<p>(Frame Relay) Number and rate of bytes and packets received and transmitted on the logical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	detail extensive
<b>Local statistics</b>	(Frame Relay) Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
<b>Transit statistics</b>	(Frame Relay) Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. This counter normally stabilizes in less than 1 second.	detail extensive
<b>Protocol</b>	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , <b>mlfr</b> , or <b>mpls</b> .	detail extensive none
<b>Multilink bundle</b>	(Multilink) Interface name for the multilink bundle.	detail extensive none
<b>MTU</b>	MTU size on the logical interface.	detail extensive none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	detail extensive
<b>Route table</b>	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
<b>Flags</b>	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	detail extensive none

Table 76: T3 or E3 show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive none</b>
<b>Local</b>	IP address of the logical interface.	<b>detail extensive none</b>
<b>Broadcast</b>	Broadcast address.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive none</b>
<b>DLCI</b>	(Frame Relay) DLCI number of the logical interface. The following DLCI information is displayed: <b>Flags</b> , <b>Total down time</b> , <b>Last down</b> , and <b>Traffic statistics</b> (or <b>Input packets</b> , <b>Output packets</b> ). <b>Flags</b> is one or more of the following: <ul style="list-style-type: none"> <li>• <b>Active</b>—Set when the link is active and the DTE and DCE are exchanging information.</li> <li>• <b>Down</b>—Set when the link is active, but no information is received from the DCE.</li> <li>• <b>DCE Unconfigured</b>—Set when the corresponding DLCI in the DCE is not configured.</li> <li>• <b>Configured</b>—Set when the corresponding DLCI in the DCE is configured.</li> <li>• <b>DCE-configured</b>—Displayed when the command is issued from the DTE.</li> </ul>	<b>detail extensive none</b>
<b>DLCI statistics</b>	(Frame Relay) Data-link connection identifier (DLCI) statistics. <ul style="list-style-type: none"> <li>• <b>Active DLCI</b>—Number of active DLCIs.</li> <li>• <b>Inactive DLCI</b>—Number of inactive DLCIs.</li> </ul>	<b>detail extensive none</b>

## Sample Output

### show interfaces (T3, PPP)

```

user@host> show interfaces t3-0/2/0
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues    : 4 supported, 4 in use
  Last flapped  : 2005-12-05 08:43:06 PST (02:18:40 ago)

```

```

Input rate      : 0 bps (0 pps)
Output rate     : 72 bps (0 pps)
Active alarms   : None
Active defects  : None
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 4470
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
    198.51.100.255

```

### show interfaces detail (T3, PPP)

```

user@host> show interfaces t3-0/2/0 detail
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35, Generation: 22
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags        : Keepalives
  Hold-times        : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues      : 4 supported, 4 in use
  Last flapped    : 2005-12-05 08:43:06 PST (02:18:45 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          0          0 bps
    Output bytes :         152          0 bps
    Input packets:          0          0 pps
    Output packets:         8          0 pps
  Queue counters:      Queued packets  Transmitted packets  Dropped packets

    0 best-effort          0          0          0
    1 expedited-fo          0          0          0
    2 assured-forw          0          0          0
    3 network-cont         6          6          0

  Active alarms : None
  Active defects : None
  DS3 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54) (Generation 8)

```

```

Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 17, Route table: 0
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
    Generation: 24

```

### show interfaces extensive (T3, PPP)

```

user@host> show interfaces t3-0/2/0 extensive
Physical interface: t3-0/2/0, Enabled, Physical link is Up
  Interface index: 139, SNMP ifIndex: 35, Generation: 22
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3,
  Loopback: None, FCS: 16, Mode: C/Bit parity,
  Long buildout: Shorter than 255 feet
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Down
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Closed
  CoS queues   : 4 supported, 4 in use
  Last flapped : 2005-12-05 08:43:06 PST (02:18:47 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :                0                0 bps
    Output bytes :               171               72 bps
    Input packets:                0                0 pps
    Output packets:               9                0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
    SRAM errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,

    Resource errors: 0
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0 best-effort	0	0	0
1 expedited-fo	0	0	0
2 assured-forw	0	0	0
3 network-cont	7	7	0

```

  Active alarms : None
  Active defects : None
  DS3 media:
    Seconds      Count  State
    PLL Lock     0       0 OK
    Reframing     0       0 OK
    AIS          0       0 OK

```

```

LOF                0          0 OK
LOS                0          0 OK
IDLE               0          0 OK
YELLOW             0          0 OK
BPV                0          0
EXZ                0          0
LCV                1          4
PCV                0          0
CCV                0          0
FEBE               1          11
LES                1
PES                0
PSES               0
CES                0
CSES               0
SEFS               0
UAS                0
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
  Idle cycle flag: flags, Start end flag: shared
DSU configuration:
  Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
  FEAC loopback: Inactive, Response: Disabled, Count: 0
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
CoS information:
  CoS transmit queue      Bandwidth      Buffer      Priority      Limit
                           %      bps      %      usec
0 best-effort             95      42499200  95      0          low      none
3 network-control         5       2236800  5       0          low      none

Logical interface t3-0/2/0.0 (Index 66) (SNMP ifIndex 54) (Generation 8)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 17, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 24

```

### show interfaces (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0
Physical interface: e3-1/2/0, Enabled, Physical link is Up
Interface index: 153, SNMP ifIndex: 49
Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
Loopback: None, FCS: 16, Framing: G751
Device flags : Present Running
Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
Link flags : Keepalives DTE
ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
LMI: Input: 0 (never), Output: 4 (00:00:06 ago)
DTE statistics:
  Enquiries sent : 4
  Full enquiries sent : 0
  Enquiry responses received : 0

```

```

    Full enquiry responses received      : 0
DCE statistics:
    Enquiries received                  : 0
    Full enquiries received              : 0
    Enquiry responses sent               : 0
    Full enquiry responses sent          : 0
Common statistics:
    Unknown messages received           : 0
    Asynchronous updates received       : 0
    Out-of-sequence packets received    : 0
    Keepalive responses timedout        : 1
CoS queues      : 4 supported, 4 in use
Last flapped    : 2005-12-05 08:46:14 PST (02:27:17 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
Active alarms   : None
Active defects  : None

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Input packets : 0
Output packets: 0
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255
  DLCI 100
    Flags: Down, DCE-Unconfigured
    Total down time: 00:00:06 sec, Last down: 00:00:06 ago
    Input packets : 0
    Output packets: 0
  DLCI statistics:
    Active DLCI :0 Inactive DLCI :1

```

### show interfaces detail (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0 detail
Physical interface: e3-1/2/0, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 49, Generation: 36
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
  Loopback: None, FCS: 16, Framing: G751
  Device flags      : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags       : Keepalives DTE
  Hold-times       : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 5 (last sent 00:00:07 ago)
  DTE statistics:
    Enquiries sent              : 5
    Full enquiries sent         : 0
    Enquiry responses received  : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received          : 0
    Full enquiries received     : 0
    Enquiry responses sent      : 0
    Full enquiry responses sent : 0
  Common statistics:

```

```

Unknown messages received      : 0
Asynchronous updates received  : 0
Out-of-sequence packets received : 0
Keepalive responses timedout    : 1
CoS queues      : 4 supported, 4 in use
Last flapped    : 2005-12-05 08:46:14 PST (02:27:27 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          0          0 bps
Output bytes :         806          0 bps
Input packets:          0          0 pps
Output packets:        44          0 pps
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 best-effort          0              0              0

1 expedited-fo         0              0              0

2 assured-forw         0              0              0

3 network-cont        43              43              0

Active alarms : None
Active defects : None

Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57) (Generation 15)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID
Traffic statistics:
Input bytes :          0
Output bytes :          0
Input packets:          0
Output packets:          0
Local statistics:
Input bytes :          0
Output bytes :          0
Input packets:          0
Output packets:          0
Transit statistics:
Input bytes :          0          0 bps
Output bytes :          0          0 bps
Input packets:          0          0 pps
Output packets:          0          0 pps
Protocol inet, MTU: 4470, Generation: 24, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:
198.51.100.255,
Generation: 38
DLCI 100
Flags: Down, DCE-Unconfigured
Total down time: 00:00:16 sec, Last down: 00:00:16 ago
Traffic statistics:
Input bytes :          0
Output bytes :          0
Input packets:          0
Output packets:          0
DLCI statistics:
Active DLCI :0 Inactive DLCI :1

```

## show interfaces extensive (E3, Frame Relay)

```

user@host> show interfaces e3-1/2/0 extensive
Physical interface: e3-1/2/0, Enabled, Physical link is Up
  Interface index: 153, SNMP ifIndex: 49, Generation: 36
  Link-level type: Frame-Relay, MTU: 4474, Clocking: Internal, Speed: E3,
  Loopback: None, FCS: 16, Framing: G751
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps Internal: 0x4000
  Link flags     : Keepalives DTE
  Hold-times    : Up 0 ms, Down 0 ms
  ANSI LMI settings: n391dte 6, n392dte 3, n393dte 4, t391dte 10 seconds
  LMI statistics:
    Input : 0 (last seen: never)
    Output: 6 (last sent 00:00:02 ago)
  DTE statistics:
    Enquiries sent           : 5
    Full enquiries sent      : 1
    Enquiry responses received : 0
    Full enquiry responses received : 0
  DCE statistics:
    Enquiries received       : 0
    Full enquiries received   : 0
    Enquiry responses sent    : 0
    Full enquiry responses sent : 0
  Common statistics:
    Unknown messages received : 0
    Asynchronous updates received : 0
    Out-of-sequence packets received : 0
    Keepalive responses timedout : 1
  CoS queues : 4 supported, 4 in use
  Last flapped : 2005-12-05 08:46:14 PST (02:27:30 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 821 56 bps
    Input packets: 0 0 pps
    Output packets: 45 0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 21118, Bucket drops: 0,
    Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0,
    Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, MTU errors: 0,
    Resource errors: 0
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets
    0 best-effort   0 0 0
    1 expedited-fo  0 0 0
    2 assured-forw  0 0 0
    3 network-cont  44 44 0
  Active alarms : None
  Active defects : None
  E3 media:
    PLL Lock        Seconds  Count  State
    PLL Lock        0 0 OK

```

```

Reframing          187          1 OK
AIS                0           0 OK
LOF                187          1 OK
LOS                187          1 OK
IDLE               0           0 OK
YELLOW            0           0 OK
BPV                0           0
EXZ                0           0
LCV                188      12303167
LES                188
SEFS               187
UAS                195

```

## DSU configuration:

Compatibility mode: None, Scrambling: Disabled

## E3 BERT configuration:

BERT time period: 10 seconds, Elapsed: 0 seconds

Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced Error rate: 10e-0

## Packet Forwarding Engine configuration:

Destination slot: 1, PLP byte: 1 (0x00)

## CoS information:

CoS transmit queue		Bandwidth		Buffer	Priority	Limit
	%	bps	%	usec		
0 best-effort	95	32649600	95	0	low	none
3 network-control	5	1718400	5	0	low	none

## Logical interface e3-1/2/0.0 (Index 66) (SNMP ifIndex 57) (Generation 15)

Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: FR-NLPID

## Traffic statistics:

```

Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

## Local statistics:

```

Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

## Transit statistics:

```

Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps

```

Protocol inet, MTU: 4470, Generation: 24, Route table: 0

Flags: None

Addresses, Flags: Dest-route-down Is-Preferred Is-Primary

Destination: 198.51.100.0/24, Local: 198.51.100.1, Broadcast:

198.51.100.255,

Generation: 38

## DLCI 100

Flags: Down, DCE-Unconfigured

Total down time: 00:00:19 sec, Last down: 00:00:19 ago

## Traffic statistics:

```

Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

```

## DLCI statistics:

Active DLCI :0 Inactive DLCI :1

## show interfaces demux0 (Demux Interfaces)

<b>Syntax</b>	<pre>show interfaces demux0.logical-interface-number &lt;brief   detail   extensive   terse&gt; &lt;descriptions&gt; &lt;media&gt; &lt;snmp-index snmp-index&gt; &lt;statistics&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 9.0.
<b>Description</b>	(MX Series and M Series routers only) Display status information about the specified demux interface.
<b>Options</b>	<p><b>none</b>—Display standard information about the specified demux interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>descriptions</b>—(Optional) Display interface description strings.</p> <p><b>media</b>—(Optional) Display media-specific information about network interfaces.</p> <p><b>snmp-index snmp-index</b>—(Optional) Display information for the specified SNMP index of the interface.</p> <p><b>statistics</b>—(Optional) Display static interface statistics.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Verifying and Managing Agent Circuit Identifier-Based Dynamic VLAN Configuration</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show interfaces demux0 (Demux) on page 1555</a></p> <p><a href="#">show interfaces demux0 (PPPoE over Aggregated Ethernet) on page 1556</a></p> <p><a href="#">show interfaces demux0 extensive (Targeted Distribution for Aggregated Ethernet Links) on page 1557</a></p> <p><a href="#">show interfaces demux0 (ACI Interface Set Configured) on page 1557</a></p>
<b>Output Fields</b>	Table 77 on page 1549 lists the output fields for the <b>show interfaces demux0 (Demux Interfaces)</b> command. Output fields are listed in the approximate order in which they appear.

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields

Field Name	Field Description	Level of Output
Physical Interface		

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
Physical interface	Name of the physical interface.	brief detail extensive none
Interface index	Index number of the physical interface, which reflects its initialization sequence.	brief detail extensive none
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	brief detail extensive none
Physical link	Status of the physical link (Up or Down).	detail extensive none
Admin	Administrative state of the interface (Up or Down).	terse
Interface index	Index number of the physical interface, which reflects its initialization sequence.	detail extensive none
Link	Status of the physical link (Up or Down).	terse
Targeting summary	Status of aggregated Ethernet links that are configured with targeted distribution (primary or backup)	extensive
Bandwidth	Bandwidth allocated to the aggregated Ethernet links that are configured with targeted distribution.	extensive
Proto	Protocol family configured on the interface.	terse
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface. <b>Software-Pseudo</b> indicates a standard software interface with no associated hardware device.	brief detail extensive none
Link-level type	Encapsulation being used on the physical interface.	brief detail extensive
MTU	Maximum transmission unit size on the physical interface.	brief detail extensive
Clocking	Reference clock source: <b>Internal</b> (1) or <b>External</b> (2).	brief detail extensive
Speed	Speed at which the interface is running.	brief detail extensive
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	brief detail extensive none
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	brief detail extensive none
Link type	Data transmission type.	detail extensive none

Table 77: *show interfaces demux0 (Demux Interfaces) Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Link flags</b>	Information about the link. Possible values are described in the “Link Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive none</b>
<b>Physical info</b>	Information about the physical interface.	<b>detail extensive</b>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.	<b>detail extensive</b>
<b>Current address</b>	Configured MAC address.	<b>detail extensive</b>
<b>Hardware address</b>	Hardware MAC address.	<b>detail extensive</b>
<b>Alternate link address</b>	Backup address of the link.	<b>detail extensive</b>
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .	<b>detail extensive none</b>
<b>Statistics last cleared</b>	Time when the statistics for the interface were last set to zero.	<b>detail extensive</b>
<b>Traffic statistics</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> <li>• <b>IPv6 transit statistics</b>—Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</li> </ul> <p><b>NOTE:</b> These fields include dropped traffic and exception traffic, as those fields are not separately defined.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Input errors</b>	Input errors on the interface whose definitions are as follows: <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant packet threshold.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Input Rate</b>	Input rate in bits per second (bps) and packets per second (pps).	<b>none</b>
<b>Output errors</b>	Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious: <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC or PIM is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeded the MTU of the interface.</li> <li>• <b>Resource errors</b>—Sum of transmit drops.</li> </ul>	<b>extensive</b>
<b>Output Rate</b>	Output rate in bps and pps.	<b>none</b>
<b>Logical Interface</b>		
<b>Logical interface</b>	Name of the logical interface.	<b>brief detail extensive none</b>
<b>Index</b>	Index number of the logical interface, which reflects its initialization sequence.	<b>detail extensive none</b>
<b>SNMP ifIndex</b>	SNMP interface index number for the logical interface.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail</b>
<b>Flags</b>	Information about the logical interface. Possible values are described in the "Logical Interface Flags" section under <a href="#">"Common Output Fields Description" on page 1114</a> .	<b>brief detail extensive none</b>

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Encapsulation</b>	Encapsulation on the logical interface.	<b>brief extensive none</b>
<b>ACI VLAN: Dynamic Profile</b>	Name of the dynamic profile that defines the agent circuit identifier (ACI) interface set. If configured, the ACI interface set enables the underlying demux interface to create dynamic VLAN subscriber interfaces based on ACI information.	<b>brief detail extensive none</b>
<b>Demux</b>	Specific IP demultiplexing (demux) values: <ul style="list-style-type: none"> <li>• <b>Underlying interface</b>—The underlying interface that the demux interface uses.</li> <li>• <b>Index</b>—Index number of the logical interface.</li> <li>• <b>Family</b>—Protocol family configured on the logical interface.</li> <li>• <b>Source prefixes, total</b>—Total number of source prefixes for the underlying interface.</li> <li>• <b>Destination prefixes, total</b>—Total number of destination prefixes for the underlying interface.</li> <li>• <b>Prefix</b>—inet family prefix.</li> </ul>	<b>detail extensive none</b>
<b>protocol-family</b>	Protocol family configured on the logical interface.	<b>brief</b>
<b>Traffic statistics</b>	Number and rate of bytes and packets received and transmitted on the specified interface set. <ul style="list-style-type: none"> <li>• <b>Input bytes, Output bytes</b>—Number of bytes received and transmitted on the interface set.</li> <li>• <b>Input packets, Output packets</b>—Number of packets received and transmitted on the interface set.</li> <li>• <b>IPv6 transit statistics</b>—Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</li> </ul> <p><b>NOTE:</b> The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Local statistics</b>	Number of transit bytes and packets received and transmitted on the local interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Transit statistics</b>	<p>Number and rate of bytes and packets transiting the switch.</p> <p><b>NOTE:</b> The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>IPv6 Transit statistics</b>	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p> <p><b>NOTE:</b> The packet and byte counts in these fields include traffic that is dropped and does not leave the router.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
<b>Input packets</b>	Number of packets received on the interface.	none
<b>Output packets</b>	Number of packets transmitted on the interface.	none
<b>Protocol</b>	Protocol family. Possible values are described in the “Protocol Field” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive</b> none
<b>MTU</b>	Maximum transmission unit size on the logical interface.	<b>detail extensive</b> none
<b>Maximum labels</b>	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	<b>detail extensive</b> none
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Route table</b>	Route table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	<b>detail extensive</b>
<b>Flags</b>	Information about protocol family flags. Possible values are described in the “Family Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive</b> none
<b>Mac-Validate Failures</b>	Number of MAC address validation failures for packets and bytes. This field is displayed when MAC address validation is enabled for the logical interface.	<b>detail extensive</b> none
<b>Addresses, Flags</b>	Information about the address flags. Possible values are described in the “Addresses Flags” section under “ <a href="#">Common Output Fields Description</a> ” on page 1114.	<b>detail extensive</b> none
<b>Destination</b>	IP address of the remote side of the connection.	<b>detail extensive</b> statistics none

Table 77: show interfaces demux0 (Demux Interfaces) Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Local</b>	IP address of the logical interface.	<b>detail extensive terse</b> none
<b>Remote</b>	IP address of the remote interface.	<b>terse</b>
<b>Broadcast</b>	Broadcast address of the logical interlace.	<b>detail extensive none</b>
<b>Generation</b>	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
<b>Link</b>	Name of the physical interfaces for member links in an aggregated Ethernet bundle for a PPPoE over aggregated Ethernet configuration. PPPoE traffic goes out on these interfaces.	<b>detail extensive none</b>
<b>Dynamic-profile</b>	Name of the PPPoE dynamic profile assigned to the underlying interface.	<b>detail extensive none</b>
<b>Service Name Table</b>	Name of the PPPoE service name table assigned to the PPPoE underlying interface.	<b>detail extensive none</b>
<b>Max Sessions</b>	Maximum number of dynamic PPPoE logical interfaces that the router can activate on the underlying interface.	<b>detail extensive none</b>
<b>Duplicate Protection</b>	State of duplicate protection: <b>On</b> or <b>Off</b> . Duplicate protection prevents the activation of another dynamic PPPoE logical interface on the same underlying interface when a dynamic PPPoE logical interface for a client with the same MAC address is already active on that interface.	<b>detail extensive none</b>
<b>Direct Connect</b>	State of the configuration to ignore DSL Forum VSAs: <b>On</b> or <b>Off</b> . When configured, the router ignores any of these VSAs received from a directly connected CPE device on the interface.	<b>detail extensive none</b>
<b>AC Name</b>	Name of the access concentrator.	<b>detail extensive none</b>

## Sample Output

### show interfaces demux0 (Demux)

```

user@host> show interfaces demux0
Physical interface: demux0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 79, Generation: 129
  Type: Software-Pseudo, Link-level type: Unspecified, MTU: 9192, Clocking: 1,
  Speed: Unspecified
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type      : Full-Duplex
  Link flags     : None
  Physical info  : Unspecified
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped  : Never
  Statistics last cleared: Never

```

```

Traffic statistics:
Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:                0                0 pps
Output packets:              0                0 pps
IPv6 transit statistics:
Input bytes :                0
Output bytes :                0
Input packets:                0
Output packets:              0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
Policed discards: 0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0,
Resource errors: 0

Logical interface demux0.0 (Index 87) (SNMP ifIndex 84) (Generation 312)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Demux:
Underlying interface: ge-2/0/1.0 (Index 74)
Family Inet Source prefixes, total 1
Prefix: 203.0.113/24
Traffic statistics:
Input bytes :                0
Output bytes :               1554
Input packets:                0
Output packets:              37
IPv6 transit statistics:
Input bytes :                0
Output bytes :                0
Input packets:                0
Output packets:              0
Local statistics:
Input bytes :                0
Output bytes :               1554
Input packets:                0
Output packets:              37
Transit statistics:
Input bytes :                0                0 bps
Output bytes :                0                0 bps
Input packets:                0                0 pps
Output packets:              0                0 pps
IPv6 transit statistics:
Input bytes :                0
Output bytes :                0
Input packets:                0
Output packets:              0
Protocol inet, MTU: 1500, Generation: 395, Route table: 0
Flags: Is-Primary, Mac-Validate-Strict
Mac-Validate Failures: Packets: 0, Bytes: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 203.0.113/24, Local: 203.0.113.13, Broadcast: 203.0.113.255,

Generation: 434

```

### show interfaces demux0 (PPPoE over Aggregated Ethernet)

```

user@host> show interfaces demux0.100
Logical interface demux0.100 (Index 76) (SNMP ifIndex 61160)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ]

```

```

Encapsulation: ENET2
Demux:
  Underlying interface: ae0 (Index 199)
Link:
  ge-1/0/0
  ge-1/1/0
Input packets : 0
Output packets: 0
Protocol pppoe
  Dynamic Profile: pppoe-profile,
  Service Name Table: service-table1,
  Max Sessions: 100, Duplicate Protection: On,
  Direct Connect: Off,
  AC Name: pppoe-server-1

```

### show interfaces demux0 extensive (Targeted Distribution for Aggregated Ethernet Links)

```
user@host> show interfaces demux0.1073741824 extensive
```

```

Logical interface demux0.1073741824 (Index 75) (SNMP ifIndex 558) (Generation 346)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
Demux:
  Underlying interface: ae0 (Index 201)
Link:
  ge-1/0/0
  ge-1/1/0
  ge-2/0/7
  ge-2/0/8
Targeting summary:
  ge-1/1/0, primary, Physical link is Up
  ge-2/0/8, backup, Physical link is Up
Bandwidth: 1000mbps

```

### show interfaces demux0 (ACI Interface Set Configured)

```

user@host> show interfaces demux0.1073741827
Logical interface demux0.1073741827 (Index 346) (SNMP ifIndex 527)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1802 0x8100.302 ] Encapsulation: ENET2
Demux: Source Family Inet
ACI VLAN:
  Dynamic Profile: aci-vlan-set-profile
Demux:
  Underlying interface: ge-1/0/0 (Index 138)
Input packets : 18
Output packets: 16
Protocol inet, MTU: 1500
  Flags: Sendbcst-pkt-to-re, Unnumbered
  Donor interface: lo0.0 (Index 322)
  Preferred source address: 203.0.113.202
  Addresses, Flags: Primary Is-Default Is-Primary
    Local: 203.0.113.119
Protocol pppoe
  Dynamic Profile: aci-vlan-pppoe-profile,
  Service Name Table: None,
  Max Sessions: 32000, Max Sessions VSA Ignore: Off,
  Duplicate Protection: On, Short Cycle Protection: Off,
  Direct Connect: Off,
  AC Name: nbc

```



## show interfaces extensive

---

**Syntax**    show interfaces extensive

**Release Information**    Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.  
Command introduced in Junos OS Release 17.2 for PT1000 and PTX10008 Packet Transport Routers.

**Description**    Display extensive information about all interfaces configured on the router.



---

**NOTE:**

- At some times, the cumulative byte counters displayed with the `show interfaces extensive` command on the 10-Gigabit Ethernet MPC with SFP+ is not always increasing and cumulative and does not give the correct results. There is a time lag in collecting these statistics, during which the display might decrease or go from a nonzero number to zero. Eventually, the counter will display the correct result.
  - When the `show interfaces extensive` command is executed on a router with an MPC or a T4000 Type 5 FPC, the Input packet rejects counter of the Filter statistics field also displays statistics related to the following packet errors:
    - Invalid VLAN range
    - Tagged packet received on an untagged interface
  - When the `show interfaces extensive` command is executed on an interface that is configured on a T4000 Type 5 FPC, the IPv6 transit statistics field displays:
    - Total statistics (sum of transit and local statistics) at the physical interface level
    - Transit statistics at the logical interface level
  - When the `show interfaces extensive` command is executed on an aggregate interface in a T1600 Core Router, the IPv6 Input bytes is displayed for an aggregate interface. However, the IPv6 Input bytes is always zero on a member link of an aggregated bundle even when there is IPv6 transit traffic on the member link. This is because the logical interface index of the aggregate logical interface is updated but not the logical interface of the member links in the channel lookup table.
  - The Output packets field under the Traffic statistics section in the output of the `show interfaces extensive` command includes both IPv4 and IPv6 packets. For example, in a scenario in which both IPv4 and IPv6 packets are being mirrored on the same interface and when you deactivate an IPv4 port-mirroring instance on the chassis, the output of the `show interfaces extensive` command shows a value in the Output packets field of the Traffic statistics section, which is the value of IPv6 packets that are mirrored and not of the IPv4 packets. This behavior is expected.
  - For IQ2 PIC interfaces, the output of the `show interfaces extensive` command displays byte statistics that includes Layer 2 headers.
  - If there are active OTN defects when an ISSU is performed, and the defect persists after the upgrade completes, the OTN alarm count is incremented by 1. For example, if an OTN alarm is active with a count of 1 and the defect remains after ISSU, the alarm count is incremented to 2. This behavior is expected.
-

<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces extensive (Circuit Emulation) on page 1561</a> <a href="#">show interfaces extensive (Fast Ethernet) on page 1562</a> <a href="#">show interfaces extensive (Gigabit Ethernet) on page 1564</a> <a href="#">show interfaces extensive (10-Gigabit Ethernet) on page 1564</a> <a href="#">show interfaces extensive (IQ2 and IQ2E) on page 1566</a> <a href="#">show interfaces extensive (100-Gigabit Ethernet Type 4 PIC with CFP) on page 1569</a> <a href="#">show interfaces extensive (PTX5000 Packet Transport Router) on page 1571</a> <a href="#">sshow interfaces extensive (PTX Routers) on page 1574</a> <a href="#">show interfaces extensive (PTX10008 Routers) on page 1574</a> <a href="#">show interfaces extensive (PTX1000 Routers) on page 1579</a> <a href="#">show interfaces extensive (MX Series Routers) on page 1580</a> <a href="#">show interfaces extensive (MX480 Router with MPC5E and 10-Gigabit Ethernet OTN Interface) on page 1583</a> <a href="#">show interfaces extensive (MX480 Router with MPC5E and 100-Gigabit Ethernet OTN Interface) on page 1584</a> <a href="#">show interfaces extensive ((MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC) on page 1587</a> <a href="#">show interfaces extensive (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC) on page 1590</a> <a href="#">show interfaces extensive (MX2020 Router with MPC6E and OTN MIC) on page 1592</a> <a href="#">show interfaces extensive (MX2010 Router with MPC6E and 100-Gigabit Ethernet OTN Interface) on page 1595</a> <a href="#">show interfaces extensive (MX2010 Router with MPC6E and 10-Gigabit Ethernet Interface) on page 1597</a> <a href="#">show interfaces extensive (T4000 Routers with Type 5 FPCs) on page 1599</a> <a href="#">show interfaces extensive (Aggregated Ethernet) on page 1600</a>
<b>Output Fields</b>	For more information, see the output fields table for the particular interface type in which you are interested. For information about destination class and source class statistics, see the “Destination Class Field” section and the “Source Class Field” section under <a href="#">“Common Output Fields Description” on page 1114</a> . For sample output for specific interfaces, see the other topics in this collection.

## Sample Output

### [show interfaces extensive \(Circuit Emulation\)](#)

If a Circuit Emulation (CE) PIC is configured for SAToP pseudowire, then pseudowire statistics are displayed in the CE information section of the **show interface extensive** output. If SAToP pseudowire is not configured on the CE PIC, then all CE information counters display 0 (zero).

```
user@host> show interface t1-0/0/0 extensive
Physical interface :t1-0/0/0, Enabled, Physical Link : Up
Interface index:61441
```

```

Speed : 1.54 Mbps, Loopback: Disabled
Operational state : Enabled, Encapsulation : Trans
Encoding : b8zs, Framing : unframe, Build-out : 0-30
Inversion : enable, Clock source : master
Description :
Traffic statistics:
T1 media:      Seconds
ES             1643
SES           1643

CE Info      Packets      Bytes
CE Rx       : 2395529     306627712
CE Tx       : 2396259     306721152
CE Rx Drop:   0           0
CE Tx Drop:   0           0

CE Overrun Events: 0
CE Underrun Events: 0

```

## Sample Output

### show interfaces extensive (Fast Ethernet)

```

user@host> show interfaces fe-0/2/1 extensive
Physical interface: fe-0/2/0, Enabled, Physical link is Up
  Interface index: 129, SNMP ifIndex: 23, Generation: 130
  Link-level type: Ethernet, MTU: 1514, Speed: 100mbps, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Enabled
  Device flags      : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues       : 4 supported, 4 maximum usable queues
  Hold-times       : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped    : 2006-04-16 23:00:41 PDT (02:08:05 ago)
  Statistics last cleared: 2006-04-16 21:42:00 PDT (03:26:46 ago)
  Traffic statistics:
    Input bytes :          17539          152 bps
    Output bytes :          92968          224 bps
    Input packets:           348           0 pps
    Output packets:         1349           0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    FIFO errors: 0, Resource errors: 0
  Output errors:
    Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

    FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort           66              66              0
    1 expedited-fo           0              0              0
    2 assured-forw           0              0              0
    3 network-cont        1283           1283              0

  Active alarms : None
  Active defects : None

```

```

MAC statistics:
  Total octets          24721      Transmit 105982
  Total packets        348         1349
  Unicast packets      347         430
  Broadcast packets    1          37
  Multicast packets    0          882
  CRC/Align errors     0           0
  FIFO errors          0           0
  MAC control frames   0           0
  MAC pause frames     0           0
  Oversized frames     0
  Jabber frames        0
  Fragment frames      0
  VLAN tagged frames   0
  Code violations      0

Filter statistics:
  Input packet count    348
  Input packet rejects  0
  Input DA rejects     0
  Input SA rejects     0
  Output packet count   1349
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 3, CAM source filters: 0

Autonegotiation information:
  Negotiation status: Complete
  Link partner:
    Link mode: Full-duplex, Flow control: None, Remote fault: OK

Packet Forwarding Engine configuration:
  Destination slot: 0

CoS information:
  CoS transmit queue    Bandwidth    Buffer    Priority    Limit

                                %      bps    %    usec
  0 best-effort          95      95000000 95    0          low    none
  3 network-control      5       5000000 5     0          low    none

Logical interface fe-0/2/0.0 (Index 66) (SNMP ifIndex 46) (Generation 133)
Flags: SNMP-Traps Encapsulation: ENET2
Protocol inet, MTU: 1500, Generation: 142, Route table: 0
Flags: DCU, SCU-out

                                Packets          Bytes
                                (packet-per-second) (bits-per-second)
Destination class
  silv1_new              0          0
  (                      0) (          0)
  silv2_new              0          0
  (                      0) (          0)
  silv_misc              0          0
  (                      0) (          0)
  silver0                0          0
  (                      0) (          0)
  silver2                0          0
  (                      0) (          0)
  silver3                0          0
  (                      0) (          0)
  silver4                0          0
  (                      0) (          0)
  silver5                0          0
  (                      0) (          0)
  silver6                0          0
  (                      0) (          0)
  silver7                0          0

```

```

                                (          0) (          0)
                                silver9      0          0
                                (          0) (          0)
                                Packets      Bytes
Source class      (packet-per-second) (bits-per-second)
                                gold1          0          0
                                (          0) (          0)
                                gold2      16600      1062400
                                (          0) (          0)
                                gold3          0          0
                                (          0) (          0)
Addresses, Flags: Is-Preferred Is-Primary
Destination: 192.168.220.24/30, Local: 192.168.220.26, Broadcast:
192.168.220.27, Generation: 150

```

### show interfaces extensive (Gigabit Ethernet)

```

user@host> show interfaces ge-5/0/0.0 extensive

Logical interface ge-5/0/0.0 (Index 71) (SNMP ifIndex 1930) (Generation 139)
Flags: SNMP-Traps 0x4000 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          0
  Output bytes :         42
  Input packets:          0
  Output packets:         1
Local statistics:
  Input bytes :          0
  Output bytes :         42
  Input packets:          0
  Output packets:         1
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:          0          0 pps
  Output packets:          0          0 pps
Output Filters: f-any
Protocol inet, MTU: 1500, Generation: 155, Route table: 0
  Output Filters: f-inet,
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 192.168.220.24/30, Local: 192.168.220.26, Broadcast:
192.168.220.27,
    Generation: 170
  Protocol multiservice, MTU: Unlimited, Generation: 156, Route table: 0
  Flags: Is-Primary
  Policer: Input: __default_arp_policer__

```

### show interfaces extensive (10-Gigabit Ethernet)

```

user@host> show interfaces xe-2/1/0 extensive

Physical interface: xe-2/1/0, Enabled, Physical link is Up
  Interface index: 258, SNMP ifIndex: 762, Generation: 2046
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None, Source filtering: Disabled,
  Flow control: Enabled
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags : None
  CoS queues : 8 supported, 8 maximum usable queues

```

```

Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped   : 2011-12-17 00:19:02 PST (07:36:37 ago)
Statistics last cleared: 2011-12-17 07:55:24 PST (00:00:15 ago)
Traffic statistics:
  Input bytes :          110000          0 bps
  Output bytes :              0          0 bps
  Input packets:           1000          0 pps
  Output packets:            0          0 pps
IPv6 transit statistics:
  Input bytes :          110000
  Output bytes :              0
  Input packets:           1000
  Output packets:            0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0,
  MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets    Transmitted packets    Dropped packets

  0 best-effort              0              0              0
  1 expedited-fo              0              0              0
  2 assured-forw              0              0              0
  3 network-cont              0              0              0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms : None
Active defects : None
PCS statistics      Seconds
  Bit errors        0
  Errored blocks    0
MAC statistics:      Receive      Transmit
  Total octets      128000          0
  Total packets     1000            0
  Unicast packets   1000            0
  Broadcast packets 0                0
  Multicast packets 0                0
  CRC/Align errors  0                0
  FIFO errors       0                0
  MAC control frames 0                0
  MAC pause frames  0                0
  Oversized frames  0
  Jabber frames     0
  Fragment frames   0
  VLAN tagged frames 0
  Code violations    0
Filter statistics:
  Input packet count      1000
  Input packet rejects    0

```

```

Input DA rejects          0
Input SA rejects          0
Output packet count              0
Output packet pad count         0
Output packet error count       0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 2
CoS information:
  Direction : Output
  CoS transmit queue          Bandwidth          Buffer Priority
Limit
      0 best-effort          95      9500000000    95          0      low
none
      3 network-control      5      500000000     5          0      low
none
Interface transmit statistics: Disabled

Logical interface xe-2/1/0.0 (Index 83) (SNMP ifIndex 1677) (Generation 10082)

Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
Traffic statistics:
  Input bytes :          110000
  Output bytes :           0
  Input packets:         1000
  Output packets:         0
IPv6 transit statistics:
  Input bytes :          55000
  Output bytes :           0
  Input packets:          500
  Output packets:         0
Local statistics:
  Input bytes :          55000
  Output bytes :           0
  Input packets:          500
  Output packets:         0
Transit statistics:
  Input bytes :          55000          0 bps
  Output bytes :           0          0 bps
  Input packets:          500          0 pps
  Output packets:         0          0 pps
IPv6 transit statistics:
  Input bytes :          55000
  Output bytes :           0
  Input packets:          500
  Output packets:         0
Protocol inet6, MTU: 1500, Generation: 23739, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 2001:0db8:0a0b:12f0:0000:0000:0000/112, Local:
2001:0db8:0a0b:12f0:0000:0000:0000:0001
    Generation: 506
    Addresses, Flags: Is-Preferred
      Destination: 0db8::/64, Local: 0db8::21d:b5ff:fef8:6deb
Protocol multiservice, MTU: Unlimited, Generation: 508
Generation: 23740, Route table: 0
  Policer: Input: __default_arp_policer__

```

### show interfaces extensive (IQ2 and IQ2E)

```
user@host> show interfaces ge-3/2/2 extensive
```

```

Physical interface: ge-3/2/2, Enabled, Physical link is Up
Interface index: 156, SNMP ifIndex: 548, Generation: 159
Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
CoS queues : 8 supported, 8 maximum usable queues
Schedulers : 128
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped : 2010-03-17 04:03:11 PDT (00:45:30 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 1716096 0 bps
Output bytes : 1716448 0 bps
Input packets: 13407 0 pps
Output packets: 13411 0 pps
IPv6 total statistics:
Input bytes : 1716096
Output bytes : 1716096
Input packets: 13407
Output packets: 13407
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes : 1716096 0 bps
Input packets: 13407 0 pps
Drop bytes : 0 0 bps
Drop packets: 0 0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 1, L2 mismatch timeouts: 0, FIFO errors:
0,
Resource errors: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets:
0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped
packets
0 best-effort 13407 13407
0
0 1 expedited-fo 0 0
0
0 2 assured-forw 0 0
0
0 3 network-cont 0 0
0
Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped
packets
0 best-effort 13407 13407
0
0 1 expedited-fo 0 0
0
0 2 assured-forw 0 0
0
0 3 network-cont 4 4
0
Active alarms : None
Active defects : None
MAC statistics: Receive Transmit

```

```

Total octets          1716096          1716448
Total packets         13407           13411
Unicast packets       13407           13407
Broadcast packets     0              0
Multicast packets     0              4
CRC/Align errors      0              0
FIFO errors           0              0
MAC control frames    0              0
MAC pause frames      0              0
Oversized frames      0
Jabber frames         0
Fragment frames       0
VLAN tagged frames    0
Code violations        0
Filter statistics:
  Input packet count   13407
  Input packet rejects 0
  Input DA rejects     0
  Input SA rejects     0
  Output packet count  13411
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
  Negotiation status: Complete
  Link partner:
    Link mode: Full-duplex, Flow control: None, Remote fault: OK
  Local resolution:
    Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
  Destination slot: 3
CoS information:
  Direction : Output
  CoS transmit queue
Limit
      %      bps      %      usec
0 best-effort  95  950000000  95      0  low
none
3 network-control  5  50000000  5      0  low
none
  Direction : Input
  CoS transmit queue
Limit
      %      bps      %      usec
0 best-effort  95  950000000  95      0  low
none
3 network-control  5  50000000  5      0  low
none

Logical interface ge-3/2/2.0 (Index 83) (SNMP ifIndex 6080) (Generation
148)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.100 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes : 0
    Output bytes : 336
    Input packets: 0
    Output packets: 4
  IPv6 total statistics:
    Input bytes : 1716096
    Output bytes : 1716096
    Input packets: 13407

```

```

        Output packets:                13407
Local statistics:
  Input bytes  :                      0
  Output bytes :                     336
  Input packets:                      0
  Output packets:                     4
Transit statistics:
  Input bytes  :                      0          0 bps
  Output bytes :                      0          0 bps
  Input packets:                      0          0 pps
  Output packets:                     0          0 pps
IPv6 total statistics:
  Input bytes  :          1716096
  Output bytes :          1716096
  Input packets:          13407
  Output packets:          13407
Protocol inet6, MTU: 1500, Generation: 159, Route table: 0
  Flags: Is-Primary
  Addresses, Flags: Is-Default Is-Primary
    Destination: Unspecified, Local: 2000::2
  Generation: 146
  Addresses, Flags: Is-Preferred
    Destination: fe80::/64, Local: fe80::214:f600:6412:86fa
Protocol multiservice, MTU: Unlimited, Generation: 148
  Generation: 160, Route table: 0
  Policer: Input: __default_arp_policer__

Logical interface ge-3/2/2.32767 (Index 84) (SNMP ifIndex 6081) (Generation
149)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2
Traffic statistics:
  Input bytes  :                      0
  Output bytes :                      0
  Input packets:                      0
  Output packets:                     0
Local statistics:
  Input bytes  :                      0
  Output bytes :                      0
  Input packets:                      0
  Output packets:                     0
Transit statistics:
  Input bytes  :                      0          0 bps
  Output bytes :                      0          0 bps
  Input packets:                      0          0 pps
  Output packets:                     0          0 pps
Protocol multiservice, MTU: Unlimited, Generation: 161, Route table: 0
  Flags: None
  Policer: Input: __default_arp_policer__

```

### show interfaces extensive (100-Gigabit Ethernet Type 4 PIC with CFP)

```

user@host> show interfaces et-0/0/0:0 extensive
Physical interface: et-0/0/0:0, Enabled, Physical link is Down
  Interface index: 156, SNMP ifIndex: 516, Generation: 163
  Link-level type: Ethernet, MTU: 9192, Speed: 50000mbps, BPDU Error: None,
  MAC-REWRITE Error: None,
  Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running Down
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues

```

```

Hold-times      : Up 0 ms, Down 0 ms
Damping         : half-life: 5 sec, max-suppress: 20 sec, reuse 1000, suppress:
2000, state: enabled
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped   : 2010-01-07 16:36:49 PST (18:02:35 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   : 0 0 bps
Output bytes  : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 transit statistics:
Input bytes   : 0
Output bytes  : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0,
L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors:
0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0,
HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 8 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0 DEFAULT, NC-      0 0 0
1 REALTIME          0 0 0
2 PRIVATE, NC-      0 0 0
3 CONTROL           1253 1253 0
4 BC-H, CLASS_      0 0 0
5 BC-M, CLASS_      0 0 0
6 IA, CLASS_V_      0 0 0
7 CLASS_S_OUTP      0 0 0

Queue      Mapped Forwarding Class
0          DEFAULT, NC-Q0
1          REALTIME
2          PRIVATE, NC-Q1
3          CONTROL
4          BC-H, CLASS-Q4
5          BC-M, CLASS-Q5
6          IA, CLASS_V_OUTPUT
7          CLASS_S_OUTPUT
Active alarms : None
Active defects : None
MAC statistics:
Total octets      Receive      Transmit
Total packets     0 0
Unicast packets   0 0
Broadcast packets 0 0
Multicast packets 0 0

```

```

CRC/Align errors          0          0
FIFO errors                0          0
MAC control frames        0          0
MAC pause frames          0          0
Oversized frames          0
Jabber frames             0
Fragment frames           0
VLAN tagged frames        0
Code violations            0
Packet Forwarding Engine configuration:
  Destination slot: 0
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority Limit

                                %      bps      %      usec
0 best-effort              95    47500000000    95      0    low none
3 network-control          5     25000000000     5      0    low none

Logical interface et-0/0/0:0.0 (Index 68) (SNMP ifIndex 546) (Generation 161)
Flags: Deviet-Down SNMP-Traps Encapsulation: ENET2
Traffic statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Local statistics:
  Input bytes :          0
  Output bytes :          0
  Input packets:          0
  Output packets:          0
Transit statistics:
  Input bytes :          0          0 bps
  Output bytes :          0          0 bps
  Input packets:          0          0 pps
  Output packets:          0          0 pps
Protocol inet, MTU: 9178, Generation: 220, Route table: 0
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 192.168.220.24/30, Local: 192.168.220.26, Broadcast:
192.168.220.27, Generation: 192
  Protocol mpls, MTU: 9166, Maximum labels: 3, Generation: 221, Route table: 0

  Protocol multiservice, MTU: Unlimited, Generation: 222, Route table: 0
    Policer: Input: __default_arp_policer

```

### show interfaces extensive (PTX5000 Packet Transport Router)

```

user@host> show interfaces et-0/0/6 extensive
Physical interface: et-0/0/6, Enabled, Physical link is Up
  Interface index: 347, SNMP ifIndex: 531, Generation: 350
  Link-level type: Ethernet, MTU: 1514, Speed: 40Gbps, BPDU Error: None, Loop
Detect PDU Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
control: Enabled
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags : None
  CoS queues : 8 supported, 8 maximum usable queues
  Hold-times : Up 0 ms, Down 0 ms
  Damping : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,

```

```

state: unsuppressed
Current address: 30:b6:4f:02:29:06, Hardware address: 30:b6:4f:02:29:06
Last flapped : 2017-02-15 21:40:06 PST (22:55:13 ago)
Statistics last cleared: 2017-02-16 20:33:02 PST (00:02:17 ago)
Traffic statistics:
  Input bytes : 1760000 0 bps
  Output bytes : 1540000 0 bps
  Input packets: 16000 0 pps
  Output packets: 14000 0 pps
IPv6 transit statistics:
  Input bytes : 880000
  Output bytes : 770000
  Input packets: 8000
  Output packets: 7000
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0                    7000          7000          0
  1                     0           0          0
  2                     0           0          0
  3                    7000          7000          0

Queue number:      Mapped forwarding classes
  0                best-effort
  1                expedited-forwarding
  2                assured-forwarding
  3                network-control
Active alarms : None
Active defects : None
PCS statistics      Seconds
  Bit errors        0
  Errored blocks    0
MAC statistics:      Receive      Transmit
  Total octets      2048000      1792000
  Total packets     16000        14000
  Unicast packets   16000        14000
  Broadcast packets 0           0
  Multicast packets 0           0
  CRC/Align errors  0           0
  FIFO errors       0           0
  MAC control frames 0           0
  MAC pause frames  0           0
  Oversized frames  0
  Jabber frames     0
  Fragment frames   0
  VLAN tagged frames 0
  Code violations    0
Filter statistics:
  Input packet count 0
  Input packet rejects 0
  Input DA rejects 0

```

```

Input SA rejects                                0
Output packet count                             0
Output packet pad count                         0
Output packet error count                       0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue          Bandwidth          Buffer Priority
Limit
  0 best-effort               95      38000000000    95          0      low
none
  3 network-control           5      20000000000    5          0      low
none
Preclassifier statistics:
  Traffic Class      Received Packets  Transmitted Packets  Dropped
Packets
  best-effort        0                      0
0
  best-effort        0                      0
0
  best-effort        0                      0
0
  best-effort        0                      0
0
  best-effort        0                      0
0
  best-effort        0                      0
0
  best-effort        0                      0
0
  best-effort        0                      0
0
Link Degradate :
  Link Monitoring      : Disable
Interface transmit statistics: Disabled

Logical interface et-0/0/6.0 (Index 93) (SNMP ifIndex 841) (Generation 158)
Flags: Up SNMP-Traps 0x4004000 Encapsulation: ENET2
Traffic statistics:
  Input bytes :      1760000
  Output bytes :     1540000
  Input packets:      16000
  Output packets:     14000
IPv6 transit statistics:
  Input bytes :      880000
  Output bytes :     770000
  Input packets:      8000
  Output packets:     7000
Local statistics:
  Input bytes :      0
  Output bytes :      0
  Input packets:      0
  Output packets:      0
Transit statistics:
  Input bytes :      1760000          0 bps
  Output bytes :     1540000          0 bps
  Input packets:      16000          0 pps
  Output packets:     14000          0 pps

```

```

IPv6 transit statistics:
  Input bytes :      880000
  Output bytes :     770000
  Input packets:      8000
  Output packets:     7000
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 206, Route table: 0
  Flags: Sendbroadcast-pkt-to-re
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 11.0.0/24, Local: 11.0.0.2, Broadcast: 11.0.0.255, Generation:
228
Protocol inet6, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 207, Route table: 0
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 1100::/120, Local: 1100::2
Generation: 230
  Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::32b6:4fff:fe02:2906
Protocol multiservice, MTU: Unlimited, Generation: 232
Generation: 208, Route table: 0
  Policer: Input: __default_arp_policer__

```

#### show interfaces extensive (PTX Routers)

```

user@host> show interfaces ae31 extensive
Physical interface: ae31, Enabled, Physical link is Up
  Interface index: 137, SNMP ifIndex: 511, Generation: 140
  Link-level type: Ethernet, MTU: 1518, Speed: 3Gbps, BPDU Error: None, MAC-REWRITE
Error: None, Loopback: Disabled,
  Source filtering: Disabled, Flow control: Disabled
  Pad to minimum frame size: Disabled
  Minimum links needed: 1, Minimum bandwidth needed: 1bps
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000, LAG_Enhanced

```

#### show interfaces extensive (PTX10008 Routers)

```

user@host> show interfaces ae0 extensive
Physical interface: ae0, Enabled, Physical link is Up
  Interface index: 917, SNMP ifIndex: 817, Generation: 4436
  Link-level type: Ethernet, MTU: 1518, Speed: 20Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
control: Disabled, Minimum links needed: 1,
  Minimum bandwidth needed: 1bps
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Current address: 30:b6:4f:e9:7c:05, Hardware address: 30:b6:4f:e9:7c:05
  Last flapped : 2017-04-10 05:20:29 PDT (00:03:52 ago)
  Statistics last cleared: 2017-04-10 05:21:52 PDT (00:02:29 ago)
Traffic statistics:
  Input bytes :      36463816334      0 bps
  Output bytes :      36463816334      0 bps
  Input packets:      24671053      0 pps
  Output packets:      24671053      0 pps
IPv6 transit statistics:

```

```

Input bytes :      18231905950
Output bytes :      18231905950
Input packets:      12335525
Output packets:      12335525
MAC statistics:
Broadcast packets      Receive      Transmit
Multicast packets      0              0
                      0              0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0, Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0                      24671053              24671053              0
1                      0                  0                  0
2                      0                  0                  0
3                      0                  0                  0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control

Logical interface ae0.0 (Index 99) (SNMP ifIndex 832) (Generation 43813)
Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
Input :      4934211      0      7292763858      0
Output:      4934211      0      7292763858      0
Adaptive Statistics:
Adaptive Adjusts:      0
Adaptive Scans :      0
Adaptive Updates:      0
Link:
et-0/0/28:0.0
Input :      4934211      0      7292763858      0
Output:      4934211      0      7292763858      0
et-0/0/28:3.0
Input :      0      0      0      0
Output:      0      0      0      0

Aggregate member links: 2

Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
et-0/0/28:0.0      0      0      0      0
et-0/0/28:3.0      0      0      0      0
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89219, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 21.0.0.0/30, Local: 21.0.0.1, Broadcast: 21.0.0.3, Generation:

```

```

62420
  Protocol inet6, MTU: 1500
  Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 2, Curr new
hold cnt: 0, NH drop cnt: 0
  Generation: 89220, Route table: 0
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 3001::1500:0/126, Local: 3001::1500:1
  Generation: 62422
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::32b6:4f00:2e9:7c05
  Protocol multiservice, MTU: Unlimited, Generation: 62424
  Generation: 89221, Route table: 0
    Policer: Input: __default_arp_policer__

Logical interface ae0.1 (Index 100) (SNMP ifIndex 833) (Generation 43814)
  Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.3 ] Encapsulation: ENET2
  Statistics
    Packets      pps      Bytes      bps
  Bundle:
    Input :      4934211      0  7292763858      0
    Output:      4934211      0  7292763858      0
  Adaptive Statistics:
    Adaptive Adjusts:      0
    Adaptive Scans :      0
    Adaptive Updates:      0
  Link:
    et-0/0/28:0.1
      Input :      0      0      0      0
      Output:      4934211      0  7292763858      0
    et-0/0/28:3.1
      Input :      4934211      0  7292763858      0
      Output:      0      0      0      0
  Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
    et-0/0/28:0.1      0      0      0      0
    et-0/0/28:3.1      0      0      0      0
  Protocol inet, MTU: 1500
  Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
  Generation: 89222, Route table: 0
    Flags: Sendbroadcast-pkt-to-re
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 21.0.0.4/30, Local: 21.0.0.5, Broadcast: 21.0.0.7, Generation:
62426
  Protocol inet6, MTU: 1500
  Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 2, Curr new
hold cnt: 0, NH drop cnt: 0
  Generation: 89223, Route table: 0
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 3001::1500:4/126, Local: 3001::1500:5
  Generation: 62428
    Addresses, Flags: Is-Preferred
      Destination: fe80::/64, Local: fe80::32b6:4f00:3e9:7c05
  Protocol multiservice, MTU: Unlimited, Generation: 62430
  Generation: 89224, Route table: 0
    Policer: Input: __default_arp_policer__

Logical interface ae0.2 (Index 101) (SNMP ifIndex 834) (Generation 43815)
  Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.4 ] Encapsulation: ENET2
  Statistics
    Packets      pps      Bytes      bps
  Bundle:
    Input :      4934211      0  7292763858      0
    Output:      4934211      0  7292763858      0

```

```

Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:     0
Link:
  et-0/0/28:0.2
    Input :      2467106      0      3646382668      0
    Output:      4934211      0      7292763858      0
  et-0/0/28:3.2
    Input :      2467105      0      3646381190      0
    Output:      0          0          0          0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  et-0/0/28:0.2      0          0          0          0
  et-0/0/28:3.2      0          0          0          0
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89225, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 21.0.0.8/30, Local: 21.0.0.9, Broadcast: 21.0.0.11,
Generation: 62432
Protocol inet6, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89226, Route table: 0
Addresses, Flags: Is-Preferred Is-Primary
Destination: 3001::1500:8/126, Local: 3001::1500:9
Generation: 62434
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::32b6:4f00:4e9:7c05
Protocol multiservice, MTU: Unlimited, Generation: 62436
Generation: 89227, Route table: 0
Policer: Input: __default_arp_policer__

Logical interface ae0.3 (Index 102) (SNMP ifIndex 835) (Generation 43816)
Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.5 ] Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
  Input :      4934210      0      7292762380      0
  Output:      4934210      0      7292762380      0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:     0
Link:
  et-0/0/28:0.3
    Input :      4934210      0      7292762380      0
    Output:      0          0          0          0
  et-0/0/28:3.3
    Input :      0          0          0          0
    Output:      4934210      0      7292762380      0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  et-0/0/28:0.3      0          0          0          0
  et-0/0/28:3.3      0          0          0          0
Protocol inet, MTU: 1500
Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new
hold cnt: 0, NH drop cnt: 0
Generation: 89228, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary

```

Destination: 21.0.0.12/30, Local: 21.0.0.13, Broadcast: 21.0.0.15,  
 Generation: 62438  
 Protocol inet6, MTU: 1500  
 Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 2, Curr new  
 hold cnt: 0, NH drop cnt: 0  
 Generation: 89229, Route table: 0  
 Addresses, Flags: Is-Preferred Is-Primary  
 Destination: 3001::1500:c/126, Local: 3001::1500:d  
 Generation: 62440  
 Addresses, Flags: Is-Preferred  
 Destination: fe80::/64, Local: fe80::32b6:4f00:5e9:7c05  
 Protocol multiservice, MTU: Unlimited, Generation: 62442  
 Generation: 89230, Route table: 0  
 Policer: Input: \_\_default\_arp\_policer\_\_

Logical interface ae0.4 (Index 103) (SNMP ifIndex 836) (Generation 43817)

Flags: Up SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.6 ] Encapsulation: ENET2

Statistics	Packets	pps	Bytes	bps
------------	---------	-----	-------	-----

Bundle:

Input :	4934210	0	7292762380	0
Output:	4934210	0	7292762380	0

Adaptive Statistics:

Adaptive Adjusts:	0
Adaptive Scans :	0
Adaptive Updates:	0

Link:

et-0/0/28:0.4

Input :	2467105	0	3646381190	0
Output:	2467105	0	3646381190	0

et-0/0/28:3.4

Input :	2467105	0	3646381190	0
Output:	2467105	0	3646381190	0

Marker Statistics:	Marker Rx	Resp Tx	Unknown Rx	Illegal Rx
--------------------	-----------	---------	------------	------------

et-0/0/28:0.4	0	0	0	0
et-0/0/28:3.4	0	0	0	0

Protocol inet, MTU: 1500

Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 1, Curr new  
 hold cnt: 0, NH drop cnt: 0

Generation: 89231, Route table: 0

Flags: Sendbcast-pkt-to-re

Addresses, Flags: Is-Preferred Is-Primary

Destination: 21.0.0.16/30, Local: 21.0.0.17, Broadcast: 21.0.0.19,

Generation: 62444

Protocol inet6, MTU: 1500

Max nh cache: 100000, New hold nh limit: 100000, Curr nh cnt: 2, Curr new  
 hold cnt: 0, NH drop cnt: 0

Generation: 89232, Route table: 0

Addresses, Flags: Is-Preferred Is-Primary

Destination: 3001::1500:10/126, Local: 3001::1500:11

Generation: 62446

Addresses, Flags: Is-Preferred

Destination: fe80::/64, Local: fe80::32b6:4f00:6e9:7c05

Protocol multiservice, MTU: Unlimited, Generation: 62448

Generation: 89233, Route table: 0

Policer: Input: \_\_default\_arp\_policer\_\_

Logical interface ae0.32767 (Index 104) (SNMP ifIndex 5645) (Generation 43818)

Flags: Up SNMP-Traps 0x4004000 VLAN-Tag [ 0x0000.0 ] Encapsulation: ENET2

Statistics	Packets	pps	Bytes	bps
------------	---------	-----	-------	-----

Bundle:

```

      Input :          0          0          0          0
      Output:          0          0          0          0
Adaptive Statistics:
  Adaptive Adjusts:      0
  Adaptive Scans :      0
  Adaptive Updates:      0
Link:
  et-0/0/28:0.32767
    Input :          0          0          0          0
    Output:          0          0          0          0
  et-0/0/28:3.32767
    Input :          0          0          0          0
    Output:          0          0          0          0
Marker Statistics:  Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
  et-0/0/28:0.32767      0          0          0          0
  et-0/0/28:3.32767      0          0          0          0
Protocol multiservice, MTU: Unlimited, Generation: 89234, Route table: 0
Flags: None
Policer: Input: __default_arp_policer__

```

### show interfaces extensive (PTX1000 Routers)

```

user@host> show interfaces et-0/0/48:1 extensive
Physical interface: et-0/0/48:1, Enabled, Physical link is Up
  Interface index: 306, SNMP ifIndex: 697, Generation: 311
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
  None, Loop Detect PDU Error: None, MAC-REWRITE Error: None, Loopback: None,
Source filtering: Disabled,
  Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 8 maximum usable queues
  Hold-times    : Up 0 ms, Down 0 ms
  Damping       : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
  Current address: ec:13:db:62:4a:f6, Hardware address: ec:13:db:62:4a:f6
  Last flapped   : 2017-05-08 11:07:59 PDT (12:08:13 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes :          0          0 bps
  Output bytes:          0          0 bps
  Input packets:          0          0 pps
  Output packets:          0          0 pps
IPv6 transit statistics:
  Input bytes :          0
  Output bytes:          0
  Input packets:          0
  Output packets:          0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets
                    0                0                0                0

```

```

1              0              0              0
2              0              0              0
3              0              0              0

Queue number:    Mapped forwarding classes
0                best-effort
1                expedited-forwarding
2                assured-forwarding
3                network-control
Active alarms   : None
Active defects  : None
PCS statistics           Seconds
  Bit errors          3
  Errored blocks      3
MAC statistics:         Receive      Transmit
  Total octets         0              0
  Total packets        0              0
  Unicast packets      0              0
  Broadcast packets    0              0
  Multicast packets    0              0
  CRC/Align errors     0              0
  FIFO errors          0              0
  MAC control frames   0              0
  MAC pause frames     0              0
  Oversized frames     0
  Jabber frames        0
  Fragment frames      0
  VLAN tagged frames   0
  Code violations      0
Filter statistics:
  Input packet count    0
  Input packet rejects  0
  Input DA rejects      0
  Input SA rejects      0
  Output packet count   0
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
    0 best-effort          %      bps      %      usec      low
none
    3 network-control      5      500000000    5      0      low
none
Link Degradation :
  Link Monitoring          : Disable
Interface transmit statistics: Disabled

```

### show interfaces extensive (MX Series Routers)

```

user@host> show interfaces xe-0/0/0 extensive
Physical interface: xe-0/0/0, Enabled, Physical link is Up
Interface index: 145, SNMP ifIndex: 592, Generation: 148
Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:

```

```

None,
Loopback: None, Source filtering: Disabled, Flow control: Enabled
Pad to minimum frame size: Enabled
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags     : None
CoS queues     : 8 supported, 8 maximum usable queues
Hold-times     : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped   : 2013-10-26 03:20:40 test (2w3d 03:15 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Dropped traffic statistics due to STP State:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors:
0,
  Resource errors: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,

  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets    Transmitted packets      Dropped packets

    0                  0                0                0
    1                  0                0                0
    2                  0                0                0
    3                  0                0                0

Queue number:      Mapped forwarding classes
    0              best-effort
    1              expedited-forwarding
    2              assured-forwarding
    3              network-control
Active alarms : LINK
Active defects : LINK
PCS statistics
  Bit errors      109
  Errored blocks  109
MAC statistics:
    1              Receive      Transmit      0
    2              0           0           0

```

```

3                               0                               0                               0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control
Active alarms : LINK
Active defects : LINK
PCS statistics      Seconds
  Bit errors        109
  Errored blocks    109
MAC statistics:      Receive      Transmit
  Total octets      0            0
  Total packets    0            0
  Unicast packets  0            0
  Broadcast packets 0            0
  Multicast packets 0            0
  CRC/Align errors 0            0
  FIFO errors      0            0
  MAC control frames 0            0
  MAC pause frames 0            0
  Oversized frames 0
  Jabber frames    0
  Fragment frames  0
  VLAN tagged frames 0
  Code violations  0
  Total errors     0            0
Filter statistics:
  Input packet count 0
  Input packet rejects 0
  Input DA rejects 0
  Input SA rejects 0
  Output packet count 0
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 0
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
  0 best-effort          95      9500000000    95      0      low
none
  3 network-control      5       500000000    5       0      low
none
  Interface transmit statistics: Disabled

```

When an ASIC is wedged, the interfaces are brought down along with the IFD. The reason for the link down is displayed as **ASIC-Error** in the **Device flags**.

```

user@host> show interfaces xe-1/0/0 extensive
Physical interface: xe-1/0/0, Administratively down, Physical link is Down
Interface index: 147, SNMP ifIndex: 563, Generation: 150
Link-level type: Ethernet, MTU: 1514, MRU: 0, LAN-PHY mode, Speed: 10Gbps, BPDU
Error: None, Loop Detect PDU Error: None,
MAC-REWRITE Error: None, Loopback: None, Source filtering: Disabled, Flow
control: Disabled
Pad to minimum frame size: Disabled

```

```

Device flags      : Present Running Down ASIC-Error
Interface flags: Hardware-Down Down Internal: 0x4000
Link flags       : None
CoS queues       : 8 supported, 8 maximum usable queues
Schedulers       : 0
Hold-times       : Up 0 ms, Down 0 ms
Damping          : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
Current address: cc:e1:7f:a8:05:4a, Hardware address: cc:e1:7f:a8:05:4a
Last flapped    : 2017-06-05 17:20:54 PDT (00:03:51 ago)
Statistics last cleared: Never

```

#### show interfaces extensive (MX480 Router with MPC5E and 10-Gigabit Ethernet OTN Interface)

```

user@host> show interfaces xe-0/0/3 extensive
Physical interface: xe-0/0/3, Enabled, Physical link is Up
  Interface index: 200, SNMP ifIndex: 577, Generation: 203
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, LAN-PHY mode, Speed: 10Gbps,
  BPDU Error: None, MAC-REWRITE Error: None, Loopback: None, Source filtering:
  Disabled, Flow control: Enabled
  Pad to minimum frame size: Disabled
  Device flags      : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags       : None
  CoS queues       : 8 supported, 8 maximum usable queues
  Schedulers       : 0
  Hold-times       : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped    : 2014-06-26 18:16:50 PDT (04:58:35 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes      : 0                      0 bps
    Output bytes     : 0                      0 bps
    Input packets    : 0                      0 pps
    Output packets   : 0                      0 pps
  IPv6 transit statistics:
    Input bytes      : 0
    Output bytes     : 0
    Input packets    : 0
    Output packets   : 0
  Dropped traffic statistics due to STP State:
    Input bytes      : 0
    Output bytes     : 0
    Input packets    : 0
    Output packets   : 0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
  Output errors:
    Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:

```

	Queued packets	Transmitted packets	Dropped packets
0	0	0	0
1	0	0	0
2	0	0	0

```

3                               0                               0                               0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control
Active alarms : None
Active defects : None
PCS statistics      Seconds
  Bit errors        0
  Errored blocks    4
MAC statistics:      Receive      Transmit
  Total octets      0              0
  Total packets     0              0
  Unicast packets   0              0
  Broadcast packets 0              0
  Multicast packets 0              0
  CRC/Align errors  0              0
  FIFO errors       0              0
  MAC control frames 0              0
  MAC pause frames  0              0
  Oversized frames  0
  Jabber frames     0
  Fragment frames   0
  VLAN tagged frames 0
  Code violations    0
  Total errors       0              0
Filter statistics:
  Input packet count 0
  Input packet rejects 0
  Input DA rejects   0
  Input SA rejects   0
  Output packet count 0
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
  0 best-effort           95      9500000000    95      0      low
none
  3 network-control       5       500000000    5       0      low
none
  Interface transmit statistics: Disabled

```

#### show interfaces extensive (MX480 Router with MPC5E and 100-Gigabit Ethernet OTN Interface)

```

user@host> show interfaces et-2/1/0 extensive
Physical interface: et-2/1/0, Enabled, Physical link is Up
  Interface index: 215, SNMP ifIndex: 872, Generation: 218
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, Speed: 100Gbps, BPDU Error:
None, Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
  Pad to minimum frame size: Disabled
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags : None

```

```

CoS queues      : 8 supported, 8 maximum usable queues
Schedulers      : 0
Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped    : 2014-06-26 18:42:04 PDT (04:36:58 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   : 0                      0 bps
  Output bytes  : 0                      0 bps
  Input packets : 0                      0 pps
  Output packets: 0                      0 pps
IPv6 transit statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
Dropped traffic statistics due to STP State:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 263, Errors: 0, Drops: 0, Collisions: 0, Aged packets:
0, FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0                      0              0              0
    1                      0              0              0
    2                      0              0              0
    3                      0              0              0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control
Active alarms      : None
Active defects     : None
PCS statistics      Seconds
  Bit errors        0
  Errored blocks    754
MAC statistics:      Receive      Transmit
  Total octets      14960          0
  Total packets     104            0
  Unicast packets   0              0
  Broadcast packets 0              0
  Multicast packets 0              0
  CRC/Align errors  0              0
  FIFO errors       0              0
MAC control frames  0              0
  MAC pause frames  0              0
  Oversized frames  0
  Jabber frames     2

```

```

Fragment frames                6
VLAN tagged frames             0
Code violations                 0
Total errors                   98          0
Filter statistics:
Input packet count             104
Input packet rejects           0
Input DA rejects               0
Input SA rejects               0
Output packet count            0          0
Output packet pad count        0          0
Output packet error count      0          0
CAM destination filters: 0, CAM source filters: 0
OTN alarms      : None
OTN defects     : None
OTN FEC Mode    : GFEC
OTN Rate        : OTU4 100Gbps
OTN Line Loopback : None
OTN Local Loopback: None
OTN Payload PRBS  : None
OTN FEC statistics:
Corrected Errors                169828399453
Uncorrected Words               28939961456
Corrected Error Ratio ( 17963 sec average) 8.46e-05
OTN FEC alarms:
Seconds      Count  State
FEC Degrade  1180    3   OK
FEC Excessive 1160    5   OK
OTN OC:
Seconds      Count  State
LOS          129     1   OK
LOF           2     1   OK
LOM           0     0   OK
Wavelength Lock 0     0   OK
OTN OTU:
AIS           0     0   OK
BDI           7     1   OK
IAE           0     0   OK
TTIM          168    45  OK
BIAE          0     0   OK
TSF           0     0   OK
SSF           0     0   OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN ODU:
AIS           130     1   OK
OCI           0     0   OK
LCK           0     0   OK
BDI           7     1   OK
TTIM          133     1   OK
IAE           0     0   OK
LTC           0     0   OK
CSF           8     4   OK
TSF           0     0   OK
SSF           0     0   OK
PTIM          130     1   OK
Received DAPI:

```

```

00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x00
ODU Delay Management :
  Result : 0x00
PRBS:
  Result: Test not enabled
OTN Transmitted Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x00
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue          Bandwidth          Buffer Priority
Limit
      0 best-effort           95      950000000000    95      usec      low
none
      3 network-control       5       50000000000      5       0        low
none
Interface transmit statistics: Disabled

```

#### show interfaces extensive ((MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```

user@host> show interfaces et-3/0/0 extensive
Physical interface: et-3/0/0, Enabled, Physical link is Up
  Interface index: 163, SNMP ifIndex: 564, Generation: 166
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, Speed: 100Gbps, BPDU Error:
None, Loopback: Disabled, Source filtering:
Disabled,
  Flow control: Enabled
  Pad to minimum frame size: Disabled
  Device flags : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags : None
  Wavelength : 1550.12 nm, Frequency: 193.40 THz
  CoS queues : 8 supported, 8 maximum usable queues
  Schedulers : 0
  Hold-times : Up 0 ms, Down 0 ms
  Damping : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped : 2016-02-17 14:26:31 PST (09:04:28 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0

```

```

Output packets:                                0
Dropped traffic statistics due to STP State:
Input bytes :                                  0
Output bytes :                                 0
Input packets:                                0
Output packets:                                0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU
errors: 0,
Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

0                      0                      0                      0
1                      0                      0                      0
2                      0                      0                      0
3                      0                      0                      0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control
Active alarms : None
Active defects : None
PCS statistics      Seconds
Bit errors          8
Errored blocks      10
MAC statistics:      Receive      Transmit
Total octets        0            0
Total packets       0            0
Unicast packets     0            0
Broadcast packets   0            0
Multicast packets   0            0
CRC/Align errors    0            0
FIFO errors         0            0
MAC control frames  0            0
MAC pause frames    0            0
Oversized frames    0
Jabber frames       0
Fragment frames     0
VLAN tagged frames  0
Code violations      0
Total errors        0            0
Filter statistics:
Input packet count   0
Input packet rejects 0
Input DA rejects     0
Input SA rejects     0
Output packet count   0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0

```

```

OTN alarms      : None
OTN defects     : None
OTN FEC Mode    : SDFEC
OTN Rate        : OTU4 (120.5Gbps)
OTN Line Loopback : None
OTN Local Loopback: None
OTN Payload PRBS : None
OTN Laser Enable : On
OTN FEC statistics:
  Corrected Errors      7065332638
  Uncorrected Words     3412572
  Corrected Error Ratio ( 32785 sec average) 1.79e-06 (INVALID)
OTN FEC alarms:      Seconds      Count  State
  FEC Degrade         0           0  OK
  FEC Excessive       3           1  OK
OTN OC:              Seconds      Count  State
  LOS                 3           1  OK
  LOF                 50          3  OK
  LOM                 3           3  OK
  Wavelength Lock    0           0  OK
OTN OTU:
  AIS                 0           0  OK
  BDI                 4           4  OK
  IAE                 4           4  OK
  TTIM                1           1  OK
  BIAE                3           3  OK
  TSF                 50          3  OK
  SSF                 50          3  OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN ODU:
  AIS                 20           2  OK
  OCI                 4           4  OK
  LCK                 4           4  OK
  BDI                 2           2  OK
  TTIM                20          2  OK
  IAE                 0           0  OK
  LTC                 0           0  OK
  CSF                 18          2  OK
  TSF                 66          2  OK
  SSF                 66          2  OK
  PTIM                43          2  OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x07
ODU Delay Management :
Result : 0ms

```

```

PRBS:
  Result: Test not enabled
OTN Transmitted Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x07
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
      0 best-effort      95      950000000000      95      usec      low
none
      3 network-control  5      50000000000      5      0      low
none
Interface transmit statistics: Disabled

```

#### show interfaces extensive (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC)

```

user@host > show interfaces extensive et-4/0/0
Physical interface: et-4/0/0, Enabled, Physical link is Up
  Interface index: 148, SNMP ifIndex: 544, Generation: 161
  Link-level type: Ethernet, MTU: 1514, Speed: 100Gbps, BPDU Error: None, Loopback:
  Disabled, Source filtering: Disabled,
  Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  Wavelength     : 1550.12 nm, Frequency: 193.40 THz
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Damping        : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped   : 2016-06-04 21:42:42 PDT (1d 05:09 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes   : 0      0 bps
  Output bytes  : 0      0 bps
  Input packets : 0      0 pps
  Output packets: 0      0 pps
IPv6 transit statistics:
  Input bytes   : 0
  Output bytes  : 0
  Input packets : 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0,
  Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets      Transmitted packets      Dropped packets
0      0      0      0
1      0      0      0

```

```

2                                0                                0                                0

3                                0                                0                                0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control

Active alarms      : None
Active defects     : None
PCS statistics
  Bit errors       Seconds
  7
Errored blocks     10
MAC statistics:    Receive      Transmit
  Total octets     0            0
  Total packets    0            0
  Unicast packets  0            0
  Broadcast packets 0            0
  Multicast packets 0            0
  CRC/Align errors 0            0
  FIFO errors       0            0
  MAC control frames 0            0
  MAC pause frames  0            0
  Oversized frames  0
  Jabber frames      0
  Fragment frames    0
  VLAN tagged frames 0
  Code violations    0
Filter statistics:
  Input packet count 0
  Input packet rejects 0
  Input DA rejects   0
  Input SA rejects   0
  Output packet count
  Output packet pad count 0
  Output packet error count 0
  CAM destination filters: 0, CAM source filters: 0
OTN alarms         : None
OTN defects         : None
OTN FEC Mode        : SDFEC
OTN Rate           : OTU4 (120.5Gbps)
OTN Line Loopback   : None
OTN Local Loopback  : None
OTN Payload PRBS    : None
OTN Laser Enable    : On
OTN FEC statistics:
  Corrected Errors   19637746
  Uncorrected Words  0
  Corrected Error Ratio ( 104923 sec average) 1.55e-09
OTN FEC alarms:    Seconds      Count  State
  FEC Degrade       0            0  OK
  FEC Excessive     0            0  OK
OTN OC:            Seconds      Count  State
  LOS               0            0  OK
  LOF               2            1  OK
  LOM               2            1  OK
  Wavelength Lock   0            0  OK
OTN OTU:
  AIS               0            0  OK

```

```

BDI                2                1 OK
IAE                0                0 OK
TTIM              0                0 OK
BIAE              0                0 OK
TSF               2                1 OK
SSF               0                0 OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN ODU:
AIS                0                0 OK
OCI                0                0 OK
LCK                0                0 OK
BDI                2                1 OK
TTIM              0                0 OK
IAE                0                0 OK
LTC                0                0 OK
CSF                0                0 OK
TSF               2                1 OK
SSF               0                0 OK
PTIM              2                1 OK
Received DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Received SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x07
ODU Delay Management :
  Result : 0ms
PRBS:
  Result: Test not enabled
OTN Transmitted Overhead Bytes:
  APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
  Payload Type: 0x07
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue          Bandwidth          Buffer Priority
Limit                         %          bps          %          usec
0 best-effort                95    95000000000    95          0    low
none
3 network-control            5     5000000000     5          0    low
none
Interface transmit statistics: Disabled

```

**show interfaces extensive (MX2020 Router with MPC6E and OTN MIC)**

```
user@host> show interfaces xe-3/0/0 extensive
```

```

Physical interface: xe-3/0/0, Enabled, Physical link is Up
  Interface index: 166, SNMP ifIndex: 516, Generation: 169
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, LAN-PHY mode, Speed: 10Gbps,
  BPDU Error:
  None, MAC-REWRITE Error: None, Loopback: None, Source filtering: Disabled, Flow
  control:
  Enabled
    Pad to minimum frame size: Disabled
    Device flags   : Present Running
    Interface flags: SNMP-Traps Internal: 0x4000
    Link flags     : None
    CoS queues     : 8 supported, 8 maximum usable queues
    Hold-times     : Up 0 ms, Down 0 ms
    Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
    Last flapped   : 2014-05-28 17:53:12 PDT (05:56:24 ago)
    Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 0                      0 bps
    Output bytes  : 0                      0 bps
    Input packets : 0                      0 pps
    Output packets: 0                      0 pps
  IPv6 transit statistics:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Dropped traffic statistics due to STP State:
    Input bytes   : 0
    Output bytes  : 0
    Input packets : 0
    Output packets: 0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
  incompletes:
    0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors:
    0
    Output errors:
      Carrier transitions: 3, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
    FIFO
  errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort           0                0                0

    1 expedited-forwarding   0                0                0
    0
    2 assured-forwarding     0                0                0
    0
    3 network-control        0                0                0
    0
  Queue number:      Mapped forwarding classes
    0                 best-effort
    1                 expedited-forwarding
    2                 assured-forwarding
    3                 network-control
  Active alarms : None
  Active defects : None
  PCS statistics
    Bit errors           Seconds
    Errored blocks       2
    Errored blocks       2

```

```

MAC statistics:
Total octets          Receive      Transmit
Total packets        0          0
Unicast packets      0          0
Broadcast packets    0          0
Multicast packets    0          0
CRC/Align errors     0          0
FIFO errors          0          0
MAC control frames   0          0
MAC pause frames     0          0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0
Total errors         0          0
Filter statistics:
Input packet count    0
Input packet rejects  0
Input DA rejects      0
Input SA rejects      0
Output packet count   0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
OTN alarms           : None
OTN defects          : None
OTN FEC Mode         : GFEC
OTN Rate             : Fixed Stuff Bytes 11.0957Gbps
OTN Line Loopback    : None
OTN Local Loopback   : None
OTN Payload PRBS     : None
OTN FEC statistics:
Corrected Errors      0
Uncorrected Words     0
Corrected Error Ratio ( 21387 sec average) 0.00e+00
OTN FEC alarms:      Seconds      Count  State
FEC Degrade          0          0  OK
FEC Excessive         0          0  OK
OTN OC:              Seconds      Count  State
LOS                   0          0  OK
LOF                   0          0  OK
LOM                   0          0  OK
Wavelength Lock       0          0  OK
OTN OTU:
AIS                   0          0  OK
BDI                   0          0  OK
IAE                   0          0  OK
TTIM                  0          0  OK
BIAE                  0          0  OK
TSF                   0          0  OK
SSF                   0          0  OK
Received DAPI:
00 53 4d 2d 54 52 43 20 44 41 50 49 2d 53 45 43 .SM-TRC DAPI-SEC
Received SAPI:
00 53 4d 2d 54 52 43 20 53 41 50 49 2d 53 45 43 .SM-TRC SAPI-SEC
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN ODU:

```

```

AIS                                0          0 OK
OCI                                0          0 OK
LCK                                0          0 OK
BDI                                0          0 OK
TTIM                              0          0 OK
IAE                                0          0 OK
LTC                                0          0 OK
CSF                                0          0 OK
TSF                                0          0 OK
SSF                                0          0 OK
PTIM                              0          0 OK
Received DAPI:
00 50 4d 2d 54 52 43 20 44 41 50 49 2d 53 45 43 .PM-TRC DAPI-SEC
Received SAPI:
00 50 4d 2d 54 52 43 20 53 41 50 49 2d 53 45 43 .PM-TRC SAPI-SEC
Transmitted DAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
Transmitted SAPI:
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
OTN Received Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x00
ODU Delay Management :
Result : 0x00
PRBS:
Result: Test not enabled
OTN Transmitted Overhead Bytes:
APS/PCC0: 0x00, APS/PCC1: 0x00, APS/PCC2: 0x00, APS/PCC3: 0x00
Payload Type: 0x00
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS information:
Direction : Output
CoS transmit queue          Bandwidth          Buffer Priority
Limit
                                %          bps          %          usec
0 best-effort                95          9500000000      95          0          low
none
3 network-control            5           500000000        5           0          low
none
Interface transmit statistics: Disabled

```

#### show interfaces extensive (MX2010 Router with MPC6E and 100-Gigabit Ethernet OTN Interface)

```

user@host> show interfaces et-9/0/0 extensive
Physical interface: et-9/0/0, Enabled, Physical link is Up
Interface index: 196, SNMP ifIndex: 623, Generation: 199
Link-level type: Ethernet, MTU: 1514, MRU: 1522, Speed: 100Gbps, BPDU Error:
None, Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled
Pad to minimum frame size: Disabled
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped : 2014-06-26 18:18:34 PDT (04:17:07 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps

```

```

Output bytes :                0                0 bps
Input packets:                0                0 pps
Output packets:               0                0 pps
IPv6 transit statistics:
  Input bytes :                0
  Output bytes :               0
  Input packets:              0
  Output packets:             0
Dropped traffic statistics due to STP State:
  Input bytes :                0
  Output bytes :               0
  Input packets:              0
  Output packets:             0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0                      0                0                0
    1                      0                0                0
    2                      0                0                0
    3                      0                0                0

Queue number:      Mapped forwarding classes
0                  best-effort
1                  expedited-forwarding
2                  assured-forwarding
3                  network-control

Active alarms : None
Active defects : None
PCS statistics                      Seconds
  Bit errors                      0
  Errored blocks                  0
MAC statistics:                      Receive      Transmit
  Total octets                    0              0
  Total packets                   0              0
  Unicast packets                  0              0
  Broadcast packets                0              0
  Multicast packets                0              0
  CRC/Align errors                 0              0
  FIFO errors                      0              0
  MAC control frames               0              0
  MAC pause frames                 0              0
  Oversized frames                 0
  Jabber frames                    0
  Fragment frames                  0
  VLAN tagged frames               0
  Code violations                   0
  Total errors                     0              0
Filter statistics:
  Input packet count               0
  Input packet rejects             0
  Input DA rejects                 0

```

```

Input SA rejects          0
Output packet count      0
Output packet pad count  0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
CoS information:
  Direction : Output
  CoS transmit queue      Bandwidth      Buffer Priority
Limit
      0 best-effort      95      950000000000      95      usec      low
none
      3 network-control  5      50000000000      5      0      low
none
Interface transmit statistics: Disabled

```

#### show interfaces extensive (MX2010 Router with MPC6E and 10-Gigabit Ethernet Interface)

```

user@host> show interfaces xe-6/1/0 extensive
Physical interface: xe-6/1/0, Enabled, Physical link is Up
  Interface index: 159, SNMP ifIndex: 603, Generation: 162
  Link-level type: Ethernet, MTU: 1514, MRU: 1522, LAN-PHY mode, Speed: 10Gbps,
  BPDU Error: None, MAC-REWRITE Error: None, Loopback: None, Source filtering:
  Disabled, Flow control: Enabled
  Pad to minimum frame size: Disabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues    : 8 supported, 8 maximum usable queues
  Schedulers    : 0
  Hold-times    : Up 0 ms, Down 0 ms
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped  : 2014-06-26 18:16:50 PDT (04:21:04 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0      0 bps
  Output bytes : 0      0 bps
  Input packets: 0      0 pps
  Output packets: 0      0 pps
IPv6 transit statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Dropped traffic statistics due to STP State:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

```

0	0	0	0
1	0	0	0
2	0	0	0
3	0	0	0

Queue number:           Mapped forwarding classes

0                   best-effort

1                   expedited-forwarding

2                   assured-forwarding

3                   network-control

Active alarms : None

Active defects : None

PCS statistics                   Seconds

Bit errors                   0

Errored blocks               1

MAC statistics:               Receive               Transmit

Total octets               0               0

Total packets               0               0

Unicast packets               0               0

Broadcast packets           0               0

Multicast packets           0               0

CRC/Align errors           0               0

FIFO errors               0               0

MAC control frames           0               0

MAC pause frames           0               0

Oversized frames           0

Jabber frames               0

Fragment frames           0

VLAN tagged frames           0

Code violations           0

Total errors               0               0

Filter statistics:

Input packet count           0

Input packet rejects           0

Input DA rejects           0

Input SA rejects           0

Output packet count               0

Output packet pad count           0

Output packet error count           0

CAM destination filters: 0, CAM source filters: 0

Packet Forwarding Engine configuration:

Destination slot: 0 (0x00)

CoS information:

Direction : Output

CoS transmit queue	Bandwidth	Buffer Priority
Limit		
	%               bps               %	usec               low
0 best-effort	95               9500000000               95	0               low
none		
3 network-control	5               500000000               5	0               low
none		

Interface transmit statistics: Disabled

**show interfaces extensive (T4000 Routers with Type 5 FPCs)**

The output fields for the **show interfaces *interface* extensive** command remains the same for 12-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-12XGE-SFPP), 24-port 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (PF-24XGE-SFPP), and 100-Gigabit Ethernet Type 5 PIC with CFP (PF-1CGE-CFP).

```

user@host> show interfaces xe-4/0/0 extensive
Physical interface: xe-4/0/0, Enabled, Physical link is Up
  Interface index: 200, SNMP ifIndex: 592, Generation: 203
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
None, Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  Link flags     : None
  CoS queues     : 8 supported, 8 maximum usable queues
  Hold-times     : Up 0 ms, Down 0 ms
  Damping        : half-life: 5 sec, max-suppress: 20 sec, reuse 1000, suppress:
2000, state: enabled
  Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
  Last flapped   : 2013-06-03 16:01:56 PDT (06:04:07 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  IPv6 transit statistics:
    Input bytes   :                0
    Output bytes  :                0
    Input packets :                0
    Output packets:                0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort    0                0                0
    1 expedited-fo   0                0                0
    2 assured-forw   0                0                0
    3 network-cont   0                0                0

  Queue number:      Mapped forwarding classes
    0                best-effort
    1                expedited-forwarding
    2                assured-forwarding
    3                network-control
  Active alarms   : None
  Active defects  : None
  PCS statistics
    Bit errors      Seconds
    Errored blocks  0
    Bit errors      0

```

```

MAC statistics:
Total octets          Receive      Transmit
Total packets        0          0
Unicast packets      0          0
Broadcast packets    0          0
Multicast packets    0          0
CRC/Align errors     0          0
FIFO errors          0          0
MAC control frames   0          0
MAC pause frames     0          0
Oversized frames     0
Jabber frames        0
Fragment frames      0
VLAN tagged frames   0
Code violations       0
Filter statistics:
Input packet count    0
Input packet rejects  0
Input DA rejects      0
Input SA rejects      0
Output packet count   0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS information:
Direction : Output
CoS transmit queue   Bandwidth      Buffer Priority Limit
                    %      bps      %      usec
0 best-effort        95  9500000000  95      0      low  none
3 network-control    5   500000000   5      0      low  none
Preclassifier statistics:
Traffic Class      Received Packets  Transmitted Packets  Dropped Packets

real-time          0          0          0
network-control    0          0          0
best-effort        0          0          0
Interface transmit statistics: Disabled

```

### show interfaces extensive (Aggregated Ethernet)

```

user@host> show interfaces ae0 extensive
Physical interface: ae0, Enabled, Physical link is Up
Interface index: 199, SNMP ifIndex: 570, Generation: 202
Link-level type: Ethernet, MTU: 1514, Speed: 2Gbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Disabled, Minimum links needed: 1, Minimum bandwidth needed: 0
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
Current address: 00:00:5E:00:53:00, Hardware address: 00:00:5E:00:53:00
Last flapped : 2012-06-06 23:33:03 PDT (00:00:58 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes :          18532          1984 bps
Output bytes :           0           0 bps
Input packets:          158           2 pps
Output packets:         0           0 pps
IPv6 transit statistics:
Input bytes :           0
Output bytes :           0

```

```

    Input packets:          0
    Output packets:         0
Dropped traffic statistics due to STP State:
    Input bytes :           0
    Output bytes :          0
    Input packets:          0
    Output packets:         0
Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
    Resource errors: 0
Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0
Ingress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort          0              0              0
    1 expedited-fo        0              0              0
    2 assured-forw        0              0              0
    3 network-cont        0              0              0

Egress queues: 8 supported, 4 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort          57             57             0
    1 expedited-fo         0              0              0
    2 assured-forw         0              0              0
    3 network-cont       63605          63605          0

Queue number:      Mapped forwarding classes
    0              best-effort
    1              expedited-forwarding
    2              assured-forwarding
    3              network-control

Logical interface ae0.0 (Index 331) (SNMP ifIndex 583) (Generation 142)
Flags: SNMP-Traps 0x4004000 Encapsulation: ENET2
Statistics      Packets      pps      Bytes      bps
Bundle:
    Input :        149         2      17416      1984
    Output:         0         0         0         0
Link:
    ge-3/2/5.0
    Input :         90         1      10100      992
    Output:         0         0         0         0
    ge-3/3/9.0
    Input :         59         1       7316      992
    Output:         0         0         0         0
LACP info:      Role      System      System      Port
Port  Port
          priority      identifier  priority      number
key
ge-3/2/5.0  Actor      100    00:00:00:00:00:01      127      1
1

```

```

    ge-3/2/5.0  Partner      127  00:24:dc:98:67:c0      127      1      1
    ge-3/3/9.0   Actor      100  00:00:00:00:00:01      127      2
1   ge-3/3/9.0  Partner      127  00:24:dc:98:67:c0      127      2      1

LACP Statistics:      LACP Rx      LACP Tx      Unknown Rx      Illegal Rx
ge-3/2/5.0            38          137           0           0
ge-3/3/9.0            36          139           0           0
Marker Statistics:   Marker Rx      Resp Tx      Unknown Rx      Illegal Rx
ge-3/2/5.0            0           0           0           0
ge-3/3/9.0            0           0           0           0
Protocol inet, MTU: 1500, Generation: 169, Route table: 0
Flags: Sendbcst-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
Destination: 1.1.1/24, Local: 1.1.1.2, Broadcast: 1.1.1.255, Generation:
153
Protocol multiservice, MTU: Unlimited, Generation: 170, Route table: 0
Flags: Is-Primary
Policer: Input: __default_arp_policer__

```

## show interfaces lsi (Label-Switched Interface)

**Syntax** `show interfaces interface-type`  
`<brief | detail | extensive | terse>`  
`<descriptions>`  
`<media>`  
`<routing-instance instance-name>`  
`<snmp-index snmp-index>`  
`<statistics>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display status information about the specified label-switched interface (LSI).

**Options** *interface-type*—On most routers, the interface type is *lt-fpc/pic/port*.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output.

**descriptions**—(Optional) Display interface description strings.

**media**—(Optional) Display media-specific information about network interfaces.

**routing-instance *instance-name***—(Optional) Display information for the specified routing instance.

**snmp-index *snmp-index***—(Optional) Display information for the specified SNMP index of the interface.

**statistics**—(Optional) Display static interface statistics.

**Required Privilege Level** view

**Related Documentation**

**List of Sample Output** [show interfaces lsi extensive on page 1605](#)

**Output Fields** [Table 78 on page 1603](#) lists the output fields for the **show interfaces** (logical tunnel) command. Output fields are listed in the approximate order in which they appear.

*Table 78: Logical Tunnel show interfaces Output Fields*

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Logical Interface		

Table 78: Logical Tunnel show interfaces Output Fields (continued)

Field Name	Field Description	Level of Output
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	<b>detail extensive none</b>
SNMP ifIndex	SNMP interface index number.	<b>detail extensive none</b>
Generation	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Rate of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Rate of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Rate of packets received on the interface.</li> <li>• <b>Output packets</b>—Rate of packets transmitted on the interface.</li> </ul>	<b>detail extensive</b>
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	<b>detail extensive</b>
Protocol	Protocol family configured on the logical interface, such as <b>iso</b> , <b>inet6</b> , <b>mpls</b> .	<b>detail extensive none</b>
MTU	MTU size on the logical interface.	<b>detail extensive none</b>
Generation	Unique number for use by Juniper Networks technical support only.	<b>detail extensive</b>
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <a href="#">“Common Output Fields Description” on page 1114</a> .	<b>detail extensive none</b>

## Sample Output

### show interfaces lsi extensive

```
user@host> show interfaces lsi extensive
```

```
Physical interface: lsi
```

```
Logical interface lsi.84934656 (Index 363) (SNMP ifIndex 586) (Generation 194)
```

```
Flags: Up Point-To-Point SNMP-Traps 0x4000000 Encapsulation: LSI-NULL
```

```
Traffic statistics:
```

```
Input bytes : 0
```

```
Output bytes : 0
```

```
Input packets: 0
```

```
Output packets: 0
```

```
Local statistics:
```

```
Input bytes : 0
```

```
Output bytes : 0
```

```
Input packets: 0
```

```
Output packets: 0
```

```
Transit statistics:
```

```
Input bytes : 0 0 bps
```

```
Output bytes : 0 0 bps
```

```
Input packets: 0 0 pps
```

```
Output packets: 0 0 pps
```

```
Protocol vpls, MTU: Unlimited, Generation: 279, Route table: 10
```

```
Logical interface lsi.84934657 (Index 366) (SNMP ifIndex 589) (Generation 197)
```

```
Flags: Up Point-To-Point SNMP-Traps 0x4000000 Encapsulation: LSI-NULL
```

```
Traffic statistics:
```

```
Input bytes : 0
```

```
Output bytes : 0
```

```
Input packets: 0
```

```
Output packets: 0
```

```
Local statistics:
```

```
Input bytes : 0
```

```
Output bytes : 0
```

```
Input packets: 0
```

```
Output packets: 0
```

```
Transit statistics:
```

```
Input bytes : 0 0 bps
```

```
Output bytes : 0 0 bps
```

```
Input packets: 0 0 pps
```

```
Output packets: 0 0 pps
```

```
Protocol vpls, MTU: Unlimited, Generation: 282, Route table: 10
```

## show interfaces media

---

**Syntax**    show interfaces media

**Release Information**    Command introduced before Junos OS Release 7.4.  
Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.

**Description**    Display media-specific information about all configured network interfaces.



**NOTE:** show interfaces media lists details for all interfaces, whereas show interfaces media *interface-name* lists details only for the specified interface.

**Options**    This command has no options.

**Additional Information**    Output from both the **show interfaces *interface-name* detail** and the **show interfaces *interface-name* extensive** commands includes all the information displayed in the output from the **show interfaces media** command.

**Required Privilege Level**    view

**List of Sample Output**    [show interfaces media \(SONET/SDH\) on page 1607](#)  
[show interfaces media \(MX Series Routers\) on page 1607](#)  
[show interfaces media \(PTX Series Packet Transport Routers\) on page 1608](#)

**Output Fields**    The output from the **show interfaces media** command includes fields that display interface media-specific information. These fields are also included in the **show interfaces *interface-name*** command for each particular interface type, and the information provided in the fields is unique to each interface type.

One field unique to the **show interfaces media** command is **interface-type errors** (for example, **SONET errors**). This field appears for channelized E3, channelized T3, channelized OC, E1, E3, SONET, T1, and T3 interfaces. The information provided in this output field is also provided in the output from the **show interfaces *interface-name*** command. (For example, for SONET interfaces, these fields are **SONET section**, **SONET line**, and **SONET path**). For a description of errors, see the chapter with the particular interface type in which you are interested.

## Sample Output

### show interfaces media (SONET/SDH)

The following example displays the output fields unique to the **show interfaces media** command for a SONET interface (with no level of output specified):

```
user@host> show interfaces media so-4/1/2
Physical interface: so-4/1/2, Enabled, Physical link is Up
  Interface index: 168, SNMP ifIndex: 495
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC48,
  Loopback: None, FCS: 16, Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 1783 (00:00:00 ago), Output: 1786 (00:00:08 ago)
  LCP state: Opened
  NCP state: inet: Not-configured, inet6: Not-configured, iso: Not-configured,
  mpls: Not-configured
  CHAP state: Not-configured
  CoS queues    : 8 supported
  Last flapped  : 2005-06-15 12:14:59 PDT (04:31:29 ago)
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  SONET alarms  : None
  SONET defects : None
  SONET errors:
    BIP-B1: 121, BIP-B2: 916, REI-L: 0, BIP-B3: 137, REI-P: 16747, BIP-BIP2: 0
  Received path trace: routerb so-1/1/2
  Transmitted path trace: routera so-4/1/2
```

### show interfaces media (MX Series Routers)

```
user@host>show interfaces media xe-0/0/0
Physical interface: xe-0/0/0, Enabled, Physical link is Up
  Interface index: 145, SNMP ifIndex: 592
  Link-level type: Ethernet, MTU: 1514, LAN-PHY mode, Speed: 10Gbps, BPDU Error:
  None,
  Loopback: None, Source filtering: Disabled, Flow control: Enabled
  Pad to minimum frame size: Enabled
  Device flags   : Present Running
  Interface flags: Hardware-Down SNMP-Traps Internal: 0x0
  Link flags     : None
  CoS queues    : 8 supported, 8 maximum usable queues
  Current address: 08:81:f4:82:a3:f0, Hardware address: 08:81:f4:82:a3:f0
  Last flapped   : 2013-10-26 03:20:40 test (1w6d 00:19 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Active alarms  : LINK
  Active defects : LINK
  PCS statistics
    Bit errors          Seconds
    Errored blocks      78
  MAC statistics:
    Input bytes: 0, Input packets: 0, Output bytes: 0, Output packets: 0
  Filter statistics:
    Filtered packets: 0, Padded packets: 0, Output packet errors: 0
  Interface transmit statistics: Disabled
```

### show interfaces media (PTX Series Packet Transport Routers)

```
user@host> show interfaces media em0
Physical interface: em0, Enabled, Physical link is Up
  Interface index: 8, SNMP ifIndex: 0
  Type: Ethernet, Link-level type: Ethernet, MTU: 1514, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: SNMP-Traps
  Link type      : Full-Duplex
  Current address: 00:80:f9:25:00:1b, Hardware address: 00:80:f9:25:00:1b
  Last flapped   : Never
  Input packets  : 215151
  Output packets: 72
```

## show interfaces terse

<b>Syntax</b>	show interfaces terse
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced on PTX Series Packet Transport Routers for Junos OS Release 12.1.
<b>Description</b>	Display summary information about interfaces.
<b>Options</b>	This command has no options.
<b>Additional Information</b>	Interfaces are always displayed in numerical order, from the lowest to the highest FPC slot number. Within that slot, the lowest PIC slot is shown first. On an individual PIC, the lowest port number is always first.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Examples: Using Logical Systems</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show interfaces terse on page 1610</a> <a href="#">show interfaces terse (TX Matrix Plus Router) on page 1610</a> <a href="#">show interfaces terse (PTX Series Packet Transport Routers) on page 1611</a>
<b>Output Fields</b>	Table 79 on page 1609 lists the output fields for the <b>show interfaces terse</b> command. Output fields are listed in the approximate order in which they appear.

*Table 79: show interfaces terse Output Fields*

Field Name	Field Description
<b>Interface</b>	Interface name.
<b>Admin</b>	Whether the interface is turned on (up) or off (down).
<b>Link</b>	Link state: <b>up</b> or <b>down</b> .
<b>Proto</b>	Protocol family configured on the logical interface. A logical interface on a router that supports Ethernet OAM always shows the multiservice protocol.
<b>Local</b>	Local IP address of the logical interface.
<b>Remote</b>	Remote IP address of the logical interface.

## Sample Output

### show interfaces terse

```

user@host> show interfaces terse
Interface      Admin Link Proto  Local          Remote
t1-0/1/0:0     up   up
t1-0/1/0:0.0   up   up   inet   192.168.220.18/30
t1-0/1/0:1     up   up
t1-0/1/0:2     up   up
t1-0/1/0:3     up   up
at-1/0/0       up   up
at-1/0/1       up   up
dsc            up   up
fxp0           up   up
fxp0.0         up   up   inet   192.168.71.249/21
fxp1           up   up
fxp1.0         up   up   inet   10.0.0.4/8
               tnp   4
gre            up   up
ipip           up   up
lo0            up   up
lo0.0          up   up   inet   10.0.1.4        --> 0/0
               127.0.0.1       --> 0/0
lo0.16385      up   up   inet
lsi            up   up
mtun           up   up

```

### show interfaces terse (TX Matrix Plus Router)

```

user@host> show interfaces terse

Interface      Admin Link Proto  Local          Remote
xe-0/0/0       up   up
xe-0/0/1       up   up
xe-0/0/2       up   up
xe-0/0/3       up   up
xe-6/0/0       up   up
xe-6/0/1       up   up
xe-6/0/2       up   up
xe-6/0/3       up   up
xe-6/1/0       up   up
xe-6/1/1       up   up
xe-6/1/2       up   up
xe-6/1/3       up   up
so-0/0/0       up   up
so-0/0/0.0     up   up   inet   1.1.1.1/30
ge-1/3/0.0     up   up   inet   --> 0/0
ge-7/0/0       up   up
ge-7/0/0.0     up   up   inet   2.15.1.1/30
ge-7/0/0.1     up   up   inet   2.15.1.5/30
ge-7/0/0.2     up   up   inet   2.15.1.9/30
ge-7/0/0.3     up   up   inet   2.15.1.13/30
ge-7/0/0.4     up   up   inet   2.15.1.17/30
ge-7/0/0.5     up   up   inet   2.15.1.21/30
...
em0            up   up
em0.0          up   up   inet   192.168.178.11/25

```

```

gre                up    up
ipip               up    up
ixgbe0             up    up
ixgbe0.0           up    up    inet    10.34.0.4/8
                                   162.0.0.4/2
                                   inet6   fe80::200:ff:fe22:4/64
                                   fec0::a:22:0:4/64
                                   tnp      0x22000004
ixgbe1             up    up
ixgbe1.0           up    up    inet    10.34.0.4/8
                                   162.0.0.4/2
                                   inet6   fe80::200:1ff:fe22:4/64
                                   fec0::a:22:0:4/64
                                   tnp      0x22000004

```

#### show interfaces terse (PTX Series Packet Transport Routers)

```

user@host> show interfaces em0 terse

```

Interface	Admin	Link	Proto	Local	Remote
em0	up	up			
em0.0	up	up	inet	192.168.3.30/24	



## CHAPTER 15

# ANCP Operational Commands

- `clear ancp neighbor`
- `clear ancp statistics`
- `clear ancp subscriber`
- `request ancp oam interface`
- `request ancp oam neighbor`
- `show ancp cos`
- `show ancp neighbor`
- `show ancp statistics`
- `show ancp subscriber`
- `show ancp summary`
- `show ancp summary neighbor`
- `show ancp summary subscriber`

## clear ancp neighbor

---

<b>Syntax</b>	<b>clear ancp neighbor</b> <b>&lt;ip-address <i>ip-address</i>&gt;</b> <b>&lt;system-name <i>mac-address</i>&gt;</b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.4.
<b>Description</b>	<p>Clear the ANCP agent connection with all ANCP neighbors or with the specified ANCP neighbor. This command deletes information for subscribers associated with the neighbor, causing the adjusted traffic rates to revert to the configured rate for the subscriber interfaces. The neighbor remains configured (its administrative state is <i>enabled</i>) and can reestablish adjacencies.</p> <p>This command initiates logout of ANCP-triggered dynamic VLAN sessions on the physical interface associated with the specified neighbor; conventionally autosensed dynamic VLAN sessions and their associated logical interfaces are not affected.</p>
<b>Options</b>	<p><b>none</b>—Clear all ANCP neighbors.</p> <p><b>ip-address <i>ip-address</i></b>—(Optional) Clear the ANCP neighbor specified by the IP address.</p> <p><b>system-name <i>mac-address</i></b>—(Optional) Clear the ANCP neighbor specified by the MAC address.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show ancp neighbor on page 1628</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear ancp neighbor on page 1614</a> <a href="#">show ancp neighbor on page 1614</a>
<b>Output Fields</b>	When you enter this command, you are provided no feedback on the status of your request. You can enter the <b>show ancp neighbor</b> command before and after clearing the ANCP neighbors to verify the clear operation.

## Sample Output

### clear ancp neighbor

```
user@host> clear ancp neighbor
```

### show ancp neighbor

The following sample output displays the connections with ANCP neighbors before and after the **clear ancp neighbor** command was issued.

```
user@host> show ancp neighbor
```

IP Address	MAC Address	State	Subscriber Count	Capabilities
203.0.113.102	00:00:5e:00:53:10	Established	5	Topo
203.0.113.122	00:00:5e:00:53:12	Established	5	Topo
203.0.113.132	00:00:5e:00:53:13	Established	5	Topo
203.0.113.142	00:00:5e:00:53:14	Established	5	Topo

```
user@host> clear ancp neighbor ip-address 203.0.113.102
```

```
user@host> show ancp neighbor
```

IP Address	MAC Address	State	Subscriber Count	Capabilities
203.0.113.122	00:00:5e:00:53:12	Established	5	Topo
203.0.113.132	00:00:5e:00:53:13	Established	5	Topo
203.0.113.142	00:00:5e:00:53:14	Established	5	Topo

## clear ancp statistics

---

Syntax	<b>clear ancp statistics</b> <b>&lt;ip-address <i>ip-address</i>&gt;</b> <b>&lt;system-name <i>mac-address</i>&gt;</b>
Release Information	Command introduced in Junos OS Release 13.3.
Description	Clear current statistics accumulated by the ANCP agent for all ANCP neighbors or the specified neighbor.
Options	<b>none</b> —Clear all ANCP statistics.  <b>ip-address <i>ip-address</i></b> —(Optional) Clear statistics for the ANCP neighbor specified by the IP address.  <b>system-name <i>mac-address</i></b> —(Optional) Clear statistics for the ANCP neighbor specified by the MAC address.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show ancp neighbor on page 1628</a></li></ul>
List of Sample Output	<a href="#">clear ancp statistics on page 1616</a> <a href="#">show ancp neighbor on page 1616</a>
Output Fields	When you enter this command, you are provided no feedback on the status of your request. You can enter the <b>show ancp neighbor</b> command before and after clearing the ANCP neighbor statistics to verify the clear operation.

## Sample Output

### clear ancp statistics

```
user@host> clear ancp statistics
```

### show ancp neighbor

The following sample output displays statistics for an ANCP neighbor before and after the **clear ancp statistics** command was issued.

```
user@host> show ancp neighbor ip-address 192.168.10.1 detail
Neighbor Information
  IP Address           : 192.168.10.1
  System Name          : 00:00:5E:00:53:02
  Up Time               : 38
  TCP Port             : 64959
```

```

State : Established
Subscriber Count : 7
Capabilities : Topology Discovery
System Instance : 11
Peer Instance : 1
Adjacency Timer (in 100ms) : 50
Peer Adjacency Timer (in 100ms) : 100
Partition Type : 0
Partition Flag : 1
Partition Identifier : 0
Dead Timer : 22
Received Syn Count : 47
Received Synack Count : 48
Received Rstack Count : 2
Received Ack Count : 12
Received Port Up Count : 8
Received Port Down Count : 2
Received Other Count : 0
Sent Syn Count : 48
Sent Synack Count : 47
Sent Rstack Count : 1
Sent Ack Count : 12
Max Discovery Limit Exceed Count : 0

```

```
user@host> clear ancp statistics ip-address 192.168.10.1
```

```
user@host> show ancp neighbor ip-address 192.168.10.1 detail
```

```

Neighbor Information
IP Address : 192.168.10.1
System Name : 00:00:5E:00:53:02
Up Time : 38
TCP Port : 64959
State : Established
Subscriber Count : 7
Capabilities : Topology Discovery
System Instance : 11
Peer Instance : 1
Adjacency Timer (in 100ms) : 50
Peer Adjacency Timer (in 100ms) : 100
Partition Type : 0
Partition Flag : 1
Partition Identifier : 0
Dead Timer : 22
Received Syn Count : 0
Received Synack Count : 0
Received Rstack Count : 0
Received Ack Count : 0
Received Port Up Count : 0
Received Port Down Count : 0
Received Other Count : 0
Sent Syn Count : 0
Sent Synack Count : 0
Sent Rstack Count : 0
Sent Ack Count : 0
Max Discovery Limit Exceed Count : 0

```

## clear ancp subscriber

---

<b>Syntax</b>	<b>clear ancp subscriber</b> <b>&lt;identifier <i>identifier</i>&gt;</b> <b>&lt;ip-address <i>ip-address</i>&gt;</b> <b>&lt;system-name <i>mac-address</i>&gt;</b>
<b>Release Information</b>	Command introduced in Junos OS Release 11.4.
<b>Description</b>	Clear the ANCP agent connection with all ANCP subscribers or with the specified ANCP subscriber. This command deletes information for the subscribers, causing the adjusted traffic rate to revert to the configured rate for the subscriber interface, but otherwise has no affect on ANCP neighbors.
<b>Options</b>	<b>none</b> —Clear all ANCP subscribers.  <b>identifier <i>identifier-string</i></b> —(Optional) Clear the ANCP subscriber identified by the access loop ID.  <b>ip-address <i>ip-address</i></b> —(Optional) Clear all ANCP subscribers on the neighbor specified by the IP address.  <b>system-name <i>mac-address</i></b> —(Optional) Clear all ANCP subscribers on the neighbor specified by the MAC address.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show ancp subscriber on page 1641</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show ancp subscriber brief on page 1618</a> <a href="#">clear ancp subscriber on page 1619</a>
<b>Output Fields</b>	When you enter this command, you are provided no feedback on the status of your request. You can enter the <b>show ancp subscriber</b> command before and after clearing the ANCP neighbors to verify the clear operation.

## Sample Output

### show ancp subscriber brief

```
user@host> show ancp subscriber brief
Loop Identifier      Type      Interface      Rate      Neighbor
                    Kbps
port-1-10            VDSL2     set-ge-10410   64        203.0.113.102
port-1-11            VDSL2     set-ge-10411   64        203.0.113.112
port-2-10            VDSL2     ge-1/0/4.12    64        203.0.113.122
```

port-2-10	VDSL2	ge-1/0/4.12	64	203.0.113.123
port-2-11	VDSL2	ge-1/0/4.13	64	203.0.113.132

```
user@host> clear ancp subscriber identifier port-2-10
```

```
user@host> show ancp subscriber brief
```

Loop	Identifier	Type	Interface	Rate Kbps	Neighbor
	port-1-10	VDSL2	set-ge-10410	64	203.0.113.102
	port-1-11	VDSL2	set-ge-10411	64	203.0.113.112
	port-2-11	VDSL2	ge-1/0/4.13	64	203.0.113.132

### clear ancp subscriber

```
user@host> clear ancp subscriber
```

## request ancp oam interface

---

<b>Syntax</b>	<b>request ancp oam interface</b> <i>(interface-name   interface-set set-name)</i> <count <i>count</i> > <timeout <i>duration</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 11.4.
<b>Description</b>	Trigger the access node to run a loopback test on the local loop between the access node and the customer premises equipment. You must specify either an ANCP interface or an ANCP interface set. The access node responds to the NAS with the results of the test.
<b>Options</b>	<p><b>interface-name</b>—Name of the ANCP interface on whose local loop the loopback test is run.</p> <p><b>interface-set set-name</b>—Name of the ANCP interface set on whose local loop the loopback test is run.</p> <p><b>count count</b>—(Optional) Number of times a loopback message is sent on the local loop. Range: 1 through 32. Default: 1.</p> <p><b>timeout duration</b>—(Optional) Period of time in seconds that the NAS waits for a response to the OAM request. Range: 0 through 255. Default: 5.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Triggering ANCP OAM to Test the Local Loop</i></li></ul>
<b>List of Sample Output</b>	<a href="#">request ancp oam interface on page 1620</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request, including the result of the test, the response code, and the response string returned with the OAM response in the event of failure, an error code is displayed.

## Sample Output

### request ancp oam interface

```
user@host> request ancp oam interface ge-1/0/4.12 count 5 timeout 40
request succeeded
0x503 : DSL line status showtime
DEFAULT RESPONSE
```

## request ancp oam neighbor

<b>Syntax</b>	<pre>request ancp oam neighbor (ip-address <i>ip-address</i>   system-name <i>neighbor-name</i>) subscriber <i>identifier-string</i> &lt;count <i>count</i>&gt; &lt;timeout <i>duration</i>&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 11.4.
<b>Description</b>	Trigger the access node to run a loopback test on the local loop between the access node and the customer premises equipment. You must specify both the access node and the subscriber. The access node responds to the NAS with the results of the test.
<b>Options</b>	<p><b>ip-address <i>ip-address</i></b>—IP address that specifies the access node on whose local loop the loopback test is run.</p> <p><b>system-name <i>neighbor-name</i></b>—System name that specifies the access node on whose local loop the loopback test is run.</p> <p><b>subscriber <i>identifier-string</i></b>—Access identifier that specifies the subscriber on whose local loop the loopback test is run.</p> <p><b>count <i>count</i></b>—(Optional) Number of times a loopback message is sent on the local loop. Range: 1 through 32. Default: 1.</p> <p><b>timeout <i>duration</i></b>—(Optional) Period of time in seconds that the NAS waits for a response to the OAM request. Range: 0 through 255. Default: 5.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Triggering ANCP OAM to Test the Local Loop</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">request ancp oam subscriber on page 1621</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request, including the result of the test, the response code, and the response string returned with the OAM response in the event of failure, an error code is displayed.

## Sample Output

### request ancp oam subscriber

```
user@host> request ancp oam neighbor 203.0.113.21 subscriber "dslam port-1-11"
```

```
request succeeded
0x503 : DSL line status showtime
DEFAULT RESPONSE
```

## show ancp cos

<b>Syntax</b>	<code>show ancp cos</code> <code>&lt;identifier <i>identifier</i>&gt;</code> <code>&lt;last-update&gt;</code> <code>&lt;pending-update&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 9.4.
<b>Description</b>	Display information about the CoS state for subscriber traffic.
<b>Options</b>	<p><b>identifier <i>identifier</i></b>—(Optional) Display information about the local loops for the specified access identifier.</p> <p><b>last-update</b>—(Optional) Display the most recently updated CoS information.</p> <p><b>pending-update</b>—(Optional) Display the pending update of CoS information.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show ancp neighbor on page 1628</a></li> <li>• <a href="#">show ancp statistics on page 1636</a></li> <li>• <a href="#">show ancp subscriber on page 1641</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ancp cos on page 1625</a> <a href="#">show ancp cos last-update on page 1626</a> <a href="#">show ancp cos pending-update on page 1627</a>
<b>Output Fields</b>	Table 80 on page 1623 lists the output fields for the <b>show ancp cos</b> command. Output fields are listed in the approximate order in which they appear.

*Table 80: show ancp cos Output Fields*

Field Name	Field Description
Per-DSL CoS adjustment	Adjustment values applied by the ANCP agent to the actual downstream rates and frame overhead for frame-mode DSL types. The agent then reports the adjusted rates to CoS to establish a shaping rate for the CoS node that corresponds to the subscriber access line.
QoS Adjust Flag	State of QoS adjust: <ul style="list-style-type: none"> <li>• <b>TRUE</b>—The ANCP agent is enabled to adjust the actual downstream data rates and frame overhead and report the adjusted values to CoS.</li> <li>• <b>FALSE</b>—The ANCP agent is not enabled to adjust and report values to CoS.</li> </ul>

Table 80: show ancp cos Output Fields (continued)

Field Name	Field Description
<b>ADSL bytes</b>	Number of bytes by which the actual ADSL downstream cell overhead is adjusted before reporting it to CoS.
<b>ADSL2 bytes</b>	Number of bytes by which the actual ADSL2 downstream cell overhead is adjusted before reporting it to CoS.
<b>ADSL2-PLUS bytes</b>	Number of bytes by which the actual ADSL2+ downstream cell overhead is adjusted before reporting it to CoS.
<b>SDSL overhead adjusted</b>	Percentage by which the actual SDSL downstream rate is adjusted before reporting it to CoS.
<b>SDSL bytes</b>	Number of bytes by which the actual SDSL downstream frame overhead is adjusted before reporting it to CoS.
<b>OTHER overhead adjusted</b>	Percentage by which the actual OTHER downstream rate is adjusted before reporting it to CoS.
<b>OTHER bytes</b>	Number of bytes by which the actual OTHER downstream frame overhead is adjusted before reporting it to CoS.
<b>VDSL overhead adjusted</b>	Percentage by which the actual VDSL downstream rate is adjusted before reporting it to CoS.
<b>VDSL bytes</b>	Number of bytes by which the actual VDSL downstream frame overhead is adjusted before reporting it to CoS.
<b>VDSL2 overhead adjusted</b>	Percentage by which the actual VDSL2 downstream rate is adjusted before reporting it to CoS.
<b>VDSL2 bytes</b>	Number of bytes by which the actual VDSL2 downstream frame overhead is adjusted before reporting it to CoS.
<b>Per-DSL adjustment for reporting</b>	Adjustment values applied by the ANCP agent to the actual downstream rates for individual DSL types to account for traffic overhead. The agent then reports the adjusted rates to AAA.
<b>ADSL adjustment factor</b>	Percentage by which the actual ADSL downstream rate is adjusted before reporting it to AAA.
<b>ADSL2 adjustment factor</b>	Percentage by which the actual ADSL2 downstream rate is adjusted before reporting it to AAA.
<b>ADSL2+ adjustment factor</b>	Percentage by which the actual ADSL2+ downstream rate is adjusted before reporting it to AAA.
<b>VDSL adjustment factor</b>	Percentage by which the actual VDSL downstream rate is adjusted before reporting it to AAA.

Table 80: show ancp cos Output Fields (continued)

Field Name	Field Description
<b>VDSL2 adjustment factor</b>	Percentage by which the actual VDSL2 downstream rate is adjusted before reporting it to AAA.
<b>SDSL adjustment factor</b>	Percentage by which the actual SDSL downstream rate is adjusted before reporting it to AAA.
<b>OTHER adjustment factor</b>	Percentage by which the actual OTHER downstream rate is adjusted before reporting it to AAA.
<b>Keepalive Timer</b>	Interval between the keepalive messages that the ANCP agent sends to CoS.
<b>Cos State</b>	State of the interaction between the ANCP agent and CoS: <ul style="list-style-type: none"> <li>• ANCPD_COS_CONNECT_NEEDED</li> <li>• ANCPD_COS_CONNECT_PENDING</li> <li>• ANCPD_COS_CONNECT_DONE</li> <li>• ANCPD_COS_SESSION_SENT</li> <li>• ANCPD_COS_WRITE_READY</li> </ul>
<b>Connect Time</b>	Time at which the ANCP agent connected to CoS; useful for debugging.
<b>Session Time</b>	Time at which the ANCP agent sent a session connect message to CoS; useful for debugging.
<b>Routing Instance Time</b>	Time at which the ANCP agent sent the routing instance to CoS; useful for debugging.
<b>Keepalive Time</b>	Time at which the last keepalive message was sent.
<b>Update Time</b>	Time at which the shaping rate was last updated.
<b>Type</b>	Subscriber access type: <b>ifl</b> indicates that a single VLAN carries subscriber traffic and <b>iflset</b> indicates that a set of VLANs carries subscriber traffic.
<b>Name</b>	System-wide name of the particular subscriber access.
<b>Index</b>	Access identifier.
<b>Pending Update</b>	Actual downstream data rate to be applied next to this local loop, in Kbps.
<b>Last Update</b>	Adjusted downstream data rate last reported to CoS by the ANCP agent for this local loop, in Kbps.

## Sample Output

show ancp cos

```
user@host> show ancp cos
```

```

Per-DSL CoS adjustment:
  Qos Adjust Flag:      TRUE
  ADSL bytes:           20
  ADSL2 bytes:          20
  ADSL2-PLUS bytes:     20
  VDSL overhead adjusted: 90
  VDSL bytes:           20
  VDSL2 overhead adjusted: 95
  VDSL2 bytes:          -20
  SDSL overhead adjusted: 85
  SDSL bytes:           30
  OTHER overhead adjusted: 85
  OTHER bytes:          30

```

```

Per-DSL adjustment for reporting:
  ADSL adjustment factor: 100
  ADSL2 adjustment factor: 100
  ADSL2+ adjustment factor: 100
  VDSL adjustment factor: 100
  VDSL2 adjustment factor: 100
  SDSL adjustment factor: 100
  OTHER adjustment factor: 100

```

```

Keepalive Timer:      45 secs
State:                WRITE_READY
Connect Time:         Fri May 2 12:08:49 2016
Session Time:         Fri May 2 12:18:52 2016
Routing Instance Time: Fri May 2 12:18:53 2016
Keepalive Time:       Fri May 2 13:44:14 2016
Update Time:          Fri May 2 13:02:55 2016

```

Type	Name	Index	Pending Update	Last Update
iflset	aci-1004-ge-2/0/0.1073741834	4	None	36000 Kbps

#### show ancpc cos last-update

```

Per-DSL CoS adjustment:
  Qos Adjust Flag:      TRUE
  ADSL bytes:           20
  ADSL2 bytes:          20
  ADSL2-PLUS bytes:     20
  VDSL overhead adjusted: 90
  VDSL bytes:           20
  VDSL2 overhead adjusted: 95
  VDSL2 bytes:          -20
  SDSL overhead adjusted: 85
  SDSL bytes:           30
  OTHER overhead adjusted: 85
  OTHER bytes:          30

```

```

Per-DSL adjustment for reporting:
  ADSL adjustment factor: 100
  ADSL2 adjustment factor: 100
  ADSL2+ adjustment factor: 100
  VDSL adjustment factor: 100
  VDSL2 adjustment factor: 100
  SDSL adjustment factor: 100
  OTHER adjustment factor: 100

```

```

Keepalive Timer:      45 secs
State:                WRITE_READY
Connect Time:         Fri May 2 12:08:49 2016
Session Time:         Fri May 2 12:18:52 2016
Routing Instance Time: Fri May 2 12:18:53 2016
Keepalive Time:       Fri May 2 13:44:34 2016
Update Time:          Fri May 2 13:02:55 2016

```

Type	Name	Index	Pending Update	Last Update
iflset	aci-1004-ge-2/0/0.1073741834	4	None	36000 Kbps

### show ancp cos pending-update

```
user@host> show ancp cos pending-update
```

```
Per-DSL CoS adjustment:
```

```

Qos Adjust Flag:      TRUE
VDSL overhead adjusted: 90
VDSL bytes:           20
VDSL2 overhead adjusted: 95
VDSL2 bytes:          -20
SDSL overhead adjusted: 85
SDSL bytes:           30
OTHER overhead adjusted: 85
OTHER bytes:          30

```

```
Per-DSL adjustment for reporting:
```

```

ADSL adjustment factor: 100
ADSL2 adjustment factor: 100
ADSL2+ adjustment factor: 100
VDSL adjustment factor: 100
VDSL2 adjustment factor: 100
SDSL adjustment factor: 100
OTHER adjustment factor: 100

```

```

Keepalive Timer:      45 secs
State:                WRITE_READY
Connect Time:         Fri May 2 12:08:49 2016
Session Time:         Fri May 2 12:18:52 2016
Routing Instance Time: Fri May 2 12:18:53 2016
Keepalive Time:       Fri May 2 13:44:34 2016
Update Time:          Fri May 2 13:02:55 2016

```

## show ancp neighbor

<b>Syntax</b>	<pre>show ancp neighbor &lt;brief   detail&gt; &lt;ip-address ip-address&gt; &lt;system-name mac-address&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 9.4.
<b>Description</b>	Display information about all ANCP neighbors or the specified ANCP neighbor, regardless of operational state.
<b>Options</b>	<p><b>brief   detail</b>—(Optional) Display the specified level of detail.</p> <p><b>ip-address ip-address</b> —(Optional) Display information about the neighbor (access node) specified by the IP address.</p> <p><b>system-name mac-address</b>—(Optional) Display information about the neighbor (access node) specified by the MAC address.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show ancp cos on page 1623</a></li> <li>• <a href="#">show ancp subscriber on page 1641</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ancp neighbor on page 1631</a> <a href="#">show ancp neighbor detail on page 1632</a> <a href="#">show ancp neighbor ip-address on page 1633</a> <a href="#">show ancp neighbor system-name on page 1634</a>
<b>Output Fields</b>	<a href="#">Table 81 on page 1628</a> lists the output fields for the <b>show ancp neighbor</b> command. Output fields are listed in the approximate order in which they appear.

*Table 81: show ancp neighbor Output Fields*

Field Name	Field Description	Level of Output
Version	Version of the ANCP implementation: <ul style="list-style-type: none"> <li>• <b>0x31</b>—General Switch Management Protocol (GSMP) version 3, sub-version 1; ANCP version before <i>RFC 6320, Protocol for Access Node Control Mechanism in Broadband Networks</i>.</li> <li>• <b>0x32</b>—ANCP version 1, defined in <i>RFC 6320, Protocol for Access Node Control Mechanism in Broadband Networks</i>.</li> </ul>	<b>brief detail</b> none
IP Address	IP address of the ANCP neighbor.	<b>brief detail</b> none

Table 81: show ancp neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Partid</b>	Number that associates the ANCP message with a specific partition.	<b>brief none</b>
<b>State</b>	Operational state of the ANCP adjacency: <ul style="list-style-type: none"> <li>• <b>Configured</b>—The neighbor has been configured, but has never been in the <b>Established</b> state. An asterisk (*) is prefixed to the neighbor entry for this state.</li> <li>• <b>Establishing</b>—Adjacency negotiations are in progress for the neighbor. An asterisk (*) is prefixed to the neighbor entry for this state. This state is rarely seen because the adjacency is established so quickly.</li> <li>• <b>Established</b>—Adjacency negotiations have succeeded for the neighbor and an ANCP session has been established.</li> <li>• <b>Not Established</b>—Not Established; adjacency negotiations are ready to begin. Indicates that this neighbor previously had been in the <b>Established</b> state; that is, it has lost a previously established adjacency. An asterisk (*) is prefixed to the neighbor entry for this state.</li> </ul>	All levels
<b>Time</b>	How long the adjacency has been up in one of the following formats: <ul style="list-style-type: none"> <li>• <i>nwndnh</i>—number of weeks, days, and hours</li> <li>• <i>nd hh:mm:ss</i>—number of days, hours, minutes, and seconds</li> </ul>	<b>brief detail none</b>
<b>Subscriber Count</b>	Number of subscribers associated with the ANCP neighbor (access local loop).	<b>brief none</b>
<b>Capabilities</b>	Negotiated ANCP capability: <ul style="list-style-type: none"> <li>• <b>Topo</b>—Topology discovery.</li> <li>• <b>OAM</b>—Performance of local Operations Administration Maintenance (OAM) procedures on an access loop controlled by the router.</li> </ul>	All levels
<b>System Name</b>	MAC address of the ANCP neighbor.	<b>detail</b>
<b>TCP Port</b>	TCP port on which ANCP messages are exchanged.	<b>detail</b>
<b>System Instance</b>	Number identifying the ANCP link instance from the edge device's perspective.	<b>detail</b>
<b>Peer Instance</b>	Number identifying the ANCP instance from the access node's perspective. This number is unique and changes when the node or link comes back up after going down.	<b>detail</b>
<b>Timer</b>	Adjacency timer value advertised by the ANCP peer in 100 ms increments; the interval between ANCP ACK messages. This value remains constant for the duration of an ANCP session.	<b>detail</b>
<b>Partition Type</b>	Number that identifies whether partitions are used and how the ID is negotiated: <ul style="list-style-type: none"> <li>• <b>0</b>—No partition.</li> <li>• <b>1</b>—Fixed partition requested.</li> <li>• <b>2</b>—Fixed partition assigned.</li> </ul>	<b>detail</b>

Table 81: show ancp neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Partition Flag</b>	Number that specifies the type of partition requested: 1 (new adjacency) or 2 (recovered adjacency).	<b>detail</b>
<b>Partition Identifier</b>	<p>Number that identifies a logical partition of an access node with which the ANCP agent has formed an adjacency.</p> <p>A value of zero indicates that the agent supports each neighbor on an IP address over a single TCP session with a partition ID of zero. This is the default support case.</p> <p>A nonzero value indicates that the agent supports each neighbor on an IP address over a single TCP session with a nonzero partition ID.</p>	<b>detail</b>
<b>Partition Adjacencies</b>	Number of adjacencies that share the partition.	<b>detail</b>
<b>Dead Timer</b>	Remaining period that the edge device waits for adjacency packets from a neighbor before declaring the neighbor to be down. The maximum dead time value is three times the configured adjacency timer value. This field displays the current value based on the time that the last adjacency packet was received.	<b>detail</b>
<b>Received Syn Count</b>	Number of synchronization messages received from neighbors to maintain adjacencies.	<b>detail</b>
<b>Received Synack Count</b>	Number of synchronization acknowledgment messages received from neighbors in response to the node's synchronization messages.	<b>detail</b>
<b>Received Rstack Count</b>	Number of messages received from neighbors indicating that the link to the neighbor needs to be reset.	<b>detail</b>
<b>Received Ack Count</b>	Number of acknowledgment messages periodically received from neighbors after an adjacency has been established.	<b>detail</b>
<b>Received Port Up Count</b>	Number of status messages received from neighbors indicating that a port has transitioned to the up state.	<b>detail</b>
<b>Received Port Down Count</b>	Number of status messages received from neighbors indicating that a port has transitioned to the down state.	<b>detail</b>
<b>Received Generic Resp Count</b>	Number of generic response messages received from neighbors.	<b>detail</b>
<b>Received Adjacency Update Count</b>	Number of adjacency update messages received from neighbors.	<b>detail</b>
<b>Received OAM Count</b>	Number of OAM responses received from neighbors in reply to <b>request</b> commands.	<b>detail</b>
<b>Received Other Count</b>	Number of all other ANCP message packets received from neighbors that do not fit into one of the other categories.	<b>detail</b>
<b>Sent Syn Count</b>	Number of synchronization messages sent to neighbors to maintain adjacencies.	<b>detail</b>

Table 81: show ancp neighbor Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Sent Synack Count</b>	Number of synchronization acknowledgment messages sent to neighbors in response to the their synchronization messages.	<b>detail</b>
<b>Sent Rstack Count</b>	Number of messages sent to neighbors indicating that the link to the neighbor needs to be reset.	<b>detail</b>
<b>Sent Ack Count</b>	Number of acknowledgment messages periodically sent to neighbors after an adjacency has been established.	<b>detail</b>
<b>Sent Generic Resp Count</b>	Number of generic response messages sent to neighbors.	<b>detail</b>
<b>Sent OAM Count</b>	Number of OAM <b>request</b> commands sent to neighbors.	<b>detail</b>
<b>Max Discovery Limit Exceed Count</b>	Number of times that the maximum number of discovery table entries accepted from the neighbor has been exceeded.	<b>detail</b>
<b>Result Codes</b>	<p>Number of generic response messages sent to neighbors that include each of the following result codes:</p> <ul style="list-style-type: none"> <li>• <b>Invalid Request Message Count</b>—A properly formed request message violated the protocol because of timing (such as a race condition) or direction of transmission.</li> <li>• <b>Specified Port(s) Down Count</b>—One or more of the specified ports are down because of a state mismatch between the router and an ANCP control application.</li> <li>• <b>Out of Resources Count</b>—ANCP is out of resources, probably not related to the access lines. This result code is sent only by an access node.</li> <li>• <b>Request Msg Not Implemented Count</b>—</li> <li>• <b>Malformed Msg Count</b>—Message is malformed because it was corrupted in transit or there was an implementation error at either end of the connection.</li> <li>• <b>TLV Missing Count</b>—One or more mandatory TLVs was missing from a request.</li> <li>• <b>Invalid TLV Contents Count</b>—The contents of one or more TLVs in the request do not match its required specification.</li> <li>• <b>Non-Existent Port(s) Count</b>—One or more of the ports specified in a request do not exist, possibly because of a configuration mismatch between the access node and the router or AAA.</li> </ul>	<b>detail</b>

## Sample Output

show ancp neighbor

```

user@host> show ancp neighbor
  Version IP Address      PartID  State      Time      Subscriber
Capabilities
                                Count
  0x31    203.0.113.13      0       Established 11:24      2
  Topo
  0x31    203.0.113.15      0       Not Estblshd 2:45      2
  Topo
  * 0x0    198.51.100.102      0       Establishing 0          0

```

```

* 0x0    192.0.2.0      0      Configured    0      0
* 0x0    192.0.2.1      0      Configured    0      0

```

### show ancp neighbor detail

```
user@host> show ancp neighbor detail
```

#### Neighbor Information

```

Version           : 0x31
IP Address        : 192.0.2.85
System Name       : 00:00:5e:00:53:01
  Up Time         : 26
  TCP Port        : 32666
  State           : Established
  Subscriber Count : 4
  Capabilities     : Topo
  System Instance  : 2
  Peer Instance    : 20
  Adjacency Timer (in 100ms) : 100
  Peer Adjacency Timer (in 100ms) : 100
  Partition Type   : 0
  Partition Flag    : 1
  Partition Identifier : 0
  Partition Adjacencies : 0
  Dead Timer       : 23
  Received Syn Count : 1
  Received Synack Count : 1
  Received Rstack Count : 0
  Received Ack Count : 4
  Received Port Up Count : 10
  Received Port Down Count : 0
  Received Generic Resp Count : 0
  Received Adjacency Update Count : 0
  Received OAM Count : 0
  Received Other Count : 0
  Sent Syn Count : 1
  Sent Synack Count : 2
  Sent Rstack Count : 0
  Sent Ack Count : 3
  Sent Generic Resp Count : 0
  Sent OAM Count : 0
  Max Discovery Limit Exceed Count : 0
Result Codes:
  Invalid Request Message Count : 0
  Specified Port(s) Down Count : 0
  Out of Resources Count : 0
  Request Msg Not Implemented Count : 0
  Malformed Msg Count : 0
  TLV Missing Count : 0
  Invalid TLV Contents Count : 0
  Non-Existent Port(s) Count : 0

```

```

Version           : 0x32
IP Address        : 192.168.9.1
System Name       : 00:00:5e:00:53:02
  Up Time         : 36
  TCP Port        : 61408
  State           : Not Established
  Subscriber Count : 1
  Capabilities     : Topology Discovery
  System Instance  : 12

```

```

Peer Instance                : 1
Adjacency Timer (in 100ms)   : 50
Peer Adjacency Timer (in 100ms) : 100
Partition Type               : 0
Partition Flag               : 1
Partition Identifier         : 0
Partition Adjacencies        : 0
Dead Timer                   : 23
Received Syn Count           : 24
Received Synack Count        : 20
Received Rstack Count        : 2
Received Ack Count           : 9
Received Port Up Count       : 5
Received Port Down Count     : 0
Received Generic Resp Count  : 0
Received Adjacency Update Count : 0
Received OAM Responses Count : 2
Received Other Count         : 0
Sent Syn Count               : 20
Sent Synack Count            : 24
Sent Rstack Count            : 1
Sent Generic Resp Count      : 0
Sent Ack Count               : 9
Sent OAM Requests Count      : 4
Max Discovery Limit Exceed Count : 0
Result Codes:
Invalid Request Message Count : 0
Specified Port(s) Down Count  : 0
Out of Resources Count         : 0
Request Msg Not Implemented Count: 0
Malformed Msg Count           : 0
TLV Missing Count             : 0
Invalid TLV Contents Count     : 0
Non-Existent Port(s) Count     : 0
Received                      : 0
Sent                          : 0

```

### show ancp neighbor ip-address

```
user@host> show ancp neighbor ip-address 192.0.2.85
```

```

Neighbor Information
Version                : 0x32
IP Address             : 192.0.2.85
System Name            : 00:00:5e:00:53:ba
Up Time                : 26
TCP Port               : 32666
State                  : Established
Subscriber Count       : 4
Capabilities           : Topo
System Instance        : 2
Peer Instance          : 20
Adjacency Timer (in 100ms) : 100
Peer Adjacency Timer (in 100ms) : 100
Partition Type         : 0
Partition Flag         : 1
Partition Identifier    : 0
Partition Adjacencies  : 0
Dead Timer             : 23
Received Syn Count     : 1
Received Synack Count  : 1
Received Rstack Count  : 0
Received Ack Count     : 4

```

```
Received Port Up Count      : 10
Received Port Down Count    : 0
Received Generic Resp Count : 0
Received Adjacency Update Count : 0
Received OAM Count          : 0
Received Other Count        : 0
Sent Syn Count              : 1
Sent Synack Count           : 2
Sent Rstack Count           : 0
Sent Ack Count              : 3
Sent Generic Resp Count     : 0
Sent OAM Count              : 0
Max Discovery Limit Exceed Count : 0
Result Codes:
Invalid Request Message Count : 0
Specified Port(s) Down Count  : 0
Out of Resources Count        : 0
Request Msg Not Implemented Count: 0
Malformed Msg Count           : 0
TLV Missing Count             : 0
Invalid TLV Contents Count    : 0
Non-Existent Port(s) Count    : 0
```

### show ancp neighbor system-name

```
user@host> show ancp neighbor 00:00:5e:00:53:ba detail
```

#### Neighbor Information

```
Version      : 0x31
IP Address   : 203.0.113.101
System Name  : 00:00:5e:00:53:ba
Up Time      : 19
TCP Port     : 1028
State        : Established
Subscriber Count : 2
Capabilities  : Topology Discovery, OAM
System Instance : 1
Peer Instance  : 10
Adjacency Timer (in 100ms) : 100
Peer Adjacency Timer (in 100ms) : 250
Partition Type : 0
Partition Flag : 1
Partition Identifier : 0
Partition Adjacencies : 0
Dead Timer    : 55
Received Syn Count : 1

Received Synack Count : 1
Received Rstack Count : 0
Received Ack Count    : 1
Received Port Up Count : 34
Received Port Down Count : 0
Received Generic Resp Count : 0
Received Adjacency Update Count : 0
Received OAM Responses Count : 2
Received Other Count   : 0
Sent Syn Count         : 1
Sent Synack Count      : 1
Sent Rstack Count      : 0
Sent Ack Count         : 3
Sent Generic Resp Count : 0
```

Sent OAM Requests Count	: 4	
Max Discovery Limit Exceed Count	: 3	
Result Codes:	Received	Sent
Invalid Request Message Count	: 0	0
Specified Port(s) Down Count	: 0	0
Out of Resources Count	: 0	0
Request Msg Not Implemented Count	: 0	0
Malformed Msg Count	: 0	0
TLV Missing Count	: 0	0
Invalid TLV Contents Count	: 0	0
Non-Existent Port(s) Count	: 0	0

## show ancp statistics

---

Syntax	<code>show ancp statistics</code> <code>&lt;ip-address <i>ip-address</i>&gt;</code> <code>&lt;system-name <i>mac-address</i>&gt;</code>
Release Information	Command introduced in Junos OS Release 13.3.
Description	Display statistics for all ANCP neighbors (access nodes) or the specified ANCP neighbor.
Options	<b>none</b> —Display statistics for all ANCP neighbors, including global statistics not show for individual neighbors.  <b>ip-address <i>ip-address</i></b> —(Optional) Display statistics for only the neighbor with the specified IP address.  <b>system-name <i>mac-address</i></b> —(Optional) Display statistics for only the neighbor with the specified MAC address.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show ancp cos on page 1623</a></li><li>• <a href="#">show ancp neighbor on page 1628</a></li><li>• <a href="#">show ancp subscriber on page 1641</a></li></ul>
List of Sample Output	<a href="#">show ancp statistics on page 1638</a> <a href="#">show ancp statistics ip-address on page 1639</a> <a href="#">show ancp statistics system-name on page 1639</a>
Output Fields	<a href="#">Table 82 on page 1636</a> lists the output fields for the <b>show ancp statistics</b> command. Output fields are listed in the approximate order in which they appear.

*Table 82: show ancp statistics Output Fields*

Field Name	Field Description
Number of neighbors	Total count of ANCP neighbors.
Number of subscribers	Total count of ANCP subscribers.
Accept Count	Number of neighbor TCP/IP sessions accepted on listener socket.

Table 82: show ancp statistics Output Fields (continued)

Field Name	Field Description
<b>Accept Fail Count</b>	Number of neighbor TCP/IP sessions that failed due to one of the following causes: session already exists, maximum number of ANCP connections exceeded, creation of session or neighbor failed, or protocol start failed.
<b>No Config Accept Deny Count</b>	Number of neighbor TCP/IP sessions that failed because the neighbor was not configured.
<b>Received Syn Count</b>	Number of synchronization messages received from neighbors to maintain adjacencies.
<b>Received Synack Count</b>	Number of synchronization acknowledgment messages received from neighbors in response to the node's synchronization messages.
<b>Received Rstack Count</b>	Number of messages received from neighbors indicating that the link to the neighbor needs to be reset.
<b>Received Ack Count</b>	Number of acknowledgment messages periodically received from neighbors after an adjacency has been established.
<b>Received Port Up Count</b>	Number of status messages received from neighbors indicating that a port has transitioned to the up state.
<b>Received Port Down Count</b>	Number of status messages received from neighbors indicating that a port has transitioned to the down state.
<b>Received Generic Resp Count</b>	Number of generic response messages received from neighbors.
<b>Received Adjacency Update Count</b>	Number of adjacency update messages received from neighbors.
<b>Received OAM Count</b>	Number of OAM responses received from neighbors in reply to <b>request</b> commands.
<b>Received Other Count</b>	Number of all other ANCP message packets received from neighbors that do not fit into one of the other categories.
<b>Sent Syn Count</b>	Number of synchronization messages sent to neighbors to maintain adjacencies.
<b>Sent Synack Count</b>	Number of synchronization acknowledgment messages sent to neighbors in response to the their synchronization messages.
<b>Sent Rstack Count</b>	Number of messages sent to neighbors indicating that the link to the neighbor needs to be reset.
<b>Sent Ack Count</b>	Number of acknowledgment messages periodically sent to neighbors after an adjacency has been established.
<b>Sent Generic Resp Count</b>	Number of generic response messages sent to neighbors.

Table 82: show ancpl statistics Output Fields (continued)

Field Name	Field Description
Sent OAM Count	Number of OAM request commands sent to neighbors.
Result Codes	<p>Number of generic response messages sent to neighbors that include each of the following result codes:</p> <ul style="list-style-type: none"> <li>• <b>Invalid Request Message Count</b>—A properly formed request messages violated the protocol because of timing (such as a race condition) or direction of transmission.</li> <li>• <b>Specified Port(s) Down Count</b>—One or more of the specified ports are down because of a state mismatch between the router and an ANCP control application.</li> <li>• <b>Out of Resources Count</b>—the ANCP agent is out of resources, probably not related to the access lines. This result code is sent only by an access node.</li> <li>• <b>Request Msg Not Implemented Count</b>—</li> <li>• <b>Malformed Msg Count</b>—Message is malformed because it was corrupted in transit or there was an implementation error at either end of the connection.</li> <li>• <b>TLV Missing Count</b>—One or more mandatory TLVs was missing from a request.</li> <li>• <b>Invalid TLV Contents Count</b>—The contents of one or more TLVs in the request do not match its required specification.</li> <li>• <b>Non-Existent Port(s) Count</b>—One or more of the ports specified in a request do not exist, possibly because of a configuration mismatch between the access node and the router or AAA.</li> </ul>

## Sample Output

### show ancpl statistics

```

user@host> show ancpl statistics
Statistics
  Number of neighbors           : 4
  Number of subscribers        : 6
  Accept Count                  : 0
  Accept Fail Count             : 0
  No Config Accept Deny Count  : 0
  Received Syn Count            : 2
  Received Synack Count         : 1
  Received Rstack Count         : 0
  Received Ack Count            : 8
  Received Port Up Count        : 7
  Received Port Down Count      : 0
  Received Generic Resp Count   : 0
  Received Adjacency Update Count : 0
  Received OAM Count            : 0
  Received Other Count          : 0
  Sent Syn Count                : 1
  Sent Synack Count             : 1
  Sent Rstack Count             : 0
  Sent Ack Count                : 17
  Sent Generic Resp Count       : 0
  Sent OAM Count                : 4
Result Codes:
  Invalid Request Message Count : 0
  Specified Port(s) Down Count  : 0
Received Sent
0 0

```

Out of Resources Count	: 0	0
Request Msg Not Implemented Count	: 0	0
Malformed Msg Count	: 0	0
TLV Missing Count	: 0	0
Invalid TLV Contents Count	: 0	0
Non-Existent Port(s) Count	: 0	0

### show ancp statistics ip-address

```
user@host> show ancp statistics ip-address 203.0.113.1
Statistics
  Received Syn Count           : 2
  Received Synack Count       : 1
  Received Rstack Count       : 0
  Received Ack Count          : 8
  Received Port Up Count      : 7
  Received Port Down Count    : 0
  Received Generic Resp Count : 0
  Received Adjacency Update Count : 0
  Received OAM Count          : 0
  Received Other Count        : 0
  Sent Syn Count              : 1
  Sent Synack Count           : 1
  Sent Rstack Count           : 0
  Sent Ack Count              : 17
  Sent Generic Resp Count     : 0
  Sent OAM Count              : 4
Result Codes:
  Received      Sent
Invalid Request Message Count : 0      0
Specified Port(s) Down Count  : 0      0
Out of Resources Count        : 0      0
Request Msg Not Implemented Count: 0      0
Malformed Msg Count           : 0      0
TLV Missing Count             : 0      0
Invalid TLV Contents Count    : 0      0
Non-Existent Port(s) Count    : 0      0
```

### show ancp statistics system-name

```
user@host> show ancp statistics system-name 00:00:5E:00:53:02
Statistics
  Received Syn Count           : 2
  Received Synack Count       : 1
  Received Rstack Count       : 0
  Received Ack Count          : 8
  Received Port Up Count      : 7
  Received Port Down Count    : 0
  Received Generic Resp Count : 0
  Received Adjacency Update Count : 0
  Received OAM Count          : 0
  Received Other Count        : 0
  Sent Syn Count              : 1
  Sent Synack Count           : 1
  Sent Rstack Count           : 0
  Sent Ack Count              : 17
  Sent Generic Resp Count     : 0
  Sent OAM Count              : 4
Result Codes:
  Received      Sent
Invalid Request Message Count : 0      0
Specified Port(s) Down Count  : 0      0
Out of Resources Count        : 0      0
Request Msg Not Implemented Count: 0      0
Malformed Msg Count           : 0      0
TLV Missing Count             : 0      0
Invalid TLV Contents Count    : 0      0
Non-Existent Port(s) Count    : 0      0
```

Invalid Request Message Count	: 0	0
Specified Port(s) Down Count	: 0	0
Out of Resources Count	: 0	0
Request Msg Not Implemented Count	: 0	0
Malformed Msg Count	: 0	0
TLV Missing Count	: 0	0
Invalid TLV Contents Count	: 0	0
Non-Existent Port(s) Count	: 0	0

## show ancp subscriber

<b>Syntax</b>	<pre>show ancp subscriber &lt;brief   detail&gt; &lt;identifier <i>identifier</i>&gt; &lt;ip-address <i>ip-address</i>&gt; &lt;system-name <i>mac-address</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 9.4.</p> <p><b>neighbor</b> option replaced with <b>ip-address</b> in Junos OS Release 16.1.</p> <p><b>system-name</b> option introduced in Junos OS Release 16.1.</p>
<b>Description</b>	<p>Display information about active subscribers regardless of the subscriber's operational state, for all subscribers (local access loops), the subscriber associated with the access line specified by an ACI, or the subscriber associated with the specified ANCP neighbor (access node).</p> <p>After an ancpd restart, this command displays orphaned entries (marked with an <b>o</b>) for subscriber sessions that were established before the restart but which have not yet been reestablished. As sessions are reestablished, the number of orphaned entries displayed by the command decreases. The number reaches zero when all sessions are reestablished or when the orphaned-interface timer expires.</p>
<b>Options</b>	<p><b>none</b>—Display information about all subscribers.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of detail.</p> <p><b>identifier <i>identifier</i></b>—(Optional) Display information about the subscriber associated with the access line (ACI) specified by the access identifier.</p> <p><b>ip-address <i>ip-address</i></b> —(Optional) Display information about the subscribers connected to the access node specified by the IP address.</p> <p><b>system-name <i>mac-address</i></b>—(Optional) Display information about the subscribers connected to the access node specified by the MAC address.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear ancp subscriber on page 1618</a></li> <li>• <a href="#">show ancp cos on page 1623</a></li> <li>• <a href="#">show ancp neighbor on page 1628</a></li> <li>• <a href="#">show ancp statistics on page 1636</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show ancp subscriber on page 1644</a></p> <p><a href="#">show ancp subscriber (After ancpd Restart) on page 1645</a></p>

[show ancp subscriber brief on page 1645](#)

[show ancp subscriber detail on page 1645](#)

[show ancp subscriber identifier identifier-string detail on page 1646](#)

**Output Fields** Table 83 on page 1642 lists the output fields for the **show ancp subscriber** command. Output fields are listed in the approximate order in which they appear.

*Table 83: show ancp subscriber Output Fields*

Field Name	Field Description	Level of Output
<b>Loop Identifier</b>	<p>Access loop identifier as sent by the access node and configured to map the subscriber to an interface.</p> <p>An asterisk (*) indicates that the information might be stale due to receiving a Port Down message with a DSL Line State of Idle.</p> <p>Two asterisks (**) indicate that the neighbor associated with the subscriber has lost its adjacency. In this case, the DSL Line State might be Established.</p> <p>An <b>o</b> indicates that the entry is for an orphaned interface and represents a previously established subscriber session that has not been reestablished after an ancpc restart.</p> <p>The number of orphaned entries decreases as the ANCP neighbors reestablish adjacencies and the protocol subscriber sessions are reestablished. The command output indicates this by removing the <b>o</b> marker.</p> <p>Eventually the number of orphaned entries reaches zero, because either all the adjacencies and subscriber sessions have been reestablished or any remaining orphaned entries are removed when the orphaned-interface timer expires.</p>	<b>brief none</b>
<b>DSL Line State</b>	State of the DSL line: <b>Idle</b> , <b>Showtime</b> , or <b>Silent</b> .	<b>brief detail</b>
<b>Access Type</b>	Type of access line employed by the access node: <b>ADSL1</b> , <b>ADSL2</b> , <b>ADSL2+</b> , <b>VDSL1</b> , <b>VDSL2</b> , <b>SDSL</b> , <b>G.fast</b> , <b>VDSL2 Annex Q</b> , <b>SDSL bonded</b> , <b>VDSL2 bonded</b> , <b>G.fast bonded</b> , <b>VDSL2 Annex Q bonded</b> or <b>OTHER</b> .	<b>brief detail none</b>
<b>Interface</b>	Name of the interface set or logical interface.	<b>brief detail none</b>
<b>Rate Kbps</b>	Actual downstream data rate for this local loop.	<b>brief none</b>
<b>Neighbor</b>	IP address of ANCP neighbor (access node).	<b>brief none</b>

Table 83: show ancp subscriber Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Access Loop Circuit Identifier</b>	<p>Access loop circuit identifier as sent by the access node and configured to map the subscriber to an interface.</p> <p>An asterisk (*) indicates that the information might be stale due to receiving a Port Down message with a DSL Line State of Idle.</p> <p>Two asterisks (**) indicate that the neighbor associated with the subscriber has lost its adjacency. In this case, the DSL Line State might be Established.</p>	<b>detail</b>
<b>Neighbor IP Address</b>	IP address of the ANCP neighbor (access node).	<b>detail</b>
<b>Aggregate Circuit Identifier Binary</b>	Binary identifier for the VLAN circuit ID.	<b>detail</b>
<b>Tech Type</b>	Type of technology employed by the subscriber. Currently Junos OS supports <b>DSL</b> technology type only.	<b>detail</b>
<b>DSL Line Data Link</b>	Data link protocol employed on the access loop: <b>AAL5</b> or <b>Ethernet</b> .	<b>detail</b>
<b>DSL Line Encapsulation</b>	<p>Encapsulation type on the access loop, for Ethernet only:</p> <ul style="list-style-type: none"> <li>0—NA, type not conveyed</li> <li>1—Untagged Ethernet</li> <li>2—Single-tagged Ethernet</li> </ul>	<b>detail</b>
<b>DSL Line Encapsulation Payload</b>	<p>Payload carried across the access loop:</p> <ul style="list-style-type: none"> <li>0—NA, type not conveyed</li> <li>1—PPPoA LLC</li> <li>2—PPPoA null</li> <li>3—IPoA LLC</li> <li>4—IPoA null</li> <li>5—Ethernet over AAL5 LLC with FCS</li> <li>6—Ethernet over AAL5 LLC without FCS</li> <li>7—Ethernet over AAL5 null with FCS</li> <li>8—Ethernet over AAL5 null without FCS</li> </ul>	<b>detail</b>
<b>Interface Type</b>	Type of interface employed for subscriber traffic: <b>ifl</b> for a single VLAN or <b>interface-set</b> for a configured group of VLANs.	<b>detail</b>
<b>Actual Net Data Upstream</b>	Actual upstream data rate for this local loop, in Kbps.	<b>detail</b>
<b>Actual Net Data Downstream</b>	Actual downstream data rate for this local loop, in Kbps.	<b>detail</b>

Table 83: show ancp subscriber Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Minimum Net Data Upstream</b>	Minimum upstream data rate desired by the operator for this local loop, in Kbps.	<b>detail</b>
<b>Minimum Net Data Downstream</b>	Minimum downstream data rate desired by the operator for this local loop, in Kbps.	<b>detail</b>
<b>Maximum Net Data Upstream</b>	Maximum upstream data rate desired by the operator for this local loop, in Kbps.	<b>detail</b>
<b>Maximum Net Data Downstream</b>	Maximum downstream data rate desired by the operator for this local loop, in Kbps.	<b>detail</b>
<b>Attainable Net Data Upstream</b>	Maximum attainable upstream data rate for this local loop, in Kbps.	<b>detail</b>
<b>Attainable Net Data Downstream</b>	Maximum attainable downstream data rate for this local loop, in Kbps.	<b>detail</b>
<b>Minimum Low Power Data Downstream</b>	Minimum downstream data rate desired by the operator for this local loop in low power state, in Kbps.	<b>detail</b>
<b>Minimum Low Power Data Upstream</b>	Minimum upstream data rate desired by the operator for this local loop in low power state, in Kbps.	<b>detail</b>
<b>Maximum Interleave Delay Downstream</b>	Maximum interleaving delay for downstream data, in milliseconds.	<b>detail</b>
<b>Maximum Interleave Delay Upstream</b>	Maximum interleaving delay for upstream data, in milliseconds.	<b>detail</b>
<b>Actual Interleave Delay Downstream</b>	Actual interleaving delay for downstream data, in milliseconds.	<b>detail</b>
<b>Actual Interleave Delay Upstream</b>	Actual interleaving delay for upstream data, in milliseconds.	<b>detail</b>

## Sample Output

show ancp subscriber

```

user@host> show ancp subscriber
  Loop Identifier   DSL Line  Tech Type   Access Type   Interface
Rate  Neighbor
      State
**circuit 101      Idle     DSL        ADSL1        ----        Kbps        32
 203.0.113.13
**circuit 102      Idle     DSL        ADSL1        ----        Kbps        32
 203.0.113.13

```

```

circuit 301          Showtime DSL      ADSL1    ----      32
203.0.113.15
circuit 302          Showtime DSL      ADSL1    ----      32
203.0.113.15

```

### show ancp subscriber (After ancpd Restart)

```

user@host> show ancp subscriber
  Loop Identifier      DSL Line  Tech Type      Access Type  Interface
Rate      Neighbor
State
o circuit 201          Showtime DSL      ADSL1    ----      Kbps      222222
o circuit 202          Showtime DSL      ADSL1    ----      222222

```

### show ancp subscriber brief

```

user@host> show ancp subscriber brief

  Loop Identifier      Type      Interface      Rate      Neighbor
                        Kbps
port-1-10             VDSL2     set-ge-10410   64        203.0.113.102
port-1-11             VDSL2     set-ge-10411   64        203.0.113.111
port-2-10             VDSL2     ge-1/0/4.12    64        203.0.113.112
port-2-11             VDSL2     ge-1/0/4.13    64        203.0.113.113

```

### show ancp subscriber detail

```

user@host> show ancp subscriber detail
Subscriber Information
* Access Loop Circuit Identifier : circuit 101
  Neighbor IP Address           : 203.0.113.13
  Aggregate Circuit Identifier Binary : 0/0
  Tech Type                     : DSL
  Access Type                   : ADSL1
  DSL Line State                 : Idle
  DSL Line Data Link            : Data link 2
  DSL Line Encapsulation        : N/A
  DSL Line Encapsulation Payload : N/A
  Interface Type                : N/A
  Interface                     : ----
  Actual Net Data Upstream      : 32
  Actual Net Data Downstream    : 32
  Minimum Net Data Upstream     : 0
  Minimum Net Data Downstream   : 0
  Maximum Net Data Upstream     : 0
  Maximum Net Data Downstream   : 0
  Attainable Net Data Upstream  : 1024
  Attainable Net Data Downstream : 8192
  Minimum Low Power Data Downstream : 32
  Minimum Low Power Data Upstream : 32
  Maximum Interleave Delay Downstream : 20
  Maximum Interleave Delay Upstream : 20
  Actual Interleave Delay Downstream : 20
  Actual Interleave Delay Upstream : 20
* Access Loop Circuit Identifier: circuit 102

```

```
Neighbor IP Address           : 213.0.113.13
Aggregate Circuit Identifier Binary : 0/0
Tech Type                     : DSL
Access Type                   : ADSL1
DSL Line State                : Idle
DSL Line Data Link            : Data link 2
DSL Line Encapsulation        : N/A
DSL Line Encapsulation Payload : N/A
Interface Type                : N/A
Interface                     : ----
Actual Net Data Upstream      : 32
Actual Net Data Downstream    : 32
Minimum Net Data Upstream     : 0
Minimum Net Data Downstream   : 0
Maximum Net Data Upstream     : 0
Maximum Net Data Downstream   : 0
Attainable Net Data Upstream  : 1024
Attainable Net Data Downstream : 8192
Minimum Low Power Data Downstream : 32
Minimum Low Power Data Upstream : 32
Maximum Interleave Delay Downstream : 20
Maximum Interleave Delay Upstream : 20
Actual Interleave Delay Downstream : 20
Actual Interleave Delay Upstream : 20
...
```

#### [show ancp subscriber identifier identifier-string detail](#)

```
user@host> show ancp subscriber identifier port-1-11 detail
```

```
Access Loop Identifier : port-1-11
Neighbor IP Address    : 203.0.113.112
Aggregate Circuit Identifier Binary : 0/0
DSL Type               : DSL 0
Interface Type         : interface-set
Interface              : set-ge-10411
DSL Line State         : Show Time
Actual Net Data Upstream : 64
Actual Net Data Downstream : 64
DSL Line Data Link     : AAL5
DSL Line Encapsulation : N/A
DSL Line Encapsulation Payload : N/A
Minimum Net Data Upstream : 64
Minimum Net Data Downstream : 64
Maximum Net Data Upstream : 64
Maximum Net Data Downstream : 64
Attainable Net Data Upstream : 64
Attainable Net Data Downstream : 64
Minimum Low Power Data Downstream : 64
Minimum Low Power Data Upstream : 64
Maximum Interleave Delay Downstream : 50
Maximum Interleave Delay Upstream : 50
Actual Interleave Delay Downstream : 50
Actual Interleave Delay Upstream : 50
```

## show ancp summary

<b>Syntax</b>	show ancp summary
<b>Release Information</b>	Command introduced in Junos OS Release 13.1.
<b>Description</b>	Display a summary of the counts and states for all ANCP neighbors and subscribers.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show ancp neighbor on page 1628</a></li> <li>• <a href="#">show ancp summary neighbor on page 1649</a></li> <li>• <a href="#">show ancp subscriber on page 1641</a></li> <li>• <a href="#">show ancp summary subscriber on page 1651</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ancp summary on page 1648</a>
<b>Output Fields</b>	<a href="#">Table 84 on page 1647</a> lists the output fields for the <b>show ancp summary</b> command. Output fields are listed in the approximate order in which they appear.

*Table 84: show ancp summary Output Fields*

Field Name	Field Description
<b>Configured</b>	Number of ANCP neighbors in the <b>Configured</b> state; that is, that have been configured but never established.
<b>Establishing</b>	Number of ANCP neighbors in the <b>Establishing</b> state; that is, where negotiations are in progress.
<b>Established</b>	Number of ANCP neighbors in the <b>Established</b> state; that is, where negotiations have succeeded and the ANCP session has been established.
<b>Not Estblshd</b>	Number of ANCP neighbors in the <b>Not Estblshd</b> state; that is, that have lost a previously established adjacency and are ready to begin negotiations.
<b>Total</b>	Total number of ANCP neighbors; sum of neighbors in the <b>Configured</b> , <b>Establishing</b> , <b>Established</b> , and <b>Not Estblshd</b> states.
<b>Showtime</b>	Number of DSL lines in <b>Showtime</b> state.
<b>Idle</b>	Number of DSL lines in <b>Idle</b> state.
<b>Silent</b>	Number of DSL lines in <b>Silent</b> state.

*Table 84: show ancp summary Output Fields (continued)*

Field Name	Field Description
<b>Unknown</b>	Number of DSL lines where the state is not <b>Showtime</b> , <b>Idle</b> , or <b>Silent</b> .
<b>Total</b>	Total number of DSL lines (ANCP subscribers); sum of DSL lines in the <b>Showtime</b> , <b>Idle</b> , <b>Silent</b> , and <b>Unknown</b> states.

## Sample Output

### show ancp summary

```
user@host> show ancp summary
```

#### Neighbors Summary:

Configured	Establishing	Established	Not Established	Total
-----	-----	-----	-----	-----
22	0	2	0	24

#### Subscribers Summary:

Showtime	Idle	Silent	Unknown	Total
-----	-----	-----	-----	-----
4	0	0	0	4

## show ancp summary neighbor

<b>Syntax</b>	show ancp summary neighbor <ip-address <i>ip-address</i>   system-name <i>mac-address</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 13.1.
<b>Description</b>	Display a summary of the counts and states for all ANCP neighbors and of the neighbor's subscribers when you specify a particular neighbor.
<b>Options</b>	<b>ip-address <i>ip-address</i></b> —(Optional) IP address of the ANCP neighbor (access node). <b>system-name <i>mac-address</i></b> —(Optional) MAC address of the ANCP neighbor (access node).
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show ancp summary on page 1647</a></li> <li>• <a href="#">show ancp subscriber on page 1641</a></li> <li>• <a href="#">show ancp summary subscriber on page 1651</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ancp summary neighbor on page 1650</a> <a href="#">show ancp summary neighbor (IP Address) on page 1650</a> <a href="#">show ancp summary neighbor (MAC Address) on page 1650</a>
<b>Output Fields</b>	Table 85 on page 1649 lists the output fields for the <b>show ancp summary</b> command. Output fields are listed in the approximate order in which they appear.

Table 85: show ancp summary neighbor Output Fields

Field Name	Field Description
<b>Configured</b>	Number of ANCP neighbors in the <b>Configured</b> state; that is, that have been configured but never established.
<b>Establishing</b>	Number of ANCP neighbors in the <b>Establishing</b> state; that is, where negotiations are in progress.
<b>Established</b>	Number of ANCP neighbors in the <b>Established</b> state; that is, where negotiations have succeeded and the ANCP session has been established.
<b>Not Estblshd</b>	Number of ANCP neighbors in the <b>Not Estblshd</b> state; that is, that have lost a previously established adjacency and are ready to begin negotiations.
<b>Total</b>	Total number of ANCP neighbors; sum of neighbors in the <b>Configured</b> , <b>Establishing</b> , <b>Established</b> , and <b>Not Estblshd</b> states.

Table 85: show ancp summary neighbor Output Fields (continued)

Field Name	Field Description
<b>Showtime</b>	Number of DSL lines for the neighbor in <b>Showtime</b> state.
<b>Idle</b>	Number of DSL lines for the neighbor in <b>Idle</b> state.
<b>Silent</b>	Number of DSL lines for the neighbor in <b>Silent</b> state.
<b>Unknown</b>	Number of DSL lines for the neighbor where the state is not <b>Showtime</b> , <b>Idle</b> , or <b>Silent</b> .
<b>Total</b>	Total number of DSL lines (ANCP subscribers); sum of DSL lines in the <b>Showtime</b> , <b>Idle</b> , <b>Silent</b> , and <b>Unknown</b> states.

## Sample Output

### show ancp summary neighbor

```
user@host> show ancp summary neighbor
```

Neighbors Summary:

Configured	Establishing	Established	Not Established	Total
22	0	2	0	24

### show ancp summary neighbor (IP Address)

```
user@host> show ancp summary neighbor ip-address 192.168.10.1
```

Neighbor Summary:192.168.10.1 status Established

Subscribers Summary:

Show Time	Idle	Silent	Unknown	Total
6	0	0	0	6

### show ancp summary neighbor (MAC Address)

```
user@host> show ancp summary neighbor system-name 00:00:5E:00:53:02
```

Neighbor Summary:00:00:5E:00:53:02 status Established

Subscribers Summary:

Show Time	Idle	Silent	Unknown	Total
5	1	2	0	8

## show ancp summary subscriber

<b>Syntax</b>	show ancp summary subscriber
<b>Release Information</b>	Command introduced in Junos OS Release 13.1.
<b>Description</b>	Display a summary of the counts and states for all ANCP subscribers.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show ancp summary on page 1647</a></li> <li>• <a href="#">show ancp neighbor on page 1628</a></li> <li>• <a href="#">show ancp summary neighbor on page 1649</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ancp summary subscriber on page 1651</a>
<b>Output Fields</b>	Table 86 on page 1651 lists the output fields for the <b>show ancp summary subscriber</b> command. Output fields are listed in the approximate order in which they appear.

*Table 86: show ancp summary subscriber Output Fields*

Field Name	Field Description
<b>Showtime</b>	Number of DSL lines in <b>Showtime</b> state.
<b>Idle</b>	Number of DSL lines in <b>Idle</b> state.
<b>Silent</b>	Number of DSL lines in <b>Silent</b> state.
<b>Unknown</b>	Number of DSL lines where the state is not <b>Showtime</b> , <b>Idle</b> , or <b>Silent</b> .
<b>Total</b>	Total number of DSL lines (ANCP subscribers); sum of DSL lines in the <b>Showtime</b> , <b>Idle</b> , <b>Silent</b> , and <b>Unknown</b> states.

## Sample Output

### show ancp summary subscriber

```

user@host> show ancp summary subscriber

Subscribers Summary:
Show Time      Idle      Silent      Unknown      Total
-----
              8          1          0          1          10

```



## CHAPTER 16

# BFD Operational Commands

- `clear bfd adaptation`
- `clear bfd session`
- `show bfd session`

## clear bfd adaptation

---

<b>Syntax</b>	<code>clear bfd adaptation</code> <code>&lt;all&gt;</code> <code>&lt;address <i>session-address</i>&gt;</code> <code>&lt;discriminator <i>discr-number</i>&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	<p>Clear adaptation for Bidirectional Forwarding Detection (BFD) sessions. BFD is a simple hello mechanism that detects failures in a network. Configured BFD interval timers can change, adapting to network situations. Use this command to return BFD interval timers to their configured values.</p> <p>The <b>clear bfd adaptation</b> command is hitless, meaning that the command does not affect traffic flow on the routing device.</p>
<b>Options</b>	<p><b>all</b>—Clear adaptation for all BFD sessions.</p> <p><b>address <i>session-address</i></b>—(Optional) Clear adaptation for all BFD sessions matching the specified address.</p> <p><b>discriminator <i>discr-number</i></b>—(Optional) Clear adaptation for the local BFD session matching the specified discriminator.</p>
<b>Additional Information</b>	For more information, see the description of the <b>bfd-liveness-detection</b> configuration statement in the <i>Junos Routing Protocols Configuration Guide</i> .
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show bfd session on page 1656</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear bfd adaptation on page 1654</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear bfd adaptation

```
user@host> clear bfd adaptation
```

## clear bfd session

<b>List of Syntax</b>	<a href="#">Syntax on page 1655</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 1655</a>
<b>Syntax</b>	<pre>clear bfd session &lt;all&gt; &lt;address <i>session-address</i>&gt; &lt;discriminator <i>discr-number</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>clear bfd session &lt;all&gt; &lt;address <i>session-address</i>&gt; &lt;discriminator <i>discr-number</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p>
<b>Description</b>	Drop one or more Bidirectional Forwarding Detection (BFD) sessions.
<b>Options</b>	<p><b>all</b>—Drop all BFD sessions.</p> <p><b>address <i>session-address</i></b>—(Optional) Drop all BFD sessions matching the specified address.</p> <p><b>discriminator <i>discr-number</i></b>—(Optional) Drop the local BFD session matching the specified discriminator.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show bfd session on page 1656</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear bfd session all on page 1655</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear bfd session all

```
user@host> clear bfd session all
```

## show bfd session

---

**List of Syntax**    [Syntax on page 1656](#)  
                          [Syntax \(EX Series Switch and QFX Series\) on page 1656](#)

**Syntax**    show bfd session  
                  <brief | detail | extensive | summary>  
                  <address *address*>  
                  <client rsvp-oam (brief | detail | extensive | summary) | vpls-oam (brief | detail | extensive |  
                          instance *instance-name* | summary)>  
                  <discriminator *discriminator*>  
                  <logical-system (all | *logical-system-name*)>  
                  <prefix *address*>  
                  <subscriber (address *destination-address* | discriminator *discriminator* | extensive)>

**Syntax (EX Series Switch and QFX Series)**    show bfd session  
  <brief | detail | extensive | summary>  
  <address *address*>  
  <client rsvp-oam (brief | detail | extensive | summary) | vpls-oam (brief | detail | extensive |  
  instance *instance-name* | summary)>  
  <discriminator *discriminator*>  
  <prefix *address*>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Options **discriminator** and **address** introduced in Junos OS Release 8.2.  
                                  Option **prefix** introduced in Junos OS Release 9.0.  
                                  Command introduced in Junos OS Release 12.1 for the QFX Series.  
                                  Option **client** introduced in Junos OS Release 12.3R3.  
                                  Option **subscriber** introduced in Junos OS Release 15.1 for the MX Series.

**Description**    Display information about active Bidirectional Forwarding Detection (BFD) sessions.

**Options**    **none**—(Same as **brief**) Display information about active BFD sessions.

**brief | detail | extensive | summary**—(Optional) Display the specified level of output.

**address *address***—(Optional) Display information about the BFD session for the specified neighbor address.

**client rsvp-oam**

**(brief | detail | extensive | summary)**

**| vpls-oam**

**(brief | detail | extensive | instance *instance-name* | summary)**—(Optional) Display information about RSVP-OAM or VPLS-OAM BFD sessions in the specified level of output. For VPLS-OAM, display the specified level of output or display information about all of the BFD sessions for the specified VPLS routing instance.

**discriminator *discriminator***—(Optional) Display information about the BFD session using the specified local discriminator.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**<subscriber (address *destination-address* | discriminator *discriminator* | extensive)>**—(Optional) Display information about all BFD sessions for subscribers, or for a single BFD subscriber session with a particular destination address, or with a particular denominator.

**Required Privilege Level**

view

**Related Documentation**

- [clear bfd session on page 1655](#)
- *Understanding BFD for Static Routes for Faster Network Failure Detection*
- *Example: Configuring BFD for Static Routes for Faster Network Failure Detection*
- *Understanding BFD for OSPF*
- *Example: Configuring BFD for OSPF*
- *Understanding BFD for BGP*
- *Example: Configuring BFD on Internal BGP Peer Sessions*
- *Understanding Bidirectional Forwarding Detection Authentication for PIM*
- *Configuring BFD for PIM*
- *Understanding BFD for IS-IS*

**List of Sample Output**

[show bfd session on page 1661](#)  
[show bfd session brief on page 1662](#)  
[show bfd session detail on page 1662](#)  
[show bfd session detail \(with Authentication\) on page 1662](#)  
[show bfd session address extensive on page 1662](#)  
[show bfd session client rsvp-oam on page 1663](#)  
[show bfd session client vpls-oam summary on page 1663](#)  
[show bfd session client vpls-oam instance instance-name on page 1663](#)  
[show bfd session extensive on page 1663](#)  
[show bfd session extensive \(with Authentication\) on page 1664](#)  
[show bfd session summary on page 1664](#)  
[show bfd session subscriber on page 1664](#)  
[show bfd session subscriber address on page 1665](#)  
[show bfd session subscriber extensive on page 1665](#)  
[show bfd session subscriber discriminator extensive on page 1665](#)

**Output Fields**

Table 87 on page 1658 describes the output fields for the **show bfd session** command. Output fields are listed in the approximate order in which they appear.

Table 87: show bfd session Output Fields

Field Name	Field Description	Level of Output
Address	Address on which the BFD session is active.	brief detail extensive none
State	State of the BFD session: <b>Up</b> , <b>Down</b> , <b>Init</b> (initializing), or <b>Failing</b> .	brief detail extensive none
Interface	Interface on which the BFD session is active.	brief detail extensive none
Detect Time	Negotiated time interval, in seconds, used to detect BFD control packets.	brief detail extensive none
Transmit Interval	Time interval, in seconds, used by the transmitting system to send BFD control packets.	brief detail extensive none
Multiplier	Negotiated multiplier by which the time interval is multiplied to determine the detection time for the transmitting system.	detail extensive
Session up time	How long a BFD session has been established.	detail extensive
Client	Protocol or process for which the BFD session is active: <b>ISIS</b> , <b>OSPF</b> , <b>DHCP</b> , <b>Static</b> , or <b>VGD</b> .	detail extensive
TX interval	Time interval, in seconds, used by the host system to transmit BFD control packets.	brief detail extensive none
RX interval	Time interval, in seconds, used by the host system to receive BFD control packets.	brief detail extensive none
Authenticate	Indicates that BFD authentication is configured.	detail extensive
keychain	Name of the security authentication keychain being used by a specific client.  BFD authentication information for a client is provided in a single line and includes the <b>keychain</b> , <b>algo</b> , and <b>mode</b> parameters. Multiple clients can be configured on a BFD session.	extensive
algo	BFD authentication algorithm being used for a specific client: <b>keyed-md5</b> , <b>keyed-sha-1</b> , <b>meticulous-keyed-md5</b> , <b>meticulous-keyed-sha-1</b> , or <b>simple-password</b> .  BFD authentication information for a client is provided in a single line and includes the <b>keychain</b> , <b>algo</b> , and <b>mode</b> parameters. Multiple clients can be configured on a BFD session.	extensive

Table 87: show bfd session Output Fields (continued)

Field Name	Field Description	Level of Output
mode	<p>Level of BFD authentication enforcement being used by a specific client: <b>strict</b> or <b>loose</b>. Strict enforcement indicates that authentication is configured at both ends of the session (the default). Loose enforcement indicates that one end of the session might not be authenticated.</p> <p>BFD authentication information for a client is provided in a single line and includes the <b>keychain</b>, <b>algo</b>, and <b>mode</b> parameters. Multiple clients can be configured on a BFD session.</p>	extensive
Local diagnostic	<p>Local diagnostic information about failing BFD sessions.</p> <p>Following are the expected values for Local Diagnostic output field:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—No diagnostic</li> <li>• <b>CtlExpire</b>—Control detection time expired</li> <li>• <b>EchoExpire</b>—Echo detection time expired</li> <li>• <b>NbrSignal</b>—Neighbor signalled session down</li> <li>• <b>FwdPlaneReset</b>—Forwarding plane reset</li> <li>• <b>PathDown</b>—Path down</li> <li>• <b>ConcatPathDown</b>—Concatenated path down</li> <li>• <b>AdminDown</b>—Administratively down</li> </ul>	detail extensive
Remote diagnostic	<p>Remote diagnostic information about failing BFD sessions.</p> <p>Following are the expected values for Remote Diagnostic output field:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—No diagnostic</li> <li>• <b>CtlExpire</b>—Control detection time expired</li> <li>• <b>EchoExpire</b>—Echo detection time expired</li> <li>• <b>NbrSignal</b>—Neighbor signalled session down</li> <li>• <b>FwdPlaneReset</b>—Forwarding plane reset</li> <li>• <b>PathDown</b>—Path down</li> <li>• <b>ConcatPathDown</b>—Concatenated path down</li> <li>• <b>AdminDown</b>—Administratively down</li> </ul>	detail extensive
Remote state	Reports whether the remote system's BFD packets have been received and whether the remote system is receiving transmitted control packets.	detail extensive
Version	BFD version: <b>0</b> or <b>1</b> .	extensive
Replicated	The <b>replicated</b> flag appears when nonstop routing or graceful Routing Engine switchover is configured and the BFD session has been replicated to the backup Routing Engine.	detail extensive
Min async interval	Minimum amount of time, in seconds, between asynchronous control packet transmissions across the BFD session.	extensive
Min slow interval	Minimum amount of time, in seconds, between synchronous control packet transmissions across the BFD session.	extensive

Table 87: show bfd session Output Fields (continued)

Field Name	Field Description	Level of Output
Adaptive async TX interval	Transmission interval being used because of adaptation.	extensive
RX interval	Minimum required receive interval.	extensive
Local min TX interval	Minimum amount of time, in seconds, between control packet transmissions on the local system.	extensive
Local min RX interval	Minimum amount of time, in seconds, between control packet detections on the local system.	extensive
Remote min TX interval	Minimum amount of time, in seconds, between control packet transmissions on the remote system.	extensive
Remote min RX interval	Minimum amount of time, in seconds, between control packet detections on the remote system.	extensive
Threshold transmission interval	Threshold for notification if the transmission interval increases.	extensive
Threshold for detection time	Threshold for notification if the detection time increases.	extensive
Local discriminator	Authentication code used by the local system to identify that BFD session.	extensive
Remote discriminator	Authentication code used by the remote system to identify that BFD session.	extensive
Echo mode	Information about the state of echo transmissions on the BFD session.	extensive
Prefix	LDP FEC address associated with the BFD session.	All levels
Egress, Destination	Displays the LDP FEC destination address. This field is displayed only on a router at the egress of an LDP FEC, where the BFD session has an LDP Operation, Administration, and Maintenance (OAM) client.	All levels
Remote is control-plane independent	<p>The BFD session on the remote peer is running on its Packet Forwarding Engine. In this case, when the remote node undergoes a graceful restart, the local peer can help the remote peer with the graceful restart.</p> <p>The following BFD sessions are not distributed to the Packet Forwarding Engine: tunnel-encapsulated sessions, and sessions over integrated routing and bridging (IRB) interfaces.</p>	extensive

Table 87: show bfd session Output Fields (continued)

Field Name	Field Description	Level of Output
Authentication	<p>Summary status of BFD authentication:</p> <ul style="list-style-type: none"> <li><b>status</b>—<b>enabled/active</b> indicates authentication is configured and active. <b>enabled/inactive</b> indicates authentication is configured but not active. This only occurs when the remote end of the session does not support authentication and loose checking is configured.</li> <li><b>keychain</b>—Name of the security authentication keychain associated with the specified BFD session.</li> <li><b>algo</b>—BFD authentication algorithm being used: <b>keyed-md5</b>, <b>keyed-sha-1</b>, <b>meticulous-keyed-md5</b>, <b>meticulous-keyed-sha-1</b>, or <b>simple-password</b>.</li> <li><b>mode</b>—Level of BFD authentication enforcement: <b>strict</b> or <b>loose</b>. Strict enforcement indicates authentication is configured at both ends of the session (the default). Loose enforcement indicates that one end of the session might not be authenticated.</li> </ul> <p>This information is only shown if BFD authentication is configured.</p>	<b>extensive</b>
Session ID	The BFD session ID number that represents the protection using MPLS fast reroute (FRR) and loop-free alternate (LFA).	<b>detail extensive</b>
sessions	Total number of active BFD sessions.	All levels
clients	Total number of clients that are hosting active BFD sessions.	All levels
Cumulative transmit rate	Total number of BFD control packets transmitted per second on all active sessions.	All levels
Cumulative receive rate	Total number of BFD control packets received per second on all active sessions.	All levels
Multi-hop, min-recv-TTL	Minimum time to live (TTL) accepted if the session is configured for multihop.	<b>extensive</b>
route table	Route table used if the session is configured for multihop.	<b>extensive</b>
local address	<p>Local address of the source used if the session is configured for multihop.</p> <p>The source IP address for outgoing BFD packets from the egress side of an MPLS BFD session is based on the outgoing interface IP address.</p>	<b>extensive</b>

## Sample Output

### show bfd session

```

user@host> show bfd session

Address      State   Interface   Detect Time   Transmit Interval   Multiplier
10.9.1.33    Up      so-7/1/0.0   0.600        0.200           3
10.9.1.29    Up      ge-4/0/0.0   0.600        0.200           3

```

```
2 sessions, 2 clients
Cumulative transmit rate 10.0 pps, cumulative receive rate 10.0 pps
```

### show bfd session brief

The output for the **show bfd session brief** command is identical to that for the **show bfd session** command.

### show bfd session detail

```
user@host> show bfd session detail
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.9.1.33	Up	so-7/1/0.0	0.600	0.200	3
Client OSPF, TX interval 0.200, RX interval 0.200, multiplier 3					
Session up time 3d 00:34:02					
Local diagnostic None, remote diagnostic None					
Remote state Up, version 1					
Replicated					
10.9.1.29	Up	ge-4/0/0.0	0.600	0.200	3
Client ISIS L2, TX interval 0.200, RX interval 0.200, multiplier 3					
Session up time 3d 00:29:04, previous down time 00:00:01					
Local diagnostic NbrSignal, remote diagnostic AdminDown					
Remote state Up, version 1					

```
2 sessions, 2 clients
Cumulative transmit rate 10.0 pps, cumulative receive rate 10.0 pps
```

### show bfd session detail (with Authentication)

```
user@host> show bfd session detail
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.9.1.33	Up	so-7/1/0.0	0.600	0.200	3
Client OSPF, TX interval 0.200, RX interval 0.200, multiplier 3, <b>Authenticate</b>					
Session up time 3d 00:34:18					
Local diagnostic None, remote diagnostic None					
Remote state Up, version 1					
Replicated					
10.9.1.29	Up	ge-4/0/0.0	0.600	0.200	3
Client ISIS L2, TX interval 0.200, RX interval 0.200, multiplier 3					
Session up time 3d 00:29:12, previous down time 00:00:01					
Local diagnostic NbrSignal, remote diagnostic AdminDown					
Remote state Up, version 1					

```
2 sessions, 2 clients
Cumulative transmit rate 10.0 pps, cumulative receive rate 10.0 pps
```

### show bfd session address extensive

```
user@host> show bfd session 10.255.245.212 extensive
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.255.245.212	Up		1.200	0.400	3
Client Static, TX interval 0.400, RX interval 0.400, multiplier 3					
Session up time 00:17:03, previous down time 00:00:14					
Local diagnostic CtlExpire, remote diagnostic NbrSignal					
Remote state Up, version 1					
Replicated					

```

Min async interval 0.400, min slow interval 1.000
Adaptive async tx interval 0.400, rx interval 0.400
Local min tx interval 0.400, min rx interval 0.400, multiplier 3
Remote min tx interval 0.400, min rx interval 0.400, multiplier 3
Threshold transmission interval 0.000, Threshold for detection time 0.000
Local discriminator 6, remote discriminator 16
Echo mode disabled/inactive
Multi-hop, min-recv-TTL 255, route-table 0, local-address 10.255.245.205

```

```

1 sessions, 1 clients
Cumulative transmit rate 2.5 pps, cumulative receive rate 2.5 pps

```

#### show bfd session client rsvp-oam

```

user@host> show bfd session client rsvp-oam

```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
192.168.0.223	Up		540.000	180.000	3

```

1 Up sessions, 0 Down sessions
1 sessions, 1 clients
Cumulative transmit rate 0.0 pps, cumulative receive rate 0.0 pps

```

#### show bfd session client vpls-oam summary

```

user@host> show bfd session client vpls-oam summary
1 Up sessions, 1 Down sessions
2 sessions, 2 clients
Cumulative transmit rate 2.0 pps, cumulative receive rate 1.0 pps

```

#### show bfd session client vpls-oam instance instance-name

```

user@host> show bfd session client vpls-oam instance vpls

```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
127.0.0.1	Up	ae9.0	3.000	1.000	3

```

1 Up Sessions, 0 Down Sessions
1 sessions, 1 clients
Cumulative transmit rate 1.0 pps, cumulative receive rate 1.0 pps

```

#### show bfd session extensive

```

user@host> show bfd session extensive

```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.31.1.2	Up	ge-2/1/8.0	0.030	0.010	3

```

Client OSPF realm ospf-v2 Area 0.0.0.0, TX interval 0.010, RX interval 0.010
Session up time 00:10:13
Local diagnostic None, remote diagnostic None
Remote state Up, version 1
Replicated
Min async interval 0.010, min slow interval 1.000
Adaptive async TX interval 0.010, RX interval 0.010
Local min TX interval 0.010, minimum RX interval 0.010, multiplier 3
Remote min TX interval 0.010, min RX interval 0.010, multiplier 3
Local discriminator 12, remote discriminator 4

```

```

Echo mode disabled/inactive
Remote is control-plane independent
Session ID: 0x201
Micro-BFD Session

```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
10.31.2.2	Up	ge-2/1/4.0	0.030	0.010	3

```

Client OSPF realm ospf-v2 Area 0.0.0.0, TX interval 0.010, RX interval 0.010
Session up time 00:10:14
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 0.010, min slow interval 1.000
Adaptive async TX interval 0.010, RX interval 0.010
Local min TX interval 0.010, minimum RX interval 0.010, multiplier 3
Remote min TX interval 0.010, min RX interval 0.010, multiplier 3
Local discriminator 13, remote discriminator 5
Echo mode disabled/inactive
Remote is control-plane independent
Session ID: 0x202

```

```

2 sessions, 2 clients
Cumulative transmit rate 200.0 pps, cumulative receive rate 200.0 pps

```

#### show bfd session extensive (with Authentication)

```
user@host> show bfd session extensive
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
192.168.208.26	Up	so-1/0/0.0	2.400	0.800	10

```

Client Static, TX interval 0.600, RX interval 0.600, Authenticate
keychain bfd, algo keyed-md5, mode loose
Session up time 00:18:07
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 0.600, min slow interval 1.000
Adaptive async TX interval 0.600, RX interval 0.600
Local min TX interval 0.600, minimum RX interval 0.600, multiplier 10
Remote min TX interval 0.800, min RX interval 0.800, multiplier 3
Local discriminator 2, remote discriminator 3
Echo mode disabled/inactive
Authentication enabled/active, keychain bfd, algo keyed-md5, mode loose

```

```

1 sessions, 1 clients
Cumulative transmit rate 1.2 pps, cumulative receive rate 1.2 pps

```

#### show bfd session summary

```
user@host> show bfd session summary
```

```

2 sessions, 2 clients
Cumulative transmit rate 10.0 pps, cumulative receive rate 10.0 pps

```

#### show bfd session subscriber

```
user@host> show bfd session subscriber
```

Address	State	Interface	Detect Time	Transmit Interval	Multiplier
1.0.0.2	Up	ae0.0	90.000	30.000	3

```

1.0.0.6 Up ae0.1 90.000 30.000 3
1.0.0.10 Up ae0.2 90.000 30.000 3
1.0.0.14 Up ae0.3 90.000 30.000 3
1.0.0.18 Up ae0.4 90.000 30.000 3

```

20 sessions, 20 clients

#### show bfd session subscriber address

```

user@host> show bfd session subscriber address 1.0.0.2
Detect Transmit
Address State Interface Time Interval Multiplier
1.0.0.2 Up ae0.0 90.000 30.000 3

1 sessions, 1 clients
Cumulative transmit rate 5.0 pps, cumulative receive rate 5.0 pps

```

#### show bfd session subscriber extensive

```

user@host> show bfd session subscriber extensive
Detect Transmit
Address State Interface Time Interval Multiplier
1.0.0.2 Up ae0.0 90.000 30.000 3

Client DHCP, TX interval 30.000, RX interval 30.000
Session up time 09:11:50
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 30.000, min slow interval 30.000
Adaptive async TX interval 30.000, RX interval 30.000
Local min TX interval 30.000, minimum RX interval 30.000, multiplier 3
Remote min TX interval 30.000, min RX interval 30.000, multiplier 3
Local discriminator 20, remote discriminator 16
Echo mode disabled/inactive
Remote is control-plane independent
Session ID: 0x1

Detect Transmit
Address State Interface Time Interval Multiplier
1.0.0.6 Up ae0.1 90.000 30.000 3

Client DHCP, TX interval 30.000, RX interval 30.000
Session up time 09:11:50
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 30.000, min slow interval 30.000
Adaptive async TX interval 30.000, RX interval 30.000
Local min TX interval 30.000, minimum RX interval 30.000, multiplier 3
Remote min TX interval 30.000, min RX interval 30.000, multiplier 3
Local discriminator 21, remote discriminator 17
Echo mode disabled/inactive
Remote is control-plane independent
Session ID: 0x2

```

#### show bfd session subscriber discriminator extensive

```

user@host> show bfd session subscriber discriminator 20 extensive

```

```
      Detect  Transmit
Address State Interface Time   Interval Multiplier
1.0.0.2 Up    ae0.0  90.000   30.000    3

Client DHCP, TX interval 30.000, RX interval 30.000
Session up time 09:11:50
Local diagnostic None, remote diagnostic NbrSignal
Remote state Up, version 1
Replicated
Min async interval 30.000, min slow interval 30.000
Adaptive async TX interval 30.000, RX interval 30.000
Local min TX interval 30.000, minimum RX interval 30.000, multiplier 3
Remote min TX interval 30.000, min RX interval 30.000, multiplier 3
Local discriminator 20, remote discriminator 16
Echo mode disabled/inactive
Remote is control-plane independent
Session ID: 0x1

1 sessions, 1 clients
Cumulative transmit rate 5.0 pps, cumulative receive rate 5.0 pps
```

## CHAPTER 17

# BGP Operational Commands

- clear bgp damping
- clear bgp neighbor
- clear bgp table
- show bgp bmp
- show bgp group
- show bgp group traffic-statistics
- show bgp neighbor
- show bgp replication
- show bgp summary
- show policy damping

## clear bgp damping

---

List of Syntax	<a href="#">Syntax on page 1668</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 1668</a>
Syntax	<code>clear bgp damping</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;prefix&gt;</code>
Syntax (EX Series Switch and QFX Series)	<code>clear bgp damping</code> <code>&lt;prefix&gt;</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear BGP route flap damping information.
Options	<b>none</b> —Clear all BGP route flap damping information.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>prefix</b> —(Optional) Clear route flap damping information for only the specified destination prefix.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show policy damping on page 1714</a></li><li>• <a href="#">show route damping on page 2223</a></li></ul>
List of Sample Output	<a href="#">clear bgp damping on page 1668</a>
Output Fields	This command produces no output.

## Sample Output

### clear bgp damping

```
user@host> clear bgp damping
```

## clear bgp neighbor

**List of Syntax**    [Syntax on page 1669](#)  
                          [Syntax \(EX Series Switch and QFX Series\) on page 1669](#)

**Syntax**    clear bgp neighbor  
                  <all>  
                  <as *as-number*>  
                  <gracefully>  
                  <instance *instance-name*>  
                  <logical-system (all | *logical-system-name*)>  
                  <malformed-route>  
                  <neighbor>  
                  <soft | soft-inbound>  
                  <soft-minimum-igp>  
                  <stale-routes>

**Syntax (EX Series Switch and QFX Series)**    clear bgp neighbor  
                  <all>  
                  <as *as-number*>  
                  <instance *instance-name*>  
                  <malformed-route>  
                  <neighbor>  
                  <soft | soft-inbound>  
                  <soft-minimum-igp>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Command introduced in Junos OS Release 9.0 for EX Series switches.  
                                  Command introduced in Junos OS Release 11.3 for the QFX Series.  
                                  Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
                                  **malformed-route** option introduced in Junos OS Release 13.2.  
                                  **all** option introduced in Junos OS Release 14.2.  
                                  **gracefully** and **stale-routes** options introduced in Junos OS Release 15.1.

**Description**    Perform one of the following tasks:

- Change the state of one or more BGP neighbors to **IDLE**. For neighbors in the **ESTABLISHED** state, this command drops the TCP connection to the neighbors and then reestablishes the connection.
- (**soft** keyword only) Reapply export policies and send refresh updates to one or more BGP neighbors without changing their state.
- (**soft-inbound** keyword only) Send a route-refresh message to one or more BGP neighbors without changing their state, and reapply import policies on the received updates.

**Options**    **all**—Change the state of all BGP neighbors to **IDLE**.

**as *as-number***—(Optional) Apply this command only to neighbors in the specified autonomous system (AS).

**gracefully**—(Optional) Enable the BGP peer to start graceful-restart receiving-speaker mode. The receiving speaker also sends its own routes to the restarted speaker, and sends an End-of-RIB marker when it completes the update. The **clear bgp neighbor *neighbor-address* gracefully** command is the same as **clear bgp neighbor hard** (the default for **clear bgp neighbor**), but it does not use the new Hard Reset subcode on the Notify and Cease messages that are sent. This allows the neighbor to enter GR or LLGR helper mode, if negotiated. The session is still cleared on this router, and this router does not enter GR or LLGR helper mode.

**instance *instance-name***—(Optional) Apply this command only to neighbors for the specified routing instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**malformed-route**—(Optional) Remove malformed routes. If a specific neighbor is provided, Junos OS removes malformed routes for that particular neighbor. Otherwise, Junos OS removes malformed routes for all BGP neighbors. To find routes that have malformed attributes, run the **show route hidden** command, and look for routes marked with **MalformedAttr** in the AS path field.

**neighbor**—(Optional) IP address of a BGP peer. Apply this command only to the specified neighbor.

**soft**—(Optional) Reapply any export policies and send refresh updates to neighbors without clearing the state.

**soft-inbound**—(Optional) Send a route-refresh message to BGP neighbors and reapply import policies on the route updates received from the BGP neighbors without clearing the BGP state.

**soft-minimum-igp**—(Optional) Provide soft refresh of the outbound state when the interior gateway protocol (IGP) metric is reset.

**stale-routes**—(Optional) Any stale route currently being held for the specified neighbor because of BGP graceful restart (GR) or long-lived graceful restart (LLGR) receiver mode operations.

Required Privilege  
Level

clear

Related  
Documentation

- [show bgp neighbor on page 1687](#)

List of Sample Output

[clear bgp neighbor on page 1671](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

## Sample Output

`clear bgp neighbor`

```
user@host> clear bgp neighbor
```

## clear bgp table

---

Syntax	<code>clear bgp table <i>table-name</i></code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
Syntax (EX Series Switch and QFX Series)	<code>clear bgp table <i>table-name</i></code>
Release Information	Command introduced in Junos OS Release 9.0. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Request that BGP refresh routes in a specified routing table.
Options	<b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b><i>table-name</i></b> —Request that BGP refresh routes in the specified table.
Additional Information	In some cases, a prefix limit is associated with a routing table for a VPN instance. When this limit is exceeded (for example, because of a network misconfiguration), some routes might not be inserted in the table. Such routes need to be added to the table after the network issue is resolved. Use the <b>clear bgp table</b> command to request that BGP refresh routes in a VPN instance table.
Required Privilege Level	clear
List of Sample Output	<a href="#">clear bgp table private.inet.0 on page 1672</a> <a href="#">clear bgp table inet.6 logical-system all on page 1672</a> <a href="#">clear bgp table private.inet.6 logical-system ls1 on page 1673</a> <a href="#">clear bgp table logical-system all inet.0 on page 1673</a> <a href="#">clear bgp table logical-system ls2 private.inet.0 on page 1673</a>
Output Fields	This command produces no output.

## Sample Output

`clear bgp table private.inet.0`

```
user@host> clear bgp table private.inet.0
```

`clear bgp table inet.6 logical-system all`

```
user@host> clear bgp table inet.6 logical-system all
```

**clear bgp table private.inet.6 logical-system ls1**

```
user@host> clear bgp table private.inet.6 logical-system ls1
```

**clear bgp table logical-system all inet.0**

```
user@host> clear bgp table logical-system all inet.0
```

**clear bgp table logical-system ls2 private.inet.0**

```
user@host> clear bgp table logical-system ls2 private.inet.0
```

## show bgp bmp

**Syntax** `show bgp bmp`

**Release Information** Command introduced in Junos OS Release 9.5.  
 Command introduced in Junos OS Release 9.5 for EX Series switches.  
 Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display information about the BGP Monitoring Protocol (BMP).

**Options** This command has no options.

**Required Privilege Level** view

**List of Sample Output** [show bgp bmp on page 1674](#)

**Output Fields** [Table 88 on page 1674](#) lists the output fields for the **show bgp bmp** command. Output fields are listed in the approximate order in which they appear.

*Table 88: show bgp bmp Output Fields*

Field Name	Field Description
<b>BMP station address/port</b>	IP address and port number of the monitoring station to which BGP Monitoring Protocol (BMP) statistics are sent.
<b>BMP session state</b>	Status of the BMP session: <b>UP</b> or <b>DOWN</b> .
<b>Memory consumed by BMP</b>	Memory used by the active BMP session.
<b>Statistics timeout</b>	Amount of time, in seconds, between transmissions of BMP data to the monitoring station.
<b>Memory limit</b>	Threshold, in bytes, at which the routing device stops collecting BMP data.
<b>Memory-connect retry timeout</b>	Amount of time, in seconds, after which the routing device attempts to resume a BMP session that was ended after the configured memory threshold was exceeded.

## Sample Output

### show bgp bmp

```
user@host> show bgp bmp
  BMP station address/port: 172.24.24.157+5454
  BMP session state: DOWN
```

```
Memory consumed by BMP: 0
Statistics timeout: 15
Memory limit: 10485760
Memory connect retry timeout: 600
```

show bgp group

- List of Syntax**    [Syntax on page 1676](#)  
                               [Syntax \(EX Series Switch and QFX Series\) on page 1676](#)

```
Syntax  show bgp group
        <brief | detail | summary>
        <group-name>
        <exact-instance instance-name>
        <instance instance-name>
        <logical-system (all | logical-system-name)>
        <rtf>
```

Syntax (EX Series Switch and QFX Series)	<pre>show bgp group &lt;brief   detail   summary&gt; &lt;group-name&gt; &lt;exact-instance instance-name&gt; &lt;instance instance-name&gt;</pre>
--	---

<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
	Command introduced in Junos OS Release 9.0 for EX Series switches.
	Command introduced in Junos OS Release 11.3 for the QFX Series.
	Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
	<b>exact-instance</b> option introduced in Junos OS Release 11.4.

<b>Description</b>	Display information about the configured BGP groups.
--------------------	--

**Options** **none**—Display group information about all BGP groups.

**brief | detail | summary**—(Optional) Display the specified level of output.

**group-name**—(Optional) Display group information for the specified group.

**exact-instance *instance-name***—(Optional) Display information for the specified instance only.

**instance *instance-name***—(Optional) Display information about BGP groups for all routing instances whose name begins with this string (for example, **cust1**, **cust11**, and **cust111** are all displayed when you run the **show bgp group instance cust1** command). The instance name can be master for the main instance, or any valid configured instance name or its prefix.

**logical-system** (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

**rtf**—(Optional) Display BGP group route targeting information.

Required Privilege Level

List of Sample Output

- [show bgp group on page 1680](#)
- [show bgp group on page 1680](#)
- [show bgp group brief on page 1681](#)
- [show bgp group detail on page 1681](#)
- [show bgp group rtf detail on page 1682](#)
- [show bgp group summary on page 1682](#)

**Output Fields** Table 89 on page 1677 describes the output fields for the **show bgp group** command. Output fields are listed in the approximate order in which they appear.

Table 89: show bgp group Output Fields

Field Name	Field Description	Level of Output
<b>Group Type or Group</b>	Type of BGP group: <b>Internal</b> or <b>External</b> .	All levels
<b>group-index</b>	Index number for the BGP peer group. The index number differentiates between groups when a single BGP group is split because of different configuration options at the group and peer levels.	<b>rtf detail</b>
<b>AS</b>	AS number of the peer. For internal BGP (IBGP), this number is the same as <b>Local AS</b> .	<b>brief detail</b> none
<b>Local AS</b>	AS number of the local routing device.	<b>brief detail</b> none
<b>Name</b>	Name of a specific BGP group.	<b>brief detail</b> none
<b>Options</b>	The Network Layer Reachability Information (NLRI) format used for BGP VPN multicast.	<b>none</b> none
<b>Index</b>	Unique index number of a BGP group.	<b>brief detail</b> none
<b>Flags</b>	Flags associated with the BGP group. This field is used by Juniper Networks customer support.	<b>brief detail</b> none
<b>BGP-Static Advertisement Policy</b>	Policies configured for the BGP group with the <b>advertise-bgp-static policy</b> statement.	<b>brief</b> none
<b>Remove-private options</b>	Options associated with the <b>remove-private</b> statement.	<b>brief detail</b> none
<b>Holdtime</b>	Maximum number of seconds allowed to elapse between successive keepalive or update messages that BGP receives from a peer in the BGP group, after which the connection to the peer is closed and routing devices through that peer become unavailable.	<b>brief detail</b> none
<b>Export</b>	Export policies configured for the BGP group with the <b>export</b> statement.	<b>brief detail</b> none

Table 89: show bgp group Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Optimal Route Reflection</b>	Client nodes (primary and backup) configured in the BGP group.	<b>brief detail</b> none
<b>MED tracks IGP metric update delay</b>	Time, in seconds, that updates to multiple exit discriminator (MED) are delayed. Also displays the time remaining before the interval is set to expire	All levels
<b>Traffic Statistics Interval</b>	Time between sample periods for labeled-unicast traffic statistics, in seconds.	<b>brief detail</b> none
<b>Total peers</b>	Total number of peers in the group.	<b>brief detail</b> none
<b>Established</b>	Number of peers in the group that are in the established state.	All levels
<b>Active/Received/Accepted/Damped</b>	<p>Multipurpose field that displays information about BGP peer sessions. The field's contents depend upon whether a session is established and whether it was established in the main routing device or in a routing instance.</p> <ul style="list-style-type: none"> <li>If a peer is not established, the field shows the state of the peer session: <b>Active</b>, <b>Connect</b>, or <b>Idle</b>.</li> <li>If a BGP session is established in the main routing device, the field shows the number of active, received, accepted, and damped routes that are received from a neighbor and appear in the <b>inet.0</b> (main) and <b>inet.2</b> (multicast) routing tables. For example, <b>8/10/10/2</b> and <b>2/4/4/0</b> indicate the following: <ul style="list-style-type: none"> <li>8 active routes, 10 received routes, 10 accepted routes, and 2 damped routes from a BGP peer appear in the <b>inet.0</b> routing table.</li> <li>2 active routes, 4 received routes, 4 accepted routes, and no damped routes from a BGP peer appear in the <b>inet.2</b> routing table.</li> </ul> </li> </ul>	<b>summary</b>
<b>ip-addresses</b>	List of peers who are members of the group. The address is followed by the peer's port number.	All levels
<b>Route Queue Timer</b>	Number of seconds until queued routes are sent. If this time has already elapsed, this field displays the number of seconds by which the updates are delayed.	<b>detail</b>
<b>Route Queue</b>	Number of prefixes that are queued up for sending to the peers in the group.	<b>detail</b>
<b>inet.number</b>	<p>Number of active, received, accepted, and damped routes in the routing table. For example, <b>inet.0: 7/10/9/0</b> indicates the following:</p> <ul style="list-style-type: none"> <li>7 active routes, 10 received routes, 9 accepted routes, and no damped routes from a BGP peer appear in the <b>inet.0</b> routing table.</li> </ul>	none

Table 89: show bgp group Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Table inet.number</b>	Information about the routing table. <ul style="list-style-type: none"> <li>• <b>Received prefixes</b>—Total number of prefixes from the peer, both active and inactive, that are in the routing table.</li> <li>• <b>Active prefixes</b>—Number of prefixes received from the peer that are active in the routing table.</li> <li>• <b>Suppressed due to damping</b>—Number of routes currently inactive because of damping or other reasons. These routes do not appear in the forwarding table and are not exported by routing protocols.</li> <li>• <b>Advertised prefixes</b>—Number of prefixes advertised to a peer.</li> <li>• <b>Received external prefixes</b>—Total number of prefixes from the external BGP (EBGP) peers, both active and inactive, that are in the routing table.</li> <li>• <b>Active external prefixes</b>—Number of prefixes received from the EBGP peers that are active in the routing table.</li> <li>• <b>Externals suppressed</b>—Number of routes received from EBGP peers currently inactive because of damping or other reasons.</li> <li>• <b>Received internal prefixes</b>—Total number of prefixes from the IBGP peers, both active and inactive, that are in the routing table.</li> <li>• <b>Active internal prefixes</b>—Number of prefixes received from the IBGP peers that are active in the routing table.</li> <li>• <b>Internals suppressed</b>—Number of routes received from IBGP peers currently inactive because of damping or other reasons.</li> <li>• <b>RIB State</b>—Status of the graceful restart process for this routing table: <b>BGP restart is complete</b>, <b>BGP restart in progress</b>, <b>VPN restart in progress</b>, or <b>VPN restart is complete</b>.</li> </ul>	<b>detail</b>
<b>Groups</b>	Total number of groups.	All levels
<b>Peers</b>	Total number of peers.	All levels
<b>External</b>	Total number of external peers.	All levels
<b>Internal</b>	Total number of internal peers.	All levels
<b>Down peers</b>	Total number of unavailable peers.	All levels
<b>Flaps</b>	Total number of flaps that occurred.	All levels
<b>Table</b>	Name of a routing table.	<b>brief</b> , none
<b>Tot Paths</b>	Total number of routes.	<b>brief</b> , none
<b>Act Paths</b>	Number of active routes.	<b>brief</b> , none
<b>Suppressed</b>	Number of routes currently inactive because of damping or other reasons. These routes do not appear in the forwarding table and are not exported by routing protocols.	<b>brief</b> , none

Table 89: show bgp group Output Fields (continued)

Field Name	Field Description	Level of Output
History	Number of withdrawn routes stored locally to keep track of damping history.	brief, none
Damp State	Number of active routes with a figure of merit greater than zero, but lower than the threshold at which suppression occurs.	brief, none
Pending	Routes being processed by the BGP import policy.	brief, none
Group	Group the peer belongs to in the BGP configuration.	detail
Receive mask	Mask of the received target included in the advertised route.	detail
Entries	Number of route entries received.	detail
Target	Route target that is to be passed by route-target filtering. If a route advertised from the provider edge (PE) routing device matches an entry in the route-target filter, the route is passed to the peer.	detail
Mask	Mask which specifies that the peer receive routes with the given route target.	detail

## Sample Output

### show bgp group

```
user@host> show bgp group
```

### show bgp group

```
user@host> show bgp group
Group Type: Internal    AS: 1001                Local AS: 1001
Name: ibgp              Index: 2                Flags: Export Eval
Holdtime: 0
Optimal Route Reflection: igp-primary 1.1.1.1, igp-backup 1.1.2.1
Total peers: 1          Established: 1
1.1.1.2+179
Trace options: all
Trace file: /var/log/bgp-log size 10485760 files 10
bgp.l3vpn.2: 0/0/0/0
vpn-1.inet.2: 0/0/0/0

Group Type: Internal    AS: 1001                Local AS: 1001
Name: ibgp              Index: 3                Flags: Export Eval
Options: RFC6514CompliantSafi129
Holdtime: 0
Optimal Route Reflection: igp-primary 1.1.1.1, igp-backup 1.1.2.1
Total peers: 1          Established: 1
1.1.1.5+61698
Trace options: all
Trace file: /var/log/bgp-log size 10485760 files 10
bgp.l3vpn.2: 2/2/2/0
```

```
vpn-1.inet.2: 2/2/2/0
```

Groups: 2	Peers: 2	External: 0	Internal: 2	Down peers: 0	Flaps: 0
Table	Tot Paths	Act Paths	Suppressed	History Damp	State Pending
bgp.l3vpn.2					
	2	2	0	0	0
vpn-1.inet.0					
	0	0	0	0	0
vpn-1.inet.2					
	2	2	0	0	0
vpn-1.inet6.0					
	0	0	0	0	0
vpn-1.mdt.0					
	0	0	0	0	0

### show bgp group brief

```
user@host> show bgp group brief
```

Groups: 2	Peers: 2	External: 0	Internal: 2	Down peers: 1	Flaps: 0
Table	Tot Paths	Act Paths	Suppressed	History Damp	State Pending
inet.0					
	0	0	0	0	0
bgp.l3vpn.0					
	0	0	0	0	0
bgp.rtarget.0					
	2	0	0	0	0

### show bgp group detail

```
user@host> show bgp group detail
```

Group Type: Internal AS: 1 Local AS: 1  
 Name: ibgp Index: 0 Flags: <Export Eval>  
 Holdtime: 0  
 Optimal Route Reflection: igp-primary 1.1.1.1, igp-backup 1.1.2.1  
 Total peers: 3 Established: 0  
 22.0.0.2  
 22.0.0.8  
 22.0.0.5

Groups: 1	Peers: 3	External: 0	Internal: 3	Down peers: 3	Flaps: 3
Table bgp.l3vpn.0					
Received prefixes:		0			
Accepted prefixes:		0			
Active prefixes:		0			
Suppressed due to damping:		0			
Received external prefixes:		0			
Active external prefixes:		0			
Externals suppressed:		0			
Received internal prefixes:		0			
Active internal prefixes:		0			
Internals suppressed:		0			
RIB State: BGP restart is complete					
RIB State: VPN restart is complete					
Table bgp.mdt.0					
Received prefixes:		0			
Accepted prefixes:		0			
Active prefixes:		0			

```

Suppressed due to damping: 0
Received external prefixes: 0
Active external prefixes: 0
Externals suppressed: 0
Received internal prefixes: 0
Active internal prefixes: 0
Internals suppressed: 0
RIB State: BGP restart is complete
RIB State: VPN restart is complete
Table VPN-A.inet.0
Received prefixes: 0
Accepted prefixes: 0
Active prefixes: 0
Suppressed due to damping: 0
Received external prefixes: 0
Active external prefixes: 0
Externals suppressed: 0
Received internal prefixes: 0
Active internal prefixes: 0
Internals suppressed: 0
RIB State: BGP restart is complete
RIB State: VPN restart is complete
Table VPN-A.mdt.0
Received prefixes: 0
Accepted prefixes: 0
Active prefixes: 0
Suppressed due to damping: 0
Received external prefixes: 0
Active external prefixes: 0
Externals suppressed: 0
Received internal prefixes: 0
Active internal prefixes: 0
Internals suppressed: 0
RIB State: BGP restart is complete
RIB State: VPN restart is complete

```

### show bgp group rtf detail

```

user@host> show bgp group rtf detail
Group: internal (group-index: 0)
  Receive mask: 00000002
  Table: bgp.rtarget.0
    Target      Mask      Entries: 2
    100:100/64  00000002
    200:201/64  (Group)
Group: internal (group-index: 1)
  Table: bgp.rtarget.0
    Target      Mask      Entries: 1
    200:201/64  (Group)

```

### show bgp group summary

```

user@host> show bgp group summary
Group      Type      Peers    Established    Active/Received/Accepted/Damped
ibgp       Internal  3         0
Groups: 1  Peers: 3    External: 0    Internal: 3    Down peers: 3    Flaps: 3
  bgp.l3vpn.0      : 0/0/0/0 External: 0/0/0/0 Internal: 0/0/0/0
  bgp.mdt.0        : 0/0/0/0 External: 0/0/0/0 Internal: 0/0/0/0

```

```
VPN-A.inet.0      : 0/0/0/0 External: 0/0/0/0 Internal: 0/0/0/0
VPN-A.mdt.0       : 0/0/0/0 External: 0/0/0/0 Internal: 0/0/0/0
```

## show bgp group traffic-statistics

<b>Syntax</b>	<pre>show bgp group traffic-statistics &lt;brief   detail&gt; &lt;group-name&gt; &lt;labeled-path label label&gt; &lt;logical-system (all   logical-system-name)&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p><b>labeled-path</b> option introduced in Junos OS Release 18.1R1 for the MX Series.</p>
<b>Description</b>	Display the traffic statistics for configured Border Gateway Protocol (BGP) groups.
<b>Options</b>	<p><b>none</b>—Display traffic statistics for all BGP groups.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>group-name</b>—(Optional) Display BGP traffic statistics for only the specified group.</p> <p><b>label-path</b>—(Optional) Display labeled unicast traffic statistics at the ingress.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show bgp group traffic-statistics (Per-Group-Label Not Configured) on page 1685</a></p> <p><a href="#">show bgp group traffic-statistics (Per-Group-Label Configured) on page 1685</a></p> <p><a href="#">show bgp group traffic-statistics labeled-path (Labeled Unicast) on page 1686</a></p>
<b>Output Fields</b>	<p><a href="#">Table 90 on page 1684</a> describes the output fields for the <b>show bgp group traffic-statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 90: show bgp group traffic-statistics Output Fields*

Field Name	Field Description
<b>Group name</b>	Name of a specific BGP group.
<b>Group Index</b>	Index number for the BGP group.
<b>NLRI</b>	Network layer reachability information (NLRI) indicating the source of the traffic statistics for the BGP group.
<b>FEC</b>	Forwarding equivalence classes (FECs) associated with the BGP group.
<b>Packets</b>	Number of packets sent through each FEC.
<b>Bytes</b>	Number of bytes transmitted through each FEC.

Table 90: show bgp group traffic-statistics Output Fields (continued)

Field Name	Field Description
EgressAS	Autonomous system (AS) number of the egress router.
AdvLabel	Label associated with each FEC.

## Sample Output

### show bgp group traffic-statistics (Per-Group-Label Not Configured)

```

user@host> show bgp group traffic-statistics
Group Name: ext1      Group Index: 0      NLRI: inet-labeled-unicast
FEC                   Packets            Bytes            EgressAS      AdvLabel
10.255.245.55         0                  0                I             100224
10.255.245.57         0                  0                I             100240
100.101.0.0           550               48400            25            100256
100.102.0.0           550               48400            25            100256
100.103.0.0           550               48400            25            100272
100.104.0.0           550               48400            25            100272
192.168.25.0          0                  0                I             100288

Group Name: ext2      Group Index: 1      NLRI: inet-labeled-unicast
FEC                   Packets            Bytes            EgressAS      AdvLabel
10.255.245.55         0                  0                I             100224
10.255.245.57         0                  0                I             100240
100.101.0.0           550               48400            25            100256
100.102.0.0           550               48400            25            100256
100.103.0.0           550               48400            25            100272
100.104.0.0           550               48400            25            100272
192.168.25.0          0                  0                I             100288

```

### show bgp group traffic-statistics (Per-Group-Label Configured)

```

user@host> show bgp group traffic-statistics
Group Name: ext1      Group Index: 0      NLRI: inet-labeled-unicast
FEC                   Packets            Bytes            EgressAS      AdvLabel
10.255.245.55         0                  0                I             100384
10.255.245.57         0                  0                I             100400
100.101.0.0           101               8888             25            100416
100.102.0.0           101               8888             25            100416
100.103.0.0           0                  0                25            100432
100.104.0.0           0                  0                25            100432
192.168.25.0          0                  0                I             100448

Group Name: ext2      Group Index: 1      NLRI: inet-labeled-unicast
FEC                   Packets            Bytes            EgressAS      AdvLabel
10.255.245.55         0                  0                I             100304
10.255.245.57         0                  0                I             100320
100.101.0.0           0                  0                25            100336
100.102.0.0           0                  0                25            100336
100.103.0.0           101               8888             25            100352
100.104.0.0           101               8888             25            100352
192.168.25.0          0                  0                I             100368

```

**show bgp group traffic-statistics labeled-path (Labeled Unicast)**

```
user@host> show bgp group traffic-statistics labeled-path
```

Label	NextHop	Packets	Bytes
3(top)	10.1.1.1	0	0
299840(top)	40.1.1.1	0	0
110001(top)	40.1.1.1	2	168
110002			
110003			
110001(top)	40.1.1.1	0	0
110072			
110073			
110071(top)	40.1.1.1	0	0
110072			
110073			
120001(top)	40.1.1.1	0	0
120002			
120003			
1000002(top)	40.1.1.1	2	168
1000003			
1000004			

## show bgp neighbor

**List of Syntax**    [Syntax on page 1687](#)  
                          [Syntax \(EX Series Switch, QFX Series, and OCX Series\) on page 1687](#)

**Syntax**    show bgp neighbor  
                  <exact-instance *instance-name*>  
                  <instance *instance-name*>  
                  <logical-system (all | *logical-system-name*)>  
                  <neighbor-address>  
                  <output-queue>  
                  <orf (detail | *neighbor-address*)>

**Syntax (EX Series Switch, QFX Series, and OCX Series)**    show bgp neighbor  
                          <instance *instance-name*>  
                          <exact-instance *instance-name*>  
                          <neighbor-address>  
                          <orf (*neighbor-address* | detail)>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                          Command introduced in Junos OS Release 9.0 for EX Series switches.  
                          Command introduced in Junos OS Release 11.3 for the QFX Series.  
                          Command introduced in Junos OS Release 14.1x53-D20 for the OCX Series.  
                  **orf** option introduced in Junos OS Release 9.2.  
                  **exact-instance** option introduced in Junos OS Release 11.4.  
                  **output-queue** option introduced in Junos OS Release 16.1

**Description**    Display information about BGP peers.

**Options**    **none**—Display information about all BGP peers.

**exact-instance *instance-name***—(Optional) Display information for the specified instance only.

**instance *instance-name***—(Optional) Display information about BGP peers for all routing instances whose name begins with this string (for example, **cust1**, **cust11**, and **cust111** are all displayed when you run the **show bgp neighbor instance cust1** command).

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**neighbor-address**—(Optional) Display information for only the BGP peer at the specified IP address.

**orf (detail | *neighbor-address*)**—(Optional) Display outbound route-filtering information for all BGP peers or only for the BGP peer at the specified IP address. The default is to display brief output. Use the **detail** option to display detailed output.

**output-queue**—(Optional) Display information regarding the number of routes currently queued in the 17 prioritized BGP output queues.

**Additional Information** For information about the **local-address**, **nlri**, **hold-time**, and **preference** statements, see the *Junos OS Routing Protocols Library*.

**Required Privilege Level** view

**Related Documentation**

- [clear bgp neighbor on page 1669](#)

**List of Sample Output**

- [show bgp neighbor on page 1695](#)
- [show bgp neighbor \(CLNS\) on page 1696](#)
- [show bgp neighbor \(Layer 2 VPN\) on page 1697](#)
- [show bgp neighbor \(Layer 3 VPN\) \(Not supported on the OCX Series.\) on page 1699](#)
- [show bgp neighbor neighbor-address on page 1700](#)
- [show bgp neighbor neighbor-address on page 1701](#)
- [show bgp neighbor neighbor-address \(BGP Graceful Restart Enabled\) on page 1701](#)
- [show bgp neighbor neighbor-address \(BGP Long-Lived Graceful Restart\) on page 1702](#)
- [show bgp neighbor orf neighbor-address detail on page 1703](#)
- [show bgp neighbor logical-system on page 1703](#)
- [show bgp neighbor output-queue on page 1703](#)
- [show bgp neighbor \(Segment Routing Traffic Engineering\) on page 1704](#)

**Output Fields** [Table 91 on page 1688](#) describes the output fields for the **show bgp neighbor** command. Output fields are listed in the approximate order in which they appear.

*Table 91: show bgp neighbor Output Fields*

Field Name	Field Description
Peer	Address of the BGP neighbor. The address is followed by the neighbor port number.
AS	AS number of the peer.
Local	Address of the local routing device. The address is followed by the peer port number.
Type	Type of peer: <b>Internal</b> or <b>External</b> .
State	<p>Current state of the BGP session:</p> <ul style="list-style-type: none"> <li>• <b>Active</b>—BGP is initiating a transport protocol connection in an attempt to connect to a peer. If the connection is successful, BGP sends an Open message.</li> <li>• <b>Connect</b>—BGP is waiting for the transport protocol connection to be completed.</li> <li>• <b>Established</b>—The BGP session has been established, and the peers are exchanging update messages.</li> <li>• <b>Idle</b>—This is the first stage of a connection. BGP is waiting for a Start event.</li> <li>• <b>OpenConfirm</b>—BGP has acknowledged receipt of an open message from the peer and is waiting to receive a keepalive or notification message.</li> <li>• <b>OpenSent</b>—BGP has sent an open message and is waiting to receive an open message from the peer.</li> <li>• <b>route reflector client</b>—The BGP session is established with a route reflector client.</li> </ul>

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
<b>Flags</b>	<p>Internal BGP flags:</p> <ul style="list-style-type: none"> <li>• <b>Aggregate Label</b>—BGP has aggregated a set of incoming labels (labels received from the peer) into a single forwarding label.</li> <li>• <b>CleanUp</b>—The peer session is being shut down.</li> <li>• <b>Delete</b>—This peer has been deleted.</li> <li>• <b>Idled</b>—This peer has been permanently idled.</li> <li>• <b>ImportEval</b>—At the last commit operation, this peer was identified as needing to reevaluate all received routes.</li> <li>• <b>Initializing</b>—The peer session is initializing.</li> <li>• <b>SendRtn</b>—Messages are being sent to the peer.</li> <li>• <b>Sync</b>—This peer is synchronized with the rest of the peer group.</li> <li>• <b>RSync</b>—This peer in the backup Routing Engine is synchronized with the BGP peer in the master Routing Engine for nonstop active routing.</li> <li>• <b>TryConnect</b>—Another attempt is being made to connect to the peer.</li> <li>• <b>Unconfigured</b>—This peer is not configured.</li> <li>• <b>WriteFailed</b>—An attempt to write to this peer failed.</li> </ul>
<b>Last state</b>	<p>Previous state of the BGP session:</p> <ul style="list-style-type: none"> <li>• <b>Active</b>—BGP is initiating a transport protocol connection in an attempt to connect to a peer. If the connection is successful, BGP sends an Open message.</li> <li>• <b>Connect</b>—BGP is waiting for the transport protocol connection to be completed.</li> <li>• <b>Established</b>—The BGP session has been established, and the peers are exchanging update messages.</li> <li>• <b>Idle</b>—This is the first stage of a connection. BGP is waiting for a Start event.</li> <li>• <b>OpenConfirm</b>—BGP has acknowledged receipt of an open message from the peer and is waiting to receive a keepalive or notification message.</li> <li>• <b>OpenSent</b>—BGP has sent an open message and is waiting to receive an open message from the peer.</li> </ul>
<b>Last event</b>	<p>Last activity that occurred in the BGP session:</p> <ul style="list-style-type: none"> <li>• <b>Closed</b>—The BGP session closed.</li> <li>• <b>ConnectRetry</b>—The transport protocol connection failed, and BGP is trying again to connect.</li> <li>• <b>HoldTime</b>—The session ended because the hold timer expired.</li> <li>• <b>KeepAlive</b>—The local routing device sent a BGP keepalive message to the peer.</li> <li>• <b>Open</b>—The local routing device sent a BGP open message to the peer.</li> <li>• <b>OpenFail</b>—The local routing device did not receive an acknowledgment of a BGP open message from the peer.</li> <li>• <b>RecvKeepAlive</b>—The local routing device received a BGP keepalive message from the peer.</li> <li>• <b>RecvNotify</b>—The local routing device received a BGP notification message from the peer.</li> <li>• <b>RecvOpen</b>—The local routing device received a BGP open message from the peer.</li> <li>• <b>RecvUpdate</b>—The local routing device received a BGP update message from the peer.</li> <li>• <b>Start</b>—The peering session started.</li> <li>• <b>Stop</b>—The peering session stopped.</li> <li>• <b>TransportError</b>—A TCP error occurred.</li> </ul>

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Last error	<p>Last error that occurred in the BGP session:</p> <ul style="list-style-type: none"> <li>• <b>Cease</b>—An error occurred, such as a version mismatch, that caused the session to close.</li> <li>• <b>Finite State Machine Error</b>—In setting up the session, BGP received a message that it did not understand.</li> <li>• <b>Hold Time Expired</b>—The session's hold time expired.</li> <li>• <b>Message Header Error</b>—The header of a BGP message was malformed.</li> <li>• <b>Open Message Error</b>—A BGP open message contained an error.</li> <li>• <b>None</b>—No errors occurred in the BGP session.</li> <li>• <b>Update Message Error</b>—A BGP update message contained an error.</li> </ul>
Export	Name of the export policy that is configured on the peer.
Import	Name of the import policy that is configured on the peer.
Options	<p>Configured BGP options:</p> <ul style="list-style-type: none"> <li>• <b>AddressFamily</b>—Configured address family: inet or inet-vpn.</li> <li>• <b>AdvertiseBGPStatic</b>—Configured BGP static routes are advertised.</li> <li>• <b>AuthKeyChain</b>—Authentication key change is enabled.</li> <li>• <b>DropPathAttributes</b>—Certain path attributes are configured to be dropped from neighbor updates during inbound processing.</li> <li>• <b>GracefulRestart</b>—Graceful restart is configured.</li> <li>• <b>HoldTime</b>—Hold time configured with the <b>hold-time</b> statement. The hold time is three times the interval at which keepalive messages are sent.</li> <li>• <b>IgnorePathAttributes</b>—Certain path attributes are configured to be ignored in neighbor updates during inbound processing.</li> <li>• <b>Local Address</b>—Address configured with the <b>local-address</b> statement.</li> <li>• <b>LLGR</b>—BGP long-lived graceful restart capability is configured.</li> <li>• <b>LLGRHelperDisabled</b>—BGP long-lived graceful restart is completely disabled for a neighbor.</li> <li>• <b>Multihop</b>—Allow BGP connections to external peers that are not on a directly connected network.</li> <li>• <b>NLRI</b>—Configured MBGP state for the BGP group: <b>multicast</b>, <b>unicast</b>, or both if you have configured <b>nlri any</b>.</li> <li>• <b>Peer AS</b>—Configured peer autonomous system (AS).</li> <li>• <b>Preference</b>—Preference value configured with the <b>preference</b> statement.</li> <li>• <b>Refresh</b>—Configured to refresh automatically when the policy changes.</li> <li>• <b>Rib-group</b>—Configured routing table group.</li> <li>• <b>RFC6514CompliantSafi129</b>—Configured SAFI 129 according to RFC 6514 (BGP VPN multicast used to use SAFI 128).</li> </ul>
Path-attributes dropped	Path attribute codes that are dropped from neighbor updates.
Path-attributes ignored	Path attribute codes that are ignored during neighbor updates.
Peer does not support LLGR Restarter or Receiver functionality	BGP neighbor does not support long-lived graceful restart (LLGR) restarter mode completely.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Peer does not support LLGR Restarter functionality	BGP neighbor does not support long-lived graceful restart (LLGR) restarter mode for any family.
Authentication key change	(Appears only if the <b>authentication-keychain</b> statement has been configured) Name of the authentication keychain enabled.
Authentication algorithm	(Appears only if the <b>authentication-algorithm</b> statement has been configured) Type of authentication algorithm enabled: <b>hmac</b> or <b>md5</b> .
Address families configured	Names of configured address families for the VPN.
BGP-Static Advertisement Policy	Name of the BGP static policy that is configured on the peer.
Local Address	Address of the local routing device.
Remove-private options	Options associated with the <b>remove-private</b> statement.
Holdtime	Hold time configured with the <b>hold-time</b> statement. The hold time is three times the interval at which keepalive messages are sent.
Flags for NLRI inet-label-unicast	Flags related to labeled-unicast: <ul style="list-style-type: none"> <li>• <b>TrafficStatistics</b>—Collection of statistics for labeled-unicast traffic is enabled.</li> </ul>
Traffic statistics	Information about labeled-unicast traffic statistics: <ul style="list-style-type: none"> <li>• <b>Options</b>—Options configured for collecting statistics about labeled-unicast traffic.</li> <li>• <b>File</b>—Name and location of statistics log files.</li> <li>• <b>size</b>—Size of all the log files, in bytes.</li> <li>• <b>files</b>—Number of log files.</li> </ul>
Traffic Statistics Interval	Time between sample periods for labeled-unicast traffic statistics, in seconds.
Preference	Preference value configured with the <b>preference</b> statement.
Outbound Timer	Time for which the route is available in Junos OS routing table before it is exported to BGP. This field is displayed in the output only if the <b>out-delay</b> parameter is configured to a non-zero value.
Number of flaps	Number of times the BGP session has gone down and then come back up.
Peer ID	Router identifier of the peer.
Group index	Index number for the BGP peer group. The index number differentiates between groups when a single BGP group is split because of different configuration options at the group and peer levels.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
Peer index	Index that is unique within the BGP group to which the peer belongs.
Local ID	Router identifier of the local routing device.
Local Interface	Name of the interface on the local routing device.
Active holdtime	Hold time that the local routing device negotiated with the peer.
Keepalive Interval	Keepalive interval, in seconds.
BFD	Status of BFD failure detection.
Local Address	Name of directly connected interface over which direct EBGP peering is established.
NLRI and times for LLGR configured on peer	<p>Names of address families and stale time for BGP long-lived graceful restart configured on the BGP peer or neighbor.</p> <p>Times are displayed using the routing protocol daemon (rpd) %#OT format:</p> <p><b>&lt;weeks&gt;w&lt;days&gt;d &lt;hours&gt;:&lt;minutes&gt;:&lt;seconds&gt;</b></p> <p>Zero leading elements are omitted, for example, a value less than one week do not include the weeks.</p>
NLRI and times that peer supports LLGR Restarter for	<p>Names of address families and stale time that the BGP peer supports for restarter mode for BGP long-lived graceful restart.</p> <p>Times are displayed using the routing protocol daemon (rpd) %#OT format:</p> <p><b>&lt;weeks&gt;w&lt;days&gt;d &lt;hours&gt;:&lt;minutes&gt;:&lt;seconds&gt;</b></p> <p>Zero leading elements are omitted, for example, a value less than one week do not include the weeks.</p>
NLRI that peer saved LLGR forwarding for	Name of the address family for which the BGP peer saved BGP long-lived graceful restart forwarding.
Graceful Restart Details	Amount of time that is remaining until LLGR expires and the time remaining on the GR stale timer, along with RIB details, are displayed while LLGR receiver mode is active (a peer that negotiated LLGR has disconnected and not yet reconnected).
NLRI we are holding stale routes for	Names of address families (NLRIs) for which that stale routes are held or preserved when BGP graceful restart receiver mode is active for a neighbor.
Time until end-of-rib is assumed for stale routes	<p>Amount of time remaining on the stale timer until which end-of-RIB (EoR) markers are assumed when BGP graceful restart receiver mode is active for a neighbor.</p> <p>Time is displayed in Coordinated Universal Time (UTC) format (YYYY-MM-DD-HH:MM:SS). Note that the stale timer display ('Time until end-of-rib is assumed') is also present when a session is active, but the neighbor as not yet sent all of the end-of-rib indications.</p>
Time until stale routes are deleted or become long-lived stale	Amount of time up to which stale routes are deleted or become long-lived stale routes when BGP graceful restart receiver mode is active for a neighbor.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
NLRI for restart configured on peer	Names of address families configured for restart.
NLRI advertised by peer	Address families supported by the peer: <b>unicast</b> or <b>multicast</b> .
NLRI for this session	Address families being used for this session.
Peer supports Refresh capability	Remote peer's ability to send and request full routing table readvertisement (route refresh capability). For more information, see RFC 2918, <i>Route Refresh Capability for BGP-4</i> .
Restart time configured on peer	Configured time allowed for restart on the neighbor.
Stale routes from peer are kept for	When graceful restart is negotiated, the maximum time allowed to hold routes from neighbors after the BGP session has gone down.
Peer does not support Restarter functionality	Graceful restart restarter-mode is disabled on the peer.
Peer does not support Receiver functionality	Graceful restart helper-mode is disabled on the peer.
Restart time requested by this peer	Restart time requested by this neighbor during capability negotiation.
Restart flag received from the peer	When this field appears, the BGP speaker has restarted (Restarting), and this peer should not wait for the <b>end-of-rib</b> marker from the speaker before advertising routing information to the speaker.
NLRI that peer supports restart for	Neighbor supports graceful restart for this address family.
NLRI peer can save forwarding state	Neighbor supporting this address family saves all forwarding states.
NLRI that peer saved forwarding for	Neighbor saves all forwarding states for this address family.
NLRI that restart is negotiated for	Router supports graceful restart for this address family.
NLRI of received end-of-rib markers	Address families for which end-of-routing-table markers are received from the neighbor.
NLRI of all end-of-rib markers sent	Address families for which end-of-routing-table markers are sent to the neighbor.
Peer supports 4 byte AS extension (peer-as 1)	Peer understands 4-byte AS numbers in BGP messages. The peer is running Junos OS Release 9.1 or later.

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
NLRIs for which peer can receive multiple paths	Appears in the command output of the local router if the downstream peer is configured to receive multiple BGP routes to a single destination, instead of only receiving the active route.  Possible value is inet-unicast.
NLRIs for which peer can send multiple paths: inet-unicast	Appears in the command output of the local router if the upstream peer is configured to send multiple BGP routes to a single destination, instead of only sending the active route.  Possible value is inet-unicast.
Table inet.number	Information about the routing table: <ul style="list-style-type: none"> <li>• <b>RIB State</b>—BGP is in the graceful restart process for this routing table: <b>restart is complete</b> or <b>restart in progress</b>.</li> <li>• <b>Bit</b>—Number that represents the entry in the routing table for this peer.</li> <li>• <b>Send state</b>—State of the BGP group: <b>in sync</b>, <b>not in sync</b>, or <b>not advertising</b>.</li> <li>• <b>Active prefixes</b>—Number of prefixes received from the peer that are active in the routing table.</li> <li>• <b>Received prefixes</b>—Total number of prefixes from the peer, both active and inactive, that are in the routing table.</li> <li>• <b>Accepted prefixes</b>—Total number of prefixes from the peer that have been accepted by a routing policy.</li> <li>• <b>Suppressed due to damping</b>—Number of routes currently inactive because of damping or other reasons. These routes do not appear in the forwarding table and are not exported by routing protocols.</li> </ul>
Last traffic (seconds)	Last time any traffic was received from the peer or sent to the peer, and the last time the local routing device checked.
Input messages	Messages that BGP has received from the receive socket buffer, showing the total number of messages, number of update messages, number of times a policy is changed and refreshed, and the buffer size in octets. The buffer size is 16 KB.
Output messages	Messages that BGP has written to the transmit socket buffer, showing the total number of messages, number of update messages, number of times a policy is changed and refreshed, and the buffer size in octets. The buffer size is 16 KB.
Input dropped path attributes	Information about dropped path attributes: <ul style="list-style-type: none"> <li>• <b>Code</b>—Path attribute code.</li> <li>• <b>Count</b>—Path attribute count.</li> </ul>
Input ignored path attributes	Information about ignored path attributes: <ul style="list-style-type: none"> <li>• <b>Code</b>—Path attribute code.</li> <li>• <b>Count</b>—Path attribute count.</li> </ul>

Table 91: show bgp neighbor Output Fields (continued)

Field Name	Field Description
<b>Output queue</b>	<p>Number of BGP packets that are queued to be transmitted to a particular neighbor for a particular routing table. Output queue 0 is for unicast NLRIs, and queue 1 is for multicast NLRIs.</p> <p>It also specifies the routing table name and the NLRI that the table was advertised through, in the format <b>(routing table name, NLRI)</b>.</p> <p><b>NOTE:</b> The output queue of routing tables that are not advertised, will only show up at <b>extensive</b> output level.</p>
<b>Trace options</b>	Configured tracing of BGP protocol packets and operations.
<b>Trace file</b>	Name of the file to receive the output of the tracing operation.
<b>Filter Updates rcv</b>	<p>(<b>orf</b> option only) Number of outbound-route filters received for each configured address family.</p> <p><b>NOTE:</b> The counter is cumulative. For example, the counter is increased after the remote peer either resends or clears the outbound route filtering prefix list.</p>
<b>Immediate</b>	<p>(<b>orf</b> option only) Number of route updates received with the immediate flag set. The immediate flag indicates that the BGP peer should readvertise the updated routes.</p> <p><b>NOTE:</b> The counter is cumulative. For example, the counter is increased after the remote peer either resends or clears the outbound route filtering prefix list.</p>
<b>Filter</b>	( <b>orf</b> option only) Type of prefix filter received: <b>prefix-based</b> or <b>extended-community</b> .
<b>Received filter entries</b>	( <b>orf</b> option only) List of received filters displayed.
<b>seq</b>	( <b>orf</b> option only) Numerical order assigned to this prefix entry among all the received outbound route filter prefix entries.
<b>prefix</b>	( <b>orf</b> option only) Address for the prefix entry that matches the filter.
<b>minlength</b>	( <b>orf</b> option only) Minimum prefix length, in bits, required to match this prefix.
<b>maxlength</b>	( <b>orf</b> option only) Maximum prefix length, in bits, required to match this prefix.
<b>match</b>	( <b>orf</b> option only) For this prefix match, whether to <b>permit</b> or <b>deny</b> route updates.

## Sample Output

### show bgp neighbor

```
user@host > show bgp neighbor
```

For M Series, MX Series, and T Series routers running Junos OS Release 16.1 or later, the **show bgp neighbor** output includes the BGP group the peer belongs to, the routing instance (if any) that the peer is configured in, and the routing instance that the peer is using for the forwarding context (if applicable). An example follows.

```

Peer: 10.255.7.250+179 AS 10   Local: 10.255.7.248+63740 AS 10
  Group: toAsbr2               Routing-Instance: master
  Forwarding routing-instance: toAs2
    Type: Internal   State: Established   Flags: <Sync>
  Last State: OpenConfirm   Last Event: RecvKeepAlive
  Last Error: None
  Export: [ redistrib_static ]
  Options: <Preference LocalAddress PeerAS Refresh>
  Options: <AdvertiseBGPStatic>
  Local Address: 10.255.7.248 Holdtime: 90 Preference: 170 Outbound Timer: 50
  Number of flaps: 0
  Peer ID: 10.255.7.250   Local ID: 10.255.7.248   Active Holdtime: 90
  Keepalive Interval: 30   Group index: 0   Peer index: 0
  BFD: disabled, down
  NLRI for restart configured on peer: inet-unicast
  NLRI advertised by peer: inet-unicast
  NLRI for this session: inet-unicast
  Peer supports Refresh capability (2)
  Stale routes from peer are kept for: 300
  Peer does not support Restarter functionality
  NLRI that restart is negotiated for: inet-unicast
  NLRI of received end-of-rib markers: inet-unicast
  NLRI of all end-of-rib markers sent: inet-unicast
  Peer supports 4 byte AS extension (peer-as 10)
  Peer does not support Addpath
  NLRI that we support extended nexthop encoding for: inet-unicast
  NLRI that peer supports extended nexthop encoding for: inet-unicast

```

Table inet.0 Bit: 10000

```

  RIB State: BGP restart is complete
  Send state: in sync
  Active prefixes:           1
  Received prefixes:         1
  Accepted prefixes:         1
  Suppressed due to damping: 0
  Advertised prefixes:       1
  Last traffic (seconds): Received 9   Sent 5   Checked 5
  Input messages: Total 36   Updates 2   Refreshes 0   Octets 718
  Output messages: Total 37   Updates 1   Refreshes 0   Octets 796
  Output Queue[0]: 0 (inet.0, inet-unicast)

```

```

Peer: 10.255.162.214+52193 AS 100 Local: 10.255.167.205+179 AS 100
  Type: Internal   State: Established (route reflector client)Flags: <Sync>
  Last State: OpenConfirm   Last Event: RecvKeepAlive
  Last Error: None
  Options: <Preference LocalAddress Cluster AddressFamily Rib-group Refresh>
  Address families configured: inet-unicast inet-vpn-unicast route-target
  Local Address: 10.255.167.205 Holdtime: 90 Preference: 170
  Number of flaps: 0
  Peer ID: 10.255.162.214   Local ID: 10.255.167.205   Active Holdtime: 90
  Keepalive Interval: 30   Group index: 0   Peer index: 1

```

### show bgp neighbor (CLNS)

```

user@host> show bgp neighbor
Peer: 10.245.245.1+179 AS 200   Local: 10.245.245.3+3770 AS 100
  Type: External   State: Established   Flags: <ImportEval Sync>
  Last State: OpenConfirm   Last Event: RecvKeepAlive
  Last Error: None
  Options: <Multihop Preference LocalAddress HoldTime AddressFamily PeerAS
  Rib-group Refresh>

```

```

Address families configured: iso-vpn-unicast
Local Address: 10.245.245.3 Holdtime: 90 Preference: 170
Number of flaps: 0
Peer ID: 10.245.245.1      Local ID: 10.245.245.3      Active Holdtime: 90
Keepalive Interval: 30      Peer index: 0
NLRI advertised by peer: iso-vpn-unicast
NLRI for this session: iso-vpn-unicast
Peer supports Refresh capability (2)
Table bgp.isovpn.0 Bit: 10000
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: in sync
  Active prefixes:          3
  Received prefixes:        3
  Suppressed due to damping: 0
  Advertised prefixes:      3
Table aaaa.iso.0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: not advertising
  Active prefixes:          3
  Received prefixes:        3
  Suppressed due to damping: 0
Last traffic (seconds): Received 6      Sent 5      Checked 5
Input messages: Total 1736 Updates 4      Refreshes 0      Octets 33385
Output messages: Total 1738 Updates 3      Refreshes 0      Octets 33305
Output Queue[0]: 0 (bgp.isovpn.0, iso-vpn-unicast)
Output Queue[1]: 0 (aaaa.iso.0, iso-vpn-unicast)

```

### show bgp neighbor (Layer 2 VPN)

```

user@host> show bgp neighbor
Peer: 10.69.103.2      AS 65536 Local: 10.69.103.1      AS 65539
  Type: External      State: Active      Flags: <ImportEval>
  Last State: Idle      Last Event: Start
  Last Error: None
  Export: [ BGP-INET-import ]
  Options: <Preference LocalAddress HoldTime GracefulRestart AddressFamily PeerAS
Refresh>
  Address families configured: inet-unicast
  Local Address: 10.69.103.1 Holdtime: 90 Preference: 170
  Number of flaps: 0
Peer: 10.69.104.2      AS 65539 Local: 10.69.104.1      AS 65539
  Type: External      State: Active      Flags: <ImportEval>
  Last State: Idle      Last Event: Start
  Last Error: None
  Export: [ BGP-L-import ]
  Options: <Preference LocalAddress HoldTime GracefulRestart AddressFamily PeerAS
Refresh>
  Address families configured: inet-labeled-unicast
  Local Address: 10.69.104.1 Holdtime: 90 Preference: 170
  Number of flaps: 0
Peer: 10.255.14.182+179 AS 69      Local: 10.255.14.176+2131 AS 69
  Type: Internal      State: Established      Flags: <ImportEval>
  Last State: OpenConfirm      Last Event: RecvKeepAlive
  Last Error: None
  Options: <Preference LocalAddress HoldTime GracefulRestart AddressFamily
Rib-group Refresh>
  Address families configured: inet-vpn-unicast l2vpn
  Local Address: 10.255.14.176 Holdtime: 90 Preference: 170
  Number of flaps: 0

```

```
Peer ID: 10.255.14.182    Local ID: 10.255.14.176    Active Holdtime: 90
Keepalive Interval: 30
NLRI for restart configured on peer: inet-vpn-unicast 12vpn
NLRI advertised by peer: inet-vpn-unicast 12vpn
NLRI for this session: inet-vpn-unicast 12vpn
Peer supports Refresh capability (2)
Restart time configured on the peer: 120
Stale routes from peer are kept for: 300
Restart time requested by this peer: 120
NLRI that peer supports restart for: inet-vpn-unicast 12vpn
NLRI peer can save forwarding state: inet-vpn-unicast 12vpn
NLRI that peer saved forwarding for: inet-vpn-unicast 12vpn
NLRI that restart is negotiated for: inet-vpn-unicast 12vpn
NLRI of received end-of-rib markers: inet-vpn-unicast 12vpn
Table bgp.13vpn.0 Bit: 10000
  RIB State: BGP restart in progress
  RIB State: VPN restart in progress
  Send state: in sync
  Active prefixes:          10
  Received prefixes:        10
  Suppressed due to damping: 0
Table bgp.12vpn.0 Bit: 20000
  RIB State: BGP restart in progress
  RIB State: VPN restart in progress
  Send state: in sync
  Active prefixes:          1
  Received prefixes:        1
  Suppressed due to damping: 0
Table BGP-INET.inet.0 Bit: 30000
  RIB State: BGP restart in progress
  RIB State: VPN restart in progress
  Send state: in sync
  Active prefixes:          2
  Received prefixes:        2
  Suppressed due to damping: 0
Table BGP-L.inet.0 Bit: 40000
  RIB State: BGP restart in progress
  RIB State: VPN restart in progress
  Send state: in sync
  Active prefixes:          2
  Received prefixes:        2
  Suppressed due to damping: 0
Table LDP.inet.0 Bit: 50000
  RIB State: BGP restart is complete
  RIB State: VPN restart in progress
  Send state: in sync
  Active prefixes:          1
  Received prefixes:        1
  Suppressed due to damping: 0
Table OSPF.inet.0 Bit: 60000
  RIB State: BGP restart is complete
  RIB State: VPN restart in progress
  Send state: in sync
  Active prefixes:          2
  Received prefixes:        2
  Suppressed due to damping: 0
Table RIP.inet.0 Bit: 70000
  RIB State: BGP restart is complete
  RIB State: VPN restart in progress
  Send state: in sync
  Active prefixes:          2
```

```

Received prefixes:          2
Suppressed due to damping: 0
Table STATIC.inet.0 Bit: 80000
RIB State: BGP restart is complete
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:           1
Received prefixes:         1
Suppressed due to damping: 0
Table L2VPN.l2vpn.0 Bit: 90000
RIB State: BGP restart is complete
RIB State: VPN restart in progress
Send state: in sync
Active prefixes:           1
Received prefixes:         1
Suppressed due to damping: 0
Last traffic (seconds): Received 0      Sent 0      Checked 0
Input messages: Total 14      Updates 13    Refreshes 0      Octets 1053
Output messages: Total 3      Updates 0     Refreshes 0      Octets 105
Output Queue[0]: 0 (bgp.l3vpn.0, inet-vpn-unicast)
Output Queue[1]: 0 (bgp.l2vpn.0, inet-vpn-unicast)
Output Queue[2]: 0 (BGP-INET.inet.0, inet-vpn-unicast)
Output Queue[3]: 0 (BGP-L.inet.0, inet-vpn-unicast)
Output Queue[4]: 0 (LDP.inet.0, inet-vpn-unicast)
Output Queue[5]: 0 (OSPF.inet.0, inet-vpn-unicast)
Output Queue[6]: 0 (RIP.inet.0, inet-vpn-unicast)
Output Queue[7]: 0 (STATIC.inet.0, inet-vpn-unicast)
Output Queue[8]: 0 (L2VPN.l2vpn.0, inet-vpn-unicast)

```

### show bgp neighbor (Layer 3 VPN) (Not supported on the OCX Series.)

```

user@host> show bgp neighbor
Peer: 192.0.2.0.179      AS 10045 Local: 192.0.2.1+1214      AS 10045
Type: Internal      State: Established      Flags: <ImportEval>
Last State: OpenConfirm      Last Event: RecvKeepAlive
Last Error: None
Export: [ match-all ] Import: [ match-all ]
Options: <Preference LocalAddress HoldTime GracefulRestart AddressFamily
Rib-group Refresh>
Address families configured: inet-vpn-unicast
Local Address: 192.0.2.1 Holdtime: 90 Preference: 170
Flags for NLRI inet-labeled-unicast: TrafficStatistics
Traffic Statistics: Options: all File: /var/log/bstat.log
size 131072 files 10

Traffic Statistics Interval: 60
Number of flaps: 0
Peer ID: 192.168.1.110      Local ID: 192.168.1.111      Active Holdtime: 90
Keepalive Interval: 30
NLRI for restart configured on peer: inet-vpn-unicast
NLRI advertised by peer: inet-vpn-unicast
NLRI for this session: inet-vpn-unicast
Peer supports Refresh capability (2)
Restart time configured on the peer: 120
Stale routes from peer are kept for: 300
Restart time requested by this peer: 120
NLRI that peer supports restart for: inet-vpn-unicast
NLRI peer can save forwarding state: inet-vpn-unicast
NLRI that peer saved forwarding for: inet-vpn-unicast
NLRI that restart is negotiated for: inet-vpn-unicast
NLRI of received end-of-rib markers: inet-vpn-unicast
NLRI of all end-of-rib markers sent: inet-vpn-unicast

```

```

Table bgp.13vpn.0 Bit: 10000
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: in sync
  Active prefixes:      2
  Received prefixes:    2
  Suppressed due to damping: 0
Table vpn-green.inet.0 Bit: 20001
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: in sync
  Active prefixes:      2
  Received prefixes:    2
  Suppressed due to damping: 0
Last traffic (seconds): Received 15   Sent 20   Checked 20
Input messages: Total 40   Updates 2   Refreshes 0   Octets 856
Output messages: Total 44   Updates 2   Refreshes 0   Octets 1066
Output Queue[0]: 0 (bgp.13vpn.0, inet-vpn-unicast)
Output Queue[1]: 0 (vpn-green.inet.0, inet-vpn-unicast)
Trace options: detail packets
Trace file: /var/log/bgpggr.log size 131072 files 10

```

### show bgp neighbor neighbor-address

```

user@host> show bgp neighbor 192.168.1.111
Peer: 10.255.245.12+179 AS 35 Local: 10.255.245.13+2884 AS 35
Type: Internal State: Established (route reflector client)Flags: <Sync>
Last State: OpenConfirm Last Event: RecvKeepAlive
Last Error: None
Options: <Preference LocalAddress HoldTime Cluster AddressFamily Rib-group
Refresh>
Options: RFC6514CompliantSafi129
Address families configured: inet-vpn-unicast inet-labeled-unicast
Local Address: 10.255.245.13 Holdtime: 90 Preference: 170
Flags for NLRI inet-vpn-unicast: AggregateLabel
Flags for NLRI inet-labeled-unicast: AggregateLabel
Number of flaps: 0
Peer ID: 10.255.245.12 Local ID: 10.255.245.13 Active Holdtime: 90
Keepalive Interval: 30
BFD: disabled
NLRI advertised by peer: inet-vpn-unicast inet-labeled-unicast
NLRI for this session: inet-vpn-unicast inet-labeled-unicast
Peer supports Refresh capability (2)
Restart time configured on the peer: 300
Stale routes from peer are kept for: 60
Restart time requested by this peer: 300
NLRI that peer supports restart for: inet-unicast inet6-unicast
NLRI that restart is negotiated for: inet-unicast inet6-unicast
NLRI of received end-of-rib markers: inet-unicast inet6-unicast
NLRI of all end-of-rib markers sent: inet-unicast inet6-unicast
Table inet.0 Bit: 10000
  RIB State: restart is complete
  Send state: in sync
  Active prefixes: 4
  Received prefixes: 6
  Suppressed due to damping: 0
Table inet6.0 Bit: 20000
  RIB State: restart is complete
  Send state: in sync
  Active prefixes: 0
  Received prefixes: 2

```

```

    Suppressed due to damping: 0
    Last traffic (seconds): Received 3    Sent 3    Checked 3
    Input messages: Total 9    Updates 6    Refreshes 0    Octets 403
    Output messages: Total 7    Updates 3    Refreshes 0    Octets 365
    Output Queue[0]: 0 (inet.0, inet-unicast)
    Output Queue[1]: 0 (inet6.0, inet6-unicast)
    Trace options: detail packets
    Trace file: /var/log/bgpr size 131072 files 10

```

### show bgp neighbor neighbor-address

```

user@host> show bgp neighbor 192.168.4.222
Peer: 192.168.4.222+4902 AS 65501 Local: 192.168.4.221+179 AS 65500
  Type: External    State: Established    Flags: <Sync>
  Last State: OpenConfirm    Last Event: RecvKeepAlive
  Last Error: Cease
  Export: [ export-policy ] Import: [ import-policy ]
  Options: <Preference HoldTime AddressFamily PeerAS PrefixLimit Refresh>
  Address families configured: inet-unicast inet-multicast
  Holdtime: 60000 Preference: 170
  Number of flaps: 4
  Last flap event: RecvUpdate
  Error: 'Cease' Sent: 5 Recv: 0
  Peer ID: 10.255.245.6    Local ID: 10.255.245.5    Active Holdtime: 60000
  Keepalive Interval: 20000    Peer index: 0
  BFD: disabled, down
  Local Interface: fxp0.0
  NLRI advertised by peer: inet-unicast inet-multicast
  NLRI for this session: inet-unicast inet-multicast
  Peer supports Refresh capability (2)
  Table inet.0 Bit: 10000
    RIB State: BGP restart is complete
    Send state: in sync
    Active prefixes:          8
    Received prefixes:        10
    Accepted prefixes:        10
    Suppressed due to damping: 0
    Advertised prefixes:      3
  Table inet.2 Bit: 20000
    RIB State: BGP restart is complete
    Send state: in sync
    Active prefixes:          0
    Received prefixes:        0
    Accepted prefixes:        0
    Suppressed due to damping: 0
    Advertised prefixes:      0
  Last traffic (seconds): Received 357 Sent 357 Checked 357
  Input messages: Total 4 Updates 2 Refreshes 0 Octets 211
  Output messages: Total 4 Updates 1 Refreshes 0 Octets 147
  Output Queue[0]: 0 (inet.0, inet-unicast)
  Output Queue[1]: 0 (inet.2, inet-multiicast)
  Trace options: all
  Trace file: /var/log/bgp size 10485760 files 10

```

### show bgp neighbor neighbor-address (BGP Graceful Restart Enabled)

```

user@router> show bgp neighbor 10.255.255.16

Peer: 10.255.255.16 AS 100    Local: 10.255.255.12 AS 100
  Type: Internal    State: Active    Flags: <>

```

```

Last State: Idle           Last Event: Start
Last Error: None
Options: <Preference LocalAddress AddressFamily Rib-group Refresh>
Options: <LLGR>
Address families configured: 12vpn
Local Address: 10.255.255.12 Holdtime: 90 Preference: 170
NLRI 12vpn:
Number of flaps: 6
Last flap event: Restart
NLRI we are holding stale routes for: inet-vpn-unicast
Time until stale routes are deleted or become long-lived stale: 00:01:57
Time until end-of-rib is assumed for stale routes: 00:04:43
Table bgp.13vpn.0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: not advertising
  Active prefixes:           0
  Received prefixes:         7
  Accepted prefixes:         7
  Suppressed due to damping: 0
Table foo.inet.0 Bit: 30000
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: not in sync
  Active prefixes:           0
  Received prefixes:         7
  Accepted prefixes:         7
  Suppressed due to damping: 0

```

### show bgp neighbor neighbor-address (BGP Long-Lived Graceful Restart)

```

user@router> show bgp neighbor 10.4.12.11

Peer: 10.4.12.11 AS 100      Local: 10.6.128.225 AS 100
Type: Internal   State: Active   Flags: <>
Last State: Idle   Last Event: Start
Last Error: None
Export: [ foo ]
Options: <Preference LocalAddress Refresh GracefulRestart>
Options: <LLGR>
Local Address: 10.6.128.225 Holdtime: 90 Preference: 170
Number of flaps: 3
Last flap event: Restart
Error: 'Cease' Sent: 0 Recv: 1
Time until long-lived stale routes deleted: inet-vpn-unicast 10:00:22
route-target 10:00:22
Table bgp.13vpn.0
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: not advertising
  Active prefixes:           0
  Received prefixes:         7
  Accepted prefixes:         7
  Suppressed due to damping: 0
Table foo.inet.0 Bit: 30000
  RIB State: BGP restart is complete
  RIB State: VPN restart is complete
  Send state: not in sync
  Active prefixes:           0
  Received prefixes:         7

```

```

Accepted prefixes:      7
Suppressed due to damping: 0

```

### show bgp neighbor orf neighbor-address detail

```

user@host > show bgp neighbor orf 192.168.165.56 detail
Peer: 192.168.165.56+179 Type: External
Group: ext1

inet-unicast
  Filter updates rcv:      1 Immediate:      1
  Filter: prefix-based receive
  Received filter entries:
    seq 1: prefix 2.2.2.2/32: minlen 32: maxlen 32: match deny:

inet6-unicast
  Filter updates rcv:      0 Immediate:      1
  Filter: prefix-based receive
  Received filter entries:
    *.*

```

### show bgp neighbor logical-system

```

user@host > show bgp neighbor logical-system ITR1
Peer: 10.79.8.2+179 AS 65536 Local: 10.79.8.1+50891 AS 65500
Description: MX1
Type: External State: Established Flags: <ImportEval Sync>
Last State: OpenConfirm Last Event: RecvKeepAlive
Last Error: None
....
Table inet.0 Bit: 10000
RIB State: BGP restart is complete
Send state: in sync
Active prefixes:      1
Received prefixes:    1
Accepted prefixes:    1
Suppressed due to damping: 0
Advertised prefixes:  10
Stale prefixes:       4: <=new, line only appears if count is non-0
It is the Number of prefixes marked as stale;
LLGR-stale prefixes:  5: <=new, line only appears if count is non-0
It is the Number of prefixes marked as LLGR-stale

```

### show bgp neighbor output-queue

```

user@host > show bgp neighbor output-queue
Peer: 192.0.2.2+179 AS 103 Local: 192.0.2.1+50799 AS 102
Output Queue[0]: 0 (inet.0, inet-unicast)
Priority 1 : 0
Priority 2 : 0
Priority 3 : 0
Priority 4 : 0
Priority 5 : 0
Priority 6 : 0
Priority 7 : 0
Priority 8 : 0
Priority 9 : 0
Priority 10: 0
Priority 11: 0
Priority 12: 0

```

```
Priority 13: 0
Priority 14: 0
Priority 15: 0
Priority 16: 0
Expedited : 0
```

### show bgp neighbor (Segment Routing Traffic Engineering)

```
user@host > show bgp neighbor
run show bgp neighbor 1.1.1.254
  Peer: 1.1.1.254+60180 AS 100   Local: 1.1.1.1+179 AS 100
  Group: toB                    Routing-Instance: master
  Forwarding routing-instance: master
  Type: Internal                State: Established      Flags: <Sync>
  Last State: OpenConfirm       Last Event: RecvKeepAlive
  Last Error: None
  Options: <Preference LocalAddress>
  Address families configured: inet-segment-routing-te
  Local Address: 1.1.1.1 Holdtime: 90 Preference: 170 Local AS: 100 Local System
  AS: 0
  Number of flaps: 0
  Peer ID: 128.9.150.15        Local ID: 128.9.150.110        Active Holdtime: 90
  Keepalive Interval: 30        Group index: 0        Peer index: 0
  I/O Session Thread: bgpio-0 State: Enabled
  BFD: disabled, down
  NLRI for restart configured on peer: inet-segment-routing-te
  NLRI advertised by peer: inet-segment-routing-te
  NLRI for this session: inet-segment-routing-te
  Peer supports Refresh capability (2)
  Stale routes from peer are kept for: 300
  Peer does not support Restarter functionality
  Restart flag received from the peer: Notification
  NLRI that restart is negotiated for: inet-segment-routing-te
  Peer does not support LLGR Restarter functionality
  Peer supports 4 byte AS extension (peer-as 100)
  Peer does not support Addpath
  Last traffic (seconds): Received 17628 Sent 25 Checked 17628
  Input messages: Total 2        Updates 0        Refreshes 0        Octets 82
  Output messages: Total 1        Updates 0        Refreshes 0        Octets 19
  Trace options: all
  Trace file: /var/log/bgp.log size 10485760 files 10
```

## show bgp replication

**Syntax**    `show bgp replication`

**Release Information**    Command introduced in Junos OS Release 8.5.  
 Command introduced in Junos OS Release 11.3 for the QFX Series.  
 Support for **logical-system** option introduced in Junos OS Release 13.3

**Description**    Displays the status of BGP state replication between the master and backup Routing Engines on devices that have nonstop active routing configured on them.



**CAUTION:** Before attempting nonstop active routing switchover, check the output of `show bgp replication` to confirm that BGP routing table synchronization has completed on the backup Routing Engine. The **complete** status in the output of `show task replication` only indicates that the socket replication has completed and the BGP synchronization is in progress.

To determine whether BGP synchronization is complete, you must check the **Protocol state** and **Synchronization state** fields in the output of `show bgp replication` on the master Routing Engine. The **Protocol state** must be **idle** and the **Synchronization state** must be **complete**. If you perform NSR switchover before the BGP synchronization has completed, the BGP session might flap.

**Options**    This command has no options.

**Required Privilege Level**    view

**Related Documentation**    • [show bgp replication logical-system](#)

**List of Sample Output**    [show bgp replication \(for Master\) on page 1707](#)  
[show bgp replication \(for Master\) on page 1707](#)  
[show bgp replication \(for Backup\) on page 1707](#)

**Output Fields**    [Table 92 on page 1706](#) lists the output fields for the `show bgp replication` command. Output fields are listed in the approximate order in which they appear.

Table 92: show bgp replication Output Fields

Field Name	Field Description
Precision timer registration	<p>State of BGP precision timer feature in the kernel.</p> <ul style="list-style-type: none"> <li>• <b>Registered</b>—BGP registers with the precision-timer feature in the kernel for auto keepalive generation after switchover.</li> <li>• <b>NotRegistered</b>—Keepalive format of BGP is not registered.</li> </ul>
session state	State of the current internal BGP state replication session, Up or Down, and the duration for which the session has been in the indicated state.
flaps	Total number of flaps that occurred.
protocol state	Current state of the protocol operation, Active, Connect, Idle, and the duration for which the protocol has been in the indicated state.
synchronization state	<p>Synchronization state at the time of executing the command. The states can be:</p> <ul style="list-style-type: none"> <li>• <b>Idle</b></li> <li>• <b>Neighbor</b>—Indicates that the neighbor state synchronization is in progress.</li> <li>• <b>AckWait</b>—Indicates that the request processing is over.</li> <li>• <b>ORF</b>—Indicates that the outbound routing filter synchronization is in progress.</li> <li>• <b>RIB</b>—Indicates that the routing table synchronization is in progress.</li> <li>• <b>Complete</b></li> </ul>
number of peers waiting	<p>Total number of peers waiting for various messages:</p> <ul style="list-style-type: none"> <li>• <b>AckWait</b>—Number of peers waiting for a connection establishment or completed acknowledgment messages.</li> <li>• <b>SoWait</b>—Number of peers waiting for TCP socket-related operations.</li> <li>• <b>Scheduled</b>—Number of peers being synchronized.</li> </ul>
messages sent	<p>Number of various types of messages that have been sent since internal replication session became active:</p> <ul style="list-style-type: none"> <li>• <b>Open</b>—Number of Open messages sent.</li> <li>• <b>Establish</b>—Number of connection establishment acknowledgment messages sent.</li> <li>• <b>Update</b>—Number of update messages sent.</li> <li>• <b>Error</b>—Number of error messages sent.</li> <li>• <b>Complete</b>—Number of connection complete acknowledgment messages sent.</li> </ul>
messages received	<p>Total number of messages received:</p> <ul style="list-style-type: none"> <li>• <b>Open</b>—Number of Open messages received.</li> <li>• <b>Request</b>—Number of request messages received: <ul style="list-style-type: none"> <li>• <b>Wildcard</b>—Number of requests received that used wildcards in the target address.</li> <li>• <b>Targeted</b>—Number of requests received that used a specific address.</li> </ul> </li> <li>• <b>EstablishAck</b>—Number of connection establishment acknowledgement messages received.</li> <li>• <b>CompleteAck</b>—Number of connection completed acknowledgement messages received.</li> </ul>

## Sample Output

### show bgp replication (for Master)

```
user@host> show bgp replication
Synchronization master:
  Precision timer registration: Registered
  Session state: Up, Since: 10:14
  Flaps: 1, Last flap reason: Backup closed connection
  Protocol state: Idle, Since: 10:14
  Synchronization state: Complete
  Number of peers waiting: AckWait: 0, SoWait: 0, Scheduled: 0
  Messages sent: Open 1, Establish 11, GrHelper 0, Update 0, GrStaleLabel 0 Error
0, Complete 1
  Messages received: Open 1, Request 1 wildcard 0 targeted, EstablishAck 11,
GrHelperAck 0, CompleteAck 1
```

### show bgp replication (for Master)

```
user@host> show bgp replication
Synchronization master:
  Session state: Up, Since: 44:07
  Flaps: 0
  Protocol state: Idle, Since: 14
  Synchronization state: Complete
  Number of peers waiting: AckWait: 0, SoWait: 0, Scheduled: 0
  Messages sent: Open 1, Establish 924, Update 381, Error 60, Complete 114
  Messages received: Open 1, Request 1 wildcard 113 targeted, EstablishAck 924,
CompleteAck 114
```

### show bgp replication (for Backup)

```
user@host> show bgp replication
Synchronization backup:
  State: Established 13 ago
  , Unsync timer: 2

  Unsync entry queue:
    Instance: 0 Neighbor: 30.30.30.1 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.3 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.4 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.5 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.6 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.1 elapsed: 7
    Instance: 0 Neighbor: 40.40.40.2 elapsed: 7
```

## show bgp summary

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1708</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 1708</a>
<b>Syntax</b>	<pre>show bgp summary &lt;exact-instance <i>instance-name</i>&gt; &lt;group <i>group-name</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>show bgp summary &lt;exact-instance <i>instance-name</i>&gt; &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>exact-instance</b> option introduced in Junos OS Release 11.4.</p> <p><b>group</b> option introduced in Junos OS Release 13.3.</p>
<b>Description</b>	Display BGP summary information.
<b>Options</b>	<p><b>none</b>—Display BGP summary information for all routing instances.</p> <p><b>exact-instance <i>instance-name</i></b>—(Optional) Display information for the specified instance only.</p> <p><b>group</b>—Display overview of bgp information for a particular group</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for all routing instances whose name begins with this string (for example, <b>cust1</b>, <b>cust11</b>, and <b>cust111</b> are all displayed when you run the <b>show bgp summary instance cust1</b> command). The instance name can be master for the main instance, or any valid configured instance name or its prefix.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show bgp summary (When a Peer Is Not Established) on page 1711</a> <a href="#">show bgp summary (When a Peer Is Established) on page 1711</a> <a href="#">show bgp summary (CLNS) on page 1711</a> <a href="#">show bgp summary (Layer 2 VPN) on page 1712</a> <a href="#">show bgp summary (Layer 3 VPN) on page 1712</a>

[show bgp summary group on page 1712](#)

[show bgp summary \(BGP Graceful Restart or Long-Lived Graceful Restart\) on page 1713](#)

**Output Fields** [Table 93 on page 1709](#) describes the output fields for the **show bgp summary** command. Output fields are listed in the approximate order in which they appear.

*Table 93: show bgp summary Output Fields*

Field Name	Field Description
<b>Groups</b>	Number of BGP groups.
<b>Peers</b>	Number of BGP peers.
<b>Down peers</b>	Number of down BGP peers.
<b>Table</b>	Name of routing table.
<b>Tot Paths</b>	Total number of paths.
<b>Act Paths</b>	Number of active routes.
<b>Suppressed</b>	Number of routes currently inactive because of damping or other reasons. These routes do not appear in the forwarding table and are not exported by routing protocols.
<b>History</b>	Number of withdrawn routes stored locally to keep track of damping history.
<b>Damp State</b>	Number of routes with a figure of merit greater than zero, but still active because the value has not reached the threshold at which suppression occurs.
<b>Pending</b>	Routes in process by BGP import policy.
<b>Peer</b>	Address of each BGP peer. Each peer has one line of output.
<b>AS</b>	Peer's AS number.
<b>InPkt</b>	Number of packets received from the peer.
<b>OutPkt</b>	Number of packets sent to the peer.
<b>OutQ</b>	Number of BGP packets that are queued to be transmitted to a particular neighbor. It normally is 0 because the queue usually is emptied quickly.
<b>Flaps</b>	Number of times the BGP session has gone down and then come back up.
<b>Last Up/Down</b>	Last time since the neighbor transitioned to or from the established state.

Table 93: show bgp summary Output Fields (continued)

Field Name	Field Description
<b>State #Active /Received/Accepted /Damped</b>	<p>Multipurpose field that displays information about BGP peer sessions. The field's contents depend upon whether a session is established and whether it was established on the main routing device or in a routing instance.</p> <ul style="list-style-type: none"> <li>If a peer is not established, the field shows the state of the peer session: <b>Active</b>, <b>Connect</b>, or <b>Idle</b>. In general, the Idle state is the first stage of a connection. BGP is waiting for a Start event. A session can be idle for other reasons as well. The reason that a session is idle is sometimes displayed. For example: <b>Idle (Removal in progress)</b> or <b>Idle (LicenseFailure)</b>.</li> <li>If a BGP session is established on the main routing device, the field shows the number of active, received, accepted, and damped routes that are received from a neighbor and appear in the <b>inet.0</b> (main) and <b>inet.2</b> (multicast) routing tables. For example, <b>8/10/10/2</b> and <b>2/4/4/0</b> indicate the following: <ul style="list-style-type: none"> <li>8 active routes, 10 received routes, 10 accepted routes, and 2 damped routes from a BGP peer appear in the <b>inet.0</b> routing table.</li> <li>2 active routes, 4 received routes, 4 accepted routes, and no damped routes from a BGP peer appear in the <b>inet.2</b> routing table.</li> </ul> </li> <li>If a BGP session is established in a routing instance, the field indicates the established (<b>Establ</b>) state, identifies the specific routing table that receives BGP updates, and shows the number of active, received, and damped routes that are received from a neighbor. For example, <b>Establ VPN-AB.inet.0: 2/4/0</b> indicates the following: <ul style="list-style-type: none"> <li>The BGP session is established.</li> <li>Routes are received in the <b>VPN-AB.inet.0</b> routing table.</li> <li>The local routing device has two active routes, four received routes, and no damped routes from a BGP peer.</li> </ul> </li> </ul> <p>When a BGP session is established, the peers are exchanging update messages.</p> <p><b>NOTE:</b> When graceful restart or LLGR helper mode is active, the RIB information is now displayed by the <b>show bgp summary</b> command. If a BGP session is established on the main routing device, the field shows the number of active, received, accepted, and damped routes that are received from a neighbor and appear in the <b>inet.0</b> (main) and <b>inet.2</b> (multicast) routing tables. For example, <b>8/10/10/2</b> and <b>2/4/4/0</b> indicate the following:</p> <ul style="list-style-type: none"> <li>8 active routes, 10 received routes, 10 accepted routes, and 2 damped routes from a BGP peer appear in the <b>inet.0</b> routing table.</li> <li>2 active routes, 4 received routes, 4 accepted routes, and no damped routes from a BGP peer appear in the <b>inet.2</b> routing table.</li> </ul>

## Sample Output

### show bgp summary (When a Peer Is Not Established)

```

user@host> show bgp summary
Groups: 2 Peers: 4 Down peers: 1
Table Tot Paths Act Paths Suppressed History Damp State Pending
inet.0 6 4 0 0 0 0
Peer AS InPkt OutPkt OutQ Flaps Last Up/Dwn
State|#Active/Received/Damped...
10.0.0.3 65002 86 90 0 2 42:54 0/0/0
0/0/0
10.0.0.4 65002 90 91 0 1 42:54 0/2/0
0/0/0
10.0.0.6 65002 87 90 0 3 3 Active
10.1.12.1 65001 89 89 0 1 42:54 4/4/0
0/0/0

```

### show bgp summary (When a Peer Is Established)

```

user@host> show bgp summary
Groups: 1 Peers: 3 Down peers: 0
Table Tot Paths Act Paths Suppressed History Damp State Pending
inet.0 6 4 0 0 0 0
Peer AS InPkt OutPkt OutQ Flaps Last Up/Dwn
State|#Active/Received/Damped...
10.0.0.2 65002 88675 88652 0 2 42:38 2/4/0
0/0/0
10.0.0.3 65002 54528 54532 0 1 2w4d22h 0/0/0
0/0/0
10.0.0.4 65002 51597 51584 0 0 2w3d22h 2/2/0
0/0/0

user@host> show bgp summary logical-system R3
Groups: 2 Peers: 2 Down peers: 0
Table Tot Paths Act Paths Suppressed History Damp State Pending
bgp.l3vpn.0 2 2 0 0 0 0
Peer AS InPkt OutPkt OutQ Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
1.1.1.2 2 204 206 0 0 1:30:59
Establ
  bgp.l3vpn.0: 2/2/2/0
  red.inet.0: 2/2/2/0
10.1.1.10 3 206 207 0 0 1:31:36
Establ
  red.inet.0: 2/2/2/0

```

### show bgp summary (CLNS)

```

user@host> show bgp summary
Groups: 1 Peers: 1 Down peers: 0
Peer AS InPkt OutPkt OutQ Flaps Last Up/Dwn
State|#Active/Received/Damped...

```

```

10.245.245.1      200      1735      1737      0      0      14:26:12 Establ
  bgp.isovpn.0: 3/3/0
  aaaa.iso.0: 3/3/0

```

### show bgp summary (Layer 2 VPN)

```

user@host> show bgp summary
Groups: 1 Peers: 5 Down peers: 0
Table          Tot Paths  Act Paths Suppressed  History  Damp State   Pending
bgp.l2vpn.0      1          1          0          0        0      0        0
inet.0           0          0          0          0        0      0        0
Peer            AS      InPkt   OutPkt   OutQ    Flaps  Last
Up/Dwn State|#Active/Received/Damped...
10.255.245.35   65299      72      74       0        1     19:00 Establ
  bgp.l2vpn.0: 1/1/0
  frame-vpn.l2vpn.0: 1/1/0
10.255.245.36   65299     2164     2423     0        4     19:50 Establ
  bgp.l2vpn.0: 0/0/0
  frame-vpn.l2vpn.0: 0/0/0
10.255.245.37   65299      36      37       0        4     17:07 Establ
  inet.0: 0/0/0
10.255.245.39   65299     138     168       0        6     53:48 Establ
  bgp.l2vpn.0: 0/0/0
  frame-vpn.l2vpn.0: 0/0/0
10.255.245.69   65299     134     140       0        6     53:42 Establ
  inet.0: 0/0/0

```

### show bgp summary (Layer 3 VPN)

```

user@host> show bgp summary
Groups: 2 Peers: 2 Down peers: 0
Table          Tot Paths  Act Paths Suppressed  History  Damp State Pending
bgp.l3vpn.0      2          2          0          0        0      0        0
Peer            AS      InPkt   OutPkt   OutQ    Flaps  Last Up/Dwn
State|#Active/Received/Damped...
10.39.1.5        2        21      22       0        0     6:26 Establ
  VPN-AB.inet.0: 1/1/0
10.255.71.15     1        19      21       0        0     6:17 Establ
  bgp.l3vpn.0: 2/2/0
  VPN-A.inet.0: 1/1/0
  VPN-AB.inet.0: 2/2/0
  VPN-B.inet.0: 1/1/0

```

### show bgp summary group

```

user@host> show bgp summary group Group2
Groups: 3 Peers: 3 Down peers: 3
Table          Tot Paths  Act Paths Suppressed  History  Damp State   Pending
inet.0           0          0          0          0        0      0        0
Peer            AS      InPkt   OutPkt   OutQ    Flaps  Last Up/Dwn
State|#Active/Received/Accepted/Damped...
10.0.0.1         56         0         0         0        0      0        51
Idle

```

```

user@host> show bgp summary logical-system R3 group toR4
Groups: 2 Peers: 2 Down peers: 0
Table          Tot Paths  Act Paths Suppressed  History  Damp State   Pending
bgp.l3vpn.0      2          2          0          0        0      0        0

```

Peer	AS	InPkt	OutPkt	OutQ	Flaps	Last	Up/Dwn
State #Active/Received/Accepted/Damped...							
10.1.1.10	3	207	207	0	0		1:31:40
Establ							
red.inet.0:	2/2/2/0						

#### show bgp summary (BGP Graceful Restart or Long-Lived Graceful Restart)

```

user@router> show route receive-protocol bgp 10.4.12.11 detail
Groups: 2 Peers: 9 Down peers: 1
...
Peer          AS      InPkt    OutPkt    OutQ    Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
10.255.255.16 100      7        6        0        4      4
Idle
  bgp.13vpn.0: 0/7/7/0
  foo.inet.0: 0/7/7/0

```

## show policy damping

---

List of Syntax	<a href="#">Syntax on page 1714</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 1714</a>
Syntax	<code>show policy damping</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
Syntax (EX Series Switch and QFX Series)	<code>show policy damping</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about BGP route flap damping parameters.
Options	<b>none</b> —Display information about BGP route flap damping parameters.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
Additional Information	In the output from this command, figure-of-merit values correlate with the probability of future instability of a routing device. Routes with higher figure-of-merit values are suppressed for longer periods of time. The figure-of-merit value decays exponentially over time. A figure-of-merit value of zero is assigned to each new route. The value is increased each time the route is withdrawn or readvertised, or when one of its path attributes changes.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• “Configuring BGP Flap Damping Parameters” in the <i>Routing Policies, Firewall Filters, and Traffic Policers Feature Guide</i></li><li>• <a href="#">clear bgp damping on page 1668</a></li><li>• <a href="#">show route damping on page 2223</a></li></ul>
List of Sample Output	<a href="#">show policy damping on page 1715</a>
Output Fields	<a href="#">Table 94 on page 1715</a> describes the output fields for the <b>show policy damping</b> command. Output fields are listed in the approximate order in which they appear.

Table 94: show policy damping Output Fields

Field Name	Field Description
<b>Halflife</b>	Decay half-life, in minutes. The value represents the period during which the accumulated figure-of-merit value is reduced by half if the route remains stable. If a route has flapped, but then becomes stable, the figure-of-merit value for the route decays exponentially. For example, for a route with a figure-of-merit value of 1500, if no incidents occur, its figure-of-merit value is reduced to 750 after 15 minutes and to 375 after another 15 minutes.
<b>Reuse merit</b>	Figure-of-merit value below which a suppressed route can be used again. A suppressed route becomes reusable when its figure-of-merit value decays to a value below a reuse threshold, and the route once again is considered usable and can be installed in the forwarding table and exported from the routing table.
<b>Suppress/cutoff merit</b>	Figure-of-merit value above which a route is suppressed for use or inclusion in advertisements. When a route's figure-of-merit value reaches a particular level, called the cutoff or suppression threshold, the route is suppressed. When a route is suppressed, the routing table no longer installs the route into the forwarding table and no longer exports this route to any of the routing protocols.
<b>Maximum suppress time</b>	Maximum hold-down time, in minutes. The value represents the maximum time that a route can be suppressed no matter how unstable it has been before this period of stability.
<b>Computed values</b>	<ul style="list-style-type: none"> <li>• <b>Merit ceiling</b>—Maximum merit that a flapping route can collect.</li> <li>• <b>Maximum decay</b>—Maximum decay half-life, in minutes.</li> </ul>

## Sample Output

### show policy damping

```

user@host> show policy damping
Default damping information:
  Halflife: 15 minutes
  Reuse merit: 750 Suppress/cutoff merit: 3000
  Maximum suppress time: 60 minutes
  Computed values:
    Merit ceiling: 12110
    Maximum decay: 6193
Damping information for "standard-damping":
  Halflife: 10 minutes
  Reuse merit: 4000 Suppress/cutoff merit: 8000
  Maximum suppress time: 30 minutes
  Computed values:
    Merit ceiling: 32120
    Maximum decay: 12453

```



## CHAPTER 18

# ES-IS Operational Commands

- `clear esis adjacency`
- `clear esis statistics`
- `show esis adjacency`
- `show esis interface`
- `show esis statistics`

## clear esis adjacency

---

<b>Syntax</b>	<code>clear esis adjacency</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;neighbor&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Clear End System-to-Intermediate System (ES-IS) adjacencies.
<b>Options</b>	<b>none</b> —Clear all ES-IS adjacencies.  <b>instance <i>instance-name</i></b> —(Optional) Clear adjacencies for the specified routing instance only.  <b>interface <i>interface-name</i></b> —(Optional) Clear adjacencies for the specified interface only.  <b>neighbor</b> —(Optional) Clear adjacencies for the specified neighbor only.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show esis adjacency on page 1720</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear esis adjacency on page 1718</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear esis adjacency

```
user@host> clear esis adjacency
```

## clear esis statistics

---

<b>Syntax</b>	clear esis statistics <instance <i>instance-name</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Clear End System-to-Intermediate System (ES-IS) packet statistics.
<b>Options</b>	<b>none</b> —Clear ES-IS packet statistics for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Clear ES-IS packet statistics for the specified routing instance only.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show esis statistics on page 1725</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear esis statistics on page 1719</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear esis statistics

```
user@host> clear esis statistics
```

## show esis adjacency

**Syntax** show esis adjacency  
 <brief | detail | extensive>  
 <esis-neighbor-id>  
 <instance *instance-name*>  
 <interface *interface-name*>

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display End System-to-Intermediate System (ES-IS) adjacencies.

**Options** **none**—(Same as **brief**) Display all ES-IS adjacencies.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**esis-neighbor-id**—(Optional) Display adjacencies for the specified neighbor's network service access point (NSAP) only.

**instance *instance-name***—(Optional) Display adjacencies for the specified routing instance only.

**interface *interface-name***—(Optional) Display adjacencies for the specified interface only.

**Required Privilege Level** view

**Related Documentation**

- [clear esis adjacency on page 1718](#)

**List of Sample Output**

- [show esis adjacency on page 1721](#)
- [show esis adjacency brief on page 1721](#)
- [show esis adjacency detail on page 1721](#)
- [show esis adjacency extensive on page 1721](#)

**Output Fields** [Table 95 on page 1720](#) describes the output fields for the **show esis adjacency** command. Output fields are listed in the approximate order in which they appear.

*Table 95: show esis adjacency Output Fields*

Field Name	Field Description	Level of Output
Nbr Type	Type of network service access point (NSAP) of this neighbor.	<b>brief</b> none
NSAP/NET	NSAP of this neighbor.	All levels
Type	Type of NSAP of this neighbor.	<b>detail</b> extensive

Table 95: show esis adjacency Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Hold (secs)</b>	Holdtime interval advertised by this neighbor.	<b>brief none</b>
<b>Interface</b>	Interface through which the neighbor is reachable.	All levels
<b>Advertised holdtime</b>	Holdtime interval advertised by this neighbor.	<b>detail extensive</b>
<b>Expires in</b>	How long until the adjacency expires, in seconds.	<b>detail extensive</b>
<b>SNPA</b>	Subnetwork point of attachment (MAC address of the neighbor).	<b>detail extensive</b>
<b>Transition log</b>	List of recent transitions. <ul style="list-style-type: none"> <li>• <b>When</b>—Time of advertisement from this neighbor.</li> <li>• <b>State</b>—State of the adjacency: <b>Up</b>, <b>Down</b>, <b>New</b>, <b>One-way</b>, <b>Initializing</b>, or <b>Rejected</b>.</li> <li>• <b>Event</b>—Event causing the state.</li> <li>• <b>Down reason</b>—Reason the adjacency is down.</li> </ul>	<b>extensive</b>

## Sample Output

### show esis adjacency

```

user@host> show esis adjacency
Nbr   NSAP/NET                               Hold  Interface
Type                                     (secs)
IS    47.0005.80ff.f800.0000.0108.0001.0102.5501.6008    135 fe-0/0/0.0

```

### show esis adjacency brief

The output for the **show esis adjacency brief** command is identical to that for the **show esis adjacency** command. For sample output, see [show esis adjacency on page 1721](#).

### show esis adjacency detail

```

user@host> show esis adjacency detail
NSAP/NET: 47.0005.80ff.f800.0000.0108.0001.0102.5501.6008, Type: IS
Interface: fe-0/0/0.0, Advertised hold time: 180 secs, Expires in: 173 secs
SNPA: 0:5:85:c1:73:71

```

### show esis adjacency extensive

```

user@host> show esis adjacency extensive
NSAP/NET: 47.0005.80ff.f800.0000.0108.0001.0102.5501.6008, Type: IS
Interface: fe-0/0/0.0, Advertised hold time: 180 secs, Expires in: 167 secs
SNPA: 0:5:85:c1:73:71
Transition log:
When           State      Event           Down reason
Sun Nov 26 22:07:35  Up        Received ISH

```



## show esis interface

<b>Syntax</b>	show esis interface <brief   detail   extensive> <instance <i>instance-name</i> > <interface <i>interface-name</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display End System-to-Intermediate System (ES-IS) interface information.
<b>Options</b>	<p><b>none</b>—(Same as <b>brief</b>) Display information for all configured ES-IS interfaces.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display configured interfaces for the specified routing instance only.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display information about the specified interface only.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show esis interface on page 1724</a> <a href="#">show esis interface brief on page 1724</a> <a href="#">show esis interface detail on page 1724</a> <a href="#">show esis interface extensive on page 1724</a>
<b>Output Fields</b>	Table 96 on page 1723 describes the output fields for the <b>show esis interface</b> command. Output fields are listed in the approximate order in which they appear.

Table 96: show esis interface Output Fields

Field Name	Field Description	Level of Output
<b>Interface</b>	Interface through which the adjacency is made.	All levels
<b>Receives</b>	Types of hello messages that are received.	All levels
<b>Sends</b>	Types of hello messages that are sent.	All levels
<b>Hello interval</b>	Interface's hello interval, in seconds.	All levels
<b>Adjacencies or Num Adj</b>	Number of adjacencies established on this interface.	All levels
<b>Holdtime</b>	Interface's hold time, in seconds.	<b>detail extensive</b>

Table 96: show esis interface Output Fields (continued)

Field Name	Field Description	Level of Output
State	Internal implementation information.	detail extensive
End system configuration timer	Time, in seconds, for the end system to configure itself for ES-IS.	detail extensive
Interface index	Index value.	detail extensive
NET used in hello	Network entity title used in hello messages.	detail extensive

## Sample Output

### show esis interface

```

user@host> show esis interface
Interface          Receives    Sends Hello Interval  Num Adj
fe-0/0/0.0         ISH         ISH         60.00                1
lo0.0              ISH         -           60.00                0

```

### show esis interface brief

The output for the **show esis interface brief** command is identical to that for the **show esis interface** command. For sample output, see [show esis interface on page 1724](#).

### show esis interface detail

```

user@host> show esis interface detail
Interface: fe-0/0/0.0
  Receives: ISH, Sends: ISH, Hello interval: 60.00
  Adjacencies: 1, Holdtime: 180, End system configuration timer: 180
  Interface index: 68, State: 0x2
  NET used in hello: 47.0005.80ff.f800.0000.0108.0001.0102.5501.6007

Interface: lo0.0
  Receives: ISH, Sends: - , Hello interval: 60.00
  Adjacencies: 0, Holdtime: 180, End system configuration timer: 180
  Interface index: 64, State: 0x2
  NET used in hello: 47.0005.80ff.f800.0000.0108.0001.0102.5501.6007

```

### show esis interface extensive

The output for the **show esis interface extensive** command is identical to that for the **show esis interface detail** command. For sample output, see [show esis interface detail on page 1724](#).

## show esis statistics

<b>Syntax</b>	show esis statistics <instance <i>instance-name</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display End System-to-Intermediate System (ES-IS) packet statistics.
<b>Options</b>	<p><b>none</b>—Display ES-IS packet statistics for all routing instances.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display ES-IS statistics for the specified routing instance only.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">clear esis statistics on page 1719</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show esis statistics on page 1726</a>
<b>Output Fields</b>	<p><a href="#">Table 97 on page 1725</a> describes the output fields for the <b>show esis statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 97: show esis statistics Output Fields*

Field Name	Field Description
<b>PDU type</b>	Protocol data unit type.
<b>Received</b>	Number of PDUs received since IS-IS started or since the statistics were set to zero.
<b>Processed</b>	Number of PDUs received less the number dropped.
<b>Drops</b>	Number of PDUs dropped.
<b>Sent</b>	Number of PDUs transmitted since IS-IS started or since the statistics were set to zero.
<b>Total packets received/sent</b>	Total number of PDUs received and transmitted since IS-IS started or since the statistics were set to zero.

## Sample Output

### show esis statistics

```
user@host> show esis statistics
PDU type  Received Processed Drops   Sent
ESH              3         3     0     8
ISH             11        10     1     4
RD              0         0     0     0
Unknown         0         0     0     0
Totals         14        13     1    12
Total packets received: 14 sent: 0
```

## CHAPTER 19

# IP Multicast Operational Commands

- clear amt statistics
- clear amt tunnel
- clear igmp membership
- clear igmp snooping membership
- clear igmp snooping statistics
- clear igmp statistics
- clear mld membership
- clear mld statistics
- clear msdp cache
- clear msdp statistics
- clear multicast bandwidth-admission
- clear multicast forwarding-cache
- clear multicast scope
- clear multicast sessions
- clear multicast snooping statistics
- clear multicast statistics
- clear pim join
- clear pim join-distribution
- clear pim register
- clear pim snooping join
- clear pim snooping statistics
- clear pim statistics
- request pim multicast-tunnel rebalance
- show amt statistics
- show amt summary
- show amt tunnel
- show dvmrp interfaces
- show dvmrp neighbors

- `show dvmrp prefix`
- `show dvmrp prunes`
- `show igmp group`
- `show igmp interface`
- `show igmp snooping interface`
- `show igmp snooping membership`
- `show igmp snooping statistics`
- `show igmp statistics`
- `show mld group`
- `show mld interface`
- `show mld statistics`
- `show msdp`
- `show msdp source`
- `show msdp source-active`
- `show msdp statistics`
- `show multicast backup-pe-groups`
- `show multicast flow-map`
- `show multicast forwarding-cache statistics`
- `show multicast interface`
- `show multicast mrinfo`
- `show multicast next-hops`
- `show multicast pim-to-igmp-proxy`
- `show multicast pim-to-mld-proxy`
- `show multicast route`
- `show multicast rpf`
- `show multicast scope`
- `show multicast snooping next-hops`
- `show multicast sessions`
- `show multicast snooping route`
- `show multicast statistics`
- `show multicast usage`
- `show pim bootstrap`
- `show pim interfaces`
- `show pim join`
- `show pim mdt`
- `show pim mdt data-mdt-joins`
- `show pim mdt data-mdt-limit`

- `show pim neighbors`
- `show pim rps`
- `show pim snooping interfaces`
- `show pim snooping join`
- `show pim snooping neighbors`
- `show pim snooping statistics`
- `show pim source`
- `show pim statistics`
- `show sap listen`
- `test msdp`

## clear amt statistics

---

<b>Syntax</b>	<code>clear amt statistics</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Release Information</b>	Command introduced in JUNOS Release 10.2.
<b>Description</b>	Clear Automatic Multicast Tunneling (AMT) statistics.
<b>Options</b>	<b>none</b> —Clear the multicast statistics for all AMT tunnel interfaces.  <b>instance <i>instance-name</i></b> —(Optional) Clear AMT multicast statistics for the specified instance.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show amt statistics on page 1768</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear amt statistics on page 1730</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear amt statistics

```
user@host> clear amt statistics
```

## clear amt tunnel

<b>Syntax</b>	<pre>clear amt tunnel &lt;gateway <i>gateway-ip-addr</i>&gt; &lt;port <i>port-number</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;statistics&gt; &lt;tunnel-interface <i>interface-name</i>&gt;</pre>
<b>Release Information</b>	Command introduced in JUNOS Release 10.2.
<b>Description</b>	Clear the Automatic Multicast Tunneling (AMT) multicast state. Optionally, clear AMT protocol statistics.
<b>Options</b>	<p><b>none</b>—Clear multicast state for all AMT tunnel interfaces.</p> <p><b>gateway <i>gateway-ip-addr</i> port <i>port-number</i></b>—(Optional) Clear the AMT multicast state for the specified gateway address. If no port is specified, clear the AMT multicast state for all AMT gateways with the given IP address.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear the AMT multicast state for the specified instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>statistics</b>—(Optional) Clear multicast statistics for all AMT tunnels or for specified tunnels.</p> <p><b>tunnel-interface <i>interface-name</i></b>—(Optional) Clear the AMT multicast state for the specified AMT tunnel interface.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show amt tunnel on page 1773</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear amt tunnel on page 1731</a> <a href="#">clear amt tunnel statistics gateway-address on page 1732</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear amt tunnel

```
user@host> clear amt tunnel
```

### clear amt tunnel statistics gateway-address

```
user@host> clear amt tunnel statistics gateway-address 100.31.1.21 port 4000
```

## clear igmp membership

<b>List of Syntax</b>	<a href="#">Syntax on page 1733</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1733</a>
<b>Syntax</b>	<pre>clear igmp membership &lt;all&gt; &lt;group <i>address-range</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>clear igmp membership &lt;group <i>address-range</i>&gt; &lt;interface <i>interface-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Clear Internet Group Management Protocol (IGMP) group members.
<b>Options</b>	<p><b>all</b>—Clear IGMP members for groups and interfaces in the master instance.</p> <p><b>group <i>address-range</i></b>—(Optional) Clear all IGMP members that are in a particular address range. An example of a range is <b>233.252/16</b>. If you omit the destination prefix length, the default is <b>/32</b>.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear all IGMP group members on an interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show igmp group on page 1787</a></li> <li>• <a href="#">show igmp interface on page 1791</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear igmp membership all on page 1734</a> <a href="#">clear igmp membership interface on page 1734</a> <a href="#">clear igmp membership group on page 1735</a>
<b>Output Fields</b>	See <a href="#">show igmp group</a> for an explanation of output fields.

## Sample Output

### clear igmp membership all

The following sample output displays IGMP group information before and after the **clear igmp membership** command is entered:

```
user@host> show igmp group
Interface      Group           Last Reported   Timeout
so-0/0/0       198.51.100.253  203.0.113.1     186
so-0/0/0       198.51.100.254  203.0.113.1     186
so-0/0/0       198.51.100.255  203.0.113.1     187
so-0/0/0       198.51.100.240  203.0.113.1     188
local          198.51.100.6    (null)           0
local          198.51.100.5    (null)           0
local          198.51.100.25   (null)           0
local          198.51.100.22   (null)           0
local          198.51.100.2    (null)           0
local          198.51.100.13   (null)           0
```

```
user@host> clear igmp membership all
Clearing Group Membership Info for so-0/0/0
Clearing Group Membership Info for so-1/0/0
Clearing Group Membership Info for so-2/0/0
```

```
user@host> show igmp group
Interface      Group           Last Reported   Timeout
local          198.51.100.6    (null)           0
local          198.51.100.5    (null)           0
local          198.51.100.254  (null)           0
local          198.51.100.255  (null)           0
local          198.51.100.2    (null)           0
local          198.51.100.13   (null)           0
```

### clear igmp membership interface

The following sample output displays IGMP group information before and after the **clear igmp membership interface** command is issued:

```
user@host> show igmp group
Interface      Group           Last Reported   Timeout
so-0/0/0       198.51.100.253  203.0.113.1     210
so-0/0/0       198.51.100.200  203.0.113.1     210
so-0/0/0       198.51.100.255  203.0.113.1     215
so-0/0/0       198.51.100.254  203.0.113.1     216
local          198.51.100.6    (null)           0
local          198.51.100.5    (null)           0
local          198.51.100.254  (null)           0
local          198.51.100.255  (null)           0
local          198.51.100.2    (null)           0
local          198.51.100.13   (null)           0
```

```
user@host> clear igmp membership interface so-0/0/0
Clearing Group Membership Info for so-0/0/0
```

```
user@host> show igmp group
```

Interface	Group	Last Reported	Timeout
local	198.51.100.6	(null)	0
local	198.51.100.5	(null)	0
local	198.51.100.254	(null)	0
local	198.51.100.255	(null)	0
local	198.51.100.2	(null)	0
local	198.51.100.13	(null)	0

### clear igmp membership group

The following sample output displays IGMP group information before and after the **clear igmp membership group** command is entered:

```
user@host> show igmp group
Interface      Group           Last Reported   Timeout
so-0/0/0      198.51.100.253 203.0.113.1     210
so-0/0/0      198.51.100.25  203.0.113.1     210
so-0/0/0      198.51.100.255 203.0.113.1     215
so-0/0/0      198.51.100.254 203.0.113.1     216
local         198.51.100.6   (null)          0
local         198.51.100.5   (null)          0
local         198.51.100.254 (null)          0
local         198.51.100.25  (null)          0
local         198.51.100.2   (null)          0
local         198.51.100.13  (null)          0
```

```
user@host> clear igmp membership group 233.252/16
Clearing Group Membership Range 198.51.100.0/16 on so-0/0/0
Clearing Group Membership Range 198.51.100.0/16 on so-1/0/0
Clearing Group Membership Range 198.51.100.0/16 on so-2/0/0
```

```
user@host> show igmp group
Interface      Group           Last Reported   Timeout
so-0/0/0      198.51.100.255 203.0.113.1     231
so-0/0/0      198.51.100.254 203.0.113.1     233
so-0/0/0      198.51.100.253 203.0.113.1     236
local         198.51.100.6   (null)          0
local         198.51.100.5   (null)          0
local         198.51.100.254 (null)          0
local         198.51.100.255 (null)          0
local         198.51.100.2   (null)          0
local         198.51.100.13  (null)          0
```

## clear igmp snooping membership

---

<b>Syntax</b>	<pre>clear igmp snooping membership &lt;vlan <i>vlan-name</i>&gt; &lt;group   source <i>address</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;learning-domain <i>learning-domain-name</i>&gt; &lt;logical-system <i>logical-system-name</i>&gt; &lt;vlan-id <i>vlan-identifier</i>&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 8.5. Command introduced in Junos OS Release 18.1R1 for the SRX1500 devices.
<b>Description</b>	Clear IGMP snooping dynamic membership information from the multicast forwarding table.
<b>Options</b>	<p><b>none</b>—Clear IGMP snooping membership for all supported address families on all interfaces.</p> <p><b>vlan <i>vlan-name</i></b> —(Optional) Clear dynamic membership information for the specified VLAN.</p> <p><b>group   source <i>address</i></b>—(Optional) Clear IGMP snooping membership for the specified multicast group or source address.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear IGMP snooping membership for the specified instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear IGMP snooping membership on a specific interface.</p> <p><b>learning-domain <i>learning-domain-name</i></b>—(Optional) Perform this operation on all learning domains or on a particular learning domain.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display information about a particular logical system, or for all logical systems.</p> <p><b>vlan-id <i>vlan-identifier</i></b>—(Optional) Perform this operation on a particular VLAN.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show igmp snooping membership on page 1801</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear igmp snooping membership on page 1737</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

clear igmp snooping membership

```
user@host> clear igmp snooping membership
```

## clear igmp snooping statistics

---

<b>Syntax</b>	<code>clear igmp snooping statistics</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;learning-domain (all   <i>learning-domain-name</i>)&gt;</code> <code>&lt;logical-system <i>logical-system-name</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.5. Command introduced in Junos OS Release 18.1R1 for the SRX1500 devices.
<b>Description</b>	Clear IP IGMP snooping statistics.
<b>Options</b>	<b>none</b> —Clear IGMP snooping statistics for all supported address families on all interfaces.  <b>instance <i>instance-name</i></b> —(Optional) Clear IGMP snooping statistics for the specified instance.  <b>interface <i>interface-name</i></b> —(Optional) Clear IGMP snooping statistics on a specific interface.  <b>learning-domain (all   <i>learning-domain-name</i>)</b> —(Optional) Perform this operation on all learning domains or on a particular learning domain.  <b>logical-system <i>logical-system-name</i></b> —(Optional) Delete the IGMP snooping statistics for a given logical system or for all logical systems.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show igmp snooping statistics on page 1806</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear igmp snooping statistics on page 1738</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear igmp snooping statistics

```
user@host> clear igmp snooping statistics
```

## clear igmp statistics

<b>List of Syntax</b>	<a href="#">Syntax on page 1739</a> <a href="#">Syntax (EX Series Switches) on page 1739</a>
<b>Syntax</b>	clear igmp statistics <interface <i>interface-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switches)</b>	clear igmp statistics <interface <i>interface-name</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear Internet Group Management Protocol (IGMP) statistics.
<b>Options</b>	<b>none</b> —Clear IGMP statistics on all interfaces.  <b>interface <i>interface-name</i></b> —(Optional) Clear IGMP statistics for the specified interface only.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show igmp statistics on page 1811</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear igmp statistics on page 1739</a>
<b>Output Fields</b>	See <a href="#">show igmp statistics</a> for an explanation of output fields.

## Sample Output

### clear igmp statistics

The following sample output displays IGMP statistics information before and after the **clear igmp statistics** command is entered:

```

user@host> show igmp statistics
IGMP packet statistics for all interfaces
IGMP Message type      Received      Sent  Rx errors
Membership Query        8883         459      0
V1 Membership Report    0            0        0

```

DVMRP	19784	35476	0
PIM V1	18310	0	0
Cisco Trace	0	0	0
V2 Membership Report	0	0	0
Group Leave	0	0	0
Mtrace Response	0	0	0
Mtrace Request	0	0	0
Domain Wide Report	0	0	0
V3 Membership Report	0	0	0
Other Unknown types			0
IGMP v3 unsupported type			0
IGMP v3 source required for SSM			0
IGMP v3 mode not applicable for SSM			0
IGMP Global Statistics			
Bad Length	0		
Bad Checksum	0		
Bad Receive If	0		
Rx non-local	1227		

```
user@host> clear igmp statistics
user@host> show igmp statistics
IGMP packet statistics for all interfaces
IGMP Message type      Received      Sent  Rx errors
Membership Query        0             0      0
V1 Membership Report    0             0      0
DVMRP                   0             0      0
PIM V1                  0             0      0
Cisco Trace             0             0      0
V2 Membership Report    0             0      0
Group Leave             0             0      0
Mtrace Response         0             0      0
Mtrace Request          0             0      0
Domain Wide Report      0             0      0
V3 Membership Report    0             0      0
Other Unknown types     0             0      0
IGMP v3 unsupported type 0             0      0
IGMP v3 source required for SSM 0             0      0
IGMP v3 mode not applicable for SSM 0             0      0
IGMP Global Statistics
Bad Length              0
Bad Checksum            0
Bad Receive If          0
Rx non-local            0
```

## clear mld membership

<b>Syntax</b>	clear mld membership <all> <group <i>group-name</i> > <interface <i>interface-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Clear Multicast Listener Discovery (MLD) group membership.
<b>Options</b>	<p><b>all</b>—Clear MLD memberships for groups and interfaces in the master instance.</p> <p><b>group <i>group-name</i></b>—(Optional) Clear MLD membership for the specified group.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear MLD group membership for the specified interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show mld group on page 1814</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear mld membership all on page 1741</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear mld membership all

```
user@host> clear mld membership all
```

## clear mld statistics

---

<b>Syntax</b>	<code>clear mld statistics</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Clear Multicast Listener Discovery (MLD) statistics.
<b>Options</b>	<b>none</b> —(Same as <b>logical-system all</b> ) Clear MLD statistics for all interfaces. <b>interface <i>interface-name</i></b> —(Optional) Clear MLD statistics for the specified interface. <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show mld statistics on page 1822</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear mld statistics on page 1742</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear mld statistics

```
user@host> clear mld statistics
```

## clear msdp cache

<b>Syntax</b>	clear msdp cache <all> <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )> <peer <i>peer-address</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear the entries in the Multicast Source Discovery Protocol (MSDP) source-active cache.
<b>Options</b>	<p><b>all</b>— Clear all MSDP source-active cache entries in the master instance.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear entries for a specific MSDP instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>peer <i>peer-address</i></b>—(Optional) Clear the MSDP source-active cache entries learned from a specific peer.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show msdp source-active on page 1830</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear msdp cache all on page 1743</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear msdp cache all

```
user@host> clear msdp cache all
```

## clear msdp statistics

---

<b>Syntax</b>	<code>clear msdp statistics</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;peer <i>peer-address</i>&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear Multicast Source Discovery Protocol (MSDP) peer statistics.
<b>Options</b>	<b>none</b> —Clear MSDP statistics for all peers.  <b>instance <i>instance-name</i></b> —(Optional) Clear statistics for the specified instance.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>peer <i>peer-address</i></b> —(Optional) Clear the statistics for the specified peer.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show msdp statistics on page 1833</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear msdp statistics on page 1744</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear msdp statistics

```
user@host> clear msdp statistics
```

## clear multicast bandwidth-admission

**Syntax** clear multicast bandwidth-admission  
 <group *group-address*>  
 <inet | inet6>  
 <instance *instance-name*>  
 <interface *interface-name*>  
 <source *source-address*>

**Release Information** Command introduced in Junos OS Release 8.3.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
**inet6** and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.  
 Command introduced in Junos OS Release 11.3 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Reapply IP multicast bandwidth admissions.

**Options** **none**—Reapply multicast bandwidth admissions for all IPv4 forwarding entries in the master routing instance.

**group *group-address***—(Optional) Reapply multicast bandwidth admissions for the specified group.

**inet**—(Optional) Reapply multicast bandwidth admission settings for IPv4 flows.

**inet6**—(Optional) Reapply multicast bandwidth admission settings for IPv6 flows.

**instance *instance-name***—(Optional) Reapply multicast bandwidth admission settings for the specified instance. If you do not specify an instance, the command applies to the master routing instance.

**interface *interface-name***—(Optional) Examines the corresponding outbound interface in the relevant entries and acts as follows:

- If the interface is congested, and it was admitted previously, it is removed.
- If the interface was rejected previously, the **clear multicast bandwidth-admission** command enables the interface to be admitted as long as enough bandwidth exists on the interface.
- If you do not specify an interface, issuing the **clear multicast bandwidth-admission** command readmits any previously rejected interface for the relevant entries as long as enough bandwidth exists on the interface.

To manually reject previously admitted outbound interfaces, you must specify the interface.

**source *source-address***—(Optional) Use with the **group** option to reapply multicast bandwidth admission settings for the specified (source, group) entry.

**Required Privilege Level**    clear

**Related Documentation**    • [show multicast interface on page 1843](#)

**List of Sample Output**    [clear multicast bandwidth-admission on page 1746](#)

**Output Fields**    When you enter this command, you are provided feedback on the status of your request.

## Sample Output

`clear multicast bandwidth-admission`

```
user@host> clear multicast bandwidth-admission
```

## clear multicast forwarding-cache

<b>Syntax</b>	clear multicast forwarding-cache <all> <inet   inet6> <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced in Junos OS Release 12.2.
<b>Description</b>	Clear IP multicast forwarding cache entries.  This command is not supported for next-generation multiprotocol BGP multicast VPNs (MVPNs).
<b>Options</b>	<p><b>all</b>—Clear all multicast forwarding cache entries in the master instance.</p> <p><b>inet</b>—(Optional) Clear multicast forwarding cache entries for IPv4 family addresses.</p> <p><b>inet6</b>—(Optional) Clear multicast forwarding cache entries for IPv6 family addresses.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear multicast forwarding cache entries on a specific routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show multicast forwarding-cache statistics on page 1841</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear multicast forwarding-cache all on page 1747</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

clear multicast forwarding-cache all

```
user@host> clear multicast forwarding-cache all
```

## clear multicast scope

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1748</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1748</a>
<b>Syntax</b>	<pre>clear multicast scope &lt;inet   inet6&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>clear multicast scope &lt;inet   inet6&gt; &lt;interface <i>interface-name</i>&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 7.6. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>inet6</b> option introduced in Junos OS Release 10.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear IP multicast scope statistics.
<b>Options</b>	<p><b>none</b>—(Same as <b>logical-system all</b>) Clear multicast scope statistics.</p> <p><b>inet</b>—(Optional) Clear multicast scope statistics for IPv4 family addresses.</p> <p><b>inet6</b>—(Optional) Clear multicast scope statistics for IPv6 family addresses.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear multicast scope statistics on a specific interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show multicast scope on page 1871</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear multicast scope on page 1749</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

`clear multicast scope`

```
user@host> clear multicast scope
```

## clear multicast sessions

---

List of Syntax	<a href="#">Syntax on page 1750</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1750</a>
Syntax	clear multicast sessions <logical-system (all   <i>logical-system-name</i> )> < <i>regular-expression</i> >
Syntax (EX Series Switch and the QFX Series)	clear multicast sessions < <i>regular-expression</i> >
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Clear IP multicast sessions.
Options	<b>none</b> —(Same as <b>logical-system all</b> ) Clear multicast sessions.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b><i>regular-expression</i></b> —(Optional) Clear only multicast sessions that contain the specified regular expression.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show multicast sessions on page 1876</a></li></ul>
List of Sample Output	<a href="#">clear multicast sessions on page 1750</a>
Output Fields	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear multicast sessions

```
user@host> clear multicast sessions
```

## clear multicast snooping statistics

---

<b>Syntax</b>	clear multicast snooping statistics <instance <i>instance-name</i> > <interface <i>interface-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced in Junos OS Release 8.5.
<b>Description</b>	Clear IP multicast snooping statistics.
<b>Options</b>	<p><b>none</b>—Clear multicast snooping statistics for all supported address families on all interfaces.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear multicast snooping statistics for the specified instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear multicast snooping statistics on a specific interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	clear
<b>List of Sample Output</b>	<a href="#">clear multicast snooping statistics on page 1751</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear multicast snooping statistics

```
user@host> clear multicast snooping statistics
```

## clear multicast statistics

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1752</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1752</a>
<b>Syntax</b>	<pre>clear multicast statistics &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>clear multicast statistics &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Clear IP multicast statistics.
<b>Options</b>	<p><b>none</b>—Clear multicast statistics for all supported address families on all interfaces.</p> <p><b>inet</b>—(Optional) Clear multicast statistics for IPv4 family addresses.</p> <p><b>inet6</b>—(Optional) Clear multicast statistics for IPv6 family addresses.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear multicast statistics for the specified instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear multicast statistics on a specific interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show multicast statistics on page 1884</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear multicast statistics on page 1753</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear multicast statistics

```
user@host> clear multicast statistics
```

## clear pim join

---

**List of Syntax**    [Syntax on page 1754](#)  
                          [Syntax \(EX Series Switch and the QFX Series\) on page 1754](#)

**Syntax**    clear pim join  
              <all>  
              <group-address>  
              <bidirectional | dense | sparse>  
              <exact>  
              <inet | inet6>  
              <instance *instance-name*>  
              <logical-system (all | *logical-system-name*)>  
              <rp *ip-address/prefix* | source *ip-address/prefix*>  
              <sg | star-g>

**Syntax (EX Series Switch and the QFX Series)**    clear pim join  
  <all>  
  <group-address>  
  <dense | sparse>  
  <exact>  
  <inet | inet6>  
  <instance *instance-name*>  
  <rp *ip-address/prefix* | source *ip-address/prefix*>  
  <sg | star-g>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              **inet6** and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.  
                              Command introduced in Junos OS Release 11.3 for the QFX Series.  
                              Multiple new filter options introduced in Junos OS Release 13.2.  
                              Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Clear the Protocol Independent Multicast (PIM) join and prune states.

**Options**    **all**—To clear PIM join and prune states for all groups and family addresses in the master instance, you must specify “all”.

**group-address**—(Optional) Clear the PIM join and prune states for a group address.

**bidirectional | dense | sparse**—(Optional) Clear PIM bidirectional mode, dense mode, or sparse and source-specific multicast (SSM) mode entries.

**exact**—(Optional) Clear only the group that exactly matches the specified group address.

**inet | inet6**—(Optional) Clear the PIM entries for IPv4 or IPv6 family addresses, respectively.

**instance *instance-name***—(Optional) Clear the entries for a specific PIM-enabled routing instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**rp *ip-address/prefix* | source *ip-address/prefix***—(Optional) Clear the PIM entries with a specified rendezvous point (RP) address and prefix or with a specified source address and prefix. You can omit the prefix.

**sg | star-g**—(Optional) Clear PIM (S,G) or (\*G) entries.

**Additional Information** The **clear pim join** command cannot be used to clear the PIM join and prune state on a backup Routing Engine when nonstop active routing is enabled.

**Required Privilege Level** clear

**Related Documentation**

- [show pim join on page 1897](#)

**List of Sample Output**

- [clear pim join all on page 1755](#)
- [clear pim join inet6 all on page 1755](#)
- [clear pim join inet6 star-g all on page 1755](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

**clear pim join all**

```
user@host> clear pim join all
Cleared 8 Join/Prune states
```

**clear pim join inet6 all**

```
user@host> clear pim join inet6 all
Cleared 4 Join/Prune states
```

**clear pim join inet6 star-g all**

```
user@host> clear pim join inet6 star-g all
Cleared 1 Join/Prune states
```

## clear pim join-distribution

---

<b>Syntax</b>	<pre>clear pim join-distribution &lt;all&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 10.0.
<b>Description</b>	<p>Clear the PIM <b>join-redistribute</b> states.</p> <p>Use the <b>show pim source</b> command to find out if there are multiple paths available for a source (for example, an RP).</p> <p>When you include the <b>join-load-balance</b> statement in the configuration, the PIM join states are distributed evenly on available equal-cost multipath links. When an upstream neighbor link fails, Junos OS redistributes the PIM join states to the remaining links. However, when new links are added or the failed link is restored, the existing PIM joins are not redistributed to the new link. New flows will be distributed to the new links. However, in a network without new joins and prunes, the new link is not used for multicast traffic. The <b>clear pim join-distribution</b> command redistributes the existing flows to the new upstream neighbors. Redistributing the existing flows causes traffic to be disrupted, so we recommend that you run the <b>clear pim join-distribution</b> command during a maintenance window.</p>
<b>Options</b>	<p><b>all</b>— (Optional) Clear the PIM <b>join-redistribute</b> states for all groups and family addresses in the master instance.</p> <p><b>none</b>— Automatically clear all PIM join/prune states.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Redistribute the join states for a specific PIM-enabled routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Additional Information</b>	The <b>clear pim join-distribution</b> command cannot be used to redistribute the PIM join states on a backup Routing Engine when nonstop active routing is enabled.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show pim neighbors on page 1920</a></li><li>• <a href="#">show pim join on page 1897</a></li><li>• <a href="#">join-load-balance</a></li></ul>

List of Sample Output [clear pim join-distribution all on page 1757](#)

**Output Fields** When you enter this command, you are provided no feedback on the status of your request. You can enter the **show pim join** command before and after distributing the join state to verify the operation.

## Sample Output

[clear pim join-distribution all](#)

```
user@host> clear pim join-distribution all
```

## clear pim register

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1758</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1758</a> <a href="#">Syntax (PTX Series) on page 1758</a>
<b>Syntax</b>	<pre>clear pim register &lt;all&gt; &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>clear pim register &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt;</pre>
<b>Syntax (PTX Series)</b>	<pre>clear pim register &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 7.6. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear Protocol Independent Multicast (PIM) register message counters.
<b>Options</b>	<p><b>all</b>—Required to clear the PIM register message counters for all groups and family addresses in the master instance.</p> <p><b>inet   inet6</b>—(Optional) Clear PIM register message counters for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear register message counters for a specific PIM-enabled routing instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear PIM register message counters for a specific interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Additional Information</b>	The <b>clear pim register</b> command cannot be used to clear the PIM register state on a backup Routing Engine when nonstop active routing is enabled.

**Required Privilege Level**    clear

**Related Documentation**    • [show pim statistics on page 1952](#)

**List of Sample Output**    [clear pim register all on page 1759](#)

**Output Fields**    When you enter this command, you are provided feedback on the status of your request.

## Sample Output

`clear pim register all`

```
user@host> clear pim register all
```

## clear pim snooping join

---

<b>Syntax</b>	<code>clear pim snooping join</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system <i>logical-system-name</i>&gt;</code> <code>&lt;vlan-id <i>vlan-id</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 12.3 for MX Series 3D Universal Edge devices. Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.
<b>Description</b>	Clear information about Protocol Independent Multicast (PIM) snooping joins.
<b>Options</b>	<b>none</b> —Display detailed information.  <b>instance <i>instance-name</i></b> —(Optional) Clear PIM snooping join information for the specified routing instance.  <b>logical-system <i>logical-system-name</i></b> —(Optional) Delete the IGMP snooping statistics for a given logical system or for all logical systems.  <b>vlan-id <i>vlan-identifier</i></b> —(Optional) Clear PIM snooping join information for the specified VLAN.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>PIM Snooping for VPLS</i></li></ul>
<b>List of Sample Output</b>	<a href="#">clear pim snooping join on page 1760</a>
<b>Output Fields</b>	See <a href="#">show pim snooping join</a> for an explanation of the output fields.

## Sample Output

### clear pim snooping join

The following sample output displays information about PIM snooping joins before and after the **clear pim snooping join** command is entered:

```
user@host> show pim snooping join extensive
Instance: vpls1
Learning-Domain: vlan-id 10
Learning-Domain: vlan-id 20

Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.5, port: ge-1/3/7.20
Downstream port: ge-1/3/1.20
```

```
Downstream neighbors:
192.0.2.2 State: Join Flags: SRW Timeout: 185

Group: 198.51.100.3
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.20
Downstream port: ge-1/3/3.20
Downstream neighbors:
192.0.2.3 State: Join Flags: SRW Timeout: 175

user@host> clear pim snooping join
Clearing the Join/Prune state for 203.0.113.0/24
Clearing the Join/Prune state for 203.0.113.0/24

user@host> show pim snooping join extensive
Instance: vpls1
Learning-Domain: vlan-id 10
Learning-Domain: vlan-id 20
```

## clear pim snooping statistics

---

<b>Syntax</b>	<code>clear pim snooping statistics</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;logical-system <i>logical-system-name</i>&gt;</code> <code>&lt;vlan-id <i>vlan-id</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 12.3 for MX Series 3D Universal Edge devices. Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.
<b>Description</b>	Clear Protocol Independent Multicast (PIM) snooping statistics.
<b>Options</b>	<b>none</b> —Clear PIM snooping statistics for all family addresses, instances, and interfaces.  <b>instance <i>instance-name</i></b> —(Optional) Clear statistics for a specific PIM-snooping-enabled routing instance.  <b>interface <i>interface-name</i></b> —(Optional) Clear PIM snooping statistics for a specific interface.  <b>logical-system <i>logical-system-name</i></b> —(Optional) Delete the IGMP snooping statistics for a given logical system or for all logical systems.  <b>vlan-id <i>vlan-identifier</i></b> —(Optional) Clear PIM snooping statistics information for the specified VLAN.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>PIM Snooping for VPLS</i></li></ul>
<b>List of Sample Output</b>	<a href="#">clear pim snooping statistics on page 1762</a>
<b>Output Fields</b>	See <a href="#">show pim snooping statistics</a> for an explanation of the output fields.

## Sample Output

### clear pim snooping statistics

The following sample output displays PIM snooping statistics before and after the **clear pim snooping statistics** command is entered:

```
user@host> show pim snooping statistics
Instance: vpls1
Learning-Domain: vlan-id 10

Tx J/P messages 0
RX J/P messages 660
Rx J/P messages -- seen 0
```

```
Rx J/P messages -- received 660
Rx Hello messages 1396
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
```

```
Learning-Domain: vlan-id 20
```

```
user@host> clear pim snooping statistics
```

```
user@host> show pim snooping statistics
```

```
Instance: vpls1
```

```
Learning-Domain: vlan-id 10
```

```
Tx J/P messages 0
RX J/P messages 0
Rx J/P messages -- seen 0
Rx J/P messages -- received 0
Rx Hello messages 0
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
```

```
Learning-Domain: vlan-id 20
```

## clear pim statistics

---

List of Syntax	<a href="#">Syntax on page 1764</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1764</a>
Syntax	<pre>clear pim statistics &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
Syntax (EX Series Switch and the QFX Series)	<pre>clear pim statistics &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt;</pre>
Release Information	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
Description	Clear Protocol Independent Multicast (PIM) statistics.
Options	<p><b>none</b>—Clear PIM statistics for all family addresses, instances, and interfaces.</p> <p><b>inet   inet6</b>—(Optional) Clear PIM statistics for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear statistics for a specific PIM-enabled routing instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear PIM statistics for a specific interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Additional Information	The <b>clear pim statistics</b> command cannot be used to clear the PIM statistics on a backup Routing Engine when nonstop active routing is enabled.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show pim statistics on page 1952</a></li></ul>
List of Sample Output	<a href="#">clear pim statistics on page 1765</a>
Output Fields	See <a href="#">show pim statistics</a> for an explanation of output fields.

## Sample Output

### clear pim statistics

The following sample output displays PIM statistics before and after the **clear pim statistics** command is entered:

```
user@host> show pim statistics
PIM statistics on all interfaces:
PIM Message type      Received      Sent  Rx errors
Hello                 0             0      0
Register              0             0      0
Register Stop         0             0      0
Join Prune            0             0      0
Bootstrap             0             0      0
Assert               0             0      0
Graft                 0             0      0
Graft Ack             0             0      0
Candidate RP          0             0      0
V1 Query              2111          4222      0
V1 Register           0             0      0
V1 Register Stop      0             0      0
V1 Join Prune         14200         13115      0
V1 RP Reachability    0             0      0
V1 Assert             0             0      0
V1 Graft              0             0      0
V1 Graft Ack          0             0      0
PIM statistics summary for all interfaces:
Unknown type          0
V1 Unknown type       0
Unknown Version       0
Neighbor unknown     0
Bad Length            0
Bad Checksum          0
Bad Receive If        0
Rx Intf disabled      2007
Rx V1 Require V2      0
Rx Register not RP    0
RP Filtered Source    0
Unknown Reg Stop      0
Rx Join/Prune no state 1040
Rx Graft/Graft Ack no state 0
...
```

```
user@host> clear pim statistics
user@host> show pim statistics
PIM statistics on all interfaces:
PIM Message type      Received      Sent  Rx errors
Hello                 0             0      0
Register              0             0      0
Register Stop         0             0      0
Join Prune            0             0      0
Bootstrap             0             0      0
Assert               0             0      0
Graft                 0             0      0
Graft Ack             0             0      0
Candidate RP          0             0      0
V1 Query              1             0      0
```

V1 Register	0	0	0
...			

## request pim multicast-tunnel rebalance

<b>List of Syntax</b>	<a href="#">Syntax on page 1767</a> <a href="#">Syntax (EX Series Switches) on page 1767</a>
<b>Syntax</b>	<pre>request pim multicast-tunnel rebalance &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>request pim multicast-tunnel rebalance &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 10.2.</p> <p>Command introduced in Junos OS Release 10.2 for EX Series switches.</p>
<b>Description</b>	<p>Rebalance the assignment of multicast tunnel encapsulation interfaces across available tunnel-capable PICs or across a configured list of tunnel-capable PICs. You can determine whether a rebalance is necessary by running the <b>show pim interfaces instance <i>instance-name</i></b> command.</p>
<b>Options</b>	<p><b>none</b>—Re-create and rebalance all tunnel interfaces for all routing instances.</p> <p><b>instance <i>instance-name</i></b>—Re-create and rebalance all tunnel interfaces for a specific instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	<p>maintenance</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show pim interfaces on page 1894</a></li> <li>• <i>Load Balancing Multicast Tunnel Interfaces Among Available PICs</i></li> </ul>
<b>Output Fields</b>	<p>This command produces no output. To verify the operation of the command, run the <b>show pim interface instance <i>instance-name</i></b> before and after running the <b>request pim multicast-tunnel rebalance</b> command.</p>

## show amt statistics

<b>Syntax</b>	show amt statistics <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced in JUNOS Release 10.2.
<b>Description</b>	Display information about the Automatic Multicast Tunneling (AMT) protocol tunnel statistics.
<b>Options</b>	<p><b>none</b>—Display summary information about all AMT Protocol tunnels.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for the specified instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear amt statistics on page 1730</a></li> <li>• <a href="#">show amt summary on page 1771</a></li> <li>• <a href="#">show amt tunnel on page 1773</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show amt statistics on page 1769</a>
<b>Output Fields</b>	Table 98 on page 1768 describes the output fields for the <b>show amt statistics</b> command. Output fields are listed in the approximate order in which they appear.

Table 98: show amt statistics Output Fields

Field Name	Field Description
AMT receive message count	<p>Summary of AMT statistics for messages received on all interfaces.</p> <ul style="list-style-type: none"> <li>• <b>AMT relay discovery</b>—Number of AMT relay discovery messages received.</li> <li>• <b>AMT membership request</b>—Number of AMT membership request messages received.</li> <li>• <b>AMT membership update</b>—Number of AMT membership update messages received.</li> </ul>
AMT send message count	<p>Summary of AMT statistics for messages sent on all interfaces.</p> <ul style="list-style-type: none"> <li>• <b>AMT relay advertisement</b>—Number of AMT relay advertisement messages sent.</li> <li>• <b>AMT membership query</b>—Number of AMT membership query messages sent.</li> </ul>

Table 98: show amt statistics Output Fields (continued)

Field Name	Field Description
AMT error message count	<p>Summary of AMT statistics for error messages received on all interfaces.</p> <ul style="list-style-type: none"> <li>• <b>AMT incomplete packet</b>—Number of messages received with length errors so severe that further classification could not occur.</li> <li>• <b>AMT invalid mac</b>—Number of messages received with an invalid message authentication code (MAC).</li> <li>• <b>AMT unexpected type</b>—Number of messages received with an unknown message type specified.</li> <li>• <b>AMT invalid relay discovery address</b>—Number of AMT relay discovery messages received with an address other than the configured anycast address.</li> <li>• <b>AMT invalid membership request address</b>—Number of AMT membership request messages received with an address other than the configured AMT local address.</li> <li>• <b>AMT invalid membership update address</b>—Number of AMT membership update messages received with an address other than the configured AMT local address.</li> <li>• <b>AMT incomplete relay discovery messages</b>—Number of AMT relay discovery messages received that are not fully formed.</li> <li>• <b>AMT incomplete membership request messages</b>—Number of AMT membership request messages received that are not fully formed.</li> <li>• <b>AMT incomplete membership update messages</b>—Number of AMT membership update messages received that are not fully formed.</li> <li>• <b>AMT no active gateway</b>—Number of AMT membership update messages received for a tunnel that does not exist for the gateway that sent the message.</li> <li>• <b>AMT invalid inner header checksum</b>—Number of AMT membership update messages received with an invalid IP checksum.</li> <li>• <b>AMT gateways timed out</b>—Number of gateways that timed out because of inactivity.</li> </ul>

## Sample Output

### show amt statistics

```

user@host> show amt statistics

AMT receive message count
AMT relay advertisement           :           2
AMT membership request          :           5
AMT membership update           :           5

AMT send message count
AMT relay advertisement           :           2
AMT membership query             :           5

AMT error message count
AMT incomplete packet            :           0
AMT invalid mac                  :           0
AMT unexpected type              :           0
AMT invalid relay discovery address :           0
AMT invalid membership request address :           0
AMT invalid membership update address :           0
AMT incomplete relay discovery messages :           0
AMT incomplete membership request messages :           0
AMT incomplete membership update messages :           0
AMT no active gateway            :           0

```

AMT invalid inner header checksum	:	0
AMT gateways timed out	:	0

## show amt summary

<b>Syntax</b>	show amt summary <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced in Junos OS Release 10.2.
<b>Description</b>	Display summary information about the Automatic Multicast Tunneling (AMT) protocol.
<b>Options</b>	<p><b>none</b>—Display summary information about all AMT protocol instances.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for the specified instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear amt tunnel on page 1731</a></li> <li>• <a href="#">show amt statistics on page 1768</a></li> <li>• <a href="#">show amt tunnel on page 1773</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show amt summary on page 1772</a>
<b>Output Fields</b>	Table 99 on page 1771 describes the output fields for the <b>show amt summary</b> command. Output fields are listed in the approximate order in which they appear.

Table 99: show amt summary Output Fields

Field Name	Field Description	Level of Output
<b>AMT anycast prefix</b>	Prefix advertised by unicast routing protocols to route AMT discovery messages to the router from nearby AMT gateways.	All levels
<b>AMT anycast address</b>	Anycast address configured from which the anycast prefix is derived.	All levels
<b>AMT local address</b>	Local unique AMT relay IP address configured. Used to send AMT relay advertisement messages, it is the IP source address of AMT control messages and the source address of the data tunnel encapsulation.	All levels
<b>AMT tunnel limit</b>	Maximum number of AMT tunnels that can be created.	All levels
<b>active tunnels</b>	Number of active AMT tunnel interfaces.	All levels

## Sample Output

### show amt summary

```
user@host> show amt summary
AMT anycast prefix : 20.0.0.4/32
AMT anycast address : 20.0.0.4
AMT local address : 20.0.0.4
AMT tunnel limit : 1000, active tunnels : 2
```

## show amt tunnel

<b>Syntax</b>	<pre>show amt tunnel &lt;brief   detail&gt; &lt;gateway-address <i>gateway-ip-address</i>&gt; &lt;port <i>port-number</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;tunnel-interface <i>interface-name</i>&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 10.2.
<b>Description</b>	Display information about the Automatic Multicast Tunneling (AMT) dynamic tunnels.
<b>Options</b>	<p><b>none</b>—Display summary information about all AMT protocol instances.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of detail.</p> <p><b>gateway-address <i>gateway-ip-address</i> port <i>port-number</i></b>—(Optional) Display information for the specified AMT gateway only. If no port is specified, display information for all AMT gateways with the given IP address.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for the specified instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>tunnel-interface <i>interface-name</i></b>—(Optional) Display information for the specified AMT tunnel interface only.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear amt tunnel on page 1731</a></li> <li>• <a href="#">show amt statistics on page 1768</a></li> <li>• <a href="#">show amt summary on page 1771</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show amt tunnel on page 1774</a></p> <p><a href="#">show amt tunnel detail on page 1775</a></p> <p><a href="#">show amt tunnel tunnel-interface on page 1775</a></p> <p><a href="#">show amt tunnel gateway-address on page 1775</a></p> <p><a href="#">show amt tunnel gateway-address detail on page 1775</a></p>
<b>Output Fields</b>	Table 100 on page 1774 describes the output fields for the <b>show amt tunnel</b> command. Output fields are listed in the approximate order in which they appear.

Table 100: show amt tunnel Output Fields

Field Name	Field Description	Level of Output
<b>AMT gateway address</b>	Address of the AMT gateway that is being connected by the AMT tunnel.	All levels
<b>port</b>	Client port used by the AMT tunnel.	All levels
<b>AMT tunnel interface</b>	Dynamically created AMT logical interfaces used by the AMT tunnel in the format <b>ud-FPC/PIC/Port.unit</b> .	All levels
<b>AMT tunnel state</b>	State of the AMT tunnel. The state is normally <b>Active</b> . <ul style="list-style-type: none"> <li>• <b>Active</b>—The tunnel is active.</li> <li>• <b>Pending</b>—The tunnel creation is pending. This is a transient state.</li> <li>• <b>Down</b>—The tunnel is in the down state.</li> <li>• <b>Graceful restart pending</b>—Graceful restart is in progress.</li> <li>• <b>Reviving</b>—The routing protocol daemon or Routing Engine was restarted (not gracefully). The tunnel remains in the reviving state until the AMT gateway sends a control message. When the message is received the tunnel is moved to the <b>Active</b> state. If no message is received before the AMT tunnel inactivity timer expires, the tunnel is deleted.</li> </ul>	All levels
<b>AMT tunnel inactivity timeout</b>	Number of seconds since the most recent control message was received from an AMT gateway. If no message is received before the AMT tunnel inactivity timer expires, the tunnel is deleted.	All levels
<b>Number of groups</b>	Number of multicast groups using the tunnel.	All levels
<b>Group</b>	Multicast group address or addresses using the tunnel.	<b>detail</b>
<b>Include Source</b>	Multicast source address for each IGMPv3 group using the tunnel.	<b>detail</b>
<b>AMT message count</b>	Statistics for AMT messages: <ul style="list-style-type: none"> <li>• <b>AMT Request</b>—Number of AMT relay tunnel request messages received.</li> <li>• <b>AMT membership update</b>—Number of AMT membership update messages received.</li> </ul>	All levels

## Sample Output

### show amt tunnel

```

user@host> show amt tunnel
AMT gateway address : 11.11.11.2, port : 2268
AMT tunnel interface : ud-5/1/10.1120256
AMT tunnel state : Active
AMT tunnel inactivity timeout : 15
Number of groups : 1

AMT message count:
AMT Request      AMT membership update
2                2

```

### show amt tunnel detail

```

user@host> show amt tunnel detail
AMT gateway address : 11.11.11.2, port : 2268
AMT tunnel interface : ud-5/3/10.1120512
AMT tunnel state : Active
AMT tunnel inactivity timeout : 62
Number of groups : 1
Group: 226.2.3.2

AMT message count:
AMT Request      AMT membership update
2                2

AMT gateway address : 11.11.11.3, port : 2268
AMT tunnel interface : ud-5/2/10.1120513
AMT tunnel state : Active
AMT tunnel inactivity timeout : 214
Number of groups : 1
Group: 226.2.3.3

AMT message count:
AMT Request      AMT membership update
2                2

```

### show amt tunnel tunnel-interface

```

user@host> show amt tunnel tunnel-interface ud-5/3/10.1120512
AMT gateway address : 11.11.11.2, port : 2268
AMT tunnel interface : ud-5/3/10.1120512
AMT tunnel state : Active
AMT tunnel inactivity timeout : 145
Number of groups : 1

AMT message count:
AMT Request      AMT membership update
2                2

```

### show amt tunnel gateway-address

```

user@host> show amt tunnel gateway-address 11.11.11.3 port 2268
AMT gateway address : 11.11.11.3, port : 2268
AMT tunnel interface : ud-5/2/10.1120513
AMT tunnel state : Active
AMT tunnel inactivity timeout : 214
Number of groups : 1
Group: 226.2.3.3

AMT message count:
AMT Request      AMT membership update
2                2

```

### show amt tunnel gateway-address detail

```

user@host> show amt tunnel gateway-address 11.11.11.2 detail
AMT gateway address : 11.11.11.2, port : 2268
AMT tunnel interface : ud-5/3/10.1120512
AMT tunnel state : Active
AMT tunnel inactivity timeout : 234
Number of groups : 1

```

Group: 226.2.3.2

AMT message count:

AMT Request	AMT membership update
2	2

## show dvmrp interfaces

**Syntax** show dvmrp interfaces  
<logical-system (all | *logical-system-name*)>

### Release Information



**NOTE:** Distance Vector Multicast Routing Protocol (DVMRP) was deprecated in Junos OS Release 16.1. Although DVMRP commands continue to be available and configurable in the CLI, they are no longer visible and are scheduled for removal in a subsequent release.

Command introduced before Junos OS Release 7.4.

**Description** Display information about Distance Vector Multicast Routing Protocol (DVMRP)–enabled interfaces.

**Options** **none**—(Same as **logical-system all**) Display information about DVMRP-enabled interfaces.  
**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level** view

**List of Sample Output** [show dvmrp interfaces on page 1779](#)

**Output Fields** [Table 101 on page 1777](#) describes the output fields for the **show dvmrp interfaces** command. Output fields are listed in the approximate order in which they appear.

*Table 101: show dvmrp interfaces Output Fields*

Field Name	Field Description
<b>Interface</b>	Name of the interface.
<b>State</b>	State of the interface: <b>up</b> or <b>down</b> .
<b>Leaf</b>	Whether the interface is a leaf (that is, whether it has no neighbors) or whether it has neighbors.
<b>Metric</b>	Interface metric: a value from 1 through 31.
<b>Announce</b>	Number of routes the interface is announcing.

*Table 101: show dvmrp interfaces Output Fields (continued)*

Field Name	Field Description
<b>Mode</b>	DVMRP mode: <ul style="list-style-type: none"><li>• <b>Forwarding</b>—DVMRP does both the routing and the multicast data forwarding.</li><li>• <b>Unicast-routing</b>—DVMRP does only the routing. Forwarding of the multicast data packets can be done by enabling PIM on the interface.</li></ul>

## Sample Output

### show dvmrp interfaces

```
user@host> show dvmrp interfaces
Interface State Leaf Metric Announce Mode
fxp0.0    Up    N    1    4 Forwarding
fxp1.0    Up    N    1    4 Forwarding
fxp2.0    Up    N    1    3 Forwarding
lo0.0     Up    Y    1    0 Unicast-routing
```

## show dvmrp neighbors

**Syntax** `show dvmrp neighbors`  
`<logical-system (all | logical-system-name)>`

### Release Information



**NOTE:** Distance Vector Multicast Routing Protocol (DVMRP) was deprecated in Junos OS Release 16.1. Although DVMRP commands continue to be available and configurable in the CLI, they are no longer visible and are scheduled for removal in a subsequent release.

Command introduced before Junos OS Release 7.4.

**Description** Display information about Distance Vector Multicast Routing Protocol (DVMRP) neighbors.

**Options** **none**—(Same as **logical-system all**) Display information about DVMRP neighbors.  
**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level** view

**List of Sample Output** [show dvmrp neighbors on page 1781](#)

**Output Fields** [Table 102 on page 1780](#) describes the output fields for the **show dvmrp neighbors** command. Output fields are listed in the approximate order in which they appear.

*Table 102: show dvmrp neighbors Output Fields*

Field Name	Field Description
<b>Neighbor</b>	Address of the neighboring DVMRP router.
<b>Interface</b>	Interface through which the neighbor is reachable.
<b>Version</b>	Version of DVMRP that the neighbor is running, in the format <i>majorminor</i> .
<b>Flags</b>	Information about the neighbor: <ul style="list-style-type: none"> <li><b>1</b>—One way. The local router has seen the neighbor, but the neighbor has not seen the local router.</li> <li><b>G</b>—Neighbor supports generation ID.</li> <li><b>L</b>—Neighbor is a leaf router.</li> <li><b>M</b>—Neighbor supports mtrace.</li> <li><b>N</b>—Neighbor supports netmask in prune messages and graft messages.</li> <li><b>P</b>—Neighbor supports pruning.</li> <li><b>S</b>—Neighbor supports SNMP.</li> </ul>

*Table 102: show dvmrp neighbors Output Fields (continued)*

Field Name	Field Description
<b>Routes</b>	Number of routes learned from the neighbor.
<b>Timeout</b>	How long until the DVMRP neighbor information times out, in seconds.
<b>Transitions</b>	Number of generation ID changes that have occurred since the local router learned about the neighbor.

## Sample Output

### show dvmrp neighbors

```
user@host> show dvmrp neighbors
Neighbor      Interface    Version  Flags    Routes  Timeout  Transitions
192.168.1.1   ipip.0       3.255    PGM      3        28        1
```

## show dvmrp prefix

**Syntax** show dvmrp prefix  
 <brief | detail>  
 <logical-system (all | *logical-system-name*)>  
 <prefix>

### Release Information



**NOTE:** Distance Vector Multicast Routing Protocol (DVMRP) was deprecated in Junos OS Release 16.1. Although DVMRP commands continue to be available and configurable in the CLI, they are no longer visible and are scheduled for removal in a subsequent release.

Command introduced before Junos OS Release 7.4.

**Description** Display information about Distance Vector Multicast Routing Protocol (DVMRP) prefixes.

**Options** **none**—Display standard information about all DVMRP prefixes.

**brief | detail**—(Optional) Display the specified level of output.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**prefix**—(Optional) Display information about specific prefixes.

**Required Privilege Level** view

**List of Sample Output** [show dvmrp prefix on page 1784](#)  
[show dvmrp prefix brief on page 1784](#)  
[show dvmrp prefix detail on page 1784](#)

**Output Fields** [Table 103 on page 1782](#) describes the output fields for the **show dvmrp prefix** command. Output fields are listed in the approximate order in which they appear.

*Table 103: show dvmrp prefix Output Fields*

Field Name	Field Description	Level of Output
Prefix	DVMRP route.	All levels
Next hop	Next hop from which the route was learned.	All levels
Age	Last time that the route was refreshed.	All levels
<i>multicast-group</i>	Multicast group address.	<b>detail</b>

*Table 103: show dvmrp prefix Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>Prunes sent</b>	Number of prune messages sent to the multicast group.	<b>detail</b>
<b>Grafts sent</b>	Number of grafts sent to the multicast group.	<b>detail</b>
<b>Cache lifetime</b>	Lifetime of the group in the multicast cache, in seconds.	<b>detail</b>
<b>Prune lifetime</b>	Lifetime remaining and total lifetime of prune messages, in seconds.	<b>detail</b>

## Sample Output

### show dvmrp prefix

```
user@host> show dvmrp prefix
Prefix          Next hop      Age
10.38.0.0       /30 10.38.0.1 00:06:17
10.38.0.4       /30 10.38.0.5 00:06:13
10.38.0.8       /30 10.38.0.2 00:00:04
10.38.0.12      /30 10.38.0.6 00:00:04
10.255.14.114   /32 10.255.14.114 00:06:17
10.255.14.142   /32 10.38.0.2 00:00:04
10.255.14.144   /32 10.38.0.2 00:00:04
10.255.70.15    /32 10.38.0.6 00:00:04
192.168.14.0    /24 192.168.14.114 00:06:17
192.168.195.40 /30 192.168.195.41 00:06:17
192.168.195.92 /30 10.38.0.2 00:00:04
```

### show dvmrp prefix brief

The output for the **show dvmrp prefix brief** command is identical to that for the **show dvmrp prefix** command.

### show dvmrp prefix detail

```
user@host> show dvmrp prefix detail
Prefix          Next hop      Age
10.38.0.0       /30 10.38.0.1 00:06:28
10.38.0.4       /30 10.38.0.5 00:06:24
10.38.0.8       /30 10.38.0.2 00:00:15
10.38.0.12      /30 10.38.0.6 00:00:15
10.255.14.114   /32 10.255.14.114 00:06:28
10.255.14.142   /32 10.38.0.2 00:00:15
10.255.14.144   /32 10.38.0.2 00:00:15
10.255.70.15    /32 10.38.0.6 00:00:15
192.168.14.0    /24 192.168.14.114 00:06:28
192.168.195.40 /30 192.168.195.41 00:06:28
192.168.195.92 /30 10.38.0.2 00:00:15
```

## show dvmrp prunes

**Syntax** show dvmrp prunes  
 <all | rx | tx>  
 <logical-system (all | *logical-system-name*)>

### Release Information



**NOTE:** Distance Vector Multicast Routing Protocol (DVMRP) was deprecated in Junos OS Release 16.1. Although DVMRP commands continue to be available and configurable in the CLI, they are no longer visible and are scheduled for removal in a subsequent release.

Command introduced before Junos OS Release 7.4.

**Description** Display information about active Distance Vector Multicast Routing Protocol (DVMRP) prune messages.

**Options** **none**—Display received and transmitted DVMRP prune information.

**all**—(Optional) Display information about all received and transmitted prune messages.

**rx**—(Optional) Display information about received prune messages.

**tx**—(Optional) Display information about transmitted prune messages.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level** view

**List of Sample Output** [show dvmrp prunes on page 1786](#)

**Output Fields** [Table 104 on page 1785](#) describes the output fields for the **show dvmrp prunes** command. Output fields are listed in the approximate order in which they appear.

*Table 104: show dvmrp prunes Output Fields*

Field Name	Field Description
Group	Group address.
Source prefix	Prefix for the prune.
Timeout	How long until the prune message expires, in seconds.
Neighbor	Neighbor to which the prune was sent or from which the prune was received.

## Sample Output

### show dvmrp prunes

```
user@host> show dvmrp prunes
Group          Source prefix      Timeout Neighbor
224.0.1.1      128.112.0.0        /12    7077 192.168.1.1
224.0.1.32     160.0.0.0          /3     7087 192.168.1.1
224.2.123.4    136.0.0.0          /5     6955 192.168.1.1
224.2.127.1    129.0.0.0          /8     7046 192.168.1.1
224.2.135.86   128.102.128.0      /17    7071 192.168.1.1
224.2.135.86   129.0.0.0          /8     7074 192.168.1.1
224.2.135.86   130.0.0.0          /7     7071 192.168.1.1
...
```

## show igmp group

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1787</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1787</a>
<b>Syntax</b>	<pre>show igmp group &lt;brief   detail&gt; &lt;group-name&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show igmp group &lt;brief   detail&gt; &lt;group-name&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display Internet Group Management Protocol (IGMP) group membership information.
<b>Options</b>	<p><b>none</b>—Display standard information about membership for all IGMP groups.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>group-name</b>—(Optional) Display group membership for the specified IP address only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear igmp membership on page 1733</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show igmp group (Include Mode) on page 1788</a> <a href="#">show igmp group (Exclude Mode) on page 1789</a> <a href="#">show igmp group brief on page 1789</a> <a href="#">show igmp group detail on page 1789</a>
<b>Output Fields</b>	<p><a href="#">Table 105 on page 1788</a> describes the output fields for the <b>show igmp group</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 105: show igmp group Output Fields

Field Name	Field Description	Level of Output
<b>Interface</b>	Name of the interface that received the IGMP membership report. A name of <b>local</b> indicates that the local routing device joined the group itself.	All levels
<b>Group</b>	Group address.	All levels
<b>Group Mode</b>	Mode the SSM group is operating in: <b>Include</b> or <b>Exclude</b> .	All levels
<b>Source</b>	Source address.	All levels
<b>Source timeout</b>	Time remaining until the group traffic is no longer forwarded. The timer is refreshed when a listener in include mode sends a report. A group in exclude mode or configured as a static group displays a zero timer.	<b>detail</b>
<b>Last reported by</b>	Address of the host that last reported membership in this group.	All levels
<b>Timeout</b>	Time remaining until the group membership is removed.	<b>brief none</b>
<b>Group timeout</b>	Time remaining until a group in exclude mode moves to include mode. The timer is refreshed when a listener in exclude mode sends a report. A group in include mode or configured as a static group displays a zero timer.	<b>detail</b>
<b>Type</b>	Type of group membership: <ul style="list-style-type: none"> <li>• <b>Dynamic</b>—Host reported the membership.</li> <li>• <b>Static</b>—Membership is configured.</li> </ul>	All levels

## Sample Output

### show igmp group (Include Mode)

```

user@host> show igmp group
Interface: t1-0/1/0.0
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.2
    Last reported by: 203.0.113.52
    Timeout:      24 Type: Dynamic
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.3
    Last reported by: 203.0.113.52
    Timeout:      24 Type: Dynamic
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.4
    Last reported by: 203.0.113.52
    Timeout:      24 Type: Dynamic
  Group: 198.51.100.2
    Group mode: Include
    Source: 203.0.113.4
    Last reported by: 203.0.113.52

```

```

        Timeout:      24 Type: Dynamic
Interface: t1-0/1/1.0
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
Interface: local
  Group: 198.51.100.12
    Source: 0.0.0.0
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: 198.51.100.22
    Source: 0.0.0.0
    Last reported by: Local
    Timeout:      0 Type: Dynamic

```

### show igmp group (Exclude Mode)

```

user@host> show igmp group
Interface: t1-0/1/0.0
Interface: t1-0/1/1.0
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
Interface: local
  Group: 198.51.100.2
    Source: 0.0.0.0
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: 198.51.100.22
    Source: 0.0.0.0
    Last reported by: Local
    Timeout:      0 Type: Dynamic

```

### show igmp group brief

The output for the **show igmp group brief** command is identical to that for the **show igmp group** command.

### show igmp group detail

```

user@host> show igmp group detail
Interface: t1-0/1/0.0
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.2
    Source timeout: 12
    Last reported by: 203.0.113.52
    Group timeout:      0 Type: Dynamic
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.3
    Source timeout: 12
    Last reported by: 203.0.113.52
    Group timeout:      0 Type: Dynamic
  Group: 198.51.100.1
    Group mode: Include
    Source: 203.0.113.4
    Source timeout: 12
    Last reported by: 203.0.113.52
    Group timeout:      0 Type: Dynamic
  Group: 198.51.100.2

```

```

        Group mode: Include
        Source: 203.0.113.4
        Source timeout: 12
        Last reported by: 203.0.113.52
        Group timeout:      0 Type: Dynamic
Interface: t1-0/1/1.0
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
Interface: local
    Group: 198.51.100.12
        Group mode: Exclude
        Source: 0.0.0.0
        Source timeout: 0
        Last reported by: Local
        Group timeout:      0 Type: Dynamic
    Group: 198.51.100.22
        Group mode: Exclude
        Source: 0.0.0.0
        Source timeout: 0
        Last reported by: Local
        Group timeout:      0 Type: Dynamic

```

## show igmp interface

<b>List of Syntax</b>	<a href="#">Syntax on page 1791</a> <a href="#">Syntax (EX Series Switches and the QFX Series) on page 1791</a>
<b>Syntax</b>	<pre>show igmp interface &lt;brief   detail&gt; &lt;interface-name&gt; &lt;logical-system (all   logical-system-name)&gt;</pre>
<b>Syntax (EX Series Switches and the QFX Series)</b>	<pre>show igmp interface &lt;brief   detail&gt; &lt;interface-name&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display information about Internet Group Management Protocol (IGMP)-enabled interfaces.
<b>Options</b>	<p><b>none</b>—Display standard information about all IGMP-enabled interfaces.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>interface-name</b>—(Optional) Display information about the specified IGMP-enabled interface only.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear igmp membership on page 1733</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show igmp interface on page 1793</a> <a href="#">show igmp interface brief on page 1794</a> <a href="#">show igmp interface detail on page 1794</a> <a href="#">show igmp interface &lt;interface-name&gt; on page 1794</a>
<b>Output Fields</b>	<p><a href="#">Table 106 on page 1792</a> describes the output fields for the <b>show igmp interface</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 106: show igmp interface Output Fields

Field Name	Field Description	Level of Output
<b>Interface</b>	Name of the interface.	All levels
<b>Querier</b>	Address of the routing device that has been elected to send membership queries.	All levels
<b>State</b>	State of the interface: <b>Up</b> or <b>Down</b> .	All levels
<b>SSM Map Policy</b>	Name of the source-specific multicast (SSM) map policy that has been applied to the IGMP interface.	All levels
<b>Timeout</b>	How long until the IGMP querier is declared to be unreachable, in seconds.	All levels
<b>Version</b>	IGMP version being used on the interface: 1, 2, or 3.	All levels
<b>Groups</b>	Number of groups on the interface.	All levels
<b>Group limit</b>	Maximum number of groups allowed on the interface. Any joins requested after the limit is reached are rejected.	All levels
<b>Group threshold</b>	Configured threshold at which a warning message is generated.  This threshold is based on a percentage of groups received on the interface. If the number of groups received reaches the configured threshold, the device generates a warning message.	All levels
<b>Group log-interval</b>	Time (in seconds) between consecutive log messages.	All levels
<b>Immediate Leave</b>	State of the immediate leave option: <ul style="list-style-type: none"> <li>• <b>On</b>—Indicates that the router removes a host from the multicast group as soon as the router receives a leave group message from a host associated with the interface.</li> <li>• <b>Off</b>—Indicates that after receiving a leave group message, instead of removing a host from the multicast group immediately, the router sends a group query to determine if another receiver responds.</li> </ul>	All levels
<b>Promiscuous Mode</b>	State of the promiscuous mode option: <ul style="list-style-type: none"> <li>• <b>On</b>—Indicates that the router can accept IGMP reports from subnetworks that are not associated with its interfaces.</li> <li>• <b>Off</b>—Indicates that the router can accept IGMP reports only from subnetworks that are associated with its interfaces.</li> </ul>	All levels
<b>Distributed</b>	State of IGMP, which, by default, takes place on the Routing Engine for MX Series routers but can be distributed to the Packet Forwarding Engine to provide faster processing of join and leave events. <ul style="list-style-type: none"> <li>• <b>On</b>—distributed IGMP is enabled.</li> </ul>	All levels

Table 106: show igmp interface Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Passive</b>	<p>State of the passive mode option:</p> <ul style="list-style-type: none"> <li>• <b>On</b>—Indicates that the router can run IGMP on the interface but not send or receive control traffic such as IGMP reports, queries, and leaves.</li> <li>• <b>Off</b>—Indicates that the router can run IGMP on the interface and send or receive control traffic such as IGMP reports, queries, and leaves.</li> </ul> <p>The <b>passive</b> statement enables you to selectively activate up to two out of a possible three available query or control traffic options. When enabled, the following options appear after the <b>on</b> state declaration:</p> <ul style="list-style-type: none"> <li>• <b>send-general-query</b>—The interface sends general queries.</li> <li>• <b>send-group-query</b>—The interface sends group-specific and group-source-specific queries.</li> <li>• <b>allow-receive</b>—The interface receives control traffic.</li> </ul>	All levels
<b>OIF map</b>	Name of the OIF map (if configured) associated with the interface.	All levels
<b>SSM map</b>	Name of the source-specific multicast (SSM) map (if configured) used on the interface.	All levels
<b>Configured Parameters</b>	<p>Information configured by the user:</p> <ul style="list-style-type: none"> <li>• <b>IGMP Query Interval</b>—Interval (in seconds) at which this router sends membership queries when it is the querier.</li> <li>• <b>IGMP Query Response Interval</b>—Time (in seconds) that the router waits for a report in response to a general query.</li> <li>• <b>IGMP Last Member Query Interval</b>—Time (in seconds) that the router waits for a report in response to a group-specific query.</li> <li>• <b>IGMP Robustness Count</b>—Number of times the router retries a query.</li> </ul>	All levels
<b>Derived Parameters</b>	<p>Derived information:</p> <ul style="list-style-type: none"> <li>• <b>IGMP Membership Timeout</b>—Timeout period (in seconds) for group membership. If no report is received for these groups before the timeout expires, the group membership is removed.</li> <li>• <b>IGMP Other Querier Present Timeout</b>—Time (in seconds) that the router waits for the IGMP querier to send a query.</li> </ul>	All levels

## Sample Output

### show igmp interface

```

user@host> show igmp interface
Interface: at-0/3/1.0
  Querier: 203.0.3.113.31
  State:      Up Timeout:   None Version:  2 Groups:    4
  SSM Map Policy: ssm-policy-A
Interface: so-1/0/0.0
  Querier: 203.0.113.11
  State:      Up Timeout:   None Version:  2 Groups:    2
  SSM Map Policy: ssm-policy-B
Interface: so-1/0/1.0

```

```
Querier: 203.0.113.21
State:      Up Timeout:   None Version:  2 Groups:    4
SSM Map Policy: ssm-policy-C
Immediate Leave: On
Promiscuous Mode: Off
Passive: Off
Distributed: OnConfigured Parameters:

IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Derived Parameters:
IGMP Membership Timeout: 260.0
IGMP Other Querier Present Timeout: 255.0
```

### `show igmp interface brief`

The output for the **show igmp interface brief** command is identical to that for the **show igmp interface** command. For sample output, see [show igmp interface on page 1793](#).

### `show igmp interface detail`

The output for the **show igmp interface detail** command is identical to that for the **show igmp interface** command. For sample output, see [show igmp interface on page 1793](#).

### `show igmp interface <interface-name>`

```
user@host# show igmp interface ge-3/2/0.0
Interface: ge-3/2/0.0
Querier: 203.0.113.111
State: Up Timeout:   None
Version:  3
Groups:    1
Group limit: 8
Group threshold: 60
Group log-interval: 10
Immediate leave: Off
Promiscuous mode: Off
Distributed: On
```

## show igmp snooping interface

<b>Syntax</b>	<pre>show igmp snooping interface <i>interface-name</i> &lt;brief   detail&gt; &lt;bridge-domain <i>bridge-domain-name</i>&gt; &lt;logical-system <i>logical-system-name</i>&gt; &lt;virtual-switch <i>virtual-switch-name</i>&gt; &lt;vlan-id <i>vlan-identifier</i>&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 8.5.
<b>Description</b>	Display IGMP snooping interface information.
<b>Options</b>	<p><b>none</b> —Display detailed information.</p> <p><b>brief   detail</b>—(Optional) When applicable, this option lets you choose the how much detail to display.</p> <p><b>bridge-domain <i>bridge-domain-name</i></b>—(Optional) Display information about a particular bridge domain.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p><b>virtual-switch <i>virtual-switch-name</i></b>—(Optional) Display information about a particular virtual switch.</p> <p><b>vlan-id <i>vlan-identifier</i></b>—(Optional) Display information about a particular VLAN.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show igmp snooping membership on page 1801</a></li> <li>• <a href="#">show igmp snooping statistics on page 1806</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show igmp snooping interface on page 1797</a></p> <p><a href="#">show igmp snooping interface (logical systems) on page 1797</a></p> <p><a href="#">show igmp snooping interface (Group Limit Configured) on page 1799</a></p> <p><a href="#">show igmp snooping interface (ELS EX Series switches with MVR configured) on page 1799</a></p>
<b>Output Fields</b>	<p><a href="#">Table 107 on page 1796</a> lists the output fields for the <b>show igmp snooping interface</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 107: show igmp snooping interface Output Fields

Field Name	Field Description	Level of Output
<b>Routing-instance or Instance</b>	Routing instance for IGMP snooping.	All levels
<b>Bridge Domain or Vlan</b>	Bridge domain or VLAN for which IGMP snooping is enabled.	All levels
<b>Learning Domain</b>	Learning domain for snooping.	All levels
<b>interface</b>	Interfaces that are being snooped in this learning domain.	All levels
<b>Groups</b>	Number of groups on the interface.	All levels
<b>State</b>	State of the interface: <b>Up</b> or <b>Down</b> .	All levels
<b>Up Groups</b>	Number of active multicast groups attached to the logical interface.	All levels
<b>immediate-leave</b>	State of immediate leave: <b>On</b> or <b>Off</b> .	All levels
<b>router-interface</b>	Router interfaces that are part of this learning domain.	All levels
<b>Group limit</b>	Maximum number of (source,group) pairs allowed per interface. When a group limit is not configured, this field is not shown.	All levels
<b>Data-forwarding receiver: yes</b>	VLAN associated with the interface is configured as a data-forwarding multicast receiver VLAN using multicast VLAN registration (MVR) on EX Series switches with Enhanced Layer 2 Software (ELS).	All levels
<b>IGMP Query Interval</b>	Frequency (in seconds) with which this router sends membership queries when it is the querier.	All levels
<b>IGMP Query Response Interval</b>	Time (in seconds) that the router waits for a response to a general query.	All levels
<b>IGMP Last Member Query Interval</b>	Time (in seconds) that the router waits for a report in response to a group-specific query.	All levels
<b>IGMP Robustness Count</b>	Number of times the router retries a query.	All levels
<b>IGMP Membership Timeout</b>	Timeout for group membership. If no report is received for these groups before the timeout expires, the group membership is removed.	All levels
<b>IGMP Other Querier Present Timeout</b>	Time that the router waits for the IGMP querier to send a query.	All levels

## Sample Output

### show igmp snooping interface

```

user@host> show igmp snooping interface ge-0/1/4
Instance: default-switch

Bridge-Domain: sample

Learning-Domain: default
Interface: ge-0/1/4.0
State: Up Groups: 0
Immediate leave: Off
Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Derived Parameters:
IGMP Membership Timeout: 260.0
IGMP Other Querier Present Timeout: 255.0

```

### show igmp snooping interface (logical systems)

```

user@host> show igmp snooping interface logical-system all
logical-system: default
Instance: VPLS-6
Learning-Domain: default
Interface: ge-0/2/2.601
    State:          Up Groups:    10
    Immediate leave: Off
    Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

Instance: VS-4
Bridge-Domain: VS-4-BD-1
Learning-Domain: vlan-id 1041
Interface: ae2.3
    State:          Up Groups:    0
    Immediate leave: Off
    Router interface: no
Interface: ge-0/2/2.1041
    State:          Up Groups:    20
    Immediate leave: Off
    Router interface: no

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

```

Instance: default-switch  
Bridge-Domain: bd-200  
Learning-Domain: default  
Interface: ge-0/2/2.100  
State: Up Groups: 20  
Immediate leave: Off  
Router interface: no

Configured Parameters:  
IGMP Query Interval: 125.0  
IGMP Query Response Interval: 10.0  
IGMP Last Member Query Interval: 1.0  
IGMP Robustness Count: 2

Bridge-Domain: bd0  
Learning-Domain: default  
Interface: ae0.0  
State: Up Groups: 0  
Immediate leave: Off  
Router interface: yes  
Interface: ae1.0  
State: Up Groups: 0  
Immediate leave: Off  
Router interface: no  
Interface: ge-0/2/2.0  
State: Up Groups: 32  
Immediate leave: Off  
Router interface: no

Configured Parameters:  
IGMP Query Interval: 125.0  
IGMP Query Response Interval: 10.0  
IGMP Last Member Query Interval: 1.0  
IGMP Robustness Count: 2

Instance: VPLS-1  
Learning-Domain: default  
Interface: ge-0/2/2.502  
State: Up Groups: 11  
Immediate leave: Off  
Router interface: no

Configured Parameters:  
IGMP Query Interval: 125.0  
IGMP Query Response Interval: 10.0  
IGMP Last Member Query Interval: 1.0  
IGMP Robustness Count: 2

Instance: VS-1  
Bridge-Domain: VS-BD-1  
Learning-Domain: default  
Interface: ae2.0  
State: Up Groups: 0  
Immediate leave: Off  
Router interface: no  
Interface: ge-0/2/2.1010  
State: Up Groups: 20  
Immediate leave: Off  
Router interface: no

Configured Parameters:

```

IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

```

```

Bridge-Domain: VS-BD-2
Learning-Domain: default
Interface: ae2.0
    State:          Up Groups:      0
    Immediate leave: Off
    Router interface: no
Interface: ge-0/2/2.1011
    State:          Up Groups:      20
    Immediate leave: Off
    Router interface: no

```

```

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

```

```

Instance: VPLS-p2mp
Learning-Domain: default
Interface: ge-0/2/2.3001
    State:          Up Groups:      0
    Immediate leave: Off
    Router interface: no

```

```

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

```

### show igmp snooping interface (Group Limit Configured)

```

user@host> show igmp snooping interface instance vpls1
Instance: vpls1

```

```

Learning-Domain: default
Interface: ge-1/3/9.0
    State:          Up Groups:      0
    Immediate leave: Off
    Router interface: yes
Interface: ge-1/3/8.0
    State:          Up Groups:      0
    Immediate leave: Off
    Router interface: yes
    Group limit:    1000

```

```

Configured Parameters:
IGMP Query Interval: 125.0
IGMP Query Response Interval: 10.0
IGMP Last Member Query Interval: 1.0
IGMP Robustness Count: 2

```

### show igmp snooping interface (ELS EX Series switches with MVR configured)

```

user@host> show igmp snooping interface instance vpls1

```

```
Instance: default-switch

Vlan: v2

Learning-Domain: default
Interface: ge-0/0/0.0
  State:          Up Groups:      0
  Immediate leave: Off
  Router interface: no
  Group limit:     3
  Data-forwarding receiver: yes
```

## show igmp snooping membership

<b>Syntax</b>	<pre>show igmp snooping membership &lt;brief   detail&gt; &lt;interface <i>interface-name</i>&gt; &lt;vlan (<i>vlan-id</i>   <i>vlan-name</i>)&gt; &lt;bridge-domain <i>bridge-domain-name</i>&gt; &lt;group <i>group-name</i>&gt; &lt;logical-system <i>logical-system-name</i>&gt; &lt;virtual-switch <i>virtual-switch-name</i>&gt; &lt;vlan-id <i>vlan-identifier</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 18.1R1 for the SRX1500 devices.</p>
<b>Description</b>	Display the multicast group membership information maintained by IGMP snooping.
<b>Options</b>	<p><b>none</b>—Display the multicast group membership information about all VLANs on which IGMP snooping is enabled.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output. The default is <b>brief</b>.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display the multicast group membership information about the specified interface.</p> <p><b>vlan (<i>vlan-id</i>   <i>vlan-name</i>)</b>—(Optional) Display the multicast group membership for the specified VLAN.</p> <p><b>bridge-domain <i>bridge-domain-name</i></b>—(Optional) Display information about a particular bridge domain.</p> <p><b>group <i>group-name</i></b>—(Optional) Display information about this group address.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p><b>virtual-switch <i>virtual-switch-name</i></b>—(Optional) Display information about a particular virtual switch.</p> <p><b>vlan-id <i>vlan-identifier</i></b>—(Optional) Display information about a particular VLAN.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show igmp snooping interface on page 1795</a></li> <li>• <a href="#">show igmp snooping statistics on page 1806</a></li> <li>• <a href="#">clear igmp snooping membership on page 1736</a></li> </ul>

**List of Sample Output** [show igmp snooping membership on page 1803](#)  
[show igmp-snooping membership \(SRX1500\) on page 1803](#)  
[show igmp-snooping membership detail \(SRX1500\) on page 1803](#)  
[show igmp snooping membership \(Exclude Mode\) on page 1804](#)  
[show igmp-snooping membership detail \(SRX1500\) on page 1804](#)  
[show igmp-snooping membership vlan detail \(SRX1500\) on page 1804](#)  
[show igmp snooping membership interface ge-0/1/2.200 on page 1804](#)  
[show igmp snooping membership vlan-id 1 on page 1805](#)  
[show igmp snooping membership \(ELS EX Series switches with MVR\) on page 1805](#)

**Output Fields** [Table 108 on page 1802](#) lists the output fields for the **show igmp snooping membership** command. Output fields are listed in the approximate order in which they appear.

*Table 108: show igmp snooping membership Output Fields*

Field Name	Field Description	Level of Output
VLAN	Name of the VLAN.	All
Instance	Routing instance for IGMP snooping.	All levels
Learning Domain	Learning domain for snooping.	All levels
Interface	Interface on which this router is a proxy.	detail
Data-forwarding receiver: yes	VLAN associated with the interface is configured as a data-forwarding multicast receiver VLAN using multicast VLAN registration (MVR) on EX Series switches with Enhanced Layer 2 Software (ELS).	All levels
Up Groups or Groups	Number of active multicast groups attached to the logical interface.	All levels
Group	Multicast group address in the membership database.	All levels
Group Mode	Mode the SSM group is operating in: <b>Include</b> or <b>Exclude</b> .	All levels
Source	Source address used on queries.	detail
Last reported by	Address of source last replying to the query.	detail
Group Timeout	Time remaining until a group in exclude mode moves to include mode. The timer is refreshed when a listener in exclude mode sends a report. A group in include mode or configured as a static group displays a zero timer.	All levels
Timeout	Length of time (in seconds) left until the entry is purged.	detail
Type	Way that the group membership information was learned: <ul style="list-style-type: none"> <li>• <b>Dynamic</b>—Group membership was learned by the IGMP protocol.</li> <li>• <b>Static</b>—Group membership was learned by configuration.</li> </ul>	detail
Include receiver	Source address of receiver included in membership with timeout (in seconds).	detail

## Sample Output

### show igmp snooping membership

```

user@host> show igmp snooping membership
Instance: vpls2

Learning-Domain: vlan-id 2
Interface: ge-3/0/0.2
Up Groups:      0
Interface: ge-3/1/0.2
Up Groups:      0
Interface: ge-3/1/5.2
Up Groups:      0

Instance: vpls1

Learning-Domain: vlan-id 1
Interface: ge-3/0/0.1
Up Groups:      0
Interface: ge-3/1/0.1
Up Groups:      0
Interface: ge-3/1/5.1
Up Groups:      1
  Group: 233.252.0.99
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: 233.252.0.87
    Group timeout: 173 Type: Dynamic

```

### show igmp-snooping membership (SRX1500)

```

user@host> show igmp-snooping membership
Instance: default-switch

Vlan: v1

Learning-Domain: default
Interface: ge-0/0/3.0, Groups: 1
Group: 233.252.0.100
Group mode: Exclude
Source: 0.0.0.0
Last reported by: Local
Group timeout: 0 Type: Static

```

### show igmp-snooping membership detail (SRX1500)

```

user@host> show igmp-snooping membership detail

VLAN: vlan2 Tag: 2 (Index: 3)
Router interfaces:
  ge-1/0/0.0 dynamic Uptime: 00:14:24 timeout: 253
Group: 233.252.0.99
  ge-1/0/17.0 259 Last reporter: 10.0.0.90 Receiver count: 1
  Uptime: 00:00:19 timeout: 259 Flags: <V3-hosts>
  Include source: 10.2.11.5, 10.2.11.12

```

### show igmp snooping membership (Exclude Mode)

```
user@host> show igmp snooping membership
Instance: vpls2

Learning-Domain: vlan-id 2
Interface: ge-3/0/0.2
Up Groups:      0
Interface: ge-3/1/0.2
Up Groups:      0
Interface: ge-3/1/5.2
Up Groups:      0

Instance: vpls1

Learning-Domain: vlan-id 1
Interface: ge-3/0/0.1
Up Groups:      0
Interface: ge-3/1/0.1
Up Groups:      0
Interface: ge-3/1/5.1
Up Groups:      1
  Group: 233.252.0.99
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: 233.252.0.87
    Group timeout:    173 Type: Dynamic
```

### show igmp-snooping membership detail (SRX1500)

```
user@host> show igmp-snooping membership detail

VLAN: vlan2 Tag: 2 (Index: 3)
Router interfaces:
  ge-1/0/0.0 dynamic Uptime: 00:14:24 timeout: 253
Group: 233.252.0.99
  ge-1/0/17.0 259 Last reporter: 233.252.0.82 Receiver count: 1
  Uptime: 00:00:19 timeout: 259 Flags: <V3-hosts>
  Include source: 233.252.0.84, 233.252.0.83
```

### show igmp-snooping membership vlan detail (SRX1500)

```
user@host> show igmp-snooping membership vlan vlan700 detail
VLAN: vlan700 Tag: 700 (Index: 52)
Router interfaces:
  ae2.0 dynamic Uptime: 16:53:13 timeout: 245
Group: 233.252.0.1
50  ge-0/0/1.0 Last reporter: 233.252.0.87
    Uptime: 17:00:52 timeout: 237 Flags: <V2-hosts>
    ge-0/0/0.0 Last reporter: 10.2.188.202
    Uptime: 17:00:50 timeout: 243 Flags: <V2-hosts>
```

### show igmp snooping membership interface ge-0/1/2.200

```
user@host> show igmp snooping membership interface ge-0/1/2.200
Instance: bridge-domain bar

Learning-Domain: default
Interface: ge-0/1/2.200
```

```

Group: 233.252.0.1
  Source: 0.0.0.0
  Timeout: 391 Type: Static
Group: 232.1.1.1
  Source: 192.128.1.1
  Timeout: 0 Type: Static

```

#### show igmp snooping membership vlan-id 1

```

user@host> show igmp snooping membership vlan-id 1
Instance: vpls2

Instance: vpls1

Learning-Domain: vlan-id 1
Interface: ge-3/0/0.1
Up Groups: 0
Interface: ge-3/1/0.1
Up Groups: 0
Interface: ge-3/1/5.1
Up Groups: 1
  Group: 233.252.0.1
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: 233.252.0.82
    Group timeout: 209 Type: Dynamic

```

#### show igmp snooping membership (ELS EX Series switches with MVR)

```

user@host> show igmp snooping membership
Instance: default-switch

Vlan: v2

Learning-Domain: default
Interface: ge-0/0/0.0, Groups: 0
Data-forwarding receiver: yes

Learning-Domain: default
Interface: ge-0/0/12.0, Groups: 1
  Group: 225.0.0.1
    Group mode: Exclude
    Source: 0.0.0.0
    Last reported by: Local
    Group timeout: 0 Type: Static

```

## show igmp snooping statistics

---

<b>Syntax</b>	<code>show igmp snooping statistics</code> <code>&lt;brief   detail&gt;</code> <code>&lt;bridge-domain <i>bridge-domain-name</i>&gt;</code> <code>&lt;logical-system <i>logical-system-name</i>&gt;</code> <code>&lt;virtual-switch <i>virtual-switch-name</i>&gt;</code> <code>&lt;vlan-id <i>vlan-identifier</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.5. Command introduced in Junos OS Release 18.1R1 for the SR1500 devices.
<b>Description</b>	Display IGMP snooping statistics.
<b>Options</b>	<b>none</b> —(Optional) Display detailed information.  <b>brief   detail</b> —(Optional) Display the specified level of output.  <b>bridge-domain <i>bridge-domain-name</i></b> —(Optional) Display information about a particular bridge domain.  <b>logical-system <i>logical-system-name</i></b> —(Optional) Display information about a particular logical system, or type 'all'.  <b>virtual-switch <i>virtual-switch-name</i></b> —(Optional) Display information about a particular virtual switch.  <b>vlan-id <i>vlan-identifier</i></b> —(Optional) Display information about a particular VLAN.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show igmp snooping interface on page 1795</a></li><li>• <a href="#">show igmp snooping membership on page 1801</a></li><li>• <a href="#">clear igmp snooping statistics on page 1738</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show igmp snooping statistics on page 1808</a> <a href="#">show igmp-snooping statistics (SRX1500) on page 1808</a> <a href="#">show igmp snooping statistics logical-systems all on page 1809</a> <a href="#">show igmp snooping statistics interface (Bridge Domains Configured) on page 1810</a>
<b>Output Fields</b>	<a href="#">Table 109 on page 1807</a> lists the output fields for the <b>show igmp snooping statistics</b> command. Output fields are listed in the approximate order in which they appear.

Table 109: show igmp snooping statistics Output Fields

Field Name	Field Description	Level of Output
<b>Routing-instance</b>	Routing instance for IGMP snooping.	All levels
<b>IGMP packet statistics</b>	Heading for IGMP snooping statistics for all interfaces or for the specified interface.	All levels
<b>learning-domain</b>	Appears at end of “IGMP packets statistics” line.	All levels
<b>IGMP Message type</b>	Summary of IGMP statistics: <ul style="list-style-type: none"> <li>• <b>Membership Query</b>—Number of membership queries sent and received.</li> <li>• <b>V1 Membership Report</b>—Number of version 1 membership reports sent and received.</li> <li>• <b>DVMRP</b>—Number of DVMRP messages sent or received.</li> <li>• <b>PIM V1</b>—Number of PIM version 1 messages sent or received.</li> <li>• <b>Cisco Trace</b>—Number of Cisco trace messages sent or received.</li> <li>• <b>V2 Membership Report</b>—Number of version 2 membership reports sent or received.</li> <li>• <b>Group Leave</b>—Number of group leave messages sent or received.</li> <li>• <b>Domain Wide Report</b>—Number of domain-wide reports sent or received.</li> <li>• <b>V3 Membership Report</b>—Number of version 3 membership reports sent or received.</li> <li>• <b>Other Unknown types</b>—Number of unknown message types received.</li> <li>• <b>IGMP v3 unsupported type</b>—Number of messages received with unknown and unsupported IGMP version 3 message types.</li> <li>• <b>IGMP v3 source required for SSM</b>—Number of IGMP version 3 messages received that contained no source.</li> <li>• <b>IGMP v3 mode not applicable for SSM</b>—Number of IGMP version 3 messages received that did not contain a mode applicable for source-specific multicast (SSM).</li> </ul>	All levels
<b>Received</b>	Number of messages received.	All levels
<b>Sent</b>	Number of messages sent.	All levels
<b>Rx errors</b>	Number of received packets that contained errors.	All levels
<b>IGMP Global Statistics</b>	Summary of IGMP snooping statistics for all interfaces. <ul style="list-style-type: none"> <li>• <b>Bad Length</b>—Number of messages received with length errors so severe that further classification could not occur.</li> <li>• <b>Bad Checksum</b>—Number of messages received with a bad IP checksum. No further classification was performed.</li> <li>• <b>Rx non-local</b>—Number of messages received from senders that are not local.</li> </ul>	All levels

## Sample Output

### show igmp snooping statistics

```
user@host> show igmp snooping statistics
Routing-instance foo

IGMP packet statistics for all interfaces in learning-domain vlan-100

IGMP Message type      Received      Sent  Rx errors
Membership Query        89           51      0
V1 Membership Report    0            0      0
DVMRP                   0            0      0
PIM V1                  0            0      0
Cisco Trace             0            0      0
V2 Membership Report    139          0      0
Group Leave             0            0      0
Domain Wide Report      0            0      0
V3 Membership Report    136          0      0
Other Unknown types     0            0      0
IGMP v3 unsupported type 0            0      0
IGMP v3 source required for SSM 23
IGMP v3 mode not applicable for SSM 0

IGMP Global Statistics
Bad Length              0
Bad Checksum            0
Rx non-local            0

Routing-instance bar

IGMP packet statistics for all interfaces in learning-domain vlan-100

IGMP Message type      Received      Sent  Rx errors
Membership Query        89           51      0
V1 Membership Report    0            0      0
DVMRP                   0            0      0
PIM V1                  0            0      0
Cisco Trace             0            0      0
V2 Membership Report    139          0      0
Group Leave             0            0      0
Domain Wide Report      0            0      0
V3 Membership Report    136          0      0
Other Unknown types     0            0      0
IGMP v3 unsupported type 0            0      0
IGMP v3 source required for SSM 23
IGMP v3 mode not applicable for SSM 0

IGMP Global Statistics
Bad Length              0
Bad Checksum            0
Rx non-local            0
```

### show igmp-snooping statistics (SRX1500)

```
user@host> show igmp-snooping statistics
Vlan: v1
IGMP Message type      Received      Sent  Rx errors
Membership Query        0            0      0
V1 Membership Report    0            0      0
```

DVMRP	0	0	0
PIM V1	0	0	0
Cisco Trace	0	0	0
V2 Membership Report	0	0	0
Group Leave	0	0	0
Mtrace Response	0	0	0
Mtrace Request	0	0	0
Domain Wide Report	0	0	0
V3 Membership Report	0	0	0
Other Unknown types			0

### show igmp snooping statistics logical-systems all

```
user@host> show igmp snooping statistics logical-systems all
```

Logical-system: default

Bridge: VPLS-6

IGMP Message type	Received	Sent	Rx errors
Membership Query	0	4	0
V1 Membership Report	0	0	0
DVMRP	0	0	0
PIM V1	0	0	0
Cisco Trace	0	0	0
V2 Membership Report	0	0	0
Group Leave	0	0	0
Mtrace Response	0	0	0
Mtrace Request	0	0	0
Domain Wide Report	0	0	0
V3 Membership Report	0	0	0
Other Unknown types			0

Learning-Domain: vlan-id 1041 bridge-domain VS-4-BD-1

IGMP Message type	Received	Sent	Rx errors
Membership Query	0	4	0
V1 Membership Report	0	0	0
DVMRP	0	0	0
PIM V1	0	0	0
Cisco Trace	0	0	0
V2 Membership Report	0	0	0
Group Leave	0	0	0
Mtrace Response	0	0	0
Mtrace Request	0	0	0
Domain Wide Report	0	0	0
V3 Membership Report	0	0	0
Other Unknown types			0

Bridge: VPLS-p2mp

IGMP Message type	Received	Sent	Rx errors
Membership Query	0	2	0
V1 Membership Report	0	0	0
DVMRP	0	0	0
PIM V1	0	0	0
Cisco Trace	0	0	0
V2 Membership Report	0	0	0
Group Leave	0	0	0
Mtrace Response	0	0	0
Mtrace Request	0	0	0
Domain Wide Report	0	0	0
V3 Membership Report	0	0	0
Other Unknown types			0

```
Bridge: VS-BD-1
IGMP Message type      Received      Sent  Rx errors
Membership Query       0           6      0
V1 Membership Report    0           0      0
DVMRP                  0           0      0
PIM V1                 0           0      0
Cisco Trace            0           0      0
V2 Membership Report    0           0      0
Group Leave            0           0      0
Mtrace Response        0           0      0
Mtrace Request         0           0      0
Domain Wide Report     0           0      0
V3 Membership Report    0           0      0
Other Unknown types     0           0      0
```

### show igmp snooping statistics interface (Bridge Domains Configured)

```
user@host> show igmp snooping statistics interface
```

```
Bridge: bridge-domain1
IGMP interface packet statistics for ge-2/0/8.0
IGMP Message type      Received      Sent  Rx errors
Membership Query       0           2      0
V1 Membership Report    0           0      0
DVMRP                  0           0      0
PIM V1                 0           0      0
Cisco Trace            0           0      0
V2 Membership Report    0           0      0
Group Leave            0           0      0
Mtrace Response        0           0      0
Mtrace Request         0           0      0
Domain Wide Report     0           0      0
V3 Membership Report    0           0      0
Other Unknown types     0           0      0
```

```
Bridge: bridge-domain2
IGMP interface packet statistics for ge-2/0/8.0
IGMP Message type      Received      Sent  Rx errors
Membership Query       0           2      0
V1 Membership Report    0           0      0
DVMRP                  0           0      0
PIM V1                 0           0      0
Cisco Trace            0           0      0
V2 Membership Report    0           0      0
Group Leave            0           0      0
Mtrace Response        0           0      0
Mtrace Request         0           0      0
Domain Wide Report     0           0      0
V3 Membership Report    0           0      0
Other Unknown types     0           0      0
```

## show igmp statistics

<b>List of Syntax</b>	<a href="#">Syntax on page 1811</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1811</a>
<b>Syntax</b>	<pre>show igmp statistics &lt;brief   detail&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show igmp statistics &lt;brief   detail&gt; &lt;interface <i>interface-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display Internet Group Management Protocol (IGMP) statistics.
<b>Options</b>	<p><b>none</b>—Display IGMP statistics for all interfaces.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display IGMP statistics about the specified interface only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">clear igmp statistics on page 1739</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show igmp statistics on page 1813</a> <a href="#">show igmp statistics interface on page 1813</a>
<b>Output Fields</b>	<p><a href="#">Table 110 on page 1811</a> describes the output fields for the <b>show igmp statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 110: show igmp statistics Output Fields

Field Name	Field Description
IGMP packet statistics	Heading for IGMP packet statistics for all interfaces or for the specified interface name.

Table 110: show igmp statistics Output Fields (continued)

Field Name	Field Description
<b>IGMP Message type</b>	<p>Summary of IGMP statistics:</p> <ul style="list-style-type: none"> <li>• <b>Membership Query</b>—Number of membership queries sent and received.</li> <li>• <b>V1 Membership Report</b>—Number of version 1 membership reports sent and received.</li> <li>• <b>DVMRP</b>—Number of DVMRP messages sent or received.</li> <li>• <b>PIM V1</b>—Number of PIM version 1 messages sent or received.</li> <li>• <b>Cisco Trace</b>—Number of Cisco trace messages sent or received.</li> <li>• <b>V2 Membership Report</b>—Number of version 2 membership reports sent or received.</li> <li>• <b>Group Leave</b>—Number of group leave messages sent or received.</li> <li>• <b>Mtrace Response</b>—Number of Mtrace response messages sent or received.</li> <li>• <b>Mtrace Request</b>—Number of Mtrace request messages sent or received.</li> <li>• <b>Domain Wide Report</b>—Number of domain-wide reports sent or received.</li> <li>• <b>V3 Membership Report</b>—Number of version 3 membership reports sent or received.</li> <li>• <b>Other Unknown types</b>—Number of unknown message types received.</li> <li>• <b>IGMP v3 unsupported type</b>—Number of messages received with unknown and unsupported IGMP version 3 message types.</li> <li>• <b>IGMP v3 source required for SSM</b>—Number of IGMP version 3 messages received that contained no source.</li> <li>• <b>IGMP v3 mode not applicable for SSM</b>—Number of IGMP version 3 messages received that did not contain a mode applicable for source-specific multicast (SSM). Beginning with certain releases, this type includes records received for groups in the SSM range of addresses and in which the mode is <code>MODE_IS_EXCLUDE</code> or <code>CHANGE_TO_EXCLUDE_MODE</code>. This includes records with a non-empty source list.</li> </ul>
<b>Received</b>	Number of messages received.
<b>Sent</b>	Number of messages sent.
<b>Rx errors</b>	Number of received packets that contained errors.
<b>Max Rx rate (pps)</b>	Maximum number of IGMP packets received during 1 second interval.
<b>IGMP Global Statistics</b>	<p>Summary of IGMP statistics for all interfaces.</p> <ul style="list-style-type: none"> <li>• <b>Bad Length</b>—Number of messages received with length errors so severe that further classification could not occur.</li> <li>• <b>Bad Checksum</b>—Number of messages received with a bad IP checksum. No further classification was performed.</li> <li>• <b>Bad Receive If</b>—Number of messages received on an interface not enabled for IGMP.</li> <li>• <b>Rx non-local</b>—Number of messages received from senders that are not local.</li> <li>• <b>Timed out</b>—Number of groups that timed out as a result of not receiving an explicit leave message.</li> <li>• <b>Rejected Report</b>—Number of reports dropped because of the IGMP group policy.</li> <li>• <b>Total Interfaces</b>—Number of interfaces configured to support IGMP.</li> </ul>

## Sample Output

### show igmp statistics

```

user@host> show igmp statistics
IGMP packet statistics for all interfaces
IGMP Message type      Received      Sent  Rx errors
Membership Query        8883         459      0
V1 Membership Report    0            0        0
DVMRP                   0            0        0
PIM V1                  0            0        0
Cisco Trace             0            0        0
V2 Membership Report    0            0        0
Group Leave             0            0        0
Mtrace Response         0            0        0
Mtrace Request          0            0        0
Domain Wide Report      0            0        0
V3 Membership Report    0            0        0
Other Unknown types     0            0        0
IGMP v3 unsupported type 0            0        0
IGMP v3 source required for SSM 0            0
IGMP v3 mode not applicable for SSM 0

```

```

IGMP Global Statistics
Bad Length              0
Bad Checksum            0
Bad Receive If          0
Rx non-local            1227
Timed out               0
Rejected Report         0
Total Interfaces        2
Max Rx rate (pps)       1536

```

### show igmp statistics interface

```

user@host> show igmp statistics interface fe-1/0/1.0
IGMP interface packet statistics for fe-1/0/1.0
IGMP Message type      Received      Sent  Rx errors
Membership Query        0            230      0
V1 Membership Report    0            0        0

```

## show mld group

<b>Syntax</b>	show mld group <brief   detail> <group-name> <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display information about Multicast Listener Discovery (MLD) group membership.
<b>Options</b>	<p><b>none</b>—Display standard information about all MLD groups.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>group-name</b>—(Optional) Display MLD information about the specified group.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">clear mld membership on page 1741</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show mld group (Include Mode) on page 1815</a> <a href="#">show mld group (Exclude Mode) on page 1816</a> <a href="#">show mld group brief on page 1816</a> <a href="#">show mld group detail (Include Mode) on page 1816</a> <a href="#">show mld group detail (Exclude Mode) on page 1817</a>
<b>Output Fields</b>	<a href="#">Table 111 on page 1814</a> describes the output fields for the <b>show mld group</b> command. Output fields are listed in the approximate order in which they appear.

Table 111: show mld group Output Fields

Field Name	Field Description	Level of Output
<b>Interface</b>	Name of the interface that received the MLD membership report; <b>local</b> means that the local router joined the group itself.	All levels
<b>Group</b>	Group address.	All levels
<b>Source</b>	Source address.	All levels
<b>Group Mode</b>	Mode the SSM group is operating in: <b>Include</b> or <b>Exclude</b> .	All levels
<b>Last reported by</b>	Address of the host that last reported membership in this group.	All levels

Table 111: show mld group Output Fields (continued)

Field Name	Field Description	Level of Output
Source timeout	Time remaining until the group traffic is no longer forwarded. The timer is refreshed when a listener in include mode sends a report. A group in exclude mode or configured as a static group displays a zero timer.	detail
Timeout	Time remaining until the group membership is removed.	brief none
Group timeout	Time remaining until a group in exclude mode moves to include mode. The timer is refreshed when a listener in exclude mode sends a report. A group in include mode or configured as a static group displays a zero timer.	detail
Type	Type of group membership: <ul style="list-style-type: none"> <li>• <b>Dynamic</b>—Host reported the membership.</li> <li>• <b>Static</b>—Membership is configured.</li> </ul>	All levels

## Sample Output

### show mld group (Include Mode)

```

user@host> show mld group
Interface: fe-0/1/2.0
  Group: ff02::1:ff05:1a67
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      245 Type: Dynamic
  Group: ff02::1:ffa8:c35e
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      241 Type: Dynamic
  Group: ff02::2:43e:d7f6
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      244 Type: Dynamic
  Group: ff05::2
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      244 Type: Dynamic
Interface: local
  Group: ff02::2
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: ff02::16
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic

```

### show mld group (Exclude Mode)

```
user@host> show mld group
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
  Group: ff02::6
    Source: ::
    Last reported by: fe80::21f:12ff:feb6:4b3a
    Timeout:      245 Type: Dynamic
  Group: ff02::16
    Source: ::
    Last reported by: fe80::21f:12ff:feb6:4b3a
    Timeout:      28 Type: Dynamic
Interface: local
  Group: ff02::2
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: ff02::16
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic
```

### show mld group brief

The output for the **show mld group brief** command is identical to that for the **show mld group** command. For sample output, see [show mld group \(Include Mode\) on page 1815](#) [show mld group \(Exclude Mode\) on page 1816](#).

### show mld group detail (Include Mode)

```
user@host> show mld group detail
Interface: fe-0/1/2.0
  Group: ff02::1:ff05:1a67
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      224 Type: Dynamic
  Group: ff02::1:ffa8:c35e
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      220 Type: Dynamic
  Group: ff02::2:43e:d7f6
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      223 Type: Dynamic
  Group: ff05::2
    Group mode: Include
    Source: ::
    Last reported by: fe80::2e0:81ff:fe05:1a67
    Timeout:      223 Type: Dynamic
Interface: so-1/0/1.0
  Group: ff02::2
    Group mode: Include
    Source: ::
    Last reported by: fe80::280:42ff:fe15:f445
    Timeout:      258 Type: Dynamic
```

```

Interface: local
  Group: ff02::2
    Group mode: Include
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic
  Group: ff02::16
    Source: ::
    Last reported by: Local
    Timeout:      0 Type: Dynamic

```

### show mld group detail (Exclude Mode)

```

user@host> show mld group detail
Interface: ge-0/2/2.0
Interface: ge-0/2/0.0
  Group: ff02::6
    Group mode: Exclude
    Source: ::
    Source timeout: 0
    Last reported by: fe80::21f:12ff:feb6:4b3a
    Group timeout:   226 Type: Dynamic
  Group: ff02::16
    Group mode: Exclude
    Source: ::
    Source timeout: 0
    Last reported by: fe80::21f:12ff:feb6:4b3a
    Group timeout:   246 Type: Dynamic
Interface: local
  Group: ff02::2
    Group mode: Exclude
    Source: ::
    Source timeout: 0
    Last reported by: Local
    Group timeout:   0 Type: Dynamic
  Group: ff02::16
    Group mode: Exclude
    Source: ::
    Source timeout: 0
    Last reported by: Local
    Group timeout:   0 Type: Dynamic

```

## show mld interface

<b>Syntax</b>	show mld interface <brief   detail> <interface-name> <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display information about multipoint Listener Discovery (MLD)-enabled interfaces.
<b>Options</b>	<p><b>none</b>—Display standard information about all MLD-enabled interfaces.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>interface-name</b>—(Optional) Display information about the specified interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">clear mld membership on page 1741</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show mld interface on page 1820</a> <a href="#">show mld interface brief on page 1821</a> <a href="#">show mld interface detail on page 1821</a> <a href="#">show mld interface &lt;interface-name&gt; on page 1821</a>
<b>Output Fields</b>	<p><a href="#">Table 112 on page 1818</a> describes the output fields for the <b>show mld interface</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 112: show mld interface Output Fields

Field Name	Field Description	Level of Output
Interface	Name of the interface.	All levels
Querier	Address of the router that has been elected to send membership queries.	All levels
State	State of the interface: <b>Up</b> or <b>Down</b> .	All levels
SSM Map Policy	Name of the source-specific multicast (SSM) map policy that has been applied to the interface.	All levels
SSM Map Policy	Name of the source-specific multicast (SSM) map policy at the MLD interface.	All levels

Table 112: show mld interface Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Timeout</b>	How long until the MLD querier is declared to be unreachable, in seconds.	All levels
<b>Version</b>	MLD version being used on the interface: 1 or 2.	All levels
<b>Groups</b>	Number of groups on the interface.	All levels
<b>Passive</b>	<p>State of the passive mode option:</p> <ul style="list-style-type: none"> <li>• <b>On</b>—Indicates that the router can run IGMP or MLD on the interface but not send or receive control traffic such as IGMP or MLD reports, queries, and leaves.</li> <li>• <b>Off</b>—Indicates that the router can run IGMP or MLD on the interface and send or receive control traffic such as IGMP or MLD reports, queries, and leaves.</li> </ul> <p>The <b>passive</b> statement enables you to selectively activate up to two out of a possible three available query or control traffic options. When enabled, the following options appear after the <b>on</b> state declaration:</p> <ul style="list-style-type: none"> <li>• <b>send-general-query</b>—The interface sends general queries.</li> <li>• <b>send-group-query</b>—The interface sends group-specific and group-source-specific queries.</li> <li>• <b>allow-receive</b>—The interface receives control traffic</li> </ul>	All levels
<b>OIF map</b>	Name of the OIF map associated to the interface.	All levels
<b>SSM map</b>	Name of the source-specific multicast (SSM) map used on the interface, if configured.	All levels
<b>Group limit</b>	Maximum number of groups allowed on the interface. Any memberships requested after the limit is reached are rejected.	All levels
<b>Group threshold</b>	<p>Configured threshold at which a warning message is generated.</p> <p>This threshold is based on a percentage of groups received on the interface. If the number of groups received reaches the configured threshold, the device generates a warning message.</p>	All levels
<b>Group log-interval</b>	Time (in seconds) between consecutive log messages.	All levels
<b>Immediate Leave</b>	<p>State of the immediate leave option:</p> <ul style="list-style-type: none"> <li>• <b>On</b>—Indicates that the router removes a host from the multicast group as soon as the router receives a multicast listener done message from a host associated with the interface.</li> <li>• <b>Off</b>—Indicates that after receiving a multicast listener done message, instead of removing a host from the multicast group immediately, the router sends a group query to determine if another receiver responds.</li> </ul>	All levels

Table 112: show mld interface Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Distributed</b>	State of MLD, which, by default, takes place on the Routing Engine for MX Series routers but can be distributed to the Packet Forwarding Engine to provide faster processing of join and leave events. <ul style="list-style-type: none"> <li>• <b>On</b>—distributed MLD is enabled.</li> </ul>	All levels
<b>Configured Parameters</b>	Information configured by the user. <ul style="list-style-type: none"> <li>• <b>MLD Query Interval (.1 secs)</b>—Interval at which this router sends membership queries when it is the querier.</li> <li>• <b>MLD Query Response Interval (.1 secs)</b>—Time that the router waits for a report in response to a general query.</li> <li>• <b>MLD Last Member Query Interval (.1 secs)</b>—Time that the router waits for a report in response to a group-specific query.</li> <li>• <b>MLD Robustness Count</b>—Number of times the router retries a query.</li> </ul>	All levels
<b>Derived Parameters</b>	Derived information. <ul style="list-style-type: none"> <li>• <b>MLD Membership Timeout (.1 secs)</b>—Timeout period for group membership. If no report is received for these groups before the timeout expires, the group membership will be removed.</li> <li>• <b>MLD Other Querier Present Timeout (.1 secs)</b>—Time that the router waits for the IGMP querier to send a query.</li> </ul>	All levels

## Sample Output

### show mld interface

```

user@host> show mld interface
Interface: fe-0/0/0
  Querier: None
  State: Up      Timeout:      0    Version:  1    Groups:      0
  SSM Map Policy: ssm-policy-A
Interface: at-0/3/1.0
  Querier: 8038::c0a8:c345
  State: Up      Timeout:    None    Version:  1    Groups:      0
  SSM Map Policy: ssm-policy-B
Interface: fe-1/0/1.0
  Querier: ::192.168.195.73
  State: Up      Timeout:    None    Version:  1    Groups:      3
  SSM Map Policy: ssm-policy-C
  SSM map: ipv6map1
Immediate Leave: On

Promiscuous Mode: Off
Passive: Off
Distributed: OnConfigured Parameters:

Configured Parameters:
MLD Query Interval (.1 secs): 1250
MLD Query Response Interval (.1 secs): 100
MLD Last Member Query Interval (.1 secs): 10
MLD Robustness Count: 2

```

```
Derived Parameters:
MLD Membership Timeout (.1secs): 2600
MLD Other Querier Present Timeout (.1 secs): 2550
```

### **show mld interface brief**

The output for the **show mld interface brief** command is identical to that for the **show mld interface** command. For sample output, see [show mld interface on page 1820](#).

### **show mld interface detail**

The output for the **show mld interface detail** command is identical to that for the **show mld interface** command. For sample output, see [show mld interface on page 1820](#).

### **show mld interface <interface-name>**

```
user@host# show mld interface ge-3/2/0.0
Interface: ge-3/2/0.0
Querier: 203.0.113.111
State: Up Timeout:      None Version: 3 Groups:      1
Group limit: 8
Group threshold: 60
Group log-interval: 10
Immediate leave: Off
Promiscuous mode: Off   Distributed: On
```

## show mld statistics

---

<b>Syntax</b>	<code>show mld statistics</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display information about Multicast Listener Discovery (MLD) statistics.
<b>Options</b>	<b>none</b> —Display MLD statistics for all interfaces.  <b>interface <i>interface-name</i></b> —(Optional) Display statistics about the specified interface.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">clear mld statistics on page 1742</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show mld statistics on page 1823</a> <a href="#">show mld statistics interface on page 1824</a>
<b>Output Fields</b>	<a href="#">Table 113 on page 1822</a> describes the output fields for the <b>show mld statistics</b> command. Output fields are listed in the approximate order in which they appear.

*Table 113: show mld statistics Output Fields*

Field Name	Field Description
Received	Number of received packets.
Sent	Number of transmitted packets.
Rx errors	Number of received packets that contained errors.

Table 113: show mld statistics Output Fields (continued)

Field Name	Field Description
<b>MLD Message type</b>	Summary of MLD statistics. <ul style="list-style-type: none"> <li>• <b>Listener Query (v1/v2)</b>—Number of membership queries sent and received.</li> <li>• <b>Listener Report (v1)</b>—Number of version 1 membership reports sent and received.</li> <li>• <b>Listener Done (v1/v2)</b>—Number of Listener Done messages sent and received.</li> <li>• <b>Listener Report (v2)</b>—Number of version 2 membership reports sent and received.</li> <li>• <b>Other Unknown types</b>—Number of unknown message types received.</li> <li>• <b>MLD v2 source required for SSM</b>—Number of MLD version 2 messages received that contained no source.</li> <li>• <b>MLD v2 mode not applicable for SSM</b>—Number of MLD version 2 messages received that did not contain a mode applicable for source-specific multicast (SSM).</li> </ul>
<b>MLD Global Statistics</b>	Summary of MLD statistics for all interfaces. <ul style="list-style-type: none"> <li>• <b>Bad Length</b>—Number of messages received with length errors so severe that further classification could not occur.</li> <li>• <b>Bad Checksum</b>—Number of messages received with an invalid IP checksum. No further classification was performed.</li> <li>• <b>Bad Receive If</b>—Number of messages received on an interface not enabled for MLD.</li> <li>• <b>Rx non-local</b>—Number of messages received from nonlocal senders.</li> <li>• <b>Timed out</b>—Number of groups that timed out as a result of not receiving an explicit leave message.</li> <li>• <b>Rejected Report</b>—Number of reports dropped because of the MLD group policy.</li> <li>• <b>Total Interfaces</b>—Number of interfaces configured to support IGMP.</li> </ul>

## Sample Output

### show mld statistics

```

user@host> show mld statistics
MLD packet statistics for all interfaces
MLD Message type      Received      Sent  Rx errors
Listener Query (v1/v2)    0            2      0
Listener Report (v1)      0            0      0
Listener Done (v1/v2)    0            0      0
Listener Report (v2)      0            0      0
Other Unknown types      0            0      0
MLD v2 source required for SSM    2
MLD v2 mode not applicable for SSM 0

MLD Global Statistics
Bad Length              0
Bad Checksum            0
Bad Receive If          0
Rx non-local            0

```

Timed out	0
Rejected Report	0
Total Interfaces	2

#### show mld statistics interface

```
user@host> show mld statistics interface fe-1/0/1.0
MLD interface packet statistics for fe-1/0/1.0
MLD Message type      Received      Sent  Rx errors
Listener Query (v1/v2)      0           2      0
Listener Report (v1)        0           0      0
Listener Done (v1/v2)       0           0      0
Listener Report (v2)        0           0      0
Other Unknown types                0      0
MLD v2 source required for SSM    2
MLD v2 mode not applicable for SSM 0

MLD Global Statistics
Bad Length                0
Bad Checksum              0
Bad Receive If            0
Rx non-local              0
Timed out                 0
Rejected Report           0
Total Interfaces          2
```

## show msdp

<b>Syntax</b>	show msdp <brief   detail> <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )> <peer <i>peer-address</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display Multicast Source Discovery Protocol (MSDP) information.
<b>Options</b>	<p><b>none</b>—Display standard MSDP information for all routing instances.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for the specified instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>peer <i>peer-address</i></b>—(Optional) Display information about the specified peer only,</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show msdp source on page 1828</a></li> <li>• <a href="#">show msdp source-active on page 1830</a></li> <li>• <a href="#">show msdp statistics on page 1833</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show msdp on page 1826</a> <a href="#">show msdp brief on page 1826</a> <a href="#">show msdp detail on page 1826</a>
<b>Output Fields</b>	Table 114 on page 1825 describes the output fields for the <b>show msdp</b> command. Output fields are listed in the approximate order in which they appear.

Table 114: show msdp Output Fields

Field Name	Field Description	Level of Output
Peer address	IP address of the peer.	All levels
Local address	Local address of the peer.	All levels

Table 114: show msdp Output Fields (continued)

Field Name	Field Description	Level of Output
State	Status of the MSDP connection: <b>Listen</b> , <b>Established</b> , or <b>Inactive</b> .	All levels
Last up/down	Time at which the most recent peer-state change occurred.	All levels
Peer-Group	Peer group name.	All levels
SA Count	Number of source-active cache entries advertised by each peer that were accepted, compared to the number that were received, in the format <i>number-accepted/number-received</i> .	All levels
Peer Connect Retries	Number of peer connection retries.	detail
State timer expires	Number of seconds before another message is sent to a peer.	detail
Peer Times out	Number of seconds to wait for a response from the peer before the peer is declared unavailable.	detail
SA accepted	Number of entries in the source-active cache accepted from the peer.	detail
SA received	Number of entries in the source-active cache received by the peer.	detail

## Sample Output

### show msdp

```

user@host> show msdp
Peer address    Local address  State          Last up/down  Peer-Group    SA Count
198.32.8.193    198.32.8.195  Established    5d 19:25:44   North23       120/150
198.32.8.194    198.32.8.195  Established    3d 19:27:27   North23       300/345
198.32.8.196    198.32.8.195  Established    5d 19:39:36   North23       10/13
198.32.8.197    198.32.8.195  Established    5d 19:32:27   North23       5/6
198.32.8.198    198.32.8.195  Established    3d 19:33:04   North23       2305/3000

```

### show msdp brief

The output for the **show msdp brief** command is identical to that for the **show msdp** command. For sample output, see [show msdp on page 1826](#).

### show msdp detail

```

user@host> show msdp detail
Peer: 10.255.70.15
Local address: 10.255.70.19
State: Established
Peer Connect Retries: 0
State timer expires: 22
Peer Times out: 49
SA accepted: 0
SA received: 0

```



## show msdp source

---

<b>Syntax</b>	<code>show msdp source</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;source-address&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display multicast sources learned from Multicast Source Discovery Protocol (MSDP).
<b>Options</b>	<b>none</b> —Display standard MSDP source information for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Display information for the specified instance only.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>source-address</b> —(Optional) IP address and optional prefix length. Display information for the specified source address only.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show msdp on page 1825</a></li><li>• <a href="#">show msdp source-active on page 1830</a></li><li>• <a href="#">show msdp statistics on page 1833</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show msdp source on page 1829</a>

**Output Fields** Table 115 on page 1829 describes the output fields for the **show msdp source** command. Output fields are listed in the approximate order in which they appear.

*Table 115: show msdp source Output Fields*

Field Name	Field Description
Source address	IP address of the source.
/Len	Length of the prefix for this IP address.
Type	Discovery method for this multicast source: <ul style="list-style-type: none"> <li>• <b>Configured</b>—Source-active limit explicitly configured for this source.</li> <li>• <b>Dynamic</b>—Source-active limit established when this source was discovered.</li> </ul>
Maximum	Source-active limit applied to this source.
Threshold	Source-active threshold applied to this source.
Exceeded	Number of source-active messages received from this source exceeding the established maximum.

## Sample Output

**show msdp source**

```

user@host> show msdp source
Source address /Len  Type      Maximum  Threshold  Exceeded
0.0.0.0       /0    Configured    5        none       0
10.1.0.0      /16   Configured   500      none       0
10.1.1.1      /32   Configured  10000    none       0
10.1.1.2      /32   Dynamic     6936     none       0
10.1.5.5      /32   Dynamic     500      none      123
10.2.1.1      /32   Dynamic      2        none       0

```

## show msdp source-active

---

<b>Syntax</b>	<pre>show msdp source-active &lt;brief   detail&gt; &lt;group <i>group</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;local&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;originator <i>originator</i>&gt; &lt;peer <i>peer-address</i>&gt; &lt;source <i>source-address</i>&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display the Multicast Source Discovery Protocol (MSDP) source-active cache.
<b>Options</b>	<p><b>none</b>—Display standard MSDP source-active cache information for all routing instances.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>group <i>group</i></b>—(Optional) Display source-active cache information for the specified group.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for the specified instance.</p> <p><b>local</b>—(Optional) Display all source-active caches originated by this router.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>originator <i>originator</i></b>—(Optional) Display information about the peer that originated the source-active cache entries.</p> <p><b>peer <i>peer-address</i></b>—(Optional) Display the source-active cache of the specified peer.</p> <p><b>source <i>source-address</i></b>—(Optional) Display the source-active cache of the specified source.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show msdp on page 1825</a></li><li>• <a href="#">show msdp source on page 1828</a></li><li>• <a href="#">show msdp statistics on page 1833</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show msdp source-active on page 1831</a> <a href="#">show msdp source-active brief on page 1832</a>

[show msdp source-active detail on page 1832](#)

[show msdp source-active source on page 1832](#)

**Output Fields** Table 116 on page 1831 describes the output fields for the **show msdp source-active** command. Output fields are listed in the approximate order in which they appear.

*Table 116: show msdp source-active Output Fields*

Field Name	Field Description
Global active source limit exceeded	Number of times all peers have exceeded configured active source limits.
Global active source limit maximum	Configured number of active source messages accepted by the device.
Global active source limit threshold	Configured threshold for applying random early discard (RED) to drop some but not all MSDP active source messages.
Global active source limit log-warning	Threshold at which a warning message is logged (percentage of the number of active source messages accepted by the device).
Global active source limit log interval	Time (in seconds) between consecutive log messages.
Group address	Multicast address of the group.
Source address	IP address of the source.
Peer address	IP address of the peer.
Originator	Router ID configured on the source of the rendezvous point (RP) that originated the message, or the loopback address when the router ID is not configured.
Flags	Flags: <b>Accept</b> , <b>Reject</b> , or <b>Filtered</b> .

## Sample Output

**show msdp source-active**

```

user@host> show msdp source-active
Group address  Source address  Peer address  Originator  Flags
230.0.0.0     192.168.195.46  local        10.255.14.30  Accept
230.0.0.1     192.168.195.46  local        10.255.14.30  Accept
230.0.0.2     192.168.195.46  local        10.255.14.30  Accept
230.0.0.3     192.168.195.46  local        10.255.14.30  Accept
230.0.0.4     192.168.195.46  local        10.255.14.30  Accept

```

### show msdp source-active brief

The output for the **show msdp source-active brief** command is identical to that for the **show msdp source-active** command. For sample output, see [show msdp source-active on page 1831](#).

### show msdp source-active detail

The output for the **show msdp source-active detail** command is identical to that for the **show msdp source-active** command. For sample output, see [show msdp source-active on page 1831](#).

### show msdp source-active source

```
user@host> show msdp source-active source 192.168.215.246
```

```
Global active source limit exceeded: 0
```

```
Global active source limit maximum: 25000
```

```
Global active source limit threshold: 24000
```

```
Global active source limit log-warning: 100
```

```
Global active source limit log interval: 0
```

Group address	Source address	Peer address	Originator	Flags
226.2.2.1	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.3	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.4	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.5	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.7	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.10	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.11	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.13	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.14	192.168.215.246	10.255.182.140	10.255.182.140	Accept
226.2.2.15	192.168.215.246	10.255.182.140	10.255.182.140	Accept

## show msdp statistics

<b>Syntax</b>	show msdp statistics <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )> <peer <i>peer-address</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display statistics about Multicast Source Discovery Protocol (MSDP) peers.
<b>Options</b>	<b>none</b> —Display statistics about all MSDP peers for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Display statistics about a specific MSDP instance.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>peer <i>peer-address</i></b> —(Optional) Display statistics about a particular MSDP peer.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">clear msdp statistics on page 1744</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show msdp statistics on page 1835</a> <a href="#">show msdp statistics peer on page 1835</a>
<b>Output Fields</b>	Table 117 on page 1833 describes the output fields for the <b>show msdp statistics</b> command. Output fields are listed in the approximate order in which they appear.

*Table 117: show msdp statistics Output Fields*

Field Name	Field Description
Global active source limit exceeded	Number of times all peers have exceeded configured active source limits.
Global active source limit maximum	Configured number of active source messages accepted by the device.
Global active source limit threshold	Configured threshold for applying random early discard (RED) to drop some but not all MSDP active source messages.
Global active source limit log-warning	Threshold at which a warning message is logged (percentage of the number of active source messages accepted by the device).

Table 117: show msdp statistics Output Fields (continued)

Field Name	Field Description
<b>Global active source limit log interval</b>	Time (in seconds) between consecutive log messages.
<b>Peer</b>	Address of peer.
<b>Last State Change</b>	How long ago the peer state changed.
<b>Last message received from the peer</b>	How long ago the last message was received from the peer.
<b>RPF Failures</b>	Number of reverse path forwarding (RPF) failures.
<b>Remote Closes</b>	Number of times the remote peer closed.
<b>Peer Timeouts</b>	Number of peer timeouts.
<b>SA messages sent</b>	Number of source-active messages sent.
<b>SA messages received</b>	Number of source-active messages received.
<b>SA request messages sent</b>	Number of source-active request messages sent.
<b>SA request messages received</b>	Number of source-active request messages received.
<b>SA response messages sent</b>	Number of source-active response messages sent.
<b>SA response messages received</b>	Number of source-active response messages received.
<b>SA messages with zero Entry Count received</b>	Entry Count is a field within SA message that defines how many source/group tuples are present in the SA message. The counter is incremented each time an SA with an Entry Count of zero is received.
<b>Active source exceeded</b>	Number of times this peer has exceeded configured source-active limits.
<b>Active source Maximum</b>	Configured number of active source messages accepted by this peer.
<b>Active source threshold</b>	Configured threshold on this peer for applying random early discard (RED) to drop some but not all MSDP active source messages.
<b>Active source log-warning</b>	Configured threshold on this peer at which a warning message is logged (percentage of the number of active source messages accepted by the device).
<b>Active source log-interval</b>	Time (in seconds) between consecutive log messages on this peer.

Table 117: show msdp statistics Output Fields (continued)

Field Name	Field Description
Keepalive messages sent	Number of keepalive messages sent.
Keepalive messages received	Number of keepalive messages received.
Unknown messages received	Number of unknown messages received.
Error messages received	Number of error messages received.

## Sample Output

### show msdp statistics

```

user@host> show msdp statistics
Global active source limit exceeded: 0
Global active source limit maximum: 10
Global active source limit threshold: 8
Global active source limit log-warning: 60
Global active source limit log interval: 60

Peer: 10.255.245.39
Last State Change: 11:54:49 (00:24:59)
Last message received from peer: 11:53:32 (00:26:16)
RPF Failures: 0
Remote Closes: 0
Peer Timeouts: 0
SA messages sent: 376
SA messages received: 459
SA messages with zero Entry Count received: 0
SA request messages sent: 0
SA request messages received: 0
SA response messages sent: 0
SA response messages received: 0
Active source exceeded: 0
Active source Maximum: 10
Active source threshold: 8
Active source log-warning: 60
Active source log-interval 120
Keepalive messages sent: 17
Keepalive messages received: 19
Unknown messages received: 0
Error messages received: 0

```

### show msdp statistics peer

```

user@host> show msdp statistics peer 10.255.182.140
Peer: 10.255.182.140
  Last State Change: 8:19:23 (00:01:08)
  Last message received from peer: 8:20:05 (00:00:26)
  RPF Failures: 0
  Remote Closes: 0
  Peer Timeouts: 0

```

SA messages sent: 17  
SA messages received: 16  
SA request messages sent: 0  
SA request messages received: 0  
SA response messages sent: 0  
SA response messages received: 0  
Active source exceeded: 20  
Active source Maximum: 10  
Active source threshold: 8  
Active source log-warning: 60  
Active source log-interval: 120  
Keepalive messages sent: 0  
Keepalive messages received: 0  
Unknown messages received: 0  
Error messages received: 0

## show multicast backup-pe-groups

**Syntax** show multicast backup-pe-groups  
 <address *pe-address*>  
 <group *group-name*>  
 <instance *instance-name*>  
 <logical-system (all | *logical-system-name*)>

**Release Information** Command introduced in Junos OS Release 9.0.

**Description** Display backup PE router group information when ingress PE redundancy is configured. Ingress PE redundancy provides a backup resource when point-to-multipoint LSPs are configured for multicast distribution.

**Options** **none**—Display standard information about all backup PE groups.

**address *pe-address***—(Optional) Display the groups that a PE address is associated with.

**group *group***—(Optional) Display the backup PE group information for a particular group.

**instance *instance-name***—(Optional) Display backup PE group information for a specific multicast instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level** view

**List of Sample Output** [show multicast backup-pe-groups on page 1838](#)

**Output Fields** [Table 118 on page 1837](#) describes the output fields for the **show multicast backup-pe-groups** command. Output fields are listed in the approximate order in which they appear.

*Table 118: show multicast backup-pe-groups Output Fields*

Field Name	Field Description
Backup PE Group	Group name.
Designated PE	Primary PE router. Address of the PE router that is currently forwarding traffic on the static route.
Transitions	Number of times that the designated PE router has transitioned from the most eligible PE router to a backup PE router and back again to the most eligible PE router.
Last Transition	Time of the most recent transition.
Local Address	Address of the local PE router.
Backup PE List	List of PE routers that are configured to be backups for the group.

## Sample Output

### show multicast backup-pe-groups

```
user@host> show multicast backup-pe-groups
Instance: master

Backup PE group: b1
  Designated PE: 10.255.165.7
  Transitions: 1
  Last Transition: 03:15:01
  Local Address: 10.255.165.7
  Backup PE List:
    10.255.165.8

Backup PE group: b2
  Designated PE: 10.255.165.7
  Transitions: 2
  Last Transition: 02:58:20
  Local Address: 10.255.165.7
  Backup PE List:
    10.255.165.9
    10.255.165.8
```

## show multicast flow-map

<b>List of Syntax</b>	<a href="#">Syntax on page 1839</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1839</a>
<b>Syntax</b>	<pre>show multicast flow-map &lt;brief   detail&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show multicast flow-map &lt;brief   detail&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 8.2.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display configuration information about IP multicast flow maps.
<b>Options</b>	<p><b>none</b>—Display configuration information about IP multicast flow maps on all systems.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show multicast flow-map on page 1840</a> <a href="#">show multicast flow-map detail on page 1840</a>
<b>Output Fields</b>	<p><a href="#">Table 119 on page 1839</a> describes the output fields for the <b>show multicast flow-map</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 119: show multicast flow-map Output Fields*

Field Name	Field Description	Levels of Output
<b>Name</b>	Name of the flow map.	All levels
<b>Policy</b>	Name of the policy associated with the flow map.	All levels
<b>Cache-timeout</b>	Cache timeout value assigned to the flow map.	All levels
<b>Bandwidth</b>	Bandwidth setting associated with the flow map.	All levels
<b>Adaptive</b>	Whether or not adaptive mode is enabled for the flow map.	none

Table 119: show multicast flow-map Output Fields (continued)

Field Name	Field Description	Levels of Output
<b>Flow-map</b>	Name of the flow map.	<b>detail</b>
<b>Adaptive Bandwidth</b>	Whether or not adaptive mode is enabled for the flow map.	<b>detail</b>
<b>Redundant Sources</b>	Redundant sources defined for the same destination group.	<b>detail</b>

## Sample Output

### show multicast flow-map

```

user@host> show multicast flow-map
Instance: master
Name          Policy          Cache timeout    Bandwidth Adaptive
map2          policy2         never            2000000 no
map1          policy1         60 seconds      2000000 no

```

## Sample Output

### show multicast flow-map detail

```

user@host> show multicast flow-map detail
Instance: master
Flow-map: map1
  Policy:          policy1
  Cache Timeout:   600 seconds
  Bandwidth:       2000000
  Adaptive Bandwidth: yes
  Redundant Sources: 10.11.11.11
  Redundant Sources: 10.11.11.12
  Redundant Sources: 10.11.11.13

```

## show multicast forwarding-cache statistics

<b>Syntax</b>	show multicast forwarding-cache statistics <inet   inet6> <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced in Junos OS Release 12.2. Starting in Junos OS Release 16.1, output includes general and rendezvous-point tree (RPT) suppression states.
<b>Description</b>	Display IP multicast forwarding cache statistics.
<b>Options</b>	<p><b>none</b>—Display multicast forwarding cache statistics for all supported address families for all routing instances.</p> <p><b>inet   inet6</b>—(Optional) Display multicast forwarding cache statistics for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display multicast forwarding cache statistics for a specific routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear multicast forwarding-cache on page 1747</a></li> <li>• <i>threshold</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show multicast forwarding cache statistics instance on page 1842</a> <a href="#">show multicast forwarding cache statistics instance (Forwarding-cache suppression is disabled) on page 1842</a>
<b>Output Fields</b>	<a href="#">Table 120 on page 1841</a> describes the output fields for the <b>show multicast forwarding-cache statistics</b> command. Output fields are listed in the approximate order in which they appear.

Table 120: show multicast forwarding-cache statistics Output Fields

Field Name	Field Description
Instance	Name of the routing instance for which multicast forwarding cache statistics are displayed.
Family	Protocol family for which multicast forwarding cache statistics are displayed: <b>ALL</b> , <b>INET</b> , or <b>INET6</b> .

Table 120: show multicast forwarding-cache statistics Output Fields (continued)

Field Name	Field Description
General (or MVPN RPT) Suppression Active	Indicates whether suppression is configured.
General (or MVPN RPT) Entries Used	Number of currently used multicast forwarding cache entries.
General (or MVPN RPT) Suppress Threshold	Maximum number of multicast forwarding cache entries that can be added to the cache. When the number of entries reaches the configured threshold, the device suspends adding new multicast forwarding cache entries.
General (or MVPN RPT) Reuse Value	Number of multicast forwarding cache entries that must be reached before the device creates new multicast forwarding cache entries. When the total number of multicast forwarding cache entries is below the reuse value, the device resumes adding new multicast forwarding cache entries.

## Sample Output

### show multicast forwarding cache statistics instance

```

user@host> show multicast forwarding-cache statistic instance mvpn1 inet6
  Instance: mvpn1 Family: INET6
  General Suppression Active          Yes
  General Entries Used                0
  General Suppress Threshold         200
  General Reuse Value                 200
  MVPN RPT Suppression Active        Yes
  MVPN RPT Entries Used              0
  MVPN RPT Suppress Threshold        200
  MVPN RPT Reuse Value                200

```

### show multicast forwarding cache statistics instance (Forwarding-cache suppression is disabled)

```

user@host> show multicast forwarding-cache statistic instance mvpn1
  Instance: mvpn1 Family: ALL
  Forwarding-cache suppression disabled Not enabled by configuration

```

## show multicast interface

<b>List of Syntax</b>	<a href="#">Syntax on page 1843</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1843</a>
<b>Syntax</b>	show multicast interface <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switch and the QFX Series)</b>	show multicast interface
<b>Release Information</b>	Command introduced in Junos OS Release 8.3. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display bandwidth information about IP multicast interfaces.
<b>Options</b>	<b>none</b> —Display all interfaces that have multicast configured.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show multicast interface on page 1844</a>
<b>Output Fields</b>	<a href="#">Table 121 on page 1843</a> describes the output fields for the <b>show multicast interface</b> command. Output fields are listed in the approximate order in which they appear.

*Table 121: show multicast interface Output Fields*

Field Name	Field Description
<b>Interface</b>	Name of the multicast interface.
<b>Maximum bandwidth (bps)</b>	Maximum bandwidth setting, in bits per second, for this interface.
<b>Remaining bandwidth (bps)</b>	Amount of bandwidth, in bits per second, remaining on the interface.

Table 121: show multicast interface Output Fields (continued)

Field Name	Field Description
<b>Mapped bandwidth deduction (bps)</b>	<p>Amount of bandwidth, in bits per second, used by any flows that are mapped to the interface.</p> <p><b>NOTE:</b> Adding the mapped bandwidth deduction value to the local bandwidth deduction value results in the total deduction value for the interface.</p> <p>This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
<b>Local bandwidth deduction (bps)</b>	<p>Amount of bandwidth, in bits per second, used by any mapped flows that are traversing the interface.</p> <p><b>NOTE:</b> Adding the mapped bandwidth deduction value to the local bandwidth deduction value results in the total deduction value for the interface.</p> <p>This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
<b>Reverse OIF mapping</b>	<p>State of the reverse OIF mapping feature (<b>on</b> or <b>off</b>).</p> <p><b>NOTE:</b> This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
<b>Reverse OIF mapping no QoS adjustment</b>	<p>State of the no QoS adjustment feature (<b>on</b> or <b>off</b>) for interfaces that are using reverse OIF mapping.</p> <p><b>NOTE:</b> This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
<b>Leave timer</b>	<p>Amount of time a mapped interface remains active after the last mapping ends.</p> <p><b>NOTE:</b> This field does not appear in the output when the no QoS adjustment feature is disabled.</p>
<b>No QoS adjustment</b>	<p>State (<b>on</b>) of the no QoS adjustment feature when this feature is enabled.</p> <p><b>NOTE:</b> This field does not appear in the output when the no QoS adjustment feature is disabled.</p>

## Sample Output

### show multicast interface

```

user@host> show multicast interface
Interface          Maximum bandwidth (bps) Remaining bandwidth (bps)
fe-0/0/3           100000000                0
fe-0/0/3.210       100000000                -2000000
fe-0/0/3.220       100000000               100000000
fe-0/0/3.230       200000000               180000000
fe-0/0/2.200       100000000               100000000

```



## show multicast minfo

<b>Syntax</b>	<code>show multicast minfo</code> <code>&lt;host&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display configuration information about IP multicast networks, including neighboring multicast router addresses.
<b>Options</b>	<b>none</b> —Display configuration information about all multicast networks.  <b>host</b> —(Optional) Display configuration information about a particular host. Replace <i>host</i> with a hostname or IP address.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show multicast minfo on page 1847</a>
<b>Output Fields</b>	<a href="#">Table 122 on page 1846</a> describes the output fields for the <b>show multicast minfo</b> command. Output fields are listed in the approximate order in which they appear.

Table 122: show multicast minfo Output Fields

Field Name	Field Description
<i>source-address</i>	Query address, hostname (DNS name or IP address of the source address), and multicast protocol version or the software version of another vendor.
<i>ip-address-1—&gt;ip-address-2</i>	Queried router interface address and directly attached neighbor interface address, respectively.
<i>(name or ip-address)</i>	Name or IP address of neighbor.
<i>[metric/threshold/type/flags]</i>	Neighbor's multicast profile: <ul style="list-style-type: none"> <li><b>metric</b>—Always has a value of 1, because <b>minfo</b> queries the directly connected interfaces of a device.</li> <li><b>threshold</b>—Multicast threshold time-to-live (TTL). The range of values is 0 through 255.</li> <li><b>type</b>—Multicast connection type: <b>pim</b> or <b>tunnel</b>.</li> <li><b>flags</b>—Flags for this route: <ul style="list-style-type: none"> <li><b>querier</b>—Queried router is the designated router for the neighboring session.</li> <li><b>leaf</b>—Link is a leaf in the multicast network.</li> <li><b>down</b>—Link status indicator.</li> </ul> </li> </ul>

## Sample Output

### show multicast mrinfo

```
user@host> show multicast mrinfo 10.35.4.1
10.35.4.1 (10.35.4.1) [version 12.0]:
  192.168.195.166 -> 0.0.0.0 (local) [1/0/pim/querier/leaf]
  10.38.20.1 -> 0.0.0.0 (local) [1/0/pim/querier/leaf]
  10.47.1.1 -> 10.47.1.2 (10.47.1.2) [1/5/pim]
  0.0.0.0 -> 0.0.0.0 (local) [1/0/pim/down]
```

## show multicast next-hops

<b>List of Syntax</b>	<a href="#">Syntax on page 1848</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1848</a>
<b>Syntax</b>	<pre>show multicast next-hops &lt;brief   detail   terse&gt; &lt;identifier-number&gt; &lt;inet   inet6&gt; &lt;logical-system (all   logical-system-name)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show multicast next-hops &lt;brief   detail&gt; &lt;identifier-number&gt; &lt;inet   inet6&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> option introduced in Junos OS Release 10.0 for EX Series switches.</p> <p><b>detail</b> option display of next-hop ID number introduced in Junos OS Release 11.1 for M Series and T Series routers and EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Support for bidirectional PIM added in Junos OS Release 12.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p><b>terse</b> option introduced in Junos OS Release 16.1 for the MX Series.</p>
<b>Description</b>	Display the entries in the IP multicast next-hop table.
<b>Options</b>	<p><b>none</b>—Display standard information about all entries in the multicast next-hop table for all supported address families.</p> <p><b>brief   detail   terse</b>—(Optional) Display the specified level of output. Use <b>terse</b> to display the total number of outgoing interfaces (as opposed to listing them) When you include the <b>detail</b> option on M Series and T Series routers and EX Series switches, the downstream interface name includes the next-hop ID number in parentheses, in the form <b>fe-0/1/2.0-(1048574)</b>, where <b>1048574</b> is the next-hop ID number.</p> <p>Starting in Junos OS release 16.1, the <b>show multicast next-hops</b> statement shows the hierarchical next hops contained in the top-level next hop.</p> <p><b>identifier-number</b>—(Optional) Show a particular next hop by ID number. The range of values is 1 through <b>65,535</b>.</p> <p><b>inet   inet6</b>—(Optional) Display entries for IPv4 or IPv6 family addresses, respectively.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>

**Required Privilege Level** view

**List of Sample Output** [show multicast next-hops on page 1849](#)  
[show multicast next-hops \(Ingress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1849](#)  
[show multicast next-hops \(Egress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1850](#)  
[show multicast next-hops \(Bidirectional PIM\) on page 1850](#)  
[show multicast next-hops brief on page 1850](#)  
[show multicast next-hops detail on page 1850](#)

**Output Fields** [Table 123 on page 1849](#) describes the output fields for the **show multicast next-hops** command. Output fields are listed in the approximate order in which they appear.

*Table 123: show multicast next-hops Output Fields*

Field Name	Field Description
<b>Family</b>	Protocol family (such as <b>INET</b> ).
<b>ID</b>	Next-hop identifier of the prefix. The identifier is returned by the routing device's Packet Forwarding Engine.
<b>RefCount</b>	Number of cache entries that are using this next hop.
<b>KRefCount</b>	Kernel reference count for the next hop.
<b>Downstream interface</b>	Interface names associated with each multicast next-hop ID.
<b>Incoming interface list</b>	List of interfaces that accept incoming traffic. Only shown for routes that do not use strict RPF-based forwarding, for example for bidirectional PIM.

## Sample Output

### show multicast next-hops

```
user@host> show multicast next-hops
Family: INET
ID      Refcount  KRefCount Downstream interface
262142      4          2 so-1/0/0.0
262143      2          1 mt-1/1/0.49152
262148      2          1 mt-1/1/0.32769
```

### show multicast next-hops (Ingress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show multicast next-hops
Family: INET
ID      Refcount  KRefCount Downstream interface Addr
1048580      2          1 1048576
(0x600dc04)  1          0 1048584
(0x600ea04)  1          0 (0x600e924)
```

1048583	2	1	1048579
(0x600e144)	1	0	1048587
(0x600e844)	1	0	(0x600e764)
1048582	2	1	1048578
(0x600df84)	1	0	1048586
(0x600e684)	1	0	(0x600e5a4)
1048581	2	1	1048577
(0x600ddc4)	1	0	1048585
(0x600ebc4)	1	0	(0x600eae4)

### show multicast next-hops (Egress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show multicast next-hops
Family: INET
ID          Refcount KRefCount Downstream interface Addr
(0x600e844)      8          0 1048575
1048575        16          0 distributed-gmp
```

### show multicast next-hops (Bidirectional PIM)

```
user@host> show multicast next-hops
Family: INET
ID          Refcount KRefCount Downstream interface
2097151      8          4 ge-0/0/1.0

Family: INET6
ID          Refcount KRefCount Downstream interface
2097157      2          1 ge-0/0/1.0

Family: Incoming interface list
ID          Refcount KRefCount Downstream interface
513          5          2 lo0.0
               ge-0/0/1.0
514          5          2 lo0.0
               ge-0/0/1.0
               xe-4/1/0.0
515          3          1 lo0.0
               ge-0/0/1.0
               xe-4/1/0.0
544          1          0 lo0.0
               xe-4/1/0.0
```

### show multicast next-hops brief

The output for the **show multicast next-hops brief** command is identical to that for the **show multicast next-hops** command. For sample output, see [show multicast next-hops on page 1849](#).

### show multicast next-hops detail

```
user@host> show multicast next-hops detail
Family: INET
ID          Refcount KRefCount Downstream interface Addr
1048584      2          1 1048581
               1048580
               Flags 0x208 type 0x18 members 0/0/2/0/0
               Address 0xb1841c4
1048591      3          2 787
               747
```

```

Flags 0x206 type 0x18 members 0/0/2/0/0
Address 0xb1847f4
1048580          4          1 ge-1/1/9.0-(1048579)
Flags 0x200 type 0x18 members 0/0/0/1/0
Address 0xb184134
1048581          2          0 736
765
Flags 0x3 type 0x18 members 0/0/2/0/0
Address 0xb183dd4
1048585          18          0 787
747
Flags 0x203 type 0x18 members 0/0/2/0/0
Address 0xb184404

```

Family: INET6

```

ID          Refcount KRefCount Downstream interface Addr
1048586          4          2 1048585
1048583
Flags 0x20c type 0x19 members 0/0/2/0/0
Address 0xb1842e4
1048583          14          4 ge-1/1/9.0-(1048582)
Flags 0x200 type 0x19 members 0/0/0/1/0
Address 0xb183ef4
1048592          4          2 1048583
1048591
Flags 0x20c type 0x19 members 0/0/2/0/0
Address 0xb184644

```

## show multicast pim-to-igmp-proxy

---

List of Syntax	<a href="#">Syntax on page 1852</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1852</a>
Syntax	<pre>show multicast pim-to-igmp-proxy &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
Syntax (EX Series Switch and the QFX Series)	<pre>show multicast pim-to-igmp-proxy &lt;instance <i>instance-name</i>&gt;</pre>
Release Information	Command introduced in Junos OS Release 9.6. Command introduced in Junos OS Release 9.6 for EX Series switches. <b>instance</b> option introduced in Junos OS Release 10.3. <b>instance</b> option introduced in Junos OS Release 10.3 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display configuration information about PIM-to-IGMP message translation, also known as PIM-to-IGMP proxy.
Options	<b>none</b> —Display configuration information about PIM-to-IGMP message translation for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Display configuration information about PIM-to-IGMP message translation for a specific multicast instance.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li><a href="#">Configuring PIM-to-IGMP and PIM-to-MLD Message Translation</a></li></ul>
List of Sample Output	<a href="#">show multicast pim-to-igmp-proxy on page 1853</a> <a href="#">show multicast pim-to-igmp-proxy instance on page 1853</a>
Output Fields	<a href="#">Table 124 on page 1853</a> describes the output fields for the <b>show multicast pim-to-igmp-proxy</b> command. Output fields are listed in the order in which they appear.

*Table 124: show multicast pim-to-igmp-proxy Output Fields*

Field Name	Field Description
<b>Instance</b>	Routing instance. Default instance is <b>master</b> (inet.0 routing table).
<b>Proxy state</b>	State of PIM-to-IGMP message translation, also known as PIM-to-IGMP proxy, on the configured upstream interfaces: <b>enabled</b> or <b>disabled</b> .
<b>interface-name</b>	Name of upstream interface (no more than two allowed) on which PIM-to-IGMP message translation is configured.

## Sample Output

### show multicast pim-to-igmp-proxy

```
user@host> show multicast pim-to-igmp-proxy
Instance: master Proxy state: enabled
ge-0/1/0.1
ge-0/1/0.2
```

### show multicast pim-to-igmp-proxy instance

```
user@host> show multicast pim-to-igmp-proxy instance VPN-A
Instance: VPN-A Proxy state: enabled
ge-0/1/0.1
```

## show multicast pim-to-mld-proxy

<b>List of Syntax</b>	<a href="#">Syntax on page 1854</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1854</a>
<b>Syntax</b>	<pre>show multicast pim-to-mld-proxy &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show multicast pim-to-mld-proxy &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 9.6.</p> <p>Command introduced in Junos OS Release 9.6 for EX Series switches.</p> <p><b>instance</b> option introduced in Junos OS Release 10.3.</p> <p><b>instance</b> option introduced in Junos OS Release 10.3 for EX Series switches.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p>
<b>Description</b>	Display configuration information about PIM-to-MLD message translation, also known as PIM-to-MLD proxy.
<b>Options</b>	<p><b>none</b>—Display configuration information about PIM-to-MLD message translation for all routing instances.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display configuration information about PIM-to-MLD message translation for a specific multicast instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show multicast pim-to-mld-proxy on page 1855</a> <a href="#">show multicast pim-to-mld-proxy instance on page 1855</a>
<b>Output Fields</b>	<p><a href="#">Table 125 on page 1854</a> describes the output fields for the <b>show multicast pim-to-mld-proxy</b> command. Output fields are listed in the order in which they appear.</p>

*Table 125: show multicast pim-to-mld-proxy Output Fields*

Field Name	Field Description
Proxy state	State of PIM-to-MLD message translation, also known as PIM-to-MLD proxy, on the configured upstream interfaces: <b>enabled</b> or <b>disabled</b> .

*Table 125: show multicast pim-to-mld-proxy Output Fields (continued)*

Field Name	Field Description
<i>interface-name</i>	Name of upstream interface (no more than two allowed) on which PIM-to-MLD message translation is configured.

## Sample Output

### show multicast pim-to-mld-proxy

```
user@host> show multicast pim-to-mld-proxy
Instance: master Proxy state: enabled
ge-0/5/0.1
ge-0/5/0.2
```

### show multicast pim-to-mld-proxy instance

```
user@host> show multicast pim-to-mld-proxy instance VPN-A
Instance: VPN-A Proxy state: enabled
ge-0/5/0.1
```

## show multicast route

---

**List of Syntax**    [Syntax on page 1856](#)  
                          [Syntax \(EX Series Switch and the QFX Series\) on page 1856](#)

**Syntax**    show multicast route  
                  <brief | detail | extensive | summary>  
                  <active | all | inactive>  
                  <group *group*>  
                  <inet | inet6>  
                  <instance *instance name*>  
                  <logical-system (all | *logical-system-name*)>  
                  <oif-count>  
                  <*regular-expression*>  
                  <source-prefix *source-prefix*>

**Syntax (EX Series Switch and the QFX Series)**    show multicast route  
  <brief | detail | extensive | summary>  
  <active | all | inactive>  
  <group *group*>  
  <inet | inet6>  
  <instance *instance name*>  
  <*regular-expression*>  
  <source-prefix *source-prefix*>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              inet6 and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.  
                              Command introduced in Junos OS Release 11.3 for the QFX Series.  
                              Support for bidirectional PIM added in Junos OS Release 12.1.  
                              Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
                              **oif-count** option introduced in Junos OS Release 16.1 for the MX Series.  
                              xxxSupport for PIM NSR support for VXLAN added in Junos OS Release 16.2.

**Description**    Display the entries in the IP multicast forwarding table. You can display similar information with the **show route table inet.1** command.



**NOTE:** On all SRX Series devices, when a multicast route is not available, pending sessions are not torn down, and subsequent packets are queued. If no multicast route resolve comes back, then the traffic flow has to wait for the pending session to timed out. Then packets can trigger new pending session create and route resolve.

---

**Options**    **none**—Display standard information about all entries in the multicast forwarding table for all routing instances.

**brief | detail | extensive | summary**—(Optional) Display the specified level of output.

**active | all | inactive**—(Optional) Display all active entries, all entries, or all inactive entries, respectively, in the multicast forwarding table.

**group group**—(Optional) Display the cache entries for a particular group.

**inet | inet6**—(Optional) Display multicast forwarding table entries for IPv4 or IPv6 family addresses, respectively.

**instance instance-name**—(Optional) Display entries in the multicast forwarding table for a specific multicast instance.

**logical-system (all | logical-system-name)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**oif-count**—(Optional) Display a count of outgoing interfaces rather than listing them.

**regular-expression**—(Optional) Display information about the multicast forwarding table entries that match a UNIX OS-style regular expression.

**source-prefix source-prefix**—(Optional) Display the cache entries for a particular source prefix.

**Required Privilege Level**

view

**Related Documentation**

- *Example: Configuring Multicast-Only Fast Reroute in a PIM Domain*

**List of Sample Output**

[show multicast route on page 1859](#)  
[show multicast route \(Bidirectional PIM\) on page 1860](#)  
[show multicast route brief on page 1860](#)  
[show multicast route summary on page 1860](#)  
[show multicast route detail on page 1860](#)  
[show multicast route extensive \(Bidirectional PIM\) on page 1861](#)  
[show multicast route extensive \(Ingress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1862](#)  
[show multicast route instance <instance-name> extensive on page 1863](#)  
[show multicast route extensive instance <instance-name> on page 1864](#)  
[show multicast route extensive \(PIM NSR support for VXLAN on master Routing Engine\) on page 1864](#)  
[show multicast route extensive \(PIM NSR support for VXLAN on backup Routing Engine\) on page 1865](#)  
[show multicast route extensive \(PIM NSR support for VXLAN on backup Routing Engine\) on page 1866](#)

**Output Fields**

[Table 126 on page 1858](#) describes the output fields for the **show multicast route** command. Output fields are listed in the approximate order in which they appear.

Table 126: show multicast route Output Fields

Field Name	Field Description	Level of Output
family	IPv4 address family ( <b>INET</b> ) or IPv6 address family ( <b>INET6</b> ).	All levels
Group	Group address.  For any-source multicast routes, for example for bidirectional PIM, the group address includes the prefix length.	All levels
Source	Prefix and length of the source as it is in the multicast forwarding table.	All levels
Incoming interface list	List of interfaces that accept incoming traffic. Only shown for routes that do not use strict RPF-based forwarding, for example for bidirectional PIM.	All levels
Upstream interface	Name of the interface on which the packet with this source prefix is expected to arrive.	All levels
Upstream rpf interface list	When multicast-only fast reroute (MoFRR) is enabled, a PIM router propagates join messages on two upstream RPF interfaces to receive multicast traffic on both links for the same join request.	All levels
Downstream interface list	List of interface names to which the packet with this source prefix is forwarded.  <b>distributed-gmp</b> — Added in Junos OS Release 17.4R1 to indicate that line cards with <i>distributed</i> IGMP interfaces are receiving multicast traffic for a given (s,g).	All levels
Number of outgoing interfaces	Total number of outgoing interfaces for each (S,G) entry.	<b>extensive</b>
Session description	Name of the multicast session.	<b>detail extensive</b>
Statistics	Rate at which packets are being forwarded for this source and group entry (in Kbps and pps), and number of packets that have been forwarded to this prefix. If one or more of the kilobits per second packet forwarding statistic queries fails or times out, the statistics field displays <b>Forwarding statistics are not available</b> .  <b>NOTE:</b> On QFX Series switches and OCX Series switches, this field does not report valid statistics.	<b>detail extensive</b>
Next-hop ID	Next-hop identifier of the prefix. The identifier is returned by the routing device's Packet Forwarding Engine and is also displayed in the output of the <b>show multicast nexthops</b> command.	<b>detail extensive</b>
Incoming interface list ID	For bidirectional PIM, incoming interface list identifier.  Identifiers for interfaces that accept incoming traffic. Only shown for routes that do not use strict RPF-based forwarding, for example for bidirectional PIM.	<b>detail extensive</b>

Table 126: show multicast route Output Fields (continued)

Field Name	Field Description	Level of Output
Upstream protocol	The protocol that maintains the active multicast forwarding route for this group or source.  When the <b>show multicast route extensive</b> command is used with the <b>display-origin-protocol</b> option, the field name is only <b>Protocol</b> and not <b>Upstream Protocol</b> . However, this field also displays the protocol that installed the active route.	detail extensive
Route type	Type of multicast route. Values can be (S,G) or (*,G).	summary
Route state	Whether the group is <b>Active</b> or <b>Inactive</b> .	summary extensive
Route count	Number of multicast routes.	summary
Forwarding state	Whether the prefix is pruned or forwarding.	extensive
Cache lifetime/timeout	Number of seconds until the prefix is removed from the multicast forwarding table. A value of <b>never</b> indicates a permanent forwarding entry. A value of <b>forever</b> indicates routes that do not have keepalive times.	extensive
Wrong incoming interface notifications	Number of times that the upstream interface was not available.	extensive
Uptime	Time since the creation of a multicast route.	extensive

## Sample Output

Starting in Junos OS Release 16.1, **show multicast route** displays the top-level hierarchical next hop.

### show multicast route

```

user@host> show multicast route
Family: INET

Group: 233.252.0.0
  Source: 10.255.14.144/32
  Upstream interface: local
  Downstream interface list:
    so-1/0/0.0

Group: 233.252.0.1
  Source: 10.255.14.144/32
  Upstream interface: local
  Downstream interface list:
    so-1/0/0.0

Group: 233.252.0.1
  Source: 10.255.70.15/32
  Upstream interface: so-1/0/0.0
  Downstream interface list:

```

```
mt-1/1/0.1081344
```

```
Family: INET6
```

### show multicast route (Bidirectional PIM)

```
user@host> show multicast route
Family: INET

Group: 233.252.0.1/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0
  Downstream interface list:
    ge-0/0/1.0

Group: 233.252.0.3/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0 xe-4/1/0.0
  Downstream interface list:
    ge-0/0/1.0

Group: 233.252.0.11/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0
  Downstream interface list:
    ge-0/0/1.0

Group: 233.252.0.13/24
  Source: *
  Incoming interface list:
    lo0.0 ge-0/0/1.0 xe-4/1/0.0
  Downstream interface list:
    ge-0/0/1.0
Family: INET6
```

### show multicast route brief

The output for the **show multicast route brief** command is identical to that for the **show multicast route** command. For sample output, see [show multicast route on page 1859](#) or [show multicast route \(Bidirectional PIM\) on page 1860](#).

### show multicast route summary

```
user@host> show multicast route summary
Instance: master Family: INET

Route type  Route state  Route count
(S,G)       Active        2
(S,G)       Inactive       3

Instance: master Family: INET6
```

### show multicast route detail

```
user@host> show multicast route detail
```

Family: INET

Group: 233.252.0.0  
 Source: 10.255.14.144/32  
 Upstream interface: local  
 Downstream interface list:  
   so-1/0/0.0  
 Session description: Unknown  
 Statistics: 8 kbps, 100 pps, 45272 packets  
 Next-hop ID: 262142  
 Upstream protocol: PIM

Group: 233.252.0.1  
 Source: 10.255.14.144/32  
 Upstream interface: local  
 Downstream interface list:  
   so-1/0/0.0  
 Session description: Administratively Scoped  
 Statistics: 0 kbps, 0 pps, 13404 packets  
 Next-hop ID: 262142  
 Upstream protocol: PIM

Group: 233.252.0.1  
 Source: 10.255.70.15/32  
 Upstream interface: so-1/0/0.0  
 Downstream interface list:  
   mt-1/1/0.1081344  
 Session description: Administratively Scoped  
 Statistics: 46 kbps, 1000 pps, 921077 packets  
  
 Next-hop ID: 262143  
 Upstream protocol: PIM

Family: INET6

### show multicast route extensive (Bidirectional PIM)

user@host> show multicast route extensive  
 Family: INET

Group: 233.252.0.1/24  
 Source: \*  
 Incoming interface list:  
   lo0.0 ge-0/0/1.0  
 Downstream interface list:  
   ge-0/0/1.0  
 Number of outgoing interfaces: 1  
 Session description: NOB Cross media facilities  
 Statistics: 0 kbps, 0 pps, 0 packets  
 Next-hop ID: 2097153  
 Incoming interface list ID: 585  
 Upstream protocol: PIM  
 Route state: Active  
 Forwarding state: Forwarding  
 Cache lifetime/timeout: forever  
 Wrong incoming interface notifications: 0

Group: 233.252.0.3/24  
 Source: \*  
 Incoming interface list:  
   lo0.0 ge-0/0/1.0 xe-4/1/0.0

```

Downstream interface list:
  ge-0/0/1.0
Number of outgoing interfaces: 1
Session description: NOB Cross media facilities
Statistics: 0 kbps, 0 pps, 0 packets
Next-hop ID: 2097153
Incoming interface list ID: 589
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0

```

Family: INET6

### show multicast route extensive (Ingress Router, Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show multicast route extensive
Family: INET

```

```

Group: 226.0.0.1
Source: 200.1.0.2/32
Upstream interface: xe-3/0/0.0
Downstream interface list:
  ge-0/1/9.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 78 kbps, 1000 pps, 34789 packets
Next-hop ID: 1048582
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:00:35

```

```

Group: 226.0.0.2
Source: 200.1.0.2/32
Upstream interface: xe-3/0/0.0
Downstream interface list:
  ge-0/1/9.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 78 kbps, 1000 pps, 34788 packets
Next-hop ID: 1048583
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:00:35

```

```

Group: 226.0.0.3
Source: 200.1.0.2/32
Upstream interface: xe-3/0/0.0
Downstream interface list:
  ge-0/1/9.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 78 kbps, 1000 pps, 34786 packets
Next-hop ID: 1048580

```

```

Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:00:35

Group: 226.0.0.4
Source: 200.1.0.2/32
Upstream interface: xe-3/0/0.0
Downstream interface list:
    ge-0/1/9.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 78 kbps, 1000 pps, 34787 packets
Next-hop ID: 1048581
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:00:35

Instance: master Family: INET6

```

#### show multicast route instance <instance-name> extensive

```

user@host> show multicast route instance mvpn extensive
Family: INET
roup: 233.252.0.10
Source: 10.0.0.2/32
Upstream interface: xe-0/0/0.102
Downstream interface list:
    xe-10/3/0.0 xe-0/3/0.0 xe-0/0/0.106 xe-0/0/0.105
    xe-0/0/0.103 xe-0/0/0.104 xe-0/0/0.107 xe-0/0/0.108
Session description: Administratively Scoped
Statistics: 256 kbps, 3998 pps, 670150 packets
Next-hop ID: 1048579
Upstream protocol: MVPN
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 58
Uptime: 00:00:04

Instance: master Family: INET

Group: 225.0.0.1
Source: 101.0.0.2/32
Upstream interface: ge-2/2/0.101
Downstream interface list:
    distributed-gmp
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 105 kbps, 2500 pps, 4153361 packets
Next-hop ID: 1048575
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0

```

```
Uptime: 00:31:46

Group: 225.0.0.1
Source: 101.0.0.3/32
Upstream interface: ge-2/2/0.101
Downstream interface list:
    distributed-gmp
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 105 kbps, 2500 pps, 4153289 packets
Next-hop ID: 1048575
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 360 seconds
Wrong incoming interface notifications: 0
Uptime: 00:31:46
```

#### show multicast route extensive instance <instance-name>

```
user@host> show multicast route extensive instance VPN-A
```

The double asterisks (\*\*) indicate new output, specific to **min-rate** and **revert-delay** settings made under the **[edit routing-instances routing-instance-name protocols mvpn hot-root-standby]** hierarchy.

```
Instance: VPNA Family: INET
```

```
Group: 227.1.1.1
Source: 18.1.1.2/32
Upstream rpf interface list:
    vt-2/0/10.1000 (P)
        Session Id: 0x156 Session Status: Up
        Min-rate: 10000 kbps Weight: 1
        Sender Id: Label 299808
    vt-2/0/10.1000 (B)
        Session Id: 0x155 Session Status: Up
        Min-rate: 10000 kbps Weight: 65533
        Sender Id: Label 299824
Downstream interface list:
    lt-2/0/10.0
Number of outgoing interfaces: 1
Session description: Unknown
Statistics: 8258 kbps, 100707 pps, 513032034 packets
RPF Next-hop ID: 803
Next-hop ID: 1048580
Upstream protocol: MVPN
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 01:24:55
```

#### show multicast route extensive (PIM NSR support for VXLAN on master Routing Engine)

```
user@host> show multicast route extensive
Instance: master Family: INET
```

```
Group: 233.252.0.1
Source: 10.3.3.3/32
```

```

Upstream interface: ge-3/1/2.0
Downstream interface list:
  -(593)
Number of outgoing interfaces: 1
Session description: Organizational Local Scope
Statistics: 0 kbps, 0 pps, 27 packets
Next-hop ID: 1048576
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding (Forwarding state is set as 'Forwarding' in
master RE.)
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:06:38

```

```

Group: 233.252.0.1
Source: 10.2.1.4/32
Upstream interface: local
Downstream interface list:
  ge-3/1/2.0
Number of outgoing interfaces: 1
Session description: Organizational Local Scope
Statistics: 0 kbps, 0 pps, 86 packets
Next-hop ID: 1048575
Upstream protocol: PIM
Route state: Active
Forwarding state: Forwarding (Forwarding state is set as 'Forwarding' in
master RE.)
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:07:45

```

```

Instance: master Family: INET6

```

#### show multicast route extensive (PIM NSR support for VXLAN on backup Routing Engine)

```

user@host> show multicast route extensive
Instance: master Family: INET

```

```

Group: 233.252.0.1
Source: 10.3.3.3/32
Upstream interface: ge-3/1/2.0
Number of outgoing interfaces: 0
Session description: Organizational Local Scope
Forwarding statistics are not available
Next-hop ID: 0
Upstream protocol: PIM
Route state: Active
Forwarding state: Pruned (Forwarding state is set as 'Pruned' in backup RE.)

Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:06:46

```

```

Group: 233.252.0.1
Source: 10.2.1.4/32
Upstream interface: local
Number of outgoing interfaces: 0
Session description: Organizational Local Scope
Forwarding statistics are not available
Next-hop ID: 0

```

```
Upstream protocol: PIM
Route state: Active
Forwarding state: Pruned (Forwarding state is set as 'Pruned' in backup RE.)
```

```
Cache lifetime/timeout: forever
Wrong incoming interface notifications: 0
Uptime: 00:07:54
```

```
Instance: master Family: INET6
```

#### show multicast route extensive (PIM NSR support for VXLAN on backup Routing Engine)

```
user@host> show multicast route extensive
```

```
Instance: master Family: INET
```

```
Group: 233.252.0.1
```

```
Source: 10.3.3.3/32
```

```
Upstream interface: ge-3/1/2.0
```

```
Downstream interface list:
```

```
-(593)
```

```
Number of outgoing interfaces: 1
```

```
Session description: Organisational Local Scope
```

```
Statistics: 0 kbps, 0 pps, 0 packets
```

```
Next-hop ID: 1048576
```

```
Upstream protocol: PIM
```

```
Route state: Active
```

```
Forwarding state: Forwarding (Forwarding state is set as 'Forwarding' in
backup RE.)
```

```
Cache lifetime/timeout: forever
```

```
Wrong incoming interface notifications: 0
```

```
Uptime: 00:06:38
```

```
Group: 233.252.0.1
```

```
Source: 10.2.1.4/32
```

```
Upstream interface: local
```

```
Downstream interface list:
```

```
ge-3/1/2.0
```

```
Number of outgoing interfaces: 1
```

```
Session description: Organisational Local Scope
```

```
Statistics: 0 kbps, 0 pps, 0 packets
```

```
Next-hop ID: 1048575
```

```
Upstream protocol: PIM
```

```
Route state: Active
```

```
Forwarding state: Forwarding (Forwarding state is set as 'Forwarding' in
backup RE.)
```

```
Cache lifetime/timeout: forever
```

```
Wrong incoming interface notifications: 0
```

```
Uptime: 00:07:45
```

```
Instance: master Family: INET6
```

## show multicast rpf

<b>List of Syntax</b>	<a href="#">Syntax on page 1867</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1867</a>
<b>Syntax</b>	<pre>show multicast rpf &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;prefix&gt; &lt;summary&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show multicast rpf &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;prefix&gt; &lt;summary&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display information about multicast reverse-path-forwarding (RPF) calculations.
<b>Options</b>	<p><b>none</b>—Display RPF calculation information for all supported address families.</p> <p><b>inet   inet6</b>—(Optional) Display the RPF calculation information for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information about multicast RPF calculations for a specific multicast instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>prefix</b>—(Optional) Display the RPF calculation information for the specified prefix.</p> <p><b>summary</b>—(Optional) Display a summary of all multicast RPF information.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show multicast rpf on page 1868</a> <a href="#">show multicast rpf inet6 on page 1869</a> <a href="#">show multicast rpf prefix on page 1870</a> <a href="#">show multicast rpf summary on page 1870</a>

**Output Fields** Table 127 on page 1868 describes the output fields for the **show multicast rpf** command. Output fields are listed in the approximate order in which they appear.

*Table 127: show multicast rpf Output Fields*

Field Name	Field Description
Instance	Name of the routing instance. (Displayed when multicast is configured within a routing instance.)
Source prefix	Prefix and length of the source as it exists in the multicast forwarding table.
Protocol	How the route was learned.
Interface	Upstream RPF interface.  <b>NOTE:</b> The displayed interface information does not apply to bidirectional PIM RP addresses. This is because the <b>show multicast rpf</b> command does not take into account equal-cost paths or the designated forwarder. For accurate upstream RPF interface information, always use the <b>show pim join extensive</b> command when bidirectional PIM is configured.
Neighbor	Upstream RPF neighbor.  <b>NOTE:</b> The displayed neighbor information does not apply to bidirectional PIM. This is because the <b>show multicast rpf</b> command does not take into account equal-cost paths or the designated forwarder. For accurate upstream RPF neighbor information, always use the <b>show pim join extensive</b> command when bidirectional PIM is configured.

## Sample Output

### show multicast rpf

```

user@host> show multicast rpf

Multicast RPF table: inet.0, 12 entries

0.0.0.0/0
  Protocol: Static

10.255.14.132/32
  Protocol: Direct
  Interface: lo0.0

10.255.245.91/32
  Protocol: IS-IS
  Interface: so-1/1/1.0
  Neighbor: 192.168.195.21

172.16.0.1/32
Inactive172.16.0.0/12
Protocol: Static
Interface: fxp0.0

```

```

Neighbor: 192.168.14.254

192.168.0.0/16
Protocol: Static
Interface: fxp0.0
Neighbor: 192.168.14.254

192.168.14.0/24
Protocol: Direct
Interface: fxp0.0

192.168.14.132/32
Protocol: Local

192.168.195.20/30
Protocol: Direct
Interface: so-1/1/1.0

192.168.195.22/32
Protocol: Local

192.168.195.36/30
Protocol: IS-IS
Interface: so-1/1/1.0
Neighbor: 192.168.195.21

```

### show multicast rpf inet6

```

user@host> show multicast rpf inet6

Multicast RPF table: inet6.0, 12 entries

::10.255.14.132/128
  Protocol: Direct
  Interface: lo0.0

::10.255.245.91/128
  Protocol: IS-IS
  Interface: so-1/1/1.0
  Neighbor: 2001:db8::2a0:a5ff:fe28:2e8c

::192.168.195.20/126
  Protocol: Direct
  Interface: so-1/1/1.0

::192.168.195.22/128
  Protocol: Local

::192.168.195.36/126
  Protocol: IS-IS
  Interface: so-1/1/1.0
  Neighbor: 2001:db8::2a0:a5ff:fe28:2e8c

::192.168.195.76/126
  Protocol: Direct
  Interface: fe-2/2/0.0

::192.168.195.77/128
  Protocol: Local

```

```

2001:db8::/64
Protocol: Direct
Interface: so-1/1/1.0

2001:db8::290:69ff:fe0c:993a/128
Protocol: Local

2001:db8::2a0:a5ff:fe12:84f/128
Protocol: Direct
Interface: lo0.0

2001:db8::2/128
Protocol: PIM

2001:db8::d/128
Protocol: PIM

```

#### show multicast rpf prefix

```

user@host> show multicast rpf 2001:db8::/16

Multicast RPF table: inet6.0, 13 entries

2001:db8::2/128
    Protocol: PIM

2001:db8::d/128
    Protocol: PIM

...

```

#### show multicast rpf summary

```

user@host> show multicast rpf summary

Multicast RPF table: inet.0, 16 entries
Multicast RPF table: inet6.0, 12 entries

```

## show multicast scope

<b>List of Syntax</b>	<a href="#">Syntax on page 1871</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1871</a>
<b>Syntax</b>	<pre>show multicast scope &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show multicast scope &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display administratively scoped IP multicast information.
<b>Options</b>	<p><b>none</b>—Display standard information about administratively scoped multicast information for all supported address families in all routing instances.</p> <p><b>inet   inet6</b>—(Optional) Display scoped multicast information for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display administratively scoped information for a specific multicast instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show multicast scope on page 1872</a> <a href="#">show multicast scope inet on page 1872</a> <a href="#">show multicast scope inet6 on page 1872</a>
<b>Output Fields</b>	<p><a href="#">Table 128 on page 1871</a> describes the output fields for the <b>show multicast scope</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 128: show multicast scope Output Fields*

Field Name	Field Description
Scope name	Name of the multicast scope.

Table 128: show multicast scope Output Fields (continued)

Field Name	Field Description
Group Prefix	Range of multicast groups that are scoped.
Interface	Interface that is the boundary of the administrative scope.
Resolve Rejects	Number of kernel resolve rejects.

## Sample Output

### show multicast scope

```

user@host> show multicast scope

Scope name      Group Prefix      Interface      Resolve
233-net         233.252.0.0/16    fe-0/0/0.1     Rejects
local          233.252.0.1/16    fe-0/0/0.1     0
local          2001:db8::/16      fe-0/0/0.1     0
larry          2001:db8::1234/128 fe-0/0/0.1     0

```

### show multicast scope inet

```

user@host> show multicast scope inet

Scope name      Group Prefix      Interface      Resolve
233-net         233.252.0.0/16    fe-0/0/0.1     Rejects
local          233.252.0.0/16    fe-0/0/0.1     0

```

### show multicast scope inet6

```

user@host> show multicast scope inet6

Scope name      Group Prefix      Interface      Resolve
local          2001:db8::/16      fe-0/0/0.1     Rejects
larry          2001:db8::1234/128 fe-0/0/0.1     0

```

## show multicast snooping next-hops

**Syntax** show multicast snooping next-hops  
 <brief | detail>  
 <identifier *next-hop-ID*>  
 <inet>  
 <inet6>  
 <logical-system *logical-system-name*>

**Release Information** Command introduced in Junos OS Release 11.2.

**Description** Display information about the IP multicast snooping next-hops.

**Options** **brief | detail**—(Optional) Display the specified level of output.

**inet**—(Optional) Display information for IPv4 multicast next hops only. If a family is not specified, both IPv4 and IPv6 results will be shown.

**inet6**—(Optional) Display information for IPv6 multicast next hops only. If a family is not specified, both IPv4 and IPv6 results will be shown.

**logical-system *logical-system-name***—(Optional) Display information about a particular logical system, or type 'all'.

**Required Privilege Level** view

**List of Sample Output** [show multicast snooping next-hops on page 1875](#)  
[show multicast snooping next-hops \(IGMP snooping enabled on a VPLS\) on page 1875](#)

**Output Fields** [Table 129 on page 1873](#) describes the output fields for the **show multicast snooping next-hops** command. Output fields are listed in the approximate order in which they appear.

*Table 129: show multicast snooping next-hops Output Fields*

Field Name	Field Description
Family	Protocol family for which multicast snooping next hops are displayed: <b>INET</b> or <b>INET6</b> .
Refcount	Number of cache entries that are using this next hop.
KRefcount	Kernel reference count for the next hop.
Downstream interface	Interface names associated with each multicast next-hop ID.

*Table 129: show multicast snooping next-hops Output Fields (continued)*

Field Name	Field Description
<b>Nexthop Id</b>	Identifier for the next-hop.  <b>NOTE:</b> To see the next-hop ID for a given PE mesh group, <b>igmp-snooping</b> must be enabled for the relevant VPLS routing instance. (Junos OS creates a default CE and VE mesh groups for each VPLS routing instance. The next hop of the VE mesh group is the set of VE mesh-group interfaces of the remaining PEs in the same VPLS routing instance.)

---

## Sample Output

### show multicast snooping next-hops

```

user@host> show multicast snooping next-hops
Family: INET
ID          Refcount KRefCount Downstream interface Nexthop Id
1048574      4          1 ge-0/1/0.1000
               ge-0/1/2.1000
               ge-0/1/3.1000

1048574      4          1 ge-0/1/0.1000-(2000)
               1048575
               1048576

1048575      2          0 ge-0/1/2.1000-(2001)
               ge-0/1/3.1000-(2002)

1048576      2          0 lsi.1048578-(2003)
               lsi.1048579-(2004)

```

### show multicast snooping next-hops (IGMP snooping enabled on a VPLS)

In this example, ID 1048585 is the VE next-hop ID created for the VE next hop that is holding VE interfaces for the routing instance. It only appears if igmp snooping is enabled on the VPLS.

```

user@host> show multicast snooping next-hops
Family: INET
ID          Refcount KRefCount Downstream interface Addr
1048588      2          1 1048585
1048589      2          1 1048585
               ge-0/0/5.100
0            2          0 ge-0/0/0.100
               ge-0/0/1.100

1048583      2          1 local
1048587      2          1 local
               1048585
1048586      4          2 local
               1048585
               ge-0/0/5.100
1048584      2          1 local
               ge-0/0/5.100
1048582      6          2 ge-0/0/5.100
0            2          0 ge-0/0/0.200
               ge-0/0/2.200
0            2          0 ge-0/0/0.300
               ge-0/0/2.300
0            1          0 vt-0/0/10.17825792
               vt-0/0/10.17825793
0            1          0 vt-0/0/10.1048576
               vt-0/0/10.1048578
1048585      5          0 vt-0/0/10.1048577
               vt-0/0/10.1048579
0            1          0 vt-0/0/10.34603008
               vt-0/0/10.34603009

```

## show multicast sessions

---

**List of Syntax**    [Syntax on page 1876](#)  
                         [Syntax \(EX Series Switch and the QFX Series\) on page 1876](#)

**Syntax**    show multicast sessions  
              <brief | detail | extensive>  
              <logical-system (all | *logical-system-name*)>  
              <*regular-expression*>

**Syntax (EX Series Switch and the QFX Series)**    show multicast sessions  
                         <brief | detail | extensive>  
                         <*regular-expression*>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              Command introduced in Junos OS Release 11.3 for the QFX Series.  
                              Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Display information about announced IP multicast sessions.



**NOTE:** On all SRX Series devices, only 100 packets can be queued during pending (S, G) route. However, when multiple multicast sessions enter the route resolve process at the same time, buffer resources are not sufficient to queue 100 packets for each session.

---

**Options**    **none**— Display standard information about all multicast sessions for all routing instances.  
  
              **brief | detail | extensive**—(Optional) Display the specified level of output.  
  
              **logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.  
  
              ***regular-expression***—(Optional) Display information about announced sessions that match a UNIX-style regular expression.

**Required Privilege Level**    view

**List of Sample Output**    [show multicast sessions on page 1878](#)  
                                  [show multicast sessions regular-expression detail on page 1878](#)

**Output Fields**    [Table 130 on page 1877](#) describes the output fields for the **show multicast sessions** command. Output fields are listed in the approximate order in which they appear.

*Table 130: show multicast sessions Output Fields*

Field Name	Field Description
<i>session-name</i>	Name of the known announced multicast sessions.

---

## Sample Output

### show multicast sessions

```
user@host> show multicast sessions
1-Department of Biological Sciences, LSU
...
Monterey Bay - DockCam
Monterey Bay - JettyCam
Monterey Bay - StandCam
Monterey DockCam
Monterey DockCam / ROV cam
...
NASA TV (MPEG-1)
...
UO Broadcast - NASA Videos - 25 Years of Progress
UO Broadcast - NASA Videos - Journey through the Solar System
UO Broadcast - NASA Videos - Life in the Universe
UO Broadcast - NASA Videos - Nasa and the Airplane
UO Broadcasts OPB's Oregon Story
UO DOD News Clips
UO Medical Management of Biological Casualties (1)
UO Medical Management of Biological Casualties (2)
UO Medical Management of Biological Casualties (3)
...
376 active sessions.
```

### show multicast sessions regular-expression detail

```
user@host> show multicast sessions "NASA TV" detail
SDP Version: 0  Originated by: -@10.223.83.33
  Session: NASA TV (MPEG-1)
  Description: NASA television in MPEG-1 format, provided by Private University.
  Please contact the UO if you have problems with this feed.
  Email: Your Name Here <multicast@lists.private.edu>
  Phone: Your Name Here <888/555-1212>
Bandwidth: AS:1000
Start time: permanent
Stop time: none
Attribute: type:broadcast
Attribute: tool:IP/TV Content Manager 3.4.14
Attribute: live:capture:1
Attribute: x-iptv-capture:mp1s
Media: video 54302 RTP/AVP 32 31 96 97
Connection Data: 233.252.0.45 ttl 127
Attribute: quality:8
Attribute: framerate:30
Attribute: rtpmap:96 WBIH/90000
Attribute: rtpmap:97 MP4V-ES/90000
Attribute: x-iptv-svr:video 10.223.91.191 live
Attribute: fntp:32 type=mpeg1
Media: audio 28848 RTP/AVP 14 0 96 3 5 97 98 99 100 101 102 10 11 103 104 105 106
  Connection Data: 224.2.145.37 ttl 127
Attribute: rtpmap:96 X-WAVE/8000
Attribute: rtpmap:97 L8/8000/2
Attribute: rtpmap:98 L8/8000
Attribute: rtpmap:99 L8/22050/2
Attribute: rtpmap:100 L8/22050
Attribute: rtpmap:101 L8/11025/2
Attribute: rtpmap:102 L8/11025
```

Attribute: rtpmap:103 L16/22050/2  
Attribute: rtpmap:104 L16/22050

1 matching sessions.

## show multicast snooping route

---

**Syntax**    show multicast snooping route  
              <regexp>  
              <active>  
              <all>  
              <bridge-domain *bridge-domain-name*>  
              <brief >  
              <control>  
              <data>  
              <detail >  
              <extensive>  
              <group *group*>  
              <inactive>  
              <inet>  
              <inet6>  
              <instance *instance-name*>  
              <logical-system *logical-system-name*>  
              <mesh-group *mesh-group-name*>  
              <qualified-vlan *vlan-id*>  
              <source-prefix *source-prefix*>  
              <vlan *vlan-id*>

**Release Information**    Command introduced in Junos OS Release 8.5.  
                              Support for **control**, **data**, **qualified-vlan** and **vlan** options introduced in Junos OS Release 13.3 for EX Series switches.

**Description**    Display the entries in the IP multicast snooping forwarding table. You can display some of this information with the **show route table inet.1** command.

**Options**    **none**—Display standard information about all entries in the multicast snooping table for all virtual switches and all bridge domains.

**active | all | inactive** —(Optional) Display all active entries, all entries, or all inactive entries, respectively, in the multicast snooping table.

**bridge-domain *bridge-domain***—(Optional) Display the entries for a particular bridge domain.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**control**—(Optional) Display control route entries.

**data**—(Optional) Display data route entries.

**group *group***—(Optional) Display the entries for a particular group.

**inet**—(Optional) Display IPv4 information.

**inet6**—(Optional) Display IPv6 information.

**instance *instance-name***—(Optional) Display the entries for a multicast instance.

**logical-system *logical-system-name***—(Optional) Display information about a particular logical system, or type 'all'.

**mesh-group *mesh-group-name***—(Optional) Display the entries for a particular mesh group.

**qualified-vlan *vlan-id***—(Optional) Display the entries for a particular qualified VLAN.

**regexp**—(Optional) Display information about the multicast forwarding table entries that match a UNIX-style regular expression.

**source-prefix *source-prefix***—(Optional) Display the entries for a particular source prefix.

**vlan *vlan-id***—(Optional) Display the entries for a particular VLAN.

**Required Privilege Level** view

**List of Sample Output** [show multicast snooping route bridge-domain on page 1882](#)  
[show multicast snooping route instance vs on page 1882](#)  
[show multicast snooping route extensive on page 1882](#)

**Output Fields** [Table 131 on page 1881](#) describes the output fields for the **show multicast snooping route** command. Output fields are listed in the approximate order in which they appear.

*Table 131: show multicast snooping route Output Fields*

Field Name	Field Description	Level of Output
<b>Nexthop Bulking</b>	Displays whether next-hop bulk updating is <b>ON</b> or <b>OFF</b> (only for routing-instance type of <b>virtual switch</b> or <b>vpls</b> ).	All levels
<b>Family</b>	IPv4 address family ( <b>INET</b> ) or IPv6 address family ( <b>INET6</b> ).	All levels
<b>Group</b>	Group address.	All levels
<b>Source</b>	Prefix and length of the source as it is in the multicast forwarding table. For (*G) entries, this field is set to "*".	All levels
<b>Routing-instance</b>	Name of the routing instance to which this routing information applies. (Displayed when multicast is configured within a routing instance.)	All levels
<b>Learning Domain</b>	Name of the learning domain to which this routing information applies.	<b>detail extensive</b>
<b>Statistics</b>	Rate at which packets are being forwarded for this source and group entry (in Kbps and pps), and number of packets that have been forwarded to this prefix.	<b>detail extensive</b>
<b>Next-hop ID</b>	Next-hop identifier of the prefix. The identifier is returned by the router's Packet Forwarding Engine and is also displayed in the output of the <b>show multicast nexthops</b> command.	<b>detail extensive</b>
<b>Route state</b>	Whether the group is <b>Active</b> or <b>Inactive</b> .	<b>extensive</b>

Table 131: show multicast snooping route Output Fields (continued)

Field Name	Field Description	Level of Output
Forwarding state	Whether the prefix is <b>Pruned</b> or <b>Forwarding</b> .	extensive
Cache lifetime/timeout	Number of seconds until the prefix is removed from the multicast forwarding table. A value of <b>never</b> indicates a permanent forwarding entry.	extensive

## Sample Output

### show multicast snooping route bridge-domain

```

user@host> show multicast snooping route bridge-domain br-dom-1 extensive
Family: INET

Group: 232.1.1.1
Source: 192.168.3.100/32
Downstream interface list:
    ge-0/1/0.200
Statistics: 0 kbps, 0 pps, 1 packets
Next-hop ID: 1048577
Route state: Active
Forwarding state: Forwarding
Cache lifetime/timeout: 240 seconds

```

### show multicast snooping route instance vs

```

user@host> show multicast snooping route instance vs
Nexthop Bulking: ON

Family: INET

Group: 224.0.0.0
    Bridge-domain: vsid500

Group: 225.1.0.1
    Bridge-domain: vsid500
    Downstream interface list: vsid500
        ge-0/3/8.500 ge-1/1/9.500 ge1/2/5.500

```

### show multicast snooping route extensive

```

user@host> show multicast snooping route extensive inet6 group ff03::1
Nexthop Bulking: OFF

Family: INET6
Group: ff03::1/128
Source: ::
Bridge-domain: BD-1
Mesh-group: __all_ces__
Downstream interface list:
    ae0.1 -(562) 1048576
Statistics: 2697 kbps, 3875 pps, 758819039 packets
Next-hop ID: 1048605
Route state: Active
Forwarding state: Forwarding

```

```
Group: ff03::1/128
Source: 6666::2/128
Bridge-domain: BD-1
Mesh-group: __all_ces__
Downstream interface list:
    ae0.1 -(562) 1048576
Statistics: 0 kbps, 0 pps, 0 packets
Next-hop ID: 1048605
Route state: Active
Forwarding state: Forwarding
```

## show multicast statistics

<b>Syntax</b>	<pre>show multicast statistics &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p><b>interface</b> option introduced in Junos OS Release 16.1 for the MX Series.</p>
<b>Description</b>	Display IP multicast statistics.
<b>Options</b>	<p><b>none</b>—Display multicast statistics for all supported address families for all routing instances.</p> <p><b>inet   inet6</b>—(Optional) Display multicast statistics for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display statistics for a specific routing instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display statistics for a specific interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Additional Information</b>	The input and output interface multicast statistics are consistent, but not timely. They are constructed from the forwarding statistics, which are gathered at 30-second intervals. Therefore, the output from this command always lags the true count by up to 30 seconds.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><a href="#">clear multicast statistics on page 1752</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show multicast statistics on page 1887</a></p> <p><a href="#">show multicast statistics interface on page 1887</a></p>
<b>Output Fields</b>	<a href="#">Table 132 on page 1884</a> describes the output fields for the <b>show multicast statistics</b> command. Output fields are listed in the approximate order in which they appear.

Table 132: show multicast statistics Output Fields

Field Name	Field Description
Family	Protocol family for which multicast statistics are displayed: <b>INET</b> or <b>INET6</b> .

Table 132: show multicast statistics Output Fields (continued)

Field Name	Field Description
<b>Interface</b>	Name of the interface for which statistics are being reported.
<b>Routing Protocol</b>	Primary multicast protocol on the interface: <b>PIM</b> , <b>DVMRP for INET</b> , or <b>PIM for INET6</b> .
<b>Mismatch</b>	Number of multicast packets that did not arrive on the correct upstream interface.
<b>Kernel Resolve</b>	Number of resolve requests processed by the primary multicast protocol on the interface.
<b>Resolve No Route</b>	Number of resolve requests that were ignored because there was no route to the source.
<b>In Kbytes</b>	Total accumulated incoming packets (in KB) since the last time the <b>clear multicast statistics</b> command was issued.
<b>Out Kbytes</b>	Total accumulated outgoing packets (in KB) since the last time the <b>clear multicast statistics</b> command was issued.
<b>Mismatch error</b>	Number of mismatches that were ignored because of internal errors.
<b>Mismatch No Route</b>	Number of mismatches that were ignored because there was no route to the source.
<b>Routing Notify</b>	Number of times that the multicast routing system has been notified of a new multicast source by a multicast routing protocol .
<b>Resolve Error</b>	Number of resolve requests that were ignored because of internal errors.
<b>In Packets</b>	Total number of incoming packets since the last time the <b>clear multicast statistics</b> command was issued.
<b>Out Packets</b>	Total number of outgoing packets since the last time the <b>clear multicast statistics</b> command was issued.
<b>Resolve requests on interfaces not enabled for multicast <i>n</i></b>	Number of resolve requests on interfaces that are not enabled for multicast that have accumulated since the <b>clear multicast statistics</b> command was last issued.
<b>Resolve requests with no route to source <i>n</i></b>	Number of resolve requests with no route to the source that have accumulated since the <b>clear multicast statistics</b> command was last issued.
<b>Routing notifications on interfaces not enabled for multicast <i>n</i></b>	Number of routing notifications on interfaces not enabled for multicast that have accumulated since the <b>clear multicast statistics</b> command was last issued.
<b>Routing notifications with no route to source <i>n</i></b>	Number of routing notifications with no route to the source that have accumulated since the <b>clear multicast statistics</b> command was last issued.
<b>Interface Mismatches on interfaces not enabled for multicast <i>n</i></b>	Number of interface mismatches on interfaces not enabled for multicast that have accumulated since the <b>clear multicast statistics</b> command was last issued.

*Table 132: show multicast statistics Output Fields (continued)*

Field Name	Field Description
<b>Group Membership on interfaces not enabled for multicast</b> <i>n</i>	Number of group memberships on interfaces not enabled for multicast that have accumulated since the <b>clear multicast statistics</b> command was last issued.

## Sample Output

### show multicast statistics

```

user@host> show multicast statistics
Address family: INET
Interface: fe-0/0/0
  Routing Protocol:      PIM  Mismatch error:      0
  Mismatch:              0   Mismatch No Route:    0
  Kernel Resolve:        10   Routing Notify:       0
  Resolve No Route:      0   Resolve Error:        0
  In Kbytes:              4641 In Packets:            50454
  Out Kbytes:             0   Out Packets:          0
Interface: so-0/1/1.0
  Routing Protocol:      PIM  Mismatch error:      0
  Mismatch:              0   Mismatch No Route:    0
  Kernel Resolve:        0   Routing Notify:       0
  Resolve No Route:      0   Resolve Error:        0
  In Kbytes:             0   In Packets:            0
  Out Kbytes:            4641 Out Packets:          50454

Resolve requests on interfaces not enabled for multicast 0
Resolve requests with no route to source 0
Routing notifications on interfaces not enabled for multicast 0
Routing notifications with no route to source 0
Interface Mismatches on interfaces not enabled for multicast 0
Group Membership on interfaces not enabled for multicast 25

Address family: INET6
Interface: fe-0/0/0.0
  Routing Protocol:      PIM  Mismatch error:      0
  Mismatch:              0   Mismatch No Route:    0
  Kernel Resolve:        0   Routing Notify:       0
  Resolve No Route:      0   Resolve Error:        0
  In Kbytes:             0   In Packets:            0
  Out Kbytes:            0   Out Packets:          0
Interface: so-0/1/1.0
  Routing Protocol:      PIM  Mismatch error:      0
  Mismatch:              0   Mismatch No Route:    0
  Kernel Resolve:        0   Routing Notify:       0
  Resolve No Route:      0   Resolve Error:        0
  In Kbytes:             0   In Packets:            0
  Out Kbytes:            0   Out Packets:          0

Resolve requests on interfaces not enabled for multicast 0
Resolve requests with no route to source 0
Routing notifications on interfaces not enabled for multicast 0
Routing notifications with no route to source 0
Interface Mismatches on interfaces not enabled for multicast 0
Group Membership on interfaces not enabled for multicast 0

```

### show multicast statistics interface

```

user@host> show multicast statistics interface vt-3/0/10.2097152
Instance: master Family: INET
Interface: vt-3/0/10.2097152
  Routing protocol:      PIM  Mismatch error:      0
  Mismatch:              0   Mismatch no route:    0
  Kernel resolve:        0   Routing notify:       0
  Resolve no route:      0   Resolve error:        0

```

Resolve filtered:	0	Notify filtered:	0
In kbytes:	0	In packets:	0
Out kbytes:	0	Out packets:	0

## show multicast usage

<b>List of Syntax</b>	<a href="#">Syntax on page 1889</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1889</a>
<b>Syntax</b>	<pre>show multicast usage &lt;brief   detail&gt; &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show multicast usage &lt;brief   detail&gt; &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display usage information about the 10 most active Distance Vector Multicast Routing Protocol (DVMRP) or Protocol Independent Multicast (PIM) groups.
<b>Options</b>	<p><b>none</b>—Display multicast usage information for all supported address families for all routing instances.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>inet   inet6</b>—(Optional) Display usage information for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information about the most active DVMRP or PIM groups for a specific multicast instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show multicast usage on page 1890</a> <a href="#">show multicast usage brief on page 1890</a> <a href="#">show multicast usage instance on page 1890</a> <a href="#">show multicast usage detail on page 1891</a>
<b>Output Fields</b>	<p><a href="#">Table 133 on page 1890</a> describes the output fields for the <b>show multicast usage</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 133: show multicast usage Output Fields

Field Name	Field Description
<b>Instance</b>	Name of the routing instance. (Displayed when multicast is configured within a routing instance.)
<b>Group</b>	Group address.
<b>Sources</b>	Number of sources.
<b>Packets</b>	Number of packets that have been forwarded to this prefix. If one or more of the packets forwarded statistic queries fails or times out, the packets field displays <b>unavailable</b> .
<b>Bytes</b>	Number of bytes that have been forwarded to this prefix. If one or more of the packets forwarded statistic queries fails or times out, the bytes field displays <b>unavailable</b> .
<b>Prefix</b>	IP address.
<b>/len</b>	Prefix length.
<b>Groups</b>	Number of multicast groups.

## Sample Output

### show multicast usage

```

user@host> show multicast usage
Group          Sources  Packets      Bytes
233.252.0.0    1        52847      4439148
233.252.0.1    2        13450      1125530

Prefix         /len  Groups  Packets      Bytes
10.255.14.144  /32   2       66254      5561304
10.255.70.15   /32   1        43        3374...
```

### show multicast usage brief

The output for the **show multicast usage brief** command is identical to that for the **show multicast usage** command. For sample output, see [show multicast usage on page 1890](#).

### show multicast usage instance

```

user@host> show multicast usage instance VPN-A
Group          Sources  Packets      Bytes
233.252.0.254  1        5538      509496
233.252.0.39   1         13         624
233.252.0.40   1         13         624

Prefix         /len  Groups  Packets      Bytes
192.168.195.34 /32   1       5538      509496
```

```

10.255.14.30    /32  1      13          624
10.255.245.91  /32  1      13          624
...

```

#### show multicast usage detail

```

user@host> show multicast usage detail
Group          Sources Packets          Bytes
233.252.0.0    1        53159          4465356
  Source: 10.255.14.144 /32 Packets: 53159 Bytes: 4465356
233.252.0.1    2        13450          1125530
  Source: 10.255.14.144 /32 Packets: 13407 Bytes: 1122156
  Source: 10.255.70.15  /32 Packets: 43 Bytes: 3374

Prefix         /len Groups Packets          Bytes
10.255.14.144  /32  2        66566          5587512
  Group: 233.252.0.0    Packets: 53159 Bytes: 4465356
  Group: 233.252.0.1    Packets: 13407 Bytes: 1122156
10.255.70.15   /32  1         43            3374
  Group: 233.252.0.1    Packets: 43 Bytes: 3374

```

## show pim bootstrap

**List of Syntax** [Syntax on page 1892](#)  
[Syntax \(EX Series Switch and the QFX Series\) on page 1892](#)

**Syntax** show pim bootstrap  
 <instance *instance-name*>  
 <logical-system (all | *logical-system-name*)>

**Syntax (EX Series Switch and the QFX Series)** show pim bootstrap  
 <instance *instance-name*>

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
**instance** option introduced in Junos OS Release 10.0 for EX Series switches.  
 Command introduced in Junos OS Release 11.3 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** For sparse mode only, display information about Protocol Independent Multicast (PIM) bootstrap routers.

**Options** **none**—Display PIM bootstrap router information for all routing instances.

**instance *instance-name***—(Optional) Display information about bootstrap routers for a specific PIM-enabled routing instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level** view

**List of Sample Output** [show pim bootstrap on page 1893](#)  
[show pim bootstrap instance on page 1893](#)

**Output Fields** [Table 134 on page 1892](#) describes the output fields for the **show pim bootstrap** command. Output fields are listed in the approximate order in which they appear.

*Table 134: show pim bootstrap Output Fields*

Field Name	Field Description
Instance	Name of the routing instance.
BSR	Bootstrap router.
Pri	Priority of the routing device as elected to be the bootstrap router.

*Table 134: show pim bootstrap Output Fields (continued)*

Field Name	Field Description
<b>Local address</b>	Local routing device address.
<b>Pri</b>	Local routing device address priority to be elected as the bootstrap router.
<b>State</b>	Local routing device election state: <b>Candidate</b> , <b>Elected</b> , or <b>Ineligible</b> .
<b>Timeout</b>	How long until the local routing device declares the bootstrap router to be unreachable, in seconds.

## Sample Output

### show pim bootstrap

```
user@host> show pim bootstrap
Instance: PIM.master
```

BSR	Pri	Local address	Pri	State	Timeout
None	0	10.255.71.46	0	InEligible	0
2001:db8:1:1:1:0:aff:785c	34	2001:db8:1:1:1:0:aff:7c12	0	InEligible	0

### show pim bootstrap instance

```
user@host> show pim bootstrap instance VPN-A
Instance: PIM.VPN-A
```

BSR	Pri	Local address	Pri	State	Timeout
None	0	192.168.196.105	0	InEligible	0

## show pim interfaces

<b>List of Syntax</b>	<a href="#">Syntax on page 1894</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1894</a>
<b>Syntax</b>	<pre>show pim interfaces &lt;inet   inet6&gt; &lt;instance (<i>instance-name</i>   all)&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show pim interfaces &lt;inet   inet6&gt; &lt;instance (<i>instance-name</i>   all)&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Support for bidirectional PIM added in Junos OS Release 12.1.</p> <p>Support for the <b>instance all</b> option added in Junos OS Release 12.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display information about the interfaces on which Protocol Independent Multicast (PIM) is configured.
<b>Options</b>	<p><b>none</b>—Display interface information for all family addresses for the main instance.</p> <p><b>inet   inet6</b>—(Optional) Display interface information for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance (<i>instance-name</i>   all)</b>—(Optional) Display information about interfaces for a specific PIM-enabled routing instance or for all routing instances.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show pim interfaces on page 1896</a>
<b>Output Fields</b>	<p><a href="#">Table 135 on page 1894</a> describes the output fields for the <b>show pim interfaces</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 135: show pim interfaces Output Fields

Field Name	Field Description
Instance	Name of the routing instance.

Table 135: *show pim interfaces* Output Fields (continued)

Field Name	Field Description
<b>Name</b>	Interface name.
<b>State</b>	State of the interface. The state also is displayed in the <b>show interfaces</b> command.
<b>Mode</b>	<p>PIM mode running on the interface:</p> <ul style="list-style-type: none"> <li>• <b>B</b>—In bidirectional mode, multicast groups are carried across the network over bidirectional shared trees. This type of tree minimizes PIM routing state, which is especially important in networks with numerous and dispersed senders and receivers.</li> <li>• <b>S</b>—In sparse mode, routing devices must join and leave multicast groups explicitly. Upstream routing devices do not forward multicast traffic to this routing device unless this device has sent an explicit request (using a join message) to receive multicast traffic.</li> <li>• <b>Dense</b>—Unlike sparse mode, where data is forwarded only to routing devices sending an explicit request, dense mode implements a flood-and-prune mechanism, similar to DVMRP (the first multicast protocol used to support the multicast backbone). (Not supported on QFX Series.)</li> <li>• <b>Sparse-Dense</b>—Sparse-dense mode allows the interface to operate on a per-group basis in either sparse or dense mode. A group specified as <b>dense</b> is not mapped to a rendezvous point (RP). Instead, data packets destined for that group are forwarded using PIM-Dense Mode (PIM-DM) rules. A group specified as <b>sparse</b> is mapped to an RP, and data packets are forwarded using PIM-Sparse Mode (PIM-SM) rules.</li> </ul> <p>When sparse-dense mode is configured, the output includes both <b>S</b> and <b>D</b>. When bidirectional-sparse mode is configured, the output includes <b>S</b> and <b>B</b>. When bidirectional-sparse-dense mode is configured, the output includes <b>B</b>, <b>S</b>, and <b>D</b>.</p>
<b>IP</b>	Version number of the address family on the interface: <b>4</b> (IPv4) or <b>6</b> (IPv6).
<b>V</b>	PIM version running on the interface: 1 or 2.
<b>State</b>	<p>State of PIM on the interface:</p> <ul style="list-style-type: none"> <li>• <b>Active</b>—Bidirectional mode is enabled on the interface and on all PIM neighbors.</li> <li>• <b>DR</b>—Designated router.</li> <li>• <b>NotCap</b>—Bidirectional mode is not enabled on the interface. This can happen when bidirectional PIM is not configured locally, when one of the neighbors is not configured for bidirectional PIM, or when one of the neighbors has not implemented the bidirectional PIM protocol.</li> <li>• <b>NotDR</b>—Not the designated router.</li> <li>• <b>P2P</b>—Point to point.</li> </ul>
<b>NbrCnt</b>	Number of neighbors that have been seen on the interface.
<b>JoinCnt(sg)</b>	Number of (s,g) join messages that have been seen on the interface.
<b>JointCnt(*g)</b>	Number of (*g) join messages that have been seen on the interface.
<b>DR address</b>	Address of the designated router.

## Sample Output

### show pim interfaces

```
user@host> show pim interfaces
```

Stat = Status, V = Version, NbrCnt = Neighbor Count,

S = Sparse, D = Dense, B = Bidirectional,

DR = Designated Router, P2P = Point-to-point link,

Active = Bidirectional is active, NotCap = Not Bidirectional Capable

Name	Stat	Mode	IP	V	State	NbrCnt	JoinCnt(sg/*g)	DR address
ge-0/3/0.0	Up	S	4	2	NotDR,NotCap	1	0/0	40.0.0.3
ge-0/3/3.50	Up	S	4	2	DR,NotCap	1	9901/100	50.0.0.2
ge-0/3/3.51	Up	S	4	2	DR,NotCap	1	0/0	51.0.0.2
pe-1/2/0.32769	Up	S	4	2	P2P,NotCap	0	0/0	

## show pim join

**List of Syntax**    [Syntax on page 1897](#)  
                          [Syntax \(EX Series Switch and the QFX Series\) on page 1897](#)

**Syntax**    show pim join  
                  <brief | detail | extensive | summary>  
                  <bidirectional | dense | sparse>  
                  <downstream-count>  
                  <exact>  
                  <inet | inet6>  
                  <instance *instance-name*>  
                  <logical-system (all | *logical-system-name*)>  
                  <range>  
                  <rp *ip-address/prefix* | source *ip-address/prefix*>  
                  <sg | star-g>

**Syntax (EX Series Switch and the QFX Series)**    show pim join  
                  <brief | detail | extensive | summary>  
                  <dense | sparse>  
                  <exact>  
                  <inet | inet6>  
                  <instance *instance-name*>  
                  <range>  
                  <rp *ip-address/prefix* | source *ip-address/prefix*>  
                  <sg | star-g>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                          Command introduced in Junos OS Release 9.0 for EX Series switches.  
                          **summary** option introduced in Junos OS Release 9.6.  
                          **inet6** and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.  
                          Support for bidirectional PIM added in Junos OS Release 12.1.  
                          Command introduced in Junos OS Release 11.3 for the QFX Series.  
                          Multiple new filter options introduced in Junos OS Release 13.2.  
                          Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
                          **downstream-count** option introduced in Junos OS Release 16.1.  
                          Support for PIM NSR support for VXLAN added in Junos OS Release 16.2  
                          Support for RFC 5496 (via **rpf-vector**) added in Junos OS Release 17.3R1.

**Description**    Display information about Protocol Independent Multicast (PIM) groups for all PIM modes.

For bidirectional PIM, display information about PIM group ranges (\*G-range) for each active bidirectional RP group range, in addition to each of the joined (\*G) routes.

**Options**    **none**—Display the standard information about PIM groups for all supported family addresses for all routing instances.

**brief | detail | extensive | summary**—(Optional) Display the specified level of output.

**bidirectional | dense | sparse**—(Optional) Display information about PIM bidirectional mode, dense mode, or sparse and source-specific multicast (SSM) mode entries.

**downstream-count**—(Optional) Display the downstream count instead of a list.

**exact**—(Optional) Display information about only the group that exactly matches the specified group address.

**inet | inet6**—(Optional) Display PIM group information for IPv4 or IPv6 family addresses, respectively.

**instance *instance-name***—(Optional) Display information about groups for the specified PIM-enabled routing instance only.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**range**—(Optional) Address range of the group, specified as *prefix/prefix-length*.

**rp *ip-address/prefix* | source *ip-address/prefix***—(Optional) Display information about the PIM entries with a specified rendezvous point (RP) address and prefix or with a specified source address and prefix. You can omit the prefix.

**sg | star-g**—(Optional) Display information about PIM (S,G) or (\*,G) entries.

Required Privilege  
Level

view

Related  
Documentation

- [clear pim join on page 1754](#)
- *Example: Configuring Multicast-Only Fast Reroute in a PIM Domain*
- *Example: Configuring Bidirectional PIM*
- *Example: Configuring PIM State Limits*

List of Sample Output

[show pim join summary on page 1902](#)  
[show pim join \(PIM Sparse Mode\) on page 1902](#)  
[show pim join \(Bidirectional PIM\) on page 1902](#)  
[show pim join inet6 on page 1903](#)  
[show pim join inet6 star-g on page 1903](#)  
[show pim join instance <instance-name> on page 1904](#)  
[show pim join instance <instance-name> downstream-count on page 1904](#)  
[show pim join instance <instance-name> downstream-count extensive on page 1904](#)  
[show pim join detail on page 1905](#)  
[show pim join extensive \(PIM Resolve TLV for Multicast in Seamless MPLS\) on page 1905](#)  
[show pim join extensive \(PIM Sparse Mode\) on page 1906](#)  
[show pim join extensive \(Bidirectional PIM\) on page 1907](#)  
[show pim join extensive \(Bidirectional PIM with a Directly Connected Phantom RP\) on page 1908](#)  
[show pim join instance <instance-name> extensive on page 1908](#)

[show pim join extensive \(Ingress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1909](#)

[show pim join extensive \(Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1910](#)

**Output Fields** [Table 136 on page 1899](#) describes the output fields for the **show pim join** command. Output fields are listed in the approximate order in which they appear.

*Table 136: show pim join Output Fields*

Field Name	Field Description	Level of Output
<b>Instance</b>	Name of the routing instance.	<b>brief detail extensive summary none</b>
<b>Family</b>	Name of the address family: <b>inet</b> (IPv4) or <b>inet6</b> (IPv6).	<b>brief detail extensive summary none</b>
<b>Route type</b>	Type of multicast route: (S,G) or (*,G).	<b>summary</b>
<b>Route count</b>	Number of (S,G) routes and number of (*,G) routes.	<b>summary</b>
<b>R</b>	Rendezvous Point Tree.	<b>brief detail extensive none</b>
<b>S</b>	Sparse.	<b>brief detail extensive none</b>
<b>W</b>	Wildcard.	<b>brief detail extensive none</b>
<b>Group</b>	Group address.	<b>brief detail extensive none</b>
<b>Bidirectional group prefix length</b>	For bidirectional PIM, length of the IP prefix for RP group ranges.	All levels
<b>Source</b>	Multicast source: <ul style="list-style-type: none"> <li>• * (wildcard value)</li> <li>• <i>ipv4-address</i></li> <li>• <i>ipv6-address</i></li> </ul>	<b>brief detail extensive none</b>
<b>RP</b>	Rendezvous point for the PIM group.	<b>brief detail extensive none</b>
<b>Flags</b>	PIM flags: <ul style="list-style-type: none"> <li>• <b>bidirectional</b>—Bidirectional mode entry.</li> <li>• <b>dense</b>—Dense mode entry.</li> <li>• <b>rptree</b>—Entry is on the rendezvous point tree.</li> <li>• <b>sparse</b>—Sparse mode entry.</li> <li>• <b>spt</b>—Entry is on the shortest-path tree for the source.</li> <li>• <b>wildcard</b>—Entry is on the shared tree.</li> </ul>	<b>brief detail extensive none</b>

Table 136: show pim join Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Upstream interface</b>	<p>RPF interface toward the source address for the source-specific state (S,G) or toward the rendezvous point (RP) address for the non-source-specific state (*G).</p> <p>For bidirectional PIM, <b>RP Link</b> means that the interface is directly connected to a subnet that contains a phantom RP address.</p> <p>A pseudo multipoint LDP (M-LDP) interface appears on egress nodes in M-LDP point-to-multipoint LSPs with inband signaling.</p>	<b>brief detail extensive none</b>
<b>Upstream neighbor</b>	<p>Information about the upstream neighbor: <b>Direct</b>, <b>Local</b>, <b>Unknown</b>, or a specific IP address.</p> <p>For bidirectional PIM, <b>Direct</b> means that the interface is directly connected to a subnet that contains a phantom RP address.</p> <p>The multipoint LDP (M-LDP) root appears on egress nodes in M-LDP point-to-multipoint LSPs with inband signaling.</p>	<b>extensive</b>
Upstream rpf-vector	Information about the upstream Reverse Path Forwarding (RPF) vector; appears in conjunction with the <b>rpf-vector</b> command.	<b>extensive</b>
Active upstream interface	When multicast-only fast reroute (MoFRR) is configured in a PIM domain, the upstream interface for the active path. A PIM router propagates join messages on two upstream RPF interfaces to receive multicast traffic on both links for the same join request. Preference is given to two paths that do not converge to the same immediate upstream router. PIM installs appropriate multicast routes with upstream neighbors as RPF next hops with two (primary and backup) interfaces.	<b>extensive</b>
Active upstream neighbor	On the MoFRR primary path, the IP address of the neighbor that is directly connected to the active upstream interface.	<b>extensive</b>
MoFRR Backup upstream interface	<p>The MoFRR upstream interface that is used when the primary path fails.</p> <p>When the primary path fails, the backup path is upgraded to primary, and traffic is forwarded accordingly. If there are alternate paths available, a new backup path is calculated and the appropriate multicast route is updated or installed.</p>	<b>extensive</b>
MoFRR Backup upstream neighbor	IP address of the MoFRR upstream neighbor.	<b>extensive</b>

Table 136: show pim join Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Upstream state</b>	<p>Information about the upstream interface:</p> <ul style="list-style-type: none"> <li>• <b>Join to RP</b>—Sending a join to the rendezvous point.</li> <li>• <b>Join to Source</b>—Sending a join to the source.</li> <li>• <b>Local RP</b>—Sending neither join messages nor prune messages toward the RP, because this routing device is the rendezvous point.</li> <li>• <b>Local Source</b>—Sending neither join messages nor prune messages toward the source, because the source is locally attached to this routing device.</li> <li>• <b>No Prune to RP</b>—Automatically sent to RP when SPT and RPT are on the same path.</li> <li>• <b>Prune to RP</b>—Sending a prune to the rendezvous point.</li> <li>• <b>Prune to Source</b>—Sending a prune to the source.</li> </ul> <p><b>NOTE:</b> RP group range entries have <b>None</b> in the <b>Upstream state</b> field because RP group ranges do not trigger actual PIM join messages between routing devices.</p>	<b>extensive</b>
<b>Downstream neighbors</b>	<p>Information about downstream interfaces:</p> <ul style="list-style-type: none"> <li>• <b>Interface</b>—Interface name for the downstream neighbor. A pseudo PIM-SM interface appears for all IGMP-only interfaces. A pseudo multipoint LDP (Pseudo-MLDP) interface appears on ingress root nodes in M-LDP point-to-multipoint LSPs with inband signaling.</li> <li>• <b>Interface address</b>—Address of the downstream neighbor.</li> <li>• <b>State</b>—Information about the downstream neighbor: <b>join</b> or <b>prune</b>.</li> <li>• <b>Flags</b>—PIM join flags: <b>R (RPtree)</b>, <b>S (Sparse)</b>, <b>W (Wildcard)</b>, or <b>zero</b>.</li> <li>• <b>Uptime</b>—Time since the downstream interface joined the group.</li> <li>• <b>Time since last Join</b>—Time since the last join message was received from the downstream interface.</li> <li>• <b>Time since last Prune</b>—Time since the last prune message was received from the downstream interface.</li> <li>• <b>rpf-vector</b>—IP address of the RPF vector TLV .</li> </ul>	<b>extensive</b>
<b>Number of downstream interfaces</b>	Total number of outgoing interfaces for each (S,G) entry.	<b>extensive</b>
<b>Assert Timeout</b>	Length of time between assert cycles on the downstream interface. Not displayed if the assert timer is null.	<b>extensive</b>
<b>Keepalive timeout</b>	Time remaining until the downstream join state is updated (in seconds). If the downstream join state is not updated before this keepalive timer reaches zero, the entry is deleted. If there is a directly connected host, <b>Keepalive timeout</b> is <b>Infinity</b> .	<b>extensive</b>
<b>Uptime</b>	Time since the creation of (S,G) or (*G) state. The uptime is not refreshed every time a PIM join message is received for an existing (S,G) or (*G) state.	<b>extensive</b>

Table 136: show pim join Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Bidirectional accepting interfaces</b>	<p>Interfaces on the routing device that forward bidirectional PIM traffic.</p> <p>The reasons for forwarding bidirectional PIM traffic are that the interface is the winner of the designated forwarder election (<b>DF Winner</b>), or the interface is the reverse path forwarding (RPF) interface toward the RP (RPF).</p>	<b>extensive</b>

## Sample Output

### show pim join summary

```

user@host> show pim join summary
Instance: PIM.master Family: INET

Route type          Route count
(s,g)               2
(*,g)               1

Instance: PIM.master Family: INET6

```

### show pim join (PIM Sparse Mode)

```

user@host> show pim join
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.1
Source: *
RP: 10.255.14.144
Flags: sparse,rptree,wildcard
Upstream interface: Local

Group: 233.252.0.1
Source: 10.255.14.144
Flags: sparse,spt
Upstream interface: Local

Group: 233.252.0.1
Source: 10.255.70.15
Flags: sparse,spt
Upstream interface: so-1/0/0.0

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

### show pim join (Bidirectional PIM)

```

user@host> show pim join
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.1
Bidirectional group prefix length: 24
Source: *

```

```

RP: 10.10.13.2
Flags: bidirectional,rptree,wildcard
Upstream interface: ge-0/0/1.0

Group: 233.252.0.2
Bidirectional group prefix length: 24
Source: *
RP: 10.10.1.3
Flags: bidirectional,rptree,wildcard
Upstream interface: ge-0/0/1.0 (RP Link)

Group: 233.252.0.3
Bidirectional group prefix length: 24
Source: *
RP: 10.10.13.2
Flags: bidirectional,rptree,wildcard
Upstream interface: ge-0/0/1.0

Group: 233.252.0.4
Bidirectional group prefix length: 24
Source: *
RP: 10.10.1.3
Flags: bidirectional,rptree,wildcard
Upstream interface: ge-0/0/1.0 (RP Link)

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

#### show pim join inet6

```

user@host> show pim join inet6
Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 2001:db8::e000:101
Source: *
RP: ::46.0.0.13
Flags: sparse,rptree,wildcard
Upstream interface: Local

Group: 2001:db8::e000:101
Source: ::1.1.1.1
Flags: sparse
Upstream interface: unknown (no neighbor)

Group: 2001:db8::e800:101
Source: ::1.1.1.1
Flags: sparse
Upstream interface: unknown (no neighbor)

Group: 2001:db8::e800:101
Source: ::1.1.1.2
Flags: sparse
Upstream interface: unknown (no neighbor)

```

#### show pim join inet6 star-g

```

user@host> show pim join inet6 star-g
Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

```

Group: 2001:db8::e000:101
Source: *
RP: ::46.0.0.13
Flags: sparse,rptree,wildcard
Upstream interface: Local

```

#### show pim join instance <instance-name>

```

user@host> show pim join instance VPN-A
Instance: PIM.VPN-A Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

```

Group: 233.252.0.2
Source: *
RP: 10.10.47.100
Flags: sparse,rptree,wildcard
Upstream interface: Local

```

```

Group: 233.252.0.2
Source: 192.168.195.74
Flags: sparse,spt
Upstream interface: at-0/3/1.0

```

```

Group: 233.252.0.2
Source: 192.168.195.169
Flags: sparse
Upstream interface: so-1/0/1.0

```

```

Instance: PIM.VPN-A Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

#### show pim join instance <instance-name> downstream-count

```

user@host> show pim join instance VPN-A downstream-count
Instance: PIM.SML_VRF_4 Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

```

Group: 233.252.0.1
Source: *
RP: 10.11.11.6
Flags: sparse,rptree,wildcard
Upstream interface: mt-1/2/10.32813
Number of downstream interfaces: 4

```

```

Group: 233.252.0.1
Source: 10.1.1.1
Flags: sparse,spt
Upstream interface: ge-0/0/3.5
Number of downstream interfaces: 5

```

#### show pim join instance <instance-name> downstream-count extensive

```

user@host> show pim join instance VPN-A downstream-count extensive
Instance: PIM.SML_VRF_4 Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

```

Group: 233.252.0.1
Source: *
RP: 10.11.11.6

```

```

Flags: sparse,rptree,wildcard
Upstream interface: mt-1/2/10.32813
Upstream neighbor: 10.2.2.7 (assert winner)
Upstream state: Join to RP
Uptime: 02:51:41
Number of downstream interfaces: 4
Number of downstream neighbors: 4

```

```

Group: 233.252.0.1
Source: 10.1.1.1
Flags: sparse,spt
Upstream interface: ge-0/0/3.5
Upstream neighbor: 10.1.1.17
Upstream state: Join to Source, Prune to RP
Keepalive timeout: 0
Uptime: 02:51:42
Number of downstream interfaces: 5
Number of downstream neighbors: 7

```

#### show pim join detail

```

user@host> show pim join detail
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

```

Group: 233.252.0.1
Source: *
RP: 10.255.14.144
Flags: sparse,rptree,wildcard
Upstream interface: Local

```

```

Group: 233.252.0.1
Source: 10.255.14.144
Flags: sparse,spt
Upstream interface: Local

```

```

Group: 233.252.0.1
Source: 10.255.70.15
Flags: sparse,spt
Upstream interface: so-1/0/0.0

```

```

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

#### show pim join extensive (PIM Resolve TLV for Multicast in Seamless MPLS)

```

user@host> show pim join extensive
Group: 228.26.1.5
Source: 60.0.0.101
Flags: sparse,spt
Upstream interface: ge-5/0/0.1
Upstream neighbor: 10.100.1.13
Upstream state: Join to Source
Upstream rpf-vector: 10.100.20.1
Keepalive timeout: 178
Uptime: 17:44:38
Downstream neighbors:
  Interface: xe-2/0/3.1
    203.21.2.190 State: Join Flags: S Timeout: 156
    Uptime: 17:44:38 Time since last Join: 00:00:54

```

```

    rpf-vector: 10.100.20.1
    Interface: xe-2/0/2.1
    203.21.1.190 State: Join Flags: S Timeout: 156
    Uptime: 17:44:38 Time since last Join: 00:00:54
    rpf-vector: 10.100.20.2
    Number of downstream interfaces: 2
    Number of downstream neighbors: 2

```

### show pim join extensive (PIM Sparse Mode)

```

user@host> show pim join extensive
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.1
Source: *
RP: 10.255.14.144
Flags: sparse,rptree,wildcard
Upstream interface: Local
Upstream neighbor: Local
Upstream state: Local RP
Uptime: 00:03:49
Downstream neighbors:
  Interface: so-1/0/0.0
    10.111.10.2 State: Join Flags: SRW Timeout: 174
    Uptime: 00:03:49 Time since last Join: 00:01:49
  Interface: mt-1/1/0.32768
    10.10.47.100 State: Join Flags: SRW Timeout: Infinity
    Uptime: 00:03:49 Time since last Join: 00:01:49
  Number of downstream interfaces: 2

Group: 233.252.0.1
Source: 10.255.14.144
Flags: sparse,spt
Upstream interface: Local
Upstream neighbor: Local
Upstream state: Local Source, Local RP
Keepalive timeout: 344
Uptime: 00:03:49
Downstream neighbors:
  Interface: so-1/0/0.0
    10.111.10.2 State: Join Flags: S Timeout: 174
    Uptime: 00:03:49 Time since last Prune: 00:01:49
  Interface: mt-1/1/0.32768
    10.10.47.100 State: Join Flags: S Timeout: Infinity
    Uptime: 00:03:49 Time since last Prune: 00:01:49
  Number of downstream interfaces: 2

Group: 233.252.0.1
Source: 10.255.70.15
Flags: sparse,spt
Upstream interface: so-1/0/0.0
Upstream neighbor: 10.111.10.2
Upstream state: Local RP, Join to Source
Keepalive timeout: 344
Uptime: 00:03:49
Downstream neighbors:
  Interface: Pseudo-GMP
    fe-0/0/0.0 fe-0/0/1.0 fe-0/0/3.0
  Interface: so-1/0/0.0 (pruned)
    10.111.10.2 State: Prune Flags: SR Timeout: 174

```

```

    Uptime: 00:03:49 Time since last Prune: 00:01:49
    Interface: mt-1/1/0.32768
    10.10.47.100 State: Join Flags: S   Timeout: Infinity
    Uptime: 00:03:49 Time since last Prune: 00:01:49
    Number of downstream interfaces: 3

```

```

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

```

### show pim join extensive (Bidirectional PIM)

```

user@host> show pim join extensive
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.0
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.13.2
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0
  Upstream neighbor: 10.10.1.2
  Upstream state: None
  Uptime: 00:03:49
  Bidirectional accepting interfaces:
    Interface: ge-0/0/1.0      (RPF)
    Interface: lo0.0           (DF Winner)
  Number of downstream interfaces: 0

Group: 233.252.0.1
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.13.2
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0
  Upstream neighbor: 10.10.1.2
  Upstream state: None
  Uptime: 00:03:49
  Bidirectional accepting interfaces:
    Interface: ge-0/0/1.0      (RPF)
    Interface: lo0.0           (DF Winner)
  Downstream neighbors:
    Interface: lt-1/0/10.24
      10.0.24.4 State: Join   RW   Timeout: 185
    Interface: lt-1/0/10.23
      10.0.23.3 State: Join   RW   Timeout: 184
  Number of downstream interfaces: 2

Group: 233.252.0.2
  Bidirectional group prefix length: 24
  Source: *
  RP: 10.10.1.3
  Flags: bidirectional,rptree,wildcard
  Upstream interface: ge-0/0/1.0 (RP Link)
  Upstream neighbor: Direct
  Upstream state: Local RP
  Uptime: 00:03:49
  Bidirectional accepting interfaces:
    Interface: ge-0/0/1.0      (RPF)
    Interface: lo0.0           (DF Winner)
    Interface: xe-4/1/0.0      (DF Winner)

```

Number of downstream interfaces: 0

Instance: PIM.master Family: INET6  
 R = Rendezvous Point Tree, S = Sparse, W = Wildcard

### show pim join extensive (Bidirectional PIM with a Directly Connected Phantom RP)

user@host> show pim join extensive  
 Instance: PIM.master Family: INET  
 R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.0  
 Bidirectional group prefix length: 24  
 Source: \*  
 RP: 10.10.1.3  
 Flags: bidirectional,rptree,wildcard  
 Upstream interface: ge-0/0/1.0 (RP Link)  
 Upstream neighbor: Direct  
 Upstream state: Local RP  
 Uptime: 00:03:49  
 Bidirectional accepting interfaces:  
   Interface: ge-0/0/1.0 (RPF)  
   Interface: lo0.0 (DF Winner)  
   Interface: xe-4/1/0.0 (DF Winner)  
 Number of downstream interfaces: 0

### show pim join instance <instance-name> extensive

user@host> show pim join instance VPN-A extensive  
 Instance: PIM.VPN-A Family: INET  
 R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.2  
 Source: \*  
 RP: 10.10.47.100  
 Flags: sparse,rptree,wildcard  
 Upstream interface: Local  
 Upstream neighbor: Local  
 Upstream state: Local RP  
 Uptime: 00:03:49  
 Downstream neighbors:  
   Interface: mt-1/1/0.32768  
     10.10.47.101 State: Join Flags: SRW Timeout: 156  
     Uptime: 00:03:49 Time since last Join: 00:01:49  
 Number of downstream interfaces: 1

Group: 233.252.0.2  
 Source: 192.168.195.74  
 Flags: sparse,spt  
 Upstream interface: at-0/3/1.0  
 Upstream neighbor: 10.111.30.2  
 Upstream state: Local RP, Join to Source  
 Keepalive timeout: 156  
 Uptime: 00:14:52

Group: 233.252.0.2  
 Source: 192.168.195.169  
 Flags: sparse  
 Upstream interface: so-1/0/1.0  
 Upstream neighbor: 10.111.20.2

```
Upstream state: Local RP, Join to Source
Keepalive timeout: 156
Uptime: 00:14:52
```

### show pim join extensive (Ingress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show pim join extensive
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.1
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 11:27:55
  Downstream neighbors:
    Interface: Pseudo-MLDP
    Interface: lt-1/2/0.25
      10.2.5.2 State: Join Flags: S Timeout: Infinity
      Uptime: 11:27:55 Time since last Join: 11:27:55

Group: 233.252.0.2
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 11:27:41
  Downstream neighbors:
    Interface: Pseudo-MLDP

Group: 233.252.0.3
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 11:27:41
  Downstream neighbors:
    Interface: Pseudo-MLDP

Group: 233.252.0.22
  Source: 10.2.7.7
  Flags: sparse,spt
  Upstream interface: lt-1/2/0.27
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 11:27:25
  Downstream neighbors:
    Interface: Pseudo-MLDP

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 2001:db8::1:2
```

```

Source: 2001:db8::1:2:7:7
Flags: sparse,spt
Upstream interface: lt-1/2/0.27
Upstream neighbor: Direct
Upstream state: Local Source
Keepalive timeout:
Uptime: 11:27:26
Downstream neighbors:
Interface: Pseudo-MLDP

```

#### show pim join extensive (Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show pim join extensive
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 233.252.0.0
Source: *
RP: 10.1.1.1
Flags: sparse,rptree,wildcard
Upstream interface: Local
Upstream neighbor: Local
Upstream state: Local RP
Uptime: 11:31:33
Downstream neighbors:
Interface: fe-1/3/0.0
192.168.209.9 State: Join Flags: SRW Timeout: Infinity
Uptime: 11:31:33 Time since last Join: 11:31:32

Group: 233.252.0.1
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <10.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 11:31:32
Downstream neighbors:
Interface: so-0/1/3.0
192.168.92.9 State: Join Flags: S Timeout: Infinity
Uptime: 11:31:30 Time since last Join: 11:31:30
Downstream neighbors:
Interface: fe-1/3/0.0
192.168.209.9 State: Join Flags: S Timeout: Infinity
Uptime: 11:31:32 Time since last Join: 11:31:32

Group: 233.252.0.2
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <10.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 11:31:32
Downstream neighbors:
Interface: so-0/1/3.0
192.168.92.9 State: Join Flags: S Timeout: Infinity
Uptime: 11:31:30 Time since last Join: 11:31:30
Downstream neighbors:

```

```

Interface: lt-1/2/0.14
  10.1.4.4 State: Join Flags: S Timeout: 177
  Uptime: 11:30:33 Time since last Join: 00:00:33
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 11:31:32 Time since last Join: 11:31:32

Group: 233.252.0.3
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream protocol: MLDP
  Upstream interface: Pseudo MLDP
  Upstream neighbor: MLDP LSP root <10.1.1.2>
  Upstream state: Join to Source
  Keepalive timeout:
  Uptime: 11:31:32
  Downstream neighbors:
    Interface: fe-1/3/0.0
      192.168.209.9 State: Join Flags: S   Timeout: Infinity
      Uptime: 11:31:32 Time since last Join: 11:31:32

Group: 233.252.0.22
  Source: 10.2.7.7
  Flags: sparse,spt
  Upstream protocol: MLDP
  Upstream interface: Pseudo MLDP
  Upstream neighbor: MLDP LSP root <10.1.1.2>
  Upstream state: Join to Source
  Keepalive timeout:
  Uptime: 11:31:30
  Downstream neighbors:
    Interface: so-0/1/3.0
      192.168.92.9 State: Join Flags: S   Timeout: Infinity
      Uptime: 11:31:30 Time since last Join: 11:31:30

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 2001:db8::1:2
  Source: 2001:db8::1:2:7:7
  Flags: sparse,spt
  Upstream protocol: MLDP
  Upstream interface: Pseudo MLDP
  Upstream neighbor: MLDP LSP root <10.1.1.2>
  Upstream state: Join to Source
  Keepalive timeout:
  Uptime: 11:31:32
  Downstream neighbors:
    Interface: fe-1/3/0.0
      2001:db8::21f:12ff:fea5:c4db State: Join Flags: S   Timeout: Infinity

      Uptime: 11:31:32 Time since last Join: 11:31:32

```

## show pim mdt

---

<b>Syntax</b>	<code>show pim mdt instance <i>instance-name</i></code> <code>&lt;brief   detail   extensive&gt;</code> <code>data-mdt-joins</code> <code>data-mdt-limit</code> <code>inet</code> <code>inet6</code> <code>&lt;incoming   outgoing&gt;</code> <code>&lt;logical-system (all   logical-system-name)&gt;</code> <code>&lt;range&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Support for IPv6 added in Junos OS Release 17.3R1.
<b>Description</b>	Display information about Protocol Independent Multicast (PIM) default multicast distribution tree (MDT) and the data MDTs in a Layer 3 VPN environment for a routing instance.
<b>Options</b>	<p><b>instance <i>instance-name</i></b>—Display information about data-MDTs for a specific PIM-enabled routing instance.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>data-mdt-joins</b>— Show received PIM data-mdt-joins.</p> <p><b>data-mdt-limits</b>— Show received PIM data-mdt-limits.</p> <p><b>incoming   outgoing</b>—(Optional) Display incoming or outgoing multicast data tunnels, respectively.</p> <p><b>inet   inet6</b>—Display IPv4 or IPv6 multicast data tunnels.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>range</b>—(Optional) Display information about an IP address with optional prefix length representing a particular multicast group.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show pim mdt &lt;variables&gt; instance on page 1913</a> <a href="#">show pim mdt instance detail on page 1914</a> <a href="#">show pim mdt instance extensive on page 1914</a> <a href="#">show pim mdt instance incoming on page 1915</a> <a href="#">show pim mdt instance outgoing on page 1915</a> <a href="#">show pim mdt instance (SSM Mode) on page 1915</a>

**Output Fields** Table 137 on page 1913 describes the output fields for the **show pim mdt** command. Output fields are listed in the approximate order in which they appear.

*Table 137: show pim mdt Output Fields*

Field Name	Field Description	Level of Output
<b>Instance</b>	Name of the routing instance.	All levels
<b>Tunnel direction</b>	Direction the tunnel faces, from the router's perspective: <b>Outgoing</b> or <b>Incoming</b> .	All levels
<b>Tunnel mode</b>	Mode the tunnel is operating in: <b>PIM-SSM</b> or <b>PIM-ASM</b> .	All levels
<b>Default group address</b>	Default multicast group address using this tunnel.	All levels
<b>Default source address</b>	Default multicast source address using this tunnel.	All levels
<b>Default tunnel interface</b>	Default multicast tunnel interface.	All levels
<b>Default tunnel source</b>	Address used as the source address for outgoing PIM control messages.	All levels
<b>C-Group</b>	Customer-facing multicast group address using this tunnel. If you enable dynamic reuse of data MDT group addresses, more than one group address can use the same data MDT.	<b>detail</b>
<b>C-Source</b>	IP address of the multicast source in the customer's address space. If you enable dynamic reuse of data MDT group addresses, more than one source address can use the same data MDT.	<b>detail</b>
<b>P-Group</b>	Service provider-facing multicast group address using this tunnel.	<b>detail</b>
<b>Data tunnel interface</b>	Multicast data tunnel interface that set up the data-MDT tunnel.	<b>detail</b>
<b>Last known forwarding rate</b>	Last known rate, in kilobits per second, at which the tunnel was forwarding traffic.	<b>detail</b>
<b>Configured threshold rate</b>	Rate, in kilobits per second, above which a data-MDT tunnel is created and below which it is deleted.	<b>detail</b>
<b>Tunnel uptime</b>	Time that this data-MDT tunnel has existed. The format is <i>hours:minutes:seconds</i> .	<b>detail</b>

## Sample Output

### show pim mdt <variables> instance

Use this command to display MDT information for default MDT and data-MDT for IPv4 and/or IPv6 traffic. )

```
user@host> show pim mdt inet | inet6 instance VPN-A
Instance: PIM.VPN-A Family: INET
Tunnel direction: Outgoing
Tunnel mode: PIM-SM
Default group address: 224.1.1.1
Default source address: 0.0.0.0
Default tunnel interface: mt-0/0/0.32768
Default tunnel source: 0.0.0.0

C-group address   C-source address   P-group address   Data tunnel interface
227.1.1.1         18.1.1.2           228.1.1.1         mt-0/0/0.32769

Instance: PIM.VPN-A
Tunnel direction: Incoming
Tunnel mode: PIM-SM
Default group address: 224.1.1.1
Default source address: 0.0.0.0
Default tunnel interface: mt-0/0/0.1081344
Default tunnel source: 0.0.0.0

Instance: PIM.VPN-A Family: INET6
```

#### show pim mdt instance detail

```
user@host> show pim mdt instance VPN-A detail
Instance: PIM.VPN-A
Tunnel direction: Outgoing
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.32768
Default tunnel source: 192.168.7.1

C-Group: 235.1.1.2
  C-Source: 192.168.195.74
  P-Group : 228.0.0.0
  Data tunnel interface      : mt-1/1/0.32769
  Last known forwarding rate : 48 kbps (6 kbps)
  Configured threshold rate  : 10 kbps
  Tunnel uptime              : 00:00:34

Instance: PIM.VPN-A
Tunnel direction: Incoming
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.1081344
```

#### show pim mdt instance extensive

```
user@host> show pim mdt instance VPN-A extensive
Instance: PIM.VPN-A
Tunnel direction: Outgoing
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.32768
Default tunnel source: 192.168.7.1

C-Group: 235.1.1.2
  C-Source: 192.168.195.74
  P-Group : 228.0.0.0
  Data tunnel interface      : mt-1/1/0.32769
  Last known forwarding rate : 48 kbps (6 kbps)
  Configured threshold rate  : 10 kbps
  Tunnel uptime              : 00:00:41
```

```

Instance: PIM.VPN-A
Tunnel direction: Incoming
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.1081344

```

### show pim mdt instance incoming

```

user@host> show pim mdt instance VPN-A incoming
Instance: PIM.VPN-A
Tunnel direction: Incoming
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.1081344

```

### show pim mdt instance outgoing

```

user@host> show pim mdt instance VPN-A outgoing
Instance: PIM.VPN-A
Tunnel direction: Outgoing
Default group address: 239.1.1.1
Default tunnel interface: mt-1/1/0.32768
Default tunnel source: 192.168.7.1

```

C-group address	C-source address	P-group address	Data tunnel interface
235.1.1.2	192.168.195.74	228.0.0.0	mt-1/1/0.32769

### show pim mdt instance (SSM Mode)

```

user@host> show pim mdt instance vpn-a
Instance: PIM.vpn-a
Tunnel direction: Outgoing
Tunnel mode: PIM-SSM
Default group address: 232.1.1.1
Default source address: 10.255.14.216
Default tunnel interface: mt-1/3/0.32769
Default tunnel source: 192.168.7.1

```

```

Instance: PIM.vpn-a
Tunnel direction: Incoming
Tunnel mode: PIM-SSM
Default group address: 232.1.1.1
Default source address: 10.255.14.217
Default tunnel interface: mt-1/3/0.1081345

```

```

Instance: PIM.vpn-a
Tunnel direction: Incoming
Tunnel mode: PIM-SSM
Default group address: 232.1.1.1
Default source address: 10.255.14.218
Default tunnel interface: mt-1/3/0.1081345

```

## show pim mdt data-mdt-joins

---

**Syntax** `show pim mdt data-mdt-joins`  
`<logical-system (all | logical-system-name)> instance instance-name`

**Release Information** Command introduced in Junos OS Release 11.2.

**Description** In a draft-rosen Layer 3 multicast virtual private network (MVPN) configured with service provider tunnels, display the advertisements of new multicast distribution tree (MDT) group addresses cached by the provider edge (PE) routers in the specified VPN routing and forwarding (VRF) instance that is configured to use the Protocol Independent Multicast (PIM) protocol.

**Options** **instance *instance-name***—Display data MDT join packets cached by PE routers in a specific PIM instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.



**NOTE:** Draft-rosen multicast VPNs are not supported in a logical system environment even though the configuration statements can be configured under the logical-systems hierarchy.

**Required Privilege Level** view

**Related Documentation**

- *Understanding Data MDTs*
- *Example: Configuring Data MDTs and Provider Tunnels Operating in Source-Specific Multicast Mode*
- *Example: Configuring Data MDTs and Provider Tunnels Operating in Any-Source Multicast Mode*

**List of Sample Output** [show pim mdt data-mdt-joins on page 1917](#)

**Output Fields** [Table 138 on page 1917](#) describes the output fields for the **show pim mdt data-mdt-joins** command. Output fields are listed in the approximate order in which they appear.

Table 138: show pim mdt data-mdt-joins Output Fields

Field Name	Field Description
<b>C-Group</b>	IPv4 group address in the address space of the customer's VPN-specific PIM-enabled routing instance of the multicast traffic destination. This 32-bit value is carried in the C-group field of the MDT join TLV packet.
<b>C-Source</b>	IPv4 address in the address space of the customer's VPN-specific PIM-enabled routing instance of the multicast traffic source. This 32-bit value is carried in the C-source field of the MDT join TLV packet.
<b>P-Group</b>	IPv4 group address in the service provider's address space of the new data MDT that the PE router will use to encapsulate the VPN multicast traffic flow (C-Source, C-Group). This 32-bit value is carried in the P-group field of the MDT join TLV packet.
<b>P-Source</b>	IPv4 address of the PE router.
<b>Timeout</b>	Timeout, in seconds, remaining for this cache entry. When the cache entry is created, this field is set to 180 seconds. After an entry times out, the PE router deletes the entry from its cache and prunes itself off the data MDT.

## Sample Output

### show pim mdt data-mdt-joins

```

user@host show pim mdt data-mdt-joins instance VPN-A
C-Source   C-Group   P-Source   P-Group   Timeout
20.2.15.9  225.1.1.2 20.0.0.5   239.10.10.0 172
20.2.15.9  225.1.1.3 20.0.0.5   239.10.10.1 172

```

## show pim mdt data-mdt-limit

**Syntax** `show pim mdt data-mdt-limit instance instance-name`  
`<logical-system (all | logical-system-name)>`

**Release Information** Command introduced in Junos OS Release 12.2.

**Description** Display the maximum number configured and the currently active data multicast distribution trees (MDTs) for a specific VPN routing and forwarding (VRF) instance.

**Options** **instance *instance-name***—Display data MDT information for the specified VRF instance.  
**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.



**NOTE:** Draft-rosen multicast VPNs are not supported in a logical system environment even though the configuration statements can be configured under the logical-systems hierarchy.

**Required Privilege Level** view

**Related Documentation**

- [Understanding Data MDTs](#)
- [Example: Configuring Data MDTs and Provider Tunnels Operating in Source-Specific Multicast Mode](#)
- [Example: Configuring Data MDTs and Provider Tunnels Operating in Any-Source Multicast Mode](#)

**List of Sample Output** [show pim mdt data-mdt-limit on page 1919](#)

**Output Fields** [Table 139 on page 1918](#) describes the output fields for the **show pim mdt data-mdt-limit** command. Output fields are listed in the approximate order in which they appear.

*Table 139: show pim mdt data-mdt-limit Output Fields*

Field Name	Field Description
Maximum Data Tunnels	Maximum number of data MDTs created in this VRF instance. If the number is 0, no data MDTs are created for this VRF instance.
Active Data Tunnels	Active number of data MDTs in this VRF instance.

## Sample Output

### show pim mdt data-mdt-limit

```
user@host show pim mdt data-mdt-limit instance VPN-A
Maximum Data Tunnels          10
Active Data Tunnels           2
```

## show pim neighbors

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1920</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1920</a>
<b>Syntax</b>	<pre>show pim neighbors &lt;brief   detail&gt; &lt;inet   inet6&gt; &lt;instance (<i>instance-name</i>   all)&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show pim neighbors &lt;brief   detail&gt; &lt;inet   inet6&gt; &lt;instance (<i>instance-name</i>   all)&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Support for bidirectional PIM added in Junos OS Release 12.1.</p> <p>Support for the <b>instance all</b> option added in Junos OS Release 12.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p> <p>Support for RFC 5496 (via <b>rpf-vector</b>) added in Junos OS Release 17.3R1.</p>
<b>Description</b>	Display information about Protocol Independent Multicast (PIM) neighbors.
<b>Options</b>	<p><b>none</b>—(Same as <b>brief</b>) Display standard information about PIM neighbors for all supported family addresses for the main instance.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>inet   inet6</b>—(Optional) Display information about PIM neighbors for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance (<i>instance-name</i>   all)</b>—(Optional) Display information about neighbors for the specified PIM-enabled routing instance or for all routing instances.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show pim neighbors on page 1922</a> <a href="#">show pim neighbors instance on page 1922</a> <a href="#">show pim neighbors detail on page 1922</a> <a href="#">show pim neighbors detail (With BFD) on page 1923</a>

**Output Fields** Table 140 on page 1921 describes the output fields for the **show pim neighbors** command. Output fields are listed in the approximate order in which they appear.

*Table 140: show pim neighbors Output Fields*

Field Name	Field Description	Level of Output
<b>Instance</b>	Name of the routing instance.	All levels
<b>Interface</b>	Interface through which the neighbor is reachable.	All levels
<b>Neighbor addr</b>	Address of the neighboring PIM routing device.	All levels
<b>IP</b>	IP version: 4 or 6.	All levels
<b>V</b>	PIM version running on the neighbor: 1 or 2.	All levels
<b>Mode</b>	PIM mode of the neighbor: <b>Sparse</b> , <b>Dense</b> , <b>SparseDense</b> , or <b>Unknown</b> . When the neighbor is running PIM version 2, this mode is always <b>Unknown</b> .	All levels
<b>Option</b>	Can be one or more of the following: <ul style="list-style-type: none"> <li>• <b>B</b>—Bidirectional Capable.</li> <li>• <b>G</b>—Generation Identifier.</li> <li>• <b>H</b>—Hello Option Holdtime.</li> <li>• <b>L</b>—Hello Option LAN Prune Delay.</li> <li>• <b>P</b>—Hello Option DR Priority.</li> <li>• <b>T</b>—Tracking bit.</li> <li>• <b>A</b>—Join attribute; used in conjunction with <b>pim rpf-vector</b>.</li> </ul>	<b>brief</b> none
<b>Uptime</b>	Time the neighbor has been operational since the PIM process was last initialized. Starting in Junos OS release 17.3R1, <b>uptime</b> is not reset during ISSU. The time format is as follows: <b>dd:hh:mm:ss ago</b> for less than a week and <b>nwnd:hh:mm:ss ago</b> for more than a week.	All levels
<b>Address</b>	Address of the neighboring PIM routing device.	<b>detail</b>
<b>BFD</b>	Status and operational state of the Bidirectional Forwarding Detection (BFD) protocol on the interface: <b>Enabled</b> , <b>Operational state is up</b> , or <b>Disabled</b> .	<b>detail</b>
<b>Hello Option Holdtime</b>	Time for which the neighbor is available, in seconds. The range of values is 0 through 65,535.	<b>detail</b>
<b>Hello Default Holdtime</b>	Default holdtime and the time remaining if the <b>holdtime</b> option is not in the received hello message.	<b>detail</b>
<b>Hello Option DR Priority</b>	Designated router election priority. The range of values is 0 through 255.	<b>detail</b>
<b>Hello Option Join Attribute</b>	Appears in conjunction with the <b>rpf-vector</b> command. The Join attribute is included in the PIM join messages of PIM routers that can receive type 1 Encoded-Source Address.	<b>detail</b>

Table 140: show pim neighbors Output Fields (continued)

Field Name	Field Description	Level of Output
Hello Option Generation ID	9-digit or 10-digit number used to tag hello messages.	detail
Hello Option Bi-Directional PIM supported	Neighbor can process bidirectional PIM messages.	detail
Hello Option LAN Prune Delay	Time to wait before the neighbor receives prune messages, in the format <b>delay nnn ms override nnnn ms</b> .	detail
Join Suppression supported	Neighbor is capable of join suppression.	detail
Rx Join	Information about joins received from the neighbor. <ul style="list-style-type: none"> <li>• <b>Group</b>—Group addresses in the join message.</li> <li>• <b>Source</b>—Address of the source in the join message.</li> <li>• <b>Timeout</b>—Time for which the join is valid.</li> </ul>	detail

## Sample Output

### show pim neighbors

```

user@host> show pim neighbors
Instance: PIM.master
B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking bit
A = Hello Option Join Attribute

Instance: PIM.master
Interface  IP V Mode      Option      Uptime Neighbor addr
ae0.0      4 2            HPLGTA     19:01:24 20.0.0.13
ae1.0      4 2            HPLGTA     19:01:24 20.0.0.149

```

### show pim neighbors instance

```

user@host> show pim neighbors instance VPN-A
Instance: PIM.VPN-A
B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking bit

Interface      IP V Mode      Option      Uptime Neighbor addr
at-0/3/1.0     4 2            HPLG        00:07:54 10.111.30.2
mt-1/1/0.32768 4 2            HPLG        00:07:22 10.10.47.101
so-1/0/1.0     4 2            HPLG        00:07:50 10.111.20.2

```

### show pim neighbors detail

```

user@host> show pim neighbors detail

```

```

Instance: PIM.master
Interface: ae1.0

Address: 20.0.0.149, IPv4, PIM v2, sg Join Count: 0, tsg Join Count: 332
  BFD: Disabled
  Hello Option Holdtime: 105 seconds 86 remaining
  Hello Option DR Priority: 1
  Hello Option Generation ID: 853386212
  Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
                                Join Suppression supported
  Hello Option Join Attribute supported

Address: 20.0.0.150, IPv4, PIM v2, Mode: SparseDense, sg Join Count: 0, tsg
Join Count: 0
  Hello Option Holdtime: 65535 seconds
  Hello Option DR Priority: 1
  Hello Option Generation ID: 358917871
  Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
                                Join Suppression supported
  Hello Option Join Attribute supported

Interface: lo0.0

Address: 10.255.179.246, IPv4, PIM v2, Mode: SparseDense, sg Join Count:
0, tsg Join Count: 0
  Hello Option Holdtime: 65535 seconds
  Hello Option DR Priority: 1
  Hello Option Generation ID: 1997462267
  Hello Option Bi-Directional PIM supported
  Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
                                Join Suppression supported

```

### show pim neighbors detail (With BFD)

```

user@host> show pim neighbors detail
Instance: PIM.master
Interface: fe-1/0/0.0
  Address: 192.168.11.1, IPv4, PIM v2, Mode: Sparse
    Hello Option Holdtime: 65535 seconds
    Hello Option DR Priority: 1
    Hello Option Generation ID: 836607909
    Hello Option LAN Prune Delay: delay 500 ms override 2000 ms

  Address: 192.168.11.2, IPv4, PIM v2
    BFD: Enabled, Operational state is up
    Hello Default Holdtime: 105 seconds 104 remaining
    Hello Option DR Priority: 1
    Hello Option Generation ID: 1907549685
    Hello Option LAN Prune Delay: delay 500 ms override 2000 ms

Interface: fe-1/0/1.0
  Address: 192.168.12.1, IPv4, PIM v2
    BFD: Disabled
    Hello Default Holdtime: 105 seconds 80 remaining
    Hello Option DR Priority: 1
    Hello Option Generation ID: 1971554705
    Hello Option LAN Prune Delay: delay 500 ms override 2000 ms

```

## show pim rps

---

**List of Syntax**   [Syntax on page 1924](#)  
[Syntax \(EX Series Switch and the QFX Series\) on page 1924](#)

**Syntax**   `show pim rps`  
          `<brief | detail | extensive>`  
          `<group-address>`  
          `<inet | inet6>`  
          `<instance instance-name>`  
          `<logical-system (all | logical-system-name)>`

**Syntax (EX Series Switch and the QFX Series)**   `show pim rps`  
  `<brief | detail | extensive>`  
  `<group-address>`  
  `<inet | inet6>`  
  `<instance instance-name>`

**Release Information**   Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              **inet6** and **instance** options introduced in Junos OS Release 10.0 for EX Series switches.  
                              Command introduced in Junos OS Release 11.3 for the QFX Series.  
                              Support for bidirectional PIM added in Junos OS Release 12.1.  
                              Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**   Display information about Protocol Independent Multicast (PIM) rendezvous points (RPs).

**Options**   **none**—Display standard information about PIM RPs for all groups and family addresses for all routing instances.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**group-address**—(Optional) Display the RPs for a particular group. If you specify a group address, the output lists the routing device that is the RP for that group.

**inet | inet6**—(Optional) Display information for IPv4 or IPv6 family addresses, respectively.

**instance instance-name**—(Optional) Display information about RPs for a specific PIM-enabled routing instance.

**logical-system (all | logical-system-name)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level**   view

**Related Documentation**   • [Example: Configuring Bidirectional PIM](#)

**List of Sample Output** [show pim rps on page 1927](#)  
[show pim rps brief on page 1928](#)  
[show pim rps <group-address> on page 1928](#)  
[show pim rps <group-address> on page 1928](#)  
[show pim rps <group-address> \(Bidirectional PIM\) on page 1928](#)  
[show pim rps <group-address> \(PIM Dense Mode\) on page 1928](#)  
[show pim rps <group-address> \(SSM Range Without asm-override-ssm Configured\) on page 1928](#)  
[show pim rps <group-address> \(SSM Range With asm-override-ssm Configured and a Sparse-Mode RP\) on page 1928](#)  
[show pim rps <group-address> \(SSM Range With asm-override-ssm Configured and a Bidirectional RP\) on page 1929](#)  
[show pim rps instance on page 1929](#)  
[show pim rps extensive \(PIM Sparse Mode\) on page 1929](#)  
[show pim rps extensive \(Bidirectional PIM\) on page 1929](#)  
[show pim rps extensive \(PIM Anycast RP in Use\) on page 1930](#)

**Output Fields** [Table 141 on page 1925](#) describes the output fields for the **show pim rps** command. Output fields are listed in the approximate order in which they appear.

*Table 141: show pim rps Output Fields*

Field Name	Field Description	Level of Output
<b>Instance</b>	Name of the routing instance.	All levels
<b>Family or Address family</b>	Name of the address family: <b>inet</b> (IPv4) or <b>inet6</b> (IPv6).	All levels
<b>RP address</b>	Address of the rendezvous point.	All levels
<b>Type</b>	Type of RP: <ul style="list-style-type: none"> <li><b>auto-rp</b>—Address of the RP known through the Auto-RP protocol.</li> <li><b>bootstrap</b>—Address of the RP known through the bootstrap router protocol (BSR).</li> <li><b>embedded</b>—Address of the RP known through an embedded RP (IPv6).</li> <li><b>static</b>—Address of RP known through static configuration.</li> </ul>	<b>brief none</b>
<b>Holdtime</b>	How long to keep the RP active, with time remaining, in seconds.	All levels
<b>Timeout</b>	How long until the local routing device determines the RP to be unreachable, in seconds.	All levels
<b>Groups</b>	Number of groups currently using this RP.	All levels
<b>Group prefixes</b>	Addresses of groups that this RP can span.	<b>brief none</b>
<b>Learned via</b>	Address and method by which the RP was learned.	<b>detail extensive</b>

Table 141: show pim rps Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Mode</b>	The PIM mode of the RP: bidirectional or sparse.  If a sparse and bidirectional RPs are configured with the same RP address, they appear as separate entries in both formats.	All levels
<b>Time Active</b>	How long the RP has been active, in the format <i>hh:mm:ss</i> .	detail extensive
<b>Device Index</b>	Index value of the order in which Junos OS finds and initializes the interface.  For bidirectional RPs, the <b>Device Index</b> output field is omitted because bidirectional RPs do not require encapsulation and de-encapsulation interfaces.	detail extensive
<b>Subunit</b>	Logical unit number of the interface.  For bidirectional RPs, the <b>Subunit</b> output field is omitted because bidirectional RPs do not require encapsulation and de-encapsulation interfaces.	detail extensive
<b>Interface</b>	Either the encapsulation or the de-encapsulation logical interface, depending on whether this routing device is a designated router (DR) facing an RP router, or is the local RP, respectively.  For bidirectional RPs, the <b>Interface</b> output field is omitted because bidirectional RPs do not require encapsulation and de-encapsulation interfaces.	detail extensive
<b>Group Ranges</b>	Addresses of groups that this RP spans.	detail extensive <i>group-address</i>
<b>Active groups using RP</b>	Number of groups currently using this RP.	detail extensive
<b>total</b>	Total number of active groups for this RP.	detail extensive

Table 141: show pim rps Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Register State for RP</b>	<p>Current register state for each group:</p> <ul style="list-style-type: none"> <li>• <b>Group</b>—Multicast group address.</li> <li>• <b>Source</b>—Multicast source address for which the PIM register is sent or received, depending on whether this router is a designated router facing an RP router, or is the local RP, respectively:</li> <li>• <b>First Hop</b>—PIM-designated routing device that sent the Register message (the source address in the IP header).</li> <li>• <b>RP Address</b>—RP to which the Register message was sent (the destination address in the IP header).</li> <li>• <b>State</b>: <ul style="list-style-type: none"> <li>On the designated router: <ul style="list-style-type: none"> <li>• <b>Send</b>—Sending Register messages.</li> <li>• <b>Probe</b>—Sent a null register. If a Register-Stop message does not arrive in 5 seconds, the designated router resumes sending Register messages.</li> <li>• <b>Suppress</b>—Received a Register-Stop message. The designated router is waiting for the timer to resume before changing to <b>Probe</b> state.</li> </ul> </li> <li>On the RP: <ul style="list-style-type: none"> <li>• <b>Receive</b>—Receiving Register messages.</li> </ul> </li> </ul> </li> </ul>	<b>extensive</b>
<b>Anycast-PIM rpset</b>	If anycast RP is configured, the addresses of the RPs in the set.	<b>extensive</b>
<b>Anycast-PIM local address used</b>	If anycast RP is configured, the local address used by the RP.	<b>extensive</b>
<b>Anycast-PIM Register State</b>	<p>If anycast RP is configured, the current register state for each group:</p> <ul style="list-style-type: none"> <li>• <b>Group</b>—Multicast group address.</li> <li>• <b>Source</b>—Multicast source address for which the PIM register is sent or received, depending on whether this routing device is a designated router facing an RP router, or is the local RP, respectively.</li> <li>• <b>Origin</b>—How the information was obtained: <ul style="list-style-type: none"> <li>• <b>DIRECT</b>—From a local attachment</li> <li>• <b>MSDP</b>—From the Multicast Source Discovery Protocol (MSDP)</li> <li>• <b>DR</b>—From the designated router</li> </ul> </li> </ul>	<b>extensive</b>
<b>RP selected</b>	For sparse mode and bidirectional mode, the identity of the RP for the specified group address.	<i>group-address</i>

## Sample Output

### show pim rps

```

user@host> show pim rps
Instance: PIM.master

Address-family INET
RP address      Type      Mode    Holdtime Timeout Groups Group prefixes

```

```
10.100.100.100 auto-rp    sparse    150    146    0 233.252.0.0/8
                        233.252.0.1/24
10.200.200.200 auto-rp    sparse    150    146    0 233.252.0.2/4

address-family INET6
```

### show pim rps brief

The output for the **show pim rps brief** command is identical to that for the **show pim rps** command. For sample output, see [show pim rps on page 1927](#).

### show pim rps <group-address>

```
user@host> show pim rps 233.252.0.0
Instance: PIM.master
Instance: PIM.master

RP selected: 10.100.100.100
```

### show pim rps <group-address>

```
user@host> show pim rps 233.252.0.0
Instance: PIM.master
Instance: PIM.master

RP selected: 10.100.100.100
```

### show pim rps <group-address> (Bidirectional PIM)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

233.252.0.0/16
    10.4.12.75 (Bidirectional)

RP selected: 10.4.12.75
```

### show pim rps <group-address> (PIM Dense Mode)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

Dense Mode active for group 233.252.0.1
```

### show pim rps <group-address> (SSM Range Without asm-override-ssm Configured)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

Source-specific Mode (SSM) active for group 233.252.0.1
```

### show pim rps <group-address> (SSM Range With asm-override-ssm Configured and a Sparse-Mode RP)

```
user@host> show pim rps 233.252.0.1
Instance: PIM.master

Source-specific Mode (SSM) active with Sparse Mode ASM override for group
233.252.0.1
```

```

233.252.0.0/16
    10.4.12.75

RP selected: 10.4.12.75

```

### show pim rps <group-address> (SSM Range With asm-override-ssm Configured and a Bidirectional RP)

```

user@host> show pim rps 233.252.0.1
Instance: PIM.master

Source-specific Mode (SSM) active with Sparse Mode ASM override for group
233.252.0.1

233.252.0.0/16
    10.4.12.75 (Bidirectional)

RP selected: (null)

```

### show pim rps instance

```

user@host> show pim rps instance VPN-A
Instance: PIM.VPN-A
Address family INET
RP address          Type          Holdtime Timeout Groups Group prefixes
10.10.47.100        static        0      None      1 233.252.0.0/4

Address family INET6

```

### show pim rps extensive (PIM Sparse Mode)

```

user@host> show pim rps extensive
Instance: PIM.master

Family: INET
RP: 10.255.245.91
Learned via: static configuration
Time Active: 00:05:48
Holdtime: 45 with 36 remaining
Device Index: 122
Subunit: 32768
Interface: pd-6/0/0.32768
Group Ranges:
    233.252.0.0/4, 36s remaining
Active groups using RP:
    233.252.0.1

    total 1 groups active

Register State for RP:
Group          Source          FirstHop          RP Address          State          Timeout
233.252.0.1    192.168.195.78  10.255.14.132    10.255.245.91      Receive
0

```

### show pim rps extensive (Bidirectional PIM)

```

user@host> show pim rps extensive
Instance: PIM.master
Address family INET

```

```

RP: 10.10.1.3
Learned via: static configuration
Mode: Bidirectional
Time Active: 01:58:07
Holdtime: 150
Group Ranges:
    233.252.0.0/24
    233.252.0.01/24

RP: 10.10.13.2
Learned via: static configuration
Mode: Bidirectional
Time Active: 01:58:07
Holdtime: 150
Group Ranges:
    233.252.0.3/24
    233.252.0.4/24

```

#### show pim rps extensive (PIM Anycast RP in Use)

```

user@host> show pim rps extensive
Instance: PIM.master

Family: INET
RP: 10.10.10.2
Learned via: static configuration
Time Active: 00:54:52
Holdtime: 0
Device Index: 130
Subunit: 32769
Interface: pimd.32769
Group Ranges:
    233.252.0.0/4
Active groups using RP:
    233.252.0.10

    total 1 groups active

Anycast-PIM rpset:
    10.100.111.34
    10.100.111.17
    10.100.111.55

Anycast-PIM local address used: 10.100.111.1
Anycast-PIM Register State:

```

Group	Source	Origin
233.252.0.1	10.10.95.2	DIRECT
233.252.0.2	10.10.95.2	DIRECT
233.252.0.3	10.10.70.1	MSDP
233.252.0.4	10.10.70.1	MSDP
233.252.0.5	10.10.71.1	DR

```

Address family INET6

Anycast-PIM rpset:
    ab::1
    ab::2
Anycast-PIM local address used: cd::1

Anycast-PIM Register State:

```

Group	Source	Origin
-------	--------	--------

::224.1.1.1	::10.10.95.2	DIRECT
::224.1.1.2	::10.10.95.2	DIRECT
::224.20.20.1	::10.10.71.1	DR

## show pim snooping interfaces

<b>Syntax</b>	<pre>show pim snooping interfaces &lt;brief   detail&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system <i>logical-system-name</i>&gt; &lt;vlan-id <i>vlan-identifier</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 12.3 for MX Series 3D Universal Edge devices.</p> <p>Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.</p>
<b>Description</b>	Display information about PIM snooping interfaces.
<b>Options</b>	<p><b>none</b>—Display detailed information.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance &lt;instance-name&gt;</b>—(Optional) Display PIM snooping interface information for the specified routing instance.</p> <p><b>interface &lt;interface-name&gt;</b>—(Optional) Display PIM snooping information for the specified interface only.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p><b>vlan-id &lt;vlan-identifier&gt;</b>—(Optional) Display PIM snooping interface information for the specified VLAN.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>PIM Snooping for VPLS</i></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show pim snooping interfaces on page 1933</a></p> <p><a href="#">show pim snooping interfaces instance vpls1 on page 1933</a></p> <p><a href="#">show pim snooping interfaces interface &lt;interface-name&gt; on page 1934</a></p> <p><a href="#">show pim snooping interfaces vlan-id &lt;vlan-id&gt; on page 1934</a></p>
<b>Output Fields</b>	<p><a href="#">Table 142 on page 1932</a> lists the output fields for the <b>show pim snooping interface</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 142: show pim snooping interface Output Fields

Field Name	Field Description	Level of Output
Instance	Routing instance for PIM snooping.	All levels

Table 142: show pim snooping interface Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Learning-Domain</b>	Learning domain for snooping.	All levels
<b>Name</b>	Router interfaces that are part of this learning domain.	All levels
<b>State</b>	State of the interface: <b>Up</b> , or <b>Down</b> .	All levels
<b>IP-Version</b>	Version of IP used: <b>4</b> for IPv4, or <b>6</b> for IPv6.	All levels
<b>NbrCnt</b>	Number of neighboring routers connected through the specified interface.	All levels
<b>DR address</b>	IP address of the designated router.	All levels

## Sample Output

### show pim snooping interfaces

```

user@host> show pim snooping interfaces
Instance: vpls1
Learning-Domain: vlan-id 10
Name State IP-Version NbrCnt
ge-1/3/1.10 Up 4 1
ge-1/3/3.10 Up 4 1
ge-1/3/5.10 Up 4 1
ge-1/3/7.10 Up 4 1
DR address: 192.0.2.5
DR flooding is ON

Learning-Domain: vlan-id 20
Name State IP-Version NbrCnt
ge-1/3/1.20 Up 4 1
ge-1/3/3.20 Up 4 1
ge-1/3/5.20 Up 4 1
ge-1/3/7.20 Up 4 1
DR address: 192.0.2.6
DR flooding is ON

```

### show pim snooping interfaces instance vpls1

```

user@host> show pim snooping interfaces instance vpls1
Instance: vpls1

Learning-Domain: vlan-id 10
Name State IP-Version NbrCnt
ge-1/3/1.10 Up 4 1
ge-1/3/3.10 Up 4 1
ge-1/3/5.10 Up 4 1
ge-1/3/7.10 Up 4 1
DR address: 192.0.2.5
DR flooding is ON

Learning-Domain: vlan-id 20
Name State IP-Version NbrCnt

```

```

ge-1/3/1.20 Up 4 1
ge-1/3/3.20 Up 4 1
ge-1/3/5.20 Up 4 1
ge-1/3/7.20 Up 4 1
DR address: 192.0.2.6
DR flooding is ON

```

#### show pim snooping interfaces interface <interface-name>

```

user@host> show pim snooping interfaces interface ge-1/3/1.10
Instance: vpls1
Learning-Domain: vlan-id 10

Name State IP-Version NbrCnt
ge-1/3/1.10 Up 4 1
DR address: 192.0.2.5
DR flooding is ON

Learning-Domain: vlan-id 20
DR address: 192.0.2.6
DR flooding is ON

```

#### show pim snooping interfaces vlan-id <vlan-id>

```

user@host> show pim snooping interfaces vlan-id 10
Instance: vpls1
Learning-Domain: vlan-id 10

Name State IP-Version NbrCnt
ge-1/3/1.10 Up 4 1
ge-1/3/3.10 Up 4 1
ge-1/3/5.10 Up 4 1
ge-1/3/7.10 Up 4 1
DR address: 192.0.2.5
DR flooding is ON

```

## show pim snooping join

<b>Syntax</b>	show pim snooping join <brief   detail   extensive> <instance <i>instance-name</i> > <logical-system <i>logical-system-name</i> > <vlan-id <i>vlan-id</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 12.3 for MX Series 3D Universal Edge devices. Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.
<b>Description</b>	Display information about Protocol Independent Multicast (PIM) snooping joins.
<b>Options</b>	<p><b>none</b>—Display detailed information.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display PIM snooping join information for the specified routing instance.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p><b>vlan-id <i>vlan-identifier</i></b>—(Optional) Display PIM snooping join information for the specified VLAN.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>PIM Snooping for VPLS</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show pim snooping join on page 1937</a> <a href="#">show pim snooping join extensive on page 1937</a> <a href="#">show pim snooping join instance on page 1937</a> <a href="#">show pim snooping join vlan-id on page 1938</a>
<b>Output Fields</b>	Table 143 on page 1935 lists the output fields for the <b>show pim snooping join</b> command. Output fields are listed in the approximate order in which they appear.

Table 143: show pim snooping join Output Fields

Field Name	Field Description	Level of Output
Instance	Routing instance for PIM snooping.	All levels
Learning-Domain	Learning domain for PIM snooping.	All levels
Group	Multicast group address.	All levels

Table 143: show pim snooping join Output Fields (continued)

Field Name	Field Description	Level of Output
Source	Multicast source address: <ul style="list-style-type: none"> <li>• * (wildcard value)</li> <li>• &lt;ipv4-address&gt;</li> <li>• &lt;ipv6-address&gt;</li> </ul>	All levels
Flags	PIM flags: <ul style="list-style-type: none"> <li>• <b>bidirectional</b>—Bidirectional mode entry.</li> <li>• <b>dense</b>—Dense mode entry.</li> <li>• <b>rptree</b>—Entry is on the rendezvous point tree.</li> <li>• <b>sparse</b>—Sparse mode entry.</li> <li>• <b>spt</b>—Entry is on the shortest-path tree for the source.</li> <li>• <b>wildcard</b>—Entry is on the shared tree.</li> </ul>	All levels
Upstream state	Information about the upstream interface: <ul style="list-style-type: none"> <li>• <b>Join to RP</b>—Sending a join to the rendezvous point.</li> <li>• <b>Join to Source</b>—Sending a join to the source.</li> <li>• <b>Local RP</b>—Sending neither join messages nor prune messages toward the RP, because this router is the rendezvous point.</li> <li>• <b>Local Source</b>—Sending neither join messages nor prune messages toward the source, because the source is locally attached to this routing device.</li> <li>• <b>Prune to RP</b>—Sending a prune to the rendezvous point.</li> <li>• <b>Prune to Source</b>—Sending a prune to the source.</li> </ul> <p><b>NOTE:</b> RP group range entries have <b>None</b> in the <b>Upstream state</b> field because RP group ranges do not trigger actual PIM join messages between routers.</p>	All levels
Upstream neighbor	Information about the upstream neighbor: <b>Direct</b> , <b>Local</b> , <b>Unknown</b> , or a specific IP address. <p>For bidirectional PIM, <b>Direct</b> means that the interface is directly connected to a subnet that contains a phantom RP address.</p>	All levels
Upstream port	RPF interface toward the source address for the source-specific state (S,G) or toward the rendezvous point (RP) address for the non-source-specific state (*G). <p>For bidirectional PIM, <b>RP Link</b> means that the interface is directly connected to a subnet that contains a phantom RP address.</p>	All levels
Downstream port	Information about downstream interfaces.	<b>extensive</b>
Downstream neighbors	Address of the downstream neighbor.	<b>extensive</b>
Timeout	Time remaining until the downstream join state is updated (in seconds).	<b>extensive</b>

## Sample Output

### show pim snooping join

```

user@host> show pim snooping join
Instance: vpls1

Learning-Domain: vlan-id 10
Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.10

Learning-Domain: vlan-id 20
Group: 198.51.100.3
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 203.0.113.4, port: ge-1/3/5.20

```

### show pim snooping join extensive

```

user@host> show pim snooping join extensive
Instance: vpls1
Learning-Domain: vlan-id 10

Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.10
Downstream port: ge-1/3/1.10
Downstream neighbors:
192.0.2.2 State: Join Flags: SRW Timeout: 166

Learning-Domain: vlan-id 20
Group: 198.51.100.3
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 203.0.113.4, port: ge-1/3/5.20
Downstream port: ge-1/3/3.20
Downstream neighbors:
203.0.113.3 State: Join Flags: SRW Timeout: 168

```

### show pim snooping join instance

```

user@host> show pim snooping join instance vpls1
Instance: vpls1

Learning-Domain: vlan-id 10
Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.10

```

```
Learning-Domain: vlan-id 20
Group: 198.51.100.3
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 203.0.113.4, port: ge-1/3/5.20
```

#### show pim snooping join vlan-id

```
user@host> show pim snooping join vlan-id 10
Instance: vpls1
Learning-Domain: vlan-id 10
Group: 198.51.100.2
Source: *
Flags: sparse,rptree,wildcard
Upstream state: None
Upstream neighbor: 192.0.2.4, port: ge-1/3/5.10
```

## show pim snooping neighbors

<b>Syntax</b>	<pre>show pim snooping neighbors &lt;brief   detail&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system <i>logical-system-name</i>&gt; &lt;vlan-id <i>vlan-identifier</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 12.3 for MX Series 3D Universal Edge devices.</p> <p>Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.</p>
<b>Description</b>	Display information about Protocol Independent Multicast (PIM) snooping neighbors.
<b>Options</b>	<p><b>none</b>—Display detailed information.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display PIM snooping neighbor information for the specified routing instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display information for the specified PIM snooping neighbor interface.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p><b>vlan-id <i>vlan-identifier</i></b>—(Optional) Display PIM snooping neighbor information for the specified VLAN.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring Interface Priority for PIM Designated Router Selection</i></li> <li>• <i>Modifying the PIM Hello Interval</i></li> <li>• <i>PIM Snooping for VPLS</i></li> <li>• <a href="#">show pim neighbors on page 1920</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show pim snooping neighbors on page 1940</a></p> <p><a href="#">show pim snooping neighbors detail on page 1941</a></p> <p><a href="#">show pim snooping neighbors instance on page 1942</a></p> <p><a href="#">show pim snooping neighbors interface on page 1942</a></p> <p><a href="#">show pim snooping neighbors vlan-id on page 1943</a></p>
<b>Output Fields</b>	<p><a href="#">Table 144 on page 1940</a> lists the output fields for the <b>show pim snooping neighbors</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 144: show pim snooping neighbors Output Fields

Field Name	Field Description	Level of Output
<b>Instance</b>	Routing instance for PIM snooping.	All levels
<b>Learning-Domain</b>	Learning domain for PIM snooping.	All levels
<b>Interface</b>	Router interface for which PIM snooping neighbor details are displayed.	All levels
<b>Option</b>	PIM snooping options available on the specified interface: <ul style="list-style-type: none"> <li>• H = Hello Option Holdtime</li> <li>• P = Hello Option DR Priority</li> <li>• L = Hello Option LAN Prune Delay</li> <li>• G = Generation Identifier</li> <li>• T = Tracking Bit</li> </ul>	All levels
<b>Uptime</b>	Time the neighbor has been operational since the PIM process was last initialized, in the format <b>dd:hh:mm:ss ago</b> for less than a week and <b>nwnd:hh:mm:ss ago</b> for more than a week.	All levels
<b>Neighbor addr</b>	IP address of the PIM snooping neighbor connected through the specified interface.	All levels
<b>Address</b>	IP address of the specified router interface.	All levels
<b>Hello Option Holdtime</b>	Time for which the neighbor is available, in seconds. The range of values is <b>0</b> through <b>65,535</b> .	<b>detail</b>
<b>Hello Option DR Priority</b>	Designated router election priority. The range of values is <b>0</b> through <b>4294967295</b> .  <b>NOTE:</b> By default, every PIM interface has an equal probability (priority 1) of being selected as the DR.	<b>detail</b>
<b>Hello Option Generation ID</b>	9-digit or 10-digit number used to tag hello messages.	<b>detail</b>
<b>Hello Option LAN Prune Delay</b>	Time to wait before the neighbor receives prune messages, in the format <b>delay nnn ms override nnnn ms</b> .	<b>detail</b>

## Sample Output

### show pim snooping neighbors

```

user@host> show pim snooping neighbors
B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking Bit

Instance: vpls1
Learning-Domain: vlan-id 10

Interface Option Uptime Neighbor addr
ge-1/3/1.10 HPLGT 00:43:33 192.0.2.2

```

```

ge-1/3/3.10 HPLGT 00:43:33 192.0.2.3
ge-1/3/5.10 HPLGT 00:43:33 192.0.2.4
ge-1/3/7.10 HPLGT 00:43:33 192.0.2.5

```

Learning-Domain: vlan-id 20

```

Interface Option Uptime Neighbor addr
ge-1/3/1.20 HPLGT 00:43:33 192.0.2.12
ge-1/3/3.20 HPLGT 00:43:33 192.0.2.13
ge-1/3/5.20 HPLGT 00:43:33 192.0.2.14
ge-1/3/7.20 HPLGT 00:43:33 192.0.2.15

```

### show pim snooping neighbors detail

```

user@host> show pim snooping neighbors detail
Instance: vpls1
Learning-Domain: vlan-id 10

Interface: ge-1/3/1.10
Address: 192.0.2.2
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 83 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 830908833
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/3.10
Address: 192.0.2.3
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 97 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 2056520742
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/5.10
Address: 192.0.2.4
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 81 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 1152066227
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported

Interface: ge-1/3/7.10
Address: 192.0.2.5
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 96 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 1113200338
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms
Tracking is supported
Learning-Domain: vlan-id 20

Interface: ge-1/3/1.20
Address: 192.0.2.12
Uptime: 00:44:51
Hello Option Holdtime: 105 seconds 81 remaining
Hello Option DR Priority: 1
Hello Option Generation ID: 963205167

```

Hello Option LAN Prune Delay: delay 500 ms override 2000 ms  
Tracking is supported

Interface: ge-1/3/3.20  
Address: 192.0.2.13  
Uptime: 00:44:51  
Hello Option Holdtime: 105 seconds 104 remaining  
Hello Option DR Priority: 1  
Hello Option Generation ID: 166921538  
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms  
Tracking is supported

Interface: ge-1/3/5.20  
Address: 192.0.2.14  
Uptime: 00:44:51  
Hello Option Holdtime: 105 seconds 88 remaining  
Hello Option DR Priority: 1  
Hello Option Generation ID: 789422835  
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms  
Tracking is supported

Interface: ge-1/3/7.20  
Address: 192.0.2.15  
Uptime: 00:44:51  
Hello Option Holdtime: 105 seconds 88 remaining  
Hello Option DR Priority: 1  
Hello Option Generation ID: 1563649680  
Hello Option LAN Prune Delay: delay 500 ms override 2000 ms  
Tracking is supported

### show pim snooping neighbors instance

```
user@host> show pim snooping neighbors instance vpls1
B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
P = Hello Option DR Priority, T = Tracking Bit
```

Instance: vpls1  
Learning-Domain: vlan-id 10

Interface	Option	Uptime	Neighbor	addr
ge-1/3/1.10	HPLGT	00:46:03	192.0.2.2	
ge-1/3/3.10	HPLGT	00:46:03	192.0.2.3	
ge-1/3/5.10	HPLGT	00:46:03	192.0.2.4	
ge-1/3/7.10	HPLGT	00:46:03	192.0.2.5	

Learning-Domain: vlan-id 20

Interface	Option	Uptime	Neighbor	addr
ge-1/3/1.20	HPLGT	00:46:03	192.0.2.12	
ge-1/3/3.20	HPLGT	00:46:03	192.0.2.13	
ge-1/3/5.20	HPLGT	00:46:03	192.0.2.14	
ge-1/3/7.20	HPLGT	00:46:03	192.0.2.15	

### show pim snooping neighbors interface

```
user@host> show pim snooping neighbors interface ge-1/3/1.20
B = Bidirectional Capable, G = Generation Identifier,
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,
```

P = Hello Option DR Priority, T = Tracking Bit

Instance: vpls1  
Learning-Domain: vlan-id 10  
Learning-Domain: vlan-id 20

Interface Option Uptime Neighbor addr  
ge-1/3/1.20 HPLGT 00:48:04 192.0.2.12

#### show pim snooping neighbors vlan-id

user@host> show pim snooping neighbors vlan-id 10  
B = Bidirectional Capable, G = Generation Identifier,  
H = Hello Option Holdtime, L = Hello Option LAN Prune Delay,  
P = Hello Option DR Priority, T = Tracking Bit

Instance: vpls1  
Learning-Domain: vlan-id 10

Interface Option Uptime Neighbor addr  
ge-1/3/1.10 HPLGT 00:49:12 192.0.2.2  
ge-1/3/3.10 HPLGT 00:49:12 192.0.2.3  
ge-1/3/5.10 HPLGT 00:49:12 192.0.2.4  
ge-1/3/7.10 HPLGT 00:49:12 192.0.2.5

## show pim snooping statistics

<b>Syntax</b>	show pim snooping statistics <instance <i>instance-name</i> > <interface <i>interface-name</i> > <logical-system <i>logical-system-name</i> > <vlan-id <i>vlan-id</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 12.3 for MX Series 3D Universal Edge devices. Command introduced in Junos OS Release 13.2 for M Series Multiservice Edge devices.
<b>Description</b>	Display Protocol Independent Multicast (PIM) snooping statistics.
<b>Options</b>	<p><b>none</b>—Display PIM statistics.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display statistics for a specific routing instance enabled by Protocol Independent Multicast (PIM) snooping.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display statistics about the specified interface for PIM snooping.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p><b>vlan-id <i>vlan-identifier</i></b>—(Optional) Display PIM snooping statistics information for the specified VLAN.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>PIM Snooping for VPLS</i></li> <li>• <a href="#">clear pim snooping statistics on page 1762</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show pim snooping statistics on page 1945</a> <a href="#">show pim snooping statistics instance on page 1946</a> <a href="#">show pim snooping statistics interface on page 1947</a> <a href="#">show pim snooping statistics vlan-id on page 1947</a>
<b>Output Fields</b>	<a href="#">Table 145 on page 1944</a> lists the output fields for the <b>show pim snooping statistics</b> command. Output fields are listed in the approximate order in which they appear.

Table 145: show pim snooping statistics Output Fields

Field Name	Field Description	Level of Output
Instance	Routing instance for PIM snooping.	All levels
Learning-Domain	Learning domain for PIM snooping.	All levels

Table 145: show pim snooping statistics Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Tx J/P messages</b>	Total number of transmitted join/prune packets.	All levels
<b>Rx J/P messages</b>	Total number of received join/prune packets.	All levels
<b>Rx J/P messages -- seen</b>	Number of join/prune packets seen but not received on the upstream interface.	All levels
<b>Rx J/P messages -- received</b>	Number of join/prune packets received on the downstream interface.	All levels
<b>Rx Hello messages</b>	Total number of received hello packets.	All levels
<b>Rx Version Unknown</b>	Number of packets received with an unknown version number.	All levels
<b>Rx Neighbor Unknown</b>	Number of packets received from an unknown neighbor.	All levels
<b>Rx Upstream Neighbor Unknown</b>	Number of packets received with unknown upstream neighbor information.	All levels
<b>Rx Bad Length</b>	Number of packets received containing incorrect length information.	All levels
<b>Rx J/P Busy Drop</b>	Number of join/prune packets dropped while the router is busy.	All levels
<b>Rx J/P Group Aggregate 0</b>	Number of join/prune packets received containing the aggregate group information.	All levels
<b>Rx Malformed Packet</b>	Number of malformed packets received.	All levels
<b>Rx No PIM Interface</b>	Number of packets received without the interface information.	All levels
<b>Rx No Upstream Neighbor</b>	Number of packets received without upstream neighbor information.	All levels
<b>Rx Unknown Hello Option</b>	Number of hello packets received with unknown options.	All levels

## Sample Output

### show pim snooping statistics

```

user@host> show pim snooping statistics
Instance: vpls1
Learning-Domain: vlan-id 10

Tx J/P messages 0
RX J/P messages 8

```

```

Rx J/P messages -- seen 0
Rx J/P messages -- received 8
Rx Hello messages 37
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0
Rx Unknown Hello Option 0
Rx Malformed Packet 0

```

Learning-Domain: vlan-id 20

```

Tx J/P messages 0
RX J/P messages 2
Rx J/P messages -- seen 0
Rx J/P messages -- received 2
Rx Hello messages 39
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0
Rx Unknown Hello Option 0
Rx Malformed Packet 0

```

### show pim snooping statistics instance

```

user@host> show pim snooping statistics instance vpls1
Instance: vpls1
Learning-Domain: vlan-id 10

```

```

Tx J/P messages 0
RX J/P messages 9
Rx J/P messages -- seen 0
Rx J/P messages -- received 9
Rx Hello messages 45
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0

```

```
Rx Unknown Hello Option 0
Rx Malformed Packet 0
```

```
Learning-Domain: vlan-id 20
```

```
Tx J/P messages 0
RX J/P messages 3
Rx J/P messages -- seen 0
Rx J/P messages -- received 3
Rx Hello messages 47
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
Rx No PIM Interface 0
Rx No Upstream Neighbor 0
Rx Bad Length 0
Rx Neighbor Unknown 0
Rx Unknown Hello Option 0
Rx Malformed Packet 0
```

#### show pim snooping statistics interface

```
user@host> show pim snooping statistics interface ge-1/3/1.20
```

```
Instance: vpls1
Learning-Domain: vlan-id 10
Learning-Domain: vlan-id 20
```

```
PIM Interface statistics for ge-1/3/1.20
```

```
Tx J/P messages 0
RX J/P messages 0
Rx J/P messages -- seen 0
Rx J/P messages -- received 0
Rx Hello messages 13
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
Rx Bad Length 0
Rx J/P Busy Drop 0
Rx J/P Group Aggregate 0
Rx Malformed Packet 0
```

#### show pim snooping statistics vlan-id

```
user@host> show pim snooping statistics vlan-id 10
```

```
Instance: vpls1
Learning-Domain: vlan-id 10
```

```
Tx J/P messages 0
RX J/P messages 11
Rx J/P messages -- seen 0
Rx J/P messages -- received 11
Rx Hello messages 64
Rx Version Unknown 0
Rx Neighbor Unknown 0
Rx Upstream Neighbor Unknown 0
```

Rx Bad Length 0  
Rx J/P Busy Drop 0  
Rx J/P Group Aggregate 0  
Rx Malformed Packet 0  
Rx No PIM Interface 0  
Rx No Upstream Neighbor 0  
Rx Bad Length 0  
Rx Neighbor Unknown 0

## show pim source

<b>List of Syntax</b>	<a href="#">Syntax on page 1949</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1949</a>
<b>Syntax</b>	<pre>show pim source &lt;brief   detail&gt; &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;source-prefix&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show pim source &lt;brief   detail&gt; &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;source-prefix&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display information about the Protocol Independent Multicast (PIM) source reverse path forwarding (RPF) state.
<b>Options</b>	<p><b>none</b>—Display standard information about the PIM RPF state for all supported family addresses for all routing instances.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>inet   inet6</b>—(Optional) Display information for IPv4 or IPv6 family addresses, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information about the RPF state for a specific PIM-enabled routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>source-prefix</b>—(Optional) Display the state for source RPF states in the given range.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show pim source on page 1950</a> <a href="#">show pim source brief on page 1950</a> <a href="#">show pim source detail on page 1951</a>

## [show pim source \(Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1951](#)

**Output Fields** [Table 146 on page 1950](#) describes the output fields for the **show pim source** command. Output fields are listed in the approximate order in which they appear.

*Table 146: show pim source Output Fields*

Field Name	Field Description
<b>Instance</b>	Name of the routing instance.
<b>Source</b>	Address of the source or reverse path.
<b>Prefix/length</b>	Prefix and prefix length for the route used to reach the RPF address.
<b>Upstream Protocol</b>	Protocol toward the source address.
<b>Upstream interface</b>	RPF interface toward the source address.  A pseudo multipoint LDP (M-LDP) interface appears on egress nodes in M-LDP point-to-multipoint LSPs with inband signaling.
<b>Upstream Neighbor</b>	Address of the RPF neighbor used to reach the source address.  The multipoint LDP (M-LDP) root appears on egress nodes in M-LDP point-to-multipoint LSPs with inband signaling.

## Sample Output

### show pim source

```

user@host> show pim source
Instance: PIM.master Family: INET

Source 10.255.14.144
  Prefix 10.255.14.144/32
  Upstream interface Local
  Upstream neighbor Local

Source 10.255.70.15
  Prefix 10.255.70.15/32
  Upstream interface so-1/0/0.0
  Upstream neighbor 10.111.10.2

Instance: PIM.master Family: INET6

```

### show pim source brief

The output for the **show pim source brief** command is identical to that for the **show pim source** command. For sample output, see [show pim source on page 1950](#).

**show pim source detail**

```

user@host> show pim source detail
Instance: PIM.master Family: INET

Source 10.255.14.144
  Prefix 10.255.14.144/32
  Upstream interface Local
  Upstream neighbor Local
  Active groups:233.252.0.0
    233.252.0.1
    233.252.0.1

Source 10.255.70.15
  Prefix 10.255.70.15/32
  Upstream interface so-1/0/0.0
  Upstream neighbor 10.111.10.2
  Active groups:233.252.0.1

Instance: PIM.master Family: INET6

```

**show pim source (Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)**

```

user@host> show pim source
Instance: PIM.master Family: INET

Source 10.1.1.1
  Prefix 10.1.1.1/32
  Upstream interface Local
  Upstream neighbor Local

Source 10.2.7.7
  Prefix 10.2.7.0/24
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <10.1.1.2>

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor via MLDP-inband
  Upstream interface fe-1/3/0.0
  Upstream neighbor 192.168.140.1
  Upstream neighbor MLDP LSP root <10.1.1.2>

Instance: PIM.master Family: INET6
Source 2001:db8::1:2:7:7
  Prefix 2001:db8::1:2:7:0/120
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor via MLDP-inband
  Upstream interface fe-1/3/0.0
  Upstream neighbor 192.168.140.1
  Upstream neighbor MLDP LSP root <10.1.1.2>

```

## show pim statistics

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1952</a> <a href="#">Syntax (EX Series Switch and the QFX Series) on page 1952</a>
<b>Syntax</b>	<pre>show pim statistics &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and the QFX Series)</b>	<pre>show pim statistics &lt;inet   inet6&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>inet6</b> and <b>instance</b> options introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Support for bidirectional PIM added in Junos OS Release 12.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display Protocol Independent Multicast (PIM) statistics.
<b>Options</b>	<p><b>none</b>—Display PIM statistics.</p> <p><b>inet   inet6</b>—(Optional) Display IPv4 or IPv6 PIM statistics, respectively.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display statistics for a specific routing instance enabled by Protocol Independent Multicast (PIM).</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display statistics about the specified interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">clear pim statistics on page 1764</a></li></ul>
<b>List of Sample Output</b>	<p><a href="#">show pim statistics on page 1959</a></p> <p><a href="#">show pim statistics inet interface &lt;interface-name&gt; on page 1961</a></p> <p><a href="#">show pim statistics inet6 interface &lt;interface-name&gt; on page 1961</a></p> <p><a href="#">show pim statistics instance &lt;instance-name&gt; on page 1962</a></p> <p><a href="#">show pim statistics interface &lt;interface-name&gt; on page 1964</a></p>

**Output Fields** Table 147 on page 1953 describes the output fields for the **show pim statistics** command. Output fields are listed in the approximate order in which they appear.

*Table 147: show pim statistics Output Fields*

Field Name	Field Description
Instance	<p>Name of the routing instance.</p> <p>This field only appears if you specify an interface, for example:</p> <ul style="list-style-type: none"> <li>• <b>inet interface <i>interface-name</i></b></li> <li>• <b>inet6 interface <i>interface-name</i></b></li> <li>• <b>interface <i>interface-name</i></b></li> </ul>
Family	<p>Output is for IPv4 or IPv6 PIM statistics. <b>INET</b> indicates IPv4 statistics, and <b>INET6</b> indicates IPv6 statistics.</p> <p>This field only appears if you specify an interface, for example:</p> <ul style="list-style-type: none"> <li>• <b>inet interface <i>interface-name</i></b></li> <li>• <b>inet6 interface <i>interface-name</i></b></li> <li>• <b>interface <i>interface-name</i></b></li> </ul>
PIM statistics	PIM statistics for all interfaces or for the specified interface.
PIM message type	Message type for which statistics are displayed.
Received	Number of received statistics.
Sent	Number of messages sent of a certain type.
Rx errors	Number of received packets that contained errors.
V2 Hello	PIM version 2 hello packets.
V2 Register	PIM version 2 register packets.
V2 Register Stop	PIM version 2 register stop packets.
V2 Join Prune	PIM version 2 join and prune packets.
V2 Bootstrap	PIM version 2 bootstrap packets.
V2 Assert	PIM version 2 assert packets.
V2 Graft	PIM version 2 graft packets.
V2 Graft Ack	PIM version 2 graft acknowledgment packets.
V2 Candidate RP	PIM version 2 candidate RP packets.

*Table 147: show pim statistics Output Fields (continued)*

Field Name	Field Description
V2 State Refresh	PIM version 2 control messages related to PIM dense mode (PIM-DM) state refresh.  State refresh is an extension to PIM-DM. It not supported in Junos OS.
V2 DF Election	PIM version 2 send and receive messages associated with bidirectional PIM designated forwarder election.
V1 Query	PIM version 1 query packets.
V1 Register	PIM version 1 register packets.
V1 Register Stop	PIM version 1 register stop packets.
V1 Join Prune	PIM version 1 join and prune packets.
V1 RP Reachability	PIM version 1 RP reachability packets.
V1 Assert	PIM version 1 assert packets.
V1 Graft	PIM version 1 graft packets.
V1 Graft Ack	PIM version 1 graft acknowledgment packets.
AutoRP Announce	Auto-RP announce packets.
AutoRP Mapping	Auto-RP mapping packets.
AutoRP Unknown type	Auto-RP packets with an unknown type.
Anycast Register	Auto-RP announce packets.
Anycast Register Stop	Auto-RP announce packets.
Global Statistics	Summary of PIM statistics for all interfaces.
Hello dropped on neighbor policy	Number of hello packets dropped because of a configured neighbor policy.
Unknown type	Number of PIM control packets received with an unknown type.
V1 Unknown type	Number of PIM version 1 control packets received with an unknown type.
Unknown Version	Number of PIM control packets received with an unknown version. The version is not version 1 or version 2.

*Table 147: show pim statistics Output Fields (continued)*

Field Name	Field Description
Neighbor unknown	Number of PIM control packets received (excluding PIM hello) without first receiving the hello packet.
Bad Length	Number of PIM control packets received for which the packet size does not match the PIM length field in the packet.
Bad Checksum	Number of PIM control packets received for which the calculated checksum does not match the checksum field in the packet.
Bad Receive If	Number of PIM control packets received on an interface that does not have PIM configured.
Rx Bad Data	Number of PIM control packets received that contain data for TCP Bad register packets.
Rx Intf disabled	Number of PIM control packets received on an interface that has PIM disabled.
Rx V1 Require V2	Number of PIM version 1 control packets received on an interface configured for PIM version 2.
Rx V2 Require V1	Number of PIM version 2 control packets received on an interface configured for PIM version 1.
Rx Register not RP	Number of PIM register packets received when the routing device is not the RP for the group.
Rx Register no route	Number of PIM register packets received when the RP does not have a unicast route back to the source.
Rx Register no decap if	Number of PIM register packets received when the RP does not have a de-encapsulation interface.
Null Register Timeout	Number of NULL register timeout packets.
RP Filtered Source	Number of PIM packets received when the routing device has a source address filter configured for the RP.
Rx Unknown Reg Stop	Number of register stop messages received with an unknown type.
Rx Join/Prune no state	Number of join and prune messages received for which the routing device has no state.
Rx Join/Prune on upstream if	Number of join and prune messages received on the interface used to reach the upstream routing device, toward the RP.
Rx Join/Prune for invalid group	Number of join or prune messages received for invalid multicast group addresses.

*Table 147: show pim statistics Output Fields (continued)*

Field Name	Field Description
Rx Join/Prune messages dropped	Number of join and prune messages received and dropped.
Rx sparse join for dense group	Number of PIM sparse mode join messages received for a group that is configured for dense mode.
Rx Graft/Graft Ack no state	Number of graft and graft acknowledgment messages received for which the router or switch has no state.
Rx Graft on upstream if	Number of graft messages received on the interface used to reach the upstream routing device, toward the RP.
Rx CRP not BSR	Number of BSR messages received in which the PIM message type is Candidate-RP-Advertisement, not Bootstrap.
Rx BSR when BSR	Number of BSR messages received in which the PIM message type is Bootstrap.
Rx BSR not RPF if	Number of BSR messages received on an interface that is not the RPF interface.
Rx unknown hello opt	Number of PIM hello packets received with options that Junos OS does not support.
Rx data no state	Number of PIM control packets received for which the routing device has no state for the data type.
Rx RP no state	Number of PIM control packets received for which the routing device has no state for the RP.
Rx aggregate	Number of PIM aggregate MDT packets received.
Rx malformed packet	Number of PIM control packets received with a malformed IP unicast or multicast address family.
No RP	Number of PIM control packets received with no RP address.
No register encaps if	Number of PIM register packets received when the first-hop routing device does not have an encapsulation interface.
No route upstream	Number of PIM control packets received when the routing device does not have a unicast route to the the interface used to reach the upstream routing device, toward the RP.
Nexthop Unusable	Number of PIM control packets with an unusable nexthop. A path can be unusable if the route is hidden or the link is down.
RP mismatch	Number of PIM control packets received for which the routing device has an RP mismatch.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
RP mode mismatch	RP mode (sparse or bidirectional) mismatches encountered when processing join and prune messages.
RPF neighbor unknown	Number of PIM control packets received for which the routing device has an unknown RPF neighbor for the source.
Rx Joins/Prunes filtered	The number of join and prune messages filtered because of configured route filters and source address filters.
Tx Joins/Prunes filtered	The number of join and prune messages filtered because of configured route filters and source address filters.
Embedded-RP invalid addr	Number of packets received with an invalid embedded RP address in PIM join messages and other types of messages sent between routing domains.
Embedded-RP limit exceed	Number of times the limit configured with the <b>maximum-rps</b> statement is exceeded. The <b>maximum-rps</b> statement limits the number of embedded RPs created in a specific routing instance. The range is from 1 through 500. The default is 100.
Embedded-RP added	<p>Number of packets in which the embedded RP for IPv6 is added.</p> <p>The following receive events trigger extraction of an IPv6 embedded RP address on the routing device:</p> <ul style="list-style-type: none"> <li>• Multicast Listener Discovery (MLD) report for an embedded RP multicast group address</li> <li>• PIM join message with an embedded RP multicast group address</li> <li>• Static embedded RP multicast group address associated with an interface</li> <li>• Packets sent to an embedded RP multicast group address received on the DR</li> </ul> <p>An embedded RP node discovered through these receive events is added if it does not already exist on the routing platform.</p>
Embedded-RP removed	Number of packets in which the embedded RP for IPv6 is removed. The embedded RP is removed whenever all PIM join states using this RP are removed or the configuration changes to remove the embedded RP feature.
Rx Register msgs filtering drop	Number of received register messages dropped because of a filter configured for PIM register messages.
Tx Register msgs filtering drop	Number of register messages dropped because of a filter configured for PIM register messages.
Rx Bidir Join/Prune on non-Bidir if	Error counter for join and prune messages received on non-bidirectional PIM interfaces.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
Rx Bidir Join/Prune on non-DF if	Error counter for join and prune messages received on non-designated forwarder interfaces.
V4 (S,G) Maximum	Maximum number of (S,G) IPv4 multicast routes accepted for the VPN routing and forwarding (VRF) routing instance. If this number is met, additional (S,G) entries are not accepted.
V4 (S,G) Accepted	Number of accepted (S,G) IPv4 multicast routes.
V4 (S,G) Threshold	Threshold at which a warning message is logged (percentage of the maximum number of (S,G) IPv4 multicast routes accepted by the device).
V4 (S,G) Log Interval	Time (in seconds) between consecutive log messages.
V6 (S,G) Maximum	Maximum number of (S,G) IPv6 multicast routes accepted for the VPN routing and forwarding (VRF) routing instance. If this number is met, additional (S,G) entries are not accepted.
V6 (S,G) Accepted	Number of accepted (S,G) IPv6 multicast routes.
V6 (S,G) Threshold	Threshold at which a warning message is logged (percentage of the maximum number of (S,G) IPv6 multicast routes accepted by the device).
V6 (S,G) Log Interval	Time (in seconds) between consecutive log messages.
V4 (grp-prefix, RP) Maximum	Maximum number of group-to-rendezvous point (RP) IPv4 multicast mappings accepted for the VRF routing instance. If this number is met, additional mappings are not accepted.
V4 (grp-prefix, RP) Accepted	Number of accepted group-to-RP IPv4 multicast mappings.
V4 (grp-prefix, RP) Threshold	Threshold at which a warning message is logged (percentage of the maximum number of group-to-RP IPv4 multicast mappings accepted by the device).
V4 (grp-prefix, RP) Log Interval	Time (in seconds) between consecutive log messages.
V6 (grp-prefix, RP) Maximum	Maximum number of group-to RP IPv6 multicast mappings accepted for the VRF routing instance. If this number is met, additional mappings are not accepted.
V6 (grp-prefix, RP) Accepted	Number of accepted group-to-RP IPv6 multicast mappings.

Table 147: show pim statistics Output Fields (continued)

Field Name	Field Description
V6 (grp-prefix, RP) Threshold	Threshold at which a warning message is logged (percentage of the maximum number of group-to-RP IPv6 multicast mappings accepted by the device).
V6 (grp-prefix, RP) Log Interval	Time (in seconds) between consecutive log messages.
V4 Register Maximum	Maximum number of IPv4 PIM registers accepted for the VRF routing instance. If this number is met, additional PIM registers are not accepted.  You configure the register limits on the RP.
V4 Register Accepted	Number of accepted IPv4 PIM registers.
V4 Register Threshold	Threshold at which a warning message is logged (percentage of the maximum number of IPv4 PIM registers accepted by the device).
V4 Register Log Interval	Time (in seconds) between consecutive log messages.
V6 Register Maximum	Maximum number of IPv6 PIM registers accepted for the VRF routing instance. If this number is met, additional PIM registers are not accepted.  You configure the register limits on the RP.
V6 Register Accepted	Number of accepted IPv6 PIM registers.
V6 Register Threshold	Threshold at which a warning message is logged (percentage of the maximum number of IPv6 PIM registers accepted by the device).
V6 Register Log Interval	Time (in seconds) between consecutive log messages.
(*G) Join drop due to SSM range check	PIM join messages that are dropped because the multicast addresses are outside of the SSM address range of 232.0.0.0 through 232.255.255.255. You can extend the accepted SSM address range by configuring the <b>ssm-groups</b> statement.

## Sample Output

### show pim statistics

```

user@host> show pim statistics
PIM Message type    Received    Sent    Rx errors
V2 Hello            15          32       0
V2 Register         0          362      0
V2 Register Stop    483         0        0
V2 Join Prune       18         518      0
V2 Bootstrap        0           0        0
V2 Assert           0           0        0
V2 Graft            0           0        0

```

V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
V2 State Refresh	0	0	0
V2 DF Election	0	0	0
V1 Query	0	0	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	0	0	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0
AutoRP Announce	0	0	0
AutoRP Mapping	0	0	0
AutoRP Unknown type	0		
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

## Global Statistics

Hello dropped on neighbor policy	0
Unknown type	0
V1 Unknown type	0
Unknown Version	0
ipv4 BSR pkt drop due to excessive rate	0
ipv6 BSR pkt drop due to excessive rate	0
Neighbor unknown	0
Bad Length	0
Bad Checksum	0
Bad Receive If	0
Rx Bad Data	0
Rx Intf disabled	0
Rx V1 Require V2	0
Rx V2 Require V1	0
Rx Register not RP	0
Rx Register no route	0
Rx Register no decap if	0
Null Register Timeout	0
RP Filtered Source	0
Rx Unknown Reg Stop	0
Rx Join/Prune no state	0
Rx Join/Prune on upstream if	0
Rx Join/Prune for invalid group	5
Rx Join/Prune messages dropped	0
Rx sparse join for dense group	0
Rx Graft/Graft Ack no state	0
Rx Graft on upstream if	0
Rx CRP not BSR	0
Rx BSR when BSR	0
Rx BSR not RPF if	0
Rx unknown hello opt	0
Rx data no state	0
Rx RP no state	0
Rx aggregate	0
Rx malformed packet	0
Rx illegal TTL	0
Rx illegal destination address	0
No RP	0
No register encap if	0
No route upstream	0
NextHop Unusable	0

RP mismatch	0
RP mode mismatch	0
RPF neighbor unknown	0
Rx Joins/Prunes filtered	0
Tx Joins/Prunes filtered	0
Embedded-RP invalid addr	0
Embedded-RP limit exceed	0
Embedded-RP added	0
Embedded-RP removed	0
Rx Register msgs filtering drop	0
Tx Register msgs filtering drop	0
Rx Bidir Join/Prune on non-Bidir if	0
Rx Bidir Join/Prune on non-DF if	0
(*,G) Join drop due to SSM range check	0

## Sample Output

**show pim statistics inet interface <interface-name>**

```
user@host> show pim statistics inet interface ge-0/3/0.0
Instance: PIM.master Family: INET
```

PIM Interface statistics for ge-0/3/0.0

PIM Message type	Received	Sent	Rx errors
V2 Hello	0	4	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	0	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
V1 Query	0	0	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	0	0	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0
AutoRP Announce	0	0	0
AutoRP Mapping	0	0	0
AutoRP Unknown type	0	0	0
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

## Sample Output

**show pim statistics inet6 interface <interface-name>**

```
user@host> show pim statistics inet6 interface ge-0/3/0.0
Instance: PIM.master Family: INET6
```

PIM Interface statistics for ge-0/3/0.0

PIM Message type	Received	Sent	Rx errors
V2 Hello	0	4	0
V2 Register	0	0	0

V2 Register Stop	0	0	0
V2 Join Prune	0	0	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

#### show pim statistics instance <instance-name>

```
user@host> show pim statistics instance VPN-A
```

PIM Message type	Received	Sent	Rx errors
V2 Hello	31	37	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	16	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
V2 State Refresh	0	0	0
V2 DF Election	0	0	0
V1 Query	0	0	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	0	0	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0
AutoRP Announce	0	0	0
AutoRP Mapping	0	0	0
AutoRP Unknown type	0		
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

#### Global Statistics

Hello dropped on neighbor policy	0
Unknown type	0
V1 Unknown type	0
Unknown Version	0
Neighbor unknown	0
Bad Length	0
Bad Checksum	0
Bad Receive If	0
Rx Bad Data	0
Rx Intf disabled	0
Rx V1 Require V2	0
Rx V2 Require V1	0
Rx Register not RP	0
Rx Register no route	0
Rx Register no decap if	0
Null Register Timeout	0
RP Filtered Source	0
Rx Unknown Reg Stop	0
Rx Join/Prune no state	0
Rx Join/Prune on upstream if	0

Rx Join/Prune for invalid group	0
Rx Join/Prune messages dropped	0
Rx sparse join for dense group	0
Rx Graft/Graft Ack no state	0
Rx Graft on upstream if	0
Rx CRP not BSR	0
Rx BSR when BSR	0
Rx BSR not RPF if	0
Rx unknown hello opt	0
Rx data no state	0
Rx RP no state	0
Rx aggregate	0
Rx malformed packet	0
Rx illegal TTL	0
Rx illegal destination address	0
No RP	0
No register encap if	0
No route upstream	28
Nexthop Unusable	0
RP mismatch	0
RP mode mismatch	0
RPF neighbor unknown	0
Rx Joins/Prunes filtered	0
Tx Joins/Prunes filtered	0
Embedded-RP invalid addr	0
Embedded-RP limit exceed	0
Embedded-RP added	0
Embedded-RP removed	0
Rx Register msgs filtering drop	0
Tx Register msgs filtering drop	0
Rx Bidir Join/Prune on non-Bidir if	0
Rx Bidir Join/Prune on non-DF if	0
V4 (S,G) Maximum	10
V4 (S,G) Accepted	9
V4 (S,G) Threshold	80
V4 (S,G) Log Interval	80
V6 (S,G) Maximum	8
V6 (S,G) Accepted	8
V6 (S,G) Threshold	50
V6 (S,G) Log Interval	100
V4 (grp-prefix, RP) Maximum	100
V4 (grp-prefix, RP) Accepted	5
V4 (grp-prefix, RP) Threshold	80
V4 (grp-prefix, RP) Log Interval	10
V6 (grp-prefix, RP) Maximum	20
V6 (grp-prefix, RP) Accepted	0
V6 (grp-prefix, RP) Threshold	90
V6 (grp-prefix, RP) Log Interval	20
V4 Register Maximum	100
V4 Register Accepted	10
V4 Register Threshold	80
V4 Register Log Interval	10
V6 Register Maximum	20
V6 Register Accepted	0
V6 Register Threshold	90
V6 Register Log Interval	20
(*,G) Join drop due to SSM range check	0

## Sample Output

**show pim statistics interface <interface-name>**

```
user@host> show pim statistics interface ge-0/3/0.0
Instance: PIM.master Family: INET
```

PIM Interface statistics for ge-0/3/0.0

PIM Message type	Received	Sent	Rx errors
V2 Hello	0	3	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	0	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
V1 Query	0	0	0
V1 Register	0	0	0
V1 Register Stop	0	0	0
V1 Join Prune	0	0	0
V1 RP Reachability	0	0	0
V1 Assert	0	0	0
V1 Graft	0	0	0
V1 Graft Ack	0	0	0
AutoRP Announce	0	0	0
AutoRP Mapping	0	0	0
AutoRP Unknown type	0		
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

Instance: PIM.master Family: INET6

PIM Interface statistics for ge-0/3/0.0

PIM Message type	Received	Sent	Rx errors
V2 Hello	0	3	0
V2 Register	0	0	0
V2 Register Stop	0	0	0
V2 Join Prune	0	0	0
V2 Bootstrap	0	0	0
V2 Assert	0	0	0
V2 Graft	0	0	0
V2 Graft Ack	0	0	0
V2 Candidate RP	0	0	0
Anycast Register	0	0	0
Anycast Register Stop	0	0	0

## show sap listen

<b>Syntax</b>	show sap listen <brief   detail> <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display the addresses that the router is listening to in order to receive multicast Session Announcement Protocol (SAP) session announcements.
<b>Options</b>	<p><b>none</b>—Display standard information about the addresses that the router is listening to in order to receive multicast SAP session announcements.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show sap listen on page 1965</a> <a href="#">show sap listen brief on page 1966</a> <a href="#">show sap listen detail on page 1966</a>
<b>Output Fields</b>	Table 148 on page 1965 describes the output fields for the <b>show sap listen</b> command. Output fields are listed in the approximate order in which they appear.

Table 148: show sap listen Output Fields

Field Name	Field Description
Group address	Address of the group that the local router is listening to for SAP messages.
Port	UDP port number used for SAP.

## Sample Output

### show sap listen

```
user@host> show sap listen
Group address  Port
224.2.127.254 9875
239.255.255.255 9875
```

### `show sap listen brief`

The output for the **show sap listen brief** command is identical to that for the **show sap listen** command. For sample output, see [show sap listen on page 1965](#).

### `show sap listen detail`

The output for the **show sap listen detail** command is identical to that for the **show sap listen** command. For sample output, see [show sap listen on page 1965](#).

## test msdp

---

<b>Syntax</b>	<code>test msdp (dependent-peers <i>prefix</i>   rpf-peer <i>originator</i>)</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Find Multicast Source Discovery Protocol (MSDP) peers.
<b>Options</b>	<b>dependent-peers <i>prefix</i></b> —Find downstream dependent MSDP peers. <b>rpf-peer <i>originator</i></b> —Find the MSDP reverse-path-forwarding (RPF) peer for the originator. <b>instance <i>instance-name</i></b> —(Optional) Find MDSP peers for the specified routing instance. <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">test msdp dependent-peers on page 1967</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### test msdp dependent-peers

```
user@host> test msdp dependent-peers 10.0.0.1/24
```



## CHAPTER 20

# IPv6 Operational Commands

- `clear ipv6 neighbors`
- `clear ipv6 router-advertisement`
- `show ipv6 neighbors`
- `show ipv6 router-advertisement`

## clear ipv6 neighbors

---

<b>Syntax</b>	<code>clear ipv6 neighbors</code> <code>&lt;all&gt;</code> <code>&lt;host <i>host-name</i>&gt;</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;logical-system <i>logical-system-name</i>&gt;</code> <code>&lt;tenant <i>name</i>&gt;</code> <code>&lt;vpn <i>vpn-name</i>&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.3 for EX Series switches. Command introduced in Junos OS Release 12.2 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series. <b>interface</b> , <b>logical-system</b> , <b>tenant</b> , and <b>vpn</b> options added in Junos OS Release 18.3.
<b>Description</b>	Clear IPv6 neighbor cache information.
<b>Options</b>	<b>none</b> —Clear all IPv6 neighbor cache information.  <b>all</b> —(Optional) Clear all IPv6 neighbor cache information.  <b>host <i>hostname</i></b> —(Optional) Clear the information for the specified IPv6 neighbors.  <b>interface <i>interface-name</i></b> —(Optional) Clear information about IPv6 for the specified logical interface  <b>logical-system <i>logical-system-name</i></b> —(Optional) Clear the IPv6 entries for the specified logical system; only available on the main router context.  <b>tenant <i>name</i></b> —(Optional) Clear the name of the tenant.  <b>vpn <i>vpn-name</i></b> —(Optional) Clear entries in the IPv6 table for the specified virtual private network's (VPN) routing table.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show ipv6 neighbors on page 1973</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear ipv6 neighbors on page 1971</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

clear ipv6 neighbors

```
user@host> clear ipv6 neighbors
```

## clear ipv6 router-advertisement

---

<b>Syntax</b>	<code>clear ipv6 router-advertisement</code> <code>&lt;interface <i>interface</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Clear IPv6 router advertisement counters.
<b>Options</b>	<b>none</b> —Clear IPv6 router advertisement counters for all interfaces.  <b>interface <i>interface</i></b> —(Optional) Clear IPv6 router advertisement counters for the specified interface.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show ipv6 router-advertisement on page 1976</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear ipv6 router-advertisement on page 1972</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear ipv6 router-advertisement

```
user@host> clear ipv6 router-advertisement
```

## show ipv6 neighbors

**Syntax**    `show ipv6 neighbors`  
               `<flags>`  
               `<hostname host-name>`  
               `<interface interface-name>`  
               `<logical-system logical-system-name>`  
               `<reference-count count>`  
               `<tenant name>`  
               `<vpn vpn-name>`

**Release Information**    Command introduced before Junos OS Release 7.4.  
                               Command introduced in Junos OS Release 9.3 for EX Series switches.  
                               Command introduced in Junos OS Release 12.2 for the QFX Series.  
                               Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
                               **flags**, **hostname**, **interface**, **logical-system**, **reference-count**, **tenant**, and **vpn** options added in Junos OS Release 18.3.

**Description**    Display information about the IPv6 neighbor cache.



**NOTE:** Starting with Junos OS Release 16.1, `show ipv6 neighbors` command does not display the underlying ifl information if `enhanced-convergence` statement at `[edit irb unit unit-number]` hierarchy level and `enhanced-ip` statement at `[edit chassis network-services]` hierarchy level is configured for the destination interface IRB.

**Options**    **none**—Display the entries in the IPv6 table.

**flags**—(Optional) Display the flags set, if any.

**hostname *host-name***—(Optional) Display the hostname.

**interface *interface-name***—(Optional) Display information about IPv6 for the specified logical interface

**logical-system *logical-system-name***—(Optional) Display the IPv6 entries for the specified logical system; only available on the main router context.

**reference-count *count***—(Optional) Display the IPv6 next-hop reference count.

**tenant *name***—(Optional) Display the name of the tenant.

**vpn *vpn-name***—(Optional) Display entries in the IPv6 table for the specified virtual private network's (VPN) routing table.

**Required Privilege Level**    view

## Related Documentation

- [clear ipv6 neighbors on page 1970](#)

## List of Sample Output

[show ipv6 neighbors on page 1974](#)  
[show ipv6 neighbors on page 1974](#)

## Output Fields

Table 149 on page 1974 describes the output fields for the **show ipv6 neighbors** command. Output fields are listed in the approximate order in which they appear.

*Table 149: show ipv6 neighbors Output Fields*

Field Name	Field Description
IPv6 Address	Name of the IPv6 interface.
Linklayer Address	Link-layer address.
State	State of the link: <b>up</b> , <b>down</b> , <b>incomplete</b> , <b>reachable</b> , <b>stale</b> , or <b>unreachable</b> .
Exp	Number of seconds until the entry expires.
Rtr	Whether the neighbor is a routing device: <b>yes</b> or <b>no</b> .
Secure	Whether this entry was created using the Secure Neighbor Discovery (SEND) protocol: <b>yes</b> or <b>no</b> .
Interface	Name of the interface.

## Sample Output

### show ipv6 neighbors

```
user@host> show ipv6 neighbors
IPv6 Address      Linklayer Address  State      Exp Rtr Secure
Interface
2001:db8:0:1:2a0:a514:0:24c  00:05:85:8f:c8:bd  stale      546 yes no
fe-1/2/0.1
fe80::2a0:a514:0:24c      00:05:85:8f:c8:bd  stale      258 yes no
fe-1/2/0.1
fe80::2a0:a514:0:64c      00:05:85:8f:c8:bd  stale      111 yes no
fe-1/2/1.5
fe80::2a0:a514:0:a4c      00:05:85:8f:c8:bd  stale      327 yes no
fe-1/2/2.9
```

### show ipv6 neighbors

The command displaying the underlying I2 ifl information when **enhanced-convergence** statement and **enhanced-ip** statement is not configured.

```
IPv6 Address      Linklayer Address  State      Exp Rtr Secure
Interface
23::23:0:0:2      00:00:23:00:00:02  reachable  0   no  no      irb.0
```

[xe-2/2/0.0]

The command not displaying the underlying l2 ifl information when **enhanced-convergence** statement and **enhanced-ip** statement is configured.

IPv6 Address Interface	Linklayer Address	State	Exp	Rtr	Secure	
23::23:0:0:2	00:00:23:00:00:02	reachable	0	no	no	irb.0

## show ipv6 router-advertisement

---

<b>Syntax</b>	<code>show ipv6 router-advertisement</code> <code>&lt;conflicts&gt;</code> <code>&lt;interface <i>interface</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;prefix <i>prefix/prefix length</i>&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 12.2 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display information about IPv6 router advertisements, including statistics about messages sent and received on interfaces, and information received from advertisements from other routers.
<b>Options</b>	<b>none</b> —Display all IPv6 router advertisement information for all interfaces.  <b>conflicts</b> —(Optional) Display only the IPv6 router advertisement information that is conflicting.  <b>interface <i>interface</i></b> —(Optional) Display IPv6 router advertisement information for the specified interface.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>prefix <i>prefix/prefix length</i></b> —(Optional) Display IPv6 router advertisement information for the specified prefix.
<b>Additional Information</b>	The display identifies conflicting information by enclosing the value the router is advertising in brackets.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">clear ipv6 router-advertisement on page 1972</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show ipv6 router-advertisement on page 1977</a> <a href="#">show ipv6 router-advertisement conflicts on page 1978</a> <a href="#">show ipv6 router-advertisement prefix on page 1978</a>
<b>Output Fields</b>	<a href="#">Table 150 on page 1977</a> describes the output fields for the <b>show ipv6 router-advertisement</b> command. Output fields are listed in the approximate order in which they appear.

Table 150: show ipv6 router-advertisement Output Fields

Field Name	Field Description
Interface	Name of the interface.
Advertisements sent	Number of router advertisements sent and the elapsed time since they were sent.
Solicits received	Number of solicitation messages received.
Advertisements received	Number of router advertisements received.
Advertisements from	Names of interfaces from which router advertisements have been received and the elapsed time since the last one was received.
Managed	Managed address configuration flag: 0 (stateless) or 1 (stateful).
Other configuration	Other stateful configuration flag: 0 (stateless) or 1 (stateful).
Reachable time	Time that a node identifies a neighbor as reachable after receiving a reachability confirmation, in milliseconds.
Default lifetime	Default lifetime, in seconds: from 0 seconds to 18.2 hours. A setting of 0 indicates that the router is not a default router.
Retransmit timer	Time between retransmitted Neighbor Solicitation messages, in milliseconds.
Current hop limit	Configured current hop limit.
Prefix	Name and length of the prefix.
Valid lifetime	How long the prefix remains valid for onlink determination.
Preferred lifetime	How long the prefix generated by stateless autoconfiguration remains preferred.
On link	Onlink flag: 0 (not onlink) or 1 (onlink).
Autonomous	Autonomous address configuration flag: 0 (not autonomous) or 1 (autonomous).

## Sample Output

### show ipv6 router-advertisement

```

user@host> show ipv6 router-advertisement
Interface: fe-0/1/1.0
  Advertisements sent: 0
  Solicits received: 0
  Advertisements received: 0
Interface: fxp0.0
  Advertisements sent: 0
  Solicits received: 0
  Advertisements received: 1

```

```

Advertisement from fe80::2d0:b7ff:fe1e:7b0e, heard 00:00:13 ago
Managed: 0
Other configuration: 0 [1]
  Reachable time: 0 ms
  Default lifetime: 1800 sec
  Retransmit timer: 0 ms
  Current hop limit: 64

```

#### show ipv6 router-advertisement conflicts

```

user@host> show ipv6 router-advertisement conflicts
Interface: fxp0.0
  Advertisement from fe80::2d0:b7ff:fe1e:7b0e, heard 00:01:08 ago
  Other configuration: 0 [1]

```

#### show ipv6 router-advertisement prefix

```

user@host> show ipv6 router-advertisement prefix 2001:db8:8040::/16
Interface: fe-0/1/3.0
  Advertisements sent: 3, last sent 00:04:11 ago
  Solicits received: 0
  Advertisements received: 3
  Advertisement from fe80::290:69ff:fe9a:5403, heard 00:00:05 ago
  Managed: 0
  Other configuration: 0
  Reachable time: 0 ms
  Default lifetime: 180 sec [1800 sec]
  Retransmit timer: 0 ms
  Current hop limit: 64
  Prefix: 2001:db8:8040:1::/64
    Valid lifetime: 2592000 sec
    Preferred lifetime: 604800 sec
    On link: 1
    Autonomous: 1

```

## CHAPTER 21

# IS-IS Operational Commands

- clear isis adjacency
- clear isis database
- clear isis overload
- clear isis statistics
- show isis adjacency
- show isis authentication
- show isis backup coverage
- show isis backup label-switched-path
- show isis backup spf results
- show isis context-identifier
- show isis database
- show isis hostname
- show isis interface
- show isis overview
- show isis route
- show isis spf
- show isis statistics

## clear isis adjacency

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1980</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 1980</a>
<b>Syntax</b>	<pre>clear isis adjacency &lt;all&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;neighbor&gt;</pre>
<b>Syntax (EX Series Switches and QFX Series)</b>	<pre>clear isis adjacency &lt;all&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;neighbor&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. <b>all</b> option introduced in Junos OS Release 14.2.
<b>Description</b>	Remove entries from the IS-IS adjacency database.
<b>Options</b>	<p><b>all</b>—Remove all entries from the adjacency database.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear all adjacencies for the specified routing instance only.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear all adjacencies for the specified interface only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>neighbor</b>—(Optional) Clear adjacencies for the specified neighbor only.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show isis adjacency on page 1988</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear isis adjacency on page 1981</a> <a href="#">clear isis adjacency all on page 1981</a>
<b>Output Fields</b>	See <a href="#">show isis adjacency</a> for an explanation of output fields.

## Sample Output

### clear isis adjacency

The following sample output displays IS-IS adjacency database information before and after the **clear isis adjacency** command is entered:

```
user@host> show isis adjacency
IS-IS adjacency database:
Interface      System          L State      Hold (secs) SNPA
so-1/0/0.0     karaku1         3 Up         26
so-1/1/3.0     1921.6800.5080 3 Up         23
so-5/0/0.0     1921.6800.5080 3 Up         19
```

user@host> clear isis adjacency karaku1

```
user@host> show isis adjacency
IS-IS adjacency database:
Interface      System          L State      Hold (secs) SNPA
so-1/0/0.0     karaku1         3 Initializing 26
so-1/1/3.0     1921.6800.5080 3 Up         24
so-5/0/0.0     1921.6800.5080 3 Up         21
```

### clear isis adjacency all

```
user@host> clear isis adjacency all
IS-IS adjacency database:
Interface      System          L State      Hold (secs) SNPA
so-1/0/0.0     karaku1         3 Initializing 26
so-1/1/3.0     1921.6800.5080 3 Initializing 24
so-5/0/0.0     1921.6800.5080 3 Initializing 21
```

## clear isis database

---

<b>List of Syntax</b>	<a href="#">Syntax on page 1982</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 1982</a>
<b>Syntax</b>	<pre>clear isis database &lt;all&gt; &lt;entries&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches and QFX Series)</b>	<pre>clear isis database &lt;all&gt; &lt;entries&gt; &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series. Command introduced in 15.1X53-D30 for QFX10002 switch.
<b>Description</b>	Remove the entries from the IS-IS link-state database, which contains prefixes and topology information.
<b>Options</b>	<b>all</b> —Remove all entries from the IS-IS link-state database for all routing instances.  <b>entries</b> —(Optional) Name of the database entry.  <b>instance <i>instance-name</i></b> —(Optional) Clear all entries for the specified routing instance.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show isis database on page 2005</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear isis database on page 1983</a>
<b>Output Fields</b>	See <a href="#">show isis database</a> for an explanation of output fields.

## Sample Output

### clear isis database

The following sample output displays IS-IS link-state database information before and after the **clear isis database all** command is entered:

```
user@host> show isis database
IS-IS level 1 link-state database:
LSP ID                Sequence Checksum Lifetime (secs)
crater.00-00          0x12   0x84dd             1139
1 LSPs
IS-IS level 2 link-state database:
LSP ID                Sequence Checksum Lifetime (secs)
crater.00-00          0x19   0xe92c             1134
badlands.00-00        0x16   0x1454             985
carlsbad.00-00        0x33   0x220b             1015
ranier.00-00          0x2e   0xfc31             1007
1921.6800.5066.00-00  0x11   0x7313              566
1921.6800.5067.00-00  0x14   0xd9d4              939
6 LSPs

user@host> clear isis database all

user@host> show isis database
IS-IS level 1 link-state database:
LSP ID                Sequence Checksum Lifetime (secs)

IS-IS level 2 link-state database:
LSP ID                Sequence Checksum Lifetime (secs)
```

## clear isis overload

---

List of Syntax	<a href="#">Syntax on page 1984</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 1984</a>
Syntax	<pre>clear isis overload &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
Syntax (EX Series Switches and QFX Series)	<pre>clear isis overload &lt;instance <i>instance-name</i>&gt;</pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>Reset the IS-IS dynamic overload bit. This command can appear to not work, continuing to display <b>overload</b> after execution. The bit is reset only if the root cause is corrected by configuration remotely or locally.</p> <p>When other routers detect that the overload bit is set, they do not use this routing device for transit traffic, but they do use it for packets destined to the overloaded routing device's directly connected networks and IP prefixes.</p>
Options	<p><b>none</b>—Reset the IS-IS dynamic overload bit.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Reset the IS-IS dynamic overload bit for the specified routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show isis database on page 2005</a></li></ul>
List of Sample Output	<a href="#">clear isis overload on page 1985</a>
Output Fields	See <a href="#">show isis database</a> for an explanation of output fields.

## Sample Output

### clear isis overload

The following sample output displays IS-IS database information before and after the **clear isis overload** command is entered:

```
user@host> show isis database
IS-IS level 1 link-state database:
LSP ID                Sequence Checksum Lifetime Attributes
pro3-c.00-00          0x4    0x10db    1185 L1 L2 Overload

  1 LSPs
IS-IS level 2 link-state database:
LSP ID                Sequence Checksum Lifetime Attributes
pro3-c.00-00          0x5    0x429f    1185 L1 L2 Overload

pro2-a.00-00          0x91e   0x2589     874 L1 L2
pro2-a.02-00          0x1     0xcbc     874 L1 L2
  3 LSPs

user@host> clear isis overload

user@host> show isis database
IS-IS level 1 link-state database:
LSP ID                Sequence Checksum Lifetime Attributes
pro3-c.00-00          0xa    0x429e    1183 L1 L2
  1 LSPs

IS-IS level 2 link-state database:
LSP ID                Sequence Checksum Lifetime Attributes
pro3-c.00-00          0xc    0x9c39    1183 L1 L2
pro2-a.00-00          0x91e   0x2589     783 L1 L2
pro2-a.02-00          0x1     0xcbc     783 L1 L2
  3 LSPs
```

## clear isis statistics

---

List of Syntax	<a href="#">Syntax on page 1986</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 1986</a>
Syntax	<code>clear isis statistics</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
Syntax (EX Series Switches and QFX Series)	<code>clear isis statistics</code> <code>&lt;instance <i>instance-name</i>&gt;</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Set statistics about IS-IS traffic to zero.
Options	<b>none</b> —Set IS-IS traffic statistics to zero for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Set IS-IS traffic statistics to zero for the specified routing instance only.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show isis statistics on page 2040</a></li></ul>
List of Sample Output	<a href="#">clear isis statistics on page 1986</a>
Output Fields	See <a href="#">show isis statistics</a> for an explanation of output fields.

## Sample Output

### clear isis statistics

The following sample output displays IS-IS statistics before and after the **clear isis statistics** command is entered:

```
user@host> show isis statistics
IS-IS statistics for merino:
```

PDU type	Received	Processed	Drops	Sent	Rexmit
----------	----------	-----------	-------	------	--------

LSP	12793	12793	0	8666	719
IIH	116751	116751	0	118834	0
CSNP	203956	203956	0	204080	0
PSNP	7356	7350	6	8635	0
Unknown	0	0	0	0	0
Totals	340856	340850	6	340215	719

Total packets received: 340856 Sent: 340934

SNP queue length: 0 Drops: 0  
LSP queue length: 0 Drops: 0

SPF runs: 1064  
Fragments rebuilt: 1087  
LSP regenerations: 436  
Purges initiated: 0

user@host> clear isis statistics

user@host> show isis statistics  
IS-IS statistics for merino:

PDU type	Received	Processed	Drops	Sent	Rexmit
LSP	0	0	0	0	0
IIH	3	3	0	3	0
CSNP	2	2	0	4	0
PSNP	0	0	0	0	0
Unknown	0	0	0	0	0
Totals	5	5	0	7	0

Total packets received: 5 Sent: 7

SNP queue length: 0 Drops: 0  
LSP queue length: 0 Drops: 0

SPF runs: 0  
Fragments rebuilt: 0  
LSP regenerations: 0  
Purges initiated: 0

## show isis adjacency

---

**List of Syntax**    [Syntax on page 1988](#)  
                         [Syntax \(EX Series Switches and QFX Series\) on page 1988](#)

**Syntax**    show isis adjacency  
                 <system-id>  
                 <brief | detail | extensive>  
                 <instance *instance-name*>  
                 <logical-system (all | *logical-system-name*)>

**Syntax (EX Series Switches and QFX Series)**    show isis adjacency  
                         <system-id>  
                         <brief | detail | extensive>  
                         <instance *instance-name*>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                         Command introduced in Junos OS Release 9.0 for EX Series switches.  
                         Command introduced in Junos OS Release 12.1 for the QFX Series.  
                         Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Display information about IS-IS neighbors.

**Options**    **none**—Display standard information about IS-IS neighbors for all routing instances.

**system id**—(Optional) Display information about IS-IS neighbors for the specified intermediate system.

**brief | detail | extensive**—(Optional) Display standard information about IS-IS neighbors with the specified level of output.

**instance *instance-name***—(Optional) Display information about IS-IS neighbors for the specified routing instance.

**logical-system (all | *logical-system-name*)**—(Optional) Display information about IS-IS neighbors for all logical systems or for a particular logical system.

**Required Privilege Level**    view

**Related Documentation**    • [clear isis adjacency on page 1980](#)

**List of Sample Output**    [show isis adjacency on page 1991](#)  
                         [show isis adjacency brief on page 1991](#)  
                         [show isis adjacency detail on page 1992](#)  
                         [show isis adjacency extensive on page 1992](#)

**Output Fields** Table 151 on page 1989 describes the output fields for the **show isis adjacency** command. Output fields are listed in the approximate order in which they appear.

*Table 151: show isis adjacency Output Fields*

Field Name	Field Description	Level of Output
<b>Interface</b>	Interface through which the neighbor is reachable.	All levels
<b>System</b>	System identifier ( <b>sysid</b> ), displayed as a name, if possible.	<b>brief</b>
<b>L or Level</b>	Level: <ul style="list-style-type: none"> <li>• 1—Level 1 only</li> <li>• 2—Level 2 only</li> <li>• 3—Level 1 and Level 2</li> </ul> An exclamation point (!) preceding the level number indicates that the adjacency is missing an IP address.	All levels
<b>State</b>	State of the adjacency: <b>Up</b> , <b>Down</b> , <b>New</b> , <b>One-way</b> , <b>Initializing</b> , or <b>Rejected</b> .	All levels
<b>Hold (secs)</b>	Remaining hold time of the adjacency.	<b>brief</b>
<b>SNPA</b>	Subnetwork point of attachment (MAC address of the next hop).	<b>brief</b>
<b>Expires in</b>	How long until the adjacency expires, in seconds.	<b>detail</b>
<b>Priority</b>	Priority to become the designated intermediate system.	<b>detail extensive</b>
<b>Up/Down transitions</b>	Count of adjacency status changes from <b>Up</b> to <b>Down</b> or from <b>Down</b> to <b>Up</b> .	<b>detail</b>
<b>Last transition</b>	Time of the last <b>Up/Down</b> transition.	<b>detail</b>
<b>Circuit type</b>	Bit mask of levels on this interface: 1=Level 1 router; 2=Level 2 router; 3=both Level 1 and Level 2 router.	<b>detail</b>
<b>Speaks</b>	Protocols supported by this neighbor.	<b>detail extensive</b>
<b>MAC address</b>	MAC address of the interface.	<b>detail extensive</b>
<b>Topologies</b>	Supported topologies.	<b>detail extensive</b>
<b>Restart capable</b>	Whether a neighbor is capable of graceful restart: <b>Yes</b> or <b>No</b> .	<b>detail extensive</b>
<b>Adjacency advertisement: Advertise</b>	This routing device has signaled to advertise this interface to its neighbors in their link-state PDUs.	<b>detail extensive</b>
<b>Adjacency advertisement: Suppress</b>	This neighbor has signaled not to advertise the interface in the routing device's outbound link-state PDUs.	<b>detail extensive</b>

*Table 151: show isis adjacency Output Fields (continued)*

Field Name	Field Description	Level of Output
<b>IP addresses</b>	IP address of this neighbor.	<b>detail extensive</b>
IPv6 Address	IPv6 address of the neighbor.	<b>detail extensive</b>
Level 1 IPv4 Adj-SID	Level 1 IPv4 node-SID of the adjacent neighbor.	<b>detail extensive</b>
Level 1 IPv6 Adj-SID	Level 1 IPv6 node-SID of the adjacent neighbor.	
Level 2 IPv4 Adj-SID	Level 2 IPv4 node-SID of the adjacent neighbor.	<b>detail extensive</b>
Level 2 IPv6 Adj-SID	Level 2 IPv6 node-SID of the adjacent neighbor.	<b>detail extensive</b>

Table 151: show isis adjacency Output Fields (continued)

Field Name	Field Description	Level of Output
Transition log	<p>List of recent transitions, including:</p> <ul style="list-style-type: none"> <li>• <b>When</b>—Time at which an IS-IS adjacency transition occurred.</li> <li>• <b>State</b>—Current state of the IS-IS adjacency (<b>up</b>, <b>down</b>, or <b>rejected</b>). <ul style="list-style-type: none"> <li>• <b>Up</b>—Adjacency is up and operational.</li> <li>• <b>Down</b>—Adjacency is down and not available.</li> <li>• <b>Rejected</b>—Adjacency has been rejected.</li> </ul> </li> <li>• <b>Event</b>—Type of transition that occurred. <ul style="list-style-type: none"> <li>• <b>Seenself</b>—Possible routing loop has been detected.</li> <li>• <b>Interface down</b>—IS-IS interface has gone down and is no longer available.</li> <li>• <b>Error</b>—Adjacency error.</li> </ul> </li> <li>• <b>Down reason</b>—Reason that an IS-IS adjacency is down: <ul style="list-style-type: none"> <li>• <b>3-Way Handshake Failed</b>—Connection establishment failed.</li> <li>• <b>Address Mismatch</b>—Address mismatch caused link failure.</li> <li>• <b>Aged Out</b>—Link expired.</li> <li>• <b>ISO Area Mismatch</b>—IS-IS area mismatch caused link failure.</li> <li>• <b>Bad Hello</b>—Unacceptable hello message caused link failure.</li> <li>• <b>BFD Session Down</b>—Bidirectional failure detection caused link failure.</li> <li>• <b>Interface Disabled</b>—IS-IS interface is disabled.</li> <li>• <b>Interface Down</b>—IS-IS interface is unavailable.</li> <li>• <b>Interface Level Disabled</b>—IS-IS level is disabled.</li> <li>• <b>Level Changed</b>—IS-IS level has changed on the adjacency.</li> <li>• <b>Level Mismatch</b>—Levels on adjacency are not compatible.</li> <li>• <b>MPLS LSP Down</b>—Label-switched path (LSP) is unavailable.</li> <li>• <b>MT Topology Changed</b>—IS-IS topology has changed.</li> <li>• <b>MT Topology Mismatch</b>—IS-IS topology is mismatched.</li> <li>• <b>Remote System ID Changed</b>—Adjacency peer system ID changed.</li> <li>• <b>Protocol Shutdown</b>—IS-IS protocol is disabled.</li> <li>• <b>CLI Command</b>—Adjacency brought down by user.</li> <li>• <b>Unknown</b>—Unknown.</li> </ul> </li> </ul>	extensive

## Sample Output

### show isis adjacency

```

user@host> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
at-2/3/0.0         ranier      3 Up          23

```

### show isis adjacency brief

The output for the **show isis adjacency brief** command is identical to that for the **show isis adjacency** command. For sample output, see [show isis adjacency on page 1991](#).

### show isis adjacency detail

```
user@host> show isis adjacency detail
ranier
  Interface: at-2/3/0.0, Level: 3, State: Up, Expires in 21 secs
  Priority: 0, Up/Down transitions: 1, Last transition: 00:01:09 ago
  Circuit type: 3, Speaks: IP, IPv6
  Topologies: Unicast, IPV6-Unicast Restart capable: Yes, Adjacency advertisement:
  Advertise
  LAN id: pro-bng3-c-F.02, IP addresses: 11.1.1.2
  IPv6 addresses: fe80::2a0:a514:0:4745
  Level 1 IPv4 Adj-SID: 299808, IPv6 Adj-SID: 299824
```

### show isis adjacency extensive

```
user@host> show isis adjacency extensive
ranier
  Interface: at-2/3/0.0, Level: 3, State: Up, Expires in 22 secs
  Priority: 0, Up/Down transitions: 1, Last transition: 00:01:16 ago
  Circuit type: 3, Speaks: IP, IPv6

  Topologies: Unicast, IPV6-Unicast
  Restart capable: Yes, Adjacency advertisement: Advertise
  IP addresses: 11.1.1.2
  IPv6 addresses: fe80::2a0:a514:0:3e45
  Level 1 IPv4 Adj-SID: 300112, IPv6 Adj-SID: 300304
  Level 2 IPv4 Adj-SID: 300320, IPv6 Adj-SID: 300336
  Transition log:
  When                State      Event      Down reason
  Thu Mar 26 06:13:18  Up        Seenself
```

## show isis authentication

**List of Syntax** [Syntax on page 1993](#)  
[Syntax \(EX Series Switches and QFX Series\) on page 1993](#)

**Syntax** `show isis authentication`  
`<instance instance-name>`  
`<logical-system (all | logical-system-name)>`

**Syntax (EX Series Switches and QFX Series)** `show isis authentication`  
`<instance instance-name>`

**Release Information** Command introduced in Junos OS Release 7.5.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 Support for hitless authentication key rollover introduced in Junos OS Release 11.2.  
 Command introduced in Junos OS Release 12.1 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display information about Intermediate System-to-Intermediate System (IS-IS) authentication.

**Options** **none**—Display information about IS-IS authentication.

**instance *instance-name***—(Optional) Display IS-IS authentication for the specified routing instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level** view

**Related Documentation**

- [show security keychain](#)

**List of Sample Output** [show isis authentication on page 1994](#)  
[show isis authentication \(With Hitless Authentication Key Rollover Configured\) on page 1994](#)

**Output Fields** [Table 152 on page 1993](#) describes the output fields for the **show isis authentication** command. Output fields are listed in the approximate order in which they appear.

*Table 152: show isis authentication Output Fields*

Field Name	Field Description
<b>Interface</b>	Interface name.

*Table 152: show isis authentication Output Fields (continued)*

Field Name	Field Description
<b>Level</b>	IS-IS level.
<b>IIH Auth</b>	IS-IS Hello (IIH) packet authentication type.  Displays the name of the active keychain if hitless authentication key rollover is configured.
<b>CSN Auth</b>	Complete sequence number authentication type.
<b>PSN Auth</b>	Partial sequence number authentication type.
<b>L1 LSP Authentication</b>	Layer 1 link-state PDU authentication type.
<b>L2 LSP Authentication</b>	Layer 2 link-state PDU authentication type.

## Sample Output

### show isis authentication

```

user@host> show isis authentication
Interface          Level IIH Auth  CSN Auth  PSN Auth
at-2/3/0.0         1    Simple     Simple    Simple
                   2     MD5        MD5       MD5

L1 LSP Authentication: Simple
L2 LSP Authentication: MD5

```

### show isis authentication (With Hitless Authentication Key Rollover Configured)

```

user@host> show isis authentication
Interface          Level IIH Auth  CSN Auth  PSN Auth
so-0/1/3.0         2    hakrhello MD5       MD5

L2 LSP Authentication: MD5

```

## show isis backup coverage

<b>Syntax</b>	show isis backup coverage <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switches and QFX Series)</b>	show isis backup coverage <instance <i>instance-name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 9.5. Command introduced in Junos OS Release 9.5 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display information about the level of backup coverage available.
<b>Options</b>	<p><b>none</b>—Display information about the level of backup coverage available for all the nodes and prefixes in the network.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information about the level of backup coverage for a specific IS-IS routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding Loop-Free Alternate Routes for IS-IS</i></li> <li>• <i>Example: Configuring Node-Link Protection for IS-IS Routes in a Layer 3 VPN</i></li> <li>• <a href="#">show isis backup label-switched-path on page 1997</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show isis backup coverage on page 1996</a>
<b>Output Fields</b>	<p><a href="#">Table 153 on page 1995</a> lists the output fields for the <b>show isis backup coverage</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 153: show isis backup coverage Output Fields*

Field Name	Field Description
Topology	Type of topology or address family: <b>IPV4 Unicast</b> or <b>IPV6 Unicast</b> .

*Table 153: show isis backup coverage Output Fields (continued)*

Field Name	Field Description
<b>Level</b>	IS-IS level: <ul style="list-style-type: none"> <li>• 1—Level 1</li> <li>• 2—Level 2</li> </ul>
<b>Node</b>	By topology, the percentage of all routes configured on the node that are protected through backup coverage.
<b>IPv4</b>	Percentage of IPv4 unicast routes that are protected through backup coverage.
<b>IPv6</b>	Percentage of IPv6 unicast routes that are protected through backup coverage.
<b>CLNS</b>	Percentage of Connectionless Network Service (CLNS) routes that are protected through backup coverage.

## Sample Output

### show isis backup coverage

```

user@host> show isis backup coverage
Backup Coverage:
  Topology   Level1  Node   IPv4   IPv6   CLNS
  IPV4 Unicast  2  28.57% 22.22% 0.00% 0.00%
  IPV6 Unicast  2   0.00% 0.00% 0.00% 0.00%

```

## show isis backup label-switched-path

<b>Syntax</b>	<b>show isis backup label-switched-path</b> <b>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</b>
<b>Syntax (EX Series Switches and QFX Series)</b>	<b>show isis backup label-switched-path</b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.5. Command introduced in Junos OS Release 9.5 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display information about MPLS label-switched-paths (LSPs) designated as backup routes for IS-IS routes.
<b>Options</b>	<b>none</b> —Display information about MPLS LSPs designated as backup routes for IS-IS routes.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Understanding Loop-Free Alternate Routes for IS-IS</i></li> <li>• <i>Example: Configuring Node-Link Protection for IS-IS Routes in a Layer 3 VPN</i></li> <li>• <a href="#">show isis backup coverage on page 1995</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show isis backup label-switched-path on page 1998</a>
<b>Output Fields</b>	<a href="#">Table 154 on page 1997</a> lists the output fields for the <b>show isis backup label-switched-path</b> command. Output fields are listed in the approximate order in which they appear.

*Table 154: show isis backup label-switched-path Output Fields*

Field Name	Field Description
<b>Backup MPLS LSPs</b>	List of MPLS LSPs designated as backup paths for IS-IS routes.
<b>Egress</b>	IP address of the egress routing device for the LSP.

Table 154: *show isis backup label-switched-path* Output Fields (continued)

Field Name	Field Description
Status	State of the LSP: <ul style="list-style-type: none"><li>• <b>Up</b>—The routing device can detect RSVP hello messages from the neighbor.</li><li>• <b>Down</b>—The routing device has received one of the following indications:<ul style="list-style-type: none"><li>• Communication failure from the neighbor.</li><li>• Communication from IGP that the neighbor is unavailable.</li><li>• Change in the sequence numbers in the RSVP hello messages sent by the neighbor.</li></ul></li><li>• <b>Deleted</b>—LSP is no longer available as a backup path.</li></ul>
Last change	Time elapsed since the neighbor state changed either from up to down or from down to up. The format is <i>hh:mm:ss</i> .
TE-metric	Configured traffic engineering metric.
Metric	Configured metric.

## Sample Output

### show isis backup label-switched-path

```
user@host> show isis backup label-switched-path
Backup MPLS LSPs:
f-to-g, Egress: 192.168.1.4, Status: up, Last change: 06:12:03
TE-metric: 9, Metric: 0
```

## show isis backup spf results

<b>Syntax</b>	<pre>show isis backup spf results &lt;instance <i>instance-name</i>&gt; &lt;level (1   2)&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;no-coverage&gt; &lt;topology (ipv4-unicast   ipv6-multicast   ipv6-unicast   unicast)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show isis backup spf results &lt;instance <i>instance-name</i>&gt; &lt;level (1   2)&gt; &lt;no-coverage&gt; &lt;topology (ipv4-unicast   unicast)&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 9.5.
<b>Description</b>	Display information about IS-IS shortest-path-first (SPF) calculations for backup paths.
<b>Options</b>	<p><b>none</b>—Display information about IS-IS SPF calculations for all backup paths for all destination nodes.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display SPF calculations for backup paths for the specified routing instance.</p> <p><b>level (1   2)</b>—(Optional) Display SPF calculations for the backup paths for the specified IS-IS level.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display SPF calculations for the backup paths for all logical systems or on a particular logical system.</p> <p><b>no-coverage</b>—(Optional) Display SPF calculations only for destinations that do not have backup coverage.</p> <p><b>topology (ipv4-multicast   ipv6-multicast   ipv6-unicast   unicast)</b>—(Optional) Display SPF calculations for backup paths for the specified topology only.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Example: Configuring Link and Node Protection for IS-IS Routes</i></li> <li>• <a href="#">show isis backup coverage on page 1995</a></li> <li>• <i>Understanding Loop-Free Alternate Routes for IS-IS</i></li> <li>• <i>Example: Configuring Node-Link Protection for IS-IS Routes in a Layer 3 VPN</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show isis backup spf results on page 2000</a>

### show isis backup spf results no-coverage on page 2001

**Output Fields** Table 155 on page 2000 lists the output fields for the **show isis backup spf results** command. Output fields are listed in the approximate order in which they appear.

*Table 155: show isis backup spf results Output Fields*

Field Name	Field Description
<b>node-name</b>	Name of the destination node.
<b>Address</b>	Address of the destination node.
<b>Primary next-hop</b>	Interface and name of the node of the primary next hop to reach the destination.
<b>Root</b>	Name of the next-hop neighbor.
<b>Metric</b>	Metric to the node.
<b>Eligible</b>	Indicates that the next-hop neighbor has been designated as a backup path to the destination node.
<b>Backup next-hop</b>	Name of the interface of the backup next hop.
<b>SNPA</b>	Subnetwork point of attachment (MAC address of the next hop).
<b>LSP</b>	Name of the MPLS label-switched path (LSP) designated as a backup path.
<b>Not eligible</b>	Indicates that the next-hop neighbor cannot function as a backup path to the destination.
<b>Reason</b>	Describes why the next-hop neighbor is designated as <b>Not eligible</b> as a backup path.

## Sample Output

### show isis backup spf results

```

user@host> show isis backup spf results

IS-IS level 1 SPF results:
  0 nodes

IS-IS level 2 SPF results:
banff.00
  Primary next-hop: so-6/0/0.0, IPV4, olympic
  Primary next-hop: ae0.0, IPV4, camaro, SNPA: 0:90:69:f:67:f0
  Primary next-hop: so-6/0/0.0, IPV6, olympic
  Primary next-hop: ae0.0, IPV6, camaro, SNPA: 0:90:69:f:67:f0
    Root: camaro, Root Metric: 10, Metric: 10
    Not eligible, Reason: Primary next-hop multipath
    Root: olympic, Root Metric: 10, Metric: 10

```

```

    Not eligible, Reason: Primary next-hop multipath
    Root: glacier, Root Metric: 10, Metric: 25
    Not eligible, Reason: Primary next-hop multipath
crater.00
    Primary next-hop: so-6/0/0.0, IPV4, olympic
    Primary next-hop: so-6/0/0.0, IPV6, olympic
    Root: olympic, Root Metric: 10, Metric: 10
    Not eligible, Reason: Primary next-hop link fate sharing
    Root: glacier, Root Metric: 10, Metric: 15
    Eligible, Backup next-hop: as0.0, IPV4, glacier
    Eligible, Backup next-hop: as0.0, IPV6, glacier
    Root: camaro, Root Metric: 10, Metric: 20
    Not eligible, Reason: Interface is already covered
olympic.00
    Primary next-hop: so-6/0/0.0, IPV4, olympic
    Primary next-hop: so-6/0/0.0, IPV6, olympic
    Root: olympic, Root Metric: 10, Metric: 0
    Not eligible, Reason: Primary next-hop link fate sharing
    Root: camaro, Root Metric: 10, Metric: 20
    track-item: olympic.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
    Root: glacier, Root Metric: 10, Metric: 20
    track-item: olympic.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
camaro.00
    Primary next-hop: ae0.0, IPV4, camaro, SNPA: 0:90:69:f:67:f0
    Primary next-hop: ae0.0, IPV6, camaro, SNPA: 0:90:69:f:67:f0
    Root: camaro, Root Metric: 10, Metric: 0
    Not eligible, Reason: Primary next-hop link fate sharing
    Root: glacier, Root Metric: 10, Metric: 20
    track-item: camaro.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
    Root: olympic, Root Metric: 10, Metric: 20
    track-item: camaro.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
glacier.00
    Primary next-hop: as0.0, IPV4, glacier
    Primary next-hop: as0.0, IPV6, glacier
    Root: glacier, Root Metric: 10, Metric: 0
    Not eligible, Reason: Primary next-hop link fate sharing
    Root: camaro, Root Metric: 10, Metric: 20
    track-item: glacier.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
    Root: olympic, Root Metric: 10, Metric: 20
    track-item: glacier.00-00
    track-item: kobuk.00-00
    Not eligible, Reason: Path loops
5 nodes

```

#### show isis backup spf results no-coverage

```

user@host> show isis backup spf results no-coverage
IS-IS level 1 SPF results:
pro-bng3-k.00
    Primary next-hop: fe-1/3/3.0, IPV4, pro-bng3-k, SNPA: b0:c6:9a:2c:f0:de
    Primary next-hop: fe-1/3/3.0, IPV6, pro-bng3-k, SNPA: b0:c6:9a:2c:f0:de

```

```

Root: pro-bng3-k, Root Metric: 10, Metric: 0, Root Preference: 0x0
Root: pro-bng3-i, Root Metric: 10, Metric: 20, Root Preference: 0x0
  track-item: pro-bng3-k.00-00
  track-item: pro-bng3-j.00-00
pro-bng3-i.00
Primary next-hop: fe-0/1/2.0, IPV4, pro-bng3-i, SNPA: b0:c6:9a:2a:f4:21
Primary next-hop: fe-0/1/2.0, IPV6, pro-bng3-i, SNPA: b0:c6:9a:2a:f4:21
Root: pro-bng3-i, Root Metric: 10, Metric: 0, Root Preference: 0x0
Root: pro-bng3-k, Root Metric: 10, Metric: 20, Root Preference: 0x0
  track-item: pro-bng3-j.00-00
  track-item: pro-bng3-i.00-00
2 nodes

```

IS-IS level 2 SPF results:

```

olympic.00
Primary next-hop: so-6/0/0.0, IPV4, olympic
Primary next-hop: so-6/0/0.0, IPV6, olympic
Root: olympic, Root Metric: 10, Metric: 0
  Not eligible, Reason: Primary next-hop link fate sharing
Root: camaro, Root Metric: 10, Metric: 20
  track-item: olympic.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
Root: glacier, Root Metric: 10, Metric: 20
  track-item: olympic.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
camaro.00
Primary next-hop: ae0.0, IPV4, camaro, SNPA: 0:90:69:f:67:f0
Primary next-hop: ae0.0, IPV6, camaro, SNPA: 0:90:69:f:67:f0
Root: camaro, Root Metric: 10, Metric: 0
  Not eligible, Reason: Primary next-hop link fate sharing
Root: glacier, Root Metric: 10, Metric: 20
  track-item: camaro.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
Root: olympic, Root Metric: 10, Metric: 20
  track-item: camaro.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
glacier.00
Primary next-hop: as0.0, IPV4, glacier
Primary next-hop: as0.0, IPV6, glacier
Root: glacier, Root Metric: 10, Metric: 0
  Not eligible, Reason: Primary next-hop link fate sharing
Root: camaro, Root Metric: 10, Metric: 20
  track-item: glacier.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
Root: olympic, Root Metric: 10, Metric: 20
  track-item: glacier.00-00
  track-item: kobuk.00-00
  Not eligible, Reason: Path loops
3 nodes

```

## show isis context-identifier

**Syntax** show isis context-identifier  
 <brief | detail | extensive>  
 <identifier name>  
 <instance instance-name>  
 <logical-system (all | logical-system-name)>

**Release Information** Command introduced in Junos OS Release 10.4.

**Description** Display IS-IS context identifier information.

**Options** **brief | detail | extensive**—(Optional) Display the specified level of output.

**identifier name**—(Optional) Display information about the specified context identifier.

**instance instance-name**—(Optional) Display entries for the specified routing instance.

**logical-system (all | logical-system-name)**—(Optional) Display the context identifier information for all logical systems or for a particular logical system.

**Required Privilege Level** View

**Output Fields** [Table 156 on page 2003](#) lists the output fields for the **show isis context-identifier** command. Output fields are listed in the approximate order in which they appear.

*Table 156: show isis context-identifier Output Fields*

Field Name	Field Description	Level of Output
Context	IPv4 address that defines a protection pair. The context is manually configured on both primary and protector PEs.	detail
Owner	Protocol that requires the context.	detail
Role	Role of the PE, which is either primary or protector.	detail
Primary	Name of the primary PE.	detail
Metric	Advertised interior gateway protocol (IGP) metric.	detail

## Sample Output

```
user@host> show isis context-identifier detail
```

```
IS-IS context database:
```

```
Context      Owner    Role    Primary    Metric
2.2.4.3      MPLS     Primary pro3-e     1
```

Advertiser pro3-e, Router ID 10.255.245.198, Metric 1, Level 1  
Advertiser pro3-e, Router ID 10.255.245.198, Metric 1, Level 2  
Advertiser pro3-c, Router ID 10.255.245.196, Metric 11, Level 2

## show isis database

**List of Syntax**    [Syntax on page 2005](#)  
                          [Syntax \(EX Series Switches and QFX Series\) on page 2005](#)

**Syntax**    show isis database  
                  <system-id>  
                  <brief | detail | extensive>  
                  <instance *instance-name*>  
                  <level (1 | 2)>  
                  <logical-system (all | *logical-system-name*)>

**Syntax (EX Series Switches and QFX Series)**    show isis database  
                  <system-id>  
                  <brief | detail | extensive>  
                  <level (1 | 2)>  
                  <instance *instance-name*>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Command introduced in Junos OS Release 9.0 for EX Series switches.  
                                  Command introduced in Junos OS Release 12.1 for the QFX Series.  
                                  Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
                                  Command introduced in Junos OS Release 15.1X53-D30 for the QFX10002 switch.

**Description**    Display the entries in the Intermediate System-to-Intermediate System (IS-IS) link-state database, which contains data about PDU packets.

**Options**    **none**—Display standard information about IS-IS link-state database entries for all routing instances.

**system id**—(Optional) Display IS-IS link-state database entries for the specified intermediate system.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**instance *instance-name***—(Optional) Display IS-IS link-state database entries for the specified routing instance.

**level (1 | 2)**—(Optional) Display IS-IS link-state database entries for the specified IS-IS level.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level**    view

**Related Documentation**    • [clear isis database on page 1982](#)

**List of Sample Output** [show isis database on page 2007](#)  
[show isis database brief on page 2008](#)  
[show isis database detail on page 2008](#)  
[show isis database extensive on page 2009](#)  
[show isis database extensive \(SPRING\) on page 2018](#)

**Output Fields** [Table 157 on page 2006](#) describes the output fields for the **show isis database** command. Output fields are listed in the approximate order in which they appear. Fields that contain internal IS-IS information useful only in troubleshooting obscure problems are not described in the table. For more details about these fields, contact your customer support representative.

*Table 157: show isis database Output Fields*

Field Name	Field Description	Level of Output
<b>Interface name</b>	Name of the interface on which the link-state PDU has been received; always <b>IS-IS</b> for this command.	All levels
level	Level of intermediate system: <ul style="list-style-type: none"> <li>• 1—Intermediate system routes within an area; when the destination is outside an area, it routes toward a Level 2 system.</li> <li>• 2—Intermediate system routes between areas and toward other ASs.</li> </ul>	All levels
LSP ID	Link-state PDU identifier.	All levels
Sequence	Sequence number of the link-state PDU.	All levels
Checksum	Checksum value of the link-state PDU.	All levels
Lifetime (secs)	Remaining lifetime of the link-state PDU, in seconds.	All levels
Attributes	Attributes of the specified database: <b>L1</b> , <b>L2</b> , <b>Overload</b> , or <b>Attached</b> (L1 only).	none <b>brief</b>
# LSPs	Total number of link-state PDUs in the specified link-state database.	none <b>brief</b>
IP prefix	Prefix advertised by this link-state PDU.	<b>detail extensive</b>
IS neighbor	IS-IS neighbor of the advertising system.	<b>detail extensive</b>
IP prefix	IPv4 prefix advertised by this link-state PDU.	<b>detail extensive</b>
V6 prefix	IPv6 prefix advertised by this link-state PDU.	<b>detail extensive</b>
Metric	Metric of the prefix or neighbor.	<b>detail extensive</b>

Table 157: show isis database Output Fields (continued)

Field Name	Field Description	Level of Output
Header	<ul style="list-style-type: none"> <li>• <b>LSP ID</b>—Link state PDU identifier of the header.</li> <li>• <b>Length</b>—Header length.</li> <li>• <b>Allocated Length</b>—Amount of length available for the header.</li> <li>• <b>Router ID</b>—Address of the local routing device.</li> <li>• <b>Remaining Lifetime</b>—Remaining lifetime of the link-state PDU, in seconds.</li> </ul>	extensive
Packet	<ul style="list-style-type: none"> <li>• <b>LSP ID</b>—The identifier for the link-state PDU.</li> <li>• <b>Length</b>—Packet length.</li> <li>• <b>Lifetime</b>—Remaining lifetime, in seconds.</li> <li>• <b>Checksum</b>—The checksum of the link-state PDU.</li> <li>• <b>Sequence</b>—The sequence number of the link-state PDU. Every time the link-state PDU is updated, this number increments.</li> <li>• <b>Attributes</b>—Packet attributes.</li> <li>• <b>NLPID</b>—Network layer protocol identifier.</li> <li>• <b>Fixed length</b>—Specifies the set length for the packet.</li> </ul>	extensive
TLVs	<ul style="list-style-type: none"> <li>• <b>Area Address</b>—Area addresses that the routing device can reach.</li> <li>• <b>Speaks</b>—Supported routing protocols.</li> <li>• <b>IP router id</b>—ID of the routing device (usually the IP address).</li> <li>• <b>IP address</b>—IPv4 address.</li> <li>• <b>Hostname</b>—Assigned name of the routing device.</li> <li>• <b>IP prefix</b>—IP prefix of the routing device.</li> <li>• <b>Metric</b>—IS-IS metric that measures the cost of the adjacency between the originating routing device and the advertised routing device.</li> <li>• <b>IP extended prefix</b>—Extended IP prefix of the routing device.</li> <li>• <b>IS neighbor</b>—Directly attached neighbor's name and metric.</li> <li>• <b>IS extended neighbor</b>—Directly attached neighbor's name, metric, IP address, local interface index, and remote interface index.  The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.</li> <li>• <b>Router Capability</b>—ID of the routing device and flag.  <b>NOTE:</b> Router capability also specifies SPRING capability and SPRING algorithm when segment routing is enabled on the routing device.</li> </ul>	extensive
Extended IS Reachability TLV	Type and length of the TLV is useful to identify the IS extended neighbors packed in this TLV.	extensive
SubTLV len	The length of the SubTLV of IS extended neighbor.	extensive

## Sample Output

### show isis database

```

user@host> show isis database
IS-IS level 1 link-state database:
LSP ID                               Sequence Checksum Lifetime Attributes

```

kobuk.00-00	0x3	0x3167	1057	L1	L2
camaro.00-00	0x5	0x770e	1091	L1	L2
ranier.00-00	0x4	0xaa95	1091	L1	L2
glacier.00-00	0x4	0x206f	1089	L1	L2
glacier.02-00	0x1	0xd141	1089	L1	L2
badlands.00-00	0x3	0x87a2	1093	L1	L2

6 LSPs

IS-IS level 2 link-state database:

LSP ID	Sequence	Checksum	Lifetime	Attributes
kobuk.00-00	0x6	0x8d6b	1096	L1 L2
camaro.00-00	0x9	0x877b	1101	L1 L2
ranier.00-00	0x8	0x855d	1103	L1 L2
glacier.00-00	0x7	0xf892	1098	L1 L2
glacier.02-00	0x1	0xd141	1089	L1 L2
badlands.00-00	0x6	0x562	1105	L1 L2

6 LSPs

### show isis database brief

The output for the **show isis database brief** command is identical to that for the **show isis database** command. For sample output, see [show isis database on page 2007](#).

### show isis database detail

user@host> show isis database logical-system CE3 sisira.00-00 detail

IS-IS level 1 link-state database:

sisira.00-00 Sequence: 0x11, Checksum: 0x10fc, Lifetime: 975 secs

IS neighbor: hemantha-CE3.02	Metric:	10
ES neighbor: 0015.0015.0015	Metric:	10 Down
ES neighbor: 0025.0025.0025	Metric:	10 Down
ES neighbor: 0030.0030.0030	Metric:	10 Down
ES neighbor: 0040.0040.0040	Metric:	10 Down
ES neighbor: sisira	Metric:	0
IP prefix: 1.0.0.0/24	Metric:	10 External Down
IP prefix: 3.0.0.0/24	Metric:	10 External Down
IP prefix: 4.0.0.0/24	Metric:	10 External Down
IP prefix: 5.0.0.0/24	Metric:	10 Internal Up
IP prefix: 15.15.15.15/32	Metric:	10 External Down
IP prefix: 25.25.25.25/32	Metric:	10 External Down
IP prefix: 30.30.30.30/32	Metric:	10 External Down
IP prefix: 40.40.40.40/32	Metric:	10 External Down
IP prefix: 60.60.60.60/32	Metric:	0 Internal Up

IS-IS level 2 link-state database:

sisira.00-00 Sequence: 0x13, Checksum: 0x69ac, Lifetime: 993 secs

IS neighbor: hemantha-CE3.02	Metric:	10
IP prefix: 1.0.0.0/24	Metric:	10 External Down
IP prefix: 3.0.0.0/24	Metric:	10 External Down
IP prefix: 4.0.0.0/24	Metric:	10 External Down
IP prefix: 5.0.0.0/24	Metric:	10 Internal Up
IP prefix: 15.15.15.15/32	Metric:	10 External Down
IP prefix: 25.25.25.25/32	Metric:	10 External Down
IP prefix: 30.30.30.30/32	Metric:	10 External Down
IP prefix: 40.40.40.40/32	Metric:	10 External Down
IP prefix: 50.50.50.50/32	Metric:	10 Internal Up
IP prefix: 60.60.60.60/32	Metric:	0 Internal Up

```

ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0015.0015.0015/152
Metric: 10 External Down
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0025.0025.0025/152
Metric: 10 External Down
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0030.0030.0030/152
Metric: 10 External Down
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0040.0040.0040/152
Metric: 10 External Down
ISO prefix: 60.0006.80ff.f800.0000.0108.0001.0060.0060.0060/152
Metric: 0 Internal Up

```

### show isis database extensive

```
user@host> show isis database extensive
```

IS-IS level 1 link-state database:

```

sisira.00-00 Sequence: 0x11, Checksum: 0x10fc, Lifetime: 970 secs
IS neighbor: hemantha-CE3.02 Metric: 10
Two-way fragment: hemantha-CE3.02-00, Two-way first fragment:
hemantha-CE3.02-00
ES neighbor: 0015.0015.0015 Metric: 10 Down
ES neighbor: 0025.0025.0025 Metric: 10 Down
ES neighbor: 0030.0030.0030 Metric: 10 Down
ES neighbor: 0040.0040.0040 Metric: 10 Down
ES neighbor: sisira Metric: 0
IP prefix: 1.0.0.0/24 Metric: 10 External Down
IP prefix: 3.0.0.0/24 Metric: 10 External Down
IP prefix: 4.0.0.0/24 Metric: 10 External Down
IP prefix: 5.0.0.0/24 Metric: 10 Internal Up
IP prefix: 15.15.15.15/32 Metric: 10 External Down
IP prefix: 25.25.25.25/32 Metric: 10 External Down
IP prefix: 30.30.30.30/32 Metric: 10 External Down
IP prefix: 40.40.40.40/32 Metric: 10 External Down
IP prefix: 60.60.60.60/32 Metric: 0 Internal Up

```

```

Header: LSP ID: sisira.00-00, Length: 336 bytes
Allocated length: 336 bytes, Router ID: 0.0.0.0
Remaining lifetime: 970 secs, Level: 1, Interface: 333
Estimated free bytes: 144, Actual free bytes: 0
Aging timer expires in: 970 secs
Protocols: IP, IPv6, CLNS

```

```

Packet: LSP ID: sisira.00-00, Length: 336 bytes, Lifetime : 1198 secs
Checksum: 0x10fc, Sequence: 0x11, Attributes: 0xb L1 L2 Attached
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
Packet type: 18, Packet version: 1, Max area: 0

```

TLVs:

```

Area address: 60.0006.80ff.f800.0000.0108.0001 (13)
Speaks: IP
Speaks: IPV6
Speaks: CLNP
Hostname: sisira
ES neighbor TLV: Internal, Metric: default 0, Up
ES: sisira
IS neighbor: hemantha-CE3.02, Internal, Metric: default 10
IS extended neighbor: hemantha-CE3.02, Metric: default 10
ES neighbor TLV: External, Metric: default 10, Down
ES: 0040.0040.0040
ES neighbor TLV: External, Metric: default 10, Down

```

```

    ES: 0025.0025.0025
    ES neighbor TLV: External, Metric: default 10, Down
    ES: 0015.0015.0015
    ES neighbor TLV: External, Metric: default 10, Down
    ES: 0030.0030.0030
    IP external prefix: 3.0.0.0/24, Internal, Metric: default 10, Down
    IP external prefix: 40.40.40.40/32, Internal, Metric: default 10, Down
    IP external prefix: 4.0.0.0/24, Internal, Metric: default 10, Down
    IP external prefix: 25.25.25.25/32, Internal, Metric: default 10, Down
    IP external prefix: 15.15.15.15/32, Internal, Metric: default 10, Down
    IP external prefix: 1.0.0.0/24, Internal, Metric: default 10, Down
    IP external prefix: 30.30.30.30/32, Internal, Metric: default 10, Down
    IP extended prefix: 3.0.0.0/24 metric 10 down
    IP extended prefix: 40.40.40.40/32 metric 10 down
    IP extended prefix: 4.0.0.0/24 metric 10 down
    IP extended prefix: 25.25.25.25/32 metric 10 down
    IP extended prefix: 15.15.15.15/32 metric 10 down
    IP extended prefix: 1.0.0.0/24 metric 10 down
    IP extended prefix: 30.30.30.30/32 metric 10 down
    IP prefix: 60.60.60.60/32, Internal, Metric: default 0, Up
    IP prefix: 5.0.0.0/24, Internal, Metric: default 10, Up
    IP extended prefix: 60.60.60.60/32 metric 0 up
    IP extended prefix: 5.0.0.0/24 metric 10 up
    No queued transmissions

```

#### IS-IS level 2 link-state database:

```

Router-A.00-00 Sequence: 0x5, Checksum: 0x3196, Lifetime: 1158 secs
  IS neighbor: Router-B.02 Metric: 10
    Two-way fragment: Router-B.02-00, Two-way first fragment: Router-B.02-00
  IS neighbor: Router-E.02 Metric: 10
    Two-way fragment: Router-E.02-00, Two-way first fragment: Router-E.02-00
  IP prefix: 10.0.0.0/30 Metric: 10 Internal Up
  IP prefix: 10.0.0.4/30 Metric: 10 Internal Up
  IP prefix: 192.168.0.1/32 Metric: 0 Internal Up

```

```

Header: LSP ID: Router-A.00-00, Length: 208 bytes
  Allocated length: 1492 bytes, Router ID: 192.168.0.1
  Remaining lifetime: 1158 secs, Level: 2, Interface: 0
  Estimated free bytes: 1233, Actual free bytes: 1284
  Aging timer expires in: 1158 secs
  Protocols: IP, IPv6

```

```

Packet: LSP ID: Router-A.00-00, Length: 208 bytes, Lifetime : 1198 secs
  Checksum: 0x3196, Sequence: 0x5, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

```

#### TLVs:

```

  Area address: 49.0002 (3)
  LSP Buffer Size: 1492
  Speaks: IP
  Speaks: IPV6
  IP router id: 192.168.0.1
  IP address: 192.168.0.1
  Hostname: Router-A
  IP prefix: 192.168.0.1/32, Internal, Metric: default 0, Up
  IP prefix: 10.0.0.4/30, Internal, Metric: default 10, Up
  IP prefix: 10.0.0.0/30, Internal, Metric: default 10, Up
  IP extended prefix: 192.168.0.1/32 metric 0 up
  IP extended prefix: 10.0.0.4/30 metric 10 up

```

```

IP extended prefix: 10.0.0.0/30 metric 10 up
IS neighbor: Router-E.02, Internal, Metric: default 10
IS neighbor: Router-B.02, Internal, Metric: default 10
IS extended neighbor: Router-E.02, Metric: default 10
  IP address: 10.0.0.1
  Local interface index: 101, Remote interface index: 0
IS extended neighbor: Router-B.02, Metric: default 10
  IP address: 10.0.0.5
  Local interface index: 102, Remote interface index: 0
No queued transmissions

```

```

Router-B.00-00 Sequence: 0x5, Checksum: 0xf8f, Lifetime: 1183 secs
IS neighbor: Router-B.02 Metric: 10
  Two-way fragment: Router-B.02-00, Two-way first fragment: Router-B.02-00
IS neighbor: Router-C.02 Metric: 10
  Two-way fragment: Router-C.02-00, Two-way first fragment: Router-C.02-00
IP prefix: 10.0.0.4/30 Metric: 10 Internal Up
IP prefix: 10.0.0.8/30 Metric: 10 Internal Up
IP prefix: 192.168.0.2/32 Metric: 0 Internal Up

```

```

Header: LSP ID: Router-B.00-00, Length: 208 bytes
Allocated length: 284 bytes, Router ID: 192.168.0.2
Remaining lifetime: 1183 secs, Level: 2, Interface: 102
Estimated free bytes: 114, Actual free bytes: 76
Aging timer expires in: 1183 secs
Protocols: IP, IPv6

```

```

Packet: LSP ID: Router-B.00-00, Length: 208 bytes, Lifetime : 1196 secs
Checksum: 0xf8f, Sequence: 0x5, Attributes: 0x3 <L1 L2>
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
Packet type: 20, Packet version: 1, Max area: 0

```

#### TLVs:

```

Area address: 49.0002 (3)
LSP Buffer Size: 1492
Speaks: IP
Speaks: IPV6
IP router id: 192.168.0.2
IP address: 192.168.0.2
Hostname: Router-B
IP prefix: 192.168.0.2/32, Internal, Metric: default 0, Up
IP prefix: 10.0.0.4/30, Internal, Metric: default 10, Up
IP prefix: 10.0.0.8/30, Internal, Metric: default 10, Up
IP extended prefix: 192.168.0.2/32 metric 0 up
IP extended prefix: 10.0.0.4/30 metric 10 up
IP extended prefix: 10.0.0.8/30 metric 10 up
IS neighbor: Router-B.02, Internal, Metric: default 10
IS neighbor: Router-C.02, Internal, Metric: default 10
IS extended neighbor: Router-B.02, Metric: default 10
  IP address: 10.0.0.6
  Local interface index: 108, Remote interface index: 0
IS extended neighbor: Router-C.02, Metric: default 10
  IP address: 10.0.0.9
  Local interface index: 109, Remote interface index: 0
No queued transmissions

```

```

Router-B.02-00 Sequence: 0x1, Checksum: 0x3c7c, Lifetime: 1156 secs
IS neighbor: Router-A.00 Metric: 0
  Two-way fragment: Router-A.00-00, Two-way first fragment: Router-A.00-00
IS neighbor: Router-B.00 Metric: 0
  Two-way fragment: Router-B.00-00, Two-way first fragment: Router-B.00-00

```

Header: LSP ID: Router-B.02-00, Length: 76 bytes  
 Allocated length: 284 bytes, Router ID: 0.0.0.0  
 Remaining lifetime: 1156 secs, Level: 2, Interface: 102  
 Estimated free bytes: 208, Actual free bytes: 208  
 Aging timer expires in: 1156 secs

Packet: LSP ID: Router-B.02-00, Length: 76 bytes, Lifetime : 1196 secs  
 Checksum: 0x3c7c, Sequence: 0x1, Attributes: 0x3 <L1 L2>  
 NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes  
 Packet type: 20, Packet version: 1, Max area: 0

TLVs:  
 IS neighbor: Router-B.00, Internal, Metric: default 0  
 IS neighbor: Router-A.00, Internal, Metric: default 0  
 IS extended neighbor: Router-B.00, Metric: default 0  
 IS extended neighbor: Router-A.00, Metric: default 0  
 No queued transmissions

Router-C.00-00 Sequence: 0x5, Checksum: 0x255b, Lifetime: 1182 secs  
 IS neighbor: Router-C.02 Metric: 10  
 Two-way fragment: Router-C.02-00, Two-way first fragment: Router-C.02-00  
 IS neighbor: Router-D.03 Metric: 10  
 Two-way fragment: Router-D.03-00, Two-way first fragment: Router-D.03-00  
 IP prefix: 10.0.0.8/30 Metric: 10 Internal Up  
 IP prefix: 10.0.0.12/30 Metric: 10 Internal Up  
 IP prefix: 192.168.0.3/32 Metric: 0 Internal Up

Header: LSP ID: Router-C.00-00, Length: 208 bytes  
 Allocated length: 284 bytes, Router ID: 192.168.0.3  
 Remaining lifetime: 1182 secs, Level: 2, Interface: 102  
 Estimated free bytes: 114, Actual free bytes: 76  
 Aging timer expires in: 1182 secs  
 Protocols: IP, IPv6

Packet: LSP ID: Router-C.00-00, Length: 208 bytes, Lifetime : 1196 secs  
 Checksum: 0x255b, Sequence: 0x5, Attributes: 0x3 <L1 L2>  
 NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes  
 Packet type: 20, Packet version: 1, Max area: 0

TLVs:  
 Area address: 49.0002 (3)  
 LSP Buffer Size: 1492  
 Speaks: IP  
 Speaks: IPV6  
 IP router id: 192.168.0.3  
 IP address: 192.168.0.3  
 Hostname: Router-C  
 IP prefix: 192.168.0.3/32, Internal, Metric: default 0, Up  
 IP prefix: 10.0.0.8/30, Internal, Metric: default 10, Up  
 IP prefix: 10.0.0.12/30, Internal, Metric: default 10, Up  
 IP extended prefix: 192.168.0.3/32 metric 0 up  
 IP extended prefix: 10.0.0.8/30 metric 10 up  
 IP extended prefix: 10.0.0.12/30 metric 10 up  
 IS neighbor: Router-C.02, Internal, Metric: default 10  
 IS neighbor: Router-D.03, Internal, Metric: default 10  
 IS extended neighbor: Router-C.02, Metric: default 10  
 IP address: 10.0.0.10  
 Local interface index: 105, Remote interface index: 0  
 IS extended neighbor: Router-D.03, Metric: default 10  
 IP address: 10.0.0.13

Local interface index: 106, Remote interface index: 0  
No queued transmissions

Router-C.02-00 Sequence: 0x1, Checksum: 0xaa09, Lifetime: 1181 secs  
IS neighbor: Router-B.00 Metric: 0  
Two-way fragment: Router-B.00-00, Two-way first fragment: Router-B.00-00  
IS neighbor: Router-C.00 Metric: 0  
Two-way fragment: Router-C.00-00, Two-way first fragment: Router-C.00-00

Header: LSP ID: Router-C.02-00, Length: 76 bytes  
Allocated length: 284 bytes, Router ID: 0.0.0.0  
Remaining lifetime: 1181 secs, Level: 2, Interface: 102  
Estimated free bytes: 208, Actual free bytes: 208  
Aging timer expires in: 1181 secs

Packet: LSP ID: Router-C.02-00, Length: 76 bytes, Lifetime : 1194 secs  
Checksum: 0xaa09, Sequence: 0x1, Attributes: 0x3 <L1 L2>  
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes  
Packet type: 20, Packet version: 1, Max area: 0

TLVs:

IS neighbor: Router-C.00, Internal, Metric: default 0  
IS neighbor: Router-B.00, Internal, Metric: default 0  
IS extended neighbor: Router-C.00, Metric: default 0  
IS extended neighbor: Router-B.00, Metric: default 0

No queued transmissions

Router-D.00-00 Sequence: 0x4, Checksum: 0x8ab7, Lifetime: 1180 secs  
IS neighbor: Router-D.02 Metric: 10  
Two-way fragment: Router-D.02-00, Two-way first fragment: Router-D.02-00  
IS neighbor: Router-D.03 Metric: 10  
Two-way fragment: Router-D.03-00, Two-way first fragment: Router-D.03-00  
IP prefix: 10.0.0.12/30 Metric: 10 Internal Up  
IP prefix: 10.0.0.20/30 Metric: 10 Internal Up  
IP prefix: 192.168.0.4/32 Metric: 0 Internal Up

Header: LSP ID: Router-D.00-00, Length: 208 bytes  
Allocated length: 284 bytes, Router ID: 192.168.0.4  
Remaining lifetime: 1180 secs, Level: 2, Interface: 102  
Estimated free bytes: 114, Actual free bytes: 76  
Aging timer expires in: 1180 secs  
Protocols: IP, IPv6

Packet: LSP ID: Router-D.00-00, Length: 208 bytes, Lifetime : 1192 secs  
Checksum: 0x8ab7, Sequence: 0x4, Attributes: 0x3 <L1 L2>  
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes  
Packet type: 20, Packet version: 1, Max area: 0

TLVs:

Area address: 49.0002 (3)  
LSP Buffer Size: 1492  
Speaks: IP  
Speaks: IPV6  
IP router id: 192.168.0.4  
IP address: 192.168.0.4  
Hostname: Router-D  
IP prefix: 192.168.0.4/32, Internal, Metric: default 0, Up  
IP prefix: 10.0.0.12/30, Internal, Metric: default 10, Up  
IP prefix: 10.0.0.20/30, Internal, Metric: default 10, Up  
IP extended prefix: 192.168.0.4/32 metric 0 up  
IP extended prefix: 10.0.0.12/30 metric 10 up

```

IP extended prefix: 10.0.0.20/30 metric 10 up
IS neighbor: Router-D.02, Internal, Metric: default 10
IS neighbor: Router-D.03, Internal, Metric: default 10
IS extended neighbor: Router-D.02, Metric: default 10
  IP address: 10.0.0.22
  Local interface index: 115, Remote interface index: 0
IS extended neighbor: Router-D.03, Metric: default 10
  IP address: 10.0.0.14
  Local interface index: 114, Remote interface index: 0
No queued transmissions

Router-D.02-00 Sequence: 0x1, Checksum: 0xebbc, Lifetime: 1128 secs
  IS neighbor: Router-D.00                      Metric: 0
    Two-way fragment: Router-D.00-00, Two-way first fragment: Router-D.00-00
  IS neighbor: Router-F.00                      Metric: 0
    Two-way fragment: Router-F.00-00, Two-way first fragment: Router-F.00-00

Header: LSP ID: Router-D.02-00, Length: 76 bytes
  Allocated length: 284 bytes, Router ID: 0.0.0.0
  Remaining lifetime: 1128 secs, Level: 2, Interface: 101
  Estimated free bytes: 208, Actual free bytes: 208
  Aging timer expires in: 1128 secs

Packet: LSP ID: Router-D.02-00, Length: 76 bytes, Lifetime : 1160 secs
  Checksum: 0xebbc, Sequence: 0x1, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  IS neighbor: Router-D.00, Internal, Metric: default 0
  IS neighbor: Router-F.00, Internal, Metric: default 0
  IS extended neighbor: Router-D.00, Metric: default 0
  IS extended neighbor: Router-F.00, Metric: default 0
No queued transmissions

Router-D.03-00 Sequence: 0x1, Checksum: 0x129b, Lifetime: 1180 secs
  IS neighbor: Router-C.00                      Metric: 0
    Two-way fragment: Router-C.00-00, Two-way first fragment: Router-C.00-00
  IS neighbor: Router-D.00                      Metric: 0
    Two-way fragment: Router-D.00-00, Two-way first fragment: Router-D.00-00

Header: LSP ID: Router-D.03-00, Length: 76 bytes
  Allocated length: 284 bytes, Router ID: 0.0.0.0
  Remaining lifetime: 1180 secs, Level: 2, Interface: 101
  Estimated free bytes: 208, Actual free bytes: 208
  Aging timer expires in: 1180 secs

Packet: LSP ID: Router-D.03-00, Length: 76 bytes, Lifetime : 1192 secs
  Checksum: 0x129b, Sequence: 0x1, Attributes: 0x3 <L1 L2>
  NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
  Packet type: 20, Packet version: 1, Max area: 0

TLVs:
  IS neighbor: Router-D.00, Internal, Metric: default 0
  IS neighbor: Router-C.00, Internal, Metric: default 0
  IS extended neighbor: Router-D.00, Metric: default 0
  IS extended neighbor: Router-C.00, Metric: default 0
No queued transmissions

Router-E.00-00 Sequence: 0x4, Checksum: 0x9da9, Lifetime: 1155 secs
  IS neighbor: Router-E.02                      Metric: 10

```

```

    Two-way fragment: Router-E.02-00, Two-way first fragment: Router-E.02-00
IS neighbor: Router-F.02                               Metric:      20
    Two-way fragment: Router-F.02-00, Two-way first fragment: Router-F.02-00
IP prefix: 10.0.0.0/30                                Metric:      10 Internal Up
IP prefix: 10.0.0.16/30                               Metric:      20 Internal Up
IP prefix: 192.168.0.5/32                             Metric:      0 Internal Up

```

```

Header: LSP ID: Router-E.00-00, Length: 208 bytes
Allocated length: 284 bytes, Router ID: 192.168.0.5
Remaining lifetime: 1155 secs, Level: 2, Interface: 101
Estimated free bytes: 114, Actual free bytes: 76
Aging timer expires in: 1155 secs
Protocols: IP, IPv6

```

```

Packet: LSP ID: Router-E.00-00, Length: 208 bytes, Lifetime : 1185 secs
Checksum: 0x9da9, Sequence: 0x4, Attributes: 0x3 <L1 L2>
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
Packet type: 20, Packet version: 1, Max area: 0

```

#### TLVs:

```

Area address: 49.0002 (3)
LSP Buffer Size: 1492
Speaks: IP
Speaks: IPV6
IP router id: 192.168.0.5
IP address: 192.168.0.5
Hostname: Router-E
IP prefix: 192.168.0.5/32, Internal, Metric: default 0, Up
IP prefix: 10.0.0.16/30, Internal, Metric: default 20, Up
IP prefix: 10.0.0.0/30, Internal, Metric: default 10, Up
IP extended prefix: 192.168.0.5/32 metric 0 up
IP extended prefix: 10.0.0.16/30 metric 20 up
IP extended prefix: 10.0.0.0/30 metric 10 up
IS neighbor: Router-E.02, Internal, Metric: default 10
IS neighbor: Router-F.02, Internal, Metric: default 20
IS extended neighbor: Router-E.02, Metric: default 10
IP address: 10.0.0.2
Local interface index: 112, Remote interface index: 0
IS extended neighbor: Router-F.02, Metric: default 20
IP address: 10.0.0.17
Local interface index: 111, Remote interface index: 0
No queued transmissions

```

```

Router-E.02-00 Sequence: 0x1, Checksum: 0xb4fa, Lifetime: 1130 secs
IS neighbor: Router-A.00                               Metric:      0
    Two-way fragment: Router-A.00-00, Two-way first fragment: Router-A.00-00
IS neighbor: Router-E.00                               Metric:      0
    Two-way fragment: Router-E.00-00, Two-way first fragment: Router-E.00-00

```

```

Header: LSP ID: Router-E.02-00, Length: 76 bytes
Allocated length: 284 bytes, Router ID: 0.0.0.0
Remaining lifetime: 1130 secs, Level: 2, Interface: 101
Estimated free bytes: 208, Actual free bytes: 208
Aging timer expires in: 1130 secs

```

```

Packet: LSP ID: Router-E.02-00, Length: 76 bytes, Lifetime : 1161 secs
Checksum: 0xb4fa, Sequence: 0x1, Attributes: 0x3 <L1 L2>
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
Packet type: 20, Packet version: 1, Max area: 0

```

#### TLVs:

```

IS neighbor: Router-E.00, Internal, Metric: default 0
IS neighbor: Router-A.00, Internal, Metric: default 0
IS extended neighbor: Router-E.00, Metric: default 0
IS extended neighbor: Router-A.00, Metric: default 0
No queued transmissions

```

```

Router-F.00-00 Sequence: 0x5, Checksum: 0x94bd, Lifetime: 1153 secs
IS neighbor: Router-D.02 Metric: 10
Two-way fragment: Router-D.02-00, Two-way first fragment: Router-D.02-00
IS neighbor: Router-F.02 Metric: 10
Two-way fragment: Router-F.02-00, Two-way first fragment: Router-F.02-00
IP prefix: 10.0.0.16/30 Metric: 10 Internal Up
IP prefix: 10.0.0.20/30 Metric: 10 Internal Up
IP prefix: 192.168.0.6/32 Metric: 0 Internal Up

```

```

Header: LSP ID: Router-F.00-00, Length: 208 bytes
Allocated length: 284 bytes, Router ID: 192.168.0.6
Remaining lifetime: 1153 secs, Level: 2, Interface: 101
Estimated free bytes: 76, Actual free bytes: 76
Aging timer expires in: 1153 secs
Protocols: IP, IPv6

```

```

Packet: LSP ID: Router-F.00-00, Length: 208 bytes, Lifetime : 1183 secs
Checksum: 0x94bd, Sequence: 0x5, Attributes: 0x3 <L1 L2>
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
Packet type: 20, Packet version: 1, Max area: 0

```

```

TLVs:
Area address: 49.0002 (3)
LSP Buffer Size: 1492
Speaks: IP
Speaks: IPV6
IP router id: 192.168.0.6
IP address: 192.168.0.6
Hostname: Router-F
IP prefix: 192.168.0.6/32, Internal, Metric: default 0, Up
IP prefix: 10.0.0.16/30, Internal, Metric: default 10, Up
IP prefix: 10.0.0.20/30, Internal, Metric: default 10, Up
IP extended prefix: 192.168.0.6/32 metric 0 up
IP extended prefix: 10.0.0.16/30 metric 10 up
IP extended prefix: 10.0.0.20/30 metric 10 up
IS neighbor: Router-D.02, Internal, Metric: default 10
IS neighbor: Router-F.02, Internal, Metric: default 10
IS extended neighbor: Router-D.02, Metric: default 10
IP address: 10.0.0.21
Local interface index: 94, Remote interface index: 0
IS extended neighbor: Router-F.02, Metric: default 10
IP address: 10.0.0.18
Local interface index: 93, Remote interface index: 0
No queued transmissions

```

```

Router-E.02-00 Sequence: 0x1, Checksum: 0xb4fa, Lifetime: 1130 secs
IS neighbor: Router-A.00 Metric: 0
Two-way fragment: Router-A.00-00, Two-way first fragment: Router-A.00-00
IS neighbor: Router-E.00 Metric: 0
Two-way fragment: Router-E.00-00, Two-way first fragment: Router-E.00-00

```

```

Header: LSP ID: Router-E.02-00, Length: 76 bytes
Allocated length: 284 bytes, Router ID: 0.0.0.0
Remaining lifetime: 1130 secs, Level: 2, Interface: 101
Estimated free bytes: 208, Actual free bytes: 208

```

Aging timer expires in: 1130 secs

Packet: LSP ID: Router-E.02-00, Length: 76 bytes, Lifetime : 1161 secs  
Checksum: 0xb4fa, Sequence: 0x1, Attributes: 0x3 <L1 L2>  
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes  
Packet type: 20, Packet version: 1, Max area: 0

TLVs:

IS neighbor: Router-E.00, Internal, Metric: default 0  
IS neighbor: Router-A.00, Internal, Metric: default 0  
IS extended neighbor: Router-E.00, Metric: default 0  
IS extended neighbor: Router-A.00, Metric: default 0

No queued transmissions

Router-F.00-00 Sequence: 0x5, Checksum: 0x94bd, Lifetime: 1153 secs  
IS neighbor: Router-D.02 Metric: 10  
Two-way fragment: Router-D.02-00, Two-way first fragment: Router-D.02-00  
IS neighbor: Router-F.02 Metric: 10  
Two-way fragment: Router-F.02-00, Two-way first fragment: Router-F.02-00  
IP prefix: 10.0.0.16/30 Metric: 10 Internal Up  
IP prefix: 10.0.0.20/30 Metric: 10 Internal Up  
IP prefix: 192.168.0.6/32 Metric: 0 Internal Up

Header: LSP ID: Router-F.00-00, Length: 208 bytes  
Allocated length: 284 bytes, Router ID: 192.168.0.6  
Remaining lifetime: 1153 secs, Level: 2, Interface: 101  
Estimated free bytes: 76, Actual free bytes: 76  
Aging timer expires in: 1153 secs  
Protocols: IP, IPv6

Packet: LSP ID: Router-F.00-00, Length: 208 bytes, Lifetime : 1183 secs  
Checksum: 0x94bd, Sequence: 0x5, Attributes: 0x3 <L1 L2>  
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes  
Packet type: 20, Packet version: 1, Max area: 0

TLVs:

Area address: 49.0002 (3)  
LSP Buffer Size: 1492  
Speaks: IP  
Speaks: IPV6  
IP router id: 192.168.0.6  
IP address: 192.168.0.6  
Hostname: Router-F  
IP prefix: 192.168.0.6/32, Internal, Metric: default 0, Up  
IP prefix: 10.0.0.16/30, Internal, Metric: default 10, Up  
IP prefix: 10.0.0.20/30, Internal, Metric: default 10, Up  
IP extended prefix: 192.168.0.6/32 metric 0 up  
IP extended prefix: 10.0.0.16/30 metric 10 up  
IP extended prefix: 10.0.0.20/30 metric 10 up  
IS neighbor: Router-D.02, Internal, Metric: default 10  
IS neighbor: Router-F.02, Internal, Metric: default 10  
IS extended neighbor: Router-D.02, Metric: default 10  
IP address: 10.0.0.21  
Local interface index: 94, Remote interface index: 0  
IS extended neighbor: Router-F.02, Metric: default 10  
IP address: 10.0.0.18  
Local interface index: 93, Remote interface index: 0

No queued transmissions

Router-F.02-00 Sequence: 0x1, Checksum: 0xf5ae, Lifetime: 1153 secs  
IS neighbor: Router-E.00 Metric: 0

```

Two-way fragment: Router-E.00-00, Two-way first fragment: Router-E.00-00
IS neighbor: Router-F.00 Metric: 0
Two-way fragment: Router-F.00-00, Two-way first fragment: Router-F.00-00

```

```

Header: LSP ID: Router-F.02-00, Length: 76 bytes
Allocated length: 284 bytes, Router ID: 0.0.0.0
Remaining lifetime: 1153 secs, Level: 2, Interface: 101
Estimated free bytes: 208, Actual free bytes: 208
Aging timer expires in: 1153 secs

```

```

Packet: LSP ID: Router-F.02-00, Length: 76 bytes, Lifetime : 1183 secs
Checksum: 0xf5ae, Sequence: 0x1, Attributes: 0x3 <L1 L2>
NLPID: 0x83, Fixed length: 27 bytes, Version: 1, Sysid length: 0 bytes
Packet type: 20, Packet version: 1, Max area: 0

```

```

TLVs:
IS neighbor: Router-F.00, Internal, Metric: default 0
IS neighbor: Router-E.00, Internal, Metric: default 0
IS extended neighbor: Router-F.00, Metric: default 0
IS extended neighbor: Router-E.00, Metric: default 0
No queued transmissions

```

### show isis database extensive (SPRING)

```

user@host> show isis database extensive
Extended IS Reachability TLV, Type: 22, Length: 99
IS extended neighbor: r0.00, Metric: default 10 SubTLV len: 88
  IP address: 11.1.1.2
  Neighbor's IP address: 11.1.1.1
  Local interface index: 333, Remote interface index: 342
  Current reservable bandwidth:
    Priority 0 : 1000Mbps
    Priority 1 : 1000Mbps
    Priority 2 : 1000Mbps
    Priority 3 : 1000Mbps
    Priority 4 : 1000Mbps
    Priority 5 : 1000Mbps
    Priority 6 : 1000Mbps
    Priority 7 : 1000Mbps
Maximum reservable bandwidth: 1000Mbps
Maximum bandwidth: 1000Mbps
Administrative groups: 0 <none>
P2P IPV6 Adj-SID - Flags:0xf0(F:1,B:1,V:1,L:1,S:0,P:0), Weight:0, Label: 401
P2P IPV6 Adj-SID: 401, Weight: 0, Flags: FBVL--
P2P IPV4 Adj-SID - Flags:0x70(F:0,B:1,V:1,L:1,S:0,P:0), Weight:0, Label:
400
P2P IPV4 Adj-SID: 400, Weight: 0, Flags: -BVL--
Extended IS Reachability TLV, Type: 22, Length: 144
IS extended neighbor: r1.06, Metric: default 10 SubTLV len: 133
  IP address: 12.1.1.1
  Local interface index: 336, Remote interface index: 0
  Current reservable bandwidth:
    Priority 0 : 1000Mbps
    Priority 1 : 1000Mbps
    Priority 2 : 1000Mbps
    Priority 3 : 1000Mbps
    Priority 4 : 1000Mbps
    Priority 5 : 1000Mbps
    Priority 6 : 1000Mbps
    Priority 7 : 1000Mbps
Maximum reservable bandwidth: 1000Mbps

```

```
Maximum bandwidth: 1000Mbps
Administrative groups: 0 <none>
LAN IPV6 Adj-SID -, Flags:0xfc(F:1,B:1,V:1,L:1,S:1,P:1), Weight:1
  Neighbor:r2, Label:803125
  LAN IPv6 Adj-SID: 803125, Weight: 1, Neighbor: r2, Flags: FBVLSP
  LAN IPV4 Adj-SID -, Flags:0x3c(F:0,B:0,V:1,L:1,S:1,P:1), Weight:1
    Neighbor:r2, Label:803122
  LAN IPv4 Adj-SID: 803122, Weight: 1, Neighbor: r2, Flags: --VLSP
  LAN IPV4 Adj-SID -, Flags:0x7c(F:0,B:1,V:1,L:1,S:1,P:1), Weight:1
    Neighbor:r2, Label:803123
  LAN IPv4 Adj-SID: 803123, Weight: 1, Neighbor: r2, Flags: -BVLSP
  LAN IPV6 Adj-SID -, Flags:0xf0(F:1,B:1,V:1,L:1,S:0,P:0), Weight:0
    Neighbor:r2, Label:37
  LAN IPv6 Adj-SID: 37, Weight: 0, Neighbor: r2, Flags: FBVL--
  LAN IPV4 Adj-SID -, Flags:0x70(F:0,B:1,V:1,L:1,S:0,P:0), Weight:0
    Neighbor:r2, Label:36
  LAN IPv4 Adj-SID: 36, Weight: 0, Neighbor: r2, Flags: -BVL--
```

## show isis hostname

---

**List of Syntax**   [Syntax on page 2020](#)  
[Syntax \(EX Series Switches and QFX Series\) on page 2020](#)

**Syntax**   `show isis hostname`  
`<logical-system (all | logical-system-name)>`

**Syntax (EX Series Switches and QFX Series)**   `show isis hostname`

**Release Information**   Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.  
Command introduced in Junos OS Release 12.1 for the QFX Series.  
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**   Display IS-IS hostname database information.

This command displays the system ID-to-name cache. The output shows if the mapping has been learned by receipt of a Hostname TLV #137 (type dynamic) configured in Junos OS with the **set system host-name** command, or a static mapping defined in Junos OS with the **set system static-host-mapping *hostname* sysid** command (type static). The local router always has its type set to static even if **static-host-mapping** is not configured.

**Options**   **none**—Display IS-IS hostname database information.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level**   view

**List of Sample Output**   [show isis hostname on page 2021](#)

**Output Fields**   [Table 158 on page 2020](#) describes the output fields for the **show isis hostname** command. Output fields are listed in the approximate order in which they appear.

*Table 158: show isis hostname Output Fields*

Field Name	Field Description
System Id	System identifier mapped to the hostname.
Hostname	Hostname mapped to the system identifier.

Table 158: show isis hostname Output Fields (continued)


Field Name	Field Description
Type	Type of mapping between system identifier and hostname. <ul style="list-style-type: none"><li>• <b>Dynamic</b>—Hostname mapping determined as described in RFC 2763, <i>Dynamic Hostname Exchange Mechanism for IS-IS</i>.</li><li>• <b>Static</b>—Hostname mapping configured by user.</li></ul>

Sample Output

show isis hostname

```
user@host> show isis hostname
IS-IS hostname database:
System Id      Hostname      Type
1921.6800.4201 isis1         Dynamic
1921.6800.4202 isis2         Static
1921.6800.4203 isis3         Dynamic
```

```
show isis interface
```

List of Syntax	<a href="#">Syntax on page 2022</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 2022</a>
Syntax	show isis interface <brief   detail   extensive> <interface-name> <logical-system (all   <i>logical-system-name</i> )>
Syntax (EX Series Switches and QFX Series)	show isis interface <brief   detail   extensive> <interface-name>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series.
Description	Display status information about Intermediate System-to-Intermediate System (IS-IS)-enabled interfaces.
	<div data-bbox="475 829 1304 924">  <p><b>NOTE:</b> If the configured metric for an IS-IS level is above 63, and the <b>wide-metrics-only</b> statement is not configured, the <b>show isis interface detail</b> command and the <b>show isis interface extensive</b> command display 63 as the metric value for that level. Configure the <b>wide-metrics-only</b> statement to generate metric values greater than 63 on a per IS-IS level basis.</p> <p>The <b>show isis interface</b> command displays the configured metric value for an IS-IS level irrespective of whether is configured or not.</p> </div>
Options	<b>none</b> —Display standard information about all IS-IS-enabled interfaces.
	<b>brief   detail   extensive</b> —(Optional) Display the specified level of output.
	<b>interface-name</b> —(Optional) Display information about the specified interface only.
	<b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"> <li><a href="#">Understanding Wide IS-IS Metrics for Traffic Engineering</a></li> <li><a href="#">Example: Enabling Wide IS-IS Metrics for Traffic Engineering</a></li> </ul>

List of Sample Output [show isis interface on page 2025](#)  
[show isis interface brief on page 2025](#)  
[show isis interface detail on page 2025](#)  
[show isis interface extensive on page 2025](#)

**Output Fields** [Table 159 on page 2023](#) describes the output fields for the **show isis interface** command. Output fields are listed in the approximate order in which they appear.

*Table 159: show isis interface Output Fields*

Field Name	Field Description	Level of Output
<b>interface-name</b>	Name of the interface.	<b>detail</b>
<b>Designated router</b>	Routing device selected by other routers that is responsible for sending link-state advertisements that describe the network. Used only on broadcast networks.	<b>detail</b>
<b>Index</b>	Interface index assigned by the Junos OS kernel.	<b>detail</b>
<b>State</b>	Internal implementation information.	<b>detail</b>
<b>Circuit id</b>	Circuit identifier.  <b>NOTE:</b> Each IS-IS interface is assigned a circuit ID value to identify the interface within the linkstate database. All interfaces (loopback, broadcast, and so on) and all point-to-point links share the locally significant value of 0x01, and this value is not incremented.	<b>detail</b>
<b>Circuit type</b>	Circuit type: <ul style="list-style-type: none"> <li>• 1—Level 1 only</li> <li>• 2—Level 2 only</li> <li>• 3—Level 1 and Level 2</li> </ul>	<b>detail</b>
<b>LSP interval</b>	Interval between link-state PDUs sent from the interface.	<b>detail</b>
<b>CSNP interval</b>	Interval between complete sequence number PDUs sent from the interface.	<b>detail extensive</b>
<b>Sysid</b>	System identifier.	<b>detail</b>
<b>Interface</b>	Interface through which the adjacency is made.	<b>none brief</b>
<b>L or Level</b>	Level: <ul style="list-style-type: none"> <li>• 1—Level 1 only</li> <li>• 2—Level 2 only</li> <li>• 3—Level 1 and Level 2</li> </ul> <b>NOTE:</b> The default IS-IS level on loopback interfaces are always same as the IS-IS level configured on other IS-IS interfaces in a router. You can also configure IS-IS level on loopback interfaces per your requirement.	All levels
<b>CirID</b>	Circuit identifier.	<b>none brief</b>

Table 159: show isis interface Output Fields (continued)

Field Name	Field Description	Level of Output
Level 1 DR	Level 1 designated intermediate system.	none <b>brief</b>
Level 2 DR	Level 2 designated intermediate system.	none <b>brief</b>
L1/L2 Metric	Interface's metric for Level 1 and Level 2. If there is no information, the metric is 0.	none <b>brief</b>
Flood-group Area-ID	Flood-group is configured on a specific IS-IS interface  <b>NOTE:</b> Seen only when Flood-group is configured.	<b>detail extensive</b>
Adjacency advertisement: Advertise	This routing device has signaled to advertise this interface to its neighbors in their label-switched paths (LSPs).	<b>detail extensive</b>
Adjacency advertisement: Suppress	This neighbor has signaled not to advertise this interface in the routing device's outbound LSPs.	<b>detail extensive</b>
Adjacencies	Number of adjacencies established on this interface.	<b>detail</b>
Priority	Priority value for this interface.	<b>detail</b>
Metric	Metric value for this interface.	<b>detail</b>
Hello(s) / Hello Interval	Interface's hello interval.	<b>detail extensive</b>
Hold(s) / Hold Time	Interface's hold time.	<b>detail extensive</b>
Designated Router	Router responsible for sending network link-state advertisements, which describe all the routing devices attached to the network.	<b>detail</b>
Hello padding	Type of hello padding: <ul style="list-style-type: none"> <li>• <b>Adaptive</b>—On point-to-point connections, the hello packets are padded from the initial detection of a new neighbor until the neighbor verifies the adjacency as Up in the adjacency state TLV. If the neighbor does not support the adjacency state TLV, then padding continues. On LAN connections, padding starts from the initial detection of a new neighbor until there is at least one active adjacency on the interface.</li> <li>• <b>Loose</b>—(Default) The hello packet is padded from the initial detection of a new neighbor until the adjacency transitions to the Up state.</li> <li>• <b>Strict</b>—Padding is performed on all interface types and for all adjacency states, and is continuous.</li> </ul>	<b>extensive</b>
LDP sync state	Current LDP synchronization state: <b>in sync</b> , <b>in holddown</b> , or <b>not supported</b> .	<b>extensive</b>
reason	Reason for being in the LDP sync state.	<b>extensive</b>

Table 159: show isis interface Output Fields (continued)

Field Name	Field Description	Level of Output
<b>config holdtime</b>	Configured value of the hold timer.	<b>extensive</b>
<b>remaining</b>	If the state is not in sync and the hold time is not infinity, then this field displays the remaining hold time in seconds.	<b>extensive</b>
<b>IIH max size</b>	Configured value of IS-IS hello packets	<b>extensive</b>

## Sample Output

### show isis interface

```

user@host> show isis interface
IS-IS interface database:
Interface          L CirID Level 1 DR      Level 2 DR      L1/L2 Metric
at-2/3/0.0         3   0x1 Point to Point    Point to Point    10/10
lo0.0              3   0x1 Passive           Passive           0/0

```

### show isis interface brief

The output for the **show isis interface brief** command is identical to that for the **show isis interface** command. For sample output, see [show isis interface on page 2025](#).

### show isis interface detail

```

user@host> show isis interface detail
IS-IS interface database:
at-2/3/0.0
  Index: 66, State: 0x6, Circuit id: 0x1, Circuit type: 3
  LSP interval: 100 ms, CSNP interval: 5 s
  Level Adjacencies Priority Metric Hello (s) Hold (s) Designated Router
    1                1        64    10    9.000    27
    2                1        64    10    9.000    27
lo0.0
  Index: 64, State: 0x6, Circuit id: 0x1, Circuit type: 0
  LSP interval: 100 ms, CSNP interval: disabled
  Adjacency advertisement: Advertise
  Protection Type: Node Link, No eligible Backup
  Level Adjacencies Priority Metric Hello (s) Hold (s) Designated Router
    1                0        64     0 Passive
    2                0        64     0 Passive

```

### show isis interface extensive

```

user@host> show isis interface extensive
IS-IS interface database:
xe-6/1/0.0
  Index: 75, State: 0x6, Circuit id: 0x1, Circuit type: 2
  LSP interval: 100 ms, CSNP interval: 10 s, Loose Hello padding, IIH max size:
  1505
  Adjacency advertisement: Advertise

  Flood-group Area-ID: 49.0001

```

Level 1

Adjacencies: 0, Priority: 64, Metric: 10  
Disabled

Level 2

Adjacencies: 1, Priority: 64, Metric: 10  
Hello Interval: 20.000 s, Hold Time: 60 s  
Designated Router: nemean.03

## show isis overview

<b>Syntax</b>	<b>show isis overview</b> <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switches and QFX Series)</b>	<b>show isis overview</b> <instance <i>instance-name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 8.5. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display IS-IS overview information.
<b>Options</b>	<b>none</b> —Display standard overview information about IS-IS for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Display overview information for the specified routing instance.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show isis overview on page 2029</a>
<b>Output Fields</b>	<a href="#">Table 160 on page 2027</a> lists the output fields for the <b>show isis overview</b> command. Output fields are listed in the approximate order in which they appear.

*Table 160: show isis overview Output Fields*

Field Name	Field Description
Hostname	Name of the router.
Sysid	Part of the ISO address of the routing device.
Areaid	The area number of the routing device.
Instance	IS-IS routing instance.
Router ID	Router ID of the routing device.
Adjacency holddown	Adjacency holddown capability: <b>enabled</b> or <b>disabled</b> .

Table 160: show isis overview Output Fields (continued)

Field Name	Field Description
Maximum Areas	Maximum number of IS-IS areas advertised by the routing device.
LSP life time	Lifetime of the link-state PDU, in seconds.
Filter low life time LSPs up to	LSPs with a lifetime lower than this value are filtered out.
Attached bit evaluation	Attached bit capability: <b>enabled</b> or <b>disabled</b> .
SPF delay	Delay before performing consecutive shortest-path-first (SPF) calculations.
SPF holddown	Delay before performing additional SPF calculations after the maximum number of consecutive SPF calculations is reached.
SPF rapid runs	Maximum number of SPF calculations that can be performed in succession before the holddown timer begins.
Overload bit at startup is set	Overload bit capability is enabled.
Overload high metrics	Overload high metrics capability: <b>enabled</b> or <b>disabled</b> .
Overload timeout	Time period after which overload is reset and the time that remains before the timer is set to expire.
Traffic engineering	Traffic engineering capability: <b>enabled</b> or <b>disabled</b> .
Restart	Graceful restart capability: <b>enabled</b> or <b>disabled</b> .
Restart duration	Time period for complete reacquisition of IS-IS neighbors.
Helper mode	Graceful restart helper capability: <b>enabled</b> or <b>disabled</b> .
Level	IS-IS level: <ul style="list-style-type: none"> <li>• 1—Level 1 information</li> <li>• 2—Level 2 information</li> </ul>
IPv4 is enabled	IP Protocol version 4 capability is enabled.
IPv6 is enabled	IP Protocol version 6 capability is enabled.
Micro-loop avoidance	Micro-loop avoidance is enabled. Generally adjacent nodes converge faster than neighboring nodes causing traffic to loop. A route convergence delay is configured to avoid such micro loops.
Internal route preference	Preference value of internal routes.

Table 160: show isis overview Output Fields (continued)

Field Name	Field Description
External route preference	Preference value of external routes.
Prefix export limit	Number of prefixes allowed to be exported, as configured by the <b>prefix-export-limit</b> statement.
Prefix export count	Number of prefixes exported.
Wide area metrics are enabled	Wide area metrics capability is enabled.
Narrow metrics are enabled	Narrow metrics capability is enabled.
Adjacency holddown is active	IS-IS adjacencies come up one after another when adjacency holddown is enabled.

## Sample Output

### show isis overview

```

user@host> show isis overview
Instance: master
Router ID: 10.255.107.183
Hostname: pro-bng3-a
Sysid: 0192.0168.0001
Areaid: 49.0002
Adjacency holddown: enabled
Maximum Areas: 3
LSP life time: 1200
Filter low life time LSPs up to: 300
Attached bit evaluation: enabled
SPF delay: 200 msec, SPF holddown: 5000 msec, SPF rapid runs: 3
IPv4 is enabled, IPv6 is enabled
Micro-loop avoidance: Enabled
  Method: Route Convergence Delay, Route convergence delay: 5000 msec
Traffic engineering: enabled
Restart: Disabled
  Helper mode: Enabled
Level 1
  Internal route preference: 15
  External route preference: 160
  Wide metrics are enabled, Narrow metrics are enabled
  Adjacency holddown is active
Level 2
  Internal route preference: 18
  External route preference: 165
  Prefix export limit: 5, Prefix export count: 5
  Wide metrics are enabled
  Adjacency holddown is active

```

```

user@host> show isis overview logical-system R2

```

```
Instance: master
  Router ID: 192.168.0.2
  Hostname: pro-bng3-a-R2
  Sysid: 0192.0168.0002
  Areaid: 49.0002
  Adjacency holddown: enabled
  Maximum Areas: 3
  LSP life time: 1200
  Attached bit evaluation: enabled
  SPF delay: 200 msec, SPF holddown: 5000 msec, SPF rapid runs: 3
  IPv4 is enabled, IPv6 is enabled
  Traffic engineering: enabled
  Restart: Disabled
    Helper mode: Enabled
Level 1
  Internal route preference: 15
  External route preference: 160
  Prefix export count: 0
  Wide metrics are enabled, Narrow metrics are enabled
Level 2
  Internal route preference: 18
  External route preference: 165
  Prefix export count: 0
  Wide metrics are enabled, Narrow metrics are enabled
```

user@host> **show isis overview logical-system R3**

```
Instance: master
  Router ID: 192.168.0.3
  Hostname: pro-bng3-a-R3
  Sysid: 0192.0168.0003
  Areaid: 49.0002
  Adjacency holddown: enabled
  Maximum Areas: 3
  LSP life time: 1200
  Attached bit evaluation: enabled
  SPF delay: 200 msec, SPF holddown: 5000 msec, SPF rapid runs: 3
  IPv4 is enabled, IPv6 is enabled
  Traffic engineering: enabled
  Restart: Disabled
    Helper mode: Enabled
Level 1
  Internal route preference: 15
  External route preference: 160
  Prefix export count: 0
  Wide metrics are enabled, Narrow metrics are enabled
Level 2
  Internal route preference: 18
  External route preference: 165
  Prefix export count: 0
  Wide metrics are enabled, Narrow metrics are enabled
```

## show isis route

<b>List of Syntax</b>	<a href="#">Syntax on page 2031</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 2031</a>
<b>Syntax</b>	<pre>show isis route &lt;destination&gt; [inet   inet6] [instance instance-name] [logical-system (all   logical-system-name)] [topology (ipv4-multicast   ipv6-multicast   ipv6-unicast   unicast)]</pre>
<b>Syntax (EX Series Switches and QFX Series)</b>	<pre>show isis route &lt;destination&gt; [inet   inet6] [instance instance-name] [topology (ipv4-multicast   ipv6-multicast   ipv6-unicast   unicast)]</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display the routes in the IS-IS routing table.
<b>Options</b>	<p><b>none</b>—Display all routes in the IS-IS routing table for all supported address families for all routing instances.</p> <p><b>destination</b>—(Optional) Destination address for the route.</p> <p><b>inet   inet6</b>—(Optional) Display inet (IPv4) or inet6 (IPv6) routes, respectively.</p> <p><b>instance instance-name</b>—(Optional) Display routes for the specified routing instance only.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>topology (ipv4-multicast   ipv6-multicast   ipv6-unicast   unicast)</b>—(Optional) Display routes for the specified topology only, or use unicast to display information, if available, for both IPv4 and IPv6 unicast topologies.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show isis route logical-system on page 2032</a> <a href="#">show isis route floodgroup on page 2032</a> <a href="#">show isis route (CLNS) on page 2033</a> <a href="#">show isis route on page 2033</a>

**Output Fields** Table 161 on page 2032 describes the output fields for the **show isis route** command. Output fields are listed in the approximate order in which they appear.

*Table 161: show isis route Output Fields*

Field Name	Field Description
<b>Current version</b>	Number of the current version of the IS-IS routing table.
<b>L1</b>	Version of Level 1 SPF that was run.
<b>L2</b>	Version of Level 2 SPF that was run.
<b>Prefix or Label</b>	Destination of the route.
<b>L</b>	IS-IS level: <ul style="list-style-type: none"> <li>• 1—Level 1 only</li> <li>• 2—Level 2 only</li> <li>• 3—Level 1 and Level 2</li> </ul>
<b>Version</b>	Version of SPF that generated the route.
<b>Metric</b>	Metric value associated with the route.
<b>Type</b>	Metric type: <b>int</b> (internal) or <b>ext</b> (external).
<b>Interface</b>	Interface to the next hop.
<b>Via</b>	System identifier of the next hop, displayed as a name if possible.
<b>ISO Routes</b>	ISO routing table entries.
<b>snpa</b>	MAC address.

## Sample Output

### show isis route logical-system

```

user@host> show isis route logical-system ls1
IS-IS routing table           Current version: L1: 8 L2: 11
Prefix      L Version Metric Type Interface  Via
10.9.7.0/30  2      11    20 int  gr-0/2/0.0  h
10.9.201.1/32 2      11    60 int  gr-0/2/0.0  h
IPv6 Unicast IS-IS routing table           Current version: L1: 9 L2: 11
Prefix      L Version Metric Type Interface  Via
8009:3::a09:3200/126 2      11    20 int  gr-0/2/0.0  h

```

### show isis route floodgroup

```

user@R2> show isis route floodgroup 49.0001
IS-IS routing table           Current version: L1: 14 L2: 27
IPv4/IPv6 Routes

```

```

-----
Prefix          L  Version  Metric Type Interface    NH  Via
  Backup Score
0.0.0.0/0       1    14      10 int  ge-0/0/8.0    IPV4 R1
81.3.3.3/32     1    14      10 int  ge-0/0/8.0    IPV4 R1
128.220.17.202/32 1    14      10 int  ge-0/0/8.0    IPV4 R1

```

### show isis route (CLNS)

```

user@host> show isis route
IS-IS routing table          Current version: L1: 10 L2: 8
IPv4/IPv6 Routes
Prefix          L  Version  Metric Type Interface    Via
0.0.0.0/0       1    10      10 int  fe-0/0/1.0    ISIS.0
ISO Routes
Prefix L    Version  Metric Type Interface    Via    snpa
0/0
    1    10      10 int  fe-0/0/1.0    isis.0 0:12:0:34:0:56
47.0005.80ff.f800.0000.0108.0001/104
    1    10      0 int
47.0005.80ff.f800.0000.0108.0001.1921.6800.4001/152
    1    10      10 int  fe-0/0/1.0    isis.0 0:12:0:34:0:56
47.0005.80ff.f800.0000.0108.0001.1921.6800.4002/152
    1    10      20 int  fe-0/0/1.0    isis.0 0:12:0:34:0:56
47.0005.80ff.f800.0000.0108.0002/104
    1    10      0 int
47.0005.80ff.f800.0000.0108.0002.1921.6800.4001/152
    1    10      10 int  fe-0/0/1.0    isis.0 0:12:0:34:0:56

```

### show isis route

```

user@host> show isis route

IS-IS routing table          Current version: L1: 4 L2: 13
IPv4/IPv6 Routes
-----
Prefix          L  Version  Metric Type Interface    NH  Via
10.255.71.52/32  2    13      10 int  ae0.0          IPV4 camaro

10.255.71.238/32  2    13      20 int  so-6/0/0.0    IPV4 olympic
                        as0.0          IPV4 glacier

10.255.71.239/32  2    13      20 int  so-6/0/0.0    IPV4 olympic
                        ae0.0          IPV4 camaro

10.255.71.242/32  2    13      10 int  as0.0          IPV4 glacier
10.255.71.243/32  2    13      10 int  so-6/0/0.0    IPV4 olympic
12.13.0.0/30      2    13      20 int  so-6/0/0.0    IPV4 olympic
12.15.0.0/30      2    13      20 int  so-6/0/0.0    IPV4 olympic
13.15.0.0/30      2    13      30 int  ae0.0          IPV4 camaro
                        so-6/0/0.0    IPV4 olympic
                        as0.0          IPV4 glacier

```

13.16.0.0/30	2	13	25	int	as0.0	IPV4 glacier
14.15.0.0/30	2	13	20	int	ae0.0	IPV4 camaro
192.2.1.0/30	2	13	30	int	so-6/0/0.0	IPV4 olympic
					as0.0	IPV4 glacier
1eee::/64	2	13	30	int	so-6/0/0.0	IPV6 olympic
					as0.0	IPV6 glacier
abcd::10:255:71:52/128	2	13	10	int	ae0.0	IPV6 camaro
abcd::10:255:71:238/128	2	13	20	int	so-6/0/0.0	IPV6 olympic
					as0.0	IPV6 glacier
abcd::10:255:71:239/128	2	13	20	int	so-6/0/0.0	IPV6 olympic
					ae0.0	IPV6 camaro
abcd::10:255:71:242/128	2	13	10	int	as0.0	IPV6 glacier
abcd::10:255:71:243/128	2	13	10	int	so-6/0/0.0	IPV6 olympic

#### MPLS Routes

-----

Label	L	Version	Metric	Type	Interface	NH	Via
300032 /52	2	38	0	int	lt-1/2/0.13	MPLS	Direct forward
to 10.0.7.60(pro-bng3-c-E)							
300048 /52	1	27	0	int	lt-1/2/0.12	MPLS	Direct forward
to 10.0.6.60(pro-bng3-c-E)							
300064 /52	1	27	0	int	lt-1/2/0.12	MPLS	Direct forward
to 10.0.6.60(pro-bng3-c-E)							
300080 /52	2	38	0	int	lt-1/2/0.12	MPLS	Direct forward
to 10.0.6.60(pro-bng3-c-E)							
300096 /52	2	38	0	int	lt-1/2/0.12	MPLS	Direct forward
to 10.0.6.60(pro-bng3-c-E)							
299920 /52	1	27	0	int	lt-1/2/0.14	MPLS	Direct forward
to 10.0.10.70(pro-bng3-c-F)							
299936 /52	1	27	0	int	lt-1/2/0.14	MPLS	Direct forward
to 10.0.10.70(pro-bng3-c-F)							
299952 /52	2	38	0	int	lt-1/2/0.14	MPLS	Direct forward
to 10.0.10.70(pro-bng3-c-F)							
299968 /52	2	38	0	int	lt-1/2/0.14	MPLS	Direct forward
to 10.0.10.70(pro-bng3-c-F)							
299984 /52	1	27	0	int	lt-1/2/0.13	MPLS	Direct forward
to 10.0.7.60(pro-bng3-c-E)							
300000 /52	1	27	0	int	lt-1/2/0.13	MPLS	Direct forward
to 10.0.7.60(pro-bng3-c-E)							
300016 /52	2	38	0	int	lt-1/2/0.13	MPLS	Direct forward
to 10.0.7.60(pro-bng3-c-E)							

## show isis spf

<b>List of Syntax</b>	<a href="#">Syntax on page 2035</a> <a href="#">Syntax (EX Series Switches) on page 2035</a>
<b>Syntax</b>	<pre>show isis spf (brief   log   results) &lt;instance <i>instance-name</i>&gt; &lt;level (1   2)&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;topology (ipv4-multicast   ipv6-multicast   ipv6-unicast   unicast)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show isis spf (brief   log   results) &lt;instance <i>instance-name</i>&gt; &lt;level (1   2)&gt; &lt;topology (ipv4-multicast   ipv6-multicast   ipv6-unicast   unicast)&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	Display information about IS-IS shortest-path-first (SPF) calculations.
<b>Options</b>	<p><b>brief</b>—Display an overview of SPF calculations.</p> <p><b>log</b>—Display the log of SPF calculations.</p> <p><b>results</b>—Display the results of SPF calculations.</p> <p><b>instance <i>instance instance-name</i></b>—(Optional) Display SPF calculations for the specified routing instance.</p> <p><b>level (1   2)</b>—(Optional) Display SPF calculations for the specified IS-IS level.</p> <p><b>log</b>—Display the log of SPF calculations.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>results</b>—Display the results of SPF calculations.</p> <p><b>topology (ipv4-multicast   ipv6-multicast   ipv6-unicast   unicast)</b>—(Optional) Display SPF calculations for the specified topology only.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show isis spf log on page 2036</a> <a href="#">show isis spf results logical-system on page 2037</a> <a href="#">show isis spf results (CLNS) on page 2038</a>

**Output Fields** Table 162 on page 2036 describes the output fields for the **show isis spf** command. Output fields are listed in the approximate order in which they appear.

*Table 162: show isis spf Output Fields*

Field Name	Field Description
Node	System ID of a node.
Metric	Metric to the node.
Interface	Interface of the next hop.
Via	System ID of the next hop.
SNPA	Subnetwork point of attachment (MAC address of the next hop).
Start time	(log option only) Time that the SPF computation started.
Elapsed (secs)	(log option only) Length of time, in seconds, required to complete the SPF computation.
Count	(log option only) Number of times the SPF was triggered.
Reason	(log option only) Reason that the SPF computation was completed.

## Sample Output

### show isis spf log

```

user@host> show isis spf log logical-system lsl
IS-IS level 1 SPF log:
Start time      Elapsed (secs) Count Reason
Fri Oct 31 12:41:18 0.000069 1 Reconfig
Fri Oct 31 12:41:18 0.000107 3 Updated LSP fix.00-00
Fri Oct 31 12:41:18 0.000050 3 Address change on so-1/2/2.0
Fri Oct 31 12:41:23 0.000033 1 Updated LSP fix.00-00
Fri Oct 31 12:41:28 0.000178 5 New adjacency scat on ge-1/1/0.0
Fri Oct 31 12:41:59 0.000060 1 Updated LSP fix.00-00
Fri Oct 31 12:42:30 0.000161 2 Multi area attachment change
Fri Oct 31 12:56:58 0.000198 1 Periodic SPF
Fri Oct 31 13:10:29 0.000209 1 Periodic SPF
IS-IS level 2 SPF log:
Start time      Elapsed (secs) Count Reason
Fri Oct 31 12:41:18 0.000035 1 Reconfig
Fri Oct 31 12:41:18 0.000047 2 Updated LSP fix.00-00
Fri Oct 31 12:41:18 0.000043 5 Address change on gr-0/2/0.0
Fri Oct 31 12:41:23 0.000022 1 Updated LSP fix.00-00
Fri Oct 31 12:41:59 0.000144 3 New adjacency h on gr-0/2/0.0
Fri Oct 31 12:42:30 0.000257 3 New LSP skag.00-00
Fri Oct 31 12:54:37 0.000195 1 Periodic SPF
Fri Oct 31 12:55:50 0.000178 1 Updated LSP fix.00-00
Fri Oct 31 12:55:55 0.000174 1 Updated LSP h.00-00
Fri Oct 31 12:55:58 0.000176 1 Updated LSP skag.00-00

```

```
Fri Oct 31 13:08:14      0.000198      1 Periodic SPF
IPv6 Unicast IS-IS level 1 SPF log:
```

Start time	Elapsed (secs)	Count	Reason
Fri Oct 31 12:41:18	0.000028	1	Reconfig
Fri Oct 31 12:41:18	0.000043	3	Updated LSP fix.00-00
Fri Oct 31 12:41:18	0.000112	4	Updated LSP fix.00-00
Fri Oct 31 12:41:23	0.000059	1	Updated LSP fix.00-00
Fri Oct 31 12:41:25	0.000041	1	Updated LSP fix.00-00
Fri Oct 31 12:41:28	0.000103	5	New adjacency scat on ge-1/1/0.0
Fri Oct 31 12:41:59	0.000040	1	Updated LSP fix.00-00
Fri Oct 31 12:42:30	0.000118	2	Multi area attachment change
Fri Oct 31 12:56:08	0.000289	1	Periodic SPF
Fri Oct 31 13:11:07	0.000214	1	Periodic SPF

```
IPv6 Unicast IS-IS level 2 SPF log:
```

Start time	Elapsed (secs)	Count	Reason
Fri Oct 31 12:41:18	0.000027	1	Reconfig
Fri Oct 31 12:41:18	0.000039	2	Updated LSP fix.00-00
Fri Oct 31 12:41:18	0.000049	6	Updated LSP fix.00-00
Fri Oct 31 12:41:23	0.000025	1	Updated LSP fix.00-00
Fri Oct 31 12:41:25	0.000023	1	Updated LSP fix.00-00
Fri Oct 31 12:41:59	0.000087	3	New adjacency h on gr-0/2/0.0
Fri Oct 31 12:42:30	0.000123	3	New LSP skag.00-00
Fri Oct 31 12:55:50	0.000121	1	Updated LSP fix.00-00
Fri Oct 31 12:55:55	0.000121	1	Updated LSP h.00-00
Fri Oct 31 12:55:58	0.000121	1	Updated LSP skag.00-00
Fri Oct 31 13:09:46	0.000201	1	Periodic SPF

```
...
```

### show isis spf results logical-system

```
user@host> show isis spf results logical-system ls1
```

```
IS-IS level 1 SPF results:
```

Node	Metric	Interface	Via	SNPA
scat.00	10	ge-1/1/0.0	scat	0:90:69:a6:48:9d
	20	10.9.1.0/30		
fix.02	10			
fix.00	0			
	10	10.9.1.0/30		
	10	10.9.5.0/30		
	10	10.9.6.0/30		
	20	10.9.7.0/30		
	60	10.9.201.1/32		

```
3 nodes
```

```
IS-IS level 2 SPF results:
```

Node	Metric	Interface	Via	SNPA
skag.00	20	gr-0/2/0.0	h	
	30	10.9.7.0/30		
skag.02	20	gr-0/2/0.0	h	
h.00	10	gr-0/2/0.0	h	
	20	10.9.6.0/30		
	20	10.9.7.0/30		
	60	10.9.201.1/32		
fix.00	0			
	10	10.9.1.0/30		
	10	10.9.5.0/30		
	10	10.9.6.0/30		

```
4 nodes
```

```

IPv6 Unicast IS-IS level 1 SPF results:
Node      Metric  Interface      Via      SNPA
scat.00   10      ge-1/1/0.0     scat     0:90:69:a6:48:9d
          20      ge-1/1/0.0     scat     0:90:69:a6:48:9d
          10      8009:1::a09:1400/126
fix.02    10
fix.00    0
          10      8009:1::a09:1400/126
          10      8009:2::a09:1e00/126
          20      8009:3::a09:3200/126
          10      8009:4::a09:2800/126
3 nodes

IPv6 Unicast IS-IS level 2 SPF results:
Node      Metric  Interface      Via      SNPA
skag.00   20      gr-0/2/0.0     h
          30      gr-0/2/0.0     h
          30      8009:3::a09:3200/126
skag.02   20      gr-0/2/0.0     h
          20      gr-0/2/0.0     h
h.00      10      gr-0/2/0.0     h
          20      gr-0/2/0.0     h
          20      8009:3::a09:3200/126
          20      8009:4::a09:2800/126
fix.00    0
          10      8009:1::a09:1400/126
          10      8009:2::a09:1e00/126
          10      8009:4::a09:2800/126
4 nodes

Multicast IS-IS level 1 SPF results:
Node      Metric  Interface      Via      SNPA
scat.00   10      ge-1/1/0.0     scat     0:90:69:a6:48:9d
fix.02    10
fix.00    0
3 nodes

Multicast IS-IS level 2 SPF results:
Node      Metric  Interface      Via      SNPA
skag.00   20      gr-0/2/0.0     h
skag.02   20      gr-0/2/0.0     h
h.00      10      gr-0/2/0.0     h
fix.00    0
4 nodes
...

```

### show isis spf results (CLNS)

```

user@host> show isis spf results
IS-IS level 1 SPF results:
Node      Metric  Interface      Via      SNPA
skag.00 10      fe-0/0/1.0     toothache 0:12:0:34:0:56
          20      fe-0/0/1.0     toothache 0:12:0:34:0:56
          20      192.168.37.64/29
          10      1921.6800.4001
          20      1921.6800.4002
pro1-a.02 10
pro1-a.00 0
          0      10.255.245.1/32
          10      192.168.37.64/29
          0      1921.6800.4211

```

```
3 nodes

IS-IS level 2 SPF results:
Node      Metric  Interface      Via      SNPA
skag.00 10      fe-0/0/1.0     toothache 0:12:0:34:0:56
          20      fe-0/0/1.0     toothache 0:12:0:34:0:56
          20      10.255.245.1/32
          20      192.168.37.64/29
          20      47.0005.80ff.f800.0000.0109.0010/104
pro1-a.02 10
pro1-a.00 0
          0      10.255.245.1/32
          10      192.168.37.64/29

3 nodes
```

## show isis statistics

---

List of Syntax	<a href="#">Syntax on page 2040</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 2040</a>
Syntax	<code>show isis statistics</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
Syntax (EX Series Switches and QFX Series)	<code>show isis statistics</code> <code>&lt;instance <i>instance-name</i>&gt;</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display statistics about IS-IS traffic.
Options	<b>none</b> —Display IS-IS traffic statistics for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Display statistics for the specified routing instance.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">clear isis statistics on page 1986</a></li></ul>
List of Sample Output	<a href="#">show isis statistics on page 2042</a>
Output Fields	<a href="#">Table 163 on page 2041</a> describes the output fields for the <b>show isis statistics</b> command. Output fields are listed in the approximate order in which they appear.

Table 163: show isis statistics Output Fields

Field Name	Field Description
PDU type	<p>PDU type:</p> <ul style="list-style-type: none"> <li>• <b>CSNP</b>—Complete sequence number PDUs contain a complete list of all link-state PDUs in the IS-IS database. CSNPs are sent periodically on all links, and the receiving systems use the information in the CSNP to update and synchronize their link-state PDU databases. The designated router multicasts CSNPs on broadcast links in place of sending explicit acknowledgments for each link-state PDU.</li> <li>• <b>IIH</b>—IS-IS hello packets are broadcast to discover the identity of neighboring IS-IS systems and to determine whether the neighbors are Level 1 or Level 2 intermediate systems.</li> <li>• <b>LSP</b>—Link-state PDUs contain information about the state of adjacencies to neighboring IS-IS systems. Link-state PDUs are flooded periodically throughout an area.</li> <li>• <b>PSNP</b>—Partial sequence number PDUs are sent multicast by a receiver when it detects that it is missing a link-state PDU (when its link-state PDU database is out of date). The receiver sends a PSNP to the system that transmitted the CSNP, effectively requesting that the missing link-state PDU be transmitted. That routing device, in turn, forwards the missing link-state PDU to the requesting routing device.</li> <li>• <b>Unknown</b>—The PDU type is unknown.</li> </ul>
Received	Number of PDUs received since IS-IS started or since the statistics were set to zero.
Processed	Number of PDUs received less the number dropped.
Drops	Number of PDUs dropped.
Sent	Number of PDUs transmitted since IS-IS started or since the statistics were set to zero.
Rexmit	Number of PDUs retransmitted since IS-IS started or since the statistics were set to zero.
Total packets received/sent	Total number of PDUs received and transmitted since IS-IS started or since the statistics were set to zero.
SNP queue length	Number of CSPN and PSNP packets currently waiting in the queue for processing. This value is almost always 0.
LSP queue length	Number of link-state PDUs waiting in the queue for processing. This value is almost always 0.
SPF runs	Number of shortest-path-first (SPF) calculations that have been performed. If this number is incrementing rapidly, it indicates that the network is unstable.
Fragments rebuilt	Number of link-state PDU fragments that the local system has computed.
LSP regenerations	Number of link-state PDUs that have been regenerated. A link-state PDU is regenerated when it is nearing the end of its lifetime and it has not changed.
Purges initiated	Number of purges that the system initiated. A purge is initiated if the software decides that a link-state PDU must be removed from the network.

## Sample Output

### show isis statistics

```
user@host> show isis statistics
IS-IS statistics for merino:
```

PDU type	Received	Processed	Drops	Sent	Rexmit
LSP	12227	12227	0	8184	683
IIH	113808	113808	0	115817	0
CSNP	198868	198868	0	198934	0
PSNP	6985	6979	6	8274	0
Unknown	0	0	0	0	0
Totals	331888	331882	6	331209	683

```
Total packets received: 331888 Sent: 331892
```

```
SNP queue length:          0 Drops:          0
LSP queue length:          0 Drops:          0
```

```
SPF runs:                  1014
Fragments rebuilt:         1038
LSP regenerations:         425
Purges initiated:          0
```

## CHAPTER 22

# LLDP Operational Commands

- `clear lldp neighbors`
- `clear lldp statistics`
- `show lldp`
- `show lldp local-information`
- `show lldp neighbors`
- `show lldp remote-global-statistics`
- `show lldp statistics`

## clear lldp neighbors

---

Syntax	<code>clear lldp neighbor</code> <code>&lt;interface <i>interface-name</i>&gt;</code>
Release Information	Command introduced in Junos OS Release 9.6.
Description	<p>Clear information regarding all Link Layer Discovery Protocol (LLDP) neighbors or LLDP neighbors of the specified interface.</p> <p>For information about interface names, see <a href="#">"Interface Naming Overview" on page 33</a>. For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i>. For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i>.</p> <p>For information about interface names in the Junos Fusion technology, see <i>Understanding Junos Fusion Ports</i>.</p>
Options	<code>interface <i>interface-name</i></code> —(Optional) Clear the LLDP neighbors on the specified interface.
Required Privilege Level	clear
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">clear lldp statistics on page 2045</a></li></ul>
List of Sample Output	<a href="#">clear lldp neighbors on page 2044</a> <a href="#">clear lldp neighbors interface ge-0/1/1.0 on page 2044</a>
Output Fields	When you enter this command, you are provided no feedback on the status of your request. You can enter the <code>show lldp neighbors</code> command before and after clearing the LLDP neighbors to verify the clear operation.

### Sample Output

#### clear lldp neighbors

```
user@switch> clear lldp neighbors
```

#### clear lldp neighbors interface ge-0/1/1.0

```
user@switch> clear lldp neighbors interface ge-0/1/1.0
```

## clear lldp statistics

<b>Syntax</b>	<code>clear lldpp neighbor</code> <code>&lt;interface <i>interface-name</i>&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 9.6.
<b>Description</b>	<p>Clear all Link Layer Discovery Protocols (LLDP) statistics or LLDP statistics associated with the specified interface.</p> <p>For information about interface names, see <a href="#">"Interface Naming Overview" on page 33</a>. For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i>. For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i>.</p> <p>For information about interface names in the Junos Fusion technology, see <i>Understanding Junos Fusion Ports</i>.</p>
<b>Options</b>	<code>interface <i>interface-name</i></code> —(Optional) Clear LLDP statistics on the specified interface.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear lldp neighbors on page 2044</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear lldp statistics on page 2045</a> <a href="#">clear lldp statistics interface ge-0/1/1.0 on page 2045</a>
<b>Output Fields</b>	When you enter this command, you are provided no feedback on the status of your request. You can enter the <code>show lldp statistics</code> command before and after clearing the LLDP statistics to verify the clear operation.

## Sample Output

### clear lldp statistics

```
user@switch> clear lldp statistics
```

### clear lldp statistics interface ge-0/1/1.0

```
user@switch> clear lldp statistics interface ge-0/1/1.0
```

## show lldp

<b>Syntax</b>	<code>show lldp</code> <code>&lt;detail&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 9.6.
<b>Description</b>	Display information about the Link Layer Discovery Protocol (LLDP).
<b>Options</b>	<b>detail</b> —(Optional) Display the detailed output level.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show lldp on page 2048</a> <a href="#">show lldp detail on page 2048</a>
<b>Output Fields</b>	<a href="#">Table 164 on page 2046</a> describes the output fields for the <b>show lldp</b> command. Output fields are listed in the approximate order in which they appear.

*Table 164: show lldp Output Fields*

Field Name	Field Description
LLDP	Status of LLDP: <b>Enabled</b> or <b>Disabled</b> .
Advertisement interval	Value of the advertisement interval parameter.
Transmit delay	Value of the transmit delay parameter.
Hold timer	Value of the hold timer parameter.
Notification interval	Value of the notification interval parameter.
Config Trap Interval	Value of the configuration trap parameter.
Connection Hold timer	Value of the connection hold timer parameter.
Port ID TLV subtype	<ul style="list-style-type: none"> <li><i>interface-name</i>—Indicates the interface name as the port information for the local device.</li> <li><b>locally-assigned</b>—Indicates that the sub-type for port ID TLV generation is locally assigned value of SNMP index of the interface.</li> </ul> <p>For more information about port ID TLV subtype, see <i>port-id-subtype</i>.</p>

Table 164: show lldp Output Fields (continued)

Field Name	Field Description
Port Description TLV type	<p>Following value used for port description TLV:</p> <ul style="list-style-type: none"> <li><b>interface-alias (ifAlias)</b>—Indicates that the <i>ifAlias</i> MIB object value is used to generate the port description TLV.</li> <li><b>interface-description (ifDescr)</b>—Indicates that the <i>ifDescr</i> MIB object value is used to generate the port description TLV.</li> </ul> <p>For more information about port description TLV type, see <i>port-description-type</i>.</p>
Interface	<p>Name of the interface for which LLDP configuration information is being reported</p> <p>For information about interface names, see <a href="#">"Interface Naming Overview" on page 33</a>. For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i>. For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i>.</p>
Parent Interface	Name of the aggregated Ethernet interface, if any, to which the interface belongs.
LLDP	LLDP operating state. The state can be Enabled or Disabled.
LLDP-MED	LLDP-MED operating state. The state can be Enabled or Disabled.
Power Negotiation	LLDP power negotiation operating state. The state can be Enabled or Disabled.
LLDP basic TLVs supported	List of basic LLDP TLVs supported by this device ( <b>detail</b> only).
LLDP 802 TLVs supported	List of IEEE 802.1 LLDP TLVs supported by this device ( <b>detail</b> only).

## Sample Output

### show lldp

```
user@host> show lldp
LLDP                               : Enabled
Advertisement interval             : 30 seconds
Transmit delay                     : 2 seconds
Hold timer                        : 120 seconds
Notification interval             : 0 Second(s)
Config Trap Interval              : 0 seconds
Connection Hold timer             : 300 seconds
Port ID TLV subtype               : locally-assigned
Port Description TLV type         : interface-description (ifDescr)

Interface      Parent Interface  LLDP      LLDP-MED    Power Negotiation
all            -                Enabled
```

## Sample Output

### show lldp detail

```
user@host> show lldp detail
LLDP                               : Enabled
Advertisement interval             : 30 seconds
Transmit delay                     : 2 seconds
Hold timer                        : 120 seconds
Notification interval             : 0 Second(s)
Config Trap Interval              : 0 seconds
Connection Hold timer             : 300 seconds
Port ID TLV subtype               : locally-assigned
Port Description TLV type         : interface-description (ifDescr)

Interface      Parent Interface  LLDP      LLDP-MED    Power Negotiation
Neighbor count
all            -                Enabled
2

Interface      Parent Interface  Vlan-id   Vlan-name
xe-0/0/0       -                4080      vlan-4080
xe-0/0/1       -                4080      vlan-4080

Basic Management TLVs supported:
End Of LLDPDU, Chassis ID, Port ID, Time To Live, Port Description, System Name,
System Description, System Capabilities, Management Address

Organizationally Specific TLVs supported:
Port VLAN tag, VLAN Name, MAC/PHY Configuration/Status, Link Aggregation,Maximum
Frame Size
```

## show lldp local-information

<b>Syntax</b>	show lldp local-information
<b>Release Information</b>	Command introduced in Junos OS Release 9.6.
<b>Description</b>	Display local Link Layer Discovery Protocol (LLDP) information.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show lldp local-information(Management Information Address Subtype is IPv4) on page 2051</a> <a href="#">show lldp local-information(Management Information Address Subtype is IPv6) on page 2051</a>
<b>Output Fields</b>	<a href="#">Table 165 on page 2049</a> describes the output fields for the <b>show lldp local-information</b> command. Output fields are listed in the approximate order in which they appear.

*Table 165: show lldp local-information Output Fields*

Field Name	Field Description
<b>LLDP Local Information details</b>	Information that follows pertains to the local system.
<b>Chassis ID</b>	List of chassis identifiers for local information.
<b>System name</b>	Local system name reported by LLDP.
<b>System descr</b>	Local system description reported by LLDP.
<b>System Capabilities</b>	Capabilities (such as <b>Bridge</b> or <b>Router</b> ) that are <b>Supported</b> or <b>Enabled</b> by system on the interface.
<b>Management Information</b>	Listed by <b>Interface Name</b> , <b>Address Subtype</b> (such as <b>ipv4</b> , <b>ipv6</b> ), <b>Address</b> (such as <b>192.168.168.229</b> , <b>1fd::1a10</b> ), <b>Interface Number</b> , and <b>Interface Numbering Subtype</b> .
<b>Interface Name</b>	List of local interfaces.  For information about interface names, see <a href="#">"Interface Naming Overview" on page 33</a> . For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i> . For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i> .
<b>Parent Interface</b>	Name of the <b>ae</b> interface to which the interface belongs
<b>Interface ID</b>	List of local interface identifiers.

*Table 165: show lldp local-information Output Fields (continued)*

Field Name	Field Description
<b>Interface Description</b>	List of local interface descriptions.
<b>Status</b>	List of interface conditions: <b>UP</b> or <b>DOWN</b> .

---

## Sample Output

### show lldp local-information(Management Information Address Subtype is IPv4)

```

user@host> show lldp local-information
LLDP Local Information details

Chassis ID   : 64:87:88:65:37:c0
System name  : apg-hp1
System descr : Juniper Networks, Inc. mx240 , version 14.1I20131231_0701_builder
[builder] Build date: 2013-12-31 07:13:42 UTC

System Capabilities
  Supported      : Bridge Router
  Enabled        : Bridge Router

Management Information
  Interface Name : Unknown
  Address Subtype : IPv4(1)
  Address        : 10.216.97.103
  Interface Number : 1
  Interface Numbering Subtype : ifIndex(2)

Interface name  Parent Interface  Interface ID  Interface description  Status
fxp0           -                1             fxp0                   Up
me0            -                33            me0                     Up
ge-2/0/0       ae0                1475          ge-2/0/0               Up
ge-2/0/1       ae0                1476          ge-2/0/1               Up

```

### show lldp local-information(Management Information Address Subtype is IPv6)

```

user@host> show lldp local-information
LLDP Local Information details

Chassis ID   : ac:4b:c8:92:67:c0
System name  : apg-hp
System descr : Juniper Networks, Inc. mx240 , version 13.2-20131210.0 [builder]
Build date: 2013-12-10 06:23:15 UTC

System Capabilities
  Supported      : Bridge Router
  Enabled        : Bridge Router

Management Information
  Interface Name : fxp0
  Address Subtype : IPv6(2)
  Address        : 1fd::1a20
  Interface Number : 1
  Interface Numbering Subtype : ifIndex(2)

Interface name  Parent Interface  Interface ID  Interface description  Status
ge-1/2/4       -                530           -                      Down
ge-1/2/5       -                531           -                      Down
ge-1/2/2       -                528           ge-1/2/2              Up
ge-1/2/3       -                529           ge-1/2/3              Up

```

## show lldp neighbors

**Syntax** `show lldp neighbors`  
`<interface interface-name>`

**Release Information** Command introduced in Junos OS Release 9.6.

**Description** Display information about LLDP neighbors.

For information about interface names, see ["Interface Naming Overview" on page 33](#). For information about interface names for TX Matrix routers, see *TX Matrix Router Chassis and Interface Names*. For information about FPC numbering on TX Matrix routers, see *Routing Matrix with a TX Matrix Router FPC Numbering*.

For information about extended port names in the Junos Fusion technology, see *Understanding Junos Fusion Ports*.

**Options** `interface interface-name`—(Optional) Display the neighbor information about a particular physical interface.



**NOTE:** Starting with Junos OS Release 14.2, you can also display LLDP neighbor details for management interfaces, such as `fxp` or `me`, on MX Series routers.

**Required Privilege Level** view

**Related Documentation**

- [clear lldp neighbors on page 2044](#)

**List of Sample Output**

- [show lldp neighbors on page 2055](#)
- [show lldp neighbors interface ge-0/0/4 \(Management Address is IPv4\) on page 2055](#)
- [show lldp neighbors interface ge-0/0/4 \(Management Address is IPv6\) on page 2056](#)
- [show lldp neighbors \(Management Ethernet Interfaces\) on page 2057](#)

**Output Fields** [Table 166 on page 2052](#) describes the output fields for the `show lldp neighbors` command. Output fields are listed in the approximate order in which they appear.

*Table 166: show lldp neighbors Output Fields*

Field Name	Field Description
LLDP Remote Devices Information	Information about remote devices.

Table 166: show lldp neighbors Output Fields (continued)

Field Name	Field Description
<b>LocalInterface</b>	List of local interfaces for which neighbor information is available.
<b>ChassisId</b>	List of chassis identifiers for neighbors.
<b>PortInfo</b>	List of port information gathered from neighbors. This could be the port identifier or port description.
<b>SysName</b>	List of system names gathered from neighbors.
<b>LLDP Neighbor Information</b>	Information about both local and neighbor systems on the interface (appears when the <b>interface</b> option is used).
<b>Local Information</b>	Information about local systems on the interface (appears when the <b>interface</b> option is used).
<b>Neighbor Information</b>	Information about both local and neighbor system on the interface (appears when the <b>interface</b> option is used).
<b>Index</b>	Local interface index (appears when the <b>interface</b> option is used).
<b>Time Mark</b>	Date and timestamp of information (appears when the <b>interface</b> option is used).
<b>Time To Live</b>	Number of seconds for which this information is valid (appears when the <b>interface</b> option is used).
<b>Local Interface</b>	Name of the local physical interface (appears when the <b>interface</b> option is used).
<b>Parent Interface</b>	Name of the <b>ae</b> interface to which the interface belongs
<b>Local Port ID</b>	Local port identifier (appears when the <b>interface</b> option is used).
<b>Neighbor Information</b>	Information about neighbor systems on the interface (appears when the <b>interface</b> option is used).
<b>Chassis type</b>	Type of chassis identifier supplied, such as <b>MAC address</b> (appears when the <b>interface</b> option is used).
<b>Chassis ID</b>	Chassis identifier of type listed (appears when the <b>interface</b> option is used).
<b>Port type</b>	Type of port identifier supplied, such as <b>local</b> (appears when the <b>interface</b> option is used).
<b>Port ID</b>	Port identifier of type listed (appears when the <b>interface</b> option is used).
<b>Port description</b>	Port description (appears when the <b>interface</b> option is used).

*Table 166: show lldp neighbors Output Fields (continued)*

Field Name	Field Description
<b>System name</b>	Name supplied by the system on the interface (appears when the <b>interface</b> option is used).
<b>System Description</b>	Description supplied by the system on the interface (appears when the <b>interface</b> option is used).
<b>System Capabilities</b>	Capabilities (such as <b>bridge</b> or <b>router</b> ) that are <b>Supported</b> or <b>Enabled</b> by the system on the interface (appears when the <b>interface</b> option is used).
<b>Management address</b>	Details of the management address: <b>Address Type</b> (such as <b>ipv4</b> and <b>ipv6</b> ), <b>Address</b> (such as <b>10.204.34.35</b> , <b>1fd::1a10</b> ), <b>Interface Number</b> , <b>Interface Subtype</b> , and <b>Organization Identifier (OID)</b> (appears when the <b>interface</b> option is used).
<b>Organization Info</b>	One or more entries listing remote information by Organizationally Unique Identifier (OUI), <b>Subtype</b> , <b>Index</b> , and <b>Info</b> (appears when the <b>interface</b> option is used).

---

## Sample Output

### show lldp neighbors

```
user@host> show lldp neighbors
```

Local Interface	Parent Interface	Chassis Id	Port info	System Name
ge-2/0/0	ae0	ac:4b:c8:92:67:c0	528	apg-hp
ge-2/0/1	ae0	ac:4b:c8:92:67:c0	529	apg-hp

## Sample Output

### show lldp neighbors interface ge-0/0/4 (Management Address is IPv4)

```
user@host> show lldp neighbors interface ge-0/0/4
```

LLDP Neighbor Information:

Local Information:

Index: 2 Time to live: 120 Time mark: Tue Dec 31 11:47:46 2013 Age: 15 secs

Local Interface : ge-2/0/1

Parent Interface : ae0

Local Port ID : 1476

Ageout Count : 0

Neighbour Information:

Chassis type : Mac address

Chassis ID : ac:4b:c8:92:67:c0

Port type : Locally assigned

Port ID : 529

Port description : ge-1/2/3

System name : apg-hp

System Description : Juniper Networks, Inc. mx240 , version 14.1-20131222.0

[builder] Build date: 2013-12-22 09:13:26 UTC

System capabilities

Supported: Bridge Router

Enabled : Bridge Router

Management address

Address Type : IPv4(1)

Address : 10.216.98.57

Interface Number : 1

Interface Subtype : ifIndex(2)

OID : 1.3.6.1.2.1.31.1.1.1.1.1.

Organization Info

OUI : IEEE 802.3 Private (0x00120f)

Subtype : MAC/PHY Configuration/Status (1)

Info : Autonegotiation [supported, enabled (0x3)], PMD Autonegotiation

Capability (0x1d), MAU Type (0x0)

Index : 1

Organization Info

OUI : IEEE 802.3 Private (0x00120f)

Subtype : Link Aggregation (3)

Info : Aggregation Status (0x3), Aggregation Port ID (1694498816)

Index : 2

Organization Info

```
OUI      : IEEE 802.3 Private (0x00120f)
Subtype   : Maximum Frame Size (4)
Info      : MTU Size (1518)
Index     : 3
```

#### show lldp neighbors interface ge-0/0/4 (Management Address is IPv6)

```
user@host> show lldp neighbors interface ge-0/0/4
LLDP Neighbor Information:
Local Information:
Index: 1 Time to live: 120 Time mark: Thu Dec 12 07:19:45 2013 Age: 28 secs
Local Interface      : ge-1/2/2
Parent Interface     : -
Local Port ID        : 528
Ageout Count         : 0

Neighbour Information:
Chassis type         : Mac address
Chassis ID           : 64:87:88:65:37:c0
Port type            : Locally assigned
Port ID              : 1475
Port description     : ge-2/0/0
System name          : apg-hp1

System Description : Juniper Networks, Inc. mx240 , version 11.4R10 Build date:
2013-10-24 10:10:02 UTC

System capabilities
  Supported: Bridge Router
  Enabled  : Bridge Router

Management address
  Address Type      : IPv6(2)
  Address           : 1fd::1a10
  Interface Number  : 1
  Interface Subtype : ifIndex(2)
  OID               : 1.3.6.1.2.1.31.1.1.1.1.1.

Organization Info
  OUI      : IEEE 802.3 Private (0x00120f)
  Subtype   : MAC/PHY Configuration/Status (1)
  Info      : Autonegotiation [supported, enabled (0x3)], PMD Autonegotiation
  Capability (0x5), MAU Type (0x0)
  Index     : 1

Organization Info
  OUI      : IEEE 802.3 Private (0x00120f)
  Subtype   : Link Aggregation (3)
  Info      : Aggregation Status (0x1), Aggregation Port ID (0)
  Index     : 2

Organization Info
  OUI      : IEEE 802.3 Private (0x00120f)
  Subtype   : Maximum Frame Size (4)
  Info      : MTU Size (1518)
  Index     : 3

Organization Info
  OUI      : Ethernet Bridged (0x0080c2)
```

```
Subtype : VLAN Name (3)
Info    : VLAN ID (100), VLAN Name (vlan-100)
Index   : 4
```

#### show lldp neighbors (Management Ethernet Interfaces)

```
user@host> show lldp neighbors
```

Local Interface System Name	Parent Interface	Chassis Id	Port info
fxp0	-	78:fe:3d:ee:4e:00	151
x2-sw35			
xe-0/0/0	-	a8:d0:e5:50:26:c0	512
sitara			
xe-0/0/1	-	a8:d0:e5:50:26:c0	513
sitara			

## show lldp remote-global-statistics

---

<b>Syntax</b>	show lldp remote-global-statistics
<b>Release Information</b>	Command introduced in Junos OS Release 9.6.
<b>Description</b>	Display remote Link Layer Discovery Protocol (LLDP) global statistics.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show lldp remote-global-statistics on page 2059</a>
<b>Output Fields</b>	<a href="#">Table 167 on page 2058</a> describes the output fields for the <b>show lldp remote-global-statistics</b> command. Output fields are listed in the approximate order in which they appear.

*Table 167: show lldp remote-global-statistics Output Fields*

Field Name	Field Description
LLDP Remote Database Table Counters	Information about remote database table counters.
LastchangeTime	Time elapsed between LLDP agent startup and the last change to the remote database table information.
Inserts	Number of insertions made in the remote database table.
Deletes	Number of deletions made in the remote database table.
Drops	Number of LLDP frames dropped from the remote database table because of errors.
Ageouts	Number of remote database table entries that have aged out of the table.

## Sample Output

### show lldp remote-global-statistics

```
user@host> show lldp remote-global-statistics
user@host> show lldp remote-global-statistics
LLDP Remote Database Table Counters
LastchangeTime      Inserts    Deletes    Drops    Ageouts
00:00:76 (76 sec)   192        0           0         0
```

## show lldp statistics

**Syntax** `show lldp statistics`  
`<interface interface-name>`

**Release Information** Command introduced in Junos OS Release 9.6.

**Description** Display information about Link Layer Discovery Protocol (LLDP) statistics.

**Options** `interface interface-name`—(Optional) Display the statistics about a particular physical interface.



**NOTE:** Starting with Junos OS Release 14.2, you can also display LLDP statistical details for management interfaces, such as `fxp` or `me`, on MX Series routers.

**Required Privilege Level** view

**Related Documentation** • [clear lldp statistics on page 2045](#)

**List of Sample Output** [show lldp statistics on page 2062](#)  
[show lldp statistics interface ge-0/1/1 on page 2062](#)

**Output Fields** [Table 168 on page 2060](#) describes the output fields for the `show lldp statistics` command. Output fields are listed in the approximate order in which they appear.

*Table 168: show lldp statistics Output Fields*

Field Name	Field Description
Interface	Interface name.  For information about interface names, see <a href="#">“Interface Naming Overview” on page 33</a> . For information about interface names for TX Matrix routers, see <i>TX Matrix Router Chassis and Interface Names</i> . For information about FPC numbering on TX Matrix routers, see <i>Routing Matrix with a TX Matrix Router FPC Numbering</i> .  For information about extended port names in the Junos Fusion technology, see <i>Understanding Junos Fusion Ports</i> .
Received	Number of LLDP frames received on this interface.
Transmitted	Number of LLDP frames sent on this interface.

*Table 168: show lldp statistics Output Fields (continued)*

Field Name	Field Description
<b>Unknown-TLVs</b>	Number of LLDP frames with unsupported content received on this interface.
<b>With-Errors</b>	Number of LLDP frames with errors received on this interface.
<b>Discarded</b>	Number of LLDP frames received on this interface that were discarded because of problems.
<b>Transmitted</b>	Total number of LLDP frames that were transmitted on an interface.
<b>Untransmitted</b>	Total number of LLDP frames that were untransmitted on an interface.

## Sample Output

### show lldp statistics

```
user@host> show lldp statistics
```

Interface	Parent Interface	Received	Unknown TLVs	With Errors
xe-3/0/0.0	ae31.0	1564	0	0
xe-3/0/1.0	ae31.0	1564	0	0
xe-3/0/2.0	ae31.0	1565	0	0
xe-3/0/3.0	ae31.0	1566	0	0
xe-3/0/4.0	ae31.0	1598	0	0
xe-3/0/5.0	ae31.0	1598	0	0
xe-3/0/6.0	ae31.0	1596	0	0
xe-3/0/7.0	ae31.0	1597	0	0
xe-5/0/6.0	-	0	0	0
xe-5/0/7.0	-	0	0	0

Discarded TLVs	Transmitted	Untransmitted
0	3044	1
0	3044	1
0	3044	1
0	3044	1
0	3075	1
0	3075	1
0	3075	1
0	3075	1
0	17312	0
0	17312	0

## Sample Output

### show lldp statistics interface ge-0/1/1

```
user@host> show lldp statistics interface ge-0/1/1
```

Interface	Received	Transmitted	Unknown-TLVs	With-Errors	Discarded
ge-0/1/1	544	540	0	0	0

## CHAPTER 23

# MVRP Operational Commands

- `show mvrp`
- `show mvrp applicant-state`
- `show mvrp dynamic-vlan-memberships`
- `show mvrp interface`
- `show mvrp registration-state`
- `show mvrp statistics`

## show mvrp

---

<b>Syntax</b>	show mvrp
<b>Release Information</b>	Command introduced in Junos OS Release 10.0 for EX Series switches. Command introduced in Junos OS Release 10.1 for MX Series routers. Command introduced in Junos OS Release 13.2X50-D10 for EX Series switches. Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.
<b>Description</b>	Display Multiple VLAN Registration Protocol (MVRP) configuration information.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Example: Configuring Automatic VLAN Administration Using MVRP on EX Series Switches</i></li><li>• <i>Verifying That MVRP Is Working Correctly on Switches</i></li><li>• <a href="#">show mvrp statistics on page 2075</a></li><li>• <a href="#">show mvrp applicant-state on page 2067</a></li><li>• <a href="#">show mvrp dynamic-vlan-memberships on page 2069</a></li><li>• <a href="#">show mvrp interface on page 2071</a></li><li>• <a href="#">show mvrp registration-state on page 2073</a></li><li>• <a href="#">show mvrp statistics on page 2075</a></li><li>• <a href="#">show mvrp applicant-state on page 2067</a></li><li>• <a href="#">show mvrp dynamic-vlan-memberships on page 2069</a></li><li>• <a href="#">show mvrp interface on page 2071</a></li><li>• <a href="#">show mvrp registration-state on page 2073</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show mvrp (EX Series switches and MX Series routers) on page 2065</a> <a href="#">show mvrp (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320) on page 2065</a> <a href="#">show mvrp (EX Series switches) on page 2066</a>
<b>Output Fields</b>	<a href="#">Table 169 on page 2064</a> lists the output fields for the <b>show mvrp</b> command. Output fields are listed in the approximate order in which they appear.

*Table 169: show mvrp Output Fields*

Field Name	Field Description
MVRP dynamic VLAN creation	Displays whether global MVRP dynamic VLAN creation is <b>Enabled</b> or <b>Disabled</b> .

---

Table 169: show mvrp Output Fields (continued)

Field Name	Field Description
<b>Global MVRP configuration</b>	Displays global MVRP information: <ul style="list-style-type: none"> <li>• <b>MVRP status</b>—Displays whether MVRP is <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>MVRP dynamic vlan creation</b>—Displays whether global MVRP dynamic VLAN creation is <b>Enabled</b> or <b>Disabled</b>.</li> </ul>
<b>MVRP BPDU MAC address</b>	Displays the multicast media access control (MAC) address for MVRP. If configured, the provider MVRP multicast MAC address is used; otherwise, the customer MVRP multicast MAC address is used.
<b>MVRP timers (ms)</b>	Displays MVRP timer information: <ul style="list-style-type: none"> <li>• <b>Interface</b>—The interface on which MVRP is configured.</li> <li>• <b>Join</b>—The maximum number of milliseconds the interfaces must wait before sending VLAN advertisements.</li> <li>• <b>Leave</b>—The number of milliseconds an interface must wait after receiving a Leave message to remove the interface from the VLAN specified in the message.</li> <li>• <b>LeaveAll</b>—The interval at which LeaveAll messages are sent on interfaces. LeaveAll messages maintain current MVRP VLAN membership information in the network.</li> </ul>
<b>Interface based configuration</b>	Displays interface-specific MVRP information: <ul style="list-style-type: none"> <li>• <b>Interface</b>—The interface on which MVRP is configured.</li> <li>• <b>Status</b>—Displays whether MVRP is <b>Enabled</b> or <b>Disabled</b>.</li> <li>• <b>Registration</b>—Displays whether registration for the interface is <b>Forbidden</b> or <b>Normal</b>.</li> <li>• <b>Dynamic VLAN Creation</b>—Displays whether interface dynamic VLAN creation is <b>Enabled</b> or <b>Disabled</b>.</li> </ul>

## Sample Output

### show mvrp (EX Series switches and MX Series routers)

```

user@host> show mvrp
MVRP configuration for routing instance 'default-switch'
MVRP dynamic VLAN creation : Enabled
MVRP BPDU MAC address      : Customer bridge group (01-80-C2-00-00-21)
MVRP timers (ms)
  Interface    Join    Leave  LeaveAll
  ge-11/2/8    200    800    10000
  ge-11/0/9    200    800    10000
  ge-11/3/0    200    800    10000

```

## Sample Output

### show mvrp (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320)

```

user@host> show mvrp
MVRP configuration for routing instance 'default-switch'
MVRP dynamic VLAN creation : Enabled
MVRP BPDU MAC address      : Customer bridge group (00-00-5E-00-53-00)
MVRP timers (ms)
  Interface    Join    Leave  LeaveAll
  ge-0/0/1     200    800    60

```

## Sample Output

### show mvrp (EX Series switches)

```
user@switch> show mvrp
```

#### Global MVRP configuration

MVRP status : Enabled

MVRP dynamic vlan creation: Enabled

#### MVRP Timers (ms):

Interface	Join	Leave	LeaveAll
-----	----	-----	-----
all	200	600	10000
xe-0/1/1.0	200	600	10000

#### Interface based configuration:

Interface	Status	Registration	Dynamic VLAN Creation
-----	-----	-----	-----
all	Disabled	Normal	Enabled
xe-0/1/1.0	Enabled	Normal	Enabled

## show mvrp applicant-state

Syntax	show mvrp applicant-state
Release Information	Command introduced in Junos OS Release 10.1. Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.
Description	For MX Series routers, EX Series switches, SRX1500, SRX300, SRX550M, SRX345, SRX340, and SRX320, display Multiple VLAN Registration Protocol (MVRP) applicant state information.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show mvrp on page 2064</a></li><li>• <a href="#">show mvrp interface on page 2071</a></li><li>• <a href="#">show mvrp registration-state on page 2073</a></li><li>• <a href="#">show mvrp statistics on page 2075</a></li><li>• <a href="#">show mvrp interface on page 2071</a></li><li>• <a href="#">show mvrp registration-state on page 2073</a></li></ul>
List of Sample Output	<a href="#">show mvrp applicant-state (EX Series and MX Series) on page 2068</a> <a href="#">show mvrp applicant-state on page 2068</a>
Output Fields	<a href="#">Table 170 on page 2067</a> lists the output fields for the <b>show mvrp applicant-state</b> command. Output fields are listed in the approximate order in which they appear.

Table 170: show mvrp applicant-state Output Fields

Field Name	Field Description
VLAN Id	Displays the VLAN ID number.
Interface	Displays the interface number associated with the VLAN ID.

Table 170: show mvrp applicant-state Output Fields (continued)

Field Name	Field Description
<b>State</b>	<p>Displays one of the following MVRP registrar states:</p> <ul style="list-style-type: none"> <li>• VO— Very anxious observer.</li> <li>• VP —Very anxious passive.</li> <li>• VA —Very anxious new.</li> <li>• AN —Anxious new.</li> <li>• AA —Anxious active.</li> <li>• QA —Quiet active.</li> <li>• LA —Leaving active.</li> <li>• AO —Anxious observer.</li> <li>• QO —Quiet observer.</li> <li>• LO —Leaving observer.</li> <li>• AP —Anxious passive.</li> <li>• QA —Quiet passive.</li> </ul>

## Sample Output (EX Series and MX Series)

### show mvrp applicant-state (EX Series and MX Series)

```

user@host> show mvrp applicant-state
MVRP applicant state for routing instance 'default-switch'
(VO) Very anxious observer, (VP) Very anxious passive, (VA) Very anxious new,
(AN) Anxious new, (AA) Anxious active, (QA) Quiet active, (LA) Leaving active,
(AO) Anxious observer, (QO) Quiet observer, (LO) Leaving observer,
(AP) Anxious passive, (QP) Quiet passive

VLAN Id      Interface      State
-----
100          ge-11/3/0      Declaring (QA)
200          ge-11/3/0      Declaring (QA)
300          ge-11/3/0      Declaring (QA)

```

## Sample Output (SRX1500, SRX300, SRX550M, SRX345, SRX340, and SRX320)

### show mvrp applicant-state

```

user@host> show mvrp applicant-state
MVRP applicant state for routing instance 'default-switch'
(VO) Very anxious observer, (VP) Very anxious passive, (VA) Very anxious new,
(AN) Anxious new, (AA) Anxious active, (QA) Quiet active, (LA) Leaving active,
(AO) Anxious observer, (QO) Quiet observer, (LO) Leaving observer,
(AP) Anxious passive, (QP) Quiet passive

VLAN Id      Interface      State
-----
1            ge-0/0/1      Idle (VO)
30           ge-0/0/1      Idle (VO)
40           ge-0/0/1      Idle (VO)
50           ge-0/0/1      Idle (VO)
100          ge-0/0/1      Idle (VO)

```

## show mvrp dynamic-vlan-memberships

<b>Syntax</b>	show mvrp dynamic-vlan-memberships
<b>Release Information</b>	<p>Command introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 10.1 for MX Series routers.</p> <p>Command introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.</p>
<b>Description</b>	Display all VLANs that have been created dynamically using Multiple VLAN Registration Protocol (MVRP) on the router, switch, or SRX Series device.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Example: Configuring Automatic VLAN Administration Using MVRP on EX Series Switches</i></li> <li>• <i>Verifying That MVRP Is Working Correctly on Switches</i></li> <li>• <a href="#">show mvrp on page 2064</a></li> <li>• <a href="#">show mvrp applicant-state on page 2067</a></li> <li>• <a href="#">show mvrp interface on page 2071</a></li> <li>• <a href="#">show mvrp registration-state on page 2073</a></li> <li>• <a href="#">show mvrp registration-state on page 2073</a></li> <li>• <a href="#">show mvrp statistics on page 2075</a></li> </ul>
<b>List of Sample Output</b>	<p><a href="#">show mvrp dynamic-vlan-memberships (MX Series and EX Series) on page 2069</a></p> <p><a href="#">show mvrp dynamic-vlan-memberships (EX Series) on page 2070</a></p> <p><a href="#">show mvrp dynamic-vlan-memberships on page 2070</a></p>
<b>Output Fields</b>	<a href="#">Table 171 on page 2069</a> lists the output fields for the <b>show mvrp dynamic-vlan-memberships</b> command on MX Series routers and EX Series switches. Output fields are listed in the approximate order in which they appear.

*Table 171: show mvrp dynamic-vlan-memberships Output Fields*

Field Name	Field Description
VLAN Id	The VLAN ID of the dynamically created VLAN.
Interfaces	The interface or interfaces that are bound to the dynamically created VLAN.

## Sample Output (MX Series Routers and EX Series Switches)

show mvrp dynamic-vlan-

### memberships (MX Series and EX Series)

```
user@host> show mvrp dynamic-vlan-memberships
MVRP dynamic vlans for routing instance 'default-switch'
(s) static vlan, (f) fixed registration

VLAN Id      Interfaces
  100 (s)    ge-11/3/0
  200 (s)    ge-11/3/0
  300 (s)
```

### Sample Output (EX Series Switches)

#### show mvrp dynamic-vlan-memberships (EX Series)

```
user@switch> show mvrp dynamic-vlan-memberships
VLAN Name      Interfaces
-----
__mvrp_100__    xe-0/1/1.0
                 xe-0/1/0.0
__mvrp_200__    xe-0/1/1.0
                 xe-0/1/0.0
__mvrp_300__    xe-0/1/1.0
```

### Sample Output (SRX1500, SRX300, SRX550M, SRX345, SRX340, SRX320)

#### show mvrp dynamic-vlan-memberships

```
user@host> show mvrp dynamic-vlan-memberships
MVRP dynamic vlans for routing instance 'default-switch'
(s) static vlan, (f) fixed registration

VLAN Id      Interfaces
   1 (s)
  30 (s)
  40 (s)    ge-0/0/1
  50 (s)    ge-0/0/1
 100 (s)    ge-0/0/1 (f)
```

## show mvrp interface

<b>Syntax</b>	show mvrp interface
<b>Release Information</b>	Command introduced in Junos OS Release 10.1. Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.
<b>Description</b>	Display Multiple VLAN Registration Protocol (MVRP) interface-specific information.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show mvrp on page 2064</a></li> <li>• <a href="#">show mvrp applicant-state on page 2067</a></li> <li>• <a href="#">show mvrp dynamic-vlan-memberships on page 2069</a></li> <li>• <a href="#">show mvrp registration-state on page 2073</a></li> <li>• <a href="#">show mvrp registration-state on page 2073</a></li> <li>• <a href="#">show mvrp statistics on page 2075</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show mvrp interface on page 2071</a> <a href="#">show mvrp interface on page 2072</a>
<b>Output Fields</b>	<a href="#">Table 172 on page 2071</a> lists the output fields for the <b>show mvrp interface</b> command. Output fields are listed in the approximate order in which they appear.

*Table 172: show mvrp interface Output Fields*

Field Name	Field Description
Interface	Interface on which MVRP is configured.
Status	Status of the MVRP: <b>Enabled</b> or <b>Disabled</b> .
Registration Mode	Registration for the interface: <b>Fixed</b> , <b>Forbidden</b> , or <b>Normal</b> .
Applicant Mode	Applicant mode.

## Sample Output (MX Series Routers and SX Series Switches)

### show mvrp interface

```

user@host> show mvrp interface
MVRP interface information for routing instance 'default-switch'

Interface      Status      Registration  Applicant
              Mode        Mode

```

ge-11/2/8	Enabled	Normal	Normal
ge-11/0/9	Enabled	Normal	Normal
ge-11/3/0	Enabled	Normal	Normal

### Sample Output (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320)

#### show mvrp interface

```
user@host> show mvrp interface
MVRP interface information for routing instance 'default-switch'
```

Interface	Status Mode	Registration Mode	Applicant Mode
ge-0/0/1	Enabled	Normal	Normal

## show mvrp registration-state

<b>Syntax</b>	show mvrp registration-state
<b>Release Information</b>	Command introduced in Junos OS Release 10.1. Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.
<b>Description</b>	For MX Series routers, EX Series switches and SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320, display Multiple VLAN Registration Protocol (MVRP) registration state information.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show mvrp on page 2064</a></li> <li>• <a href="#">show mvrp dynamic-vlan-memberships on page 2069</a></li> <li>• <a href="#">show mvrp interface on page 2071</a></li> <li>• <a href="#">show mvrp statistics on page 2075</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show mvrp registration-state (EX Series and MX Series) on page 2074</a> <a href="#">show mvrp registration-state (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320) on page 2074</a>
<b>Output Fields</b>	Table 173 on page 2073 lists the output fields for the <b>show mvrp registration-state</b> command. Output fields are listed in the approximate order in which they appear.

Table 173: show mvrp registration-state Output Fields

Field Name	Field Description
VLAN Id	Displays the VLAN ID number.
Interface	Displays the interface number associated with the VLAN ID.
Registrar State	Displays whether the registrar state is Registered or Empty.
Forced State	Displays whether the forced state is Registered or Empty.
Managed State	Displays one of the following states: <ul style="list-style-type: none"> <li>• <b>fixed</b>—VLANs always stay in a registered state and are declared as such on all other forwarding ports.</li> <li>• <b>normal</b>—VLANs participate in the MVRP protocol and honor incoming join requests normally.</li> <li>• <b>forbidden</b>—VLANs ignore the incoming join requests and always stay in an unregistered state.</li> </ul>
STP State	Displays whether the Spanning Tree Protocol (STP) is Blocking or Forwarding.

## Sample Output

### show mvrp registration-state (EX Series and MX Series)

```
user@host> show mvrp registration-state
MVRP registration state for routing instance 'default-switch'
```

VLAN Id	Interface	Registrar State	Forced State	Managed State	STP State
100	ge-11/2/8	Empty	Registered	Fixed	Forwarding
	ge-11/0/9	Empty	Empty	Normal	Forwarding
	ge-11/3/0	Registered	Registered	Normal	Forwarding
101	ge-11/2/8	Empty	Registered	Fixed	Forwarding
	ge-11/0/9	Empty	Empty	Normal	Forwarding
	ge-11/3/0	Registered	Registered	Normal	Forwarding

## Sample Output

### show mvrp registration-state (SRX1500, SRX300, SRX550M, SRX345, SRX340 and SRX320)

```
user@host> show mvrp registration-state
MVRP registration state for routing instance 'default-switch'
```

VLAN Id	Interface	Registrar State	Forced State	Managed State	STP State
1	ge-0/0/1	Empty	Empty	Normal	Forwarding
30	ge-0/0/1	Empty	Empty	Normal	Forwarding
40	ge-0/0/1	Registered	Registered	Normal	Forwarding
50	ge-0/0/1	Registered	Registered	Normal	Forwarding
100	ge-0/0/1	Empty	Registered	Fixed	Forwarding

## show mvrp statistics

<b>List of Syntax</b>	<a href="#">Syntax (EX Series Switches) on page 2075</a> <a href="#">Syntax (Switches with ELS Support) on page 2075</a> <a href="#">Syntax (SRX Devices) on page 2075</a>
<b>Syntax (EX Series Switches)</b>	<pre>show mvrp statistics &lt;interface <i>interface-name</i>&gt;</pre>
<b>Syntax (Switches with ELS Support)</b>	<pre>show mvrp statistics &lt;interface <i>interface-name</i>&gt; &lt;routing-instance <i>routing-instance-name</i>&gt;</pre>
<b>Syntax (SRX Devices)</b>	<pre>show mvrp statistics</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 10.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X50-D10 (ELS).</p> <p>Command introduced in Junos OS Release 15.1X49-D70 for SRX Series devices.</p>
<b>Description</b>	Display Multiple VLAN Registration Protocol (MVRP) statistics in the form of Multiple Registration Protocol data unit (MRPDU) messages.
<b>Options</b>	<p><b>none</b>—Show MVRP statistics for all interfaces on the switch.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Show MVRP statistics for the specified interface.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show mvrp on page 2064</a></li> <li>• <i>clear mvrp statistics</i></li> <li>• <i>Example: Configuring Automatic VLAN Administration Using MVRP on EX Series Switches</i></li> <li>• <i>Verifying That MVRP Is Working Correctly on Switches</i></li> <li>• <i>Verifying That MVRP Is Working Correctly on EX Series Switches with ELS Support</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show mvrp statistics interface xe-0/1/1.0 on page 2078</a> <a href="#">show mvrp statistics on page 2078</a> <a href="#">show mvrp statistics (SRX Devices) on page 2078</a>
<b>Output Fields</b>	<p><a href="#">Table 171 on page 2069</a> lists the output fields for the <b>show mvrp statistics</b> command on EX Series switches. Output fields are listed in the approximate order in which they appear.</p>

Table 174: show mvrp statistics Output Fields

Field Name	Field Description
MRPDU received	Number of MRPDU messages received on the switch.
Invalid PDU received	Number of invalid MRPDU messages received on the switch.
New received	Number of new messages received on the switch.
Join Empty received	Number of MRP JoinEmpty messages received on the switch. Either this value or the value for <i>JoinIn received</i> should increase when the value for <i>MRPDU received</i> increases. If this value is not incrementing when it should, you might have a Junos OS release version compatibility issue. To fix a version compatibility issue, see <i>Configuring Multiple VLAN Registration Protocol (MVRP) on Switches</i> .
Join In received	Number of MRP JoinIn messages received on the switch. Either this value or the value for <i>JoinEmpty received</i> should increase when the value for <i>MRPDU received</i> increases. If this value is not incrementing when it should, you might have a Junos OS release version compatibility issue. To fix a version compatibility issue, see <i>Configuring Multiple VLAN Registration Protocol (MVRP) on Switches</i> .
Empty received	Number of MRP Empty messages received on the switch.
In received	Number of MRP In messages received on the switch.
Leave received	Number of MRP Leave messages received on the switch.
LeaveAll received	Number of LeaveAll messages received on the switch.
MRPDU transmitted	Number of MRPDU messages transmitted from the switch.
MRPDU transmit failures	Number of MRPDU transmit failures from the switch.
New transmitted	Number of new messages transmitted from the switch.
Join Empty transmitted	Number of JoinEmpty messages sent from the switch.
Join In transmitted	Number of MRP JoinIn messages sent from the switch.
Empty transmitted	Number of MRP Empty messages sent from the switch.
In transmitted	Number of MRP In messages sent from the switch.
Leave transmitted	Number of MRP Leave Empty messages sent from the switch.
LeaveAll transmitted	Number of MRP LeaveAll messages sent from the switch.

Table 175 on page 2077 lists the output fields for the **show mvrp statistics** command on SRX devices. Output fields are listed in the approximate order in which they appear.

Table 175: show mvrp statistics Output Fields

Field Name	Field Description
Interface name	Interface for which MVRP statistics are displayed.
VLAN IDs registered	Number of Virtual LAN (VLAN) IDs registered.
Sent MVRP PDUs	Number of MRPDU messages transmitted from the switch.
Received MVRP PDUs without error	Number of MRPDU messages received on the switch.
Received MVRP PDUs with error	Number of invalid MRPDU messages received on the switch.
Transmitted Join Empty	Number of JoinEmpty messages sent from the switch.
Transmitted Leave All	Number of MRP LeaveAll messages sent from the switch.
Received Join In	Number of MRP JoinIn messages received on the switch. Either this value or the value for <b>Received Join Empty</b> should increase when the value for <b>Received MVRP PDUs without error</b> increases. If this value is not incrementing when it should, you might have a Junos OS release compatibility issue. To resolve the issue, see <i>Configuring Multiple VLAN Registration Protocol (MVRP) on Switches</i> .
Transmitted Join In	Number of MRP JoinIn messages sent from the switch.
Transmitted Empty	Number of MRP Empty messages sent from the switch.
Transmitted Leave	Number of MRP LeaveEmpty messages sent from the switch.
Transmitted In	Number of MRP In messages sent from the switch.
Transmitted New	Number of New messages transmitted from the switch.
Received Leave All	Number of LeaveAll messages received on the switch.
Received Leave	Number of MRP Leave messages received on the switch.
Received In	Number of MRP In messages received on the switch.
Received Empty	Number of MRP Empty messages received on the switch.
Received Join Empty	Number of MRP JoinEmpty messages received on the switch. Either this value or the value for <b>Received Join In</b> should increase when the value for <b>Received MVRP PDUs without error</b> increases. If this value is not incrementing when it should, you might have a Junos OS release compatibility issue. To resolve the issue, see <i>Configuring Multiple VLAN Registration Protocol (MVRP) on Switches</i> .
Received New	Number of New messages received on the switch.

## Sample Output

### show mvrp statistics interface xe-0/1/1.0

```
user@switch> show mvrp statistics interface xe-0/1/1.0
MVRP statistics
MRPDU received           : 3342
Invalid PDU received     : 0
New received             : 2
Join Empty received      : 1116
Join In received         : 2219
Empty received           : 2
In received              : 2
Leave received            : 1
LeaveAll received         : 1117
MRPDU transmitted        : 3280
MRPDU transmit failures  : 0
New transmitted          : 0
Join Empty transmitted    : 1114
Join In transmitted      : 2163
Empty transmitted        : 1
In transmitted           : 1
Leave transmitted         : 1
LeaveAll transmitted      : 1111
```

### show mvrp statistics

```
user@host> show mvrp statistics
MVRP statistics for routing instance 'default-switch'

Interface name           : xe-0/1/1
VLAN IDs registered      : 117
Sent MVRP PDUs           : 118824
Received MVRP PDUs without error: 118848
Received MVRP PDUs with error : 0
Transmitted Join Empty   : 5229
Transmitted Leave All    : 2
Received Join In         : 11884924
Transmitted Join In      : 1835
Transmitted Empty        : 93606408
Transmitted Leave        : 888
Transmitted In           : 13780024
Transmitted New          : 2692
Received Leave All       : 118761
Received Leave           : 97
Received In              : 3869
Received Empty           : 828
Received Join Empty      : 2020152
Received New             : 224
...
```

### show mvrp statistics (SRX Devices)

```
user@host> show mvrp statistics
MVRP statistics for routing instance 'default-switch'

Interface name           : ge-0/0/1
VLAN IDs registered      : 2
```

Sent MVRP PDUs	: 41
Received MVRP PDUs without error:	28
Received MVRP PDUs with error	: 0
Transmitted Join Empty	: 0
Transmitted Leave All	: 20
Received Join In	: 0
Transmitted Join In	: 0
Transmitted Empty	: 114
Transmitted Leave	: 0
Transmitted In	: 10
Transmitted New	: 0
Received Leave All	: 1
Received Leave	: 0
Received In	: 0
Received Empty	: 67
Received Join Empty	: 24
Received New	: 0



## CHAPTER 24

# OSPF Operational Commands

- `clear (ospf | ospf3) database`
- `clear (ospf | ospf3) io-statistics`
- `clear (ospf | ospf3) neighbor`
- `clear (ospf | ospf3) overload`
- `clear (ospf | ospf3) statistics`
- `show (ospf | ospf3) backup coverage`
- `show (ospf | ospf3) backup lsp`
- `show (ospf | ospf3) backup neighbor`
- `show (ospf | ospf3) backup spf`
- `show ospf context-identifier`
- `show ospf database`
- `show ospf3 database`
- `show (ospf | ospf3) interface`
- `show (ospf | ospf3) io-statistics`
- `show (ospf | ospf3) log`
- `show (ospf | ospf3) neighbor`
- `show (ospf | ospf3) overview`
- `show (ospf | ospf3) route`
- `show (ospf | ospf3) statistics`

## clear (ospf | ospf3) database

---

**List of Syntax**    [Syntax on page 2082](#)  
                          [Syntax \(EX Series Switch and QFX Series\) on page 2082](#)

**Syntax**    clear (ospf | ospf3) database  
              <all>  
              <advertising-router (*router-id* | self)>  
              <area *area-id*>  
              <asbrsummary>  
              <external>  
              <instance *instance-name*>  
              <inter-area-prefix>  
              <inter-area-router>  
              <intra-area-prefix>  
              <link-local>  
              <logical-system (all | *logical-system-name*)>  
              <lsa-id *lsa-id*>  
              <netsummary>  
              <network>  
              <nssa>  
              <opaque-area>  
              <purge>  
              <realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>  
              <router>

**Syntax (EX Series Switch and QFX Series)**    clear (ospf | ospf3) database  
  <all>  
  <advertising-router (*router-id* | self)>  
  <area *area-id*>  
  <asbrsummary>  
  <external>  
  <instance *instance-name*>  
  <inter-area-prefix>  
  <inter-area-router>  
  <intra-area-prefix>  
  <link-local>  
  <lsa-id *lsa-id*>  
  <netsummary>  
  <network>  
  <nssa>  
  <opaque-area>  
  <purge>  
  <router>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              **advertising-router** *router-id*, **netsummary**, **network**, **nssa**, **opaque-area**, and **router** options added in Junos OS Release 8.3. You must use the **purge** command with these options.  
                              **area** *area-id* option added in Junos OS Release 8.3.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              **realm** option added in Junos OS Release 9.2.  
                              **advertising-router** (*router-id* | **self**) option added in Junos OS Release 9.5.

**advertising-router** (*router-id* | **self**) option introduced in Junos OS Release 9.5 for EX Series switches.

Command introduced in Junos OS Release 11.3 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**purge** option (and all options that are dependent on the **purge** option) hidden in Junos OS Release 13.3.

**Description** With the master Routing Engine, delete entries in the Open Shortest Path First (OSPF) link-state advertisement (LSA) database. With the backup Routing Engine, delete the OSPF LSA database and sync the new database with the master Routing Engine.



**CAUTION:** You can also use the **purge** command with any of the options to discard rather than delete the specified LSA entries. This command is useful only for testing. Use it with care, because it causes significant network disruption.

**Options** **all**—Delete all LSAs other than the system's own LSAs, which are regenerated. To resynchronize the database, the system destroys all adjacent neighbors that are in the state **EXSTART** or higher. The neighbors are then reacquired and the databases are synchronized.

**advertising-router** (*router-id* | **self**)—(Optional) Discard entries for the LSA entries advertised by the specified routing device or by this routing device.

**area** *area-id*—(Optional) Discard entries for the LSAs in the specified area.

**asbrsummary**—(Optional) Discard summary AS boundary router LSA entries.

**external**—(Optional) Discard external LSAs.

**instance** *instance-name*—(Optional) Delete or discard entries for the specified routing instance only.

**inter-area-prefix**—(OSPFv3 only) (Optional) Discard interarea prefix LSAs.

**inter-area-router**—(OSPFv3 only) (Optional) Discard interarea router LSAs.

**intra-area-prefix**—(OSPFv3 only) (Optional) Discard intra-area prefix LSAs.

**logical-system** (**all** | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

**link-local**—(Optional) Delete link-local LSAs.

**lsa-id** *lsa-id*—(Optional) Discard the LSA entries with the specified LSA identifier.

**netsummary**—(Optional) Discard summary network LSAs.

**network**—(Optional) Discard network LSAs.

**nssa**—(Optional) Discard not-so-stubby area (NSSA) LSAs.

**opaque-area**—(Optional) Discard opaque area-scope LSAs.

**realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)**—(OSPFv3 only) (Optional)  
Delete the entries for the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

**router**—(Optional) Discard router LSAs.

**purge**—(Optional) Discard all entries in the link-state advertisement database. All link-state advertisements are set to **MAXAGE** and are flooded. The database is repopulated when the originators of the link-state advertisements receive the **MAXAGE** link-state advertisements and reissue them.

**Required Privilege Level**

clear

**Related Documentation**

- [show ospf database on page 2108](#)
- [show ospf3 database on page 2119](#)

**List of Sample Output**    [clear ospf database all on page 2084](#)

**Output Fields**    When you enter this command, you are provided feedback on the status of your request.

## Sample Output

`clear ospf database all`

```
user@host> clear ospf database all
```

## clear (ospf | ospf3) io-statistics

<b>List of Syntax</b>	<a href="#">Syntax on page 2085</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 2085</a>
<b>Syntax</b>	clear (ospf   ospf3) io-statistics <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switch and QFX Series)</b>	clear (ospf   ospf3) io-statistics
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear Open Shortest Path First (OSPF) input and output statistics.
<b>Options</b>	<b>none</b> —Clear OSPF input and output statistics.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	clear
<b>List of Sample Output</b>	<a href="#">clear ospf io-statistics on page 2085</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

### Sample Output

#### clear ospf io-statistics

```
user@host> clear ospf io-statistics
```

## clear (ospf | ospf3) neighbor

---

**List of Syntax**    [Syntax on page 2086](#)  
                          [Syntax \(EX Series Switch and QFX Series\) on page 2086](#)

**Syntax**    clear (ospf | ospf3) neighbor  
              <all>  
              <area *area-id*>  
              <instance *instance-name*>  
              <interface *interface-name*>  
              <logical-system (all | *logical-system-name*)>  
              <neighbor>  
              <realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>

**Syntax (EX Series Switch and QFX Series)**    clear (ospf | ospf3) neighbor  
  <all>  
  <area *area-id*>  
  <instance *instance-name*>  
  <interface *interface-name*>  
  <neighbor>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              **realm** option introduced in Junos OS Release 9.2.  
                              Command introduced in Junos OS Release 11.3 for the QFX Series.  
                              Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Tear down Open Shortest Path First (OSPF) neighbor connections.

**Options**    **all**—Tear down OSPF connections with all neighbors for all routing instances.

**area *area-id***—(Optional) Tear down neighbor connections for the specified area only.

**instance *instance-name***—(Optional) Tear down neighbor connections for the specified routing instance only.

**interface *interface-name***—(Optional) Tear down neighbor connections for the specified interface only.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**neighbor**—(Optional) Clear the state of the specified neighbor only.

**realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)**—(Optional) (OSPFv3 only) Clear the state of the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

**Required Privilege Level**    clear

**Related Documentation** • [show \(ospf | ospf3\) neighbor on page 2141](#)

**List of Sample Output** [clear ospf neighbor all on page 2087](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

`clear ospf neighbor all`

```
user@host> clear ospf neighbor all
```

## clear (ospf | ospf3) overload

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2088</a> <a href="#">Syntax (EX Series Switches) on page 2088</a>
<b>Syntax</b>	<code>clear (ospf   ospf3) overload</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Syntax (EX Series Switches)</b>	<code>clear (ospf   ospf3) overload</code> <code>&lt;instance <i>instance-name</i>&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear the Open Shortest Path First (OSPF) overload bit and rebuild link-state advertisements (LSAs).
<b>Options</b>	<b>none</b> —Clear the overload bit and rebuild LSAs for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Clear the overload bit and rebuild LSAs for the specified routing instance only.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	clear
<b>List of Sample Output</b>	<a href="#">clear ospf overload on page 2088</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

### Sample Output

#### clear ospf overload

```
user@host> clear ospf overload
```

## clear (ospf | ospf3) statistics

<b>List of Syntax</b>	<a href="#">Syntax on page 2089</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 2089</a>
<b>Syntax</b>	<pre>clear (ospf   ospf3) statistics &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;realm (ipv4-multicast   ipv4-unicast   ipv6-multicast)&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>clear (ospf   ospf3) statistics &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>realm</b> option introduced in Junos OS Release 9.2.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Clear Open Shortest Path First (OSPF) statistics.
<b>Options</b>	<p><b>none</b>—Clear OSPF statistics.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear statistics for the specified routing instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>realm (ipv4-multicast   ipv4-unicast   ipv6-multicast)</b>—(Optional) (OSPFv3 only) Clear statistics for the specified OSPFv3 realm, or address family. Use the <b>realm</b> option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show (ospf   ospf3) statistics on page 2159</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear ospf statistics on page 2090</a>
<b>Output Fields</b>	See <a href="#">show (ospf   ospf3) statistics</a> for an explanation of output fields.

## Sample Output

### clear ospf statistics

The following sample output displays OSPF statistics before and after the **clear ospf statistics** command is entered:

```
user@host> show ospf statistics
```

Packet type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Hello	3254	2268	3	1
DbD	41	46	0	0
LSReq	8	7	0	0
LSUpdate	212	154	0	0
LSAck	65	98	0	0

DBDs retransmitted	:	3, last 5 seconds	:	0
LSAs flooded	:	12, last 5 seconds	:	0
LSAs flooded high-prio	:	0, last 5 seconds	:	0
LSAs retransmitted	:	0, last 5 seconds	:	0
LSAs transmitted to nbr:	:	3, last 5 seconds	:	0
LSAs requested	:	5, last 5 seconds	:	0
LSAs acknowledged	:	19, last 5 seconds	:	0

Flood queue depth	:	0
Total rexmit entries	:	0
db summaries	:	0
lsreq entries	:	0

Receive errors:

626 subnet mismatches

```
user@host> clear ospf statistics
```

```
user@host> show ospf statistics
```

Packet type	Total		Last 5 seconds	
	Sent	Received	Sent	Received
Hello	3	1	3	1
DbD	0	0	0	0
LSReq	0	0	0	0
LSUpdate	0	0	0	0
LSAck	0	0	0	0

DBDs retransmitted	:	0, last 5 seconds	:	0
LSAs flooded	:	0, last 5 seconds	:	0
LSAs flooded high-prio	:	0, last 5 seconds	:	0
LSAs retransmitted	:	0, last 5 seconds	:	0
LSAs transmitted to nbr:	:	0, last 5 seconds	:	0
LSAs requested	:	0, last 5 seconds	:	0
LSAs acknowledged	:	0, last 5 seconds	:	0

Flood queue depth	:	0
Total rexmit entries	:	0
db summaries	:	0
lsreq entries	:	0

Receive errors:

None



## show (ospf | ospf3) backup coverage

---

Syntax	<pre>show (ospf   ospf3) backup coverage &lt;instance <i>instance-name</i>&gt; &lt; logical-system (all   <i>logical-system-name</i>)&gt; &lt;realm (ipv4-unicast   ipv46-unicast)&gt; &lt;topology <i>topology-name</i>&gt;</pre>
Syntax (QFX Series)	<pre>show (ospf   ospf3) backup coverage &lt;instance <i>instance-name</i>&gt; &lt;topology <i>topology-name</i>&gt;</pre>
Release Information	Command introduced in Junos OS Release 10.0. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display information about the level of backup coverage available for all the nodes and prefixes in the network.
Options	<p><b>none</b>—Display information about the level backup coverage for all OSPF routing instances in all logical systems.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Display information about the level of backup coverage for all logical systems or for a specific logical system.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information about the level of backup coverage for a specific OSPF routing instance.</p> <p><b>realm (ipv4-unicast   ipv6-unicast)</b>—(Optional) (OSPFv3 only) Display information about the level of backup coverage for the specific OSPFv3 realm, or address family.</p> <p><b>topology (default   <i>topology-name</i>)</b>—(Optional) (OSPFv2 only) Display information about the level of backup coverage for the specific OSPF topology.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show (ospf   ospf3) backup lsp on page 2095</a></li></ul>
List of Sample Output	<a href="#">show ospf backup coverage on page 2093</a> <a href="#">show ospf3 backup coverage on page 2093</a>
Output Fields	<a href="#">Table 176 on page 2093</a> lists the output fields for the <b>show (ospf   ospf3) backup coverage</b> command. Output fields are listed in the approximate order in which they appear.

Table 176: `show (ospf | ospf3) backup coverage` Output Fields

Field Name	Field Description
<b>Node Coverage</b>	Information about backup coverage for each OSPF node.
<b>Area</b>	Area number. Area <b>0.0.0.0</b> is the backbone.
<b>Covered Nodes</b>	Number of nodes for which backup coverage is available.
<b>Total Nodes</b>	Total number of OSPF nodes.
<b>Route Coverage</b>	Information about backup coverage for each type of OSPF route.
<b>Path Type</b>	Type of OSPF path: <b>Intra</b> , <b>Inter</b> , <b>Ext1</b> , <b>Ext2</b> , and <b>All</b> .
<b>Covered Routes</b>	For each path type, the number of routes for which backup coverage is available.
<b>Total Routes</b>	For each path type, the total number of configured routes.
<b>Percent Covered</b>	For all nodes and for each path type, the percentage for which backup coverage is available.

## Sample Output

### `show ospf backup coverage`

```

user@host> show ospf backup coverage
Topology default coverage:

Node Coverage:

Area              Covered  Total  Percent
                  Nodes   Nodes  Covered
0.0.0.0           4       5    80.00%

Route Coverage:

Path Type  Covered  Total  Percent
           Routes Routes  Covered
Intra      8       14    57.14%
Inter      0       0    100.00%
Ext1       0       0    100.00%
Ext2       1       1    100.00%
All        9       15    60.00%

```

### `show ospf3 backup coverage`

```

user @host > show ospf3 backup coverage
show ospf3 backup coverage
Node Coverage:

Area              Covered  Total  Percent
                  Nodes   Nodes  Covered

```

0.0.0.0                      4              5      80.00%

Route Coverage:

Path Type	Covered Routes	Total Routes	Percent Covered
Intra	4	6	66.67%
Inter	0	0	100.00%
Ext1	0	0	100.00%
Ext2	1	1	100.00%
All	5	7	71.43%

show (ospf | ospf3) backup lsp


Syntax	show (ospf   ospf3) backup lsp <logical-system (all   <i>logical-system-name</i> )> <realm (ipv4-unicast   ipv6-unicast)>
Release Information	Command introduced in Junos OS Release 10.0.
Description	Display information about MPLS label-switched-paths (LSPs) designated as backup routes for OSPF routes.
	<div> <b>NOTE:</b> MPLS LSPs can be used as backup routes only for routes in the default OSPFv2 topology and not for any configured topology. Additionally, MPLS LSPs cannot be used as backup routes for nondefault instances either for OSPFv2 or OSPFv3.</div>
Options	<p><b>none</b>—Display information all MPLS LSPs designated as backup routes.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Display information about MPLS LSPs designated as backup routes for all logical systems or a specific logical system.</p> <p><b>realm (ipv4-unicast   ipv6-unicast)</b>—(Optional) (OSPFv3 only) Display information about MPLS LSPs designated as backup routes for a specific realm, or address family.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li><a href="#">show (ospf   ospf3) backup coverage on page 2092</a></li></ul>
List of Sample Output	<a href="#">show ospf backup lsp on page 2096</a> <a href="#">show ospf3 backup lsp on page 2096</a>
Output Fields	<p>Table 177 on page 2095 lists the output fields for the <b>show (ospf   ospf3) backup lsp</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 177: show (ospf | ospf3) backup lsp Output Fields

Field Name	Field Description
<i>MPLS LSP name</i>	Name of each MPLS LSP designated as a backup path.
Egress	IP address of the egress router for the LSP.

Table 177: *show (ospf | ospf3) backup lsp* Output Fields (continued)

Field Name	Field Description
Status	<p>State of the LSP:</p> <ul style="list-style-type: none"> <li>• <b>Up</b>—The router can detect RSVP hello messages from the neighbor.</li> <li>• <b>Down</b>—The router has received one of the following indications: <ul style="list-style-type: none"> <li>• Communication failure from the neighbor.</li> <li>• Communication from IGP that the neighbor is unavailable.</li> <li>• Change in the sequence numbers in the RSVP hello messages sent by the neighbor.</li> </ul> </li> <li>• <b>Deleted</b>—The LSP is no longer available as a backup path.</li> </ul>
Last change	Time elapsed since the neighbor state changed either from <b>up</b> or <b>down</b> or from <b>down</b> to <b>up</b> . The format is <i>hh:mm:ss</i> .
TE-metric	Configured traffic engineering metric.
Metric	Configured metric.

## Sample Output

### show ospf backup lsp

```
user@host> show ospf backup lsp
tobanff
  Egress: 10.255.71.239, Status: up, Last change: 00:00:23
  TE-metric: 0, Metric: 0
```

## Sample Output

### show ospf3 backup lsp

```
user@host> show ospf3 backup lsp
tobanff
  Egress: 10.255.71.239, Status: up, Last change: 00:00:45
  TE-metric: 0, Metric: 0
```

## show (ospf | ospf3) backup neighbor

<b>Syntax</b>	<pre>show (ospf   ospf3) backup neighbor &lt;area <i>area-id</i>&gt; &lt;instance (default   <i>instance-name</i>)&gt; &lt;logical-system (default   ipv4-multicast   <i>logical-system-name</i>)&gt; &lt;topology (default   ipv4-multicast   <i>topology-name</i>)&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>show (ospf   ospf3) backup neighbor &lt;area <i>area-id</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;topology (default   ipv4-multicast   <i>topology-name</i>)&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 10.0.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display the neighbors through which direct next hops for the backup paths are available.
<b>Options</b>	<p><b>none</b>—Display all neighbors that have direct next hops for backup paths.</p> <p><b>area <i>area-id</i></b>—(Optional) Display the area information.</p> <p><b>instance (default   <i>instance-name</i>)</b>—(Optional) Display information about the default routing instance or a particular routing instance.</p> <p><b>logical-system (default   ipv4-multicast   <i>logical-system-name</i>)</b>—(Optional) Display information about the default logical system, IPv4 multicast logical system, or a particular logical system.</p> <p><b>topology (default   ipv4-multicast   <i>topology-name</i>)</b>—(OSPFv2 only) (Optional) Display information about the default topology, IPv4 multicast topology, or a particular topology.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show (ospf   ospf3) backup spf on page 2099</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ospf backup neighbor on page 2098</a>
<b>Output Fields</b>	<p><a href="#">Table 178 on page 2098</a> lists the output fields for the <b>show (ospf   ospf3) backup neighbor</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 178: show (ospf |ospf3) backup neighbor Output Fields*

Field Name	Field Description	Level of Output
<b>Neighbor to Self Metric</b>	Metric from the backup neighbor to the OSPF node.	All levels
<b>Self to Neighbor Metric</b>	Metric from the OSPF node to the backup neighbor.	All levels
<b>Direct next-hop</b>	Interface and address of the direct next hop.	All levels

## Sample Output

### show ospf backup neighbor

```
user@host> show ospf backup neighbor
Topology default backup neighbors:

Area 0.0.0.5 backup neighbors:

10.0.0.5
  Neighbor to Self Metric: 5
  Self to Neighbor Metric: 5
  Direct next-hop: ge-4/0/0.111 via 10.0.175.5

10.0.0.6
  Neighbor to Self Metric: 5
  Self to Neighbor Metric: 5
  Direct next-hop: ge-4/1/0.110 via 10.0.176.6
```

## show (ospf | ospf3) backup spf

<b>Syntax</b>	<pre>show (ospf   ospf3) backup spf &lt;brief   detail&gt; &lt;area <i>area-id</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;no-coverage&gt; &lt;node-id&gt; &lt;realm (ipv4-unicast   ipv6-unicast)&gt; &lt;topology (default   ipv4-multicast   <i>topology-name</i>)&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>show (ospf   ospf3) backup spf &lt;brief   detail&gt; &lt;area <i>area-id</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;no-coverage&gt; &lt;node-id&gt; &lt;topology (default   ipv4-multicast   <i>topology-name</i>)&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 10.0.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p>
<b>Description</b>	Display information about OSPF shortest-path-first calculations for backup paths.
<b>Options</b>	<p><b>none</b>—Display information about OSPF shortest-path-first (SPF) calculations for all backup paths for all destination nodes.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>area <i>area-id</i></b>—(Optional) Display the area information.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information about the routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Display information about all logical systems or a specific logical system.</p> <p><b>no-coverage</b>—(Optional) Display information if there is no backup coverage.</p> <p><b>node-id</b>—(Optional) Display information about the node specified.</p> <p><b>realm (ipv4-unicast   ipv6-unicast)</b>—(Optional) Display information about the <b>ipv4</b> or <b>ipv6</b> realm.</p> <p><b>topology (default   ipv4-multicast   <i>topology-name</i>)</b>—(Optional) (OSPFv2 only) Display information about the default topology, IPv4 multicast topology, or a specific topology.</p>
<b>Required Privilege Level</b>	view

**List of Sample Output** [show ospf backup spf on page 2100](#)  
[show ospf backup spf detail on page 2101](#)  
[show ospf3 backup spf on page 2103](#)

**Output Fields** Table 179 on page 2100 lists the output fields for the **show (ospf |ospf3) backup spf** command. Output fields are listed in the approximate order in which they appear.

*Table 179: show (ospf |ospf3) backup spf Output Fields*

Field Name	Field Description	Level of Output
<b>Area <i>area-id</i> results</b>	Area for which the results are displayed. Area 0.0.0.0 is the backbone area.	All levels
<i>address</i>	Address of the node for which the results are displayed.	All levels
<b>Self to Destination Metric</b>	Metric from the node to the destination.	All levels
<b>Parent Node</b>	Address of the parent node.	All levels
<b>Primary next-hop</b>	Address of the next hop.	All levels
<b>Backup Neighbor</b>	Address of the backup neighbor or LSP endpoint and the following information: <ul style="list-style-type: none"> <li>Neighbor to Destination Metric</li> <li>Neighbor to Self Metric</li> <li>Self to Neighbor Metric</li> <li>Status (Eligible, Not Eligible, Not Evaluated) and the reason for the status.</li> </ul> <p><b>NOTE:</b> If the backup neighbor is an LSP endpoint, it is indicated as such after the neighbor address.</p>	All levels

## Sample Output

### show ospf backup spf

```
user@host> show ospf backup spf
Topology default results:

Area 0.0.0.0 results:

pro16-d-1o0.xxx.yyyy.net
Self to Destination Metric: 1
Parent Node: pro16-b-1o0.xxx.yyyy.net
Primary next-hop: at-1/0/1.0
Backup Neighbor: pro16-c-1o0.xxx.yyyy.net (LSP endpoint)
  Neighbor to Destination Metric: 4, Neighbor to Self Metric: 3
  Self to Neighbor Metric: 3
  Not eligible, Reason: Path loops
Backup Neighbor: pro16-d-1o0.xxx.yyyy.net
  Neighbor to Destination Metric: 0, Neighbor to Self Metric: 1
  Self to Neighbor Metric: 1
  Not eligible, Reason: Primary next-hop link fate sharing
...
```

**show ospf backup spf detail**

```
user@host> show ospf backup spf detail
```

```
Topology default results:
```

```
Area 0.0.0.0 results:
```

```
11.14.10.2
```

```
Self to Destination Metric: 1
```

```
Parent Node: 10.255.70.103
```

```
Primary next-hop: ae0.0
```

```
Backup Neighbor: 10.255.71.243
```

```
Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Path loops
```

```
Backup Neighbor: 10.255.71.52
```

```
Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Primary next-hop link fate sharing
```

```
Backup Neighbor: 10.255.71.242
```

```
Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Path loops
```

```
10.255.71.52
```

```
Self to Destination Metric: 1
```

```
Parent Node: 11.14.10.2
```

```
Primary next-hop: ae0.0 via 11.14.10.2
```

```
Backup Neighbor: 10.255.71.52
```

```
Neighbor to Destination Metric: 0, Neighbor to Self Metric: 15
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Primary next-hop link fate sharing
```

```
Backup Neighbor: 10.255.71.243
```

```
Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Path loops
```

```
Backup Neighbor: 10.255.71.242
```

```
Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Path loops
```

```
10.255.71.242
```

```
Self to Destination Metric: 1
```

```
Parent Node: 10.255.70.103
```

```
Primary next-hop: as0.0
```

```
Backup Neighbor: 10.255.71.242
```

```
Neighbor to Destination Metric: 0, Neighbor to Self Metric: 15
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Primary next-hop link fate sharing
```

```
Backup Neighbor: 10.255.71.243
```

```
Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Path loops
```

```
Backup Neighbor: 10.255.71.52
```

```
Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
```

```
Self to Neighbor Metric: 1
```

```
Not eligible, Reason: Path loops
```

```
10.255.71.243
```

```
Self to Destination Metric: 1
```

Parent Node: 10.255.70.103  
 Primary next-hop: so-6/0/0.0  
 Backup Neighbor: 10.255.71.243  
     Neighbor to Destination Metric: 0, Neighbor to Self Metric: 1  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Primary next-hop link fate sharing  
 Backup Neighbor: 10.255.71.52  
     Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Path loops  
 Backup Neighbor: 10.255.71.242  
     Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Path loops

#### 12.15.0.1

Self to Destination Metric: 2  
 Parent Node: 10.255.71.243  
 Primary next-hop: so-6/0/0.0  
 Backup next-hop: ae0.0 via 11.14.10.2  
 Backup Neighbor: 10.255.71.243  
     Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Primary next-hop link fate sharing  
 Backup Neighbor: 10.255.71.52  
     Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Eligible, Reason: Contributes backup next-hop  
 Backup Neighbor: 10.255.71.242  
     Neighbor to Destination Metric: 17, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not evaluated, Reason: Interface is already covered

#### 10.255.71.238

Self to Destination Metric: 2  
 Parent Node: 10.255.71.243  
 Primary next-hop: so-6/0/0.0  
 Backup next-hop: as0.0  
 Backup Neighbor: 10.255.71.243  
     Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Primary next-hop link fate sharing  
 Backup Neighbor: 10.255.71.242  
     Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Eligible, Reason: Contributes backup next-hop  
 Backup Neighbor: 10.255.71.52  
     Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not evaluated, Reason: Interface is already covered

#### 10.255.71.239

Self to Destination Metric: 2  
 Parent Node: 12.15.0.1  
 Primary next-hop: so-6/0/0.0  
 Backup next-hop: ae0.0 via 11.14.10.2  
 Backup Neighbor: 10.255.71.243  
     Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Primary next-hop link fate sharing  
 Backup Neighbor: 10.255.71.52

```

    Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Eligible, Reason: Contributes backup next-hop
Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not evaluated, Reason: Interface is already covered

14.15.0.2
    Self to Destination Metric: 3
    Parent Node: 10.255.71.239
    Primary next-hop: so-6/0/0.0
    Backup next-hop: ae0.0 via 11.14.10.2
Backup Neighbor: 10.255.71.243
    Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
    Self to Neighbor Metric: 1
    Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.52
    Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Eligible, Reason: Contributes backup next-hop
Backup Neighbor: 10.255.71.242
    Neighbor to Destination Metric: 17, Neighbor to Self Metric: 15
    Self to Neighbor Metric: 1
    Not evaluated, Reason: Interface is already covered

```

### show ospf3 backup spf

```

user@host> show ospf3 backup spf
Area 0.0.0.0 results:

10.255.71.52;0.0.0.5
    Self to Destination Metric: 1
    Parent Node: 10.255.70.103
    Primary next-hop: ae0.0
    Backup Neighbor: 10.255.71.243
        Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
        Self to Neighbor Metric: 1
        Not eligible, Reason: Path loops
    Backup Neighbor: 10.255.71.52
        Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Not eligible, Reason: Primary next-hop link fate sharing
    Backup Neighbor: 10.255.71.242
        Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Not eligible, Reason: Path loops

10.255.71.52
    Self to Destination Metric: 1
    Parent Node: 10.255.71.52;0.0.0.5
    Primary next-hop: ae0.0 via fe80::290:69ff:fe0f:67f0
    Backup Neighbor: 10.255.71.52
        Neighbor to Destination Metric: 0, Neighbor to Self Metric: 15
        Self to Neighbor Metric: 1
        Not eligible, Reason: Primary next-hop link fate sharing
    Backup Neighbor: 10.255.71.243
        Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
        Self to Neighbor Metric: 1
        Not eligible, Reason: Path loops
    Backup Neighbor: 10.255.71.242

```

Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
 Self to Neighbor Metric: 1  
 Not eligible, Reason: Path loops

#### 10.255.71.242

Self to Destination Metric: 1  
 Parent Node: 10.255.70.103  
 Primary next-hop: as0.0  
 Backup Neighbor: 10.255.71.242  
     Neighbor to Destination Metric: 0, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Primary next-hop link fate sharing  
 Backup Neighbor: 10.255.71.243  
     Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Path loops  
 Backup Neighbor: 10.255.71.52  
     Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Path loops

#### 10.255.71.243

Self to Destination Metric: 1  
 Parent Node: 10.255.70.103  
 Primary next-hop: so-6/0/0.0  
 Backup Neighbor: 10.255.71.243  
     Neighbor to Destination Metric: 0, Neighbor to Self Metric: 1  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Primary next-hop link fate sharing  
 Backup Neighbor: 10.255.71.52  
     Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Path loops  
 Backup Neighbor: 10.255.71.242  
     Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Path loops

#### 10.255.71.243;0.0.0.2

Self to Destination Metric: 2  
 Parent Node: 10.255.71.243  
 Primary next-hop: so-6/0/0.0  
 Backup next-hop: ae0.0 via fe80::290:69ff:fe0f:67f0  
 Backup Neighbor: 10.255.71.243  
     Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1  
     Self to Neighbor Metric: 1  
     Not eligible, Reason: Primary next-hop link fate sharing  
 Backup Neighbor: 10.255.71.52  
     Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Eligible, Reason: Contributes backup next-hop  
 Backup Neighbor: 10.255.71.242  
     Neighbor to Destination Metric: 17, Neighbor to Self Metric: 15  
     Self to Neighbor Metric: 1  
     Not evaluated, Reason: Interface is already covered

#### 10.255.71.238

Self to Destination Metric: 2  
 Parent Node: 10.255.71.243  
 Primary next-hop: so-6/0/0.0  
 Backup next-hop: as0.0

```

Backup Neighbor: 10.255.71.243
  Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1
  Self to Neighbor Metric: 1
  Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.242
  Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
  Self to Neighbor Metric: 1
  Eligible, Reason: Contributes backup next-hop
Backup Neighbor: 10.255.71.52
  Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
  Self to Neighbor Metric: 1
  Not evaluated, Reason: Interface is already covered

10.255.71.239
  Self to Destination Metric: 2
  Parent Node: 10.255.71.243;0.0.0.2
  Primary next-hop: so-6/0/0.0
  Backup next-hop: ae0.0 via fe80::290:69ff:fe0f:67f0
Backup Neighbor: 10.255.71.243
  Neighbor to Destination Metric: 1, Neighbor to Self Metric: 1
  Self to Neighbor Metric: 1
  Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.52
  Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
  Self to Neighbor Metric: 1
  Eligible, Reason: Contributes backup next-hop
Backup Neighbor: 10.255.71.242
  Neighbor to Destination Metric: 16, Neighbor to Self Metric: 15
  Self to Neighbor Metric: 1
  Not evaluated, Reason: Interface is already covered

10.255.71.239;0.0.0.4
  Self to Destination Metric: 3
  Parent Node: 10.255.71.239
  Primary next-hop: so-6/0/0.0
  Backup next-hop: ae0.0 via fe80::290:69ff:fe0f:67f0
Backup Neighbor: 10.255.71.243
  Neighbor to Destination Metric: 2, Neighbor to Self Metric: 1
  Self to Neighbor Metric: 1
  Not eligible, Reason: Primary next-hop link fate sharing
Backup Neighbor: 10.255.71.52
  Neighbor to Destination Metric: 15, Neighbor to Self Metric: 15
  Self to Neighbor Metric: 1
  Eligible, Reason: Contributes backup next-hop
Backup Neighbor: 10.255.71.242
  Neighbor to Destination Metric: 17, Neighbor to Self Metric: 15
  Self to Neighbor Metric: 1
  Not evaluated, Reason: Interface is already covered

```

```
show ospf context-identifier
```

- |  |   |
|--|---|
| List of Syntax                             | <a href="#">Syntax on page 2106</a><br><a href="#">Syntax (EX Series Switches and QFX Series) on page 2106</a>  |
| Syntax                                     | <pre>show ospf context-identifier &lt;brief   detail&gt; &lt;area area-id&gt; &lt;context-id&gt; &lt;instance instance-name&gt; &lt;logical-system (all   logical-system-name)&gt;</pre>  |
| Syntax (EX Series Switches and QFX Series) | <pre>show ospf context-identifier &lt;brief   detail&gt; &lt;area area-id&gt; &lt;context-id&gt; &lt;instance instance-name&gt;</pre>   |
| Release Information                        | Command introduced in Junos OS Release 10.4.<br>Command introduced in Junos OS Release 11.3 for the QFX Series.<br>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.   |
| Description                                | Display the context identifier information processed and advertised by Open Shortest Path First (OSPF) for egress protection.   |
| Options                                    | <p><b>none</b>—Display information about all context identifiers.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>area area-id</b>—(Optional) Display information about the context identifier for the specified area.</p> <p><b>context-id</b>—(Optional) Display information about the specified context identifier.</p> <p><b>instance instance-name</b>—(Optional) Display information about the context identifier for the specified routing instance.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| Required Privilege Level                   | view  |
| Related Documentation                      | <ul style="list-style-type: none"><li><i>egress-protection (Layer 2 circuit)</i> in the <i>Junos OS VPNs Library for Routing Devices</i></li><li><i>egress-protection (MPLS)</i> in the <i>Junos OS VPNs Library for Routing Devices</i></li></ul>  |
| List of Sample Output                      | <a href="#">show ospf context-identifier on page 2107</a><br><a href="#">show ospf context-identifier detail on page 2107</a>   |

**Output Fields** Table 180 on page 2107 lists the output fields for the **show ospf context-identifier** command. Output fields are listed in the approximate order in which they appear.

*Table 180: show ospf context-identifier Output Fields*

Field Name	Field Description	Level of Output
<b>Context</b>	IPv4 address that defines a protection pair. The context is manually configured on both primary and protector provider edge (PE) devices.	All levels
<b>Status</b>	State of the path: <b>active</b> or <b>inactive</b> .	All levels
<b>Metric</b>	Advertised OSPF metric.	All levels
<b>Area</b>	OSPF area number.	All levels
<b>Other Advertisements</b>	Other advertisements received by the OSPF node: <ul style="list-style-type: none"> <li>• <b>Advertising router</b>— Address of the device that sent the advertisement.</li> <li>• <b>Type</b>—Type of OSPF path: <b>inter-area</b> and <b>stub</b>.</li> <li>• <b>Metric</b>—Advertised OSPF metric.</li> <li>• <b>None</b>—No additional advertisements were received by the OSPF node.</li> </ul>	<b>detail</b>

## Sample Output

### show ospf context-identifier

```
user@host> show ospf context-identifier
Context-id: 2.2.4.3
Status: active, Metric: 65534, PE role: protector, Area: 0.0.0.0
```

### show ospf context-identifier detail

```
user@host> show ospf context-identifier detail
Context-id: 88.24.13.1
Status: inactive, Metric: 0, PE role: protector, Area: 0.0.0.13
Other Advertisements:
Advertising router: 8.8.8.103
Type: stub link
Metric: 65534
```

```
show ospf database
```

**List of Syntax**    [Syntax on page 2108](#)

Syntax (EX Series Switches and QFX Series) on page 2108

**Syntax**    show ospf database

```
<brief | detail | extensive | summary>
<advertising-router (address | self)>
<area area-id>
<asbrsummary>
<external>
<instance instance-name>
<link-local>
<logical-system (all | logical-system-name)>
<lsa-id lsa-id>
<netsummary>
<network>
<nssa>
<opaque-area>
<router>
```

## Syntax (EX Series Switches and QFX Series)

```
show ospf database
<brief | detail | extensive | summary>
<advertising-router (address | self)>
<area area-id>
<asbrsummary>
<external>
<instance instance-name>
<link-local>
<lsa-id lsa-id>
<netsummary>
<network>
<nssa>
<opaque-area>
<router>
```

## Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

**advertising-router self (address | self)** option introduced in Junos OS Release 9.5.

**advertising-router self (address | self)** option introduced in Junos OS Release 9.5 for EX Series switches.

Command introduced in Junos OS Release 11.3 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

### Description

Display the entries in the OSPF version 2 (OSPFv2) link-state database, which contains data about link-state advertisement (LSA) packets.

## Options

**none**—Display standard information about entries in the OSPFv2 link-state database for all routing instances.

**brief | detail | extensive | summary**—(Optional) Display the specified level of output.

**advertising-router (*address* | *self*)**—(Optional) Display the LSAs advertised either by a particular routing device or by this routing device.

**area *area-id***—(Optional) Display the LSAs in a particular area.

**asbrsummary**—(Optional) Display summary AS boundary router LSA entries.

**external**—(Optional) Display external LSAs.

**instance *instance-name***—(Optional) Display all OSPF database information under the named routing instance.

**link-local**—(Optional) Display information about link-local LSAs.

**logical-system (*all* | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**lsa-id *lsa-id***—(Optional) Display the LSA with the specified LSA identifier.

**netsummary**—(Optional) Display summary network LSAs.

**network**—(Optional) Display information about network LSAs.

**nssa**—(Optional) Display information about not-so-stubby area (NSSA) LSAs.

**opaque-area**—(Optional) Display opaque area-scope LSAs.

**router**—(Optional) Display information about router LSAs.

**Required Privilege Level**

view

**Related Documentation**

- [clear \(ospf | ospf3\) database on page 2082](#)

**List of Sample Output**

[show ospf database on page 2111](#)  
[show ospf database on page 2112](#)  
[show ospf database brief on page 2112](#)  
[show ospf database detail on page 2112](#)  
[show ospf database extensive on page 2113](#)  
[show ospf database summary on page 2116](#)  
[show ospf database opaque-area detail on page 2116](#)

**Output Fields**

[Table 181 on page 2109](#) describes the output fields for the **show ospf database** command. Output fields are listed in the approximate order in which they appear.

*Table 181: show ospf database Output Fields*

Field Name	Field Description	Level of Output
area	Area number. Area 0.0.0.0 is the backbone area.	All levels

Table 181: show ospf database Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Type</b>	Type of link advertisement: <b>ASBR Sum</b> , <b>Extern</b> , <b>Network</b> , <b>NSSA</b> , <b>OpaqArea</b> , <b>Router</b> , or <b>Summary</b> .	All levels
<b>ID</b>	LSA identifier included in the advertisement. An asterisk preceding the identifier marks database entries that originated from the local routing device.	All levels
<b>Adv Rtr</b>	Address of the routing device that sent the advertisement.	All levels
<b>Seq</b>	Link sequence number of the advertisement.	All levels
<b>Age</b>	Time elapsed since the LSA was originated, in seconds.	All levels
<b>Opt</b>	Optional OSPF capabilities associated with the LSA.	All levels
<b>Cksum</b>	Checksum value of the LSA.	All levels
<b>Len</b>	Length of the advertisement, in bytes.	All levels
<b>Router</b>	Router link-state advertisement information: <ul style="list-style-type: none"> <li><b>bits</b>—Flags describing the routing device that generated the LSP.</li> <li><b>link count</b>—Number of links in the advertisement.</li> <li><b>id</b>—ID of a routing device or subnet on the link.</li> <li><b>data</b>—For stub networks, the subnet mask. Otherwise, the IP address of the routing device that generated the LSP.</li> <li><b>type</b>—Type of link. It can be <b>PointToPoint</b>, <b>Transit</b>, <b>Stub</b>, or <b>Virtual</b>.</li> <li><b>TOS count</b>—Number of type-of-service (ToS) entries in the advertisement.</li> <li><b>TOS 0 metric</b>—Metric for ToS 0.</li> <li><b>TOS</b>—Type-of-service (ToS) value.</li> <li><b>metric</b>—Metric for the ToS.</li> </ul>	<b>detail extensive</b>
<b>Network</b>	Network link-state advertisement information: <ul style="list-style-type: none"> <li><b>mask</b>—Network mask.</li> <li><b>attached router</b>—ID of the attached neighbor.</li> </ul>	<b>detail extensive</b>
<b>Summary</b>	Summary link-state advertisement information: <ul style="list-style-type: none"> <li><b>mask</b>—Network mask.</li> <li><b>TOS</b>—Type-of-service (ToS) value.</li> <li><b>metric</b>—Metric for the ToS.</li> </ul>	<b>detail extensive</b>
<b>Gen timer</b>	How long until the LSA is regenerated.	<b>extensive</b>
<b>Aging timer</b>	How long until the LSA expires.	<b>extensive</b>
<b>Installed hh:mm:ss ago</b>	How long ago the route was installed.	<b>extensive</b>

Table 181: show ospf database Output Fields (continued)

Field Name	Field Description	Level of Output
expires in <i>hh:mm:ss</i>	How long until the route expires.	extensive
sent <i>hh:mm:ss</i> ago	How long ago the LSA was sent.	extensive
Last changed <i>hh:mm:ss</i> ago	How long ago the route was changed.	extensive
Change count	Number of times the route has changed.	extensive
Ours	Indicates that this is a local advertisement.	extensive
Router LSAs	Number of router link-state advertisements in the link-state database.	summary
Network LSAs	Number of network link-state advertisements in the link-state database.	summary
Summary LSAs	Number of summary link-state advertisements in the link-state database.	summary
NSSA LSAs	Number of not-so-stubby area link-state advertisements in the link-state database.	summary

## Sample Output

### show ospf database

```

user@host> show ospf database
OSPF link state database, Area 0.0.0.1
  Type      ID                Adv Rtr          Seq      Age  Opt  Cksum  Len
Router     10.255.70.103      10.255.70.103    0x80000002   215  0x20  0x4112  48
Router     *10.255.71.242     10.255.71.242    0x80000002   214  0x20  0x11b1  48
Summary    *23.1.1.0          10.255.71.242    0x80000002   172  0x20  0x6d72  28
Summary    *24.1.1.0          10.255.71.242    0x80000002   177  0x20  0x607e  28
NSSA       *33.1.1.1          10.255.71.242    0x80000002   217  0x28  0x73bd  36

      OSPF link state database, Area 0.0.0.2
  Type      ID                Adv Rtr          Seq      Age  Opt  Cksum  Len
Router     10.255.71.52       10.255.71.52     0x80000004   174  0x20  0xd021  36
Router     *10.255.71.242     10.255.71.242    0x80000003   173  0x20  0xe191  36
Network    *23.1.1.1          10.255.71.242    0x80000002   173  0x20  0x9c76  32
Summary    *12.1.1.0          10.255.71.242    0x80000001   217  0x20  0xfeec  28
Summary    *24.1.1.0          10.255.71.242    0x80000002   177  0x20  0x607e  28
NSSA       *33.1.1.1          10.255.71.242    0x80000001   222  0x28  0xe047  36

      OSPF link state database, Area 0.0.0.3
  Type      ID                Adv Rtr          Seq      Age  Opt  Cksum  Len
Router     10.255.71.238      10.255.71.238    0x80000003   179  0x20  0x3942  36
Router     *10.255.71.242     10.255.71.242    0x80000003   177  0x20  0xf37d  36
Network    *24.1.1.1          10.255.71.242    0x80000002   177  0x20  0xc591  32
Summary    *12.1.1.0          10.255.71.242    0x80000001   217  0x20  0xfeec  28
Summary    *23.1.1.0          10.255.71.242    0x80000002   172  0x20  0x6d72  28
NSSA       *33.1.1.1          10.255.71.242    0x80000001   222  0x28  0xeb3b  36

```

## show ospf database

The output for **show ospf database nssa** with **nssa-only** configuration statement enabled at **[edit policy-options policy-statement *policy-name* term *term name* then external]**, which clears P-bit on type 7 LSA.

```
user@host> show ospf database
OSPF link state database, Area 0.0.0.1
  Type      ID            Adv Rtr          Seq            Age  Opt  Cksum  Len
Router     10.255.70.103    10.255.70.103    0x800000002    215  0x20 0x4112  48
Router     *10.255.71.242   10.255.71.242    0x800000002    214  0x20 0x11b1  48
Summary    *23.1.1.0        10.255.71.242    0x800000002    172  0x20 0x6d72  28
Summary    *24.1.1.0        10.255.71.242    0x800000002    177  0x20 0x607e  28
NSSA       *33.1.1.1        10.255.71.242    0x800000002    217  0x20 0x73bd  36

OSPF link state database, Area 0.0.0.2
  Type      ID            Adv Rtr          Seq            Age  Opt  Cksum  Len
Router     10.255.71.52     10.255.71.52     0x800000004    174  0x20 0xd021  36
Router     *10.255.71.242   10.255.71.242    0x800000003    173  0x20 0xe191  36
Network    *23.1.1.1        10.255.71.242    0x800000002    173  0x20 0x9c76  32
Summary    *12.1.1.0        10.255.71.242    0x800000001    217  0x20 0xfeec  28
Summary    *24.1.1.0        10.255.71.242    0x800000002    177  0x20 0x607e  28
NSSA       *33.1.1.1        10.255.71.242    0x800000001    222  0x28 0xe047  36

OSPF link state database, Area 0.0.0.3
  Type      ID            Adv Rtr          Seq            Age  Opt  Cksum  Len
Router     10.255.71.238    10.255.71.238    0x800000003    179  0x20 0x3942  36
Router     *10.255.71.242   10.255.71.242    0x800000003    177  0x20 0xf37d  36
Network    *24.1.1.1        10.255.71.242    0x800000002    177  0x20 0xc591  32
Summary    *12.1.1.0        10.255.71.242    0x800000001    217  0x20 0xfeec  28
Summary    *23.1.1.0        10.255.71.242    0x800000002    172  0x20 0x6d72  28
NSSA       *33.1.1.1        10.255.71.242    0x800000001    222  0x20 0xeb3b  36
```

## show ospf database brief

The output for the **show ospf database brief** command is identical to that for the **show ospf database** command. For sample output, see [show ospf database on page 2111](#).

## show ospf database detail

```
user@host> show ospf database detail
OSPF link state database, Area 0.0.0.1
  Type      ID            Adv Rtr          Seq            Age  Opt  Cksum  Len
Router     10.255.70.103    10.255.70.103    0x800000002    261  0x20 0x4112  48
  bits 0x0, link count 2
  id 10.255.71.242, data 12.1.1.1, Type PointToPoint (1)
  TOS count 0, TOS 0 metric 1
  id 12.1.1.0, data 255.255.255.0, Type Stub (3)
  TOS count 0, TOS 0 metric 1
Router     *10.255.71.242   10.255.71.242    0x800000002    260  0x20 0x11b1  48
  bits 0x3, link count 2
  id 10.255.70.103, data 12.1.1.2, Type PointToPoint (1)
  TOS count 0, TOS 0 metric 1
  id 12.1.1.0, data 255.255.255.0, Type Stub (3)
  TOS count 0, TOS 0 metric 1
Summary    *23.1.1.0        10.255.71.242    0x800000002    218  0x20 0x6d72  28
  mask 255.255.255.0
  TOS 0x0, metric 1
```

```

Summary *24.1.1.0          10.255.71.242    0x80000002    223    0x20 0x607e    28
  mask 255.255.255.0
  TOS 0x0, metric 1
NSSA  *33.1.1.1           10.255.71.242    0x80000002    263    0x28 0x73bd    36
  mask 255.255.255.255
  Type 2, TOS 0x0, metric 0, fwd addr 12.1.1.2, tag 0.0.0.0

```

#### OSPF link state database, Area 0.0.0.2

Type	ID	Adv Rtr	Seq	Age	Opt	Cksum	Len
Router	10.255.71.52	10.255.71.52	0x80000004	220	0x20	0xd021	36
bits 0x0, link count 1							
id 23.1.1.1, data 23.1.1.2, Type Transit (2)							
TOS count 0, TOS 0 metric 1							
Router	*10.255.71.242	10.255.71.242	0x80000003	219	0x20	0xe191	36
bits 0x3, link count 1							
id 23.1.1.1, data 23.1.1.1, Type Transit (2)							
TOS count 0, TOS 0 metric 1							
Network	*23.1.1.1	10.255.71.242	0x80000002	219	0x20	0x9c76	32
mask 255.255.255.0							
attached router 10.255.71.242							
attached router 10.255.71.52							
Summary	*12.1.1.0	10.255.71.242	0x80000001	263	0x20	0xfeec	28
mask 255.255.255.0							
TOS 0x0, metric 1							
Summary	*24.1.1.0	10.255.71.242	0x80000002	223	0x20	0x607e	28
mask 255.255.255.0							
TOS 0x0, metric 1							
NSSA	*33.1.1.1	10.255.71.242	0x80000001	268	0x28	0xe047	36
mask 255.255.255.255							
Type 2, TOS 0x0, metric 0, fwd addr 23.1.1.1, tag 0.0.0.0							

#### OSPF link state database, Area 0.0.0.3

Type	ID	Adv Rtr	Seq	Age	Opt	Cksum	Len
Router	10.255.71.238	10.255.71.238	0x80000003	225	0x20	0x3942	36
bits 0x0, link count 1							
id 24.1.1.1, data 24.1.1.2, Type Transit (2)							
TOS count 0, TOS 0 metric 1							
Router	*10.255.71.242	10.255.71.242	0x80000003	223	0x20	0xf37d	36
bits 0x3, link count 1							
id 24.1.1.1, data 24.1.1.1, Type Transit (2)							
TOS count 0, TOS 0 metric 1							
Network	*24.1.1.1	10.255.71.242	0x80000002	223	0x20	0xc591	32
mask 255.255.255.0							
attached router 10.255.71.242							
attached router 10.255.71.238							
Summary	*12.1.1.0	10.255.71.242	0x80000001	263	0x20	0xfeec	28
mask 255.255.255.0							
TOS 0x0, metric 1							
Summary	*23.1.1.0	10.255.71.242	0x80000002	218	0x20	0x6d72	28
mask 255.255.255.0							
TOS 0x0, metric 1							
NSSA	*33.1.1.1	10.255.71.242	0x80000001	268	0x28	0xeb3b	36
mask 255.255.255.255							
Type 2, TOS 0x0, metric 0, fwd addr 24.1.1.1, tag 0.0.0.0							

### show ospf database extensive

```

user@host> show ospf database extensive
OSPF link state database, Area 0.0.0.1
Type      ID          Adv Rtr      Seq          Age  Opt  Cksum  Len
Router    10.255.70.103  10.255.70.103  0x80000002    286  0x20 0x4112  48

```

```

bits 0x0, link count 2
id 10.255.71.242, data 12.1.1.1, Type PointToPoint (1)
TOS count 0, TOS 0 metric 1
id 12.1.1.0, data 255.255.255.0, Type Stub (3)
TOS count 0, TOS 0 metric 1
Aging timer 00:55:14
Installed 00:04:43 ago, expires in 00:55:14
Last changed 00:04:43 ago, Change count: 2
Router *10.255.71.242    10.255.71.242    0x80000002    285    0x20 0x11b1    48
bits 0x3, link count 2
id 10.255.70.103, data 12.1.1.2, Type PointToPoint (1)
TOS count 0, TOS 0 metric 1
id 12.1.1.0, data 255.255.255.0, Type Stub (3)
TOS count 0, TOS 0 metric 1
Gen timer 00:45:15
Aging timer 00:55:15
Installed 00:04:45 ago, expires in 00:55:15, sent 00:04:43 ago
Last changed 00:04:45 ago, Change count: 2, Ours
Summary *23.1.1.0      10.255.71.242    0x80000002    243    0x20 0x6d72    28
mask 255.255.255.0
TOS 0x0, metric 1
Gen timer 00:45:57
Aging timer 00:55:57
Installed 00:04:03 ago, expires in 00:55:57, sent 00:04:01 ago
Last changed 00:04:48 ago, Change count: 1, Ours
Summary *24.1.1.0      10.255.71.242    0x80000002    248    0x20 0x607e    28
mask 255.255.255.0
TOS 0x0, metric 1
Gen timer 00:45:52
Aging timer 00:55:52
Installed 00:04:08 ago, expires in 00:55:52, sent 00:04:06 ago
Last changed 00:04:48 ago, Change count: 1, Ours
NSSA  *33.1.1.1        10.255.71.242    0x80000002    288    0x28 0x73bd    36
mask 255.255.255.255
Type 2, TOS 0x0, metric 0, fwd addr 12.1.1.2, tag 0.0.0.0
Gen timer 00:45:12
Aging timer 00:55:12
Installed 00:04:48 ago, expires in 00:55:12, sent 00:04:48 ago
Last changed 00:04:48 ago, Change count: 2, Ours

    OSPF link state database, Area 0.0.0.2
Type      ID          Adv Rtr      Seq      Age  Opt  Cksum  Len
Router  10.255.71.52    10.255.71.52    0x80000004    245  0x20 0xd021    36
bits 0x0, link count 1
id 23.1.1.1, data 23.1.1.2, Type Transit (2)
TOS count 0, TOS 0 metric 1
Aging timer 00:55:55
Installed 00:04:02 ago, expires in 00:55:55
Last changed 00:04:02 ago, Change count: 2
Router *10.255.71.242    10.255.71.242    0x80000003    244  0x20 0xe191    36
bits 0x3, link count 1
id 23.1.1.1, data 23.1.1.1, Type Transit (2)
TOS count 0, TOS 0 metric 1
Gen timer 00:45:56
Aging timer 00:55:56
Installed 00:04:04 ago, expires in 00:55:56, sent 00:04:02 ago
Last changed 00:04:04 ago, Change count: 2, Ours
Network *23.1.1.1      10.255.71.242    0x80000002    244  0x20 0x9c76    32
mask 255.255.255.0
attached router 10.255.71.242
attached router 10.255.71.52

```

```

Gen timer 00:45:56
Aging timer 00:55:56
Installed 00:04:04 ago, expires in 00:55:56, sent 00:04:02 ago
Last changed 00:04:04 ago, Change count: 1, Ours
Summary *12.1.1.0      10.255.71.242    0x80000001    288    0x20 0xfeec    28
mask 255.255.255.0
TOS 0x0, metric 1
Gen timer 00:45:12
Aging timer 00:55:12
Installed 00:04:48 ago, expires in 00:55:12, sent 00:04:04 ago
Last changed 00:04:48 ago, Change count: 1, Ours
Summary *24.1.1.0      10.255.71.242    0x80000002    248    0x20 0x607e    28
mask 255.255.255.0
TOS 0x0, metric 1
Gen timer 00:45:52
Aging timer 00:55:52
Installed 00:04:08 ago, expires in 00:55:52, sent 00:04:04 ago
Last changed 00:04:48 ago, Change count: 1, Ours
NSSA  *33.1.1.1        10.255.71.242    0x80000001    293    0x28 0xe047    36
mask 255.255.255.255
Type 2, TOS 0x0, metric 0, fwd addr 23.1.1.1, tag 0.0.0.0
Gen timer 00:45:07
Aging timer 00:55:07
Installed 00:04:53 ago, expires in 00:55:07, sent 00:04:04 ago
Last changed 00:04:53 ago, Change count: 1, Ours

```

#### OSPF link state database, Area 0.0.0.3

Type	ID	Adv Rtr	Seq	Age	Opt	Cksum	Len
Router	10.255.71.238	10.255.71.238	0x80000003	250	0x20	0x3942	36
bits 0x0, link count 1							
id 24.1.1.1, data 24.1.1.2, Type Transit (2)							
TOS count 0, TOS 0 metric 1							
Aging timer 00:55:50							
Installed 00:04:07 ago, expires in 00:55:50							
Last changed 00:04:07 ago, Change count: 2							
Router	*10.255.71.242	10.255.71.242	0x80000003	248	0x20	0xf37d	36
bits 0x3, link count 1							
id 24.1.1.1, data 24.1.1.1, Type Transit (2)							
TOS count 0, TOS 0 metric 1							
Gen timer 00:45:52							
Aging timer 00:55:52							
Installed 00:04:08 ago, expires in 00:55:52, sent 00:04:06 ago							
Last changed 00:04:08 ago, Change count: 2, Ours							
Network	*24.1.1.1	10.255.71.242	0x80000002	248	0x20	0xc591	32
mask 255.255.255.0							
attached router 10.255.71.242							
attached router 10.255.71.238							
Gen timer 00:45:52							
Aging timer 00:55:52							
Installed 00:04:08 ago, expires in 00:55:52, sent 00:04:06 ago							
Last changed 00:04:08 ago, Change count: 1, Ours							
Summary	*12.1.1.0	10.255.71.242	0x80000001	288	0x20	0xfeec	28
mask 255.255.255.0							
TOS 0x0, metric 1							
Gen timer 00:45:12							
Aging timer 00:55:12							
Installed 00:04:48 ago, expires in 00:55:12, sent 00:04:13 ago							
Last changed 00:04:48 ago, Change count: 1, Ours							
Summary	*23.1.1.0	10.255.71.242	0x80000002	243	0x20	0x6d72	28
mask 255.255.255.0							
TOS 0x0, metric 1							

```

Gen timer 00:45:57
Aging timer 00:55:57
Installed 00:04:03 ago, expires in 00:55:57, sent 00:04:01 ago
Last changed 00:04:48 ago, Change count: 1, Ours
NSSA *33.1.1.1 10.255.71.242 0x80000001 293 0x28 0xeb3b 36
mask 255.255.255.255
Type 2, TOS 0x0, metric 0, fwd addr 24.1.1.1, tag 0.0.0.0
Gen timer 00:45:07
Aging timer 00:55:07
Installed 00:04:53 ago, expires in 00:55:07, sent 00:04:13 ago
Last changed 00:04:53 ago, Change count: 1, Ours

```

### show ospf database summary

```

user@host> show ospf database summary
Area 0.0.0.1:
  2 Router LSAs
  2 Summary LSAs
  1 NSSA LSAs
Area 0.0.0.2:
  2 Router LSAs
  1 Network LSAs
  2 Summary LSAs
  1 NSSA LSAs
Area 0.0.0.3:
  2 Router LSAs
  1 Network LSAs
  2 Summary LSAs
  1 NSSA LSAs
Externals:
Interface fe-2/2/1.0:
Interface ge-0/3/2.0:
Interface so-0/1/2.0:
Interface so-0/1/2.0:

```

### show ospf database opaque-area detail

```

user@host> show ospf database opaque-area detail
  OSPF database, Area 0.0.0.0
  Type      ID          Adv Rtr      Seq      Age  Opt  Cksum  Len
  OpaqArea*4.0.0.0      1.1.1.10    0x800000ef  1510  0x22 0x2810 156
Area-opaque LSA
  SR-Algorithm (8), length 1:
    Algo (1), length 1:
      0
  SID/Label Range (9), length 12:
    Range Size (1), length 3:
      256
    SID/Label (1), length 3:
      Label (1), length 3:
        802048
  SID/Label Range (9), length 12:
    Range Size (1), length 3:
      256
    SID/Label (1), length 3:
      Label (1), length 3:
        802304
  SID/Label Range (9), length 12:
    Range Size (1), length 3:
      256
    SID/Label (1), length 3:

```

```

Label (1), length 3:
802560
SID/Label Range (9), length 12:
Range Size (1), length 3:
256
SID/Label (1), length 3:
Label (1), length 3:
802816
SID/Label Range (9), length 12:
Range Size (1), length 3:
256
SID/Label (1), length 3:

Label (1), length 3:
803072
SID/Label Range (9), length 12:
Range Size (1), length 3:
256
SID/Label (1), length 3:
Label (1), length 3:
803328
SID/Label Range (9), length 12:
Range Size (1), length 3:
256
SID/Label (1), length 3:
Label (1), length 3:
803584
SID/Label Range (9), length 12:
Range Size (1), length 3:
256
SID/Label (1), length 3:
Label (1), length 3:
803840

```

The Extended Prefix LSA (eg):

Type	ID	Adv Rtr	Seq	Age	Opt	Cksum	Len
OpaqueArea*	7.0.0.1	10.10.10.10	0x80000002	561	0x22	0x60eb	44

Area-opaque LSA

```

Extended Prefix (1), length 20:
Route Type (1), length 1:
1
Prefix Length (2), length 1:
32
AF (3), length 1:
0
Flags (4), length 1:
0x40
Prefix (5), length 32:
10.10.10.10
Prefix Sid (2), length 8:
Flags (1), length 1:
0x00
MT ID (2), length 1:
0
Algorithm (3), length 1:
0
SID (4), length 4:
0

```

Extended Links LSA (eg):

Type	ID	Adv Rtr	Seq	Age	Opt	Cksum	Len
OpaqArea	8.0.0.1	1.1.1.1	0x80000001	688	0x22	0xcd8a	48

Area-opaque LSA

Extended Link (1), length 24:

Link Type (1), length 1:

2

Link Id (2), length 4:

11.1.1.1

Link Data (3), length 4:

11.1.1.2

Adjacency Sid (2), length 7:

Flags (1), length 1:

0x60

MT ID (2), length 1:

0

Weight (3), length 1:

0

Label (4), length 3:

300416

## show ospf3 database

**List of Syntax**    [Syntax on page 2119](#)  
                          [Syntax \(EX Series Switches and QFX Series\) on page 2119](#)

**Syntax**    show ospf3 database  
                  <brief | detail | extensive | summary>  
                  <advertising-router (*address* | self)>  
                  <area *area-id*>  
                  <external>  
                  <instance *instance-name*>  
                  <inter-area-prefix>  
                  <inter-area-router>  
                  <intra-area-prefix>  
                  <link>  
                  <link-local>  
                  <logical-system (all | *logical-system-name*)>  
                  <lsa-id *lsa-id*>  
                  <network>  
                  <nssa>  
                  <realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>  
                  <router>

**Syntax (EX Series Switches and QFX Series)**    show ospf3 database  
                  <brief | detail | extensive | summary>  
                  <advertising-router (*address* | self)>  
                  <area *area-id*>  
                  <external>  
                  <instance *instance-name*>  
                  <inter-area-prefix>  
                  <inter-area-router>  
                  <intra-area-prefix>  
                  <link>  
                  <link-local>  
                  <lsa-id *lsa-id*>  
                  <network>  
                  <nssa>  
                  <router>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Command introduced in Junos OS Release 9.0 for EX Series switches.  
                                  **realm** option introduced in Junos OS Release 9.2.  
                                  **advertising-router** (*address* | **self**) option introduced in Junos Release 9.5.  
                                  **advertising-router** (*address* | **self**) option introduced in Junos OS Release 9.5 for EX Series switches.  
                                  Command introduced in Junos OS Release 11.3 for the QFX Series.

**Description**    Display the entries in the OSPF version 3 (OSPFv3) link-state database, which contains data about link-state advertisement (LSA) packets.

**Options**    **none**—Display standard information about all entries in the OSPFv3 link-state database.

**brief | detail | extensive | summary**—(Optional) Display the specified level of output.

**advertising-router (*address* | *self*)**—(Optional) Display the LSAs advertised either by a particular routing device or by this routing device.

**area *area-id***—(Optional) Display the LSAs in a particular area.

**external**—(Optional) Display external LSAs.

**instance *instance-name***—(Optional) Display all OSPF database information under the named routing instance.

**inter-area-prefix**—(Optional) Display information about interarea-prefix LSAs.

**inter-area-router**—(Optional) Display information about interarea-router LSAs.

**intra-area-prefix**—(Optional) Display information about intra-area-prefix LSAs.

**link**—(Optional) Display information about link LSAs.

**link-local**—(Optional) Display information about link-local LSAs.

**logical-system (*all* | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**lsa-id *lsa-id***—(Optional) Display the LSA with the specified LSA identifier.

**network**—(Optional) Display information about network LSAs.

**nssa**—(Optional) Display information about not-so-stubby area (NSSA) LSAs.

**realm (*ipv4-multicast* | *ipv4-unicast* | *ipv6-multicast*)**—(Optional) Display information about the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family other than IPv6 unicast, which is the default.

**router**—(Optional) Display information about router LSAs.

**Required Privilege Level**

view

**Related Documentation**

- [clear \(ospf | ospf3\) database on page 2082](#)

**List of Sample Output**

[show ospf3 database brief on page 2125](#)  
[show ospf3 database extensive on page 2126](#)  
[show ospf3 database summary on page 2128](#)

**Output Fields**

[Table 182 on page 2121](#) lists the output fields for the **show ospf3 database** command. Output fields are listed in the approximate order in which they appear.

Table 182: show ospf3 database Output Fields

Field Name	Field Description	Level of Output
OSPF link state database, area <i>area-number</i>	Entries in the link-state database for this area.	brief detail extensive
OSPF AS SCOPE link state database	Entries in the AS scope link-state database.	brief detail extensive
OSPF Link-Local link state database, interface <i>interface-name</i>	Entries in the link-local link-state database for this interface.	brief detail extensive
area	Area number. Area 0.0.0.0 is the backbone area.	All levels
Type	Type of link advertisement: <b>Extern</b> , <b>InterArPfx</b> , <b>InterArRtr</b> , <b>IntraArPrx</b> , <b>Link</b> , <b>Network</b> , <b>NSSA</b> , or <b>Router</b> .	brief detail extensive
ID	Link identifier included in the advertisement. An asterisk (*) preceding the identifier marks database entries that originated from the local routing device.	brief detail extensive
Adv Rtr	Address of the routing device that sent the advertisement.	brief detail extensive
Seq	Link sequence number of the advertisement.	brief detail extensive
Age	Time elapsed since the LSA was originated, in seconds.	brief detail extensive
Cksum	Checksum value of the LSA.	brief detail extensive
Len	Length of the advertisement, in bytes.	brief detail extensive
<b>Router (Router Link-State Advertisements)</b>		
bits	Flags describing the routing device that generated the LSP.	detail extensive
Options	Option bits carried in the router LSA.	detail extensive
<b>For Each Router Link</b>		
Type	Type of interface. The value of all other output fields describing a routing device interface depends on the interface's type: <ul style="list-style-type: none"> <li>• <b>PointToPoint (1)</b>—Point-to-point connection to another routing device.</li> <li>• <b>Transit (2)</b>—Connection to a transit network.</li> <li>• <b>Virtual (4)</b>—Virtual link.</li> </ul>	detail extensive
Loc-if-id	Local interface ID assigned to the interface that uniquely identifies the interface with the routing device.	detail extensive
Nbr-if-id	Interface ID of the neighbor's interface for this routing device link.	detail extensive

Table 182: show ospf3 database Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Nbr-rtr-id</b>	Router ID of the neighbor routing device (for type 2 interfaces, the attached link's designated router).	detail extensive
<b>Metric</b>	Cost of the router link.	detail extensive
<b>Gen timer</b>	How long until the LSA is regenerated, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Aging timer</b>	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Installed <i>nn:nn:nn</i> ago</b>	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
<b>expires in <i>nn:nn:nn</i></b>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
<b>sent <i>nn:nn:nn</i> ago</b>	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Ours</b>	Indicates that this is a local advertisement.	extensive
<b>Network (Network Link-State Advertisements)</b>		
<b>Options</b>	Option bits carried in the network LSA.	detail extensive
<b>Attached Router</b>	Router IDs of each of the routing devices attached to the link. Only routing devices that are fully adjacent to the designated router are listed. The designated router includes itself in this list.	detail extensive
<b>InterArPfx (Interarea-Prefix Link-State Advertisements)</b>		
<b>Prefix</b>	IPv6 address prefix.	detail extensive
<b>Prefix-options</b>	Option bit associated with the prefix.	detail extensive
<b>Metric</b>	Cost of this route. Expressed in the same units as the interface costs in the router LSAs. When the interarea-prefix LSA is describing a route to a range of addresses, the cost is set to the maximum cost to any reachable component of the address range.	detail extensive
<b>Gen timer</b>	How long until the LSA is regenerated, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Aging timer</b>	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Installed <i>nn:nn:nn</i> ago</b>	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
<b>expires in <i>nn:nn:nn</i></b>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
<b>sent <i>nn:nn:nn</i> ago</b>	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive

Table 182: show ospf3 database Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Ours</b>	Indicates that this is a local advertisement.	<b>extensive</b>
<b>InterArRtr (Interarea-Router Link-State Advertisements)</b>		
<b>Dest-router-id</b>	Router ID of the routing device described by the LSA.	<b>detail extensive</b>
<b>options</b>	Optional capabilities supported by the routing device.	<b>detail extensive</b>
<b>Metric</b>	Cost of this route. Expressed in the same units as the interface costs in the router LSAs. When the interarea-prefix LSA is describing a route to a range of addresses, the cost is set to the maximum cost to any reachable component of the address range.	<b>detail extensive</b>
<b>Prefix</b>	IPv6 address prefix.	<b>extensive</b>
<b>Prefix-options</b>	Option bit associated with the prefix.	<b>extensive</b>
<b>Extern (External Link-State Advertisements)</b>		
<b>Prefix</b>	IPv6 address prefix.	<b>detail extensive</b>
<b>Prefix-options</b>	Option bit associated with the prefix.	<b>detail extensive</b>
<b>Metric</b>	Cost of the route, which depends on the value of <b>Type</b> .	<b>detail extensive</b>
<b>Type <i>n</i></b>	Type of external metric: <b>Type 1</b> or <b>Type 2</b> .	<b>detail extensive</b>
<b>Aging timer</b>	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	<b>extensive</b>
<b>Installed <i>nn:nn:nn</i> ago</b>	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	<b>extensive</b>
<b>expires in <i>nn:nn:nn</i></b>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	<b>extensive</b>
<b>sent <i>nn:nn:nn</i> ago</b>	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	<b>extensive</b>
<b>Link (Link-State Advertisements)</b>		
<b>IPv6-Address</b>	IPv6 link-local address on the link for which this link LSA originated.	<b>detail extensive</b>
<b>Options</b>	Option bits carried in the link LSA.	<b>detail extensive</b>
<b>priority</b>	Router priority of the interface attaching the originating routing device to the link.	<b>detail extensive</b>
<b>Prefix-count</b>	Number of IPv6 address prefixes contained in the LSA. The rest of the link LSA contains a list of IPv6 prefixes to be associated with the link.	<b>detail extensive</b>
<b>Prefix</b>	IPv6 address prefix.	<b>detail extensive</b>

Table 182: show ospf3 database Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Prefix-options</b>	Option bit associated with the prefix.	detail extensive
<b>Gen timer</b>	How long until the LSA is regenerated, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Aging timer</b>	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Installed <i>nn:nn:nn</i> ago</b>	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
<b>expires in <i>nn:nn:nn</i></b>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
<b>sent <i>nn:nn:nn</i> ago</b>	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Ours</b>	Indicates that this is a local advertisement.	extensive
<b>IntraArPfx (Intra-Area-Prefix Link-State Advertisements)</b>		
<b>Ref-lsa-type</b>	LSA type of the referenced LSA. <ul style="list-style-type: none"> <li>• <b>Router</b>—Address prefixes are associated with a router LSA.</li> <li>• <b>Network</b>—Address prefixes are associated with a network LSA.</li> </ul>	detail extensive
<b>Ref-lsa-id</b>	Link-state ID of the referenced LSA.	detail extensive
<b>Ref-router-id</b>	Advertising router ID of the referenced LSA.	detail extensive
<b>Prefix-count</b>	Number of IPv6 address prefixes contained in the LSA. The rest of the link LSA contains a list of IPv6 prefixes to be associated with the link.	detail extensive
<b>Prefix</b>	IPv6 address prefix.	detail extensive
<b>Prefix-options</b>	Option bit associated with the prefix.	detail extensive
<b>Metric</b>	Cost of this prefix. Expressed in the same units as the interface costs in the router LSAs.	detail extensive
<b>Gen timer</b>	How long until the LSA is regenerated, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Aging timer</b>	How long until the LSA expires, in the format <i>hours:minutes:seconds</i> .	extensive
<b>Installed <i>hh:mm:ss</i> ago</b>	How long ago the route was installed, in the format <i>hours:minutes:seconds</i> .	extensive
<b>expires in <i>hh:mm:ss</i></b>	How long until the route expires, in the format <i>hours:minutes:seconds</i> .	extensive
<b>sent <i>hh:mm:ss</i> ago</b>	Time elapsed since the LSA was last transmitted or flooded to an adjacency or an interface, respectively, in the format <i>hours:minutes:seconds</i> .	extensive

Table 182: show ospf3 database Output Fields (continued)

Field Name	Field Description	Level of Output
<i>n</i> Router LSAs	Number of router LSAs in the link-state database.	summary
<i>n</i> Network LSAs	Number of network LSAs in the link-state database.	summary
<i>n</i> InterArPfx LSAs	Number of interarea-prefix LSAs in the link-state database.	summary
<i>n</i> InterArRtr LSAs	Number of interarea-router LSAs in the link-state database.	summary
<i>n</i> IntraArPfx LSAs	Number of intra-area-prefix LSAs in the link-state database.	summary
Externals	Display of the external LSA database.	summary
<i>n</i> Extern LSAs	Number of external LSAs in the link-state database.	summary
Interface <i>interface-name</i>	Name of the interface for which link-local LSA information is displayed.	summary
<i>n</i> Link LSAs	Number of link LSAs in the link-state database.	summary

## Sample Output

### show ospf3 database brief

```

user@host> show ospf3 database brief
  OSPF3 link state database, area 0.0.0.0
  Type      ID          Adv Rtr      Seq          Age  Cksum  Len
  Router    0.0.0.1      10.255.4.85  0x80000003   885  0xa697  40
  Router    *0.0.0.1     10.255.4.93  0x80000002   953  0xc677  40
  InterArPfx *0.0.0.2     10.255.4.93  0x80000001   910  0xb96f  44
  InterArRtr *0.0.0.1     10.255.4.93  0x80000001   910  0xe159  32
  IntraArPfx *0.0.0.1     10.255.4.93  0x80000002   432  0x788f  72

  OSPF3 link state database, area 0.0.0.1
  Type      ID          Adv Rtr      Seq          Age  Cksum  Len
  Router    *0.0.0.1     10.255.4.93  0x80000003   916  0xea40  40
  Router    0.0.0.1     10.255.4.97  0x80000006   851  0xc95b  40
  Network    0.0.0.2     10.255.4.97  0x80000002   916  0x4598  32
  InterArPfx *0.0.0.1     10.255.4.93  0x80000002   117  0xa980  44
  InterArPfx *0.0.0.2     10.255.4.93  0x80000002    62  0xd47e  44
  NSSA      0.0.0.1     10.255.4.97  0x80000002   362  0x45ee  44
  IntraArPfx 0.0.0.1     10.255.4.97  0x80000006   851  0x2f77  52

  OSPF3 AS SCOPE link state database
  Type      ID          Adv Rtr      Seq          Age  Cksum  Len
  Extern    0.0.0.1     10.255.4.85  0x80000002    63  0x9b86  44
  Extern    *0.0.0.1     10.255.4.93  0x80000001   910  0x59c9  44

  OSPF3 Link-Local link state database, interface ge-1/3/0.0
  Type      ID          Adv Rtr      Seq          Age  Cksum  Len
  Link      *0.0.0.2     10.255.4.93  0x80000003   916  0x4dab  64

```

## show ospf3 database extensive

```

user@host> show ospf3 database extensive
  OSPF3 link state database, area 0.0.0.0
  Type      ID          Adv Rtr      Seq          Age  Cksum  Len
Router      0.0.0.1          10.255.4.85  0x80000003   1028 0xa697  40
  bits 0x2, Options 0x13
  Type PointToPoint (1), Metric 10
    Loc-If-Id 2, Nbr-If-Id 3, Nbr-Rtr-Id 10.255.4.93
  Aging timer 00:42:51
  Installed 00:17:05 ago, expires in 00:42:52, sent 02:37:54 ago
Router      *0.0.0.1          10.255.4.93  0x80000002   1096 0xc677  40
  bits 0x3, Options 0x13
  Type PointToPoint (1), Metric 10
    Loc-If-Id 3, Nbr-If-Id 2, Nbr-Rtr-Id 10.255.4.85
  Gen timer 00:00:40
  Aging timer 00:41:44
  Installed 00:18:16 ago, expires in 00:41:44, sent 00:18:14 ago
  Ours
InterArPfx *0.0.0.2          10.255.4.93  0x80000001   1053 0xb96f  44
  Prefix feee::10:10:2:0/126
  Prefix-options 0x0, Metric 10
  Gen timer 00:17:02
  Aging timer 00:42:26
  Installed 00:17:33 ago, expires in 00:42:27, sent 00:17:31 ago
  Ours
InterArPfx *0.0.0.3          10.255.4.93  0x80000001   1053 0x71d3  44
  Prefix feee::10:255:4:97/128
  Prefix-options 0x0, Metric 10
  Gen timer 00:21:07
  Aging timer 00:42:26
  Installed 00:17:33 ago, expires in 00:42:27, sent 00:17:31 ago
  Ours
InterArRtr *0.0.0.1          10.255.4.93  0x80000001   1053 0xe159  32
  Dest-router-id 10.255.4.97, Options 0x19, Metric 10
  Gen timer 00:29:18
  Aging timer 00:42:26
  Installed 00:17:33 ago, expires in 00:42:27, sent 00:17:31 ago
  Ours
IntraArPfx 0.0.0.1          10.255.4.85  0x80000002   1028 0x2403  72
  Ref-lsa-type Router, Ref-lsa-id 0.0.0.0, Ref-router-id 10.255.4.85
  Prefix-count 2
  Prefix feee::10:255:4:85/128
    Prefix-options 0x2, Metric 0
  Prefix feee::10:10:1:0/126
    Prefix-options 0x0, Metric 10
  Aging timer 00:42:51
  Installed 00:17:05 ago, expires in 00:42:52, sent 02:37:54 ago
IntraArPfx *0.0.0.1          10.255.4.93  0x80000002   575 0x788f  72
  Ref-lsa-type Router, Ref-lsa-id 0.0.0.0, Ref-router-id 10.255.4.93
  Prefix-count 2
  Prefix feee::10:255:4:93/128
    Prefix-options 0x2, Metric 0
  Prefix feee::10:10:1:0/126
    Prefix-options 0x0, Metric 10
  Gen timer 00:33:23
  Aging timer 00:50:24
  Installed 00:09:35 ago, expires in 00:50:25, sent 00:09:33 ago
  OSPF3 link state database, area 0.0.0.1
  Type      ID          Adv Rtr      Seq          Age  Cksum  Len
Router      *0.0.0.1          10.255.4.93  0x80000003   1059 0xea40  40

```

```

bits 0x3, Options 0x19
Type Transit (2), Metric 10
  Loc-If-Id 2, Nbr-If-Id 2, Nbr-Rtr-Id 10.255.4.97
Gen timer 00:08:51
Aging timer 00:42:20
Installed 00:17:39 ago, expires in 00:42:21, sent 00:17:37 ago
Router 0.0.0.1 10.255.4.97 0x80000006 994 0xc95b 40
bits 0x2, Options 0x19
Type Transit (2), Metric 10
  Loc-If-Id 2, Nbr-If-Id 2, Nbr-Rtr-Id 10.255.4.97
Aging timer 00:43:25
Installed 00:16:31 ago, expires in 00:43:26, sent 02:37:54 ago
Network 0.0.0.2 10.255.4.97 0x80000002 1059 0x4598 32
Options 0x11
Attached router 10.255.4.97
Attached router 10.255.4.93
Aging timer 00:42:20
Installed 00:17:36 ago, expires in 00:42:21, sent 02:37:54 ago
InterArPfx *0.0.0.1 10.255.4.93 0x80000002 260 0xa980 44
Prefix feee::10:10:1:0/126
Prefix-options 0x0, Metric 10
Gen timer 00:45:39
Aging timer 00:55:39
Installed 00:04:20 ago, expires in 00:55:40, sent 00:04:18 ago
Ours
InterArPfx *0.0.0.2 10.255.4.93 0x80000002 205 0xd47e 44
Prefix feee::10:255:4:93/128
Prefix-options 0x0, Metric 0
Gen timer 00:46:35
Aging timer 00:56:35
Installed 00:03:25 ago, expires in 00:56:35, sent 00:03:23 ago
Ours
InterArPfx *0.0.0.3 10.255.4.93 0x80000001 1089 0x9bbb 44
Prefix feee::10:255:4:85/128
Prefix-options 0x0, Metric 10
Gen timer 00:04:46
Aging timer 00:41:51
Installed 00:18:09 ago, expires in 00:41:51, sent 00:17:43 ago
Ours
NSSA 0.0.0.1 10.255.4.97 0x80000002 505 0x45ee 44
Prefix feee::200:200:1:0/124
Prefix-options 0x8, Metric 10, Type 2,
Aging timer 00:51:35
Installed 00:08:22 ago, expires in 00:51:35, sent 02:37:54 ago
IntraArPfx 0.0.0.1 10.255.4.97 0x80000006 994 0x2f77 52
Ref-lsa-type Router, Ref-lsa-id 0.0.0.0, Ref-router-id 10.255.4.97
Prefix-count 1
Prefix feee::10:255:4:97/128
Prefix-options 0x2, Metric 0
Aging timer 00:43:25
Installed 00:16:31 ago, expires in 00:43:26, sent 02:37:54 ago
IntraArPfx 0.0.0.3 10.255.4.97 0x80000002 1059 0x4446 52
Ref-lsa-type Network, Ref-lsa-id 0.0.0.2, Ref-router-id 10.255.4.97
Prefix-count 1
Prefix feee::10:10:2:0/126
Prefix-options 0x0, Metric 0
Aging timer 00:42:20
Installed 00:17:36 ago, expires in 00:42:21, sent 02:37:54 ago
OSPF3 AS SCOPE link state database
Type ID Adv Rtr Seq Age Cksum Len
Extern 0.0.0.1 10.255.4.85 0x80000002 206 0x9b86 44

```

```

Prefix feee::100:100:1:0/124
Prefix-options 0x0, Metric 20, Type 2,
Aging timer 00:56:34
Installed 00:03:23 ago, expires in 00:56:34, sent 02:37:54 ago
Extern *0.0.0.1 10.255.4.93 0x80000001 1053 0x59c9 44
Prefix feee::200:200:1:0/124
Prefix-options 0x0, Metric 10, Type 2,
Gen timer 00:25:12
Aging timer 00:42:26
Installed 00:17:33 ago, expires in 00:42:27, sent 00:17:31 ago

OSPF3 Link-Local link state database, interface ge-1/3/0.0
Type ID Adv Rtr Seq Age Cksum Len
Link *0.0.0.2 10.255.4.93 0x80000003 1059 0x4dab 64
fe80::290:69ff:fe39:1cdb
Options 0x11, priority 128
Prefix-count 1
Prefix feee::10:10:2:0/126 Prefix-options 0x0
Gen timer 00:12:56
Aging timer 00:42:20
Installed 00:17:39 ago, expires in 00:42:21, sent 00:17:37 ago
Link 0.0.0.2 10.255.4.97 0x80000003 205 0xa87d 64
fe80::290:69ff:fe38:883e
Options 0x11, priority 128
Prefix-count 1
Prefix feee::10:10:2:0/126 Prefix-options 0x0
Aging timer 00:56:35
Installed 00:03:22 ago, expires in 00:56:35, sent 02:37:54 ago

OSPF3 Link-Local link state database, interface so-2/2/0.0
Type ID Adv Rtr Seq Age Cksum Len
Link 0.0.0.2 10.255.4.85 0x80000002 506 0x42bb 64
fe80::280:42ff:fe10:f169
Options 0x13, priority 128
Prefix-count 1
Prefix feee::10:10:1:0/126 Prefix-options 0x0
Aging timer 00:51:34
Installed 00:08:23 ago, expires in 00:51:34, sent 02:37:54 ago
Link *0.0.0.3 10.255.4.93 0x80000002 505 0x6b7a 64
fe80::280:42ff:fe10:f177
Options 0x13, priority 128
Prefix-count 1
Prefix feee::10:10:1:0/126 Prefix-options 0x0
Gen timer 00:37:28
Aging timer 00:51:35
Installed 00:08:25 ago, expires in 00:51:35, sent 00:08:23 ago
Ours

```

### show ospf3 database summary

```

user@host> show ospf3 database summary
Area 0.0.0.0:
  2 Router LSAs
  1 InterArPfx LSAs
  1 InterArRtr LSAs
  1 IntraArPfx LSAs
Area 0.0.0.1:
  2 Router LSAs
  1 Network LSAs
  2 InterArPfx LSAs
  1 NSSA LSAs

```

```
1 IntraArPfx LSAs
Externals:
2 Extern LSAs
Interface ge-1/3/0.0:
1 Link LSAs
Interface lo0.0:
Interface so-2/2/0.0:
1 Link LSAs
```

## show (ospf | ospf3) interface

---

**List of Syntax**    [Syntax on page 2130](#)  
                         [Syntax \(EX Series Switches and QFX Series\) on page 2130](#)

**Syntax**    `show (ospf | ospf3) interface`  
                 `<brief | detail | extensive>`  
                 `<area area-id>`  
                 `<interface-name>`  
                 `<instance instance-name>`  
                 `<logical-system (all | logical-system-name)>`  
                 `<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>`

**Syntax (EX Series Switches and QFX Series)**    `show (ospf | ospf3) interface`  
                 `<brief | detail | extensive>`  
                 `<area area-id>`  
                 `<interface-name>`  
                 `<instance instance-name>`

**Release Information**    Command introduced before Junos OS Release 7.4.  
                             Command introduced in Junos OS Release 9.0 for EX Series switches.  
                             **area** option introduced in Junos OS Release 9.2.  
                             **area** option introduced in Junos OS Release 9.2 for EX Series switches.  
                             **realm** option introduced in Junos OS Release 9.2.  
                             Command introduced in Junos OS Release 11.3 for the QFX Series.  
                             Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Display the status of OSPF interfaces.

**Options**    **none**—Display standard information about the status of all OSPF interfaces for all routing instances

**brief | detail | extensive**—(Optional) Display the specified level of output.

**area *area-id***—(Optional) Display information about the interfaces that belong to the specified area.

**interface-name**—(Optional) Display information for the specified interface.

**instance *instance-name***—(Optional) Display all OSPF interfaces under the named routing instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)**—(OSPFv3 only) (Optional)  
                             Display information about the interfaces for the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

**Required Privilege Level** view

**List of Sample Output** [show ospf interface brief on page 2133](#)  
[show ospf interface detail on page 2133](#)  
[show ospf3 interface detail on page 2133](#)  
[show ospf interface detail\(When Multiarea Adjacency Is Configured\) on page 2133](#)  
[show ospf interface area area-id on page 2135](#)  
[show ospf interface extensive \(When Flooding Reduction Is Enabled\) on page 2135](#)  
[show ospf interface extensive \(When LDP Synchronization Is Configured\) on page 2135](#)

**Output Fields** [Table 183 on page 2131](#) lists the output fields for the **show (ospf | ospf3) interface** command. Output fields are listed in the approximate order in which they appear.

*Table 183: show (ospf | ospf3) interface Output Fields*

Field Name	Field Description	Level of Output
<b>Interface</b>	Name of the interface running OSPF version 2 or OSPF version 3.	All levels
<b>State</b>	State of the interface: <b>BDR</b> , <b>Down</b> , <b>DR</b> , <b>DRother</b> , <b>Loop</b> , <b>PtToPt</b> , or <b>Waiting</b> .	All levels
<b>Area</b>	Number of the area that the interface is in.	All levels
<b>DR ID</b>	Address of the area's designated router.	All levels
<b>BDR ID</b>	Backup designated router for a particular subnet.	All levels
<b>Nbrs</b>	Number of neighbors on this interface.	All levels
<b>Type</b>	Type of interface: <b>LAN</b> , <b>NBMA</b> , <b>P2MP</b> , <b>P2P</b> , or <b>Virtual</b> .	detail extensive
<b>Address</b>	IP address of the neighbor.	detail extensive
<b>Mask</b>	Netmask of the neighbor.	detail extensive
<b>Prefix-length</b>	(OSPFv3) IPv6 prefix length, in bits.	detail extensive
<b>OSPF3-Intf-Index</b>	(OSPFv3) OSPF version 3 interface index.	detail extensive
<b>MTU</b>	Interface maximum transmission unit (MTU).	detail extensive
<b>Cost</b>	Interface cost (metric).	detail extensive
<b>DR addr</b>	Address of the designated router.	detail extensive
<b>BDR addr</b>	Address of the backup designated router.	detail extensive
<b>Adj count</b>	Number of adjacent neighbors.	detail extensive

Table 183: show (ospf | ospf3) interface Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Secondary</b>	Indicates that this interface is configured as a secondary interface for this area. This interface can belong to more than one area, but can be designated as a primary interface for only one area.	<b>detail extensive</b>
<b>Flood Reduction</b>	Indicates that this interface is configured with flooding reduction. All self-originated LSAs from this interface are initially sent with the <b>DoNotAge</b> bit set. As a result, LSAs are refreshed only when a change occurs.	<b>extensive</b>
<b>Priority</b>	Router priority used in designated router (DR) election on this interface.	<b>detail extensive</b>
<b>Flood list</b>	List of link-state advertisements (LSAs) that might be about to flood this interface.	<b>extensive</b>
<b>Ack list</b>	Acknowledgment list. List of pending acknowledgments on this interface.	<b>extensive</b>
<b>Descriptor list</b>	List of packet descriptors.	<b>extensive</b>
<b>Hello</b>	Configured value for the hello timer.	<b>detail extensive</b>
<b>Dead</b>	Configured value for the dead timer.	<b>detail extensive</b>
<b>Auth type</b>	(OSPFv2) Authentication mechanism for sending and receiving OSPF protocol packets: <ul style="list-style-type: none"> <li>• <b>MD5</b>—The MD5 mechanism is configured in accordance with RFC 2328.</li> <li>• <b>None</b>—No authentication method is configured.</li> <li>• <b>Password</b>—A simple password (RFC 2328) is configured.</li> </ul>	<b>detail extensive</b>
<b>Topology</b>	(Multiarea adjacency) Name of topology: <b>default</b> or <b>name</b> .	
<b>LDP sync state</b>	(OSPFv2 and LDP synchronization) Current state of LDP synchronization: <b>in sync</b> , <b>in holddown</b> , and <b>not supported</b> .	<b>extensive</b>
<b>reason</b>	(OSPFv2 and LDP synchronization) Reason for the current state of LDP synchronization. The LDP session might be up or down, or adjacency might be up or down.	<b>extensive</b>
<b>config holdtime</b>	(OSPFv2 and LDP synchronization) Configured value of the hold timer.  If the state is not synchronized, and the hold time is not infinity, the <b>remaining</b> field displays the number of seconds that remain until the configured hold timer expires.	<b>extensive</b>
<b>IPSec SA name</b>	(OSPFv2) Name of the IPSec security association name.	<b>detail extensive</b>
<b>Active key ID</b>	(OSPFv2 and MD5) Number from 0 to 255 that uniquely identifies an MD5 key.	<b>detail extensive</b>

Table 183: show (ospf | ospf3) interface Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Start time</b>	(OSPFv2 and MD5) Time at which the routing device starts using an MD5 key to authenticate OSPF packets transmitted on the interface on which this key is configured. To authenticate received OSPF protocol packets, the key becomes effective immediately after the configuration is committed. If the start time option is not configured, the key is effective immediately for send and receive and is displayed as <b>Start time 1970 Jan 01 00:00:00 PST</b> .	<b>detail extensive</b>
<b>ReXmit</b>	Configured value for the Retransmit timer.	<b>detail extensive</b>
<b>Stub, Not Stub, or Stub NSSA</b>	Type of area.	<b>detail extensive</b>

## Sample Output

### show ospf interface brief

```

user@host> show ospf interface brief
Intf      State   Area      DR ID      BDR ID      Nbrs
at-5/1/0.0 PtToPt  0.0.0.0    0.0.0.0    0.0.0.0      1
ge-2/3/0.0 DR       0.0.0.0    192.168.4.16 192.168.4.15 1
lo0.0     DR       0.0.0.0    192.168.4.16 0.0.0.0      0
so-0/0/0.0 Down    0.0.0.0    0.0.0.0    0.0.0.0      0
so-6/0/1.0 PtToPt  0.0.0.0    0.0.0.0    0.0.0.0      1
so-6/0/2.0 Down    0.0.0.0    0.0.0.0    0.0.0.0      0
so-6/0/3.0 PtToPt  0.0.0.0    0.0.0.0    0.0.0.0      1

```

### show ospf interface detail

```

user@host> show ospf interface detail
Interface      State   Area      DR ID      BDR ID      Nbrs
fe-0/0/1.0     BDR    0.0.0.0    192.168.37.12 10.255.245.215 1
Type LAN, address 192.168.37.11, Mask 255.255.255.248, MTU 4460, Cost 40
DR addr 192.168.37.12, BDR addr 192.168.37.11, Adj count 1, Priority 128
Hello 10, Dead 40, ReXmit 5, Not Stub
t1-0/2/1.0     PtToPt  0.0.0.0    0.0.0.0    0.0.0.0      0
Type P2P, Address 0.0.0.0, Mask 0.0.0.0, MTU 1500, Cost 2604
Adj count 0
Hello 10, Dead 40, ReXmit 5, Not Stub
Auth type: MD5, Active key ID 3, Start time 2002 Nov 19 10:00:00 PST
IPsec SA Name: sa

```

### show ospf3 interface detail

```

user@host> show ospf3 interface so-0/0/3.0 detail
Interface      State   Area      DR-ID      BDR-ID      Nbrs
so-0/0/3.0     PtToPt  0.0.0.0    0.0.0.0    0.0.0.0      1
Address fe80::2a0:a5ff:fe28:1dfc, Prefix-length 64
OSPF3-Intf-index 1, Type P2P, MTU 4470, Cost 12, Adj-count 1
Hello 10, Dead 40, ReXmit 5, Not Stub

```

### show ospf interface detail

## (When Multiarea Adjacency Is Configured)

```

user@host> show ospf interface detail
user@host> show ospf interface detail
Interface          State Area          DR ID          BDR ID          Nbrs
10.0.0              DR      0.0.0.0        10.255.245.2    0.0.0.0          0

  Type: LAN, Address: 127.0.0.1, Mask: 255.255.255.255, MTU: 65535, Cost: 0
  DR addr: 127.0.0.1, Adj count: 0, Priority: 128
  Hello: 10, Dead: 40, ReXmit: 5, Not Stub
  Auth type: None
  Topology default (ID 0) -> Cost: 0
10.0.0              DR      0.0.0.0        10.255.245.2    0.0.0.0          0

  Type: LAN, Address: 10.255.245.2, Mask: 255.255.255.255, MTU: 65535, Cost: 0
  DR addr: 10.255.245.2, Adj count: 0, Priority: 128
  Hello: 10, Dead: 40, ReXmit: 5, Not Stub
  Auth type: None
  Topology default (ID 0) -> Cost: 0
so-0/0/0.0          PtToPt 0.0.0.0        0.0.0.0          0.0.0.0          1

  Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1
  Adj count: 1
  Hello: 10, Dead: 40, ReXmit: 5, Not Stub
  Auth type: None
  Topology default (ID 0) -> Cost: 1
so-0/0/0.0          PtToPt 0.0.0.0        0.0.0.0          0.0.0.0          0

  Type: P2P, Address: 192.168.37.46, Mask: 255.255.255.254, MTU: 4470, Cost: 1
  Adj count: 0, , Passive
  Hello: 10, Dead: 40, ReXmit: 5, Not Stub
  Auth type: None
  Topology default (ID 0) -> Passive, Cost: 1
so-1/0/0.0          PtToPt 0.0.0.0        0.0.0.0          0.0.0.0          1

  Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1
  Adj count: 1
  Hello: 10, Dead: 40, ReXmit: 5, Not Stub
  Auth type: None
  Topology default (ID 0) -> Cost: 1
so-1/0/0.0          PtToPt 0.0.0.0        0.0.0.0          0.0.0.0          0

  Type: P2P, Address: 192.168.37.54, Mask: 255.255.255.254, MTU: 4470, Cost: 1
  Adj count: 0, , Passive
  Hello: 10, Dead: 40, ReXmit: 5, Not Stub
  Auth type: None
  Topology default (ID 0) -> Passive, Cost: 1
so-0/0/0.0          PtToPt 1.1.1.1        0.0.0.0          0.0.0.0          1

  Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1
  Adj count: 1, Secondary
  Hello: 10, Dead: 40, ReXmit: 5, Not Stub
  Auth type: None
  Topology default (ID 0) -> Cost: 1
so-1/0/0.0          PtToPt 1.1.1.1        0.0.0.0          0.0.0.0          1

  Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1
  Adj count: 1, Secondary
  Hello: 10, Dead: 40, ReXmit: 5, Not Stub
  Auth type: None
  Topology default (ID 0) -> Cost: 1
so-0/0/0.0          PtToPt 2.2.2.2        0.0.0.0          0.0.0.0          1

```

```

Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1
Adj count: 1, Secondary
Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
Topology default (ID 0) -> Cost: 1
so-1/0/0.0      PtToPt  2.2.2.2      0.0.0.0      0.0.0.0      1

Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 1
Adj count: 1, Secondary
Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
Topology default (ID 0) -> Cost: 1

```

### show ospf interface area area-id

```

user@host> show ospf interface area 1.1.1.1
Interface      State   Area      DR ID      BDR ID      Nbrs
so-0/0/0.0     PtToPt  1.1.1.1   0.0.0.0    0.0.0.0     1
so-1/0/0.0     PtToPt  1.1.1.1   0.0.0.0    0.0.0.0     1

```

### show ospf interface extensive (When Flooding Reduction Is Enabled)

```

user@host> show ospf interface extensive
Interface      State   Area      DR ID      BDR ID      Nbrs
fe-0/0/0.0     PtToPt  0.0.0.0   0.0.0.0    0.0.0.0     0

Type: P2P, Address: 10.10.10.1, Mask: 255.255.255.0, MTU: 1500, Cost: 1
Adj count: 0
Secondary, Flood Reduction
Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
Topology default (ID 0) -> Cost: 1

```

### show ospf interface extensive (When LDP Synchronization Is Configured)

```

user@host> show ospf interface extensive
Interface      State   Area      DR ID      BDR ID
Nbrs
so-1/0/3.0     Down    0.0.0.0   0.0.0.0    0.0.0.0
0
Type: P2P, Address: 0.0.0.0, Mask: 0.0.0.0, MTU: 4470, Cost: 65535
Adj count: 0
Hello: 10, Dead: 40, ReXmit: 5, Not Stub
Auth type: None
LDP sync state: in holddown, for: 00:00:08, reason: LDP down during config
                  config holddtime: 10 seconds, remaining: 1

```

## show (ospf | ospf3) io-statistics

<b>List of Syntax</b>	<a href="#">Syntax on page 2136</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 2136</a>
<b>Syntax</b>	<pre>show (ospf   ospf3) io-statistics &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>show (ospf   ospf3) io-statistics</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display Open Shortest Path First (OSPF) input and output statistics.
<b>Options</b>	<p><b>none</b>—Display OSPF input and output statistics.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear (ospf   ospf3) statistics on page 2089</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ospf io-statistics on page 2137</a>
<b>Output Fields</b>	<p><a href="#">Table 184 on page 2136</a> lists the output fields for the <b>show ospf io-statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 184: show (ospf | ospf3) io-statistics Output Fields*

Field Name	Field Description
Packets read	Number of OSPF packets read since the last time the routing protocol was started.
average per run	Total number of packets divided by the total number of times the OSPF read operation is scheduled to run.
max run	Maximum number of packets for a given run among all scheduled runs.
Receive errors	Number of faulty packets received with errors.

## Sample Output

### show ospf io-statistics

```
user@host> show ospf io-statistics
```

```
Packets read: 7361, average per run: 1.00, max run: 1  
Receive errors:  
None
```

## show (ospf | ospf3) log

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2138</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 2138</a>
<b>Syntax</b>	<pre>show (ospf   ospf3) log &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;realm (ipv4-multicast   ipv4-unicast   ipv6-multicast)&gt; &lt;topology <i>topology-name</i>&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>show (ospf   ospf3) log &lt;instance <i>instance-name</i>&gt; &lt;topology <i>topology-name</i>&gt;</pre>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>topology</b> option introduced in Junos OS Release 9.0. <b>topology</b> option introduced in Junos OS Release 9.0 for EX Series switches. <b>realm</b> option introduced in Junos OS Release 9.2. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display the entries in the Open Shortest Path First (OSPF) log of SPF calculations.
<b>Options</b>	<b>none</b> —Display entries in the OSPF log of SPF calculations for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Display entries for the specified routing instance.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>topology <i>topology-name</i></b> —(Optional) (OSPFv2 only) Display entries for the specified topology.  <b>realm (ipv4-multicast   ipv4-unicast   ipv6-multicast)</b> —(OSPFv3 only) (Optional) Display entries for the specified OSPFv3 realm, or address family. Use the <b>realm</b> option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show ospf log on page 2139</a> <a href="#">show ospf log topology voice on page 2139</a>
<b>Output Fields</b>	<a href="#">Table 185 on page 2139</a> lists the output fields for the <b>show (ospf   ospf3) log</b> command. Output fields are listed in the approximate order in which they appear.

Table 185: show (ospf | ospf3) log Output Fields

Field Name	Field Description
<b>When</b>	Time, in weeks ( <b>w</b> ) and days ( <b>d</b> ), since the SPF calculation was made.
<b>Type</b>	Type of calculation: <b>Cleanup</b> , <b>External</b> , <b>Interarea</b> , <b>NSSA</b> , <b>Redist</b> , <b>SPF</b> , <b>Stub</b> , <b>Total</b> , or <b>Virtuallink</b> .
<b>Elapsed</b>	Amount of time, in seconds, that elapsed during the operation, or the time required to complete the SPF calculation. The start time is the time displayed in the <b>When</b> field.

## Sample Output

### show ospf log

```

user@host> show ospf log
When          Type          Elapsed
1w4d 17:25:58 Stub          0.000017
1w4d 17:25:58 SPF            0.000070
1w4d 17:25:58 Stub          0.000019
1w4d 17:25:58 Interarea      0.000054
1w4d 17:25:58 External       0.000005
1w4d 17:25:58 Cleanup        0.000203
1w4d 17:25:58 Total          0.000537
1w4d 17:24:48 SPF            0.000125
1w4d 17:24:48 Stub          0.000017
1w4d 17:24:48 SPF            0.000100
1w4d 17:24:48 Stub          0.000016
1w4d 17:24:48 Interarea      0.000056
1w4d 17:24:48 External       0.000005
1w4d 17:24:48 Cleanup        0.000238
1w4d 17:24:48 Total          0.000600
...

```

### show ospf log topology voice

```

user@host> show ospf log topology voice
Topology voice SPF log:

    Last instance of each event type
When          Type          Elapsed
00:06:11      SPF            0.000116
00:06:11      Stub          0.000114
00:06:11      Interarea      0.000126
00:06:11      External       0.000067
00:06:11      NSSA          0.000037
00:06:11      Cleanup        0.000186

    Maximum length of each event type
When          Type          Elapsed
00:13:43      SPF            0.000140
00:13:33      Stub          0.000116
00:13:43      Interarea      0.000128
00:13:33      External       0.000075

```

00:13:38	NSSA	0.000039
00:13:53	Cleanup	0.000657

Last 100 events		
When	Type	Elapsed
00:13:53	SPF	0.000090
00:13:53	Stub	0.000041
00:13:53	Interarea	0.000123
00:13:53	External	0.000040
00:13:53	NSSA	0.000038
00:13:53	Cleanup	0.000657
00:13:53	Total	0.001252
.		
.		
00:06:11	SPF	0.000116
00:06:11	Stub	0.000114
00:06:11	Interarea	0.000126
00:06:11	External	0.000067
00:06:11	NSSA	0.000037
00:06:11	Cleanup	0.000186
00:06:11	Total	0.000818

## show (ospf | ospf3) neighbor

**List of Syntax**    [Syntax on page 2141](#)  
                          [Syntax \(EX Series Switches and QFX Series\) on page 2141](#)

**Syntax**    `show (ospf | ospf3) neighbor`  
                  `<brief | detail | extensive>`  
                  `<area area-id>`  
                  `<instance (all | instance-name)>`  
                  `<interface interface-name>`  
                  `<logical-system (all | logical-system-name)>`  
                  `<neighbor>`  
                  `<realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>`

**Syntax (EX Series Switches and QFX Series)**    `show (ospf | ospf3) neighbor`  
                  `<brief | detail | extensive>`  
                  `<area area-id>`  
                  `<instance (all | instance-name)>`  
                  `<interface interface-name>`  
                  `<neighbor>`

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Command introduced in Junos OS Release 9.0 for EX Series switches.  
                                  **instance all** option introduced in Junos OS Release 9.1.  
                                  **instance all** option introduced in Junos OS Release 9.1 for EX Series switches.  
                                  **area**, **interface**, and **realm** options introduced in Junos OS Release 9.2.  
                                  **area** and **interface** options introduced in Junos OS Release 9.2 for EX Series switches.  
                                  Command introduced in Junos OS Release 11.3 for the QFX Series.  
                                  Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Display information about OSPF neighbors.

CPU utilization might increase while the device learns its OSPF neighbors. We recommend that you use the **show (ospf | ospf3) neighbor** command after the device learns and establishes OSPF neighbor adjacencies. Depending on the size of your network, this might take several minutes. If you receive a “timeout communicating with routing daemon” error when using the **show (ospf | ospf3) neighbor** command, wait several minutes before attempting to use the command again. This is not a critical system error, but you might experience a delay in using the CLI.

**Options**    **none**—Display standard information about all OSPF neighbors for all routing instances.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**area *area-id***—(Optional) Display information about the OSPF neighbors for the specified area.

**instance (all | *instance-name*)**—(Optional) Display all OSPF interfaces for all routing instances or under the named routing instance.

**interface *interface-name***—(Optional) Display information about OSPF neighbors for the specified logical interface.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**neighbor**—(Optional) Display information about the specified OSPF neighbor.

**realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)**—(OSPFv3 only) (Optional) Display information about the OSPF neighbors for the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

**Required Privilege Level** view

**Related Documentation**

- [clear \(ospf | ospf3\) neighbor on page 2086](#)

**List of Sample Output**

- [show ospf neighbor brief on page 2144](#)
- [show ospf neighbor detail on page 2144](#)
- [show ospf neighbor extensive on page 2145](#)
- [show ospf3 neighbor detail on page 2146](#)
- [show ospf neighbor area area-id on page 2146](#)
- [show ospf neighbor interface interface-name on page 2146](#)
- [show ospf3 neighbor instance all \(OSPFv3 Multiple Family Address Support Enabled\) on page 2146](#)

**Output Fields** [Table 186 on page 2142](#) lists the output fields for the **show (ospf | ospf3) neighbor** command. Output fields are listed in the approximate order in which they appear.

*Table 186: show (ospf | ospf3) neighbor Output Fields*

Field Name	Field Description	Level of Output
Address	Address of the neighbor.	All levels
Interface	Interface through which the neighbor is reachable.	All levels

Table 186: `show (ospf | ospf3) neighbor` Output Fields (continued)

Field Name	Field Description	Level of Output
<b>State</b>	<p>State of the neighbor:</p> <ul style="list-style-type: none"> <li>• <b>Attempt</b>—Valid only for neighbors attached to nonbroadcast networks. It indicates that no recent information has been received from the neighbor, but that a more concerted effort must be made to contact the neighbor.</li> <li>• <b>Down</b>—Initial state of a neighbor conversation. It indicates that no recent information has been received from the neighbor. Hello packets might continue to be sent to neighbors in the <b>Down</b> state, although at a reduced frequency.</li> <li>• <b>Exchange</b>—Routing device is describing its entire link-state database by sending database description packets to the neighbor. Each packet has a sequence number and is explicitly acknowledged.</li> <li>• <b>ExStart</b>—First step in creating an adjacency between the two neighboring routing devices. The goal of this step is to determine which routing device is the master, and to determine the initial sequence number.</li> <li>• <b>Full</b>—Neighboring routing devices are fully adjacent. These adjacencies appear in router link and network link advertisements.</li> <li>• <b>Init</b>—A hello packet has recently been sent by the neighbor. However, bidirectional communication has not yet been established with the neighbor. This state may occur, for example, because the routing device itself did not appear in the neighbor's hello packet.</li> <li>• <b>Loading</b>—Link-state request packets are sent to the neighbor to acquire more recent advertisements that have been discovered (but not yet received) in the <b>Exchange</b> state.</li> <li>• <b>2Way</b>—Communication between the two routing devices is bidirectional. This state has been ensured by the operation of the Hello Protocol. This is the most advanced state short of beginning adjacency establishment. The (backup) designated router is selected from the set of neighbors in state <b>2Way</b> or greater.</li> </ul>	All levels
<b>ID</b>	Router ID of the neighbor.	All levels
<b>Pri</b>	Priority of the neighbor to become the designated router.	All levels
<b>Dead</b>	Number of seconds until the neighbor becomes unreachable.	All levels
<b>Link state acknowledgment list</b>	Number of link-state acknowledgments received.	<b>extensive</b>
<b>Link state retransmission list</b>	<p>Total number of link-state advertisements retransmitted. For <b>extensive</b> output only, the following information is also displayed:</p> <ul style="list-style-type: none"> <li>• <b>Type</b>—Type of link advertisement: <b>ASBR</b>, <b>Sum</b>, <b>Extern</b>, <b>Network</b>, <b>NSSA</b>, <b>OpaqueArea</b>, <b>Router</b>, or <b>Summary</b>.</li> <li>• <b>LSA ID</b>—LSA identifier included in the advertisement. An asterisk preceding the identifier marks database entries that originated from the local routing device.</li> <li>• <b>Adv rtr</b>—Address of the routing device that sent the advertisement.</li> <li>• <b>Seq</b>—Link sequence number of the advertisement.</li> </ul>	<b>detail extensive</b>

Table 186: `show (ospf | ospf3) neighbor` Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Neighbor-address</b>	(OSPFv3 only) If the neighbor uses virtual links, the <b>Neighbor-address</b> is the site-local, local, or global address. If the neighbor uses a physical interface, the <b>Neighbor-address</b> is an IPv6 link-local address.	detail extensive
<b>area</b>	Area that the neighbor is in.	detail extensive
<b>OSPF3-Intf-Index</b>	(OSPFv3 only) Displays the OSPFv3 interface index.	detail extensive
<b>opt</b>	Option bits received in the hello packets from the neighbor.	detail extensive
<b>DR or DR-ID</b>	Address of the designated router.	detail extensive
<b>BDR or BDR-ID</b>	Address of the backup designated router.	detail extensive
<b>Up</b>	Length of time since the neighbor came up.	detail extensive
<b>adjacent</b>	Length of time since the adjacency with the neighbor was established.	detail extensive
<b>SPRING Adjacency Labels</b>	Segment routing in networking adjacency labels.  <i>NOTE:</i> Displayed only when segment routing is enabled	detail extensive
<b>Label</b>	Segment routing label.	detail extensive
<b>Flags</b>	Segment routing flags. Flags VL indicate <i>value</i> and <i>local</i> .	detail extensive

## Sample Output

### show ospf neighbor brief

```

user@host> show ospf neighbor brief
  Address      Intf      State      ID          Pri  Dead
192.168.254.225 fxp3.0    2Way       10.250.240.32 128  36
192.168.254.230 fxp3.0    Full       10.250.240.8  128  38
192.168.254.229 fxp3.0    Full       10.250.240.35 128  33
10.1.1.129      fxp2.0    Full       10.250.240.12 128  37
10.1.1.131      fxp2.0    Full       10.250.240.11 128  38
10.1.2.1        fxp1.0    Full       10.250.240.9  128  32
10.1.2.81       fxp0.0    Full       10.250.240.10 128  33

```

### show ospf neighbor detail

```

user@host> show ospf neighbor detail
Address      Interface      State      ID          Pri  Dead
10.0.6.60    1t-1/2/0.12   Full       1.1.1.60    128  38
Area 0.0.0.0, opt 0x52, DR 0.0.0.0, BDR 0.0.0.0
Up 23:53:47, adjacent 23:53:34
SPRING Adjacency Labels:

  Label      Flags

```

```

299968      VL
10.0.10.70   ge-1/2/0.14      Full      1.1.1.70      128      37
Area 0.0.0.0, opt 0x52, DR 0.0.0.0, BDR 0.0.0.0
Up 23:53:47, adjacent 23:53:47
SPRING Adjacency Labels:

Label      Flags

299952      VL

```

### show ospf neighbor extensive

```

user@host> show ospf neighbor extensive
Address      Interface      State      ID      Pri  Dead
10.5.1.2     ge-1/2/0.1     Full      10.5.1.2  128  33
area 0.0.0.1, opt 0x42, DR 10.5.1.2, BDR 10.5.1.1
Up 06:09:42, adjacent 05:17:50
Link state retransmission list:

Type      LSA ID      Adv rtr      Seq
Summary   10.8.56.0   172.25.27.82 0x8000004d
Router    10.5.1.94   10.5.1.94     0x8000005c
Network   10.5.24.2   10.5.1.94     0x80000036
Summary   10.8.57.0   172.25.27.82 0x80000024
Extern    1.10.90.0   10.8.1.2      0x80000041
Extern    1.4.109.0   10.6.1.2      0x80000041
Router    10.5.1.190  10.5.1.190    0x8000005f
Network   10.5.48.2   10.5.1.190    0x8000003d
Summary   10.8.58.0   172.25.27.82 0x8000004d
Extern    1.10.91.0   10.8.1.2      0x80000041
Extern    1.4.110.0   10.6.1.2      0x80000041
Router    10.5.1.18   10.5.1.18     0x8000005f
Network   10.5.5.2    10.5.1.18     0x80000033
Summary   10.8.59.0   172.25.27.82 0x8000003a
Summary   10.8.62.0   172.25.27.82 0x80000025

10.5.10.2    ge-1/2/0.10    ExStart   10.5.1.38  128  38
area 0.0.0.1, opt 0x42, DR 10.5.10.2, BDR 10.5.10.1
Up 06:09:42
  master, seq 0xac1530f8, rexmit DBD in 2 sec
  rexmit LSREQ in 0 sec
10.5.11.2    ge-1/2/0.11     Full      10.5.1.42  128  33
area 0.0.0.1, opt 0x42, DR 10.5.11.2, BDR 10.5.11.1
Up 06:09:42, adjacent 05:27:00

```

## Link state retransmission list:

Type	LSA ID	Adv rtr	Seq
Summary	10.8.58.0	172.25.27.82	0x8000004d
Extern	1.10.91.0	10.8.1.2	0x80000041
Extern	1.1.247.0	10.5.1.2	0x8000003f
Extern	1.4.110.0	10.6.1.2	0x80000041
Router	10.5.1.18	10.5.1.18	0x8000005f
Network	10.5.5.2	10.5.1.18	0x80000033
Summary	10.8.59.0	172.25.27.82	0x8000003a

## show ospf3 neighbor detail

```

user@host> show ospf3 neighbor detail
ID          Interface          State    Pri   Dead
10.255.71.13 fe-0/0/2.0          Full     128   30
Neighbor-address fe80::290:69ff:fe9b:e002
area 0.0.0.0, opt 0x13, OSPF3-Intf-Index 2
DR-ID 10.255.71.13, BDR-ID 10.255.71.12
Up 02:51:43, adjacent 02:51:43

```

## show ospf neighbor area area-id

```

user@host >show ospf neighbor area 1.1.1.1
Address      Interface          State    ID          Pri   Dead
192.168.37.47 so-0/0/0.0          Full     10.255.245.4 128   33
Area 1.1.1.1
192.168.37.55 so-1/0/0.0          Full     10.255.245.5 128   37
Area 1.1.1.1

```

## show ospf neighbor interface interface-name

```

user@host >show ospf neighbor interface so-0/0/0.0
Address      Interface          State    ID          Pri   Dead
192.168.37.47 so-0/0/0.0          Full     10.255.245.4 128   37
Area 0.0.0.0
192.168.37.47 so-0/0/0.0          Full     10.255.245.4 128   33
Area 1.1.1.1
192.168.37.47 so-0/0/0.0          Full     10.255.245.4 128   32
Area 2.2.2.2

```

## show ospf3 neighbor instance all (OSPFv3 Multiple Family Address Support Enabled)

```

user @host > show ospf3 neighbor instance all
Instance: ina
  Realm: ipv6-unicast
  ID          Interface          State    Pri   Dead
  100.1.1.1    fe-0/0/2.0          Full     128   37
  Neighbor-address fe80::217:cb00:c87c:8c03
Instance: inb
  Realm: ipv4-unicast
  ID          Interface          State    Pri   Dead
  100.1.2.1    fe-0/0/2.1          Full     128   33

```

Neighbor-address fe80::217:cb00:c97c:8c03

## show (ospf | ospf3) overview

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2148</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 2148</a>
<b>Syntax</b>	<pre>show (ospf   ospf3) overview &lt;brief   extensive&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;realm (ipv4-multicast   ipv4-unicast   ipv6-multicast)&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>show (ospf   ospf3) overview &lt;brief   extensive&gt; &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. <b>realm</b> option introduced in Junos OS Release 9.2. Database protection introduced in Junos 10.2. Command introduced in Junos OS Release 11.3 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display Open Shortest Path First (OSPF) overview information.
<b>Options</b>	<p><b>none</b>—Display standard information about all OSPF neighbors for all routing instances.</p> <p><b>brief   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display all OSPF interfaces under the named routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>realm (ipv4-multicast   ipv4-unicast   ipv6-multicast)</b>—(Optional) (OSPFv3 only) Display information about the specified OSPFv3 realm, or address family. Use the <b>realm</b> option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show ospf overview on page 2150</a> <a href="#">show ospf overview (With Database Protection) on page 2151</a> <a href="#">show ospf3 overview (With Database Protection) on page 2152</a> <a href="#">show ospf overview extensive on page 2152</a>

**Output Fields** Table 187 on page 2149 lists the output fields for the **show ospf overview** command. Output fields are listed in the approximate order in which they appear.

*Table 187: show ospf overview Output Fields*

Field name	Field Description	Level of Output
<b>Instance</b>	OSPF routing instance.	All levels
<b>Router ID</b>	Router ID of the routing device.	All levels
<b>Route table index</b>	Route table index.	All levels
<b>Configured overload</b>	Overload capability is enabled. If the overload timer is also configured, display the time that remains before it is set to expire. This field is not displayed after the timer expires.	All levels
<b>Topology</b>	Topology identifier.	All levels
<b>Prefix export count</b>	Number of prefixes exported into OSPF.	All levels
<b>Full SPF runs</b>	Number of complete Shortest Path First calculations.	All levels
<b>SPF delay</b>	Delay before performing consecutive Shortest Path First calculations.	All levels
<b>SPF holddown</b>	Delay before performing additional Shortest Path First (SPF) calculations after the maximum number of consecutive SPF calculations is reached.	All levels
<b>SPF rapid runs</b>	Maximum number of Shortest Path First calculations that can be performed in succession before the hold-down timer begins.	All levels
<b>LSA refresh time</b>	Refresh period for link-state advertisement (in minutes).	All levels
<b>SPRING</b>	Source protocol routing in networking: <b>enable</b> or <b>disable</b> .	All levels
<b>Node Segments</b>	Nodes of source protocol routing in networking: <b>enable</b> or <b>disable</b> .	All levels
<b>Ipv4 Index</b>	Ipv4 Index.	All levels
<b>Index Range</b>	Ipv4 Index range.	All levels
<b>Node Segment Blocks Allocated</b>	Details about node segment blocks.	All levels
<b>Database protection state</b>	Current state of database protection.	All levels
<b>Warning threshold</b>	Threshold at which a warning message is logged (percentage of maximum LSA count).	All levels
<b>Non self-generated LSAs</b>	Number of LSAs whose router ID is not equal to the local router ID: <b>Current</b> , <b>Warning</b> (threshold), and <b>Allowed</b> .	All levels

Table 187: show ospf overview Output Fields (continued)

Field name	Field Description	Level of Output
Ignore time	How long the database has been in the ignore state.	All levels
Reset time	How long the database must stay out of the ignore or isolated state before it returns to normal operations.	All levels
Ignore count	Number of times the database has been in the ignore state: <b>Current</b> and <b>Allowed</b> .	All levels
Restart	Graceful restart capability: <b>enabled</b> or <b>disabled</b> .	All levels
Restart duration	Time period for complete reacquisition of OSPF neighbors.	All levels
Restart grace period	Time period for which the neighbors should consider the restarting routing device as part of the topology.	All levels
Graceful restart helper mode	(OSPFv2) Standard graceful restart helper capability (based on RFC 3623): <b>enabled</b> or <b>disabled</b> .	All levels
Restart-signaling helper mode	(OSPFv2) Restart signaling-based graceful restart helper capability (based on RFC 4811, RFC 4812, and RFC 4813): <b>enabled</b> or <b>disabled</b> .	All levels
Helper mode	(OSPFv3) Graceful restart helper capability: <b>enabled</b> or <b>disabled</b> .	All levels
Trace options	OSPF-specific trace options.	<b>extensive</b>
Trace file	Name of the file to receive the output of the tracing operation.	<b>extensive</b>
Area	Area number. Area 0.0.0.0 is the backbone area.	All levels
Stub type	Stub type of area: <b>Normal Stub</b> , <b>Not Stub</b> , or <b>Not so Stubby Stub</b> .	All levels
Authentication Type	Type of authentication: <b>None</b> , <b>Password</b> , or <b>MD5</b> .  <b>NOTE:</b> The <b>Authentication Type</b> field refers to the authentication configured at the <code>[edit protocols ospf area area-id]</code> level. Any authentication configured for an interface in this area will not affect the value of this field.	All levels
Area border routers	Number of area border routers.	All levels
Neighbors	Number of autonomous system boundary routers.	All levels

## Sample Output

### show ospf overview

```

user@host> show ospf overview
Instance: master
  Router ID: 10.255.245.6
  Route table index: 0
  Configured overload, expires in 118 seconds

```

```

LSA refresh time: 50 minutes
SPRING: Enabled
Node Segments: Enabled
Ipv4 Index : 10, Index Range: 2048
Node Segment Blocks Allocated:
Start Index : 0, Size : 256, Label-Range: [ 802048, 802303 ]
Start Index : 256, Size : 256, Label-Range: [ 802304, 802559 ]
Start Index : 512, Size : 256, Label-Range: [ 802560, 802815 ]
Start Index : 768, Size : 256, Label-Range: [ 802816, 803071 ]
Start Index : 1024, Size : 256, Label-Range: [ 803072, 803327 ]
Start Index : 1280, Size : 256, Label-Range: [ 803328, 803583 ]
Start Index : 1536, Size : 256, Label-Range: [ 803584, 803839 ]
Start Index : 1792, Size : 256, Label-Range: [ 803840, 804095 ]
Restart: Enabled
  Restart duration: 20 sec
  Restart grace period: 40 sec
  Helper mode: enabled
Area: 0.0.0.0
  Stub type: Not Stub
  Authentication Type: None
  Area border routers: 0, AS boundary routers: 0
  Neighbors
    Up (in full state): 0
Topology: default (ID 0)
  Prefix export count: 0
  Full SPF runs: 1
  SPF delay: 0.200000 sec, SPF holddown: 5 sec, SPF rapid runs: 3

```

#### show ospf overview (With Database Protection)

```

user@host> show ospf overview
Instance: master
Router ID: 10.255.112.218
Route table index: 0
LSA refresh time: 50 minutes
Traffic engineering
Restart: Enabled
  Restart duration: 180 sec
  Restart grace period: 210 sec
  Graceful restart helper mode: Enabled
  Restart-signaling helper mode: Enabled
Database protection state: Normal
  Warning threshold: 70 percent
  Non self-generated LSAs: Current 582, Warning 700, Allowed 1000
  Ignore time: 30, Reset time: 60
  Ignore count: Current 0, Allowed 1
Area: 0.0.0.0
  Stub type: Not Stub
  Authentication Type: None
  Area border routers: 0, AS boundary routers: 0
  Neighbors
    Up (in full state): 160
Topology: default (ID 0)
  Prefix export count: 0
  Full SPF runs: 70
  SPF delay: 0.200000 sec, SPF holddown: 5 sec, SPF rapid runs: 3
  Backup SPF: Not Needed

```

### show ospf3 overview (With Database Protection)

```
user@host> show ospf3 overview
Instance: master
Router ID: 10.255.112.128
Route table index: 0
LSA refresh time: 50 minutes
Database protection state: Normal
  Warning threshold: 80 percent
  Non self-generated LSAs: Current 3, Warning 8, Allowed 10
  Ignore time: 30, Reset time: 60
  Ignore count: Current 0, Allowed 2
Area: 0.0.0.0
  Stub type: Not Stub
  Area border routers: 0, AS boundary routers: 0
  Neighbors
    Up (in full state): 1
Topology: default (ID 0)
Prefix export count: 0
Full SPF runs: 7
SPF delay: 0.200000 sec, SPF holddown: 5 sec, SPF rapid runs: 3
Backup SPF: Not Needed
```

### show ospf overview extensive

```
user@host> show ospf overview extensive
Instance: master
Router ID: 1.1.1.103
Route table index: 0
Full SPF runs: 13, SPF delay: 0.200000 sec
LSA refresh time: 50 minutes
Restart: Disabled
Trace options: lsa
Trace file: /var/log/ospf size 131072 files 10
Area: 0.0.0.0
  Stub type: Not Stub
  Authentication Type: None
  Area border routers: 0, AS boundary routers: 0
  Neighbors
    Up (in full state): 1
```

## show (ospf | ospf3) route

**List of Syntax**    [Syntax on page 2153](#)  
                          [Syntax \(EX Series Switch and QFX Series\) on page 2153](#)

**Syntax**    show (ospf | ospf3) route  
                  <brief | detail | extensive>  
                  <abr | asbr | extern | inter | intra>  
                  <destination>  
                  <instance (default | ipv4-multicast | *instance-name*)>  
                  <logical-system (default | ipv4-multicast | *logical-system-name*)>  
                  <network>  
                  <no-backup-coverage>  
                  <realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)>  
                  <router>  
                  <topology (default | ipv4-multicast | *topology-name*)>  
                  <transit>

**Syntax (EX Series Switch and QFX Series)**    show (ospf | ospf3) route  
                  <brief | detail | extensive>  
                  <abr | asbr | extern | inter | intra>  
                  <destination>  
                  <instance *instance-name*>  
                  <network>  
                  <no-backup-coverage>  
                  <router>  
                  <topology (default | ipv4-multicast | *topology-name*)>  
                  <transit>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Command introduced in Junos OS Release 9.0 for EX Series switches.  
                                  **topology** option introduced in Junos OS Release 9.0.  
                                  **realm** option introduced in Junos OS Release 9.2.  
                                  Command introduced in Junos OS Release 11.3 for the QFX Series.  
                                  Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Display the entries in the Open Shortest Path First (OSPF) routing table.

**Options**    **none**—Display standard information about all entries in the OSPF routing table for all routing instances and all topologies.

**destination**—Display routes to the specified IP address (with optional destination prefix length).

**brief | detail | extensive**—(Optional) Display the specified level of output.

**abr**—(Optional) Display routes to area border routers.

**asbr**—(Optional) Display routes to autonomous system border routers.

**extern**—(Optional) Display external routes.

**inter**—(Optional) Display interarea routes.

**intra**—(Optional) Display intra-area routes.

**instance (default | ipv4-multicast | *instance-name*)**—(Optional) Display entries for the default routing instance, the IPv4 multicast routing instance, or for the specified routing instance.

**logical-system (default | ipv4-multicast | *logical-system-name*)**—(Optional) Perform this operation on the default logical system, the IPv4 multicast logical system, or on a particular logical system.

**network**—(Optional) Display routes to networks.

**no-backup-coverage**—(Optional) Display routes with no backup coverage.

**realm (ipv4-multicast | ipv4-unicast | ipv6-multicast)**—(OSPFv3 only) (Optional) Display entries in the routing table for the specified OSPFv3 realm, or address family. Use the **realm** option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.

**router**—(Optional) Display routes to all routers.

**topology (default | ipv4-multicast | *topology-name*)**—(OSPFv2 only) (Optional) Display routes for the default OSPF topology, IPv4 multicast topology, or for a particular topology.

**transit**—(Optional) (OSPFv3 only) Display OSPFv3 routes to pseudonodes.

**Required Privilege Level**

view

**List of Sample Output**

[show ospf route on page 2156](#)  
[show ospf route detail on page 2157](#)  
[show ospf route extensive on page 2157](#)  
[show ospf3 route on page 2157](#)  
[show ospf3 route detail on page 2158](#)  
[show ospf route topology voice on page 2158](#)

**Output Fields** [Table 188 on page 2154](#) list the output fields for the **show (ospf | ospf3) route** command. Output fields are listed in the approximate order in which they appear.

*Table 188: show (ospf | ospf3) route Output Fields*

Field Name	Field Description	Output Level
Topology	Name of the topology.	All levels
Prefix	Destination of the route.	All levels

Table 188: *show (ospf | ospf3) route* Output Fields (continued)

Field Name	Field Description	Output Level
<b>Path type</b>	How the route was learned: <ul style="list-style-type: none"> <li>• <b>Inter</b>—Interarea route</li> <li>• <b>Ext1</b>—External type 1 route</li> <li>• <b>Ext2</b>—External type 2 route</li> <li>• <b>Intra</b>—Intra-area route</li> </ul>	All levels
<b>Route type</b>	The type of routing device from which the route was learned: <ul style="list-style-type: none"> <li>• <b>AS BR</b>—Route to AS border router.</li> <li>• <b>Area BR</b>—Route to area border router.</li> <li>• <b>Area/AS BR</b>—Route to router that is both an <b>Area BR</b> and <b>AS BR</b>.</li> <li>• <b>Network</b>—Network router.</li> <li>• <b>Router</b>—Route to a router that is neither an <b>Area BR</b> nor an <b>AS BR</b>.</li> <li>• <b>Transit</b>—(OSPFv3 only) Route to a pseudonode representing a transit network, LAN, or nonbroadcast multiaccess (NBMA) link.</li> <li>• <b>Discard</b>—Route to a summary discard.</li> </ul>	All levels
<b>NH Type</b>	Next-hop type: <b>LSP</b> or <b>IP</b> .	All levels
<b>Metric</b>	Route's metric value.	All levels
<b>NH-interface</b>	(OSPFv3 only) Interface through which the route's next hop is reachable.	All levels
<b>NH-addr</b>	(OSPFv3 only) IPv6 address of the next hop.	All levels
<b>NextHop Interface</b>	(OSPFv2 only) Interface through which the route's next hop is reachable.	All levels
<b>Nexthop addr/label</b>	(OSPFv2 only) If the <b>NH Type</b> is <b>IP</b> , then it is the address of the next hop. If the <b>NH Type</b> is <b>LSP</b> , then it is the name of the label-switched path.	All levels
<b>Area</b>	Area ID of the route.	detail
<b>Origin</b>	Router from which the route was learned.	detail
<b>Type 7</b>	Route was learned through a not-so-stubby area (NSSA) link-state advertisement (LSA).	detail
<b>P-bit</b>	Route was learned through NSSA LSA and the propagate bit was set.	detail
<b>Fwd NZ</b>	Forwarding address is nonzero. <b>Fwd NZ</b> is only displayed if the route is learned through an NSSA LSA.	detail

Table 188: *show (ospf | ospf3) route Output Fields (continued)*

Field Name	Field Description	Output Level
<b>optional-capability</b>	Optional capabilities propagated in the router LSA. This field is in the output for intra-area router routes only (when <b>Route Type</b> is <b>Area BR</b> , <b>AS BR</b> , <b>Area/AS BR</b> , or <b>Router</b> ), not for interarea router routes or network routes. Three bits in this field are defined as follows: <ul style="list-style-type: none"> <li>• <b>0x4 (V)</b>—Routing device is at the end of a virtual active link.</li> <li>• <b>0x2 (E)</b>—Routing device is an autonomous system boundary router.</li> <li>• <b>0x1 (B)</b>—Routing device is an area border router.</li> </ul>	<b>detail</b>
<b>priority</b>	The priority assigned to the prefix: <ul style="list-style-type: none"> <li>• <b>high</b></li> <li>• <b>medium</b></li> <li>• <b>low</b></li> </ul> <p><b>NOTE:</b> The <b>priority</b> field applies only to routes of type <b>Network</b>.</p>	<b>detail</b>
<b>BGP-ORR Generation-ID</b>	Display the BGP-ORR generation identifier of the main OSPF route. This field is shown only for non-zero values.	<b>extensive</b>

## Sample Output

### show ospf route

```

user@host> show ospf route
Topology default Route Table:

Prefix          Path  Route  NH      Metric NextHop      Nexthop
                Type Type   Type                    Interface Address/LSP
1.1.1.60/32      Intra Network Spring 6 1t-1/2/0.14 10.0.10.70
                  Bkup SPRING 1t-1/2/0.12 10.0.6.60
1.1.1.70/32      Intra Network IP      1 1t-1/2/0.14 10.0.10.70
                  Bkup LSP    1t-1/2/0.12 (null)
1.1.1.70/32      Intra Network Spring 1 1t-1/2/0.14 10.0.10.70
                  Bkup SPRING 1t-1/2/0.12 10.0.6.60
1.1.1.80/32      Intra Network IP      6 1t-1/2/0.14 10.0.10.70
                  Bkup IP     1t-1/2/0.12 10.0.6.60
1.1.1.80/32      Intra Network Spring 6 1t-1/2/0.14 10.0.10.70

802068 (S=0)     Intra Network Mpls   0 1t-1/2/0.14 10.0.10.70
                  Bkup MPLS   1t-1/2/0.12 10.0.6.60
802078 (S=0)     Intra Network Mpls   0 1t-1/2/0.14 10.0.10.70
                  Bkup MPLS   1t-1/2/0.12 10.0.6.60
802088 (S=0)     Intra Network Mpls   0 1t-1/2/0.14 10.0.10.70
                  Bkup MPLS   1t-1/2/0.12 10.0.6.60
802098 (S=0)     Intra Network Mpls   0 1t-1/2/0.14 10.0.10.70
                  Bkup MPLS   1t-1/2/0.12 10.0.6.60
802108 (S=0)     Intra Network Mpls   0 1t-1/2/0.14 10.0.10.70
                  Bkup MPLS   1t-1/2/0.12 10.0.6.60
802118 (S=0)     Intra Network Mpls   0 1t-1/2/0.14 10.0.10.70
                  Bkup MPLS   1t-1/2/0.12 10.0.6.60
802118           Intra Network Mpls   0 1t-1/2/0.14 10.0.10.70
                  Bkup MPLS   1t-1/2/0.12 10.0.6.60

```

**show ospf route detail**

```
user@host> show ospf route detail
```

```
Topology default Route Table:
```

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop addr/label
10.255.14.174	Inter	AS BR	IP	210	t1-3/0/1.0	
area 0.0.0.2, origin 10.255.14.185						
10.255.14.178	Intra	Router	IP	200	t3-3/1/3.0	
area 0.0.0.2, origin 10.255.14.178, optional-capability 0x0						
10.210.1.0/30	Intra	Network	IP	10	t3-3/1/2.0	
area 0.0.0.2, origin 10.255.14.172, priority medium						
198.51.100/24	Inter	Network	IP	210	t1-3/0/1.0	
area 0.0.0.2, origin 10.255.14.185, priority low						
192.0.2.0/24	Ext2	Network	IP	0	t1-3/0/1.0	
area 0.0.0.0, origin 10.255.14.174, priority high						
203.3.113.0/24	Inter	Network	IP	220	t1-3/0/1.0	
area 0.0.0.2, origin 10.255.14.185, priority high						

**show ospf route extensive**

```
user@host> show ospf route extensive
```

```
Topology default Route Table:
```

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop Address/LSP
1.1.1.1	Intra	Router	IP	100	ge-0/0/2.0	10.1.1.1
area 0.0.0.0, origin 1.1.1.1, optional-capability 0x0						
1.1.1.1/32	Intra	Network	IP	100	ge-0/0/2.0	10.1.1.1
area 0.0.0.0, origin 1.1.1.1, priority medium						

BGP-ORR generation-id: 1

**show ospf3 route**

```
user@host> show ospf3 route
```

Prefix	Path Type	Route Type	NH Type	Metric	NextHop Interface	Nexthop addr/label
10.255.71.13	Intra	Router	IP	1		
NH-interface fe-0/0/2.0, NH-addr fe80::290:69ff:fe9b:e002						
10.255.71.13/0.0.0.2						
10.255.245.1	Intra	Router	IP	40	fxp1.1	192.168.36.17
area 0.0.0.0, origin 10.255.245.1 optional-capability 0x0,						
10.255.245.3	Intra	AS BR	IP	1	fxp2.3	192.168.36.34
area 0.0.0.0, origin 10.255.245.3 optional-capability 0x0,						
10.255.245.1/32	Intra	Network	IP	40	fxp1.1	192.168.36.17
area 0.0.0.0, origin 10.255.245.1, priority high						
10.255.245.2/32	Intra	Network	IP	0	lo0.0	
area 0.0.0.0, origin 10.255.245.2, priority medium						
10.255.245.3/32	Intra	Network	IP	1	fxp2.3	192.168.36.34
area 0.0.0.0, origin 10245.3, priority low						
	Intra	Transit	IP	1		
NH-interface fe-0/0/2.0						
192::168:222:84/126	Intra	Network	IP	1		
NH-interface fe-0/0/2.0						

```

abcd::71:12/128      Intra Network   IP      0
NH-interface lo0.0
abcd::71:13/128      Intra Network   LSP     1
NH-interface fe-0/0/2.0, NH-addr lsp-cd

```

### show ospf3 route detail

```

user@host> show ospf3 route detail
Prefix                                Path   Route   NH   Metric
                                type  type   type
10.255.14.174                        Intra Area/AS BR IP    110
NH-interface so-1/2/2.0
Area 0.0.0.0, Origin 10.255.14.174, Optional-capability 0x3
10.255.14.178                        Intra Router      IP    200
NH-interface t3-3/1/3.0
Area 0.0.0.0, Origin 10.255.14.178, Optional-capability 0x0
10.255.14.185;0.0.0.2                Intra Transit     IP    200
NH-interface t1-3/0/1.0
NH-interface so-1/2/2.0
Area 0.0.0.0, Origin 10.255.14.185
1000:1:1::1/128                      Inter Network     IP    110
NH-interface so-1/2/2.0
Area 0.0.0.0, Origin 10.255.14.174, Priority low
1001:2:1::/48                        Ext1  Network      IP    110
NH-interface so-1/2/2.0
Area 0.0.0.0, Origin 10.255.14.174, Fwd NZ, Priority medium
1002:1:7::/48                        Ext2  Network      IP     0
NH-interface so-1/2/2.0
Area 0.0.0.0, Origin 10.255.14.174, Fwd NZ, Priority low
1002:3:4::/48                        Ext2  Network      IP     0
NH-interface so-1/2/2.0
Area 0.0.0.0, Origin 10.255.14.174, Fwd NZ, Priority high
abcd::10:255:14:172/128              Intra Network     IP     0
NH-interface lo0.0
Area 0.0.0.0, Origin 10.255.14.172, Priority low

```

### show ospf route topology voice

```

user@host show ospf route topology voice
Topology voice Route Table:
Prefix                                Path   Route   NH   Metric   NextHop   Nexthop
                                Type   Type    Type
10.255.8.2                          Intra Router   IP      1  so-0/2/0.0
10.255.8.3                          Intra Router   IP      2  so-0/2/0.0
10.255.8.1/32                       Intra Network  IP      0  lo0.0
10.255.8.2/32                       Intra Network  IP      1  so-0/2/0.0
10.255.8.3/32                       Intra Network  IP      2  so-0/2/0.0
192.168.8.0/29                      Intra Network  IP      2  so-0/2/0.0
192.168.8.44/30                     Intra Network  IP      2  so-0/2/0.0
192.168.8.46/32                     Intra Network  IP      1  so-0/2/0.0
192.168.8.48/30                     Intra Network  IP      1  so-0/2/1.0
192.168.8.52/30                     Intra Network  IP      2  so-0/2/0.0
192.168.9.44/30                     Intra Network  IP      1  so-0/2/0.0
192.168.9.45/32                     Intra Network  IP      2  so-0/2/0.0

```

## show (ospf | ospf3) statistics

<b>List of Syntax</b>	<a href="#">Syntax on page 2159</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 2159</a>
<b>Syntax</b>	<pre>show (ospf   ospf3) statistics &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;realm (ipv4-multicast   ipv4-unicast   ipv6-multicast)&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>show (ospf   ospf3) statistics &lt;instance <i>instance-name</i>&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>realm</b> option introduced in Junos OS Release 9.2.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display OSPF statistics.
<b>Options</b>	<p><b>none</b>—Display OSPF statistics for all routing instances.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display all statistics for the specified routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>realm (ipv4-multicast   ipv4-unicast   ipv6-multicast)</b>—(Optional) (OSPFv3 only) Display all statistics for the specified OSPFv3 realm, or address family. Use the <b>realm</b> option to specify an address family for OSPFv3 other than IPv6 unicast, which is the default.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear (ospf   ospf3) statistics on page 2089</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show ospf statistics on page 2161</a> <a href="#">show ospf statistics logical-system all on page 2161</a> <a href="#">show ospf3 statistics on page 2162</a>
<b>Output Fields</b>	<p><a href="#">Table 189 on page 2160</a> lists the output fields for the <b>show (ospf   ospf3) statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 189: show (ospf | ospf3) statistics Output Fields*

Field Name	Field Description
<b>Packet type</b>	Type of OSPF packet.
<b>Total Sent/Total Received</b>	Total number of packets sent and received.
<b>Last 5 seconds Sent/Last 5 seconds Received</b>	Total number of packets sent and received in the last 5 seconds.
<b>DBDs retransmitted</b>	Total number of database description packets retransmitted, and number retransmitted in the last 5 seconds.
<b>LSAs flooded</b>	Total number of link-state advertisements flooded, and number flooded in the last 5 seconds.
<b>LSAs flooded high-prio</b>	<p>Total number of high priority link-state advertisements flooded, and number flooded in the last 5 seconds.</p> <p>A link-state advertisement is deemed a high priority if it has changed since it was last sent.</p>
<b>LSAs retransmitted</b>	Total number of link-state advertisements retransmitted, and number retransmitted in the last 5 seconds.
<b>LSAs transmitted to nbr</b>	Total number of link-state advertisements transmitted to a neighbor, and number transmitted in the last 5 seconds.
<b>LSAs requested</b>	Total number of link-state advertisements requested by neighboring devices, and number requested in the last 5 seconds.
<b>LSAs acknowledged</b>	Total number of link-state advertisements acknowledged, and number acknowledged in the last 5 seconds.
<b>Flood queue depth</b>	Total number of entries in the extended queue.
<b>Total rexmit entries</b>	Total number of retransmission entries waiting to be sent from the OSPF routing instance.
<b>db summaries</b>	Total number of database description summaries waiting to be sent from the OSPF routing instance.
<b>lsreq entries</b>	Total number of link-state request entries waiting to be sent from the OSPF routing instance.

Table 189: `show (ospf | ospf3) statistics` Output Fields (continued)

Field Name	Field Description
<b>Receive errors</b>	<p>Number and type of receive errors. Some sample receive errors include:</p> <ul style="list-style-type: none"> <li>• mtu mismatches</li> <li>• no interface found</li> <li>• no virtual link found</li> <li>• nssa mismatches</li> <li>• stub area mismatches</li> <li>• subnet mismatches</li> </ul> <p>If there are no receive errors, the output displays <b>none</b>.</p>

## Sample Output

### show ospf statistics

```

user@host> show ospf statistics
Packet type          Total
                   Sent      Received
Hello                31         14
  DbD                 9         10
  LSReq               2          2
LSUpdate             8         16
  LSAck              9          9
                   Last 5 seconds
                   Sent      Received
Hello                2          2
  DbD                 0          0
  LSReq               0          0
LSUpdate             0          0
  LSAck              0          0

DBDs retransmitted   :          3, last 5 seconds :          0
LSAs flooded         :          12, last 5 seconds :          0
LSAs flooded high-prio :          0, last 5 seconds :          0
LSAs retransmitted   :          0, last 5 seconds :          0
LSAs transmitted to nbr:          3, last 5 seconds :          0
LSAs requested       :          5, last 5 seconds :          0
LSAs acknowledged    :          19, last 5 seconds :          0

Flood queue depth    :          0
Total rexmit entries :          0
db summaries         :          0
lsreq entries        :          0

Receive errors:
  862 no interface found
  115923 no virtual link found

```

### show ospf statistics logical-system all

```

user@host> show ospf statistics logical-system all
logical-system: C
OSPF instance is not running
-----

logical-system: B

Packet type          Total
                   Sent      Received
                   Last 5 seconds
                   Sent      Received

```

```

Hello          313740      313653      1          0
  DbD           3          2          0          0
  LSReq         1          1          0          0
LSUpdate       2752      1825          0          0
LSAck          1821      2747          0          0

DBDs retransmitted :          0, last 5 seconds :          0
LSAs flooded       :          2741, last 5 seconds :          0
LSAs flooded high-prio :          10, last 5 seconds :          0
LSAs retransmitted :          0, last 5 seconds :          0
LSAs transmitted to nbr:          2, last 5 seconds :          0
LSAs requested     :          1, last 5 seconds :          0
LSAs acknowledged :          1831, last 5 seconds :          0

Flood queue depth :          0
Total rexmit entries :          0
db summaries      :          0
lsreq entries     :          0

Receive errors:
  None
-----

logical-system: A

Packet type      Total          Last 5 seconds
                  Sent      Received      Sent      Received
Hello           313698      313695          0          0
  DbD             2          3          0          0
  LSReq           1          1          0          0
LSUpdate        1825      2752          0          0
LSAck           2747      1821          0          0

DBDs retransmitted :          0, last 5 seconds :          0
LSAs flooded       :          1825, last 5 seconds :          0
LSAs flooded high-prio :          10, last 5 seconds :          0
LSAs retransmitted :          0, last 5 seconds :          0
LSAs transmitted to nbr:          1, last 5 seconds :          0
LSAs requested     :          2, last 5 seconds :          0
LSAs acknowledged :          2748, last 5 seconds :          0

Flood queue depth :          0
Total rexmit entries :          0
db summaries      :          0
lsreq entries     :          0

Receive errors:
  None
-----

```

**show ospf3 statistics**

```

user@host> show ospf3 statistics
Packet type      Total          Last 5 seconds
                  Sent      Received      Sent      Received
Hello             0          0          0          0
  DbD             0          0          0          0
  LSReq           0          0          0          0
LSUpdate          0          0          0          0
LSAck             0          0          0          0

```

DBDs retransmitted	:	0, last 5 seconds :	0
LSAs flooded	:	0, last 5 seconds :	0
LSAs flooded high-prio	:	0, last 5 seconds :	0
LSAs retransmitted	:	0, last 5 seconds :	0
LSAs transmitted to nbr:	:	0, last 5 seconds :	0
LSAs requested	:	0, last 5 seconds :	0
LSAs acknowledged	:	0, last 5 seconds :	0
Flood queue depth	:	0	
Total rexmit entries	:	0	
db summaries	:	0	
lsreq entries	:	0	
Receive errors:			
None			



## CHAPTER 25

# Protocol-Independent Routing Operational Commands

- `show as-path`
- `show as-path domain`
- `show as-path summary`
- `show route`
- `show route active-path`
- `show route advertising-protocol`
- `show route all`
- `show route aspath-regex`
- `show route best`
- `show route brief`
- `show route ccc`
- `show route community`
- `show route community-name`
- `show route damping`
- `show route detail`
- `show route exact`
- `show route export`
- `show route export vrf-target`
- `show route extensive`
- `show route flow validation`
- `show route forwarding-table`
- `show route forwarding-table interface-name`
- `show route hidden`
- `show route inactive-path`
- `show route inactive-prefix`
- `show route instance`

- `show route label`
- `show route label-switched-path`
- `show route localization`
- `show route martians`
- `show route match-prefix`
- `show route next-hop`
- `show route no-community`
- `show route output`
- `show route protocol`
- `show route range`
- `show route receive-protocol`
- `show route resolution`
- `show route snooping`
- `show route source-gateway`
- `show route summary`
- `show route table`
- `show route terse`

## show as-path

<b>List of Syntax</b>	<a href="#">Syntax on page 2167</a> <a href="#">Syntax (EX Series Switches) on page 2167</a>
<b>Syntax</b>	<pre>show as-path &lt;brief   detail&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show as-path &lt;brief   detail&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<p>Display the distribution of autonomous system (AS) paths that the local routing device is using (usually through the routing table). Use this command to debug problems for AS paths and to understand how AS paths have been manipulated through a policy (through the <b>as-path-prepend</b> action) or through aggregation.</p> <p>AS paths are stored in a hash table. A hash table is one method for fast lookup. Each entry in the table is called a bucket. Junos OS computes a hash value that indicates in which bucket the AS path is stored. The AS paths are dispersed among the hash buckets so that a manageable number of AS paths is stored in each bucket. Only unique AS paths are stored. Duplicate AS paths increase a reference count, but do not increase the number of AS paths stored in the hash table.</p>
<b>Options</b>	<p><b>none</b>—Display basic information about AS paths that the local routing device is using (same as brief).</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show as-path summary on page 2175</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show as-path on page 2168</a> <a href="#">show as-path detail on page 2169</a>
<b>Output Fields</b>	<p><a href="#">Table 190 on page 2168</a> lists the output fields for the <b>show as-path</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 190: show as-path Output Fields

Field Name	Field Description	Level of Output
<b>Total AS paths</b>	Total number of AS paths.	<b>brief</b> none
<b>Bucket</b>	Bucket number.	All levels
<b>Count</b>	Number of AS path entries in this bucket.	All levels
<b>AS path</b>	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li>• <b>I</b>—IGP.</li> <li>• <b>E</b>—EGP.</li> <li>• <b>?</b>—Incomplete; typically, the AS path was aggregated.</li> <li>• <b>Atomic</b>—Route is an aggregate of several route prefixes.</li> <li>• <b>Aggregator</b>—Routing device has summarized a range of prefixes.</li> </ul>	All levels
<b>domain</b>	Number of independent AS domains. The AS paths of an independent AS domain are not shared with the AS paths and AS path attributes of other domains, including the master routing instance domain.	<b>detail</b>
<b>neighbor as</b>	AS peer address.	<b>detail</b>
<b>length</b>	Length of the AS path.	<b>detail</b>
<b>segments</b>	Length of the AS segment descriptor.	<b>detail</b>
<b>unique-count</b>	Number of unique autonomous systems (ASs) present in the AS path	<b>detail</b>
<b>references</b>	Path reference count.	<b>detail</b>

## Sample Output

### show as-path

```

user@host> show as-path
Total AS paths: 30382
Bucket 0      Count: 36
I
14203 2914 174 31752 I
14203 2914 701 21512 I
14203 2914 1239 26632 I
14203 2914 1239 29704 I
14203 2914 4323 10248 I
14203 2914 4766 23560 I
14203 2914 6395 32776 I
14203 2914 7911 11272 I
14203 2914 12180 18440 I
14203 2914 17408 17416 I
14203 2914 701 702 24586 I
14203 2914 1239 4657 9226 I

```

```

14203 2914 1239 7132 16394 I
14203 2914 1299 8308 34826 I
14203 2914 3320 5603 28682 I
14203 2914 3491 1680 33802 I
14203 2914 3549 7908 27658 I
14203 2914 3549 20804 30730 I
14203 2914 7018 2687 9226 I
14203 2914 174 9318 9318 23564 I
14203 2914 701 3786 3786 23564 I
14203 2914 701 4761 4795 9228 I
14203 2914 1239 7132 5673 18444 I
14203 2914 3491 20485 24588 24588 I
14203 2914 5511 2200 1945 2060 I
14203 2914 7911 14325 14325 14348 I
14203 2914 701 4637 9230 9230 9230 I
14203 2914 6395 14 14 14 14 I
14203 2914 9299 6163 6163 6163 9232 I
14203 2914 3356 3356 3356 3356 11955 21522 I
14203 2914 9837 9837 9219 I Aggregator: 9219 202.27.91.253
14203 2914 174 30209 30222 30222 30222 ?
14203 2914 1299 5377 I (Atomic) Aggregator: 5377 193.219.192.22
14203 2914 4323 36097 I (Atomic) Aggregator: 36097 216.69.252.254
14203 2914 209 2516 17676 23813 I (Atomic) Aggregator: 23813 219.127.233.66
Bucket 1    Count: 28
14203 2914 35847 I
14203 2914 174 19465 I
14203 2914 174 35849 I
14203 2914 2828 32777 I
14203 2914 4323 14345 I
14203 2914 4323 29705 I
14203 2914 6395 32777 I

...

```

### show as-path detail

```

user@host> show as-path detail
Total AS paths: 30410
Bucket 0    Count: 36
  AS path: I
    domain 0, length 0, segments 0, unique-count 0, references 54
  AS path: 14203 2914 174 31752 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 701 21512 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 1239 26632 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 5,
references 2
  AS path: 14203 2914 1239 29704 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 4323 10248 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 6,
references 2
  AS path: 14203 2914 4766 23560 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 6395 32776 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 5,

```

```

references 3
  AS path: 14203 2914 7911 11272 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 6,
references 2
  AS path: 14203 2914 12180 18440 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 3,
references 3
  AS path: 14203 2914 17408 17416 I
    domain 1, neighbor as: 14203, length 4, segments 1, unique-count 8,
references 3
  AS path: 14203 2914 701 702 24586 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 4,
references 3
  AS path: 14203 2914 1239 4657 9226 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 5,
references 7
  AS path: 14203 2914 1239 7132 16394 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 7,
references 2
  AS path: 14203 2914 1299 8308 34826 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 8,
references 2
  AS path: 14203 2914 3320 5603 28682 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 3491 1680 33802 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 14,
references 2
  AS path: 14203 2914 3549 7908 27658 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 6,
references 2
  AS path: 14203 2914 3549 20804 30730 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 24,
references 2
  AS path: 14203 2914 7018 2687 9226 I
    domain 1, neighbor as: 14203, length 5, segments 1, unique-count 4,
references 3
  AS path: 14203 2914 174 9318 9318 23564 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 701 3786 3786 23564 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 701 4761 4795 9228 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 14
  AS path: 14203 2914 1239 7132 5673 18444 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 3491 20485 24588 24588 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 4
  AS path: 14203 2914 5511 2200 1945 2060 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 7911 14325 14325 14348 I
    domain 1, neighbor as: 14203, length 6, segments 1, unique-count 4,
references 2
  AS path: 14203 2914 701 4637 9230 9230 9230 I
    domain 1, neighbor as: 14203, length 7, segments 1, unique-count 4,
references 3

```

```
AS path: 14203 2914 6395 14 14 14 14 I
      domain 1, neighbor as: 14203, length 7, segments 1, unique-count 4,
references 10
...
```

## show as-path domain

---

**List of Syntax**   [Syntax on page 2172](#)  
[Syntax \(EX Series Switches\) on page 2172](#)

**Syntax**   `show as-path domain`  
`<logical-system (all | logical-system-name)>`

**Syntax (EX Series Switches)**   `show as-path domain`

**Release Information**   Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description**   Display autonomous system (AS) path domain information.

**Options**   **none**—(Optional) Display AS path domain information for all routing instances.  
**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level**   view

**List of Sample Output**   [show as-path domain on page 2174](#)

**Output Fields**   [Table 191 on page 2172](#) lists the output fields for the **show as-path domain** command. Output fields are listed in the approximate order in which they appear

*Table 191: show as-path domain Output Fields*

Field Name	Field Description
<b>Domain</b>	Number of independent AS domains. The AS paths of an independent AS domain are not shared with the AS paths and AS path attributes of other domains, including the master routing instance domain.
<b>Primary</b>	Primary AS number.
<b>References</b>	Path reference count.
<b>Number Paths</b>	Number of known AS paths.

*Table 191: show as-path domain Output Fields (continued)*

Field Name	Field Description
<b>Flags</b>	Information about the AS path: <ul style="list-style-type: none"><li>• <b>ASLoop</b>—Path contains an AS loop.</li><li>• <b>Atomic</b>—Path includes the ATOMIC_AGGREGATE path attribute.</li><li>• <b>Local</b>—Path was created by local aggregation.</li><li>• <b>Master</b>—Path was created by the master routing instance.</li></ul>
<b>Local AS</b>	AS number of the local routing device.
<b>Loops</b>	How many times this AS number can appear in an AS path.

## Sample Output

show as-path domain

```
user@host> show as-path domain
Domain: 1          Primary: 10458
References:        3 Paths:      30383
Flags: Master
Local AS: 10458   Loops: 1
```

## show as-path summary

<b>List of Syntax</b>	<a href="#">Syntax on page 2175</a> <a href="#">Syntax (EX Series Switches) on page 2175</a>
<b>Syntax</b>	<pre>show as-path summary &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	show as-path summary
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	<p>Display autonomous system (AS) path summary information.</p> <p>AS paths are stored in a hash table. A hash table is one method for fast lookup. Each entry in the table is called a bucket. Junos OS computes a hash value that indicates in which bucket the AS path is stored. The AS paths are dispersed among the hash buckets so that a manageable number of AS paths is stored in each bucket. Only unique AS paths are stored. Duplicate AS paths increase a reference count, but do not increase the number of AS paths stored in the hash table.</p>
<b>Options</b>	<p><b>none</b>—(Optional) Display AS path summary information for all routing instances.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show as-path on page 2167</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show as-path summary on page 2176</a>
<b>Output Fields</b>	<p><a href="#">Table 192 on page 2175</a> lists the output fields for the <b>show as-path summary</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 192: show as-path summary Output Fields*

Field Name	Field Description
AS Paths	Number of AS paths.
Buckets	Number of hash buckets in use.
Max	Maximum number of AS path entries per bucket.

*Table 192: show as-path summary Output Fields (continued)*

Field Name	Field Description
<b>Min</b>	Minimum number of AS path entries per bucket.
<b>Avg</b>	Average number of AS path entries per bucket.
<b>Std deviation</b>	Standard deviation of AS path entries per bucket.

## Sample Output

show as-path summary

```
user@host> show as-path summary
AS Paths  Buckets  Max   Min   Avg   Std deviation
30425     1024     95    12    29    6.481419
```

## show route

**List of Syntax**    [Syntax on page 2177](#)  
                           [Syntax \(EX Series Switches\) on page 2177](#)

**Syntax**    show route  
                   <all>  
                   <destination-prefix>  
                   <logical-system (all | *logical-system-name*)>  
                   <private>  
                   <te-ipv4-prefix-ip *te-ipv4-prefix-ip*>  
                   <te-ipv4-prefix-node-ip *te-ipv4-prefix-node-ip*>  
                   <te-ipv4-prefix-node-iso *te-ipv4-prefix-node-iso*>

**Syntax (EX Series Switches)**    show route  
   <all>  
   <destination-prefix>  
   <private>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                   Command introduced in Junos OS Release 9.0 for EX Series switches.  
                                   Option **private** introduced in Junos OS Release 9.5.  
                                   Option **private** introduced in Junos OS Release 9.5 for EX Series switches.  
                                   Command introduced in Junos OS Release 15.1R3 on MX Series routers for enhanced subscriber management.  
                                   Option **display-client-data** introduced in Junos OS Release 16.2R1 on MX80, MX104, MX240, MX480, MX960, MX2010, MX2020, vMX Series routers.  
                                   Options **te-ipv4-prefix-ip**, **te-ipv4-prefix-node-ip**, and **te-ipv4-prefix-node-iso** introduced in Junos OS Release 17.2R1 on MX Series and PTX Series.

**Description**    Display the active entries in the routing tables.

**Options**    **none**—Display brief information about all active entries in the routing tables.

**all**—(Optional) Display information about all routing tables, including private, or internal, routing tables.

**destination-prefix**—(Optional) Display active entries for the specified address or range of addresses.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**private**—(Optional) Display information only about all private, or internal, routing tables.

**display-client-data** —(Optional) Display client id and cookie information for routes installed by the routing protocol process client applications.

**te-ipv4-prefix-ip *te-ipv4-prefix-ip***—(Optional) Display IPv4 address of the traffic-engineering prefix, without the mask length if present in the routing table.

**te-ipv4-prefix-node-ip** *te-ipv4-prefix-node-ip*—(Optional) Display all prefixes that have originated from the traffic-engineering node. You can filter IPv4 node addresses from the traffic-engineered routes in the **lsdist.0** table.

**te-ipv4-prefix-node-iso** *te-ipv4-prefix-node-iso*—(Optional) Display all prefixes that have originated from the traffic-engineering node. You can filter IPv4 routes with the specified ISO circuit ID from the **lsdist.0** table.

**Required Privilege Level**

view

**Related Documentation**

- *Understanding IS-IS Configuration*
- *Example: Configuring IS-IS*
- *Examples: Configuring Internal BGP Peering*
- *Examples: Configuring External BGP Peering*
- *Examples: Configuring OSPF Routing Policy*
- *Verifying and Managing Junos OS Enhanced Subscriber Management*

**List of Sample Output**

[show route on page 2181](#)  
[show route \(VPN\) on page 2182](#)  
[show route \(with Destination Prefix\) on page 2182](#)  
[show route destination-prefix detail on page 2182](#)  
[show route extensive on page 2182](#)  
[show route extensive \( ECMP\) on page 2183](#)  
[show route extensive \(Multipath Resolution\) on page 2183](#)  
[show route \(Enhanced Subscriber Management\) on page 2187](#)  
[show route \(IPv6 Flow Specification\) on page 2188](#)  
[show route display-client-data detail on page 2188](#)  
[show route te-ipv4-prefix-ip on page 2189](#)  
[show route te-ipv4-prefix-ip extensive on page 2189](#)  
[show route te-ipv4-prefix-node-iso on page 2192](#)  
[show route te-ipv4-prefix-node-iso extensive on page 2192](#)  
[show route te-ipv4-prefix-node-iso detail on page 2195](#)

**Output Fields**

[Table 193 on page 2178](#) describes the output fields for the **show route** command. Output fields are listed in the approximate order in which they appear.

*Table 193: show route Output Fields*

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.

Table 193: show route Output Fields (continued)

Field Name	Field Description
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> <li>• <b>active</b> (routes that are active).</li> <li>• <b>holddown</b> (routes that are in the pending state before being declared inactive). A holddown route was once the active route and is no longer the active route. The route is in the holddown state because a protocol still has interest in the route, meaning that the interest bit is set. A protocol might have its interest bit set on the previously active route because the protocol is still advertising the route. The route will be deleted after all protocols withdraw their advertisement of the route and remove their interest bit. A persistent holddown state often means that the interested protocol is not releasing its interest bit properly.</li> </ul> <p>However, if you have configured advertisement of multiple routes (with the <b>add-path</b> or <b>advertise-inactive</b> statement), the holddown bit is most likely set because BGP is advertising the route as an active route. In this case, you can ignore the holddown state because nothing is wrong.</p> <ul style="list-style-type: none"> <li>• <b>hidden</b> (routes that are not used because of a routing policy).</li> </ul>
<i>destination-prefix</i>	<p>Route destination (for example:10.0.0.1/24). Sometimes the route information is presented in another format, such as:</p> <ul style="list-style-type: none"> <li>• <b>MPLS-label</b> (for example, 80001).</li> <li>• <b>interface-name</b> (for example, ge-1/0/2).</li> <li>• <b>neighbor-address:control-word-status:encapsulation type:vc-id:source</b> (Layer 2 circuit only. For example, 10.1.1.195:NoCtrlWord:1:1:Local/96): <ul style="list-style-type: none"> <li>• <b>neighbor-address</b>—Address of the neighbor.</li> <li>• <b>control-word-status</b>—Whether the use of the control word has been negotiated for this virtual circuit: <b>NoCtrlWord</b> or <b>CtrlWord</b>.</li> <li>• <b>encapsulation type</b>—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport.</li> <li>• <b>vc-id</b>—Virtual circuit identifier.</li> <li>• <b>source</b>—Source of the advertisement: <b>Local</b> or <b>Remote</b>.</li> </ul> </li> </ul>
<i>[ protocol, preference ]</i>	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> <li>• <b>+</b>—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table.</li> <li>• <b>-</b>—A hyphen indicates the last active route.</li> <li>• <b>*</b>—An asterisk indicates that the route is both the active and the last active route. An asterisk before a <b>to</b> line indicates the best subpath to the route.</li> </ul> <p>In every routing metric except for the BGP <b>LocalPref</b> attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the <b>LocalPref</b> value in the <b>Preference2</b> field. For example, if the <b>LocalPref</b> value for Route 1 is 100, the <b>Preference2</b> value is -101. If the <b>LocalPref</b> value for Route 2 is 155, the <b>Preference2</b> value is -156. Route 2 is preferred because it has a higher <b>LocalPref</b> value and a lower <b>Preference2</b> value.</p>
<i>weeks:days hours:minutes:seconds</i>	How long the route been known (for example, <b>2w4d 13:11:14</b> , or 2 weeks, 4 days, 13 hours, 11 minutes, and 14 seconds).
<i>metric</i>	Cost value of the indicated route. For routes within an AS, the cost is determined by the IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.

Table 193: show route Output Fields (continued)

Field Name	Field Description
<b>localpref</b>	Local preference value included in the route.
<b>from</b>	Interface from which the route was received.
<b>AS path</b>	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li>• <b>I</b>—IGP.</li> <li>• <b>E</b>—EGP.</li> <li>• <b>?</b>—Incomplete; typically, the AS path was aggregated.</li> </ul> <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> <li>• <b>[ ]</b>—Brackets enclose the local AS number associated with the AS path if more than one AS number is configured on the routing device, or if AS path prepending is configured.</li> <li>• <b>{ }</b>—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order.</li> <li>• <b>( )</b>—Parentheses enclose a confederation.</li> <li>• <b>( [ ] )</b>—Parentheses and brackets enclose a confederation set.</li> </ul> <p><b>NOTE:</b> In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>
<b>encapsulated</b>	Extended next-hop encoding capability enabled for the specified BGP community for routing IPv4 traffic over IPv6 tunnels. When BGP receives routes without the tunnel community, IPv4-Over IPv6 tunnels are not created and BGP routes are resolved without encapsulation.
<b>Route Labels</b>	Stack of labels carried in the BGP route update.
<b>validation-state</b>	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> <li>• <b>Invalid</b>—Indicates that the prefix is found, but either the corresponding AS received from the EBGp peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database.</li> <li>• <b>Unknown</b>—Indicates that the prefix is not among the prefixes or prefix ranges in the database.</li> <li>• <b>Unverified</b>—Indicates that the origin of the prefix is not verified against the database. This is because the database got populated and the validation is not called for in the BGP import policy, although origin validation is enabled, or the origin validation is not enabled for the BGP peers.</li> <li>• <b>Valid</b>—Indicates that the prefix and autonomous system pair are found in the database.</li> </ul>
<b>to</b>	<p>Next hop to the destination. An angle bracket (&gt;) indicates that the route is the selected route.</p> <p>If the destination is <b>Discard</b>, traffic is dropped.</p>

Table 193: show route Output Fields (continued)

Field Name	Field Description
via	<p>Interface used to reach the next hop. If there is more than one interface available to the next hop, the interface that is actually used is followed by the word <b>Selected</b>. This field can also contain the following information:</p> <ul style="list-style-type: none"> <li>• <b>Weight</b>—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.</li> <li>• <b>Balance</b>—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.</li> <li>• <b>lsp-path-name</b>—Name of the LSP used to reach the next hop.</li> <li>• <b>label-action</b>—MPLS label and operation occurring at the next hop. The operation can be <b>pop</b> (where a label is removed from the top of the stack), <b>push</b> (where another label is added to the label stack), or <b>swap</b> (where a label is replaced by another label). For VPNs, expect to see multiple <b>push</b> operations, corresponding to the inner and outer labels required for VPN routes (in the case of a direct PE-to-PE connection, the VPN route would have the inner label push only).</li> </ul>
Private unicast	(Enhanced subscriber management for MX Series routers) Indicates that an access-internal route is managed by enhanced subscriber management. By contrast, access-internal routes <i>not</i> managed by enhanced subscriber management are displayed with associated next-hop and media access control (MAC) address information.
balance	Distribution of the load based on the underlying operational interface bandwidth for equal-cost multipaths (ECMP) across the nexthop gateways in percentages.

## Sample Output

### show route

```

user@host> show route
inet.0: 11 destinations, 12 routes (11 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1:65500:1:10.0.0.20/240
    * [MVPN/70] 19:53:41, metric2 1
        Indirect
1:65500:1:10.0.0.40/240
    * [BGP/170] 19:53:29, localpref 100, from 10.0.0.30
        AS path: I
        > to 10.0.24.4 via lt-0/3/0.24, label-switched-path toD
        [BGP/170] 19:53:26, localpref 100, from 10.0.0.33
        AS path: I
        > to 10.0.24.4 via lt-0/3/0.24, label-switched-path toD
1:65500:1:10.0.0.60/240
    * [BGP/170] 19:53:29, localpref 100, from 10.0.0.30
        AS path: I
        > to 10.0.28.8 via lt-0/3/0.28, label-switched-path toF
        [BGP/170] 19:53:25, localpref 100, from 10.0.0.33
        AS path: I
        > to 10.0.28.8 via lt-0/3/0.28, label-switched-path toF

```

### show route (VPN)

The following sample output shows a VPN route with composite next hops enabled. The first **Push** operation corresponds to the outer label. The second **Push** operation corresponds to the inner label.

```
user@host> show route 192.0.2.0

13979:665001.inet.0: 871 destinations, 3556 routes (871 active, 0 holddown, 0
hidden)
+ = Active Route, - = Last Active, * = Both

192.0.2.0/24          [BGP/170] 00:28:32, localpref 100, from 10.9.9.160
                     AS path: 13980 ?, validation-state: unverified
                     > to 10.100.0.42 via ae2.0, Push 16, Push 300368(top)
                     [BGP/170] 00:28:28, localpref 100, from 10.9.9.169
                     AS path: 13980 ?, validation-state: unverified
                     > to 10.100.0.42 via ae2.0, Push 126016, Push 300368(top)
                     #[Multipath/255] 00:28:28, metric2 102
                     > to 10.100.0.42 via ae2.0, Push 16, Push 300368(top)
                     to 10.100.0.42 via ae2.0, Push 16, Push 300368(top)
```

### show route (with Destination Prefix)

```
user@host> show route 192.168.0.0/12

inet.0: 10 destinations, 10 routes (9 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.0.0/12      *[Static/5] 2w4d 12:54:27
                     > to 192.168.167.254 via fxp0.0
```

### show route destination-prefix detail

```
user@host> show route 198.51.100.0 detail

inet.0: 15 destinations, 20 routes (15 active, 0 holddown, 0 hidden)
198.51.100.0/24 (2 entries, 2 announced)
    *BGP      Preference: 170/-101
    ...
    BGP-Static Preference: 4294967292
    Next hop type: Discard
    Address: 0x9041ae4
    Next-hop reference count: 2
    State: <NoReadvrt Int Ext AlwaysFlash>
    Inactive reason: Route Preference
    Local AS: 200
    Age: 4d 1:40:40
    Validation State: unverified
    Task: RT
    Announcement bits (1): 2-BGP_RT_Background
    AS path: 4 5 6 I
```

### show route extensive

```
user@host> show route extensive

v1.mvpn.0: 5 destinations, 8 routes (5 active, 1 holddown, 0 hidden)
1:65500:1:10.0.0.40/240 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
```

```

PMSI: Flags 0x0: Label[0:0:0]: PIM-SM: Sender 10.0.0.40 Group
203.0.113.1
Next hop type: Indirect
Address: 0x92455b8
Next-hop reference count: 2
Source: 10.0.0.30
Protocol next hop: 10.0.0.40
Indirect next hop: 2 no-forward
State: <Active Int Ext>
    Local AS: 64510 Peer AS: 64511
Age: 3 Metric2: 1
Validation State: unverified
Task: BGP_64510.10.0.0.30+179
Announcement bits (2): 0-PIM.v1 1-mvpn global task
AS path: I (Originator) Cluster list: 10.0.0.30
AS path: Originator ID: 10.0.0.40
Communities: target:64502:100 encapsulation:0L:14 Import
Accepted
Localpref: 100
Router ID: 10.0.0.30
Primary Routing Table bgp.mvpn.0
Indirect next hops: 1
    Protocol next hop: 10.0.0.40 Metric: 1
    Indirect next hop: 2 no-forward
    Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.0.24.4 via lt-0/3/0.24 weight 0x1
    10.0.0.40/32 Originating RIB: inet.3
        Metric: 1 Node path count: 1
        Forwarding nexthops: 1
            Nexthop: 10.0.24.4 via lt-0/3/0.24

```

### show route extensive ( ECMP)

```

user@host> show route extensive
*IS-IS Preference: 15
Level: 1
Next hop type: Router, Next hop index: 1048577
Address: 0XXXXXXXXXX
Next-hop reference count: YY
Next hop: 198.51.100.2 via ae1.0 balance 43%, selected
Session Id: 0x141
Next hop: 192.0.2.2 via ae0.0 balance 57%

```

### show route extensive (Multipath Resolution)

```

user@host> show route extensive
inet.0: 37 destinations, 37 routes (36 active, 0 holddown, 1 hidden)
10.1.1.2/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.1.1.2/32 -> {indirect(1048574)}
*Static Preference: 5
Next hop type: Indirect, Next hop index: 0
Address: 0xb39d1b0
Next-hop reference count: 2
Next hop type: Router, Next hop index: 581
Next hop: 10.1.1.2 via ge-2/0/1.0, selected
Session Id: 0x144
Next hop: 10.2.1.2 via ge-2/0/2.0, selected
Session Id: 0x145

```

```

Protocol next hop: 10.1.1.1
Indirect next hop: 0xb2b20f0 1048574 INH Session ID: 0x143
State: <Active Int Ext>
Age: 2:53 Metric2: 0
Validation State: unverified
Task: RT
Announcement bits (2): 0-KRT 2-Resolve tree 1
AS path: I
Indirect next hops: 1
    Protocol next hop: 10.1.1.1
    Indirect next hop: 0xb2b20f0 1048574 INH Session ID: 0x143

    Indirect path forwarding next hops: 2
        Next hop type: Router
        Next hop: 10.1.1.2 via ge-2/0/1.0
        Session Id: 0x144
        Next hop: 10.2.1.2 via ge-2/0/2.0
        Session Id: 0x145
10.1.1.1/32 Originating RIB: inet.0
Node path count: 1
Node flags: 1
Forwarding nexthops: 2 (Merged)
Nexthop: 10.1.1.2 via ge-2/0/1.0
Nexthop: 10.2.1.2 via ge-2/0/2.0

user@host> show route active-path extensive
user@host> show route 198.51.100.1 active-path extensive

inet.0: 1000061 destinations, 1000082 routes (1000061 active, 0 holddown, 0 hidden)
198.51.100.1/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 198.51.100.1/32 -> {indirect(1051215)}
unicast reverse-path: 0
[ae0.0 ae1.0]
Page 0 idx 0, (group Internet-IPv4 type External) Type 1 val 0xbb2e53d8 (adv_entry)
Advertised metrics:
Nexthop: Self
AS path: [500] 410 I
Communities:
Path 198.51.100.1 from 10.0.0.11 Vector len 4. Val: 0
*BGP Preference: 170/-101
Next hop type: Indirect, Next hop index: 0
Address: 0x2e9aacdc
Next-hop reference count: 500000
Source: 10.0.0.11
Next hop type: Router, Next hop index: 0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Label operation: Push 3851, Push 25, Push 20(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 25: None; Label 20: None;
Label element ptr: 0xb5dc1780
Label parent element ptr: 0x18d48080
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Label operation: Push 3851, Push 25, Push 22(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 25: None; Label 22: None;
Label element ptr: 0xb5dc1700
Label parent element ptr: 0x18d41000

```

```

Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Label operation: Push 3851, Push 24, Push 48(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 24: None; Label 48: None;
Label element ptr: 0x18d40800
Label parent element ptr: 0x18d49780
Label element references: 3
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Label operation: Push 3851, Push 24, Push 49(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 24: None; Label 49: None;
Label element ptr: 0xb5dc1680
Label parent element ptr: 0x18d48f00
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Label operation: Push 3851, Push 25, Push 21(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 25: None; Label 21: None;
Label element ptr: 0xb5dc1600
Label parent element ptr: 0x18d44d80
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Label operation: Push 3851, Push 25, Push 25(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 25: None; Label 25: None;
Label element ptr: 0xb5dc1580
Label parent element ptr: 0x18d3da80
Label element references: 2
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1, selected
Label operation: Push 3851, Push 24, Push 68(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 24: None; Label 68: None;
Label element ptr: 0x18d41500
Label parent element ptr: 0x18d49000
Label element references: 3
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Label operation: Push 3851, Push 24, Push 69(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 3851: None; Label 24: None; Label 69: None;
Label element ptr: 0xb5dc1500
Label parent element ptr: 0x18d48300
Label element references: 2

```

```
Label element child references: 0
Label element lsp id: 0
Session Id: 0x0
Protocol next hop: 10.0.0.11
Label operation: Push 3851
Label TTL action: prop-ttl
Load balance label: Label 3851: None;
Indirect next hop: 0x1883e200 1051215 INH Session ID: 0xb0d
State:
Local AS: 500 Peer AS: 500
Age: 1:40:03 Metric2: 2
Validation State: unverified
Task: BGP_500.10.0.0.11
Announcement bits (5): 0-KRT 8-KRT 9-BGP_RT_Background 10-Resolve tree 5 11-Resolve
tree 8
AS path: 410 I
Accepted
Route Label: 3851
Localpref: 100
Router ID: 10.0.0.11
Indirect next hops: 1
Protocol next hop: 10.0.0.11 Metric: 2
Label operation: Push 3851
Label TTL action: prop-ttl
Load balance label: Label 3851: None;
Indirect next hop: 0x1883e200 1051215 INH Session ID: 0xb0d
Indirect path forwarding next hops (Merged): 8
Next hop type: Router
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.12.2 via ae0.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Session Id: 0x0
Next hop: 10.0.13.3 via ae1.0 weight 0x1
Session Id: 0x0
10.0.0.11/32 Originating RIB: inet.3
Metric: 1 Node path count: 4
Node flags: 1
Indirect nexthops: 4
Protocol Nexthop: 10.0.0.4 Metric: 1 Push 24
Indirect nexthop: 0x1880f200 1048597 INH Session ID: 0xb0c
Path forwarding nexthops link: 0x36120400
Path inh link: 0x0
Indirect path forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
10.0.0.4/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
```

```

Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
Protocol Nexthop: 10.0.0.5 Metric: 1 Push 24
Indirect nexthop: 0x18810000 1048596 INH Session ID: 0xb0b
Path forwarding nexthops link: 0x1545be00
Path inh link: 0x0
Indirect path forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
10.0.0.5/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
Protocol Nexthop: 10.0.0.6 Metric: 1 Push 25
Indirect nexthop: 0x1880e600 1048588 INH Session ID: 0xb0a
Path forwarding nexthops link: 0x3611f440
Path inh link: 0x0
Indirect path forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
10.0.0.6/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
Protocol Nexthop: 10.0.0.7 Metric: 1 Push 25
Indirect nexthop: 0x1880dc00 1048586 INH Session ID: 0xb09
Path forwarding nexthops link: 0x15466d80
Path inh link: 0x0
Indirect path forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0
10.0.0.7/32 Originating RIB: inet.3
Metric: 1 Node path count: 1
Forwarding nexthops: 2
Nexthop: 10.0.12.2 via ae0.0
Session Id: 0
Nexthop: 10.0.13.3 via ae1.0
Session Id: 0

```

### show route (Enhanced Subscriber Management)

```

user@host> show route
inet.0: 41 destinations, 41 routes (40 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

198.51.100.11/24    *[Access-internal/12] 00:00:08
> to #0 10.0.0.1.93.65 via demux0.1073741824

```

```
198.51.100.12/24    *[Access-internal/12] 00:00:08
                  Private unicast
```

### show route (IPv6 Flow Specification)

```
user@host> show route
inet6.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2001:db8::10:255:185:19/128
    *[Direct/0] 05:11:27
    > via lo0.0
2001:db8::11:11:11:0/120
    *[BGP/170] 00:28:58, localpref 100
    AS path: 2000 I, validation-state: unverified
    > to 2001:db8::13:14:2:2 via ge-1/1/4.0
2001:db8::13:14:2:0/120*[Direct/0] 00:45:07
    > via ge-1/1/4.0
2001:db8::13:14:2:1/128*[Local/0] 00:45:18
    Local via ge-1/1/4.0
fe80::2a0:a50f:fc71:71d5/128
    *[Direct/0] 05:11:27
    > via lo0.0
fe80::5e5e:abff:feb0:933e/128
    *[Local/0] 00:45:18
    Local via ge-1/1/4.0

inet6flow.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2001:db8::11:11:11:10/128,*,proto=6,dstport=80,srcport=65535/term:1
    *[BGP/170] 00:28:58, localpref 100, from 2001:db8::13:14:2:2
    AS path: 2000 I, validation-state: unverified
    Fictitious
2001:db8::11:11:11:30/128,*,icmp6-type=128,len=100,dscp=10/term:2
    *[BGP/170] 00:20:54, localpref 100, from 2001:db8::13:14:2:2
    AS path: 2000 I, validation-state: unverified
    Fictitious
```

### show route display-client-data detail

```
user@host> show route 198.51.100.0/24 display-client-data detail
inet.0: 59 destinations, 70 routes (59 active, 0 holddown, 0 hidden)
198.51.100.0/24 (1 entry, 1 announced)
    State: <FlashAll>
    *BGP-Static Preference: 5/-101
    Next hop type: Indirect, Next hop index: 0
    Address: 0xa5c2af8
    Next-hop reference count: 2
    Next hop type: Router, Next hop index: 1641
    Next hop: 192.0.2.1 via ge-2/1/1.0, selected
    Session Id: 0x160
    Protocol next hop: 192.0.2.1
    Indirect next hop: 0xa732cb0 1048621 INH Session ID: 0x17e
    State: <Active Int Ext AlwaysFlash NSR-incapable Programmed>
    Age: 3:13 Metric2: 0
    Validation State: unverified
    Announcement bits (3): 0-KRT 5-LDP 6-Resolve tree 3
```

```
AS path: I
Client id: 1, Cookie: 1
```

### show route te-ipv4-prefix-ip

```
user@host> show route te-ipv4-prefix-ip 10.10.10.10
lsdist.0: 283 destinations, 283 routes (283 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L1:0
}/1152
      *[IS-IS/15] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0101.0101.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0202.0202.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0303.0303.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0404.0404.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0505.0505.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0606.0606.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0707.0707.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:01:01
      Fictitious
```

### show route te-ipv4-prefix-ip extensive

```
user@host> show route te-ipv4-prefix-ip 10.10.10.10 extensive
lsdist.0: 298 destinations, 298 routes (298 active, 0 holddown, 0 hidden)
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 298
    Next hop:
    State:<Active NotInstall>
    Local AS: 64496
    Age: 7:58
```

```

        Validation State: unverified
        Task: IS-IS
        AS path: I
        Prefix SID: 1000, Flags: 0x40, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0101.0101.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
        Level: 2
        Next hop type: Fictitious, Next hop index: 0
        Address: 0xa1a2ac4
        Next-hop reference count: 298
        Next hop:
        State: <Active NotInstall>
        Local AS: 64496
            Age: 7:58
            Validation State: unverified
            Task: IS-IS
            AS path: I
            Prefix SID: 1000, Flags: 0xe0, Algo: 0>

PREFIX { Node { AS:64496 ISO:0100.0202.0202.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
        Level: 2
        Next hop type: Fictitious, Next hop index: 0
        Address: 0xa1a2ac4
        Next-hop reference count: 298
        Next hop:
        State: <Active NotInstall>
        Local AS: 64496
            Age: 7:58
            Validation State: unverified
            Task: IS-IS
            AS path: I
            Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0303.0303.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
        Level: 2
        Next hop type: Fictitious, Next hop index: 0
        Address: 0xa1a2ac4
        Next-hop reference count: 298
        Next hop:
        State: <Active NotInstall>
        Local AS: 64496
            Age: 7:58
            Validation State: unverified
            Task: IS-IS
            AS path: I
            Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0404.0404.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
    *IS-IS Preference: 18
        Level: 2
        Next hop type: Fictitious, Next hop index: 0
        Address: 0xa1a2ac4
        Next-hop reference count: 298
        Next hop:

```

```

        State: <Active NotInstall>
        Local AS: 64496
        Age: 7:58
        Validation State: unverified
        Task: IS-IS
        AS path: I
        Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0505.0505.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 298
    Next hop:
      State: <Active NotInstall>
      Local AS: 64496
      Age: 7:58
      Validation State: unverified
      Task: IS-IS
      AS path: I
      Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0606.0606.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 298
    Next hop:
      State: <Active NotInstall>
      Local AS: 64496
      Age: 7:58
      Validation State: unverified
      Task: IS-IS
      AS path: I
      Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0707.0707.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 298
    Next hop:
      State: <Active NotInstall>
      Local AS: 64496
      Age: 7:58
      Validation State: unverified
      Task: IS-IS
      AS path: I
      Prefix SID: 1000, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0

```

```

Address: 0xa1a2ac4
Next-hop reference count: 298
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 7:58
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1000, Flags: 0x40, Algo: 0

```

### show route te-ipv4-prefix-node-iso

```

user@host> show route te-ipv4-prefix-node-iso 0100.0a0a.0a0a.00
Isdist.0: 283 destinations, 283 routes (283 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L1:0
}/1152
      *[IS-IS/15] 00:05:20
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.1.1.1/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:05:20
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.2.2.2/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:05:20
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.3.3.3/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:05:20
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.4.4.4/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:05:20
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.5.5.5/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:05:20
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.6.6.6/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:05:20
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.7.7.7/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:05:20
      Fictitious
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152
      *[IS-IS/18] 00:05:20
      Fictitious

```

### show route te-ipv4-prefix-node-iso extensive

```

user@host> show route te-ipv4-prefix-node-iso 0100.0a0a.0a0a.00 extensive
Isdist.0: 283 destinations, 283 routes (283 active, 0 holddown, 0 hidden)
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L1:0

```

```

}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0x40, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.1.1.1/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1001, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.2.2.2/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1002, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.3.3.3/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I

```

```

Prefix SID: 1003, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.4.4.4/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1004, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.5.5.5/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1005, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.6.6.6/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1006, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.7.7.7/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47

```

```

Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1007, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:47
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0x40, Algo: 0

```

#### show route te-ipv4-prefix-node-iso detail

```

user@host> show route te-ipv4-prefix-node-iso 0100.0a0a.0a0a.00 detail
Isdist.0: 283 destinations, 283 routes (283 active, 0 holddown, 0 hidden)
PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L1:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:54
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0x40, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.1.1.1/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:54
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1001, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.2.2.2/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18

```

```

Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1002, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.3.3.3/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1003, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.4.4.4/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1004, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.5.5.5/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
*IS-IS Preference: 18
Level: 2
Next hop type: Fictitious, Next hop index: 0
Address: 0xa1a2ac4
Next-hop reference count: 283
Next hop:
State: <Active NotInstall>
Local AS: 64496
Age: 6:54
Validation State: unverified
Task: IS-IS
AS path: I
Prefix SID: 1005, Flags: 0xe0, Algo: 0

```

```

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.6.6.6/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:54
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1006, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.7.7.7/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:54
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1007, Flags: 0xe0, Algo: 0

PREFIX { Node { AS:64496 ISO:0100.0a0a.0a0a.00 } { IPv4:10.10.10.10/32 } ISIS-L2:0
}/1152 (1 entry, 0 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Fictitious, Next hop index: 0
    Address: 0xa1a2ac4
    Next-hop reference count: 283
    Next hop:
    State: <Active NotInstall>
    Local AS: 64496
    Age: 6:54
    Validation State: unverified
    Task: IS-IS
    AS path: I
    Prefix SID: 1000, Flags: 0x40, Algo: 0

```

## show route active-path

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2198</a> <a href="#">Syntax (EX Series Switches) on page 2198</a>
<b>Syntax</b>	<code>show route active-path</code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Syntax (EX Series Switches)</b>	<code>show route active-path</code> <code>&lt;brief   detail   extensive   terse&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.0. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Display all active routes for destinations. An active route is a route that is selected as the best path. Inactive routes are not displayed.
<b>Options</b>	<b>none</b> —Display all active routes.  <b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b> .  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route active-path on page 2198</a> <a href="#">show route active-path brief on page 2199</a> <a href="#">show route active-path detail on page 2199</a> <a href="#">show route active-path extensive on page 2200</a> <a href="#">show route active-path terse on page 2202</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route active-path

```
user@host> show route active-path

inet.0: 7 destinations, 7 routes (6 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.70.19/32    *[Direct/0] 21:33:52
```

```

> via lo0.0
10.255.71.50/32 * [IS-IS/15] 00:18:13, metric 10
> to 172.16.100.1 via so-2/1/3.0
172.16.100.1/24 * [Direct/0] 00:18:36
> via so-2/1/3.0
172.16.100.1/32 * [Local/0] 00:18:41
Local via so-2/1/3.0
192.168.64.0/21 * [Direct/0] 21:33:52
> via fxp0.0
192.168.70.19/32 * [Local/0] 21:33:52
Local via fxp0.0

```

### show route active-path brief

The output for the **show route active-path brief** command is identical to that for the **show route active-path** command. For sample output, see [show route active-path on page 2198](#).

### show route active-path detail

```

user@host> show route active-path detail

inet.0: 7 destinations, 7 routes (6 active, 0 holddown, 1 hidden)

10.255.70.19/32 (1 entry, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via lo0.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:37:10
    Task: IF
    Announcement bits (3): 2-IS-IS 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

10.255.71.50/32 (1 entry, 1 announced)
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Router, Next hop index: 397
    Next-hop reference count: 4
    Next hop: 172.16.100.1 via so-2/1/3.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:31 Metric: 10
    Task: IS-IS
    Announcement bits (4): 0-KRT 2-IS-IS 5-Resolve tree 2 6-Resolve
tree 3
    AS path: I

172.16.100.0/24 (1 entry, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via so-2/1/3.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:54
    Task: IF
    Announcement bits (3): 2-IS-IS 5-Resolve tree 2 6-Resolve tree 3

```

```

AS path: I

172.16.100.1/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 11
    Interface: so-2/1/3.0
    State: <Active NoReadvrt Int>
    Local AS: 200
    Age: 21:59
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

192.168.64.0/21 (1 entry, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via fxp0.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:37:10
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

192.168.70.19/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 11
    Interface: fxp0.0
    State: <Active NoReadvrt Int>
    Local AS: 200
    Age: 21:37:10
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

```

#### show route active-path extensive

```

user@host> show route active-path extensive

inet.0: 7 destinations, 7 routes (6 active, 0 holddown, 1 hidden)
10.255.70.19/32 (1 entry, 1 announced)
TSI:
IS-IS level 1, LSP fragment 0
IS-IS level 2, LSP fragment 0
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via lo0.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:39:47
    Task: IF
    Announcement bits (3): 2-IS-IS 5-Resolve tree 2 6-Resolve tree 3

AS path: I

10.255.71.50/32 (1 entry, 1 announced)

```

```

TSI:
KRT in-kernel 10.255.71.50/32 -> {172.16.100.1}
IS-IS level 2, LSP fragment 0
  *IS-IS Preference: 15
    Level: 1
    Next hop type: Router, Next hop index: 397
    Next-hop reference count: 4
    Next hop: 172.16.100.1 via so-2/1/3.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 24:08 Metric: 10
    Task: IS-IS
    Announcement bits (4): 0-KRT 2-IS-IS 5-Resolve tree 2 6-Resolve
tree 3
    AS path: I

172.16.100.1/24 (1 entry, 1 announced)
TSI:
IS-IS level 1, LSP fragment 0
IS-IS level 2, LSP fragment 0
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via so-2/1/3.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 24:31
    Task: IF
    Announcement bits (3): 2-IS-IS 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

172.16.100.1/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 11
    Interface: so-2/1/3.0
    State: <Active NoReadvrt Int>
    Local AS: 200
    Age: 24:36
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

192.168.64.0/21 (1 entry, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 3
    Next hop: via fxp0.0, selected
    State: <Active Int>
    Local AS: 200
    Age: 21:39:47
    Task: IF
    Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
    AS path: I

192.168.70.19/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 11
    Interface: fxp0.0

```

```
State: <Active NoReadvrt Int>
Local AS: 200
Age: 21:39:47
Task: IF
Announcement bits (2): 5-Resolve tree 2 6-Resolve tree 3
AS path: I
```

### show route active-path terse

```
user@host> show route active-path terse
```

```
inet.0: 7 destinations, 7 routes (6 active, 0 holddown, 1 hidden)
```

```
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	10.255.70.19/32	D	0			>lo0.0	
*	10.255.71.50/32	I	15	10		>172.16.100.1.	
*	172.16.100.0/24	D	0			>so-2/1/3.0	
*	172.16.100.2/32	L	0			Local	
*	192.168.64.0/21	D	0			>fxp0.0	
*	192.168.70.19/32	L	0			Local	

## show route advertising-protocol

<b>Syntax</b>	show route advertising-protocol <i>protocol neighbor-address</i> <brief   detail   extensive   terse> <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display the routing information as it has been prepared for advertisement to a particular neighbor of a particular dynamic routing protocol.
<b>Options</b>	<p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b><i>neighbor-address</i></b>—Address of the neighboring router to which the route entry is being transmitted.</p> <p><b><i>protocol</i></b>—Protocol transmitting the route:</p> <ul style="list-style-type: none"> <li>• <b>bgp</b>—Border Gateway Protocol</li> <li>• <b>dvmrp</b>—Distance Vector Multicast Routing Protocol</li> <li>• <b>msdp</b>—Multicast Source Discovery Protocol</li> <li>• <b>pim</b>—Protocol Independent Multicast</li> <li>• <b>rip</b>—Routing Information Protocol</li> <li>• <b>ripng</b>—Routing Information Protocol next generation</li> </ul>
<b>Additional Information</b>	Routes displayed are routes that the routing table has exported into the routing protocol and that have been filtered by the associated protocol's <b>export</b> routing policy statements. Starting with Junos OS Release 13.3, you can display the routing instance table <b>foo</b> for any address family, on a VPN route reflector, or a VPN AS boundary router that is advertising local VPN routes. However, If you do not specify the <b>table</b> in the command, the output displays each VRF prefix twice.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Example: Configuring the MED Attribute That Determines the Exit Point in an AS</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show route advertising-protocol bgp (Layer 3 VPN) on page 2206</a> <a href="#">show route advertising-protocol bgp detail on page 2206</a>

[show route advertising-protocol bgp detail \(Aggregate Extended Community Bandwidth\) on page 2206](#)  
[show route advertising-protocol bgp detail \(Labeled Unicast\) on page 2207](#)  
[show route advertising-protocol bgp detail \(Layer 2 VPN\) on page 2207](#)  
[show route advertising-protocol bgp detail \(Layer 3 VPN\) on page 2207](#)  
[show route advertising-protocol bgp extensive all \(Next Hop Self with RIB-out IP Address\) on page 2208](#)

**Output Fields** [Table 194 on page 2204](#) lists the output fields for the **show route advertising-protocol** command. Output fields are listed in the approximate order in which they appear.

*Table 194: show route advertising-protocol Output Fields*

Field Name	Field Description	Level of Output
<i>routing-table-name</i>	Name of the routing table—for example, inet.0.	All levels
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.	All levels
<i>number routes</i>	Number of routes in the routing table and total number of routes in the following states: <ul style="list-style-type: none"> <li>• <b>active</b> (routes that are active)</li> <li>• <b>holddown</b> (routes that are in the pending state before being declared inactive)</li> <li>• <b>hidden</b> (routes that are not used because of a routing policy)</li> </ul>	All levels
<b>Prefix</b>	Destination prefix.	<b>brief none</b>
<i>destination-prefix (entry, announced)</i>	Destination prefix. The <b>entry</b> value is the number of routes for this destination, and the <b>announced</b> value is the number of routes being announced for this destination.	<b>detail extensive</b>
<b>BGP group and type</b>	BGP group name and type ( <b>Internal</b> or <b>External</b> ).	<b>detail extensive</b>
<b>Route Distinguisher</b>	Unique 64-bit prefix augmenting each IP subnet.	<b>detail extensive</b>
<b>Advertised Label</b>	Incoming label advertised by the Label Distribution Protocol (LDP). When an IP packet enters a label-switched path (LSP), the ingress router examines the packet and assigns it a label based on its destination, placing the label in the packet's header. The label transforms the packet from one that is forwarded based on its IP routing information to one that is forwarded based on information associated with the label.	<b>detail extensive</b>
<b>Label-Base, range</b>	First label in a block of labels and label block size. A remote PE router uses this first label when sending traffic toward the advertising PE router.	<b>detail extensive</b>
<b>VPN Label</b>	Virtual private network (VPN) label. Packets are sent between CE and PE routers by advertising VPN labels. VPN labels transit over either a Resource Reservation Protocol (RSVP) or a Label Distribution Protocol (LDP) label-switched path (LSP) tunnel.	<b>detail extensive</b>

Table 194: *show route advertising-protocol* Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Nexthop</b>	<p>Next hop to the destination. An angle bracket (&gt;) indicates that the route is the selected route.</p> <p>If the next-hop advertisement to the peer is <b>Self</b>, and the RIB-out next hop is a specific IP address, the RIB-out IP address is included in the extensive output. See <a href="#">show route advertising-protocol bgp extensive all (Next Hop Self with RIB-out IP Address)</a> on page 2208.</p>	All levels
<b>MED</b>	Multiple exit discriminator value included in the route.	<b>brief</b>
<b>Lclpref or Localpref</b>	Local preference value included in the route.	All levels
<b>Queued</b>	When BGP route prioritization is enabled and a route is present in a priority queue, this shows which priority queue the route is in.	All levels except <b>brief</b>
<b>AS path</b>	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li>• <b>I</b>—IGP.</li> <li>• <b>E</b>—EGP.</li> <li>• <b>?</b>—Incomplete; typically, the AS path was aggregated.</li> </ul> <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> <li>• <b>[ ]</b>—Brackets enclose the local AS number associated with the AS path if configured on the router, or if AS path prepending is configured.</li> <li>• <b>{ }</b>—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order.</li> <li>• <b>( )</b>—Parentheses enclose a confederation.</li> <li>• <b>( [ ] )</b>—Parentheses and brackets enclose a confederation set.</li> </ul> <p><b>NOTE:</b> In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>	All levels
<b>Route Labels</b>	Stack of labels carried in the BGP route update.	<b>detail extensive</b>
<b>Cluster list</b>	(For route reflected output only) Cluster ID sent by the route reflector.	<b>detail extensive</b>
<b>Originator ID</b>	(For route reflected output only) Address of routing device that originally sent the route to the route reflector.	<b>detail extensive</b>
<b>Communities</b>	Community path attribute for the route. See the output field table for the <a href="#">show route detail</a> command for all possible values for this field.	<b>detail extensive</b>
<b>AIGP</b>	Accumulated interior gateway protocol (AIGP) BGP attribute.	<b>detail extensive</b>

Table 194: show route advertising-protocol Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Attrset AS</b>	Number, local preference, and path of the autonomous system (AS) that originated the route. These values are stored in the <b>Attrset</b> attribute at the originating router.	<b>detail extensive</b>
<b>Layer2-info:encaps</b>	Layer 2 encapsulation (for example, VPLS).	<b>detail extensive</b>
<b>control flags</b>	Control flags: <b>none</b> or <b>Site Down</b> .	<b>detail extensive</b>
<b>mtu</b>	Maximum transmission unit (MTU) of the Layer 2 circuit.	<b>detail extensive</b>

## Sample Output

### show route advertising-protocol bgp (Layer 3 VPN)

```

user@host> show route advertising-protocol bgp 10.255.14.171
VPN-A.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.14.172/32 Self              1      100 I
VPN-B.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.14.181/32 Self              2      100 I

```

### show route advertising-protocol bgp detail

```

user@host> show route advertising-protocol bgp 111.222.1.3 detail
bgp20.inet.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
111.222.1.11/32 (1 entry, 1 announced)
  BGP group pe-pe type Internal
    Route Distinguisher: 111.255.14.11:69
    Advertised Label: 100000
    next hop: Self
    Localpref: 100
    AS path: 2 I
    Communities: target:69:20
    AIGP 210
111.8.0.0/16 (1 entry, 1 announced)
  BGP group pe-pe type Internal
    Route Distinguisher: 111.255.14.11:69
    Advertised Label: 100000
    Next hop: Self
    Localpref: 100
    AS path: 2 I
    Communities: target:69:20
    AIGP 210

```

### show route advertising-protocol bgp detail (Aggregate Extended Community Bandwidth)

```

user@host> show route advertising-protocol bgp 10.0.4.2 10.0.2.0/30 detail
inet.0: 20 destinations, 26 routes (20 active, 0 holddown, 0 hidden)
* 10.0.2.0/30 (2 entries, 1 announced)
  BGP group external2 type External
    Nexthop: Self

```

```
AS path: [65000] 65001 I
Communities: bandwidth:65000:80000000
```

### show route advertising-protocol bgp detail (Labeled Unicast)

```
user@host>show route advertising bgp 1.1.1.3 detail
inet.0: 69 destinations, 70 routes (69 active, 0 holddown, 0 hidden)
* 1.1.1.8/32 (2 entries, 2 announced)
BGP group ibgp type Internal
Route Labels: 1000123(top) 1000124 1000125 1000126
Nexthop: 1.1.1.4
MED: 7
Localpref: 100
AS path: [5] I
Cluster ID: 3.3.3.3
Originator ID: 1.1.1.1
Entropy label capable
inet6.0: 26 destinations, 28 routes (26 active, 0 holddown, 0 hidden)
* 100::1/128 (2 entries, 1 announced)
BGP group ibgp type Internal
Labels: 1000123(top) 1000124 1000125 1000126
Nexthop: ::ffff:1.1.1.4
Localpref: 100
AS path: [5] I
Cluster ID: 3.3.3.3
Originator ID: 1.1.1.1
```

### show route advertising-protocol bgp detail (Layer 2 VPN)

```
user@host> show route advertising-protocol bgp 192.168.24.1 detail
vpn-a.12vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
192.168.16.1:1:1:1/96 (1 entry, 1 announced)
BGP group int type Internal
Route Distinguisher: 192.168.16.1:1
Label-base : 32768, range : 3
Nexthop: Self
Localpref: 100
AS path: I
Communities: target:65412:100
AIGP 210
Layer2-info: encaps:VLAN, control flags:, mtu:
```

### show route advertising-protocol bgp detail (Layer 3 VPN)

```
user@host> show route advertising-protocol bgp 10.255.14.176 detail
vpna.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
* 10.49.0.0/30 (1 entry, 1 announced)
BGP group ibgp type Internal
Route Distinguisher: 10.255.14.174:2
VPN Label: 101264
Nexthop: Self
Localpref: 100
AS path: I
Communities: target:200:100
AIGP 210
AttrSet AS: 100
Localpref: 100
AS path: I
...
```

**show route advertising-protocol bgp extensive all (Next Hop Self with RIB-out IP Address)**

```
user@host> show route advertising-protocol bgp 200.0.0.2 170.0.1.0/24 extensive all
inet.0: 13 destinations, 19 routes (13 active, 0 holddown, 6 hidden)
  170.0.1.0/24 (2 entries, 1 announced)
    BGP group eBGP-INTEROP type External
      Nexthop: Self (rib-out 10.100.3.2)
      AS path: [4713] 200 I
  ...
```

## show route all

<b>List of Syntax</b>	<a href="#">Syntax on page 2209</a> <a href="#">Syntax (EX Series Switches) on page 2209</a>
<b>Syntax</b>	<pre>show route all &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route all</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	<p>Display information about all routes in all routing tables, including private, or internal, tables.</p>
<b>Options</b>	<p><b>none</b>—Display information about all routes in all routing tables, including private, or internal, tables.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	<p>view</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show route brief on page 2216</a></li> <li>• <a href="#">show route detail on page 2228</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show route all on page 2209</a>
<b>Output Fields</b>	<p>In Junos OS Release 9.5 and later, only the output fields for the <b>show route all</b> command display all routing tables, including private, or hidden, routing tables. The output field table of the <a href="#">show route</a> command does not display entries for private, or hidden, routing tables in Junos OS Release 9.5 and later.</p>

## Sample Output

### show route all

The following example displays a snippet of output from the **show route** command and then displays the same snippet of output from the **show route all** command:

```
user@host> show route
mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
0                *[MPLS/0] 2d 02:24:39, metric 1
```

```

1          Receive
          *[MPLS/0] 2d 02:24:39, metric 1
          Receive
2          *[MPLS/0] 2d 02:24:39, metric 1
          Receive
800017     *[VPLS/7] 1d 14:00:16
          > via vt-3/2/0.32769, Pop
800018     *[VPLS/7] 1d 14:00:26
          > via vt-3/2/0.32772, Pop

user@host> show route all
mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 2d 02:19:12, metric 1
          Receive
1          *[MPLS/0] 2d 02:19:12, metric 1
          Receive
2          *[MPLS/0] 2d 02:19:12, metric 1
          Receive
800017     *[VPLS/7] 1d 13:54:49
          > via vt-3/2/0.32769, Pop
800018     *[VPLS/7] 1d 13:54:59
          > via vt-3/2/0.32772, Pop
vt-3/2/0.32769 [VPLS/7] 1d 13:54:49
              Unusable
vt-3/2/0.32772 [VPLS/7] 1d 13:54:59
              Unusable
```

## show route aspath-regex

<b>List of Syntax</b>	<a href="#">Syntax on page 2211</a> <a href="#">Syntax (EX Series Switches) on page 2211</a>
<b>Syntax</b>	<pre>show route aspath-regex <i>regular-expression</i> &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route aspath-regex <i>regular-expression</i></pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	<p>Display the entries in the routing table that match the specified autonomous system (AS) path regular expression.</p>
<b>Options</b>	<p><b><i>regular-expression</i></b>—Regular expression that matches an entire AS path.</p> <p><b><i>logical-system (all   logical-system-name)</i></b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Additional Information</b>	<p>You can specify a regular expression as:</p> <ul style="list-style-type: none"> <li>• An individual AS number</li> <li>• A period wildcard used in place of an AS number</li> <li>• An AS path regular expression that is enclosed in parentheses</li> </ul> <p>You also can include the operators described in the table of AS path regular expression operators in the <i>Junos Policy Framework Configuration Guide</i>. The following list summarizes these operators:</p> <ul style="list-style-type: none"> <li>• <b><i>{m,n}</i></b>—At least <i>m</i> and at most <i>n</i> repetitions of the AS path term.</li> <li>• <b><i>{m}</i></b>—Exactly <i>m</i> repetitions of the AS path term.</li> <li>• <b><i>{m,}</i></b>—<i>m</i> or more repetitions of the AS path term.</li> <li>• <b><i>*</i></b>—Zero or more repetitions of an AS path term.</li> <li>• <b><i>+</i></b>—One or more repetitions of an AS path term.</li> <li>• <b><i>?</i></b>—Zero or one repetition of an AS path term.</li> <li>• <b><i>aspath_term   aspath_term</i></b>—Match one of the two AS path terms.</li> </ul> <p>When you specify more than one AS number or path term, or when you include an operator in the regular expression, enclose the entire regular expression in quotation marks. For example, to match any path that contains AS number 234, specify the following command:</p>

```
show route aspath-regex ".* 234.*"
```

**Required Privilege Level** view

**Related Documentation**

- *Example: Using AS Path Regular Expressions*

**List of Sample Output** [show route aspath-regex \(Matching a Specific AS Number\) on page 2212](#)  
[show route aspath-regex \(Matching Any Path with Two AS Numbers\) on page 2212](#)

**Output Fields** For information about output fields, see the output field table for the [show route](#) command.

## Sample Output

### show route aspath-regex (Matching a Specific AS Number)

```
user@host> show route aspath-regex 65477
inet.0: 46411 destinations, 46411 routes (46409 active, 0 holddown, 2 hidden)
+ = Active Route, - = Last Active, * = Both

111.222.1.0/25      *[BGP/170] 00:08:48, localpref 100, from 111.222.2.24
                   AS Path: [65477] ({65548 65536}) IGP
                   to 111.222.18.225 via fpa0.0(111.222.18.233)
111.222.1.128/25   *[IS-IS/15] 09:15:37, metric 37, tag 1
                   to 111.222.18.225 via fpa0.0(111.222.18.233)
                   [BGP/170] 00:08:48, localpref 100, from 111.222.2.24
                   AS Path: [65477] ({65548 65536}) IGP
                   to 111.222.18.225 via fpa0.0(111.222.18.233)
...
```

### show route aspath-regex (Matching Any Path with Two AS Numbers)

```
user@host> show route aspath-regex ".* 234 3561.*"

inet.0: 46351 destinations, 46351 routes (46349 active, 0 holddown, 2 hidden)
+ = Active Route, - = Last Active, * = Both

9.20.0.0/17        *[BGP/170] 01:35:00, localpref 100, from 131.103.20.49
                   AS Path: [666] 234 3561 2685 2686 Incomplete
                   to 192.156.169.1 via 192.156.169.14(so-0/0/0)
12.10.231.0/24     *[BGP/170] 01:35:00, localpref 100, from 131.103.20.49
                   AS Path: [666] 234 3561 5696 7369 IGP
                   to 192.156.169.1 via 192.156.169.14(so-0/0/0)
24.64.32.0/19      *[BGP/170] 01:34:59, localpref 100, from 131.103.20.49
                   AS Path: [666] 234 3561 6327 IGP
                   to 192.156.169.1 via 192.156.169.14(so-0/0/0)
...
```

## show route best

<b>List of Syntax</b>	<a href="#">Syntax on page 2213</a> <a href="#">Syntax (EX Series Switches) on page 2213</a>
<b>Syntax</b>	<pre>show route best <i>destination-prefix</i> &lt;brief   detail   extensive   terse&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route best <i>destination-prefix</i> &lt;brief   detail   extensive   terse&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	<p>Display the route in the routing table that is the best route to the specified address or range of addresses. The best route is the longest matching route.</p>
<b>Options</b>	<p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b>.</p> <p><b><i>destination-prefix</i></b>—Address or range of addresses.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show route brief on page 2216</a></li> <li>• <a href="#">show route detail on page 2228</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show route best on page 2213</a> <a href="#">show route best detail on page 2214</a> <a href="#">show route best extensive on page 2215</a> <a href="#">show route best terse on page 2215</a>
<b>Output Fields</b>	<p>For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.</p>

## Sample Output

### show route best

```
user@host> show route best 10.255.70.103
```

```

inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
10.255.70.103/32  * [OSPF/10] 1d 13:19:20, metric 2
                  > to 10.31.1.6 via ge-3/1/0.0
                  via so-0/3/0.0

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
10.255.70.103/32  * [RSVP/7] 1d 13:20:13, metric 2
                  > via so-0/3/0.0, label-switched-path green-r1-r3

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.0.0.0/8        * [Direct/0] 2d 01:43:34
                  > via fxp2.0
                  [Direct/0] 2d 01:43:34
                  > via fxp1.0

```

### show route best detail

```

user@host> show route best 10.255.70.103 detail
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
10.255.70.103/32 (1 entry, 1 announced)
    *OSPF    Preference: 10
              Next-hop reference count: 9
              Next hop: 10.31.1.6 via ge-3/1/0.0, selected
              Next hop: via so-0/3/0.0
              State: <Active Int>
              Local AS: 69
              Age: 1d 13:20:06      Metric: 2
              Area: 0.0.0.0
              Task: OSPF
              Announcement bits (2): 0-KRT 3-Resolve tree 2
              AS path: I

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
10.255.70.103/32 (1 entry, 1 announced)
    State: <FlashAll>
    *RSVP    Preference: 7
              Next-hop reference count: 5
              Next hop: via so-0/3/0.0 weight 0x1, selected
              Label-switched-path green-r1-r3
              Label operation: Push 100016
              State: <Active Int>
              Local AS: 69
              Age: 1d 13:20:59      Metric: 2
              Task: RSVP
              Announcement bits (1): 1-Resolve tree 2
              AS path: I

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
10.0.0.0/8 (2 entries, 0 announced)
    *Direct Preference: 0
              Next hop type: Interface
              Next-hop reference count: 1
              Next hop: via fxp2.0, selected
              State: <Active Int>

```

```

Age: 2d 1:44:20
Task: IF
AS path: I
Direct Preference: 0
Next hop type: Interface
Next-hop reference count: 1
Next hop: via fxp1.0, selected
State: <NotBest Int>
Inactive reason: No difference
Age: 2d 1:44:20
Task: IF
AS path: I

```

### show route best extensive

The output for the **show route best extensive** command is identical to that for the **show route best detail** command. For sample output, see [show route best detail on page 2214](#).

### show route best terse

```

user@host> show route best 10.255.70.103 terse
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 10.255.70.103/32  0  10           2           >10.31.1.6
                                     so-0/3/0.0

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 10.255.70.103/32  R   7           2           >so-0/3/0.0

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 10.0.0.0/8        D   0           0           >fxp2.0
                    D   0           0           >fxp1.0

```

## show route brief

---

List of Syntax	<a href="#">Syntax on page 2216</a> <a href="#">Syntax (EX Series Switches) on page 2216</a>
Syntax	show route brief <destination-prefix> <logical-system (all   logical-system-name)>
Syntax (EX Series Switches)	show route brief <destination-prefix>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display brief information about the active entries in the routing tables.
Options	<b>none</b> —Display all active entries in the routing table.  <b>destination-prefix</b> —(Optional) Display active entries for the specified address or range of addresses.  <b>logical-system (all   logical-system-name)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">show route all on page 2209</a></li><li>• <a href="#">show route best on page 2213</a></li></ul>
List of Sample Output	<a href="#">show route brief on page 2216</a>
Output Fields	For information about output fields, see the Output Field table of the <a href="#">show route</a> command.

## Sample Output

### show route brief

```
user@host> show route brief
inet.0: 10 destinations, 10 routes (9 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

0.0.0.0/0          *[Static/5] 1w5d 20:30:29
                   Discard
10.255.245.51/32  *[Direct/0] 2w4d 13:11:14
                   > via 100.0
```

```
172.16.0.0/12      *[Static/5] 2w4d 13:11:14
                  > to 192.168.167.254 via fxp0.0
192.168.0.0/18     *[Static/5] 1w5d 20:30:29
                  > to 192.168.167.254 via fxp0.0
192.168.40.0/22    *[Static/5] 2w4d 13:11:14
                  > to 192.168.167.254 via fxp0.0
192.168.64.0/18    *[Static/5] 2w4d 13:11:14
                  > to 192.168.167.254 via fxp0.0
192.168.164.0/22   *[Direct/0] 2w4d 13:11:14
                  > via fxp0.0
192.168.164.51/32  *[Local/0] 2w4d 13:11:14
                  Local via fxp0.0
207.17.136.192/32 *[Static/5] 2w4d 13:11:14
                  > to 192.168.167.254 via fxp0.0
green.inet.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
100.101.0.0/16     *[Direct/0] 1w5d 20:30:28
                  > via fe-0/0/3.0
100.101.2.3/32     *[Local/0] 1w5d 20:30:28
                  Local via fe-0/0/3.0
172.16.233.5/32    *[OSPF/10] 1w5d 20:30:29, metric 1
                  MultiRecv
```

## show route ccc

---

<b>Syntax</b>	<code>show route ccc ccc</code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display circuit cross-connect (CCC) entries in the Multiprotocol Link Switching (MPLS) routing table.
<b>Options</b>	<b>ccc</b> —Name of an entry with a circuit cross-connect interface.  <b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show connections</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show route ccc extensive on page 2218</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route ccc extensive

```
user@host> show route ccc fe-0/1/0.600 extensive
mpls.0: 19 destinations, 19 routes (19 active, 0 holddown, 0 hidden)
fe-0/1/2.600 (1 entry, 1 announced)
TSI:
KRT in-kernel fe-0/1/2.600.0      /16 -> {0.0.0.0}
      *CCC      Preference: 7
                Next-hop reference count: 2
                Next hop: via so-0/0/3.0 weight 0x1, selected
                Label operation: Push 101424
                State: <Active Int>
                Local AS: 100
                Age: 28:13 Metric: 3
                Task: MPLS
                Announcement bits (1): 0-KRT
                AS path: I
```

## show route community

<b>List of Syntax</b>	<a href="#">Syntax on page 2219</a> <a href="#">Syntax (EX Series Switches) on page 2219</a>
<b>Syntax</b>	<pre>show route community <i>as-number:community-value</i> &lt;brief   detail   extensive   terse&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route community <i>as-number:community-value</i> &lt;brief   detail   extensive   terse&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	<p>Display the route entries in each routing table that are members of a Border Gateway Protocol (BGP) community.</p>
<b>Options</b>	<p><b><i>as-number:community-value</i></b>—One or more community identifiers. <b><i>as-number</i></b> is the AS number, and <b><i>community-value</i></b> is the community identifier. When you specify more than one community identifier, enclose the identifiers in double quotation marks. Community identifiers can include wildcards.</p> <p>For example:</p> <pre>user@host&gt; show route table inet.0 protocol bgp community "12083:6015" community "12083:65551"</pre> <p>or</p> <pre>user@host&gt; show route table inet.0 protocol bgp community [12083:6014 12083:65551]</pre> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Additional Information</b>	<p>Specifying the community option displays all routes matching the community found within the routing table. The community option does not limit the output to only the routes being advertised to the neighbor after any egress routing policy.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show route detail on page 2228</a></li> </ul>

List of Sample Output [show route community on page 2220](#)

**Output Fields** For information about output fields, see the output field tables for the [show route](#) command, the [show route detail](#) command, the [show route extensive](#) command, or the [show route terse](#) command.

## Sample Output

### [show route community](#)

```
user@host> show route community 234:80
inet.0: 46511 destinations, 46511 routes (46509 active, 0 holddown, 2 hidden)
+ = Active Route, - = Last Active, * = Both

172.16.4.0/8          *[BGP/170] 03:33:07, localpref 100, from 131.103.20.49
                      AS Path: {666} 234 2548 1 IGP
                      to 192.156.169.1 via 192.156.169.14(so-0/0/0)
172.16.6.0/8          *[BGP/170] 03:33:07, localpref 100, from 131.103.20.49
                      AS Path: {666} 234 2548 568 721 Incomplete
                      to 192.156.169.1 via 192.156.169.14(so-0/0/0)
172.16.92.0/16        *[BGP/170] 03:33:06, localpref 100, from 131.103.20.49
                      AS Path: {666} 234 2548 1673 1675 1747 IGP
                      to 192.156.169.1 via 192.156.169.14(so-0/0/0)
```

## show route community-name

<b>List of Syntax</b>	<a href="#">Syntax on page 2221</a> <a href="#">Syntax (EX Series Switches) on page 2221</a>
<b>Syntax</b>	show route community-name <i>community-name</i> <brief   detail   extensive   terse> <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switches)</b>	show route community-name <i>community-name</i> <brief   detail   extensive   terse>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Display the route entries in each routing table that are members of a Border Gateway Protocol (BGP) community, specified by a community name.
<b>Options</b>	<i>community-name</i> —Name of the community.  <b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route community-name on page 2221</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route community-name

```

user@host> show route community-name red-com
inet.0: 17 destinations, 17 routes (16 active, 0 holddown, 1 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

instance1.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.245.212/32  *[BGP/170] 00:04:40, localpref 100, from 10.255.245.204
                  AS path: 300 I

```

```
172.16.20.20/32      > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix
                    *[BGP/170] 00:04:40, localpref 100, from 10.255.245.204
                    AS path: I
172.16.100.0/24      > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix
                    *[BGP/170] 00:04:40, localpref 100, from 10.255.245.204
                    AS path: I
                    > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

bgp.l3vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.245.204:10:10.255.245.212/32
                    *[BGP/170] 00:06:40, localpref 100, from 10.255.245.204
                    AS path: 300 I
                    > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix
10.255.245.204:10:172.16.20.20/32
                    *[BGP/170] 00:36:02, localpref 100, from 10.255.245.204
                    AS path: I
                    > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix
10.255.245.204:10:100.1.4.0/24
                    *[BGP/170] 00:36:02, localpref 100, from 10.255.245.204
                    AS path: I
                    > to 172.16.100.1 via ge-1/1/0.0, label-switched-path to_fix

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

instance1.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

## show route damping

<b>List of Syntax</b>	<a href="#">Syntax on page 2223</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 2223</a>
<b>Syntax</b>	<pre>show route damping (decayed   history   suppressed) &lt;brief   detail   extensive   terse&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>show route damping (decayed   history   suppressed) &lt;brief   detail   extensive   terse&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display the BGP routes for which updates might have been reduced because of route flap damping.
<b>Options</b>	<p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p><b>decayed</b>—Display route damping entries that might no longer be valid, but are not suppressed.</p> <p><b>history</b>—Display entries that have already been withdrawn, but have been logged.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>suppressed</b>—Display entries that have been suppressed and are no longer being installed into the forwarding table or exported by routing protocols.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear bgp damping on page 1668</a></li> <li>• <a href="#">show policy damping on page 1714</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show route damping decayed detail on page 2226</a> <a href="#">show route damping history on page 2227</a> <a href="#">show route damping history detail on page 2227</a>
<b>Output Fields</b>	<p><a href="#">Table 195 on page 2224</a> lists the output fields for the <b>show route damping</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 195: show route damping Output Fields

Field Name	Field Description	Level of Output
<i>routing-table-name</i>	Name of the routing table—for example, <b>inet.0</b> .	All levels
<b>destinations</b>	Number of destinations for which there are routes in the routing table.	All levels
<i>number routes</i>	Number of routes in the routing table and total number of routes in the following states: <ul style="list-style-type: none"> <li>• <b>active</b></li> <li>• <b>holdddown</b> (routes that are in a pending state before being declared inactive)</li> <li>• <b>hidden</b> (the routes are not used because of a routing policy)</li> </ul>	All levels
<i>destination-prefix (entry, announced)</i>	Destination prefix. The <b>entry</b> value is the number of routes for this destination, and the <b>announced</b> value is the number of routes being announced for this destination.	<b>detail extensive</b>
<i>[protocol, preference]</i>	Protocol from which the route was learned and the preference value for the route. <ul style="list-style-type: none"> <li>• <b>+</b>—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table.</li> <li>• <b>-</b>—A hyphen indicates the last active route.</li> <li>• <b>*</b>—An asterisk indicates that the route is both the active and the last active route. An asterisk before a <b>to</b> line indicates the best subpath to the route.</li> </ul> <p>In every routing metric except for the BGP <b>LocalPref</b> attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the <b>LocalPref</b> value in the <b>Preference2</b> field. For example, if the <b>LocalPref</b> value for Route 1 is 100, the <b>Preference2</b> value is -101. If the <b>LocalPref</b> value for Route 2 is 155, the <b>Preference2</b> value is -156. Route 2 is preferred because it has a higher <b>LocalPref</b> value and a lower <b>Preference2</b> value.</p>	All levels
<b>Next-hop reference count</b>	Number of references made to the next hop.	<b>detail extensive</b>
<b>Source</b>	IP address of the route source.	<b>detail extensive</b>
<b>Next hop</b>	Network layer address of the directly reachable neighboring system.	<b>detail extensive</b>
<b>via</b>	Interface used to reach the next hop. If there is more than one interface available to the next hop, the interface that is actually used is followed by the word <b>Selected</b> .	<b>detail extensive</b>
<b>Protocol next hop</b>	Network layer address of the remote routing device that advertised the prefix. This address is used to derive a forwarding next hop.	<b>detail extensive</b>
<b>Indirect next hop</b>	Index designation used to specify the mapping between protocol next hops, tags, kernel export policy, and the forwarding next hops.	<b>detail extensive</b>
<b>State</b>	Flags for this route. For a description of possible values for this field, see the output field table for the <a href="#">show route detail</a> command.	<b>detail extensive</b>

Table 195: show route damping Output Fields (continued)

Field Name	Field Description	Level of Output
Local AS	AS number of the local routing device.	detail extensive
Peer AS	AS number of the peer routing device.	detail extensive
Age	How long the route has been known.	detail extensive
Metric	Metric for the route.	detail extensive
Task	Name of the protocol that has added the route.	detail extensive
Announcement bits	List of protocols that announce this route. <i>n-Resolve inet</i> indicates that the route is used for route resolution for next hops found in the routing table. <i>n</i> is an index used by Juniper Networks customer support only.	detail extensive
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li>• I—IGP.</li> <li>• E—EGP.</li> <li>• ?—Incomplete; typically, the AS path was aggregated.</li> </ul> <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> <li>• [ ]—Brackets enclose the local AS number associated with the AS path if more than one AS number is configured on the routing device or if AS path prepending is configured.</li> <li>• { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order.</li> <li>• ( )—Parentheses enclose a confederation.</li> <li>• ( [ ] )—Parentheses and brackets enclose a confederation set.</li> </ul> <p><b>NOTE:</b> In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>	All levels
to	Next hop to the destination. An angle bracket (>) indicates that the route is the selected route.	brief none
via	Interface used to reach the next hop. If there is more than one interface available to the next hop, the interface that is actually used is followed by the word <b>Selected</b> .	brief none
Communities	Community path attribute for the route. See the output field table for the <a href="#">show route detail</a> command.	detail extensive
Localpref	Local preference value included in the route.	All levels
Router ID	BGP router ID as advertised by the neighbor in the open message.	detail extensive

Table 195: show route damping Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Merit (last update/now)</b>	Last updated and current figure-of-merit value.	<b>detail extensive</b>
<b>damping-parameters</b>	Name that identifies the damping parameters used, which is defined in the damping statement at the <b>[edit policy-options]</b> hierarchy level.	<b>detail extensive</b>
<b>Last update</b>	Time of most recent change in path attributes.	<b>detail extensive</b>
<b>First update</b>	Time of first change in path attributes, which started the route damping process.	<b>detail extensive</b>
<b>Flaps</b>	Number of times the route has gone up or down or its path attributes have changed.	<b>detail extensive</b>
<b>Suppressed</b>	( <b>suppressed</b> keyword only) This route is currently suppressed. A suppressed route does not appear in the forwarding table and routing protocols do not export it.	All levels
<b>Reusable in</b>	( <b>suppressed</b> keyword only) Time when a suppressed route will again be available.	All levels
<b>Preference will be</b>	( <b>suppressed</b> keyword only) Preference value that will be applied to the route when it is again active.	All levels

## Sample Output

### show route damping decayed detail

```

user@host> show route damping decayed detail
inet.0: 173319 destinations, 1533668 routes (172625 active, 4 holddown, 108083
hidden)
10.0.111.0/24 (7 entries, 1 announced)
  *BGP      Preference: 170/-101
            Next-hop reference count: 151973
            Source: 172.23.2.129
            Next hop: via so-1/2/0.0
            Next hop: via so-5/1/0.0, selected
            Next hop: via so-6/0/0.0
            Protocol next hop: 172.23.2.129
            Indirect next hop: 89a1a00 264185
            State: <Active Ext>
            Local AS: 64500 Peer AS: 64490
            Age: 3:28      Metric2: 0
            Task: BGP_64490.172.23.2.129+179
            Announcement bits (6): 0-KRT 1-RT 4-KRT 5-BGP.0.0.0.0+179

  6-Resolve tree 2 7-Resolve tree 3
    AS path: 64499 64510 645511 645511 645511 645511 I ()
    Communities: 65551:390 65551:2000 65551:3000 65550:701
    Localpref: 100
    Router ID: 172.23.2.129
    Merit (last update/now): 1934/1790
    damping-parameters: damping-high

```

```

Last update:      00:03:28 First update:      00:06:40
Flaps: 2

```

### show route damping history

```

user@host> show route damping history
inet.0: 173320 destinations, 1533529 routes (172624 active, 6 holddown, 108122
hidden)
+ = Active Route, - = Last Active, * = Both

10.108.0.0/15      [BGP ] 2d 22:47:58, localpref 100
                   AS path: 64220 65541 65542 I
                   > to 192.168.60.85 via so-3/1/0.0

```

### show route damping history detail

```

user@host> show route damping history detail
inet.0: 173319 destinations, 1533435 routes (172627 active, 2 holddown, 108105
hidden)
10.108.0.0/15 (3 entries, 1 announced)
    BGP                /-101
        Next-hop reference count: 69058
        Source: 192.168.60.85
        Next hop: 192.168.60.85 via so-3/1/0.0, selected
        State: <Hidden Ext>
        Inactive reason: Unusable path
        Local AS: 64500 Peer AS: 64220
        Age: 2d 22:48:10
        Task: BGP_64220.192.168.60.85+179
        AS path: 64220 65541 65542 I ()
        Communities: 65541:390 65541:2000 65541:3000 65504:3561
        Localpref: 100
        Router ID: 192.168.80.25
        Merit (last update/now): 1000/932
        damping-parameters: set-normal
        Last update:      00:01:05 First update:      00:01:05
        Flaps: 1

```

## show route detail

<b>List of Syntax</b>	<a href="#">Syntax on page 2228</a> <a href="#">Syntax (EX Series Switches) on page 2228</a>
<b>Syntax</b>	<pre>show route detail &lt;destination-prefix&gt; &lt;logical-system (all   logical-system-name)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route detail &lt;destination-prefix&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display detailed information about the active entries in the routing tables.
<b>Options</b>	<p><b>none</b>—Display all active entries in the routing table on all systems.</p> <p><b>destination-prefix</b>—(Optional) Display active entries for the specified address or range of addresses.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route detail on page 2239</a> <a href="#">show route detail (with BGP Multipath) on page 2245</a> <a href="#">show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 2246</a> <a href="#">show route label detail (Multipoint LDP with Multicast-Only Fast Reroute) on page 2246</a>
<b>Output Fields</b>	<p><a href="#">Table 196 on page 2228</a> describes the output fields for the <b>show route detail</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 196: show route detail Output Fields*

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> <li>• <b>active</b> (routes that are active)</li> <li>• <b>holddown</b> (routes that are in the pending state before being declared inactive)</li> <li>• <b>hidden</b> (routes that are not used because of a routing policy)</li> </ul>
<i>route-destination</i> (entry, announced)	<p>Route destination (for example:10.0.0.1/24). The <b>entry</b> value is the number of routes for this destination, and the <b>announced</b> value is the number of routes being announced for this destination. Sometimes the route destination is presented in another format, such as:</p> <ul style="list-style-type: none"> <li>• <b>MPLS-label</b> (for example, 80001).</li> <li>• <b>interface-name</b> (for example, ge-1/0/2).</li> <li>• <b>neighbor-address:control-word-status:encapsulation type:vc-id:source</b> (Layer 2 circuit only; for example, 10.1.1.195:NoCtrlWord:1:1:Local/96). <ul style="list-style-type: none"> <li>• <b>neighbor-address</b>—Address of the neighbor.</li> <li>• <b>control-word-status</b>—Whether the use of the control word has been negotiated for this virtual circuit: <b>NoCtrlWord</b> or <b>CtrlWord</b>.</li> <li>• <b>encapsulation type</b>—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport.</li> <li>• <b>vc-id</b>—Virtual circuit identifier.</li> <li>• <b>source</b>—Source of the advertisement: <b>Local</b> or <b>Remote</b>.</li> <li>• <b>source</b>—Source of the advertisement: <b>Local</b> or <b>Remote</b>.</li> </ul> </li> </ul>
<i>label stacking</i>	<p>(Next-to-the-last-hop routing device for MPLS only) Depth of the MPLS label stack, where the label-popping operation is needed to remove one or more labels from the top of the stack. A pair of routes is displayed, because the pop operation is performed only when the stack depth is two or more labels.</p> <ul style="list-style-type: none"> <li>• <b>S=0 route</b> indicates that a packet with an incoming label stack depth of 2 or more exits this routing device with one fewer label (the label-popping operation is performed).</li> <li>• If there is no <b>S=</b> information, the route is a normal MPLS route, which has a stack depth of 1 (the label-popping operation is not performed).</li> </ul>

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
[protocol, preference]	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> <li>• +—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table.</li> <li>• - —A hyphen indicates the last active route.</li> <li>• *—An asterisk indicates that the route is both the active and the last active route. An asterisk before a to line indicates the best subpath to the route.</li> </ul> <p>In every routing metric except for the BGP <b>LocalPref</b> attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the <b>LocalPref</b> value in the <b>Preference2</b> field. For example, if the <b>LocalPref</b> value for Route 1 is 100, the <b>Preference2</b> value is -101. If the <b>LocalPref</b> value for Route 2 is 155, the <b>Preference2</b> value is -156. Route 2 is preferred because it has a higher <b>LocalPref</b> value.</p> <p><b>Preference2</b> values are signed integers, that is, <b>Preference2</b> values can be either positive or negative values. However, Junos OS evaluates <b>Preference2</b> values as unsigned integers that are represented by positive values. Based on the <b>Preference2</b> values, Junos OS evaluates a preferred route differently in the following scenarios:</p> <ul style="list-style-type: none"> <li>• <b>Both Signed Preference2 values</b> <ul style="list-style-type: none"> <li>• Route A = -101</li> <li>• Route B = -156</li> </ul> <p>Where both the <b>Preference2</b> values are signed, Junos OS evaluates only the unsigned value of <b>Preference2</b> and Route A, which has a lower <b>Preference2</b> value is preferred.</p> </li> <li>• <b>Unsigned Preference2 values</b> <p>Now consider both unsigned <b>Preference2</b> values:</p> <ul style="list-style-type: none"> <li>• Route A = 4294967096</li> <li>• Route B = 200</li> </ul> <p>Here, Junos OS considers the lesser <b>Preference2</b> value and Route B with a <b>Preference2</b> value of 200 is preferred because it is less than 4294967096.</p> </li> <li>• <b>Combination of signed and unsigned Preference2 values</b> <p>When <b>Preference2</b> values of two routes are compared, and for one route the <b>Preference2</b> is a signed value, and for the other route it is an unsigned value, Junos OS prefers the route with the positive <b>Preference2</b> value over the negative <b>Preference2</b> value. For example, consider the following signed and unsigned <b>Preference2</b> values:</p> <ul style="list-style-type: none"> <li>• Route A = -200</li> <li>• Route B = 200</li> </ul> <p>In this case, Route B with a <b>Preference2</b> value of 200 is preferred although this value is greater than -200, because Junos OS evaluates only the unsigned value of the <b>Preference2</b> value.</p> </li> </ul>
Level	(IS-IS only). In IS-IS, a single AS can be divided into smaller groups called areas. Routing between areas is organized hierarchically, allowing a domain to be administratively divided into smaller areas. This organization is accomplished by configuring Level 1 and Level 2 intermediate systems. Level 1 systems route within an area. When the destination is outside an area, they route toward a Level 2 system. Level 2 intermediate systems route between areas and toward other ASs.
Route Distinguisher	IP subnet augmented with a 64-bit prefix.
PMSI	Provider multicast service interface (MVPN routing table).

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
<b>Next-hop type</b>	Type of next hop. For a description of possible values for this field, see <a href="#">Table 197 on page 2234</a> .
<b>Next-hop reference count</b>	Number of references made to the next hop.
<b>Flood nexthop branches exceed maximum message</b>	Indicates that the number of flood next-hop branches exceeded the system limit of 32 branches, and only a subset of the flood next-hop branches were installed in the kernel.
<b>Source</b>	IP address of the route source.
<b>Next hop</b>	Network layer address of the directly reachable neighboring system.
<b>via</b>	<p>Interface used to reach the next hop. If there is more than one interface available to the next hop, the name of the interface that is actually used is followed by the word <b>Selected</b>. This field can also contain the following information:</p> <ul style="list-style-type: none"> <li>• <b>Weight</b>—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.</li> <li>• <b>Balance</b>—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.</li> </ul>
<b>Label-switched-path lsp-path-name</b>	Name of the LSP used to reach the next hop.
<b>Label operation</b>	MPLS label and operation occurring at this routing device. The operation can be <b>pop</b> (where a label is removed from the top of the stack), <b>push</b> (where another label is added to the label stack), or <b>swap</b> (where a label is replaced by another label).
<b>Interface</b>	(Local only) Local interface name.
<b>Protocol next hop</b>	Network layer address of the remote routing device that advertised the prefix. This address is used to derive a forwarding next hop.
<b>Indirect next hop</b>	Index designation used to specify the mapping between protocol next hops, tags, kernel export policy, and the forwarding next hops.
<b>State</b>	State of the route (a route can be in more than one state). See <a href="#">Table 198 on page 2236</a> .
<b>Local AS</b>	AS number of the local routing device.
<b>Age</b>	How long the route has been known.
<b>AIGP</b>	Accumulated interior gateway protocol (AIGP) BGP attribute.

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
<b>Metric</b>	Cost value of the indicated route. For routes within an AS, the cost is determined by IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.
<b>MED-plus-IGP</b>	Metric value for BGP path selection to which the IGP cost to the next-hop destination has been added.
<b>TTL-Action</b>	For MPLS LSPs, state of the TTL propagation attribute. Can be enabled or disabled for all RSVP-signaled and LDP-signaled LSPs or for specific VRF routing instances.  For sample output, see <a href="#">show route table</a> .
<b>Task</b>	Name of the protocol that has added the route.
<b>Announcement bits</b>	The number of BGP peers or protocols to which Junos OS has announced this route, followed by the list of the recipients of the announcement. Junos OS can also announce the route to the KRT for installing the route into the Packet Forwarding Engine, to a resolve tree, a L2 VC, or even a VPN. For example, <b>n-Resolve inet</b> indicates that the specified route is used for route resolution for next hops found in the routing table.  <ul style="list-style-type: none"> <li><b>n</b>—An index used by Juniper Networks customer support only.</li> </ul>
<b>AS path</b>	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li><b>I</b>—IGP.</li> <li><b>E</b>—EGP.</li> <li><b>Recorded</b>—The AS path is recorded by the sample process (sampled).</li> <li><b>?</b>—Incomplete; typically, the AS path was aggregated.</li> </ul> <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> <li><b>[ ]</b>—Brackets enclose the number that precedes the AS path. This number represents the number of ASs present in the AS path, when calculated as defined in RFC 4271. This value is used in the AS-path merge process, as defined in RFC 4893.</li> <li><b>[ ]</b>—If more than one AS number is configured on the routing device, or if AS path prepending is configured, brackets enclose the local AS number associated with the AS path.</li> <li><b>{ }</b>—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order.</li> <li><b>( )</b>—Parentheses enclose a confederation.</li> <li><b>( [ ] )</b>—Parentheses and brackets enclose a confederation set.</li> </ul> <p><b>NOTE:</b> In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
<b>validation-state</b>	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> <li>• <b>Invalid</b>—Indicates that the prefix is found, but either the corresponding AS received from the EBGp peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database.</li> <li>• <b>Unknown</b>—Indicates that the prefix is not among the prefixes or prefix ranges in the database.</li> <li>• <b>Unverified</b>—Indicates that the origin of the prefix is not verified against the database. This is because the database got populated and the validation is not called for in the BGP import policy, although origin validation is enabled, or the origin validation is not enabled for the BGP peers.</li> <li>• <b>Valid</b>—Indicates that the prefix and autonomous system pair are found in the database.</li> </ul>
ORR Generation-ID	Displays the optimal route reflection (ORR) generation identifier. ISIS and OSPF interior gateway protocol (IGP) updates filed whenever any of the corresponding ORR route has its metric valued changed, or if the ORR route is added or deleted.
FECs bound to route	Point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured.
Primary Upstream	When multipoint LDP with multicast-only fast reroute (MoFRR) is configured, the primary upstream path. MoFRR transmits a multicast join message from a receiver toward a source on a primary path, while also transmitting a secondary multicast join message from the receiver toward the source on a backup path.
RPF Nexthops	When multipoint LDP with MoFRR is configured, the reverse-path forwarding (RPF) next-hop information. Data packets are received from both the primary path and the secondary paths. The redundant packets are discarded at topology merge points due to the RPF checks.
Label	Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.
weight	Value used to distinguish MoFRR primary and backup routes. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.
VC Label	MPLS label assigned to the Layer 2 circuit virtual connection.
MTU	Maximum transmission unit (MTU) of the Layer 2 circuit.
VLAN ID	VLAN identifier of the Layer 2 circuit.
Prefixes bound to route	Forwarding equivalent class (FEC) bound to this route. Applicable only to routes installed by LDP.
Communities	Community path attribute for the route. See <a href="#">Table 199 on page 2238</a> for all possible values for this field.
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).
control flags	Control flags: <b>none</b> or <b>Site Down</b> .
mtu	Maximum transmission unit (MTU) information.

Table 196: show route detail Output Fields (continued)

Field Name	Field Description
<b>Label-Base, range</b>	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.
<b>status vector</b>	Layer 2 VPN and VPLS network layer reachability information (NLRI).
<b>Accepted Multipath</b>	Current active path when BGP multipath is configured.
<b>Accepted LongLivedStale</b>	The LongLivedStale flag indicates that the route was marked LLGR-stale by this router, as part of the operation of LLGR receiver mode. Either this flag or the LongLivedStaleImport flag may be displayed for a route. Neither of these flags are displayed at the same time as the Stale (ordinary GR stale) flag.
<b>Accepted LongLivedStaleImport</b>	<p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy. Either this flag or the LongLivedStale flag may be displayed for a route. Neither of these flags are displayed at the same time as the Stale (ordinary GR stale) flag.</p> <p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and import into the inet.0 routing table</p>
<b>ImportAccepted LongLivedStaleImport</b>	<p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and imported into the inet.0 routing table</p> <p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy.</p>
<b>Accepted MultipathContrib</b>	Path currently contributing to BGP multipath.
<b>Localpref</b>	Local preference value included in the route.
<b>Router ID</b>	BGP router ID as advertised by the neighbor in the open message.
<b>Primary Routing Table</b>	In a routing table group, the name of the primary routing table in which the route resides.
<b>Secondary Tables</b>	In a routing table group, the name of one or more secondary tables in which the route resides.

[Table 197 on page 2234](#) describes all possible values for the Next-hop Types output field.

Table 197: Next-hop Types Output Field Values

Next-Hop Type	Description
<b>Broadcast (bcast)</b>	Broadcast next hop.
<b>Deny</b>	Deny next hop.
<b>Discard</b>	Discard next hop.
<b>Dynamic List</b>	Dynamic list next hop

*Table 197: Next-hop Types Output Field Values (continued)*

Next-Hop Type	Description
<b>Flood</b>	Flood next hop. Consists of components called branches, up to a maximum of 32 branches. Each flood next-hop branch sends a copy of the traffic to the forwarding interface. Used by point-to-multipoint RSVP, point-to-multipoint LDP, point-to-multipoint CCC, and multicast.
<b>Hold</b>	Next hop is waiting to be resolved into a unicast or multicast type.
<b>Indexed (idxd)</b>	Indexed next hop.
<b>Indirect (indr)</b>	Used with applications that have a protocol next hop address that is remote. You are likely to see this next-hop type for internal BGP (IBGP) routes when the BGP next hop is a BGP neighbor that is not directly connected.
<b>Interface</b>	Used for a network address assigned to an interface. Unlike the router next hop, the interface next hop does not reference any specific node on the network.
<b>Local (locl)</b>	Local address on an interface. This next-hop type causes packets with this destination address to be received locally.
<b>Multicast (mcst)</b>	Wire multicast next hop (limited to the LAN).
<b>Multicast discard (mdsc)</b>	Multicast discard.
<b>Multicast group (mgrp)</b>	Multicast group member.
<b>Receive (recv)</b>	Receive.
<b>Reject (rjct)</b>	Discard. An ICMP unreachable message was sent.
<b>Resolve (rslv)</b>	Resolving next hop.
<b>Routed multicast (mcrt)</b>	Regular multicast next hop.
<b>Router</b>	<p>A specific node or set of nodes to which the routing device forwards packets that match the route prefix.</p> <p>To qualify as next-hop type router, the route must meet the following criteria:</p> <ul style="list-style-type: none"> <li>• Must not be a direct or local subnet for the routing device.</li> <li>• Must have a next hop that is directly connected to the routing device.</li> </ul>
<b>Table</b>	Routing table next hop.

*Table 197: Next-hop Types Output Field Values (continued)*

Next-Hop Type	Description
Unicast (ucst)	Unicast.
Unilist (ulst)	List of unicast next hops. A packet sent to this next hop goes to any next hop in the list.

Table 198 on page 2236 describes all possible values for the State output field. A route can be in more than one state (for example, <Active NoReadvrt Int Ext>).

*Table 198: State Output Field Values*

Value	Description
Accounting	Route needs accounting.
Active	Route is active.
Always Compare MED	Path with a lower multiple exit discriminator (MED) is available.
AS path	Shorter AS path is available.
Cisco Non-deterministic MED selection	Cisco nondeterministic MED is enabled, and a path with a lower MED is available.
Clone	Route is a clone.
Cluster list length	Length of cluster list sent by the route reflector.
Delete	Route has been deleted.
Ex	Exterior route.
Ext	BGP route received from an external BGP neighbor.
FlashAll	Forces all protocols to be notified of a change to any route, active or inactive, for a prefix. When not set, protocols are informed of a prefix only when the active route changes.
Hidden	Route not used because of routing policy.
IfCheck	Route needs forwarding RPF check.
IGP metric	Path through next hop with lower IGP metric is available.
Inactive reason	Flags for this route, which was not selected as best for a particular destination.
Initial	Route being added.

Table 198: State Output Field Values (continued)

Value	Description
<b>Int</b>	Interior route.
<b>Int Ext</b>	BGP route received from an internal BGP peer or a BGP confederation peer.
<b>Interior &gt; Exterior &gt; Exterior via Interior</b>	Direct, static, IGP, or EBGp path is available.
<b>Local Preference</b>	Path with a higher local preference value is available.
<b>Martian</b>	Route is a martian (ignored because it is obviously invalid).
<b>MartianOK</b>	Route exempt from martian filtering.
<b>Next hop address</b>	Path with lower metric next hop is available.
<b>No difference</b>	Path from neighbor with lower IP address is available.
<b>NoReadvrt</b>	Route not to be advertised.
<b>NotBest</b>	Route not chosen because it does not have the lowest MED.
<b>Not Best in its group</b>	Incoming BGP AS is not the best of a group (only one AS can be the best).
<b>NotInstall</b>	Route not to be installed in the forwarding table.
<b>NSR-incapable</b>	Route added by non-NSR supported protocols.
<b>Number of gateways</b>	Path with a greater number of next hops is available.
<b>Origin</b>	Path with a lower origin code is available.
<b>Pending</b>	Route pending because of a hold-down configured on another route.
<b>Programmed</b>	Route installed programatically by on-box or off-box applications using API.
<b>Release</b>	Route scheduled for release.
<b>RIB preference</b>	Route from a higher-numbered routing table is available.
<b>Route Distinguisher</b>	64-bit prefix added to IP subnets to make them unique.
<b>Route Metric or MED comparison</b>	Route with a lower metric or MED is available.
<b>Route Preference</b>	Route with lower preference value is available

*Table 198: State Output Field Values (continued)*

Value	Description
<b>Router ID</b>	Path through a neighbor with lower ID is available.
<b>Secondary</b>	Route not a primary route.
<b>Unusable path</b>	Path is not usable because of one of the following conditions: <ul style="list-style-type: none"> <li>• The route is damped.</li> <li>• The route is rejected by an import policy.</li> <li>• The route is unresolved.</li> </ul>
<b>Update source</b>	Last tiebreaker is the lowest IP address value.
<b>ProtectionCand</b>	Indicates paths requesting protection.
<b>ProtectionPath</b>	Indicates the route entry that can be used as a protection path.

[Table 199 on page 2238](#) describes the possible values for the Communities output field.

*Table 199: Communities Output Field Values*

Value	Description
<i>area-number</i>	4 bytes, encoding a 32-bit area number. For AS-external routes, the value is <b>0</b> . A nonzero value identifies the route as internal to the OSPF domain, and as within the identified area. Area numbers are relative to a particular OSPF domain.
<b>bandwidth: local AS number:link-bandwidth-number</b>	Link-bandwidth community value used for unequal-cost load balancing. When BGP has several candidate paths available for multipath purposes, it does not perform unequal-cost load balancing according to the link-bandwidth community unless all candidate paths have this attribute.
<b>domain-id</b>	Unique configurable number that identifies the OSPF domain.
<b>domain-id-vendor</b>	Unique configurable number that further identifies the OSPF domain.
<i>link-bandwidth-number</i>	Link-bandwidth number: from <b>0</b> through <b>4,294,967,295</b> (bytes per second).
<i>local AS number</i>	Local AS number: from <b>1</b> through <b>65,535</b> .
<i>options</i>	1 byte. Currently this is only used if the route type is <b>5</b> or <b>7</b> . Setting the least significant bit in the field indicates that the route carries a type 2 metric.
<b>origin</b>	(Used with VPNs) Identifies where the route came from.
<i>ospf-route-type</i>	1 byte, encoded as <b>1</b> or <b>2</b> for intra-area routes (depending on whether the route came from a type 1 or a type 2 LSA); <b>3</b> for summary routes; <b>5</b> for external routes (area number must be <b>0</b> ); <b>7</b> for NSSA routes; or <b>129</b> for sham link endpoint addresses.

Table 199: Communities Output Field Values (continued)

Value	Description
<b>route-type-vendor</b>	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute <b>0x8000</b> . The format is <b>area-number:ospf-route-type:options</b> .
<b>rte-type</b>	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute <b>0x0306</b> . The format is <b>area-number:ospf-route-type:options</b> .
<b>target</b>	Defines which VPN the route participates in; <b>target</b> has the format <b>32-bit IP address:16-bit number</b> . For example, 10.19.0.0:100.
<b>unknown IANA</b>	Incoming IANA codes with a value between <b>0x1</b> and <b>0x7fff</b> . This code of the BGP extended community attribute is accepted, but it is not recognized.
<b>unknown OSPF vendor community</b>	Incoming IANA codes with a value above <b>0x8000</b> . This code of the BGP extended community attribute is accepted, but it is not recognized.

## Sample Output

### show route detail

```

user@host> show route detail

inet.0: 22 destinations, 23 routes (21 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 29
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 1:31:43
    Task: RT
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I

10.31.1.0/30 (2 entries, 1 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 2
    Next hop: via so-0/3/0.0, selected
    State: <Active Int>
    Local AS: 69
    Age: 1:30:17
    Task: IF
    Announcement bits (1): 3-Resolve tree 2
    AS path: I
  OSPF Preference: 10
    Next-hop reference count: 1
    Next hop: via so-0/3/0.0, selected
    State: <Int>
    Inactive reason: Route Preference
    Local AS: 69
    Age: 1:30:17 Metric: 1

```

```

                                ORR Generation-ID: 1
Area: 0.0.0.0
    Task: OSPF
    AS path: I

10.31.1.1/32 (1 entry, 1 announced)
    *Local Preference: 0
        Next hop type: Local
        Next-hop reference count: 7
        Interface: so-0/3/0.0
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:30:20
        Task: IF
        Announcement bits (1): 3-Resolve tree 2
        AS path: I

...

10.31.2.0/30 (1 entry, 1 announced)
    *OSPF Preference: 10
        Next-hop reference count: 9
        Next hop: via so-0/3/0.0
        Next hop: 10.31.1.6 via ge-3/1/0.0, selected
        State: <Active Int>
        Local AS: 69
        Age: 1:29:56 Metric: 2
        Area: 0.0.0.0
        ORR Generation-ID: 1
    Task: OSPF
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

...

172.16.233.2/32 (1 entry, 1 announced)
    *PIM Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:31:45
        Task: PIM Recv
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

...

172.16.233.22/32 (1 entry, 1 announced)
    *IGMP Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 69
        Age: 1:31:43
        Task: IGMP
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

10.255.70.103/32 (1 entry, 1 announced)
    State: <FlashAll>
```

```

    *RSVP Preference: 7
        Next-hop reference count: 6
        Next hop: 10.31.1.6 via ge-3/1/0.0 weight 0x1, selected
        Label-switched-path green-r1-r3
        Label operation: Push 100096
        State: <Active Int>
        Local AS: 69
        Age: 1:25:49 Metric: 2
        Task: RSVP
        Announcement bits (2): 1-Resolve tree 1 2-Resolve tree 2
        AS path: I

10.255.71.238/32 (1 entry, 1 announced)
    State: <FlashAll>
    *RSVP Preference: 7
        Next-hop reference count: 6
        Next hop: via so-0/3/0.0 weight 0x1, selected
        Label-switched-path green-r1-r2
        State: <Active Int>
        Local AS: 69
        Age: 1:25:49 Metric: 1
        Task: RSVP
        Announcement bits (2): 1-Resolve tree 1 2-Resolve tree 2
        AS path: I

private__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

47.0005.80ff.f800.0000.0108.0001.0102.5507.1052/152 (1 entry, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via lo0.0, selected
        State: <Active Int>
        Local AS: 69
        Age: 1:31:44
        Task: IF
        AS path: I

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
0 (1 entry, 1 announced)
    *MPLS Preference: 0
        Next hop type: Receive
        Next-hop reference count: 6
        State: <Active Int>
        Local AS: 69
        Age: 1:31:45 Metric: 1
        Task: MPLS
        Announcement bits (1): 0-KRT
        AS path: I

...

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

299840 (1 entry, 1 announced)
TSI:
KRT in-kernel 299840 /52 -> {indirect(1048575)}
    *RSVP Preference: 7/2
        Next hop type: Flood

```

```

Address: 0x9174a30
Next-hop reference count: 4
Next hop type: Router, Next hop index: 798
Address: 0x9174c28
Next-hop reference count: 2
Next hop: 172.16.0.2 via lt-1/2/0.9 weight 0x1
Label-switched-path R2-to-R4-2p2mp
Label operation: Pop
Next hop type: Router, Next hop index: 1048574
Address: 0x92544f0
Next-hop reference count: 2
Next hop: 172.16.0.2 via lt-1/2/0.7 weight 0x1
Label-switched-path R2-to-R200-p2mp
Label operation: Pop
Next hop: 172.16.0.2 via lt-1/2/0.5 weight 0x8001
Label operation: Pop
State: <Active Int>
Age: 1:29      Metric: 1
Task: RSVP
Announcement bits (1): 0-KRT
AS path: I...

800010 (1 entry, 1 announced)
  *VPLS Preference: 7
    Next-hop reference count: 2
    Next hop: via vt-3/2/0.32769, selected
    Label operation: Pop
    State: <Active Int>
    Age: 1:29:30
    Task: Common L2 VC
    Announcement bits (1): 0-KRT
    AS path: I

vt-3/2/0.32769 (1 entry, 1 announced)
  *VPLS Preference: 7
    Next-hop reference count: 2
    Next hop: 10.31.1.6 via ge-3/1/0.0 weight 0x1, selected
    Label-switched-path green-r1-r3
    Label operation: Push 800012, Push 100096(top)
    Protocol next hop: 10.255.70.103
    Push 800012
    Indirect next hop: 87272e4 1048574
    State: <Active Int>
    Age: 1:29:30      Metric2: 2
    Task: Common L2 VC
    Announcement bits (2): 0-KRT 1-Common L2 VC
    AS path: I
    Communities: target:11111:1 Layer2-info: encaps:VPLS,
    control flags:, mtu: 0

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

abcd::10:255:71:52/128 (1 entry, 0 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected
    State: <Active Int>
    Local AS: 69
    Age: 1:31:44
    Task: IF

```

```

AS path: I

fe80::280:42ff:fe10:f179/128 (1 entry, 0 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected
    State: <Active NoReadvrt Int>
    Local AS: 69
    Age: 1:31:44
    Task: IF
    AS path: I

ff02::2/128 (1 entry, 1 announced)
  *PIM Preference: 0
    Next-hop reference count: 18
    State: <Active NoReadvrt Int>
    Local AS: 69
    Age: 1:31:45
    Task: PIM Recv6
    Announcement bits (1): 0-KRT
    AS path: I

ff02::d/128 (1 entry, 1 announced)
  *PIM Preference: 0
    Next-hop reference count: 18
    State: <Active NoReadvrt Int>
    Local AS: 69
    Age: 1:31:45
    Task: PIM Recv6
    Announcement bits (1): 0-KRT
    AS path: I

ff02::16/128 (1 entry, 1 announced)
  *MLD Preference: 0
    Next-hop reference count: 18
    State: <Active NoReadvrt Int>
    Local AS: 69
    Age: 1:31:43
    Task: MLD
    Announcement bits (1): 0-KRT
    AS path: I

private.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

fe80::280:42ff:fe10:f179/128 (1 entry, 0 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.16385, selected
    State: <Active NoReadvrt Int>
    Age: 1:31:44
    Task: IF
    AS path: I

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

10.255.70.103:1:3:1/96 (1 entry, 1 announced)
  *BCP Preference: 170/-101
    Route Distinguisher: 10.255.70.103:1
    Next-hop reference count: 7

```

```

Source: 10.255.70.103
Protocol next hop: 10.255.70.103
Indirect next hop: 2 no-forward
State: <Secondary Active Int Ext>
Local AS: 69 Peer AS: 69
Age: 1:25:49 Metric2: 1
AIGP 210
Task: BGP_69.10.255.70.103+179
Announcement bits (1): 0-green-l2vpn
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS,
control flags:, mtu: 0
Label-base: 800008, range: 8
Localpref: 100
Router ID: 10.255.70.103
Primary Routing Table bgp.l2vpn.0

10.255.71.52:1:1:1/96 (1 entry, 1 announced)
*L2VPN Preference: 170/-1
Next-hop reference count: 5
Protocol next hop: 10.255.71.52
Indirect next hop: 0 -
State: <Active Int Ext>
Age: 1:31:40 Metric2: 1
Task: green-l2vpn
Announcement bits (1): 1-BGP.0.0.0.0+179
AS path: I
Communities: Layer2-info: encaps:VPLS, control flags:Site-Down,
mtu: 0
Label-base: 800016, range: 8, status-vector: 0x9F

10.255.71.52:1:5:1/96 (1 entry, 1 announced)
*L2VPN Preference: 170/-101
Next-hop reference count: 5
Protocol next hop: 10.255.71.52
Indirect next hop: 0 -
State: <Active Int Ext>
Age: 1:31:40 Metric2: 1
Task: green-l2vpn
Announcement bits (1): 1-BGP.0.0.0.0+179
AS path: I
Communities: Layer2-info: encaps:VPLS, control flags:, mtu: 0
Label-base: 800008, range: 8, status-vector: 0x9F

...

l2circuit.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.245.255.63:CtrlWord:4:3:Local/96 (1 entry, 1 announced)
*L2CKT Preference: 7
Next hop: via so-1/1/2.0 weight 1, selected
Label-switched-path my-lsp
Label operation: Push 100000[0]
Protocol next hop: 10.245.255.63 Indirect next hop: 86af000 296
State: <Active Int>
Local AS: 99
Age: 10:21
Task: l2 circuit
Announcement bits (1): 0-LDP
AS path: I
VC Label 100000, MTU 1500, VLAN ID 512

```

```

inet.0: 45 destinations, 47 routes (44 active, 0 holddown, 1 hidden)
1.1.1.3/32 (1 entry, 1 announced)
  *IS-IS Preference: 18
    Level: 2
    Next hop type: Router, Next hop index: 580
    Address: 0x9db6ed0
    Next-hop reference count: 8
    Next hop: 10.1.1.6 via lt-1/0/10.5, selected
    Session Id: 0x18a
    State: <Active Int>
    Local AS: 2
    Age: 1:32 Metric: 10
    Validation State: unverified
    ORR Generation-ID: 1
    Task: IS-IS
    Announcement bits (3): 0-KRT 5-Resolve tree 4 6-Resolve_IGP_FRR
task
  AS path: I

inet.0: 61 destinations, 77 routes (61 active, 1 holddown, 0 hidden)
1.1.1.1/32 (2 entries, 1 announced)
  *OSPF Preference: 10
    Next hop type: Router, Next hop index: 673
    Address: 0xc008830
    Next-hop reference count: 3
    Next hop: 10.1.1.1 via ge-0/0/2.0, selected
    Session Id: 0x1b7
    State: <Active Int>
    Local AS: 1
    Age: 3:06:59 Metric: 100
    Validation State: unverified
    ORR Generation-ID: 1
    Area: 0.0.0.0
    Task: OSPF
    Announcement bits (2): 1-KRT 9-Resolve tree 2
    AS path: I

```

### show route detail (with BGP Multipath)

```

user@host> show route detail

10.1.1.8/30 (2 entries, 1 announced)
  *BGP Preference: 170/-101
    Next hop type: Router, Next hop index: 262142
    Address: 0x901a010
    Next-hop reference count: 2
    Source: 10.1.1.2
    Next hop: 10.1.1.2 via ge-0/3/0.1, selected
    Next hop: 10.1.1.6 via ge-0/3/0.5
    State: <Active Ext>
    Local AS: 1 Peer AS: 2
    Age: 5:04:43
    Validation State: unverified
    Task: BGP_2.10.1.1.2+59955
    Announcement bits (1): 0-KRT
    AS path: 2 I
    Accepted Multipath
    Localpref: 100
    Router ID: 172.16.1.2
  BGP Preference: 170/-101
    Next hop type: Router, Next hop index: 678

```

```
Address: 0x8f97520
Next-hop reference count: 9
Source: 10.1.1.6
Next hop: 10.1.1.6 via ge-0/3/0.5, selected
State: <NotBest Ext>
Inactive reason: Not Best in its group - Active preferred
Local AS: 1 Peer AS: 2
Age: 5:04:43
Validation State: unverified
Task: BGP_2.10.1.1.6+58198
AS path: 2 I
Accepted MultipathContrib
Localpref: 100
Router ID: 172.16.1.3
```

### show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show route label 299872 detail
mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
299872 (1 entry, 1 announced)
  *LDP Preference: 9
    Next hop type: Flood
    Next-hop reference count: 3
    Address: 0x9097d90
    Next hop: via vt-0/1/0.1
    Next-hop index: 661
    Label operation: Pop
    Address: 0x9172130
    Next hop: via so-0/0/3.0
    Next-hop index: 654
    Label operation: Swap 299872
    State: **Active Int>
    Local AS: 1001
    Age: 8:20 Metric: 1
    Task: LDP
    Announcement bits (1): 0-KRT
    AS path: I
    FECs bound to route: P2MP root-addr 10.255.72.166, grp 232.1.1.1,
src 192.168.142.2
```

### show route label detail (Multipoint LDP with Multicast-Only Fast Reroute)

```
user@host> show route label 301568 detail

mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301568 (1 entry, 1 announced)
  *LDP Preference: 9
    Next hop type: Flood
    Address: 0x2735208
    Next-hop reference count: 3
    Next hop type: Router, Next hop index: 1397
    Address: 0x2735d2c
    Next-hop reference count: 3
    Next hop: 1.3.8.2 via ge-1/2/22.0
    Label operation: Pop
    Load balance label: None;
    Next hop type: Router, Next hop index: 1395
    Address: 0x2736290
    Next-hop reference count: 3
    Next hop: 1.3.4.2 via ge-1/2/18.0
```

```
Label operation: Pop
Load balance label: None;
State: <Active Int AckRequest MulticastRPF>
Local AS: 10
Age: 54:05 Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 172.16.1.1, grp: 232.1.1.1,
src: 192.168.219.11
Primary Upstream : 172.16.1.3:0--172.16.1.2:0
RPF Nexthops :
    ge-1/2/15.0, 1.2.94.1, Label: 301568, weight: 0x1
    ge-1/2/14.0, 1.2.3.1, Label: 301568, weight: 0x1
Backup Upstream : 172.16.1.3:0--172.16.1.6:0
RPF Nexthops :
    ge-1/2/20.0, 1.2.96.1, Label: 301584, weight: 0xfffe
    ge-1/2/19.0, 1.3.6.1, Label: 301584, weight: 0xfffe
```

## show route exact

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2248</a> <a href="#">Syntax (EX Series Switches) on page 2248</a>
<b>Syntax</b>	<code>show route exact <i>destination-prefix</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Syntax (EX Series Switches)</b>	<code>show route exact <i>destination-prefix</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Display only the routes that exactly match the specified address or range of addresses.
<b>Options</b>	<b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b> .  <b><i>destination-prefix</i></b> —Address or range of addresses.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route exact on page 2248</a> <a href="#">show route exact detail on page 2249</a> <a href="#">show route exact extensive on page 2249</a> <a href="#">show route exact terse on page 2249</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route exact

```
user@host> show route exact 207.17.136.0/24

inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
207.17.136.0/24    *[Static/5] 2d 03:30:22
                  > to 192.168.71.254 via fxp0.0
```

### show route exact detail

```

user@host> show route exact 207.17.136.0/24 detail

inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
207.17.136.0/24 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 29
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 2d 3:30:26
    Task: RT
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I

```

### show route exact extensive

```

user@host> show route exact 207.17.136.0/24 extensive

inet.0: 22 destinations, 23 routes (21 active, 0 holddown, 1 hidden)
207.17.136.0/24 (1 entry, 1 announced)
TSI:
KRT in-kernel 207.17.136.0/24 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 29
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 1:25:18
    Task: RT
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I

```

### show route exact terse

```

user@host> show route exact 207.17.136.0/24 terse

inet.0: 22 destinations, 23 routes (21 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
* 207.17.136.0/24  S  5                >192.168.71.254

```

## show route export

---

List of Syntax	<a href="#">Syntax on page 2250</a> <a href="#">Syntax (EX Series Switches) on page 2250</a>
Syntax	<pre>show route export &lt;brief   detail&gt; &lt;instance &lt;instance-name&gt;   routing-table-name&gt; &lt;logical-system (all   logical-system-name)&gt;</pre>
Syntax (EX Series Switches)	<pre>show route export &lt;brief   detail&gt; &lt;instance &lt;instance-name&gt;   routing-table-name&gt;</pre>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display policy-based route export information. Policy-based export simplifies the process of exchanging route information between routing instances.
Options	<p><b>none</b>—(Same as <b>brief</b>.) Display standard information about policy-based export for all instances and routing tables on all systems.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance &lt;instance-name&gt;</b>—(Optional) Display a particular routing instance for which policy-based export is currently enabled.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>routing-table-name</b>—(Optional) Display information about policy-based export for all routing tables whose name begins with this string (for example, inet.0 and inet6.0 are both displayed when you run the <b>show route export inet</b> command).</p>
Required Privilege Level	view
List of Sample Output	<a href="#">show route export on page 2251</a> <a href="#">show route export detail on page 2251</a> <a href="#">show route export instance detail on page 2252</a>
Output Fields	<a href="#">Table 200 on page 2251</a> lists the output fields for the <b>show route export</b> command. Output fields are listed in the approximate order in which they appear.

Table 200: show route export Output Fields

Field Name	Field Description	Level of Output
Table or <i>table-name</i>	Name of the routing tables that either import or export routes.	All levels
Routes	Number of routes exported from this table into other tables. If a particular route is exported to different tables, the counter will only increment by one.	<b>brief</b> none
Export	Whether the table is currently exporting routes to other tables: <b>Y</b> or <b>N</b> (Yes or No).	<b>brief</b> none
Import	Tables currently importing routes from the originator table. (Not displayed for tables that are not exporting any routes.)	<b>detail</b>
Flags	( <b>instance</b> keyword only) Flags for this feature on this instance: <ul style="list-style-type: none"> <li><b>config auto-policy</b>—The policy was deduced from the configured IGP export policies.</li> <li><b>cleanup</b>—Configuration information for this instance is no longer valid.</li> <li><b>config</b>—The instance was explicitly configured.</li> </ul>	<b>detail</b>
Options	( <b>instance</b> keyword only) Configured option displays the type of routing tables the feature handles: <ul style="list-style-type: none"> <li><b>unicast</b>—Indicates <i>instance.inet.0</i>.</li> <li><b>multicast</b>—Indicates <i>instance.inet.2</i>.</li> <li><b>unicast multicast</b>—Indicates <i>instance.inet.0</i> and <i>instance.inet.2</i>.</li> </ul>	<b>detail</b>
Import policy	( <b>instance</b> keyword only) Policy that <b>route export</b> uses to construct the import-export matrix. Not displayed if the instance type is <b>vrf</b> .	<b>detail</b>
Instance	( <b>instance</b> keyword only) Name of the routing instance.	<b>detail</b>
Type	( <b>instance</b> keyword only) Type of routing instance: <b>forwarding</b> , <b>non-forwarding</b> , or <b>vrf</b> .	<b>detail</b>

## Sample Output

### show route export

```

user@host> show route export
Table           Export      Routes
inet.0          N           0
black.inet.0    Y           3
red.inet.0      Y           4

```

### show route export detail

```

user@host> show route export detail
inet.0                      Routes:      0
black.inet.0                Routes:      3
    Import: [ inet.0 ]
red.inet.0                   Routes:      4
    Import: [ inet.0 ]

```

### show route export instance detail

```
user@host> show route export instance detail
Instance: master                               Type: forwarding
  Flags: <config auto-policy> Options: <unicast multicast>
  Import policy: [ (ospf-master-from-red || isis-master-from-black) ]
Instance: black                               Type: non-forwarding
Instance: red                                 Type: non-forwarding
```

## show route export vrf-target

<b>Syntax</b>	show route export vrf-target <brief   detail> <community <i>community--regular-expression</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display the VPN routing and forwarding (VRF) target communities for which policy-based route export is currently distributing routes. This command is relevant when there are overlapping virtual private networks (VPNs).
<b>Options</b>	<p><b>none</b>—Display standard information about all target communities.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p><b>community <i>community-regular-expression</i></b>—(Optional) Display information about the specified community.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route export vrf-target on page 2254</a> <a href="#">show route export vrf-target community on page 2254</a> <a href="#">show route export vrf-target detail on page 2254</a>
<b>Output Fields</b>	Table 201 on page 2253 lists the output fields for the <b>show route export vrf-target</b> command. Output fields are listed in the approximate order in which they appear.

Table 201: show route export vrf-target Output Fields

Field Name	Field Description	Level of Output
Route target	Target communities for which auto-export is currently distributing routes.	brief none
Family	Routing table entries for the specified family.	brief none
<i>type-of-routing-table(s)</i>	Type of routing tables the feature handles: <ul style="list-style-type: none"> <li>unicast—Indicates <i>instance.inet.0</i>.</li> <li>multicast—Indicates <i>instance.inet.2</i>.</li> <li>unicast multicast—Indicates <i>instance.inet.0</i> and <i>instance.inet.2</i>.</li> </ul>	brief none
Import	Number of routing tables that are currently importing routes with this target community. Omitted for tables that are not importing routes.	brief none

Table 201: show route export vrf-target Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Export</b>	Number of routing tables that are currently exporting routes with this target community. Omitted for tables that are not exporting routes.	<b>brief</b> none
<b>Target</b>	Target communities, family, and options for which auto-export is currently distributing routes.	<b>detail</b>
<b>Import table(s)</b>	Name of the routing tables that are importing a particular route target.	<b>detail</b>
<b>Export table(s)</b>	Name of the routing tables that are exporting a particular route target.	<b>detail</b>

## Sample Output

### show route export vrf-target

```

user@host> show route export vrf-target
Route Target          Family      Import    Export
69:1                  inet    unicast      2         2
69:2                  inet    unicast      2         2

```

### show route export vrf-target community

```

user@host> show route export vrf-target community target:69:1
Route Target          Family      Import    Export
69:1                  inet    unicast      2         2

```

### show route export vrf-target detail

```

user@host> show route export vrf-target detail
Target: 1:12          inet    unicast
  Import table(s): vrf-11.inet.0 vrf-12.inet.0
  Export table(s): vrf-12.inet.0
Target: 1:13          inet    unicast
  Import table(s): vrf-12.inet.0 vrf-13.inet.0
  Export table(s): vrf-13.inet.0

```

## show route extensive

<b>List of Syntax</b>	<a href="#">Syntax on page 2255</a> <a href="#">Syntax (EX Series Switches) on page 2255</a>
<b>Syntax</b>	<pre>show route extensive &lt;destination-prefix&gt; &lt;logical-system (all   logical-system-name)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route extensive &lt;destination-prefix&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	Display extensive information about the active entries in the routing tables.
<b>Options</b>	<p><b>none</b>—Display all active entries in the routing table.</p> <p><b>destination-prefix</b>—(Optional) Display active entries for the specified address or range of addresses.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route extensive on page 2262</a> <a href="#">show route extensive (Access Route) on page 2269</a> <a href="#">show route extensive (BGP PIC Edge) on page 2269</a> <a href="#">show route extensive (FRR and LFA) on page 2270</a> <a href="#">show route extensive (IS-IS) on page 2271</a> <a href="#">show route extensive (Route Reflector) on page 2271</a> <a href="#">show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 2271</a> <a href="#">show route label detail (Multipoint LDP with Multicast-Only Fast Reroute) on page 2272</a>
<b>Output Fields</b>	<p><a href="#">Table 202 on page 2255</a> describes the output fields for the <b>show route extensive</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 202: show route extensive Output Fields

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> <li>• <b>active</b> (routes that are active).</li> <li>• <b>holddown</b> (routes that are in the pending state before being declared inactive).</li> <li>• <b>hidden</b> (routes that are not used because of a routing policy).</li> </ul>
<i>route-destination</i> (entry, announced)	<p>Route destination (for example: 10.0.0.1/24). The <b>entry</b> value is the number of route for this destination, and the <b>announced</b> value is the number of routes being announced for this destination. Sometimes the route destination is presented in another format, such as:</p> <ul style="list-style-type: none"> <li>• <b>MPLS-label</b> (for example, 80001).</li> <li>• <b>interface-name</b> (for example, ge-1/0/2).</li> <li>• <b>neighbor-address:control-word-status:encapsulation type:vc-id:source</b> (Layer 2 circuit only; for example, 10.1.1.195:NoCtrlWord:1:1:Local/96). <ul style="list-style-type: none"> <li>• <b>neighbor-address</b>—Address of the neighbor.</li> <li>• <b>control-word-status</b>—Whether the use of the control word has been negotiated for this virtual circuit: <b>NoCtrlWord</b> or <b>CtrlWord</b>.</li> <li>• <b>encapsulation type</b>—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport.</li> <li>• <b>vc-id</b>—Virtual circuit identifier.</li> <li>• <b>source</b>—Source of the advertisement: <b>Local</b> or <b>Remote</b>.</li> </ul> </li> </ul>
<b>TSI</b>	Protocol header information.
<b>label stacking</b>	<p>(Next-to-the-last-hop routing device for MPLS only) Depth of the MPLS label stack, where the label-popping operation is needed to remove one or more labels from the top of the stack. A pair of routes is displayed, because the pop operation is performed only when the stack depth is two or more labels.</p> <ul style="list-style-type: none"> <li>• <b>S=0 route</b> indicates that a packet with an incoming label stack depth of two or more exits this router with one fewer label (the label-popping operation is performed).</li> <li>• If there is no <b>S=</b> information, the route is a normal MPLS route, which has a stack depth of 1 (the label-popping operation is not performed).</li> </ul>
<b>[protocol, preference]</b>	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> <li>• <b>+</b>—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table.</li> <li>• <b>-</b>—A hyphen indicates the last active route.</li> <li>• <b>*</b>—An asterisk indicates that the route is both the active and the last active route. An asterisk before a <b>to</b> line indicates the best subpath to the route.</li> </ul> <p>In every routing metric except for the BGP <b>LocalPref</b> attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the <b>LocalPref</b> value in the <b>Preference2</b> field. For example, if the <b>LocalPref</b> value for Route 1 is 100, the <b>Preference2</b> value is -101. If the <b>LocalPref</b> value for Route 2 is 155, the <b>Preference2</b> value is -156. Route 2 is preferred because it has a higher <b>LocalPref</b> value and a lower <b>Preference2</b> value.</p>

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
<b>Level</b>	(IS-IS only). In IS-IS, a single autonomous system (AS) can be divided into smaller groups called areas. Routing between areas is organized hierarchically, allowing a domain to be administratively divided into smaller areas. This organization is accomplished by configuring Level 1 and Level 2 intermediate systems. Level 1 systems route within an area. When the destination is outside an area, they route toward a Level 2 system. Level 2 intermediate systems route between areas and toward other ASs.
<b>Route Distinguisher</b>	IP subnet augmented with a 64-bit prefix.
<b>PMSI</b>	Provider multicast service interface (MVPN routing table).
<b>Next-hop type</b>	Type of next hop. For a description of possible values for this field, see the Output Field table in the <a href="#">show route detail</a> command.
<b>Next-hop reference count</b>	Number of references made to the next hop.
<b>Flood nexthop branches exceed maximum message</b>	Indicates that the number of flood next-hop branches exceeded the system limit of 32 branches, and only a subset of the flood next-hop branches were installed in the kernel.
<b>Source</b>	IP address of the route source.
<b>Next hop</b>	Network layer address of the directly reachable neighboring system.
<b>via</b>	Interface used to reach the next hop. If there is more than one interface available to the next hop, the name of the interface that is actually used is followed by the word <b>Selected</b> . This field can also contain the following information: <ul style="list-style-type: none"> <li>• <b>Weight</b>—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.</li> <li>• <b>Balance</b>—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.</li> </ul>
<b>Label-switched-path lsp-path-name</b>	Name of the LSP used to reach the next hop.
<b>Label operation</b>	MPLS label and operation occurring at this routing device. The operation can be <b>pop</b> (where a label is removed from the top of the stack), <b>push</b> (where another label is added to the label stack), or <b>swap</b> (where a label is replaced by another label).
<b>Offset</b>	Whether the metric has been increased or decreased by an offset value.
<b>Interface</b>	(Local only) Local interface name.
<b>Protocol next hop</b>	Network layer address of the remote routing device that advertised the prefix. This address is used to recursively derive a forwarding next hop.

Table 202: *show route extensive Output Fields (continued)*

Field Name	Field Description
<b><i>label-operation</i></b>	MPLS label and operation occurring at this routing device. The operation can be <b>pop</b> (where a label is removed from the top of the stack), <b>push</b> (where another label is added to the label stack), or <b>swap</b> (where a label is replaced by another label).
<b>Indirect next hops</b>	<p>When present, a list of nodes that are used to resolve the path to the next-hop destination, in the order that they are resolved.</p> <p>When BGP PIC Edge is enabled, the output lines that contain <b>Indirect next hop: weight</b> follow next hops that the software can use to repair paths where a link failure occurs. The next-hop weight has one of the following values:</p> <ul style="list-style-type: none"><li>• 0x1 indicates active next hops.</li><li>• 0x4000 indicates passive next hops.</li></ul>
<b>State</b>	State of the route (a route can be in more than one state). See the Output Field table in the <a href="#">show route detail</a> command.
<b>Session ID</b>	The BFD session ID number that represents the protection using MPLS fast reroute (FRR) and loop-free alternate (LFA).
<b>Weight</b>	<p>Weight for the backup path. If the weight of an indirect next hop is larger than zero, the weight value is shown.</p> <p>For sample output, see <a href="#">show route table</a>.</p>

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
Inactive reason	<p>If the route is inactive, the reason for its current state is indicated. Typical reasons include:</p> <ul style="list-style-type: none"> <li>• <b>Active preferred</b>—Currently active route was selected over this route.</li> <li>• <b>Always compare MED</b>—Path with a lower multiple exit discriminator (MED) is available.</li> <li>• <b>AS path</b>—Shorter AS path is available.</li> <li>• <b>Cisco Non-deterministic MED selection</b>—Cisco nondeterministic MED is enabled and a path with a lower MED is available.</li> <li>• <b>Cluster list length</b>—Path with a shorter cluster list length is available.</li> <li>• <b>Forwarding use only</b>—Path is only available for forwarding purposes.</li> <li>• <b>IGP metric</b>—Path through the next hop with a lower IGP metric is available.</li> <li>• <b>IGP metric type</b>—Path with a lower OSPF link-state advertisement type is available.</li> <li>• <b>Interior &gt; Exterior &gt; Exterior via Interior</b>—Direct, static, IGP, or EBGp path is available.</li> <li>• <b>Local preference</b>—Path with a higher local preference value is available.</li> <li>• <b>Next hop address</b>—Path with a lower metric next hop is available.</li> <li>• <b>No difference</b>—Path from a neighbor with a lower IP address is available.</li> <li>• <b>Not Best in its group</b>—Occurs when multiple peers of the same external AS advertise the same prefix and are grouped together in the selection process. When this reason is displayed, an additional reason is provided (typically one of the other reasons listed).</li> <li>• <b>Number of gateways</b>—Path with a higher number of next hops is available.</li> <li>• <b>Origin</b>—Path with a lower origin code is available.</li> <li>• <b>OSPF version</b>—Path does not support the indicated OSPF version.</li> <li>• <b>RIB preference</b>—Route from a higher-numbered routing table is available.</li> <li>• <b>Route distinguisher</b>—64-bit prefix added to IP subnets to make them unique.</li> <li>• <b>Route metric or MED comparison</b>—Route with a lower metric or MED is available.</li> <li>• <b>Route preference</b>—Route with a lower preference value is available.</li> <li>• <b>Router ID</b>—Path through a neighbor with a lower ID is available.</li> <li>• <b>Unusable path</b>—Path is not usable because of one of the following conditions: the route is damped, the route is rejected by an import policy, or the route is unresolved.</li> <li>• <b>Update source</b>—Last tiebreaker is the lowest IP address value.</li> </ul>
Local AS	Autonomous system (AS) number of the local routing device.
Age	How long the route has been known.
AIGP	Accumulated interior gateway protocol (AIGP) BGP attribute.
Metric	Cost value of the indicated route. For routes within an AS, the cost is determined by IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.
MED-plus-IGP	Metric value for BGP path selection to which the IGP cost to the next-hop destination has been added.
TTL-Action	<p>For MPLS LSPs, state of the TTL propagation attribute. Can be enabled or disabled for all RSVP-signaled and LDP-signaled LSPs or for specific VRF routing instances.</p> <p>For sample output, see <a href="#">show route table</a>.</p>

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
<b>Task</b>	Name of the protocol that has added the route.
<b>Announcement bits</b>	<p>List of protocols that are consumers of the route. Using the following output as an example, <b>Announcement bits (3): 0-KRT 5-Resolve tree 2 8-BGP RT Background</b> there are (3) announcement bits to reflect the three clients (protocols) that have state for this route: Kernel (0-KRT), 5 (resolution tree process 2), and 8 (BGP).</p> <p>The notation <b><i>n</i>-Resolve inet</b> indicates that the route is used for route resolution for next hops found in the routing table. <i>n</i> is an index used by Juniper Networks customer support only.</p>
<b>AS path</b>	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li>• <b>I</b>—IGP.</li> <li>• <b>E</b>—EGP.</li> <li>• <b>Recorded</b>—The AS path is recorded by the sample process (sampled).</li> <li>• <b>?</b>—Incomplete; typically, the AS path was aggregated.</li> </ul> <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> <li>• <b>[ ]</b>—Brackets enclose the local AS number associated with the AS path if more than one AS number is configured on the routing device, or if AS path prepending is configured.</li> <li>• <b>{ }</b>—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order.</li> <li>• <b>( )</b>—Parentheses enclose a confederation.</li> <li>• <b>( [ ] )</b>—Parentheses and brackets enclose a confederation set.</li> </ul> <p><b>NOTE:</b> In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>
<b>validation-state</b>	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> <li>• <b>Invalid</b>—Indicates that the prefix is found, but either the corresponding AS received from the EBGp peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database.</li> <li>• <b>Unknown</b>—Indicates that the prefix is not among the prefixes or prefix ranges in the database.</li> <li>• <b>Unverified</b>—Indicates that origin validation is not enabled for the BGP peers.</li> <li>• <b>Valid</b>—Indicates that the prefix and autonomous system pair are found in the database.</li> </ul>
<b>FECs bound to route</b>	Point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured.
<b>AS path: I &lt;Originator&gt;</b>	(For route reflected output only) Originator ID attribute set by the route reflector.

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
<b>route status</b>	Indicates the status of a BGP route: <ul style="list-style-type: none"> <li>• <b>Accepted</b>—The specified BGP route is imported by the default BGP policy.</li> <li>• <b>Import</b>—The route is imported into a Layer 3 VPN routing instance.</li> <li>• <b>Import-Protect</b>—A remote instance egress that is protected.</li> <li>• <b>Multipath</b>—A BGP multipath active route.</li> <li>• <b>MultipathContrib</b>—The route is not active but contributes to the BGP multipath.</li> <li>• <b>Protect</b>—An egress route that is protected.</li> <li>• <b>Stale</b>—A route that is marked stale due to graceful restart.</li> </ul>
Primary Upstream	When multipoint LDP with multicast-only fast reroute (MoFRR) is configured, the primary upstream path. MoFRR transmits a multicast join message from a receiver toward a source on a primary path, while also transmitting a secondary multicast join message from the receiver toward the source on a backup path.
RPF Nexthops	When multipoint LDP with MoFRR is configured, the reverse-path forwarding (RPF) next-hop information. Data packets are received from both the primary path and the secondary paths. The redundant packets are discarded at topology merge points due to the RPF checks.
Label	Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.
weight	Value used to distinguish MoFRR primary and backup routes. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.
VC Label	MPLS label assigned to the Layer 2 circuit virtual connection.
MTU	Maximum transmission unit (MTU) of the Layer 2 circuit.
VLAN ID	VLAN identifier of the Layer 2 circuit.
Cluster list	(For route reflected output only) Cluster ID sent by the route reflector.
Originator ID	(For route reflected output only) Address of router that originally sent the route to the route reflector.
Prefixes bound to route	Forwarding Equivalent Class (FEC) bound to this route. Applicable only to routes installed by LDP.
Communities	Community path attribute for the route. See the Output Field table in the <a href="#">show route detail</a> command for all possible values for this field.
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).
control flags	Control flags: <b>none</b> or Site Down.
mtu	Maximum transmission unit (MTU) information.
Label-Base, range	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.

Table 202: show route extensive Output Fields (continued)

Field Name	Field Description
<b>status vector</b>	Layer 2 VPN and VPLS network layer reachability information (NLRI).
<b>Localpref</b>	Local preference value included in the route.
<b>Router ID</b>	BGP router ID as advertised by the neighbor in the open message.
<b>Primary Routing Table</b>	In a routing table group, the name of the primary routing table in which the route resides.
<b>Secondary Tables</b>	In a routing table group, the name of one or more secondary tables in which the route resides.
<b>Originating RIB</b>	Name of the routing table whose active route was used to determine the forwarding next-hop entry in the resolution database. For example, in the case of inet.0 resolving through inet.0 and inet.3, this field indicates which routing table, inet.0 or inet.3, provided the best path for a particular prefix.
<b>Node path count</b>	Number of nodes in the path.
<b>Forwarding nexthops</b>	Number of forwarding next hops. The forwarding next hop is the network layer address of the directly reachable neighboring system (if applicable) and the interface used to reach it.

## Sample Output

### show route extensive

```

user@host> show route extensive
inet.0: 22 destinations, 23 routes (21 active, 0 holddown, 1 hidden)
203.0.113.10/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 203.0.113.10/16 -> {192.168.71.254}
    *Static Preference: 5
        Next-hop reference count: 29
        Next hop: 192.168.71.254 via fxp0.0, selected
        State: <Active NoReadvrt Int Ext>
        Local AS: 64496
        Age: 1:34:06
        Task: RT
        Announcement bits (2): 0-KRT 3-Resolve tree 2
        AS path: I

203.0.113.30/30 (2 entries, 1 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 2
        Next hop: via so-0/3/0.0, selected
        State: <Active Int>
        Local AS: 64496
        Age: 1:32:40
        Task: IF
        Announcement bits (1): 3-Resolve tree 2
        AS path: I
    OSPF Preference: 10
        Next-hop reference count: 1
        Next hop: via so-0/3/0.0, selected

```

```

State: <Int>
Inactive reason: Route Preference
Local AS: 64496
Age: 1:32:40 Metric: 1
Area: 0.0.0.0
Task: OSPF
AS path: I

203.0.113.103/32 (1 entry, 1 announced)
  *Local Preference: 0
    Next hop type: Local
    Next-hop reference count: 7
    Interface: so-0/3/0.0
    State: <Active NoReadvrt Int>
    Local AS: 644969
    Age: 1:32:43
    Task: IF
    Announcement bits (1): 3-Resolve tree 2
    AS path: I

...

203.0.113.203/30 (1 entry, 1 announced)
TSI:
KRT in-kernel 203.0.113.203/30 -> {203.0.113.216}
  *OSPF Preference: 10
    Next-hop reference count: 9
    Next hop: via so-0/3/0.0
    Next hop: 203.0.113.216 via ge-3/1/0.0, selected
    State: <Active Int>
    Local AS: 64496
    Age: 1:32:19 Metric: 2
    Area: 0.0.0.0
    Task: OSPF
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I

...

198.51.100.2/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 198.51.100.2/32 -> {}
  *PIM Preference: 0
    Next-hop reference count: 18
    State: <Active NoReadvrt Int>
    Local AS: 64496
    Age: 1:34:08
    Task: PIM Recv
    Announcement bits (2): 0-KRT 3-Resolve tree 2
    AS path: I

...

198.51.100.22/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 198.51.100.22/32 -> {}
  *IGMP Preference: 0
    Next-hop reference count: 18
    State: <Active NoReadvrt Int>
    Local AS: 64496
    Age: 1:34:06

```

```

Task: IGMP
Announcement bits (2): 0-KRT 3-Resolve tree 2
AS path: I

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

203.0.113.103/32 (1 entry, 1 announced)
State: <FlashAll>
*RSVP Preference: 7
Next-hop reference count: 6
Next hop: 203.0.113.216 via ge-3/1/0.0 weight 0x1, selected
Label-switched-path green-r1-r3
Label operation: Push 100096
State: <Active Int>
Local AS: 64496
Age: 1:28:12 Metric: 2
Task: RSVP
Announcement bits (2): 1-Resolve tree 1 2-Resolve tree 2
AS path: I

203.0.113.238/32 (1 entry, 1 announced)
State: <FlashAll>
*RSVP Preference: 7
Next-hop reference count: 6
Next hop: via so-0/3/0.0 weight 0x1, selected
Label-switched-path green-r1-r2
State: <Active Int>
Local AS: 64496
Age: 1:28:12 Metric: 1
Task: RSVP
Announcement bits (2): 1-Resolve tree 1 2-Resolve tree 2
AS path: I

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

...

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

47.0005.80ff.f800.0000.0108.0001.0102.5507.1052/152 (1 entry, 0 announced)
*Direct Preference: 0
Next hop type: Interface
Next-hop reference count: 1
Next hop: via lo0.0, selected
State: <Active Int>
Local AS: 64496
Age: 1:34:07
Task: IF
AS path: I

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

0 (1 entry, 1 announced)
TSI:
KRT in-kernel 0 /36 -> {}
*MPLS Preference: 0
Next hop type: Receive
Next-hop reference count: 6
State: <Active Int>
Local AS: 64496
Age: 1:34:08 Metric: 1

```

```

Task: MPLS
Announcement bits (1): 0-KRT
AS path: I

...

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
299840 (1 entry, 1 announced)
TSI:
KRT in-kernel 299840 /52 -> {indirect(1048575)}
  *RSVP   Preference: 7/2
          Next hop type: Flood
          Address: 0x9174a30
          Next-hop reference count: 4
          Next hop type: Router, Next hop index: 798
          Address: 0x9174c28
          Next-hop reference count: 2
          Next hop: 198.51.100.2 via lt-1/2/0.9 weight 0x1
          Label-switched-path R2-to-R4-2p2mp
          Label operation: Pop
          Next hop type: Router, Next hop index: 1048574
          Address: 0x92544f0
          Next-hop reference count: 2
          Next hop: 198.51.100.2 via lt-1/2/0.7 weight 0x1
          Label-switched-path R2-to-R200-p2mp
          Label operation: Pop
          Next hop: 198.51.100.2 via lt-1/2/0.5 weight 0x8001
          Label operation: Pop
          State: <Active Int>
          Age: 1:29      Metric: 1
          Task: RSVP
          Announcement bits (1): 0-KRT
          AS path: I...

800010 (1 entry, 1 announced)
TSI:
KRT in-kernel 800010 /36 -> {vt-3/2/0.32769}
  *VPLS   Preference: 7
          Next-hop reference count: 2
          Next hop: via vt-3/2/0.32769, selected
          Label operation: Pop
          State: <Active Int>
          Age: 1:31:53
          Task: Common L2 VC
          Announcement bits (1): 0-KRT
          AS path: I

vt-3/2/0.32769 (1 entry, 1 announced)
TSI:
KRT in-kernel vt-3/2/0.32769.0 /16 -> {indirect(1048574)}
  *VPLS   Preference: 7
          Next-hop reference count: 2
          Next hop: 203.0.113.216 via ge-3/1/0.0 weight 0x1, selected
          Label-switched-path green-r1-r3
          Label operation: Push 800012, Push 100096(top)
          Protocol next hop: 203.0.113.103
          Push 800012
          Indirect next hop: 87272e4 1048574
          State: <Active Int>
          Age: 1:31:53      Metric2: 2

```

```

Task: Common L2 VC
Announcement bits (2): 0-KRT 1-Common L2 VC
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS,
control flags:, mtu: 0
Indirect next hops: 1
    Protocol next hop: 203.0.113.103 Metric: 2
    Push 800012
    Indirect next hop: 87272e4 1048574
    Indirect path forwarding next hops: 1
        Next hop: 203.0.113.216 via ge-3/1/0.0 weight 0x1

203.0.113.103/32 Originating RIB: inet.3
    Metric: 2                               Node path count: 1
    Forwarding nexthops: 1
        Nexthop: 203.0.113.216 via ge-3/1/0.0

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

2001:db8::10:255:71:52/128 (1 entry, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via lo0.0, selected
        State: <Active Int>
        Local AS: 64496
        Age: 1:34:07
        Task: IF
        AS path: I

fe80::280:42ff:fe10:f179/128 (1 entry, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via lo0.0, selected
        State: <Active NoReadvrt Int>
        Local AS: 64496
        Age: 1:34:07
        Task: IF
        AS path: I

ff02::2/128 (1 entry, 1 announced)
TSI:
KRT in-kernel ff02::2/128 -> {}
    *PIM Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 64496
        Age: 1:34:08
        Task: PIM Recv6
        Announcement bits (1): 0-KRT
        AS path: I

ff02::d/128 (1 entry, 1 announced)
TSI:
KRT in-kernel ff02::d/128 -> {}
    *PIM Preference: 0
        Next-hop reference count: 18
        State: <Active NoReadvrt Int>
        Local AS: 64496
        Age: 1:34:08

```

```

Task: PIM Recv6
Announcement bits (1): 0-KRT
AS path: I

ff02::16/128 (1 entry, 1 announced)
TSI:
KRT in-kerne| ff02::16/128 -> {}
  *MLD      Preference: 0
            Next-hop reference count: 18
            State: <Active NoReadvrt Int>
            Local AS: 64496
            Age: 1:34:06
            Task: MLD
            Announcement bits (1): 0-KRT
            AS path: I

private.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

fe80::280:42ff:fe10:f179/128 (1 entry, 0 announced)
  *Direct Preference: 0
            Next hop type: Interface
            Next-hop reference count: 1
            Next hop: via lo0.16385, selected
            State: <Active NoReadvrt Int>
            Age: 1:34:07
            Task: IF
            AS path: I

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

203.0.113.103:1:3:1/96 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
            Route Distinguisher: 203.0.113.103:1
            Next-hop reference count: 7
            Source: 203.0.113.103
            Protocol next hop: 203.0.113.103
            Indirect next hop: 2 no-forward
            State: <Secondary Active Int Ext>
            Local AS: 64496 Peer AS: 64496
            Age: 1:28:12 Metric2: 1
            Task: BGP_69.203.0.113.103+179
            Announcement bits (1): 0-green-l2vpn
            AS path: I
            Communities: target:11111:1 Layer2-info: encaps:VPLS,
            control flags:, mtu: 0
            Label-base: 800008, range: 8
            Localpref: 100
            Router ID: 203.0.113.103
            Primary Routing Table bgp.l2vpn.0

203.0.113.152:1:1:1/96 (1 entry, 1 announced)
TSI:
Page 0 idx 0 Type 1 val 8699540
  *L2VPN    Preference: 170/-1
            Next-hop reference count: 5
            Protocol next hop: 203.0.113.152
            Indirect next hop: 0 -
            State: <Active Int Ext>
            Age: 1:34:03 Metric2: 1
            Task: green-l2vpn
            Announcement bits (1): 1-BGP.0.0.0.0+179

```

```

AS path: I
Communities: Layer2-info: encaps:VPLS, control flags:Site-Down,
mtu: 0
Label-base: 800016, range: 8, status-vector: 0x9F

203.0.113.152:1:5:1/96 (1 entry, 1 announced)
TSI:
Page 0 idx 0 Type 1 val 8699528
  *L2VPN Preference: 170/-101
    Next-hop reference count: 5
    Protocol next hop: 203.0.113.152
    Indirect next hop: 0 -
    State: <Active Int Ext>
    Age: 1:34:03 Metric2: 1
    Task: green-l2vpn
    Announcement bits (1): 1-BGP.0.0.0.0+179
    AS path: I
    Communities: Layer2-info: encaps:VPLS, control flags:, mtu: 0
    Label-base: 800008, range: 8, status-vector: 0x9F

...

l2circuit.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
TSI:

203.0.113.163:CtrlWord:4:3:Local/96 (1 entry, 1 announced)
  *L2CKT Preference: 7
    Next hop: via so-1/1/2.0 weight 1, selected
    Label-switched-path my-lsp
    Label operation: Push 100000[0]
    Protocol next hop: 203.0.113.163 Indirect next hop: 86af000 296
    State: <Active Int>
    Local AS: 64499
    Age: 10:21
    Task: l2 circuit
    Announcement bits (1): 0-LDP
    AS path: I
    VC Label 100000, MTU 1500, VLAN ID 512

203.0.113.55/24 (1 entry, 1 announced)
TSI:
KRT queued (pending) add
  198.51.100.0/24 -> {Push 300112}
    *BGP Preference: 170/-101
      Next hop type: Router
      Address: 0x925c208
      Next-hop reference count: 2
      Source: 203.0.113.9
      Next hop: 203.0.113.9 via ge-1/2/0.15, selected
      Label operation: Push 300112
      Label TTL action: prop-ttl
      State: <Active Ext>
      Local AS: 64509 Peer AS: 65539
      Age: 1w0d 23:06:56
      AIGP: 25
      Task: BGP_65539.203.0.113.9+56732
      Announcement bits (1): 0-KRT
      AS path: 65539 64508 I
      Accepted

```

```

Route Label: 300112
Localpref: 100
Router ID: 213.0.113.99

```

### show route extensive (Access Route)

```

user@host> show route 203.0.113.102 extensive
inet.0: 39256 destinations, 39258 routes (39255 active, 0 holddown, 1 hidden)
203.0.113.102/32 (1 entry, 1 announced)
TSI:
KRT in-kerne1 203.0.113.102/32 -> {192.0.2.2}
OSPF area : 0.0.0.0, LSA ID : 203.0.113.102, LSA type : Extern
    *Access Preference: 13
        Next-hop reference count: 78472
        Next hop: 192.0.2.2 via fe-0/0/0.0, selected
        State: <Active Int>
    Age: 12
        Task: RPD Unix Domain Server./var/run/rpd_serv.local
        Announcement bits (2): 0-KRT 1-OSPFv2
        AS path: I

```

```

user@host> show route 2001:db8:4641:1::/48 extensive

inet6.0: 75 destinations, 81 routes (75 active, 0 holddown, 0 hidden)
2001:db8:4641:1::/48 (1 entry, 1 announced)
TSI:
KRT in-kerne1 2001:db8:4641:1::/48 -> {#0 0.13.1.0.0.1}
    *Access Preference: 13
        Next hop type: Router, Next hop index: 74548
        Address: 0x1638c1d8
        Next-hop reference count: 6
        Next hop: #0 0.13.1.0.0.1 via demux0.1073753267, selected
        Session Id: 0x0
        State: <Active Int>
        Age: 4:17
        Validation State: unverified
        Task: RPD Unix Domain Server./var/run/rpd_serv.local
        Announcement bits (2): 0-KRT 4-Resolve tree 2
        AS path: I
2001:db8:4641:1::/128 (1 entry, 1 announced)
TSI:
KRT in-kerne1 2001:db8:4641:1::/128 -> {#0 0.13.1.0.0.1}
    *Access-internal Preference: 12
        Next hop type: Router, Next hop index: 74548
        Address: 0x1638c1d8
        Next-hop reference count: 6
        Next hop: #0 0.13.1.0.0.1 via demux0.1073753267, selected
        Session Id: 0x0
        State: <Active Int>
        Age: 4:17
        Validation State: unverified
        Task: RPD Unix Domain Server./var/run/rpd_serv.local
        Announcement bits (2): 0-KRT 4-Resolve tree 2
        AS path: I

```

### show route extensive (BGP PIC Edge)

```

user@host> show route 198.51.100.6 extensive
ed.inet.0: 6 destinations, 9 routes (6 active, 0 holddown, 0 hidden)
198.51.100.6/32 (3 entries, 2 announced)

```

```

        State: <CalcForwarding>
TSI:
KRT in-kerne1 198.51.100.6/32 -> {indirect(1048574), indirect(1048577)}
Page 0 idx 0 Type 1 val 9219e30
  Nexthop: Self
  AS path: [2] 3 I
  Communities: target:2:1
Path 198.51.100.6 from 198.51.100.4 Vector len 4. Val: 0
..
    #Multipath Preference: 255
      Next hop type: Indirect
      Address: 0x93f4010
      Next-hop reference count: 2
..
      Protocol next hop: 198.51.1001.4
      Push 299824
      Indirect next hop: 944c000 1048574 INH Session ID: 0x3
      Indirect next hop: weight 0x1
      Protocol next hop: 198.51.100.5
      Push 299824
      Indirect next hop: 944c1d8 1048577 INH Session ID: 0x4
      Indirect next hop: weight 0x4000
      State: <ForwardingOnly Int Ext>
      Inactive reason: Forwarding use only
      Age: 25          Metric2: 15
      Validation State: unverified
      Task: RT
      Announcement bits (1): 0-KRT
      AS path: 3 I
      Communities: target:2:1

```

### show route extensive (FRR and LFA)

```

user@host> show route 203.0.113.20 extensive
inet.0: 46 destinations, 49 routes (45 active, 0 holddown, 1 hidden)
203.0.113.20/24 (2 entries, 1 announced)
  State: FlashAll
TSI:
KRT in-kerne1 203.0.113.20/24 -> {Push 299776, Push 299792}
  *RSVP Preference: 7/1
    Next hop type: Router, Next hop index: 1048574
    Address: 0xbbbc010
    Next-hop reference count: 5
    Next hop: 203.0.113.112 via ge-2/1/8.0 weight 0x1, selected
    Label-switched-path europa-d-to-europa-e
    Label operation: Push 299776
    Label TTL action: prop-ttl
    Session Id: 0x201
    Next hop: 203.0.113.122 via ge-2/1/4.0 weight 0x4001
    Label-switched-path europa-d-to-europa-e
    Label operation: Push 299792
    Label TTL action: prop-ttl
    Session Id: 0x202
    State: Active Int
    Local AS: 64500
    Age: 5:31 Metric: 2
    Task: RSVP
    Announcement bits (1): 0-KRT
    AS path: I
  OSPF Preference: 10
    Next hop type: Router, Next hop index: 615

```

```

Address: 0xb9d78c4
Next-hop reference count: 7
Next hop: 203.0.113.112 via ge-2/1/8.0, selected
Session Id: 0x201
State: Int
Inactive reason: Route Preference
Local AS: 64500
Age: 5:35 Metric: 3
Area: 0.0.0.0
Task: OSPF
AS path: I

```

### show route extensive (IS-IS)

```

user@host> show route extensive
IS-IS Preference: 15
Level: 1
Next hop type: Router, Next hop index: 1048577
Address: 0xFFFFFFFF
Next-hop reference count: YY
Next hop: 203.0.113.22 via ae1.0 balance 43%, selected
Session Id: 0x141
Next hop: 203.0.113.22 via ae0.0 balance 57%

```

### show route extensive (Route Reflector)

```

user@host> show route extensive
203.0.113.0/8 (1 entry, 1 announced)

TSI:
KRT in-kernel 203.0.113.0/8 -> {indirect(40)}
*BGP Preference: 170/-101
Source: 192.168.4.214
Protocol next hop: 198.51.100.192 Indirect next hop: 84ac908 40
State: <Active Int Ext>
Local AS: 65548 Peer AS: 65548
Age: 3:09 Metric: 0 Metric2: 0
Task: BGP_65548.192.168.4.214+1033
Announcement bits (2): 0-KRT 4-Resolve inet.0
AS path: 65544 64507 I <Originator>
Cluster list: 198.51.100.1
Originator ID: 203.0.113.88
Communities: 7777:7777
Localpref: 100
Router ID: 203.0.113.4
Indirect next hops: 1
Protocol next hop: 203.0.113.192 Metric: 0
Indirect next hop: 84ac908 40
Indirect path forwarding next hops: 0
Next hop type: Discard

```

### show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show route label 299872 detail
mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
299872 (1 entry, 1 announced)
*LDP Preference: 9
Next hop type: Flood
Next-hop reference count: 3
Address: 0x9097d90

```

```

Next hop: via vt-0/1/0.1
Next-hop index: 661
Label operation: Pop
Address: 0x9172130
Next hop: via so-0/0/3.0
Next-hop index: 654
Label operation: Swap 299872
State: **Active Int>
Local AS: 64511
Age: 8:20      Metric: 1
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 203.0.113.166, grp 203.0.113.1,
src 192.168.142.2

```

### show route label detail (Multipoint LDP with Multicast-Only Fast Reroute)

```

user@host> show route label 301568 detail

mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301568 (1 entry, 1 announced)
  *LDP      Preference: 9
            Next hop type: Flood
            Address: 0x2735208
            Next-hop reference count: 3
            Next hop type: Router, Next hop index: 1397
            Address: 0x2735d2c
            Next-hop reference count: 3
            Next hop: 203.0.113.82 via ge-1/2/22.0
            Label operation: Pop
            Load balance label: None;
            Next hop type: Router, Next hop index: 1395
            Address: 0x2736290
            Next-hop reference count: 3
            Next hop: 203.0.113.2 via ge-1/2/18.0
            Label operation: Pop
            Load balance label: None;
            State: <Active Int AckRequest MulticastRPF>
            Local AS: 64500
            Age: 54:05      Metric: 1
            Validation State: unverified
            Task: LDP
            Announcement bits (1): 0-KRT
            AS path: I
            FECs bound to route: P2MP root-addr 198.51.100.1, grp: 203.0.113.1,
src: 192.168.219.11
            Primary Upstream : 198.51.100.3:0--198.51.100.2:0
              RPF Nexthops :
                ge-1/2/15.0, 10.2.94.1, Label: 301568, weight: 0x1
                ge-1/2/14.0, 10.2.3.1, Label: 301568, weight: 0x1
            Backup Upstream : 198.51.100.3:0--198.51.100.6:0
              RPF Nexthops :
                ge-1/2/20.0, 198.51.100.96, Label: 301584, weight: 0xffffe
                ge-1/2/19.0, 198.51.100.36, Label: 301584, weight: 0xffffe

```

## show route flow validation

**List of Syntax**   [Syntax on page 2273](#)  
[Syntax \(EX Series Switches\) on page 2273](#)

**Syntax**   `show route flow validation`  
                   `<brief | detail>`  
                   `<ip-prefix>`  
                   `<table table-name>`  
                   `<logical-system (all | logical-system-name)>`

**Syntax (EX Series Switches)**   `show route flow validation`  
   `<brief | detail>`  
   `<ip-prefix>`  
   `<table table-name>`

**Release Information**   Command introduced before Junos OS Release 7.4.  
                                   Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description**   Display flow route information.

**Options**   **none**—Display flow route information.

**brief | detail**—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.

**ip-prefix**—(Optional) IP address for the flow route.

**logical-system (all | logical-system-name)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**table table-name**—(Optional) Display flow route information for all routing tables whose name begins with this string (for example, inet.0 and inet6.0 are both displayed when you run the **show route flow validation inet** command).

**Required Privilege Level**   view

**List of Sample Output**   [show route flow validation on page 2274](#)  
                                   [show route flow validation \(IPv6\) on page 2274](#)

**Output Fields**   [Table 203 on page 2273](#) lists the output fields for the **show route flow validation** command. Output fields are listed in the approximate order in which they appear.

*Table 203: show route flow validation Output Fields*

Field Name	Field Description	Level of Output
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).	All levels

Table 203: show route flow validation Output Fields (continued)

Field Name	Field Description	Level of Output
<i>prefix</i>	Route address.	All levels
Active unicast route	Active route in the routing table.	All levels
Dependent flow destinations	Number of flows for which there are routes in the routing table.	All levels
Origin	Source of the route flow.	All levels
Neighbor AS	Autonomous system identifier of the neighbor.	All levels
Flow destination	Number of entries and number of destinations that match the route flow.	All levels
Unicast best match	Destination that is the best match for the route flow.	All levels
Flags	Information about the route flow.	All levels

## Sample Output

### show route flow validation

```

user@host> show route flow validation
inet.0:
10.0.5.0/24Active unicast route
Dependent flow destinations: 1
Origin: 192.168.224.218, Neighbor AS: 64501
Flow destination (3 entries, 1 match origin)
Unicast best match: 10.0.5.0/24
Flags: SubtreeApex Consistent

```

### show route flow validation (IPv6)

```

user@host> show route flow validation
inet6.0:
2001:db8::11:11:11:0/120
    Active unicast route
        Dependent flow destinations: 2
        Origin: 2001:db8::13:14:2:2, Neighbor AS: 2000
2001:db8::11:11:11:10/128
    Flow destination (1 entries, 1 match origin, next-as)
        Unicast best match: 2001:db8::11:11:11:0/120
        Flags: Consistent
2001:db8::11:11:11:30/128
    Flow destination (1 entries, 1 match origin, next-as)
        Unicast best match: 2001:db8::11:11:11:0/120
        Flags: Consistent

```

## show route forwarding-table

**List of Syntax**    [Syntax on page 2275](#)  
                          [Syntax \(MX Series Routers\) on page 2275](#)  
                          [Syntax \(TX Matrix and TX Matrix Plus Routers\) on page 2275](#)

**Syntax**    show route forwarding-table  
                  <detail | extensive | summary>  
                  <all>  
                  <ccc *interface-name*>  
                  <destination *destination-prefix*>  
                  <family *family* | matching *matching*>  
                  <interface-name *interface-name*>  
                  <label *name*>  
                  <matching *matching*>  
                  <multicast>  
                  <table (default | *logical-system-name/routing-instance-name* | *routing-instance-name*)>  
                  <vlan (all | *vlan-name*)>  
                  <vpn *vpn*>

**Syntax (MX Series Routers)**    show route forwarding-table  
                  <detail | extensive | summary>  
                  <all>  
                  <bridge-domain (all | *domain-name*)>  
                  <ccc *interface-name*>  
                  <destination *destination-prefix*>  
                  <family *family* | matching *matching*>  
                  <interface-name *interface-name*>  
                  <label *name*>  
                  <learning-vlan-id *learning-vlan-id*>  
                  <matching *matching*>  
                  <multicast>  
                  <table (default | *logical-system-name/routing-instance-name* | *routing-instance-name*)>  
                  <vlan (all | *vlan-name*)>  
                  <vpn *vpn*>

**Syntax (TX Matrix and TX Matrix Plus Routers)**    show route forwarding-table  
                  <detail | extensive | summary>  
                  <all>  
                  <ccc *interface-name*>  
                  <destination *destination-prefix*>  
                  <family *family* | matching *matching*>  
                  <interface-name *interface-name*>  
                  <matching *matching*>  
                  <label *name*>  
                  <lcc *number*>  
                  <multicast>  
                  <table *routing-instance-name*>  
                  <vpn *vpn*>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Option **bridge-domain** introduced in Junos OS Release 7.5

Option **learning-vlan-id** introduced in Junos OS Release 8.4

Options **all** and **vlan** introduced in Junos OS Release 9.6.

Command introduced in Junos OS Release 11.3 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display the Routing Engine's forwarding table, including the network-layer prefixes and their next hops. This command is used to help verify that the routing protocol process has relayed the correction information to the forwarding table. The Routing Engine constructs and maintains one or more routing tables. From the routing tables, the Routing Engine derives a table of active routes, called the forwarding table.



**NOTE:** The Routing Engine copies the forwarding table to the Packet Forwarding Engine, the part of the router that is responsible for forwarding packets. To display the entries in the Packet Forwarding Engine's forwarding table, use the **show pfe route** command.

**Options** **none**—Display the routes in the forwarding tables. By default, the **show route forwarding-table** command does not display information about private, or internal, forwarding tables.

**detail | extensive | summary**—(Optional) Display the specified level of output.

**all**—(Optional) Display routing table entries for all forwarding tables, including private, or internal, tables.

**bridge-domain (all | bridge-domain-name)**—(MX Series routers only) (Optional) Display route entries for all bridge domains or the specified bridge domain.

**ccc interface-name**—(Optional) Display route entries for the specified circuit cross-connect interface.

**destination destination-prefix**—(Optional) Destination prefix.

**family family**—(Optional) Display routing table entries for the specified family: **bridge** (**ccc | destination | detail | extensive | interface-name | label | learning-vlan-id | matching | multicast | summary | table | vlan | vpn**), **ethernet-switching**, **evpn**, **fibre-channel**, **fmembers**, **inet**, **inet6**, **iso**, **mcsnoop-inet**, **mcsnoop-inet6**, **mpls**, **satellite-inet**, **satellite-inet6**, **satellite-vpls**, **tnp**, **unix**, **vpls**, or **vlan-classification**.

**interface-name interface-name**—(Optional) Display routing table entries for the specified interface.

**label name**—(Optional) Display route entries for the specified label.

**lcc number**—(TX Matrix and TX matrix Plus routers only) (Optional) On a routing matrix composed of a TX Matrix router and T640 routers, display information for the specified T640 router (or line-card chassis) connected to the TX Matrix router. On a routing matrix composed of the TX Matrix Plus router and T1600 or T4000 routers,

display information for the specified router (line-card chassis) connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**learning-vlan-id** *learning-vlan-id*—(MX Series routers only) (Optional) Display learned information for all VLANs or for the specified VLAN.

**matching** *matching*—(Optional) Display routing table entries matching the specified prefix or prefix length.

**multicast**—(Optional) Display routing table entries for multicast routes.

**table** —(Optional) Display route entries for all the routing tables in the main routing instance or for the specified routing instance. If your device supports logical systems, you can also display route entries for the specified logical system and routing instance. To view the routing instances on your device, use the [show route instance](#) command.

**vlan** (**all** | *vlan-name*)—(Optional) Display information for all VLANs or for the specified VLAN.

**vpn** *vpn*—(Optional) Display routing table entries for a specified VPN.

**Required Privilege Level**

view

**List of Sample Output**

[show route forwarding-table on page 2282](#)  
[show route forwarding-table detail on page 2283](#)  
[show route forwarding-table destination extensive \(Weights and Balances\) on page 2283](#)  
[show route forwarding-table extensive on page 2284](#)  
[show route forwarding-table extensive \(RPF\) on page 2285](#)  
[show route forwarding-table \(dynamic list next hop\) on page 2286](#)  
[show route forwarding-table family mpls on page 2287](#)  
[show route forwarding-table family mpls ccc ge-0/0/1.1004 on page 2287](#)  
[show route forwarding-table family vpls on page 2287](#)  
[show route forwarding-table vpls \(Broadcast, unknown unicast, and multicast \(BUM\) hashing is enabled\) on page 2287](#)  
[show route forwarding-table vpls \(Broadcast, unknown unicast, and multicast \(BUM\) hashing is enabled with MAC Statistics\) on page 2288](#)  
[show route forwarding-table family vpls extensive on page 2288](#)

[show route forwarding-table table default on page 2289](#)

[show route forwarding-table table](#)

[logical-system-name/routing-instance-name on page 2290](#)

[show route forwarding-table vpn on page 2291](#)

**Output Fields** [Table 204 on page 2278](#) lists the output fields for the **show route forwarding-table** command. Output fields are listed in the approximate order in which they appear. Field names might be abbreviated (as shown in parentheses) when no level of output is specified, or when the **detail** keyword is used instead of the **extensive** keyword.

*Table 204: show route forwarding-table Output Fields*

Field Name	Field Description	Level of Output
Logical system	Name of the logical system. This field is displayed if you specify the <b>table logical-system-name/routing-instance-name</b> option on a device that is configured for and supports logical systems.	All levels
Routing table	Name of the routing table (for example, inet, inet6, mpls).	All levels

Table 204: show route forwarding-table Output Fields (continued)

Field Name	Field Description	Level of Output
Enabled protocols	<p>The features and protocols that have been enabled for a given routing table. This field can contain the following values:</p> <ul style="list-style-type: none"> <li>• BUM hashing—BUM hashing is enabled.</li> <li>• MAC Stats—Mac Statistics is enabled.</li> <li>• Bridging—Routing instance is a normal layer 2 bridge.</li> <li>• No VLAN—No VLANs are associated with the bridge domain.</li> <li>• All VLANs—The <b>vlan-id all</b> statement has been enabled for this bridge domain.</li> <li>• Single VLAN—Single VLAN ID is associated with the bridge domain.</li> <li>• MAC action drop—New MACs will be dropped when the MAC address limit is reached.</li> <li>• Dual VLAN—Dual VLAN tags are associated with the bridge domain</li> <li>• No local switching—No local switching is enabled for this routing instance..</li> <li>• Learning disabled—Layer 2 learning is disabled for this routing instance.</li> <li>• MAC limit reached—The maximum number of MAC addresses that was configured for this routing instance has been reached.</li> <li>• VPLS—The VPLS protocol is enabled.</li> <li>• No IRB I2-copy—The no-irb-layer-2-copy feature is enabled for this routing instance.</li> <li>• ACKed by all peers—All peers have acknowledged this routing instance.</li> <li>• BUM Pruning—BUM pruning is enabled on the VPLS instance.</li> <li>• Def BD VXLAN—VXLAN is enabled for the default bridge domain.</li> <li>• EVPN—EVPN protocol is enabled for this routing instance.</li> <li>• Def BD OVSDb—Open vSwitch Database (OVSDb) is enabled on the default bridge domain.</li> <li>• Def BD Ingress replication—VXLAN ingress node replication is enabled on the default bridge domain.</li> <li>• L2 backhaul—Layer 2 backhaul is enabled.</li> <li>• FRR optimize—Fast reroute optimization</li> <li>• MAC pinning—MAC pinning is enabled for this bridge domain.</li> <li>• MAC Aging Timer—The MAC table aging time is set per routing instance.</li> <li>• EVPN VXLAN—This routing instance supports EVPN with VXLAN encapsulation.</li> <li>• PBBN—This routing instance is configured as a provider backbone bridged network.</li> <li>• PBN—This routing instance is configured as a provider bridge network.</li> <li>• ETREE—The ETREE protocol is enabled on this EVPN routing instance.</li> <li>• ARP/NDP suppression—EVPN ARP NDP suppression is enabled in this routing instance.</li> <li>• Def BD EVPN VXLAN—EVPN VXLAN is enabled for the default bridge domain.</li> <li>• MPLS control word—Control word is enabled for this MPLS routing instance.</li> </ul>	All levels
Address family	Address family (for example, IP, IPv6, ISO, MPLS, and VPLS).	All levels
Destination	Destination of the route.	detail extensive

Table 204: *show route forwarding-table* Output Fields (continued)

Field Name	Field Description	Level of Output
Route Type (Type)	<p>How the route was placed into the forwarding table. When the <b>detail</b> keyword is used, the route type might be abbreviated (as shown in parentheses):</p> <ul style="list-style-type: none"> <li>• <b>cloned (clon)</b>—(TCP or multicast only) Cloned route.</li> <li>• <b>destination (dest)</b>—Remote addresses directly reachable through an interface.</li> <li>• <b>destination down (iddn)</b>—Destination route for which the interface is unreachable.</li> <li>• <b>interface cloned (ifcl)</b>—Cloned route for which the interface is unreachable.</li> <li>• <b>route down (ifdn)</b>—Interface route for which the interface is unreachable.</li> <li>• <b>ignore (ignr)</b>—Ignore this route.</li> <li>• <b>interface (intf)</b>—Installed as a result of configuring an interface.</li> <li>• <b>permanent (perm)</b>—Routes installed by the kernel when the routing table is initialized.</li> <li>• <b>user</b>—Routes installed by the routing protocol process or as a result of the configuration.</li> </ul>	All levels
Route Reference (RtRef)	Number of routes to reference.	<b>detail extensive</b>
Flags	<p>Route type flags:</p> <ul style="list-style-type: none"> <li>• <b>none</b>—No flags are enabled.</li> <li>• <b>accounting</b>—Route has accounting enabled.</li> <li>• <b>cached</b>—Cache route.</li> <li>• <b>incoming-iface interface-number</b>—Check against incoming interface.</li> <li>• <b>prefix load balance</b>—Load balancing is enabled for this prefix.</li> <li>• <b>rt nh decoupled</b>—Route has been decoupled from the next hop to the destination.</li> <li>• <b>sent to PFE</b>—Route has been sent to the Packet Forwarding Engine.</li> <li>• <b>static</b>—Static route.</li> </ul>	<b>extensive</b>
Next hop	IP address of the next hop to the destination.	<b>detail extensive</b>

Table 204: show route forwarding-table Output Fields (continued)

Field Name	Field Description	Level of Output
Next hop Type (Type)	<p>Next-hop type. When the <b>detail</b> keyword is used, the next-hop type might be abbreviated (as indicated in parentheses):</p> <ul style="list-style-type: none"> <li>• <b>broadcast (bcst)</b>—Broadcast.</li> <li>• <b>deny</b>—Deny.</li> <li>• <b>discard (dscd)</b>—Discard.</li> <li>• <b>hold</b>—Next hop is waiting to be resolved into a unicast or multicast type.</li> <li>• <b>indexed (idxd)</b>—Indexed next hop.</li> <li>• <b>indirect (indr)</b>—Indirect next hop.</li> <li>• <b>local (locl)</b>—Local address on an interface.</li> <li>• <b>routed multicast (mcrst)</b>—Regular multicast next hop.</li> <li>• <b>multicast (mcst)</b>—Wire multicast next hop (limited to the LAN).</li> <li>• <b>multicast discard (mdsc)</b>—Multicast discard.</li> <li>• <b>multicast group (mgrp)</b>—Multicast group member.</li> <li>• <b>receive (rcv)</b>—Receive.</li> <li>• <b>reject (rjct)</b>—Discard. An ICMP unreachable message was sent.</li> <li>• <b>resolve (rslv)</b>—Resolving the next hop.</li> <li>• <b>unicast (ucst)</b>—Unicast.</li> <li>• <b>unilist (ulst)</b>—List of unicast next hops. A packet sent to this next hop goes to any next hop in the list.</li> </ul>	<b>detail extensive</b>
Index	Software index of the next hop that is used to route the traffic for a given prefix.	<b>detail extensive none</b>
Route interface-index	Logical interface index from which the route is learned. For example, for interface routes, this is the logical interface index of the route itself. For static routes, this field is zero. For routes learned through routing protocols, this is the logical interface index from which the route is learned.	<b>extensive</b>
Reference (NhRef)	Number of routes that refer to this next hop.	<b>detail extensive none</b>
Next-hop interface (Netif)	Interface used to reach the next hop.	<b>detail extensive none</b>
Weight	Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible (see the <b>Balance</b> field description).	<b>extensive</b>
Balance	Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a router is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.	<b>extensive</b>
RPF interface	List of interfaces from which the prefix can be accepted. Reverse path forwarding (RPF) information is displayed only when <b>rpf-check</b> is configured on the interface.	<b>extensive</b>

## Sample Output

## show route forwarding-table

```

user@host> show route forwarding-table
Routing table: default.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               rjct  46    4
0.0.0.0/32       perm  0                               dscd  44    1
172.16.1.0/24    ifdn  0                               rslv  608    1 ge-2/0/1.0
172.16.1.0/32    iddn  0 172.16.1.0        recv  606    1 ge-2/0/1.0
172.16.1.1/32    user  0                               rjct  46    4
172.16.1.1/32    intf  0 172.16.1.1        locl  607    2
172.16.1.1/32    iddn  0 172.16.1.1        locl  607    2
172.16.1.255/32 iddn  0 ff:ff:ff:ff:ff:ff bcst  605    1 ge-2/0/1.0
10.0.0.0/24      intf  0                               rslv  616    1 ge-2/0/0.0
10.0.0.0/32      dest  0 10.0.0.0           recv  614    1 ge-2/0/0.0
10.0.0.1/32      intf  0 10.0.0.1           locl  615    2
10.0.0.1/32      dest  0 10.0.0.1           locl  615    2
10.0.0.255/32    dest  0 10.0.0.255        bcst  613    1 ge-2/0/0.0
10.1.1.0/24      ifdn  0                               rslv  612    1 ge-2/0/1.0
10.1.1.0/32      iddn  0 10.1.1.0           recv  610    1 ge-2/0/1.0
10.1.1.1/32      user  0                               rjct  46    4
10.1.1.1/32      intf  0 10.1.1.1           locl  611    2
10.1.1.1/32      iddn  0 10.1.1.1           locl  611    2
10.1.1.255/32    iddn  0 ff:ff:ff:ff:ff:ff bcst  609    1 ge-2/0/1.0
10.209.0.0/16    user  0 10.209.63.254      ucst  419    20 fxp0.0
10.209.0.0/16    user  1 0:12:1e:ca:98:0    ucst  419    20 fxp0.0
10.209.0.0/18    intf  0                               rslv  418    1 fxp0.0
10.209.0.0/32    dest  0 10.209.0.0         recv  416    1 fxp0.0
10.209.2.131/32 intf  0 10.209.2.131       locl  417    2
10.209.2.131/32 dest  0 10.209.2.131       locl  417    2
10.209.17.55/32 dest  0 0:30:48:5b:78:d2   ucst  435    1 fxp0.0
10.209.63.42/32 dest  0 0:23:7d:58:92:ca   ucst  434    1 fxp0.0
10.209.63.254/32 dest  0 0:12:1e:ca:98:0    ucst  419    20 fxp0.0
10.209.63.255/32 dest  0 10.209.63.255      bcst  415    1 fxp0.0
10.227.0.0/16    user  0 10.209.63.254      ucst  419    20 fxp0.0

...

Routing table: iso
ISO:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               rjct  27    1
47.0005.80ff.f800.0000.0108.0003.0102.5524.5220.00
intf  0                               locl  28    1

Routing table: inet6
Internet6:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               rjct  6     1
ff00::/8         perm  0                               mdsc  4     1
ff02::1/128      perm  0 ff02::1           mcst  3     1

Routing table: ccc
MPLS:
Interface.Label  Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               rjct  16    1
100004(top)fe-0/0/1.0

```

## show route forwarding-table detail

```

user@host> show route forwarding-table detail
Routing table: inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          user   2 0:90:69:8e:b1:1b ucst  132   4 fxp0.0
default          perm   0                               rjct   14    1
10.1.1.0/24      intf   0 ff.3.0.21         ucst  322   1 so-5/3/0.0
10.1.1.0/32      dest   0 10.1.1.0         recv  324   1 so-5/3/0.0
10.1.1.1/32      intf   0 10.1.1.1         locl  321    1
10.1.1.255/32    dest   0 10.1.1.255       bcst  323   1 so-5/3/0.0
10.21.21.0/24    intf   0 ff.3.0.21         ucst  326   1 so-5/3/0.0
10.21.21.0/32    dest   0 10.21.21.0       recv  328   1 so-5/3/0.0
10.21.21.1/32    intf   0 10.21.21.1       locl  325    1
10.21.21.255/32  dest   0 10.21.21.255     bcst  327   1 so-5/3/0.0
127.0.0.1/32     intf   0 127.0.0.1        locl  320    1
172.17.28.19/32  clon   1 192.168.4.254     ucst  132   4 fxp0.0
172.17.28.44/32  clon   1 192.168.4.254     ucst  132   4 fxp0.0

...

Routing table: private1__inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm   0                               rjct   46    1
10.0.0.0/8       intf   0                               rslv  136   1 fxp1.0
10.0.0.0/32      dest   0 10.0.0.0         recv  134   1 fxp1.0
10.0.0.4/32      intf   0 10.0.0.4         locl  135    2
10.0.0.4/32      dest   0 10.0.0.4         locl  135    2

...

Routing table: iso
ISO:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm   0                               rjct   38    1

Routing table: inet6
Internet6:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm   0                               rjct   22    1
ff00::/8         perm   0                               mdsc   21    1
ff02::1/128      perm   0 ff02::1          mcst   17    1

...

Routing table: mpls
MPLS:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm   0                               rjct  28    1

```

## show route forwarding-table destination extensive (Weights and Balances)

```

user@host> show route forwarding-table destination 3.4.2.1 extensive
Routing table: inet [Index 0]
Internet:

Destination: 3.4.2.1/32
Route type: user

```

Route reference: 0	Route interface-index: 0
Flags: sent to PFE	
Next-hop type: unicast	Index: 262143    Reference: 1
Nexthop: 172.16.4.4	
Next-hop type: unicast	Index: 335    Reference: 2
Next-hop interface: so-1/1/0.0	Weight: 22    Balance: 3
Nexthop: 145.12.1.2	
Next-hop type: unicast	Index: 337    Reference: 2
Next-hop interface: so-0/1/2.0	Weight: 33    Balance: 33

### show route forwarding-table extensive

```

user@host> show route forwarding-table extensive
Routing table: inet [Index 0]
Internet:

Destination: default
  Route type: user
  Route reference: 2
  Flags: sent to PFE
  Nexthop: 00:00:5E:00:53:1b
  Next-hop type: unicast
  Next-hop interface: fxp0.0
  Route interface-index: 0
  Index: 132    Reference: 4

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: none
  Next-hop type: reject
  Route interface-index: 0
  Index: 14    Reference: 1

Destination: 127.0.0.1/32
  Route type: interface
  Route reference: 0
  Flags: sent to PFE
  Nexthop: 127.0.0.1
  Next-hop type: local
  Route interface-index: 0
  Index: 320    Reference: 1

...

Routing table: private1__inet [Index 1]
Internet:

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
  Route interface-index: 0
  Index: 46    Reference: 1

Destination: 10.0.0.0/8
  Route type: interface
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: resolve
  Next-hop interface: fxp1.0
  Route interface-index: 3
  Index: 136    Reference: 1

...

Routing table: iso [Index 0]
ISO:

Destination: default

```

```

Route type: permanent
Route reference: 0
Flags: sent to PFE
Next-hop type: reject
Route interface-index: 0
Index: 38      Reference: 1

Routing table: inet6 [Index 0]
Internet6:

Destination: default
Route type: permanent
Route reference: 0
Flags: sent to PFE
Next-hop type: reject
Route interface-index: 0
Index: 22      Reference: 1

Destination: ff00::/8
Route type: permanent
Route reference: 0
Flags: sent to PFE
Next-hop type: multicast discard
Route interface-index: 0
Index: 21      Reference: 1

...

Routing table: private1__inet6 [Index 1]
Internet6:

Destination: default
Route type: permanent
Route reference: 0
Flags: sent to PFE
Next-hop type: reject
Route interface-index: 0
Index: 54      Reference: 1

Destination: fe80::2a0:a5ff:fe3d:375/128
Route type: interface
Route reference: 0
Flags: sent to PFE
Next-hop: fe80::2a0:a5ff:fe3d:375
Next-hop type: local
Route interface-index: 0
Index: 75      Reference: 1

...

```

### show route forwarding-table extensive (RPF)

The next example is based on the following configuration, which enables an RPF check on all routes that are learned from this interface, including the interface route:

```

so-1/1/0 {
  unit 0 {
    family inet {
      rpf-check;
      address 192.0.2.2/30;
    }
  }
}

user@host> show route forwarding-table extensive
Routing table: inet [Index 0]
Internet:
...
...
Destination: 192.0.2.3/32

```

```
Route type: destination
Route reference: 0
Flags: sent to PFE
Nexthop: 192.0.2.3
Next-hop type: broadcast
Next-hop interface: so-1/1/0.0
RPF interface: so-1/1/0.0

Route interface-index: 67
Index: 328      Reference: 1
```

### show route forwarding-table (dynamic list next hop)

The **show route forwarding table** output shows the two next hop elements for a multihomed EVPN destination.

```
user@host> show route forwarding-table label 299952 extensive
MPLS:

Destination: 299952
Route type: user
Route reference: 0
Multicast RPF nh index: 0
P2mpidx: 0
Flags: sent to PFE, rt nh decoupled
Next-hop type: indirect
Nexthop:
Next-hop type: composite
Next-hop type: indirect
Nexthop: 1.0.0.4
Next-hop type: Push 301632, Push 299776(top)
Load Balance Label: None
Next-hop interface: ge-0/0/1.0
Next-hop type: indirect
Nexthop: 1.0.0.4
Next-hop type: Push 301344, Push 299792(top)
Load Balance Label: None
Next-hop interface: ge-0/0/1.0

Route interface-index: 0
Index: 1048575 Reference: 2
Index: 601      Reference: 2
Index: 1048574 Reference: 3
Index: 600 Reference: 2
Index: 1048577 Reference: 3
Index: 619 Reference: 2
```

After one of the PE router has been disabled in the EVPN multihomed network, the same **show route forwarding table** output command shows one next hop element and one empty next hop element.

```
user@host> show route forwarding-table label 299952 extensive
Routing table: default.mpls [Index 0]
MPLS:

Destination: 299952
Route type: user
Route reference: 0
Multicast RPF nh index: 0
P2mpidx: 0
Flags: sent to PFE, rt nh decoupled
Next-hop type: indirect
Nexthop:
Next-hop type: composite
Next-hop type: indirect
Nexthop: 1.0.0.4
Next-hop type: Push 301344, Push 299792(top)
Load Balance Label: None
Next-hop interface: ge-0/0/1.0

Route interface-index: 0
Index: 1048575 Reference: 2
Index: 601      Reference: 2
Index: 1048577 Reference: 3
Index: 619 Reference: 2
```

## show route forwarding-table family mpls

```

user@host> show route forwarding-table family mpls
Routing table: mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0                rjct   19    1
0                user  0                recv   18    3
1                user  0                recv   18    3
2                user  0                recv   18    3
100000           user  0 10.31.1.6        swap  100001 fe-1/1/0.0
800002           user  0                Pop                                vt-0/3/0.32770

vt-0/3/0.32770 (VPLS)
                  user  0                indr   351    4
                  Push 800000, Push 100002(top)

so-0/0/0.0

```

## show route forwarding-table family mpls ccc ge-0/0/1.1004

```

user@host> show route forwarding-table mpls ccc ge-0/0/1.1004
Routing table: default.mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
ge-0/0/1.1004    (CCC) user  0                ulst   1048577 2
                  comp      754      3
                  comp      755      3
                  comp      756      3

Routing table: __mpls-oam__.mpls
MPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0                dscd   556    1

```

## show route forwarding-table family vpls

```

user@host> show route forwarding-table family vpls
Routing table: green.vpls
VPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          dnm  0                flood  353    1
default          perm  0                rjct   298    1
fe-0/1/0.0       dnm  0                flood  355    1
00:00:5E:00:53:1f/48 <<<<<Remote CE
                  dnm  0                indr   351    4
                  Push 800000, Push 100002(top)

so-0/0/0.0
00:00:5E:00:53:1f/48 <<<<<Local CE
                  dnm  0                ucst   354    2 fe-0/1/0.0

```

## show route forwarding-table vpls (Broadcast, unknown unicast, and multicast (BUM) hashing is enabled)

```

user@host> show route forwarding-table vpls
Routing table: green.vpls
VPLS:
Enabled protocols: BUM hashing
Destination      Type RtRef Next hop      Type Index NhRef Netif

```

```

default          perm    0          dscd      519      1
lsi.1048832      intf    0          indr  1048574    4
                  172.16.3.2      Push 262145    621    2

ge-3/0/0.0
00:00:5E:00:53:01/48 user    0          ucst      590      5 ge-2/3/9.0
0x30003/51      user    0          comp      627      2
ge-2/3/9.0      intf    0          ucst      590      5 ge-2/3/9.0
ge-3/1/3.0      intf    0          ucst      619      4 ge-3/1/3.0
0x30002/51      user    0          comp      600      2
0x30001/51      user    0          comp      597      2

```

**show route forwarding-table vpls (Broadcast, unknown unicast, and multicast (BUM) hashing is enabled with MAC Statistics)**

```

user@host> show route forwarding-table vpls
Routing table: green.vpls
VPLS:
Enabled protocols: BUM hashing, MAC Stats
Destination      Type RtRef Next hop      Type Index  NhRef Netif
default          perm    0          dscd      519      1
lsi.1048834      intf    0          indr  1048574    4
                  172.16.3.2      Push 262145    592    2

ge-3/0/0.0
00:19:e2:25:d0:01/48 user    0          ucst      590      5 ge-2/3/9.0
0x30003/51      user    0          comp      630      2
ge-2/3/9.0      intf    0          ucst      590      5 ge-2/3/9.0
ge-3/1/3.0      intf    0          ucst      591      4 ge-3/1/3.0
0x30002/51      user    0          comp      627      2
0x30001/51      user    0          comp      624      2

```

**show route forwarding-table family vpls extensive**

```

user@host> show route forwarding-table family vpls extensive
Routing table: green.vpls [Index 2]
VPLS:

Destination: default
Route type: dynamic
Route reference: 0
Flags: sent to PFE
Next-hop type: flood
Next-hop type: unicast
Next-hop interface: fe-0/1/3.0
Next-hop type: unicast
Next-hop interface: fe-0/1/2.0
Route interface-index: 72
Index: 289      Reference: 1
Index: 291      Reference: 3
Index: 290      Reference: 3

Destination: default
Route type: permanent
Route reference: 0
Flags: none
Next-hop type: discard
Route interface-index: 0
Index: 341      Reference: 1

Destination: fe-0/1/2.0
Route type: dynamic
Route reference: 0
Flags: sent to PFE
Next-hop type: flood
Next-hop type: indirect
Next-hop type: Push 800016
Next-hop interface: at-1/0/1.0
Route interface-index: 69
Index: 293      Reference: 1
Index: 363      Reference: 4

```

```

Next-hop type: indirect          Index: 301      Reference: 5
Next hop: 10.31.3.2
Next-hop type: Push 800000
Next-hop interface: fe-0/1/1.0
Next-hop type: unicast          Index: 291      Reference: 3
Next-hop interface: fe-0/1/3.0

Destination: fe-0/1/3.0
Route type: dynamic
Route reference: 0              Route interface-index: 70
Flags: sent to PFE
Next-hop type: flood            Index: 292      Reference: 1
Next-hop type: indirect         Index: 363      Reference: 4
Next-hop type: Push 800016
Next-hop interface: at-1/0/1.0
Next-hop type: indirect         Index: 301      Reference: 5
Next hop: 10.31.3.2
Next-hop type: Push 800000
Next-hop interface: fe-0/1/1.0
Next-hop type: unicast          Index: 290      Reference: 3
Next-hop interface: fe-0/1/2.0

Destination: 00:00:5E:00:53:01/48
Route type: dynamic
Route reference: 0              Route interface-index: 70
Flags: sent to PFE, prefix load balance
Next-hop type: unicast          Index: 291      Reference: 3
Next-hop interface: fe-0/1/3.0
Route used as destination:
  Packet count:      6640    Byte count:      675786
Route used as source:
  Packet count:      6894    Byte count:      696424

Destination: 00:00:5E:00:53:04/48
Route type: dynamic
Route reference: 0              Route interface-index: 69
Flags: sent to PFE, prefix load balance
Next-hop type: unicast          Index: 290      Reference: 3
Next-hop interface: fe-0/1/2.0
Route used as destination:
  Packet count:      96      Byte count:      8079
Route used as source:
  Packet count:      296      Byte count:      24955

Destination: 00:00:5E:00:53:05/48
Route type: dynamic
Route reference: 0              Route interface-index: 74
Flags: sent to PFE, prefix load balance
Next-hop type: indirect         Index: 301      Reference: 5
Next hop: 10.31.3.2
Next-hop type: Push 800000
Next-hop interface: fe-0/1/1.0

```

### show route forwarding-table table default

```

user@host> show route forwarding-table table default
Routing table: default.inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0
0.0.0.0/32       perm  0                dscd   34    1

```

```

10.0.60.0/30      user    0 10.0.60.13      ucst   713    5 fe-0/1/3.0
10.0.60.12/30     intf    0                rslv   688    1 fe-0/1/3.0
10.0.60.12/32     dest    0 10.0.60.12      recv   686    1 fe-0/1/3.0
10.0.60.13/32     dest    0 0:5:85:8b:bc:22 ucst   713    5 fe-0/1/3.0
10.0.60.14/32     intf    0 10.0.60.14      locl   687    2
10.0.60.14/32     dest    0 10.0.60.14      locl   687    2
10.0.60.15/32     dest    0 10.0.60.15      bcst   685    1 fe-0/1/3.0
10.0.67.12/30     user    0 10.0.60.13      ucst   713    5 fe-0/1/3.0
10.0.80.0/30      ifdn    0 ff.3.0.21        ucst   676    1 so-0/0/1.0
10.0.80.0/32      dest    0 10.0.80.0        recv   678    1 so-0/0/1.0
10.0.80.2/32      user    0                rjct   36     2
10.0.80.2/32      intf    0 10.0.80.2        locl   675    1
10.0.80.3/32      dest    0 10.0.80.3        bcst   677    1 so-0/0/1.0
10.0.90.12/30     intf    0                rslv   684    1 fe-0/1/0.0
10.0.90.12/32     dest    0 10.0.90.12      recv   682    1 fe-0/1/0.0
10.0.90.14/32     intf    0 10.0.90.14      locl   683    2
10.0.90.14/32     dest    0 10.0.90.14      locl   683    2
10.0.90.15/32     dest    0 10.0.90.15      bcst   681    1 fe-0/1/0.0
10.5.0.0/16       user    0 192.168.187.126 ucst   324    15 fxp0.0
10.10.0.0/16      user    0 192.168.187.126 ucst   324    15 fxp0.0
10.13.10.0/23     user    0 192.168.187.126 ucst   324    15 fxp0.0
10.84.0.0/16      user    0 192.168.187.126 ucst   324    15 fxp0.0
10.150.0.0/16     user    0 192.168.187.126 ucst   324    15 fxp0.0
10.157.64.0/19    user    0 192.168.187.126 ucst   324    15 fxp0.0
10.209.0.0/16     user    0 192.168.187.126 ucst   324    15 fxp0.0

```

...

Routing table: default.iso

ISO:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	60	1	

Routing table: default.inet6

Internet6:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	44	1	
::/128	perm	0		dscd	42	1	
ff00::/8	perm	0		mdsc	43	1	
ff02::1/128	perm	0	ff02::1	mcst	39	1	

Routing table: default.mpls

MPLS:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		dscd	50	1	

## show route forwarding-table table logical-system-name/routing-instance-name

user@host> show route forwarding-table table R4/vpn-red

Logical system: R4

Routing table: vpn-red.inet

Internet:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	563	1	
0.0.0.0/32	perm	0		dscd	561	2	
172.16.0.1/32	user	0		dscd	561	2	
172.16.2.0/24	intf	0		rslv	771	1	ge-1/2/0.3
172.16.2.0/32	dest	0	172.16.2.0	recv	769	1	ge-1/2/0.3
172.16.2.1/32	intf	0	172.16.2.1	locl	770	2	
172.16.2.1/32	dest	0	172.16.2.1	locl	770	2	
172.16.2.2/32	dest	0	0.4.80.3.0.1b.c0.d5.e4.bd.0.1b.c0.d5.e4.bc.8.0				

```

172.16.2.255/32    dest    0 172.16.2.255    ucst    789    1 ge-1/2/0.3
172.16.233.0/4     perm    1                bcst    768    1 ge-1/2/0.3
172.16.233.1/32    perm    0 172.16.233.1    mdsc    562    1
255.255.255.255/32 perm    0                mcst    558    1
                                bcst    559    1

```

Logical system: R4

Routing table: vpn-red.iso

ISO:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	608	1	

Logical system: R4

Routing table: vpn-red.inet6

Internet6:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		rjct	708	1	
::/128	perm	0		dscd	706	1	
ff00::/8	perm	0		mdsc	707	1	
ff02::1/128	perm	0	ff02::1	mcst	704	1	

Logical system: R4

Routing table: vpn-red.mpls

MPLS:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0		dscd	638		

### show route forwarding-table vpn

```
user@host> show route forwarding-table vpn VPN-A
```

Routing table:: VPN-A.inet

Internet:

Destination	Type	RtRef	Nexthop	Type	Index	NhRef	Netif
default	perm	0		rjct	4	4	
10.39.10.20/30	intf	0	ff.3.0.21	ucst	40	1	
so-0/0/0.0							
10.39.10.21/32	intf	0	10.39.10.21	loc1	36	1	
10.255.14.172/32	user	0		ucst	69	2	
so-0/0/0.0							
10.255.14.175/32	user	0		indr	81	3	
				Push	100004	Push	
100004(top) so-1/0/0.0							
172.16.233.0/4	perm	2		mdsc	5	3	
172.16.233.1/32	perm	0	172.16.233.1	mcst	1	8	
172.16.233.5/32	user	1	172.16.233.5	mcst	1	8	
255.255.255.255/32	perm	0		bcst	2	3	

On QFX5200, the results for this command look like this:

```
show route forwarding-table family mpls
```

Routing table: default.mpls

MPLS:

Destination	Type	RtRef	Next hop	Type	Index	NhRef	Netif
default	perm	0	dscd	65	1		
0	user	0	recv	64	4		
1	user	0	recv	64	4		
2	user	0	recv	64	4		
13	user	0	recv	64	4		
300384	user	0	9.1.1.1 Pop	1711	2	xe-0/0/34.0	
300384(S=0)	user	0	9.1.1.1 Pop	1712	2	xe-0/0/34.0	

```

300400 user 0 ulst 131071 2
                                10.1.1.2 Pop 1713 1 xe-0/0/38.0
                                172.16.11.2 Pop 1714 1 xe-0/0/40.0
300400(S=0) user 0 ulst 131072 2
                                10.1.1.2 Pop 1715 1 xe-0/0/38.0
                                172.16.11.2 Pop 1716 1 xe-0/0/40.0

Routing table: __mpls-oam__.mpls
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 dscd 1681 1

```

## show route forwarding-table interface-name

<b>Syntax</b>	show route forwarding-table interface-name <i>interface-name</i> <detail   extensive> <all>
<b>Release Information</b>	Command introduced in Junos OS Release 9.6.
<b>Description</b>	Display the interfaces in the Routing Engine's forwarding table.
<b>Options</b>	<p><b>none</b>—Display information for the specified interface.</p> <p><b>detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>all</b>—(Optional) Display all interfaces in the routing table.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route forwarding-table interface-name fe-0/1/1 on page 2294</a> <a href="#">show route forwarding-table interface-name all on page 2294</a> <a href="#">show route forwarding-table interface-name all detail on page 2295</a>
<b>Output Fields</b>	Table 205 on page 2293 lists the output fields for the <b>show route forwarding-table interface-name</b> command. Output fields are listed in the approximate order in which they appear.

Table 205: show route forwarding-table interface-name Output Fields

Field Name	Field Description	Level of Output
<b>Name</b>	Name of the interface (for example <b>fe-0/1/1</b> , <b>lo0</b> , <b>ae0</b> , and so on).	All levels
<b>MTU</b>	Interface's maximum transmission unit (MTU).	All levels
<b>Afam</b>	Configured address family (for example <b>inet</b> , <b>tnp</b> , <b>inet6</b> , and so on).	<b>detail extensive</b>
<b>Network</b>	Network information: <ul style="list-style-type: none"> <li>• <b>&lt;Link&gt;</b>—Physical interface, not a logical interface.</li> <li>• <b>&lt;PtoP&gt;</b>—Point-to-point network.</li> <li>• <b>ipaddress</b>—Network address.</li> </ul>	All levels
<b>Address</b>	Address of the interface. The address can be a MAC address, IPv4 address, IPv6 address, and so on.	All levels
<b>IPkts</b>	Number of packets received on the interface.	All levels
<b>Ierr</b>	Number of packets received on the interface with errors.	All levels

Table 205: show route forwarding-table interface-name Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Opkts</b>	Number of packets transmitted or sent from the interface.	All levels
<b>Oerr</b>	Number of packets transmitted or sent from the interface with errors.	All levels
<b>Coll</b>	Number of packets that experienced collisions on the interface.	All levels

## Sample Output

### show route forwarding-table interface-name fe-0/1/1

```

user@host> show route forwarding-table interface-name fe-0/1/1
Name      Mtu Network      Address      Ipkts Ierr   Opkts Oerr  Coll
fe-0/1/1  1514 <Link>      00.05.85.88.cc.20  0    0      0    0    0

```

### show route forwarding-table interface-name all

```

user@host> show route forwarding-table interface-name all
Name      Mtu Network      Address      Ipkts Ierr   Opkts Oerr  Coll
fxp0      1514 <Link>      00.a0.a5.56.03.83  180965 0    39907 0    0

  unit 0   1500 192.168.187.0/ 192.168.187.10
fxp1      1514 <Link>      02.00.00.00.00.04  33010497 0 30110800 0    0

  unit 0   1500 10.0.0.0/8      10.0.0.1
           10.0.0.0/8  10.0.0.4
           128.0.0.0/2  128.0.0.1
           128.0.0.0/2  128.0.0.4
           1500 fe80::/64    fe80::200:ff:fe0
           fec0::/64    fec0::a:0:0:4
           1500      4
lsi       1496 <Link>
dsc       max <Link>
lo0       max <Link>
           8980 0    8980 0    0

  unit 0   max 127.0.0.1/8  127.0.0.1
           192.168.0.1/8 192.168.0.1
  unit 16384 max 127.0.0.1/8  127.0.0.1
  unit 16385 max
gre       max <Link>
ipip      max <Link>
tap       max <Link>
pime      max <Link>
pimd      max <Link>
mtun      max <Link>
so-0/0/0  4474 <Link>
           1679900 0 1068611 0    0

  unit 0   4470 <PtoP>      10.0.60.2
0
so-0/0/1  4474 <Link>
           0 0    0 0    0

  unit 0   4470 <PtoP>      10.0.80.2
0
so-0/0/2  4474 <Link>
           0 0    0 0    0
so-0/0/3  4474 <Link>
           0 0    0 0    0

```

```

fe-0/1/0    1514 <Link>      00.05.85.88.cc.1f    523120    0    623044    0    0
  unit 0    1500 10.0.90.12/30 10.0.90.14          0    0          0    0
  0
fe-0/1/1    1514 <Link>      00.05.85.88.cc.20          0    0          0    0    0
fe-0/1/2    1514 <Link>      00.05.85.88.cc.21          0    0          0    0    0
...

```

### show route forwarding-table interface-name all detail

```

user@host> show route forwarding-table interface-name all detail
Name      Mtu AFam   Network      Address          Ipkts Ierr   Opkts
Oerr Coll
fxp0      1514      <Link>      00.a0.a5.56.03.83 181005    0    39948
  0      0
  unit 0    1500 inet    192.168.187.0/ 192.168.187.10
fxp1      1514      <Link>      02.00.00.00.00.04 33012676    0 30112468
  0      0
  unit 0    1500 inet    10.0.0.0/8      10.0.0.1
                        10.0.0.0/8      10.0.0.4
                        128.0.0.0/2     128.0.0.1
                        128.0.0.0/2     128.0.0.4
                        1500 inet6     fe80::/64       fe80::200:ff:fe0
                        fec0::/64       fec0::a:0:0:4
                        1500 tnp
lsi        1496      <Link>
dsc         max      <Link>          0    0          0
  0      0
  lo0       max      <Link>          8980    0    8980
  0      0
  unit 0    max inet    127.0.0.1/8     127.0.0.1
                        192.168.0.1/8   192.168.0.1
  unit 16384 max inet    127.0.0.1/8     127.0.0.1
  unit 16385 max inet
gre         max      <Link>
ipip        max      <Link>
tap         max      <Link>
pime        max      <Link>
pimd        max      <Link>
mtun        max      <Link>
so-0/0/0    4474      <Link>          1679980    0 1068661
  0      0
  unit 0    4470 inet    <PtoP>          10.0.60.2          0    0          0
  0      0
...

```

## show route hidden

---

<b>Syntax</b>	<code>show route hidden</code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display only hidden route information. A hidden route is unusable, even if it is the best path.
<b>Options</b>	<b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b> .  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Understanding Hidden Routes</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show route hidden on page 2296</a> <a href="#">show route hidden detail on page 2297</a> <a href="#">show route hidden extensive on page 2297</a> <a href="#">show route hidden terse on page 2297</a>
<b>Output Fields</b>	For information about output fields, see the output field table for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route hidden

```
user@host> show route hidden
inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
127.0.0.1/32      [Direct/0] 04:26:38
                  > via lo0.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
10.5.5.5/32      [BGP/170] 03:44:10, localpref 100, from 10.4.4.4
                  AS path: 100 I
```

```

10.12.1.0/24      Unusable
                  [BGP/170] 03:44:10, localpref 100, from 10.4.4.4
                  AS path: 100 I
10.12.80.4/30    Unusable
                  [BGP/170] 03:44:10, localpref 100, from 10.4.4.4
                  AS path: I
...              Unusable

```

### show route hidden detail

```

user@host> show route hidden detail

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete
127.0.0.1/32 (1 entry, 0 announced)
  Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected
    State: <Hidden Martian Int>
    Local AS:      1
    Age: 4:27:37
    Task: IF
    AS path: I

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete

10.5.5.5/32 (1 entry, 0 announced)
  BGP Preference: 170/-101
    Route Distinguisher: 10.4.4.4:4
    Next hop type: Unusable
    Next-hop reference count: 6
    State: <Secondary Hidden Int Ext>
    Local AS:      1 Peer AS:      1
    Age: 3:45:09
    Task: BGP_1.10.4.4.4+2493
    AS path: 100 I
    Communities: target:1:999
    VPN Label: 100064
    Localpref: 100
    Router ID: 10.4.4.4
    Primary Routing Table bgp.13vpn.0
...

```

### show route hidden extensive

The output for the **show route hidden extensive** command is identical to that of the **show route hidden detail** command. For sample output, see [show route hidden detail on page 2297](#).

### show route hidden terse

```
user@host> show route hidden terse
```

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)

Restart Complete

+ = Active Route, - = Last Active, \* = Both

A Destination	P Prf	Metric 1	Metric 2	Next hop	AS path
127.0.0.1/32	D 0			>1o0.0	

private1\_\_\_.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)

Restart Complete

+ = Active Route, - = Last Active, \* = Both

A Destination	P Prf	Metric 1	Metric 2	Next hop	AS path
10.5.5.5/32	B 170	100		Unusable	100 I
10.12.1.0/24	B 170	100		Unusable	100 I
10.12.80.4/30	B 170	100		Unusable	I

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)

Restart Complete

bgp.l3vpn.0: 3 destinations, 3 routes (0 active, 0 holddown, 3 hidden)

Restart Complete

+ = Active Route, - = Last Active, \* = Both

A Destination	P Prf	Metric 1	Metric 2	Next hop	AS path
10.4.4.4:4:10.5.5.5/32	B 170	100		Unusable	100 I
10.4.4.4:4:10.12.1.0/24	B 170	100		Unusable	100 I
10.4.4.4:4:10.12.80.4/30	B 170	100		Unusable	I

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

Restart Complete

private1\_\_\_.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

## show route inactive-path

<b>List of Syntax</b>	<a href="#">Syntax on page 2299</a> <a href="#">Syntax (EX Series Switches) on page 2299</a>
<b>Syntax</b>	<pre>show route inactive-path &lt;brief   detail   extensive   terse&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route inactive-path &lt;brief   detail   extensive   terse&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	<p>Display routes for destinations that have no active route. An inactive route is a route that was not selected as the best path.</p>
<b>Options</b>	<p><b>none</b>—Display all inactive routes.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b>.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show route active-path on page 2198</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show route inactive-path on page 2299</a> <a href="#">show route inactive-path detail on page 2300</a> <a href="#">show route inactive-path extensive on page 2301</a> <a href="#">show route inactive-path terse on page 2301</a>
<b>Output Fields</b>	<p>For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.</p>

## Sample Output

### show route inactive-path

```
user@host> show route inactive-path

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
```

```
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.12.100.12/30      [OSPF/10] 03:57:28, metric 1
                    > via so-0/3/0.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.0/8          [Direct/0] 04:39:56
                    > via fxp1.0

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.12.80.0/30       [BGP/170] 04:38:17, localpref 100
                    AS path: 100 I
                    > to 10.12.80.1 via ge-6/3/2.0

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

bgp.l3vpn.0: 3 destinations, 3 routes (0 active, 0 holddown, 3 hidden)
Restart Complete

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

#### show route inactive-path detail

```
user@host> show route inactive-path detail

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete

10.12.100.12/30 (2 entries, 1 announced)
  OSPF   Preference: 10
        Next-hop reference count: 1
        Next hop: via so-0/3/0.0, selected
        State: <Int>
        Inactive reason: Route Preference
        Local AS:      1
        Age: 3:58:24   Metric: 1
        Area: 0.0.0.0
        Task: OSPF
        AS path: I

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

10.0.0.0/8 (2 entries, 0 announced)
  Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via fxp1.0, selected
        State: <NotBest Int>
```

```

Inactive reason: No difference
Age: 4:40:52
Task: IF
AS path: I

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete

10.12.80.0/30 (2 entries, 1 announced)
  BGP Preference: 170/-101
    Next-hop reference count: 6
    Source: 10.12.80.1
    Next hop: 10.12.80.1 via ge-6/3/2.0, selected
    State: <Ext>
    Inactive reason: Route Preference
    Peer AS: 100
    Age: 4:39:13
    Task: BGP_100.10.12.80.1+179
    AS path: 100 I
    Localpref: 100
    Router ID: 10.0.0.0

```

### show route inactive-path extensive

The output for the **show route inactive-path extensive** command is identical to that of the **show route inactive-path detail** command. For sample output, see [show route inactive-path detail on page 2300](#).

### show route inactive-path terse

```

user@host> show route inactive-path terse

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
  10.12.100.12/30   0 10           1             >so-0/3/0.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
  10.0.0.0/8        D  0             0             >fxp1.0

red.inet.0: 6 destinations, 8 routes (4 active, 0 holddown, 3 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
  10.12.80.0/30     B 170          100             >10.12.80.1    100 I

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

```

bgp.13vpn.0: 3 destinations, 3 routes (0 active, 0 holddown, 3 hidden)  
Restart Complete

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)  
Restart Complete

private1\_\_\_.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

## show route inactive-prefix

<b>List of Syntax</b>	<a href="#">Syntax on page 2303</a> <a href="#">Syntax (EX Series Switches) on page 2303</a>
<b>Syntax</b>	<pre>show route inactive-prefix &lt;brief   detail   extensive   terse&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route inactive-prefix &lt;brief   detail   extensive   terse&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	Display inactive route destinations in each routing table.
<b>Options</b>	<p><b>none</b>—Display all inactive route destination.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route inactive-prefix on page 2303</a> <a href="#">show route inactive-prefix detail on page 2304</a> <a href="#">show route inactive-prefix extensive on page 2304</a> <a href="#">show route inactive-prefix terse on page 2304</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route inactive-prefix

```
user@host> show route inactive-prefix

inet.0: 14 destinations, 14 routes (13 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

127.0.0.1/32          [Direct/0] 00:04:54
> via lo0.0
```

### show route inactive-prefix detail

```
user@host> show route inactive-prefix detail

inet.0: 14 destinations, 14 routes (13 active, 0 holddown, 1 hidden)
127.0.0.1/32 (1 entry, 0 announced)
  Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected
    State: <Hidden Martian Int>
    Age: 4:51
    Task: IF
    AS path: I00:04:54
      > via lo0.0
```

### show route inactive-prefix extensive

The output for the **show route inactive-prefix extensive** command is identical to that of the **show route inactive-path detail** command. For sample output, see [show route inactive-prefix detail on page 2304](#).

### show route inactive-prefix terse

```
user@host> show route inactive-prefix terse

inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2  Next hop      AS path
127.0.0.1/32      D   0                >lo0.0
```

## show route instance

<b>List of Syntax</b>	<a href="#">Syntax on page 2305</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 2305</a>
<b>Syntax</b>	<pre>show route instance &lt;brief   detail   summary&gt; &lt;instance-name&gt; &lt;logical-system (all   logical-system-name)&gt; &lt;operational&gt;</pre>
<b>Syntax (EX Series Switches and QFX Series)</b>	<pre>show route instance &lt;brief   detail   summary&gt; &lt;instance-name&gt; &lt;operational&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display routing instance information.
<b>Options</b>	<p><b>none</b>—(Same as <b>brief</b>) Display standard information about all routing instances.</p> <p><b>brief   detail   summary</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b>. (These options are not available with the <b>operational</b> keyword.)</p> <p><b>instance-name</b>—(Optional) Display information for all routing instances whose name begins with this string (for example, <b>cust1</b>, <b>cust11</b>, and <b>cust111</b> are all displayed when you run the <b>show route instance cust1</b> command).</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>operational</b>—(Optional) Display operational routing instances.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Example: Transporting IPv6 Traffic Across IPv4 Using Filter-Based Tunneling</i></li> <li>• <i>Example: Configuring the Helper Capability Mode for OSPFv3 Graceful Restart</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show route instance on page 2307</a> <a href="#">show route instance detail (Graceful Restart Complete) on page 2307</a> <a href="#">show route instance detail (Graceful Restart Incomplete) on page 2309</a>

[show route instance detail \(VPLS Routing Instance\) on page 2311](#)

[show route instance operational on page 2311](#)

[show route instance summary on page 2311](#)

**Output Fields** Table 206 on page 2306 lists the output fields for the **show route instance** command. Output fields are listed in the approximate order in which they appear.

*Table 206: show route instance Output Fields*

Field Name	Field Description	Level of Output
Instance or <i>instance-name</i>	Name of the routing instance.	All levels
Operational Routing Instances	( <b>operational</b> keyword only) Names of all operational routing instances.	—
Type	Type of routing instance: <b>forwarding</b> , <b>l2vpn</b> , <b>no-forwarding</b> , <b>vpls</b> , <b>virtual-router</b> , or <b>vrf</b> .	All levels
State	State of the routing instance: <b>active</b> or <b>inactive</b> .	<b>brief detail none</b>
Interfaces	Name of interfaces belonging to this routing instance.	<b>brief detail none</b>
Restart State	Status of graceful restart for this instance: <b>Pending</b> or <b>Complete</b> .	<b>detail</b>
Path selection timeout	Maximum amount of time, in seconds, remaining until graceful restart is declared complete. The default is <b>300</b> .	<b>detail</b>
Tables	Tables (and number of routes) associated with this routing instance.	<b>brief detail none</b>
Route-distinguisher	Unique route distinguisher associated with this routing instance.	<b>detail</b>
Vrf-import	VPN routing and forwarding instance import policy name.	<b>detail</b>
Vrf-export	VPN routing and forwarding instance export policy name.	<b>detail</b>
Vrf-import-target	VPN routing and forwarding instance import target community name.	<b>detail</b>
Vrf-export-target	VPN routing and forwarding instance export target community name.	<b>detail</b>
Vrf-edge-protection-id	Context identifier configured for edge-protection.	<b>detail</b>
Fast-reroute-priority	Fast reroute priority setting for a VPLS routing instance: <b>high</b> , <b>medium</b> , or <b>low</b> . The default is <b>low</b> .	<b>detail</b>
Restart State	Restart state: <ul style="list-style-type: none"> <li><b>Pending:protocol-name</b>—List of protocols that have not yet completed graceful restart for this routing table.</li> <li><b>Complete</b>—All protocols have restarted for this routing table.</li> </ul>	<b>detail</b>

Table 206: show route instance Output Fields (continued)

Field Name	Field Description	Level of Output
Primary rib	Primary table for this routing instance.	<b>brief</b> none <b>summary</b>
Active/holddown/hidden	Number of active, hold-down, and hidden routes.	All levels

## Sample Output

### show route instance

```

user@host> show route instance
Instance          Type
Primary RIB
master            forwarding
inet.0            16/0/1
iso.0             1/0/0
mpls.0            0/0/0
inet6.0           2/0/0
l2circuit.0       0/0/0
__juniper_private1__ forwarding
__juniper_private1__.inet.0 12/0/0
__juniper_private1__.inet6.0 1/0/0

```

### show route instance detail (Graceful Restart Complete)

```

user@host> show route instance detail
master:
Router ID: 10.255.14.176
Type: forwarding      State: Active
Restart State: Complete Path selection timeout: 300
Tables:
inet.0                : 17 routes (15 active, 0 holddown, 1 hidden)
Restart Complete
inet.3                : 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
iso.0                 : 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete
mpls.0                : 19 routes (19 active, 0 holddown, 0 hidden)
Restart Complete
bgp.l3vpn.0           : 10 routes (10 active, 0 holddown, 0 hidden)
Restart Complete
inet6.0               : 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
bgp.l2vpn.0           : 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete
BGP-INET:
Router ID: 10.69.103.1
Type: vrf              State: Active
Restart State: Complete Path selection timeout: 300
Interfaces:
t3-0/0/0.103
Route-distinguisher: 10.255.14.176:103
Vrf-import: [ BGP-INET-import ]
Vrf-export: [ BGP-INET-export ]
Tables:
BGP-INET.inet.0       : 4 routes (4 active, 0 holddown, 0 hidden)

```

```
Restart Complete
BGP-L:
Router ID: 10.69.104.1
Type: vrf                      State: Active
Restart State: Complete Path selection timeout: 300
Interfaces:
  t3-0/0/0.104
Route-distinguisher: 10.255.14.176:104
Vrf-import: [ BGP-L-import ]
Vrf-export: [ BGP-L-export ]
Tables:
  BGP-L.inet.0                  : 4 routes (4 active, 0 holddown, 0 hidden)
  Restart Complete
  BGP-L.mpls.0                  : 3 routes (3 active, 0 holddown, 0 hidden)
  Restart Complete
L2VPN:
Router ID: 0.0.0.0
Type: l2vpn                    State: Active
Restart State: Complete Path selection timeout: 300
Interfaces:
  t3-0/0/0.512
Route-distinguisher: 10.255.14.176:512
Vrf-import: [ L2VPN-import ]
Vrf-export: [ L2VPN-export ]
Tables:
  L2VPN.l2vpn.0                 : 2 routes (2 active, 0 holddown, 0 hidden)
  Restart Complete
LDP:
Router ID: 10.69.105.1
Type: vrf                      State: Active
Restart State: Complete Path selection timeout: 300
Interfaces:
  t3-0/0/0.105
Route-distinguisher: 10.255.14.176:105
Vrf-import: [ LDP-import ]
Vrf-export: [ LDP-export ]
Tables:
  LDP.inet.0                    : 5 routes (4 active, 0 holddown, 0 hidden)
  Restart Complete
OSPF:
Router ID: 10.69.101.1
Type: vrf                      State: Active
Restart State: Complete Path selection timeout: 300
Interfaces:
  t3-0/0/0.101
Route-distinguisher: 10.255.14.176:101
Vrf-import: [ OSPF-import ]
Vrf-export: [ OSPF-export ]
Vrf-import-target: [ target:11111
Tables:
  OSPF.inet.0                   : 8 routes (7 active, 0 holddown, 0 hidden)
  Restart Complete
RIP:
Router ID: 10.69.102.1
Type: vrf                      State: Active
Restart State: Complete Path selection timeout: 300
Interfaces:
  t3-0/0/0.102
Route-distinguisher: 10.255.14.176:102
Vrf-import: [ RIP-import ]
Vrf-export: [ RIP-export ]
```

```

Tables:
  RIP.inet.0          : 6 routes (6 active, 0 holddown, 0 hidden)
  Restart Complete
STATIC:
  Router ID: 10.69.100.1
  Type: vrf           State: Active
  Restart State: Complete Path selection timeout: 300
  Interfaces:
    t3-0/0/0.100
  Route-distinguisher: 10.255.14.176:100
  Vrf-import: [ STATIC-import ]
  Vrf-export: [ STATIC-export ]
  Tables:
    STATIC.inet.0      : 4 routes (4 active, 0 holddown, 0 hidden)
    Restart Complete

```

### show route instance detail (Graceful Restart Incomplete)

```

user@host> show route instance detail
master:
  Router ID: 10.255.14.176
  Type: forwarding      State: Active
  Restart State: Pending Path selection timeout: 300
  Tables:
    inet.0              : 17 routes (15 active, 1 holddown, 1 hidden)
    Restart Pending: OSPF LDP
    inet.3              : 2 routes (2 active, 0 holddown, 0 hidden)
    Restart Pending: OSPF LDP
    iso.0               : 1 routes (1 active, 0 holddown, 0 hidden)
    Restart Complete
    mpls.0              : 23 routes (23 active, 0 holddown, 0 hidden)
    Restart Pending: LDP VPN
    bgp.l3vpn.0         : 10 routes (10 active, 0 holddown, 0 hidden)
    Restart Pending: BGP VPN
    inet6.0             : 2 routes (2 active, 0 holddown, 0 hidden)
    Restart Complete
    bgp.l2vpn.0         : 1 routes (1 active, 0 holddown, 0 hidden)
    Restart Pending: BGP VPN
  BGP-INET:
    Router ID: 10.69.103.1
    Type: vrf           State: Active
    Restart State: Pending Path selection timeout: 300
    Interfaces:
      t3-0/0/0.103
    Route-distinguisher: 10.255.14.176:103
    Vrf-import: [ BGP-INET-import ]
    Vrf-export: [ BGP-INET-export ]
    Tables:
      BGP-INET.inet.0    : 6 routes (5 active, 0 holddown, 0 hidden)
      Restart Pending: VPN
  BGP-L:
    Router ID: 10.69.104.1
    Type: vrf           State: Active
    Restart State: Pending Path selection timeout: 300
    Interfaces:
      t3-0/0/0.104
    Route-distinguisher: 10.255.14.176:104
    Vrf-import: [ BGP-L-import ]
    Vrf-export: [ BGP-L-export ]
    Tables:
      BGP-L.inet.0       : 6 routes (5 active, 0 holddown, 0 hidden)

```

```

Restart Pending: VPN
BGP-L.mpls.0      : 2 routes (2 active, 0 holddown, 0 hidden)
Restart Pending: VPN
L2VPN:
Router ID: 0.0.0.0
Type: l2vpn      State: Active
Restart State: Pending Path selection timeout: 300
Interfaces:
  t3-0/0/0.512
Route-distinguisher: 10.255.14.176:512
Vrf-import: [ L2VPN-import ]
Vrf-export: [ L2VPN-export ]
Tables:
  L2VPN.l2vpn.0      : 2 routes (2 active, 0 holddown, 0 hidden)
Restart Pending: VPN L2VPN
LDP:
Router ID: 10.69.105.1
Type: vrf      State: Active
Restart State: Pending Path selection timeout: 300
Interfaces:
  t3-0/0/0.105
Route-distinguisher: 10.255.14.176:105
Vrf-import: [ LDP-import ]
Vrf-export: [ LDP-export ]
Tables:
  LDP.inet.0      : 5 routes (4 active, 1 holddown, 0 hidden)
Restart Pending: OSPF LDP VPN
OSPF:
Router ID: 10.69.101.1
Type: vrf      State: Active
Restart State: Pending Path selection timeout: 300
Interfaces:
  t3-0/0/0.101
Route-distinguisher: 10.255.14.176:101
Vrf-import: [ OSPF-import ]
Vrf-export: [ OSPF-export ]
Tables:
  OSPF.inet.0      : 8 routes (7 active, 1 holddown, 0 hidden)
Restart Pending: OSPF VPN
RIP:
Router ID: 10.69.102.1
Type: vrf      State: Active
Restart State: Pending Path selection timeout: 300
Interfaces:
  t3-0/0/0.102
Route-distinguisher: 10.255.14.176:102
Vrf-import: [ RIP-import ]
Vrf-export: [ RIP-export ]
Tables:
  RIP.inet.0      : 8 routes (6 active, 2 holddown, 0 hidden)
Restart Pending: RIP VPN
STATIC:
Router ID: 10.69.100.1
Type: vrf      State: Active
Restart State: Pending Path selection timeout: 300
Interfaces:
  t3-0/0/0.100
Route-distinguisher: 10.255.14.176:100
Vrf-import: [ STATIC-import ]
Vrf-export: [ STATIC-export ]
Tables:

```

```

STATIC.inet.0          : 4 routes (4 active, 0 holddown, 0 hidden)
Restart Pending: VPN

```

### show route instance detail (VPLS Routing Instance)

```

user@host> show route instance detail test-vpls
test-vpls:
  Router ID: 0.0.0.0
  Type: vpls                      State: Active
  Interfaces:
    lsi.1048833
    lsi.1048832
    fe-0/1/0.513
  Route-distinguisher: 10.255.37.65:1
  Vrf-import: [ __vrf-import-test-vpls-internal__ ]
  Vrf-export: [ __vrf-export-test-vpls-internal__ ]
  Vrf-import-target: [ target:300:1 ]
  Vrf-export-target: [ target:300:1 ]
  Vrf-edge-protection-id: 166.1.3.1 Fast-reroute-priority: high
  Tables:
    test-vpls.l2vpn.0          : 3 routes (3 active, 0 holddown, 0 hidden)

```

### show route instance operational

```

user@host> show route instance operational
Operational Routing Instances:

master
default

```

### show route instance summary

```

user@host> show route instance summary

```

Instance	Type	Primary rib	Active/holddown/hidden
master	forwarding	inet.0	15/0/1
		iso.0	1/0/0
		mpls.0	35/0/0
		l3vpn.0	0/0/0
		inet6.0	2/0/0
		l2vpn.0	0/0/0
		l2circuit.0	0/0/0
BGP-INET	vrf	BGP-INET.inet.0	5/0/0
		BGP-INET.iso.0	0/0/0
		BGP-INET.inet6.0	0/0/0
BGP-L	vrf	BGP-L.inet.0	5/0/0
		BGP-L.iso.0	0/0/0
		BGP-L.mpls.0	4/0/0
		BGP-L.inet6.0	0/0/0
L2VPN	l2vpn	L2VPN.inet.0	0/0/0
		L2VPN.iso.0	0/0/0
		L2VPN.inet6.0	0/0/0
		L2VPN.l2vpn.0	2/0/0
LDP	vrf	LDP.inet.0	4/0/0
		LDP.iso.0	0/0/0
		LDP.mpls.0	0/0/0

OSPF	vrf	LDP.inet6.0	0/0/0
		LDP.l2circuit.0	0/0/0
		OSPF.inet.0	7/0/0
RIP	vrf	OSPF.iso.0	0/0/0
		OSPF.inet6.0	0/0/0
		RIP.inet.0	6/0/0
STATIC	vrf	RIP.iso.0	0/0/0
		RIP.inet6.0	0/0/0
		STATIC.inet.0	4/0/0
		STATIC.iso.0	0/0/0
		STATIC.inet6.0	0/0/0

## show route label

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2313</a> <a href="#">Syntax (EX Series Switches) on page 2313</a>
<b>Syntax</b>	<pre>show route label <i>label</i> &lt;brief   detail   extensive   terse&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route label <i>label</i> &lt;brief   detail   extensive   terse&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p>
<b>Description</b>	Display the routes based on a specified Multiprotocol Label Switching (MPLS) label value.
<b>Options</b>	<p><b><i>label</i></b>—Value of the MPLS label.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to brief.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show route label terse on page 2314</a> <a href="#">show route label on page 2314</a> <a href="#">show route label detail on page 2314</a> <a href="#">show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 2314</a> <a href="#">show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 2315</a> <a href="#">show route label detail (Multipoint LDP with Multicast-Only Fast Reroute) on page 2315</a> <a href="#">show route label detail (Dynamic List Next Hop) on page 2316</a> <a href="#">show route label extensive on page 2317</a>
<b>Output Fields</b>	For information about output fields, see the output field table for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route label terse

```
user@host> show route label 100016 terse

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 100016          V 170                >10.12.80.1
```

### show route label

```
user@host> show route label 100016

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
100016          *[VPN/170] 03:25:41
                  > to 10.12.80.1 via ge-6/3/2.0, Pop
```

### show route label detail

```
user@host> show route label 100016 detail

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
100016 (1 entry, 1 announced)
    *VPN      Preference: 170
              Next-hop reference count: 2
              Source: 10.12.80.1
              Next hop: 10.12.80.1 via ge-6/3/2.0, selected
              Label operation: Pop
              State: <Active Int Ext>
              Local AS:      1
              Age: 3:23:31
              Task: BGP.0.0.0.0+179
              Announcement bits (1): 0-KRT
              AS path: 100 I
              Ref Cnt: 2
```

### show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show route label 299872 detail

mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
299872 (1 entry, 1 announced)
    *LDP      Preference: 9
              Next hop type: Flood
              Next-hop reference count: 3
              Address: 0x9097d90
              Next hop: via vt-0/1/0.1
              Next-hop index: 661
              Label operation: Pop
              Address: 0x9172130
              Next hop: via so-0/0/3.0
              Next-hop index: 654
              Label operation: Swap 299872
```

```

State: **Active Int>
Local AS: 1001
Age: 8:20      Metric: 1
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 10.255.72.166, grp 232.1.1.1,
src 192.168.142.2

```

### show route label detail (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show route label 299872 detail
mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
299872 (1 entry, 1 announced)
  *LDP    Preference: 9
    Next hop type: Flood
    Next-hop reference count: 3
    Address: 0x9097d90
    Next hop: via vt-0/1/0.1
    Next-hop index: 661
    Label operation: Pop
    Address: 0x9172130
    Next hop: via so-0/0/3.0
    Next-hop index: 654
    Label operation: Swap 299872
    State: **Active Int>
    Local AS: 1001
    Age: 8:20      Metric: 1
    Task: LDP
    Announcement bits (1): 0-KRT
    AS path: I
    FECs bound to route: P2MP root-addr 10.255.72.166, grp 232.1.1.1,
src 192.168.142.2

```

### show route label detail (Multipoint LDP with Multicast-Only Fast Reroute)

```

user@host> show route label 301568 detail
mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301568 (1 entry, 1 announced)
  *LDP    Preference: 9
    Next hop type: Flood
    Address: 0x2735208
    Next-hop reference count: 3
    Next hop type: Router, Next hop index: 1397
    Address: 0x2735d2c
    Next-hop reference count: 3
    Next hop: 1.3.8.2 via ge-1/2/22.0
    Label operation: Pop
    Load balance label: None;
    Next hop type: Router, Next hop index: 1395
    Address: 0x2736290
    Next-hop reference count: 3
    Next hop: 1.3.4.2 via ge-1/2/18.0
    Label operation: Pop
    Load balance label: None;
    State: <Active Int AckRequest MulticastRPF>
    Local AS: 10
    Age: 54:05      Metric: 1
    Validation State: unverified

```

```

Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src:
192.168.219.11
Primary Upstream : 1.1.1.3:0--1.1.1.2:0
RPF Nexthops :
    ge-1/2/15.0, 1.2.94.1, Label: 301568, weight: 0x1
    ge-1/2/14.0, 1.2.3.1, Label: 301568, weight: 0x1
Backup Upstream : 1.1.1.3:0--1.1.1.6:0
RPF Nexthops :
    ge-1/2/20.0, 1.2.96.1, Label: 301584, weight: 0xfffe
    ge-1/2/19.0, 1.3.6.1, Label: 301584, weight: 0xfffe

```

### show route label detail (Dynamic List Next Hop)

The output for **show route label detail** shows the two indirect next hop for an ESI.

```

user@host> show route label 299952 detail
mpls.0: 14 destinations, 14 routes (14 active, 0 holddown, 0 hidden)
299952 (1 entry, 1 announced)
TSI:
KRT in-kernel 299952 /52 -> {Dyn list:indirect(1048577), indirect(1048574)}
*EVPN Preference: 7
Next hop type: Dynamic List, Next hop index: 1048575
Address: 0x13f497fc
Next-hop reference count: 5
Next hop: ELNH Address 0xb7a3d90 uflags EVPN data
    Next hop type: Indirect, Next hop index: 0
    Address: 0xb7a3d90
    Next-hop reference count: 3
    Protocol next hop: 10.255.255.2
    Label operation: Push 301344
    Indirect next hop: 0x135b5c00 1048577 INH Session ID: 0x181
        Next hop type: Router, Next hop index: 619
        Address: 0xb7a3d30
        Next-hop reference count: 4
        Next hop: 1.0.0.4 via ge-0/0/1.0
        Label operation: Push 301344, Push 299792(top)
        Label TTL action: no-prop-ttl, no-prop-ttl(top)
        Load balance label: Label 301344: None; Label 299792:
None;
        Label element ptr: 0xb7a3cc0
        Label parent element ptr: 0xb7a34e0
        Label element references: 1
        Label element child references: 0
        Label element lsp id: 0
    Next hop: ELNH Address 0xb7a37f0 uflags EVPN data
        Next hop type: Indirect, Next hop index: 0
        Address: 0xb7a37f0
        Next-hop reference count: 3
        Protocol next hop: 10.255.255.3
        Label operation: Push 301632
        Indirect next hop: 0x135b5480 1048574 INH Session ID: 0x180
            Next hop type: Router, Next hop index: 600
            Address: 0xb7a3790
            Next-hop reference count: 4
            Next hop: 1.0.0.4 via ge-0/0/1.0
            Label operation: Push 301632, Push 299776(top)
            Label TTL action: no-prop-ttl, no-prop-ttl(top)
            Load balance label: Label 301632: None; Label 299776:

```

```
None;
Label element ptr: 0xb7a3720
Label parent element ptr: 0xb7a3420
Label element references: 1
Label element child references: 0
Label element lsp id: 0
State: <Active Int>
Age: 1:18
Validation State: unverified
Task: evpn global task
Announcement bits (2): 1-KRT 2-evpn global task
AS path: I
Routing Instance blue, Route Type Egress-MAC, ESI
00:11:22:33:44:55:66:77:88:99
```

### [show route label extensive](#)

The output for the `show route label extensive` command is identical to that of the `show route label detail` command. For sample output, see [show route label detail on page 2314](#).

## show route label-switched-path

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2318</a> <a href="#">Syntax (EX Series Switches) on page 2318</a>
<b>Syntax</b>	<code>show route label-switched-path <i>path-name</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Syntax (EX Series Switches)</b>	<code>show route label-switched-path <i>path-name</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.5 for EX Series switches.
<b>Description</b>	Display the routes used in an MPLS label-switched path (LSP).
<b>Options</b>	<b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b><i>path-name</i></b> —LSP tunnel name.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route label-switched-path on page 2318</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route label-switched-path

```
user@host> show route label-switched-path sf-to-ny
inet.0: 29 destinations, 29 routes (29 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          [MPLS/7] 00:00:06, metric 0
> to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny
3.3.3.3/32          *[MPLS/7] 00:00:06, metric 0
> to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2.2.2.2/32          *[MPLS/7] 00:00:06, metric 0
> to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny
```

```
4.4.4.4/32      *[MPLS/7] 00:00:06, metric 0
                 to 111.222.1.9 via s0-0/0/0, label-switched-path abc
                 > to 111.222.1.9 via s0-0/0/0, label-switched-path xyz
                 to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny
111.222.1.9/32  [MPLS/7] 00:00:06, metric 0
                 > to 111.222.1.9 via s0-0/0/0, label-switched-path sf-to-ny

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

mpls.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

## show route localization

<b>Syntax</b>	<code>show route localization</code>
<b>Release Information</b>	Command introduced in Junos OS Release 11.4 for T-Series routers. Command introduced in Junos OS Release 12.3 for MX Series routers.
<b>Description</b>	(T320, T640, and T1600 routers only) Display route localization details.
<b>Options</b>	<b>detail</b> —Display detailed output.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Example: Configuring Packet Forwarding Engine FIB Localization</i></li> </ul>
<b>Output Fields</b>	Table 207 on page 2320 lists the output fields for the <b>show route localization</b> command. Output fields are listed in the approximate order in which they appear.

Table 207: show route localization Output Fields

Field Name	Field Description
<b>FIB-local</b>	FPCs configured as FIB-local.
<b>FIB-remote</b>	FPCs configured as FIB-remote.
<b>Normal</b>	FPCs neither configured as <b>FIB-local</b> or <b>FIB-remote</b> .
<b>Protocols</b>	IPv4 (inet) or IPv6 (inet6) traffic configured for route localization.

## Sample Output

```
user@R0> show route localization
FIB localization ready FPCs (and FIB-local Forwarding Engine addresses)
  FIB-local:  FPC2(4,5)
  FIB-remote: FPC0, FPC1
  Normal:     FPC3, FPC4, FPC5, FPC6, FPC7
```

```
user@R0> show route localization detail
FIB localization ready FPCs (and FIB-local Forwarding Engine addresses)
  FIB-local:  FPC2(4,5)
  FIB-remote: FPC0, FPC1
  Normal:     FPC3, FPC4, FPC5, FPC6, FPC7
FIB localization configuration
  Protocols:  inet, inet6
  FIB-local:  FPC2
  FIB-remote: FPC0, FPC1
```

**Forwarding Engine addresses**

FPC0: 1  
FPC1: 2  
FPC2: 4, 5  
FPC3: 6  
FPC4: 8  
FPC5: 11  
FPC6: 13  
FPC7: 15

## show route martians

---

**List of Syntax**   [Syntax on page 2322](#)  
[Syntax \(EX Series Switches\) on page 2322](#)

**Syntax**   `show route martians`  
          `<logical-system (all | logical-system-name)>`  
          `<table routing-table-name>`

**Syntax (EX Series Switches)**   `show route martians`  
                                  `<table routing-table-name>`

**Release Information**   Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description**   Display the martian (invalid and ignored) entries associated with each routing table.

**Options**   **none**—Display standard information about route martians for all routing tables.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**table *routing-table-name***—(Optional) Display information about route martians for all routing tables whose name begins with this string (for example, **inet.0** and **inet6.0** are both displayed when you run the **show route martians table inet** command).

**Required Privilege Level**   view

**Related Documentation**

- *Example: Removing the Class E Prefix on Martian Addresses*
- *Understanding Martian Addresses*

**List of Sample Output**   [show route martians on page 2323](#)

**Output Fields**   [Table 208 on page 2322](#) lists the output fields for the **show route martians** command. Output fields are listed in the approximate order in which they appear

*Table 208: show route martians Output Fields*

Field Name	Field Description
<i>table-name</i>	Name of the route table in which the route martians reside.
<i>destination-prefix</i>	Route destination.
<i>match value</i>	Route match parameter.

Table 208: show route martians Output Fields (continued)

Field Name	Field Description
<b>status</b>	Status of the route: <b>allowed</b> or <b>disallowed</b> .

## Sample Output

### show route martians

```

user@host> show route martians

inet.0:
    0.0.0.0/0 exact -- allowed
    0.0.0.0/8 orlonger -- disallowed
    127.0.0.0/8 orlonger -- disallowed
    192.0.0.0/24 orlonger -- disallowed
    240.0.0.0/4 orlonger -- disallowed
    224.0.0.0/4 exact -- disallowed
    224.0.0.0/24 exact -- disallowed

inet.1:
    0.0.0.0/0 exact -- allowed
    0.0.0.0/8 orlonger -- disallowed
    127.0.0.0/8 orlonger -- disallowed
    192.0.0.0/24 orlonger -- disallowed
    240.0.0.0/4 orlonger -- disallowed

inet.2:
    0.0.0.0/0 exact -- allowed
    0.0.0.0/8 orlonger -- disallowed
    127.0.0.0/8 orlonger -- disallowed
    192.0.0.0/24 orlonger -- disallowed
    240.0.0.0/4 orlonger -- disallowed
    224.0.0.0/4 exact -- disallowed
    224.0.0.0/24 exact -- disallowed

inet.3:
    0.0.0.0/0 exact -- allowed
    0.0.0.0/8 orlonger -- disallowed
    127.0.0.0/8 orlonger -- disallowed
    192.0.0.0/24 orlonger -- disallowed
    240.0.0.0/4 orlonger -- disallowed
    224.0.0.0/4 exact -- disallowed
    224.0.0.0/24 exact -- disallowed

...

inet6.0:
    ::1/128 exact -- disallowed
    ff00::/8 exact -- disallowed
    ff02::/16 exact -- disallowed

inet6.1:
    ::1/128 exact -- disallowed

inet6.2:
    ::1/128 exact -- disallowed
    ff00::/8 exact -- disallowed
    ff02::/16 exact -- disallowed

```

```
inet6.3:      ::1/128 exact -- disallowed
               ff00::/8 exact -- disallowed
               ff02::/16 exact -- disallowed
...

```

## show route match-prefix

<b>Syntax</b>	<code>show route match-prefix <i>match-prefix</i>;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 11.4.
<b>Description</b>	Allows you to search for routes using regular expressions based on the extended (modern) regular expressions as defined in POSIX 1003.2.
<b>Options</b>	<i>match-prefix</i> —Regular expression to match formatted prefix.
<b>Additional Information</b>	
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<i>Regular Expressions for Allowing and Denying Junos OS Operational Mode Commands, Configuration Statements, and Hierarchies</i>
<b>List of Sample Output</b>	<a href="#">show route match-prefix *:10.255.2.200:6:* (Show all routes matching route distributor 10.255.2.200:6) on page 2325</a> <a href="#">show route match-prefix 7* (Show all mvpn type-7 routes) on page 2325</a> <a href="#">show route match-prefix *:224.* (Show all routes matching group 224/4) on page 2325</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

[show route match-prefix \\*:10.255.2.200:6:\\* \(Show all routes matching route distributor 10.255.2.200:6\)](#)

```
user@host> show route match-prefix *:10.255.2.200:6:*
```

[show route match-prefix 7\\* \(Show all mvpn type-7 routes\)](#)

```
user@host> show route table blue.mvpn.0 match-prefix 7*
Paste
router command output here
```

[show route match-prefix \\*:224.\\* \(Show all routes matching group 224/4\)](#)

```
user@host> show route match-prefix *:224.*
```

## show route next-hop

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2326</a> <a href="#">Syntax (EX Series Switches) on page 2326</a>
<b>Syntax</b>	<code>show route next-hop <i>next-hop</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Syntax (EX Series Switches)</b>	<code>show route next-hop <i>next-hop</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Display the entries in the routing table that are being sent to the specified next-hop address.
<b>Options</b>	<b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output. <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system. <b><i>next-hop</i></b> —Next-hop address.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route next-hop on page 2326</a> <a href="#">show route next-hop detail on page 2327</a> <a href="#">show route next-hop extensive on page 2329</a> <a href="#">show route next-hop terse on page 2330</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route next-hop

```
user@host> show route next-hop 192.168.71.254

inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.10.0.0/16      *[Static/5] 06:26:25
                  > to 192.168.71.254 via fxp0.0
10.209.0.0/16    *[Static/5] 06:26:25
```

```

> to 192.168.71.254 via fxp0.0
172.16.0.0/12    *[Static/5] 06:26:25
> to 192.168.71.254 via fxp0.0
192.168.0.0/16    *[Static/5] 06:26:25
> to 192.168.71.254 via fxp0.0
192.168.102.0/23  *[Static/5] 06:26:25
> to 192.168.71.254 via fxp0.0
207.17.136.0/24  *[Static/5] 06:26:25
> to 192.168.71.254 via fxp0.0
207.17.136.192/32 *[Static/5] 06:26:25
> to 192.168.71.254 via fxp0.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

```

### show route next-hop detail

```

user@host> show route next-hop 192.168.71.254 detail

inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
Restart Complete
10.10.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

10.209.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

172.16.0.0/12 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>

```

```

Local AS:      1
Age: 6:27:41
Task: RT
Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
AS path: I

192.168.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS:      1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

192.168.102.0/23 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS:      1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

207.17.136.0/24 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS:      1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

207.17.136.192/32 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 36
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS:      1
    Age: 6:27:41
    Task: RT
    Announcement bits (3): 0-KRT 3-Resolve tree 1 5-Resolve tree 2
    AS path: I

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

```

```
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
```

```
private1__inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

### show route next-hop extensive

```
user@host> show route next-hop 192.168.71.254 extensive
```

```
inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
```

```
TSI:
```

```
KRT in-kernel 10.10.0.0/16 -> {192.168.71.254}
```

```
*Static Preference: 5
```

```
Next-hop reference count: 22
```

```
Next hop: 192.168.71.254 via fxp0.0, selected
```

```
State: <Active NoReadvrt Int Ext>
```

```
Local AS: 69
```

```
Age: 2:02:28
```

```
Task: RT
```

```
Announcement bits (1): 0-KRT
```

```
AS path: I
```

```
10.209.0.0/16 (1 entry, 1 announced)
```

```
TSI:
```

```
KRT in-kernel 10.209.0.0/16 -> {192.168.71.254}
```

```
*Static Preference: 5
```

```
Next-hop reference count: 22
```

```
Next hop: 192.168.71.254 via fxp0.0, selected
```

```
State: <Active NoReadvrt Int Ext>
```

```
Local AS: 69
```

```
Age: 2:02:28
```

```
Task: RT
```

```
Announcement bits (1): 0-KRT
```

```
AS path: I
```

```
172.16.0.0/12 (1 entry, 1 announced)
```

```
TSI:
```

```
KRT in-kernel 172.16.0.0/12 -> {192.168.71.254}
```

```
*Static Preference: 5
```

```
Next-hop reference count: 22
```

```
Next hop: 192.168.71.254 via fxp0.0, selected
```

```
State: <Active NoReadvrt Int Ext>
```

```
Local AS: 69
```

```
Age: 2:02:28
```

```
Task: RT
```

```
Announcement bits (1): 0-KRT
```

```
AS path: I
```

```
192.168.0.0/16 (1 entry, 1 announced)
```

```
TSI:
```

```
KRT in-kernel 192.168.0.0/16 -> {192.168.71.254}
```

```
*Static Preference: 5
```

```
Next-hop reference count: 22
```

```
Next hop: 192.168.71.254 via fxp0.0, selected
```

```
State: <Active NoReadvrt Int Ext>
```

```
Local AS: 69
```

```
Age: 2:02:28
```

```
Task: RT
```

```
Announcement bits (1): 0-KRT
```

```
AS path: I
```

```
192.168.102.0/23 (1 entry, 1 announced)
TSI:
KRT in-kernel 192.168.102.0/23 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 2:02:28
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

207.17.136.0/24 (1 entry, 1 announced)
TSI:
KRT in-kernel 207.17.136.0/24 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 2:02:28
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

207.17.136.192/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 207.17.136.192/32 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Local AS: 69
    Age: 2:02:28
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

green.l2vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

red.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

#### show route next-hop terse

```
user@host> show route next-hop 192.168.71.254 terse

inet.0: 25 destinations, 26 routes (24 active, 0 holddown, 1 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	10.10.0.0/16	S	5			>192.168.71.254	
*	10.209.0.0/16	S	5			>192.168.71.254	
*	172.16.0.0/12	S	5			>192.168.71.254	
*	192.168.0.0/16	S	5			>192.168.71.254	
*	192.168.102.0/23	S	5			>192.168.71.254	
*	207.17.136.0/24	S	5			>192.168.71.254	
*	207.17.136.192/32	S	5			>192.168.71.254	

private1\_\_\_.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

red.inet.0: 4 destinations, 5 routes (4 active, 0 holddown, 0 hidden)  
Restart Complete

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)  
Restart Complete

mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)  
Restart Complete

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)  
Restart Complete

private1\_\_\_.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

## show route no-community

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2332</a> <a href="#">Syntax (EX Series Switches) on page 2332</a>
<b>Syntax</b>	<code>show route no-community</code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Syntax (EX Series Switches)</b>	<code>show route no-community</code> <code>&lt;brief   detail   extensive   terse&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Display the route entries in each routing table that are not associated with any community.
<b>Options</b>	<b>none</b> —(Same as <b>brief</b> ) Display the route entries in each routing table that are not associated with any community.  <b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route no-community on page 2332</a> <a href="#">show route no-community detail on page 2333</a> <a href="#">show route no-community extensive on page 2333</a> <a href="#">show route no-community terse on page 2334</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route no-community

```
user@host> show route no-community
inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.10.0.0/16          *[Static/5] 00:36:27
                    > to 192.168.71.254 via fxp0.0
10.209.0.0/16        *[Static/5] 00:36:27
                    > to 192.168.71.254 via fxp0.0
10.255.71.52/32     *[Direct/0] 00:36:27
```

```

> via lo0.0
10.255.71.63/32    *[OSPF/10] 00:04:39, metric 1
> to 35.1.1.2 via ge-3/1/0.0
10.255.71.64/32    *[OSPF/10] 00:00:08, metric 2
> to 35.1.1.2 via ge-3/1/0.0
10.255.71.240/32   *[OSPF/10] 00:05:04, metric 2
                    via so-0/1/2.0
> via so-0/3/2.0
10.255.71.241/32   *[OSPF/10] 00:05:14, metric 1
> via so-0/1/2.0
10.255.71.242/32   *[OSPF/10] 00:05:19, metric 1
> via so-0/3/2.0
172.16.12.0/24     *[OSPF/10] 00:05:14, metric 2
> via so-0/3/2.0
172.16.14.0/24     *[OSPF/10] 00:00:08, metric 3
> to 35.1.1.2 via ge-3/1/0.0
                    via so-0/1/2.0
                    via so-0/3/2.0
172.16.16.0/24     *[OSPF/10] 00:05:14, metric 2
> via so-0/1/2.0
.....

```

#### show route no-community detail

```

user@host> show route no-community detail

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 38:08
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

10.209.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 38:08
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

.....

```

#### show route no-community extensive

```

user@host> show route no-community extensive

inet.0: 18 destinations, 18 routes (17 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.10.0.0/16 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>

```

```

Local AS: 69
Age: 2:03:33
Task: RT
Announcement bits (1): 0-KRT
AS path: I

10.209.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.209.0.0/16 -> {192.168.71.254}
*Static Preference: 5
  Next-hop reference count: 22
  Next hop: 192.168.71.254 via fxp0.0, selected
  State: <Active NoReadvrt Int Ext>
  Local AS: 69
  Age: 2:03:33
  Task: RT
  Announcement bits (1): 0-KRT
  AS path: I

```

### show route no-community terse

```
user@host> show route no-community terse
```

```
inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	10.10.0.0/16	S	5			>192.168.71.254	
*	10.209.0.0/16	S	5			>192.168.71.254	
*	10.255.71.52/32	D	0			>100.0	
*	10.255.71.63/32	0	10	1		>35.1.1.2	
*	10.255.71.64/32	0	10	2		>35.1.1.2	
*	10.255.71.240/32	0	10	2		so-0/1/2.0	
						>so-0/3/2.0	
*	10.255.71.241/32	0	10	1		>so-0/1/2.0	
*	10.255.71.242/32	0	10	1		>so-0/3/2.0	
*	172.16.12.0/24	0	10	2		>so-0/3/2.0	
*	172.16.14.0/24	0	10	3		>35.1.1.2	
						so-0/1/2.0	
						so-0/3/2.0	
*	172.16.16.0/24	0	10	2		>so-0/1/2.0	
...							

## show route output

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2335</a> <a href="#">Syntax (EX Series Switches) on page 2335</a>
<b>Syntax</b>	<pre>show route output (address <i>ip-address</i>   interface <i>interface-name</i>) &lt;brief   detail   extensive   terse&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route output (address <i>ip-address</i>   interface <i>interface-name</i>) &lt;brief   detail   extensive   terse&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	<p>Display the entries in the routing table learned through static routes and interior gateway protocols that are to be sent out the interface with either the specified IP address or specified name.</p> <p>To view routes advertised to a neighbor or received from a neighbor for the BGP protocol, use the <b>show route advertising-protocol bgp</b> and <b>show route receive-protocol bgp</b> commands instead.</p>
<b>Options</b>	<p><b>address <i>ip-address</i></b>—Display entries in the routing table that are to be sent out the interface with the specified IP address.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b>.</p> <p><b>interface <i>interface-name</i></b>—Display entries in the routing table that are to be sent out the interface with the specified name.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route output address on page 2336</a> <a href="#">show route output address detail on page 2336</a> <a href="#">show route output address extensive on page 2337</a> <a href="#">show route output address terse on page 2337</a> <a href="#">show route output interface on page 2337</a> <a href="#">show route output interface detail on page 2338</a> <a href="#">show route output interface extensive on page 2338</a> <a href="#">show route output interface terse on page 2338</a>

**Output Fields** For information about output fields, see the output field tables for the [show route](#) command, the [show route detail](#) command, the [show route extensive](#) command, or the [show route terse](#) command.

## Sample Output

### show route output address

```
user@host> show route output address 172.16.36.1/24

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

172.16.36.0/24          *[Direct/0] 00:19:56
                        > via so-0/1/2.0
                        [OSPF/10] 00:19:55, metric 1
                        > via so-0/1/2.0

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

### show route output address detail

```
user@host> show route output address 172.16.36.1 detail

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
172.16.36.0/24 (2 entries, 0 announced)
    *Direct Preference: 0
        Next hop type: Interface
        Next-hop reference count: 1
        Next hop: via so-0/1/2.0, selected
        State: <Active Int>
        Age: 23:00
        Task: IF
        AS path: I
    OSPF Preference: 10
        Next-hop reference count: 1
        Next hop: via so-0/1/2.0, selected
        State: <Int>
        Inactive reason: Route Preference
        Age: 22:59      Metric: 1
        Area: 0.0.0.0
        Task: OSPF
        AS path: I

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
```

```
private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

### show route output address extensive

The output for the **show route output address extensive** command is identical to that of the **show route output address detail** command. For sample output, see [show route output address detail on page 2336](#).

### show route output address terse

```
user@host> show route output address 172.16.36.1 terse
```

```
inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	172.16.36.0/24	D	0			>so-0/1/2.0	
		0	10	1		>so-0/1/2.0	

```
private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
```

```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

```
mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
```

```
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
```

```
private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

### show route output interface

```
user@host> show route output interface so-0/1/2.0
```

```
inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

10.255.71.240/32	*[OSPF/10] 00:13:00, metric 2
	via so-0/1/2.0
	> via so-0/3/2.0
10.255.71.241/32	*[OSPF/10] 00:13:10, metric 1
	> via so-0/1/2.0
172.16.14.0/24	*[OSPF/10] 00:05:11, metric 3
	to 35.1.1.2 via ge-3/1/0.0
	> via so-0/1/2.0
	via so-0/3/2.0
172.16.16.0/24	*[OSPF/10] 00:13:10, metric 2
	> via so-0/1/2.0
172.16.36.0/24	*[Direct/0] 00:13:21
	> via so-0/1/2.0
	[OSPF/10] 00:13:20, metric 1
	> via so-0/1/2.0

```
private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
```

```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

```
mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
```

```
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
private1__inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

### show route output interface detail

```
user@host> show route output interface so-0/1/2.0 detail

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
10.255.71.240/32 (1 entry, 1 announced)
    *OSPF   Preference: 10
           Next-hop reference count: 2
           Next hop: via so-0/1/2.0
           Next hop: via so-0/3/2.0, selected
           State: <Active Int>
           Age: 14:52      Metric: 2
           Area: 0.0.0.0
           Task: OSPF
           Announcement bits (1): 0-KRT
           AS path: I

10.255.71.241/32 (1 entry, 1 announced)
    *OSPF   Preference: 10
           Next-hop reference count: 4
           Next hop: via so-0/1/2.0, selected
           State: <Active Int>
           Age: 15:02      Metric: 1
           Area: 0.0.0.0
           Task: OSPF
           Announcement bits (1): 0-KRT
           AS path: I

...
```

### show route output interface extensive

The output for the **show route output interface extensive** command is identical to that of the **show route output interface detail** command. For sample output, see [show route output interface detail on page 2338](#).

### show route output interface terse

```
user@host> show route output interface so-0/1/2.0 terse

inet.0: 28 destinations, 30 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
* 10.255.71.240/32  0 10      2          so-0/1/2.0
                        >so-0/3/2.0
* 10.255.71.241/32  0 10      1          >so-0/1/2.0
* 172.16.14.0/24    0 10      3          35.1.1.2
                        >so-0/1/2.0
                        so-0/3/2.0
* 172.16.16.0/24    0 10      2          >so-0/1/2.0
* 172.16.36.0/24    D 0       1          >so-0/1/2.0
                        0 10      1          >so-0/1/2.0

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
```

```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
private1__inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

## show route protocol

---

**List of Syntax**    [Syntax on page 2340](#)  
                          [Syntax \(EX Series Switches\) on page 2340](#)

**Syntax**    `show route protocol protocol`  
                  `<brief | detail | extensive | terse>`  
                  `<logical-system (all | logical-system-name)>`

**Syntax (EX Series Switches)**    `show route protocol protocol`  
  `<brief | detail | extensive | terse>`

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              **ospf2** and **ospf3** options introduced in Junos OS Release 9.2.  
                              **ospf2** and **ospf3** options introduced in Junos OS Release 9.2 for EX Series switches.  
                              **flow** option introduced in Junos OS Release 10.0.  
                              **flow** option introduced in Junos OS Release 10.0 for EX Series switches.

**Description**    Display the route entries in the routing table that were learned from a particular protocol.

**Options**    **brief | detail | extensive | terse**—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to **brief**.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

***protocol***—Protocol from which the route was learned:

- **access**—Access route for use by DHCP application
- **access-internal**—Access-internal route for use by DHCP application
- **aggregate**—Locally generated aggregate route
- **arp**—Route learned through the Address Resolution Protocol
- **atmvpn**—Asynchronous Transfer Mode virtual private network
- **bgp**—Border Gateway Protocol
- **ccc**—Circuit cross-connect
- **direct**—Directly connected route
- **dvmrp**—Distance Vector Multicast Routing Protocol
- **esis**—End System-to-Intermediate System
- **flow**—Locally defined flow-specification route
- **frr**—Precomputed protection route or backup route used when a link goes down
- **isis**—Intermediate System-to-Intermediate System

- **ldp**—Label Distribution Protocol
- **l2circuit**—Layer 2 circuit
- **l2vpn**—Layer 2 virtual private network
- **local**—Local address
- **mpls**—Multiprotocol Label Switching
- **msdp**—Multicast Source Discovery Protocol
- **ospf**—Open Shortest Path First versions 2 and 3
- **ospf2**—Open Shortest Path First versions 2 only
- **ospf3**—Open Shortest Path First version 3 only
- **pim**—Protocol Independent Multicast
- **rip**—Routing Information Protocol
- **ripng**—Routing Information Protocol next generation
- **rsvp**—Resource Reservation Protocol
- **rtarget**—Local route target virtual private network
- **static**—Statically defined route
- **tunnel**—Dynamic tunnel
- **vpn**—Virtual private network



**NOTE:** EX Series switches run a subset of these protocols. See the switch CLI for details.

**Required Privilege Level** view

**List of Sample Output**

- [show route protocol access on page 2342](#)
- [show route protocol access-internal extensive on page 2342](#)
- [show route protocol arp on page 2342](#)
- [show route protocol bgp on page 2343](#)
- [show route protocol bgp detail on page 2343](#)
- [show route protocol bgp detail \(Labeled Unicast\) on page 2344](#)
- [show route protocol bgp detail \(Aggregate Extended Community Bandwidth\) on page 2344](#)
- [show route protocol bgp extensive on page 2345](#)
- [show route protocol bgp terse on page 2346](#)
- [show route protocol direct on page 2346](#)
- [show route protocol frr on page 2346](#)
- [show route protocol l2circuit detail on page 2347](#)

[show route protocol l2vpn extensive on page 2348](#)  
[show route protocol ldp on page 2348](#)  
[show route protocol ldp extensive on page 2349](#)  
[show route protocol ospf \(Layer 3 VPN\) on page 2350](#)  
[show route protocol ospf detail on page 2351](#)  
[show route protocol rip on page 2351](#)  
[show route protocol rip detail on page 2351](#)  
[show route protocol ripng table inet6 on page 2351](#)  
[show route protocol static detail on page 2352](#)

**Output Fields** For information about output fields, see the output field tables for the [show route](#) command, the [show route detail](#) command, the [show route extensive](#) command, or the [show route terse](#) command.

## Sample Output

### [show route protocol access](#)

```
user@host> show route protocol access
inet.0: 30380 destinations, 30382 routes (30379 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

13.160.0.3/32      *[Access/13] 00:00:09
                  > to 13.160.0.2 via fe-0/0/0.0
13.160.0.4/32      *[Access/13] 00:00:09
                  > to 13.160.0.2 via fe-0/0/0.0
13.160.0.5/32      *[Access/13] 00:00:09
                  > to 13.160.0.2 via fe-0/0/0.0
```

### [show route protocol access-internal extensive](#)

```
user@host> show route protocol access-internal 13.160.0.19 extensive
inet.0: 100020 destinations, 100022 routes (100019 active, 0 holddown, 1 hidden)
13.160.0.19/32 (1 entry, 1 announced)
TSI:
KRT in-kernel 13.160.0.19/32 -> {13.160.0.2}
  *Access-internal Preference: 12
    Next-hop reference count: 200000
    Next hop: 13.160.0.2 via fe-0/0/0.0, selected
    State: <Active Int>
  Age: 36
    Task: RPD Unix Domain Server./var/run/rpd_serv.local
    Announcement bits (1): 0-KRT
    AS path: I
```

### [show route protocol arp](#)

```
user@host> show route protocol arp
inet.0: 43 destinations, 43 routes (42 active, 0 holddown, 1 hidden)

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

cust1.inet.0: 1033 destinations, 2043 routes (1033 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

20.20.1.3/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
```

```

Unusable
20.20.1.4/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
Unusable
20.20.1.5/32      [ARP/4294967293] 00:04:32, from 20.20.1.1
Unusable
20.20.1.6/32      [ARP/4294967293] 00:04:34, from 20.20.1.1
Unusable
20.20.1.7/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
Unusable
20.20.1.8/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
Unusable
20.20.1.9/32      [ARP/4294967293] 00:04:35, from 20.20.1.1
Unusable
20.20.1.10/32     [ARP/4294967293] 00:04:35, from 20.20.1.1
Unusable
20.20.1.11/32     [ARP/4294967293] 00:04:33, from 20.20.1.1
Unusable
20.20.1.12/32     [ARP/4294967293] 00:04:33, from 20.20.1.1
Unusable
20.20.1.13/32     [ARP/4294967293] 00:04:33, from 20.20.1.1
Unusable
...

```

### show route protocol bgp

```

user@host> show route protocol bgp 192.168.64.0/21
inet.0: 335832 destinations, 335833 routes (335383 active, 0 holddown, 450 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.64.0/21      *[BGP/170] 6d 10:41:16, localpref 100, from 192.168.69.71
                     AS path: 10458 14203 2914 4788 4788 I
                     > to 192.168.167.254 via fxp0.0

```

### show route protocol bgp detail

```

user@host> show route protocol bgp 66.117.63.0/24 detail
inet.0: 335805 destinations, 335806 routes (335356 active, 0 holddown, 450 hidden)
66.117.63.0/24      (1 entry, 1 announced)
    *BGP           Preference: 170/-101
                    Next hop type: Indirect
                    Next-hop reference count: 1006436
                    Source: 192.168.69.71
                    Next hop type: Router, Next hop index: 324
                    Next hop: 192.168.167.254 via fxp0.0, selected
                    Protocol next hop: 192.168.69.71
                    Indirect next hop: 8e166c0 342
                    State: <Active Ext>
                    Local AS: 69 Peer AS: 10458
                    Age: 6d 10:42:42 Metric2: 0
                    Task: BGP_10458.192.168.69.71+179
                    Announcement bits (3): 0-KRT 2-BGP RT Background 3-Resolve tree

1
    AS path: 10458 14203 2914 4788 4788 I
    Communities: 2914:410 2914:2403 2914:3400
    Accepted
    Localpref: 100
    Router ID: 207.17.136.192

```

### show route protocol bgp detail (Labeled Unicast)

```
user@host> show route protocol bgp 1.1.1.8/32 detail
inet.0: 45 destinations, 46 routes (45 active, 0 holddown, 0 hidden)
1.1.1.8/32 (2 entries, 2 announced)
State:
*BGP Preference: 1/-101
Next hop type: Indirect, Next hop index: 0
Address: 0xc007f30
Next-hop reference count: 2
Source: 1.1.1.1
Next hop type: Router, Next hop index: 614
Next hop: 20.1.1.2 via ge-0/0/1.0, selected
Label-switched-path lsp1
Label operation: Push 1000126, Push 1000125, Push 1000124, Push 1000123, Push
299872(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl, prop-ttl, prop-ttl(top)
Load balance label: Label 1000126: None; Label 1000125: None; Label 1000124: None;
Label 1000123: None; Label 299872: None;
Label element ptr: 0xc007860
Label parent element ptr: 0xc0089a0
Label element references: 1
Label element child references: 0
Label element lsp id: 0
Session Id: 0x140
Protocol next hop: 1.1.1.4
Label operation: Push 1000126, Push 1000125, Push 1000124, Push 1000123(top)
Label TTL action: prop-ttl, prop-ttl, prop-ttl, prop-ttl
Load balance label: Label 1000126: None; Label 1000125: None; Label 1000124: None;
Label 1000123: None;
Indirect next hop: 0xae8d300 1048576 INH Session ID: 0x142
State:
Local AS: 5 Peer AS: 5
Age: 22:43 Metric2: 2
Validation State: unverified
Task: BGP_5.1.1.1.1
Announcement bits (2): 0-KRT 7-Resolve tree 2
AS path: I
Accepted
Route Labels: 1000123(top) 1000124 1000125 1000126
Localpref: 100
Router ID: 1.1.1.1
```

### show route protocol bgp detail (Aggregate Extended Community Bandwidth)

```
user@host> show route 10.0.2.0 protocol bgp detail
inet.0: 20 destinations, 26 routes (20 active, 0 holddown, 0 hidden)
10.0.2.0/30 (2 entries, 1 announced)
*BGP Preference: 170/-101
Next hop type: Router, Next hop index: 0
Address: 0xb618990
Next-hop reference count: 3
Source: 10.0.1.1
Next hop: 10.0.0.2 via ge-0/0/0.0 balance 40%
Session Id: 0x0
Next hop: 10.0.1.1 via ge-0/0/1.0 balance 60%, selected
Session Id: 0x0
State: <Active Ext>
Local AS: 65000 Peer AS: 65001
Age: 20:33
```

```

Validation State: unverified
Task: BGP_65001.10.0.1.1
Announcement bits (3): 0-KRT 2-BGP_Listen.0.0.0.0+179
3-BGP_RT_Background
AS path: 65001 I
Communities: bandwidth:65000:60000000
Accepted Multipath
Localpref: 100
Router ID: 128.49.121.137
BGP Preference: 170/-101
Next hop type: Router, Next hop index: 595
Address: 0xb7a1330
Next-hop reference count: 9
Source: 10.0.0.2
Next hop: 10.0.0.2 via ge-0/0/0.0, selected
Session Id: 0x141
State: <NotBest Ext>
Inactive reason: Not Best in its group - Active preferred
Local AS: 65000 Peer AS: 65001
Age: 20:33
Validation State: unverified
Task: BGP_65001.10.0.0.2
AS path: 65001 I
Communities: bandwidth:65000:40000000
Accepted MultipathContrib
Localpref: 100
Router ID: 128.49.121.132

```

### show route protocol bgp extensive

```

user@host> show route protocol bgp 192.168.64.0/21 extensive

inet.0: 335827 destinations, 335828 routes (335378 active, 0 holddown, 450 hidden)
192.168.64.0/21 (1 entry, 1 announced)
TSI:
KRT in-kernel 1.9.0.0/16 -> {indirect(342)}
Page 0 idx 1 Type 1 val db31a80
  Nexthop: Self
  AS path: [69] 10458 14203 2914 4788 4788 I
  Communities: 2914:410 2914:2403 2914:3400
Path 1.9.0.0 from 192.168.69.71 Vector len 4. Val: 1
  *BGP Preference: 170/-101
    Next hop type: Indirect
    Next-hop reference count: 1006502
    Source: 192.168.69.71
    Next hop type: Router, Next hop index: 324
    Next hop: 192.168.167.254 via fxp0.0, selected
    Protocol next hop: 192.168.69.71
    Indirect next hop: 8e166c0 342
    State: <Active Ext>
    Local AS: 69 Peer AS: 10458
    Age: 6d 10:44:45 Metric2: 0
    Task: BGP_10458.192.168.69.71+179
    Announcement bits (3): 0-KRT 2-BGP RT Background 3-Resolve tree

1
AS path: 10458 14203 2914 4788 4788 I
Communities: 2914:410 2914:2403 2914:3400
Accepted
Localpref: 100
Router ID: 207.17.136.192
Indirect next hops: 1

```

```

Protocol next hop: 192.168.69.71
Indirect next hop: 8e166c0 342
Indirect path forwarding next hops: 1
  Next hop type: Router
  Next hop: 192.168.167.254 via fxp0.0
192.168.0.0/16 Originating RIB: inet.0
  Node path count: 1
  Forwarding nexthops: 1
  Nexthop: 192.168.167.254 via fxp0.0

```

### show route protocol bgp terse

```

user@host> show route protocol bgp 192.168.64.0/21 terse

inet.0: 24 destinations, 32 routes (23 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

A Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
192.168.64.0/21    B 170      100          >172.16.100.1  10023 21 I

```

### show route protocol direct

```

user@host> show route protocol direct

inet.0: 335843 destinations, 335844 routes (335394 active, 0 holddown, 450 hidden)
+ = Active Route, - = Last Active, * = Both

172.16.8.0/24      *[Direct/0] 17w0d 10:31:49
> via fe-1/3/1.0
10.255.165.1/32    *[Direct/0] 25w4d 04:13:18
> via lo0.0
172.16.30.0/24     *[Direct/0] 17w0d 23:06:26
> via fe-1/3/2.0
192.168.164.0/22   *[Direct/0] 25w4d 04:13:20
> via fxp0.0

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

47.0005.80ff.f800.0000.0108.0001.0102.5516.5001/152
*[Direct/0] 25w4d 04:13:21
> via lo0.0

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2001:db8::10:255:165:1/128
*[Direct/0] 25w4d 04:13:21
> via lo0.0
fe80::2a0:a5ff:fe12:ad7/128
*[Direct/0] 25w4d 04:13:21
> via lo0.0

```

### show route protocol frr

```

user@host> show route protocol frr
inet.0: 43 destinations, 43 routes (42 active, 0 holddown, 1 hidden)

inet.3: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

```

```

cust1.inet.0: 1033 destinations, 2043 routes (1033 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

```

```

20.20.1.3/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.3 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.4/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.4 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.5/32      *[FRR/200] 00:05:35, from 20.20.1.1
                  > to 20.20.1.5 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.6/32      *[FRR/200] 00:05:37, from 20.20.1.1
                  > to 20.20.1.6 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.7/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.7 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.8/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.8 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.9/32      *[FRR/200] 00:05:38, from 20.20.1.1
                  > to 20.20.1.9 via ge-4/1/0.0
                  to 10.10.15.1 via ge-0/2/4.0, Push 16, Push 299792(top)
20.20.1.10/32     *[FRR/200] 00:05:38, from 20.20.1.1
...

```

### show route protocol l2circuit detail

```
user@host> show route protocol l2circuit detail
```

```

mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
100000 (1 entry, 1 announced)

```

```

  *L2CKT Preference: 7
    Next hop: via ge-2/0/0.0, selected
    Label operation: Pop      Offset: 4
    State: <Active Int>
    Local AS: 99
    Age: 9:52
    Task: Common L2 VC
    Announcement bits (1): 0-KRT
    AS path: I

```

```
ge-2/0/0.0 (1 entry, 1 announced)
```

```

  *L2CKT Preference: 7
    Next hop: via so-1/1/2.0 weight 1, selected
    Label-switched-path my-lsp
    Label operation: Push 100000, Push 100000(top)[0] Offset: -4
    Protocol next hop: 10.245.255.63
    Push 100000 Offset: -4
    Indirect next hop: 86af0c0 298
    State: <Active Int>
    Local AS: 99
    Age: 9:52
    Task: Common L2 VC
    Announcement bits (2): 0-KRT 1-Common L2 VC
    AS path: I

```

```
l2circuit.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
```

```
10.245.255.63:CtrlWord:4:3:Local/96 (1 entry, 1 announced)
```

```

*L2CKT Preference: 7
Next hop: via so-1/1/2.0 weight 1, selected
Label-switched-path my-lsp
Label operation: Push 100000[0]
Protocol next hop: 10.245.255.63 Indirect next hop: 86af000 296
State: <Active Int>
Local AS: 99
Age: 10:21
Task: l2 circuit
Announcement bits (1): 0-LDP
AS path: I
VC Label 100000, MTU 1500, VLAN ID 512

```

### show route protocol l2vpn extensive

```

user@host> show route protocol l2vpn extensive

inet.0: 14 destinations, 15 routes (13 active, 0 holddown, 1 hidden)

inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)
800001 (1 entry, 1 announced)
TSI:
KRT in-kernel 800001 /36 -> {so-0/0/0.0}
    *L2VPN Preference: 7
      Next hop: via so-0/0/0.0 weight 49087 balance 97%, selected
      Label operation: Pop      Offset: 4
      State: <Active Int>
      Local AS: 69
      Age: 7:48
      Task: Common L2 VC
      Announcement bits (1): 0-KRT
      AS path: I

so-0/0/0.0 (1 entry, 1 announced)
TSI:
KRT in-kernel so-0/0/0.0 /16 -> {indirect(288)}
    *L2VPN Preference: 7
      Next hop: via so-0/0/1.0, selected
      Label operation: Push 800000 Offset: -4
      Protocol next hop: 10.255.14.220
      Push 800000 Offset: -4
      Indirect next hop: 85142a0 288
      State: <Active Int>
      Local AS: 69
      Age: 7:48
      Task: Common L2 VC
      Announcement bits (2): 0-KRT 1-Common L2 VC
      AS path: I
      Communities: target:69:1 Layer2-info: encaps:PPP,
      control flags:2, mtu: 0

```

### show route protocol ldp

```

user@host> show route protocol ldp

inet.0: 12 destinations, 13 routes (12 active, 0 holddown, 0 hidden)

```

```

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.16.1/32      *[LDP/9] 1d 23:03:35, metric 1
                    > via t1-4/0/0.0, Push 100000
192.168.17.1/32     *[LDP/9] 1d 23:03:35, metric 1
                    > via t1-4/0/0.0

private1___.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

mpls.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

100064              *[LDP/9] 1d 23:03:35, metric 1
                    > via t1-4/0/0.0, Pop
100064(S=0)         *[LDP/9] 1d 23:03:35, metric 1
                    > via t1-4/0/0.0, Pop
100080              *[LDP/9] 1d 23:03:35, metric 1
                    > via t1-4/0/0.0, Swap 100000

```

### show route protocol ldp extensive

```

user@host> show route protocol ldp extensive
192.168.16.1/32 (1 entry, 1 announced)
  State: <FlashAll>
    *LDP Preference: 9
      Next-hop reference count: 3
      Next hop: via t1-4/0/0.0, selected
      Label operation: Push 100000
      State: <Active Int>
      Local AS: 64500
      Age: 1d 23:03:58      Metric: 1
      Task: LDP
      Announcement bits (2): 0-Resolve tree 1 2-Resolve tree 2
      AS path: I

192.168.17.1/32 (1 entry, 1 announced)
  State: <FlashAll>
    *LDP Preference: 9
      Next-hop reference count: 3
      Next hop: via t1-4/0/0.0, selected
      State: <Active Int>
      Local AS: 64500
      Age: 1d 23:03:58      Metric: 1
      Task: LDP
      Announcement bits (2): 0-Resolve tree 1 2-Resolve tree 2
      AS path: I

private1___.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

mpls.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)

100064 (1 entry, 1 announced)
TSI:
KRT in-kernel 100064 /36 -> {t1-4/0/0.0}
  *LDP Preference: 9
    Next-hop reference count: 2
    Next hop: via t1-4/0/0.0, selected
    State: <Active Int>
    Local AS: 64500
    Age: 1d 23:03:58      Metric: 1

```

```

Task: LDP
Announcement bits (1): 0-KRT
AS path: I
Prefixes bound to route: 192.168.17.1/32

100064(S=0) (1 entry, 1 announced)
TSI:
KRT in-kernel 100064 /40 -> {t1-4/0/0.0}
    *LDP      Preference: 9
              Next-hop reference count: 2
              Next hop: via t1-4/0/0.0, selected
              Label operation: Pop
              State: <Active Int>
              Local AS: 64500
              Age: 1d 23:03:58      Metric: 1
              Task: LDP
              Announcement bits (1): 0-KRT
              AS path: I

100080 (1 entry, 1 announced)
TSI:
KRT in-kernel 100080 /36 -> {t1-4/0/0.0}
    *LDP      Preference: 9
              Next-hop reference count: 2
              Next hop: via t1-4/0/0.0, selected
              Label operation: Swap 100000
              State: <Active Int>
              Local AS: 64500
              Age: 1d 23:03:58      Metric: 1
              Task: LDP
              Announcement bits (1): 0-KRT
              AS path: I
              Prefixes bound to route: 192.168.16.1/32

```

### show route protocol ospf (Layer 3 VPN)

```

user@host> show route protocol ospf
inet.0: 40 destinations, 40 routes (39 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.4/30      *[OSPF/10] 00:05:18, metric 4
                  > via t3-3/2/0.0
10.39.1.8/30      [OSPF/10] 00:05:18, metric 2
                  > via t3-3/2/0.0
10.255.14.171/32  *[OSPF/10] 00:05:18, metric 4
                  > via t3-3/2/0.0
10.255.14.179/32  *[OSPF/10] 00:05:18, metric 2
                  > via t3-3/2/0.0
172.16.233.5/32   *[OSPF/10] 20:25:55, metric 1

VPN-AB.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.16/30      [OSPF/10] 00:05:43, metric 1
                  > via so-0/2/2.0
10.255.14.173/32   *[OSPF/10] 00:05:43, metric 1
                  > via so-0/2/2.0
172.16.233.5/32   *[OSPF/10] 20:26:20, metric 1

```

**show route protocol ospf detail**

```

user@host> show route protocol ospf detail
VPN-AB.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.16/30 (2 entries, 0 announced)
  OSPF Preference: 10
    Nexthop: via so-0/2/2.0, selected
    State: <Int>
    Inactive reason: Route Preference
    Age: 6:25 Metric: 1
    Area: 0.0.0.0
    Task: VPN-AB-OSPF
    AS path: I
    Communities: Route-Type:0.0.0.0:1:0

...

```

**show route protocol rip**

```

user@host> show route protocol rip
inet.0: 26 destinations, 27 routes (25 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

VPN-AB.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.255.14.177/32 * [RIP/100] 20:24:34, metric 2
                  > to 10.39.1.22 via t3-0/2/2.0
172.16.233.9/32 * [RIP/100] 00:03:59, metric 1

```

**show route protocol rip detail**

```

user@host> show route protocol rip detail
inet.0: 26 destinations, 27 routes (25 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

VPN-AB.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.255.14.177/32 (1 entry, 1 announced)
  *RIP Preference: 100
    Nexthop: 10.39.1.22 via t3-0/2/2.0, selected
    State: <Active Int>
    Age: 20:25:02 Metric: 2
    Task: VPN-AB-RIPv2
    Announcement bits (2): 0-KRT 2-BGP.0.0.0.0+179
    AS path: I
    Route learned from 10.39.1.22 expires in 96 seconds

```

**show route protocol ripng table inet6**

```

user@host> show route protocol ripng table inet6
inet6.0: 4215 destinations, 4215 routes (4214 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

1111::1/128 * [RIPng/100] 02:13:33, metric 2
             > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
1111::2/128 * [RIPng/100] 02:13:33, metric 2
             > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
1111::3/128 * [RIPng/100] 02:13:33, metric 2

```

```
1111::4/128      > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
                  *[RIPng/100] 02:13:33, metric 2
1111::5/128      > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
                  *[RIPng/100] 02:13:33, metric 2
1111::6/128      > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
                  *[RIPng/100] 02:13:33, metric 2
                  > to fe80::2a0:a5ff:fe3d:56 via t3-0/2/0.0
```

### show route protocol static detail

```
user@host> show route protocol static detail
inet.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
10.5.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next hop type: Router, Next hop index: 324
    Address: 0x9274010
    Next-hop reference count: 27
    Next hop: 192.168.187.126 via fxp0.0, selected
    Session Id: 0x0
    State: <Active NoReadvrt Int Ext>
    Age: 7w3d 21:24:25
    Validation State: unverified
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

10.10.0.0/16 (1 entry, 1 announced)
  *Static Preference: 5
    Next hop type: Router, Next hop index: 324
    Address: 0x9274010
    Next-hop reference count: 27
    Next hop: 192.168.187.126 via fxp0.0, selected
    Session Id: 0x0
    State: <Active NoReadvrt Int Ext>
    Age: 7w3d 21:24:25
    Validation State: unverified
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

10.13.10.0/23 (1 entry, 1 announced)
  *Static Preference: 5
    Next hop type: Router, Next hop index: 324
    Address: 0x9274010
    Next-hop reference count: 27
    Next hop: 192.168.187.126 via fxp0.0, selected
    Session Id: 0x0
    State: <Active NoReadvrt Int Ext>
    Age: 7w3d 21:24:25
    Validation State: unverified
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I
```

## show route range

<b>List of Syntax</b>	<a href="#">Syntax on page 2353</a> <a href="#">Syntax (EX Series Switches) on page 2353</a>
<b>Syntax</b>	<pre>show route range &lt;brief   detail   extensive   terse&gt; &lt;destination-prefix&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>
<b>Syntax (EX Series Switches)</b>	<pre>show route range &lt;brief   detail   extensive   terse&gt; &lt;destination-prefix&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	Display routing table entries using a prefix range.
<b>Options</b>	<p><b>none</b>—Display standard information about all routing table entries using a prefix range.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b>.</p> <p><b>destination-prefix</b>—Destination and prefix mask for the range.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route range on page 2353</a> <a href="#">show route range destination-prefix on page 2354</a> <a href="#">show route range detail on page 2354</a> <a href="#">show route range extensive on page 2355</a> <a href="#">show route range terse on page 2356</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route range

```
user@host> show route range
```

```
inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
```

+ = Active Route, - = Last Active, \* = Both

```
10.10.0.0/16      *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
10.209.0.0/16     *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
10.255.71.14/32   *[Direct/0] 00:30:01
                  > via lo0.0
172.16.0.0/12     *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
192.168.0.0/16    *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
192.168.64.0/21   *[Direct/0] 00:30:01
                  > via fxp0.0
192.168.71.14/32  *[Local/0] 00:30:01
                  Local via fxp0.0
192.168.102.0/23  *[Static/5] 00:30:01
                  > to 192.168.71.254 via fxp0.0
...
```

### show route range destination-prefix

```
user@host> show route range 192.168.0.0/16
```

```
inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
192.168.0.0/16    *[Static/5] 00:31:14
                  > to 192.168.71.254 via fxp0.0
192.168.64.0/21   *[Direct/0] 00:31:14
                  > via fxp0.0
192.168.71.14/32  *[Local/0] 00:31:14
                  Local via fxp0.0
192.168.102.0/23  *[Static/5] 00:31:14
                  > to 192.168.71.254 via fxp0.0
```

### show route range detail

```
user@host> show route range detail
```

```
inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
```

```
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 30:05
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I
```

```
10.209.0.0/16 (1 entry, 1 announced)
```

```
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 30:05
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I
```

```

10.255.71.14/32 (1 entry, 0 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected
    State: <Active Int>
    Age: 30:05
    Task: IF
    AS path: I

172.16.0.0/12 (1 entry, 1 announced)
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 30:05
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

...

```

#### show route range extensive

```

user@host> show route range extensive

inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
10.10.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.10.0.0/16 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 30:17
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

10.209.0.0/16 (1 entry, 1 announced)
TSI:
KRT in-kernel 10.209.0.0/16 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 30:17
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

10.255.71.14/32 (1 entry, 0 announced)
  *Direct Preference: 0
    Next hop type: Interface
    Next-hop reference count: 1
    Next hop: via lo0.0, selected
    State: <Active Int>
    Age: 30:17
    Task: IF
    AS path: I

```

```

172.16.0.0/12 (1 entry, 1 announced)
TSI:
KRT in-kernel 172.16.0.0/12 -> {192.168.71.254}
  *Static Preference: 5
    Next-hop reference count: 22
    Next hop: 192.168.71.254 via fxp0.0, selected
    State: <Active NoReadvrt Int Ext>
    Age: 30:17
    Task: RT
    Announcement bits (1): 0-KRT
    AS path: I

```

...

### show route range terse

```
user@host> show route range terse
```

```
inet.0: 11 destinations, 11 routes (10 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	10.10.0.0/16	S	5			>192.168.71.254	
*	10.209.0.0/16	S	5			>192.168.71.254	
*	10.255.71.14/32	D	0			>lo0.0	
*	172.16.0.0/12	S	5			>192.168.71.254	
*	192.168.0.0/16	S	5			>192.168.71.254	
*	192.168.64.0/21	D	0			>fxp0.0	
*	192.168.71.14/32	L	0			Local	
*	192.168.102.0/23	S	5			>192.168.71.254	
*	207.17.136.0/24	S	5			>192.168.71.254	
*	207.17.136.192/32	S	5			>192.168.71.254	

```
__juniper_private1__.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
```

```
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
*	10.0.0.0/8	D	0			>fxp2.0	
		D	0			>fxp1.0	
*	10.0.0.4/32	L	0			Local	

```
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

```
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
	47.0005.80ff.f800.0000.0108.0001.0102.5507.1014/152						
*		D	0			>lo0.0	

```
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
```

```
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
	abcd::10:255:71:14/128						
*		D	0			>lo0.0	
	fe80::280:42ff:fe11:226f/128						
*		D	0			>lo0.0	

```
__juniper_private1__.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

```
+ = Active Route, - = Last Active, * = Both
```

A	Destination	P	Prf	Metric 1	Metric 2	Next hop	AS path
	fe80::280:42ff:fe11:226f/128						
*		D	0			>1o0.16385	

## show route receive-protocol

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2358</a> <a href="#">Syntax (EX Series Switches) on page 2358</a>
<b>Syntax</b>	<code>show route receive-protocol <i>protocol neighbor-address</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)</code>
<b>Syntax (EX Series Switches)</b>	<code>show route receive-protocol <i>protocol neighbor-address</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Display the routing information as it was received through a particular neighbor using a particular dynamic routing protocol.
<b>Options</b>	<b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b><i>protocol neighbor-address</i></b> —Protocol transmitting the route ( <b>bgp</b> , <b>dvmrp</b> , <b>msdp</b> , <b>pim</b> , <b>rip</b> , or <b>ripng</b> ) and address of the neighboring router from which the route entry was received.
<b>Additional Information</b>	The output displays the selected routes and the attributes with which they were received, but does not show the effects of import policy on the routing attributes.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route receive-protocol bgp on page 2361</a> <a href="#">show route receive-protocol bgp extensive on page 2361</a> <a href="#">show route receive-protocol bgp table extensive on page 2362</a> <a href="#">show route receive-protocol bgp logical-system extensive on page 2362</a> <a href="#">show route receive-protocol bgp detail (Layer 2 VPN) on page 2363</a> <a href="#">show route receive-protocol bgp extensive (Layer 2 VPN) on page 2363</a> <a href="#">show route receive-protocol bgp (Layer 3 VPN) on page 2364</a> <a href="#">show route receive-protocol bgp detail (Layer 3 VPN) on page 2364</a> <a href="#">show route receive-protocol bgp detail (Long-Lived Graceful Restart) on page 2365</a> <a href="#">show route receive-protocol bgp detail (Labeled Unicast) on page 2365</a> <a href="#">show route receive-protocol bgp extensive (Layer 3 VPN) on page 2366</a> <a href="#">Show route receive protocol (Segment Routing Traffic Engineering) on page 2366</a>

**Output Fields** Table 209 on page 2359 describes the output fields for the **show route receive-protocol** command. Output fields are listed in the approximate order in which they appear.

*Table 209: show route receive-protocol Output Fields*

Field Name	Field Description	Level of Output
<i>routing-table-name</i>	Name of the routing table—for example, inet.0.	All levels
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.	All levels
<i>number routes</i>	Number of routes in the routing table and total number of routes in the following states: <ul style="list-style-type: none"> <li>• <b>active</b></li> <li>• <b>holddown</b> (routes that are in pending state before being declared inactive)</li> <li>• <b>hidden</b> (routes that are not used because of a routing policy)</li> </ul>	All levels
Prefix	Destination prefix.	none <b>brief</b>
MED	Multiple exit discriminator value included in the route.	none <b>brief</b>
<i>destination-prefix</i> (entry, announced)	Destination prefix. The <b>entry</b> value is the number of routes for this destination, and the <b>announced</b> value is the number of routes being announced for this destination.	<b>detail extensive</b>
<b>Accepted LongLivedStale</b>	The LongLivedStale flag indicates that the route was marked LLGR-stale by this router, as part of the operation of LLGR receiver mode. Either this flag or the LongLivedStaleImport flag may be displayed for a route. Neither of these flags are displayed at the same time as the Stale (ordinary GR stale) flag.	<b>detail extensive</b>
<b>Accepted LongLivedStaleImport</b>	The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy. Either this flag or the LongLivedStale flag may be displayed for a route. Neither of these flags are displayed at the same time as the Stale (ordinary GR stale) flag.  Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and import into the inet.0 routing table	<b>detail extensive</b>
<b>ImportAccepted LongLivedStaleImport</b>	Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and imported into the inet.0 routing table  The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy.	<b>detail extensive</b>
<b>Route Distinguisher</b>	64-bit prefix added to IP subnets to make them unique.	<b>detail extensive</b>
<b>Label-Base, range</b>	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.	<b>detail extensive</b>

Table 209: show route receive-protocol Output Fields (continued)

Field Name	Field Description	Level of Output
<b>VPN Label</b>	Virtual private network (VPN) label. Packets are sent between CE and PE routing devices by advertising VPN labels. VPN labels transit over either an RSVP or an LDP label-switched path (LSP) tunnel.	<b>detail extensive</b>
<b>Next hop</b>	Next hop to the destination. An angle bracket (>) indicates that the route is the selected route.	All levels
<b>Localpref or Lclpref</b>	Local preference value included in the route.	All levels
<b>AS path</b>	<p>Autonomous system (AS) path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li>• I—IGP.</li> <li>• E—EGP.</li> <li>• ?—Incomplete; typically, the AS path was aggregated.</li> </ul> <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> <li>• [ ]—Brackets enclose the number that precedes the AS path. This number represents the number of ASs present in the AS path, when calculated as defined in RFC 4271. This value is used the AS-path merge process, as defined in RFC 4893.</li> <li>• [ ]—If more than one AS number is configured on the router, or if AS path prepending is configured, brackets enclose the local AS number associated with the AS path.</li> <li>• { }—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order.</li> <li>• ( )—Parentheses enclose a confederation.</li> <li>• ( [ ] )—Parentheses and brackets enclose a confederation set.</li> </ul> <p><b>NOTE:</b> In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>	All levels
<b>Route Labels</b>	Stack of labels carried in the BGP route update.	<b>detail extensive</b>
<b>Cluster list</b>	(For route reflected output only) Cluster ID sent by the route reflector.	<b>detail extensive</b>
<b>Originator ID</b>	(For route reflected output only) Address of routing device that originally sent the route to the route reflector.	<b>detail extensive</b>
<b>Communities</b>	Community path attribute for the route. See the Output Field table in the <a href="#">show route detail</a> command for all possible values for this field.	<b>detail extensive</b>
<b>AIGP</b>	Accumulated interior gateway protocol (AIGP) BGP attribute.	<b>detail extensive</b>
<b>Attrset AS</b>	Number, local preference, and path of the AS that originated the route. These values are stored in the <b>Attrset</b> attribute at the originating routing device.	<b>detail extensive</b>

Table 209: show route receive-protocol Output Fields (continued)

Field Name	Field Description	Level of Output
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).	detail extensive
control flags	Control flags: none or Site Down.	detail extensive
mtu	Maximum transmission unit (MTU) of the Layer 2 circuit.	detail extensive

## Sample Output

### show route receive-protocol bgp

```

user@host> show route receive-protocol bgp 10.255.245.215

inet.0: 28 destinations, 33 routes (27 active, 0 holddown, 1 hidden)
Prefix                Next hop                MED      Lclpref  AS path
10.22.1.0/24           10.255.245.215         0        100      I
10.22.2.0/24           10.255.245.215         0        100      I

```

### show route receive-protocol bgp extensive

```

user@host> show route receive-protocol bgp 10.255.245.63 extensive
inet.0: 244 destinations, 244 routes (243 active, 0 holddown, 1 hidden)
Prefix                Next hop                MED      Lclpref  AS path
172.16.1.0/24 (1 entry, 1 announced)
  Next hop: 10.0.50.3
  Localpref: 100
  AS path: I <Originator>
  Cluster list: 10.2.3.1
  Originator ID: 10.255.245.45
172.16.163.0/16 (1 entry, 1 announced)
  Next hop: 111.222.5.254
  Localpref: 100
  AS path: I <Originator>
  Cluster list: 10.2.3.1
  Originator ID: 10.255.245.68
172.16.164.0/16 (1 entry, 1 announced)
  Next hop: 111.222.5.254
  Localpref: 100
  AS path: I <Originator>
  Cluster list: 10.2.3.1
  Originator ID: 10.255.245.45
172.16.195.0/24 (1 entry, 1 announced)
  Next hop: 111.222.5.254
  Localpref: 100
  AS path: I <Originator>
  Cluster list: 10.2.3.1
  Originator ID: 10.255.245.68
inet.2: 63 destinations, 63 routes (63 active, 0 holddown, 0 hidden)
Prefix                Next hop                MED      Lclpref  AS path
inet.3: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
Prefix                Next hop                MED      Lclpref  AS path
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix                Next hop                MED      Lclpref  AS path
mpls.0: 48 destinations, 48 routes (48 active, 0 holddown, 0 hidden)

```

### show route receive-protocol bgp table extensive

```
user@host> show route receive-protocol bgp 207.17.136.192 table inet.0 66.117.68.0/24 extensive
inet.0: 227315 destinations, 227316 routes (227302 active, 0 holddown, 13 hidden)
* 66.117.63.0/24 (1 entry, 1 announced)
  Nexthop: 207.17.136.29
  Localpref: 100
  AS path: AS2 PA[6]: 14203 2914 3356 29748 33437 AS_TRANS
  AS path: AS4 PA[2]: 33437 393219
  AS path: Merged[6]: 14203 2914 3356 29748 33437 393219 I
  Communities: 2914:420
```

### show route receive-protocol bgp logical-system extensive

```
user@host> show route receive-protocol bgp 10.0.0.9 logical-system PE4 extensive
inet.0: 12 destinations, 13 routes (12 active, 0 holddown, 0 hidden)
* 10.0.0.0/30 (1 entry, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

* 10.0.0.4/30 (1 entry, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

10.0.0.8/30 (2 entries, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

* 10.9.9.1/32 (1 entry, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

* 10.100.1.1/32 (1 entry, 1 announced)
  Accepted
  Route Label: 3
  Nexthop: 10.0.0.9
  AS path: 13979 I

* 172.16.44.0/24 (1 entry, 1 announced)
  Accepted
  Route Label: 300096
  Nexthop: 10.0.0.9
  AS path: 13979 I
  AIGP: 203

* 172.16.55.0/24 (1 entry, 1 announced)
  Accepted
  Route Label: 300112
  Nexthop: 10.0.0.9
  AS path: 13979 7018 I
  AIGP: 25
```

```
* 172.16.66.0/24 (1 entry, 1 announced)
  Accepted
  Route Label: 300144
  Nexthop: 10.0.0.9
  AS path: 13979 7018 I

* 172.16.99.0/24 (1 entry, 1 announced)
  Accepted
  Route Label: 300160
  Nexthop: 10.0.0.9
  AS path: 13979 7018 I
```

### show route receive-protocol bgp detail (Layer 2 VPN)

```
user@host> show route receive-protocol bgp 10.255.14.171 detail
inet.0: 68 destinations, 68 routes (67 active, 0 holddown, 1 hidden)
Prefix          Nexthop          MED      Lclpref AS path
inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
mpls.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
frame-vpn.l2vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0
hidden)
Prefix          Nexthop          MED      Lclpref AS path
10.255.245.35:1:5:1/96 (1 entry, 1 announced)
  Route Distinguisher: 10.255.245.35:1
  Label-base : 800000, range : 4, status-vector : 0x0
  Nexthop: 10.255.245.35
  Localpref: 100
  AS path: I
  Communities: target:65299:100 Layer2-info: encaps:FRAME RELAY,
control flags: 0, mtu: 0
bgp.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
10.255.245.35:1:5:1/96 (1 entry, 0 announced)
  Route Distinguisher: 10.255.245.35:1
  Label-base : 800000, range : 4, status-vector : 0x0
  Nexthop: 10.255.245.35
  Localpref: 100
  AS path: I
  Communities: target:65299:100 Layer2-info: encaps:FRAME RELAY,
control flags:0, mtu: 0
```

### show route receive-protocol bgp extensive (Layer 2 VPN)

```
user@host> show route receive-protocol bgp 10.255.14.171 extensive
inet.0: 68 destinations, 68 routes (67 active, 0 holddown, 1 hidden)
Prefix          Nexthop          MED      Lclpref AS path
inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
mpls.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
frame-vpn.l2vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED      Lclpref AS path
10.255.245.35:1:5:1/96 (1 entry, 1 announced)
  Route Distinguisher: 10.255.245.35:1
```

```

Label-base : 800000, range : 4, status-vector : 0x0
Nexthop: 10.255.245.35
Localpref: 100
AS path: I
Communities: target:65299:100 Layer2-info: encaps:FRAME RELAY,
control flags:0, mtu: 0
bgp.12vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.245.35:1:5:1/96 (1 entry, 0 announced)
Route Distinguisher: 10.255.245.35:1
Label-base : 800000, range : 4, status-vector : 0x0
Nexthop: 10.255.245.35
Localpref: 100
AS path: I
Communities: target:65299:100 Layer2-info: encaps:FRAME RELAY,
control flags:0, mtu: 0

```

### show route receive-protocol bgp (Layer 3 VPN)

```

user@host> show route receive-protocol bgp 10.255.14.171
inet.0: 33 destinations, 33 routes (32 active, 0 holddown, 1 hidden)
Prefix          Nexthop          MED    Lclpref AS path
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
VPN-A.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.14.175/32  10.255.14.171          100 2 I
10.255.14.179/32  10.255.14.171          2    100 I
VPN-B.inet.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.14.175/32  10.255.14.171          100 2 I
10.255.14.177/32  10.255.14.171          100 I
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
mpls.0: 9 destinations, 9 routes (9 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
bgp.13vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref AS path
10.255.14.171:300:10.255.14.177/32
10.255.14.171          100 I
10.255.14.171:100:10.255.14.179/32
10.255.14.171          2    100 I
10.255.14.171:200:10.255.14.175/32
10.255.14.171          100 2 I

```

### show route receive-protocol bgp detail (Layer 3 VPN)

```

user@host> show route receive-protocol bgp 10.255.14.174 detail
inet.0: 16 destinations, 17 routes (15 active, 0 holddown, 1 hidden)
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
vpna.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
* 10.49.0.0/30 (1 entry, 1 announced)
Route Distinguisher: 10.255.14.176:2
VPN Label: 101264
Nexthop: 10.255.14.174
Localpref: 100
AS path: I
Communities: target:200:100
AttrSet AS: 100
Localpref: 100

```

```

AS path: I
* 10.255.14.172/32 (1 entry, 1 announced)
  Route Distinguisher: 10.255.14.176:2
  VPN Label: 101280
  Nexthop: 10.255.14.174
  Localpref: 100
  AS path: I
  Communities: target:200:100
  AttrSet AS: 100
    Localpref: 100
    AS path: I
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
* 10.255.14.174:2:10.49.0.0/30 (1 entry, 0 announced)
  Route Distinguisher: 10.255.14.174:2
  VPN Label: 101264
  Nexthop: 10.255.14.174
  Localpref: 100
  AS path: I
  Communities: target:200:100
  AttrSet AS: 100
    Localpref: 100
    AS path: I
* 10.255.14.174:2:10.255.14.172/32 (1 entry, 0 announced)
  Route Distinguisher: 10.255.14.174:2
  VPN Label: 101280
  Nexthop: 10.255.14.174
  Localpref: 100
  AS path: I
  Communities: target:200:100
  AttrSet AS: 100
    Localpref: 100
    AS path: I
inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

```

### show route receive-protocol bgp detail (Long-Lived Graceful Restart)

```

user@host> show route receive-protocol bgp 10.4.12.11 detail

bgp.l2vpn.0: 38 destinations, 39 routes (37 active, 0 holddown, 1 hidden)
* 172.16.1.4:100:172.16.1.4/96 AD (1 entry, 1 announced)
  Accepted LongLivedStale LongLivedStaleImport
  Nexthop: 10.4.12.11
  Localpref: 100
  AS path: I

```

### show route receive-protocol bgp detail (Labeled Unicast)

```

user@host> show route receive-protocol bgp 1.1.1.1 detail
inet.0: 45 destinations, 46 routes (45 active, 0 holddown, 0 hidden)
* 1.1.1.8/32 (2 entries, 2 announced)
Accepted
Route Labels: 1000123(top) 1000124 1000125 1000126
Nexthop: 1.1.1.4
Localpref: 100
AS path: I
Entropy label capable, next hop field matches route next hop

inet.3: 15 destinations, 21 routes (6 active, 0 holddown, 14 hidden)

```

```

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)

inet6.0: 26 destinations, 28 routes (26 active, 0 holddown, 0 hidden)

* 100::1/128 (2 entries, 2 announced)
Accepted
Route Labels: 1000123(top) 1000124 1000125 1000126
Nexthop: ::ffff:1.1.1.4
Localpref: 100
AS path: I

inet6.3: 22 destinations, 23 routes (22 active, 0 holddown, 0 hidden)

```

### show route receive-protocol bgp extensive (Layer 3 VPN)

```

user@host> show route receive-protocol bgp 10.255.245.63 extensive
inet.0: 244 destinations, 244 routes (243 active, 0 holddown, 1 hidden)
  Prefix          Nexthop          MED      Lclpref AS path
  172.16.1.0/24 (1 entry, 1 announced)
    Nexthop: 10.0.50.3
    Localpref: 100
    AS path: I <Originator>
    Cluster list: 10.2.3.1
    Originator ID: 10.255.245.45
  172.16.163.0/16 (1 entry, 1 announced)
    Nexthop: 111.222.5.254
    Localpref: 100
    AS path: I <Originator>
    Cluster list: 10.2.3.1
    Originator ID: 10.255.245.68
  172.16.164.0/16 (1 entry, 1 announced)
    Nexthop: 111.222.5.254
    Localpref: 100
    AS path: I <Originator>
    Cluster list: 10.2.3.1
    Originator ID: 10.255.245.45
  172.16.195.0/24 (1 entry, 1 announced)
    Nexthop: 111.222.5.254
    Localpref: 100
    AS path: I <Originator>
    Cluster list: 10.2.3.1
    Originator ID: 10.255.245.68
inet.2: 63 destinations, 63 routes (63 active, 0 holddown, 0 hidden)
  Prefix          Nexthop          MED      Lclpref AS path
inet.3: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
  Prefix          Nexthop          MED      Lclpref AS path
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
  Prefix          Nexthop          MED      Lclpref AS path
mpls.0: 48 destinations, 48 routes (48 active, 0 holddown, 0 hidden)

```

### Show route receive protocol (Segment Routing Traffic Engineering)

```

show route receive protocol bgp 10.1.1.4
bgp.inetcolor.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

* 50-4.4.4.4-1234<sr6>/96 (1 entry, 0 announced)
  Import Accepted

```

```
Distinguisher: 50
Color: 1234
Nexthop: 10.1.1.4
Localpref: 100
AS path: 3 I
Communities: target:1.1.1.1:1
```

```
inetcolor.0: 6 destinations, 7 routes (6 active, 0 holddown, 0 hidden)
```

```
* 4.4.4.4-1234<c6>/64 (1 entry, 1 announced)
```

```
Import Accepted
Color: 1234
Nexthop: 10.1.1.4
Localpref: 100
AS path: 3 I
Communities: target:1.1.1.1:1
```

```
user@host# run show route receive-protocol bgp 5001:1::4
```

```
bgp.inet6color.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
```

```
* 50-2001:1::4-1234<sr6>/192 (1 entry, 0 announced)
```

```
Import Accepted
Distinguisher: 50
Color: 1234
Nexthop: ::ffff:1.1.1.4
Localpref: 100
AS path: 3 I
Communities: target:1.1.1.1:1
```

```
inet6color.0: 6 destinations, 7 routes (6 active, 0 holddown, 0 hidden)
```

```
* 2001::5-1234<c6>/160 (1 entry, 1 announced)
```

```
Import Accepted
Color: 1234
Nexthop: ::ffff:1.1.1.5
Localpref: 100
AS path: 3 I
Communities: target:2:1
```

## show route resolution

---

**List of Syntax**    [Syntax on page 2368](#)  
                          [Syntax \(EX Series Switches\) on page 2368](#)

**Syntax**    show route resolution  
              <brief | detail | extensive | summary>  
              <index *index*>  
              <logical-system (all | *logical-system-name*)>  
              <*prefix*>  
              <table *routing-table-name*>  
              <unresolved>

**Syntax (EX Series Switches)**    show route resolution  
  <brief | detail | extensive | summary>  
  <index *index*>  
  <*prefix*>  
  <table *routing-table-name*>  
  <unresolved>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description**    Display the entries in the next-hop resolution database. This database provides for recursive resolution of next hops through other prefixes in the routing table.

**Options**    **none**—Display standard information about all entries in the next-hop resolution database.

**brief | detail | extensive | summary**—(Optional) Display the specified level of output.

**index *index***—(Optional) Show the index of the resolution tree.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

***prefix network/destination-prefix***—(Optional) Display database entries for the specified address.

**table *routing-table-name***—(Optional) Display information about a particular routing table (for example, **inet.0**) where policy-based export is currently enabled.

**unresolved**—(Optional) Display routes that could not be resolved.

**Required Privilege Level**    view

**Related Documentation**    • [Example: Configuring Route Resolution on PE Routers](#)

- List of Sample Output**
- [show route resolution detail on page 2370](#)
  - [show route resolution \(Multipath Resolution\) on page 2371](#)
  - [show route resolution summary on page 2372](#)
  - [show route resolution unresolved on page 2372](#)

**Output Fields** Table 210 on page 2370 describes the output fields for the **show route resolution** command. Output fields are listed in the approximate order in which they appear.

*Table 210: show route resolution Output Fields*

Field Name	Field Description
<b>routing-table-name</b>	Name of the routing table whose prefixes are resolved using the entries in the route resolution database. For routing table groups, this is the name of the primary routing table whose prefixes are resolved using the entries in the route resolution database.
<b>Tree index</b>	Tree index identifier.
<b>Nodes</b>	Number of nodes in the tree.
<b>Reference count</b>	Number of references made to the next hop.
<b>Contributing routing tables</b>	Routing tables used for next-hop resolution.
<b>Originating RIB</b>	Name of the routing table whose active route was used to determine the forwarding next-hop entry in the resolution database. For example, in the case of <b>inet.0</b> resolving through <b>inet.0</b> and <b>inet.3</b> , this field indicates which routing table, <b>inet.0</b> or <b>inet.3</b> , provided the best path for a particular prefix.
<b>Metric</b>	Metric associated with the forwarding next hop.
<b>Node path count</b>	Number of nodes in the path.
<b>Forwarding next hops</b>	Number of forwarding next hops. The forwarding next hop is the network layer address of the directly reachable neighboring system (if applicable) and the interface used to reach it.
	Merged—Merged next hops when recursive resolution of multipath is configured.

## Sample Output

### show route resolution detail

```

user@host> show route resolution detail
Tree Index: 1, Nodes 0, Reference Count 1
Contributing routing tables: inet.3
Tree Index: 2, Nodes 23, Reference Count 1
Contributing routing tables: inet.0 inet.3
10.10.0.0/16 Originating RIB: inet.0
  Node path count: 1
  Forwarding nexthops: 1
10.31.1.0/30 Originating RIB: inet.0
  Node path count: 1
  Forwarding nexthops: 1
10.31.1.1/32 Originating RIB: inet.0
  Node path count: 1
  Forwarding nexthops: 0
10.31.1.4/30 Originating RIB: inet.0
  Node path count: 1

```

```

Forwarding nexthops: 1
10.31.1.5/32 Originating RIB: inet.0
Node path count: 1
Forwarding nexthops: 0
10.31.2.0/30 Originating RIB: inet.0
Metric: 2 Node path count: 1
Forwarding nexthops: 2
10.31.11.0/24 Originating RIB: inet.0
Node path count: 1
Forwarding nexthops: 1

```

### show route resolution (Multipath Resolution)

```

user@host> show route resolution detail
user@host> show route resolution detail 10.1.1.2
Tree Index: 1, Nodes 36, Reference Count 3
Contributing routing tables: inet.0 inet.3
Policy: [ abc ]
10.1.1.2/32 Originating RIB: inet.0
Node path count: 1
Next hop subtype: INDIRECT
Indirect next hops: 2
  Protocol next hop: 10.1.1.1
  Inode flags: 0x206 path flags: 0x08
  Path fnh link: 0xc9321c0 path inh link: 0x0
  Indirect next hop: 0xb2b20f0 1048574 INH Session ID: 0x143
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 12.1.1.2 via ge-2/0/1.0
    Session Id: 0x144
    Next hop: 13.1.1.2 via ge-2/0/2.0
    Session Id: 0x145

10.1.1.1/32 Originating RIB: inet.0
Node path count: 1
Node flags: 1
Forwarding nexthops: 1 (Merged)
Nexthop: 12.1.1.2 via ge-2/0/1.0

Nexthop: 13.1.1.2 via ge-2/0/2.0

user@host> show route resolution summary
Tree Index: 1, Nodes 7, Reference Count 2
Contributing routing tables: inet.3
Tree Index: 2, Nodes 7, Reference Count 8213
Contributing routing tables: inet.3
Policy: [ RRwM ]
Tree Index: 3, Nodes 7, Reference Count 2
Contributing routing tables: inet6.3
Tree Index: 4, Nodes 1, Reference Count 1
Contributing routing tables: iso.0
Tree Index: 5, Nodes 1000061, Reference Count 13
Contributing routing tables: inet.0 inet.3
Policy: [ Community-RRwM ]
Tree Index: 6, Nodes 2013, Reference Count 6
Contributing routing tables: inet6.0 inet6.3
Policy: [ RRwM ]
Tree Index: 7, Nodes 7, Reference Count 1501
Contributing routing tables: inet6.3
Policy: [ RRwM ]

```

```
Tree Index: 8, Nodes 1000061, Reference Count 2
Contributing routing tables: inet.0 inet.3
Policy: [ RRWM ]
```

#### show route resolution summary

```
user@host> show route resolution summary
Tree Index: 1, Nodes 24, Reference Count 1
Contributing routing tables: :voice.inet.0 :voice.inet.3
Tree Index: 2, Nodes 2, Reference Count 1
Contributing routing tables: inet.3
Tree Index: 3, Nodes 43, Reference Count 1
Contributing routing tables: inet.0 inet.3
```

#### show route resolution unresolved

```
user@host> show route resolution unresolved
Tree Index 1
vt-3/2/0.32769.0      /16
    Protocol Nexthop: 10.255.71.238 Push 800000
    Indirect nexthop: 0 -
vt-3/2/0.32772.0      /16
    Protocol Nexthop: 10.255.70.103 Push 800008
    Indirect nexthop: 0 -
Tree Index 2
```

## show route snooping

<b>Syntax</b>	<pre>show route snooping &lt;brief   detail   extensive   terse&gt; &lt;all&gt; &lt;best address/prefix&gt; &lt;exact address&gt; &lt;logical-system logical-system-name&gt; &lt;range prefix-range&gt; &lt;summary&gt; &lt;table table-name&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 8.5.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p>
<b>Description</b>	Display the entries in the routing table that were learned from snooping.
<b>Options</b>	<p><b>none</b>—Display the entries in the routing table that were learned from snooping.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b>.</p> <p><b>all</b>—(Optional) Display all entries, including hidden entries.</p> <p><b>best address/prefix</b>—(Optional) Display the longest match for the provided address and optional prefix.</p> <p><b>exact address/prefix</b>—(Optional) Display exact matches for the provided address and optional prefix.</p> <p><b>logical-system logical-system-name</b>—(Optional) Display information about a particular logical system, or type 'all'.</p> <p><b>range prefix-range</b>—(Optional) Display information for the provided address range.</p> <p><b>summary</b>—(Optional) Display route snooping summary statistics.</p> <p><b>table table-name</b>—(Optional) Display information for the named table.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show route snooping detail on page 2374</a></p> <p><a href="#">show route snooping logical-system all on page 2374</a></p>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route snooping detail

```

user@host> show route snooping detail
__+domainAll__.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

224.0.0.2/32 (1 entry, 1 announced)
  *IGMP Preference: 0
    Next hop type: MultiRecv
    Next-hop reference count: 4
    State: <Active NoReadvrt Int>
    Age: 2:24
    Task: IGMP
    Announcement bits (1): 0-KRT
    AS path: I

224.0.0.22/32 (1 entry, 1 announced)
  *IGMP Preference: 0
    Next hop type: MultiRecv
    Next-hop reference count: 4
    State: <Active NoReadvrt Int>
    Age: 2:24
    Task: IGMP
    Announcement bits (1): 0-KRT
    AS path: I

__+domainAll__.inet.1: 36 destinations, 36 routes (36 active, 0 holddown, 0 hidden)

224.0.0.0.0.0.0.0/24 (1 entry, 1 announced)
  *Multicast Preference: 180
    Next hop type: Multicast (IPv4), Next hop index: 1048584
    Next-hop reference count: 4
    State: <Active Int>
    Age: 2:24
    Task: MC
    Announcement bits (1): 0-KRT
    AS path: I

<snip>

```

### show route snooping logical-system all

```

user@host> show route snooping logical-system all

logical-system: default

inet.1: 20 destinations, 20 routes (20 active, 0 holddown, 0 hidden)
Restart Unsupported
+ = Active Route, - = Last Active, * = Both

0.0,0.1,0.0,232.1.1.65,100.1.1.2/112*[Multicast/180] 00:07:36
      Multicast (IPv4) Composite
0.0,0.1,0.0,232.1.1.66,100.1.1.2/112*[Multicast/180] 00:07:36
      Multicast (IPv4) Composite
0.0,0.1,0.0,232.1.1.67,100.1.1.2/112*[Multicast/180] 00:07:36

<snip>

default-switch.inet.1: 237 dest, 237 rts (237 active, 0 holddown, 0 hidden)

```

Restart Complete

+ = Active Route, - = Last Active, \* = Both

0.15,0.1,0.0,0.0.0.0,0.0.0.0,2/120\*[Multicast/180] 00:08:21

Multicast (IPv4) Composite

0.15,0.1,0.0,0.0.0.0,0.0.0.0,2,17/128\*[Multicast/180] 00:08:21

Multicast (IPv4) Composite

<snip>

## show route source-gateway

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2376</a> <a href="#">Syntax (EX Series Switches) on page 2376</a>
<b>Syntax</b>	<code>show route source-gateway address</code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Syntax (EX Series Switches)</b>	<code>show route source-gateway address</code> <code>&lt;brief   detail   extensive   terse&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Display the entries in the routing table that were learned from a particular address. The <b>Source</b> field in the <b>show route detail</b> command output lists the source for each route, if known.
<b>Options</b>	<b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output. If you do not specify a level of output, the system defaults to <b>brief</b> .  <b>address</b> —IP address of the system.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show route source-gateway on page 2376</a> <a href="#">show route source-gateway detail on page 2377</a> <a href="#">show route source-gateway extensive on page 2379</a>
<b>Output Fields</b>	For information about output fields, see the output field tables for the <a href="#">show route</a> command, the <a href="#">show route detail</a> command, the <a href="#">show route extensive</a> command, or the <a href="#">show route terse</a> command.

## Sample Output

### show route source-gateway

```
user@host> show route source-gateway 10.255.70.103
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
```

```

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet6.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.255.70.103:1:3:1/96
    *[BGP/170] 12:12:24, localpref 100, from 10.255.70.103
    AS path: I
    > via so-0/3/0.0, label-switched-path green-r1-r3

red.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.255.70.103:2:3:1/96
    *[BGP/170] 12:12:24, localpref 0, from 10.255.70.103
    AS path: I
    > via so-0/3/0.0, label-switched-path green-r1-r3

bgp.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
+ = Active Route, - = Last Active, * = Both

10.255.70.103:1:3:1/96
    *[BGP/170] 12:12:24, localpref 100, from 10.255.70.103
    AS path: I
    > via so-0/3/0.0, label-switched-path green-r1-r3

10.255.70.103:2:3:1/96
    *[BGP/170] 12:12:24, localpref 0, from 10.255.70.103
    AS path: I
    > via so-0/3/0.0, label-switched-path green-r1-r3

```

### show route source-gateway detail

```

user@host> show route source-gateway 10.255.70.103 detail
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1___.inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete

```

```
inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
Restart Complete
green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
```

```
Restart Complete
```

```
10.255.70.103:1:3:1/96 (1 entry, 1 announced)
  *BGP    Preference: 170/-101
          Route Distinguisher: 10.255.70.103:1
          Next-hop reference count: 7
          Source: 10.255.70.103
          Protocol next hop: 10.255.70.103
          Indirect next hop: 2 no-forward
          State: <Secondary Active Int Ext>
          Local AS: 69 Peer AS: 69
          Age: 12:14:00 Metric2: 1
          Task: BGP_69.10.255.70.103+179
          Announcement bits (1): 0-green-l2vpn
          AS path: I
          Communities: target:11111:1 Layer2-info: encaps:VPLS,
          control flags:, mtu: 0
          Label-base: 800008, range: 8
          Localpref: 100
          Router ID: 10.255.70.103
          Primary Routing Table bgp.l2vpn.0
```

```
red.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Restart Complete
```

```
10.255.70.103:2:3:1/96 (1 entry, 1 announced)
  *BGP    Preference: 170/-1
          Route Distinguisher: 10.255.70.103:2
          Next-hop reference count: 7
          Source: 10.255.70.103
          Protocol next hop: 10.255.70.103
          Indirect next hop: 2 no-forward
          State: <Secondary Active Int Ext>
          Local AS: 69 Peer AS: 69
          Age: 12:14:00 Metric2: 1
          Task: BGP_69.10.255.70.103+179
          Announcement bits (1): 0-red-l2vpn
          AS path: I
          Communities: target:11111:2 Layer2-info: encaps:VPLS,
          control flags:Site-Down, mtu: 0
          Label-base: 800016, range: 8
          Localpref: 0
          Router ID: 10.255.70.103
          Primary Routing Table bgp.l2vpn.0
```

```
bgp.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
```

```
10.255.70.103:1:3:1/96 (1 entry, 0 announced)
  *BGP    Preference: 170/-101
          Route Distinguisher: 10.255.70.103:1
          Next-hop reference count: 7
          Source: 10.255.70.103
          Protocol next hop: 10.255.70.103
          Indirect next hop: 2 no-forward
          State: <Active Int Ext>
          Local AS: 69 Peer AS: 69
```

```

Age: 12:14:00 Metric2: 1
Task: BGP_69.10.255.70.103+179
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS, control
flags:, mtu: 0
Label-base: 800008, range: 8
Localpref: 100
Router ID: 10.255.70.103
Secondary Tables: green.l2vpn.0
10.255.70.103:2:3:1/96 (1 entry, 0 announced)
  *BGP Preference: 170/-1
    Route Distinguisher: 10.255.70.103:2
    Next-hop reference count: 7
    Source: 10.255.70.103
    Protocol next hop: 10.255.70.103
    Indirect next hop: 2 no-forward
    State: <Active Int Ext>
    Local AS: 69 Peer AS: 69
    Age: 12:14:00 Metric2: 1
    Task: BGP_69.10.255.70.103+179
    AS path: I
    Communities: target:11111:2 Layer2-info: encaps:VPLS,
    control flags:Site-Down,
    mtu: 0
    Label-base: 800016, range: 8
    Localpref: 0
    Router ID: 10.255.70.103
    Secondary Tables: red.l2vpn.0

```

### show route source-gateway extensive

```

user@host> show route source-gateway 10.255.70.103 extensive
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete

private1__inet.0: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
Restart Complete

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
10.255.70.103:1:3:1/96 (1 entry, 1 announced)
  *BGP Preference: 170/-101
    Route Distinguisher: 10.255.70.103:1
    Next-hop reference count: 7
    Source: 10.255.70.103
    Protocol next hop: 10.255.70.103
    Indirect next hop: 2 no-forward
    State: <Secondary Active Int Ext>
    Local AS: 69 Peer AS: 69
    Age: 12:15:24 Metric2: 1

```

```

Task: BGP_69.10.255.70.103+179
Announcement bits (1): 0-green-l2vpn
AS path: I
Communities: target:11111:1 Layer2-info: encaps:VPLS,
control flags:, mtu: 0
Label-base: 800008, range: 8
Localpref: 100
Router ID: 10.255.70.103
Primary Routing Table bgp.l2vpn.0

red.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Restart Complete

10.255.70.103:2:3:1/96 (1 entry, 1 announced)
  *BGP   Preference: 170/-1
        Route Distinguisher: 10.255.70.103:2
        Next-hop reference count: 7
        Source: 10.255.70.103
        Protocol next hop: 10.255.70.103
        Indirect next hop: 2 no-forward
        State: <Secondary Active Int Ext>
        Local AS: 69 Peer AS: 69
        Age: 12:15:24 Metric2: 1
        Task: BGP_69.10.255.70.103+179
        Announcement bits (1): 0-red-l2vpn
        AS path: I
        Communities: target:11111:2 Layer2-info: encaps:VPLS,
        control flags:Site-Down, mtu: 0
        Label-base: 800016, range: 8
        Localpref: 0
        Router ID: 10.255.70.103
        Primary Routing Table bgp.l2vpn.0

bgp.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete

10.255.70.103:1:3:1/96 (1 entry, 0 announced)
  *BGP   Preference: 170/-101
        Route Distinguisher: 10.255.70.103:1
        Next-hop reference count: 7
        Source: 10.255.70.103
        Protocol next hop: 10.255.70.103
        Indirect next hop: 2 no-forward
        State: <Active Int Ext>
        Local AS: 69 Peer AS: 69
        Age: 12:15:24 Metric2: 1
        Task: BGP_69.10.255.70.103+179
        AS path: I
        Communities: target:11111:1 Layer2-info: encaps:VPLS,
        control flags:, mtu: 0
        Label-base: 800008, range: 8
        Localpref: 100
        Router ID: 10.255.70.103
        Secondary Tables: green.l2vpn.0
        Indirect next hops: 1
          Protocol next hop: 10.255.70.103 Metric: 2
          Indirect next hop: 2 no-forward
          Indirect path forwarding next hops: 1
        Next hop: via so-0/3/0.0 weight 0x1
                  10.255.70.103/32 Originating RIB: inet.3
                  Metric: 2 Node path count: 1

```

```

Forwarding nexthops: 1
  Nexthop: via so-0/3/0.0

10.255.70.103:2:3:1/96 (1 entry, 0 announced)
  *BGP Preference: 170/-1
    Route Distinguisher: 10.255.70.103:2
    Next-hop reference count: 7
    Source: 10.255.70.103
    Protocol next hop: 10.255.70.103
    Indirect next hop: 2 no-forward
    State: <Active Int Ext>
    Local AS: 69 Peer AS: 69
    Age: 12:15:24 Metric2: 1
    Task: BGP_69.10.255.70.103+179
    AS path: I
    Communities: target:11111:2 Layer2-info: encaps:VPLS,
    control flags:Site-Down,
    mtu: 0
    Label-base: 800016, range: 8
    Localpref: 0
    Router ID: 10.255.70.103
    Secondary Tables: red.12vpn.0
    Indirect next hops: 1
      Protocol next hop: 10.255.70.103 Metric: 2
      Indirect next hop: 2 no-forward
      Indirect path forwarding next hops: 1
    Next hop: via so-0/3/0.0 weight 0x1
      10.255.70.103/32 Originating RIB: inet.3
      Metric: 2 Node path count: 1
      Forwarding nexthops: 1
        Nexthop: via so-0/3/0.0

```

## show route summary

---

List of Syntax	<a href="#">Syntax on page 2382</a> <a href="#">Syntax (EX Series Switches) on page 2382</a>
Syntax	<code>show route summary</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;table <i>routing-table-name</i>&gt;</code>
Syntax (EX Series Switches)	<code>show route summary</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	<p>Display summary statistics about the entries in the routing table.</p> <p>CPU utilization might increase while the device learns routes. We recommend that you use the <b>show route summary</b> command after the device learns and enters the routes into the routing table. Depending on the size of your network, this might take several minutes. If you receive a “timeout communicating with routing daemon” error when using the <b>show route summary</b> command, wait several minutes before attempting to use the command again. This is not a critical system error, but you might experience a delay in using the command-line interface (CLI).</p>
Options	<p><b>none</b>—Display summary statistics about the entries in the routing table.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>table <i>routing-table-name</i></b>—(Optional) Display summary statistics for all routing tables whose name begins with this string (for example, <b>inet.0</b> and <b>inet6.0</b> are both displayed when you run the <b>show route summary table inet</b> command). If you only want to display statistics for a specific routing table, make sure to enter the exact name of that routing table.</p>
Required Privilege Level	view
List of Sample Output	<a href="#">show route summary on page 2384</a> <a href="#">show route summary table on page 2384</a> <a href="#">show route summary table (with Route Limits Configured for the Routing Table) on page 2385</a>
Output Fields	<a href="#">Table 211 on page 2383</a> lists the output fields for the <b>show route summary</b> command. Output fields are listed in the approximate order in which they appear.

Table 211: show route summary Output Fields

Field Name	Field Description
<b>Router ID</b>	Address of the local routing device.
<b><i>routing-table-name</i></b>	Name of the routing table (for example, <b>inet.0</b> ).
<b>destinations</b>	Number of destinations for which there are routes in the routing table.
<b>routes</b>	<p>Number of routes in the routing table:</p> <ul style="list-style-type: none"> <li>• <b>active</b>—Number of routes that are active.</li> <li>• <b>holddown</b>—Number of routes that are in the hold-down state before being declared inactive.</li> <li>• <b>hidden</b>—Number of routes that are not used because of routing policy.</li> </ul>
<b>Restart complete</b>	<p>All protocols have restarted for this routing table.</p> <p>Restart state:</p> <ul style="list-style-type: none"> <li>• <b>Pending:protocol-name</b>—List of protocols that have not yet completed graceful restart for this routing table.</li> <li>• <b>Complete</b>—All protocols have restarted for this routing table.</li> </ul> <p>For example, if the output shows-</p> <ul style="list-style-type: none"> <li>• LDP.inet.0: 5 routes (4 active, 1 holddown, 0 hidden) Restart Pending: OSPF LDP VPN</li> </ul> <p>This indicates that <b>OSPF</b>, <b>LDP</b>, and <b>VPN</b> protocols did not restart for <b>LDP.inet.0</b> routing table.</p> <ul style="list-style-type: none"> <li>• vpls_1.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden) Restart Complete</li> </ul> <p>This indicates that all protocols have restarted for <b>vpls_1.l2vpn.0</b> routing table.</p>
<b>Limit/Threshold</b>	<p>Displays the configured route limits for the routing table set with the <b>maximum-prefixes</b> and the <b>maximum-paths</b> statements. If you do not configure route limits for the routing table, the show output does not display this information.</p> <ul style="list-style-type: none"> <li>• <b>destinations</b>—The first number represents the maximum number of route prefixes installed in the routing table. The second number represents the number of route prefixes that trigger a warning message.</li> <li>• <b>routes</b>—The first number represents the maximum number of routes. The second number represents the number of routes that trigger a warning message.</li> </ul>
<b>Direct</b>	Routes on the directly connected network.
<b>Local</b>	Local routes.
<b><i>protocol-name</i></b>	Name of the protocol from which the route was learned. For example, <b>OSPF</b> , <b>RSVP</b> , and <b>Static</b> .

## Sample Output

### show route summary

```
user@host> show route summary
Autonomous system number: 69
Router ID: 10.255.71.52
Maximum-ECMP: 32
inet.0: 24 destinations, 25 routes (23 active, 0 holddown, 1 hidden)
Restart Complete
    Direct:    6 routes,    5 active
    Local:    4 routes,    4 active
    OSPF:     5 routes,    4 active
    Static:   7 routes,    7 active
    IGMP:     1 routes,    1 active
    PIM:      2 routes,    2 active

inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Restart Complete
    RSVP:      2 routes,    2 active

iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete
    Direct:      1 routes,    1 active

mpls.0: 7 destinations, 7 routes (5 active, 0 holddown, 2 hidden)
Restart Complete
    MPLS:      3 routes,    3 active
    VPLS:      4 routes,    2 active

inet6.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
Restart Complete
    Direct:      2 routes,    2 active
    PIM:         2 routes,    2 active
    MLD:         1 routes,    1 active

green.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
    BGP:        2 routes,    2 active
    L2VPN:      2 routes,    2 active

red.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Restart Complete
    BGP:        2 routes,    2 active
    L2VPN:      1 routes,    1 active

bgp.l2vpn.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
Restart Complete
    BGP:        4 routes,    4 active
```

### show route summary table

```
user@host> show route summary table inet
Router ID: 192.168.0.1

inet.0: 32 destinations, 34 routes (31 active, 0 holddown, 1 hidden)
    Direct:    6 routes,    5 active
    Local:     9 routes,    9 active
    OSPF:      3 routes,    1 active
    Static:   13 routes,   13 active
```

```

IGMP:      1 routes,      1 active
PIM:       2 routes,      2 active

inet.1: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Multicast: 1 routes,      1 active

inet6.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
Local:    1 routes,      1 active
PIM:      2 routes,      2 active

inet6.1: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Multicast: 1 routes,      1 active

```

#### show route summary table (with Route Limits Configured for the Routing Table)

```

user@host> show route summary table VPN-A.inet.0
Autonomous system number: 100
Router ID: 10.255.182.142

VPN-A.inet.0: 13 destinations, 14 routes (13 active, 0 holddown, 0 hidden)
Limit/Threshold: 2000/200 destinations 20/12 routes
Direct:      2 routes,      2 active
Local:       1 routes,      1 active
OSPF:        4 routes,      3 active
BGP:         4 routes,      4 active
IGMP:        1 routes,      1 active
PIM:         2 routes,      2 active

```

## show route table

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2386</a> <a href="#">Syntax (EX Series Switches, QFX Series Switches) on page 2386</a>
<b>Syntax</b>	<code>show route table <i>routing-table-name</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>
<b>Syntax (EX Series Switches, QFX Series Switches)</b>	<code>show route table <i>routing-table-name</i></code> <code>&lt;brief   detail   extensive   terse&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Statement introduced in Junos OS Release 14.1X53-D15 for QFX Series switches. Show route table evpn statement introduced in Junos OS Release 15.1X53-D30 for QFX Series switches.
<b>Description</b>	Display the route entries in a particular routing table.
<b>Options</b>	<b>brief   detail   extensive   terse</b> —(Optional) Display the specified level of output.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b><i>routing-table-name</i></b> —Display route entries for all routing tables whose names begin with this string (for example, inet.0 and inet6.0 are both displayed when you run the <b>show route table inet</b> command).
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show route summary on page 2382</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show route table bgp.l2.vpn on page 2397</a> <a href="#">show route table bgp.l3vpn.0 on page 2397</a> <a href="#">show route table bgp.l3vpn.0 detail on page 2398</a> <a href="#">show route table bgp.rtarget.0 (When Proxy BGP Route Target Filtering Is Configured) on page 2399</a> <a href="#">show route table bgp.evpn.0 on page 2399</a> <a href="#">show route table evpna.evpn.0 on page 2400</a> <a href="#">show route table inet.0 on page 2400</a> <a href="#">show route table inet.3 on page 2401</a> <a href="#">show route table inet.3 protocol ospf on page 2401</a> <a href="#">show route table inet6.0 on page 2401</a> <a href="#">show route table inet6.3 on page 2401</a>

[show route table inetflow detail on page 2402](#)  
[show route table lsdist.0 extensive on page 2402](#)  
[show route table l2circuit.0 on page 2404](#)  
[show route table mpls on page 2404](#)  
[show route table mpls extensive on page 2404](#)  
[show route table mpls.0 on page 2405](#)  
[show route table mpls.0 detail \(PTX Series\) on page 2406](#)  
[show route table mpls.0 ccc ge-0/0/1.1004 detail on page 2406](#)  
[show route table mpls.0 protocol evpn on page 2407](#)  
[show route table mpls.0 protocol ospf on page 2413](#)  
[show route table mpls.0 extensive \(PTX Series\) on page 2414](#)  
[show route table mpls.0 \(RSVP Route—Transit LSP\) on page 2414](#)  
[show route table vpls\\_1 detail on page 2415](#)  
[show route table vpn-a on page 2415](#)  
[show route table vpn-a.mdt.0 on page 2415](#)  
[show route table VPN-A detail on page 2416](#)  
[show route table VPN-AB.inet.0 on page 2416](#)  
[show route table VPN\\_blue.mvpn-inet6.0 on page 2417](#)  
[show route table vrf1.mvpn.0 extensive on page 2417](#)  
[show route table inetflow detail on page 2417](#)  
[show route table bgp.evpn.0 extensive |no-more \(EVPN\) on page 2420](#)

**Output Fields** [Table 193 on page 2178](#) describes the output fields for the **show route table** command. Output fields are listed in the approximate order in which they appear.

*Table 212: show route table Output Fields*

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
Restart complete	<p>All protocols have restarted for this routing table.</p> <p>Restart state:</p> <ul style="list-style-type: none"> <li>• <b>Pending:</b><i>protocol-name</i>—List of protocols that have not yet completed graceful restart for this routing table.</li> <li>• <b>Complete</b>—All protocols have restarted for this routing table.</li> </ul> <p>For example, if the output shows-</p> <ul style="list-style-type: none"> <li>• LDP.inet.0 : 5 routes (4 active, 1 holddown, 0 hidden) Restart Pending: OSPF LDP VPN</li> </ul> <p>This indicates that <b>OSPF</b>, <b>LDP</b>, and <b>VPN</b> protocols did not restart for the <b>LDP.inet.0</b> routing table.</p> <ul style="list-style-type: none"> <li>• vpls_1.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden) Restart Complete</li> </ul> <p>This indicates that all protocols have restarted for the <b>vpls_1.l2vpn.0</b> routing table.</p>
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.

Table 212: show route table Output Fields (continued)

Field Name	Field Description
<i>number routes</i>	<p>Number of routes in the routing table and total number of routes in the following states:</p> <ul style="list-style-type: none"> <li>• <b>active</b> (routes that are active)</li> <li>• <b>holddown</b> (routes that are in the pending state before being declared inactive)</li> <li>• <b>hidden</b> (routes that are not used because of a routing policy)</li> </ul>
<i>route-destination</i> (entry, announced)	<p>Route destination (for example:10.0.0.1/24). The <b>entry</b> value is the number of routes for this destination, and the <b>announced</b> value is the number of routes being announced for this destination. Sometimes the route destination is presented in another format, such as:</p> <ul style="list-style-type: none"> <li>• <b>MPLS-label</b> (for example, 80001).</li> <li>• <b>interface-name</b> (for example, ge-1/0/2).</li> <li>• <b>neighbor-address:control-word-status:encapsulation type:vc-id:source</b> (Layer 2 circuit only; for example, 10.1.1.195:NoCtrlWord:1:1:Local/96). <ul style="list-style-type: none"> <li>• <b>neighbor-address</b>—Address of the neighbor.</li> <li>• <b>control-word-status</b>—Whether the use of the control word has been negotiated for this virtual circuit: <b>NoCtrlWord</b> or <b>CtrlWord</b>.</li> <li>• <b>encapsulation type</b>—Type of encapsulation, represented by a number: (1) Frame Relay DLCI, (2) ATM AAL5 VCC transport, (3) ATM transparent cell transport, (4) Ethernet, (5) VLAN Ethernet, (6) HDLC, (7) PPP, (8) ATM VCC cell transport, (10) ATM VPC cell transport.</li> <li>• <b>vc-id</b>—Virtual circuit identifier.</li> <li>• <b>source</b>—Source of the advertisement: <b>Local</b> or <b>Remote</b>.</li> </ul> </li> <li>• <b>inclusive multicast Ethernet tag route</b>—Type of route destination represented by (for example, 3:100.100.100.10:100::0::10::100.100.100.10/384): <ul style="list-style-type: none"> <li>• <b>route distinguisher</b>—(8 octets) Route distinguisher (RD) must be the RD of the EVPN instance (EVI) that is advertising the NLRI.</li> <li>• <b>Ethernet tag ID</b>—(4 octets) Identifier of the Ethernet tag. Can set to 0 or to a valid Ethernet tag value.</li> <li>• <b>IP address length</b>—(1 octet) Length of IP address in bits.</li> <li>• <b>originating router's IP address</b>—(4 or 16 octets) Must set to the provider edge (PE) device's IP address. This address should be common for all EVIs on the PE device, and may be the PE device's loopback address.</li> </ul> </li> </ul>
<i>label stacking</i>	<p>(Next-to-the-last-hop routing device for MPLS only) Depth of the MPLS label stack, where the label-popping operation is needed to remove one or more labels from the top of the stack. A pair of routes is displayed, because the pop operation is performed only when the stack depth is two or more labels.</p> <ul style="list-style-type: none"> <li>• <b>S=0 route</b> indicates that a packet with an incoming label stack depth of 2 or more exits this routing device with one fewer label (the label-popping operation is performed).</li> <li>• If there is no <b>S=</b> information, the route is a normal MPLS route, which has a stack depth of 1 (the label-popping operation is not performed).</li> </ul>

Table 212: show route table Output Fields (continued)

Field Name	Field Description
[ <i>protocol, preference</i> ]	<p>Protocol from which the route was learned and the preference value for the route.</p> <ul style="list-style-type: none"> <li>• <b>+</b>—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table.</li> <li>• <b>-</b>—A hyphen indicates the last active route.</li> <li>• <b>*</b>—An asterisk indicates that the route is both the active and the last active route. An asterisk before a <b>to</b> line indicates the best subpath to the route.</li> </ul> <p>In every routing metric except for the BGP <b>LocalPref</b> attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the <b>LocalPref</b> value in the <b>Preference2</b> field. For example, if the <b>LocalPref</b> value for Route 1 is 100, the <b>Preference2</b> value is -101. If the <b>LocalPref</b> value for Route 2 is 155, the <b>Preference2</b> value is -156. Route 2 is preferred because it has a higher <b>LocalPref</b> value and a lower <b>Preference2</b> value.</p>
Level	(IS-IS only). In IS-IS, a single AS can be divided into smaller groups called areas. Routing between areas is organized hierarchically, allowing a domain to be administratively divided into smaller areas. This organization is accomplished by configuring Level 1 and Level 2 intermediate systems. Level 1 systems route within an area. When the destination is outside an area, they route toward a Level 2 system. Level 2 intermediate systems route between areas and toward other ASs.
Route Distinguisher	IP subnet augmented with a 64-bit prefix.
PMSI	Provider multicast service interface (MVPN routing table).
Next-hop type	Type of next hop. For a description of possible values for this field, see <a href="#">Table 197 on page 2234</a> .
Next-hop reference count	Number of references made to the next hop.
Flood nexthop branches exceed maximum message	Indicates that the number of flood next-hop branches exceeded the system limit of 32 branches, and only a subset of the flood next-hop branches were installed in the kernel.
Source	IP address of the route source.
Next hop	Network layer address of the directly reachable neighboring system.
via	<p>Interface used to reach the next hop. If there is more than one interface available to the next hop, the name of the interface that is actually used is followed by the word <b>Selected</b>. This field can also contain the following information:</p> <ul style="list-style-type: none"> <li>• <b>Weight</b>—Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.</li> <li>• <b>Balance</b>—Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a routing device is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.</li> </ul>
Label-switched-path <i>lsp-path-name</i>	Name of the LSP used to reach the next hop.

Table 212: show route table Output Fields (continued)

Field Name	Field Description
Label operation	MPLS label and operation occurring at this routing device. The operation can be <b>pop</b> (where a label is removed from the top of the stack), <b>push</b> (where another label is added to the label stack), or <b>swap</b> (where a label is replaced by another label).
Interface	(Local only) Local interface name.
Protocol next hop	Network layer address of the remote routing device that advertised the prefix. This address is used to derive a forwarding next hop.
Indirect next hop	Index designation used to specify the mapping between protocol next hops, tags, kernel export policy, and the forwarding next hops.
State	State of the route (a route can be in more than one state). See <a href="#">Table 198 on page 2236</a> .
Local AS	AS number of the local routing devices.
Age	How long the route has been known.
AIGP	Accumulated interior gateway protocol (AIGP) BGP attribute.
Metric	Cost value of the indicated route. For routes within an AS, the cost is determined by IGP and the individual protocol metrics. For external routes, destinations, or routing domains, the cost is determined by a preference value.
MED-plus-IGP	Metric value for BGP path selection to which the IGP cost to the next-hop destination has been added.
TTL-Action	For MPLS LSPs, state of the TTL propagation attribute. Can be enabled or disabled for all RSVP-signaled and LDP-signaled LSPs or for specific VRF routing instances.
Task	Name of the protocol that has added the route.
Announcement bits	<p>The number of BGP peers or protocols to which Junos OS has announced this route, followed by the list of the recipients of the announcement. Junos OS can also announce the route to the kernel routing table (KRT) for installing the route into the Packet Forwarding Engine, to a resolve tree, a Layer 2 VC, or even a VPN. For example, <b>n-Resolve inet</b> indicates that the specified route is used for route resolution for next hops found in the routing table.</p> <ul style="list-style-type: none"> <li>• <b>n</b>—An index used by Juniper Networks customer support only.</li> </ul>

Table 212: show route table Output Fields (continued)

Field Name	Field Description
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li>• <b>I</b>—IGP.</li> <li>• <b>E</b>—EGP.</li> <li>• <b>Recorded</b>—The AS path is recorded by the sample process (sampled).</li> <li>• <b>?</b>—Incomplete; typically, the AS path was aggregated.</li> </ul> <p>When AS path numbers are included in the route, the format is as follows:</p> <ul style="list-style-type: none"> <li>• <b>[ ]</b>—Brackets enclose the number that precedes the AS path. This number represents the number of ASs present in the AS path, when calculated as defined in RFC 4271. This value is used in the AS-path merge process, as defined in RFC 4893.</li> <li>• <b>[ ]</b>—If more than one AS number is configured on the routing device, or if AS path prepending is configured, brackets enclose the local AS number associated with the AS path.</li> <li>• <b>{ }</b>—Braces enclose AS sets, which are groups of AS numbers in which the order does not matter. A set commonly results from route aggregation. The numbers in each AS set are displayed in ascending order.</li> <li>• <b>( )</b>—Parentheses enclose a confederation.</li> <li>• <b>( [ ] )</b>—Parentheses and brackets enclose a confederation set.</li> </ul> <p><b>NOTE:</b> In Junos OS Release 10.3 and later, the AS path field displays an unrecognized attribute and associated hexadecimal value if BGP receives attribute 128 (attribute set) and you have not configured an independent domain in any routing instance.</p>
validation-state	<p>(BGP-learned routes) Validation status of the route:</p> <ul style="list-style-type: none"> <li>• <b>Invalid</b>—Indicates that the prefix is found, but either the corresponding AS received from the EBGp peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database.</li> <li>• <b>Unknown</b>—Indicates that the prefix is not among the prefixes or prefix ranges in the database.</li> <li>• <b>Unverified</b>—Indicates that the origin of the prefix is not verified against the database. This is because the database got populated and the validation is not called for in the BGP import policy, although origin validation is enabled, or the origin validation is not enabled for the BGP peers.</li> <li>• <b>Valid</b>—Indicates that the prefix and autonomous system pair are found in the database.</li> </ul>
FECs bound to route	Indicates point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured.
Primary Upstream	When multipoint LDP with multicast-only fast reroute (MoFRR) is configured, indicates the primary upstream path. MoFRR transmits a multicast join message from a receiver toward a source on a primary path, while also transmitting a secondary multicast join message from the receiver toward the source on a backup path.
RPF Nexthops	When multipoint LDP with MoFRR is configured, indicates the reverse-path forwarding (RPF) next-hop information. Data packets are received from both the primary path and the secondary paths. The redundant packets are discarded at topology merge points due to the RPF checks.
Label	Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.

Table 212: show route table Output Fields (continued)

Field Name	Field Description
weight	Value used to distinguish MoFRR primary and backup routes. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible.
VC Label	MPLS label assigned to the Layer 2 circuit virtual connection.
MTU	Maximum transmission unit (MTU) of the Layer 2 circuit.
VLAN ID	VLAN identifier of the Layer 2 circuit.
Prefixes bound to route	Forwarding equivalent class (FEC) bound to this route. Applicable only to routes installed by LDP.
Communities	Community path attribute for the route. See <a href="#">Table 199 on page 2238</a> for all possible values for this field.
Layer2-info: encaps	Layer 2 encapsulation (for example, VPLS).
control flags	Control flags: <b>none</b> or <b>Site Down</b> .
mtu	Maximum transmission unit (MTU) information.
Label-Base, range	First label in a block of labels and label block size. A remote PE routing device uses this first label when sending traffic toward the advertising PE routing device.
status vector	Layer 2 VPN and VPLS network layer reachability information (NLRI).
Accepted Multipath	Current active path when BGP multipath is configured.
Accepted LongLivedStale	The LongLivedStale flag indicates that the route was marked LLGR-stale by this router, as part of the operation of LLGR receiver mode. Either this flag or the LongLivedStaleImport flag might be displayed for a route. Neither of these flags is displayed at the same time as the Stale (ordinary GR stale) flag.
Accepted LongLivedStaleImport	<p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy. Either this flag or the LongLivedStale flag might be displayed for a route. Neither of these flags is displayed at the same time as the Stale (ordinary GR stale) flag.</p> <p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and import into the inet.0 routing table</p>
ImportAccepted LongLivedStaleImport	<p>Accept all received BGP long-lived graceful restart (LLGR) and LLGR stale routes learned from configured neighbors and imported into the inet.0 routing table</p> <p>The LongLivedStaleImport flag indicates that the route was marked LLGR-stale when it was received from a peer, or by import policy.</p>
Accepted MultipathContrib	Path currently contributing to BGP multipath.
Localpref	Local preference value included in the route.
Router ID	BGP router ID as advertised by the neighbor in the open message.

*Table 212: show route table Output Fields (continued)*

Field Name	Field Description
Primary Routing Table	In a routing table group, the name of the primary routing table in which the route resides.
Secondary Tables	In a routing table group, the name of one or more secondary tables in which the route resides.

[Table 197 on page 2234](#) describes all possible values for the Next-hop Types output field.

*Table 213: Next-hop Types Output Field Values*

Next-Hop Type	Description
Broadcast (bcast)	Broadcast next hop.
Deny	Deny next hop.
Discard	Discard next hop.
Flood	Flood next hop. Consists of components called branches, up to a maximum of 32 branches. Each flood next-hop branch sends a copy of the traffic to the forwarding interface. Used by point-to-multipoint RSVP, point-to-multipoint LDP, point-to-multipoint CCC, and multicast.
Hold	Next hop is waiting to be resolved into a unicast or multicast type.
Indexed (idxd)	Indexed next hop.
Indirect (indr)	Used with applications that have a protocol next hop address that is remote. You are likely to see this next-hop type for internal BGP (IBGP) routes when the BGP next hop is a BGP neighbor that is not directly connected.
Interface	Used for a network address assigned to an interface. Unlike the router next hop, the interface next hop does not reference any specific node on the network.
Local (locl)	Local address on an interface. This next-hop type causes packets with this destination address to be received locally.
Multicast (mcst)	Wire multicast next hop (limited to the LAN).
Multicast discard (mdsc)	Multicast discard.
Multicast group (mgrp)	Multicast group member.
Receive (rcv)	Receive.
Reject (rjct)	Discard. An ICMP unreachable message was sent.

*Table 213: Next-hop Types Output Field Values (continued)*

Next-Hop Type	Description
Resolve (rslv)	Resolving next hop.
Routed multicast (mcrtr)	Regular multicast next hop.
Router	<p>A specific node or set of nodes to which the routing device forwards packets that match the route prefix.</p> <p>To qualify as a next-hop type router, the route must meet the following criteria:</p> <ul style="list-style-type: none"> <li>• Must not be a direct or local subnet for the routing device.</li> <li>• Must have a next hop that is directly connected to the routing device.</li> </ul>
Table	Routing table next hop.
Unicast (ucst)	Unicast.
Unilist (ulst)	List of unicast next hops. A packet sent to this next hop goes to any next hop in the list.

[Table 198 on page 2236](#) describes all possible values for the State output field. A route can be in more than one state (for example, <Active NoReadvrt Int Ext>).

*Table 214: State Output Field Values*

Value	Description
Accounting	Route needs accounting.
Active	Route is active.
Always Compare MED	Path with a lower multiple exit discriminator (MED) is available.
AS path	Shorter AS path is available.
Cisco Non-deterministic MED selection	Cisco nondeterministic MED is enabled, and a path with a lower MED is available.
Clone	Route is a clone.
Cluster list length	Length of cluster list sent by the route reflector.
Delete	Route has been deleted.
Ex	Exterior route.

*Table 214: State Output Field Values (continued)*

Value	Description
Ext	BGP route received from an external BGP neighbor.
FlashAll	Forces all protocols to be notified of a change to any route, active or inactive, for a prefix. When not set, protocols are informed of a prefix only when the active route changes.
Hidden	Route not used because of routing policy.
IfCheck	Route needs forwarding RPF check.
IGP metric	Path through next hop with lower IGP metric is available.
Inactive reason	Flags for this route, which was not selected as best for a particular destination.
Initial	Route being added.
Int	Interior route.
Int Ext	BGP route received from an internal BGP peer or a BGP confederation peer.
Interior > Exterior > Exterior via Interior	Direct, static, IGP, or EBGp path is available.
Local Preference	Path with a higher local preference value is available.
Martian	Route is a martian (ignored because it is obviously invalid).
MartianOK	Route exempt from martian filtering.
Next hop address	Path with lower metric next hop is available.
No difference	Path from neighbor with lower IP address is available.
NoReadvrt	Route not to be advertised.
NotBest	Route not chosen because it does not have the lowest MED.
Not Best in its group	Incoming BGP AS is not the best of a group (only one AS can be the best).
NotInstall	Route not to be installed in the forwarding table.
Number of gateways	Path with a greater number of next hops is available.
Origin	Path with a lower origin code is available.

Table 214: State Output Field Values (continued)

Value	Description
Pending	Route pending because of a hold-down configured on another route.
Release	Route scheduled for release.
RIB preference	Route from a higher-numbered routing table is available.
Route Distinguisher	64-bit prefix added to IP subnets to make them unique.
Route Metric or MED comparison	Route with a lower metric or MED is available.
Route Preference	Route with lower preference value is available.
Router ID	Path through a neighbor with lower ID is available.
Secondary	Route not a primary route.
Unusable path	Path is not usable because of one of the following conditions: <ul style="list-style-type: none"> <li>The route is damped.</li> <li>The route is rejected by an import policy.</li> <li>The route is unresolved.</li> </ul>
Update source	Last tiebreaker is the lowest IP address value.

Table 199 on page 2238 describes the possible values for the Communities output field.

Table 215: Communities Output Field Values

Value	Description
<i>area-number</i>	4 bytes, encoding a 32-bit area number. For AS-external routes, the value is 0. A nonzero value identifies the route as internal to the OSPF domain, and as within the identified area. Area numbers are relative to a particular OSPF domain.
<b>bandwidth: local AS</b> <b>number:link-bandwidth-number</b>	Link-bandwidth community value used for unequal-cost load balancing. When BGP has several candidate paths available for multipath purposes, it does not perform unequal-cost load balancing according to the link-bandwidth community unless all candidate paths have this attribute.
<b>domain-id</b>	Unique configurable number that identifies the OSPF domain.
<b>domain-id-vendor</b>	Unique configurable number that further identifies the OSPF domain.
<i>link-bandwidth-number</i>	Link-bandwidth number: from 0 through 4,294,967,295 (bytes per second).
<i>local AS number</i>	Local AS number: from 1 through 65,535.

Table 215: Communities Output Field Values (continued)

Value	Description
<i>options</i>	1 byte. Currently this is only used if the route type is <b>5</b> or <b>7</b> . Setting the least significant bit in the field indicates that the route carries a type 2 metric.
<i>origin</i>	(Used with VPNs) Identifies where the route came from.
<i>ospf-route-type</i>	1 byte, encoded as <b>1</b> or <b>2</b> for intra-area routes (depending on whether the route came from a type 1 or a type 2 LSA); <b>3</b> for summary routes; <b>5</b> for external routes (area number must be <b>0</b> ); <b>7</b> for NSSA routes; or <b>129</b> for sham link endpoint addresses.
<i>route-type-vendor</i>	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute <b>0x8000</b> . The format is <i>area-number:ospf-route-type:options</i> .
<i>rte-type</i>	Displays the area number, OSPF route type, and option of the route. This is configured using the BGP extended community attribute <b>0x0306</b> . The format is <i>area-number:ospf-route-type:options</i> .
<i>target</i>	Defines which VPN the route participates in; <b>target</b> has the format <i>32-bit IP address:16-bit number</i> . For example, 10.19.0.0:100.
<i>unknown IANA</i>	Incoming IANA codes with a value between <b>0x1</b> and <b>0x7fff</b> . This code of the BGP extended community attribute is accepted, but it is not recognized.
<i>unknown OSPF vendor community</i>	Incoming IANA codes with a value above <b>0x8000</b> . This code of the BGP extended community attribute is accepted, but it is not recognized.

## Sample Output

### show route table bgp.l2vpn

```

user@host> show route table bgp.l2vpn
bgp.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

192.168.24.1:1:4:1/96
    *[BGP/170] 01:08:58, localpref 100, from 192.168.24.1
    AS path: I
    > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am

```

### show route table bgp.l3vpn.0

```

user@host> show route table bgp.l3vpn.0
bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.71.15:100:10.255.71.17/32
    *[BGP/170] 00:03:59, MED 1, localpref 100, from
10.255.71.15
    AS path: I
    > via so-2/1/0.0, Push 100020, Push 100011(top)
10.255.71.15:200:10.255.71.18/32

```

```

10.255.71.15          *[BGP/170] 00:03:59, MED 1, localpref 100, from
                        AS path: I
                        > via so-2/1/0.0, Push 100021, Push 100011(top)

```

### show route table bgp.l3vpn.0 detail

```

user@host> show route table bgp.l3vpn.0 detail
bgp.l3vpn.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)

10.255.245.12:1:172.16.4.0/8 (1 entry, 1 announced)
  *BGP Preference: 170/-101
    Route Distinguisher: 10.255.245.12:1
    Source: 10.255.245.12
    Next hop: 192.168.208.66 via fe-0/0/0.0, selected
    Label operation: Push 182449
    Protocol next hop: 10.255.245.12
    Push 182449
    Indirect next hop: 863a630 297
    State: <Active Int Ext>
    Local AS: 35 Peer AS: 35
    Age: 12:19 Metric2: 1
    Task: BGP_35.10.255.245.12+179
    Announcement bits (1): 0-BGP.0.0.0.0+179
    AS path: 30 10458 14203 2914 3356 I (Atomic) Aggregator: 3356 4.68.0.11

    Communities: 2914:420 target:11111:1 origin:56:78
    VPN Label: 182449
    Localpref: 100
    Router ID: 10.255.245.12

10.255.245.12:1:4.17.225.0/24 (1 entry, 1 announced)
  *BGP Preference: 170/-101
    Route Distinguisher: 10.255.245.12:1
    Source: 10.255.245.12
    Next hop: 192.168.208.66 via fe-0/0/0.0, selected
    Label operation: Push 182465
    Protocol next hop: 10.255.245.12
    Push 182465
    Indirect next hop: 863a8f0 305
    State: <Active Int Ext>
    Local AS: 35 Peer AS: 35
    Age: 12:19 Metric2: 1
    Task: BGP_35.10.255.245.12+179
    Announcement bits (1): 0-BGP.0.0.0.0+179
  AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496 6496 6496 I
    Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
    VPN Label: 182465
    Localpref: 100
    Router ID: 10.255.245.12

10.255.245.12:1:4.17.226.0/23 (1 entry, 1 announced)
  *BGP Preference: 170/-101
    Route Distinguisher: 10.255.245.12:1
    Source: 10.255.245.12
    Next hop: 192.168.208.66 via fe-0/0/0.0, selected
    Label operation: Push 182465
    Protocol next hop: 10.255.245.12
    Push 182465
    Indirect next hop: 86bd210 330
    State: <Active Int Ext>

```

```

Local AS: 35 Peer AS: 35
Age: 12:19 Metric2: 1
Task: BGP_35.10.255.245.12+179
Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496

6496 I
Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
VPN Label: 182465
Localpref: 100
Router ID: 10.255.245.12

10.255.245.12:1:4.17.251.0/24 (1 entry, 1 announced)
*BGP Preference: 170/-101
Route Distinguisher: 10.255.245.12:1
Source: 10.255.245.12
Next hop: 192.168.208.66 via fe-0/0/0.0, selected
Label operation: Push 182465
Protocol next hop: 10.255.245.12
Push 182465
Indirect next hop: 86bd210 330
State: <Active Int Ext>
Local AS: 35 Peer AS: 35
Age: 12:19 Metric2: 1
Task: BGP_35.10.255.245.12+179
Announcement bits (1): 0-BGP.0.0.0.0+179
AS path: 30 10458 14203 2914 11853 11853 11853 6496 6496 6496 6496

6496 I
Communities: 2914:410 target:12:34 target:11111:1 origin:12:34
VPN Label: 182465
Localpref: 100

```

### show route table bgp.rtarget.0 (When Proxy BGP Route Target Filtering Is Configured)

```

user@host> show route table bgp.rtarget.0
bgp.rtarget.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

100:100:100/96
    *[RTarget/5] 00:03:14
        Type Proxy
        for 10.255.165.103
        for 10.255.166.124
        Local

```

### show route table bgp.evpn.0

```

user@host> show route table bgp.evpn.0
bgp.evpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2:100.100.100.2:100::0::00:26:88:5f:67:b0/304
    *[BGP/170] 11:00:05, localpref 100, from 100.100.100.2
        AS path: I, validation-state: unverified
        > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1
2:100.100.100.2:100::0::00:51:51:51:51:51/304
    *[BGP/170] 11:00:05, localpref 100, from 100.100.100.2
        AS path: I, validation-state: unverified
        > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1

```

```

2:100.100.100.3:100::0::00:52:52:52:52:52/304
    *[BGP/170] 10:59:58, localpref 100, from 100.100.100.3
    AS path: I, validation-state: unverified
    > to 100.64.13.3 via ge-2/0/8.0, label-switched-path R0toR2
2:100.100.100.3:100::0::a8:d0:e5:5b:01:c8/304
    *[BGP/170] 10:59:58, localpref 100, from 100.100.100.3
    AS path: I, validation-state: unverified
    > to 100.64.13.3 via ge-2/0/8.0, label-switched-path R0toR2
3:100.100.100.2:100::1000::100.100.100.2/304
    *[BGP/170] 11:00:16, localpref 100, from 100.100.100.2
    AS path: I, validation-state: unverified
    > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1
3:100.100.100.2:100::2000::100.100.100.2/304
    *[BGP/170] 11:00:16, localpref 100, from 100.100.100.2
    AS path: I, validation-state: unverified
    > to 100.64.12.2 via xe-2/2/0.0, label-switched-path R0toR1

```

### show route table evpna.evpn.0

```

user@host> show route table evpna.evpn.0
evpna.evpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

3:100.100.100.10:100::0::10::100.100.100.10/384
    *[EVPN/170] 01:37:09
    Indirect
3:100.100.100.2:100::2000::100.100.100.2/304
    *[EVPN/170] 01:37:12
    Indirect

```

### show route table inet.0

```

user@host> show route table inet.0
inet.0: 12 destinations, 12 routes (11 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

0.0.0.0/0      *[Static/5] 00:51:57
                > to 172.16.5.254 via fxp0.0
10.0.0.1/32    *[Direct/0] 00:51:58
                > via at-5/3/0.0
10.0.0.2/32    *[Local/0] 00:51:58
                Local
10.12.12.21/32 *[Local/0] 00:51:57
                Reject
10.13.13.13/32 *[Direct/0] 00:51:58
                > via t3-5/2/1.0
10.13.13.14/32 *[Local/0] 00:51:58
                Local
10.13.13.21/32 *[Local/0] 00:51:58
                Local
10.13.13.22/32 *[Direct/0] 00:33:59
                > via t3-5/2/0.0
127.0.0.1/32   [Direct/0] 00:51:58
                > via lo0.0
10.222.5.0/24  *[Direct/0] 00:51:58
                > via fxp0.0
10.222.5.81/32 *[Local/0] 00:51:58
                Local

```

### show route table inet.3

```

user@host> show route table inet.3
inet.3: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.5/32      *[LDP/9] 00:25:43, metric 10, tag 200
                  to 10.2.94.2 via lt-1/2/0.49
                  > to 10.2.3.2 via lt-1/2/0.23

```

### show route table inet.3 protocol ospf

```

user@host> show route table inet.3 protocol ospf
inet.3: 9 destinations, 18 routes (9 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.20/32      [L-OSPF/10] 1d 00:00:56, metric 2
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800020
                  to 10.0.6.60 via lt-1/2/0.12, Push 800020, Push 800030(top)
1.1.1.30/32      [L-OSPF/10] 1d 00:01:01, metric 3
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800030
                  to 10.0.6.60 via lt-1/2/0.12, Push 800030
1.1.1.40/32      [L-OSPF/10] 1d 00:01:01, metric 4
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800040
                  to 10.0.6.60 via lt-1/2/0.12, Push 800040
1.1.1.50/32      [L-OSPF/10] 1d 00:01:01, metric 5
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800050
                  to 10.0.6.60 via lt-1/2/0.12, Push 800050
1.1.1.60/32      [L-OSPF/10] 1d 00:01:01, metric 6
                  > to 10.0.10.70 via lt-1/2/0.14, Push 800060
                  to 10.0.6.60 via lt-1/2/0.12, Pop

```

### show route table inet6.0

```

user@host> show route table inet6.0
inet6.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Route, * = Both

fec0:0:0:3::/64 *[Direct/0] 00:01:34
>via fe-0/1/0.0

fec0:0:0:3::/128 *[Local/0] 00:01:34
>Local

fec0:0:0:4::/64 *[Static/5] 00:01:34
>to fec0:0:0:3::ffff via fe-0/1/0.0

```

### show route table inet6.3

```

user@router> show route table inet6.3
inet6.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

::10.255.245.195/128
                  *[LDP/9] 00:00:22, metric 1
                  > via so-1/0/0.0
::10.255.245.196/128
                  *[LDP/9] 00:00:08, metric 1
                  > via so-1/0/0.0, Push 100008

```

## show route table inetflow detail

```

user@host> show route table inetflow detail
inetflow.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.12.44.1,*/48 (1 entry, 1 announced)
    *BGP    Preference: 170/-101
            Next-hop reference count: 2
            State: <Active Ext>
            Local AS: 64502 Peer AS: 64500
            Age: 4
            Task: BGP_64500.10.12.99.5+3792
            Announcement bits (1): 0-Flow
            AS path: 64500 I
            Communities: traffic-rate:0:0
            Validation state: Accept, Originator: 10.12.99.5
            Via: 10.12.44.0/24, Active
            Localpref: 100
            Router ID: 10.255.71.161

10.12.56.1,*/48 (1 entry, 1 announced)
    *Flow    Preference: 5
            Next-hop reference count: 2
            State: <Active>
            Local AS: 64502
            Age: 6:30
            Task: RT Flow
            Announcement bits (2): 0-Flow 1-BGP.0.0.0.0+179
            AS path: I
            Communities: 1:1

```

## show route table lsdist.0 extensive

```

user@host> show route table lsdist.0 extensive
lsdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
NODE { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 ISIS-L1:0 }/1152
(1 entry, 1 announced)
TSI:
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xa62f378 (adv_entry)
  Advertised metrics:
    Nexthop: Self
    Localpref: 100
    AS path: [4170512532] I
    Communities:
Path NODE { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 ISIS-L1:0 }
Vector len 4. Val: 0
    *IS-IS  Preference: 15
            Level: 1
            Next hop type: Fictitious, Next hop index: 0
            Address: 0x95dfc64
            Next-hop reference count: 9
            State: <Active NotInstall>
            Local AS: 4170512532
            Age: 6:05
            Validation State: unverified
            Task: IS-IS
            Announcement bits (1): 0-BGP_RT_Background
            AS path: I
            IPv4 Router-ids:
                128.220.11.197
            Area membership:

```

```

47 00 05 80 ff f8 00 00 00 01 08 00 01
SPRING-Capabilities: - SRGB block [Start: 800000,
Range: 256, Flags: 0xc0]
SPRING-Algorithms:
- Algo: 0
LINK { Local { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 }.{
IPv4:8.65.1.105 } Remote { AS:4170512532 BGP-LS ID:4170512532 ISO:4284.3300.5067)
TSI:
Page 0 idx 0, (group ibgp type Internal) Type 1 val 0xa62f3cc (adv_entry)
Advertised metrics:
Nexthop: Self
Localpref: 100
AS path: [4170512532] I
Communities:
Path LINK { Local { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 }.{
IPv4:8.65.1.105 } Remote { AS:4170512532 BGP-LS ID:4170512532 ISO:4284.33000
*IS-IS Preference: 15
Level: 1
Next hop type: Fictitious, Next hop index: 0
Address: 0x95dfc64
Next-hop reference count: 9
State: <Active NotInstall>
Local AS: 4170512532
Age: 6:05
Validation State: unverified
Task: IS-IS
Announcement bits (1): 0-BGP_RT_Background
AS path: I
Color: 32768
Maximum bandwidth: 1000Mbps
Reservable bandwidth: 1000Mbps
Unreserved bandwidth by priority:
0 1000Mbps
1 1000Mbps
2 1000Mbps
3 1000Mbps
4 1000Mbps
5 1000Mbps
6 1000Mbps
7 1000Mbps
Metric: 10
TE Metric: 10
LAN IPV4 Adj-SID - Label: 299776, Flags: 0x30,
Weight: 0, Nbr: 10.220.1.83

PREFIX { Node { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 } {
IPv4:128.220.11.197/32 } ISIS-L1:0 }/1152 (1 entry, 1 announced) TSI: Page 0 idx
0, (group ibgp type Internal) Type 1 val 0xa62f43c (adv_entry)
Advertised metrics:
Nexthop: Self
Localpref: 100
AS path: [4170512532] I
Communities:
Path PREFIX { Node { AS:4170512532 BGP-LS ID:4170512532 ISO:3245.3412.3456.00 }
{ IPv4:128.220.11.197/32 } ISIS-L1:0 } Vector len 4. Val: 0
*IS-IS Preference: 15
Level: 1
Next hop type: Fictitious, Next hop index: 0
Address: 0x95dfc64
Next-hop reference count: 9
State:<Active NotInstall>

```

```

Local AS: 4170512532
Age: 6:05
Validation State: unverified
Task: IS-IS
Announcement bits (1): 0-BGP_RT_Background
AS path: I
Prefix SID: 67, Flags: 0x40, Algo: 0

```

### show route table l2circuit.0

```

user@host> show route table l2circuit.0
l2circuit.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.1.1.195:NoCtrlWord:1:1:Local/96
    *[L2CKT/7] 00:50:47
    > via so-0/1/2.0, Push 100049
    > via so-0/1/3.0, Push 100049
10.1.1.195:NoCtrlWord:1:1:Remote/96
    *[LDP/9] 00:50:14
    Discard
10.1.1.195:CtrlWord:1:2:Local/96
    *[L2CKT/7] 00:50:47
    > via so-0/1/2.0, Push 100049
    > via so-0/1/3.0, Push 100049
10.1.1.195:CtrlWord:1:2:Remote/96
    *[LDP/9] 00:50:14
    Discard

```

### show route table mpls

```

user@host> show route table mpls
mpls.0: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 00:13:55, metric 1
            Receive
1          *[MPLS/0] 00:13:55, metric 1
            Receive
2          *[MPLS/0] 00:13:55, metric 1
            Receive
1024       *[VPN/0] 00:04:18
            to table red.inet.0, Pop

```

### show route table mpls extensive

```

user@host> show route table mpls extensive
100000 (1 entry, 1 announced)
TSI:
KRT in-kernel 100000 /36 -> {so-1/0/0.0}
    *LDP Preference: 9
    Next hop: via so-1/0/0.0, selected
    Pop
    State: <Active Int>
    Age: 29:50 Metric: 1
    Task: LDP
    Announcement bits (1): 0-KRT
    AS path: I
    Prefixes bound to route: 10.0.0.194/32

```

## show route table mpls.0

```

user@host> show route table mpls.0
mpls.0: 18 destinations, 19 routes (18 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                *[MPLS/0] 11:39:56, metric 1
                  to table inet.0
0(S=0)           *[MPLS/0] 11:39:56, metric 1
                  to table mpls.0
1                *[MPLS/0] 11:39:56, metric 1
                  Receive
2                *[MPLS/0] 11:39:56, metric 1
                  to table inet6.0
2(S=0)           *[MPLS/0] 11:39:56, metric 1
                  to table mpls.0
13               *[MPLS/0] 11:39:56, metric 1
                  Receive
303168           *[EVPN/7] 11:00:49, routing-instance pbbn10, route-type
Ingress-MAC, ISID 0
                  to table pbbn10.evpn-mac.0
303184           *[EVPN/7] 11:00:53, routing-instance pbbn10, route-type
Ingress-IM, ISID 1000
                  to table pbbn10.evpn-mac.0
                  [EVPN/7] 11:00:53, routing-instance pbbn10, route-type
Ingress-IM, ISID 2000
                  to table pbbn10.evpn-mac.0
303264           *[EVPN/7] 11:00:53, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-IM, ISID 1000
                  > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303280           *[EVPN/7] 11:00:53, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-IM, ISID 2000
                  > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303328           *[EVPN/7] 11:00:49, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
                  > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303344           *[EVPN/7] 11:00:49, remote-pe 100.100.100.2, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
                  > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303360           *[EVPN/7] 11:00:47, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:26:88:5f:67:b0
                  > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303376           *[EVPN/7] 11:00:47, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:51:51:51:51:51
                  > to 100.1.12.2 via xe-2/2/0.0, label-switched-path R0toR1
303392           *[EVPN/7] 11:00:35, remote-pe 100.100.100.3, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
                  > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303408           *[EVPN/7] 11:00:35, remote-pe 100.100.100.3, routing-instance
pbbn10, route-type Egress-MAC, ISID 0
                  > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303424           *[EVPN/7] 11:00:33, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC a8:d0:e5:5b:01:c8
                  > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2
303440           *[EVPN/7] 11:00:33, routing-instance pbbn10, route-type
Egress-MAC, ISID 0, BMAC 00:52:52:52:52:52
                  > to 100.1.13.3 via ge-2/0/8.0, label-switched-path R0toR2

```

**show route table mpls.0 detail (PTX Series)**

```

user@host> show route table mpls.0 detail
ge-0/0/2.600 (1 entry, 1 announced)
  *L2VPN Preference: 7
    Next hop type: Indirect
    Address: 0x9438f34
    Next-hop reference count: 2
    Next hop type: Router, Next hop index: 567
    Next hop: 10.0.0.1 via ge-0/0/1.0, selected
    Label operation: Push 299808
    Label TTL action: prop-ttl
    Load balance label: Label 299808:None;
    Session Id: 0x1
    Protocol next hop: 10.255.255.1
    Label operation: Push 299872 Offset: 252
    Label TTL action: no-prop-ttl
    Load balance label: Label 299872:Flow label PUSH;
    Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
    Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
    State: <Active Int>
    Age: 21 Metric2: 1
    Validation State: unverified
    Task: Common L2 VC
    Announcement bits (2): 0-KRT 2-Common L2 VC
    AS path: I

```

**show route table mpls.0 ccc ge-0/0/1.1004 detail**

```

user@host>show route table mpls.0 ccc ge-0/0/1.1004 detail
mpls.0: 121 destinations, 121 routes (121 active, 0 holddown, 0 hidden)
ge-0/0/1.1004 (1 entry, 1 announced)
  *EVPN Preference: 7
    Next hop type: List, Next hop index: 1048577
    Address: 0xdc14770
    Next-hop reference count: 3
    Next hop: ELNH Address 0xd011e30
      Next hop type: Indirect, Next hop index: 0
      Address: 0xd011e30
      Next-hop reference count: 3
      Protocol next hop: 100.100.100.1
      Label operation: Push 301952
      Composite next hop: 0xd011dc0 754 INH Session ID: 0x146
      Indirect next hop: 0xb69a890 1048615 INH Session ID: 0x146
        Next hop type: Router, Next hop index: 735
        Address: 0xd00e530
        Next-hop reference count: 23
        Next hop: 100.46.1.2 via ge-0/0/5.0
        Label-switched-path pe4_to_pe1
        Label operation: Push 300320
        Label TTL action: prop-ttl
        Load balance label: Label 300320: None;
        Label element ptr: 0xd00e580
        Label parent element ptr: 0x0
        Label element references: 18
        Label element child references: 16
        Label element lsp id: 5
    Next hop: ELNH Address 0xd012070
      Next hop type: Indirect, Next hop index: 0
      Address: 0xd012070

```

```

Next-hop reference count: 3
Protocol next hop: 100.100.100.2
Label operation: Push 301888
Composite next hop: 0xd012000 755 INH Session ID: 0x143
Indirect next hop: 0xb69a9a0 1048641 INH Session ID: 0x143
  Next hop type: Router, Next hop index: 716
  Address: 0xd00e710
  Next-hop reference count: 23
  Next hop: 100.46.1.2 via ge-0/0/5.0
  Label-switched-path pe4_to_pe2
  Label operation: Push 300304
  Label TTL action: prop-ttl
  Load balance label: Label 300304: None;
  Label element ptr: 0xd00e760
  Label parent element ptr: 0x0
  Label element references: 15
  Label element child references: 13
  Label element lsp id: 6
Next hop: ELNH Address 0xd0121f0, selected
  Next hop type: Indirect, Next hop index: 0
  Address: 0xd0121f0
  Next-hop reference count: 3
  Protocol next hop: 100.100.100.3
  Label operation: Push 301984
  Composite next hop: 0xd012180 756 INH Session ID: 0x145
  Indirect next hop: 0xb69aab0 1048642 INH Session ID: 0x145
    Next hop type: Router, Next hop index: 801
    Address: 0xd010ed0
    Next-hop reference count: 32
    Next hop: 100.46.1.2 via ge-0/0/5.0
    Label-switched-path pe4_to_pe3
    Label operation: Push 300336
    Label TTL action: prop-ttl
    Load balance label: Label 300336: None;
    Label element ptr: 0xd0108c0
    Label parent element ptr: 0x0
    Label element references: 22
    Label element child references: 20
    Label element lsp id: 7
State: < Active Int >
Age: 2:06:50
Validation State: unverified
Task: evpn global task
Announcement bits (1): 1-KRT
AS path: I

```

### show route table mpls.0 protocol evpn

```

user@host>show route table mpls.0 protocol evpn
mpls.0: 121 destinations, 121 routes (121 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

299872          *[EVPN/7] 02:30:58, routing-instance mhevpn, route-type
Ingress-IM, vlan-id 10
                  to table mhevpn.evpn-mac.0
300016          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type
Ingress-IM, vlan-id 110
                  to table VS-1.evpn-mac.0
300032          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type
Ingress-IM, vlan-id 120
                  to table VS-1.evpn-mac.0

```

```

300048          *[EVPN/7] 02:30:38, routing-instance VS-1, route-type
Ingress-IM, vlan-id 130
                to table VS-1.evpn-mac.0
300064          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type
Ingress-IM, vlan-id 210
                to table VS-2.evpn-mac.0
300080          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type
Ingress-IM, vlan-id 220
                to table VS-2.evpn-mac.0
300096          *[EVPN/7] 02:30:38, routing-instance VS-2, route-type
Ingress-IM, vlan-id 230
                to table VS-2.evpn-mac.0
300112          *[EVPN/7] 02:27:06, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:44:44:44:44:44:44:44:44
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300128          *[EVPN/7] 02:29:22, routing-instance mhevpn, route-type
Ingress-Aliasing
                to table mhevpn.evpn-mac.0
300144          *[EVPN/7] 02:27:06, routing-instance VS-1, route-type
Egress-MAC, ESI 00:44:44:44:44:44:44:44:44
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300160          *[EVPN/7] 02:29:22, routing-instance VS-1, route-type
Ingress-Aliasing
                to table VS-1.evpn-mac.0
300176          *[EVPN/7] 02:27:07, routing-instance VS-2, route-type
Egress-MAC, ESI 00:44:44:44:44:44:44:44:44
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300192          *[EVPN/7] 02:29:22, routing-instance VS-2, route-type
Ingress-Aliasing
                to table VS-2.evpn-mac.0
300208          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 120
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300224          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-IM, vlan-id 10
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300240          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300256          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300272          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300288          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300304          *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300320          *[EVPN/7] 02:27:06, routing-instance VS-1, route-type
Egress-MAC, ESI 00:11:11:11:11:11:11:11:11
                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
                > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300336          *[EVPN/7] 02:27:06, routing-instance VS-1, route-type
Egress-MAC, ESI 00:33:33:33:33:33:33:33:33
                to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

```

```

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300368 * [EVPN/7] 02:27:07, routing-instance VS-2, route-type
Egress-MAC, ESI 00:33:33:33:33:33:33:33
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300384 * [EVPN/7] 02:27:07, routing-instance VS-2, route-type
Egress-MAC, ESI 00:11:11:11:11:11:11:11
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300416 * [EVPN/7] 02:27:06, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:33:33:33:33:33:33:33
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300432 * [EVPN/7] 02:27:06, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:11:11:11:11:11:11:11
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
300480 * [EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300496 * [EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300560 * [EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300592 * [EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
300608 * [EVPN/7] 02:29:23
> via ge-0/0/1.1001, Pop
300624 * [EVPN/7] 02:29:23
> via ge-0/0/1.2001, Pop
301232 * [EVPN/7] 02:29:17
> via ge-0/0/1.1002, Pop
301296 * [EVPN/7] 02:29:10
> via ge-0/0/1.1003, Pop
301312 * [EVPN/7] 02:27:06
> via ae10.2003, Pop
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301360 * [EVPN/7] 02:29:01
> via ge-0/0/1.1004, Pop
301408 * [EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
vpws1004, route-type Egress, vlan-id 2004
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301456 * [EVPN/7] 02:27:06
> via ae10.1010, Pop
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301552 * [EVPN/7] 02:27:07, routing-instance VS-1, route-type
Egress-MAC, ESI 00:22:22:22:22:22:22:22
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301568 * [EVPN/7] 02:27:07, routing-instance VS-2, route-type

```

```
Egress-MAC, ESI 00:22:22:22:22:22:22:22:22
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301648    *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
vpws1010, route-type Egress, vlan-id 2010
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301664    *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301680    *[EVPN/7] 02:27:07, remote-pe 100.100.100.2, routing-instance
mhevpn, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
301696    *[EVPN/7] 02:27:07, routing-instance mhevpn, route-type
Egress-MAC, ESI 00:22:22:22:22:22:22:22:22
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301712    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301728    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301744    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301760    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
vpws1010, route-type Egress, vlan-id 2010
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301776    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301792    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301808    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
vpws1004, route-type Egress, vlan-id 2004
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301824    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-IM, vlan-id 10
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301840    *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1002, route-type Egress, vlan-id 2002
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301856    *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1003, route-type Egress, vlan-id 2003
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301872    *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1003, route-type Egress Protection, vlan-id 2003
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301888    *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
vpws1010, route-type Egress Protection, vlan-id 1010
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301904    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301920    *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
301936    *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 230
    > to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301952    *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 230
```

```

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301968      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 220
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
301984      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 220
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302000      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-IM, vlan-id 210
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302016      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-SH, vlan-id 210
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302032      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302048      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302064      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302080      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-2, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302096      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302112      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302128      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302144      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302160      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 120
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302176      *[EVPN/7] 02:27:07, remote-pe 100.100.100.1, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302192      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 130
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302208      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 130
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302224      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 120
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302240      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 120
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302256      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-IM, vlan-id 110
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302272      *[EVPN/7] 02:27:07, remote-pe 100.100.100.3, routing-instance
VS-1, route-type Egress-SH, vlan-id 110
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3

```

```
302288          *[EVPN/7] 02:27:06, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302304          *[EVPN/7] 02:27:06, remote-pe 100.100.100.1, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302320          *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302336          *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-MAC
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302352          *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
vpws1004, route-type Egress, vlan-id 2004
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302368          *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-IM, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302384          *[EVPN/7] 02:27:06, remote-pe 100.100.100.3, routing-instance
mhevpn, route-type Egress-SH, vlan-id 10
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302400          *[EVPN/7] 02:26:21
> via ge-0/0/1.3001, Pop
302432          *[EVPN/7] 02:26:21, remote-pe 100.100.100.3, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302448          *[EVPN/7] 02:26:21, remote-pe 100.100.100.1, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302464          *[EVPN/7] 02:26:20, remote-pe 100.100.100.2, routing-instance
vpws3001, route-type Egress, vlan-id 40000
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302480          *[EVPN/7] 02:26:14
> via ge-0/0/1.3016, Pop
302512          *[EVPN/7] 02:26:14, remote-pe 100.100.100.1, routing-instance
vpws3016, route-type Egress, vlan-id 40016
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302528          *[EVPN/7] 02:26:14, remote-pe 100.100.100.2, routing-instance
vpws3016, route-type Egress, vlan-id 40016
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302560          *[EVPN/7] 02:26:06
> via ae10.3011, Pop
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302592          *[EVPN/7] 02:26:07, remote-pe 100.100.100.1, routing-instance
vpws3011, route-type Egress, vlan-id 401100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
302608          *[EVPN/7] 02:26:07, remote-pe 100.100.100.2, routing-instance
vpws3011, route-type Egress, vlan-id 401100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302624          *[EVPN/7] 02:26:07, remote-pe 100.100.100.3, routing-instance
vpws3011, route-type Egress Protection, vlan-id 301100
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302656          *[EVPN/7] 02:25:59
> via ae10.3006, Pop
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302688          *[EVPN/7] 02:26:00, remote-pe 100.100.100.2, routing-instance
vpws3006, route-type Egress, vlan-id 400600
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2
302704          *[EVPN/7] 02:26:00, remote-pe 100.100.100.1, routing-instance
vpws3006, route-type Egress, vlan-id 400600
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
```

```

302720          *[EVPN/7] 02:25:59, remote-pe 100.100.100.3, routing-instance
vpws3006, route-type Egress, vlan-id 400600
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
302736          *[EVPN/7] 02:25:59, remote-pe 100.100.100.3, routing-instance
vpws3006, route-type Egress Protection, vlan-id 300600
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ge-0/0/1.1001    *[EVPN/7] 02:29:23
> via ge-0/0/1.2001
ge-0/0/1.2001    *[EVPN/7] 02:29:23
> via ge-0/0/1.1001
ge-0/0/1.1002    *[EVPN/7] 02:27:06
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ae10.2003        *[EVPN/7] 02:29:10
> via ge-0/0/1.1003
ge-0/0/1.1003    *[EVPN/7] 02:27:06
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3

> via ae10.2003
ge-0/0/1.1004    *[EVPN/7] 02:27:06
to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ae10.1010        *[EVPN/7] 02:27:06
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
ge-0/0/1.3001    *[EVPN/7] 02:26:20
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3
ge-0/0/1.3016    *[EVPN/7] 02:26:13
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
ae10.3011        *[EVPN/7] 02:26:06
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1
ae10.3006        *[EVPN/7] 02:25:59
> to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe1

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe2

to 100.46.1.2 via ge-0/0/5.0, label-switched-path pe4_to_pe3

```

### show route table mpls.0 protocol ospf

```

user@host> show route table mpls.0 protocol ospf
mpls.0: 29 destinations, 29 routes (29 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

299952          *[L-OSPF/10] 23:59:42, metric 0
> to 10.0.10.70 via lt-1/2/0.14, Pop
to 10.0.6.60 via lt-1/2/0.12, Swap 800070, Push 800030(top)
299952(S=0)     *[L-OSPF/10] 23:59:42, metric 0
> to 10.0.10.70 via lt-1/2/0.14, Pop
to 10.0.6.60 via lt-1/2/0.12, Swap 800070, Push 800030(top)
299968          *[L-OSPF/10] 23:59:48, metric 0
> to 10.0.6.60 via lt-1/2/0.12, Pop

```

**show route table mpls.0 extensive (PTX Series)**

```

user@host> show route table mpls.0 extensive
ge-0/0/2.600 (1 entry, 1 announced)
TSI:
KRT in-kernel ge-0/0/2.600.0      /32 -> {composite(570)}
  *L2VPN Preference: 7
    Next hop type: Indirect
    Address: 0x9438f34
    Next-hop reference count: 2
    Next hop type: Router, Next hop index: 567
    Next hop: 10.0.0.1 via ge-0/0/1.0, selected
    Label operation: Push 299808
    Label TTL action: prop-ttl
    Load balance label: Label 299808:None;
    Session Id: 0x1
    Protocol next hop: 10.255.255.1
    Label operation: Push 299872 Offset: 252
    Label TTL action: no-prop-ttl
    Load balance label: Label 299872:Flow label PUSH;
    Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
    Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
    State: <Active Int>
    Age: 47      Metric2: 1
    Validation State: unverified
    Task: Common L2 VC
    Announcement bits (2): 0-KRT 2-Common L2 VC
    AS path: I
    Composite next hops: 1
      Protocol next hop: 10.255.255.1 Metric: 1
      Label operation: Push 299872 Offset: 252
      Label TTL action: no-prop-ttl
      Load balance label: Label 299872:Flow label PUSH;
      Composite next hop: 0x9438ed8 570 INH Session ID: 0x2
      Indirect next hop: 0x9448208 262142 INH Session ID: 0x2
      Indirect path forwarding next hops: 1
        Next hop type: Router
        Next hop: 10.0.0.1 via ge-0/0/1.0
        Session Id: 0x1
      10.255.255.1/32 Originating RIB: inet.3
        Metric: 1      Node path count: 1
        Forwarding nexthops: 1
        Nexthop: 10.0.0.1 via ge-0/0/1.0

```

**show route table mpls.0 (RSVP Route—Transit LSP)**

```

user@host> show route table mpls.0

mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 00:37:31, metric 1
            Receive
1          *[MPLS/0] 00:37:31, metric 1
            Receive
2          *[MPLS/0] 00:37:31, metric 1
            Receive
13         *[MPLS/0] 00:37:31, metric 1
            Receive
300352     *[RSVP/7/1] 00:08:00, metric 1

```

```

300352(S=0)      > to 10.64.0.106 via ge-1/0/1.0, label-switched-path lsp1_p2p
                  *[RSVP/7/1] 00:08:00, metric 1
300384           > to 10.64.0.106 via ge-1/0/1.0, label-switched-path lsp1_p2p
                  *[RSVP/7/2] 00:05:20, metric 1
                  > to 10.64.1.106 via ge-1/0/0.0, Pop
300384(S=0)      *[RSVP/7/2] 00:05:20, metric 1
                  > to 10.64.1.106 via ge-1/0/0.0, Pop

```

### show route table vpls\_1 detail

```

user@host> show route table vpls_1 detail
vpls_1.l2vpn.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
Restart Complete

172.16.1.11:1000:1:1/96 (1 entry, 1 announced)
*L2VPN Preference: 170/-1
Receive table: vpls_1.l2vpn.0
Next-hop reference count: 2
State: <Active Int Ext>
Age: 4:29:47 Metric2: 1
Task: vpls_1-l2vpn
Announcement bits (1): 1-BGP.0.0.0+179
AS path: I
Communities: Layer2-info: encaps:VPLS, control flags:Site-Down
Label-base: 800000, range: 8, status-vector: 0xFF

```

### show route table vpn-a

```

user@host> show route table vpn-a
vpn-a.l2vpn.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)

+ = Active Route, - = Last Active, * = Both
192.168.16.1:1:1/96
    *[VPN/7] 05:48:27
        Discard
192.168.24.1:1:2:1/96
    *[BGP/170] 00:02:53, localpref 100, from 192.168.24.1
        AS path: I
        > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am
192.168.24.1:1:3:1/96
    *[BGP/170] 00:02:53, localpref 100, from 192.168.24.1
        AS path: I
        > to 10.0.16.2 via fe-0/0/1.0, label-switched-path am

```

### show route table vpn-a.mdt.0

```

user@host> show route table vpn-a.mdt.0
vpn-a.mdt.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1:1:0:10.255.14.216:232.1.1.1/144
    *[MVPN/70] 01:23:05, metric2 1
        Indirect
1:1:1:10.255.14.218:232.1.1.1/144
    *[BGP/170] 00:57:49, localpref 100, from 10.255.14.218
        AS path: I
        > via so-0/0/0.0, label-switched-path r0e-to-r1
1:1:2:10.255.14.217:232.1.1.1/144
    *[BGP/170] 00:57:49, localpref 100, from 10.255.14.217

```

```

AS path: I
> via so-0/0/1.0, label-switched-path r0-to-r2

```

### show route table VPN-A detail

```

user@host> show route table VPN-A detail
VPN-AB.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
10.255.179.9/32 (1 entry, 1 announced)
    *BGP      Preference: 170/-101
                Route Distinguisher: 10.255.179.13:200
                Next hop type: Indirect
                Next-hop reference count: 5
                Source: 10.255.179.13
                Next hop type: Router, Next hop index: 732
                Next hop: 10.39.1.14 via fe-0/3/0.0, selected
                Label operation: Push 299824, Push 299824(top)
                Protocol next hop: 10.255.179.13
                Push 299824
                Indirect next hop: 8f275a0 1048574
                State: (Secondary Active Int Ext)
                Local AS: 1 Peer AS: 1
                Age: 3:41:06 Metric: 1 Metric2: 1
                Task: BGP_1.10.255.179.13+64309
                Announcement bits (2): 0-KRT 1-BGP RT Background
                AS path: I
                Communities: target:1:200 rte-type:0.0.0.0:1:0
                Import Accepted
                VPN Label: 299824 TTL Action: vrf-ttl-propagate
                Localpref: 100
                Router ID: 10.255.179.13
                Primary Routing Table bgp.13vpn.0

```

### show route table VPN-AB.inet.0

```

user@host> show route table VPN-AB.inet.0
VPN-AB.inet.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.39.1.0/30      *[OSPF/10] 00:07:24, metric 1
> via so-7/3/1.0
10.39.1.4/30      *[Direct/0] 00:08:42
> via so-5/1/0.0
10.39.1.6/32      *[Local/0] 00:08:46
Local
10.255.71.16/32   *[Static/5] 00:07:24
> via so-2/0/0.0
10.255.71.17/32   *[BGP/170] 00:07:24, MED 1, localpref 100, from
10.255.71.15
AS path: I
> via so-2/1/0.0, Push 100020, Push 100011(top)
10.255.71.18/32   *[BGP/170] 00:07:24, MED 1, localpref 100, from
10.255.71.15
AS path: I
> via so-2/1/0.0, Push 100021, Push 100011(top)
10.255.245.245/32 *[BGP/170] 00:08:35, localpref 100
AS path: 2 I
> to 10.39.1.5 via so-5/1/0.0
10.255.245.246/32 *[OSPF/10] 00:07:24, metric 1
> via so-7/3/1.0

```

### show route table VPN\_blue.mvpn-inet6.0

```

user@host> show route table VPN_blue.mvpn-inet6.0
vpn_blue.mvpn-inet6.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1:10.255.2.202:65536:10.255.2.202/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.202
    AS path: I
    > via so-0/1/3.0
1:10.255.2.203:65536:10.255.2.203/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.203
    AS path: I
    > via so-0/1/0.0
1:10.255.2.204:65536:10.255.2.204/432
    *[MVPN/70] 00:57:23, metric2 1
    Indirect
5:10.255.2.202:65536:128::192.168.90.2:128:ffff::1/432
    *[BGP/170] 00:02:37, localpref 100, from 10.255.2.202
    AS path: I
    > via so-0/1/3.0
6:10.255.2.203:65536:64500:128::10.12.53.12:128:ffff::1/432
    *[PIM/105] 00:02:37
    Multicast (IPv6)
7:10.255.2.202:65536:64500:128::192.168.90.2:128:ffff::1/432
    *[MVPN/70] 00:02:37, metric2 1
    Indirect

```

### show route table vrf1.mvpn.0 extensive

```

user@host> show route table vrf1.mvpn.0 extensive
1:10.255.50.77:1:10.255.50.77/240 (1 entry, 1 announced)
    *MVPN Preference: 70
    PMSI: Flags 0x0: Label 0: RSVP-TE:
Session_13[10.255.50.77:0:25624:10.255.50.77]
    Next hop type: Indirect
    Address: 0xbb2c944
    Next-hop reference count: 360
    Protocol next hop: 10.255.50.77
    Indirect next hop: 0x0 - INH Session ID: 0x0
    State: <Active Int Ext>
    Age: 53:03 Metric2: 1
    Validation State: unverified
    Task: mvpn global task
    Announcement bits (3): 0-PIM.vrf1 1-mvpn global task 2-rt-export

    AS path: I

```

### show route table inetflow detail

```

user@host> show route table inetflow detail
inetflow.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.12.44.1,*/48 (1 entry, 1 announced)
    *BGP Preference: 170/-101
    Next-hop reference count: 2
    State: <Active Ext>
    Local AS: 64502 Peer AS: 64500
    Age: 4
    Task: BGP_64500.10.12.99.5+3792
    Announcement bits (1): 0-Flow

```

```

AS path: 64500 I
Communities: traffic-rate:0:0
Validation state: Accept, Originator: 10.12.99.5
Via: 10.12.44.0/24, Active
Localpref: 100
Router ID: 10.255.71.161

10.12.56.1,*/48 (1 entry, 1 announced)
*Flow Preference: 5
Next-hop reference count: 2
State: <Active>
Local AS: 64502
Age: 6:30
Task: RT Flow
Announcement bits (2): 0-Flow 1-BGP.0.0.0+179
AS path: I
Communities: 1:1

user@host> show route table green.l2vpn.0 (VPLS Multihoming with FEC 129)
green.l2vpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.1.1.2:100:10.1.1.2/96 AD
    *[VPLS/170] 1d 03:11:03, metric2 1
    Indirect
10.1.1.4:100:10.1.1.4/96 AD
    *[BGP/170] 1d 03:11:02, localpref 100, from 10.1.1.4
    AS path: I, validation-state: unverified
    > via ge-1/2/1.5
10.1.1.2:100:1:0/96 MH
    *[VPLS/170] 1d 03:11:03, metric2 1
    Indirect
10.1.1.4:100:1:0/96 MH
    *[BGP/170] 1d 03:11:02, localpref 100, from 10.1.1.4
    AS path: I, validation-state: unverified
    > via ge-1/2/1.5
10.1.1.4:NoCtrlWord:5:100:100:10.1.1.2:10.1.1.4/176
    *[VPLS/7] 1d 03:11:02, metric2 1
    > via ge-1/2/1.5
10.1.1.4:NoCtrlWord:5:100:100:10.1.1.4:10.1.1.2/176
    *[LDP/9] 1d 03:11:02
    Discard

user@host> show route table red extensive
red.inet.0: 364481 destinations, 714087 routes (364480 active, 48448 holddown, 1
hidden)
10.0.0.0/32 (3 entries, 1 announced)
    State: <OnList CalcForwarding>
TSI:
KRT in-kerne1 10.0.0.0/32 -> {composite(1048575)} Page 0 idx 1 Type 1 val 0x934342c

    Nexthop: Self
    AS path: [2] I
    Communities: target:2:1
Path 10.0.0.0 from 10.3.0.0 Vector len 4. Val: 1
    @BGP Preference: 170/-1
    Route Distinguisher: 2:1
    Next hop type: Indirect
    Address: 0x258059e4
    Next-hop reference count: 2

```

```

Source: 2.2.0.0
Next hop type: Router
Next hop: 10.1.1.1 via ge-1/1/9.0, selected
Label operation: Push 707633
Label TTL action: prop-ttl
Session Id: 0x17d8
Protocol next hop: 10.2.0.0
Push 16
Composite next hop: 0x25805988 - INH Session ID: 0x193c
Indirect next hop: 0x23eea900 - INH Session ID: 0x193c
State: <Secondary Active Int Ext ProtectionPath ProtectionCand>
Local AS:      2 Peer AS:      2
Age: 23        Metric2: 35
Validation State: unverified
Task: BGP_172.16.2.0.0+34549
AS path: I
Communities: target:2:1
Import Accepted
VPN Label: 16
Localpref: 0
Router ID: 10.2.0.0
Primary Routing Table bgp.13vpn.0
Composite next hops: 1
  Protocol next hop: 10.2.0.0 Metric: 35
  Push 16
  Composite next hop: 0x25805988 - INH Session ID: 0x193c
  Indirect next hop: 0x23eea900 - INH Session ID: 0x193c
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.1.1.1 via ge-1/1/9.0
    Session Id: 0x17d8
  2.2.0.0/32 Originating RIB: inet.3
  Metric: 35                      Node path count: 1
  Forwarding nexthops: 1
    Nexthop: 10.1.1.1 via ge-1/1/9.0
BGP Preference: 170/-1
Route Distinguisher: 2:1
Next hop type: Indirect
Address: 0x9347028
Next-hop reference count: 3
Source: 10.3.0.0
Next hop type: Router, Next hop index: 702
Next hop: 10.1.4.2 via ge-1/0/0.0, selected
Label operation: Push 634278
Label TTL action: prop-ttl
Session Id: 0x17d9
Protocol next hop: 10.3.0.0
Push 16
Composite next hop: 0x93463a0 1048575 INH Session ID: 0x17da
Indirect next hop: 0x91e8800 1048574 INH Session ID: 0x17da
State: <Secondary NotBest Int Ext ProtectionPath ProtectionCand>

Inactive reason: Not Best in its group - IGP metric
Local AS:      2 Peer AS:      2
Age: 3:34      Metric2: 70
Validation State: unverified
Task: BGP_172.16.3.0.0+32805
Announcement bits (2): 0-KRT 1-BGP_RT_Background
AS path: I
Communities: target:2:1
Import Accepted

```

```

VPN Label: 16
Localpref: 0
Router ID: 10.3.0.0
Primary Routing Table bgp.13vpn.0
Composite next hops: 1
  Protocol next hop: 10.3.0.0 Metric: 70
  Push 16
  Composite next hop: 0x93463a0 1048575 INH Session ID:
0x17da
  Indirect next hop: 0x91e8800 1048574 INH Session ID:
0x17da
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.1.4.2 via ge-1/0/0.0
    Session Id: 0x17d9
  10.3.0.0/32 Originating RIB: inet.3
    Metric: 70
    Node path count: 1
    Forwarding nexthops: 1
    Nexthop: 10.1.4.2 via ge-1/0/0.0
#Multipath Preference: 255
  Next hop type: Indirect
  Address: 0x24afca30
  Next-hop reference count: 1
  Next hop type: Router
  Next hop: 10.1.1.1 via ge-1/1/9.0, selected
  Label operation: Push 707633
  Label TTL action: prop-ttl
  Session Id: 0x17d8
  Next hop type: Router, Next hop index: 702
  Next hop: 10.1.4.2 via ge-1/0/0.0
  Label operation: Push 634278
  Label TTL action: prop-ttl
  Session Id: 0x17d9
  Protocol next hop: 10.2.0.0
  Push 16
  Composite next hop: 0x25805988 - INH Session ID: 0x193c
  Indirect next hop: 0x23eea900 - INH Session ID: 0x193c Weight 0x1

  Protocol next hop: 10.3.0.0
  Push 16
  Composite next hop: 0x93463a0 1048575 INH Session ID: 0x17da
  Indirect next hop: 0x91e8800 1048574 INH Session ID: 0x17da Weight
0x4000
  State: <ForwardingOnly Int Ext>
  Inactive reason: Forwarding use only
  Age: 23
  Metric2: 35
  Validation State: unverified
  Task: RT
  AS path: I
  Communities: target:2:1

```

### show route table bgp.evpn.0 extensive [no-more (EVPN)]

```

show route table bgp.evpn.0 extensive | no-more
bgp.evpn.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
2:1000:10::100::00:aa:aa:aa:aa:aa/304 (1 entry, 0 announced)
  *BGP
    Preference: 170/-101
    Route Distinguisher: 1000:10
    Next hop type: Indirect
    Address: 0x9420fd0
    Next-hop reference count: 12

```

```

Source: 10.2.3.4
Protocol next hop: 10.2.3.4
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: Local AS: 17 Peer AS:17 Age:21:12 Metric2:1 Validation State:
unverified
Task: BGP_17.1.2.3.4+50756
AS path: I
Communities: target:1111:8388708 encapsulation0:0:0:0:3
Import Accepted
Route Label: 100
ESI: 00:00:00:00:00:00:00:00:00
Localpref: 100
Router ID: 10.2.3.4
Secondary Tables: default-switch.evpn.0
Indirect next hops: 1
  Protocol next hop: 10.2.3.4 Metric: 1
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.1 via xe-0/0/1.0
    Session Id: 0x2
  1.2.3.4/32 Originating RIB: inet.0
    Metric: 1 Node path count: 1
    Forwarding nexthops: 2
    Nexthop: 10.92.78.102 via em0.0

2:1000:10::200::00:bb:bb:bb:bb:bb/304 (1 entry, 0 announced)
*BGP Preference: 170/-101
Route Distinguisher: 1000:10
Next hop type: Indirect
Address: 0x9420fd0
Next-hop reference count: 12
Source: 10.2.3.4
Protocol next hop: 10.2.3.4
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: Local AS:17 Peer AS:17 Age:19:43 Metric2:1 Validation
State:unverified
Task: BGP_17.1.2.3.4+50756
AS path: I
Communities: target:2222:22 encapsulation0:0:0:0:3
Import Accepted
Route Label: 200
ESI: 00:00:00:00:00:00:00:00:00
Localpref: 100
Router ID: 10.2.3.4
Secondary Tables: default-switch.evpn.0
Indirect next hops: 1
  Protocol next hop: 10.2.3.4 Metric: 1
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.1 via xe-0/0/1.0
    Session Id: 0x2
  10.2.3.4/32 Originating RIB: inet.0
    Metric: 1 Node path count: 1
    Forwarding nexthops: 2
    Nexthop: 10.92.78.102 via em0.0

2:1000:10::300::00:cc:cc:cc:cc:cc/304 (1 entry, 0 announced)
*BGP Preference: 170/-101
Route Distinguisher: 1000:10

```

```

Next hop type: Indirect
Address: 0x9420fd0
Next-hop reference count: 12
Source: 10.2.3.4
Protocol next hop: 10.2.3.4
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: Local AS:17 Peer AS:17 Age:17:21 Metric2:1 Validation State:
unverified Task: BGP 17,1,2,3,4+50756
AS path: I
Communities: target:3333:33 encapsulation0:0:0:0:3
Import Accepted
Route Label: 300
ESI: 00:00:00:00:00:00:00:00:00:00:00:00
Localpref: 100
Router ID: 10.2.3.4
Secondary Tables: default-switch.evpn.0
Indirect next hops: 1
  Protocol next hop: 10.2.3.4 Metric: 1
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.1 via xe-0/0/1.0
    Session Id: 0x2
  10.2.3.4/32 Originating RIB: inet.0
    Metric: 1 Node path count: 1
    Forwarding nexthops: 2
    Nexthop: 10.92.78.102 via em0.0

3:1000:10::100::1.2.3.4/304 (1 entry, 0 announced)
*BGP Preference: 170/-101
Route Distinguisher: 1000:10
PMSI: Flags 0x0: Label 100: Type INGRESS-REPLICATION 1.2.3.4
Next hop type: Indirect
Address: 0x9420fd0
Next-hop reference count: 12
Source: 10.2.3.4
Protocol next hop: 10.2.3.4
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: Local AS:17 Peer AS:17 Age:37:01 Metric2:1 Validation State:
unverified Task: BGP 17.1.2.3.4+50756
AS path: I
Communities: target:1111:8388708 encapsulation0:0:0:0:3
Import Accepted
Localpref: 100
Router ID: 10.2.3.4
Secondary Tables: default-switch.evpn.0
Indirect next hops: 1
  Protocol next hop: 10.2.3.4 Metric: 1
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.1 via xe-0/0/1.0
    Session Id: 0x2
  10.2.3.4/32 Originating RIB: inet.0
    Metric: 1 Node path count: 1
    Forwarding nexthops: 2
    Nexthop: 10.92.78.102 via em0.0

3:1000:10::200::1.2.3.4/304 (1 entry, 0 announced)
*BGP Preference: 170/-101
Route Distinguisher: 1000:10

```

```

PMSI: Flags 0x0: Label 200: Type INGRESS-REPLICATION 1.2.3.4
Next hop type: Indirect
Address: 0x9420fd0
Next-hop reference count: 12
Source: 10.2.3.4
Protocol next hop: 10.2.3.4
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: Local AS: 17 Peer AS: 17 Age:35:22 Metric2:1 Validation
State:unverified Task: BGP 17.1.2.3.4+50756
AS path:I Communities: target:2222:22 encapsulation):0:0:0:0:3

Import Accepted
Localpref: 100
Router ID: 10.2.3.4
Secondary Tables: default-switch.evpn.0
Indirect next hops: 1
  Protocol next hop: 10.2.3.4 Metric: 1
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.1 via xe-0/0/1.0
    Session Id: 0x2
  10.2.3.4/32 Originating RIB: inet.0
    Metric: 1 Node path count: 1
    Forwarding nexthops: 2
    Nexthop: 10.92.78.102 via em0.0

3:1000:10::300::1.2.3.4/304 (1 entry, 0 announced)
*BGP Preference: 170/-101
Route Distinguisher: 1000:10
PMSI: Flags 0x0: Label 300: Type INGRESS-REPLICATION 1.2.3.4
Next hop type: Indirect
Address: 0x9420fd0
Next-hop reference count: 12
Source: 10.2.3.4
Protocol next hop: 10.2.3.4
Indirect next hop: 0x2 no-forward INH Session ID: 0x0
State: Local AS: 17 Peer AS: 17 Age 35:22 Metric2:1 Validation State:
unverified Task: BGP 17.1.2.3.4+5075
6 AS path: I Communities: target:3333:33 encapsulation0:0:0:0:3
Import Accepted Localpref:100
Router ID: 10.2.3.4
Secondary Tables: default-switch.evpn.0
Indirect next hops: 1
  Protocol next hop: 10.2.3.4 Metric: 1
  Indirect next hop: 0x2 no-forward INH Session ID: 0x0
  Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.1 via xe-0/0/1.0
    Session Id: 0x2
  10.2.3.4/32 Originating RIB: inet.0
    Metric: 1 Node path count: 1
    Forwarding nexthops: 2
    Nexthop: 10.92.78.102 via em0.0

```

## show route terse

**List of Syntax** [Syntax on page 2424](#)  
[Syntax \(EX Series Switches\) on page 2424](#)

**Syntax** show route terse  
<logical-system (all | *logical-system-name*)>

**Syntax (EX Series Switches)** show route terse

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description** Display a high-level summary of the routes in the routing table.



**NOTE:** For BGP routes, the `show route terse` command displays the local preference attribute and MED instead of the metric1 and metric2 values. This is mostly due to historical reasons.

To display the metric1 and metric2 value of a BGP route, use the [show route extensive](#) command.

**Options** **none**—Display a high-level summary of the routes in the routing table.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level** view

**List of Sample Output** [show route terse on page 2426](#)

**Output Fields** [Table 216 on page 2424](#) describes the output fields for the `show route terse` command. Output fields are listed in the approximate order in which they appear.

*Table 216: show route terse Output Fields*

Field Name	Field Description
<i>routing-table-name</i>	Name of the routing table (for example, inet.0).
<i>number destinations</i>	Number of destinations for which there are routes in the routing table.

Table 216: show route terse Output Fields (continued)

Field Name	Field Description
<i>number routes</i>	Number of routes in the routing table and total number of routes in the following states: <ul style="list-style-type: none"> <li>• <b>active</b> (routes that are active)</li> <li>• <b>holddown</b> (routes that are in the pending state before being declared inactive)</li> <li>• <b>hidden</b> (routes that are not used because of a routing policy)</li> </ul>
<i>route key</i>	Key for the state of the route: <ul style="list-style-type: none"> <li>• <b>+</b>—A plus sign indicates the active route, which is the route installed from the routing table into the forwarding table.</li> <li>• <b>-</b>—A hyphen indicates the last active route.</li> <li>• <b>*</b>—An asterisk indicates that the route is both the active and the last active route. An asterisk before a <b>to</b> line indicates the best subpath to the route.</li> </ul>
<b>A</b>	Active route. An asterisk (*) indicates this is the active route.
<b>V</b>	Validation status of the route: <ul style="list-style-type: none"> <li>• <b>?</b>—Not evaluated. Indicates that the route was not learned through BGP.</li> <li>• <b>I</b>—Invalid. Indicates that the prefix is found, but either the corresponding AS received from the EBGp peer is not the AS that appears in the database, or the prefix length in the BGP update message is longer than the maximum length permitted in the database.</li> <li>• <b>N</b>—Unknown. Indicates that the prefix is not among the prefixes or prefix ranges in the database.</li> <li>• <b>V</b>—Valid. Indicates that the prefix and autonomous system pair are found in the database.</li> </ul>
<i>Destination</i>	Destination of the route.
<b>P</b>	Protocol through which the route was learned: <ul style="list-style-type: none"> <li>• <b>A</b>—Aggregate</li> <li>• <b>B</b>—BGP</li> <li>• <b>C</b>—CCC</li> <li>• <b>D</b>—Direct</li> <li>• <b>G</b>—GMPLS</li> <li>• <b>I</b>—IS-IS</li> <li>• <b>L</b>—L2CKT, L2VPN, LDP, Local</li> <li>• <b>K</b>—Kernel</li> <li>• <b>M</b>—MPLS, MSDP</li> <li>• <b>O</b>—OSPF</li> <li>• <b>P</b>—PIM</li> <li>• <b>R</b>—RIP, RIPng</li> <li>• <b>S</b>—Static</li> <li>• <b>T</b>—Tunnel</li> </ul>
<b>Prf</b>	Preference value of the route. In every routing metric except for the BGP <b>LocalPref</b> attribute, a lesser value is preferred. In order to use common comparison routines, Junos OS stores the 1's complement of the <b>LocalPref</b> value in the <b>Preference2</b> field. For example, if the <b>LocalPref</b> value for Route 1 is 100, the <b>Preference2</b> value is -101. If the <b>LocalPref</b> value for Route 2 is 155, the <b>Preference2</b> value is -156. Route 2 is preferred because it has a higher <b>LocalPref</b> value and a lower <b>Preference2</b> value.

Table 216: show route terse Output Fields (continued)

Field Name	Field Description
Metric 1	First metric value in the route. For routes learned from BGP, this is the MED metric.
Metric 2	Second metric value in the route. For routes learned from BGP, this is the IGP metric.
Next hop	Next hop to the destination. An angle bracket (>) indicates that the route is the selected route.
AS path	<p>AS path through which the route was learned. The letters at the end of the AS path indicate the path origin, providing an indication of the state of the route at the point at which the AS path originated:</p> <ul style="list-style-type: none"> <li>I—IGP.</li> <li>E—EGP.</li> <li>?—Incomplete; typically, the AS path was aggregated.</li> </ul>

## Sample Output

### show route terse

```

user@host> show route terse
inet.0: 10 destinations, 12 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

A V Destination      P Prf  Metric 1  Metric 2  Next hop      AS path
* ? 172.16.1.1/32    0 10      1          >10.0.0.2      I
?                               B 170      100          >10.0.0.2
unverified                               >10.0.0.2
* ? 172.16.1.1/32    D 0      110        >10.0.2        200 I
* V 2.2.0.2/32       B 170      110        >10.0.0.2
valid                               >10.0.0.2
* ? 10.0.0.0/30      D 0      100        >1t-1/2/0.1    I
?                               B 170      100          >10.0.0.2
unverified                               >10.0.0.2
* ? 10.0.0.1/32      L 0      100        Local          I
* ? 10.0.0.4/30      B 170      100          >10.0.0.2
unverified                               >10.0.0.2
* ? 10.0.0.8/30      B 170      100          >10.0.0.2
unverified                               >10.0.0.2
* I 172.16.1.1/32    B 170      90          >10.0.0.2      200 I
invalid                               >10.0.0.2
* N 192.168.2.3/32   B 170      100          >10.0.0.2      200 I
unknown                               >10.0.0.2
* ? 172.16.233.5/32  0 10      1          MultiRecv

```

## CHAPTER 26

# RIP Operational Commands

- `clear rip general-statistics`
- `clear rip statistics`
- `show rip general-statistics`
- `show rip neighbor`
- `show rip statistics`

## clear rip general-statistics

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2428</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 2428</a>
<b>Syntax</b>	clear rip general-statistics <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switches and QFX Series)</b>	clear rip general-statistics
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 12.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Clear RIP general statistics.
<b>Options</b>	<b>none</b> —Clear RIP general statistics.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show rip general-statistics on page 2431</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear rip general-statistics on page 2428</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear rip general-statistics

```
user@host> clear rip general-statistics
```

## clear rip statistics

<b>List of Syntax</b>	<a href="#">Syntax on page 2429</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 2429</a>
<b>Syntax</b>	<pre>clear rip statistics &lt;instance (all   <i>instance-name</i>)&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;neighbor&gt; &lt;peer (all   <i>address</i>)&gt;</pre>
<b>Syntax (EX Series Switches and QFX Series)</b>	<pre>clear rip statistics &lt;instance (all   <i>instance-name</i>)&gt; &lt;neighbor&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Clear RIP statistics.
<b>Options</b>	<p><b>none</b>—Reset RIP counters for all neighbors for all routing instances.</p> <p><b>instance (all   <i>instance-name</i>)</b>—(Optional) Clear RIP statistics for all instances or for the specified routing instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>neighbor</b>—(Optional) Clear RIP statistics for the specified neighbor only.</p> <p><b>peer (all   <i>address</i>)</b>—(Optional) Clear RIP statistics for a single peer or all peers.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show rip statistics on page 2435</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear rip statistics on page 2429</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear rip statistics

```
user@host> clear rip statistics
```



## show rip general-statistics

**List of Syntax**    [Syntax on page 2431](#)  
                          [Syntax \(EX Series Switches and QFX Series\) on page 2431](#)

**Syntax**    show rip general-statistics  
                  <logical-system (all | *logical-system-name*)>

**Syntax (EX Series Switches and QFX Series)**    show rip general-statistics

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Command introduced in Junos OS Release 9.0 for EX Series switches.  
                                  Command introduced in Junos OS Release 12.1 for the QFX Series.  
                                  Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description**    Display brief RIP statistics.

**Options**    **none**—Display brief RIP statistics.  
                  **logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level**    view

**Related Documentation**    • [clear rip general-statistics on page 2428](#)

**List of Sample Output**    [show rip general-statistics on page 2432](#)

**Output Fields**    [Table 217 on page 2431](#) lists the output fields for the **show rip general-statistics** command. Output fields are listed in the approximate order in which they appear.

*Table 217: show rip general-statistics Output Fields*

Field Name	Field Description
bad msgs	Number of invalid messages received.
no rcv intf	Number of packets received with no matching interface.
curr memory	Amount of memory currently used by RIP.
max memory	Most memory used by RIP.

## Sample Output

### show rip general-statistics

```
user@host> show rip general-statistics
RIPv2 I/O info:
  bad msgs      :      0
  no recv intf  :      0
  curr memory   :      0
  max memory    :      0
```

## show rip neighbor

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2433</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 2433</a>
<b>Syntax</b>	<pre>show rip neighbor &lt;instance (all   <i>instance-name</i>)&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;name&gt;</pre>
<b>Syntax (EX Series Switches and QFX Series)</b>	<pre>show rip neighbor &lt;instance (all   <i>instance-name</i>)&gt; &lt;name&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display information about RIP neighbors.
<b>Options</b>	<p><b>none</b>—Display information about all RIP neighbors for all instances.</p> <p><b>instance (all   <i>instance-name</i>)</b>—(Optional) Display RIP neighbor information for all instances or for only the specified routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>name</b>—(Optional) Display detailed information about only the specified RIP neighbor.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show rip neighbor on page 2434</a> <a href="#">show rip neighbor (With Demand Circuits Configured) on page 2434</a>
<b>Output Fields</b>	<p><a href="#">Table 218 on page 2434</a> lists the output fields for the <b>show rip neighbor</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 218: show rip neighbor Output Fields

Field Name	Field Description
<b>Neighbor</b>	Name of the RIP neighbor.  <b>NOTE:</b> Beginning with Junos OS Release 11.1, when you configure demand circuits, the output displays a demand circuit (DC) flag next to neighbor interfaces configured for demand circuits.  If you configure demand circuits at the <b>[edit protocols rip group group-name neighbor neighbor-name]</b> hierarchy level, the output shows only the neighboring interface that you specifically configured as a demand circuit. If you configure demand circuits at the <b>[edit protocols rip group group-name]</b> hierarchy level, all of the interfaces in the group are configured as demand circuits. Therefore, the output shows all of the interfaces in that group as demand circuits.
<b>State</b>	State of the connection: <b>Up</b> or <b>Dn</b> (Down).
<b>Source Address</b>	Address of the port on the local router.
<b>Destination Address</b>	Address of the port on the remote router.
<b>Send Mode</b>	Send options: <b>broadcast</b> , <b>multicast</b> , <b>none</b> , or <b>version 1</b> .
<b>Receive Mode</b>	Type of packets to accept: <b>both</b> , <b>none</b> , <b>version 1</b> , or <b>version 2</b> .
<b>In Met</b>	Metric added to incoming routes when advertising into RIP routes that were learned from other protocols.

## Sample Output

### show rip neighbor

```

user@host> show rip neighbor
Neighbor      Local  Source  Destination  Send  Receive  In
-----
ge-2/3/0.0    Up    192.168.9.105  192.168.9.107  bcast  both     1
at-5/1/1.42    Dn    (null)      (null)        mcast  v2 only  3
at-5/1/0.42    Dn    (null)      (null)        mcast  both     3
at-5/1/0.0     Up    198.51.100.0  224.0.0.9     mcast  both     3
so-0/0/0.0     Up    192.168.9.97  224.0.0.9     mcast  both     3

```

### show rip neighbor (With Demand Circuits Configured)

```

user@host> show rip neighbor
Neighbor      Local  Source  Destination  Send  Receive  In
-----
so-0/1/0.0(DC) Up    10.10.10.2  224.0.0.9     mcast  both     1
so-0/2/0.0(DC) Up    192.0.2.2   224.0.0.9     mcast  both     1

```

## show rip statistics

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2435</a> <a href="#">Syntax (EX Series Switches and QFX Series) on page 2435</a>
<b>Syntax</b>	<pre>show rip statistics &lt;instance (all   <i>instance-name</i>)&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;name&gt; &lt;peer (all   <i>address</i>)&gt;</pre>
<b>Syntax (EX Series Switches and QFX Series)</b>	<pre>show rip statistics &lt;instance (all   <i>instance-name</i>)&gt; &lt;name&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 12.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display RIP statistics about messages sent and received on an interface, as well as information received from advertisements from other routing devices.
<b>Options</b>	<p><b>none</b>—Display RIP statistics for all routing instances.</p> <p><b>instance (all   <i>instance-name</i>)</b>—(Optional) Display RIP statistics for all instances or for only the specified routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b><i>name</i></b>—(Optional) Display detailed information about only the specified RIP neighbor.</p> <p><b>peer (all   <i>address</i>)</b>—(Optional) Display RIP statistics for a single peer or all peers.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">clear rip statistics on page 2429</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">show rip statistics on page 2437</a>
<b>Output Fields</b>	<p><a href="#">Table 219 on page 2436</a> lists the output fields for the <b>show rip statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>

Table 219: show rip statistics Output Fields

Field Name	Field Description
<b>RIP info</b>	<p>Information about RIP on the specified interface:</p> <ul style="list-style-type: none"> <li>• <b>port</b>—UDP port number used for RIP.</li> <li>• <b>update interval</b>—Interval between routing table updates, in seconds.</li> <li>• <b>holddown</b>—Hold-down interval, in seconds.</li> <li>• <b>timeout</b>—Timeout interval, in seconds.</li> <li>• <b>restart in progress</b>—Graceful restart status. Displayed when RIP is or has been in the process of graceful restart.</li> <li>• <b>restart time</b>—Estimated time for the graceful restart to finish, in seconds.</li> <li>• <b>restart will complete in</b>—Remaining time for the graceful restart to finish, in seconds.</li> <li>• <b>rts learned</b>—Number of routes learned through RIP.</li> <li>• <b>rts held down</b>—Number of routes held down by RIP.</li> <li>• <b>rqsts dropped</b>—Number of received request packets that were dropped.</li> <li>• <b>resps dropped</b>—Number of received response packets that were dropped.</li> </ul>
<b>logical-interface</b>	<p>Name of the logical interface and its statistics:</p> <ul style="list-style-type: none"> <li>• <b>routes learned</b>—Number of routes learned on the logical interface.</li> <li>• <b>routes advertised</b>—Number of routes advertised by the logical interface.</li> </ul>
<b>Counter</b>	<p>List of counter types:</p> <ul style="list-style-type: none"> <li>• <b>Updates Sent</b>—Number of update messages sent.</li> <li>• <b>Triggered Updates Sent</b>—Number of triggered update messages sent.</li> <li>• <b>Responses Sent</b>—Number of response messages sent.</li> <li>• <b>Bad Messages</b>—Number of invalid messages received.</li> <li>• <b>RIPv1 Updates Received</b>—Number of RIPv1 update messages received.</li> <li>• <b>RIPv1 Bad Route Entries</b>—Number of RIPv1 invalid route entry messages received.</li> <li>• <b>RIPv1 Updates Ignored</b>—Number of RIPv1 update messages ignored.</li> <li>• <b>RIPv2 Updates Received</b>—Number of RIPv2 update messages received.</li> <li>• <b>RIPv2 Bad Route Entries</b>—Number of RIPv2 invalid route entry messages received.</li> <li>• <b>RIPv2 Updates Ignored</b>—Number of RIPv2 update messages that were ignored.</li> <li>• <b>Authentication Failures</b>—Number of received update messages that failed authentication.</li> <li>• <b>RIP Requests Received</b>—Number of RIP request messages received.</li> <li>• <b>RIP Requests Ignored</b>—Number of RIP request messages ignored.</li> </ul>
<b>Total</b>	Total number of packets for the selected counter.
<b>Last 5 min</b>	Number of packets for the selected counter in the most recent 5-minute period.
<b>Last minute</b>	Number of packets for the selected counter in the most recent 1-minute period.

## Sample Output

### show rip statistics

```

user@host> show rip statistics so-0/0/0.0
RIP info: port 520; update interval: 30s; holddown 180s; timeout 120s
restart in progress: restart time 60s; restart will complete in 55s
    rts learned   rts held down  rqsts dropped  resps dropped
              0             0             0             0
so-0/0/0.0: 0 routes learned; 501 routes advertised
Counter      Total      Last 5 min  Last minute
-----
Updates Sent          0          0          0
Triggered Updates Sent  0          0          0
Responses Sent        0          0          0
Bad Messages          0          0          0
RIPv1 Updates Received  0          0          0
RIPv1 Bad Route Entries  0          0          0
RIPv1 Updates Ignored   0          0          0
RIPv2 Updates Received  0          0          0
RIPv2 Bad Route Entries  0          0          0
RIPv2 Updates Ignored   0          0          0
Authentication Failures  0          0          0
RIP Requests Received   0          0          0
RIP Requests Ignored    0          0          0

```



## CHAPTER 27

# RIPng Operational Commands

- `clear ripng general-statistics`
- `clear ripng statistics`
- `show ripng general-statistics`
- `show ripng neighbor`
- `show ripng statistics`

## clear ripng general-statistics

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2440</a> <a href="#">Syntax (EX Series Switches) on page 2440</a>
<b>Syntax</b>	clear ripng general-statistics <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switches)</b>	clear ripng general-statistics
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Clear RIP next generation (RIPng) general statistics.
<b>Options</b>	<b>none</b> —Clear RIPng general statistics.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">show ripng general-statistics on page 2442</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear ripng general-statistics on page 2440</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear ripng general-statistics

```
user@host> clear ripng general-statistics
```

## clear ripng statistics

---

<b>List of Syntax</b>	<a href="#">Syntax on page 2441</a> <a href="#">Syntax (EX Series Switch) on page 2441</a>
<b>Syntax</b>	clear ripng statistics < <i>instance</i>   <i>name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Syntax (EX Series Switch)</b>	clear ripng statistics < <i>instance</i>   <i>name</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
<b>Description</b>	Clear RIP next-generation (RIPng) statistics.
<b>Options</b>	<p><b>none</b>—Reset RIPng counters for all neighbors for all routing instances.</p> <p><b>instance</b>—(Optional) Reset RIPng counters for the specified instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>name</b>—(Optional) Reset RIPng counters for the specified neighbor.</p>
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">show ripng statistics on page 2446</a></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear ripng statistics on page 2441</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear ripng statistics

```
user@host> clear ripng statistics
```

## show ripng general-statistics

---

List of Syntax	<a href="#">Syntax on page 2442</a> <a href="#">Syntax (EX Series Switch) on page 2442</a>
Syntax	show ripng general-statistics <logical-system (all   <i>logical-system-name</i> )>
Syntax (EX Series Switch)	show ripng general-statistics
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display general RIP next-generation (RIPng) statistics.
Options	<b>none</b> —Display general RIPng statistics.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">clear ripng general-statistics on page 2440</a></li></ul>
List of Sample Output	<a href="#">show ripng general-statistics on page 2443</a>
Output Fields	<a href="#">Table 220 on page 2442</a> lists the output fields for the <b>show ripng general-statistics</b> command. Output fields are listed in the approximate order in which they appear.

*Table 220: show ripng general-statistics Output Fields*

Field Name	Field Description
bad msgs	Number of invalid messages received.
no rcv intf	Number of packets received with no matching interface.
curr memory	Amount of memory currently used by RIPng.
max memory	Most memory used by RIPng.

## Sample Output

### show ripng general-statistics

```
user@host> show ripng general-statistics
RIPng I/O info:
  bad msgs      :      0
  no recv intf  :      0
  curr memory   :      0
  max memory    :      0
```

## show ripng neighbor

**List of Syntax** [Syntax on page 2444](#)  
[Syntax \(EX Series Switch\) on page 2444](#)

**Syntax** show ripng neighbor  
 <logical-system (all | *logical-system-name*)>  
 <*name*>

**Syntax (EX Series Switch)** show ripng neighbor  
 <*name*>

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.

**Description** Display information about RIP next-generation (RIPng) neighbors.

**Options** **none**—Display information about all RIPng neighbors.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

***name***—(Optional) Display detailed information about a specific RIPng neighbor.

**Required Privilege Level** view

**List of Sample Output** [show ripng neighbor on page 2445](#)

**Output Fields** [Table 221 on page 2444](#) lists the output fields for the **show ripng neighbor** command. Output fields are listed in the approximate order in which they appear.

*Table 221: show ripng neighbor Output Fields*

Field Name	Field Description
<b>Neighbor</b>	Name of RIPng neighbor.
<b>State</b>	State of the connection: <b>Up</b> or <b>Dn</b> (Down).
<b>Source Address</b>	Source address.
<b>Destination Address</b>	Destination address.
<b>Send</b>	Send options: <b>broadcast</b> , <b>multicast</b> , <b>none</b> , <b>version 1</b> , or <b>yes</b> .
<b>Recv</b>	Type of packets to accept: <b>both</b> , <b>none</b> , <b>version 1</b> , or <b>yes</b> .

Table 221: show ripng neighbor Output Fields (continued)

Field Name	Field Description
In Met	Metric added to incoming routes when advertising into RIPng routes that were learned from other protocols.

Sample Output

show ripng neighbor

```
user@host> show ripng neighbor
Neighbor      State  Source Address          Dest Address  Send Recv Met
-----
fe-0/0/2.0    Up    fe80::290:69ff:fe68:b002  ff02::9      yes  yes   1
```

## show ripng statistics

---

List of Syntax	<a href="#">Syntax on page 2446</a> <a href="#">Syntax (EX Series Switch) on page 2446</a>
Syntax	<code>show ripng statistics</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;<i>name</i>&gt;</code>
Syntax (EX Series Switch)	<code>show ripng statistics</code> <code>&lt;<i>name</i>&gt;</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches.
Description	Display RIP next generation (RIPng) statistics about messages sent and received on an interface, as well as information received from advertisements from other routing devices.
Options	<b>none</b> —Display RIPng statistics for all neighbors.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b><i>name</i></b> —(Optional) Display detailed information about a specific RIPng neighbor.
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">clear ripng statistics on page 2441</a></li></ul>
List of Sample Output	<a href="#">show ripng statistics on page 2447</a>
Output Fields	<a href="#">Table 222 on page 2447</a> lists the output fields for the <b>show ripng statistics</b> command. Output fields are listed in the approximate order in which they appear.

Table 222: show ripng statistics Output Fields

Field Name	Field Description
<b>RIPng info</b>	Information about RIPng on the specified interface: <ul style="list-style-type: none"> <li><b>port</b>—UDP port number used for RIPng.</li> <li><b>holddown</b>—Hold-down interval, in seconds.</li> <li><b>rts learned</b>—Number of routes learned through RIPng.</li> <li><b>rts held down</b>—Number of routes held down by RIPng.</li> <li><b>rqsts dropped</b>—Number of received request packets that were dropped.</li> <li><b>resps dropped</b>—Number of received response packets that were dropped.</li> <li><b>restart</b>—Graceful restart status. Displayed when RIPng is or has been in the process of graceful restart.</li> </ul>
<b>logical-interface</b>	Name of the logical interface and its statistics: <ul style="list-style-type: none"> <li><b>routes learned</b>—Number of routes learned on the logical interface.</li> <li><b>routes advertised</b>—Number of routes advertised by the logical interface.</li> <li><b>timeout</b>—Timeout interval, in seconds.</li> <li><b>update interval</b>—Interval between routing table updates, in seconds.</li> </ul>
<b>Counter</b>	List of counter types: <ul style="list-style-type: none"> <li><b>Updates Sent</b>—Number of update messages sent.</li> <li><b>Triggered Updates Sent</b>—Number of triggered update messages sent.</li> <li><b>Responses Sent</b>—Number of response messages sent.</li> <li><b>Bad Messages</b>—Number of invalid messages received.</li> <li><b>Updates Received</b>—Number of RIPng update messages received.</li> <li><b>Bad Route Entries</b>—Number of RIPng invalid route entry messages received.</li> <li><b>Updates Ignored</b>—Number of RIPng update messages ignored.</li> <li><b>RIPng Requests Received</b>—Number of RIPng request messages received.</li> <li><b>RIPng Requests Ignored</b>—Number of RIPng request messages ignored.</li> </ul>
<b>Total</b>	Total number of packets for the selected counter.
<b>Last 5 min</b>	Number of packets for the selected counter in the most recent 5-minute period.
<b>Last minute</b>	Number of packets for the selected counter in the most recent 1-minute period.

## Sample Output

### show ripng statistics

```

user@host> show ripng statistics
RIPng info: port 521; holddown 120s;
           rts learned  rts held down  rqsts dropped  resps dropped
                   0              0              0              0

so-0/1/3.0: 0 routes learned; 1 routes advertised; timeout 180s; update interval
20s
Counter                               Total    Last 5 min  Last minute
-----

```

Updates Sent	934	16	4
Triggered Updates Sent	1	0	0
Responses Sent	0	0	0
Bad Messages	0	0	0
Updates Received	0	0	0
Bad Route Entries	0	0	0
Updates Ignored	0	0	0
RIPng Requests Received	0	0	0
RIPng Requests Ignored	0	0	0

## CHAPTER 28

# Firewall Filter Operational Commands

- `clear firewall`
- `show firewall`
- `show firewall filter version`
- `show firewall log`
- `show firewall prefix-action-stats`
- `show firewall templates-in-use`
- `show policer`

## clear firewall

---

**List of Syntax**   [Syntax on page 2450](#)  
[Syntax \(EX Series Switches\) on page 2450](#)

**Syntax**   `clear firewall (all | counter counter-name | filter filter-name | log (all | logical-system-name) | logical-system logical-system-name)`

**Syntax (EX Series Switches)**   `clear firewall (all | counter counter-name | filter filter-name | log (all | logical-system-name) | policer counter (all | counter-id counter-index))`

**Release Information**   Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.  
**logical-system** option introduced in Junos OS Release 9.3.  
**log** option introduced before Junos OS Release 11.4.

**Description**   Clear statistics about configured firewall filters.

When you clear the counters of a filter, this impacts not only the counters shown by the CLI, but also the ones tracked by SNMP2.

Subscriber management uses firewall filters to capture and report the volume-based service accounting counters that are used for subscriber billing. The **clear firewall** command also clears the service accounting counters that are reported to the RADIUS accounting server. For this reason, you must be cautious in specifying which firewall statistics you want to clear.



**NOTE:** The **clear firewall** command cannot be used to clear the Routing Engine filter counters on a backup Routing Engine that is enabled for graceful Routing Engine switchover (GRES).

---

If you clear statistics for firewall filters that are applied to Trio-based DPCs and that also use the **prefix-action** action on matched packets, wait at least 5 seconds before you enter the **show firewall prefix-action-stats** command. A 5-second pause between issuing the **clear firewall** and **show firewall prefix-action-stats** commands avoids a possible timeout of the **show firewall prefix-action-stats** command.

**Options**   **all**—Clear the packet and byte counts for all filters. On EX Series switches, this option also clears the packet counts for all policer counters.

**counter *counter-name***—Clear the packet and byte counts for a filter counter that has been configured with the counter firewall filter action.

**filter *filter-name***—Clear the packet and byte counts for the specified firewall filter.

**log (all | *logical-system-name*)**—Clear log entries for IPv4 firewall filters that have **then log** as an action. Use **log all** to clear all log entries or **log *logical-system-name*** to clear log entries for the specified logical system.

**logical-system *logical-system-name***—Clear the packet and byte counts for the specified logical system.

**policer counter (all | counter-id *counter-index*)**—(EX8200 switches only) Clear all policer counters using the **policer counter all** command, or clear a specific policer counter using the **policer counter counter-id *counter-index*** command. The value of *counter-index* can be 0, 1, or 2.

**Required Privilege Level**

clear

**Related Documentation**

- [show firewall on page 2452](#)

**List of Sample Output**

[clear firewall all on page 2451](#)  
[clear firewall \(counter counter-name\) on page 2451](#)  
[clear firewall \(filter filter-name\) on page 2451](#)  
[clear firewall \(policer counter all\) \(EX8200 Switch\) on page 2451](#)  
[clear firewall \(policer counter counter-id counter-index\) \(EX8200 Switch\) on page 2451](#)

## Sample Output

clear firewall all

```
user@host> clear firewall all
```

clear firewall (counter counter-name)

```
user@host> clear firewall counter port-filter-counter
```

clear firewall (filter filter-name)

```
user@host> clear firewall filter ingress-port-filter
```

clear firewall (policer counter all) (EX8200 Switch)

```
user@switch> clear firewall policer counter all
```

clear firewall (policer counter counter-id counter-index) (EX8200 Switch)

```
user@switch> clear firewall policer counter counter-id 0
```

## show firewall

---

**List of Syntax**    [Syntax on page 2452](#)  
                          [Syntax \(EX Series Switches\) on page 2452](#)

**Syntax**    show firewall  
              <application (CFM | eswd | RMPS)>>  
              <counter *counter-name*>  
              <detail>  
              <filter *filter-name*>  
              <filter regex *regular-expression*>  
              <logical-system (all | *logical-system-name*)>  
              <terse>

**Syntax (EX Series Switches)**    show firewall  
  <application (CFM | eswd | RMPS)>>  
  <counter *counter-name*>  
  <detail>  
  <filter *filter-name*>  
  <filter regex *regular-expression*>  
  <log <(detail | interface *interface-name*)>>  
  <policer counters <(detail | counter-id *counter-index* <detail>)>>  
  <terse>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.0 for EX Series switches.  
                              Option **logical-system** introduced in Junos OS Release 9.3.  
                              Option **terse** introduced in Junos OS Release 9.4.  
                              Option **policer counters** introduced in Junos OS Release 12.2 for EX Series switches.  
                              Option **detail** introduced in Junos OS Release 12.3 for EX Series switches.  
                              Option **detail** introduced in Junos OS Release 14.1 for MX Series routers.  
                              Option **regex *regular-expression*** introduced in Junos OS Release 14.2.

**Description**    Display enhanced statistics and counters for all configured firewall filters.

**Options**    **none**—(Optional) Display statistics and counters for all configured firewall filters and counters. For EX Series switches, this command also displays statistics about all configured policers.

**application (CFM | eswd | RMPS)**—(Optional) Show firewall elements owned by the selected software component:

- Connectivity Fault Management (CFM)
- Ethernet switching daemon (eswd)—Shows only on devices that support it.
- Resource Management and Packet Steering (RMPS)

**counter *counter-name***—(Optional) Name of a filter counter.

**detail**—(EX Series switches and MX Series routers only) (Optional) Display firewall filter statistics and enhanced policer statistics and counters.

**filter *filter-name***—(Optional) Name of a configured filter.

**filter regex *regular-expression***—(Optional) Regular expression that matches the names of a subset of filters.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**log**—(Optional) Display log entries for firewall filters.

**log <(detail | interface *interface-name*)>**—(EX Series switches only) (Optional) Display detailed log entries of firewall activity or log information about a specific interface.

**policer counters <(detail | counter-id *counter-index* <detail>)>**—(EX8200 switches only) (Optional) Display enhanced policer counter statistics in brief or in detail.

**terse**—(Optional) Display firewall filter names only.

**Required Privilege Level**

view

**Related Documentation**

- [clear firewall on page 2450](#)
- [show firewall log on page 2461](#)
- *Verifying That Firewall Filters Are Operational*
- *Verifying That Policers Are Operational*
- [show policer on page 2468](#)
- *Enhanced Policer Statistics Overview*
- *enhanced-policer*

**List of Sample Output**

[show firewall filter \(MX Series Router and EX Series Switch\) on page 2456](#)  
[show firewall filter \(non MX Series Router and EX Series Switch\) on page 2456](#)  
[show firewall filter \(Dynamic Input Filter\) on page 2456](#)  
[show firewall \(Logical Systems\) on page 2456](#)  
[show firewall \(counter counter-name\) on page 2457](#)  
[show firewall log on page 2457](#)  
[show firewall policer counters \(EX8200 Switch\) on page 2457](#)  
[show firewall policer counters \(detail\) \(EX8200 Switch\) on page 2457](#)  
[show firewall policer counters \(counter-id counter-index\) \(EX8200 Switch\) on page 2458](#)  
[show firewall policer counters \(counter-id counter-index detail\) \(EX8200 Switch\) on page 2458](#)  
[show firewall detail on page 2458](#)

**Output Fields**

[Table 223 on page 2454](#) lists the output fields for the **show firewall** command. Output fields are listed in the approximate order in which they appear.

Table 223: show firewall Output Fields

Field Name	Field Description
<b>Filter</b>	<p>Name of a filter that has been configured with the <b>filter</b> statement at the <b>[edit firewall]</b> hierarchy level.</p> <p>Except on EX Series switches:</p> <ul style="list-style-type: none"> <li>When an interface-specific filter is displayed, the name of the filter is followed by the full interface name and by either <b>-i</b> for an input filter or <b>-o</b> for an output filter.</li> <li>When dynamic filters are displayed, the name of the filter is followed by the full interface name and by either <b>-in</b> for an input filter or <b>-out</b> for an output filter. When a logical system-specific filter is displayed, the name of the filter is prefixed with two underscore (__) characters and the name of the logical system (for example, __ls1/filter1).</li> <li>When a service filter is displayed that uses a service set, the separator between the service-set name and the service-filter name is a semicolon (:).</li> </ul> <p><b>NOTE:</b> For <b>bridge family filter</b>, the <b>ip-protocol</b> match criteria is supported only for IPv4 and not for IPv6. This is applicable for line cards that support the Junos Trio chipset, such as the MX 3D MPC line cards.</p>
<b>Counters</b>	<p>Display filter counter information:</p> <ul style="list-style-type: none"> <li><b>Name</b>—Name of a filter counter that has been configured with the <b>counter</b> firewall filter action.</li> <li><b>Bytes</b>—Number of bytes that match the filter term under which the <b>counter</b> action is specified.</li> <li><b>Packets</b>—Number of packets that matched the filter term under which the <b>counter</b> action is specified.</li> </ul> <p><b>NOTE:</b> On M and T Series routers, firewall filters cannot count <b>ip-options</b> packets on a per option type and per interface basis. A limited work around is to use the <b>show pfe statistics ip options</b> command to see <b>ip-options</b> statistics on a per Packet Forwarding Engine (PFE) basis. See <i>show pfe statistics ip</i> for sample output.</p>
<b>Policers</b>	<p>Display policer information:</p> <ul style="list-style-type: none"> <li><b>Name</b>—Name of policer.</li> <li><b>Bytes</b>—(For two-color policers on MX Series routers and EX Series switches, and for hierarchical policers on interfaces hosted on MICs and MPCs in MX Series routers) Number of bytes that match the filter term under which the policer action is specified. This is only the number out-of-specification (out-of-spec) byte counts, not all the bytes in all packets policed by the policer. For other combinations of policer type, device, and line card type, this field is blank.</li> <li><b>Packets</b>—Number of packets that matched the filter term under which the policer action is specified. This is only the number of out-of-specification (out-of-spec) packet counts, not all packets policed by the policer.</li> </ul>
<b>Policer Counter Index</b>	(EX8200 switch only) Global management counter ID. The counter ID value ( <i>counter-index</i> ) can be 0, 1, or 2.
<b>Green</b>	(EX8200 switch only) Number of packets within the limits. The number of packets is smaller than the committed information rate (CIR).
<b>Yellow</b>	(EX8200 switch only) Number of packets partially within the limits. The number of packets is greater than the CIR, but the burst size is within the excess burst size (EBS) limit.

Table 223: *show firewall Output Fields (continued)*

Field Name	Field Description
<b>Discard</b>	(EX8200 switch only) Number of discarded packets.
<b>Bytes</b>	(EX8200 switch only) Number of green, yellow, red, or discarded packets in bytes.
<b>Packets</b>	(EX8200 switch only) Number of green, yellow, red, or discarded packets.
<b>Filter name</b>	(EX8200 switch only) Name of the filter with a term associated to a policer.
<b>Term name</b>	(EX8200 switch only) Name of the term associated with a policer.
<b>Policer name</b>	(EX8200 switch only) Name of the policer that is associated with a global management counter.
P1-t1	<ul style="list-style-type: none"> <li>• OOS packet statistics for packets that are marked out-of-specification (out-of-spec) by the policer. Changes to all packets that have out-of-spec actions, such as discard, color marking, or forwarding-class, are included in this counter.</li> <li>• Offered packet statistics for traffic subjected to policing.</li> <li>• Transmitted packet statistics for traffic that is not discarded by the policer. When the policer action is discard, the statistics are the same as the in-spec statistics; when the policer action is non-discard (loss-priority or forwarding-class), the statistics are included in this counter.</li> </ul>

## Sample Output

### show firewall filter (MX Series Router and EX Series Switch)

```
user@host> show firewall filter test
Filter: test
Counters:
Name          Bytes      Packets
Counter-1     0          0
Counter-2     0          0
Policers:
Name          Bytes      Packets
Policer-1    2770      70
```

### show firewall filter (non MX Series Router and EX Series Switch)

```
user@host> show firewall filter test
Filter: test
Counters:
Name          Bytes      Packets
Counter-1     0          0
Counter-2     0          0
Policers:
Name          Bytes      Packets
Policer-1    70
```

### show firewall filter (Dynamic Input Filter)

```
user@host> show firewall filter dfwd-ge-5/0/0.1-in
Filter: dfwd-ge-5/0/0.1-in
Counters:
Name          Bytes      Packets
c1-ge-5/0/0.1-in 0          0
```

### show firewall (Logical Systems)

```
user@host> show firewall

Filter: __lr1/test
Counters:
Name          Bytes      Packets
icmp          420        5
Filter: __default_bpdu_filter__
Filter: __lr1/inet_filter1
Counters:
Name          Bytes      Packets
inet_tcp_count 0          0
inet_udp_count 0          0
Filter: __lr1/inet_filter2
Counters:
Name          Bytes      Packets
inet_icmp_count 0          0
inet_pim_count 0          0
Filter: __lr2/inet_filter1
Counters:
Name          Bytes      Packets
inet_tcp_count 0          0
```

inet_udp_count	0	0
----------------	---	---

### show firewall (counter counter-name)

```
user@host> show firewall counter icmp-counter
Filter: ingress-port-voip-class-filter
Counters:
Name                               Bytes      Packets
icmp-counter                        0          0
```

### show firewall log

```
user@host> show firewall log
Log :
```

Time	Filter	Action	Interface	Protocol	Src Addr
08:00:53	pfe 192.168.3.4	R	ge-1/0/1.0	ICMP	192.168.3.5
08:00:52	pfe 192.168.3.4	R	ge-1/0/1.0	ICMP	192.168.3.5
08:00:51	pfe 192.168.3.4	R	ge-1/0/1.0	ICMP	192.168.3.5
08:00:50	pfe 192.168.3.4	R	ge-1/0/1.0	ICMP	192.168.3.5
08:00:49	pfe 192.168.3.4	R	ge-1/0/1.0	ICMP	192.168.3.5
08:00:48	pfe 192.168.3.4	R	ge-1/0/1.0	ICMP	192.168.3.5
08:00:47	pfe 192.168.3.4	R	ge-1/0/1.0	ICMP	192.168.3.5

### show firewall policer counters (EX8200 Switch)

```
user@switch> show firewall policer counters
Policer Counter Index 0:
```

	Bytes	Packets
Green:	73	15914
Yellow:	9	1962
Discard:	119	25942

```
Policer Counter Index 1:
```

	Bytes	Packets
Green:	0	0
Yellow:	0	0
Discard:	0	0

```
Policer Counter Index 2:
```

	Bytes	Packets
Green:	0	0
Yellow:	0	0
Discard:	0	0

### show firewall policer counters (detail) (EX8200 Switch)

```
user@switch> show firewall policer counters detail
Policer Counter Index 0:
```

	Bytes	Packets
--	-------	---------

```

Green:                73                15914
Yellow:               9                 1962
Discard:              119              25942

Filter name           Term name          Policer name
myfilter              polcr-term-1      myfilter-polcr-1
inet-filter-ae        ae-snmp          policer-1
inet-filter-ae        ae-ssh           policer-2

Policer Counter Index 1:
Bytes                Packets
Green:               0                 0
Yellow:              0                 0
Discard:             0                 0

Filter name           Term name          Policer name

Policer Counter Index 2:
Bytes                Packets
Green:               0                 0
Yellow:              0                 0
Discard:             0                 0

Filter name           Term name          Policer name

```

#### show firewall policer counters (counter-id counter-index) (EX8200 Switch)

```

user@switch> show firewall policer counters counter-id 0
Policer Counter Index 0:
Bytes                Packets
Green:               73                15914
Yellow:              9                 1962
Discard:             119              25942

```

#### show firewall policer counters (counter-id counter-index detail) (EX8200 Switch)

```

user@switch> show firewall policer counters counter-id 0 detail
Policer Counter Index 0:
Bytes                Packets
Green:               73                15914
Yellow:              9                 1962
Discard:             119              25942

Filter name           Term name          Policer name
myfilter              polcr-term-1      myfilter-polcr-1
inet-filter-ae        ae-snmp          policer-1
inet-filter-ae        ae-ssh           policer-2

```

#### show firewall detail

```

user@host> show firewall detail
Filter: __default_bpdu_filter__

Filter: foo
Counters:
Name                Bytes                Packets
c1                  17652140             160474
Policers:
Name                Bytes                Packets
P1-t1

```

00S	0	18286
Offered	0	18446744073709376546
Transmitted	0	18446744073709358260

## show firewall filter version

<b>Syntax</b>	show firewall filter version <filter-name>
<b>Release Information</b>	Command introduced in Junos OS Release 10.2R2.
<b>Description</b>	Display the version number of the installed firewall filter in the Routing Engine.
<b>Options</b>	none—(Optional) Display the version number of all installed firewall filters.  filter-name—(Optional) Name of a configured filter. If you specify the name of a filter, only the version number of that filter is displayed.
<b>Additional Information</b>	The initial version number is 1. This number increments by one when you modify the firewall filter settings or an associated prefix action. The maximum version number is 4,294,967,295. When the version number reaches 4,294,967,295, this number is reset to 1.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show firewall filter version on page 2460</a>
<b>Output Fields</b>	<a href="#">Table 224 on page 2460</a> lists the output fields for the <b>show firewall filter version</b> command. Output fields are listed in the approximate order in which they appear.

Table 224: show firewall filter version Output Fields

Field Name	Field Description
Filter	Name of a filter that has been configured with the <b>filter</b> statement at the <b>[edit firewall]</b> hierarchy level.
Version	Display the version number of the firewall filter.

## Sample Output

### show firewall filter version

```
user@host> show firewall filter version
Filter version information :
Filter                                     Version
test                                     10
```

## show firewall log

**List of Syntax** [Syntax on page 2461](#)  
[Syntax \(EX Series Switches\) on page 2461](#)

**Syntax** show firewall log  
 <detail>  
 <extensive>  
 <interface *interface-name*>  
 <logical-system (*logical-system-name* | all)>

**Syntax (EX Series Switches)** show firewall log  
 <detail>  
 <interface *interface-name*>

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
**extensive** option introduced in Junos OS Release 16.1.  
**logical-system** option introduced in Junos OS Release 9.3.

**Description** Display log information about firewall filters.

**Options** **none**—Display log information about firewall filters.  
**detail**—(Optional) Display detailed information.  
**extensive**—(Optional) Display hex dump of packet captured by log action.  
**interface *interface-name***—(Optional) Display log information about a specific interface.  
**logical-system (*logical-system-name* | all)**—(Optional) Perform this operation on all logical systems or on a particular system.

**Required Privilege Level** view

**List of Sample Output** [show firewall log on page 2462](#)  
[show firewall log detail on page 2462](#)  
[show firewall log extensive on page 2463](#)

**Output Fields** [Table 225 on page 2461](#) lists the output fields for the **show firewall log** command. Output fields are listed in the approximate order in which they appear.

*Table 225: show firewall log Output Fields*

Field Name	Field Description
Time of Log	Time that the event occurred.

Table 225: show firewall log Output Fields (continued)

Field Name	Field Description
<b>Filter</b>	<ul style="list-style-type: none"> <li>Displays the name of a configured firewall filter or service filter only if the packet hit the filter's <b>log</b> action in a kernel filter (in the control plane). For any traffic that reaches the Routing Engine, the packets hit the <b>log</b> action in the kernel.</li> <li>For all other logged packets (packet hit the filter's <b>log</b> action in the Packet Forwarding Engine), this field displays <b>pfe</b> instead of a configured filter name.</li> </ul>
<b>Filter Action</b>	Filter action: <ul style="list-style-type: none"> <li><b>A</b>—Accept</li> <li><b>D</b>—Discard</li> <li><b>R</b>—Reject</li> </ul>
<b>Name of Interface</b>	<ul style="list-style-type: none"> <li>Displays a physical interface name if the packet arrived at a port on a line card.</li> <li>Displays <b>local</b> if the packet was generated by the device's internal Ethernet interface, <b>em1</b> or <b>fxp1</b>, which connects the Routing Engine with the router's packet-forwarding components.</li> </ul>
<b>Name of protocol</b>	Packet's protocol name: <b>egp</b> , <b>gre</b> , <b>icmp</b> , <b>ipip</b> , <b>ospf</b> , <b>pim</b> , <b>rsvp</b> , <b>tcp</b> , or <b>udp</b> .
<b>Packet length</b>	Length of the packet.
<b>Source address</b>	Packet's source address.
<b>Destination address</b>	Packet's destination address and port.

## Sample Output

### show firewall log

```

user@host>show firewall log
Time      Filter  Action Interface  Protocol  Src Addr  Dest Addr
13:10:12  pfe      D      rlsq0.902    ICMP      192.0.2.2 192.0.2.1
13:10:11  pfe      D      rlsq0.902    ICMP      192.0.2.2 192.0.2.1

```

### show firewall log detail

```

user@host> show firewall log detail
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0Name of protocol: TCP, Packet Length: 50824, Source address:
203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 1020, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513

```

```

Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 49245, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 49245, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 49245, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
Time of Log: 2004-10-13 10:37:17 PDT, Filter: f, Filter action: accept, Name of
interface: fxp0.0
Name of protocol: TCP, Packet Length: 49245, Source address: 203.0.113.108:829,
Destination address: 192.168.70.66:513
....

```

### show firewall log extensive

```

user@host> show firewall log extensive
Time of Log: 2016-01-17 22:16:21 PST, Filter: pfe, Filter action: accept, Name
of interface: xe-0/0/1.0
Name of protocol: UDP, Packet Length: 98, Source address: 203.0.113.1, Destination
address: 203.0.113.1
: 00-0F: 00 01 03 ee ee ff 00 01 - 09 22 55 ee 81 00 02 58
: 10-1F: 08 00 45 00 00 62 00 00 - 00 00 40 11 77 8a 01 00
: 20-2F: 00 01 02 00 00 01 1c 00 - 1c 00 00 4e 19 83 00 01
: 30-3F: 02 03 04 05 06 07 08 09 - 0a 0b 0c 0d 0e 0f 10 11
: 40-4F: 12 13 14 15 16 17 18 19 - 1a 1b 1c 1d 1e 1f 20 21
: 50-5F: 22 23 24 25 26 27 28 29 - 2a 2b 00 00 00 00 00 00
: 60-6F: 00 00 00 00 00 00 00 00 - 00 00 00 00 00 00 00 00
: 70-7F: 00 00 00 00 00 00 00 00 - 00 00 00 00 00 00 00 00

```

## show firewall prefix-action-stats

---

List of Syntax	<a href="#">Syntax (filter-specific mode) on page 2464</a> <a href="#">Syntax (term-specific mode) on page 2464</a>
Syntax (filter-specific mode)	show firewall prefix-action-stats filter <i>filter-name</i> prefix-action <i>prefix-action-name</i> <from <i>number</i> to <i>number</i> > <logical-system ( <i>logical-system-name</i>   all)>
Syntax (term-specific mode)	show firewall prefix-action-stats filter <i>filter-name</i> prefix-action <i>prefix-action-name-term-name</i> <from <i>number</i> to <i>number</i> > <logical-system ( <i>logical-system-name</i>   all)>
Release Information	Command introduced before Junos OS Release 7.4. <b>logical-system</b> option introduced in Junos OS Release 9.3.
Description	<p>Display prefix action statistics about configured firewall filters.</p> <p>If you clear statistics for firewall filters that are applied to MPCs and that also use the <b>prefix-action</b> action on matched packets, wait at least 5 seconds before you enter the <b>show firewall prefix-action-stats</b> command. A 5-second pause between issuing the <b>clear firewall</b> and <b>show firewall prefix-action-stats</b> commands avoids a possible timeout of the <b>show firewall prefix-action-stats</b> command.</p> <p>By default, policers operate in <i>term-specific</i> mode.</p> <p>See <i>Filter-Specific Policer Overview</i> for information about how to configure policers in <i>filter-specific</i> mode.</p>
Options	<p><b>filter <i>filter-name</i></b>—Name of a filter.</p> <p><b>prefix-action <i>prefix-action-name</i></b>—Name of a prefix action.</p> <p><b>from <i>number</i> to <i>number</i></b>—(Optional) Starting and ending counter or policer.</p> <p><b>logical-system (<i>logical-system-name</i>   all)</b>—(Optional) Perform this operation on all logical systems or on a particular system.</p>
Required Privilege Level	view
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">clear firewall on page 2450</a></li></ul>
List of Sample Output	<a href="#">show firewall prefix-action-stats on page 2465</a>
Output Fields	<a href="#">Table 226 on page 2465</a> lists the output fields for the <b>show firewall prefix-action-stats</b> command. Output fields are listed in the approximate order in which they appear.

Table 226: *show firewall prefix-action-stats* Output Fields

Field Name	Field Description
<b>Filter</b>	Filter name.  Filters configured for logical systems include the name of the filter prefixed with the two underscore characters (__) and the name of the logical system (for example, __ls1/filter1).

## Sample Output

The following sample output assumes that the policer *act1* is in term mode and that there is a term named *term1* configured in the firewall filter *test*.

### show firewall prefix-action-stats

```

user@host> show firewall prefix-action-stats filter test prefix-action act1-term1 from 0 to 9
Filter: test
Counters:
Name                Bytes                Packets
act1-0              0                    0
act1-1              0                    0
act1-2              0                    0
act1-3              0                    0
act1-4              0                    0
act1-5              0                    0
act1-6              0                    0
act1-7              0                    0
act1-8              0                    0
act1-9              0                    0
Policers:
Name                Bytes                Packets
act1-0              0                    0
act1-1              0                    0
act1-2              0                    0
act1-3              0                    0
act1-4              0                    0
act1-5              0                    0
act1-6              0                    0
act1-7              0                    0
act1-8              0                    0
act1-9              0                    0

```

## show firewall templates-in-use

---

<b>Syntax</b>	show firewall templates-in-use
<b>Release Information</b>	Command introduced in Junos OS Release 12.3.
<b>Description</b>	Display the names of configured filter templates that are currently in use by dynamic subscribers and the number of times each template is referenced.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">clear firewall on page 2450</a></li><li>• <a href="#">show firewall log on page 2461</a></li></ul>
<b>List of Sample Output</b>	<a href="#">show firewall templates-in-use on page 2467</a>
<b>Output Fields</b>	<a href="#">Table 227 on page 2466</a> lists the output fields for the <b>show firewall templates-in-use</b> command. Output fields are listed in the approximate order in which they appear.

*Table 227: show firewall templates-in-use Output Fields*

Field Name	Field Description
<b>Filter Template</b>	Name of a filter that has been configured using the <b>filter</b> statement at either the <b>[edit firewall]</b> or <b>[edit dynamic-profiles <i>profile-name</i> firewall]</b> hierarchy and is being used as a template for dynamic subscriber filtering.
<b>Reference Count</b>	Number of times the filter has been referenced by subscribers accessing the network.

## Sample Output

### show firewall templates-in-use

```
user@host> show firewall templates-in-use
```

Filter Template	Dynamic	Subscribers	Reference Counts
-----			-----
egressFilter			10
ingressFilter			10
dfilter			5
dfilter-pol			5

## show policer

<b>Syntax</b>	show policer <detail> <policer-name>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Option <b>detail</b> introduced in Junos OS Release 12.3.
<b>Description</b>	Display the number of policed packets for a given policer or an aggregate policer. An aggregate policer is an aggregate of different policers on the same logical interface.
<b>Options</b>	<b>none</b> —Display the number of policed packets for all configured policers.  <b>detail</b> —(Optional) Display enhanced statistics and counters for policers.  <b>policer-name</b> —(Optional) Display the number of policed packets for the specified policer.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show policer (MX Series) on page 2469</a> <a href="#">show policer (non MX Series Router) on page 2469</a> <a href="#">show policer (Aggregate Policer, non MX Series Router) on page 2469</a> <a href="#">show policer detail on page 2470</a>
<b>Output Fields</b>	<a href="#">Table 228 on page 2468</a> lists the output fields for the <b>show policer</b> command. Output fields are listed in the approximate order in which they appear.

*Table 228: show policer Output Fields*

Field Name	Field Description
<b>Name</b>	Name of the policer.
<b>Bytes</b>	<ul style="list-style-type: none"> <li>(For two-color policers on MX Series routers, and for hierarchical policers on MS-DPC, MIC, and MPC interfaces on MX Series routers)—Total number of bytes policed by the specified policer. For other combinations of policer type, device, and line card type, this field is blank.</li> <li>(T Series and M10i)—Not applicable. The Bytes information is not displayed.</li> </ul>
<b>Packets</b>	Total number of packets policed by the specified policer.

Table 228: show policer Output Fields (continued)

Field Name	Field Description
Policer detail	<ul style="list-style-type: none"> <li>OOS packet statistics for packets that are marked out-of-specification by the policer. Changes to all packets that have out-of-specification actions, such as discard, color marking, or forwarding-class, are included in this counter.</li> <li>Offered packet statistics for traffic subjected to policing.</li> <li>Transmitted packet statistics for traffic that is not discarded by the policer. When the policer action is discard, the statistics are the same as the within-specification statistics; when the policer action is non-discard (loss-priority or forwarding-class), the statistics are included in this counter.</li> </ul>

## Sample Output

### show policer (MX Series)

```

user@host> show policer
Policers:
Name                                     Bytes      Packets
__default_arp_policer__                 314520      5242
pol-2M-ge-1/2/0.1-inet-i                 10372300    103723
pol-2M-ge-1/2/0.1-inet6-i                7727800     77278
pol-2M-ge-1/2/0.1-mp1s-i                 7070336     67984
pol-2M-ge-1/2/0.1001-vp1s-i              65153700    651537
pol-2M-ge-1/2/0.2001-vp1s-i              65180900    651809
pol-2M-ge-1/2/0.3001-ccc-i               62202144    647939

```

### show policer (non MX Series Router)

```

user@host> show policer
Policers:
Name                                     Bytes      Packets
__default_arp_policer__                 NA          5242
pol-2M-ge-1/2/0.1-inet-i                 NA          103723
pol-2M-ge-1/2/0.1-inet6-i                NA          77278
pol-2M-ge-1/2/0.1-mp1s-i                 NA          67984
pol-2M-ge-1/2/0.1001-vp1s-i              NA          651537
pol-2M-ge-1/2/0.2001-vp1s-i              NA          651809
pol-2M-ge-1/2/0.3001-ccc-i               NA          647939

```

### show policer (Aggregate Policar, non MX Series Router)

```

user@host> show policer
Policers:
Name                                     Bytes      Packets
__default_arp_policer__                 NA          0
P1-ae0.0-log_int-o                       NA          0
P2-ge-7/0/2.0-inet-o                     NA          0
P2-ge-7/0/2.0-inet6-o                    NA          0
__policer_tmpl__-term                    NA          0
__policer_tmpl__-fc0                      NA          0
__policer_tmpl__-fc0                      NA          0
__policer_tmpl__-fc1                      NA          0
__policer_tmpl__-fc1                      NA          0

```

__policer_tmpl__-fc1	NA	0
__policer_tmpl__-fc2	NA	0
__policer_tmpl__-fc0	NA	0
__policer_tmpl__-fc1	NA	0
__policer_tmpl__-fc2	NA	0
__policer_tmpl__-fc3	NA	0

#### show policer detail

```
user@host> show policer detail
```

Policers:

Name	Bytes	Packets
__default_arp_policer__		
OOS	0	0
Offered	0	496
Transmitted	0	496
P1-xe-1/0/0.0-inet-i		
OOS	0	11329
Offered	0	111188
Transmitted	0	99859

## CHAPTER 29

# Layer 2 Bridging and Switching Operational Commands

- clear bridge mac-table
- clear error bpdu interface
- clear error mac-rewrite
- show bridge domain
- show bridge flood
- show bridge mac-table
- show bridge statistics
- show l2-learning global-information
- show l2-learning global-mac-count
- show l2-learning instance
- show l2-learning interface
- show mac-rewrite interface

## clear bridge mac-table

---

<b>Syntax</b>	<code>clear bridge mac-table</code> <code>&lt;bridge-domain (all   <i>bridge-domain-name</i>)&gt;</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;learning-vlan id (all-vlan   <i>learning-vlan-id</i>)&gt;</code> <code>&lt;mac-address&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4.
<b>Description</b>	(MX Series routers only) Clear learned Layer 2 address information from the media access control (MAC) address table.
<b>Options</b>	<p><b>none</b>—Clear all learned Layer 2 address information from the MAC address table.</p> <p><b>bridge-domain (all   <i>bridge-domain-name</i>)</b>—(Optional) Clear learned Layer 2 MAC addresses for all bridging domains or for the specified bridging domain.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear learned Layer 2 MAC addresses for the specified routing instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear learned Layer 2 MAC addresses for the specified interface.</p> <p><b>learning-vlan-id (all-vlan   <i>learning-vlan-id</i>)</b>—(Optional) Clears learned Layer 2 MAC addresses for all VLANs or for the specified VLAN.</p> <p><b>mac-address</b>—(Optional) Clear the specified learned Layer 2 address from the MAC address table.</p>
<b>Required Privilege Level</b>	clear
<b>List of Sample Output</b>	<a href="#">clear bridge mac-table on page 2472</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear bridge mac-table

```
user@host> clear bridge mac-table
```

## clear error bpdu interface

---

<b>List of Syntax</b>	<a href="#">MX Series on page 2473</a> <a href="#">QFX Series, EX Series, NFX Series on page 2473</a>
<b>MX Series</b>	<code>clear error bpdu interface <i>interface-name</i></code>
<b>QFX Series, EX Series, NFX Series</b>	<code>clear error bpdu interface (all   <i>interface-name</i>)</code>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 9.4.</p> <p>Command introduced in Junos OS Release 13.2X50-D10 for EX Series switches.</p> <p>Command supports <b>all</b> option in Junos OS Release 15.1 for EX Series switches.</p>
<b>Description</b>	Clear a bridge protocol data unit (BPDU) error condition caused by the detection of a possible bridging loop from Spanning Tree Protocol (STP) operation.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Configuring BPDU Protection on ACX Router, EX Switch and MX Router Edge Ports</i></li> <li>• <i>Unblocking a Switch Interface That Receives BPDUs in Error (CLI Procedure)</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">clear error bpdu interface on page 2473</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear error bpdu interface

```
user@host> clear error bpdu interface ge-1/1/1
```

## clear error mac-rewrite

---

<b>Syntax</b>	<b>clear error mac-rewrite</b> <b>&lt;interface <i>interface-name</i>&gt;</b>
<b>Release Information</b>	Command introduced in Junos OS Release 9.1.
<b>Description</b>	<p>Clear a MAC rewrite error condition caused by the reception of tunneled protocol packets on an interface with Layer 2 protocol tunneling enabled.</p> <p>On interfaces with L2PT configured, customer-facing ports should not receive packets with the L2PT MAC address as the destination address unless there is a network topology or configuration error. Any such interface receiving an L2PT packet becomes “Disabled”, and must subsequently be re-enabled by clearing the error with this command.</p>
<b>Options</b>	<b>interface <i>interface-name</i></b> —(Optional) Clear the MAC rewrite error condition for the specified interface.
<b>Required Privilege Level</b>	clear
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Layer 2 Protocol Tunneling Through a Network</i></li><li>• <i>Configuring Layer 2 Protocol Tunneling on EX Series Switches with ELS Support (CLI Procedure)</i></li><li>• <i>Clearing a MAC Rewrite Error on an Interface with Layer 2 Protocol Tunneling</i></li><li>• <a href="#">show mac-rewrite interface on page 2500</a></li></ul>
<b>List of Sample Output</b>	<a href="#">clear error mac-rewrite interface on page 2474</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear error mac-rewrite interface

```
user@host> clear error mac-rewrite interface ge-1/0/1
```

## show bridge domain

**Syntax** show bridge domain  
 <brief | detail | extensive>  
 <bridge-domain (all | *domain-name*)>  
 <instance *instance-name*>  
 <operational>

**Release Information** Command introduced in Junos OS Release 8.4.

**Description** (MX Series routers only) Display bridge domain information.

**Options** **none**—Display information for all bridge domains.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**bridge-domain (all | *domain-name*)**— (Optional) Display information about all bridge domains or the specified bridge domain.

**instance *instance-name***—(Optional) Display information for the specified routing instance.

**operational**—(Optional) Display information for the operational routing instances.

**Required Privilege Level** view

**List of Sample Output** [show bridge domain on page 2475](#)  
[show bridge domain brief on page 2475](#)  
[show bridge domain detail on page 2476](#)

## Sample Output

### show bridge domain

```
user@host> show bridge domain
Instance      Primary Table  Bridging Domain  Type      Active
vs1           bridge.0      vlan100          bridge    2
vs1           bridge.0      vlan200          bridge    0
```

### show bridge domain brief

```
user@host> show bridge domain brief
Instance      Primary Table  Bridging Domain  Type      Active
vs1           bridge.0      vlan100          bridge    2
vs1           bridge.0      vlan200          bridge    0
```

### show bridge domain detail

```
user@host> show bridge domain detail
Routing Instance:vs1
  Bridging Domain:vlan100
  Router ID: 0.0.0.0
  Type: bridge                      State: Active
  Interfaces:
    ge-11/0/3.0
    ge-11/1/4.100
    ge-11/1/1.100
    ge-11/1/0.100
    xe-10/2/0.100
    xe-10/0/0.100
  Tables:
    bridge.0                        : 2 macs (2 active)
Routing Instance:vs1
  Bridging Domain:vlan200
  Router ID: 0.0.0.0
  Type: bridge                      State: Active
  Interfaces:
    ge-11/1/0.200
    ge-11/1/1.200
    ge-11/1/4.200
    xe-10/0/0.200
    xe-10/2/0.200
  Tables:
    bridge.0                        : 0 macs (0 active)
```

## show bridge flood

<b>Syntax</b>	<pre>show bridge flood &lt;brief   detail   extensive&gt; &lt;bridge-domain <i>domain-name</i>&gt; &lt;event-queue&gt; &lt;instance <i>instance-name</i>&gt; &lt;route (all-ce-flood   all ve-flood   alt-root-flood   bd-flood   mlp-flood   re-flood)&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4.
<b>Description</b>	(MX Series routers only) Display bridging flooding information.
<b>Options</b>	<p><b>none</b>—Display all bridging flooding information for all bridging domains.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>bridge-domain <i>domain-name</i></b>—(Optional) Display bridging flooding information for the specified bridge domain.</p> <p><b>event-queue</b>—(Optional) Display the queue of pending bridge flood events.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display bridging flooding information for the specified routing instance.</p> <p><b>route (all-ce-flood   all ve-flood   alt-root-flood   bd-flood   mlp-flood   re-flood)</b>—(Optional) Display the following:</p> <ul style="list-style-type: none"> <li><b>all-ce-flood</b>—Display the route for flooding traffic to all customer edge routers if <b>no-local-switching</b> is enabled.</li> <li><b>all-ve-flood</b>—Display the route for flooding traffic to all VPLS edge routers if <b>no-local-switching</b> is enabled.</li> <li><b>alt-root-flood</b>—Display the Spanning Tree Protocol (STP) alt-root flooding route used for the interface.</li> <li><b>bd-flood</b>—Display the route for flooding traffic of a bridge domain if <b>no-local-switching</b> is not enabled.</li> <li><b>mlp-flood</b>—Display the route for flooding traffic to MAC learning chips.</li> <li><b>re-flood</b>—Display the route for Routing Engine flooding to all interfaces.</li> </ul>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show bridge flood on page 2478</a> <a href="#">show bridge flood brief on page 2478</a> <a href="#">show bridge flood detail on page 2478</a> <a href="#">show bridge flood extensive on page 2479</a>

**Output Fields** to be provided

## Sample Output

### show bridge flood

```
user@host> show bridge flood
Name: __juniper_private1__
CEs: 0
VEs: 0
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  0x36/16  MLP_FLOOD  __vs1+vlan100__  flood      426
  0x3a/16  MLP_FLOOD  __vs1+vlan200__  flood      428
Name: vs1::vlan100
CEs: 6
VEs: 0
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  0x35/16  ALL_FLOOD  __vs1+vlan100__  flood      425
  0x35/16  RE_FLOOD  __vs1+vlan100__  flood      425
  0x3780/17 ALT_ROOT_RT ge-11/0/3.0      flood      425
  0x3b80/17 ALT_ROOT_RT ge-11/1/4.100    flood      425
  0x3c80/17 ALT_ROOT_RT ge-11/1/1.100    flood      425
  0x3d80/17 ALT_ROOT_RT ge-11/1/0.100    flood      425
  0x3e80/17 ALT_ROOT_RT xe-10/2/0.100    flood      425
  0x3f80/17 ALT_ROOT_RT xe-10/0/0.100    flood      425
Name: vs1::vlan200
CEs: 5
VEs: 0
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  0x39/16  ALL_FLOOD  __vs1+vlan200__  flood      427
  0x39/16  RE_FLOOD  __vs1+vlan200__  flood      427
  0x4180/17 ALT_ROOT_RT ge-11/1/0.200    flood      427
  0x4080/17 ALT_ROOT_RT ge-11/1/1.200    flood      427
  0x4280/17 ALT_ROOT_RT ge-11/1/4.200    flood      427
  0x4480/17 ALT_ROOT_RT xe-10/0/0.200    flood      427
  0x4380/17 ALT_ROOT_RT xe-10/2/0.200    flood      427
```

### show bridge flood brief

```
user@host> show bridge flood brief
Name      Active CEs      Active VEs
__juniper_private1__  0                0
vs1::vlan100          6                0
vs1::vlan200          5                0
```

### show bridge flood detail

```
user@host> show bridge flood detail
Name: __juniper_private1__
CEs: 0
VEs: 0
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  0x36/16  MLP_FLOOD  __vs1+vlan100__  flood      426
  0x3a/16  MLP_FLOOD  __vs1+vlan200__  flood      428
Name: vs1::vlan100
```

```

CEs: 6
VEs: 0
Flood Routes:
  Prefix    Type      Owner                NhType    NhIndex
  0x35/16   ALL_FLOOD  __vs1+vlan100__    flood     425
  0x35/16   RE_FLOOD   __vs1+vlan100__    flood     425
  0x3780/17 ALT_ROOT_RT ge-11/0/3.0        flood     425
  0x3b80/17 ALT_ROOT_RT ge-11/1/4.100      flood     425
  0x3c80/17 ALT_ROOT_RT ge-11/1/1.100      flood     425
  0x3d80/17 ALT_ROOT_RT ge-11/1/0.100      flood     425
  0x3e80/17 ALT_ROOT_RT xe-10/2/0.100      flood     425
  0x3f80/17 ALT_ROOT_RT xe-10/0/0.100      flood     425
Name: vs1::vlan200
CEs: 5
VEs: 0
Flood Routes:
  Prefix    Type      Owner                NhType    NhIndex
  0x39/16   ALL_FLOOD  __vs1+vlan200__    flood     427
  0x39/16   RE_FLOOD   __vs1+vlan200__    flood     427
  0x4180/17 ALT_ROOT_RT ge-11/1/0.200      flood     427
  0x4080/17 ALT_ROOT_RT ge-11/1/1.200      flood     427
  0x4280/17 ALT_ROOT_RT ge-11/1/4.200      flood     427
  0x4480/17 ALT_ROOT_RT xe-10/0/0.200      flood     427
  0x4380/17 ALT_ROOT_RT xe-10/2/0.200      flood     427

```

### show bridge flood extensive

```

user@host> show bridge flood extensive
Name: __juniper_private1__
CEs: 0
VEs: 0
Flood route prefix: 0x36/16
Flood route type: MLP_FLOOD
Flood route owner: __vs1+vlan100__
Nexthop type: flood
Nexthop index: 426
  Interfaces Flooding to:
    Name                Type      NhType    Index
    1c-11/0/0.32769     LC
    1c-10/2/0.32769     LC
    1c-10/0/0.32769     LC
    1c-11/1/0.32769     LC

Flood route prefix: 0x3a/16
Flood route type: MLP_FLOOD
Flood route owner: __vs1+vlan200__
Nexthop type: flood
Nexthop index: 428
  Interfaces Flooding to:
    Name                Type      NhType    Index
    1c-10/0/0.32769     LC
    1c-10/2/0.32769     LC
    1c-11/1/0.32769     LC
Name: vs1::vlan100
CEs: 6
VEs: 0

Flood route prefix: 0x35/16
Flood route type: ALL_FLOOD
Flood route owner: __vs1+vlan100__
Nexthop type: flood

```

Nexthop index: 425  
Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		
ge-11/1/1.100	CE		
ge-11/1/0.100	CE		
xe-10/2/0.100	CE		
xe-10/0/0.100	CE		

Flood route prefix: 0x35/16  
Flood route type: RE\_FLOOD  
Flood route owner: \_\_vs1+vlan100\_\_  
Nexthop type: flood  
Nexthop index: 425

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		
ge-11/1/1.100	CE		
ge-11/1/0.100	CE		
xe-10/2/0.100	CE		
xe-10/0/0.100	CE		

Flood route prefix: 0x3780/17  
Flood route type: ALT\_ROOT\_RT  
Flood route owner: ge-11/0/3.0  
Nexthop type: flood  
Nexthop index: 425

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		
ge-11/1/1.100	CE		
ge-11/1/0.100	CE		
xe-10/2/0.100	CE		
xe-10/0/0.100	CE		

Flood route prefix: 0x3b80/17  
Flood route type: ALT\_ROOT\_RT  
Flood route owner: ge-11/1/4.100  
Nexthop type: flood  
Nexthop index: 425

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		
ge-11/1/1.100	CE		
ge-11/1/0.100	CE		
xe-10/2/0.100	CE		
xe-10/0/0.100	CE		

Flood route prefix: 0x3c80/17  
Flood route type: ALT\_ROOT\_RT  
Flood route owner: ge-11/1/1.100  
Nexthop type: flood  
Nexthop index: 425

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/0/3.0	CE		
ge-11/1/4.100	CE		

```

ge-11/1/1.100    CE
ge-11/1/0.100    CE
xe-10/2/0.100    CE
xe-10/0/0.100    CE

```

```

Flood route prefix: 0x3d80/17
Flood route type: ALT_ROOT_RT
Flood route owner: ge-11/1/0.100
Nexthop type: flood
Nexthop index: 425

```

```

  Interfaces Flooding to:
  Name      Type      NhType      Index
  ge-11/0/3.0    CE
  ge-11/1/4.100  CE
  ge-11/1/1.100  CE
  ge-11/1/0.100  CE
  xe-10/2/0.100  CE
  xe-10/0/0.100  CE

```

```

Flood route prefix: 0x3e80/17
Flood route type: ALT_ROOT_RT
Flood route owner: xe-10/2/0.100
Nexthop type: flood
Nexthop index: 425

```

```

  Interfaces Flooding to:
  Name      Type      NhType      Index
  ge-11/0/3.0    CE
  ge-11/1/4.100  CE
  ge-11/1/1.100  CE
  ge-11/1/0.100  CE
  xe-10/2/0.100  CE
  xe-10/0/0.100  CE

```

```

Flood route prefix: 0x3f80/17
Flood route type: ALT_ROOT_RT
Flood route owner: xe-10/0/0.100
Nexthop type: flood
Nexthop index: 425

```

```

  Interfaces Flooding to:
  Name      Type      NhType      Index
  ge-11/0/3.0    CE
  ge-11/1/4.100  CE
  ge-11/1/1.100  CE
  ge-11/1/0.100  CE
  xe-10/2/0.100  CE
  xe-10/0/0.100  CE

```

```

Name: vs1::vlan200
CEs: 5
VEs: 0

```

```

Flood route prefix: 0x39/16
Flood route type: ALL_FLOOD
Flood route owner: __vs1+vlan200__
Nexthop type: flood
Nexthop index: 427

```

```

  Interfaces Flooding to:
  Name      Type      NhType      Index
  ge-11/1/0.200  CE
  ge-11/1/1.200  CE
  ge-11/1/4.200  CE
  xe-10/0/0.200  CE

```

xe-10/2/0.200 CE

Flood route prefix: 0x39/16  
Flood route type: RE\_FLOOD  
Flood route owner: \_\_vs1+vlan200\_\_  
Nexthop type: flood  
Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

Flood route prefix: 0x4180/17  
Flood route type: ALT\_ROOT\_RT  
Flood route owner: ge-11/1/0.200  
Nexthop type: flood  
Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

Flood route prefix: 0x4080/17  
Flood route type: ALT\_ROOT\_RT  
Flood route owner: ge-11/1/1.200  
Nexthop type: flood  
Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

Flood route prefix: 0x4280/17  
Flood route type: ALT\_ROOT\_RT  
Flood route owner: ge-11/1/4.200  
Nexthop type: flood  
Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

Flood route prefix: 0x4480/17  
Flood route type: ALT\_ROOT\_RT  
Flood route owner: xe-10/0/0.200  
Nexthop type: flood  
Nexthop index: 427

Interfaces Flooding to:

Name	Type	NhType	Index
------	------	--------	-------

```
ge-11/1/0.200    CE
ge-11/1/1.200    CE
ge-11/1/4.200    CE
xe-10/0/0.200    CE
xe-10/2/0.200    CE
```

```
Flood route prefix: 0x4380/17
Flood route type: ALT_ROOT_RT
Flood route owner: xe-10/2/0.200
Nexthop type: flood
Nexthop index: 427
```

```
  Interfaces Flooding to:
```

Name	Type	NhType	Index
ge-11/1/0.200	CE		
ge-11/1/1.200	CE		
ge-11/1/4.200	CE		
xe-10/0/0.200	CE		
xe-10/2/0.200	CE		

## show bridge mac-table

---

<b>Syntax</b>	<pre>show bridge mac-table   &lt;age&gt;   &lt;brief   count   detail   extensive&gt;   &lt;bridge-domain (all   <i>bridge-domain-name</i>)&gt;   &lt;global-count&gt;   &lt;instance <i>instance-name</i>&gt;   &lt;interface <i>interface-name</i>&gt;   &lt;mac-address&gt;   &lt;instance <i>instance-name</i>&gt;   &lt;vlan-id (all-vlan   <i>vlan-id</i>)&gt;</pre>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4. Command introduced in Junos OS Release 15.1 Support for PBB-EVPN instance added in Junos OS Release 16.1 MAC Flag P to indicate a MAC Pinned interface introduced in Junos OS 16.2
<b>Description</b>	(MX Series routers only) Display Layer 2 MAC address information.
<b>Options</b>	<p><b>none</b>—Display all learned Layer 2 MAC address information.</p> <p><b>age</b>— (Optional) Display age of a single mac-address.</p> <p><b>brief   count   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>bridge-domain (all   <i>bridge-domain-name</i>)</b>—(Optional) Display learned Layer 2 MAC addresses for all bridging domains or for the specified bridging domain.</p> <p><b>global-count</b>—(Optional) Display the total number of learned Layer 2 MAC addresses on the system.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display learned Layer 2 MAC addresses for the specified routing instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display learned Layer 2 MAC addresses for the specified interface.</p> <p><b>mac-address</b>—(Optional) Display the specified learned Layer 2 MAC address information.</p> <p><b>vlan-id (all-vlan   <i>vlan-id</i>)</b>—(Optional) Display learned Layer 2 MAC addresses for all VLANs or for the specified VLAN.</p>
<b>Additional Information</b>	When Layer 2 protocol tunneling is enabled, the tunneling MAC address 01:00:0c:cd:cd:d0 is installed in the MAC table. When the Cisco Discovery Protocol (CDP), Spanning Tree Protocol (STP), or VLAN Trunk Protocol (VTP) is configured for Layer 2 protocol tunneling on an interface, the corresponding protocol MAC address is installed in the MAC table.

**Required Privilege Level** view

**List of Sample Output** [show bridge mac-table on page 2486](#)  
[show bridge mac-table \(with Layer 2 Services over GRE Interfaces\) on page 2486](#)  
[show bridge mac-table \(with VXLAN enabled\) on page 2487](#)  
[show bridge mac-table age \(for GE interface\) on page 2487](#)  
[show bridge mac-table age \(for AE interface\) on page 2487](#)  
[show bridge mac-table count on page 2487](#)  
[show bridge mac-table detail on page 2488](#)  
[show bridge mac-table instance pbb-evpn on page 2488](#)  
[show bridge mac-table on page 2488](#)

**Output Fields** [Table 229 on page 2485](#) describes the output fields for the **show bridge mac-table** command. Output fields are listed in the approximate order in which they appear.

*Table 229: show bridge mac-table Output Fields*

Field Name	Field Description
Age	Age of a single mac-address.
<b>Routing instance</b>	Name of the routing instance.
Bridging domain	Name of the bridging domain.
MAC address	MAC address or addresses learned on a logical interface.
MAC flags	Status of MAC address learning properties for each interface: <ul style="list-style-type: none"> <li>• <b>S</b>—Static MAC address is configured.</li> <li>• <b>D</b>—Dynamic MAC address is configured.</li> <li>• <b>L</b>—Locally learned MAC address is configured.</li> <li>• <b>C</b>—Control MAC address is configured.</li> <li>• <b>SE</b>—MAC accounting is enabled.</li> <li>• <b>NM</b>—Non-configured MAC.</li> <li>• <b>R</b>—Remote PE MAC address is configured.</li> <li>• <b>P</b>—MAC Pinned interface is configured</li> </ul>
Logical interface	Name of the logical interface.
MAC count	Number of MAC addresses learned on the specific routing instance or interface.
Learning interface	Name of the logical interface on which the MAC address was learned.
Learning VLAN	VLAN ID of the routing instance or bridge domain in which the MAC address was learned.
VXLAN ID/VXLAN	VXLAN Network Identifier (VNI).

Table 229: show bridge mac-table Output Fields (continued)

Field Name	Field Description
Layer 2 flags	Debugging flags signifying that the MAC address is present in various lists.
Epoch	Spanning Tree Protocol epoch number identifying when the MAC address was learned. Used for debugging.
Sequence number	Sequence number assigned to this MAC address. Used for debugging.
Learning mask	Mask of the Packet Forwarding Engines where this MAC address was learned. Used for debugging.
IPC generation	Creation time of the logical interface when this MAC address was learned. Used for debugging.

## Sample Output

### show bridge mac-table

```

user@host> show bridge mac-table
MAC flags (S -static MAC, D -dynamic MAC, L -locally learned, C -Control MAC
          SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : default-switch
Bridging domain : test1, VLAN : 1
  MAC          MAC      Logical      NH      RTR
  address      flags    interface  Index   ID
01:00:0c:cc:cc:cc S,NM    NULL
01:00:0c:cc:cc:cd S,NM    NULL
01:00:0c:cd:cd:d0 S,NM    NULL
64:87:88:6a:17:d0 D        ae0.1
64:87:88:6a:17:f0 D        ae0.1

```

### show bridge mac-table (with Layer 2 Services over GRE Interfaces)

```

user@host> show bridge mac-table
MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
          SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : default-switch
Bridging domain : vlan-1, VLAN : 1
  MAC          MAC      Logical
  address      flags    interface
00:01:01:00:01:f7 D,SE    gr-1/2/10.0
00:03:00:32:01:f7 D,SE    gr-1/2/10.0
00:00:21:11:11:10 DL        ge-1/0/0.0
00:00:21:11:11:11 DL        ge-1/1/0.0

Routing instance : default-switch
Bridging domain : vlan-2, VLAN : 2
  MAC          MAC      Logical
  address      flags    interface
00:02:01:33:01:f7 D,SE    gr-1/2/10.1

```

```
00:00:21:11:21:10 DL ge-1/0/0.1
00:00:21:11:21:11 DL ge-1/1/0.1
```

#### show bridge mac-table (with VXLAN enabled)

```
user@host> show bridge mac-table
MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
          SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)
```

```
Routing instance : default-switch
Bridging domain : vlan-1, VLAN : 1
VXLAN: Id : 100, Multicast group: 233.252.0.1
MAC          MAC          Logical
address      flags        interface
00:01:01:00:01:f7 D,SE vtep.1052010
00:03:00:32:01:f7 D,SE vtep.1052011
00:00:21:11:11:10 DL ge-1/0/0.0
00:00:21:11:11:11 DL ge-1/1/0.0
```

```
Routing instance : default-switch
Bridging domain : vlan-2, VLAN : 2, VXLAN : 200
VXLAN: Id : 200, Multicast group: 233.252.0.2
MAC          MAC          Logical
address      flags        interface
00:02:01:33:01:f7 D,SE vtep.1052010
00:04:00:14:01:f7 D,SE vtep.1052011
00:00:21:11:21:10 DL ge-1/0/0.1
00:00:21:11:21:11 DL ge-1/1/0.1
```

#### show bridge mac-table age (for GE interface)

```
user@host> show vpls mac-table age 00:02:03:aa:bb:1a instance vpls_instance_1
MAC Entry Age information
Current Age: 4 seconds
```

#### show bridge mac-table age (for AE interface)

```
user@host> show vpls mac-table age 00:02:03:aa:bb:1a instance vpls_instance_1
MAC Entry Age information
Current Age on FPC1: 102 seconds
Current Age on FPC2: 94 seconds
```

#### show bridge mac-table count

```
user@host> show bridge mac-table count
2 MAC address learned in routing instance vs1 bridge domain vlan100
```

```
MAC address count per interface within routing instance:
Logical interface      MAC count
ge-11/0/3.0            1
ge-11/1/4.100          0
ge-11/1/1.100          0
ge-11/1/0.100          0
xe-10/2/0.100          1
xe-10/0/0.100          0
```

```
MAC address count per learn VLAN within routing instance:
Learn VLAN ID          MAC count
```

```

0                                2

0 MAC address learned in routing instance vs1 bridge domain vlan200

MAC address count per interface within routing instance:
Logical interface      MAC count
ge-11/1/0.200          0
ge-11/1/1.200          0
ge-11/1/4.200          0
xe-10/0/0.200          0
xe-10/2/0.200          0

MAC address count per learn VLAN within routing instance:
Learn VLAN ID          MAC count
0                        0

```

### show bridge mac-table detail

```

user@host> show bridge mac-table detail
MAC address: 00:00:00:19:1c:db
Routing instance: vs1
Bridging domain: vlan100
Learning interface: ge-11/0/3.0   Learning VLAN: 0
Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
Epoch: 4                          Sequence number: 0
Learning mask: 0x800               IPC generation: 0

MAC address: 00:00:00:59:3a:2f
Routing instance: vs1
Bridging domain: vlan100
Learning interface: xe-10/2/0.100  Learning VLAN: 0
Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
Epoch: 7                          Sequence number: 0
Learning mask: 0x400               IPC generation: 0

```

### show bridge mac-table instance pbb-evpn

```

user@host> show bridge mac-table instance pbb-evpn
Routing instance : pbb-evpn
Bridging domain : isid-bd10000, ISID : 10000
MAC          MAC      Logical      NH      RTR
address      flags     interface   Index   ID
00:19:e2:b0:76:eb  D      cbp.1000
aa:bb:cc:dd:ee:f2  DC
aa:bb:cc:dd:ee:f3  DC      1048576 1048576
1048575 1048575

```

### show bridge mac-table

```

user@host>run show bridge mac-table
MAC flags (S -static MAC, D -dynamic MAC, L -locally learned, C -Control MAC
O -OVSDB MAC, SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC,
P -Pinned MAC)

Routing instance : VS-541
Bridging domain : 541, VLAN : 541
MAC MAC Logical NH RTR
address flags interface Index ID
00:00:01:00:00:01 DPRC xe-0/0/3.0
00:00:02:00:00:01 DP  xe-0/0/3.0

```



## show bridge statistics

---

<b>Syntax</b>	<b>show bridge statistics</b> <b>&lt;bridge-domain <i>domain-name</i>&gt;</b> <b>&lt;instance <i>instance-name</i>&gt;</b>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4.
<b>Description</b>	(MX Series routers only) Display bridge statistics.
<b>Options</b>	<b>none</b> —Display bridge statistics for all bridge domains in all routing instances.  <b>bridge-domain <i>domain-name</i></b> —(Optional) Display statistics for the specified bridge domain.  <b>instance <i>instance-name</i></b> —(Optional) Display statistics for the specified routing instance.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show bridge statistics on page 2490</a>

## Sample Output

### show bridge statistics

```
user@host> show bridge statistics
Information for routing instance:

Routing instance : __juniper_private1__
  Index: 1                      Sequence number: 0
  MAC limit: 5000              MACs learned: 0
  Static MACs learned: 0       Non config Static MACs learned: 0
  Handle: 0x829e800

Information for routing instance:

Routing instance : vs1
  Bridging domain : vlan100
  Index: 3                      Sequence number: 0
  MAC limit: 5120              MACs learned: 2
  Static MACs learned: 0       Non config Static MACs learned: 0
  Handle: 0x829e400
  Flags: Bridge instance, Config defined, VLAN : 100
  Local interface: ge-11/0/3.0, Index: 79
    Broadcast packets:          1
    Broadcast bytes :          65
    Multicast packets:          0
    Multicast bytes :           0
    Flooded packets :           0
    Flooded bytes :             0
    Unicast packets :          358624489
    Unicast bytes :          23310592305
    Current MAC count:          1 (Limit 1024)
```

```

Local interface: ge-11/1/4.100, Index: 84
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)
Local interface: ge-11/1/1.100, Index: 86
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)
Local interface: ge-11/1/0.100, Index: 87
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)
Local interface: xe-10/2/0.100, Index: 88
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 358627393
  Unicast bytes : 23310781065
  Current MAC count: 1 (Limit 1024)
Local interface: xe-10/0/0.100, Index: 89
  Broadcast packets: 0
  Broadcast bytes : 0
  Multicast packets: 0
  Multicast bytes : 0
  Flooded packets : 0
  Flooded bytes : 0
  Unicast packets : 0
  Unicast bytes : 0
  Current MAC count: 0 (Limit 1024)

Information for routing instance:

Routing instance : vs1
  Bridging domain : vlan200
  Index: 4
  Sequence number: 0
  MAC limit: 5120
  MACs learned: 0
  Static MACs learned: 0
  Non config Static MACs learned: 0
  Handle: 0x829e600
  Flags: Bridge instance, Config defined, VLAN : 200
  Local interface: ge-11/1/0.200, Index: 90

```

```
Broadcast packets:          0
Broadcast bytes :           0
Multicast packets:         0
Multicast bytes :           0
Flooded packets :           0
Flooded bytes :             0
Unicast packets :           0
Unicast bytes :             0
Current MAC count:         0 (Limit 1024)
Local interface: ge-11/1/1.200, Index: 91
Broadcast packets:          0
Broadcast bytes :           0
Multicast packets:         0
Multicast bytes :           0
Flooded packets :           0
Flooded bytes :             0
Unicast packets :           0
Unicast bytes :             0
Current MAC count:         0 (Limit 1024)
Local interface: ge-11/1/4.200, Index: 92
Broadcast packets:          0
Broadcast bytes :           0
Multicast packets:         0
Multicast bytes :           0
Flooded packets :           0
Flooded bytes :             0
Unicast packets :           0
Unicast bytes :             0
Current MAC count:         0 (Limit 1024)
Local interface: xe-10/0/0.200, Index: 93
Broadcast packets:          0
Broadcast bytes :           0
Multicast packets:         0
Multicast bytes :           0
Flooded packets :           0
Flooded bytes :             0
Unicast packets :           0
Unicast bytes :             0
Current MAC count:         0 (Limit 1024)
Local interface: xe-10/2/0.200, Index: 94
Broadcast packets:          4
Broadcast bytes :          260
Multicast packets:         0
Multicast bytes :           0
Flooded packets :           0
Flooded bytes :             0
Unicast packets :           0
Unicast bytes :             0
Current MAC count:         0 (Limit 1024)
```

## show l2-learning global-information

<b>Syntax</b>	<code>show l2-learning global-information</code>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4.
<b>Description</b>	(MX Series routers only) Display Layer 2 learning process-related information for the entire router.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show l2-learning global-information on page 2493</a>
<b>Output Fields</b>	<a href="#">Table 230 on page 2493</a> describes the output fields for the <b>show l2-learning global-information</b> command. Output fields are listed in the approximate order in which they appear.

*Table 230: show l2-learning global-information Output Fields*

Field Name	Field Description
MAC aging interval	Configured timeout interval, in seconds, for all MAC table entries.
MAC learning	Status of MAC learning: <b>Enabled</b> or <b>Disabled</b> .
MAC statistics	Status of MAC accounting: <b>Enabled</b> or <b>Disabled</b> .
MAC limit Count	Configured maximum limit on the number of MAC addresses that can be learned.
MAC limit hit flag	Status of the learned MAC limit hit flag: <b>Enabled</b> (the learned MAC exceeds the global MAC limit) or <b>Disabled</b> (the learned MAC does not exceed the global MAC limit).
MAC packet action drop	Status of action to drop packets after the configured MAC address limit is reached: <b>Enabled</b> (packets are dropped) or <b>Disabled</b> (packets are forwarded).

## Sample Output

### show l2-learning global-information

```

user@host> show l2-learning global-information
Global Configuration:

MAC aging interval      : 300
MAC learning            : Enabled

```

```
MAC statistics      : Disabled
MAC limit Count    : 393215
MAC limit hit flag  : Disabled
MAC packet action drop: Disabled
```

## show l2-learning global-mac-count

---

<b>Syntax</b>	<code>show l2-learning global-mac-count</code>
<b>Release Information</b>	Command introduced in Junos OS Release 9.3.
<b>Description</b>	(MX Series routers only) Display the total number of dynamic and static MAC addresses learned for the entire router.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show l2-learning global-mac-count on page 2495</a>
<b>Output Fields</b>	Displays the total number of dynamic and static MAC addresses learned for the entire router.

## Sample Output

### show l2-learning global-mac-count

```
user@host> show l2-learning global-mac-count
100 dynamic and static MAC addresses learned globally
```

## show l2-learning instance

**Syntax** `show l2-learning instance`

**Release Information** (MX Series routers only) Command introduced in Junos OS Release 8.4.

**Description** Display Layer 2 learning properties for all the configured routing instances.

**Options** This command has no options.

**Required Privilege Level** view

**List of Sample Output** [show l2-learning instance on page 2497](#)

**Output Fields** [Table 231 on page 2496](#) describes the output fields for the **show l2-learning instance** command. Output fields are listed in the approximate order in which they appear.

*Table 231: show l2-learning instance Output Fields*

Field Name	Field Description
Routing Instance	Name of routing instance.
Bridging Domain	Name of bridging domain.  On MX Series routers you can use the <b>show l2-learning instance &lt;extensive&gt;</b> command option to display the Bridge Service-id information which includes the Config Service ID and the Active Service ID.
Index	Number associated with the routing instance or bridging domain.
Logical System	Name of logical system or <b>Default</b> if no logical system is configured.
Routing instance flags	Status of Layer 2 learning properties for each routing instance: <ul style="list-style-type: none"> <li>• <b>DL</b>—MAC learning is disabled.</li> <li>• <b>SE</b>—MAC accounting is enabled.</li> <li>• <b>AD</b>—Packets are dropped after MAC address limit is reached.</li> <li>• <b>LH</b>—The maximum number of MAC addresses has been learned on the routing instance. The routing instance is not able to learn any additional MAC addresses.</li> </ul>
MAC limit	Maximum number of MAC addresses that can be learned from each interface in the routing instance or bridging domain.

## Sample Output

### show l2-learning instance

```
user@host> show l2-learning instance
Information for routing instance:
```

```
Routing Instance flags (DL -disable learning, SE -stats enabled,
                        AD -packet action drop, LH -mac limit hit)
```

Routing Instance	Bridging Domain	Index	Logical System	Routing flags	MAC limit
__juniper_private1__		1	Default		5000
vs1	vlan100	3	Default		5120
vs1	vlan200	4	Default		5120

## show l2-learning interface

---

<b>Syntax</b>	<b>show l2-learning interface</b>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4. Added sample output to indicate an EVPN MAC Pinned interface, introduced in Junos OS 16.2R1.
<b>Description</b>	(MX Series routers only) Display Layer 2 learning information for all the interfaces.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show l2-learning interface on page 2498</a> <a href="#">show l2 learning-interface on page 2499</a>
<b>Output Fields</b>	<a href="#">Table 232 on page 2498</a> describes the output fields for the <b>show l2-learning interface</b> command. Output fields are listed in the approximate order in which they appear.

*Table 232: show l2-learning interface Output Fields*

Field Name	Field Description
Logical interface	Name of the logical interface.
Index	Index of the interface.
Routing Instance	Number of the routing instance to which the interface belongs.
Interface device	Value of the order in which the Junos OS finds and initializes the interface.
Logical interface flags	Status of Layer 2 learning properties for each interface: <ul style="list-style-type: none"><li>• <b>DL</b>—MAC learning is disabled.</li><li>• <b>SE</b>—MAC accounting is enabled.</li><li>• <b>AD</b>—Packets are dropped after the MAC interface limit is reached.</li><li>• <b>MAC limit</b>—Maximum number of MAC addresses that can be learned from the interface.</li><li>• <b>MP</b>—MAC Pinning enabled.</li></ul>

## Sample Output

### show l2-learning interface

```
user@host> show l2-learning interface
Information for interface family:
```

Logical Interface flags (DL -disable learning, SE -stats enabled,  
AD -packet action drop, LH -mac limit hit)

Logical interface	Index	Routing instance	Interface device	Logical Interface flags	MAC limit
ge-11/0/3.0	79	3	136		1024
ge-11/1/4.100	84	3	150		1024
ge-11/1/1.100	86	3	147		1024
ge-11/1/0.100	87	3	146		1024
xe-10/2/0.100	88	3	144		1024
xe-10/0/0.100	89	3	129		1024
ge-11/1/0.200	90	4	146		1024
ge-11/1/1.200	91	4	147		1024
ge-11/1/4.200	92	4	150		1024
xe-10/0/0.200	93	4	129		1024
xe-10/2/0.200	94	4	144		1024

### show l2 learning-interface

```
user@host> run show l2-learning interface
Routing Instance Name : default-switch
Logical Interface flags (DL -disable learning, AD -packet action drop,
                        LH - MAC limit hit, DN - Interface Down, MP - MAC Pinning
enabled)
Logical      BD      MAC      STP      Logical
Interface    Name     Limit    State    Interface flags
ae0.0                8192                MP
```

## show mac-rewrite interface

<b>Syntax</b>	<b>show mac-rewrite interface</b> <b>&lt;brief   detail&gt;</b> <b>&lt;interface-name&gt;</b>	
<b>Release Information</b>	<p>Command introduced in Junos OS Release 9.1.</p> <p>Command introduced in Junos OS Release 14.1X53-D10 for EX4300 switches.</p> <p>Command introduced in Junos OS Release 15.1X53-D55 for EX2300 and EX3400 switches.</p> <p>Command introduced in Junos OS Release 17.4R1 for EX4600 switches.</p>	
<b>Description</b>	Display Layer 2 protocol tunneling (L2PT) information.	
<b>Options</b>	<p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>interface interface-name</b>—(Optional) Display L2PT information for the specified interface.</p>	
<b>Required Privilege Level</b>	view	
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>layer2-control</i></li> <li>• <i>mac-rewrite</i></li> <li>• <i>protocol</i></li> <li>• <i>Layer 2 Protocol Tunneling Through a Network</i></li> <li>• <i>Layer 2 Protocol Tunnel Configuration Guidelines</i></li> <li>• <i>Configuring Layer 2 Protocol Tunneling</i></li> <li>• <i>Understanding Layer 2 Protocol Tunneling on EX Series Switches</i></li> <li>• <i>Configuring Layer 2 Protocol Tunneling on EX Series Switches with ELS Support (CLI Procedure)</i></li> </ul>	
<b>List of Sample Output</b>	<a href="#">show mac-rewrite interface on page 2501</a> <a href="#">show mac-rewrite interface (EX Series Switches) on page 2501</a>	
<b>Output Fields</b>	<p><a href="#">Table 233 on page 2500</a> lists the output fields for the <b>show mac-rewrite interface</b> command. Output fields are listed in the approximate order in which they appear.</p>	

**Table 233: show mac-rewrite interface Output Fields**

Field Name	Field Description	Level of Output
<b>Interface</b>	Name of the interface on which L2PT is configured.	<b>brief detail</b>

Table 233: *show mac-rewrite interface* Output Fields (continued)

Field Name	Field Description	Level of Output
<b>Protocols</b>	<p>Layer 2 protocols being tunneled on this interface.</p> <p>All devices that support L2PT can tunnel the following protocols: Cisco Discovery Protocol (CDP), Spanning Tree Protocol (STP), or VLAN Trunk Protocol (VTP).</p> <p>The following Layer 2 protocols can also be tunneled on some devices that support L2PT: E-LMI, GVRP, IEEE 802.1X, IEEE 802.3AH, LACP, LLDP, MMRP, MVRP, PVSTP+, UDLD, or VSTP. See <i>protocol</i> for more information on the supported protocols for tunneling on different devices.</p>	<b>brief detail</b>

## Sample Output

### show mac-rewrite interface

```

user@host> show mac-rewrite interface
Interface      Protocols
ge-1/0/5       STP VTP CDP PVSTP+

```

### show mac-rewrite interface (EX Series Switches)

```

user@switch> show mac-rewrite interface
Interface      Protocols
ge-0/0/1       802.3AH LLDP STP

```



## CHAPTER 30

# VPN Operational Commands

- `clear vpls mac-address`
- `clear vpls mac-table`
- `request l2circuit-switchover`
- `show dynamic-tunnels database`
- `show hfrr profiles`
- `show ingress-replication mvpn`
- `show l2circuit connections`
- `show l2vpn connections`
- `show mvpn c-multicast`
- `show mvpn instance`
- `show mvpn neighbor`
- `show vpls connections`
- `show vpls flood event-queue`
- `show vpls flood instance`
- `show vpls flood route`
- `show vpls mac-table`
- `show vpls statistics`

## clear vpls mac-address

---

<b>Syntax</b>	<code>clear vpls mac-address</code> <code>&lt;instance <i>instance-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;mac-address&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(T Series and M Series routers, except for the M160 router) Clear media access control (MAC) address entries from the virtual private LAN service (VPLS) table.
<b>Options</b>	<b>none</b> —Clear all MAC address entries from the VPLS table for all routing instances.  <b>instance <i>instance-name</i></b> —(Optional) Clear all MAC address entries for a VPLS instance from the VPLS table.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>mac-address</b> —(Optional) Clear a specific MAC address in a VPLS instance from the VPLS table.
<b>Required Privilege Level</b>	maintenance
<b>List of Sample Output</b>	<a href="#">clear vpls mac-address on page 2504</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear vpls mac-address

```
user@host> clear vpls mac-address
```

## clear vpls mac-table

<b>Syntax</b>	clear vpls mac-table <instance <i>instance-name</i> > <interface <i>interface-name</i> > <logical-system (all   <i>logical-system-name</i> )> <mac-address> <vlan-id>
<b>Release Information</b>	Command introduced before Junos OS Release 9.5.
<b>Description</b>	(MX Series routers) Clear media access control (MAC) addresses from the virtual private LAN service (VPLS) MAC table.
<b>Options</b>	<p><b>none</b>—Clear all MAC addresses from the VPLS table for all routing instances.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear all MAC addresses for a VPLS instance from the VPLS table.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Clear all MAC addresses for a VPLS interface from the VPLS table.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>mac-address</b>—(Optional) Clear a specific MAC address in a VPLS instance from the VPLS table.</p> <p><b>vlan-id</b>—(Optional) Clear MAC addresses on a specified VLAN (0 through 4095).</p>
<b>Required Privilege Level</b>	maintenance
<b>List of Sample Output</b>	<a href="#">clear vpls mac-table on page 2505</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### clear vpls mac-table

```
user@host> clear vpls mac-table
```

## request l2circuit-switchover

---

<b>Syntax</b>	<code>request l2circuit-switchover</code> <code>&lt;logical-system (all   logical-system-name)&gt;</code> <code>&lt;neighbor address&gt;</code> <code>&lt;virtual-circuit-id identifier&gt;</code>
<b>Release Information</b>	Command introduced in Junos OS Release 9.2. Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.
<b>Description</b>	Manually trigger a switch from the active pseudowire to the redundant pseudowire. This command can be useful when performing network maintenance.
<b>Options</b>	<b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>neighbor <i>address</i></b> —(Optional) Trigger a switch of all of the active pseudowire connections with the specified neighbor to their respective redundant pseudowires.  <b>virtual-circuit-id <i>identifier</i></b> —(Optional) Trigger a switch from the active pseudowire connection of the specified Layer 2 circuit to its redundant pseudowire.
<b>Required Privilege Level</b>	maintenance
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>MPLS Feature Support on QFX Series and EX4600 Switches</i></li></ul>
<b>List of Sample Output</b>	<a href="#">request l2circuit-switchover virtual-circuit-id on page 2506</a>
<b>Output Fields</b>	When you enter this command, you are provided feedback on the status of your request.

## Sample Output

### request l2circuit-switchover virtual-circuit-id

```
user@host>request l2circuit-switchover virtual-circuit-id 12
```

## show dynamic-tunnels database

<b>Syntax</b>	show dynamic-tunnels database <destination> <logical-system (all   <i>logical-system-name</i> )> <table <i>routing-table-name</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display dynamic tunnel database information.
<b>Options</b>	<p><b>none</b>—Display dynamic tunnel database information for all destinations and routing tables.</p> <p><b>destination</b>—(Optional) Display database entries for the specified IP address (with optional destination prefix length) only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>table <i>routing-table-name</i></b>—(Optional) Display database entries for the specified table only.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show dynamic-tunnels database (Tunnel Is Up) on page 2508</a> <a href="#">show dynamic-tunnels database (No Tunnel PIC) on page 2508</a> <a href="#">show dynamic-tunnels database (Tunnel Is Expiring) on page 2509</a> <a href="#">show dynamic-tunnels database (Destination Specified) on page 2509</a> <a href="#">show dynamic-tunnels database (Localization) on page 2509</a>
<b>Output Fields</b>	<p>Table 234 on page 2507 lists the output fields for the <b>show dynamic-tunnels database</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 234: show dynamic-tunnels database Output Fields*

Field Name	Field Description
<b>Table</b>	Name of the routing table (for example, <b>inet.0</b> ).
<b>Destination-network</b>	Destination IP address and subnet.
<b>Tunnel to</b>	Destination IP address and prefix of the tunnel.
<b>State</b>	State of the tunnel: <b>Up</b> , <b>Up (expires in <i>nn:nn:nn</i>seconds)</b> , or <b>Dn</b> (down).
<b>Reference count</b>	Number of routes across the dynamic tunnel that are currently being resolved.

*Table 234: show dynamic-tunnels database Output Fields (continued)*

Field Name	Field Description
<b>Next-hop type</b>	Type of tunnel: GRE or UDP (BGP-Signal).
<b>Source address</b>	Source IP address of the tunnel.
<b>Next-hop</b>	IP address of the destination interface.
<b>VPN Label</b>	The label provided by the peer device to identify the VPN through which the packet needs to go. This label is used to identify the VRF for route lookup.
<b>Ingress Route</b>	The IGP route along with the corresponding metric that has been selected for forwarding the tunnel-encapsulated packet.
<b>Localized PFE</b>	Packet Forwarding Engine interface which is the anchor Packet Forwarding Engine for the localized next-hop-based dynamic tunnels.  When the anchor Packet Forwarding Engine of the tunnel goes down, it is represented by a # near the Packet Forwarding Engine name.
<b>State</b>	State of the destination interface: Up, Dn, or Dn (no tunnel pic).

## Sample Output

### show dynamic-tunnels database (Tunnel Is Up)

```

user@host> show dynamic-tunnels database
Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32
Reference count: 4
Next-hop type: UDP
Source address: 10.255.120.92
Next hop: tunnel-composite, 0x31132f64, nhid 3406
VPN Label: Push 120 Reference count: 3
Ingress Route: 10.255.120.94/32, via metric 2
Traffic Statistics: Packets 241367951, Bytes 356741831578
State: Up

```

### show dynamic-tunnels database (No Tunnel PIC)

```

user@host> show dynamic-tunnels database
Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Dn
Reference count: 2
Next-hop type: gre
Source address: 10.255.120.92
State: Dn (no tunnel pic)

```

### show dynamic-tunnels database (Tunnel Is Expiring)

```
user@host> show dynamic-tunnels database
Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Up (expires in 00:14:56 seconds)
Reference count: 0
Next-hop type: gre
  Source address: 10.255.120.92
  Next hop: gr-4/3/0.32769
  State: Up
```

### show dynamic-tunnels database (Destination Specified)

```
user@host> show dynamic-tunnels database 10.255.120.94
Table: inet.3

Destination-network: 10.255.120.94/32
Tunnel to: 10.255.120.94/32 State: Up
Reference count: 2
Next-hop type: gre
  Source address: 10.255.120.92
  Next hop: gr-4/3/0.32769
  State: Up
```

### show dynamic-tunnels database (Localization)

```
user@host> show dynamic-tunnels database
Destination-network: 1.0.0.0/8
Tunnel to: 1.1.1.6/32
Reference count: 5
Next-hop type: UDP
Source address: 1.1.1.2
Next hop: tunnel-composite, 0xc807930, nhid 1016
Localized PFE: pfe-1/0/0
VPN Label: Push 299808 Reference count: 4
Ingress Route: 1.1.1.6/32, via metric 2
Traffic Statistics: Packets 0, Bytes 0
State: Up
```

## show hfrr profiles

<b>Syntax</b>	show hfrr profiles <brief   extensive>
<b>Release Information</b>	Command introduced in Junos OS Release 12.2.
<b>Description</b>	<p>Display host fast reroute (HFRR) profile information.</p> <p>HFRR adds a precomputed protection path into the Packet Forwarding Engine, such that if a link between a provider edge device and a server farm becomes unusable for forwarding, the Packet Forwarding Engine can use another path without having to wait for the router or the protocols to provide updated forwarding information.</p>
<b>Options</b>	<p><b>none</b>—Display information about HRFF profiles.</p> <p><b>brief   extensive</b>—(Optional) Display the specified level of output.</p>
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Example: Configuring Link Protection with Host Fast Reroute</i></li> </ul>
<b>List of Sample Output</b>	<a href="#">show hfrr profiles on page 2511</a>
<b>Output Fields</b>	<p><a href="#">Table 235 on page 2510</a> describes the output fields for the <b>show hfrr profiles</b> command. Output fields are listed in the approximate order in which they appear.</p>

*Table 235: show hfrr profiles Output Fields*

Field Name	Field Description
HFRR	
HFRR current state	Status of the HFRR profile: HFRR_ACTIVE, HFRR_INACTIVE, HFRR_IFLH-NOT-CONF, and so on.
HFRR Prefix limit blackout timer expiry (in secs)	Time interval between an HFRR profile becoming inactive on exceeding the ARP prefix limit, and the profile starting the SYNC process.
HFRR prefix limit hit count	Number of times that an HFRR profile becomes inactive on exceeding the ARP prefix limit.
HFRR protected IFL name	Interface configured for the HFRR feature.
HFRR protected IFL handle	
HFRR routing instance name	The routing instance in which the HFRR interface is configured.

Table 235: show hfrf profiles Output Fields (continued)

Field Name	Field Description
HFRR routing instance handle	
HFRR sync BG scheduled	
HFRR RTS filter on	
HFRR delete BG scheduled	
HFRR ARP prefix limit	Configured ARP prefix limit.
HFRR ARP supplementary blackout timeout (in mins)	Supplementary time-out value configured for profile to be inactive when it hits ARP prefix limit.
HFRR number of ARP routes learned	Number of ARP routes learned on the configured interface.
HFRR number of FRR routes created	Number of ARP routes created on the configured interface.

## Sample Output

### show hfrf profiles

```

user@host> show hfrf profiles
HFRR pointer: 0x9254000
HFRR current state: HFRR_ACTIVE
HFRR Prefix limit blackout timer expiry (in secs): 0
HFRR prefix limit hit count: 0
HFRR protected IFL name: ge-4/1/0.0
HFRR protected IFL handle: 0x9248738
HFRR routing instance name: test
HFRR routing instance handle: 0x9145740
HFRR sync BG scheduled: NO
HFRR RTS filter on: YES
HFRR delete BG scheduled: NO
HFRR ARP prefix limit: 0
HFRR ARP supplementary blackout timeout (in mins): 1
HFRR number of ARP routes learned: 4
HFRR number of FRR routes created: 2

```

## show ingress-replication mvpn

**Syntax** show ingress-replication mvpn

**Release Information** Command introduced in Junos OS Release 10.4.

**Description** Display the state and configuration of the ingress replication tunnels created for the MVPN application when using the **mpls-internet-multicast** routing instance type.

**Required Privilege Level** View

**List of Sample Output** [show ingress-replication mvpn on page 2512](#)

**Output Fields** [Table 236 on page 2512](#) lists the output fields for the **show ingress-replication mvpn** command. Output fields are listed in the approximate order in which they appear.

*Table 236: show ingress-replication mvpn Output Fields*

Field Name	Field Description
Ingress tunnel	Identifies the MVPN ingress replication tunnel.
Application	Identifies the application (MVPN).
Unicast tunnels	List of unicast tunnels in use.
Leaf address	Address of the tunnel.
Tunnel type	Identifies the unicast tunnel type.
Mode	Indicates whether the tunnel was created as a new tunnel for the ingress replication, or if an existing tunnel was used.
State	Indicates whether the tunnel is Up or Down.

## Sample Output

show ingress-replication mvpn

```

user@host> show ingress-replication mvpn
Ingress Tunnel: mvpn:1
  Application: MVPN
  Unicast tunnels
    Leaf Address      Tunnel-type      Mode      State
    10.255.245.2      P2P LSP         New       Up
    10.255.245.4      P2P LSP         New       Up
Ingress Tunnel: mvpn:2
  Application: MVPN
  Unicast tunnels

```

Leaf Address	Tunnel-type	Mode	State
10.255.245.2	P2P LSP	Existing	Up

## show l2circuit connections

---

<b>Syntax</b>	<code>show l2circuit connections</code> <code>&lt;brief   extensive   summary&gt;</code> <code>&lt;down   up   up-down&gt;</code> <code>&lt;history&gt;</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;neighbor <i>neighbor</i>&gt;</code> <code>&lt;status&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Display enhancements in Junos OS Release 9.6. Display enhancements in Junos OS Release 10.2. Display enhancements in Junos OS Release 12.1. Display enhancements in Junos OS Release 13.2. Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.
<b>Description</b>	Display status information about Layer 2 virtual circuits from the local provider edge (PE) router to its neighbors.
<b>Options</b>	<p><b>none</b>—Display standard information about Layer 2 virtual circuits on all interfaces for all neighbors.</p> <p><b>brief   extensive   summary</b>—(Optional) Display the specified level of output. Use history to display information about connection history. Use status to display information about the connection and interface status.</p> <p><b>down   up   up-down</b>—(Optional) Display nonoperational, operational, or both kinds of connections.</p> <p><b>history</b>—(Optional) Display information about connection history.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Show all Layer 2 virtual circuits on an interface.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>neighbor <i>neighbor</i></b>—(Optional) IP address of a specific neighbor.</p> <p><b>status</b>—(Optional) Display information about the connection and interface status.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show l2circuit connections on page 2518</a> <a href="#">show l2circuit connections interface on page 2519</a> <a href="#">show l2circuit connections extensive on page 2519</a>

[show l2circuit connections extensive \(Pseudowire Redundancy with Hot Standby\)](#) on page 2520

**Output Fields** [Table 237 on page 2515](#) lists the output fields for the **show l2circuit connections** command. Output fields are listed in the approximate order in which they appear.

*Table 237: show l2circuit connections Output Fields*

Field Name	Field Description
<b>Layer-2 Circuit Connections</b>	Displays the legends for connection and interface status.
<b>Neighbor</b>	Remote PE neighbor.
<b>Interface</b>	Logical PE-to-CE interface on which the virtual circuit is configured.
<b>Type</b>	VC type: <b>rmt</b> (remote) or <b>loc</b> (local).

Table 237: *show l2circuit connections Output Fields (continued)*

Field Name	Field Description
<b>Legend for connection status (St)</b>	<p>Status of the virtual circuit connection:</p> <ul style="list-style-type: none"> <li><b>EI</b>—The local virtual circuit interface is configured with an encapsulation that is not supported.</li> <li><b>MM</b>—The two routers do not agree on an MTU value, which causes an MTU mismatch.</li> <li><b>EM</b>—The encapsulation type received on this virtual circuit from the neighbor does not match the local virtual circuit interface encapsulation type.</li> <li><b>CM</b>—The two routers do not agree on a control word, which causes a control word mismatch.</li> <li><b>VM</b>—The remote and local VLAN IDs do not match across the Layer 2 circuit.</li> <li><b>OL</b>—No advertisement has been received for this virtual circuit from the neighbor. There is no outgoing label available for use by this virtual circuit.</li> <li><b>NC</b>—The interface is not configured as a CCC or TCC interface.</li> <li><b>BK</b>—The virtual circuit has switched to a backup connection.</li> <li><b>CB</b>—The remote PE router is advertising a different cell bundle from that configured on the local PE router.</li> <li><b>LD</b>—The connection to the local site is signaled down, because the CE-facing interface to the local site is down.</li> <li><b>RD</b>—The remote neighbor is down. It has signaled a problem using the pseudowire status code.</li> <li><b>NP</b>—The router detects that interface hardware is not present. The hardware may be offline, a PIC may not be of the desired type, or the interface may be configured in a different routing instance.</li> <li><b>Dn</b>—The virtual circuit is down.</li> <li><b>VC-Dn</b>—The virtual circuit is down because there is no tunnel LSP from the local PE router to the neighbor.</li> <li><b>UP</b>—The virtual circuit is operational.</li> <li><b>CF</b>—The router cannot find enough bandwidth to the remote router to satisfy the Layer 2 circuit bandwidth requirement.</li> <li><b>IB</b>—The bit rate is incompatible for Time Division Multiplexing (TDM).</li> <li><b>TDM</b>—TDM is not configured correctly.</li> <li><b>ST</b>—The virtual circuit has been switched to a standby connection.</li> <li><b>SP</b>—The virtual circuit connection is using a static pseudowire.</li> <li><b>RS</b>—The remote site is in a standby state.</li> <li><b>XX</b>—The virtual circuit is down for an unknown reason. This is a programming error.</li> </ul>
<b>Time last up</b>	Date and time the virtual circuit was last operational.
<b># Up trans</b>	Number of times the virtual circuit came up.
<b>local-interface-name</b>	Name of the local PE-to-CE interface.
<b>Status</b>	Status of the local interface.
<b>Up</b>	Interface is operational.

Table 237: *show l2circuit connections Output Fields (continued)*

Field Name	Field Description
<b>Dn</b>	Interface is not operational.
<b>NP</b>	Not present. Interface does not exist.
<b>DS</b>	Disabled. Interface has been administratively disabled.
<b>WE</b>	Wrong encapsulation. The interface is not configured as CCC.
<b>UN</b>	Interface status is initialized.
<b>Encapsulation</b>	Encapsulation of the local interface.
<b>Flow Label Transmit</b>	Flow label transmit status.
<b>Flow Label Receive</b>	Flow label receive status.
<b>Remote PE</b>	Prefix of the remote PE router.
<b>Negotiated control-word</b>	Whether the use of the control word has been negotiated for this virtual circuit: <b>Yes (Null)</b> or <b>No</b> .
<b>Incoming label</b>	Label used by the remote side of the virtual circuit to send packets destined to the local side. This label is routed to the local virtual circuit interface.
<b>Outgoing label</b>	Label used by the local side of the virtual circuit to send packets to the remote side of the virtual circuit. Packets originated on the local virtual circuit interface are encapsulated with this label before being placed on the tunnel LSP to the neighbor for this virtual circuit. This label is allocated by the neighbor and is used in demultiplexing incoming packets destined for this virtual circuit.
<b>Negotiated PW status TLV</b>	Displays the pseudowire status type, length, and value (TLV). TLVs are a method of encoding variable-length or optional information. If the pseudowire status TLV is used, the corresponding local or neighbor PE router status code is also displayed.
<b>local PW status code</b>	If the pseudowire status TLV is used, displays the local PE router status code.
<b>Neighbor PW status code</b>	If the pseudowire status TLV is used, displays the neighbor PE router status code.
<b>Local interface</b>	Name of the local interface used for the Layer 2 circuit connection.
<b>Status</b>	Status of the local interface ( <b>Up</b> or <b>Down</b> ).
<b>Encapsulation</b>	Encapsulation configured for the local interface.
<b>APS-active</b>	Indicates that the interface belongs to the working circuit.

Table 237: show l2circuit connections Output Fields (continued)

Field Name	Field Description
APS-inactive	Indicates that the interface belongs to the protect circuit.
Connection protection	Whether or not connection protection is configured for the Layer 2 circuit to the neighbor: <b>Yes</b> or <b>No</b> .
VC bandwidth	Bandwidth requirement of the Layer 2 circuit.
Time	Time at which the event occurred.
Connection History	<p>Event types logged in history.</p> <ul style="list-style-type: none"> <li>• <b>loc intf up</b>—Local virtual circuit interface went up.</li> <li>• <b>loc intf down</b>—Local virtual circuit interface went down.</li> <li>• <b>In lbl Update</b>—Incoming label has been updated.</li> <li>• <b>Out lbl Update</b>—Outgoing label has been updated.</li> <li>• <b>PE route changed</b>—Route to PE router has been updated.</li> <li>• <b>PE route down</b>—Route to PE router is down.</li> <li>• <b>rmt side marked</b>—Remote side is marked.</li> <li>• <b>VC Dn</b>—Remote side indicated that its end of the virtual circuit is down (if the tunnel LSP from the remote side to the local side is down).</li> <li>• <b>status update timer</b>—Status update timer processing. It computes the state of the virtual circuit, and determines whether it should be advertised to or withdrawn from the remote side.</li> </ul>

## Sample Output

### show l2circuit connections

```
user@host> show l2circuit connections
Layer-2 Circuit Connections:
```

#### Legend for connection status (St)

```
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch           CF -- Call admission control failure
OL -- no outgoing label          IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC    TM -- TDM misconfiguration
BK -- Backup Connection          ST -- Standby Connection
CB -- rcvd cell-bundle size bad  SP -- Static Pseudowire
LD -- local site signaled down   RS -- remote site standby
RD -- remote site signaled down  HS -- hot standby
XX -- unknown
```

#### Legend for interface status

```
Up -- operational
Dn -- down
```

```
Neighbor: 10.255.245.51
```

Interface	Type	St	Time last up	# Up trans
ge-2/0/2.600(vc 5)	rmt	Up	Dec 7 18:11:18 2009	1

```

Remote PE: 10.255.245.51, Negotiated control-word: No
Incoming label: 299856, Outgoing label: 299808
Negotiated PW status TLV: No
Local interface: ge-2/0/2.600, Status: Up, Encapsulation: VLAN
Flow Label Transmit: No, Flow Label Receive: No
Auto-sensed or Programmed by XYZ

```

## Sample Output

### show l2circuit connections interface

```

user@host> show l2circuit connections interface t1-2/0/0:1:1.0
Layer-2 Circuit Connections:

Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
OL -- no outgoing label          IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC    TM -- TDM misconfiguration
BK -- Backup Connection          ST -- Standby Connection
CB -- rcvd cell-bundle size bad  SP -- Static Pseudowire
LD -- local site signaled down   RS -- remote site standby
RD -- remote site signaled down  HS -- hot standby
XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 10.1.1.1

```

Interface	Type	St	Time last up	# Up trans
t1-2/0/0:1:1.0(vc 1)(SP)	rmt	Up	Apr 27 04:21:02 2011	1

```

Remote PE: 10.1.1.1, Negotiated control-word: Yes (Non-null)
Incoming label: 1010001, Outgoing label: 1000001
Negotiated PW status TLV: No
Local interface: t1-1/0/0:1:1.0, Status: Up, Encapsulation: SATOP-T1,
APS-active
Local interface: t1-2/0/0:1:1.0, Status: Up, Encapsulation: SATOP-T1,
APS-inactive

```

## Sample Output

### show l2circuit connections extensive

```

user@host>show l2circuit connections extensive
Layer-2 Circuit Connections:

Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
OL -- no outgoing label          IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC    TM -- TDM misconfiguration
BK -- Backup Connection          ST -- Standby Connection
CB -- rcvd cell-bundle size bad  SP -- Static Pseudowire
LD -- local site signaled down   RS -- remote site standby

```

```

RD -- remote site signaled down  HS -- hot standby
XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 10.255.49.149
Interface                Type  St    Time last up          # Up trans
ae0.0(vc 100)            rmt   Up    Aug 31 09:36:12 2009      1
Remote PE: 10.255.49.149, Negotiated control-word: Yes (Null)
Incoming label: 299824, Outgoing label: 299776
Negotiated PW status TLV: Yes
local PW status code: 0x00000000, Neighbor PW status code: 0x00000000
Local interface: ae0.0, Status: Up, Encapsulation: ETHERNET
Connection protection: Yes
Connection History:
Aug 31 09:36:12 2009 status update timer
Aug 31 09:36:12 2009 PE route changed
Aug 31 09:36:12 2009 Out lbl Update                299776
Aug 31 09:36:12 2009 In lbl Update                  299824
Aug 31 09:36:12 2009 loc intf up                    ae0.0

```

## Sample Output

### show l2circuit connections extensive (Pseudowire Redundancy with Hot Standby)

```

user@host>show l2circuit connections extensive
Layer-2 Circuit Connections:

Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
OL -- no outgoing label         IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC   TM -- TDM misconfiguration
BK -- Backup Connection         ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down  RS -- remote site standby
RD -- remote site signaled down HS -- Hot-standby Connection
XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 192.0.2.101
Interface                Type  St    Time last up          # Up trans
ge-1/3/2.600(vc 1)      rmt   Up    Jan 24 11:00:26 2013      1
Remote PE: 192.0.2.101, Negotiated control-word: Yes (Null)
Incoming label: 299776, Outgoing label: 299776
Negotiated PW status TLV: Yes
local PW status code: 0x00000000, Neighbor PW status code: 0x00000000
Local interface: ge-1/3/2.600, Status: Up, Encapsulation: VLAN
Connection History:
Jan 24 11:00:26 2013 status update timer
Jan 24 11:00:26 2013 PE route changed
Jan 24 11:00:26 2013 Out lbl Update                299776
Jan 24 11:00:26 2013 In lbl Update                  299776
Jan 24 11:00:26 2013 loc intf up                    ge-1/3/2.600
Neighbor: 192.0.2.102

```

Interface	Type	St	Time last up	# Up trans
ge-1/3/2.600(vc 2)	rmt	HS	-----	----

Remote PE: 192.0.2.102, Negotiated control-word: Yes (Null)  
Incoming label: 299792, Outgoing label: 299776  
Negotiated PW status TLV: Yes  
local PW status code: 0x00000020, Neighbor PW status code: 0x00000000  
Local interface: ge-1/3/2.600, Status: Up, Encapsulation: VLAN

## show l2vpn connections

---

<b>Syntax</b>	<code>show l2vpn connections</code> <code>&lt;brief   extensive&gt;</code> <code>&lt;down   up   up-down&gt;</code> <code>&lt;history&gt;</code> <code>&lt;instance <i>instance</i>&gt;</code> <code>&lt;instance-history&gt;</code> <code>&lt;local-site <i>local-site</i>&gt;</code> <code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code> <code>&lt;remote-site <i>remote-site</i>&gt;</code> <code>&lt;status&gt;</code> <code>&lt;summary&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. <b>instance-history</b> option introduced in Junos OS Release 12.3R2.
<b>Description</b>	Display Layer 2 virtual private network (VPN) connections.
<b>Options</b>	<b>none</b> —Display all Layer 2 VPN connections for all routing instances.  <b>brief   extensive</b> —(Optional) Display the specified level of output.  <b>down   up   up-down</b> —(Optional) Display nonoperational, operational, or both kinds of connections.  <b>history</b> —(Optional) Display information about connection history.  <b>instance <i>instance</i></b> —(Optional) Display connections for the specified routing instance only.  <b>instance-history</b> —(Optional) Display information about connection history for a particular instance.  <b>local-site <i>local-site</i></b> —(Optional) Display connections for the specified Layer 2 VPN local site name or ID only.  <b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.  <b>remote-site <i>remote-site</i></b> —(Optional) Display connection for the specified Layer 2 VPN remote site ID only.  <b>status</b> —(Optional) Display information about the connection and interface status.  <b>summary</b> —(Optional) Display summary of all Layer 2 VPN connections information.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show l2vpn connections on page 2525</a>

[show l2vpn connections on page 2526](#)

[show l2vpn connections extensive on page 2527](#)

[show l2vpn connections extensive \(VPWS\) on page 2527](#)

**Output Fields** Table 238 on page 2523 lists the output fields for the **show l2vpn connections** command. Output fields are listed in the approximate order in which they appear.

*Table 238: show l2vpn connections Output Fields*

Field Name	Field Description
<b>Instance</b>	Name of Layer 2 VPN instance.
<b>L2vpn-id</b>	For BGP autodiscovery, a globally unique Layer 2 VPN community identifier for the instance.
<b>Local-ID</b>	BGP <b>local-address</b> assigned to the local routing device.
<b>Local site</b>	Name of local site.
<b>Local source-attachment-id</b>	For FEC 129, the VPWS source attachment identifier. The point-to-point nature of VPWS requires that you specify the source access individual identifier (SAII) and the target access individual identifier (TAII). This SAII-TAII pair defines a unique pseudowire between two PE devices.
<b>Target-attachment-id</b>	For FEC 129, the VPWS target attachment identifier. If the configured target identifier matches a source identifier advertised by a remote PE device by way of a BGP auto-discovery message, the pseudowire between that source-target pair is signaled. If there is no match between an advertised source identifier and the configured target identifier, the pseudowire is not established.
<b>Interface name</b>	Name of interface.
<b>Remote Site ID</b>	Remote site ID.
<b>Label Offset</b>	Numbers within the label block that are skipped to find the next label base.
<b>Label-base</b>	Advertises the first label in a block of labels. A remote PE router uses this first label when sending traffic toward the advertising PE router.
<b>Range</b>	Advertises the label block size.
<b>status-vector</b>	Bit vector advertising the state of local PE-CE circuits to remote PE routers. A bit value of 0 indicates that the local circuit and LSP tunnel to the remote PE router are up, whereas a value of 1 indicates either one or both are down.
<b>connection-site</b>	Name of the connection site.
<b>Type</b>	Type of connection: <b>loc</b> (local) or <b>rmt</b> (remote).
<b>St</b>	Status of the connection. (For a list of possible values, see the <b>Legend for connection status (St)</b> field.)

Table 238: *show l2vpn connections Output Fields (continued)*

Field Name	Field Description
<b>Time last up</b>	Time that the connection was last in the <b>Up</b> condition.
<b># Up trans</b>	Number of transitions from <b>Down</b> to <b>Up</b> condition.
<b>Local circuit</b>	Address and status of local circuit.
<b>Remote circuit</b>	Address and status of remote circuit.
<b>St</b>	<p>Status of the Layer 2 VPN connection (corresponds with Legend for Connection Status):</p> <ul style="list-style-type: none"> <li>• <b>EI</b>—The local Layer 2 VPN interface is configured with an encapsulation that is not supported.</li> <li>• <b>EM</b>—The encapsulation type received on this Layer 2 VPN connection from the neighbor does not match the local Layer 2 VPN connection interface encapsulation type.</li> <li>• <b>VC-Dn</b>—The virtual circuit is currently down.</li> <li>• <b>CM</b>—The two routers do not agree on a control word, which causes a control word mismatch.</li> <li>• <b>CN</b>—The virtual circuit is not provisioned properly.</li> <li>• <b>OR</b>—The label associated with the virtual circuit is out of range.</li> <li>• <b>OL</b>—No advertisement has been received for this virtual circuit from the neighbor. There is no outgoing label available for use by this virtual circuit.</li> <li>• <b>LD</b>—All of the CE-facing interfaces to the local site are down. Therefore, the connection to the local site is signaled as down to the other PE routers. No pseudowires can be established.</li> <li>• <b>RD</b>—All the interfaces to the remote neighbor are down. Therefore, the remote site has been signaled as down to the other PE routers. No pseudowires can be established.</li> <li>• <b>LN</b>—The local site has lost path selection to the remote site and therefore no pseudowires can be established from this local site.</li> <li>• <b>RN</b>—The remote site has lost path selection to a local site or other remote site and therefore no pseudowires are established to this remote site.</li> <li>• <b>XX</b>—The Layer 2 VPN connection is down for an unknown reason. This is a programming error.</li> <li>• <b>NC</b>—The interface encapsulation is not configured as an appropriate CCC, TCC, or Layer 2 VPN encapsulation.</li> <li>• <b>WE</b>—The encapsulation configured for the interface does not match the encapsulation configured for the associated connection within the Layer 2 VPN routing instance.</li> <li>• <b>NP</b>—The router detects that interface hardware is not present. The hardware might be offline, a PIC might not be of the desired type, or the interface might be configured in a different routing instance.</li> <li>• <b>-&gt;</b>—Only the outbound connection is up.</li> <li>• <b>&lt;-</b>—Only the inbound connection is up.</li> <li>• <b>Up</b>—The Layer 2 VPN connection is operational.</li> <li>• <b>Dn</b>—The Layer 2 VPN connection is down.</li> <li>• <b>CF</b>—The router cannot find enough bandwidth to the remote router to satisfy the Layer 2 VPN connection bandwidth requirement.</li> </ul>

Table 238: show l2vpn connections Output Fields (continued)

Field Name	Field Description
	<ul style="list-style-type: none"> <li>• <b>SC</b>—The local site identifier matches the remote site identifier. No pseudowire can be established between these two sites. You should configure different values for the local and remote site identifiers.</li> <li>• <b>LM</b>—The local site identifier is not the minimum designated, meaning it is not the lowest. There is another local site with a lower site identifier. Pseudowires are not being established to this local site, and the associated local site identifier is not being used to distribute Layer 2 VPN label blocks. However, this is not an error state. Traffic continues to be forwarded to the PE router interfaces connected to the local sites when the local sites are in this state.</li> <li>• <b>RM</b>—The remote site identifier is not the minimum designated, meaning it is not the lowest. There is another remote site connected to the same PE router which has lower site identifier. The PE router cannot establish a pseudowire to this remote site and the associated remote site identifier cannot be used to distribute VPLS label blocks. However, this is not an error state. Traffic can continue to be forwarded to the PE router interface connected to this remote site when the remote site is in this state.</li> <li>• <b>IL</b>—The incoming packets for the Layer 2 VPN connection have no MPLS label.</li> </ul>
Remote PE	Address of the remote provider edge router.
Incoming label	Name of the incoming label.
Outgoing label	Name of the outgoing label.
Egress Protection	Whether the given PVC is protected by connection protection logic using egress protection for BGP signaled layer 2 services.
Flow Label Receive	Capability to pop the flow label in the receive direction to the remote provider edge (PE) router
Flow Label Transmit	Capability to push the flow label in the transmit direction to the provider edge (PE) router
Time	Date and time of Layer 2 VPN connection event.
Event	Type of event.
Interface/Lbl/PE	Interface, label, or PE router.

## Sample Output

### show l2vpn connections

```

user@host> show l2vpn connections
L2VPN Connections :
Instance : vpna
Edge protection: Not-Primary
Local site: 2 (ce-2)
offset: 1, range: 3, label-base: 32768

```

```

connection-site      Type St  Time last up      # Up trans
3 (3)                loc  Up   Jul 18 20:45:46 2001      1
  Local circuit: fe-0/0/0.1, Status: Up
  Remote circuit: fe-0/0/3.0, Status: Up
1                    rmt  Up   Jul 18 21:47:25 2001      1
  Local circuit: fe-0/0/0.0, Status: Up
  Remote PE: 192.0.2.1
  Incoming label: 32768, Outgoing label: 32769
Local site: 3 (ce-3)
offset: 1, range: 2, label-base: 33792
connection-site      Type St  Time last up      # Up trans
2 (ce-b)             loc  Up   Jul 18 20:45:46 2001      1
  Local circuit: fe-0/0/0.1, Status: Up
  Remote circuit: fe-0/0/3.0, Status: Up
1                    rmt  Up   Jul 18 21:47:25 2001      1
  Local circuit: fe-0/0/3.1, Status: Up
  Remote PE: 192.0.2.1
  Incoming label: 33792, Outgoing label: 32770

```

### show l2vpn connections

```
user@host> show l2vpn connections
```

Layer-2 VPN connections:

Legend for connection status (St)

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision
LN -- local site not designated	LM -- local site ID not minimum designated
RN -- remote site not designated	RM -- remote site ID not minimum designated
XX -- unknown connection status	IL -- no incoming label
MM -- MTU mismatch	MI -- Mesh-Group ID not available
BK -- Backup connection	ST -- Standby connection
PF -- Profile parse failure	PB -- Profile busy
RS -- remote site standby	SN -- Static Neighbor
LB -- Local site not best-site	RB -- Remote site not best-site
VM -- VLAN ID mismatch	

Legend for interface status

Up -- operational  
Dn -- down

Instance: l2vpn-inst

Edge protection: Not-Primary

Local site: pe2 (2)

```

connection-site      Type St  Time last up      # Up trans
1                    rmt  Up   Jun 22 14:46:50 2015      1
  Remote PE: 10.255.255.1, Negotiated control-word: Yes (Null)
  Incoming label: 800002, Outgoing label: 800003
  Local interface: ge-0/0/1.300, Status: Up, Encapsulation: VLAN
  Flow Label Transmit: Yes, Flow Label Receive: Yes

```

## show l2vpn connections extensive

```

user@host> show l2vpn connections extensive
L2VPN Connections:
Instance: vpn-a
Edge protection: Not-Primary
Local site: ce-a (1)
  Interface name      Remote Site ID
  fe-0/0/0.0          2
  Label Offset        Offset      Range
  32768                1          2
  connection-site      Type St   Time last up      # Up trans
  2                     rmt  Up   Aug 3 00:08:14 2001      1
    Local circuit: fe-0/0/0.0, Status: Up
    Remote PE: 192.168.24.1
    Incoming label: 32769, Outgoing label: 32768
    Egress Protection: Yes
      Time              Event              Interface/Lbl/PE
      Aug 3 00:08:14 2001 PE route up
      Aug 3 00:08:14 2001 Out lbl Update      32768
      Aug 3 00:08:14 2001 In lbl Update       32769
      Aug 3 00:08:14 2001 ckt0 up             fe-0/0/0.0

```

## show l2vpn connections extensive (VPWS)

```

user@host> show l2vpn connections
Layer-2 VPN connections:

Legend for connection status (St)
EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down   NP -- interface hardware not present
CM -- control-word mismatch     -> -- only outbound connection is up
CN -- circuit not provisioned   <- -- only inbound connection is up
OR -- out of range             Up -- operational
OL -- no outgoing label        Dn -- down
LD -- local site signaled down  CF -- call admission control failure
RD -- remote site signaled down SC -- local and remote site ID collision
LN -- local site not designated LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unknown connection status IL -- no incoming label
MM -- MTU mismatch             MI -- Mesh-Group ID not available
BK -- Backup connection        ST -- Standby connection
PF -- Profile parse failure    PB -- Profile busy
RS -- remote site standby      SN -- Static Neighbor
LB -- Local site not best-site RB -- Remote site not best-site
VM -- VLAN ID mismatch

Legend for interface status
Up -- operational
Dn -- down

```

```

Instance: FEC129-VPWS
L2vpn-id: 100:100
  Number of local interfaces: 1
  Number of local interfaces up: 1
  ge-2/0/5.0
  Local source-attachment-id: 1 (ONE)
    Target-attachment-id  Type St   Time last up      # Up trans
    2                     rmt  Up   Nov 28 16:16:14 2012      1

```

```
Remote PE: 198.51.100.2, Negotiated control-word: No
Incoming label: 299792, Outgoing label: 299792
Local interface: ge-2/0/5.0, Status: Up, Encapsulation: ETHERNET
Connection History:
Nov 28 16:16:14 2012  status update timer
Nov 28 16:16:14 2012  PE route changed
Nov 28 16:16:14 2012  Out lbl Update                299792
Nov 28 16:16:14 2012  In lbl Update                  299792
Nov 28 16:16:14 2012  loc intf up                    ge-2/0/5.0
```

## show mvpn c-multicast

<b>Syntax</b>	show mvpn c-multicast <extensive   summary> <instance-name <i>instance-name</i> > <source-pe>
<b>Release Information</b>	Command introduced in Junos OS Release 8.4. Option to show <b>source-pe</b> introduced in Junos OS Release 15.1.
<b>Description</b>	Display the multicast VPN customer multicast route information.
<b>Options</b>	<b>extensive   summary</b> —(Optional) Display the specified level of output.  <b>instance-name <i>instance-name</i></b> —(Optional) Display output for the specified routing instance.  <b>source-pe</b> —(Optional) Display source-pe output for the specified c-multicast entries.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show mvpn c-multicast on page 2530</a> <a href="#">show mvpn c-multicast summary on page 2530</a> <a href="#">show mvpn c-multicast extensive on page 2530</a> <a href="#">show mvpn c-multicast source-pe on page 2531</a>
<b>Output Fields</b>	Table 239 on page 2529 lists the output fields for the <b>show mvpn c-multicast</b> command. Output fields are listed in the approximate order in which they appear.

Table 239: show mvpn c-multicast Output Fields

Field Name	Field Description	Level of Output
Instance	Name of the VPN routing instance.	summary extensive none
C-mcast IPv4 (S:G)	Customer router IPv4 multicast address.	extensive none
Ptnl	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none
St	State: <ul style="list-style-type: none"> <li>DS—Represents (S,G) and is created due to (*,G)</li> <li>RM—Remote VPN route learned from the remote PE router</li> <li>St display blank—SSM group join</li> </ul>	extensive none
MVPN instance	Name of the multicast VPN routing instance	extensive none

Table 239: show mvpn c-multicast Output Fields (continued)

Field Name	Field Description	Level of Output
C-multicast IPv4 route count	Number of customer multicast IPv4 routes associated with the multicast VPN routing instance.	summary
C-multicast IPv6 route count	Number of customer multicast IPv6 routes associated with the multicast VPN routing instance.	summary

## Sample Output

### show mvpn c-multicast

```

user@host> show mvpn c-multicast
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
  C-mcast IPv4 (S:G)          Ptnl          St
  192.168.195.78/32:203.0.113.1/24 PIM-SM:10.255.14.144, 198.51.100.1      RM
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
  C-mcast IPv4 (S:G)          Ptnl          St
  192.168.195.94/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.2      RM

```

### show mvpn c-multicast summary

```

user@host> show mvpn c-multicast summary
MVPN Summary:
Family: INET
Family: INET6

Instance: mvpn1
  C-multicast IPv6 route count: 1

```

### show mvpn c-multicast extensive

```

user@host> show mvpn c-multicast extensive
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
  C-mcast IPv4 (S:G)          Ptnl          St

```

```

192.168.195.78/32:203.0.113.1/24 PIM-SM:10.255.14.144, 198.51.100.1      RM
MVPN instance:

```

```

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

```

```

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)      RM -- remote VPN route
Instance: VPN-B
C-mcast IPv4 (S:G)              Ptnl                      St
192.168.195.94/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.2      RM

```

### show mvpn c-multicast source-pe

```

user@host> show mvpn c-multicast source-pe
Family : INET
Family : INET6

Instance : mvpn1
MVPN Mode : RPT-SPT
C-Multicast route address: ::0:ff05::1/128
MVPN Source-PE1:
    extended-community: no-advertise target:10.1.0.0:9
    Route Distinguisher: 10.1.0.0:1
    Autonomous system number: 1
    Interface: ge-0/0/9.1 Index: 343
PIM Source-PE1:
    extended-community: target:10.1.0.0:9
    Route Distinguisher: 10.1.0.0:1
    Autonomous system number: 1
    Interface: ge-0/0/9.1 Index: 343

```

## show mvpn instance

<b>Syntax</b>	<pre>show mvpn instance &lt;instance-name&gt; &lt;display-tunnel-name&gt; &lt;extensive   summary&gt; &lt;inet   inet6&gt; &lt;logical-system&gt;</pre>
<b>Release Information</b>	<p>Command introduced in Junos OS Release 8.4.</p> <p>Additional details in output for extensive option introduced in Junos OS Release 15.1.</p>
<b>Description</b>	Display the multicast VPN routing instance information according the options specified.
<b>Options</b>	<p><b>instance-name</b>—(Optional) Display statistics for the specified routing instance, or press Enter without specifying an instance name to show output for all instances.</p> <p><b>display-tunnel-name</b>—(Optional) Display the ingress provider tunnel name rather than the attribute.</p> <p><b>extensive   summary</b>—(Optional) Display the specified level of output.</p> <p><b>inet   inet6</b>—(Optional) Display output for the specified IP type.</p> <p><b>inet   inet6</b>—(Optional) Display output for the specified IP type.</p> <p><b>logical-system</b>—(Optional) Display details for the specified logical system, or type “all”.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<p><a href="#">show mvpn instance on page 2533</a></p> <p><a href="#">show mvpn instance summary on page 2534</a></p> <p><a href="#">show mvpn instance extensive on page 2534</a></p> <p><a href="#">show mvpn instance summary (IPv6) on page 2535</a></p>
<b>Output Fields</b>	Table 240 on page 2532 lists the output fields for the <b>show mvpn instance</b> command. Output fields are listed in the approximate order in which they appear.

Table 240: show mvpn instance Output Fields

Field Name	Field Description	Level of Output
MVPN instance	Name of the multicast VPN routing instance	extensive none
Instance	Name of the VPN routing instance.	summary extensive none
Provider tunnel	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none

Table 240: *show mvpn instance* Output Fields (continued)

Field Name	Field Description	Level of Output
Neighbor	Address, type of provider tunnel (I-P-tnl, inclusive provider tunnel and S-P-tnl, selective provider tunnel) and provider tunnel for each neighbor.	extensive none
C-mcast IPv4 (S:G)	Customer IPv4 router multicast address.	extensive none
C-mcast IPv6 (S:G)	Customer IPv6 router multicast address.	extensive none
Ptnl	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none
St	State: <ul style="list-style-type: none"> <li>DS—Represents (S,G) and is created due to (*G)</li> <li>RM—Remote VPN route learned from the remote PE router</li> <li>St display blank—SSM group join</li> </ul>	extensive none
Neighbor count	Number of neighbors associated with the multicast VPN routing instance.	summary
C-multicast IPv4 route count	Number of customer multicast IPv4 routes associated with the multicast VPN routing instance.	summary
C-multicast IPv6 route count	Number of customer multicast IPv6 routes associated with the multicast VPN routing instance.	summary

## Sample Output

### show mvpn instance

```

user@host> show mvpn instance
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)      RM -- remote VPN route
Instance: VPN-A
  Provider tunnel: I-P-tnl:PIM-SM:10.255.14.144, 198.51.100.1
  Neighbor                               I-P-tnl
  10.255.14.160                          PIM-SM:10.255.14.160, 198.51.100.1
  10.255.70.17                           PIM-SM:10.255.70.17, 198.51.100.1
  C-mcast IPv4 (S:G)                    Ptnl                               St
  192.168.195.78/32:203.0.113.0/24 PIM-SM:10.255.14.144, 198.51.100.1      RM
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)      RM -- remote VPN route
Instance: VPN-B

```

```

Provider tunnel: I-P-tnl:PIM-SM:10.255.14.144, 198.51.100.2
Neighbor                               I-P-tnl
10.255.14.160                          PIM-SM:10.255.14.160, 198.51.100.2
10.255.70.17                          PIM-SM:10.255.70.17, 198.51.100.2
C-mcast IPv4 (S:G)                    Ptnl                      St
192.168.195.94/32:203.0.113.1/24 PIM-SM:10.255.14.144, 198.51.100.2      RM

```

## Sample Output

### show mvpn instance summary

```
user@host> show mvpn instance summary
```

```
MVPN Summary:
```

```
Family: INET
```

```
Family: INET6
```

```
Instance: mvpn1
```

```
Sender-Based RPF: Disabled. Reason: Not enabled by configuration.
```

```
Hot Root Standby: Disabled. Reason: Not enabled by configuration.
```

```
Neighbor count: 3
```

```
C-multicast IPv6 route count: 1
```

## Sample Output

### show mvpn instance extensive

```
user@host> show mvpn instance extensive
```

```
MVPN instance:
```

```
Family : INET
```

```
Instance : vpn_blue
```

```
Customer Source: 10.1.1.1
```

```
RT-Import Target: 192.168.1.1:100
```

```
Route-Distinguisher: 192.168.1.1:100
```

```
Source-AS: 65000
```

```
Via unicast route: 10.1.0.0/16 in vpn-blue.inet.0
```

```
Candidate Source PE Set:
```

```
RT-Import 192.168.1.1:100, RD 1111:22222, Source-AS 65000
```

```
RT-Import 192.168.2.2:100, RD 1111:22222, Source-AS 65000
```

```
RT-Import 192.168.3.3:100, RD 1111:22222, Source-AS 65000
```

‘Extensive’ output will show everything in ‘detail’ output and add the list of bound c-multicast routes.

```
> show mvpn source 10.1.1.1 instance vpn_blue extensive
```

```
Family : INET
```

```
Instance : vpn_blue
```

```
Customer Source: 10.1.1.1
```

```
RT-Import Target: 192.168.1.1:100
```

```
Route-Distinguisher: 192.168.1.1:100
```

```
Source-AS: 65000
```

```
Via unicast route: 10.1.0.0/16 in vpn-blue.inet.0
```

```
Candidate Source PE Set:
```

```
RT-Import 192.168.1.1:100, RD 1111:22222, Source-AS 65000
```

```
RT-Import 192.168.2.2:100, RD 1111:22222, Source-AS 65000
```

```
RT-Import 192.168.3.3:100, RD 1111:22222, Source-AS 65000
```

```
Customer-Multicast Routes:
```

```
10.1.1.1/32:198.51.100.3/24
10.1.1.1/32:198.51.100.3/24
```

#### show mvpn instance summary (IPv6)

```
user@host> show mvpn instance summary
MVPN Summary:
Instance: VPN-A
  C-multicast IPv6 route count: 2
Instance: VPN-B
  C-multicast IPv6 route count: 2
```

## show mvpn neighbor

<b>Syntax</b>	show mvpn neighbor <extensive   summary> <inet   inet6> <instance <i>instance-name</i>   neighbor-address <i>address</i> > <logical-system <i>logical-system-name</i> >
<b>Release Information</b>	Command introduced in Junos OS Release 8.4.
<b>Description</b>	Display multicast VPN neighbor information.
<b>Options</b>	<p><b>extensive   summary</b>—(Optional) Display the specified level of output for all multicast VPN neighbors.</p> <p><b>inet   inet6</b>—(Optional) Display IPv4 or IPv6 information for all multicast VPN neighbors.</p> <p><b>instance <i>instance-name</i>   neighbor-address <i>address</i></b>—(Optional) Display multicast VPN neighbor information for the specified instance or the specified neighbor.</p> <p><b>logical-system <i>logical-system-name</i></b>—(Optional) Display multicast VPN neighbor information for the specified logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show mvpn neighbor on page 2537</a> <a href="#">show mvpn neighbor extensive on page 2537</a> <a href="#">show mvpn neighbor extensive on page 2538</a> <a href="#">show mvpn neighbor instance-name on page 2538</a> <a href="#">show mvpn neighbor neighbor-address on page 2538</a> <a href="#">show mvpn neighbor neighbor-address summary on page 2539</a> <a href="#">show mvpn neighbor neighbor-address extensive on page 2539</a> <a href="#">show mvpn neighbor neighbor-address instance-name on page 2539</a> <a href="#">show mvpn neighbor summary on page 2540</a>
<b>Output Fields</b>	<a href="#">Table 241 on page 2536</a> lists the output fields for the <b>show mvpn neighbor</b> command. Output fields are listed in the approximate order in which they appear.

Table 241: show mvpn neighbor Output Fields

Field Name	Field Description	Level of Output
<b>MVPN instance</b>	Name of the multicast VPN routing instance	extensive none
<b>Instance</b>	Name of the VPN routing instance.	summary extensive none

Table 241: *show mvpn neighbor* Output Fields (continued)

Field Name	Field Description	Level of Output
Neighbor	Address, type of provider tunnel (I-P-tnl, inclusive provider tunnel and S-P-tnl, selective provider tunnel) and provider tunnel for each neighbor.	extensive none
Provider tunnel	Provider tunnel attributes, <i>tunnel type:tunnel source, tunnel destination group</i> .	extensive none

## Sample Output

### show mvpn neighbor

```

user@host> show mvpn neighbor
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)      RM -- remote VPN route
Instance: VPN-A
Neighbor                          I-P-tnl
10.255.14.160                     PIM-SM:10.255.14.160, 192.0.2.1
10.255.70.17                     PIM-SM:10.255.70.17, 192.0.2.1
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)      RM -- remote VPN route
Instance: VPN-B
Neighbor                          I-P-tnl
10.255.14.160                     PIM-SM:10.255.14.160, 192.0.2.2
10.255.70.17                     PIM-SM:10.255.70.17, 192.0.2.2

```

## Sample Output

### show mvpn neighbor extensive

```

user@host> show mvpn neighbor extensive
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)      RM -- remote VPN route
Instance: VPN-A
Neighbor                          I-P-tnl
10.255.14.160                     PIM-SM:10.255.14.160, 192.0.2.1
10.255.70.17                     PIM-SM:10.255.70.17, 192.0.2.1
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

```

```
Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
Neighbor                             I-P-tnl
10.255.14.160                        PIM-SM:10.255.14.160, 192.0.2.2
10.255.70.17                         PIM-SM:10.255.70.17, 192.0.2.2
```

### show mvpn neighbor extensive

```
user@host> show mvpn neighbor extensive
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: mvpn-a
Neighbor                             I-P-tnl
10.255.72.45                          LDP P2MP:10.255.72.50, lsp-id 1
10.255.72.50
```

### Sample Output

#### show mvpn neighbor instance-name

```
user@host> show mvpn neighbor instance-name VPN-A
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                             I-P-tnl
10.255.14.160                        PIM-SM:10.255.14.160, 192.0.2.1
10.255.70.17                         PIM-SM:10.255.70.17, 192.0.2.1
```

### Sample Output

#### show mvpn neighbor neighbor-address

```
user@host> show mvpn neighbor neighbor-address 10.255.14.160
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                             I-P-tnl
10.255.14.160                        PIM-SM:10.255.14.160, 192.0.2.1
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel
```

```

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
Neighbor                             I-P-tnl
10.255.14.160                        PIM-SM:10.255.14.160, 192.0.2.2

```

## Sample Output

### show mvpn neighbor neighbor-address summary

```

user@host> show mvpn neighbor neighbor-address 10.255.70.17 summary
MVPN Summary:
Instance: VPN-A
Instance: VPN-B

```

## Sample Output

### show mvpn neighbor neighbor-address extensive

```

user@host> show mvpn neighbor neighbor-address 10.255.70.17 extensive
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                             I-P-tnl
10.255.70.17                        PIM-SM:10.255.70.17, 192.0.2.1
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-B
Neighbor                             I-P-tnl
10.255.70.17                        PIM-SM:10.255.70.17, 192.0.2.2

```

## Sample Output

### show mvpn neighbor neighbor-address instance-name

```

user@host> show mvpn neighbor neighbor-address 10.255.70.17 instance-name VPN-A
MVPN instance:

Legend for provider tunnel
I-P-tnl -- inclusive provider tunnel S-P-tnl -- selective provider tunnel

Legend for c-multicast routes properties (Pr)
DS -- derived from (*, c-g)          RM -- remote VPN route
Instance: VPN-A
Neighbor                             I-P-tnl
10.255.70.17                        PIM-SM:10.255.70.17, 192.0.2.1

```

## Sample Output

### show mvpn neighbor summary

```
user@host> show mvpn neighbor summary
MVPN Summary:
Family: INET
Family: INET6

Instance: mvpn1
  Neighbor count: 3
```

## show vpls connections

<b>Syntax</b>	<pre>show vpls connections &lt;brief   extensive&gt; &lt;down   up   up-down&gt; &lt;history&gt; &lt;instance <i>instance-name</i> local-site <i>local-site-name</i> remote-site <i>remote-site-name</i>&gt; &lt;instance-history&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;status&gt; &lt;summary&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p><b>instance-history</b> option introduced in Junos OS Release 12.3R2.</p>
<b>Description</b>	(T Series and M Series routers, except for the M160 router) Display virtual private LAN service (VPLS) connection information.
<b>Options</b>	<p><b>none</b>—Display information about all VPLS connections for all routing instances.</p> <p><b>brief   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>down   up   up-down</b>—(Optional) Display nonoperational, operational, or both types of connections.</p> <p><b>history</b>—(Optional) Display information about connection history.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display the VPLS connections for the specified routing instance only.</p> <p><b>instance-history</b>—(Optional) Display information about connection history for a particular instance.</p> <p><b>local-site <i>local-site-name</i></b>—(Optional) Display the VPLS connections for the specified local site name or ID only.</p> <p><b>remote-site <i>remote-site-name</i></b>—(Optional) Display the VPLS connections for the specified remote site name or ID only. Label block size information is always shown as 0 when using this option.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>status</b>—(Optional) Display information about the connection and interface status.</p> <p><b>summary</b>—(Optional) Display summary of all VPLS connections information.</p>
<b>Required Privilege Level</b>	view

**List of Sample Output** [show vpls connections on page 2546](#)  
[show vpls connections \(with FEC128 and FEC129 in the same routing-instance\) on page 2548](#)  
[show vpls connections \(with multiple pseudowires\) on page 2549](#)  
[show vpls connections extensive \(Static VPLS Neighbors\) on page 2550](#)

**Output Fields** [Table 242 on page 2542](#) lists the output fields for the **show vpls connections** command. Output fields are listed in the approximate order in which they appear.

*Table 242: show vpls connections Output Fields*

Field Name	Field Description
<b>Instance</b>	Name of the VPLS instance.
<b>Local site</b>	Name of the local site.
<b>VPLS-id</b>	Identifier for the VPLS site.
<b>Number of local interfaces</b>	Number of interfaces configured for the local site.
<b>Number of local interfaces up</b>	Number of interfaces configured for the local site that are currently up.
<b>IRB interface present</b>	Indicates whether or not an integrated routing and bridging (IRB) interface is present ( <b>yes</b> or <b>no</b> ).
<b>Intf</b>	<p>List of all of the interfaces configured for the local site. The types of interfaces can include VPLS virtual loopback tunnel interfaces and label-switched interfaces. Any interface that supports VPLS could be listed here.</p> <p>Virtual loopback tunnel interfaces are displayed using the <b>vt-fpc/pic/port.nnnnn</b> format. Label-switched interfaces are displayed using the <b>lsi.nnnnn</b> format. In both cases, <b>nnnnn</b> is a dynamically generated virtual port used to transport and receive packets from other provider edge (PE) routers in the VPLS domain.</p> <p>Each interface might include the following information:</p> <ul style="list-style-type: none"> <li>• Identification as a VPLS interface</li> <li>• Name of the associated VPLS routing instance</li> <li>• Local site number</li> <li>• Remote site number</li> <li>• VPLS neighbor address</li> <li>• VPLS identifier</li> </ul>
<b>Interface flags</b>	<p>Flag associated with the interface. Can include the following:</p> <ul style="list-style-type: none"> <li>• <b>VC-Down</b>—The virtual circuit associated with this interface is down.</li> </ul>
<b>Label-base</b>	First label in a block of labels. A remote PE router uses this first label when sending traffic toward the advertising PE router.

Table 242: *show vpls connections* Output Fields (continued)

Field Name	Field Description
<b>Offset</b>	Displays the VPLS Edge (VE) block offset in the Layer 2 VPN NLRI. The VE block offset is used to identify a label block from which a particular label value is selected to setup a pseudowire for a remote site. The block offset value itself indicates the starting VE ID that maps to the label base contained in the VPLS NLRI advertisement.
<b>Size</b>	Label block size. A configurable value that represents the number of label blocks required to cover all the pseudowires for the remote peer. Acceptable configuration values are: <b>2</b> , <b>4</b> , <b>8</b> and <b>16</b> . The default value is <b>2</b> . A value of <b>0</b> will be displayed when using the <b>remote-site</b> option.
<b>Range</b>	Label block range. A value that keeps track of the numbers of remote sites discovered within each label block.
<b>Preference</b>	Preference value advertised for a VPLS site. When multiple PE routers are assigned the same VE ID for multihoming, you might need to specify that a particular PE router acts as the designated forwarder by configuring the site preference value. The site preference indicates the degree of preference for a particular customer site. The site preference is one of the tie-breaking criteria used in a designated forwarder election.
<b>status-vector</b>	Bit vector advertising the state of local PE-CE circuits to remote PE routers. A bit value of <b>0</b> indicates that the local circuit and LSP tunnel to the remote PE router are up, whereas a value of <b>1</b> indicates either one or both are down.
<b>connection-site</b>	Name of the connection site.
<b>Neighbor</b>	IP address and VPLS identifier for the VPLS neighbor. If multiple pseudowires have been configured, the IP address will also show the PW-specific <i>vpls-id-list</i> , for example, 203.0.113.144 (vpls-id 200).
<b>Type</b>	Type of connection: <b>loc</b> (local) or <b>rmt</b> (remote).

Table 242: *show vpls connections* Output Fields (continued)

Field Name	Field Description
<b>St</b>	<p>Status of the VPLS connection (corresponds with Legend for Connection Status):</p> <ul style="list-style-type: none"> <li>• <b>EI</b>—The local VPLS interface is configured with an encapsulation that is not supported.</li> <li>• <b>EM</b>—The encapsulation type received on this VPLS connection from the neighbor does not match the local VPLS connection interface encapsulation type.</li> <li>• <b>VC-Dn</b>—The virtual circuit is currently down.</li> <li>• <b>CM</b>—The two routers do not agree on a control word, which causes a control word mismatch.</li> <li>• <b>CN</b>—The virtual circuit is not provisioned properly.</li> <li>• <b>OR</b>—The label associated with the virtual circuit is out of range.</li> <li>• <b>OL</b>—No advertisement has been received for this virtual circuit from the neighbor. There is no outgoing label available for use by this virtual circuit.</li> <li>• <b>LD</b>—All of the CE-facing interfaces to the local site are down. Therefore, the connection to the local site is signaled as down to the other PE routers. No pseudowires can be established.</li> <li>• <b>RD</b>—All the interfaces to the remote neighbor are down. Therefore, the remote site has been signaled as down to the other PE routers. No pseudowires can be established.</li> <li>• <b>LN</b>—The local site has lost path selection to the remote site and therefore no pseudowires can be established from this local site.</li> <li>• <b>RN</b>—The remote site has lost path selection to a local site or other remote site and therefore no pseudowires are established to this remote site.</li> </ul> <p>In a multihoming configuration, one multihomed PE site displays the state <b>LN</b>, and the other multihomed PE site displays the state <b>RN</b> in the following circumstances:</p> <ul style="list-style-type: none"> <li>• The multihomed links are both configured to be the backup site.</li> <li>• The two multihomed PE routers have the same site ID, but have a peering relationship with a route reflector (RR) that has a different site ID.</li> </ul> <ul style="list-style-type: none"> <li>• <b>XX</b>—The VPLS connection is down for an unknown reason. This is a programming error.</li> <li>• <b>MM</b>—The MTU for the local site and the remote site do not match.</li> <li>• <b>BK</b>—The router is using a backup connection.</li> <li>• <b>PF</b>—Profile parse failure.</li> <li>• <b>RS</b>—The remote site is in a standby state.</li> <li>• <b>NC</b>—The interface encapsulation is not configured as an appropriate CCC, TCC, or VPLS encapsulation.</li> <li>• <b>WE</b>—The encapsulation configured for the interface does not match the encapsulation configured for the associated connection within the VPLS routing instance.</li> </ul>

Table 242: *show vpls connections* Output Fields (continued)

Field Name	Field Description
	<ul style="list-style-type: none"> <li>• <b>NP</b>—The router detects that interface hardware is not present. The hardware might be offline, a PIC might not be of the desired type, or the interface might be configured in a different routing instance.</li> <li>• <b>--&gt;</b>—Only the outbound connection is up.</li> <li>• <b>&lt;--</b>—Only the inbound connection is up.</li> <li>• <b>Up</b>—The VPLS connection is operational.</li> <li>• <b>Dn</b>—The VPLS connection is down.</li> <li>• <b>CF</b>—The router cannot find enough bandwidth to the remote router to satisfy the VPLS connection bandwidth requirement.</li> <li>• <b>SC</b>—The local site identifier matches the remote site identifier. No pseudowire can be established between these two sites. You should configure different values for the local and remote site identifiers.</li> <li>• <b>LM</b>—The local site identifier is not the minimum designated, meaning it is not the lowest. There is another local site with a lower site identifier. Pseudowires are not being established to this local site, and the associated local site identifier is not being used to distribute VPLS label blocks. However, this is not an error state. Traffic continues to be forwarded to the PE router interfaces connected to the local sites when the local sites are in this state.</li> <li>• <b>RM</b>—The remote site identifier is not the minimum designated, meaning it is not the lowest. There is another remote site connected to the same PE router which has lower site identifier. The PE router cannot establish a pseudowire to this remote site and the associated remote site identifier cannot be used to distribute VPLS label blocks. However, this is not an error state. Traffic can continue to be forwarded to the PE router interface connected to this remote site when the remote site is in this state.</li> <li>• <b>IL</b>—The incoming packets for the VPLS connection have no MPLS label.</li> <li>• <b>MI</b>—The configured mesh group identifier is in use by another system in the network.</li> <li>• <b>ST</b>—The router has switched to a standby connection.</li> <li>• <b>PB</b>—Profile busy.</li> <li>• <b>SN</b>—The VPLS neighbor is static.</li> </ul>
<b>Time last up</b>	Time connection was last in the <b>Up</b> condition.
<b># Up trans</b>	Number of transitions from <b>Down</b> to <b>Up</b> condition.
<b>Status</b>	Status of the (local or remote circuit) local interface: <ul style="list-style-type: none"> <li>• <b>Up</b>—Operational</li> <li>• <b>Dn</b>—Down</li> <li>• <b>NP</b>—Not present</li> <li>• <b>DS</b>—Disabled</li> <li>• <b>WE</b>—Wrong encapsulation</li> <li>• <b>UN</b>—Uninitialized</li> </ul>
<b>Encapsulation</b>	Type of encapsulation: <b>VPLS</b> .
<b>Remote PE</b>	Address of the remote provider edge router.

Table 242: show vpls connections Output Fields (continued)

Field Name	Field Description
<b>Negotiated control-word</b>	Whether a control word has been negotiated: <b>Yes</b> or <b>No</b> .
<b>Incoming label</b>	Name of the incoming label.
<b>Outgoing label</b>	Name of the outgoing label.
<b>Negotiated PW status TLV</b>	Indicates whether or not the pseudowire status TLV has been negotiated for the VPLS connection.
<b>Local interface</b>	Provides the following information about the local interface configured for the VPLS neighbor: <ul style="list-style-type: none"> <li>• Name of the local interface</li> <li>• <b>Status</b>—Interface status (<b>Up</b> or <b>Down</b>)</li> <li>• <b>Encapsulation</b>—Interface encapsulation (for example, <b>ETHERNET</b>)</li> <li>• <b>Description</b>—Includes the VPLS instance name, the VPLS neighbor address, and the VPLS identifier</li> </ul>
<b>Time</b>	Date and time of VPLS connection event.
<b>Event</b>	Type of event.
<b>Interface/Lbl/PE</b>	Interface, label, or PE router.
<b>Connection History</b>	Each entry can include the date, time, year, and the connection event. Connection events include any of a variety of events related to VPLS connections, such as route changes, label updates, and interfaces going down or coming up.

## Sample Output

### show vpls connections

```
user@host> show vpls connections
```

```
Layer-2 VPN connections:
```

```
Legend for connection status (St)
```

```

EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch    WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down  NP -- interface hardware not present
CM -- control-word mismatch    -< -- only outbound connection is up
CN -- circuit not provisioned  >- -- only inbound connection is up
OR -- out of range            Up -- operational
OL -- no outgoing label       Dn -- down
LD -- local site signaled down CF -- call admission control failure
RD -- remote site signaled down SC -- local and remote site ID collision
LN -- local site not designated LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unn connection status  IL -- no incoming label
MM -- MTU mismatch           MI -- Mesh-Group ID not available
BK -- Backup connection      ST -- Standby connection

```

PF -- Profile parse failure      PB -- Profile busy

Legend for interface status

Up -- operational

Dn -- down

Instance: vpls-1

Local site: 1 (11)

Number of local interfaces: 1

Number of local interfaces up: 1

IRB interface present: no

lt-1/3/0.10496

vt-1/3/0.1048588      1      Intf - vpls vpls-1 local site 11 remote site 1

vt-1/2/0.1048591      2      Intf - vpls vpls-1 local site 11 remote site 2

vt-1/2/0.1048585      3      Intf - vpls vpls-1 local site 11 remote site 3

vt-1/2/0.1048587      4      Intf - vpls vpls-1 local site 11 remote site 4

vt-1/2/0.1048589      5      Intf - vpls vpls-1 local site 11 remote site 5

vt-1/3/0.1048586      6      Intf - vpls vpls-1 local site 11 remote site 6

vt-1/3/0.1048590      7      Intf - vpls vpls-1 local site 11 remote site 7

vt-1/3/0.1048584      8      Intf - vpls vpls-1 local site 11 remote site 8

Label-base	Offset	Size	Range	Preference
800256	1	16	16	100

Timer Values:

Startup wait time: 120 seconds

New site wait-time: 20 seconds

Collision detect time: 30 seconds

Reclaim wait time: 748 milliseconds

connection-site	Type	St	Time last up	# Up trans
1	rmt	Up	Apr 28 13:28:24 2009	2

Remote PE: 192.0.2.1, Negotiated control-word: No

Incoming label: 800256, Outgoing label: 800026

Local interface: vt-1/3/0.1048588, Status: Up, Encapsulation: VPLS

Description: Intf - vpls vpls-1 local site 11 remote site 1

Connection History:

Apr 28 13:28:24 2009 status update timer

Apr 28 13:28:24 2009 PE route down

Apr 28 13:24:27 2009 status update timer

Apr 28 13:24:27 2009 loc intf up vt-1/3/0.1048588

Apr 28 13:24:27 2009 PE route changed

Apr 28 13:24:27 2009 Out lbl Update 800026

Apr 28 13:24:27 2009 In lbl Update 800256

Apr 28 13:24:27 2009 loc intf down

2	rmt	Up	Apr 28 13:28:24 2009	2
---	-----	----	----------------------	---

Remote PE: 192.0.2.71, Negotiated control-word: No

Incoming label: 800257, Outgoing label: 800034

Local interface: vt-1/2/0.1048591, Status: Up, Encapsulation: VPLS

Description: Intf - vpls vpls-1 local site 11 remote site 2

Connection History:

Apr 28 13:28:24 2009 status update timer

Apr 28 13:28:24 2009 PE route down

Apr 28 13:24:28 2009 status update timer

Apr 28 13:24:28 2009 loc intf up vt-1/2/0.1048591

Apr 28 13:24:28 2009 PE route changed

```

Apr 28 13:24:28 2009 Out lbl Update      800034
Apr 28 13:24:28 2009 In lbl Update      800257
Apr 28 13:24:28 2009 loc intf down

```

### show vpls connections (with FEC128 and FEC129 in the same routing-instance)

```

user@host> show vpls connections
Instance: fec129
  L2vpn-id: 1:1
  Local-id: 203.0.113.0
FEC129-VPLS State:
  Mesh-group connections: __ves__
    Remote-id      Type  St    Time last up      # Up trans
    203.0.3.3      rmt  Up    Sep 19 09:59:56 2017      1
      Remote PE: 203.0.3.3, Negotiated control-word: No
      Incoming label: 262155, Outgoing label: 262164
      Negotiated PW status TLV: No
      Local interface: lsi.1048844, Status: Up, Encapsulation: ETHERNET
      Description: Intf - vpls fec129 local-id 10.4.4.4 remote-id 203.0.3.3
  neighbor 203.0.3.3
    Flow Label Transmit: No, Flow Label Receive: No
    203.0.2.2      rmt  Up    Sep 19 09:59:52 2017      1
      Remote PE: 203.0.2.2, Negotiated control-word: No
      Incoming label: 262154, Outgoing label: 262157
      Negotiated PW status TLV: No
      Local interface: lsi.1048846, Status: Up, Encapsulation: ETHERNET
      Description: Intf - vpls fec129 local-id 10.4.4.4 remote-id 203.0.2.2
  neighbor 203.0.2.2
    Flow Label Transmit: No, Flow Label Receive: No
    203.0.1.1      rmt  Up    Sep 19 09:59:48 2017      1
      Remote PE: 203.0.1.1, Negotiated control-word: No
      Incoming label: 262156, Outgoing label: 262157
      Negotiated PW status TLV: No
      Local interface: lsi.1048845, Status: Up, Encapsulation: ETHERNET
      Description: Intf - vpls fec129 local-id 10.4.4.4 remote-id 203.0.1.1
  neighbor 203.0.1.1
    Flow Label Transmit: No, Flow Label Receive: No

LDP-VPLS State
  Mesh-group connections: MG1
    Neighbor      Type  St    Time last up      # Up trans
    203.0.6.6(vpls-id 1)  rmt  Up    Sep 17 19:17:11 2017      1
      Remote PE: 203.0.6.6, Negotiated control-word: No
      Incoming label: 262423, Outgoing label: 262145
      Negotiated PW status TLV: No
      Local interface: lsi.1049859, Status: Up, Encapsulation: ETHERNET
      Description: Intf - vpls bgp-vpls neighbor 203.0.6.6 vpls-id 1
    Flow Label Transmit: No, Flow Label Receive: No
    203.0.7.7(vpls-id 1)  rmt  Up    Sep 17 19:17:04 2017      1
      Remote PE: 203.0.7.7, Negotiated control-word: No
      Incoming label: 262424, Outgoing label: 262145
      Negotiated PW status TLV: No
      Local interface: lsi.1049857, Status: Up, Encapsulation: ETHERNET
      Description: Intf - vpls bgp-vpls neighbor 203.0.7.7 vpls-id 1
    Flow Label Transmit: No, Flow Label Receive: No
  Mesh-group connections: MG2
    Neighbor      Type  St    Time last up      # Up trans
    203.0.5.5(vpls-id 1)  rmt  Up    Sep 17 19:17:00 2017      1
      Remote PE: 203.0.5.5, Negotiated control-word: No
      Incoming label: 262425, Outgoing label: 299872
      Negotiated PW status TLV: No

```

Local interface: lsi.1049856, Status: Up, Encapsulation: ETHERNET  
 Description: Intf - vpls bgp-vpls neighbor 203.0.5.5 vpls-id 1  
 Flow Label Transmit: No, Flow Label Receive: No

### show vpls connections (with multiple pseudowires)

user@host> show vpls connections

Layer-2 VPN connections:

Legend for connection status (St)

EI -- encapsulation invalid	NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch	WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down	NP -- interface hardware not present
CM -- control-word mismatch	-> -- only outbound connection is up
CN -- circuit not provisioned	<- -- only inbound connection is up
OR -- out of range	Up -- operational
OL -- no outgoing label	Dn -- down
LD -- local site signaled down	CF -- call admission control failure
RD -- remote site signaled down	SC -- local and remote site ID collision
LN -- local site not designated	LM -- local site ID not minimum designated
RN -- remote site not designated	RM -- remote site ID not minimum designated
XX -- unknown connection status	IL -- no incoming label
MM -- MTU mismatch	MI -- Mesh-Group ID not available
BK -- Backup connection	ST -- Standby connection
PF -- Profile parse failure	PB -- Profile busy
RS -- remote site standby	SN -- Static Neighbor
LB -- Local site not best-site	RB -- Remote site not best-site
VM -- VLAN ID mismatch	

Legend for interface status

Up -- operational  
 Dn -- down

Instance: vpls

VPLS-id: 100

Mesh-group connections: \_\_ves\_\_

Neighbor	Type	St	Time last up	# Up trans
10.255.114.3 (vpls-id 100)	rmt	Up	Apr 11 23:38:38 2013	1
Remote PE: 10.255.114.3, Negotiated control-word: No				
Incoming label: 262145, Outgoing label: 262145				
Negotiated PW status TLV: No				
Local interface: lsi.1049090, Status: Up, Encapsulation: ETHERNET				
Description: Intf - vpls h-vpls neighbor 10.255.114.3 vpls-id 100				

Mesh-group connections: spokes

Neighbor	Type	St	Time last up	# Up trans
10.255.114.4 (vpls-id 200)	rmt	Up	Apr 11 23:39:25 2013	1
Remote PE: 10.255.114.4, Negotiated control-word: No				
Incoming label: 262148, Outgoing label: 304224				
Negotiated PW status TLV: Yes				
local PW status code: 0x00000000, Neighbor PW status code: 0x00000000				
Local interface: lsi.1049091, Status: Up, Encapsulation: ETHERNET				
Description: Intf - vpls h-vpls neighbor 10.255.114.4 vpls-id 200				
10.255.114.4 (vpls-id 201)	rmt	Up	Apr 11 23:39:25 2013	1
Remote PE: 10.255.114.4, Negotiated control-word: No				
Incoming label: 262149, Outgoing label: 304225				
Negotiated PW status TLV: Yes				
local PW status code: 0x00000000, Neighbor PW status code: 0x00000000				
Local interface: lsi.1049096, Status: Up, Encapsulation: ETHERNET				
Description: Intf - vpls h-vpls neighbor 10.255.114.4 vpls-id 201				

## show vpls connections extensive (Static VPLS Neighbors)

```
user@host> show vpls connections extensive instance red
```

```
Layer-2 VPN connections:
```

```
Legend for connection status (St)
```

```
EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down   NP -- interface hardware not present
CM -- control-word mismatch     -> -- only outbound connection is up
CN -- circuit not provisioned   <- -- only inbound connection is up
OR -- out of range             Up -- operational
OL -- no outgoing label        Dn -- down
LD -- local site signaled down  CF -- call admission control failure
RD -- remote site signaled down SC -- local and remote site ID collision
LN -- local site not designated LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unnn connection status   IL -- no incoming label
MM -- MTU mismatch            MI -- Mesh-Group ID not available
BK -- Backup connection        ST -- Standby connection
PF -- Profile parse failure    PB -- Profile busy
RS -- remote site standby      SN -- Static Neighbor
```

```
Legend for interface status
```

```
Up -- operational
Dn -- down
```

```
Instance: static
```

```
VPLS-id: 1
```

```
Number of local interfaces: 1
```

```
Number of local interfaces up: 1
```

```
ge-0/0/5.0
```

```
lsi.1049344 Intf - vpls static neighbor 10.255.114.3 vpls-id
```

```
1
```

```
Neighbor          Type St    Time last up      # Up trans
10.255.114.3(vpls-id 1)(SN) rmt Up    Mar  4 08:48:41 2010      1
```

```
Remote PE: 10.255.114.3, Negotiated control-word: No
```

```
Incoming label: 29696, Outgoing label: 29697
```

```
Negotiated PW status TLV: No
```

```
Local interface: lsi.1049344, Status: Up, Encapsulation: ETHERNET
```

```
Description: Intf - vpls static neighbor 10.255.114.3 vpls-id 1
```

```
Connection History:
```

```
Mar  4 08:48:41 2010 status update timer
```

```
Mar  4 08:48:41 2010 PE route changed
```

```
Mar  4 08:48:41 2010 Out lbl Update 29697
```

```
Mar  4 08:48:41 2010 In lbl Update 29696
```

```
Mar  4 08:48:41 2010 loc intf up lsi.1049344
```

```
user@PE1> show vpls connections extensive (Multihoming with FEC 129)
```

```
Layer-2 VPN connections:
```

```
Legend for connection status (St)
```

```
EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch     WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down   NP -- interface hardware not present
CM -- control-word mismatch     -> -- only outbound connection is up
CN -- circuit not provisioned   <- -- only inbound connection is up
OR -- out of range             Up -- operational
OL -- no outgoing label        Dn -- down
LD -- local site signaled down  CF -- call admission control failure
```

```

RD -- remote site signaled down  SC -- local and remote site ID collision
LN -- local site not designated  LM -- local site ID not minimum designated
RN -- remote site not designated  RM -- remote site ID not minimum designated
XX -- unknown connection status  IL -- no incoming label
MM -- MTU mismatch               MI -- Mesh-Group ID not available
BK -- Backup connection          ST -- Standby connection
PF -- Profile parse failure       PB -- Profile busy
RS -- remote site standby         SN -- Static Neighbor
LB -- Local site not best-site    RB -- Remote site not best-site
VM -- VLAN ID mismatch

```

#### Legend for interface status

```

Up -- operational
Dn -- down

```

#### Instance: green

```
L2vpn-id: 100:100
```

```
Local-id: 192.0.2.2
```

```
Number of local interfaces: 2
```

```
Number of local interfaces up: 2
```

```
ge-0/3/1.0
```

```
ge-0/3/3.0
```

```
lsi.101711873
```

```
Intf - vpls green local-id 192.0.2.2 remote-id
```

```
192.0.2.4 neighbor 192.0.2.4
```

Remote-id	Type	St	Time last up	# Up trans
192.0.2.4	rmt	Up	Jan 31 13:49:52 2012	1

```
Remote PE: 192.0.2.4, Negotiated control-word: No
```

```
Incoming label: 262146, Outgoing label: 262146
```

```
Local interface: lsi.101711873, Status: Up, Encapsulation: ETHERNET
```

```
Description: Intf - vpls green local-id 192.0.2.2 remote-id 192.0.2.4
```

```
neighbor 192.0.2.4
```

#### Connection History:

Jan 31 13:49:52 2012	status update timer
Jan 31 13:49:52 2012	PE route changed
Jan 31 13:49:52 2012	Out lbl Update 262146
Jan 31 13:49:52 2012	In lbl Update 262146
Jan 31 13:49:52 2012	loc intf up lsi.101711873

#### Multi-home:

Local-site	Id	Pref	State
test	1	100	Up

```
Number of interfaces: 1
```

```
Number of interfaces up: 1
```

```
ge-0/3/1.0
```

#### Received multi-homing advertisements:

Remote-PE	Pref	flag	Description
192.0.2.4	100	0x0	

## show vpls flood event-queue

---

**Syntax**    show vpls flood event-queue

**Release Information**    Command introduced in Junos OS Release 8.0.

**Description**    Display the pending events in the VPLS flood queue.

**Options**    This command has no options.

**Required Privilege Level**    view

**List of Sample Output**    [show vpls flood event-queue on page 2552](#)

**Output Fields**    [Table 243 on page 2552](#) lists the output fields for the **show vpls flood event-queue** command. Output fields are listed in the approximate order in which they appear.

*Table 243: show vpls flood event-queue Output Fields*

Field Name	Field Description
<b>Current Pending Event</b>	Provides information on the current event in the VPLS flood event queue.
<b>Name</b>	Name of the event.
<b>Owner Name</b>	Name of the interface associated with the flood event.
<b>Pending Op</b>	Pending operation for the event.
<b>Last Error</b>	Name of the last error encountered.
<b>Number of Retries</b>	Number of attempts made to update the event queue.
<b>Pending Event List</b>	List of the events awaiting processing.
<b>Event Name</b>	Name of the event.
<b>Pending Op</b>	Pending operation for the event.
<b>Event Identifier</b>	Name of the interface associated with the flood event.

## Sample Output

### show vpls flood event-queue

```
user@host> show vpls flood event-queue
```

## Current Pending Event

Name: Flood Nexthop

Owner Name:ge-4/3/0.0

Pending Op: ADD

Last Error:ENOMEM

Number of Retries:3

Pending Event List:

Event Name	Pending Op	Event Identifier
Flood Nexthop	ADD	ge-4/3/0.0
Flood Route	ADD	ge-4/3/0.0

## show vpls flood instance

**Syntax** show vpls flood instance  
 <brief | detail | extensive>  
 <instance-name>  
 <logical-system *logical-system-name*>

**Release Information** Command introduced in Junos OS Release 8.0.

**Description** Display VPLS information related to the flood process.

**Options** **none**—Display VPLS information related to the flood process for all routing instances.

**brief | detail | extensive**—(Optional) Display the specified level of output.

**instance-name**—(Optional) Display VPLS information related to the flood process for the specified routing instance.

**logical-system *logical-system-name***—(Optional) Display VPLS information related to the flood process for the specified logical system.

**Required Privilege Level** view

**List of Sample Output** [show vpls flood instance on page 2555](#)  
[show vpls flood instance logical-system-name on page 2555](#)  
[show vpls flood instance detail on page 2555](#)

**Output Fields** [Table 244 on page 2554](#) lists the output fields for the **show vpls flood instance** command. Output fields are listed in the approximate order in which they appear.

*Table 244: show vpls flood instance Output Fields*

Field Name	Field Description
Logical system	Name of the logical system.
Name	Name of the VPLS routing instance.
CEs	Number of CE routers connected to the VPLS instance.
VEs	Number of VE routers connected to the VPLS instance.
Flood routes	List of all flood routes associated with the VPLS instance.
Prefix	Prefix for the route.
Type	Type of route.

Table 244: *show vpls flood instance* Output Fields (continued)

Field Name	Field Description
Owner	VPLS routing instance or interface associated with the route.
NhType	Next-hop type. For example, <b>flood</b> for a flood route.
Nhindex	Next-hop index number for the route.

## Sample Output

### show vpls flood instance

```

user@host> show vpls flood instance

Logical system: __example_ls1__
Name: green
CEs: 1
VEs: 1
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  default ALL_CE_FLOOD green       flood       383
  0x47/16 CE_FLOOD fe-1/2/1.0 flood       388

```

### show vpls flood instance logical-system-name

```

user@host: __example_ls1__> show vpls flood instance example_ls1

Logical system: __example_ls1__
Name: green
CEs: 1
VEs: 1
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  default ALL_CE_FLOOD green       flood       383
  0x47/16 CE_FLOOD fe-1/2/1.0 flood       388

```

### show vpls flood instance detail

```

user@host: __example_ls1__> show vpls flood instance detail

Logical system: __example_ls1__
Name: green
CEs: 1
VEs: 1
Flood Routes:
  Prefix  Type      Owner      NhType      NhIndex
  default ALL_CE_FLOOD green       flood       383
  0x47/16 CE_FLOOD fe-1/2/1.0 flood       388

```

## show vpls flood route

**Syntax** `show vpls flood route`  
 (all-ce-flood instance-name *instance-name* <logical-system-name *logical-system-name*>  
 |  
 ce-flood interface *interface-name*)

**Release Information** Command introduced in Junos OS Release 8.0.

**Description** Display VPLS route information related to the flood process for either the specified routing instance or the specified interface.

**Options** **all-ce-flood**—Display the flood next-hop route for all customer edge routers for traffic coming from the core of the network.

**ce-flood interface *interface-name***—Display the flood next-hop route for traffic coming from the specified customer edge interface.

**instance-name *instance-name***—Display the flood routes for the specified instance.

**logical-system-name *logical-system-name***—(Optional) Specify the logical system whose flood routes you want to display. You can only specify the default logical system name for VPLS. The default logical system name is `__example_ls1__` (the name must be entered in the command with the underscore characters).

**Required Privilege Level** view

**List of Sample Output** [show vpls flood route all-ce-flood on page 2557](#)  
[show vpls flood route ce-flood on page 2557](#)

**Output Fields** [Table 245 on page 2556](#) lists the output for the **show vpls flood route** command. Output fields are listed in the approximate order in which they appear.

*Table 245: show vpls flood route Output Fields*

Field Name	Field Description
Flood route prefix	Prefix for the flood route.
Flood route type	Type of flood route (either <b>CE_FLOOD</b> or <b>ALL_CE_FLOOD</b> ).
Flood route owner	VPLS routing instance or interface associated with the flood route.
Nexthop type	Next-hop type. For example, <b>flood</b> for a flood route.
Nexthop index	Next-hop index number for the route.
Interfaces flooding to	Interfaces to which VPLS routes are being flooded.

Table 245: show vpls flood route Output Fields (continued)

Field Name	Field Description
Name	Name of the interface.
Type	Type of VPLS router (CE or VE).
Nh type	Next-hop type.
Index	Index number for the flood route.

## Sample Output

### show vpls flood route all-ce-flood

```
user@host: __example_lsl__> show vpls flood route all-ce-flood logical-system-name
__example_lsl__instance-name green
```

```
Flood route prefix: default
Flood route type: ALL_CE_FLOOD
Flood route owner: green
Nexthop type: flood
Nexthop index: 383
  Interfaces Flooding to:
    Name          Type          NhType          Index
    fe-1/2/1.0    CE
```

### show vpls flood route ce-flood

```
user@host: __example_lsl__> show vpls flood route ce-flood interface fe-1/2/1.0
```

```
Flood route prefix: 0x47/16
Flood route type: CE_FLOOD
Flood route owner: fe-1/2/1.0
Nexthop type: flood
Nexthop index: 388
  Interfaces Flooding to:
    Name          Type          NhType          Index
    lsi.49152      VE            indr            262142
```

## show vpls mac-table

---

Syntax	<pre>show vpls mac-table &lt;age&gt; &lt;brief   detail   extensive   summary&gt; &lt;bridge-domain <i>bridge-domain-name</i>&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;mac-address&gt; &lt;vlan-id <i>vlan-id-number</i>&gt;</pre>
Release Information	Command introduced in Junos OS Release 8.5. Command introduced in Junos OS Release 15.1.
Description	Display learned virtual private LAN service (VPLS) media access control (MAC) address information.
Options	<p><b>none</b>—Display all learned VPLS MAC address information.</p> <p><b>age</b>— (Optional) Display age of a single mac-address.</p> <p><b>brief   detail   extensive   summary</b>—(Optional) Display the specified level of output.</p> <p><b>bridge-domain <i>bridge-domain-name</i></b>—(Optional) Display learned VPLS MAC addresses for the specified bridge domain.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display learned VPLS MAC addresses for the specified instance.</p> <p><b>interface <i>interface-name</i></b>—(Optional) Display learned VPLS MAC addresses for the specified instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Display learned VPLS MAC addresses for all logical systems or for the specified logical system.</p> <p><b>mac-address</b>—(Optional) Display the specified learned VPLS MAC address information..</p> <p><b>vlan-id <i>vlan-id-number</i></b>—(Optional) Display learned VPLS MAC addresses for the specified VLAN.</p>
Required Privilege Level	view
List of Sample Output	<p><a href="#">show vpls mac-table on page 2560</a></p> <p><a href="#">show vpls mac-table (with Layer 2 Services over GRE Interfaces) on page 2560</a></p> <p><a href="#">show vpls mac-table (with VXLAN enabled) on page 2560</a></p> <p><a href="#">show vpls mac-table age (for GE interface) on page 2561</a></p> <p><a href="#">show vpls mac-table age (for AE interface) on page 2561</a></p> <p><a href="#">show vpls mac-table count on page 2561</a></p>

[show vpls mac-table detail on page 2562](#)  
[show vpls mac-table extensive on page 2562](#)

**Output Fields** [Table 246 on page 2559](#) describes the output fields for the **show vpls mac-table** command. Output fields are listed in the approximate order in which they appear.

*Table 246: show vpls mac-table Output fields*

Field Name	Field Description
Age	Age of a single mac-address.
Routing instance	Name of the routing instance.
Bridging domain	Name of the bridging domain.
MAC address	MAC address or addresses learned on a logical interface.
MAC flags	Status of MAC address learning properties for each interface: <ul style="list-style-type: none"> <li>• <b>S</b>—Static MAC address configured.</li> <li>• <b>D</b>—Dynamic MAC address learned.</li> <li>• <b>SE</b>—MAC accounting is enabled.</li> <li>• <b>NM</b>—Nonconfigured MAC.</li> </ul>
Logical interface	Name of the logical interface.
MAC count	Number of MAC addresses learned on a specific routing instance or interface.
Learning interface	Logical interface or logical Label Switched Interface (LSI) the address is learned on.
Base learning interface	Base learning interface of the MAC address. This field is introduced in Junos OS Release 14.2.
Learn VLAN ID/VLAN	VLAN ID of the routing instance or bridge domain in which the MAC address was learned.
VXLAN ID/VXLAN	VXLAN Network Identifier (VNI)
Layer 2 flags	Debugging flags signifying that the MAC address is present in various lists.
Epoch	Spanning Tree Protocol epoch number identifying when the MAC address was learned. Used for debugging.
Sequence number	Sequence number assigned to this MAC address. Used for debugging.
Learning mask	Mask of Packet Forwarding Engines where this MAC address was learned. Used for debugging.
IPC generation	Creation time of the logical interface when this MAC address was learned. Used for debugging.

## Sample Output

### show vpls mac-table

```

user@host> show vpls mac-table
MAC flags (S -static MAC, D -dynamic MAC,
           SE -Statistics enabled, NM -Non configured MAC)

Routing instance : vpls_ldp1
VLAN : 223
  MAC          MAC      Logical
  address      flags    interface
  00:00:5e:00:53:5d  D      ge-0/2/5.400

MAC flags (S -static MAC, D -dynamic MAC,
           SE -Statistics enabled, NM -Non configured MAC)

Routing instance : vpls_red
VLAN : 401
  MAC          MAC      Logical
  address      flags    interface
  00:00:5e:00:53:12  D      lsi.1051138
  00:00:5e:00:53:f0  D      lsi.1051138

```

### show vpls mac-table (with Layer 2 Services over GRE Interfaces)

```

user@host> show vpls mac-table
MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
           SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : vpls_4site:1000
Bridging domain : __vpls_4site:1000__, MAC          MAC      Logical
  address      flags    interface
  00:00:5e:00:53:f4  D,SE  ge-4/2/0.1000
  00:00:5e:00:53:33  D,SE  lsi.1052004
  00:00:5e:00:53:32  D,SE  lsi.1048840
  00:00:5e:00:53:14  D,SE  lsi.1052005
  00:00:5e:00:53:f7  D,SE  gr-1/2/10.10

```

### show vpls mac-table (with VXLAN enabled)

```

user@host> show vpls mac-table
MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
           SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : vpls_4site:1000
Bridging domain : __vpls_4site:1000__, VLAN : 4094,4093
VXLAN: Id : 300, Multicast group: 233.252.0.1
  MAC          MAC      Logical
  address      flags    interface
  00:00:5e:00:53:f4  D,SE  ge-4/2/0.1000
  00:00:5e:00:53:33  D,SE  lsi.1052004
  00:00:5e:00:53:32  D,SE  lsi.1048840
  00:00:5e:00:53:14  D,SE  lsi.1052005
  00:00:5e:00:53:f7  D,SE  vtep.1052010
  00:00:5e:00:53:3f  D,SE  vtep.1052011

```

### show vpls mac-table age (for GE interface)

```
user@host> show vpls mac-table age 00:00:5e:00:53:1a instance vpls_instance_1
MAC Entry Age information
Current Age: 4 seconds
```

### show vpls mac-table age (for AE interface)

```
user@host> show vpls mac-table age 000:00:5e:00:53:1a instance vpls_instance_1
MAC Entry Age information
Current Age on FPC1: 102 seconds
Current Age on FPC2: 94 seconds
```

### show vpls mac-table count

```
user@host> show vpls mac-table count
0 MAC address learned in routing instance __example_private1__
```

MAC address count per interface within routing instance:

Logical interface	MAC count
lc-0/0/0.32769	0
lc-0/1/0.32769	0
lc-0/2/0.32769	0
lc-2/0/0.32769	0
lc-0/3/0.32769	0
lc-2/1/0.32769	0
lc-9/0/0.32769	0
lc-11/0/0.32769	0
lc-2/2/0.32769	0
lc-9/1/0.32769	0
lc-11/1/0.32769	0
lc-2/3/0.32769	0
lc-9/2/0.32769	0
lc-11/2/0.32769	0
lc-11/3/0.32769	0
lc-9/3/0.32769	0

MAC address count per learn VLAN within routing instance:

Learn VLAN ID	MAC count
0	0

1 MAC address learned in routing instance vpls\_ldp1

MAC address count per interface within routing instance:

Logical interface	MAC count
lsi.1051137	0
ge-0/2/5.400	1

MAC address count per learn VLAN within routing instance:

Learn VLAN ID	MAC count
0	1

1 MAC address learned in routing instance vpls\_red

MAC address count per interface within routing instance:

Logical interface	MAC count
ge-0/2/5.300	1

MAC address count per learn VLAN within routing instance:

Learn VLAN ID	MAC count
0	1

### show vpls mac-table detail

```

user@host> show vpls mac-table detail
MAC address: 00:00:5e:00:53:5d
Routing instance: vpls_ldp1
Learning interface: ge-0/2/5.400
Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
Epoch: 0                               Sequence number: 1
Learning mask: 0x1                       IPC generation: 0

MAC address: 00:00:5e:00:53:5d
Routing instance: vpls_red
Learning interface: ge-0/2/5.300
Layer 2 flags: in_ifd, in_ifl, in_vlan, kernel
Epoch: 0                               Sequence number: 1
Learning mask: 0x1                       IPC generation: 0

```

### show vpls mac-table extensive

```

user@host> show vpls mac-table extensive

MAC address: 00:00:5e:00:53:00
Routing instance: vpls_1
Bridging domain: __vpls_1__, VLAN : NA
Learning interface: lsi.1049165
Base learning interface: lsi.1049165
Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
Epoch: 0                               Sequence number: 1
Learning mask: 0x00000001

MAC address: 00:00:5e:00:53:01
Routing instance: vpls_1
Bridging domain: __vpls_1__, VLAN : NA
Learning interface: lsi.1049165
Base learning interface: lsi.1049165
Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
Epoch: 0                               Sequence number: 1
Learning mask: 0x00000001

MAC address: 00:00:5e:00:53:02
Routing instance: vpls_1
Bridging domain: __vpls_1__, VLAN : NA
Learning interface: lsi.1049165
Base learning interface: lsi.1049165
Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
Epoch: 0                               Sequence number: 1
Learning mask: 0x00000001

MAC address: 00:00:5e:00:53:03
Routing instance: vpls_1
Bridging domain: __vpls_1__, VLAN : NA
Learning interface: lsi.1049165
Base learning interface: lsi.1049165
Layer 2 flags: in_hash,in_ifd,in_ifl,in_vlan,in_rtt,kernel,in_ifbd
Epoch: 0                               Sequence number: 1
Learning mask: 0x00000001

```

## show vpls statistics

<b>Syntax</b>	show vpls statistics <instance <i>instance-name</i> > <logical-system (all   <i>logical-system-name</i> )>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(T Series and M Series routers, except for the M160 router) Display virtual private LAN service (VPLS) statistics.
<b>Options</b>	<p><b>none</b>—Display VPLS statistics for all routing instances.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display VPLS statistics for a specific VPLS routing instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show vpls statistics on page 2564</a> <a href="#">show vpls statistics instance on page 2565</a>
<b>Output Fields</b>	Table 247 on page 2563 lists the output fields for the <b>show vpls statistics</b> command. Output fields are listed in the approximate order in which they appear.

*Table 247: show vpls statistics Output Fields*

Field Name	Field Description
Instance	Name of the VPLS instance.
Local interface	Name of the local VPLS virtual loopback tunnel interface, <b>vt-fpc/pic/port.nnnnn</b> , where <b>nnnnn</b> is a dynamically generated virtual port used to transport and receive packets from other provider edge (PE) routers in the VPLS domain.
Index	Number associated with the next hop.
Remote provider edge router	Address of the remote provider edge router.
Multicast packets	Number of multicast packets received.
Multicast bytes	Number of multicast bytes received.
Flood packets	Number of VPLS flood packets received.

Table 247: show vpls statistics Output Fields (continued)

Field Name	Field Description
Flood bytes	Number of VPLS flood bytes received.
Current MAC count	Number of MAC addresses learned by the interface and the configured maximum limit on the number of MAC addresses that can be learned.

## Sample Output

### show vpls statistics

```
user@host> show vpls statistics
```

```
VPLS statistics:
```

```
Instance: green
```

```
Local interface: fe-2/2/1.0, Index: 69
Multicast packets:      1
Multicast bytes   :      60
Flooded packets   :      18
Flooded bytes    :    2556
Current MAC count:      1
```

```
Local interface: lt-0/3/0.2, Index: 72
Multicast packets:      3
Multicast bytes   :    153
Flooded packets   :      1
Flooded bytes    :      51
Current MAC count:      1
```

```
Local interface: lsi.32769, Index: 75
Current MAC count:      0
```

```
Local interface: lsi.32771, Index: 77
Remote PE: 10.255.14.222
Current MAC count:      2
```

```
Instance: red
```

```
Local interface: vt-0/3/0.32768, Index: 74
Multicast packets:      0
Multicast bytes   :      0
Flooded packets   :      0
Flooded bytes    :      0
Current MAC count:      0
```

```
Local interface: vt-0/3/0.32770, Index: 76
Multicast packets:      0
Multicast bytes   :      0
Flooded packets   :      0
Flooded bytes    :      0
Current MAC count:      0
```

**show vpls statistics instance**

```
user@host> show vpls statistics instance red
```

Layer-2 VPN Statistics:

Instance: red

Local interface: vt-3/2/0.32768, Index: 73

Remote provider edge router: 10.255.17.35

Multicast packets: 0

Multicast bytes : 0

Flood packets : 0

Flood bytes : 0

Current MAC count: 1 (Limit 20)

