

Junos[®] OS

Tunnel and Encryption Services Interfaces User Guide for Routing Devices

Published
2020-06-17

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos[®] OS Tunnel and Encryption Services Interfaces User Guide for Routing Devices
Copyright © 2020 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

About the Documentation | x

Documentation and Release Notes | x

Using the Examples in This Manual | x

Merging a Full Example | xi

Merging a Snippet | xii

Documentation Conventions | xii

Documentation Feedback | xv

Requesting Technical Support | xv

Self-Help Online Tools and Resources | xvi

Creating a Service Request with JTAC | xvi

1

Tunnel Services

Tunnel Services Overview | 18

Tunnel Services Overview | 18

Tunnel Interfaces on MX Series Routers with MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E | 22

Packet Forwarding Engine Mapping and Tunnel Bandwidth for MPC7E-MRATE | 22

Packet Forwarding Engine Mapping and Tunnel Bandwidth for MPC7E-10G | 23

Packet Forwarding Engine Mapping and Tunnel Bandwidth for MX2K-MPC8E | 23

Packet Forwarding Engine Mapping and Tunnel Bandwidth for MX2K-MPC9E | 24

Dynamic Tunnels Overview | 25

Configuring Tunnel Interfaces | 25

Tunnel Interface Configuration on MX Series Routers Overview | 26

Configuring Tunnel Interfaces on an MX Series Router with a 16x10GE 3D MPC | 28

Configuring Tunnel Interfaces on MX Series Routers with the MPC3E | 29

Example: Configuring Tunnel Interfaces on the MPC3E | 30

Configuring Tunnel Interfaces on MX Series Routers with MPC4E | 32

Configuring Tunnel Interfaces on MX Series Routers with MPC7E-MRATE/MPC7E-10G | 33

Configuring Tunnel Interfaces on MX Series Routers with MX2K-MPC8E | 34

- Configuring Tunnel Interfaces on MX Series Routers with MX2K-MPC9E | 35
- Example: Configuring Tunnel Interfaces on a Gigabit Ethernet 40-Port DPC | 36
- Example: Configuring Tunnel Interfaces on a 10-Gigabit Ethernet 4-Port DPC | 36
- Configuring Tunnel Interfaces on MX 204 Routers | 37
- Configuring Tunnel Interfaces on T4000 Routers | 38

Configuring Flexible Tunnel Interfaces | 39

- Flexible Tunnel Interfaces Overview | 39
 - Flexible Tunnel Interfaces on MX Series Routers | 40
 - Flexible Tunnel Interfaces on PTX Series Routers and QFX Series Switches | 41
 - Benefits of Flexible Tunnel Interfaces | 42
 - Limitations of Flexible Tunnel Interfaces | 43
- Configuring Flexible Tunnel Interfaces | 44
 - Configuring FTI on PE1 | 44
 - Verification | 47
- Example: Configuring Flexible Tunnel Interfaces on MX Series Routers | 48

Configuring GRE Tunnel Interfaces | 54

- Understanding Generic Routing Encapsulation on ACX Series | 55
 - Overview of GRE | 55
 - GRE Tunneling | 56
 - Configuration Limitations | 57
- Configuring Generic Routing Encapsulation Tunneling on ACX Series | 58
 - Configuring a GRE Tunnel Port | 58
 - Configuring Tunnels to Use Generic Routing Encapsulation | 59
- GRE Keepalive Time Overview | 60
- Configuring GRE Keepalive Time | 61
 - Configuring Keepalive Time and Hold time for a GRE Tunnel Interface | 62
 - Display GRE Keepalive Time Configuration | 63
 - Display Keepalive Time Information on a GRE Tunnel Interface | 63
- Enabling Fragmentation on GRE Tunnels | 65

Configuring IP Tunnel Interfaces | 66

- Configuring IPv6-over-IPv4 Tunnels | 66
- Example: Configuring an IPv6-over-IPv4 Tunnel | 67

Filtering Unicast Packets Through Multicast Tunnel Interfaces | 68

Configuring Unicast Tunnels | 69

Configuring a Key Number on GRE Tunnels | 71

Enabling Packet Fragmentation on GRE Tunnels Prior to GRE Encapsulation | 72

Specifying an MTU Setting for the Tunnel | 72

Configuring a GRE Tunnel to Copy ToS Bits to the Outer IP Header | 73

Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation | 73

Support for IPv6 GRE tunnels | 74

Examples: Configuring Unicast Tunnels | 75

Restricting Tunnels to Multicast Traffic | 76

Connecting Logical Systems Using Logical Tunnel Interfaces | 77

Configuring Logical Tunnel Interfaces | 77

Connecting Logical Systems | 78

Guidelines for Configuring Logical Tunnels on ACX Series Routers | 79

Example: Configuring Logical Tunnels | 82

Configuring an Interface in the VRF Domain to Receive Multicast Traffic | 83

Configuring a Proxy Logical Interface in the Global Domain | 84

Associating the Proxy Logical Interface to a Logical Interface in a VRF Domain | 85

Limitations | 85

Redundant Logical Tunnels Overview | 86

Redundant Logical Tunnel Configuration | 86

Redundant Logical Tunnel Failure Detection and Failover | 87

Configuring Redundant Logical Tunnels | 88

Example: Configuring Redundant Logical Tunnels | 89

Configuring Layer 2 Ethernet Services over GRE Tunnel Interfaces | 101

Layer 2 Services over GRE Tunnel Interfaces on MX Series with MPCs | 102

Format of GRE Frames and Processing of GRE Interfaces for Layer 2 Ethernet Packets | 103

Guidelines for Configuring Layer 2 Ethernet Traffic Over GRE Tunnels | 104

- Sample Scenarios of Configuring Layer 2 Ethernet Traffic Over GRE Tunnels | 105
- Configuring Layer 2 Services over GRE Logical Interfaces in Bridge Domains | 106
- Example: Configuring Layer 2 Services Over GRE Logical Interfaces in Bridge Domains | 107
- Example: Configuring Layer 2 Services Over GRE Logical Interfaces in Bridge Domains with IPv6 Transport | 114

Configuring PIM Tunnels | 122

Facilitating VRF Table Lookup Using Virtual Loopback Tunnel Interfaces | 122

- Configuring Virtual Loopback Tunnels for VRF Table Lookup | 123
- Configuring Tunnel Interfaces for Routing Table Lookup | 125
- Example: Configuring a Virtual Loopback Tunnel for VRF Table Lookup | 126
- Example: Virtual Routing and Forwarding (VRF) and Service Configuration | 127

2

Encryption Services

Encryption Services Overview | 130

Configuring Encryption Interfaces | 130

- Configuring Encryption Interfaces | 130
- Specifying the Security Association Name for Encryption Interfaces | 131
- Configuring the MTU for Encryption Interfaces | 131
- Example: Configuring an Encryption Interface | 132

Configuring Filters for Traffic Transiting the ES PIC | 132

- Traffic Overview | 133
- Configuring the Security Association | 134
- Configuring an Outbound Traffic Filter | 135
- Applying the Outbound Traffic Filter | 136
- Configuring an Inbound Traffic Filter | 137
- Applying the Inbound Traffic Filter to the Encryption Interface | 137

Configuring an ES Tunnel Interface for a Layer 3 VPN | 139

Configuring ES PIC Redundancy | 139

- Example: Configuring ES PIC Redundancy | 139
- Configuring IPsec Tunnel Redundancy | 140

3

Configuration Statements

address (Interfaces) | 145

allow-fragmentation | 146

`apply-groups-except` | 147

`backup-destination` | 148

`backup-interface` | 149

`bandwidth (Tunnel Services)` | 150

`clear-dont-fragment-bit (Interfaces GRE Tunnels)` | 152

`copy-tos-to-outer-ip-header` | 154

`core-facing` | 155

`destination (Interfaces)` | 156

`destination (Routing Instance)` | 157

`destination (Tunnel Remote End)` | 158

`destination-networks` | 159

`destination-udp-port (FTI)` | 160

`do-not-fragment` | 161

`dynamic-tunnels` | 162

`es-options` | 164

`family` | 165

`family bridge` | 167

`family bridge (GRE Interfaces)` | 168

`filter` | 170

`hold-time (OAM)` | 171

`interfaces` | 172

`ipsec-sa` | 173

`keepalive-time` | 174

`key` | 175

`multicast-only` | 176

peer-unit | 177

peer-certificate-type | 178

reassemble-packets | 179

redundancy-group (Interfaces) | 180

redundancy-group (Chassis - MX Series) | 182

routing-instance | 183

routing-instances | 184

routing-options | 185

source | 186

source | 187

source-address | 188

ttl | 189

tunnel | 190

tunnel | 191

tunnel-services (Chassis) | 192

udp (FTI) | 194

unit (Interfaces) | 195

unit (Interfaces) | 197

vni (Interfaces) | 198

vxlان-gpe (FTI) | 199

Operational Commands

clear ike security-associations | 203

clear ipsec security-associations | 204

request ipsec switch | 206

request security certificate enroll (Signed) | 207

request security certificate enroll (Unsigned) | 209

request security key-pair | 211

request system certificate add | 213

show ike security-associations | 214

show interfaces (Encryption) | 219

show interfaces (GRE) | 227

show interfaces (IP-over-IP) | 239

show interfaces (Logical Tunnel) | 245

show interfaces (Multicast Tunnel) | 252

show interfaces (PIM) | 258

show interfaces (Virtual Loopback Tunnel) | 263

show interfaces fti | 269

show ipsec certificates | 282

show ipsec redundancy | 285

show ipsec security-associations | 287

show system certificate | 291

About the Documentation

IN THIS SECTION

- Documentation and Release Notes | x
- Using the Examples in This Manual | x
- Documentation Conventions | xii
- Documentation Feedback | xv
- Requesting Technical Support | xv

Use this guide to configure and monitor tunneling, which encapsulates packets inside a transport protocol, providing a private, secure path through an otherwise public network.

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {  
    file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]  
user@host# edit system scripts  
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]  
user@host# load merge relative /var/tmp/ex-script-snippet.conf  
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

Documentation Conventions

[Table 1 on page xiii](#) defines notice icons used in this guide.

Table 1: Notice Icons





Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xiii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. 	<ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level. The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
; (semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

GUI Conventions


Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> In the Logical Interfaces box, select All Interfaces. To cancel the configuration, click Cancel.
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

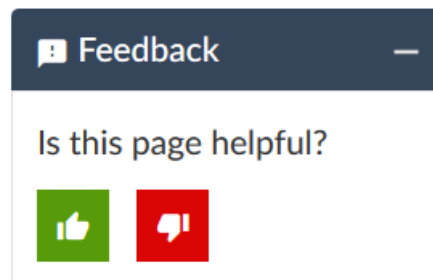

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are

covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

1

CHAPTER

Tunnel Services

Tunnel Services Overview | **18**

Configuring Tunnel Interfaces | **25**

Configuring Flexible Tunnel Interfaces | **39**

Configuring GRE Tunnel Interfaces | **54**

Configuring IP Tunnel Interfaces | **66**

Filtering Unicast Packets Through Multicast Tunnel Interfaces | **68**

Connecting Logical Systems Using Logical Tunnel Interfaces | **77**

Configuring Layer 2 Ethernet Services over GRE Tunnel Interfaces | **101**

Configuring PIM Tunnels | **122**

Facilitating VRF Table Lookup Using Virtual Loopback Tunnel Interfaces | **122**

Tunnel Services Overview

IN THIS SECTION

- [Tunnel Services Overview | 18](#)
- [Tunnel Interfaces on MX Series Routers with MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E | 22](#)
- [Dynamic Tunnels Overview | 25](#)

Tunnel Services Overview

By encapsulating arbitrary packets inside a transport protocol, tunneling provides a private, secure path through an otherwise public network. Tunnels connect discontinuous subnetworks and enable encryption interfaces, virtual private networks (VPNs), and MPLS. If you have a Tunnel Physical Interface Card (PIC) installed in your M Series or T Series router, you can configure unicast, multicast, and logical tunnels.

You can configure two types of tunnels for VPNs: one to facilitate routing table lookups and another to facilitate VPN routing and forwarding instance (VRF) table lookups.

For information about encryption interfaces, see [“Configuring Encryption Interfaces” on page 130](#). For information about VPNs, see the *Junos OS VPNs Library for Routing Devices*. For information about MPLS, see the *MPLS Applications User Guide*.

On SRX Series devices, Generic Routing Encapsulation (GRE) and IP-IP tunnels use internal interfaces, `gr-0/0/0` and `ip-0/0/0`, respectively. The Junos OS creates these interfaces at system bootup; they are not associated with physical interfaces.

The Juniper Networks Junos OS supports the tunnel types shown in the following table.

Table 3: Tunnel Interface Types

Interface	Description
gr-0/0/0	<p>Configurable generic routing encapsulation (GRE) interface. GRE allows the encapsulation of one routing protocol over another routing protocol.</p> <p>Within a router, packets are routed to this internal interface, where they are first encapsulated with a GRE packet and then re-encapsulated with another protocol packet to complete the GRE. The GRE interface is an internal interface only and is not associated with a physical interface. You must configure the interface for it to perform GRE.</p>
gre	Internally generated GRE interface. This interface is generated by the Junos OS to handle GRE. You cannot configure this interface.
ip-0/0/0	<p>Configurable IP-over-IP encapsulation (also called IP tunneling) interface. IP tunneling allows the encapsulation of one IP packet over another IP packet.</p> <p>Packets are routed to an internal interface where they are encapsulated with an IP packet and then forwarded to the encapsulating packet's destination address. The IP-IP interface is an internal interface only and is not associated with a physical interface. You must configure the interface for it to perform IP tunneling.</p>
ipip	Internally generated IP-over-IP interface. This interface is generated by the Junos OS to handle IP-over-IP encapsulation. It is not a configurable interface.
lt-0/0/0	<p>The lt interface on M Series and T Series routers supports configuration of logical systems—the capability to partition a single physical router into multiple logical devices that perform independent routing tasks.</p> <p>On SRX Series devices, the lt interface is a configurable logical tunnel interface that interconnects logical systems. See the <i>Junos OS Logical Systems Configuration Guide for Security Devices</i>.</p>

Table 3: Tunnel Interface Types (*continued*)

Interface	Description
mt-0/0/0	<p>Internally generated multicast tunnel interface. Multicast tunnels filter all unicast packets; if an incoming packet is not destined for a 224/8-or-greater prefix, the packet is dropped and a counter is incremented.</p> <p>Within a router, packets are routed to this internal interface for multicast filtering. The multicast tunnel interface is an internal interface only and is not associated with a physical interface. If your router has a Tunnel Services PIC, the Junos OS automatically configures one multicast tunnel interface (mt-) for each virtual private network (VPN) you configure. You do not need to configure multicast tunnel interfaces. However, you can configure properties on mt- interfaces, such as the multicast-only statement.</p>
mtun	<p>Internally generated multicast tunnel interface. This interface is generated by the Junos OS to handle multicast tunnel services. It is not a configurable interface.</p>
pd-0/0/0	<p>Configurable Protocol Independent Multicast (PIM) de-encapsulation interface. In PIM sparse mode, the first-hop router encapsulates packets destined for the rendezvous point router. The packets are encapsulated with a unicast header and are forwarded through a unicast tunnel to the rendezvous point. The rendezvous point then de-encapsulates the packets and transmits them through its multicast tree.</p> <p>Within a router, packets are routed to this internal interface for de-encapsulation. The PIM de-encapsulation interface is an internal interface only and is not associated with a physical interface. You must configure the interface for it to perform PIM de-encapsulation.</p> <p>NOTE: On SRX Series devices, this interface type is ppd0.</p>
pe-0/0/0	<p>Configurable PIM encapsulation interface. In PIM sparse mode, the first-hop router encapsulates packets destined for the rendezvous point router. The packets are encapsulated with a unicast header and are forwarded through a unicast tunnel to the rendezvous point. The rendezvous point then de-encapsulates the packets and transmits them through its multicast tree.</p> <p>Within a router, packets are routed to this internal interface for encapsulation. The PIM encapsulation interface is an internal interface only and is not associated with a physical interface. You must configure the interface for it to perform PIM encapsulation.</p> <p>NOTE: On SRX Series devices, this interface type is ppe0.</p>

Table 3: Tunnel Interface Types (*continued*)

Interface	Description
pimd	Internally generated PIM de-encapsulation interface. This interface is generated by the Junos OS to handle PIM de-encapsulation. It is not a configurable interface.
pime	Internally generated PIM encapsulation interface. This interface is generated by the Junos OS to handle PIM encapsulation. It is not a configurable interface.
vt-0/0/0	<p>Configurable virtual loopback tunnel interface. Facilitates VRF table lookup based on MPLS labels. This interface type is supported on M Series and T Series routers, but not on SRX Series devices.</p> <p>To configure a virtual loopback tunnel to facilitate VRF table lookup based on MPLS labels, you specify a virtual loopback tunnel interface name and associate it with a routing instance that belongs to a particular routing table. The packet loops back through the virtual loopback tunnel for route lookup.</p>

Starting in Junos OS Release 15.1, you can configure Layer 2 Ethernet services over GRE interfaces (**gr-fpc/pic/port** to use GRE encapsulation). To enable Layer 2 Ethernet packets to be terminated on GRE tunnels, you must configure the bridge domain protocol family on the **gr-** interfaces and associate the **gr-** interfaces with the bridge domain. You must configure the GRE interfaces as core-facing interfaces, and they must be access or trunk interfaces. To configure the bridge domain family on **gr-** interfaces, include the **family bridge** statement at the **[edit interfaces gr-fpc/pic/port unit logical-unit-number]** hierarchy level. To associate the **gr-** interface with a bridge domain, include the **interface gr-fpc/pic/port** statement at the **[edit routing-instances routing-instance-name bridge-domains bridge-domain-name]** hierarchy level. You can associate GRE interfaces in a bridge domain with the corresponding VLAN ID or list of VLAN IDs in a bridge domain by including the **vlan-id (all | none | number)** statement or the **vlan-id-list [vlan-id-numbers]** statement at the **[edit bridge-domains bridge-domain-name]** hierarchy level. The VLAN IDs configured for the bridge domain must match with the VLAN IDs that you configure for GRE interfaces by using the **vlan-id (all | none | number)** statement or the **vlan-id-list [vlan-id-numbers]** statement at the **[edit interfaces gr-fpc/pic/port unit logical-unit-number]** hierarchy level. You can also configure GRE interfaces within a bridge domain associated with a virtual switch instance. Layer 2 Ethernet packets over GRE tunnels are also supported with the GRE key option. The gre-key match condition allows a user to match against the GRE key field, which is an optional field in GRE encapsulated packets. The key can be matched as a single key value, a range of key values, or both.

NOTE: Starting in Junos OS Release 16.1, Layer 2 Port mirroring to a remote collector over a GRE interface is supported.

SEE ALSO

[GRE Keepalive Time Overview | 60](#)

[Configuring Unicast Tunnels | 69](#)

[Restricting Tunnels to Multicast Traffic | 76](#)

[Configuring Tunnel Interfaces on T4000 Routers | 38](#)

Tunnel Interfaces on MX Series Routers with MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E

MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E support a total of four inline tunnel interfaces per MPC, one per PIC. You can create a set of tunnel interfaces per PIC slot up to a maximum of four slots (from 0 through 3) on MX Series routers with these MPCs. These PICs are referred to as pseudo tunnel PICs. You create tunnel interfaces on MX Series routers with MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E by including the following statements at the **[edit chassis]** hierarchy level:

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth ;
    }
  }
}
```

Packet Forwarding Engine Mapping and Tunnel Bandwidth for MPC7E-MRATE

The tunnel bandwidth for MPC7E-MRATE is 1–120Gbps with an increment of 1Gbps. However, if you do not specify the bandwidth in the configuration, it is set to 120Gbps.

Table 4 on page 23 shows the mapping between the tunnel bandwidth and the Packet Forwarding Engines for MPC7-MRATE .

Table 4: Packet Forwarding Engine Mapping and Tunnel Bandwidth for MPC7E-MRATE

Pseudo Tunnel PIC	Maximum Bandwidth per Tunnel PIC	PFE Mapping	Maximum Tunnel Bandwidth per PFE	Maximum PFE Bandwidth
PIC0	120Gbps	PFE0	120Gbps	240Gbps
PIC1	120Gbps			
PIC2	120Gbps	PFE1	120Gbps	240Gbps
PIC3	120Gbps			

Packet Forwarding Engine Mapping and Tunnel Bandwidth for MPC7E-10G

The tunnel bandwidth for MPC7E-10G is 1–120Gbps with an increment of 1Gbps. However, if you do not specify the bandwidth in the configuration, it is set to 120Gbps.

Table 5 on page 23 shows the mapping between the tunnel bandwidth and the Packet Forwarding Engines for MPC7E-10G.

Table 5: Packet Forwarding Engine Mapping and Tunnel Bandwidth for MPC7E-10G

Pseudo Tunnel PIC	Maximum Bandwidth per Tunnel PIC	PFE Mapping	Maximum Tunnel Bandwidth per PFE	Maximum PFE Bandwidth
PIC0	120Gbps	PFE0	120Gbps	200Gbps
PIC1	120Gbps			
PIC2	120Gbps	PFE1	120Gbps	200Gbps
PIC3	120Gbps			

Packet Forwarding Engine Mapping and Tunnel Bandwidth for MX2K-MPC8E

The tunnel bandwidth for MX2K-MPC8E is 1–120Gbps with an increment of 1Gbps. However, if you do not specify the bandwidth in the configuration, it is set to 120Gbps.

Table 6 on page 24 shows the mapping between the tunnel bandwidth and the Packet Forwarding Engines for MX2K-MPC8E.

Table 6: Packet Forwarding Engine Mapping and Tunnel Bandwidth for MX2K-MPC8E

Pseudo Tunnel PIC	Maximum Bandwidth per Tunnel PIC	Packet Forwarding Engine Mapping	Maximum Tunnel Bandwidth per PFE	Maximum PFE Bandwidth
PIC0	120Gbps	PFE0	120Gbps	240Gbps
PIC1	120Gbps	PFE1	120Gbps	240Gbps
PIC2	120Gbps	PFE2	120Gbps	240Gbps
PIC3	120Gbps	PFE3	120Gbps	240Gbps

Packet Forwarding Engine Mapping and Tunnel Bandwidth for MX2K-MPC9E

The tunnel bandwidth for MX2K-MPC9E is 1– 200Gbps with an increment of 1Gbps. However, if you do not specify the bandwidth in the configuration, it is set to 200Gbps.

[Table 7 on page 24](#) shows the mapping between the tunnel bandwidth and the Packet Forwarding Engines for MX2K-MPC9E.

Table 7: Packet Forwarding Engine Mapping and Tunnel Bandwidth for MX2K-MPC9E

Pseudo Tunnel PIC	Maximum Bandwidth per Tunnel PIC	Packet Forwarding Engine Mapping	Maximum Tunnel Bandwidth per PFE	Maximum PFE Bandwidth
PIC0	200Gbps	PFE0	200Gbps	400Gbps
PIC1	200Gbps	PFE1	200Gbps	400Gbps
PIC2	200Gbps	PFE2	200Gbps	400Gbps
PIC3	200Gbps	PFE3	200Gbps	400Gbps

SEE ALSO

[tunnel-services](#) | [192](#)

[bandwidth](#) | [150](#)

Dynamic Tunnels Overview

A VPN that travels through a non-MPLS network requires a GRE tunnel. This tunnel can be either a static tunnel or a dynamic tunnel. A static tunnel is configured manually between two PE routers. A dynamic tunnel is configured using BGP route resolution.

When a router receives a VPN route that resolves over a BGP next hop that does not have an MPLS path, a GRE tunnel can be created dynamically, allowing the VPN traffic to be forwarded to that route. Only GRE IPv4 tunnels are supported.

To configure a dynamic tunnel between two PE routers, include the **dynamic-tunnels** statement:

```
dynamic-tunnels tunnel-name {
  destination-networks prefix;
  source-address address;
}
```

You can configure this statement at the following hierarchy levels:

- [edit routing-options]
- [edit routing-instances *routing-instance-name* routing-options]
- [edit logical-systems *logical-system-name* routing-options]
- [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* routing-options]

SEE ALSO

[dynamic-tunnels](#) | 162

Junos OS Routing Protocols Library

Junos OS VPNs Library for Routing Devices

Configuring Tunnel Interfaces

IN THIS SECTION

- [Tunnel Interface Configuration on MX Series Routers Overview](#) | 26
- [Configuring Tunnel Interfaces on an MX Series Router with a 16x10GE 3D MPC](#) | 28

- [Configuring Tunnel Interfaces on MX Series Routers with the MPC3E | 29](#)
- [Example: Configuring Tunnel Interfaces on the MPC3E | 30](#)
- [Configuring Tunnel Interfaces on MX Series Routers with MPC4E | 32](#)
- [Configuring Tunnel Interfaces on MX Series Routers with MPC7E-MRATE/MPC7E-10G | 33](#)
- [Configuring Tunnel Interfaces on MX Series Routers with MX2K-MPC8E | 34](#)
- [Configuring Tunnel Interfaces on MX Series Routers with MX2K-MPC9E | 35](#)
- [Example: Configuring Tunnel Interfaces on a Gigabit Ethernet 40-Port DPC | 36](#)
- [Example: Configuring Tunnel Interfaces on a 10-Gigabit Ethernet 4-Port DPC | 36](#)
- [Configuring Tunnel Interfaces on MX 204 Routers | 37](#)
- [Configuring Tunnel Interfaces on T4000 Routers | 38](#)

Tunnel Interface Configuration on MX Series Routers Overview

Because MX Series routers do not support Tunnel Services PICs, you create tunnel interfaces on MX Series routers by including the following statements at the **[edit chassis]** hierarchy level:

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth (1g | 10g | 20g | 30g | 40g | 50g | 60g | 70g | 80g | 90g | 100g);
    }
  }
}
```

Where:

fpc slot-number is the slot number of the DPC, MPC, or MIC. On the MX80 router, possible values are 0 and 1. On other MX Series routers, if two SCBs are installed, the range is 0 through 11. If three SCBs are installed, the range is 0 through 5 and 7 through 11.

pic number is the slot number of the PIC. On MX80 routers, if the FPC is 0, the PIC number can only be 0. If the FPC is 1, the PIC range is 0 through 3. For all other MX Series routers, the range is 0 through 3.

bandwidth (1g | 10g | 20g | 30g | 40g | 50g | 60g | 70g | 80g | 90g | 100g) is the maximum amount of bandwidth, in gigabits, that is available for tunnel traffic on each Packet Forwarding Engine. For MPCs and MICs, this bandwidth is not reserved for tunnel traffic and can be shared by the network interfaces. For DPCs, this bandwidth is reserved and cannot be shared by the network interfaces.

NOTE: When you use MPCs and MICs, tunnel interfaces are soft interfaces and allow as much traffic as the forwarding-path allows, so it is advantageous to set up tunnel services without artificially limiting traffic by use of the **bandwidth** option. However, you *must* specify **bandwidth** when configuring tunnel services for MX Series routers with DPCs or FPCs. The GRE key option is not supported on the tunnel interfaces for DPCs on MX960 routers.

If you specify a bandwidth that is not compatible, tunnel services are not activated. For example, you cannot specify a bandwidth of 1 Gbps for a Packet Forwarding Engine on a 10-Gigabit Ethernet 4-port DPC.

When you configure tunnel interfaces on the Packet Forwarding Engine of a 10-Gigabit Ethernet 4-port DPC, the Ethernet interfaces for that port are removed from service and are no longer visible in the command-line interface (CLI). The Packet Forwarding Engine of a 10-Gigabit Ethernet 4-port DPC supports either tunnel interfaces or Ethernet interfaces, but not both. Each port on the 10-Gigabit Ethernet 4-port DPC includes two LEDs, one for tunnel services and one for Ethernet services, to indicate which type of service is being used. On the Gigabit Ethernet 40-port DPC, you can configure both tunnel and Ethernet interfaces at the same time.

To verify that the tunnel interfaces have been created, issue the **show interfaces terse** operational mode command. For more information, see the [CLI Explorer](#). The bandwidth that you specify determines the port number of the tunnel interfaces that are created. When you specify a bandwidth of **1g**, the port number is always 10. When you specify any other bandwidth, the port number is always 0.

NOTE: When the tunnel bandwidth is unspecified in the Routing Engine CLI, the maximum tunnel bandwidth for an MPC3E is 60G.

NOTE: You cannot configure ingress queueing and tunnel services on the same MPC because doing so causes PFE forwarding to stop. You can configure and use each feature separately.

SEE ALSO

[bandwidth \(Tunnel Services\)](#) | **150**

[tunnel-services \(Chassis\)](#) | **192**

Configuring Tunnel Interfaces on an MX Series Router with a 16x10GE 3D MPC

MX960, MX480, and M240 routers support the 16-port 10-Gigabit Ethernet MPC (16x10GE 3D MPC) fixed configuration Field Replaceable Unit (FRU). Each Packet Forwarding Engine on a 16x10GE MPC can support a full-duplex 10Gbps tunnel without losing line-rate capacity. For example, a full-duplex 10Gbps tunnel can be hosted on a 10-Gigabit-Ethernet port, while two other 10-Gigabit-Ethernet ports on the same PFE can concurrently forward line-rate traffic.

To configure an MPC and its corresponding Packet Forwarding Engine to use tunneling services, include the **tunnel-services** statement at the **[edit chassis fpc slot-number pic pic-number]** hierarchy level. The Junos OS creates tunnel interfaces **gr-fpc/pic/port.0**, **vt-fpc/pic/port.0**, and so on. You also configure the amount of bandwidth reserved for tunnel services.

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth 10g;
    }
  }
}
```

fpc slot-number is the slot number of the MPC. If two SCBs are installed, the range is 0 through 11. If three SCBs are installed, the range is 0 through 5 and 7 through 11.

pic number is the number of the Packet Forwarding Engine on the MPC. The range is 0 through 3.

bandwidth 10g is the amount of bandwidth to reserve for tunnel traffic on each Packet Forwarding Engine.

In the following example, you create tunnel interfaces on Packet Forwarding Engine 0 of MPC 4 with 10 Gbps of bandwidth reserved for tunnel traffic. With this configuration, the tunnel interfaces created are **gr-4/0/0**, **pe-4/0/0**, **pd-4/0/0**, **vt-4/0/0**, and so on.

```
[edit chassis]
fpc 4 pic 0 {
  tunnel-services {
    bandwidth 10g;
  }
}
```

SEE ALSO

MPC-3D-16XGE Overview

Configuring Junos OS to Run a Specific Network Services Mode in MX Series Routers

Configuring Tunnel Interfaces on MX Series Routers with the MPC3E

Because the MX Series routers do not support Tunnel Services PICs, you create tunnel interfaces on MX Series routers by including the following statements at the **[edit chassis]** hierarchy level:

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth (1g | 10g | 20g | 40g);
    }
  }
}
```

fpc slot-number is the slot number of the DPC, MPC, or MIC. On the MX80 router, the range is 0 through 1. On other MX series routers, if two SCBs are installed, the range is 0 through 11. If three SCBs are installed, the range is 0 through 5 and 7 through 11.

The **pic number** On MX80 routers, if the FPC is 0, the PIC number can only be 0. If the FPC is 1, the PIC range is 0 through 3. For all other MX series routers, the range is 0 through 3.

bandwidth (1g | 10g | 20g | 40g) is the amount of bandwidth to reserve for tunnel traffic on each Packet Forwarding Engine.

NOTE: When you use MPCs and MICs, tunnel interfaces are soft interfaces and allow as much traffic as the forwarding-path allows, so it is advantageous to setup tunnel services without artificially limiting traffic by use of the **bandwidth** option. However, you *must* specify **bandwidth** when configuring tunnel services for MX Series routers with DPCs or FPCs.

1g indicates that 1 gigabit per second of bandwidth is reserved for tunnel traffic.

10g indicates that 10 gigabits per second of bandwidth is reserved for tunnel traffic.

20g indicates that 20 gigabits per second of bandwidth is reserved for tunnel traffic.

40g indicates that 40 gigabits per second of bandwidth is reserved for tunnel traffic.

If you specify a bandwidth that is not compatible, tunnel services are not activated. For example, you cannot specify a bandwidth of 1 Gbps for a Packet Forwarding Engine on a 10-Gigabit Ethernet 4-port DPC.

To verify that the tunnel interfaces have been created, issue the **show interfaces terse** operational mode command. For more information, see the [CLI Explorer](#). The bandwidth that you specify determines the port number of the tunnel interfaces that are created. When you specify a bandwidth of **1g**, the port number is always 10. When you specify any other bandwidth, the port number is always 0.

SEE ALSO

[bandwidth \(Tunnel Services\) | 150](#)

[tunnel-services \(Chassis\) | 192](#)

[edit chassis] Hierarchy Level

Example: Configuring Tunnel Interfaces on the MPC3E

IN THIS SECTION

- [Requirements for Configuration of Tunnel Interfaces on the MPC3E | 30](#)
- [Ethernet Tunnel Configuration Overview | 30](#)
- [Configuring a 20-Gigabit Ethernet Tunnel | 31](#)
- [Configuring a Tunnel With Unspecified Bandwidth | 31](#)

Requirements for Configuration of Tunnel Interfaces on the MPC3E

This example requires MX Series routers with the MPC3E.

Ethernet Tunnel Configuration Overview

MX Series routers do not support Tunnel Services PICs. However, you can create one set of tunnel interfaces per pic slot up to a maximum of 4 slots from 0-3 on MX Series routers with the MPC3E.

To configure the tunnels, include the **tunnel-services** statement and an optional bandwidth of (**1g | 10g | 20g | 30g | 40g**) at the **[edit chassis]** hierarchy level.

NOTE: When no tunnel bandwidth is specified, the tunnel interface can have a maximum bandwidth of up to 60Gbps.

NOTE: A MIC need not be plugged in to the MPC3E to configure a tunnel interface.

Configuring a 20-Gigabit Ethernet Tunnel

Step-by-Step Procedure

In the following example, you create tunnel interfaces on PIC-slot 1 of MPC 0 with 20 gigabit per second of bandwidth reserved for tunnel traffic. With this configuration, the tunnel interfaces created are **gr-0/1/0**, **pe-0/1/0**, **pd-0/1/0**, **vt-0/1/0**, and so on.

1. To create a 20 gigabit per second tunnel interface, use the following configuration:

```
[edit chassis]
fpc 0 pic 1 {
  tunnel-services {
    bandwidth 20g;
  }
}
```

Configuring a Tunnel With Unspecified Bandwidth

Step-by-Step Procedure

In the following example, you create a tunnel interface on PIC-slot 3 of MPC 0 with no bandwidth specified. The tunnel traffic can carry up to a maximum of 60Gbps depending on other traffic through the packet forwarding engine. With this configuration, the tunnel interfaces created are **gr-0/3/0**, **pe-0/3/0**, **pd-0/3/0**, **vt-0/3/0**, and so on.

1. To create a tunnel interface with no bandwidth specification, use the following configuration:

```
[edit chassis]
fpc 0 pic 3 {
  tunnel-services;
}
```

SEE ALSO

[bandwidth \(Tunnel Services\) | 150](#)

[tunnel-services \(Chassis\) | 192](#)

Configuring Tunnel Interfaces on MX Series Routers with MPC4E

MX Series routers do not support Tunnel Services PICs. However, you can create a set of tunnel interfaces per PIC slot up to a maximum of four slots from 0 through 3 on MX Series routers with MPC4E.

To configure the tunnel interfaces, include the **tunnel-services** statement and an optional bandwidth of (**1g | 10g | 20g | 30g | 40g**) at the **[edit chassis]** hierarchy level. When no tunnel bandwidth is specified, the tunnel interface can have a maximum bandwidth of up to 60 Gbps.

To verify that the tunnel interfaces have been created, issue the **show interfaces terse** operational mode command. For more information, see the [CLI Explorer](#). The bandwidth that you specify determines the port number of the tunnel interfaces that are created. When you specify a bandwidth of **1g**, the port number is always 10. When you specify any other bandwidth, the port number is always 0.

In the following example, you create tunnel interfaces on **PIC 1** of **MPC 4** with 40 Gbps of bandwidth reserved for tunnel traffic. **fpc slot-number** is the slot number of the MPC. In this configuration, the tunnel interfaces created are gr-4/1/1, pe-4/1/1, pd-4/1/1, vt-4/1/1, and so on.

1. To create a 40-Gbps tunnel interface, use the following configuration:

```
[edit chassis]
fpc 4 pic 1 {
  tunnel-services {
    bandwidth 40g;
  }
}
```

SEE ALSO

[bandwidth \(Tunnel Services\) | 150](#)

[tunnel-services \(Chassis\) | 192](#)

Configuring Tunnel Interfaces on MX Series Routers with MPC7E-MRATE/MPC7E-10G

MPCs support a total of four inline tunnels per MPC, one per PIC. You can create a set of tunnel interfaces per PIC slot up to a maximum of four slots from 0 through 3

To configure the tunnel interfaces, include the **tunnel-services** statement and an optional bandwidth of 1 Gbps through 120Gbps at the **[edit chassis fpc fpc-slot pic number]** hierarchy level. If you do not specify the tunnel bandwidth then, the tunnel interface can have a maximum bandwidth of up to 120 Gbps.

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth ;
    }
  }
}
```

To verify that the tunnel interfaces have been created, issue the **show interfaces terse** operational mode command. For more information, see the [CLI Explorer](#).

In the following example, you create tunnel interfaces on PIC 1 of MPC 5 with 40 Gbps of bandwidth reserved for tunnel traffic. **fpc slot-number** is the slot number of the MPC. In this configuration, the tunnel interfaces created are gr-5/1/1, pe-5/1/1, pd-5/1/1, vt-5/1/1, and so on.

To create a 40-Gbps tunnel interface, use the following configuration:

```
[edit chassis]
fpc 5 {
  pic 1 {
    tunnel-services {
      bandwidth 40g;
    }
  }
}
```

SEE ALSO

[Tunnel Interfaces on MX Series Routers with MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E](#) | 22

Configuring Tunnel Interfaces on MX Series Routers with MX2K-MPC8E

MX2K-MPC8E support a total of four inline tunnels per MPC, one per PIC. You can create a set of tunnel interfaces per PIC slot up to a maximum of four slots from 0 through 3.

To configure the tunnel interfaces, include the **tunnel-services** statement and an optional bandwidth of 1–120Gbps at the **[edit chassis fpc *fpc-slot* pic *number*]** hierarchy level. If you do not specify the tunnel bandwidth then, the tunnel interface can have a maximum bandwidth of up to 120 Gbps.

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth;
    }
  }
}
```

To verify that the tunnel interfaces have been created, issue the **show interfaces terse** operational mode command. For more information, see the [CLI Explorer](#).

In the following example, you create tunnel interfaces on PIC 1 of MPC 5 with 40 Gbps of bandwidth reserved for tunnel traffic. **fpc slot-number** is the slot number of the MPC. In this configuration, the tunnel interfaces created are gr-5/1/1, pe-5/1/1, pd-5/1/1, vt-5/1/1, and so on.

To create a 40-Gbps tunnel interface, use the following configuration:

```
[edit chassis]
fpc 5 {
  pic 1 {
    tunnel-services {
      bandwidth 40g;
    }
  }
}
```

SEE ALSO

[Tunnel Interfaces on MX Series Routers with MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E](#) | 22

Configuring Tunnel Interfaces on MX Series Routers with MX2K-MPC9E

MX2K-MPC9E supports a total of four inline tunnels per MPC, one per PIC. You can create a set of tunnel interfaces per PIC slot up to a maximum of four slots from 0 through 3.

To configure the tunnel interfaces, include the **tunnel-services** statement and an optional bandwidth in the range 1–200Gbps at the **[edit chassis fpc fpc-slot pic number]** hierarchy level. If you do not specify the tunnel bandwidth then, the tunnel interface can have a maximum bandwidth of up to 200 Gbps.

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth ;
    }
  }
}
```

To verify that the tunnel interfaces have been created, issue the **show interfaces terse** operational mode command. For more information, see the [CLI Explorer](#).

In the following example, you create tunnel interfaces on PIC 1 of MPC 5 with 40 Gbps of bandwidth reserved for tunnel traffic. **fpc slot-number** is the slot number of the MPC. In this configuration, the tunnel interfaces created are gr-5/1/1, pe-5/1/1, pd-5/1/1, vt-5/1/1, and so on.

To create a 40-Gbps tunnel interface, use the following configuration:

```
[edit chassis]
fpc 5 {
  pic 1 {
    tunnel-services {
      bandwidth 40g;
    }
  }
}
```

SEE ALSO

[Tunnel Interfaces on MX Series Routers with MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E](#) | 22

Example: Configuring Tunnel Interfaces on a Gigabit Ethernet 40-Port DPC

The following example shows how to create tunnel interfaces on Packet Forwarding Engine 1 of DPC 4 with 1 Gbps of bandwidth reserved for tunnel services. On a Gigabit Ethernet 40-port DPC, tunnel interfaces coexist with Ethernet interfaces. With this configuration, the Gigabit Ethernet interfaces are **ge-4/1/0** through **ge-4/1/9**. The tunnel interfaces created are **gr-4/1/10**, **pe-4/1/10**, **pd-4/1/10**, **vt-4/1/10** and so on.

```
[edit chassis]
fpc 4 pic 1 {
  tunnel-services {
    bandwidth 1g;
  }
}
```

SEE ALSO

Configuring the Junos OS to Support ILMI for Cell Relay Encapsulation on an ATM2 IQ PIC

[bandwidth \(Tunnel Services\) | 150](#)

[tunnel-services \(Chassis\) | 192](#)

Example: Configuring Tunnel Interfaces on a 10-Gigabit Ethernet 4-Port DPC

In this example, you create tunnel interfaces on Packet Forwarding Engine 0 of DPC 4 with 10 Gbps of bandwidth reserved for tunnel traffic. Ethernet and tunnel interfaces cannot coexist on the same Packet Forwarding Engine of a 10-Gigabit Ethernet 4-port DPC. With this configuration, the tunnel interfaces created are **gr-4/0/0**, **pe-4/0/0**, **pd-4/0/0**, **vt-4/0/0** and so on.

```
[edit chassis]
fpc 4 pic 0 {
  tunnel-services {
    bandwidth 10g;
  }
}
```

SEE ALSO

[bandwidth \(Tunnel Services\) | 150](#)

[tunnel-services \(Chassis\) | 192](#)

Configuring Tunnel Interfaces on MX 204 Routers

The MX204 router is a fixed-configuration router, and supports one fixed Routing Engine. It has two PICs and contains a total of twelve fixed ports, in two groups of four and eight, respectively. The set of four ports (referred to as the PIC 0 ports) are rate selectable and can be configured at 10-Gbps (by using a breakout cable), 40-Gbps, or 100-Gbps speed. However, not all the ports support all the three speeds. The set of eight ports (referred to as PIC 1 ports) operate at a fixed speed of 10-Gbps.

The MX204 router supports two inline tunnels - one per PIC. To configure the tunnel interfaces, include the **tunnel-services** statement and an optional bandwidth of 1 Gbps through 200 Gbps at the **[edit chassis fpc fpc-slot pic number]** hierarchy level. If you do not specify the tunnel bandwidth then, the tunnel interface can have a maximum bandwidth of up to 200 Gbps.

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth ;
    }
  }
}
```

To verify that the tunnel interfaces have been created, issue the **show interfaces terse** operational mode command. For more information, see the [CLI Explorer](#).

In the following example, you create tunnel interfaces on PIC 0 of MPC 0 with 40 Gbps of bandwidth reserved for tunnel traffic. **fpc slot-number** is the slot number of the MPC.

To create a 40-Gbps tunnel interface, use the following configuration:

```
[edit chassis]
fpc 0 {
  pic 0 {
    tunnel-services {
      bandwidth 40g;
    }
  }
}
```

```
}
```

SEE ALSO

[Tunnel Interfaces on MX Series Routers with MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E | 22](#)

Configuring Tunnel Interfaces on T4000 Routers

To create tunnel interfaces on a T4000 Core Router, include the following statements at the **[edit chassis]** hierarchy level:

```
[edit chassis]
fpc slot-number {
  pic number {
    tunnel-services {
      bandwidth bandwidth-value;
    }
  }
}
```

fpc slot-number denotes the slot number of the FPC. On the T4000 router, the range is 0 through 7.

NOTE:

- This applies only to the T4000 Type 5 FPC. If any other type of FPC is configured in this slot, this configuration is ignored and no tunnel physical interface is created.
- When you use Type 5 FPCs, the tunnel interfaces are soft interfaces and allow as much traffic as the forwarding-path allows. So, it is advantageous to setup tunnel services without artificially limiting traffic by setting the **bandwidth** statement.

pic number on the T4000 router is 0 or 1.

bandwidth bandwidth-value is the amount of bandwidth to reserve for the tunnel traffic on each Packet Forwarding Engine. The bandwidth value accepted includes every multiple of 10g up to 100g.

If you specify a bandwidth that is not compatible, tunnel services are not activated. For example, you cannot specify a bandwidth of 1 Gbps for a Packet Forwarding Engine on a 100-Gigabit Ethernet PIC with CFP.

To verify that the tunnel interfaces have been created, issue the **show interfaces terse** operational mode command. For more information, see the *Junos Interfaces Command Reference*.

SEE ALSO

[bandwidth \(Tunnel Services\) | 150](#)

[tunnel-services \(Chassis\) | 192](#)

Configuring Flexible Tunnel Interfaces

IN THIS SECTION

- [Flexible Tunnel Interfaces Overview | 39](#)
- [Configuring Flexible Tunnel Interfaces | 44](#)
- [Example: Configuring Flexible Tunnel Interfaces on MX Series Routers | 48](#)

Flexible Tunnel Interfaces Overview

IN THIS SECTION

- [Flexible Tunnel Interfaces on MX Series Routers | 40](#)
- [Flexible Tunnel Interfaces on PTX Series Routers and QFX Series Switches | 41](#)
- [Benefits of Flexible Tunnel Interfaces | 42](#)
- [Limitations of Flexible Tunnel Interfaces | 43](#)

A flexible tunnel interface (FTI) is a type of logical tunnel interface that uses static routing and BGP protocols to exchange routes over a tunnel that connects endpoints to routers.

Flexible Tunnel Interfaces on MX Series Routers

On MX Series routers, FTIs have the following features:

- FTI supports only VXLAN encapsulation with Layer 2 pseudo-headers.
- FTI is used between a router and a server hosting multiple virtual machines, or between routers in two different data centers.
- FTI can be configured as port-mirror destinations.
- FTI support logical interface statistics streaming.

In the VXLAN encapsulation process, the Layer 2 address is populated with “pseudo” source (source MAC: 00-00-5E-00-52-00) and destination (destination MAC: 00-00-5E-00-52-01) MAC addresses without VLAN tagging; however, these addresses are ignored when the packets reach the remote endpoint. The remote endpoint is identified by the destination IP address and a specified destination UDP port number. The corresponding FTI on the remote endpoint is identified by the virtual network identifier (VNI) value, the source IP address of the tunnel, and the destination UDP port number. All of these values can be configured on an FTI with VXLAN encapsulation.

Figure 1: FTIs Connecting Remote Devices to a Virtual Private Cloud

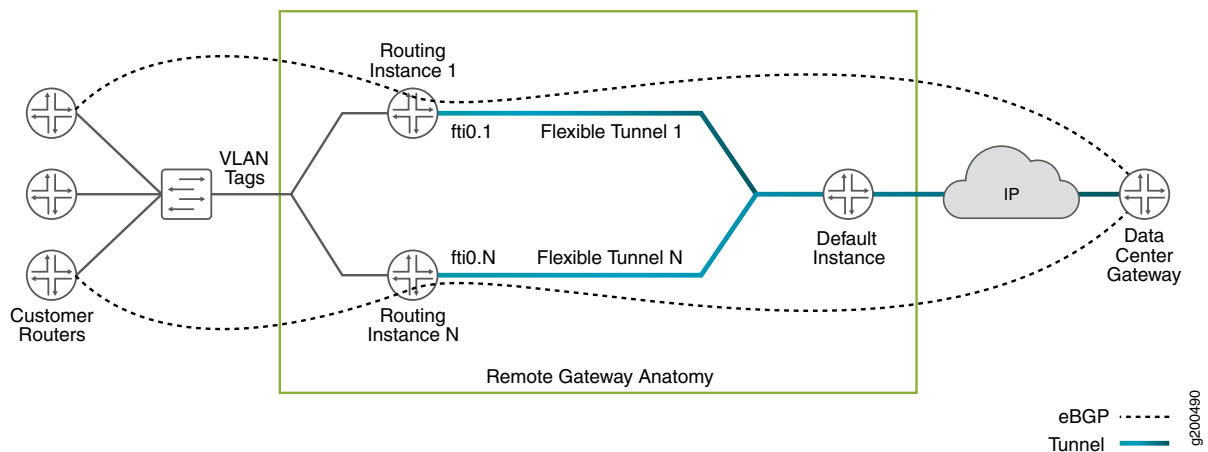


Figure 1 on page 40 illustrates how an FTI works to provide connectivity into a virtual private cloud from a remote location. Individual flexible tunnels (1 through N) are provisioned for every customer. The customer-facing logical interface and the corresponding FTIs are configured to operate in one routing instance. The FTI uses BGP protocols (eBGP and iBGP) to carry packets from the customer device to the remote gateway and vice versa.

Flexible Tunnel Interfaces on PTX Series Routers and QFX Series Switches

On PTX Series routers and QFX Series switches, FTIs have the following features:

- FTI is supported in releases starting Junos OS Release 19.3R1.
- FTI supports only UDP encapsulation.
- FTI can be initiated at any place in the MPLS tunnel: MPLS transit, ingress, egress, and PHP.
- FTI with UDP encapsulation supports the following payloads:
 - IPV4 inside IPV4 UDP packet
 - IPV6 inside IPV4 UDP packet
 - MPLS inside IPV4 UDP packet
 - ISO inside IPV4 UDP packet

FTI with UDP encapsulation supports the following features and functionality:

- MPLS link protection and node-link protection.
- Manual configuration of RSVP bandwidth.
- BFD support for liveness detection, excluding BFD over LDP and RSVP.
- Support for the following protocols:
 - BGP
 - RSVP
 - LDP
 - OSPF
 - ISIS
- Static routes.
- FTI logical interface statistics.
- MTU configuration on FTI and fragmentation of payload before entering the tunnel.
- Underlay can be Aggregated Ethernet or regular interface, and can be tagged sub-interface or regular Layer 3 interfaces.
- Overlay and underlay ECMP.

To configure an FTI interface with UDP encapsulation, include the `udp` statement at the `[edit interfaces fti0 unit unit tunnel encapsulation]` hierarchy level.

For example:

```

[edit interfaces]
fti0 {
  unit 0-1000 {
    tunnel {
      encapsulation udp {
        source {
          address ipv4_address;
        }
        destination {
          address ipv4_address;
        }
      }
    }
  }
  family inet {
    destination-udp-port udp port [range 10000-10009];
  }
  family inet6 {
    destination-udp-port udp port [range 10010-10019];
  }
  family mpls {
    destination-udp-port udp port [range 10020-10029];
  }
  family iso {
    destination-udp-port udp port [range 10030-10039];
  }
}
}

```

Benefits of Flexible Tunnel Interfaces

- Entropy and load balancing occur in transit. Unlike over tunnel encapsulations, such as IP in IP or generic routing encapsulation (GRE), VXLAN encapsulation supports passing of the hash computation result in the source port of the UDP datagram. This enables you to load-balance traffic efficiently in transit.
- FTIs have an extensible design that enables them to support multiple encapsulations.
- The **vni** attribute of the VXLAN encapsulation in FTIs helps in customer isolation.
- FTIs with UDP encapsulation use the source and destination port in the UDP header. Because the UDP source port is derived from the hash value of the inner payload, you can benefit from better traffic distribution over ECMP.

Limitations of Flexible Tunnel Interfaces

- Policing follows the distributed forwarding model of the FTIs; therefore provisioned bandwidth limits are enforced at an individual Packet Forwarding Engine level. As a result, more traffic might be admitted.
- Currently, FTI-tunneled traffic is strictly routed in the **inet.0** instance. Therefore, FTIs support only IPv4 traffic.
- The MX80 does not support FTIs.
- Class-of-service (CoS) configuration, including the configuration of rewrite rules and classifiers is not supported on FTIs.
- Time-to-live (TTL) on the tunnel header is set to the default value 100.
- Differentiated Services code point (DSCP) value is set to the default value 0, but internal forwarding class and loss priority fields are retained and can be used to rewrite DSCP in the egress interface rewrite rules.
- IP fragmentation is not supported on FTIs.

FTI with UDP encapsulation do not support the following features and functionality:

- BFD over LDP and RSVP is not supported.
- Aggregate Ethernet member statistics on QFX1000 device is not supported.
- 10,000 routes per FTI logical interface is not supported.
- Routing instance is not supported.
- Logical systems is not supported.
- Path MTU discovery is not supported.
- Policing and firewall is not supported.
- BGP signaling for UDP tunnels is not supported.
- Class-of-service on tunnel endpoints is not supported.
- TTL propagation is not supported.
- Multicast traffic is not supported.
- Plain IPV6 UDP tunnel is not supported.
- Anti-spoofing check for tunneled traffic is not supported.
- MPLS FRR is not supported.
- FT-over-FT resolution is not supported.
- FT destination IP should be reachable through IGP and not BGP (no indirect next hop). The reachability should be through an IPV4 route and not through an LSP.
- FT physical interface level statistics is not supported.

- All the interfaces under FTI except for fti0 are not supported.
- Un-numbered address is not supported.

SEE ALSO

[show interfaces fti | 269](#)

[vxlan-gpe \(FTI\) | 199](#)

[vni \(Interfaces\) | 198](#)

[destination-udp-port \(FTI\) | 160](#)

Configuring Flexible Tunnel Interfaces

IN THIS SECTION

● [Configuring FTI on PE1 | 44](#)

● [Verification | 47](#)

You can configure flexible tunnel Interfaces (FTIs) that support the Virtual Extensible LAN (VXLAN) encapsulation with Layer 2 pseudo-headers on MX Series routers, or UDP encapsulation on PTX Series routers and QFX Series switches. A flexible tunnel interface (FTI) is a point-to-point Layer 3 interface that can be used to create IPv4 and IPv6 overlays over an IPv4 transport network. A BGP protocol session can be configured to run over FTIs in order to distribute routing information.

The following sections describe how to configure FTIs on your device and to enable multiple encapsulations using the **udp** or **vxlan-gpe** parameter under the mandatory **tunnel-endpoint vxlan** encapsulation identified with the **vni** and **destination-udp-port** values:

Configuring FTI on PE1

You can configure an FTI by including the **tunnel-endpoint vxlan** statement at the **[edit interfaces]** hierarchy level.

To configure an FTI and define its attributes for an IPv4 network:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level.

```
[edit]
user@host# edit interfaces
```

2. On MX Series routers, configure a logical unit for the interface and the encapsulation **vlan-gpe**. The unit is a logical interface configured on the physical device. Specify the value of the unit from 0 through 8191. VXLAN is defined as an encapsulation format that encapsulates Ethernet frames in an outer UDP/IP transport.

NOTE: The capabilities of VXLAN-GPE are a super-set of what VXLAN without protocol extension offers. Therefore generic vxlan-gpe hierarchy is introduced to configure VXLAN tunnel encapsulation attributes; however, only regular VXLAN encapsulation without protocol extensions and pseudo Layer 2 MAC is used. The pseudo Layer 2 address is populated with "pseudo" source (source MAC: 00-00-5E-00-52-00) and destination (destination MAC: 00-00-5E-00-52-01) MAC addresses without VLAN tagging.

On MX Series routers:

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number tunnel encapsulation vxlan-gpe
```

Starting in Junos OS Release 19.3R1, you can configure flexible tunnel interfaces (FTIs) with UDP encapsulation on the PTX Series routers and the QFX Series switches, which provide support for static UDP tunnels only.

FTIs with UDP encapsulation provides the benefit of better traffic distribution over ECMP, that is achieved by the UDP source port derived from the hash value of the inner payload. In addition to this, the other benefits of this feature include, shortened interface hop counts, smooth IGP domain separation, and reduced operational complexity.

On PTX Series routers and QFX Series switches:

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number tunnel encapsulation udp
```

3. Configure the source address for the interface. The source address is the IPv4 address or address range of the encapsulator (the local ingress PE router).

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number tunnel encapsulation vxlan-gpe source address
```

NOTE: The source address can be a global WAN address and loopback address (**lo0**) is not mandatory.

4. Configure the destination address for the interface. The destination address is the IPv4 address of the tunnel endpoint destination.

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number tunnel encapsulation vxlan-gpe destination-address address
```

5. Configure **tunnel-endpoint** with the encapsulation **vxlan**. This step is mandatory to enable Layer 2 pseudo-header with VXLAN encapsulation.

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number tunnel encapsulation vxlan-gpe tunnel-endpoint vxlan
```

6. Specify the UDP port value of the destination to be used in the UDP header for the generated frames. The numeric value for **destination-udp-port** identifies the endpoint. Specify the value of **destination-udp-port** from 1 through 65,535.

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number tunnel encapsulation vxlan-gpe destination-udp-port port-number
```

7. Specify the virtual network identifier (VNI) value to be used to identify the encapsulation, **vxlan-gpe**. Specify the value of the **vni** from 0 through 16,777,214.

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number tunnel encapsulation vxlan-gpe vni vni-number
```

8. Configure an IPv4 address of an interface (signified by family **inet**). For IPv6 address configuration, use the **inet6** family.

```
[edit interfaces]
user@host# set interface-name unit logical-unit-number family inet address address
```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

Purpose

Verify that the FTI is configured and verify its status.

Action

In configuration mode, you can verify if FTI on MX Series router has been configured by executing the **show interfaces fti *number*** command.

user@host# **show interfaces fti0**

```
Physical interface: fti0, Enabled, Physical link is Up
  Interface index: 136, SNMP ifIndex: 504
  Type: FTI, Link-level type: Flexible-tunnel-Interface, MTU: Unlimited, Speed:
Unlimited
  Device flags      : Present Running
  Interface flags: SNMP-Traps
  Link type        : Full-Duplex
  Link flags       : None
  Last flapped     : Never
    Input packets  : 0
    Output packets: 0

  Logical interface fti0.0 (Index 340) (SNMP ifIndex 581)
    Flags: Up Point-To-Point SNMP-Traps Encapsulation: VXLAN-GPEv4
    Destination UDP port: 4789, VNI: 1000, Source address: 5.5.5.5, Destination
address: 6.6.6.6
    Input packets  : 0
    Output packets: 0
    Protocol inet, MTU: Unlimited
    Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
    Flags: Sendbcast-pkt-to-re
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 3.3.3/24, Local: 3.3.3.5, Broadcast: 3.3.3.255
```

Similarly you can execute the **show interfaces fti0 detail**, **show interfaces fti0 extensive**, **show interfaces fti0 terse**, and **show interfaces fti0 statistics** commands to get more details FTIs. See [show interfaces fti](#).

Meaning

The **show interfaces fti0** command displays the status of the FTIs that have been configured with the new encapsulation **vlan-gpe**. The output verifies that the FTI is configured and the physical link is **up**.

SEE ALSO

[show interfaces fti | 269](#)[vxlan-gpe \(FTI\) | 199](#)[vni \(Interfaces\) | 198](#)[destination-udp-port \(FTI\) | 160](#)

Example: Configuring Flexible Tunnel Interfaces on MX Series Routers

IN THIS SECTION

- [Requirements | 48](#)
- [Overview | 48](#)
- [Configuration | 49](#)
- [Verification | 54](#)

Requirements

This example uses the following hardware and software components:

- An MX10003 and an MX Series 5G Universal Routing Platform.
- Junos OS Release 18.3 or later.


Overview

In this example, flexible tunnel interfaces are used to create a Layer 3 VPN overlay network between two routers. In the actual deployment, one of the endpoints can be the server in a data center or a data center gateway.

Consider a sample topology in which a gateway device, PE1, functions as a link between the enterprise customers to represent the customer side for an FTI tunnel. eBGP is used to distribute routes between customer edge (CE1) and provider edge (PE1) devices. IPv4 is used for transmission of test frames over the Layer 3 network. This test is used to transfer the traffic between CE1 and CE2. Logical interfaces on both the routers are configured with IPv4 addresses to create an FTI to transfer the traffic of network devices for the IPv4 service.

[Figure 2 on page 49](#) shows the sample topology of how an FTI performs for a Layer 3 IPv4 service.

Figure 2: Flexible Tunnel Interfaces Topology

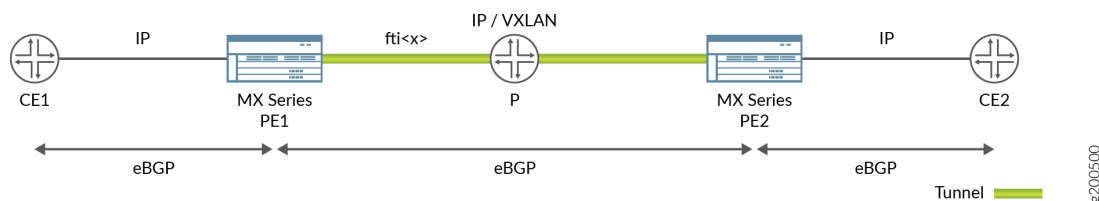

Configuration

IN THIS SECTION

- [Configuring on PE1 | 50](#)
- [Configuring on PE2 | 51](#)
- [Results | 52](#)

In this example, you configure FTI for a Layer 3 IPv4 service that is between interface fti0 on PE1 and interface fti0 on PE2 to form a tunnel interface of the interconnecting routers.

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them in a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level:

To Configure Parameters on PE1

```
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe source address 198.51.100.1
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe destination address 198.51.100.2
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe tunnel-endpoint vxlan
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe destination-udp-port 4789
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe vni 22701
set interfaces fti0 unit 0 family inet address 198.51.100.1/24
```

To Configure Parameters on PE2

```
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe source address 198.51.100.2
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe destination address 198.51.100.1
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe tunnel-endpoint vxlan
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe destination-udp-port 4789
set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe vni 22701
set interfaces fti0 unit 0 family inet address 198.51.100.2/24
```

Configuring on PE1

Step-by-Step Procedure

The following steps require you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure the parameters on PE1:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the FTI and a logical unit and specify the protocol family.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe
```

3. Specify the source address for the logical interface.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe source address 198.51.100.1
```

4. Specify the destination address for the logical interface.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe destination address 198.51.100.2
```

5. Set **tunnel-endpoint** with the encapsulation **vxlan**.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe tunnel-endpoint vxlan
```

6. Specify the UDP port value of the destination to be used in the UDP header for the generated frames.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe destination-udp-port 4789
```

7. Specify the **vni** value to be used to identify the encapsulation **vxlan-gpe** on the interface.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe vni 22701
```

8. Specify the address type family for the interface.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 family inet address 198.51.100.1/24
```

Configuring on PE2

Step-by-Step Procedure

The following steps require you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure the parameters on PE2:

1. In configuration mode, go to the **[edit interfaces]** hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure the FTI and a logical unit and specify the protocol family.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe
```

3. Specify the source address for the logical interface.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe source address 198.51.100.2
```

4. Specify the destination address for the logical interface.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe destination address 198.51.100.1
```

5. Set **tunnel-endpoint** with the encapsulation **vxlan**.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe tunnel-endpoint vxlan
```

6. Specify the UDP port value of the destination to be used in the UDP header for the generated frames.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe destination-udp-port 4789
```

7. Specify the **vni** value to be used to identify the encapsulation **vxlan-gpe** on the interface.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 tunnel encapsulation vxlan-gpe vni 22701
```

8. Specify the address type family for the interface.

```
[set interfaces]
user@host# set interfaces fti0 unit 0 family inet address 198.51.100.2/24
```

After the configuration is successfully completed, you can view the parameters by entering the **show fti0** command.

Results

In configuration mode, confirm your configuration on PE1 and PE2 by entering the **show** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

Parameters on PE1:

```
[edit interfaces]
fti0{
  unit 0 {
tunnel {
  encapsulation vxlan-gpe {
    source {
      address 198.51.100.1;
    }
    destination {
      address 198.51.100.2;
    }
    tunnel-endpoint vxlan;
    destination-udp-port 4789;
    vni 22701;
  }
}
family inet {
  address 198.51.100.1/24;
}
}
```

Parameters on PE2:

```
[edit interfaces]
fti0{
  unit 0 {
tunnel {
  encapsulation vxlan-gpe {
    source {
      address 198.51.100.2;
    }
    destination {
      address 198.51.100.1;
    }
    tunnel-endpoint vxlan;
    destination-udp-port 4789;
    vni 22701;
  }
}
family inet {
  address 198.51.100.2/24;
}
```

```
}  
}
```

After you have configured the interface, enter the **commit** command in configuration mode.

Verification

IN THIS SECTION

- [Verifying the Results | 54](#)

Verifying the Results

Purpose

Verify that the necessary and desired tunnel displays the values configured for the FTI test that is run on the flexible tunnel between PE1 and PE2.

Action

In operational mode, enter the **show interfaces fti0** command to display status of the FTIs that have been configured with the new encapsulation **vxlان-gpe**. The output verifies that the FTI is configured and the physical link is **up**.

SEE ALSO

show interfaces fti 269
vni (Interfaces) 198

Configuring GRE Tunnel Interfaces

IN THIS SECTION

- [Understanding Generic Routing Encapsulation on ACX Series | 55](#)
- [Configuring Generic Routing Encapsulation Tunneling on ACX Series | 58](#)

- [GRE Keepalive Time Overview | 60](#)
- [Configuring GRE Keepalive Time | 61](#)
- [Enabling Fragmentation on GRE Tunnels | 65](#)

Understanding Generic Routing Encapsulation on ACX Series

IN THIS SECTION

- [Overview of GRE | 55](#)
- [GRE Tunneling | 56](#)
- [Configuration Limitations | 57](#)

Generic routing encapsulation (GRE) provides a private, secure path for transporting packets through an otherwise public network by encapsulating (or tunneling) the packets.

This topic describes:

Overview of GRE

GRE encapsulates data packets and redirects them to a device that de-encapsulates them and routes them to their final destination. This allows the source and destination routers to operate as if they have a virtual point-to-point connection with each other (because the outer header applied by GRE is transparent to the encapsulated payload packet). For example, GRE tunnels allow routing protocols such as RIP and OSPF to forward data packets from one router to another router across the Internet. In addition, GRE tunnels can encapsulate multicast data streams for transmission over the Internet.

GRE is described in RFC 2784 (obsoletes earlier RFCs 1701 and 1702). The routers support RFC 2784, but not completely. (For a list of limitations, see [“Configuration Limitations” on page 57.](#))

As a *tunnel source router*, the router encapsulates a payload packet for transport through the tunnel to a destination network. The payload packet is first encapsulated in a GRE packet, and then the GRE packet is encapsulated in a delivery protocol. The router performing the role of a *tunnel remote router* extracts the tunneled packet and forwards the packet to its destination.

NOTE: Service chaining for GRE, NAT, and IPSec services on ACX1100-AC and ACX500 routers is not supported.

NOTE: Layer 2 over GRE is not supported in ACX2200 router.

GRE Tunneling

IN THIS SECTION

- [Encapsulation and De-Encapsulation on the Router | 56](#)
- [Number of Source and Destination Tunnels Allowed on a Router | 57](#)

Data is routed by the system to the GRE endpoint over routes established in the route table. (These routes can be statically configured or dynamically learned by routing protocols such as RIP or OSPF.) When a data packet is received by the GRE endpoint, it is de-encapsulated and routed again to its destination address.

GRE tunnels are *stateless*--that is, the endpoint of the tunnel contains no information about the state or availability of the remote tunnel endpoint. Therefore, the router operating as a tunnel source router cannot change the state of the GRE tunnel interface to down if the remote endpoint is unreachable.

For details about GRE tunneling, see:

Encapsulation and De-Encapsulation on the Router

Encapsulation—A router operating as a tunnel source router encapsulates and forwards GRE packets as follows:

1. When a router receives a data packet (payload) to be tunneled, it sends the packet to the tunnel interface.
2. The tunnel interface encapsulates the data in a GRE packet and adds an outer IP header.
3. The IP packet is forwarded on the basis of the destination address in the outer IP header.

De-encapsulation—A router operating as a tunnel remote router handles GRE packets as follows:

1. When the destination router receives the IP packet from the tunnel interface, the outer IP header and GRE header are removed.
2. The packet is routed based on the inner IP header.

Number of Source and Destination Tunnels Allowed on a Router

ACX routers support as many as 64 GRE tunnels between routers transmitting IPv4 or IPv6 payload packets over GRE.

Configuration Limitations

Some GRE tunneling features are not currently available on ACX Series routers. Be aware of the following limitations when you are configuring GRE on an ACX router:

- **Unsupported features**—GRE on the ACX routers *does not support* the following features:
 - Virtual routing over GRE
 - Bidirectional Forwarding Detection (BFD) protocol over GRE distributed mode
 - MPLS over GRE tunnels
 - GRE keepalives
 - GRE keys, payload packet fragmentation, and sequence numbers for fragmented packets
 - BGP dynamic tunnels
 - RFC 1701 and RFC 1702
 - RFC 2890—Key and sequence number extensions to GRE
 - IPv6 as delivery header
 - GRE path MTU discovery
 - Load balancing when NNI is ECMP
 - Interface statistics on GRE interfaces
 - Class of service and firewall on GRE tunnel
- **Routing Protocol**—ACX routers do not support routing protocols on GRE interfaces. You need to disable routing on GRE interfaces under the [edit protocols] hierarchy. For example,

```
[edit]
user@host# show protocols
ospf {
  area 0.0.0.0 {
    interface all;
```

```

        interface gr-0/0/10.0 {
            disable;
        }
    }
}

```

NOTE: This limitation is applicable for all routing protocols (such as OSPF, ISIS).

SEE ALSO

| [Configuring Unicast Tunnels](#) | 69

Configuring Generic Routing Encapsulation Tunneling on ACX Series

Tunneling provides a private, secure path for transporting packets through an otherwise public network by encapsulating packets inside a transport protocol known as an *IP encapsulation protocol*. Generic routing encapsulation (GRE) is an IP encapsulation protocol that is used to transport packets over a network. Information is sent from one network to the other through a GRE tunnel.

GRE tunneling is accomplished through routable tunnel endpoints that operate on top of existing physical and other logical endpoints. GRE tunnels connect one endpoint to another and provide a clear data path between them.

This topic describes:

1. [Configuring a GRE Tunnel Port](#) | 58
2. [Configuring Tunnels to Use Generic Routing Encapsulation](#) | 59

Configuring a GRE Tunnel Port

To configure GRE tunnels on a router, you convert a network port or uplink port on the router to a GRE tunnel port for tunnel services. Each physical tunnel port, named *gr-fpc/pic/port*, can have one or more logical interfaces, each of which is a GRE tunnel.

After conversion to a GRE tunnel port, the physical port cannot be used for network traffic.

To configure a GRE tunnel port on an ACX router, you need to create logical tunnel interfaces and the bandwidth in gigabits per second to reserve for tunnel services. Include the **tunnel-services bandwidth (1g | 10g)** statement at the **[edit chassis fpc slot-number pic number]** hierarchy level.

To configure a GRE tunnel port on the ACX5000 line of routers, use any unused physical port on the router to create a logical tunnel interface as shown below:

```
user@host# edit chassis
fpc 0 {
  pic 0 {
    tunnel-services {
      port port-number;
    }
  }
}
```

This also creates a gr- interface.

Configuring Tunnels to Use Generic Routing Encapsulation

Normally, a GRE tunnel port comes up as soon as it is configured and stays up as long as a valid tunnel source address exists or an interface is operational. Each logical interface you configure on the port can be configured as the source or as the endpoint of a GRE tunnel.

To configure a tunnel port to use GRE:

1. Configure a physical GRE port with a logical interface name and address:

- For IPv4 over GRE, specify the protocol family **inet**:

```
[edit interfaces]
user@host# set gr-fpc/pic/port unit number family inet address
```

- For IPv6 over GRE, specify the protocol family **inet6**:

```
[edit interfaces]
user@host# set gr-fpc/pic/port unit number family inet6 address
```

2. Specify the tunnel source address for the logical interface:

```
[edit interfaces]
user@host# set gr-fpc/pic/port unit number tunnel source source-address
```

3. Specify the destination address:

```
[edit interfaces]
user@host# set gr-fpc/pic/port unit number tunnel destination destination-address
```

SEE ALSO

| [Configuring Unicast Tunnels](#) | 69

GRE Keepalive Time Overview

Generic routing encapsulation (GRE) tunnel interfaces do not have a built-in mechanism for detecting when a tunnel is down. You can enable keepalive messages to serve as the detection mechanism.


When you enable a GRE tunnel interface for keepalive messages, the interface sends out keepalive request packets to the remote endpoint at regular intervals. If the data path forwarding for the GRE tunnel works correctly at all points, keepalive response packets are returned to the originator. These keepalive messages are processed by the Routing Engine.

You can configure keepalive messages on the physical or logical GRE tunnel interface. If configured on the physical interface, keepalive messages are sent on all logical interfaces that are part of the physical interface. If configured on an individual logical interface, keepalives are sent only on that logical interface.

You configure how often keepalive messages are sent and the length of time that the interface waits for a keepalive response before marking the tunnel as operationally down.

The keepalive request packet is shown in [Figure 3 on page 60](#).

Figure 3: Keepalive Request Packet



The keepalive payload includes information to ensure the keepalive response is correctly delivered to the application responsible for the GRE keepalive process.

The outer GRE header includes:

- Source IP Address—IP address of the endpoint that initiates the keepalive request
- Destination IP Address—IP address of the endpoint that receives the keepalive request
- GRE Protocol ID—IP

The inner GRE header includes:

- Source IP Address—IP address of the endpoint that receives the keepalive request
- Destination IP Address—IP address of the endpoint that initiates the keepalive request
- GRE Protocol ID—A value that the packet forwarding engine recognizes as a GRE keepalive packet

NOTE: Starting in Junos OS Release 17.3R1, you can configure IPv6 generic routing encapsulation (GRE) tunnel interfaces on MX Series routers. This lets you run a GRE tunnel over an IPv6 network. Packet payload families that can be encapsulated within the IPv6 GRE tunnels include IPv4, IPv6, MPLS, and ISO. Fragmentation and reassembly of the IPv6 delivery packets is not supported.

To configure an IPv6 GRE tunnel interface, specify IPv6 addresses for **source** and **destination** at the **[interfaces gr-0/0/0 unit 0 tunnel]** hierarchy level.

Keepalive is not supported for GRE IPv6.

SEE ALSO

[keepalive-time](#) | 174

[hold-time](#) | 171

Configuring GRE Keepalive Time

IN THIS SECTION

- [Configuring Keepalive Time and Hold time for a GRE Tunnel Interface](#) | 62
- [Display GRE Keepalive Time Configuration](#) | 63
- [Display Keepalive Time Information on a GRE Tunnel Interface](#) | 63

Configuring Keepalive Time and Hold time for a GRE Tunnel Interface

You can configure the keepalives on a generic routing encapsulation (GRE) tunnel interface by including both the **keepalive-time** statement and the **hold-time** statement at the **[edit protocols oam gre-tunnel interface *interface-name*]** hierarchy level.

NOTE: For proper operation of keepalives on a GRE interface, you must also include the **family inet** statement at the **[edit interfaces *interface-name* unit *unit*]** hierarchy level. If you do not include this statement, the interface is marked as down.

To configure a GRE tunnel interface:

1. Configure the GRE tunnel interface at **[edit interfaces *interface-name* unit *unit-number*]** hierarchy level, where the interface name is gr-x/y/z, and the family is set as **inet**.

```
user@host# set interfaces interface-name unit unit-number family family-name
```

2. Configure the rest of the GRE tunnel interface options as explained in *Configuring a GRE Tunnel Interface Between a PE and CE Router* or *Configuring a GRE Tunnel Interface Between PE Routers* based on requirement.

To configure keepalive time for a GRE tunnel interface:

1. Configure the Operation, Administration, and Maintenance (OAM) protocol at the **[edit protocols]** hierarchy level for the GRE tunnel interface.

```
[edit]
user@host# edit protocols oam
```

2. Configure the GRE tunnel interface option for OAM protocol.

```
[edit protocols oam]
user@host# edit gre-tunnel interface interface-name
```

3. Configure the keepalive time from 1 through 50 seconds for the GRE tunnel interface.

```
[edit protocols oam gre-tunnel interface interface-name]
user@host# set keepalive-time seconds
```

4. Configure the hold time from 5 through 250 seconds. Note that the hold time must be at least twice the keepalive time.

```
[edit protocols oam gre-tunnel interface interface-name]
user@host# set hold-time seconds
```

Display GRE Keepalive Time Configuration

Purpose

Display the configured keepalive time value as 10 and hold time value as 30 on a GRE tunnel interface (for example, gr-1/1/10.1).

Action

To display the configured values on the GRE tunnel interface, run the **show oam gre-tunnel** command at the **[edit protocols]** hierarchy level:

```
[edit protocols]
user@host# show oam gre-tunnel
  interface gr-1/1/10.1 {
    keepalive-time 10;
    hold-time 30;
  }
```

Display Keepalive Time Information on a GRE Tunnel Interface

Purpose

Display the current status information of a GRE tunnel interface when keepalive time and hold time parameters are configured on it and when the hold time expires.

Action

To verify the current status information on a GRE tunnel interface (for example, gr-3/3/0.3), run the **show interfaces gr-3/3/0.3 terse** and **show interfaces gr-3/3/0.3 extensive** operational commands.

show interfaces gr-3/3/0.3 terse

```
user@host> show interfaces gr-3/3/0.3 terse
```

Interface	Admin	Link	Proto	Local	Remote
gr-3/3/0.3	up	up	inet mpls	192.0.2.1/24	

SEE ALSO

[keepalive-time](#) | [174](#)

[hold-time](#) | [171](#)

Enabling Fragmentation on GRE Tunnels

To enable fragmentation of IPv4 packets in generic routing encapsulation (GRE) tunnels, include the **clear-dont-fragment-bit** statement and a maximum transmission unit (MTU) setting for the tunnel as part of an existing GRE configuration at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
gr-fpc/pic/port {
  unit logical-unit-number {
    clear-dont-fragment-bit;
    ...
  }
  family inet {
    mtu 1000;
    ...
  }
}
```

This statement clears the Don't Fragment (DF) bit in the packet header, regardless of the packet size. If the packet size exceeds the tunnel MTU value, the packet is fragmented before encapsulation. The maximum MTU size configurable on the AS or Multiservices PIC is 9192 bytes.

NOTE: The **clear-dont-fragment-bit** statement is supported only on MX Series routers and all M Series routers except the M320 router.

Fragmentation is enabled only on IPv4 packets being encapsulated in IPv4-based GRE tunnels.

NOTE: This configuration is supported only on GRE tunnels on AS or Multiservices interfaces. If you commit **gre-fragmentation** as the encapsulation type on a standard Tunnel PIC interface, the following console log message appears when the PIC comes online:

```
gr-fpc/pic/port: does not support this encapsulation
```

The Packet Forwarding Engine updates the IP identification field in the outer IP header of GRE-encapsulated packets, so that reassembly of the packets is possible after fragmentation. The previous CLI constraint check that required you to configure either the **clear-dont-fragment-bit** statement or a tunnel key with the **allow-fragmentation** statement is no longer enforced.

When you configure the **clear-dont-fragment-bit** statement on an interface with the MPLS protocol family enabled, you must specify an MTU value. This MTU value must not be greater than maximum supported value (9192).

SEE ALSO

[Configuring Unicast Tunnels](#) | 69

Configuring IP Tunnel Interfaces

IN THIS SECTION

- [Configuring IPv6-over-IPv4 Tunnels](#) | 66
- [Example: Configuring an IPv6-over-IPv4 Tunnel](#) | 67

Configuring IPv6-over-IPv4 Tunnels

If you have a Tunnel PIC installed in your M Series or T Series router, you can configure IPv6-over-IPv4 tunnels. To define a tunnel, you configure a unicast tunnel across an existing IPv4 network infrastructure.

IPv6/IPv4 packets are encapsulated in IPv4 headers and sent across the IPv4 infrastructure through the configured tunnel. You manually configure configured tunnels on each end point.

On SRX Series devices, Generic Routing Encapsulation (GRE) and IP-IP tunnels use internal interfaces, gr-0/0/0 and ip-0/0/0, respectively. The Junos OS creates these interfaces at system bootup; they are not associated with a physical interface.

IPv6-over-IPv4 tunnels are defined in RFC 2893, *Transition Mechanisms for IPv6 Hosts and Routers*. For information about configuring a unicast tunnel, see [“Configuring Unicast Tunnels” on page 69](#). For an IPv6-over-IPv4 tunnel configuration example, see [“Tunnel Services Overview” on page 18](#).

SEE ALSO

| [Tunnel Services Overview](#) | 18

Example: Configuring an IPv6-over-IPv4 Tunnel

Configure a tunnel on both sides of the connection.

Configuration on Router 1

```
[edit]
interfaces {
  gr-1/0/0 {
    unit 0 {
      tunnel {
        source 10.19.2.1;
        destination 10.19.3.1;
      }
      family inet6 {
        address 2001:DB8::1:1/126;
      }
    }
  }
}
```

Configuration on Router 2

```
[edit]
interfaces {
  gr-1/0/0 {
    unit 0 {
      tunnel {
        source 10.19.3.1;
        destination 10.19.2.1;
      }
      family inet6 {
        address 2001:DB8::2:1/126;
      }
    }
  }
}
```

SEE ALSO

| [Tunnel Services Overview](#) | 18

Filtering Unicast Packets Through Multicast Tunnel Interfaces

IN THIS SECTION

- [Configuring Unicast Tunnels](#) | 69
- [Examples: Configuring Unicast Tunnels](#) | 75
- [Restricting Tunnels to Multicast Traffic](#) | 76

Configuring Unicast Tunnels

IN THIS SECTION

- [Configuring a Key Number on GRE Tunnels | 71](#)
- [Enabling Packet Fragmentation on GRE Tunnels Prior to GRE Encapsulation | 72](#)
- [Specifying an MTU Setting for the Tunnel | 72](#)
- [Configuring a GRE Tunnel to Copy ToS Bits to the Outer IP Header | 73](#)
- [Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation | 73](#)
- [Support for IPv6 GRE tunnels | 74](#)

To configure a unicast tunnel, you configure a **gr-** interface (to use GRE encapsulation) or an **ip-** interface (to use IP-IP encapsulation) and include the **tunnel** and **family** statements:

```
gr-fpc/pic/port or ip-fpc/pic/port {
  unit logical-unit-number {
    copy-tos-to-outer-ip-header;
    reassemble-packets;
    tunnel {
      allow-fragmentation;
      destination destination-address;
      do-not-fragment;
      key number;
      routing-instance {
        destination routing-instance-name;
      }
      source address;
      ttl number;
    }
    family family {
      address address {
        destination address;
      }
    }
  }
}
```

You can configure these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

You can configure multiple logical units for each GRE or IP-IP interface, and you can configure only one tunnel per unit.

NOTE: On M Series and T Series routers, you can configure the interface on a service PIC or a tunnel PIC. On MX Series routers, configure the interface on a Multiservices DPC.

Each tunnel interface must be a point-to-point interface. Point to point is the default interface connection type, so you do not need to include the **point-to-point** statement in the logical interface configuration.

You must specify the tunnel's destination and source addresses. The remaining statements are optional.

NOTE: For transit packets exiting the tunnel, forwarding path features, such as reverse path forwarding (RPF), forwarding table filtering, source class usage, destination class usage, and stateless firewall filtering, are not supported on the interfaces you configure as tunnel sources, but are supported on tunnel-pic interfaces.

However, class-of-service (CoS) information obtained from the GRE or IP-IP header is carried over the tunnel and is used by the re-entering packets. For more information, see the *Class of Service User Guide (Routers and EX9200 Switches)*.

To prevent an invalid configuration, the Junos OS disallows setting the address specified by the **source** or **destination** statement at the [edit interfaces *gr-fpc/pic/port* unit *logical-unit-number* tunnel] hierarchy level to be the same as the interface's own subnet address, specified by the **address** statement at the [edit interfaces *gr-fpc/pic/port* unit *logical-unit-number* family *family-name*] hierarchy level.

To set the time-to-live (TTL) field that is included in the encapsulating header, include the **ttl** statement. If you explicitly configure a TTL value for the tunnel, you must configure it to be one larger than the number of hops in the tunnel. For example, if the tunnel has seven hops, you must configure a TTL value of 8.

You must configure at least one family on the logical interface. To enable MPLS over GRE tunnel interfaces, you must include the **family mpls** statement in the GRE interface configuration. In addition, you must include the appropriate statements at the [edit protocols] hierarchy level to enable Resource Reservation Protocol (RSVP), MPLS, and label-switched paths (LSPs) over GRE tunnels. Unicast tunnels are bidirectional.

A configured tunnel cannot go through Network Address Translation (NAT) at any point along the way to the destination. For more information, see [“Tunnel Services Overview” on page 18](#) and the *MPLS Applications User Guide*.

For a GRE tunnel, the default is to set the ToS bits in the outer IP header to all zeros. To have the Routing Engine copy the ToS bits from the inner IP header to the outer, include the **copy-tos-bits-to-outer-ip-header** statement. (This inner-to-outer ToS bits copying is already the default behavior for IP-IP tunnels.)

For GRE tunnel interfaces on Adaptive Services or Multiservices interfaces, you can configure additional tunnel attributes, as described in the following sections:

Configuring a Key Number on GRE Tunnels

For Adaptive Services and Multiservices interfaces on M Series and T Series routers, you can assign a key value to identify an individual traffic flow within a GRE tunnel, as defined in RFC 2890, *Key and Sequence Number Extensions to GRE*. However, only one key is allowed for each tunnel source and destination pair.

Each IP version 4 (IPv4) packet entering the tunnel is encapsulated with the GRE tunnel key value. Each IPv4 packet exiting the tunnel is verified by the GRE tunnel key value and de-encapsulated. The Adaptive Services or Multiservices PIC drops packets that do not match the configured key value.

To assign a key value to a GRE tunnel interface, include the **key** statement:

```
key number;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* tunnel]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* tunnel]

The key number can be 0 through 4,294,967,295. You must configure the same GRE tunnel key value on tunnel endpoints.

The following example illustrates the use of the key statement in a GRE tunnel configuration:

```
interfaces {
  gr-1/2/0 {
    unit 0 {
      tunnel {
        source 10.58.255.193;
        destination 10.58.255.195;
        key 1234;
      }
    }
    ...
    family inet {
      mtu 1500;
      address 10.200.0.1/30;
    }
    ...
  }
}
```

```

    }
  }
}

```

Enabling Packet Fragmentation on GRE Tunnels Prior to GRE Encapsulation

For GRE tunnel interfaces on Adaptive Services and Multiservices interfaces only, you can enable fragmentation of IPv4 packets before they are GRE-encapsulated in GRE tunnels.

By default, IPv4 traffic transmitted over GRE tunnels is not fragmented. To enable fragmentation of IPv4 packets in GRE tunnels, include the **clear-dont-fragment-bit** statement:

```
clear-dont-fragment-bit;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

When you include the **clear-dont-fragment-bit** statement in the configuration, the don't-fragment (DF) bit is cleared on all packets, even packets that do not exceed the tunnel maximum transmission unit (MTU). If the packet's size exceeds the tunnel's MTU value, the packet is fragmented before encapsulation. If the packet's size does not exceed the tunnel's MTU value, the packet is not fragmented.

You can also clear the DF bit in packets transmitted over IP Security (IPsec) tunnels. For more information, see *Configuring IPsec Rules*.

Specifying an MTU Setting for the Tunnel

To enable key numbers and fragmentation on GRE tunnels (as described in [“Configuring a Key Number on GRE Tunnels” on page 71](#) and [“Enabling Packet Fragmentation on GRE Tunnels Prior to GRE Encapsulation” on page 72](#)), you must also specify an MTU setting for the tunnel.

To specify an MTU setting for the tunnel, include the **mtu** statement:

```
mtu bytes;
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *gr-fpc/pic/port* unit *logical-unit-number* family inet]
- [edit logical-system *logical-system-name* interfaces *gr-fpc/pic/port* unit *logical-unit-number* family inet]

For more information about MTU settings, see the *Junos OS Network Interfaces Library for Routing Devices*.

Configuring a GRE Tunnel to Copy ToS Bits to the Outer IP Header

Unlike IP-IP tunnels, GRE tunnels do not copy the ToS bits to the outer IP header by default. To have the Routing Engine copy the inner ToS bits to the outer IP header (which is required for some tunneled routing protocols) on packets sent by the Routing Engine, include the **copy-tos-to-outer-ip-header** statement at the logical unit hierarchy level of a GRE interface. This example copies the inner ToS bits to the outer IP header on a GRE tunnel:

```
[edit interfaces]
gr-0/0/0 {
  unit 0 {
    copy-tos-to-outer-ip-header;
    family inet;
  }
}
```

Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation

You can enable the fragmentation and reassembly of packets after they are GRE-encapsulated for a GRE tunnel. When the size of a GRE-encapsulated packet is greater than the MTU of a link that the packet passes through, the GRE-encapsulated packet is fragmented. You configure the GRE interface at the endpoint of the tunnel to reassemble the fragmented GRE-encapsulated packets before they are processed further on the network.

For each tunnel you configure on an interface, you can enable or disable fragmentation of GRE-encapsulated packets by including the **allow-fragmentation** or **do-not-fragment** statement:

```
allow-fragmentation;
do-not-fragment;
```

You can configure these statements at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* tunnel]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* tunnel]

If you configure **allow-fragmentation** on a tunnel, the DF bit is not set in the outer IP header of the GRE-encapsulated packet, enabling fragmentation. By default, GRE-encapsulated packets that exceed the MTU size of a link are not fragmented and are dropped.

To enable reassembly of fragmented GRE-encapsulated packets on the GRE interface at the endpoint of the tunnel, include the **reassemble-packets** statement:

```
reassemble-packets;
```

You can configure this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

Starting with Junos OS Release 17.3R1, you can configure fragmentation and reassembly of GRE-encapsulated packets on GRE tunnel interfaces on MX Series routers with MPC7Es, MPC8Es, and MPC9Es.

Starting with Junos OS Release 17.1R1, you can configure fragmentation and reassembly of GRE-encapsulated packets on GRE tunnel interfaces on MX Series routers with MPC2E-NGs, MPC3E-NGs, MPC5Es, and MPC6Es.

Starting with Junos OS Release 14.2, you can configure fragmentation and reassembly of GRE-encapsulated packets on GRE tunnel interfaces on MX Series routers with MPC1s, MPC2s, MPC3s, MPC4s, and MPC-16X10GEs.

In Junos OS Release 14.1 and earlier, fragmentation and reassembly of GRE-encapsulated packets is supported only on MX Series routers with MS-DPCs.

Support for IPv6 GRE tunnels

Starting in Junos OS Release 17.3R1, you can configure IPv6 generic routing encapsulation (GRE) tunnel interfaces on MX Series routers. This lets you run a GRE tunnel over an IPv6 network. Packet payload families that can be encapsulated within the IPv6 GRE tunnels include IPv4, IPv6, MPLS, and ISO. Fragmentation and reassembly of the IPv6 delivery packets is not supported.

To configure an IPv6 GRE tunnel interface, specify IPv6 addresses for **source** and **destination** at the [interfaces gr-0/0/0 unit 0 tunnel] hierarchy level, specify **family inet6** at the [interfaces gr-0/0/0 unit 0] hierarchy level, and specify an IPv6 address for **address** at the [interfaces gr-0/0/0 unit 0 family inet6] hierarchy level.

SEE ALSO

[Tunnel Services Overview](#) | 18

Examples: Configuring Unicast Tunnels

Configure two unnumbered IP-IP tunnels:

```
[edit interfaces]
ip-0/3/0 {
  unit 0 {
    tunnel {
      source 192.168.4.18;
      destination 192.168.4.253;
    }
    family inet;
  }
  unit 1 {
    tunnel {
      source 192.168.4.18;
      destination 192.168.4.254;
    }
    family inet;
  }
}
```

Configure numbered tunnel interfaces by including an address at the **[edit interfaces ip-0/3/0 unit (0 | 1) family inet]** hierarchy level:

```
[edit interfaces]
ip-0/3/0 {
  unit 0 {
    tunnel {
      source 192.168.4.18;
      destination 192.168.4.253;
    }
    family inet {
      address 10.5.5.1/30;
    }
  }
  unit 1 {
    tunnel {
      source 192.168.4.18;
      destination 192.168.4.254;
    }
    family inet {
      address 10.6.6.100/30;
    }
  }
}
```

```

    }
  }
}

```

Configure an MPLS over GRE tunnel by including the **family mpls** statement at the [edit interfaces **gr-1/2/0** **unit 0**] hierarchy level:

```

[edit interfaces]
gr-1/2/0 {
  unit 0 {
    tunnel {
      source 192.168.1.1;
      destination 192.168.1.2;
    }
    family inet {
      address 10.1.1.1/30;
    }
    family mpls;
  }
}

```

SEE ALSO

| [Tunnel Services Overview](#) | 18

Restricting Tunnels to Multicast Traffic

For interfaces that carry IPv4 or IP version 6 (IPv6) traffic, you can configure a tunnel interface to allow multicast traffic only. To configure a multicast-only tunnel, include the **multicast-only** statement:

```

multicast-only;

```

You can configure this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number* family *family*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* family *family*]

Multicast tunnels filter all unicast packets; if an incoming packet is not destined for a 224/8 or greater prefix, the packet is dropped and a counter is incremented.

You can configure this property on GRE, IP-IP, PIM, and multicast tunnel (**mt**) interfaces only.

NOTE: If your router has a Tunnel Services PIC, the Junos OS automatically configures one multicast tunnel interface (**mt**) for each virtual private network (VPN) you configure. You do not need to configure multicast tunnel interfaces.

SEE ALSO

| [Tunnel Services Overview](#) | 18

Connecting Logical Systems Using Logical Tunnel Interfaces

IN THIS SECTION

- [Configuring Logical Tunnel Interfaces](#) | 77
- [Guidelines for Configuring Logical Tunnels on ACX Series Routers](#) | 79
- [Example: Configuring Logical Tunnels](#) | 82
- [Configuring an Interface in the VRF Domain to Receive Multicast Traffic](#) | 83
- [Redundant Logical Tunnels Overview](#) | 86
- [Configuring Redundant Logical Tunnels](#) | 88
- [Example: Configuring Redundant Logical Tunnels](#) | 89

Configuring Logical Tunnel Interfaces

Logical tunnel (**lt-**) interfaces provide quite different services depending on the host router:

- On M Series, MX Series, and T Series routers, logical tunnel interfaces allow you to connect logical systems, virtual routers, or VPN instances. M Series and T Series routers must be equipped with a Tunnel Services PIC or an Adaptive Services Module (only available on M7i routers). MX Series routers must be

equipped with a Trio MPC/MIC module. For more information about connecting these applications, see the *Junos OS VPNs Library for Routing Devices*.

- On SRX Series Services Gateways, the logical tunnel interface is used to interconnect logical systems. See the *Logical Systems and Tenant Systems User Guide for Security Devices* for information about using the logical tunnel interface on the SRX Series.
- On ACX Series routers, logical tunnel interfaces allow you to connect a bridge domain and a pseudowire. Logical systems are not supported on ACX Series routers.

Connecting Logical Systems

To connect two logical systems, you configure a logical tunnel interface on both logical systems. Then you configure a peer relationship between the logical tunnel interfaces, thus creating a point-to-point connection.

To configure a point-to-point connection between two logical systems, configure the logical tunnel interface by including the **lt-fpc/pic/port** statement:

```
lt-fpc/pic/port {
  unit logical-unit-number {
    encapsulation encapsulation;
    peer-unit unit-number; # peering logical system unit number
    dlci dlci-number;
    family (inet | inet6 | iso | mpls);
  }
}
```

You can include this statement at the following hierarchy levels:

- **[edit interfaces]**
- **[edit logical-systems *logical-system-name* interfaces]**

When configuring logical tunnel interfaces, note the following:

- You can configure each logical tunnel interface with one of the following encapsulation types: Ethernet, Ethernet circuit cross-connect (CCC), Ethernet VPLS, Frame Relay, Frame Relay CCC, VLAN, VLAN CCC, or VLAN VPLS.
- You can configure the IP, IPv6, International Organization for Standardization (ISO), or MPLS protocol family.
- Do not reconfigure a logical tunnel interface that is an anchor point with pseudowire devices stacked above it unless you first deactivate all broadband subscribers that are using the pseudowire subscriber interface.
- The peering logical interfaces must belong to the same logical tunnel interface derived from the Tunnel Services PIC or Adaptive Services Module.

- You can configure only one peer unit for each logical interface. For example, unit 0 cannot peer with both unit 1 and unit 2.
- To enable the logical tunnel interface, you must configure at least one physical interface statement.
- Logical tunnels are not supported with Adaptive Services, Multiservices, or Link Services PICs (but they are supported on the Adaptive Services Module on M7i routers, as noted above).
- On M Series routers other than the M40e router, logical tunnel interfaces require an Enhanced Flexible PIC Concentrator (FPC).
- On MX Series routers, logical tunnel interfaces require Trio MPC/MIC modules. They do not require a Tunnel Services PIC in the same system.

SEE ALSO

[Tunnel Services Overview](#) | 18

Guidelines for Configuring Logical Tunnels on ACX Series Routers

Observe the following guidelines while configuring logical tunnel (lt-) interfaces on ACX Series routers:

- You can use a logical tunnel interface to connect only bridge domains and pseudowires.
- Logical tunnel interfaces cannot interconnect the following links:
 - Pseudowire and a routing instance (Pseudowire terminating on a VRF)
 - Two routing instances
 - VPLS instance and a routing instance
 - Two VPLS instances
 - Two Bridge domains
 - Bridge domain and a VPLS instance
- Only one logical tunnel (physical interface) per bandwidth type (1 Gbps or 10 Gbps) can be configured on ACX routers. However, you can specify up to two logical tunnel interfaces (one with 1 Gb bandwidth and another with 10 Gb bandwidth) on ACX routes.
- Guaranteed bandwidth for logical tunnels is 1 Gbps and certain platforms support up to an additional 10 Gbps bandwidth. All the services configured using logical tunnel interfaces share this bandwidth.

The bandwidth configured on the logical tunnel interface is shared between upstream and downstream traffic on that interface. The effective bandwidth available for the service is half the configured bandwidth.

- Multiple logical tunnel interfaces to enable configuration of separate services on each logical interface to obtain increased bandwidth for each individual interface separately or the bundling of individual logical tunnel interfaces is not supported.
- You can configure Ethernet VLAN, Ethernet CCC, VLAN bridge on Ethernet interfaces, and VLAN on circuit cross-connects (CCC) as encapsulation types on logical tunnel interfaces. Other encapsulation types such as Ethernet, VLAN, Ethernet VPLS, or VLAN VPLS are not supported.
- When the encapsulation configured on the logical interface units is one of the supported types such as Ethernet VLAN or VLAN bridge, you can enable only bridge domains or CCC protocols on logical tunnel interfaces. Other address families or protocols such as IPv4, IPv5, MPLS, or OSPF are not supported.
- Classifier, rewrite and ingress policer configuration are supported on logical tunnel interfaces. Fixed, BA-based, and multifield classifiers are supported on the Lt- interfaces at the physical interface-level.

802.1p, 802.1ad, TOS and DSCP based BA classifiers are supported. Remarking rules can be configured at the port level on the LT interface. 802.1p, 802.1ad, TOS and DSCP fields in the packet can be rewritten in the LT interface. Ingress policers are supported.

Simple, Single-rate tricolor marking (srTCM), two-rate tricolor marking (trTCM) policers are supported. Egress policers are not supported.

- Default classifiers do not work properly when Lt- interfaces are configured on non-Ethernet PICs.
- Port-level queuing is supported; up to eight queues per Lt- interface are supported. These eight queues are shared between the upstream and downstream traffic traversing through the Lt- interface. If the configured bandwidth on the Lt- interface is not adequate for the upstream and downstream traffic of the services configured on the interface, a failure occurs with traffic propagation because multiple Lt- interfaces are not supported.
- Eight forwarding classes (0-7) are mapped to the eight queues based on the global system configuration. The remainder of the scheduler configuration, buffer-size, transmit-rate, shaping-rate, priority and WRED or drop profiles maps can be configured on the Lt- interface queues.
- The following firewall filter types are supported on Lt- interfaces:
 - Logical interface-level filters
 - Bridge family filters
 - CCC family filters

All firewall configurations are supported. The scaling limitation with such filters is the same as the existing firewall filter restrictions.

- OAM is not supported on Lt- interfaces.
- Similar to other physical interfaces, the number of logical interfaces that can be supported on logical tunnel physical interfaces is 30.

- When a bridge domain is configured with a VLAN ID (bridge domain has normalized VLANs), the difference in behavior between MX and ACX Series routers is that the MX router does not match the user-vlan-id in output filter, whereas the ACX router matches the user-vlan-id specified in the output filter.
- If the logical tunnel interface is created using non Ethernet PICs, then default classifier is not bound to the interface.

To create logical tunnel interfaces and the bandwidth in gigabits per second to reserve for tunnel services, include the **tunnel-services bandwidth (1g | 10g)** statement at the **[edit chassis fpc slot-number pic number]** hierarchy level:

```
[edit interfaces]
  lt-fpc/pic/port {
    unit logical-unit-number {
      encapsulation encapsulation;
      peer-unit unit-number; # peering logical system unit number
      dlci dlci-number;
      family (inet | inet6 | iso | mpls);
    }
  }
```

The ACX5048 and ACX5096 routers support **ethernet-vpls** and **vlan-vpls** encapsulations. These encapsulations are supported only on logical tunnel interface and are required for configuring hierarchial VPLS.

You can use any unused physical port on the ACX5048 and ACX5096 routers to create a logical tunnel interface as shown below:

```
user@host# edit chassis
fpc 0 {
  pic 0 {
    tunnel-services {
      port port-number;
    }
  }
}
```

The following sample configuration allows you to encapsulate **vlan-ccc** to **vlan-vpls** using LT interface in ACX5048 and ACX5096 routers:

```
user@host# edit chassis
lt-0/0/1 {
  unit 0 {
    encapsulation vlan-ccc;
```

```

        vlan-id 1;
        peer-unit 1;
    }
    unit 1 {
        encapsulation vlan-vpls;
        vlan-id 1;
        peer-unit 0;
    }
}

```

Example: Configuring Logical Tunnels

Configure three logical tunnels:

```

[edit interfaces]
lt-4/2/0 {
    description "Logical tunnel interface connects three logical systems";
}
[edit logical-systems]
lr1 {
    interfaces lt-4/2/0 {
        unit 12 {
            peer-unit 21; #Peering with lr2
            encapsulation frame-relay;
            dlci 612;
            family inet;
        }
        unit 13 {
            peer-unit 31; #Peering with lr3
            encapsulation frame-relay-ccc;
            dlci 613;
        }
    }
}
lr2 {
    interfaces lt-4/2/0 {
        unit 21 {
            peer-unit 12; #Peering with lr1
            encapsulation frame-relay-ccc;
            dlci 612;
        }
    }
}

```

```

    unit 23 {
        peer-unit 32; #Peering with Ir3
        encapsulation frame-relay;
        dlci 623;
    }
}
}
Ir3 {
    interfaces It-4/2/0 {
        unit 31 {
            peer-unit 13; #Peering with Ir1
            encapsulation frame-relay;
            dlci 613;
            family inet;
        }
        unit 32 {
            peer-unit 23; #Peering with Ir2
            encapsulation frame-relay-ccc;
            dlci 623;
        }
    }
}
}

```

SEE ALSO

| [Tunnel Services Overview](#) | 18

Configuring an Interface in the VRF Domain to Receive Multicast Traffic

IN THIS SECTION

- [Configuring a Proxy Logical Interface in the Global Domain](#) | 84
- [Associating the Proxy Logical Interface to a Logical Interface in a VRF Domain](#) | 85
- [Limitations](#) | 85

You can configure an ACX Series router to receive multicast traffic in a VRF domain. In an IPTV solution, IPTV sources and receivers can be spread across different end points of a network in a VRF domain. To receive the multicast traffic at the receiver's side, it is necessary for the multicast traffic to be tunneled across the network to reach the end receiving device or the subscriber. This tunneling is usually done using the Multicast Virtual Private Network (MVPN) technology.

ACX Series routers do not support MVPN technology. An alternate method for receiving the multicast traffic in the VRF domain in ACX Series router is by associating a global logical interface to a logical interface in the VRF domain. The global logical interface acts as a proxy for receiving the multicast traffic on the logical interface in the VRF domain. To associate a global logical interface to a logical interface in the VRF domain, you need to configure an IRB interface in a global domain to act as a proxy for the logical interface in the VRF domain.

Configuring a Proxy Logical Interface in the Global Domain

To configure a proxy logical interface in the global domain, you need to create logical tunnel (lt-) interface and IRB interface and then associate the IRB interface to a bridge domain. The following is a example to configure a proxy logical interface in the global domain:

1. Create an logical tunnel (lt-) interface.

```
[edit]
user@host# set chassis aggregated-devices ethernet device-count 1
user@host# set chassis fpc 0 pic 0 tunnel-services bandwidth 1g
user@host# set interfaces lt-0/0/10 unit 0 encapsulation vlan-bridge
user@host# set interfaces lt-0/0/10 unit 0 vlan-id 101
user@host# set interfaces lt-0/0/10 unit 0 peer-unit 1
user@host# set interfaces lt-0/0/10 unit 1 encapsulation vlan-ccc
user@host# set interfaces lt-0/0/10 unit 1 vlan-id 101
user@host# set interfaces lt-0/0/10 unit 1 peer-unit 0
```

2. Create an IRB interface.

```
[edit]
user@host# set interfaces irb unit 0 family inet address 192.168.1.2/24
```

3. Associate the IRB interface to a bridge domain.

```
[edit]
user@host# set bridge-domains b1 vlan-id 101
user@host# set bridge-domains b1 interface lt-0/0/10.0
```

```
user@host# set bridge-domains b1 routing-interface irb.0
```

Associating the Proxy Logical Interface to a Logical Interface in a VRF Domain

To associate the proxy logical interface to a logical interface in a VRF domain, you need to run the following PFE commands:

- **test pfe acx vrf-mc-leak enable**—Enables proxy association.
- **test pfe acx entry add *VRF-logical-interface-name* *logical-tunnel-logical-interface-name* *IRB-logical-interface-name* *IRB-IP-address* + 1**—Creates an association between proxy logical interface and the logical interface in a VRF domain.
- **test pfe acx vrf-mc-leak disable**—Disables proxy association.
- **test pfe acx entry del *VRF-logical-interface-name* *logical-tunnel-logical-interface-name* *IRB-logical-interface-name* *IRB-IP-address* + 1**—Deletes the association between the proxy logical interface and the logical interface in a VRF domain.
- **show pfe vrf-mc-leak**—Displays the association entries between proxy logical interface and the logical interface in a VRF domain.

NOTE: When the router or PFE is rebooted, the proxy associations of logical interfaces is removed and you need to once again create the proxy associations of logical interface.

Limitations

The following limitations need to be considered for receiving multicast traffic in a VRF domain:

- Maximum of 5 proxy associations of logical interfaces can be configured.
- VRF IPv6 multicast is not supported.
- AE interface as a VRF interface (requesting multicast traffic) is not be supported.
- Multicast traffic cannot be forwarded from the logical interface in a VRF domain if the first hop router is an ACX router.


Redundant Logical Tunnels Overview

You can connect two devices, such as an access-facing device and a core-facing device, through logical tunnels. To provide redundancy for the tunnels, you can create and configure multiple physical logical tunnels and add them to a virtual redundant logical tunnel.

NOTE: Redundant logical tunnels are supported only on MX Series routers with MPCs. Starting in Junos OS Release 18.4R3, redundant logical tunnels are supported on MX Series Virtual Chassis..

For example, in an MPLS access network, you can configure multiple pseudowires between an access node and an MX Series router with MPCs and add them to a redundant logical tunnel. You can then add multiple logical tunnels to the redundant logical tunnel. [Figure 4 on page 86](#) shows a redundant logical tunnel between the access node and the MX Series router.

Figure 4: Redundant Logical Tunnels

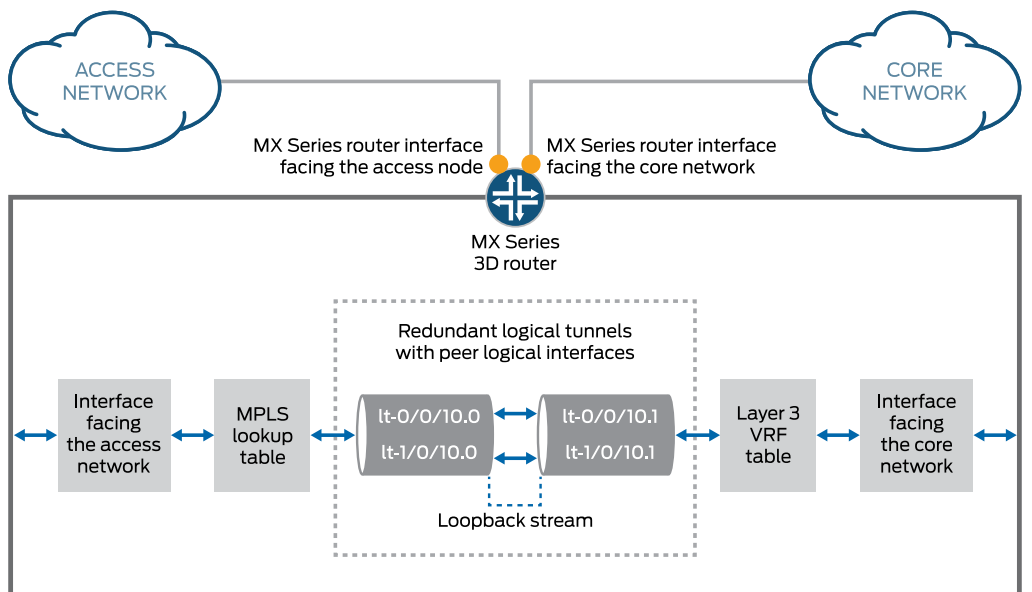

The redundant logical tunnel has peer logical interfaces at each end, **rlt0.0** and **rlt0.1**. You can configure router features on these interfaces for the redundant logical tunnel and its members.

Each member logical tunnel has peer logical interfaces. In [Figure 4 on page 86](#), **lt-0/0/10.0** and **lt-0/0/10.1** are peers.

The MX Series router performs IP lookup in the Layer 3 VPN routing and forwarding (VRF) table on the router where the pseudowires that are grouped in logical tunnels terminate.

Redundant Logical Tunnel Configuration

In Junos OS Releases 14.1R1 and earlier, you can create up to 16 redundant logical tunnels, depending on the number of Packet Forwarding Engines and the number of loopback interfaces on each Packet Forwarding Engine on your device. Starting in Junos OS Release 14.2 and for 13.3R3 and 14.1R2, the valid range for device-count is from 1 to 255.

You can add up to 32 logical tunnels as members of a redundant logical tunnel.

When you add more than two members to the redundant logical tunnel, they are in active mode. The traffic is load-balanced over all the tunnel members.

When you add only two members to the redundant logical tunnel, you can configure the members in one of these ways:

- Both members in active mode
- One member in active mode and the other in backup mode

Redundant Logical Tunnel Failure Detection and Failover

A logical tunnel fails and is removed from the redundant logical tunnel group, and the backup logical tunnel becomes active due to one of these events:

- A hardware failure on the MPC module occurs.
- An MPC failure occurs due to a microkernel crash.
- The MPC module is administratively shut down and removed from the redundant logical tunnel.
- A power failure on the MPC module occurs.

NOTE: You can decrease the time it takes for failure detection and failover to occur. Configure the **enhanced-ip** statement at the **[edit chassis network-services]** hierarchy level to enable Packet Forwarding Engine liveliness detection.

SEE ALSO

Pseudowire Subscriber Logical Interfaces Overview

Configuring a Pseudowire Subscriber Logical Interface Device

Configuring Redundant Logical Tunnels

Use redundant logical tunnels to provide redundancy for logical tunnels between two devices, such as an access-facing device and a core-facing device.

When configuring redundant logical tunnel interfaces, note the following:

- Starting in Junos OS Release 13.3, you can configure redundant logical tunnels only on MX Series routers with MPCs.

In Junos OS Releases 14.1R1 and earlier, you can create up to 16 redundant logical tunnels, depending on the number of Packet Forwarding Engines and the number of loopback interfaces on each Packet Forwarding Engine on your device. Starting in Junos OS Release 14.2 and for 13.3R3 and 14.1R2, the valid range for device-count is from 1 to 255. The command is shown below.

set chassis redundancy-group interface-type redundant-logical-tunnel device-count *[number]*;

You can add up to 32 logical tunnels as members.

- When a logical tunnel with an existing configuration joins a redundant logical tunnel, you must configure the redundant logical tunnel with the settings from the existing configuration.
- You can add member logical tunnels to a parent logical tunnel for redundancy.
- When you add more than two logical tunnels to the redundant logical tunnel, the members are in active mode by default.
- When you add only two members, you can configure the members in one of these ways:
 - Both members in active mode
 - One member in active mode and the other in backup mode

To configure a redundant logical tunnel between two devices:

- Create the logical tunnel and redundant logical tunnel interfaces.

```
[edit chassis]
user@host# set redundancy-group interface-type redundant-logical-tunnel device-count count
user@host# set fpc slot-number pic number tunnel-services bandwidth 1g
```

- Bind the member logical tunnels to the redundant logical tunnel.

```
[edit interfaces]
user@host# set interface-name redundancy-group member-interface interface-name
```

- Configure the redundant logical tunnel interfaces.

4. Attach the redundant logical tunnel interface to a Layer 2 circuit.
5. Add the peer redundant logical tunnel interface to a Layer 3 VRF instance.
6. Configure MPLS and LDP in the pseudowires and the Layer 3 VPN.

```
[edit protocols]
user@host# set mpls no-cspf
user@host# set mpls interface all
user@host# set ldp interface all
```

7. Configure BGP in the Layer 3 VPN.
8. Configure OSPF on the core-facing interfaces and the router local loopback interface.
9. Set the policy options for BGP.
10. Set the router ID and the autonomous system (AS) number.

Example: Configuring Redundant Logical Tunnels

IN THIS SECTION

- [Requirements | 89](#)
- [Overview | 90](#)
- [Configuration | 91](#)
- [Verification | 98](#)

This example shows how to configure redundant logical tunnels in an MPLS access network.

Requirements

In Junos OS Release 13.3 or later, you can configure redundant logical tunnels only on MX Series routers with MPCs.

Overview

When a logical tunnel with an existing configuration joins a redundant logical tunnel, you must configure the redundant logical tunnel with the settings from the existing configuration.

You can add member logical tunnels to a parent logical tunnel for redundancy.

On MX Series routers with MPCs, you can configure redundant logical tunnels as follows:

- In Junos OS Releases 14.1R1 and earlier, you can create up to 16 redundant logical tunnels, depending on the number of Packet Forwarding Engines and the number of loopback interfaces on each Packet Forwarding Engine on your device. Starting in Junos OS Release 14.2 and for 13.3R3 and 14.1R2, the valid range for device-count is from 1 to 255. The command is shown below.


set chassis redundancy-group interface-type redundant-logical-tunnel device-count *[number]*;

- You can add up to 32 logical tunnels as members.
- When you add more than two logical tunnels to a redundant logical tunnel, the members are in active mode by default.
- When you add only two members, you can configure the members in one of these ways:
 - Both members in active mode
 - One member in active mode and the other in backup mode

Topology

[Figure 5 on page 91](#) shows a redundant logical tunnel between the access node and the MX Series router in an MPLS access network.

Figure 5: Redundant Logical Tunnels

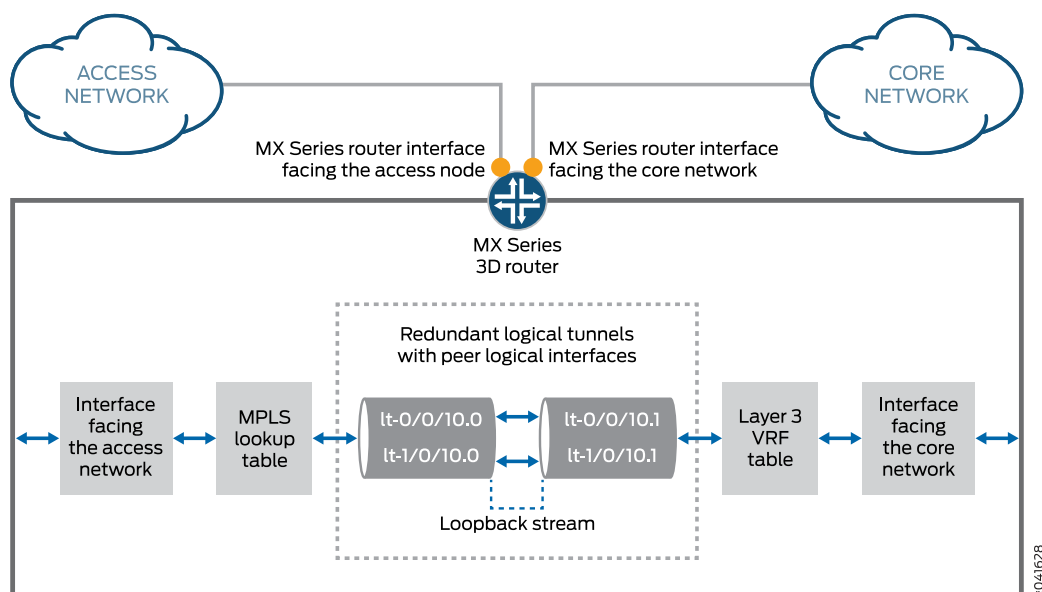

The redundant logical tunnel has peer logical interfaces at each end, `rlt0.0` and `rlt0.1`. You can configure router features on these interfaces for the redundant logical tunnel and its members.

Each member logical tunnel has peer logical interfaces on the access-facing and core-facing devices. In [Figure 5 on page 91](#), `lt-0/0/10.0` and `lt-0/0/10.1` are peers.

The MX Series router performs IP lookup in the Layer 3 VPN routing and forwarding (VRF) table on the router where the pseudowires that are grouped in logical tunnels terminate.

Configuration

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
set chassis redundancy-group interface-type redundant-logical-tunnel device-count 4
set chassis fpc 1 pic 0 tunnel-services bandwidth 1g
set chassis fpc 2 pic 2 tunnel-services bandwidth 1g
set interfaces rlt0 redundancy-group member-interface lt-1/0/10
set interfaces rlt0 redundancy-group member-interface lt-2/0/10
set interfaces rlt0 unit 0 description "Towards Layer 2 Circuit"
set interfaces rlt0 unit 0 encapsulation vlan-ccc
set interfaces rlt0 unit 0 vlan-id 600
set interfaces rlt0 unit 0 peer-unit 1
set interfaces rlt0 unit 0 family ccc
```

```

set interfaces rlt0 unit 1 description "Towards Layer 3 VRF"
set interfaces rlt0 unit 1 encapsulation vlan
set interfaces rlt0 unit 1 vlan-id 600
set interfaces rlt0 unit 1 peer-unit 0
set interfaces rlt0 unit 1 family inet address 10.10.10.2/24
set protocols l2circuit neighbor 192.0.2.2 interface rlt0.0 virtual-circuit-id 100
set protocols l2circuit neighbor 192.0.2.2 interface rlt0.0 no-control-word
set routing-instances pe-vrf instance-type vrf
set routing-instances pe-vrf interface rlt0.1
set routing-instances pe-vrf route-distinguisher 65056:1
set routing-instances pe-vrf vrf-import VPN-A-Import
set routing-instances pe-vrf vrf-export VPN-A-Export
set routing-instances pe-vrf vrf-table-label
set routing-instances pe-vrf protocols ospf export VPN-A-Import
set routing-instances pe-vrf protocols ospf area 0.0.0.0 interface rlt0.1
set protocols mpls no-cspf
set protocols mpls interface all
set protocols ldp interface all
set protocols bgp export local-routes
set protocols bgp group internal type internal
set protocols bgp group internal local-address 198.51.100.3
set protocols bgp group internal family inet any
set protocols bgp group internal family inet-vpn unicast
set protocols bgp group internal neighbor 203.0.113.4
set protocols ospf area 0.0.0.0 interface ge-5/3/8.0
set protocols ospf area 0.0.0.0 interface ge-5/2/5.0
set protocols ospf area 0.0.0.0 interface lo0.3 passive
set policy-options policy-statement VPN-A-Export term a then community add VPN-A
set policy-options policy-statement VPN-A-Export term a then accept
set policy-options policy-statement VPN-A-Export term b then reject
set policy-options policy-statement VPN-A-Import term a from protocol bgp
set policy-options policy-statement VPN-A-Import term a from community VPN-A
set policy-options policy-statement VPN-A-Import term a then accept
set policy-options policy-statement VPN-A-Import term b then reject
set policy-options policy-statement local-routes then accept
set policy-options community VPN-A members target:100:100
set routing-options router-id 198.51.100.3
set routing-options autonomous-system 65056

```

Step-by-Step Procedure

In this example, all the logical tunnels are in active mode.

1. Create the logical tunnel and redundant logical tunnel interfaces.

```
[edit chassis]
user@host# set redundancy-group interface-type redundant-logical-tunnel device-count 4
user@host# set fpc 1 pic 0 tunnel-services bandwidth 1g
user@host# set fpc 2 pic 2 tunnel-services bandwidth 1g
```

2. Bind the member logical tunnels to the redundant logical tunnel.

```
[edit interfaces]
user@host# set rlt0 redundancy-group member-interface lt-1/0/10
user@host# set rlt0 redundancy-group member-interface lt-2/0/10
```

3. Configure the redundant logical tunnel interfaces.

```
[edit interfaces]
user@host# set rlt0 unit 0 description "Towards Layer 2 Circuit"
user@host# set rlt0 unit 0 encapsulation vlan-ccc
user@host# set rlt0 unit 0 vlan-id 600
user@host# set rlt0 unit 0 peer-unit 1
user@host# set rlt0 unit 0 family ccc

user@host# set rlt0 unit 1 description "Towards Layer 3 VRF"
user@host# set rlt0 unit 1 encapsulation vlan
user@host# set rlt0 unit 1 vlan-id 600
user@host# set rlt0 unit 1 peer-unit 0
user@host# set rlt0 unit 1 family inet address 10.10.10.2/24
```

4. Attach rlt0.0 to a Layer 2 circuit.

```
[edit protocols]
user@host# set l2circuit neighbor 192.0.2.2 interface rlt0.0 virtual-circuit-id 100
user@host# set l2circuit neighbor 192.0.2.2 interface rlt0.0 no-control-word
```

5. Add rlt0.1 to a Layer 3 VRF instance.

```
[edit routing-instances]
user@host# set pe-vrf instance-type vrf
user@host# set pe-vrf interface rlt0.1
user@host# set pe-vrf route-distinguisher 65056:1
user@host# set pe-vrf vrf-import VPN-A-Import
user@host# set pe-vrf vrf-export VPN-A-Export
```

```

user@host# set pe-vrf vrf-table-label
user@host# set pe-vrf protocols ospf export VPN-A-Import
user@host# set pe-vrf protocols ospf area 0.0.0.0 interface rlt0.1

```

6. Configure MPLS and LDP in the pseudowires and the Layer 3 VPN.

```

[edit protocols]
user@host# set mpls no-cspf
user@host# set mpls interface all
user@host# set ldp interface all

```

7. Configure BGP in the Layer 3 VPN.

```

[edit protocols]
user@host# set bgp export local-routes
user@host# set bgp group internal type internal
user@host# set bgp group internal local-address 198.51.100.3
user@host# set bgp group internal family inet any
user@host# set bgp group internal family inet-vpn unicast
user@host# set bgp group internal neighbor 203.0.113.4

```

8. Configure OSPF on the core-facing interfaces and the router local loopback interface.

```

[edit protocols]
user@host# set ospf area 0.0.0.0 interface ge-5/3/8.0
user@host# set ospf area 0.0.0.0 interface ge-5/2/5.0
user@host# set ospf area 0.0.0.0 interface lo0.3 passive

```

9. Set the policy options for BGP.

```

[edit policy-options]
user@host# set policy-statement VPN-A-Export term a then community add VPN-A
user@host# set policy-statement VPN-A-Export term a then accept
user@host# set policy-statement VPN-A-Export term b then reject
user@host# set policy-statement VPN-A-Import term a from protocol bgp
user@host# set policy-statement VPN-A-Import term a from community VPN-A
user@host# set policy-statement VPN-A-Import term a then accept
user@host# set policy-statement VPN-A-Import term b then reject
user@host# set policy-statement local-routes then accept
user@host# set community VPN-A members target:100:100

```

10. Set the router ID and the autonomous system (AS) number.

```
[edit routing-options]
user@host# set router-id 198.51.100.3
user@host# set autonomous-system 65056
```

Results

From configuration mode, confirm your configuration by entering the following commands:

- **show chassis**
- **show interfaces**
- **show policy-options**
- **show protocols**
- **show routing-instances**
- **show routing-options**

If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@host# show chassis
redundancy-group {
  interface-type {
    redundant-logical-tunnel {
      device-count 4;
    }
  }
}
fpc 1 {
  pic 0 {
    tunnel-services {
      bandwidth 1g;
    }
  }
}
fpc 1 {
  pic 2 {
    tunnel-services {
      bandwidth 1g;
    }
  }
}
```

```

user@host# show interfaces rlt0
redundancy-group {
    member-interface lt-1/0/10;
    member-interface lt-2/0/10;
}
unit 0 {
    description "Towards Layer 2 Circuit";
    encapsulation vlan-ccc;
    vlan-id 600;
    peer-unit 1;
    family ccc;
}
unit 1 {
    description "Towards Layer 3 VRF";
    encapsulation vlan;
    vlan-id 600;
    peer-unit 0;
    family inet {
        address 10.10.10.2/24;
    }
}

```

```

user@host# show protocols l2circuit
neighbor 192.0.2.2 {
    interface rlt0.0 {
        virtual-circuit-id 100;
        no-control-word;
    }
}

```

```

user@host# show protocols
mpls {
    no-cspf;
    interface all;
}
bgp {
    export local-routes;
    group internal {
        type internal;
        local-address 198.51.100.3;
        family inet {
            any;
        }
    }
}

```



```

        family inet-vpn {
            unicast;
        }
        neighbor 203.0.113.4;
    }
}
ospf {
    area 0.0.0.0 {
        interface ge-5/3/8.0;
        interface ge-5/2/5.0;
        interface lo0.3 {
            passive;
        }
    }
}
ldp {
    interface all;
}
l2circuit {
    neighbor 192.0.2.2 {
        interface rlt0.0 {
            virtual-circuit-id 100;
            no-control-word;
        }
    }
}
}

```

user@host# **routing-instances**

```

pe-vrf {
    instance-type vrf;
    interface rlt0.1;
    route-distinguisher 65056:1;
    vrf-import VPN-A-Import;
    vrf-export VPN-A-Export;
    vrf-table-label;
    protocols {
        ospf {
            export VPN-A-Import;
            area 0.0.0.0 {
                interface rlt0.1;
            }
        }
    }
}
}

```

```
user@host# policy-options
policy-statement VPN-A-Export {
  term a {
    then {
      community add VPN-A;
      accept;
    }
  }
  term b {
    then reject;
  }
}
policy-statement VPN-A-Import {
  term a {
    from {
      protocol bgp;
      community VPN-A;
    }
    then accept;
  }
  term b {
    then reject;
  }
}
policy-statement local-routes {
  then accept;
}
community VPN-A members target:100:100;
```

```
user@host# routing-options
router-id 198.51.100.3;
autonomous-system 65056;
```

Verification

IN THIS SECTION

- [Verifying the Redundant Logical Tunnel Configuration | 99](#)
- [Verifying the Layer 2 Circuit | 99](#)
- [Verifying OSPF Neighbors | 100](#)

- [Verifying the BGP Group | 100](#)
- [Verifying the BGP Routes in the Routing Table | 101](#)

Confirm that the configuration is working properly.

Verifying the Redundant Logical Tunnel Configuration

Purpose

Verify that the redundant logical tunnel with the child logical tunnel interfaces are created with the correct encapsulations.

Action

```
user@host# run show interfaces terse | match rlt0
```

```
lt-1/0/10.0      up    up    container--> rlt0.0
lt-1/0/10.1      up    up    container--> rlt0.1
lt-2/0/10.0      up    up    container--> rlt0.0
lt-2/0/10.1      up    up    container--> rlt0.1
rlt0             up    up
rlt0.0           up    up    ccc
rlt0.1           up    up    inet      10.10.10.2/24
```

Verifying the Layer 2 Circuit

Purpose

Verify that the Layer 2 circuit is up.

Action

```
user@host# run show l2circuit connections
```

```
Layer-2 Circuit Connections:

Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch     VC-Dn -- Virtual circuit Down
CM -- control-word mismatch      Up -- operational
VM -- vlan id mismatch          CF -- Call admission control failure
```

```

OL -- no outgoing label          IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC    TM -- TDM misconfiguration
BK -- Backup Connection          ST -- Standby Connection
CB -- rcvd cell-bundle size bad  SP -- Static Pseudowire
LD -- local site signaled down   RS -- remote site standby
RD -- remote site signaled down  HS -- Hot-standby Connection
XX -- unknown

```

Legend for interface status

Up -- operational

Dn -- down

Neighbor: 192.0.2.2

Interface	Type	St	Time last up	# Up trans
rlt0.0(vc 100)	rmt	Up	Aug 8 00:28:04 2013	1

Remote PE: 192.0.2.2, Negotiated control-word: No

Incoming label: 299776, Outgoing label: 299776

Negotiated PW status TLV: No

Local interface: rlt0.0, Status: Up, Encapsulation: VLAN

Verifying OSPF Neighbors

Purpose

Verify that routers are adjacent and able to exchange OSPF data.

Action

user@host# **run show ospf neighbor**

Address	Interface	State	ID	Pri	Dead
198.168.30.2	ge-5/2/5.0	Full	203.0.113.4		128
38					
198.168.20.1	ge-5/3/8.0	Full	192.0.2.2	128	38

Verifying the BGP Group

Purpose

Verify that the BGP group is created.

Action

user@host# **run show bgp group internal**

```

Group Type: Internal      AS: 65056      Local AS: 65056
  Name: internal          Index: 0      Flags: <Export Eval>
  Export: [ local-routes ]
  Holdtime: 0
  Total peers: 1          Established: 1
  203.0.113.4+179
  inet.0: 1/6/3/0
  inet.2: 0/0/0/0
  bgp.l3vpn.0: 2/2/2/0
  pe-vrf.inet.0: 2/2/2/0

```

Verifying the BGP Routes in the Routing Table

Purpose

Verify that the BGP routes are in the pe-vrf.inet.0 routing table.

Action

```
user@host# run show route protocol bgp table pe-vrf.inet.0
```

```

pe-vrf.inet.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

198.168.50.0/24      *[BGP/170] 01:18:14, localpref 100, from 203.0.113.4
                     AS path: I, validation-state: unverified
                     > to 198.168.30.2 via ge-5/2/5.0, Push 16
198.168.51.0/24      *[BGP/170] 01:18:14, MED 2, localpref 100, from 203.0.113.4
                     AS path: I, validation-state: unverified
                     > to 198.168.30.2 via ge-5/2/5.0, Push 16

```

Configuring Layer 2 Ethernet Services over GRE Tunnel Interfaces

IN THIS SECTION

- [Layer 2 Services over GRE Tunnel Interfaces on MX Series with MPCs | 102](#)
- [Format of GRE Frames and Processing of GRE Interfaces for Layer 2 Ethernet Packets | 103](#)

- Guidelines for Configuring Layer 2 Ethernet Traffic Over GRE Tunnels | 104
- Sample Scenarios of Configuring Layer 2 Ethernet Traffic Over GRE Tunnels | 105
- Configuring Layer 2 Services over GRE Logical Interfaces in Bridge Domains | 106
- Example: Configuring Layer 2 Services Over GRE Logical Interfaces in Bridge Domains | 107
- Example: Configuring Layer 2 Services Over GRE Logical Interfaces in Bridge Domains with IPv6 Transport | 114

Layer 2 Services over GRE Tunnel Interfaces on MX Series with MPCs

Starting in Junos OS Release 15.1, you can configure Layer 2 Ethernet services over GRE interfaces (**gr-fpc/pic/port** to use GRE encapsulation).

Starting in Release 19.1R1, Junos OS supports Layer 2 Ethernet services over GRE interfaces (to use GRE encapsulation) with IPv6 traffic.

The outputs of the **show bridge mac-table** and **show vpls mac-table** commands have been enhanced to display the MAC addresses learned on a GRE logical interface and the status of MAC address learning properties in the MAC address and MAC flags fields. Also, the **L2 Routing Instance** and **L3 Routing Instance** fields are added to the output of the **show interfaces gr** command to display the names of the routing instances associated with the GRE interfaces are displayed.

To enable Layer 2 Ethernet packets to be terminated on GRE tunnels, you must configure the bridge domain protocol family on the **gr-** interfaces and associate the **gr-** interfaces with the bridge domain. You must configure the GRE interfaces as core-facing interfaces, and they must be access or trunk interfaces. To configure the bridge domain family on **gr-** interfaces, include the **family bridge** statement at the **[edit interfaces gr-fpc/pic/port unit logical-unit-number]** hierarchy level. To associate the **gr-** interface with a bridge domain, include the **interface gr-fpc/pic/port** statement at the **[edit routing-instances routing-instance-name bridge-domains bridge-domain-name]** hierarchy level.

You can associate GRE interfaces in a bridge domain with the corresponding VLAN ID or list of VLAN IDs in a bridge domain by including the **vlan-id (all | none | number)** statement or the **vlan-id-list [vlan-id-numbers]** statement at the **[edit bridge-domains bridge-domain-name]** hierarchy level. The VLAN IDs configured for the bridge domain must match with the VLAN IDs that you configure for GRE interfaces by using the **vlan-id (all | none | number)** statement or the **vlan-id-list [vlan-id-numbers]** statement at the **[edit interfaces gr-fpc/pic/port unit logical-unit-number]** hierarchy level. You can also configure GRE interfaces within a bridge domain associated with a virtual switch instance. Layer 2 Ethernet packets over GRE tunnels are also supported with the GRE key option. The gre-key match condition allows a user to match against the GRE key field, which is an optional field in GRE encapsulated packets. The key can be matched as a single key value, a range of key values, or both.

Format of GRE Frames and Processing of GRE Interfaces for Layer 2 Ethernet Packets

The GRE frame contains the outer MAC header, outer IP header, GRE header, original layer 2 frame, and frame checksum (FCS).

In the outer MAC header, the following fields are present:

- The outer destination MAC address is set as the next-hop MAC address
- The outer source MAC address is set as the source address of the MX Series router that functions as the gateway
- The outer VLAN tag information

In the outer IP header, the following fields are contained:

- The outer source address is set as the source address of the MX Series router gateway
- The outer destination address is set as the remote GRE tunnel address
- The outer protocol type is set as 47 (encapsulation type is GRE)
- The VLAN ID configuration within the bridge domain updates the VLAN ID of the original Layer 2 header

The gr-interface supports GRE encapsulation over IPv4 and IPv6, which is supported over Layer 3 over GRE. Support for bridging over GRE enables you to configure bridge domain families on gr- interfaces and also enable integrated routing and bridging (IRB) on gr- interfaces. The device control daemon (dcd) that controls the physical and logical interface processes enables the processing of bridge domain families under the GRE interfaces. The kernel supports IRB to send and receive packets on IRB interfaces.

The Packet Forwarding Engine supports the Layer 2 encapsulation and decapsulation over GRE interfaces. The chassis daemon is responsible for creating the GRE physical interface when an FPC comes online and triggering the deletion of the GRE interfaces when the FPC goes offline. The kernel receives the GRE logical interface that is added over the underlying physical interface and propagates the GRE logical interface to other clients, including the Packet Forwarding Engine to create the Layer 2 over GRE data path in the hardware. In addition, it adds the GRE logical interface into a bridge domain. The Packet Forwarding Engine receives interprocess communication message (IPC) from the kernel and adds the interface into the forwarding plane. The existing MTU size for the GRE interface is increased by 22 bytes for the L2 header addition (6 DMAC + 6 SMAC + 4 CVLAN + 4 SVLAN + 2 EtherType)

Guidelines for Configuring Layer 2 Ethernet Traffic Over GRE Tunnels

Observe the following guidelines while configuring Layer 2 packets to be transmitted over GRE tunnel interfaces on MX Series routers with MPCs:

- For integrated routing and bridging (IRB) to work, at least one Layer 2 interface must be up and active, and it must be associated with the bridge domain as an IRB interface along with a GRE Layer 2 logical interface. This configuration is required to leverage the existing broadcast infrastructure of Layer 2 with IRB.
- Graceful Routing Engine switchover (GRES) is supported and unified ISSU is not currently supported.
- MAC addresses learned from the GRE networks are learned on the bridge domain interfaces associated with the gr-fpc/pic/port.unit logical interface. The MAC addresses are learned on GRE logical interfaces and the Layer 2 token used for forwarding is the token associated with the GRE interface. Destination MAC lookup yields an L2 token, which causes the next-hop lookup. This next-hop is used to forward the packet.
- The GRE tunnel encapsulation and decapsulation next-hops are enhanced to support this functionality. The GRE tunnel encapsulation next-hop is used to encapsulate the outer IP and GRE headers with the incoming L2 packet. The GRE tunnel decapsulation next-hop is used to decapsulate the outer IP and GRE headers, parse the inner Layer 2 packet, and set the protocol as bridge for further bridge domain properties processing in the Packet Forwarding Engine.
- The following packet flows are supported:
 - As part of Layer 2 packet flows, L2 unicast from L2 to GRE, L2 unicast from GRE to L2, Layer 2 broadcast, unknown unicast, and multicast (L2 BUM) from L2 to GRE, and L2 BUM from GRE to L2 are supported.
 - As part of Layer 3 packet flows, L3 Unicast from L2 to GRE, L3 Unicast from GRE to L2, L3 Multicast from L2 to GRE, L3 Multicast from GRE to L2, and L3 Multicast from Internet to GRE and L2 are supported.
- Support for L2 control protocols is not available.
- At the GRE decapsulation side, packets destined to the tunnel IP are processed and decapsulated by the forwarding plane, and inner L2 packets are processed. MAC learned packets are generated for control plane processing for newly learned MAC entries. However, these entries are throttled for MAC learning.
- 802.1x authentication can be used to validate the individual endpoints and protect them from unauthorized access.
- With the capability to configure bridge domain families on GRE tunnel interfaces, the maximum number of GRE interfaces supported depends on the maximum number of tunnel devices allocated, where each tunnel device can host upto 4000 logical interfaces. The maximum number of logical tunnel interfaces supported is not changed with the support for Layer 2 GRE tunnels. For example, in a 4x10 MIC on MX960 routers, 8000 tunnel logical interfaces can be created.

- The tunnels are pinned to a specific Packet Forwarding Engine instance.
- Statistical information for GRE Layer 2 tunnels is displayed in the output of the **show interfaces gr-fpc/pic/port** command.
- Only trunk and access mode configuration is supported for the bridge family of GRE interfaces; subinterface style configuration is not supported.
- You can enable a connection to a traditional Layer 2 network. Connection to a VPLS network is not currently supported. IRB in bridge domains with GRE interfaces is supported.
- Virtual switch instances are supported.
- Configuration of the GRE Key and using it to perform the hash load-balancing at the GRE tunnel-initiated and transit routers is supported.

Sample Scenarios of Configuring Layer 2 Ethernet Traffic Over GRE Tunnels

You can configure Layer 2 Ethernet services over GRE interfaces (**gr-fpc/pic/port** to use GRE encapsulation). This topic contains the following sections that illustrate sample network deployments that support Layer 2 packets over GRE tunnel interfaces:

GRE Tunnels with an MX Series Router as the Gateway in Layer 3

You can configure an MX Series router as the gateway that contains GRE tunnels configured to connect to legacy switches on the one end and to a Layer 3 network on the other end. The Layer 3 network in turn can be linked with multiple servers on a LAN where the GRE tunnel is terminated from the WAN.

GRE Tunnels With an MX Series Router as the Gateway and Aggregator

You can configure an MX Series router as the gateway with GRE tunnels configured and also with aggregation specified. The gateway can be connected to legacy switches on one end of the network and the aggregator can be connected to a top-of-rack (ToR) switch, as a QFX Series device, which handles GRE tunneled packets with load balancing. The ToR switch can be connected, in turn, over a Layer 3 GRE tunnel to several servers in data centers.

GRE Tunnels with MX Series Gateways for Enterprise and Data Center Servers

You can configure an MX Series router as the gateway with GRE tunnels configured. Over the Internet, GRE tunnels connect multiple gateways, which are MX routers, to servers in enterprises where the GRE tunnel is terminated from the WAN on one end, and to servers in data centers on the other end.

The following configuration scenarios are supported for Layer 2 Ethernet over GRE tunnels:

- In a Layer 2 Ethernet over GRE with VPLS environment, an MX Series router supports Layer 2 over GRE tunnels (without the MPLS layer) and terminate these tunnels into a VPLS or an routed VLAN interface (RVI) into a L3VPN. The tunnels serve to cross the cable modem termination system (CMTS) and cable

modern CM infrastructure transparently, up to the MX Series router that serves as the gateway. Every GRE tunnel terminates over a VLAN interface, a VPLS instance, or an IRB interface.

- In a Layer 2 Ethernet over GRE without VPLS environment, Layer 2 VPN encapsulations are needed for conditions that do not involve these protocols. Certain data center users terminate the other end of GRE tunnels directly on the servers on the LAN, while an MX Series router functions as the gateway router between the WAN and LAN. This type of termination of tunnels enables users to build overlay networks within the data center without having to configure end-user VLANs, IP addresses, and other network parameters on the underlying switches. Such a setup simplifies data center network design and provisioning.

NOTE: Layer 2 over GRE is not supported in ACX2200 router.

Configuring Layer 2 Services over GRE Logical Interfaces in Bridge Domains

You can configure Layer 2 Ethernet services over GRE interfaces (*gr-fpc/pic/port* to use GRE encapsulation).

To configure a GRE tunnel interface, associate it in a bridge domain within a virtual-switch instance, and specify the amount of bandwidth reserved for tunnel services traffic:

1. Configure GRE tunnel interface and specify the amount of bandwidth to reserve for tunnel traffic on each Packet Forwarding Engine.

```
[edit]
user@host# set chassis fpc slot-number pic slot-number tunnel-services bandwidth (1g | 10g | 20g | 40g)
```

2. Configure the interfaces and their VLAN IDs.

```
[edit]
user@host# set interfaces gr-interface-name unit logical-unit-number family family-name address address
user@host# set interfaces gr-interface-name unit logical-unit-number family family-name interface-mode
trunk
user@host# set interfaces gr-interface-name unit logical-unit-number family family-name vlan-id-list vlan-id-list
user@host# set interfaces gr-interface-name unit logical-unit-number tunnel source source-address
user@host# set interfaces gr-interface-name unit logical-unit-number tunnel destination destination-address
```

3. Create a virtual switch instance with a bridge domain and associate the GRE logical interfaces.

```
[edit routing-instances]
user@host# set routing-instance-name instance-type virtual-switch
user@host# set routing-instance-name interface interface-name unit logical-unit-number
user@host# set routing-instance-name bridge-domains bridge-domain-name vlan-id vlan-id
```

The VLAN IDs configured for the bridge domain must match with the VLAN IDs that you configure for GRE interfaces by using the **vlan-id** (**all** | **none** | **number**) statement or the **vlan-id-list** [**vlan-id-numbers**] statement at the [edit interfaces **gr-fpc/pic/port** unit **logical-unit-number**] hierarchy level.

Example: Configuring Layer 2 Services Over GRE Logical Interfaces in Bridge Domains

IN THIS SECTION

- [Requirements | 107](#)
- [Overview | 108](#)
- [Configuration | 108](#)
- [Verification | 111](#)

This example illustrates how you can configure GRE logical interfaces in a bridge domain. You can also configure a virtual switch instance associated with a bridge domain and include GRE interfaces in the bridge domain. This type of configuration enables you to specify Layer 2 Ethernet packets to be terminated on GRE tunnels. In a Layer 2 Ethernet over GRE with VPLS environment, an MX Series router supports Layer 2 over GRE tunnels (without the MPLS layer) and terminate these tunnels into a VPLS or an routed VLAN interface (RVI) into a L3VPN. The tunnels serve to cross the cable modem termination system (CMTS) and cable modem CM infrastructure transparently, up to the MX Series router that serves as the gateway. Every GRE tunnel terminates over a VLAN interface, a VPLS instance, or an IRB interface.

Requirements

This example uses the following hardware and software components:

- An MX Series router
- Junos OS Release 15.1R1 or later running on an MX Series router with MPCs.

Overview

GRE encapsulates packets into IP packets and redirects them to an intermediate host, where they are de-encapsulated and routed to their final destination. Because the route to the intermediate host appears to the inner datagrams as one hop, Juniper Networks EX Series Ethernet switches can operate as if they have a virtual point-to-point connection with each other. GRE tunnels allow routing protocols like RIP and OSPF to forward data packets from one switch to another switch across the Internet. In addition, GRE tunnels can encapsulate multicast data streams for transmission over the Internet.

Ethernet frames have all the essentials for networking, such as globally unique source and destination addresses, error control, and so on. •Ethernet frames can carry any kind of packet. Networking at Layer 2 is protocol independent (independent of the Layer 3 protocol). If more of the end-to-end transfer of information from a source to a destination can be done in the form of Ethernet frames, more of the benefits of Ethernet can be realized on the network. Networking at Layer 2 can be a powerful adjunct to IP networking, but it is not usually a substitute for IP networking.

Consider a sample network topology in which a GRE tunnel interface is configured with the bandwidth set as 10 gigabits per second for tunnel traffic on each Packet Forwarding Engine. The GRE interface, gr-0/1/10.0, is specified with the source address of 192.0.2.2 and the destination address of 192.0.2.1. Two gigabit Ethernet interfaces, ge-0/1/2.0 and ge-0/1/6.0, are also configured. A virtual switch instance, VS1, is defined and a bridge domain, bd0, is associated with VS1. The bridge domain contains the VLAN ID of 10. The GRE interface is configured as a trunk interface and associated with the bridge domain, bd0. With such a setup, Layer 2 Ethernet services can be terminated over GRE tunnel interfaces in virtual switch instances that contain bridge domains.

Configuration

To configure a GRE tunnel interface, associate it in a bridge domain within a virtual-switch instance, and specify the amount of bandwidth reserved for tunnel services traffic.

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them in a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level:

```
set chassis fpc 0 pic 1 tunnel-services bandwidth 1g
set chassis network-services enhanced-ip
set interfaces ge-0/1/2 unit 0 family inet address 192.0.2.2/30
set interfaces ge-0/1/6 unit 0 family bridge interface-mode trunk
set interfaces ge-0/1/6 unit 0 family bridge vlan-id-list 1-100
set interfaces gr-0/1/10 unit 0 tunnel source 192.0.2.2
set interfaces gr-0/1/10 unit 0 tunnel destination 192.0.2.1
set interfaces gr-0/1/10 unit 0 family bridge interface-mode trunk
```

```

set interfaces gr-0/1/10 unit 0 family bridge vlan-id-list 1-100
set routing-instances VS1 instance-type virtual-switch
set routing-instances VS1 bridge-domains bd0 vlan-id 10
set routing-instances VS1 interface ge-0/1/6.0
set routing-instances VS1 interface gr-0/1/10.0

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure GRE logical tunnel interfaces for Layer 2 services in bridge domains:

1. Configure GRE tunnel interface and specify the amount of bandwidth to reserve for tunnel traffic on each Packet Forwarding Engine.

```

[edit]
user@host# set chassis fpc 0 pic 1 tunnel-services bandwidth 1g
user@host# set chassis network-services enhanced-ip

```

2. Configure the interfaces and their VLAN IDs.

```

[edit]
user@host# set interfaces ge-0/1/2 unit 0 family inet address 192.0.2.2/30
user@host# set interfaces ge-0/1/6 unit 0 family bridge interface-mode trunk
user@host# set interfaces ge-0/1/6 unit 0 family bridge vlan-id-list 1-100
user@host# set interfaces gr-0/1/10 unit 0 tunnel source 192.0.2.2
user@host# set interfaces gr-0/1/10 unit 0 tunnel destination 192.0.2.1
user@host# set interfaces gr-0/1/10 unit 0 family bridge interface-mode trunk
user@host# set interfaces gr-0/1/10 unit 0 family bridge vlan-id-list 1-100

```

3. Configure the bridge domain in a virtual switch instance and associate the GRE interface with it.

```

[edit]
user@host# set routing-instances VS1 instance-type virtual-switch
user@host# set routing-instances VS1 bridge-domains bd0 vlan-id 10
user@host# set routing-instances VS1 interface ge-0/1/6.0
user@host# set routing-instances VS1 interface gr-0/1/10.0

```

Results

Display the results of the configuration:

user@host> **show configuration**

```
chassis {
  fpc 0 {
    pic 1 {
      tunnel-services {
        bandwidth 1g;
      }
    }
  }
  network-services enhanced-ip;
}
interfaces {
  ge-0/1/2 {
    unit 0 {
      family inet {
        address 192.0.2.2/30;
      }
    }
  }
  ge-0/1/6 {
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 1-100;
      }
    }
  }
  gr-0/1/10 {
    unit 0 {
      tunnel {
        source 192.0.2.2;
        destination 192.0.2.1;
      }
      family bridge {
        interface-mode trunk;
        vlan-id-list 1-100;
      }
    }
  }
}
```

```

VS-1 {
    instance-type virtual-switch;
    interface ge-0/1/6.0;
    interface gr-0/1/10.0;
    bridge-domains {
        bd0 {
            vlan-id 10;
        }
    }
}

```

Verification

IN THIS SECTION

- [Verifying the MAC Addresses Learned on GRE Interfaces | 111](#)
- [Verifying the MAC Address Learning Status | 112](#)

To confirm that the configuration is working properly, perform these tasks:

Verifying the MAC Addresses Learned on GRE Interfaces

Purpose

Display the MAC addresses learned on a GRE logical interface.

Action

From operational mode, use the **show bridge mac-table** command

```

MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
          SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

```

```

Routing instance : default-switch

```

```

Bridging domain : vlan-1, VLAN : 1

```

MAC address	MAC flags	Logical interface
00:00:5e:00:53:f7	D,SE	gr-1/2/10.0
00:00:5e:00:53:32	D,SE	gr-1/2/10.0

```

00:00:5e:00:53:21    DL      ge-1/0/0.0
00:00:5e:00:53:11    DL      ge-1/1/0.0

Routing instance : default-switch
Bridging domain : vlan-2, VLAN : 2
  MAC          MAC      Logical
  address      flags    interface
00:00:5e:00:53:33    D,SE    gr-1/2/10.1
00:00:5e:00:53:10    DL      ge-1/0/0.1
00:00:5e:00:53:23    DL      ge-1/1/0.1

```

Meaning

The output displays MAC addresses learned on GRE logical tunnels.

Verifying the MAC Address Learning Status

Purpose

Display the status of MAC address learning properties in the MAC address and MAC flags fields.

Action

From operational mode, enter the **show vpls mac-table** command.

```

MAC flags (S -static MAC, D -dynamic MAC, L -locally learned
          SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)

Routing instance : vpls_4site:1000
Bridging domain : __vpls_4site:1000__,   MAC          MAC      Logical
  address      flags    interface
00:00:5e:00:53:f4    D,SE    ge-4/2/0.1000
00:00:5e:00:53:02    D,SE    lsi.1052004
00:00:5e:00:53:03    D,SE    lsi.1048840
00:00:5e:00:53:04    D,SE    lsi.1052005
00:00:5e:00:53:33    D,SE    gr-1/2/10.10

user@host> show interfaces gr-2/2/10
Physical interface: gr-2/2/10, Enabled, Physical link is Up
  Interface index: 214, SNMP ifIndex: 690
  Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: 1000mbps
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Input rate     : 0 bps (0 pps)

```



```

Output rate      : 0 bps (0 pps)

Logical interface gr-2/2/10.0 (Index 342) (SNMP ifIndex 10834)
  Flags: Up Point-To-Point SNMP-Traps 0x4000 IP-Header
198.51.100.1:198.51.100.254:47:df:64:0000000000000000 Encapsulation: GRE-NULL
  L2 Routing Instance: vs1, L3 Routing Instance: default
  Copy-tos-to-outer-ip-header: Off
  Gre keepalives configured: Off, Gre keepalives adjacency state: down
  Input packets : 2
  Output packets: 0
  Protocol bridge, MTU: 1476
    Flags: Sendbcast-pkt-to-re
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 6/8, Local: 6.0.0.1, Broadcast: 6.255.255.255

user@host> show interfaces gr-2/2/10.0
  Logical interface gr-2/2/10.0 (Index 342) (SNMP ifIndex 10834)
    Flags: Up Point-To-Point SNMP-Traps 0x4000 IP-Header
198.51.100.1:198.51.100.254:47:df:64:0000000000000000 Encapsulation: GRE-NULL
    L2 Routing Instance: vs1, L3 Routing Instance: default
    Copy-tos-to-outer-ip-header: Off
    Gre keepalives configured: Off, Gre keepalives adjacency state: down
    Input packets : 2
    Output packets: 0
    Protocol bridge, MTU: 1476
      Flags: Sendbcast-pkt-to-re
      Addresses, Flags: Is-Preferred Is-Primary
        Destination: 6/8, Local: 6.0.0.1, Broadcast: 6.255.255.255

```

Meaning

The output displays the status of MAC address learning properties in the MAC address and MAC flags fields. The output displays the names of the routing instances associated with the GRE interfaces are displayed.

Example: Configuring Layer 2 Services Over GRE Logical Interfaces in Bridge Domains with IPv6 Transport

IN THIS SECTION

- [Requirements | 114](#)
- [Overview | 114](#)
- [Configuration | 115](#)
- [Verification | 120](#)

This example illustrates how you can configure GRE logical interfaces in a bridge domain. You can also configure a virtual switch instance associated with a bridge domain and include GRE interfaces in the bridge domain. This type of configuration enables you to specify Layer 2 Ethernet packets to be terminated on GRE tunnels. In a Layer 2 Ethernet over GRE with VPLS environment, an MX Series router supports Layer 2 over GRE tunnels (without the MPLS layer) and terminate these tunnels into a VPLS or an routed VLAN interface (RVI) into a L3VPN. The tunnels serve to cross the cable modem termination system (CMTS) and cable modem CM infrastructure transparently, up to the MX Series router that serves as the gateway. Every GRE tunnel terminates over a VLAN interface, a VPLS instance, or an IRB interface.

Requirements

This example uses the following hardware and software components:

- Two MX Series routers
- Junos OS Release 19.R1 or later running on MX Series routers with MPCs.

Overview

GRE encapsulated IPv6 packets are redirected to an intermediate host where GRE header is decapsulated and routed to the IPv6 destination.

Consider a sample network topology with two devices. On device 1, GRE tunnel interface is configured with the bandwidth set as 1 gigabits per second for tunnel traffic on each Packet Forwarding Engine. The GRE interface, gr-0/0/10.0, is specified with the source address of 2001:DB8::2:1 and the destination address of 2001:DB8::3:1. Two interfaces, ae0 and xe-0/0/19, are also configured. A virtual switch instance, VS1, is defined and a bridge domain, bd1, is associated with VS1. The bridge domain contains the VLAN ID of 20. The GRE interface is configured as a trunk interface and associated with the bridge domain, bd1.

With such a setup, Layer 2 Ethernet services can be terminated over GRE tunnel interfaces in virtual switch instances that contain bridge domains.

On device 2, GRE tunnel interface is configured with the bandwidth set as 1 gigabits per second for tunnel traffic on each Packet Forwarding Engine. The GRE interface, gr-0/0/10.0, is specified with the source address of 2001:DB8::21:1 and the destination address of 2001:DB8::31:1. Two interfaces, ae0 and xe-0/0/1, are also configured. A virtual switch instance, VS1, is defined and a bridge domain, bd1, is associated with VS1. The bridge domain contains the VLAN ID of 20. The GRE interface is configured as an access interface and associated with the bridge domain, bd1.

Configuration

IN THIS SECTION

- [\[xref target has no title\]](#)

To configure a GRE tunnel interface, associate it in a bridge domain within a virtual-switch instance, and specify the amount of bandwidth reserved for tunnel services traffic.

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them in a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level:

For Device 1:

```
set chassis aggregated-devices ethernet device-count 2
set chassis fpc 0 pic 0 tunnel-services bandwidth 1g
set chassis network-services enhanced-ip
set interfaces ae0 unit 0 family inet6 address 2001:DB8::1:1/32;
set interfaces xe-0/0/19 unit 0 family bridge interface-mode trunk
set interfaces xe-0/0/19 unit 0 family bridge vlan-id-list 20-21
set interfaces xe-1/0/2 gigether-options 802.3ad ae0
set interfaces xe-1/0/3 gigether-options 802.3ad ae0
set interfaces gr-0/0/10.0 unit 0 tunnel source 2001:DB8::2:1
set interfaces gr-0/0/10.0 unit 0 tunnel destination 2001:DB8::3:1/32
set interfaces gr-0/0/10.0 unit 0 family bridge interface-mode trunk
set interfaces gr-0/0/10.0 unit 0 family bridge vlan-id-list 20-30
set routing-instances VS1 instance-type virtual-switch
set routing-instances VS1 bridge-domains bd1 vlan-id 20
```

```
set routing-instances VS1 interface xe-0/0/19.0
set routing-instances VS1 interface gr-0/0/10.0
```

For device 2:

```
set chassis aggregated-devices ethernet device-count 2
set chassis fpc 0 pic 0 tunnel-services bandwidth 1g
set chassis network-services enhanced-ip
set interfaces ae0 unit 0 family inet6 address 2001:DB8::11:1/32;
set interfaces xe-0/0/1 unit 0 family bridge interface-mode trunk
set interfaces xe-0/0/1 unit 0 family bridge vlan-id-list 20-21
set interfaces xe-1/0/2 gigether-options 802.3ad ae0
set interfaces xe-1/0/3 gigether-options 802.3ad ae0
set interfaces gr-0/0/10.0 unit 0 tunnel source 2001:DB8::21:1
set interfaces gr-0/0/10.0 unit 0 tunnel destination 2001:DB8::31:1/32
set interfaces gr-0/0/10.0 unit 0 family bridge interface-mode access
set interfaces gr-0/0/10.0 unit 0 family bridge vlan-id-list 20-30
set routing-instances VS1 instance-type virtual-switch
set routing-instances VS1 bridge-domains bd1 vlan-id 20
set routing-instances VS1 interface xe-0/0/1.0
set routing-instances VS1 interface gr-0/0/10.0
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure GRE logical tunnel interfaces over IPv6 for Layer 2 services in bridge domains for Device1 and Device2:

1. Configure GRE tunnel interface and specify the amount of bandwidth to reserve for tunnel traffic on each Packet Forwarding Engine of Device1.

```
[edit]
user@host# set chassis aggregated-devices ethernet device-count 2
user@host# set chassis fpc 0 pic 0 tunnel-services bandwidth 1g
user@host# set chassis network-services enhanced-ip
```

2. Configure the interfaces and their VLAN IDs.

```
[edit]
user@host# set interfaces ae0 unit 0 family inet6 address 2001:DB8::1:1/32;
user@host# set interfaces xe-0/0/19.0 unit 0 family bridge interface-mode trunk
```

```

user@host# set interfaces xe-0/0/19.0 unit 0 family bridge vlan-id-list 20-21
user@host# set interfaces xe-1/0/2 gigether-options 802.3ad ae0
user@host# set interfaces xe-1/0/3 gigether-options 802.3ad ae0
user@host# set interfaces gr-0/0/10.0 unit 0 tunnel source 2001:DB8::2:1
user@host# set interfaces gr-0/0/10.0 unit 0 tunnel destination 2001:DB8::3:1
user@host# set interfaces gr-0/0/10.0 unit 0 family bridge interface-mode trunk
user@host# set interfaces gr-0/0/10.0 unit 0 family bridge vlan-id-list 20-30

```

3. Configure the bridge domain in a virtual switch instance and associate the GRE interface with it.

```

[edit]
user@host# set routing-instances VS1 instance-type virtual-switch
user@host# set routing-instances VS1 bridge-domains bd1 vlan-id 20
user@host# set routing-instances VS1 interface xe-0/0/19.0
user@host# set routing-instances VS1 interface gr-0/0/10.0

```

4. Configure GRE tunnel interface and specify the amount of bandwidth to reserve for tunnel traffic on each Packet Forwarding Engine of Device2.

```

[edit]
user@host# set chassis aggregated-devices ethernet device-count 2
user@host# set chassis fpc 0 pic 0 tunnel-services bandwidth 1g
user@host# set chassis network-services enhanced-ip

```

5. Configure the interfaces and their VLAN IDs.

```

[edit]
user@host# set interfaces ae0 unit 0 family inet6 address 2001:DB8::11:1/32;
user@host# set interfaces xe-0/0/1 unit 0 family bridge interface-mode trunk
user@host# set interfaces xe-0/0/1 unit 0 family bridge vlan-id-list 20-21
user@host# set interfaces xe-1/0/2 gigether-options 802.3ad ae0
user@host# set interfaces xe-1/0/3 gigether-options 802.3ad ae0
user@host# set interfaces gr-0/0/10.0 unit 0 tunnel source 2001:DB8::21:1
user@host# set interfaces gr-0/0/10.0 unit 0 tunnel destination 2001:DB8::31:1/32
user@host# set interfaces gr-0/0/10.0 unit 0 family bridge interface-mode trunk
user@host# set interfaces gr-0/0/10.0 unit 0 family bridge vlan-id-list 20-30

```

6. Configure the bridge domain in a virtual switch instance and associate the GRE interface with it.

```

[edit]

```

```

user@host# set routing-instances VS1 instance-type virtual-switch
user@host# set routing-instances VS1 bridge-domains bd1 vlan-id 20
user@host# set routing-instances VS1 bridge-domains routing-interface irb.0
user@host# set routing-instances VS1 interface xe-0/0/1.0
user@host# set routing-instances VS1 interface gr-0/0/10.0

```

Results

Display the results of the configuration on Device 1:

```
user@host> show configuration
```

```

chassis {
  fpc 0 {
    pic 0 {
      tunnel-services {
        bandwidth 1g;
      }
    }
  }
  network-services enhanced-ip;
}
interfaces {
  ae0 {
    unit 0 {
      family inet6 {
        address 2001:DB8::1:1/32;
      }
    }
  }
  xe-0/0/19 {
    unit 0 {
      family bridge {
        interface-mode trunk;
        vlan-id-list 20-21;
      }
    }
  }
  gr-0/0/10 {
    unit 0 {
      tunnel {
        source 2001:DB8::2:1;
        destination 2001:DB8::3:1;
      }
    }
  }
}

```

```

        family bridge {
            interface-mode trunk;
            vlan-id-list 20-30;
        }
    }
}

VS-1 {
    instance-type virtual-switch;
    interface xe-0/0/19.0;
    interface gr-0/0/10.0;
    bridge-domains {
        bd1 {
            vlan-id 20;
        }
    }
}

```

Display the results of the configuration on Device 2:

user@host> **show configuration**

```

chassis {
    fpc 0 {
        pic 0 {
            tunnel-services {
                bandwidth 1g;
            }
        }
    }
    network-services enhanced-ip;
}

interfaces {
    ae0 {
        unit 0 {
            family inet6 {
                address 2001:DB8::11:1/32;
            }
        }
    }
    xe-0/0/1 {
        unit 0 {

```

```

        family bridge {
            interface-mode trunk;
            vlan-id-list 20-21;
        }
    }
}
gr-0/0/10 {
    unit 0 {
        tunnel {
            source 2001:DB8::21:1;
            destination 2001:DB8::31:1;
        }
        family bridge {
            interface-mode access;
            vlan-id-list 20-30;
        }
    }
}

VS-1 {
    instance-type virtual-switch;
    interface xe-0/0/1.0;
    interface gr-0/0/10.0;
    bridge-domains {
        bd1 {
            vlan-id 20;
        }
    }
}

```

Verification

IN THIS SECTION

- [Verifying the MAC Addresses Learned on GRE Interfaces | 121](#)

To confirm that the configuration is working properly, perform these tasks:

Verifying the MAC Addresses Learned on GRE Interfaces

Purpose

Display the MAC addresses learned on a GRE logical interface.

Action

From operational mode, use the **show bridge mac-table** command

```
MAC flags (S -static MAC, D -dynamic MAC, L -locally learned, C -Control MAC
          SE -Statistics enabled, NM -Non configured MAC, R -Remote PE MAC)
```

```
Routing instance : VS1
```

```
Bridging domain : bdl, VLAN : 20
```

MAC address	MAC flags	Logical interface	NH Index	RTR ID
00:00:00:11:11:11	D	gr-0/0/10.0		
00:00:00:11:11:12	D	gr-0/0/10.0		
00:00:00:11:11:13	D	gr-0/0/10.0		
00:00:00:11:11:14	D	gr-0/0/10.0		
00:00:00:11:11:15	D	gr-0/0/10.0		
00:00:00:11:11:16	D	gr-0/0/10.0		
00:00:00:11:11:17	D	gr-0/0/10.0		
00:00:00:11:11:18	D	gr-0/0/10.0		
00:00:00:11:11:19	D	gr-0/0/10.0		
00:00:00:11:11:1a	D	gr-0/0/10.0		
00:00:00:22:22:22	D	xe-0/0/19.0		
00:00:00:22:22:23	D	xe-0/0/19.0		
00:00:00:22:22:24	D	xe-0/0/19.0		
00:00:00:22:22:25	D	xe-0/0/19.0		
00:00:00:22:22:26	D	xe-0/0/19.0		
00:00:00:22:22:27	D	xe-0/0/19.0		
00:00:00:22:22:28	D	xe-0/0/19.0		
00:00:00:22:22:29	D	xe-0/0/19.0		
00:00:00:22:22:2a	D	xe-0/0/19.0		
00:00:00:22:22:2b	D	xe-0/0/19.0		

Meaning

The output displays MAC addresses learned on GRE logical tunnels.

Configuring PIM Tunnels

PIM tunnels are enabled automatically on routers that have a tunnel PIC and on which you enable PIM sparse mode. You do not need to configure the tunnel interface.

PIM tunnels are unidirectional.

In PIM sparse mode, the first-hop router encapsulates packets destined for the rendezvous point (RP) router. The packets are encapsulated with a unicast header and are forwarded through a unicast tunnel to the RP. The RP then de-encapsulates the packets and transmits them through its multicast tree. To perform the encapsulation and de-encapsulation, the first-hop and RP routers must be equipped with Tunnel PICs.

The Junos OS creates two interfaces to handle PIM tunnels:

- **pe**—Encapsulates packets destined for the RP. This interface is present on the first-hop router.
- **pd**—De-encapsulates packets at the RP. This interface is present on the RP.

NOTE: The **pe** and **pd** interfaces do not support class-of-service (CoS) configurations.

RELATED DOCUMENTATION

| [Tunnel Services Overview](#) | 18

Facilitating VRF Table Lookup Using Virtual Loopback Tunnel Interfaces

IN THIS SECTION

- [Configuring Virtual Loopback Tunnels for VRF Table Lookup](#) | 123
- [Configuring Tunnel Interfaces for Routing Table Lookup](#) | 125
- [Example: Configuring a Virtual Loopback Tunnel for VRF Table Lookup](#) | 126
- [Example: Virtual Routing and Forwarding \(VRF\) and Service Configuration](#) | 127

Configuring Virtual Loopback Tunnels for VRF Table Lookup

To enable egress filtering, you can either configure filtering based on the IP header, or you can configure a virtual loopback tunnel on routers equipped with a Tunnel PIC. [Table 8 on page 123](#) describes each method.

Table 8: Methods for Configuring Egress Filtering

Method	Interface Type	Configuration Guidelines	Comments
Filter traffic based on the IP header	Nonchannelized Point-to-Point Protocol / High Level Data Link Control (PPP/HDLC) core-facing SONET/SDH interfaces	Include the vrf-table-label statement at the [edit routing-instances instance-name] hierarchy level. For more information, see the <i>Junos OS VPNs Library for Routing Devices</i> .	There is no restriction on customer-edge (CE) router-to-provider edge (PE) router interfaces.
Configure a virtual loopback tunnel on routers equipped with a Tunnel PIC	All interfaces	See the guidelines in this section.	Router must be equipped with a Tunnel PIC. There is no restriction on the type of core-facing interface used or CE router-to-PE router interface used. You cannot configure a virtual loopback tunnel and the vrf-table-label statement at the same time.

You can configure a virtual loopback tunnel to facilitate VRF table lookup based on MPLS labels. You might want to enable this functionality so you can do either of the following:

- Forward traffic on a PE router to CE device interface, in a shared medium, where the CE device is a Layer 2 switch without IP capabilities (for example, a metro Ethernet switch).

The first lookup is done based on the VPN label to determine which VRF table to refer to, and the second lookup is done on the IP header to determine how to forward packets to the correct end hosts on the shared medium.

- Perform egress filtering at the egress PE router.

The first lookup on the VPN label is done to determine which VRF table to refer to, and the second lookup is done on the IP header to determine how to filter and forward packets. You can enable this functionality by configuring output filters on the VRF interfaces.

To configure a virtual loopback tunnel to facilitate VRF table lookup based on MPLS labels, you specify a virtual loopback tunnel interface name and associate it with a routing instance that belongs to a particular routing table. The packet loops back through the virtual loopback tunnel for route lookup. To specify a virtual loopback tunnel interface name, you configure the virtual loopback tunnel interface at the **[edit interfaces]** hierarchy level and include the **family inet** and **family mpls** statements:

```
vt-fpc/pic/port {
  unit 0 {
    family inet;
    family mpls;
  }
  unit 1 {
    family inet;
  }
}
```

To associate the virtual loopback tunnel with a routing instance, include the virtual loopback tunnel interface name at the **[edit routing-instances]** hierarchy level:

```
interface vt-fpc/pic/port;
```

NOTE: On virtual loopback tunnel interfaces, none of the logical interface statements except the **family** statement is supported. Note that you can configure only **inet** and **mpls** families, and you cannot configure IPv4 or IPv6 addresses on virtual loopback tunnel interfaces. Also, virtual loopback tunnel interfaces do not support class-of-service (CoS) configurations.

SEE ALSO

[Tunnel Services Overview](#) | 18

Configuring Tunnel Interfaces for Routing Table Lookup

To configure tunnel interfaces to facilitate routing table lookups for VPNs, you specify a tunnel's endpoint IP addresses and associate them with a routing instance that belongs to a particular routing table. This enables the Junos OS to search in the appropriate routing table for the route prefix, because the same prefix can appear in multiple routing tables. To configure the destination VPN, include the **routing-instance** statement:

```
routing-instance {  
    destination routing-instance-name;  
}
```

You can include this statement at the following hierarchy levels:

- [edit interfaces *gr-fpc/pic/port* unit *logical-unit-number* tunnel]
- [edit logical-systems *logical-system-name* interfaces *gr-fpc/pic/port* unit *logical-unit-number* tunnel]

This configuration indicates that the tunnel's destination address is in routing instance **routing-instance-name**. By default, the tunnel route prefixes are assumed to be in the default Internet routing table **inet.0**.

NOTE: If you configure a virtual loopback tunnel interface and the **vrf-table-label** statement on the same routing instance, the **vrf-table-label** statement takes precedence over the virtual loopback tunnel interface. For more information, see [“Configuring Virtual Loopback Tunnels for VRF Table Lookup” on page 123](#).

For more information about VPNs, see the *Junos OS VPNs Library for Routing Devices*.

SEE ALSO

[Tunnel Services Overview | 18](#)

[destination \(Routing Instance\) | 157](#)

Example: Configuring a Virtual Loopback Tunnel for VRF Table Lookup

Configure a virtual loopback tunnel for VRF table lookup:

```
[edit routing-instances]
routing-instance-1 {
  instance-type vrf;
  interface vt-1/0/0.0;
  interface so-0/2/2.0;
  route-distinguisher 2:3;
  vrf-import VPN-A-import;
  vrf-export VPN-A-export;
  routing-options {
    static {
      route 10.0.0.0/8 next-hop so-0/2/2.0;
    }
  }
}
routing-instance-2 {
  instance-type vrf;
  interface vt-1/0/0.1;
  interface so-0/3/2.0;
  route-distinguisher 4:5;
  vrf-import VPN-B-import;
  vrf-export VPN-B-export;
  routing-options {
    static {
      route 10.0.0.0/8 next-hop so-0/3/2.0;
    }
  }
}
[edit interfaces]
vt-1/0/0 {
  unit 0 {
    family inet;
    family mpls;
  }
  unit 1 {
    family inet;
  }
}
```

SEE ALSO

[Tunnel Services Overview](#) | 18

Example: Virtual Routing and Forwarding (VRF) and Service Configuration

The following example combines virtual routing and forwarding (VRF) and services configuration:

```
[edit policy-options]
policy-statement test-policy {
  term t1 {
    then reject;
  }
}
[edit routing-instances]
test {
  interface ge-0/2/0.0;
  interface sp-1/3/0.20;
  instance-type vrf;
  route-distinguisher 10.58.255.1:37;
  vrf-import test-policy;
  vrf-export test-policy;
  routing-options {
    static {
      route 0.0.0.0/0 next-table inet.0;
    }
  }
}
[edit interfaces]
ge-0/2/0 {
  unit 0 {
    family inet {
      service {
        input service-set nat-me;
        output service-set nat-me;
      }
    }
  }
}
sp-1/3/0 {
  unit 0 {
    family inet;
```

```

}
unit 20 {
    family inet;
    service-domain inside;
}
unit 21 {
    family inet;
    service-domain outside;
}
[edit services]
stateful-firewall {
    rule allow-any-input {
        match-direction input;
        term t1 {
            then accept;
        }
    }
}
nat {
    pool hide-pool {
        address 10.58.16.100;
        port automatic;
    }
    rule hide-all-input {
        match-direction input;
        term t1 {
            then {
                translated {
                    source-pool hide-pool;
                    translation-type source napt-44;
                }
            }
        }
    }
}
service-set nat-me {
    stateful-firewall-rules allow-any-input;
    nat-rules hide-all-input;
    interface-service {
        service-interface sp-1/3/0.20;
    }
}
}

```


2

CHAPTER

Encryption Services

[Encryption Services Overview | 130](#)

[Configuring Encryption Interfaces | 130](#)

Encryption Services Overview

The IP Security (IPsec) architecture provides a security suite for the IP version 4 (IPv4) and IP version 6 (IPv6) network layers. The suite provides functionality such as authentication of origin, data integrity, confidentiality, replay protection, and nonrepudiation of source. It also defines mechanisms for key generation and exchange, management of security associations, and support for digital certificates.

IPsec defines a security association (SA) and key management framework that can be used with any network layer protocol. The SA specifies what protection policy to apply to traffic between two IP-layer entities. For more information, see the *Junos OS Administration Library*. The standards are defined in the following RFCs:

- RFC 2401, *Security Architecture for the Internet Protocol*
- RFC 2406, *IP Encapsulating Security Payload (ESP)*

Configuring Encryption Interfaces

IN THIS SECTION

- [Configuring Encryption Interfaces | 130](#)
- [Configuring Filters for Traffic Transiting the ES PIC | 132](#)
- [Configuring an ES Tunnel Interface for a Layer 3 VPN | 139](#)
- [Configuring ES PIC Redundancy | 139](#)
- [Configuring IPsec Tunnel Redundancy | 140](#)

Configuring Encryption Interfaces

When you configure the encryption interface, you associate the configured SA with a logical interface. This configuration defines the tunnel, including the logical unit, tunnel addresses, maximum transmission unit (MTU), optional interface addresses, and the name of the IPsec SA to apply to traffic. To configure an encryption interface, include the following statements at the `[edit interfaces es-fpc/pic/port unit logical-unit-number]` hierarchy level:

```

family inet {
    ipsec-sa ipsec-sa; # name of security association to apply to packet
    address address; # local interface address inside local VPN
    destination address; # destination address inside remote VPN
}
tunnel {
    source source-address;
    destination destination-address;
}

```

The addresses configured as the tunnel source and destination are the addresses in the outer IP header of the tunnel.

NOTE: You must configure the tunnel source address locally on the router, and the tunnel destination address must be a valid address for the security gateway terminating the tunnel.

The ES Physical Interface Card (PIC) is supported on M Series and T Series routers.

The SA must be a valid tunnel-mode SA. The interface address and destination address listed are optional. The destination address allows the user to configure a static route to encrypt traffic. If a static route uses that destination address as the next hop, traffic is forwarded through the portion of the tunnel in which encryption occurs.

Specifying the Security Association Name for Encryption Interfaces

The security association is the set of properties that defines the protocols for encrypting Internet traffic. To configure encryption interfaces, you specify the SA name associated with the interface by including the **ipsec-sa** statement at the **[edit interfaces es-fpc/pic/port unit logical-unit-number family inet]** hierarchy level:

```

ipsec-sa sa-name;

```

For information about configuring the security association, see [“Configuring Filters for Traffic Transiting the ES PIC” on page 132](#).

Configuring the MTU for Encryption Interfaces

The protocol MTU value for encryption interfaces must always be less than the default interface MTU value of 3900 bytes; the configuration fails to commit if you select a greater value. To set the MTU value, include the **mtu** statement at the **[edit interfaces interface-name unit logical-unit-number family inet]** hierarchy level:

```
mtu bytes;
```

For more information, see the *Junos OS Network Interfaces Library for Routing Devices*.

Example: Configuring an Encryption Interface

Configure an IPsec tunnel as a logical interface on the ES PIC. The logical interface specifies the tunnel through which the encrypted traffic travels. The **ipsec-sa** statement associates the security profile with the interface.

```
[edit interfaces]
es-0/0/0 {
  unit 0 {
    tunnel {
      source 10.5.5.5; # tunnel source address
      destination 10.6.6.6; # tunnel destination address
    }
    family inet {
      ipsec-sa manual-sa1; # name of security association to apply to packet
      mtu 3800;
      address 10.1.1.8/32 { # local interface address inside local VPN
        destination 10.2.2.254; # destination address inside remote VPN
      }
    }
  }
}
```

Configuring Filters for Traffic Transiting the ES PIC

IN THIS SECTION

- [Traffic Overview | 133](#)
- [Configuring the Security Association | 134](#)
- [Configuring an Outbound Traffic Filter | 135](#)
- [Applying the Outbound Traffic Filter | 136](#)
- [Configuring an Inbound Traffic Filter | 137](#)
- [Applying the Inbound Traffic Filter to the Encryption Interface | 137](#)

This section contains the following topics:


Traffic Overview

Traffic configuration defines the traffic that must flow through the tunnel. You configure outbound and inbound firewall filters, which identify and direct traffic to be encrypted and confirm that decrypted traffic parameters match those defined for the given tunnel. The outbound filter is applied to the LAN or WAN interface for the incoming traffic you want to encrypt. The inbound filter is applied to the ES PIC to check the policy for traffic coming in from the remote host. Because of the complexity of configuring a router to forward packets, no automatic checking is done to ensure that the configuration is correct.

NOTE: The valid firewall filters statements for IPsec are **destination-port**, **source-port**, **protocol**, **destination-address**, and **source-address**.

In [Figure 6 on page 133](#), Gateway A protects the network **10.1.1.0/24**, and Gateway B protects the network **10.2.2.0/24**. The gateways are connected by an IPsec tunnel. For more information about firewalls, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

Figure 6: Example: IPsec Tunnel Connecting Security Gateways

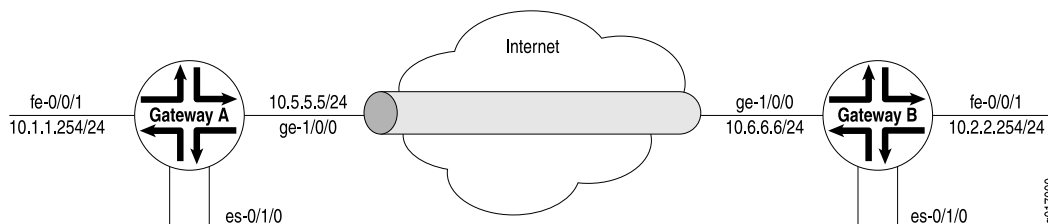

The SA and ES interface for security Gateway A are configured as follows:

```
[edit security ipsec]
security-association manual-sa1 {
  manual {
    direction bidirectional {
      protocol esp;
      spi 2312;
      authentication {
        algorithm hmac-md5-96;
        key ascii-text 1234123412341234;
      }
      encryption {
        algorithm 3des-cbc;
        key ascii-text 123456789009876543211234;
      }
    }
  }
}
```

```

    }
  }
}
[edit interfaces es-0/1/0]
unit 0 {
  tunnel {
    source 10.5.5.5;
    destination 10.6.6.6;
  }
  family inet {
    ipsec-sa manual-sa1;
    address 10.1.1.8/32 {
      destination 10.2.2.254;
    }
  }
}

```

Configuring the Security Association

To configure the SA, include the **security-association** statement at the **[edit security]** hierarchy level:

```

security-association name {
  mode (tunnel | transport);
  manual {
    direction (inbound | outbound | bi-directional) {
      auxiliary-spi auxiliary-spi-value;
      spi spi-value;
      protocol (ah | esp | bundle);
      authentication {
        algorithm (hmac-md5-96 | hmac-sha1-96);
        key (ascii-text key | hexadecimal key);
      }
      encryption {
        algorithm (des-cbc | 3des-cbc);
        key (ascii-text key | hexadecimal key);
      }
    }
  }
  dynamic {
    replay-window-size (32 | 64);
    ipsec-policy policy-name;
  }
}

```

```
}
```

For more information about configuring an SA, see the *Junos OS Administration Library*. For information about applying the SA to an interface, see 147531 [“Specifying the Security Association Name for Encryption Interfaces” on page 131](#).

Configuring an Outbound Traffic Filter

To configure the outbound traffic filter, include the **filter** statement at the **[edit firewall]** hierarchy level:

```
filter filter-name {
  term term-name {
    from {
      match-conditions;
    }
    then {
      action;
      action-modifiers;
    }
  }
}
```

For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

Example: Configuring an Outbound Traffic Filter

Firewall filters for outbound traffic direct the traffic through the desired IPsec tunnel and ensure that the tunneled traffic goes out the appropriate interface (see [Figure 6 on page 133](#)). Here, an outbound firewall filter is created on security Gateway A; it identifies the traffic to be encrypted and adds it to the input side of the interface that carries the internal virtual private network (VPN) traffic:

```
[edit firewall]
filter ipsec-encrypt-policy-filter {
  term term1 {
    from {
      source-address { # local network
        10.1.1.0/24;
      }
      destination-address { # remote network
        10.2.2.0/24;
      }
    }
  }
}
then ipsec-sa manual-sa1; # apply SA name to packet
term default {
```

```

    then accept;
}

```

NOTE: The source address, port, and protocol on the outbound traffic filter must match the destination address, port, and protocol on the inbound traffic filter. The destination address, port, and protocol on the outbound traffic filter must match the source address, port, and protocol on the inbound traffic filter.

Applying the Outbound Traffic Filter

After you have configured the outbound firewall filter, you apply it by including the **filter** statement at the **[edit interfaces *interface-name* unit *logical-unit-number* family inet]** hierarchy level:

```

filter {
    input filter-name;
}

```

Example: Applying the Outbound Traffic Filter

Apply the outbound traffic filter. The outbound filter is applied on the Fast Ethernet interface at the **[edit interfaces *fe-0/0/1* unit 0 family inet]** hierarchy level. Any packet matching the IPsec action term (**term 1**) on the input filter (**ipsec-encrypt-policy-filter**), configured on the Fast Ethernet interface, is directed to the ES PIC interface at the **[edit interfaces *es-0/1/0* unit 0 family inet]** hierarchy level. So, if a packet arrives from the source address **10.1.1.0/24** and goes to the destination address **10.2.2.0/24**, the Packet Forwarding Engine directs the packet to the ES PIC interface, which is configured with the **manual-sa1** SA. The ES PIC receives the packet, applies the **manual-sa1** SA, and sends the packet through the tunnel.

The router must have a route to the tunnel end point; add a static route if necessary.

```

[edit interfaces]
fe-0/0/1 {
    unit 0 {
        family inet {
            filter {
                input ipsec-encrypt-policy-filter;
            }
            address 10.1.1.254/24;
        }
    }
}

```


Configuring an Inbound Traffic Filter

To configure an inbound traffic filter, include the **filter** statement at the **[edit firewall]** hierarchy level:

```
filter filter-name {
  term term-name {
    from {
      match-conditions;
    }
    then {
      action;
      action-modifiers;
    }
  }
}
```

For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

Example: Configuring an Inbound Traffic Filter

Configure an inbound firewall filter. This filter performs the final IPsec policy check and is created on security gateway A. The policy check ensures that only packets that match the traffic configured for this tunnel are accepted.

```
[edit firewall]
filter ipsec-decrypt-policy-filter {
  term term1 { # perform policy check
    from {
      source-address { # remote network
        10.2.2.0/24;
      }
      destination-address { # local network
        10.1.1.0/24;
      }
    }
    then accept;
  }
}
```

Applying the Inbound Traffic Filter to the Encryption Interface

After you create the inbound firewall filter, you can apply it to the ES PIC. To apply the filter to the ES PIC, include the **filter** statement at the **[edit interfaces es-fpc/pic/port unit logical-unit-number family inet filter]** hierarchy level:

```
filter {
```

```
input filter;
}
```

The input filter is the name of the filter applied to received traffic. For a configuration example, see [“Example: Configuring an Inbound Traffic Filter” on page 137](#). For more information about firewall filters, see the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*.

Example: Applying the Inbound Traffic Filter to the Encryption Interface

Apply the inbound firewall filter (**ipsec-decrypt-policy-filter**) to the decrypted packet to perform the final policy check. The IPsec **manual-sa1** SA is referenced at the **[edit interfaces es-1/2/0 unit 0 family inet]** hierarchy level and decrypts the incoming packet.

The Packet Forwarding Engine directs IPsec packets to the ES PIC. It uses the packet's security parameter index (SPI), protocol, and destination address to look up the SA configured on one of the ES interfaces. The IPsec **manual-sa1** SA is referenced at the **[edit interfaces es-1/2/0 unit 0 family inet]** hierarchy level and is used to decrypt the incoming packet. When the packets are processed (decrypted, authenticated, or both), the input firewall filter (**ipsec-decrypt-policy-filter**) is applied on the decrypted packet to perform the final policy check. **term1** defines the decrypted (and verified) traffic and performs the required policy check. For information about **term1**, see [“Example: Configuring an Inbound Traffic Filter” on page 137](#).

NOTE: The inbound traffic filter is applied after the ES PIC has processed the packet, so the decrypted traffic is defined as any traffic that the remote gateway is encrypting and sending to this router. IKE uses this filter to determine the policy required for a tunnel. This policy is used during the negotiation with the remote gateway to find the matching SA configuration.

```
[edit interfaces]
es-1/2/0 {
  unit 0 {
    tunnel {
      source 10.5.5.5; # tunnel source address
      destination 10.6.6.6; # tunnel destination address
    }
    family inet {
      filter {
        input ipsec-decrypt-policy-filter;
      }
      ipsec-sa manual-sa1; # SA name applied to packet
      address 10.1.1.8/32 { # local interface address inside local VPN
        destination 10.2.2.254; # destination address inside remote VPN
      }
    }
  }
}
```

```
}
```

Configuring an ES Tunnel Interface for a Layer 3 VPN

To configure an ES tunnel interface for a Layer 3 VPN, you need to configure an ES tunnel interface on the provider edge (PE) router and on the customer edge (CE) router. You also need to configure IPsec on the PE and CE routers. For more information about configuring an ES tunnel for a Layer 3 VPN, see the *Junos OS VPNs Library for Routing Devices*.

Configuring ES PIC Redundancy

You can configure ES PIC redundancy on M Series and T Series routers that have multiple ES PICs. With ES PIC redundancy, one ES PIC is active and another ES PIC is on standby. When the primary ES PIC has a servicing failure, the backup becomes active, inherits all the tunnels and SAs, and acts as the new next hop for IPsec traffic. Reestablishment of tunnels on the backup ES PIC does not require new Internet Key Exchange (IKE) negotiations. If the primary ES PIC comes online, it remains in standby and does not preempt the backup. To determine which PIC is currently active, use the **show ipsec redundancy** command.

NOTE: ES PIC redundancy is supported on M Series and T Series routers.

To configure an ES PIC as the backup, include the **backup-interface** statement at the **[edit interfaces fpc/pic/port es-options]** hierarchy level:

```
backup-interface es-fpc/pic/port;
```

Example: Configuring ES PIC Redundancy

After you create the inbound firewall filter, apply it to the master ES PIC. Here, the inbound firewall filter (**ipsec-decrypt-policy-filter**) is applied on the decrypted packet to perform the final policy check. The IPsec **manual-sa1** SA is referenced at the **[edit interfaces es-1/2/0 unit 0 family inet]** hierarchy level and decrypts the incoming packet. This example does not show SA and filter configuration. For information about SA and filter configuration, see the *Junos OS Administration Library*, the *Routing Policies, Firewall Filters, and Traffic Policers User Guide*, and [“Example: Configuring an Inbound Traffic Filter” on page 137](#).

```


[edit interfaces]
es-1/2/0 {
  es-options {
    backup-interface es-1/0/0;
  }
  unit 0 {
    tunnel {
      source 10.5.5.5;
      destination 10.6.6.6;
    }
    family inet {
      ipsec-sa manual-sa1;
      filter {
        input ipsec-decrypt-policy-filter;
      }
      address 10.1.1.8/32 {
        destination 10.2.2.254;
      }
    }
  }
}

```

Configuring IPsec Tunnel Redundancy

You can configure IPsec tunnel redundancy by specifying a backup destination address. The local router sends keepalives to determine the remote site's reachability. When the peer is no longer reachable, a new tunnel is established. For up to 60 seconds during failover, traffic is dropped without notification being sent. [Figure 7 on page 140](#) shows IPsec primary and backup tunnels.

Figure 7: IPsec Tunnel Redundancy

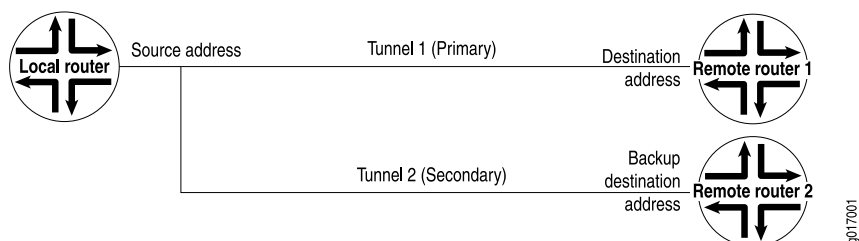

To configure IPsec tunnel redundancy, include the **backup-destination** statement at the `[edit interfaces unit logical-unit-number tunnel]` hierarchy level:

```
backup-destination address;  
destination address;  
source address;
```

NOTE: Tunnel redundancy is supported on M Series and T Series routers.

The primary and backup destinations must be on different routers.

The tunnels must be distinct from each other and policies must match.

For more information about tunnels, see [“Tunnel Interface Configuration on MX Series Routers Overview” on page 26](#).

3

CHAPTER

Configuration Statements

- [address \(Interfaces\) | 145](#)
- [allow-fragmentation | 146](#)
- [apply-groups-except | 147](#)
- [backup-destination | 148](#)
- [backup-interface | 149](#)
- [bandwidth \(Tunnel Services\) | 150](#)
- [clear-dont-fragment-bit \(Interfaces GRE Tunnels\) | 152](#)
- [copy-tos-to-outer-ip-header | 154](#)
- [core-facing | 155](#)
- [destination \(Interfaces\) | 156](#)
- [destination \(Routing Instance\) | 157](#)
- [destination \(Tunnel Remote End\) | 158](#)
- [destination-networks | 159](#)
- [destination-udp-port \(FTI\) | 160](#)
- [do-not-fragment | 161](#)

[dynamic-tunnels](#) | **162**

[es-options](#) | **164**

[family](#) | **165**

[family bridge](#) | **167**

[family bridge \(GRE Interfaces\)](#) | **168**

[filter](#) | **170**

[hold-time \(OAM\)](#) | **171**

[interfaces](#) | **172**

[ipsec-sa](#) | **173**

[keepalive-time](#) | **174**

[key](#) | **175**

[multicast-only](#) | **176**

[peer-unit](#) | **177**

[peer-certificate-type](#) | **178**

[reassemble-packets](#) | **179**

[redundancy-group \(Interfaces\)](#) | **180**

[redundancy-group \(Chassis - MX Series\)](#) | **182**

[routing-instance](#) | **183**

[routing-instances](#) | **184**

[routing-options](#) | **185**

[source](#) | **186**

[source](#) | **187**

[source-address](#) | **188**

[ttl](#) | **189**

[tunnel](#) | **190**

[tunnel](#) | **191**

[tunnel-services \(Chassis\)](#) | **192**

[udp \(FTI\)](#) | **194**

[unit \(Interfaces\)](#) | **195**

[unit \(Interfaces\)](#) | **197**

[vni \(Interfaces\)](#) | **198**

[vxlan-gpe \(FTI\)](#) | **199**

address (Interfaces)

Syntax

```
address address {  
    destination address;  
}
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number family family]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure the interface address.

Options

address—Address of the interface.

The remaining statement is explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Encryption Interfaces](#) | 130

allow-fragmentation

Syntax

```
allow-fragmentation;
```

Hierarchy Level

```
[edit interfaces gr-fpc/pic/port unit logical-unit-number tunnel],  
[edit logical-systems logical-system-name interfaces gr-fpc/pic/port unit logical-unit-number tunnel]
```

Release Information

Statement introduced in Junos OS Release 9.2.

Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.

Statement introduced in Junos OS Release 19.3 for MPC10E line card.

Description

For a generic routing encapsulation (GRE) tunnel, enable fragmentation of GRE-encapsulated packets whose size exceeds the maximum transmission unit (MTU) value of a link that the packet passes through. The don't-fragment (DF) bit is not set in the outer IP header of GRE-encapsulated packets.

To enable the reassembly of fragmented GRE-encapsulated packets on GRE tunnel interfaces at the endpoint of the GRE tunnel, include the [reassemble-packets](#) statement for the interface.

NOTE: The [reassemble-packets](#) statement is not supported on MPC10E line card in Junos OS Release 19.3.

Default

If you do not include the **allow-fragmentation** statement, fragmentation of GRE-encapsulated packets is disabled.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[reassemble-packets](#) | 179

apply-groups-except

Syntax

```
apply-groups-except values;
```

Hierarchy Level

```
[edit interfaces]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Disable inheritance of a configuration group.

Options

value—.

Required Privilege Level

configure—To enter configuration mode, but other required privilege levels depend on where the statement is located in the configuration hierarchy.

RELATED DOCUMENTATION

<i>groups</i>
<i>Disabling Inheritance of a Junos OS Configuration Group</i>
Tunnel Services Overview 18
Tunnel Interface Configuration on MX Series Routers Overview 26

backup-destination

Syntax

```
backup-destination destination-address;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number tunnel],[edit logical-systems logical-system-name interfaces
interface-name unit logical-unit-number tunnel]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.

Description

For tunnel interfaces, specify the remote address of the backup tunnel.

Options

destination-address—Address of the remote side of the connection.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[destination \(Interfaces\) | 156](#)

[destination \(Tunnel Remote End\) | 158](#)

[Configuring IPsec Tunnel Redundancy | 140](#)

backup-interface

Syntax

```
backup-interface interface-name;
```

Hierarchy Level

```
[edit interfaces interface-name es-options]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure a backup ES Physical Interface Card (PIC). When the primary ES PIC has a servicing failure, the backup becomes active, inherits all the tunnels and security associations (SAs), and acts as the new next hop for IPsec traffic.

Options

interface-name—Name of ES interface to serve as the backup.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring ES PIC Redundancy](#) | 139

bandwidth (Tunnel Services)

Syntax

```
bandwidth bandwidth-value;
```

Hierarchy Level

```
[edit chassis fpc slot-number pic number tunnel-services]
```

Release Information

Statement introduced in Junos OS Release 8.2.

Statement introduced in Junos OS Release 12.3X54 for ACX Series routers.

Description

(ACX Series, MX Series 5G Universal Routing Platforms and T4000 Core Routers only) Configure the amount of bandwidth in gigabits per second reserved on each Packet Forwarding Engine for tunnel traffic using tunnel services. Configuring the bandwidth creates a virtual tunnel interface that is represented as **lt-*<fpc/pic/port>***.

Options

bandwidth-value—Amount of bandwidth in Gbps to reserve for tunnel traffic using tunnel services:

- On ACX Series routers, the bandwidth values can be **1g** or **10g**.
- On MX Series routers, the bandwidth values can be as follows:
 - **1g**
 - **10g** through **100g** in 10 Gbps increments: **10g, 20g, 30g, 40g, 50g, 60g, 70g, 80g, 90g, 100g**
 - **100g** through **400g** in 100 Gbps increments: **100g, 200g, 300g, 400g**
- On T4000 routers, the bandwidth values can be **10g** through **100g** in 10 Gbps increments: **10g, 20g, 30g, 40g, 50g, 60g, 70g, 80g, 90g, 100g**.

NOTE: The bandwidth that you specify determines the port number of the tunnel interfaces that are created. When you specify a bandwidth of **1g**, the port number is always 10. When you specify any other bandwidth, the port number is always 0.

NOTE: If you specify a bandwidth that is not compatible with the type of DPCs or MPCs and their respective Packet Forwarding Engine, tunnel services are not activated. For example, you cannot specify 1 gigabit per second bandwidth for a Packet Forwarding Engine on a 10-Gigabit Ethernet 4-port DPC or 16x10GE 3D MPC.

When the tunnel bandwidth is unspecified in the Routing Engine CLI, the maximum tunnel bandwidth for MPC3E is 60G.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring Tunnel Interfaces on a Gigabit Ethernet 40-Port DPC | 36](#)

[Tunnel Interface Configuration on MX Series Routers Overview | 26](#)

[Configuring Tunnel Interfaces on T4000 Routers | 38](#)

[Example: Configuring Tunnel Interfaces on a 10-Gigabit Ethernet 4-Port DPC | 36](#)

[Example: Configuring Tunnel Interfaces on the MPC3E | 30](#)

[tunnel-services \(Chassis\) | 192](#)

clear-dont-fragment-bit (Interfaces GRE Tunnels)

Syntax

```
clear-dont-fragment-bit;
```

Hierarchy Level

```
[edit interfaces gr-fpc/pic/port unit logical-unit-number],  
[edit logical-systems logical-system-name interfaces gr-fpc/pic/port unit logical-unit-number]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in 10.0R2 for 16x10GE MPC

Statement introduced in 13.2R4 for Multiservices MPC

Statement introduced in Junos OS Release 10.2 for MPC1 and MPC1Q.

Statement introduced in Junos OS Release 10.1 for MPC2 and variants.

Statement introduced in Junos OS Release 11.2R4 for MPC1E and MPC1E Q.

Statement introduced in Junos OS Release 11.2R4 for MPC2E and variants

Statement introduced in Junos OS Release 12.1 for MPC3E and variants

Statement introduced in Junos OS Release 12.2 for MPC2E P

Statement introduced in Junos OS Release 12.3R2 for MPC4E and variants

Statement introduced in Junos OS Release 13.3R2 and later for MPC5E and variants

Statement introduced in Junos OS Release 14.1R4, 14.2R3 and Junos Continuity 15.1 for MPC2E NG and variants

Statement introduced in Junos OS Release 14.1R4, 14.2R3 and Junos Continuity 15.1 for MPC3E NG and variants

Statement introduced in Junos OS Release 15.1F4 with Junos Continuity and 16.1R1 and later for MPC7E and variants

Statement introduced in Junos OS Release 15.1F7 for MPC6E

Statement introduced in Junos OS Release 15.1F7 for MPC8E

Statement introduced in Junos OS Release 15.1F7 for MPC9E

Statement introduced in Junos OS Release 17.3 for MX10003 MPC (Multi-Rate)

Description

Clear the Don't Fragment (DF) bit on all IP version 4 (IPv4) packets entering the generic routing encapsulation (GRE) tunnel on Adaptive Services (AS) or Multiservices interfaces. If the encapsulated packet size exceeds the tunnel maximum transmission unit (MTU), the packet is fragmented before encapsulation. The statement is supported only on MX Series routers and all M Series routers except the M320 router.

When you configure the **clear-dont-fragment-bit** statement on an interface with the MPLS protocol family enabled, you must specify an MTU value. This MTU value must not be greater than maximum supported value, which is 9192.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Enabling Fragmentation on GRE Tunnels](#) | 65

copy-tos-to-outer-ip-header

Syntax

```
copy-tos-to-outer-ip-header;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number],  
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]
```

Release Information

Statement introduced in Junos OS Release 8.2.

Description

For GRE tunnel interfaces only, enable the inner IP header's ToS bits to be copied to the outer IP packet header.

To verify that this option is enabled at the interface level, use the **show interfaces *interface-name* detail** command.

Default

If you omit this statement, the ToS bits in the outer IP header are set to 0.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring a GRE Tunnel to Copy ToS Bits to the Outer IP Header](#) | 73

core-facing

Syntax

```
core-facing;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number family family],
```

Release Information

Statement introduced in Junos OS Release 15.1.

Description

Specifies that the VLAN is physically connected to a core-facing ISP router and ensures that the network does not improperly treat the interface as a client interface. When specified, the interface is inserted into the core-facing default mesh group where traffic from pseudowires that belong to the default mesh group is not forwarded on the core-facing link.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Junos OS Broadband Subscriber Management and Services Library

[Tunnel Services Overview](#) | 18

[Tunnel Interface Configuration on MX Series Routers Overview](#) | 26

destination (Interfaces)

Syntax

```
destination address;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number tunnel],
[edit interfaces interface-name unit logical-unit-number family inet address address],
[edit interfaces interface-name unit logical-unit-number tunnel],
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet address
address]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

For CoS on ATM interfaces, specify the remote address of the connection.

For point-to-point interfaces only, specify the address of the interface at the remote end of the connection.

For tunnel and encryption interfaces, specify the remote address of the tunnel.

Options

address—Address of the remote side of the connection.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Linear RED Profiles on ATM Interfaces](#)

[Multilink and Link Services Logical Interface Configuration Overview](#)

[Configuring Encryption Interfaces | 130](#)

[Configuring Traffic Sampling on MX, M and T Series Routers](#)

[Configuring Flow Monitoring](#)

[Configuring Unicast Tunnels | 69](#)

destination (Routing Instance)

Syntax

```
destination routing-instance-name;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number tunnel routing-instance]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the destination routing instance that points to the routing table containing the tunnel destination address.

Default

The default Internet routing table **inet.0**.

Options

routing-instance-name—Name of the destination routing instance.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Tunnel Interfaces for Routing Table Lookup](#) | 125

destination (Tunnel Remote End)

Syntax

```
destination destination-address;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number tunnel],  
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number tunnel]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.1 for EX Series switches.

Description

For tunnel interfaces, specify the remote address of the tunnel.

Options

destination-address—Address of the remote side of the connection.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Unicast Tunnels](#) | 69

Configuring Traffic Sampling on MX, M and T Series Routers

Configuring Flow Monitoring

destination-networks

Syntax

```
destination-networks prefix;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options dynamic-tunnels
tunnel-name],
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name rsvp-te entry],
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name],
[edit routing-instances routing-instance-name routing-options dynamic-tunnels tunnel-name],
[edit routing-instances routing-instance-name routing-options dynamic-tunnels tunnel-name rsvp-te entry],
[edit routing-options dynamic-tunnels tunnel-name],
[edit routing-options dynamic-tunnels tunnel-name rsvp-te entry]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Specify the IPv4 prefix range for the destination network. Only tunnels within the specified IPv4 prefix range can be created.

Options

prefix—Destination prefix of the network.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring GRE Tunnels for Layer 3 VPNs

[Dynamic Tunnels Overview](#) | 25

Configuring RSVP Automatic Mesh

destination-udp-port (FTI)

Syntax

```
destination-udp-port destination-udp-port;
```

Hierarchy Level

```
[edit interfaces name unit name tunnel encapsulation vxlan-gpe]
```

Release Information

Statement introduced in Junos OS Release 18.3R1 for MX Series routers.

Description

Assign a numeric value to write to the destination-udp-port-field to identify a Virtual Extensible LAN (VXLAN).

Range: 1 through 65,535

Required Privilege Level

routing

RELATED DOCUMENTATION

[Flexible Tunnel Interfaces Overview | 39](#)

[Configuring Flexible Tunnel Interfaces | 44](#)

[show interfaces fti | 269](#)

[vni \(Interfaces\) | 198](#)

[Example: Configuring Flexible Tunnel Interfaces on MX Series Routers | 48](#)

do-not-fragment

Syntax

```
do-not-fragment;
```

Hierarchy Level

```
[edit interfaces gr-fpc/pic/port unit logical-unit-number tunnel],  
[edit logical-systems logical-system-name interfaces gr-fpc/pic/port unit logical-unit-number tunnel]
```

Release Information

Statement introduced in Junos OS Release 9.2.

Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.

Statement introduced in Junos OS Release 19.3 for MPC10E line card.

Description

For a generic routing encapsulation (GRE) tunnel, disable fragmentation of GRE-encapsulated packets. This sets the do-not-fragment (DF) bit in the outer IP header of the GRE-encapsulated packets so that they do not get fragmented anywhere in the path. When the size of a GRE-encapsulated packet is greater than the MTU of a link that the packet passes through, the GRE-encapsulated packet is dropped.

Default

By default, fragmentation of GRE-encapsulated packets is disabled.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[allow-fragmentation](#) | 146

[reassemble-packets](#) | 179

[Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation](#) | 73

Junos OS Services Interfaces Library for Routing Devices

dynamic-tunnels

Syntax

```
dynamic-tunnels tunnel-name {
  destination-networks prefix;
  gre;
  rsvp-te entry-name {
    destination-networks network-prefix;
    label-switched-path-template (Multicast) {
      default-template;
      template-name;
    }
  }
  source-address address;
  spring-te;
  traceoptions;
  tunnel-attributes name {
    dynamic-tunnel-anchor-pfe dynamic-tunnel-anchor-pfe;
    dynamic-tunnel-anti-spoof (off | on);
    dynamic-tunnel-gre-key
    dynamic-tunnel-mtu dynamic-tunnel-mtu;
    dynamic-tunnel-source-prefix dynamic-tunnel-source-prefix;
    dynamic-tunnel-type V4oV6;
  }
}
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options],
[edit logical-systems logical-system-name routing-options],
[edit routing-instances routing-instance-name routing-options],
[edit routing-options]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Configure a dynamic tunnel between two PE routers.

NOTE: ACX Series routers do not support the **gre** statement.

Configure dynamic IPv4-over-IPv6 tunnels and define their attributes to forward IPv4 traffic over an IPv6-only network. IPv4 traffic is tunneled from customer premises equipment to IPv4-over-IPv6 gateways. You must also configure **extended-nexthop** option at **[edit protocols bgp family inet unicast]** hierarchy level to allow BGP to route IPv4 address families over an IPv6 session.

Options

gre—Enable dynamic generic routing encapsulation type tunnel mode for IPv4

Values:

- **next-hop-based-tunnel**—Enable next hop base dynamic-tunnel for steering IPv4 traffic with IPv6 next hop address.

source-address—Specify the source address of the tunnel.

tunnel-name—Name of the dynamic tunnel.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

extended-nexthop

tunnel-attributes

Example: Configuring a Two-Tiered Virtualized Data Center for Large Enterprise Networks

Understanding Redistribution of IPv4 Routes with IPv6 Next Hop into BGP

es-options

Syntax

```
es-options {  
    backup-interface interface-name;  
}
```

Hierarchy Level

```
[edit interfaces interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

On ES interfaces, configure ES interface-specific interface properties.

The **backup-interface** statement is explained separately.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring ES PIC Redundancy](#) | 139

family

Syntax

```
family family {
    ipsec-sa sa-name;
}
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure protocol family information for the logical interface.

Options

family—Protocol family:

- **ccc**—Circuit cross-connect protocol suite
- **inet**—IP version 4 suite
- **inet6**—IP version 6 suite
- **iso**—Open Systems Interconnection (OSI) International Organization for Standardization (ISO) protocol suite
- **mlfr-end-to-end**—Multilink Frame Relay FRF.15
- **mlfr-uni-nni**—Multilink Frame Relay FRF.16
- **multilink-ppp**—Multilink Point-to-Point Protocol
- **mpls**—MPLS
- **tcc**—Translational cross-connect protocol suite
- **tnp**—Trivial Network Protocol
- **vpis**—Virtual private LAN service

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Encryption Interfaces](#) | 130

Junos OS Network Interfaces Library for Routing Devices for other statements that do not affect services interfaces.

family bridge

Syntax

```
family bridge {
  apply-groups value;
  apply-groups-except value;
  core-facing;
  interface-mode access | trunk;
  inner-vlan-id-list inner-vlan-id-range;
  storm-control;
  vlan-id vlan-id ;
  vlan-id-list vlan-id-range;
}
```

Hierarchy Level

```
[edit interfaces]
[edit logical-systems name interfaces]
```

Release Information

Statement introduced in Junos OS Release 15.1.

Starting in Junos OS release 17.4R1 for MX Series routers, support for storm control was added for logical systems.

Description

Family bridge is used when you want a port that has more than one logical unit, each with the same or different encapsulations. Bridge domains are associated with GRE interface with the corresponding BD VLAN.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

system—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Tunnel Services Overview](#) | 18

[Tunnel Interface Configuration on MX Series Routers Overview](#) | 26

family bridge (GRE Interfaces)

Syntax

```
family bridge {  
    interface-mode (access | trunk);  
    core-facing;  
    vlan-id number;  
    vlan-id-list vlan-list;  
}
```

Hierarchy Level

```
[edit interfaces gr-fpc/pic/port.unit]
```

Release Information

Statement at the `[edit interfaces gr-fpc/pic/port.unit]` hierarchy level introduced in Junos OS Release 15.1 for MX Series routers.

Description

Configure the bridge domain family on GRE interfaces. To enable Layer 2 Ethernet packets to be terminated on GRE tunnels, you must configure the bridge domain protocol family on the **gr-** interfaces and associate the **gr-** interfaces with the bridge domain. You must configure the GRE interfaces as core-facing interfaces, and they must be access or trunk interfaces. To configure the bridge domain family on **gr-** interfaces, include the **family bridge** statement at the `[edit interfaces gr-fpc/pic/port unit logical-unit-number]` hierarchy level.

Options

interface-mode—Specify the type of VLAN tagging on packets that the interface accepts.

access—Configure a logical interface to accept untagged packets. Specify the VLAN to which this interface belongs using the **vlan-id** statement.

trunk—Configure a single logical interface to accept packets tagged with any VLAN ID specified with the **vlan-id** or **vlan-id-list** statement.

core-facing—Specify that the VLAN is physically connected to a core-facing ISP router and ensures that the network does not improperly treat the interface as a client interface. When specified, the interface is inserted into the core-facing default mesh group where traffic from pseudowires that belong to the default mesh group is not forwarded on the core-facing link.

vlan-id *number*—Individual VLAN IDs separated by a space.

vlan-id-list *vlan-list*—Starting VLAN ID and ending VLAN ID in an inclusive range. Separate the starting VLAN ID and ending VLAN ID with a hyphen.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Layer 2 Services over GRE Tunnel Interfaces on MX Series with MPCs](#) | 102

filter

Syntax

```
filter {  
    input filter-name;  
    output filter-name;  
}
```

Hierarchy Level

[edit [interfaces](#) *interface-name* unit *logical-unit-number* family inet]

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Define the filters to be applied on an interface.

Options

input *filter-name*—Identifier for the input filter.

output *filter-name*—Identifier for the output filter.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Filters for Traffic Transiting the ES PIC](#) | 132

hold-time (OAM)

Syntax

```
hold-time seconds;
```

Hierarchy Level

```
[edit protocols oam],  
[edit protocols oam gre-tunnel interface interface-name]
```

Release Information

Statement introduced in Junos OS Release 10.2.

Description

Length of time the originating end of a GRE tunnel waits for keepalive packets from the other end of the tunnel before marking the tunnel as operationally down.

Options

seconds—Hold-time value.

Default: 5 seconds

Range: 5 through 250 seconds

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Tunnel Interfaces on an MX Series Router with a 16x10GE 3D MPC | 28](#)

[Configuring GRE Keepalive Time | 61](#)

[keepalive-time | 174](#)

interfaces

Syntax

```
interfaces { ... }
```

Hierarchy Level

```
[edit]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure interfaces on the router.

Default

The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Junos OS Network Interfaces Library for Routing Devices*

ipsec-sa

Syntax

```
ipsec-sa sa-name;
```

Hierarchy Level

```
[edit interfaces es-fpc/pic/port unit logical-unit-number family inet]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Specify the IP Security (IPsec) SA name associated with the interface.

Options

sa-name—IPsec SA name.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Encryption Interfaces](#) | 130

Junos OS Administration Library

keepalive-time

Syntax

```
keepalive-time seconds;
```

Hierarchy Level

```
[edit protocols oam gre-tunnel interface interface-name],  
[edit protocols oam gre-tunnel interface interface-name.unit-number]
```

Release Information

Statement introduced in Junos OS Release 10.2.

Statement introduced in Junos OS Release 19.3 for MPC10E line card.

Description

Time difference between consecutive keepalive packets in a GRE tunnel.

NOTE: Support for GRE keepalive packets on MPC line cards became available as of Junos OS Release 11.4.

Options

seconds—Keepalive time value.

Default: 1 second

Range: 1 through 50 seconds

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Tunnel Interfaces on an MX Series Router with a 16x10GE 3D MPC | 28](#)

[Configuring GRE Keepalive Time | 61](#)

[hold-time | 171](#)

key

Syntax

```
key number;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number tunnel],  
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number tunnel]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Identify an individual traffic flow within a tunnel, as defined in RFC 2890, *Key and Sequence Number Extensions to GRE*. On M Series and T Series routers, you can configure the GRE interface on an Adaptive Services, Multiservices, or Tunnel PIC. On MX Series routers, configure the interface on a Multiservices DPC.

Options

number—Value of the key.

Range: 0 through 4,294,967,295

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring a Key Number on GRE Tunnels](#) | 71

multicast-only

Syntax

```
multicast-only;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number family inet],  
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure the unit and family so that the interface can transmit and receive multicast traffic only. You can configure this property on the IP family only.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Restricting Tunnels to Multicast Traffic | 76](#)

[tunnel | 191](#)

peer-unit

Syntax

```
peer-unit unit-number;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number],  
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure a peer relationship between two logical systems.

Options

unit-number—Peering logical system unit number.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Logical Tunnel Interfaces](#) | 77

peer-certificate-type

Syntax

```
peer-certificate-type (pkcs7 | x509-signature);
```

Hierarchy Level

```
[edit services ipsec-vpn ike policy policy-name]
```

Release Information

Statement introduced in Release 15.1 for MX Series routers.

Description

(MX Series routers only) Specify a preferred type of certificate (PKCS7 or X509). By default, X509 encoding format is used. With the flexibility to configure the encoding format in which certificate requests are sent to the peer, you can determine the type of certificate to be used depending on the type supported by the peer. For example, if the peer does not support PKCS7, certificate authentication cannot occur unless you configure the same type on MX Series routers as the initiator or sender.

Options

- **pkcs7**—Public-Key Cryptography Standard #7.
- **x509-signature**—X509 is an ITU-T standard for public key infrastructure.

Required Privilege Level

system—To view this statement in the configuration.

system-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Configuring IKE Policies*

reassemble-packets

Syntax

```
reassemble-packets;
```

Hierarchy Level

```
[edit interfaces gr-fpc/pic/port unit logical-unit-number],  
[edit logical-systems logical-system-name interfaces gr-fpc/pic/port unit logical-unit-number]
```

Release Information

Statement introduced in Junos OS Release 9.2.

Description

Enable reassembly of fragmented generic routing encapsulation (GRE) encapsulated packets on GRE tunnel interfaces at the endpoint of the GRE tunnel.

GRE-encapsulated packets are fragmented if the [allow-fragmentation](#) statement is configured for the GRE tunnel and the size of the GRE-encapsulated packet exceeds the maximum transmission unit (MTU) value of a link that the packet passes through.

Default

If you do not include the **reassemble-packets** statement, the GRE tunnel interface does not reassemble fragmented GRE-encapsulated packets.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Enabling Fragmentation and Reassembly on Packets After GRE-Encapsulation](#) | 73

redundancy-group (Interfaces)

Syntax

```
redundancy-group {
  member-interface interface-name {
    (active | backup);
  }
}
```

Hierarchy Level

```
[edit interfaces interface-name]
```

Release Information

Statement introduced in Junos OS Release 13.3.

Description

Configure member tunnels of redundant logical or virtual tunnels only on MX Series 5G Universal Routing Platforms.

Options

active—Set the interface to the active mode.

backup—Set the interface to the backup mode.

The remaining statement is explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To view this statement in the configuration.

RELATED DOCUMENTATION

Redundant Virtual Tunnels Providing Resiliency in Delivering Multicast Traffic Overview

Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic

Example: Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic

[Example: Configuring Redundant Logical Tunnels | 89](#)

[Configuring Redundant Logical Tunnels | 88](#)

[Redundant Logical Tunnels Overview | 86](#)

redundancy-group (Chassis - MX Series)

Syntax

```
redundancy-group {  
  interface-type {  
    redundant-logical-tunnel {  
      device count;  
    }  
    redundant-virtual-tunnel {  
      device count;  
    }  
  }  
}
```

Hierarchy Level

[edit chassis]

Release Information

Statement introduced in Junos OS Release 13.3.

Description

Configure redundant logical tunnels, redundant virtual tunnels, or both on MX Series 5G Universal Routing Platforms.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Redundant Virtual Tunnels Providing Resiliency in Delivering Multicast Traffic Overview

Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic

Example: Configuring Redundant Virtual Tunnels to Provide Resiliency in Delivering Multicast Traffic

[redundancy-group \(Interfaces\)](#) | 180

routing-instance

Syntax

```
routing-instance {  
    destination routing-instance-name;  
}
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number tunnel],  
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number tunnel]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.

Description

Specify the destination routing instance that points to the routing table containing the tunnel destination address.

Default

The default Internet routing table **inet.0**.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Tunnel Interfaces for Routing Table Lookup](#) | 125

routing-instances

Syntax

```
routing-instances routing-instance-name { ... }
```

Hierarchy Level

```
[edit],  
[edit logical-systems logical-system-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure an additional routing entity for a router or switch. You can create multiple instances of BGP, IS-IS, OSPF, OSPF version 3 (OSPFv3), and RIP for a router or switch.

Default

Routing instances are disabled for the router or switch.

Options

routing-instance-name—Name of the routing instance, a maximum of 31 characters. The remaining statements are explained separately.

non-forwarding-vrf—Enable this option to not create a routing and forwarding (VRF) table for local or transit routes belonging to the given VPN.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring EVPN Routing Instances](#)

[Configuring Routing Instances on PE Routers in VPNs](#)

routing-options

Syntax

```
routing-options { ... }
```

For information on the complete list of **routing-options**, see the *Protocol-Independent Routing Properties User Guide* .

Hierarchy Level

```
[edit],  
[edit logical-systems logical-system-name],  
[edit logical-systems logical-system-name routing-instances routing-instance-name],  
[edit tenants tenant-name routing-instances routing-instance-name],  
[edit routing-instances routing-instance-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 9.0 for EX Series switches.

The [edit tenants *tenant-name* routing-instances *routing-instance-name*] hierarchy level introduced in Junos OS Release 18.3R1.

Description

Configure protocol-independent routing properties.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| *Protocol-Independent Routing Properties User Guide*

source

Syntax

```
source source-address;
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number family inet address address],  
[edit interfaces interface-name unit logical-unit-number tunnel]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

For tunnel and encryption interfaces, specify the source address.

Options

source-address—Address of the source side of the connection.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Encryption Interfaces | 130](#)

Configuring Traffic Sampling on MX, M and T Series Routers

Configuring Flow Monitoring

source

Syntax

```
source source-address;
```

Hierarchy Level (EX, NFX, OCX1100 and QFX Series)

```
[edit interfaces interface-name unit logical-unit-number tunnel]
```

Hierarchy Level (M-series and T-series)

```
[edit interfaces interface-name unit logical-unit-number tunnel address],  
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number tunnel address]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.1 for EX Series switches.

Statement introduced in Junos OS Release 13.2 for the QFX Series.

Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

Specify the source address of the tunnel.

Default

If you do not specify a source address, the tunnel uses the unit's primary address as the source address of the tunnel.

Options

source-address—Address of the local side of the tunnel. This is the address that is placed in the outer IP header's source field.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Tunnel Services Overview](#) | 18

multicast-only

primary (Address on Interface)

Junos OS Services Interfaces Library for Routing Devices

source-address

Syntax

```
source-address address;
```

Hierarchy Level

```
[edit logical-systems logical-system-name routing-instances routing-instance-name routing-options dynamic-tunnels tunnel-name],  
[edit logical-systems logical-system-name routing-options dynamic-tunnels tunnel-name],  
[edit routing-instances routing-instance-name routing-options dynamic-tunnels tunnel-name],  
[edit routing-options dynamic-tunnels tunnel-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.3 for ACX Series routers.

Description

Configure the tunnel source address.

Options

address—Name of the source address.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Dynamic Tunnels Overview](#) | 25

ttl

Syntax

```
ttl value;
```

Hierarchy Level

```
[edit interfaces interface-name unit number tunnel]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.1 for EX Series switches.

Statement introduced in Junos OS Release 17.1 for ACX Series routers.

Description

Set the time-to-live value bit in the header of the outer IP packet.

Options

value—Time-to-live value.

Range: 0 through 255

Default: 64

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Tunnel Services Overview](#) | 18

tunnel

Syntax

```
tunnel {  
  backup-destination destination-address;  
  destination destination-address;  
  routing-instance {  
    destination routing-instance-name;  
  }  
  source source-address;  
  ttl number;  
}
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure a tunnel. You can use the tunnel for unicast and multicast traffic or just for multicast traffic. You can also use tunnels for encrypted traffic or virtual private networks (VPNs).

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Configuring Encryption Interfaces](#) | 130

[Tunnel Services Overview](#) | 18

Junos OS VPNs Library for Routing Devices

tunnel

Syntax

```
tunnel {
  allow-fragmentation;
  backup-destination address;
  destination destination-address;
  do-not-fragment;
  key number;
  routing-instance {
    destination routing-instance-name;
  }
  source source-address;
  traffic-class traffic-class-value;
  ttl number;
}
```

Hierarchy Level

```
[edit interfaces interface-name unit logical-unit-number],
[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 12.1 for EX Series switches.

Description

Configure a tunnel. You can use the tunnel for unicast and multicast traffic or just for multicast traffic. You can also use tunnels for encrypted traffic or virtual private networks (VPNs).

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

| [Configuring Encryption Interfaces](#) | 130

tunnel-services (Chassis)

Syntax

```
tunnel-services {  
    bandwidth bandwidth-value;  
    tunnel-only;  
}
```

Hierarchy Level

```
[edit chassis fpc slot-number pic number]
```

Release Information

Statement introduced in Junos OS Release 8.2.

Statement introduced in Junos OS Release 12.3X54 for ACX Series routers.

Description

For MX Series 5G Universal Routing Platforms, configure the amount of bandwidth for tunnel services.

For ACX Series routers, configure the amount of bandwidth for tunnel services. Only bandwidths of 1 Gbps and 10 Gbps are supported for ACX routers.

For M7i, M10i, M120, M320, T Series and TX Matrix routers with IQ2 PICs and IQ2E PICs, configure support for per unit scheduling for GRE tunnels. You can specify the IQ2 and IQ2E PICs to work exclusively in tunnel mode or as a regular PIC. The default setting uses IQ2 and IQ2E PICs as a regular PIC. If you do not configure the **tunnel-only** option, the IQ2 and IQ2 PICs operate as regular PICs. For M7i, M10i, M120, M320, T Series and TX Matrix routers with IQ2 PICs and IQ2E PICs, you can use the **tunnel-only** option to specify that an IQ2 or IQ2E PIC work in tunnel mode only.

NOTE: Bandwidth rates of 20 gigabits per second and 40 gigabits per second require use of an MX Series router with the 100-Gigabit Ethernet Modular Port Concentrator (MPC) and the 100-Gigabit CFP MIC.

NOTE: On MX80 routers and MX Series routers with Trio-based FPCs, when ingress queuing is enabled for a PIC, tunnel services and inline services are not supported on the same PIC.

Options

tunnel-only (Optional)—For M7i, M10i, M120, M320, T Series and TX Matrix routers with IQ2 PICs and IQ2E PICs, specify that an IQ2 or IQ2E PIC work in tunnel mode only.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

[Example: Configuring Tunnel Interfaces on a Gigabit Ethernet 40-Port DPC | 36](#)

[Example: Configuring Tunnel Interfaces on a 10-Gigabit Ethernet 4-Port DPC | 36](#)

[Example: Configuring Tunnel Interfaces on the MPC3E | 30](#)

[bandwidth \(Tunnel Services\) | 150](#)

udp (FTI)

Syntax

```
udp {  
  destination {  
    address ipv4_address;  
  }  
  source {  
    address ipv4_address;  
    interface interface;  
  }  
}
```

Hierarchy Level

```
[edit interfaces name unit name tunnel encapsulation]
```

Release Information

Statement introduced in Junos OS Release 19.3R1 for PTX Series routers and QFX Series switches.

Description

Enable UDP encapsulation with IPv4 on FTI logical interfaces.

Required Privilege Level

interface

RELATED DOCUMENTATION

[Flexible Tunnel Interfaces Overview](#) | 39

unit (Interfaces)

Syntax

```
unit logical-unit-number {
  family inet {
    ipsec-sa sa-name;
  }
  tunnel {
    backup-destination destination-address;
    destination destination-address;
    routing-instance {
      destination routing-instance-name;
    }
    source source-address;
    ttl number;
  }
}
```

Hierarchy Level

[edit [interfaces](#) interface-name]

Release Information

Statement introduced before Junos OS Release 7.4.

Description

Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Options

logical-unit-number—Number of the logical unit.

Range: 0 through 16,384

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Configuring Encryption Interfaces | 130

Junos OS Network Interfaces Library for Routing Devices

Junos OS Network Interfaces Library for Routing Devices for other statements that do not affect services interfaces.

unit (Interfaces)

Syntax

```
unit logical-unit-number {
  peer-unit unit-number;
  reassemble-packets;
  tunnel {
    allow-fragmentation;
    backup-destination address;
    destination destination-address;
    do-not-fragment;
    key number;
    routing-instance {
      destination routing-instance-name;
    }
    source source-address;
    ttl number;
  }
}
```

Hierarchy Level

```
[edit interfaces interface-name],
[edit logical-systems logical-system-name interfaces interface-name]
```

Release Information

Statement introduced before Junos OS Release 7.4.

Statement introduced in Junos OS Release 15.1X53-D10 for QFX10000 switches.

Description

Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Options

logical-unit-number—Number of the logical unit.

Range: 0 through 16,384

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Junos OS Network Interfaces Library for Routing Devices for other statements that do not affect services interfaces.

vni (Interfaces)

Syntax

```
vni [0-16777214]
```

Hierarchy Level

```
[edit interfaces name unit name tunnel encapsulation vxlan-gpe]
```

Release Information

Statement introduced in Junos OS Release 18.3R1 for MX Series routers.

Description

Assign a numeric value to identify a Virtual Extensible LAN (VXLAN). All members of a VXLAN must use the same virtual network identifier (VNI).

Options

vni—Value to specify in the **vni** attribute.

Range: For flexible tunnel interfaces, the range supported is 0 through 16,777,214 for all MX Series routers (except MX80).

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Understanding VXLANs

[Flexible Tunnel Interfaces Overview | 39](#)

[Configuring Flexible Tunnel Interfaces | 44](#)

[Example: Configuring Flexible Tunnel Interfaces on MX Series Routers | 48](#)

[show interfaces fti | 269](#)

vxlan-gpe (FTI)

Syntax

```
vxlan-gpe {
  destination {
    address address;
  }
  destination-udp-port destination-udp-port;
  source {
    address address;
    interface interface;
  }
  tunnel-endpoint vxlan;
  vni vni;
}
```

Hierarchy Level

```
[edit dynamic-profiles name interfaces name unit name tunnel encapsulation],
[edit interfaces name unit name tunnel encapsulation]
```

Release Information

Statement introduced in Junos OS Release 18.3R1 for MX Series routers.

Description

Virtual Extensible LAN (VXLAN) is defined as an encapsulation format that encapsulates Ethernet frames in an outer UDP/IP transport. The **vxlan-gpe** encapsulation refers to the header **gpe** added to the encapsulation **vxlan** to extend the existing VXLAN protocol to provide support for multiprotocol encapsulation.

Options

destination-udp-port—Value to write to the destination-udp-port field.

Range: 1 through 65,535

tunnel-endpoint—Tunnel endpoint type.

Values:

- vxlan—To configure VXLAN tunnel endpoint.

vni—Value to specify in the **vni** attribute.

Range: 0 through 16,777,214

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level
interface

RELATED DOCUMENTATION

Flexible Tunnel Interfaces Overview 39
Configuring Flexible Tunnel Interfaces 44
show interfaces fti 269
vni (Interfaces) 198
Example: Configuring Flexible Tunnel Interfaces on MX Series Routers 48

4

CHAPTER

Operational Commands

- [clear ike security-associations | 203](#)
- [clear ipsec security-associations | 204](#)
- [request ipsec switch | 206](#)
- [request security certificate enroll \(Signed\) | 207](#)
- [request security certificate enroll \(Unsigned\) | 209](#)
- [request security key-pair | 211](#)
- [request system certificate add | 213](#)
- [show ike security-associations | 214](#)
- [show interfaces \(Encryption\) | 219](#)
- [show interfaces \(GRE\) | 227](#)
- [show interfaces \(IP-over-IP\) | 239](#)
- [show interfaces \(Logical Tunnel\) | 245](#)
- [show interfaces \(Multicast Tunnel\) | 252](#)
- [show interfaces \(PIM\) | 258](#)
- [show interfaces \(Virtual Loopback Tunnel\) | 263](#)

[show interfaces fti](#) | **269**

[show ipsec certificates](#) | **282**

[show ipsec redundancy](#) | **285**

[show ipsec security-associations](#) | **287**

[show system certificate](#) | **291**

clear ike security-associations

Syntax

```
clear ike security-associations  
<destination-ip-address>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

(Encryption interface on M Series and T Series routers only) Clear information about the current Internet Key Exchange (IKE) security association. This command is valid for dynamic security associations only. For IKEv2, this command creates new security associations for IKE SA and IPSEC SAs.

Options

none—Clear all IKE security associations.

destination-ip-address—(Optional) Clear the IKE security association at the specified destination address.

Required Privilege Level

view

RELATED DOCUMENTATION

| [show ike security-associations](#) | 214

List of Sample Output

[clear ike security-associations on page 203](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
clear ike security-associations
```

```
user@host> clear ike security-associations
```

clear ipsec security-associations

Syntax

```
clear ipsec security-associations  
<sa-name>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

(Encryption interface on M Series and T Series routers only) Clear information about the current IP Security (IPsec) security association. This command is valid for dynamic security associations only. For IKEv1, this command creates new security associations for IKE SA and IPSEC SAs.

Options

none—Clear all IPsec security associations.

sa-name—(Optional) Clear the specified security association.

Required Privilege Level

view

RELATED DOCUMENTATION

| [show ipsec security-associations](#) | 287

List of Sample Output

[clear ipsec security-associations on page 204](#)

Output Fields

See the [show ipsec security-associations](#) for an explanation of output fields.

Sample Output

clear ipsec security-associations

The following output from the **show ipsec security-associations detail** command is displayed before and after the **clear ipsec security-associations** command is issued:

```
user@host> show ipsec security-associations detail
```

```
Security association: sa-dynamic, Interface family: Up
```

```
Direction: inbound, SPI: 242379418, State: Installed
```

```
Mode: tunnel, Type: dynamic
```

```
Protocol: ESP, Authentication: hmac-md5-96, Encryption: None
```

```
Soft lifetime: Expires in 22979 seconds
```

```
Hard lifetime: Expires in 28739 seconds
```

```
Direction: outbound, SPI: 368592771, State: Installed
```

```
Mode: tunnel, Type: dynamic
```

```
Protocol: ESP, Authentication: hmac-md5-96, Encryption: None
```

```
Soft lifetime: Expires in 22979 seconds
```

```
Hard lifetime: Expires in 28739 seconds
```

```
user@host> clear ipsec security-associations
```

```
user@host> show ipsec security-associations detail
```

```
Security association: sa-dynamic, Interface family: Up
```

```
Direction: inbound, SPI: 1031597683, State: Installed
```

```
Mode: tunnel, Type: dynamic
```

```
Protocol: ESP, Authentication: hmac-md5-96, Encryption: None
```

```
Soft lifetime: Expires in 23037 seconds
```

```
Hard lifetime: Expires in 28797 seconds
```

```
Direction: outbound, SPI: 1618419878, State: Installed
```

```
Mode: tunnel, Type: dynamic
```

```
Protocol: ESP, Authentication: hmac-md5-96, Encryption: None
```

```
Soft lifetime: Expires in 23037 seconds
```

```
Hard lifetime: Expires in 28797 seconds
```

request ipsec switch

Syntax

```
request ipsec switch (interface <es-fpc/pic/port> | security-associations <sa-name>)
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

Description

(Encryption interface on M Series, PTX Series, and T Series routers and EX Series switches only) Manually switch from the primary to the backup encryption services interface, or switch from the primary to the backup IP Security (IPsec) tunnel.

Options

interface <es-fpc/pic/port>—Switch to the backup encryption interface.

security-associations <sa-name>—Switch to the backup tunnel.

Required Privilege Level

view

RELATED DOCUMENTATION

| [show ipsec redundancy](#) | 285

List of Sample Output

[request ipsec switch security-associations on page 206](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
request ipsec switch security-associations
```

```
user@host> request ipsec switch security-associations sa-private
```

request security certificate enroll (Signed)

Syntax

```
request security certificate enroll filename filename subject subject
alternative-subject alternative-subject certification-authority certification-authority encoding (binary | pem) key-file
key-file domain-name domain-name
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

Description

(Encryption interface on M Series and T Series routers and EX Series switches only) Obtain a signed certificate from a certificate authority (CA). The signed certificate validates the CA and the owner of the certificate. The results are saved in a specified file to the **/var/etc/ikecert** directory.

NOTE: For FIPS mode, the digital security certificates must be compliant with the National Institute of Standards and Technology (NIST) SP 800-131A standard. The **request security key-pair** command is deprecated and not available with Junos in FIPS mode because it generates RSA and DSA keys with sizes of 512 and 1024 bits that are not compliant with the NIST SP 800-131A standard.

Options

filename *filename*—File that stores the certificate.

subject *subject*—Distinguished name (**dn**), which consists of a set of components—for example, an organization (**o**), an organization unit (**ou**), a country (**c**), and a locality (**l**).

alternative-subject *alternative-subject*—Tunnel source address.

certification-authority *certification-authority*—Name of the certificate authority profile in the configuration.

encoding (binary | pem)—File format used for the certificate. The format can be a binary file or privacy-enhanced mail (PEM), an ASCII base64-encoded format. The default format is binary.

key-file *key-file*—File containing a local private key.

domain-name *domain-name*—Fully qualified domain name.

Required Privilege Level

maintenance

List of Sample Output

[request security certificate enroll filename subject alternative-subject certification-authority key-file domain-name \(Signed\)](#) on page 208

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request security certificate enroll filename subject alternative-subject certification-authority key-file domain-name (Signed)

```
user@host> request security certificate enroll filename host.crt subject c=uk,o=london
alternative-subject 10.50.1.4 certification-authority verisign key-file host-1.prv domain-name
host.example.com
```

```
CA name: example.com CA file: ca_verisign
local pub/private key pair: host.prv
subject: c=uk,o=london domain name: host.example.com
alternative subject: 10.50.1.4
Encoding: binary
Certificate enrollment has started. To view the status of your enrollment, check
the key management process (kmd) log file at /var/log/kmd. <-----
```


request security certificate enroll (Unsigned)

Syntax

```
request security certificate enroll filename filename ca-file ca-file ca-name ca-name
encoding (binary | perm) url url
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

Description

(Encryption interface on M Series and T Series routers and EX Series switches only) Obtain a certificate from a certificate authority (CA). The results are saved in a specified file to the `/var/etc/ikecert` directory.

Options

filename *filename*—File that stores the public key certificate.

ca-file *ca-file*—Name of the certificate authority profile in the configuration.

ca-name *ca-name*—Name of the certificate authority.

encoding (binary | pem)—File format used for the certificate. The format can be a binary file or privacy-enhanced mail (PEM), an ASCII base64-encoded format. The default value is **binary**.

url *url*—Certificate authority URL.

Required Privilege Level

maintenance

List of Sample Output

[request security certificate enroll filename ca-file ca-name url \(Unsigned\) on page 209](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request security certificate enroll filename ca-file ca-name url (Unsigned)

```
user@host> request security certificate enroll filename ca_verisign ca-file verisign ca-name example.com
urlxyzcompany URL
```

```
http://<verisign ca-name xyzcompany url>/cgi-bin/pkiclient.exe CA name: example.com  
CA file: verisign Encoding: binary  
Certificate enrollment has started. To view the status of your enrollment, check  
the key management process (kmd) log file at /var/log/kmd. <-----
```

request security key-pair

Syntax

```
request security key-pair filename  
<size key-size>  
<type (rsa | dsa)>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 9.0 for EX Series switches.

Description

(Encryption interface on M Series and T Series routers and EX Series switches only) Generate a public and private key pair for a digital certificate.

NOTE: The **request security-certificates** command is deprecated and are not available with Junos in FIPS mode because security certificates are not compliant with the NIST SP 800-131A standard.

Options

filename—Name of a file in which to store the key pair.

size *key-size*—(Optional) Key size, in bits. The key size can be **512**, **1024**, or **2048**. The default value is **1024**.

type—(Optional) Algorithm used to encrypt the key:

- **rsa**—RSA algorithm. This is the default.
- **dsa**—Digital signature algorithm with Secure Hash Algorithm (SHA).

Required Privilege Level

maintenance

List of Sample Output

[request security key-pair on page 212](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
request security key-pair
```

```
user@host> request security key-pair security-key-file
```

request system certificate add

Syntax

```
request system certificate add (filename | terminal)
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 11.1 for the QFX Series.

Description

(Encryption interface on M Series and T Series routers, PTX Series, and QFX Series switches only) Add a certificate provided by the Juniper Networks certificate authority (CA).

Options

filename—Filename (URL, local, or remote).

terminal—Use login terminal.

Required Privilege Level

maintenance

List of Sample Output

[request system certificate add terminal on page 213](#)

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

```
request system certificate add terminal
```

```
user@host> request system certificate add terminal
```

show ike security-associations

Syntax

```
show ike security-associations
<brief | detail>
<peer-address>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

(Encryption interface on M Series and T Series routers only) Display information about Internet Key Exchange (IKE) security associations.

Options

none—Display standard information about all IKE security associations.

brief | detail—(Optional) Display the specified level of output.

peer-address—(Optional) Display IKE security associations for the specified peer address.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear ike security-associations](#) | [203](#)

List of Sample Output

[show ike security-associations on page 217](#)

[show ike security-associations detail on page 217](#)

Output Fields

[Table 9 on page 214](#) lists the output fields for the **show ike security-associations** command. Output fields are listed in the approximate order in which they appear.

Table 9: show ike security-associations Output Fields

Field Name	Field Description	Level of Output
IKE peer	Remote end of the IKE negotiation.	detail

Table 9: show ike security-associations Output Fields (*continued*)

Field Name	Field Description	Level of Output
Role	Part played in the IKE session. The router triggering the IKE negotiation is the initiator, and the router accepting the first IKE exchange packets is the responder.	detail
Remote Address	Responder's address.	none specified
State	State of the IKE security association: <ul style="list-style-type: none"> • Matured—The IKE security association is established. • Not matured—The IKE security association is in the process of negotiation. 	none specified
Initiator cookie	When the IKE negotiation is triggered, a random number is sent to the remote node.	All levels
Responder cookie	The remote node generates its own random number and sends it back to the initiator as a verification that the packets were received. Of the numerous security services available, protection against denial of service (DoS) is one of the most difficult to address. A “cookie” or anticlogging token (ACT) is aimed at protecting the computing resources from attack without spending excessive CPU resources to determine the cookie's authenticity. An exchange prior to CPU-intensive public key operations can thwart some DoS attempts (such as simple flooding with invalid IP source addresses).	All levels
Exchange type	Specifies the number of messages in an IKE exchange, and the payload types that are contained in each message. Each exchange type provides a particular set of security services, such as anonymity of the participants, perfect forward secrecy of the keying material, and authentication of the participants. Junos OS supports two types of exchanges: <ul style="list-style-type: none"> • Main—The exchange is done with six messages. Main encrypts the payload, protecting the identity of the neighbor. • Aggressive—The exchange is done with three messages. Aggressive does not encrypt the payload, leaving the identity of the neighbor unprotected. 	All Levels
Authentication method	Type of authentication determines which payloads are exchanged and when they are exchanged. The Junos OS supports only pre-shared keys .	detail
Local	Prefix and port number of the local end.	detail

Table 9: show ike security-associations Output Fields (*continued*)

Field Name	Field Description	Level of Output
Remote	Prefix and port number of the remote end.	detail
Lifetime	Number of seconds remaining until the IKE security association expires.	detail
Algorithms	<p>Header for the IKE algorithms output.</p> <ul style="list-style-type: none"> • Authentication—Type of authentication algorithm used: md5 or sha1. • Encryption—Type of encryption algorithm used: des-cbc, 3des-cbc, or None. • Pseudo random function—Function that generates highly unpredictable random numbers: hmac-md5 or hmac-sha1. 	detail
Traffic statistics	<p>Number of bytes and packets received and transmitted on the IKE security association.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the IKE security association. • Input packets, Output packets—Number of packets received and transmitted on the IKE security association. 	detail
Flags	<p>Notification to the key management process of the status of the IKE negotiation:</p> <ul style="list-style-type: none"> • caller notification sent—Caller program notified about the completion of the IKE negotiation. • waiting for done—Negotiation is done. The library is waiting for the remote end retransmission timers to expire. • waiting for remove—Negotiation has failed. The library is waiting for the remote end retransmission timers to expire before removing this negotiation. • waiting for policy manager—Negotiation is waiting for a response from the policy manager. 	detail
IPsec security associates	Number of IPsec security associations created and deleted with this IKE security association.	detail

Table 9: show ike security-associations Output Fields (*continued*)

Field Name	Field Description	Level of Output
Phase 2 negotiations in progress	<p>Number of phase 2 IKE negotiations in progress and status information:</p> <ul style="list-style-type: none"> • Negotiation type—Type of phase 2 negotiation. The Junos OS currently supports quick mode. • Message ID—Unique identifier for a phase 2 negotiation. • Local identity—Identity of the local phase 2 negotiation. The format is <i>id-type-name (proto-name:port-number,[0..id-data-len] = iddata-presentation)</i> • Remote identity—Identity of the remote phase 2 negotiation. The format is <i>id-type-name (proto-name:port-number,[0..id-data-len] = iddata-presentation)</i> • Flags—Notification to the key management process of the status of the IKE negotiation: <ul style="list-style-type: none"> • caller notification sent—Caller program notified about the completion of the IKE negotiation. • waiting for done—Negotiation is done. The library is waiting for the remote end retransmission timers to expire. • waiting for remove—Negotiation has failed. The library is waiting for the remote end retransmission timers to expire before removing this negotiation. • waiting for policy manager—Negotiation is waiting for a response from the policy manager. 	detail

Sample Output

show ike security-associations

```
user@host> show ike security-associations
```

Remote Address	State	Initiator cookie	Responder cookie	Exchange type
192.0.2.4	Matured	93870456fa000011	723a20713700003e	Main

show ike security-associations detail

```
user@host> show ike security-associations detail
```

```

IKE peer 192.0.2.4
  Role: Initiator, State: Matured
  Initiator cookie: cf22bd81a7000001, Responder cookie: fe83795c2800002e
  Exchange type: Main, Authentication method: Pre-shared-keys
  Local: 192.0.2.5:500, Remote: 192.0.2.4:500
  Lifetime: Expires in 187 seconds
  Algorithms:
    Authentication      : md5
    Encryption          : 3des-cbc
    Pseudo random function: hmac-md5
  Traffic statistics:
    Input  bytes  :          1000
    Output bytes  :          1280
    Input  packets:           5
    Output packets:           9
  Flags: Caller notification sent
  IPsec security associations: 2 created, 0 deleted
  Phase 2 negotiations in progress: 1

Negotiation type: Quick mode, Role: Initiator, Message ID: 3582889153
  Local: 192.0.2.5:500, Remote: 192.0.2.4:500
  Local identity: ipv4_subnet(tcp:80,[0..7]=10.1.1.0/24)
  Remote identity: ipv4_subnet(tcp:100,[0..7]=10.1.2.0/24)
  Flags: Caller notification sent, Waiting for done

```

show interfaces (Encryption)

Syntax

```
show interfaces es-fpc/pic/port:channel
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

(M Series and T Series routers only) Display status information about the specified encryption interface.

Options

es-fpc/pic/port:channel—Display standard status information about the specified encryption interface.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Required Privilege Level

view

List of Sample Output

[show interfaces \(Encryption\) on page 223](#)

[show interfaces brief \(Encryption\) on page 223](#)

[show interfaces detail \(Encryption\) on page 224](#)

[show interfaces extensive \(Encryption\) on page 225](#)

Output Fields

[Table 10 on page 220](#) lists the output fields for the **show interfaces (Encryption)** command. Output fields are listed in the approximate order in which they appear.

Table 10: Encryption show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Encapsulation being used on the interface.	All levels
Link-level type	Encapsulation being used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Device flags	Information about the physical device. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 10: Encryption show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. • Anti-replay failures—Total number of antireplay failures seen on all tunnels configured on the ES PIC. • Authentication—Total number of authentication failures seen on all tunnels configured on the ES PIC. 	detail extensive
Egress queues	Total number of egress queues supported on the specified interface.	detail extensive
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> • Queued packets—Number of queued packets. • Transmitted packets—Number of transmitted packets. • Dropped packets—Number of packets dropped by the ASIC's RED mechanism. 	detail extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
IP-Header	IP header of the logical interface.	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief

Table 10: Encryption show interfaces Output Fields *(continued)*

Field Name	Field Description	Level of Output
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> . Address	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none

Table 10: Encryption show interfaces Output Fields *(continued)*

Field Name	Field Description	Level of Output
Broadcast	Broadcast address of the logical interface.	detail extensive
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces (Encryption)

user@host> **show interfaces es-0/3/0**

```
Physical interface: es-0/3/0, Enabled, Physical link is Up
  Interface index: 138, SNMP ifIndex: 71
  Type: IPSEC, Link-level type: IPSEC-over-IP, MTU: 3900, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Input rate       : 0 bps (0 pps)
  Output rate      : 0 bps (0 pps)

Logical interface es-0/3/0.0 (Index 70) (SNMP ifIndex 45)
  Flags: Hardware-Down Point-To-Point SNMP-Traps
  IP-Header 10.0.10.2:10.0.10.1::df:64:00000000 Encapsulation: IPSEC
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: 3800
    Flags: None
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.10.0.2, Local: 10.10.0.1
```

show interfaces brief (Encryption)

user@host> **show interfaces es-0/3/0 brief**

```
Physical interface: es-0/3/0, Enabled, Physical link is Up
  Type: IPSEC, Link-level type: IPSEC-over-IP, MTU: 3900, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps

Logical interface es-0/3/0.0
```

```

Flags: Hardware-Down Point-To-Point SNMP-Traps
IP-Header 10.0.10.2:10.0.10.1::df:64:00000000 Encapsulation: IPSEC
inet 10.10.0.1 --> 10.10.0.2s

```

show interfaces detail (Encryption)

user@host> show interfaces es-0/3/0 detail

```

Physical interface: es-0/3/0, Enabled, Physical link is Up
  Interface index: 138, SNMP ifIndex: 71, Generation: 21
  Type: IPSEC, Link-level type: IPSEC-over-IP, MTU: 3900, Speed: 800mbps
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps
    Anti-replay failures      : 0
    Authentication failures   : 0
  Egress queues: 4 supported, 4 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets
    0 best-effort   0                    0                    0
    1 expedited-fo  0                    0                    0
    2 assured-forw  0                    0                    0
    3 network-cont  0                    0                    0

Logical interface es-0/3/0.0 (Index 70) (SNMP ifIndex 45) (Generation 9)
  Flags: Hardware-Down Point-To-Point SNMP-Traps
  IP-Header 10.0.10.2:10.0.10.1::df:64:00000000 Encapsulation: IPSEC
  Traffic statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  Local statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  Transit statistics:
    Input  bytes :                0                0 bps

```



```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 3800, Generation: 22, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 10.10.0.2, Local: 10.10.0.1, Broadcast: Unspecified,
Generation: 26

```

show interfaces extensive (Encryption)

user@host> show interfaces es-0/3/0 extensive

```

Physical interface: es-0/3/0, Enabled, Physical link is Up
Interface index: 138, SNMP ifIndex: 71, Generation: 21
Type: IPSEC, Link-level type: IPSEC-over-IP, MTU: 3900, Speed: 800mbps
Hold-times      : Up 0 ms, Down 0 ms
Device flags    : Present Running
Interface flags: Point-To-Point SNMP-Traps
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Anti-replay failures : 0
Authentication failures : 0
Egress queues: 4 supported, 4 in use
Queue counters:
  Queued packets  Transmitted packets  Dropped packets
0 best-effort    0 0 0
1 expedited-fo   0 0 0
2 assured-forw   0 0 0
3 network-cont   0 0 0

Logical interface es-0/3/0.0 (Index 70) (SNMP ifIndex 45) (Generation 9)
Flags: Hardware-Down Point-To-Point SNMP-Traps
IP-Header 10.0.10.2:10.0.10.1::df:64:00000000 Encapsulation: IPSEC
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0

```

```
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 3800, Generation: 22, Route table: 0
Flags: None
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
Destination: 10.10.0.2, Local: 10.10.0.1, Broadcast: Unspecified,
Generation: 26
```

show interfaces (GRE)

Syntax

```
show interfaces interface-type
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced in Junos OS Release 12.1 for EX Series switches.

Command introduced in Junos OS Release 13.2 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Command introduced before Junos OS Release 17.3R1.

Description

Display status information about the specified generic routing encapsulation (GRE) interface.

Options

interface-type—On M Series and T Series routers and EX Series switches, the interface type is ***gr-fpc/pic/port***.

brief | detail | extensive | terse—(Optional) Display the specified output level of interface information.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

NOTE: You can configure generic routing encapsulation (GRE) interfaces (*gre-x/y/z*) only for GMPLS control channels. GRE interfaces are not supported or configurable for other applications. For more information about GMPLS, see the *MPLS Applications User Guide*.

Required Privilege Level

view

List of Sample Output

[show interfaces \(GRE\) on page 232](#)

[show interfaces brief \(GRE\) on page 232](#)

[show interfaces detail \(GRE\) on page 233](#)

[show interfaces \(Layer 2 Services Over GRE Interfaces\) on page 234](#)

[show interfaces extensive \(Layer 2 Services Over GRE Interfaces\) on page 234](#)

[show interfaces detail \(GRE\) on an EX4200 Virtual Chassis Member Switch on page 235](#)

[show interfaces extensive \(GRE\) on page 237](#)

[show interfaces gr-2/0/10 for GRE IPv6 tunnel on page 237](#)

Output Fields

[Table 11 on page 228](#) lists the output fields for the **show interfaces** (GRE) command. Output fields are listed in the approximate order in which they appear.

Table 11: GRE show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Device Flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface Flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels

Table 11: GRE show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>The number of and the rate at which input and output bytes and packets are received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support.	detail extensive
Flags	<p>Information about the logical interface. Possible values listed in the “Logical Interface Flags” section under <i>Common Output Fields Description</i>. describe general information about the logical interface.</p> <p>GRE-specific information about the logical interface is indicated by the presence or absence of the following value in this field:</p> <ul style="list-style-type: none"> • Reassemble-Pkts—If the Flags field includes this string, the GRE tunnel is configured to reassemble tunnel packets that were fragmented after tunnel encapsulation. 	All levels

Table 11: GRE show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
IP-Header	<p>IP header of the logical interface. If the tunnel key statement is configured, this information is included in the IP Header entry.</p> <p>GRE-specific information about the logical interface is indicated by the presence or absence of the following value in this field:</p> <ul style="list-style-type: none"> • df—If the IP-Header field includes this string immediately following the 16 bits of identification information (that is, if :df: displays after the twelfth byte), the GRE tunnel is configured to allow fragmentation of GRE packets after encapsulation. 	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
L2 Routing Instance	Name of the Layer 2 routing instance associated with the GRE interface.	All levels
L3 Routing Instance	Name of the Layer 3 routing instance associated with the GRE interface.	All levels
Copy-tos-to-outer-ip-header	<p>Status of type of service (ToS) bits in the GRE packet header:</p> <ul style="list-style-type: none"> • On—ToS bits were copied from the payload packet header into the header of the IP packet sent through the GRE tunnel. • Off—ToS bits were not copied from the payload packet header and are set to 0 in the GRE packet header. <p>NOTE: EX Series switches do not support copying ToS bits to the encapsulated packet, so the value of this field is always Off in switch output.</p>	detail extensive
Gre keepalives configured	<p>Indicates whether a GRE keepalive time and hold time are configured for the GRE tunnel.</p> <p>NOTE: EX Series switches do not support configuration of GRE tunnel keepalive times and hold times, so the value of this field is always Off in switch output.</p>	detail extensive
Gre keepalives adjacency state	Status of the other end of the GRE tunnel: Up or Down . If keepalive messages are not received by either end of the GRE tunnel within the hold-time period, the GRE keepalive adjacency state is down even when the GRE tunnel is up.	detail extensive
Input packets	Number of packets received on the logical interface.	None specified

Table 11: GRE show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> • Input rate—Rate of bits and packets received on the interface. • Output rate—Rate of bits and packets transmitted on the interface. 	detail extensive
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive none
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none

Table 11: GRE show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces (GRE)

user@host> show interfaces gr-1/2/0

```
Physical interface: gr-0/0/0, Enabled, Physical link is Up
  Interface index: 132, SNMP ifIndex: 26
  Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Input rate       : 0 bps (0 pps)
  Output rate      : 0 bps (0 pps)

Logical interface gr-0/0/0.0 (Index 68) (SNMP ifIndex 47)
  Flags: Point-To-Point SNMP-Traps 16384
  IP-Header 192.0.2.2:192.0.2.1:47:df:64:0000000000000000 Encapsulation: GRE-NULL

Input packets : 0
Output packets: 0
  Protocol inet, MTU: 1476
    Flags: None
    Addresses, Flags: Is-Primary
      Local: 198.51.100.1
```

show interfaces brief (GRE)

user@host> show interfaces gr-1/2/0 brief

```
Physical interface: gr-1/2/0, Enabled, Physical link is Up
  Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: 800mbps
  Device flags      : Present Running
```



```
Interface flags: Point-To-Point SNMP-Traps
```

```
Logical interface gr-1/2/0.0
```

```
Flags: Hardware-Down Point-To-Point SNMP-Traps 0x4000
```

```
IP-Header 10.10.0.2:10.10.0.1:47:df:64:0000000000000000
```

```
Encapsulation: GRE-NULL
```

```
inet 10.100.0.1/30
```

```
mpls
```

show interfaces detail (GRE)

```
user@host> show interfaces gr-1/2/0 detail
```

```
Physical interface: gr-0/0/0, Enabled, Physical link is Up
```

```
Interface index: 132, SNMP ifIndex: 26, Generation: 13
```

```
Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: 800mbps
```

```
Hold-times      : Up 0 ms, Down 0 ms
```

```
Device flags    : Present Running
```

```
Interface flags: Point-To-Point SNMP-Traps
```

```
Statistics last cleared: Never
```

```
Traffic statistics:
```

```
Input  bytes   :                      0          0 bps
```

```
Output bytes   :                      0          0 bps
```

```
Input  packets :                      0          0 pps
```

```
Output packets :                      0          0 pps
```

```
Logical interface gr-0/0/0.0 (Index 68) (SNMP ifIndex 47) (Generation 8)
```

```
Flags: Point-To-Point SNMP-Traps 16384
```

```
IP-Header 192.0.2.2:192.0.2.1:47:df:64:0000000000000000 Encapsulation: GRE-NULL
```

```
Traffic statistics:
```

```
Input  bytes   :                      0
```

```
Output bytes   :                      0
```

```
Input  packets :                      0
```

```
Output packets :                      0
```

```
Local statistics:
```

```
Input  bytes   :                      0
```

```
Output bytes   :                      0
```

```
Input  packets :                      0
```

```
Output packets :                      0
```

```
Transit statistics:
```

```
Input  bytes   :                      0          0 bps
```

```
Output bytes   :                      0          0 bps
```

```
Input  packets :                      0          0 pps
```

```

Output packets:          0          0 pps
Protocol inet, MTU: 1476, Generation: 12, Route table: 0
Flags: None
Addresses, Flags: Is-Primary
  Destination: Unspecified, Local: 198.51.100.1, Broadcast: Unspecified,
  Generation: 15

```

show interfaces (Layer 2 Services Over GRE Interfaces)

user@host> **show interfaces gr-2/2/10**

```

show interfaces gr-2/2/10
Physical interface: gr-2/2/10, Enabled, Physical link is Up
  Interface index: 214, SNMP ifIndex: 690
  Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: 1000mbps
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Input rate       : 0 bps (0 pps)
  Output rate      : 0 bps (0 pps)

  Logical interface gr-2/2/10.0 (Index 342) (SNMP ifIndex 10834)
    Flags: Up Point-To-Point SNMP-Traps 0x4000 IP-Header
    203.0.113.1:203.0.113.254:47:df:64:0000000000000000 Encapsulation: GRE-NUL
    L2 Routing Instance: vs1, L3 Routing Instance: default
    Copy-tos-to-outer-ip-header: Off
    Gre keepalives configured: Off, Gre keepalives adjacency state: down
    Input packets : 2
    Output packets: 0
    Protocol bridge, MTU: 1476
      Flags: Sendbcast-pkt-to-re
      Addresses, Flags: Is-Preferred Is-Primary
        Destination: 6/8, Local: 6.0.0.1, Broadcast: 6.255.255.255

```

show interfaces extensive (Layer 2 Services Over GRE Interfaces)

user@host> **show interfaces gr-2/2/10.0 extensive**

```

Flags: SNMP-Traps Encapsulation: ENET2
L2 Routing Instance: vs1, L3 Routing Instance: default
Traffic statistics:
  Input bytes :          58851250

```

```

Output bytes : 0
Input packets: 1279375
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 58851250 75136 bps
Output bytes : 0 0 bps
Input packets: 1279375 204 pps
Output packets: 0 0 pps
Protocol bridge, MTU: 1476, Generation: 175, Route table: 7
Flags: Access-Mode

```

show interfaces detail (GRE) on an EX4200 Virtual Chassis Member Switch

user@host> show interfaces gr-2/0/15 detail

```

Physical interface: gr-2/0/15, Enabled, Physical link is Up
Interface index: 195, SNMP ifIndex: 846, Generation: 198
Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: 1000mbps
Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:00:5e:00:53:d2, Hardware address: 00:00:5e:00:53:d2
Device flags    : Present Running
Interface flags: Point-To-Point SNMP-Traps
Statistics last cleared: 2011-09-14 17:43:15 UTC (00:00:18 ago)
Traffic statistics:
Input bytes : 5600636 0 bps
Output bytes : 5600636 0 bps
Input packets: 20007 0 pps
Output packets: 20007 0 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0

Logical interface gr-2/0/15.0 (Index 75) (SNMP ifIndex 847) (HW Token 4093)
(Generation 140)
Flags: Point-To-Point SNMP-Traps 0x0
IP-Header 192.168.30.2:192.168.20.3:47:df:64:0000000000000000
Encapsulation: GRE-NULL

```

```

Copy-tos-to-outer-ip-header: Off
Gre keepalives configured: Off, Gre keepalives adjacency state: down
Traffic statistics:
  Input  bytes :          5600886
  Output bytes :          2881784
  Input  packets:           20010
  Output packets:          10018
Local statistics:
  Input  bytes :           398
  Output bytes :           264
  Input  packets:            5
  Output packets:            3
Transit statistics:
  Input  bytes :          5600488          0 bps
  Output bytes :          2881520          0 bps
  Input  packets:          20005          0 pps
  Output packets:          10015          0 pps
Protocol inet, Generation: 159, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.10.10/8, Local: 10.10.10.10, Broadcast: 10.10.10.255,
    Generation: 144

Logical interface gr-2/0/15.1 (Index 80) (SNMP ifIndex 848) (HW Token 4088)
(Generation 150)
  Flags: Point-To-Point SNMP-Traps 0x0
  IP-Header 192.168.40.2:192.168.30.1:47:df:64:0000000000000000
  Encapsulation: GRE-NULL
  Copy-tos-to-outer-ip-header: Off
  Gre keepalives configured: Off, Gre keepalives adjacency state: down
Traffic statistics:
  Input  bytes :           260
  Output bytes :          2880148
  Input  packets:            4
  Output packets:          10002
Local statistics:
  Input  bytes :           112
  Output bytes :            0
  Input  packets:            2
  Output packets:            0
Transit statistics:
  Input  bytes :           148          0 bps
  Output bytes :          2880148          0 bps
  Input  packets:            2          0 pps

```

```

Output packets:          10002          0 pps
Protocol inet, Generation: 171, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.10.10/8, Local: 10.10.10.10, Broadcast: 10.10.10.255,
  Generation: 160

```

show interfaces extensive (GRE)

The output for the **show interfaces extensive** command is identical to that for the **show interfaces detail** command. For sample output, see [show interfaces detail \(GRE\) on page 233](#) and [show interfaces detail \(GRE\) on an EX4200 Virtual Chassis Member Switch on page 235](#).

show interfaces gr-2/0/10 for GRE IPv6 tunnel

```
user@host> show interfaces gr-2/0/10
```

```

show interfaces gr-2/0/10
Physical interface: gr-2/0/10, Enabled, Physical link is Up
  Interface index: 140, SNMP ifIndex: 559
  Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: 1000mbps
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Input rate       : 4952 bps (3 pps)
  Output rate      : 200 bps (0 pps)

Logical interface gr-2/0/10.0 (Index 355) (SNMP ifIndex 857)
  Flags: Up Point-To-Point SNMP-Traps 0x4000 IP-Header
1000::11:0:11:1-1000::11:2:13:2-47-64-0-0-0000000000000000 Encapsulation: GRE-NUL

  Copy-tos-to-outer-ip-header: Off, Copy-tos-to-outer-ip-header-transit: Off
  Gre keepalives configured: Off, Gre keepalives adjacency state: down
  Input packets : 60
  Output packets: 83
  Protocol inet, MTU: 9082
  Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
  Flags: Sendbcast-pkt-to-re
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 14.0.13/24, Local: 14.0.13.1, Broadcast: 14.0.13.255
  Protocol iso, MTU: 9082
  Protocol inet6, MTU: 9082
  Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0

```

```
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 1400::14:0:13:0/120, Local: 1400::14:0:13:1
Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::2a0:a520:2875:4992
Protocol mpls, MTU: 9070, Maximum labels: 3
Flags: Is-Primary
```

show interfaces (IP-over-IP)

Syntax

```
show interfaces interface-type
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

Display status information about the specified IP-over-IP interface.

Options

interface-type—On M Series and T Series routers, the interface type is ***ip-fpc/pic/port***.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Required Privilege Level

view

List of Sample Output

[show interfaces \(IP-over-IP\) on page 242](#)

[show interfaces brief \(IP-over-IP\) on page 243](#)

[show interfaces detail \(IP-over-IP\) on page 243](#)

[show interfaces extensive \(IP-over-IP\) on page 244](#)

Output Fields

[Table 12 on page 240](#) lists the output fields for the **show interfaces (IP-over-IP)** command. Output fields are listed in the approximate order in which they appear.

Table 12: IP-over-IP show interfaces Output Fields

Field	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Input rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 12: IP-over-IP show interfaces Output Fields (*continued*)

Field	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
IP Header	IP header of the logical interface.	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> • Input rate—Rate of bits and packets received on the interface. • Output rate—Rate of bits and packets transmitted on the interface. 	detail extensive

Table 12: IP-over-IP show interfaces Output Fields (*continued*)

Field	Field Description	Level of Output
Local statistics	Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , or mpls .	detail extensive none
<i>protocol-family</i>	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed.	brief
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0 .	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none

Sample Output

show interfaces (IP-over-IP)

```
user@host> show interfaces ip-0/0/0
```

```
Physical interface: ip-0/0/0, Enabled, Physical link is Up
  Interface index: 133, SNMP ifIndex: 27
  Type: IPIP, Link-level type: IP-over-IP, MTU: Unlimited, Speed: 800mbps
  Device flags      : Present Running
  Interface flags:  SNMP-Traps
  Input rate       : 0 bps (0 pps)
  Output rate      : 0 bps (0 pps)
```

```

Logical interface ip-0/0/0.0 (Index 69) (SNMP ifIndex 49)
  Flags: Point-To-Point SNMP-Traps 16384
  IP-Header 192.0.2.1:192.0.2.2:4:df:64:00000000 Encapsulation: IPv4-NULl
Input packets : 0
Output packets: 0
  Protocol inet, MTU: 1480
  Flags: None

```

show interfaces brief (IP-over-IP)

user@host> show interfaces ip-0/0/0 brief

```

Physical interface: ip-0/0/0, Enabled, Physical link is Up
  Type: IPIP, Link-level type: IP-over-IP, MTU: Unlimited, Speed: 800mbps
Device flags      : Present Running
Interface flags: SNMP-Traps

Logical interface ip-0/0/0.0
  Flags: Point-To-Point SNMP-Traps 16384
  IP-Header 192.0.2.1:192.0.2.2:4:df:64:00000000 Encapsulation: IPv4-NULl
  inet

```

show interfaces detail (IP-over-IP)

user@host> show interfaces ip-0/0/0 detail

```

Physical interface: ip-0/0/0, Enabled, Physical link is Up
  Interface index: 133, SNMP ifIndex: 27, Generation: 14
  Type: IPIP, Link-level type: IP-over-IP, MTU: Unlimited, Speed: 800mbps
Hold-times      : Up 0 ms, Down 0 ms
Device flags    : Present Running
Interface flags: SNMP-Traps
Statistics last cleared: Never
Traffic statistics:
  Input  bytes :                0                0 bps
  Output bytes :                0                0 bps
  Input  packets:                0                0 pps
  Output packets:                0                0 pps

Logical interface ip-0/0/0.0 (Index 69) (SNMP ifIndex 49) (Generation 9)
  Flags: Point-To-Point SNMP-Traps 16384
  IP-Header 192.0.2.1:192.0.2.2:4:df:64:00000000 Encapsulation: IPv4-NULl

```

```

Traffic statistics:
  Input  bytes   :                0
  Output bytes   :                0
  Input  packets:                0
  Output packets:                0
Local statistics:
  Input  bytes   :                0
  Output bytes   :                0
  Input  packets:                0
  Output packets:                0
Transit statistics:
  Input  bytes   :                0                0 bps
  Output bytes   :                0                0 bps
  Input  packets:                0                0 pps
  Output packets:                0                0 pps
Protocol inet, MTU: 1480, Generation: 13, Route table: 0
  Flags: None

```

show interfaces extensive (IP-over-IP)

The output for the `show interfaces extensive` command is identical to that for the `show interfaces detail` command. For sample output, see [show interfaces detail \(IP-over-IP\) on page 243](#).

show interfaces (Logical Tunnel)

Syntax

```
show interfaces interface-type
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

Display status information about the specified logical tunnel interface.

Options

interface-type—On M Series and T Series routers, the interface type is ***lt-fpc/pic/port***.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Required Privilege Level

view

List of Sample Output

[show interfaces extensive \(Logical Tunnel\) on page 250](#)

Output Fields

[Table 13 on page 246](#) lists the output fields for the **show interfaces** (logical tunnel) command. Output fields are listed in the approximate order in which they appear.

Table 13: Logical Tunnel show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface. Software-Pseudo indicates a standard software interface with no associated hardware device.	All levels
Link-level type	Encapsulation used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Clocking	Reference clock source: Internal or External when configured. Otherwise, Unspecified .	All levels
Speed	Speed at which the interface is running.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Link type	Type of link.	All levels
Link flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
Physical info	Information about the physical interface.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive

Table 13: Logical Tunnel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Current address	Configured MAC address.	detail extensive none
Hardware address	Hardware MAC address.	detail extensive none
Alternate link address	Backup link address.	detail extensive none
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: year-month-day hour:minute:second timezone (hour:minute:second ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	detail extensive none
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame aborts and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that the Junos OS does not handle. • Resource errors—Sum of transmit drops. 	extensive

Table 13: Logical Tunnel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets larger than the MTU threshold. • Resource errors—Sum of transmit drops. 	extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels

Table 13: Logical Tunnel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> • Input bytes—Rate of bytes received on the interface. • Output bytes—Rate of bytes transmitted on the interface. • Input packets—Rate of packets received on the interface. • Output packets—Rate of packets transmitted on the interface. 	detail extensive
Local statistics	<p>Statistics for traffic received from and transmitted to the Routing Engine. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p>	detail extensive
Transit statistics	<p>Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p>	detail extensive
Protocol	Protocol family configured on the logical interface, such as iso , inet6 , mpls .	detail extensive none
MTU	MTU size on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route table	Route table in which this address exists. For example, Route table:0 refers to inet.0.	detail extensive
Flags	Information about the protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Addresses, Flags	Information about the address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	detail extensive none
Destination	IP address of the remote side of the connection.	detail extensive none
Local	IP address of the logical interface.	detail extensive none
Broadcast	Broadcast address of the logical interface.	detail extensive none

Table 13: Logical Tunnel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive

Sample Output

show interfaces extensive (Logical Tunnel)

user@host> show interfaces lt-1/0/0 extensive

```
Physical interface: lt-1/0/0, Enabled, Physical link is Up
  Interface index: 143, SNMP ifIndex: 70, Generation: 26
  Type: Logical-tunnel, Link-level type: Logical-tunnel, MTU: 0,
  Clocking: Unspecified, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link type         : Unspecified
  Link flags        : None
  Physical info     : 13
  Hold-times        : Up 0 ms, Down 0 ms
  Current address: 00:00:5e:00:53:7e, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped      : 2004-03-03 15:53:52 PST (22:08:46 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,
    Policed discards: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, MTU errors: 0

Logical interface lt-1/0/0.0 (Index 66) (SNMP ifIndex 467) (Generation 3024)
  Flags: Point-To-Point SNMP-Traps 16384 DLCI 100 Encapsulation: FR-NLPID
  Traffic statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
```

```
Output packets:                0
Local statistics:
Input  bytes   :                0
Output bytes   :                0
Input  packets:                0
Output packets:                0
Transit statistics:
Input  bytes   :                0          0 bps
Output bytes   :                0          0 bps
Input  packets:                0          0 pps
Output packets:                0          0 pps
Protocol inet, MTU: 4470, Generation: 7034, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.1.1/24, Local: 10.1.1.1, Broadcast: Unspecified,
    Generation: 2054
```

show interfaces (Multicast Tunnel)

Syntax

```
show interfaces interface-type
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

Display status information about the specified multicast tunnel interface and its logical encapsulation and de-encapsulation interfaces.

Options

interface-type—On M Series and T Series routers, the interface type is ***mt-fpc/pic/port***.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index *snmp-index*—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Additional Information

The multicast tunnel interface has two logical interfaces: encapsulation and de-encapsulation. These interfaces are automatically created by the Junos OS for every multicast-enabled VPN routing and forwarding (VRF) instance. The encapsulation interface carries multicast traffic traveling from the edge interface to the core interface. The de-encapsulation interface carries traffic coming from the core interface to the edge interface.

Required Privilege Level

view

List of Sample Output

[show interfaces \(Multicast Tunnel\) on page 254](#)

[show interfaces brief \(Multicast Tunnel\) on page 254](#)

[show interfaces detail \(Multicast Tunnel\) on page 254](#)

[show interfaces extensive \(Multicast Tunnel\) on page 255](#)

[show interfaces \(Multicast Tunnel Encapsulation\) on page 257](#)

[show interfaces \(Multicast Tunnel De-Encapsulation\) on page 257](#)

Output Fields

Table 14 on page 253 lists the output fields for the **show interfaces** (Multicast Tunnel) command. Output fields are listed in the approximate order in which they appear.

Table 14: Multicast Tunnel show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified

Table 14: Multicast Tunnel show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	All levels

Sample Output

show interfaces (Multicast Tunnel)

```
user@host> show interfaces mt-1/2/0
```

```
Physical interface: mt-1/2/0, Enabled, Physical link is Up
  Interface index: 145, SNMP ifIndex: 41
  Type: Multicast-GRE, Link-level type: GRE, MTU: Unlimited, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: SNMP-Traps
  Input rate       : 0 bps (0 pps)
  Output rate      : 0 bps (0 pps)
```

show interfaces brief (Multicast Tunnel)

```
user@host> show interfaces mt-1/2/0 brief
```

```
Physical interface: mt-1/2/0, Enabled, Physical link is Up
  Type: Multicast-GRE, Link-level type: GRE, MTU: Unlimited, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: SNMP-Traps
```

show interfaces detail (Multicast Tunnel)

```
user@host> show interfaces mt-1/2/0 detail
```

```
Physical interface: mt-1/2/0, Enabled, Physical link is Up
  Interface index: 145, SNMP ifIndex: 41, Generation: 28
  Type: Multicast-GRE, Link-level type: GRE, MTU: Unlimited, Speed: 800mbps
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Interface flags: SNMP-Traps
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes  :           170664562           560000 bps
    Output bytes  :           112345376           368176 bps
    Input  packets:           2439107             1000 pps
    Output packets:           2439120             1000 pps
```

show interfaces extensive (Multicast Tunnel)

user@host> show interfaces mt-1/2/0 extensive

```
Physical interface: mt-1/2/0, Enabled, Physical link is Up
  Interface index: 141, SNMP ifIndex: 529, Generation: 144
  Type: Multicast-GRE, Link-level type: GRE, MTU: Unlimited, Speed: 800mbps
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Interface flags: SNMP-Traps
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes  :           170664562           560000 bps
    Output bytes  :           112345376           368176 bps
    Input  packets:           2439107             1000 pps
    Output packets:           2439120             1000 pps
  IPv6 transit statistics:
    Input  bytes  :                0
    Output bytes  :                0
    Input  packets:                0
    Output packets:                0

  Logical interface mt-1/2/0.32768 (Index 83) (SNMP ifIndex 556) (Generation 148)

    Flags: Point-To-Point SNMP-Traps 0x4000 IP-Header
  192.0.2.1:10.0.0.6:47:df:64:0000000800000000 Encapsulation: GRE-NULL
  Traffic statistics:
    Input  bytes  :           170418430
    Output bytes  :           112070294
    Input  packets:           2434549
    Output packets:           2435593
```

```

IPv6 transit statistics:
  Input  bytes  :                0
  Output bytes  :                0
  Input  packets:                0
  Output packets:                0
Local statistics:
  Input  bytes  :                0
  Output bytes  :             80442
  Input  packets:                0
  Output packets:             1031
Transit statistics:
  Input  bytes  :       170418430      560000 bps
  Output bytes  :       111989852      368176 bps
  Input  packets:       2434549        1000 pps
  Output packets:       2434562        1000 pps
IPv6 transit statistics:
  Input  bytes  :                0
  Output bytes  :                0
  Input  packets:                0
  Output packets:                0
Protocol inet, MTU: 1572, Generation: 182, Route table: 4
  Flags: None
Protocol inet6, MTU: 1572, Generation: 183, Route table: 4
  Flags: None

Logical interface mt-1/2/0.1081344 (Index 84) (SNMP ifIndex 560) (Generation
149)
Flags: Point-To-Point SNMP-Traps 0x6000 Encapsulation: GRE-NULL
Traffic statistics:
  Input  bytes  :       246132
  Output bytes  :       355524
  Input  packets:       4558
  Output packets:       4558
IPv6 transit statistics:
  Input  bytes  :                0
  Output bytes  :                0
  Input  packets:                0
  Output packets:                0
Local statistics:
  Input  bytes  :       246132
  Output bytes  :                0
  Input  packets:       4558
  Output packets:                0
Transit statistics:

```



```

Input  bytes :                0                0 bps
Output bytes :             355524            0 bps
Input  packets:                0                0 pps
Output packets:             4558            0 pps
IPv6 transit statistics:
Input  bytes :                0
Output bytes :                0
Input  packets:                0
Output packets:                0
Protocol inet, MTU: Unlimited, Generation: 184, Route table: 4
Flags: None
Protocol inet6, MTU: Unlimited, Generation: 185, Route table: 4
Flags: None

```

show interfaces (Multicast Tunnel Encapsulation)

user@host> **show interfaces mt-3/1/0.32768**

```

Logical interface mt-3/1/0.32768 (Index 67) (SNMP ifIndex 0)
  Flags: Point-To-Point SNMP-Traps 0x4000
  IP-Header 198.51.100.1:10.255.70.15:47:df:64:0000000800000000
  Encapsulation: GRE-NULL
Input packets : 0
Output packets: 2
  Protocol inet, MTU: Unlimited
  Flags: None

```

show interfaces (Multicast Tunnel De-Encapsulation)

user@host> **show interfaces mt-3/1/0.49152**

```

Logical interface mt-3/1/0.49152 (Index 74) (SNMP ifIndex 0)
  Flags: Point-To-Point SNMP-Traps 0x6000 Encapsulation: GRE-NULL
Input packets : 0
Output packets: 2
  Protocol inet, MTU: Unlimited
  Flags: None

```

show interfaces (PIM)

Syntax

```
show interfaces interface-type
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

Display status information about the specified Protocol Independent Multicast (PIM) de-encapsulation or PIM encapsulation interface, respectively.

Options

interface-type—On M Series and T Series routers, the PIM de-encapsulation interface type is ***pd-fpc/pic/port*** and the PIM encapsulation interface type is ***pe-fpc/pic/port***.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Required Privilege Level

view

List of Sample Output

[show interfaces \(PIM De-Encapsulation\) on page 260](#)

[show interfaces brief \(PIM De-Encapsulation\) on page 260](#)

[show interfaces detail \(PIM De-Encapsulation\) on page 260](#)

[show interfaces extensive \(PIM Encapsulation\) on page 261](#)

[show interfaces \(PIM Encapsulation\) on page 261](#)

[show interfaces brief \(PIM Encapsulation\) on page 261](#)

[show interfaces detail \(PIM Encapsulation\) on page 262](#)

[show interfaces extensive \(PIM Encapsulation\) on page 262](#)

Output Fields

Table 15 on page 259 lists the output fields for the **show interfaces** (PIM de-encapsulation or encapsulation) command. Output fields are listed in the approximate order in which they appear.

Table 15: PIM show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive

Table 15: PIM show interfaces Output Fields *(continued)*

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive

Sample Output

show interfaces (PIM De-Encapsulation)

```
user@host> show interfaces pd-0/0/0
```

```
Physical interface: pd-0/0/0, Enabled, Physical link is Up
  Interface index: 130, SNMP ifIndex: 25
  Type: PIMD, Link-level type: PIM-Decapsulator, MTU: Unlimited, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: SNMP-Traps
  Input rate       : 0 bps (0 pps)
  Output rate      : 0 bps (0 pps)
```

show interfaces brief (PIM De-Encapsulation)

```
user@host> show interfaces pd-0/0/0 brief
```

```
Physical interface: pd-0/0/0, Enabled, Physical link is Up
  Type: PIMD, Link-level type: PIM-Decapsulator, MTU: Unlimited, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: SNMP-Traps
```

show interfaces detail (PIM De-Encapsulation)

```
user@host> show interfaces pd-0/0/0 detail
```

```
Physical interface: pd-0/0/0, Enabled, Physical link is Up
  Interface index: 130, SNMP ifIndex: 25, Generation: 11
  Type: PIMD, Link-level type: PIM-Decapsulator, MTU: Unlimited, Speed: 800mbps
```

```

Hold-times      : Up 0 ms, Down 0 ms
Device flags    : Present Running
Interface flags: SNMP-Traps
Statistics last cleared: Never
Traffic statistics:
  Input  bytes  :                0                0 bps
  Output bytes  :                0                0 bps
  Input  packets:                0                0 pps
  Output packets:                0                0 pps

```

show interfaces extensive (PIM Encapsulation)

user@host> show interfaces pd-0/0/0 extensive

```

Physical interface: pd-0/0/0, Enabled, Physical link is Up
  Interface index: 130, SNMP ifIndex: 25, Generation: 11
  Type: PIMD, Link-level type: PIM-Decapsulator, MTU: Unlimited, Speed: 800mbps
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Interface flags: SNMP-Traps
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes  :                0                0 bps
    Output bytes  :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps

```

show interfaces (PIM Encapsulation)

user@host> show interfaces pe-0/0/0

```

Physical interface: pe-0/0/0, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 26
  Type: PIME, Link-level type: PIM-Encapsulator, MTU: Unlimited, Speed: 800mbps
  Device flags    : Present Running
  Interface flags: SNMP-Traps
  Input rate      : 0 bps (0 pps)
  Output rate     : 0 bps (0 pps)

```

show interfaces brief (PIM Encapsulation)

user@host> show interfaces pe-0/0/0 brief

```
Physical interface: pe-0/0/0, Enabled, Physical link is Up
  Type: PIME, Link-level type: PIM-Encapsulator, MTU: Unlimited, Speed: 800mbps
  Device flags      : Present Running
  Interface flags: SNMP-Traps
```

show interfaces detail (PIM Encapsulation)

```
user@host> show interfaces pe-0/0/0 detail
```

```
Physical interface: pe-0/0/0, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 26, Generation: 12
  Type: PIME, Link-level type: PIM-Encapsulator, MTU: Unlimited, Speed: 800mbps
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Interface flags: SNMP-Traps
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps
```

show interfaces extensive (PIM Encapsulation)

```
user@host> show interfaces pe-0/0/0 extensive
```

```
Physical interface: pe-0/0/0, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 26, Generation: 12
  Type: PIME, Link-level type: PIM-Encapsulator, MTU: Unlimited, Speed: 800mbps
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Interface flags: SNMP-Traps
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps
```

show interfaces (Virtual Loopback Tunnel)

Syntax

```
show interfaces vt-fpc/pic/port
<brief | detail | extensive | terse>
<descriptions>
<media>
<snmp-index snmp-index>
<statistics>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

Display status information about the specified virtual loopback tunnel interface.

Options

vt-fpc/pic/port—Display standard information about the specified virtual loopback tunnel interface.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

media—(Optional) Display media-specific information about network interfaces.

snmp-index snmp-index—(Optional) Display information for the specified SNMP index of the interface.

statistics—(Optional) Display static interface statistics.

Required Privilege Level

view

List of Sample Output

[show interfaces \(Virtual Loopback Tunnel\) on page 266](#)

[show interfaces brief \(Virtual Loopback Tunnel\) on page 266](#)

[show interfaces detail \(Virtual Loopback Tunnel\) on page 267](#)

[show interfaces extensive \(Virtual Loopback Tunnel\) on page 268](#)

Output Fields

[Table 16 on page 264](#) lists the output fields for the **show interfaces** (virtual loopback tunnel) command. Output fields are listed in the approximate order in which they appear.

Table 16: Virtual Loopback Tunnel show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface.	All levels
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Physical interface's index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	SNMP index number for the physical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Type	Type of interface.	All levels
Link-level type	Encapsulation used on the physical interface.	All levels
MTU	MTU size on the physical interface.	All levels
Speed	Speed at which the interface is running.	All levels
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.	detail extensive
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Input Rate	Input rate in bits per second (bps) and packets per second (pps).	None specified
Output Rate	Output rate in bps and pps.	None specified
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive
Traffic statistics	Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> • Input bytes, Output bytes—Number of bytes received and transmitted on the interface. • Input packets, Output packets—Number of packets received and transmitted on the interface. 	detail extensive
Logical Interface		

Table 16: Virtual Loopback Tunnel show interfaces Output Fields *(continued)*

Field Name	Field Description	Level of Output
Logical interface	Name of the logical interface.	All levels
Index	Logical interface index number, which reflects its initialization sequence.	detail extensive none
SNMP ifIndex	Logical interface SNMP interface index number.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Interface Flags” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels
Input packets	Number of packets received on the logical interface.	None specified
Output packets	Number of packets transmitted on the logical interface.	None specified
Bandwidth	Bandwidth allotted to the logical interface, in kilobytes per second.	All levels
Traffic statistics	<p>Total number of bytes and packets received and transmitted on the logical interface. These statistics are the sum of the local and transit statistics. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Transit statistics	Statistics for traffic transiting the router. When a burst of traffic is received, the value in the output packet rate field might briefly exceed the peak cell rate. It takes awhile (generally, less than 1 second) for this counter to stabilize.	detail extensive
<i>protocol-family</i>	Protocol family configured on the logical interface. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	brief
Protocol	Protocol family configured on the logical interface. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none

Table 16: Virtual Loopback Tunnel show interfaces Output Fields *(continued)*

Field Name	Field Description	Level of Output
MTU	Maximum transmission unit size on the logical interface.	detail extensive none
Maximum labels	Maximum number of MPLS labels configured for the MPLS protocol family on the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Route Table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about protocol family flags. Possible values are described in the “Family Flags” section under <i>Common Output Fields Description</i> .	detail extensive none

Sample Output

show interfaces (Virtual Loopback Tunnel)

user@host> show interfaces vt-1/2/0

```
Physical interface: vt-1/2/0, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 40
  Type: Loopback, Link-level type: Virtual-loopback-tunnel, MTU: Unlimited,
  Speed: 800mbps
  Device flags   : Present Running
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)

Logical interface vt-1/2/0.0 (Index 76) (SNMP ifIndex 57)
  Flags: Point-To-Point 16384 Encapsulation: Virtual-loopback-tunnel
  Input packets : 0
  Output packets: 0
  Protocol inet, MTU: Unlimited
    Flags: None
  Protocol mpls, MTU: Unlimited, Maximum labels: 3
    Flags: None
```

show interfaces brief (Virtual Loopback Tunnel)

user@host> show interfaces vt-1/2/0 brief

```
Physical interface: vt-1/2/0, Enabled, Physical link is Up
  Type: Loopback, Link-level type: Virtual-loopback-tunnel, MTU: Unlimited,
  Speed: 800mbps
  Device flags      : Present Running

Logical interface vt-1/2/0.0
  Flags: Point-To-Point 16384 Encapsulation: Virtual-loopback-tunnel
  inet
  mpls
```

show interfaces detail (Virtual Loopback Tunnel)

user@host> show interfaces vt-1/2/0 detail

```
Physical interface: vt-1/2/0, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 40, Generation: 27
  Type: Loopback, Link-level type: Virtual-loopback-tunnel, MTU: Unlimited,
  Speed: 800mbps
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps

Logical interface vt-1/2/0.0 (Index 76) (SNMP ifIndex 57) (Generation 17)
  Flags: Point-To-Point 16384 Encapsulation: Virtual-loopback-tunnel
  Traffic statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  Transit statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps
  Protocol inet, MTU: Unlimited, Generation: 33, Route table: 0
    Flags: None
  Protocol mpls, MTU: Unlimited, Maximum labels: 3, Generation: 34, Route table:
0
    Flags: None
```

show interfaces extensive (Virtual Loopback Tunnel)

```
user@host> show interfaces vt-1/2/0 extensive
```

```
Physical interface: vt-1/2/0, Enabled, Physical link is Up
  Interface index: 144, SNMP ifIndex: 40, Generation: 27
  Type: Loopback, Link-level type: Virtual-loopback-tunnel, MTU: Unlimited,
  Speed: 800mbps
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps

Logical interface vt-1/2/0.0 (Index 76) (SNMP ifIndex 57) (Generation 17)
  Flags: Point-To-Point 16384 Encapsulation: Virtual-loopback-tunnel
  Traffic statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  Transit statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps
  Protocol inet, MTU: Unlimited, Generation: 33, Route table: 0
    Flags: None
  Protocol mpls, MTU: Unlimited, Maximum labels: 3, Generation: 34, Route table:
0
    Flags: None
```

show interfaces fti

Syntax

```
show interfaces fti number
<detail | extensive | terse | statistics >
```

Release Information

Command introduced in Junos OS Release 18.3R1 for MX series Routers.

Command introduced in Junos OS Release 19.3R1 for PTX series Routers, and QFX Series Switches.

Description

Display status information about the specified FTIs.

Options

fti *number*— Display standard information about the specified FTIs.

brief | detail | extensive | terse—(Optional) Display the specified level of output.

descriptions—(Optional) Display interface description strings.

statistics—(Optional) Display FTI statistics.

Required Privilege Level

view

RELATED DOCUMENTATION

[Flexible Tunnel Interfaces Overview | 39](#)

[Configuring Flexible Tunnel Interfaces | 44](#)

[Example: Configuring Flexible Tunnel Interfaces on MX Series Routers | 48](#)

[vni \(Interfaces\) | 198](#)

List of Sample Output

[show interfaces \(Flexible Tunnel Interfaces on MX Series\) on page 275](#)

[show interfaces detail \(Flexible Tunnel Interfaces on MX Series\) on page 275](#)

[show interfaces extensive \(Flexible Tunnel Interfaces on MX Series\) on page 277](#)

[show interfaces terse \(Flexible Tunnel Interfaces on MX Series\) on page 279](#)

[show interfaces statistics \(Flexible Tunnel Interfaces on MX Series\) on page 279](#)

[show interfaces \(Flexible Tunnel Interfaces on PTX and QFX Series\) on page 280](#)

Output Fields

Table 17 on page 270 lists the output fields for the **show interfaces** (Flexible Tunnel Interfaces) command. Output fields are listed in the approximate order in which they appear.

Table 17: FTI show interfaces Output Fields

Field Name	Field Description	Level of Output
Physical Interface		
Physical interface	Name of the physical interface and state of the interface.	All levels
Enabled	State of the physical interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .	All levels
Interface index	Index number of the physical interface, which reflects its initialization sequence.	All levels
SNMP ifIndex	SNMP index number for the physical interface.	All levels
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Link-level type	Encapsulation being used on the physical interface. Possible values: Flexible- tunnel-Interfaces	All levels
MTU	Maximum transmission unit size on the physical interface.	All levels
Clocking	Reference clock source of the interface.	All levels
Speed	Speed at which the interface is running.	All levels
Device flags	Information about the physical device. Possible values are described in the “Device Flags” section under <i>Common Output Fields Description</i> .	All levels
Interface flags	Information about the interface. Possible values are described in the “Interfaces Flags” section under <i>Common Output Fields Description</i> .	All levels
Link-type	Data transmission type.	All levels
Link-flags	Information about the link. Possible values are described in the “Link Flags” section under <i>Common Output Fields Description</i> .	All levels
Last flapped	Date, time, and how long ago the interface went from down to up or from up to down. The format is Last flapped: year-month-day hours:minutes:seconds timezone (hours:minutes:seconds ago) . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago) .	All levels

Table 17: FTI show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Input packets	Number of packets received on the physical interface.	All levels
Output packets	Number of packets transmitted on the physical interface.	All levels
Physical-info	Information about the physical interface.	detail extensive
Hold-times	Current interface hold-time up and hold-time down. Value is in milliseconds.	detail extensive
Damping	<p>Provides a smoothing of the up and down transitions (flapping) on an interface.</p> <ul style="list-style-type: none"> • half-life— Decay half-life. The number of seconds after which the accumulated interface penalty counter is reduced by half if the interface remains stable. • max-suppress— Maximum hold-down time. The maximum number of seconds that an interface can be suppressed irrespective of how unstable the interface has been. • reuse— Reuse threshold. When the accumulated interface penalty counter falls below this number, the interface is no longer suppressed. • suppress— Cutoff (suppression) threshold. When the accumulated interface penalty counter exceeds this number, the interface is suppressed. • state— Interface damping state. If damping is enabled on an interface, it is suppressed during interface flaps that match the configured damping parameters. 	detail extensive
Current address	Configured MAC address.	detail extensive
Hardware address	Hardware MAC address.	detail extensive
Alternate-link-address	Backup link address.	detail extensive
Statistics last cleared	Time when the statistics for the interface were last set to zero.	detail extensive, statistics

Table 17: FTI show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Traffic statistics	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes and rate, in bps, at which bytes are received on the interface. • Output bytes—Number of bytes and rate, in bps, at which bytes are transmitted on the interface. • Input packets—Number of packets and rate, in pps, at which packets are received on the interface. • Output packets—Number of packets and rate, in pps, at which packets are transmitted on the interface. 	detail extensive
Input errors	<p>Input errors on the interface:</p> <ul style="list-style-type: none"> • Errors—Sum of incoming frame aborts and frame checksum (FCS) errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's random early detection (RED) mechanism. • Framing errors—Number of packets received with an invalid FCS. • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or were not of interest. Usually, this field reports protocols that Junos OS does not handle. • Resource errors—Sum of transmit drops. 	detail extensive

Table 17: FTI show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Output errors	<p>Output errors on the interface. The following paragraphs explain the counters whose meaning might not be obvious:</p> <ul style="list-style-type: none"> • Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and then up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), then the cable, the far-end system, or the PIC is malfunctioning. • Errors—Sum of the outgoing frame aborts and FCS errors. • Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • MTU errors—Number of packets whose size exceeded the MTU of the interface. • Resource errors—Sum of transmit drops. 	detail extensive
IPv6 transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the physical interface if IPv6 statistics tracking is enabled.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Logical Interface		
Logical interface	Name of the logical interface.	All levels
Index	Index number of the logical interface (which reflects its initialization sequence).	detail extensive none
SNMP ifIndex	SNMP interface index number of the logical interface.	detail extensive none
Generation	Unique number for use by Juniper Networks technical support only.	detail extensive
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags Field” section under <i>Common Output Fields Description</i> .	All levels
Encapsulation	Encapsulation on the logical interface.	All levels

Table 17: FTI show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Destination UDP Port	Value to write to the destination-udp-port field.	All levels
VNI	Value to write to the vni attribute	All levels
Source address	IP address of the source side of the connection.	All levels
Transit Statistics	<p>Statistics for traffic transiting the router.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface. 	detail extensive
Protocol inet, MTU	Protocol family configured on the logical interface. If the protocol is inet , the IP address of the interface is also displayed. MTU is the maximum transmission unit size on the logical interface	All levels
Max nh cache	Maximum interface neighbor discovery nexthop cache size.	All levels
New hold nh limit	Maximum number of new unresolved nexthops.	All levels
Curr nh cnts	Current number of resolved next-hop addresses.	All levels
Curr new hold cnt	Current number of unresolved next-hop addresses.	All levels
NH drop cnt	Number of neighbor discovery requests not serviced	All levels
Flags	Information about the logical interface. Possible values are described in the “Logical Interface Flags” section under <i>Common Output Fields Description</i> .	
Route Table	Routing table in which the logical interface address is located. For example, 0 refers to the routing table inet.0.	detail extensive
Flags	Information about protocol family flags. Possible values are described in the “Family Flags Field” section under <i>Common Output Fields Description</i> .	All levels
Addresses, Flags	Information about address flags. Possible values are described in the “Addresses Flags” section under <i>Common Output Fields Description</i> .	All levels
Destination address	IP address of the remote side of the connection.	All levels

Table 17: FTI show interfaces Output Fields (*continued*)

Field Name	Field Description	Level of Output
Local	IP address of the logical interface.	All levels
Broadcast	Broadcast address of the logical interface.	detail extensive none

Sample Output

show interfaces (Flexible Tunnel Interfaces on MX Series)

user@host> show interfaces fti0

```
Physical interface: fti0, Enabled, Physical link is Up
  Interface index: 136, SNMP ifIndex: 504
  Type: FTI, Link-level type: Flexible-tunnel-Interface, MTU: Unlimited, Speed:
Unlimited
  Device flags      : Present Running
  Interface flags: SNMP-Traps
  Link type         : Full-Duplex
  Link flags        : None
  Last flapped      : Never
    Input packets : 0
    Output packets: 0

  Logical interface fti0.0 (Index 340) (SNMP ifIndex 581)
    Flags: Up Point-To-Point SNMP-Traps Encapsulation: VXLAN-GPEv4
    Destination UDP port: 4789, VNI: 1000, Source address: 5.5.5.5, Destination
address: 6.6.6.6
    Input packets : 0
    Output packets: 0
    Protocol inet, MTU: Unlimited
    Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
    Flags: Sendbroadcast-pkt-to-re
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 3.3.3/24, Local: 3.3.3.5, Broadcast: 3.3.3.255
```

show interfaces detail (Flexible Tunnel Interfaces on MX Series)

user@host> show interfaces fti0 detail

```

Physical interface: fti0, Enabled, Physical link is Up
  Interface index: 136, SNMP ifIndex: 504, Generation: 139
  Type: FTI, Link-level type: Flexible-tunnel-Interface, MTU: Unlimited, Clocking:
  Unspecified,
  Speed: Unlimited
  Device flags      : Present Running
  Interface flags: SNMP-Traps
  Link type        : Full-Duplex
  Link flags       : None
  Physical info    : Unspecified
  Hold-times       : Up 0 ms, Down 0 ms
  Damping          : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped    : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  IPv6 transit statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0

Logical interface fti0.0 (Index 340) (SNMP ifIndex 581) (Generation 149)
  Flags: Up Point-To-Point SNMP-Traps Encapsulation: VXLAN-GPEv4
  Destination UDP port: 4789, VNI: 1000, Source address: 5.5.5.5, Destination
address: 6.6.6.6
  Traffic statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  Local statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  Transit statistics:
    Input  bytes :                0                0 bps

```

```

        Output bytes      :                0                0 bps
        Input  packets:    0                0 pps
        Output packets:    0                0 pps
    Protocol inet, MTU: Unlimited
    Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
    NH drop cnt: 0
    Generation: 176, Route table: 0
    Flags: Sendbroadcast-pkt-to-re
    Addresses, Flags: Is-Preferred Is-Primary
    Destination: 3.3.3/24, Local: 3.3.3.5, Broadcast: 3.3.3.255, Generation:
149

    Logical interface fti0.1 (Index 341) (SNMP ifIndex 582) (Generation 150)
    Flags: Up Point-To-Point SNMP-Traps Encapsulation: VXLAN-GPEv4
    Destination UDP port: 4789, VNI: 1000, Source address: 8.8.8.8, Destination
    address: 7.7.7.7
    Traffic statistics:
        Input  bytes      :                0
        Output bytes      :                0
        Input  packets:    0
        Output packets:    0
    Local statistics:
        Input  bytes      :                0
        Output bytes      :                0
        Input  packets:    0
        Output packets:    0
    Transit statistics:
        Input  bytes      :                0                0 bps
        Output bytes      :                0                0 bps
        Input  packets:    0                0 pps
        Output packets:    0                0 pps
    Protocol inet, MTU: Unlimited
    Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
    NH drop cnt: 0
    Generation: 177, Route table: 9
    Flags: Sendbroadcast-pkt-to-re, Is-Primary
    Addresses, Flags: Is-Default Is-Preferred Is-Primary
    Destination: 10.1.1/24, Local: 10.1.1.1, Broadcast: 10.1.1.255, Generation:
151

```

show interfaces extensive (Flexible Tunnel Interfaces on MX Series)

```
user@host> show interfaces fti0 extensive
```

```

Physical interface: fti0, Enabled, Physical link is Up
  Interface index: 136, SNMP ifIndex: 504, Generation: 139
  Type: FTI, Link-level type: Flexible-tunnel-Interface, MTU: Unlimited, Clocking:
  Unspecified,
  Speed: Unlimited
  Device flags      : Present Running
  Interface flags: SNMP-Traps
  Link type        : Full-Duplex
  Link flags       : None
  Physical info    : Unspecified
  Hold-times       : Up 0 ms, Down 0 ms
  Damping          : half-life: 0 sec, max-suppress: 0 sec, reuse: 0, suppress: 0,
state: unsuppressed
  Current address: Unspecified, Hardware address: Unspecified
  Alternate link address: Unspecified
  Last flapped    : Never
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  IPv6 transit statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Policed discards:
0,
    Resource errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, MTU errors: 0, Resource errors:
0

Logical interface fti0.0 (Index 340) (SNMP ifIndex 581) (Generation 149)
  Flags: Up Point-To-Point SNMP-Traps Encapsulation: VXLAN-GPEv4
  Destination UDP port: 4789, VNI: 1000, Source address: 5.5.5.5, Destination
address: 6.6.6.6
  Traffic statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0

```

```

Local statistics:
  Input  bytes   :                0
  Output bytes   :                0
  Input  packets :                0
  Output packets :                0
Transit statistics:
  Input  bytes   :                0          0 bps
  Output bytes   :                0          0 bps
  Input  packets :                0          0 pps
  Output packets :                0          0 pps
Protocol inet, MTU: Unlimited
Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
Generation: 176, Route table: 0
Flags: Sendbroadcast-pkt-to-re
Addresses, Flags: Is-Preferred Is-Primary
  Destination: 3.3.3/24, Local: 3.3.3.5, Broadcast: 3.3.3.255, Generation:
149

```

show interfaces terse (Flexible Tunnel Interfaces on MX Series)

```
user@host> show interfaces fti0 terse
```

Interface	Admin	Link	Proto	Local	Remote
fti0		up	up		
fti0.0		up	up	inet	3.3.3.5/24

show interfaces statistics (Flexible Tunnel Interfaces on MX Series)

```
user@host> show interfaces fti0 statistics
```

```

Physical interface: fti0, Enabled, Physical link is Up
Interface index: 136, SNMP ifIndex: 504
Type: FTI, Link-level type: Flexible-tunnel-Interface, MTU: Unlimited, Speed:
Unlimited
Device flags   : Present Running
Interface flags: SNMP-Traps
Link type      : Full-Duplex
Link flags     : None
Last flapped   : Never
Statistics last cleared: Never
  Input packets : 0

```

```

    Output packets: 0
    Input errors: 0, Output errors: 0

    Logical interface fti0.0 (Index 340) (SNMP ifIndex 581)
      Flags: Up Point-To-Point SNMP-Traps Encapsulation: VXLAN-GPEv4
      Destination UDP port: 4789, VNI: 1000, Source address: 5.5.5.5, Destination
address: 6.6.6.6
      Input packets : 3
      Output packets: 3
      Protocol inet, MTU: Unlimited
      Max nh cache: 0, New hold nh limit: 0, Curr nh cnt: 0, Curr new hold cnt: 0,
NH drop cnt: 0
      Flags: Sendbroadcast-pkt-to-re
      Addresses, Flags: Is-Preferred Is-Primary
        Destination: 3.3.3/24, Local: 3.3.3.5, Broadcast: 3.3.3.255

```

show interfaces (Flexible Tunnel Interfaces on PTX and QFX Series)

user@host> show interfaces fti0 detail

```

Physical interface: ft0, Enabled, Physical link is Up
  Interface index: 193, SNMP ifIndex: 576, Generation: 196
  Type: FT, Link-level type: FT, MTU: Unlimited, Speed: Unlimited
  Hold-times      : Up 0 ms, Down 0 ms
  Device flags    : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Statistics last cleared: Never
  Traffic statistics:
    Input  bytes :                0                0 bps
    Output bytes :                0                0 bps
    Input  packets:                0                0 pps
    Output packets:                0                0 pps
  IPv6 transit statistics:
    Input  bytes :                0
    Output bytes :                0
    Input  packets:                0
    Output packets:                0
  Logical interface ft0.0 (Index 337) (SNMP ifIndex 583) (Generation 146)
    Flags: Hardware-Down Up Point-To-Point SNMP-Traps 0x4000
    Encapsulation: UDP
    Source: 1.1.1.1 Destination: 2.2.2.2 Destination-Port: 4789
    Traffic statistics:
      Input  bytes :                0

```



```
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
```

show ipsec certificates

Syntax

```
show ipsec certificates
<brief | detail>
<crl crl-name | serial-number>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

(Encryption interface on M Series and T Series routers only) Display information about the IPsec certificate database.

Options

none—Display standard information about all of the entries in the IPsec certificate database.

brief | detail—(Optional) Display the specified level of output.

crl *crl-name* | *serial-number*—(Optional) Display information about the entries on the certificate revocation list (CRL) or for the specified serial number. A CRL is a timestamped list identifying revoked certificates. The CRL is signed by a certificate authority (CA) or CRL issuer and made freely available in a public repository. Each revoked certificate is identified in a CRL by its certificate serial number.

Required Privilege Level

view

RELATED DOCUMENTATION

[clear ipsec security-associations](#) | [204](#)

List of Sample Output

[show ipsec certificates detail on page 284](#)

Output Fields

[Table 18 on page 283](#) lists the output fields for the **show ipsec certificates** command. Output fields are listed in the approximate order in which they appear.

Table 18: show ipsec certificates Output Fields

Field Name	Field Description	Level of Output
Database	<p>Display information about the IPsec certificate database.</p> <ul style="list-style-type: none"> • Total entries—Number of database entries, including entries that are not trusted or that are in the process of being deleted. • Active entries—Number of database entries, excluding entries that are marked as deleted. • Locked entries—Number of statically configured database entries that cannot expire, such as CA certificates that are root or trusted. 	All levels
Subject	Distinguished name for the certificate for C , O , CN , as described in RFC 3280, <i>Internet x.509 Public Key Infrastructure Certificate and Certificate Revocation List (CRL) Profile</i> .	All levels
ID	Identification number of the database entry. ID is generated by the internal certificate database.	All levels
References	Reference number the certificate manager has for the particular entry.	detail
Serial	Unique serial number assigned to each certificate by the CA.	All levels
Flags	<p>State of the certificate.</p> <ul style="list-style-type: none"> • Trusted—Passed validity checks. • Not trusted—Failed validity checks. • Root—Entry is locked and may have been learned through IKE or a locally configured CA certificate. • Non-root—Entry is not locked. • Crl-issuer—Entity issues CRLs. • Non-crl-issuer—Entity does not issue CRLs. 	detail
Validity period starts	Start time that the certificate is valid, in the format <i>yyyy mon dd, hh:mm:ss GMT</i> .	detail
Validity period ends	End time that the certificate is valid, in the format <i>yyyy mon dd, hh:mm:ss GMT</i> .	detail
Alternative name information	Auxiliary identity for the certificate: <i>dns-name</i> , <i>email-address</i> , <i>ip-address</i> , or <i>uri</i> (uniform resource identifier).	detail
Issuer	Information about the entity that has signed and issued the CRL as described in RFC 2459, <i>Internet X.509 Public Key Infrastructure Certificate and CRL Profile</i> .	detail

Sample Output

show ipsec certificates detail

user@host> show ipsec certificates detail

Database: Total entries: 3 Active entries: 4 Locked entries: 1

Subject: C=us, O=x

ID: 5, References: 0, Serial: 22314868

Flags: Trusted Non-root Crl-issuer

Validity period starts: 2003 Mar 1st, 01:20:42 GMT

Validity period ends: 2003 Mar 31st, 01:50:42 GMT

Alternative name information:

IP address: 10.20.210.1

Issuer: C=FI, O=Company-ABC, CN=Company ABC class 2

Subject: C=us, O=x

ID: 4, References: 0, Serial: 22315496

Flags: Trusted Non-root Crl-issuer

Validity period starts: 2003 Mar 1st, 01:21:45 GMT

Validity period ends: 2003 Mar 31st, 01:51:45 GMT

Alternative name information:

IP address: 10.20.210.20

Issuer: C=FI, O=Company-ABC, CN=Company ABC class 2

Subject: C=FI, O=SSH Company-ABC, CN=Company ABC class 2

ID: 1, References: 1, Serial: 1538512

Flags: Trusted Root Non-crl-issuer

Validity period starts: 2001 Aug 1st, 07:08:32 GMT

Validity period ends: 2004 Aug 1st, 07:08:32 GMT

Alternative name information:

Email address: certifier-support@ssh.com

Issuer: C=FI, O=Company-ABC, CN=Company ABC class 2

show ipsec redundancy

Syntax

```
show ipsec redundancy (interface <es-fpc/pic/port> | security-associations <sa-name>)
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

(Encryption interface on M Series and T Series routers only) Display information about IPsec redundancy.

Options

interface <es-fpc/pic/port>—Display information about all encryption interfaces, or optionally, about a particular encryption interface.

security-associations <sa-name>—Display information about all remote tunnels, or optionally, about a particular remote tunnel.

Required Privilege Level

view

RELATED DOCUMENTATION

| [request ipsec switch](#) | [206](#)

List of Sample Output

[show ipsec redundancy interface on page 286](#)

[show ipsec redundancy security-associations on page 286](#)

Output Fields

[Table 19 on page 285](#) lists the output fields for the **show ipsec redundancy** command. Output fields are listed in the approximate order in which they appear.

Table 19: show ipsec redundancy Output Fields

Field Name	Field Description
Failure counter	Number of times a PIC switched between primary and backup interfaces, or the number of times the tunnel switched between the primary and remote peers since the software has been activated.
Primary interface '	Name of the interface configured to be the primary interface.

Table 19: show ipsec redundancy Output Fields (*continued*)

Field Name	Field Description
Backup interface	Name of the interface configured to be the backup interface.
State	State of the primary or backup interface can be Active , Offline , or Standby . Both ES PICs are initialized to Offline . For primary and remote peers, State can be Active or Standby . Both peers are in a state of Standby by default (there is not yet a connection between the two peers).
Security association	Name of the security association.
Local IP	Local IP address.
Primary remote IP	IP address of the configured primary remote peer.
Backup remote IP	IP address of the configured backup remote peer.

Sample Output

show ipsec redundancy interface

user@host> **show ipsec redundancy interface**

```
Failure counter: 0
Primary interface: es-1/3/0, State: Active
Backup interface : es-1/1/0, State: Standby
```

show ipsec redundancy security-associations

user@host> **show ipsec redundancy security-associations sa-dynamic**

```
Security association: sa-dynamic, Failure counter: 0
Local IP: 192.0.2.4
Primary remote IP: 198.51.100.5, State: Standby
Backup remote IP : 192.0.2.3, State: Standby
```

show ipsec security-associations

Syntax

```
show ipsec security-associations
<brief | detail>
<sa-name>
```

Release Information

Command introduced before Junos OS Release 7.4.

Description

Display information about the IPsec security associations applied to the local or transit traffic stream.

Options

none—Display standard information about all IPsec security associations.

brief | detail—(Optional) Display the specified level of output.

sa-name—(Optional) Display the specified IPsec security association.

Required Privilege Level

view

List of Sample Output

[show ipsec security-associations sa-name on page 290](#)

[show ipsec security-associations sa-name detail on page 290](#)

Output Fields

[Table 20 on page 287](#) lists the output fields for the **show ipsec security-associations** command. Output fields are listed in the approximate order in which they appear.

Table 20: show ipsec security-associations Output Fields

Field Name	Field Description	Level of Output
Security association	Name of the security association.	All levels

Table 20: show ipsec security-associations Output Fields (*continued*)

Field Name	Field Description	Level of Output
Interface family	<p>Status of the interface family of the security association. If the interface family field is absent, it is a transport mode security association. The interface family can have one of three options:</p> <ul style="list-style-type: none"> • Up—The security association is referenced in the interface family and the interface family is up. • Down—The security association is referenced in the interface family and the interface family is down. • No reference—The security association is not referenced in the interface family. 	All levels
Local gateway	Gateway address of the local system.	All levels
Remote gateway	Gateway address of the remote system.	All levels
Local identity	Prefix and port number of the local end	All levels
Remote identity	Prefix and port number of the remote end.	All levels
Direction	Direction of the security association: inbound or outbound .	All levels
SPI	Value of the security parameter index.	All levels
AUX-SPI	<p>Value of the auxiliary security parameter index.</p> <ul style="list-style-type: none"> • When the value is AH or ESP, AUX-SPI is always 0. • When the value is AH+ESP, AUX-SPI is always a positive integer. 	All levels
State	<p>Status of the security association:</p> <ul style="list-style-type: none"> • Installed—The security association is installed in the security association database. (For transport mode security associations, the value of State must always be Installed.) • Not installed—The security association is not installed in the security association database. 	detail
Mode	<p>Mode of the security association:</p> <ul style="list-style-type: none"> • transport—Protects single host-to-host protections. • tunnel—Protects connections between security gateways. 	All levels

Table 20: show ipsec security-associations Output Fields (continued)

Field Name	Field Description	Level of Output
Type	Type of security association:. <ul style="list-style-type: none"> • manual—Security parameters require no negotiation. They are static, and are configured by the user. • dynamic—Security parameters are negotiated by the IKE protocol. Dynamic security associations are not supported in transport mode. 	All levels
Protocol	Protocol supported: <ul style="list-style-type: none"> • transport mode—Supports Encapsulation Security Protocol (ESP) or Authentication Header (AH). • tunnel mode—Supports ESP or AH+ESP. 	All levels
Authentication	Type of authentication used: hmac-md5-96 , hmac-sha1-96 , or None .	detail
Encryption	Type of encryption used: des-cbc , 3des-csc , or None .	detail
Soft lifetime Hard lifetime	(dynamic output only) Each lifetime of a security association has two display options, hard and soft, one of which must be present for a dynamic security association. The hard lifetime specifies the lifetime of the SA. The soft lifetime , which is derived from the hard lifetime, informs the IPsec key management system that the SA is about to expire. This allows the key management system to negotiate a new SA before the hard lifetime expires. <ul style="list-style-type: none"> • Expires in seconds seconds—Number of seconds left until the security association expires. • Expires in kilobytes kilobytes—Number of kilobytes left until the security association expires. 	detail
Anti-replay service	State of the service that prevents packets from being replayed: Enabled or Disabled .	detail
Replay window size	Configured size, in packets, of the antireplay service window: 32 or 64 . The antireplay window size protects the receiver against replay attacks by rejecting old or duplicate packets. If the replay window size is 0 , the antireplay service is disabled .	detail

Sample Output

show ipsec security-associations sa-name

user@host> **show ipsec security-associations sa-cosmic brief**

```
Security association: sa-cosmic, Interface family: Up
Local gateway: 192.0.2.1, Remote gateway: 198.51.100.1
Local identity: ipv4_subnet(any:0,[0..7]=0.0.0.0/0)
Remote identity: ipv4_subnet(any:0,[0..7]=0.0.0.0/0)
Direction SPI      AUX-SPI      Mode      Type      Protocol
inbound  2908734119  0          tunnel    dynamic   AH
outbound 3494029335  0          tunnel    dynamic   AH
```

show ipsec security-associations sa-name detail

user@host> **show ipsec security-associations sa-cosmic detail**

```
Security association: sa-cosmic, Interface family: Up

Local gateway: 192.0.2.1, Remote gateway: 198.51.100.1
Local identity: ipv4_subnet(any:0,[0..7]=0.0.0.0/0)
Remote identity: ipv4_subnet(any:0,[0..7]=0.0.0.0/0)
Direction: inbound, SPI: 2908734119, AUX-SPI: 0, State: Installed
Mode: tunnel, Type: dynamic
Protocol: AH, Authentication: hmac-md5-96, Encryption: None
Soft lifetime: Expired
Hard lifetime: Expires in 120 seconds
Anti-replay service: Disabled

Direction: outbound, SPI: 3494029335, AUX-SPI: 0, State: Installed
Mode: tunnel, Type: dynamic
Protocol: AH, Authentication: hmac-md5-96, Encryption: None
Soft lifetime: Expired
Hard lifetime: Expires in 120 seconds
Anti-replay service: Disabled
```

show system certificate

Syntax

```
show system certificate
<certificate-id>
```

Release Information

Command introduced before Junos OS Release 7.4.
Command introduced in Junos OS Release 11.1 for the QFX Series.
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

Description

(Encryption interface on M Series, T Series routers, QFX Series, and OCX Series switches only) Display installed certificates signed by the Juniper Networks certificate authority.

Options

- none**—Display all installed certificates signed by the Juniper Networks certificate authority.
- certificate-id**—(Optional) Display the details of a particular certificate.

Required Privilege Level

maintenance

List of Sample Output

- [show system certificate on page 292](#)
- [show system certificate \(QFX Series\) on page 293](#)

Output Fields

[Table 21 on page 291](#) lists the output fields for the **show system certificate** command. Output fields are listed in the approximate order in which they appear.

Table 21: show system certificate Output Fields

Field Name	Field Description
Certificate identifier	Unique identifier associated with a certificate. The certificate identifier is the common name of the subject.

Table 21: show system certificate Output Fields (*continued*)

Field Name	Field Description
Issuer Subject	Information about the certificate issuer and the distinguished name (DN) of the issuer, respectively: <ul style="list-style-type: none"> • Organization—Name of the owner's organization. • Organizational unit—Name of the owner's department. • Country—Two-character country code in which the owner's system is located. • State—State in the USA in which the owner is using the certificate. • Locality—City in which the owner's system is located. • Common name—Name of the owner of the certificate. • E-mail address—E-mail address of the owner of the certificate.
Validity	When a certificate is valid.
Signature algorithm	Encryption algorithm applied to the installed certificate.
Public key algorithm	Encryption algorithm applied to the public key.

Sample Output

show system certificate

```
user@host> show system certificate
```

```

Certificate identifier: Dallas-v3
  Issuer:
Organization: Juniper Networks, Organizational unit: Juniper CA,
Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas CA,
E-mail address:ca@example.com
  Subject:
Organization: Juniper Networks, Organizational unit: Juniper CA,
Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas-v3,
E-mail address:ca@example.com
Validity:
  Not before: Mar 13 03:23:25 2004 GMT
  Not after: Mar 24 03:23:25 2014 GMT

```

```
Signature algorithm: sha1WithRSAEncryption  
Public key algorithm: dsaEncryption
```

show system certificate (QFX Series)

user@host> **show system certificate**

```
Certificate identifier: Dallas-v3  
  Issuer:  
    Organization: Juniper Networks, Organizational unit: Juniper CA,  
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas CA,  
    E-mail address:ca@example.com  
  Subject:  
    Organization: Juniper Networks, Organizational unit: Juniper CA,  
    Country: US, State: CA, Locality: Sunnyvale, Common name: Dallas-v3,  
    E-mail address:ca@example.com  
Validity:  
  Not before: Mar 13 03:23:25 2004 GMT  
  Not after: Mar 24 03:23:25 2014 GMT  
Signature algorithm: sha1WithRSAEncryption  
Public key algorithm: dsaEncryption
```