

Junos® OS

Class of Service User Guide (Security Devices)

Published
2022-03-09

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos® OS Class of Service User Guide (Security Devices)
Copyright © 2022 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

About This Guide | xiv

1

Overview

Introduction to Class of Service | 2

Understanding Class of Service | 2

Benefits of CoS | 4

CoS Across the Network | 4

Junos OS CoS Components | 5

CoS Components Packet Flow | 8

CoS Device Configuration Overview | 10

Understanding CoS Default Settings | 10

2

Configuring Class of Service Components

Assigning Service Levels with Classifiers | 13

Classification Overview | 13

Understanding Packet Loss Priorities | 17

Default Behavior Aggregate Classification | 18

Sample Behavior Aggregate Classification | 20

Example: Configuring Behavior Aggregate Classifiers | 22

Requirements | 22

Overview | 22

Configuration | 23

Verification | 26

Controlling Network Access with Traffic Policing | 30

Simple Filters and Policers Overview | 30

Two-Rate Three-Color Policer Overview | 31

Example: Configuring a Two-Rate Three-Color Policer | 32

Requirements | 33

Overview | 33

Configuration | 34

Verification | 39

Logical Interface (Aggregate) Policer Overview | 40

Two-Color Policer Configuration Overview | 41

Example: Configuring a Two-Color Logical Interface (Aggregate) Policer | 45

Requirements | 45

Overview | 46

Configuration | 46

Verification | 52

Guidelines for Configuring Simple Filters | 54

Example: Configuring and Applying a Firewall Filter for a Multifield Classifier | 58

Requirements | 59

Overview | 59

Configuration | 61

Verification | 65

Controlling Output Queues with Forwarding Classes | 68

Forwarding Classes Overview | 68

Example: Configuring Forwarding Classes | 71

Example: Assigning Forwarding Classes to Output Queues | 77

Requirements | 77

Overview | 77

Configuration | 78

Verification | 80

Example: Assigning a Forwarding Class to an Interface | 81

Requirements | 81

Overview | 81

Configuration | 81

Verification | 82

Understanding the SPC High-Priority Queue | 83

Example: Configuring the SPC High-Priority Queue | 83

- Requirements | 83

- Overview | 84

- Configuration | 84

- Verification | 86

Understanding Queuing and Marking of Host Outbound Traffic | 87

Default Routing Engine Protocol Queue Assignments | 89

Altering Outgoing Packets Headers with Rewrite Rules | 93

Rewrite Rules Overview | 93

Rewriting Frame Relay Headers | 94

- Assigning the Default Frame Relay Rewrite Rule to an Interface | 94

- Defining a Custom Frame Relay Rewrite Rule | 95

Example: Configuring and Applying Rewrite Rules on a Security Device | 96

- Requirements | 96

- Overview | 96

- Configuration | 97

- Verification | 100

Defining Output Queue Properties with Schedulers | 102

Schedulers Overview | 102

Default Scheduler Settings | 108

Transmission Scheduling Overview | 109

Excess Bandwidth Sharing and Minimum Logical Interface Shaping | 111

Excess Bandwidth Sharing Proportional Rates | 112

Calculated Weights Mapped to Hardware Weights | 113

Weight Allocation with Only Shaping Rates or Unshaped Logical Interfaces | 115

Shared Bandwidth Among Logical Interfaces | 116

Example: Configuring Class-of-Service Schedulers on a Security Device | 118

- Requirements | 119

- Overview | 119

Configuration | 120

Verification | 124

Scheduler Buffer Size Overview | 125

Example: Configuring a Large Delay Buffer on a Channelized T1 Interface | 130

Requirements | 130

Overview | 130

Configuration | 130

Verification | 133

Configuring Large Delay Buffers in CoS | 134

Example: Configuring and Applying Scheduler Maps | 140

Requirements | 140

Overview | 140

Configuration | 141

Verification | 143

Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs | 144

Example: Applying Scheduling and Shaping to VLANs | 154

Requirements | 154

Overview | 154

Configuration | 155

Removing Delays with Strict-Priority Queues | 164

Strict-Priority Queue Overview | 164

Understanding Strict-Priority Queues | 165

Example: Configuring Priority Scheduling | 166

Requirements | 166

Overview | 166

Configuration | 166

Verification | 169

Example: Configuring Strict-Priority Queuing | 169

Requirements | 170

Overview | 170

Configuration | 170

Verification | 182

Example: Configuring CoS Non-Strict Priority Scheduling | 183

Requirements | 184

Overview | 184

Configuration | 185

Verification | 188

Controlling Congestion with Drop Profiles | 190

RED Drop Profiles Overview | 190

RED Drop Profiles and Congestion Control | 192

Configuring RED Drop Profiles | 194

Example: Configuring RED Drop Profiles | 198

Requirements | 198

Overview | 198

Configuration | 199

Verification | 201

Example: Configuring Segmented and Interpolated Style Profiles | 202

Requirements | 202

Overview | 202

Configuration | 202

Verification | 206

Controlling Congestion with Adaptive Shapers | 207

Adaptive Shaping Overview | 207

Assigning the Default Frame Relay Loss Priority Map to an Interface | 208

Defining a Custom Frame Relay Loss Priority Map | 209

Example: Configuring and Applying an Adaptive Shaper | 209

Requirements | 210

Overview | 210

Configuration | 210

Verification | 211

Limiting Traffic Using Virtual Channels | 212

Virtual Channels Overview | 212

Understanding Virtual Channels | 213

Example: Configuring Virtual Channels | 215

Requirements | 215

Overview | 215

Configuration | 215

Verification | 221

Enabling Queuing for Tunnel Interfaces | 222

CoS Queuing for Tunnels Overview | 222

Understanding the ToS Value of a Tunnel Packet | 227

Example: Configuring CoS Queuing for GRE or IP-IP Tunnels | 228

Requirements | 229

Overview | 229

Configuration | 230

Verification | 232

Copying Outer IP Header DSCP and ECN to Inner IP Header | 235

Understanding CoS Support on st0 Interfaces | 236

Naming Components with Code-Point Aliases | 240

Code-Point Aliases Overview | 240

Default CoS Values and Aliases | 241

Example: Defining Code-Point Aliases for Bits on a Security Device | 244

Requirements | 244

Overview | 245

Configuration | 245

Verification | 246

Configuring Class of Service Scheduler Hierarchy

Controlling Traffic by Configuring Scheduler Hierarchy | 248

Understanding Hierarchical Schedulers | 248

Understanding Internal Scheduler Nodes | 252

SRX1400, SRX3400, and SRX3600 Device Hardware Capabilities and Limitations | 253

Example: Configuring a Four-Level Scheduler Hierarchy | 255

4

Requirements | 256

Overview | 256

Configuration | 257

Verification | 273

Example: Controlling Remaining Traffic | 274

Requirements | 274

Overview | 274

Configuration | 277

Verification | 281

Configuring Class of Service for IPv6

Configuring Class of Service for IPv6 Traffic | 284

CoS Functions for IPv6 Traffic Overview | 284

Understanding CoS with DSCP IPv6 BA Classifier | 287

Example: Configuring CoS with DSCP IPv6 BA Classifiers | 287

Requirements | 287

Overview | 287

Configuration | 288

Verification | 291

Understanding DSCP IPv6 Rewrite Rules | 292

Example: Configuring CoS with DSCP IPv6 Rewrite Rules | 293

Requirements | 293

Overview | 293

Configuration | 293

Verification | 297

5

Configuring Class of Service for I/O Cards

Configuring Class of Service for I/O Cards | 299

PIR-Only and CIR Mode Overview | 299

Understanding Priority Propagation | 301

Understanding IOC Hardware Properties | 304

Understanding IOC Map Queues | 306

WRED on the IOC Overview | 307

MDRR on the IOC Overview | 312

CoS Support on the SRX5000 Module Port Concentrator Overview | 315

Example: Configuring CoS on SRX5000 Devices with an MPC | 316

Requirements | 317

Overview | 317

Configuration | 319

Verification | 327

6

Configuration Statements and Operational Commands

Configuration Statements | 331

adaptive-shaper | 332

adaptive-shapers | 334

application-traffic-control | 335

buffer-size (Schedulers) | 337

classifiers (CoS) | 339

code-points (CoS) | 341

default (CoS) | 342

drop-profile-map (Schedulers) | 343

dscp-code-point (CoS Host Outbound Traffic) | 345

egress-shaping-overhead | 346

forwarding-class (CoS Host Outbound Traffic) | 349

forwarding-classes | 350

frame-relay-de (CoS Interfaces) | 356

frame-relay-de (CoS Loss Priority) | 358

frame-relay-de (CoS Rewrite Rule) | 359

host-outbound-traffic (Class-of-Service) | 360

ingress-policer-overhead | 362

- interfaces (CoS) | **365**
- logical-interface-policer | **367**
- loss-priority (CoS Loss Priority) | **368**
- loss-priority (CoS Rewrite Rules) | **370**
- loss-priority-maps (CoS Interfaces) | **371**
- loss-priority-maps (CoS) | **373**
- non-strict-priority-scheduling | **374**
- per-unit-scheduler | **375**
- policer-overhead | **377**
- priority (Schedulers) | **379**
- rate-limiters | **380**
- rewrite-rules (CoS) | **382**
- rewrite-rules (CoS Interfaces) | **384**
- rule-sets (CoS AppQoS) | **385**
- scheduler-map (CoS Virtual Channels) | **388**
- schedulers (CoS) | **390**
- shaping-rate (CoS Adaptive Shapers) | **391**
- shaping-rate (CoS Interfaces) | **393**
- shaping-rate (CoS Virtual Channels) | **395**
- shaping-rate (Schedulers) | **396**
- transmit-rate (Schedulers) | **399**
- trigger (CoS) | **402**
- tunnel-queuing | **403**
- virtual-channels | **404**
- virtual-channel-group (CoS Interfaces) | **406**
- virtual-channel-groups | **407**

Operational Commands | 410

show class-of-service application-traffic-control counter | 411

show class-of-service application-traffic-control statistics rate-limiter | 417

show class-of-service application-traffic-control statistics rule | 421

show class-of-service classifier | 424

show class-of-service code-point-aliases | 428

show class-of-service drop-profile | 430

show class-of-service fabric scheduler-map | 435

show class-of-service fabric statistics | 437

show class-of-service forwarding-class | 442

show class-of-service forwarding-table | 444

show class-of-service forwarding-table classifier | 449

show class-of-service forwarding-table classifier mapping | 451

show class-of-service forwarding-table drop-profile | 453

show class-of-service forwarding-table fabric scheduler-map | 456

show class-of-service forwarding-table rewrite-rule | 458

show class-of-service forwarding-table rewrite-rule mapping | 460

show class-of-service forwarding-table scheduler-map | 462

show class-of-service forwarding-table traffic-class-map | 465

show class-of-service fragmentation-map | 468

show class-of-service interface | 471

show class-of-service loss-priority-rewrite | 516

show class-of-service l2tp-session | 518

show class-of-service policy-map | 520

show class-of-service rewrite-rule | 522

show class-of-service routing-instance | 525

show class-of-service scheduler-hierarchy interface | 527

show class-of-service scheduler-map | 530

show class-of-service traffic-class-map | 534

show class-of-service translation-table | 537

show interfaces forwarding-class-counters | 543

show interfaces voq | 550

About This Guide

Use this guide to understand and configure class of service (CoS) features in Junos OS to define service levels that provide different delay, jitter, and packet loss characteristics to particular applications served by specific traffic flows. Applying CoS features to each device in your network ensures quality of service (QoS) for traffic throughout your entire network. This guide applies to all security devices.

1

PART

Overview

[Introduction to Class of Service](#) | 2

Introduction to Class of Service

IN THIS CHAPTER

- Understanding Class of Service | 2
- Benefits of CoS | 4
- CoS Across the Network | 4
- Junos OS CoS Components | 5
- CoS Components Packet Flow | 8
- CoS Device Configuration Overview | 10
- Understanding CoS Default Settings | 10

Understanding Class of Service

When a network experiences congestion and delay, some packets must be dropped. Junos OS *class of service* (CoS) allows you to divide traffic into classes and offer various levels of throughput and packet loss when congestion occurs. This allows packet loss to happen according to the rules you configure.

For interfaces that carry IPv4, IPv6, or MPLS traffic, you can configure the Junos OS CoS features to provide multiple classes of service for different applications. On the device, you can configure multiple forwarding classes for transmitting packets, define which packets are placed into each output queue, schedule the transmission service level for each queue, and manage congestion using a random early detection (RED) algorithm.

Traffic shaping is the allocation of the appropriate amount of network bandwidth to every user and application on an interface. The appropriate amount of bandwidth is defined as cost-effective carrying capacity at a guaranteed CoS. You can use a Juniper Networks device to control traffic rate by applying classifiers and shapers.

The CoS features provide a set of mechanisms that you can use to provide differentiated services when best-effort delivery is insufficient.

Using Junos OS CoS features, you can assign service levels with different delay, *jitter* (delay variation), and packet loss characteristics to particular applications served by specific traffic flows. CoS is especially useful for networks supporting time-sensitive video and audio applications.

CoS features include traffic classifying, policing, queuing, scheduling, shaping and marker rewriting. You can configure all these features on the physical interfaces. So, the speeds of physical interfaces are of very much importance for CoS. Previously, vSRX instances supported only 1-Gbps interface speed even if the physical interface speed was more. As a result, CoS could be enabled only at 1G bandwidth even when the interfaces can actually support 1-Gbps, 10-Gbps, 40-Gbps, and 100-Gbps rates.

Currently on vSRX and vSRX 3.0 instances, different physical interface speed rates of 1-Gbps, 10-Gbps, 40-Gbps, and 100-Gbps are supported to configure CoS features. VMXNET3 or VIRTIO interface speed is 10Gbps, SR-IOV interface speed depends on the ethernet card.

If an interface speed configured is none of these speeds then the speed considered for CoS features is 1-Gbps.

Overall performance of network traffic is usually measured by aspects such as the bandwidth, delay, and error rate. If there is congestion in the network then packets are dropped. CoS helps divide the traffic during the time of congestion. So, with the different physical interface speed rates supported to configure CoS the CoS performance is improved.

NOTE: Policing, scheduling, and shaping CoS services are not supported for pre-encryption and post-encryption packets going into and coming out of an IPsec VPN tunnel.

Junos OS supports the following RFCs for traffic classification and policing:

- RFC 2474, *Definition of the Differentiated Services Field in the IPv4 and IPv6*
- RFC 2475, *An Architecture for Differentiated Services*
- RFC 2597, *Assured Forwarding PHB Group*
- RFC 2598, *An Expedited Forwarding PHB*
- RFC 2697, *A Single Rate Three Color Marker*
- RFC 2698, *A Two Rate Three Color Marker*

RELATED DOCUMENTATION

[Junos OS CoS Components | 5](#)

[CoS Components Packet Flow | 8](#)

Benefits of CoS

IP routers normally forward packets independently, without controlling throughput or delay. This type of packet forwarding, known as *best-effort service*, is as good as your network equipment and links allow. Best-effort service is sufficient for many traditional IP data delivery applications, such as e-mail or Web browsing. However, newer IP applications such as real-time video and audio (or voice) require lower delay, *jitter*, and packet loss than simple best-effort networks can provide.

CoS features allow a Juniper Networks device to improve its processing of critical packets while maintaining best-effort traffic flows, even during periods of congestion. Network throughput is determined by a combination of available bandwidth and delay. CoS dedicates a guaranteed minimum bandwidth to a particular service class by reducing forwarding queue delays. (The other two elements of overall network delay, serial transmission delays determined by link speeds and propagation delays determined by media type, are not affected by CoS settings.)

Normally, packets are queued for output in their order of arrival, regardless of service class. Queuing delays increase with network congestion and often result in lost packets when queue buffers overflow. CoS packet classification assigns packets to forwarding queues by service class.

Because CoS must be implemented consistently end-to-end through the network, the CoS features on the Juniper Networks device are based on IETF Differentiated Services (DiffServ) standards to interoperate with other vendors' CoS implementations.

RELATED DOCUMENTATION

[Understanding Class of Service | 2](#)


CoS Across the Network

CoS works by examining traffic entering at the edge of your network. The edge devices classify traffic into defined service groups, which allow for the special treatment of traffic across the network. For example, voice traffic can be sent across certain links, and data traffic can use other links. In addition, the data traffic streams can be serviced differently along the network path to ensure that higher-paying customers receive better service. As the traffic leaves the network at the far edge, you can reclassify the traffic.

To support CoS, you must configure each device in the network. Generally, each device examines the packets that enter it to determine their CoS settings. These settings then dictate which packets are first transmitted to the next downstream device. In addition, the devices at the edges of your network might be required to alter the CoS settings of the packets transmitting to the neighboring network.

[Figure 1 on page 5](#) shows an example of CoS operating across an Internet Service Provider (ISP) network.

Figure 1: CoS Across the Network

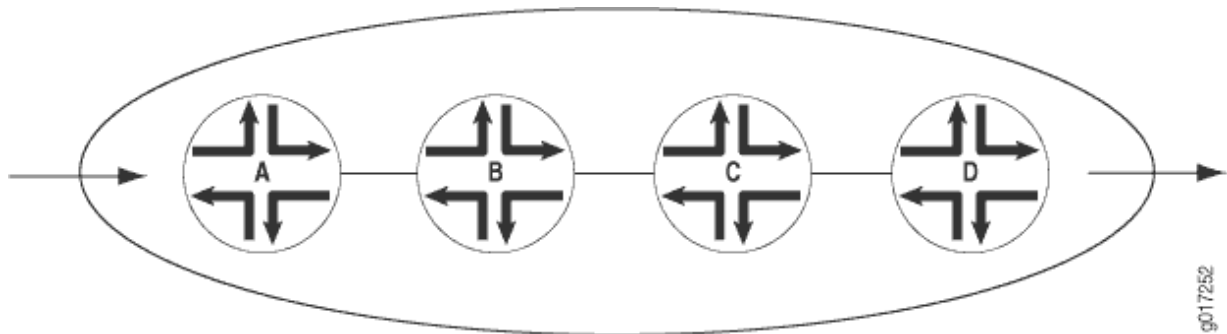

In the ISP network shown in [Figure 1 on page 5](#), Device A is receiving traffic from your network. As each packet enters, Device A examines the packet's current CoS settings and classifies the traffic into one of the groupings defined by the ISP. This definition allows Device A to prioritize its resources for servicing the traffic streams it is receiving. In addition, Device A might alter the CoS settings (forwarding class and loss priority) of the packets to better match the ISP's traffic groups. When Device B receives the packets, it examines the CoS settings, determines the appropriate traffic group, and processes the packet according to those settings. Device B then transmits the packets to Device C, which performs the same actions. Device D also examines the packets and determines the appropriate group. Because it sits at the far end of the network, the ISP might decide once again to alter the CoS settings of the packets before Device D transmits them to the neighboring network.

RELATED DOCUMENTATION

[Understanding Class of Service | 2](#)

Junos OS CoS Components

Junos OS supports CoS components on Juniper Networks devices as indicated in [Table 1 on page 6](#).

Table 1: Supported Junos OS CoS Components

Junos OS CoS Component	Description	For More Information
Code-point aliases	A code-point alias assigns a name to a pattern of code-point bits. You can use this name, instead of the bit pattern, when you configure other CoS components such as classifiers, drop-profile maps, and rewrite rules.	"Code-Point Aliases Overview" on page 240
Classifiers	Packet classification refers to the examination of an incoming packet. This function associates the packet with a particular CoS servicing level. Two general types of classifiers are supported—behavior aggregate (BA) classifiers and multifield (MF) classifiers. When both BA and MF classifications are performed on a packet, the MF classification has higher precedence.	"Classification Overview" on page 13
Forwarding classes	Forwarding classes allow you to group packets for transmission. Based on forwarding classes, you assign packets to output queues. The forwarding class plus the loss priority define the per-hop behavior (PHB in DiffServ) of a packet. Juniper Networks routers and services gateways support eight queues (0 through 7).	"Forwarding Classes Overview" on page 68
Loss priorities	Loss priorities allow you to set the priority of dropping a packet. You can use the loss priority setting to identify packets that have experienced congestion.	"Understanding Packet Loss Priorities" on page 17
Forwarding policy options	CoS-based forwarding (CBF) enables you to control next-hop selection based on a packet's class of service and, in particular, the value of the IP packet's precedence bits. For example, you can specify a particular interface or next hop to carry high-priority traffic while all best-effort traffic takes some other path.	"Example: Assigning a Forwarding Class to an Interface" on page 81
Transmission queues	After a packet is sent to the outgoing interface on a device, it is queued for transmission on the physical media. The amount of time a packet is queued on the device is determined by the availability of the outgoing physical media as well as the amount of traffic using the interface. Juniper Networks routers and services gateways support queues 0 through 7.	"Transmission Scheduling Overview" on page 109

Table 1: Supported Junos OS CoS Components (Continued)

Junos OS CoS Component	Description	For More Information
Schedulers	An individual device interface has multiple queues assigned to store packets temporarily before transmission. To determine the order to service the queues, the device uses a round-robin scheduling method based on priority and the queue's weighted round-robin (WRR) credits. Junos OS schedulers allow you to define the priority, bandwidth, delay buffer size, rate control status, and RED drop profiles to be applied to a particular queue for packet transmission.	"Schedulers Overview" on page 102
Virtual channels	On Juniper Networks routers and services gateways, you can configure virtual channels to limit traffic sent from a corporate headquarters to branch offices. Virtual channels might be required when the headquarters site has an expected aggregate bandwidth higher than that of the individual branch offices. The router at the headquarters site must limit the traffic sent to each branch office router to avoid oversubscribing their links.	"Virtual Channels Overview" on page 212
Policers for traffic classes	Policers allow you to limit traffic of a certain class to a specified bandwidth and burst size. Packets exceeding the policer limits can be discarded, or can be assigned to a different forwarding class, a different loss priority, or both. You define policers with firewall filters that can be associated with input or output interfaces.	"Simple Filters and Policers Overview" on page 30
Rewrite rules	A rewrite rule modifies the appropriate CoS bits in an outgoing packet. Modification of CoS bits allows the next downstream device to classify the packet into the appropriate service group. Rewriting or marking outbound packets is useful when the device is at the border of a network and must alter the CoS values to meet the policies of the targeted peer.	"Rewrite Rules Overview" on page 93

RELATED DOCUMENTATION[Understanding Class of Service | 2](#)[CoS Components Packet Flow | 8](#)[Understanding CoS Default Settings | 10](#)[CoS Device Configuration Overview | 10](#)


CoS Components Packet Flow

IN THIS SECTION

- CoS Process on Incoming Packets | 9
- CoS Process on Outgoing Packets | 9

On Juniper Networks devices, you configure CoS functions using different components. These components are configured individually or in a combination to define particular CoS services. [Figure 2 on page 8](#) displays the relationship of different CoS components to each other and illustrates the sequence in which they interact.

Figure 2: Packet Flow Through Juniper Networks Device

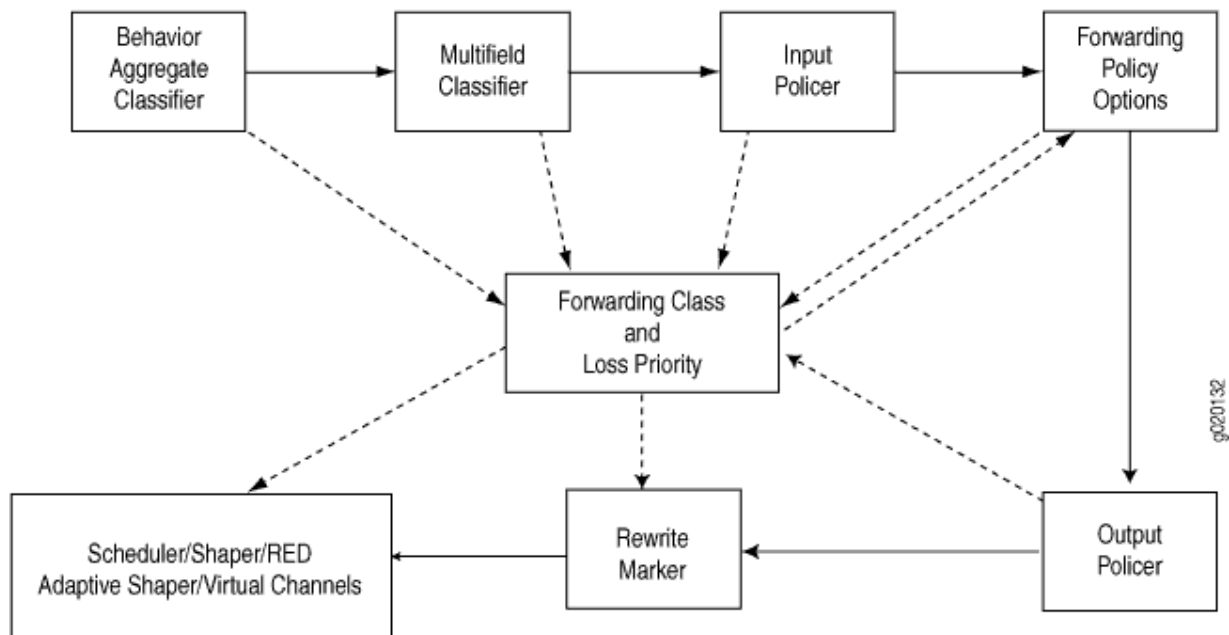

Each box in [Figure 2 on page 8](#) represents a CoS component. The solid lines show the direction of packet flow in a device. The upper row indicates an incoming packet, and the lower row an outgoing packet. The dotted lines show the inputs and outputs of particular CoS components. For example, the forwarding class and loss priority are outputs of behavior aggregate classifiers and multifield classifiers and inputs for rewrite markers and schedulers.

Typically, only a combination of some components shown in [Figure 2 on page 8](#) (not all) is used to define a CoS service offering. For example, if a packet's class is determined by a behavior aggregate classifier, it is associated with a forwarding class and loss priority and does not need further classification by the multifield classifier.

This section contains the following topics:

CoS Process on Incoming Packets

Classifiers and policers perform the following operations on incoming packets:

1. A classifier examines an incoming packet and assigns a forwarding class and loss priority to it.
2. Based on the forwarding class, the packet is assigned to an outbound transmission queue.
3. Input policers meter traffic to see if traffic flow exceeds its service level. Policers might discard, change the forwarding class and loss priority, or set the PLP bit of a packet. A packet for which the PLP bit is set has an increased probability of being dropped during congestion.

CoS Process on Outgoing Packets

The scheduler map and rewrite rules perform the following operations on outgoing packets:

1. Scheduler maps are applied to interfaces and associate the outgoing packets with a scheduler and a forwarding class.
2. The scheduler defines how the packet is treated in the output transmission queue based on the configured transmit rate, buffer size, priority, and drop profile.
 - The buffer size defines the period for which the packet is stored during congestion.
 - The scheduling priority and transmit rate determine the order in which the packet is transmitted.
 - The drop profile defines how aggressively to drop packets that are using a particular scheduler.
3. Output policers meter traffic and might change the forwarding class and loss priority of a packet if a traffic flow exceeds its service level.
4. The rewrite rule writes information to the packet (for example, EXP or DSCP bits) according to the forwarding class and loss priority of the packet.

RELATED DOCUMENTATION

[Understanding Class of Service | 2](#)

[Junos OS CoS Components | 5](#)

CoS Device Configuration Overview

Before you begin configuring a Juniper Networks device for CoS, complete the following tasks:

- Determine whether the device needs to support different traffic streams, such as voice or video. If so, CoS helps to make sure this traffic receives more than basic best-effort packet delivery service.
- Determine whether the device is directly attached to any applications that send CoS-classified packets. If no sources are enabled for CoS, you must configure and apply rewrite rules on the interfaces facing the sources.
- Determine whether the device must support assured forwarding (AF) classes. Assured forwarding usually requires random early detection (RED) drop profiles to be configured and applied.
- Determine whether the device must support expedited forwarding (EF) classes with a policer. Policers require you to apply a burst size and bandwidth limit to the traffic flow, and set a consequence for packets that exceed these limits—usually a high loss priority, so that packets exceeding the policer limits are discarded first.

NOTE: When the T1/E1 mPIM is oversubscribed, we recommend that you configure its shaping rate for consistent CoS functionality. The shaping rate should be less than the total link speed.

RELATED DOCUMENTATION

[CLI Explorer](#)[Understanding Class of Service | 2](#)[CoS Components Packet Flow | 8](#)[Understanding CoS Default Settings | 10](#)

Understanding CoS Default Settings

The *Class of Service* menu in J-Web allows you to configure most of the Junos OS CoS components for the IPv4 and MPLS traffic on a Juniper Networks device. You can configure forwarding classes for

transmitting packets, define which packets are placed into each output queue, schedule the transmission service level for each queue, and manage congestion using a random early detection (RED) algorithm. After defining the CoS components, you must assign classifiers to the required physical and logical interfaces.

Even when you do not configure any CoS settings on your routing platform, the software performs some CoS functions to ensure that user traffic and protocol packets are forwarded with minimum delay when the network is experiencing congestion. Some default mappings are automatically applied to each *logical interface* that you configure. Other default mappings, such as explicit default classifiers and *rewrite rules*, are in operation only if you explicitly associate them with an interface.

You can display default CoS settings by running the **show class-of-service** *operational mode command*.

You configure CoS when you need to override the default packet forwarding behavior of a Juniper Networks device—especially in the three areas identified in [Table 2 on page 11](#).

Table 2: Reasons to Configure Class of Service (CoS)

Default Behavior to Override with CoS	CoS Configuration Area
Packet classification—By default, the Juniper Networks device does not use behavior aggregate (BA) classifiers to classify packets. Packet classification applies to incoming traffic.	Classifiers
Scheduling queues—By default, the Juniper Networks device has only two queues enabled. Scheduling queues apply to outgoing traffic.	Schedulers
Packet headers—By default, the Juniper Networks device does not rewrite CoS bits in packet headers. Rewriting packet headers applies to outgoing traffic.	Rewrite rules

RELATED DOCUMENTATION

Understanding Class of Service 2
CoS Components Packet Flow 8
CoS Device Configuration Overview 10

2

PART

Configuring Class of Service Components

[Assigning Service Levels with Classifiers | 13](#)

[Controlling Network Access with Traffic Policing | 30](#)

[Controlling Output Queues with Forwarding Classes | 68](#)

[Altering Outgoing Packets Headers with Rewrite Rules | 93](#)

[Defining Output Queue Properties with Schedulers | 102](#)

[Removing Delays with Strict-Priority Queues | 164](#)

[Controlling Congestion with Drop Profiles | 190](#)

[Controlling Congestion with Adaptive Shapers | 207](#)

[Limiting Traffic Using Virtual Channels | 212](#)

[Enabling Queuing for Tunnel Interfaces | 222](#)

[Naming Components with Code-Point Aliases | 240](#)

Assigning Service Levels with Classifiers

IN THIS CHAPTER

- [Classification Overview | 13](#)
- [Understanding Packet Loss Priorities | 17](#)
- [Default Behavior Aggregate Classification | 18](#)
- [Sample Behavior Aggregate Classification | 20](#)
- [Example: Configuring Behavior Aggregate Classifiers | 22](#)

Classification Overview

IN THIS SECTION

- [Behavior Aggregate Classifiers | 14](#)
- [Multifield Classifiers | 15](#)
- [Default IP Precedence Classifier | 16](#)

Packet classification refers to the examination of an incoming packet, which associates the packet with a particular class-of-service (CoS) servicing level. Junos operating system (OS) supports these classifiers:

- Behavior aggregate (BA) classifiers
- Multifield (MF) classifiers
- Default IP precedence classifiers

NOTE: The total number of classifiers supported on a Services Processing Unit (SPU) is 79. Three classifiers are installed on the SPU as default classifiers in the Layer 3 mode, independent of any

CoS configuration, which leaves 76 classifiers that can be configured using the CoS CLI commands. The default classifiers number can vary in future releases or in different modes. Verify the number of default classifiers installed on the SPU to determine how many classifiers can be configured using the CoS CLI commands.

When both BA and MF classifications are performed on a packet, the MF classification has higher precedence.

In Junos OS, classifiers associate incoming packets with a forwarding class (FC) and packet loss priority (PLP), and, based on the associated FC, assign packets to output queues. A packet's FC and PLP specify the behavior of a hop, within the system, to process the packet. The per-hop behavior (PHB) comprises packet forwarding, policing, scheduling, shaping, and marking. For example, a hop can put a packet in one of the priority queues according to its FC and then manage the queues by checking the packet's PLP. Junos OS supports up to eight FCs and four PLPs.

This topic includes the following sections:

Behavior Aggregate Classifiers

A BA classifier operates on a packet as it enters the device. Using BA classifiers, the device aggregates different types of traffic into a single FC so that all the types of traffic will receive the same forwarding treatment. The CoS value in the packet header is the single field that determines the CoS settings applied to the packet. BA classifiers allow you to set a packet's FC and PLP based on the Differentiated Services (DiffServ) code point (DSCP) value, DSCP IPv4 value, DSCP IPv6 value, IP precedence value, MPLS EXP bits, or IEEE 802.1p value. The default classifier is based on the IP precedence value. For more information, see ["Default IP Precedence Classifier" on page 16](#).

Junos OS performs BA classification for a packet by examining its Layer 2, Layer 3, and related CoS parameters, as shown in [Table 3 on page 14](#).

Table 3: BA Classification

Layer	CoS Parameter
Layer 2	IEEE 802.1p value: User Priority
Layer 3	IPv4 precedence IPv4 Differentiated Services code point (DSCP) value IPv6 DSCP value

NOTE: A BA classifier evaluates Layer 2 and Layer 3 parameters independently. The results from Layer 2 parameters override the results from the Layer 3 parameters.

Multifield Classifiers

An MF classifier is a second means of classifying traffic flows. Unlike the BA classifier, an MF classifier can examine multiple fields in the packet—for example, the source and destination address of the packet, or the source and destination port numbers of the packet. With MF classifiers, you set the FC and PLP based on *firewall filter* rules.

NOTE: For a specified interface, you can configure both an MF classifier and a BA classifier without conflicts. Because the classifiers are always applied in sequential order (the BA classifier followed by the MF classifier) any BA classification result is overridden by an MF classifier if they conflict.

Junos OS performs MF traffic classification by directly scrutinizing multiple fields of a packet to classify a packet. This avoids having to rely on the output of the previous BA traffic classification. Junos OS can simultaneously check a packet’s data for Layers 2, 3, 4, and 7, as shown in [Table 4 on page 15](#).

Table 4: MF Classification

Layer	CoS Parameter
Layer 2	IEEE 802.1Q: VLAN ID
	IEEE 802.1p: User priority
Layer 3	IP precedence value
	DSCP or DSCP IPv6 value
	Source IP address
	Destination IP address
	Protocol
	ICMP: Code and type

Table 4: MF Classification (Continued)

Layer	CoS Parameter
Layer 4	TCP/UDP: Source port TCP/UDP: Destination port TCP: Flags AH/ESP: SPI
Layer 7	Not supported.

Using Junos OS, you configure an MF classifier with a firewall filter and its associated match conditions. This enables you to use any filter match criterion to locate packets that require classification.

Default IP Precedence Classifier

With Junos OS, all *logical interface* are automatically assigned a default IP precedence classifier when the logical interface is configured. This default traffic classifier maps IP precedence values to an FC and a PLP as shown in [Table 5 on page 16](#). These mapping results are in effect for an ingress packet until the packet is further processed by another classification method.

Table 5: Default IP Precedence Classifier

IP Precedence CoS Values	Forwarding Class	Packet Loss Priority
000	best-effort	low
001	best-effort	high
010	best-effort	low
011	best-effort	high
100	best-effort	low
101	best-effort	high

Table 5: Default IP Precedence Classifier (Continued)

IP Precedence CoS Values	Forwarding Class	Packet Loss Priority
110	network-control	low
111	network-control	high

RELATED DOCUMENTATION
[Default Behavior Aggregate Classification | 18](#)
[Sample Behavior Aggregate Classification | 20](#)
[Example: Configuring Behavior Aggregate Classifiers | 22](#)
Understanding Packet Loss Priorities

Packet loss priorities (PLPs) allow you to set the priority for dropping packets. You can use the PLP setting to identify packets that have experienced congestion. Typically, you mark packets exceeding some service level with a high loss priority—that is, a greater likelihood of being dropped. You set PLP by configuring a classifier or a policer. The PLP is used later in the work flow to select one of the drop profiles used by random early detection (RED).

You can configure the PLP bit as part of a congestion control strategy. The PLP bit can be configured on an interface or in a filter. A packet for which the PLP bit is set has an increased probability of being dropped during congestion.

RELATED DOCUMENTATION
[Classification Overview | 13](#)
[Default Behavior Aggregate Classification | 18](#)
[Sample Behavior Aggregate Classification | 20](#)
[Example: Configuring Behavior Aggregate Classifiers | 22](#)

Default Behavior Aggregate Classification

Table 6 on page 18 shows the forwarding class (FC) and packet loss priority (PLP) that are assigned by default to each well-known Differentiated Services (DiffServ) code point (DSCP). Although several DSCPs map to the expedited-forwarding (ef) and assured-forwarding (af) classes, by default no resources are assigned to these forwarding classes. All af classes other than af1x are mapped to best-effort, because RFC 2597, *Assured Forwarding PHB Group*, prohibits a node from aggregating classes. Assignment to the best-effort FC implies that the node does not support that class. You can modify the default settings through configuration.

Table 6: Default Behavior Aggregate Classification

DSCP and DSCP IPv6 Alias	Forwarding Class	Packet Loss Priority
ef	expedited-forwarding	low
af11	assured-forwarding	low
af12	assured-forwarding	high
af13	assured-forwarding	high
af21	best-effort	low
af22	best-effort	low
af23	best-effort	low
af31	best-effort	low
af32	best-effort	low
af33	best-effort	low
af41	best-effort	low

Table 6: Default Behavior Aggregate Classification *(Continued)*

DSCP and DSCP IPv6 Alias	Forwarding Class	Packet Loss Priority
af42	best-effort	low
af43	best-effort	low
be	best-effort	low
cs1	best-effort	low
cs2	best-effort	low
cs3	best-effort	low
cs4	best-effort	low
cs5	best-effort	low
nc1/cs6	network-control	low
nc2/cs7	network-control	low
other	best-effort	low

RELATED DOCUMENTATION
[Classification Overview | 13](#)
[Sample Behavior Aggregate Classification | 20](#)
[Example: Configuring Behavior Aggregate Classifiers | 22](#)
[Understanding Packet Loss Priorities | 17](#)

Sample Behavior Aggregate Classification

Table 7 on page 20 shows the device forwarding classes (FCs) associated with each well-known Differentiated Services (DiffServ) code point (DSCP) and the resources assigned to the output queues for a sample DiffServ CoS implementation. This example assigns expedited forwarding to queue 1 and a subset of the assured FCs (afx) to queue 2, and distributes resources among all four forwarding classes. Other DiffServ-based implementations are possible.

Table 7: Sample Behavior Aggregate Classification Forwarding Classes and Queues

DSCP and DSCP IPv6 Alias	DSCP and DSCP IPv6 Bits	Forwarding Class	Packet Loss Priority	Queue
ef	101110	expedited-forwarding	low	1
af11	001010	assured-forwarding	low	2
af12	001100	assured-forwarding	high	2
af13	001110	assured-forwarding	high	2
af21	010010	best-effort	low	0
af22	010100	best-effort	low	0
af23	010110	best-effort	low	0
af31	011010	best-effort	low	0
af32	011100	best-effort	low	0
af33	011110	best-effort	low	0
af41	100010	best-effort	low	0
af42	100100	best-effort	low	0

Table 7: Sample Behavior Aggregate Classification Forwarding Classes and Queues *(Continued)*

DSCP and DSCP IPv6 Alias	DSCP and DSCP IPv6 Bits	Forwarding Class	Packet Loss Priority	Queue
af43	100110	best-effort	low	0
be	000000	best-effort	low	0
cs1	0010000	best-effort	low	0
cs2	010000	best-effort	low	0
cs3	011000	best-effort	low	0
cs4	100000	best-effort	low	0
cs5	101000	best-effort	low	0
nc1/cs6	110000=	network-control	low	3
nc2/cs7	111000=	network-control	low	3
other	–	best-effort	low	0

RELATED DOCUMENTATION
[Classification Overview | 13](#)
[Default Behavior Aggregate Classification | 18](#)
[Example: Configuring Behavior Aggregate Classifiers | 22](#)
[Understanding Packet Loss Priorities | 17](#)

Example: Configuring Behavior Aggregate Classifiers

IN THIS SECTION

- Requirements | 22
- Overview | 22
- Configuration | 23
- Verification | 26

This example shows how to configure behavior aggregate classifiers for a device to determine forwarding treatment of packets.

Requirements

Before you begin, determine the forwarding class and PLP that are assigned by default to each well-known DSCP that you want to configure for the behavior aggregate classifier. See ["Default Behavior Aggregate Classification" on page 18](#).

Overview

You configure behavior aggregate classifiers to classify packets that contain valid DSCPs to appropriate queues. Once configured, you must apply the behavior aggregate classifier to the correct interfaces. You can override the default IP precedence classifier by defining a classifier and applying it to a logical interface. To define new classifiers for all code point types, include the `classifiers` statement at the [edit class-of-service] hierarchy level.

In this example, you set the DSCP behavior aggregate classifier to `ba-classifier` as the default DSCP map. You set a best-effort forwarding class as `be-class`, an expedited forwarding class as `ef-class`, an assured forwarding class as `af-class`, and a network control forwarding class as `nc-class`. Finally, you apply the behavior aggregate classifier to an interface called `ge-0/0/0`.

[Table 8 on page 23](#) shows how the behavior aggregate classifier assigns loss priorities, to incoming packets in the four forwarding classes.

Table 8: Sample ba-classifier Loss Priority Assignments

ba-classifier Forwarding Class	For CoS Traffic Type	ba-classifier Assignments
be-class	Best-effort traffic	High-priority code point: 000001
ef-class	Expedited forwarding traffic	High-priority code point: 101111
af-class	Assured forwarding traffic	High-priority code point: 001100
nc-class	Network control traffic	High-priority code point: 110001

Configuration

IN THIS SECTION

Procedure | 23

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set class-of-service classifiers dscp ba-classifier import default
set class-of-service classifiers dscp ba-classifier forwarding-class be-class loss-priority high
code-points 000001
set class-of-service classifiers dscp ba-classifier forwarding-class ef-class loss-priority high
code-points 101111
set class-of-service classifiers dscp ba-classifier forwarding-class af-class loss-priority high
code-points 001100
set class-of-service classifiers dscp ba-classifier forwarding-class nc-class loss-priority high
```

```
code-points 110001
set class-of-service interfaces ge-0/0/0 unit 0 classifiers dscp ba-classifier
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the CLI User Guide.

To configure behavior aggregate classifiers for a device:

1. Configure the class of service.

```
[edit]
user@host# edit class-of-service
```

2. Configure behavior aggregate classifiers for DiffServ CoS.

```
[edit class-of-service]
user@host# edit classifiers dscp ba-classifier
user@host# set import default
```

3. Configure a best-effort forwarding class classifier.

```
[edit class-of-service classifiers dscp ba-classifier]
user@host# set forwarding-class be-class loss-priority high code-points 000001
```

4. Configure an expedited forwarding class classifier.

```
[edit class-of-service classifiers dscp ba-classifier]
user@host# set forwarding-class ef-class loss-priority high code-points 101111
```

5. Configure an assured forwarding class classifier.

```
[edit class-of-service classifiers dscp ba-classifier]
user@host# set forwarding-class af-class loss-priority high code-points 001100
```

6. Configure a network control forwarding class classifier.

```
[edit class-of-service classifiers dscp ba-classifier]
user@host# set forwarding-class nc-class loss-priority high code-points 110001
```

7. Apply the behavior aggregate classifier to an interface.

```
[edit]
user@host# set class-of-service interfaces ge-0/0/0 unit 0 classifiers dscp ba-classifier
```

NOTE: You can use interface wildcards for interface-name and logical-unit-number.

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
classifiers {
  dscp ba-classifier {
    import default;
    forwarding-class be-class {
      loss-priority high code-points 000001;
    }
    forwarding-class ef-class {
      loss-priority high code-points 101111;
    }
    forwarding-class af-class {
      loss-priority high code-points 001100;
    }
    forwarding-class nc-class {
      loss-priority high code-points 110001;
    }
  }
  interfaces {
    ge-0/0/0 {
```

```

        unit 0 {
            classifiers {
                dscp ba-classifier;
            }
        }
    }
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verify the DSCP Classifier | 26](#)
- [Verifying That the Classifier Is Applied to the Interfaces | 28](#)

Confirm that the configuration is working properly.

Verify the DSCP Classifier

Purpose

Make sure that the DSCP classifier is configured as expected.

Action

Run the `show class-of-service classifiers name ba-classifier` command.

```
user@host> show class-of-service classifiers name ba-classifier
```

```
Classifier: ba-classifier, Code point type: dscp, Index: 10755
Code point      Forwarding class      Loss priority
000000         best-effort           low
000001         be-class             high
000010         best-effort           low
000011         best-effort           low
000100         best-effort           low
```


000101	best-effort	low
000110	best-effort	low
000111	best-effort	low
001000	best-effort	low
001001	best-effort	low
001010	assured-forwarding	low
001011	best-effort	low
001100	af-class	high
001101	best-effort	low
001110	assured-forwarding	high
001111	best-effort	low
010000	best-effort	low
010001	best-effort	low
010010	best-effort	low
010011	best-effort	low
010100	best-effort	low
010101	best-effort	low
010110	best-effort	low
010111	best-effort	low
011000	best-effort	low
011001	best-effort	low
011010	best-effort	low
011011	best-effort	low
011100	best-effort	low
011101	best-effort	low
011110	best-effort	low
011111	best-effort	low
100000	best-effort	low
100001	best-effort	low
100010	best-effort	low
100011	best-effort	low
100100	best-effort	low
100101	best-effort	low
100110	best-effort	low
100111	best-effort	low
101000	best-effort	low
101001	best-effort	low
101010	best-effort	low
101011	best-effort	low
101100	best-effort	low
101101	best-effort	low
101110	expedited-forwarding	low
101111	ef-class	high

110000	network-control	low
110001	nc-class	high
110010	best-effort	low
110011	best-effort	low
110100	best-effort	low
110101	best-effort	low
110110	best-effort	low
110111	best-effort	low
111000	network-control	low
111001	best-effort	low
111010	best-effort	low
111011	best-effort	low
111100	best-effort	low
111101	best-effort	low
111110	best-effort	low
111111	best-effort	low

Meaning

Notice that the default classifier is incorporated into the customer classifier. If you were to remove the `import default` statement from the custom classifier, the custom classifier would look like this:

```
user@host> show class-of-service classifier name ba-classifier
Classifier: ba-classifier, Code point type: dscp, Index: 10755
Code point      Forwarding class      Loss priority
000001         be-class              high
001100         af-class              high
101111         ef-class              high
110001         nc-class              high
```

Verifying That the Classifier Is Applied to the Interfaces

Purpose

Make sure that the classifier is applied to the correct interfaces.

Action

Run the show class-of-service interface command.

```
user@host> show class-of-service interface ge-0/0/0

Physical interface: ge-0/0/0, Index: 144
Queues supported: 8, Queues in use: 4
  Scheduler map: <default>, Index: 2
  Congestion-notification: Disabled

Logical interface: ge-0/0/0.0, Index: 333
Object      Name      Type      Index
Classifier  ba-classifier  dscp      10755
```

Meaning

The interface is configured as expected.

RELATED DOCUMENTATION

Interfaces User Guide for Security Devices
Classification Overview 13
Sample Behavior Aggregate Classification 20
Understanding Packet Loss Priorities 17

Controlling Network Access with Traffic Policing

IN THIS CHAPTER

- Simple Filters and Policers Overview | 30
- Two-Rate Three-Color Policer Overview | 31
- Example: Configuring a Two-Rate Three-Color Policer | 32
- Logical Interface (Aggregate) Policer Overview | 40
- Two-Color Policer Configuration Overview | 41
- Example: Configuring a Two-Color Logical Interface (Aggregate) Policer | 45
- Guidelines for Configuring Simple Filters | 54
- Example: Configuring and Applying a Firewall Filter for a Multifield Classifier | 58

Simple Filters and Policers Overview

You can configure simple filters and policers to handle oversubscribed traffic in SRX1400, SRX3400, SRX3600, SRX5600 and SRX5800 devices. In Junos OS, policers can be configured as part of the *firewall filter* hierarchy. (Platform support depends on the Junos OS release in your installation.)

NOTE: For SRX5600 and SRX5800 devices, the simple filter or policing actions can be applied only to logical interfaces residing in an SRX5000 line Flex IOC (FIOC) because only an SRX5000 line FIOC supports the simple filter and policing features on the SRX5600 and SRX5800 devices.

The simple filter functionality consists of the following:

- Classifying packets according to configured policies
- Taking appropriate actions based on the results of classification

In Junos OS, ingress traffic policers can limit the rate of incoming traffic. Two main reasons to use traffic policing are:

- To enforce traffic rates to conform to the service-level agreement (SLA)

- To protect next hops, such as protecting the central point and the SPU from being overwhelmed by excess traffic like DOS attacks

Using the results of packet classification and traffic metering, a policer can take one of the following actions for a packet: forward a conforming (green) packet or drop a nonconforming (yellow) packet. Policers always discard a nonconforming red packet. Traffic metering supports the algorithm of the two-rate tricolor marker (TCM). (See RFC 2698, A *Two Rate Three Color Marker*.)

RELATED DOCUMENTATION

[Guidelines for Configuring Simple Filters | 54](#)

[Example: Configuring a Two-Rate Three-Color Policer | 32](#)

[Example: Configuring and Applying a Firewall Filter for a Multifield Classifier | 58](#)

Two-Rate Three-Color Policer Overview

A two-rate three-color policer defines two bandwidth limits (one for guaranteed traffic and one for peak traffic) and two burst sizes (one for each of the bandwidth limits). A two-rate three-color policer is most useful when a service is structured according to arrival rates and not necessarily packet length.

Two-rate three-color policing meters a traffic stream based on the following configured traffic criteria:

- Committed information rate (CIR)—Bandwidth limit for guaranteed traffic.
- Committed burst size (CBS)—Maximum packet size permitted for bursts of data that exceed the CIR.
- Peak information rate (PIR)—Bandwidth limit for peak traffic.
- Peak burst size (PBS)—Maximum packet size permitted for bursts of data that exceed the PIR.

Two-rate tricolor marking (two-rate TCM) classifies traffic as belonging to one of three color categories and performs congestion-control actions on the packets based on the color marking:

- Green—Traffic that conforms to the bandwidth limit and burst size for guaranteed traffic (CIR and CBS). For a green traffic flow, two-rate TCM marks the packets with an implicit loss priority of `low` and transmits the packets.
- Yellow—Traffic that exceeds the bandwidth limit or burst size for guaranteed traffic (CIR or CBS) but not the bandwidth limit and burst size for peak traffic (PIR and PBS). For a yellow traffic flow, two-rate TCM marks packets with an implicit loss priority of `medium-high` and transmits the packets.

- Red—Traffic that exceeds the bandwidth limit and burst size for peak traffic (PIR and PBS). For a red traffic flow, two-rate TCM marks packets with an implicit loss priority of high and, optionally, discards the packets.

If congestion occurs downstream, the packets with higher loss priority are more likely to be discarded.

NOTE: For both single-rate and two-rate three-color policers, the only *configurable* action is to discard packets in a red traffic flow.

For a tricolor marking policer referenced by a *firewall filter* term, the discard policing action is supported on the following routing platforms:

- EX Series switches
- M7i and M10i routers with the Enhanced CFEB (CFEB-E)
- M120 and M320 routers with Enhanced-III FPCs
- MX Series routers with Trio MPCs

To apply a tricolor marking policer on these routing platforms, it is not necessary to include the logical-interface-policer statement.

RELATED DOCUMENTATION

| *Example: Configuring a Two-Rate Three-Color Policer*

Example: Configuring a Two-Rate Three-Color Policer

IN THIS SECTION

- Requirements | 33
- Overview | 33
- Configuration | 34
- Verification | 39

This example shows how to configure a two-rate three-color policer.

Requirements

No special configuration beyond device initialization is required before configuring this example.

Overview

IN THIS SECTION

- [Topology | 33](#)

A two-rate three-color policer meters a traffic flow against a bandwidth limit and burst-size limit for guaranteed traffic, plus a bandwidth limit and burst-size limit for peak traffic. Traffic that conforms to the limits for guaranteed traffic is categorized as green, and nonconforming traffic falls into one of two categories:

- Nonconforming traffic that does not exceed peak traffic limits is categorized as yellow.
- Nonconforming traffic that exceeds peak traffic limits is categorized as red.

Each category is associated with an action. For green traffic, packets are implicitly set with a loss-priority value of `low` and then transmitted. For yellow traffic, packets are implicitly set with a loss-priority value of `medium-high` and then transmitted. For red traffic, packets are implicitly set with a loss-priority value of `high` and then transmitted. If the policer configuration includes the optional `action` statement (`action loss-priority high then discard`), then packets in a red flow are discarded instead.

You can apply a three-color policer to Layer 3 traffic as a firewall filter policer only. You reference the policer from a stateless firewall filter term, and then you apply the filter to the input or output of a logical interface at the protocol level.

Topology

In this example, you apply a color-aware, two-rate three-color policer to the input IPv4 traffic at logical interface `fe-0/1/1.0`. The IPv4 firewall filter term that references the policer does not apply any packet-filtering. The filter is used only to apply the three-color policer to the interface.

You configure the policer to rate-limit traffic to a bandwidth limit of 40 Mbps and a burst-size limit of 100 KB for green traffic, and you configure the policer to also allow a peak bandwidth limit of 60 Mbps and a peak burst-size limit of 200 KB for yellow traffic. Only nonconforming traffic that exceeds the peak traffic limits is categorized as red. In this example, you configure the three-color policer action `loss-priority high then discard`, which overrides the implicit marking of red traffic to a high loss priority.

Configuration

IN THIS SECTION

- [CLI Quick Configuration | 34](#)
- [Configuring a Two-Rate Three-Color Policer | 34](#)
- [Configuring an IPv4 Stateless Firewall Filter That References the Policer | 36](#)
- [Applying the Filter to a Logical Interface at the Protocol Family Level | 37](#)

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure this example, perform the following tasks:

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and then paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set firewall three-color-policer trTCM1-ca two-rate color-aware
set firewall three-color-policer trTCM1-ca two-rate committed-information-rate 40m
set firewall three-color-policer trTCM1-ca two-rate committed-burst-size 100k
set firewall three-color-policer trTCM1-ca two-rate peak-information-rate 60m
set firewall three-color-policer trTCM1-ca two-rate peak-burst-size 200k
set firewall three-color-policer trTCM1-ca action loss-priority high then discard
set firewall family inet filter filter-trtcm1ca-all term 1 then three-color-policer two-rate
trTCM1-ca
set interfaces ge-2/0/5 unit 0 family inet address 10.10.10.1/30
set interfaces ge-2/0/5 unit 0 family inet filter input filter-trtcm1ca-all
set class-of-service interfaces ge-2/0/5 forwarding-class af
```

Configuring a Two-Rate Three-Color Policer

Step-by-Step Procedure

To configure a two-rate three-color policer:

1. Enable configuration of a three-color policer.

```
[edit]
user@host# set firewall three-color-policer trTCM1-ca
```

2. Configure the color mode of the two-rate three-color policer.

```
[edit firewall three-color-policer trTCM1-ca]
user@host# set two-rate color-aware
```

3. Configure the two-rate guaranteed traffic limits.

```
[edit firewall three-color-policer trTCM1-ca]
user@host# set two-rate committed-information-rate 40m
user@host# set two-rate committed-burst-size 100k
```

Traffic that does not exceed both of these limits is categorized as green. Packets in a green flow are implicitly set to `low` loss priority and then transmitted.

4. Configure the two-rate peak traffic limits.

```
[edit firewall three-color-policer trTCM1-ca]
user@host# set two-rate peak-information-rate 60m
user@host# set two-rate peak-burst-size 200k
```

Nonconforming traffic that does not exceed both of these limits is categorized as yellow. Packets in a yellow flow are implicitly set to `medium-high` loss priority and then transmitted. Nonconforming traffic that exceeds both of these limits is categorized as red. Packets in a red flow are implicitly set to `high` loss priority.

5. (Optional) Configure the policer action for red traffic.

```
[edit firewall three-color-policer trTCM1-ca]
user@host# set action loss-priority high then discard
```

For three-color policers, the only configurable action is to discard red packets. Red packets are packets that have been assigned high loss priority because they exceeded the peak information rate (PIR) and the peak burst size (PBS).

Results

Confirm the configuration of the policer by entering the `show firewall` configuration mode command. If the command output does not display the intended configuration, repeat the instructions in this procedure to correct the configuration.

```
[edit]
user@host# show firewall
three-color-policer trTCM1-ca {
  action {
    loss-priority high then discard;
  }
  two-rate {
    color-aware;
    committed-information-rate 40m;
    committed-burst-size 100k;
    peak-information-rate 60m;
    peak-burst-size 200k;
  }
}
```

Configuring an IPv4 Stateless Firewall Filter That References the Policer

Step-by-Step Procedure

To configure an IPv4 stateless firewall filter that references the policer:

1. Enable configuration of an IPv4 standard stateless firewall filter.

```
[edit]
user@host# set firewall family inet filter filter-trtcm1ca-all
```

2. Specify the filter term that references the policer.

```
[edit firewall family inet filter filter-trtcm1ca-all]
user@host# set term 1 then three-color-policer two-rate trTCM1-ca
```

Note that the term does not specify any match conditions. The firewall filter passes all packets to the policer.

Results

Confirm the configuration of the firewall filter by entering the `show firewall` configuration mode command. If the command output does not display the intended configuration, repeat the instructions in this procedure to correct the configuration.

```
[edit]
user@host# show firewall
family inet {
    filter filter-trtcm1ca-all {
        term 1 {
            then {
                three-color-policer {
                    two-rate trTCM1-ca;
                }
            }
        }
    }
}
three-color-policer trTCM1-ca {
    action {
        loss-priority high then discard;
    }
    two-rate {
        color-aware;
        committed-information-rate 40m;
        committed-burst-size 100k;
        peak-information-rate 60m;
        peak-burst-size 200k;
    }
}
```

Applying the Filter to a Logical Interface at the Protocol Family Level

Step-by-Step Procedure

To apply the filter to the logical interface at the protocol family level:

1. Enable configuration of an IPv4 firewall filter.

```
[edit]
user@host# edit interfaces ge-2/0/5 unit 0 family inet
```

2. Apply the policer to the logical interface at the protocol family level.

```
[edit interfaces ge-2/0/5 unit 0 family inet]
user@host# set address 10.10.10.1/30
user@host# set filter input filter-trtcm1ca-all
```

3. (MX Series routers and EX Series switches only) (Optional) For input policers, you can configure a fixed classifier. A fixed classifier reclassifies all incoming packets, regardless of any preexisting classification.

NOTE: Platform support depends on the Junos OS release in your implementation.

```
[edit]
user@host# set class-of-service interfaces ge-2/0/5 forwarding-class af
```

The classifier name can be a configured classifier or one of the default classifiers.

Results

Confirm the configuration of the interface by entering the `show interfaces configuration mode` command. If the command output does not display the intended configuration, repeat the instructions in this procedure to correct the configuration.

```
[edit]
user@host# show interfaces
ge-2/0/5 {
  unit 0 {
    family inet {
      address 10.10.10.1/30;
      filter {
        input filter-trtcm1ca-all;
      }
    }
  }
}
```

```

    }
  }
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Displaying the Firewall Filters Applied to the Logical Interface | 39](#)

Confirm that the configuration is working properly.

Displaying the Firewall Filters Applied to the Logical Interface

Purpose

Verify that the firewall filter is applied to IPv4 input traffic at the logical interface.

Action

Use the `show interfaces operational mode` command for the logical interface `ge-2/0/5.0`, and specify `detail` mode. The **Protocol inet** section of the command output displays IPv4 information for the logical interface. Within that section, the **Input Filters** field displays the name of IPv4 firewall filters associated with the logical interface.

```

user@host> show interfaces ge-2/0/5.0 detail
Logical interface ge-2/0/5.0 (Index 105) (SNMP ifIndex 556) (Generation 170)
  Flags: Device-Down SNMP-Traps 0x4004000 Encapsulation: ENET2
  Traffic statistics:
    Input  bytes :           0
    Output bytes :           0
    Input  packets:          0
    Output packets:          0
  Local statistics:
    Input  bytes :           0
    Output bytes :           0
    Input  packets:          0

```

```

Output packets:                0
Transit statistics:
Input  bytes  :                0                0 bps
Output bytes  :                0                0 bps
Input  packets:                0                0 pps
Output packets:                0                0 pps
Protocol inet, MTU: 1500, Generation: 242, Route table: 0
  Flags: Sendbroadcast-pkt-to-re
  Input Filters: filter-trtcm1ca-all
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.20.130/24, Local: 10.20.130.1, Broadcast: 10.20.130.255,
    Generation: 171
Protocol multiservice, MTU: Unlimited, Generation: 243, Route table: 0
  Policer: Input: __default_arp_policer__

```

RELATED DOCUMENTATION

Two-Rate Three-Color Policer Overview

Logical Interface (Aggregate) Policer Overview

A *logical interface policer*—also called an *aggregate policer*—is a two-color or three-color policer that defines traffic rate limiting. Starting in Junos OS Release 15.1X49-D40 and Junos OS Release 17.3R1, you can apply a policer to input or output traffic for multiple protocol families on the same logical interface without needing to create multiple instances of the policer.

To configure a single-rate two-color logical interface policer, include the `logical-interface-policer` statement at the `[edit firewall policer policer-name]` hierarchy level.

You apply a logical interface policer to Layer 3 traffic directly to the interface configuration at the protocol family level (to rate-limit traffic of a specific protocol family). You cannot reference a logical interface policer from a stateless firewall filter term and then apply the filter to a logical interface.

You can apply a logical interface policer to unicast traffic only. .

To display a logical interface policer on a particular interface, issue the `show interfaces policers` *operational mode command*.

Release History Table

Release	Description
15.1X49-D40	Starting in Junos OS Release 15.1X49-D40 and Junos OS Release 17.3R1, you can apply a policer to input or output traffic for multiple protocol families on the same logical interface without needing to create multiple instances of the policer.

RELATED DOCUMENTATION

Two-Color Policer Configuration Overview 41
Example: Configuring a Two-Color Logical Interface (Aggregate) Policer 45
logical-interface-policer 367

Two-Color Policer Configuration Overview

Starting in Junos OS Release 15.1X49-D40 and Junos OS Release 17.3R1, you can configure and apply single-rate two-color policers to Layer 3 traffic. [Table 9 on page 41](#) describes the hierarchy levels at which you can configure and apply them.

Table 9: Two-Color Policer Configuration and Application Overview

Policer Configuration	Layer 3 Application	Key Points
<p>Single-Rate Two-Color Policer</p> <p><i>Defines traffic rate limiting that you can apply to Layer 3 protocol-specific traffic at a logical interface. Can be applied as an interface policer or as a firewall filter policer.</i></p>		

Table 9: Two-Color Policer Configuration and Application Overview (*Continued*)

Policer Configuration	Layer 3 Application	Key Points
<p>Basic policer configuration:</p> <pre>[edit firewall] policer <i>policer-name</i> { if-exceeding { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; } then { discard; forwarding-class <i>class-name</i>; loss-priority <i>supported-value</i>; } }</pre>	<p>Method A—Apply as an interface policer at the protocol family level:</p> <pre>[edit interfaces] <i>interface-name</i> { unit <i>unit-number</i> { family <i>family-name</i> { policer { input <i>policer-name</i>; output <i>policer-name</i>; } } } }</pre> <p>Method B—Apply as a firewall filter policer at the protocol family level:</p> <pre>[edit firewall] family <i>family-name</i> { filter <i>filter-name</i> { interface-specific; # (*) from { ... <i>match-conditions</i> ... } then { policer <i>policer-name</i>; } } }</pre> <pre>[edit interfaces] <i>interface-name</i> { unit <i>unit-number</i> { family <i>family-name</i> { filter { input <i>filter-name</i>; output <i>filter-name</i>; } ... <i>protocol-configuration</i> ... } } }</pre>	<p>Policer configuration:</p> <ul style="list-style-type: none"> Use bandwidth-limit <i>bps</i> to specify an absolute value. <p>Firewall filter configuration (*)</p> <ul style="list-style-type: none"> If applying to multiple interfaces, include the interface-specific statement to create unique policers and counters for each interface. <p>Interface policer verification:</p> <ul style="list-style-type: none"> Use the show interfaces (detail extensive) operational mode command. Use the show policer operational mode command. <p>Firewall filter policer verification:</p> <ul style="list-style-type: none"> Use the show interfaces (detail extensive) operational mode command. Use the show firewall filter <i>filter-name</i> operational mode command.

Table 9: Two-Color Policer Configuration and Application Overview *(Continued)*

Policer Configuration	Layer 3 Application	Key Points
	<div> }</div> <div>}</div>	

Logical Interface (Aggregate) Policer

Defines traffic rate limiting that you can apply to multiple protocol families on the same logical interface without creating multiple instances of the policer. Can be applied directly to a logical interface configuration only.

Table 9: Two-Color Policer Configuration and Application Overview (*Continued*)

Policer Configuration	Layer 3 Application	Key Points
<p>Logical interface policer configuration:</p> <pre>[edit firewall] policer <i>policer-name</i> { logical-interface-policer; if-exceeding { bandwidth-limit <i>bps</i>; burst-size-limit <i>bytes</i>; } then { discard; forwarding-class <i>class-name</i>; loss-priority <i>supported-value</i>; } }</pre>	<p>Method A—Apply as an interface policer only:</p> <pre>[edit interfaces] interface-name { unit <i>unit-number</i> { policer { # All protocols input <i>policer-name</i>; output <i>policer-name</i>; } family <i>family-name</i> { policer { # One protocol input <i>policer-name</i>; output <i>policer-name</i>; } } } }</pre> <p>Method B—Apply as a firewall filter policer at the protocol family level:</p> <pre>[edit firewall] family <i>family-name</i> { filter <i>filter-name</i> { interface-specific; term <i>term-name</i>{ from { ... <i>match-conditions</i> ... } } then { policer <i>policer-name</i>; } } }</pre>	<p>Policer configuration:</p> <ul style="list-style-type: none"> • Include the logical-interface-policer statement. <p>Two options for interface policer application:</p> <ul style="list-style-type: none"> • To rate-limit all traffic types, regardless of the protocol family, apply the logical interface policer at the logical unit level. • To rate-limit traffic of a specific protocol family, apply the logical interface policer at the protocol family level. <p>Interface policer verification:</p> <ul style="list-style-type: none"> • Use the show interfaces (detail extensive) operational mode command. • Use the show policer operational mode command.

Release History Table

Release	Description
15.1X49-D40	Starting in Junos OS Release 15.1X49-D40 and Junos OS Release 17.3R1, you can configure and apply single-rate two-color policers to Layer 3 traffic.

RELATED DOCUMENTATION

- [logical-interface-policer | 367](#)
- [Example: Configuring a Two-Color Logical Interface \(Aggregate\) Policer | 45](#)

Example: Configuring a Two-Color Logical Interface (Aggregate) Policer

IN THIS SECTION

- [Requirements | 45](#)
- [Overview | 46](#)
- [Configuration | 46](#)
- [Verification | 52](#)

Starting in Junos OS Release 15.1X49-D40 and Junos OS Release 17.3R1, you can configure a single-rate two-color policer as a logical interface policer and apply it to incoming IPv4 traffic on a logical interface. This example shows how to do to so.

Requirements

Before you begin, make sure that the logical interface to which you apply the two-color logical interface policer is hosted on a Gigabit Ethernet interface (ge-) or a 10-Gigabit Ethernet interface (xe-).

Overview

IN THIS SECTION

- [Topology | 46](#)

In this example, you configure the single-rate two-color policer `policer_IFL` as a logical interface policer and apply it to incoming IPv4 traffic at logical interface `ge-1/3/1.0`.

Topology

If the input IPv4 traffic on the physical interface `ge-1/3/1` exceeds the bandwidth limit equal to 90 percent of the media rate with a 300 KB burst-size limit, then the logical interface policer `policer_IFL` rate-limits the input IPv4 traffic on the logical interface `ge-1/3/1.0`. Configure the policer to mark nonconforming traffic by setting packet loss priority (PLP) levels to high and classifying packets as best-effort.

As the incoming IPv4 traffic rate on the physical interface slows and conforms to the configured limits, Junos OS stops marking the incoming IPv4 packets at the logical interface.

Configuration

IN THIS SECTION

- [CLI Quick Configuration | 47](#)
- [Configuring the Logical Interfaces | 47](#)
- [Configuring the Single-Rate Two-Color Policer as a Logical Interface Policer | 49](#)
- [Applying the Logical Interface Policer to Input IPv4 Traffic at a Logical Interface | 51](#)

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure this example, perform the following tasks:

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```
set interfaces ge-1/3/1 vlan-tagging
set interfaces ge-1/3/1 unit 0 vlan-id 100
set interfaces ge-1/3/1 unit 0 family inet address 10.10.10.1/30
set interfaces ge-1/3/1 unit 1 vlan-id 101
set interfaces ge-1/3/1 unit 1 family inet address 20.20.20.1/30 arp 20.20.20.2 mac
00:00:11:22:33:44
set firewall policer policer_IFL logical-interface-policer
set firewall policer policer_IFL if-exceeding bandwidth-percent 90
set firewall policer policer_IFL if-exceeding burst-size-limit 300k
set firewall policer policer_IFL then loss-priority high
set firewall policer policer_IFL then forwarding-class best-effort
set interfaces ge-1/3/1 unit 0 family inet policer input policer_IFL
```

Configuring the Logical Interfaces

Step-by-Step Procedure

To configure the logical interfaces:

1. Enable configuration of the interface.

```
[edit]
user@host# edit interfaces ge-1/3/1
```

2. Configure single tagging.

```
[edit interfaces ge-1/3/1]
user@host# set vlan-tagging
```

3. Configure logical interface ge-1/3/1.0.

```
[edit interfaces ge-1/3/1]
user@host# set unit 0 vlan-id 100
user@host# set unit 0 family inet address 10.10.10.1/30
```

4. Configure logical interface ge-1/3/1.0.

```
[edit interfaces ge-1/3/1]
user@host# set unit 1 vlan-id 101
user@host# set unit 1 family inet address 20.20.20.1/30 arp 20.20.20.2 mac 00:00:11:22:33:44
```

Results

Confirm the configuration of the logical interfaces by entering the `show interfaces configuration mode` command. If the command output does not display the intended configuration, repeat the instructions in this procedure to correct the configuration.

```
[edit]
user@host# show interfaces
ge-1/3/1 {
  vlan-tagging;
  unit 0 {
    vlan-id 100;
    family inet {
      address 10.10.10.1/30;
    }
  }
  unit 1 {
    vlan-id 101;
    family inet {
      address 20.20.20.1/30 {
        arp 20.20.20.2 mac 00:00:11:22:33:44;
      }
    }
  }
}
```

Configuring the Single-Rate Two-Color Policer as a Logical Interface Policer

Step-by-Step Procedure

To configure a single-rate two-color policer as a logical interface policer:

1. Enable configuration of a single-rate two-color policer.

```
[edit]
user@host# edit firewall policer policer_IFL
```

2. Specify that the policer is a logical interface (aggregate) policer.

```
[edit firewall policer policer_IFL]
user@host# set logical-interface-policer
```

A logical interface policer rate-limits traffic based on a percentage of the media rate of the physical interface underlying the logical interface to which the policer is applied. The policer is applied directly to the interface rather than referenced by a firewall filter.

3. Specify the policer traffic limits.

- Specify the bandwidth limit.
 - To specify the bandwidth limit as an absolute rate, from 8,000 bits per second through 50,000,000,000 bits per second, include the `bandwidth-limit bps` statement.
 - To specify the bandwidth limit as a percentage of the physical port speed on the interface, include the `bandwidth-percent percent` statement.

In this example, the CLI commands and output are based on a bandwidth limit specified as a percentage rather than as an absolute rate.

```
[edit firewall policer policer_IFL]
user@host# set if-exceeding bandwidth-percent 90
```

- Specify the burst-size limit, from 1,500 bytes through 100,000,000,000 bytes, which is the maximum packet size to be permitted for bursts of data that exceed the specified bandwidth limit.

```
[edit firewall policer policer_IFL]
user@host# set if-exceeding burst-size-limit 300k
```

4. Specify the policer actions to be taken on traffic that exceeds the configured rate limits.

- To discard the packet, include the discard statement.
- To set the loss-priority value of the packet, include the loss-priority (low | medium-low | medium-high | high) statement.
- To classify the packet to a forwarding class, include the forwarding-class (*forwarding-class* | assured-forwarding | best-effort | expedited-forwarding | network-control) statement.

In this example, the CLI commands and output are based on both setting the packet loss priority level and classifying the packet.

```
[edit firewall policer policer_IFL]
user@host# set then loss-priority high
user@host# set then forwarding-class best-effort
```

Results

Confirm the configuration of the policer by entering the `show firewall` configuration mode command. If the command output does not display the intended configuration, repeat the instructions in this procedure to correct the configuration.

```
[edit]
user@host# show firewall
policer policer_IFL {
    logical-interface-policer;
    if-exceeding {
        bandwidth-percent 90;
        burst-size-limit 300k;
    }
    then {
        loss-priority high;
        forwarding-class best-effort;
    }
}
```


Applying the Logical Interface Policer to Input IPv4 Traffic at a Logical Interface

Step-by-Step Procedure

To apply the two-color logical interface policer to input IPv4 traffic a logical interface:

1. Enable configuration of the logical interface.

```
[edit]
user@host# edit interfaces ge-1/3/1 unit 0
```

2. Apply the policer to all traffic types or to a specific traffic type on the logical interface.

- To apply the policer to all traffic types, regardless of the protocol family, include the policer (input | output) *policer-name* statement at the [edit interfaces *interface-name* unit *number*] hierarchy level.
- To apply the policer to traffic of a specific protocol family, include the policer (input | output) *policer-name* statement at the [edit interfaces *interface-name* unit *unit-number* family *family-name*] hierarchy level.

To apply the logical interface policer to incoming packets, use the policer input *policer-name* statement. To apply the logical interface policer to outgoing packets, use the policer output *policer-name* statement.

In this example, the CLI commands and output are based on rate-limiting the IPv4 input traffic at logical interface ge-1/3/1.0.

```
[edit interfaces ge-1/3/1 unit 0]
user@host# set family inet policer input policer_IFL
```

Results

Confirm the configuration of the interface by entering the show interfaces configuration mode command. If the command output does not display the intended configuration, repeat the instructions in this procedure to correct the configuration.

```
[edit]
user@host# show interfaces
ge-1/3/1 {
    vlan-tagging;
```

```

unit 0 {
    vlan-id 100;
    family inet {
        policer input policer_IFL;
        address 10.10.10.1/30;
    }
}
unit 1 {
    vlan-id 101;
    family inet {
        address 20.20.20.1/30 {
            arp 20.20.20.2 mac 00:00:11:22:33:44;
        }
    }
}
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Displaying Traffic Statistics and Policers for the Logical Interface | 52](#)
- [Displaying Statistics for the Policer | 53](#)

Confirm that the configuration is working properly.

Displaying Traffic Statistics and Policers for the Logical Interface

Purpose

Verify the traffic flow through the logical interface and that the policer is evaluating packets received on the logical interface.

Action

Use the `show interfaces operational mode` command for logical interface `ge-1/3/1.0`, and include the `detail` or `extensive` option. The command output section for **Traffic statistics** lists the number of bytes and

packets received and transmitted on the logical interface. The **Protocol inet** subsection contains a **Policer** field that would list the policer `policer_IFL` as an input or output logical interface policer as follows:

- **Input:** `policer_IFL-ge-1/3/1.0-log_int-i`
- **Output:** `policer_IFL-ge-1/3/1.0-log_int-o`

The `log_int-i` suffix denotes a logical interface policer applied to input traffic, while the `log_int-o` suffix denotes a logical interface policer applied to output traffic. In this example, the logical interface policer is applied to input traffic only.

Displaying Statistics for the Policer

Purpose

Verify the number of packets evaluated by the policer.

Action

Use the `show policer operational mode` command and, optionally, specify the name of the policer. The command output displays the number of packets evaluated by each configured policer (or the specified policer), in each direction. For the policer `policer_IFL`, the input and output policer names are displayed as follows:

- `policer_IFL-ge-1/3/1.0-log_int-i`
- `policer_IFL-ge-1/3/1.0-log_int-o`

The `log_int-i` suffix denotes a logical interface policer applied to input traffic, while the `log_int-o` suffix denotes a logical interface policer applied to output traffic. In this example, the logical interface policer is applied to input traffic only.

Release History Table

Release	Description
15.1X49-D40	Starting in Junos OS Release 15.1X49-D40 and Junos OS Release 17.3R1, you can configure a single-rate two-color policer as a logical interface policer and apply it to incoming IPv4 traffic on a logical interface.

RELATED DOCUMENTATION

Guidelines for Configuring Simple Filters

IN THIS SECTION

- [Statement Hierarchy for Configuring Simple Filters | 54](#)
- [Simple Filter Protocol Families | 55](#)
- [Simple Filter Names | 55](#)
- [Simple Filter Terms | 55](#)
- [Simple Filter Match Conditions | 56](#)
- [Simple Filter Terminating Actions | 58](#)
- [Simple Filter Nonterminating Actions | 58](#)

This topic covers the following information:

Statement Hierarchy for Configuring Simple Filters

To configure a simple filter, include the `simple-filter simple-filter-name` statement at the `[edit firewall family inet]` hierarchy level.

```
[edit]
firewall {
  family inet {
    simple-filter simple-filter-name {
      term term-name {
        from {
          match-conditions;
        }
        then {
          actions;
        }
      }
    }
  }
}
```

```
}
}
```

Individual statements supported under the `simple-filter` *simple-filter-name* statement are described separately in this topic and are illustrated in the example of configuring and applying a simple filter.

Simple Filter Protocol Families

You can configure simple filters to filter IPv4 traffic (family `inet`) only. No other protocol family is supported for simple filters.

NOTE: You can apply simple filters to the family `inet` only, and only in the input direction. Because of hardware limitations on the SRX1400, SRX3400, SRX3600, SRX5600 and SRX5800 devices, a maximum of 400 logical input interfaces and 2000 terms (in one Broadcom packet processor) can be applied with simple filters. (Platform support depends on the Junos OS release in your installation.)

Simple Filter Names

Under the `family inet` statement, you can include `simple-filter` *simple-filter-name* statements to create and name simple filters. The filter name can contain letters, numbers, and hyphens (-) and be up to 64 characters long. To include spaces in the name, enclose the entire name in quotation marks (" ").

Simple Filter Terms

Under the `simple-filter` *simple-filter-name* statement, you can include `term` *term-name* statements to create and name filter terms.

- You must configure at least one term in a *firewall filter*.
- You must specify a unique name for each term within a firewall filter. The term name can contain letters, numbers, and hyphens (-) and can be up to 64 characters long. To include spaces in the name, enclose the entire name in quotation marks (" ").
- The order in which you specify terms within a firewall filter configuration is important. Firewall filter terms are evaluated in the order in which they are configured. By default, new terms are always added to the end of the existing filter. You can use the `insert` configuration mode command to reorder the terms of a firewall filter.

Simple filters do *not* support the `next term` action.

NOTE: In one Broadcom packet processor, a maximum of 2000 terms can be applied with simple filters on the SRX1400, SRX3400, SRX3600, SRX5600, SRX5600 and SRX5800 devices. (Platform support depends on the Junos OS release in your installation.)

Simple Filter Match Conditions

Simple filter terms support only a subset of the IPv4 match conditions that are supported for standard stateless firewall filters.

Unlike standard stateless firewall filters, the following restrictions apply to simple filters:

- On MX Series routers with the Enhanced Queuing DPC, simple filters do *not* support the forwarding-class match condition.
- Simple filters support only one source-address and one destination-address prefix for each filter term. If you configure multiple prefixes, only the last one is used.
- Simple filters do *not* support multiple source addresses and destination addresses in a single term. If you configure multiple addresses, only the last one is used.
- Simple filters do *not* support negated match conditions, such as the protocol-except match condition or the exception keyword.
- Simple filters support a range of values for source-port and destination-port match conditions only. For example, you can configure source-port 400-500 or destination-port 600-700.
- Simple filters do *not* support noncontiguous mask values.

Table 10 on page 56 lists the simple filter match conditions.

Table 10: Simple Filter Match Conditions

Match Condition	Description
destination-address <i>destination-address</i>	Match IP destination address.

Table 10: Simple Filter Match Conditions *(Continued)*

Match Condition	Description
destination-port <i>number</i>	<p>TCP or UDP destination port field.</p> <p>If you configure this match condition, we recommend that you also configure the protocol match statement to determine which protocol is being used on the port.</p> <p>In place of the numeric value, you can specify one of the following text aliases (the port numbers are also listed): afs (1483), bgp (179), biff (512), bootpc (68), bootps (67), cmd (514), cvspserver (2401), dhcp (67), domain (53), eklogin (2105), ekshell (2106), exec (512), finger (79), ftp (21), ftp-data (20), http (80), https (443), ident (113), imap (143), kerberos-sec (88), klogin (543), kpasswd (761), krb-prop (754), krbupdate (760), kshell (544), ldap (389), login (513), mobileip-agent (434), mobilip-mn (435), msdp (639), netbios-dgm (138), netbios-ns (137), netbios-ssn (139), nfsd (2049), nntp (119), ntalk (518), ntp (123), pop3 (110), pptp (1723), printer (515), radacct (1813), radius (1812), rip (520), rkinit (2108), smtp (25), snmp (161), snmptrap (162), snpp (444), socks (1080), ssh (22), sunrpc (111), syslog (514), tacacs-ds (65), talk (517), telnet (23), tftp (69), timed (525), who (513), or xdmcp (177).</p>
forwarding-class <i>class</i>	<p>Match the forwarding class of the packet.</p> <p>Specify assured-forwarding, best-effort, expedited-forwarding, or network-control.</p>
protocol <i>number</i>	<p>IP protocol field. In place of the numeric value, you can specify one of the following text aliases (the field values are also listed): ah (51), dstopts (60), egp (8), esp (50), fragment (44), gre (47), hop-by-hop (0), icmp (1), icmp6 (58), icmpv6 (58), igmp (2), ipip (4), ipv6 (41), ospf (89), pim (103), rsvp (46), sctp (132), tcp (6), udp (17), or vrrp (112).</p>
source-address <i>ip-source-address</i>	<p>Match the IP source address.</p>
source-port <i>number</i>	<p>Match the UDP or TCP source port field.</p> <p>If you configure this match condition, we recommend that you also configure the protocol match statement to determine which protocol is being used on the port.</p> <p>In place of the numeric field, you can specify one of the text aliases listed for destination-port.</p>

Simple Filter Terminating Actions

Simple filters do *not* support explicitly configurable terminating actions, such as accept, reject, and discard. Terms configured in a simple filter always accept packets.

Simple filters do *not* support the next action.

Simple Filter Nonterminating Actions

Simple filters support only the following nonterminating actions:

- forwarding-class (*forwarding-class* | assured-forwarding | best-effort | expedited-forwarding | network-control)

NOTE: On the MX Series routers with the Enhanced Queuing DPC, the forwarding class is not supported as a from match condition.

- loss-priority (high | low | medium-high | medium-low)

Simple filters do not support actions that perform other functions on a packet (such as incrementing a counter, logging information about the packet header, sampling the packet data, or sending information to a remote host using the system log functionality).

RELATED DOCUMENTATION

| [Simple Filters and Policers Overview](#) | 30

Example: Configuring and Applying a Firewall Filter for a Multifield Classifier

IN THIS SECTION

- [Requirements](#) | 59
- [Overview](#) | 59
- [Configuration](#) | 61
- [Verification](#) | 65

This example shows how to configure a firewall filter to classify traffic using a multifield classifier. The classifier detects packets of interest to class of service (CoS) as they arrive on an interface. Multifield classifiers are used when a simple behavior aggregate (BA) classifier is insufficient to classify a packet, when peering routers do not have CoS bits marked, or the peering router's marking is untrusted.

Requirements

To verify this procedure, this example uses a traffic generator. The traffic generator can be hardware-based or it can be software running on a server or host machine.

The functionality in this procedure is widely supported on devices that run Junos OS. The example shown here was tested and verified on MX Series routers running Junos OS Release 10.4.

Overview

IN THIS SECTION

- [Topology | 60](#)


A classifier is a software operation that inspects a packet as it enters the router or switch. The packet header contents are examined, and this examination determines how the packet is treated when the network becomes too busy to handle all of the packets and you want your devices to drop packets intelligently, instead of dropping packets indiscriminately. One common way to detect packets of interest is by source port number. The TCP port numbers 80 and 12345 are used in this example, but many other matching criteria for packet detection are available to multifield classifiers, using firewall filter match conditions. The configuration in this example specifies that TCP packets with source port 80 are classified into the BE-data forwarding class and queue number 0. TCP packets with source port 12345 are classified into the Premium-data forwarding class and queue number 1.

Multifield classifiers are typically used at the network edge as packets enter an autonomous system (AS).

In this example, you configure the firewall filter `mf-classifier` and specify some custom forwarding classes on Device R1. In specifying the custom forwarding classes, you also associate each class with a queue.

The classifier operation is shown in [Figure 3 on page 60](#).

Figure 3: Multifield Classifier Based on TCP Source Ports

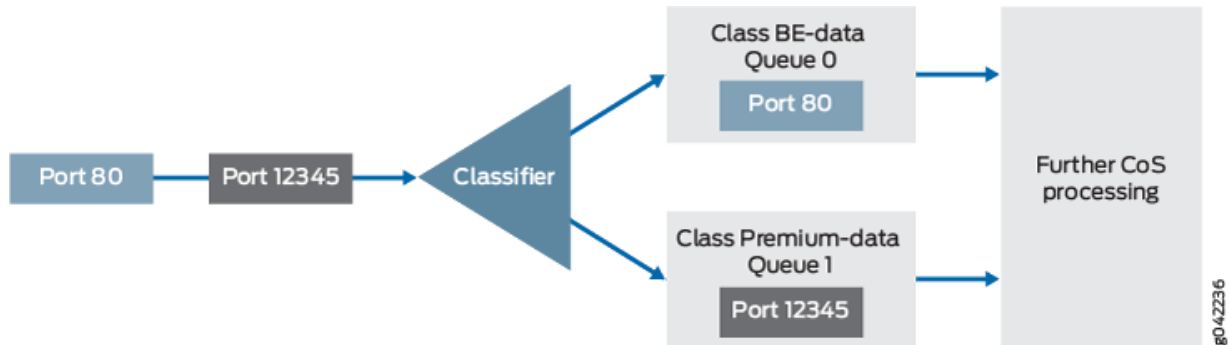


You apply the multifield classifier's firewall filter as an input filter on each customer-facing or host-facing interface that needs the filter. The incoming interface is ge-1/0/1 on Device R1. The classification and queue assignment is verified on the outgoing interface. The outgoing interface is Device R1's ge-1/0/9 interface.

Topology

[Figure 4 on page 60](#) shows the sample network.

Figure 4: Multifield Classifier Scenario

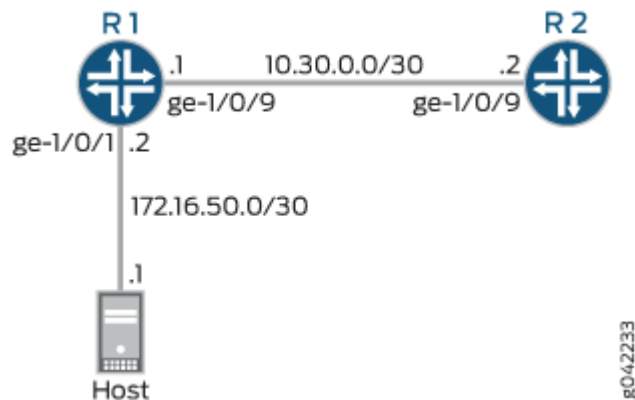

"[CLI Quick Configuration](#)" on [page 61](#) shows the configuration for all of the Juniper Networks devices in [Figure 4 on page 60](#).

The section "[No Link Title](#)" on [page 62](#) describes the steps on Device R1.

Classifiers are described in more detail in the following Juniper Networks Learning Byte video.



Video: [Class of Service Basics, Part 2: Classification Learning Byte](#)

Configuration

IN THIS SECTION

- [Procedure](#) | 61

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

Device R1

```
set interfaces ge-1/0/1 description to-host
set interfaces ge-1/0/1 unit 0 family inet filter input mf-classifier
set interfaces ge-1/0/1 unit 0 family inet address 172.16.50.2/30
set interfaces ge-1/0/9 description to-R2
set interfaces ge-1/0/9 unit 0 family inet address 10.30.0.1/30
set class-of-service forwarding-classes class BE-data queue-num 0
set class-of-service forwarding-classes class Premium-data queue-num 1
set class-of-service forwarding-classes class Voice queue-num 2
set class-of-service forwarding-classes class NC queue-num 3
set firewall family inet filter mf-classifier term BE-data from protocol tcp
set firewall family inet filter mf-classifier term BE-data from port 80
set firewall family inet filter mf-classifier term BE-data then forwarding-class BE-data
set firewall family inet filter mf-classifier term Premium-data from protocol tcp
set firewall family inet filter mf-classifier term Premium-data from port 12345
set firewall family inet filter mf-classifier term Premium-data then forwarding-class Premium-
data
set firewall family inet filter mf-classifier term accept-all-else then accept
```

Device R2

```
set interfaces ge-1/0/9 description to-R1
set interfaces ge-1/0/9 unit 0 family inet address 10.30.0.2/30
```

Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure Device R1:

1. Configure the device interfaces.

```
[edit interfaces]
user@R1# set ge-1/0/1 description to-host
user@R1# set ge-1/0/1 unit 0 family inet address 172.16.50.2/30
user@R1# set ge-1/0/9 description to-R2
user@R1# set ge-1/0/9 unit 0 family inet address 10.30.0.1/30
```

2. Configure the custom forwarding classes and associated queue numbers.

```
[edit class-of-service forwarding-classes]
user@R1# set BE-data queue-num 0
user@R1# set Premium-data queue-num 1
user@R1# set Voice queue-num 2
user@R1# set NC queue-num 3
```

3. Configure the firewall filter term that places TCP traffic with a source port of 80 (HTTP traffic) into the BE-data forwarding class, associated with queue 0.

```
[edit firewall family inet filter mf-classifier]
user@R1# set term BE-data from protocol tcp
user@R1# set term BE-data from port 80
user@R1# set term BE-data then forwarding-class BE-data
```

4. Configure the firewall filter term that places TCP traffic with a source port of 12345 into the Premium-data forwarding class, associated with queue 1.

```
[edit firewall family inet filter mf-classifier]
user@R1# set term Premium-data from protocol tcp
user@R1# set term Premium-data from port 12345
user@R1# set term Premium-data then forwarding-class Premium-data
```

5. At the end of your firewall filter, configure a default term that accepts all other traffic.

Otherwise, all traffic that arrives on the interface and is not explicitly accepted by the firewall filter is discarded.

```
[edit firewall family inet filter mf-classifier]
user@R1# set term accept-all-else then accept
```

6. Apply the firewall filter to the ge-1/0/1 interface as an input filter.

```
[edit interfaces]
user@R1# set ge-1/0/1 unit 0 family inet filter input mf-classifier
```

Results

From configuration mode, confirm your configuration by entering the `show interfaces`, `show class-of-service`, `show firewall` commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show interfaces
ge-1/0/1 {
  description to-host;
  unit 0 {
    family inet {
      filter {
        input mf-classifier;
      }
      address 172.16.50.2/30;
    }
  }
}
```

```

ge-1/0/9 {
  description to-R2;
  unit 0 {
    family inet {
      address 10.30.0.1/30;
    }
  }
}

```

```

user@R1# show class-of-service
forwarding-classes {
  class BE-data queue-num 0;
  class Premium-data queue-num 1;
  class Voice queue-num 2;
  class NC queue-num 3;
}

```

```

user@R1# show firewall
family inet {
  filter mf-classifier {
    term BE-data {
      from {
        protocol tcp;
        port 80;
      }
      then forwarding-class BE-data;
    }
    term Premium-data {
      from {
        protocol tcp;
        port 12345;
      }
      then forwarding-class Premium-data;
    }
    term accept-all-else {
      then accept;
    }
  }
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

Checking the CoS Settings | 65

Sending TCP Traffic into the Network and Monitoring the Queue Placement | 66

Confirm that the configuration is working properly.

Checking the CoS Settings

Purpose

Confirm that the forwarding classes are configured correctly.

Action

From Device R1, run the `show class-of-service forwarding-classes` command.

```
user@R1> show class-of-service forwarding-class
```

Forwarding class		ID	Queue	Restricted queue	Fabric priority
Policing priority	SPU priority				
BE-data		0	0	0	low
normal	low				
Premium-data		1	1	1	low
normal	low				
Voice		2	2	2	low
normal	low				
NC		3	3	3	low
normal	low				

Meaning

The output shows the configured custom classifier settings.

Sending TCP Traffic into the Network and Monitoring the Queue Placement

Purpose

Make sure that the traffic of interest is sent out the expected queue.

Action

1. Clear the interface statistics on Device R1's outgoing interface.

```
user@R1> clear interfaces statistics ge-1/0/9
```

2. Use a traffic generator to send 50 TCP port 80 packets to Device R2 or to some other downstream device.
3. On Device R1, check the queue counters.

Notice that you check the queue counters on the downstream output interface, not on the incoming interface.

```
user@R1> show interfaces extensive ge-1/0/9 | find "Queue counters"
```

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0	50	50	0
1	0	57	0
2	0	0	0
3	0	0	0

4. Use a traffic generator to send 50 TCP port 12345 packets to Device R2 or to some other downstream device.

```
[root@host]# hping 172.16.60.1 -c 50 -s 12345 -k
```

5. On Device R1, check the queue counters.

```
user@R1> show interfaces extensive ge-1/0/9 | find "Queue counters"
```

Queue counters:	Queued packets	Transmitted packets	Dropped packets
0	50	50	0

1	50	57	0
2	0	0	0
3	0	0	0

Meaning

The output shows that the packets are classified correctly. When port 80 is used in the TCP packets, queue 0 is incremented. When port 12345 is used, queue 1 is incremented.

RELATED DOCUMENTATION

| *Example: Configuring a Two-Rate Three-Color Policer*

Controlling Output Queues with Forwarding Classes

IN THIS CHAPTER

- [Forwarding Classes Overview | 68](#)
- [Example: Configuring Forwarding Classes | 71](#)
- [Example: Assigning Forwarding Classes to Output Queues | 77](#)
- [Example: Assigning a Forwarding Class to an Interface | 81](#)
- [Understanding the SPC High-Priority Queue | 83](#)
- [Example: Configuring the SPC High-Priority Queue | 83](#)
- [Understanding Queuing and Marking of Host Outbound Traffic | 87](#)
- [Default Routing Engine Protocol Queue Assignments | 89](#)

Forwarding Classes Overview

IN THIS SECTION

- [Forwarding Class Queue Assignments | 69](#)
- [Forwarding Policy Options | 71](#)

Forwarding classes (FCs) allow you to group packets for transmission and to assign packets to output queues. The forwarding class and the loss priority define the per-hop behavior (PHB in DiffServ) of a packet.

Juniper Networks devices support eight queues (0 through 7). For a classifier to assign an output queue (default queues 0 through 3) to each packet, it must associate the packet with one of the following forwarding classes:

- Expedited forwarding (EF)—Provides a low-loss, low-latency, low-*jitter*, assured-bandwidth, end-to-end service.

- Assured forwarding (AF)—Provides a group of values you can define and includes four subclasses—AF1, AF2, AF3, and AF4—each with three drop probabilities (low, medium, and high).
- Best effort (BE)—Provides no service profile. For the BE forwarding class, loss priority is typically not carried in a class-of-service (CoS) value, and random early detection (RED) drop profiles are more aggressive.
- Network Control (NC)—This class is typically high priority because it supports protocol control.

In addition to behavior aggregate (BA) and multifield (MF) classification, the forwarding class (FC) of a packet can be directly determined by the *logical interface* that receives the packet. The packet FC can be configured using CLI commands, and if configured, this FC overrides the FC from any BA classification that was previously configured on the logical interface.

The following CLI command can assign an FC directly to packets received at a logical interface:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
forwarding-class class-name;
```

This section contains the following topics:

Forwarding Class Queue Assignments

Juniper Networks devices have eight queues built into the hardware. By default, four queues are assigned to four FCs. [Table 11 on page 70](#) shows the four default FCs and queues that Juniper Networks classifiers assign to packets, based on the class-of-service (CoS) values in the arriving packet headers.

NOTE: Queues 4 through 7 have no default assignments to FCs and are not mapped. To use queues 4 through 7, you must create custom FC names and map them to the queues.

By default, all incoming packets, except the IP control packets, are assigned to the FC associated with queue 0. All IP control packets are assigned to the FC associated with queue 3.

Table 11: Default Forwarding Class Queue Assignments

Forwarding Queue	Forwarding Class	Forwarding Class Description
Queue 0	best-effort (BE)	<p>The Juniper Networks device does not apply any special CoS handling to packets with 000000 in the DiffServ field, a backward compatibility feature. These packets are usually dropped under congested network conditions.</p>
Queue 1	expedited-forwarding (EF)	<p>The Juniper Networks device delivers assured bandwidth, low loss, low delay, and low delay variation (jitter) end-to-end for packets in this service class.</p> <p>Devices accept excess traffic in this class, but in contrast to assured forwarding, out-of-profile expedited-forwarding packets can be forwarded out of sequence or dropped.</p>
Queue 2	assured-forwarding (AF)	<p>The Juniper Networks device offers a high level of assurance that the packets are delivered as long as the packet flow from the customer stays within a certain service profile that you define.</p> <p>The device accepts excess traffic, but applies a random early detection (RED) drop profile to determine whether the excess packets are dropped and not forwarded.</p> <p>Three drop probabilities (low, medium, and high) are defined for this service class.</p>
Queue 3	network-control (NC)	<p>The Juniper Networks device delivers packets in this service class with a low priority. (These packets are not delay sensitive.)</p> <p>Typically, these packets represent routing protocol hello or keepalive messages. Because loss of these packets jeopardizes proper network operation, delay is preferable to discard.</p>

Forwarding Policy Options

CoS-based forwarding (CBF) enables you to control next-hop selection based on a packet's CoS and, in particular, the value of the IP packet's precedence bits. For example, you can specify a particular interface or next hop to carry high-priority traffic while all best-effort traffic takes some other path. CBF allows path selection based on FC. When a routing protocol discovers equal-cost paths, it can either pick a path at random or load-balance the packets across the paths, through either hash selection or round-robin selection.

A forwarding policy also allows you to create CoS classification overrides. You can override the incoming CoS classification and assign the packets to an FC based on the packets' input interfaces, input precedence bits, or destination addresses. When you override the classification of incoming packets, any mappings you configured for associated precedence bits or incoming interfaces to output transmission queues are ignored.

RELATED DOCUMENTATION

[Example: Assigning Forwarding Classes to Output Queues | 77](#)

[Example: Assigning a Forwarding Class to an Interface | 81](#)

[Example: Configuring Forwarding Classes | 71](#)

Example: Configuring Forwarding Classes

By default on all platforms, four output queues are mapped to four FCs as shown in "[Forwarding Classes Overview](#)" on page 68. On Juniper Networks devices, you can configure up to eight FCs and eight queues.

To configure up to eight FCs, include the **queue** statement at the **[edit class-of-service forwarding-classes]** hierarchy level:

```
[edit class-of-service forwarding-classes]
queue queue-number class-name;
```

The output queue number can be from 0 through 7, and you must map the forwarding classes one-to-one with the output queues. The default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent, respectively.

For example, to configure a one-to-one mapping between eight FCs and eight queues, you would use the following configuration:

```
[edit class-of-service]
forwarding-classes {
    queue 0 be;
    queue 1 ef;
    queue 2 af;
    queue 3 nc;
    queue 4 ef1;
    queue 5 ef2;
    queue 6 af1;
    queue 7 nc1;
}
```

Defining Eight Classifiers

```
[edit class-of-service]
classifiers {
    dscp dscp-table {
        forwarding-class ef {
            loss-priority low code-points [101000, 101001];
            loss-priority high code-points [101010, 101011];
        }
        forwarding-class af {
            loss-priority low code-points [010000, 010001];
            loss-priority high code-points [010010, 010011];
        }
        forwarding-class be {
            loss-priority low code-points [000000];
        }
        forwarding-class nc {
            loss-priority low code-points [111000];
        }
        forwarding-class ef1 {
            loss-priority low code-points [101100, 101101];
            loss-priority high code-points [101110];
        }
        forwarding-class af1 {
            loss-priority high code-points [101110];
        }
    }
}
```

```

        forwarding-class ef2 {
            loss-priority low code-points [101111];
        }
        forwarding-class nc1 {
            loss-priority low code-points [111001];
        }
    }
}

```

Adding Eight Schedulers to a Scheduler Map

Configure a custom scheduler map that applies globally to all interfaces, except those that are restricted to four queues:

```

[edit class-of-service]
scheduler-maps {
    sched {
        forwarding-class be scheduler Q0;
        forwarding-class ef scheduler Q1;
        forwarding-class af scheduler Q2;
        forwarding-class nc scheduler Q3;
        forwarding-class ef1 scheduler Q4;
        forwarding-class ef2 scheduler Q5;
        forwarding-class af1 scheduler Q6;
        forwarding-class nc1 scheduler Q7;
    }
}
schedulers {
    Q0 {
        transmit-rate percent 25;
        buffer-size percent 25;
        priority low;
        drop-profile-map loss-priority any protocol both drop-default;
    }
    Q1 {
        buffer-size temporal 2000;
        priority strict-high;
        drop-profile-map loss-priority any protocol both drop-ef;
    }
    Q2 {
        transmit-rate percent 35;
        buffer-size percent 35;
    }
}

```

```

        priority low;
        drop-profile-map loss-priority any protocol both drop-default;
    }
    Q3 {
        transmit-rate percent 5;
        buffer-size percent 5;
        drop-profile-map loss-priority any protocol both drop-default;
    }
    Q4 {
        transmit-rate percent 5;
        priority high;
        drop-profile-map loss-priority any protocol both drop-ef;
    }
    Q5 {
        transmit-rate percent 10;
        priority high;
        drop-profile-map loss-priority any protocol both drop-ef;
    }
    Q6 {
        transmit-rate remainder;
        priority low;
        drop-profile-map loss-priority any protocol both drop-default;
    }
    Q7 {
        transmit-rate percent 5;
        priority high;
        drop-profile-map loss-priority any protocol both drop-default;
    }
}

```

Configuring an IP Precedence Classifier and Rewrite Tables

```

[edit class-of-service]
classifiers {
    inet-precedence inet-classifier {
        forwarding-class be {
            loss-priority low code-points 000;
        }
        forwarding-class af11 {
            loss-priority high code-points 001;
        }
        forwarding-class ef {

```



```

        loss-priority low code-points 010;
    }
    forwarding-class nc1 {
        loss-priority high code-points 011;
    }
    forwarding-class be1 {
        loss-priority low code-points 100;
    }
    forwarding-class af12 {
        loss-priority high code-points 101;
    }
    forwarding-class ef1 {
        loss-priority low code-points 110;
    }
    forwarding-class nc2 {
        loss-priority high code-points 111;
    }
}
exp exp-rw-table {
    forwarding-class be {
        loss-priority low code-point 000;
    }
    forwarding-class af11 {
        loss-priority high code-point 001;
    }
    forwarding-class ef {
        loss-priority low code-point 010;
    }
    forwarding-class nc1 {
        loss-priority high code-point 111;
    }
    forwarding-class be1 {
        loss-priority low code-point 100;
    }
    forwarding-class af12 {
        loss-priority high code-point 101;
    }
    forwarding-class ef1 {
        loss-priority low code-point 110;
    }
    forwarding-class nc2 {
        loss-priority low code-point 111;
    }
}

```

```

    }
}
inet-precedence inet-rw-table {
    forwarding-class be {
        loss-priority low code-point 000;
    }
    forwarding-class af11 {
        loss-priority high code-point 001;
    }
    forwarding-class ef {
        loss-priority low code-point 010;
    }
    forwarding-class nc1 {
        loss-priority low code-point 111;
    }
    forwarding-class be1 {
        loss-priority low code-point 100;
    }
    forwarding-class af12 {
        loss-priority high code-point 101;
    }
    forwarding-class ef1 {
        loss-priority low code-point 110;
    }
    forwarding-class nc2 {
        loss-priority low code-point 111;
    }
}

```

Configuring an IDP Policy with a Forwarding Class

Configure an IDP policy with a forwarding class as an action to rewrite DSCP values of IP packets:

```

[edit class-of-service]
security idp idp-policy policy_name rulebase-ips rule rule_name {
    then {
        action {
            class-of-service {
                forwarding-class forwarding-class-name;
                dscp-code-point value;
            }
        }
    }
}

```

```
}
}
```

RELATED DOCUMENTATION

[Forwarding Classes Overview | 68](#)

[Example: Assigning Forwarding Classes to Output Queues | 77](#)

[Example: Assigning a Forwarding Class to an Interface | 81](#)

Example: Assigning Forwarding Classes to Output Queues

IN THIS SECTION

- [Requirements | 77](#)
- [Overview | 77](#)
- [Configuration | 78](#)
- [Verification | 80](#)

This example shows how to assign forwarding classes to output queues.

Requirements

Before you begin, determine the MF classifier. See ["Example: Configuring and Applying a Firewall Filter for a Multifield Classifier" on page 58](#).

Overview

In this example, you configure class of service and assign best-effort traffic to queue 0 as be-class, expedited forwarding traffic to queue 1 as ef-class, assured forwarding traffic to queue 2 as af-class, and network control traffic to queue 3 as nc-class.

You must assign the forwarding classes established by the MF classifier to output queues. [Table 12 on page 78](#) shows how this example assigns output queues.

Table 12: Sample Output Queue Assignments for mf-classifier Forwarding Queues

mf-classifier Forwarding Class	For Traffic Type	Output Queue
be-class	Best-effort traffic	Queue 0
ef-class	Expedited forwarding traffic	Queue 1
af-class	Assured forwarding traffic	Queue 2
nc-class	Network control traffic	Queue 3

Configuration

IN THIS SECTION

- [Procedure | 78](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set class-of-service forwarding-classes queue 0 be-class
set class-of-service forwarding-classes queue 1 ef-class
set class-of-service forwarding-classes queue 2 af-class
set class-of-service forwarding-classes queue 3 nc-class
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode*.

To assign forwarding classes to output queues:

1. Configure class of service.

```
[edit]
user@host# edit class-of-service forwarding-classes
```

2. Assign best-effort traffic to queue 0.

```
[edit class-of-service forwarding-classes]
user@host# set queue 0 be-class
```

3. Assign expedited forwarding traffic to queue 1.

```
[edit class-of-service forwarding-classes]
user@host# set queue 1 ef-class
```

4. Assign assured forwarding traffic to queue 2.

```
[edit class-of-service forwarding-classes]
user@host# set queue 2 af-class
```

5. Assign network control traffic to queue 3.

```
[edit class-of-service forwarding-classes]
user@host# set queue 3 nc-class
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
forwarding-classes {
    queue 0 be-class;
```

```
queue 1 ef-class;  
queue 2 af-class;  
queue 3 nc-class;  
}
```

If you are done configuring the device, enter `commit` from configuration mode.

NOTE: You cannot commit a configuration that assigns the same forwarding class to two different queues.

Verification

IN THIS SECTION

- [Verifying Forwarding Classes Are Assigned to Output Queues | 80](#)

Verifying Forwarding Classes Are Assigned to Output Queues

Purpose

Verify that the forwarding classes are properly assigned to output queues.

Action

From configuration mode, enter the `show class-of-service` command.

RELATED DOCUMENTATION

[Forwarding Classes Overview | 68](#)

[Example: Assigning a Forwarding Class to an Interface | 81](#)

[Example: Configuring Forwarding Classes | 71](#)

Example: Assigning a Forwarding Class to an Interface

IN THIS SECTION

- [Requirements | 81](#)
- [Overview | 81](#)
- [Configuration | 81](#)
- [Verification | 82](#)

This example shows how to assign a forwarding class to an interface.

Requirements

No special configuration beyond device initialization is required before configuring this feature.

Overview

On a device, you can configure fixed classification on a logical interface by specifying a forwarding class to be applied to all packets received by the logical interface, regardless of the packet contents.

In this example, you configure class of service, create interface ge-3/0/0 unit 0 and then set the forwarding class to assured-forwarding.

All packets coming into the device from the ge-3/0/0 unit 0 interface are assigned to the assured-forwarding forwarding class.

Configuration

IN THIS SECTION

- [Procedure | 82](#)

Procedure

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To assign a forwarding class to an interface:

1. Configure class of service and assign the interface.

```
[edit]
user@host# edit class-of-service interfaces ge-3/0/0 unit 0
```

2. Specify the forwarding class.

```
[edit class-of-service interfaces ge-3/0/0 unit 0]
user@host# set forwarding-class assured-forwarding
```

3. If you are done configuring the device, commit the configuration.

```
[edit]
user@host# commit
```

Verification

To verify the configuration is working properly, enter the `show class-of-service` command.

RELATED DOCUMENTATION

[Forwarding Classes Overview](#) | 68

[Example: Assigning Forwarding Classes to Output Queues](#) | 77

Understanding the SPC High-Priority Queue

The Services Processing Card (SPC) on SRX1400, SRX3000 line, and SRX5000 line devices provides processing power to run integrated services such as firewall, IPsec, and IDP. All traffic traversing the SRX Series device is passed to an SPC to have service processing applied. Junos OS provides a configuration option to enable packets with specific Differentiated Services (DiffServ) code points (DSCP) precedence bits to enter different priority queues on the SPC. The Services Processing Unit (SPU) draws packets from the higher priority queues and only draws packets from lower priority queues when the higher priority queues are empty. This feature can reduce overall latency for real-time traffic, such as voice traffic.

To designate packets for the high-priority, medium-priority, or low-priority queues, use the `spu-priority` configuration statement at the `[edit class-of-service forwarding-classes class]` hierarchy level. A value of `high` places packets into the high-priority queue, a value of `medium` places packets into the medium-priority queue, and a value of `low` places packets into the low-priority queue.

RELATED DOCUMENTATION

[Example: Configuring the SPC High-Priority Queue | 83](#)

[Forwarding Classes Overview | 68](#)

Example: Configuring the SPC High-Priority Queue

IN THIS SECTION

- [Requirements | 83](#)
- [Overview | 84](#)
- [Configuration | 84](#)
- [Verification | 86](#)

This example shows how to configure a forwarding class for the high-priority queue on the SPC.

Requirements

This example uses the following hardware and software components:

- SRX5000 line device
- Junos OS Release 11.4R2 or later

Overview

This example defines the following forwarding classes and assigns a queue number to each class:

Forwarding Class	Queue Number
best-effort	0
assured-forwarding	1
network-control	3
expedited-forwarding	2

The expedited-forwarding class is configured for the high-priority queue on the SPC.

Configuration

IN THIS SECTION

[Procedure](#) | [84](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set class-of-service forwarding-classes class best-effort queue-num 0
set class-of-service forwarding-classes class assured-forwarding queue-num 1
```

```
set class-of-service forwarding-classes class network-control queue-num 3
set class-of-service forwarding-classes class expedited-forwarding queue-num 2 spu-priority high
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure the high-priority queue on the SPC:

1. Define forwarding classes and assign queue numbers.

```
[edit class-of-service forwarding-classes]
user@host# set class best-effort queue-num 0
user@host# set class assured-forwarding queue-num 1
user@host# set class network-control queue-num 3
user@host# set class expedited-forwarding queue-num 2
```

2. Configure the SPC high-priority queue.

```
[edit class-of-service forwarding-classes]
user@host# set class expedited-forwarding spu-priority high
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service forwarding-classes` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service forwarding-classes
class best-effort queue-num 0;
class assured-forwarding queue-num 1;
class network-control queue-num 3;
class expedited-forwarding queue-num 2 spu-priority high;
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

[Verifying SPU High-Priority Queue Mapping | 86](#)

Verifying SPU High-Priority Queue Mapping

Purpose

Verify that the forwarding class is mapped to the SPU high-priority queue.

Action

From operational mode, enter the `show class-of-service forwarding-class` command.

```
user@host> show class-of-service forwarding-class
```

Forwarding class	ID	Queue	Restricted queue	Fabric priority
best-effort	0	0	0	low
normal				
expedited-forwarding	1	1	1	low
normal				
assured-forwarding	2	2	2	low
normal				
network-control	3	3	3	low
normal				

RELATED DOCUMENTATION

| [Understanding the SPC High-Priority Queue | 83](#)

Understanding Queuing and Marking of Host Outbound Traffic

IN THIS SECTION

- [Host Outbound Traffic Overview | 87](#)
- [Default Queuing and Marking of Host Outbound Traffic | 88](#)
- [Configured Queuing and Marking of Host Outbound Traffic | 88](#)
- [Configured Queuing and Marking of Outbound Routing Engine Traffic Only | 88](#)

This topic covers the following information:

Host Outbound Traffic Overview

Host outbound traffic, also called locally generated traffic, consists of traffic generated by the Routing Engine and traffic generated by the distributed protocol handler.

Routing Engine Sourced Traffic

Traffic sent from the Routing Engine includes control plane packets such as OSPF Hello packets, ICMP echo reply (ping) packets, and TCP-related packets such as BGP and LDP control packets.

Distributed Protocol Handler Traffic

Distributed protocol handler traffic refers to traffic from the router's *periodic packet management* (PPM) process when it runs sessions distributed to the Packet Forwarding Engine (the default mode) in addition to the Routing Engine. The PPM process is responsible for periodic transmission of protocol Hello or other keepalive packets on behalf of its various client processes, such as Bidirectional Forwarding Detection (BFD) Protocol or Link Aggregation Control Protocol (LACP), and it also receives packets on behalf of client processes. In addition, PPM handles time-sensitive periodic processing and performs such tasks as sending process-specific packets and gathering statistics. By default, PPM sessions on the Routing Engine run distributed on the Packet Forwarding Engine, and this enables client processes to run on the Packet Forwarding Engine.

NOTE: For interfaces on MX80 routers, LACP control traffic is sent through the Routing Engine rather than through the Packet Forwarding Engine.

Distributed protocol handler traffic includes both IP (Layer 3) traffic such as BFD keepalivemessages and non-IP (Layer 2) traffic such as LACP control traffic on aggregated Ethernet.

Default Queuing and Marking of Host Outbound Traffic

By default, the router assigns host outbound traffic to the best-effort forwarding class (which maps to queue 0) or to the network-control forwarding class (which maps to queue 3) based on protocol. For more information, see *Default Routing Engine Protocol Queue Assignments*.

By default, the router marks the type of service (ToS) field of Layer 3 packets in the host outbound traffic flow with DiffServ code point (DSCP) bits 000000 (which correlate with the best-effort forwarding class). The router does not remark Layer 2 traffic such as LACP control traffic on aggregated Ethernet. For more information, see *Default DSCP and DSCP IPv6 Classifiers*.

Configured Queuing and Marking of Host Outbound Traffic

You can configure a nondefault forwarding class and DSCP bits that the router uses to queue and remark host outbound traffic. These configuration settings apply to the following types of traffic:

- Packets generated by the Routing Engine
- Distributed protocol handler traffic for egress interfaces hosted on MX Series routers, M120 routers, and Enhanced III FPCs in M320 routers.

To change these default settings, include the forwarding-class *class-name* statement and the dscp-code-point *value* statement at the [edit class-of-service host-outbound-traffic] hierarchy level. This feature does not affect transit traffic or incoming traffic.

The configured forwarding class override applies to all packets relating to Layer 2 protocols, Layer 3 protocols, and all application-level traffic (such as FTP or ping operations). The configured DSCP bits override value does not apply to MPLS EXP bits or IEEE 802.1p bits, however.

Configured Queuing and Marking of Outbound Routing Engine Traffic Only

To configure a nondefault forwarding class and DSCP bits that the router uses to queue and remark traffic generated by the Routing Engine only, attach an IPv4 firewall filter to the output of the router's loopback address. Use the forwarding-class and dscp filter actions to specify override values.

This feature overrides the host-outbound-traffic settings for the Routing Engine output traffic only.

RELATED DOCUMENTATION

| [*Default Routing Engine Protocol Queue Assignments*](#)

Default DSCP and DSCP IPv6 Classifiers

Example: Configuring Different Queuing and Marking Defaults for Outbound Routing Engine and Distributed Protocol Handler Traffic

Default Routing Engine Protocol Queue Assignments

Table 13 on page 89 lists the default output queues to which Routing Engine sourced traffic is mapped by protocol type. In general, control protocol packets are sent over queue 3 and management traffic is sent over queue 0. The following caveats apply to these default queue assignments:

- For all packets sent to queue 3 over a VLAN-tagged interface, the software sets the 802.1p bit to 110, except for VRRP packets, in which case the software sets the 802.1p bit to 111.
- Outgoing BFD packets should be marked with VLAN-tagged 802.1p bit to 110; however, this is true only for RE based BFD. For inline BFD, it does not modify by default.
- Although BGP and LDP TCP traffic is sent to queue0, it is marked with 802.1p bits 110 normally used for network control.
- For IPv4 and IPv6 packets, the software copies the IP type-of-service (ToS) value into the 802.1p field independently of which queue the packets are sent out.
- For MPLS packets, the software copies the EXP bits into the 802.1p field.

Table 13: Default Queue Assignments for Packets Generated by the Routing Engine

Routing Engine Protocol	Default Queue Assignment
Adaptive Services PIC TCP tickle (keepalive packets for idle session generated with stateful firewall to probe idle TCP sessions)	Queue 0
Address Resolution Protocol (ARP)	Queue 0
ATM Operation, Administration, and Maintenance (OAM)	Queue 3
Bidirectional Forwarding Detection (BFD) Protocol	Queue 3

Table 13: Default Queue Assignments for Packets Generated by the Routing Engine *(Continued)*

Routing Engine Protocol	Default Queue Assignment
BGP	Queue 0
BGP TCP Retransmission	Queue 3
Cisco High-Level Data Link Control (HDLC)	Queue 3
Distance Vector Multicast Routing Protocol (DVMRP)	Queue 3
Ethernet Operation, Administration, and Maintenance (OAM)	Queue 3
Frame Relay Local Management Interface (LMI)	Queue 3
Frame Relay Asynchronization permanent virtual circuit (PVC)/data link connection identifier (DLCI) status messages	Queue 3
FTP	Queue 0
IS-IS Open Systems Interconnection (OSI)	Queue 3
Internet Control Message Protocol (ICMP)	Queue 0
Internet Group Management Protocol (IGMP) query	Queue 3
IGMP Report	Queue 0
Internet Key Exchange (IKE)	Queue 3
IP version 6 (IPv6) Neighbor Solicitation	Queue 3

Table 13: Default Queue Assignments for Packets Generated by the Routing Engine *(Continued)*

Routing Engine Protocol	Default Queue Assignment
IPv6 Neighbor Advertisement	Queue 3
IPv6 Router Advertisement	Queue 0
Label Distribution Protocol (LDP) User Datagram Protocol (UDP) hello	Queue 3
LDP keepalive and Session data	Queue 0
LDP TCP Retransmission	Queue 3
Link Aggregation Control Protocol (LACP)	Queue 3
Link Services (LS) PIC	If link fragmentation and interleaving (LFI) is enabled, all routing protocol packets larger than 128 bytes are transmitted from queue 0. This ensures that VoIP traffic is not affected. Fragmentation is supported on queue 0 only.
Multicast listener discovery (MLD)	Queue 0
Multicast Source Discovery Protocol (MSDP)	Queue 0
MSDP TCP Retransmission	Queue 3
Multilink Frame Relay Link Integrity Protocol (LIP)	Queue 3
NETCONF	Queue 0
NetFlow	Queue 0
OSPF protocol data unit (PDU)	Queue 3

Table 13: Default Queue Assignments for Packets Generated by the Routing Engine *(Continued)*

Routing Engine Protocol	Default Queue Assignment
Point-to-Point Protocol (PPP)	Queue 3
Protocol Independent Multicast (PIM)	Queue 3
Real-time performance monitoring (RPM) probe packets	Queue 3
RSVP	Queue 3
Routing Information Protocol (RIP)	Queue 3
SNMP	Queue 0
SSH	Queue 0
sFlow monitoring technology	Queue 0
Telnet	Queue 0
Two-Way Active Monitoring Protocol (TWAMP)	Queue 0
Virtual Router Redundancy Protocol (VRRP)	Queue 3
xnm-clear-text	Queue 0
xnm-ssl	Queue 0

Altering Outgoing Packets Headers with Rewrite Rules

IN THIS CHAPTER

- [Rewrite Rules Overview | 93](#)
- [Rewriting Frame Relay Headers | 94](#)
- [Example: Configuring and Applying Rewrite Rules on a Security Device | 96](#)

Rewrite Rules Overview

A rewrite rule modifies the appropriate class-of-service (CoS) bits in an outgoing packet. Modification of CoS bits allows the next downstream device to classify the packet into the appropriate service group. Rewriting or marking outbound packets is useful when the device is at the border of a network and must alter the CoS values to meet the policies of the targeted peer. A rewrite rule examines the forwarding class and loss priority of a packet and sets its bits to a corresponding value specified in the rule.

Typically, a device rewrites CoS values in outgoing packets on the outbound interfaces of an edge device, to meet the policies of the targeted peer. After reading the current forwarding class and loss priority information associated with the packet, the transmitting device locates the chosen CoS value from a table, and writes this CoS value into the packet header.

NOTE:

- You can configure up to 32 IEEE 802.1p rewrite rules on each SRX5K-MPC on the SRX5600 and SRX5800 devices.
- Starting in Junos OS Release 18.2R1, you can configure 802.1p rewrite on logical VDSL interface, that is, pt interface).

Release History Table

Release	Description
18.2R1	Starting in Junos OS Release 18.2R1, you can configure 802.1p rewrite on logical VDSL interface, that is, pt interface).

Rewriting Frame Relay Headers

IN THIS SECTION

- [Assigning the Default Frame Relay Rewrite Rule to an Interface | 94](#)
- [Defining a Custom Frame Relay Rewrite Rule | 95](#)

Assigning the Default Frame Relay Rewrite Rule to an Interface

For Juniper Networks device interfaces with Frame Relay encapsulation, you can rewrite the discard eligibility (DE) bit based on the loss priority of Frame Relay traffic. For each outgoing frame with the loss priority set to low, medium-low, medium-high, or high, you can set the DE bit CoS value to 0 or 1. You can combine a Frame Relay rewrite rule with other rewrite rules on the same interface. For example, you can rewrite both the DE bit and MPLS EXP bit.

The default Frame Relay rewrite rule contains the following settings:

```
loss-priority low code-point 0;
loss-priority medium-low code-point 0;
loss-priority medium-high code-point 1;
loss-priority high code-point 1;
```

This default rule sets the DE CoS value to 0 for each outgoing frame with the loss priority set to low or medium-low. This default rule sets the DE CoS value to 1 for each outgoing frame with the loss priority set to medium-high or high.

To assign the default rule to an interface, include the `frame-relay-de default` statement at the `[edit class-of-service interfaces interface interface-name unit logical-unit-number unit rewrite-rules]` hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
frame-relay-de default;
```

Defining a Custom Frame Relay Rewrite Rule

To define a custom Frame Relay rewrite rule, include the following statements at the `[edit class-of-service]` hierarchy level:

```
[edit class-of-service]
rewrite-rules {
  frame-relay-de rewrite-name {
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority level code-point (0 | 1);
    }
  }
}
```

A custom rewrite rule sets the DE bit to the 0 or 1 CoS value based on the assigned loss priority of low, medium-low, medium-high, or high for each outgoing frame.

The rule does not take effect until you apply it to a logical interface. To apply the rule to a logical interface, include the `frame-relay-de map-name` statement at the `[edit class-of-service interfaces interface interface-name unit logical-unit-number rewrite-rules]` hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
frame-relay-de map-name;
```

RELATED DOCUMENTATION

[Rewrite Rules Overview | 93](#)

[Example: Configuring and Applying Rewrite Rules on a Security Device | 96](#)

Example: Configuring and Applying Rewrite Rules on a Security Device

IN THIS SECTION

- [Requirements | 96](#)
- [Overview | 96](#)
- [Configuration | 97](#)
- [Verification | 100](#)

This example shows how to configure and apply rewrite rules for a device.

Requirements

Before you begin, create and configure the forwarding classes.

Overview

You can configure rewrite rules to replace CoS values on packets received from the customer or host with the values expected by other devices. You do not have to configure rewrite rules if the received packets already contain valid CoS values. Rewrite rules apply the forwarding class information and packet loss priority used internally by the device to establish the CoS value on outbound packets. After you configure rewrite rules, you must apply them to the correct interfaces.

In this example, you configure the rewrite rule for DiffServ CoS as rewrite-dscps. You specify the best-effort forwarding class as be-class, expedited forwarding class as ef-class, an assured forwarding class as af-class, and a network control class as nc-class. Finally, you apply the rewrite rule to an IRB interface.

NOTE: You can apply one rewrite rule to each logical interface.

[Table 14 on page 97](#) shows how the rewrite rules replace the DSCPs on packets in the four forwarding classes.

Table 14: Sample rewrite-dscps Rewrite Rules to Replace DSCPs

mf-classifier Forwarding Class	For CoS Traffic Type	rewrite-dscps Rewrite Rules
be-class	Best-effort traffic—Provides no special CoS handling of packets. Typically, RED drop profile is aggressive and no loss priority is defined.	Low-priority code point: 000000 High-priority code point: 000001
ef-class	Expedited forwarding traffic—Provides low loss, low delay, low jitter, assured bandwidth, and end-to-end service. Packets can be forwarded out of sequence or dropped.	Low-priority code point: 101110 High-priority code point: 101111
af-class	Assured forwarding traffic—Provides high assurance for packets within the specified service profile. Excess packets are dropped.	Low-priority code point: 001010 High-priority code point: 001100
nc-class	Network control traffic—Packets can be delayed, but not dropped.	Low-priority code point: 110000 High-priority code point: 110001

NOTE: Forwarding classes can be configured in a DSCP rewriter and also as an action of an IDP policy to rewrite DSCP code points. To ensure that the forwarding class is used as an action in an IDP policy, it is important that you do not configure an IDP policy and interface-based rewrite rules with the same forwarding class.

Configuration

IN THIS SECTION

- [Procedure | 98](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set class-of-service rewrite-rules dscp rewrite-dscps forwarding-class be-class loss-priority
low code-point 000000
set class-of-service rewrite-rules dscp rewrite-dscps forwarding-class be-class loss-priority
high code-point 000001
set class-of-service rewrite-rules dscp rewrite-dscps forwarding-class ef-class loss-priority
low code-point 101110
set class-of-service rewrite-rules dscp rewrite-dscps forwarding-class ef-class loss-priority
high code-point 101111
set class-of-service rewrite-rules dscp rewrite-dscps forwarding-class af-class loss-priority
low code-point 001010
set class-of-service rewrite-rules dscp rewrite-dscps forwarding-class af-class loss-priority
high code-point 001100
set class-of-service rewrite-rules dscp rewrite-dscps forwarding-class nc-class loss-priority
low code-point 110000
set class-of-service rewrite-rules dscp rewrite-dscps forwarding-class nc-class loss-priority
high code-point 110001
set class-of-service interfaces irb unit 0 rewrite-rules dscp rewrite-dscps
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [CLI User Guide](#).

To configure and apply rewrite rules for a device:

1. Configure rewrite rules for DiffServ CoS.

```
[edit]
user@host# edit class-of-service
user@host# edit rewrite-rules dscp rewrite-dscps
```


2. Configure best-effort forwarding class rewrite rules.

```
[edit class-of-service rewrite-rules dscp rewrite-dscps]
user@host# set forwarding-class be-class loss-priority low code-point 000000
user@host# set forwarding-class be-class loss-priority high code-point 000001
```

3. Configure expedited forwarding class rewrite rules.

```
[edit class-of-service rewrite-rules dscp rewrite-dscps]
user@host# set forwarding-class ef-class loss-priority low code-point 101110
user@host# set forwarding-class ef-class loss-priority high code-point 101111
```

4. Configure assured forwarding class rewrite rules.

```
[edit class-of-service rewrite-rules dscp rewrite-dscps]
user@host# set forwarding-class af-class loss-priority low code-point 001010
user@host# set forwarding-class af-class loss-priority high code-point 001100
```

5. Configure network control class rewrite rules.

```
[edit class-of-service rewrite-rules dscp rewrite-dscps]
user@host# set forwarding-class nc-class loss-priority low code-point 110000
user@host# set forwarding-class nc-class loss-priority high code-point 110001
```

6. Apply rewrite rules to an IRB interface.

```
[edit class-of-service]
user@host# set interfaces irb unit 0 rewrite-rules dscp rewrite-dscps
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
```

```

interfaces {
  irb {
    unit 0 {
      rewrite-rules {
        dscp rewrite-dscps;
      }
    }
  }
}
rewrite-rules {
  dscp rewrite-dscps {
    forwarding-class be-class {
      loss-priority low code-point 000000;
      loss-priority high code-point 000001;
    }
    forwarding-class ef-class {
      loss-priority low code-point 101110;
      loss-priority high code-point 101111;
    }
    forwarding-class af-class {
      loss-priority low code-point 001010;
      loss-priority high code-point 001100;
    }
    forwarding-class nc-class {
      loss-priority low code-point 110000;
      loss-priority high code-point 110001;
    }
  }
}
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying Rewrite Rules Configuration | 101](#)

Verifying Rewrite Rules Configuration

Purpose

Verify that rewrite rules are configured properly.

Action

From operational mode, enter the show class-of-service interface irb command.

```
user@host> show class-of-service interface irb
Physical interface: irb, Index: 130
  Maximum usable queues: 8, Queues in use: 4
  Scheduler map: <default> , Index: 2
  Congestion-notification: Disabled

Logical interface: irb.10, Index: 71
Object      Name              Type      Index
Rewrite-Output  rewrite-dscps    dscp      17599
Classifier      ipprec-compatibility  ip        13
```

Meaning

Rewrite rules are configured on IRB interface as expected.

RELATED DOCUMENTATION

| [Rewrite Rules Overview](#) | 93

Defining Output Queue Properties with Schedulers

IN THIS CHAPTER

- Schedulers Overview | 102
- Default Scheduler Settings | 108
- Transmission Scheduling Overview | 109
- Excess Bandwidth Sharing and Minimum Logical Interface Shaping | 111
- Excess Bandwidth Sharing Proportional Rates | 112
- Calculated Weights Mapped to Hardware Weights | 113
- Weight Allocation with Only Shaping Rates or Unshaped Logical Interfaces | 115
- Shared Bandwidth Among Logical Interfaces | 116
- Example: Configuring Class-of-Service Schedulers on a Security Device | 118
- Scheduler Buffer Size Overview | 125
- Example: Configuring a Large Delay Buffer on a Channelized T1 Interface | 130
- Configuring Large Delay Buffers in CoS | 134
- Example: Configuring and Applying Scheduler Maps | 140
- Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs | 144
- Example: Applying Scheduling and Shaping to VLANs | 154

Schedulers Overview

IN THIS SECTION

- Transmit Rate | 103
- Delay Buffer Size | 105
- Scheduling Priority | 106
- Shaping Rate | 107

You use *schedulers* to define the properties of output queues. These properties include the amount of interface bandwidth assigned to the queue, the size of the memory buffer allocated for storing packets, the priority of the queue, and the random early detection (RED) drop profiles associated with the queue.

You associate the schedulers with forwarding classes by means of *scheduler maps*. You can then associate each scheduler map with an interface, thereby configuring the hardware queues, packet schedulers, and RED processes that operate according to this mapping.

An individual device interface has multiple queues assigned to store packets temporarily before transmission. To determine the order to service the queues, the device uses a round-robin scheduling method based on priority and the queue's weighted round-robin (WRR) credits. Junos OS schedulers allow you to define the priority, bandwidth, delay buffer size, rate control status, and RED drop profiles to be applied to a particular queue for packet transmission.

You can configure *per-unit scheduling* (also called *logical interface scheduling*) to allow multiple output queues on a logical interface and to associate an output scheduler with each queue.

NOTE: For Juniper Network devices, when configuring the *protocol parameter* in the **drop-profile-map** statement, TCP and non-TCP values are not supported; only the value *any* is supported.

vSRX and vSRX 3.0 instances support class of service (CoS) configurations for shapers at different Gigabit Ethernet interface speeds of 1-Gbps, 10-Gbps, 40-Gbps, and 100-Gbps.

Transmit Rate

The transmission rate determines the traffic transmission bandwidth for each forwarding class you configure. The rate is specified in bits per second (bps). Each queue is allocated some portion of the bandwidth of the outgoing interface.

This bandwidth amount can be a fixed value, such as 1 megabit per second (Mbps), a percentage of the total available bandwidth, or the rest of the available bandwidth. You can limit the transmission bandwidth to the exact value you configure, or allow it to exceed the configured rate if additional bandwidth is available from other queues (SRX5400, SRX5600, and SRX5800 devices do not support an exact value transmit rate). This property helps ensure that each queue receives the amount of bandwidth appropriate to its level of service.

The minimum transmit rate supported on high-speed interfaces is one-ten thousandth of the speed of that interface. For example, on a Gigabit Ethernet interface with a speed of 1000 Mbps, the minimum transmit rate is 100 Kbps (1,000 Mbps x 1/10,000). You can configure transmit rates in the range 3200 bps through 160,000,000,000 bps. When the configured rate is less than the minimum transmit rate, the minimum transmit rate is used instead.

NOTE: Interfaces with slower interface speeds, like T1, E1, or channelized T1/E1/ISDN PRI, cannot support minimum transmit rates because the minimum transmit rate supported on a device is 3,200 bps.

Transmit rate assigns the weighted round-robin (WRR) priority values within a given priority level and not between priorities.

The transmit rate defines the transmission rate of a scheduler. The transmit rate determines the traffic bandwidth from each forwarding class you configure.

By default, queues 0 through 7 have the following percentage of transmission capacity:

- Queue 0—95 percent
- Queue 1—0 percent
- Queue 2—0 percent
- Queue 3—0 percent
- Queue 4—0 percent
- Queue 6—0 percent
- Queue 7—5 percent

To define a transmit rate, select the appropriate option:

- To specify a transmit rate, select `rate` and type an integer from 3200 to 160,000,000,000 bits per second.
- To enforce an exact transmit rate, select `rate`.
- To specify the remaining transmission capacity, select `remainder`.
- To specify a percentage of transmission capacity, select `percent` and type an integer from 1 through 100.

Optionally, you can specify the percentage of the remainder to be used for allocating the transmit rate of the scheduler on a prorated basis. If there are still points left even after allocating the remainder percentage with the transmit rate and there are no queues, then the points are allocated point by point to each queue in a round-robin method. If the remainder percentage is not specified, the remainder value will be shared equally.

Delay Buffer Size

You can configure the delay buffer size to control congestion at the output stage. A delay buffer provides packet buffer space to absorb burst traffic up to a specified duration of delay. When the buffer is full, all packets are dropped.

On Juniper Networks devices, you can configure larger delay buffers on channelized T1/E1 interfaces. Larger delay buffers help these slower interfaces to avoid congestion and packet dropping when they receive large bursts of traffic.

By default, SRX300, SRX320, SRX340, SRX345, and SRX550M device interfaces support a delay buffer time of 100,000 microseconds. (Platform support depends on the Junos OS release in your implementation.)

To define a delay buffer size for a scheduler, select the appropriate option:

- To enforce exact buffer size, select **Exact**.
- To specify a buffer size as a temporal value (microseconds), select **Temporal**.
- To specify buffer size as a percentage of the total buffer, select **Percent** and type an integer from 1 through 100.
- To specify buffer size as the remaining available buffer, select **Remainder**.

Optionally, you can specify the percentage of the remainder to be used for allocating the buffer size of the scheduler on a prorated basis.

By default, sizes of the delay buffer queues 0 through 7 have the following percentage of the total available buffer space:

- Queue 0—95 percent
- Queue 1—0 percent
- Queue 2—0 percent
- Queue 3—0 percent
- Queue 4—0 percent
- Queue 5—0 percent
- Queue 6—0 percent
- Queue 7—5 percent

NOTE: A large buffer size value correlates with a greater possibility of packet delays. This might not be practical for sensitive traffic such as voice or video. For a Juniper Networks device, if the buffer size percentage is set to zero for T1 interfaces, traffic does not pass.

For various interface speeds, the default parameters such as buffer time, maximum buffer time, maximum buffer size, and maximum number of interfaces vary. When the traffic shaping rate is more than 1-Gbps, then 1-Gbps delay buffer is considered.

Packets are dropped from the queue if:

- The total buffer limit is exceeded.
- The queue size exceeds the total free buffer size.
- The packet buffer pool is less than 25 percent free and the queue exceeds the guaranteed minimum buffer size.
- The packet buffer pool is only 5 percent free (or less).
- The queue size exceeds the guaranteed buffer size (RED profile condition (RED-dropped)). The queue size will be restricted to be less than or equal to the free shared buffers available.

Scheduling Priority

Scheduling priority determines the order in which an output interface transmits traffic from the queues, thus ensuring that queues containing important traffic are provided better access to the outgoing interface.

The queues for an interface are divided into sets based on their priority. Each set contains queues of the same priority. The device examines the sets in descending order of priority. If at least one queue in a set has a packet to transmit, the device selects that set. If multiple queues in the set have packets to transmit, the device selects a queue from the set according to the weighted round-robin (WRR) algorithm that operates within the set.

The packets in a queue are transmitted based on the configured scheduling priority, the transmit rate, and the available bandwidth.

The scheduling priority of the scheduler determines the order in which an output interface transmits traffic from the queues. You can set scheduling priority at different levels in an order of increasing priority from low to high. A high-priority queue with a high transmission rate might lock out lower-priority traffic.

To specify a scheduling priority, select one of the following levels:

- `high`—Packets in this queue have high priority.
- `low`—Packets in this queue are transmitted last.
- `medium-low`—Packets in this queue have medium-low priority.
- `medium-high`—Packets in this queue have medium-high priority.
- `strict-high`—Packets in this queue are transmitted first.

Shaping Rate

Shaping rates control the maximum rate of traffic transmitted on an interface. You can configure the shaping rate so that the interface transmits less traffic than it is physically capable of carrying.

You can configure shaping rates on logical interfaces. By default, output scheduling is not enabled on logical interfaces. *Logical interface* scheduling (also called per-unit scheduling) allows you to enable multiple output queues on a logical interface and associate an output scheduler and shaping rate with the queues.

By default, the logical interface bandwidth is the average of unused bandwidth for the number of logical interfaces that require default bandwidth treatment. You can specify a peak bandwidth rate in bits per second (bps), either as a complete decimal number or as a decimal number followed by the abbreviation *k* (1000), *m* (1,000,000), or *g* (1,000,000,000). The range is from 1000 through 32,000,000,000 bps.

For low-speed interfaces, the queue-limit values might become lower than the interface MTU so that traffic with large packets can no longer pass through some of the queues. If you want larger-sized packets to flow through, set the buffer-size configuration in the scheduler to a larger value. For more accuracy, the 100-ms queue-limit values are calculated based on shaping rate and not on interface rates.

The shaping rate defines the minimum bandwidth allocated to a queue. The default shaping rate is 100 percent, which is the same as no shaping at all. To define a shaping rate, select the appropriate option:

- To specify shaping rate as an absolute number of bits per second, select `rate` and type an integer from 3200 to 160,000,000,000 bits per second.
- To specify shaping rate as a percentage, select `percent` and type an integer from 0 through 100.

RELATED DOCUMENTATION

[Default Scheduler Settings | 108](#)

[Example: Configuring Class-of-Service Schedulers on a Security Device | 118](#)

[Scheduler Buffer Size Overview | 125](#)

[Example: Configuring a Large Delay Buffer on a Channelized T1 Interface | 130](#)

Default Scheduler Settings

Each forwarding class has an associated scheduler priority. Only two forwarding classes, best-effort (ID 0, queue 0) and network-control (ID 3, queue 7), are used in the Junos OS default scheduler configuration.

By default, the best-effort forwarding class (queue 0) receives 95 percent, and the network-control (queue 7) receives 5 percent of the bandwidth and buffer space for the output link. The default drop profile causes the buffer to fill and then discard all packets until it again has space.

The expedited-forwarding and assured-forwarding classes have no schedulers, because by default no resources are assigned to queue 5 (ID 1) and queue 1 (ID 2). However, you can manually configure resources for the expedited-forwarding and the assured-forwarding classes.

NOTE: The ID refers to the forwarding class ID assigned by the COSD daemon. COSD assigns a forwarding class ID to every forwarding class. The ID is unique to a forwarding-class and is used as a unique identifier in any internal communication with the PFE. PFE side software knows nothing about forwarding-class names but only IDs. So, there is one-to-one mapping from forwarding class name to ID.

By default, each queue can exceed the assigned bandwidth if additional bandwidth is available from other queues. When a forwarding class does not fully use the allocated transmission bandwidth, the remaining bandwidth can be used by other forwarding classes if they receive a larger amount of offered load than the bandwidth allocated. If you do not want a queue to use any leftover bandwidth, you must configure it for strict allocation.

The device uses the following default scheduler settings. You can configure these settings.

```
[edit class-of-service]
schedulers {
  network-control {
    transmit-rate percent 5;
    buffer-size percent 5;
    priority low;
    drop-profile-map loss-priority any protocol any drop-profile terminal;
  }
}
```

```

best-effort {
    transmit-rate percent 95;
    buffer-size percent 95;
    priority low;
    drop-profile-map loss-priority any protocol any drop-profile terminal;
}
}
drop-profiles {
    terminal {
        fill-level 100 drop-probability 100;
    }
}
}

```

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Example: Configuring Class-of-Service Schedulers on a Security Device | 118](#)

[Scheduler Buffer Size Overview | 125](#)

[Example: Configuring a Large Delay Buffer on a Channelized T1 Interface | 130](#)

[Example: Configuring and Applying Scheduler Maps | 140](#)

[Transmission Scheduling Overview | 109](#)

Transmission Scheduling Overview

The packets in a queue are transmitted based on their transmission priority, transmit rate, and the available bandwidth.

By default, each queue can exceed the assigned bandwidth if additional bandwidth is available from other queues. When a forwarding class does not fully use the allocated transmission bandwidth, the remaining bandwidth can be used by other forwarding classes if they receive a larger amount of offered load than the bandwidth allocated. A queue receiving traffic within its bandwidth configuration is considered to have positive bandwidth credit, and a queue receiving traffic in excess of its bandwidth allocation is considered to have negative bandwidth credit.

NOTE: The queues in a logical interface do not use the available buffer from other queues for packet transmission. Instead, the packets transmitted to a queue consider only the buffer size available in its own queue.

A queue with positive credit does not need to use leftover bandwidth, because it can use its own allocation. For such queues, packets are transmitted based on the priority of the queue, with packets from higher-priority queues transmitting first. The transmit rate is not considered during transmission. In contrast, a queue with negative credit needs a share of the available leftover bandwidth.

The leftover bandwidth is allocated to queues with negative credit in proportion to the configured transmit rate of the queues within a given priority set. The queues for an interface are divided into sets based on their priority. If no transmit rate is configured, each queue in the set receives an equal percentage of the leftover bandwidth. However, if a transmit rate is configured, each queue in the set receives the configured percentage of the leftover bandwidth.

Table 15 on page 110 shows a sample configuration of priority and transmit rate on six queues. The total available bandwidth on the interface is 100 Mbps.

Table 15: Sample Transmission Scheduling

Queue	Scheduling Priority	Transmit Rate	Incoming Traffic
0	Low	10%	20 Mbps
1	High	20%	20 Mbps
2	High	30%	20 Mbps
3	Low	30%	20 Mbps
4	Medium-high	No transmit rate configured	10 Mbps
5	Medium-high	No transmit rate configured	20 Mbps

In this example, queues are divided into three sets based on their priority:

- High priority set—Consists of queue 1 and queue 2. Packets use 40 Mbps (20+20) of the available bandwidth (100 Mbps) and are transmitted first. Because of positive credit, the configured transmit rate is not considered.

- Medium-high priority set—Consists of queue 4 and queue 5. Packets use 30 Mbps (10+20) of the remaining 60 Mbps bandwidth. Because of positive credit, the transmit rate is not considered. If the queues had negative credit, they would receive an equal share of the leftover bandwidth because no transmit rate is configured.
- Low priority set—Consists of queue 0 and queue 3. Packets share the 30 Mbps of leftover bandwidth based on the configured transmit rate. The distribution of bandwidth is in proportion to the assigned percentages. Because the total assigned percentage is 40 (10 + 30), each queue receives a share of bandwidth accordingly. Thus queue 0 receives 7.5 Mbps ($10/40 \times 30$), and queue 3 receives 22.5 Mbps ($30/40 \times 30$).

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Default Scheduler Settings | 108](#)

[Example: Configuring Class-of-Service Schedulers on a Security Device | 118](#)

[Scheduler Buffer Size Overview | 125](#)

[Example: Configuring a Large Delay Buffer on a Channelized T1 Interface | 130](#)

[Example: Configuring and Applying Scheduler Maps | 140](#)

Excess Bandwidth Sharing and Minimum Logical Interface Shaping

The default excess bandwidth sharing proportional rate is 32.65 Mbps (128 Kbps x 255). In order to have better weighed fair queuing (WFQ) accuracy among queues, the shaping rate configured should be larger than the excess bandwidth sharing proportional rate. Some examples are shown in [Table 16 on page 111](#).

Table 16: Shaping Rates and WFQ Weights

Shaping Rate	Configured Queue Transmit Rate	WFQ Weight	Total Weights
10 Mbps	(30, 40, 25, 5)	(22, 30, 20, 4)	76
33 Mbps	(30, 40, 25, 5)	(76, 104, 64, 13)	257
40 Mbps	(30, 40, 25, 5)	(76, 104.64, 13)	257

With a 10-Mbps shaping rate, the total weights are 76. This is divided among the four queues according to the configured transmit rate. Note that when the shaping rate is larger than the excess bandwidth sharing proportional rate of 32.65 Mbps, the total weight on the logical interface is 257 and the WFQ accuracy will be the same.

When using the IOC (40x1GE IOC or 4x10GE IOC) on a Juniper Networks device, there are circumstances when you should configure excess bandwidth sharing and minimum logical interface shaping.

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Excess Bandwidth Sharing Proportional Rates | 112](#)

[Calculated Weights Mapped to Hardware Weights | 113](#)

[Weight Allocation with Only Shaping Rates or Unshaped Logical Interfaces | 115](#)

[Shared Bandwidth Among Logical Interfaces | 116](#)

Excess Bandwidth Sharing Proportional Rates

To determine a good excess bandwidth-sharing proportional rate to configure, choose the largest CIR (guaranteed rate) among all the logical interfaces (units). If the logical units have PIRs (shaping rates) only, then choose the largest PIR rate. However, this is not ideal if a single logical interface has a large WRR rate. This method can skew the distribution of traffic across the queues of the other logical interfaces. To avoid this issue, set the excess bandwidth-sharing proportional rate to a lower value on the logical interfaces where the WRR rates are concentrated. This improves the bandwidth sharing accuracy among the queues on the same logical interface. However, the excess bandwidth sharing for the logical interface with the larger WRR rate is no longer proportional.

As an example, consider five logical interfaces on the same physical port, each with four queues, all with only PIRs configured and no CIRs. The WRR rate is the same as the PIR for the logical interface. The excess bandwidth is shared proportionally with a rate of 40 Mbps. The traffic control profiles for the logical interfaces are shown in [Table 17 on page 112](#).

Table 17: Example Shaping Rates and WFQ Weights

Shaping Rate	Configured Queue Transmit Rate	WFQ Weight	Total Weights
(Unit 0) 10 Mbps	(95, 0, 0, 5)	(60, 0, 0, 3)	63

Table 17: Example Shaping Rates and WFQ Weights (Continued)

Shaping Rate	Configured Queue Transmit Rate	WFQ Weight	Total Weights
(Unit 1) 20 Mbps	(25, 25, 25, 25)	(32, 32, 32, 32)	128
(Unit 2) 40 Mbps	(40, 30, 20, 10)	(102, 77, 51, 26)	255
(Unit 3) 200 Mbps	(70, 10, 10, 10)	(179, 26, 26, 26)	255
(Unit 4) 2 Mbps	(25, 25, 25, 25)	(5, 5, 5, 5)	20

Even though the maximum transmit rate for the queue on logical interface unit 3 is 200 Mbps, the excess bandwidth-sharing proportional rate is kept at a much lower value. Within a logical interface, this method provides a more accurate distribution of weights across queues. However, the excess bandwidth is now shared equally between unit 2 and unit 3 (total weights = 255).

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Excess Bandwidth Sharing and Minimum Logical Interface Shaping | 111](#)

[Calculated Weights Mapped to Hardware Weights | 113](#)

[Weight Allocation with Only Shaping Rates or Unshaped Logical Interfaces | 115](#)

[Shared Bandwidth Among Logical Interfaces | 116](#)

Calculated Weights Mapped to Hardware Weights

The calculated weight in a traffic control profile is mapped to hardware weight, but the hardware only supports a limited WFQ profile. The weights are rounded to the nearest hardware weight according to the values in [Table 18 on page 114](#).

Table 18: Rounding Configured Weights to Hardware Weights

Traffic Control Profile Number	Number of Traffic Control Profiles	Weights	Maximum Error
1–16	16	1–16 (interval of 1)	50.00%
17–29	13	18–42 (interval of 2)	6.25%
30–35	6	45–60 (interval of 3)	1.35%
36–43	8	64–92 (interval of 4)	2.25%
44–49	6	98–128 (interval of 6)	3.06%
50–56	7	136–184 (interval of 8)	3.13%
57–62	6	194–244 (interval of 10)	2.71%
63–63	1	255–255 (interval of 11)	2.05%

As shown in [Table 18 on page 114](#), the calculated weight of 18.9 is mapped to a hardware weight of 18, because 18 is closer to 18.9 than 20 (an interval of 2 applies in the range of 18 to 42).

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Excess Bandwidth Sharing and Minimum Logical Interface Shaping | 111](#)

[Excess Bandwidth Sharing Proportional Rates | 112](#)

[Weight Allocation with Only Shaping Rates or Unshaped Logical Interfaces | 115](#)

[Shared Bandwidth Among Logical Interfaces | 116](#)

Weight Allocation with Only Shaping Rates or Unshaped Logical Interfaces

Logical interfaces with only shaping rates (PIRs) or unshaped logical interfaces (units) are given a weight of 10. A logical interface with a small guaranteed rate (CIR) might get an overall weight less than 10. To allocate a higher share of the excess bandwidth to logical interfaces with a small guaranteed rate in comparison to the logical interfaces with only shaping rates configured, a minimum weight of 20 is given to the logical interfaces with guaranteed rates configured.

For example, a logical interface configuration with five units is shown in [Table 19 on page 115](#).

Table 19: Allocating Weights with PIR and CIR on Logical Interfaces

Logical Interface (Unit)	Traffic Control Profile	WRR Percentages	Weights
Unit 1	PIR 100 Mbps	95, 0, 0, 5	10, 1, 1, 1
Unit 2	CIR 20 Mbps	25, 25, 25, 25	64, 64, 64, 64
Unit 3	PIR 40 Mbps, CIR 20 Mbps	50, 30, 15, 5	128, 76, 38, 13
Unit 4	Unshaped	95, 0, 0, 5	10, 1, 1, 1
Unit 5	CIR 1 Mbps	95, 0, 0, 5	10, 1, 1, 1

The weights for these units are calculated as follows:

- The excess bandwidth-sharing proportional rate is the maximum CIR among all the logical interfaces which is 20 Mbps (unit 2).
- Unit 1 has a PIR and unit 4 is unshaped. The weight for these units is 10.
- The weight for unit 1 queue 0 is 9.5 ($10 \times 95\%$), which translates to a hardware weight of 10.
- The weight for unit 1 queue 1 is 0 ($0 \times 0\%$) but though the weight is zero, a weight of 1 is assigned to give minimal bandwidth to queues with zero WRR.
- Unit 5 has a very small CIR (1 Mbps), and a weight of 20 is assigned to units with a small CIR.
- The weight for unit 5 queue 0 is 19 ($20 \times 95\%$), which translates to a hardware weight of 18.

- Unit 3 has a CIR of 20 Mbps, which is the same as the excess bandwidth-sharing proportional rate, so it has a total weight of 255.
- The weight of unit 3 queue 0 is 127.5 ($255 \times 50\%$), which translates to a hardware weight of 128.

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Excess Bandwidth Sharing and Minimum Logical Interface Shaping | 111](#)

[Excess Bandwidth Sharing Proportional Rates | 112](#)

[Calculated Weights Mapped to Hardware Weights | 113](#)

[Shared Bandwidth Among Logical Interfaces | 116](#)

Shared Bandwidth Among Logical Interfaces

As a simple example showing how bandwidth is shared among the logical interfaces, assume that all traffic is sent on queue 0. Assume also that there is a 40-Mbps load on all of the logical interfaces. Configuration details are shown in [Table 20 on page 116](#).

Table 20: Example of Shared Bandwidth Among Logical Interfaces

Logical Interface (Unit)	Traffic Control Profile	WRR Percentages	Weights
Unit 1	PIR 100 Mbps	95, 0, 0, 5	10, 1, 1, 1
Unit 2	CIR 20 Mbps	25, 25, 25, 25	64, 64, 64, 64
Unit 3	PIR 40 Mbps, CIR 20 Mbps	50, 30, 15, 5	128, 76, 38, 13
Unit 4	Unshaped	95, 0, 0, 5	10, 1, 1, 1

When the port is shaped at 40 Mbps, because units 2 and 3 have a guaranteed rate (CIR) configured, both units 2 and 3 get 20 Mbps of shared bandwidth.

When the port is shaped at 100 Mbps, because units 2 and 3 have a guaranteed rate (CIR) configured, each of them can transmit 20 Mbps. On units 1, 2, 3, and 4, the 60 Mbps of excess bandwidth is shaped according to the values shown in [Table 21 on page 117](#).

Table 21: First Example of Bandwidth Sharing

Logical Interface (Unit)	Calculation	Bandwidth
1	$10 / (10+64+128+10) \times 60 \text{ Mbps}$	2.83 Mbps
2	$64 / (10+64+128+10) \times 60 \text{ Mbps}$	18.11 Mbps
3	$128 / (10+64+128+10) \times 60 \text{ Mbps}$	36.22 Mbps
4	$10 / (10+64+128+10) \times 60 \text{ Mbps}$	2.83 Mbps

However, unit 3 only has 20 Mbps extra (PIR and CIR) configured. This means that the leftover bandwidth of 16.22 Mbps (36.22 Mbps – 20 Mbps) is shared among units 1, 2, and 4. This is shown in [Table 22 on page 117](#).

Table 22: Second Example of Bandwidth Sharing

Logical Interface (Unit)	Calculation	Bandwidth
1	$10 / (10+64+128+10) \times 16.22 \text{ Mbps}$	1.93 Mbps
2	$64 / (10+64+128+10) \times 16.22 \text{ Mbps}$	12.36 Mbps
4	$10 / (10+64+128+10) \times 16.22 \text{ Mbps}$	1.93 Mbps

Finally, [Table 23 on page 117](#) shows the resulting allocation of bandwidth among the logical interfaces when the port is configured with a 100-Mbps shaping rate.

Table 23: Final Example of Bandwidth Sharing

Logical Interface (Unit)	Calculation	Bandwidth
1	2.83 Mbps + 1.93 Mbps	4.76 Mbps

Table 23: Final Example of Bandwidth Sharing (*Continued*)

Logical Interface (Unit)	Calculation	Bandwidth
2	20 Mbps + 18.11 Mbps + 12.36 Mbps	50.47 Mbps
3	20 Mbps + 20 Mbps	40 Mbps
4	2.83 Mbps + 1.93 Mbps	4.76 Mbps

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Excess Bandwidth Sharing and Minimum Logical Interface Shaping | 111](#)

[Excess Bandwidth Sharing Proportional Rates | 112](#)

[Calculated Weights Mapped to Hardware Weights | 113](#)

[Weight Allocation with Only Shaping Rates or Unshaped Logical Interfaces | 115](#)

Example: Configuring Class-of-Service Schedulers on a Security Device

IN THIS SECTION

- [Requirements | 119](#)
- [Overview | 119](#)
- [Configuration | 120](#)
- [Verification | 124](#)

This example shows how to configure CoS schedulers on a device.

Requirements

Before you begin, determine the buffer size allocation method to use. See ["Scheduler Buffer Size Overview" on page 125](#).

Overview

An individual device interface has multiple queues assigned to store packets temporarily before transmission. To determine the order in which to service the queues, the device uses a round-robin scheduling method based on priority and the queue's weighted round-robin (WRR) credits. Junos OS schedulers allow you to define the priority, bandwidth, delay buffer size, rate control status, and RED drop profiles to be applied to a particular queue for packet transmission.

You configure schedulers to assign resources, priorities, and drop profiles to output queues. By default, only queues 0 and 3 have resources assigned.

NOTE: Juniper Network devices support hierarchical schedulers, including per-unit schedulers.

In this example, you configure a best-effort scheduler called be-scheduler. You set the priority as low and the buffer size to 40. You set the be-scheduler transmit-rate remainder percentage to 40. You configure an expedited forwarding scheduler called ef-scheduler and set the priority as high and the buffer size to 10. You set the ef-scheduler transmit-rate remainder percentage to 50.

Then you configure an assured forwarding scheduler called af-scheduler and set the priority as high and buffer size to 45. You set an assured forwarding scheduler transmit rate to 45. You then configure a drop profile map for assured forwarding as low and high priority. (DiffServ can have a RED drop profile associated with assured forwarding.)

Finally, you configure a network control scheduler called nc-scheduler and set the priority as low and buffer size to 5. You set a network control scheduler transmit rate to 5.

[Table 24 on page 119](#) shows the schedulers created in this example.

Table 24: Sample Schedulers

Scheduler	For CoS Traffic Type	Assigned Priority	Allocated Portion of Queue Buffer	Allocated Portion of Remainder (Transmit Rate)
be-scheduler	Best-effort traffic	Low	40 percent	40 percent

Table 24: Sample Schedulers (*Continued*)

Scheduler	For CoS Traffic Type	Assigned Priority	Allocated Portion of Queue Buffer	Allocated Portion of Remainder (Transmit Rate)
ef-scheduler	Expedited forwarding traffic	High	10 percent	50 percent
af-scheduler	Assured forwarding traffic	High	45 percent	—
nc-scheduler	Network control traffic	Low	5 percent	—

Configuration

IN THIS SECTION

- [Procedure | 120](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set class-of-service schedulers be-scheduler priority low buffer-size percent 40
set class-of-service schedulers be-scheduler transmit-rate remainder 40
set class-of-service schedulers ef-scheduler priority high buffer-size percent 10
set class-of-service schedulers ef-scheduler transmit-rate remainder 50
set class-of-service schedulers af-scheduler priority high buffer-size percent 45
set class-of-service schedulers af-scheduler transmit-rate percent 45
set class-of-service schedulers af-scheduler drop-profile-map loss-priority low protocol any
drop-profile af-normal
```

```

set class-of-service schedulers af-scheduler drop-profile-map loss-priority high protocol any
drop-profile af-with-PLP
set class-of-service schedulers nc-scheduler priority low buffer-size percent 5
set class-of-service schedulers nc-scheduler transmit-rate percent 5

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure CoS schedulers:

1. Configure a best-effort scheduler.

```

[edit]
user@host# edit class-of-service schedulers be-scheduler

```

2. Specify a best-effort scheduler priority and buffer size.

```

[edit class-of-service schedulers be-scheduler]
user@host# set priority low
user@host# set buffer-size percent 40

```

3. Configure a remainder option for a best-effort scheduler transmit rate.

```

[edit class-of-service schedulers be-scheduler]
user@host# set transmit-rate remainder 40

```

4. Configure an expedited forwarding scheduler.

```

[edit]
user@host# edit class-of-service schedulers ef-scheduler

```

5. Specify an expedited forwarding scheduler priority and buffer size.

```
[edit class-of-service schedulers ef-scheduler]
user@host# set priority high
user@host# set buffer-size percent 10
```

6. Configure a remainder option for an expedited forwarding scheduler transmit rate.

```
[edit class-of-service schedulers ef-scheduler]
user@host# set transmit-rate remainder 50
```

7. Configure an assured forwarding scheduler.

```
[edit]
user@host# edit class-of-service schedulers af-scheduler
```

8. Specify an assured forwarding scheduler priority and buffer size.

```
[edit class-of-service schedulers af-scheduler]
user@host# set priority high
user@host# set buffer-size percent 45
```

9. Configure an assured forwarding scheduler transmit rate.

```
[edit class-of-service schedulers af-scheduler]
user@host# set transmit-rate percent 45
```

10. Configure a drop profile map for assured forwarding low and high priority.

```
[edit class-of-service schedulers af-scheduler]
user@host# set drop-profile-map loss-priority low protocol any drop-profile af-normal
user@host# set drop-profile-map loss-priority high protocol any drop-profile af-with-PLP
```


11. Configure a network control scheduler.

```
[edit]
user@host# edit class-of-service schedulers nc-scheduler
```

12. Specify a network control scheduler priority and buffer size.

```
[edit class-of-service schedulers nc-scheduler]
user@host# set priority low
user@host# set buffer-size percent 5
```

13. Configure a network control scheduler transmit rate.

```
[edit class-of-service schedulers nc-scheduler]
user@host# set transmit-rate percent 5
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
schedulers {
  be-scheduler {
    transmit-rate remainder 40;
    buffer-size percent 40;
    priority low;
  }
  ef-scheduler {
    transmit-rate remainder 50;
    buffer-size percent 10;
    priority high;
  }
  af-scheduler {
    transmit-rate percent 45;
    buffer-size percent 45;
    priority high;
  }
}
```

```

        drop-profile-map loss-priority low protocol any drop-profile af-normal;
        drop-profile-map loss-priority high protocol any drop-profile af-with-PLP;
    }
    nc-scheduler {
        transmit-rate percent 5;
        buffer-size percent 5;
        priority low;
    }
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying Schedulers Configuration | 124](#)

Verifying Schedulers Configuration

Purpose

Verify that the schedulers are configured properly.

Action

From operational mode, enter the `show class-of-service` command.

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Default Scheduler Settings | 108](#)

[Example: Configuring a Large Delay Buffer on a Channelized T1 Interface | 130](#)

[Example: Configuring and Applying Scheduler Maps | 140](#)

[Transmission Scheduling Overview | 109](#)

Scheduler Buffer Size Overview

IN THIS SECTION

- [Maximum Delay Buffer Sizes Available to Channelized T1/E1 Interfaces | 125](#)
- [Maximum Delay Buffer Size for vSRX Interfaces | 127](#)
- [Delay Buffer Size Allocation Methods | 127](#)
- [Delay Buffer Sizes for Queues | 128](#)

Large bursts of traffic from faster interfaces can cause congestion and dropped packets on slower interfaces that have small delay buffers. For example, a Juniper Networks device operating at the edge of the network can drop a portion of the burst traffic it receives on a channelized T1/E1 interface from a Fast Ethernet or Gigabit Ethernet interface on a router at the network core. On Juniper Networks devices, large delay buffers can be configured for both channelized T1/E1 and nonchannelized T1/E1 interfaces.

To ensure that traffic is queued and transmitted properly on slower interfaces, you can configure a buffer size larger than the default maximum.

This section contains the following topics:

Maximum Delay Buffer Sizes Available to Channelized T1/E1 Interfaces

When you enable the large delay buffer feature on interfaces, a larger buffer is available for allocation to scheduler queues. The maximum delay buffer size that is available for an interface depends on the maximum available delay buffer time and the speed of the interface as shown in [Table 25 on page 125](#).

The default values are as follows:

- Clear-channel interface—The default delay buffer time is 500,000 microseconds (0.5 s).
- NxDS0 interface—The default delay buffer time is 1,200,000 microseconds (1.2 s).

Table 25: Maximum Available Delay Buffer Time by Channelized Interface and Rate

Effective Line Rate	Maximum Available Delay Buffer Time
< 4xDS0	4,000,000 microseconds (4 s)

Table 25: Maximum Available Delay Buffer Time by Channelized Interface and Rate *(Continued)*

Effective Line Rate	Maximum Available Delay Buffer Time
< 8xDS0	2,000,000 microseconds (2 s)
< 16xDS0	1,000,000 microseconds (1 s)
<= 32xDS0	500,000 microseconds (0.5 s)
<= 10 mbps	400,000 microseconds (0.4 s)
<= 20 mbps	300,000 microseconds (0.3 s)
<= 30 mbps	200,000 microseconds (0.2 s)
<= 40 mbps	150,000 microseconds (0.15 s)

You can calculate the maximum delay buffer size available for an interface, with the following formula:

$$\text{interface speed} \times \text{maximum delay buffer time} = \text{maximum available delay buffer size}$$

For example, the following maximum delay buffer sizes are available to 1xDS0 and 2xDS0 interfaces:

1xDS0—64 Kbps x 4 s = 256 Kb (32 KB)

2xDS0—128 Kbps x 4 s = 512 Kb (64 KB)

If you configure a delay buffer size larger than the maximum, the system allows you to commit the configuration but displays a system log warning message and uses the default buffer size setting instead of the configured maximum setting.

Maximum Delay Buffer Size for vSRX Interfaces

For a vSRX virtual machine, 1 Gbps interfaces have a default delay buffer time of 1 second, a maximum buffer time of 32 seconds, and a maximum buffer size of 128 MB. Use the following CLI command to set the maximum delay buffer time for a scheduler:

```
set class-of-service schedulers be-scheduler buffer-size temporal 32m
```

On a logical vSRX interface, the delay buffer size for a queue that does not have a specific shaping rate acts as a guaranteed minimum buffer size, and the queue is allowed to grow without any packet drops if the queue size is less than the guaranteed buffer size.

The sum of the guaranteed delay buffer sizes for all the queues acts as a pool that can be shared among the queues that do not have a specific shaping rate.

NOTE: The delay buffers are used to control the size of the queues, but do not represent actual memory. The packet buffer pool contains the actual memory used to store packets.

Packets are tail-dropped (100% probability) from the queue if:

- The total buffer limit would be exceeded.
- The queue size would exceed the total free buffer size.
- The packet buffer pool is less than 25% free and the queue exceeds the guaranteed minimum buffer size.
- The packet buffer pool is only 5% free (or less).

Packets also can be dropped by a RED profile (RED-dropped) if the queue size exceeds the guaranteed buffer size. The queue size will be restricted to be less than or equal to the free shared buffers available.

NOTE: Support for vSRX virtual machines depends on the Junos OS release in your installation.

Delay Buffer Size Allocation Methods

You can specify delay buffer sizes for each queue using schedulers. The queue buffer can be specified as a period of time (microseconds) or as a percentage of the total buffer or as the remaining buffer. [Table 26 on page 128](#) shows different methods that you can specify for buffer allocation in queues.

Table 26: Delay Buffer Size Allocation Methods

Buffer Size Allocation Method	Description
Percentage	A percentage of the total buffer.
Temporal	<p>A period of time, value in microseconds. When you configure a temporal buffer, you must also configure a transmit rate. The system calculates the queue buffer size by multiplying the available bandwidth of the interface times the configured temporal value and transmit rate.</p> <p>When you specify a temporal method, the drop profile is assigned a static buffer and the system starts dropping packets once the queue buffer size is full. By default, the other buffer types are assigned dynamic buffers that use surplus transmission bandwidth to absorb bursts of traffic.</p>
Remainder	<p>The remaining buffer available. The remainder is the percentage buffer that is not assigned to other queues. For example, if you assign 40 percent of the delay buffer to queue 0, allow queue 3 to keep the default allotment of 5 percent, and assign the remainder to queue 7, then queue 7 uses approximately 55 percent of the delay buffer.</p> <p>Optionally, you can specify the percentage of the remainder to be used for allocating the buffer size of the scheduler on a prorated basis. If the remainder percentage is not specified, the remainder value will be shared equally.</p>

Delay Buffer Sizes for Queues

You specify delay buffer sizes for queues using schedulers. The system calculates the buffer size of a queue based on the buffer allocation method you specify for it in the scheduler. See [Table 26 on page 128](#) for different buffer allocation methods and [Table 27 on page 129](#) for buffer size calculations.

Table 27: Delay Buffer Allocation Method and Queue Buffer

Buffer Size Allocation Method	Queue Buffer Calculation	Example
Percentage	<i>available interface bandwidth x configured buffer size percentage x maximum delay buffer time = queue buffer</i>	<p>Suppose you configure a queue on a 1xDS0 interface to use 30 percent of the available delay buffer size. The system uses the maximum available delay buffer time (4 seconds) and allocates the queue 9600 bytes of delay buffer:</p> $64 \text{ Kbps} \times 0.3 \times 4 \text{ s} = 76,800 \text{ bits} = 9,600 \text{ bytes}$
Temporal	<i>available interface bandwidth x configured transmit rate percentage x configured temporal buffer size = queue buffer</i>	<p>Suppose you configure a queue on a 1xDS0 interface to use 3,000,000 microseconds (3 seconds) of delay buffer, and you configure the transmission rate to be 20 percent. The queue receives 4800 bytes of delay buffer:</p> $64 \text{ Kbps} \times 0.2 \times 3 \text{ s} = 38,400 \text{ bits} = 4,800 \text{ bytes}$ <p>If you configure a temporal value that exceeds the maximum available delay buffer time, the queue is allocated the buffer remaining after buffers are allocated for the other queues. Suppose you configure a temporal value of 6,000,000 microseconds on a 1xDS0 interface. Because this value exceeds the maximum allowed value of 4,000,000 microseconds, the queue is allocated the remaining delay buffer.</p>

When you specify the buffer size as a percentage, the system ignores the transmit rate and calculates the buffer size based only on the buffer size percentage.

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Default Scheduler Settings | 108](#)

[Example: Configuring Class-of-Service Schedulers on a Security Device | 118](#)

[Example: Configuring a Large Delay Buffer on a Channelized T1 Interface | 130](#)

[Example: Configuring and Applying Scheduler Maps | 140](#)

[Transmission Scheduling Overview | 109](#)

Example: Configuring a Large Delay Buffer on a Channelized T1 Interface

IN THIS SECTION

- [Requirements | 130](#)
- [Overview | 130](#)
- [Configuration | 130](#)
- [Verification | 133](#)

This example shows how to configure a large delay buffer on a channelized T1 interface to help slower interfaces avoid congestion and packet dropping when they receive large bursts of traffic.

Requirements

Before you begin, enable the large buffer feature on the channelized T1/E1 PIM and then configure a buffer size for each queue in the CoS scheduler. See ["Scheduler Buffer Size Overview" on page 125](#).

Overview

On devices, you can configure large delay buffers on channelized T1/E1 interfaces. Each channelized T1/E1 interface can be configured as a single clear channel, or for channelized (NxDS0) operation, where N denotes channels 1 to 24 for a T1 interface and channels 1 to 32 for an E1 interface.

In this example, you specify a queue buffer of 30 percent in scheduler `be-scheduler` and associate the scheduler to a defined forwarding class `be-class` using scheduler map `large-buf-sched-map`. Finally, you apply the scheduler map to channelized T1 interface `t1-3/0/0`.

Configuration

IN THIS SECTION

- [Procedure | 131](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set chassis fpc 3 pic 0 q-pic-large-buffer
set class-of-service schedulers be-scheduler buffer-size percent 30
set class-of-service scheduler-maps large-buf-sched-map forwarding-class be-class scheduler be-scheduler
set class-of-service interfaces t1-3/0/0 unit 0 scheduler-map large-buf-sched-map
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure a large delay buffer on a channelized T1 interface:

1. Enable the large buffer size feature on the channelized T1 interface.

```
[edit]
user@host# edit chassis
user@host# set fpc 3 pic 0 q-pic-large-buffer
```

2. Create best-effort traffic and specify a buffer size.

```
[edit]
user@host# edit class-of-service
user@host# set schedulers be-scheduler buffer-size percent 30
```

3. Configure the scheduler map to associate schedulers with defined forwarding classes.

```
[edit class-of-service]
user@host# set scheduler-maps large-buf-sched-map forwarding-class be-class scheduler be-
scheduler
```

4. Apply the scheduler map to the channelized T1 interface.

```
[edit class-of-service]
user@host# set interfaces t1-3/0/0 unit 0 scheduler-map large-buf-sched-map
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` and `show chassis` commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
interfaces {
  t1-3/0/0 {
    unit 0 {
      scheduler-map large-buf-sched-map;
    }
  }
}
scheduler-maps {
  large-buf-sched-map {
    forwarding-class be-class scheduler be-scheduler;
  }
}
schedulers {
  be-scheduler {
    buffer-size percent 30;
  }
}
[edit]
user@host# show chassis
fpc 3 {
```

```
    pic 0 {  
        q-pic-large-buffer;  
    }  
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying Large Delay Buffers Configuration | 133](#)

Verifying Large Delay Buffers Configuration

Purpose

Verify that the large delay buffers are configured properly.

Action

From configuration mode, enter the `show class-of-service` and `show chassis` commands.

RELATED DOCUMENTATION

[Schedulers Overview | 102](#)

[Default Scheduler Settings | 108](#)

[Example: Configuring Class-of-Service Schedulers on a Security Device | 118](#)

[Example: Configuring and Applying Scheduler Maps | 140](#)

[Transmission Scheduling Overview | 109](#)

Configuring Large Delay Buffers in CoS

You can configure very large delay buffers using the `buffer-size-temporal` command combined with the `q-pic-large-buffer` command. The `buffer-size temporal` option in combination with `q-pic-large-buffer` can create extra-large delay buffer allocations for one or several queues on an interface.

NOTE: If the configured buffer size is too low, the buffer size for the forwarding class defaults to 9192 and the following log message is displayed: “fwdd_cos_set_delay_bandwidth:queue:16 delay buffer size (1414) too low, setting to default 9192.”

Configuring Large Delay Buffers

The following configuration applies to the examples that follow:

1. Configure two VLANs (one ingress, one egress) on one interface. No interface shaping rate is initially defined for this configuration.

```
[edit]
set interfaces ge-0/0/3 per-unit-scheduler
set interfaces ge-0/0/3 vlan-tagging
set interfaces ge-0/0/3 unit 102 vlan-id 102
set interfaces ge-0/0/3 unit 102 family inet address 203.0.113.2/24
set interfaces ge-0/0/3 unit 201 vlan-id 201
set interfaces ge-0/0/3 unit 201 family inet address 198.51.100.2/24
set routing-options static route 192.02.1/32 next-hop 198.51.100.3
```

2. Enable the `q-pic-large-buffer` option on the same PIC, in addition to the `buffer-size temporal` option on the queue, to create a large buffer on the queue:

```
[edit]
set chassis fpc 0 pic 0 q-pic-large-buffer
```

NOTE: The CLI does not provide a warning when you use `buffer-size temporal` without `q-pic-large-buffer`. When you use `buffer-size temporal`, verify that the configuration also includes the `q-pic-large buffer` command.

3. Define four forwarding-classes (queue names) for the four queues:

```
[edit]
set class-of-service forwarding-classes queue 0 be-Queue0
set class-of-service forwarding-classes queue 1 video-Queue1
set class-of-service forwarding-classes queue 2 voice-Queue2
set class-of-service forwarding-classes queue 3 nc-Queue3
```

4. Configure the forwarding classes (queue names) included in a scheduler map, applied to the egress VLAN:

```
[edit]
set class-of-service interfaces ge-0/0/3 unit 201 scheduler-map schedMapM
set class-of-service scheduler-maps schedMapM forwarding-class be-Queue0 scheduler be-Scheduler0
set class-of-service scheduler-maps schedMapM forwarding-class video-Queue1 scheduler video-Scheduler1
set class-of-service scheduler-maps schedMapM forwarding-class voice-Queue2 scheduler voice-Scheduler2
set class-of-service scheduler-maps schedMapM forwarding-class nc-Queue3 scheduler nc-Scheduler3
```

5. Set the queue priorities. Only queue priorities are initially defined, not transmit rates or buffer sizes.

```
[edit]
set class-of-service schedulers be-Scheduler0 priority low
set class-of-service schedulers video-Scheduler1 priority medium-low
set class-of-service schedulers voice-Scheduler2 priority medium-high
set class-of-service schedulers nc-Scheduler3 priority high
```

Example: Simple Configuration Using Four Queues

This configuration allocates 12,500,000 bytes of buffer for each of the four queues. To avoid exceeding the limits of the delay buffer calculation, this initial example has no interface shaping rate, scheduler transmit rate, or scheduler buffer size percent configuration.

1. Specify the maximum 4-second delay buffer on each of the four queues:

```
[edit]
set class-of-service schedulers be-Scheduler0 buffer-size temporal 4m
set class-of-service schedulers video-Scheduler1 buffer-size temporal 4m
set class-of-service schedulers voice-Scheduler2 buffer-size temporal 4m
set class-of-service schedulers nc-Scheduler3 buffer-size temporal 4m
```

Specifying `buffer-size temporal` on some or all queues uses implicit (default) or explicit transmit rate percentages as the buffer-size percentages of the temporal values for those queues. Because there are no explicitly specified transmit rate percentages, divide 100 percent by the number of configured queues (queues with schedulers configured in the scheduler map) to get the implicit (default) per-queue transmit rate percentages. Each queue gets an implicit (default) transmit rate of $100\% / 4 = 25\%$.

In this example, specifying the maximum 4-second delay on each queue, with no shaping rate on the interface and implicit (default) per-queue transmit rates of 25 percent, the total buffer for all temporal 4m queues on an interface = 4 seconds * 100,000,000 maximum interface bps / 8 bits/byte = 4 seconds * 12,500,000 bytes = 50,000,000 bytes. Each queue specifying temporal 4m gets $25\% * 50,000,000 = 12,500,000$ bytes.

2. Add a shaping rate of 4 Mbps to the interface:

```
[edit]
set class-of-service interfaces ge-0/0/3 unit 201 shaping-rate 4m
```

The total buffer for all temporal 4m queues on an interface = 4 sec * 4,000,000 bps shaping-rate / 8 bits/byte = 4 sec * 500,000 bytes = 2,000,000 bytes. Therefore, each queue specifying temporal 4m receives $25\% * 2,000,000 = 500,000$ bytes.

When using `buffer-size temporal` on any interface queues, if you also use the `transmit-rate percent` command, or the `buffer-size percent` command, or both commands, on any of the interface queues, the buffer size calculations become more complex and the limits of available queue depth might be reached. If the configuration attempts to exceed the available memory, then at commit time two system log messages appear in the `/var/log/messages` file, the interface class-of-service configuration is ignored, and the interface class-of-service configuration reverts to the two-queue defaults:

```
Mar 11 11:02:10.239 elma-n4 elma-n4 COSMAN_FWDD: queue mem underflow for ge-0/0/3
Mar 11 11:02:10.240 elma-n4 elma-n4 cosman_compute_install_sched_params: Failed to compute
scheduler params for ge-0/0/3.Hence retaining defaults
```

When configuring `buffer-size temporal` along with `transmit-rate percent` or `buffer-size percent`, or both, you must monitor the system log to see whether the available queue depth limit has been reached.

Example: Using `buffer-size temporal` with `Explicit transmit-rate percent` Commands

To add explicit transmit rates to all four queues:

```
[edit]
set class-of-service schedulers be-Scheduler0 transmit-rate percent 10
set class-of-service schedulers video-Scheduler1 transmit-rate percent 25
set class-of-service schedulers voice-Scheduler2 transmit-rate percent 25
set class-of-service schedulers nc-Scheduler3 transmit-rate percent 40
```

For example, if an interface is shaped to 4 Mbps, the transmit rate percentage of 10 for a queue means that the bandwidth share for the specific queue is 0.4 Mbps. The queues are allocated portions of the 2,000,000 bytes of total buffer available for temporal queues on this interface, proportionally to their transmit rates. The four queues get 200,000, 500,000, 500,000, and 800,000 bytes of delay buffer, respectively.

To avoid exceeding the queue depth limits and triggering system log messages and default configuration behavior, when configuring queues with `buffer-size temporal` and `transmit rate percent` and other (non-temporal) queues with `buffer-size percent`, the following configuration rule must be followed: When one or more queues on an interface are configured with `buffer-size temporal`, the sum of the temporal queues explicitly configured transmit rate percentages plus other non-temporal queues explicitly configured buffer size percentages must not exceed 100 percent.

If the total of the temporal queues transmit rate percentages and the non-temporal queues buffer-size percentages exceeds 100 percent, the `queue mem underflow` and `Failed to compute scheduler params` system log messages appear in the messages log, the explicitly configured CLI CoS configuration for the interface is ignored, and the interface reverts to a two-queue default CoS configuration.

When `buffer-size temporal` is specified on a queue, if `transmit-rate percent` is also configured on the same queue, the queue depth configured is based on the fractional bandwidth for the queue as obtained by the specified `transmit-rate percent`.

In addition to temporal delay times specified for one or more queues using `buffer size temporal`, there is another delay time automatically computed for the entire interface. This interface delay time is distributed across all non-temporal queues, proportionally to their implicit (default) or explicit transmit-rate percentages. If `q-pic-large-buffer` is not enabled, the interface delay time defaults to 100 ms. As shown in [Table 28 on page 138](#), when `q-pic-large-buffer` is enabled, interface delay time is calculated according to configured shaping rate for the interface. Because the shaping-rate configured in the example above was 4 Mbps (> 2,048,000 bps), the interface delay time for the configuration is 100 msec.

Table 28: Interface Delay Times Enabled By q-pic-large-buffer

Configured Shaping Rate (bps)	Interface Delay Time (msec) Used for Non-Temporal Queues with q-pic-large-buffer Enabled	Default Delay Time Used (msec) Without q-pic-large-buffer
64,000-255,999	4000	100
256,000 - 511,999	2000	100
512,000 - 1,023,999	1000	100
1,024,000 - 2,047,999	500	100
>= 2,048,000	100	100

This example properly computes the delay buffer limits on both temporal and non-temporal queues:

1. Substitute `buffer-size percent` for `buffer-size temporal` on queues 0 and 1:

```
[edit]
delete class-of-service schedulers be-Scheduler0 buffer-size temporal 4m
delete class-of-service schedulers video-Scheduler1 buffer-size temporal 4m
set class-of-service schedulers be-Scheduler0 buffer-size percent 10
set class-of-service schedulers video-Scheduler1 buffer-size percent 25
```

This deletes the requirement for hard-specified 4 seconds of buffering and replaces it with a proportional limit of 10 percent (or 25 percent) of the total interface delay time for the non-temporal queues. In both cases, the queue depth is calculated based on the share of the interface bandwidth for the specific queues. Total Interface Non-Temporal Queue Memory = shaping-rate * Interface delay time (Table 1) = 4 Mbps * 0.1 seconds = 500,000 bytes per second * 0.1 seconds = 50,000 bytes, therefore queues 0 and 1 get 10% * 50,000 = 5000 bytes and 25% * 50,000 = 12,500 bytes of delay buffer, respectively.

2. Configure `buffer-size temporal` on queues 2 and 3:

```
[edit]
set class-of-service schedulers voice-Scheduler2 buffer-size temporal 4m
set class-of-service schedulers voice-Scheduler2 transmit-rate percent 25
```



```
set class-of-service schedulers nc-Scheduler3    buffer-size temporal 4m
set class-of-service schedulers nc-Scheduler3    transmit-rate percent 40
```

Queues 2 and 3 still get 500,000 and 800,000 bytes of delay buffer, respectively, as previously calculated. This configuration obeys the rule that the sum of the temporal queues transmit rate percentages ($25\% + 40\% = 65\%$), plus the non-temporal queues buffer size percentages ($10\% + 25\% = 35\%$) do not exceed 100% ($65\% + 35\% \leq 100\%$).

The following example exceeds the delay buffer limit, triggering the system log messages and the default, two-queue class-of-service behavior.

Increase the buffer-size percentage from 25 percent to 26 percent for non-temporal queue 1:

```
[edit]
set class-of-service schedulers video-Scheduler1 buffer-size percent 26
```

This violates the configuration rule that the sum of the non-temporal queues buffer-size percentages ($10\% + 26\% = 36\%$), plus the temporal queues transmit rate percentages ($25\% + 40\% = 65\%$) now exceed 100% ($36\% + 65\% = 101\%$). Therefore, the following two system log messages appear in the `/var/log/messages` file:

```
Mar 23 18:08:23 elma-n4 elma-n4 COSMAN_FWDD: %PFE-3: queue mem underflow for ge-0/0/3 q_num(3)
Mar 23 18:08:23 elma-n4 elma-n4 cosman_compute_install_sched_params: %PFE-3: Failed to compute
scheduler params for ge-0/0/3.Hence retaining defaults
```

When the delay buffer limits are exceeded, the CLI-configured class-of-service settings are not used and the default class-of-service configuration (the default scheduler-map) is assigned to the interface. This uses two queues: the forwarding-class best-effort (queue 0) has transmit rate percent 95 and buffer-size percent 95 and the forwarding-class network-control (queue 3) has the transmit rate percent 5 and buffer-size percent 5.

```
queue 0: 1,187,500 Bytes
queue 1:    9,192 Bytes
queue 2:    9,192 Bytes
queue 3:   62,500 Bytes
```

RELATED DOCUMENTATION

[Example: Configuring and Applying Scheduler Maps | 140](#)

[Scheduler Buffer Size Overview | 125](#)

Example: Configuring and Applying Scheduler Maps

IN THIS SECTION

- [Requirements | 140](#)
- [Overview | 140](#)
- [Configuration | 141](#)
- [Verification | 143](#)

This example shows how to configure and apply a scheduler map to a device's interface.

Requirements

Before you begin:

- Create and configure the forwarding classes. See *Configuring a Custom Forwarding Class for Each Queue*.
- Create and configure the schedulers. See ["Example: Configuring Class-of-Service Schedulers on a Security Device" on page 118](#).

Overview

After you define a scheduler, you can include it in a scheduler map, which maps a specified forwarding class to a scheduler configuration. You configure a scheduler map to assign a forwarding class to a scheduler, and then apply the scheduler map to any interface that must enforce DiffServ CoS.

After they are applied to an interface, the scheduler maps affect the hardware queues, packet schedulers, and RED drop profiles.

In this example, you create the scheduler map `diffserv-cos-map` and apply it to the device's Ethernet interface `ge-0/0/0`. The map associates the `mf-classifier` forwarding classes to the schedulers as shown in [Table 29 on page 141](#).

Table 29: Sample diffserv-cos-map Scheduler Mapping

mf-classifier Forwarding Class	For CoS Traffic Type	diffserv-cos-map Scheduler
be-class	Best-effort traffic	be-scheduler
ef-class	Expedited forwarding traffic	ef-scheduler
af-class	Assured forwarding traffic	af-scheduler
nc-class	Network control traffic	nc-scheduler

Configuration

IN THIS SECTION

- [Procedure | 141](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set class-of-service scheduler-maps diffserv-cos-map forwarding-class be-class scheduler be-scheduler
set class-of-service scheduler-maps diffserv-cos-map forwarding-class ef-class scheduler ef-scheduler
set class-of-service scheduler-maps diffserv-cos-map forwarding-class af-class scheduler af-scheduler
set class-of-service scheduler-maps diffserv-cos-map forwarding-class nc-class scheduler nc-scheduler
set class-of-service interfaces ge-0/0/0 unit 0 scheduler-map diffserv-cos-map
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure and apply a scheduler map to a device's interface:

1. Configure a scheduler map for DiffServ CoS.

```
[edit class-of-service]
user@host# edit scheduler-maps diffserv-cos-map
```

2. Configure a best-effort forwarding class and scheduler.

```
[edit class-of-service scheduler-maps diffserv-cos-map]
user@host# set forwarding-class be-class scheduler be-scheduler
```

3. Configure an expedited forwarding class and scheduler.

```
[edit class-of-service scheduler-maps diffserv-cos-map]
user@host# set forwarding-class ef-class scheduler ef-scheduler
```

4. Configure an assured forwarding class and scheduler.

```
[edit class-of-service scheduler-maps diffserv-cos-map]
user@host# set forwarding-class af-class scheduler af-scheduler
```

5. Configure a network control class and scheduler.

```
[edit class-of-service scheduler-maps diffserv-cos-map]
user@host# set forwarding-class nc-class scheduler nc-scheduler
```

6. Apply the scheduler map to an interface.

```
[edit class-of-service]
user@host# set interfaces ge-0/0/0 unit 0 scheduler-map diffserv-cos-map
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
interfaces {
  ge-0/0/0 {
    unit 0 {
      scheduler-map diffserv-cos-map;
    }
  }
}
scheduler-maps {
  diffserv-cos-map {
    forwarding-class be-class scheduler be-scheduler;
    forwarding-class ef-class scheduler ef-scheduler;
    forwarding-class af-class scheduler af-scheduler;
    forwarding-class nc-class scheduler nc-scheduler;
  }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying the Scheduler Map Configuration](#) | 143

Verifying the Scheduler Map Configuration

Purpose

Verify that scheduler maps are configured properly.

Action

From operational mode, enter the `show class-of-service` command.

RELATED DOCUMENTATION

Default Schedulers Overview

Configuring Schedulers

Configuring Scheduler Maps

Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs

By default, output scheduling is not enabled on logical interfaces. Logical interfaces without shaping configured share a default scheduler. This scheduler has a committed information rate (CIR) that equals 0. (The CIR is the guaranteed rate.) The default scheduler has a peak information rate (PIR) that equals the physical interface shaping rate.

NOTE: If you apply a shaping rate, you must keep in mind that the transit statistics for physical interfaces are obtained from the packet forwarding engine, but the traffic statistics are supplied by the PIC. Therefore, if shaping is applied to the PIC, the count of packets in the transit statistics fields do not always agree with the counts in the traffic statistics. For example, the IPv6 transit statistics will not necessarily match the traffic statistics on the interface. However, at the logical interface (DLCI) level, both transit and traffic statistics are obtained from the Packet Forwarding Engine and will not show any difference.

Logical interface scheduling (also called *per-unit scheduling*) allows you to enable multiple output queues on a logical interface and associate customized output scheduling and shaping for each queue.

NOTE: Ingress scheduling does not support logical interface scheduling.

You can configure logical interface scheduling on the following PICs:

- Multiservices and Services PICs , on link services IQ (lsq-) interfaces
- Channelized E1 IQ PIC
- Channelized OC3 IQ PIC

- Channelized OC12 IQ PIC (Per-unit scheduling is not supported on T1 interfaces configured on this PIC.)
- Channelized STM1 IQ PIC
- Channelized T3 IQ PIC
- E3 IQ PIC
- Gigabit Ethernet IQ PIC
- Gigabit Ethernet IQ2 PIC
- IQE PICs

You can configure logical interface scheduling on the following MICs and MPCs as well as any MPC that contains a queuing chip:

- 16x10GE MPC
- MPC3E:
 - 2x10GE MIC with XFP
 - 10x10GE MIC with SFP+
 - 2x40GE MIC with QSFP+
 - 1x100GE MIC with CXP
- MPC4E:
 - 32x10GE with SFPP
 - 2x100GE + 8x10GE with SFPP
- MPC6E:
 - 24x10GE MIC with SFPP
 - 24x10GE MIC with SFPP OTN
 - 2x100GE MIC with CFP2 OTN
 - 4x100GE MIC with CXP

For Channelized and Gigabit Ethernet IQ PICs only, you can configure a shaping rate for a VLAN or DLCI and oversubscribe the physical interface by including the `shaping-rate` statement at the `[edit class-of-service traffic-control-profiles]` hierarchy level. With this configuration approach, you can independently control the delay-buffer rate, as described in *Oversubscribing Interface Bandwidth*.

Physical interfaces (for example, `t3-0/0/0`, `t3-0/0/0:0`, and `ge-0/0/0`) support scheduling with any encapsulation type pertinent to that physical interface. For a single port, you cannot apply scheduling to the physical interface if you apply scheduling to one or more of the associated logical interfaces.

For Gigabit Ethernet IQ2 PIC PICs only, you can configure hierarchical traffic shaping, meaning the shaping is performed on both the physical interface and the logical interface. You can also configure input traffic scheduling and shared scheduling. For more information, see *CoS on Enhanced IQ2 PICs Overview*.

Logical interfaces (for example, `t3-0/0/0.0`, `ge-0/0/0.0`, and `t1-0/0/0:0.1`) support scheduling on DLCIs or VLANs only. Furthermore, logical interface scheduling is not supported on PICs that do not have IQ.

NOTE: In the Junos OS implementation, the term *logical interfaces* generally refers to interfaces you configure by including the unit statement at the `[edit interfaces interface-name]` hierarchy level. As such, logical interfaces have the *logical* descriptor at the end of the interface name, as in `ge-0/0/0.1` or `t1-0/0/0:0.1`, where the logical unit number is 1.

Although channelized interfaces are generally thought of as logical or virtual, the Junos OS sees T3, T1, and NxDS0 interfaces within a channelized IQ PIC as physical interfaces. For example, both `t3-0/0/0` and `t3-0/0/0:1` are treated as physical interfaces by the Junos OS. In contrast, `t3-0/0/0.2` and `t3-0/0/0:1.2` are considered logical interfaces because they have the `.2` at the end of the interface names.

Within the `[edit class-of-service]` hierarchy level, you cannot use the *.logical* descriptor when you assign properties to logical interfaces. Instead, you must include the `unit` statement in the configuration. For example:

```
[edit class-of-service]
user@host# set interfaces t3-0/0/0 unit 0 scheduler-map map1
```

Table 30 on page 146 shows the interfaces/PICs that support fine-grained queuing and scheduling.

Table 30: Fine-Grained Queuing and Scheduling Support by Interface or PIC Type

Interface Type	PIC Type	Supported	Example Configuration
IQ PICs			

Table 30: Fine-Grained Queuing and Scheduling Support by Interface or PIC Type (Continued)

Interface Type	PIC Type	Supported	Example Configuration
Physical interfaces	ATM2 IQ	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces at-0/0/0] scheduler-map map-1;</pre>
Channelized interfaces configured on IQ PICs	Channelized DS3 IQ	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces t1-0/0/0:1] scheduler-map map-1;</pre>
Logical interfaces (DLCIs and VLANs only) configured on IQ PICs	Gigabit Ethernet IQ with VLAN tagging enabled	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;</pre>
	E3 IQ with Frame Relay encapsulation	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces e3-0/0/0 unit 1] scheduler-map map-1;</pre>
	Channelized OC3 IQ with Frame Relay encapsulation	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces t1-1/0/0:1:1 unit 0] scheduler-map map-1;</pre>
	Channelized STM1 IQ with Frame Relay encapsulation	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces e1-0/0/0:1 unit 1] scheduler-map map-1;</pre>

Table 30: Fine-Grained Queuing and Scheduling Support by Interface or PIC Type (Continued)

Interface Type	PIC Type	Supported	Example Configuration
	Channelized T3 IQ with Frame Relay encapsulation	Yes	Example of supported configuration: [edit class-of-service interfaces t1-0/0/0 unit 1] scheduler-map map-1;
Logical interfaces configured on IQ PICs (interfaces that are not DLCIs or VLANs)	E3 IQ PIC with Cisco HDLC encapsulation	No	No
	ATM2 IQ PIC with LLC/SNAP encapsulation	No	No
	Channelized OC12 IQ PIC with PPP encapsulation	No	No
Non-IQ PICs			
Physical interfaces	T3	Yes	Example of supported configuration: [edit class-of-service interfaces t3-0/0/0] scheduler-map map-1;
Channelized OC12 PIC	Channelized OC12	Yes	Example of supported configuration: [edit class-of-service interfaces t3-0/0/0:1] scheduler-map map-1;

Table 30: Fine-Grained Queuing and Scheduling Support by Interface or PIC Type (Continued)

Interface Type	PIC Type	Supported	Example Configuration
Channelized interfaces (except the Channelized OC12 PIC)	Channelized STM1	No	No
Logical interfaces	Fast Ethernet	No	No
	Gigabit Ethernet	No	No
	ATM1	No	No
	Channelized OC12	No	No

[Table 31 on page 149](#) shows the MICs and MPCs that support fine-grained queuing and scheduling.

Table 31: Fine-Grained Queuing and Scheduling Support by MIC or MPC Type

MPC	MIC	Supported	Example Configuration
Fixed Configuration MPCs			
16x10GE MPC	No	Yes	[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;
32x10GE MPC4E	No	Yes	[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;
2x100GE + 8x10GE MPC4E	No	Yes	[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;

Table 31: Fine-Grained Queuing and Scheduling Support by MIC or MPC Type (Continued)

MPC	MIC	Supported	Example Configuration
6x40GE + 24x10GE MPC5E	No	No	No
6x40GE + 24x10GE MPC5EQ	No	Yes	[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;
2x100GE + 4x10GE MPC5E	No	No	No
2x100GE + 4x10GE MPC5EQ	No	Yes	[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;
MPCs			
MPC1	No	No	No
MPC1E	No	No	No
MPC1 Q	Any supported MIC	Yes	Example of supported configuration: [edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;
MPC1E Q	Any supported MIC	Yes	Example of supported configuration: [edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;
MPC2	No	No	No
MPC2E	No	No	No

Table 31: Fine-Grained Queuing and Scheduling Support by MIC or MPC Type *(Continued)*

MPC	MIC	Supported	Example Configuration
MPC2 Q	Any supported MIC	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;</pre>
MPC2E Q	Any supported MIC	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;</pre>
MPC2 EQ	Any supported MIC	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;</pre>
MPC2E EQ	Any supported MIC	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces ge-0/0/0 unit 1] scheduler-map map-1;</pre>
MPC2E P	No	No	No
MPC3E	10-Gigabit Ethernet MIC with SFP+	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces xe-0/0/0 unit 1] scheduler-map map-1;</pre>
	40-Gigabit Ethernet MIC with QSFP+	Yes	<p>Example of supported configuration:</p> <pre>[edit class-of-service interfaces et-0/0/0 unit 1] scheduler-map map-1;</pre>

Table 31: Fine-Grained Queuing and Scheduling Support by MIC or MPC Type (Continued)

MPC	MIC	Supported	Example Configuration
	100-Gigabit Ethernet MIC with CXP	Yes	Example of supported configuration: [edit class-of-service interfaces et-0/0/0 unit 1] scheduler-map map-1;
MPC6E	Any supported MIC	Yes	Example of supported configuration: [edit class-of-service interfaces et-0/0/0 unit 1] scheduler-map map-1;

To configure scheduling on logical interfaces:

1. Enable per-unit scheduling on the interface by including the `per-unit-scheduler` statement at the [edit interfaces *interface-name*] hierarchy level:

```
[edit interfaces interface-name]
per-unit-scheduler;
```

When including the `per-unit-scheduler` statement, you must also include the `vlan-tagging` statement or the `flexible-vlan-tagging` statement (to apply scheduling to VLANs) or the `encapsulation frame-relay` statement (to apply scheduling to DLCIs) at the [edit interfaces *interface-name*] hierarchy level.

When you include this statement, the maximum number of VLANs supported is 768 on a single-port Gigabit Ethernet IQ PIC. On a dual-port Gigabit Ethernet IQ PIC, the maximum number is 384.

See *Scaling of Per-VLAN Queuing on Non-Queuing MPCs* for scaling information on non-queuing MPCs.

2. Associate a scheduler with the interface by including the `scheduler-map` statement at the [edit class-of-service interfaces *interface-name* unit *logical-unit-number*] hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
scheduler-map map-name;
```

Alternatively, associate a scheduler with the interface by including the `scheduler-map` statement at the [edit class-of-service traffic-control-profiles *traffic control profile name*] hierarchy level and then

include the `output-traffic-control-profile` statement at the [edit class-of-service interfaces *interface name* unit *logical unit number*] hierarchy level.

```
[edit class-of-service traffic-control-profiles traffic control profile name]
scheduler-map map-name;
```

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
output-traffic-control-profile traffic-control-profile-name;
```

3. Configure shaping on the interface by including the `shaping-rate` statement at the [edit class-of-service interfaces *interface-name* unit *logical-unit-number*] hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
shaping-rate rate;
```

NOTE: You can also apply the shaping rate to the traffic control profile.

By default, the logical interface bandwidth is the average of unused bandwidth for the number of logical interfaces that require default bandwidth treatment. You can specify a peak bandwidth rate in bps, either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000). The range is from 1000 through 6,400,000,000,000 bps. For the IQ2 Gigabit Ethernet PIC, the minimum is 80,000 bps, and for the IQ2 10 Gigabit Ethernet PIC, the minimum is 160,000 bps. For the 16x10GE MPC, the minimum is 250,000 bps, and for the MPC3E, MPC4E, and MPC6E, the minimum is 292,000 bps.

For FRF.16 bundles on link services interfaces, only shaping rates based on percentage are supported.

RELATED DOCUMENTATION

per-unit-scheduler

Example: Applying Scheduling and Shaping to VLANs

Example: Applying Scheduler Maps and Shaping Rate to DLCIs

Example: Applying Scheduling and Shaping to VLANs

IN THIS SECTION

- [Requirements | 154](#)
- [Overview | 154](#)
- [Configuration | 155](#)

This example shows how to apply schedulers to individual logical interfaces.

Requirements

This example uses the following hardware and software components:

- Junos OS Release 7.4 or later running on router line cards that support Intelligent Queuing (IQ).
- Junos OS Release 13.2 or later running on MX Series routers containing 16x10GE MPC or MPC3E line cards.
- Junos OS Release 13.3 or later running on MX Series routers containing MPC4E line cards.
- Junos OS Release 15.1 or later running on MX Series routers containing MPC6E line cards.

Overview

By default, output scheduling is not enabled on logical interfaces. Logical interfaces without shaping configured share a default scheduler. *Logical interface scheduling* (also called *per-unit scheduling*) allows you to enable multiple output queues on a logical interface and associate customized scheduling and shaping for each queue.

To enable per-unit scheduling, include the `per-unit-scheduler` statement at the `[edit interfaces interface name]` hierarchy level. When per-unit schedulers are enabled, you can define dedicated schedulers for logical interfaces by including the `scheduler-map` statement at the `[edit class-of-service interfaces interface name unit logical unit number]` hierarchy level. Alternatively, you can include the `scheduler-map` statement at the `[edit class-of-service traffic-control-profiles traffic control profile name]` hierarchy level and then include the `output-traffic-control-profile` statement at the `[edit class-of-service interfaces interface name unit logical unit number]` hierarchy level.

This example shows how to define schedulers for logical interfaces through the use of traffic control profiles.

Configuration

IN THIS SECTION

- [CLI Quick Configuration | 155](#)
- [Procedure | 157](#)
- [Results | 160](#)

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level.

```
set interfaces xe-9/0/3 per-unit-scheduler
set interfaces xe-9/0/3 vlan-tagging
set interfaces xe-9/0/3 unit 1 vlan-id 101
set interfaces xe-9/0/3 unit 1 family inet address 10.1.1.1/24
set interfaces xe-9/0/3 unit 2 vlan-id 102
set interfaces xe-9/0/3 unit 2 family inet address 10.2.1.1/24
set class-of-service classifiers inet-precedence c8 forwarding-class be loss-priority low code-points 000
set class-of-service classifiers inet-precedence c8 forwarding-class ef loss-priority low code-points 001
set class-of-service classifiers inet-precedence c8 forwarding-class af loss-priority low code-points 010
set class-of-service classifiers inet-precedence c8 forwarding-class nc loss-priority low code-points 011
set class-of-service classifiers inet-precedence c8 forwarding-class be1 loss-priority low code-points 100
set class-of-service classifiers inet-precedence c8 forwarding-class ef1 loss-priority low code-points 101
set class-of-service classifiers inet-precedence c8 forwarding-class af1 loss-priority low code-points 110
set class-of-service classifiers inet-precedence c8 forwarding-class nc1 loss-priority low code-points 111
set class-of-service forwarding-classes queue 0 be
set class-of-service forwarding-classes queue 1 ef
```

```

set class-of-service forwarding-classes queue 2 af
set class-of-service forwarding-classes queue 3 nc
set class-of-service forwarding-classes queue 4 be1
set class-of-service forwarding-classes queue 5 ef1
set class-of-service forwarding-classes queue 6 af1
set class-of-service forwarding-classes queue 7 nc1
set class-of-service traffic-control-profiles tcp_ifd shaping-rate 2500000000
set class-of-service traffic-control-profiles tcp_ifd overhead-accounting bytes -20
set class-of-service traffic-control-profiles tcp_gold scheduler-map gold
set class-of-service traffic-control-profiles tcp_gold shaping-rate 2500000000
set class-of-service traffic-control-profiles tcp_gold overhead-accounting bytes -20
set class-of-service traffic-control-profiles tcp_gold guaranteed-rate 1g
set class-of-service traffic-control-profiles tcp_silver scheduler-map silver
set class-of-service traffic-control-profiles tcp_silver shaping-rate 1g
set class-of-service traffic-control-profiles tcp_silver overhead-accounting bytes -20
set class-of-service traffic-control-profiles tcp_silver guaranteed-rate 500m
set class-of-service interfaces xe-9/0/3 output-traffic-control-profile tcp_ifd
set class-of-service interfaces xe-9/0/3 unit 1 output-traffic-control-profile tcp_gold
set class-of-service interfaces xe-9/0/3 unit 2 output-traffic-control-profile tcp_silver
set class-of-service scheduler-maps gold forwarding-class be1 scheduler gold_internet
set class-of-service scheduler-maps gold forwarding-class ef1 scheduler gold_video
set class-of-service scheduler-maps gold forwarding-class af1 scheduler gold_voice
set class-of-service scheduler-maps gold forwarding-class nc1 scheduler gold_reserved
set class-of-service scheduler-maps silver forwarding-class be scheduler silver_internet
set class-of-service scheduler-maps silver forwarding-class ef scheduler silver_video
set class-of-service scheduler-maps silver forwarding-class af scheduler silver_voice
set class-of-service scheduler-maps silver forwarding-class nc scheduler silver_reserved
set class-of-service schedulers gold_internet excess-rate percent 40
set class-of-service schedulers gold_internet buffer-size percent 20
set class-of-service schedulers gold_internet priority low
set class-of-service schedulers gold_video transmit-rate percent 50
set class-of-service schedulers gold_video buffer-size percent 50
set class-of-service schedulers gold_voice shaping-rate percent 10
set class-of-service schedulers gold_voice buffer-size percent 10
set class-of-service schedulers gold_voice priority strict-high
set class-of-service schedulers gold_reserved excess-rate percent 20
set class-of-service schedulers gold_reserved buffer-size percent 10
set class-of-service schedulers gold_reserved priority low
set class-of-service schedulers silver_internet excess-rate percent 40
set class-of-service schedulers silver_internet buffer-size percent 20
set class-of-service schedulers silver_internet priority low
set class-of-service schedulers silver_video transmit-rate percent 50
set class-of-service schedulers silver_video buffer-size percent 50

```

```

set class-of-service schedulers silver_voice shaping-rate percent 10
set class-of-service schedulers silver_voice buffer-size percent 10
set class-of-service schedulers silver_voice priority strict-high
set class-of-service schedulers silver_reserved excess-rate percent 20
set class-of-service schedulers silver_reserved buffer-size percent 10
set class-of-service schedulers silver_reserved priority low

```

Procedure

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the [Junos OS CLI User Guide](#).

1. Configure the device interfaces.

```

[edit interfaces]
user@PE1# set xe-9/0/3 per-unit-scheduler
user@PE1# set xe-9/0/3 vlan-tagging
user@PE1# set xe-9/0/3 unit 1 vlan-id 101
user@PE1# set xe-9/0/3 unit 1 family inet address 10.1.1.1/24
user@PE1# set xe-9/0/3 unit 2 vlan-id 102
user@PE1# set xe-9/0/3 unit 2 family inet address 10.2.1.1/24

```

2. Configure the classifiers.

```

[edit class-of-service]
user@PE1# set classifiers inet-precedence c8 forwarding-class be loss-priority low code-points 000
user@PE1# set classifiers inet-precedence c8 forwarding-class ef loss-priority low code-points 001
user@PE1# set classifiers inet-precedence c8 forwarding-class af loss-priority low code-points 010
user@PE1# set classifiers inet-precedence c8 forwarding-class nc loss-priority low code-points 011
user@PE1# set classifiers inet-precedence c8 forwarding-class be1 loss-priority low code-points 100
user@PE1# set classifiers inet-precedence c8 forwarding-class ef1 loss-priority low code-points 101
user@PE1# set classifiers inet-precedence c8 forwarding-class af1 loss-priority low code-

```

```

points 110
user@PE1# set classifiers inet-precedence c8 forwarding-class nc1 loss-priority low code-
points 111

```

3. Configure the forwarding classes.

```

[edit class-of-service]
user@PE1# set forwarding-classes queue 0 be
user@PE1# set forwarding-classes queue 1 ef
user@PE1# set forwarding-classes queue 2 af
user@PE1# set forwarding-classes queue 3 nc
user@PE1# set forwarding-classes queue 4 be1
user@PE1# set forwarding-classes queue 5 ef1
user@PE1# set forwarding-classes queue 6 af1
user@PE1# set forwarding-classes queue 7 nc1

```

4. Configure the traffic control profiles.

```

[edit class-of-service]
user@PE1# set traffic-control-profiles tcp_ifd shaping-rate 2500000000
user@PE1# set traffic-control-profiles tcp_ifd overhead-accounting bytes -20
user@PE1# set traffic-control-profiles tcp_gold scheduler-map gold
user@PE1# set traffic-control-profiles tcp_gold shaping-rate 2500000000
user@PE1# set traffic-control-profiles tcp_gold overhead-accounting bytes -20
user@PE1# set traffic-control-profiles tcp_gold guaranteed-rate 1g
user@PE1# set traffic-control-profiles tcp_silver scheduler-map silver
user@PE1# set traffic-control-profiles tcp_silver shaping-rate 1g
user@PE1# set traffic-control-profiles tcp_silver overhead-accounting bytes -20
user@PE1# set traffic-control-profiles tcp_silver guaranteed-rate 500m

```

5. Map the traffic control profiles to their respective physical or logical interface.

```

[edit class-of-service]
user@PE1# set interfaces xe-9/0/3 output-traffic-control-profile tcp_ifd
user@PE1# set interfaces xe-9/0/3 unit 1 output-traffic-control-profile tcp_gold
user@PE1# set interfaces xe-9/0/3 unit 2 output-traffic-control-profile tcp_silver

```

6. Configure the scheduler maps.

```
[edit class-of-service]
user@PE1# set scheduler-maps gold forwarding-class be1 scheduler gold_internet
user@PE1# set scheduler-maps gold forwarding-class ef1 scheduler gold_video
user@PE1# set scheduler-maps gold forwarding-class af1 scheduler gold_voice
user@PE1# set scheduler-maps gold forwarding-class nc1 scheduler gold_reserved
user@PE1# set scheduler-maps silver forwarding-class be scheduler silver_internet
user@PE1# set scheduler-maps silver forwarding-class ef scheduler silver_video
user@PE1# set scheduler-maps silver forwarding-class af scheduler silver_voice
user@PE1# set scheduler-maps silver forwarding-class nc scheduler silver_reserved
```

7. Configure the schedulers.

```
[edit class-of-service]
user@PE1# set schedulers gold_internet excess-rate percent 40
user@PE1# set schedulers gold_internet buffer-size percent 20
user@PE1# set schedulers gold_internet priority low
user@PE1# set schedulers gold_video transmit-rate percent 50
user@PE1# set schedulers gold_video buffer-size percent 50
user@PE1# set schedulers gold_voice shaping-rate percent 10
user@PE1# set schedulers gold_voice buffer-size percent 10
user@PE1# set schedulers gold_voice priority strict-high
user@PE1# set schedulers gold_reserved excess-rate percent 20
user@PE1# set schedulers gold_reserved buffer-size percent 10
user@PE1# set schedulers gold_reserved priority low
user@PE1# set schedulers silver_internet excess-rate percent 40
user@PE1# set schedulers silver_internet buffer-size percent 20
user@PE1# set schedulers silver_internet priority low
user@PE1# set schedulers silver_video transmit-rate percent 50
user@PE1# set schedulers silver_video buffer-size percent 50
user@PE1# set schedulers silver_voice shaping-rate percent 10
user@PE1# set schedulers silver_voice buffer-size percent 10
user@PE1# set schedulers silver_voice priority strict-high
user@PE1# set schedulers silver_reserved excess-rate percent 20
user@PE1# set schedulers silver_reserved buffer-size percent 10
user@PE1# set schedulers silver_reserved priority low
```

Results

From configuration mode, confirm your configuration by entering the `show interfaces` and `show class-of-service` commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
interfaces {
  xe-9/0/3 {
    per-unit-scheduler;
    vlan-tagging;
    unit 1 {
      vlan-id 101;
      family inet {
        address 10.1.1.1/24;
      }
    }
    unit 2 {
      vlan-id 102;
      family inet {
        address 10.2.1.1/24;
      }
    }
  }
}
```

```
user@PE1# show class-of-service
class-of-service {
  classifiers {
    inet-precedence c8 {
      forwarding-class be {
        loss-priority low code-points 000;
      }
      forwarding-class ef {
        loss-priority low code-points 001;
      }
      forwarding-class af {
        loss-priority low code-points 010;
      }
      forwarding-class nc {
        loss-priority low code-points 011;
      }
    }
  }
}
```

```

    }
    forwarding-class be1 {
        loss-priority low code-points 100;
    }
    forwarding-class ef1 {
        loss-priority low code-points 101;
    }
    forwarding-class af1 {
        loss-priority low code-points 110;
    }
    forwarding-class nc1 {
        loss-priority low code-points 111;
    }
}

forwarding-classes {
    queue 0 be;
    queue 1 ef;
    queue 2 af;
    queue 3 nc;
    queue 4 be1;
    queue 5 ef1;
    queue 6 af1;
    queue 7 nc1;
}

traffic-control-profiles {
    tcp_ifd {
        shaping-rate 2500000000;
        overhead-accounting bytes -20;
    }
    tcp_gold {
        scheduler-map gold;
        shaping-rate 2500000000;
        overhead-accounting bytes -20;
        guaranteed-rate 1g;
    }
    tcp_silver {
        scheduler-map silver;
        shaping-rate 1g;
        overhead-accounting bytes -20;
        guaranteed-rate 500m;
    }
}

```

```

interfaces {
    xe-9/0/3 {
        output-traffic-control-profile tcp_ifd;
        unit 1 {
            output-traffic-control-profile tcp_gold;
        }
        unit 2 {
            output-traffic-control-profile tcp_silver;
        }
    }
}

scheduler-maps {
    gold {
        forwarding-class be1 scheduler gold_internet;
        forwarding-class ef1 scheduler gold_video;
        forwarding-class af1 scheduler gold_voice;
        forwarding-class nc1 scheduler gold_reserved;
    }
    silver {
        forwarding-class be scheduler silver_internet;
        forwarding-class ef scheduler silver_video;
        forwarding-class af scheduler silver_voice;
        forwarding-class nc scheduler silver_reserved;
    }
}

schedulers {
    gold_internet {
        excess-rate percent 40;
        buffer-size percent 20;
        priority low;
    }
    gold_video {
        transmit-rate percent 50;
        buffer-size percent 50;
    }
    gold_voice {
        shaping-rate percent 10;
        buffer-size percent 10;
        priority strict-high;
    }
    gold_reserved {
        excess-rate percent 20;
        buffer-size percent 10;
    }
}

```



```
        priority low;
    }
    silver_internet {
        excess-rate percent 40;
        buffer-size percent 20;
        priority low;
    }
    silver_video {
        transmit-rate percent 50;
        buffer-size percent 50;
    }
    silver_voice {
        shaping-rate percent 10;
        buffer-size percent 10;
        priority strict-high;
    }
    silver_reserved {
        excess-rate percent 20;
        buffer-size percent 10;
        priority low;
    }
}
}
```

If you are done configuring the device, enter **commit** from configuration mode.

RELATED DOCUMENTATION

Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs

Example: Applying Scheduler Maps and Shaping Rate to DLCIs

per-unit-scheduler

Removing Delays with Strict-Priority Queues

IN THIS CHAPTER

- [Strict-Priority Queue Overview | 164](#)
- [Understanding Strict-Priority Queues | 165](#)
- [Example: Configuring Priority Scheduling | 166](#)
- [Example: Configuring Strict-Priority Queuing | 169](#)
- [Example: Configuring CoS Non-Strict Priority Scheduling | 183](#)

Strict-Priority Queue Overview

You can configure one queue per interface to have strict-priority, which causes delay-sensitive traffic, such as voice traffic, to be removed and forwarded with minimum delay. Packets that are queued in a strict-priority queue are removed before packets in other queues, including high-priority queues.

The strict-high-priority queuing feature allows you to configure traffic policing that prevents lower priority queues from being starved. The strict-priority queue does not cause starvation of other queues because the configured policer allows the queue to exceed the configured bandwidth only when other queues are not congested. If the interface is congested, the software directs strict-priority queues to the configured bandwidth.

To prevent queue starvation of other queues, you must configure an output (egress) policer that defines a limit for the amount of traffic that the queue can service. The software services all traffic in the strict-priority queue that is under the defined limit. When strict-priority traffic exceeds the limit, the policer marks the traffic in excess of the limit as out-of-profile. If the output port is congested, the software drops out-of-profile traffic.

You can also configure a second policer with an upper limit. When strict-priority traffic exceeds the upper limit, the software drops the traffic in excess of the upper limit, regardless of whether the output port is congested. This upper-limit policer is not a requirement for preventing starvation of the lower priority queues. The policer for the lower limit, which marks the packets as out-of-profile, is sufficient to prevent starvation of other queues.

RELATED DOCUMENTATION

[Understanding Strict-Priority Queues | 165](#)

[Example: Configuring Priority Scheduling | 166](#)

[Example: Configuring Strict-Priority Queuing | 169](#)

Understanding Strict-Priority Queues

You use strict-priority queuing and policing as follows:

- Identify delay-sensitive traffic by configuring a behavior aggregate (BA) or multifield (MF) classifier.
- Minimize delay by assigning all delay-sensitive packets to the strict-priority queue.
- Prevent starvation on other queues by configuring a policer that checks the data stream entering the strict-priority queue. The policer defines a lower bound, marks the packets that exceed the lower bound as out-of-profile, and drops the out-of-profile packets if the physical interface is congested. If there is no congestion, the software forwards all packets, including the out-of-profile packets.
- Optionally, configure another policer that defines an upper bound and drops the packets that exceed the upper bound, regardless of congestion on the physical interface.

To configure strict-priority queuing and prevent starvation of other queues, include the priority strict-high statement at the [edit class-of-service schedulers *scheduler-name*] hierarchy level and the if-exceeding and then out-of-profile statements at the [edit firewall policer *policer-name*] hierarchy level:

```
[edit class-of-service schedulers scheduler-name]
priority strict-high;

[edit firewall policer policer-name]
if-exceeding {
    bandwidth-limit bps;
    bandwidth-percent number;
    burst-size-limit bytes;
}
then out-of-profile;
```

RELATED DOCUMENTATION

[Strict-Priority Queue Overview | 164](#)

[Example: Configuring Priority Scheduling | 166](#)

[Example: Configuring Strict-Priority Queuing | 169](#)

Example: Configuring Priority Scheduling

IN THIS SECTION

- [Requirements | 166](#)
- [Overview | 166](#)
- [Configuration | 166](#)
- [Verification | 169](#)

This example shows how to configure priority scheduling so important traffic receives better access to the outgoing interface.

Requirements

Before you begin, review how to assign forwarding classes. See ["Example: Assigning Forwarding Classes to Output Queues" on page 77](#).

Overview

In this example, you configure CoS and a scheduler called be-sched with a medium-low priority. Then you configure scheduler map be-map to associate be-sched with the best-effort forwarding class. Finally, you apply be-map to interface ge-0/0/0.

Configuration

IN THIS SECTION

- [Procedure | 167](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set class-of-service schedulers be-sched priority medium-low
set class-of-service scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set class-of-service interfaces ge-0/0/0 scheduler-map be-map
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure priority scheduling:

1. Configure CoS and a scheduler.

```
[edit]
user@host# edit class-of-service
user@host# edit schedulers be-sched
```

2. Set a priority.

```
[edit class-of-service schedulers be-sched]
user@host# set priority medium-low
```

3. Configure a scheduler map.

```
[edit]
user@host# edit class-of-service
user@host# edit scheduler-maps be-map
```

4. Specify the best-effort forwarding class.

```
[edit class-of-service scheduler-maps be-map]
user@host# set forwarding-class best-effort scheduler be-sched
```

5. Apply best-effort map to an interface.

```
[edit]
user@host# edit class-of-service
user@host# set interfaces ge-0/0/0 scheduler-map be-map
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
interfaces {
  ge-0/0/0 {
    scheduler-map be-map;
  }
}
scheduler-maps {
  be-map {
    forwarding-class best-effort scheduler be-sched;
  }
}
schedulers {
  be-sched {
    priority medium-low;
  }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying Priority Scheduling | 169](#)

Verifying Priority Scheduling

Purpose

Verify that the priority scheduling is configured properly on a device.

Action

From configuration mode, enter the `show class-of-service` command.

RELATED DOCUMENTATION

[Strict-Priority Queue Overview | 164](#)

[Understanding Strict-Priority Queues | 165](#)

[Example: Configuring Strict-Priority Queuing | 169](#)

Example: Configuring Strict-Priority Queuing

IN THIS SECTION

- [Requirements | 170](#)
- [Overview | 170](#)
- [Configuration | 170](#)
- [Verification | 182](#)

This example shows how to configure strict-priority queuing and prevent starvation of other queues.

Requirements

Before you begin, review how to create and configure forwarding classes. See ["Forwarding Classes Overview" on page 68](#).

Overview

In this example, you create a BA classifier to classify traffic based on the IP precedence of the packet. The classifier defines IP precedence value 101 as voice traffic and 000 as data traffic. You assign forwarding-class priority queue 0 to voice traffic and queue 1 as data traffic. You then configure the scheduler map as corp-map and voice scheduler as voice-sched.

Then you set the priority for the voice traffic scheduler as strict-high and for the data traffic scheduler as strict-low. You apply the BA classifier to input interface ge-0/0/0 and apply the scheduler map to output interface e1-1/0/0. You then configure two policers called voice-drop and voice-excess. You set the burst size limit and bandwidth limit for voice-drop policer and for voice-excess policer. You then create a firewall filter that includes the new policers and add the policer to the term.

Finally, you apply the filter to output interface e1-1/0/1 and set the IP address as 203.0.113.1/24.

Configuration

IN THIS SECTION

- [Configuring a BA Classifier | 171](#)
- [Configuring Forwarding Classes | 172](#)
- [Configuring a Scheduler Map | 173](#)
- [Configuring a Scheduler | 175](#)
- [Applying a BA Classifier to an Input Interface | 176](#)
- [Applying a Scheduler Map to an Output Interface | 177](#)
- [Configuring Two Policers | 178](#)
- [Applying a Filter to an Output Interface | 181](#)

Configuring a BA Classifier

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service classifiers inet-precedence corp-traffic forwarding-class voice-class loss-
priority low code-points 101
set class-of-service classifiers inet-precedence corp-traffic forwarding-class data-class loss-
priority high code-points 000
```

Step-by-Step Procedure

To configure a BA classifier:

1. Create a BA classifier and set the IP precedence value for voice traffic.

```
[edit]
user@host# edit class-of-service classifiers inet-precedence corp-traffic forwarding-class
voice-class loss-priority low
user@host# set code-points 101
```

2. Create a BA classifier and set the IP precedence value for data traffic.

```
[edit]
user@host# edit class-of-service classifiers inet-precedence corp-traffic forwarding-class
data-class loss-priority high
user@host# set code-points 000
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
classifiers {
  inet-precedence corp-traffic {
    forwarding-class voice-class {
      loss-priority low code-points 101;
    }
    forwarding-class data-class {
      loss-priority high code-points 000;
    }
  }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring Forwarding Classes

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service forwarding-classes queue 0 voice-class
set class-of-service forwarding-classes queue 1 data-class
```

Step-by-Step Procedure

To configure forwarding classes:

1. Assign priority queuing to voice traffic.

```
[edit]
user@host# set class-of-service forwarding-classes queue 0 voice-class
```

2. Assign priority queuing to data traffic.

```
[edit]
user@host# set class-of-service forwarding-classes queue 1 data-class
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
forwarding-classes {
    queue 0 voice-class;
    queue 1 data-class;
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring a Scheduler Map

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service scheduler-maps corp-map forwarding-class voice-class scheduler voice-sched
set class-of-service scheduler-maps corp-map forwarding-class data-class scheduler data-sched
```

Step-by-Step Procedure

To configure a scheduler map:

1. Configure a scheduler map and voice scheduler.

```
[edit]
user@host# edit class-of-service scheduler-maps corp-map forwarding-class voice-class
user@host# set scheduler voice-sched
```

2. Configure a scheduler map and data scheduler.

```
[edit]
user@host# edit class-of-service scheduler-maps corp-map forwarding-class data-class
user@host# set scheduler data-sched
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
scheduler-maps {
  corp-map {
    forwarding-class voice-class scheduler voice-sched;
    forwarding-class data-class scheduler data-sched;
  }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring a Scheduler

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service schedulers voice-sched priority strict-high
set class-of-service schedulers data-sched priority lowset xxx
```

Step-by-Step Procedure

To configure schedulers:

1. Configure a voice traffic scheduler and set the priority.

```
[edit]
user@host# edit class-of-service schedulers voice-sched
user@host# set priority strict-high
```

2. Configure a data traffic scheduler and set the priority.

```
[edit]
user@host# edit class-of-service schedulers data-sched
user@host# set priority low
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
schedulers {
    voice-sched {
        priority strict-high;
```

```

    }
    data-sched {
        priority low;
    }
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Applying a BA Classifier to an Input Interface

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service interfaces ge-0/0/0 unit 0 classifiers inet-precedence corp-traffic
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To apply a BA classifier to an input interface:

1. Configure an interface.

```

[edit]
user@host# edit class-of-service interfaces ge-0/0/0 unit 0

```

2. Apply a BA classifier to an input interface.

```

[edit class-of-service interfaces ge-0/0/0 unit 0]
user@host# set classifiers inet-precedence corp-traffic

```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service interfaces` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service interfaces
ge-0/0/0 {
  unit 0 {
    classifiers {
      inet-precedence corp-traffic;
    }
  }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Applying a Scheduler Map to an Output Interface

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service interfaces e1-1/0/0 unit 0 scheduler-map corp-map
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To apply the scheduler map to an output interface:

1. Configure an interface.

```
[edit]
user@host# edit class-of-service interfaces e1-1/0/0 unit 0
```

2. Apply a scheduler map to an output interface.

```
[edit class-of-service interfaces e1-1/0/0 unit 0]
user@host# set scheduler-map corp-map
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
interfaces {
  e1-1/0/0 {
    unit 0 {
      scheduler-map corp-map;
    }
  }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring Two Policers

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy

and paste the commands into the CLI at the [edit] hierarchy level, and then enter commit from configuration mode.

```
set firewall policer voice-drop if-exceeding burst-size-limit 200000 bandwidth-limit 2000000
set firewall policer voice-drop then discard
set firewall policer voice-excess if-exceeding burst-size-limit 200000 bandwidth-limit 1000000
set firewall policer voice-excess then out-of-profile
set firewall filter voice-term term 01 from forwarding-class voice-class
set firewall filter voice-term term 01 then policer voice-drop next term
set firewall filter voice-term term 02 from forwarding-class voice-class
set firewall filter voice-term term 02 then policer voice-excess accept
```

Step-by-Step Procedure

To configure two policers:

1. Configure a policer voice drop.

```
[edit]
user@host# edit firewall policer voice-drop
user@host# set if-exceeding burst-size-limit 200000 bandwidth-limit 2000000
user@host# set then discard
```

2. Configure a policer voice excess.

```
[edit]
user@host# edit firewall policer voice-excess
user@host# set if-exceeding burst-size-limit 200000 bandwidth-limit 1000000
user@host# set then out-of-profile
```

3. Create a firewall filter that includes the new policers.

```
[edit]
user@host# edit firewall filter voice-term term 01
user@host# set from forwarding-class voice-class
user@host# set then policer voice-drop next term
```

4. Add the policer to the term.

```
[edit]
user@host# edit firewall filter voice-term term 02
user@host# set from forwarding-class voice-class
user@host# set then policer voice-excess accept
```

Results

From configuration mode, confirm your configuration by entering the `show firewall` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show firewall
policer voice-drop {
  if-exceeding {
    bandwidth-limit 2m;
    burst-size-limit 200k;
  }
  then discard;
}
policer voice-excess {
  if-exceeding {
    bandwidth-limit 1m;
    burst-size-limit 200k;
  }
  then out-of-profile;
}
filter voice-term {
  term 01 {
    from {
      forwarding-class voice-class;
    }
    then {
      policer voice-drop;
    }
  }
  term 02 {
    from {
```

```

        forwarding-class voice-class;
    }
    then {
        policer voice-excess;
        accept;
    }
}
}
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Applying a Filter to an Output Interface

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```

set interfaces e1-1/0/1 unit 0 family inet filter output voice-term
set interfaces e1-1/0/1 unit 0 family inet address 203.0.113.1/24

```

Step-by-Step Procedure

To apply a filter to an output interface:

1. Apply a filter to an interface.

```

[edit]
user@host# edit interfaces e1-1/0/1 unit 0 family inet filter output
user@host# set voice-term

```

2. Set an IP address.

```

[edit]
user@host# set interfaces e1-1/0/1 unit 0 family inet address 203.0.113.1/24

```

Results

From configuration mode, confirm your configuration by entering the `show interfaces` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show interfaces
e1-1/0/1 {
  unit 0 {
    family inet {
      filter {
        output voice-term;
      }
      address 203.0.113.1/24;
    }
  }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying the Scheduler Map | 182](#)
- [Verifying the Interfaces | 183](#)
- [Verifying the Interface Queues | 183](#)

Confirm that the configuration is working properly.

Verifying the Scheduler Map

Purpose

Verify that the scheduler map is configured properly.

Action

From operational mode, enter the `show class-of-service scheduler-map corp-map` command.

Verifying the Interfaces

Purpose

Verify that the interfaces are configured properly.

Action

From configuration mode, enter the `show interfaces` command.

Verifying the Interface Queues

Purpose

Verify that the interface queues are configured properly.

Action

From configuration mode, enter the `show interfaces queue` command.

RELATED DOCUMENTATION

[Strict-Priority Queue Overview](#) | 164

[Understanding Strict-Priority Queues](#) | 165

[Example: Configuring Priority Scheduling](#) | 166

Example: Configuring CoS Non-Strict Priority Scheduling

IN THIS SECTION

● [Requirements](#) | 184

- Overview | 184
- Configuration | 185
- Verification | 188

Starting in Junos OS Release 15.1X49-D80 and Junos OS Release 17.3R1, you can configure non-strict priority scheduling to avoid starvation of lower priority queues on SRX300, SRX320, SRX340, SRX345, SRX550M, SRX1500, and vSRX 2.0 devices.

This example shows how to assign non-strict priority scheduling to CoS queues.

Requirements

Before you begin, determine the shaping rate, schedulers, and forwarding classes for the CoS traffic. See ["shaping-rate \(CoS Interfaces\)" on page 393](#), ["Example: Configuring Class-of-Service Schedulers on a Security Device" on page 118](#), and ["Example: Assigning Forwarding Classes to Output Queues" on page 77](#).


Overview

Traffic shaping bandwidth allocation is based on the egress (outgoing) interface that the packet traverses. If you have several traffic streams with CoS prioritized, all traffic streams across the network are sent with more bandwidth than the bandwidth on the egress interface. This can sometimes result in higher-priority queues getting all of the bandwidth and lower priority queues not getting any bandwidth, and thus being starved.

This example demonstrates how the non-strict priority feature can resolve the starvation of strict priority scheduling problem. For this scenario, you initialize two traffic streams (50 Mbps each) with CoS classifiers configured. Interface ge-0/0/1 is configured for ingress traffic, and ge-0/0/2 is configured for egress traffic with shaping enabled at 50 million. For traffic stream Q2, you set the queue priority as high

and the shaping rate at 10%. For the other traffic stream Q1, you set the queue priority as low and the shaping rate at 10%. See [Figure 5 on page 185](#).

Figure 5: CoS Traffic with High and Low Priority Queues

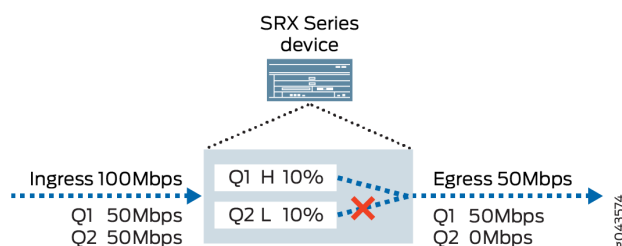

NOTE: Since CoS is strict priority scheduling, please keep in mind that higher priority queues can starve lower priority queues.

Configuration

IN THIS SECTION

- [Procedure | 185](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set class-of-service interfaces ge-0/0/2 unit 0 shaping-rate 50m
set interfaces ge-0/0/2 per-unit-scheduler
set class-of-service interfaces ge-0/0/1 unit 0 classifiers dscp dscp_custom
set class-of-service classifiers dscp dscp_custom forwarding-class HIGH loss-priority low code-
points 10011
set class-of-service classifiers dscp dscp_custom forwarding-class LOW loss-priority low code-
```

```

points 100100
set class-of-service forwarding-classes queue 1 HIGH
set class-of-service forwarding-classes queue 0 LOW
set class-of-service scheduler-maps sched forwarding-class HIGH scheduler Q1
set class-of-service scheduler-maps sched forwarding-class LOW scheduler Q2
set class-of-service schedulers Q2 transmit-rate percent 10
set class-of-service schedulers Q2 priority high
set class-of-service schedulers Q1 transmit-rate percent 10
set class-of-service schedulers Q1 priority low
set class-of-service non-strict-priority-scheduling

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure non-strict priority scheduling:

1. Configure shaping rate of 50 Mbps on the egress interface.

```

[edit]
user@host# set class-of-service interfaces ge-0/0/2 unit 0 shaping-rate 50m
set interfaces ge-0/0/2 per-unit-scheduler

```

2. Configure classifiers on the ingress interface.

```

[edit]
user@host# set class-of-service interfaces ge-0/0/1 unit 0 classifiers dscp dscp_custom

```

3. Define the DSCP value to be assigned to the forwarding class.

```

[edit]
user@host# set class-of-service classifiers dscp dscp_custom forwarding-class HIGH loss-
priority low code-points 10011
user@host# set class-of-service classifiers dscp dscp_custom forwarding-class LOW loss-
priority low code-points 100100

```


4. Define the forwarding class to a queue number.

```
[edit]
user@host# set class-of-service forwarding-classes queue 1 HIGH
user@host# set class-of-service forwarding-classes queue 0 LOW
```

5. Map the forwarding classes to a scheduler to control prioritized queueing.

```
[edit]
user@host# set class-of-service scheduler-maps sched forwarding-class HIGH scheduler Q1
user@host# set class-of-service scheduler-maps sched forwarding-class LOW scheduler Q2
```

6. Define the schedulers with priority and transmit rates. The example uses the same ratio for transmit rate but defines different priorities.

```
[edit]
user@host# set class-of-service schedulers Q2 transmit-rate percent 10
user@host# set class-of-service schedulers Q2 priority high
user@host# set class-of-service schedulers Q1 transmit-rate percent 10
user@host# set class-of-service schedulers Q1 priority low
```

7. Configure the new non-strict-priority-scheduling option.

```
[edit]
user@host# set class-of-service non-strict-priority-scheduling
```

Results

From configuration mode, confirm your configuration by entering the `show interfaces queue` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
user@host> show interface queue ge-0/0/2
Queue: 0, Forwarding classes: LOW
Queued:
  Packets      :          18085500          8571 pps
  Bytes       :          18013158000      68297136 bps
Transmitted:
```

```

Packets      :          3800910          2030 pps
Bytes        :          3785706360      16178104 bps
Tail-dropped packets :          14284525          6534 pps
Queue: 1, Forwarding classes: HIGH
Queued:
Packets      :          18085556          8541 pps
Bytes        :          18013213776      68062256 bps
Transmitted:
Packets      :          11432620          6107 pps
Bytes        :          11386889520      48660808 bps
Tail-dropped packets :          6652859          2436 pps

```

You will notice that the LOW priority queue got some traffic.

NOTE: Traffic on the low priority queue is still less than the high priority queue, as the non-priority scheduling option still works to control traffic..

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying Non-Strict Priority Configuration | 188](#)

Verifying Non-Strict Priority Configuration

Purpose

Verify that non-strict priority scheduling is configured properly.

Action

From operational mode, enter the `show class-of-service` command.

RELATED DOCUMENTATION

[non-strict-priority-scheduling](#) | 374

[Example: Configuring and Applying Scheduler Maps](#) | 140

[Transmission Scheduling Overview](#) | 109

Controlling Congestion with Drop Profiles

IN THIS CHAPTER

- [RED Drop Profiles Overview | 190](#)
- [RED Drop Profiles and Congestion Control | 192](#)
- [Configuring RED Drop Profiles | 194](#)
- [Example: Configuring RED Drop Profiles | 198](#)
- [Example: Configuring Segmented and Interpolated Style Profiles | 202](#)

RED Drop Profiles Overview

IN THIS SECTION

- [Default Drop Profiles | 191](#)

A drop profile is a feature of the random early detection (RED) process that allows packets to be dropped before queues are full. Drop profiles are composed of two main values—the queue fullness and the drop probability. The queue fullness represents percentage of memory used to store packets in relation to the total amount that has been allocated for that queue. The drop probability is a percentage value that correlates to the likelihood that an individual packet is dropped from the network. These two variables are combined in a graph-like format.

A random number between 0 and 100 is calculated for each packet. This random number is plotted against the drop profile having the current queue fullness of that particular queue. When the random number falls above the graph line, the packet is transmitted onto the physical media. When the number falls below the graph line, the packet is dropped from the network.

Randomly dropped packets are counted as RED-dropped, while packets dropped for other reasons (100% probability) are counted as tail-dropped.

You specify drop probabilities in the drop profile section of the class-of-service (CoS) configuration hierarchy and reference them in each scheduler configuration. For each scheduler, you can configure multiple separate drop profiles, one for each combination of loss priority (low, medium-low, medium-high, or high) and IP transport protocol (TCP or non-TCP or any).

NOTE: For some SRX Series devices, tcp and non-tcp values are not supported; only the value “any” is supported. Actual platform support depends on the Junos OS release in your implementation.

You can configure a maximum of 32 different drop profiles.

To configure RED drop profiles, include the following statements at the [edit class-of-service] hierarchy level of the configuration:

```
[edit class-of-service]
drop-profiles {
  profile-name {
    fill-level percentage drop-probability percentage;
    interpolate {
      drop-probability [ values ];
      fill-level [ values ];
    }
  }
}
```

Default Drop Profiles

By default, if you configure no drop profiles, RED is still in effect and functions as the primary mechanism for managing congestion. In the default RED drop profile, when the fill level is 0 percent, the drop probability is 0 percent. When the fill level is 100 percent, the drop probability is 100 percent.

RELATED DOCUMENTATION

| [Example: Configuring RED Drop Profiles](#) | 198

RED Drop Profiles and Congestion Control

If the device must support assured forwarding, you can control congestion by configuring random early detection (RED) drop profiles. RED drop profiles use drop probabilities for different levels of buffer fullness to determine which scheduling queue on the device is likely to drop assured forwarding packets under congested conditions. The device can drop packets when the queue buffer becomes filled to the configured percentage.

Assured forwarding traffic with the PLP (packet loss priority) bit set is more likely to be discarded than traffic without the PLP bit set. This example shows how to configure a drop probability and a queue fill level for both PLP and non-PLP assured forwarding traffic. It is only one example of how to use RED drop profiles.

The example shows how to configure the RED drop profiles listed in [Table 32 on page 192](#).

Table 32: Sample RED Drop Profiles

Drop Profile	Drop Probability	Queue Fill Level
af-normal—For non-PLP (normal) assured forwarding traffic	Between 0 (never dropped) and 100 percent (always dropped)	Between 95 and 100 percent
af-with-plp—For PLP (aggressive packet dropping) assured forwarding traffic	Between 95 and 100 percent (always dropped)	Between 80 and 95 percent

To configure RED drop profiles for assured forwarding congestion control on the device:

1. Navigate to the top of the configuration hierarchy in either the J-Web or CLI configuration editor.
2. Perform the configuration tasks described in [Table 33 on page 193](#).
3. If you are finished configuring the device, commit the configuration.
4. Go on to one of the following tasks:
 - To assign resources, priorities, and profiles to output queues, see ["Example: Configuring Class-of-Service Schedulers on a Security Device" on page 118](#).
 - To apply rules to logical interfaces, see ["Example: Configuring Virtual Channels" on page 215](#).
 - To use adaptive shapers to limit bandwidth for Frame Relay, see ["Example: Configuring and Applying an Adaptive Shaper" on page 209](#).

Table 33: Configuring RED Drop Profiles for Assured Forwarding Congestion Control

Task	CLI Configuration Editor
Navigate to the Class of service level in the configuration hierarchy.	From the [edit] hierarchy level, enter edit class-of-service
Configure the lower drop probability for normal, non-PLP traffic.	Enter edit drop-profiles af-normal interpolate set drop-probability 0 set drop-probability 100
Configure a queue fill level for the lower non-PLP drop probability.	Enter set fill-level 95 set fill-level 100
Configure the higher drop probability for PLP traffic.	From the [edit class of service] hierarchy level, enter edit drop-profiles af-with-PLP interpolate set drop-probability 95 set drop-probability 100
Configure a queue fill level for the higher PLP drop probability.	Enter set fill-level 80 set fill-level 95

RELATED DOCUMENTATION


[Example: Configuring RED Drop Profiles](#) | 198

Configuring RED Drop Profiles

Create a segmented configuration and an interpolated configuration that correspond to the graphs in [Figure 6 on page 196](#). The values defined in the configuration are matched to represent the data points

in the graph line. In this example, the drop probability is 25 percent when the queue is 50 percent full. The drop probability increases to 50 percent when the queue is 75 percent full.

Figure 6: Segmented and Interpolated Drop Profiles

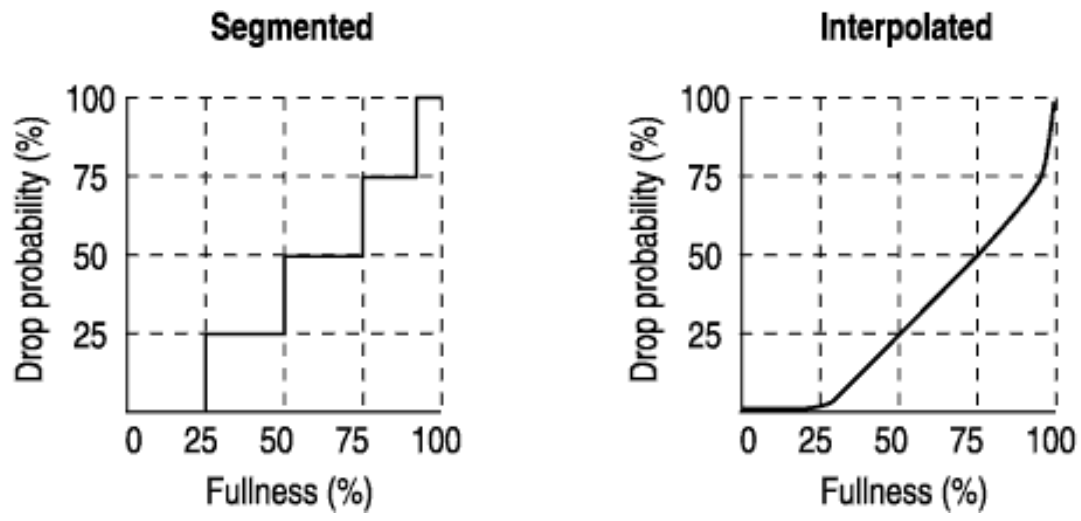

Segmented

```
class-of-service {
  drop-profiles {
    segmented-style-profile {
      fill-level 25 drop-probability 25;
      fill-level 50 drop-probability 50;
      fill-level 75 drop-probability 75;
      fill-level 95 drop-probability 100;
    }
  }
}
```

To create the profile's graph line, the software begins at the bottom-left corner, representing a 0 percent fill level and a 0 percent drop probability. This configuration draws a line directly to the right until it reaches the first defined fill level, 25 percent for this configuration. The software then continues the line vertically until the first drop probability is reached. This process is repeated for all of the defined levels and probabilities until the top-right corner of the graph is reached.

Create a smoother graph line by configuring the profile with the `interpolate` statement. This allows the software to automatically generate 64 data points on the graph beginning at (0, 0) and ending at (100, 100). Along the way, the graph line intersects specific data points, which you define as follows:

Interpolated

```
class-of-service {
  drop-profiles {
    interpolated-style-profile {
      interpolate {
        fill-level [ 50 75 ];
        drop-probability [ 25 50 ];
      }
    }
  }
}
```

RELATED DOCUMENTATION

[Understanding RED Drop Profiles](#)

Example: Configuring RED Drop Profiles

IN THIS SECTION

- Requirements | 198
- Overview | 198
- Configuration | 199
- Verification | 201

This example shows how to configure RED drop profiles.

Requirements

Before you begin, determine which type of profile you want to configure. See ["Example: Configuring Segmented and Interpolated Style Profiles" on page 202.](#)

Overview

A drop profile is a feature of the RED process that allows packets to be dropped before queues are full. Drop profiles are composed of two main values the queue fullness and the drop probability.

You can control congestion by configuring RED drop profiles, if the device supports assured forwarding. RED drop profiles use drop probabilities for different levels of buffer fullness to determine which scheduling queue on the device is likely to drop assured forwarding packets under congested conditions. The device can drop packets when the queue buffer becomes filled to the configured percentage. Assured forwarding traffic with the PLP bit set is more likely to be discarded than traffic without the PLP bit set.

In this example, you configure a drop probability and a queue fill level for both PLP and non-PLP assured forwarding traffic.

[Table 34 on page 198](#) shows how to configure the RED drop profiles listed.

Table 34: Sample RED Drop Profiles

Drop Profile	Drop Probability	Queue Fill Level
af-normal—For non-PLP (normal) assured forwarding traffic	Between 0 (never dropped) and 100 percent (always dropped)	Between 95 and 100 percent

Table 34: Sample RED Drop Profiles *(Continued)*

Drop Profile	Drop Probability	Queue Fill Level
af-with-plp—For PLP (aggressive packet dropping) assured forwarding traffic	Between 95 and 100 percent (always dropped)	Between 80 and 95 percent

Configuration

IN THIS SECTION

Procedure | 199

Procedure

CLI Quick Configuration

To quickly configure RED drop profiles, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
[edit]
set class-of-service drop-profiles af-normal interpolate drop-probability 0
set class-of-service drop-profiles af-normal interpolate drop-probability 100
set class-of-service drop-profiles af-normal interpolate fill-level 95
set class-of-service drop-profiles af-normal interpolate fill-level 100
set class-of-service drop-profiles af-with-PLP interpolate drop-probability 95
set class-of-service drop-profiles af-with-PLP interpolate drop-probability 100
set class-of-service drop-profiles af-with-PLP interpolate fill-level 80
set class-of-service drop-profiles af-with-PLP interpolate fill-level 95
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode*.

To configure RED drop profiles:

1. Configure the lower drop probability for normal, non-PLP traffic.

```
[edit]
user@host# edit class-of-service
user@host# edit drop-profiles af-normal interpolate
user@host# set drop-probability 0
user@host# set drop-probability 100
```

2. Configure a queue fill level for the lower non-PLP drop probability.

```
[edit class-of-service drop-profiles af-normal interpolate]
user@host# set fill-level 95
user@host# set fill-level 100
```

3. Configure the higher drop probability for PLP traffic.

```
[edit]
user@host# edit class-of-service
user@host# edit drop-profiles af-with-PLP interpolate
user@host# set drop-probability 95
user@host# set drop-probability 100
```

4. Configure a queue fill level for the higher PLP drop probability.

```
[edit class-of-service drop-profiles af-with-PLP interpolate]
user@host# set fill-level 80
user@host# set fill-level 95
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
user@host# show class-of-service
drop-profiles {
```

```
af-normal {  
    interpolate {  
        fill-level [ 95 100 ];  
        drop-probability [ 0 100 ];  
    }  
}  
af-with-PLP {  
    interpolate {  
        fill-level [ 80 95 ];  
        drop-probability [ 95 100 ];  
    }  
}  
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying RED Drop Profiles Configuration | 201](#)

Verifying RED Drop Profiles Configuration

Purpose

Verify that the RED drop profiles are configured properly.

Action

From operational mode, enter the `show class-of-service` command.

RELATED DOCUMENTATION

[RED Drop Profiles Overview | 190](#)

[Understanding RED Drop Profiles](#)

Example: Configuring Segmented and Interpolated Style Profiles

IN THIS SECTION

- [Requirements | 202](#)
- [Overview | 202](#)
- [Configuration | 202](#)
- [Verification | 206](#)

This example shows how to configure segmented and interpolated style profiles.

Requirements

No special configuration beyond device initialization is required before configuring this feature.

Overview

In this example, you configure the segmented style profile by setting the drop probability to 25 percent when the queue is 25 percent full. The drop probability increases to 50 percent when the queue is 50 percent full. You set the drop probability to 75 percent when the queue is 75 percent full and finally the drop probability is set to 95 percent when the queue is 100 percent full.

Then you configure the interpolated style profile and set the fill level to 50 percent and 75 percent. Finally you set the drop probability to 25 percent and later to 50 percent.

Configuration

IN THIS SECTION

- [Configuring Segmented Style Profiles | 203](#)
- [Configuring Interpolated Style Profiles | 204](#)

Configuring Segmented Style Profiles

CLI Quick Configuration

To quickly configure segmented style profiles, copy the following commands and paste them into the CLI:

```
[edit]
set class-of-service drop-profiles segmented-style-profile fill-level 25 drop-probability 25
set class-of-service drop-profiles segmented-style-profile fill-level 50 drop-probability 50
set class-of-service drop-profiles segmented-style-profile fill-level 75 drop-probability 75
set class-of-service drop-profiles segmented-style-profile fill-level 95 drop-probability 100
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode*.

To configure segmented style profiles:

1. Configure class of service.

```
[edit]
user@host# edit class-of-service
```

2. Configure segmented style profile.

```
[edit class-of-service]
user@host# edit drop-profiles segmented-style-profile
```

3. Specify fill levels and drop probabilities.

```
[edit class-of-service drop-profiles segmented-style-profile]
user@host# set fill-level 25 drop-probability 25
user@host# set fill-level 50 drop-probability 50
user@host# set fill-level 75 drop-probability 75
user@host# set fill-level 95 drop-probability 100
```

Results

From configuration mode, confirm your configuration by entering the **show class-of-service** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
  drop-profiles {
    segmented-style-profile {
      fill-level 25 drop-probability 25;
      fill-level 50 drop-probability 50;
      fill-level 75 drop-probability 75;
      fill-level 95 drop-probability 100;
    }
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Configuring Interpolated Style Profiles

CLI Quick Configuration

To quickly configure interpolated style profiles, copy the following commands and paste them into the CLI:

```
[edit]
set class-of-service drop-profiles interpolated-style-profile interpolate fill-level 50
set class-of-service drop-profiles interpolated-style-profile interpolate fill-level 75
set class-of-service drop-profiles interpolated-style-profile interpolate drop-probability 25
set class-of-service drop-profiles interpolated-style-profile interpolate drop-probability 50
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode*.

To configure interpolated style profile:

1. Configure class of service.

```
[edit]
user@host# edit class-of-service
```

2. Configure interpolated style profile.

```
[edit class-of-service]
user@host# edit drop-profiles interpolated-style-profile interpolate
```

3. Specify fill levels.

```
[edit class-of-service drop-profiles interpolated-style-profile interpolate]
user@host# set fill-level 50
user@host# set fill-level 75
```

4. Specify drop probabilities.

```
[edit class-of-service drop-profiles interpolated-style-profile interpolate]
user@host# set drop-probability 25
user@host# set drop-probability 50
```

Results

From configuration mode, confirm your configuration by entering the **show class-of-service** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
  drop-profiles {
    interpolated-style-profile {
      fill-level [ 50 75 ];
      drop-probability [ 25 50 ];
    }
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Verifying Segmented Style Profile Configuration | 206](#)
- [Verifying Interpolated Style Profile Configuration | 206](#)

To confirm that the configuration is working properly, perform these tasks:

Verifying Segmented Style Profile Configuration

Purpose

Verify that the segmented style profile is configured properly.

Action

From configuration mode, enter the **show class-of-service** command.

Verifying Interpolated Style Profile Configuration

Purpose

Verify that the interpolated style profile is configured properly.

Action

From configuration mode, enter the **show class-of-service** command.

RELATED DOCUMENTATION

[RED Drop Profiles Overview | 190](#)

[Understanding RED Drop Profiles](#)

[Example: Configuring RED Drop Profiles | 198](#)

Controlling Congestion with Adaptive Shapers

IN THIS CHAPTER

- [Adaptive Shaping Overview | 207](#)
- [Assigning the Default Frame Relay Loss Priority Map to an Interface | 208](#)
- [Defining a Custom Frame Relay Loss Priority Map | 209](#)
- [Example: Configuring and Applying an Adaptive Shaper | 209](#)

Adaptive Shaping Overview

You can use adaptive shaping to limit the bandwidth of traffic flowing on a Frame Relay *logical interface*. If you configure and apply adaptive shaping, the device checks the backward explicit congestion notification (BECN) bit within the last inbound (ingress) packet received on the interface.

NOTE: Adaptive shaping is not available on SRX5600 and SRX5800 devices.

To configure an adaptive shaper, include the `adaptive-shaper` statement at the [edit class-of-service] hierarchy level:

```
[edit class-of-service]
adaptive-shaper {
  adaptive-shaper-name {
    trigger type shaping-rate (percent percentage | rate);
  }
}
```

The trigger type can be BECN only. If the last ingress packet on the logical interface has its BECN bit set to 1, the output queues on the logical interface are shaped according to the associated shaping rate.

The associated shaping rate can be a percentage of the available interface bandwidth from 0 through 100 percent. Alternatively, you can configure the shaping rate to be an absolute peak rate, in bits per

second (bps) from 3200 through 32,000,000,000 bps. You can specify the value either as a complete decimal number or as a decimal number followed by the abbreviation K (1000), M (1,000,000), or G (1,000,000,000).

RELATED DOCUMENTATION

[Assigning the Default Frame Relay Loss Priority Map to an Interface | 208](#)

[Defining a Custom Frame Relay Loss Priority Map | 209](#)

[Example: Configuring and Applying an Adaptive Shaper | 209](#)

Assigning the Default Frame Relay Loss Priority Map to an Interface

For SRX210, SRX240, and SRX650 device interfaces with Frame Relay encapsulation, you can set the loss priority of Frame Relay traffic based on the discard eligibility (DE) bit. (Platform support depends on the Junos OS release in your installation.) For each incoming frame with the DE bit containing the CoS value 0 or 1, you can configure a Frame Relay loss priority value of low, medium-low, medium-high, or high.

The default Frame Relay loss priority map contains the following settings:

```
loss-priority low code-point 0;
loss-priority high code-point 1;
```

This default map sets the loss priority to low for each incoming frame with the DE bit containing the 0 CoS value. The map sets the loss priority to high for each incoming frame with the DE bit containing the 1 CoS value.

To assign the default map to an interface, include the `frame-relay-de default` statement at the [edit class-of-service interfaces *interface-name* unit *logical-unit-number* loss-priority-maps] hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number loss-priority-maps]
frame-relay-de default;
```

Defining a Custom Frame Relay Loss Priority Map

You can apply a classifier to the same interface on which you configure a Frame Relay loss priority value. The Frame Relay loss priority map is applied first, followed by the classifier. The classifier can change the loss priority to a higher value only (for example, from low to high). If the classifier specifies a loss priority with a lower value than the current loss priority of a particular packet, the classifier does not change the loss priority of that packet.

To define a custom Frame Relay loss priority map, include the following statements at the [edit class-of-service] hierarchy level:

```
[edit class-of-service]
loss-priority-maps {
  frame-relay-de map-name {
    loss-priority (low | medium-low | medium-high | high) code-point (0 | 1);
  }
}
```

A custom loss priority map sets the loss priority to low, medium-low, medium-high, or high for each incoming frame with the DE bit containing the specified 0 or 1 CoS value.

The map does not take effect until you apply it to a logical interface. To apply a map to a logical interface, include the `frame-relay-de map-name` statement at the [edit class-of-service interfaces *interface-name* unit *logical-unit-number* loss-priority-maps] hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number loss-priority-maps]
frame-relay-de map-name;
```

Example: Configuring and Applying an Adaptive Shaper

IN THIS SECTION

- Requirements | 210
- Overview | 210
- Configuration | 210
- Verification | 211

This example shows how to configure and apply an adaptive shaper to limit the bandwidth of traffic on a Frame Relay logical interface.

Requirements

Before you begin, review how to create and apply scheduler maps. See ["Example: Configuring and Applying Scheduler Maps" on page 140](#)

Overview

In this example, you create adaptive shaper fr-shaper and apply it to T1 interface t1-0/0/2. The adapter shaper limits the transmit bandwidth on the interface to 64 Kbps.

Configuration

IN THIS SECTION

- [Procedure | 210](#)

Procedure

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure and apply an adaptive shaper to a logical interface:

1. Specify the name and the maximum transmit rate of the adaptive shaper.

```
[edit]
user@host# edit class-of-service
user@host# set adaptive-shapers fr-shaper trigger becn shaping-rate 64k
```

2. Apply the adaptive shaper to the logical interface.

```
[edit class-of-service]
user@host# set interfaces t1-0/0/2 unit 0 adaptive-shaper fr-shaper
```


3. If you are done configuring the device, commit the configuration.

```
[edit]  
user@host# commit
```

Verification

To verify the configuration is working properly, enter the `show class-of-service` command.

RELATED DOCUMENTATION

[Adaptive Shaping Overview | 207](#)

[Assigning the Default Frame Relay Loss Priority Map to an Interface | 208](#)

[Defining a Custom Frame Relay Loss Priority Map | 209](#)

Limiting Traffic Using Virtual Channels

IN THIS CHAPTER

- [Virtual Channels Overview | 212](#)
- [Understanding Virtual Channels | 213](#)
- [Example: Configuring Virtual Channels | 215](#)

Virtual Channels Overview

You can configure virtual channels to limit traffic sent from a corporate headquarters to its branch offices. Virtual channels might be required when the headquarters site has an expected aggregate bandwidth higher than that of the individual branch offices. The headquarters router must limit the traffic sent to each branch office router to avoid oversubscribing their links. For instance, if branch 1 has a 1.5 Mbps link and the headquarters router attempts to send 6 Mbps to branch 1, all of the traffic in excess of 1.5-Mbps is dropped in the ISP network.

You configure virtual channels on a *logical interface*. Each virtual channel has a set of eight queues with a scheduler and an optional shaper. You can use an output *firewall filter* to direct traffic to a particular virtual channel. For example, a filter can direct all traffic with a destination address for branch office 1 to virtual channel 1, and all traffic with a destination address for branch office 2 to virtual channel 2.

Although a virtual channel group is assigned to a logical interface, a virtual channel is quite different from a logical interface. The only features supported on a virtual channel are queuing, packet scheduling, and accounting. *Rewrite rules* and routing protocols apply to the entire logical interface.

When you configure virtual channels on an interface, the virtual channel group uses the same scheduler and shaper you configure at the [edit interfaces *interface-name* unit *logical-unit-number*] hierarchy level. In this way, virtual channels are an extension of regular scheduling and shaping and are not independent entities.

RELATED DOCUMENTATION

[Understanding Virtual Channels | 213](#)

Understanding Virtual Channels

You configure a virtual channel to set up queuing, packet scheduling, and accounting rules to be applied to one or more logical interfaces. You must apply then the virtual channel to a particular *logical interface*.

You also create a list of virtual channels that you can assign to a virtual channel group. To define a virtual channel group that you can assign to a logical interface, include the `virtual-channel-groups` statement at the `[edit class-of-service]` hierarchy level.

The *virtual-channel-group-name* can be any name that you want. The *virtual-channel-name* must be one of the names that you define at the `[edit class-of-service virtual-channels]` hierarchy level. You can include multiple virtual channel names in a group.

The scheduler map is required. The *map-name* must be one of the scheduler maps that you configure at the `[edit class-of-service scheduler-maps]` hierarchy level. For more information, see ["Example: Configuring Class-of-Service Schedulers on a Security Device" on page 118](#).

The shaping rate is optional. If you configure the shaping rate as a percentage, when the virtual channel is applied to a logical interface, the shaping rate is set to the specified percentage of the interface bandwidth. If you configure a shaper on a virtual channel, the shaper limits the maximum bandwidth transmitted by that virtual channel. Virtual channels without a shaper can use the full logical interface bandwidth. If there are multiple unshaped virtual channels, they share the available logical interface bandwidth equally.

When you apply the virtual channel group to a logical interface, a set of eight queues is created for each of the virtual channels in the group. The `scheduler-map` statement applies a scheduler to these queues. If you include the `shaping-rate` statement, a shaper is applied to the entire virtual channel.

You must configure one of the virtual channels in the group to be the default channel. Therefore, the `default` statement is required in the configuration of one virtual channel per channel group. Any traffic not explicitly directed to a particular channel is transmitted by this default virtual channel.

For the corresponding physical interface, you must also include the `per-unit-scheduler` statement at the `[edit interfaces interface-name]` hierarchy level as follows:

```
[edit interfaces interface-name]
per-unit-scheduler;
```

The `per-unit-scheduler` statement enables one set of output queues for each logical interface configured under the physical interface.

When you apply a virtual channel group to a logical interface, the software creates a set of eight queues for each of the virtual channels in the group.

If you apply a virtual channel group to multiple logical interfaces, the software creates a set of eight queues on each logical interface. The virtual channel names listed in the group are used on all the logical interfaces. We recommend specifying the scheduler and shaping rates in the virtual channel configuration in terms of percentages, rather than absolute rates. This allows you to apply the same virtual channel group to logical interfaces that have different bandwidths.

When you apply a virtual channel group to a logical interface, you cannot include the `scheduler-map` and `shaping-rate` statements at the [edit class-of-service interfaces *interface-name* unit *logical-unit-number*] hierarchy level. In other words, you can configure a scheduler map and a shaping rate on a logical interface, or you can configure virtual channels on the logical interface, but not both.

If you configure multiple logical interfaces on a single physical interface, each logical interface is guaranteed an equal fraction of the physical interface bandwidth as follows:

```
logical-interface-bandwidth =
physical-interface-bandwidth / number-of-logical-interfaces
```

If one or more logical interfaces do not completely use their allocation, the other logical interfaces share the excess bandwidth equally.

If you configure multiple virtual channels on a logical interface, they are each guaranteed an equal fraction of the logical interface bandwidth as follows:

```
virtual-channel-bandwidth =
logical-interface-bandwidth / number-of-virtual-channels
```

If you configure a shaper on a virtual channel, the shaper limits the maximum bandwidth transmitted by that virtual channel. Virtual channels without a shaper can use the full logical interface bandwidth. If there are multiple unshaped virtual channels, they share the available logical interface bandwidth equally.

RELATED DOCUMENTATION

[Virtual Channels Overview](#) | 212

[Example: Configuring Virtual Channels on a Security Device](#)

Example: Configuring Virtual Channels

IN THIS SECTION

- [Requirements | 215](#)
- [Overview | 215](#)
- [Configuration | 215](#)
- [Verification | 221](#)

This example shows how to create virtual channels between a headquarters and its branch office.

Requirements

Before you begin, ensure that your headquarters and branch office have a network connection where the expected aggregate bandwidth is higher for your headquarters than for your branch office. The devices at your headquarters will then be set up to limit the traffic sent to the branch office to avoid oversubscribing the link.

Overview

In this example, you create the virtual channels as `branch1-vc`, `branch2-vc`, `branch3-vc`, and `default-vc`. You then define the virtual channel group as `wan-vc-group` to include the four virtual channels and assign the scheduler map as `bestscheduler` to each virtual channel. Three of the virtual channels are shaped to 1.5 Mbps. The fourth virtual channel is `default-vc`, and it is not shaped so it can use the full interface bandwidth.

Then you apply them in the firewall filter as `choose-vc` to the device's interface `t3-1/0/0`. The output filter on the interface sends all traffic with a destination address matching `192.168.10.0/24` to `branch1-vc`, and similar configurations are set for `branch2-vc` and `branch3-vc`. Traffic not matching any of the addresses goes to the default, unshaped virtual channel.

Configuration

IN THIS SECTION

- [Procedure | 216](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```

set class-of-service virtual-channels branch1-vc
set class-of-service virtual-channels branch2-vc
set class-of-service virtual-channels branch3-vc
set class-of-service virtual-channels default-vc
set class-of-service virtual-channel-groups wan-vc-group branch1-vc scheduler-map bestscheduler
set class-of-service virtual-channel-groups wan-vc-group branch2-vc scheduler-map bestscheduler
set class-of-service virtual-channel-groups wan-vc-group branch3-vc scheduler-map bestscheduler
set class-of-service virtual-channel-groups wan-vc-group default-vc scheduler-map bestscheduler
set class-of-service virtual-channel-groups wan-vc-group default-vc default
set class-of-service virtual-channel-groups wan-vc-group branch1-vc shaping-rate 1500000
set class-of-service virtual-channel-groups wan-vc-group branch2-vc shaping-rate 1500000
set class-of-service virtual-channel-groups wan-vc-group branch3-vc shaping-rate 1500000
set class-of-service interfaces t3-1/0/0 unit 0 virtual-channel-group wan-vc-group
set firewall family inet filter choose-vc term branch1 from destination-address 192.168.10.0/24
set firewall family inet filter choose-vc term branch1 then virtual-channel branch1-vc
set firewall family inet filter choose-vc term branch1 then accept
set firewall family inet filter choose-vc term branch2 from destination-address 192.168.20.0/24
set firewall family inet filter choose-vc term branch2 then virtual-channel branch2-vc
set firewall family inet filter choose-vc term branch2 then accept
set firewall family inet filter choose-vc term branch3 from destination-address 192.168.30.0/24
set firewall family inet filter choose-vc term branch3 then virtual-channel branch3-vc
set firewall family inet filter choose-vc term branch3 then accept
set firewall family inet filter choose-vc term default then virtual-channel default-vc
set firewall family inet filter choose-vc term default then accept
set interfaces t3-1/0/0 unit 0 family inet filter output choose-vc

```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure virtual channels:

1. Define the virtual channels and the default virtual channel.

```
[edit]
user@host# edit class-of-service
user@host# set virtual-channels branch1-vc
user@host# set virtual-channels branch2-vc
user@host# set virtual-channels branch3-vc
user@host# set virtual-channels default-vc
```

2. Define the virtual channel group and assign each virtual channel a scheduler map.

```
[edit class-of-service]
user@host# set virtual-channel-groups wan-vc-group branch1-vc scheduler-map bestscheduler
user@host# set virtual-channel-groups wan-vc-group branch2-vc scheduler-map bestscheduler
user@host# set virtual-channel-groups wan-vc-group branch3-vc scheduler-map bestscheduler
user@host# set virtual-channel-groups wan-vc-group default-vc scheduler-map bestscheduler
user@host# set virtual-channel-groups wan-vc-group default-vc default
```

3. Specify a shaping rate.

```
[edit class-of-service]
user@host# set virtual-channel-groups wan-vc-group branch1-vc shaping-rate 1.5m
user@host# set virtual-channel-groups wan-vc-group branch2-vc shaping-rate 1.5m
user@host# set virtual-channel-groups wan-vc-group branch3-vc shaping-rate 1.5m
```

4. Apply the virtual channel group to the logical interface.

```
[edit class-of-service]
user@host# set interfaces t3-1/0/0 unit 0 virtual-channel-group wan-vc-group
```

5. Create the firewall filter to select the traffic.

```
[edit firewall]
user@host# set firewall family inet filter choose-vc term branch1 from destination-address
192.168.10.0/24
user@host# set firewall family inet filter choose-vc term branch1 then virtual-channel
branch1-vc
user@host# set firewall family inet filter choose-vc term branch1 then accept
```

```

user@host# set firewall family inet filter choose-vc term branch2 from destination-address
192.168.20.0/24
user@host# set firewall family inet filter choose-vc term branch2 then virtual-channel
branch2-vc
user@host# set firewall family inet filter choose-vc term branch2 then accept
user@host# set firewall family inet filter choose-vc term branch3 from destination-address
192.168.30.0/24
user@host# set firewall family inet filter choose-vc term branch3 then virtual-channel
branch3-vc
user@host# set firewall family inet filter choose-vc term branch3 then accept
user@host# set firewall family inet filter choose-vc term default then virtual-channel
default-vc
user@host# set firewall family inet filter choose-vc term default then accept

```

6. Apply the firewall filter to output traffic.

```

[edit interfaces]
user@host# set t3-1/0/0 unit 0 family inet filter output choose-vc

```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service`, `show firewall`, and `show interfaces t3-1/0/0` commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```

user@host# show class-of-service
virtual-channels {
    branch1-vc;
    branch2-vc;
    branch3-vc;
    default-vc;
}
virtual-channel-groups {
    wan-vc-group {
        branch1-vc {
            scheduler-map bestscheduler;
            shaping-rate 1500000;
        }
        branch2-vc {
            scheduler-map bestscheduler;

```



```

        shaping-rate 1500000;
    }
    branch3-vc {
        scheduler-map bestscheduler;
        shaping-rate 1500000;
    }
    default-vc {
        scheduler-map bestscheduler;
        default;
    }
}
}
}
interfaces {
    t3-1/0/0 {
        unit 0 {
            virtual-channel-group wan-vc-group;
        }
    }
}
[edit]
user@host# show firewall
family inet {
    filter choose-vc {
        term branch1 {
            from {
                destination-address {
                    192.168.10.0/24;
                }
            }
            then {
                virtual-channel branch1-vc;
                accept;
            }
        }
        term branch2 {
            from {
                destination-address {
                    192.168.20.0/24;
                }
            }
            then {
                virtual-channel branch2-vc;
                accept;
            }
        }
    }
}

```

```

    }
}
term branch3 {
    from {
        destination-address {
            192.168.30.0/24;
        }
    }
    then {
        virtual-channel branch1-vc;
        accept;
    }
}
term branch2 {
    from {
        destination-address {
            192.168.20.0/24;
        }
    }
    then {
        virtual-channel branch2-vc;
        accept;
    }
}
term branch3 {
    from {
        destination-address {
            192.168.30.0/24;
        }
    }
    then {
        virtual-channel branch3-vc;
        accept;
    }
}
term default {
    then {
        virtual-channel default-vc;
        accept;
    }
}
}
}

```

```
[edit]
user@host# show interfaces t3-1/0/0
unit 0 {
    family inet {
        filter {
            output choose-vc;
        }
    }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying Virtual Channel Configuration | 221](#)

Verifying Virtual Channel Configuration

Purpose

Verify that the virtual channels are properly configured.

Action

From configuration mode, enter the `show class-of-service`, `show firewall`, and `show interfaces t3-1/0/0` commands.

RELATED DOCUMENTATION

[Virtual Channels Overview | 212](#)

[Understanding Virtual Channels | 213](#)

Enabling Queuing for Tunnel Interfaces

IN THIS CHAPTER

- CoS Queuing for Tunnels Overview | 222
- Understanding the ToS Value of a Tunnel Packet | 227
- Example: Configuring CoS Queuing for GRE or IP-IP Tunnels | 228
- Copying Outer IP Header DSCP and ECN to Inner IP Header | 235
- Understanding CoS Support on st0 Interfaces | 236

CoS Queuing for Tunnels Overview

IN THIS SECTION

- Benefits of CoS Queuing for Tunnel Interfaces | 223
- Configuring CoS on Logical Tunnels | 224
- How CoS Queuing Works | 226
- Limitations on CoS Shapers for Tunnel Interfaces | 227

On an SRX Series device running Junos OS, a tunnel interface is an internal interface and supports many of the same CoS features as a physical interface. The tunnel interface creates a virtual point-to-point link between two SRX Series devices at remote points over an IP network.

For example, you can configure CoS features for generic routing encapsulation (GRE) and IP-IP tunnel interfaces. Tunneling protocols encapsulate packets inside a transport protocol.

GRE and IP-IP tunnels are used with services like IPsec and NAT to set up point-to-point VPNs. Junos OS allows you to enable CoS queuing, scheduling, and shaping for traffic exiting through these tunnel interfaces. For an example of configuring CoS Queuing for GRE tunnels, see "[Example: Configuring CoS Queuing for GRE or IP-IP Tunnels](#)" on page 228.

NOTE: CoS queuing is not supported on GRE tunnels in chassis clusters.

NOTE: The CoS queuing feature does not work for Junos OS Release 12.3X48 or for older devices such as SRX550 (low memory), SRX100, or SRX200.

Starting with Junos OS Release 15.1X49-D100 and Junos OS Release 17.3R1, you can configure CoS on logical tunnels for SRX 300, SRX320, SRX340, SRX345, and SRX550M devices.

Starting with Junos OS Release 20.3R1, you can configure CoS on GRE tunnels for SRX4600 devices.

Benefits of CoS Queuing for Tunnel Interfaces

CoS queuing enabled for tunnel interfaces has the following benefits:

- Segregates tunnel traffic.

Each tunnel can be shaped so that a tunnel with low-priority traffic cannot flood other tunnels that carry high-priority traffic.

Traffic for one tunnel does not impact traffic on other tunnels.

- Controls tunnel bandwidth.

Traffic through various tunnels is limited to not exceed a certain bandwidth.

For example, suppose you have three tunnels to three remote sites through a single WAN interface. You can select CoS parameters for each tunnel such that traffic to some sites gets more bandwidth than traffic to other sites.

- Customizes CoS policies.

You can apply different queuing, scheduling, and shaping policies to different tunnels based on user requirements. Each tunnel can be configured with different scheduler maps, different queue depths, and so on. Customization allows you to configure granular CoS policy providing for better control over tunnel traffic.

- Prioritizes traffic before it enters a tunnel.

For example, CoS queuing avoids having low-priority packets scheduled ahead of high-priority packets when the interface speed is higher than the tunnel traffic speed. This feature is most useful when combined with IPsec. Typically, IPsec processes packets in a FIFO manner. However, with CoS queuing each tunnel can prioritize high-priority packets over low-priority packets. Also, each tunnel

can be shaped so that a tunnel with low-priority traffic does not flood tunnels carrying high-priority traffic.


Configuring CoS on Logical Tunnels

CoS has four typical scenarios that allow connection with remote sites using secure tunnels. However different secure tunnels may connect using different reth interfaces to different Network Providers (NP). For a specific NP, limited uplink bandwidth may be used to prioritize high-priority business and to avoid blindly dropping traffic at the NP side. Currently CoS does not support queuing across physical interfaces (IFD). Having a shared policer does not work as well as queuing, the policer may drop high-priority traffic regardless of priority. To support queuing on an IFD to enable CoS features to prioritize queuing and shaping requires logical tunnel (LT) and NP configuration.

You must define a pair of logical tunnels that are one-to-one mapped to NPs and redirect traffic with routing to the LT interface before encrypting the traffic through a secure tunnel.

For example, configure lt-0/0/0.0 and lt-0/0/0.1 to connect inet 0 and NP1 (virtual router) and configure a static route to redirect traffic to NP1 as lt-0/0/0.0 next-hop. Because NP1 has 10mbps bandwidth for upstream traffic, lt-0/0.0 can be configured with 10mbps of bandwidth shaping. See [Figure 7 on page 224](#).

Figure 7: CoS Solutions Using Logical Tunnels

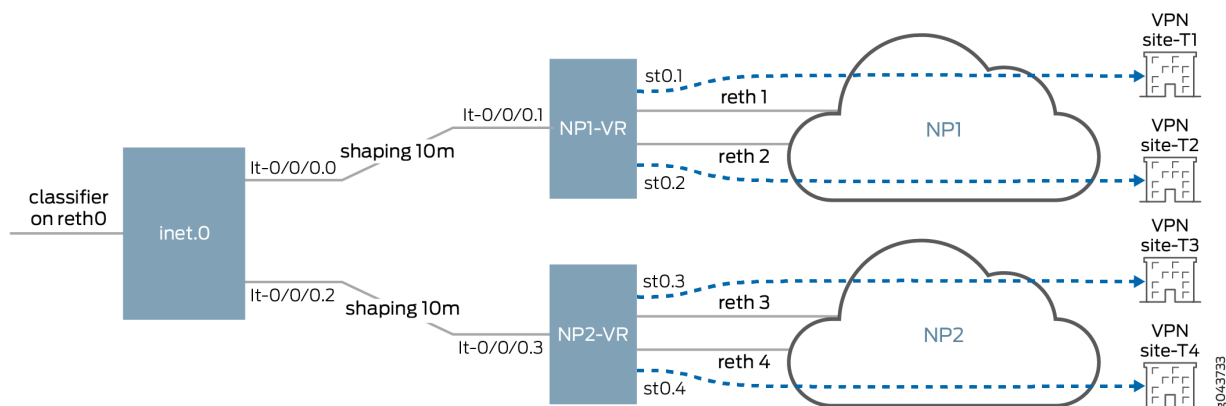

```
routing-instances {
  NP1 {
    instance-type virtual-router;
    interface lt-0/0/0.1;
    interface lo0.0;
    interface reth1.0;
```

```

interface reth2.0;
interface st0.1;
interface st0.2;
routing-options {
    static {
        route 59.200.200.1/32 next-hop <next-hop addr of ipsec tunnel st0.1>;
        route 59.200.200.2/32 next-hop <next-hop addr of ipsec tunnel st0.2>;
        route 60.60.60.1/32 next-hop st0.1;
        route 60.60.60.2/32 next-hop st0.2;
        route 58.58.58.1/32 next-hop lt-0/0/0.1;
        route 58.58.58.2/32 next-hop lt-0/0/0.1;
    }
}
}
NP2 {
    instance-type virtual-router;
    interface lt-0/0/0.3;
    interface lo0.1;
    interface reth3.0;
    interface reth4.0;
    interface st0.3;
    interface st0.4;
    routing-options {
        static {
            route 59.200.200.3/32 next-hop <next-hop addr of ipsec tunnel st0.3>;
            route 59.200.200.4/32 next-hop <next-hop addr of ipsec tunnel st0.4>;
            route 60.60.60.3/32 next-hop st0.3;
            route 60.60.60.4/32 next-hop st0.4;
            route 58.58.58.3/32 next-hop lt-0/0/0.3;
            route 58.58.58.4/32 next-hop lt-0/0/0.3;
        }
    }
}
}

routing-options {
    static {
        route 60.60.60.1/32 next-hop lt-0/0/0.0;
        route 60.60.60.2/32 next-hop lt-0/0/0.0;
        route 60.60.60.3/32 next-hop lt-0/0/0.2;
        route 60.60.60.4/32 next-hop lt-0/0/0.2;
    }
}

```

```

}

class-of-service {
  interfaces {
    lt-0/0/0 {
      unit 0 {
        shaping-rate 10m;
      }
      unit 2 {
        shaping-rate 10m;
      }
    }
  }
}


```

How CoS Queuing Works


Figure 8 on page 226 shows CoS-related processing that occurs for traffic entering and exiting a tunnel. For information on flow-based packet processing, see the [Flow-Based and Packet-Based Processing User Guide for Security Devices](#).

Figure 8: CoS Processing for Tunnel Traffic

Inbound traffic traversing through the tunnel:

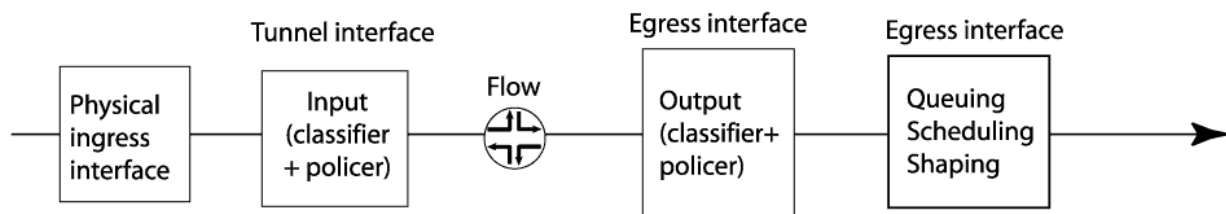

Outbound traffic traversing through the tunnel:

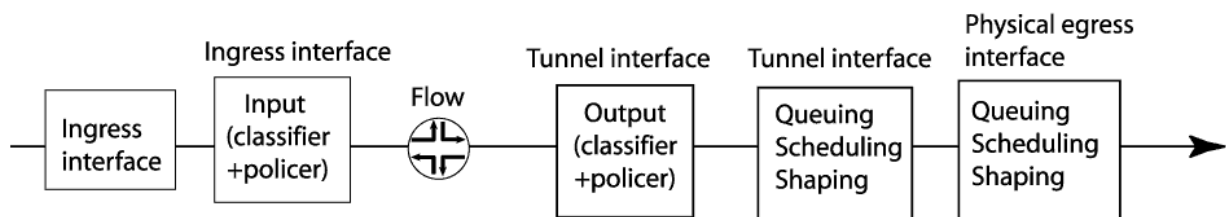

g020124

Limitations on CoS Shapers for Tunnel Interfaces

When defining a CoS shaping rate on a tunnel interface, be aware of the following restrictions:

- The shaping rate on the tunnel interface must be less than that of the physical egress interface.
- The shaping rate only measures the packet size that includes the Layer 3 packet with GRE or IP-IP encapsulation. The Layer 2 encapsulation added by the physical interface is not factored into the shaping rate measurement.
- The CoS behavior works as expected only when the physical interface carries the shaped GRE or IP-IP tunnel traffic alone. If the physical interface carries other traffic, thereby lowering the available bandwidth for tunnel interface traffic, the CoS features do not work as expected.
- You cannot configure a *logical interface* shaper and a virtual circuit shaper simultaneously on the router. If virtual circuit shaping is desired, do not define a logical interface shaper. Instead, define a shaping rate for all the virtual circuits.

Release History Table

Release	Description
20.3R1	Starting with Junos OS Release 20.3R1, you can configure CoS on GRE tunnels for SRX4600 devices.
17.3R1	Starting with Junos OS Release 15.1X49-D100 and Junos OS Release 17.3R1, you can configure CoS on logical tunnels for SRX 300, SRX320, SRX340, SRX345, and SRX550M devices.

RELATED DOCUMENTATION

| [Example: Configuring CoS Queuing for GRE or IP-IP Tunnels](#) | 228

Understanding the ToS Value of a Tunnel Packet

To ensure that the tunneled packet continues to have the same CoS treatment even in the physical interface, you must preserve the type-of-service (ToS) value from the inner IP header to the outer IP header.

For transit traffic, Junos OS preserves the CoS value of the tunnel packet for both GRE and IP-IP tunnel interfaces. The inner IPv4 or IPv6 ToS bits are copied to the outer IPv4 ToS header for both types of tunnel interfaces.

For Routing Engine traffic, however, the router handles GRE tunnel interface traffic differently from IP-IP tunnel interface traffic. Unlike for IP-IP tunnels, the IPv4 ToS bits are not copied to the outer IPv4 header by default. You have a configuration option to copy the ToS value from the packet's inner IPv4 header to the outer IPv4 header.

To copy the inner ToS bits to the outer IP header (which is required for some tunneled routing protocols) on packets sent by the Routing Engine, include the `copy-tos-to-outer-ip-header` statement at the logical unit hierarchy level of a GRE interface.

NOTE: For IPv6 traffic, the inner ToS value is not copied to the outer IPv4 header for both GRE and IP-IP tunnel interfaces even if the `copy-tos-to-outer-ip-header` statement is specified.

This example copies the inner ToS bits to the outer IP header on a GRE tunnel:

```
[edit interfaces]
gr-0/0/0 {
  unit 0 {
    copy-tos-to-outer-ip-header;
    family inet;
  }
}
```

RELATED DOCUMENTATION

[CoS Queuing for Tunnels Overview | 222](#)

[Example: Configuring CoS Queuing for GRE or IP-IP Tunnels | 228](#)

Example: Configuring CoS Queuing for GRE or IP-IP Tunnels

IN THIS SECTION

- [Requirements | 229](#)
- [Overview | 229](#)
- [Configuration | 230](#)

This example shows how to configure CoS queuing for GRE or IP-IP tunnels.

NOTE: CoS queuing is not supported on GRE tunnels in chassis clusters.

Requirements

Before you begin:

- Establish a main office and a branch office connected by a VPN using GRE or IP-IP tunneled interfaces.
- Configure forwarding classes and schedulers. See ["Example: Assigning Forwarding Classes to Output Queues" on page 77](#) and ["Example: Configuring Class-of-Service Schedulers on a Security Device" on page 118](#).
- Configure a scheduler map and apply the scheduler map to the tunnel interface. See ["Example: Configuring and Applying Scheduler Maps" on page 140](#).
- Configure classifiers and apply them to the tunnel interface. See ["Example: Configuring Behavior Aggregate Classifiers" on page 22](#).
- Create rewrite rules and apply them to the tunnel interface. See ["Example: Configuring and Applying Rewrite Rules on a Security Device" on page 96](#).


Overview

IN THIS SECTION

In this example, you enable tunnel queuing, define the GRE tunnel interface as gr-0/0/0, (Alternatively, you could define the IP-IP tunnel interface as ip-0/0/0.) and set the per unit scheduler. You then set the GRE tunnel's line rate as 100 Mbps by using the shaper definition.

In [Figure 9 on page 230](#), Router A has a GRE tunnel established with Router B through interface ge-1/0/0. Router A also has an IP-IP tunnel established with Router C through interface ge-1/0/1. Router A is configured so that tunnel-queuing is enabled. Router B and Router C do not have tunnel-queuing configured.

Figure 9: Configuring CoS Queuing for GRE Tunnels

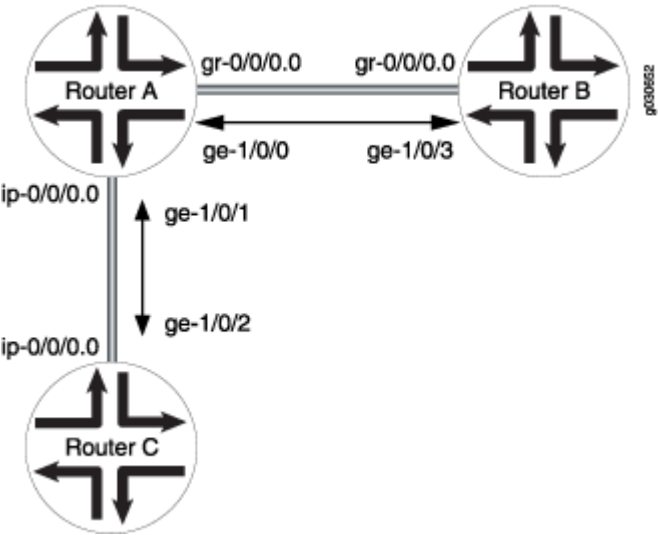

Topology

Configuration

IN THIS SECTION

- [Procedure | 231](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from the configuration mode.

```
set chassis fpc 0 pic 0 tunnel-queuing
set interfaces gr-0/0/0 unit 0
set interfaces gr-0/0/0 per-unit-scheduler
set class-of-services interfaces gr-0/0/0 unit 0 shaping-rate 100m
```

Step-by-Step Procedure

To configure CoS queuing for GRE tunnels:

1. Enable tunnel queuing on the device.

```
[edit]
user@host# set chassis fpc 0 pic 0 tunnel-queuing
```

2. Define the GRE tunnel interface.

```
[edit]
user@host# set interfaces gr-0/0/0 unit 0
```

3. Define the per-unit scheduler for the GRE tunnel interface.

```
[edit]
user@host# set interfaces gr-0/0/0 per-unit-scheduler
```

4. Define the GRE tunnel's line rate by using the shaper definition.

```
[edit]
user@host# set class-of-services interfaces gr-0/0/0 unit 0 shaping-rate 100m
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service interfaces gr-0/0/0`, `show interfaces gr-0/0/0`, and `show chassis` commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service interfaces gr-0/0/0
unit 0 {
  shaping-rate 100m;
}
[edit]
user@host# show interfaces gr-0/0/0
per-unit-scheduler;
unit 0;
[edit]
user@host# show chassis
fpc 0 {
  pic 0 {
    tunnel-queuing;
  }
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying a CoS Queuing for GRE Tunnel Configuration | 233](#)
- [Verifying a CoS Queuing for IP-IP Tunnel Configuration | 235](#)

Confirm that the configuration is working properly.

Verifying a CoS Queuing for GRE Tunnel Configuration

Purpose

Verify that the device is configured properly for tunnel configuration.

Action

From configuration mode, enter the `show interfaces queue gr-0/0/0.0` command.

NOTE: If you enter `gr-0/0/0.0` only, queue information for all tunnels is displayed. If you enter `gr-0/0/0.0`, queue information for the specific tunnel is displayed.

```
user@host> show interfaces queue gr-0/0/0.0
Logical interface gr-0/0/0.0 (Index 68) (SNMP ifIndex 112)
Forwarding classes: 8 supported, 4 in use
Egress queues: 8 supported, 4 in use Burst size: 0
Queue: 0, Forwarding classes: VOICE
  Queued:
    Packets      :           7117734           7998 pps
    Bytes        :       512476848       4606848 bps
  Transmitted:
    Packets      :           4548146           3459 pps
    Bytes        :       327466512       1992912 bps
    Tail-dropped packets :           0           0 pps
    RED-dropped packets :       2569421       4537 pps
      Low        :           0           0 pps
      Medium-low :           0           0 pps
      Medium-high :           0           0 pps
      High       :       2569421       4537 pps
    RED-dropped bytes :       184998312       2613640 bps
      Low        :           0           0 bps
      Medium-low :           0           0 bps
      Medium-high :           0           0 bps
      High       :       184998312       2613640 bps
Queue: 1, Forwarding classes: GOLD
  Queued:
    Packets      :           117600           0 pps
    Bytes        :       8467200           0 bps
  Transmitted:
```

Packets	:	102435	0 pps
Bytes	:	7375320	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	15165	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	15165	0 pps
RED-dropped bytes	:	1091880	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	1091880	0 bps

Queue: 2, Forwarding classes: SILVER

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 3, Forwarding classes: BRONZE

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps

High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Verifying a CoS Queuing for IP-IP Tunnel Configuration

Purpose

Verify that the device is configured properly for tunnel configuration.

Action

From configuration mode, enter the `show interfaces queue ip-0/0/0.0` command.

NOTE: If you enter `ip-0/0/0.0` only, queue information for all tunnels is displayed. If you enter `ip-0/0/0.0`, queue information for the specific tunnel is displayed.

RELATED DOCUMENTATION

[CoS Queuing for Tunnels Overview | 222](#)

[Understanding the ToS Value of a Tunnel Packet | 227](#)

Copying Outer IP Header DSCP and ECN to Inner IP Header

Starting in Junos OS Release 15.1X49-D30 and Junos OS Release 17.3R1, copying of a Differentiated Services Code Point (DSCP) (outer DSCP+ECN) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path is supported.

The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner CoS (DSCP+ECN) rules.

This feature supports chassis cluster and also supports IPv6 and IPv4. The following are supported:

- Copying outer IPv4 DSCP and Explicit Congestion Notification (ECN) field to inner IPv4 DSCP and ECN field

- Copying outer IPv6 DSCP and ECN field to inner IPv6 DSCP and ECN field
- Copying outer IPv4 DSCP and ECN field to inner IPv6 DSCP and ECN field
- Copying outer IPv6 DSCP and ECN field to inner IPv4 DSCP and ECN field

By default this feature is disabled. When you enable this feature on a VPN object, the corresponding IPsec security Association (SA) is cleared and reestablished.

- To enable the feature:

```
set security ipsec vpn vpn-name copy-outer-dscp
```

- To disable the feature:

```
delete security ipsec vpn vpn-name copy-outer-dscp
```

- To verify whether the feature is enabled or not:

```
show security ipsec security-associations detail
```

Release History Table

Release	Description
15.1X49-D30	Starting in Junos OS Release 15.1X49-D30 and Junos OS Release 17.3R1, copying of a Differentiated Services Code Point (DSCP) (outer DSCP+ECN) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path is supported.

RELATED DOCUMENTATION

[IPsec VPN User Guide for Security Devices](#)

show security ipsec security-associations

Understanding CoS Support on st0 Interfaces

IN THIS SECTION

- [Limitations of CoS support on VPN st0 interfaces](#) | 237

Starting with Junos OS Release 15.1X49-D60 and Junos OS Release 17.3R1, class of service (CoS) features such as classifier, policer, queuing, scheduling, shaping, rewriting markers, and virtual channels can now be configured on the secure tunnel interface (st0) for point-to-point VPNs.

The st0 tunnel interface is an internal interface that can be used by route-based VPNs to route cleartext traffics to an IPsec VPN tunnel. The following CoS features are supported on the st0 interface on all available SRX Series devices and vSRX2.0:

- Classifiers
- Policers
- Queuing, scheduling, and shaping
- Rewrite markers
- Virtual channels

NOTE: Starting with Junos OS Release 15.1X49-D70 and Junos OS Release 17.3R1, support for queuing, scheduling, shaping, and virtual channels is added to the st0 interface for SRX5400, SRX5600, and SRX5800 devices. Support for all the listed CoS features is added for the st0 interface for SRX1500, SRX4100, and SRX4200 devices. Starting with Junos OS Release 17.4R1, support for listed CoS features is added for the st0 interface for SRX4600 devices.

Limitations of CoS support on VPN st0 interfaces

The following limitations apply to CoS support on VPN st0 interfaces:

- The maximum number for software queues is 2048. If the number of st0 interfaces exceeds 2048, not enough software queues can be created for all the st0 interfaces.
- Only route-based VPNs can apply CoS features on st0 interfaces. [Table 35 on page 237](#) describes the st0 CoS feature support for different types of VPNs.

Table 35: CoS Feature Support for VPN

Classifier Features	Site-to-Site VPN (P2P)	AutoVPN (P2P)	Site-to-Site/Auto VPN /AD-VPN (P2MP)
Classifiers, policers, and rewriting markers	Supported	Supported	Supported

Queueing, scheduling, and shaping based on st0 logical interfaces	Supported	Not supported	Not supported
Queueing, scheduling, and shaping based on virtual channels	Supported	Supported	Supported

- On SRX300, SRX320, SRX340, SRX345, and SRX550HM devices, one st0 logical interface can bind to multiple VPN tunnels. The eight queues for the st0 logical interface cannot reroute the traffic to different tunnels, so pre-tunneling is not supported.

NOTE: The virtual channel feature can be used as a workaround on SRX300, SRX320, SRX340, SRX345, and SRX550HM devices.

- When defining a CoS shaping rate on an st0 tunnel interface, consider the following restrictions:
 - The shaping rate on the tunnel interface must be less than that of the physical egress interface.
 - The shaping rate only measures the packet size that includes the inner Layer 3 cleartext packet with an ESP/AH header and an outer IP header encapsulation. The outer Layer 2 encapsulation added by the physical interface is not factored into the shaping rate measurement.
 - The CoS behavior works as expected when the physical interface carries the shaped GRE or IP-IP tunnel traffic only. If the physical interface carries other traffic, thereby lowering the available bandwidth for tunnel interface traffic, the CoS features do not work as expected.
- On SRX550M, SRX5400, SRX5600, and SRX5800 devices, bandwidth limit and burst size limit values in a policer configuration are a per-SPU, not per-system limitation. This is the same policer behavior as on the physical interface.

Release History Table

Release	Description
17.4R1	Starting with Junos OS Release 17.4R1, support for listed CoS features is added for the st0 interface for SRX4600 devices.

15.1X49-D70	Starting with Junos OS Release 15.1X49-D70 and Junos OS Release 17.3R1, support for queuing, scheduling, shaping, and virtual channels is added to the st0 interface for SRX5400, SRX5600, and SRX5800 devices. Support for all the listed CoS features is added for the st0 interface for SRX1500, SRX4100, and SRX4200 devices.
15.1X49-D60	Starting with Junos OS Release 15.1X49-D60 and Junos OS Release 17.3R1, class of service (CoS) features such as classifier, policer, queuing, scheduling, shaping, rewriting markers, and virtual channels can now be configured on the secure tunnel interface (st0) for point-to-point VPNs.

Naming Components with Code-Point Aliases

IN THIS CHAPTER

- [Code-Point Aliases Overview | 240](#)
- [Default CoS Values and Aliases | 241](#)
- [Example: Defining Code-Point Aliases for Bits on a Security Device | 244](#)

Code-Point Aliases Overview

A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other class-of-service (CoS) components, such as classifiers, drop-profile maps, and *rewrite rules*.

When you configure classes and define classifiers, you can refer to the markers by alias names. You can configure user-defined classifiers in terms of alias names. If the value of an alias changes, it alters the behavior of any classifier that references it.

The following types of code points are supported by Junos operating system (OS):

- DSCP—Defines aliases for DiffServ code point (DSCP) IPv4 values.

You can refer to these aliases when you configure classes and define classifiers.

- DSCP-IPv6—Defines aliases for DSCP IPv6 values.

You can refer to these aliases when you configure classes and define classifiers.

- EXP—Defines aliases for MPLS EXP bits.

You can map MPLS EXP bits to the device forwarding classes.

- inet-precedence—Defines aliases for IPv4 precedence values.

Precedence values are modified in the IPv4 type-of-service (ToS) field and mapped to values that correspond to levels of service.

RELATED DOCUMENTATION

Default CoS Values and Aliases 241
Example: Defining Code-Point Aliases for Bits on a Security Device 244

Default CoS Values and Aliases

Table 36 on page 241 shows the default mapping between the standard aliases and the bit values.

Table 36: Standard CoS Aliases and Bit Values

CoS Value Type	Alias	Bit Value
MPLS EXP	be	000
	be1	001
	ef	010
	ef1	011
	af11	100
	af12	101
	nc1/cs6	110
	nc2/cs7	111
DSCP and DSCP IPv6	ef	101110
	af11	001010
	af12	001100

Table 36: Standard CoS Aliases and Bit Values *(Continued)*

CoS Value Type	Alias	Bit Value
	af13	001110
	af21	010010
	af22	010100
	af23	010110
	af31	011010
	af32	011100
	af33	011110
	af41	100010
	af42	100100
	af43	100110
	be	000000
	cs1	001000
	cs2	010000
	cs3	011000
	cs4	100000

Table 36: Standard CoS Aliases and Bit Values (*Continued*)

CoS Value Type	Alias	Bit Value
	cs5	101000
	nc1/cs6	110000
	nc2/cs7	111000
IEEE 802.1	be	000
	be1	001
	ef	010
	ef1	011
	af11	100
	af12	101
	nc1/cs6	110
	nc2/cs7	111
IP precedence	be	000
	be1	001
	ef	010
	ef1	011

Table 36: Standard CoS Aliases and Bit Values *(Continued)*

CoS Value Type	Alias	Bit Value
	af11	100
	af12	101
	nc1/cs6	110
	nc2/cs7	111

RELATED DOCUMENTATION

- Code-Point Aliases Overview | 240
- Example: Defining Code-Point Aliases for Bits on a Security Device | 244

Example: Defining Code-Point Aliases for Bits on a Security Device

IN THIS SECTION

- Requirements | 244
- Overview | 245
- Configuration | 245
- Verification | 246

This example shows how to define code-point aliases for bits on a device.

Requirements

Before you begin, determine which default mapping to use. See "Default CoS Values and Aliases" on page 241.

Overview

In this example, you configure class of service and specify names and values for the CoS code-point aliases that you want to configure. Finally, you specify CoS value using the appropriate formats.

Configuration

IN THIS SECTION

- [Procedure | 245](#)

Procedure

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To define code-point aliases for bits on a device:

1. Configure class of service.

```
[edit]
user@host# edit class-of-service
```

2. Specify CoS values.

```
[edit class-of-service]
user@host# set code-point-aliases dscp my1 110001
user@host# set code-point-aliases dscp my2 101110
user@host# set code-point-aliases dscp be 000001
user@host# set code-point-aliases dscp cs7 110000
```

3. If you are done configuring the device, commit the configuration.

```
[edit]  
user@host# commit
```

Verification

To verify the configuration is working properly, enter the `show class-of-service code-point-aliases dscp` command.

RELATED DOCUMENTATION

| [Code-Point Aliases Overview](#) | 240

3

PART

Configuring Class of Service Scheduler Hierarchy

[Controlling Traffic by Configuring Scheduler Hierarchy](#) | 248

Controlling Traffic by Configuring Scheduler Hierarchy

IN THIS CHAPTER

- Understanding Hierarchical Schedulers | 248
- Understanding Internal Scheduler Nodes | 252
- SRX1400, SRX3400, and SRX3600 Device Hardware Capabilities and Limitations | 253
- Example: Configuring a Four-Level Scheduler Hierarchy | 255
- Example: Controlling Remaining Traffic | 274

Understanding Hierarchical Schedulers

Hierarchical schedules consist of nodes and queues. Queues terminate the CLI hierarchy. Nodes can be either root nodes, leaf nodes, or internal (non-leaf) nodes. Internal nodes are nodes that have other nodes as “children” in the hierarchy. For example, if an interface-set statement is configured with a *logical interface* (such as unit 0) and queue, then the interface-set is an internal node at level 2 of the hierarchy. However, if there are no traffic control profiles configured on logical interfaces, then the interface set is at level 3 of the hierarchy.

Table 37 on page 248 shows how the configuration of an interface set or logical interface affects the terminology of hierarchical scheduler nodes.

Table 37: Hierarchical Scheduler Nodes

Root Node (Level 1)	Internal Node (Level 2)	Leaf Node (Level 3)	Queue (Level 4)
Physical interface	Interface set	Logical interfaces	One or more queues
Physical interface	–	Interface set	One or more queues

Table 37: Hierarchical Scheduler Nodes (Continued)

Root Node (Level 1)	Internal Node (Level 2)	Leaf Node (Level 3)	Queue (Level 4)
Physical interface	–	Logical interfaces	One or more queues

When used, the interface set level of the hierarchy falls between the physical interface level (level 1) and the logical interface (level 3). Queues are always level 4 of the hierarchy. The schedulers hold the information about the queues, the last level of the hierarchy. In all cases, the properties for level 4 of the hierarchical schedulers are determined by the scheduler map.

Hierarchical schedulers add CoS parameters to the new interface set level of the configuration. They use traffic control profiles to set values for parameters such as shaping rate (the peak information rate [PIR]), guaranteed rate (the committed information rate [CIR] on these interfaces), and scheduler maps (the queues and resources assigned to traffic).

The following CoS configuration places the following parameters in traffic control profiles at various levels:

- Traffic control profile at the port level (tcp-port-level1):
 - A shaping rate (PIR) of 100 Mbps
 - A delay buffer rate of 100 Mbps
- Traffic control profile at the interface set level (tcp-interface-level2):
 - A shaping rate (PIR) of 60 Mbps
 - A guaranteed rate (CIR) of 40 Mbps
- Traffic control profile at the logical interface level (tcp-unit-level3):
 - A shaping rate (PIR) of 50 Mbps
 - A guaranteed rate (CIR) of 30 Mbps
 - A scheduler map called smap1 to hold various queue properties (level 4)
 - A delay buffer rate of 40 Mbps

In this case, the traffic control profiles look like this:

```
[edit class-of-service traffic-control-profiles]
tcp-port-level1 { # This is the physical port level
    shaping-rate 100m;
```

```

        delay-buffer-rate 100m;
    }
    tcp-interface-level2 { # This is the interface set level
        shaping-rate 60m;
        guaranteed-rate 40m;
    }
    tcp-unit-level3 { # This is the logical interface level
        shaping-rate 50m;
        guaranteed-rate 30m;
        scheduler-map smap1;
        delay-buffer-rate 40m;
    }
}

```

Once configured, the traffic control profiles must be applied to the proper places in the CoS interfaces hierarchy.

```

[edit class-of-service interfaces]
interface-set level-2 {
    output-traffic-control-profile tcp-interface-level-2;
}
ge-0/1/0 {
    output-traffic-control-profile tcp-port-level-1;
    unit 0 {
        output-traffic-control-profile tcp-unit-level-3;
    }
}

```

Interface sets can be defined as a list of logical interfaces, for example, unit 100, unit 200, and so on. Service providers can use these statements to group interfaces to apply scheduling parameters such as guaranteed rate and shaping rate to the traffic in the groups. Interface sets are currently only used by CoS, but they are applied at the [edit interfaces] hierarchy level so that they might be available to other services.

All traffic heading downstream must be gathered into an interface set with the `interface-set` statement at the [edit class-of-service interfaces] hierarchy level.

NOTE: Ranges are not supported; you must list each logical interface separately.

Although the interface set is applied at the [edit interfaces] hierarchy level, the CoS parameters for the interface set are defined at the [edit class-of-service interfaces] hierarchy level, usually with the `output-traffic-control-profile profile-name` statement.

You cannot specify an interface set mixing the logical interface, S-VLAN, or VLAN outer tag list forms of the interface-set statement. A logical interface can only belong to one interface set. If you try to add the same logical interface to different interface sets, the commit will fail.

This example will generate a commit error:

```
[edit interfaces]
interface-set set-one {
  ge-2/0/0 {
    unit 0;
    unit 2;
  }
}
interface-set set-two {
  ge-2/0/0 {
    unit 1;
    unit 3;
    unit 0; # COMMIT ERROR! Unit 0 already belongs to -set-one.
  }
}
```

Members of an interface set cannot span multiple physical interfaces. Only one physical interface is allowed to appear in an interface set.

This configuration is not supported:

```
[edit interfaces]
interface-set set-group {
  ge-0/0/1 {
    unit 0;
    unit 1;
  }
  ge-0/0/2 { # This type of configuration is NOT supported in the same interface set!
    unit 0;
    unit 1;
  }
}
```

You can configure many logical interfaces under an interface. However, only a subset of them might have a traffic control profile attached. For example, you can configure three logical interfaces (units) over the same service VLAN, but you can apply a traffic control profile specifying best-effort and voice

queues to only one of the logical interface units. Traffic from the two remaining logical interfaces is considered remaining traffic.

The scheduler map configured at individual interfaces (Level 3), interface sets (Level 2), or physical ports (Level 1), defines packet scheduling behavior at different levels. You can group logical interfaces in an interface set and configure the interfaces with scheduler maps. Any egress packet arriving at the physical or logical interfaces will be handled by the interface specific scheduler. If the scheduler map is not configured at the interface level, the packet will be handled by the scheduler configured at the interface set level or the port level.

RELATED DOCUMENTATION

[Example: Configuring a Four-Level Scheduler Hierarchy | 255](#)

[Example: Controlling Remaining Traffic | 274](#)

[Understanding Internal Scheduler Nodes | 252](#)

Understanding Internal Scheduler Nodes

A node in the hierarchy is considered internal if either of the following conditions apply:

- One of its children nodes has a traffic control profile configured and applied.
- You configure the `internal-node` statement.

There are more resources available at the *logical interface* (unit) level than at the interface set level. It might be desirable to configure all resources at a single level, rather than spread over several levels. The `internal-node` statement provides this flexibility. This can be a helpful configuration device when interface-set queuing without logical interfaces is used exclusively on the interface.

You can use the `internal-node` statement to raise the interface set without children to the same level as the other configured interface sets with children, allowing them to compete for the same set of resources.

Using the `internal-node` statement allows statements to all be scheduled at the same level with or without children.

The following example makes the interface sets `if-set-1` and `if-set-2` internal:

```
[edit class-of-service interfaces ]
interface-set {
  if-set-1 {
```

```

        internal-node;
        output-traffic-control-profile tcp-200m-no-smap;
    }
    if-set-2 {
        internal-node;
        output-traffic-control-profile tcp-100m-no-smap;
    }
}

```

If an interface set has logical interfaces configured with a traffic control profile, then the use of the `internal-node` statement has no effect.

Internal nodes can specify a `traffic-control-profile-remaining` statement.

RELATED DOCUMENTATION

[Understanding Hierarchical Schedulers | 248](#)

[Example: Configuring a Four-Level Scheduler Hierarchy | 255](#)

[Example: Controlling Remaining Traffic | 274](#)

SRX1400, SRX3400, and SRX3600 Device Hardware Capabilities and Limitations

For SRX1400, SRX3400, and SRX3600 devices, each Input/Output Card (IOC), Flexible PIC Concentrator (FPC), or IOC slot has only one Physical Interface Card (PIC), which contains either two 10-Gigabit Ethernet ports or sixteen 1-Gigabit Ethernet ports. [Table 38 on page 254](#) shows the maximum number of cards and ports allowed in SRX1400, SRX3400, and SRX3600 devices.

NOTE: The number of ports the Network Processing Unit (NPU) needs to handle might be different from the fixed 10:1 port to NPU ratio for 1-Gigabit IOC, or the 1:1 ratio for the 10-Gigabit IOC that is needed on the SRX5600 and SRX5800 devices, leading to oversubscription on the SRX1400, SRX3400, and SRX3600 devices.

Platform support depends on the Junos OS release in your installation.

Table 38: Available NPCs and IO Ports for SRX1400, SRX3400, and SRX3600 Devices

System	IOCs	IO Ports	NPCs
SRX3600	7	108 (16 x 6 + 12)	3
SRX3400	5	76 (16 x 4 + 12)	2
SRX1400	2	28 (16 x 1 + 12)	1

SRX3400 and SRX3600 devices allow you to install up to three Network Processing Cards (NPCs). In a single NPC configuration, the NPC has to process all of the packets to and from each IOC. However, when there is more than one NPC available, an IOC will only exchange packets with a preassigned NPC. You can use the `set chassis ioc-npc-connectivity` CLI statement to configure the IOC-to-NPC mapping. By default, the mapping is assigned so that the load is shared equally among all NPCs. When the mapping is changed, for example, an IOC or NPC is removed, or you have mapped a specific NPC to an IOC, then the device has to be restarted.

NOTE: SRX1400 devices support a single NPC or an NSPC combo card.

For SRX1400, SRX3400, and SRX3600 devices, the IOC supports the following hierarchical scheduler characteristics:

- Level 1- Shaping at the physical interface (ifd)
- Level 2- Shaping and scheduling at the logical interface level (ifl)
- Level 3- Scheduling at the queue level

NOTE: Interface set (iflset) is not supported for SRX1400, SRX3400, and SRX3600 devices.

In SRX5600 and SRX5800 devices, an NPC supports 32 port-level shaping profiles at level 1, such that each front port can have its own shaping profile.

In SRX1400, SRX3400, and SRX3600 devices, an NPC supports only 16 port-level shaping profiles in the hardware, including two profiles that are predefined for 10-GB and 1-GB shaping rates. The user can configure up to 14 different levels of shaping rates. If more levels are configured, then the closest match found in the 16 profiles will be used instead.

For example, assume that a system is already configured with the following rates for ifd:

10 Mbps, 20 Mbps, 40 Mbps, 60 Mbps, 80 Mbps, 100 Mbps, 200 Mbps, 300 Mbps, 400 Mbps, 500 Mbps, 600 Mbps, 700 Mbps, 800 Mbps, 900 Mbps, 1 GB (predefined), 10 GB (predefined)

Each of these 16 rates is programmed into one of the 16 profiles in the hardware; then consider the following two scenarios:

- Scenario 1: If the user changes one port's shaping rate from 1 GB to 100 Mbps, which is already programmed in one of the 16 profiles, the profile with a 100 Mbps shaping rate will be used by the port.
- Scenario 2: If the user changes another port's shaping rate from 1 GB to 50 Mbps, which is not in the shaping profiles, the closest matching profile with a 60 Mbps shaping rate will be used instead.

When scenario 2 occurs, not all of the user-configured rates can be supported by the hardware. Even if more than 14 different rates are specified, only 14 will be programmed in the hardware. Which 14 rates are programmed in the hardware depends on many factors. For this reason, we recommend that you plan carefully and use no more than 14 levels of port-level shaping rates.

Each device supports Weighed Random Early Discard (WRED) at the port level, and each NPU has 512 MB of frame memory. Also, 10-Gigabit Ethernet ports get more buffers than the 1-Gigabit Ethernet ports. Buffer availability depends on how much bandwidth (number of NPCs, ports, 1 GB or 10 GB, and so on) the device has to support. The more bandwidth that the device has to support, the less buffer is available. When two NPCs are available, the amount of frame buffer available is doubled.

RELATED DOCUMENTATION

[Understanding Hierarchical Schedulers | 248](#)

[Example: Configuring a Four-Level Scheduler Hierarchy | 255](#)

[Example: Controlling Remaining Traffic | 274](#)

[Understanding Internal Scheduler Nodes | 252](#)

Example: Configuring a Four-Level Scheduler Hierarchy

IN THIS SECTION

- [Requirements | 256](#)
- [Overview | 256](#)
- [Configuration | 257](#)

This example shows how to configure a 4-level hierarchy of schedulers.

Requirements


Before you begin:

- Review how to configure schedulers. See ["Example: Configuring Class-of-Service Schedulers on a Security Device" on page 118.](#)
- Review RED drop profiles. See [Understanding RED Drop Profiles.](#)
- Review how to configure and apply scheduler maps. See ["Example: Configuring and Applying Scheduler Maps" on page 140.](#)

Overview

The configuration parameters for this example are shown in [Figure 10 on page 256](#). The queues are shown at the top of the figure with the other three levels of the hierarchy below.

Figure 10: Building a Scheduler Hierarchy

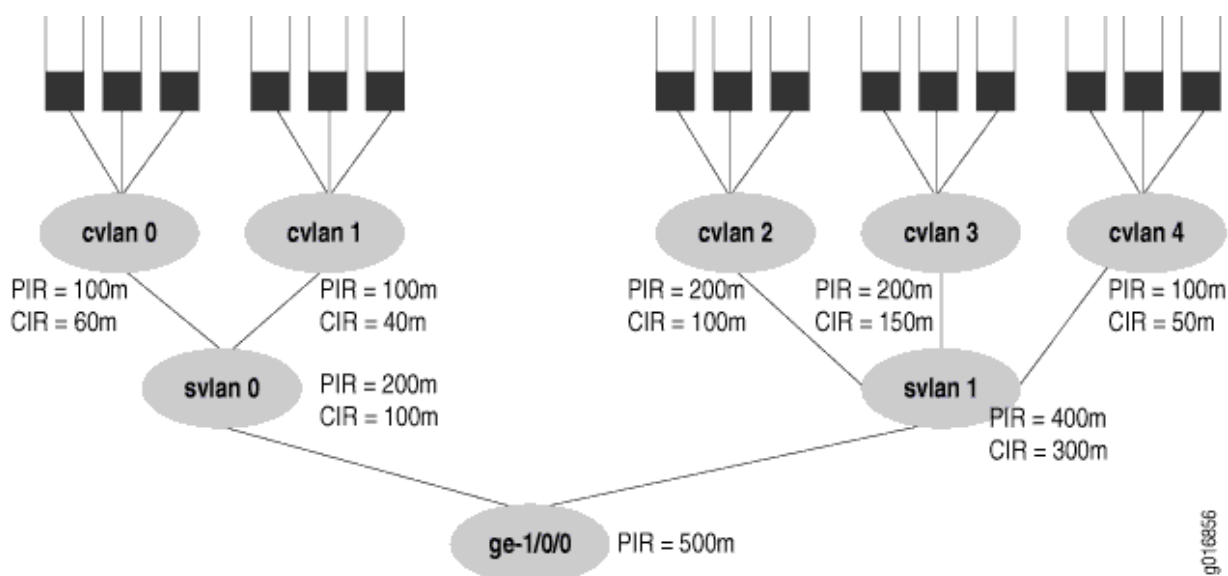

[Figure 10 on page 256](#)'s PIR values will be configured as the shaping rates, and the CIRs will be configured as the guaranteed rate on the Ethernet interface ge-1/0/0. The PIR can be oversubscribed

(that is, the sum of the children PIRs can exceed the parent's, as in `svlan 1`, where $200 + 200 + 100$ exceeds the parent rate of 400). However, the sum of the children node level's CIRs must never exceed the parent node's CIR, as shown in all the service VLANs (otherwise, the guaranteed rate could never be provided in all cases).

NOTE: Although a shaping rate can be applied directly to the physical interface, hierarchical schedulers must use a traffic control profile to hold the shaping rate parameter.

The keyword to configure hierarchical schedulers is at the physical interface level, as are VLAN tagging and the VLAN IDs. In this example, the interface sets are defined by logical interfaces (units) and not outer VLAN tags. All VLAN tags in this example are customer VLAN tags.

The traffic control profiles in this example are for both the service VLAN level (logical interfaces) and the customer VLAN (VLAN tag) level.

This example shows all details of the CoS configuration for the `ge-1/0/0` interface in [Figure 10 on page 256](#).

Configuration

IN THIS SECTION

- [Configuring the Interfaces | 258](#)
- [Configuring the Interface Sets | 259](#)
- [Configuring the Forwarding Classes | 261](#)
- [Configuring the Traffic Control Profiles | 262](#)
- [Configuring the Schedulers | 265](#)
- [Configuring the Drop Profiles | 268](#)
- [Configuring the Scheduler Maps | 269](#)
- [Applying Traffic Control Profiles | 271](#)

This section contains the following topics:

Configuring the Interfaces

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from the configuration mode.

```
set interfaces ge-1/0/0 hierarchical-scheduler
set interfaces ge-1/0/0 vlan-tagging
set interfaces ge-1/0/0 unit 0 vlan-id 100
set interfaces ge-1/0/0 unit 1 vlan-id 101
set interfaces ge-1/0/0 unit 2 vlan-id 102
set interfaces ge-1/0/0 unit 3 vlan-id 103
set interfaces ge-1/0/0 unit 4 vlan-id 104
```

Step-by-Step Procedure

To configure the interfaces:

1. Create the physical interface, and enable hierarchical scheduling and VLAN tagging.

```
[edit interfaces ge-1/0/0]
user@host# set hierarchical-scheduler
user@host# set vlan-tagging
```

2. Create logical interfaces and assign VLAN IDs.

```
[edit interface ge-1/0/0]
user@host# set unit 0 vlan-id 100
user@host# set unit 1 vlan-id 101
user@host# set unit 2 vlan-id 102
user@host# set unit 3 vlan-id 103
user@host# set unit 4 vlan-id 104
```


Results

From configuration mode, confirm your configuration by entering the `show interface ge-1/0/0` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show interface ge-1/0/0
hierarchical-scheduler;
vlan-tagging;
unit 0 {
    vlan-id 100;
}
unit 1 {
    vlan-id 101;
}
unit 2 {
    vlan-id 102;
}
unit 3 {
    vlan-id 103;
}
unit 4 {
    vlan-id 104;
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring the Interface Sets

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```
set interfaces interface-set svlan-0 interface ge-1/0/0 unit 0
set interfaces interface-set svlan-0 interface ge-1/0/0 unit 1
set interfaces interface-set svlan-1 interface ge-1/0/0 unit 2
```

```
set interfaces interface-set svlan-1 interface ge-1/0/0 unit 3
set interfaces interface-set svlan-1 interface ge-1/0/0 unit 4
```

Step-by-Step Procedure

To configure the interface sets:

1. Create the first logical interface and its CoS parameters.

```
[edit interfaces]
user@host# set interface-set svlan-0 interface ge-1/0/0 unit 0
user@host# set interface-set svlan-0 interface ge-1/0/0 unit 1
```

2. Create the second logical interface and its CoS parameters.

```
[edit interfaces]
user@host# set interface-set svlan-1 interface ge-1/0/0 unit 2
user@host# set interface-set svlan-1 interface ge-1/0/0 unit 3
user@host# set interface-set svlan-1 interface ge-1/0/0 unit 4
```

Results

From configuration mode, confirm your configuration by entering the `show interfaces` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show interfaces
interface-set svlan-0 {
  interface ge-1/0/0 {
    unit 0;
    unit 1;
  }
}
interface-set svlan-1 {
  interface ge-1/0/0 {
    unit 2;
    unit 3;
    unit 4;
```

```
}
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring the Forwarding Classes

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service forwarding-classes queue 1 data
set class-of-service forwarding-classes queue 2 video
set class-of-service forwarding-classes queue 3 voice
```

Step-by-Step Procedure

To configure the forwarding classes:

1. Specify a queue number and map it to a class name.

```
[edit class-of-service forwarding-classes]
user@host# set queue 1 data
user@host# set queue 2 video
user@host# set queue 3 voice
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service forwarding-classes` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service forwarding-classes
queue 1 data;
```

```
queue 2 video;
queue 3 voice;
```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring the Traffic Control Profiles

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service traffic-control-profiles tcp-500m-shaping-rate shaping-rate 500m
set class-of-service traffic-control-profiles tcp-svlan0 shaping-rate 200m
set class-of-service traffic-control-profiles tcp-svlan0 guaranteed-rate 100m
set class-of-service traffic-control-profiles tcp-svlan0 delay-buffer-rate 300m
set class-of-service traffic-control-profiles tcp-svlan1 shaping-rate 400m
set class-of-service traffic-control-profiles tcp-svlan1 guaranteed-rate 300m
set class-of-service traffic-control-profiles tcp-svlan1 delay-buffer-rate 100m
set class-of-service traffic-control-profiles tcp-cvlan0 shaping-rate 100m
set class-of-service traffic-control-profiles tcp-cvlan0 guaranteed-rate 60m
set class-of-service traffic-control-profiles tcp-cvlan0 scheduler-map tcp-map-cvlan0
set class-of-service traffic-control-profiles tcp-cvlan1 shaping-rate 100m
set class-of-service traffic-control-profiles tcp-cvlan1 guaranteed-rate 40m
set class-of-service traffic-control-profiles tcp-cvlan1 scheduler-map tcp-map-cvlan1
set class-of-service traffic-control-profiles tcp-cvlan2 shaping-rate 200m
set class-of-service traffic-control-profiles tcp-cvlan2 guaranteed-rate 100m
set class-of-service traffic-control-profiles tcp-cvlan2 scheduler-map tcp-map-cvlanx
set class-of-service traffic-control-profiles tcp-cvlan3 shaping-rate 200m
set class-of-service traffic-control-profiles tcp-cvlan3 guaranteed-rate 150m
set class-of-service traffic-control-profiles tcp-cvlan3 scheduler-map tcp-map-cvlanx
set class-of-service traffic-control-profiles tcp-cvlan4 shaping-rate 100m
set class-of-service traffic-control-profiles tcp-cvlan4 guaranteed-rate 50m
set class-of-service traffic-control-profiles tcp-cvlan4 scheduler-map tcp-map-cvlanx
```

Step-by-Step Procedure

To configure the traffic control profiles:

1. Create the traffic control profile for the physical interface.

```
[edit class-of-service traffic-control-profiles]
user@host# tcp-500m-shaping-rate shaping-rate 500m
```

2. Create the traffic control profiles and parameters for the S-VLAN (logical interfaces) level.

```
[edit class-of-service traffic-control-profiles]
user@host# set tcp-svlan0 shaping-rate 200m
user@host# set tcp-svlan0 guaranteed-rate 100m
user@host# set tcp-svlan0 delay-buffer-rate 300m
user@host# set tcp-svlan1 shaping-rate 400m
user@host# set tcp-svlan1 guaranteed-rate 300m
user@host# set tcp-svlan1 delay-buffer-rate 100m
```

3. Create the traffic control profiles and parameters for the C-VLAN (VLAN tags) level.

```
[edit class-of-service traffic-control-profiles]
user@host# set tcp-cvlan0 shaping-rate 100m
user@host# set tcp-cvlan0 guaranteed-rate 60m
user@host# set tcp-cvlan0 scheduler-map tcp-map-cvlan0
user@host# set tcp-cvlan1 shaping-rate 100m
user@host# set tcp-cvlan1 guaranteed-rate 40m
user@host# set tcp-cvlan1 scheduler-map tcp-map-cvlan1
user@host# set tcp-cvlan2 shaping-rate 200m
user@host# set tcp-cvlan2 guaranteed-rate 100m
user@host# set tcp-cvlan2 scheduler-map tcp-map-cvlanx
user@host# set tcp-cvlan3 shaping-rate 200m
user@host# set tcp-cvlan3 guaranteed-rate 150m
user@host# set tcp-cvlan3 scheduler-map tcp-map-cvlanx
user@host# set tcp-cvlan4 shaping-rate 100m
user@host# set tcp-cvlan4 guaranteed-rate 50m
user@host# set tcp-cvlan4 scheduler-map tcp-map-cvlanx
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service traffic-control-profiles` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service traffic-control-profiles
tcp-500m-shaping-rate {
    shaping-rate 500m;
}
tcp-svlan0 {
    shaping-rate 200m;
    guaranteed-rate 100m;
    delay-buffer-rate 300m; # This parameter is not shown in the figure
}
tcp-svlan1 {
    shaping-rate 400m;
    guaranteed-rate 300m;
    delay-buffer-rate 100m; # This parameter is not shown in the figure
}
tcp-cvlan0 {
    shaping-rate 100m;
    guaranteed-rate 60m;
    scheduler-map tcp-map-cvlan0; # This example applies scheduler maps to customer VLANs
}
tcp-cvlan1 {
    shaping-rate 100m;
    guaranteed-rate 40m;
    scheduler-map tcp-map-cvlan1; # This example applies scheduler maps to customer VLANs
}
tcp-cvlan2 {
    shaping-rate 200m;
    guaranteed-rate 100m;
    scheduler-map tcp-map-cvlanx; # This example applies scheduler maps to customer VLANs
}
tcp-cvlan3 {
    shaping-rate 200m;
    guaranteed-rate 150m;
    scheduler-map tcp-map-cvlanx; # This example applies scheduler maps to customer VLANs
}
tcp-cvlan4 {
```

```

shaping-rate 100m;
guaranteed-rate 50m;
scheduler-map tcp-map-cvlanx; # This example applies scheduler maps to customer VLANs
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring the Schedulers

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```

set class-of-service schedulers sched-cvlan0-qx transmit-rate 20m
set class-of-service schedulers sched-cvlan0-qx buffer-size temporal 100k
set class-of-service schedulers sched-cvlan0-qx priority low
set class-of-service schedulers sched-cvlan0-qx drop-profile-map loss-priority low protocol any
drop-profile dp-low
set class-of-service schedulers sched-cvlan0-qx drop-profile-map loss-priority high protocol any
drop-profile dp-high
set class-of-service schedulers sched-cvlan1-q0 transmit-rate 20m
set class-of-service schedulers sched-cvlan1-q0 buffer-size percent 40
set class-of-service schedulers sched-cvlan1-q0 priority high
set class-of-service schedulers sched-cvlan1-q0 drop-profile-map loss-priority low protocol any
drop-profile dp-low
set class-of-service schedulers sched-cvlan1-q0 drop-profile-map loss-priority high protocol any
drop-profile dp-high
set class-of-service schedulers sched-cvlanx-qx transmit-rate percent 30
set class-of-service schedulers sched-cvlanx-qx buffer-size percent 30
set class-of-service schedulers sched-cvlanx-qx drop-profile-map loss-priority low protocol any
drop-profile dp-low
set class-of-service schedulers sched-cvlanx-qx drop-profile-map loss-priority high protocol any
drop-profile dp-high
set class-of-service schedulers sched-cvlan1-qx transmit-rate 10m
set class-of-service schedulers sched-cvlan1-qx buffer-size temporal 100k
set class-of-service schedulers sched-cvlan1-qx drop-profile-map loss-priority low protocol any
drop-profile dp-low

```

```
set class-of-service schedulers sched-cvlan1-qx drop-profile-map loss-priority high protocol any
drop-profile dp-high
```

Step-by-Step Procedure

To configure the schedulers:

1. Create the schedulers and their parameters.

```
[edit class-of-service schedulers]
user@host# set sched-cvlan0-qx priority low transmit-rate 20m
user@host# set sched-cvlan0-qx buffer-size temporal 100k
user@host# set sched-cvlan0-qx priority low
user@host# set sched-cvlan0-qx drop-profile-map loss-priority low protocol any drop-profile
dp-low
user@host# set sched-cvlan0-qx drop-profile-map loss-priority high protocol any drop-profile
dp-high
user@host# set sched-cvlan1-q0 priority high transmit-rate 20m
user@host# set sched-cvlan1-q0 buffer-size percent 40
user@host# set sched-cvlan1-q0 priority high
user@host# set sched-cvlan1-q0 drop-profile-map loss-priority low protocol any drop-profile
dp-low
user@host# set sched-cvlan1-q0 drop-profile-map loss-priority high protocol any drop-profile
dp-high
user@host# set sched-cvlanx-qx transmit-rate percent 30
user@host# set sched-cvlanx-qx buffer-size percent 30
user@host# set sched-cvlanx-qx drop-profile-map loss-priority low protocol any drop-profile
dp-low
user@host# set sched-cvlanx-qx drop-profile-map loss-priority high protocol any drop-profile
dp-high
user@host# set sched-cvlan1-qx transmit-rate 10m
user@host# set sched-cvlan1-qx buffer-size temporal 100k
user@host# set sched-cvlan1-qx drop-profile-map loss-priority low protocol any drop-profile
dp-low
user@host# set sched-cvlan1-qx drop-profile-map loss-priority high protocol any drop-profile
dp-high
```


Results

From configuration mode, confirm your configuration by entering the `show class-of-service schedulers` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service schedulers
sched-cvlan0-qx {
    transmit-rate 20m;
    buffer-size temporal 100k;
    priority low;
    drop-profile-map loss-priority low protocol any drop-profile dp-low;
    drop-profile-map loss-priority high protocol any drop-profile dp-high;
}
sched-cvlan1-q0 {
    transmit-rate 20m;
    buffer-size percent 40;
    priority high;
    drop-profile-map loss-priority low protocol any drop-profile dp-low;
    drop-profile-map loss-priority high protocol any drop-profile dp-high;
}
sched-cvlanx-qx {
    transmit-rate percent 30;
    buffer-size percent 30;
    drop-profile-map loss-priority low protocol any drop-profile dp-low;
    drop-profile-map loss-priority high protocol any drop-profile dp-high;
}
sched-cvlan1-qx {
    transmit-rate 10m;
    buffer-size temporal 100k;
    drop-profile-map loss-priority low protocol any drop-profile dp-low;
    drop-profile-map loss-priority high protocol any drop-profile dp-high;
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring the Drop Profiles

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service drop-profiles dp-low interpolate fill-level 80 drop-probability 80
set class-of-service drop-profiles dp-low interpolate fill-level 100 drop-probability 100
set class-of-service drop-profiles dp-high interpolate fill-level 60 drop-probability 80
set class-of-service drop-profiles dp-high interpolate fill-level 80 drop-probability 100
```

Step-by-Step Procedure

To configure the drop profiles:

1. Create the low drop profile.

```
[edit class-of-service drop-profiles]
user@host# set dp-low interpolate fill-level 80 drop-probability 80
user@host# set dp-low interpolate fill-level 100 drop-probability 100
```

2. Create the high drop profile.

```
[edit class-of-service drop-profiles]
user@host# set dp-high interpolate fill-level 60 drop-probability 80
user@host# set dp-high interpolate fill-level 80 drop-probability 100
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service drop-profiles` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service drop-profiles
```

```

dp-low {
    interpolate {
        fill-level [ 80 100 ];
        drop-probability [ 80 100 ];
    }
}
dp-high {
    interpolate {
        fill-level [ 60 80 ];
        drop-probability [ 80 100 ];
    }
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Configuring the Scheduler Maps

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```

set class-of-service scheduler-maps tcp-map-cvlan0 forwarding-class voice scheduler sched-cvlan0-qx
set class-of-service scheduler-maps tcp-map-cvlan0 forwarding-class video scheduler sched-cvlan0-qx
set class-of-service scheduler-maps tcp-map-cvlan0 forwarding-class data scheduler sched-cvlan0-qx
set class-of-service scheduler-maps tcp-map-cvlan1 forwarding-class voice scheduler sched-cvlan1-q0
set class-of-service scheduler-maps tcp-map-cvlan1 forwarding-class video scheduler sched-cvlan1-qx
set class-of-service scheduler-maps tcp-map-cvlan1 forwarding-class data scheduler sched-cvlan1-qx
set class-of-service scheduler-maps tcp-map-cvlanx forwarding-class voice scheduler sched-cvlanx-qx
set class-of-service scheduler-maps tcp-map-cvlanx forwarding-class video scheduler sched-cvlanx-qx

```

```
set class-of-service scheduler-maps tcp-map-cvlanx forwarding-class data scheduler sched-cvlanx-qx
```

Step-by-Step Procedure

To configure three scheduler maps:

1. Create the first scheduler map.

```
[edit class-of-service scheduler-maps]
user@host# set tcp-map-cvlan0 forwarding-class voice scheduler sched-cvlan0-qx
user@host# set tcp-map-cvlan0 forwarding-class video scheduler sched-cvlan0-qx
user@host# set tcp-map-cvlan0 forwarding-class data scheduler sched-cvlan0-qx
```

2. Create the second scheduler map.

```
[edit class-of-service scheduler-maps]
user@host# set tcp-map-cvlan1 forwarding-class voice scheduler sched-cvlan1-q0
user@host# set tcp-map-cvlan1 forwarding-class video scheduler sched-cvlan1-qx
user@host# set tcp-map-cvlan1 forwarding-class data scheduler sched-cvlan1-qx
```

3. Create the third scheduler map.

```
[edit class-of-service scheduler-maps]
user@host# set tcp-map-cvlanx forwarding-class voice scheduler sched-cvlanx-qx
user@host# set tcp-map-cvlanx forwarding-class video scheduler sched-cvlanx-qx
user@host# set tcp-map-cvlanx forwarding-class data scheduler sched-cvlanx-qx
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service scheduler-maps` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service scheduler-maps
tcp-map-cvlan0 {
    forwarding-class voice scheduler sched-cvlan0-qx;
```

```

    forwarding-class video scheduler sched-cvlan0-qx;
    forwarding-class data scheduler sched-cvlan0-qx;
}
tcp-map-cvlan1 {
    forwarding-class voice scheduler sched-cvlan1-q0;
    forwarding-class video scheduler sched-cvlan1-qx;
    forwarding-class data scheduler sched-cvlan1-qx;
}
tcp-map-cvlanx {
    forwarding-class voice scheduler sched-cvlanx-qx;
    forwarding-class video scheduler sched-cvlanx-qx;
    forwarding-class data scheduler sched-cvlanx-qx;
}

```

If you are done configuring the device, enter `commit` from configuration mode.

Applying Traffic Control Profiles

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the `[edit]` hierarchy level, and then enter `commit` from configuration mode.

```

set class-of-service interfaces ge-1/0/0 output-traffic-control-profile tcp-500m-shaping-rate
set class-of-service interfaces ge-1/0/0 unit 0 output-traffic-control-profile tcp-cvlan0
set class-of-service interfaces ge-1/0/0 unit 1 output-traffic-control-profile tcp-cvlan1
set class-of-service interfaces ge-1/0/0 unit 2 output-traffic-control-profile tcp-cvlan2
set class-of-service interfaces ge-1/0/0 unit 3 output-traffic-control-profile tcp-cvlan3
set class-of-service interfaces ge-1/0/0 unit 4 output-traffic-control-profile tcp-cvlan4
set class-of-service interfaces interface-set svlan0 output-traffic-control-profile tcp-svlan0
set class-of-service interfaces interface-set svlan1 output-traffic-control-profile tcp-svlan1

```

Step-by-Step Procedure

To apply traffic control profiles:

1. Apply the traffic control profile for the interface.

```
[edit class-of-service interfaces ge-1/0/0]
user@host# set output-traffic-control-profile tcp-500m-shaping-rate
```

2. Apply the traffic control profiles for the C-VLANs.

```
[edit class-of-service interfaces ge-1/0/0]
user@host# set unit 0 output-control-traffic-control-profile tcp-cvlan0
user@host# set unit 1 output-control-traffic-control-profile tcp-cvlan1
user@host# set unit 2 output-control-traffic-control-profile tcp-cvlan2
user@host# set unit 3 output-control-traffic-control-profile tcp-cvlan3
user@host# set unit 4 output-control-traffic-control-profile tcp-cvlan4
```

3. Apply the traffic control profiles for the S-VLANs.

```
[edit class-of-service interfaces]
user@host# set interface-set-svlan0 output-control-traffic-control-profile tcp-svlan0
user@host# set interface-set-svlan1 output-control-traffic-control-profile tcp-svlan1
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service interfaces` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service interfaces
ge-1/0/0 {
  output-traffic-control-profile tcp-500m-shaping-rate;
  unit 0 {
    output-traffic-control-profile tcp-cvlan0;
  }
  unit 1 {
    output-traffic-control-profile tcp-cvlan1;
  }
  unit 2 {
    output-traffic-control-profile tcp-cvlan2;
  }
}
```

```
unit 3 {  
    output-traffic-control-profile tcp-cvlan3;  
}  
unit 4 {  
    output-traffic-control-profile tcp-cvlan4;  
}  
}  
interface-set svlan0 {  
    output-traffic-control-profile tcp-svlan0;  
}  
interface-set svlan1 {  
    output-traffic-control-profile tcp-svlan1;  
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying Scheduler Hierarchy Configuration | 273](#)

Verifying Scheduler Hierarchy Configuration

Purpose

Verify that the scheduler hierarchy is configured properly.

Action

From operational mode, enter the following commands:

- `show interface ge-1/0/0`
- `show class-of-service interfaces`
- `show class-of-service traffic-control-profiles`
- `show class-of-service schedulers`
- `show class-of-service drop-profiles`

- `show class-of-service scheduler-maps`

RELATED DOCUMENTATION

[Understanding Hierarchical Schedulers | 248](#)

[Example: Controlling Remaining Traffic | 274](#)

[Understanding Internal Scheduler Nodes | 252](#)

Example: Controlling Remaining Traffic

IN THIS SECTION

- [Requirements | 274](#)
- [Overview | 274](#)
- [Configuration | 277](#)
- [Verification | 281](#)

This example shows how to control remaining traffic from the remaining logical interfaces.

Requirements

Before you begin:


- Review how to configure schedulers. See ["Example: Configuring Class-of-Service Schedulers on a Security Device" on page 118](#).
- Review how to configure and apply scheduler maps. See ["Example: Configuring and Applying Scheduler Maps" on page 140](#).

Overview

To configure transmit rate guarantees for the remaining traffic, you configure the `output-traffic-control-profile-remaining` statement specifying a guaranteed rate for the remaining traffic. Without this statement, the remaining traffic gets a default, minimal bandwidth. Similarly, you can specify the `shaping-rate` and `delay-buffer-rate` statements in the traffic control profile referenced with the `output-traffic-control-profile-remaining` statement to shape and provide buffering for remaining traffic.

In the interface shown in [Figure 11 on page 275](#), customer VLANs 3 and 4 have no explicit traffic control profile. However, the service provider might want to establish a shaping and guaranteed transmit rate for aggregate traffic heading for those C-VLANs. The solution is to configure and apply a traffic control profile for all remaining traffic on the interface.


Figure 11: Example 1 Handling Remaining Traffic with no Explicit Traffic Control Profile

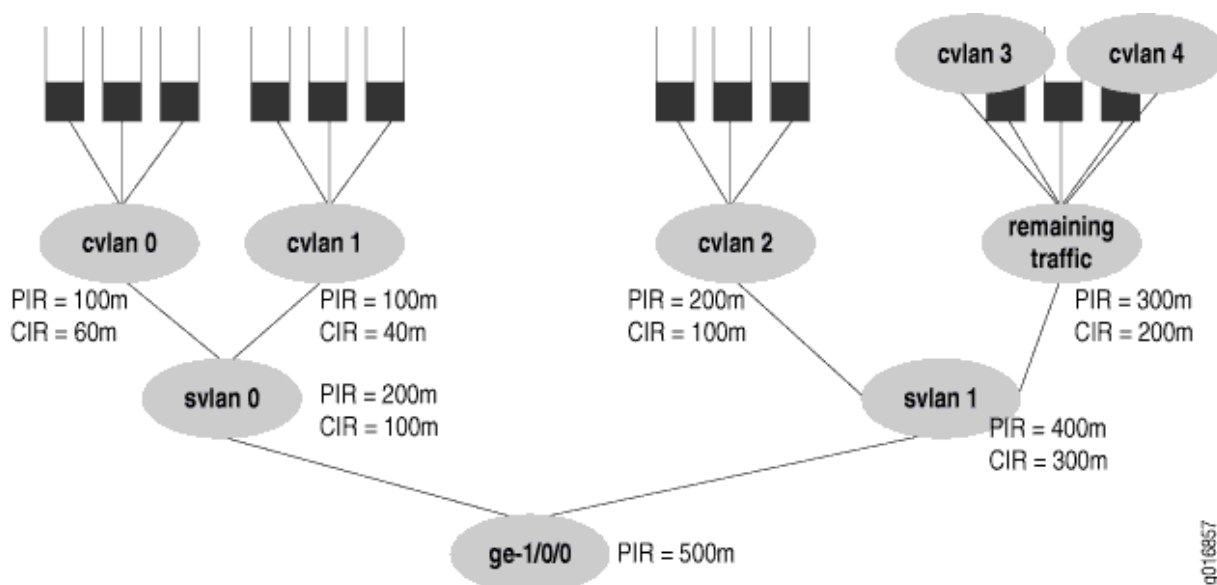

Example 1 considers the case where C-VLANs 3 and 4 have no explicit traffic control profile, yet need to establish a shaping and guaranteed transmit rate for traffic heading for those C-VLANs. The solution is to add a traffic control profile to the svlan1 interface set. This example builds on the example used in ["Example: Configuring a Four-Level Scheduler Hierarchy" on page 255](#) and does not repeat all configuration details, only those at the S-VLAN level.

Next, consider Example 2 shown in [Figure 12 on page 276](#).

Figure 12: Example 2 Handling Remaining Traffic with an Interface Set

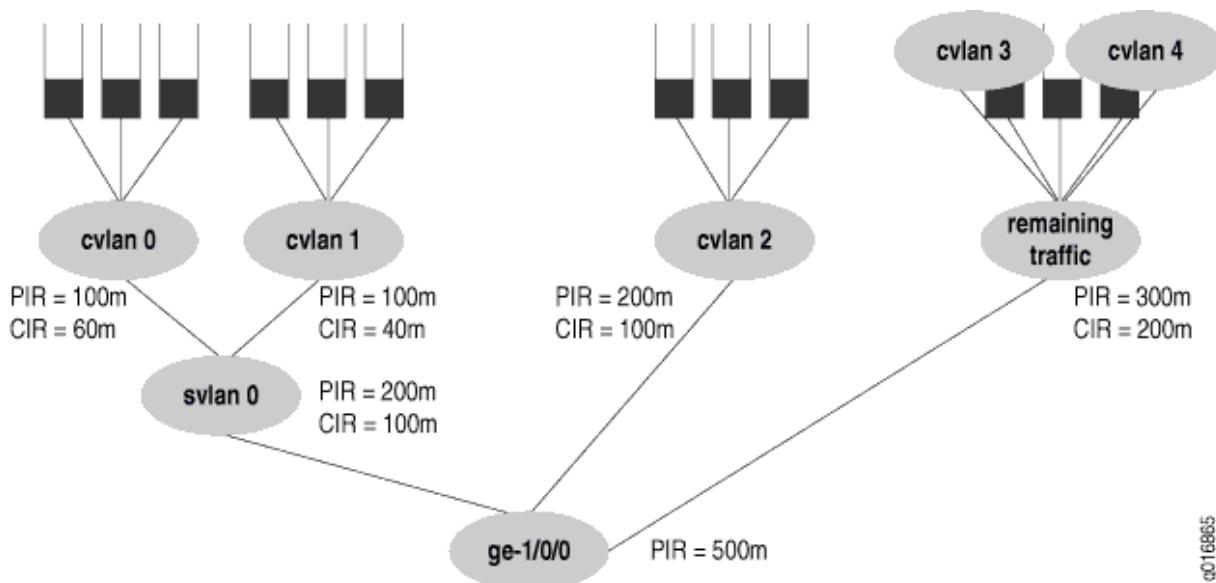

In Example 2, ge-1/0/0 has five logical interfaces (C-VLAN 0, 1, 2, 3 and 4), and S-VLAN 0, which are covered by the interface set:

- Scheduling for the interface set svlan0 is specified by referencing an output-traffic-control-profile statement, which specifies the guaranteed-rate, shaping-rate, and delay-buffer-rate statement values for the interface set. In this example, the output traffic control profile called tcp-svlan0 guarantees 100 Mbps and shapes the interface set svlan0 to 200 Mbps.
- Scheduling and queuing for remaining traffic of svlan0 is specified by referencing an output-traffic-control-profile-remaining statement, which references a scheduler-map statement that establishes queues for the remaining traffic. The specified traffic control profile can also configure guaranteed, shaping, and delay-buffer rates for the remaining traffic. In Example 2, output-traffic-control-profile-remaining tcp-svlan0-rem references scheduler-map smap-svlan0-rem, which calls for a best-effort queue for remaining traffic (that is, traffic on unit 3 and unit 4, which is not classified by the svlan0 interface set). The example also specifies a guaranteed-rate of 200 Mbps and a shaping-rate of 300 Mbps for all remaining traffic.
- Scheduling and queuing for logical interface ge-1/0/0 unit 1 is configured “traditionally” and uses an output-traffic-control-profile specified for that unit. In this example, output-traffic-control-profile tcp-if11 specifies scheduling and queuing for ge-1/0/0 unit 1.

Configuration

IN THIS SECTION

- [Controlling Remaining Traffic With No Explicit Traffic Control Profile | 277](#)
- [Controlling Remaining Traffic With An Interface Set | 279](#)

This section contains the following topics:

Controlling Remaining Traffic With No Explicit Traffic Control Profile

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service interfaces interface-set svlan0 output-traffic-control-profile tcp-svlan0
set class-of-service interfaces interface-set svlan1 output-traffic-control-profile tcp-svlan1
set class-of-service interfaces interface-set svlan1 output-traffic-control-profile-remaining
tcp-svlan1-remaining
set class-of-service traffic-control-profiles tcp-svlan1 shaping-rate 400m guaranteed-rate 300m
set class-of-service traffic-control-profiles tcp-svlan1-remaining shaping-rate 300m guaranteed-
rate 200m scheduler-map smap-remainder
```

Step-by-Step Procedure

To control remaining traffic with no explicit traffic control profile:

1. Set the logical interfaces for the S-VLANs.

```
[edit class-of-service interfaces]
user@host# set interface-set svlan0 output-traffic-control-profile tcp-svlan0
user@host# set interface-set svlan1 output-traffic-control-profile tcp-svlan1
user@host# set interface-set svlan1 output-traffic-control-profile-remaining tcp-svlan1-
remaining
```

2. Set the shaping and guaranteed transmit rates for traffic heading for those C-VLANs.

```
[edit class-of-service traffic-control-profiles]
user@host# set tcp-svlan1 shaping-rate 400m guaranteed-rate 300m
user@host# set tcp-svlan1-remaining shaping-rate 300m guaranteed-rate 200m scheduler-map smap-remainder
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service interfaces` and `show class-of-service traffic-control-profiles` commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service interfaces
interface-set svlan0 {
    output-traffic-control-profile tcp-svlan0;
}
interface-set svlan1 {
    output-traffic-control-profile tcp-svlan1;
    output-traffic-control-profile-remaining tcp-svlan1-remaining; # For all remaining traffic
}

[edit]
user@host# show class-of-service traffic-control-profiles
tcp-svlan1 {
    shaping-rate 400m;
    guaranteed-rate 300m;
}
tcp-svlan1-remaining {
    shaping-rate 300m;
    guaranteed-rate 200m;
    scheduler-map smap-remainder; # this smap is not shown in detail
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Controlling Remaining Traffic With An Interface Set

CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service interfaces interface-set svlan0 output-traffic-control-profile tcp-svlan0
set class-of-service interfaces ge-1/0/0 output-traffic-control-profile-remaining tcp-svlan0-rem
unit 1 output-traffic-control-profile tcp-ifl1
set class-of-service traffic-control-profiles tcp-svlan0 shaping-rate 200m guaranteed-rate 100m
set class-of-service traffic-control-profiles tcp-svlan0-rem shaping-rate 300m guaranteed-rate
200m scheduler-map smap-svlan0-rem
set class-of-service traffic-control-profiles tcp-ifl1 scheduler-map smap-ifl1
set class-of-service scheduler-maps smap-svlan0-rem forwarding-class best-effort scheduler-sched-
foo
set class-of-service scheduler-maps smap-ifl1 forwarding-class best-effort scheduler-sched-bar
set class-of-service scheduler-maps smap-ifl1 forwarding-class assured-forwarding scheduler-
sched-bar
```

Step-by-Step Procedure

To control remaining traffic with an interface set:

1. Set the interface set for the S-VLAN.

```
[edit class-of-service interfaces]
user@host# set interface-set svlan0 output-traffic-control-profile tcp-svlan0
user@host# set ge-1/0/0 output-traffic-control-profile-remaining tcp-svlan0-rem unit 1 output-
traffic-control-profile tcp-ifl1
```

2. Set the traffic control profiles.

```
[edit class-of-service traffic-control-profiles]
user@host# set tcp-svlan0 shaping-rate 200m guaranteed-rate 100m
user@host# set tcp-svlan0-rem shaping-rate 300m guaranteed-rate 200m scheduler-map smap-
```

```
svlan0-rem
user@host# set tcp-ifl1 scheduler-map smap-ifl1
```

3. Set the scheduler map.

```
[edit class-of-service scheduler-maps]
user@host# set smap-svlan0-rem forwarding-class best-effort scheduler-sched-foo
user@host# set smap-ifl1 forwarding-class best-effort scheduler-sched-bar
user@host# set smap-ifl1 forwarding-class assured-forwarding scheduler-sched-bar
```

Results

From configuration mode, confirm your configuration by entering the `show class-of-service interfaces`, `show class-of-service traffic-control-profiles`, and `show class-of-service scheduler-maps` commands. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it. Example 2 does not include the `[edit interfaces]` configuration.

```
[edit]
user@host# show class-of-service interfaces
interface-set {
  svlan0 {
    output-traffic-control-profile tcp-svlan0; # Guarantee & shaper for svlan0
  }
}
ge-1/0/0 {
  output-traffic-control-profile-remaining tcp-svlan0-rem
  # Unit 3 and 4 are not explicitly configured, but captured by "remaining"
  unit 1 {
    output-traffic-control-profile tcp-ifl1; # Unit 1 be & ef queues
  }
}

[edit]
user@host# show class-of-service traffic-control-profiles
tcp-svlan0 {
  shaping-rate 200m;
  guaranteed-rate 100m;
}
tcp-svlan0-rem {
  shaping-rate 300m;
```

```

    guaranteed-rate 200m;
    scheduler-map smap-svlan0-rem; # This specifies queues for remaining traffic
}
tcp-ifl1 {
    scheduler-map smap-ifl1;
}

[edit]
user@host# show class-of-service scheduler-maps
smap-svlan0-rem {
    forwarding-class best-effort scheduler sched-foo;
}
smap-ifl1 {
    forwarding-class best-effort scheduler sched-bar;
    forwarding-class assured-forwarding scheduler sched-baz;
}

```

If you are done configuring the device, enter `commit` from configuration mode.

The configuration for the referenced schedulers is not given for this example.

Verification

IN THIS SECTION

- [Verifying Remaining Traffic Control | 281](#)

Verifying Remaining Traffic Control

Purpose

Verify that the remaining traffic is controlled properly.

Action

From operational mode, enter the following commands:

- `show class-of-service interfaces`
- `show class-of-service traffic-control-profiles`

- `show class-of-service scheduler-maps`

RELATED DOCUMENTATION

| [Understanding Hierarchical Schedulers](#) | 248

4

PART

Configuring Class of Service for IPv6

Configuring Class of Service for IPv6 Traffic | 284

Configuring Class of Service for IPv6 Traffic

IN THIS CHAPTER


- CoS Functions for IPv6 Traffic Overview | 284
- Understanding CoS with DSCP IPv6 BA Classifier | 287
- Example: Configuring CoS with DSCP IPv6 BA Classifiers | 287
- Understanding DSCP IPv6 Rewrite Rules | 292
- Example: Configuring CoS with DSCP IPv6 Rewrite Rules | 293

CoS Functions for IPv6 Traffic Overview

Class-of-service (CoS) processing for IPv6 traffic uses the IPv6 DiffServ code point (DSCP) value. The IPv6 DSCP value is the first six bits in the 8-bit Traffic Class field of the IPv6 header. The DSCP value is used to determine the behavior aggregate (BA) classification for the packet entering the network device. You use classifier rules to map the DSCP code points to a forwarding class and packet loss priority. You use *rewrite rules* to map the forwarding class and packet loss priority back to DSCP values on packets exiting the device.

Figure 13 on page 285 shows the components of the CoS features for Juniper Networks devices, illustrating the sequence in which they interact.

Figure 13: Packet Flow Through an SRX Series Device

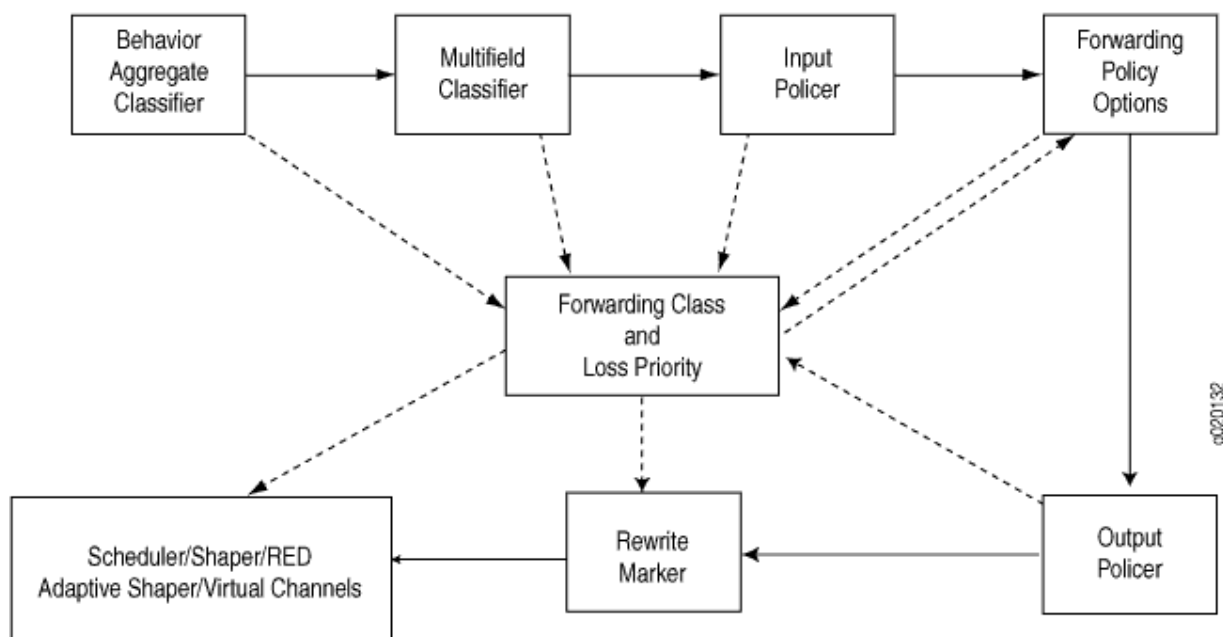

NOTE: Not all CoS features are supported on all devices.

- CoS components perform the following operations:

BA classifier rules map DSCP code points to a forwarding class and loss priority. The forwarding class and loss priority determine the per-hop behavior of the packet throughout the system. The forwarding class associates a packet with an outbound transmission queue. Loss priority affects the scheduling of a packet without affecting the relative ordering of packets. BA classification is a simple way that “downstream” nodes can honor the CoS objectives that were encoded “upstream.”

See ["Example: Configuring CoS with DSCP IPv6 BA Classifiers"](#) on page 287.

- Multifield classifier rules overwrite the initial forwarding class and loss priority determination read by the BA classifier rule. You typically use multifield classifier rules on nodes close to the content origin, where a packet might not have been encoded with the desired DSCP values in the headers. A multifield classifier rule assigns packets to a forwarding class and assigns a packet loss priority based on filters, such as source IP, destination IP, port, or application.

See ["Example: Configuring and Applying a Firewall Filter for a Multifield Classifier"](#) on page 58.

- Input policers meter traffic to see if traffic flow exceeds its service level. Policers might discard, change the forwarding class and loss priority, or set the packet loss priority bit of a packet. A packet for which the packet loss priority bit is set has an increased probability of being dropped during congestion.
- Scheduler maps are applied to interfaces and associate the outgoing packets with a scheduler and a forwarding class.

The scheduler manages the output transmission queue, including:

- Buffer size—Defines the period for which a packet is stored during congestion.
- Scheduling priority and transmit rate—Determines the order in which a packet is transmitted.
- Drop profile—Defines how aggressively to drop a packet that is using a particular scheduler.

See ["Example: Configuring Class-of-Service Schedulers on a Security Device" on page 118](#).

- Output policers meter traffic and might change the forwarding class and loss priority of a packet if a traffic flow exceeds its service level.
- Rewrite rules map forwarding class and packet loss priority to DSCP values. You typically use rewrite rules in conjunction with multifield classifier rules close to the content origin, or when the device is at the border of a network and must alter the code points to meet the policies of the targeted peer.

See ["Example: Configuring CoS with DSCP IPv6 Rewrite Rules" on page 293](#).

Only BA classification rules and rewrite rules require special consideration to support CoS for IPv6 traffic. The program logic for the other CoS features is not sensitive to differences between IPv4 and IPv6 traffic.

RELATED DOCUMENTATION

[Understanding CoS with DSCP IPv6 BA Classifier | 287](#)

[Example: Configuring CoS with DSCP IPv6 BA Classifiers | 287](#)

[Understanding DSCP IPv6 Rewrite Rules | 292](#)

[Example: Configuring CoS with DSCP IPv6 Rewrite Rules | 293](#)

Understanding CoS with DSCP IPv6 BA Classifier

RELATED DOCUMENTATION

[Example: Configuring CoS with DSCP IPv6 BA Classifiers | 287](#)

[CoS Functions for IPv6 Traffic Overview | 284](#)

[Understanding DSCP IPv6 Rewrite Rules | 292](#)

[Example: Configuring CoS with DSCP IPv6 Rewrite Rules | 293](#)

Example: Configuring CoS with DSCP IPv6 BA Classifiers

IN THIS SECTION

- [Requirements | 287](#)
- [Overview | 287](#)
- [Configuration | 288](#)
- [Verification | 291](#)

This example shows how to associate an interface with a default or user-defined DSCP IPv6 BA classifier.

Requirements

Before you begin, configure the ge-0/0/0 interface on the device for IPv6 and define your user-defined DSCP IPv6 classifier settings. See "[Understanding CoS with DSCP IPv6 BA Classifier](#)" on page 287.

Overview

In this example, you configure CoS and define forwarding classes. You create the behavior aggregate classifier for DiffServ CoS as dscp-ipv6-example and import the default DSCP IPv6 classifier.

You then specify the best-effort forwarding class as be-class, the expedited forwarding class as ef-class, the assured forwarding class as af-class, and the network control forwarding class as nc-class. Finally, you apply your user-defined classifier to interface ge-0/0/0.

Configuration

IN THIS SECTION

- [Procedure](#) | 288

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service forwarding-classes queue 0 be-class
set class-of-service forwarding-classes queue 1 ef-class
set class-of-service forwarding-classes queue 2 af-class
set class-of-service forwarding-classes queue 3 nc-class
set class-of-service classifiers dscp-ipv6 dscp-ipv6-example import default
set class-of-service classifiers dscp-ipv6 dscp-ipv6-example forwarding-class be-class loss-
priority high code-points 000001
set class-of-service classifiers dscp-ipv6 dscp-ipv6-example forwarding-class ef-class loss-
priority high code-points 101111
set class-of-service classifiers dscp-ipv6 dscp-ipv6-example forwarding-class af-class loss-
priority high code-points 001100
set class-of-service classifiers dscp-ipv6 dscp-ipv6-example forwarding-class nc-class loss-
priority high code-points 110001
set class-of-service interfaces ge-0/0/0 unit 0 classifiers dscp-ipv6 dscp-ipv6-example
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure CoS with a user-defined DSCP IPv6 BA classifier:

1. Configure CoS.

```
[edit]
user@host# edit class-of-service
```

2. Define forwarding classes.

```
[edit class-of-service]
user@host# set forwarding-classes queue 0 be-class
user@host# set forwarding-classes queue 1 ef-class
user@host# set forwarding-classes queue 2 af-class
user@host# set forwarding-classes queue 3 nc-class
```

3. Create a behavior aggregate classifier for DiffServ CoS.

```
[edit class-of-service]
user@host# edit classifiers dscp-ipv6 dscp-ipv6-example
```

4. Import a DSCP IPv6 classifier.

```
[edit class-of-service classifiers dscp-ipv6 dscp-ipv6-example]
user@host# set import default
```

5. Specify a best-effort forwarding class classifier.

```
[edit class-of-service classifiers dscp-ipv6 dscp-ipv6-example]
user@host# set forwarding-class be-class loss-priority high code-points 000001
```

6. Specify an expedited forwarding class classifier.

```
[edit class-of-service classifiers dscp-ipv6 dscp-ipv6-example]
user@host# set forwarding-class ef-class loss-priority high code-points 101111
```

7. Specify an assured forwarding class classifier.

```
[edit class-of-service classifiers dscp-ipv6 dscp-ipv6-example]
user@host# set forwarding-class af-class loss-priority high code-points 001100
```

8. Specify a network control forwarding class classifier.

```
[edit class-of-service classifiers dscp-ipv6 dscp-ipv6-example]
user@host# set forwarding-class nc-class loss-priority high code-points 110001
```

9. Associate a user-defined classifier with an interface.

```
[edit class-of-service]
user@host# set interfaces ge-0/0/0 unit 0 classifiers dscp-ipv6 dscp-ipv6-example
```

Results

From configuration mode, confirm your configuration by entering the **show class-of-service** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
classifiers {
  dscp-ipv6 dscp-ipv6-example {
    import default;
    forwarding-class be-class {
      loss-priority high code-points 000001;
    }
    forwarding-class ef-class {
      loss-priority high code-points 101111;
    }
    forwarding-class af-class {
      loss-priority high code-points 001100;
    }
    forwarding-class nc-class {
      loss-priority high code-points 110001;
    }
  }
}
```



```

    }
    forwarding-classes {
        queue 0 be-class;
        queue 1 ef-class;
        queue 2 af-class;
        queue 3 nc-class;
    }
    interfaces {
        ge-0/0/0 {
            unit 0 {
                classifiers {
                    dscp-ipv6 dscp-ipv6-example;
                }
            }
        }
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Verifying the CoS with DSCP IPv6 BA Classifier Configuration | 291](#)

Verifying the CoS with DSCP IPv6 BA Classifier Configuration

Purpose

Verify that the user-defined DSCP IPv6 BA classifier is associated with an interface.

Action

From configuration mode, enter the **show class-of-service** command.

RELATED DOCUMENTATION

[Understanding CoS with DSCP IPv6 BA Classifier | 287](#)

CoS Functions for IPv6 Traffic Overview 284
Understanding DSCP IPv6 Rewrite Rules 292
Example: Configuring CoS with DSCP IPv6 Rewrite Rules 293

Understanding DSCP IPv6 Rewrite Rules

After Junos OS CoS processing, a rewrite rule maps the forwarding class and loss priority after Junos OS CoS processing to a corresponding DSCP value specified in the rule. Typically, you use *rewrite rules* to alter the CoS values in outgoing packets to meet the requirements of the targeted peer.

You can use the CLI show command to display the configuration for the CoS classifiers. The following command shows the configuration of the default DSCP IPv6 rewrite rule:

```

user@host# show class-of-service rewrite-rule type dscp-ipv6
Rewrite rule: dscp-ipv6-default, Code point type: dscp-ipv6, Index: 32
Forwarding class      Loss priority      Code point
best-effort           low                000000
best-effort           high               000000
expedited-forwarding  low               101110
expedited-forwarding  high               101110
assured-forwarding    low               001010
assured-forwarding    high               001100
network-control       low               110000
network-control       high               111000
  
```

RELATED DOCUMENTATION

Example: Configuring CoS with DSCP IPv6 Rewrite Rules 293
CoS Functions for IPv6 Traffic Overview 284
Understanding CoS with DSCP IPv6 BA Classifier 287
Example: Configuring CoS with DSCP IPv6 BA Classifiers 287

Example: Configuring CoS with DSCP IPv6 Rewrite Rules

IN THIS SECTION

- [Requirements | 293](#)
- [Overview | 293](#)
- [Configuration | 293](#)
- [Verification | 297](#)

This example shows how to associate an interface with a default or user-defined DSCP IPv6 rewrite rule. Typically, you use rewrite rules to alter CoS values in outgoing packets to meet the requirements of the targeted peer.

Requirements

Before you begin, configure the ge-0/0/0 interface on the device for IPv6 and define your user-defined DSCP IPv6 rewrite rules.

Overview

In this example, you configure CoS and create a user-defined rewrite rule called `rewrite-ipv6-dscps`. You then specify rewrite rules for the best-effort forwarding class as `be-class`, the expedited forwarding class as `ef-class`, the assured forwarding class as `af-class`, and the network control forwarding class as `nc-class`. Finally, you associate interface `ge-0/0/0` with the user-defined rule.

Configuration

IN THIS SECTION

- [Procedure | 294](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps forwarding-class be-class loss-
priority low code-point 000000
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps forwarding-class be-class loss-
priority high code-point 000001
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps forwarding-class ef-class loss-
priority low code-point 101110
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps forwarding-class ef-class loss-
priority high code-point 101111
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps forwarding-class af-class loss-
priority low code-point 001010
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps forwarding-class af-class loss-
priority high code-point 001100
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps forwarding-class nc-class loss-
priority low code-point 110000
set class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps forwarding-class nc-class loss-
priority high code-point 110001
set class-of-service interfaces ge-0/0/0 unit 0 rewrite-rules dscp-ipv6 rewrite-ipv6-dscps
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure a CoS with a user-defined DSCP IPv6 rewrite rule:

1. Configure CoS.

```
[edit]
user@host# edit class-of-service
```

2. Create a user-defined rewrite rule.

```
[edit class-of-service]
user@host# edit rewrite-rules dscp-ipv6 rewrite-ipv6-dscps
```

3. Specify rewrite rules for the best-effort forwarding class.

```
[edit class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps]
user@host# set forwarding-class be-class loss-priority low code-point 000000
user@host# set forwarding-class be-class loss-priority high code-point 000001
```

4. Specify rewrite rules for the expedited-forwarding forwarding class.

```
[edit class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps]
user@host# set forwarding-class ef-class loss-priority low code-point 101110
user@host# set forwarding-class ef-class loss-priority high code-point 101111
```

5. Specify rewrite rules for the assured-forwarding forwarding class.

```
[edit class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps]
user@host# set forwarding-class af-class loss-priority low code-point 001010
user@host# set forwarding-class af-class loss-priority high code-point 001100
```

6. Specify rewrite rules for the network-control forwarding class.

```
[edit class-of-service rewrite-rules dscp-ipv6 rewrite-ipv6-dscps]
user@host# set forwarding-class nc-class loss-priority low code-point 110000
user@host# set forwarding-class nc-class loss-priority high code-point 110001
```

7. Associate an interface with a user-defined rule.

```
[edit class-of-service]
user@host# set interfaces ge-0/0/0 unit 0 rewrite-rules dscp-ipv6 rewrite-ipv6-dscps
```

Results

From configuration mode, confirm your configuration by entering the **show class-of-service** command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```
[edit]
user@host# show class-of-service
interfaces {
  ge-0/0/0 {
    unit 0 {
      rewrite-rules {
        dscp-ipv6 rewrite-ipv6-dscps;
      }
    }
  }
}
rewrite-rules {
  dscp-ipv6 rewrite-ipv6-dscps {
    forwarding-class be-class {
      loss-priority low code-point 000000;
      loss-priority high code-point 000001;
    }
    forwarding-class ef-class {
      loss-priority low code-point 101110;
      loss-priority high code-point 101111;
    }
    forwarding-class af-class {
      loss-priority low code-point 001010;
      loss-priority high code-point 001100;
    }
    forwarding-class nc-class {
      loss-priority low code-point 110000;
      loss-priority high code-point 110001;
    }
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

Verification

IN THIS SECTION

- [Verifying the CoS with DSCP IPv6 Rewrite Rule Configuration | 297](#)

Verifying the CoS with DSCP IPv6 Rewrite Rule Configuration

Purpose

Verify that the user-defined CoS with DSCP IPv6 rewrite rule is associated with an interface.

Action

From configuration mode, enter the **show class-of-service** command.

RELATED DOCUMENTATION

[Understanding DSCP IPv6 Rewrite Rules | 292](#)

[CoS Functions for IPv6 Traffic Overview | 284](#)

[Understanding CoS with DSCP IPv6 BA Classifier | 287](#)

[Example: Configuring CoS with DSCP IPv6 BA Classifiers | 287](#)

5

PART

Configuring Class of Service for I/O Cards

[Configuring Class of Service for I/O Cards](#) | 299

Configuring Class of Service for I/O Cards

IN THIS CHAPTER

- [PIR-Only and CIR Mode Overview | 299](#)
- [Understanding Priority Propagation | 301](#)
- [Understanding IOC Hardware Properties | 304](#)
- [Understanding IOC Map Queues | 306](#)
- [WRED on the IOC Overview | 307](#)
- [MDRR on the IOC Overview | 312](#)
- [CoS Support on the SRX5000 Module Port Concentrator Overview | 315](#)
- [Example: Configuring CoS on SRX5000 Devices with an MPC | 316](#)

PIR-Only and CIR Mode Overview

IN THIS SECTION

- [PIR-only Mode | 299](#)
- [CIR Mode | 300](#)

The actual behavior of many CoS parameters, especially the shaping rate and guaranteed rate, depends on whether the physical interface is operating in one of the following modes:

PIR-only Mode

In PIR-only (peak information rate) mode, one or more nodes perform shaping. The physical interface is in PIR-only mode if no child (or grandchild) node under the port has a guaranteed rate configured. The mode of the port is important because in PIR-only mode, the scheduling across the child nodes is in

proportion to their shaping rates (PIRs) and not the guaranteed rates (CIRs). This can be important if the observed behavior is not what is anticipated.

In PIR-only mode, nodes cannot send if they are above the configured shaping rate. [Table 39 on page 300](#) shows the mapping between the configured priority and the hardware priority for PIR-only.

Table 39: Internal Node Queue Priority for PIR-Only Mode

Configured Priority	Hardware Priority
Strict-high	0
High	0
Medium-high	1
Medium-low	1
Low	2

CIR Mode

In CIR (committed information rate) mode, one or more nodes applies a guaranteed rate and might perform shaping. A physical interface is in CIR mode if at least one child (or grandchild) node has a guaranteed rate configured. In addition, any child or grandchild node under the physical interface can have a shaping rate configured. Only the guaranteed rate matters. In CIR mode, nodes that do not have a guaranteed rate configured are assumed to have a very small guaranteed rate (queuing weight).

In CIR mode, the priority for each internal node depends on whether the highest active child node is above or below the guaranteed rate. [Table 40 on page 300](#) shows the mapping between the highest active child's priority and the hardware priority below and above the guaranteed rate.

Table 40: Internal Node Queue Priority for CIR Mode

Configured Priority of Highest Active Child Node	Hardware Priority Below Guaranteed Rate	Hardware Priority Above Guaranteed Rate
Strict-high	0	0

Table 40: Internal Node Queue Priority for CIR Mode *(Continued)*

Configured Priority of Highest Active Child Node	Hardware Priority Below Guaranteed Rate	Hardware Priority Above Guaranteed Rate
High	0	3
Medium-high	1	3
Medium-low	1	3
Low	2	3

RELATED DOCUMENTATION

[Understanding Priority Propagation | 301](#)

[Understanding IOC Hardware Properties | 304](#)

[Understanding IOC Map Queues | 306](#)

[WRED on the IOC Overview | 307](#)

[MDRR on the IOC Overview | 312](#)

Understanding Priority Propagation

SRX5600 and SRX5800 devices with input/output cards (IOCs) perform priority propagation. Priority propagation is useful for mixed traffic environments when, for example, you want to make ["Understanding IOC Map Queues" on page 306](#) sure that the voice traffic of one customer does not suffer from the data traffic of another customer. Nodes and queues are always serviced in the order of their priority. The priority of a queue is decided by configuration (the default priority is low) in the scheduler. However, not all elements of hierarchical schedulers have direct priorities configured. Internal nodes, for example, must determine their priority in other ways.

The priority of any internal node is decided as follows:

- By the highest priority of an active child (interface sets only take the highest priority of their active children)

- Whether the node is above its configured guaranteed rate (CIR) or not (this is relevant only if the physical interface is in CIR mode)

Each queue has a configured priority and a hardware priority. [Table 41 on page 302](#) shows the usual mapping between the configured priority and the hardware priority.

Table 41: Queue Priority


Configured Priority	Hardware Priority
Strict-high	0
High	0
Medium-high	1
Medium-low	1
Low	2

[Figure 14 on page 303](#) shows a physical interface with hierarchical schedulers configured. The configured priorities are shown for each queue at the top of the figure. The hardware priorities for each node are shown in parentheses. Each node also shows any configured shaping rate (PIR) or guaranteed rate (CIR) and whether or not the queues are above or below the CIR. The nodes are shown in one of the following three states:

- Above the CIR (clear)
- Below the CIR (dark)

- Condition where the CIR does not matter (gray)

Figure 14: Hierarchical Schedulers and Priorities

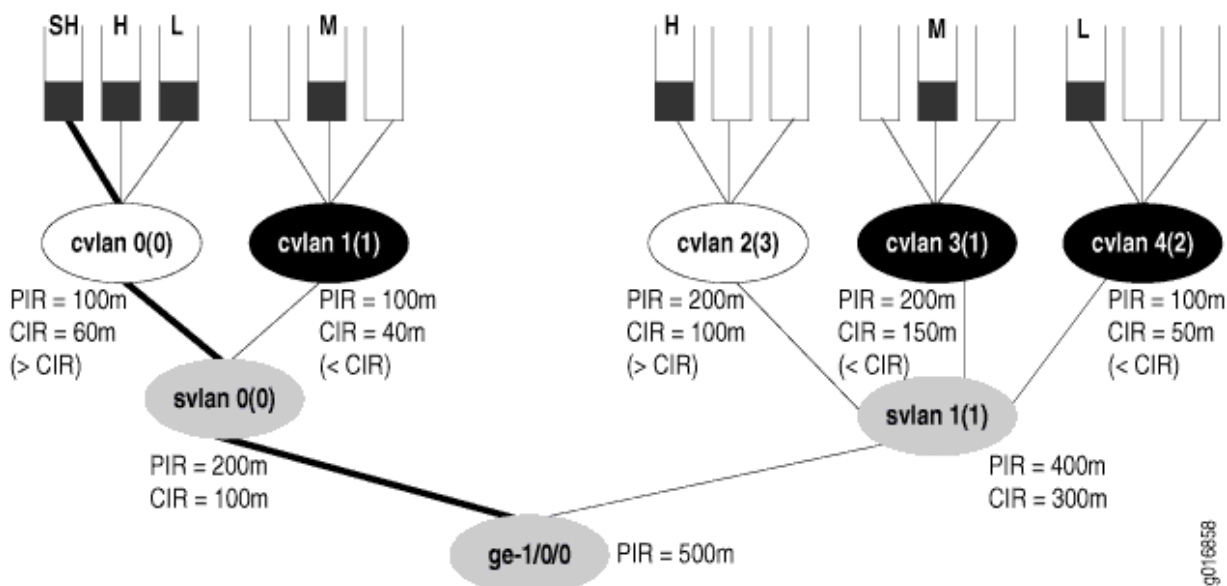

In [Figure 14 on page 303](#), the strict high queue for C-VLAN 0 (cvlan 0) receives service first, even though the C-VLAN is above the configured CIR. Once that queue has been drained, and the priority of the node has become 3 instead of 0 (because of the lack of strict-high traffic), the system moves on to the medium queues (cvlan 1 and cvlan 3), draining them in a round-robin fashion where empty queues lose their hardware priority. The low queue on cvlan 4 (priority 2) is sent next because that mode is below the CIR. Then, the high queues on cvlan 0 and cvlan2 (both now with priority 3) are drained in a round-robin fashion, and finally the low queue on cvlan 0 is drained (because svlan 0 has a priority of 3).

RELATED DOCUMENTATION

[PIR-Only and CIR Mode Overview | 299](#)

[Understanding IOC Hardware Properties | 304](#)

[Understanding IOC Map Queues | 306](#)

[WRED on the IOC Overview | 307](#)

[MDRR on the IOC Overview | 312](#)

Understanding IOC Hardware Properties

On SRX5600 and SRX5800 devices, two IOCs (40x1GE IOC and 4x10GE IOC) are supported on which you can configure schedulers and queues. You can configure 15 VLAN sets per Gigabit Ethernet (40x1GE IOC) port and 255 VLAN sets per 10-Gigabit Ethernet (4x10GE IOC) port. The IOC performs priority propagation from one hierarchy level to another, and drop statistics are available on the IOC per color per queue instead of just per queue.

SRX5600 and SRX5800 devices with IOCs have Packet Forwarding Engines that can support up to 512 MB of frame memory, and packets are stored in 512-byte frames. [Table 42 on page 304](#) compares the major properties of the Packet Forwarding Engine within the IOC.

Table 42: Packet Forwarding Engine Properties within 40x1GE IOC and 4x10GE IOC

Feature	PFE Within 40x1GE IOC and 4x10GE IOC
Number of usable queues	16,000
Number of shaped logical interfaces	2,000 with 8 queues each, or 4,000 with 4 queues each.
Number of hardware priorities	4
Priority propagation	Yes
Dynamic mapping	Yes: schedulers per port are not fixed.
Drop statistics	Per queue per color (PLP high, low)

Additionally, the IOC features also support hierarchical weighted random early detection (WRED).

The IOC supports the following hierarchical scheduler characteristics:

- Shaping at the physical interface level
- Shaping and scheduling at the service VLAN interface set level
- Shaping and scheduling at the customer VLAN *logical interface* level
- Scheduling at the queue level

The IOC supports the following features for scalability:

- 16,000 queues per PFE
- 4 PFEs per IOC
 - 4000 schedulers at logical interface level (level 3) with 4 queues each
 - 2000 schedulers at logical interface level (level 3) with 8 queues each
- 255 schedulers at the interface set level (level 2) per 1-port PFE on a 10-Gigabit Ethernet IOC (4x10GE IOC)
- 15 schedulers at the interface set level (level 2) per 10-port PFE on a 1-Gigabit Ethernet IOC (40x1GE IOC)
- About 400 milliseconds of buffer delay (this varies by packet size and if large buffers are enabled)
- 4 levels of priority (strict-high, high, medium, and low)

NOTE: The exact option for a transmit-rate (transmit-rate rate exact) is not supported on the IOCs on SRX Series devices.

NOTE: The above information is mostly for IOC1 cards. For MPC (IOC2), MPC3 (IOC3), and IOC4 cards (which use a subset of the CoS features available on IOC1), you can configure IEEE 802.1p classifiers, IEEE 802.1p rewrites, eight priority queues, and schedulers. After configuration, the classifiers and rewrites can be applied to logical interfaces, and queues and schedulers can be applied to physical interfaces.

- Due to hardware limitation, per-unit-scheduler or hierarchical-scheduler is not supported. Only the default mode is supported for egress scheduling and queuing.
- When an SPU is too busy to process every ingress packets from NG-IOCs, some high priority packets - for example, voice packets - may be delayed or dropped inside the SRX5600 or SRX 5800 chassis.

RELATED DOCUMENTATION

[PIR-Only and CIR Mode Overview | 299](#)

[Understanding Priority Propagation | 301](#)

[Understanding IOC Map Queues | 306](#)

[WRED on the IOC Overview | 307](#)

Understanding IOC Map Queues

The manner in which the IOC maps a queue to a scheduler depends on whether 8 queues or 4 queues are configured. By default, a scheduler at level 3 has 4 queues. Level 3 scheduler X controls queue $X*4$ to $X*4+3$, so that scheduler 100 (for example) controls queues 400 to 403. However, when 8 queues per scheduler are enabled, the odd-numbered schedulers are disabled, allowing twice the number of queues per subscriber as before. With 8 queues, level 3 scheduler X controls queue $X*4$ to $X*4+7$, so that scheduler 100 (for example) now controls queues 400 to 407.

You configure the `max-queues-per-interface` statement to set the number of queues at 4 or 8 at the FPC level of the hierarchy. Changing this statement will result in a restart of the FPC.

The IOC maps level 3 (customer VLAN) schedulers in groups to level 2 (service VLAN) schedulers. Sixteen contiguous level 3 schedulers are mapped to level 2 when 4 queues are enabled, and 8 contiguous level 3 schedulers are mapped to level 2 when 8 queues are enabled. All the schedulers in the group should use the same queue priority mapping. For example, if the queue priorities of one scheduler are high, medium, and low, all members of the group should have the same queue priority.

Groups at level 3 to level 2 can be mapped at any time. However, a group at level 3 can only be unmapped from a level 2 scheduler, and only if all the schedulers in the group are free. Once unmapped, a level 3 group can be remapped to any level 2 scheduler. There is no restriction on the number of level 3 groups that can be mapped to a particular level 2 scheduler. There can be 256 level 3 groups, but fragmentation of the scheduler space can reduce the number of schedulers available. In other words, there are scheduler allocation patterns that might fail even though there are free schedulers.

In contrast to level 3 to level 2 mapping, the IOC maps level 2 (service VLAN) schedulers in a fixed mode to level 1 (physical interface) schedulers. On 40-port Gigabit Ethernet IOCs, there are 16 level 1 schedulers, and 10 of these are used for the physical interfaces. There are 256 level 2 schedulers, or 16 per level 1 schedulers. A level 1 scheduler uses level schedulers $X*16$ through $X*16+15$. Therefore level 1 scheduler 0 uses level 2 schedulers 0 through 15, level 1 scheduler 1 uses level 2 schedulers 16 through 31, and so on. On 4-port 10-Gigabit Ethernet PICs, there is one level 1 scheduler for the physical interface, and 256 level 2 schedulers are mapped to the single level 1 scheduler.

The maximum number of level 3 (customer VLAN) schedulers that can be used is 4076 (4 queues) or 2028 (8 queues) for the 10-port Gigabit Ethernet Packet Forwarding Engine and 4094 (4 queues) or 2046 (8 queues) for the 10-Gigabit Ethernet Packet Forwarding Engine.

RELATED DOCUMENTATION

[PIR-Only and CIR Mode Overview | 299](#)

[Understanding Priority Propagation | 301](#)

[Understanding IOC Hardware Properties | 304](#)

[WRED on the IOC Overview | 307](#)

[MDRR on the IOC Overview | 312](#)

[show class-of-service spu-queue statistics](#)

WRED on the IOC Overview

IN THIS SECTION

- [Shapers at the Logical Interface Level \(Level 3\) | 309](#)
- [Shapers at the Interface Set Level \(Level 2\) | 310](#)
- [Shapers at the Port Level \(Level 1\) | 311](#)

Shaping to drop out-of-profile traffic is done on the IOC at all levels except the queue level. However, weighed random early discard (WRED) is done at the queue level with much the same result. With WRED, the decision to drop or send the packet is made before the packet is placed in the queue.

WRED shaping on the IOC involves two levels. The probabilistic drop region establishes a minimum and a maximum queue depth. Below the minimum queue depth, the drop probability is 0 (send). Above the maximum level, the drop probability is 100 (certainty).

There are four drop profiles associated with each queue. These correspond to each of four loss priorities (low, medium-low, medium-high, and high). Sixty-four sets of four drop profiles are available (32 for ingress and 32 for egress). In addition, there are eight WRED scaling profiles in each direction.

An example of an IOC drop profile for expedited forwarding traffic is as follows:

```
[edit class-of-service drop-profiles]
drop-ef {
    fill-level 20 drop-probability 0; # Minimum Q depth
    fill-level 100 drop-probability 100; # Maximum Q depth
}
```

NOTE: You can specify only two fill levels for the IOC.

You can configure the **interpolate** statement, but only two fill levels are used. The **delay-buffer-rate** statement in the traffic control profile determines the maximum queue size. This delay buffer rate is converted to packet delay buffers, where one buffer is equal to 512 bytes. For example, at 10 Mbps, the IOC will allocate 610 delay buffers when the delay buffer rate is set to 250 milliseconds. The WRED threshold values are specified in terms of absolute buffer values.

The WRED scaling factor multiplies all WRED thresholds (both minimum and maximum) by the value specified. There are eight values in all: 1, 2, 4, 8, 16, 32, 64, and 128. The WRED scaling factor is chosen to best match the user-configured drop profiles. This is done because the hardware supports only certain values of thresholds (all values must be a multiple of 16). So if the configured value of a threshold is 500 (for example), the multiple of 16 is 256 and the scaling factor applied is 2, making the value 512, which allows the value of 500 to be used. If the configured value of a threshold is 1500, the multiple of 16 is 752 and the scaling factor applied is 2, making the value 1504, which allows the value of 1500 to be used.

Hierarchical RED is used to support the oversubscription of the delay buffers (WRED is configured only at the queue, physical interface, and PIC levels). Hierarchical RED works with WRED as follows:

- If any level accepts the packet (the queue depth is less than the minimum buffer levels), this level accepts the packet.
- If any level probabilistically drops the packet, then this level drops the packet.

However, these rules might lead to the accepting of packets under loaded conditions that might otherwise have been dropped. In other words, the *logical interface* will accept packets if the physical interface is not congested.

Because of the limits placed on shaping thresholds used in the hierarchy, there is a granularity associated with the IOCs. The shaper accuracies differ at various levels of the hierarchy:

- Level 3
- Level 2
- Level 1

Shapers at the logical interface level (level 3) are more accurate than shapers at the interface set level (level 2) or at the port level (level 1).

This section contains the following topics:

Shapers at the Logical Interface Level (Level 3)

Because of the limits placed on shaping thresholds used in the hierarchy, there is a granularity associated with the IOCs. The shaper accuracies differ at various levels of the hierarchy, with shapers at the logical interface level (level 3) being more accurate than shapers at the interface set level (level 2) or at the port level (level 1). [Table 43 on page 309](#) shows the accuracy of the logical interface shaper at various speeds for Ethernet ports operating at 1 Gbps.

Table 43: Shaper Accuracy of 1-Gbps Ethernet at the Logical Interface Level

Range of Logical Interface Shaper	Step Granularity
Up to 4.096 Mbps	16 Kbps
4.096 to 8.192 Mbps	32 Kbps
8.192 to 16.384 Mbps	64 Kbps
16.384 to 32.768 Mbps	128 Kbps
32.768 to 65.535 Mbps	256 Kbps
65.535 to 131.072 Mbps	512 Kbps
131.072 to 262.144 Mbps	1024 Kbps
262.144 to 1 Gbps	4096 Kbps

[Table 44 on page 309](#) shows the accuracy of the logical interface shaper at various speeds for Ethernet ports operating at 10 Gbps.

Table 44: Shaper Accuracy of 10-Gbps Ethernet at the Logical Interface Level

Range of Logical Interface Shaper	Step Granularity
Up to 10.24 Mbps	40 Kbps

Table 44: Shaper Accuracy of 10-Gbps Ethernet at the Logical Interface Level (Continued)

Range of Logical Interface Shaper	Step Granularity
10.24 to 20.48 Mbps	80 Kbps
10.48 to 40.96 Mbps	160 Kbps
40.96 to 81.92 Mbps	320 Kbps
81.92 to 163.84 Mbps	640 Kbps
163.84 to 327.68 Mbps	1280 Kbps
327.68 to 655.36 Mbps	2560 Kbps
655.36 to 2611.2 Mbps	10240 Kbps
2611.2 to 5222.4 Mbps	20480 Kbps
5222.4 to 10 Gbps	40960 Kbps

Shapers at the Interface Set Level (Level 2)

[Table 45 on page 310](#) shows the accuracy of the interface set shaper at various speeds for Ethernet ports operating at 1 Gbps.

Table 45: Shaper Accuracy of 1-Gbps Ethernet at the Interface Set Level

Range of Interface Set Shaper	Step Granularity
Up to 20.48 Mbps	80 Kbps
20.48 Mbps to 81.92 Mbps	320 Kbps

Table 45: Shaper Accuracy of 1-Gbps Ethernet at the Interface Set Level (Continued)

Range of Interface Set Shaper	Step Granularity
81.92 Mbps to 327.68 Mbps	1.28 Mbps
327.68 Mbps to 1 Gbps	20.48 Mbps

[Table 46 on page 311](#) shows the accuracy of the interface set shaper at various speeds for Ethernet ports operating at 10 Gbps.

Table 46: Shaper Accuracy of 10-Gbps Ethernet at the Interface Set Level

Range of Interface Set Shaper	Step Granularity
Up to 128 Mbps	500 Kbps
128 Mbps to 512 Mbps	2 Mbps
512 Mbps to 2.048 Gbps	8 Mbps
2.048 Gbps to 10 Gbps	128 Mbps

Shapers at the Port Level (Level 1)

[Table 47 on page 311](#) shows the accuracy of the physical port shaper at various speeds for Ethernet ports operating at 1 Gbps.

Table 47: Shaper Accuracy of 1-Gbps Ethernet at the Physical Port Level

Range of Physical Port Shaper	Step Granularity
Up to 64 Mbps	250 Kbps
64 Mbps to 256 Mbps	1 Mbps

Table 47: Shaper Accuracy of 1-Gbps Ethernet at the Physical Port Level (Continued)

Range of Physical Port Shaper	Step Granularity
256 Mbps to 1 Gbps	4 Mbps

Table 48 on page 312 shows the accuracy of the physical port shaper at various speeds for Ethernet ports operating at 10 Gbps.

Table 48: Shaper Accuracy of 10-Gbps Ethernet at the Physical Port Level

Range of Physical Port Shaper	Step Granularity
Up to 640 Mbps	2.5 Mbps
640 Mbps to 2.56 Gbps	10 Mbps
2.56 Gbps to 10 Gbps	40 Mbps

RELATED DOCUMENTATION

[PIR-Only and CIR Mode Overview | 299](#)

[Understanding Priority Propagation | 301](#)

[Understanding IOC Hardware Properties | 304](#)

[Understanding IOC Map Queues | 306](#)

[MDRR on the IOC Overview | 312](#)

MDRR on the IOC Overview

The guaranteed rate CIR at the interface set level is implemented by using modified deficit round-robin (MDRR). The IOC hardware provides four levels of strict priority. There is no restriction on the number of queues for each priority. MDRR is used among queues of the same priority. Each queue has one priority when it is under the guaranteed rate and another priority when it is over the guaranteed rate but still under the shaping rate PIR. The IOC hardware implements the priorities with 256 service profiles. Each service profile assigns eight priorities for eight queues. One set is for logical interfaces

under the guaranteed rate and another set is for logical interfaces over the guaranteed rate but under the shaping rate. Each service profile is associated with a group of 16 level 3 schedulers, so there is a unique service profile available for all 256 groups at level 3, giving 4,096 logical interfaces.

Junos OS provides three priorities for traffic under the guaranteed rate and one reserved priority for traffic over the guaranteed rate that is not configurable. Junos OS provides three priorities when there is no guaranteed rate configured on any *logical interface*.

[Table 49 on page 313](#) shows the relationship between Junos OS priorities and the IOC hardware priorities below and above the guaranteed rate CIR.

Table 49: Junos Priorities Mapped to IOC Hardware Priorities

Junos OS Priority	IOC Hardware Priority Below Guaranteed Rate	IOC Hardware Priority Above Guaranteed Rate
Strict-high	High	High
High	High	Low
Medium-high	Medium-high	Low
Medium-low	Medium-high	Low
Low	Medium-low	Low

The Junos OS parameters are set in the scheduler map:

```
[edit class-of-service schedulers]
best-effort-scheduler {
    transmit-rate percent 30; # if no shaping rate
    buffer-size percent 30;
    priority high;
}
expedited-forwarding-scheduler {
    transmit-rate percent 40; # if no shaping rate
    buffer-size percent 40;
    priority strict-high;
}
```

NOTE: The use of both a shaping rate and a guaranteed rate at the interface set level (level 2) is not supported.

MDRR is provided at three levels of the scheduler hierarchy of the IOC with a granularity of 1 through 255. There are 64 MDRR profiles at the queue level, 16 at the interface set level, and 32 at the physical interface level.

Queue transmit rates are used for queue-level MDRR profile weight calculation. The queue MDRR weight is calculated differently based on the mode set for sharing excess bandwidth. If you configure the **equal** option for excess bandwidth, then the queue MDRR weight is calculated as:

$$\text{Queue weight} = (255 * \text{Transmit-rate-percentage}) / 100$$

If you configure the **proportional** option for excess bandwidth, which is the default, then the queue MDRR weight is calculated as:

$$\text{Queue weight} = \text{Queue-transmit-rate} / \text{Queue-base-rate}, \text{ where}$$

$$\text{Queue-transmit-rate} = (\text{Logical-interface-rate} * \text{Transmit-rate-percentage}) / 100, \text{ and}$$

$$\text{Queue-base-rate} = \text{Excess-bandwidth-proportional-rate} / 255$$

To configure the way that the IOC should handle excess bandwidth, configure the **excess-bandwidth-share** statement at the [edit interface-set *interface-set-name*] hierarchy level. By default, the excess bandwidth is set to **proportional** with a default value of 32.64 Mbps. In this mode, the excess bandwidth is shared in the ratio of the logical interface shaping rates. If set to **equal**, the excess bandwidth is shared equally among the logical interfaces.

The following example sets the excess bandwidth sharing to proportional at a rate of 100 Mbps with a shaping rate of 80 Mbps:

```
[edit interface-set example-interface-set]
excess-bandwidth-share proportional 100m;
output-traffic-control-profile PIR-80Mbps;
```

Shaping rates established at the logical interface level are used to calculate the MDRR weights used at the interface set level. The 16 MDRR profiles are set to initial values, and the closest profile with rounded values is chosen. By default, the physical port MDRR weights are preset to the full bandwidth on the interface.

RELATED DOCUMENTATION

[PIR-Only and CIR Mode Overview | 299](#)

[Understanding Priority Propagation | 301](#)

[Understanding IOC Hardware Properties | 304](#)

[Understanding IOC Map Queues | 306](#)

[WRED on the IOC Overview | 307](#)

CoS Support on the SRX5000 Module Port Concentrator Overview

The SRX5000 Module Port Concentrator (SRX5K-MPC) for the SRX5600 and SRX5800 uses the Trio chipset-based queuing model, which supports class of service (CoS) characteristics that are optimized compared to CoS characteristics supported by the standard queuing model. These CoS features enable SRX5600 and SRX5800 devices to achieve end-to-end quality of service and protect the network using various security functions.

CoS features on the SRX5600 and SRX5800 devices provide differentiated services to traffic in addition to the best-effort packet processing. The main CoS features include classification, CoS field rewriting, queuing, scheduling, and traffic shaping.

When a network experiences congestion and delay, you can use the CoS features to classify packets; assign them with different levels of packet loss priority, delay, and throughput; and mark their CoS-related fields defined in Layer 2 and Layer 3 headers.

The MPC supports the following CoS features:

- BA classifier based on IEEE 802.1p for packet classification (Layer 2 headers) for priority bits of ingress packets
- Rewrite rule based on IEEE 802.1p for priority bits of egress packets

NOTE: You can configure up to 32 IEEE 802.1p rewriters on each SRX5K-MPC on the SRX5600 and SRX5800 devices.

- Eight priority queues per port with configurable schedulers at the egress physical interface

By default, the MPC supports eight queues. You can use the following CLI statement to change that setting to four queues:

```
set chassis fpc fpc-number pic pic-number max-queues-per-interface 4
```

Changing to four-queue mode limits that number of configurable queues to four on the MPC. This does not have any effect on the performance.

The CoS features on the MPC have the following limitations:

- On the MPC, the per-unit-scheduler or the hierarchical-scheduler is not supported. For egress scheduling and queuing, only the default mode is supported.
- When an SPU is too busy to process every ingress packet from the MPC, some high-priority packets, such as voice packets, might be delayed or dropped by the SRX5600 or SRX5800.

NOTE: The total number of classifiers supported on a Services Processing Unit (SPU) is 79. Three classifiers are installed on the SPU as default classifiers in the Layer 3 mode, independent of any CoS configuration, which leaves 76 classifiers that can be configured using the CoS CLI commands. The default classifiers number might vary in future releases or in different modes. You can verify the number of default classifiers installed on the SPU to determine how many classifiers can be configured using the CoS CLI commands.

RELATED DOCUMENTATION

| [Example: Configuring CoS on SRX5000 Devices with an MPC](#) | 316

Example: Configuring CoS on SRX5000 Devices with an MPC

IN THIS SECTION

- [Requirements](#) | 317
- [Overview](#) | 317
- [Configuration](#) | 319
- [Verification](#) | 327

This example shows how to configure CoS on an SRX5000 line device with an MPC.

Requirements

This example uses the following hardware and software components:

- SRX5600 with an SRX5K-MPC
- Junos OS Release 12.1X46-D10 or later for SRX Series

Before you begin:

- Understand CoS. See ["Understanding Class of Service" on page 2](#).
- Understand chassis cluster configuration. See *Example: Configuring an Active/Passive Chassis Cluster on SRX5800 Devices*.
- Understand chassis cluster redundant interface configuration. See *Example: Configuring Chassis Cluster Redundant Ethernet Interfaces*.

No special configuration beyond device initialization is required before configuring this feature.

Overview

In this example, you create a behavior aggregate (BA) classifier to classify traffic based on the IEEE 802.1p value of the packet and assign forwarding-class priority queue to the traffic. You then configure the scheduler map and set the priority for the traffic.

By default, the SRX5K-MPC supports eight queues. In this example, you are configuring eight queues.

You apply the BA classifier to the input interface and apply the scheduler map to the output interface.

[Table 50 on page 317](#) and [Table 51 on page 318](#) show forwarding class details with priority, assigned queue numbers, and allocated queue buffers used in this example.

Table 50: Forwarding Class Samples

Forwarding Class	Queue Number
BE	0
SIG	1
AF	2
Bronze-class	3

Table 50: Forwarding Class Samples (Continued)

Forwarding Class	Queue Number
Silver-class	4
Gold-class	5
Control	6
VOIP	7

Table 51: Scheduler Samples

Scheduler	For CoS Traffic Type	Assigned Priority	Allocated Portion of Queue Buffer (Transmit Rate)
s-be	0	low	15
s-sig	1	low	15
s-af	2	medium-low	20
s-bronze	3	medium-low	20
s-silver	4	medium-high	10
s-gold	5	medium-high	10
s-nc	6	high	5
s-voip	7	high	5

Configuration

IN THIS SECTION

- [Procedure | 319](#)

Procedure

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the [edit] hierarchy level, and then enter `commit` from configuration mode.

```
set class-of-service classifiers ieee-802.1 c802 forwarding-class BE loss-priority low code-points 000
set class-of-service classifiers ieee-802.1 c802 forwarding-class SIG loss-priority low code-points 001
set class-of-service classifiers ieee-802.1 c802 forwarding-class AF loss-priority low code-points 010
set class-of-service classifiers ieee-802.1 c802 forwarding-class Bronze-Class loss-priority low code-points 011
set class-of-service classifiers ieee-802.1 c802 forwarding-class Silver-Class loss-priority low code-points 100
set class-of-service classifiers ieee-802.1 c802 forwarding-class Gold-Class loss-priority low code-points 101
set class-of-service classifiers ieee-802.1 c802 forwarding-class Central loss-priority low code-points 110
set class-of-service classifiers ieee-802.1 c802 forwarding-class VOIP loss-priority low code-points 111
set class-of-service forwarding-classes class BE queue-num 0
set class-of-service forwarding-classes class SIG queue-num 1
set class-of-service forwarding-classes class AF queue-num 2
set class-of-service forwarding-classes class Bronze-Class queue-num 3
set class-of-service forwarding-classes class Silver-Class queue-num 4
set class-of-service forwarding-classes class Gold-Class queue-num 5
set class-of-service forwarding-classes class Control queue-num 6
set class-of-service forwarding-classes class VOIP queue-num 7
set class-of-service scheduler-maps test forwarding-class BE scheduler s-be
```

```

set class-of-service scheduler-maps test forwarding-class SIG scheduler s-sig
set class-of-service scheduler-maps test forwarding-class AF scheduler s-af
set class-of-service scheduler-maps test forwarding-class Bronze-Class scheduler s-bronze
set class-of-service scheduler-maps test forwarding-class Silver-Class scheduler s-silver
set class-of-service scheduler-maps test forwarding-class Gold-Class scheduler s-gold
set class-of-service scheduler-maps test forwarding-class Control scheduler s-nc
set class-of-service scheduler-maps test forwarding-class VOIP scheduler s-voip
set class-of-service rewrite-rules ieee-802.1 rw802 forwarding-class BE loss-priority low code-
point 000
set class-of-service rewrite-rules ieee-802.1 rw802 forwarding-class SIG loss-priority low code-
point 001
set class-of-service rewrite-rules ieee-802.1 rw802 forwarding-class AF loss-priority low code-
point 010
set class-of-service rewrite-rules ieee-802.1 rw802 forwarding-class Bronze-Class loss-priority
low code-point 011
set class-of-service rewrite-rules ieee-802.1 rw802 forwarding-class Silver-Class loss-priority
low code-point 100
set class-of-service rewrite-rules ieee-802.1 rw802 forwarding-class Gold-Class loss-priority
low code-point 101
set class-of-service rewrite-rules ieee-802.1 rw802 forwarding-class Control loss-priority low
code-point 110
set class-of-service rewrite-rules ieee-802.1 rw802 forwarding-class VOIP loss-priority low code-
point 111
set class-of-service schedulers s-be transmit-rate percent 15
set class-of-service schedulers s-be priority low
set class-of-service schedulers s-sig transmit-rate percent 15
set class-of-service schedulers s-sig priority low
set class-of-service schedulers s-af transmit-rate percent 20
set class-of-service schedulers s-af priority medium-low
set class-of-service schedulers s-bronze transmit-rate percent 20
set class-of-service schedulers s-bronze priority medium-low
set class-of-service schedulers s-silver transmit-rate percent 10
set class-of-service schedulers s-silver priority medium-high
set class-of-service schedulers s-gold transmit-rate percent 10
set class-of-service schedulers s-gold priority medium-high
set class-of-service schedulers s-nc transmit-rate percent 5
set class-of-service schedulers s-nc priority high
set class-of-service schedulers s-voip transmit-rate percent 5
set class-of-service schedulers s-voip priority high
set class-of-service interfaces reth0 unit 0 classifiers ieee-802.1 c802
set class-of-service interfaces reth0 unit 0 rewrite-rules ieee-802.1 rw802

```

```
set class-of-service interfaces reth0 scheduler-map test
set class-of-service interfaces reth0 shaping-rate 1g
```

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the [Junos OS CLI User Guide](#).

To configure forwarding classes:

1. Configure a classifier.

```
[edit class-of-service]
user@host# set classifiers ieee-802.1 c802 forwarding-class BE loss-priority low code-points
000
user@host# set classifiers ieee-802.1 c802 forwarding-class SIG loss-priority low code-points
001
user@host# set classifiers ieee-802.1 c802 forwarding-class AF loss-priority low code-points
010
user@host# set classifiers ieee-802.1 c802 forwarding-class Bronze-Class loss-priority low
code-points 011
user@host# set classifiers ieee-802.1 c802 forwarding-class Silver-Class loss-priority low
code-points 100
user@host# set classifiers ieee-802.1 c802 forwarding-class Gold-Class loss-priority low code-
points 101
user@host# set classifiers ieee-802.1 c802 forwarding-class Central loss-priority low code-
points 110
user@host# set classifiers ieee-802.1 c802 forwarding-class VOIP loss-priority low code-
points 111
```

2. Assign best-effort traffic to queue.

```
[edit class-of-service forwarding-classes class]
user@host# set BE queue-num 0
user@host# set SIG queue-num 1
user@host# set AF queue-num 2
user@host# set Bronze-Class queue-num 3
user@host# set Silver-Class queue-num 4
user@host# set Gold-Class queue-num 5
```

```
user@host# set Control queue-num 6
user@host# set VOIP queue-num 7
```

3. Define mapping of forwarding classes to packet schedulers.

```
[edit class-of-service]
user@host# set scheduler-maps test forwarding-class BE scheduler s-be
user@host# set scheduler-maps test forwarding-class SIG scheduler s-sig
user@host# set scheduler-maps test forwarding-class AF scheduler s-af
user@host# set scheduler-maps test forwarding-class Bronze-Class scheduler s-bronze
user@host# set scheduler-maps test forwarding-class Silver-Class scheduler s-silver
user@host# set scheduler-maps test forwarding-class Gold-Class scheduler s-gold
user@host# set scheduler-maps test forwarding-class Control scheduler s-nc
user@host# set scheduler-maps test forwarding-class VOIP scheduler s-voip
```

4. Configure the CoS rewrite rules to map the forwarding class to the desired value for the 802.1p field.

```
[edit class-of-service]
user@host# set rewrite-rules ieee-802.1 rw802 forwarding-class BE loss-priority low code-
point 000
user@host# set rewrite-rules ieee-802.1 rw802 forwarding-class SIG loss-priority low code-
point 001
user@host# set rewrite-rules ieee-802.1 rw802 forwarding-class AF loss-priority low code-
point 010
user@host# set rewrite-rules ieee-802.1 rw802 forwarding-class Bronze-Class loss-priority low
code-point 011
user@host# set rewrite-rules ieee-802.1 rw802 forwarding-class Silver-Class loss-priority low
code-point 100
user@host# set rewrite-rules ieee-802.1 rw802 forwarding-class Gold-Class loss-priority low
code-point 101
user@host# set rewrite-rules ieee-802.1 rw802 forwarding-class Control loss-priority low code-
point 110
user@host# set rewrite-rules ieee-802.1 rw802 forwarding-class VOIP loss-priority low code-
point 111
```

5. Configure eight packet schedulers with scheduling priority and transmission rates.

```
[edit class-of-service]
user@host# set schedulers s-be transmit-rate percent 15
user@host# set schedulers s-be priority low
```



```

user@host# set schedulers s-sig transmit-rate percent 15
user@host# set schedulers s-sig priority low
user@host# set schedulers s-af transmit-rate percent 20
user@host# set schedulers s-af priority medium-low
user@host# set schedulers s-bronze transmit-rate percent 20
user@host# set schedulers s-bronze priority medium-low
user@host# set schedulers s-silver transmit-rate percent 10
user@host# set schedulers s-silver priority medium-high
user@host# set schedulers s-gold transmit-rate percent 10
user@host# set schedulers s-gold priority medium-high
user@host# set schedulers s-nc transmit-rate percent 5
user@host# set schedulers s-nc priority high
user@host# set schedulers s-voip transmit-rate percent 5
user@host# set schedulers s-voip priority high

```

6. Apply the classifier and rewrite rules to interfaces.

```

[edit class-of-service]
user@host# set interfaces reth0 unit 0 classifiers ieee-802.1 c802
user@host# set interfaces reth1 unit 0 rewrite-rules ieee-802.1 rw802

```

7. Apply the scheduler-map “test” to an interface.

```

[edit class-of-service]
user@host# set interfaces reth0 scheduler-map test

```

8. Apply the shaping rates to control the maximum rate of traffic transmitted on an interface.

```

[edit class-of-service]
user@host# set interfaces reth0 shaping-rate 1g

```

Results

From configuration mode, confirm your configuration by entering the `show xxx` command. If the output does not display the intended configuration, repeat the configuration instructions in this example to correct it.

```

classifiers {
  ieee-802.1 c802 {
    forwarding-class BE {
      loss-priority low code-points 000;
    }
    forwarding-class SIG {
      loss-priority low code-points 001;
    }
    forwarding-class AF {
      loss-priority low code-points 010;
    }
    forwarding-class Bronze-Class {
      loss-priority low code-points 011;
    }
    forwarding-class Silver-Class {
      loss-priority low code-points 100;
    }
    forwarding-class Gold-Class {
      loss-priority low code-points 101;
    }
    forwarding-class Control {
      loss-priority low code-points 110;
    }
    forwarding-class VOIP {
      loss-priority low code-points 111;
    }
  }
}

forwarding-classes {
  class BE queue-num 0;
  class SIG queue-num 1;
  class VOIP queue-num 7;
  class AF queue-num 2;
  class Bronze-Class queue-num 3;
  class Silver-Class queue-num 4;
  class Gold-Class queue-num 5;
}

```

```

    class Control queue-num 6;
}
interfaces {
    reth0 {
        shaping-rate 1g;
        unit 0 {
            scheduler-map test;
        }
    }
    reth0 {
        shaping-rate 1g;
        unit 0 {
            classifiers {
                ieee-802.1 c802;
            }
            rewrite-rules {
                ieee-802.1 rw802;
            }
        }
    }
}
rewrite-rules {
    ieee-802.1 rw802 {
        forwarding-class BE {
            loss-priority low code-point 000;
        }
        forwarding-class SIG {
            loss-priority low code-point 001;
        }
        forwarding-class AF {
            loss-priority low code-point 010;
        }
        forwarding-class Bronze-Class {
            loss-priority low code-point 011;
        }
        forwarding-class Silver-Class {
            loss-priority low code-point 100;
        }
        forwarding-class Gold-Class {
            loss-priority low code-point 101;
        }
        forwarding-class Control {
            loss-priority low code-point 110;
        }
    }
}

```

```

    }
    forwarding-class VOIP {
        loss-priority low code-point 111;
    }
}
}
scheduler-maps {
    test {
        forwarding-class BE scheduler s-be;
        forwarding-class VOIP scheduler s-voip;
        forwarding-class Gold-Class scheduler s-gold;
        forwarding-class SIG scheduler s-sig;
        forwarding-class AF scheduler s-af;
        forwarding-class Bronze-Class scheduler s-bronze;
        forwarding-class Silver-Class scheduler s-silver;
        forwarding-class Control scheduler s-nc;
    }
}
schedulers {
    s-be {
        transmit-rate percent 15;
        priority low;
    }
    s-nc {
        transmit-rate percent 5;
        priority high;
    }
    s-gold {
        transmit-rate percent 10;
        priority medium-high;
    }
    s-sig {
        transmit-rate percent 15;
        priority low;
    }
    s-af {
        transmit-rate percent 20;
        priority medium-low;
    }
    s-bronze {
        transmit-rate percent 20;
        priority medium-low;
    }
}

```

```
s-silver {  
    transmit-rate percent 10;  
    priority medium-high;  
}  
s-voip {  
    transmit-rate percent 5;  
    priority high;  
}  
}
```

If you are done configuring the device, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- [Verifying Class-of-Service Configuration | 327](#)
- [Verifying the Number of Dedicated Queues Configured on MPC Interfaces | 328](#)

Confirm that the configuration is working properly.

Verifying Class-of-Service Configuration

Purpose

Verify that CoS is configured.

Action

From operational mode, enter the `show class-of-service classifier` command.

```
user@host> show class-of-service classifier type ieee-802.1
```

Forwarding class	ID	Queue	Restricted queue	Fabric priority	Policing priority
SPU priority					
BE	0	0	0	low	normal
low					
SIG	1	1	1	low	normal

low					
AF	2	2	2	low	normal
low					
Bronze-Class	3	3	3	low	normal
low					
Silver-Class	4	4	0	low	normal
low					
Gold-Class	5	5	1	low	normal
low					
Control	6	6	2	low	normal
low					
VOIP	7	7	3	low	normal
low					

Verifying the Number of Dedicated Queues Configured on MPC Interfaces

Purpose

Display the number of dedicated queue resources that are configured for the interfaces on a port.

Action

From operational mode, enter the `show class-of-service interface` command.

```
user@host> show class-of-service interface reth0
```

```
Physical interface: reth0, Index: 129
```

```
Queues supported: 8, Queues in use: 4
```

```
Scheduler map: <default>, Index: 2
```

```
Congestion-notification: Disabled
```

```
Logical interface: reth0.0, Index: 71
```

Object	Name	Type	Index
Classifier	dscp-ipv6-compatibility	dscp-ipv6	9
Classifier	ipprec-compatibility	ip	13

```
Logical interface: reth1.32767, Index: 70
```

RELATED DOCUMENTATION

[Understanding IOC Hardware Properties | 304](#)

[CoS Support on the SRX5000 Module Port Concentrator Overview | 315](#)



Configuration Statements and Operational Commands

[Configuration Statements](#) | 331

[Operational Commands](#) | 410

Configuration Statements

IN THIS CHAPTER

- [adaptive-shaper](#) | 332
- [adaptive-shapers](#) | 334
- [application-traffic-control](#) | 335
- [buffer-size \(Schedulers\)](#) | 337
- [classifiers \(CoS\)](#) | 339
- [code-points \(CoS\)](#) | 341
- [default \(CoS\)](#) | 342
- [drop-profile-map \(Schedulers\)](#) | 343
- [dscp-code-point \(CoS Host Outbound Traffic\)](#) | 345
- [egress-shaping-overhead](#) | 346
- [forwarding-class \(CoS Host Outbound Traffic\)](#) | 349
- [forwarding-classes](#) | 350
- [frame-relay-de \(CoS Interfaces\)](#) | 356
- [frame-relay-de \(CoS Loss Priority\)](#) | 358
- [frame-relay-de \(CoS Rewrite Rule\)](#) | 359
- [host-outbound-traffic \(Class-of-Service\)](#) | 360
- [ingress-policer-overhead](#) | 362
- [interfaces \(CoS\)](#) | 365
- [logical-interface-policer](#) | 367
- [loss-priority \(CoS Loss Priority\)](#) | 368
- [loss-priority \(CoS Rewrite Rules\)](#) | 370
- [loss-priority-maps \(CoS Interfaces\)](#) | 371
- [loss-priority-maps \(CoS\)](#) | 373
- [non-strict-priority-scheduling](#) | 374
- [per-unit-scheduler](#) | 375
- [policer-overhead](#) | 377

- [priority \(Schedulers\) | 379](#)
- [rate-limiters | 380](#)
- [rewrite-rules \(CoS\) | 382](#)
- [rewrite-rules \(CoS Interfaces\) | 384](#)
- [rule-sets \(CoS AppQoS\) | 385](#)
- [scheduler-map \(CoS Virtual Channels\) | 388](#)
- [schedulers \(CoS\) | 390](#)
- [shaping-rate \(CoS Adaptive Shapers\) | 391](#)
- [shaping-rate \(CoS Interfaces\) | 393](#)
- [shaping-rate \(CoS Virtual Channels\) | 395](#)
- [shaping-rate \(Schedulers\) | 396](#)
- [transmit-rate \(Schedulers\) | 399](#)
- [trigger \(CoS\) | 402](#)
- [tunnel-queuing | 403](#)
- [virtual-channels | 404](#)
- [virtual-channel-group \(CoS Interfaces\) | 406](#)
- [virtual-channel-groups | 407](#)

adaptive-shaper

IN THIS SECTION

- [Syntax | 333](#)
- [Hierarchy Level | 333](#)
- [Description | 333](#)
- [Options | 333](#)
- [Required Privilege Level | 333](#)
- [Release Information | 333](#)

Syntax

```
adaptive-shaper adaptive-shaper-name;
```

Hierarchy Level

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
```

Description

Assign an adaptive shaper to an interface.

Adaptive shapers enable bandwidth limits on Frame Relay interfaces when the device receives frames containing the backward explicit congestion notification (BECN) bit.

Options

adaptive-shaper-name—Name of the adaptive shaper.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

| [adaptive-shapers](#) | [334](#)

adaptive-shapers

IN THIS SECTION

- [Syntax | 334](#)
- [Hierarchy Level | 334](#)
- [Description | 334](#)
- [Options | 334](#)
- [Required Privilege Level | 335](#)
- [Release Information | 335](#)

Syntax

```
adaptive-shapers {  
    adaptive-shaper-name {  
        trigger type shaping-rate (percent percentage | rate);  
    }  
}
```

Hierarchy Level

```
[edit class-of-service]
```

Description

Define trigger types and associated rates. Adaptive shapers enable bandwidth limits on Frame Relay interfaces when the Services Router receives frames containing the backward explicit congestion notification (BECN) bit.

Options

adaptive-shaper-name—Name of the adaptive shaper.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface— view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

[adaptive-shaper](#) | [332](#)

application-traffic-control

IN THIS SECTION

- [Syntax](#) | [335](#)
- [Hierarchy Level](#) | [336](#)
- [Description](#) | [336](#)
- [Options](#) | [336](#)
- [Required Privilege Level](#) | [337](#)
- [Release Information](#) | [337](#)

Syntax

```
application-traffic-control {
  rate-limiters {
    rate-limiter-name {
      bandwidth-limit value-in-kbps;
      burst-size-limit value-in-bytes;
    }
  }
}
```

```

rule-sets ruleset-name{
    {
        rule rule-name {
            match {
                application application-name1;
                application-any;
                application-group application-group-name;
                application-known;
                application-unknown;
            }
            then {
                dscp-code-point dscp-value;
                forwarding-class forwarding-class-name;
                log;
                loss-priority [ high | medium-high | medium-low | low ];
                rate-limit {
                    loss-priority-high;
                    client-to-server rate-limiter-name;
                    server-to-client rate-limiter-name;
                }
            }
        }
    }
}

```

Hierarchy Level

[edit class-of-service]

Description

Mark DSCP values for outgoing packets or apply rate limits based on the specified Layer 7 application types.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

security—To view this statement in the configuration.

security-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

| *Example: Configuring AppTrack*

buffer-size (Schedulers)

IN THIS SECTION

- [Syntax | 337](#)
- [Hierarchy Level | 338](#)
- [Description | 338](#)
- [Default | 338](#)
- [Options | 338](#)
- [Required Privilege Level | 339](#)
- [Release Information | 339](#)

Syntax

```
buffer-size (percent percentage | remainder | shared | temporal microseconds);
```

Hierarchy Level

```
[edit class-of-service schedulers scheduler-name]
```

Description

Specify buffer size.

NOTE: On PTX Series Packet Transport Routers, buffer-size cannot be configured on rate-limited queues.

Default

If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent, respectively.

Options

**percent
percentage** Buffer size as a percentage of the total buffer.

- **Range:** 0 through 100

NOTE: For the routers with channelized OC12/STM4 IQE PIC with SFP (PB-4CHOC12-STM4-IQE-SFP) and channelized OC48/STM16 IQE PIC with SFP (PB-1CHOC48-STM16-IQE-SFP), the minimum buffer allocated to any queue is 18,432 bytes. If a queue is configured to have a buffer size less than 18K, the queue retains a buffer size of 18,432 bytes.

remainder Remaining buffer available.

shared On PTX Series routers, set a queue's buffer to be up to 100 percent of the interface's buffer. This option allows the queue's buffer to grow as large as 100 percent of the interface's buffer if and only if it is the only active queue for the interface.

**temporal
microseconds** Buffer size as a temporal value. The queuing algorithm starts dropping packets when it queues more than a computed number of bytes. This maximum is computed by multiplying the logical interface speed by the configured temporal value.

- **Range:** The ranges vary by platform as follows:
 - For SRX Series Services Gateways: 1 through 2,000,000 microseconds.
 - For vSRX instances: 1 through 32,000,000 microseconds.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

shared option introduced in Junos OS Release 18.1 for PTX Series Packet Transport Routers.

RELATED DOCUMENTATION

Managing Congestion on the Egress Interface by Configuring the Scheduler Buffer Size

classifiers (CoS)

IN THIS SECTION

- Syntax | 340
- Hierarchy Level | 340
- Description | 340
- Options | 340
- Required Privilege Level | 341
- Release Information | 341

Syntax

```
classifiers {
  (dscp | dscp-ipv6 | exp | ieee-802.1 | ieee-802.1ad | inet-precedence) classifier-name {
    forwarding-class forwarding-class-name {
      loss-priority (high | low | medium-high | medium-low) {
        code-point alias-or-bit-string ;
      }
      import (default | user-defined);
    }
  }
}
```

Hierarchy Level

```
[edit class-of-service]
```

Description

Configure a user-defined behavior aggregate (BA) classifier.

Options

- *classifier-name*—User-defined name for the classifier.
- `import (default | user-defined)`—Specify the template to use to map any code points not explicitly mapped in this configuration. For example, if the classifier is of type `dscp` and you specify `import default`, code points you do not map in your configuration will use the predefined DSCP default mapping; if you specify `import mymap`, for example, code points not mapped in the forwarding-class configuration would use the mappings in a user-defined classifier named `mymap`.
- `forwarding-class class-name`—Specify the name of the forwarding class. You can use the default forwarding class names or define new ones.
- `loss-priority level`—Specify a loss priority for this forwarding class: `high`, `low`, `medium-high`, `medium-low`.
- `code-points (alias | bits)`—Specify a code-point alias or the code points that map to this forwarding class.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.2

RELATED DOCUMENTATION

[Understanding Interfaces](#)

code-points (CoS)

IN THIS SECTION

- [Syntax | 341](#)
- [Hierarchy Level | 341](#)
- [Description | 342](#)
- [Options | 342](#)
- [Required Privilege Level | 342](#)
- [Release Information | 342](#)

Syntax

```
code-points [ aliases ] [ 6-bit-patterns ];
```

Hierarchy Level

```
[edit class-of-service classifiers type classifier-name forwarding-class class-name]
```

Description

Specify one or more DSCP code-point aliases or bit sets for association with a forwarding class.

Options

aliases—Name of the DSCP alias.

6-bit patterns—Value of the code-point bits, in decimal form.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.5.

default (CoS)

IN THIS SECTION

- [Syntax | 342](#)
- [Hierarchy Level | 343](#)
- [Description | 343](#)
- [Required Privilege Level | 343](#)
- [Release Information | 343](#)

Syntax

```
default;
```

Hierarchy Level

```
[edit class-of-service virtual-channel-groups group-name virtual-channel-name]
```

Description

Specify the default channel. You must configure one of the virtual channels in the group to be the default. Any traffic not explicitly directed to a virtual channel is transmitted by way of this default.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

[scheduler-map \(CoS Virtual Channels\) | 388](#)

[shaping-rate \(CoS Virtual Channels\) | 395](#)

[virtual-channel-group \(CoS Interfaces\) | 406](#)

[virtual-channel-groups | 407](#)

[virtual-channels | 404](#)

drop-profile-map (Schedulers)

IN THIS SECTION

● [Syntax | 344](#)

● [Hierarchy Level | 344](#)

● [Description | 344](#)

- Required Privilege Level | 344
- Release Information | 344

Syntax

```
drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol (any | non-
tcp | tcp) drop-profile (Schedulers) profile-name;
```

Hierarchy Level

```
[edit class-of-service schedulers scheduler-name]
```

Description

Define the loss-priority value for a drop profile.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

Default Schedulers Overview

Determining Packet Drop Behavior by Configuring Drop Profile Maps for Schedulers

dscp-code-point (CoS Host Outbound Traffic)

IN THIS SECTION

- [Syntax | 345](#)
- [Hierarchy Level | 345](#)
- [Description | 345](#)
- [Options | 346](#)
- [Required Privilege Level | 346](#)
- [Release Information | 346](#)

Syntax

```
dscp-code-point value;
```

Hierarchy Level

```
[edit class-of-service host-outbound-traffic]
```

Description

Specify the value of the DSCP bits in the type of service (ToS) field of host outbound traffic (packets generated by the local Routing Engine) as they are placed in the default or specified output queue on all egress interfaces. This statement does not affect transit traffic or incoming traffic.

If you use the `ping` operational mode command with the `tos type-of-service` option, the value specified in this configuration statement overrides the DSCP value you specify in the `ping` command.

NOTE: Any DSCP rewrite rules configured on a 10-Gigabit Ethernet LAN/WAN PIC with SFP+ overwrite this DSCP value.

For egress interfaces hosted on MX Series routers, M120 routers, or Enhanced III FPCs in M320 routers, both Routing Engine sourced traffic and distributed protocol handler traffic are affected. For all other egress interfaces, only Routing Engine sourced traffic is affected.

Options

code-point Six-bit DSCP code point value.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.4.

Support for distributed protocol handler traffic introduced in Junos OS Release 13.2.

RELATED DOCUMENTATION

Understanding How Behavior Aggregate Classifiers Prioritize Trusted Traffic

Default DSCP and DSCP IPv6 Classifiers

Changing the Default Queuing and Marking of Host Outbound Traffic

egress-shaping-overhead

IN THIS SECTION

- [Syntax | 347](#)
- [Hierarchy Level | 347](#)
- [Description | 347](#)
- [Options | 348](#)
- [Required Privilege Level | 348](#)

Syntax

```
egress-shaping-overhead number;
```

Hierarchy Level

```
[edit chassis fpc slot-number pic pic-number traffic-manager],  
[edit chassis lcc number fpc slot-number pic pic-number traffic-manager]
```

Description

Number of bytes to add to packet to determine shaped session packet length.

NOTE: On M Series and T Series routers with Gigabit Ethernet Intelligent Queuing 2 (IQ2) PICs and Enhanced IQ2 (IQ2E) PICs and on MX Series routers with Dense Port Concentrators (DPCs) only, to account for egress shaping overhead bytes added to output traffic on the line card, you must use the `egress-policer-overhead` statement to explicitly configure corresponding egress policing overhead for Layer 2 policers, MAC policers, or queue rate limits applied to output traffic on the line card.

NOTE: For MIC and MPC interfaces on MX Series routers, by default the value of `egress-shaping-overhead` is configured to 20, which means that the number of class-of-service (CoS) shaping overhead bytes to be added to the packets is 20. The interfaces on DPCs in MX Series routers, the default value is zero. For interfaces on PICs other than the 10-port 10-Gigabit Oversubscribed Ethernet (OSE) Type 4, you should configure `egress-shaping-overhead` to a minimum of 20 bytes to add a shaping overhead of 20 bytes to the packets.

NOTE: When you change the egress-shaping-overhead value, on M Series, T Series, and MX104 routers the PIC on which it is changed is restarted. On MX5 routers, the MIC on which it is changed is restarted. On other MX Series routers, the DPC/MPC on which it is changed is restarted.

Options

number—When traffic management (queuing and scheduling) is configured on the egress side, the number of CoS shaping overhead bytes to add to the packets on the egress interface.

Range:

- -63 through 192.
- -62 through 192 for vSRX.

NOTE: The L2 headers (DA/SA + VLAN tags) are automatically a part of the shaping calculation.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.3.

RELATED DOCUMENTATION

egress-policer-overhead

Configuring CoS for L2TP Tunnels on ATM Interfaces

ingress-shaping-overhead

mode (Layer 2 Tunneling Protocol Shaping)

ingress-shaping-overhead

traffic-manager

forwarding-class (CoS Host Outbound Traffic)

IN THIS SECTION

- [Syntax | 349](#)
- [Hierarchy Level | 349](#)
- [Description | 349](#)
- [Default | 350](#)
- [Options | 350](#)
- [Required Privilege Level | 350](#)
- [Release Information | 350](#)

Syntax

```
forwarding-class class-name;
```

Hierarchy Level

```
[edit class-of-service host-outbound-traffic]
```

Description

Specify the name of the forwarding class to which host outbound traffic is assigned on all egress interfaces. The output queue associated with the forwarding class must be properly configured on all interfaces. In the case of a restricted interface, the traffic flows through a restricted queue.

For egress interfaces hosted on MX Series routers, M120 routers, or Enhanced III FPCs in M320 routers, both Routing Engine sourced traffic and distributed protocol handler traffic are affected. For all other egress interfaces, only Routing Engine sourced traffic is affected.

This statement does not affect transit traffic or incoming traffic.

Default

If you do not configure an output queue for host outbound traffic, the router uses the default queue assignments for host outbound traffic.

Options

class-name—Name of the forwarding class.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.4.

Support for distributed protocol handler traffic introduced in Junos OS Release 13.2.

RELATED DOCUMENTATION

Understanding How Forwarding Classes Assign Classes to Output Queues

Default Routing Engine Protocol Queue Assignments

Changing the Default Queuing and Marking of Host Outbound Traffic

forwarding-classes

IN THIS SECTION

- [SRX Series | 351](#)
- [QFX Series and OCX Series | 351](#)
- [EX Series \(Except EX4300\) | 352](#)
- [EX4300 | 352](#)
- [M320, MX Series, T Series, and PTX Series | 352](#)

- [Hierarchy Level | 352](#)
- [Description | 353](#)
- [Options | 354](#)
- [Required Privilege Level | 355](#)
- [Release Information | 355](#)

SRX Series

```
forwarding-classes {
  class class-name {
    priority (high | low);
    queue-num number;
    spu-priority (high | low | medium);
  }
  queue queue-number {
    class class-name {
      priority (high | low);
    }
  }
}
```

QFX Series and OCX Series

```
forwarding-classes {
  class class-name {
    pfc-priority pfc-priority;
    no-loss;
    queue-num queue-number <no-loss>;
  }
}
```

EX Series (Except EX4300)

```
forwarding-classes {
  class class-name {
    queue-num queue-number;
    priority (high | low);
  }
}
```

EX4300

```
forwarding-classes {
  class class-name ;
  queue-num queue-number;
}
}
```

M320, MX Series, T Series, and PTX Series

```
forwarding-classes {
  class class-name {
    queue queue-number;
    priority (high | low);
  }
  queue queue-number {
    class class-name {
      priority (high | low) [policing-priority (premium | normal)];
    }
  }
}
```

Hierarchy Level

```
[edit class-of-service]
```

Description

Command used to associate forwarding classes with class names and queues with queue numbers.

SRX Series Devices

All traffic traversing the SRX Series device is passed to an SPC to have service processing applied. Junos OS provides a configuration option to enable packets with specific Differentiated Services (DiffServ) code points (DSCP) precedence bits to enter a high-priority queue, a medium-priority queue, or a low-priority queue on the SPC. The Services Processing Unit (SPU) draws packets from the highest priority queue first, then from the medium priority queue, and last from the low priority queue. The processing of the queue is weighted-based not strict-priority-based. This feature can reduce overall latency for real-time traffic, such as voice traffic.

Initially, the spu-priority queue options were "high" and "low". Then, these options (depending on the devices) were expanded to "high", "medium-high", "medium-low", and "low". The two middle options ("medium-high" and "medium-low") have now been deprecated (again, depending on the devices) and replaced with "medium". So, the available options for spu-priority queue are "high", "medium", and "low".

We recommend that the high-priority queue be selected for real-time and high-value traffic. The other options would be selected based on user judgement on the value or sensitivity of the traffic.

M320, MX Series, and T Series Routers and EX Series Switches

For M320, MX Series, and T Series routers, and EX Series switches only, you can configure fabric priority queuing by including the `priority` statement. For Enhanced IQ PICs, you can include the `policing-priority` option.

NOTE: The `priority` and `policing-priority` options are not supported on PTX Series routers.

EX Series Switches

For the EX Series switches, this statement associates the forwarding class with a class name and queue number. It can define the fabric queuing priority as high, medium-high, medium-low, or low.

Map one or more forwarding classes to a single output queue. Also, when configuring DSCP-based priority-based flow control (PFC), map a forwarding class to a PFC priority value to use in pause frames when traffic on a DSCP value becomes congested (see *Configuring DSCP-based PFC for Layer 3 Untagged Traffic* for details).

Switches that use different forwarding classes for unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic support 12 forwarding classes and 12 output queues (0 through 11). You map unicast forwarding classes to a unicast queue (0 through 7) and multidestination forwarding classes to a multidestination queue (8 through 11). The queue to which you map a forwarding class determines if the forwarding class is a unicast or multidestination forwarding class.

Switches that use the same forwarding classes for unicast and multdestination traffic support eight forwarding classes and eight output queues (0 through 7). You map forwarding classes to output queues. All traffic classified into one forwarding class (unicast and multdestination) uses the same output queue.

You cannot configure weighted random early detection (WRED) packet drop on forwarding classes configured with the `no-loss` packet drop attribute. Do not associate a drop profile with lossless forwarding classes.

NOTE: If you map more than one forwarding class to a queue, all of the forwarding classes mapped to the same queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

OCX Series Switches

OCX Series switches do not support the `no-loss` packet drop attribute and do not support lossless forwarding classes. On OCX Series switches, do not configure the `no-loss` packet drop attribute on forwarding classes, and do not map traffic to the default `fcoe` and `no-loss` forwarding classes (both of these default forwarding classes carry the `no-loss` packet drop attribute).

NOTE: On switches that do not use the Enhanced Layer 2 Software (ELS) CLI, if you are using Junos OS Release 12.2, use the default forwarding-class-to-queue mapping for the lossless `fcoe` and `no-loss` forwarding classes. If you explicitly configure the lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (best effort) traffic and does *not* receive lossless treatment.

NOTE: On switches that do not use the ELS CLI, if you are using Junos OS Release 12.3 or later, the default configuration is the same as the default configuration for Junos OS Release 12.2, and the default behavior is the same (the `fcoe` and `no-loss` forwarding classes receive lossless treatment). However, if you explicitly configure lossless forwarding classes, you can configure up to six lossless forwarding classes by specifying the `no-loss` option. If you do not specify the `no-loss` option in an explicit forwarding class configuration, the forwarding class is lossy. For example, if you explicitly configure the `fcoe` forwarding class and you do not include the `no-loss` option, the `fcoe` forwarding class is lossy, not lossless.

Options

`queue-num` Output queue number to associate with forwarding class.
queue-number

- **Range:** 0 through 7.

class *class-name*

Displays the forwarding class name assigned to the internal queue number.

NOTE: This option is supported only on SRX5400, SRX5600, and SRX5800 devices.

NOTE: AppQoS forwarding classes must be different from those defined for interface-based rewriters.

priority

Fabric priority value:

high Forwarding class fabric queuing has high priority.

low Forwarding class fabric queuing has low priority.

The default priority is low.

spu-priority SPU priority queue, high, medium, or low. The default spu-priority is low.

NOTE: The spu-priority option is supported only on the SRX5000 line of devices.

The remaining statements are explained separately. See [CLI Explorer](#) for details.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

The policing-priority option was introduced in Junos OS Release 9.5.

Statement updated in Junos OS Release 11.4.

The spu-priority option was introduced in Junos OS Release 11.4R2.

The no-loss option was introduced in Junos OS Release 12.3 on QFX Series switches.

Change from two to four queues made in Junos OS Release 12.3X48-D40 and in Junos OS Release 15.1X49-D70.

The `pfc-priority` statement was introduced in Junos OS Release 17.4R1 on QFX Series switches.

The `medium-high` and `medium-low` priorities for `spu-priority` were deprecated and `medium` priority was added in Junos OS Release 19.1R1.

RELATED DOCUMENTATION

Configuring a Custom Forwarding Class for Each Queue

Forwarding Classes and Fabric Priority Queues

Configuring Hierarchical Layer 2 Policers on IQE PICs

Classifying Packets by Egress Interface

frame-relay-de (CoS Interfaces)

IN THIS SECTION

- [Syntax | 356](#)
- [Hierarchy Level | 357](#)
- [Description | 357](#)
- [Options | 357](#)
- [Required Privilege Level | 357](#)
- [Release Information | 357](#)

Syntax

```
frame-relay-de (name | default);
```

Hierarchy Level

```
[edit class-of-service interfaces interface-name unit logical-unit-number loss-priority-maps],
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
```

Description

Assign the loss priority map or the rewrite rule to a logical interface.

Options

- **default**—Apply default loss priority map or default rewrite rule. The default loss priority map contains the following settings:

```
loss-priority low code-point 0;
loss-priority high code-point 1;
```

- The default rewrite rule contains the following settings:

```
loss-priority low code-point 0;
loss-priority medium-low code-point 0;
loss-priority medium-high code-point 1;
loss-priority high code-point 1;
```

- **name**—Name of loss priority map or rewrite rule to be applied.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

frame-relay-de (CoS Loss Priority)

IN THIS SECTION

- [Syntax | 358](#)
- [Hierarchy Level | 358](#)
- [Description | 358](#)
- [Options | 358](#)
- [Required Privilege Level | 359](#)
- [Release Information | 359](#)

Syntax

```
frame-relay-de map-name {
    loss-priority level code-point (0 | 1);
}
```

Hierarchy Level

```
[edit class-of-service loss-priority-maps ]
```

Description

Define a Frame Relay discard-eligible bit loss-priority map.

Options

- *level*—Level of loss priority to be applied based on the specified CoS values. The level can be **low**, **medium-low**, **medium-high**, or **high**.
- *map-name*—Name of the loss-priority map.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

frame-relay-de (CoS Rewrite Rule)

IN THIS SECTION

- [Syntax | 359](#)
- [Hierarchy Level | 359](#)
- [Description | 360](#)
- [Options | 360](#)
- [Required Privilege Level | 360](#)
- [Release Information | 360](#)

Syntax

```
frame-relay-de rewrite-name {
  forwarding-class class-name {
    loss-priority level code-point (0 | 1);
  }
  import (default | rewrite-name);
}
```

Hierarchy Level

```
[edit class-of-service rewrite-rules]
```

Description

Define a Frame Relay discard-eligible bit rewrite rule.

Options

- ***level***—Level of loss priority on which to base the rewrite rule. The loss priority level can be **low**, **medium-low**, **medium-high**, or **high**.
- ***rewrite-name***—Name of a rewrite-rules mapping configured at the [edit class-of-service rewrite-rules] hierarchy level.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

host-outbound-traffic (Class-of-Service)

IN THIS SECTION

- [Syntax | 361](#)
- [Hierarchy Level | 361](#)
- [Description | 361](#)
- [Default | 361](#)
- [Options | 361](#)
- [Required Privilege Level | 361](#)
- [Release Information | 362](#)

Syntax

```
host-outbound-traffic {  
    dscp-code-point value;  
    forwarding-class class-name;  
    ieee-802.1 {  
        default value;  
        rewrite-rules;  
    }  
    protocol {  
        isis-over-gre {  
            dscp-code-point dscp-code-point;  
        }  
    }  
}
```

Hierarchy Level

[edit class-of-service]

Description

Classify and mark host outbound traffic. This statement does not affect transit traffic or incoming traffic.

Default

If you do not specify a forwarding class or DSCP value, the router uses the default queue and DSCP bit assignments for host outbound traffic.

Options

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.4.

Support for `ieee-802.1` statement introduced in Junos OS Release 12.3.

Support for distributed protocol handler traffic introduced in Junos OS Release 13.2.

Support for `protocol` statement introduced in Junos OS Release 17.3 for MX Series and PTX Series devices.

RELATED DOCUMENTATION

Default Routing Engine Protocol Queue Assignments

Default DSCP and DSCP IPv6 Classifiers

Changing the Default Queuing and Marking of Host Outbound Traffic

Configuring a Global Default IEEE 802.1p Value for All Host Outbound Traffic

Applying Egress Interface Rewrite Rules to the IEEE 802.1p Field for All Host Outbound Traffic on the Interface

ingress-policer-overhead

IN THIS SECTION

- [Syntax | 363](#)
- [Hierarchy Level | 363](#)
- [Description | 363](#)
- [Options | 364](#)
- [Required Privilege Level | 364](#)
- [Release Information | 365](#)

Syntax

```
ingress-policer-overhead bytes;
```

Hierarchy Level

```
[edit chassis fpc slot-number pic pic-number]
```

Description

Add the configured number of bytes to the length of a packet entering the interface.

Configure a policer overhead to control the rate of traffic received on an interface. Use this feature to help prevent denial-of-service (DoS) attacks or to enforce traffic rates to conform to the service-level agreement (SLA). When you configure a policer overhead, the configured policer overhead value (bytes) is added to the length of the final Ethernet frame. This calculated length of frame is used to determine the policer or the rate-limiting action.

Traffic policing combines the configured policy bandwidth limits and the burst size to determine how to meter the incoming traffic. If you configure a policer overhead on an interface, Junos OS adds those bytes to the length of incoming Ethernet frames. This added overhead fills each frame closer to the burst size, allowing you to control the rate of traffic received on an interface.

You can configure the policer overhead to rate-limit queues and Layer 2 and Layer 3 policers, for standalone (SA) and high-availability (HA) deployments. The policer overhead and the shaping overhead can be configured simultaneously on an interface.

NOTE: vSRX supports policer overhead on Layer 3 policers only.

The policer overhead applies to all interfaces on the PIC. In the following example, Junos OS adds 10 bytes of overhead to all incoming Ethernet frames on ports ge-0/0/0 through ge-0/0/4.

```
set chassis fpc 0 pic 0 ingress-policer-overhead 10
```

NOTE: vSRX only supports fpc 0 pic 0. When you commit the ingress-policer-overhead statement, the vSRX takes the PIC offline and then back online.

You need to craft the policer overhead size to match your network traffic. A value that is too low will have minimal impact on traffic bursts. A value that is too high will rate-limit too much of your incoming traffic.

In this example, the policer overhead of 255 bytes is configured for ge-0/0/0 through ge-0/0/4. The firewall policer is configured to discard traffic when the burst size is over 1500 bytes. This policer is applied to ge-0/0/0 and ge 0/0/1. Junos OS adds 255 bytes to every Ethernet frame that comes into the configured ports. If, during a burst of traffic, the combined length of incoming frames and the overhead bytes exceeds 1500 bytes, the policer starts to discard further incoming traffic.

```
set chassis fpc 0 pic 0 ingress-policer-overhead 255
set interfaces ge-0/0/0 unit 0 family inet policer input overhead_policer
set interfaces ge-0/0/0 unit 0 family inet address 10.9.1.2/24
set interfaces ge-0/0/1 unit 0 family inet policer input overhead_policer
set interfaces ge-0/0/1 unit 0 family inet address 10.9.2.2/24
set firewall policer overhead_policer if-exceeding bandwidth-limit 32k
set firewall policer overhead_policer if-exceeding burst-size-limit 1500
set firewall policer overhead_policer then discard
```

Options

bytes—Number of bytes added to a frame entering an interface.

- **Range:** 0–255 bytes
- **Default:** 0

```
[edit chassis fpc 0 pic 0]
user@host# set ingress-policer-overhead 10;
```

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 11.1.

RELATED DOCUMENTATION

ingress-shaping-overhead

Policer Overhead to Account for Rate Shaping Overview

Example: Configuring Policer Overhead to Account for Rate Shaping

Configuring a Policer Overhead

CoS on Enhanced IQ2 PICs Overview

interfaces (CoS)

IN THIS SECTION

- [Syntax | 365](#)
- [Hierarchy Level | 366](#)
- [Description | 366](#)
- [Options | 367](#)
- [Required Privilege Level | 367](#)
- [Release Information | 367](#)

Syntax

```
interfaces
    interface-name {
        input-scheduler-map map-name;
        input-shaping-rate rate;
        scheduler-map map-name;
        scheduler-map-chassis map-name;
        shaping-rate rate;
        unit logical-unit-number {
```

```

        adaptive-shaper adaptive-shaper-name;
        classifiers {
            dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence)
            (classifier-name | default);
        }
        forwarding-class class-name;
        fragmentation-map map-name;
        input-scheduler-map map-name;
        input-shaping-rate (percent percentage | rate);
        input-traffic-control-profile profiler-name shared-instance instance-
name;

        loss-priority-maps {
            default;
            map-name;
        }
        output-traffic-control-profile profile-name shared-instance instance-
name;

        rewrite-rules {
            dscp (rewrite-name | default);
            dscp-ipv6 (rewrite-name | default);
            exp (rewrite-name | default) protocol protocol-types;
            frame-relay-de (rewrite-name | default);
            inet-precedence (rewrite-name | default);
        }
        scheduler-map map-name;
        shaping-rate rate;
        virtual-channel-group group-name;
    }
}

```

Hierarchy Level

```
[edit class-of-service interface interface-name unit number]
```

Description

Associate the class-of-service configuration elements with an interface.

Options

interface *interface-name* unit *number*—The user-specified interface name and unit number.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.5.

RELATED DOCUMENTATION

| [Class of Service User Guide \(Security Devices\)](#)

logical-interface-policer

IN THIS SECTION

- [Syntax | 367](#)
- [Hierarchy Level | 368](#)
- [Description | 368](#)
- [Required Privilege Level | 368](#)
- [Release Information | 368](#)

Syntax

```
logical-interface-policer;
```

Hierarchy Level

```
[edit firewall policer policer-name]
```

Description

Configure a logical interface (aggregate) policer.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.5.

RELATED DOCUMENTATION

[Two-Color Policer Configuration Overview | 41](#)

[Example: Configuring a Two-Color Logical Interface \(Aggregate\) Policer | 45](#)

loss-priority (CoS Loss Priority)

IN THIS SECTION

- [Syntax | 369](#)
- [Hierarchy Level | 369](#)
- [Description | 369](#)
- [Options | 369](#)
- [Required Privilege Level | 369](#)
- [Release Information | 369](#)

Syntax

```
loss-priority level code-points [values ];
```

Hierarchy Level

```
[edit class-of-service loss-priority-maps frame-relay-de map-name]
```

Description

Map CoS values to a packet loss priority (PLP). In Junos OS, classifiers associate incoming packets with a forwarding class (FC) and PLP. PLPs allow you to set the priority for dropping packets. Typically, you mark packets exceeding some service level with a high loss priority—that is, a greater likelihood of being dropped.

Options

level can be one of the following:

- **high**—Packet has high loss priority.
- **medium-high**—Packet has medium-high loss priority.
- **medium-low**—Packet has medium-low loss priority.
- **low**—Packet has low loss priority.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.2.

RELATED DOCUMENTATION

[Understanding Interfaces](#)

[Understanding Packet Loss Priorities](#) | 17

loss-priority (CoS Rewrite Rules)

IN THIS SECTION

- [Syntax](#) | 370
- [Hierarchy Level](#) | 370
- [Description](#) | 370
- [Options](#) | 371
- [Required Privilege Level](#) | 371
- [Release Information](#) | 371

Syntax

```
loss-priority level;
```

Hierarchy Level

```
[edit class-of-service rewrite-rules type rewrite-name forwarding-class class-name]
```

Description

Specify a loss priority to which to apply a rewrite rule. The rewrite rule sets the code-point aliases and bit patterns for a specific forwarding class and packet loss priority (PLP). The inputs for the map are the forwarding class and the PLP. The output of the map is the code-point alias or bit pattern.

Options

level can be one of the following:

- **high**—The rewrite rule applies to packets with high loss priority.
- **low**—The rewrite rule applies to packets with low loss priority.
- **medium-high**—The rewrite rule applies to packets with medium-high loss priority.
- **medium-low**—The rewrite rule applies to packets with medium-low loss priority.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.2.

RELATED DOCUMENTATION

[Class of Service User Guide \(Security Devices\)](#)

loss-priority-maps (CoS Interfaces)

IN THIS SECTION

- [Syntax | 372](#)
- [Hierarchy Level | 372](#)
- [Description | 372](#)
- [Options | 372](#)
- [Required Privilege Level | 372](#)
- [Release Information | 372](#)

Syntax

```
loss-priority-maps {
  frame-relay-de (map-name | default);
}
```

Hierarchy Level

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
```

Description

Assign the loss priority map to a logical interface.

Options

- **default**—Apply default loss priority map. The default map contains the following:

```
loss-priority low code-point 0;
loss-priority high code-point 1;
```

- ***map-name***—Name of loss priority map to be applied.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.2.

RELATED DOCUMENTATION

| [Understanding Interfaces](#)

loss-priority-maps (CoS)

IN THIS SECTION

- [Syntax | 373](#)
- [Hierarchy Level | 373](#)
- [Description | 373](#)
- [Required Privilege Level | 373](#)
- [Release Information | 374](#)

Syntax

```
loss-priority-maps {  
    frame-relay-de loss-priority-map-name {  
        loss-priority (high | low | medium-high | medium-low) {  
            code-points [bit-string];  
        }  
    }  
}
```

Hierarchy Level

```
[edit class-of-service]
```

Description

Map the loss priority of incoming packets based on CoS values.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.2.

RELATED DOCUMENTATION

| [Understanding Interfaces](#)

non-strict-priority-scheduling

IN THIS SECTION

- [Syntax | 374](#)
- [Hierarchy Level | 374](#)
- [Description | 374](#)
- [Required Privilege Level | 375](#)
- [Release Information | 375](#)

Syntax

```
non-strict-priority-scheduling;
```

Hierarchy Level

```
[edit class-of-service],  
[edit dynamic-profiles name class-of-service]
```

Description

Configure non-strict priority scheduling to avoid starvation of lower-priority queues on SRX300, SRX320, SRX340, SRX345, SRX1500, SRX550M, and vSRX 2.0 devices.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 15.1X49-D80.

NOTE: This statement is supported only on SRX300, SRX320, SRX340, SRX345, SRX550M, SRX1500, and vSRX2.0 devices.

RELATED DOCUMENTATION

[Example: Configuring CoS Non-Strict Priority Scheduling](#) | 183

per-unit-scheduler

IN THIS SECTION

- [Syntax](#) | 375
- [Hierarchy Level](#) | 376
- [Description](#) | 376
- [Required Privilege Level](#) | 376
- [Release Information](#) | 377

Syntax

```
per-unit-scheduler;
```

Hierarchy Level

```
[edit interfaces interface-name]
```

Description

Enable the association of scheduler maps with logical interfaces.



CAUTION: Turning on per-unit scheduling causes the interface to reinitialize, which means all logical interfaces (units) on the interface are deleted and recreated.

When including the `per-unit-scheduler` statement, you must also include the `vlan-tagging` statement or the `flexible-vlan-tagging` statement (to apply scheduling to VLANs) or the `encapsulation frame-relay` statement (to apply scheduling to DLCIs) at the `[edit interfaces interface-name]` hierarchy level.

When including the `per-unit-scheduler` statement, you must also include the `guaranteed-rate` statement to ensure a minimum guaranteed rate for the logical interfaces.

NOTE: To enable per-unit scheduling on MX80 and MX104 routers, configure the `per-unit-scheduler` statement at each member physical interface level of a particular aggregated Ethernet interface as well as at that aggregated Ethernet interface level. On other routing platforms, it is enough if you include this statement at the aggregated Ethernet interface level.

NOTE: Per-unit scheduling is not supported on T1 interfaces configured on the Channelized OC12 IQ PIC.

NOTE: On Gigabit Ethernet IQ2 and IQ2-E PICs without the `per-unit-scheduler` statement, the entire PIC supports 4071 VLANs and the user can configure all the VLANs on the same port. On Gigabit Ethernet IQ2 and IQ2-E PICs with the `per-unit-scheduler` statement, the entire PIC supports $1024 - 2 * \text{number of ports}$ (1024 minus two times the number of ports), because each port is allocated two default schedulers.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

Applying Scheduler Maps and Shaping Rate to DLCIs and VLANs

Example: Applying Scheduling and Shaping to VLANs

Configuring Virtual LAN Queuing and Shaping on PTX Series Routers

Providing a Guaranteed Minimum Rate

policer-overhead

IN THIS SECTION

- [Syntax | 377](#)
- [Hierarchy Level | 378](#)
- [Description | 378](#)
- [Options | 378](#)
- [Required Privilege Level | 378](#)
- [Release Information | 378](#)

Syntax

```
policer-overhead {  
    egress bytes;  
    ingress bytes;  
    policer-overhead-value;  
}
```

Hierarchy Level

```
[edit interfaces interface-name unit number]
```

Description

Policer overhead adjustment for the logical interface. The adjustment can be made to ingress policers, egress policers, or both.

NOTE: The policer overhead adjustment only works on the ["logical-interface-policer" on page 367](#).

Options

- egress** Optional. Egress overhead adjustment in bytes.
 - Range:** -64 through 64
- ingress** Optional. Ingress overhead adjustment in bytes.
 - Range:** -64 through 64
- policer-overhead-value** Policer overhead adjustment to be made in both ingress and egress directions.
 - Range:** -64 through 64

Required Privilege Level

interface

Release Information

Statement introduced in Junos OS Release 18.2R1.

RELATED DOCUMENTATION

logical-interface-policer 367
shaping-rate (CoS Interfaces) 393

priority (Schedulers)

IN THIS SECTION

- [Syntax | 379](#)
- [Hierarchy Level | 379](#)
- [Description | 379](#)
- [Options | 379](#)
- [Required Privilege Level | 380](#)
- [Release Information | 380](#)

Syntax

```
priority priority-level;
```

Hierarchy Level

```
[edit class-of-service schedulers scheduler-name]
```

Description

Specify the packet-scheduling priority value.

Options

priority-level can be one of the following:

- `low`—Scheduler has low priority.
- `medium-low`—Scheduler has medium-low priority.
- `medium-high`—Scheduler has medium-high priority.
- `high`—Scheduler has high priority. Assigning high priority to a queue prevents the queue from being underserved.

- **strict-high**—Scheduler has strictly high priority. Configure a high priority queue with unlimited transmission bandwidth available to it. As long as it has traffic to send, the strict-high priority queue receives precedence over low, medium-low, and medium-high priority queues, but not high priority queues. You can configure strict-high priority on only one queue per interface.

NOTE: The strict-high priority level is the only priority level supported on ACX Series Routers. However, multiple strict-high priority queues can be configured per interface on ACX Series Routers.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

| *Configuring Schedulers for Priority Scheduling*

rate-limiters

IN THIS SECTION

- [Syntax | 381](#)
- [Hierarchy Level | 381](#)
- [Description | 381](#)
- [Options | 381](#)
- [Required Privilege Level | 382](#)
- [Release Information | 382](#)

Syntax

```
rate-limiters {
    rate-limiter-name {
        bandwidth-limit value-in-kbps;
        burst-size-limit value-in-bytes;
    }
}
```

Hierarchy Level

```
[edit class-of-service application-traffic-control]
[edit logical-systems logical-system-name class-of-service application-traffic-control]
[edit tenants tenant-name class-of-service application-traffic-control]
```

Description

Share the available bandwidth and burst size of a device's PICs by defining rate limiter profiles and applying them in AppQoS rules.

Options

- *rate-limiter-name*—Name of the rate limiter. It is applied in AppQoS rules to share device resources based on quality-of-service requirements.

The combination of rate limiting parameters, namely bandwidth- limit and burst-size-limit rate limit, make up the rate limiter profile. A maximum of 16 profiles are allowed per device. The same profile can be used by multiple rate limiters. For example, a profile with a bandwidth-limit of 200 Kbps and a burst-limit of 130,000 bytes, could be used in several rate limiters.

A maximum of 1000 rate limiters can be created. Rate limiters are defined for the device, and are assigned in rules in a rule set. A single rate limiter can be used multiple times within the same rule set. However, the rate limiter cannot be used in another rule set.

- *bandwidth-limit value-in-Kbps*—Maximum number of kilobits to be transmitted per second for this rate limiter. Up to 2 GB of bandwidth can be provisioned among multiple rate limiters to share the resource proportionally.

- `burst-size-limit` *value-in-bytes*—Maximum number of bytes to be transferred in a single burst or time-slice. This limit ensures that a high-priority transmission does not keep a lower priority transmission from transmitting.

NOTE: The number of `bandwidth-limit` and `burst-size-limit` combinations cannot exceed 16.

Required Privilege Level

`security`—To view this statement in the configuration.

`security-control`—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 11.4.

Support at the following hierarchy levels introduced in Junos OS Release 19.3R1: `[edit logical-systems logical-system-name class-of-service application-traffic-control]`, and `[edit tenants tenant-name class-of-service application-traffic-control]`.

RELATED DOCUMENTATION

| *Example: Configuring AppQoS*

rewrite-rules (CoS)

IN THIS SECTION

- [Syntax | 383](#)
- [Hierarchy Level | 383](#)
- [Description | 383](#)
- [Options | 383](#)
- [Required Privilege Level | 383](#)
- [Release Information | 383](#)

Syntax

```
rewrite-rules {
  type rewrite-name{
    import (rewrite-name | default);
    forwarding-class class-name {
      loss-priority level code-point [ aliases ] [ 6-bit-patterns ];
    }
  }
}
```

Hierarchy Level

```
[edit class-of-service]
```

Description

Specify a rewrite-rules mapping for the traffic that passes through all queues on the interface.

Options

- ***rewrite-name***—Name of a **rewrite-rules** mapping.
- ***type***—Traffic type.
- **Values:** **dscp**, **dscp-ipv6**, **exp**, **frame-relay-de** (J Series only), **ieee-802.1**, **ieee-802.1ad**, **inet-precedence**

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS. **ieee-802.1ad** option introduced in 9.2 of Junos OS.

RELATED DOCUMENTATION

[rewrite-rules \(CoS Interfaces\)](#) | [384](#)

rewrite-rules (CoS Interfaces)

IN THIS SECTION

- [Syntax](#) | [384](#)
- [Hierarchy Level](#) | [384](#)
- [Description](#) | [385](#)
- [Options](#) | [385](#)
- [Required Privilege Level](#) | [385](#)
- [Release Information](#) | [385](#)

Syntax

```
rewrite-rules {  
    dscp (rewrite-name | default);  
    dscp-ipv6 (rewrite-name | default);  
    exp (rewrite-name | default) protocol protocol-types;  
    exp-push-push-push default;  
    exp-swap-push-push default;  
    ieee-802.1 (rewrite-name | default) vlan-tag (outer | outer-and-inner);  
    inet-precedence (rewrite-name | default);  
}
```

Hierarchy Level

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
```

Description

Associate a rewrite-rules configuration or default mapping with a specific interface.

Options

- ***rewrite-name***—Name of a **rewrite-rules** mapping configured at the [edit class-of-service rewrite-rules] hierarchy level.
- **default**—The default mapping.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

The option to apply IEEE 802.1 rewrite rules to both inner and outer VLAN tags introduced for SRX Series devices in Junos OS Release 18.1.

RELATED DOCUMENTATION

| [rewrite-rules \(CoS\)](#) | [382](#)

rule-sets (CoS AppQoS)

IN THIS SECTION

- [Syntax](#) | [386](#)
- [Hierarchy Level](#) | [386](#)
- [Description](#) | [387](#)

- [Options | 387](#)
- [Required Privilege Level | 388](#)
- [Release Information | 388](#)

Syntax

```
rule-sets {
  rule-set-name {
    rule rule-name {
      match {
        application application-name;
        application-any;
        application-group application-group-name;
        application-known;
        application-unknown;
      }
      then {
        dscp-code-point dscp-value ;
        forwarding-class forwarding-class-name;
        log;
        loss-priority [ high | medium-high | medium-low | low ];
        rate-limit {
          loss-priority-high;
          client-to-server rate-limiter-name;
          server-to-client rate-limiter-name;
        }
      }
    }
  }
}
```

Hierarchy Level

```
[edit class-of-service application-traffic-control]
[edit logical-systems logical-system-name class-of-service application-traffic-control]
[edit tenants tenant-name class-of-service application-traffic-control]
```


Description

Defines AppQoS rule sets and the rules that establish priorities based on quality-of-service requirements for the associated applications. AppQoS rules can be included in policy statements to implement application-aware quality of service control.

Options

- *rule-set-name*—Name used to refer to a collection of AppQoS rules.
- rule *rule-name*—Name applied to the match criteria and resulting actions that control the quality-of-service provided to any matching applications.
- application *application-name*—Name of the application to be used as match criteria for the rule.
- application-any —Any application encountering this rule. Note that when you use this specification, all application matching ends. Any application rule following this one will never be encountered.
- application-group *application-group-name*—Group of applications to be used as match criteria for the rule. Both applications and application groups can be match criteria for a single rule.
- application-known—Match criteria specifying any session that is identified, but its corresponding application is not specified.
- application-unknown—Match criteria specifying any session that is not identified.
- forwarding-class *forwarding-class-name*—The AppQoS class with which matching applications will be marked. This field identifies the rewriter that has marked the DSCP value . Therefore, the AppQoS forwarding class must be different from those used by IDP or firewall filters. With this class specified, firewall filter class will not overwrite the existing DSCP value.
- dscp-code-point—DSCP alias or bit map with which matching applications will be marked to establish the output queue. This value can be marked by rewriters from IDP, AppQoS, or a firewall filter. The forwarding-class value identifies which rewriter has re-marked the packet with the current DSCP value. If a packet triggers all three rewriters, IDP takes precedence over AppQoS, which takes precedence over a firewall filter.
- loss-priority—Loss priority with which matching applications will be marked. This value is used to determine the likelihood that a packet would be dropped when encountering congestion. A high loss priority means that there is an 80% chance of packet loss in congestion. Possible values are high, medium-high, medium-low and low.
- rate-limit—Rate limiters to be associated with client-to-server and with server-to-client traffic for this application. The rate limiter profile defines maximum speed and volume limits for matching applications.

- `log`—AppQoS event logging.

Required Privilege Level

`security`—To view this statement in the configuration.

`security-control`—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 11.4.

Support at the following hierarchy levels introduced in Junos OS Release 19.3R1: `[edit logical-systems logical-system-name class-of-service application-traffic-control]`, and `[edit tenants tenant-name class-of-service application-traffic-control]`.

RELATED DOCUMENTATION

| *Example: Configuring AppQoS*

scheduler-map (CoS Virtual Channels)

IN THIS SECTION

- [Syntax | 389](#)
- [Hierarchy Level | 389](#)
- [Description | 389](#)
- [Options | 389](#)
- [Required Privilege Level | 389](#)
- [Release Information | 389](#)

Syntax

```
scheduler-map map-name;
```

Hierarchy Level

```
[edit class-of-service virtual-channel-groups group-name virtual-channel-name]
```

Description

Apply a scheduler map to this virtual channel.

Options

map-name—Name of the scheduler map.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.2.

RELATED DOCUMENTATION

[default \(CoS\)](#) | [342](#)

[shaping-rate \(CoS Virtual Channels\)](#) | [395](#)

[virtual-channel-group \(CoS Interfaces\)](#) | [406](#)

[virtual-channel-groups](#) | [407](#)

[virtual-channels](#) | [404](#)

schedulers (CoS)

IN THIS SECTION

- [Syntax | 390](#)
- [Hierarchy Level | 390](#)
- [Description | 391](#)
- [Options | 391](#)
- [Required Privilege Level | 391](#)
- [Release Information | 391](#)

Syntax

```
schedulers {
  scheduler-name {
    adjust-minimum rate;
    adjust-percent percentage;
    buffer-size (seconds | percent percentage | remainder | temporal microseconds);
    drop-profile-map loss-priority (any | low | medium-low | medium-high | high) protocol (any |
non-tcp | tcp) drop-profile profile-name;
    excess-priority [ low | medium-low | medium-high | high | none];
    excess-rate (percent percentage | proportion value);
    priority priority-level;
    shaping-rate (percent percentage | rate);
    transmit-rate (percent percentage | rate | remainder) <exact | rate-limit>;
  }
}
```

Hierarchy Level

[edit [class-of-service](#)]

Description

Specify the scheduler name and parameter values.

Options

scheduler-name—Name of the scheduler to be configured.

The remaining statements are explained separately. Search for a statement in [CLI Explorer](#) or click a linked statement in the Syntax section for details.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

[How Schedulers Define Output Queue Properties](#)

[Default Schedulers Overview](#)

[Configuring Schedulers](#)

[Configuring a Scheduler](#)

shaping-rate (CoS Adaptive Shapers)

IN THIS SECTION

- [Syntax](#) | 392
- [Hierarchy Level](#) | 392
- [Description](#) | 392
- [Options](#) | 392

- Required Privilege Level | 392
- Release Information | 392

Syntax

```
shaping-rate (percent percentage | rate);
```

Hierarchy Level

```
[edit class-of-service adaptive-shapers adaptive-shaper-name trigger type]
```

Description

Define the list of trigger types and associated rates.

Options

- **percent *percentage***—Shaping rate as a percentage of the available interface bandwidth.
- **Range:** 0 through 100 percent
- ***rate***—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).
- **Range:** 3200 through 32,000,000,000 bps

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

| [trigger \(CoS\) | 402](#)

shaping-rate (CoS Interfaces)

IN THIS SECTION

- [Syntax | 393](#)
- [Hierarchy Level | 393](#)
- [Description | 393](#)
- [Default | 394](#)
- [Options | 394](#)
- [Required Privilege Level | 394](#)
- [Release Information | 394](#)

Syntax

```
shaping-rate rate <overhead bytes> ;
```

Hierarchy Level

```
[edit class-of-service interfaces interface-name],  
[edit class-of-service interfaces interface-name unit logical-unit-number]
```

Description

For logical interfaces on which you configure packet scheduling, configure traffic shaping by specifying the amount of bandwidth to be allocated to the logical interface.

Logical and physical interface traffic shaping can be configured together. This means you can include the `shaping-rate` statement at the `[edit class-of-service interfaces interface interface-name]` hierarchy level *and* the `[edit class-of-service interfaces interface interface-name unit logical-unit-number]` hierarchy level. If you

configure traffic shaping at both the logical and physical interface levels, the logical interface shaping credit is checked and updated before the physical interface shaping credit.

Alternatively, you can configure a shaping rate for a logical interface and oversubscribe the physical interface by including the `shaping-rate` statement at the `[edit class-of-service traffic-control-profiles]` hierarchy level. With this configuration approach, you can independently control the delay-buffer rate.

On the physical interface, you can set the Layer 2 overhead adjustment to the shaping rate calculation at egress.

Default

If you do not include this statement at the `[edit class-of-service interfaces interface interface-name unit logical-unit-number]` hierarchy level, the default logical interface bandwidth is the average of unused bandwidth for the number of logical interfaces that require default bandwidth treatment. If you do not include this statement at the `[edit class-of-service interfaces interface interface-name]` hierarchy level, the default physical interface bandwidth is the average of unused bandwidth for the number of physical interfaces that require default bandwidth treatment.

Options

rate Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).

- **Range:** 1000 through 6,400,000,000 bps

overhead Layer 2 shaping overhead adjustment to be applied at egress (bytes).

- **Range:** -62 through 192

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.2.

overhead option introduced in Junos OS Release 18.1.

RELATED DOCUMENTATION

| [policer-overhead](#) | [377](#)

shaping-rate (CoS Virtual Channels)

IN THIS SECTION

- [Syntax](#) | [395](#)
- [Hierarchy Level](#) | [395](#)
- [Description](#) | [395](#)
- [Options](#) | [395](#)
- [Required Privilege Level](#) | [396](#)
- [Release Information](#) | [396](#)

Syntax

```
shaping-rate (percent percentage | rate);
```

Hierarchy Level

```
[edit class-of-service virtual-channel-groups group-name virtual-channel-name]
```

Description

Define the shaping rates to be associated with the virtual channel.

Options

- **percent *percentage***—Shaping rate as a percentage of the available interface bandwidth.
- **Range:** 0 through 100 percent

- **rate**—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).
- **Range:** 3200 through 32,000,000,000 bps

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

[default \(CoS\) | 342](#)

[scheduler-map \(CoS Virtual Channels\) | 388](#)

[virtual-channel-group \(CoS Interfaces\) | 406](#)

[virtual-channel-groups | 407](#)

[virtual-channels | 404](#)

shaping-rate (Schedulers)

IN THIS SECTION

- [Syntax | 397](#)
- [Hierarchy Level | 397](#)
- [Description | 397](#)
- [Default | 397](#)
- [Options | 397](#)
- [Required Privilege Level | 398](#)
- [Release Information | 398](#)

Syntax

```
shaping-rate (percent percentage | rate) <burst-size bytes>;
```

Hierarchy Level

```
[edit class-of-service schedulers scheduler-name]
```

Description

Define a limit on excess bandwidth usage for a forwarding class/queue.

The transmit-rate statement at the [edit class-of-service schedulers *scheduler-name*] hierarchy level configures the minimum bandwidth allocated to a queue. The transmission bandwidth can be configured as an exact value or allowed to exceed the configured rate if additional bandwidth is available from other queues.

Configure the shaping rate as an absolute maximum usage and not the additional usage beyond the configured transmit rate.

Default

If you do not include this statement, the default shaping rate is 100 percent, which is the same as no shaping at all.

Options

percent
percentage Shaping rate as a percentage of the available interface bandwidth.

- **Range:** 0 through 100 percent

NOTE: If you configure a shaping rate as a percent in a scheduler, the effective shaping rate is calculated based on the following hierarchy:

1. Logical interface shaping rate, if configured

2. Physical interface shaping rate, if configured

3. Physical interface bandwidth

With SRX300, SRX320, SRX340, SRX345, SRX550m, SRX1500, and vSRX2.0 devices, you can configure both logical interface shaping rates and physical interface shaping rates on the same physical interface. On all other models, you can only configure one or the other on a particular physical interface.

rate Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).

- **Range:** 3200 through 6,400,000,000,000 bps

NOTE: Through Junos OS Release 13.3, the upper limit is 160,000,000,000 bps. Beginning with Junos OS Release 14.1, the upper limit is 6,400,000,000,000 bps.

burst-size Maximum burst size, in bytes. The burst value determines the number of rate credits that
bytes can accrue when the queue or scheduler node is held in the inactive round robin.

- **Range:** 0 through 1,000,000,000

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

The burst-size option added for MIC and MPC interfaces on MX Series routers in Junos OS Release 11.4.

RELATED DOCUMENTATION

| *Applying Scheduler Maps Overview*

transmit-rate (Schedulers)

IN THIS SECTION

- [Syntax | 399](#)
- [Hierarchy Level | 399](#)
- [Description | 399](#)
- [Default | 399](#)
- [Options | 400](#)
- [Required Privilege Level | 401](#)
- [Release Information | 401](#)

Syntax

```
transmit-rate (rate | percent percentage | remainder) <exact | rate-limit>;
```

Hierarchy Level

```
[edit class-of-service schedulers scheduler-name]
```

Description

Specify the transmit rate or percentage for a scheduler.

Default

If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 5, 0, 0, 0, and 0 percent, respectively.

Options

exact (Optional) Enforce the exact transmission rate. Under sustained congestion, a rate-controlled queue that goes into negative credit fills up and eventually drops packets. This value should never exceed the rate-controlled amount. For PTX Series routers, this option is allowed only on the non-strict-high (high, medium-high, medium-low, or low) queues.

percent
percentage Percentage of transmission capacity. A percentage of zero drops all packets in the queue unless additional bandwidth is available from other queues.

- **Range:** 0 through 100 percent for M, MX and T Series routers and EX Series switches; 1 through 100 percent for PTX Series routers; 0 through 200 percent for the SONET/SDH OC48/STM16 IQE PIC

NOTE:

- On M Series Multiservice Edge Routers, for interfaces configured on 4-port E1 and 4-port T1 PICs only, you can configure a *percentage* value only from 11 through 100. These two PICs do not support transmission rates less than 11 percent.
- The configuration of the `transmit-rate percent 0 exact` statement at the `[edit class-of-service schedules scheduler-name]` hierarchy is ineffective on T4000 routers with Type 5 FPC.
- On MIC and MPC interfaces on MX Series routers, when the transmit rate is configured as a percentage and **exact** or **rate-limit** is enabled on a queue, the shaping rate of the parent node is used to compute the transmit rate. If **exact** or **rate-limit** is not configured, the guaranteed rate of the parent node is used to compute the transmit rate.
- On PTX Series routers, unconfigured interfaces are equivalent to percent 0. This means the system offers no guaranteed rate on the interface, and the queue will always be scheduled in the excess priority.

rate Transmission rate, in bps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).

- **Range:** 3200 through 6,400,000,000,000 bps

NOTE: For all MX Series interfaces, the rate can be from 65,535 through 6,400,000,000,000 bps.

`rate-limit`—(Optional) Limit the transmission rate to the rate-controlled amount by applying a policing action to the queue. Packets are hard-dropped when traffic exceeds the specified maximum transmission rate.

NOTE: For PTX Series routers, this option is allowed only on the strict-high queue. We recommend that you configure rate limit on strict-high queues because the other queues may not meet their guaranteed bandwidths. The `rate-limit` option cannot rate limit the queue if strict-priority scheduling is configured with the *strict-priority-scheduler* statement.

NOTE: The configuration of the `rate-limit` statement is supported on T4000 routers only with a Type 5 FPC.

`remainder` Use the remaining rate available.

Required Privilege Level

`interface`—To view this statement in the configuration.

`interface-control`—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

`rate-limit` option introduced in Junos OS Release 8.3. Applied to the Multiservices PICs in Junos OS Release 9.4.

RELATED DOCUMENTATION

Configuring Schedulers

Configuring Scheduler Transmission Rate

trigger (CoS)

IN THIS SECTION

- [Syntax | 402](#)
- [Hierarchy Level | 402](#)
- [Description | 402](#)
- [Options | 402](#)
- [Required Privilege Level | 402](#)
- [Release Information | 403](#)

Syntax

```
trigger type shaping-rate (percent percentage | rate);
```

Hierarchy Level

```
[edit class-of-service adaptive-shapers adaptive-shaper-name]
```

Description

Specify a trigger type and its associated rate.

Options

type—The type of trigger. Currently, the trigger type can be **becn** only.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

| [shaping-rate \(CoS Adaptive Shapers\)](#) | [391](#)

tunnel-queuing

IN THIS SECTION

- [Syntax](#) | [403](#)
- [Hierarchy Level](#) | [403](#)
- [Description](#) | [403](#)
- [Required Privilege Level](#) | [404](#)
- [Release Information](#) | [404](#)

Syntax

```
tunnel-queuing;
```

Hierarchy Level

```
[edit chassis fpc slot-number pic pic-number]
```

Description

Enable class-of-service (CoS) queuing for generic routing encapsulation (GRE) and IP-IP tunnels.

NOTE: The `tunnel-queuing` option is not supported in chassis cluster mode.

Required Privilege Level

`interface`—To view this statement in the configuration.

`interface-control`—To add this statement to the configuration.

Release Information

Statement modified in Release 9.0 of Junos OS.

virtual-channels

IN THIS SECTION

- [Syntax | 404](#)
- [Hierarchy Level | 405](#)
- [Description | 405](#)
- [Options | 405](#)
- [Required Privilege Level | 405](#)
- [Release Information | 405](#)

Syntax

```
virtual-channels {  
    virtual-channel-name;  
}
```

Hierarchy Level

```
[edit class-of-service]
```

Description

Specify a list of virtual channels.

Each virtual channel has eight transmission queues.

Options

virtual-channel-name—Name of the virtual channel.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

default (CoS) 342
scheduler-map (CoS Virtual Channels) 388
shaping-rate (CoS Virtual Channels) 395
virtual-channel-group (CoS Interfaces) 406
virtual-channel-groups 407

virtual-channel-group (CoS Interfaces)

IN THIS SECTION

- [Syntax | 406](#)
- [Hierarchy Level | 406](#)
- [Description | 406](#)
- [Options | 406](#)
- [Required Privilege Level | 407](#)
- [Release Information | 407](#)

Syntax

```
virtual-channel-group group-name;
```

Hierarchy Level

```
[edit class-of-service interfaces interface-name unit logical-unit-number]
```

Description

Assign a virtual channel group to a logical interface.

If you apply a virtual channel group to multiple logical interfaces, separate queues are created on each of the interfaces. The same virtual channel names are used on all the interfaces. You can specify the scheduler and shaping rates in the virtual channels in percentages so that you can apply the same virtual channel group to logical interfaces with different available bandwidths.

Options

group-name—Name of the virtual channel group.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

[default \(CoS\) | 342](#)

[scheduler-map \(CoS Virtual Channels\) | 388](#)

[shaping-rate \(CoS Virtual Channels\) | 395](#)

[virtual-channels | 404](#)

[virtual-channel-groups | 407](#)

virtual-channel-groups

IN THIS SECTION

- [Syntax | 407](#)
- [Hierarchy Level | 408](#)
- [Description | 408](#)
- [Options | 408](#)
- [Required Privilege Level | 408](#)
- [Release Information | 408](#)

Syntax

```
virtual-channel-groups {
    virtual-channel-group-name {
```

```

    virtual-channel-name {
        scheduler-map map-name;
        shaping-rate (percent percentage | rate);
        default;
    }
}

```

Hierarchy Level

[edit class-of-service]

Description

Associate a virtual channel with a scheduler map and a shaping rate. Virtual channels and virtual channel groups enable you to direct traffic into a virtual channel and apply bandwidth limits to the channel.

Options

group-name—Name of the virtual channel group.

The remaining statements are explained separately. See [CLI Explorer](#).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Release 8.5 of Junos OS.

RELATED DOCUMENTATION

[default \(CoS\) | 342](#)

[scheduler-map \(CoS Virtual Channels\) | 388](#)

[shaping-rate \(CoS Virtual Channels\) | 395](#)

[virtual-channel-group \(CoS Interfaces\) | 406](#)

[virtual-channels | 404](#)

Operational Commands

IN THIS CHAPTER

- `show class-of-service application-traffic-control counter` | 411
- `show class-of-service application-traffic-control statistics rate-limiter` | 417
- `show class-of-service application-traffic-control statistics rule` | 421
- `show class-of-service classifier` | 424
- `show class-of-service code-point-aliases` | 428
- `show class-of-service drop-profile` | 430
- `show class-of-service fabric scheduler-map` | 435
- `show class-of-service fabric statistics` | 437
- `show class-of-service forwarding-class` | 442
- `show class-of-service forwarding-table` | 444
- `show class-of-service forwarding-table classifier` | 449
- `show class-of-service forwarding-table classifier mapping` | 451
- `show class-of-service forwarding-table drop-profile` | 453
- `show class-of-service forwarding-table fabric scheduler-map` | 456
- `show class-of-service forwarding-table rewrite-rule` | 458
- `show class-of-service forwarding-table rewrite-rule mapping` | 460
- `show class-of-service forwarding-table scheduler-map` | 462
- `show class-of-service forwarding-table traffic-class-map` | 465
- `show class-of-service fragmentation-map` | 468
- `show class-of-service interface` | 471
- `show class-of-service loss-priority-rewrite` | 516
- `show class-of-service l2tp-session` | 518
- `show class-of-service policy-map` | 520
- `show class-of-service rewrite-rule` | 522
- `show class-of-service routing-instance` | 525
- `show class-of-service scheduler-hierarchy interface` | 527

- [show class-of-service scheduler-map | 530](#)
- [show class-of-service traffic-class-map | 534](#)
- [show class-of-service translation-table | 537](#)
- [show interfaces forwarding-class-counters | 543](#)
- [show interfaces voq | 550](#)

show class-of-service application-traffic-control counter

IN THIS SECTION

- [Syntax | 411](#)
- [Description | 411](#)
- [Required Privilege Level | 411](#)
- [Output Fields | 412](#)
- [Sample Output | 412](#)
- [Release Information | 417](#)

Syntax

```
show class-of-service application-traffic-control counter
```

Description

Display the details of the sessions after applying application quality-of-service (AppQoS). The output includes AppQoS DSCP marking and honoring statistics with the number of sessions processed, marked, and honored.

Required Privilege Level

view

Output Fields

Table 52 on page 412 lists the output fields for the `show class-of-service application-traffic-control counter` command. Output fields are listed in the approximate order in which they appear.

Table 52: show class-of-service application-traffic-control counter Output Fields

Field Name	Field Description
pic	PIC number of the accumulated statistics. NOTE: The PIC number is always displayed as 0 for SRX300, SRX320, SRX340, SRX345, SRX550M, and SRX1500 devices.
Sessions processed	The number of sessions where the class of service was checked.
Sessions marked	The number of sessions marked based on application-aware DSCP marking.
Sessions honored	The number of sessions honored based on application-aware traffic honoring.
Sessions rate limited	The number of sessions that have been rate limited.
Client-to-server flows rate limited	The number of client-to-server flows that have been rate limited.
Server-to-client flows rate limited	The number of server-to-client flows that have been rate limited.

Sample Output

show class-of-service application-traffic-control counter

```

user@host> show class-of-service application-traffic-control counter
pic: 2/1
Counter type                               Value
Sessions processed                         300
Sessions marked                           200

```

```

Sessions honored                                0
Sessions rate limited                            100
Client-to-server flows rate limited              100
Server-to-client flows rate limited              70

pic: 2/0
Counter type                                    Value
Sessions processed                              400
Sessions marked                                  300
Sessions honored                                0
Sessions rate limited                            200
Client-to-server flows rate limited              200
Server-to-client flows rate limited              100

```

show class-of-service application-traffic-control counter (Unified Policies)

```

user@host> show class-of-service application-traffic-control counter
pic: 0/0
Counter type                                    Value
Sessions processed                              2
Sessions marked                                  1
Sessions honored                                1
Sessions rate limited                            1
Client-to-server flows rate limited              0
Server-to-client flows rate limited              1
Session default ruleset hit                                1
Session ignored no default ruleset              1

```

show class-of-service application-traffic-control counter logical-system LSYS1

```

user@host> show class-of-service application-traffic-control counter logical-system LSYS1
Logical System: LSYS1

pic: 0/0
Counter type                                    Value
Sessions processed                              1
Sessions marked                                  0
Sessions honored                                0
Sessions rate limited                            0

```

Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

show class-of-service application-traffic-control counter logical-system all

```
user@host>show class-of-service application-traffic-control counter logical-system all
```

Logical System: root-logical-system

pic: 0/0

Counter type	Value
Sessions processed	0
Sessions marked	0
Sessions honored	0
Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

Logical System: LSYS0

pic: 0/0

Counter type	Value
Sessions processed	0
Sessions marked	0
Sessions honored	0
Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

Logical System: LSYS1

pic: 0/0

Counter type	Value
Sessions processed	1
Sessions marked	0
Sessions honored	0

Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

Logical System: LSYS2

pic: 0/0

Counter type	Value
Sessions processed	0
Sessions marked	0
Sessions honored	0
Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

show class-of-service application-traffic-control counter tenant TSYS1

```
user@host>show class-of-service application-traffic-control counter tenant TSYS1
```

Tenant System: TSYS1

pic: 0/0

Counter type	Value
Sessions processed	1
Sessions marked	0
Sessions honored	0
Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

show class-of-service application-traffic-control counter tenant all

```
user@host>show class-of-service application-traffic-control counter tenant all
```

Tenant System: root-logical-system

pic: 0/0

Counter type	Value
Sessions processed	0
Sessions marked	0
Sessions honored	0
Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

Tenant System: TSYS0

pic: 0/0

Counter type	Value
Sessions processed	0
Sessions marked	0
Sessions honored	0
Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

Tenant System: TSYS1

pic: 0/0

Counter type	Value
Sessions processed	1
Sessions marked	0
Sessions honored	0
Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

Tenant System: TSYS2

pic: 0/0

Counter type	Value
Sessions processed	0
Sessions marked	0

Sessions honored	0
Sessions rate limited	0
Client-to-server flows rate limited	0
Server-to-client flows rate limited	0
Session default ruleset hit	0
Session ignored no default ruleset	0

Release Information

Command introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

| *Example: Configuring AppQoS*

show class-of-service application-traffic-control statistics rate-limiter

IN THIS SECTION

- [Syntax | 417](#)
- [Description | 418](#)
- [Required Privilege Level | 418](#)
- [Output Fields | 418](#)
- [Sample Output | 419](#)
- [Release Information | 420](#)

Syntax

```
show class-of-service application-traffic-control statistics rate-limiter
```

Description

Display AppQoS real-time run information about application rate limiting of current or recent sessions.

Required Privilege Level

view

Output Fields

[Table 53 on page 418](#) lists the output fields for the `show class-of-service application-traffic-control statistics rate-limiter` command. Output fields are listed in the approximate order in which they appear.

Table 53: show class-of-service application-traffic-control statistics rate-limiter Output Fields

Field Name	Field Description
pic	<p>PIC number.</p> <p>NOTE: The PIC number is always displayed as 0 for SRX300, SRX320, SRX340, SRX345, and SRX550M devices.</p>
Ruleset	The rule set applied on the session.
Application	The application match for applying the rule set.
Client-to-server	The rate limiter applied from client to server.
Rate(kbps)	The rate in the client-to-server direction
Server-to-client	The rate limiter applied from server to client.
Rate(kbps)	The rate in the server-to-client direction.

Sample Output

show class-of-service application-traffic-control statistics rate-limiter

```
user@host> show class-of-service application-traffic-control statistics rate-limiter
pic: 2/1
  Ruleset      Application  Client-to-server  Rate(kbps)  Server-to-client  Rate(kbps)
  my-ruleset-1 HTTP        my-http-c2s-r1    10000000    my-http-s2c-r1    20000000
  my-ruleset-2 HTTP        my-http-c2s-r1-2  20000000    my-http-s2c-r1-2  30000000
  my-ruleset-2 FTP        my-ftp-c2s-r1     50000       my-ftp-s2c-r1     50000
  ...
```

```
pic: 2/0
  Ruleset      Application  Client-to-server  Rate(kbps)  Server-to-client  Rate(kbps)
  my-ruleset-1 HTTP        my-http-c2s-r1    10000000    my-http-s2c-r1    20000000
  my-ruleset-2 HTTP        my-http-c2s-r1-2  20000000    my-http-s2c-r1-2  30000000
  my-ruleset-2 FTP        my-ftp-c2s-r1     50000       my-ftp-s2c-r1     50000
```

show class-of-service application-traffic-control statistics rate-limiter logical-system LSYS1

```
user@host>show class-of-service application-traffic-control statistics rate-limiter logical-
system LSYS1
Logical System: LSYS1

pic: 0/0
```

show class-of-service application-traffic-control statistics rate-limiter logical-system all

```
user@host>show class-of-service application-traffic-control statistics rate-limiter logical-
system all
class-of-service application-traffic-control statistics rate-limiter logical-system all
Logical System: root-logical-system

pic: 0/0

Logical System: LSYS0

pic: 0/0
```

```
Logical System: LSYS1
```

```
pic: 0/0
```

```
Logical System: LSYS2
```

```
pic: 0/0
```

show class-of-service application-traffic-control statistics rate-limiter tenant TSYS1

```
user@host>show class-of-service application-traffic-control statistics rate-limiter tenant TSYS1
```

```
Tenant System: LSYS1
```

```
pic: 0/0
```

show class-of-service application-traffic-control statistics rate-limiter tenant all

```
user@host>show class-of-service application-traffic-control statistics rate-limiter tenant all
```

```
Tenant System: root-logical-system
```

```
pic: 0/0
```

```
Tenant System: TSYS0
```

```
pic: 0/0
```

```
Tenant System: TSYS1
```

```
pic: 0/0
```

```
Tenant System: TSYS2
```

```
pic: 0/0
```

Release Information

Command introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

| *Example: Configuring AppQoS*

show class-of-service application-traffic-control statistics rule

IN THIS SECTION

- [Syntax | 421](#)
- [Description | 421](#)
- [Required Privilege Level | 421](#)
- [Output Fields | 421](#)
- [Sample Output | 422](#)
- [Release Information | 424](#)

Syntax

```
show class-of-service application-traffic-control statistics rule
```

Description

Display the number of time an AppQoS rule was applied.

Required Privilege Level

view

Output Fields

[Table 54 on page 422](#) lists the output fields for the show class-of-service application-traffic-control statistics rule command. Output fields are listed in the approximate order in which they appear.

Table 54: show class-of-service application-traffic-control statistics rule Output Fields

Field Name	Field Description
pic	PIC number where the rule is applied. NOTE: The PIC number is always displayed as 0 for for SRX300, SRX320, SRX340, SRX345, and SRX550M devices.
Ruleset	The rule set containing the rule.
Rule	The rule to which the statistic applies.
Hits	The number of times a match for the rule was encountered.

Sample Output

show class-of-service application-traffic-control statistics rule

```

user@host> show class-of-service application-traffic-control statistics rule
class-of-service application-traffic-control statistics rule
pic: 2/0
  Ruleset      Rule           Hits
  my-ruleset-1 ftp-rule       100
  my-ruleset-1 http-rule      100
  my-ruleset-2 telnet-rule    300
  my-ruleset-2 smtp-rule     300
  ...

pic: 2/1
  Ruleset      Rule           Hits
  my-ruleset-1 ftp-rule       200
  my-ruleset-1 http-rule      300
  my-ruleset-2 telnet-rule    400
  my-ruleset-2 smtp-rule     500

```

show class-of-service application-traffic-control statistics rule logical-system LSYS1

```
user@host>show class-of-service application-traffic-control statistics rule logical-system LSYS1
Logical System: LSYS1

pic: 0/0
```

show class-of-service application-traffic-control statistics rule logical-system all

```
user@host>show class-of-service application-traffic-control statistics rule logical-system all
Logical System: root-logical-system

pic: 0/0

Logical System: LSYS0

pic: 0/0

Logical System: LSYS1

pic: 0/0

Logical System: LSYS2

pic: 0/0
```

show class-of-service application-traffic-control statistics rule tenant TSYS1

```
user@host>show class-of-service application-traffic-control statistics rule tenant TSYS1
Tenant System: TSYS1

pic: 0/0
```

show class-of-service application-traffic-control statistics rule tenant all

```
user@host>show class-of-service application-traffic-control statistics rule tenant all
Tenant System: root-logical-system
```

```
pic: 0/0  
Tenant System: TSYS0
```

```
pic: 0/0  
Tenant System: TSYS1
```

```
pic: 0/0  
Tenant System: TSYS2
```

```
pic: 0/0
```

Release Information

Command introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

| *Example: Configuring AppQoS*

show class-of-service classifier

IN THIS SECTION

- [Syntax | 425](#)
- [Description | 425](#)
- [Options | 425](#)
- [Required Privilege Level | 425](#)
- [Output Fields | 425](#)
- [Sample Output | 426](#)
- [Release Information | 428](#)

Syntax

```
show class-of-service classifier
<name name>
<type dscp | type dscp-ipv6 | type exp | type ieee-802.1 | type inet-precedence>
```

Description

For each class-of-service (CoS) classifier, display the mapping of code point value to forwarding class and loss priority.

Options

- none** Display all classifiers.
- name *name*** (Optional) Display named classifier.
- type dscp** (Optional) Display all classifiers of the Differentiated Services code point (DSCP) type.
- type dscp-ipv6** (Optional) Display all classifiers of the DSCP for IPv6 type.
- type exp** (Optional) Display all classifiers of the MPLS experimental (EXP) type.
- type ieee-802.1** (Optional) Display all classifiers of the ieee-802.1 type.
- type inet-precedence** (Optional) Display all classifiers of the inet-precedence type.

Required Privilege Level

view

Output Fields

[Table 55 on page 426](#) describes the output fields for the `show class-of-service classifier` command. Output fields are listed in the approximate order in which they appear.

Table 55: show class-of-service classifier Output Fields

Field Name	Field Description
Classifier	Name of the classifier.
Code point type	Type of the classifier: exp (not on EX Series switch), dscp, dscp-ipv6 (not on EX Series switch), ieee-802.1, or inet-precedence.
Index	Internal index of the classifier.
Code point	Code point value used for classification
Forwarding class	Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.
Loss priority	Loss priority value used for classification. For most platforms, the value is high or low. For some platforms, the value is high, medium-high, medium-low, or low.

Sample Output

show class-of-service classifier type ieee-802.1

```

user@host> show class-of-service classifier type ieee-802.1
Classifier: ieee802.1-default, Code point type: ieee-802.1, Index: 3
Code Point      Forwarding Class      Loss priority
  000            best-effort           low
  001            best-effort           high
  010            expedited-forwarding   low
  011            expedited-forwarding   high
  100            assured-forwarding     low
  101            assured-forwarding     medium-high
  110            network-control        low
  111            network-control        high

Classifier: users-ieee802.1, Code point type: ieee-802.1

```


Code point	Forwarding class	Loss priority
100	expedited-forwarding	low

show class-of-service classifier type ieee-802.1 (QFX Series)

```

user@switch> show class-of-service classifier type

ieee-802.1
Classifier: ieee8021p-default, Code point type: ieee-802.1, Index: 11
  Code point    Forwarding class    Loss priority
  000           best-effort         low
  001           best-effort         low
  010           best-effort         low
  011           fcoe                low
  100           no-loss             low
  101           best-effort         low
  110           network-control    low
  111           network-control    low

Classifier: ieee8021p-untrust, Code point type: ieee-802.1, Index: 16
  Code point    Forwarding class    Loss priority
  000           best-effort         low
  001           best-effort         low
  010           best-effort         low
  011           best-effort         low
  100           best-effort         low
  101           best-effort         low
  110           best-effort         low
  111           best-effort         low

Classifier: ieee-mcast, Code point type: ieee-802.1, Index: 46
  Code point    Forwarding class    Loss priority
  000           mcast              low
  001           mcast              low
  010           mcast              low
  011           mcast              low
  100           mcast              low
  101           mcast              low
  110           mcast              low
  111           mcast              low

```

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service code-point-aliases

IN THIS SECTION

- Syntax | 428
- Description | 428
- Options | 428
- Required Privilege Level | 429
- Output Fields | 429
- Sample Output | 429
- Release Information | 430

Syntax

```
show class-of-service code-point-aliases
<dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence>
```

Description

Display the mapping of class-of-service (CoS) code point aliases to corresponding bit patterns.

Options

- | | |
|------------------|---|
| none | Display code point aliases of all code point types. |
| dscp | (Optional) Display Differentiated Services code point (DSCP) aliases. |
| dscp-ipv6 | (Optional) Display IPv6 DSCP aliases. |

- exp** (Optional) Display MPLS EXP code point aliases.
- ieee-802.1** (Optional) Display IEEE-802.1 code point aliases.
- inet-precedence** (Optional) Display IPv4 precedence code point aliases.

Required Privilege Level

view

Output Fields

[Table 56 on page 429](#) describes the output fields for the `show class-of-service code-point-aliases` command. Output fields are listed in the approximate order in which they appear.

Table 56: show class-of-service code-point-aliases Output Fields

Field Name	Field Description
Code point type	Type of the code points displayed: dscp, dscp-ipv6 (not on EX Series switch), exp (not on EX Series switch or the QFX Series), ieee-802.1, or inet-precedence (not on the QFX Series).
Alias	Alias for a bit pattern.
Bit pattern	Bit pattern for which the alias is displayed.

Sample Output

show class-of-service code-point-aliases exp

```

user@host> show class-of-service code-point-aliases exp
Code point type: exp
  Alias      Bit pattern
  af11      100
  af12      101
  be        000
  be1       001

```

cs6	110
cs7	111
ef	010
ef1	011
nc1	110
nc2	111

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service drop-profile

IN THIS SECTION

- [Syntax | 430](#)
- [Description | 430](#)
- [Options | 431](#)
- [Required Privilege Level | 431](#)
- [Output Fields | 431](#)
- [Sample Output | 432](#)
- [Release Information | 434](#)

Syntax

```
show class-of-service drop-profile
<profile-name profile-name>
```

Description

Display data points for each class-of-service (CoS) random early detection (RED) drop profile.

Options

- none** Display all drop profiles.
- profile-name *profile-name*** (Optional) Display the specified profile only.

Required Privilege Level

view

Output Fields

Table 57 on page 431 describes the output fields for the `show class-of-service drop-profile` command. Output fields are listed in the approximate order in which they appear.

Table 57: show class-of-service drop-profile Output Fields

Field Name	Field Description
Drop profile	Name of a drop profile.
Type	Type of drop profile: <ul style="list-style-type: none"> discrete (default) interpolated (EX8200 switches, QFX Series switches, QFabric systems, EX4600 switches, OCX Series switches only)
Index	Internal index of this drop profile.
Fill Level	Percentage fullness of a queue.
Drop probability	Drop probability at this fill level.

Sample Output

show class-of-service drop-profile

```

user@host> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
      100             100
Drop profile: user-drop-profile, Type: interpolated, Index: 2989
  Fill level    Drop probability
        0             0
        1             1
        2             2
        4             4
        5             5
        6             6
        8             8
       10            10
       12            15
       14            20
       15            23
... 64 entries total
       90            96
       92            96
       94            97
       95            98
       96            98
       98            99
       99            99
      100           100

```

show class-of-service drop-profile (EX4200 Switch)

```

user@switch> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level
      100
Drop profile: dp1, Type: discrete, Index: 40496

```

```
Fill level
    10
```

show class-of-service drop-profile (EX8200 Switch)

```
user@switch> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100         100
Drop profile: dp1, Type: interpolated, Index: 40496
  Fill level    Drop probability
    0           0
    1           80
    2           90
    4           90
    5           90
    6           90
    8           90
   10           90
   12           91
   14           91
   15           91
   16           91
   18           91
   20           91
   22           92
   24           92
   25           92
   26           92
   28           92
   30           92
   32           93
   34           93
   35           93
   36           93
   38           93
   40           93
   42           94
   44           94
   45           94
   46           94
```

48	94
49	94
51	95
52	95
54	95
55	95
56	95
58	95
60	95
62	96
64	96
65	96
66	96
68	96
70	96
72	97
74	97
75	97
76	97
78	97
80	97
82	98
84	98
85	98
86	98
88	98
90	98
92	99
94	99
95	99
96	99
98	99
99	99
100	100
Drop profile: dp2, Type: discrete, Index: 40499	
Fill level	Drop probability
10	5
50	50

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service fabric scheduler-map

IN THIS SECTION

- [Syntax | 435](#)
- [Description | 435](#)
- [Options | 435](#)
- [Required Privilege Level | 435](#)
- [Output Fields | 435](#)
- [Sample Output | 436](#)
- [Release Information | 437](#)

Syntax

```
show class-of-service fabric scheduler-map
```

Description

(M320 routers, MX Series routers, T Series routers and EX Series switches only) Display the mapping of class-of-service (CoS) schedulers to switch fabric traffic priorities and a summary of scheduler parameters for each priority.

Options

This command has no options.

Required Privilege Level

view

Output Fields

[Table 58 on page 436](#) describes the output fields for the `show class-of-service fabric scheduler-map` command. Output fields are listed in the approximate order in which they appear.

Table 58: show class-of-service fabric scheduler-map Output Fields

Field Name	Field Description
Fabric priority	Indicates the fabric traffic priority. Currently, two priorities are supported: low and high.
Scheduler	Name of the scheduler.
Index	Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.
Drop profiles	<p>Display the assignment of drop profile by name and index to a given loss priority and protocol pair:</p> <ul style="list-style-type: none"> • Loss priority—Packet loss priority for drop profile assignment. • Protocol—Transport protocol for drop profile assignment. • Name—Name of the drop profile.

Sample Output

show class-of-service fabric scheduler-map

```

user@host> show class-of-service fabric scheduler-map
Fabric priority: low
Scheduler: fab-ef-scheduler, Index: 60211
Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           non-TCP   44321  fab-ef-profile
  Low           TCP       44321  fab-ef-profile
  High          non-TCP   44321  fab-ef-profile
  High          TCP       44321  fab-ef-profile

Fabric priority: high
Scheduler: fab-ef-scheduler, Index: 60211
Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           non-TCP   44321  fab-ef-profile

```

Low	TCP	44321	fab-ef-profile
High	non-TCP	44321	fab-ef-profile
High	TCP	44321	fab-ef-profile

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service fabric statistics

IN THIS SECTION

- Syntax | 437
- Description | 437
- Options | 438
- Required Privilege Level | 439
- Output Fields | 439
- Sample Output | 440
- Release Information | 442

Syntax

```
show class-of-service fabric statistics
<destination fpc-number>
<detail>
<source fpc-number>
<summary>
```

Description

Display class-of-service (CoS) switch fabric queue statistics.

NOTE: On the Switch Control Board (SCB) and the SCBE on MX Series routers, the ratio between high-priority queue and low-priority queue for traffic scheduled to enter the fabric is 85:15. However, on the SCBE2, this ratio is 97:3.

NOTE: After an FPC restart, executing this command can return an Error = Operation timed out message for up to a minute even though the FPC is back online. No statistics are lost during this time, however.

Options

none	Same as summary.
destination <i>fpc-number</i>	(Optional) Display details for the specified destination Flexible PIC Concentrator (FPC). The FPC number is a value from 0 through 7 (depending on platform).
detail	(Optional) Display detailed statistics at the PFE level.
source <i>fpc-number</i>	(Optional) Display details for the specified source FPC. The FPC number is a value from 0 through 7 (depending on platform).
summary	(Optional) Display all switch fabric statistics.

detail Options

none	Display details for all FPCs and PFEs.
destination-fpc <i>fpc-number</i>	(Optional) Display details for the specified destination FPC. The FPC number is a value from 0 through 7 (depending on platform).
destination-pfe <i>pfe-number</i>	(Optional) Display details for the specified destination packet forwarding engine (PFE). The PFE number is a value from 0 through 15 (depending on platform).
source-fpc <i>fpc-number</i>	(Optional) Display details for the specified source FPC. The FPC number is a value from 0 through 7 (depending on platform).
source-pfe <i>pfe-number</i>	(Optional) Display details for the specified source PFE. The PFE number is a value from 0 through 15 (depending on platform).

Required Privilege Level

view

Output Fields

Table 59 on page 439 describes the output fields for the `show class-of-service fabric statistics` command. Output fields are listed in the approximate order in which they appear.

Table 59: show class-of-service fabric statistics Output Fields

Field Name	Field Description
Destination FPC Index	Index number associated with the destination FPC.
Destination Pfc Index	Index number associated with the destination PFE.
Source PFC Index	Index number associated with the source FPC.
Source Pfc Index	Index number associated with the source PFE.
Total statistics	<p>Fabric queue statistic totals:</p> <ul style="list-style-type: none"> • Packets—Total packet count for high-priority and low-priority queues. • Bytes—Total byte count for high-priority and low-priority queues. • Pps—Total packets-per-second count for high-priority and low-priority queues. • bps—Total bits-per-second count for high-priority and low-priority queues.
Tx statistics	<p>Fabric queue statistics for transmitted traffic:</p> <ul style="list-style-type: none"> • Packets—Transmitted packet count for high-priority and low-priority queues. • Bytes—Transmitted byte count for high-priority and low-priority queues. • Pps—Transmitted packets-per-second count for high-priority and low-priority queues. • bps—Transmitted bits-per-second count for high-priority and low-priority queues.

Table 59: show class-of-service fabric statistics Output Fields *(Continued)*

Field Name	Field Description
Drop statistics	<p>Fabric queue statistics for dropped traffic, including packets dropped because of internal error:</p> <ul style="list-style-type: none"> • Packets—Dropped packet count for high-priority and low-priority queues. • Bytes—Dropped byte count for high-priority and low-priority queues. • Pps—Dropped packets-per-second count for high-priority and low-priority queues. • bps—Dropped bits-per-second count for high-priority and low-priority queues.
Qdepth statistics	<p>Fabric queue depth statistics</p> <ul style="list-style-type: none"> • Average—Average queue depth in bytes. • Current—Current queue depth in bytes. • Peak—Peak queue depth in bytes. • Max—Maximum queue depth in bytes.

Sample Output

show class-of-service fabric statistics

```

user@host> show class-of-service fabric statistics
Destination FPC Index: 0, Source FPC Index: 0
Total statistics:   High priority   Low priority
Packets:           0               0
Bytes :            0               0
Pps :              0               0
bps :              0               0
Tx statistics:     High priority   Low priority
Packets:           0               0
Bytes :            0               0
Pps :              0               0
bps :              0               0
Drop statistics:   High priority   Low priority

```

```

Packets:                0                0
Bytes  :                 0                0
Pps   :                 0                0
bps   :                 0                0

```

Destination FPC Index: 0, Source FPC Index: 1

```

Total statistics:  High priority          Low priority
Packets:          0                      0
Bytes  :          0                      0
Pps   :          0                      0
bps   :          0                      0

```

```

Tx statistics:    High priority          Low priority
Packets:          0                      0
Bytes  :          0                      0
Pps   :          0                      0
bps   :          0                      0

```

```

Drop statistics:  High priority          Low priority
Packets:          0                      0
Bytes  :          0                      0

```

...

show class-of-service fabric statistics detail

```
user@host> show class-of-service fabric statistics detail
```

Destination FPC Index: 4, Destination Pfe Index: 0, Source FPC Index: 4, Source Pfe Index: 0

```

Total statistics:  High priority          Low priority
Packets:          28953                   0
Bytes  :          14823936                0
Pps   :           19                     0
bps   :           81024                   0

```

```

Tx statistics:    High priority          Low priority
Packets:          28953                   0
Bytes  :          14823936                0
Pps   :           19                     0
bps   :           81024                   0

```

```

Drop statistics:  High priority          Low priority
Packets:          0                      0
Bytes  :          0                      0
Pps   :          0                      0
bps   :          0                      0

```

```

Qdepth statistics: High priority          Low priority

```

Average:	0	0 b
Current:	0	0 b
Peak :	0	0 b
Max :	1367343104	1367343104 b

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-class

IN THIS SECTION

- Syntax | 442
- Description | 442
- Required Privilege Level | 442
- Output Fields | 443
- Sample Output | 443
- Release Information | 444

Syntax

```
show class-of-service forwarding-class
```

Description

Display mapping of forwarding class names to queues.

Required Privilege Level

view

Output Fields

Table 60 on page 443 lists the output fields for the `show class-of-service forwarding-class` command. Output fields are listed in the approximate order in which they appear.

Table 60: show class-of-service forwarding-class Output Fields

Field Name	Field Description
Forwarding class	Forwarding class name.
ID	ID number assigned to the forwarding class.
Queue	Queue number.
Restricted queue	Restricted queue number.
Fabric priority	Fabric priority, either low or high.
Policing priority	Layer 2 policing, either premium or normal.
SPU priority	Services Processing Unit (SPU) priority queue, either high or low.

Sample Output

show class-of-service forwarding-class

```

user@host> show class-of-service forwarding-class
Forwarding class      ID Queue Restricted queue Fabric priority Policing priority SPU
priority
best-effort           0  0      0             low           normal          low
expedited-forwarding  1  1      1             low           normal          high
assured-forwarding    2  2      2             low           normal          low
network-control        3  3      3             low           normal          low

```

Release Information

Command introduced before Junos OS Release 12.1.

RELATED DOCUMENTATION

| [Forwarding Classes Overview](#) | 68

show class-of-service forwarding-table

IN THIS SECTION

- [Syntax](#) | 444
- [Syntax \(TX Matrix and TX Matrix Plus Router\)](#) | 444
- [Description](#) | 445
- [Options](#) | 445
- [Required Privilege Level](#) | 445
- [Output Fields](#) | 445
- [Sample Output](#) | 446
- [Release Information](#) | 449

Syntax

```
show class-of-service forwarding-table
```

Syntax (TX Matrix and TX Matrix Plus Router)

```
show class-of-service forwarding-table  
<lcc number> | <sfc number>
```

Description

Display the entire class-of-service (CoS) configuration as it exists in the forwarding table. Executing this command is equivalent to executing all `show class-of-service forwarding-table` commands in succession.

Options

lcc
number (TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the forwarding table configuration for a specific T640 router (or line-card chassis) configured in a routing matrix. On a TX Matrix Plus router, display the forwarding table configuration for a specific router (or line-card chassis) configured in the routing matrix.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

sfc
number (TX Matrix Plus routers only) (Optional) Display the forwarding table configuration for the TX Matrix Plus router. Replace *number* with 0.

Required Privilege Level

view

Output Fields

See the output field descriptions for `show class-of-service forwarding-table` commands:

- *show class-of-service forwarding-table classifier*
- *show class-of-service forwarding-table classifier mapping*
- *show class-of-service forwarding-table drop-profile*
- *show class-of-service forwarding-table fabric scheduler-map*
- *show class-of-service forwarding-table rewrite-rule*

- *show class-of-service forwarding-table rewrite-rule mapping*
- *show class-of-service forwarding-table scheduler-map*

Sample Output

show class-of-service forwarding-table

```

user@host> show class-of-service forwarding-table
Classifier table index: 9, # entries: 8, Table type: EXP
Entry #   Code point   Forwarding-class #   PLP
  0         000         0                   0
  1         001         0                   1
  2         010         1                   0
  3         011         1                   1
  4         100         2                   0
  5         101         2                   1
  6         110         3                   0
  7         111         3                   1

Table Index/
Interface   Index      Q num      Table type
sp-0/0/0.1001    66        11        IPv4 precedence
sp-0/0/0.2001    67        11        IPv4 precedence
sp-0/0/0.16383   68        11        IPv4 precedence
fe-0/0/0.0       69        11        IPv4 precedence

Interface: sp-0/0/0 (Index: 129, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/0 (Index: 137, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent

```

```

Priority low
  PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
Priority low
  PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
Interface: fe-0/0/1 (Index: 138, Map index: 2, Map type: FINAL,
  Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
Priority low
  PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
Priority low
  PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

...

RED drop profile index: 1, # entries: 1
                                Drop
Entry    Fullness(%)  Probability(%)
    0              100             100

```

show class-of-service forwarding-table lcc (TX Matrix Plus Router)

```

user@host> show class-of-service forwarding-table lcc 0
lcc0-re0:
-----

Classifier table index: 9, # entries: 64, Table type: IPv6 DSCP
Entry #   Code point   Forwarding-class #   PLP
    0       000000         0         0
    1       000001         0         0
    2       000010         0         0
    3       000011         0         0
    4       000100         0         0
    5       000101         0         0
    6       000110         0         0
    7       000111         0         0
    8       001000         0         0

```

9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0
17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0
38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
...			

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-table classifier

IN THIS SECTION

- [Syntax | 449](#)
- [Description | 449](#)
- [Options | 449](#)
- [Required Privilege Level | 449](#)
- [Output Fields | 450](#)
- [Sample Output | 450](#)
- [Release Information | 451](#)

Syntax

```
show class-of-service forwarding-table classifier
```

Description

Display the mapping of code point value to queue number and loss priority for each classifier as it exists in the forwarding table.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 61 on page 450 describes the output fields for the `show class-of-service forwarding-table classifier` command. Output fields are listed in the approximate order in which they appear.

Table 61: show class-of-service forwarding-table classifier Output Fields

Field Name	Field Description
Classifier table index	Index of the classifier table.
entries	Total number of entries.
Table type	Type of code points in the table: DSCP, EXP (not on the QFX Series), IEEE 802.1, IPv4 precedence (not on the QFX Series), or IPv6 DSCP.
Entry #	Entry number.
Code point	Code point value used for classification.
Forwarding-class #	Forwarding class to which the code point is assigned.
PLP	Packet loss priority value set by classification. For most platforms, the value can be 0 or 1. For some platforms, the value is 0, 1, 2, or 3. The value 0 represents low PLP. The value 1 represents high PLP. The value 2 represents medium-low PLP. The value 3 represents medium-high PLP.

Sample Output

show class-of-service forwarding-table classifier

```
user@host> show class-of-service forwarding-table classifier
Classifier table index: 62436, # entries: 64, Table type: DSCP
```

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0

2	000010	0	0
3	000011	0	0
4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	0	0
8	001000	0	0
9	001001	0	0
10	001010	1	1
11	001011	0	0
...			
60	111100	0	0
61	111101	0	0
62	111110	0	0
63	111111	0	0

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-table classifier mapping

IN THIS SECTION

- [Syntax | 452](#)
- [Description | 452](#)
- [Options | 452](#)
- [Required Privilege Level | 452](#)
- [Output Fields | 452](#)
- [Sample Output | 453](#)
- [Release Information | 453](#)

Syntax

```
show class-of-service forwarding-table classifier mapping
```

Description

For each logical interface, display either the table index of the classifier for a given code point type or the queue number (if it is a fixed classification) in the forwarding table.

Options

This command has no options.

Required Privilege Level

view

Output Fields

[Table 62 on page 452](#) describes the output fields for the `show class-of-service forwarding-table classifier mapping` command. Output fields are listed in the approximate order in which they appear.

Table 62: show class-of-service forwarding-table classifier mapping Output Fields

Field Name	Field Description
Table index/ Q num	If the table type is Fixed, the number of the queue to which the interface is mapped. For all other types, this value is the classifier index number.
Interface	Name of the logical interface. This field can also show the physical interface (QFX Series).
Index	Logical interface index.
Table type	Type of code points in the table: DSCP, EXP (not on the QFX Series), Fixed, IEEE 802.1, IPv4 precedence (not on the QFX Series), or IPv6 DSCP. none if no-default option set.

Sample Output

show class-of-service forwarding-table classifier mapping

```
user@host> show class-of-service forwarding-table classifier mapping
```

Table index/			
Interface	Index	Q num	Table type
so-5/0/0.0	10	62436	DSCP
so-0/1/0.0	11	62436	DSCP
so-0/2/0.0	12	1	Fixed
so-0/2/1.0	13	62436	DSCP
so-0/2/1.0	13	62437	IEEE 802.1
so-0/2/2.0	14	62436	DSCP
so-0/2/2.0	14	62438	IPv4 precedence

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-table drop-profile

IN THIS SECTION

- [Syntax | 454](#)
- [Description | 454](#)
- [Options | 454](#)
- [Required Privilege Level | 454](#)
- [Output Fields | 454](#)
- [Sample Output | 455](#)
- [Release Information | 456](#)

Syntax

```
show class-of-service forwarding-table drop-profile
```

Description

Display the data points of all random early detection (RED) drop profiles as they exist in the forwarding table.

Options

This command has no options.

Required Privilege Level

view

Output Fields

[Table 63 on page 454](#) describes the output fields for the `show class-of-service forwarding-table drop-profile` command. Output fields are listed in the approximate order in which they appear.

Table 63: show class-of-service forwarding-table drop-profile Output Fields

Field Name	Field Description
RED drop profile index	Index of this drop profile.
# entries	Number of entries in a particular RED drop profile index.
Entry	Drop profile entry number.
Fullness(%)	Percentage fullness of a queue.
Drop probability(%)	Drop probability at this fill level.

Sample Output

show class-of-service forwarding-table drop-profile

```
user@host> show class-of-service forwarding-table drop-profile
```

```
RED drop profile index: 4, # entries: 1
```

Drop		
Entry	Fullness(%)	Probability(%)
0	100	100

```
RED drop profile index: 8742, # entries: 3
```

Drop		
Entry	Fullness(%)	Probability(%)
0	10	10
1	20	20
2	30	30

```
RED drop profile index: 24627, # entries: 64
```

Drop		
Entry	Fullness(%)	Probability(%)
0	0	0
1	1	1
2	2	2
3	4	4
...		
61	98	99
62	99	99
63	100	100

```
RED drop profile index: 25393, # entries: 64
```

Drop		
Entry	Fullness(%)	Probability(%)
0	0	0
1	1	1
2	2	2
3	4	4
...		
61	98	98
62	99	99
63	100	100

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-table fabric scheduler-map

IN THIS SECTION

- [Syntax | 456](#)
- [Description | 456](#)
- [Options | 456](#)
- [Additional Information | 457](#)
- [Required Privilege Level | 457](#)
- [Output Fields | 457](#)
- [Sample Output | 457](#)
- [Release Information | 458](#)

Syntax

```
show class-of-service forwarding-table fabric scheduler-map
```

Description

(M320 routers, MX Series routers, T Series routers and EX Series switches only) Display the scheduler map information as it exists in the forwarding table for switch fabric.

Options

This command has no options.

Additional Information

For information about how packet loss priority is assigned to packets, see *Managing Congestion by Setting Packet Loss Priority for Different Traffic Flows*.

Required Privilege Level

view

Output Fields

[Table 64 on page 457](#) describes the output fields for the `show class-of-service forwarding-table fabric scheduler-map` command. Output fields are listed in the approximate order in which they appear.

Table 64: show class-of-service forwarding-table fabric scheduler-map Output Fields

Field Name	Field Description
Fabric priority	Fabric traffic priority: low and high.
Scheduler index	Index of the scheduler applied to a fabric traffic priority.
PLP high	Drop profile index for high-packet-loss-priority (PLP) packets.
PLP low	Drop profile index for low-PLP packets.
TCP PLP high	Drop profile index for low-PLP and Transmission Control Protocol (TCP) packets.
TCP PLP low	Drop profile index for high-PLP and TCP packets.

Sample Output

show class-of-service forwarding-table fabric scheduler-map

```
user@host> show class-of-service forwarding-table fabric scheduler-map
Fabric priority: low
```

```
Scheduler index: 60211
```

```
  PLP high: 44321, PLP low: 44321, TCP PLP high: 44321, TCP PLP low: 44321
```

```
Fabric priority: high
```

```
Scheduler index: 60211
```

```
  PLP high: 44321, PLP low: 44321, TCP PLP high: 44321, TCP PLP low: 44321
```

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-table rewrite-rule

IN THIS SECTION

- [Syntax | 458](#)
- [Description | 458](#)
- [Options | 459](#)
- [Required Privilege Level | 459](#)
- [Output Fields | 459](#)
- [Sample Output | 460](#)
- [Release Information | 460](#)

Syntax

```
show class-of-service forwarding-table rewrite-rule
```

Description

Display mapping of queue number and loss priority to code point value for each rewrite rule as it exists in the forwarding table.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 65 on page 459 describes the output fields for the show class-of-service forwarding-table rewrite-rule command. Output fields are listed in the approximate order in which they appear.

Table 65: show class-of-service forwarding-table rewrite-rule Output Fields

Field Name	Field Description
Rewrite table index	Index for this rewrite rule.
# entries	Number of entries in this rewrite rule.
Table type	Type of table: DSCP , EXP (not on the QFX Series), EXP-PUSH-3 (not on the QFX Series), IEEE 802.1IPv4 precedence (not on the QFX Series), IPv6 DSCP , or Fixed .
Q#	Queue number to which this entry is assigned.
Low bits	Code point value for low-priority loss profile.
State	State of this code point: enabled , rewritten , or disabled .
High bits	Code point value for high-priority loss profile.

Sample Output

show class-of-service forwarding-table rewrite-rule

```

user@host> show class-of-service forwarding-table rewrite-rule
Rewrite table index: 3753, # entries: 4, Table type: DSCP
Q#      Low bits  State      High bits  State
0       000111  Enabled    001010    Enabled
2       000000  Disabled   001100    Enabled
1       101110  Enabled    110111    Enabled
3       110000  Enabled    111000    Enabled
  
```

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-table rewrite-rule mapping

IN THIS SECTION

- [Syntax | 460](#)
- [Description | 461](#)
- [Options | 461](#)
- [Required Privilege Level | 461](#)
- [Output Fields | 461](#)
- [Sample Output | 461](#)
- [Release Information | 462](#)

Syntax

```

show class-of-service forwarding-table rewrite-rule mapping
  
```

Description

For each logical interface, display the table identifier of the rewrite rule map for each code point type.

Options

This command has no options.

Required Privilege Level

view

Output Fields

[Table 66 on page 461](#) describes the output fields for the `show class-of-service forwarding-table rewrite-rule mapping` command. Output fields are listed in the approximate order in which they appear.

Table 66: show class-of-service forwarding-table rewrite-rule mapping Output Fields

Field Name	Field Description
Interface	Name of the logical interface. This field can also show the physical interface (QFX Series).
Index	Logical interface index.
Table index	Rewrite table index.
Type	Type of classifier: DSCP , EXP (not on the QFX Series), EXP-PUSH-3 (not on the QFX Series), EXP-SWAP-PUSH-2 (not on the QFX Series), IEEE 802.1 , IPv4 precedence (not on the QFX Series), IPv6 DSCP , or Fixed .

Sample Output

`show class-of-service forwarding-table rewrite-rule mapping`

```

user@host> show class-of-service forwarding-table rewrite-rule mapping
Interface      Index  Table index  Type

```

so-5/0/0.0	10	3753	DSCP
so-0/1/0.0	11	3753	DSCP
so-0/2/0.0	12	3753	DSCP
so-0/2/1.0	13	3753	DSCP
so-0/2/2.0	14	3753	DSCP
so-0/2/3.0	15	3753	DSCP

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-table scheduler-map

IN THIS SECTION

- Syntax | 462
- Description | 462
- Options | 463
- Required Privilege Level | 463
- Output Fields | 463
- Sample Output | 464
- Release Information | 465

Syntax

```
show class-of-service forwarding-table scheduler-map
```

Description

For each physical interface, display the scheduler map information as it exists in the forwarding table.

Options

This command has no options.

Required Privilege Level

view

Output Fields

[Table 67 on page 463](#) describes the output fields for the `show class-of-service forwarding-table scheduler-map` command. Output fields are listed in the approximate order in which they appear.

Table 67: show class-of-service forwarding-table scheduler-map Output Fields

Field Name	Field Description
Interface	Name of the physical interface.
Index	Physical interface index.
Map index	Scheduler map index.
Num of queues	Number of queues defined in this scheduler map.
Entry	Number of this entry in the scheduler map.
Scheduler index	Scheduler policy index.
Forwarding-class #	Forwarding class number to which this entry is applied.
Tx rate	Configured transmit rate of the scheduler (in bps). The rate is a percentage of the total interface bandwidth, or the keyword remainder , which indicates that the scheduler receives the remaining bandwidth of the interface.

Table 67: show class-of-service forwarding-table scheduler-map Output Fields (*Continued*)

Field Name	Field Description
Max buffer delay	Amount of transmit delay (in milliseconds) or buffer size of the queue. This amount is a percentage of the total interface buffer allocation or the keyword remainder , which indicates that the buffer is sized according to what remains after other scheduler buffer allocations.
Priority	<ul style="list-style-type: none"> • high—Queue priority is high. • low—Queue priority is low.
PLP high	Drop profile index for a high packet loss priority profile.
PLP low	Drop profile index for a low packet loss priority profile.
PLP medium-high	Drop profile index for a medium-high packet loss priority profile.
PLP medium-low	Drop profile index for a medium-low packet loss priority profile.
TCP PLP high	Drop profile index for a high TCP packet loss priority profile.
TCP PLP low	Drop profile index for a low TCP packet loss priority profile.
Policy is exact	If this line appears in the output, exact rate limiting is enabled. Otherwise, no rate limiting is enabled.

Sample Output

show class-of-service forwarding-table scheduler-map

```

user@host> show class-of-service forwarding-table scheduler-map
Interface: so-5/0/0 (Index: 9, Map index: 17638, Num of queues: 2):
  Entry 0 (Scheduler index: 6090, Forwarding-class #: 0):
    Tx rate: 0 Kb (30%), Max buffer delay: 39 bytes (0%)
    Priority low
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low:8742

```

```

Policy is exact
Entry 1 (Scheduler index: 38372, Forwarding-class #: 1):
  Traffic chunk: Max = 0 bytes, Min = 0 bytes
  Tx rate: 0 Kb (40%), Max buffer delay: 68 bytes (0%)
  Priority high
  PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742

Interface: at-6/1/0 (Index: 10, Map index: 17638, Num of queues: 2):
Entry 0 (Scheduler index: 6090, Forwarding-class #: 0):
  Traffic chunk: Max = 0 bytes, Min = 0 bytes
  Tx rate: 0 Kb (30%), Max buffer delay: 39 bytes (0%)
  Priority high
  PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742
Entry 1 (Scheduler index: 38372, Forwarding-class #: 1):
  Traffic chunk: Max = 0 bytes, Min = 0 bytes
  Tx rate: 0 Kb (40%), Max buffer delay: 68 bytes (0%)
  Priority low
  PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742

```

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service forwarding-table traffic-class-map

IN THIS SECTION

- [Syntax | 466](#)
- [Description | 466](#)
- [Options | 466](#)
- [Required Privilege Level | 466](#)
- [Output Fields | 466](#)
- [Sample Output | 467](#)
- [Sample Output | 468](#)
- [Release Information | 468](#)

Syntax

```
show class-of-service forwarding-table traffic-class-map <mapping>
```

Description

Display the mapping of code point value to the traffic class map as it exists in the forwarding table.

Options

mapping—Display the mapping of interfaces to traffic class maps.

Required Privilege Level

view

Output Fields

[Table 68 on page 466](#) describes the output fields for the `show class-of-service forwarding-table traffic-class-map` command. Output fields are listed in the approximate order in which they appear.

Table 68: show class-of-service forwarding-table traffic-class-map Output Fields

Field Name	Field Description
Traffic-class-map table index	Index of the traffic class map table.
entries	Total number of entries.
Table type	Type of code points in the table: DSCP, EXP , IEEE 802.1, IEEE 802.1ad, or INET-precedence
Entry #	Entry number.
Code point	Code point value used for classification.

Table 68: show class-of-service forwarding-table traffic-class-map Output Fields (Continued)

Field Name	Field Description
Traffic-class	Traffic class to which the code point is assigned.

Table 69 on page 467 describes the output fields for the show class-of-service forwarding-table traffic-class-map mapping command. Output fields are listed in the approximate order in which they appear.

Table 69: show class-of-service forwarding-table traffic-class-map mapping Output Fields

Field Name	Field Description
Interface	Interface to which the traffic class map is assigned.
Index	Internal index of the traffic class map.
Table Index	Index of the traffic class map table.
Table type	Type of code points in the table: DSCP, EXP , IEEE 802.1, IEEE 802.1ad, or INET-precedence

Sample Output

show class-of-service forwarding-table traffic-class-map

```

user@host> show class-of-service forwarding-table traffic-class-map
Traffic-class-map table index: 44231, # entries: 6, Table type: INET-Precedence
  Entry #   Code point   Traffic-class
    0         000       real-time
    1         001       real-time
    2         010     network-control
    3         011     network-control
    4         100     best-effort
    5         101     best-effort

```

Sample Output

show class-of-service forwarding-table traffic-class-map mapping

```
user@host> show class-of-service forwarding-table traffic-class-map mapping
```

Interface	Index	Table Index	Table type
xe-4/0/0	210	44231	INET-Precedence

Release Information

Command introduced in Junos OS Release 14.2.

RELATED DOCUMENTATION

<i>traffic-class-map</i>
<i>Managing Ingress Oversubscription at the PFE</i>
<i>Configuring Traffic Class Maps to Manage Ingress Oversubscription</i>
<i>Example: Configuring Traffic Class Maps</i>
<i>show class-of-service traffic-class-map</i>

show class-of-service fragmentation-map

IN THIS SECTION

- [Syntax | 469](#)
- [Description | 469](#)
- [Options | 469](#)
- [Required Privilege Level | 469](#)
- [Output Fields | 469](#)
- [Sample Output | 470](#)
- [Release Information | 470](#)

Syntax

```
show class-of-service fragmentation-map
```

Description

For Multiservices and Services PIC link services IQ interfaces (lsq) only, display fragmentation properties for specific forwarding classes.

Options

This command has no options.

Required Privilege Level

view

Output Fields

[Table 70 on page 469](#) describes the output fields for the `show class-of-service fragmentation-map` command. Output fields are listed in the approximate order in which they appear.

Table 70: show class-of-service fragmentation-map Output Fields

Field Name	Field Description
Fragmentation map	Name of the class of service (CoS) fragmentation map.
Index	Index number of the CoS fragmentation map.
Forwarding class	Name of the associated forwarding class.
Fragmentation threshold	Maximum size of each multilink fragment.
No Fragmentation	Packets of this class are not fragmented.

Table 70: show class-of-service fragmentation-map Output Fields (Continued)

Field Name	Field Description
Multilink Class	For multilink multiclass PPP only, the multilink class number corresponding to the forwarding class.

Sample Output

show class-of-service fragmentation-map

```

user@host> show class-of-service fragmentation-map
  Fragmentation map: fragmap2, Index: 19801
    Forwarding class: fcDefault
    No Fragmentation

    Forwarding class: fcCopper
    Fragmentation threshold: 64, Multilink Class: 1

    Forwarding class: fcSilver
    Fragmentation threshold: 100, Multilink Class: 0

    Forwarding class: fcCritical
    Fragmentation threshold: 64, Multilink Class: 0

  Fragmentation map: fragmap, Index: 23147
    Forwarding class: fcDefault
    No Fragmentation

    Forwarding class: fcSilver
    Fragmentation threshold: 100

    Forwarding class: fcCritical
    Fragmentation threshold: 100

```

Release Information

Command introduced in Junos OS Release 7.5.

show class-of-service interface

IN THIS SECTION

- [Syntax | 471](#)
- [Description | 471](#)
- [Options | 471](#)
- [Required Privilege Level | 472](#)
- [Output Fields | 472](#)
- [Sample Output | 493](#)
- [Release Information | 515](#)

Syntax

```
show class-of-service interface <comprehensive | detail> <interface-name>
```

Description

Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.

NOTE: On routing platforms with dual Routing Engines, running this command on the backup Routing Engine, with or without any of the available options, is not supported and produces the following error message:

```
error: the class-of-service subsystem is not running
```

Options

- | | |
|----------------------|--|
| none | Display CoS associations for all physical and logical interfaces. |
| comprehensive | (M Series, MX Series, and T Series routers) (Optional) Display comprehensive quality-of-service (QoS) information about all physical and logical interfaces. |

detail (M Series, MX Series, and T Series routers) (Optional) Display QoS and CoS information based on the interface.

If the interface *interface-name* is a physical interface, the output includes:

- Brief QoS information about the physical interface
- Brief QoS information about the logical interface
- CoS information about the physical interface
- Brief information about filters or policers of the logical interface
- Brief CoS information about the logical interface

If the interface *interface-name* is a logical interface, the output includes:

- Brief QoS information about the logical interface
- Information about filters or policers for the logical interface
- CoS information about the logical interface

interface-name (Optional) Display class-of-service (CoS) associations for the specified interface.

none Display CoS associations for all physical and logical interfaces.

NOTE: ACX5000 routers do not support classification on logical interfaces and therefore do not show CoS associations for logical interfaces with this command.

Required Privilege Level

view

Output Fields

[Table 71 on page 473](#) describes the output fields for the `show class-of-service interface` command. Output fields are listed in the approximate order in which they appear.

Table 71: show class-of-service interface Output Fields

Field Name	Field Description
Physical interface	Name of a physical interface.
Index	<p>Index of this interface or the internal index of this object.</p> <p>(Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles and dynamic scheduler maps are larger for enhanced subscriber management than they are for legacy subscriber management.</p>
Dedicated Queues	<p>Status of dedicated queues configured on an interface. Supported only on Trio MPC/MIC interfaces on MX Series routers.</p> <p>(Enhanced subscriber management for MX-Series routers) This field is not displayed for enhanced subscriber management.</p>
Maximum usable queues	Number of queues you can configure on the interface.
Maximum usable queues	Maximum number of queues you can use.
Total non-default queues created	<p>Number of queues created in addition to the default queues. Supported only on Trio MPC/MIC interfaces on MX Series routers.</p> <p>(Enhanced subscriber management for MX Series routers) This field is not displayed for enhanced subscriber management.</p>
Rewrite Input IEEE Code-point	(QFX3500 switches only) IEEE 802.1p code point (priority) rewrite value. Incoming traffic from the Fibre Channel (FC) SAN is classified into the forwarding class specified in the native FC interface (NP_Port) fixed classifier and uses the priority specified as the IEEE 802.1p rewrite value.
Shaping rate	Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not on both. Therefore, the Shaping rate field is displayed for either the physical interface or the logical interface.

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Scheduler map	<p>Name of the output scheduler map associated with this interface.</p> <p>(Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, SMAP-1_UID1002) instead of with a subscriber interface.</p>
Scheduler map forwarding class sets	(QFX Series only) Name of the output fabric scheduler map associated with a QFabric system Interconnect device interface.
Input shaping rate	For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.
Input scheduler map	For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.
Chassis scheduler map	Name of the scheduler map associated with the packet forwarding component queues.
Rewrite	Name and type of the rewrite rules associated with this interface.
Traffic-control-profile	<p>Name of the associated traffic control profile.</p> <p>(Enhanced subscriber management for MX Series routers) The name of the dynamic traffic control profile object is associated with a generated UID (for example, TC_PROF_100_199_SERIES_UID1006) instead of with a subscriber interface.</p>
Classifier	Name and type of classifiers associated with this interface.
Forwarding-class-map	Name of the forwarding map associated with this interface.
Congestion-notification	(QFX Series and EX4600 switches only) Congestion notification state, enabled or disabled.

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Logical interface	Name of a logical interface.
Object	Category of an object: Classifier, Fragmentation-map (for LSQ interfaces only), Scheduler-map, Rewrite, Translation Table (for IQE PICs only), or traffic-class-map (for T4000 routers with Type 5 FPCs).
Name	Name of an object.
Type	Type of an object: dscp, dscp-ipv6, exp, ieee-802.1, ip, inet-precedence, or ieee-802.1ad (for traffic class map on T4000 routers with Type 5 FPCs)..
Link-level type	Encapsulation on the physical interface.
MTU	MTU size on the physical interface.
Speed	Speed at which the interface is running.
Loopback	Whether loopback is enabled and the type of loopback.
Source filtering	Whether source filtering is enabled or disabled.
Flow control	Whether flow control is enabled or disabled.
Auto-negotiation	(Gigabit Ethernet interfaces) Whether autonegotiation is enabled or disabled.
Remote-fault	(Gigabit Ethernet interfaces) Remote fault status. <ul style="list-style-type: none"> • Online—Autonegotiation is manually configured as online. • Offline—Autonegotiation is manually configured as offline.

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Device flags	<p>The Device flags field provides information about the physical device and displays one or more of the following values:</p> <ul style="list-style-type: none"> • Down—Device has been administratively disabled. • Hear-Own-Xmit—Device receives its own transmissions. • Link-Layer-Down—The link-layer protocol has failed to connect with the remote endpoint. • Loopback—Device is in physical loopback. • Loop-Detected—The link layer has received frames that it sent, thereby detecting a physical loopback. • No-Carrier—On media that support carrier recognition, no carrier is currently detected. • No-Multicast—Device does not support multicast traffic. • Present—Device is physically present and recognized. • Promiscuous—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media. • Quench—Transmission on the device is quenched because the output buffer is overflowing. • Recv-All-Multicasts—Device is in multicast promiscuous mode and therefore provides no multicast filtering. • Running—Device is active and enabled.

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Interface flags	<p>The Interface flags field provides information about the physical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> • Admin-Test—Interface is in test mode and some sanity checking, such as loop detection, is disabled. • Disabled—Interface is administratively disabled. • Down—A hardware failure has occurred. • Hardware-Down—Interface is nonfunctional or incorrectly connected. • Link-Layer-Down—Interface keepalives have indicated that the link is incomplete. • No-Multicast—Interface does not support multicast traffic. • No-receive No-transmit—Passive monitor mode is configured on the interface. • Point-To-Point—Interface is point-to-point. • Pop all MPLS labels from packets of depth—MPLS labels are removed as packets arrive on an interface that has the pop-all-labels statement configured. The depth value can be one of the following: <ul style="list-style-type: none"> • 1—Takes effect for incoming packets with one label only. • 2—Takes effect for incoming packets with two labels only. • [1 2]—Takes effect for incoming packets with either one or two labels. • Promiscuous—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses. • Recv-All-Multicasts—Interface is in multicast promiscuous mode and provides no multicast filtering. • SNMP-Traps—SNMP trap notifications are enabled. • Up—Interface is enabled and operational.

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Flags	<p>The Logical interface flags field provides information about the logical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> • ACFC Encapsulation—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer). • Device-down—Device has been administratively disabled. • Disabled—Interface is administratively disabled. • Down—A hardware failure has occurred. • Clear-DF-Bit—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit. • Hardware-Down—Interface protocol initialization failed to complete successfully. • PFC—Protocol field compression is enabled for the PPP session. • Point-To-Point—Interface is point-to-point. • SNMP-Traps—SNMP trap notifications are enabled. • Up—Interface is enabled and operational.
Encapsulation	Encapsulation on the logical interface.
Admin	Administrative state of the interface (Up or Down)
Link	Status of physical link (Up or Down).
Proto	Protocol configured on the interface.
Input Filter	Names of any firewall filters to be evaluated when packets are received on the interface, including any filters attached through activation of dynamic service.
Output Filter	Names of any firewall filters to be evaluated when packets are transmitted on the interface, including any filters attached through activation of dynamic service.

Table 71: show class-of-service interface Output Fields (*Continued*)

Field Name	Field Description
Link flags	<p>Provides information about the physical link and displays one or more of the following values:</p> <ul style="list-style-type: none"> • ACFC—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option. • Give-Up—Link protocol does not continue connection attempts after repeated failures. • Loose-LCP—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational. • Loose-LMI—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational. • Loose-NCP—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational. • Keepalives—Link protocol keepalives are enabled. • No-Keepalives—Link protocol keepalives are disabled. • PFC—Protocol field compression is configured. The PPP session negotiates the PFC option.
Hold-times	Current interface hold-time up and hold-time down, in milliseconds.
CoS queues	Number of CoS queues configured.
Last flapped	Date, time, and how long ago the interface went from down to up. The format is Last flapped: <i>year-month-day hour:minute:second:timezone (hour:minute:second ago)</i> . For example, Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago).

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Statistics last cleared	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> • Input bytes—Number of bytes received on the interface. • Output bytes—Number of bytes transmitted on the interface. • Input packets—Number of packets received on the interface. • Output packets—Number of packets transmitted on the interface.
Exclude Overhead Bytes	<p>Exclude the counting of overhead bytes from aggregate queue statistics.</p> <ul style="list-style-type: none"> • Disabled—Default configuration. Includes the counting of overhead bytes in aggregate queue statistics. • Enabled—Excludes the counting of overhead bytes from aggregate queue statistics for just the physical interface. • Enabled for hierarchy—Excludes the counting of overhead bytes from aggregate queue statistics for the physical interface as well as all child interfaces, including logical interfaces and interface sets.
IPv6 transit statistics	<p>Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.</p>

Table 71: show class-of-service interface Output Fields *(Continued)*

Field Name	Field Description
Input errors	<p>Input errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> • Errors—Sum of the incoming frame terminations and FCS errors. • Drops—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. • Framing errors—Number of packets received with an invalid frame checksum (FCS). • Runts—Number of frames received that are smaller than the runt threshold. • Giants—Number of frames received that are larger than the giant threshold. • Bucket Drops—Drops resulting from the traffic load exceeding the interface transmit or receive leaky bucket configuration. • Policed discards—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle. • L3 incompletes—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. Layer 3 incomplete errors can be ignored by configuring the ignore-l3-incompletes statement. • L2 channel errors—Number of times the software did not find a valid logical interface for an incoming frame. • L2 mismatch timeouts—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable. • HS link CRC errors—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces. • HS link FIFO overflows—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.

Table 71: show class-of-service interface Output Fields (*Continued*)

Field Name	Field Description
Output errors	<p>Output errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> Carrier transitions—Number of times the interface has gone from down to up. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning. Errors—Sum of the outgoing frame terminations and FCS errors. Drops—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the Drops field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> Aged packets—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware. HS link FIFO underflows—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces. MTU errors—Number of packets whose size exceeds the MTU of the interface.
Egress queues	Total number of egress Maximum usable queues on the specified interface.
Queue counters	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> Queued packets—Number of queued packets. Transmitted packets—Number of transmitted packets. Dropped packets—Number of packets dropped by the ASIC's RED mechanism. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the Dropped packets field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
SONET alarms SONET defects	(SONET) SONET media-specific alarms and defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: SONET PHY, SONET section, SONET line, and SONET path.
SONET PHY	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. A state other than OK indicates a problem. <p>The SONET PHY field has the following subfields:</p> <ul style="list-style-type: none"> • PLL Lock—Phase-locked loop • PHY Light—Loss of optical signal

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
SONET section	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. A state other than OK indicates a problem. <p>The SONET section field has the following subfields:</p> <ul style="list-style-type: none"> • BIP-B1—Bit interleaved parity for SONET section overhead • SEF—Severely errored framing • LOS—Loss of signal • LOF—Loss of frame • ES-S—Errored seconds (section) • SES-S—Severely errored seconds (section) • SEFS-S—Severely errored framing seconds (section)

Table 71: show class-of-service interface Output Fields *(Continued)*

Field Name	Field Description
SONET line	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. A state other than OK indicates a problem. <p>The SONET line field has the following subfields:</p> <ul style="list-style-type: none"> • BIP-B2—Bit interleaved parity for SONET line overhead • REI-L—Remote error indication (near-end line) • RDI-L—Remote defect indication (near-end line) • AIS-L—Alarm indication signal (near-end line) • BERR-SF—Bit error rate fault (signal failure) • BERR-SD—Bit error rate defect (signal degradation) • ES-L—Errored seconds (near-end line) • SES-L—Severely errored seconds (near-end line) • UAS-L—Unavailable seconds (near-end line) • ES-LFE—Errored seconds (far-end line) • SES-LFE—Severely errored seconds (far-end line) • UAS-LFE—Unavailable seconds (far-end line)

Table 71: show class-of-service interface Output Fields *(Continued)*

Field Name	Field Description
SONET path	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> • Seconds—Number of seconds the defect has been active. • Count—Number of times that the defect has gone from inactive to active. • State—State of the error. A state other than OK indicates a problem. <p>The SONET path field has the following subfields:</p> <ul style="list-style-type: none"> • BIP-B3—Bit interleaved parity for SONET section overhead • REI-P—Remote error indication • LOP-P—Loss of pointer (path) • AIS-P—Path alarm indication signal • RDI-P—Path remote defect indication • UNEQ-P—Path unequipped • PLM-P—Path payload (signal) label mismatch • ES-P—Errored seconds (near-end STS path) • SES-P—Severely errored seconds (near-end STS path) • UAS-P—Unavailable seconds (near-end STS path) • ES-PFE—Errored seconds (far-end STS path) • SES-PFE—Severely errored seconds (far-end STS path) • UAS-PFE—Unavailable seconds (far-end STS path)

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Received SONET overhead Transmitted SONET overhead	<p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> • C2—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P. • F1—Section user channel byte. This byte is set aside for the purposes of users. • K1 and K2—These bytes are allocated for APS signaling for the protection of the multiplex section. • J0—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter. • S1—Synchronization status. The S1 byte is located in the first STS-1 number of an STS-<i>N</i> signal. • Z3 and Z4—Allocated for future use.
Received path trace Transmitted path trace	<p>SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>
HDLC configuration	<p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> • Policing bucket—Configured state of the receiving policer. • Shaping bucket—Configured state of the transmitting shaper. • Giant threshold—Giant threshold programmed into the hardware. • Runt threshold—Runt threshold programmed into the hardware.
Packet Forwarding Engine configuration	<p>Information about the configuration of the Packet Forwarding Engine:</p> <ul style="list-style-type: none"> • Destination slot—FPC slot number. • PLP byte—Packet Level Protocol byte.

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
CoS information	<p>Information about the CoS queue for the physical interface.</p> <ul style="list-style-type: none"> • CoS transmit queue—Queue number and its associated user-configured forwarding class name. • Bandwidth %—Percentage of bandwidth allocated to the queue. • Bandwidth bps—Bandwidth allocated to the queue (in bps). • Buffer %—Percentage of buffer space allocated to the queue. • Buffer usec—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time. • Priority—Queue priority: low or high. • Limit—Displayed if rate limiting is configured for the queue. Possible values are none and exact. If exact is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If none is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.
Forwarding classes	Total number of forwarding classes supported on the specified interface.
Egress queues	Total number of egress Maximum usable queues on the specified interface.
Queue	Queue number.
Forwarding classes	Forwarding class name.
Queued Packets	Number of packets queued to this queue.
Queued Bytes	Number of bytes queued to this queue. The byte counts vary by PIC type.

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Transmitted Packets	Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the Packet Forwarding Engine Chassis Queues field) shows the prefragmentation values.
Transmitted Bytes	Number of bytes transmitted by this queue. The byte counts vary by PIC type.
Tail-dropped packets	Number of packets dropped because of tail drop.
RED-dropped packets	<p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> • (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> • Low, non-TCP—Number of low-loss priority non-TCP packets dropped because of RED. • Low, TCP—Number of low-loss priority TCP packets dropped because of RED. • High, non-TCP—Number of high-loss priority non-TCP packets dropped because of RED. • High, TCP—Number of high-loss priority TCP packets dropped because of RED. • (MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> • Low—Number of low-loss priority packets dropped because of RED. • Medium-low—Number of medium-low loss priority packets dropped because of RED. • Medium-high—Number of medium-high loss priority packets dropped because of RED. • High—Number of high-loss priority packets dropped because of RED. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
RED-dropped bytes	<p>Number of bytes dropped because of RED. The byte counts vary by PIC type.</p> <ul style="list-style-type: none"> • (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> • Low, non-TCP—Number of low-loss priority non-TCP bytes dropped because of RED. • Low, TCP—Number of low-loss priority TCP bytes dropped because of RED. • High, non-TCP—Number of high-loss priority non-TCP bytes dropped because of RED. • High, TCP—Number of high-loss priority TCP bytes dropped because of RED. <p>NOTE: Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
Transmit rate	Configured transmit rate of the scheduler. The rate is a percentage of the total interface bandwidth.
Rate Limit	<p>Rate limiting configuration of the queue. Possible values are :</p> <ul style="list-style-type: none"> • None—No rate limit. • exact—Queue transmits at the configured rate.
Buffer size	Delay buffer size in the queue.
Priority	Scheduling priority configured as low or high.
Excess Priority	Priority of the excess bandwidth traffic on a scheduler: low, medium-low, medium-high, high, or none.

Table 71: show class-of-service interface Output Fields (Continued)

Field Name	Field Description
Drop profiles	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> • Loss priority—Packet loss priority for drop profile assignment. • Protocol—Transport protocol for drop profile assignment. • Index—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles. • Name—Name of the drop profile. • Type—Type of the drop profile: discrete or interpolated. • Fill Level—Percentage fullness of a queue. • Drop probability—Drop probability at this fill level.
Excess Priority	Priority of the excess bandwidth traffic on a scheduler.
Drop profiles	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> • Loss priority—Packet loss priority for drop profile assignment. • Protocol—Transport protocol for drop profile assignment. • Index—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles. • Name—Name of the drop profile. • Type—Type of the drop profile: discrete or interpolated. • Fill Level—Percentage fullness of a queue. • Drop probability—Drop probability at this fill level.

Table 71: show class-of-service interface Output Fields (*Continued*)

Field Name	Field Description
Adjustment information	<p>Display the assignment of shaping-rate adjustments on a scheduler node or queue.</p> <ul style="list-style-type: none"> Adjusting application—Application that is performing the shaping-rate adjustment. <ul style="list-style-type: none"> The adjusting application can appear as ancp LS-0, which is the Junos OS Access Node Control Profile process (ancpd) that performs shaping-rate adjustments on schedule nodes. The adjusting application can appear as DHCP, which adjusts the shaping-rate and overhead-accounting class-of-service attributes based on DSL Forum VSA conveyed in DHCP option 82, suboption 9 (Vendor Specific Information). The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode). The adjusting application can also appear as pppoe, which adjusts the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network based on access line parameters in Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101]. This feature is supported on MPC/MIC interfaces on MX Series routers. The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode). Adjustment type—Type of adjustment: absolute or delta. Configured shaping rate—Shaping rate configured for the scheduler node or queue. Adjustment value—Value of adjusted shaping rate. Adjustment target—Level of shaping-rate adjustment performed: node or queue. Adjustment overhead-accounting mode—Configured shaping mode: frame or cell. Adjustment overhead bytes—Number of bytes that the ANCP agent adds to or subtracts from the actual downstream frame overhead before reporting the adjusted values to CoS. Adjustment target—Level of shaping-rate adjustment performed: node or queue. Adjustment multicast index—

Sample Output

show class-of-service interface (Physical)

```
user@host> show class-of-service interface so-0/2/3
Physical interface: so-0/2/3, Index: 135
Maximum usable queues: 8, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000

```

Object	Name	Type	Index
Scheduler-map	<default>		27
Rewrite	exp-default	exp	21
Classifier	exp-default	exp	5
Classifier	ipprec-compatibility	ip	8
Forwarding-class-map	exp-default	exp	5

show class-of-service interface (Logical)

```
user@host> show class-of-service interface so-0/2/3.0
Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000

```

Object	Name	Type	Index
Scheduler-map	<default>		27
Rewrite	exp-default	exp	21
Classifier	exp-default	exp	5
Classifier	ipprec-compatibility	ip	8
Forwarding-class-map	exp-default	exp	5

show class-of-service interface (Gigabit Ethernet)

```
user@host> show class-of-service interface ge-6/2/0
Physical interface: ge-6/2/0, Index: 175
Maximum usable queues: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
```

```
Input scheduler map: <default>, Index: 3
Chassis scheduler map: <default-chassis>, Index: 4
```

show class-of-service interface (ANCP)

```
user@host> show class-of-service interface pp0.1073741842
Logical interface: pp0.1073741842, Index: 341
```

Object	Name	Type	Index
Traffic-control-profile	TCP-CVLAN	Output	12408
Classifier	dscp-ipv6-compatibility	dscp-ipv6	9
Classifier	ipprec-compatibility	ip	13

```

Adjusting application: ancp LS-0
Adjustment type: absolute
Configured shaping rate: 4000000
Adjustment value: 11228000
Adjustment overhead-accounting mode: Frame Mode
Adjustment overhead bytes: 50
Adjustment target: node
```

show class-of-service interface (PPPoE Interface)

```
user@host> show class-of-service interface pp0.1
Logical interface: pp0.1, Index: 85
```

Object	Name	Type	Index
Traffic-control-profile	tcp-pppoe.o.pp0.1	Output	2726446535
Classifier	ipprec-compatibility	ip	13

```

Adjusting application: PPPoE
Adjustment type: absolute
Adjustment value: 5000000
Adjustment overhead-accounting mode: cell
Adjustment target: node
```

show class-of-service interface (DHCP Interface)

```
user@host> show class-of-service interface demux0.1
Logical interface: pp0.1, Index: 85
```

Object	Name	Type	Index
Traffic-control-profile	tcp-dhcp.o.demux0.1	Output	2726446535
Classifier	ipprec-compatibility	ip	13

Adjusting application: DHCP
 Adjustment type: absolute
 Adjustment value: 5000000
 Adjustment overhead-accounting mode: cell
 Adjustment target: node

show class-of-service interface (T4000 Routers with Type 5 FPCs)

```

user@host> show class-of-service interface xe-4/0/0
Physical interface: xe-4/0/0, Index: 153
  Maximum usable queues: 8, Queues in use: 4
  Shaping rate: 5000000000 bps
  Scheduler map: <default>, Index: 2
  Congestion-notification: Disabled

  Logical interface: xe-4/0/0.0, Index: 77
    Object      Name              Type      Index
    Classifier  ipprec-compatibility ip         13
  
```

show class-of-service interface detail

```

user@host> show class-of-service interface ge-0/3/0 detail

Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, Loopback: Disabled, Source filtering:
  Disabled, Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000

Physical interface: ge-0/3/0, Index: 138
  Maximum usable queues: 4, Queues in use: 5
  Shaping rate: 50000 bps
  Scheduler map: interface-scheduler-map, Index: 58414
  Input shaping rate: 10000 bps
  Input scheduler map: scheduler-map, Index: 15103
  Chassis scheduler map: <default-chassis>, Index: 4
  
```

Congestion-notification: Disabled

Logical interface ge-0/3/0.0

Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.1] Encapsulation: ENET2

inet

mpls

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet		
			mpls		

Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up	inet		
			mpls		

Logical interface: ge-0/3/0.0, Index: 68

Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	33
Classifier	exp-default	exp	10
Classifier	ipprec-compatibility	ip	13

Logical interface ge-0/3/0.1

Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.2] Encapsulation: ENET2

inet

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.1	up	up	inet		

Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.1	up	up	inet		

Logical interface: ge-0/3/0.1, Index: 69

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

show class-of-service interface comprehensive

user@host> **show class-of-service interface ge-0/3/0 comprehensive**

Physical interface: ge-0/3/0, Enabled, Physical link is Up

Interface index: 138, SNMP ifIndex: 601, Generation: 141

Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, BPDU Error: None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow control: Enabled,

Auto-negotiation: Enabled, Remote fault: Online

Device flags : Present Running

```

Interface flags: SNMP-Traps Internal: 0x4000
CoS queues      : 4 supported, 4 maximum usable queues
Schedulers      : 256
Hold-times      : Up 0 ms, Down 0 ms
Current address: 00:14:f6:f4:b4:5d, Hardware address: 00:14:f6:f4:b4:5d
Last flapped    : 2010-09-07 06:35:22 PDT (15:14:42 ago)
Statistics last cleared: Never  Exclude Overhead Bytes: Disabled
Traffic statistics:
  Input bytes   :                0                0 bps
  Output bytes  :                0                0 bps
  Input packets :                0                0 pps
  Output packets:                0                0 pps
IPv6 total statistics:
  Input bytes   :                0
  Output bytes  :                0
  Input packets :                0
  Output packets:                0
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes   :                0                0 bps
  Input packets :                0                0 pps
  Drop bytes    :                0                0 bps
  Drop packets  :                0                0 pps
Label-switched interface (LSI) traffic statistics:
  Input bytes   :                0                0 bps
  Input packets :                0                0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3 incompletes: 0, L2
channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0, Resource errors: 0
Output errors:
  Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0, FIFO errors: 0,
HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets
  0 af3               0               0                   0
  1 af2               0               0                   0
  2 ef2               0               0                   0
  3 ef1               0               0                   0
Egress queues: 4 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets  Dropped packets
  0 af3               0               0                   0
  1 af2               0               0                   0
  2 ef2               0               0                   0
  3 ef1               0               0                   0

```

Active alarms : None

Active defects : None

MAC statistics:	Receive	Transmit
Total octets	0	0
Total packets	0	0
Unicast packets	0	0
Broadcast packets	0	0
Multicast packets	0	0
CRC/Align errors	0	0
FIFO errors	0	0
MAC control frames	0	0
MAC pause frames	0	0
Oversized frames	0	
Jabber frames	0	
Fragment frames	0	
VLAN tagged frames	0	
Code violations	0	

Filter statistics:		
Input packet count	0	
Input packet rejects	0	
Input DA rejects	0	
Input SA rejects	0	
Output packet count		0
Output packet pad count		0
Output packet error count		0

CAM destination filters: 0, CAM source filters: 0

Autonegotiation information:

Negotiation status: Complete

Link partner:

Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault: OK

Local resolution:

Flow control: Symmetric, Remote fault: Link OK

Packet Forwarding Engine configuration:

Destination slot: 0

CoS information:

Direction : Output

CoS transmit queue		Bandwidth		Buffer	Priority	Limit
	%	bps	%	usec		
2 ef2	39	19500	0	120	high	none

Direction : Input

CoS transmit queue		Bandwidth		Buffer	Priority	Limit
	%	bps	%	usec		
0 af3	30	3000	45	0	low	none

Physical interface: ge-0/3/0, Enabled, Physical link is Up

Interface index: 138, SNMP ifIndex: 601

Forwarding classes: 16 supported, 5 in use

Ingress queues: 4 supported, 5 in use

Queue: 0, Forwarding classes: af3

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Tail-dropped packets : Not Available

RED-dropped packets	:	0	0 pps
---------------------	---	---	-------

RED-dropped bytes	:	0	0 bps
-------------------	---	---	-------

Queue: 1, Forwarding classes: af2

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Tail-dropped packets : Not Available

RED-dropped packets	:	0	0 pps
---------------------	---	---	-------

RED-dropped bytes	:	0	0 bps
-------------------	---	---	-------

Queue: 2, Forwarding classes: ef2

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Tail-dropped packets : Not Available

RED-dropped packets	:	0	0 pps
---------------------	---	---	-------

RED-dropped bytes	:	0	0 bps
-------------------	---	---	-------

Queue: 3, Forwarding classes: ef1

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Tail-dropped packets : Not Available

```

    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
Forwarding classes: 16 supported, 5 in use
Egress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets           :          0          0 pps
    Bytes             :          0          0 bps
  Transmitted:
    Packets           :          0          0 pps
    Bytes             :          0          0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets :          0          0 pps
    RL-dropped bytes   :          0          0 bps
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets           :          0          0 pps
    Bytes             :          0          0 bps
  Transmitted:
    Packets           :          0          0 pps
    Bytes             :          0          0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets :          0          0 pps
    RL-dropped bytes   :          0          0 bps
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets           :          0          0 pps
    Bytes             :          0          0 bps
  Transmitted:
    Packets           :          0          0 pps
    Bytes             :          0          0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets :          0          0 pps
    RL-dropped bytes   :          0          0 bps
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets           :          0          0 pps

```

```

    Bytes           :           0           0 bps
Transmitted:
    Packets         :           0           0 pps
    Bytes           :           0           0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets :           0           0 pps
    RL-dropped bytes  :           0           0 bps
    RED-dropped packets :           0           0 pps
    RED-dropped bytes :           0           0 bps

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets         :           0           0 pps
    Bytes           :           0           0 bps
  Transmitted:
    Packets         :           0           0 pps
    Bytes           :           0           0 bps
    Tail-dropped packets :           0           0 pps
    RED-dropped packets : Not Available
    RED-dropped bytes  : Not Available
Queue: 1, Forwarding classes: af2
  Queued:
    Packets         :           0           0 pps
    Bytes           :           0           0 bps
  Transmitted:
    Packets         :           0           0 pps
    Bytes           :           0           0 bps
    Tail-dropped packets :           0           0 pps
    RED-dropped packets : Not Available
    RED-dropped bytes  : Not Available
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets         :           0           0 pps
    Bytes           :           0           0 bps
  Transmitted:
    Packets         :           0           0 pps
    Bytes           :           0           0 bps
    Tail-dropped packets :           0           0 pps
    RED-dropped packets : Not Available
    RED-dropped bytes  : Not Available
Queue: 3, Forwarding classes: ef1

```

```

Queued:
  Packets      :          108546          0 pps
  Bytes       :          12754752        376 bps
Transmitted:
  Packets      :          108546          0 pps
  Bytes       :          12754752        376 bps
  Tail-dropped packets :          0          0 pps
  RED-dropped packets : Not Available
  RED-dropped bytes  : Not Available

```

Physical interface: ge-0/3/0, Index: 138
 Maximum usable queues: 4, Queues in use: 5
 Shaping rate: 50000 bps

Scheduler map: interface-scheduler-map, Index: 58414

Scheduler: ef2, Forwarding class: ef2, Index: 39155
 Transmit rate: 39 percent, Rate Limit: none, Buffer size: 120 us, Buffer Limit: none,

Priority: high

Excess Priority: unspecified

Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Input shaping rate: 10000 bps

Input scheduler map: scheduler-map

Scheduler map: scheduler-map, Index: 15103

```

Scheduler: af3, Forwarding class: af3, Index: 35058
  Transmit rate: 30 percent, Rate Limit: none, Buffer size: 45 percent, Buffer Limit: none,
Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       40582  green
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any      18928  yellow
Drop profile: green, Type: discrete, Index: 40582
  Fill level  Drop probability
    50         0
    100        100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100        100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100        100
Drop profile: yellow, Type: discrete, Index: 18928
  Fill level  Drop probability
    50         0
    100        100
  Chassis scheduler map: < default-drop-profile>
Scheduler map: < default-drop-profile>, Index: 4

```

```

Scheduler: < default-drop-profile>, Forwarding class: af3, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer Limit: none,
Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100        100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100        100

```

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Scheduler: < default-drop-profile>, Forwarding class: af2, Index: 25

Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer Limit: none,

Priority: low

Excess Priority: low

Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

Scheduler: < default-drop-profile>, Forwarding class: ef2, Index: 25

Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer Limit: none,

Priority: low

Excess Priority: low

Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

Fill level	Drop probability
100	100

```

Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
      100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
      100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
      100          100

Scheduler: < default-drop-profile>, Forwarding class: ef1, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer Limit: none,
Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol    Index    Name
    Low           any         1        < default-drop-profile>
    Medium low    any         1        < default-drop-profile>
    Medium high   any         1        < default-drop-profile>
    High          any         1        < default-drop-profile>
Drop profile: , Type: discrete, Index: 1
  Fill level    Drop probability
      100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
      100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
      100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
      100          100
  Congestion-notification: Disabled
Forwarding class                                ID      Queue  Restricted queue  Fabric priority
Policing priority
  af3                                           0       0          0             low
normal
  af2                                           1       1          1             low
normal
  ef2                                           2       2          2             high
normal
  ef1                                           3       3          3             high
normal

```

```

af1          4      4      0      low
normal

```

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152) (Generation 159)

Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.1] Encapsulation: ENET2

Traffic statistics:

```

Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:     0

```

Local statistics:

```

Input bytes :      0
Output bytes :      0
Input packets:      0
Output packets:     0

```

Transit statistics:

```

Input bytes :      0      0 bps
Output bytes :      0      0 bps
Input packets:      0      0 pps
Output packets:     0      0 pps

```

Protocol inet, MTU: 1500, Generation: 172, Route table: 0

Flags: Sendbcast-pkt-to-re

Input Filters: filter-in-ge-0/3/0.0-i,

Policer: Input: p1-ge-0/3/0.0-inet-i

Protocol mpls, MTU: 1488, Maximum labels: 3, Generation: 173, Route table: 0

Flags: Is-Primary

Output Filters: exp-filter,,,,,

Logical interface ge-1/2/0.0 (Index 347) (SNMP ifIndex 638) (Generation 156)

Forwarding class	ID	Queue	Restricted queue	Fabric priority	Policing priority	SPU priority
best-effort	0	0	0	low	normal	low

Aggregate Forwarding-class statistics per forwarding-class

Aggregate Forwarding-class statistics:

Forwarding-class statistics:

Forwarding-class best-effort statistics:

```

Input unicast bytes:  0
Output unicast bytes: 0
Input unicast packets: 0
Output unicast packets: 0

```

```

Input multicast bytes: 0

```



```
Output multicast bytes: 0
Input multicast packets: 0
Output multicast packets: 0
```

Forwarding-class expedited-forwarding statistics:

```
Input unicast bytes: 0
Output unicast bytes: 0
Input unicast packets: 0
Output unicast packets: 0
```

```
Input multicast bytes: 0
Output multicast bytes: 0
Input multicast packets: 0
Output multicast packets: 0
```

IPv4 protocol forwarding-class statistics:

Forwarding-class statistics:

Forwarding-class best-effort statistics:

```
Input unicast bytes: 0
Output unicast bytes: 0
Input unicast packets: 0
Output unicast packets: 0
```

```
Input multicast bytes: 0
Output multicast bytes: 0
Input multicast packets: 0
Output multicast packets: 0
```

Forwarding-class expedited-forwarding statistics:

```
Input unicast bytes: 0
Output unicast bytes: 0
Input unicast packets: 0
Output unicast packets: 0
```

```
Input multicast bytes: 0
Output multicast bytes: 0
Input multicast packets: 0
Output multicast packets: 0
```

IPv6 protocol forwarding-class statistics:

Forwarding-class statistics:

Forwarding-class best-effort statistics:

Input unicast bytes: 0
Output unicast bytes: 0
Input unicast packets: 0
Output unicast packets: 0

Input multicast bytes: 0
Output multicast bytes: 0
Input multicast packets: 0
Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:

Input unicast bytes: 0
Output unicast bytes: 0
Input unicast packets: 0
Output unicast packets: 0

Input multicast bytes: 0
Output multicast bytes: 0
Input multicast packets: 0
Output multicast packets: 0

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152)
Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.1] Encapsulation: ENET2
Input packets : 0
Output packets: 0

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet	filter-in-ge-0/3/0.0-i	
			mpls		exp-filter
Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up			
			inet	p1-ge-0/3/0.0-inet-i	
			mpls		

Filter: filter-in-ge-0/3/0.0-i

Counters:

Name	Bytes	Packets
count-filter-in-ge-0/3/0.0-i	0	0

Filter: exp-filter

Counters:

Name	Bytes	Packets
------	-------	---------

```

count-exp-seven-match          0          0
count-exp-zero-match           0          0
Policers:
Name                            Packets
p1-ge-0/3/0.0-inet-i          0

```

Logical interface: ge-0/3/0.0, Index: 68

Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	33

Rewrite rule: exp-default, Code point type: exp, Index: 33

Forwarding class	Loss priority	Code point
af3	low	000
af3	high	001
af2	low	010
af2	high	011
ef2	low	100
ef2	high	101
ef1	low	110
ef1	high	111

Object	Name	Type	Index
Classifier	exp-default	exp	10

Classifier: exp-default, Code point type: exp, Index: 10

Code point	Forwarding class	Loss priority
000	af3	low
001	af3	high
010	af2	low
011	af2	high
100	ef2	low
101	ef2	high
110	ef1	low
111	ef1	high

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13

Code point	Forwarding class	Loss priority
000	af3	low
001	af3	high
010	af3	low
011	af3	high

100	af3			low	
101	af3			high	
110	ef1			low	
111	ef1			high	
Forwarding class		ID	Queue	Restricted queue	Fabric priority
Policing priority					
af3		0	0	0	low
normal					
af2		1	1	1	low
normal					
ef2		2	2	2	high
normal					
ef1		3	3	3	high
normal					
af1		4	4	0	low
normal					

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154) (Generation 160)

Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.2] Encapsulation: ENET2

Traffic statistics:

Input bytes : 0

Output bytes : 0

Input packets: 0

Output packets: 0

Local statistics:

Input bytes : 0

Output bytes : 0

Input packets: 0

Output packets: 0

Transit statistics:

Input bytes : 0 0 bps

Output bytes : 0 0 bps

Input packets: 0 0 pps

Output packets: 0 0 pps

Protocol inet, MTU: 1500, Generation: 174, Route table: 0

Flags: Sendbcast-pkt-to-re

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154)

Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.2] Encapsulation: ENET2

Input packets : 0

Output packets: 0

```

Interface      Admin Link Proto Input Filter      Output Filter
ge-0/3/0.1    up   up   mpls
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/3/0.1    up   up
               mpls

Logical interface: ge-0/3/0.1, Index: 69
  Object      Name      Type      Index
  Classifier  ipprec-compatibility  ip      13

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13
  Code point  Forwarding class      Loss priority
  000         af3                   low
  001         af3                   high
  010         af3                   low
  011         af3                   high
  100         af3                   low
  101         af3                   high
  110         ef1                   low
  111         ef1                   high

Forwarding class      ID      Queue  Restricted queue  Fabric priority
Policing priority
  af3                  0       0       0                low
normal
  af2                  1       1       1                low
normal
  ef2                  2       2       2                high
normal
  ef1                  3       3       3                high
normal
  af1                  4       4       0                low
normal

```

show class-of-service interface (ACX Series Routers)

```

user@host-g11# show class-of-service interface
Physical interface: at-0/0/0, Index: 130
Maximum usable queues: 4, Queues in use: 4
  Scheduler map: <default>, Index: 2

```

Congestion-notification: Disabled

Logical interface: at-0/0/0.0, Index: 69

Logical interface: at-0/0/0.32767, Index: 70

Physical interface: at-0/0/1, Index: 133

Maximum usable queues: 4, Queues in use: 4

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Logical interface: at-0/0/1.0, Index: 71

Logical interface: at-0/0/1.32767, Index: 72

Physical interface: ge-0/1/0, Index: 146

Maximum usable queues: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	dscp-default	dscp	31
Classifier	d1	dscp	11331
Classifier	ci	ieee8021p	583

Logical interface: ge-0/1/0.0, Index: 73

Object	Name	Type	Index
Rewrite	custom-exp	exp (mpls-any)	46413

Logical interface: ge-0/1/0.1, Index: 74

Logical interface: ge-0/1/0.32767, Index: 75

Physical interface: ge-0/1/1, Index: 147

Maximum usable queues: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/1.0, Index: 76

Physical interface: ge-0/1/2, Index: 148

Maximum usable queues: 8, Queues in use: 5

```

Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Rewrite     ri        ieee8021p (outer)  35392
Classifier   ci        ieee8021p          583

Physical interface: ge-0/1/3, Index: 149
Maximum usable queues: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier   ipprec-compatibility ip          13

Logical interface: ge-0/1/3.0, Index: 77
Object      Name      Type      Index
Rewrite     custom-exp2 exp (mpls-any) 53581

Physical interface: ge-0/1/4, Index: 150
Maximum usable queues: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier   ipprec-compatibility ip          13

Physical interface: ge-0/1/5, Index: 151
Maximum usable queues: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier   ipprec-compatibility ip          13

Physical interface: ge-0/1/6, Index: 152
Maximum usable queues: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier   ipprec-compatibility ip          13

Physical interface: ge-0/1/7, Index: 153
Maximum usable queues: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index

```

```
Classifier          d1                      dscp                      11331
```

```
Physical interface: ge-0/2/0, Index: 154
```

```
Maximum usable queues: 8, Queues in use: 5
```

```
Scheduler map: <default>, Index: 2
```

```
Congestion-notification: Disabled
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

```
Physical interface: ge-0/2/1, Index: 155
```

```
Maximum usable queues: 8, Queues in use: 5
```

```
Scheduler map: <default>, Index: 2
```

```
Congestion-notification: Disabled
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

```
Logical interface: ge-0/2/1.0, Index: 78
```

```
Logical interface: ge-0/2/1.32767, Index: 79
```

```
Physical interface: xe-0/3/0, Index: 156
```

```
Maximum usable queues: 8, Queues in use: 5
```

```
Scheduler map: <default>, Index: 2
```

```
Congestion-notification: Disabled
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

```
Logical interface: xe-0/3/0.0, Index: 80
```

```
Physical interface: xe-0/3/1, Index: 157
```

```
Maximum usable queues: 8, Queues in use: 5
```

```
Scheduler map: <default>, Index: 2
```

```
Congestion-notification: Disabled
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

```
Logical interface: xe-0/3/1.0, Index: 81
```

```
[edit]
```

```
user@host-g11#
```


show class-of-service interface (PPPoE Subscriber Interface for Enhanced Subscriber Management)

```

user@host> show class-of-service interface pp0.3221225474
  Logical interface: pp0.3221225475, Index: 3221225475

```

Object	Name	Type	Index
Traffic-control-profile	TC_PROF_100_199_SERIES_UID1006	Output	4294967312
Scheduler-map	SMAP-1_UID1002	Output	4294967327
Rewrite-Output	ieee-rewrite	ieee8021p	60432
Rewrite-Output	rule1	ip	50463

```

  Adjusting application: PPPoE IA tags
    Adjustment type: absolute
    Configured shaping rate: 11000000
    Adjustment value: 5000000
    Adjustment target: node

  Adjusting application: ucac
    Adjustment type: delta
    Configured shaping rate: 5000000
    Adjustment value: 100000
    Adjustment target: node

```

Release Information

Command introduced before Junos OS Release 7.4.

Forwarding class map information added in Junos OS Release 9.4.

Options detail and comprehensive introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

| *Verifying and Managing Junos OS Enhanced Subscriber Management*

show class-of-service loss-priority-rewrite

IN THIS SECTION

- [Syntax | 516](#)
- [Description | 516](#)
- [Options | 516](#)
- [Required Privilege Level | 516](#)
- [Output Fields | 517](#)
- [Sample Output | 517](#)
- [Release Information | 517](#)

Syntax

```
show class-of-service loss-priority-rewrite  
<name name>  
<type frame-relay-de>
```

Description

Display the mapping of the code-point value to the loss priority rewrite rule.

Options

- | | |
|-----------------------|--|
| none | Display all loss priority rewrite maps. |
| <i>name</i> | (Optional) Display the specified loss priority rewrite. |
| frame-relay-de | (Optional) Display the Frame Relay discard eligibility code-point information. |

Required Privilege Level

view

Output Fields

This table describes the output fields for the `show class-of-service loss-priority-rewrite` command. Output fields are listed in the approximate order in which they appear.

Table 72: show class-of-service loss-priority-rewrite Output Fields

Field Name	Field Description
Loss-priority-rewrite	Name of the loss priority rewrite.
Code point type	Type: frame-relay-de .
Index	Internal index.
Loss priority	Loss priority of low , medium-low , medium-high , or high .
Code point	Code-point value.

Sample Output

`show class-of-service loss-priority-rewrite`

```

user@host> show class-of-service loss-priority-rewrite
Loss-priority-rewrite: frame-relay-de-default, Code point type: frame-relay-de, Index: 38
  Loss priority      Code point
  low                0
  high               1
  medium-low         0
  medium-high        1

```

Release Information

Command introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

| [frame-relay-de](#)

show class-of-service l2tp-session

IN THIS SECTION

- [Syntax | 518](#)
- [Description | 518](#)
- [Options | 518](#)
- [Required Privilege Level | 518](#)
- [Output Fields | 519](#)
- [Sample Output | 520](#)
- [Release Information | 520](#)

Syntax

```
show class-of-service l2tp-session session-id
```

Description

Display CoS objects associated with an L2TP session on M7i, M10i, and M120 routers.

Options

session-id L2TP session number for which you want to display a summary of CoS attributes.

Required Privilege Level

view

Output Fields

Table 73 on page 519 lists the output fields for the `show class-of-service l2tp-session` command. Output fields are listed in the approximate order in which they appear.

Table 73: show class-of-service l2tp-session Output Fields

Field Name	Field Description
L2TP Session Username	Username associated with the L2TP session.
Index	Session index identification number.
Physical interface	Physical interface on which the tunnel session is established.
Index	Index ID associated with the physical interface on which the tunnel session is established.
Queues supported	Number of scheduler queues supported for the L2TP session.
Queues in use	Number of scheduler queues active on the L2TP session.
Scheduler map	Scheduler map name associated with the session.
Index	Scheduler map index number associated with the session.
Shaping rate	Maximum bandwidth configured for the session. Each active queue on the session receives a maximum of the configured amount of absolute bandwidth or the configured percentage of bandwidth, even if more bandwidth is available.

Sample Output

show class-of-service l2tp-session

```
user@host> show class-of-service l2tp-session 123
L2TP Session Username: user1@example.com, Index: 12553
Physical interface: ge-2/0/0, Index: 130
Queues supported: 8, Queues in use: 4
  Scheduler map: GEN-SCHED-MAP-EF-65%, Index: 5212
  Shaping rate: 200000 bps
```

Release Information

Command introduced in Junos OS Release 8.2.

show class-of-service policy-map

IN THIS SECTION

- [Syntax | 520](#)
- [Description | 521](#)
- [Options | 521](#)
- [Required Privilege Level | 521](#)
- [Output Fields | 521](#)
- [Sample Output | 522](#)
- [Release Information | 522](#)

Syntax

```
show class-of-service policy-map
<policy-map-name>
<type (configured | reserved)>
```

Description

(MPCs on MX Series devices only) Display class-of-service (CoS) policy map information.

Options

policy-map-name (Optional) Enter the name of a policy map to show only the information for that policy map. Otherwise, information for all policy maps is displayed.

type (Optional) Display information on different types of policy maps.

configured Display user configured policy maps.

reserved Display reserved policy map name-to-ID mapping.

Required Privilege Level

view

Output Fields

[Table 74 on page 521](#) describes the output fields for the `show class-of-service policy-map` command. Output fields are listed in the approximate order in which they appear.

Table 74: show class-of-service policy-map Output Fields

Field Name	Field Description
Type	The type of packet marking to rewrite.
Code Point	The code point the packet marking should be rewritten to.
Option	The type of the traffic the packet marking should be rewritten for.

Sample Output

show class-of-service policy-map

```
user@host> show class-of-service policy-map
Policy-map: P-1, Index: 1
  Type          Code Point  Option
  inet-precedence      110    (proto-ip)
  inet-precedence      110    (proto-mpls)
  dscp-ipv6            101010   (proto-ip)
  dscp-ipv6            101010   (proto-mpls)
  exp                  110    (all-label)
  exp                  111    (outer-label)
  ieee-802.1ad         0110    (outer-and-inner)
```

Release Information

Command introduced in Junos OS Release 16.1.

RELATED DOCUMENTATION

<i>policy-map</i>
<i>Assigning Rewrite Rules on a Per-Customer Basis Using Policy Maps Overview</i>
<i>Configuring Policy Maps to Assign Rewrite Rules on a Per-Customer Basis</i>

show class-of-service rewrite-rule

IN THIS SECTION

- Syntax | 523
- Description | 523
- Options | 523
- Required Privilege Level | 523
- Output Fields | 524

- [Sample Output | 524](#)
- [Release Information | 525](#)

Syntax

```
show class-of-service rewrite-rule  
<name name>  
<type type>
```

Description

Display the mapping of forwarding classes and loss priority to code point values.

Options

- | | |
|----------------------------|--|
| none | Display all rewrite rules. |
| name
<i>name</i> | (Optional) Display the specified rewrite rule. |
| type <i>type</i> | (Optional) Display the rewrite rule of the specified type. The rewrite rule type can be one of the following: <ul style="list-style-type: none">• dscp—For IPv4 traffic.• dscp-ipv6—For IPv6 traffic.• exp—For MPLS traffic.• frame-relay-de—(SRX Series only) For Frame Relay traffic.• ieee-802.1—For Layer 2 traffic.• inet-precedence—For IPv4 traffic. |

Required Privilege Level

view

Output Fields

Table 75 on page 524 describes the output fields for the `show class-of-service rewrite-rule` command. Output fields are listed in the approximate order in which they appear.

Table 75: show class-of-service rewrite-rule Output Fields

Field Name	Field Description
Rewrite rule	Name of the rewrite rule.
Code point type	Type of rewrite rule: dscp , dscp-ipv6 , exp , frame-relay-de , or inet-precedence .
Forwarding class	Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router or switch.
Index	Internal index for this particular rewrite rule.
Loss priority	Loss priority for rewriting.
Code point	Code point value to rewrite.

Sample Output

`show class-of-service rewrite-rule type dscp`

```

user@host> show class-of-service rewrite-rule type dscp
Rewrite rule: dscp-default, Code point type: dscp
  Forwarding class      Loss priority      Code point
  gold                 high              000000
  silver               low               110000
  silver               high              111000
  bronze               low               001010
  bronze               high              001100
  lead                 high              101110

Rewrite rule: abc-dscp-rewrite, Code point type: dscp, Index: 3245
  Forwarding class      Loss priority      Code point

```

gold	low	000111
gold	high	001010
silver	low	110000
silver	high	111000
bronze	high	001100
lead	low	101110
lead	high	110111

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

| [Rewrite Rules Overview](#) | 93

show class-of-service routing-instance

IN THIS SECTION

- [Syntax](#) | 525
- [Description](#) | 526
- [Options](#) | 526
- [Required Privilege Level](#) | 526
- [Output Fields](#) | 526
- [Sample Output](#) | 527
- [Release Information](#) | 527

Syntax

```
show class-of-service routing-instance
<routing-instance-name>
```

Description

Display mapping of class of service (CoS) objects to routing instances.

Options

routing-instance-name (Optional) Name of a routing instance.

Required Privilege Level

view

Output Fields

[Table 76 on page 526](#) describes the output fields for the `show class-of-service routing-instance` command. Output fields are listed in the approximate order in which they appear.

Table 76: show class-of-service routing-instance Output Fields

Field Name	Field Description
Index	Internal index.
Name	Name of an object.
Object	Category of an object: Classifier.
Routing instance	Name of a routing instance.
Type	Type: exp.

Sample Output

show class-of-service routing-instance

```
user@host> show class-of-service routing-instance
```

Routing Instance : vpn1			
Object	Name	Type	Index
Classifier	exp-default	exp	8

Routing Instance : vpn2			
Object	Name	Type	Index
Classifier	test2	exp	57507

Release Information

Command introduced before Junos OS Release 7.4.

show class-of-service scheduler-hierarchy interface

IN THIS SECTION

- [Syntax | 527](#)
- [Description | 528](#)
- [Options | 528](#)
- [Required Privilege Level | 528](#)
- [Output Fields | 528](#)
- [Sample Output | 529](#)
- [Release Information | 529](#)

Syntax

```
show class-of-service scheduler-hierarchy interface interface-name <detail>
```

Description

For MPC/MIC interfaces only, display the scheduler hierarchy as well as the shaping rate, guaranteed rate, priorities, and queue weight information for each forwarding class at each hierarchy level.

Options

- detail** (Optional) Display scheduler hierarchies based on the interface set.
- interface-name*** Display information about a specific interface.

Required Privilege Level

view

Output Fields

[Table 77 on page 528](#) describes the output fields for the `show class-of-service scheduler-hierarchy interface` command. Output fields are listed in the approximate order in which they appear.

Table 77: show class-of-service scheduler-hierarchy interface Output Fields

Field Name	Field Description
interface	Interface name
resource	Traffic resource associated with the logical interface
shaping-rate	Shaping rate in bits per second
guaranteed rate	Guaranteed rate in bits per second
guaranteed priority	Queue priority in the guaranteed region (high, low, or none)
excess priority	Queue priority in the excess region (high, low, or none)
queue weight	Queue weight for excess CoS weighted round-robin

Table 77: show class-of-service scheduler-hierarchy interface Output Fields (*Continued*)

Field Name	Field Description
excess weight	Interface unit per priority weights for excess weighted round-robin

Sample Output

show class-of-service scheduler-hierarchy interface

```
user@host> show class-of-service scheduler-hierarchy interface xe-1/0/0
```

```

-----
Interface/          shaping guaranteed  guaranteed/  queue  excess
resource name       rate    rate    excess  weight  weight
                    kbits   kbits   priority            high/low
-----
xe-1/0/0            12000
xe-1/0/0 RTP        12000      0
  best-effort        12000      0    Low  Low    950
  network-control    12000      0    Low  Low    50
ifset1              12000      0
  ifset1 RTP         12000      0
    be1              720      0    Low  Low    250
    nc1              12000     0    Low  Low    250
demux0.96           3000      0
  demux0.96 RTP      3000      0
    be1              1000     0    Low  Low    250
    nc1              3000     0    Low  Low    250
pp0.81              2000      0
  be1                1000     0    Low  Low    250
  nc1                2000     0    Low  Low    250
-----

```

Release Information

Command introduced in Junos OS Release 13.3.

Support for up to four hierarchy levels added in Junos OS Release 16.1.

NOTE: Before Junos OS R19.2, the shaping rate would incorrectly display as 90% of the guaranteed rate.

RELATED DOCUMENTATION

hierarchical-scheduler (Subscriber Interfaces on MX Series Routers)

show class-of-service scheduler-map

IN THIS SECTION

- [Syntax | 530](#)
- [Description | 530](#)
- [Options | 531](#)
- [Required Privilege Level | 531](#)
- [Output Fields | 531](#)
- [Sample Output | 533](#)
- [Release Information | 534](#)

Syntax

```
show class-of-service scheduler-map  
<name>
```

Description

Display the mapping of schedulers to forwarding classes and a summary of scheduler parameters for each entry.

Options

- none** Display all scheduler maps.
- name** (Optional) Display a summary of scheduler parameters for each forwarding class to which the named scheduler is assigned.

Required Privilege Level

view

Output Fields

Table 78 on page 531 describes the output fields for the `show class-of-service scheduler-map` command. Output fields are listed in the approximate order in which they appear.

Table 78: show class-of-service scheduler-map Output Fields

Field Name	Field Description
Scheduler map	<p>Name of the scheduler map.</p> <p>(Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, SMAP-1_UID1002) instead of with a subscriber interface.</p>
Index	<p>Index of the indicated object. Objects having indexes in this output include scheduler maps, schedulers, and drop profiles.</p> <p>(Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles are larger for enhanced subscriber management than they are for legacy subscriber management.</p>
Scheduler	Name of the scheduler.
Forwarding class	Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.

Table 78: show class-of-service scheduler-map Output Fields (Continued)

Field Name	Field Description
Transmit rate	Configured transmit rate of the scheduler (in bps). The rate is a percentage of the total interface bandwidth, or the keyword remainder, which indicates that the scheduler receives the remaining bandwidth of the interface.
Rate Limit	Rate limiting configuration of the queue. Possible values are none, meaning no rate limiting, and exact, meaning the queue only transmits at the configured rate.
Maximum buffer delay	Amount of transmit delay (in milliseconds) or the buffer size of the queue. The buffer size is shown as a percentage of the total interface buffer allocation, or by the keyword remainder to indicate that the buffer is sized according to what remains after other scheduler buffer allocations.
Priority	Scheduling priority: low or high.
Excess priority	Priority of excess bandwidth: low, medium-low, medium-high, high, or none.
Explicit Congestion Notification	<p>(QFX Series, OCX Series, and EX4600 switches only) Explicit congestion notification (ECN) state:</p> <ul style="list-style-type: none"> • Disable—ECN is disabled on the specified scheduler • Enable—ECN is enabled on the specified scheduler <p>ECN is disabled by default.</p>
Adjust minimum	Minimum shaping rate for an adjusted queue, in bps.
Adjust percent	Bandwidth adjustment applied to a queue, in percent.
Drop profiles	Table displaying the assignment of drop profiles by name and index to a given loss priority and protocol pair.
Loss priority	Packet loss priority for drop profile assignment.

Table 78: show class-of-service scheduler-map Output Fields (Continued)

Field Name	Field Description
Protocol	Transport protocol for drop profile assignment.
Name	Name of the drop profile.

Sample Output

show class-of-service scheduler-map

```
user@host> show class-of-service scheduler-map
```

```
Scheduler map: dd-scheduler-map, Index: 84
```

```
Scheduler: aa-scheduler, Index: 8721, Forwarding class: aa-forwarding-class
```

```
Transmit rate: 30 percent, Rate Limit: none, Maximum buffer delay: 39 ms,
```

```
Priority: high
```

```
Drop profiles:
```

Loss priority	Protocol	Index	Name
Low	non-TCP	8724	aa-drop-profile
Low	TCP	9874	bb-drop-profile
High	non-TCP	8833	cc-drop-profile
High	TCP	8484	dd-drop-profile

```
Scheduler: bb-scheduler, Forwarding class: aa-forwarding-class
```

```
Transmit rate: 40 percent, Rate limit: none, Maximum buffer delay: 68 ms,
```

```
Priority: high
```

```
Drop profiles:
```

Loss priority	Protocol	Index	Name
Low	non-TCP	8724	aa-drop-profile
Low	TCP	9874	bb-drop-profile
High	non-TCP	8833	cc-drop-profile
High	TCP	8484	dd-drop-profile

show class-of-service scheduler-map (QFX Series)

```

user@switch# show class-of-service scheduler-map
Scheduler map: be-map, Index: 12240

Scheduler:be-sched, Forwarding class: best-effort, Index: 115
  Transmit rate: 30 percent, Rate Limit: none, Buffer size: remainder,
  Buffer Limit: none, Priority: low
  Excess Priority: unspecified, Explicit Congestion Notification: disable

Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           any       3312   lan-dp
  Medium-high   any       2714   be-dp1
  High          any       3178   be-dp2

```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

| *Verifying and Managing Junos OS Enhanced Subscriber Management*

show class-of-service traffic-class-map

IN THIS SECTION

- [Syntax | 535](#)
- [Description | 535](#)
- [Options | 535](#)
- [Required Privilege Level | 535](#)
- [Output Fields | 535](#)
- [Sample Output | 536](#)

Syntax

```
show class-of-service traffic-class-map
<name traffic-class-map-name>
<type (dscp | exp | ieee-802.1 | ieee-802.1ad | inet-precedence)>
```

Description

For each traffic class map, display the mapping of the code point value to the input traffic class.

Options

none	Display all the mappings.
name <i>name</i>	(Optional) Display the named traffic class map.
type dscp	(Optional) Display all traffic class maps of the Differentiated Services code point (DSCP) type.
type exp	(Optional) Display all traffic class maps of the MPLS EXP type.
type ieee-802.1	(Optional) Display all traffic class maps of the IEEE 802.1 type.
type ieee-802.1ad	(Optional) Display all traffic class maps of the IEEE 802.1ad type.
type inet-precedence	(Optional) Display all traffic class maps of the IPv4 precedence type.

Required Privilege Level

view

Output Fields

[Table 79 on page 536](#) describes the output fields for the `show class-of-service traffic-class-map` command. Output fields are listed in the approximate order in which they appear.

Table 79: show class-of-service traffic-class-map Output Fields

Field Name	Field Description
Traffic-class-map	Name of the traffic class map.
Code point type	Type of the traffic class map: exp, dscp, ieee-802.1, ieee-802.1ad, or inet-precedence.
Index	Internal index of the traffic class map.
Code point	Code point value used for classification.
Traffic class	Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.

Sample Output

show class-of-service traffic-class-map

```

user@host> show class-of-service traffic-class-map
Traffic-class-map: inet-precedence, Code-point type: inet-precedence, Index: 44231
    Code point      Traffic class
    000             real-time
    001             real-time
    010             network-control
    011             network-control
    100             best-effort
    101             best-effort

```

Release Information

Command introduced in Junos OS Release 14.2.

RELATED DOCUMENTATION

traffic-class-map

Managing Ingress Oversubscription at the PFE

Configuring Traffic Class Maps to Manage Ingress Oversubscription

Example: Configuring Traffic Class Maps

show class-of-service forwarding-table traffic-class-map

show class-of-service translation-table

IN THIS SECTION

- [Syntax | 537](#)
- [Description | 537](#)
- [Options | 538](#)
- [Required Privilege Level | 538](#)
- [Output Fields | 538](#)
- [Sample Output | 539](#)
- [Release Information | 543](#)

Syntax

```
show class-of-service translation-table
<name translation-table-name> |
<type (to-dscp-from-dscp | to-dscp-ipv6-from-dscp-ipv6 | to-exp-from-exp | to-inet-precedence-
from-inet-precedence)>
```

Description

Display the mapping of class-of-service (CoS) translation table code points to corresponding bit patterns.

Options

none Display translation table code points for all translation tables.

name (Optional) Display information for the named translation table.

type (Optional) Display information for a certain translation table type:

to-dscp-from-dscp	Display DSCP translation table information.
to-dscp-ipv6-from-dscp-ipv6	Display DSCP IPv6 translation table information.
to-exp-from-exp	Display MPLS EXP translation table information.
to-inet-precedence-from-intet-precedence	Display Internet precedence translation table information.

Required Privilege Level

view

Output Fields

[Table 80 on page 538](#) describes the output fields for the `show class-of-service translation-table` command. Output fields are listed in the approximate order in which they appear.

Table 80: show class-of-service translation-table Output Fields

Field Name	Field Description
Translation Table	Name of the translation table.
Translation table type	Type of the translation table.
Index	Internal index number of the translation table.
From Code Point	Value of code point received.

Table 80: show class-of-service translation-table Output Fields *(Continued)*

Field Name	Field Description
To Code Point	Value of translated code point.

Sample Output

show class-of-service translation-table

```

user@host> show class-of-service translation-table
Translation Table: inet-trans-table, Translation table type: inet-to-inet, Index: 61075
  From Code point    To Code Point
  000                101
  001                111
  010                101
  011                111
  100                101
  101                101
  110                001
  111                000

Translation Table: dscp-trans-table, Translation table type: dscp-to-dscp, Index: 6761
  From Code point    To Code Point
  000000            000111
  000001            000111
  000010            000111
  000011            000111
  000100            000111
  000101            000111
  000110            000111
  000111            111000
  001000            000111
  001001            000111
  001010            000111
  001011            000111
  001100            000111
  001101            000111
  001110            000111
  001111            000111

```

010000	000111
010001	000111
010010	000111
010011	000111
010100	000111
010101	000111
010110	000111
010111	000111
011000	000111
011001	000111
011010	000111
011011	000111
011100	000111
011101	000111
011110	000111
011111	000111
100000	000111
100001	000111
100010	000111
100011	000111
100100	000111
100101	000111
100110	000111
100111	111000
101000	000111
101001	000111
101010	000111
101011	000111
101100	000111
101101	000111
101110	000111
101111	000111
110000	000111
110001	000111
110010	000111
110011	000111
110100	000111
110101	000111
110110	000111
110111	000111
111000	000111
111001	000111
111010	000111

111011	000111
111100	000111
111101	000111
111110	000001
111111	000000

show class-of-service translation-table name exp-trans-table

```
user@host> show class-of-service translation-table name exp-trans-table
Translation Table: exp-trans-table, Translation table type: exp-to-exp, Index: 9048
  From Code point    To Code Point
  -----
  000                101
  001                111
  010                101
  011                111
  100                101
  101                101
  110                001
  111                000
```

show class-of-service translation-table type to-dscp-ipv6-from-dscp-ipv6

```
user@host> show class-of-service translation-table type to-dscp-ipv6-from-dscp-ipv6
Translation Table: dscp-ipv6-trans-table, Translation table type: dscp-ipv6-to-dscp-ipv6, Index:
64704
  From Code point    To Code Point
  -----
  000000            000111
  000001            000111
  000010            000111
  000011            000111
  000100            000111
  000101            000111
  000110            000111
  000111            111000
  001000            000111
  001001            000111
  001010            000111
  001011            000111
  001100            000111
```

001101	000111
001110	000111
001111	000111
010000	000111
010001	000111
010010	000111
010011	000111
010100	000111
010101	000111
010110	000111
010111	000111
011000	000111
011001	000111
011010	000111
011011	000111
011100	000111
011101	000111
011110	000111
011111	000111
100000	000111
100001	000111
100010	000111
100011	000111
100100	000111
100101	000111
100110	000111
100111	111000
101000	000111
101001	000111
101010	000111
101011	000111
101100	000111
101101	000111
101110	000111
101111	000111
110000	000111
110001	000111
110010	000111
110011	000111
110100	000111
110101	000111
110110	000111
110111	000111

111000	000111
111001	000111
111010	000111
111011	000111
111100	000111
111101	000111
111110	000001
111111	000000

Release Information

Command introduced in Junos OS Release 9.3.

show interfaces forwarding-class-counters

IN THIS SECTION

- Syntax | 543
- Description | 544
- Options | 544
- Additional Information | 544
- Required Privilege Level | 544
- Output Fields | 544
- Sample Output | 545
- Release Information | 550

Syntax

```
show interfaces forwarding-class-counters interface-name <comprehensive>
```

Description

Display interface accounting information by forwarding class for IPv4, IPv6, MPLS, Layer 2, and Other traffic.

Options

comprehensive (Optional) Display forwarding-class-counters per traffic family for all logical interfaces under the physical interface along with other quality-of-service information.

Additional Information

For physical interface-level statistics, if none of the logical interfaces have any of the traffic families configured on them, the forwarding class statistics for that family are still displayed with a value of 0.

For physical interface-level statistics, in case of Layer 2 families such as **ccc**, **tcc**, or **vpls**, the **Layer2** keyword is displayed because it is possible that different Layer 2 families are configured on the logical interface.

For logical interface-level statistics, the output displays statistics only for families that are configured on that logical interface. The statistics under **Other** family are still displayed because these are packets that are not classified as belonging to any family.

In the case of Layer 2 families such as **ccc**, **tcc**, or **vpls** configured on the logical interface, the actual family name is displayed in the output.

Statistics include input and output byte and packets and corresponding rates.

Required Privilege Level

view

Output Fields

[Table 81 on page 545](#) lists the output fields for the `show interfaces forwarding-class-counters` command. Output fields are listed in the approximate order in which they appear.

Table 81: show interfaces forwarding-class-counters Output Fields

Field Name	Field Description
Input bytes	A count of received bytes that match the forwarding class.
Output bytes	A count of transmitted bytes that match the forwarding class.
Input packets	A count of received packets that match the forwarding class.
Output packets	A count of transmitted packets that match the forwarding class.

Sample Output

show interfaces forwarding-class-counters interface-name

```
user@host> show interfaces forwarding-class-counters ge-4/2/1
```

```
user@host> show interfaces forwarding-class-counters ge-4/2/1
```

```
Physical interface ge-4/2/1 (Index 228) (SNMP ifIndex 870)
```

```
Aggregate Forwarding-class statistics :
```

```
Forwarding-class statistics : best-effort
```

```
Input  bytes :                0      0 bps
```

```
output bytes :                0      0 bps
```

```
Input  packets :              0      0 pps
```

```
output packets :              0      0 pps
```

```
Forwarding-class statistics : network-control
```

```
Input  bytes :                0      0 bps
```

```
output bytes :                0      0 bps
```

```
Input  packets :              0      0 pps
```

```
output packets :              0      0 pps
```

```
IPv4 Forwarding-class statistics :
```

```
Forwarding-class statistics : best-effort
```

```
Input  bytes :                0      0 bps
```

```
output bytes :                0      0 bps
```

```
Input  packets :              0      0 pps
```

```
output packets :              0      0 pps
```

Forwarding-class statistics : expedited-forwarding

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : assured-forwarding

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : network-control

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

IPv6 Forwarding-class statistics :

Forwarding-class statistics : best-effort

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : expedited-forwarding

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : assured-forwarding

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : network-control

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

MPLS Forwarding-class statistics :

Forwarding-class statistics : best-effort

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps


```

output packets :          0      0 pps
Forwarding-class statistics : expedited-forwarding
Input  bytes  :          0      0 bps
output bytes  :          0      0 bps
Input  packets :          0      0 pps
output packets :          0      0 pps
Forwarding-class statistics : assured-forwarding
Input  bytes  :          0      0 bps
output bytes  :          0      0 bps
Input  packets :          0      0 pps
output packets :          0      0 pps
Forwarding-class statistics : network-control
Input  bytes  :          0      0 bps
output bytes  :          0      0 bps
Input  packets :          0      0 pps
output packets :          0      0 pps

```

Layer2 Forwarding-class statistics

```

Forwarding-class statistics : best-effort
Input  bytes  :          0      0 bps
output bytes  :          0      0 bps
Input  packets :          0      0 pps
output packets :          0      0 pps
Forwarding-class statistics : expedited-forwarding
Input  bytes  :          0      0 bps
output bytes  :          0      0 bps
Input  packets :          0      0 pps
output packets :          0      0 pps
Forwarding-class statistics : assured-forwarding
Input  bytes  :          0      0 bps
output bytes  :          0      0 bps
Input  packets :          0      0 pps
output packets :          0      0 pps
Forwarding-class statistics : network-control
Input  bytes  :          0      0 bps
output bytes  :          0      0 bps
Input  packets :          0      0 pps
output packets :          0      0 pps

```

Other Forwarding-class statistics :

```

Forwarding-class statistics : best-effort
Input  bytes  :          0      0 bps
output bytes  :          0      0 bps

```

```

Input  packets :           0      0 pps
output packets :           0      0 pps
Forwarding-class statistics : expedited-forwarding
Input  bytes   :           0      0 bps
output bytes   :           0      0 bps
Input  packets :           0      0 pps
output packets :           0      0 pps
Forwarding-class statistics : assured-forwarding
Input  bytes   :           0      0 bps
output bytes   :           0      0 bps
Input  packets :           0      0 pps
output packets :           0      0 pps
Forwarding-class statistics : network-control
Input  bytes   :           0      0 bps
output bytes   :           0      0 bps
Input  packets :           0      0 pps
output packets :           0      0 pps

```

Logical interface ge-4/2/1.0 (Index 347) (SNMP ifIndex 1032)

Forwarding-class accounting parameters :

Aggregate Forwarding-class statistics :

```

    Forwarding-class statistics : best-effort
Input  bytes   :           0      0 bps
output bytes   :           0      0 bps
Input  packets :           0      0 pps
output packets :           0      0 pps
Forwarding-class statistics : expedited-forwarding
Input  bytes   :           0      0 bps
output bytes   :           0      0 bps
Input  packets :           0      0 pps
output packets :           0      0 pps
Forwarding-class statistics : assured-forwarding
Input  bytes   :           0      0 bps
output bytes   :           0      0 bps
Input  packets :           0      0 pps
output packets :           0      0 pps
Forwarding-class statistics : network-control
Input  bytes   :           0      0 bps
output bytes   :           0      0 bps
Input  packets :           0      0 pps
output packets :           0      0 pps

```

ccc Forwarding-class statistics :

Forwarding-class statistics : best-effort

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : expedited-forwarding

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : assured-forwarding

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : network-control

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Other Forwarding-class statistics :

Forwarding-class statistics : best-effort

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : expedited-forwarding

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : assured-forwarding

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps
Input	packets	:	0	0 pps
output	packets	:	0	0 pps

Forwarding-class statistics : network-control

Input	bytes	:	0	0 bps
output	bytes	:	0	0 bps

Input	packets :	0	0 pps
output	packets :	0	0 pps

command-name

Release Information

Command introduced in Junos OS 14.1.

RELATED DOCUMENTATION

<i>forwarding-class-accounting</i>
Class of Service User Guide (Routers and EX9200 Switches)

show interfaces voq

IN THIS SECTION

- [Syntax | 551](#)
- [Syntax \(Junos OS Evolved\) | 551](#)
- [Description | 551](#)
- [Options | 551](#)
- [Additional Information | 552](#)
- [Required Privilege Level | 552](#)
- [Output Fields | 552](#)
- [Sample Output | 553](#)
- [Release Information | 568](#)

Syntax

```
show interfaces voq interface-name
<forwarding-class forwarding-class-name>
<non-zero>
```

Syntax (Junos OS Evolved)

```
show interfaces voq interface-name
<forwarding-class forwarding-class-name>
<non-zero>
<source-fpc source-fpc-number>
```

Description

Display the random early detection (RED) drop statistics from all ingress Packet Forwarding Engines associated with the specified physical egress interface. In the VOQ architecture, egress output queues (shallow buffers) buffer data in virtual queues on ingress Packet Forwarding Engines. In cases of congestion, you can use this command to identify which ingress Packet Forwarding Engine is the source of RED-dropped packets contributing to congestion.

NOTE: On the PTX Series routers and QFX10000 switches, these statistics include tail-dropped packets.

Options

interface <i>interface-name</i>	Display the ingress VOQ RED drop statistics for the specified egress interface.
forwarding-class <i>forwarding-class-name</i>	Display VOQ RED drop statistics for a specified forwarding class.
non-zero	Display only non-zero VOQ RED drop statistics counters.
source-fpc <i>source-fpc-number</i>	Display VOQ RED drop statistics for the specified source FPC.

Additional Information

- On PTX Series routers, you can display VOQ statistics for only the WAN physical interface.
- VOQ statistics for aggregated physical interfaces are not supported. Statistics for an aggregated interface are the summation of the queue statistics of the child links of that aggregated interface. You can use the `show interfaces queue` command to identify the child link which is experiencing congestion and then view the VOQ statistics on the respective child link using the `show interfaces voq` command.

For information on virtual output queuing on PTX routers, see *Understanding Virtual Output Queues on PTX Series Packet Transport Routers*. For information on virtual output queueing on QFX10000 switches, see *Understanding CoS Virtual Output Queues (VOQs) on QFX10000 Switches*.

Required Privilege Level

view

Output Fields

[Table 82 on page 552](#) lists the output fields for the `show interfaces queue` command. Output fields are listed in the approximate order in which they appear.

Table 82: show interfaces voq Output Fields

Field Name	Field Description
Physical interface	Name of the physical interface.
Enabled	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .
Interface index	Physical interface's index number, which reflects its initialization sequence.
SNMP ifIndex	SNMP index number for the interface.
Queue	Egress queue number.

Table 82: show interfaces voq Output Fields (Continued)

Field Name	Field Description
Forwarding classes	Forwarding class name.
FPC number	Number of the Flexible PIC Concentrator (FPC) located on ingress.
PFE	Number of the Packet Forwarding Engine providing virtual output queues on the ingress.
RED-dropped packets	<p>Number of packets per second (pps) dropped because of random early detection (RED).</p> <p>NOTE: On the PTX Series routers, these statistics include tail-dropped packets.</p>
RED-dropped bytes	<p>Number of bytes per second dropped because of RED. The byte counts vary by interface hardware.</p> <p>NOTE: On the PTX Series routers, these statistics include tail-dropped packets.</p>

Sample Output

show interfaces voq (For a Specific Physical Interface) (PTX Series Routers)

The following example shows ingress RED-dropped statistics for the egress Ethernet interface configured on port 0 of Physical Interface Card (PIC) 0, located on the FPC in slot 7.

The sample output below shows that the cause of the congestion is ingress Packet Forwarding Engine PFE 0, which resides on FPC number 4, as denoted by the count of RED-dropped packets and RED-dropped bytes for egress queue 0, forwarding classes best-effort and egress queue 3, forwarding class network control.

```

user@host> show interfaces voq et-7/0/0
Physical interface: et-7/0/0, Enabled, Physical link is Up
  Interface index: 155, SNMP ifIndex: 699

```

Queue: 0, Forwarding classes: best-effort

FPC number: 1

PFE: 0

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 1

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 2

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 3

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

FPC number: 4

PFE: 0

RED-dropped packets : 19969426 2323178 pps

RED-dropped bytes : 2196636860 2044397464 bps

PFE: 1

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 2

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 3

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

FPC number: 6

PFE: 0

RED-dropped packets : 19969424 2321205 pps

RED-dropped bytes : 2196636640 2042660808 bps

PFE: 1

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 2

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 3

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 4

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 5

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 6

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 7

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

FPC number: 7

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

Queue: 1, Forwarding classes: expedited-forwarding

FPC number: 1

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

FPC number: 4

PFE: 0

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 1

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 2

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 3

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

FPC number: 6

PFE: 0

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 1

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 2

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 3

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 4

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 5

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 6

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

PFE: 7

RED-dropped packets : 0 0 pps

RED-dropped bytes : 0 0 bps

FPC number: 7

PFE: 0

RED-dropped packets : 0 0 pps

RED-dropped bytes	:	0	0 bps
PFE: 1			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 2			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 3			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps

Queue: 2, Forwarding classes: assured-forwarding

FPC number: 1

PFE: 0			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 1			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 2			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 3			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps

FPC number: 4

PFE: 0			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 1			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 2			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 3			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps

FPC number: 6

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 4

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 5

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 6

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 7

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

FPC number: 7

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

Queue: 3, Forwarding classes: network-control

FPC number: 1

PFE: 0

RED-dropped packets :	0	0 pps
-----------------------	---	-------

RED-dropped bytes	:	0	0 bps
PFE: 1			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 2			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 3			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps

FPC number: 4

PFE: 0			
RED-dropped packets	:	16338670	1900314 pps
RED-dropped bytes	:	1797253700	1672276976 bps
PFE: 1			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 2			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 3			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps

FPC number: 6

PFE: 0			
RED-dropped packets	:	16338698	1899163 pps
RED-dropped bytes	:	1797256780	1671263512 bps
PFE: 1			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 2			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 3			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 4			
RED-dropped packets	:	0	0 pps
RED-dropped bytes	:	0	0 bps
PFE: 5			
RED-dropped packets	:	0	0 pps

```

    RED-dropped bytes      :                0                0 bps
PFE: 6
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 7
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

FPC number: 7
PFE: 0
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 3
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

```

show interfaces voq (For a Specific Physical Interface) (QFX10000 Switches)

The sample output below shows congestion on ingress PFE 1 on FPC number 0, and on ingress PFE 2 on FPC number 1, as denoted by the count of RED-dropped packets and RED-dropped bytes for best-effort egress queue 0.

```

user@host> show interfaces voq et-1/0/0
Physical interface: et-1/0/0, Enabled, Physical link is Up
  Interface index: 659, SNMP ifIndex: 539

Queue: 0, Forwarding classes: best-effort

FPC number: 0
PFE: 0
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 1
    RED-dropped packets    :          411063248          16891870 pps
    RED-dropped bytes      :        52616095744        17297275600 bps

```

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

FPC number: 1

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	411063012	16891870 pps
RED-dropped bytes :	52616065536	17297275376 bps

Queue: 3, Forwarding classes: fcoe

FPC number: 0

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

FPC number: 1

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

Queue: 4, Forwarding classes: no-loss

FPC number: 0

PFE: 0

```

    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
  PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
  PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

```

FPC number: 1

```

  PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
  PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
  PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

```

Queue: 7, Forwarding classes: network-control

FPC number: 0

```

  PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
  PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
  PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

```

FPC number: 1

```

  PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
  PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
  PFE: 2

```


RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

show interfaces voq et-7/0/0 (For a Specific Forwarding Class)

```
user@host> show interfaces voq et-7/0/0 forwarding-class best-effort
```

Physical interface: et-7/0/0, Enabled, Physical link is Up

Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 1

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

FPC number: 4

PFE: 0

RED-dropped packets :	66604786	2321519 pps
RED-dropped bytes :	7326526460	2042936776 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

FPC number: 6

PFE: 0

RED-dropped packets :	66604794	371200 pps
RED-dropped bytes :	7326527340	326656000 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 4

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 5

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 6

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 7

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

FPC number: 7

PFE: 0

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 1

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 2

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

PFE: 3

RED-dropped packets :	0	0 pps
RED-dropped bytes :	0	0 bps

show interfaces voq et-5/0/12 (For a Specific Source FPC)

```
user@host> show interfaces voq et-5/0/12 source-fpc 0
```

```
Physical interface: et-5/0/12, Enabled, Physical link is Up
```

```
Interface index: 166, SNMP ifIndex: 1104
```

```
Queue: 0, Forwarding classes: best-effort
```

```
FPC number: 0
```

```
PFE: 0
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 1
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 2
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 3
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
Queue: 1, Forwarding classes: expedited-forwarding
```

```
FPC number: 0
```

```
PFE: 0
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 1
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 2
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
PFE: 3
```

```
RED-dropped packets : 0 0 pps
```

```
RED-dropped bytes : 0 0 bps
```

```
Queue: 2, Forwarding classes: assured-forwarding
```

```
FPC number: 0
```

```
PFE: 0
```

```

        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps
    PFE: 1
        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps
    PFE: 2
        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps
    PFE: 3
        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps

Queue: 3, Forwarding classes: network-control

```

```

FPC number: 0
    PFE: 0
        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps
    PFE: 1
        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps
    PFE: 2
        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps
    PFE: 3
        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps

```

show interfaces voq et-5/0/12 (For a Specific Forwarding Class and Source FPC)

```

user@host> show interfaces voq et-5/0/12 forwarding-class best-effort source-fpc 5
Physical interface: et-5/0/12, Enabled, Physical link is Up
    Interface index: 166, SNMP ifIndex: 1104

```

```

Queue: 0, Forwarding classes: best-effort

```

```

FPC number: 5
    PFE: 0
        RED-dropped packets :           0           0 pps
        RED-dropped bytes   :           0           0 bps
    PFE: 1

```

```

        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
PFE: 2
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
PFE: 3
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
PFE: 4
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
PFE: 5
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
PFE: 6
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps
PFE: 7
        RED-dropped packets :          0          0 pps
        RED-dropped bytes   :          0          0 bps

```

show interfaces voq et-7/0/0 (Non-Zero)

```
user@host> show interfaces voq et-7/0/0 non-zero
```

Physical interface: et-7/0/0, Enabled, Physical link is Up

Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 4

PFE: 0

```

        RED-dropped packets :          95862238          2301586 pps
        RED-dropped bytes   :        10544846180        2025396264 bps

```

FPC number: 6

PFE: 0

```

        RED-dropped packets :          95866639          2322569 pps
        RED-dropped bytes   :        10545330290        2043860728 bps

```

Queue: 3, Forwarding classes: network-control

FPC number: 4

PFE: 0

RED-dropped packets :	78433066	1899727 pps
RED-dropped bytes :	8627637260	1671760384 bps

FPC number: 6

PFE: 0

RED-dropped packets :	78436704	1900628 pps
RED-dropped bytes :	8628037440	1672553432 bps

show interfaces voq et-7/0/0 (For a Specific Forwarding Class and Non-Zero)

user@host **show interfaces voq et-7/0/0 forwarding-class best-effort non-zero**

Physical interface: et-7/0/0, Enabled, Physical link is Up

Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 4

PFE: 0

RED-dropped packets :	119540012	2322319 pps
RED-dropped bytes :	13149401320	2043640784 bps

FPC number: 6

PFE: 0

RED-dropped packets :	119540049	2322988 pps
RED-dropped bytes :	13149405390	2044229744 bps

Release Information

Command introduced in Junos OS Release 14.1.

RELATED DOCUMENTATION

Understanding Virtual Output Queues on PTX Series Packet Transport Routers

Understanding CoS Virtual Output Queues (VOQs) on QFX10000 Switches