

Security Director

Junos Space Security Director User Guide

Published
2025-01-14

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Security Director Junos Space Security Director User Guide
Copyright © 2025 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

[About This Guide | xl](#)

1

[Junos Space Security Director](#)

[Overview | 2](#)

[Junos Space Security Director Overview | 2](#)

[Juniper Networks Connected Security Overview | 18](#)

[Security Director Insights Overview | 20](#)

2

[Dashboard](#)

[Overview | 23](#)

[Dashboard Overview | 23](#)

3

[Monitor](#)

[Events and Logs-All Events | 34](#)

[Events and Logs Overview | 35](#)

[Creating Alerts | 42](#)

[Creating Reports | 44](#)

[Creating Filters | 46](#)

[Grouping Events | 48](#)

[Using Events and Logs Settings | 49](#)

[Selecting Events and Logs Table Columns | 50](#)

[Viewing Threats | 50](#)

[Viewing Data for Selected Devices | 50](#)

[Using the Detailed Log View | 51](#)

[Using the Raw Log View | 52](#)

[Showing Exact Match | 52](#)

[Using Filter on Cell Data | 53](#)

Using Exclude Cell Data | 53

Showing Firewall Policy | 54

Showing Source NAT Policy | 55

Showing Destination NAT Policy | 56

Downloading Packets Captured | 56

Showing Attack Details | 57

Using Filters | 58

Editing Event Viewer Filters | 58

Viewing Saved Filters | 58

Deleting Event Viewer Filters | 59

Events and Logs-Firewall | 61

Firewall Events and Logs Overview | 61

Events and Logs-Web Filtering | 66

Web Filtering Events and Log Overview | 66

Events and Logs-VPN | 70

VPN Events and Logs Overview | 70

Events and Logs-Content Filtering | 73

Content Filtering Events and Logs Overview | 73

Events and Logs-Antispam | 77

Antispam Events and Logs Overview | 77

Events and Logs-Antivirus | 80

Antivirus Events and Logs Overview | 80

Events and Logs-IPS | 84

IPS Events and Logs Overview | 84

Events and Logs-Screen | 89

Screen Events and Logs Overview | 89

Events and Logs-ATP Cloud | 93

ATP Cloud Events and Logs Overview | 93

Events and Logs-Apptrack | 97

Apptrack Events and Logs Overview | 97

Threat Prevention-Hosts | 102

Infected Hosts Overview | 102

Infected Host Details | 103

Threat Prevention-C&C Servers | 105

Command and Control Servers Overview | 105

Command and Control Server Details | 107

Threat Prevention-HTTP File Download | 109

HTTP File Download Overview | 109

HTTP File Download Details | 111

Threat Prevention-Email Quarantine and Scanning | 114

SMTP Quarantine Overview | 114

Email Attachments Scanning Overview | 116

Email Attachments Scanning Details | 118

Threat Prevention-IMAP Block | 121

IMAP Block Overview | 121

Threat Prevention-Manual Upload | 123

File Scanning Limits | 123

Threat Prevention-Feed Status | 125

Device Feed Status Details | 125

Threat Prevention-All Hosts Status | 127

All Hosts Status Details | 127

Threat Prevention-DDoS Feeds Status | 130

DDoS Feeds Status Details | 130

Applications | 132

About the Application Visibility Page | 132

| | |
|--|------------|
| Application Visibility Overview | 140 |
| Application Overview | 141 |
| User Overview | 142 |
| Source IP Address Overview | 142 |
| Block Applications | 144 |
| Block Users | 145 |
| Block Source IP Addresses | 146 |
| Live Threat Map | 148 |
| Threat Map Overview | 148 |
| Blocking Threat Events | 151 |
| Threat Monitoring | 155 |
| Threat Monitoring Overview | 155 |
| Alerts and Alarms - Overview | 161 |
| Alerts and Alarms Overview | 161 |
| Alerts and Alarms-Alerts | 163 |
| Deleting an Alert | 163 |
| Searching Alerts | 163 |
| Using Generated Alerts | 164 |
| Alerts and Alarms-Alert Definitions | 166 |
| Creating Alert Definitions | 166 |
| Editing Alert Definitions | 169 |
| Cloning Alert Definition | 170 |
| Deleting Alert Definitions | 171 |
| Searching Alert Definitions | 171 |
| Alert Definitions Main Page Fields | 172 |
| Alerts and Alarms-Alarms | 173 |
| Using Device Alarms | 173 |

Device Alarms Main Page Fields | 175

VPN | 176

IPsec VPN Monitoring Overview | 176

About the Overview Page | 179

Managing Monitored and Unmonitored VPNs | 181

About the Monitored Tunnels Page | 182

About the Devices Page | 183

Insights | 186

How to Monitor Incidents | 186

How to Monitor Mitigation | 193

Job Management | 195

Using Job Management in Security Director | 195

Overview of Jobs in Security Director | 197

Archiving and Purging Jobs in Security Director | 198

Viewing the Details of a Job in Security Director | 200

Canceling Jobs in Security Director | 202

Reassigning Jobs in Security Director | 203

Rescheduling and Modifying the Recurrence of Jobs in Security Director | 204

Retrying a Failed Job on Devices in Security Director | 206

Exporting the Details of a Job in Security Director | 208

Job Management Main Page Fields | 209

Audit Logs | 212

Using Audit Logs in Security Director | 212

Understanding Audit Logs in Security Director | 213

Purging or Archiving and Purging Audit Logs in Security Director | 214

Exporting Audit Logs in Security Director | 217

Viewing the Details of an Audit Log in Security Director | 218

Audit Logs Main Page Fields | 219

Packet Capture | 221

Packet Capture Overview | 221

About the Packets Captured Page | 222

Setting the Purge Policy | 224

NSX Inventory-Security Groups | 225

About the Security Groups Page | 225

View Members of a Security Group | 226

vCenter Server Inventory-Virtual Machines | 228

About the Virtual Machines Page | 228

View Network Details of a Virtual Machine | 229

View Security Groups of a Virtual Machine | 230

Data Plane Packet Capture | 232

About the Data Plane Packet Capture Page | 232

Capture Data Plane Packets | 232

4

Devices

Security Devices | 236

Using Features in Security Devices | 237

Security Devices Overview | 240

Add Devices to Juniper Security Director Cloud | 241

Updating Security-Specific Configurations or Services on Devices | 243

Resynchronizing Managed Devices with the Network in Security Director | 244

Performing Commit Check | 245

Logical Systems Overview | 246

Tenant Systems Overview | 247

Create a Logical System | 247

Add Logical Systems in Bulk | 247

Add Individual Logical System at a Time | 248

Create a Tenant System | 252

Add Tenant Systems in Bulk | 253

Add Individual Tenant System at a Time | 253

Uploading Authentication Keys to Devices in Security Director | 258

Modifying the Configuration of Security Devices | 261

Modifying the Basic Configuration for Security Devices | 264

Modifying the Static Routes Configuration for Security Devices | 276

Modifying the Routing Instances Configuration for Security Devices | 282

Modifying the Physical Interfaces Configuration for Security Devices | 285

Modifying the Syslog Configuration for Security Devices | 292

Modifying the Security Logging Configuration for Security Devices | 302

Modifying the Link Aggregation for Security Devices | 308

Modifying the User Management Configuration for Security Devices | 312

Modifying the Screens Configuration for Security Devices | 323

Modifying the Zones Configuration for Security Devices | 336

Modifying the IPS Configuration for Security Devices | 341

Modifying the SSL Initiation Profile for Security Devices | 343

Modifying the ICAP Redirect Profile for Security Devices | 345

Configuring Aruba ClearPass for Security Devices | 349

Configuring APBR Tunables for Security Devices | 353

Modifying the Express Path Configuration for Security Devices | 354

Modifying the Device Information Source Configuration for Security Devices | 356

Viewing the Active Configuration of a Device in Security Director | 357

Deleting Devices in Security Director | 359

Rebooting Devices in Security Director | 360

Resolving Key Conflicts in Security Director | 361

Launching a Web User Interface of a Device in Security Director | 362

Connecting to a Device by Using SSH in Security Director | 363

Importing Security Policies to Security Director | 365

Importing Device Changes | 366

Viewing Device Changes | 367

Viewing and Exporting Device Inventory Details in Security Director | 367

Previewing Device Configurations | 371

Refreshing Device Certificates | 372

Assigning Security Devices to Domains | 373

Acknowledging Device SSH Fingerprints in Security Director | 374

Viewing Security Device Details | 376

Security Devices Main Page Fields | 376

Device Discovery | 383

Overview of Device Discovery in Security Director | 383

Creating Device Discovery Profiles in Security Director | 384

Editing, Cloning, and Deleting Device Discovery Profiles in Security Director | 388

Editing Device Discovery Profiles | 388

Cloning Device Discovery Profile | 389

Deleting Device Discovery Profiles | 389

Running a Device Discovery Profile in Security Director | 390

Viewing the Device Discovery Profile Details in Security Director | 390

Device Discovery Main Page Fields | 392

Secure Fabric | 394

Creating Secure Fabric and Sites | 394

Secure Fabric Overview | 396

Adding Enforcement Points | 398

Editing or Deleting a Secure Fabric | 401

Logical System and Virtual Routing and Forwarding Instance Overview | 401

About the Secure Fabric Tenants Page | 404

Create Secure Fabric Tenants | 405

NSX Managers | 407

Understanding Juniper Connected Security for VMware NSX Integration | 407

Understanding Juniper Connected Security for VMware NSX-T Integration | 411

Before You Deploy vSRX in VMware NSX Environment | 414

Before You Deploy vSRX in VMware NSX-T Environment | 417

About the NSX Managers Page | 418

Download the SSH Key File | 421

Copy vSRX OVA Image File to Policy Enforcer from Linux Machines | 422

Copy vSRX OVA Image File to Policy Enforcer from MAC Machines | 422

Add the NSX Manager | 423

Registering Security Services | 425

Editing NSX Managers | 427

Viewing Service Definitions | 427

Deleting the NSX Manager | 428

Delete the NSX-T Manager | 431

Deploying the vSRX as an Advanced Security Service in a VMware NSX Environment | 433

Creating a Security Group (VMware vCenter Server) | 433

Discovering the NSX Manager and Registering vSRX as a Security Service in vSphere cluster | 435

Deploying vSRX as a Security Service on a vSphere Cluster (VMware vCenter Server) | 439

Verifying vSRX Agent VM Deployment in Security Director | 443

Automatic Creation of Security Policy in the NSX Environment to Direct Traffic Through the vSRX Agent VMs (VMware vCenter Server) | 445

Deploy the vSRX as an Advanced Security Service in a VMware NSX-T Environment | 448

Create a Security Group | 448

Discover the NSX-T Manager and Register vSRX as a Security Service | 449

- Deploy vSRX as a Security Service | 454

- Verify vSRX Agent VM Deployment in Security Director | 454

- Automatic Creation of Security Policy in the NSX-T Environment to Direct Traffic Through the vSRX Agent VMs | 455

vCenter Servers | 458

About the vCenter Servers Page | 458

Licenses | 460

About the Licenses Page | 460

License Management Overview | 464

Managing Licenses | 466

- Deploy a License on a Device | 466

- View the License Push History Details | 466

Configure

Firewall Policy-Standard Policies | 471

Firewall Policies Overview | 472

Policy Ordering Overview | 475

Creating Firewall Policies | 478

Firewall Policies Best Practices | 481

Creating Firewall Policy Rules | 482

Rule Base Overview | 492

Firewall Policy Locking Modes | 494

- Manually Locking a Policy | 495

- Manually unlocking a Policy | 495

- Switching Manual Lock to Automatic Lock for a policy | 496

Rule Operations on Filtered Rules Overview | 496

Create and Manage Policy Versions | 497

- Create Policy Snapshots | 498

- Manage Policy Versions | 498

- Roll Back Policy Versions | 498

- Compare Policy Versions | 499

| | |
|--|-----|
| Delete Policy Versions | 499 |
| Assigning Devices to Policies | 500 |
| Comparing Policies | 501 |
| Export Policies | 502 |
| Export a policy to PDF | 502 |
| Export a policy to a ZIP file: | 502 |
| Creating Custom Columns | 503 |
| Promoting to Group Policy | 505 |
| Converting Standard Policy to Unified Policy | 507 |
| Probe Latest Policy Hits | 508 |
| Disable Firewall Policy Rules Based on Hits Over a Specified Duration | 508 |
| Configure the Application Settings | 509 |
| Disable Rules Based on Hits | 509 |
| Viewing and Synchronizing Out-of-Band Firewall Policy Changes Manually | 510 |
| Viewing Out-of-Band Firewall Policy Changes | 510 |
| Importing Out-of-Band Firewall Policy Changes Manually | 511 |
| Importing Policies | 512 |
| Delete and Replace Policies and Objects | 513 |
| Delete Policies and Objects | 514 |
| Replace Policies and Objects | 514 |
| Unassigning Devices from Policies | 514 |
| Edit and Clone Policies and Objects | 515 |
| Edit Policies or Objects | 515 |
| Clone Policies or Objects | 516 |
| Publishing Policies | 516 |
| Showing Duplicate Policies and Objects | 517 |
| Show and Delete Unused Policies and Objects | 518 |
| Show Unused Policies and Objects | 518 |
| Delete Unused Policies and Objects | 518 |

Updating Policies on Devices | 519

Firewall Policies Main Page Fields | 520

Firewall Policy Rules Main Page Fields | 521

Firewall Policy-Unified Policies | 526

About the Unified Policies Page | 526

Unified Policy Overview | 528

Creating Unified Firewall Policies | 530

Creating Unified Firewall Policy Rules | 533

Configuring a Default SSL Proxy Profile | 544

- Creating a default SSL Proxy Profile | 544

- Editing a Default SSL Proxy Profile | 545

- Updating a Default SSL Profile on a Device | 545

- Deleting a Default SSL Proxy Profile | 546

Configure a Default IDP Policy | 547

- Create a Default IDP Policy | 547

- Edit a Default IDP Policy | 548

- Delete a Default IDP Policy | 548

Firewall Policy-Devices | 549

Devices with Firewall Policies Main Page Fields | 549

Firewall Policy-Schedules | 551

Schedules Overview | 551

Creating Schedules | 552

Schedules Main Page Fields | 553

Firewall Policy-Profiles | 555

Understanding Firewall Policy Profiles | 555

Understanding Captive Portal Support for Unauthenticated Browser Users | 556

Creating Firewall Policy Profiles | 557

Edit and Clone Policies and Objects | 565

- Edit Policies or Objects | 565
- Clone Policies or Objects | 565

Delete and Replace Policies and Objects | 566

- Delete Policies and Objects | 566
- Replace Policies and Objects | 566

Assigning Policies and Profiles to Domains | 567

Firewall Policy Profiles Main Page Fields | 568

Firewall Policy-Templates | 569

Understanding Firewall Policy Templates | 569

Creating Firewall Policy Templates | 569

Edit and Clone Policies and Objects | 571

- Edit Policies or Objects | 571
- Clone Policies or Objects | 571

Delete and Replace Policies and Objects | 572

- Delete Policies and Objects | 572
- Replace Policies and Objects | 572

Firewall Policy Templates Main Page Fields | 573

Firewall Policy-Secure Web Proxy | 575

About the Secure Web Proxy Page | 575

Create a Secure Web Proxy Profile | 577

Edit, Clone, and Delete a Secure Web Proxy Profile | 578

- Edit a Secure Web Proxy Profile | 579
- Clone a Secure Web Proxy Profile | 579
- Delete a Secure Web Proxy Profile | 579

Assign Secure Web Proxy Profile to a Domain | 580

Find Secure Web Proxy Profile Usage Details | 580

Firewall Policy-DNS Security & ETI Profile | 581

DNS Security and Encrypted Traffic Insights Overview | 581

About the DNS Security and ETI Profile Page | 582

Create a DNS Security and ETI Profile | 583

Clone, Edit, and Delete DNS Security and ETI Profile | 586

Clone a DNS Security and ETI Profile | 586

Edit a DNS Security and ETI Profile | 586

Delete a DNS Security and ETI Profile | 587

Firewall Policy-DNS Security & ETI Policy | 588

About the DNS Security and ETI Policy Page | 588

Create a DNS Security and ETI Policy | 589

Edit and Delete DNS Security and ETI Policy | 590

Edit a DNS Security and ETI Policy | 590

Delete a DNS Security & ETI Policy | 591

Firewall Policy-DNS Sinkhole | 592

About the DNS Sinkhole Page | 592

Create a Sinkhole | 594

Assign Devices to a Sinkhole | 595

Unassign Devices from a Sinkhole | 595

Clone a Sinkhole | 595

Assign a Sinkhole to a Domain | 596

Publish a DNS Sinkhole Policy | 596

Update a DNS Sinkhole Policy | 597

Edit and Delete a Sinkhole | 598

Edit a Sinkhole | 598

Delete a Sinkhole | 598

Environment | 599

Environment Variables and Conditions Overview | 599

About the Environment Page | 601

Creating a New Environment Variable | 604

Editing and Deleting Environment Variables | 605

- Editing Environment Variables | 605
- Deleting an Environment Variable | 606

Creating a New Environment Condition | 606

Editing and Deleting Environment Conditions | 608

- Editing an Environment Condition | 608
- Deleting an Environment Condition | 608

Application Firewall Policy-Policies | 610

Understanding Application Firewall Policies | 610

Creating Application Firewall Policies | 611

Delete and Replace Policies and Objects | 614

- Delete Policies and Objects | 615
- Replace Policies and Objects | 615

Edit and Clone Policies and Objects | 615

- Edit Policies or Objects | 616
- Clone Policies or Objects | 616

Show and Delete Unused Policies and Objects | 617

- Show Unused Policies and Objects | 617
- Delete Unused Policies and Objects | 617

Finding Usages for Policies and Objects | 618

Application Firewall Policies Main Page Fields | 618

Application Firewall Policy-Signatures | 620

Understanding Custom Application Signatures | 620

Creating Application Signatures | 623

Editing, Cloning, and Deleting Custom Application Signatures | 628

- Editing Custom Application Signatures | 628
- Cloning Custom Application Signatures | 629
- Deleting Custom Application Signatures | 629

Creating Application Signature Groups | 630

Application Signatures Main Page Fields | 631

Application Firewall Policy-Redirect Profiles | 633

About the Redirect Profiles Page | 633

Adding a Redirect Profile | 634

Cloning, Editing, and Deleting Redirect Profiles | 636

Cloning Redirect Profiles | 636

Editing Redirect Profile | 636

Deleting Redirect Profile | 636

SSL Profiles | 638

SSL Forward Proxy Overview | 638

Creating SSL Forward Proxy Profiles | 647

SSL Forward Proxy Profile Main Page Fields | 653

SSL Reverse Proxy Overview | 654

Creating SSL Reverse Proxy Profiles | 656

User Firewall Management-Active Directory | 662

About the Active Directory Profile Page | 662

Creating Active Directory Profiles | 664

Deploying the Active Directory Profile to SRX Series Devices | 669

Editing and Deleting Active Directory Profiles | 671

Editing Active Directory Profiles | 671

Deleting Active Directory Profiles | 671

User Firewall Management-Access Profile | 673

Access Profile Overview | 673

About the Access Profile Page | 674

Creating Access Profiles | 676

Deploying the Access Profile to SRX Series Devices | 683

Editing and Deleting Access Profiles | 684

Editing Access Profiles | 684

Deleting Access Profiles | 685

User Firewall Management-Address Pools | 687

About the Address Pool Page | 687

Create Address Pool | 688

Edit and Delete Address Pool | 689

 Edit an Address Pool | 690

 Delete an Address Pool | 690

User Firewall Management-Identity Management | 691

Juniper Identity Management Service Overview | 691

About the Identity Management Profile Page | 693

Creating Identity Management Profiles | 695

Editing, Cloning, and Deleting Identity Management Profiles | 699

 Editing Identity Management Profiles | 699

 Cloning Identity Management Profiles | 699

 Deleting Identity Management Profiles | 700

Updating the Identity Management Profile to SRX Series Devices | 700

User Firewall Management-End User Profile | 702

End User Profile Overview | 702

About the End User Profile Page | 703

Creating an End User Profile | 704

Edit and Delete End User Profile | 706

 Edit End User Profile | 707

 Delete End User Profile | 707

End User Profile Operations | 707

 Cloning an End User Profile | 708

 Finding a Profile That Uses a Specific End User Profile | 708

 Viewing Details of an End User Profile | 708

IPS Policy-Policies | 710

Understanding IPS Policies | 710

Creating IPS Policies | 714

[Creating IPS Policy Rules | 716](#)

[Publishing Policies | 730](#)

[Updating Policies on Devices | 730](#)

[Assigning Devices to Policies | 731](#)

[Create and Manage Policy Versions | 732](#)

[Create Policy Snapshots | 733](#)

[Manage Policy Versions | 733](#)

[Roll Back Policy Versions | 734](#)

[Compare Policy Versions | 734](#)

[Delete Policy Versions | 735](#)

[Creating Rule Name Template | 735](#)

[Export Policies | 736](#)

[Export a policy to PDF | 737](#)

[Export a policy to a ZIP file: | 737](#)

[Unassigning Devices to Policies | 737](#)

[Viewing and Synchronizing Out-of-Band IPS Policy Changes Manually | 738](#)

[Viewing Out-of-Band IPS Policy Changes | 739](#)

[Importing Out-of-Band IPS Policy Changes Manually | 739](#)

[Edit and Clone Policies and Objects | 741](#)

[Edit Policies or Objects | 741](#)

[Clone Policies or Objects | 741](#)

[Delete and Replace Policies and Objects | 742](#)

[Delete Policies and Objects | 742](#)

[Replace Policies and Objects | 742](#)

[Assigning Policies and Profiles to Domains | 743](#)

[IPS Policies Main Page Fields | 744](#)

[IPS Policy-Devices | 746](#)

[Understanding IPS Policies | 746](#)

[Devices with IPS Policies Main Page Fields | 748](#)

IPS Policy-Signatures | 749

Understanding IPS Signatures | 749

Creating IPS Signatures | 750

Creating IPS Signature Static Groups | 759

Creating IPS Signature Dynamic Groups | 760

Edit and Clone Policies and Objects | 769

 Edit Policies or Objects | 769

 Clone Policies or Objects | 769

Delete and Replace Policies and Objects | 770

 Delete Policies and Objects | 770

 Replace Policies and Objects | 770

IPS Policy Signatures Main Page Fields | 771

IPS Policy-Templates | 773

Understanding IPS Policy Templates | 773

Creating IPS Policy Templates | 774

Edit and Clone Policies and Objects | 775

 Edit Policies or Objects | 775

 Clone Policies or Objects | 775

Delete and Replace Policies and Objects | 776

 Delete Policies and Objects | 776

 Replace Policies and Objects | 776

IPS Policy Templates Main Page Fields | 777

NAT Policy-Policies | 779

NAT Overview | 779

NAT Global Address Book Overview | 783

Creating NAT Policies | 784

Publishing Policies | 786

NAT Policy Rules Main Page Field | 787

| | |
|---|------------|
| Creating NAT Rules | 789 |
| Updating Policies on Devices | 794 |
| Edit and Clone Policies and Objects | 795 |
| Edit Policies or Objects | 796 |
| Clone Policies or Objects | 796 |
| Delete and Replace Policies and Objects | 797 |
| Delete Policies and Objects | 797 |
| Replace Policies and Objects | 797 |
| Assigning Policies and Profiles to Domains | 798 |
| Comparing Policies | 799 |
| Create and Manage Policy Versions | 799 |
| Create Policy Snapshots | 800 |
| Manage Policy Versions | 800 |
| Roll Back Policy Versions | 800 |
| Compare Policy Versions | 801 |
| Delete Policy Versions | 801 |
| Export Policies | 802 |
| Export a policy to PDF | 802 |
| Export a policy to a ZIP file: | 802 |
| Assigning Devices to Policies | 803 |
| Unassigning Devices to Policies | 804 |
| Creating Rule Name Template | 805 |
| Viewing and Synchronizing Out-of-Band NAT Policy Changes Manually | 806 |
| Viewing Out-of-Band NAT Policy Changes | 807 |
| Importing Out-of-Band NAT Policy Changes Manually | 807 |
| Configuring NAT Rule Sets | 809 |
| Auto Grouping | 809 |
| NAT Policies Main Page Fields | 810 |
| NAT Policy-Devices | 812 |

Devices with NAT Policies Main Page Fields | 812

NAT Policy-Pools | 814

Creating NAT Pools | 814

Edit and Clone Policies and Objects | 818

 Edit Policies or Objects | 818

 Clone Policies or Objects | 818

Delete and Replace Policies and Objects | 819

 Delete Policies and Objects | 819

 Replace Policies and Objects | 819

Show and Delete Unused Policies and Objects | 820

 Show Unused Policies and Objects | 820

 Delete Unused Policies and Objects | 820

Showing Duplicate Policies and Objects | 821

Assigning Policies and Profiles to Domains | 822

NAT Pools Main Page Fields | 823

NAT Policy-Port Sets | 824

Creating Port Sets | 824

Delete and Replace Policies and Objects | 825

 Delete Policies and Objects | 825

 Replace Policies and Objects | 826

Edit and Clone Policies and Objects | 826

 Edit Policies or Objects | 827

 Clone Policies or Objects | 827

Show and Delete Unused Policies and Objects | 827

 Show Unused Policies and Objects | 828

 Delete Unused Policies and Objects | 828

Showing Duplicate Policies and Objects | 829

Assigning Policies and Profiles to Domains | 830

Port Sets Main Page Fields | 830

Content Security Policy-Policies | 832

Content Security Overview | 832

Creating Content Security Policies | 835

Comparing Policies | 836

Delete and Replace Policies and Objects | 837

- Delete Policies and Objects | 837

- Replace Policies and Objects | 838

Viewing Policy and Shared Object Details | 838

Assigning Policies and Profiles to Domains | 839

Showing Duplicate Policies and Objects | 840

Edit and Clone Policies and Objects | 840

- Edit Policies or Objects | 840

- Clone Policies or Objects | 841

Show and Delete Unused Policies and Objects | 841

- Show Unused Policies and Objects | 842

- Delete Unused Policies and Objects | 842

Content Security Policies Main Page Fields | 843

Content Security Policy-Web Filtering Profiles | 844

Creating Web Filtering Profiles | 844

Selecting a Web Filtering Solution | 849

Web Filtering Profile Main Page Fields | 850

Content Security Policy-Category Update | 851

About the Category Update Page | 851

Configuring the Download URL Settings | 853

Downloading and Installing URL Categories | 854

Uploading and Installing URL Categories | 855

Installing URL Categories on SRX Series Devices | 856

Content Security Policy-Antivirus Profiles | 857

Creating Antivirus Profiles | 857

Antivirus Profile Main Page Fields | 860

Content Security Policy-Antispam Profiles | 861

Creating Antispam Profiles | 861

Antispam Profile Main Page Fields | 863

Content Security Policy-Content Filtering Profiles | 865

Creating Content Filtering Profiles | 865

Content Filtering Profile Main Page Fields | 868

Content Security Policy-Global Device Profiles | 870

Creating Device Profiles | 870

Device Profiles Main Page Fields | 873

Content Security Policy-Default Configuration | 875

About the Default Configuration Page | 875

Create a Default Content Security Configuration | 877

Edit and Clone the Default Configuration | 894

 Edit the Default Configuration | 894

 Clone the Default Configuration | 895

View and Delete Unused Default Configuration | 895

 View Unused Default Configuration | 895

 Deleting Unused Default Configuration | 896

Content Security Policy-URL Patterns | 897

Creating URL Patterns | 897

Content Security Policy-Custom URL Categories | 899

Creating Custom URL Category Lists | 899

Application Routing Policies | 901

Understanding Application-Based Routing | 901

About the Application Routing Policies Page | 904

Configuring Advanced Policy-Based Routing Policy | 906

About the Rules Page (Advanced Policy-Based Routing) | 907

Creating Advanced Policy-Based Routing Rules | 908

About the App Based Routing Page | 910

Edit and Clone Policies and Objects | 912

 Edit Policies or Objects | 912

 Clone Policies or Objects | 912

Assigning Devices to Policies | 913

Customizing Profile Names | 914

Publishing Policies | 914

Updating Policies on Devices | 915

Threat Prevention - Policies | 917

Creating Threat Prevention Policies | 917

Threat Prevention Policy Overview | 924

Threat Policy Analysis Overview | 927

Implementing Threat Policy on VMWare NSX | 928

 VMWare NSX Integration with Policy Enforcer and Juniper ATP Cloud Overview | 928

 Before You Begin | 931

 Infected Hosts Workflow in VMware vCenter Server | 931

 Configuring VMware NSX with Policy Enforcer | 933

 Example: Creating a Firewall Rule in VMWare vCenter Server Using SDSN_BLOCK Tag | 936

Threat Prevention - Feed Sources | 939

About the Feed Sources Page | 939

Juniper ATP Cloud Realm Overview | 945

Juniper ATP Cloud Malware Management Overview | 945

Juniper ATP Cloud Email Management Overview | 946

File Inspection Profiles Overview | 948

Juniper ATP Cloud Email Management: SMTP Settings | 949

Configure IMAP Settings | 952

Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites | 955

Modifying Juniper ATP Cloud Realm | 959

Creating File Inspection Profiles | 960

Creating Allowlist for Juniper ATP Cloud Email and Malware Management | 963

Creating Blocklists for Juniper ATP Cloud Email and Malware Management | 964

Add ATP Appliance Server | 966

Edit or Delete a ATP Appliance Server | 968

Custom Feed Sources Overview | 969

Creating Custom Feeds | 971

Example: Creating a Dynamic Address Custom Feed and Firewall Policy | 976

Configuring Settings for Custom Feeds | 978

IPsec VPN-VPNs | 980

IPsec VPN Overview | 981

Create a Site-to-Site VPN | 984

Create a Hub-and-Spoke (Establishment All Peers) VPN | 998

Create a Hub-and-Spoke (Establishment by Spokes) VPN | 1010

Create a Hub-and-Spoke Auto Discovery VPN | 1023

Create a Full Mesh VPN | 1035

Create a Remote Access VPN—Juniper Secure Connect | 1047

Create a Remote Access VPN—NCP Exclusive Client | 1057

IPsec VPN Global Settings | 1067

Understanding IPsec VPN Modes | 1069

Comparison of Policy-Based VPNs and Route-Based VPNs | 1069

Understanding IPsec VPN Routing | 1071

Understanding IKE Authentication | 1072

Publishing IPsec VPNs | 1073

| | |
|--|-------------|
| Updating IPsec VPN | 1074 |
| Modify IPsec VPN Settings | 1074 |
| Modify Device Selection | 1075 |
| Viewing Tunnels | 1075 |
| Importing IPsec VPNs | 1076 |
| Deleting IPsec VPN | 1079 |
| IPsec VPN Main Page Fields | 1079 |
| IPsec VPN-Extranet Devices | 1081 |
| Creating Extranet Devices | 1081 |
| Find Usage for Extranet Devices | 1082 |
| Extranet Devices Main Page Fields | 1083 |
| IPsec VPN-Profiles | 1084 |
| VPN Profiles Overview | 1084 |
| Creating VPN Profiles | 1085 |
| Edit and Clone IPsec VPN profiles | 1092 |
| Edit a VPN Profile | 1092 |
| Clone IPsec VPN Profile | 1092 |
| Assigning Policies and Profiles to Domains | 1093 |
| VPN Profiles Main Page Fields | 1094 |
| Insights | 1096 |
| About the Log Parsers Page | 1096 |
| Create a New Log Parser | 1098 |
| Edit and Delete a Log Parser | 1103 |
| Edit a Log Parser | 1103 |
| Delete a Log Parser | 1103 |
| About the Log Sources Page | 1104 |
| Add a Log Source | 1106 |

Edit and Delete a Log Source | 1107

 Edit a Log Source | 1107

 Delete a Log Source | 1108

View Log Statistics | 1108

About the Event Scoring Rules Page | 1109

Create an Event Scoring Rule | 1110

Edit and Delete Event Scoring Rules | 1112

 Edit an Event Scoring Rule | 1112

 Delete an Event Scoring Rule | 1113

About the Incident Scoring Rules Page | 1113

Create an Incident Scoring Rule | 1115

Edit and Delete Incident Scoring Rules | 1116

 Edit an Incident Scoring Rule | 1116

 Delete an Incident Scoring Rule | 1116

Shared Objects-Geo IP | 1118

Creating Geo IP Policies | 1118

Geo IP Overview | 1120

Delete and Replace Policies and Objects | 1120

 Delete Policies and Objects | 1120

 Replace Policies and Objects | 1121

Shared Objects-Policy Enforcement Groups | 1122

Creating Policy Enforcement Groups | 1122

Policy Enforcement Groups Overview | 1124

Shared Objects-Addresses | 1126

Addresses and Address Groups Overview | 1126

Creating Addresses and Address Groups | 1127

Import and Export CSV Files | 1131

 Import from a CSV file | 1132

 Export to a CSV File | 1134

Assigning Addresses and Address Groups to Domains | 1134

Showing Duplicate Policies and Objects | 1135

Delete and Replace Policies and Objects | 1136

- Delete Policies and Objects | 1136

- Replace Policies and Objects | 1136

- Delete Unused Policies and Objects | 1137

Addresses Main Page Fields | 1137

Shared Objects-Services | 1139

Services and Service Groups Overview | 1139

Creating Services and Service Groups | 1140

Import and Export CSV Files | 1147

- Import from a CSV file | 1147

- Export to a CSV File | 1149

Delete and Replace Policies and Objects | 1150

- Delete Policies and Objects | 1150

- Replace Policies and Objects | 1150

Showing Duplicate Policies and Objects | 1151

Shared Objects-Variables | 1153

Variables Overview | 1153

Creating Variables | 1154

Editing Variables | 1157

Import and Export CSV Files | 1157

- Import from a CSV file | 1157

- Export to a CSV File | 1158

Showing Duplicate Policies and Objects | 1158

Shared Objects-Zone Sets | 1159

Understanding Zone Sets | 1159

Creating Zone Sets | 1161

Edit and Clone Policies and Objects | 1163

- Edit Policies or Objects | 1163

- Clone Policies or Objects | 1163

Delete and Replace Policies and Objects | 1164

- Delete Policies and Objects | 1164

- Replace Policies and Objects | 1164

Finding Usages for Policies and Objects | 1165

Show and Delete Unused Policies and Objects | 1165

- Show Unused Policies and Objects | 1166

- Delete Unused Policies and Objects | 1166

Showing Duplicate Policies and Objects | 1167

Viewing Policy and Shared Object Details | 1168

Zone Sets Main Page Fields | 1168

Shared Objects-Metadata | 1170

Metadata-Based Policy Enforcement Overview | 1170

About the Metadata Page | 1171

Creating a Metadata | 1172

Change Management-Change Requests | 1174

Change Control Workflow Overview | 1174

Creating a Firewall or NAT Policy Change Request | 1177

About the Changes Submitted Page | 1179

Approving and Updating Changes Submitted | 1181

Creating and Updating a Firewall Policy Using Change Control Workflow | 1183

- Creating a Change Request | 1183

- Approving a Change Request | 1186

- Publishing and Updating the Approved Change Request | 1189

Editing, Denying, and Deleting Change Requests | 1191

- Editing Changes Submitted | 1191

- Denying Changes Submitted | 1191

| | |
|--|-------------|
| Deleting Changes Submitted | 1192 |
| About the Changes Not Submitted Page | 1192 |
| Discarding Policy Changes | 1194 |
| Viewing Submitted and Unsubmitted Policy Changes | 1195 |
| Change Management-Change Request History | 1197 |
| About the Change Request History Page | 1197 |
| Overview of Policy Enforcer and Juniper ATP Cloud | 1200 |
| Policy Enforcer Overview | 1200 |
| Benefits of Policy Enforcer | 1203 |
| Juniper ATP Cloud Overview | 1205 |
| Concepts and Configuration Types to Understand Before You Begin (Policy Enforcer and Juniper ATP Cloud) | 1208 |
| Policy Enforcer Components and Dependencies | 1208 |
| Policy Enforcer Configuration Concepts | 1214 |
| Juniper ATP Cloud Configuration Type Overview | 1215 |
| Features By Juniper ATP Cloud Configuration Type | 1219 |
| Available UI Pages by Juniper ATP Cloud Configuration Type | 1220 |
| Comparing the Juniper Connected Security and non-Juniper Connected Security Configuration Steps | 1223 |
| Installing Policy Enforcer | 1225 |
| Policy Enforcer Installation Overview | 1225 |
| Deploying and Configuring the Policy Enforcer with OVA files | 1227 |
| Installing Policy Enforcer with KVM | 1234 |
| Installing Policy Enforcer with virt-manager | 1235 |
| Installing Policy Enforcer with virt-install | 1235 |
| Configuring Policy Enforcer Settings | 1237 |
| Connecting to the KVM Management Console | 1243 |
| Policy Enforcer Ports | 1243 |

Identifying the Policy Enforcer Virtual Machine In Security Director | **1246**

Obtaining a Juniper ATP Cloud License | **1247**

Creating a Juniper ATP Cloud Web Portal Login Account | **1248**

Loading a Root CA | **1248**

Upgrading Your Policy Enforcer Software | **1250**

Configuring Policy Enforcer Settings and Connectors | 1253

Policy Enforcer Settings | **1253**

Policy Enforcer Connector Overview | **1256**

Creating a Policy Enforcer Connector for Public and Private Clouds | **1259**

Creating a Policy Enforcer Connector for Third-Party Switches | **1270**

Editing and Deleting a Connector | **1275**

- Editing a Connector | **1275**

- Deleting a Connector | **1276**

Viewing VPC or Projects Details | **1277**

Integrating ForeScout CounterACT with Juniper Networks Connected Security | **1279**

- Configuring the DEX Plug-in | **1280**

- Configuring the Web API Plug-in | **1284**

- Creating ForeScout CounterACT Connector in Security Director | **1286**

ClearPass Configuration for Third-Party Plug-in | **1290**

Cisco ISE Configuration for Third-Party Plug-in | **1296**

Integrating Pulse Policy Secure with Juniper Networks Connected Security | **1306**

- Overview | **1307**

- Deployment of Pulse Policy Secure with Juniper Connected Security | **1307**

- Configuring Pulse Policy Secure with Juniper Connected Security | **1308**

 - Admission Control Template | **1313**

 - Admission Control Policies | **1313**

 - Admission Control Client | **1316**

- Creating Pulse Policy Secure Connector in Security Director | **1316**

- Troubleshooting | **1318**

Policy Enforcer Backup and Restore | 1322

Backing-Up Policy Enforcer | 1323

Restoring Policy Enforcer from a Backup File | 1326

Guided Setup-ATP Cloud with SDSN | 1328

Using Guided Setup for Juniper ATP Cloud with Juniper Connected Security | 1328

Guided Setup-ATP Cloud | 1334

Using Guided Setup for Juniper ATP Cloud | 1334

Guided Setup for No ATP Cloud (No Selection) | 1337

Using Guided Setup for No Juniper ATP Cloud (No Selection) | 1337

Manual Configuration- ATP Cloud with SDSN | 1341

Configuring Juniper ATP Cloud with Juniper Connected Security (Without Guided Setup)
Overview | 1341

Manual Configuration-ATP Cloud | 1343

Configuring Juniper ATP Cloud (No Juniper Connected Security and No Guided Setup) Overview | 1343

Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites | 1344

Cloud Feeds Only Threat Prevention | 1349

Configuring Cloud Feeds Only | 1349

Configuring No ATP Cloud (No Selection) (without Guided Setup) | 1352

Configuring No ATP Cloud (No Selection) (without Guided Setup) Overview | 1352

Migration Instructions for Spotlight Secure Customers | 1354

Moving From Spotlight Secure to Policy Enforcer | 1354

6

Reports

Reports | 1376

Creating Log Report Definitions | 1376

Creating Policy Analysis Report Definitions | 1380

Creating Bandwidth Report Definitions | 1383

Reports Overview | 1385

Using Reports | 1386

Using Report Definitions | 1388

Editing Report Definitions | 1389

Deleting Report Definitions | 1390

Managing Report | 1390

Report Definition Main Page Fields | 1393

Administration

My Profile | 1399

Modifying Your User Profile in Security Director | 1399

Users and Roles-Users | 1402

Overview of Users in Security Director | 1402

Creating Users in Security Director | 1403

Editing and Deleting Users in Security Director | 1407

- Editing Users | 1407

- Deleting Users | 1407

Viewing and Terminating Active User Sessions in Security Director | 1408

- Viewing Active User Sessions | 1408

- Terminating Active User Sessions | 1409

Viewing the User Details in Security Director | 1410

Clearing Local Passwords for Users in Security Director | 1411

Disabling and Enabling Users in Security Director | 1413

- Disabling Users | 1413

- Enabling Users | 1413

Unlocking Users in Security Director | 1414

Users Main Page Fields | 1415

Users and Roles-Roles | 1417

Domain RBAC Overview | 1417

Creating Customized Roles in Security Director | 1424

Understanding Roles in Security Director | 1426

Editing, Cloning, and Deleting Roles in Security Director | 1426

- Editing Roles | 1426
- Cloning Roles | 1427
- Deleting Roles | 1427

Viewing the Details of a Role in Security Director | 1428

Importing and Exporting Roles in Security Director | 1429

- Importing Roles | 1429
- Exporting Roles | 1429

Roles Main Page Fields | 1430

Users and Roles-Domains | 1431

Overview of Domains in Security Director | 1431

Creating Domains in Security Director | 1432

Edit and Delete Domains in Security Director | 1434

- Edit Domains | 1434
- Delete Domains | 1434

Exporting Domains in Security Director | 1435

Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director | 1436

Assigning Devices to Domains in Security Director | 1438

Assigning and Unassigning Remote Profiles to Domains in Security Director | 1439

- Assigning Remote Profiles to Domains | 1439
- Unassigning Remote Profiles from Domains | 1439

Assigning and Unassigning Users to Domains in Security Director | 1440

- Assigning Users to Domains | 1440
- Unassigning Users from Domains | 1441

Domains Main Page Fields | 1441

Users and Roles-Remote Profiles | 1443

Creating Remote Profiles in Security Director | 1443

Overview of Remote Profiles in Security Director | 1445

Edit and Delete Remote Profiles in Security Director | 1445

- Edit Remote Profiles | 1446
- Delete Remote Profiles | 1446

Viewing the Details of a Remote Profile in Security Director | 1446

Remote Profiles Main Page Fields | 1448

Logging Management | 1449

Logging and Reporting Overview | 1449

Logging Management-Logging Nodes | 1451

Adding Logging Nodes | 1451

Enabling Log Forwarding | 1454

Logging Nodes Main Page Fields | 1455

Logging Management-Statistics & Troubleshooting | 1457

Using the Log Statistics and Troubleshooting | 1457

Logging Management-Logging Devices | 1459

Logging Devices Main Page Fields | 1459

Creating Security Logs | 1461

Monitor Settings | 1464

About the Monitor Settings Page | 1464

Monitor Settings Overview | 1465

Signature Database | 1467

Using the Signature Database | 1467

Understanding Signature Databases | 1468

Signature Database Main Page Fields | 1469

Installing the Signature Database Configuration | 1471

Downloading the Signature Database Configuration | 1472

Uploading the Signature Database Configuration from a File System | 1473

License Management | 1474

About the License Notification Settings Page | 1474

Notification Settings | 1476

- Schedule License Polling | 1476

- Enable License Notification Settings | 1477

- Create E-mail Settings | 1477

Migrating Content from NSM to Security Director | 1478

NSM Migration | 1478

Policy Sync Settings | 1482

About the Policy Sync Settings Page | 1482

Out-of-Band Changes Overview | 1487

Insights Management | 1489

Add Insights Nodes | 1489

About the Alerts Settings Page | 1493

Create a New Alert Setting | 1494

Configure System Settings | 1496

About the Identity Settings Page | 1498

Add JIMS Configuration | 1499

Edit and Delete an Identity Setting | 1501

- Edit a JIMS Configuration | 1501

- Delete a JIMS Configuration | 1501

Configure Mitigation Settings | 1502

About the Threat Intelligence Page | 1504

Configure Threat Intelligence Source | 1505

Edit and Delete Threat Intelligence Source | 1506

- Edit a Threat Intelligence Source | 1506

- Delete a Threat Intelligence Source | 1507

About the ServiceNow Configuration Page | 1507

About the Backup & Restore Page | 1509

Create a Backup File and Restore the Configuration | 1510

Create a New Backup File | **1510**

Restore a Configuration | **1511**

Download and Delete a Backup File | **1512**

Download a Backup File | **1512**

Delete a Backup File | **1512**

About This Guide

Use this guide to understand the Junos Space Security Director application - the next generation security management platform - its capabilities, and features.

1

PART

Junos Space Security Director

[Overview](#) | 2

CHAPTER 1

Overview

IN THIS CHAPTER

- [Junos Space Security Director Overview | 2](#)
- [Juniper Networks Connected Security Overview | 18](#)
- [Security Director Insights Overview | 20](#)

Junos Space Security Director Overview

IN THIS SECTION

- [Benefits of Junos Space Security Director | 4](#)
- [Access and Log in | 5](#)
- [Using Navigational Elements | 5](#)
- [Banner Overview | 6](#)
- [Junos Space Platform Link | 7](#)
- [Search Utility | 7](#)
- [Domain Switcher | 7](#)
- [Notification Center | 8](#)
- [User Functions Menu | 8](#)
- [Help Button | 8](#)
- [Search Overview | 8](#)
- [Search Patterns | 9](#)
- [Search Categories | 9](#)
- [Delimiter Search Limitations | 10](#)
- [Refresh Search Index | 10](#)
- [Main Workspace Overview | 11](#)

- Global Features | 16
- Conclusion | 17

Security Director is a Junos Space management application designed to enable quick, consistent, and accurate creation, maintenance, and application of network security policies. It features an intuitive GUI that provides isolation from the underlying Junos Space Platform, allowing security architects, analysts, and security operators to focus on their jobs. Security Director provides visibility, simplified management, and actionable security intelligence for applications, users, IP addresses, and threats that help network managers make informed security decisions.

Security Director presents the security-focused administrator with a tabbed interface: The tabs across the top of the GUI provide workspaces in which an administrator can perform specific tasks. [Table 1 on page 3](#) shows the names of the tabs along with brief descriptions of what is accessible in that workspace.

Table 1: Tabs and Their Functionality

| Tab Name | Accesses |
|-----------|---|
| Dashboard | Graphical security widgets that can be added, removed, and rearranged on a per user basis. These widgets offer each user a customized view of network security. |
| Monitor | Live threat maps and visual analysis of: <ul style="list-style-type: none">• Events received• User activity• Alerts and alarms |
| Devices | Device discovery and device management. |

Table 1: Tabs and Their Functionality (Continued)

| Tab Name | Accesses |
|----------------|--|
| Configure | Security-related management including: <ul style="list-style-type: none"> • Firewall policies • IPS policies • NAT policies • Content Security policies • VPN creation and management • Shared object management |
| Reports | Predefined security reports and the ability to create custom reports. |
| Administration | User and role management, logging management, and infrastructure management. |

Benefits of Junos Space Security Director


- Offers a single centralized management interface that enables administrators to manage all phases of the security policy life cycle—stateful firewall, Content Security , intrusion prevention, application firewall (AppFW), VPN, and NAT.
- Provides a simple user interface that enables new users to quickly become proficient.
- Automates the deployment of the most recent policy updates through the Policy Enforcer feature. The risk of compromise and human error is reduced as network administrators are able to work with a simple and concise rule set.
- Enables effective threat management while producing detailed data access and user activity reports. An action-oriented design enables the network administrator to detect threats across the network as they occur, quickly block the traffic going to or coming from a specific region, and apply immediate remedial action with a single click.
- Enables administrators to assess the effectiveness of each firewall rule and quickly identify the unused rules, which results in better management of the firewall environment.

- Simplifies policy creation and maintenance workflows through metadata-based policies, and streamlines threat remediation workflows through dynamic policy actions.
- Offers a seamless search function when correlating petabytes of data across hundreds of nodes.

Access and Log in

If you are working in the Junos Space Platform, you can access Security Director by selecting Security Director from the Applications drop-down list at the upper left corner of the Space GUI, as shown on the left side of [Figure 1 on page 5](#).

Figure 1: Security Director Access and Log in

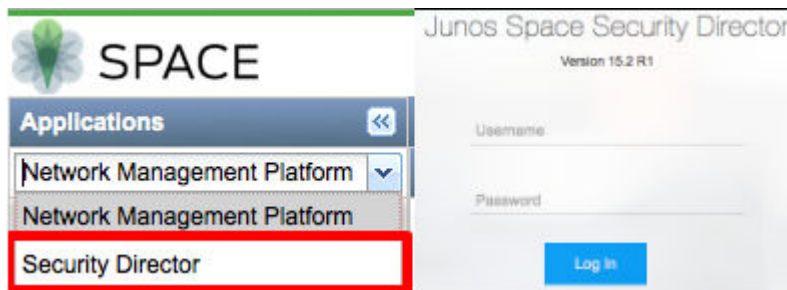






After you log out of the Security Director GUI (or the login timer expires while in Security Director), the next time you log in the Security Director login screen will appear, as shown on the right side of [Figure 1 on page 5](#). Once you use the Security Director login screen, that will remain your default login location unless and until you navigate to the Space Platform URL or return to the Space Platform GUI and either log out from there or let the login timer expire.

When the Security Director application is accessed for the first time, a getting started guide will overlay the Security Director Dashboard page. The guide is designed to assist new and longtime users by providing a quick reference to where functions are located within the new GUI. The guide can be dismissed for subsequent logins and accessed later through the help button on the right side of the banner.

Using Navigational Elements

For a more personal, helpful, and customizable user experience, Juniper Networks has provided some aids within the GUI. Table 2 shows a sample of navigation, customization, and help icons.

Table 2: Navigational Elements

| Element | Icon | Location |
|---|---|---|
| Breadcrumbs—Trace your location in the GUI. The breadcrumbs provide a path back to one of the six starting tabs: Dashboard, Monitor, Devices, Configure, Reports, and Administration. |  | Upper left part of main screen below the Monitor tab. Not visible on the Dashboard. |
| Info Tips—Hover your mouse over any available question mark icon for quick pop-up guidance. |  | Various places around the GUI. |
| Show and Hide Left-Nav—Click the hamburger icon to show or hide the left-nav section. |  | Left side of tab bar, below the Juniper Networks logo. |
| Show Hide Columns—In tabular displays, you can choose which columns are visible by clicking the icon and then selecting the check boxes on the menu. |  | Upper right corner of some tabular display windows such as the Reports tab and Devices tab. |
| Table Search—You can click this magnifying glass icon, within large tabular views, to search for specific text within any of the visible fields in the display. |  | Upper right corner of tabular views. Next to the Show Hide Columns icon. |

Banner Overview

The dark gray bar at the top of the screen is called the Banner. It provides access to system-wide utilities such as a link back to Junos Space Platform, a global search utility, a domain switcher, a notification center, a profile management access menu, and a help button.

Figure 2: Banner

Junos Space Platform Link

Figure 3: Junos Space Platform Link



The GUI for Security Director is designed to enhance security focus. Therefore, for administration or other tasks that are not security related, you will need a way to switch back to the Space Platform GUI. In Security Director, this can be accomplished by simply clicking the Juniper Networks logo in the upper left corner of the banner.

Search Utility

Figure 4: Search Utility



Sometimes you just need to search for things. Did I already create an address object for the corporate management network? Is there a URL category for gambling? If you find yourself in need of search capabilities, the Global Search Utility will fulfill your needs. Type a term into the search field and Security Director will show you all of the places where that term is found. The results lists are clickable, so that you can go directly to the found object simply by clicking.

Domain Switcher

Figure 5: Domain Switcher



Security Director supports multitenancy in the form of domains. Domains provide a customizable separation of managed assets and their configuration elements. See Domains Overview for more information.

Notification Center


Figure 6: Notification Center



On the right side of the banner is a bell-shaped icon called the Notification Center. Clicking this icon reveals lists of the top alerts and alarms in Security Director. Clicking the View All Alarms or View All Alerts links at the bottom of the drop-down menu takes you to the detail page for the respective topic.

User Functions Menu

Figure 7: User Functions Menu

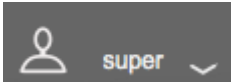

To the right of the Notification Center, there is a head-and-shoulders icon and a field showing the logged in user. Clicking your user name will allow you to access your user profile or log out of Security Director.

Help Button

Figure 8: Help Button



Access to the online Help system and the Getting Started Guide are available by clicking the right-most icon on the banner, shaped like a question mark. The help system includes access to a list of supported web browsers, user interface assistance, as well as links to technical support and full Security Director documentation.

Search Overview

You can search objects and devices from various tabs using a partial or full name, IP address, or other values. There are different categories of search in Security Director and supported patterns are regular expressions, partial word search, special character search, and so on.

Search Patterns

You can use the following regular expressions to search the objects.

- ***** (multiple character search)—If you do not know the full name of an object, use ***** at the start or end of the name.

For example, when you search with `test*` on the Addresses page, ILP displays the following results:

- `test-2-SRX`
- `test_1-SRX`
- **?** (single character search)—You can replace a single character with **?** in search text.

For example, when you search with `test?org?net` on the Addresses page, ILP displays `test.org.net` result.

Search limitations

- A partial name search with a single character replacement does not work. If the search text is split by any special character such as `-`, `_`, `/`, `:`, `.`, and `;` and if you try to search with a partial name, results will not be displayed.

For example, if address object name is `test-2-SRX`, and you try to search `test?2`, then results will not be displayed.

However, you can do a full text search including as many **?** in between the name, for example, `test?2?S?X`.

Search Categories

Global Search

Using global search, users can search any Security Director object including SRX Series devices with a name or an IP address. Global search checks the search text or IP address across all objects or devices of Security Director and displays the results in the user interface.

For example, if you create a firewall rule, scheduler, address, and service with same name in Security Director and search that name using the global search text box, the results are displayed with domains.

Global search results are displayed in the format `Name of the Object | Type of the Object | Domain Name`.

ILP Search

All objects and devices pages such as, address, service, firewall policy, firewall rule, and so on have search boxes at the top right corner (ILP search box). You can search using a name, a device IP address, and so on.

For example, in a firewall rules table, you can search the rule by using a name, a zone, an address, a scheduler name, and so on.

Column Search

You can perform a granular level of search using column level search in the complex tables, which has more data, such as firewall, NAT, IPS, VPN policies, rules table, and devices table.

If you click the column search icon placed at the top right corner of the table, near the search icon, the column search text box is displayed in the user interface. You can filter records using one or more columns.

Item Selector Search

You can use a search text box to select items for inclusion in a rule or policy.

For example, when creating an address or service group, you can first search for the address or service object. Similarly, in firewall, IPS, and NAT rule creation, source and destination addresses can be searched in the item selector using a regular expression, a full name, and a partial name.

Delimiter Search Limitations

The search text should not contain a delimiter that marks the beginning or end, such as a comma, hyphen, and so on. You can search the object by partial word or with * at the end of the text.

For example, if object names are test-SRX, test-SRX-UK, test-SRX_US, and so on, then you cannot search with test-, results will not be displayed.


However, if you search with the text test, then the object that contains the name as test (either before or after a delimiter) is displayed.

Refresh Search Index

If you have any issues while searching for newly added or existing object in any category, such as global, ILP, and column search, then you can trigger the refresh search index from the Junos Space Network Management Platform page. Based on the number of objects, such as the number of addresses, service, and firewall policies in Security Director, the refresh search index might take time.

In Junos Space Network Management Platform page, select **Administrator > Application**. Right-click Security Director and click **Refresh Search Index**. See [Figure 9 on page 11](#).

Figure 9: Refresh Search Index

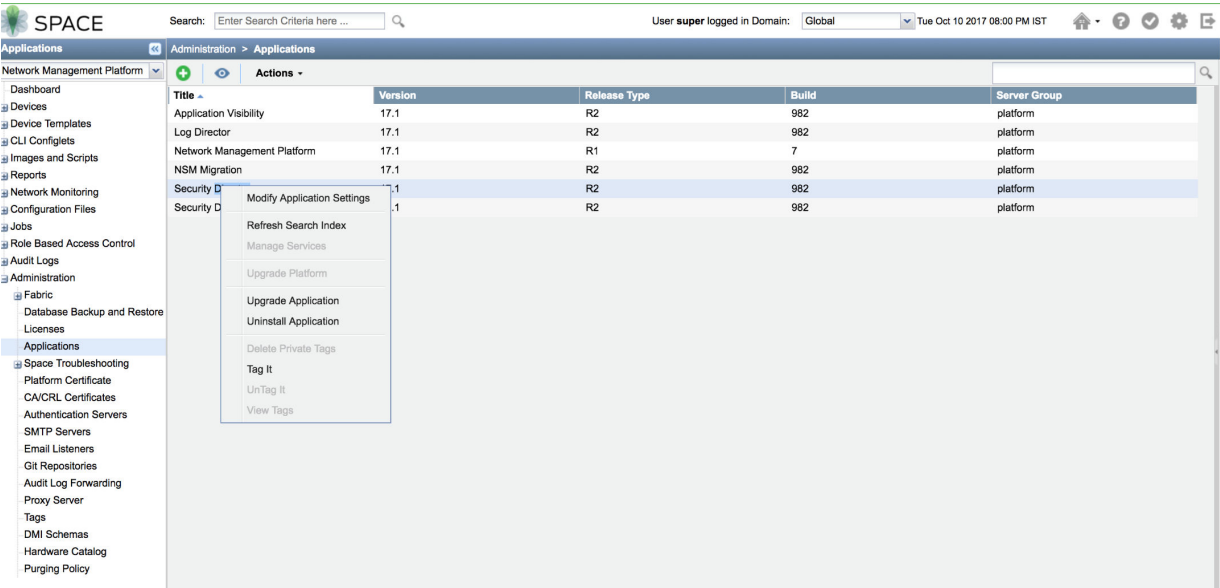

Wait for about 10-15 minutes, and then try to search objects again in Security Director.

NOTE: This operation should not be performed frequently. This can impact the overall Security Director performance.

Main Workspace Overview


The main workspace of Security Director takes up the remainder of the browser window and is divided by six horizontal tabs just below the Banner. The six tabs are: Dashboard, Monitor, Devices, Configure, Reports, and Administration. Each workspace and its accessible functions are described later in this document.

Dashboard

The Dashboard is the main landing page for Security Director. It is the first thing you will see each time you log in. Therefore, Juniper Networks has provided a means for you to be presented with the network security information that you are most interested in. You can customize the workspace in your Dashboard by adding widgets from the carousel below the banner. The placement of, and settings within, widgets are saved so that anything from device information to firewall event information or from

top blocked viruses to live threat maps can be unique for each user. Once you decide on the widgets that you want to see, you can close the carousel to regain some screen space.

Figure 10: Security Director Dashboard Tab

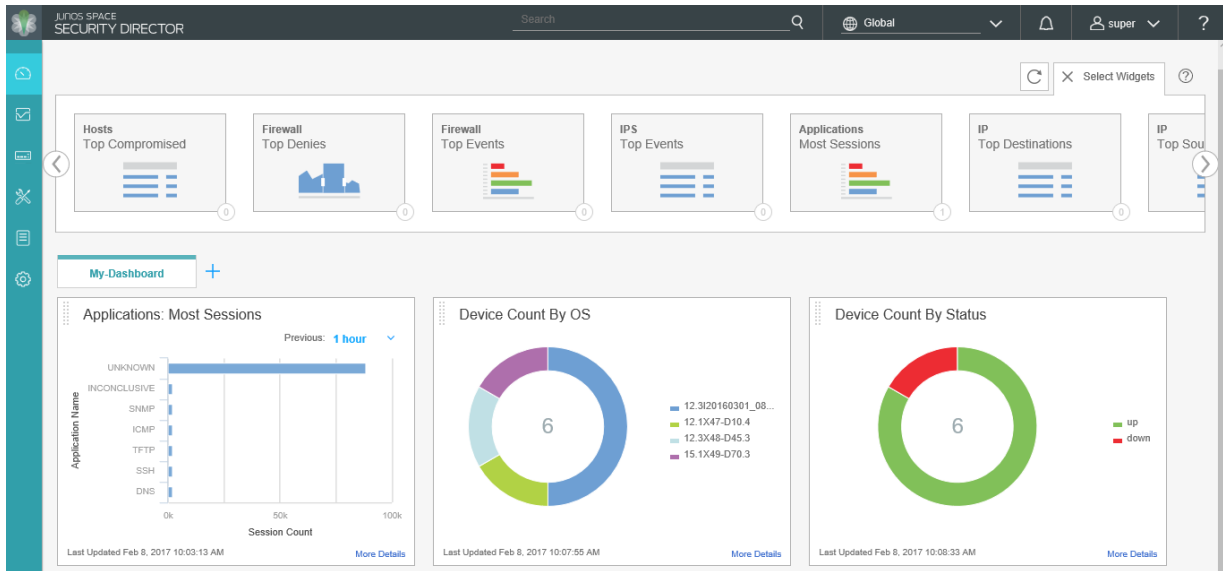

Monitor

The Monitor tab provides a workspace in which graphical representations of network traffic, firewall events, live threats, and network user data are available. There is also detailed data for alerts and alarms and job management information. In this workspace, you can review the detailed information needed to understand what is happening to the managed security devices and traffic in your network.

Figure 11: Security Director Monitor Tab

| | Time | Alert Name | Alert Description | Source | Alert Type | Severity | Alert ID |
|--------------------------|---------------------------|----------------|---|-------------------------------|--------------|----------|----------|
| <input type="checkbox"/> | Wed, Mar 30, 2022 7:35 AM | License Status | License is about to expire in 1 days for sn380-s... | Target Hostsn380-sdga1; Th... | Expire Alert | Error | 32772 |
| <input type="checkbox"/> | Wed, Mar 30, 2022 7:35 AM | License Status | License is about to expire in 1 days for sn380-s... | Target Hostsn380-sdga1; Th... | Expire Alert | Error | 32771 |
| <input type="checkbox"/> | Wed, Mar 30, 2022 7:35 AM | License Status | License is about to expire in 1 days for sn380-s... | Target Hostsn380-sdga1; Th... | Expire Alert | Error | 32770 |
| <input type="checkbox"/> | Wed, Mar 30, 2022 7:35 AM | License Status | License is about to expire in 1 days for sn380-s... | Target Hostsn380-sdga1; Th... | Expire Alert | Error | 32769 |
| <input type="checkbox"/> | Wed, Mar 30, 2022 7:35 AM | License Status | License is about to expire in 1 days for sn380-s... | Target Hostsn380-sdga1; Th... | Expire Alert | Error | 32768 |

Devices

The Devices tab provides a workspace in which you can add and manage Security Director devices. There are several columns of information available by default. This includes live CPU and memory data, and running software version and platform information. Schema mismatches are easily visible so that you can correct them before updating a device.



NOTE: Before working with a particular device in Security Director, ensure that the proper DMI Schema is available. If there is a mismatch between the device's software image and the schema version that Security Director is using to manage the device, unexpected behavior will result. DMI Schema management is performed in the Junos Space Platform Administration workspace.

Figure 12: Security Director Devices Tab

| | Device Name | IP Address | OS Version | Schema Version | CPU | Storage | Authentication Status |
|--------------------------|------------------------------|---------------|--------------------------|------------------------------|------------------------|------------------------|-----------------------|
| <input type="checkbox"/> | DC-SRX1400-1 0 LSYS(s) | 10.206.32.245 | 12.3X48-D45.3 | 12.1X46-D35.1 [Mismatch w... | <div><div></div></div> | <div><div></div></div> | Credentials Based |
| <input type="checkbox"/> | vstrx-75 | 10.207.99.75 | 15.1X49-D70.3 | 15.1X49-D70.3 | <div><div></div></div> | <div><div></div></div> | Credentials Based |
| <input type="checkbox"/> | vSRX-int | 10.207.98.218 | 12.1X47-D10.4 | 12.1X46-D35.1 [Mismatch w... | <div><div></div></div> | <div><div></div></div> | Credentials Based |
| <input type="checkbox"/> | LONGEVITY_1 2 LSYS(s) | 10.206.34.198 | 12.3I20160301_0803_1chen | 12.1X46-D35.1 [Mismatch w... | <div><div></div></div> | <div><div></div></div> | Credentials Based |
| <input type="checkbox"/> | Interconnect-logical-syst... | 10.206.34.198 | 12.3I20160301_0803_1chen | 12.1X46-D35.1 [Mismatch w... | <div><div></div></div> | <div><div></div></div> | NA |
| <input type="checkbox"/> | Is-DhyanLogicalSystem ... | 10.206.34.198 | 12.3I20160301_0803_1chen | 12.1X46-D35.1 [Mismatch w... | <div><div></div></div> | <div><div></div></div> | NA |

Configure

The Configure tab is the workspace where all of the security configuration happens. You can configure firewall, IPS, NAT, and Content Security policies, assign policies to devices, create and apply policy schedules, create and manage VPNs, and create and manage all of the shared objects needed for managing your network security.

Figure 13: Security Director Configure Tab

| | Seq. | Name | Rules | Devices | Publish State | Last Modified | Created By | Modified By | Domain |
|---|------|-------------------------|----------|---------|---------------|--------------------------|------------|-------------|--------|
| POLICIES APPLIED BEFORE 'DEVICE SPECIFIC POLICIES' (1 policy) | | | | | | | | | |
| <input type="checkbox"/> | 1 | All Devices Policy Pre | Add Rule | | Not Published | Tue Jan 31, 2017 4:25 PM | System | | Global |
| DEVICE SPECIFIC POLICIES (0 policy) | | | | | | | | | |
| POLICIES APPLIED AFTER 'DEVICE SPECIFIC POLICIES' (1 policy) | | | | | | | | | |
| <input type="checkbox"/> | 2 | All Devices Policy Post | Add Rule | | Not Published | Tue Jan 31, 2017 4:25 PM | System | | Global |

Reports

The Reports tab provides a workspace in which you can create and send reports to other interested parties. The reports available on the Dashboard tab are a subset of the reports available here. When run, the report engine provides both graphic and numeric data for a complete visualization of the log data. Security Director comes with a predefined set of reports, and you can add your own customized reports from scratch or by cloning any of the predefined reports.

Figure 14: Security Director Reports Tab

The screenshot shows the 'Report Definitions' tab in the Security Director interface. The interface includes a sidebar with navigation icons and a main content area with a table of report definitions. A 'More' dropdown menu is open for the 'Top Monitored IPS Intrusions' report, showing options like 'Run Now', 'Preview as PDF', 'Send Report', 'Edit Recipients', 'Edit Schedule', and 'Clone'.

| <input type="checkbox"/> | Name | Description | Type | Report Content | Schedule | Recipients | Run Now | More | Create | Deleted | Job ID |
|-------------------------------------|---------------------|--------------------------------------|------|--------------------------------------|----------|------------|---------|------|--------|---------|--------|
| <input type="checkbox"/> | Top IPS Attacks... | Top IPS Attacks By Destination C... | LOG | Top IPS Attacks by Destination C... | Unknown | | | | | | 0 |
| <input checked="" type="checkbox"/> | Top Monitored I... | Top Monitored IPS Intrusions | LOG | Top Monitored Intrusions | Unknown | | Run Now | More | Create | | 0 |
| <input type="checkbox"/> | Top Services on... | The service on which the IPS has ... | LOG | Top Services on Which IPS Event... | Unknown | | | | | | 0 |
| <input type="checkbox"/> | Top URL Acces... | Top URL accessed through firewa... | LOG | Top URLs Accessed | Unknown | | | | | | 0 |
| <input type="checkbox"/> | Top SECINTEL ... | Top SECINTEL and AAMW event... | LOG | Top SECINTEL events, Target Ho... | Unknown | | | | | | 0 |
| <input type="checkbox"/> | Top Destination ... | Report for Top Destinations by Co... | LOG | Top Destination Countries for Den... | Unknown | | | | | | 0 |
| <input type="checkbox"/> | Top Source Cou... | Report for Top Sources by Countries | LOG | Top Source Countries for Denied ... | Unknown | | | | | | 0 |
| <input type="checkbox"/> | Top IPS Attacks... | Top IPS Attacks By Source Countr... | LOG | Top IPS Attacks by Source Countr... | Unknown | | | | | | 0 |
| <input type="checkbox"/> | Top Roles | Top Roles By Count | LOG | Top Roles | Unknown | | | | | | 0 |
| <input type="checkbox"/> | Top IPS Attacks... | Top IPS Attacks Detected | LOG | Top IPS Attacks Detected | Unknown | | | | | | 0 |

1 of 37 Selected

Administration

The Administration tab provides a workspace in which you can manage role-based access control (RBAC), review and manage audit logs, manage logging, review and update the IPS signature database, and manage your login profile. Domain RBAC allows system administrators to logically divide Security Director into sections called domains. Policies, objects, logs, and services created for devices within any one domain are available for use only within that domain. User access can also be restricted to individual domains. For more information regarding RBAC, see ["Domain RBAC Overview" on page 1417](#).

Figure 15: Security Director Administration Tab

The screenshot shows the Junos Space Security Director Administration interface. The left sidebar contains a navigation menu with the following items: My Profile (selected), Users & Roles, Logging Manag..., Monitor Settings, Signature Datab..., PE Settings, and NSM Migration. The main content area is titled 'My Profile' and contains the following sections:

- Basic Information:**
 - Username: super
 - First Name *: Open
 - Last Name *: Space
 - E-Mail Address *: super@example.com
 - Change Password button
- X.509 Certificate:**
 - Browse and upload X.509 certificate file
 - Browse X509 Certificate File button
 - Browse button
- Object Visibility:**
 - Manage objects from all assigned domains checkbox (unchecked)
 - OK button
 - Reset button


Global Features

Security Director contains assistive workflow wizards that guide you through some of its security functions. These include a rule-creation wizard and an add-device-profile wizard.

The publish workflow allows security configurations to be created or changed, assigned to devices, published and then updated to those devices. Policy changes, whether to IPS, Firewall, or any other managed policy can be staged by network operations center (NOC) personnel, previewed and approved by network administrators, and updated to the devices individually or all at once during maintenance windows or as often as needed by using the publish workflow.

Cloning allows quick duplication of everything from objects, to rules, to entire policies. When dealing with complex rules or policies, cloning to make changes can ensure that there is a consistent starting point from which to make changes.

Figure 16: Configuration Update Preview

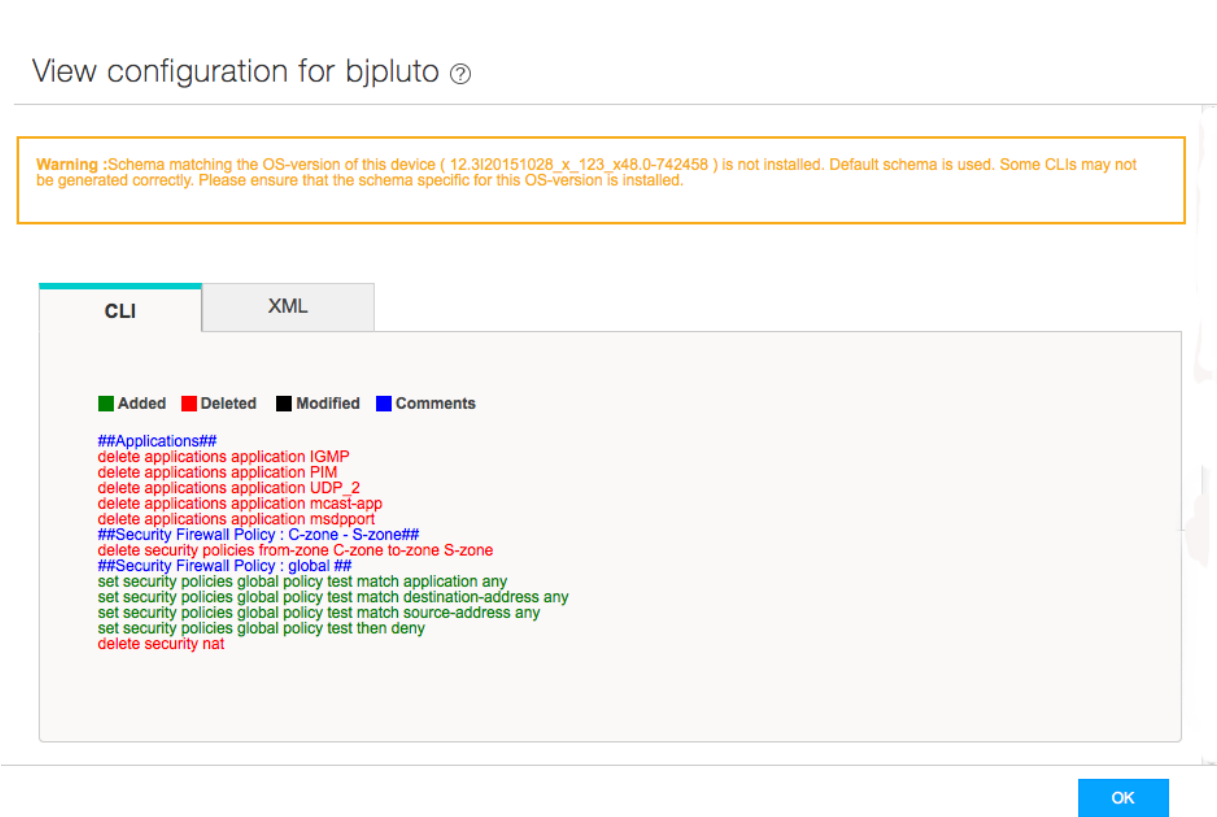

The configuration preview is available as CLI commands or as XML.

Conclusion

Security Director is a security management application designed with speed and scale in mind. Shared objects can be created and used across many security policies and devices. Firewall policies, NAT policies, and others can be created, changed, managed, and applied to individual devices or to groups of devices.

RBAC and domain features enable the Security Director administrator to allow access to many levels of users while restricting the visibility that they have into sensitive security information. Security devices, users, shared objects, and policies in one domain remain inaccessible to users who do not have access to that domain. Thus service provider organizations can provide customer isolation, allowing them to diversify their customer base. User management can be performed locally within Security Director, or remotely using central user management systems such as RADIUS.

And finally, events received by Security Director are logged and correlated in various ways, providing graphical and numerical charts that are understandable and actionable. Reports based on this information can be run and sent directly to stakeholders within an organization. The reports can show

security and user trends over time, helping decision makers to craft concise and accurate security policies.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Dashboard Overview | 23](#)

[Overview of Device Discovery in Security Director | 383](#)

Juniper Networks Connected Security Overview

IN THIS SECTION

- [Benefits of Juniper Networks Connected Security | 19](#)

The Juniper Networks Connected Security provides end-to-end network visibility, allowing enterprises to secure their entire network, both physical and virtual. Using threat detection and policy enforcement, an Juniper Connected Security solution automates and centrally manages security in a multi-vendor environment.

The Juniper Connected Security solution is comprised of the following components:

- A threat detection engine—Cloud-based Juniper ATP Cloud detects known and unknown malware. Known threats are detected using feed information from a variety of sources, including command control server and GeolIP. Unknown threats are identified using various methods such as sandboxing, machine learning, and threat deception.
- Centralized policy management—Junos Space Security Director, which also manages SRX Series devices, provides the management interface for the Juniper Connected Security solution called Policy Enforcer. Policy Enforcer communicates with Juniper Networks devices and third-party devices across the network, globally enforcing security policies and consolidating threat intelligence from different sources. With monitoring capabilities, it can also act as a sensor, providing visibility for intra- and inter-network communications.
- Expansive policy enforcement—In a multi-vendor enterprise, Juniper Connected Security enforces security across Juniper Networks devices, cloud-based solutions, and third-party devices. By

communicating with all enforcement points, Juniper Connected Security can quickly block or quarantine threat, preventing the spread of bi-lateral attacks within the network.

- User intent-based policies—Create policies according to logical business structures such as users, user groups, geographical locations, sites, tenants, applications, or threat risks. This allows network devices (switches, routers, firewalls and other security devices) to share information, resources, and when threats are detected, remediation actions within the network.

With user intent-based policies, you manage clients based on business objectives or user and group profiles. The following are two examples of a user intent policy:

- Quarantine users in HR in Sunnyvale when they're infected with malware that has a threat score greater than 7.
- Block any user in Marketing when they contact a Command and Control (C&C) server that has a threat score greater than 6 and then send an e-mail to an IT administrator.

Using user intent-based policies allows network devices (switches, routers, firewalls and other security devices) to share information, resources, and when threats are detected, remediation actions within the network.

Unlike rule-based policies, which can contain several rules, you can define only one set of parameters for each user intent-based policy defined on a device.

Benefits of Juniper Networks Connected Security

- **Management and visibility** - Enables you to view traffic across the network, dynamically deploy security policies and block threats. Juniper Connected Security manages the entire network infrastructure as a single enforcement domain, thereby providing enforcement points across the network. Uses machine learning and data mining tools to offer effective threat management while producing detailed data access and user activity reports.
- **Comprehensive security** - Ensures that the same security policies are applied across all of the devices in the network. It extends security to each layer of the network, including routers, switches, and firewalls.
- **Protection from advanced malware** - Provides automated offense identification and consolidates the threat intelligence with threat hunting activities to simplify and focus attention on the highest priority offenses.
- **Automated policy or enforcement orchestration** - Provides real-time feedback between the security firewalls. Reduces the risk of compromise and human error by allowing you to focus on maximizing security and accelerating operations with a simple, concise rule set.
- **Scalability** - Supports up to 15,000 devices.

- **Third-party integration** - Provides APIs to integrate with the ecosystem partners for capabilities such as cloud access security, network access control, and endpoint protection, and additional threat intelligence feeds.

RELATED DOCUMENTATION

Policy Enforcer Overview

Policy Enforcer Components and Dependencies

Security Director Insights Overview

IN THIS SECTION

- [Benefits | 20](#)
- [Security Director Insights Architecture | 21](#)

Security Director Insights is a single virtual appliance (Service VM) that runs on the VMware vSphere infrastructure. It facilitates automated security operations. It enables you to take effective actions on security events logged by Juniper Networks security products. The events that affect a host or events that are impacted by a particular threat source are presented by Security Director Insights from different security modules. These events provide instantaneous information about the extent and stage of an attack. Security Director Insights also detects the hosts and servers under attack by analyzing events that are not severe enough to block. The application contains an option to verify the incidents using your trusted threat intelligence providers. After you have verified the incidents, you can take preventive and remedial actions using the rich capabilities of our security products.


Benefits

- Reduce the number of alerts across disparate security solutions
- Quickly react to active threats with one-click mitigation
- Improve the security operations center (SOC) teams' ability to focus on the highest priority threats

Security Director Insights Architecture

The Service VM provides the following functionality, as shown in [Figure 17 on page 21](#).

Figure 17: Security Director Insights Architecture

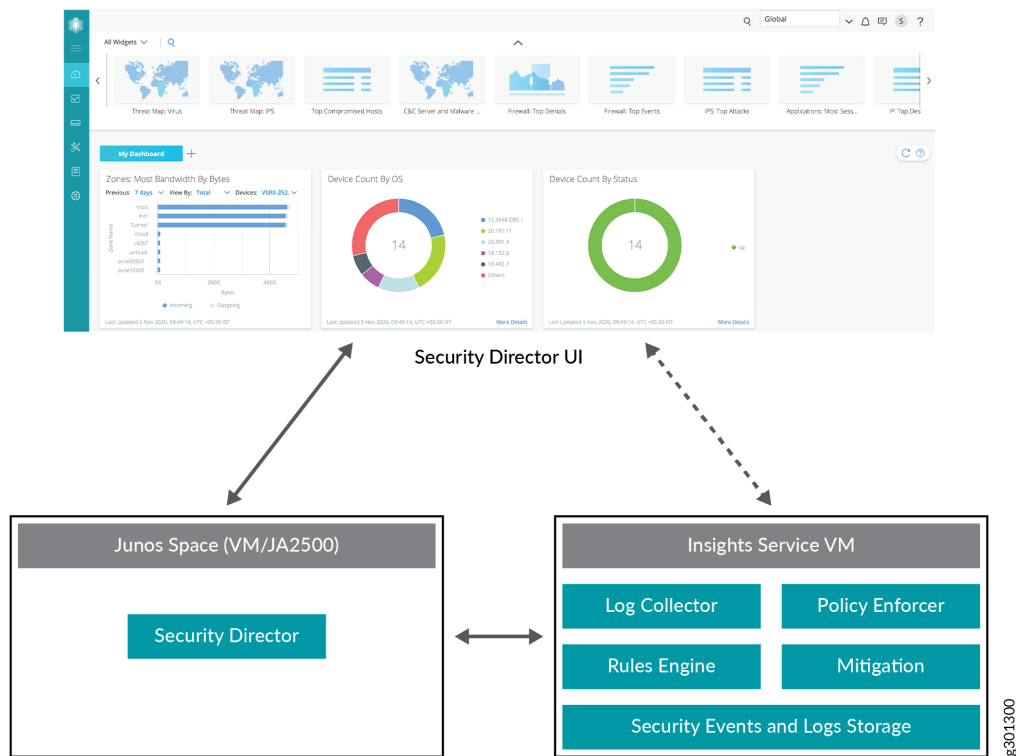

- The Service VM works with the Security Director ecosystem. The Security Director Insights GUI is integrated into the Security Director GUI.
- The Log Collector and Policy Enforcer are integrated within the Security Director Insights VM.

RELATED DOCUMENTATION

Add Insights Nodes

2

PART

Dashboard

[Overview](#) | 23

CHAPTER 2

Overview

IN THIS CHAPTER

- [Dashboard Overview | 23](#)

Dashboard Overview

IN THIS SECTION

- [Understanding Role-Based Access Control for the Dashboard | 31](#)

The Junos Space Security Director dashboard provides a unified overview of the system and network status retrieved from SRX Series devices. You can drag widgets from the carousel at the top of the page to your workspace, where you can configure them to meet your needs. When you install Security Director with Junos Space Log Director, the new Log Director dashboard is displayed.

To display the dashboard, select **Security Director > Dashboard**. The carousel displays all the widget thumbnails by default. You can customize your dashboard as per your needs. For example, you can configure a widget to display a graph with the top 10 applications with the most sessions in the last hour.

To add a widget to the Dashboard, drag the widgets from the palette or thumbnail container into the workspace. Click the refresh icon to update the dashboard or an individual widget. To change the automatic refresh interval, select an interval from the drop-down list, which ranges from 5 minutes up to 7 days.

You can select a root device, a tenant system device, or a logical system device from the Devices drop-down list in the widgets. By default, the All option is selected. Maximum of top 10 devices based on the number of sessions are displayed in the widget.

You can also select the required devices by selecting the Selective option. The data is displayed based on selected devices. Hover over the top-right corner of the widget to edit, refresh, or remove the widget details.

The following dashboard widgets supports the option to display data based on the selected device:

- IP Top Source IPs by Volume
- Application Top Application by Volume
- IP Top Users/IP by sessions
- Firewall Top Denials
- Firewall Top Events
- Firewall Policy Rules with No Hits
- Devices Most Bandwidth by Bytes
- Zones Most Bandwidth by Bytes
- Applications Most Sessions
- IP Top Destinations
- IP Top Sources
- Devices Most Dropped Packets
- Zones Most Dropped Packets
- Devices Most Bandwidth by Packets
- Zones Most Bandwidth by Packets
- Devices Most Sessions
- Devices Most Storage
- NAT Top Src Translation Hits
- NAT Top Dst Translation Hits

In addition, you can use the dashboard to:

- Navigate to the Devices page from the devices widgets by clicking the **More Details** link.
- Navigate to the Alarms page from devices most alarms widgets by clicking the **More Details** link.
- Navigate to the Events and Logs page from an event-based widget.

The dashboard page automatically adjusts the placement of the widgets to dynamically fit on the browser window without changing the order of the widgets. You can manually reorder the widgets using the drag and drop option. The widget can be reordered or moved by holding the top header section of the widget.



NOTE: If you are using Policy Enforcer and ATP Cloud with Security Director, additional widgets are added to the dashboard. See *Policy Enforcer Dashboard Widgets* for those widget descriptions.

Table 3: Widgets

| Widget | Description |
|----------------------------|---|
| Devices Count By Platform | Displays device count grouped by platform. |
| Devices Count By OS | Displays device count grouped by Junos OS. |
| Device Count By Status | Displays device count grouped by the system status (Up/down). |
| Firewall Top Denies | Displays top requests denied by the firewall based on their source IP addresses, sorted by count. |
| Firewall Top Events | Displays top firewall events of the network traffic, sorted by count. |
| IPS Top Events | Displays top IPS events of the network traffic, sorted by count. |
| Applications most sessions | Displays the applications with the most sessions. |
| IP Top Destinations | Displays top destination IP addresses of the network traffic, sorted by count. |
| IP Top Sources | Displays top source IP addresses of the network traffic, sorted by count. |
| Devices Most CPU Usage | Displays devices with maximum CPU utilization, sorted by count. |

Table 3: Widgets (Continued)

| Widget | Description |
|---------------------------------------|--|
| Devices Most Memory Usage | Displays devices with maximum memory utilization, sorted by count. |
| Devices Most Storage | Displays devices with most storage usage, sorted by count. |
| Firewall Policy Rules with No Hits | Displays firewall policies with the most rules not hit, sorted by count. |
| Devices Most Bandwidth by Bytes | Displays devices consuming maximum bandwidth in bytes. |
| Zones Most Bandwidth by Bytes | Displays zones with maximum throughput rate in bytes, sorted by incoming and outgoing bytes. |
| Devices Most Dropped Packets | Displays firewall devices with maximum number of packet drops, sorted by count. |
| Zones Most Dropped Packets | Displays firewall zones with maximum number of packet drops, sorted by count. |
| Devices Most Bandwidth by Packets | Displays devices with maximum throughput rate in packets, sorted by incoming and outgoing packets. |
| Zones Most Bandwidth by Packets | Displays zones with maximum throughput rate in packets, sorted by incoming and outgoing packets. |
| Devices Most Sessions | Displays devices with the most number of sessions, sorted by count. |
| Devices Most Alarms | Displays devices with maximum number of alarms, sorted by count. |
| Threat Map Virus | Displays world map showing total virus event count across countries. |
| Threat Map IPS | Displays world map showing total IPS event count across countries. |
| Application Top Application by Volume | Displays top applications based on volume or bandwidth. |

Table 3: Widgets (Continued)

| Widget | Description |
|--------------------------------------|--|
| IP Top Source IPs by Volume | Displays top source IP addresses of the network traffic by volume or bandwidth. |
| IP Top Spams By Source IPs | Displays top source IP addresses for spams. |
| Web Filtering Top Blocked Websites | Displays blocked websites, sorted by count. |
| Virus Top Blocked | Displays blocked viruses, sorted by count. |
| IP Top Source IPs by Sessions | Displays top source IP addresses of the network traffic by sessions. |
| NAT Top Source Translation Hits | Displays the Network Address Translation (NAT) rule names with most hits for source NAT. |
| NAT Top Destination Translation Hits | Displays the NAT rule names with most hits for destination NAT. |

Policy Enforcer adds widgets to the dashboard that provide a summary of all gathered information on compromised content and hosts. Drag and drop widgets to add them to your dashboard. Mouse over a widget to refresh, remove, or edit the contents.

In addition, you can use the dashboard to:

- Navigate to the File Scanning page from the Top Scanned Files and Top Infected Files widgets by clicking the More Details link.
- Navigate to the Hosts page from the Top Compromised Hosts widget by clicking the **More Details** link.
- Navigate to the Command and Control Servers page from the C&C Server Malware Source Location widget.



NOTE: C&C and GeoIP filtering feeds are only available with the Cloud Feed or Premium license.

Table 4: Policy Enforcer Widgets

| Widget | Definition |
|-------------------------------|--|
| Top Malware Identified | A list of the top malware found based on the number of times the malware is detected over a period of time. Use the arrow to filter by different time frames. |
| Top Compromised Hosts | A list of the top compromised hosts based on their associated threat level and blocked status. |
| Top Infected File Types | A graph of the top infected file types by file extension. Examples: exe, pdf, ini, zip. Use the arrows to filter by threat level and time frame. |
| Top Infected File Categories | A graph of the top infected file categories. Examples: executables, archived files, libraries. Use the arrows to filter by threat level and time frame. |
| Top Scanned File Types | A graph of the top file types scanned for malware. Examples: exe, pdf, ini, zip. Use the arrows to filter by different time frames. |
| Top Scanned File Categories | A graph of the top file categories scanned for malware. Examples: executables, archived files, libraries. Use the arrows to filter by different time frames. |
| C&C Server and Malware Source | A color-coded map displaying the location of Command and Control servers or other malware sources. Click a location on the map to view the number of detected sources. |

[Table 5 on page 28](#) provides the source of information for each widget type on dashboard.

Table 5: Information Source for the Widgets

| Widget Name | Widget Type | Source |
|----------------------------|--------------|--------|
| Firewall Top Events | Security | syslog |
| Applications Most Sessions | Applications | syslog |
| IP Top Destinations | Security | syslog |

Table 5: Information Source for the Widgets (Continued)

| Widget Name | Widget Type | Source |
|---------------------------------------|-------------|------------------------|
| IP Top Sources | Security | syslog |
| Top Firewall Denials | Security | syslog |
| IPS Top Attacks | Security | syslog |
| Threatmap Virus | Security | syslog |
| Threatmap IPS | Security | syslog |
| NAT Top Source Translation Hits | Security | syslog |
| NAT Top Destination Translation Hits | Security | syslog |
| IP Top Spams By Source IPs | Security | syslog |
| Web Filtering Top Blocked Websites | Security | syslog |
| Virus Top Blocked | Security | syslog |
| Application Top Application by Volume | Application | Application visibility |
| Top Source IPs by Volume | Security | Source IP visibility |
| Top Source User/IP by Sessions | Security | Source IP visibility |
| Devices Most CPU Usage | Device | SRX device polling |
| Devices Most Memory Usage | Device | SRX device polling |

Table 5: Information Source for the Widgets (Continued)

| Widget Name | Widget Type | Source |
|-------------------------------------|-------------|----------------------------|
| Devices Most Sessions | Device | SRX device polling |
| Devices Most Bandwidth By Bytes | Device | SRX device polling |
| Zones Most Bandwidth By Bytes | Security | SRX device polling |
| Devices Most Dropped Packets | Device | SRX device polling |
| Zones Most Dropped Packets | Security | SRX device polling |
| Devices Most Bandwidth By Packets | Device | SRX device polling |
| Zones Most Bandwidth By Packets | Security | SRX device polling |
| Devices Most Storage | Device | SRX device polling |
| Device Count By Platform | Device | Space Platform/ SD Devices |
| Device Count By OS | Device | Space Platform/ SD Devices |
| Device Count By Status | Device | Space Platform/ SD Devices |
| Device Most Alarms | Device | SRX device polling |
| Firewall policy: Rules with no hits | Security | Firewall Rule Hit count |



NOTE: The following widgets are supported for both tenant systems (TSYS) and logical systems (LSYS):

- Devices Most Sessions
- Devices Most Bandwidth by Bytes
- Zones Most Bandwidth by Bytes
- Devices Most Dropped Packets
- Zones Most Dropped Packets
- Devices Most Bandwidth by Packets
- Zones Most Bandwidth by Packets
- Devices Most Storage

The following widgets are not supported for both LSYS and TSYS:

- Devices Most CPU Usage
- Devices Most Memory Usage

Understanding Role-Based Access Control for the Dashboard

Role-based access control (RBAC) has the following impact on the dashboard:

- You must have Security Analyst or Security Architect role or have permissions equivalent to that role to access the dashboard.
- You must have the required permissions to edit dashboard widgets. The user role under **Administration > Users & Roles** must have **Event Viewer > Edit Dashboard** option enabled to edit the settings on dashboard widgets.
- You must have **Administration > Users & Roles > Event Viewer > View Device Logs** option enabled to view or read logs.

RELATED DOCUMENTATION

[Events and Logs Overview | 35](#)

[Antivirus Events and Logs Overview | 80](#)

[Antispam Events and Logs Overview | 77](#)

3

PART

Monitor

| | |
|---|-----|
| Events and Logs-All Events | 34 |
| Events and Logs-Firewall | 61 |
| Events and Logs-Web Filtering | 66 |
| Events and Logs-VPN | 70 |
| Events and Logs-Content Filtering | 73 |
| Events and Logs-Antispam | 77 |
| Events and Logs-Antivirus | 80 |
| Events and Logs-IPS | 84 |
| Events and Logs-Screen | 89 |
| Events and Logs-ATP Cloud | 93 |
| Events and Logs-Apptrack | 97 |
| Threat Prevention-Hosts | 102 |
| Threat Prevention-C&C Servers | 105 |
| Threat Prevention-HTTP File Download | 109 |
| Threat Prevention-Email Quarantine and Scanning | 114 |
| Threat Prevention-IMAP Block | 121 |
| Threat Prevention-Manual Upload | 123 |
| Threat Prevention-Feed Status | 125 |
| Threat Prevention-All Hosts Status | 127 |
| Threat Prevention-DDoS Feeds Status | 130 |

[Applications | 132](#)

[Live Threat Map | 148](#)

[Threat Monitoring | 155](#)

[Alerts and Alarms - Overview | 161](#)

[Alerts and Alarms-Alerts | 163](#)

[Alerts and Alarms-Alert Definitions | 166](#)

[Alerts and Alarms-Alarms | 173](#)

[VPN | 176](#)

[Insights | 186](#)

[Job Management | 195](#)

[Audit Logs | 212](#)

[Packet Capture | 221](#)

[NSX Inventory-Security Groups | 225](#)

[vCenter Server Inventory-Virtual Machines | 228](#)

[Data Plane Packet Capture | 232](#)

CHAPTER 3

Events and Logs-All Events

IN THIS CHAPTER

- [Events and Logs Overview | 35](#)
- [Creating Alerts | 42](#)
- [Creating Reports | 44](#)
- [Creating Filters | 46](#)
- [Grouping Events | 48](#)
- [Using Events and Logs Settings | 49](#)
- [Selecting Events and Logs Table Columns | 50](#)
- [Viewing Threats | 50](#)
- [Viewing Data for Selected Devices | 50](#)
- [Using the Detailed Log View | 51](#)
- [Using the Raw Log View | 52](#)
- [Showing Exact Match | 52](#)
- [Using Filter on Cell Data | 53](#)
- [Using Exclude Cell Data | 53](#)
- [Showing Firewall Policy | 54](#)
- [Showing Source NAT Policy | 55](#)
- [Showing Destination NAT Policy | 56](#)
- [Downloading Packets Captured | 56](#)
- [Showing Attack Details | 57](#)
- [Using Filters | 58](#)

Events and Logs Overview

IN THIS SECTION

- [Events & Logs—Summary View | 35](#)
- [Events & Logs—Detail View | 36](#)
- [Advanced Search | 39](#)
- [Role-Based Access Control for Event Viewer | 41](#)

Use the Events and Logs page to get an overall, high-level view of your network environment. You can view abnormal events, attacks, viruses, or worms when log data is correlated and analyzed.

This page provides administrators with an advanced filtering mechanism and provides visibility into actual events collected by the Log Collector. Using the time-frame slider, you can instantly focus on areas of unusual activity by dragging the time slider to the area of interest to you. The slider and the Custom button under Time Range remain at the top of each tab. Users select the time range, and then they can decide how to view the data, using the summary view or detail view tabs.

By default, you can view data for all the devices. To view data for a specific device, click on the link beside Devices and select a device.



NOTE: Starting in Junos Space Security Director Release 21.2R1, Tenant Systems (TSYS) devices are also supported.

To access the Event Viewer page select **Monitor > Events & Logs > All Events**.

Events & Logs—Summary View

Click **Summary View** for a brief summary of all the events in your network. At the center of the page is critical information, including total number of events, viruses found, total number of interfaces that are down, number of attacks, CPU spikes, and system reboots. This data is refreshed automatically based on the selected time range. At the bottom of the page is a swim-lane view of different events that are happening at a specific time. The events include firewall, Web filtering, VPN, content filtering, antis spam, antivirus, IPS, ATP Cloud, Screen, and Apptrack. Each event is color-coded, with darker shades representing a higher level of activity. Each tabs provide deep information like type, and number of events occurring at that specific time.

See [Table 6 on page 36](#) the descriptions of the widgets in this view.

Table 6: Events and Logs Summary View Widgets

| Widget | Description |
|-----------------|---|
| Total Events | Total number of all the events that includes firewall, webfiltering, IPS, IPSec, content filtering, antispam, and antivirus events. |
| Virus Instances | Total number of virus instances running in the system. |
| Attacks | Total number of attacks on the firewall. |
| Interface Down | Total number of interfaces that are down. |
| CPU Spikes | Total number of times a CPU utilization spike has occurred. |
| Reboots | Total number of system reboots. |
| Sessions | Total number of sessions established through firewall. |

Events & Logs—Detail View

Click **Detail View** for comprehensive details of events in a tabular format that includes sortable columns. You can sort the events using the Group by option. For example, you can sort the events based on severity. The table includes information such as the rule that caused the event, severity for the event, event ID, traffic information, and how and when the event was detected.

Select the **Export to CSV** option from the grid settings pane to export and download the log data in CSV file.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support for read-only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 7 on page 37](#) for field descriptions.

Table 7: Events and Logs Detail Columns

| Field | Description |
|---|---|
| Log Generated Time | The time when the log was generated on the SRX Series device. |
| Log Received Time | The time when the log was received on the log collector. |
| Event Name | The event name of the log |
| Source Country | The source country name. |
| Source IP | The source IP address from where the event occurred. |
| Destination Country | Destination country name from where the event occurred. |
| Destination IP | The destination IP address of the event. |
| Source Port | The source port of the event. |
| Destination Port | The destination port of the event. |
| Description | The description of the log. |
| Attack name | Attack name of the log: Trojan, worm, virus, and so on. |
| Threat Severity | The severity level of the threat. |
| Policy Name | The policy name in the log. |
| Content Security category or Virus Name | The Content Security category of the log. |
| URL | Accessed URL name that triggered the event. |

Table 7: Events and Logs Detail Columns *(Continued)*

| Field | Description |
|----------------------|---|
| Event category | The event category of the log. |
| User Name | The username of the log. |
| Action | Action taken for the event: warning, allow, and block. |
| Log Source | The IP address of the log source. |
| Application | The application name from which the events or logs are generated |
| Hostname | The host name in the log. |
| Service Name | The name of the application service. For example, FTP, HTTP, SSH, and so on. |
| Nested Application | The nested application in the log. |
| Source Zone | The source zone of the log. |
| Destination Zone | The destination zone of the log. |
| Protocol ID | The protocol ID in the log. |
| Roles | The role name associated with the log. |
| Reason | The reason for the log generation. For example, a connection tear down may have an associated reason such as authentication failed. |
| NAT Source Port | The translated source port. |
| NAT Destination Port | The translated destination port. |

Table 7: Events and Logs Detail Columns (Continued)

| Field | Description |
|---------------------------|--|
| NAT Source Rule Name | The NAT source rule name. |
| NAT Destination Rule Name | The NAT destination rule name. |
| NAT Source IP | The translated (or natted) source IP address. It can contain IPv4 or IPv6 addresses. |
| NAT Destination IP | The translated (also called natted) destination IP address. |
| Traffic Session ID | The traffic session ID of the log. |
| Path Name | The path name of the log. |
| Logical system Name | The name of the logical system. |
| Rule Name | The name of the rule. |
| Profile Name | The name of the All events profile that triggered the event. |
| Client Hostname | Hostname of the client. |
| Malware Info | Information of the malware. |
| Logical Subsystem Name | The name of the logical system in JSA logs. |

Advanced Search

You can perform advanced search of all events using the search text box present above the grid. It includes the logical operators as part of the filter string. Enter the search string in the text box and based on your input, a list of items from the filter context menu is displayed. You can select a value from the list and then select a valid operator based on which you want to perform the advanced search operation.

Press Spacebar to provide AND operator and OR operator. After you have entered the search string, press Enter to display the search result in the grid.

In the search text box, when you hover over the icon, it displays an example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not. While entering a search criteria, when you press backspace at any point of time, only one character is deleted.

Starting in Junos Space Security Director Release 19.2R1, in addition to the manual search using keywords, you can drag and drop the values from non-empty cells in the grid into the event viewer search bar. The value is added as the search criterion and the search results are displayed. You can drag and drop only searchable cells. When you hover over the rows in event viewer, searchable cells are displayed with blue background. If a cell is not searchable, there is no change in the background color. If you drag a searchable cell without any value or if the value = '-', you cannot drop the contents of such cells. If the search bar already has a search criterion, all the subsequent drag and drop search criteria are prepended by 'AND'. After dropping the value in the search bar, the search condition is refreshed in the grid. This applies to both simple and complex search filters.

You can perform complex filtering using AND and OR logical operators, and brackets to group the search tokens.

For example: (Name = one and id = 11) or (Name = two and id = 12)

The precedence level of the AND logical operator is higher than OR. In the following filter query, Condition2 AND Condition3 is evaluated before the OR operator.

For example: Condition1 OR Condition2 AND Condition3

To override this, use parentheses explicitly. In the below filter query, expression inside the parentheses is evaluated first.

For example: (Condition1 OR Condition2) AND Condition3

Table 8: Filter Rules

| Filter Rule | Example |
|--|--|
| Enter a comma for an OR filter. | Name=test,site is the same as Name=test OR Name=site |
| Enter parentheses to combine AND and OR functionality. | Source Country = France AND (Event Name = RT_Flowsession_Close OR Event Category = Firewall) |
| Enter double quotes for terms with spaces. | "San Jose" |

Following are some of the examples for event log filters:

- Specific events originating from or landing within United States

Source Country = United States OR Destination Country = United States AND Event Name =
 IDP_ATTACK_LOG_EVENT, IDP_ATTACK_LOG_EVENT_LS,
 IDP_APPDDOS_APP_ATTACK_EVENT_LS, IDP_APPDDOS_APP_STATE_EVENT,
 IDP_APPDDOS_APP_STATE_EVENT_LS, AV_VIRUS_DETECTED_MT, AV_VIRUS_DETECTED,
 ANTISPAM_SPAM_DETECTED_MT, ANTISPAM_SPAM_DETECTED_MT_LS,
 FWAUTH_FTP_USER_AUTH_FAIL, FWAUTH_FTP_USER_AUTH_FAIL_LS,
 FWAUTH_HTTP_USER_AUTH_FAIL, FWAUTH_HTTP_USER_AUTH_FAIL_LS,
 FWAUTH_TELNET_USER_AUTH_FAIL, FWAUTH_TELNET_USER_AUTH_FAIL_LS,
 FWAUTH_WEBAUTH_FAIL,FWAUTH_WEBAUTH_FAIL_LS

- Traffic between zone pairs for policy – IDP2

Source Zone = trust AND Destination Zone = untrust,internal AND Policy Name = IDP2

- Events with specific sources IPs or events hitting tftp, tftp, http, and unknown applications coming from host DC-SRX1400-1 or vSRX Virtual Firewall-75.

Application = tftp,ftp,http,unknown OR Source IP = 192.168.34.10,192.168.1.26 AND Hostname =
 dc-srx1400-1,vSRX Virtual Firewall-75

Role-Based Access Control for Event Viewer

Role-Based Access Control (RBAC) has the following impact on the Event Viewer:

- You must have Security Analyst or Security Architect or have permissions equivalent to that role to access the event viewer.
- You cannot view event logs created in other domains. However, a super user or any user with an appropriate role who can access a global domain can view logs in a subdomain, if a subdomain is created with visibility to the parent domain.
- You can only view logs from the devices that you can access and that belong to your domain.
- You can only view, not edit, a policy if you do not have edit permissions.
- The user role under **Administration > Users & Roles** must have **Event Viewer > View Device Logs** option is enabled to view or read logs.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | You can perform advanced search of all events using the search text box present above the grid. |

RELATED DOCUMENTATION

[Using the Raw Log View | 52](#)

[Using the Detailed Log View | 51](#)

[Viewing Threats | 50](#)

[Creating Reports | 44](#)

[Creating Alerts | 42](#)

[Using Events and Logs Settings | 49](#)

[Grouping Events | 48](#)

Creating Alerts

You can use the All Events page to create an alert.

To create an alert:

1. Select **Monitor > Events & Logs > All Events**.
2. Click **Detail View**.
3. Select data criteria to create an alert:
 - Select filter string from the drop-down list.
 - Select data aggregation from the **Group-By** drop-down list.

You can also use existing filters by selecting **Filters > Show Saved Filters**.

4. Click **Save > Create Alert**.

The Create Alert Wizard appears.

5. Complete the configuration according to the guidelines provided in [Table 9 on page 43](#).

6. Click **Finish**.

The Create Alert Wizard shows a summary of your configuration changes. You can edit the individual configuration parameters by clicking **Edit**.

7. Click **OK** to close the window.

Table 9: Create Alert Wizard Settings

| Setting | Guideline |
|----------------------|---|
| <i>General</i> | |
| Alert Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Alert Description | Enter a description for the alerts; maximum length is 1024 characters. |
| Alert Type | Displays the type of alert that is system based. |
| Status | Select the Active check box to view only the active alerts. |
| Severity | Select the severity level of the alert: Info, minor, major, critical. |
| <i>Data Criteria</i> | |
| Trigger | Specify the data criteria based on the Time Period, Group By, and Filter By options. Filtered data only displays the subset of data that meets the criteria that you specify. Enter the event threshold value between 1- 1,000,000,000. |
| Time Span | Starting in Junos Space Security Director Release 16.1, you can specify the duration for triggering an alert. <ul style="list-style-type: none"> • Minutes • Hours The default duration is 30 minutes and the maximum duration is 24 hours. |
| <i>E-Mail</i> | |
| Recipients | Select or enter valid usernames or e-mail addresses of the recipients to receive alert notifications. |

Table 9: Create Alert Wizard Settings (Continued)

| Setting | Guideline |
|----------|---|
| Comments | Enter comments for the alert notification e-mail. |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can specify the duration for triggering an alert. |

RELATED DOCUMENTATION

[Events and Logs Overview | 35](#)

[Creating Alert Definitions | 166](#)

[Using Events and Logs Settings | 49](#)

[Using the Raw Log View | 52](#)

[Using the Detailed Log View | 51](#)

Creating Reports

You can create a report from the Event Viewer.

To create a report:

1. Select **Monitor > Events & Logs**. Note that every report must have an aggregation point.
2. Select a Group By option to create a report.
3. Select a filter from Filters > Show Saved Filters
4. Select **Save > Create Report**.
5. Complete the configuration according to the guidelines provided in the [Table 10 on page 45](#).
6. Click **Save > Create Report**.
7. Click **Finish**.

Table 10: Report Settings

| Settings | Guidelines |
|--------------------------------|--|
| General Information | |
| Report Name | Enter a unique name for the report definition that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |
| Description | Enter a description for the report definition; maximum length is 1024 characters. |
| Content | |
| Use Data Criteria from Filters | <p>The data criteria for the report is displayed.</p> <p>The details displayed are:</p> <ul style="list-style-type: none"> • Filter String—Selected filter string. • Group By—Selected group by option. • Time Span—Duration for which the data is displayed. |
| Schedule | |
| Add Schedule | <p>Select the type of report schedule that you want to use:</p> <ul style="list-style-type: none"> • Run now—Select this option to schedule and publish the configuration at the current time. • Schedule at a later time—Select this option if you want to schedule and publish the configuration at a later time. <p>Select the recurring schedule for report generation. The available options are:</p> <ul style="list-style-type: none"> • Repeat—Select this option to generate the report on an hourly, daily, weekly, monthly, or yearly basis. • Every—Select the number of days, weeks, or months for which the recurring report will be generated. • Ends—Select the end date and end time for the report. |

Table 10: Report Settings *(Continued)*

| Settings | Guidelines |
|------------------|--|
| Email | |
| Email Recipients | <p>Add Email Recipients</p> <ul style="list-style-type: none"> • Recipients- Enter or select the e-mail addresses of the recipients. By default, you can search by first name and select registered users. You can also type in external email addresses. • Subject- Enter the subject for the e-mail notification. • Comment- Enter the comments for the e-mail notification. <p>NOTE: The reports are not sent if a specified recipient does not have permission for a device or domain included in the report configuration when the report is generated.</p> |

RELATED DOCUMENTATION

[Events and Logs Overview](#) | 35

[Using the Raw Log View](#) | 52

[Using the Detailed Log View](#) | 51

Creating Filters

Filters are used to search logs and view information about filter condition, time, or fields in the logs. You can configure basic and advanced filters to match the filtering conditions. You can either load existing filters or define a new filter. A filter allows you to enter specific information that must be displayed on the Event Viewer page; for example, the columns in the Event Viewer table, the time range, and the aggregation point. When you change an existing filter or create a new filter, the Event Viewer table is updated automatically. If filters contain time details, the time range in Event Viewer is updated with the time specified in the filter.

Filters provide:

- Quick access to critical information—If you are a firewall administrator, you might have to regularly deny traffic from a specific application or a specific set of addresses. You might also have to allow or

deny specific application access to some users. To achieve these conditions, you must set user search criteria, scan through the firewall logs that match that criteria, and display the matching logs.

- Filter sharing among users—Other users in your domain can use the filters you create without modifying or deleting the filters.
- Filter usage across multiple functional areas—Filters can be used across multiple functional areas such as the Event Viewer, dashboard, alerts, and reports.

Starting in Junos Space Security Director Release 19.2R1, in addition to the manual search using keywords, you can drag and drop the values from non-empty cells in the grid into the event viewer search bar. The value is added as the search criterion and the search results are displayed. You can drag and drop only searchable cells. When you hover over the rows in event viewer, searchable cells are displayed with blue background. If a cell is not searchable, there is no change in the background color. If you drag a searchable cell without any value or if the value = '-', you cannot drop the contents of such cells. If the search bar already has a search criterion, all the subsequent drag and drop search criteria are prepended by 'AND'. After dropping the value in the search bar, the search condition is refreshed in the grid. This applies to both simple and complex search filters.

To create an Event Viewer filter:

1. Select **Monitor > Events & Logs**.
2. Click **Detail View**.
3. Click the filter text field.
The filter keys available are displayed alphabetically in a drop-down list.
4. Type the exact key in the filter text field, or select the key from the drop-down key list.
The key appears in the filter bar. While typing in the values, you are prompted with suggestions in the drop-down list whenever possible.

In the search text box, an icon displays the example filter condition. When you start entering the search string, the icon indicates whether the filter string is valid or not.

For example: EventName =

5. Continue to add filter expressions *<key>space <operator> space <value>*.
The key appears, along with the value combination in the filter bar.

For example: EventName = LOGIN_FAILED

6. Repeat the Step 4 and Step 5 to add additional filter expressions. Press Enter to provide AND operator and comma for OR operator.
The available filter keys are displayed alphabetically in the drop-down list.

For example: EventName = LOGIN_FAILED AND SrcIP =

7. Type in the required IP address.
For example: EventName = LOGIN_FAILED AND SrcIP = 192.168.45.350

The term operator AND/OR is displayed in the filter bar to add a different key. Starting in Junos Space Security Director Release 16.1, the term operator OR is displayed.

8. Click **Save > Save Filter**.

9. Enter the filter name.

10. Click **OK**.

The event logs for EventName = LOGIN_FAILED AND SrcIP = 192.168.45.350 are displayed.

Starting in Junos Space Security Director Release 18.4R1, you can perform complex filtering using AND and OR logical operators and brackets to group the search tokens.

For example: (Name = one and id = 11) or (Name = two and id = 12)

For examples on event log filters, see Advanced Search section in ["Events and Logs Overview" on page 35](#).



NOTE: The filters that you have typed will appear in the filter history until the next session.

RELATED DOCUMENTATION

[Using Filters | 58](#)

[Events and Logs Overview | 35](#)

[Firewall Events and Logs Overview | 61](#)

Grouping Events

You can analyze event data by grouping the data based on specific columns using the Group By option on the toolbar above the table. You can group the events by columns and the Event Log shows the number of matching events in those groups, presented in descending order.

To group events:

1. Select **Monitor > Events & Logs**.

2. Click **Details** tab.

3. Select the category from the Group by option.

RELATED DOCUMENTATION

[Using Events and Logs Settings | 49](#)[Using the Raw Log View | 52](#)[Using the Detailed Log View | 51](#)[Viewing Threats | 50](#)[Creating Reports | 44](#)

Using Events and Logs Settings

You can choose log display time and Security Director object settings that meet your requirements.

To use the Event Viewer settings:

1. Select **Monitor > Events & Logs**.
2. Select **Settings** from the grid settings pane.
3. Select the desired log display time:
 - Local time zone—Displays logs in the local time zone.
 - UTC time zone—Displays logs in the UTC time zone.



NOTE: By default, the Local time zone option is enabled.

4. To see host names for any objects that match a source or destination IP address, select **Resolve IP with SD address objects**. This option is disabled by default.
5. Click **OK**.

RELATED DOCUMENTATION

[Events and Logs Overview | 35](#)[Using the Raw Log View | 52](#)[Using the Detailed Log View | 51](#)[Creating Reports | 44](#)[Creating Alerts | 42](#)

Selecting Events and Logs Table Columns

To select Events and Logs table columns:

1. Select **Monitor > Events & Logs**.
2. Click **Details** tab.
3. Select **Show or Hide Columns** from the grid settings pane.
4. Select the column that you want to show in Events and Logs table.

RELATED DOCUMENTATION

[Events and Logs Overview | 35](#)

[Using the Detailed Log View | 51](#)

[Using the Raw Log View | 52](#)

[Viewing Threats | 50](#)

Viewing Threats

You can view events that have potential threats.

To view threats:

1. Select **Monitors > Events & Logs**.
2. Click **Details** tab.
3. Select the View only threats check-box.

RELATED DOCUMENTATION

[Using Events and Logs Settings | 49](#)

[Events and Logs Overview | 35](#)

Viewing Data for Selected Devices

You can view the data for specific devices or all devices. By default, you can view data for all the devices in the network.

To view data for a specific device:

1. Select **Monitor > Events & Logs**.

The corresponding events page is displayed. The events page is displayed for events such as all events, firewall events, IPS events, screen events, ATP Cloud events, and Apptrack events.

2. Click **All** beside Devices.

The Select Devices page is displayed.

3. Click **Selective**.

All the available devices are displayed.

4. Select devices from the Available column and click the right arrow to move these devices to the Selected column.

5. Click **OK**.

The data is displayed in the events page based on the devices selected.

RELATED DOCUMENTATION

| [Events and Logs Overview](#) | 35

Using the Detailed Log View

Use the detailed log view to view the complete details of logs. You can view general information, source information, destination information, and security information of logs.

To use the detailed log view:

1. Select **Monitor > Events & Logs**.

2. Click **Detail View** tab.

3. Select the event row, right-click and then select **Show event details** or click **More > Show event details**.

RELATED DOCUMENTATION

| [Using Events and Logs Settings](#) | 49

| [Events and Logs Overview](#) | 35

Using the Raw Log View

You can view the real-time logs received from the SRX Series devices.

To view the raw logs:

1. Select **Monitor > Events & Logs**.
2. Click **Details** tab.
3. Select the row in the table, right-click and then select **Show raw log** or click **More > Show raw log**.

RELATED DOCUMENTATION

[Using Events and Logs Settings | 49](#)

[Using the Detailed Log View | 51](#)

[Viewing Threats | 50](#)

[Creating Reports | 44](#)

Showing Exact Match

You can view the exact match of the logs based on the selected row.

To view the logs that matched the filter condition:

1. Select **Monitor > Events & Logs**.
2. Click **Details** tab.
3. Select the row in the table, right-click and then select **Show exact match** or click **More > Show exact match**.

RELATED DOCUMENTATION

[Events and Logs Overview | 35](#)

[Using Events and Logs Settings | 49](#)

[Using the Raw Log View | 52](#)

[Using the Detailed Log View | 51](#)

[Viewing Threats | 50](#)

[Creating Reports | 44](#)

Using Filter on Cell Data

Starting in Junos Space Security Director Release 16.1, you can filter data based on a column name and value.

To filter data:

- 1. Select **Monitor > Events & Logs**.
- 2. Click the **Detail View** tab.
- 3. Select an event row, right-click on a cell data and then select **Filter on cell data**.

The search filter string is displayed in the advanced search field. The data in the corresponding column is filtered based on the filter string.

Click **X** , to clear the advanced search field.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can filter data based on a column name and value. |

RELATED DOCUMENTATION

| |
|---|
| Events and Logs Overview 35 |
| Using Events and Logs Settings 49 |
| Using Exclude Cell Data 53 |

Using Exclude Cell Data

Starting in Junos Space Security Director Release 16.1, you can exclude data based on a column name and value.

To exclude data:

- 1. Select **Monitor > Events & Logs**.
- 2. Click the **Detail View** tab.
- 3. Select an event row, right-click on a cell data and then select **Exclude cell data**.

The search filter string is displayed in the advanced search field. The data in the respective column is excluded based on the filter condition.

Click **X** to clear the advanced search field.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can exclude data based on a column name and value. |

RELATED DOCUMENTATION

| |
|---|
| Events and Logs Overview 35 |
| Using Events and Logs Settings 49 |
| Using Filter on Cell Data 53 |

Showing Firewall Policy

Starting in Junos Space Security Director Release 16.1, you can view your configured firewall policy rules.

To view the firewall policy:

- 1. Select **Monitor > Events & Logs**.
- 2. Click the **Detail View** tab.
- 3. Select an event row, right-click on a cell data, or select **Show Firewall Policy** from the **More** list.

The rules grid of the configured firewall policy is displayed.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can view your configured firewall policy rules. |

RELATED DOCUMENTATION

| |
|---|
| Events and Logs Overview 35 |
| Using Events and Logs Settings 49 |
| Showing Source NAT Policy 55 |
| Showing Destination NAT Policy 56 |

Showing Source NAT Policy

Starting in Junos Space Security Director Release 16.1, you can view the configured source NAT policy rules.

To view the source NAT policy:

1. Select **Monitor > Events & Logs**.
2. Click the **Detail View** tab.
3. Select an event row, right-click on a cell data, or select **Show NAT Source Policy** from the **More** list.
The rules grid of the configured NAT policy is displayed.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can view the configured source NAT policy rules. |

RELATED DOCUMENTATION

| |
|---|
| Events and Logs Overview 35 |
| Using Events and Logs Settings 49 |
| Showing Destination NAT Policy 56 |

Showing Destination NAT Policy

Starting in Junos Space Security Director Release 16.1, you can view the configured destination NAT policy rules.

To view the destination NAT policy:

1. Select **Monitor > Events & Logs**.
2. Click the **Detail View** tab.
3. Select an event row, right-click on a cell data, or select **Show NAT Destination Policy** from the **More** list.

The rules grid of the configured NAT policy is displayed.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can view the configured destination NAT policy rules. |

RELATED DOCUMENTATION

[Events and Logs Overview](#) | 35

[Using Events and Logs Settings](#) | 49

[Showing Source NAT Policy](#) | 55

Downloading Packets Captured

You can download attack packets captured by SRX Series devices and analyze these packets externally using tools such as Wireshark, tcpdump, tshark, and so on.

To download the attack packets:

1. Select **Monitor > Events & Logs**.
2. Click the **Detail View** tab.
3. Select an IPS category event row and right-click a cell, or select **Download PCAP** from the **More** list.



NOTE: The **Download PCAP** menu is enabled only if the Event Category is IPS.



NOTE: PCAPs can be suppressed by the log suppression mechanism, which is enabled by default. To disable log suppression, see [suppression](#). To configure SRX IDP packet capture, see [Configuring Security Packet Capture](#).

RELATED DOCUMENTATION

[Packet Capture Overview](#) | 221

[About the Packets Captured Page](#) | 222

Showing Attack Details

You can view the details of an attack packet that is captured by SRX Series devices.

To view details of an attack packet:

1. Select **Monitor > Events & Logs**.
2. Click the **Detail View** tab.
3. Select an IPS category event row and right-click a cell, or select **Show Attack Details** from the More list.

RELATED DOCUMENTATION

[Viewing Policy and Shared Object Details](#)

[Downloading Packets Captured](#) | 56

Using Filters

IN THIS SECTION

- [Editing Event Viewer Filters | 58](#)
- [Viewing Saved Filters | 58](#)
- [Deleting Event Viewer Filters | 59](#)

Filters are used to search logs and view information about filter condition, time, or fields in the logs. You can configure basic and advanced filters to match the filtering conditions. You can either load existing filters or define a new filter. A filter allows you to enter specific information that must be displayed on the Event Viewer page; for example, the columns in the Event Viewer table, the type of graph, the time period, and the aggregation point. When you change an existing filter or create a new filter, the Event Viewer table and event graph are updated automatically. If filters contain time details, the time control in Event Viewer is updated with the time specified in the filter.

You can edit, save, delete, or search filters on the Event Viewer page. To open the filter options, select **Monitor > Events & Logs**. Click the filter icon, and select **Show Saved Filters**.

Editing Event Viewer Filters

To edit an Event Viewer filter:

1. Select a filter.
The filter details are displayed in the filter bar.
2. Edit the filter string.
3. Click **Save**.
The filter is saved and the database is updated.

Viewing Saved Filters

You can filter the results to display only event logs matching certain criteria.

1. Select **Monitor > Events & Logs**
2. Click the filter icon and select **Show Saved Filters** to view the saved filters.

The following are the default filters that are available:

- Top Web Apps

- Top Applications Blocked
- Top URL's Detected
- Top URL's Blocked
- Top Viruses Detected
- Top Spam Sources
- Top Services Blocked
- Top Unidentified Applications
- Top Screen Attackers
- Top Screen Victims
- Top Screen Hits
- Top Firewall Deny Sources
- Top Firewall Deny Destinations
- Top Firewall Service Deny
- Top Firewall Events
- Top FW Denies
- Top IPS Attack Detected
- Top IPS Attack Blocked
- Top IPS Attacks by Severity
- Top IPS Attack Sources
- Top IPS Attack Destinations
- Top IPS Events
- Top Webfiltering URLs Detected
- Top Source IPs
- Top Destination IPs

Deleting Event Viewer Filters

To delete an Event Viewer filter:

1. Select **Monitor > Events & Logs** and click the filter icon and select **Show Saved Filters**.

The View/Load Filters window appears.

2. Select the filter

3. On the top right corner of the window, click the delete button (X).

The delete confirmation window displays the message. Do you want to delete the selected filter?

4. Click **Yes** to confirm the deletion.

The selected filter is deleted.

RELATED DOCUMENTATION

[Creating Filters | 46](#)

[Events and Logs Overview | 35](#)

[Firewall Events and Logs Overview | 61](#)

Events and Logs-Firewall

IN THIS CHAPTER

- [Firewall Events and Logs Overview | 61](#)

Firewall Events and Logs Overview

IN THIS SECTION

- [Firewall Events—Summary View | 61](#)
- [Firewall Events—Details View | 62](#)

Use the Firewall Events page to view information about security events based on firewall policies. Analyzing *firewall* logs yields useful security management information, such as attempts to breach your network and observing the inherent characteristics of your traffic in real time. Using the time-frame slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

By default, you can view data for all the devices. To view data for a specific device, click on the link beside Devices and select a device.

There are two ways to view your data. You can select either the Summary tab or the Details tab.

Firewall Events—Summary View

Click **Summary View** for a brief summary of all the firewall events in your network. The data presented in the line graph (also known as swim lanes) is refreshed automatically based on the selected time range. The line graph shows light blue lanes that represent all firewall events and dark blue lanes represent blocked firewall events.

Below the swim lanes are widgets displaying critical information such as top sources, top destinations, top users, and top reporting devices. See the Firewall Events Summary Widgets for the descriptions of the elements appearing in this view.

See [Table 11 on page 62](#) for descriptions of the widgets in this view.

Table 11: Widgets in Summary View

| Widget | Description |
|-----------------------|---|
| Top Sources | Top source IP addresses of the network traffic; sorted by event count. |
| Top Destinations | Top destination IP addresses of the network traffic; sorted by event count. |
| Top Users | Top users of the network traffic; sorted by event count. |
| Top Reporting Devices | Top reporting devices in the network; sorted by event count. |

Firewall Events—Details View

Click the **Details View** for comprehensive details of events in a tabular format that includes sortable columns. The table includes information such as the rule that caused the event, severity for the event, event ID, traffic information, and how and when the event was detected.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 12 on page 62](#) for descriptions of the columns in this view.

Table 12: Columns in Detail View

| Column | Description |
|------------|-------------------------------------|
| Time | The time when the log was received. |
| Event Name | The event name of the log. |

Table 12: Columns in Detail View (Continued)

| Column | Description |
|---------------------|--|
| Source Country | Source country name from where the event originated. |
| Source IP | The source IP address from where the event occurred. |
| Destination Country | The destination country name from where the event occurred. |
| Destination IP | The destination IP address of the event. |
| Source Port | The source port of the event. |
| Destination Port | Destination port of the event. |
| Description | The description of the log. |
| Policy name | Policy name in the log. |
| User Name | The username of the log. |
| Action | Action taken for the event: warning, allow, and block. |
| Log Source | IP address of the log source (IPv4 or IPv6). |
| Application | The application name from which the events or logs are generated. |
| Hostname | The host name in the log. |
| Service Name | The name of the application service. For example, FTP, HTTP, SSH, and so on. |
| Nested Application | The nested application in the log. |

Table 12: Columns in Detail View (Continued)

| Column | Description |
|---------------------------|--|
| Source Zone | User traffic received from the zone. |
| Destination Zone | The destination zone of the log. |
| Protocol ID | The protocol ID in the log. |
| Roles | Role names associated with the event. |
| NAT Source Port | The translated source port. |
| NAT Destination Port | The translated destination port. |
| NAT Source Rule Name | The NAT source rule name. |
| NAT Destination Rule Name | The NAT destination rule name. |
| NAT Source IP | The translated (or natted) source IP address. It can contain IPv4 or IPv6 addresses. |
| NAT Destination IP | The translated (also called natted) destination IP address. |
| Traffic Session ID | The traffic session ID of the log. |
| Rule Name | The rule name of the log. |

RELATED DOCUMENTATION
[Events and Logs Overview | 35](#)
[Creating Firewall Policies | 478](#)
[Using Events and Logs Settings | 49](#)
[Using the Raw Log View | 52](#)

Events and Logs-Web Filtering

IN THIS CHAPTER

- [Web Filtering Events and Log Overview | 66](#)

Web Filtering Events and Log Overview

IN THIS SECTION

- [Web Filtering Events—Summary View | 66](#)
- [Web Filtering Events—Detail View | 67](#)

Use this page to view information about security events based on Web filtering policies. Web filtering allows you to permit or block access to specific websites by URL or by URL category using cloud-based lookups, a local database, or an external Websense server. Analyzing Web filtering logs yields useful security management information such as users detected accessing restricted URLs and actions taken by the system. Using the time-frame slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

Web Filtering Events—Summary View

Click **Summary View** for a brief summary of all the Web filtering events in your network. The top of the page has a swim lane graph of all the Web filtering events against the blocked events.

You can use the widgets at the bottom of the page to view critical information such as top URLs blocked, top matched profiles, top sources, and top destinations. See [Table 13 on page 67](#) for descriptions of the widgets in this view.

Table 13: Widgets in Summary View

| Widget | Description |
|----------------------|---|
| Top URLs blocked | URL names that are blocked; sorted by event count. |
| Top Matched Profiles | Web filtering profile names; sorted by event count. |
| Top Sources | Top source IP addresses of the network traffic; sorted by event count. |
| Top Destinations | Top destination IP addresses of the network traffic; sorted by event count. |

Web Filtering Events—Detail View

Click **Detail View** for comprehensive details of events in a tabular format that includes sortable columns. You can aggregate the events using the Group by option. For example, you can group the events based on source country. The table includes information such as the event name, Content Security category, source IP address, source country and so on.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 14 on page 67](#) for descriptions of the columns in this view.

Table 14: Columns in Detail View

| Column | Description |
|----------------|--|
| Time | Time when the event occurred. |
| Event Name | Event name of the log. |
| Source Country | Source country name from where the event originated. |

Table 14: Columns in Detail View (Continued)

| Column | Description |
|---|--|
| Source IP | Source IP address from where the event occurred (IPv4 or IPv6). |
| Destination Country | Destination country name from where the event occurred. |
| Destination IP | Destination IP address of the event (IPv4 or IPv6). |
| Source Port | Source port of the event. |
| Destination Port | Destination port of the event. |
| Description | Description of the log. |
| Content Security category or Virus Name | Content Security category of the log: enhanced, local, and redirect. |
| URL | Accessed URL name that triggered the event. |
| Action | Action taken for the event: warning, allow, and block. |
| Log Source | IP address of the log source (IPv4 or IPv6). |
| Host Name | Hostname in the log. |
| Source Zone | User traffic received from the zone. |
| Roles | Role names associated with the event. |
| Reason | Reason for the log generation. For example, unrestricted access. |
| Path Name | The path name of the log. |

Table 14: Columns in Detail View *(Continued)*

| Column | Description |
|--------------|---|
| Profile Name | Name of the Web filtering profile that triggered the event. |

RELATED DOCUMENTATION

| | |
|---|---------------------|
| Events and Logs Overview | 35 |
| Creating Web Filtering Profiles | 844 |
| Using Events and Logs Settings | 49 |
| Using the Raw Log View | 52 |

Events and Logs-VPN

IN THIS CHAPTER

- [VPN Events and Logs Overview | 70](#)

VPN Events and Logs Overview

IN THIS SECTION

- [VPN Events—Summary View | 70](#)
- [VPN Events—Detail View | 71](#)

Use this page to view information about security events based on IPSec VPN policies. The event viewer provides a view of all *IPsec* VPN events.

Using the time-frame slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

By default, you can view data for all the devices. To view data for a specific device, click on the link beside Devices and select a device.

There are two ways to view your data. You can select either the summary view or the detail view.

VPN Events—Summary View

Click Summary View for a brief summary of all the *VPN* events in your network. The top of the page has a swim lane graph of all the VPN events. You can use the widgets at the bottom of the page to view critical information such as top sources, top destinations, and top reporting devices. See [Table 15 on page 71](#) for descriptions of the widgets in this view.

Table 15: Widgets in Summary View

| Widget | Description |
|-----------------------|---|
| Top Sources | Top source IP addresses of the network traffic; sorted by event count. |
| Top Destinations | Top destination IP addresses of the network traffic; sorted by event count. |
| Top Reporting Devices | Top reporting device IP addresses; sorted by event count. |

VPN Events—Detail View

Click **Detail View** for comprehensive details of events in a tabular format that includes sortable columns. You can aggregate the events using the Group by option. For example, you can group the events based on source country. The table includes information such as the event name, log source, host name, source country, and so on.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 16 on page 71](#) for descriptions of columns in this view.

Table 16: Columns in Detail View

| Column | Description |
|---------------------|--|
| Time | Time when the event occurred. |
| Event Name | Event name of the log. |
| Source Country | Source country name where the event originated. |
| Destination Country | Destination country name where the event occurred. |

Table 16: Columns in Detail View *(Continued)*

| Column | Description |
|------------------|---|
| Destination Port | Destination port of the event. |
| Description | Description of the log. |
| Log Source | IP address of the log source (IPv4 or IPv6). |
| Host Name | Hostname in the log. |
| Rule Name | Name of the antivirus profile that triggered the event. |

RELATED DOCUMENTATION
[Events and Logs Overview | 35](#)
[Using Events and Logs Settings | 49](#)
[Using the Raw Log View | 52](#)
[Using the Detailed Log View | 51](#)

CHAPTER 7

Events and Logs-Content Filtering

IN THIS CHAPTER

- [Content Filtering Events and Logs Overview | 73](#)

Content Filtering Events and Logs Overview

IN THIS SECTION

- [Content Filtering Events—Summary View | 73](#)
- [Content Filtering Events—Detail View | 74](#)

Use this page to view information about security events based on Content filtering policies. The event viewer provides a view of all content filtering events and how the events are handled by content filter. This page can be used to view traffic on the network in real time or as a debugging tool to view how content filtering is operating.

Content filtering provides basic data loss prevention functionality. Content filtering screens traffic based on MIME type, file extension, protocol commands, and embedded object type. It either permits or blocks specific commands or extensions on a protocol-by-protocol basis.

Using the time-frame slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

There are two ways to view your data. You can select either the summary view or the detail view.

Content Filtering Events—Summary View

Click **Summary View** for a brief summary of all the content filtering events in your network. The top of the page has a swim lane graph of all the content filtering events against the blocked events. You can

use the widgets at the bottom of the page to view critical information such as top blocked protocol commands, top reasons, and top sources. See [Table 17 on page 74](#) for descriptions of the widgets in this view.

Table 17: Widgets in Summary View

| Widget | Description |
|-------------------------------|--|
| Top Blocked Protocol commands | Top command names or file extensions blocked on a protocol-byprotocol basis. |
| Top Reasons | Top reasons for blocking the content. For example: Inappropriate or harmful communication. |
| Top Sources | Top source IP addresses of the network traffic; sorted by event count. |

Content Filtering Events—Detail View

Click **Detail View** for comprehensive details of events in a tabular format that includes sortable columns. You can aggregate the events using the Group by option. For example, you can group the events based on source country. The table includes information such as the event name, Content Security category, source IP address, source country, and so on.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 18 on page 74](#) for descriptions of columns in this view.

Table 18: Columns in Detail View

| Column | Description |
|------------|-------------------------------|
| Time | Time when the event occurred. |
| Event Name | Event name of the log. |

Table 18: Columns in Detail View (Continued)

| Column | Description |
|---|--|
| Source Country | Source country name from where the event originated. |
| Source IP | Source IP address from where the event occurred (IPv4 or IPv6). |
| Description | Description of the log. |
| Content Security Category or Virus Name | Content Security category of the log: enhanced, local, and redirect. |
| URL | Accessed URL name that triggered the event. |
| Argument | Type of traffic. For example, ftp and http. |
| Action | Action taken for the event: warning, allow, and block. |
| Log Source | IP address of the log source (IPv4 or IPv6). |
| Host Name | Hostname in the log. |
| Source Zone | User traffic received from the zone. |
| Roles | Role names associated with the event. |
| Reason | Reason for the log generation. For example, unrestricted access. |
| Profile Name | Name of the content filtering profile that triggered the event. |

RELATED DOCUMENTATION
[Events and Logs Overview | 35](#)
[Creating Content Filtering Profiles | 865](#)

Using Events and Logs Settings | 49

Using the Raw Log View | 52

Using the Detailed Log View | 51

CHAPTER 8

Events and Logs-Antispam

IN THIS CHAPTER

- [Antispam Events and Logs Overview | 77](#)

Antispam Events and Logs Overview

IN THIS SECTION

- [Antispam Events—Summary View | 77](#)
- [Antispam Events—Detail View | 78](#)

Use this page to view information about security events based on antispam policies. The event viewer provides a view of all antispam events and the action taken by the antispam scanner.

The *antispam* scanner inspects and block spam by scanning inbound and outbound SMTP e-mail traffic. The filtering can be server-based using an external spam block list server or local-based using local lists (blocklists and allowlists) for matching.

Using the time-frame slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

There are two ways to view your data. You can select either the summary view or the detail view.

Antispam Events—Summary View

Click Summary View for a brief summary of all the antispam events in your network. The top of the page has a swim lane graph of all antispam events.

You can use the widget at the bottom of the page to view source IP addresses of the network traffic; sorted by event count.

Antispam Events—Detail View

Click Detail View for comprehensive details of events in a tabular format that includes sortable columns. You can aggregate the events using the Group by option. For example, you can group the events based on source country. The table includes information such as the event name, Content Security category, source IP address, source country, and so on.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 19 on page 78](#) for descriptions of columns in this view.

Table 19: Columns in Detail View

| Column | Description |
|---|--|
| Time | Time when the event occurred. |
| Event Name | Event name of the log. |
| Source Country | Source country name from where the event originated. |
| Source IP | Source IP address from where the event occurred (IPv4 or IPv6). |
| Description | Description of the log. |
| Content Security Category or Virus Name | Content Security category of the log: enhanced, local, and redirect. |
| URL | Accessed URL name that triggered the event. |
| Action | Action taken for the event: warning, allow, and block. |

Table 19: Columns in Detail View (Continued)

| Column | Description |
|--------------|--|
| Log Source | IP address of the log source (IPv4 or IPv6). |
| Host Name | Hostname in the log. |
| Source Zone | User traffic received from the zone. |
| Roles | Role names associated with the event. |
| Reason | Reason for the log generation. For example, unrestricted access. |
| Profile Name | Name of the antispam profile that triggered the event. |

RELATED DOCUMENTATION
[Events and Logs Overview | 35](#)
[Using Events and Logs Settings | 49](#)
[Creating Antispam Profiles | 861](#)
[Using the Raw Log View | 52](#)
[Using the Detailed Log View | 51](#)
[Viewing Threats | 50](#)

Events and Logs-Antivirus

IN THIS CHAPTER

- [Antivirus Events and Logs Overview | 80](#)

Antivirus Events and Logs Overview

IN THIS SECTION

- [Antivirus Events—Summary View | 80](#)
- [Antivirus Events—Detail View | 81](#)

Use this page to view information about security events based on antivirus policies. The event viewer provides a view of all antivirus events and the action taken by the virus scanner.

The *antivirus* scanner inspects files transmitted over several protocols to determine if the files exchanged are malicious (for example, viruses, Trojans, rootkits, and worms).

Using the time-frame slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

There are two ways to view your data. You can select either the summary view or the detail view.

Antivirus Events—Summary View

Click **Summary View** for a brief summary of all the antivirus events in your network. The top of the page has a swim lane graph of all the antivirus events against the blocked events. You can use the widgets at the bottom of the page to view critical information such as top blocked protocol commands, top reasons, and top sources. See [Table 20 on page 81](#) for descriptions of the widgets in this view.

Table 20: Widgets in Summary View

| Widget | Description |
|--------------------------------|---|
| Top Sources | Top source IP addresses of the network traffic; sorted by event count. |
| Top Destinations | Top destination IP addresses of the network traffic; sorted by event count. |
| Top Reporting/Attacked Devices | Top reporting/attacked device IP addresses; sorted by event count. |
| Top Viruses | Top virus names detected; sorted by event count. |
| Top Source Countries | Top source country names where the events originated; sorted by event count. |
| Top Destination Countries | Top destination country names where the events occurred; sorted by event count. |

Antivirus Events—Detail View

Click **Detail View** for comprehensive details of events in a tabular format that includes sortable columns. You can aggregate the events using the Group by option. For example, you can group the events based on source country. The table includes information such as the event name, Content Security category, source IP address, source country, and so on.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 21 on page 81](#) for descriptions of columns in this view.

Table 21: Columns in Detail View

| Column | Description |
|--------|-------------------------------|
| Time | Time when the event occurred. |

Table 21: Columns in Detail View (Continued)

| Column | Description |
|---|--|
| Event Name | Event name of the log. |
| Source Country | Source country name from where the event originated. |
| Source IP | Source IP address from where the event occurred (IPv4 or IPv6). |
| Destination Country | Destination country name from where the event occurred. |
| Destination IP | Destination IP address of the event (IPv4 or IPv6). |
| Source Port | Source port of the event. |
| Destination Port | Destination port of the event |
| Description | Description of the log |
| Content Security Category or Virus Name | Content Security category of the log: enhanced, local, and redirect. |
| URL | Accessed URL name that triggered the event. |
| Action | Action taken for the event: warning, allow, and block. |
| Log Source | IP address of the log source (IPv4 or IPv6). |
| Host Name | Hostname in the log. |
| Source Zone | User traffic received from the zone. |
| Roles | Role names associated with the event. |

Table 21: Columns in Detail View *(Continued)*

| Column | Description |
|--------------|--|
| Reason | Reason for the log generation. For example, unrestricted access. |
| Profile Name | Name of the antivirus profile that triggered the event. |

RELATED DOCUMENTATION

| | |
|--|---------------------|
| Events and Logs Overview | 35 |
| Creating Antivirus Profiles | 857 |
| Using Events and Logs Settings | 49 |
| Using the Raw Log View | 52 |
| Using the Detailed Log View | 51 |

Events and Logs-IPS

IN THIS CHAPTER

- [IPS Events and Logs Overview | 84](#)

IPS Events and Logs Overview

IN THIS SECTION

- [IPS Events—Summary View | 84](#)
- [IPS Events—Detail View | 85](#)

Use the IPS Events page to view information about security events based on IPS policies. Analyzing IPS logs yields useful security management information, such as abnormal events, attacks, viruses, or worms.

Using the time-frame slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the custom button to set a custom time range.

By default, you can view data for all the devices. To view data for a specific device, click on the link beside Devices and select a device.

There are two ways to view your data. You can select either the summary view or the detail view.

IPS Events—Summary View

Click **Summary View** for a brief summary of all the IPS events in your network. The data presented in the area graph is refreshed automatically based on the selected time range.

You can use widgets to view critical information such as IPS severities, top sources, top destinations, top reporting devices, top IPS attacks, top source countries, and top destination countries. See [Table 22 on page 85](#) for descriptions of the widgets in this view.

Table 22: IPS Events Summary View Widgets

| Widget | Description |
|--------------------------------|---|
| IPS Severities | IPS severities of the events based on the severity level: high, medium, low. |
| Top Sources | Top source IP addresses of the network traffic; sorted by the number of event occurrences. |
| Top Destinations | Top destination IP addresses of the network traffic; sorted by the number of event occurrences. |
| Top Reporting/Attacked Devices | Top devices that are attacked by IPS events; sorted by the number of times users are active on the network. |
| Top IPS attacks | Top IPS attacks in the network traffic; sorted by the times devices are attacked. |
| Top Source Countries | Top source countries from where the event source originated; sorted by the number of IP addresses. |
| Top Destination Countries | Top destination countries targeted for the attack; sorted by the number of destination IP addresses. |

IPS Events—Detail View

Click **Detail View** for comprehensive details of events in a tabular format that includes sortable columns. You can sort the events using the Group by option. For example, you can sort the events based on severity. The table includes information such as the rule that caused the event, severity for the event, event ID, traffic information, and how and when the event was detected.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.



NOTE: Packet capture is applicable for IPS packets. See ["Packet Capture Overview" on page 221](#).

See [Table 23 on page 86](#) for descriptions of columns in this view.

Table 23: IPS Events Detail Columns

| Column | Description |
|---------------------|---|
| Time | The time when the log was received. |
| Event Name | Event name of the log. |
| Source Country | Source country name from where the event originated. |
| Source IP | Source IP address from where the event occurred. |
| Destination Country | Destination country name from where the event occurred. |
| Destination IP | Destination IP address of the event. |
| Source Port | Source port of the event. |
| Destination Port | Destination port of the event. |
| Description | Description of the log. |
| Attack name | Attack name of the log: Trojan, worm, virus, and so on. |
| Threat Severity | The threat severity of the event. |
| Policy Name | The policy name in the log. |
| Action | Action taken for the event: warning, allow, and block. |

Table 23: IPS Events Detail Columns *(Continued)*

| Column | Description |
|----------------------|--|
| Log Source | The IP address of the log source. |
| Application | The application name from which the events or logs are generated. |
| Hostname | The host name in the log. |
| Service Name | The name of the application service. For example, FTP, HTTP, SSH, and so on. |
| Nested Application | Nested application name in the log. |
| Source Zone | The source zone of the log. |
| Destination Zone | The destination zone of the log. |
| Protocol ID | The protocol ID in the log. |
| NAT Source Port | Translated source port. |
| NAT Destination Port | Translated destination port |
| NAT Source IP | NAT source IP address of the log. |
| NAT Destination IP | NAT destination IP address of the log. |
| Rule Name | Name of the rule. |

RELATED DOCUMENTATION

[Events and Logs Overview](#) | 35

[Creating IPS Policies](#) | 714

[Using Events and Logs Settings | 49](#)

[Using the Raw Log View | 52](#)

[Downloading Packets Captured | 56](#)

[Showing Attack Details | 57](#)

Events and Logs-Screen

IN THIS CHAPTER

- [Screen Events and Logs Overview | 89](#)

Screen Events and Logs Overview

IN THIS SECTION

- [Screen Events—Summary View | 89](#)
- [Screen Events—Detail View | 90](#)

You can use the Screen Events page to view the information about security events based on screen profiles. Analyzing screen logs yields information such as attack name, action taken, source of an attack, and destination of an attack.

Using the Time Range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

By default, you can view data for all the devices. To view data for a specific device, click on the link beside Devices and select a device.

There are two ways to view your data. You can select either the summary view or the detail view.

Screen Events—Summary View

Click **Summary View** for a brief summary of all Screen events in your network. The data presented in the area graph is refreshed automatically based on the selected time range.

You can use widgets to view critical information such as top sources, top destinations, top source countries, and top destination countries. See [Table 24 on page 90](#) for descriptions of the widgets in this view.

Table 24: Screen Events Summary View Widgets

| Widget | Description |
|---------------------------|--|
| Top Sources | Top source IP addresses of the network traffic; sorted by the number of event occurrences. |
| Top Destinations | Top destination IP addresses of the network traffic; sorted by the number of event occurrences. |
| Top Source Countries | Top source countries from where the event source originated; sorted by the number of IP addresses. |
| Top Destination Countries | Top destination countries targeted for the attack; sorted by the number of destination IP addresses. |

Screen Events—Detail View

Click **Detail View** for comprehensive details of all screen events in a tabular format that includes sortable columns. You can sort the events using the Group by option. For example, you can sort the events based on threat severity. The table includes information such as the event name, source country, source IP, destination country, attack name, and so on.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 25 on page 91](#) for descriptions of columns in this view.

Table 25: Screen Events Detail View Columns

| Column | Description |
|---------------------|---|
| Log Generated Time | The time when the log was received. |
| Event Name | Event name of the log. |
| Source Country | Source country name from where the event originated. |
| Source IP | Source IP address from where the event occurred. |
| Destination Country | Destination country name from where the event occurred. |
| Attack Name | Attack name of the log. |
| Destination IP | Destination IP address of the event. |
| Source Port | Source port of the event. |
| Destination Port | Destination port of the event. |
| Description | Description of the log. |
| Threat Severity | The threat severity of the event. |
| Policy Name | The policy name in the log. |
| Action | Action taken for the event: warning, allow, and block. |
| Log Source | The IP address of the log source. |
| Hostname | The hostname in the log. |

Table 25: Screen Events Detail View Columns *(Continued)*

| Column | Description |
|------------------|----------------------------------|
| Source Zone | The source zone of the log. |
| Destination Zone | The destination zone of the log. |
| Protocol ID | The protocol ID in the log. |

RELATED DOCUMENTATION

| | |
|--|--------------------|
| Events and Logs Overview | 35 |
| Using Events and Logs Settings | 49 |

Events and Logs-ATP Cloud

IN THIS CHAPTER

- [ATP Cloud Events and Logs Overview | 93](#)

ATP Cloud Events and Logs Overview

IN THIS SECTION

- [ATP Cloud Events—Summary View | 93](#)
- [ATP Cloud Events—Detail View | 94](#)

You can use the ATP Cloud Events page to view the information about security events based on ATP Cloud policies. Analyzing the ATP Cloud logs yields information such as malware name, action taken, infected host, source of an attack, and destination of an attack.

Using the Time Range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

By default, you can view data for all the devices. To view data for a specific device, click on the link beside Devices and select a device.

There are two ways to view your data. You can select either the summary view or the detail view.

ATP Cloud Events—Summary View

Click **Summary View** for a brief summary of all the ATP Cloud events in your network. The data presented in the area graph is refreshed automatically based on the selected time range.

You can use widgets to view critical information, such as top infected hosts, top malware, top source countries, and top destination countries. See [Table 26 on page 94](#) for descriptions of the widgets in this view.

Table 26: ATP Cloud Events Summary View Widgets

| Widgets | Description |
|---------------------------|--|
| Top Infected Hosts | Top infected hosts based on their associated threat level and blocked status. |
| Top Malware | Top malware found based on the number of times the malware is detected over a period of time. |
| Top Source Countries | Top source countries from where the event source originated; sorted by the number of IP addresses. |
| Top destination countries | Top destination countries targeted for the attack; sorted by the number of destination IP addresses. |

ATP Cloud Events—Detail View

Click **Detail View** for comprehensive details of all ATP Cloud events in a tabular format that includes sortable columns. You can sort the events using the Group by option. For example, you can sort the events based on threat severity. The table includes information such as the event name, source country, source IP, destination country, malware information, and so on.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 27 on page 94](#) for descriptions of columns in this view.

Table 27: ATP Cloud Events Detail View Columns

| Column | Description |
|--------------------|-------------------------------------|
| Log Generated Time | The time when the log was received. |

Table 27: ATP Cloud Events Detail View Columns (Continued)

| Column | Description |
|---------------------|---|
| Event Name | Event name of the log. |
| Source Country | Source country name from where the event originated. |
| Source IP | Source IP address from where the event occurred. |
| Destination Country | Destination country name from where the event occurred. |
| Client Hostname | The hostname of the client requesting the DHCP server. |
| Malware Info | Information about the malware. |
| Destination IP | Destination IP address of the event. |
| Source Port | Source port of the event. |
| Destination Port | Destination port of the event. |
| Description | Description of the log. |
| Attack Name | Attack name of the log. |
| Threat Severity | The threat severity of the event. |
| Policy Name | The policy name in the log. |
| Action | Action taken for the event: warning, allow, and block. |
| Log Source | The IP address of the log source. |

Table 27: ATP Cloud Events Detail View Columns *(Continued)*

| Column | Description |
|--------------------|--|
| Application | The application from where the events or logs are generated. |
| Hostname | The hostname in the log. |
| Service Name | The name of the application service. For example, FTP, HTTP, SSH, and so on. |
| Nested Application | The nested application in the log. |
| Source Zone | The source zone of the log. |
| Destination Zone | The destination zone of the log. |
| Protocol ID | The protocol ID in the log. |

RELATED DOCUMENTATION[Events and Logs Overview | 35](#)[Using Events and Logs Settings | 49](#)

Events and Logs-Apptrack

IN THIS CHAPTER

- [Apptrack Events and Logs Overview | 97](#)

Apptrack Events and Logs Overview

IN THIS SECTION

- [Apptrack Events—Summary View | 97](#)
- [Apptrack Events—Detail View | 98](#)

You can use the Apptrack Events page to view information about security events based on Apptrack policies. The Apptrack logs help you analyze the applications, the users using these applications, and bandwidth consumed by the applications.

Use the Time Range slider, to quickly focus on the area of activity that you are interested in. Once the time range is selected, the data on the page is refreshed automatically. You can also use the Custom button to set a custom time range.

By default, you can view data for all the devices. To view data for a specific device, click on the link beside Devices and select a device.

There are two ways to view your data. You can select either the summary view or the detail view.

Apptrack Events—Summary View

Click **Summary View** for a brief summary of all the Apptrack events in your network. The data presented in the area graph is refreshed automatically based on the selected time range.

You can use widgets to view critical information, such as top sources, top destinations, top users, and top applications. See [Table 28 on page 98](#) for descriptions of the widgets in this view.

Table 28: Apptrack Events Summary View Widgets

| Widgets | Description |
|------------------|---|
| Top Sources | Top source IP addresses of the network traffic; sorted by event count. |
| Top Destinations | Top destination IP addresses of the network traffic; sorted by event count. |
| Top Users | Top users of the network traffic; sorted by event count. |
| Top Applications | Top applications of the network traffic; sorted by event count. |

Apptrack Events—Detail View

Click **Detail View** for comprehensive details of all Apptrack events in a tabular format that includes sortable columns. You can sort the events using the Group by option. The table includes information such as the event name, source country, source IP, destination country, and so on.

The Legacy Node option is displayed in the event viewer after the legacy log collector node is added on the Logging Nodes page. We've added the legacy log collector support only for read only purpose to view existing log collector data. New logs should point to Security Director Insights VM as the log collector. Select the **Legacy Node** checkbox to view the existing log collector data. When you clear the Legacy Node checkbox, Security Director Insights log collector data is displayed.

See [Table 29 on page 98](#) for descriptions of columns in this view.

Table 29: Apptrack Events Detail View Columns

| Column | Description |
|--------------------|--------------------------------------|
| Log Generated Time | The time when the log was generated. |
| Log Received Time | The time when the log was received. |
| Event Name | Event name of the log. |

Table 29: Apptrack Events Detail View Columns (Continued)

| Column | Description |
|---------------------|--|
| Source Country | Source country name from where the event originated. |
| Source IP | Source IP address from where the event occurred. |
| Destination Country | Destination country name from where the event occurred. |
| Destination IP | Destination IP address of the event. |
| Source Port | Source port of the event. |
| Destination Port | Destination port of the event. |
| Description | Description of the log. |
| Policy Name | The policy name in the log. |
| Event Category | The event category of the log |
| User Name | The username of the log. |
| Log Source | The IP address of the log source. |
| Application | The application from where the events or logs are generated. |
| Hostname | The hostname in the log. |
| Service Name | The name of the application service. For example, FTP, HTTP, SSH, and so on. |
| Nested Application | The nested application in the log. |

Table 29: Apptrack Events Detail View Columns (Continued)

| Column | Description |
|---------------------------|--|
| Source Zone | The source zone of the log. |
| Destination Zone | The destination zone of the log. |
| Protocol ID | The protocol ID in the log. |
| Reason | The reason for the log generation. |
| NAT Source Port | The translated source port. |
| NAT Destination Port | The translated destination port |
| NAT Source Rule Name | The NAT source rule name. |
| NAT Destination Rule Name | The NAT destination rule name. |
| NAT Source IP | The translated (or natted) source IP address. It can contain IPv4 or IPv6 addresses. |
| NAT Destination IP | The translated (also called natted) destination IP address. |
| Traffic Session ID | The traffic session ID of the log. |
| Logical System Name | The name of the logical system. |
| Rule Name | The name of the rule. |
| Profile Name | The name of the All events profile that triggered the event. |

RELATED DOCUMENTATION

[Events and Logs Overview](#) | 35

[Using Events and Logs Settings](#) | 49

Threat Prevention-Hosts

IN THIS CHAPTER

- [Infected Hosts Overview | 102](#)
- [Infected Host Details | 103](#)

Infected Hosts Overview

The hosts page lists compromised hosts and their associated threat levels. From here, you can monitor and mitigate malware detections on a per host basis.



NOTE: You must select ATP Cloud realm from the available pulldown.

Compromised hosts are systems for which there is a high confidence that attackers have gained unauthorized access. When a host is compromised, the attacker can do several things to the computer, such as:

- Send junk or spam e-mail to attack other systems or distribute illegal software.
- Collect personal information, such as passwords and account numbers.

Compromised hosts are listed as secure intelligence data feeds (also called information sources.) The data feed lists the IP address or IP subnet of the host along with a threat level; for example, 130.131.132.133 and threat level 5. Once threats are identified, you can create threat prevention policies to take enforcement actions on the inbound and outbound traffic on these infected hosts.

Export Data—Click the Export button to download compromised host data to a CSV file. You are prompted to narrow the data download to a selected time-frame.

RELATED DOCUMENTATION

[Infected Host Details](#)

HTTP File Download Overview

HTTP File Download Details

Email Attachments Scanning Overview

Email Attachments Scanning Details

File Scanning Limits

Infected Host Details

Use the host details page to view in-depth information about current threats to a specific host by time frame. From here you can change the investigation status and the blocked status of the host.

Table 30 on page 103 shows the information provided on the host details page:

Table 30: Threat Level Definitions

| Threat Level | Definition |
|--------------|---|
| 0 | Clean; no action is required. |
| 1-3 | Low threat level. Recommendation: Disable this host. |
| 4-6 | Medium threat level. Recommendation: Disable this host. |
| 7-10 | High threat level. Host has been automatically blocked. |

- **Host Status**—Displays the current state by threat level, which could be any of the levels described in the table above.
- **Investigation Status**—The following states of investigation are available: Open, In progress, Resolved - false positive, Resolved - fixed, and Resolved - ignored.
- **Policy override for this host**—The following options are available: Use configured policy (not included in infected hosts feed), Always include host in infected hosts feed, Never include host in infected hosts feed.



NOTE: The blocked status changes in relation to the investigation state. For example, when a host changes from an open status (Open or In Progress) to one of the resolved

statuses, the blocked status is changed to allowed and the threat level is brought down to 0. Also, when the investigation status is changed to resolved, an event is added to the log at the bottom of the page.

- Host threat level graph—This is a color-coded graphical representation of threats to this host displayed by time frame. You can change the time frame, and you can slide the graph backward or forward to zoom in or out on certain times. When you zoom in, you can view individual days within a month.
- Expand time-frame to separate events—Use this check box to stretch a period of time and see the events spread out individually.
- Past threats—The date and status of past threats to this host are listed here. The time frame set previously also applies to this list. The description for each event provides details about the threat and the action taken at the time.

RELATED DOCUMENTATION

Infected Hosts Overview

HTTP File Download Overview

HTTP File Download Details

File Scanning Limits

Threat Prevention-C&C Servers

IN THIS CHAPTER

- [Command and Control Servers Overview | 105](#)
- [Command and Control Server Details | 107](#)

Command and Control Servers Overview

The Command and Control (C&C) servers page lists information on servers that have attempted to contact and compromise hosts on your network. A C&C server is a centralized computer that issues commands to botnets (compromised networks of computers) and receives reports back from them. Botnets can be used to gather sensitive information, such as account numbers or credit card information, or to participate in a distributed denial-of-service (DDoS) attack.



NOTE:

- C&C and Geo IP filtering feeds are only available with ATP Cloud premium license.
- When managing ATP Cloud with Security Director, you must select ATP Cloud realm from the available pulldown.

When a host on your network tries to initiate contact with a possible C&C server on the Internet, the SRX Series device can intercept the traffic and perform an enforcement action based on real-time intelligence feed information that identifies the C&C server IP address and URL.

- **Export Data**—Click the **Export** button to download C&C data to a CSV file. You are prompted to narrow the data download to a selected time-frame.
- **Report False Positives**—Click the **FP/FN** button to launch a new screen which lets you send a report to Juniper Networks, informing Juniper of a false position or a false negative. Juniper will investigate the report, however, this does not change the verdict. If you want to make a correction (mark system as clean) you must do it manually.

[Table 31 on page 106](#) provides the following information available on the C&C page.

Table 31: Command & Control Server Data Fields

| Field | Definition |
|------------------|---|
| C&C Server | The IP address of the suspected command and control server. |
| C&C Threat Level | The threat level of the C&C server as determined by an analysis of actions and behaviors. |
| Hits | The number of times the C&C server has attempted to contact hosts on your network. |
| C&C Country | The country where the C&C server is located. |
| Last Seen | The date and time of the most recent C&C server hit. |
| Protocol | The protocol (TCP or UDP) the C&C server used to attempt communication. |
| Client Host | The IP address of the host the C&C server attempted to communicate with. |
| Action | The action taken on the communication (permitted or blocked). |

RELATED DOCUMENTATION

Command and Control Server Details

HTTP File Download Overview

Email Attachments Scanning Overview

Email Attachments Scanning Details

File Scanning Limits

Command and Control Server Details

IN THIS SECTION

- [Hosts That have Contacted This C&C Server | 107](#)
- [Associated Domains | 108](#)
- [Signatures | 108](#)

Use Command and Control Server Details page to view analysis information and a threat summary for the C&C server. The following information is displayed for each server.

- Total Hits
- Threat Summary (Threat level, Location, Category, Time last seen)
- Ports and protocols used

You can filter this information by clicking on the time-frame links: 1 day, 1 week, 1 month, Custom (select your own time-frame). You can also expand the time-frame to separate events using the slider.

Hosts That have Contacted This C&C Server

This is a list of hosts that have contacted the server. [Table 32 on page 107](#) shows the information provided in this section:

Table 32: Command & Control Server Contacted Host Data

| Field | Definition |
|-------------------|---|
| Client Host | The name of the host in contact with the command and control server. |
| Client IP Address | The IP address of the host in contact with the command and control server. (Click through to the Host Details page for this host IP.) |
| C&C Threat Level | The threat level of the C&C server as determined by an analysis of actions and behaviors. |

Table 32: Command & Control Server Contacted Host Data (Continued)

| Field | Definition |
|-------------|---|
| Action | The action taken on the communication (permitted or blocked). |
| Protocol | The protocol (TCP or UDP) the C&C server used to attempt communication. |
| Port | The port the C&C server used to attempt communication. |
| Device Name | The name of the device in contact with the command and control server. |
| Date Seen | The date and time of the most recent C&C server hit. |
| Username | The name of the host user in contact with the command and control server. |

Associated Domains

This is a list of domains the destination IP addresses in the C&C server events resolved to.

Signatures

This is a list of command and control indicators that were detected.

RELATED DOCUMENTATION

Command and Control Servers Overview

Infected Hosts Overview

HTTP File Download Overview

Threat Prevention-HTTP File Download

IN THIS CHAPTER

- [HTTP File Download Overview | 109](#)
- [HTTP File Download Details | 111](#)

HTTP File Download Overview

A record is maintained of all file metadata sent to the cloud for inspection. These are files downloaded by hosts and found to be suspicious based on known signatures or URLs. From the main page, click the file’s signature to view more information, such as file details, what other malware scanners say about this file, and a complete list of hosts that downloaded this file.



NOTE: When managing Juniper ATP Cloud with Security Director, you must select ATP Cloud realm from the available pulldown.

Export Data—Click the Export button to download file scanning data to a CSV file. You are prompted to narrow the data download to a selected time-frame.

[Table 33 on page 109](#) shows the following information available on this page:

Table 33: HTTP Scanning Data Fields

| Field | Definition |
|----------------|---|
| File Signature | A unique identifier located at the beginning of a file that provides information on the contents of the file. The file signature can also contain information that ensures the original data stored in the file remains intact and has not been modified. |

Table 33: HTTP Scanning Data Fields *(Continued)*

| Field | Definition |
|----------------|--|
| Threat Level | <p>The threat score.</p> <p>NOTE: Click the three vertical dots at the top of the column to filter the information on the page by threat level.</p> |
| Filename | <p>The name of the file, including the extension.</p> <p>NOTE: Enter text in the space at the top of the column to filter the data.</p> |
| Last Submitted | The time and date of the most recent scan of this file. |
| URL | <p>The URL from which the file originated.</p> <p>NOTE: Enter text in the space at the top of the column to filter the data.</p> |
| Malware | <p>The name of file and the type of threat if the verdict is positive for malware. Examples: Trojan, Application, Adware. If the file is not malware, the verdict is "clean."</p> <p>NOTE: Enter text in the space at the top of the column to filter the data.</p> |
| Category | <p>The type of file. Examples: PDF, executable, document.</p> <p>NOTE: Enter text in the space at the top of the column to filter the data.</p> |

RELATED DOCUMENTATION

HTTP File Download Details

SMTP Quarantine Overview

Email Attachments Scanning Overview

File Scanning Limits

HTTP File Download Details

IN THIS SECTION

- [File Summary | 111](#)
- [HTTP Downloads | 113](#)

Use the File Scanning Details page to view analysis information and malware behavior summaries for the downloaded file. In the HTTP File Download page, click on the **File Signature** to go to the File Scanning Details page. This page is divided into several sections:

Report False Positives—Click the **Report False Positive** button to launch a new screen which lets you send a report to Juniper Networks, informing Juniper of a false position or a false negative. Juniper will investigate the report, however, this does not change the verdict. If you want to make a correction (mark system as clean) you must do it manually.

Printable View—Click this link to organize the information into a print-ready format.

The top of the page provides a quick view of the following information (scroll to the right in the UI to see more boxes):

- **Threat Level**—This is the threat level assigned (0-10), This box also provides the threat category and the action taken.
- **Top Indicators**—In this box, you will find the malware name, the signature it matches, and the IP address/URL from which the file originated.
- **Prevalence**—This box provides information on how often this malware has been seen, how many individual hosts on the network downloaded the file, and the protocol used.

File Summary

Table 34: General Summary Fields

| Field | Definition |
|--------------|---|
| Threat Level | This is the assigned threat level 0-10. 10 is the most malicious. |

Table 34: General Summary Fields *(Continued)*

| Field | Definition |
|-------------------|---|
| Global Prevalence | How often this file has been seen across different customers. |
| Last Scanned | The time and date of the last scan to detect the suspicious file. |
| File Name | The name of the suspicious file. Examples: unzipper-setup.exe, 20160223158005.exe,, wordmui.msi. |
| Category | The type of file. Examples: PDF, executable, document. |
| File Size | The size of the downloaded file. |
| Platform | The target operating system of the file. Example. Win32 |
| Malware Name | If possible, ATP Cloud determines the name of the malware. |
| Malware Type | If possible, Juniper ATP Cloud determines the type of threat. Example: Trojan, Application, Adware. |
| Malware Strain | If possible, Juniper ATP Cloud determines the strain of malware detected. Example: Outbrowse.1198, Visicom.E, Flystudio. |
| sha256 and md5 | One way to determine whether a file is malware is to calculate a checksum for the file and then query to see if the file has previously been identified as malware. |

In the Network Activity section, you can view information in the following tabs:

- **Contacted Domains**—If available, lists any domains that were contacted while executing the file in the Juniper ATP Cloud sandbox.
- **Contacted IPs**—If available, lists all IPs that were contacted while executing the file, along with the destination IP's country, ASN, and reputation. The reputation field is based on Juniper IP intelligence data destination.

- **DNS Activity**— This tab lists DNS activity while executing the file, including reverse lookup to find the domain name of externally contacted servers. This tab also provides the known reputation of the destination servers.

HTTP Downloads

This is a list of hosts that have downloaded the suspicious file. Click the **IP address** to be taken to the Host Details page for this host. Click the **Device Serial number** to be taken to the Devices page. From there you can view device versions and version numbers for the Juniper ATP Cloud configuration, including profile, allowlist, and blocklist versions. You can also view the malware detection connection type for the device: telemetry, submission, or C&C event.

RELATED DOCUMENTATION

[*HTTP File Download Details*](#)

[*SMTP Quarantine Overview*](#)

[*Email Attachments Scanning Overview*](#)

[*File Scanning Limits*](#)

Threat Prevention-Email Quarantine and Scanning

IN THIS CHAPTER

- SMTP Quarantine Overview | 114
- Email Attachments Scanning Overview | 116
- Email Attachments Scanning Details | 118

SMTP Quarantine Overview

Access this page from the **Monitor** menu.

The SMTP quarantine monitor page lists quarantined emails with their threat score and other details including sender and recipient. You can also take action on quarantined emails here, including releasing them and adding them to the blocklist.

The following information is available from the Summary View:

Table 35: Blocked Email Summary View

| Field | Description |
|-----------------------|---|
| Time Range | Use the slider to narrow or increase the time-frame within the selected the time parameter in the top right: 12 hrs, 24 hrs, 7 days or custom. |
| Total Email Scanned | This lists the total number of emails scanned during the chosen time-frame and then categorizes them into blocked, quarantined, released, and permitted emails. |
| Malicious Email Count | This is a graphical representation of emails, organized by time, with lines for blocked emails, quarantined and not released emails, and quarantined and released emails. |

Table 35: Blocked Email Summary View (Continued)

| Field | Description |
|----------------------|---|
| Emails Scanned | This is a graphical representation of emails, organized by time, with lines for total emails, and emails with one or more attachments. |
| Email Classification | This is another graphical view of classified emails, organized by percentage of blocked emails, quarantined and not released emails, and quarantined and released emails. |

The following information is available from the Detail View:

Table 36: Blocked Email Detail View

| Field | Description |
|----------------------|---|
| Recipient | The email address of the recipient. |
| Sender | The email address of the sender. |
| Subject | Click the Read This link to go to the Juniper ATP Cloud quarantine portal and preview the email. |
| Date | The date the email was received. |
| Malicious Attachment | Click on the attachment name to go to the Juniper ATP Cloud file scanning page where you can view details about the attachment. |
| Size | The size of the attachment in kilobytes. |
| Threat Score | The threat score of the attachment, 0-10, with 10 being the most malicious. |
| Threat Name | The type of threat found in the attachment, for example, worm or trojan. |

Table 36: Blocked Email Detail View *(Continued)*

| Field | Description |
|--------|---|
| Action | The action taken, including the date and the person (recipient or administrator) who took the action. |

Using the available buttons on the Details page, you can take the following actions on blocked emails:

- Add domain to blocklist
- Add sender to blocklist
- Release

RELATED DOCUMENTATION

HTTP File Download Overview

HTTP File Download Details

Email Attachments Scanning Overview

Email Attachments Scanning Overview

A record is kept of all file metadata sent to the cloud for inspection. These are files downloaded by hosts and found to be suspicious based on known signatures. From the main page, click the file's signature to view more information, such as file details, what other malware scanners say about this file, and a complete list of hosts that downloaded this file.



NOTE: You must select a ATP Cloud realm from the available pulldown.

Export Data—Click the Export button to download file scanning data to a CSV file. You are prompted to narrow the data download to a selected time-frame.

Table 37 on page 117 shows the information available on this page.

Table 37: Email Attachments Scanning Data Fields

| Field | Definition |
|----------------|---|
| File Signature | A unique identifier located at the beginning of a file that provides information on the contents of the file. The file signature can also contain information that ensures the original data stored in the file remains intact and has not been modified. |
| Threat Level | The threat score. |
| Date Scanned | The date and time the file was scanned. |
| Filename | The name of the file, including the extension. |
| Recipient | The email address of the intended recipient. |
| Sender | The email address of the sender. |
| Malware Name | The type of malware found. |
| Status | Indicates whether the file was blocked or permitted. |
| Category | The type of file. Examples: PDF, executable, document. |

RELATED DOCUMENTATION

Email Attachments Scanning Details

SMTP Quarantine Overview

File Scanning Limits

Email Attachments Scanning Details

IN THIS SECTION

- [File Summary](#) | 118

Use the File Scanning Details page to view analysis information and malware behavior summaries for the downloaded file. In the Email Attachments page, click on the **File Signature** to go to the File Scanning Details page. This page is divided into several sections:

Report False Positives—Click the **Report False Positive** button to launch a new screen which lets you send a report to Juniper Networks, informing Juniper of a false position or a false negative. Juniper will investigate the report, however, this does not change the verdict. If you want to make a correction (mark system as clean) you must do it manually.

Printable View—Click this link to organize the information into a print-ready format.

The top of the page provides a quick view of the following information (scroll to the right in the UI to see more boxes):

- **Threat Level**—This is the threat level assigned (0-10), This box also provides the threat category and the action taken.
- **Top Indicators**—In this box, you will find the malware name, the signature it matches, and the IP address/URL from which the file originated.
- **Prevalence**—This box provides information on how often this malware has been seen, how many individual hosts on the network downloaded the file, and the protocol used.

File Summary

Table 38: General Summary Fields

| Field | Definition |
|--------------|--|
| Threat Level | This is the assigned threat level 0-10. 10 is the most malicious. |
| Action Taken | The action taken based on the threat level and host settings: block or permit. |

Table 38: General Summary Fields *(Continued)*

| Field | Definition |
|-------------------|---|
| Global Prevalence | How often this file has been seen across different customers. |
| Last Scanned | The time and date of the last scan to detect the suspicious file. |
| File Name | The name of the suspicious file. Examples: unzipper-setup.exe, 20160223158005.exe,, wordmui.msi. |
| Category | The type of file. Examples: PDF, executable, document. |
| File Size | The size of the downloaded file. |
| Platform | The target operating system of the file. Example. Win32 |
| Malware Name | If possible, Juniper ATP Cloud determines the name of the malware. |
| Malware Type | If possible, Juniper ATP Cloud determines the type of threat. Example: Trojan, Application, Adware. |
| Malware Strain | If possible, Juniper ATP Cloud determines the strain of malware detected. Example: Outbrowse.1198, Visicom.E, Flystudio. |
| sha256 and md5 | One way to determine whether a file is malware is to calculate a checksum for the file and then query to see if the file has previously been identified as malware. |

In the Network Activity section, you can view information in the following tabs:



NOTE: This section will appear blank if there has been no network activity.

- **Contacted Domains**—If available, lists any domains that were contacted while executing the file in the Juniper ATP Cloud sandbox.
- **Contacted IPs**—If available, lists all IPs that were contacted while executing the file, along with the destination IP's country, ASN, and reputation. The reputation field is based on Juniper IP intelligence data destination.

- **DNS Activity**—This tab lists DNS activity while executing the file, including reverse lookup to find the domain name of externally contacted servers. This tab also provides the known reputation of the destination servers.

In the Behavior Details section, you can view the behavior of the file on the system. This includes any processes that were started, files that were dropped, and network activity seen during the execution of the file. Dropped files are any additional files that were downloaded and installed by the original file.

RELATED DOCUMENTATION

Email Attachments Scanning Overview

Infected Hosts Overview

HTTP File Download Overview

SMTP Quarantine Overview

File Scanning Limits

Threat Prevention-IMAP Block

IN THIS CHAPTER

- [IMAP Block Overview | 121](#)

IMAP Block Overview

The IMAP Block monitor page lists blocked emails with their threat score and other details including sender and recipient. You can also take action on blocked emails here, including releasing them and adding them to the blocklist.

[Table 39 on page 121](#) shows information available from the Summary View tab.

Table 39: Blocked Email Summary View

| Field | Description |
|-----------------------|--|
| ATP Cloud Realm | Select the registered Juniper ATP Cloud realm from the list. |
| Time Range | Use the slider to narrow or increase the time-frame within the selected the time parameter in the top right: 12 hrs, 24 hrs, 7 days or custom. |
| Malicious Email Count | This lists the total number of malicious emails scanned during the chosen time-frame and then categorizes them into blocked, blocked and not allowed, quarantined and allowed. |
| Emails Scanned | This is a graphical representation of all scanned emails, organized by date. |

[Table 40 on page 122](#) shows information available from the Detail View tab.

Table 40: Blocked Email Detail View

| Field | Description |
|----------------------|---|
| Recipient | Specifies the email address of the recipient. |
| Sender | Specifies the email address of the sender. |
| Subject | Click Read This to go to the Juniper ATP Cloud quarantine portal and preview the email. |
| Date | Specifies the date the email was received. |
| Malicious Attachment | Click on the attachment name to go to the Juniper ATP Cloud file scanning page where you can view details about the attachment. |
| Size | Specifies the size of the attachment in kilobytes. |
| Threat Score | Specifies the threat score of the attachment, in a scale of 0-10, with 10 being the most malicious. |
| Threat Name | Specifies the type of threat found in the attachment, for example, worm or trojan. |
| Action | Specifies the action taken, including the date and the person (recipient or administrator) who took the action. |

Using the available buttons on the Details page, you can take the following actions on blocked emails:

- Unblock Attachment for Selected User(s)
- Unblock Attachment for All Users


Threat Prevention-Manual Upload

IN THIS CHAPTER

- [File Scanning Limits | 123](#)

File Scanning Limits

There is a limit to the number of files which can be submitted to the cloud for inspection. This limit is dictated by the device and license type. When the limit is reached, the file submission process is paused.

 **NOTE:** This limit applies to all files, HTTP and SMTP.

Limit thresholds operate on a sliding scale and are calculated within 24-hour time-frame starting "now."

| Perimeter Device | Free License (files per day) | Premium License (files per day) |
|------------------|------------------------------|---------------------------------|
| SRX340 | 200 | 1,000 |
| SRX345 | 300 | 2,000 |
| SRX550m | 500 | 5,000 |
| SRX1500 | 2,500 | 10,000 |
| SRX5400 | 5,000 | 50,000 |
| SRX5600 | 5,000 | 70,000 |

(Continued)

| Perimeter Device | Free License (files per day) | Premium License (files per day) |
|------------------|------------------------------|---------------------------------|
| SRX5800 | 5,000 | 100,000 |
| vSRX(10mbps) | 25 | 200 |
| vSRX(100mbps) | 200 | 1,000 |
| vSRX(1000mbps) | 2,500 | 10,000 |
| vSRX(2000mbps) | 2,500 | 10,000 |
| vSRX(4000mbps) | 3,000 | 20,000 |

RELATED DOCUMENTATION*Infected Hosts Overview**HTTP File Download Overview**Email Attachments Scanning Overview*

Threat Prevention-Feed Status

IN THIS CHAPTER

- [Device Feed Status Details | 125](#)

Device Feed Status Details

Use the Device Feed Status page to view the download status of feeds from various feed sources. You can view the status of feeds for each device.



NOTE: To view the Device Feed Status page, you must have the Threat Management privileges or predefined roles enabled.

To view the details of the device feed status:

1. Select **Monitor > Threat Prevention > Device Feed Status**.
The Device Feed Status page appears.
2. [Table 41 on page 125](#) shows the information provided on the Device Feed Status page.

Table 41: Fields on the Device Feed Status Page

| Column Name | Description |
|-------------|---|
| Device Name | Specifies the name of the device. |
| IP | Specifies the IP address of the device. |
| Model | Specifies the model of the device mentioned in the Device Name column. For example, vSRX. |

Table 41: Fields on the Device Feed Status Page *(Continued)*

| Column Name | Description |
|-----------------|--|
| Feed Name | Specifies the name of the feed downloaded to the device. This also shows the number of feeds downloaded. Click on the number to view the names of the individual feeds. |
| Feed Category | Specifies the category of the feed. For example, CC. |
| Last Downloaded | Specifies the last downloaded date and time of each feed. |

You can click the filter icon to filter the data based on the following fields:

- Device name
- IP address of the device
- Model of the device
- Name of the feed
- Following feed categories:
 - C&C
 - Allowlist
 - Blocklist
 - Infected hosts
 - Dynamic address
 - DDoS
 - GeolP

RELATED DOCUMENTATION

| *About the Feed Sources Page*

Threat Prevention-All Hosts Status

IN THIS CHAPTER

- [All Hosts Status Details | 127](#)

All Hosts Status Details

Use the All Hosts Status page to view the enforcement status of infected hosts feeds. The supported host feeds are custom and Juniper ATP Cloud.

By default, details for both custom and Juniper ATP Cloud hosts are shown. You must select the required feed type from the Feed Source column.



NOTE: To view the All Hosts Status page, you must have the Threat Management privileges or predefined roles enabled.

To see the details of all hosts status:

1. Select **Monitor > Threat Prevention > All Hosts Status**.

The All Hosts Status page appears.

2. [Table 42 on page 127](#) shows the information provided on the All Hosts Status page.

Table 42: Fields on All Hosts Status Page

| Column Name | Description |
|-------------|--|
| IP Address | Specifies the IP address of the feed. |
| MAC Address | Specifies the MAC address of the feed. |
| Feed Name | Specifies the name of the feed. |

Table 42: Fields on All Hosts Status Page *(Continued)*

| Column Name | Description |
|-----------------------------|---|
| Feed Source | Specifies type of the feed source. |
| Action | Specifies the action of the infected host. For example: Block or Quarantine. |
| Enforcement Status | Specifies the enforcement status of the infected host. |
| Switch Name | Specifies the name of the Juniper Networks switch used to monitor the feed. |
| Interface Name | Specifies the interface on the switch where the user is connected to a network. |
| Policy Associated | <p>Specifies the name of the associated threat prevention policy.</p> <p>This column is not shown by default. Click Show Hide Column and select this field to appear on the All Hosts Status page.</p> |
| PEG Associated | <p>Specifies the Policy Enforcement Group (PEG) associated with the policy.</p> <p>This column is not shown by default. Click Show Hide Column and select this field to appear on the All Hosts Status page.</p> |
| Matched Subnet | <p>Specifies the subnet that is added as an endpoint for the PEG.</p> <p>This column is not shown by default. Click Show Hide Column and select this field to appear on the All Hosts Status page.</p> |
| Connector Type | Specifies the type of connector used as an enforcement point. |
| Connector Name | <p>Specifies the name of the connector.</p> <p>This column is not shown by default. Click Show Hide Column and select this field to appear on the All Hosts Status page.</p> |
| Endpoint Address Space Type | <p>Specifies the type of endpoints added to a PEG.</p> <p>This column is not shown by default. Click Show Hide Column and select this field to appear on the All Hosts Status page.</p> |

Table 42: Fields on All Hosts Status Page *(Continued)*

| Column Name | Description |
|-----------------------------|---|
| Endpoint Address Space Name | <p>Specifies the name of an endpoint.</p> <p>This column is not shown by default. Click Show Hide Column and select this field to appear on the All Hosts Status page.</p> |

You can click the filter icon to filter the data based on the following fields:

- Feed source type
- Action
- Enforcement status
- Connector type

RELATED DOCUMENTATION

| *Custom Feed Sources Overview*

Threat Prevention-DDoS Feeds Status

IN THIS CHAPTER

- [DDoS Feeds Status Details | 130](#)

DDoS Feeds Status Details

Use the DDoS Feeds Status page to view the enforcement status of Distributed Denial of Service (DDoS) feeds.

In ATP Cloud Only mode, you do not see the DDoS Feeds Status page under Monitor. An error message is shown that the page is unavailable because the current threat prevention type is set to ATP Cloud only mode.



NOTE: To view the DDoS Feeds Status page, you must have the Threat Management privileges or predefined roles enabled.

To view details of DDoS feeds status:

1. Select **Monitor > Threat Prevention > DDoS Feeds Status**.
The DDoS Feeds Status page appears.
2. [Table 43 on page 130](#) shows information provided on the DDoS Feeds Status page.

Table 43: Fields on the DDoS Feeds Status Page

| Column Name | Description |
|-------------|--|
| Feed Name | Specifies the DDoS feed name to monitor the feeds. |
| Site | Specifies the associated site name with the DDoS feeds |

Table 43: Fields on the DDoS Feeds Status Page *(Continued)*

| Column Name | Description |
|--------------------|---|
| MX Name | Specifies the name of the MX router where DDoS is enabled. |
| MX IP | Specifies the IP address of the MX router. |
| MX Status | Specifies the status of the MX router. |
| Action | <p>Specifies the action taken for the DDoS profile</p> <p>To filter the data based on a specific action, click the filter icon and select the required DDoS profile action from the list.</p> |
| Enforcement Status | <p>Specifies the enforcement status of the feed. Hover over the status to view the reason for that particular status.</p> <p>To filter the data based on a specific enforcement status, click the filter icon and select the required enforcement status from list to monitor the feed.</p> |
| Policy | Specifies the name of the associated threat prevention policy. |
| PEG | Specifies the Policy Enforcement Group (PEG) associated with the policy. |

RELATED DOCUMENTATION

| *Custom Feed Sources Overview*

Applications

IN THIS CHAPTER

- [About the Application Visibility Page | 132](#)
- [Application Visibility Overview | 140](#)
- [Block Applications | 144](#)
- [Block Users | 145](#)
- [Block Source IP Addresses | 146](#)

About the Application Visibility Page

IN THIS SECTION

- [Tasks You Can Perform | 132](#)
- [Field Descriptions | 133](#)

To access this page, click **Monitor > Applications**.

You can use the Application Visibility page to view information related to bandwidth consumption, session establishment, and the risks associated with your applications, users, and source IP addresses. Based on the details, you can block applications, users, and source IP addresses accordingly. You can accelerate business-critical applications, stagger non-critical applications, and block undesirable applications.

Tasks You Can Perform

You can perform the following tasks from this page:

- View applications, users, and source IP addresses in Chart view and Grid view. The data is refreshed automatically based on the time range selection, device selection, and filter criteria. You can select **Time > Custom** to set a custom time range.
- Use the query builder to create search criteria based on the following search options:
 - User—Users consuming the application in the network.
 - Application—Applications consumed in the network.
 - Source IP—Source IP address consuming the application in the network.
 - Destination IP—Destination IP address accessed in the network.



NOTE: The search options and the values are displayed based on the available system logs.

Enter the filter criteria in the chart view, and click **Save** to save the filter. Click the filter icon and select **Show Saved Filters** to view the filters that you created. You can re-use the created filters and the used filter name is displayed in the UI.

- View the aggregate count of applications, content, source IP addresses, and destination IP addresses in the insight bar. The aggregate count changes based on the applied filter values. On click of each count, you are navigated to the event viewer – All Events page with valid filters applied.



NOTE: Based on the filter criteria in the search bar, the count in the insight bar is updated.

- View details of an application.

Select an application and click the Detail View icon or click **More** and select **Detail View** to view details of the application.

- Block applications, see ["Block Applications" on page 144](#)
- Block users, see ["Block Users" on page 145](#)
- Block source IP addresses, see ["Block Source IP Addresses" on page 146](#)

Field Descriptions

[Table 44 on page 134](#) provides guidelines on using the fields of the APPLICATIONS tab in the chart view.

Table 44: APPLICATIONS—Filters in Chart View

| Field | Description |
|--------------------|---|
| Devices | Shows data for all the devices managed by Security Director. Click the All link to select devices. You can select root devices, Logical Systems (LSYS) devices, or Tenant Systems (TSYS) devices to view the result. |
| Show By | <p>Select from the following options to view a user's data:</p> <ul style="list-style-type: none"> • Bandwidth - Shows data based on the amount of bandwidth the application has consumed for a particular time range. • Sessions - Shows data based on the number of sessions consumed by the application. |
| Time | <p>Select the required time range to view a user's data.</p> <p>Use the custom option to choose the time range if you want to view data for more than one day. The time range is from 00:00 hours to 23:59 hours.</p> |
| Number of Sessions | <p>Shows total number of application sessions.</p> <p>When you click the session count link, the All Events page appears.</p> |
| Number of Blocks | Shows total number of times the application was blocked. |
| Bandwidth | Shows bandwidth usage of the application. |
| Risk Level | Shows risk associated with the application. For example, critical, high, unsafe, and so on. |
| Category | Shows category of the application. For example, web, infrastructure, and so on. |
| Characteristics | Shows characteristics of the application. For example, prone to misuse, bandwidth consumer, capable of tunneling, and so on. |
| Block User(s) | Blocks the user from using the application. |

Table 44: APPLICATIONS—Filters in Chart View *(Continued)*

| Field | Description |
|-------------------|--|
| Block Application | Blocks the usage of the application. |
| View All Users | Shows all the users accessing the application. Clicking View All Users link navigates you to the grid view in the USERS tab. |

Table 45 on page 135 describes the widgets of the APPLICATIONS tab in the grid view.

Table 45: APPLICATIONS—Widgets in Grid View

| Widget | Description |
|-------------------------------|--|
| Top Users By Volume | Top users of the application; sorted by bandwidth consumption. |
| Top Apps By Volume | Top applications, such as Amazon, Facebook, and so on of the network traffic; sorted by bandwidth consumption. |
| Top Category By Volume | Top category, such as web, infrastructure, and so on of the application; sorted by bandwidth consumption. |
| Top Characteristics By Volume | Top behavioral characteristics, such as prone to misuse, bandwidth consumer, and so on of the application. |
| Risk Level | Number of events/sessions received; grouped by risk. |

Table 46 on page 135 provides the column details of the APPLICATIONS tab in the grid view.

Table 46: APPLICATIONS—Columns in Grid View

| Field | Description |
|--------|--|
| Status | Indicates whether the application has been blocked or not. If the status is green, then the application is not blocked and if the status is red then the application is blocked. |

Table 46: APPLICATIONS—Columns in Grid View *(Continued)*

| Field | Description |
|------------------|---|
| Application Name | Name of the application, such as Amazon, Facebook, and so on. |
| Ports | Standard or the non-standard port number of the application. |
| Risk Level | Risk associated with the application: critical, high, unsafe, moderate, low, and unknown. |
| Firewall Rule | The rule that allows the particular application. |
| Users | Total number of users accessing the application. |
| Volume | Bandwidth used by the application. |
| Total Sessions | Total number of application sessions. |
| Category | Category of the application, such as web, infrastructure, and so on. |
| Sub Category | Subcategory of the application. For example, social networking, news, and advertisements. |
| Characteristics | Characteristics of the application. For example, prone to misuse, bandwidth consumer, capable of tunneling. |
| Source IP | The source IP address that the firewall rule has allowed. |

[Table 47 on page 137](#) provides the guidelines on using the fields of the USERS tab in the chart view.

Table 47: USERS—Filters in the Chart View

| Filter Name | Description |
|-----------------------|---|
| Devices | Shows data for all the devices managed by Security Director. Click All to select root devices, Logical Systems (LSYS) devices, or Tenant Systems (TSYS) devices to view the result. |
| Show By | <p>Select from the following options to view the user's data:</p> <ul style="list-style-type: none"> • Bandwidth - Shows data based on the amount of bandwidth the user has consumed for a particular time range. • Sessions - Shows data based on the number of sessions consumed by the user. |
| Time | <p>Select the required time range to view the user's data.</p> <p>Use the custom option to choose the time range if you want to view data for more than one day. The date range is from 00:00 hours to 23:59 hours.</p> |
| Number of Sessions | <p>Shows total number of user sessions.</p> <p>The sessions are shown as links. When you click the link, the All Events page appears with all security events.</p> |
| Bandwidth | Shows bandwidth usage of the user. |
| Block User | Blocks the user from using the application. |
| Block Application(s) | Blocks the usage of the application. |
| View All Applications | <p>Shows all the applications accessed by the user.</p> <p>When you click the View All Applications link, the Applications tab in Grid view is displayed with the correct filter applied.</p> |

Table 48 on page 138 describes the widgets of the USERS tab in the Grid View.

Table 48: USERS—Widgets in the Grid View

| Widget Name | Description |
|---------------------|---|
| Top Users By Volume | List the top five users sorted by their bandwidth consumption. |
| Top Apps By Volume | List the top five applications being accessed in your network for the specified time range. |

[Table 49 on page 138](#) provides the column details of the USERS tab in the grid view.

Table 49: USERS—Columns in the Grid View

| Field Name | Description |
|----------------|--|
| User Name | Shows the name of a user. |
| Volume | Shows the bandwidth consumption of a user. |
| Total Sessions | Shows the number of user sessions. Click the link to navigate to the All Events page. |
| Applications | Shows all the applications used by a user for the time range. |

[Table 50 on page 138](#) provides the guidelines on using the fields of the SOURCE IP tab in the chart view.

Table 50: SOURCE IP—Filters in the Chart View

| Filter | Description |
|---------|---|
| Devices | By default, data is shown for all the devices in the network. Click All to select root devices, Logical Systems (LSYS) devices, or Tenant Systems (TSYS) devices to view the result. |

Table 50: SOURCE IP—Filters in the Chart View *(Continued)*

| Filter | Description |
|-----------------------|---|
| Show By | <p>Select the following options from the list to view the source IP address data:</p> <ul style="list-style-type: none"> • Bandwidth—Shows data based on the amount of bandwidth the source IP address has consumed for a particular time range. • Sessions—Shows data based on the number of sessions consumed by the source IP addresses. |
| Time | <p>Select the required time range from the list to view the source IP address data.</p> <p>Use the Custom option to choose the time range if you want to view data for more than one day. The date range is from 00:00 hours to 23:59 hours.</p> |
| Number of sessions | <p>Shows total number of user sessions.</p> <p>The sessions are shown as links. When you click the link, the All Events page appears with all security events.</p> |
| Bandwidth | Shows the bandwidth usage. |
| View All Applications | <p>Shows all applications accessed by the source IP address.</p> <p>When you click the View All Applications link, the Applications tab in Grid view is displayed with the correct filter applied.</p> |
| Block IP | Blocks the source IP address from accessing all applications. |
| Block Application(s) | Blocks the source IP address from accessing the selected application. |

Table 51 on page 139 describes the widgets of the SOURCE IP tab in the grid view.

Table 51: SOURCE IP— Widgets in the Grid View

| Widget | Description |
|-------------------|--|
| Top IPs By Volume | Lists top five IP addresses sorted by their bandwidth consumption. |

Table 51: SOURCE IP— Widgets in the Grid View (Continued)

| Widget | Description |
|--------------------|--|
| Top Apps By Volume | Lists top five applications being accessed in your network for the specified time range. |

Table 52 on page 140 describes the columns of the SOURCE IP tab in the Grid view.

Table 52: SOURCE IP—Columns in the Grid View

| Field | Description |
|----------------|---|
| Source IP | Shows the source IP addresses. |
| Volume | Shows the bandwidth consumption of the source IP address. |
| Total Sessions | Shows the number of sessions of the source IP address. |
| Applications | Shows all the applications used by the source IP address. |

RELATED DOCUMENTATION

| [Application Visibility Overview](#)

Application Visibility Overview

IN THIS SECTION

- [Application Overview | 141](#)
- [User Overview | 142](#)
- [Source IP Address Overview | 142](#)

Application Overview

IN THIS SECTION

- APPLICATIONS—Chart View | 141
- APPLICATIONS—Grid View | 141

You can view information related to bandwidth consumption, session establishment, and the risks associated with your applications on the APPLICATIONS tab and block all users or only selected users from accessing the application.

You can select either the Chart view or Grid view to view your data. By default, the data is displayed in Chart view.

APPLICATIONS—Chart View

Click the **Chart View** link for a brief summary of the top 50 applications consuming maximum bandwidth in your network. The data is presented graphically as a bubble graph. The data is refreshed automatically based on the time range selection, device selection, and filter criteria.

Hover over your applications to view critical information such as total number of sessions, total number of blocks, category, bandwidth consumed, risk levels, and characteristics. You can also view the top five users accessing your application.

APPLICATIONS—Grid View

Click the **Grid View** link for comprehensive details on applications. You can view top users by volume, top applications by volume, top category by volume, top characteristics by volume, and risk level. You can also view the data in a tabular format. You can sort the applications in ascending or descending order based on application name, volume, and total sessions. Use the widgets to get an overall, high-level view of your applications, users, and the content traversing your network. Users are displayed by usernames or IP addresses.

To block an application from the grid view, select an application and click **Block Applications**. The Block page is displayed. Click **Block Application** or select a user and click **Block User(s)**. See "[Block Applications](#)" on page 144.

User Overview

IN THIS SECTION

- [USERS—Chart View | 142](#)
- [USERS—Grid View | 142](#)

You can view information related to the bandwidth consumption and session establishment by users on the **USERS** tab and block the users from accessing either all applications or only selected applications. Users are displayed on the page by username, and if the user name is not available, by source IP address.

There are two ways to view your data. You can select either the **Chart View** or **Grid View**.

USERS—Chart View

By default, the user's data is shown in the **Chart** view. It shows the top 50 users consuming maximum bandwidth in your network. The data is presented graphically as a bubble graph. The data is refreshed automatically based on the time range selection, device selection, and filter criteria.

Hover over a username or source IP to view critical information such as total number of sessions and bandwidth consumed. You can block the user or applications that the user is accessing.

USERS—Grid View

Click **Grid View** to view the user's data in the tabular format. You can view top users by volume and top applications by volume. Grid view provides a detailed view of all the users.

The sessions and applications are shown as links. When the user clicks a session link, the **All Events** page appears with all security events. When the user clicks an application link, the **Application** tab in Grid view appears with the correct filter applied.

To block a user from the grid view, select a user and click **Block User**. The **Block** page is displayed. Click **Block User** or select an application and click **Block Applications(s)**. See "[Block Users](#)" on page 145.

Source IP Address Overview

IN THIS SECTION

- [SOURCE IP—Chart View | 143](#)

You can view information related to bandwidth consumption and session establishment of the source IP addresses on the SOURCE IP tab and block the source IP address from accessing all applications or only selected applications.

You can select either the Chart View link or Grid View link to view your data.

SOURCE IP—Chart View

Click the **Chart View** link for a brief summary of the top 50 source IP addresses consuming the maximum bandwidth in your network for a time span of one day, by default. The data is presented graphically as a bubble graph. The data is refreshed automatically based on the time range selection, device selection, and filter criteria.

Hover over the source IP addresses to view critical information such as total number of sessions, total bandwidth consumption, and top five applications. To view all the applications of an IP address, click **View All Applications**.

SOURCE IP—Grid View

Click the **Grid View** link for comprehensive details of source IP addresses. You can view top source IP addresses by volume and top applications by volume. You can also view the data in a tabular format that includes sortable columns. You can sort the source IP addresses, volume, and total sessions in ascending or descending order. Use the widgets to get an overall, high-level view of your source IP addresses.

The column width, sort order, and column index are continual. The next time you log in, they will be right where you left them.

To block a source IP address from the grid view, select the source IP address and click **Block IP**. The Block page is displayed. Click **Block User** or select an application and click **Block Application(s)**. See ["Block Source IP Addresses" on page 146](#).

RELATED DOCUMENTATION

| [About the Application Visibility Page](#)

Block Applications

You can *block* either all users or selected users from accessing an application. The block operation requires the listed policy rules to be edited to block one or more users from accessing an application. View policy changes by clicking the policy name or view affected devices by clicking the device count. You see only policies permitting this traffic in the past 30 days.



NOTE: Starting in Junos Space Security Director Release 21.1, when unified policy rules permit the traffic, selecting block action creates block rules in the appropriate unified policy.

To block an application:

1. Select **Monitor > Applications**.

The Application Visibility page is displayed.

2. Click the **APPLICATIONS** tab.

The top 50 applications are displayed.

3. In Chart View, hover over an application you want to block.

A pop up window is displayed with information on the number of sessions, bandwidth, number of blocks, risk level, category, characteristics, top five users, view all users link, and options to block applications and users.



NOTE: When you click the number of sessions link, the All Events page is displayed. It displays the events that generated those sessions.

Click the **View All Users** link to display the users accessing the application.

4. Click **Block Application** to block users from accessing the application.

The Block Application page is displayed with the policies that contain the rules required to block the application. The listed policies will be edited to block all users from accessing the application.



NOTE: You can also select a user you want to block and click **Block User(s)**.

The Block Users page is displayed with policies that contain the rules required to block the selected user from accessing the application.

5. Click a policy to preview the policy details.

The Policy Changes Preview page is displayed with information on the number of rules added, modified, and deleted. You can preview the policy details. You can attach or add a schedule under the Rule options column.

6. Click **OK**.

7. Click **Save** to save your changes.
8. Click **Publish** to publish your policies.
9. Click **Update** to update your policies on devices.

RELATED DOCUMENTATION

[About the Application Visibility Page](#)

[Creating Schedules | 552](#)

[Publishing Policies | 516](#)

[Events and Logs Overview | 35](#)

Block Users

You can *block* users from accessing either all applications or only selected applications. The block operation requires the listed policy rules to be edited to block the users from accessing one or more applications. You can view policy changes by clicking the policy name or view affected devices by clicking the device count. You see only policies permitting this traffic in the past 30 days.



NOTE: Starting in Junos Space Security Director Release 21.1, when unified policy rules permit the traffic, selecting block action creates block rules in the appropriate unified policy.

To block a user:

1. Select **Monitor > Applications**.

The Application Visibility page is displayed.

2. Click the **USERS** tab.

The top 50 users are displayed.

3. In the Chart View, hover over a user you want to block.

A pop up window is displayed with information on the bandwidth, number of sessions, top five applications, view all applications link, and options to block users and their applications.



NOTE: When you click the number of sessions link, the All Events page is displayed. It displays the events that generated those sessions.

Click the **View All Applications** link to display the applications accessed by the user.

4. Click **Block User** to block the selected IP address or username from accessing all the applications.

The Block User page is displayed with policies that contain the rules required to block the user. The listed policies will be edited to block the selected user from accessing all applications.



NOTE: You can select an application you want to block and click **Block Application(s)**.

The Block Application page is displayed with policies that contain the rules required to block the user from accessing a particular application.

5. Click a policy to preview the policy details.

The Policy Changes Preview page is displayed with information on number of rules added, modified, and deleted. You can preview the policy details. You can attach or add a schedule under the Rule options column.

6. Click **OK**.
7. Click **Save** to save your changes.
8. Click **Publish** to publish your policies.
9. Click **Update** to update your policies on devices.

RELATED DOCUMENTATION

[About the Application Visibility Page](#)

[Creating Schedules | 552](#)

[Publishing Policies | 516](#)

[Events and Logs Overview | 35](#)

Block Source IP Addresses

You can *block* a source IP address from accessing either all applications or only selected applications.

The block operation requires the listed policy rules to be edited to block the source IP address from accessing one or more applications. Then you can view the policy changes by clicking the policy name or view affected devices by clicking the device count. Also, you can click the policy to view the affected rules, edit the rules, and save them, if required.



NOTE: Starting in Junos Space Security Director Release 21.1, when unified policy rules permit the traffic, selecting block action creates block rules in the appropriate unified policy.

To block the source IP address:

1. Select **Monitor > Applications**.

The Application Visibility page is displayed.

2. Click the **SOURCE IP** tab.

The top 50 source IPs are displayed.

3. In the Chart View, hover over the source IP address you want to block.

A pop up window is displayed with information on the number of sessions, bandwidth consumption, and top five applications of that particular IP address.



NOTE: Click **View All Applications** to view all the applications of the source IP address on the APPLICATIONS-Grid View tab. You can select an application and block it by clicking **Block Application**.

4. Click **Block IP** to block the source IP address from accessing all applications.

The Block Application page is displayed.

Block the source IP address from accessing a particular application by selecting the application listed under the Top 5 Applications table, and then click **Block Application(s)**.

The Block User page is displayed. All the policies that need to be edited to block the IP address from accessing the applications are listed under the Policy Name column.

5. Select **Run now** to immediately publish or update the changes or select **Schedule at a later time** to publish or update the changes later.

6. Click **Save** to save the configuration settings.

Click **Publish** to publish the changes.

Click **Update** to update the changes.

RELATED DOCUMENTATION

| [About the Application Visibility Page](#) | 132

Live Threat Map

IN THIS CHAPTER

- [Threat Map Overview | 148](#)
- [Blocking Threat Events | 151](#)

Threat Map Overview

The threat map allows you to visualize geographical regions for incoming and outgoing traffic. You can view blocked and allowed threat events based on feeds from IPS, antivirus, and antispam engines. Unsuccessful login attempts for devices are also displayed. An event count for each attack object can be viewed by clicking a specific geographical location. This is useful for viewing unusual activity that could indicate a possible attack. If you have deployed your firewall devices across the globe, you can find the country that is attacking your firewall devices the most by using the threat map.



NOTE: The devices can be root device, logical systems (LSYS), or tenant systems (TSYS).

Threats are color-coded and can be seen at the bottom of the page. You also get a quick view of total number of threats blocked and allowed, an individual count of threats blocked and allowed for each event, as well as the top targeted devices, top destination countries, and top source countries.

You can click any individual source or destination point on the map to review information about the threat events, including the number of threat events, type of threat, time of events, source IP, and destination IP. You can also perform further analysis of the attack by clicking the attack type and viewing the filtered list of events from the Event Viewer.

Starting in Junos Space Security Director Release 16.1, you can click a country on the threat map to bring up the respective country page. You can view the total threat events since midnight, followed by inbound and outbound threat events. You see the highest top five inbound and outbound IP addresses. You can also view all IP addresses with the option to block one or more of them. In addition, you can block all traffic or only the inbound and outbound traffic for the selected country.

Click **View Details** to see more details for the country on the right panel. In addition, you can see total number of inbound and outbound threats for each event.

Table 53 on page 149 describes different types of threats blocked and allowed.

Table 53: Types of Threats

| Attack | Description |
|-------------------|--|
| IPS Threat Events | <p>Intrusion detection and prevention (IDP) attacks detected by the IDP module.</p> <p>The information reported about the attack includes:</p> <ul style="list-style-type: none"> • Source of attack • Destination of attack • Type of attack • Session information • Severity • Policy information that permitted the traffic. • Action: traffic permitted or dropped. |
| Spam Events | <p>E-mail spam that is detected based on the blocklist spam e-mails.</p> <p>The information reported about the attack includes:</p> <ul style="list-style-type: none"> • Source • Action: E-mail is rejected or allowed. • Reason for identifying as e-mail spam. |
| Virus Events | <p>Virus attacks detected by the antivirus engine.</p> <p>The information reported about the attack includes:</p> <ul style="list-style-type: none"> • Source of the infected file • Destination • Filename • URL used for accessing the file |

Table 53: Types of Threats (Continued)

| Attack | Description |
|------------------------|---|
| Device Authentications | The firewall authentication messages generated due to unauthorized attempts to access the network. The reported information contains the reason for authentication failure and the source of the request. |
| Screen | <p>A type of threat detected by SRX Series devices. The information reported about the attack includes:</p> <ul style="list-style-type: none"> • Attack name • Action taken • Source of the attack • Destination of the attack |
| ATP Cloud | <p>A type of threat detected by SRX Series devices in collaboration with ATP Cloud software. The information reported about the attack includes:</p> <ul style="list-style-type: none"> • Malware name • Action taken • Infected host • Source of the attack • Destination of the attack |



NOTE: Threats with unknown geographical IP addresses are displayed as undefined.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can click a country on the threat map to bring up the respective country page. |

RELATED DOCUMENTATION

| | | |
|--|--|---------------------|
| Events and Logs Overview | | 35 |
| Antivirus Events and Logs Overview | | 80 |
| Antispam Events and Logs Overview | | 77 |
| IPS Events and Logs Overview | | 84 |
| Blocking Threat Events | | 151 |

Blocking Threat Events

Starting in Junos Space Security Director Release 16.1, you can block all traffic or block only the inbound and outbound traffic for a selected country. When you click a country on the threat map, the country page appears with details on total threat events since midnight, followed by inbound and outbound threat events. You can see the highest top five inbound and outbound IP addresses. You can select one or more IP addresses to block.

Blocking an IP address or a country requires policy rules to be edited. View policy changes by clicking the policy name or view affected devices by clicking the device count. Only policies permitting this traffic in the past 30 days are shown.

Click **View Details** to see more details for the country on the right panel. Click **View All** to view all the inbound and outbound IP addresses.



NOTE: Starting in Junos Space Security Director Release 21.1, when unified policy rules permit the traffic, selecting block action creates block rules in the appropriate unified policy.

The following block operations are described below:

- To block IP addresses
- To block all traffic
- To block outbound traffic
- To block inbound traffic

To *block* IP addresses:

1. Select **Monitor > Threats Map (Live)**.

A geographical map is displayed with incoming and outgoing traffic.

2. Click a country in the map.

The corresponding country page appears with details on the threat events since midnight, as well as the highest top five inbound and outbound IP addresses. You can also view the details of the inbound and outbound events for the selected country.

3. Click the **Inbound** or the **outbound** tab, and then select one or more IP addresses.

4. Click **Block IP Address**.

The Block (Outbound or Inbound) IP Address page appears with policies that contain the rules. The listed policies are edited to block all inbound or outbound traffic from the selected IP addresses.

5. Click a policy.

The Policy Preview Changes page appears with the number of rules added, modified, and deleted. You can preview the policy rules.

6. Click **OK** to close the Policy Changes Preview page.

7. Click **Save** to save your changes.

8. Click **Publish** to publish your changes.

9. Click **Update** to update your changes.

To block all traffic:

1. Select **Monitor > Threats Map (Live)**.

A geographical map is displayed with incoming and outgoing traffic.

2. Click a country.

The corresponding country page appears with details on the threat events since midnight, as well as the highest top five inbound and outbound IP addresses. You can view the details of the inbound and outbound events for the selected country.

3. Click **Block all traffic** to block all traffic from the selected country.

The Block all traffic page is displayed with the policies that contain the rules to be edited to block all the traffic from the selected country.

4. Click a policy.

The Policy Changes Preview page is displayed with the number of rules added, modified, and deleted. You can preview the rules.

5. Click **OK** to close the Policy Changes Preview page.

6. Click **Save** to save your changes.

7. Click **Publish** to publish your changes.

8. Click **Update** to update your changes.

You can block traffic sent from one country to another country (outbound traffic). To block outbound traffic:

1. Select **Monitor > Threats Map (Live)**.

A geographical map is displayed with incoming and outgoing traffic.

2. Click a country that is sending traffic to another country.

The corresponding country page appears with details on the threat events since midnight, as well as the highest top five inbound and outbound IP addresses.

3. Click **Block outbound**.

The Block Outbound page is displayed with the policies that contain the rules to be edited to block all outbound traffic from the selected country.

4. Click a policy.

The Policy Changes Preview page is displayed with the number of rules added, modified, and deleted. You can preview the rules.

5. Click **OK** to close the Policy Changes Preview page.

6. Click **Save** to save your changes.

7. Click **Publish** to publish your changes.

8. Click **Update** to update your changes.

You can block traffic coming to a country from another country (inbound traffic). To block inbound traffic:

1. Select **Monitor > Threats Map (Live)**.

A geographical map is displayed with incoming and outgoing traffic.

2. Click a country that is receiving traffic from another country.

The corresponding country page appears with details on the threat events since midnight, as well as the highest top five inbound and outbound IP addresses.

3. Click **Block inbound**.

The Block Inbound page is displayed with the policies that contain the rules to be edited to block all the inbound traffic to the destination country.

4. Click a policy.

The Policy Changes Preview page is displayed with the number of rules added, modified, and deleted. You can preview the rules.

- 5. Click **OK** to close the Policy Changes Preview page.
- 6. Click **Save** to save your changes.
- 7. Click **Publish** to publish your changes.
- 8. Click **Update** to update your changes.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can block all traffic or block only the inbound and outbound traffic for a selected country. |

RELATED DOCUMENTATION

| [Threat Map Overview](#) | 148

CHAPTER 25

Threat Monitoring

IN THIS CHAPTER

- [Threat Monitoring Overview | 155](#)

Threat Monitoring Overview

IN THIS SECTION

- [Summary View | 156](#)
- [Detailed View | 157](#)

You can monitor and get detailed information about all the top threats detected over time by category and technology. Threats are defined as any IPS, antivirus, antispam, device authentication failure, screen, SecIntel, or Juniper Advanced Threat Prevention Cloud (Juniper ATP Cloud).

Using the time-frame slider, you can instantly focus on areas of unusual activity by dragging the time slider to the area of interest to you. The slider and the Custom button are available for both Summary View and Detailed View. You can select the time range and decide how to view the data, using the summary view or detail view tabs.

You can change the time range by manually moving the time-frame slider in the widget provided or by clicking the predefined time ranges available in the top right corner of the Threat Monitoring page. The data will be automatically reloaded with threats that occurred in the newly selected time range.

By default, you can view data for all the devices. To view data for a specific device, click on the link beside Devices and select one or more devices.

You can view, sort, search, and filter the threat information based on the following:

- Source

- Destination
- Number of instances
- Severity
- Number of instances over time
- How often the target is attacked
- Severity by type of attack
- Network attack interval overtime

Summary View

Click **Summary View** for a brief summary of all the threats in the network.

The widgets in the Summary view, displays critical information such as top threats by incident count, top source countries, top targeted devices, top destination countries, top attackers, top source zones, and top destination zones.

The following options are available to view the widgets in summary view:

- **Bubble Chart** - When you select Bubble Chart to view the threats, the incidents are indicated through color codes.
- **Bar Chart** - When you select Bar chart, the intensity of the incidents is indicated through bars.
- **Grid View** - When you select Grid View, the data is shown in a tabular format.

See [Table 54 on page 156](#) for descriptions of the widgets in Summary view.

Table 54: Widgets in the Summary View

| Widget | Description |
|-------------------------------|--|
| Top Threats by Incident Count | Displays all the threats by incident count. |
| Top Source Countries | Displays the top five source countries under threat. |
| Top Targeted Devices | Shows the top five devices which are most likely to be under threat. |
| Top Destination Countries | Displays the top five destination countries under threat. |

Table 54: Widgets in the Summary View *(Continued)*

| Widget | Description |
|-----------------------|---|
| Top Attackers | Displays the top five attackers in the network. |
| Top Source Zones | Displays the top five source zones under threat. |
| Top Destination Zones | Displays the top five destination zones under threat. |

Detailed View

Click **Detail View** for comprehensive details of threats in a tabular format that includes sortable columns. You can select specific parameters from the Group By drop-down menu and can also search and filter a specific attribute or event from the search window provided. You can now also drag and drop an event to the search window to apply filters.

Select **Show raw log** from the **More** drop down to view the real time logs received for a specific event that is selected.

Select **Show event details** from the **More** drop down menu to view the complete details of logs for a selected event. You can view general information, source information, destination information, and security information of logs.

Select **Export to CSV** option from the grid settings pane to export and download the log data in CSV file.

Select **Show Hide Columns** from the grid settings pane to show or hide various parameters in the grid.

See [Table 55 on page 157](#) for field descriptions in detail view.

Table 55: Fields in the Detailed view

| Field | Description |
|----------------|-----------------------------------|
| Event Category | The event category of the threat. |
| Attack Name | Attack name of the threat. |
| Virus Name | The name of the virus. |

Table 55: Fields in the Detailed view (*Continued*)

| Field | Description |
|---------------------|--|
| URL | The URL from which the threat generated. |
| Malware Info | Information of the malware. |
| Threat Severity | The severity level of the threat. |
| Source IP | The source IP address from where the threat occurred. |
| Destination IP | The destination IP address of the threat. |
| Event Name | The event name of the threat. |
| Action | Action taken for the threat: deny, allow, and block. |
| Source Zone | The source zone of the threat. |
| Destination Zone | The destination zone of the threat. |
| Source Country | The source country name. |
| Destination Country | The destination country name from where the threat occurred. |
| Client Hostname | The host name of the client. |
| Service Name | The name of the application service. |
| User Name | The user name of the threat event. |
| Logical System Name | The name of the logical system. |

Table 55: Fields in the Detailed view (*Continued*)

| Field | Description |
|---------------------------|--|
| Application | The application name from which the threats are generated. |
| Nested Application | Nested application that is running over the parent application. |
| Source Port | The source port of the threat. |
| Destination Port | Destination port of the threat. |
| Rule Name | The name of the rule. |
| Profile Name | The name of the threat monitoring profile that triggered the event. |
| Roles | Role names associated with the threat. |
| Reason | Reason for the generation of the threat. |
| NAT Source IP | The translated (or natted) source IP address. It can contain IPv4 or IPv6 addresses. |
| NAT Destination IP | The translated (also called natted) destination IP address. |
| NAT Source Port | Translated source port. |
| NAT Destination Port | Translated destination port. |
| NAT Source Rule Name | The NAT source rule name. |
| NAT Destination Rule Name | The NAT destination rule name. |
| Hostname | The host name of the targeted device. |

Table 55: Fields in the Detailed view (*Continued*)

| Field | Description |
|------------------------|---|
| Traffic Session ID | Number that identifies the session. |
| Logical Subsystem Name | The name of the logical system in JSA logs. |
| Description | Description of the threat. |
| Policy Name | The policy name which triggered the event. |
| Log Source | IP address of the log source. |
| Log Generated Time | The time when the log was generated. |
| Log Received Time | The time when the log was received. |

Alerts and Alarms - Overview

IN THIS CHAPTER

- [Alerts and Alarms Overview | 161](#)

Alerts and Alarms Overview

IN THIS SECTION

- [Understanding Role-Based Access Control for the Alerts and Alert Definitions | 162](#)

Alerts and notifications are used to notify administrators about significant events within the system. Notifications can also be sent through e-mail. You will be notified when predefined network traffic condition is met. Alert trigger threshold is number of network traffic events crossing a pre-defined threshold within a period of time. Alarms workspace shows active alarms of devices currently managed by Security Director.

Alerts and notifications provide options for:

- Defining alert criteria based on a set of predefined filters. You can use the filters defined in the Filter Management window on the Event Viewer page to generate alerts.
- Generating an alert message and notifying you when an alert criteria are met.
- Searching for specific alerts on the Generated Alerts page based on alert ID, description, alert definition, alert type, or recipient e-mail address.
- Supporting event-based alerts.

For example, If you are an administrator, you can define a condition such that if the number of firewall-deny events crosses a predefined threshold in a given time range for a specific device, you receive an e-mail alert.



NOTE: If a threshold is crossed and remains so for a long duration, new alerts are not generated. Alerts are generated again when the number of logs matching the alert criteria drops below the threshold and crosses the threshold again.

Understanding Role-Based Access Control for the Alerts and Alert Definitions



NOTE: You must have Security Analyst or Security Architect role or have permissions equivalent to that role to access the alerts and alert definitions.

You must have the following privileges under **Administration > Users & Roles > Roles**:

- **Create Alert Definition** under Create **Role > Privileges > Alerts > Alert Definitions** to create alerts.
- **Modify Alert Definition** to modify alerts.
- **Delete Alert Definition** to delete alerts.
- **User account** under Role Based Access Control to search for user accounts in alert definitions.

RELATED DOCUMENTATION

[Creating Alert Definitions](#) | 166

[Deleting Alert Definitions](#) | 171

[Searching Alert Definitions](#) | 171

[Domain RBAC Overview](#) | 1417

Alerts and Alarms-Alerts

IN THIS CHAPTER

- [Deleting an Alert | 163](#)
- [Searching Alerts | 163](#)
- [Using Generated Alerts | 164](#)

Deleting an Alert

To delete an alert or multiple alerts:

1. Select **Monitor > Alerts & Alarms > Alerts**.
2. Select an alert or multiple alerts for deletion.
3. On the upper left side of the Alerts page, click the delete icon (X).
The delete alert notification is displayed.
4. Click **OK**.
The alert is deleted.

RELATED DOCUMENTATION

- [Alerts and Alarms Overview | 161](#)
- [Creating Alert Definitions | 166](#)

Searching Alerts

To quickly locate an alert use the search option on the upper right side of the Alerts page:

1. Enter the alert ID, description, or alert name in the search box.
2. Click the search icon.

RELATED DOCUMENTATION

[Alerts and Alarms Overview | 161](#)

[Creating Alert Definitions | 166](#)

[Using Device Alarms | 173](#)

Using Generated Alerts

Before You Begin

- Read the ["Alerts and Alarms Overview" on page 161](#) topic.
- Review the Generated Alerts main page for an understanding of existing generated alarms. See ["Alert Definitions Main Page Fields" on page 172](#) for field descriptions.
- You must add the following configuration to the managed SRX Series Firewalls:

```
set snmp trap-group sdfm version all
set snmp trap-group sdfm destination-port 10164
set snmp trap-group sdfm categories authentication
set snmp trap-group sdfm categories chassis
set snmp trap-group sdfm categories link
set snmp trap-group sdfm categories routing
set snmp trap-group sdfm categories startup
set snmp trap-group sdfm categories rmon-alarm
set snmp trap-group sdfm categories vrrp-events
set snmp trap-group sdfm categories configuration
set snmp trap-group sdfm categories services
set snmp trap-group sdfm categories chassis-cluster
set snmp trap-group sdfm categories sonet-alarms
set snmp trap-group sdfm targets x.x.x.x (eth0 IP of space)
```

Use the Generated Alerts page to view the system event-based alerts in response to a configured alert definition. The generated alerts help you to identify problems that appear in your monitored network environment. You can view statistics such as the number of critical and non-critical alerts.

To use the Generated Alerts page:

1. Select **Monitor > Alerts & Alarms > Alerts**. The Alerts page appears.
2. Use the guidelines provided in [Table 56 on page 165](#) to learn about the page.

Table 56: Generated Alerts

| Action | Guidelines |
|----------------------|--|
| Jump to Event Viewer | Select the generated alert and then right-click or click More > Jump to Events and Logs . The corresponding events that triggered the alert are displayed. |
| Detail View | Select the generated alert and then right-click or click More > Detail View . |
| Clear All Selections | Select the generated alert and then right-click or click More > Clear All Selections . |

RELATED DOCUMENTATION

| |
|--|
| Creating Alert Definitions 166 |
| Alerts and Alarms Overview 161 |
| Deleting Alert Definitions 171 |

Alerts and Alarms-Alert Definitions

IN THIS CHAPTER

- [Creating Alert Definitions | 166](#)
- [Editing Alert Definitions | 169](#)
- [Cloning Alert Definition | 170](#)
- [Deleting Alert Definitions | 171](#)
- [Searching Alert Definitions | 171](#)
- [Alert Definitions Main Page Fields | 172](#)

Creating Alert Definitions

Before You Begin

- Read the ["Alerts and Alarms Overview" on page 161](#) topic.
- Review the Alert Definitions main page for an understanding of your current data set. See ["Alert Definitions Main Page Fields" on page 172](#) for field descriptions.

Use the Alert Definitions page to generate alerts that warn you of problems in your monitored environment. An alert definition consists of data criteria for triggering an alert. An alert is triggered when the event threshold exceeds the data criteria that is defined.

You can create an alert definition to monitor your data in real time. You can identify issues and attacks before they impact your network.

For example, if you are an administrator, you can define a condition such that if the number of firewall deny events crosses a predefined threshold in a given time frame for a specific device, you receive an email alert.

To create an alert definition:

1. Select **Monitor > Alert & Alarms > Alert Definitions**.
2. Click the + icon.

3. Complete the configuration according to the guidelines provided in [Table 57 on page 167](#).

4. Click **Ok**.

A new alert definition with the configured alert triggering condition is created. You can view the generated alerts from the alert definition to troubleshoot the issues with your system.

Table 57: Alert Definitions Settings

| Setting | Guideline |
|-------------------|--|
| <i>General</i> | |
| Alert Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Alert Description | Enter a description for the alerts; maximum length is 1024 characters. |
| Alert Type | Displays the type of alert that is system based. |
| Status | Select the Active check box to view only the active alerts. |
| Severity | Select the severity level of the alert: Info, minor, major, critical. |
| <i>Devices</i> | |
| Select Devices | <p>Select all devices or specific devices. By default, data is displayed for all the devices in the network.</p> <p>If you choose the Selective option, select devices from the Available column and click the right arrow to move these devices to the Selected column and click OK.</p> |
| <i>Trigger</i> | |

Table 57: Alert Definitions Settings (*Continued*)

| Setting | Guideline |
|---------------------|--|
| Data Criteria | <p>Specifies the data criteria from the list of default and user-created filters that are saved from the Event Viewer.</p> <p>To add saved filters:</p> <ul style="list-style-type: none"> • Click the Use data criteria from filters link. The Add Saved Filters page appears. • Select the filters to be added. • Click OK. |
| Time Span | Specify the time period for triggering an alert. |
| Number of Events | Enter the event threshold (number of logs for each category). An alert triggers if the number exceeds the specified threshold. |
| <i>Recipient(s)</i> | |
| E-mail address(es) | Specify the e-mail addresses for the recipients of the alert notification. |
| Custom Message | Enter a custom string for identifying the type of alert in the alert notification e-mail. |

RELATED DOCUMENTATION

[Alerts and Alarms Overview | 161](#)

[Alert Definitions Main Page Fields | 172](#)

[Using Generated Alerts | 164](#)

[Deleting Alert Definitions | 171](#)

[Using Device Alarms | 173](#)

Editing Alert Definitions

To edit an alert definition:

1. Select **Alerts & Alarms > Alert Definitions**.
2. Select the alert.
3. On the upper right side of the Alert Definitions page, click the pencil icon.
The alert definitions options are displayed. See [Table 58 on page 169](#) for options available for editing.
4. Click **OK**.

Table 58: Alert Definitions Settings

| Setting | Guideline |
|-------------------|--|
| <i>General</i> | |
| Alert Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Alert Description | Enter a description for the alerts; maximum length is 1024 characters. |
| Alert Type | Displays the type of alert that is system based. |
| Status | Select the Active check box to view only the active alerts. |
| Severity | Select the severity level of the alert: Info, minor, major, critical. |
| <i>Devices</i> | |
| Select Devices | Select all devices or specific devices. By default, data is displayed for all the devices in the network. If you choose the Selective option, select devices from the Available column and click the right arrow to move these devices to the Selected column and click OK . |
| <i>Trigger</i> | |

Table 58: Alert Definitions Settings *(Continued)*

| Setting | Guideline |
|---------------------|---|
| Data Criteria | <p>Specifies the data criteria based on the Time period, Group By, and Filter By option. Filtered data only displays the subset of data that meets the criteria that you specify.</p> <p>To edit the data criteria:</p> <ul style="list-style-type: none"> • Click the Edit data criteria from filters link. The Add Saved Filters page appears. • Select the filters to be added. • Click OK. |
| Time Span | Specify the time period for triggering an alert. |
| Number of Events | Enter the event threshold (number of logs for each category). An alert triggers if the number exceeds the specified threshold. |
| <i>Recipient(s)</i> | |
| Email address(es) | Specify the e-mail addresses for the recipients of the alert notification. |
| Custom Message | Enter a custom string for identifying the type of alert in the alert notification e-mail. |

RELATED DOCUMENTATION

[Creating Alert Definitions](#) | 166

[Alerts and Alarms Overview](#) | 161

[Using Device Alarms](#) | 173

Cloning Alert Definition

You can clone an existing alert definition.

To clone an alert definition:

1. Select **Monitor > Alerts & Alarms > Alert Definitions**.
2. Right-click an alert, or select **Clone** from the **More** link.
The Clone window appears with editable fields.
3. Click **OK** to save your changes.

RELATED DOCUMENTATION

[Creating Alert Definitions | 166](#)

[Editing Alert Definitions | 169](#)

[Alerts and Alarms Overview | 161](#)

[Using Device Alarms | 173](#)

Deleting Alert Definitions

To delete an alert definition or multiple alert definitions:

1. Select **Monitor > Alerts & Alarms > Alert Definitions**.
2. Select an alert definition or multiple alert definitions for deletion.
3. On the upper left side of the Alert Definitions page, click the delete icon (X).
The delete alert definition notification is displayed.
4. Click **OK**.
The alert definition is deleted.

RELATED DOCUMENTATION

[Alerts and Alarms Overview | 161](#)

[Using Events and Logs Settings | 49](#)

Searching Alert Definitions

To quickly locate an alert definition, use the search option on the upper right side of the Alert Definitions page:

1. Enter the alert definition name, description, or recipient name in the search box.

- 2. Click the search icon.

RELATED DOCUMENTATION

| |
|--|
| Alerts and Alarms Overview 161 |
| Creating Alert Definitions 166 |
| Deleting Alert Definitions 171 |

Alert Definitions Main Page Fields

Use this page to understand the alert definitions. [Table 59 on page 172](#) describes the fields on this page.

Table 59: Alert Definition Main Page Field

| Field | Description |
|-------------------|--|
| Select | Provides the option to select the available alerts. |
| Alert Name | Specifies the name of the alert. |
| Alert Description | Specifies the description of the alert. |
| Filter | Specifies the filter generating the alerts. |
| Recipients | Specifies the recipients of the alerts generated from the alert definitions. |
| Active | Specifies the active alerts. |

RELATED DOCUMENTATION

| |
|--|
| Creating Alert Definitions 166 |
| Alerts and Alarms Overview 161 |

Alerts and Alarms-Alarms

IN THIS CHAPTER

- [Using Device Alarms | 173](#)
- [Device Alarms Main Page Fields | 175](#)

Using Device Alarms

Before You Begin


- Read the ["Alerts and Alarms Overview" on page 161](#) topic.
- Configure the SRX Series devices to send SNMP traps to the Junos Space platform. The alarms displayed are new alarms based on the SNMP traps received by Security Director.
- In case of Space cluster, the SNMP target should be the eth0 IP address of all the nodes in Space cluster.
- The existing alarms prior to SNMP target configuration will not be displayed in Security Director.
- To view the alarms in Security Director, add the following configuration to the managed SRX Series devices through the CLI:

```
set snmp trap-group sdfm version all  
  
set snmp trap-group sdfm destination-port 10164  
  
set snmp trap-group sdfm categories authentication  
  
set snmp trap-group sdfm categories chassis  
  
set snmp trap-group sdfm categories link  
  
set snmp trap-group sdfm categories routing  
  
set snmp trap-group sdfm categories startup  
  
set snmp trap-group sdfm categories rmon-alarm
```

```
set snmp trap-group sdfm categories vrrp-events
set snmp trap-group sdfm categories configuration
set snmp trap-group sdfm categories services
set snmp trap-group sdfm categories chassis-cluster
set snmp trap-group sdfm categories sonet-alarms
set snmp trap-group sdfm targets x.x.x.x (eth0 IP of space)
```

- Review the Device Alarms main page for an understanding of existing device alarms. See ["Device Alarms Main Page Fields" on page 175](#) for field descriptions.

Use this page to view system-generated alarms. Alarms provide information about the status and the health state of the system. The alarms received from the Junos Space platform are viewed from Security Director. These generated alarms can help you to troubleshoot issues associated with your system.



NOTE: On the right side of the banner is a bell-shaped icon called the Notification Center. Clicking this icon reveals lists of the most recent critical alerts and alarms in Security Director. Clicking the **View All Alarms** or **View All Alerts** link takes you to the detail page for the respective topic.

To use the Device Alarms page:

1. Select **Monitor > Alerts & Alarms > Alarms**. The Alarms page appears.
2. Use the guidelines provided in [Table 60 on page 174](#) to learn about the page.

Table 60: Generated Alarms

| Action | Guidelines |
|--------------------|---|
| View Alarm Details | Select the generated alarm and then right click or click More > Detail View . |

RELATED DOCUMENTATION

| | |
|--|-----------------------|
| Alerts and Alarms Overview | 161 |
| Using Generated Alerts | 164 |

Device Alarms Main Page Fields

Use this page to view system-generated alarms.

[Table 61 on page 175](#) describes the fields on this page.

Table 61: Device Alarms Main Page Fields

| Field | Description |
|-------------------|---|
| Alarm Name | Name of the alarm. For example, authentication failure. |
| Alarm Description | Description of the alarm. |
| Reporting Device | IP address of the device that reported the alarm. |
| Severity | Severity level of the alarm: Critical, Major, Minor, and Information. |
| Last Updated | Date and time when the alarm was generated. |

RELATED DOCUMENTATION

[Alerts and Alarms Overview | 161](#)

[Using Generated Alerts | 164](#)

[Deleting Alert Definitions | 171](#)

[Using Device Alarms | 173](#)

CHAPTER 30

VPN

IN THIS CHAPTER

- [IPsec VPN Monitoring Overview | 176](#)
- [About the Overview Page | 179](#)
- [Managing Monitored and Unmonitored VPNs | 181](#)
- [About the Monitored Tunnels Page | 182](#)
- [About the Devices Page | 183](#)

IPsec VPN Monitoring Overview

You can view the status of *IPsec VPNs* and their tunnels between device endpoints after configuring, publishing, and updating them in Security Director. The status is displayed in dashboard and tabular format. The number of tunnels for each VPN depends on the type of VPN. You can view the tunnel status of IPsec VPNs configured on devices that are managed by Security Director.

Starting in Junos Space Security Director Release 20.3, you can monitor the status of remote VPNs.



NOTE: Security Director cannot monitor the tunnel status if the VPN is configured between a Juniper and a non-Juniper (extranet) device.

IPsec VPN monitoring micro-service runs at specified intervals and updates the status of the IPsec VPN tunnel as up or down. It polls log collector data every 5 minutes by default and SRX Series device every 6 hours.

The following configuration should be done to send all the logs including KMD logs to Security Director log collector:

```
set system syslog host <IP> any any
```

```
set system syslog host <IP> structured-data
```

Here, IP is the log collector IP and any any means all the system logs will be sent to Security Director Log Collector.

Figure 18 on page 177 shows the overview page. It displays the dashboards for monitoring current VPNs, its tunnels, and historical tunnel status pattern in the past.

In the Monitored Tunnels dashboard, you can view the total number of IPsec VPN tunnels and the number of tunnels that are up and down. Each block is a tunnel and is sorted by both modified date and created date. Modified tunnels appears first followed by created tunnels. You can hover over each block to view the tunnel endpoints, status, when the tunnel was created and modified, and the IP addresses of the devices. If the status is down, then a reason is also displayed.

In the VPNs Overview dashboard, you can view the number of IPsec VPNs and their status. Hover over the chart to view the status as up or down.

In the No. of Monitored Tunnels Flipped Up/Down dashboard, you can select a duration from the period drop-down list to view the tunnel status pattern in the past. Based on the selected duration, a time range and graph are displayed with the tunnel status data. Hover over the graph to view the number of tunnels and its status during a particular time slot.

Figure 18: Overview Page

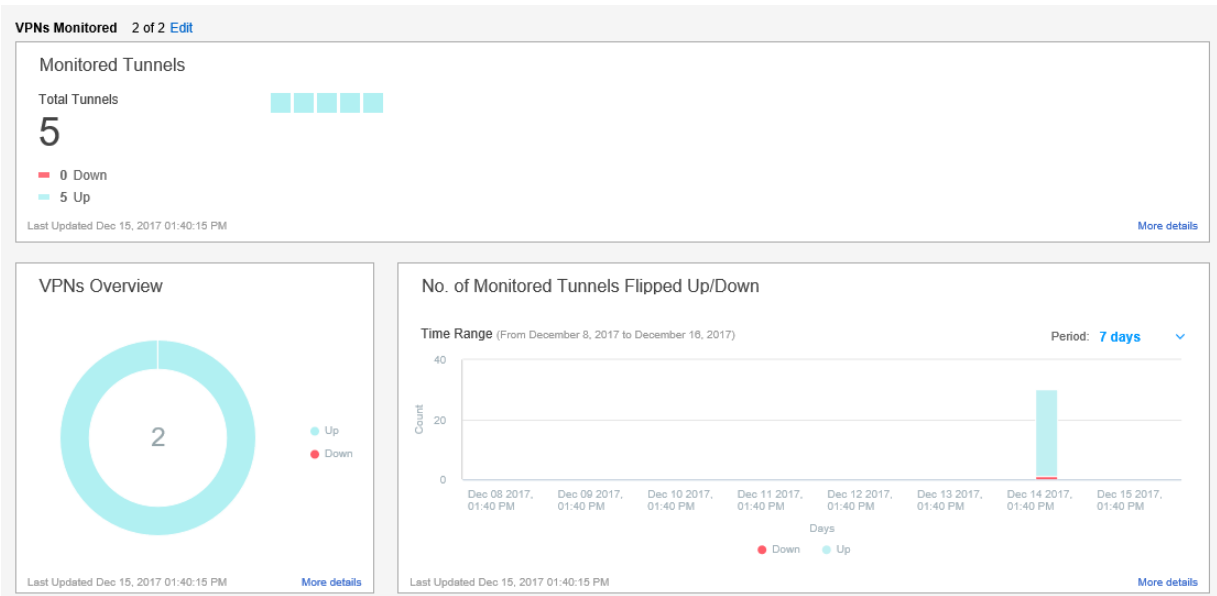


Figure 19 on page 178 shows the Monitored Tunnels page. It displays tunnel statistics in tabular format. It shows the IPsec VPNs and displays their tunnel status as up, down, or unknown. A reason is provided only for tunnels with a down status. You also see devices and their endpoints.

Figure 19: Monitored Tunnels

Monitor / VPN / Tunnels

Monitored Tunnels ?

| Tunnel Name | ▼ Tunn... | Device 1 | End Poin... | Device 2 | End Poin... | Reason | VPN Name | Created | Last Refresh time |
|-----------------------|-----------|--------------|-------------|--------------|-------------|--------|-----------------------------|---------------------|---------------------|
| 10_207_98_215_DDHS... | UP | 10.207.98... | 10_207_9... | 10.207.98... | VSRX-10... | | ImportVPN_2 | Dec 15, 2017 12:... | Dec 15, 2017 12:... |
| SRX1500-SDQA-3_VPN... | UP | 10.213.48... | SRX1500... | 10.213.48... | SRX1500... | | ImportVPN_1 | Dec 15, 2017 12:... | Dec 15, 2017 12:... |
| 10_207_98_216_DDHS... | UP | 10.207.98... | 10_207_9... | 10.207.98... | VSRX-10... | | ImportVPN_2 | Dec 15, 2017 12:... | Dec 15, 2017 12:... |
| 10_207_98_217_DDHS... | UP | 10.207.98... | 10_207_9... | 10.207.98... | VSRX-10... | | ImportVPN_2 | Dec 15, 2017 12:... | Dec 15, 2017 12:... |
| 10_207_98_218_DDHS... | UP | 10.207.98... | 10_207_9... | 10.207.98... | VSRX-10... | | ImportVPN_2 | Dec 15, 2017 12:... | Dec 15, 2017 12:... |
| 5 Rows | | | | | | | | | |

Figure 20 on page 178 shows the Devices page. It displays IPsec VPN statistics in tabular format. It shows all the VPNs and their types, all the devices in a VPN, total number of tunnels, and the number of tunnels that are down.

Figure 20: Devices Page

Monitor / VPN / VPNs

Devices ?

| Name | Type | No. Tunnels | Tunnels Down |
|---------------|---------------|-------------|--------------|
| ▼ ImportVPN_2 | Hub and Spoke | | |
| 10.207.98.216 | | 1 | |
| 1 Rows | | | |

In previous releases of Security Director, network administrators had to analyze the VPN logs on an SRX Series device to check the status of VPNs and their tunnels. It required administrators to have expertise in parsing VPN logs to get the information they needed. Network Administrators can now view the IPsec VPN and its tunnel status directly in Security Director. A reason is displayed in the Security Director user interface when a tunnel is down.

RELATED DOCUMENTATION

[Publishing IPsec VPNs | 1073](#)

[Updating IPSec VPN | 1074](#)

[About the Overview Page | 179](#)

[Managing Monitored and Unmonitored VPNs | 181](#)

[About the Monitored Tunnels Page | 182](#)

[About the Devices Page | 183](#)

About the Overview Page

IN THIS SECTION

- [Tasks You Can Perform | 179](#)
- [Field Descriptions | 179](#)

To access this page, select **Monitor > VPN > Overview**.

Use the Overview page to view the total number of monitored *IPsec VPNs*, tunnels, their status as either up or down, and historical tunnel data over time, ranging from 30 minutes to 2 months.

Starting in Junos Space Security Director Release 20.3, you can monitor the status of remote VPNs.

Tasks You Can Perform

You can perform the following tasks from this page:

- Manage monitored and unmonitored VPNs. See "[Managing Monitored and Unmonitored VPNs](#)" on [page 181](#).
- View current tunnel details in the Monitored Tunnels dashboard.
- View current VPN details in the VPNs Overview dashboard.
- View historical tunnel data in the No. of Monitored Tunnels Flipped Up/Down dashboard.

Field Descriptions

[Table 62 on page 180](#) provides guidelines on using the dashboard widgets on the Overview page.

Table 62: Dashboard Widgets on the Overview Page

| Dashboard Widgets | Description |
|--|--|
| Monitored Tunnels | <p>You can view the total number of IPsec VPN tunnels and the number of tunnels that are up and down. Each block is a tunnel and is sorted by both modified date and created date. Modified tunnels appears first followed by created tunnels. You can hover over each block to view the tunnel endpoints, status, when the tunnel was created and modified, and the IP addresses of the devices. If the status is down, then a reason is also displayed.</p> <p>Click the refresh icon on the right top corner of the dashboard to refresh the details.</p> <p>Click View Event Logs to navigate to the All Events page to view information for security events based on IPsec VPN profiles.</p> <p>Click More details to navigate to the Monitored Tunnels page to view the same data in tabular format.</p> |
| VPNs Overview | <p>You can view the number of IPsec VPNs and their status. Hover over the chart to view the status as up or down.</p> <p>Click More details to navigate to the Devices page to view more details about the devices in the VPN and the tunnel status.</p> <p>Click the refresh icon on the right top corner of the dashboard to refresh the details.</p> |
| No. of Monitored Tunnels Flipped Up/Down | <p>You can select a duration from the period drop-down list to view the tunnel status pattern in the past. Based on the selected duration, a time range and graph are displayed with the tunnel status data. Hover over the graph to view the number of tunnels and its status during a particular time slot.</p> <p>Each duration displays a fixed number of slots and static data is displayed for these slots.</p> <p>Click the refresh icon on the right top corner of the dashboard to refresh the details.</p> <p>Click More details to view the data in the Monitored Tunnels page.</p> |

RELATED DOCUMENTATION

[IPsec VPN Overview | 981](#)

[Publishing IPsec VPNs | 1073](#)

[Updating IPsec VPN | 1074](#)

[IPsec VPN Monitoring Overview | 176](#)

[About the Monitored Tunnels Page | 182](#)

[About the Devices Page | 183](#)

Managing Monitored and Unmonitored VPNs

You can select *IPsec VPNs* for which you want to monitor status. You can view the total number of monitored VPNs in the Overview page. You can select VPNs that you want to start and stop monitoring in the Manage Monitoring VPNs page.

To start and stop monitoring VPNs:

1. Select **Monitor** > **VPN** > **Overview**.
2. Click **Edit**.
The Manage Monitoring VPNs page is displayed.
3. Select **All** to monitor the status of all the VPNs. Select **Any** to monitor the status of specific VPNs.
4. If you select **Any**, then you can select IPsec VPNs and use the > or < arrow to move them from Monitored VPNs to Unmonitored VPNs and vice versa. You can enter an IPsec VPN to search for in the text box.
5. Click **OK**.

You can view the total number of VPNs monitored in the Overview page.

RELATED DOCUMENTATION

[IPsec VPN Overview | 981](#)

[Publishing IPsec VPNs | 1073](#)

[Updating IPsec VPN | 1074](#)

[IPsec VPN Monitoring Overview | 176](#)

[About the Overview Page | 179](#)

[About the Monitored Tunnels Page | 182](#)

[About the Devices Page | 183](#)

About the Monitored Tunnels Page

IN THIS SECTION

- [Tasks You Can Perform | 182](#)
- [Field Descriptions | 182](#)

To access this page, select **Monitor > VPN > Tunnels**.

Use the Monitored Tunnels page to view tunnel statistics in tabular format. It shows the *IPsec VPNs* and displays their tunnel status as up, down, or unknown. A reason is provided only for tunnels with a down status. You also see devices and their endpoints.

Starting in Junos Space Security Director Release 20.3, you can monitor the tunnel statistics of remote VPNs.

Tasks You Can Perform

You can perform the following tasks from this page:

- View tunnel statistics such as VPN name, tunnel status, and so on in a tabular format.

Field Descriptions

[Table 63 on page 182](#) provides guidelines on using the fields on the Monitored Tunnels page.

Table 63: Fields on the Monitored Tunnels Page

| Fields | Description |
|---------------|---|
| VPN Name | Specifies the name of the IPsec VPN. Click the name to navigate to the IPsec VPNs page. |
| Tunnel Status | Specifies the status of the tunnel: Up, Down, or Unknown. |
| Reason | Specifies a reason when the tunnel status is down. |

Table 63: Fields on the Monitored Tunnels Page *(Continued)*

| Fields | Description |
|-------------------|--|
| Device 1 | Specifies the IPv4 address of the source device. |
| End Point 1 | Specifies the name of endpoint 1. |
| Device 2 | Specifies the IPv4 address of the destination device. |
| End Point 2 | Specifies the name of endpoint 2. |
| Created | Specifies the date and time when the tunnel was created. |
| Last Refresh Time | Specifies the date and time when the last poll was performed for a tunnel. IPsec VPN monitoring micro-service polls log collector data every 5 minutes and SRX Series device every 6 hours. |

RELATED DOCUMENTATION

[IPsec VPN Overview | 981](#)

[Publishing IPsec VPNs | 1073](#)

[Updating IPsec VPN | 1074](#)

[IPsec VPN Monitoring Overview | 176](#)

[About the Overview Page | 179](#)

[About the Devices Page | 183](#)

About the Devices Page

IN THIS SECTION

● [Tasks You Can Perform | 184](#)

To access this page, select **Monitor > VPN > VPNs**.

Use the Devices page to view *IPsec VPN* statistics in tabular format. It shows all the VPNs and their types, all the devices in a VPN, total number of tunnels, and the number of tunnels that are down.

Starting in Junos Space Security Director Release 20.3, you can monitor the statistics of remote VPNs.

Tasks You Can Perform

You can perform the following tasks from this page:

- View IPsec VPN statistics, such as name, type, and so on.
- Filter the data in the table based on the VPN name and its type. Click the filter icon and enter the filter criteria.

Field Descriptions

[Table 64 on page 184](#) provides guidelines on using the fields on the Devices page.

Table 64: Fields on the Devices Page

| Field | Description |
|--------------|--|
| Name | Specifies the IPsec VPN name. Click > displayed beside the name to view the devices in the VPN. |
| Type | Specifies the type of VPN, such as site-to-site, full-mesh, or hub-and-spoke. |
| No. Tunnels | Specifies the total number of tunnels in each device. |
| Tunnels Down | Specifies the number of tunnels that are down. |

RELATED DOCUMENTATION

| | |
|--|------------------------|
| IPsec VPN Overview | 981 |
| Publishing IPsec VPNs | 1073 |
| Updating IPsec VPN | 1074 |
| IPsec VPN Monitoring Overview | 176 |
| About the Overview Page | 179 |
| About the Monitored Tunnels Page | 182 |

CHAPTER 31

Insights

IN THIS CHAPTER

- [How to Monitor Incidents | 186](#)
- [How to Monitor Mitigation | 193](#)

How to Monitor Incidents

IN THIS SECTION

- [Grid View | 186](#)
- [Plot View | 191](#)
- [Timeline View | 192](#)


Use the Incidents page to view all incidents related to an endpoint in a user timeline view. To access the Incidents page, select **Monitor > Insights > Incidents**.

There are two ways to view your data. You can select either the Grid view or the Plot view. By default, the data is displayed in Grid view. In the Timeline section, you can select a log parser from the list to view log data in the timeline graph. You can zoom in, zoom out, show all data, and refresh the data.

Grid View

Click **Grid View** for a comprehensive details about incidents. You can view the incident ID, state of the incident, progression, and so on. You can expand an incident to view more details and create ServiceNow tickets if required, as shown in [Figure 21 on page 187](#).

Figure 21: Grid View for Incidents

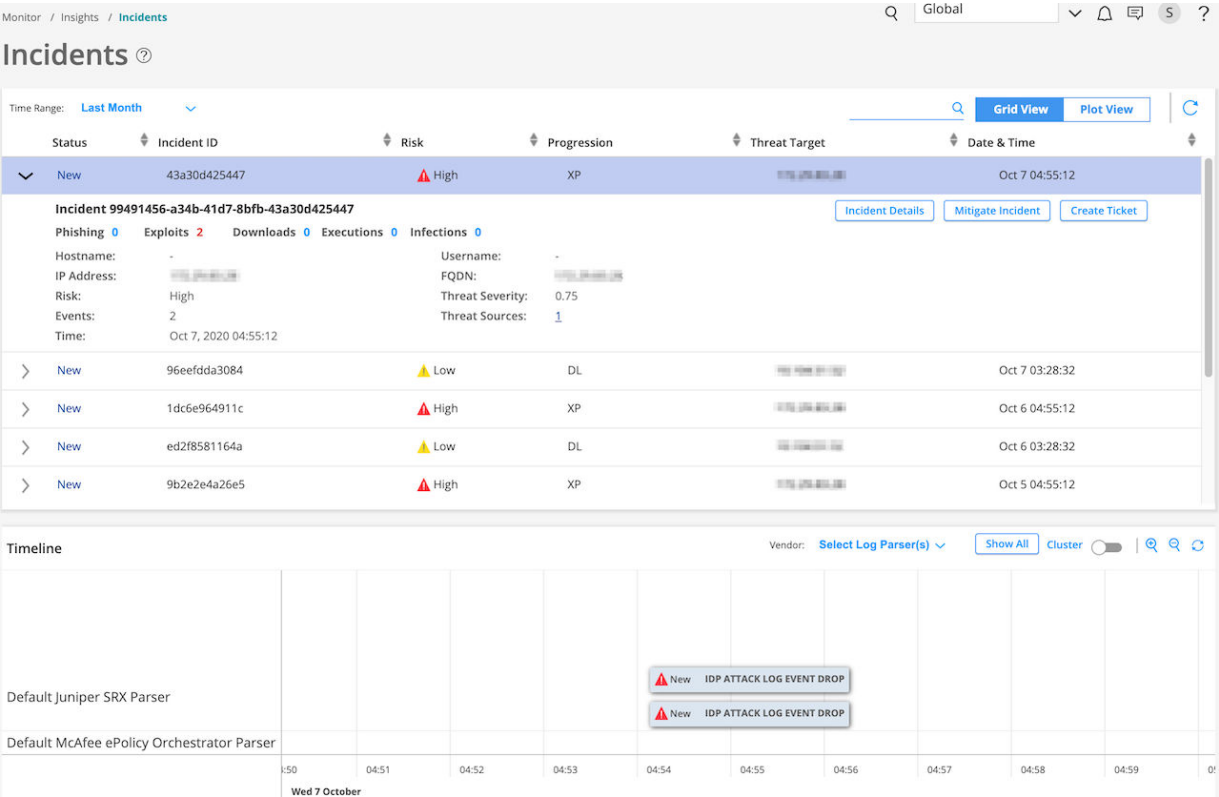

After you create a ticket, the status of the incident changes to Acknowledged, as shown in [Figure 22 on page 188](#)

Figure 22: Incidents Status Changed

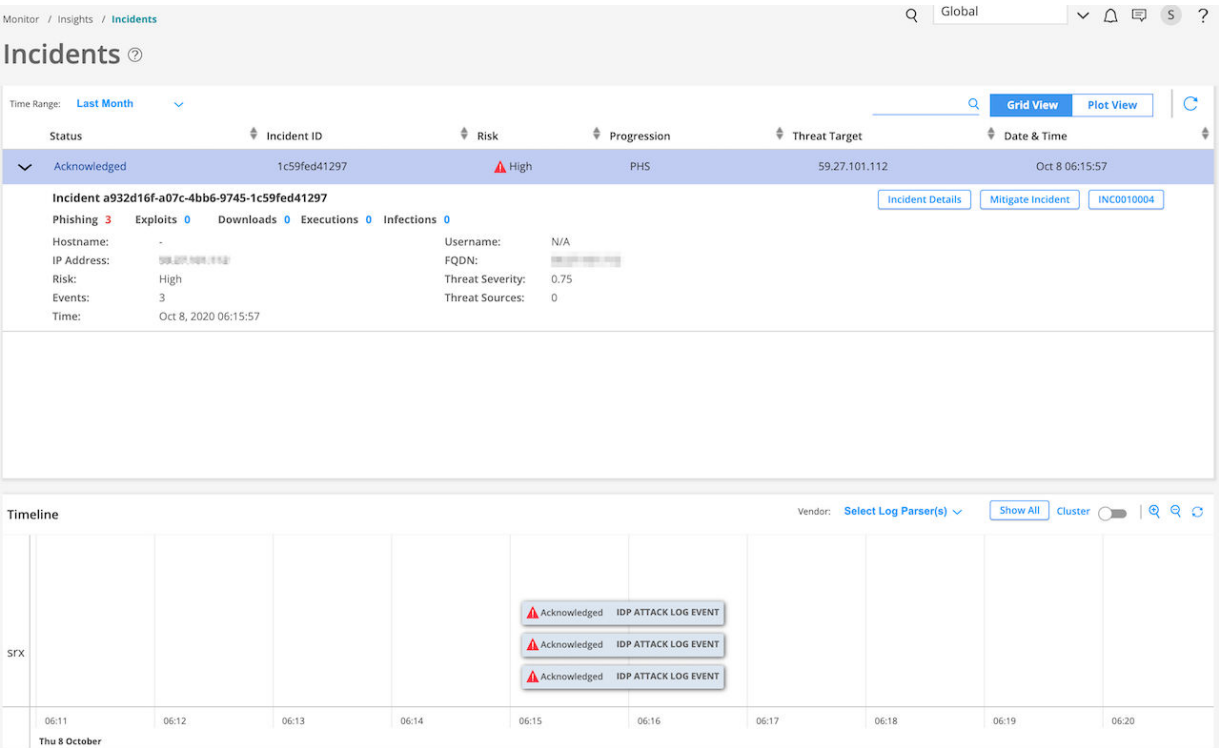


Table 65 on page 188 describes different fields available in this view. You can view data for a custom time range, last 24 hours, last week, last month, and last year.

Table 65: Fields on the Grid View Page

| Field Name | Description |
|---------------|---|
| Status | Specifies the status of the ServiceNow ticket. After you create a ServiceNow ticket, the status shows Acknowledged, as shown in Figure 22 on page 188 . |
| Incident ID | Specifies the incident ID. |
| Risk | Specifies the threat metric and severity rating. |
| Progression | Specifies the progression of an incident |
| Threat Target | Specifies the IP address of the targeted host. |

Table 65: Fields on the Grid View Page *(Continued)*

| Field Name | Description |
|-------------|--|
| Date & Time | Specifies the timestamp of the incident. |

In the Status column, click > to see additional details (apart from details provided in [Table 65 on page 188](#)) about an incident, such as:

- Hostname—If Juniper Identity Management Service (JIMS) is configured, the hostname is shown.
- Username—If JIMS is configured, the username is shown.
- IP address
- Number of events that contributed to an incident
- Fully qualified domain name (FQDN)
- Threat severity value
- Number of threat sources associated with the Incident

[Table 66 on page 190](#) explains the other options available for each incident.

Table 66: Options for Each Incident

| Option | Description |
|-------------------|---|
| Incident Details | <p>Select Incident Details to see the following information about an incident:</p> <ul style="list-style-type: none"> • Name of the incident • Source IP address of the incident • Date and time of the event • Vendor response for the event • Name of the log parser • Progression details • Detection method • Endpoint IP address • Raw log of the event • Starting and ending severity levels |
| Mitigate Incident | <p>Select Mitigate Incident to enable the mitigation if it's disabled and vice versa.</p> <p>To mitigate incidents, you must have already configured ATP Cloud or Policy Enforcer. For more information about mitigation settings, see <i>Configure Mitigation Settings</i></p> |


Table 66: Options for Each Incident *(Continued)*

| Option | Description |
|---------------|--|
| Create Ticket | <p>You can create a ServiceNow ticket for an incident. You must have already configured ServiceNow settings to create a ServiceNow ticket. See <i>About the ServiceNow Configuration Page</i>.</p> <p>To create a ServiceNow ticket:</p> <ol style="list-style-type: none">1. Select Create Ticket. <p>The Create ServiceNow Ticket page appears, as shown in Figure 23 on page 191.</p> <p>Figure 23: Create ServiceNow Ticket Page</p> <div><p>Create ServiceNow Ticket</p><div><div>Urgency*</div><div>Select</div></div><div><div>Short Description*</div><div>Yeezy Incident Id(99491456-a34b-41d7-8bbf-43a30d425447) with 2 events has reported evidence (172.30.83.20) at site.</div></div><div><div>Description*</div><div>Please add your comment after Source details, if any. Source Details (Hostname:null and IP:58.458.208.107)</div></div><div><div>Cancel</div><div>Submit</div></div></div> <ol style="list-style-type: none">2. In the Urgency field, select the priority of the ticket from the list.3. In the Short description field, provide a short description about the incident.4. In the Description field, provide a more detailed description about the incident.5. Click Submit. |

Plot View

Click the **Plot View** link for a brief summary of incidents represented in a soar bubble chart. Each bubble represents a host and the bubble size is proportional to the number of threats, as shown in [Figure 24 on page 192](#).

Figure 24: Incident Plot View

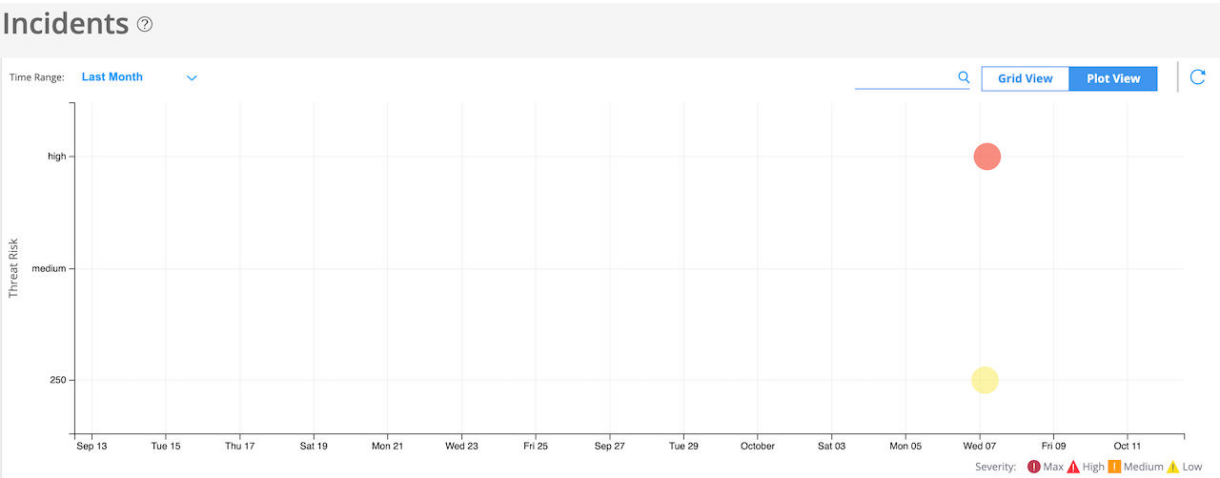

You can view data for a custom time range, last 24 hours, last week, last month, and last year.


Timeline View

You can view all incidents on a timeline graph. Hover over each event to see more details about an incident. In the Select Log Parser(s) list, you can select the required log parser. You can select either one or all the log parsers. By default, the timeline graph shows all of the configured vendors in the log source.

Click **Show All** to see all events associated with an endpoint in the selected time range.

You can enable the **Cluster** option to cluster events belonging to the same time, as shown in [Figure 25 on page 192](#).

Figure 25: Cluster View of Incidents

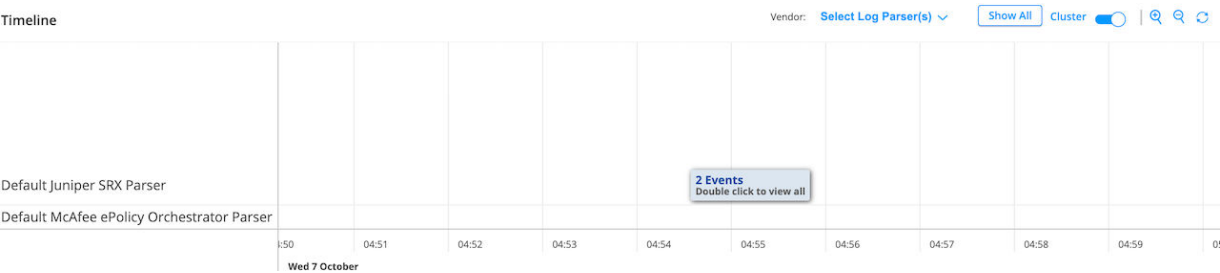

You can also zoom in, zoom out, and reset the data in the timeline graph. The reset option shows events for the corresponding incidents.


RELATED DOCUMENTATION

| |
|---|
| About the ServiceNow Configuration Page |
| About the Incident Scoring Rules Page |
| Create an Incident Scoring Rule |

How to Monitor Mitigation

Using the Mitigation page, you can view the list of endpoints and threat sources that are mitigated by Security Director Insights. To access this page, select **Monitor > Insights > Mitigation**. You can select an event and disable the mitigation, if enabled, and vice versa, as shown in [Figure 26 on page 193](#).

Figure 26: Mitigation Page

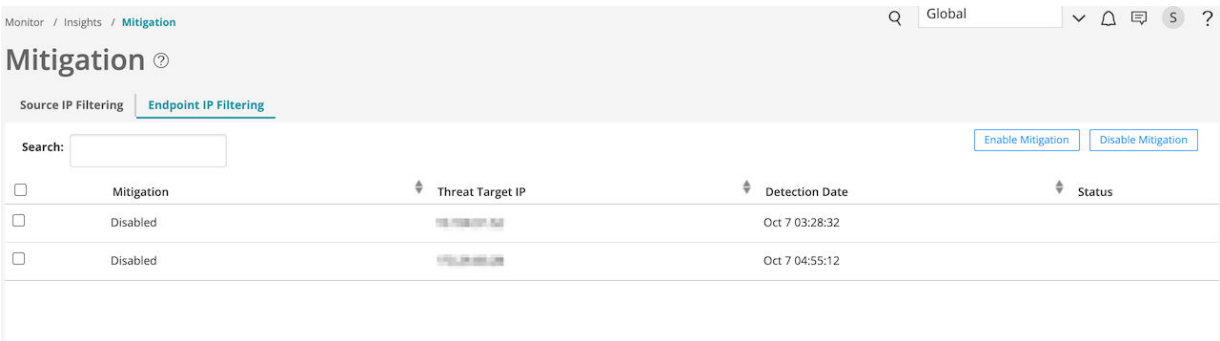

You can mitigate threat source IP addresses through ATP Cloud or Policy Enforcer. You must configure ATP Cloud or Policy Enforcer to enable the mitigation. For more information about mitigation settings, see *Configure Mitigation Settings*.

You can perform the following actions from the Mitigation page:

- Source IP filtering—Select the **Source IP Filtering** option to view only the threat source IP addresses that are mitigated by Security Director Insights.
- Endpoint IP filtering—Select the **Endpoint IP Filtering** option to view only the endpoint IP addresses that are mitigated by Security Director Insights.
- Search—You can search for data based on the mitigation status, threat source or target IP addresses, and detection date.
- Enable mitigation—If mitigation is disabled for an IP address, select an event for which you want to enable mitigation and click **Enable Mitigation**. The Status column shows whether the enable task is successful.

- Disable mitigation—If you want to disable mitigation for an IP address, select an event for which you want to disable mitigation and click **Disable Mitigation**. The Status column shows whether the disable task is successful or not.

RELATED DOCUMENTATION

| *Configure Mitigation Settings*

Job Management

IN THIS CHAPTER

- [Using Job Management in Security Director | 195](#)
- [Overview of Jobs in Security Director | 197](#)
- [Archiving and Purging Jobs in Security Director | 198](#)
- [Viewing the Details of a Job in Security Director | 200](#)
- [Canceling Jobs in Security Director | 202](#)
- [Reassigning Jobs in Security Director | 203](#)
- [Rescheduling and Modifying the Recurrence of Jobs in Security Director | 204](#)
- [Retrying a Failed Job on Devices in Security Director | 206](#)
- [Exporting the Details of a Job in Security Director | 208](#)
- [Job Management Main Page Fields | 209](#)

Using Job Management in Security Director

Before You Begin

- Read the ["Overview of Jobs in Security Director" on page 197](#) topic.
- Review the Job Management main page for an understanding of the existing jobs See ["Job Management Main Page Fields" on page 209](#) for field descriptions.

Use the Job Management page to view all jobs that have been scheduled to run or have run from Junos Space Security Director. By default, jobs are sorted by the Scheduled Start Time column. Depending on your user account settings, you can view all jobs or only your jobs.

To use the Job Management page:

1. Select **Monitor > Job Management**.

The Job Management page appears.

2. Use the guidelines provided in [Table 67 on page 196](#) to learn about the page.

Table 67: Job Management Page Actions

| Action | Guideline |
|---|---|
| View the details of a job | <p>Double-click a job or click the Detailed View icon that appears when you mouse over the job to view the details of that job.</p> <p>The Job Details page appears displaying the details of the audit log. See "Viewing the Details of a Job in Security Director" on page 200.</p> |
| Archive and purge audit logs | <p>Click the Archive/Purge icon in the toolbar to purge jobs after archiving them.</p> <p>The Archive/Purge Jobs page appears. See "Archiving and Purging Jobs in Security Director" on page 198.</p> |
| Cancel jobs | <p>Select one or more scheduled or in-progress jobs. From the right-click or More menu, and select Cancel Jobs. See "Canceling Jobs in Security Director" on page 202.</p> |
| Reassign Jobs | <p>Reassign scheduled or recurring jobs of one user to another user. See "Reassigning Jobs in Security Director" on page 203.</p> |
| Reschedule a job or modify the recurrence settings of a job | <p>Reschedule a scheduled job or modify the recurrence settings of a job. See "Rescheduling and Modifying the Recurrence of Jobs in Security Director " on page 204.</p> |
| Retry on Failed Devices | <p>Retry jobs that did not complete successfully on devices on which they were configured to re-run. See "Retrying a Failed Job on Devices in Security Director" on page 206.</p> |

RELATED DOCUMENTATION

[Exporting the Details of a Job in Security Director | 208](#)

[Using Audit Logs in Security Director | 212](#)

Overview of Jobs in Security Director

A job is an action that is performed on any object that is managed by Junos Space, such as a device, service, or user. The Job Management page lets you monitor the status of jobs that have run or are scheduled to run in Junos Space. Jobs can be scheduled to run immediately or in the future.

Depending on the settings in your user account or remote profile, you can view only your own jobs or all jobs.



NOTE: A user with the Super Administrator or Job Administrator role assigned can view all jobs triggered by all users.

Junos Space maintains a history of job status for all jobs. When a job is initiated from a workspace, Junos Space assigns a unique ID to that job, which serves to identify the job (along with the job type) on the Job Management page. The following is a list of some of the job types supported in Security Director:

- Discover Network Elements
- Audit Log Archive/Purge
- Export Roles
- Export Device Configuration
- Add Application
- Resync Network Elements
- Role Assignment
- Delete Device

RELATED DOCUMENTATION

[Using Job Management in Security Director | 195](#)

[Job Management Main Page Fields | 209](#)

Archiving and Purging Jobs in Security Director

The Archive/Purge Jobs page enables you to archive and then purge jobs. You can purge jobs before a specified date and time. Jobs can be archived locally (on any node that is in the UP state) or to a remote server. When you archive jobs locally, the archive files are stored in the default `/var/lib/mysql/archive` directory on the active Junos Space node. When you archive jobs to a remote server, the archive files are stored in the directory that you specify.

To archive and purge jobs:

1. Select **Monitor > Job Management**.
The Job Management page appears.
2. Click the **Archive/Purge** icon.
The Archive / Purge Jobs page appears.
3. Specify the jobs to be archived and purged according to the guidelines provided in [Table 68 on page 198](#).
4. Click **OK**.
A job is triggered and you are taken to the Job Management page. After a few seconds, the Job Detail: Job Archive and Purge page pops up displaying details of the job.
5. Click **OK** to close the Job Details page.
You are returned to the Job Management page.

Table 68: Archive/Purge Jobs Settings

| Setting | Guideline |
|---------------------|--|
| Archive Jobs Before | <p>Specify a date and time (in MM/DD/YYYY and HH:MM:SS formats) before which jobs should be archived and purged.</p> <p>NOTE: You specify the time in the local time zone of the client computer, but the jobs are purged according to the time zone configured on the Junos Space server.</p> |
| Archive Mode | <p>Specify whether jobs are archived locally (on the active node) or on a remote server.</p> |
| Job Type | <p>Select the job type from the list to archive jobs of that type, or select the All option to archive all jobs, and then purge them from the database.</p> <p>Jobs that are already initiated or completed in Junos Space appear in the Job Type list. Jobs that are in progress or scheduled are not archived</p> |

Table 68: Archive/Purge Jobs Settings (Continued)

| Setting | Guideline |
|--|---|
| Username | Enter the username of the user on the remote server. |
| Password | Enter the password of the user on the remote server. |
| Confirm Password | Reenter the password of the user on the remote server. |
| Remote Server IP Address | <p>Enter the IPv4 or IPv6 address of the remote server.</p> <p>NOTE:</p> <ul style="list-style-type: none"> Depending on whether the Junos Space fabric is configured with only IPv4 addresses or both IPv4 and IPv6 addresses, Junos Space Platform allows you to enter an IPv4 address or either an IPv4 or IPv6 address respectively for the remote server. The IPv4 and IPv6 addresses that you use must be valid addresses. Refer to http://www.iana.org/assignments/ipv4-address-space for the list of restricted IPv4 addresses and http://www.iana.org/assignments/ipv6-address-space for the list of restricted IPv6 addresses. |
| Remote Server Directory | <p>Enter the full path of the directory (ending with /) on the remote server where the jobs will be archived.</p> <p>NOTE: The directory must already exist on the remote server.</p> |
| Purge jobs from all accessible domains | Select this check box to purge jobs from all domains to which you have access. |
| Type | <p>Specify whether the archive and purge operation should be run immediately or later.</p> <p>If you specify that the operation should be run later, you must specify a start date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) for the archive and purge operation.</p> |

RELATED DOCUMENTATION

| |
|---|
| Overview of Jobs in Security Director 197 |
| Using Job Management in Security Director 195 |

Viewing the Details of a Job in Security Director

You can view the details of a job, which allows you to view information about the job at a quick glance on one page, from the Job Management page.

To view the details of a job:

1. Select **Monitor > Job Management**.
The Job Management page appears.
2. Double-click the job for which you want to view the details. Alternatively, select the job and from the More or right-click menu, select **View Job Details**.

The Job Details page appears. The fields displayed vary depending on the job:

- For a Discover Network Elements job, the IP Address and Hostname fields are displayed.
- For some jobs, the details of the job are displayed in a table. For example, for device discovery jobs, the device targets and their statuses are displayed; for network resynchronization jobs, the device IP addresses and their status are displayed.
- For some jobs, like Export Roles, Resync Network Elements, and so on, you can export the job details.
- For some jobs, you can retrigger the failed job or retry the job on failed targets and you can schedule jobs to run immediately or later.

[Table 69 on page 200](#) describes some of the fields on the Job Details page.

3. Click **OK**.
You are returned to the Job Management page.

Table 69: Job Details Fields

| Field | Description |
|----------|---|
| Job Type | Type of job. Job types indicate what tasks or operations are performed. |

Table 69: Job Details Fields *(Continued)*

| Field | Description |
|----------------------|--|
| Job ID | ID of the job. |
| Job Name | Name of the job. For most jobs, the name is the job type with the job ID appended. However, for some jobs, the job name is supplied by the user as part of the workflow. |
| Job State | <p>State of job execution:</p> <ul style="list-style-type: none"> • Scheduled–Job is scheduled to run in the future. • Success–Job completed successfully. • Failure–Job failed and was terminated. • In Progress–Job is in progress. • Canceled–Job was canceled by a user. • Pending–Job is pending. |
| Percent | Percentage of the job that is completed. |
| User or Owner | Username of the owner who initiated the job. |
| Scheduled Start Time | <p>Date and time when the job is scheduled to start.</p> <p>NOTE: The time is stored as UTC time in the database but mapped to the local time zone of the client from which the UI is accessed.</p> |
| Actual Start Time | Time when Junos Space Platform begins to execute the job. In most cases, the actual start time is the same as the scheduled start time. |
| End Time | Time when the job was completed or terminated if the job execution failed. |
| Summary | Operations executed for the job. |

RELATED DOCUMENTATION

[Using Job Management in Security Director | 195](#)

[Overview of Jobs in Security Director | 197](#)

[Job Management Main Page Fields | 209](#)

Canceling Jobs in Security Director

You can cancel jobs that are scheduled for execution as long as they are in the Scheduled, In Progress, or Pending state. You can also cancel jobs that are not completed for a long time or jobs that are hindering the execution of other jobs in the queue.

If you are a user who is assigned the privileges of a Job Administrator, you can cancel jobs scheduled by any user. If you are a user who is assigned the privileges of a Job User, you can cancel only those jobs that are scheduled by you. If you are assigned a role that does not allow you to cancel any job, you cannot cancel any job in the Jobs workspace.



NOTE:

- If Junos Space determines that the job operation cannot be interrupted, the job runs to completion; otherwise, the job is canceled.
- When you cancel jobs that are in-progress, some tasks associated with the job might be completed, depending on the stage at which you canceled the job. The status of the job on the Job Management page appears as Cancelled.

To cancel one or more jobs:

1. Select **Monitor > Job Management**.

The Job Management page appears.

2. Select the jobs that you want to cancel. From the right-click or More menu, select **Cancel Jobs**.

The Cancel Job page appears, displaying the list of jobs selected for cancellation.

3. Click **Yes** to confirm that you want to cancel the selected jobs.

You are returned to the Job Management and the status of the jobs that were canceled changes to **Cancelled**.

RELATED DOCUMENTATION

[Overview of Jobs in Security Director | 197](#)

Reassigning Jobs in Security Director

You can reassign jobs owned by a user to another user within the same domain from the Job Management page. When you reassign a job, you transfer the ownership of the jobs from one user to another. To reassign the jobs of one user to another user, you must be assigned the privileges of a Job Administrator.

One scenario for reassigning jobs is if a user who is the owner of scheduled jobs is deleted from Junos Space. The jobs for that owner are canceled, so you can reassign the scheduled jobs to another user.



NOTE: You can reassign only scheduled and recurring jobs. You cannot reassign jobs that are completed, pending, in progress, or canceled.

To reassign one or more jobs:

1. Select **Monitor > Job Management**.

The Job Management page appears.

2. Select the jobs that you want to reassign. From the right-click or More menu, select **Reassign Jobs**.

The Reassign Jobs page appears, displaying the list of users to whom you can reassign the jobs.

3. Select the user to whom you want to reassign the jobs.

4. Click **OK** to reassign the jobs.

The Reassign Jobs Warning page appears asking you to confirm the reassignment.



NOTE: If the user to whom you have reassigned the jobs does not have the proper privileges, then a message indicating that the jobs cannot be reassigned because of role restrictions is displayed along with the list of jobs that cannot be reassigned. Click OK to close the page and go to the Job Management page.

5. Click **Confirm**.

You are returned to the Job Management page, and a status message about the reassignment is displayed at the top of the page.

RELATED DOCUMENTATION

Rescheduling and Modifying the Recurrence of Jobs in Security Director

You can reschedule a job and modify its recurrence from the Job Management page. You can reschedule and modify jobs only in the following cases:

- The job supports scheduling and recurrence, and it is currently in the Scheduled state.
- The schedule of a job in the Failed or Success state is a recurring job
- The job was created as a recurring job. This behavior is true for all scheduled jobs except the following:
 - Backing up configuration files
 - Backing up the MySQL and PostgreSQL database
 - Generating reports

To reschedule and modify the recurrence of jobs triggered by any user in Junos Space Platform, you must be assigned the privileges of a Job Administrator. However, you can reschedule or modify the recurrence settings of jobs that are scheduled by you.

To reschedule and modify the recurrence of a scheduled job:

1. Select **Monitor > Job Management.**

The Job Management page appears.

2. Select the jobs that you want to reschedule. From the right-click or More menu, select **Reschedule Job.**

The Reschedule Job page appears.

3. Modify the schedule and the recurrence settings for the job according to the guidelines provided in [Table 70 on page 205](#).

4. Click **OK to reschedule the job.**

You are returned to the Job Management page.

Table 70: Reschedule Job Settings

| Setting | Guideline |
|------------|---|
| Type | Specify whether the job should be run immediately or later. If you specify that the operation should be run later, you must specify a start date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) for the job. |
| Recurrence | Specify whether the job should be done on a recurring basis. |
| Repeat | Specify the periodicity of the recurrence: <ul style="list-style-type: none"> • Minutes • Hourly • Daily • Weekly • Monthly • Yearly |
| Every | Specify the period at which the job reschedule should recur. For example, if you specified a periodicity in hours (Hourly), enter the number of hours after which the job retry should recur. |
| On | Specify one or more days on which you want the job to recur. NOTE: This field is displayed only when you specify a weekly periodicity (Weekly). |
| Ends | Specify one of the following: <ul style="list-style-type: none"> • Select Never to continue (without an end date) the recurring operation at the specified recurrence interval. • Select On and specify a date and time on which to stop the recurring operation. |
| Summary | Displays a summary of the recurrence. |

RELATED DOCUMENTATION

[Overview of Jobs in Security Director | 197](#)

[Using Job Management in Security Director | 195](#)

Retrying a Failed Job on Devices in Security Director

You can retry jobs that did not complete successfully on devices where they were configured to run from the Job Management page. Retrying a failed job allows you to save time because you do not need to create the job again and execute it, but can retry the failed job.

The following jobs can be retried if they fail:

- Deploy Configuration
- Discover Network Elements
- Reboot Devices
- Resynchronize Network Elements

To retry a job on the devices on which it failed:

1. Select **Monitor > Job Management**.

The Job Management page appears.

2. Select the job that you want to retry. From the right-click or More menu, select **Retry on failed devices**.

The Retry on *Job-Name* page appears, displaying the list of devices on which you can retry the job.

3. Specify the parameters for the job retry according to the guidelines provided in [Table 71 on page 207](#).

4. Click **OK** to retry the jobs.

The Job Details page appears displaying the details of the job.

5. Click **OK**.

You are returned to the Job Management page.

Table 71: Retry Job Settings

| Setting | Guideline |
|---------------------------------|---|
| Evict CLI/J-Web edit mode users | <p>Select the option to terminate CLI/J-Web edit mode user session.</p> <p>Starting in Security Director Release 21.3R1 hot patch v3, when you retry the update job on devices that failed due to device lock failures, you can terminate CLI user sessions on a device from Security Director.</p> |
| Type | <p>Specify whether the job should be run immediately or later. If you specify that the operation should be run later, you must specify a start date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) for the job.</p> |
| Recurrence | <p>Specify whether the job should be done on a recurring basis.</p> <p>This field is displayed if the job was created as a recurring job.</p> |
| Repeat | <p>Specify the periodicity of the recurrence:</p> <ul style="list-style-type: none"> • Minutes • Hourly • Daily (default) • Weekly • Monthly • Yearly |
| Every | <p>Specify the period at which the job retry should recur. For example, if you specified a periodicity in hours (Hourly), enter the number of hours after which the job retry should recur.</p> |
| On | <p>Specify one or more days on which you want the job to recur.</p> <p>NOTE: This field is displayed only when you specify a weekly periodicity (Weekly).</p> <p>The day on which the retry is scheduled is disabled. For example, if you scheduled the retry on a Wednesday, then Wed is selected by default and disabled. You can select other days by enabling the corresponding check boxes.</p> |

Table 71: Retry Job Settings *(Continued)*

| Setting | Guideline |
|---------|--|
| Ends | <p>Specify one of the following:</p> <ul style="list-style-type: none"> • Select Never to continue (without an end date) the recurring operation at the specified recurrence interval. • Select On and specify a date and time on which to stop the recurring operation. |
| Summary | Displays a summary of the recurrence. |

RELATED DOCUMENTATION

[Overview of Jobs in Security Director | 197](#)

[Using Job Management in Security Director | 195](#)

Exporting the Details of a Job in Security Director

You export the details of a job if you want to view the details of a job in an external application or e-mail the information. You can export the details of the following jobs as a comma-separated values (CSV) file:

- Delete Device
- Export Physical Inventory
- Resync Network Elements
- Reboot Devices
- Discover Network Elements
- Upload RSA Keys
- Export View active configuration
- Resolve key conflict

To export the details of a job:

1. Select **Monitor > Job Management**.
The Job Management page appears.
2. Double-click the job for which you want to view the details. Alternatively, select the job and from the More or right-click menu, select **View Job Details**.
The Job Details page appears.
3. Click the Export icon.
After a few seconds, a dialog box pops up.
4. Select whether to open the file directly or save the file to your client.
5. Click **OK**.
The file is opened or saved depending on the option that you chose.
6. Click **OK**.
You are returned to the Job Management page.

RELATED DOCUMENTATION

| |
|---|
| Overview of Jobs in Security Director 197 |
| Using Job Management in Security Director 195 |

Job Management Main Page Fields

Use this page to view, cancel, reassign, and reschedule jobs. You can also archive and purge jobs and retry jobs that failed. You can filter and sort the jobs displayed, and view details of each job. [Table 72 on page 209](#) describes the fields on this page.

Table 72: Job Management Main Page Fields

| Field | Description |
|---------|--|
| Job ID | ID of the job. |
| Name | Name of the job. For most jobs, the name is the job type with the job ID appended. However, for some jobs, the job name is supplied by the user as part of the workflow. |
| Percent | Percentage of the job that is completed. |

Table 72: Job Management Main Page Fields (*Continued*)

| Field | Description |
|----------------------|---|
| State | <p>State of job execution:</p> <ul style="list-style-type: none"> • Scheduled—Job is scheduled to run in the future. • Success—Job completed successfully. • Failure—Job failed and was terminated. • In Progress—Job is in progress. • Canceled—Job was canceled by a user. |
| Job Type | Type of job. Job types indicate what tasks or operations are performed. |
| Parameters | Objects on which a job is performed or is scheduled to be performed. |
| Summary | Operations executed for the job. |
| Scheduled Start Time | <p>Date and time when the job is scheduled to start.</p> <p>NOTE: The time is stored as UTC time in the database but mapped to the local time zone of the client from which the UI is accessed.</p> |
| Actual Start Time | Time when Junos Space Platform begins to execute the job. In most cases, the actual start time is the same as the scheduled start time. |
| End Time | Time when the job was completed or terminated if the job execution failed. |
| Owner | Username of the owner who initiated the job. |
| Domain | Domain from which the user initiated the job. |
| Recurrence | Scheduled recurrence of the job. |
| Retry Group ID | For a job that was retried, Job ID of the original job. |

Table 72: Job Management Main Page Fields *(Continued)*

| Field | Description |
|----------------|---|
| Previous Retry | For a job that was retried, Job ID of the previous retry job. |

RELATED DOCUMENTATION

| |
|---|
| Using Job Management in Security Director 195 |
| Overview of Jobs in Security Director 197 |
| Viewing the Details of a Job in Security Director 200 |

Audit Logs

IN THIS CHAPTER

- [Using Audit Logs in Security Director | 212](#)
- [Understanding Audit Logs in Security Director | 213](#)
- [Purging or Archiving and Purging Audit Logs in Security Director | 214](#)
- [Exporting Audit Logs in Security Director | 217](#)
- [Viewing the Details of an Audit Log in Security Director | 218](#)
- [Audit Logs Main Page Fields | 219](#)

Using Audit Logs in Security Director

Before You Begin

- Read the ["Understanding Audit Logs in Security Director" on page 213](#) topic.
- Review the Audit Logs main page for an understanding of the existing audit logs. See ["Audit Logs Main Page Fields" on page 219](#) descriptions.

Use the Audit Logs page to track login history, device management tasks, services that were provisioned on devices, and other user-initiated tasks. Tasks that are not initiated by users, such as device-driven activities like resynchronization of network elements, are not recorded in audit logs.

To use the Audit Logs page:

1. Select **Monitor > Audit Logs**.

The Audit Logs page appears.

2. Use the guidelines provided in [Table 73 on page 213](#) to learn about the page.

Table 73: Audit Logs Page Actions

| Action | Guideline |
|---------------------------------------|---|
| View the details of an audit log | <p>Double-click an audit log entry or click the Detailed View icon that appears when you mouse over the audit log entry to view the details of that audit log.</p> <p>The Audit Log Details page appears displaying the details of the audit log. See "Viewing the Details of an Audit Log in Security Director" on page 218.</p> |
| Purge or archive and purge audit logs | <p>Click the Archive/Purge icon in the toolbar to purge audit logs without archiving them or purge audit logs after archiving them.</p> <p>The Archive/Purge Audit Logs page appears. See "Purging or Archiving and Purging Audit Logs in Security Director" on page 214.</p> |
| Export audit logs | <p>Click the Export button to export audit logs as a comma-separated values (CSV) file. The Export Audit Log page appears displaying options for exporting the audit logs. See "Exporting Audit Logs in Security Director" on page 217.</p> |


RELATED DOCUMENTATION

| [Using Job Management in Security Director | 195](#)

Understanding Audit Logs in Security Director

The Audit Logs feature in Security Director enables you to track login history, device management tasks, services that were provisioned on devices, and other user-initiated tasks. Tasks that are not initiated by users, such as device-driven activities like resynchronization of network elements, are not recorded in audit logs.

Administrators can use audit logs to review events. For example, administrators can identify the user accounts associated with an event, determine the chronological sequence of events—that is, what happened before and during an event—, and so on.

**NOTE:** Security Director also tracks all externally initiated non-READ REST APIs, and login and logout APIs.

Administrators can sort and filter audit logs. For example, administrators can use audit log filtering to track user accounts that were added on a specific date, track configuration changes across a particular type of device, view services that were provisioned on specific devices, monitor user login and logout activities over time, and so on.



NOTE: To use the audit log service to monitor user requests and track changes initiated by users, you must be assigned the Audit Log Administrator role.

You can manage the volume of audit log data stored by purging log files from the Junos Space database without archiving them or by purging log files after archiving them. When you archive logs before purging them, the archived log files are saved in a single file in compressed comma-separated values (CSV) format (extension .csv.gz). Audit logs can be archived locally (on the active node in the Junos Space fabric) or to a remote server. When you archive data locally, the archived log files are saved in the `/var/lib/mysql/archive` directory on the active Junos Space node.

You can schedule the purging of audit logs (with or without prior archiving) for a later date and schedule the purging on a recurring basis.

You can export audit logs in CSV format without purging them from the system.

RELATED DOCUMENTATION

[Using Audit Logs in Security Director](#) | 212

Purging or Archiving and Purging Audit Logs in Security Director

Junos Space enables you to manage the volume of audit log data stored by purging log files from the Junos Space database without archiving them or by purging log files after archiving them. You can purge audit logs before a specified date and time or audit logs that are older than a specified number of days. Audit logs can be archived locally (on any node that is in the UP state) or to a remote server.

To purge or archive and purge audit logs:

1. Select **Monitor > Audit Logs**.

The Audit Logs page appears.

2. Click the **Archive/Purge** button.

The Archive / Purge Audit Logs page appears.

3. Specify the audit logs to be purged, or archived and purged, according to the guidelines provided in [Table 74 on page 215](#).

4. Click **OK**.

The Audit Log Archive/Purge page appears asking you to confirm the purge, or archive and purge, operation.

5. Click **Yes** to continue with the purge, or archive and purge, operation.

The Job Detail: Audit Log Archive/Purge page appears displaying the details of the job.

6. Click **OK** to close the Job Details page.

You are returned to the Audit Logs page.

Table 74: Archive/Purge Audit Logs Settings

| Setting | Guideline |
|--|---|
| Purge Logs | Specify a date and time (in MM/DD/YYYY and HH:MM:SS formats) before which audit logs should be purged or that audit logs that are older than a specified number of days should be purged. NOTE: You specify the time in the local time zone of the client computer but the audit logs are purged according to the time zone configured on the Junos Space server. |
| Purge audit logs from all accessible domains | Select this check box to purge audit logs from all domains to which you have access. By default, audit logs are purged only from a domain that you accessed, so this check box is cleared. |
| Archive logs before purge | Select this check box to archive audit logs before they are purged. This check box is selected by default. CAUTION: If you choose not to archive the audit logs before purging, the audit logs are deleted from the Junos Space database and cannot be recovered. |
| Archive Mode | Specify whether audit logs are archived locally (on the active node) or on a remote server. |
| Username | Enter a valid username of a user on the remote server. The username and password will be used to access the remote server. |
| Password | Enter a valid password of the user on the remote server. |
| Confirm Password | Reenter the password of the user on the remote server. |

Table 74: Archive/Purge Audit Logs Settings (*Continued*)

| Setting | Guideline |
|--------------------------|--|
| Remote Server IP Address | Enter the IPv4 address of the remote server. |
| Remote Server Directory | <p>Enter the full path of the directory (ending with /) on the remote server where the audit logs will be archived.</p> <p>NOTE: The directory must already exist on the remote server.</p> |
| Type | <p>Specify whether the purge, or archive and purge, operation should be run immediately or later.</p> <p>If you specify that the operation should be run later, you must specify a start date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) for the purge or archive and purge operation.</p> |
| Recurrence | <p>Specify whether the purge, or archive and purge, operation should be done on a recurring basis.</p> <p>NOTE: This field is enabled only when you specify (in the Purge Logs field) that audit logs that are older than a specified number of days should be purged.</p> |
| Repeat | <p>Specify the periodicity of the recurrence:</p> <ul style="list-style-type: none"> • Minutes • Hourly • Daily (Default) • Weekly • Monthly • Yearly |
| Every | Specify the period at which the purge should recur. For example, if you specified a periodicity in hours (Hourly), enter the number of hours after which the purge should recur. |

Table 74: Archive/Purge Audit Logs Settings (*Continued*)

| Setting | Guideline |
|---------|---|
| On | <p>Specify one or more days on which you want the purge to recur.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • This field is displayed only when you specify a weekly periodicity (Weekly). • The day on which the purge is scheduled is disabled. For example, if you scheduled a job on a Wednesday, then Wed is selected by default and disabled. You can select other days by enabling the corresponding check boxes. |
| Ends | <p>Specify one of the following:</p> <ul style="list-style-type: none"> • Select Never to continue (without an end date) the recurring purge operation at the specified recurrence interval. • Select On and specify a date and time on which to stop the recurring purge operation. |
| Summary | Displays a summary of the recurrence. |

RELATED DOCUMENTATION

[Using Audit Logs in Security Director | 212](#)

[Understanding Audit Logs in Security Director | 213](#)

Exporting Audit Logs in Security Director

You can export audit logs, as a comma-separated values (CSV) file, without purging the logs from the database. You can then view the exported audit logs in a separate application and analyze the logs as needed.

To export audit logs:

1. Select **Monitor > Audit Logs**.

The Audit Logs page appears.

2. Click the **Export** button.

The Export Audit Logs page appears.

- 3. Specify the audit logs to be exported according to the guidelines provided in [Table 75 on page 218](#).
- 4. Click **OK** to close the Export Audit Logs page.

You are returned to the Audit Logs page. After a few seconds, a dialog box pops up.

- 5. Select whether to open the file directly or save the file to your client.
- The Export Audit Logs page appears.

- 6. Click **OK**.
- The file is opened or saved depending on the option that you chose.

Table 75: Export Audit Logs Settings

| Setting | Guideline |
|---------------------|--|
| Export Type | Select which one of the following options to determine which audit logs are exported: <ul style="list-style-type: none">• Export all audit logs• Export audit logs displayed in the Audit Logs page—This is the default.• Export audit logs in a specified period—If you select this option, you must specify the period using the Start date and time and End date and time fields. |
| Start date and time | Enter the date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) from which the audit logs should be exported. |
| End date and time | Enter the date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) up to which the audit logs should be exported. |

RELATED DOCUMENTATION

| |
|---|
| Using Audit Logs in Security Director 212 |
| Understanding Audit Logs in Security Director 213 |

Viewing the Details of an Audit Log in Security Director

You can view the details of audit logs from the Audit Logs page.

To view the details of an audit log:

1. Select **Monitor > Audit Logs**.
The Audit Logs page appears.
2. Double-click the audit log entry for which you want to view the details.
The Audit Log Details page appears. The fields on this page are a subset of the fields on the Audit Logs page. See ["Audit Logs Main Page Fields" on page 219](#) for an explanation of the fields.
3. Click **OK** to close the Audit Log Details page.
You are returned to the Audit Logs page.

RELATED DOCUMENTATION

- [Using Audit Logs in Security Director | 212](#)
- [Understanding Audit Logs in Security Director | 213](#)

Audit Logs Main Page Fields

Use this page to view and export audit logs. You can also purge or archive and purge audit logs. You can filter and sort the audit logs displayed, and view details of each audit log entry. [Table 76 on page 219](#) describes the fields on this page.

Table 76: Audit Logs Main Page Fields

| Field | Description |
|----------|--|
| ID | ID of the audit log entry. |
| Username | Username of the initiator of the task. |
| User IP | IP address of the client from which the user initiated the task. |
| Domain | Domain from which the user initiated the task. |

Table 76: Audit Logs Main Page Fields (*Continued*)

| Field | Description |
|-------------|---|
| Application | <p>Name of the application from which the user initiated the task:</p> <ul style="list-style-type: none"> Displays <i>Network Management Platform</i> for tasks initiated for Junos Space Network Management Platform features. Displays <i>Security Director</i> for tasks was initiated for Security Director features. |
| Task | Name of the task that triggered the audit log. For example, Create User, Modify User, Import Roles, Login, and so on. |
| Timestamp | Timestamp for the audit log file, which is stored in UTC time in the database but mapped to the local time zone of the client computer. |
| Result | <p>Result of the task that triggered the audit log:</p> <ul style="list-style-type: none"> Success—Job is completed successfully. Failure—Job failed and is terminated. Job Scheduled—Job is scheduled but has not yet started. Recurring Job Scheduled—Job scheduled with recurrence. |
| Description | Description of the audit log. |
| Job ID | ID of the job-based task. Click the <i>job-id</i> link to view information about the job in the Job Management page. |

RELATED DOCUMENTATION

[Using Audit Logs in Security Director | 212](#)

[Understanding Audit Logs in Security Director | 213](#)

Packet Capture

IN THIS CHAPTER

- [Packet Capture Overview | 221](#)
- [About the Packets Captured Page | 222](#)
- [Setting the Purge Policy | 224](#)

Packet Capture Overview

The packet capture tool captures IDP attack packets sent by SRX Series devices. It is installed as part of Security Director installation and runs on the Junos Space Network Management setup. You can use it to help you analyze network traffic and troubleshoot network problems.

Based on a preconfigured set of rules, SRX Series devices classify the packets as normal or an attack. When there is an attack, an SRX Series device sends the attack packets to the Junos Space Network Management Platform. You must configure the SRX Series device to send the attack packets to the Junos Space Network Management Platform.

Junos Space Network Management Platform runs a load balancer bound with a Virtual IP address. You must configure SRX Series devices with the Virtual IP address as the destination for forwarding captured packets. Junos Space Network Management Platform receives those packets and stores them. You can view the attack information and download packets that constitute the attack from the Security Director application.

The ports that are opened between the SRX Series devices and Security Director are:

- Port 2050 (UDP) - Used to receive attack packets sent by SRX Series Firewalls.
- Port 2051 (TCP) - Used by Security Director to fetch the attack packets stored in Junos Space Network Management Platform database.

For information on modifying the IPS configuration on SRX Series devices, see ["Modifying the IPS Configuration for Security Devices" on page 341](#).



NOTE: Packet capture is applicable only for IPS packets.

Network administrators and security engineers use packet capture to perform the following tasks:

- *Monitor* network traffic and analyze traffic patterns.
- Identify and troubleshoot network problems.
- Detect security breaches in the network, such as unauthorized intrusions, spyware activity, or ping scans.

This tool captures the entire packet, including the Layer 2 header, and saves the contents to the Junos Space Network Management Platform Database in .pcap format. You can download attack packets captured by SRX Series devices and analyze these packets externally using tools such as Wireshark, tcpdump, tshark, and so on.



NOTE: PCAPs can be suppressed by the log suppression mechanism, which is enabled by default. To disable log suppression, see [suppression](#). To configure SRX IDP packet capture, see [Configuring Security Packet Capture](#).

RELATED DOCUMENTATION

[About the Packets Captured Page](#) | 222

[Modifying the IPS Configuration for Security Devices](#) | 341

About the Packets Captured Page

IN THIS SECTION

- [Tasks You Can Perform](#) | 223
- [Field Descriptions](#) | 223

To access this page, click **Monitor** > **Packet Capture**.

Use the Packets Captured page to view all the packets captured by SRX Series devices, and then download the attack packets.

Tasks You Can Perform

You can perform the following tasks from this page:

- Download the packets captured. Click **Download** to download the packet capture file. To download the attack packets from the Event Viewer, see ["Downloading Packets Captured" on page 56](#).
- Set purge policy. See ["Setting the Purge Policy" on page 224](#).
- View the attack details. See [Viewing Policy and Shared Object Details](#).
- Filter the packets based on attack name, date, and time of attack. Click the filter drop-down list and enter the filter criteria to filter the packets.

Field Descriptions

[Table 77 on page 223](#) provides guidelines on using the fields on the Packets Captured page. You can sort the attack packets in ascending or descending order based on attack name, system time, and attack time.

Table 77: Fields on the Packets Captured Page

| Field | Description |
|-------------------|--|
| Attack Name | Name of the attack packet. |
| Packets ID | ID of the captured packet. |
| Device IP | IP address of the SRX Series device that captured the packet. |
| System Time Stamp | Time when the system received the packet from the SRX Series device. |
| Attack Time Stamp | Time when the attack occurred. |
| Download | Link to download the packet capture file. |

RELATED DOCUMENTATION

| |
|--|
| Packet Capture Overview 221 |
| Setting the Purge Policy 224 |
| Viewing Policy and Shared Object Details |

Setting the Purge Policy


The purge policy enables you to purge the attack packets from the database based on the configured days or the storage space. Junos Space Security Director deletes packets when either of the conditions is met. You can set the purge policy based on the time and storage.

To set the purge policy:

- 1. Select **Monitor > Packet Capture**.
The Packets Captured page is displayed.
- 2. Click **Purge**.
The Set Purge Policy page is displayed.
- 3. Enter the details according to the guidelines in [Table 78 on page 224](#).
- 4. Click **OK**.

Table 78: Purge Policy Setting

| Field | Description |
|---------------------------|--|
| Time-based policy (days) | Number of days an attack entry is available in the database. The default number of days is 60. |
| Storage-based policy (MB) | Maximum space that the database can occupy. The default storage space is 500 MB. |

 **NOTE:** Cleanup takes place once every day at 1 AM.

RELATED DOCUMENTATION

| |
|---|
| Packet Capture Overview 221 |
| About the Packets Captured Page 222 |

NSX Inventory-Security Groups

IN THIS CHAPTER

- [About the Security Groups Page | 225](#)
- [View Members of a Security Group | 226](#)

About the Security Groups Page

IN THIS SECTION

- [Tasks You Can Perform | 225](#)
- [Field Descriptions | 225](#)

To access this page, select Security Director > Monitor > NSX Inventory > Security Groups.

Use the Security Groups page to view a list of security groups obtained from NSX and the corresponding dynamic address groups created by Security Director.

The security groups updates are automatically synchronized by Security Director.

Tasks You Can Perform

You can perform the following task from this page:

- View members of the security group.

Field Descriptions

[Table 79 on page 226](#) provides guidelines on using the fields on the Security Groups page.

Table 79: Fields on the Security Groups Page

| Field | Description |
|-------------|---|
| NSX Manager | Specifies the name of the NSX Manager from which the corresponding security group is obtained. |
| Name | Specifies the name of the security group. |
| Members | Click View to view the list of VMs belonging to a security group. If the vCenter is associated with the NSX Manager, the members list shows the VM names with IPv4 and IPv6 addresses. |
| DAG Name | Specifies the name of a dynamic address group created for each security group. The dynamic address group name is created in the format <i><NSX Manager name>-<security group name></i> . |
| Definition | Specifies the definition of a security group. |

RELATED DOCUMENTATION

| [About the NSX Managers Page](#) | 418

View Members of a Security Group

Use the View Members page to view the list of VMs belonging to a security group.

To view the list of virtual machines:

1. Select **Monitor** > **NSX Inventory** > **Security Groups**.

The Security Groups page appears.

2. In the Members column, click **View**.

The View Members page appears. [Table 80 on page 227](#) describes the fields on this page.

Table 80: Fields on the View Members Page

| Field | Description |
|----------------|--|
| Security Group | Specifies the name of the security group. |
| VM Name | Specifies the name of the VM that belongs to the security group. |
| IP Address | Specifies the IPv4 address of the VM. |
| IPv6 Address | Specifies the IPv6 address of the VM. |

RELATED DOCUMENTATION

| *About the NSX Managers Page*

vCenter Server Inventory-Virtual Machines

IN THIS CHAPTER

- [About the Virtual Machines Page | 228](#)
- [View Network Details of a Virtual Machine | 229](#)
- [View Security Groups of a Virtual Machine | 230](#)

About the Virtual Machines Page

IN THIS SECTION

- [Tasks You Can Perform | 228](#)
- [Field Descriptions | 228](#)

To access this page, select Security Director > Monitor > vCenter Server Inventory > Virtual Machines.

Use the Virtual Machines page to view the complete list of VMs that are dynamically fetched by the associated vCenter.

Tasks You Can Perform

You can perform the following tasks from this page:

- View security groups associated with each VM.
- View a list of vNICs for each VM and the network that each of vNIC is linked to.

Field Descriptions

[Table 81 on page 229](#) provides guidelines on using the fields on the Virtual Machines page.

Table 81: Fields on the Virtual Machines Page

| Field | Description |
|-----------------|---|
| VM Name | Specifies the name of the VM. |
| vCenter | Specifies the vCenter details. |
| OS on VM | Specifies the operating system on each VM. For example: Red Hat, CentOS, and so on. |
| Security Groups | Click View to view a list of security groups associated with each VM. |
| Network Details | Click View to view a list of vNICs for each VM with their corresponding IPv4 and IPv6 addresses. |
| State | Specifies whether the VM is switched on or off. |
| Status | Specifies whether the VM is connected to the ESXi host or not. |

RELATED DOCUMENTATION

| [About the NSX Managers Page](#) | 418

View Network Details of a Virtual Machine

Use the View Network Details page to view the network details of a virtual machine (VM) such as name of the virtual Network Interface Card (NIC) or the network adapter and the IPv4 and IPv6 addresses of each NIC.

To view the network details:

1. Select **Monitor > vCenter Server Inventory > Virtual Machines**.
The Virtual Machines page appears.
2. In the Network Details column, click **View**.

The View Network Details page appears. [Table 82 on page 230](#) provides the guidelines on using the fields on this page.

Table 82: Fields on the View Networks Details Page

| Field | Description |
|-----------------|--|
| Virtual Machine | Specifies the IP address of the VM. |
| vNIC | Specifies the name of a vNIC or network adapter. |
| IPv4 | Specifies the IPv4 address of a vNIC. |
| IPv6 | Specifies the IPv6 address of a vNIC. |

RELATED DOCUMENTATION

About the NSX Managers Page

View Security Groups of a Virtual Machine

Use the Security Groups page to view the list of security groups assigned to a virtual machine (VM).

To view the list of security groups:

1. Select **Monitor > vCenter Server Inventory > Virtual Machines**.

The Virtual Machines page appears.

2. In the Security Groups column, click **View**.

The Security Groups page appears. [Table 83 on page 230](#) describes fields on this page.

Table 83: Fields on the Security Groups Page

| Field | Description |
|-----------------|-------------------------------------|
| Virtual Machine | Specifies the IP address of the VM. |

Table 83: Fields on the Security Groups Page *(Continued)*

| Field | Description |
|----------------|---|
| Security Group | Specifies the name of the security group to which a VM belongs. |

RELATED DOCUMENTATION

| *About the NSX Managers Page*

Data Plane Packet Capture

IN THIS CHAPTER

- [About the Data Plane Packet Capture Page | 232](#)
- [Capture Data Plane Packets | 232](#)

About the Data Plane Packet Capture Page

The **Data Plane Packet Capture** page enables you to capture and analyze router data plane traffic on a device. The captured packets are written to a PCAP file which can be downloaded. You can capture data packets only from SRX4600, SRX5400, SRX5600, and SRX5800 devices running the Junos OS Release 19.3 or later. For more information about, see the [Network Management and Monitoring Guide](#).

To access the page, go to **Monitor> Data Plane Packet Capture**.

Capture Data Plane Packets

You can capture data packets only from SRX4600, SRX5400, SRX5600, and SRX5800 devices running the Junos OS Release 19.3 or later.

1. Go to **Monitor> Data Plane Packet Capture**.

The **Data Plane Packet Capture** page is displayed.

2. From the **Device** list, select the root device from which you want to capture the data packets.



NOTE: The data plane packet capture feature is applicable only for root devices.

3. In the **Basic Filter** section, perform the following steps:
 - a. Select the protocol to associate with the packet capture filter.
 - b. Select the multitenancy type for the device.

If you select **Tenant** or **LSYS**, you are prompted to select the tenant or logical system for the device.



NOTE: The **Tenant** or **LSYS** devices must be in the same domain level as the root device selected in step 2.

c. Select the required logical interface.

4. In the **Source & Destination Filter** section, perform the following steps:

- a. Enable the toggle switch to collect bidirectional information such as traffic from source port to destination port and vice-versa, if necessary.
- b. Enter the source and destination port numbers and the IPv4 or IPv6 address prefixes to filter the packets.

5. In the **Additional Settings** section, perform the following steps:

- a. Enter the maximum size of the packet capture file that can be captured.



NOTE: The maximum permissible size is 20 MB.

- b. Enter the maximum length of the packet capture.



NOTE: The packet is truncated if the capture length is more than the specified length. The length can be 68 through 10000 bytes. The default length is 1514 bytes.

- c. Enter the maximum number of packets that can be captured.



NOTE: You can capture 10 through 1,000,000 packets from a device. The default number of packets that are captured is 100.

- d. Enter the packet capture session time-out limit.



NOTE: The maximum permissible duration is 20 minutes and the default duration is 10 minutes.

6. Click **Start Packet Capture**.

- The packet capture session is initiated for the device. You can click **Stop Packet Capture** to cancel the session, if required.



NOTE: The session automatically ends when one of the criteria configured in **Advanced Settings** is met.

- After the session is complete, a link to download the packet capture file is displayed. You can click the link to download and save the file on your local system.



NOTE: The packet capture file is saved at `/var/cache/jboss/sd/dataplane_pcap/`.

4

PART

Devices

[Security Devices](#) | 236

[Device Discovery](#) | 383

[Secure Fabric](#) | 394

[NSX Managers](#) | 407

[vCenter Servers](#) | 458

[Licenses](#) | 460

Security Devices

IN THIS CHAPTER

- Using Features in Security Devices | 237
- Security Devices Overview | 240
- Add Devices to Juniper Security Director Cloud | 241
- Updating Security-Specific Configurations or Services on Devices | 243
- Resynchronizing Managed Devices with the Network in Security Director | 244
- Performing Commit Check | 245
- Logical Systems Overview | 246
- Tenant Systems Overview | 247
- Create a Logical System | 247
- Create a Tenant System | 252
- Uploading Authentication Keys to Devices in Security Director | 258
- Modifying the Configuration of Security Devices | 261
- Modifying the Basic Configuration for Security Devices | 264
- Modifying the Static Routes Configuration for Security Devices | 276
- Modifying the Routing Instances Configuration for Security Devices | 282
- Modifying the Physical Interfaces Configuration for Security Devices | 285
- Modifying the Syslog Configuration for Security Devices | 292
- Modifying the Security Logging Configuration for Security Devices | 302
- Modifying the Link Aggregation for Security Devices | 308
- Modifying the User Management Configuration for Security Devices | 312
- Modifying the Screens Configuration for Security Devices | 323
- Modifying the Zones Configuration for Security Devices | 336
- Modifying the IPS Configuration for Security Devices | 341
- Modifying the SSL Initiation Profile for Security Devices | 343
- Modifying the ICAP Redirect Profile for Security Devices | 345
- Configuring Aruba ClearPass for Security Devices | 349

- [Configuring APBR Tunables for Security Devices | 353](#)
- [Modifying the Express Path Configuration for Security Devices | 354](#)
- [Modifying the Device Information Source Configuration for Security Devices | 356](#)
- [Viewing the Active Configuration of a Device in Security Director | 357](#)
- [Deleting Devices in Security Director | 359](#)
- [Rebooting Devices in Security Director | 360](#)
- [Resolving Key Conflicts in Security Director | 361](#)
- [Launching a Web User Interface of a Device in Security Director | 362](#)
- [Connecting to a Device by Using SSH in Security Director | 363](#)
- [Importing Security Policies to Security Director | 365](#)
- [Importing Device Changes | 366](#)
- [Viewing Device Changes | 367](#)
- [Viewing and Exporting Device Inventory Details in Security Director | 367](#)
- [Previewing Device Configurations | 371](#)
- [Refreshing Device Certificates | 372](#)
- [Assigning Security Devices to Domains | 373](#)
- [Acknowledging Device SSH Fingerprints in Security Director | 374](#)
- [Viewing Security Device Details | 376](#)
- [Security Devices Main Page Fields | 376](#)

Using Features in Security Devices

Before You Begin

- Read the ["Security Devices Overview" on page 240](#) topic.
- Review the Security Devices main page for an understanding of the existing devices. See ["Security Devices Main Page Fields" on page 376](#) for field descriptions.

Use the Security Devices page to view the devices managed by Junos Space Security Director.

To use the Security Devices page:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Use the guidelines provided in [Table 84 on page 238](#) to learn about the page.

Table 84: Security Devices Page Actions

| Action | Guideline |
|------------------------------|--|
| View the details of a device | Right-click a device and select View Device Details from the shortcut menu, or click the Detailed View icon, which appears when you mouse over a device entry, to view the details of that device. The Device Detail page appears displaying the basic information about the device, the services on the device, the device status, and monitoring information. See "Viewing Security Device Details" on page 376 . |
| Update Changes | Select one or more devices and click Update Changes to update all security-specific configurations or pending services on the selected devices. The Update page appears. See "Updating Security-Specific Configurations or Services on Devices" on page 243 . |
| Resynchronize with Network | Select the devices that you want to resynchronize. Click the Resynchronize with Network button, or from the More or right-click menu, select Operations > Resynchronize with Network . The Resynchronize Devices page appears. See "Resynchronizing Managed Devices with the Network in Security Director" on page 244 . |
| Upload Keys | Click the Upload Keys button to upload authentication keys to the devices. See "Uploading Authentication Keys to Devices in Security Director" on page 258 . |
| Modify Configuration | Select one or more devices and, from the More or shortcut menu, select Configuration > Modify Configuration to modify the configuration on the selected device. The Modify Configuration page appears. See "Modifying the Configuration of Security Devices" on page 261 . |
| View Active Configuration | Select one or more devices. From the More or right-click menu, select Configuration > View Active Configuration . The View Active Configuration page appears. See "Viewing the Active Configuration of a Device in Security Director" on page 357 . |
| Preview Configuration | Select a device and, from the More or shortcut menu, select Configuration > Modify Configuration and then click Preview Configuration to preview the configuration changes that will be pushed to the security device. You can preview the changes in either CLI or XML format. See "Previewing Device Configurations" on page 371 . |

Table 84: Security Devices Page Actions *(Continued)*

| Action | Guideline |
|----------------------|--|
| Delete Devices | Select one or more devices. From the More or right-click menu, select Operations > Delete Devices to delete the selected devices. The Delete Devices page appears. See "Deleting Devices in Security Director" on page 359 . |
| Reboot Devices | Select the devices that you want to reboot. From the More or right-click menu, select Operations > Reboot Devices . The Reboot Devices page appears. See "Rebooting Devices in Security Director" on page 360 . |
| Resolve Key Conflict | To resolve key conflicts on one or more devices, select the devices. From the More or right-click menu, select Operations > Resolve Key Conflict . The Resolve Key Conflict page appears. See "Resolving Key Conflicts in Security Director" on page 361 . NOTE: This menu entry is enabled only if a device has a key conflict. |
| Launch Device WebUI | To access the device WebUI of the device to manage it directly, select the device for which you want to launch the Web UI. From the More or right-click menu, select Access > Launch Device WebUI . The Juniper Web Device Manager page appears in a separate browser tab or window. See "Launching a Web User Interface of a Device in Security Director" on page 362 . |
| SSH To Device | Select the device to which you want to connect. From the More or right-click menu, select Access > SSH to Device . The SSH to Device page appears. See "Connecting to a Device by Using SSH in Security Director" on page 363 . |
| Device Change | Select a device and, from the More or shortcut menu, select Device Change to do the following tasks: <ul style="list-style-type: none"> • Select Import Device Change to import out-of-band changes, which are made on the device and managed by Security Director. See "Importing Device Changes" on page 366. • Select View Device Change to check the status of the security configuration changes, either in CLI or XML format. See "Viewing Device Changes" on page 367. <p>These changes are made on the device and managed by Security Director.</p> |

Table 84: Security Devices Page Actions *(Continued)*

| Action | Guideline |
|--------------------------------|---|
| View Inventory Details | <p>To view the physical inventory, and physical and logical interfaces, on the device, select one or more devices, and from the More or right-click menu, select View Inventory Details.</p> <p>The subsequent page appears with the Physical Inventory tab highlighted. See "Viewing and Exporting Device Inventory Details in Security Director" on page 367.</p> |
| Import Configuration | <p>Select a device and, from the More or shortcut menu, select Import to import firewall, NAT, and IPS policies from a security device to Security Director. Resolve any conflicts, if needed. See "Importing Security Policies to Security Director" on page 365.</p> |
| Refresh Certificate | <p>Select a device and, from the More or shortcut menu, select Refresh Certificate for device certificate synchronization. See "Refreshing Device Certificates" on page 372.</p> |
| Assign Device to Domain | <p>To assign devices to a domain, select one or more devices and, from the More or shortcut menu, select Assign Device to Domain. See "Assigning Security Devices to Domains" on page 373.</p> |
| Acknowledge Device Fingerprint | <p>To acknowledge the SSH fingerprints received from the device or resolve any SSH fingerprint conflicts between the fingerprints stored in the Junos Space database and that on the device, select one or more devices. From the More or right-click menu, select Acknowledge Device Fingerprint. See "Acknowledging Device SSH Fingerprints in Security Director" on page 374.</p> <p>NOTE: This menu entry is visible only when a device has a fingerprint conflict.</p> |

RELATED DOCUMENTATION

[Creating Device Discovery Profiles in Security Director](#) | 384

Security Devices Overview

You can use Junos Space Security Director to simplify the management of security devices running Junos OS. If you have multiple devices in your network, you can manage them in one place from the Security Devices page.

To manage devices using Security Director, you must first discover the devices by using the Device Discovery workflow. After you discover your devices, you can manage them using the Security Devices page. You can view information about the device such as the device schema version, CPU and storage, and different status information for the device. For more information, see ["Security Devices Main Page Fields" on page 376](#).

You can also perform various actions such as uploading keys, modifying the device configuration, updating devices, viewing and importing device changes, viewing the inventory details, and so on. See ["Using Features in Security Devices" on page 237](#).

RELATED DOCUMENTATION

[Security Devices Main Page Fields | 376](#)

[Using Features in Security Devices | 237](#)

[Overview of Device Discovery in Security Director | 383](#)

Add Devices to Juniper Security Director Cloud

Before You Begin

Open port 443 in your network between Security Director on-prem and Juniper Security Director Cloud. It is used to initiate the connection between Security Director on-prem and Juniper Security Director Cloud.

Starting in Security Director Release 21.3, you can add Security Director managed devices to Juniper® Security Director Cloud. You can add only root devices or the primary root device in a cluster device. Juniper Security Director Cloud automatically discovers the secondary device in a cluster. You cannot add MX Series, cSRX, logical system, and tenant system devices to Juniper Security Director Cloud.

To add devices from Security Director on-prem to Juniper Security Director Cloud:

1. Select **Devices > Security Devices**.

The Security Devices page is displayed.

2. Click **Add Devices to Security Director Cloud**.

The Add Devices to Security Director Cloud page appears. You must enter the credentials to get authentication from Juniper Security Director Cloud. Hover over the device count tooltip to view selected device details.

3. Complete the configuration according to the guidelines provided in [Table 85 on page 242](#).

Table 85: Add Devices to Juniper Security Director Cloud

| Field | Description |
|---------------------|---|
| Geographical Region | Select a Juniper Security Director Cloud instance. NOTE: Security Director setup must have internet connectivity to get the region details. |
| Username | Enter the username for Juniper Security Director Cloud account. |
| Password | Enter the password for Juniper Security Director Cloud account. |

4. Click **Next**.

The Add Devices to Security Director Cloud page appears.

5. Select an organization account to which you want to add devices.

6. Click **Proceed**.

A confirmation message is displayed. Selected devices are added to Juniper Security Director Cloud and then these devices are permanently removed from Security Director on-prem.



NOTE: The default timeout value is set as 30 seconds for response from Juniper Security Director Cloud. If the response is not received within the timeout interval, current operation fails. To configure the timeout value for REST client, navigate to **Junos Space Platform > Administration > Applications**. Right-click Security Director, select **Modify Application Settings**, and then select **Cloud-Onboarding**. Enter the value in milliseconds.

7. Click **Yes** to add devices to Juniper Security Director Cloud.

The Job Status page is displayed with job details.

Add Devices

- The job to add devices to Juniper Security Director Cloud is initiated. On successful completion, selected devices are added in **Device Management > Devices** page in Juniper Security Director Cloud application.
- If the Add Devices job fails, an error message is displayed and subsequent jobs for Adopt Devices and Delete Devices also fail.

Adopt Devices

- a. After the devices have been successfully added, the job to adopt devices to Juniper Security Director Cloud is initiated.
- b. If the job for Adopt Devices fail, the subsequent Delete Devices job also fails. When the Adopt Devices job partially succeeds for certain devices, subsequent Delete Devices job is initiated for only successfully adopted devices.

Delete Devices

- a. After successful completion of adopting devices, the Delete Device job is initiated and successfully adopted devices are permanently removed from Security Director on-prem.

If you need to add the deleted device back in Security Director on-prem, you must delete the device manually from Juniper Security Director Cloud and delete the CLI command set `system services netconf rfc-compliant` from the device. You must then rediscover the device as a new device (See ["Overview of Device Discovery in Security Director" on page 383](#)).



NOTE: If you onboard a device to Juniper Security Director Cloud via Security Director on-prem, then the same device cannot be managed by both Security Director on-prem and Juniper Security Director Cloud application.

- b. If Delete Devices job fails partially for certain devices, you can manually trigger the retry job for those devices. Navigate to **Monitor > Job Management**, select a job, right-click and choose **Retry on Failed Devices**.



NOTE: The user authorized to perform onboard operation must have Super Administrator, Security Architect, Security Analyst, or Custom User with assigned Device Manager role. To assign user roles, navigate to **Administration > Users & Roles**. Firewall, NAT, and IPS policies created in Security Director on-prem are not migrated to Juniper Security Director Cloud. These policies remain the same as template in the corresponding policy pages.

Updating Security-Specific Configurations or Services on Devices

You can update all security-specific configurations or pending multiple services on the selected devices.

To update the changes:

1. Select **Devices > Security Devices**.
2. Select a device and then click **More**.

3. Click **Update Changes**.

The Update page appears.

You can also right-click the selected device and select **Update Changes**.

4. Enable policy rematch to allow the firewall to keep its existing sessions during a policy update from Security Director.
5. Enable the required service types to update the selected policies on the device. For example, enable Firewall Policy to update the firewall policies on the device.
6. Select Run now to update the configuration or pending services on the selected device at that time.
7. Select Schedule at a later time to update the configuration or pending services on the selected device at the specified time. Complete the following tasks:
 - a. Choose a date from the date picker by clicking the date picker icon.
 - b. Enter the time.
 - c. Select the time format from the drop-down menu.

8. Click **Update**.

All the security-specific configurations or pending services on the selected devices are updated.

RELATED DOCUMENTATION

[Importing Security Policies to Security Director | 365](#)

[Previewing Device Configurations | 371](#)

[Refreshing Device Certificates | 372](#)

[Importing Device Changes | 366](#)

[Viewing Device Changes | 367](#)

Resynchronizing Managed Devices with the Network in Security Director

You can manually resynchronize a managed device at any time. When you resynchronize a managed device, the configuration changes made on the device are synchronized with the Junos Space database. For example, when a managed device is updated by a device administrator using the CLI or the GUI of the device and you trigger a manual resynchronization, the device configuration in the Junos Space database is synchronized with the configuration on the physical device.

To resynchronize one or more devices:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices that you want to resynchronize. Click the **Resynchronize with Network** button, or from the More or right-click menu, select **Operations > Resynchronize with Network**.

The Resynchronize Devices page appears listing the devices to be resynchronized.

3. Click **OK** to confirm the resynchronization.

The Job Details: Resync Network Elements page appears pops up displaying details of the resynchronization job.

4. Click **OK** to close the Job Details page.

You are returned to the Security Devices page.

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Performing Commit Check

You can verify the syntax of the configuration changes for firewall, NAT, IPS, VPN, and APBR before the configuration is pushed to the security devices.

To perform commit check on one or more devices:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select one or more devices and click **Commit Check** button.

The Commit Check page appears.



NOTE: If you select a device with connection status as up, configuration status as In sync, and pending service as some valid service, then only commit check will be enabled for a device.

3. Enable the service types for which you want to execute the commit check.
4. Click **OK** to complete the commit check.

The Job Details page appears with the status of commit check for the first device in the grid.

5. Click **OK** to close the Job Details page.



NOTE: To check the job details for commit check on all the selected devices, select **Monitor > Job Management**. The devices with no pending services shows the state as failure.

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Logical Systems Overview

Starting in Security Director Release 18.2R1, you can create logical systems in Security Director. Logical systems for SRX Series devices enable you to partition a single device into secure contexts. Each logical system has its own discrete administrative domain, logical interfaces, routing instances, security firewall and other security features. By transforming an SRX Series device into a multitenant logical systems device, you can give various departments, organizations, customers, and partners—depending on your environment—private use of portions of its resources and a private view of the device.

To distribute security resources across logical systems, you can create security profiles that specify the type and amount of resources to be allocated to a logical system. After creating security profiles, you can bind them to logical systems. The logical systems are defined largely by the resources allocated to them, including security components, interfaces, routing instances, static routes, and dynamic routing protocols. You cannot create a logical system without assigning a security profile to it. You can configure a single security profile to assign resources to a specific logical system or use the same security profile for more than one logical system.

For detailed information about understanding logical systems, see *Logical Systems and Tenant Systems User Guide for Security Devices*.

RELATED DOCUMENTATION

[Create a Logical System | 247](#)

Tenant Systems Overview

A tenant system logically partitions the physical firewall into separate and isolated logical firewall. Although similar to logical systems, tenant systems have much higher scalability and fewer routing features. Each tenant system on a device allows you to control a discrete administrative domain for security services. By transforming your device into a multitenant system, you can provide various departments, organizations, customers, and partners—depending on your environment—private and logically separated use of system resources and tenant-specific views of security configuration. A primary administrator creates and manages all the tenant systems.

To distribute security resources across tenant systems, you can create security profiles that specify the type and amount of resources to be allocated to a tenant system. After creating security profiles, you can bind them to tenant systems. The tenant systems are defined largely by the resources allocated to them, including security components, interfaces, routing instances, static routes, and dynamic routing protocols. You cannot create a tenant system without assigning a security profile to it. You can configure a single security profile to assign resources to a specific tenant system or use the same security profile for more than one tenant system.

For detailed information about understanding tenant systems, see *Logical Systems and Tenant Systems User Guide for Security Devices*.

RELATED DOCUMENTATION

[Create a Tenant System](#)

Create a Logical System

IN THIS SECTION

- [Add Logical Systems in Bulk | 247](#)
- [Add Individual Logical System at a Time | 248](#)

You can add logical systems in bulk or add individual logical system at a time.

Add Logical Systems in Bulk

To add logical systems in bulk:

1. Select **Devices > Security Devices**.

The Security Devices page is displayed.

2. Select a root device, right-click and select **Create Logical System**.

The Create Logical System (LSYS) page is displayed.

3. Click **Add Bulk LSYS**.

The Add Bulk Logical System (LSYS) page is displayed.

4. Complete the configuration according to the guidelines given in [Table 86 on page 249](#).

5. Click **Add**.

The Create Logical System (LSYS) page is displayed. Review the logical system details.

6. Select the logical system and click the pencil icon to modify the details, if required.

You can also provide the user class and interface for logical systems. Logical System configuration parameters cannot be edited after you click Preview Configuration or Create.

7. Click **Create** to create the logical system.

The Job Details page is displayed with update logical system device job and its status.

8. Click **OK**.

If the job is successful, the logical system is created and displayed in the Security Devices page. The root device name is displayed beside the logical system device name. You can click on the logical system device name link to see the root device details.

Add Individual Logical System at a Time

Alternatively, you can create individual logical systems at a time. To create individual logical system at a time:

1. Select **Devices > Security Devices**.

The Security Devices page is displayed.

2. Select a root device, right-click and select **Create Logical System**.

The Create Logical System (LSYS) page is displayed.

3. Click the **+** icon.

The Create Logical System (LSYS) page is displayed.

4. Complete the configuration according to the guidelines given in [Table 86 on page 249](#).

5. Click **Add**.

The Create Logical System (LSYS) page is displayed. Review the logical system details.

6. Select the logical system and click the pencil icon to modify the details, if required.

Logical System configuration parameters cannot be edited after you click Preview Configuration or Create.

7. Click **Create** to create the logical system.

The Job Details page is displayed with update logical system device job and its status.

8. Click **OK**.

If the job is successful, the created logical system is displayed in the Security Devices page. The name of the root device is displayed beside the logical system device name. You can click on the root device name to see the root device details.

Table 86: Add Bulk Logical System

| Parameters | Description |
|-----------------------|--|
| Logical System Name | A logical system name can be a maximum of 63 characters and can include alphanumeric characters, dashes, and underscores. |
| Number of LSYS(s) | <p>Select the number of logical systems that you want to create.</p> <p>You can create a maximum of 31 logical systems.</p> <p>NOTE: The logical system name uses the number as prefix for the selected count. You can review the details of the logical system and modify the name, if required.</p> |
| Routing Instance Name | Enter the routing instance name. A routing instance system name can be a maximum of 63 characters and can include alphanumeric characters and dashes. |
| Routing Instance Type | Select the routing instance type from the list. |

Table 86: Add Bulk Logical System *(Continued)*

| Parameters | Description |
|--------------------|---|
| Security Profiles | <p>To distribute security resources across logical systems, you can create security profiles that specify the type and amount of resources to be allocated. You can create security profile and bind it to more than one logical system, if you want to allocate the same type and amount of resources to them.</p> <p>When a device is discovered in Security Director for the first time, you can see the list of security profiles, if any, while creating a logical system. Alternatively, you can create security profiles in Security Director.</p> <p>A security profile is mandatory to create a Logical system. Each security profile contains resources with a range based on the devices. You can manage the resources by allocating reserved and maximum values.</p> <p>Select a security profile, which will be bound to the logical system.</p> <p>To create a security profile:</p> <ol style="list-style-type: none"> 1. Click the + icon. <p>The Create Security Profile page is displayed.</p> <ol style="list-style-type: none"> 2. Complete the configuration according to the guidelines given in Table 87 on page 251. 3. Click Save. <p>The Job Details page is displayed with the status of update security profile job. If the job is successful, the security profile is created.</p> <p>To edit the security profile, select a security profile and click the pencil icon.</p> <p>NOTE: You can configure up to 32 security profiles on an SRX Series device running logical systems. When you reach the limit, you can delete the empty profiles. If you want to delete a profile which is assigned to a logical system, then first assign some other profile to the logical system and then delete the profile. Otherwise, you cannot delete a profile and commit fails on the device.</p> |
| User Class Details | <p>Select a user class. Each user is assigned to a class, which defines the user permissions.</p> <p>NOTE: User class details section is available only when you create an individual logical system at a time. When you create a logical system in bulk, you can provide the user class when you edit the logical system as mentioned in 6 in "Add Logical Systems in Bulk" on page 247.</p> |

Table 86: Add Bulk Logical System *(Continued)*

| Parameters | Description |
|-------------------|--|
| Assign Interfaces | <p>Select an interface.</p> <p>To add logical interface:</p> <ol style="list-style-type: none"> 1. Click Add Logical Interface. <p>The corresponding logical interfaces page is displayed.</p> <ol style="list-style-type: none"> 2. Click the + icon. <p>The Add Logical Interface page is displayed.</p> <ol style="list-style-type: none"> 3. Enter the following details: <ul style="list-style-type: none"> • Logical Interface Unit—Enter the name of the logical interface, which must be a number from 0 through 2147483647. • Description—Enter a valid description for logical interface. The maximum limit is 255 characters. • VLAN ID—Select the VLAN ID. If the VLAN tagging is enabled, then the VLAN ID is mandatory. • IPv4 address—Enter the IPv4 address and the subnet mask. • IPv6 address—Enter the IPv6 address and the subnet mask. <p>NOTE: User class details section is available only when you create individual logical system at a time. When you create logical systems in bulk, you can provide the user class when you edit the logical system as mentioned in 6 in "Add Logical Systems in Bulk" on page 247.</p> |

Table 87: Security Profile

| Parameters | Description |
|-------------------------|---|
| <i>General Settings</i> | |
| Security Profile Name | Enter a valid unique name. The name must contain only letters and numbers. Note that the security profile name must be unique for the selected root device. |

Table 87: Security Profile *(Continued)*

| Parameters | Description |
|----------------------------|--|
| <i>Resource Allocation</i> | <p>Select the type of resource and allocate the reserved and maximum value for the selected resource.</p> <p>Each security profile contains resources with a range based on the devices. You can manage the resources by allocating reserved and maximum values.</p> |
| Reserved | It guarantees that the specified resource is always available to the logical system. If a reserved quota is not configured for a resource, the default value is 0. |
| Maximum | <p>If a logical system requires more resource than reserved amount allows, it can utilize resources configured for the global maximum amount if they are available—if they are not allocated to other logical systems. The maximum allowed quota specifies the portion of the free global resources that the logical system can use. The maximum allowed quota does not guarantee that the amount specified for the resource in the security profile is available.</p> <p>If a maximum allowed quota is not configured for a resource, the global system quota for the resource is used as a default value. Global system quotas are platform-dependent.</p> |

RELATED DOCUMENTATION

| [Logical Systems Overview](#) | 246

Create a Tenant System

IN THIS SECTION

- [Add Tenant Systems in Bulk](#) | 253
- [Add Individual Tenant System at a Time](#) | 253

You can add tenant systems in bulk or add individual tenant system at a time.

Add Tenant Systems in Bulk

To add tenant systems in bulk:

1. Select **Devices > Security Devices**.

The Security Devices page is displayed.

2. Select a root device, right-click and select **Create Tenant System**.

The Create Tenant System (TSYS) page is displayed.

3. Click **Add Bulk TSYS**.

The Add Bulk Tenant System (TSYS) page is displayed.

4. Complete the configuration according to the guidelines given in [Table 88 on page 254](#).

5. Click **Add**.

The Create Tenant System (TSYS) page is displayed. Review the tenant system details.

6. Select the tenant system and click the pencil icon to modify the details, if required.

You can also provide the user class and interface for tenant systems. Tenant System configuration parameters cannot be edited after you click Preview Configuration or Create.

7. Click **Create** to create the tenant system.

The Job Details page is displayed with update tenant system device job and its status.

8. Click **OK**.

If the job is successful, the tenant system is created and displayed in the Security Devices page. The root device name is displayed beside the tenant system device name. You can click on the tenant system device name link to see the device details.

Add Individual Tenant System at a Time

Alternatively, you can create individual tenant systems at a time. To create individual tenant system at a time:

1. Select **Devices > Security Devices**.

The Security Devices page is displayed.

2. Select a root device, right-click and select **Create Tenant System**.

The Create Tenant System (TSYS) page is displayed.

3. Click the **+** icon.

The Create Tenant System (TSYS) page is displayed.

4. Complete the configuration according to the guidelines given in [Table 88 on page 254](#).

5. Click **Add**.

The Create Tenant System (TSYS) page is displayed. Review the tenant system details.

6. Select the tenant system and click the pencil icon to modify the details, if required.

Tenant System configuration parameters cannot be edited after you click Preview Configuration or Create.

7. Click **Create** to create the tenant system.

The Job Details page is displayed with update tenant system device job and its status.

8. Click **OK**.

If the job is successful, the created tenant system is displayed in the Security Devices page. The name of the root device is displayed beside the tenant system device name. You can click on the root device name to see the root device details.

Table 88: Add Bulk Tenant System

| Parameters | Description |
|--------------------------|---|
| General Details | |
| Tenant System Name | A tenant system name can be a maximum of 63 characters and can include alphanumeric characters, dashes, and underscores. |
| Number of TSYS(s) | <p>Select the number of tenant systems that you want to create.</p> <p>You can create a maximum of 499 tenant systems.</p> <p>NOTE: The tenant system name uses the number as prefix for the selected count. You can review the details of the tenant system and modify the name, if required.</p> |
| Routing Instance Name | Enter the routing instance name. A routing instance system name can be a maximum of 63 characters and can include alphanumeric characters and dashes. |
| Routing Instance Type | Select the routing instance type from the list. |
| Security Profiles | |

Table 88: Add Bulk Tenant System (Continued)

| Parameters | Description |
|------------|---|
| | <p>To distribute security resources across tenant systems, you can create security profiles that specify the type and amount of resources to be allocated. You can create security profile and bind it to more than one tenant system, if you want to allocate the same type and amount of resources to them.</p> <p>When a device is discovered in Security Director for the first time, you can see the list of security profiles, if any, while creating a tenant system. Alternatively, you can create security profiles in Security Director.</p> <p>A security profile is mandatory to create a tenant system. Each security profile contains resources with a range based on the devices. You can manage the resources by allocating reserved and maximum values.</p> <p>Select a security profile, which will be bound to the tenant system.</p> <p>To create a security profile:</p> <ol style="list-style-type: none"> 1. Click the + icon. <p>The Create Security Profile page is displayed.</p> <ol style="list-style-type: none"> 2. Complete the configuration according to the guidelines given in Table 89 on page 258. 3. Click Save. <p>The Job Details page is displayed with the status of update security profile job. If the job is successful, the security profile is created.</p> <p>To edit the security profile, select a security profile and click the pencil icon.</p> |

Table 88: Add Bulk Tenant System *(Continued)*

| Parameters | Description |
|--------------------|---|
| User Class Details | <p>Select a user class. Each user is assigned to a class, which defines the user permissions.</p> <p>NOTE: User class details section is available only when you create individual tenant system at a time. When you create a tenant system in bulk, you can provide the user class when you edit the tenant system as mentioned in 6 in "Add Tenant Systems in Bulk" on page 253.</p> |

Table 88: Add Bulk Tenant System (Continued)

| Parameters | Description |
|-------------------|--|
| Assign Interfaces | <p>Select an interface.</p> <p>To add logical interface:</p> <ol style="list-style-type: none"> 1. Click Add Logical Interface. The corresponding logical interfaces page is displayed. 2. Click the + icon. The Add Logical Interface page is displayed. 3. Enter the following details: <ul style="list-style-type: none"> • Logical Interface Unit—Enter the name of the logical interface, which must be a number from 0 through 2147483647. • Description—Enter a valid description for logical interface. The maximum limit is 255 characters. • VLAN ID—Select the VLAN ID. If the VLAN tagging is enabled, then the VLAN ID is mandatory. • IPv4 address—Enter the IPv4 address and the subnet mask. • IPv6 address—Enter the IPv6 address and the subnet mask. <p>NOTE: User class details section is available only when you create individual tenant system at a time. When you create tenant systems in bulk, you can provide the user class when you edit the tenant system as mentioned in 6 in "Add Tenant Systems in Bulk" on page 253.</p> |

Table 89: Security Profile

| Parameters | Description |
|----------------------------|--|
| <i>General Settings</i> | |
| Security Profile Name | Enter a valid unique name. The name must contain only letters and numbers. Note that the security profile name must be unique for the selected root device. |
| <i>Resource Allocation</i> | <p>Select the type of resource and allocate the reserved and maximum value for the selected resource.</p> <p>Each security profile contains resources with a range based on the devices. You can manage the resources by allocating reserved and maximum values.</p> |
| Reserved | It guarantees that the specified resource amount is always available to the logical system. If a reserved quota is not configured for a resource, the default value is 0. |
| Maximum | <p>If a logical system requires more resource than its reserved amount allows, it can utilize resources configured for the global maximum amount if they are available—if they are not allocated to other logical systems. The maximum allowed quota specifies the portion of the free global resources that the logical system can use. The maximum allowed quota does not guarantee that the amount specified for the resource in the security profile is available.</p> <p>If a maximum allowed quota is not configured for a resource, the global system quota for the resource is used as a default value. Global system quotas are platform-dependent.</p> |

RELATED DOCUMENTATION

| [Tenant Systems Overview](#)

Uploading Authentication Keys to Devices in Security Director

You can authenticate a device by using credentials (username and password) or by key-based authentication. Junos Space supports RSA keys for key-based authentication. In the Security Devices page, you can upload authentication keys to one or more devices.



NOTE: You can generate the authentication keys from the Fabric page in the Administration workspace of Junos Space Network Management Platform.

To upload authentication keys to one or more devices:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Click the **Upload Keys** button.
The Upload Keys page appears.
3. Specify the parameters for uploading keys according to the guidelines provided in [Table 90 on page 259](#).
4. Click **OK** to confirm the key upload.
The Job Details: Upload RSA keys page appears, displaying details of the uploaded job.
5. Click **OK** to close the Job Details page.
You are returned to the Security Devices page.

Table 90: Upload Keys Settings

| Setting | Guideline |
|--------------------|---|
| <i>Upload Keys</i> | |
| Upload Type | <p>Specify how you want to upload keys:</p> <ul style="list-style-type: none">• Select Add Manually to add the device details and authentication keys manually.• Select Import from CSV to import the device details and authentication keys from a comma-separated values (CSV) file. <p>Click the CSV Sample link to view or download a sample CSV file.</p> |
| CSV File | <p>Click Browse to browse for and select a CSV file.</p> <p>The CSV file that you selected is displayed in this field. Click Next to continue.</p> |
| Add Manually | <p>Select either the IP address or hostname of the device as the upload type.</p> |
| IP Address | <p>Enter the IPv4 or IPv6 address of the device.</p> |

Table 90: Upload Keys Settings (*Continued*)

| Setting | Guideline |
|--|---|
| Hostname | Enter the hostname of the device. |
| Device Admin | Enter the username (of the device administrator) to be used for device authentication. |
| Password | Enter the password (of the device administrator) to be used for device authentication. Click Next to continue. |
| Authorize as different user | Select this check box to authorize a different user on the target device. |
| User on Device | Specify the username to be used for uploading. If the username that you specify does not exist on the device, a user with this username is created and the key is uploaded for this user. If you do not specify a username, the key is uploaded for the device administrator. Click Next to continue. |
| <i>Authentication keys will be uploaded to the following devices</i> | |
| | The list of devices on which authentication keys will be loaded is displayed. Click Back to return to the previous section or Finish to go to a summary page. |

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Configuration of Security Devices

You can use the Modify Configuration page to modify the configuration of one or more managed devices. You cannot modify the configuration of unmanaged devices, devices of the TCA Series family, and devices with the configuration status “waiting for deployment.”

To modify the configuration of one or more security devices:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices whose configuration you want to modify.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.

The Modify Configuration page appears with the Basic Setup section selected by default. See [Table 91 on page 262](#) for the configurations that you can modify.



NOTE: Depending on whether you selected one device or more than one device, the configuration that you can modify differs. If you select only one device, all sections can be modified. If you select more than one device, only the Basic Setup, Syslog, and Security Logging sections can be modified; in addition, configuration parameters that are unique to the device, such as hostname, cannot be modified.

4. After you have modified the configuration, you can perform the following actions:
 - Click the **Save** button to save the configuration changes that you made. The changes that you made are saved to the Junos Space database and you are returned to the Security Devices page.
 - Click the **Preview Changes** button to preview the changes that you made. The Preview Configuration Changes page appears with the CLI tab selected by default. The CLI tab displays the Junos OS commands corresponding to the changes that you made. For an XML view of the configuration, click the **XML** tab. Click **Close** to close the page and you are returned to the Modify Configuration page.
 - Click the **Save and Deploy** button to save the configuration changes and deploy the saved configuration to the device.
 - If the configuration was not modified, the Deploy Configuration page appears displaying a message indicating that no changes were made. Click **OK** to close the page.

You are returned to the Modify Configuration page.

- If the configuration was modified, then the changes are saved to the Junos Space database and the Deploy Configuration page appears.

- In the **Type** field, specify whether you want to deploy the configuration immediately or deploy the configuration later. If you choose to deploy the configuration later, you must specify a date and time in the DD/MM/YYYY HH:MM:SS AM/PM/24-hour formats.
- Click **OK**.

The Job Details: Deploy Configuration page appears displaying the details of the job.

- Click **OK** to close the Job Details page.

You are returned to the Security Devices page.

- Click **Cancel** to discard the configuration changes that you made. The changes are discarded and you are returned to the Security Devices page



NOTE: For tenant systems, you can modify configurations such as routing instances, physical interfaces, security logging, access profile, screens, zones, and ICAP redirect. For logical systems, you can modify configurations such as static routes, routing instances, physical interfaces, security logging, screens, zones, SSL initiation, and ICAP redirect.

Table 91: Modify Configuration

| Configuration | Action |
|---------------------|---|
| Basic Setup | See "Modifying the Basic Configuration for Security Devices" on page 264. |
| Static Routes | See "Modifying the Static Routes Configuration for Security Devices" on page 276. |
| Routing Instances | See "Modifying the Routing Instances Configuration for Security Devices" on page 282. |
| Physical Interfaces | See "Modifying the Physical Interfaces Configuration for Security Devices" on page 285. |
| Syslog | See "Modifying the Syslog Configuration for Security Devices" on page 292. |
| Security Logging | See "Modifying the Security Logging Configuration for Security Devices" on page 302. |
| Link Aggregation | See "Modifying the Link Aggregation for Security Devices" on page 308. |

Table 91: Modify Configuration (Continued)

| Configuration | Action |
|--------------------|---|
| User Management | See "Modifying the User Management Configuration for Security Devices" on page 312. |
| Screens | See "Modifying the Screens Configuration for Security Devices" on page 323. |
| Zones | See "Modifying the Zones Configuration for Security Devices" on page 336. |
| IPS | See "Modifying the IPS Configuration for Security Devices" on page 341. |
| SSL Initiation | See "Modifying the SSL Initiation Profile for Security Devices" on page 343. |
| ICAP Redirect | See "Modifying the ICAP Redirect Profile for Security Devices" on page 345. |
| Aruba ClearPass | See "Configuring Aruba ClearPass for Security Devices" on page 349. |
| Express Path | See "Modifying the Express Path Configuration for Security Devices" on page 354. |
| APBR-Tunables | See "Configuring APBR Tunables for Security Devices" on page 353. |
| Device Information | See "Modifying the Device Information Source Configuration for Security Devices" on page 356. |

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Basic Configuration for Security Devices

You can use the Basic Setup section on the Modify Configuration page to modify the basic configuration for a device. You can modify settings related to hostname and device name, system time, basic protocols, users, DNS, and SNMP.



NOTE: Refer to the Junos OS documentation at https://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/ for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the basic configuration:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select the devices to modify configuration.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.
The Modify Configuration page appears with the Basic Setup section selected by default.
4. Modify the configuration according to the guidelines provided in [Table 92 on page 264](#).
5. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 92: Basic Setup

| Setting | Guideline |
|------------------|---|
| Hostname | Modify the hostname of the device. |
| Domain Name | Modify the domain name in which the device is located. |
| Root Password | Enter an alphanumeric password. It must be from 6 up to 128 characters long. It can include uppercase letters, lowercase letters, numbers, punctuation marks, and other special characters. |
| Confirm Password | Re-enter the password for the root user. |

Table 92: Basic Setup (*Continued*)

| Setting | Guideline |
|----------------------------|--|
| DNS Server | <p>Configure a Domain Name System (DNS) for a device. Specify a server that the device can use to resolve hostnames into addresses.</p> <p>To add a DNS Server:</p> <ol style="list-style-type: none"> 1. Click + icon. <p>The Add DNS Server page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the IPv4 or IPv6 address of the DNS Server. 3. Click OK. <p>If the fields entered are valid, a DNS server is created and a confirmation message is displayed at the top of the Modify Configuration page.</p> <p>You can also edit or delete the DNS Server.</p> |
| Domain Search | <p>Specifies the DNS domain name.</p> <p>To include the domain name of the device in a DNS search:</p> <ol style="list-style-type: none"> 1. Click + icon. <p>The Add Domain Name page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the domain name. <p>Enter a string with an alphanumeric character. You can include underscores, hyphen, slash, and dot. Spaces are not allowed.</p> <ol style="list-style-type: none"> 3. Click OK. <p>You can also edit or delete the existing DNS names.</p> |
| System Time Setting | |
| Time Zone | Select the local time zone in which the device is located. |
| Time Source | Specifies the method the device uses to set the system time. Sync with NTP Server synchronizes the system time with the NTP server that you select. |

Table 92: Basic Setup (*Continued*)

| Setting | Guideline |
|--|---|
| NTP Server | <p>Existing NTP servers are displayed in a table with the server name, authentication key, NTP server version, and whether the server is preferred (True) or not (False). You can perform the following actions:</p> <ul style="list-style-type: none"> • Add an NTP Server: <ol style="list-style-type: none"> 1. Click + to add an NTP server. The Add NTP Server page is displayed. 2. Complete the configuration according to the guidelines provided in Table 93 on page 276. 3. Click OK. If the fields entered are valid, an NTP server is created and a confirmation message is displayed at the top of the Modify Configuration page. • Modify NTP server settings—Select an NTP server and click the pencil icon to modify the settings. The Edit NTP Server page appears, showing the same fields that are presented when you create an NTP server. You can modify some of the fields on this page. See Table 93 on page 276 for an explanation of the fields. • Delete NTP servers—Select one or more NTP servers and click the X icon to delete the NTP servers. The Warning page appears. Click Yes to confirm the deletion. The selected NTP servers are deleted. |
| Management Access Configuration | |
| Web API | Select the checkbox to enable Web API configuration. |
| Client | Select the checkbox to enable web API client. |

Table 92: Basic Setup (*Continued*)

| Setting | Guideline |
|------------|---|
| Host Name | <p>Provides the address of permitted HTTP or HTTPS request originators.</p> <p>To add a hostname:</p> <ol style="list-style-type: none"> 1. Click + icon. <p>The Add WebAPI Hostname page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the IPv4 address of the request originator. 3. Click OK. <p>To edit the hostname, select the hostname and click the pencil icon. Click the delete icon to delete the hostname.</p> |
| HTTP | Select the checkbox to enable unencrypted HTTP connection settings. |
| HTTP Port | Select a HTTP port. Provides TCP ports for incoming HTTP connections. The range is from 1 through 65535. |
| HTTPS | Select the checkbox to enable encrypted HTTPS connection settings. |
| HTTPS Port | Select a HTTPS port. Provides TCP ports for incoming HTTPS connections. The range is from 1 through 65535. |

Table 92: Basic Setup (*Continued*)

| Setting | Guideline |
|------------------|--|
| Certificate Type | <p>Specifies the certificate that you want to use to secure the connection from the HTTPS certificates list when you enable HTTPs for Web API.</p> <p>Select an option:</p> <ul style="list-style-type: none"> • Default—Specifies the default certificate to be used. • PKI Certificate—Specifies the name of the certificate that is generated by public key infrastructure (PKI). <p>PKI Certificate—Select the PKI certificate for HTTPS of Web API.</p> <ul style="list-style-type: none"> • Local Certificate—Specifies the name of the local certificate. • Upload Certificate—Browse and upload the certificate. • Certificate Path—Displays the file path of the uploaded certificate. • Certificate Key—Browse and upload the certificate key. • Certificate Key Path—Displays the file path of the uploaded certificate key. |
| User | Select the checkbox to provide the user credential details. |
| Name | Enter the username. |
| Password | Enter the password. |
| REST API | Select the checkbox to enable REST API. Allows RPC execution over HTTP(S) connection. |
| Explorer | Select the checkbox to enable REST API explorer. |
| Control | Select the checkbox to specify the allowed source IP addresses and maximum number of simultaneous connections for the REST API process. |

Table 92: Basic Setup (*Continued*)

| Setting | Guideline |
|------------------|---|
| Allowed Sources | <p>Specifies the source IP address for the REST API process.</p> <p>To add the source IP address for the REST API process:</p> <ol style="list-style-type: none"> 1. Click + icon. <p>The Add Allowed Source page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the IPv4 address of the source. 3. Click OK. |
| Connection Limit | Select the maximum number of simultaneous connections for the REST API process. |
| HTTP | Select the checkbox to enable unencrypted HTTP connections for REST API. |
| Address | <p>Provides addresses for the incoming connections for HTTP of REST API.</p> <p>To add the address:</p> <ol style="list-style-type: none"> 1. Click + icon. <p>The Add Address page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the IPv4 address. 3. Click OK. |
| HTTP Port | Select the HTTP port. Provides port to accept HTTP connections for REST API. The range is from 1024 through 65535. |
| HTTPS | Select the checkbox to enable encrypted HTTPS connections for REST API. |

Table 92: Basic Setup (*Continued*)

| Setting | Guideline |
|------------------------|---|
| Address | <p>Provides addresses for the incoming connections for HTTPS of REST API.</p> <p>To add the address:</p> <ol style="list-style-type: none"> 1. Click + icon. <p>The Add Address page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the IPv4 address. 3. Click OK. |
| HTTPS Port | Select the port to accept the HTTPS connection of REST API. The range is 1024 through 65535. |
| Cipher List | <p>Select the Cipher suites in order of your preference and click the right arrow to add.</p> <p>Provides the Cipher suites for HTTPS of REST API.</p> |
| Server Certificate | Select the server certificate for HTTPS of REST API. |
| Certificate | <p>Specifies the certificate name to secure HTTPS connections.</p> <p>To add a local certificate:</p> <ol style="list-style-type: none"> 1. Click the + icon. <p>The Add Local Certificate page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the name and certificate content. 3. Click OK. <p>Select the certificate and click pencil icon to edit the certificate. Click the delete icon to delete the certificate.</p> |
| System Services | |
| FTP File Transfers | Select the checkbox to allow FTP file transfers to and from the device. |

Table 92: Basic Setup (Continued)

| Setting | Guideline |
|-------------------|---|
| SSH Access | Select the checkbox to allow SSH access to the device. |
| Telnet Login | Select the checkbox to allow telnet access to the device. |
| NetConf Session | Select the checkbox to enable network configuration protocol connections. |
| RFC Complaint | Select the checkbox to enable the network configuration protocol sessions compliant to RFC 4741. |
| NetConf -> SSH | Select the checkbox to enable network configuration protocol connections over SSH connections. |
| HTTP Services | Select the checkbox to enable unencrypted HTTP connection settings. |
| HTTP Port | Select the TCP port for incoming HTTPS connections. The range is 1 through 65535. |
| Interface | Select interfaces that accept http access. |
| HTTPS Services | Select the checkbox to enable encrypted HTTPS connection settings. |
| Interface | Select interfaces that accept https access. |
| HTTPS Certificate | <p>Select the certificate that you want to use to secure the connection from the HTTPS certificates list.</p> <p>This is applicable only if you allow HTTPS Services.</p> <ul style="list-style-type: none"> • local-certificate—Specifies the name of the local certificate to use. • pki-local-certificate—Specifies the name of the certificate that is generated by public key infrastructure (PKI). • system-generated-certificate—Specifies the automatically generated self-signed certificate for enabling HTTPS services. |

Table 92: Basic Setup (Continued)

| Setting | Guideline |
|---------------------|--|
| HTTPS Port | Select the TCP port for incoming HTTPS connections. The range is from 1 through 65535. This is applicable only if you allow HTTPS Services. |
| SNMP | |
| Location | Enter the location information where the device is physically located such as a lab name or a rack name. |
| Contact Information | Enter the contact information such as name and phone number of an administrator of the system. |
| System Description | Enter the description for the system. |
| Local Engine ID | Enter the MAC address of Ethernet management port 0. The local engine ID is unique identifier of an SNMPv3 engine for system identification. The local engine ID contains a prefix and a suffix. The prefix is formatted according to specifications defined in RFC 3411. The suffix is defined by the local engine ID. The local engine ID suffix is the MAC address of Ethernet management port 0. |

Table 92: Basic Setup (*Continued*)

| Setting | Guideline |
|-----------|--|
| Community | <p>Existing SNMP communities are displayed in a table with the name and authorization for each community. You can perform the following actions:</p> <ul style="list-style-type: none"> • Add an SNMP community: <ol style="list-style-type: none"> 1. Click + to add an SNMP community on the device. The Add SNMP Community page appears. 2. Specify the following fields: <ul style="list-style-type: none"> • Name—Specify the name of the SNMP community string. • Authorization—Select the authorization for the SNMP community. If you select read-only, the user can read the information from the device by using the SNMP GET command. If you select read-write, in addition to reading the information, the user can also modify the configuration on the device using the SNMP SET command. 3. Click OK. If the fields entered are valid, an SNMP community is created and a confirmation message is displayed at the top of the Modify Configuration page. • Modify an SNMP community—Select an SNMP community and click the pencil icon to modify the settings. The Edit SNMP Community page appears, showing the same fields that are presented when you create an SNMP community. You can modify some of the fields on this page. See the preceding bullet for an explanation of the fields. • Delete SNMP community entries—Select one or more SNMP community entries and click the X icon to delete the communities. The Warning page appears. Click Yes to confirm the deletion. The selected SNMP communities are deleted. |

Table 92: Basic Setup (Continued)

| Setting | Guideline |
|------------|---|
| Trap Group | <p>Existing SNMP trap groups are displayed in a table with the name and category for each trap group. You can perform the following actions:</p> <ul style="list-style-type: none"> • Add an SNMP trap group <ol style="list-style-type: none"> 1. Click + to add an SNMP trap group on the device. The Add SNMP Trap Group page appears. 2. In the Name field, specify the name of the SNMP trap group. 3. Select the SNMP trap types or categories to be associated with the trap group. 4. Click OK. If the fields entered are valid, an SNMP trap group is created and a confirmation message is displayed at the top of the Modify Configuration page. • Modify an SNMP trap group—Select an SNMP trap group and click the pencil icon to modify the settings. The Edit SNMP Trap Group page appears, showing the same fields that are presented when you create an SNMP trap group. You can modify some of the fields on this page. See the preceding bullet for an explanation of the fields. • Delete SNMP trap groups—Select one or more trap groups and click the X icon to delete the trap groups. The Warning page appears. Click Yes to confirm the deletion. The selected SNMP trap group are deleted. |

Table 92: Basic Setup (*Continued*)

| Setting | Guideline |
|-------------------|--|
| Health Monitoring | <p>Select the checkbox to enable the SNMP health monitor on the device. The health monitor periodically checks the following key indicators of device health:</p> <ul style="list-style-type: none"> • Percentage of file storage used • Percentage of Routing Engine CPU used • Percentage of Routing Engine memory used • Percentage of memory used for each system process • Percentage of CPU used by the forwarding process • Percentage of memory used for temporary storage by the forwarding process |
| Interval | <p>Select an interval to specify the sampling frequency interval, in seconds, over which the key health indicators are sampled and compared with the rising and falling thresholds. For example, if you configure the interval as 100 seconds, the values are checked every 100 seconds.</p> <p>The range is from 1 through 24855. The default value is 300 seconds.</p> |
| Rising Threshold | <p>Select a value at which you want SNMP to generate an event (trap and system log message) when the value of a sampled indicator reaches or exceeds the rising threshold value. For example, if the rising threshold is 90, SNMP generates an event when the value of any key indicator reaches or exceeds 90 seconds.</p> <p>The range is from 1 through 100. The default value is 90 seconds.</p> |
| Falling Threshold | <p>Select a value at which you want SNMP to generate an event (trap and system log message) when the value of a sampled indicator reaches or falls below the falling threshold value. For example, if the falling threshold is 80, SNMP generates an event when the value of any key indicator is 80 seconds or less.</p> <p>The range is from 0 through 100. The default value is 80 seconds.</p> |

Table 93: Add NTP Server Settings

| Setting | Guideline |
|------------------|---|
| Name | Specify the name or IP address of the remote NTP server. |
| Key | Specify the key number used to encrypt authentication fields in all packets sent to the NTP server. |
| Version | Specify the version number used in outgoing NTP server packets. |
| Prefer | Specify the NTP server as the preferred server if you configured more than one. |
| Routing Instance | Enter the routing instance through which the server is reachable. |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Static Routes Configuration for Security Devices

You can use the Static Routes section on the Modify Configuration page to view, create, edit, or delete static routes on the device. You can activate or deactivate a static route or toggle the status of one or more static routes.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the static routes configuration:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices whose configuration you want to modify.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.

The Modify Configuration page appears.

4. Click the **Static Routes** link in the left-navigation menu.

The Static Routes section on the Modify Configuration page is displayed. The existing static routes are displayed in a table. The actions that you can perform in this page are provided in [Table 94 on page 277](#).

5. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 94: Static Routes Actions

| Action | Guideline |
|-----------------------|--|
| Create a static route | <p>Click the + icon to create a static route.</p> <p>The Create Static Route page appears. Complete the configuration according to the guidelines provided in Table 95 on page 278 and click OK.</p> <p>The static route is created and you are returned to the Static Routes section on the Modify Configuration page.</p> <p>NOTE: You must configure either a next hop or a next table for each static route that you configure.</p> |
| Modify a static route | <p>Select a static route and click the pencil icon.</p> <p>The Edit Static Route page appears, showing the same fields that are presented when you create a static route. You can modify some of the fields on this page. See Table 95 on page 278 for an explanation of the fields. After you have modified the static route, click OK.</p> <p>The changes are saved and you are returned to the Static Routes section on the Modify Configuration page.</p> |
| Delete static routes | <p>Select one or more static routes and click the X icon to delete the routes.</p> <p>The Warning page appears. Click Yes to confirm the deletion. The selected static routes are deleted.</p> |

Table 94: Static Routes Actions (*Continued*)

| Action | Guideline |
|-------------------------------------|--|
| Activate static routes | <p>Select one or more deactivated static routes. From the More or right-click menu, select Activate.</p> <p>The static routes are activated and their status is changed to Activated.</p> |
| Deactivate static routes | <p>Select one or more activated static routes. From the More or right-click menu, select Deactivate.</p> <p>The static routes are deactivated and their status is changed to Deactivated.</p> |
| Toggle the status of a static route | <p>Select one or more static routes. From the More or right-click menu, select Toggle.</p> <p>The activated static routes are deactivated and the deactivated static routes are activated.</p> <p>NOTE: The Toggle option is enabled only when the selected static routes are a mix of activated and deactivated records.</p> |

Table 95: Create Static Route Settings

| Setting | Guideline |
|--------------------------|---|
| <i>Basic Information</i> | |
| | Select the type of IP address (IPv4 or IPv6). |
| IP Address | Enter the IPv4 or IPv6 address depending on the type of IP address specified. |
| Subnet | Enter the subnet for the IPv4 address or the prefix for the IPv6 address. |
| <i>Next Hop</i> | |

Table 95: Create Static Route Settings *(Continued)*

| Setting | Guideline |
|---------------------------|---|
| Next Hop | <p>You can perform the following actions in this field:</p> <ul style="list-style-type: none">• Add a next hop—<ol style="list-style-type: none">1. Click + to add a next hop on the device. The Create Next Hop page appears.2. Complete the configuration according to the guidelines provided in Table 96 on page 281.3. Click OK. If the fields entered are valid, a next hop is created the entry is displayed in the table.• Modify next hop settings—Select a next hop and click the pencil icon to modify the settings. The Edit Next Hop page appears, showing the same fields that are presented when you create a next hop. See Table 96 on page 281 for an explanation of the fields.• Delete next hop entries—Select one or more next hops and click the X icon to delete the next hops. The Warning page appears. Click Yes to confirm the deletion. The selected next hop entries are deleted. |
| <i>Qualified Next Hop</i> | |

Table 95: Create Static Route Settings *(Continued)*

| Setting | Guideline |
|-------------------------|---|
| | <p>You can perform the following actions in this field:</p> <ul style="list-style-type: none">• Add a next hop—<ol style="list-style-type: none">1. Click + to add a qualified next hop on the device. The Create Qualified Next Hop page appears.2. Complete the configuration according to the guidelines provided in Table 97 on page 282.3. Click OK. If the fields entered are valid, a qualified next hop is created the entry is displayed in the table.• Modify qualified next hop settings—Select a qualified next hop and click the pencil icon to modify the settings. The Edit Qualified Next Hop page appears, showing the same fields that are presented when you create a qualified next hop. See Table 97 on page 282 for an explanation of the fields.• Delete qualified next hop entries—Select one or more qualified next hops and click the X icon to delete the qualified next hops. The Warning page appears. Click Yes to confirm the deletion. The selected qualified next hop entries are deleted. |
| <i>Next Table</i> | |
| Next Table | Select the name of next routing table to the destination. |
| <i>Advanced Options</i> | |
| Preference | <p>Enter a preference for the next hop; the lower the number the higher the route preference.</p> <p>Range: 0 through 2,147,483,647</p> |

Table 95: Create Static Route Settings *(Continued)*

| Setting | Guideline |
|---------------------|--|
| Metric | Enter a metric value, which signifies the cost for an access route, for the next hop. Range: 0 through 2,147,483,647 |
| Discard | Specify that packets addressed to this destination are dropped and ICMP (or ICMPv6) unreachable messages are not sent to the originator of the packet. |
| Resolve Choices | Specify whether indirectly-connected next hops should be resolved (Resolve) or not (No Resolve). Select None if no action is required. |
| Retain Choices | Specify whether the route should be deleted from the forwarding table (No Retain) or retained (Retain) when the routing protocol process shuts down normally. Select None if no action is required. |
| Install Choices | Specify whether the route should be installed in the forwarding table or not. Select None if no action is required. |
| Readvertise Choices | Specify whether the route should be readvertised by routing protocols or not. Select None if no action is required. |

Table 96: Create Next Hop Settings

| Setting | Guideline |
|------------|--|
| | Specify the next hop as an IP address or an interface name. |
| IP Address | Enter an IPv4 or IPv6 address for the next hop depending on the type of IP address specified for the static route. |
| Interface | Select the interface name to be used as the next hop. |

Table 97: Create Qualified Next Hop Settings

| Setting | Guideline |
|------------|--|
| | Specify the qualified next hop as an IP address or an interface name. |
| IP Address | Enter an IPv4 or IPv6 address for the qualified next hop depending on the type of IP address specified for the static route. |
| Interface | Select the interface name to be used as the qualified next hop. |
| Preference | Enter a preference for the qualified next hop; the lower the number the higher the route preference. Range: 0 through 2,147,483,647 |
| Metric | Enter a metric value, which signifies the cost for an access route, for the qualified next hop. Range: 0 through 2,147,483,647 |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Routing Instances Configuration for Security Devices

You can use the Routing Instances section on the Modify Configuration page to view, create, edit, or delete routing instances on the device. You can activate or deactivate a routing instance or toggle the status of one or more routing instances.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-

[pages/junos/product/](#)) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the routing instances configuration:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select the devices whose configuration you want to modify.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.
The Modify Configuration page appears.
4. Click the **Routing Instances** link in the left-navigation menu.
The Routing Instances section on the Modify Configuration page is displayed. The existing routing instances are displayed in a table. The actions that you can perform in this page are provided in [Table 98 on page 283](#).
5. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 98: Routing Instances Actions

| Action | Guideline |
|---------------------------|--|
| Create a routing instance | <p>NOTE: For tenant systems, new routing instance cannot be created.</p> <p>Click the + icon to create a routing instance.</p> <p>The Create Routing Instance page appears. Complete the configuration according to the guidelines provided in Table 99 on page 285 and click OK.</p> <p>The routing instance is created and you are returned to the Routing Instances section on the Modify Configuration page.</p> |
| Modify a routing instance | <p>Select a routing instance and click the pencil icon.</p> <p>The Edit Routing Instance page appears, showing the same fields that are presented when you create a routing instance. You can modify some of the fields on this page. See Table 99 on page 285 for an explanation of the fields. After you have modified the routing instance, click OK.</p> <p>The changes are saved and you are returned to the Routing Instances section on the Modify Configuration page.</p> |

Table 98: Routing Instances Actions (*Continued*)

| Action | Guideline |
|--|--|
| Delete routing instances | <p>Select one or more routing instances and click the X icon to delete the routes.</p> <p>The Warning page appears. Click Yes to confirm the deletion. The selected routing instances are deleted.</p> |
| View or configure static routes for an existing routing instance | <p>View or configure static routes for the routing instance by clicking the view/configure link in the Static Route column. The Static Routes page appears. The field and actions on this page are the same as the ones in the Static Routes section on the Modify Configuration page. See "Modifying the Static Routes Configuration for Security Devices" on page 276.</p> |
| Activate routing instances | <p>Select one or more deactivated routing instances. From the More or right-click menu, select Activate.</p> <p>The routing instances are activated and their status is changed to Activated.</p> |
| Deactivate routing instances | <p>Select one or more activated routing instances. From the More or right-click menu, select Deactivate.</p> <p>The routing instances are deactivated and their status is changed to Deactivated.</p> |
| Toggle the status of a routing instance | <p>Select one or more routing instances. From the More or right-click menu, select Toggle.</p> <p>The activated routing instances are deactivated and the deactivated routing instances are activated.</p> <p>NOTE: The Toggle option is enabled only when the selected routing instances are a mix of activated and deactivated records.</p> |



NOTE: For tenant systems, new routing instance cannot be created.

Table 99: Create Routing Instance Settings

| Setting | Guideline |
|-------------|---|
| Name | Enter a name for the routing instance; no special characters are allowed and the keyword <i>default</i> cannot be used. The routing instance name must be unique and must contain a corresponding IP unicast table. |
| Description | Enter a description for the routing instance. We recommend that you enter a maximum of 255 characters. |
| Interfaces | From the interfaces displayed in the Available column, select one or more interfaces to associate with the routing instance. |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Physical Interfaces Configuration for Security Devices

You can use the Physical Interfaces section on the Modify Configuration page to view and modify physical interfaces on the device. You can also view, add, modify, or delete logical interfaces associated with the physical interfaces.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify physical interfaces:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices to modify configuration.

- 3. From the More or right-click menu, select **Configuration > Modify Configuration**.
The Modify Configuration page appears.
- 4. Click **Physical Interfaces** in the left-navigation menu.
The Physical Interfaces section on the Modify Configuration page is displayed. The existing physical interfaces are displayed in a table. The actions that you can perform in this page are provided in [Table 100 on page 286](#).
- 5. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See "[Modifying the Configuration of Security Devices](#)" on page 261.

Table 100: Physical Interfaces Actions

| Action | Guideline |
|-----------------------------|--|
| Modify a physical interface | <p>Select a physical interface and click the pencil icon.</p> <p>The Edit Physical Interface page appears. You can modify some of the fields on this page. See Table 101 on page 288 for an explanation of the fields. After you have modified the physical interface, click OK.</p> <p>The changes are saved and you are returned to the Physical Interfaces section on the Modify Configuration page.</p> |

Table 100: Physical Interfaces Actions *(Continued)*

| Action | Guideline |
|---|---|
| View or configure the logical interfaces associated with a physical interface | <p>View or configure the logical interfaces associated with a physical interface by clicking the View/Configure link in the Logical Interfaces column.</p> <p>The Logical Interfaces page appears, displaying the list of logical interfaces associated with the physical interface. You can perform the following actions on this page:</p> <ul style="list-style-type: none"> • Create a logical interface—Click the + icon to create a logical interface. <p>The Create Logical interface page appears. Complete the configuration according to the guidelines provided in Table 102 on page 288 and click OK.</p> <p>The logical interface is created and you are returned to the Logical Interfaces page.</p> • Modify a logical interface—Select a logical interface and click the pencil icon to modify the settings. <p>The Edit Logical Interface page appears, showing the same fields that are presented when you create an logical interface. You can modify some of the fields on this page. See Table 102 on page 288 for an explanation of the fields.</p> <p>After you have modified the logical interface, click OK. The changes are saved and you are returned to the Logical Interfaces page.</p> • Delete logical interfaces—Select one or more logical interfaces and click the X icon to delete the logical interfaces. <p>The Warning page appears. Click Yes to confirm the deletion. The selected logical interfaces are deleted.</p> • Activate logical interfaces—Select one or more deactivated logical interfaces. From the More or right-click menu, select Activate. <p>The logical interfaces are activated and their status is changed to Activated.</p> • Deactivate logical interfaces—Select one or more activated logical interfaces. From the More or right-click menu, select Deactivate. <p>The logical interfaces are deactivated and their status is changed to Deactivated.</p> • Toggle the status of a logical interface—Select one or more logical interfaces. From the More or right-click menu, select Toggle. <p>The activated logical interfaces are deactivated and the deactivated logical interfaces are activated.</p> |

Table 101: Edit Physical Interface Settings

| Setting | Guideline |
|--------------------------|--|
| <i>Basic Information</i> | |
| Description | Enter the description of the physical interface. We recommend that you enter a maximum of 255 characters. |
| MTU | Specify the maximum transmission unit (MTU) on the physical interface. Range: 256 through 9216 |
| Speed | Select the speed (in MBps) at which the data transfer occurs in the interface. |
| <i>Advanced Options</i> | |
| Enable VLAN Tagging | Select this check box to enable VLAN tagging for the physical interface or clear the check box to disable VLAN tagging for the physical interface. |

Table 102: Create Logical Interface Settings

| Setting | Guideline |
|--------------------------|--|
| <i>Basic Information</i> | |
| Name | Enter the name of the logical interface, which must be a number from 0 through 2,147,483,647. |
| Description | Enter the description of the logical interface. We recommend that you enter a maximum of 255 characters. |
| VLAN ID | Enter the VLAN ID for the 802.1q VLAN tags. Range: 0 through 4096. |
| <i>IPv4 Address</i> | |

Table 102: Create Logical Interface Settings *(Continued)*

| Setting | Guideline |
|---------|--|
| | <p>You can do the following:</p> <ul style="list-style-type: none">• Add an IPv4 Address—Click the + icon to add an IPv4 address for the logical interface. The Add—Address (IPv4) page appears. Complete the configuration according to the guidelines provided in Table 103 on page 290 and click OK. The IPv4 address is added and you are returned to the Create Logical Interface page.• Modify an IPv4 address—Select an IPv4 address and click the pencil icon to modify the IPv4 address. The Edit—Address (IPv4) page appears, showing the same fields that are presented when you add an IPv4 address. You can modify some of the fields on this page. See Table 103 on page 290 for an explanation of the fields. After you have modified the IPv4 address entry, click OK. The changes are saved and you are returned to the Create Logical Interface page.• Delete IPv4 addresses—Select one or more IPv4 addresses and click the X icon to delete the IPv4 addresses. The Confirm Delete page appears. Click Yes to confirm the deletion. The selected IPv4 addresses are deleted. |

IPv6 Addresses

Table 102: Create Logical Interface Settings *(Continued)*

| Setting | Guideline |
|---------|--|
| | <p>You can do the following:</p> <ul style="list-style-type: none"> • Add an IPv6 Address—Click the + icon to add an IPv6 address for the logical interface. <p>The Add—Address (IPv6) page appears. Complete the configuration according to the guidelines provided in Table 104 on page 291 and click OK.</p> <p>The IPv6 address is added and you are returned to the Create Logical Interface page.</p> • Modify an IPv6 address—Select an IPv6 address and click the pencil icon to modify the IPv6 address. <p>The Edit—Address (IPv6) page appears, showing the same fields that are presented when you add an IPv6 address. You can modify some of the fields on this page. See Table 104 on page 291 for an explanation of the fields.</p> <p>After you have modified the IPv6 address entry, click OK. The changes are saved and you are returned to the Create Logical Interface page.</p> • Delete IPv6 addresses—Select one or more IPv6 addresses and click the X icon to delete the IPv6 addresses. <p>The Confirm Delete page appears. Click Yes to confirm the deletion. The selected IPv6 addresses are deleted.</p> |

Table 103: Add – Address (IPv4) Settings

| Setting | Guideline |
|------------|--|
| IP Address | Enter an IPv4 address for the logical interface. |
| Subnet | Enter the subnet for the IPv4 address. |
| Primary | Select this check box to specify that the IPv4 address is the primary address of the protocol on the logical interface. If the logical unit has more than one IP address, the primary IP address is used by default as the source address when packet transfer originates from the interface and the destination address does not indicate the subnet. |

Table 103: Add – Address (IPv4) Settings *(Continued)*

| Setting | Guideline |
|-----------|--|
| Preferred | Select this check box to specify that the IPv4 address is the preferred address for the logical interface. If you configure more than one IP address on the same subnet, the preferred source address is chosen by default as the source address when you initiate frame transfers to destinations on the subnet |

Table 104: Add – Address (IPv6) Settings

| Setting | Guideline |
|------------|--|
| IP Address | Enter an IPv6 address for the logical interface. |
| Subnet | Enter the subnet for the IPv6 address. Range: 0 through 128 |
| Primary | Select this check box to specify that the IPv6 address is the primary address of the protocol on the logical interface. If the logical unit has more than one IP address, the primary IP address is used by default as the source address when packet transfer originates from the interface and the destination address does not indicate the subnet. |
| Preferred | Select this check box to specify that the IPv6 address is the preferred address for the logical interface. If you configure more than one IP address on the same subnet, the preferred source address is chosen by default as the source address when you initiate frame transfers to destinations on the subnet |

RELATED DOCUMENTATION
[Modifying the Configuration of Security Devices | 261](#)
[Using Features in Security Devices | 237](#)
[Security Devices Overview | 240](#)

Modifying the Syslog Configuration for Security Devices

You can use the Syslog section on the Modify Configuration page to view and modify the parameters related to system logging on the device.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the system log parameters:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select the devices whose configuration you want to modify.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.
The Modify Configuration page appears.
4. Click the **Syslog** link in the left-navigation menu.
The Syslog section on the Modify Configuration page is displayed.
5. Modify the configuration according to the guidelines provided in [Table 105 on page 292](#).
6. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See "[Modifying the Configuration of Security Devices](#)" on page 261.

Table 105: Syslog Settings

| Setting | Guideline |
|-------------------------|--|
| <i>General Settings</i> | |
| Time Format | <p>Specify whether the time format should be included in system log messages generated for the device. By default, the timestamp specifies the month, day, hour, minute, and second at which the message was logged.</p> <p>If you select Enable, you can specify whether the milliseconds are included in the timestamp, the year is included in the timestamp, or both the milliseconds and the year are included in the timestamp.</p> |

Table 105: Syslog Settings *(Continued)*

| Setting | Guideline |
|------------------------|---|
| Source Address | Specify the IPv4 or IPv6 address to be used as the source address that is included in system log messages. |
| Log Rotation Frequency | Configure the time interval (in minutes) at which Junos Space checks for the system log file size. When the log file size exceeds the previously specified size limit, the log file is archived and a new log file is created. The range is 1 through 59 and the default is 15 minutes. |
| Allow Duplicates | Select this check box if you do not want to suppress syslog messages that were logged earlier. This check box is cleared by default. |

Host Configuration

Table 105: Syslog Settings *(Continued)*

| Setting | Guideline |
|---------|--|
| | <p>The existing host configuration entries are displayed in a table. You can do the following:</p> <ul style="list-style-type: none"> • Create a host configuration: <ol style="list-style-type: none"> 1. Click the + icon to create a host configuration <p>The Create Host Configuration page appears.</p> <ol style="list-style-type: none"> 2. Complete the configuration according to the guidelines provided in Table 106 on page 296. 3. Click OK. <p>The host is created and you are returned to the Modify Configuration page.</p> • Modify a host configuration—Select a host configuration and click the pencil icon to modify the settings. <p>The Edit Host Configuration page appears, showing the same fields that are presented when you create a host configuration. You can modify some of the fields on this page. Refer to Table 106 on page 296 for an explanation of the fields.</p> <p>After you have modified the host configuration, click OK.</p> <p>The changes are saved and you are returned to the Modify Configuration page.</p> • Delete host configurations—Select one or more host configurations and click the X icon to delete the host configurations. <p>The Warning page appears. Click Yes to confirm the deletion. The selected host configurations are deleted.</p> |

Table 105: Syslog Settings *(Continued)*

| Setting | Guideline |
|---------|--|
| | <p>The existing file configuration entries are displayed in a table. You can do the following:</p> <ul style="list-style-type: none">• Create a file configuration:<ol style="list-style-type: none">1. Click the + icon to create a file configuration.<p>The Create File Configuration page appears.</p>2. Complete the configuration according to the guidelines provided in Table 107 on page 298.3. Click OK.<p>The file is created and you are returned to the Modify Configuration page.</p>• Modify a file configuration—Select a file configuration and click the pencil icon to modify the settings.<p>The Edit File Configuration page appears, showing the same fields that are presented when you create a file configuration. You can modify some of the fields on this page. Refer to Table 107 on page 298 for an explanation of the fields.</p><p>After you have modified the file configuration, click OK.</p><p>The changes are saved and you are returned to the Modify Configuration page.</p>• Delete file configurations—Select one or more file configurations and click the X icon to delete the file configurations.<p>The Warning page appears. Click Yes to confirm the deletion. The selected file configurations are deleted.</p> |

Table 105: Syslog Settings *(Continued)*

| Setting | Guideline |
|---------|---|
| | <p>The existing user configuration entries are displayed in a table. You can do the following:</p> <ul style="list-style-type: none"> • Create a user configuration: <ol style="list-style-type: none"> 1. Click the + icon to create a user configuration <p>The Create User Configuration page appears.</p> <ol style="list-style-type: none"> 2. Complete the configuration according to the guidelines provided in Table 108 on page 300. 3. Click OK. <p>The user configuration is created and you are returned to the Modify Configuration page.</p> • Modify a user configuration—Select a user configuration and click the pencil icon to modify the settings. <p>The Edit User Configuration page appears, showing the same fields that are presented when you create a file configuration. You can modify some of the fields on this page. Refer to Table 108 on page 300 for an explanation of the fields.</p> <p>After you have modified the user configuration, click OK.</p> <p>The changes are saved and you are returned to the Modify Configuration page.</p> <ul style="list-style-type: none"> • Delete user configurations—Select one or more user configurations and click the X icon to delete the user configurations. <p>The Warning page appears. Click Yes to confirm the deletion. The selected user configurations are deleted.</p> |

Table 106: Create Host Configuration Settings

| Setting | Guideline |
|---------|--|
| Name | Select the name of the host to be notified when the system log matches the condition specified. |
| Match | Enter a regular expression up to a maximum of 255 characters that must appear or must not appear in a message for the messages to be logged to a host. |

Table 106: Create Host Configuration Settings *(Continued)*

| Setting | Guideline |
|-------------------------|--|
| <i>Contents</i> | |
| | <p>The table displays the existing facility and severity configured for system log messages. You can perform the following actions:</p> <ul style="list-style-type: none"> Click the + icon to configure the facility and severity levels of messages to be logged in the remote destination. <p>The Create Contents page appears.</p> <p>Complete the configuration according to the guidelines provided in Table 109 on page 302 and click OK.</p> <p>The system log message's facility and severity levels are created and you are returned to the Create Host Configuration page.</p> <ul style="list-style-type: none"> Select an entry and click the pencil icon to modify the facility and severity levels of messages to be logged in the remote destination. <p>The Edit Contents page appears showing the same fields that are presented when you configure the facility and severity levels of messages to be logged in the remote destination. Refer to Table 109 on page 302 for an explanation of the fields.</p> <p>After you have modified the system log message's facility and severity levels that are associated with the host, click OK.</p> <p>The changes are saved and you are returned to the Create Host Configuration page.</p> <ul style="list-style-type: none"> Select one or more configured facility and severity levels, and click the X icon to delete the entries. <p>The Warning page appears. Click Yes to confirm the deletion. The selected facility and severity levels are deleted.</p> |
| <i>Advanced Options</i> | |
| Allow Duplicates | Select this check box if you want to allow repeated messages in the system log output. By default, this check box is cleared, which means that repeated messages are not logged in the output. |

Table 106: Create Host Configuration Settings (Continued)

| Setting | Guideline |
|-------------------|---|
| Explicit Priority | Select this check box to include the priority, which is a combination of the facility and severity, in syslog messages. |
| Facility Override | Specify an alternative facility that will replace the default facility used when messages are directed to a remote destination. For more information, see the http://www.juniper.net/documentation/en_US/junos/topics/reference/general/syslog-facilities-remote-logging.html topic. |
| Log Prefix | Specify the prefix to be used for all syslog messages for the specified host. |
| Source Address | Specify the IPv4 or IPv6 address to be used as the source address that is included in system log messages for the host. |
| Port | Specify the port number for the remote syslog folder. The range is 0 through 65,535 and the default is 514. |
| Structured Data | Select this check box to log messages to a file in structured-data format instead of the standard Junos OS format. The structured-data format complies with IETF RFC 5424. By default, this check box is selected. Select the Brief check box to suppress the English language text that appears by default at the end of a message to describe the error or event. By default this check box is cleared. |

Table 107: Create File Configuration Settings

| Setting | Guideline |
|---------|---|
| Name | Enter the name of the file in which the data should be logged. The filename must not contain spaces, and it can contain some special characters (\$ ^ < > @ # ! * - = _ .). |
| Match | Enter a regular expression up to a maximum of 255 characters that must appear or must not appear in a message for the messages to be logged to a file. |

Contents

Table 107: Create File Configuration Settings *(Continued)*

| Setting | Guideline |
|-------------------------|--|
| | <p>The table displays the existing facility and severity configured for system log messages. You can perform the following actions:</p> <ul style="list-style-type: none"> Click the + icon to configure the facility and severity levels of messages to be logged in the remote destination. <p>The Create Contents page appears.</p> <p>Complete the configuration according to the guidelines provided in Table 109 on page 302 and click OK.</p> <p>The system log message's facility and severity levels are created and you are returned to the Create File Configuration page.</p> <ul style="list-style-type: none"> Select an entry and click the pencil icon to modify the facility and severity levels of messages to be logged in the remote destination. <p>The Edit Contents page appears showing the same fields that are presented when you configure the facility and severity levels of messages to be logged in the remote destination. Refer to Table 109 on page 302 for an explanation of the fields.</p> <p>After you have modified the system log message's facility and severity levels that are associated with the file, click OK.</p> <p>The changes are saved and you are returned to the Create File Configuration page.</p> <ul style="list-style-type: none"> Select one or more configured facility and severity levels, and click the X icon to delete the entries. <p>The Warning page appears. Click Yes to confirm the deletion. The selected facility and severity levels are deleted.</p> |
| <i>Advanced Options</i> | |
| Explicit Priority | Select this check box to include the priority, which is a combination of the facility and severity, in syslog messages. |

Table 107: Create File Configuration Settings *(Continued)*

| Setting | Guideline |
|-----------------|--|
| Structured Data | <p>Select this check box to log messages to a file in structured-data format instead of the standard Junos OS format. The structured-data format complies with IETF RFC 5424. By default, this check box is selected.</p> <p>Select the Brief check box to suppress the English language text that appears by default at the end of a message to describe the error or event. By default this check box is cleared.</p> |

Table 108: Create User Configuration Settings

| Setting | Guideline |
|---------|--|
| Name | Enter the Junos OS username of the user whose terminal session is to receive system log messages. The username must not contain spaces, and it can contain some special characters (_ .). |
| Match | Enter a regular expression up to a maximum of 255 characters that must appear or must not appear in a message for the messages to be logged to a user terminal. |

Contents

Table 108: Create User Configuration Settings (Continued)

| Setting | Guideline |
|-------------------------|--|
| | <p>The table displays the existing facility and severity configured for system log messages. You can perform the following actions:</p> <ul style="list-style-type: none"> Click the + icon to configure the facility and severity levels of messages to be logged in the remote destination. <p>The Create Contents page appears.</p> <p>Complete the configuration according to the guidelines provided in Table 109 on page 302 and click OK.</p> <p>The system log message's facility and severity levels are created and you are returned to the Create User Configuration page.</p> <ul style="list-style-type: none"> Select an entry and click the pencil icon to modify the facility and severity levels of messages to be logged in the remote destination. <p>The Edit Contents page appears showing the same fields that are presented when you configure the facility and severity levels of messages to be logged in the remote destination. Refer to Table 109 on page 302 for an explanation of the fields.</p> <p>After you have modified the system log message's facility and severity levels that are associated with the user, click OK.</p> <p>The changes are saved and you are returned to the Create User Configuration page.</p> <ul style="list-style-type: none"> Select one or more configured facility and severity levels, and click the X icon to delete the entries. <p>The Warning page appears. Click Yes to confirm the deletion. The selected facility and severity levels are deleted.</p> |
| <i>Advanced Options</i> | |
| Allow Duplicates | <p>Select this check box if you want to allow repeated messages in the system log output. By default, this check box is cleared, which means that repeated messages are not logged in the output.</p> |

Table 109: Create Contents Settings

| Setting | Guideline |
|----------|---|
| Facility | Select the facility to which the system log message belongs. Each system log message belongs to a facility, which categorizes messages based on the source by which they are generated, such as a software process, or that relate to a similar condition or activity, such as authentication attempts. |
| Severity | Select the severity level for the system log message. Each system message is pre-assigned a severity level, which indicates how seriously the triggering event affects routing platform functions. When you configure logging for a facility and destination, you specify a severity level for each facility. |

After you've configured the Syslogs on the SRX Series devices, Security Director can receive those logs.

For adding Log Collector as a special node using Security Director Log Collector, click [here](#).

For adding Log Collector as a special node using JSA Log Collector, click [here](#).

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Security Logging Configuration for Security Devices

You can use the Security Logging section on the Modify Configuration page to view and modify the parameters related to security logging on the device.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the security logging parameters:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices whose configuration you want to modify.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.
The Modify Configuration page appears.
4. Click the **Security Logging** link in the left-navigation menu.
The Security Logging section on the Modify Configuration page is displayed.
5. Modify the configuration according to the guidelines provided in [Table 110 on page 303](#).
6. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 110: Security Logging Settings

| Setting | Guideline |
|-------------------------------------|--|
| <i>General Settings</i> | |
| Mode | <p>Select how security logs are processed and exported:</p> <ul style="list-style-type: none"> • Stream—Specify that security logs are processed directly in the forwarding plane. • Event—Specify that security logs are processed directly in the control plane. |
| Source Type | Select the source type as Address or Interface. |
| Source Address/ Source Interface | <p>If the Source Type is Address, specify the IPv4 or IPv6 address to be used as the source address when exporting security logs.</p> <p>If the Source Type is Interface, specify the interface to be used as the source interface when exporting security logs.</p> |
| Format | <p>Specify the security log format for the device:</p> <ul style="list-style-type: none"> • Syslog—Unstructured Junos OS system logs. • Sd-syslog—Structured Junos OS system logs. • Binary—Non-ASCII (binary) Junos OS system logs. |
| Disable Logging | Select this check box to disable security logging for the device. This check box is cleared by default. |

Table 110: Security Logging Settings (*Continued*)

| Setting | Guideline |
|---------------|---|
| UTC Timestamp | Select this check box to include the UTC timestamp in the security logs. This check box is cleared by default. |
| Event Rate | For the event mode, specify the rate (in logs per second) at which event logs are processed by the control plane. Range: 1 through 1500. |
| <i>Stream</i> | |
| | <p>The existing stream configuration entries are displayed in a table. You can do the following:</p> <ul style="list-style-type: none"> • Create a stream configuration—Click the + icon to create a stream configuration. The Create Stream Configuration page appears. Complete the configuration according to the guidelines provided in Table 111 on page 306 and click OK. The stream configuration is created and you are returned to the Security Logging page. • Modify a stream configuration—Select a stream configuration and click the pencil icon The Edit Stream configuration page appears, showing the same fields that are presented when you create a stream configuration. You can modify some of the fields on this page. Refer to Table 111 on page 306 for an explanation of the fields. After you have modified the stream configuration, click OK. The changes are saved and you are returned to the Security Logging page. • Delete stream configurations—Select one or more stream configurations and click the X icon to delete the stream configurations. The Warning page appears. Click Yes to confirm the deletion. The selected stream configurations are deleted. |
| <i>File</i> | |
| File Name | Specify the filename for the binary log file. |
| File Path | Specify the file path for the binary log file. |

Table 110: Security Logging Settings (*Continued*)

| Setting | Guideline |
|----------------------|--|
| File Size | Specify the maximum size (in MB) of the binary log file. Range: 1 through 10. |
| Maximum No. of Files | Specify the maximum number of binary log files. Range: 2 through 10. |
| <i>Cache</i> | |
| Limit | Specify the maximum number of security log entries to keep in memory. The range is 1 through 4,294,967,295 and the default is 1000. |
| Exclude | <p>The existing exclude configuration entries are displayed in a table. An exclude configuration is a list of auditable events that can be excluded from the audit log. You can do the following:</p> <ul style="list-style-type: none"> • Create an exclude configuration—Click the + icon to create an exclude configuration. The Create Exclude Configuration page appears. Complete the configuration according to the guidelines provided in Table 112 on page 306 and click OK. The exclude configuration is created and you are returned to the Security Logging page. • Modify an exclude configuration—Select an exclude configuration and click the pencil icon. The Edit Exclude Configuration page appears, showing the same fields that are presented when you create an exclude configuration. You can modify some of the fields on this page. Refer to Table 112 on page 306 for an explanation of the fields. After you have modified the exclude configuration, click OK. The changes are saved and you are returned to the Security Logging page. • Delete exclude configurations—Select one or more exclude configurations and click the X icon to delete the exclude configurations. The Warning page appears. Click Yes to confirm the deletion. The selected exclude configurations are deleted. |

Table 111: Create Stream Configuration Settings

| Setting | Guideline |
|----------|--|
| Name | Enter the name of the security log stream, which should be a string containing alphanumeric characters and some special characters (_.). |
| Host | Specify the IPv4 or IPv6 address of the server to which the security logs will be streamed. |
| Port | Enter the port number for the system log listening port. The range is 0 through 65,535 and the default is 514. |
| Severity | Select the severity threshold for security logs. Only the logs with the specified severity threshold are logged. |
| Category | Select the category of events to be logged. |
| Format | Specify the format of the security log for the device: <ul style="list-style-type: none"> • Syslog-Unstructured Junos OS system logs. • Sd-syslog-Structured Junos OS system logs. • welf-Web Trends Extended Log Format. |

Table 112: Create Exclude Configuration Settings

| Setting | Guideline |
|----------------------------|--|
| Name | Specify the name of the exclude configuration. |
| <i>Destination Filters</i> | |
| IP Address | Specify the destination IPv4 or IPv6 address from which security alarms are not included in the audit log. |

Table 112: Create Exclude Configuration Settings (Continued)

| Setting | Guideline |
|-----------------------|--|
| Port | Specify the destination port number from which security alarms are not included in the audit log. The range is 0 through 4,294,967,295. |
| <i>Source Filters</i> | |
| IP Address | Specify the source IPv4 or IPv6 address from which security alarms are not included in the audit log. |
| Port | Specify the source port number from which security alarms are not included in the audit log. The range is 0 through 4,294,967,295. |
| <i>Other Filters</i> | |
| Event ID | Enter the event ID of the security event. The audit log does not include security alarms for the specified event ID. |
| Failure | Select this check box to restrict the logging only to failed events. By default, this check box is cleared, which means failed and successful events are logged. |
| Interface | Enter the name of the interface from which security alarms are not included in the security log. |
| Policy Name | Enter the name of the security policy for which security alarms are not included in the security log. |
| Process | Enter the name of the process (that is generating the events) for which security alarms are not included in the security log. |
| Protocol | Enter the name of the protocol for which security alarms are not included in the security log. |
| Success | Select this check box to restrict the logging only to successful events. By default, this check box is cleared, which means failed and successful events are logged. |

Table 112: Create Exclude Configuration Settings *(Continued)*

| Setting | Guideline |
|----------|---|
| Username | Enter the username of the authenticated user for which security alarms that are enabled by the user are not included in the security log. |

After you've configured the security logs on the SRX Series devices, Security Director can receive those logs.

For adding Log Collector as a special node using Security Director Log Collector, click [here](#).

For adding Log Collector as a special node using JSA Log Collector, click [here](#).

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Link Aggregation for Security Devices

You can combine multiple Ethernet interfaces to form a single link layer interface, known as a Link Aggregation Group (LAG). This page enables you to create, edit, and delete LAG configuration profiles and also includes Global Settings, AE Interface, Logical Interface, Admin Status, Link status, VLAN Tagging, and so on.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify Link Aggregation profile:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select a device to modify the configuration.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.

The Modify Configuration page appears.

4. Click the **Link Aggregation** link in the left-navigation menu.

The Link Aggregation page is displayed. The existing Link Aggregation profiles if any are displayed in the table.

See [Table 113 on page 309](#) for the list of actions that you can perform in this page.

5. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 113: Link Aggregation Actions

| Field | Action |
|--|---|
| Global Settings | <p>Click to add a Global Settings to a Link Aggregation profile.</p> <p>The Global Settings page appears. Complete the configuration according to the guidelines provided in Table 114 on page 310 and click OK.</p> |
| Add Logical Interface | <p>Click to add a logical interface for the security devices. You can add an Aggregated Ethernet (AE) interface followed by a logical interface to a device.</p> <p>The Add Logical Interface page appears. Complete the configuration according to the guidelines provided in Table 115 on page 310 and click OK.</p> |
| Enable/Disable | <p>Click to enable or disable an existing Link Aggregation profile.</p> |
| Create an Aggregated Ethernet (AE) Interface | <p>Click + to add an AE Interface. The Add AE Interface page appears.</p> <p>Complete the configuration according to the guidelines provided in Table 116 on page 311 and click OK.</p> |
| Modify an AE Interface | <p>Select a Link Aggregation profile and click the pencil icon.</p> <p>The Modify AE Interface page appears, which shows the same fields as create a SSL Initiation Profile. You can modify some of the fields on this page. See Table 116 on page 311 for more details on the fields. Click OK to save the changes.</p> |
| Delete an AE Interface | <p>Select one or more interfaces that you want to delete, and click the bin icon to delete the profiles.</p> <p>The Warning page appears. Click Yes to confirm the deletion.</p> |

Table 113: Link Aggregation Actions (Continued)

| Field | Action |
|-------------------|--|
| Show Hide Columns | Select to show or hide various parameters in the grid. |

Table 114: Global Settings Action

| Field | Guideline |
|--------------|--|
| Device Count | Enter the device count. This is the number of Aggregated Ethernet devices. NOTE: The range is 1 through 128. |

Table 115: Logical Interface Settings

| Field | Guideline |
|------------------------|---|
| General | |
| AE Interface Name | Displays the AE Interface name that you have selected from the table. |
| Logical Interface Unit | Enter a valid logical interface. The range is 0 to 65535. NOTE: By default, the value will be 0, unless VLAN tagging is enabled. You must enable VLAN tagging if you want to enter a value greater than zero. |
| Description | Enter a valid description for logical interface. The maximum limit being 255 characters. |
| VLAN ID | Enter the VLAN ID. The range is 0 to 4094. NOTE: If the VLAN tagging is enabled, then the VLAN ID is mandatory. |
| IPv4 Address | |
| Add an IPv4 Address | Select + to add an IPv4 address for the logical interface. |
| IPv4 Address | Enter a valid IPv4 address. |

Table 115: Logical Interface Settings (*Continued*)

| Field | Guideline |
|---------------------|--|
| Subnet Mask | Enter a valid subnet mask for IPV4 address. |
| IPV6 Address | |
| Add an IPV6 Address | Select + to add an IPV6 address for logical interface. |
| IPV6 Address | Enter a valid IPV6 address. |
| Subnet Mask | Enter a valid subnet mask for IPV6 address. |

Table 116: AE Interface Settings

| Field | Guidelines |
|--------------------------|--|
| Global Settings | |
| AE Name | Enter the name of the aggregated interface. If an aggregated interface already exists, then the field is displayed as read-only. |
| Interfaces | <p>Select the interface available for aggregation and move to Selected column using right arrow.</p> <p>NOTE: Only interfaces that are configured with the same speed can be selected together for a LAG.</p> |
| Advanced Settings | |
| LACP Configuration | Specifies global Link Aggregation Control Protocol configuration. |
| LACP Mode | <p>Select the mode in which Link Aggregation Control Protocol packets are exchanged between the interfaces. The modes are:</p> <ul style="list-style-type: none"> • Active—Indicates that the interface initiates transmission of LACP packets • Passive—Indicates that the interface only responds to LACP packets. |

Table 116: AE Interface Settings *(Continued)*

| Field | Guidelines |
|-----------------|--|
| Periodic | <p>Select transmission rates of link aggregation control PDUs. The options are:</p> <ul style="list-style-type: none"> • Fast—Transmits link aggregation control PDUs every second. • Slow—Transmits link aggregation control PDUs every 30 seconds. |
| System Priority | <p>Select the priority level that you associate with the LAG. Select the priority level that you want to associate with the LAG by clicking the arrow button.</p> <p>The range is 0 to 65535.</p> |
| Link Protection | <p>Enable the option to protect the link. You can configure only two member links for an aggregated Ethernet interface, that is, one active and one standby.</p> |
| Non Revertive | <p>Select an option. It specifies not to switch links when higher priority link is available.</p> |
| Description | <p>Enter a description of the LAG.</p> |
| VLAN Tagging | <p>Select to enable VLAN tagging for a LAG.</p> |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the User Management Configuration for Security Devices

You can use the User Management section on the Modify Configuration page to modify the user details, authentication methods, password settings, access profile, and so on.



NOTE: Refer to the Junos OS documentation (available at https://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the basic configuration:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices to modify configuration.

3. From the More or right-click menu, select **Configuration > Modify Configuration**.

The Modify Configuration page appears with the Basic Setup section selected by default.

4. Click **User Management** in the left-navigation menu.

The User Management section on the Modify Configuration page is displayed.

5. Modify the configuration according to the guidelines provided in [Table 117 on page 314](#).

6. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 117: User Management

| Setting | Guideline |
|--------------|---|
| User Details | <p>Provides the users details to the device's local database. Existing users are displayed in a table with their username, full name, login type, and user type.</p> <p>To add a user:</p> <ol style="list-style-type: none"> Click + icon. <p>The Add User page is displayed.</p> <ol style="list-style-type: none"> Enter the details as follows: <ul style="list-style-type: none"> User Type— <ul style="list-style-type: none"> Select Root to add the user to the root device. Select LSYS to add the user to the logical systems device. Select TSYS to add the user to the tenant systems device. LSYS/TSYS—Select a logical system/tenant system device to which the user will have access. <p>NOTE: This field is displayed only if you have selected user type as LSYS/TSYS.</p> Username—Enter the username of the user (up to 64 characters) on the device. Do not include spaces, colons, or commas in the username. User ID—Enter a user ID, which is a numeric identifier that is associated with the username. <p>If you do not assign a user ID to a username, the system automatically assigns one when the configuration is pushed to the device.</p> <p>Range: 100 through 64,000</p> Full Name—Enter the full name of the user on the device; all alphanumeric characters are allowed except colon (:). Password—Enter a password that is a minimum of six characters long and that must contain at least one uppercase letter, one lowercase letter, one number, and one special character. |

Table 117: User Management (*Continued*)

| Setting | Guideline |
|------------------------|---|
| | <ul style="list-style-type: none"> • Confirm password—Re-enter the login password for the user. • Login Type—Select the login type of the user, which defines the access privileges for a user. The following login types are available: <ul style="list-style-type: none"> • Super-user—All permissions • Operator—Clear, network, reset, trace, and view permissions • Read-only—View permissions • Unauthorized—No permissions <p>3. Click OK.</p> <p>If the fields entered are valid, a user is created and a confirmation message is displayed at the top of the Modify Configuration page.</p> <p>To edit the information of a user, select it and click pencil icon. Then edit the user details in the Edit User dialog box and click OK.</p> <p>To delete an existing user, select it and click delete icon.</p> |
| Authentication Methods | <p>Specifies the authentication method the device should use to authenticate users.</p> <p>To add the authentication order:</p> <p>1. Click the + icon.</p> <p>The Add Authentication Order page is displayed.</p> <p>2. Select the authentication order.</p> <p>3. Click OK.</p> |

Table 117: User Management *(Continued)*

| Setting | Guideline |
|----------------|---|
| RADIUS Servers | <p>Select the checkbox to specify the details of RADIUS servers.</p> <p>To configure RADIUS Servers:</p> <ol style="list-style-type: none">Click the + icon. <p>The Add RADIUS server page is displayed.</p> <ol style="list-style-type: none">Enter the following details: <ul style="list-style-type: none">IP Address—Enter the 32-bit IP address of the server.Password—Enter the password for the server.Confirm Password—Re-enter the password for the serverServer Port—Enter an appropriate port.Source IP Address—Enter the source IP address of the server.Retry Attempts—Specify the number of times that the server should try to verify the user's credentials. <ol style="list-style-type: none">Click OK. <p>Select a radius server and click pencil icon to edit the radius server. Click delete to delete the radius server.</p> |

Table 117: User Management (*Continued*)

| Setting | Guideline |
|--------------------------|--|
| TACACS+ Servers | <p>Select the checkbox to provide the details of TACACS+ server.</p> <p>To configure a TACACS+ server:</p> <ol style="list-style-type: none"> Click the + icon. The Add TACACS+ server page is displayed. Enter the following details: <ul style="list-style-type: none"> IP Address—Enter the 32-bit IP address of the server. Password—Enter the password for the server. Confirm Password—Re-enter the secret password for the server. Server Port—Enter an appropriate port. The port range is from 1 through 65535. The default value is 1812. Source IP Address—Enter the source IP address of the server. Timeout—Specify the amount of time (in seconds) the device should wait for a response from the server. Timeout period range is from 1 to 90 seconds. The default value is 3 seconds. Click OK. <p>Select an IP address and click the pencil icon to edit the server details and click delete to delete the server details.</p> |
| Password Settings | |
| Minimum Reuse | <p>Select the minimum number of old passwords that must not be same as the new password.</p> <p>The range is from 1 through 20.</p> |
| Maximum Length | <p>Select the maximum password length.</p> <p>The range is from 20 through 128.</p> |

Table 117: User Management (Continued)

| Setting | Guideline |
|--|--|
| Minimum Length | <p>Select the minimum password length.</p> <p>The range is from 6 through 20.</p> |
| Access Profile | |
| Create an access profile | <p>You can configure the Lightweight Directory Access Protocol (LDAP) for SRX Series devices.</p> <p>To create an access profile:</p> <ol style="list-style-type: none"> 1. Click the + icon. <p>The Add Access Profile page is displayed.</p> <ol style="list-style-type: none"> 2. Configure the parameters according to the guidelines in Table 118 on page 319. 3. Click OK. |
| Address pool | <p>To add an address pool:</p> <ol style="list-style-type: none"> 1. Click the + icon. <p>The Add Address Pool page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the IPv4 address pool name. 3. Click OK. |
| FW Authentication - Pass Through Settings | |
| Default Profile | Select the profile that the policies can use to authenticate users. |
| FTP Banners | |
| Login | Enter the login prompt for users logging in using FTP. |
| Success | Enter a successful login prompt for users logging in using FTP. |

Table 117: User Management (Continued)

| Setting | Guideline |
|--|---|
| Fail | Enter a failed login prompt for users logging in using FTP. |
| Telnet Banners | |
| Login | Enter the login prompt for users logging in using Telnet. |
| Success | Enter a successful login prompt for users logging in using Telnet. |
| Fail | Enter a failed login prompt for users logging in using Telnet. |
| HTTP Banners | |
| Login | Enter the login prompt for users logging in using HTTP. |
| Success | Enter a successful login prompt for users logging in using HTTP. |
| Fail | Enter a failed login prompt for users logging in using HTTP. |
| FW Authentication - Web Authentication Settings | |
| Default Profile | Select the profile that the policies can use to authenticate users. |
| Success | Enter a message that will be displayed on a successful login for users logging in using Web authentication. |

Table 118: Access Profile

| Setting | Description |
|-------------------------|--|
| General Settings | |
| Access Profile Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. Maximum length is 64 characters. |

Table 118: Access Profile (*Continued*)

| Setting | Description |
|-----------------------------|--|
| Authentication Order | |
| Order 1 | <p>Configure the order in which the user tries different authentication methods during login. For each login attempt, the method for authentication starts with the first one, until the password matches.</p> <p>Select the following authentication methods:</p> <ul style="list-style-type: none"> • NONE—No authentication for the specified user. • LDAP—The SRX Series device uses this protocol to get user and group information necessary to implement the integrated user firewall feature. • Password—Use a locally configured password in the access profile. • Radius—Use RADIUS authentication services. <p>If RADIUS servers fails to respond or return a reject response, try password authentication, because it is explicitly configured in the authentication order.</p> <ul style="list-style-type: none"> • Secure ID—Configure the RSA SecurID authentication. <p>Users can enter either static or dynamic passwords as their credentials. A dynamic password is a combination of a user's PIN and a randomly generated token that is valid for a short period of time (approximately one minute). A static password is configured for the user on the SecurID server. For example, the SecurID server administrator might set a temporary static password for a user who has lost SecurID token.</p> |
| Order 2 | <p>Configure the next authentication method if the authentication method included in the authentication Order 1 is not available, or if the authentication is available but returns a reject response.</p> <p>Select the authentication method from the list and click Next.</p> |
| Authentication Type | |

Table 118: Access Profile *(Continued)*

| Setting | Description |
|--------------------------|---|
| Entity Requesting Access | <p>To add entity requesting access.</p> <ol style="list-style-type: none"> Click the + icon. <p>The Add Entity Requesting Access page is displayed.</p> <ol style="list-style-type: none"> Enter the following details: <ul style="list-style-type: none"> User Name—Enter the user name. Password—Enter the password. Confirm Password—Re-enter the password. XAUTH IP Address—Enter the IPv4 address of the external authentication server to verify the authentication user account. Groups—Enter the group name to store several user accounts together on the external authentication servers. Address Assignment—Select the address pool. Click OK. <p>You can select the username and edit or delete it.</p> |

Table 118: Access Profile *(Continued)*

| Setting | Description |
|---------------------------|--|
| LDAP Server | <p>Configure the LDAP server for authentication.</p> <p>To add the LDAP server:</p> <ol style="list-style-type: none"> Click the + icon. <p>The Add LDAP Server page is displayed.</p> <ol style="list-style-type: none"> Enter the following details: <ul style="list-style-type: none"> Address—Enter the IPv4 address or hostname of the LDAP authentication server. Port—Select the port number on which to contact the LDAP server. Range is from 1 to 65535. Retry—Select the number of retries that a device can attempt to contact an LDAP server. Range is from 1 to 10 seconds. Routing Instance—Enter the routing instance used to send LDAP packets to the LDAP server. Source Address—Enter a source IP address for each configured LDAP server. Timeout—Select the amount of time that the local device waits to receive a response from an LDAP server. The range is from 3 to 90 seconds. Click OK. |
| LDAP Options | |
| Base Distinguished Name | Enter the base distinguished name that defines the user. |
| Revert Interval | <p>Select the amount of time that elapses before the primary server is contacted if a backup server is being used.</p> <p>The range is from 60 to 4294967295.</p> |
| Additional Details | |

Table 118: Access Profile *(Continued)*

| Setting | Description |
|--------------------|--|
| Assemble | Select the checkbox to assemble user's LDAP distinguished name (DN) using a common name identifier, username, and base distinguished name. |
| Common Name | Enter the common name identifier used as a prefix for the username during the assembly of the users distinguished name. |
| Search | Select the checkbox to enable the search option. |
| Search Filter | Enter the name of the filter to find the user's LDAP distinguished name. |
| Admin Search | Select the checkbox to perform an LDAP administrator search. By default, the search is an anonymous search. |
| Distinguished Name | Enter the distinguished name of an administrative user. The distinguished name is used for performing the LDAP search. |
| Password | Configure the plain-text password for the administrative user. |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Screens Configuration for Security Devices

You can use the Screens section on the Modify Configuration page to modify the security screen configuration for a device. You can modify settings related to screen name, denial of service, anomalies, and reconnaissance.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the screens parameters:

1. Select **Devices > Security Devices**.
 - a. The Security Devices page appears.
2. Select the devices whose configuration you want to modify.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.
 - a. The Modify Configuration page appears.
4. Click the **Screens**.
 - a. The Screens page appears.
5. For the SRX Series devices, modify the configuration according to the guidelines provided in [Table 119 on page 324](#).

Starting Junos Space Security Director Release 16.2, you can configure screens for MX Series routers. For the MX Series routers, modify the configuration according to the guidelines provided in [Table 120 on page 331](#).

6. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See "[Modifying the Configuration of Security Devices](#)" on page 261.

Table 119: Screens for SRX Series Devices

| Setting | Guideline |
|--|--|
| Name | Modify the name of the screen. |
| Description | Modify the description of the screen. |
| Generate alarms without dropping packets | Select this check box to generate an alarm when detecting an attack but not to block the attack. |
| <i>Denial of Service</i> | |

Table 119: Screens for SRX Series Devices *(Continued)*

| Setting | Guideline |
|-----------------------------------|---|
| Land attack protection | <p>Select this option to prevent land attacks, where an attacker sends spoofed IP packets with headers containing the target's IP address for the source and destination IP address.</p> <p>Combining the SYN flood defense with IP spoofing protection prevents land attacks</p> |
| Teardrop attack protection | <p>Select this option to prevent a teardrop attack, which exploits the reassembly of fragmented IP packets. The device drops any packets that have such a discrepancy.</p> |
| ICMP fragment protection | <p>Select this option to block any ICMP packet that has the More Fragments flag set or that has an offset value.</p> <p>Because ICMP packets contain very short messages, there is no legitimate reason for ICMP packets to be fragmented. If an ICMP packet is so large that it must be fragmented, something is amiss.</p> |
| Ping of death attack protection | <p>Select this option to prevent a ping-of-death attack, which occurs when sending IP packets exceeding the maximum allowed size (65,535 bytes).</p> <p>Although the TCP/IP specification requires a specific packet size, many ping implementations allow larger packet sizes. Larger packets can trigger a range of adverse system reactions, including crashing, freezing, and restarting.</p> |
| Large size ICMP packet protection | <p>Select this option to drop ICMP packets with a length greater than 1024 bytes.</p> |
| Block fragment traffic | <p>Select this option to deny IP fragments on a security zone and to block all IP packet fragments that are received at interfaces bound to that zone.</p> |
| SYN-ACK-ACK proxy protection | <p>Select this option to prevent a SYN-ACK-ACK attack, which occurs when the attacker establishes multiple telnet sessions without allowing each session to terminate.</p> <p>After the number of connections from the same IP address reaches the SYN-ACK-ACK proxy threshold, the device rejects further connection requests from that IP address.</p> |

Table 119: Screens for SRX Series Devices *(Continued)*

| Setting | Guideline |
|---------------------------|---|
| WinNuke attack protection | <p>Select this option to detect attacks in Windows NetBIOS communications.</p> <p>Each WinNuke attack triggers an attack log entry in the event alarm log. WinNuke is a DoS attack targeting any computer on the Internet running Windows.</p> |
| <i>Anomalies</i> | |
| Bad option | <p>Select this option to detect and drop any packet with an incorrectly formatted IP option in the IP packet header (IPv4 or IPv6). The device records the event in the screen counters list for the ingress interface.</p> |
| Security | <p>Select this option to detect packets where the optional header field is IP option 2 (security), and the event is recorded in the screen counters list for the ingress interface.</p> |
| Unknown protocol | <p>Select this option to discard all received IP frames with protocol numbers greater than 137 for IPv4 and 139 for IPv6. These protocol numbers are undefined or reserved.</p> |
| Strict source route | <p>Select this option to detect packets where the optional header field is IP option 9 (strict source routing), and the event is recorded in the screen counters list for the ingress interface.</p> <p>This option specifies the complete route list for a packet to take on its journey from source to destination. The last address in the list replaces the address in the destination field.</p> |
| Source route | <p>Select this option either to block any packets set with loose or strict source route options or to detect such packets and then record the event in the counters list for the ingress interface.</p> <p>Source routing allows users at the source of an IP packet transmission to specify the IP addresses of the devices that they want an IP packet to take on its way to its destination.</p> |
| Timestamp | <p>Select this option to detect packets where the optional header field is IP option 4 (Internet timestamp), and the event is recorded in the screen counters list for the ingress interface.</p> <p>This option records the time (in Universal Time) when each network device receives the packet during its trip from the point of origin to its destination.</p> |

Table 119: Screens for SRX Series Devices *(Continued)*

| Setting | Guideline |
|--|---|
| Stream | <p>Select this option to detect packets where the optional header field is IP option 8 (stream ID), and the event is recorded in the screen counters list for the ingress interface.</p> <p>This option provides a way for the 16-bit SATNET stream identifier to be carried through networks that do not support streams.</p> |
| Loose source route | <p>Select this option to detect packets where the optional header field is IP option 3 (loose source routing), and the event is recorded in the screen counters list for the ingress interface.</p> <p>This option specifies a partial route list for a packet to take on its journey from source to destination.</p> |
| Record route | <p>Select this option to detect packets where the optional header field is IP option 7 (record route), and the event is recorded in the screen counters list for the ingress interface.</p> <p>This option records the IP addresses of the network devices along the path that the IP packet travels</p> |
| SYN fragment protection | <p>Select this option to detect packets where the optional IP header field indicates that the packet has been fragmented and the SYN flag is set in the TCP header.</p> <p>A fragmented SYN packet is anomalous, and, as such, it is suspect. To be cautious, block such unknown elements from entering your protected network.</p> |
| SYN and FIN flags set protection | <p>Select this option to detect an illegal combination of flags that attackers can use to consume sessions on the target device.</p> <p>Both the SYN and FIN control flags are not normally set in the same TCP segment header. The SYN flag synchronizes sequence numbers to initiate a TCP connection. The FIN flag indicates the end of data transmission to finish a TCP connection. Their purposes are mutually exclusive. A TCP header with the SYN and FIN flags set is anomalous TCP behavior, causing various responses from the recipient, depending on the OS.</p> |
| Fin flag without ACK flag set protection | <p>Select this option to detect an illegal combination of flags and to reject packets that have this combination.</p> <p>Because a TCP header with the FIN flag set but not the ACK flag is anomalous TCP behavior, there is no uniform response to this. The OS might respond by sending a TCP segment with the RST flag set.</p> |

Table 119: Screens for SRX Series Devices *(Continued)*

| Setting | Guideline |
|--|---|
| <i>Flood Defense</i> | |
| Limit sessions from the same source | <p>Set the number of concurrent sessions that can be initiated from a source IP address.</p> <p>When you set a source-based session limit, it can:</p> <ul style="list-style-type: none"> • Stem an attack such as the Nimda virus (which is actually both a virus and a worm) that infects a server and then begins generating massive amounts of traffic from that server. Because all the virus-generated traffic originates from the same IP address, a source-based session limit ensures that the firewall can control such excessive amounts of traffic. • Mitigate attempts to fill up the firewall's session table if all the connection attempts originate from the same source IP address. |
| Limit sessions from the same destination | <p>Set the number of concurrent sessions that can be directed to a single destination IP address. This ensures that the device allows only an acceptable number of concurrent connection requests—no matter what the source—to reach any one host.</p> |
| ICMP flood protection | <p>Select this option to prevent an ICMP flood attack, where ICMP echo requests use all resources in responding, such that valid network traffic can no longer be processed.</p> <p>The threshold value defines the number of ICMP packets per second allowed to ping the same destination address before the device rejects further ICMP packets.</p> |
| UDP flood protection | <p>Select this option to prevent a UDP flood attack, where an attacker sends IP packets containing UDP datagrams to slow down resources, such that valid connections can no longer be handled.</p> <p>The threshold value defines the number of UDP packets per second allowed to ping the same destination IP address or port pair. When the number of packets exceeds this value within any 1-second period, the device generates an alarm and drops subsequent packets for the remainder of that second.</p> |
| SYN flood protection | <p>Select this option to prevent a SYN flood attack, where the connecting host continuously sends TCP SYN requests without replying to the corresponding ACK responses.</p> <p>When the number of SYN segments per second exceeds the set threshold, the device will either start proxying incoming SYN segments by replying with SYN/ACK segments and storing the incomplete connection requests in a connection queue, or it will drop the packets.</p> |

Table 119: Screens for SRX Series Devices *(Continued)*

| Setting | Guideline |
|-----------------------|---|
| Attack Threshold | <p>Set the number of SYN packets per second (pps) required to trigger a SYN proxy response. The default value is 200 pps, and you can set the attack threshold from 1 to 500,000 pps.</p> <p>Although you can set the threshold to any number, you need to know the normal traffic patterns at your site to set an appropriate threshold for it. For example, if for an e-business site that normally gets 20,000 SYN segments per second, you might want to set the threshold to 30,000 pps. If a smaller site normally gets 20 SYN segments per second, you might consider setting the threshold to 40 pps.</p> |
| Alarm Threshold | <p>Set the number of proxied, half-completed TCP connection requests per second after which the device enters an alarm in the event log.</p> <p>The value you set for an alarm threshold triggers an alarm when the number of proxied, half-completed connection requests to the same destination address per second exceeds that value.</p> |
| Source Threshold | <p>Set the number of SYN segments that the device can receive per second from a single source IP address before the device begins dropping connection requests from that source. The default value is 4000 per second, and you can set the source threshold from 4 to 500,000 per second.</p> <p>Tracking a SYN flood by source address uses different detection parameters from tracking a SYN flood by destination address. When you set a SYN attack threshold and a source threshold, you put both the basic SYN flood protection mechanism and the source-based SYN flood tracking mechanism in effect.</p> |
| Destination Threshold | <p>Set the number of SYN segments received per second for a single destination IP address before the device begins dropping connection requests to that destination. The default value is 4000 per second, and you can set the destination threshold from 4 to 1,000,000 per second.</p> <p>If a protected host runs multiple services, you might want to set a threshold based on destination IP address only—regardless of the destination port number.</p> |

Table 119: Screens for SRX Series Devices *(Continued)*

| Setting | Guideline |
|-----------------------|---|
| Timeout | <p>Set the maximum length of time before a half-completed connection is dropped from the queue. The default value is 20 seconds, and you can set the timeout from 1 to 50 seconds. When either a source or destination threshold is not configured, the system will use the default threshold value.</p> <p>You can decrease the timeout value until you see any connections dropped during normal traffic conditions.</p> |
| <i>Reconnaissance</i> | |
| IP spoofing | <p>Select this option to prevent an IP spoofing attack, where an invalid source address is inserted in the packet header to make the packet appear to come from a trusted source.</p> <p>The mechanism to detect IP spoofing relies on route table entries. When the device detects the packet with a spoofed source IP address, it discards the packet.</p> |
| IP sweep | <p>Select this option to prevent an IP sweep attack, where an attacker sends ICMP echo requests (pings) to multiple destination addresses. If a target host replies, the reply reveals the target's IP address to the attacker. If the device receives 10 ICMP echo requests within the number of microseconds specified in this statement, then it flags this as an IP sweep attack and rejects the eleventh and all further ICMP packets from that host for the remainder of the second.</p> <p>The threshold value defines the maximum number of microseconds during which up to 10 ICMP echo requests from the same host are allowed into the device.</p> |
| TCP sweep | <p>Select this option to prevent a TCP sweep attack, where an attacker sends TCP SYN packets to the target device as part of the TCP handshake. If the device responds to those packets, then the attacker gets an indication that a port in the target device is open, which makes the port vulnerable to attack. If a remote host sends TCP packets to 10 addresses in 0.005 seconds (5000 microseconds), then the device flags this as a TCP sweep attack.</p> |
| UDP sweep | <p>Select this option to prevent a UDP sweep attack, where an attacker sends UDP packets to the target device. If the device responds to those packets, then the attacker gets an indication that a port in the target device is open, which makes the port vulnerable to attack. If a remote host sends UDP packets to 10 addresses in 0.005 seconds (5000 microseconds), then the device flags this as an UDP sweep attack.</p> |

Table 119: Screens for SRX Series Devices (Continued)

| Setting | Guideline |
|-----------|---|
| Port scan | <p>Select this option to prevent a port scan attack, where the available services are scanned in the hopes that at least one port will respond, thus identifying a service to target.</p> <p>A port scan occurs when one source IP address sends IP packets containing TCP SYN segments to 10 different destination ports within a defined interval. The default interval is 5000 microseconds.</p> |

Table 120: Screens for MX Series Routers

| Setting | Guideline |
|-----------------|---|
| Name | Modify the name of the screen. |
| Match Direction | <p>Specify the direction in which the rule match is applied.</p> <p>The following options are available:</p> <ul style="list-style-type: none"> • Input—Apply the rule match on the input side of the interface. • Output—Apply the rule match on the output side of the interface. • Input-Output—Apply the rule match bidirectionally. |
| Service Set | Select a service set from the list that you have already created to define a collection of services to be performed by an Adaptive Services interface (AS) or Multiservices line cards (MS-DPC, MS-MIC, and MS-MPC). |

Rule Settings

Table 120: Screens for MX Series Routers *(Continued)*

| Setting | Guideline |
|---------|--|
| TCP | <ul style="list-style-type: none"> • By Source—Enable this option to limit sessions based on numbers generated from the configured source (IP or subnet) or application. <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. • By Destination—Enable this option to limit sessions based on numbers generated from the configured destination (IP or subnet) or application. <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. • By Pair—Enable this option to apply limit to paired stateful firewall and NAT flows (forward and reverse). <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. • TCP SYN Defense—Enable this option to prevent a SYN flood attack, where the connecting host continuously send TCP SYN requests without replying to the corresponding ACK responses. • TCP SYN Fragment—Enable this option to detect packets where the option IP header field indicates that the packet has been fragmented and the SYN field is set in the TCP header. |

Table 120: Screens for MX Series Routers *(Continued)*

| Setting | Guideline |
|---------|--|
| | <ul style="list-style-type: none"> • TCP Winnuke—Enable this option to detect attacks in Windows NetBIOS communications. Each WinNuke attack triggers an attack log entry in the event alarm log. |
| UDP | <p>Configure the following parameters for UDP:</p> <ul style="list-style-type: none"> • By Source—Enable this option to limit sessions based on numbers generated from the configured source (IP or subnet) or application. <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. • By Destination—Enable this option to limit sessions based on numbers generated from the configured destination (IP or subnet) or application. <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. • By Pair—Enable this option to apply limit to paired stateful firewall and NAT flows (forward and reverse). <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. |

Table 120: Screens for MX Series Routers *(Continued)*

| Setting | Guideline |
|---------|---|
| ICMP | <p>Configure the following parameters for ICMP:</p> <ul style="list-style-type: none"> • By Source—Enable this option to limit sessions based on numbers generated from the configured source (IP or subnet) or application. <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. • By Destination—Enable this option to limit sessions based on numbers generated from the configured destination (IP or subnet) or application. <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. • By Pair—Enable this option to apply limit to paired stateful firewall and NAT flows (forward and reverse). <ul style="list-style-type: none"> • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • Max Packets Allowed—Enter the maximum peak packets per second per application or IP address. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. |

Table 120: Screens for MX Series Routers *(Continued)*

| Setting | Guideline |
|----------------------------|--|
| Limit Session (Cumulative) | <ul style="list-style-type: none"> • By Source—Enable this option to limit sessions based on numbers generated from the configured source (IP or subnet) or application. • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. • By Destination—Enable this option to limit sessions based on numbers generated from the configured destination (IP or subnet) or application. • Max Sessions Allowed—Enter the maximum number of open sessions per application or IP address. |
| Limit Session (Per Second) | <ul style="list-style-type: none"> • By Source—Enable this option to limit sessions based on numbers generated from the configured source (IP or subnet) or application. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. • By Destination—Enable this option to limit sessions based on numbers generated from the configured destination (IP or subnet) or application. • Rate Per Second—Enter the maximum number of sessions per second per application or IP address. |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.2 | Starting Junos Space Security Director Release 16.2, you can configure screens for MX Series routers. |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices](#) | 261

[Using Features in Security Devices](#) | 237

[Security Devices Overview](#) | 240

Modifying the Zones Configuration for Security Devices

You can use the Zones section on the Modify Configuration page to modify the security zone configuration for a device. You can modify settings related to zone name, system services, protocols, application tracking, and associate screen to the zone.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the zones parameters:

1. Select **Devices > Security Devices**.
 - a. The Security Devices page appears.
2. Select the devices whose configuration you want to modify.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.
 - a. The Modify Configuration page appears.
4. Click the **Screens**.
 - a. The Screens page appears.
5. Modify the configuration according to the guidelines provided in [Table 121 on page 336](#).
6. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See "[Modifying the Configuration of Security Devices](#)" on page 261.

Table 121: Zones Settings

| Setting | Guideline |
|----------------------|--|
| Name | Modify the zone name. |
| Description | Modify the description of the zone. |
| Application Tracking | <p>Enable this option to maintain the application usage statistics on a device.</p> <p>By default, when each session closes, application track generates a message that provides the byte and packet counts and duration of the session, and then sends the message to the syslog host device.</p> |

Table 121: Zones Settings *(Continued)*

| Setting | Guideline |
|------------------------|--|
| Interfaces | Select the interfaces from the Available column to include in the selected list for the zones. |
| <i>System Services</i> | |

Table 121: Zones Settings (*Continued*)

| Setting | Guideline |
|-----------|---|
| Is Except | <p>Select this option to disable specific incoming system service traffic, but only when the all system services option is defined.</p> <p>The following system services are supported:</p> <ul style="list-style-type: none"> • all—Enable traffic from the defined system services available on the Routing Engine (RE). Use the Is Except option to disallow specific system services. • any-service—Enable all system services on the entire port range including the system services that are not defined. • dns—Enable incoming DNS services. • finger—Enable incoming finger traffic. • ftp—Enable incoming FTP traffic. • http—Enable incoming Web authentication traffic. • https—Enable incoming Web authentication traffic over Secure Sockets Layer (SSL). • ident-reset—Enable the access that has been blocked by an unacknowledged identification request. • ike—Enable Internet Key Exchange (IKE) traffic. • lsping—Enable label switched path ping service. • netconf—Enable incoming NETCONF service. • ntp—Enable incoming Network Time Protocol (NTP) traffic. • ping—Allow the device to respond to ICMP echo requests. • r2cp—Enable incoming Radio Router Control Protocol traffic. • reverse-ssh—Reverse SSH traffic. • reverse-telnet—Reverse Telnet traffic. • rlogin—Enable incoming rlogin (remote login) traffic. • rpm—Enable incoming real-time performance monitoring (RPM) traffic. |

Table 121: Zones Settings *(Continued)*

| Setting | Guideline |
|------------------|--|
| | <ul style="list-style-type: none">• rsh—Enable incoming remote shell (rsh) traffic.• sip—Enable incoming Session Initiation Protocol traffic.• snmp—Enable incoming SNMP traffic (UDP port 161).• snmp-trap—Enable incoming SNMP traps (UDP port 162).• ssh—Enable incoming SSH traffic.• telnet—Enable incoming Telnet traffic.• tftp—Enable TFTP services.• traceroute—Enable incoming traceroute traffic (UDP port 33434).• xnm-clear-text—Enable incoming Junos XML protocol traffic for all specified interfaces.• xnm-ssl—Enable incoming Junos XML protocol-over-SSL traffic for all specified interfaces. |
| <i>Protocols</i> | |

Table 121: Zones Settings (*Continued*)

| Setting | Guideline |
|-----------|---|
| Is Except | <p>Select this option to disable specific incoming protocol traffic, but only when the all protocol option is defined.</p> <p>The following protocols are supported:</p> <ul style="list-style-type: none"> • all—Enable traffic from all possible protocols available. Use the Is Except option to disallow specific protocols. • bfd—Enable incoming Bidirectional Forwarding Detection (BFD) protocol traffic. • bgp—Enable incoming BGP traffic. • dvmrp—Enable incoming Distance Vector Multicast Routing Protocol (DVMRP) traffic. • igmp—Enable incoming Internet Group Management Protocol (IGMP) traffic. • ldp—Enable incoming LDP traffic (UDP and TCP port 646). • msdp—Enable incoming Multicast Source Discovery Protocol (MSDP) traffic. • nhrp—Enable incoming Next Hop Resolution Protocol (NHRP) traffic. • ospf—Enable incoming OSPF traffic. • ospf3—Enable incoming OSPF version 3 traffic. • pgm—Enable incoming Pragmatic General Multicast (PGM) protocol traffic (IP protocol number 113). • pim—Enable incoming Protocol Independent Multicast (PIM) traffic. • rip—Enable incoming RIP traffic. • ripng—Enable incoming RIP next generation traffic. • router-discovery—Enable incoming router discovery traffic. • rsvp—Enable incoming RSVP traffic (IP protocol number 46). • sap—Enable incoming Session Announcement Protocol (SAP) traffic. SAP always listens on 224.2.127.254:9875. New addresses and ports can be added dynamically. This information must be propagated to the Packet Forwarding Engine (PFE). • vrrp—Enable incoming Virtual Router Redundancy Protocol (VRRP) traffic. |

Table 121: Zones Settings (Continued)

| Setting | Guideline |
|----------------------------------|--|
| <i>Traffic Control Options</i> | |
| TCP Rst | Enable this option to send a TCP packet with the RST (reset) flag set to 1 in response to a TCP packet with any flag other than SYN set and that does not belong to an existing session. |
| Screen | Select a security screen for a security zone to detect and block various kinds of traffic that the device determines as potentially harmful. |
| Interface Services and Protocols | Display the selected interfaces and system services and protocols for the interface. |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the IPS Configuration for Security Devices

You can use the IPS section on the Modify Configuration page to modify the sensor configuration for a device. You must configure the SRX Series device to send attack packets to the Junos Space Network Management Platform. Select the device and configure the parameters such as host IP address for receiving packets, source IP address, maximum sessions, threshold logging interval, total memory, and port.



NOTE: Refer to the Junos OS documentation available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/ for detailed information on the configuration parameters for a device.

To modify packet log parameters:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select a device to modify the configuration.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.
The Modify Configuration page appears.
4. Select **IPS**.
The Sensor Configuration screen appears.
5. Modify the configuration according to the guidelines provided in [Table 122 on page 342](#).

Table 122: Sensor Configuration Details

| Setting | Guidelines |
|-------------------------------|--|
| Host IP for receiving packets | The Virtual IP address of the Junos Space Network Management Platform server for SRX Series devices to send packets. |
| Source address | The interface IP address of the SRX Series device through which packets are sent. |
| Max Sessions | The maximum number of packet capture sessions expressed as a percentage of the IDP session capacity for the device. |
| Threshold logging interval | The minimum time interval in minutes between log messages for maximum sessions or memory reached. |
| Total Memory | The maximum amount of memory allocated to capture packets for a device. This value is expressed as a percentage of the memory available on the device. |
| Port | <p>The port number of the server for SRX Series devices to send the packet capture object.</p> <p>The port is 2050, which is opened on Junos Space Network Management Platform server on installing Security Director to receive packets from SRX Series Firewalls"? >SRX Series Firewalls.</p> |

RELATED DOCUMENTATION

| |
|---|
| Packet Capture Overview 221 |
| About the Packets Captured Page 222 |

Modifying the SSL Initiation Profile for Security Devices

You can use the SSL Initiation Profile section on the Modify Configuration page to create, edit and delete SSL Initiation Profile. The profile contains the settings for the SSL-initiated connections. This includes the list of supported ciphers and their priority, the supported versions of SSL/TLS, certificates and a few other options.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify SSL Initiation profile:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select a device to modify the configuration.

3. From the More or right-click menu, select **Configuration > Modify Configuration**.

The Modify Configuration page appears.

4. Click the **SSL Initiation** link in the left-navigation menu.

The SSL Initiation Profile page is displayed. The existing SSL Initiation profiles if any are displayed in the table.

See [Table 123 on page 343](#) for the list of actions that you can perform in this page.

5. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See "[Modifying the Configuration of Security Devices](#)" on page 261.

Table 123: SSL Initiation Profile Actions

| Action | Description |
|---------------------------------|---|
| Create a SSL Initiation Profile | <p>Click the + icon to create a SSL Initiation Profile.</p> <p>The Add SSL Initiation Profile page appears. Complete the configuration according to the guidelines provided in Table 124 on page 344 and click OK.</p> |

Table 123: SSL Initiation Profile Actions (Continued)

| Action | Description |
|---------------------------------|---|
| Modify a SSL Initiation Profile | <p>Select a SSL Initiation profile and click the pencil icon.</p> <p>The Modify SSL Initiation Profile page appears, which shows the same fields as create a SSL Initiation Profile. You can modify some of the fields on this page. See Table 124 on page 344 for more details on the fields. Click OK to save the changes.</p> |
| Delete a SSL Initiation Profile | <p>Select one or more SSL Initiation Profiles that you want to delete, and click the bin icon to delete the profiles.</p> <p>The Warning page appears. Click Yes to confirm the deletion.</p> |
| Show Hide Columns | Select to show or hide various parameters in the grid. |

Table 124: Create SSL Initiation Profile

| Field | Action |
|----------------------------|--|
| General Information | |
| Name | Enter a name for the SSL Initiation Profile. |
| Flow Tracing | Select the Allow check box to enable flow tracing for the profile. |
| Protocol Version | Select the accepted protocol SSL version. |
| Preferred Ciphers | Select the preferred cipher depending on the key strength. |
| Session Cache | Select the Allow check box to enable SSL session cache. |
| Certificate | |
| Client Certificate | Select an effective client certificate for the client. |
| Action | |

Table 124: Create SSL Initiation Profile *(Continued)*

| Field | Action |
|-------------------------------|--|
| Server Authentication Failure | Select the Allow check box to ignore server authentication failure completely. |
| CRL Validation | Select the Allow check box to disable CRL validation. Certificate Revocation List (CRL) validation on SRX Series device involves checking for revoked certificates from servers. |
| Action | Select an action if CRL information is not present. You can allow or drop the sessions when a CRL information is not available. |
| Hold Instruction Code | Select the Allow check box to allow the sessions when a certificate is revoked, and the revocation reason is on hold. |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the ICAP Redirect Profile for Security Devices

You can use the ICAP Redirect Profile section on Modify configuration page to configure the ICAP redirect profile. You can create, edit or delete an ICAP Redirect Profile. The ICAP server profile allows the ICAP server to process request messages, response messages, fallback options, and so on, for the permitted traffic.



NOTE: Refer to the Junos OS documentation (available at http://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify ICAP Redirect Profile:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select a device to modify the configuration.

3. From the More option or right-click menu, select **Configuration > Modify Configuration**.

The Modify Configuration page appears.

4. Click the **ICAP Redirect** link in the left-navigation menu.

The ICAP Redirect Profile page is displayed. The existing ICAP Redirect profiles if any, are displayed in the table.

See [Table 125 on page 346](#) for the list of actions that you can perform in this page.

5. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 125: ICAP Redirect Profile actions

| Action | Description |
|---------------------------------|--|
| Create an ICAP Redirect Profile | <p>Click the + icon to create an ICAP Redirect Profile.</p> <p>The Add ICAP Redirect Profile page appears. Complete the configuration according to the guidelines provided in Table 126 on page 347 and click OK.</p> |
| Modify an ICAP Redirect Profile | <p>Select an ICAP Redirect profile from the table and click the pencil icon.</p> <p>The Modify ICAP Redirect Profile page appears, which shows the same fields as create an ICAP Redirect Profile page. You can modify some of the fields on this page. See Table 126 on page 347 for more details on the fields. Click OK to save the changes.</p> |
| Delete an ICAP Redirect Profile | <p>Select one or more ICAP Redirect profiles that you want to delete, and click the bin icon to delete the profiles.</p> <p>The Warning page appears. Click Yes to confirm the deletion.</p> |
| Show Hide Columns | Select to show or hide various parameters in the grid table. |

Table 126: Create an ICAP Redirect Profile

| Field | Action |
|-----------------------------|---|
| Name | Enter a valid ICAP service profile name. |
| Timeout | <p>Enter the server response timeout in milliseconds. Timeout is the interval after which the server is considered inactive if there is no response from the server.</p> <p>The range is 100 through 50000.</p> |
| HTTP Redirect Option | |
| Request | Select the Allow check box to enable redirect service on HTTP request. |
| Response | Select the Allow check box to enable redirect service on HTTP response. |
| ICAP Server | <p>You can perform the following actions on this page:</p> <ul style="list-style-type: none"> • Create an ICAP Redirect Server— Click the + icon to create an ICAP Redirect Server. <p>The Create ICAP Redirect Server page appears. Complete the configuration according to the guidelines provided in Table 127 on page 348 and click OK.</p> <p>The ICAP Redirect Server is created and you are returned to the ICAP Redirect Profile page.</p> <ul style="list-style-type: none"> • Edit an ICAP Redirect Server— Select an ICAP Redirect Server and click the pencil icon to modify the settings. <p>The Modify ICAP Redirect Server page appears, showing the same fields that are presented when you create an ICAP Redirect Server. You can modify some of the fields on this page. See Table 127 on page 348 for an explanation of the fields.</p> <p>After you have modified the ICAP Redirect Server, click OK. The changes are saved and you are returned to the ICAP Redirect Server Profile page.</p> |
| Fallback Option | |

Table 126: Create an ICAP Redirect Profile (Continued)

| Field | Action |
|---------------------|--|
| Timeout Action | <p>Select a valid timeout option from the dropdown list.</p> <p>Request an action to the server in an event of failure, when you do not receive response within a specified time period.</p> |
| Connectivity Action | Select a connectivity action from the list when there is connection issue and request cannot be sent out. |
| Default Action | Select a default action from the list to be taken when there are cases other than Timeout and Connectivity issue.. |

Table 127: Create an ICAP Redirect Server Settings

| Setting | Guideline |
|-----------------------|---|
| Name | Enter an ICAP Redirect server name. |
| Host Type | <p>Select the type of host, name or IP address.</p> <ul style="list-style-type: none"> • Host Name– Enter a valid host name. NOTE: Host name appears when you select host type as name. • Host IP– Enter a valid host IP address. NOTE: Host IP address appears when you select host type as IP |
| Port | Enter a valid ICAP server listening port. |
| Sockets | Enter the number of connections to create the ICAP service. |
| Authentication | |
| Authorization Type | Specify the type of authentication. |

Table 127: Create an ICAP Redirect Server Settings *(Continued)*

| Setting | Guideline |
|------------------------|--|
| Credential Type | <p>Select the type of credential for the authentication.</p> <p>The available options are:</p> <ul style="list-style-type: none"> • ASCII, and • Base64. |
| Credential | Based on the Credential Type that you choose, enter the ASCII string or Base64 string. |
| URI | |
| Request MOD | Enter the path to the service that handles Request Modification (REQMOD) requests. |
| Response MOD | Enter the path to the service that handles Response Modification (RESPMOD) requests. |
| Routing Instance | Select a virtual router that is used for launching the service. |
| SSL Initiation Profile | Select a SSL initiation profile. |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Configuring Aruba ClearPass for Security Devices

Use the Aruba Clear Pass page to configure the Aruba ClearPass as the authentication source for the integrated ClearPass authentication and enforcement feature. The SRX Series device and Aruba ClearPass collaborate to protect your network resources by enforcing security at the user identity level and controlling user access to the Internet.

The ClearPass Policy Manager (CPPM) can authenticate users across wired, wireless, and VPN infrastructures. The integrated ClearPass feature allows the CPPM and the SRX Series device to collaborate in multiple environments in which they are deployed together.

To configure Aruba ClearPass:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices whose configuration you want to modify.

3. From the More or right-click menu, select **Configuration > Modify Configuration**.

The Modify Configuration page appears.

4. Click **ArubaClearPass** in the left-navigation menu.

The Aruba Clear Pass section on the Modify Configuration page is displayed.

5. Specify the parameters for configuring Aruba ClearPass according to the guidelines provided in [Table 128 on page 350](#).

6. After modifying the configuration, you can cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 128: Fields on the Aruba Clear Pass Page

| Field | Description |
|--------------------------------------|--|
| Name | Select the name of the Aruba ClearPass from the list. |
| Authentication Entry Timeout | <p>Set the timeout interval after which the idle entries in the ClearPass authentication table expire.</p> <p>The timeout interval begins from when the user authentication entry is added to the ClearPass authentication table. If a value of 0 is specified, the entries will never expire. Range is 10 through 1440 minutes.</p> |
| Invalid Authentication Entry Timeout | <p>Enter the expiry time in minutes to apply to invalid authentication entries in the SRX Series authentication table for Windows active directory or Aruba ClearPass authentication sources. Range is 0 through 1440 minutes.</p> <p>The invalid authentication entry timeout setting is different from the general authentication entry timeout setting. It allows you to protect invalid user authentication entries in an authentication table from expiring before the user can be validated.</p> |

Table 128: Fields on the Aruba Clear Pass Page *(Continued)*

| Field | Description |
|------------------|---|
| No User Query | Enable this option to turn off the user query function without deleting the user query configuration. |
| User Query | Enable this option to allow the SRX Series device to query the ClearPass webserver for authentication and identity information for an individual user, whose information was not posted to the SRX Series device by ClearPass. |
| Client ID | <p>Enter the client ID that the SRX Series device requires to obtain an access token for the Integrated ClearPass Authentication and Enforcement user query function. Range is 1 through 64.</p> <p>If it is configured, the user query function allows the SRX Series device to query the CPPM for authentication and identity information about individual users when it does not receive this information from the CPPM through the SRX Series Web API daemon (webapi).</p> |
| CA Certificate | Specify the certificate file that the SRX Series device uses to verify the Clearpass server's certificate for the SSL connection that is used for the user query function. As the ClearPass administrator, you must export the certificate of the server from the CPPM and import it to the SRX Series device. Later, you must configure the ca-certificate path and the certificate filename on the SRX Series device. For example, /var/tmp/RADIUSServerCertificate.crt. |
| Client Secret | Specify the client secret used with the client ID that the SRX Series device requires to obtain an access token for the Integrated ClearPass Authentication and Enforcement user query function. The client secret must be consistent with the client secret configured on the CPPM. Range is 1 through 128. |
| Delay Query Time | <p>Enter the amount of time for the SRX Series device to delay before sending queries to the Aruba ClearPass Policy Manager (CPPM) for authentication and identity information for individual users. Range: 0 through 60 seconds.</p> <p>After the delay timeout expires, the SRX Series device sends the query to the CPPM and creates a pending entry for the user in the Routing Engine authentication table. During this period, any arriving traffic matches the default policy whose action on the traffic you can configure.</p> |

Table 128: Fields on the Aruba Clear Pass Page *(Continued)*

| Field | Description |
|-------------------|--|
| Query API | <p>Enter the query-api to specify the path of the URL that the SRX Series device uses to query the ClearPass Policy Manager (CPPM) webserver for authentication and identity information for an individual user.</p> <p>Consider the following query-api example: <code>api/v1/insight/endpoint/ip/\$IP\$</code>.</p> <p>The SRX Series device generates the complete URL for the user query request by combining the query-api string with the connection method (HTTPS) and the CPPM webserver IP address (<code>{{server}}</code>).</p> <p><code>https://{{server}}/api/v1/insight/endpoint/ip/\$IP\$</code></p> <p>In this example, the SRX Series device replaces the variables with the following values resulting in a specific URL request for the individual user: <code>https://203.0.113.76/api/v1/insight/endpoint/ip/192.0.2.98</code>.</p> |
| Token API | <p>Enter the token API that is used in generating the URL for acquiring an access token. The token API is combined with the connection method and the IP address of the ClearPass webserver to produce the complete URL used for acquiring an access token.</p> <p>For example, if the token API is <code>oauth</code>, the connection method is <code>HTTPS</code>, and the IP address of the ClearPass webserver is <code>192.0.2.199</code>, the complete URL for acquiring an access token would be <code>https://192.0.2.199/api/oauth</code>. This is a required parameter. There is no default value.</p> |
| <i>Web Server</i> | |
| Address | <p>Enter the IPv4 address of the ClearPass webserver to communicate with the SRX Series device.</p> <p>The SRX Series device requests user authentication and identity information for an individual user from the ClearPass webserver whose address is configured. If you configure the user query function, the SRX Series device can obtain this information for a specific user when it does not receive it from the ClearPass Policy Manager through Web API POST requests.</p> |
| Server Name | Enter the server name of the ClearPass webserver to communicate with the SRX Series device. |

Table 128: Fields on the Aruba Clear Pass Page *(Continued)*

| Field | Description |
|----------------|---|
| Port | Select the TCP port of the SRX Series device to use for incoming HTTP or HTTPS connection requests initiated by the ClearPass Policy Manager (CPPM). |
| Connect Method | <p>Select the application protocol used for the SRX Series device connection to the ClearPass Policy Manager (CPPM) for user query requests. Default is HTTPS.</p> <p>You identify the connection protocol as part of the configuration that identifies the CPPM server. The user query function allows the SRX Series device to request from the CPPM user authentication and identity information for an individual user.</p> <ul style="list-style-type: none"> • HTTP—Protocol that the CPPM uses to connect to the SRX Series device. • HTTPS—Secure version of the protocol that the CPPM uses to connect to the SRX Series device. |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Configuring APBR Tunables for Security Devices

Use the APBR-Tunables page to configure the advanced policy-based (APBR) routing options to streamline the traffic handling. Fine-tuning the APBR configuration such as limiting route changes and terminating sessions are required to avoid the excessive transitions due to route changes.

To configure the APBR Tunables:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select a device whose configuration you want to modify.
3. From the More or right-click menu, select **Configuration > Modify Configuration**.
The Modify Configuration page appears.

4. Click **APBR-Tunables** from the left-navigation menu.
The APBR-Tunables page appears.
5. Configure the parameters as per the guidelines provided in [Table 129 on page 354](#).
6. Click **Save** to save the changes, **Preview Changes** to preview the configuration changes, **Save and Deploy** to save the configuration and update changes to the device, or **Cancel** to discard the changes.
See "[Modifying the Configuration of Security Devices](#)" on page 261.

Table 129: Fields on the APBR Tunables Page

| Field | Description |
|-----------------------|--|
| Max route change | Configure the threshold for limiting the number of times a route can change for a session. The default value is 1. Range is 0-5. |
| Drop on zone mismatch | Enable this option to terminate the session instead of allowing traffic to traverse through the same route bypassing APBR. By default, this option is disabled. |
| Enable Log | Enable logging to record events that occur on the device for APBR-related operations. By default, the logging is disabled. |

RELATED DOCUMENTATION


[Understanding Application-Based Routing | 901](#)

[About the Application Routing Policies Page | 904](#)

Modifying the Express Path Configuration for Security Devices

Express path (formerly known as services offloading) is a mechanism for processing fast-path packets in the network processor instead of in the Services Processing Unit (SPU). Express path considerably reduces packet-processing latency by 500–600 percent.

You can use the Express Path section on the Modify Configuration page to view, create, edit, or delete Flexible PIC Concentrator (FPC) details on a device. You can toggle the status of one or more express paths. Express path is supported only on SRX5400, SRX5600, SRX5800, and rootLsys devices.



NOTE: Refer to the Junos OS documentation (available at https://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the express path configuration:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select the devices whose configuration you want to modify. Click **More** or use the right-click menu and select **Configuration > Modify Configuration**.
The Modify Configuration page appears.
3. Click the **ExpressPath** link in the left-navigation menu.
The Express Path section on the Modify Configuration page is displayed. The actions that you can perform in this page are provided in [Table 130 on page 355](#).
4. After modifying the configuration, you can cancel, save, preview, or save the changes and deploy the configuration on the device. See ["Modifying the Configuration of Security Devices" on page 261](#).

Table 130: Express Path Actions

| Action | Guidelines |
|------------------|--|
| Add FPC details | <p>Click the + icon to add FPC details.</p> <p>The Add FPC Details page appears. Complete the configuration according to the guidelines provided in Table 131 on page 356 and click OK.</p> <p>The FPC details are created and you are returned to the Express Path section on the Modify Configuration page.</p> |
| Edit FPC details | <p>Select an express path and click the pencil icon.</p> <p>The Edit FPC Details page appears, showing the same fields that are presented when you create an express path. See Table 131 on page 356 for a description of the fields. After you have modified the express path, click OK.</p> <p>The changes are saved and you are returned to Express Path section on the Modify Configuration page.</p> |

Table 130: Express Path Actions *(Continued)*

| Action | Guidelines |
|--------------------------------------|--|
| Delete express path | <p>Select one or more express paths and click the X icon to delete the routes.</p> <p>The Warning page appears. Click Yes to confirm the deletion. The selected express paths are deleted.</p> |
| Toggle the status of an express path | <p>Select one or more express paths. Click More or use the right-click menu and select Toggle.</p> <p>The activated express paths are deactivated and the deactivated express paths are activated.</p> <p>NOTE: The Toggle option is enabled only when the selected express paths are a mix of activated and deactivated records.</p> |

Table 131: Fields on the Add FPC Details Page

| | |
|-----------------|---|
| FPC Slot Number | Enter a valid FPC slot number, which can be a value from 0 through 127. |
| np-cache | Select this option to enable session cache on an I/O Card (IOC). |

RELATED DOCUMENTATION

[Modifying the Configuration of Security Devices | 261](#)

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Modifying the Device Information Source Configuration for Security Devices

Use the Device Information Source page to configure the authentication source. Supported authentication sources include Active Directory and third-party network access systems.

The SRX Series device obtains the device identity information for authenticated devices from the authentication source. After the SRX Series device obtains the device information, it creates a device identity authentication table to store device identity entries. The SRX Series device searches the device identity authentication table for a device match when traffic issuing from a user's device arrives at the

SRX Series device. If it finds a match, the SRX Series device searches for a matching security policy. If it finds a matching security policy, the security policy's action is applied to the traffic.



NOTE: Refer to the Junos OS documentation (available at https://www.juniper.net/documentation/en_US/release-independent/junos/information-products/pathway-pages/junos/product/) for a particular release and device. There you can find detailed information on the configuration parameters for that device.

To modify the authentication source:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices whose configuration you want to modify.

3. Click **More** or use the right-click menu and select **Configuration > Modify Configuration**.

The Modify Configuration page appears.

4. Click the **Authentication Source** link in the left-navigation menu.

The Device Information Source page is displayed.

5. Select an authentication source.

6. After modifying the configuration, cancel the changes, save the changes, preview the changes, or save the changes and deploy the configuration on the device. See "[Modifying the Configuration of Security Devices](#)" on page 261.

Viewing the Active Configuration of a Device in Security Director

You can view the active configuration of one or more devices on the Security Devices page.

To view the active configuration:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select one or more devices. From the More or right-click menu, select **Configuration > View Active Configuration**.

The View Active Configuration page appears, displaying the active configuration on the selected devices. The left pane displays the Junos OS configuration statement hierarchy and the right pane displays the CLI and XML views of the configuration; the CLI configuration is displayed by default.

3. Select the actions that you want to perform by using the guidelines provided in [Table 132 on page 358](#).

4. Click **Close** to close the page.

You are returned to the Security Devices page.

Table 132: View Active Configuration Page Actions

| Action | Guideline |
|---|--|
| Navigate the configuration | Click the right arrow to expand the configuration and the down arrow to collapse the configuration. |
| Search the configuration | <p>Enter a search term in the text box in the left pane and mouse over the right side of the text box and click the magnifying glass icon.</p> <p>The configuration statements that match the search text are displayed in the left pane. Select one or more check boxes to view the CLI corresponding to the search results.</p> |
| Customize the configuration display settings | <p>Click the gears icon in the left pane to modify the configuration display settings on the View Active Configuration page.</p> <p>The Modify Custom Settings page appears. Configure the settings according to the guidelines provided in Table 133 on page 359.</p> <p>Click Save to save your changes.</p> <p>You are taken to the View Active Configuration page where the settings are applied.</p> |
| View the configuration as it appears in the CLI | Click the CLI tab to view the configuration as it appears on the device CLI. This is the default view. |
| View the configuration in XML format | Click the XML tab to view the configuration in XML format. |
| View selected parts of the configuration | <p>Select the check box for a configuration statement to view the details of the configuration stanza in the CLI or XML tabs.</p> <p>If you have configured the option to select multiple configuration statements, then you can view more than one configuration stanza by selecting multiple check boxes.</p> |

Table 132: View Active Configuration Page Actions *(Continued)*

| Action | Guideline |
|--------------------------|---|
| Export the configuration | <p>Click Export All to export the configuration for all the devices displayed.</p> <p>The Job Details: Export Device Configuration page appears, displaying the status of the job.</p> <p>Click the Download link to download the configuration (in ZIP format) to your local client.</p> <p>Click OK to close the Job Details page. You are returned to the View Active Configuration page.</p> |

Table 133: Modify Custom Settings

| Setting | Guideline |
|-----------------------|---|
| Multi Select | <p>Select this check box if you want to view more than one configuration statement hierarchy at the same time.</p> <p>This check box is clear by default.</p> |
| Alphabetical Ordering | Select this check box to view the configuration statement in alphabetical order. |

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Deleting Devices in Security Director

You can delete security devices from the Security Devices page. Deleting a device removes all device configuration and device inventory information from the Junos Space database. If provisioning services are associated with a device that you want to delete, you must remove the provisioning services before deleting the device.

To delete devices:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices that you want to delete. From the More or right-click menu, select **Operations > Delete Devices**.

The Delete Devices page appears displaying the devices selected for deletion.

3. Click **OK** to confirm the deletion.

The Job Details: Delete Device page appears displaying information about the job. If the job is successful, Junos Space deletes all device configuration and inventory information for the selected devices from the database.

4. Click **OK** to close the Job Details page.

You are returned to the Security Devices page.

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Rebooting Devices in Security Director

You can reboot security devices from the Security Devices page. You can also reboot virtual chassis setups, dual Routing Engine (RE) setups, and cluster setups. However, you cannot reboot logical systems (LSYS) or tenant systems (TSYS) devices in Security Director.



NOTE: You can only reboot devices for which the connection status is *Up*.

To reboot devices:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select the devices that you want to reboot. From the More or right-click menu, select **Operations > Reboot Devices**.

The Reboot Devices page appears displaying the devices selected for rebooting

3. Specify the parameters for rebooting devices according to the guidelines provided in [Table 134 on page 361](#).

4. Click **OK** to reboot the devices.

The Job Detail: Reboot Devices appears displaying the details of the job.

5. Click **OK** to close the Job Details page.

You are returned to the Security Devices page.



NOTE: You can view the job results from the Job Management page. If some of the devices fail to reboot, you can use the Retry on Failed Devices action to retry rebooting the devices that failed to reboot. See ["Retrying a Failed Job on Devices in Security Director" on page 206](#).

Table 134: Reboot Devices Settings

| Setting | Guideline |
|-------------------------------|--|
| Power off device after reboot | Select this check box if you want the devices to be powered off after the reboot. |
| Message | Enter a message that will be broadcast to users who are logged in to the devices being rebooted. |
| Type | Specify whether the devices should be rebooted immediately or later. If you specify that the operation should be run later, you must specify a start date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) for the reboot operation. |

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Resolving Key Conflicts in Security Director

Devices connect to Junos Space using an RSA key. When the device is disconnected or is down, a new RSA key can be generated from the Administration workspace of the Junos Space Network Management Platform. However, when the device comes back online, it will not be able to reconnect to Junos Space using this key. The Authentication Status column on the Security Devices page shows when the device is in the Key Conflict state. You can use the Resolve Key Conflict action in such instances to resolve the key conflict by providing the authentication credentials for the device.

To resolve key conflicts in one or more devices:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select the devices. From the More or right-click menu, select **Operations > Resolve Key Conflict**.
The Resolve Key Conflict page appears displaying the list of devices you selected.
3. For each device listed, select the device, click the **Edit** button, and enter the parameters according to the guidelines provided in [Table 135 on page 362](#).
4. Click the **Upload** button.
The Job Details: Upload RSA Keys page appears displaying the status of the job. The information about the devices and the status of the upload for each device is displayed in a table.
5. Click **OK** to close the Job Details page.
You are returned to the Security Devices page.

Table 135: Resolve Key Conflict Settings

| Setting | Guideline |
|------------|--|
| IP Address | Displays the IPv4 or IPv6 address of the device. |
| Username | Enter the username of the user on the device. |
| Password | Enter the corresponding password for user on the device. |

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Launching a Web User Interface of a Device in Security Director

You can access the Web User Interface of a device to manage it directly from Security Director. The device should have the required Web UI components installed and enabled.



NOTE: Once launched, the Web UI appears in a new tab in your browser. Ensure that you enable pop-ups on your browser for the device for which the Web UI is being launched.

To launch the Web UI of a device:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select the device for which you want to launch the Web UI. From the More or right-click menu, select **Access > Launch Device WebUI**.
The Juniper Web Device Manager page appears in a new tab or browser window.
3. Specify the login credentials according to the guidelines provided in [Table 136 on page 363](#).
4. Click **Log In** to log in to the device.
If the authentication credentials are correct, you are logged in to the device and can perform the desired operations on the device.

Table 136: Juniper Web Device Manager Settings

| Setting | Guideline |
|----------|-------------------------------------|
| Username | Username of the user on the device. |
| Password | Password of the user on the device. |

RELATED DOCUMENTATION

| |
|--|
| Using Features in Security Devices 237 |
| Security Devices Overview 240 |

Connecting to a Device by Using SSH in Security Director

You can establish an SSH connection to a device from the Security Devices page. You can also establish multiple SSH sessions to the same device. A new SSH terminal window is opened for every new connection to the device.



CAUTION: Some browser plug-ins might cause undesirable behavior in open SSH windows; disabling such plug-ins might resolve the issue.

Before you open an SSH session to connect to a managed device, ensure that:

- You have the privileges of a Super Administrator or Device Manager.
- The status of the managed device is UP.



NOTE: Once launched, the SSH window appears in a new window. Ensure that you enable pop-ups on your browser for the device for which the application is being launched.

To connect to a device by using SSH:

1. Select **Devices > Security Devices.**

The Security Devices page appears.

2. Select the device to which you want to connect. From the More or right-click menu, select **Access > SSH to Device.**

The SSH to Device page appears in a new tab or browser window.

3. Specify the login credentials according to the guidelines provided in [Table 137 on page 364](#).

4. Click **Connect to log in to the device..**

Junos Space validates the fingerprint stored in the database with that on the device. If the fingerprints on the device match the fingerprints in the database, the SSH terminal is displayed. If the fingerprints do not match, you need to acknowledge the device SSH fingerprints. See "[Resolving Key Conflicts in Security Director](#)" on page 361.

5. Terminate the SSH session by typing **exit at the command prompt, and then press Enter.**

6. Click the X button in the browser window or tab to close the SSH window.

Table 137: SSH to Device Settings

| Setting | Guideline |
|------------|--|
| IP Address | Displays the IP address of the device. |
| Username | Enter the username of the user on the device. |
| Password | Enter the corresponding password for user on the device. |

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Importing Security Policies to Security Director

Security Director enables you to import firewall, NAT, and IPS policies from a device. All objects supported by Security Director are imported during the policy import process.

To import a device configuration to Security Director:

1. Select **Devices > Security Devices**.
2. Select a device and then click **More**.
3. Click **Import**.

The Import Configuration page appears.

You can also right-click the selected device and select **Import**.

4. Select the policy to be imported to Security Director.
5. Click **Next**.
6. Resolve any conflicts after you verify the information, if needed.



NOTE: Security Director creates a new policy each time you import one. If a policy with the same name but a different definition exists, then conflicts arise.

7. Click **Finish**.
Security Director displays a summary of the configuration changes.
8. Click the **Summary Report** link.
The summary report is downloaded as a ZIP file. This summary report .zip file contains the complete rules report as a PDF.
9. Click **OK** to complete the import process.
The Job Details page appears with the import success details.



NOTE: You can download the summary report from Job Details page. Click **Download Summary**. The summary report is downloaded in the ZIP format.

10. Click **OK**.

RELATED DOCUMENTATION

[Updating Security-Specific Configurations or Services on Devices | 243](#)

[Previewing Device Configurations | 371](#)

[Importing Device Changes | 366](#)

[Viewing Device Changes | 367](#)

[Refreshing Device Certificates | 372](#)

Importing Device Changes

You can import out-of-band changes, which are made on the device and managed by Security Director.

To import the device changes:

1. Select **Devices > Security Devices**
2. Select a device and then click **More**.
3. Select **Device Change > Import Device Change**.

The Import Device Change page appears.

You can also right-click the selected device and select **Device Change > Import Device Change**.

4. Select the policy to be imported.
5. Click **Next**.
6. Resolve any conflicts after you verify the information, if needed.
7. Click **Finish**.

Security Director displays a summary of the configuration changes.

RELATED DOCUMENTATION

[Updating Security-Specific Configurations or Services on Devices | 243](#)

[Importing Security Policies to Security Director | 365](#)

[Previewing Device Configurations | 371](#)

[Refreshing Device Certificates | 372](#)

[Viewing Device Changes | 367](#)

Viewing Device Changes

You can check the status of the security configuration changes, either in CLI or XML format.

To view the device changes:

1. Select **Devices > Security Devices**.
2. Select a device and then click **More**.
3. Click **Device Change > View Device Change**.

The View Device Change page appears.

You can also right-click the selected device and select **Device Change > View Device Change**.

4. Enable the required service types to preview the selected policies on the device. For example, enable Firewall Policy to preview the firewall policies on the device.
5. Click **OK**.

The View Configuration for x page appears, where, x is the configuration change name. For example, View configuration for 1002009SecGW01.

6. Select CLI or XML tab to check the status of the security configuration changes in the preferred format.
7. Click **OK**.

The configuration changes are displayed in both the CLI and XML tabs. You can push the configurations to the device after validating the changes.

RELATED DOCUMENTATION

[Updating Security-Specific Configurations or Services on Devices | 243](#)

[Importing Security Policies to Security Director | 365](#)

[Previewing Device Configurations | 371](#)

[Importing Device Changes | 366](#)

[Refreshing Device Certificates | 372](#)

Viewing and Exporting Device Inventory Details in Security Director

You can manage the device inventory from the Security Devices page. The device inventory is synchronized with the Junos Space database after the device is discovered. The device is resynchronized with Junos Space every time there is a change on the device (if Junos Space is the System of Record) or

if you trigger a manual resynchronization. When the device is synchronized, the device inventory in the Junos Space database matches the inventory on the device.

To view and export device inventory details:

1. Select **Devices > Security Devices.**

The Security Devices page appears.

2. Select one or more devices. From the More or right-click menu, select **View Inventory Details.**

The inventory details for the devices that you selected are displayed on a new page with three tabs: Physical Inventory, Physical Interfaces, and Logical Interfaces. The Physical Inventory tab is selected by default. [Table 138 on page 368](#) displays the fields on the Physical Inventory tab.

3. Click the export icon on the Physical Inventory tab to export the physical inventory details.

The Job Details: Export Physical Inventory page appears, displaying details of the job. When the job completes, click the **Download** link to download the inventory details.

Click **OK** to close the Job Details page.

4. Click the **Physical Interfaces tab to view the inventory details for the physical interfaces on the devices. [Table 139 on page 369](#) displays the fields on the Physical Interfaces tab.**

5. Click the export icon on the Physical Interfaces tab to export the physical interface details.

The Job Details: Export Physical Interface page appears, displaying details of the job. When the job completes, click the **Download** link to download the interface details.

Click **OK** to close the Job Details page.

6. Click the **Logical Interfaces tab to view the inventory details for the logical interfaces on the devices. [Table 140 on page 371](#) displays the fields on the Logical Interfaces tab.**

7. Click the export icon on the Logical Interfaces tab to export the logical interface details.

The Job Details: Export Logical Interface page appears, displaying details of the job. When the job completes, click the **Download** link to download the interface details.

Click **OK** to close the Job Details page.



NOTE: Physical inventory is not applicable for Logical Systems (LSYS) and Tenant Systems (TSYS).

Table 138: Physical Inventory Tab Fields

| Field | Description |
|--------|-------------------------------|
| Module | Type of module on the device. |

Table 138: Physical Inventory Tab Fields (Continued)

| Field | Description |
|------------------------|---|
| Device Name | Name of the device. |
| Model Number | Model number of the device component. |
| Model | Model of the device. |
| Part Number | Part number of the device. |
| Vendor Part Number | Part number of the optical module installed on the device. |
| Vendor Material Number | Material number of the optical module installed on the device. |
| Revision | Revision number of the device. |
| Serial Number | Serial number of the device component. |
| Status | Status of the component: Online or Offline. The status is updated during periodic resynchronization of configuration information and on notification. |
| Domain | Domain to which the device is assigned. |
| Description | Description of the component. |

Table 139: Physical Interfaces Tab Fields

| Field | Description |
|-------------------------|--|
| Device Name | Name of the device. |
| Physical Interface Name | Standard information about the interface, in the format <i>type-/fpc/pic/port</i> , where <i>type</i> is the media type that identifies the network device; for example, ge-0/0/6. |

Table 139: Physical Interfaces Tab Fields *(Continued)*

| Field | Description |
|--------------------|--|
| IP Address | IPv4 address of the interface. |
| IPv6 address | IPv6 address of the interface, if configured. |
| Logical Interfaces | <p>Link to the table of logical interfaces for the device.</p> <p>Click View to view the logical interfaces for the corresponding physical interface.</p> |
| MAC Address | MAC address of the device. |
| Operational Status | Operational status of the interface: up or down. |
| Admin Status | Admin status of the interface: up or down. |
| Link Level Type | Link level type of the physical interface. |
| Link Type | Physical interface link type: full duplex or half duplex. |
| Speed | Speed (in MBps) at which the data transfer occurs in the interface. |
| MTU | Maximum transmission unit size (in bytes) on the physical interface. |
| Description | An optional description for this interface configured on the device. It can be any text string of 512 or fewer characters. Any longer string is truncated to 512. If no description was configured, this field is blank. |
| Domain | Domain to which the device is assigned. |

Table 140: Logical Interfaces Tab Fields

| Field | Description |
|----------------|--|
| Device Name | Name of the device. |
| Interface Name | Standard information about the interface, in the format <i>type- /fpc/pic/port.logical interface</i> , where <i>type</i> is the media type that identifies the network device; for example, ge-0/0/6.135. |
| IP Address | IP address for the logical interface. |
| IPv6 Address | IPv6 address for the interface, if configured. |
| Encapsulation | Encapsulation type used on the logical interface. |
| VLAN | VLAN ID for the logical interface. |
| Description | An optional description for this interface configured on the device. It can be any text string of 512 or fewer characters. Any longer string is truncated to 512. If no description was configured, this field is blank. |
| Domain | Domain to which the device is assigned. |

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Previewing Device Configurations

You can preview the configuration changes that will be pushed to the security device. You can preview the changes in either CLI or XML format.

To preview the configuration changes:

1. Select **Devices > Security Devices**.
2. Select a device and then click **More**.
3. Click **Configuration** and then select **Preview Changes**.

You can also right-click the selected device and select **Configuration > Preview Changes**.

4. Enable the required service types to preview the selected policies on the device. For example, enable Firewall Policy to preview the firewall policies on the device.
5. Click **OK**.
6. Select either the CLI or XML tab to check the status of the security configuration changes in the preferred format.
7. Click **OK**.

The configuration changes are displayed in both the CLI and XML tabs. You can push the configurations to the device after validating the changes.



NOTE: If the configuration changes are more than 2 MB, you can download the CLI configuration in PDF format.

RELATED DOCUMENTATION

[Updating Security-Specific Configurations or Services on Devices | 243](#)

[Importing Security Policies to Security Director | 365](#)

[Viewing Device Changes | 367](#)

[Importing Device Changes | 366](#)

[Refreshing Device Certificates | 372](#)

Refreshing Device Certificates

You can refresh the certificate of a device to authenticate VPN and SSL. When you add a device manually, you need to synchronize the certificate, which can be done on more than one device at a time.



NOTE: You can refresh the device certificates for root device and LSYS device.

To refresh the device certificate:

1. Select **Devices > Security Devices**.
2. Select **device** you want to refresh the certificate and then click **More**.
3. Click **Refresh Certificate**.

The Refresh Device Certificates page appears.

You can also right-click the selected device and select **Refresh Certificate**.

4. Select the device(s) for certificate synchronization and click **OK**.
The Job Details page appears and provides the status of the certificate synchronization.
5. Click **View**.
The list of available certificates on the device appears.
6. Click **OK**.
Refreshing the device certificate process is complete.

RELATED DOCUMENTATION

[Updating Security-Specific Configurations or Services on Devices | 243](#)

[Connecting to a Device by Using SSH in Security Director | 363](#)

[Previewing Device Configurations | 371](#)

[Importing Device Changes | 366](#)

[Viewing Device Changes | 367](#)

Assigning Security Devices to Domains

You can assign devices to domains from the Security Devices page. By default, devices belong to the domain in which you are present when you run the device discovery profile.

To assign devices to a domain:

1. Select **Devices > Security Devices**.
The Security Devices page appears.
2. Select the devices that you want to assign to one or more domains. From the More or right-click menu, select **Assign Device to Domain**.
The Assign Device to Domains page appears, displaying the list of domains to which you can assign the devices.
3. Select one or more domains by clicking the check boxes corresponding to the domains.
4. Specify whether warnings should be ignored for logical systems or tenant systems by selecting the **Ignore Warnings** check box.

5. Click **Assign**.

The Assign Objects to Domain Status page appears, displaying the status of the domain assignment.



NOTE: Although the status of the domain assignment is displayed as success, when the Ignore Warnings check box is selected it is possible that the selected devices are not assigned to the domain. You can verify if the assign to domain action was successful or not by viewing the corresponding audit log entry in the Audit Log page in Junos Space Network Management Platform. If the assignment was unsuccessful, you can find out the reasons from the audit log entry, rectify the problem, and retry the assignment.

6. Click **OK**.

You are returned to the Security Devices page.

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

[Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director | 1436](#)

Acknowledging Device SSH Fingerprints in Security Director

You use the Acknowledge Device Fingerprint action to acknowledge the SSH fingerprints received from the device or to resolve any SSH fingerprint conflicts between the fingerprints stored in the Junos Space database and that on the device. This action is enabled only if the Authentication Status column on the Security Devices page displays one of the following statuses: Credentials Based – Unverified; Key Based – Unverified; Key Conflict – Unverified; or Fingerprint Conflict.

To acknowledge SSH fingerprints in one or more devices:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Select one or more devices. From the More or right-click menu, select **Acknowledge Device Fingerprint**.

The Acknowledge Device Fingerprint page appears, displaying the list of devices you selected. [Table 141 on page 375](#) displays the fields on this page.

3. For each device listed, select the device, click the **Edit** button, and enter the new fingerprint of the device in the New Fingerprint field.

The fingerprint must be a string of 16 octets in hexadecimal format with numbers and lowercase letters separated by colons.

4. Click **OK**.

The Confirm Acknowledge page appears asking you to confirm the fingerprint modification.

5. Click **Yes**.

The Job Details: Acknowledge Device Fingerprint page appears, displaying details of the job. If a fingerprint entered for a device is in the valid format, then that fingerprint is updated in the Junos Space database.

6. Click **OK** to close the Job Details page.

You are returned to the Security Devices page.

Table 141: Acknowledge Device Fingerprint Settings

| Field | Description |
|-----------------------|---|
| Hostname | Displays the hostname of the device. |
| IP Address | Displays the IPv4 or IPv6 address of the device. |
| Authentication Status | Displays the authentication status of the device. |
| Fingerprint | If the Authentication Status column displays Fingerprint Conflict, this field displays the current fingerprint value of the device as stored in the Junos Space database. This field does not display any value if the Authentication Status column displays Key Conflict – Unverified; Key Based – Unverified; or Credentials Based – Unverified. |
| New Fingerprint | Displays the new fingerprint value received from the device if the Authentication Status field displays Fingerprint Conflict. Displays the current fingerprint value of the device as stored in the Junos Space database if the Authentication Status field displays Key Conflict – Unverified; Key Based – Unverified; or Credentials Based – Unverified |

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Viewing Security Device Details

You can view the general details and license details of security devices.

To view the details of a device:

1. Select **Devices > Security Devices**.

The Security Devices page appears.

2. Right-click a device and select **View Device Details** from the shortcut menu. Alternatively, mouse over a device entry and click the Detailed View icon that appears.

The Device Detail page appears.

You can view the device details in the General tab. The fields displayed in the General tab are a subset of the fields displayed on the Security Devices page. See ["Security Devices Main Page Fields" on page 376](#) for details.

You can view the license details such as license name, license validity start date, license expiry date, status of the license, and whether the license is active. Click **Push License** to deploy a license on the device. See ["Managing Licenses" on page 466](#).

3. Click **OK**.

You are returned to the Security Devices page.

RELATED DOCUMENTATION

[Using Features in Security Devices | 237](#)

[Security Devices Overview | 240](#)

Security Devices Main Page Fields

Use this page to view the security devices managed by Junos Space. You can perform various actions such as uploading keys, modifying the device configuration, updating devices, viewing and importing device changes, viewing the inventory details, and so on. You can filter and sort the devices displayed, and view the details of each device. [Table 142 on page 377](#) describes the fields on this page.

Table 142: Security Devices Main Page Fields

| Field | Description |
|----------------|--|
| Device Name | <p>Name of the managed device.</p> <p>You can view both LSYS and TSYs devices. Click on the link to view the device list.</p> |
| IP Address | IP address of the device. |
| OS Version | Operating system firmware version running on the device (This field displays Unknown for an unmanaged device.) |
| Schema Version | Device Management Interface (DMI) schema version that Junos Space uses for the device. (This field displays Unknown for an unmanaged device.) |
| CPU | Average CPU usage of a device that displays the CPU usage of both a control plane and a forwarding plane. Starting in Junos Space Security Director Release 16.1, for an SRX Series chassis cluster, you can view the usage of an individual user's CPU. Hover over the CPU meter to view the usage as a percentage. |
| Storage | Average partition usage of a device. Starting in Junos Space Security Director Release 16.1R1, for an SRX Series chassis cluster, you can view the usage of an individual user's partition. Hover over the storage meter to view the usage as a percentage. |

Table 142: Security Devices Main Page Fields *(Continued)*

| Field | Description |
|-----------------------|---|
| Authentication Status | <p>Authentication status of the device:</p> <ul style="list-style-type: none"> • Key Based—The authentication key was successfully uploaded. • Credential Based—A key upload was not attempted; log in to this device with your credentials. • Key Based - Unverified—The new fingerprint on the device is not updated in the Junos Space database. • Key Conflict - Unverified—Key upload was unsuccessful, the new fingerprint on the device is not updated in the Junos Space database. • Credentials Based - Unverified—The new fingerprint on the device is not updated in the Junos Space database. • Key Conflict—The device was not available; the key upload was unsuccessful. • Fingerprint Conflict—The fingerprint stored in the Junos Space database differs from the fingerprint on the device. • NA—The device is unmanaged. |
| Connection Status | <p>Connection status of the device in Junos Space. Different values are displayed in network as system of record (SOR) and Junos Space as SOR modes:</p> <ul style="list-style-type: none"> • Up—The device is connected to Junos Space. When the connection status is up, in network as SOR mode, the Configuration Status is Out Of Sync, Synchronizing, In Sync, or Sync Failed. In Junos Space as SOR mode, the status is In Sync, Device Changed, Space Changed, Both Changed, or Unknown (which usually means connecting). • Down—The device is not connected to Junos Space. When the Connection status is down, the Configuration Status is None or Connecting. • NA—The device is unmanaged. |
| Feed Source | Type of source from where threat feeds are received. |
| Feed Source Status | Status of the feed source. |

Table 142: Security Devices Main Page Fields *(Continued)*

| Field | Description |
|------------------|---|
| Managed Status | <ul style="list-style-type: none"> • In Sync • SD Changed • Device Changed • SD Changed, Device Changed |
| Platform | Model number of the device (For an unmanaged device, the platform details are discovered through SNMP. If the platform details cannot be discovered, the field displays Unknown.) |
| Pending Services | List of the policy names that are assigned and published. Versioning information is included for firewall and NAT policies. |

Table 142: Security Devices Main Page Fields *(Continued)*

| Field | Description |
|----------------------|---|
| Configuration Status | <p>Current state of the device configuration:</p> <ul style="list-style-type: none"> • Connecting—Junos Space has sent a connection remote procedure call (RPC) and is waiting for the first connection from the device. • Undefined—The device is in this state only for a short period when Junos Space is set as the SOR. • Unknown—This state occurs in the following cases: <ul style="list-style-type: none"> • When the device disconnects from Junos Space. The device status remains Unknown until the device reconnects to Junos Space and the configuration status of the device is checked against the Junos Space database. It will be in this state until the device connects • If Junos Space is trying to push or synchronize changes to the device based on the workflow for accepting or rejecting out-of-band changes on the device and the push or synchronize fails. • In Sync—The synchronization operation has completed successfully; Junos Space and the device are synchronized. • None—The device is discovered, but Junos Space has not yet sent a connection RPC. • Out Of Sync—In network as SOR mode, the device has connected to Junos Space, but the synchronization operation has not been initiated, or an out-of-band configuration change on the device was detected and auto-resynchronization is disabled or has not yet started. • Sync Failed—The synchronization operation failed. • Synchronizing—The synchronization operation has started as a result of device discovery, a manual resynchronization operation, or an automatic resynchronization operation. • Space Changed—In Junos Space as SOR mode, there are changes made to the device configuration from Junos Space. • Device Changed—In Junos Space as SOR mode, there are changes made to the device configuration from the device CLI. |

Table 142: Security Devices Main Page Fields *(Continued)*

| Field | Description |
|--------------------|---|
| | <ul style="list-style-type: none"> • Space & Device Changed—In Junos Space as SOR mode, there are changes made to the device configuration from the device CLI and Junos Space. Neither automatic nor manual resynchronization is available. • In-RMA—The configuration of the defective device is maintained in Junos Space so that the device can be reconnected and managed when it is replaced. • Reactivating—The defective device has been replaced and the reactivation of the replacement device to bring it back under management has started. • Reactivate Failed—The operation to reactivate the device has failed. • Unmanaged—The device is unmanaged. • Waiting for deployment—The modeled device is unreachable and needs to be activated. • Modeled—The device is modeled. |
| RAM | Average RAM usage of a device that displays the RAM usage of both a control plane and a forwarding plane. Starting in Junos Space Security Director Release 16.1R1, for an SRX Series chassis cluster, you can view the usage of an individual user's RAM. Hover over the RAM meter to view the usage as a percentage. |
| Device Family | Device family of the selected device. (For an unmanaged device, this is the same as the vendor name provided. The field displays Unknown if no vendor name was provided and if SNMP is not used or has failed.) |
| Serial Number | Serial number of the device chassis (This field displays Unknown for an unmanaged device.) |
| Assigned Services | List of all assigned services: firewall, NAT, IPS, and VPN. When a device is assigned to any firewall policy including NAT, IPS and VPN, the policy name is displayed. |
| Installed Services | List of the policy names that are published and updated to the device (this includes policy names for firewall, NAT, IPS, and VPN). Versioning information is included for firewall and NAT policies. |

Table 142: Security Devices Main Page Fields *(Continued)*

| Field | Description |
|---------------------|--|
| Fab Link Status | <ul style="list-style-type: none"> • Up • Down |
| Control Link Status | <ul style="list-style-type: none"> • Up • Down |
| Domain | Domain to which the device belongs. |
| Last Rebooted Time | Date and time when the device was last rebooted manually (that is, the device status changes from Down to Up) or from Junos Space. |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.1 | Starting in Junos Space Security Director Release 16.1, for an SRX Series chassis cluster, you can view the usage of an individual user's CPU. |
| 16.1 | Starting in Junos Space Security Director Release 16.1R1, for an SRX Series chassis cluster, you can view the usage of an individual user's partition. |
| 16.1 | Starting in Junos Space Security Director Release 16.1R1, for an SRX Series chassis cluster, you can view the usage of an individual user's RAM. |

RELATED DOCUMENTATION

[Using Features in Security Devices](#) | 237

[Security Devices Overview](#) | 240

Device Discovery

IN THIS CHAPTER

- [Overview of Device Discovery in Security Director | 383](#)
- [Creating Device Discovery Profiles in Security Director | 384](#)
- [Editing, Cloning, and Deleting Device Discovery Profiles in Security Director | 388](#)
- [Running a Device Discovery Profile in Security Director | 390](#)
- [Viewing the Device Discovery Profile Details in Security Director | 390](#)
- [Device Discovery Main Page Fields | 392](#)

Overview of Device Discovery in Security Director

You use the device discovery feature to add devices to Junos Space. Device discovery is the process of finding a device and then synchronizing the device inventory and configuration with the Junos Space database. To use device discovery, Junos Space must be connected to the device.

You discover devices in Junos Space Security Director by creating and using a device discovery profile. A device discovery profile contains information about discovery targets, probes used to discover devices, credentials for authentication, and device SSH fingerprints, and is used to discover, authenticate, and connect to the device.

During discovery, Junos Space connects to the physical device and retrieves the running configuration and the status information of the device. To connect with and configure devices, Junos Space uses the Juniper Networks Device Management Interface (DMI), which is an extension of the NETCONF network configuration protocol.

To discover network devices, Junos Space uses SSH, and (optionally) ping, and SNMP protocols.



NOTE: Starting in Junos Space Security Director Release 16.2, Security Director discovers both SRX Series devices and MX Series routers.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.2 | Starting in Junos Space Security Director Release 16.2, Security Director discovers both SRX Series devices and MX Series routers. |

RELATED DOCUMENTATION

[Creating Device Discovery Profiles in Security Director | 384](#)

[Device Discovery Main Page Fields | 392](#)

Creating Device Discovery Profiles in Security Director

Before You Begin

- Read the ["Overview of Device Discovery in Security Director" on page 383](#) topic.
- Review the Discovery Profiles main page to view the existing discovery profiles. See ["Device Discovery Main Page Fields" on page 392](#) for field descriptions.

Use this page to configure a device discovery profile that you can use to discover devices.

Device discovery is the process of finding a device and then synchronizing the device inventory and configuration with the Junos Space database. To use device discovery, Junos Space must be able to connect to the device.

To configure a device discovery profile:

1. Select **Devices > Device Discovery**.
The Device Discovery page appears.
2. Click the + icon.
The Create Discovery Profile page appears.
3. Complete the configuration according to the guidelines provided in [Table 143 on page 385](#).



NOTE: Fields marked with * are mandatory

4. Click **OK**.

A new device discovery profile is created and you are returned to the Device Discovery page. A Job Details page pops up after a few seconds and displays the details of the job scheduled.

5. Click **OK** to close the Job Details page.

Table 143: Discovery Profile Settings

| Setting | Description |
|------------------------------------|--|
| <i>Add Device Discovery Target</i> | |
| Discovery Profile Name | Enter a unique string containing only alphanumeric characters, spaces, and some special characters (- _.). The name cannot start with a space and the maximum length is 32 characters. |
| Discovery Parameters | Specify whether the discovery parameters are entered manually or by using a comma-separated values (CSV) file. |
| Target Type | Select one of the options to specify the device targets, based on whether you want to discover a single device or multiple devices. |
| Target Details | <p>Select either IP address or hostname for the target type.</p> <p>If the target type is IP address, then enter the IPv4 or IPv6 address of the device that you want to discover based on the IP mode enabled in Junos Space Network Management Platform.</p> <p>If the target type is hostname, then enter the hostname of the device that you want to discover.</p> <p>Click Next to continue.</p> |
| Start IP Address | Enter the starting IPv4 or IPv6 address of the range of IP addresses for the devices that you want to discover. |
| End IP Address | <p>Enter the ending IPv4 or IPv6 address of the range of IP addresses for the devices that you want to discover.</p> <p>NOTE: The maximum number of IP addresses for any target type is 1024.</p> <p>Click Next to continue.</p> |

Table 143: Discovery Profile Settings (*Continued*)

| Setting | Description |
|------------------------|---|
| IP Subnet | Enter the IPv4 or IPv6 address or the IP address and prefix of the subnet to which the devices that you want to discover belong. |
| Subnet | <p>Enter the subnet mask of the subnet to which the devices that you want to discover belong. If you enter a prefix in the preceding field, this field displays the subnet mask calculated based on the prefix.</p> <p>Click Next to continue.</p> |
| <i>Specify Probes</i> | |
| Use Ping | Select this check box to use ping during the device discovery process. If you select this check box, you must configure devices to respond to ping requests. |
| Use SNMP | <p>Select this check box to use SNMP during the device discovery process. If you select this check box, you must configure SNMP on the devices being discovered.</p> <p>Click Back to return to the previous section or Next to continue.</p> |
| SNMP Version | Select the SNMP version (V1/V2C, or V3). |
| Community | <p>For SNMP V1 or V2C, specify the SNMP community string.</p> <p>Click Back to return to the previous section or Next to continue.</p> |
| Username | For SNMP V3, specify the username used for authentication. |
| Authentication Type | For SNMP V3, specify the type of authentication used (MD5, SHA1, or None). |
| Authenticated Password | For MD5 or SHA1 as the authentication type, specify the authentication password to be used. |
| Privacy Type | For SNMP V3, specify the type of privacy to be used (AES128, DES, or None). |

Table 143: Discovery Profile Settings (*Continued*)

| Setting | Description |
|-----------------------------------|---|
| Privacy Password | For AES128 or DES as the privacy type, specify the privacy password to be used. Click Back to return to the previous section or Next to continue. |
| <i>Specify Credentials</i> | |
| Authentication Type | Specify whether you want to use credential-based or key-based authentication. |
| Username | Specify the username for credential-based or key-based authentication. Click Back to return to the previous section or Next to continue. |
| Password | For credential-based authentication, specify the password for logging in to the device. |
| Confirm Password | For credential-based authentication, reenter the password for confirmation. Click Back to return to the previous section or Next to continue. |
| <i>Specify Device Fingerprint</i> | |
| Specify Device Fingerprint | Specify the device fingerprint for each device target. The fingerprint must be a string of 16 octets in hexadecimal format with numbers and lowercase letters separated by colons. This is an optional step. Click Back to return to the previous section or Next to continue. |
| <i>Schedule Discovery Job</i> | |
| Type | Specify whether you want to run the device discovery job immediately or schedule it for a later date and time. |
| Recurrence | Select this check box if you want the device discovery job to recur and specify the details of the recurrence. |

Table 143: Discovery Profile Settings *(Continued)*

| Setting | Description |
|---|---|
| Import policies automatically after device(s) being discovered successfully | <p>Select this check box if you want to import and publish policies into the Junos Space database after the devices are discovered and managed by Junos Space.</p> <p>Click Back to return to the previous section or Finish to go to a summary page.</p> |

RELATED DOCUMENTATION

[Viewing the Device Discovery Profile Details in Security Director | 390](#)

[Editing, Cloning, and Deleting Device Discovery Profiles in Security Director | 388](#)

[Running a Device Discovery Profile in Security Director | 390](#)

Editing, Cloning, and Deleting Device Discovery Profiles in Security Director

IN THIS SECTION

- [Editing Device Discovery Profiles | 388](#)
- [Cloning Device Discovery Profile | 389](#)
- [Deleting Device Discovery Profiles | 389](#)

You can edit, clone, and delete discovery profiles from the Device Discovery page. You clone a device discovery profile to easily create a new discovery profile. You delete discovery profiles that are not used.

Editing Device Discovery Profiles

To edit a device discovery profile:

1. Select **Devices > Device Discovery**.
The Device Discovery page appears.
2. Select the discovery profile that you want to edit, and click the pencil icon.

The Edit Discovery Profile page appears, showing the same fields that are presented when you create a discovery profile.

3. Edit the discovery profile fields as needed.



NOTE: Some fields cannot be edited.

4. Click **OK** to save the changes.

The changes are saved and you are returned to the Device Discovery page. A Job Details page pops up after a few seconds and displays the details of the job scheduled.

5. Click **OK** to close the Job Details page.

Cloning Device Discovery Profile

To clone a device discovery profile:

1. Select **Devices > Device Discovery**.

The Device Discovery page appears.

2. Select the discovery profile that you want to clone, and click the **Clone** button or select **Clone** from the More or right-click menu.

The Clone Discovery Profile page appears, showing the same fields that are presented when you create a discovery profile.

3. Modify the discovery profile fields as needed.

4. Click **OK** to save the changes.

The cloned discovery profile is created and you are returned to the Device Discovery page. A message indicating that the device discovery profile was cloned is displayed at the top of the page. A Job Details page pops up after a few seconds and displays the details of the job scheduled.

5. Click **OK** to close the Job Details page.

You are returned to the Device Discovery page

Deleting Device Discovery Profiles

To delete one or more device discovery profiles:

1. Select **Devices > Device Discovery**.

The Device Discovery page appears.

2. Select the device discovery profiles that you want to delete, and click the X icon.

A warning dialog box appears asking you to confirm the deletion.

3. Click **Yes** to delete the selected device discovery profiles.

The device discovery profiles are deleted and you are returned to the Device Discovery page.

RELATED DOCUMENTATION

[Creating Device Discovery Profiles in Security Director | 384](#)

[Overview of Device Discovery in Security Director | 383](#)

[Running a Device Discovery Profile in Security Director | 390](#)

Running a Device Discovery Profile in Security Director

In the Device Discovery page, you can run a device discovery profile immediately in order to discover devices.

If you previously created a device discovery profile that was scheduled to run later and you now want to run the discovery profile immediately, this feature enables you to do so without modifying the profile.

To run a device discovery profile immediately:

1. Select **Devices > Device Discovery**.

The Device Discovery page appears.

2. Select the device discovery profile and click the **Run Now** button.

A device discovery job is triggered. After a few seconds, the Job Details page appears displaying information on the job.

3. Click **OK** to close the Job Details page.

You are returned to the Device Discovery page.

RELATED DOCUMENTATION

[Creating Device Discovery Profiles in Security Director | 384](#)

[Overview of Device Discovery in Security Director | 383](#)

Viewing the Device Discovery Profile Details in Security Director

You can view the details of device discovery profiles, which allows you to view information about a device discovery profile at a quick glance on one page, from the Device Discovery page.

To configure a device discovery profile:

1. Select **Devices > Device Discovery**.

The Device Discovery page appears.

2. Double-click the discovery profile for which you want to view the details. Alternatively, select the discovery profile and from the More or right-click menu, select **View**.

The View Discovery Profile page appears. [Table 144 on page 391](#) describes the fields on this page.

3. Click **OK**.

You are returned to the Device Discovery page

Table 144: View Discovery Profile Page Fields

| Field | Description |
|------------------------|--|
| <i>Device Target</i> | |
| Discovery Profile Name | Name of the device discovery profile |
| Target Type | Indicates the type of target used to discover devices (IP address, IP address range, IP subnet, hostname, or imported from a comma-separated values (CSV) file). |
| Target Details | Indicates the value of the specified target type. For example, if the target type is IP range, then the IP address range is displayed. |
| <i>Probes</i> | |
| Use Ping | Indicates whether ping is enabled for device discovery or not. |
| Use SNMP | Indicates whether SNMP is enabled for device discovery or not. |
| SNMP Version | If SNMP is enabled, indicates the version of SNMP used for device discovery. |
| Community | Displays the community string used for SNMPv1 and SNMPv2c. |
| Username | For SNMPv3, indicates the username of the user that is used for authentication on the device. |
| Privacy Type | Indicates the type of privacy used for SNMPv3. |
| Key-Based | Indicates whether key-based authentication is used or not. |

Table 144: View Discovery Profile Page Fields (Continued)

| Field | Description |
|---------------------|---|
| <i>Credentials</i> | |
| Authentication Type | Indicates whether the authentication is credential-based or key-based. |
| Username | Displays the username for credential-based or key-based authentication. |
| <i>Fingerprints</i> | |
| Hostname/IP | Displays the hostname or IP address of the device. |
| Fingerprint | Displays the fingerprint for the device. |

RELATED DOCUMENTATION
[Creating Device Discovery Profiles in Security Director | 384](#)
[Overview of Device Discovery in Security Director | 383](#)

Device Discovery Main Page Fields

Use this page to view, create, edit, clone, and delete device discovery profiles. You can filter and sort the device discovery profiles displayed, and view details of each device discovery profile. [Table 145 on page 392](#) describes the fields on this page.

Table 145: Device Discovery Main Page Fields

| Field | Description |
|--------------------------|--------------------------------------|
| Device Discovery Profile | Name of the device discovery profile |

Table 145: Device Discovery Main Page Fields *(Continued)*

| Field | Description |
|----------------|--|
| Target Type | Indicates the type of target used to discover devices (IP address, IP address range, IP subnet, hostname, or imported from a comma-separated values (CSV) file). |
| Target Details | Indicates the value of the specified target type. For example, if the target type is IP range, then the IP address range is displayed. |
| Probes | Indicates the version of the SNMP probes used. |
| Username | Indicates the username of the user that is used for authentication on the device. |
| Key-Based | Indicates whether key-based authentication is used or not. |
| Schedule | Indicates the date and time at which the device discovery profile is scheduled to run. |
| Recurrence | If the recurrence is configured for the device discovery profile, this field displays the recurrence details. |

RELATED DOCUMENTATION

[Creating Device Discovery Profiles in Security Director | 384](#)

[Overview of Device Discovery in Security Director | 383](#)

[Running a Device Discovery Profile in Security Director | 390](#)

Secure Fabric

IN THIS CHAPTER

- [Creating Secure Fabric and Sites | 394](#)
- [Secure Fabric Overview | 396](#)
- [Adding Enforcement Points | 398](#)
- [Editing or Deleting a Secure Fabric | 401](#)
- [Logical System and Virtual Routing and Forwarding Instance Overview | 401](#)
- [About the Secure Fabric Tenants Page | 404](#)
- [Create Secure Fabric Tenants | 405](#)

Creating Secure Fabric and Sites

You can create sites within your secure fabric from the secure fabric page.

Before You Begin

- Plan out your sites in advance. A site is a grouping of network devices, including firewalls and switches, that contribute to threat prevention.
- Keep in mind that when you create a site, you must identify the perimeter firewalls so you can enroll them with Juniper ATP Cloud/JATP.
- If you want to enforce an infected host policy within the network, you must assign a switch to the site.
- SRX Series devices cannot belong to multiple sites.
- MX Series devices associated with tenants can belong to multiple sites.
- Sites that are associated with tenants do not need switches as enforcement points.
- Switches and connectors *cannot* be added to the same site.

To create a site within your secure fabric:

1. Select **Devices>Secure Fabric**.
2. Click the **+** icon.
3. Complete the configuration by using the guidelines in [Table 146 on page 395](#) below.
4. Click **OK**.
5. Create a new site and add an enforcement point to a site.

Table 146: Create Site Page Fields

| Field | Description |
|-------------|---|
| Site | Enter a unique string that must begin with an alphanumeric character and can include underscores; no spaces allowed; 63-characters maximum. |
| Tenant | Select a tenant. |
| Description | Enter a description; maximum length is 1024 characters. You should make this description as useful as possible for all administrators. |



WARNING: If you add certain SRX Series Firewalls to your Secure Fabric as enforcement points, you may see a warning that the device(s) must be reconfigured in enhanced mode and require a reboot. Here is a list of SRX models that may require rebooting for enhanced mode after being registered with Policy Enforcer/Juniper ATP Cloud/JATP.

- SRX340
- SRX345
- SRX650
- SRX240h2
- SRX320
- SRX300
- SRX550

RELATED DOCUMENTATION

Secure Fabric Overview

Secure Fabric Overview

Secure Fabric is a collection of sites which contain network devices (switches, routers, firewalls, and other security devices), used in policy enforcement groups. When threat prevention policies are applied to policy enforcement groups, the system automatically discovers to which sites those groups belong. This is how threat prevention is aggregated across your secure fabric.

- **Add Enforcement Points**—Click the **Add Enforcement Points** link to add Firewalls, Switches, and/or Connectors. There is a one-to-one mapping between devices with sites. If a device is mapped to a site, you cannot use the same device to map to a different site. The connector can be mapped to multiple sites. To filter by type, click the three vertical dots beside the search field and select the check box for the device type. See *Creating Secure Fabric and Sites* for more information.
- **Drag and Drop Enforcement Points**—From the main page, you can select enforcement points and drag them to other sites to include them there. When you drag, the enforcement point is disenrolled from the current site and gets enrolled to the new site where the enforcement point is dropped.

You can either have switches or a connector as enforcement points and not both. However, you can drag a switch and add to a site that already has a switch or SRX Series device.

Table 147 on page 396 shows fields on the Secure Fabric page.

Table 147: Secure Fabric Page Fields

| Field | Description |
|--------|---|
| Site | Specifies the name of the secure fabric site. |
| Tenant | Specifies the name of the secure fabric tenant. |

Table 147: Secure Fabric Page Fields *(Continued)*

| Field | Description |
|-------------------------|--|
| Enforcement Points | <p>Specifies the enforcement points for that particular site, if enforcement points are already added. If not added, click Add Enforcement Points to add Firewalls, Switches, or Connectors as enforcement points.</p> <p>A firewall icon is shown against some of the devices to indicate that they are the perimeter firewalls.</p> <p>For connectors, if you hover over the enforcement point, a tool tip is shown listing the corresponding vSRX devices with IP addresses and descriptions.</p> <p>NOTE: If tenant is configured to the site, only MX Series device can be added as enforcement points.</p> |
| IP | Specifies the IP address of the enforcement point, if the enforcement point is available. |
| Model | Specifies the type of the enforcement point. For example, vSRX, QFX, Connector. |
| Feed Source | Specifies the feed source to Policy Enforcer. |
| ATP Cloud Enroll Status | <p>Specifies the status of the Juniper ATP Cloud enrollment.</p> <p>The Success status with a warning symbol indicates that the device is enabled for cloud feeds only and there is no support for malware capability and enhanced mode. This field will be blank if the device fails to disenroll Juniper ATP Cloud.</p> <p>If the status is Failed, click Retry to enroll the device with Juniper ATP Cloud again. You can hover over the Failed status to see the corresponding job details. The device enroll retry option is available only when the status is Failed.</p> |
| Last Updated | Specifies the date on which the Secure Fabric page was last updated. |
| Description | Specifies the description that you had entered at the time of creating a secure fabric site. |

RELATED DOCUMENTATION

Creating Secure Fabric and Sites

Adding Enforcement Points

Use the Add Enforcement Points page to assign devices to a site and indicate which devices are perimeter firewalls. To enroll a device with Juniper ATP Cloud/JATP, you must assign one or more perimeter firewalls to each site.

**NOTE:**

- When a connector instance is assigned to a site, that particular connector instance will not be listed as available enforcement point for other sites.
- If you want to enforce an infected host policy within the network, you must assign a switch to the site.
- Assigning a device to the site will cause a change in the device configuration.

To add firewalls, switches, or connectors as an enforcement point:

1. Select **Devices>Secure Fabric**.

The Secure Fabric page appears.

2. Select the required site for which you want to add enforcement points, and click **Add Enforcement Points**.

The Add Enforcement Points page appears.

3. Complete the configuration as shown in [Table 148 on page 399](#).
4. Click **OK**.

Table 148: Fields on the Add Enforcement Points Page

| Field | Description |
|--------------------|--|
| Enforcement points | <p>All device types are displayed in the list. To filter by type, click the four vertical dots beside the search field and select the check box for the device type.</p> <p>To include a device, select the check box beside the device in the Unassigned Devices list and click the > icon to move them to the Selected list. The devices in the Selected list will be included in the site.</p> <p>There is a one-to-one mapping between SRX Series devices and connectors with sites. If a device or a connector is mapped to a site, you cannot use the same device or a connector to map to a different site.</p> <p>NOTE: Firewall devices are automatically enrolled with Juniper ATP Cloud/ATP Appliance as part of this step. No manual enrollment is required. The exceptions are “no selection” mode and Cloud Feeds only mode where Juniper ATP Cloud/ATP Appliance is not available and therefore no enrollment takes place. (see <i>Juniper ATP Cloud Configuration Type Overview</i>)</p> <p>The name of the connector type is shown as a tool tip when you hover over the name.</p> <p>NOTE: If a site is associated with a tenant, only MX Series devices are listed. Only those MX Series devices are listed that have the VRF associated with the tenant that the site is associated with.</p> |

Table 148: Fields on the Add Enforcement Points Page *(Continued)*

| Field | Description |
|------------------|--|
| Perimeter Device | <p>Select the edge firewall devices connecting the network to the internet. These devices will receive the threat feeds. Only firewall (SRX, vSRX) or router devices (MX) that you choose in the Enforcement Points field appear in the Perimeter Device field. You can have SRX Series and MX Series devices in the same site and select both as perimeter devices.</p> <p>You must configure MX Series router as a perimeter device to download Command & Control (C&C), allowlist, blocklist from Policy Enforcer. In the Juniper ATP Cloud/ATP Appliance with Juniper Connected Security mode, if you choose a MX Series router as a perimeter firewall device, the MX Series router is not enrolled to Juniper ATP Cloud/JATP. The Policy Enforcer URL is configured to the device and this enables the device to request and receive feeds from Policy Enforcer.</p> <p>NOTE: The policies to take action based on the feed are not configured in Policy Enforcer. The policies have to be manually configured on the MX Series device.</p> <p>Among the listed devices, you can choose which device to consider as a perimeter firewall. Only the perimeter firewall devices are enrolled to Juniper ATP Cloud/JATP. If you do not choose any firewall device as a perimeter firewall, all firewall devices listed in this field are enrolled to Juniper ATP Cloud/ATP Appliance as perimeter firewalls by default.</p> <p>You can delete devices manually from the field. However, all the firewall devices are still available in the list to include later. To remove firewall devices permanently from list, you must move the firewall devices from the Selected column to the Available column in the Enforcement points field.</p> <p>In any Juniper ATP Cloud/ATP Appliance configuration types, if there is a firewall device assigned to a site, it is mandatory to assign one of those devices as a perimeter firewall. If there are no firewall devices assigned to a site, the perimeter firewall list will be empty.</p> <p>When you enroll a connector instance to Policy Enforcer, the connector instance provides few vSRX Series devices. These vSRX devices are discovered by Policy Enforcer in Junos Space. Hover over the connector instances appearing in the Secure Fabric page to view the details of the corresponding vSRX devices. The vSRX Series devices associated with a connector are not shown in the Perimeter Firewall field. However, they are considered as perimeter firewalls.</p> <p>NOTE: If a branch SRX Series device is added and selected as a perimeter firewall, system reboots and a warning message is shown before rebooting the system.</p> |

RELATED DOCUMENTATION

Secure Fabric Overview

Editing or Deleting a Secure Fabric

You can edit or delete a secure fabric from the secure fabric main page.

To edit or delete a secure fabric:

1. Select *Devices* > *Secure Fabric*.

The secure fabric page appears.

2. Select the secure fabric you want to edit or delete and then right-click.

- Select **Edit** to modify your secure fabric. The secure fabric configuration page appears. Make the changes and click **OK**.
- Select **Delete** to remove your secure fabric. An alert message appears verifying that you want to delete your selection. Click **Yes** to delete your selection.

RELATED DOCUMENTATION

Creating Secure Fabric and Sites

Secure Fabric Overview

Creating Policy Enforcement Groups

Logical System and Virtual Routing and Forwarding Instance Overview

IN THIS SECTION

- [What's Next | 403](#)

Starting in Policy Enforcer Release 20.1R1, you can create a tenant representing an enterprise and you can assign a Virtual Routing and Forwarding (VRF) instance to a tenant. The custom feed sends feeds to Policy Enforcer at the logical system (LSYS) and VRF instance levels on the MX Series device. The VRF instance is dedicated to handling traffic within the tenant's private network. You can route the traffic on

the tenant's private network from the VRF instance on the MX Series device at one site to the same VRF instance on another MX Series device at a different site. The MX Series device supports multiple VRF instances assigned to different tenants. Therefore, a device can be shared with multiple tenants.



NOTE: In Policy Enforcer Release 20.1R1, only MX Series devices support LSYS and VRF instance. Also, only root logical system is supported. All the sites of a realm are either with tenants or without tenants.

When a tenant is created, a VRF instance is assigned to the tenant. When a site is associated with the tenant, only those devices that have the VRF instance associated with the tenant can be added to the site. When you associate a site with a realm in Juniper ATP Cloud/JATP, the tenant receives the feeds configured for the realm. The MX Series device performs policy enforcement based on tenant system and the associated Juniper ATP Cloud/ATP Appliance realm.


On an MX Series device, VRF instance based feeds such as C&C, allowlist, and blocklist are supported through custom feeds as shown in [Figure 27 on page 403](#).



NOTE: If you want to use the C&C global feed from ATP Cloud/JATP, then custom feed for C&C should not be configured in Policy Enforcer.

For, example: VRFx and VRFy are associated with tenants on MX device 1. Custom feed for tenant 1 (VRFx) and custom feed for tenant 2 (VRFy) are associated to each tenant. The custom feed provides LSYS and VRF instance information. When the device requests for a feed, Policy Enforcer provides all the feed data associated with the device (global without VRF instance information) in addition to all the data for the VRF instances configured on the device that are associated with the tenants configured on Policy Enforcer.

Figure 27: LSYS and VRF Instance Support

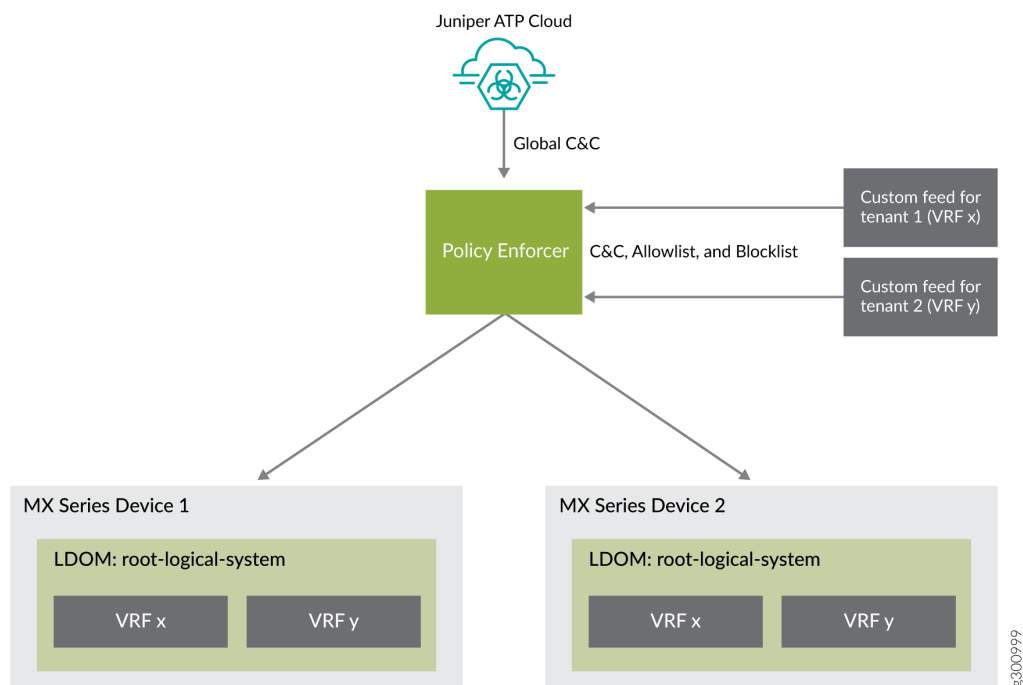

WHAT'S NEXT

Create Secure Fabric Tenants

Creating Secure Fabric and Sites

Adding Enforcement Points

[Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#)

Creating Custom Feeds

RELATED DOCUMENTATION

About the Secure Fabric Tenants Page

About the Feed Sources Page

About the Secure Fabric Tenants Page

IN THIS SECTION

- [Tasks You Can Perform | 404](#)
- [Field Descriptions | 404](#)
- [What's Next | 405](#)

To access this page, click **Devices > Secure Fabric > Tenants**.

Starting in Policy Enforcer Release 20.1R1, you can create a tenant representing an enterprise. When a tenant is created, a VRF instance is assigned to the tenant.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a tenant. See *Create Secure Fabric Tenants*.

You can also modify and delete a tenant.

Field Descriptions

[Table 149 on page 404](#) provides guidelines on using the fields on the Secure Fabric Tenants page.

Table 149: Fields on the Secure Fabric Tenants Page

| Field | Description |
|--------|--|
| Tenant | Specifies the name of the tenant. |
| LDOM | Specifies the root logical system. |
| VRF | Specifies the VRF created on the MX Series device. |
| Sites | Specifies the name of the sites. |

WHAT'S NEXT

| *Creating Secure Fabric and Sites*

RELATED DOCUMENTATION

| *Logical System and Virtual Routing and Forwarding Instance Overview*

Create Secure Fabric Tenants

To create a tenant within your secure fabric:

- 1. Select **Devices > Secure Fabric > Tenants**.
- 2. Click the + icon.
- 3. Complete the configuration using the guidelines in [Table 150 on page 405](#).
- 4. Click **OK**.

A tenant is created. After the tenant is created, it can be associated to a site.

Table 150: Create Tenant

| Field | Guidelines |
|-------|---|
| Name | Enter a unique string that must begin with an alphanumeric character and can include underscores; no spaces allowed; 63-character maximum. |
| LDOM | By default, the root logical system is selected, which you cannot edit. In Policy Enforcer Release 20.1R1, only root logical system is supported. |
| VRF | Enter the virtual routing and forwarding (VRF) instance name, which is created on the MX Series device. |

To edit a tenant, select a tenant and click the pencil icon.

To delete a tenant, select the delete icon. If a tenant is associated to a site, the tenant cannot be deleted.

What's Next

- *Creating Secure Fabric and Sites*

RELATED DOCUMENTATION

| *Logical System and Virtual Routing and Forwarding Instance Overview*

CHAPTER 41

NSX Managers

IN THIS CHAPTER

- Understanding Juniper Connected Security for VMware NSX Integration | 407
- Understanding Juniper Connected Security for VMware NSX-T Integration | 411
- Before You Deploy vSRX in VMware NSX Environment | 414
- Before You Deploy vSRX in VMware NSX-T Environment | 417
- About the NSX Managers Page | 418
- Download the SSH Key File | 421
- Add the NSX Manager | 423
- Registering Security Services | 425
- Editing NSX Managers | 427
- Viewing Service Definitions | 427
- Deleting the NSX Manager | 428
- Delete the NSX-T Manager | 431
- Deploying the vSRX as an Advanced Security Service in a VMware NSX Environment | 433
- Deploy the vSRX as an Advanced Security Service in a VMware NSX-T Environment | 448

Understanding Juniper Connected Security for VMware NSX Integration

IN THIS SECTION

- VMware NSX Overview | 408
- vSRX Integration with NSX Manager and Junos Space Security Director | 408
- High-Level Workflow | 409

This section presents an overview of how Juniper Networks vSRX Virtual Services Gateway integrates in the VMware NSX environment as an advanced security service with Junos Space Security Director as its security manager.

VMware NSX Overview

VMware NSX is VMware's network virtualization platform for the software-defined data center (SDDC). Similar in concept to server virtualization, network virtualization decouples network functions from physical devices. With VMware NSX, existing networks are immediately ready to deploy a software-defined data center. This enables data center operators to create, provision, and manage their networks with greater agility and operational efficiency. VMware NSX is completely managed by the VMware vCenter Server through the VMware vSphere Web Client.

The VMware NSX network virtualization platform is security orientated. The NSX Distributed Firewall (DFW) on all ESXi hosts to provide a set of kernel-based Layer 2 (L2) through Layer 4 (L4) stateful firewall features inside the ESXi hypervisor to deliver segmentation within each virtual network. Every virtual machine (VM) running in a VMware NSX environment can be protected with a full stateful firewall at a granular level. DFW operates at the vNIC of each individual VM.

VMware NSX, however, does not provide advanced L4 through L7 security services which are critical to provide complete protection in a SDDC environment. Environments that require advanced, application-level network security capabilities can leverage VMware NSX to distribute, enable, and enforce advanced network security services in a virtualized network context.

You can add the vSRX Virtual Services Gateway as a partner security service in the VMware NSX environment. The vSRX security service is managed by the Junos Space Security Director and VMware NSX Manager to deliver a complete and integrated virtual security solution for your SDDC environment. The vSRX provides advanced security services, including intrusion detection and prevention (IDP), and application control and visibility services through AppSecure.

DFW implements a stateful *traffic steering* mechanism that identifies what traffic should be sent to the vSRX VM. The protected VMs and the security service vSRX VM run on the same physical ESXi host.

vSRX Integration with NSX Manager and Junos Space Security Director

To deploy the advanced security features of the vSRX Virtual Services Gateway in the VMware NSX environment, the Junos Space Security Director, vSRX, and NSX Manager operate together as a joint solution to fully automate the provisioning and deployment of the vSRX to protect applications and data from advanced cyberattacks.

Integration of the vSRX VM in the VMware NSX environment involves use with the following management software:

- Junos Space Security Director—The centralized security management platform responsible for service registration and configuration of each vSRX instance. The Security Director provides you with the

ability to manage a distributed network of virtualized and physical firewalls from a single location. The Security Director functions as the management interface between the NSX Manager and the vSRX Services Gateway. Security Director manages the firewall policies on all vSRX instances.

- **NSX Manager**—The centralized network management component of VMware NSX. The NSX Manager provides integration with the VMware vCenter Server, which enables you to manage the VMware NSX environment through VMware vCenter. All VMware NSX operations and configuration is done through VMware vCenter, which communicates with the NSX Manager through Representational State Transfer (REST) APIs to delegate tasks to the responsible owner. The NSX Manager is always associated with a VMware vCenter Server.


The NSX Manager is added as a registered device in the Security Director and communication is bidirectionally synchronized by the Junos Space Policy Enforcer between the two management platforms. All shared objects (such as security groups) are synchronized between the NSX Manager and Security Director. This includes the IP addresses of all VMs in ESXi hosts, including the vSRX agent VMs. The Security Director creates an address group for each security group synchronized from the NSX Manager, along with the addresses of each member of the security group. The security groups discovered from the NSX Manager are mapped to dynamic address groups (DAG) in the Security Director. The Policy Enforcer retains the mapping of all IP addresses between security groups and dynamic address groups.

The vSRX Services Gateway is deployed as a partner service appliance in the VMware NSX environment. vSRX agent VMs are deployed for each ESXi host in a cluster. You use security policies to direct all VM traffic in an ESXi host through the vSRX VM (the Juniper security service) for L4 through L7 advanced security analysis.

High-Level Workflow

[Figure 28 on page 410](#) provides a high-level workflow of how the NSX Manager, Security Director, and vSRX interact to deploy vSRX as a security service in the VMware NSX environment.

Figure 28: vSRX, Security Director, and VMware NSX Integration Workflow

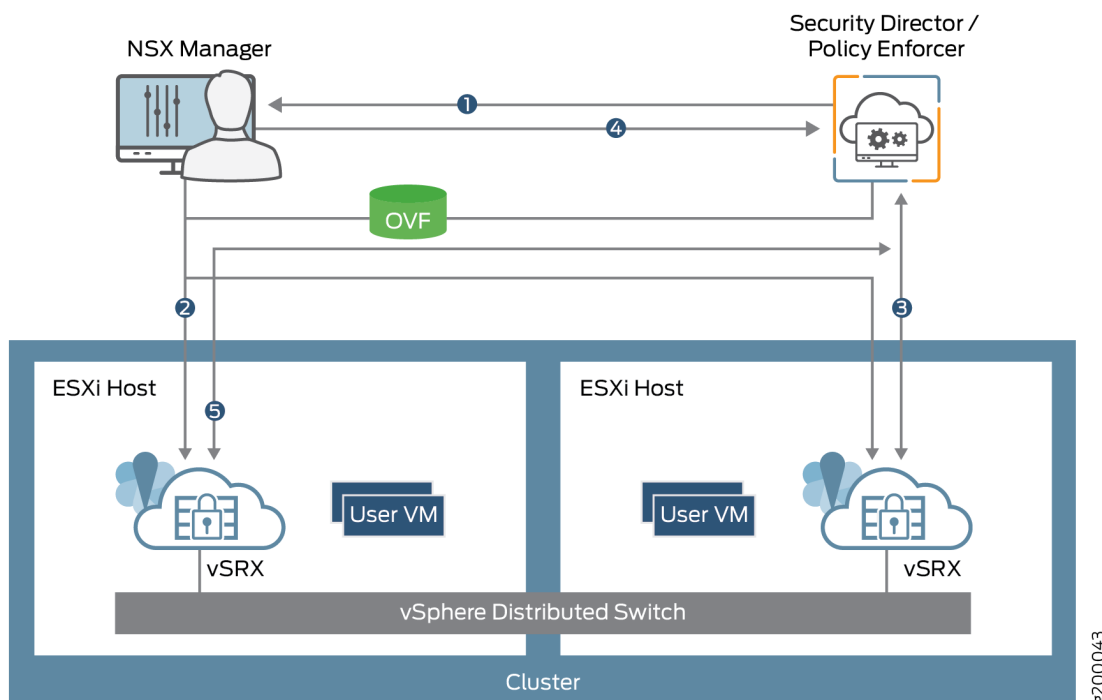

1. The Junos Space Security Director initiates communication with the NSX Manager. The Security Director discovers, registers, and adds the NSX Manager as a device in its database. The Security Director also deploys the vSRX instance from the .ovf file and registers it as a security service. The NSX Manager and its inventory of shared objects (for example, security groups) and addresses are then synchronized with the Security Director. The registration process uses the Policy Enforcer to enable bidirectional communication between the Security Director and the NSX Manager.
2. The NSX Manager deploys the registered vSRX instance as a Juniper security service for each ESXi host in a vSphere cluster. The deployment is based on the vSRX .ovf file. Whenever an ESXi host is added to a vSphere cluster, NSX Manager creates a vSRX agent VM in the new ESXi host. The same process occurs if an ESXi host is removed from a vSphere cluster.
3. After the vSRX agent VM is provisioned as a security service on each ESXi host in a vSphere cluster, NSX Manager notifies Security Director by using REST API callbacks. The Security Director pushes the initial boot configurations and Junos OS configuration policies to each vSRX agent VM to support the NSX security group. The Security Director is aware of the NSX security groups and corresponding address groups, and all deployed vSRX agent VMs are automatically discovered (one per ESXi host).

Security policies redirect relevant network traffic originating from the VMs in a specific security group in the ESXi hosts in a vSphere cluster to the Juniper security service vSRX agent VM in each ESXi host for further analysis.

4. The vCenter Server and the NSX Manager continue to send real-time updates on changes in the virtual environment to Security Director.
5. The Security Director dynamically synchronizes the object database to all vSRX agent VMs deployed in ESXi clusters. Security groups discovered from NSX Manager are mapped to a dynamic address group (DAG) in Security Director. The Security Director manages the firewall policies on the vSRX agent VMs. Using the Security Director, you create advanced security service policies (for example, an application firewall policy or an IPS policy) and push those policies to each vSRX agent VM in an ESXi host.

RELATED DOCUMENTATION

[NSX](#)

[VMware NSX Data Sheet](#)

[Junos Space Security Director](#)

[vSRX](#)

Understanding Juniper Connected Security for VMware NSX-T Integration

IN THIS SECTION

- [VMware NSX-T Overview | 411](#)
- [vSRX Integration with NSX-T Manager and Junos Space Security Director | 412](#)
- [High-Level Workflow | 413](#)

This section presents an overview of how Juniper Networks vSRX Virtual Services Gateway integrates in the VMware NSX-T environment as an advanced security service with Junos Space Security Director as its security manager.

VMware NSX-T Overview

VMware NSX-T is VMware's network virtualization platform for the Software Defined Data Center (SDDC). Like server virtualization, network virtualization de-couples the network functions from the physical devices. VMware NSX-T is designed to address application frameworks and architectures that

have heterogeneous endpoints and technology stacks. VMware NSX-T is not directly coupled with vSphere and therefore it supports various Hypervisors, Containers, BareMetal, and public clouds such as Amazon Web Service and Azure. With VMware NSX-T, you can design hybrid cloud for organizations where critical data and services are hosted within private cloud and web services or high availability application in Public clouds.

VMware NSX-T is the latest generation of VMware's network virtualization product series. NSX-T is the successor to NSX-V. NSX-T supports third-party Hypervisors and next generation overlay encapsulation protocols such as Generic Network Virtualization Encapsulation (Geneve). NSX-T acts as a network Hypervisor that allows software abstraction of various network services that include logical switch (segments), logical routers (Tier-0 or Tier-1 Gateway), logical firewalls, logical load balancers, and logical VPNs.

VMware NSX-T provides L2-L4 stateful firewall features, network segmentations, multi tenancy support, L2/L3 VPN, load balancer, DHCP, source/destination NAT and many more services at Edge Gateway. VMware NSX-T provides framework to integrate the advanced security services as North-South at Edge Gateway.

Each virtual machine running in NSX-T environment can be protected with a full stateful firewall engine at a very granular level policy. Such policies can be application specific including services. vSRX runs as a service virtual machine and provides advanced services such as L4 to L7 services.

To deploy the advanced security features of the vSRX Virtual Services Gateway in the VMware NSX-T environment, the Junos Space Security Director, vSRX, and NSX-T Manager operate together as a solution to fully automate the provisioning and deployment of the vSRX to protect applications and data from advanced cyberattacks.

vSRX Integration with NSX-T Manager and Junos Space Security Director

To deploy the advanced security features of the vSRX Virtual Services Gateway in the VMware NSX-T environment, the Junos Space Security Director, vSRX, and NSX-T Manager operate together as a joint solution to fully automate the provisioning and deployment of the vSRX to protect applications and data from advanced cyberattacks.

Integration of the vSRX VM in the VMware NSX-T environment involves use with the following management software:

- **Junos Space Security Director**—The centralized security management platform responsible for service registration and configuration of each vSRX instance. The Security Director provides you with the ability to manage a distributed network of virtualized and physical firewalls from a single location. The Security Director functions as the management interface between the NSX-T Manager and the vSRX Services Gateway. Security Director manages the firewall policies on all vSRX instances.
- **NSX-T Manager**—The centralized network management component of VMware NSX.


The NSX-T Manager is added as a registered device in the Security Director and communication is bidirectionally synchronized by the Junos Space Policy Enforcer between the two management platforms. All shared objects (such as security groups) are synchronized between the NSX-T Manager and Security Director. This includes the IP addresses of all VMs, including the vSRX agent VMs. Security Director creates an address group for each security group synchronized from the NSX-T Manager, along with the addresses of each member of the security group. The security groups discovered from the NSX-T Manager are mapped to dynamic address groups (DAG) in Security Director. Policy Enforcer retains the mapping of all IP addresses between security groups and dynamic address groups.

The vSRX Services Gateway is deployed as a partner service appliance in the VMware NSX-T environment. Use the security policies to direct all VM traffic through the vSRX VM for L4 through L7 advanced security analysis.

High-Level Workflow

Figure 29 on page 413 provides a high-level workflow of how the NSX-T Manager, Security Director, and vSRX interact to deploy vSRX as a security service in the VMware NSX-T environment.

Figure 29: vSRX, Security Director, and VMware NSX-T Integration Workflow

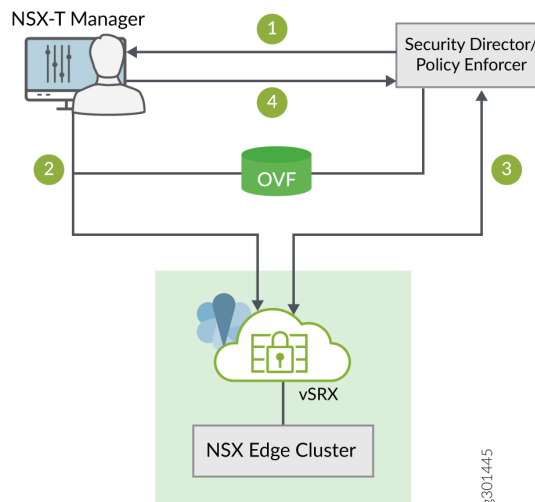

1. The Junos Space Security Director initiates communication with the NSX-T Manager. The Security Director discovers, registers, and adds the NSX-T Manager as a device in its database. The Security Director also deploys the vSRX instance from the .ovf file and registers it as a security service. The NSX-T Manager and its inventory of shared objects (for example, security groups) and addresses are then synchronized with the Security Director. The registration process uses Policy Enforcer to enable bidirectional communication between Security Director and the NSX-T Manager.

2. The NSX-T Manager deploys the registered vSRX instance as a Juniper security service to the NSX Edge Cluster. The deployment is based on the vSRX **.ovf** file.
3. After the vSRX agent VM is provisioned as a security service, NSX-T Manager notifies Security Director by using REST API callbacks. Security Director pushes the initial boot configurations and Junos OS configuration policies to each vSRX agent VM to support the NSX-T security group. Security Director is aware of the NSX-T security groups and corresponding address groups, and all deployed vSRX agent VMs are automatically discovered.

Security policies redirect relevant network traffic originating from the VMs in a specific security group to the Juniper security service vSRX agent VM for further analysis.

The Security Director dynamically synchronizes the object database to all vSRX agent VMs deployed in NSX Edge Cluster. Security groups discovered from NSX-T Manager are mapped to a dynamic address group (DAG) in Security Director. The Security Director manages the firewall policies on the vSRX agent VMs. Using Security Director, you create advanced security service policies (for example, an application firewall policy or an IPS policy) and then push those policies.

4. The NSX-T Manager continue to send real-time updates on changes in the virtual environment to Security Director.

RELATED DOCUMENTATION

[VMware NSX-T Data Sheet](#)

[Junos Space Security Director](#)

[vSRX](#)

Before You Deploy vSRX in VMware NSX Environment

Before you begin deploying the vSRX Virtual Services Gateway as an advanced security service in VMware NSX:

- Download the **.ovf** file of the vSRX software image from [Juniper Networks website](#) and save it to the Policy Enforcer. The vSRX OVF URL automatically appears in the Register Security Service page of the Security Director when you register the vSRX virtual machine (VM) as a Juniper security service on the NSX Manager.
- Obtain the Juniper SDSN for NSX license key (see *Juniper Connected Security for VMware NSX Licensing*).
- Install two or more VMware ESXi hosts. See the VMware documentation for details.

- Install the VMware vCenter Server on a Windows VM or physical server, or deploy the VMware vCenter Server Appliance. Connect to the vCenter Server from the vSphere Web Client. See the VMware documentation for details.
- Create a vSphere distributed switch (VDS) in the vSphere environment, add each ESXi host to a common VDS, and then configure the ESXi hosts in a vSphere cluster. For each host cluster that will participate in NSX, all hosts within the cluster must be attached to a common VDS. See the VMware documentation for details.
- Deploy VMs on each ESXi host by using the vSphere Web Client. See the VMware documentation for details.
- Install the VMware NSX Manager in your vCenter Server environment by using the vSphere Web Client. The NSX Manager is the centralized network management component of NSX, and is installed as a virtual appliance on any ESXi host in your vCenter Server environment. It provides an aggregated system view. See the VMware documentation for details.



NOTE: Ensure that NSX Manager is configured in single vCenter Mode and not in multiple vCenter mode. See the VMware documentation for details.



NOTE: Juniper Networks devices require a license to activate the feature. To understand more about VMWare NSX Licensing, see, [Licenses for Network Management](#). Please refer to the Licensing Guide for general information about License Management.

[Table 151 on page 415](#) lists the system software requirement specifications for the components of a vSRX, Security Director, and VMware NSX integration.

Table 151: System Software Specifications for vSRX in VMware NSX Environment

| Component | Specification |
|-----------------------|-----------------------|
| VMware ESXi Server | 6.0 Update 3 or later |
| VMware vCenter Server | 6.3.1 or later |

Table 151: System Software Specifications for vSRX in VMware NSX Environment (Continued)

| Component | Specification |
|-------------------------------|---|
| VMware NSX for vSphere | 6.3.1 or later NOTE: For sites that are running vSphere 6.5, vSphere 6.5a is the minimum supported version with NSX for vSphere 6.3.0. |
| VMware NSX Manager | 6.3.1 or later |
| Linux Kernel | 3.10.x or later |
| Junos Space Security Director | 17.1 or later |
| Junos Space Policy Enforcer | 17.1 or later |
| vSRX | Junos OS Release vSRX 15.1X49-D101 or later |
| Memory | 4 GB |
| Disk space | 16 GB (IDE or SCSI drives) |
| vCPUs | 2 vCPUs |
| vNICs | A single vNIC for management traffic. Network traffic is forwarded to the vSRX over a Virtual Machine Communication Interface (VMCI) communication channel by the ESXi hypervisor. NOTE: VMCI is not a network interface (NIC) but a VMWare-proprietary device for Host to Guest Communication. |

RELATED DOCUMENTATION
[VMware NSX for vSphere 6.2 Documentation Center](#)

Before You Deploy vSRX in VMware NSX-T Environment

Before you begin deploying the vSRX Virtual Services Gateway as an advanced security service in VMware NSX-T:

- Download the **.ovf** file of the vSRX software image from [Juniper Networks website](#) and save it to the Policy Enforcer. The vSRX OVF URL automatically appears in the Register Security Service page of the Security Director when you register the vSRX virtual machine (VM) as a Juniper security service on the NSX-T Manager.
- Obtain the Juniper SDSN for NSX license key (see *Juniper Connected Security for VMware NSX Licensing*).
- Install the VMware vCenter Server on a Windows VM or physical server, or deploy the VMware vCenter Server Appliance. Connect to the vCenter Server from the vSphere Web Client. See the VMware documentation for details.
- Install NSX-T Manager. NSX-T manager can be installed on ESXI or KVM servers. See the VMware documentation for details.



NOTE: Juniper Networks devices require a license to activate the feature. To understand more about VMWare NSX Licensing, see, [Licenses for Network Management](#). Please refer to the Licensing Guide for general information about License Management.

[Table 152 on page 417](#) lists the system software requirement specifications for the components of a vSRX, Security Director, and VMware NSX-T Manager.

Table 152: System Software Specifications for vSRX in VMware NSX Environment

| Component | Specification |
|-----------------------|---------------|
| VMware ESXi Server | 6.5 and 6.7 |
| VMware vCenter Server | 6.7 and 7.0 |

Table 152: System Software Specifications for vSRX in VMware NSX Environment (Continued)

| Component | Specification |
|-------------------------------|--|
| VMware NSX-T Manager | 3.0 |
| Junos Space Security Director | 21.1 or later |
| Junos Space Policy Enforcer | 21.1 or later |
| vSRX | Junos OS Release vSRX 3.0 21.1 or later |
| Memory | 4 GB |
| Disk space | 16 GB (IDE or SCSI drives) |
| vCPUs | 2 vCPUs |
| vNICs | <p>A single vNIC for management traffic. Network traffic is forwarded to the vSRX over a Virtual Machine Communication Interface (VMCI) communication channel by the ESXi hypervisor.</p> <p>NOTE: VMCI is not a network interface (NIC) but a VMWare-proprietary device for Host to Guest Communication.</p> |

About the NSX Managers Page

IN THIS SECTION

- [Tasks You Can Perform | 420](#)
- [Field Descriptions | 420](#)

To access this page, click Security Director > Devices > NSX Managers.

Use the NSX Managers page to discover the NSX Manager and perform service registration of the vSRX VM with the NSX Manager. The NSX Manager is added as a device in the Security Director and its inventory is synchronized with Security Director.

When you add an NSX Manager in Security Director, the NSX Management RESTful API configures Policy Enforcer as a system log server in NSX Manager. The system log server handler runs in the Policy Enforcer virtual machine. On receiving the security group membership changes from system log, the system log service handler parses the system log and extracts the changed security group details. The security policies with rules having the modified security groups (dynamic address groups) as source or destination addresses are filtered and the perimeter firewall devices assigned to those policies are obtained. A remote procedure call (RPC) is sent to those perimeter firewall devices to update the dynamic address groups. The perimeter firewall devices then obtain and update the IP address feeds from Policy Enforcer.

Before you Begin

1. Install the Policy Enforcer Release OVA image.
 - a. After the installation is complete, log in to the Policy Enforcer VM through SSH. Run the service commands to verify the status of the following services:

```
service nsxmicro status
service sd_event_listener status
service nsx_callback_listener status
service ssh_listener status
```

- b. If services are stopped, initiate the services again by running the following commands:

```
service nsxmicro start
service sd_event_listener start
service nsx_callback_listener start
service ssh_listener start
```

2. Select **Security Director > Administration > Policy Enforcer > Settings**, and add Policy Enforcer to Security Director. For more information, see [Identifying the Policy Enforcer Virtual Machine In Security Director](#).
3. Download the SSH Key. Copy the vSRX OVA file to the Policy Enforcer VM along with the downloaded SSH key. See [Download the SSH Key File](#).

4. Obtain the vSRX license key before adding the NSX Manager to the Security Director.

Tasks You Can Perform

You can perform the following tasks from this page:

- Download the SSH Key. See [Download the SSH Key File](#).
- Add the NSX Manager. See *Adding the NSX Manager*.
- Register security services. See *Registering Security Services*.
- Synchronize the NSX inventory.

Field Descriptions

[Table 153 on page 420](#) provides guidelines on using the fields on the NSX Managers page.

Table 153: Fields on the NSX Managers Page

| Field | Description |
|-------------------------------------|---|
| Hostname/IP Address | Specifies the hostname or the IPv4 address of the NSX Manager. |
| Name | Specifies the name of the NSX Manager. |
| Associated vCenter | Specifies the hostname or the IP address of the vCenter associated with the NSX Manager that is automatically fetched by Security Director. |
| Associated vCenter Status | Specifies the connection status of an associated vCenter. |
| Service Manager Registration Status | Specifies the registration status of the security services. |
| Services | Specifies the service definition of a selected NSX Manager. Click View to view the service definition. |
| Port | Specifies the port number of the NSX Manager. |

Table 153: Fields on the NSX Managers Page *(Continued)*

| Field | Description |
|-------------------|---|
| Username | Specifies the username of the NSX Manager. The user must have the administrator privileges to access the NSX Manager. |
| Connection Status | Specifies the connection status of the NSX Manager. |

RELATED DOCUMENTATION

| *Adding the NSX Manager*

Download the SSH Key File

IN THIS SECTION

- [Copy vSRX OVA Image File to Policy Enforcer from Linux Machines | 422](#)
- [Copy vSRX OVA Image File to Policy Enforcer from MAC Machines | 422](#)

You must copy the vSRX OVA image to the Policy Enforcer virtual machine (VM) before adding the NSX Manager.

Use the Upload Image page to download the SSH key file and copy the vSRX OVA file to the Policy Enforcer VM by using the SFTP command with the downloaded SSH key. You must perform this as a first step before adding the NSX Manager.

To download the SSH key:

1. Select **Security Director > Devices > NSX Managers**.

The NSX Managers page appears.

2. Click **Download SSH Key**.

The Download SSH Key page appears.

3. Click **Download SSH Key**.

The SSH key is downloaded and saved in your local drive.

Copy vSRX OVA Image File to Policy Enforcer from Linux Machines

To copy the vSRX OVA file to a Policy Enforcer VM from a Linux machine:

1. Copy the downloaded SSH key file to the same directory where the vSRX OVA image file is saved.
2. Navigate to the directory path where vSRX OVA and SSH key files are located.
3. Run the `chmod 600 <<SSHKEYFILE>>` command to change the permission of the SSH key file.
4. Run the following commands:
 - `sftp -o "IdentityFile=<<SSHKEYFILE>>" nsxmicro@<<pe_ipaddress>>`
 - `cd publish`
 - `put <<VSRX OVA FILE>>`

The vSRX OVA file will be copied to the Policy Enforcer VM after sometime.

5. After the vSRX OVA file is copied, you can add the NSX Manager and register its services in the Security Director.

Copy vSRX OVA Image File to Policy Enforcer from MAC Machines

To copy the vSRX OVA file to a Policy Enforcer VM from a MAC machine:

1. Copy the downloaded SSH key file to the same directory where the vSRX OVA image file is saved.
2. Navigate to the directory path where vSRX OVA and SSH key files are located.
3. Run the `chmod 600 <<SSHKEYFILE>>` command to change the permission of the SSH key file.
4. Run the following commands:
 - `sftp -i sshkey nsxmicro@<pe_ip>`
 - `cd publish`
 - `put *<<VSRX OVA FILE>>`

The vSRX OVA file will be copied to the Policy Enforcer VM after sometime.

5. After the vSRX OVA file is copied, you can add the NSX Manager and register its services in the Security Director.

RELATED DOCUMENTATION

[Understanding Juniper Connected Security for VMware NSX Integration](#) | 407

Add the NSX Manager

Use the Add NSX Manager page to add the NSX Manager in to the Security Director database. Based on the NSX details provided, the Security Director automatically fetches the associated VMware vCenter Server hostname from NSX.

To add a NSX Manager:

1. Select **Devices > NSX Managers**.
The NSX Managers page appears.
2. Click the add icon (+).
The Add NSX Manager page appears.
3. Complete the configuration by using the guidelines in [Table 154 on page 423](#).
4. Click **Finish** to complete the configuration.
After adding the NSX Manager, you must register the vSRX VM as a Juniper security service with the NSX Manager. See *Registering Security Services*.

Table 154: Fields on the Add NSX Manager Page

| Field | Description |
|----------|---|
| Name | Enter the name of the NSX manager. |
| Host | Enter the IPv4 address of the NSX manager. |
| Port | Enter the port number of the NSX Manager. The NSX Manager and Security Director use SSL to communicate on TCP port 443. |
| Username | Enter the username of the NSX Manager to allow Security Director to authenticate the communication. |
| Password | Enter the password of the NSX Manager to allow Security Director to authenticate the communication. |

Table 154: Fields on the Add NSX Manager Page (*Continued*)

| Field | Description |
|------------------------|--|
| Description | Enter a description about the NSX Manager; you can use a maximum of 255 characters. |
| SSL Certificate | View the SSL certificate required to authenticate the NSX Manager. |
| Accept SSL Certificate | Select this option to accept the SSL certificate. This is a mandatory field. |
| Type | <p>Select an option: NSX-V or NSX-T.</p> <p>VMware NSX-T is the latest generation of VMware's network virtualization product series. NSX-T is the successor to NSX-V. NSX-T supports third-party Hypervisors and next generation overlay encapsulation protocols such as Generic Network Virtualization Encapsulation (Geneve).</p> |
| Firewall Type | <p>Select the type of perimeter firewall for your datacenter.</p> <ul style="list-style-type: none"> East-West Firewall—vSRX is spawned in each ESX server of VMware NSX for the east-west traffic. This provides east-west security for members of the security groups within a datacenter. North-South Firewall—Perimeter firewall for the north-south traffic. This provides a consistent north-south security for members of the security groups, if the members move across datacenters. <p>You can select both the types or any one of the firewall types.</p> <p>NOTE: Firewall Type is applicable only if you select the Type as NSX-V.</p> |

Service Manager Registration

| | |
|-------------|--|
| SD Username | Enter the username of Security Director to allow the NSX Manager to authenticate its communication with Security Director. |
| SD Password | Enter the password of Security Director to allow the NSX Manager to authenticate its communication with Security Director. |
| License Key | Enter the license key of vSRX VM. |

Table 154: Fields on the Add NSX Manager Page (Continued)

| Field | Description |
|--|--|
| <i>Associated vCenter - vCenter Server</i> | |
| | <p>To add multiple vCenter servers:</p> <p>Click the + icon.</p> <p>The Associate vCenter page is displayed.</p> |
| Host | Enter the IPv4 address of the VMware vCenter Server. |
| Port | Enter the port number of the VMware vCenter Server. Default: 443 |
| Username | Enter the username of the VMware vCenter Server. Security Director uses these credentials to discover the vCenter server and fetch the VM inventory details. |
| Password | Enter the password of the VMware vCenter Server. Security Director uses these credentials to discover the vCenter Server and fetch the VM inventory details. |
| SSL Certificate | View the SSL certificate required to authenticate the vCenter Server. |
| Accept SSL Certificate | Select this option to accept the SSL certificate. This is a mandatory field. |

RELATED DOCUMENTATION

| [About the NSX Managers Page](#)

Registering Security Services

Use the Register Security Service page in Security Director to register a Juniper security service on a specific NSX Manager. After registering the security service from Security Director, log in to the vCenter server and deploy the service from NSX.

To register the Juniper security service:

1. Select **Devices > NSX Managers**.

The NSX Managers page appears.

2. Select the NSX Manager for which service needs to be registered.

3. From the More list or right-click menu, select **Register Security Service**.

The Register Security Service page appears.

4. Complete the configuration by using the guidelines in [Table 155 on page 426](#).

5. Click **Register** to complete the registration.

A confirmation message appears to indicate if registration is successful or not.

Table 155: Fields on the Register Security Service Page

| Field | Description |
|--------------------|--|
| Service Name | Enter the name for the Juniper Security Service. |
| vSRX OVF URL | The vSRX OVF image that you have copied to the Policy Enforcer VM is listed here. Select the vSRX OVF image from the list. |
| vSRX Root Password | Enter the root password of the vSRX instance. The same root password is set for all the vSRX VMs deployed in NSX. |
| Confirm Password | Enter the root password of the vSRX instance for confirmation. |
| Firewall Type | Select East-West or North-South from the list. The default firewall type is East-West. East-West—vSRX is spawned in each ESX server of VMware NSX-T for the east-west traffic. This provides east-west security for members of the security groups within a datacenter. North-South—It is the perimeter firewall for the north-south traffic. This provides a consistent north-south security for members of the security groups, if the members move across datacenters. NOTE: The Firewall Type field is applicable only if the NSX Manager type is NSX-T. |

RELATED DOCUMENTATION

| *About the NSX Managers Page*

Editing NSX Managers

Use the Edit NSX Manager page to edit the information of an already discovered NSX Manager.

To edit the NSX Manager:

1. Select **Devices > NSX Managers**.

The NSX Manager page appears listing all the discovered NSX Managers.

2. Select the NSX Manager that you want to edit, and click the pencil icon.

The Edit NSX Manager page appears, showing the same fields that are displayed when you add the NSX Manager.

3. Edit the NSX Manager fields as needed.

The changes are saved and you are returned to the NSX Managers landing page.

RELATED DOCUMENTATION

| *Add the NSX Manager*

Viewing Service Definitions

Use the Service Definitions page to view the list of services registered for the NSX Manager.

To view the service definitions:

1. Select **Devices > NSX Managers**.

The NSX Manager page appears listing all the discovered NSX Managers.

2. In the Services column, click **View** to view the service definitions for the required NSX Manager.

The Service Definitions page appears. [Table 156 on page 428](#) provides the guidelines on using the fields on this page.

Table 156: Field on the Service Definitions Page

| Field | Description |
|--------------|---|
| Service Name | Specifies the name of the registered service. |
| OVF URL | Specifies the vSRX OVF URL. |
| Version | Specifies the version of the service. |

RELATED DOCUMENTATION

| *Add the NSX Manager*

Deleting the NSX Manager

Before You Begin

Before you delete the NSX Manager, perform the following steps:

1. Unbind all bindings of network object from a service profile in VMWare vCenter Server.


- Log in to the vSphere Web Client through the VMware vCenter Server.
- Select **Networking & Security > Service Definitions**.

The Service Definitions page appears.

- Double-click on the Juniper service.

The respective service page appears, as shown in [Figure 30 on page 429](#).

Figure 30: Service Instances Page

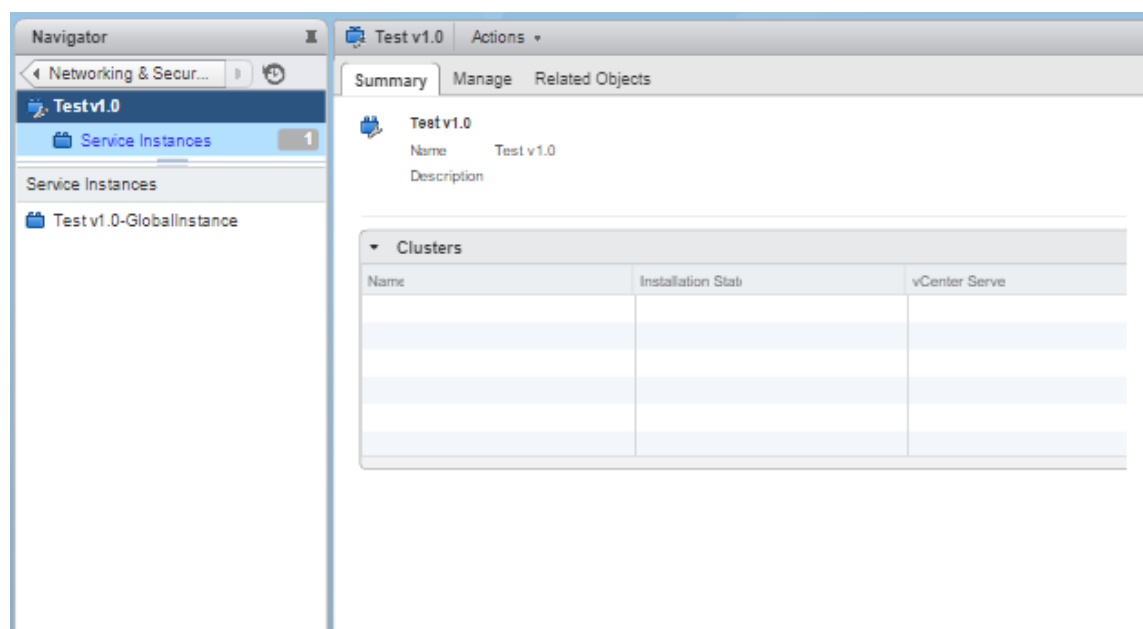

- In the left pane, click on the global instance > Service Profiles > Juniper Vendor Template.
The Juniper Networks Template page for the selected service appears.
- Select the template and from the Actions list, select **Apply to Objects**.
The Apply to Network Objects page appears.
- Remove the object associated with a service profile by moving the object listed under Selected Objects column to Available Objects column.

2. Delete the redirect policy in VMWare vCenter Server.

- Select **Networking & Security > Service Composer**.
The Service Composer page appears.
- In the Security Policies tab, right-click the security policy and select **Delete**.
The security policy along with corresponding firewall rules are deleted.

3. Delete the deployed services in VMWare vCenter Server.

- Select **Networking & Security > Installation**.
The Installation page appears.
- In the Service Deployments tab, right-click on the service name and select **Delete**.

The deployed service is deleted.

4. Deregister the service definition in VMWare vCenter Server.

- Select **Networking & Security > Service Definitions**.

The Service Definitions page appears.

- Double-click on the Juniper service.

The respective service page appears.

- In the left pane, click on the global instance > Service Profiles > Juniper Vendor Template.

The Juniper Networks Template page for the selected service appears.

- In the Related Object tab, right-click on the template and click **Delete**.

- Select **Service Definitions** in the left pane.

The Service Definitions page appears.

- In the Service tab, right-click on the service and click **Delete**.

The Remove service definition pop-up message appears to confirm the delete operation. Enable the Delete service manager option and click **Yes**.

Use the Delete NSX Manager option to delete the NSX Manager from the Security Director inventory. Along with NSX Manager, the associated vCenter server is also deleted.

To delete the NSX Manager:

1. Select **Devices > NSX Managers**.

The NSX Manager page appears.

2. Select the NSX Manager that you want to delete.

3. From the More list, or right-click menu, select **Delete NSX Manager**.

A confirmation message appears to confirm the deletion.



NOTE: You cannot delete NSX Manager if the security service is already deployed in NSX.

4. Click **Yes** to confirm the deletion.

The NSX Manager and its associated vCenter server are deleted from the Security Director inventory.



NOTE: You cannot delete a NSX Manager if there is a NSX Secure Fabric. You must first delete the Secure Fabric. See *Editing or Deleting a Secure Fabric*.

RELATED DOCUMENTATION

Understanding Juniper Connected Security for VMware NSX Integration

Before You Deploy vSRX in VMware NSX Environment

[Download the SSH Key File](#)

About the NSX Managers Page

Add the NSX Manager

Registering Security Services

Deploying the vSRX as an Advanced Security Service in a VMware NSX Environment

Delete the NSX-T Manager

Before You Begin

Before you delete the NSX-T Manager, perform the following steps:

1. Unbind all bindings of network object from a service profile.

- Log in to the VMware NSX-T Manager.
- Select **System** > **Service Deployment**.
- In the Deployment tab, select the deployed partner service that you want to delete.

The corresponding service details are displayed.

- From the Actions list, select **Delete**.

The delete deployment service confirmation page appears.

- Click **DELETE** to delete the deployed service.

If the action is successful, the deployed service is deleted.

- Select **Security** > **Network Introspection Settings** > **SERVICE CHAINS** tab, select the service chain and choose **Delete**.



NOTE: This step is applicable only if the firewall type is East-West.

- In the SERVICE PROFILES tab, select the service chain and choose **Delete**.



NOTE: This step is applicable only if the firewall type is East-West.

You can delete the NSX-T Manager and its associated vCenter server from the Security Director inventory.

To delete the NSX-T Manager from Security Director:

1. Select **Devices > NSX Managers**.

The NSX Manager page appears.

2. Select the NSX-T Manager that you want to delete.
3. From the More list, or right-click menu, select **Delete NSX Manager**.

A confirmation message appears to confirm the deletion.



NOTE: You cannot delete NSX-T Manager from Security Director if the security service is already deployed in the NSX-T Manager.

4. Click **Yes** to confirm the deletion.

The NSX-T Manager and its associated vCenter server are deleted from the Security Director inventory.



NOTE: You cannot delete NSX-T Manager if there is a NSX Secure Fabric. You must first delete the Secure Fabric. See *Editing or Deleting a Secure Fabric*.

RELATED DOCUMENTATION

| *About the NSX Managers Page*

Deploying the vSRX as an Advanced Security Service in a VMware NSX Environment

IN THIS SECTION

- [Creating a Security Group \(VMware vCenter Server\) | 433](#)
- [Discovering the NSX Manager and Registering vSRX as a Security Service in vSphere cluster | 435](#)
- [Deploying vSRX as a Security Service on a vSphere Cluster \(VMware vCenter Server\) | 439](#)
- [Verifying vSRX Agent VM Deployment in Security Director | 443](#)
- [Automatic Creation of Security Policy in the NSX Environment to Direct Traffic Through the vSRX Agent VMs \(VMware vCenter Server\) | 445](#)

Use the following procedures to deploy the vSRX as an advanced security service virtual machine (VM) in the VMware NSX environment. The vSRX VM is deployed in conjunction with Juniper Networks Junos Space Security Director and VMware NSX Manager. In each procedure you are instructed whether to perform the steps in the NSX Manager (from the VMware vCenter Server) or in the vSphere cluster. For example, you create the security group using the NSX Manager, but the discovery of devices happens in the vSphere cluster.

The deployment steps are performed in the following sequence :

Creating a Security Group (VMware vCenter Server)

You create a security group by using the NSX Manager from the VMware vCenter Server. Each security group is a logical collection of objects from your vSphere inventory. These objects include VMs that you want to be members in the same security group and to which you will apply the vSRX as a Juniper security service. You can apply an advanced security service policy to all the objects contained in a security group.

To create a security group from the VMware vCenter Server:

1. Log in to the vSphere Web Client through the VMware vCenter Server.
2. From the vSphere Web Client, click **Hosts and Clusters** to view hosts and clusters in the vSphere Web Client inventory. From the Summary tab, you can verify the vSphere cluster and the VMs associated as part of this cluster. All VMs are part of the VXLAN network and can communicate over this VLAN.
3. From the vSphere Web Client, click **Networking & Security** and then click **Service Composer**. The Service Composer appears. From the Service Composer, click the **Security Groups** tab.

4. Click the **Add Security Group** icon to create a new security group that contains the specific VMs you want as members of the same group, as shown in [Figure 31 on page 434](#).

Figure 31: Create a New Security Group Page

The screenshot shows the 'New Security Group' wizard. On the left, a list of steps is shown with green checkmarks: 1. Name and description (highlighted), 2. Define dynamic membership, 3. Select objects to include, 4. Select objects to exclude, and 5. Ready to complete. The main area is titled 'Name and description' and contains a 'Name' field with the value 'SG1' and a red asterisk, a 'Description' text box, and a 'Scope' dropdown set to 'Global'. At the bottom right are buttons for 'Back', 'Next', 'Finish', and 'Cancel'.

5. Type a name and description for the security group and then click **Next**.
6. On the Define dynamic membership page, define the criteria that an object must meet for it to be added to the security group you are creating. You can define a dynamic group membership criteria for the VMs that are to be part of each security group. For example, VM membership in a security group can be tagged by name. You define the exact membership criteria that you want to use to group VMs. Group membership is associated dynamically at runtime.
Click **Next**.
7. On the Select objects to include page, select the tab for the resources you want to include in this security group. Click **Next**.
8. On the Select objects to exclude page, select the tab for the resources you want to exclude from this security group. Click **Next**.
9. Click **Finish** to complete creating the security group.

Discovering the NSX Manager and Registering vSRX as a Security Service in vSphere cluster

You use the Junos Space vSphere cluster to discover the NSX Manager and perform service registration of the vSRX VM with the NSX Manager. The NSX Manager is added as a device in the Security Director, and its inventory is synchronized with the Security Director.



NOTE: Ensure that SNMP is disabled in the Security Director while performing device discovery for the vSRX agent VM. If SNMP is enabled in Security Director, the vSRX agent VM discovery operation fails.

To discover the NSX Manager from the Security Director:

1. Select **Security Director > Devices > NSX Managers**.

The NSX Managers page appears.

2. Click the **Add icon (+)** to add the NSX Manager to the Security Director.

The Add NSX Manager page appears, as shown in [Figure 32 on page 435](#).

Figure 32: Add NSX Manager Page

Add NSX Manager ?

1 NSX Manager 2 Service Manager Registration 3 vCenter Server

Name * ⓘ NSX-134

Host * ⓘ

Port * ⓘ 443

Username * ⓘ admin

Password * ⓘ

Description ⓘ

SSL Certificate ⓘ

Certificate:
Data:
Version: 3 (0x2)
Serial Number: 1727849644 (0x66f0e5d8)
Signature Algorithm: sha256WithRSAEncryption
Issuer: C=US, ST=CA, L=San Jose

Accept SSL Certificate * ⓘ ☒

Cancel Next

3. In the NSX Manager section, enter the following information:

- Name—Enter the name of the NSX Manager.

- **Host**—Enter the IP address of the NSX Manager.
- **Port**—Enter the port number of the NSX Manager. The NSX Manager and Security Director use SSL to communicate on TCP port 443.
- **Username, Password**—Enter the username and password of the NSX Manager that are required for communication to be authenticated by the Security Director.
- **Description**—Enter a description for the NSX Manager you are to add to the Security Director.
- **SSL Certificate**—View the SSL certificate to authenticate the NSX Manager and select the Accept SSL Certificate option to accept the SSL certificate.

This is a mandatory field to discover the NSX Manager. The SSL Certificate field appears once you enter the NSX details.

4. Click *Next*.

5. In the Service Manager Registration section, enter the following details about the Security Director:

- **SD Username, SD Password**—Enter the username and password of Security Director to allow the NSX Manager to authenticate communication to the Security Director.
- **License Key**—Enter the license key for the previously procured Juniper SDSN for NSX license (see *Juniper Connected Security for VMware NSX Licensing* for background details).

6. Click *Next*.


7. In the vCenter Server section, provide the following details about the vCenter Server:

- **Host**—Enter the IP address of the VMWare vCenter Server.
- **Port**—Enter the port number of the VMWare vCenter Server. By default, 443 is used.
- **Username, Password**—Enter the username and password of the VMware vCenter Server. Security Director uses these credentials to discover the vCenter Server and fetch the VM inventory details.
- **SSL Certificate**—View the SSL certificate to authenticate the vCenter Server and select the Accept SSL Certificate option to accept the SSL certificate. To discover the vCenter Server, it is mandatory to accept the certificate.

8. Click *Finish*.

The Summary page of configuration changes appears. Click **OK** to add the NSX Manager. When you return to the NSX Managers page, you will see the discovered NSX Manager listed, as shown in [Figure 33 on page 437](#).

Figure 33: NSX Managers Page

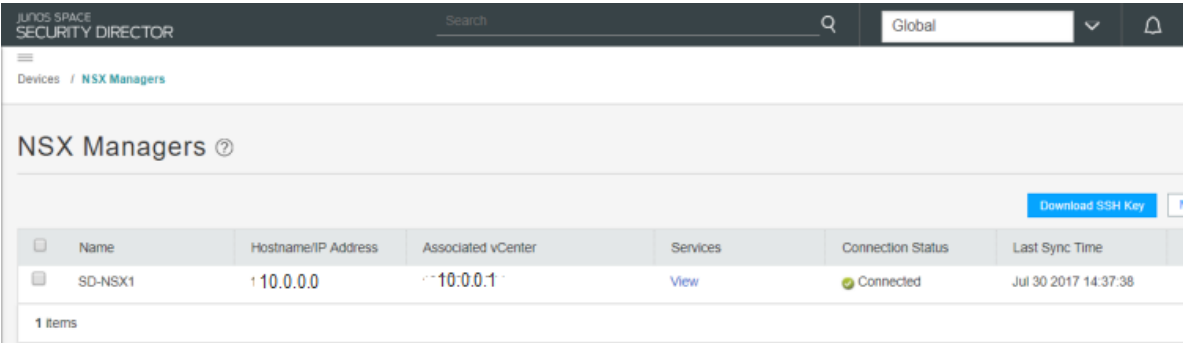

After adding the NSX Manager, you must register the vSRX VM as a Juniper security service with the NSX Manager.

To register the vSRX instance as a Juniper security service:

1. Select the NSX Manager for which service needs to be registered, right-click or from the More list, select **Register Security Service**.

The Register Security Service page appears, as shown in [Figure 34 on page 437](#).

Figure 34: Register Security Service Page

2. In the Service Name field, enter the name of the Juniper security service.
3. From the vSRX OVF URL list, select the available vSRX OVF image that you copied to the Policy Enforcer machine.

4. In the vSRX Root Password field, enter the root password of the vSRX instance. The same root password will be set for all the vSRX instances deployed in NSX.
5. In the Description field, enter a description.
6. Click **Register**.


A confirmation message indicates whether the registration is successful or not.

The vSRX instance registered as a new service in the vSphere Web Client environment. The vSRX is added as a network service that can be deployed by the NSX Manager.

In the vSphere Web Client, verify the following:

- Click **Networking & Security** and then click **Service Definitions**. Click the **Services** tab and verify that *<service-name> v1.0* is listed in the table (the newly registered vSRX VM) along with the Security Director as the Service Manager, as shown in [Figure 35 on page 438](#).

Figure 35: Service Definitions Page

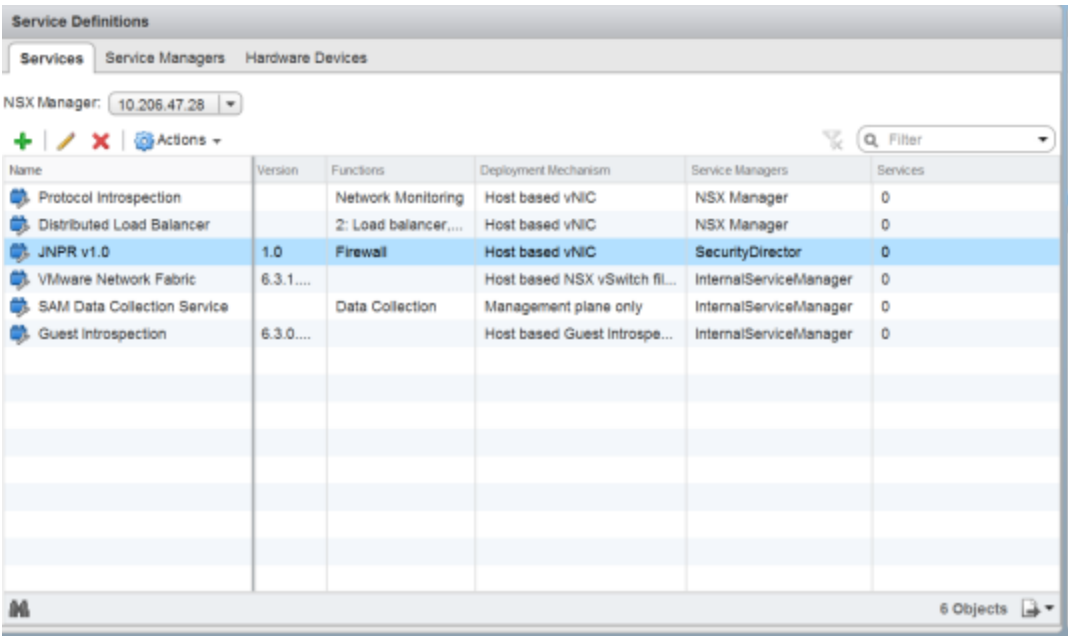

| Name | Version | Functions | Deployment Mechanism | Service Managers | Services |
|-----------------------------|-----------|---------------------|-------------------------------|------------------------|----------|
| Protocol Introspection | | Network Monitoring | Host based vNIC | NSX Manager | 0 |
| Distributed Load Balancer | | 2: Load balancer... | Host based vNIC | NSX Manager | 0 |
| JNPR v1.0 | 1.0 | Firewall | Host based vNIC | SecurityDirector | 0 |
| VMware Network Fabric | 6.3.1.... | | Host based NSX vSwitch fil... | InternalServiceManager | 0 |
| SAM Data Collection Service | | Data Collection | Management plane only | InternalServiceManager | 0 |
| Guest Introspection | 6.3.0.... | | Host based Guest Introspe... | InternalServiceManager | 0 |

- Click the **Service Managers** tab and verify that the Security Director is listed with a status of **In Service**, as shown in [Figure 36 on page 439](#).

The NSX Manager and its inventory are now synchronized with the Security Director. All shared objects (such as security groups) are synchronized between the NSX Manager and Security Director. The shared objects include the IP addresses of all VMs in ESXi hosts, including the vSRX agent VMs. Security Director creates a dynamic address group(DAG) for each security group synchronized from the NSX Manager, along with the addresses of each member of the security group.

Deploying vSRX as a Security Service on a vSphere Cluster (VMware vCenter Server)

Before you deploy the vSRX agent VM as a security service on the vSphere cluster, you must create a static IP pool with a primary DNS for the vSRX. To create the static IP pool:

1. From the vSphere Web Client, select **Networking & Security** and then **NSX Managers**.
2. In the Navigator column, select the name of the NSX Manager and click **Manage > Grouping Objects > IP Pools**.

3. Click the **Add icon (+)** to add the static IP pool.

The Add Static IP Pool page appears, as shown in [Figure 37 on page 440](#).

Figure 37: Add Static IP Pool Page

Add Static IP Pool

Name: *

Gateway: *
A gateway can be any IPv4 or IPv6 address.

Prefix Length: *

Primary DNS:

Secondary DNS:

DNS Suffix:

Static IP Pool: *
for example 192.168.1.2-192.168.1.100 or

OK Cancel

4. In the Name field, provide a name for the IP pool.
5. In the Gateway field, provide a default gateway IP address.
6. In the Prefix Length field, provide a prefix length of the DNS.
7. Provide the primary and secondary DNS and the DNS suffix . This is a mandatory field.
8. In the Static IP Pool field, provide the IP address ranges to be included in the pool.
9. Click **OK**.

A new IP pool is created for the vSRX to be deployed.


To deploy the vSRX agent VM as a security service for a vSphere cluster:

1. From the vSphere Web Client, click **Networking & Security** and then click **Installation**.

The Installation page appears.

2. Click the **Service Deployments** tab and then click the **New Service Deployment (+)** icon. The Deploy Network & Security Services page appears, as shown in [Figure 38 on page 441](#).

Figure 38: Deploy Network and Security Services Page

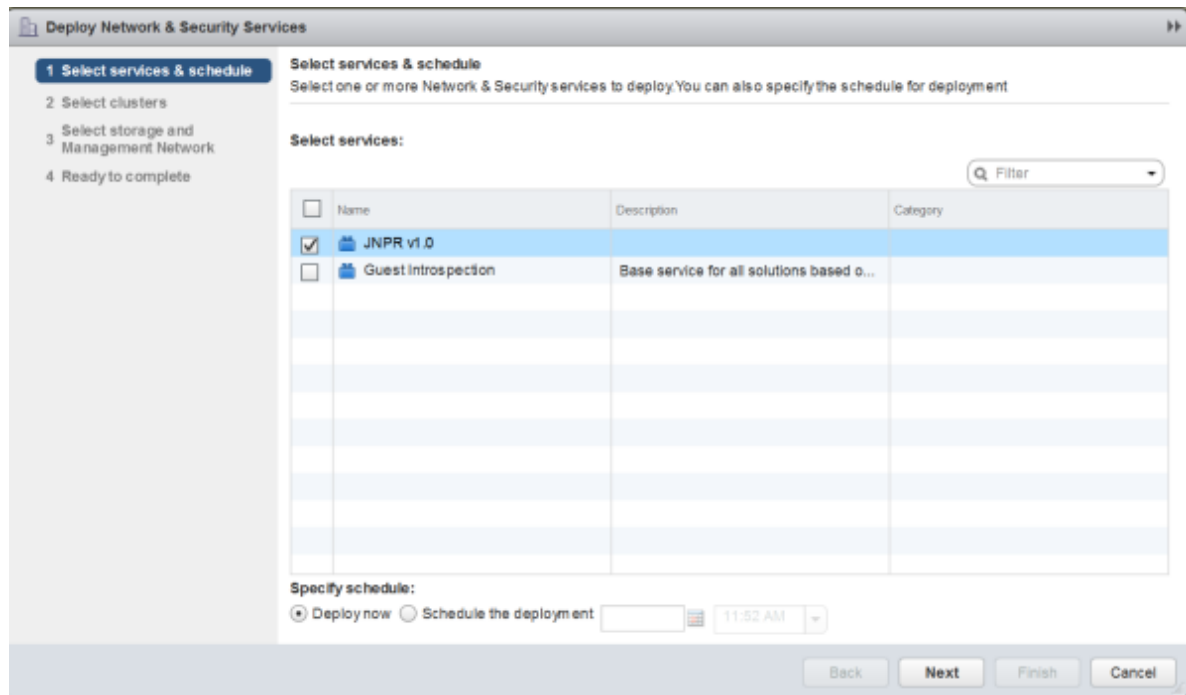

- From the Select services & schedule page, select `<service-name> v1.0` as the service to deploy and then click **Next**.
- From the Select clusters page, select the data center and one or more clusters on which the vSRX agent VM is to be deployed, and then click **Next**.
- From the Select storage and Management Network page:
 - Select the datastore on which to allocate shared storage for the vSRX agent VM, as shown in [Figure 39 on page 442](#). ESXi hosts should be configured so that they can access shared storage. If you select **Specified on-host**, ensure that the datastore for the ESXi host is specified in the **Agent VM Settings** of the ESXi host in the cluster. See the VMware documentation for details.

8. The Security Director automatically discovers all the deployed vSRX VM agents by using the device-initiated discovery. A new firewall and IPS group policies are created and all devices are assigned to these group policies.



NOTE: The Security Director creates predefined IPS policies with a single IPS template. You can either add more IPS templates or convert the predefined IPS policies to custom IPS policies.

When you add an ESXi host in the vSphere cluster, NSX Manager automatically detects that the new ESXi host and adds the Juniper security service vSRX agent VM for it.

Verifying vSRX Agent VM Deployment in Security Director

In the Security Director, based on the NSX Manager discovery, NSX security groups are automatically synchronized with Security Director. For each service group in NSX Manager, Security Director creates a corresponding dynamic address group.

To verify that the vSRX agent VMs have been properly deployed:

1. Select **Security Director > Devices > NSX Managers**.

The NSX Managers page appears with the discovered NSX Manager and the vSRX instance registered as a new service in the vSphere Web Client environment.

2. Select **Security Director > Monitor > NSX Inventory > Security Groups**.

The Security Groups page appears listing all the security groups obtained from NSX and the corresponding dynamic address groups created by the Security Director, as shown in [Figure 40 on page 444](#).

Figure 40: Security Groups Page

Monitor / NSX Inventory / Security Groups

Security Groups ?

Q Y

| NSX Manager | Name | Members | Definition | DAG Name |
|-------------|---------|----------------------|--------------------------------------|-----------------|
| SD-NSX1 | test_pr | View | VM.GUEST_OS_FULL_NAME contains ... | SD-NSX1-test_pr |
| SD-NSX1 | A1 | View | | SD-NSX1-A1 |
| SD-NSX1 | esx20 | View | VM.NAME ends with esx20 | SD-NSX1-esx20 |
| SD-NSX1 | esx19vm | View | VM.NAME ends with esx19 | SD-NSX1-esx19vm |
| SD-NSX1 | A2 | View | | SD-NSX1-A2 |
| SD-NSX1 | sg1 | View | VM.GUEST_OS_FULL_NAME contains ... | SD-NSX1-sg1 |
| SD-NSX1 | sg2 | View | VM.SECURITY_TAG contains testSG O... | SD-NSX1-sg2 |
| SD-NSX1 | K | View | | SD-NSX1-K |
| SD-NSX1 | L | View | | SD-NSX1-L |

18 Rows

3. Select **Security Director > Monitor > vCenter Server Inventory > Virtual Machines**.

The Virtual Machines page appears, listing the VMs that are dynamically fetched by the associated vCenter, as shown in [Figure 41 on page 445](#). You can view the security groups associated with each VM. Also, you can view security groups associated with each VM.

Figure 41: Virtual Machines Page

Monitor / vCenter Server Inventory / Virtual Machines

Virtual Machines ?

| | VM Name | vCenter | OS on VM | Security Groups | Network Details | State | Status |
|---|----------------------|---------------|------------------------|----------------------|----------------------|------------|-----------|
| ▶ | scale-1 | 10.206.33.244 | Red Hat Enterprise ... | View | View | poweredOn | connected |
| ▶ | viso-space-17.1R1.7 | 10.206.33.244 | Red Hat Enterprise ... | View | View | poweredOff | orphaned |
| ▶ | sd-nsx-25-26 | 10.206.33.244 | Red Hat Enterprise ... | View | View | poweredOn | connected |
| ▶ | dlr1-0 | 10.206.33.244 | Other Linux (64-bit) | View | View | poweredOn | connected |
| ▶ | scale-2 (1) | 10.206.33.244 | Red Hat Enterprise ... | View | View | poweredOn | connected |
| ▶ | JNPR v1.0 (1) | 10.206.33.244 | Other (32-bit) | View | View | poweredOn | connected |
| ▶ | JNPR v1.0 (2) | 10.206.33.244 | Other (32-bit) | View | View | poweredOn | connected |
| ▶ | VSRX-121X47-D20... | 10.206.33.244 | FreeBSD (32-bit) | View | View | poweredOn | connected |
| ▶ | NSX_Controller_1d... | 10.206.33.244 | Debian GNU/Linux ... | View | View | poweredOn | connected |

18 Rows


Automatic Creation of Security Policy in the NSX Environment to Direct Traffic Through the vSRX Agent VMs (VMware vCenter Server)

After you deploy vSRX agent VM security services to the ESXi hosts in a vSphere cluster, security policies are automatically created to redirect any network traffic originating from the VMs in a specific security group to the Juniper security service vSRX agent VM residing in the ESXi host for further analysis.

To direct the traffic to the vSRX agent VMs in each ESXi host by using the automatically created security policies:


1. In the Security Director, install the IPS signature to all the vSRX VM agents.
2. On the Firewall and IPS Policies page, add new rules to the automatically created firewall or IPS policies with respective dynamic address groups, as shown in [Figure 42 on page 446](#). You can also use the application firewalls in the firewall rules.

Figure 42: Firewall Policy Rules Page

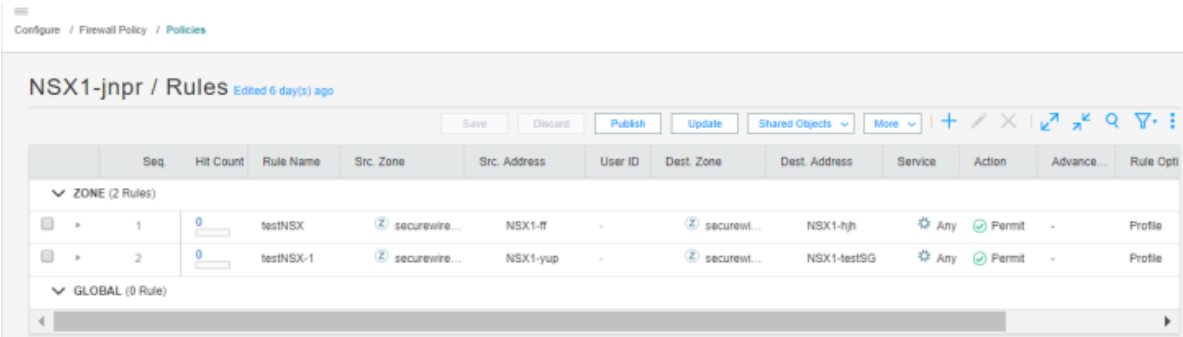


- After creating policy rules, publish and update the firewall and IPS policies.
- After the firewall and IPS policies are successfully updated in the Security Director, log in to the vSphere Web Client to verify the security policies in NSX Manager.
Select **Network & Security > NSX Managers**, and the Navigator column, select the NSX Manager name. The security policies are automatically created in NSX Manager by Security Director, as shown [Figure 43 on page 446](#).

Figure 43: NSX Security Groups Page

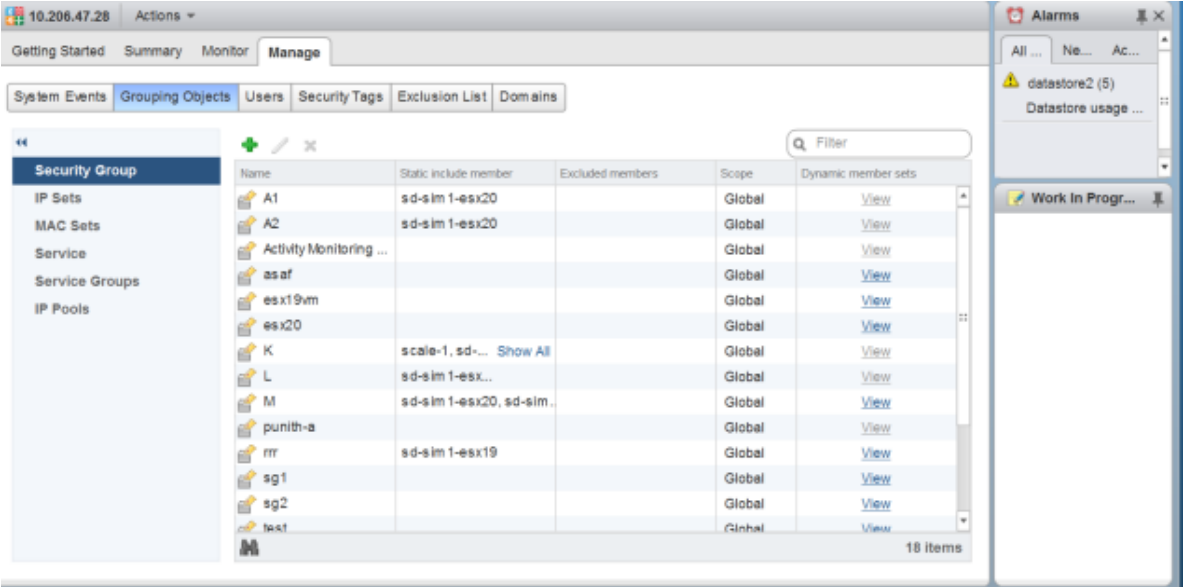

- From the vSphere Web Client, select **Networking & Security** and then select **Firewall**.
The Firewall page appears.
- In the right pane, select the Partner Security Services tab to view the complete list of automatically created security policies from the Security Director, as shown in [Figure 44 on page 447](#).


Figure 44: Firewall Page

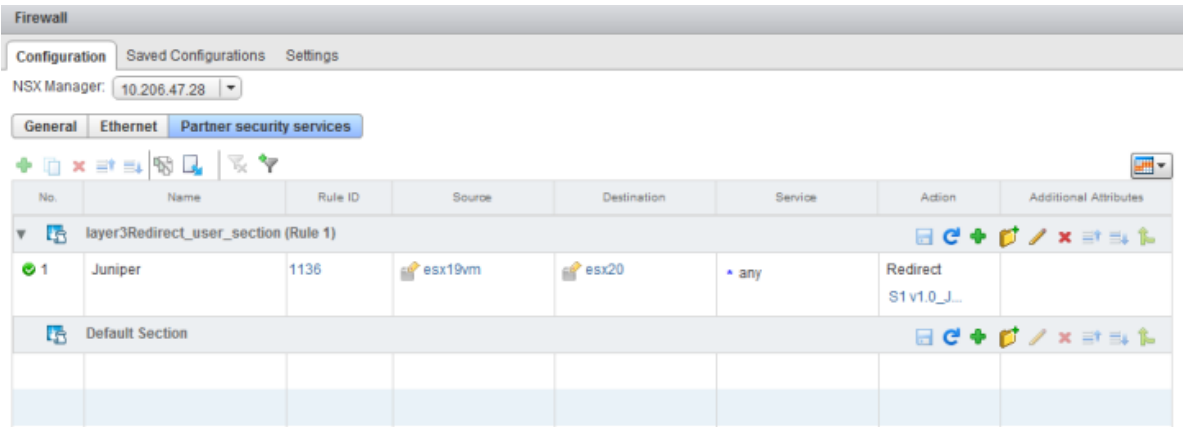

7. The corresponding traffic now goes through the vSRX VM agent.

When you return to **Security Director > Devices > Security Devices**, you can view the active configuration for the vSRX agent VMs, as shown in [Figure 45 on page 447](#).

Figure 45: Security Devices Page

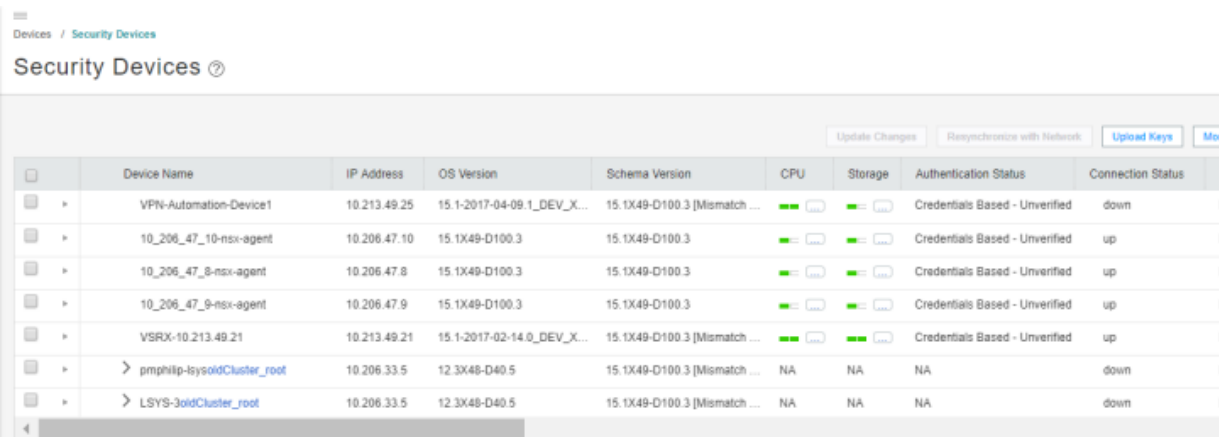

The NSX Manager is aware of the security groups that the Juniper security service monitors. If any changes occur in the security group, the NSX Manager notifies the Security Director about those changes. If membership changes, the NSX Manager notifies the Security Director of the changes and the Security Director updates its database based on the new membership.

RELATED DOCUMENTATION

[Junos Space Security Director](#)

[VMware NSX for vSphere 6.2 Documentation Center](#)

Deploy the vSRX as an Advanced Security Service in a VMware NSX-T Environment

IN THIS SECTION

- [Create a Security Group | 448](#)
- [Discover the NSX-T Manager and Register vSRX as a Security Service | 449](#)
- [Deploy vSRX as a Security Service | 454](#)
- [Verify vSRX Agent VM Deployment in Security Director | 454](#)
- [Automatic Creation of Security Policy in the NSX-T Environment to Direct Traffic Through the vSRX Agent VMs | 455](#)

Use the following procedures to deploy the vSRX as an advanced security service virtual machine (VM) in the VMware NSX-T environment. The vSRX VM is deployed in conjunction with Juniper Networks Junos Space Security Director and VMware NSX-T Manager.


Create a Security Group

You can create a security group by using the VMware NSX-T Manager. Each security group is a logical collection of objects which include VMs that you want to be members in the same security group and to which you will apply the vSRX as a Juniper security service. You can apply an advanced security service policy to all the objects contained in a security group.

To create a security group:

1. Log in to the VMware NSX-T Manager.
2. Select **Inventory > Groups**.
3. Click **ADD GROUP** icon to create a new security group that contains the specific VMs you want as members of the same group, as shown in [Figure 46 on page 449](#).

Figure 46: Add Groups Page

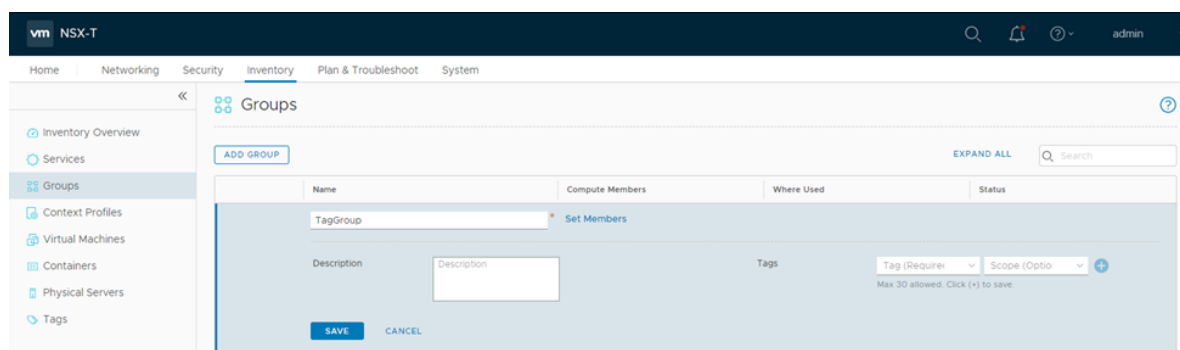

4. Type a group name and then click **Set members**.
5. On the Select Members page, define the criteria that an object must meet for it to be added to the security group you are creating. You can define a dynamic group membership criteria for the VMs that are to be part of each security group. For example, VM membership in a security group can be tagged by name. You define the exact membership criteria that you want to use to group VMs. Group membership is associated dynamically at runtime.
6. Click **Apply** to complete creating the security group.

Discover the NSX-T Manager and Register vSRX as a Security Service

The NSX-T Manager is added as a device in Security Director, and its inventory is synchronized with Security Director.



NOTE: Ensure that SNMP is disabled in Security Director while performing device discovery for the vSRX agent VM. If SNMP is enabled in Security Director, the vSRX agent VM discovery operation fails.

To discover the NSX-T Manager from Security Director:

1. Select **Security Director > Devices > NSX Managers**.
The NSX Managers page appears.
2. Click the **Add icon (+)** to add the NSX Manager to Security Director.
The Add NSX Manager page appears, as shown in [Figure 47 on page 450](#).

Figure 47: Add NSX Manager Page

The screenshot shows the 'Add NSX Manager' dialog box. The 'NSX Manager' section is active, and the 'Name' field is populated with 'NSX_SD'. The 'Port' field is set to '443'. The 'Type' dropdown is set to 'NSX-T'. The 'Next' button is highlighted in blue at the bottom right of the dialog.

3. In the NSX Manager section, enter the following information:

- Name—Enter the name of the NSX Manager.
- Host—Enter the IP address of the NSX Manager.
- Port—Enter the port number of the NSX Manager. The NSX Manager and Security Director use SSL to communicate on TCP port 443.
- Username, Password—Enter the username and password of the NSX Manager that are required for communication to be authenticated by the Security Director.
- Description—Enter a description for the NSX Manager you are to add to the Security Director.
- Type—Select NSX-T.

NSX-T is the successor to the NSX-V product. VMware NSX-T is the latest generation of VMware's network virtualization product series.

4. Click **Next**.

5. In the Service Manager Registration section, enter the following details about the Security Director:

- SD Username, SD Password—Enter the username and password of Security Director to allow the NSX-T Manager to authenticate communication to the Security Director.
- License Key—Enter the license key for the previously procured Juniper SDSN for NSX license (see *Juniper Connected Security for VMware NSX Licensing* for details).

6. Click **Next**.

7. In the vCenter Server section, click the + icon to add vCenter servers. Provide the following details on the Associate vCenter page:
 - Host—Enter the IP address of the VMWare vCenter Server.
 - Port—Enter the port number of the VMWare vCenter Server. By default, 443 is used.
 - Username, Password—Enter the username and password of the VMware vCenter Server. Security Director uses these credentials to discover the vCenter Server and fetch the VM inventory details.
8. Click **Finish**.

The Summary page of configuration changes appears. Click **OK** to add the NSX-T Manager. When you return to the NSX Managers page, you will see the discovered NSX-T Manager listed.

After adding the NSX-T Manager, you must register the vSRX VM as a Juniper security service with the NSX-T Manager.

To register the vSRX instance as a Juniper security service:

1. Select the NSX-T Manager for which service needs to be registered, right-click or from the More list, select **Register Security Service**.

The Register Security Service page appears, as shown in [Figure 48 on page 451](#).

Figure 48: Register Security Service Page

The screenshot shows the 'Register Security Service' dialog box in the NSX Managers interface. The dialog box is titled 'Register Security Service' and contains the following fields and options:

- Service Name**: Text input field containing 'vSRX_Edge'.
- vSRX OVF URL**: Dropdown menu with the text 'Select vSRX OVF URL'.
- vSRX Root Password**: Text input field with a note below it: 'Password should not exceed 20 characters'.
- Confirm vSRX Root Password**: Text input field.
- Firewall Type**: Dropdown menu set to 'North-South'.
- Failure Policy**: Dropdown menu set to 'ALLOW'.

At the bottom right of the dialog box, there are two buttons: 'Cancel' and 'Register'.

2. In the Service Name field, enter the name of the Juniper security service.
3. From the vSRX OVF URL list, select the available vSRX OVF image that you copied to the Policy Enforcer machine.

4. In the vSRX Root Password field, enter the root password of the vSRX instance. The same root password will be set for all the vSRX instances deployed in NSX.
5. Select the firewall type as North-South. This is the perimeter firewall for the north-south traffic. This provides a consistent north-south security for members of the security groups, if the members move across datacenters.



NOTE: By default, the firewall type is East-West.

6. Click **Register**.

A confirmation message indicates whether the registration is successful or not.

The vSRX is added as a network service that can be deployed by the NSX-T Manager.

In the VMware NSX-T Manager, verify the following:

- Select **System > Service Deployments** and then select the **CATALOG** tab. Verify that the service name provided while registering the Security Service is listed in the table (the newly registered vSRX VM) as shown in [Figure 49 on page 452](#).

Figure 49: Service Definition

| Service Definition Name | Version | Functionality | Deployments |
|-------------------------|---------|--------------------------|----------------------|
| testSec | | Next Generation Firewall | View |
| vSRX_Edge | | Next Generation Firewall | View |

The NSX-T Manager and its inventory are now synchronized with the Security Director. All shared objects (such as security groups) are synchronized between the NSX-T Manager and Security Director. The shared objects include the IP addresses of all VMs, including the vSRX agent VMs. Security Director creates a dynamic address group(DAG) for each security group synchronized from the NSX-T Manager, along with the addresses of each member of the security group.

After you register a Juniper security service in the NSX-T Manager, the NSX-T Manager uses the vSRX agent VM to communicate the service status. The NSX-T Manager transmits messages to Security Director when any changes or activities are happening in the NSX-T Manager that are related to the Juniper security service.

If the firewall type is East-West, after registering the security service, you must add a service segment, service profile, and a service chain.

Navigate to **Security > Network Introspection Settings** and do the following:

In the SERVICE SEGMENT tab, add a service segment:

1. Click **ADD SERVICE SEGMENT**.
2. Enter the service segment name.
3. Select the transport zone.
4. Select the Tier0/Tier1 gateway to which the service segment is connected.
5. Click **SAVE**.

In the Service Profiles tab, add a service profile:

1. Select the partner service.

It is the service name used while registering the service in Security Director.

2. Click **ADD SERVICE PROFILE**.
3. Enter the service profile name.
4. Select the vendor template.
5. Click **Save**.

In the Service Chains tab, add a service chain:

1. Click **ADD CHAIN**.
2. Enter the service chain name.
3. Select the service segment.
4. Click the **Set Forward Path** link.

The Set Forward Path page is displayed.

5. Click **ADD PROFILE IN SEQUENCE**, select a service profile and click **SAVE**.

The service profile is mapped in the forward path.

6. Click **SAVE**.

Deploy vSRX as a Security Service

The next step is to deploy the Juniper security service.

To deploy the vSRX agent VM as a security service:

1. Select **System > Service Deployments** and then click the **DEPLOYMENT** tab.
2. Select the partner service as the registered service and then click **Deploy Service**.
 - a. Enter the service deployment name.
 - b. Select the attachment point as Tier1 gateway or Tier 0 gateway.
 - c. Select the Compute Manager as vCenter.
 - d. Select the Cluster on which the vSRX agent VM is to be deployed.



NOTE: For East-West traffic, the deployment type can be host based or cluster based.

- e. Select the datastore on which to allocate shared storage for the vSRX agent VM.
 - f. Click Set and then provide the network details such as, primary interface network, primary interface IP, primary gateway address, primary subnet mask and click **Save**.
3. Click **SAVE** to deploy the vSRX agent VM as a security service.

The Security Director automatically discovers all the deployed vSRX VM agents by using the device-initiated discovery. A new firewall and IPS group policies are created and all devices are assigned to these group policies.



NOTE:

- The Security Director creates predefined IPS policies with a single IPS template. You can either add more IPS templates or convert the predefined IPS policies to custom IPS policies.
- You must register different service for each service deployment.

Verify vSRX Agent VM Deployment in Security Director

In Security Director, based on the NSX Manager discovery, NSX security groups are automatically synchronized with Security Director. For each service group in NSX Manager, Security Director creates a corresponding dynamic address group.

To verify that the vSRX agent VMs have been deployed:

1. Select **Security Director > Devices > NSX Managers**.

The NSX Managers page appears with the discovered NSX Manager and the vSRX instance registered as a new service.

2. Select **Security Director > Monitor > NSX Inventory > Security Groups**.

The Security Groups page appears listing all the security groups obtained from NSX and the corresponding dynamic address groups created by the Security Director.

3. Select **Security Director > Monitor > vCenter Server Inventory > Virtual Machines**.

The Virtual Machines page appears, listing the VMs that are dynamically fetched by the associated vCenter, as shown in [Figure 50 on page 455](#). You can view the security groups associated with each VM. Also, you can view security groups associated with each VM.

Figure 50: Virtual Machines Page

Monitor / vCenter Server Inventory / Virtual Machines

Virtual Machines ?

| | VM Name | vCenter | OS on VM | Security Groups | Network Details | State | Status |
|---|----------------------|---------------|------------------------|----------------------|----------------------|------------|-----------|
| ▶ | scale-1 | 10.206.33.244 | Red Hat Enterprise ... | View | View | poweredOn | connected |
| ▶ | viso-space-17.1R1.7 | 10.206.33.244 | Red Hat Enterprise ... | View | View | poweredOff | orphaned |
| ▶ | sd-nsx-25-26 | 10.206.33.244 | Red Hat Enterprise ... | View | View | poweredOn | connected |
| ▶ | dir1-0 | 10.206.33.244 | Other Linux (64-bit) | View | View | poweredOn | connected |
| ▶ | scale-2 (1) | 10.206.33.244 | Red Hat Enterprise ... | View | View | poweredOn | connected |
| ▶ | JNPR v1.0 (1) | 10.206.33.244 | Other (32-bit) | View | View | poweredOn | connected |
| ▶ | JNPR v1.0 (2) | 10.206.33.244 | Other (32-bit) | View | View | poweredOn | connected |
| ▶ | VSRX-121X47-D20... | 10.206.33.244 | FreeBSD (32-bit) | View | View | poweredOn | connected |
| ▶ | NSX_Controller_1d... | 10.206.33.244 | Debian GNU/Linux ... | View | View | poweredOn | connected |

18 Rows

Automatic Creation of Security Policy in the NSX-T Environment to Direct Traffic Through the vSRX Agent VMs

After you deploy vSRX agent VM security services, security policies are automatically created to redirect any network traffic originating from the VMs in a specific security group to the Juniper security service vSRX agent VM for further analysis.


To direct the traffic to the vSRX agent VMs by using the automatically created security policies:

1. In Security Director, install the IPS signature to all the vSRX VM agents.

2. On the Firewall and IPS Policies page, add new rules to the automatically created firewall or IPS policies with respective dynamic address groups. You can also use the application firewalls in the firewall rules.
3. After creating policy rules, publish and update the firewall and IPS policies.
4. After the firewall and IPS policies are successfully updated in the Security Director, log in to the VMware NSX-T Manager to verify the security policies.

Select **Security > Network Introspection (N-S)**. The security policies are automatically created from Security Director, as shown [Figure 51 on page 456](#).

Figure 51: Network Introspection (N-S)

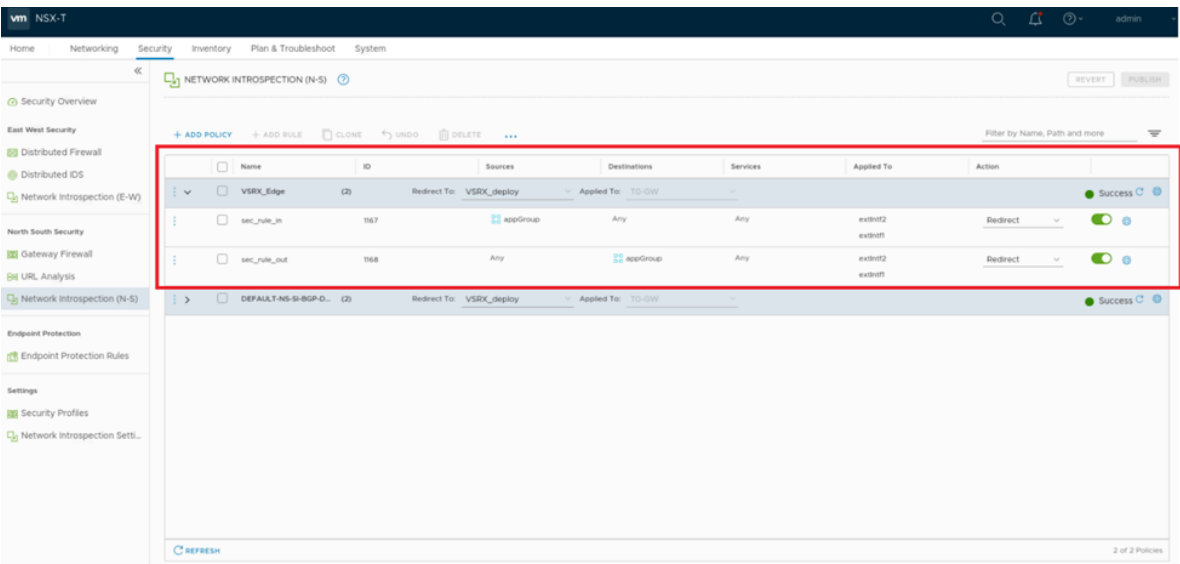

NOTE: In the case of East-West traffic, you must select **Security > Network Introspection (E-W)**.











When you return to **Security Director > Devices > Security Devices**, you can view the active configuration for the vSRX agent VMs, as shown in [Figure 52 on page 457](#).

Figure 52: Security Devices Page

Devices / Security Devices

Security Devices

Update Changes Resynchronize with Network Upload Keys Mo

| <input type="checkbox"/> | Device Name | IP Address | OS Version | Schema Version | CPU | Storage | Authentication Status | Connection Status |
|--------------------------|--------------------------------|--------------|----------------------------|------------------------------|--|---|--------------------------------|-------------------|
| <input type="checkbox"/> | VPN-Automation-Device1 | 10.213.49.25 | 15.1-2017-04-09.1_DEV_X... | 15.1X49-D100.3 [Mismatch ... |  |  | Credentials Based - Unverified | down |
| <input type="checkbox"/> | 10_206_47_10-nsx-agent | 10.206.47.10 | 15.1X49-D100.3 | 15.1X49-D100.3 |  |  | Credentials Based - Unverified | up |
| <input type="checkbox"/> | 10_206_47_8-nsx-agent | 10.206.47.8 | 15.1X49-D100.3 | 15.1X49-D100.3 |  |  | Credentials Based - Unverified | up |
| <input type="checkbox"/> | 10_206_47_9-nsx-agent | 10.206.47.9 | 15.1X49-D100.3 | 15.1X49-D100.3 |  |  | Credentials Based - Unverified | up |
| <input type="checkbox"/> | VSRX-10.213.49.21 | 10.213.49.21 | 15.1-2017-02-14.0_DEV_X... | 15.1X49-D100.3 [Mismatch ... |  |  | Credentials Based - Unverified | up |
| <input type="checkbox"/> | > pmphilip-IsysoidCluster_root | 10.206.33.5 | 12.3X48-D40.5 | 15.1X49-D100.3 [Mismatch ... | NA | NA | NA | down |
| <input type="checkbox"/> | > LSYS-3oidCluster_root | 10.206.33.5 | 12.3X48-D40.5 | 15.1X49-D100.3 [Mismatch ... | NA | NA | NA | down |

The NSX-T Manager is aware of the security groups that the Juniper security service monitors. If any changes occur in the security group, the NSX-T Manager notifies Security Director about those changes. If membership changes, NSX-T Manager notifies Security Director of the changes and Security Director updates its database based on the new membership.

vCenter Servers

IN THIS CHAPTER

- [About the vCenter Servers Page | 458](#)

About the vCenter Servers Page

IN THIS SECTION

- [Tasks You Can Perform | 458](#)
- [Field Descriptions | 458](#)

To access this page, select Security Director > Devices > vCenter Servers.

VMWare NSX Manager is always associated to a vCenter Server. Based on the NSX Manager discovered by Security Director, the NSX service automatically fetches the associated vCenter server hostname. The NSX service uses the specific vCenter credentials provided by the user at the time of adding the NSX Manager, to connect to vCenter and obtain any required inventory from it.

Use the vCenter Servers page to view details of an associated vCenter Server.

Tasks You Can Perform

You can perform the following task from this page:

- Synchronize any changes to the inventory objects in vCenter with the vCenter database.

Field Descriptions

[Table 157 on page 459](#) provides guidelines on using the fields on the vCenter Servers page.

Table 157: Fields on the vCenter Servers Page

| Field | Description |
|-------------------|---|
| Host Name | Specifies the hostname of the associated vCenter Server. |
| Port | Specifies the port number of the vCenter server. |
| Connection Status | Specifies the connection status of NSX Manager and associated vCenter server. |

RELATED DOCUMENTATION

| |
|--------------------------------------|
| <i>About the NSX Managers Page</i> |
| <i>Add the NSX Manager</i> |
| <i>Registering Security Services</i> |

CHAPTER 43

Licenses

IN THIS CHAPTER

- [About the Licenses Page | 460](#)
- [License Management Overview | 464](#)
- [Managing Licenses | 466](#)

About the Licenses Page

IN THIS SECTION

- [Tasks You Can Perform | 460](#)
- [Field Descriptions | 461](#)

To access this page, click **Devices > Licenses**.

You can manage the licenses for features such as antispam, antivirus, IDP signature, Juniper Advanced Threat Prevention Cloud (Juniper ATP Cloud), Content Security and also vSRX Virtual Firewall (Virtual Appliance). You can deploy the license from Security Director and view the license details such as total number of installed licenses, used licenses, expired licenses, and so on.

Tasks You Can Perform

You can perform the following tasks from this page:

- View the license details. See "[License Management Overview](#)" on page 464.
- Deploy the license on devices. See "[Managing Licenses](#)" on page 466.

Field Descriptions

Table 158 on page 461 provides guidelines on using the fields on the License page.

Table 158: Fields on the Licenses Page

| Field | Description |
|----------------|--|
| Device Name | The name of the device. |
| Device IP | The IP address of the device. |
| Device Family | Device family of the selected device. For the unmanaged device, this is the same as the provided vendor name. The field displays Unknown if the vendor name is not available and if SNMP is not used or has failed. |
| Connection | <p>Connection status of the device in Junos Space Network Management Platform.</p> <ul style="list-style-type: none"> • Up—The device is connected to Junos Space Network Management Platform. • Down—The device is not connected to Junos Space Network Management Platform. When the connection status is down, the configuration status is None or Connecting. • NA—The device is unmanaged. |
| Platform | <p>The device on which the feature license is deployed. The device can be an SRX Series device or a vSRX device.</p> <p>For the unmanaged device, this is same as the provided vendor name. The field displays Unknown if the vendor name is not available and if SNMP is not used or has failed.</p> |
| Managed Status | The status of the device managed by Security Director. |

Table 158: Fields on the Licenses Page *(Continued)*

| Field | Description |
|----------------------|---|
| Configuration Status | <p data-bbox="477 363 911 390">Current state of the device configuration.</p> <ul style="list-style-type: none"> <li data-bbox="477 426 1382 489">• Connecting—Junos Space has sent a connection remote procedure call (RPC) and is waiting for the first connection from the device. <li data-bbox="477 525 1349 588">• Undefined—The device is in this state only for a short period when Junos Space Network Management Platform is set as the system of record (SOR). <li data-bbox="477 623 1421 1707"> <ul style="list-style-type: none"> <li data-bbox="518 623 1089 651">• Unknown—This state occurs in the following cases: <ul style="list-style-type: none"> <li data-bbox="558 686 1421 854">• When the device disconnects from Junos Space Network Management Platform. The device status remains Unknown until the device reconnects to Junos Space Network Management Platform and the configuration status of the device is checked against the Junos Space Network Management Platform database. It will be in this state until the device connects. <li data-bbox="558 890 1421 995">• If Junos Space Network Management Platform is trying to push or synchronize changes to the device based on the workflow for accepting or rejecting out-of-band changes on the device and the push or synchronize fails. <li data-bbox="518 1031 1398 1094">• In Sync—The synchronization operation has completed successfully; Junos Space Network Management Platform and the device are synchronized. <li data-bbox="518 1129 1406 1192">• None—The device is discovered, but Junos Space Network Management Platform has not yet sent a connection RPC. <li data-bbox="518 1228 1421 1367">• Out Of Sync—In network as SOR mode, the device is connected to Junos Space Network Management Platform, but the synchronization operation is not initiated, or an out-of-band configuration change on the device was detected and auto-resynchronization is disabled or has not yet started. <li data-bbox="518 1402 1081 1430">• Sync Failed—The synchronization operation failed. <li data-bbox="518 1465 1373 1570">• Synchronizing—The synchronization operation has started as a result of device discovery, a manual resynchronization operation, or an automatic resynchronization operation. <li data-bbox="518 1606 1382 1707">• Space Changed—In Junos Space Network Management Platform as SOR mode, there are changes made to the device configuration from Junos Space Network Management Platform. |

Table 158: Fields on the Licenses Page *(Continued)*

| Field | Description |
|-----------------------|---|
| | <ul style="list-style-type: none"> • Device Changed—In Junos Space Network Management Platform as SOR mode, there are changes made to the device configuration from the device CLI. • Space & Device Changed—In Junos Space Network Management Platform as SOR mode, there are changes made to the device configuration from the device CLI and Junos Space Network Management Platform. Neither automatic nor manual resynchronization is available. • In-RMA—The configuration of the defective device is maintained in Junos Space Network Management Platform so that the device can be reconnected and managed when it is replaced. • Reactivating—The defective device is replaced and the reactivation of the replacement device to bring it back under management has started. • Reactivate Failed—The operation to reactivate the device has failed. • Unmanaged—The device is unmanaged. • Waiting for deployment—The modeled device is unreachable and needs to be activated. • Modeled—The device is modeled. |
| Anti Spam | Shows the validity of the license. |
| Anti Virus | Shows the validity of the license. |
| IDP Signature | Shows the validity of the license. |
| ATP Cloud | Shows the validity of the license. |
| Content Security | Shows the validity of the license. |
| vSRX Virtual Firewall | Shows the validity of the license. |

RELATED DOCUMENTATION

[License Management Overview](#) | 464

[Managing Licenses](#) | 466

License Management Overview

IN THIS SECTION

- [Benefits](#) | 465

Starting in Junos Space Security Director Release 19.4R1, you can manage the licenses for features such as antispam, antivirus, IDP signature, Juniper Advanced Threat Prevention Cloud (Juniper ATP Cloud), Content Security, and also for vSRX Virtual Firewall (Virtual Appliance). You can deploy the license on the device(s) managed by Security Director and view the history of pushed licenses. You can either select a single SRX Series device or a multiple vSRX Virtual Firewall devices to deploy the license. Each license allows you to run the corresponding advanced software feature(s) on a single device.

You can view the following license information of devices managed by Security Director:

- **Total Licenses**—Total number of licenses installed on devices managed by Security Director.
- **Used**—Number of licenses currently being used on the device. If a feature license exists and the feature is configured on a device, then the license is considered as a used license.
- **Expired**—Number of expired licenses.
- **Expiring**—Number of licenses that are about to expire within 30 days.

You can hover over the numbers in the Licenses page to view the device and license details. You can view all devices that are discovered and managed by Security Director, with installed license details. You can use the View By option to filter the license details. You can also search, sort, or filter the license details using parameters such as device name, device IP address, device family, platform, expired licenses, licenses that are going to expire, and so on. You can go back to the default view anytime by selecting the Reset to Default View option.

Different icons are shown to indicate if the license is valid, expiring, or expired.

**NOTE:**

- If the validity of the license is more than 30 days, then feature license status is shown in green icon.
- If the validity of the license is less than 30 days, then feature license status is shown in yellow icon.
- If the license has expired, then feature license status is shown in red icon.

You can push the license on devices managed by Security Director and view the history of pushed licenses on devices.

You can configure the schedule for polling devices for license details. If you want to send notification regarding licenses that are about to expire, you can enable the license notification settings and add the e-mail recipients. E-mail will be sent to the configured recipient with license expiry details.

Based on RBAC permission, you can perform actions such as view license information, deploy license on devices, view the history of pushed licenses, view license information of a specific device, and modify the notification settings. By default, Pre defined Roles for “Super Administrator, Security Architect and Security Analyst” have the permissions to perform all actions. Where as “Security Operator Read Only” can only view the license information.

User-defined (customized) roles can perform appropriate actions who are assigned the Super Administrator or Security Architect or Security Analyst or Security Operator Read Only or by a role with the Create License Management Privileges which you can find under Security Director Devices option in Create Role page.

Benefits

- It's easy to view the license statistics and take necessary actions.
- You know which license is installed on a particular device along with the license status.
- You can easily deploy license from Security Director to one or more device(s).

RELATED DOCUMENTATION

[Managing Licenses](#) | 466

[Notification Settings](#) | 1476

Managing Licenses

IN THIS SECTION

- [Deploy a License on a Device | 466](#)
- [View the License Push History Details | 466](#)

You can install the license manually on the selected devices from Security Director. You can push the license by either selecting a single SRX Series device or multiple vSRX Virtual Firewall devices at a time. Each license can have one feature or multiple features and is valid on a single device. You can push the license on a device either by uploading a license file or by copying and pasting the license key.

Deploy a License on a Device

To deploy a license on a device:

1. Select **Devices > **Licenses**.**

The Licenses page is displayed.

2. Select a device and click **Push License.**

The Push License page is displayed.

3. Select an option to deploy the license:

- **Upload license file**—You can browse and upload a license file as a .txt file.
- **Copy/Paste license details**—You can copy the license key from the license file and paste it in the textbox. You must not edit the key.

4. Select **Push License.**

The job details are displayed. You can see the status of the Job in the Job Management page.

5. Click **OK.**

View the License Push History Details

To view the history of deployed license details:

1. Select **Devices > **Licenses**.**

The Licenses page is displayed.

2. Select a device and click **Push History.**

The Push History page is displayed with details of the license deployed on the selected device.

3. Click **OK.**

RELATED DOCUMENTATION

| [License Management Overview](#) | 464

5

PART

Configure

- [Firewall Policy-Standard Policies | 471](#)
- [Firewall Policy-Unified Policies | 526](#)
- [Firewall Policy-Devices | 549](#)
- [Firewall Policy-Schedules | 551](#)
- [Firewall Policy-Profiles | 555](#)
- [Firewall Policy-Templates | 569](#)
- [Firewall Policy-Secure Web Proxy | 575](#)
- [Firewall Policy-DNS Security & ETI Profile | 581](#)
- [Firewall Policy-DNS Security & ETI Policy | 588](#)
- [Firewall Policy-DNS Sinkhole | 592](#)
- [Environment | 599](#)
- [Application Firewall Policy-Policies | 610](#)
- [Application Firewall Policy-Signatures | 620](#)
- [Application Firewall Policy-Redirect Profiles | 633](#)
- [SSL Profiles | 638](#)
- [User Firewall Management-Active Directory | 662](#)
- [User Firewall Management-Access Profile | 673](#)
- [User Firewall Management-Address Pools | 687](#)
- [User Firewall Management-Identity Management | 691](#)
- [User Firewall Management-End User Profile | 702](#)

[IPS Policy-Policies | 710](#)

[IPS Policy-Devices | 746](#)

[IPS Policy-Signatures | 749](#)

[IPS Policy-Templates | 773](#)

[NAT Policy-Policies | 779](#)

[NAT Policy-Devices | 812](#)

[NAT Policy-Pools | 814](#)

[NAT Policy-Port Sets | 824](#)

[Content Security Policy-Policies | 832](#)

[Content Security Policy-Web Filtering Profiles | 844](#)

[Content Security Policy-Category Update | 851](#)

[Content Security Policy-Antivirus Profiles | 857](#)

[Content Security Policy-Antispam Profiles | 861](#)

[Content Security Policy-Content Filtering Profiles | 865](#)

[Content Security Policy-Global Device Profiles | 870](#)

[Content Security Policy-Default Configuration | 875](#)

[Content Security Policy-URL Patterns | 897](#)

[Content Security Policy-Custom URL Categories | 899](#)

[Application Routing Policies | 901](#)

[Threat Prevention - Policies | 917](#)

[Threat Prevention - Feed Sources | 939](#)

[IPsec VPN-VPNs | 980](#)

[IPsec VPN-Extranet Devices | 1081](#)

[IPsec VPN-Profiles | 1084](#)

[Insights | 1096](#)

[Shared Objects-Geo IP | 1118](#)

[Shared Objects-Policy Enforcement Groups | 1122](#)

[Shared Objects-Addresses | 1126](#)

[Shared Objects-Services | 1139](#)

[Shared Objects-Variables | 1153](#)

[Shared Objects-Zone Sets | 1159](#)

[Shared Objects-Metadata | 1170](#)

[Change Management-Change Requests | 1174](#)

[Change Management-Change Request History | 1197](#)

[Overview of Policy Enforcer and Juniper ATP Cloud | 1200](#)

[Concepts and Configuration Types to Understand Before You Begin \(Policy Enforcer and Juniper ATP Cloud\) | 1208](#)

[Installing Policy Enforcer | 1225](#)

[Configuring Policy Enforcer Settings and Connectors | 1253](#)

[Guided Setup-ATP Cloud with SDSN | 1328](#)

[Guided Setup-ATP Cloud | 1334](#)

[Guided Setup for No ATP Cloud \(No Selection\) | 1337](#)

[Manual Configuration- ATP Cloud with SDSN | 1341](#)

[Manual Configuration-ATP Cloud | 1343](#)

[Cloud Feeds Only Threat Prevention | 1349](#)

[Configuring No ATP Cloud \(No Selection\) \(without Guided Setup\) | 1352](#)

[Migration Instructions for Spotlight Secure Customers | 1354](#)

Firewall Policy-Standard Policies

IN THIS CHAPTER

- [Firewall Policies Overview | 472](#)
- [Policy Ordering Overview | 475](#)
- [Creating Firewall Policies | 478](#)
- [Firewall Policies Best Practices | 481](#)
- [Creating Firewall Policy Rules | 482](#)
- [Rule Base Overview | 492](#)
- [Firewall Policy Locking Modes | 494](#)
- [Rule Operations on Filtered Rules Overview | 496](#)
- [Create and Manage Policy Versions | 497](#)
- [Assigning Devices to Policies | 500](#)
- [Comparing Policies | 501](#)
- [Export Policies | 502](#)
- [Creating Custom Columns | 503](#)
- [Promoting to Group Policy | 505](#)
- [Converting Standard Policy to Unified Policy | 507](#)
- [Probe Latest Policy Hits | 508](#)
- [Disable Firewall Policy Rules Based on Hits Over a Specified Duration | 508](#)
- [Viewing and Synchronizing Out-of-Band Firewall Policy Changes Manually | 510](#)
- [Importing Policies | 512](#)
- [Delete and Replace Policies and Objects | 513](#)
- [Unassigning Devices from Policies | 514](#)
- [Edit and Clone Policies and Objects | 515](#)
- [Publishing Policies | 516](#)
- [Showing Duplicate Policies and Objects | 517](#)
- [Show and Delete Unused Policies and Objects | 518](#)
- [Updating Policies on Devices | 519](#)

- [Firewall Policies Main Page Fields | 520](#)
- [Firewall Policy Rules Main Page Fields | 521](#)

Firewall Policies Overview

Security Director provides you with two types of firewall *policies*:

- **Device Policy**—Type of firewall policy that is created per device. This type of policy is used when you want to push a unique firewall policy configuration per device. You can create device rules for a device firewall policy.

Security Director views a logical system or a tenant system like it does any other security device, and it takes ownership of the security configuration of the logical system or tenant system. In Security Director, each logical system or tenant system is managed as a unique security device.

During a device assignment for a device policy, only devices from the current domain are listed.



NOTE: If Security Director discovers the root logical system, the root Isys discovers all other user Isys inside the device.

Security Director allows a device to have a device-specific policy and to be part of multiple group policies. Rules for a device are updated in the following order:

- Rules within **Policies Applied Before 'Device Specific Policies'**
- Rules within **Device-Specific Policies**
- Rules within **Policies Applied After 'Device Specific Policies'**

Rules within **Policies Applied Before 'Device Specific Policies'** take priority and cannot be overridden. However, you can override rules within **Policies Applied After 'Device Specific Policies'** by adding an overriding rule in the **Device-Specific Policies**. In an enterprise scenario, “common-must-enforce” rules can be assigned to a device from the **Policies Applied Before 'Device Specific Policies'**, and “common-nice-to-have” rules can be assigned to a device from the **Policies Applied After 'Device Specific Policies'**.



NOTE: An exception can be added on a per device basis in “Device-Specific Policies” . For a complete list of rules applied to a device, select **Configure > Firewall Policy > Devices**. Select a device to view rules associated with that device.

All devices policy enables rules to be enforced globally to all the devices managed by Security Director. All devices policy is part of the Global domain and is visible in all the child domains if the view parent is enabled.

- **Group**—Type of firewall policy that is shared with multiple devices. This type of policy is used when you want to update a specific firewall policy configuration to a large set of devices. You can select the policy placement to be before device specific or after device specific. When a group firewall policy is updated on the devices, the rules are updated in the following order:
 - Rules within **Policies Applied Before 'Device Specific Policies'**
 - Rules within **Device-Specific Policies**
 - Rules within **Policies Applied After 'Device Specific Policies'**

During a device assignment for a group policy, only devices from the current and child domains (with view parent enabled) are listed. Devices in the child domain with view parent disabled are not listed. Not all the group policies of the Global domain are visible in the child domain. Group policies of the Global domain (including All device policy) are not visible to the child domain, if the view parent of that child domain is disabled. Only the group policies of the Global domain, which has devices from the child domain assigned to it, are visible in the child domain. If there is a group policy in global domain with devices from both D1 and the Global domains assigned to it, only this group policy of the Global domain is visible in the D1 domain along with only the D1 domain devices. No other devices, that is the Device-Exception policy, of the Global domain is visible in the D1 domain.

You cannot edit a group policy of the Global domain from the child domain. This is true for All Devices policy as well. Modifying the policy, deletion of the policy, managing a snapshot, snapshot policy and acquiring the policy lock is also not allowed. Similarly, you cannot perform these actions on the Device-Exception policy of the D1 domain from the Global domain. You can prioritize group policies from the current domain. Group policies from the other domains are not listed.



NOTE: Group policies applied before (Pre) or after (Post) Device Specific Policies via Security Director:

- Works separately for Global-based and Zone-based policies.
- Do not alter the Junos-SRX policy precedence order as stated in ["Policy Ordering Overview" on page 475](#).

The basic settings of a firewall policy are obtained from the policy profile. The basic settings include log options, firewall authentication schemes, and traffic redirection options.

Firewall policies are displayed in a tabular view. You can select a policy and apply rules either inline or using the + icon. For more information, see ["Creating Firewall Policy Rules" on page 482](#).

Starting in Junos Space Security Director Release 19.3R1, you can assign IPS policy to the standard firewall policy rule. The CLI is generated for the IPS policy along with the standard firewall policy (to which the IPS policy is assigned) for devices with Junos OS Release 18.2 onward. Since the IPS policy name is directly used in the firewall policy rule, the [edit security idp active-policy policy-name] statement is deprecated in Junos OS Release 18.2 onward. You can import and convert the deprecated active policy CLI into a new CLI from Security Director. You can import the IPS policy for the deprecated active-policy for Junos OS version 18.2 and later. After the IPS policy is imported, the rules associated with the firewall policy for the device is updated with IPS policy details. On subsequent update from Security Director, you can see the new firewall policy CLIs, in preview, to attach IDP and the same can be updated to device.

**NOTE:**

- In a device with Junos OS Release 18.2, you must assign same IPS policy to all the rules in the firewall policy, otherwise commit fails.
- In a device with Junos OS Release 18.3 onward, you can assign different IPS policy to the rules in the firewall policy. You must set a default IDP policy, otherwise commit fails.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Firewall Policies Best Practices | 481](#)

[Assigning Policies and Profiles to Domains | 567](#)

[Publishing Policies | 516](#)

[Configure a Default IDP Policy | 547](#)

Policy Ordering Overview

IN THIS SECTION

- [Reordering a Policy | 475](#)
- [Order of Precedence for Policy Matches | 476](#)

By default, new policies go to the end of a policy lookup list. Therefore, it is possible for one policy to eclipse or overshadow another policy. The order of configured policies is significant in how the device handles traffic. Policy look up is performed in the order that policies are configured. The first policy that matches the traffic is used. If a specific policy is listed after a general policy, it is highly probable that the specific policy will not be used.

For example, if you have two policies configured for the same source zone, destination zone, source IP address, and destination IP address, but one policy has permit-all and one has permit-mail, the policy with permit-mail would never be matched if it is listed after the policy with permit-all.

Because policies execute in the order of their appearance, you must be aware of the following:

- Policy order is important.
- Newly created policies go to the end of the policy list.
- You can change the order of policies.
- The last policy in the policy list is the default policy, which has the default action of denying all traffic.

Reordering a Policy

You can correct policy overshadowing by simply reversing the order of the policies, putting the more specific one first.



NOTE: Policy ordering is extremely important in Virtual Private Networks (VPN) environments. Listing a VPN or encryption policy first ensures that VPN traffic reaches the encryption policy, not a general permit policy.

The S. No. (sequence number) column on the Zone Policy page allows you to reorder the policies:

- Use the S. No. column to type a number to change the policy order.

- Drag and drop a selected policy from one location to another.

The sequence number changes as you drag the policy or manually type a new sequence number. The sequence numbers of all the policies below the newly moved policy also change.




NOTE: The drag and drop feature is disabled if you have filtered the policy list.

Order of Precedence for Policy Matches

For policy matches, it is important to understand how the firewall evaluates policies. Juniper calls a security policy context the policy that is within the same source-destination zone pair. For instance, all policies within source zone trust and destination zone untrust are in the same context. Figure 1 shows the order in which policies are looked up.

Figure 53: Policy Lookup

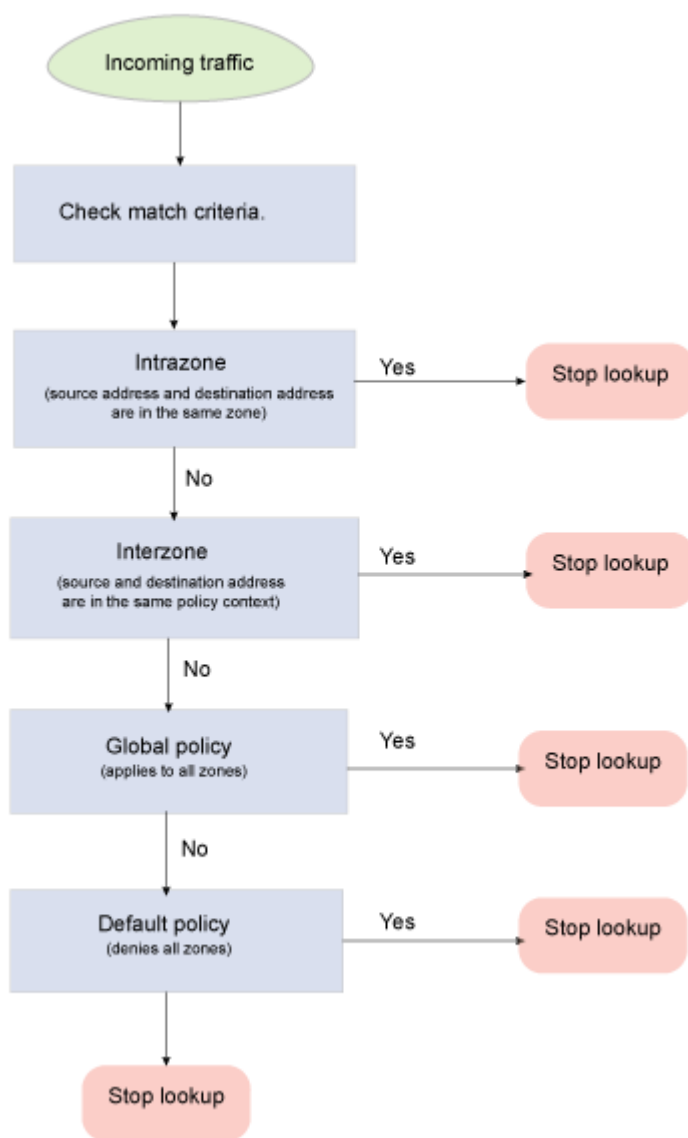

In terms of context precedence, SRX Series devices support the following order of precedence:

1. Match intrazone policies: The initial packet in an unknown session is evaluated to determine if the source and destination zones are the same. This occurs if both the ingress and egress interfaces are in the same zone. This context match has the highest precedence and is matched first.
2. Match interzone policies: If the session does not match an intrazone context or policy, then the next policy is for a source zone and destination zone context. If the context matches, then the policies within that context are evaluated for a match. Interzone policies are only evaluated if there is no matching intrazone policy match.

3. Global policies: If there is no policy match for either intrazone or interzone policies, then the next policy match is the global policy. A global policy matches any zone context, but it has the same match criteria for the policies as any other security policy (for example, source IP address, destination address, services, user object, and so forth). It is the last policy set that is evaluated after intrazone and interzone policies.
4. Default action: this action is taken if there is no match on intrazone, interzone, or global policies.

RELATED DOCUMENTATION

[Firewall Policies Overview | 472](#)

[Creating Firewall Policies | 478](#)

Creating Firewall Policies

Before You Begin

- Read the Firewall Policies Overview topic.
- Review the firewall policies main page for an understanding of your current data set. See "[Firewall Policies Main Page Fields](#)" on page 520 for field descriptions.
- Create source (from-zone) and destination (to-zone) zones.
- Create addresses and address sets.
- Create services (applications) and service sets (application sets).

Use the Create Firewall Policies page to configure group or device policies that determine all the network resources within your organization and that identify the required security level for those resources.

To create a firewall policy:

1. Select **Configure > Firewall Policy > Standard Policies**.
The Standard Policies page is displayed.
2. Click the + icon.
3. Complete the configuration according to the guidelines provided in [Table 159 on page 479](#).
4. Click **OK**. A firewall policy is created. You can click on the policy to assign rules inline or select the policy and click the + icon to configure policy rules. See "[Creating Firewall Policy Rules](#)" on page 482.

A new policy is created according to your configuration. You can use this policy to assign rules, profiles, and schedules. To enable a policy, you must assign it to a domain. See ["Assigning Policies and Profiles to Domains" on page 567](#).

Table 159: Firewall Policy Settings

| Setting | Guideline |
|----------------------------|--|
| General Information | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. Maximum length is 255 characters. |
| Description | Enter a description for the group policy rules; maximum length is 255 characters. Comments entered in this field are sent to the device. |
| Policy Options | |
| Profile | <p>Select a profile for the policy:</p> <ul style="list-style-type: none"> Log Session Init—Record entries for session start events. A traffic log that records session start events does not include bytes sent and received or session duration, but you can use the log to verify when the session was initially created. Log Session Close—Record entries for session close events. A traffic log that records session close information also lists a reason for the end of the session. All Logging Enabled—Logs are created for both session initiation and session closing. Logs can be used for troubleshooting. All Logging Disabled—Logs are not recorded for both session initiation and session closing. |
| Type | <p>Select the type of policy you want to create:</p> <ul style="list-style-type: none"> Group Policy—Firewall policy that is shared with multiple devices. This type of policy is used when you want to update a specific firewall policy configuration to a large set of devices. You can create group prerules, group postrules, and device rules for a group policy. Device Policy—Firewall policy that is created per device. This type of policy is used when you want to push a unique firewall policy configuration per device. You can create device rules for a device firewall policy. During a device assignment for a device policy, only devices from the current domain are listed. |

Table 159: Firewall Policy Settings *(Continued)*

| Setting | Guideline |
|-------------------------|--|
| Device Selection | |
| Devices | <p>Starting Junos Space Security Director Release 16.2, both SRX Series devices and MX Series routers are listed. When a policy is published to a device, device-specific rules are published to the appropriate SRX Series devices or MX Series routers.</p> <p>Select the devices on which the group policy will be published. For a group policy, you can include both SRX Series devices and MX Series routers. Select devices from the Available column and click the right arrow to move these devices to the Selected column. For device only policy, select the device with which you want to associate the policy.</p> <p>NOTE: You can also search for devices by entering the device name, device IP address, or device tags in the Search fields in the Devices area. Once the searched devices appear, you can move them to the Selected pane.</p> <p>NOTE: Starting in Junos Space Security Director Release 20.1R1, logical system (LSYS) is supported on devices running Junos OS Release 18.3 and later.</p> <p>Starting in Junos Space Security Director Release 21.2R1, tenant system (TSYS) is supported on devices running Junos OS Release 18.3 and later for SRX Series devices and Junos OS Release 20.1 and later for vSRX Virtual Firewall Series devices.</p> |
| Policy Sequence | |
| Policy Placement | (For Group Policy only). Select Before Device Specific Policies or After Device Specific Policies. This decides the policy order when the devices policy configuration information is updated on the devices. |
| Policy Sequence No. | (For Group Policy only). Select this option to specify the order number for the policy. Policy lookup is performed in the order that the policies are configured. The first policy that matches the traffic is used. For more information, see "Policy Ordering Overview" on page 475. |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.2 | Starting Junos Space Security Director Release 16.2, both SRX Series devices and MX Series routers are listed. |

RELATED DOCUMENTATION

[Firewall Policies Overview | 472](#)

[Firewall Policies Best Practices | 481](#)

[Creating Firewall Policy Rules | 482](#)

[Policy Ordering Overview | 475](#)

[Publishing Policies | 516](#)

Firewall Policies Best Practices

A secure network is vital to a business. To secure a network, a network administrator must create a *security policy* that outlines all of the network resources within that business and the required security level for those resources. The policy applies the security rules to the transit traffic within a context (source zone and destination zone) and each policy is uniquely identified by its name. The traffic is classified by matching source and destination zones, source and destination addresses, and the service (application) that the traffic carries in its protocol headers with the policy database in the data plane.

Configuring security policies to enforce traffic rules in a network can be relatively easy but requires careful consideration. There are several best practices to use when defining an effective firewall policy to ensure better use of system memory and to optimize policy configuration:

1. Use least privilege policies—Make the firewall rules as tight as possible in terms of match criteria and permitting traffic. Only permit traffic that is allowed by your organizational policy and deny all other traffic. This is true for both ingress and egress traffic, meaning traffic from the Internet to internal resources and also traffic from internal resources to the Internet. A least privilege security policy helps to minimize the attack surface, making other controls more effective.
2. Segment logically—Zone-based firewalls allow you to place different interfaces into different zones. This allows you to design your network such that you can place resources in a manner where the firewall can enforce controls (interzone and intrazone policies).
3. Place specific firewall rules first—Place the most explicit firewall rules at the top of the *rule base* because traffic is matched starting at the top of the rulebase and going down with the first match.
4. Use address sets where possible—Address sets simplify administration of firewall policies. They allow you to group large sets of objects so that you can address them as a single object in a security policy. The more rules you can reference to the address sets, the easier it is to make changes because most organizations have logical objects that can be grouped

Use single prefixes for source and destination addresses. For example, instead of using /32 addresses and adding each address separately, use a large subnet that covers most of the IP addresses you require. Use fewer IPv6 addresses because IPv6 addresses consume more memory.

5. Use service sets where possible—Service sets simplify administration of firewall policies. They allow you to group large sets of objects so that you can address them as a single object in a security policy. Use service “any” whenever possible. Each time you define an individual service in the policy, you can use additional memory.
6. Use fewer zone pairs in policy configurations—Each source and destination zone uses about 16,048 bytes of memory. We recommend using global policies wherever possible. Global policies provide you with the flexibility to perform action on traffic without the restrictions of zone specifications.
7. Use explicit drop rules—To ensure that undesired traffic does not leak through a security policy, place an any-any-any drop rule at the bottom of each security zone context (for example, source zone to destination zone) along with a global policy. This does not mean that you should not define your firewall rules, it simply provides a catch-all mechanism for capturing unclassified traffic.
8. Use logging—We highly recommend that you log on all firewall policies. Logging provides you with an audit trail of all network activity, which helps in troubleshooting and diagnosis. Unless you are troubleshooting, it is best to use the Log on Session Close option instead of the Log on Session Initialization option. Session Close logs include a great deal more information about the session; this information is useful for diagnostic purposes.
9. Use Network Time Protocol (NTP)—NTP is a widely used protocol used to synchronize the clocks of routers and other hardware devices on the Internet. If any of the device clocks is wrong, then not only logs and troubleshooting information can be incorrect, but also security policy objects such as schedulers can have unintended results.
10. Check memory utilization—Check your memory usage before and after compiling policies.

RELATED DOCUMENTATION

[Firewall Policies Overview | 472](#)

[Creating Firewall Policies | 478](#)

Creating Firewall Policy Rules

Before You Begin


- Read the Overview Firewall Policies topic.
- Review the Firewall Rules main page for an understanding of your current data set. See "[Firewall Policy Rules Main Page Fields](#)" on [page 521](#) for field descriptions.

Use the Create Rule page to configure firewall rules that control transit traffic within a context (source zone to destination zone). The traffic is classified by matching its source and destination zones, the source and destination addresses, and the application that the traffic carries in its protocol headers with the policy database.

Security Director allows a device to have a device-specific policy and to be part of multiple group policies. Rules for a device are updated in this order:

- Rules within **Policies Applied Before 'Device Specific Policies'**
- Rules within **Device-Specific Policies**
- Rules within **Policies Applied After 'Device Specific Policies'**


Rules within **Policies Applied Before 'Device Specific Policies'** take priority and cannot be overridden. However, you can override rules within **Policies Applied After 'Device Specific Policies'** by adding an overriding rule in the Device-Specific Policies. In an enterprise scenario, “common-must-enforce” rules can be assigned to a device from the **Policies Applied Before 'Device Specific Policies'**, and “common-nice-to-have” rules can be assigned to a device from the **Policies Applied After 'Device Specific Policies'**.



NOTE: An exception can be added on a per device basis in “Device-Specific Policies” . For a complete list of rules applied to a device, select **Configure > Firewall Policy > Devices**. Select a device to view rules associated with that device.

To configure a firewall policy rule:

1. Select **Configure > Firewall Policy**.
2. Select the policy for which you want to define rules and click the + icon.
The Create Rules page appears.



NOTE: To edit and create rules inline, click the policy to make the fields editable.

3. Complete the configuration according to the guidelines provided in [Table 160 on page 483](#).
4. Click **OK**.

The rules you configured are associated with the selected policy.

Table 160: Firewall Policy Rules Setting

| Setting | Guideline |
|---------|-----------|
|---------|-----------|

General Information

Table 160: Firewall Policy Rules Setting *(Continued)*

| Setting | Guideline |
|-------------|---|
| Rule Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the; maximum length is 63 characters. |
| Description | Enter a description for the policy rules; maximum length is 1024 characters. Comments entered in this field are sent to the device. |

Identify the traffic that the rule applies to

| | |
|---------------|--|
| (Source) Zone | <p>For SRX Series devices, specify a source zone (from-zone) to define the context for the policy. Zone policies are applied on traffic entering one security zone (source zone) to another security zone (destination zone). This combination of a source zone and a destination zone is called a context.</p> <p>Starting in Junos Space Security Director Release 16.2, for MX Series routers, the source zone field acts as an ingress interface from where the packet enters. The match direction is input, if the packet is entering the interface. The match direction is output, if the packet is leaving the interface. Configure the ingress key by selecting the aggregated multiservices (AMS) value.</p> <p>Starting in Junos Space Security Director Release 16.2, polymorphic zones can be used as source zone and destination zone, when you assign SRX Series devices and MX Series routers to the same group policy.</p> |
|---------------|--|

Table 160: Firewall Policy Rules Setting *(Continued)*

| Setting | Guideline |
|-------------------------|--|
| (Source) Address(es) | <p>Enter one or more address names or address set names. Click Select to add source addresses.</p> <p>On the Source Address page:</p> <ul style="list-style-type: none"> • Include Any Address—Add any address to the firewall rule. • Include Specific—Add the selected source address to the rule. <p>When you add an NSX manager, the security groups are synchronized and the corresponding dynamic address groups (DAG) are created in Security Director database. For your NSX manager, select the required DAGs from the list.</p> <ul style="list-style-type: none"> • Exclude Specific—Exempt the selected source addresses from the rule. • By Metadata Filter—Choose the matching address of a user-defined metadata as the source address. <ul style="list-style-type: none"> • Metadata Filter—Click the field to select the required metadata from the list. The matching addresses are filtered and listed in the Matched Address field. • Matched Addresses—Lists the addresses matching the selected metadata. This address is used as a source address. <p>For every metadata expression, a unique dynamic address group (DAG) is created. This DAG has the feed server URL pointing to the feed server URL of Security Director.</p> <p>Office 365 is now included in the list of third party feeds to push Microsoft Office 365 services endpoint information (IP addresses) to the SRX Series device. This feed works differently from other feeds and requires certain configuration parameters, including a pre-defined name of "ipfilter_office365". You must enable the Office 365 feed in Juniper ATP Cloud. To understand how to enable the Office 365 feed in Juniper ATP Cloud and create a DAG on the SRX Series device that refers to the ipfilter_office365 feed, see Enabling Third Party Threat Feeds.</p> <p>Configure the feed server URL by using the following CLI command to each SRX Series device or vSRX that acts on the metadata based policies.</p> <pre>set security dynamic-address feed-server <SD IP Address> hostname <SD IP Address></pre> <p>See "Creating Addresses and Address Groups" on page 1127.</p> |

Table 160: Firewall Policy Rules Setting *(Continued)*

| Setting | Guideline |
|---------------------------|--|
| (Source) User ID | <p>Specify the source identity (users and roles) to be used as match criteria for the policy. You can have different policy rules based on user roles and user groups.</p> <p>Click Select to specify source identities to permit or deny. On the User ID page, you can select a user identity from the available list or you can add a new identity by clicking Add New User ID.</p> <p>To delete a user identity from the Security Director database, click Delete User ID and select a value from the drop-down list, which is not configured in any policy. If you try to delete a user identity which is configured in a policy, a message with its reference ID and user ID are displayed.</p> <p>NOTE: The user IDs which are only created in Security Director are displayed in the drop-down list.</p> |
| (Source) End User Profile | <p>Select an end user profile from the list. The firewall policy rule is applied to it.</p> <p>When traffic from device A arrives at an SRX Series device, the SRX Series obtains the IP address of device A from the first traffic packet and uses it to search the device identity authentication table for a matching device identity entry. Then it matches that device identity profile with a security policy whose End User Profile field specifies the device identity profile name. If a match is found, the security policy is applied to traffic issuing from device A.</p> |
| (Destination) Zone | <p>For SRX Series devices, specify a destination zone (to-zone) to define the context for the policy. Zone policies are applied on traffic entering one security zone (source zone) to another security zone (destination zone). This combination of a source zone and a destination zone is called a context.</p> <p>Starting in Junos Space Security Director Release 16.2, for MX Series routers, this field acts as an egress interface from where the packet enters. The match direction is input, if the packet is entering the interface. The match direction is output, if the packet is leaving the interface. Configure the egress key by selecting the aggregated multiservices (AMS) value.</p> <p>Polymorphic zones can be used as source zone and destination zone, when you assign SRX Series devices and MX Series routers to the same group policy.</p> |

Table 160: Firewall Policy Rules Setting *(Continued)*

| Setting | Guideline |
|-------------------------------|---|
| (Destination) Address(es) | <p>Select one or more address names or address sets. Click Select to add destination addresses.</p> <p>On the Destination Address page:</p> <ul style="list-style-type: none"> • Select the Include option to add the selected destination addresses or any address to the rule. • Select the Exclude option to exempt the selected destination addresses from the rule. • Select the By Metadata Filter option to choose the matching address of a user-defined metadata as the destination address. <ul style="list-style-type: none"> • Metadata Filter—Click the field to select the required metadata from the list. The matching addresses are filtered and listed in the Matched Address field. • Matched Addresses—Lists the addresses matching the selected metadata. This address is used as a destination address. <p>For every metadata expression, a unique dynamic address group(DAG) is created. This DAG has the feed server URL pointing to the feed server URL of Security Director.</p> <p>Office 365 is now included in the list of third party feeds to push Microsoft Office 365 services endpoint information (IP addresses) to the SRX Series device. This feed works differently from other feeds and requires certain configuration parameters, including a pre-defined name of "ipfilter_office365". You must enable the Office 365 feed in Juniper ATP Cloud. To understand how to enable the Office 365 feed in Juniper ATP Cloud and create a DAG on the SRX Series device that refers to the ipfilter_office365 feed, see Enabling Third Party Threat Feeds.</p> <p>Configure the feed server URL by using the following CLI command to each SRX Series device or vSRX that acts on the metadata based policies.</p> <pre>set security dynamic-address feed-server <SD IP Address> hostname <SD IP Address></pre> <p>See "Creating Addresses and Address Groups" on page 1127.</p> |
| (Destination) URL Category | <p>Select one or more predefined or custom URL category as a match criterion. URL category is supported on devices running Junos OS Release 18.4R3 and later.</p> <p>Click Select to select a URL category. Select one or more predefined or custom URL categories from the Available list and move them to the Selected list. Click OK.</p> |

Table 160: Firewall Policy Rules Setting *(Continued)*

| Setting | Guideline |
|------------------------------|--|
| (Service Protocols) Services | Select one or more service (application) names. Select the Include, Any Service to disable the any option in the services list builder. Clear the Any Service check box to permit or deny services from the services list builder available column. Click Add New Service to create a service. See "Creating Services and Service Groups" on page 1140 . |
| Application Signatures | Click the + icon to add the application signatures. You can add both predefined and custom application signatures. |

Advanced Security

| | |
|-------------|--|
| Rule Action | <p>Action applies to all traffic that matches the specified criteria.</p> <ul style="list-style-type: none"> • Deny—Device silently drops all packets for the session and does not send any active control messages such as TCP Resets or ICMP unreachable. • Reject—Device sends a TCP reset if the protocol is TCP, and device sends an ICMP reset if the protocols are UDP, ICMP, or any other IP protocol. This option is useful when facing trusted resources so that the applications do not waste time waiting for timeouts and instead get the active message. • Permit—Device permits traffic using the type of firewall authentication you applied to the policy. • Tunnel—Device permits traffic using the type of VPN tunneling options you applied to the policy. |
|-------------|--|

Table 160: Firewall Policy Rules Setting *(Continued)*

| Setting | Guideline |
|-------------------|---|
| Advanced Security | <p>Firewall policies provide a core layer of security that ensures that network traffic is restricted to only that which a policy dictates through its match criteria.</p> <p>Firewall policies provide a core layer of security that ensures that network traffic is restricted to only that which a policy dictates through its match criteria. When the traditional policy is not enough, select application identification components to create an advanced security profile for the policy:</p> <ul style="list-style-type: none"> • App Firewall—Select this option to enforce traditional firewall controls on the traffic while layering application firewall to ensure that applications conform not only to the port information but also to what is transmitted between a client and a server. You can permit, deny, and reject applications. There is also a special redirect feature for HTTP and HTTPS. <p>Click the Add New link to create application firewall policy and click Add New APPFW Rule to create rules. See "Creating Application Firewall Policies" on page 611.</p> <ul style="list-style-type: none"> • SSL Forward Proxy—Select this option to enable an application-level protocol that provides encryption technology for the Internet. <p>Click Add Forward Proxy to create SSL Forward Proxy Profiles. See "Creating SSL Forward Proxy Profiles" on page 647.</p> <p>Click Add Reverse Proxy to create SSL Reverse Proxy Profiles. See "Creating SSL Reverse Proxy Profiles" on page 656.</p> <ul style="list-style-type: none"> • IPS—Select the IPS value as On or Off. • IPS Policy—Provides support for IPS policy within the standard firewall policy. Select an IPS policy to assign to the firewall policy. IPS policies that are not assigned to any device are listed in the drop-down. <p>For devices with Junos OS Release 18.2 onward, CLI configuration for the assigned IPS policy is generated along with the standard firewall policy.</p> <p>NOTE: The rule action should be Permit.</p> <ul style="list-style-type: none"> • In Junos OS Release 18.1 and earlier, if you have configured a policy with both IPS as On or Off and an IPS policy, Security Director ignores the IPS policy and sends only IPS On CLI command to the device. • In Junos OS Release 18.2 and later, if you have configured a policy with both IPS as On or Off and an IPS Policy, Security Director ignores the IPS On CLI command and sends only the IPS policy CLI command to the device. |

Table 160: Firewall Policy Rules Setting *(Continued)*

| Setting | Guideline |
|---------------------|--|
| | <ul style="list-style-type: none"> • UTM—Select this option to define Layer 7 protection against client-side threats. Click Add New to create Content Security policies. See "Creating UTM Policies" on page 835. • Secure Web Proxy—Select a secure Web proxy profile created in "Create a Secure Web Proxy Profile" on page 577. You can use secure Web proxy to enable traffic for selected applications to bypass the external proxy server and sent directly to a webserver. • Threat Prevention Policy—Select an option to provide protection and monitoring for the selected threat profiles, including command and control servers, infected hosts, and malware. NOTE: For creating inline application firewall policy, SSL proxy profiles, and Content Security, the rule action must be permit. |
| Threat Profiling | <p>Juniper ATP Cloud Adaptive Threat Profiling allows SRX Series devices to generate, propagate, and consume threat feeds based on their own advanced detection and policy-match events.</p> <p>Starting in Junos Space Security Director Release 21.2, you can configure a firewall policy with source and destination addresses as threat types, which injects the source IP address and destination IP address into the selected threat feed when traffic matches the rule. Threat feed can be leveraged by other devices as a dynamic-address-group (DAG).</p> <p>Add Source IP to Feed—Select a security feed from the list. The source IP address is added to the threat feed when the traffic matches the rule.</p> <p>Add Destination IP to Feed—Select a security feed from the list. The destination IP address is added to the threat feed when the traffic matches the rule.</p> <p>NOTE: To use these fields, first enroll the devices in ATP Cloud and then configure Policy Enforcer to display feeds in the drop-down list.</p> |
| <i>Rule Options</i> | |
| Profile | <p>Select a default profile or a custom profile, or you can inherit a policy profile from another policy. Policy profile specifies the basic settings of a security policy. See "Creating Firewall Policy Profiles" on page 557.</p> |

Table 160: Firewall Policy Rules Setting (Continued)

| Setting | Guideline |
|----------------------------|---|
| Schedule | Policy schedules allow you to define when a policy is active, and thus are an implicit match criterion. You can define the day of the week and the time of the day when the policy is active. For instance, you can define a security policy that opens or closes access based on business hours. Multiple schedulers can be applied to different policies, but only one scheduler can be active per policy. Select a pre-saved schedule and the schedule options are populated with the selected schedule's data. Click New to create another schedule. |
| <i>Rule Analysis</i> | |
| New Rule, Perform Analysis | Select this option if you want to analyze your rules to avoid any anomalies. |
| <i>Rule Placement</i> | |
| Location/Sequence | Displays the sequence number and the order in which the rule is placed. |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.2 | Starting in Junos Space Security Director Release 16.2, for MX Series routers, the source zone field acts as an ingress interface from where the packet enters. |
| 16.2 | Starting in Junos Space Security Director Release 16.2, polymorphic zones can be used as source zone and destination zone, when you assign SRX Series devices and MX Series routers to the same group policy. |
| 16.2 | Starting in Junos Space Security Director Release 16.2, for MX Series routers, this field acts as an egress interface from where the packet enters. |

RELATED DOCUMENTATION

| |
|--|
| Creating Firewall Policies 478 |
| Assigning Policies and Profiles to Domains 567 |
| Rule Base Overview 492 |
| Firewall Policies Overview 472 |
| Firewall Policies Best Practices 481 |
| End User Profile Overview 702 |
| About the End User Profile Page 703 |
| Creating an End User Profile 704 |
| End User Profile Operations 707 |

Rule Base Overview

IN THIS SECTION

- [Example: Removing a Previously Managed Rule Base | 492](#)
- [Policy Analysis | 493](#)

In Security Director, you can configure one type or both types (zone-based or global) of rule bases for each policy. All zone-based rules are grouped under Zone and all devices rules are grouped under Global.

If devices are assigned to a policy that does not have one of the rule bases under its management, Security Director still interprets that rule base as being in its scope. For example, if you configure firewall policies out of band on a device in an unmanaged rule base, Security Director deletes those policies. If you do not select the previously configured rule base in the Security Director modify workflow for the policy, Security Director automatically deletes all rules in the policy in the next publish and update.

Example: Removing a Previously Managed Rule Base

You can remove a managed device from Security Director. To remove a previously managed rule base when no other policies are published on the device except the existing policy, follow these guidelines:

- Do not select the Manage Global Policy option to modify a device policy in Security Director.

Security Director deletes the global rule base in the design data of the Security Director application.

- Publish a policy and update the device. The update deletes all global rules from the device.

On successful update, the all-devices policy for the device is removed from Security Director management.



NOTE: Security Director will continue to delete any all-devices policy configured on the device through the CLI at subsequent publish updates.

Policy Analysis

Over a period of time, firewall rule bases can become inefficient as rules become disorganized, causing some rules to become ineffective. This primarily occurs because of a lack of timely notification given to end users when new rules, or changed rules, are added, which can adversely affect the other rules in the rule base.

This problem can be addressed by analyzing the policy and reporting the anomalies in the rules of a policy to the end user. Policy analysis reports on shadowing and redundant anomalies in a rule; these reports are available in PDF format. Also, policy analysis finds the anomaly between the address and the service of the rules.

Policy analysis helps you to analyze the firewall rule base for policies managed by Security Director, and it identifies the firewall rules that contain the following issues:

- **Shadowing**—Occurs when a rule higher in the order of the rule base matches with all the packets of a rule lower in the order of the rule base. The shadowed rule is never activated. The possible solution is to reorder the rules, or disable or delete one of the rules. The anomaly calculation is not made for disabled rules.
- **Redundant**—Occurs when there are two or more rules that perform the same action on the same packets along with the same settings or configurations. The solution is to disable or delete the redundant rules.

The policy analysis report is generated in PDF format and can be sent through e-mail to multiple recipients. The reports contain a summary and a pie chart showing all anomalies. You can schedule the report generation.

The following list shows the policy analysis behavior for different types of firewall policies:

- **All devices policy**—Analyzes all the rules present in the firewall policy landing page, within the all-devices policy.
- **Group policy**—Analyzes all the rules present in the firewall policy landing page, within the group policy including the all-devices policy rules.

- Device policy—Analyzes all the rules present in the firewall policy landing page, within the device policy including the all-devices policy rules. If you want to analyze all the rules present on a device, you must generate the report by clicking the device policy.
- Device exception policy—Analyzes all the rules present in the firewall policy landing page, within the device exception policy including all-device.

Policy analysis is not performed in the following scenarios:

- Disabled rules are not considered for the policy analysis calculation.
- Apart from the Address (source and destination) and Service columns, no other columns in the firewall landing page are considered for the policy analysis calculation.
- Variable address, wild card address, and exclude address are not considered for the policy analysis calculation.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating Firewall Policy Rules | 482](#)

[Firewall Policies Best Practices | 481](#)

Firewall Policy Locking Modes

IN THIS SECTION

- [Manually Locking a Policy | 495](#)
- [Manually unlocking a Policy | 495](#)
- [Switching Manual Lock to Automatic Lock for a policy | 496](#)

Starting in Security Director Release 18.3R1, you can manually lock a policy. By default, the locking mode for policies is automatic and policies are automatically locked when you start editing the rules. When you leave the rules editing page, the policy is automatically unlocked. The timeout interval for automatic locking is 15 minutes.

However, if required, you can choose the option to manually lock a policy. There is no timeout interval in case of manual lock. When you lock the policy and leave the page or log out, the policy remains locked. After you have completed editing the policy, you can unlock the policy and it then becomes available to other users for editing. The policy can be unlocked by the same user or by any other user with the same RBAC permissions. Only those users who have the permission to lock or unlock a policy are able to toggle between automatic mode and manual mode.

Manually Locking a Policy

To manually lock a policy:

1. Select **Configure** > *Policy-Name Policy* > **Policies**.
2. Select **Manual Mode** from the Locking list.
A warning message is displayed.
3. Click **Yes** to toggle the locking mode.
All the existing locks in the policies are released and the user is switched to manual mode.
4. Right-click the policy that you want to edit, or select **Lock Policy** from the More list.
A message is displayed for confirmation.
5. Click **Yes** to lock the policy.
The policy will be locked. You can see a lock icon next to the check box on the policies page.



NOTE: In the manual mode, if the user starts to edit the policy without manually locking it, the policy is locked by the system like in auto mode. However, the user must manually unlock the policy and then it will be available for other users for editing.

Manually unlocking a Policy

To manually unlock a policy:

1. Select **Configure** > *Policy-Name Policy* > **Policies**.
2. Right-click the policy that you want to unlock, or select **Unlock Policy** from the More list.
A message is displayed for confirmation.
3. Click **Yes** to unlock the policy.
The policy will be unlocked. The lock icon next to the check box will disappear.



NOTE: If User1 has locked a policy and User2 with the same RBAC capability unlocks the same policy, then a message is displayed that any unsaved changes made by User1 will be lost.

Switching Manual Lock to Automatic Lock for a policy

While switching from manual lock to automatic lock and vice versa, all the existing locks in the policies will be released.

To switch to automatic locking mode:

1. Select **Configure**> *Policy-Name Policy*> **Policies**.
2. Select **Auto Mode** from the Locking list.
A warning message is displayed.
3. Click **Yes** to toggle the locking mode.
All the existing locks in the policies are released and the user is switched to Auto mode.



NOTE: In the auto mode, the policies are automatically locked when a user starts editing the rules.

RELATED DOCUMENTATION

[Creating Firewall Policy Rules | 482](#)

Rule Operations on Filtered Rules Overview

You can perform various rule operations on the filtered list of rules. For example, consider a policy having seven rules such as a, b, c, d, e, f, and g in an order inside a rule group. After filtering, if only second and sixth rules are filtered, that is only rules b and f,

The following table explains the various rule operations on the filtered rules.

| Rule Operation | Description |
|---------------------------|---|
| Alphabetical A-Z | Group policies are sorted alphabetically in ascending order. |
| Alphabetical A-Z | Group policies are sorted alphabetically in descending order. |
| Group Priority (High-Low) | Group policies are sorted in the order Low, Medium, and High. For the same priorities, the higher precedence number is placed in the top. For example, Low 3 has lower precedence than Low 2. |

(Continued)

| Rule Operation | Description |
|---------------------------|---|
| Group Priority (Low-High) | Group policies are sorted in the order Low, Medium, and High. For the same priorities, the higher precedence number is placed in the top. For example, Low 3 has lower precedence than Low 2. |
| Created Time | Policies are listed based on creation time. The policy created first is placed at the top. |
| Modified Time | Last modified policies are placed at the bottom(last). |



NOTE: You cannot set the precedence value greater than the available precedence values that are assigned to the available priority policies. Based on the priority of the policies, the precedence values are applied.

RELATED DOCUMENTATION

[Firewall Policies Overview | 472](#)

[Creating Firewall Policies | 478](#)

Create and Manage Policy Versions

IN THIS SECTION

- [Create Policy Snapshots | 498](#)
- [Manage Policy Versions | 498](#)
- [Roll Back Policy Versions | 498](#)
- [Compare Policy Versions | 499](#)
- [Delete Policy Versions | 499](#)

You create a policy version by taking a snapshot of another policy. You can create versions for all types of policies including All Devices, Group, Device, and Device exceptions.

The maximum number of versions maintained for any policy is 60. If the maximum limit is reached, you must delete the unwanted versions before saving a new version. Versioning and rollback are independent operations for each policy.

For example, if you take a snapshot of a group firewall policy, or roll back to a previous firewall policy version, it does not change the version for all device policy rules; you must separately version each policy rule.

Create Policy Snapshots

To create a policy version:

1. Select **Configure>Firewall Policy>Policies**.
2. Select the check box next to the policy for which you are taking a snapshot, and then right-click the policy or click **More**.
A list of actions appears.
3. Select **Manage/Rollback Policy**.
The Manage Version page appears.
4. Click **Create Snapshot**.
The Snapshot Policy page appears.
5. Enter your comments in the Comments field, and click **Create** to take a snapshot. The Snapshot Policy window appears, showing the status of the version as it is created.



NOTE: During policy publish, Security Director takes an automatic snapshot of the policy.

Manage Policy Versions

You can view or manage all available versions of a selected policy. You can perform the following tasks on the snapshots:

- Roll back to a specific version.
- View the differences between any two versions (including the current version) of the policy
- Delete one or more versions from the system.

Roll Back Policy Versions

To roll back the selected version so it becomes the current version:

1. Select **Configure>Firewall Policy>Policies**.
2. Select the check box next to the policy for which you are rolling back a version, and then right-click the policy or click **More**.
A list of actions appears.
3. Select **Manage/Rollback Policy**.
The Manage Version page appears.
4. Select the version that you want to make as the current version, and click **Rollback**.
The rollback operation replaces all the rules and rule groups of the current version with rules and rule groups from the selected version. For all the shared objects, Object Conflict Resolution (OCR) is done. If there are any conflicts between the versioned data and the current objects in the system, the OCR window is displayed.
5. After finishing any conflict resolution, click Next to view the OCR summary report.
6. Click **Finish** to replace the current policy with the versioned data. A summary of the snapshot policy is shown by clicking **Snapshot**.

Compare Policy Versions

To compare two different versions of a policy:

1. Select **Configure>Firewall Policy>Policies**.
2. Select the check box next to the policy for which you want to compare versions, and then right-click the policy or click **More**.
A list of actions appears
3. Select **Manage/Rollback Policy**.
The Manage Version page appears.
4. Select the versions to be compared, and click **Compare**. You can only compare two versions at a time.
The Compare Versions page appears.
5. Click **Compare** to view the results.
A Compare Versions results window appears showing the differences between the selected versions.

The Compare Versions results window has the following sections:

- Policy Property Changes—Shows policy changes for the modified rules.
- Rule Changes—Displays rules that are added, modified, or deleted.
- Column Changes—Shows the differences between the column content for modified rules.

Delete Policy Versions

To delete a policy version:

1. Select **Configure>Firewall Policy>Policies**.

2. Right-click the policy or profile or click **More**.
A list of actions appears.
3. Click **Manage/Rollback Policy**.
The Manage Version page appears.
4. Select the policy version you want to delete and click Delete.
A warning message is displayed.
5. Click **Yes** to confirm the deletion.
The selected policy version is deleted.

RELATED DOCUMENTATION

| [Creating Firewall Policies](#) | 478

Assigning Devices to Policies

Once you create a group or device policy, you can assign devices to it.

To assign devices to a policy:

1. Select **Configure > Policy-Name Policy > Policies**.
The Policies landing page appears.
2. Right-click the policy to which you want to assign devices, or select **Assign Devices** from the More menu.
The Assign Devices page appears. The Name field shows the name of the selected policy and is not editable.
3. Select the **Show only devices without policy assigned** check box.
Only devices that are not assigned to any policy are displayed in the Device Selection section.
4. Select the devices you want to add to the policy from the Available column and click the right arrow to move these devices to the Selected **column**.



NOTE: There is an option to search for devices in the Selected column on the Assign Devices page. By default, all selected devices are sorted in a list and you can search for devices again, if required.

5. Click **OK** to assign the selected devices to the selected **policy**.



NOTE: If you do not have permission to certain devices, those devices are not visible while assigning devices to a new or existing policy.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

Comparing Policies

Security Director enables you to compare two policies.

To compare any two policies:

1. Select **Configure** and select the landing page for the type of policy that you want to compare. For example, Select **Firewall Policies**.
2. From the landing page, right-click the policy or click **More**.
A list of actions appears.
3. Select **Compare Policy** to compare with other policies.
The Compare Policy page appears.
4. Select the policy to compare with, and click **OK**.
The compare result of the two policies are displayed.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Export Policies

IN THIS SECTION

- [Export a policy to PDF | 502](#)
- [Export a policy to a ZIP file: | 502](#)

Starting in Security Director Release 16.1, you can export any policies (firewall, IPS, or NAT) in a PDF or ZIP file from their respective Policies landing page.



NOTE: Policies can either be exported as PDF or ZIP file. The policies exported as ZIP file are in XML format.

Export a policy to PDF

1. Select **Configure > Firewall Policy > Policies**.

The Policies landing page appears.

2. Right-click the policy you want to export or select **Export Policy to PDF** from the More menu.

The Export Policy to PDF page appears.

3. Click **Export**.

The selected policy details are exported into a PDF file.

Export a policy to a ZIP file:

1. Select **Configure > Firewall Policy > Policies**.

The Policies landing page appears.

2. Right-click the policy you want to export or select **Export Policy to Zip File** from the More menu.

The Export Policy page appears.

3. Click **Export**.

The selected policy details are exported into a ZIP file.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | Starting in Security Director Release 16.1, you can export any policies (firewall, IPS, or NAT) in a PDF or ZIP file from their respective Policies landing page. |

RELATED DOCUMENTATION

| [Creating Firewall Policies](#) | 478

Creating Custom Columns

Starting Security Director Release 15.2, you can create a custom column. This is used for tracking specific notes on rules such as internal ticket numbers, changes to firewall policy rules, changes in rule ownership, and so on. The custom column is a user-defined column that is appended to the other columns on the rules page of any firewall policy. Data in these columns can be captured and saved in the same way as in the other columns.

Once you enter or modify data in a custom column, you can search the data. Security Director searches for the data and displays the results with the policy details and the rules that have the custom column data.



NOTE: To create, edit, or delete custom columns, assign the predefined or user-defined role with the appropriate custom column privileges to the users.


To create a custom column for firewall policies:

1. Select **Configure > Firewall Policy > Policies**.
The policies page appears.
2. Right-click a policy or select **Manage Custom Columns** from the More list.
The Manage Custom Columns page appears.
3. Click the + icon to create a custom column.
The Add Custom Column page appears.
4. Enter the following details:
 - a. Name—Enter a unique string of alphanumeric characters, periods, dashes, spaces, and underscores. The maximum length is 32 characters. This is a mandatory field.

- b. Validation Pattern—Enter the regular expression to validate the entered data. For example, the typical e-mail regular expression looks like this:


`^[A-Za-z0-9-]+(\\.[A-Za-z0-9-]+)*@[A-Za-z0-9-]+(\\.[A-Za-z0-9-]+)*(\\.[A-Za-z]{2,})$`.

This is an optional field. However, if you do not provide the regular expression, the custom column data will not be validated.


 **NOTE:** Security Director uses the following parameters to validate custom column data:

- Explicit regular expression—The optional regular expression property is defined for the current custom column.
- Implicit length check—The maximum length of the data must be 256 characters. It is applicable to all custom columns.

- 5. Click **OK** to create the custom column.
- The new custom column is listed in the Manage Custom Columns page.

 **NOTE:** You can create a maximum of three custom columns.

You can view the columns that you create on the rules page of any firewall policy. Click a policy name to view the rules associated with the policy. The new custom columns appear at the end of the grid on the rules page. The custom columns are not specific to a policy and are visible on rules pages of all the firewall policies.

 **NOTE:**

- You can edit the data in the custom column and the corresponding policy rules through an inline edit.
- Custom columns are exported when a firewall policy is exported.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 15.2 | Starting Security Director Release 15.2, you can create a custom column. This is used for tracking specific notes on rules such as internal ticket numbers, changes to firewall policy rules, changes in rule ownership, and so on |

RELATED DOCUMENTATION

| |
|---|
| Creating Customized Roles in Security Director 1424 |
| Creating Users in Security Director 1403 |
| Creating Firewall Policies 478 |
| Creating Firewall Policy Rules 482 |

Promoting to Group Policy

If your policy type is a device policy, then you can promote the policy to a group policy.

To promote a device policy to a group policy:

1. Select **Configure > Firewall Policy**.
The Policies page is displayed.
2. Select a policy, right-click the policy or select **Promote to Group Policy** from the More list.
The Promote to Group Policy page is displayed.



NOTE: The **Promote to Group Policy** option is enabled only when the policy type is device policy.

3. Enter the parameters according to the guidelines in [Table 161 on page 505](#).
4. Click **OK**.
The policy is promoted from device policy to group policy.

Table 161: Promoting a device policy to a group policy

| Field | Description |
|----------------------------|--|
| <i>General Information</i> | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. Maximum length is 255 characters. |
| Description | Enter a description for the group policy rules; maximum length is 255 characters. Comments entered in this field are sent to the device. |

Table 161: Promoting a device policy to a group policy (*Continued*)

| Field | Description |
|------------------------|--|
| <i>Policy Options</i> | |
| Profile | <p>Select a profile for the policy:</p> <ul style="list-style-type: none"> • Log Session Init—Record entries for session start events. A traffic log that records session start events does not include bytes sent and received or session duration. You can use the log to verify when the session was initially created. • Log Session Close—Record entries for session close events. A traffic log that records session close information also lists a reason for the end of the session. • All Logging Enabled—Logs are created for both session initiation and session closing. Logs can be used for troubleshooting. • All Logging Disabled—Logs are not recorded for both session initiation and session closing. |
| <i>Policy Sequence</i> | |
| Placement | This is applicable for Group Policy only. Select Before device-specific policies or After device-specific policies. This decides the policy order when the devices policy configuration information is updated on the devices. |
| Sequence No. | This is applicable for Group Policy only. Select this option to specify the order number for the policy. Policy lookup is performed in the order that the policies are configured. The first policy that matches the traffic is used. For more information, see "Policy Ordering Overview" on page 475 . |

RELATED DOCUMENTATION

Creating Firewall Policies | 478

Converting Standard Policy to Unified Policy

You can convert a traditional firewall policy to a unified policy. Unified policies are security policies that enable you to use the dynamic applications as match conditions as part of the existing 5-tuple or 6-tuple (5-tuple with user firewall) match conditions to detect application changes over time. If the traffic matches the security policy rule, one or more actions defined in the policy are applied to the traffic.

To convert a standard firewall policy to a unified policy:

1. Select **Configure>Firewall Policy>Standard Policies**.

The Standard Policies page appears.

2. Right-click a policy and select **Convert to Unified Policy** or select **Convert to Unified Policy** from the More list.

The **Policy Conversion** page appears.

3. Select an application signature value:

- **None**—By default the value of the dynamic application signatures is set to None. In this case, the value of service is retained in all rules in the policy.
- **Any**—The value of the service is set to junos-defaults. This enables the firewall policy to use default protocols and ports of dynamic applications.

4. Select an IDP policy.

If you select an IDP policy during conversion, all firewall policy rules with IPS ON will be set to OFF and the selected IDP policy will be assigned to the firewall policy rule. If you do not select an IDP policy during conversion, firewall policy rules with IPS ON will be retained as is.

5. Click **OK**.

A job is created to convert the standard policy to an unified policy.

6. Select **Run now** to run the job immediately or **Schedule at a later time** to run the job at a specified date and time.

The Conversion page is displayed.

7. Click the job ID to view the details of the job on the job management page.



NOTE:

- Starting in Junos Space Security Director Release 20.1 onward, you can convert a standard policy with application firewall configuration to unified policy.

RELATED DOCUMENTATION

[Unified Policy Overview](#) | 528

Probe Latest Policy Hits

You can probe latest policy hits to get the latest policy hit count. The hit count is incremented by 1 each time an entry is matched. When you click the Probe Latest Policy Hits option, Security Director sends a remote procedure call (RPC) `<get-security-policies-hit-count></get-security-policies-hit-count>` to device and the device responds with the hit-count details. This hit-count information is stored in the PolicyHitCountEntity table in Security Director database.

To probe the latest policy hits:

1. Select **Configure > Firewall Policies > Standard/Unified Policies**.
2. Right-click a policy and select **Probe Latest Policy Hits**.

The Job Details page is displayed with the status and hit count details.

You can view the hit count on the policy rules page. See "[Firewall Policy Rules Main Page Fields](#)" on page 521.



NOTE: By default, the Enable Policy Hit Count Data Collection option is enabled and the policy hit count is automatically probed everyday at 2 AM. To modify the hit count settings in Junos Space Network Management Platform, see *Modifying Settings of Junos Space Applications*.

To reset the hit count for all the rules in a policy, right click the policy in Security Director and select **Reset Policy Hits for All Rules**. Resetting sets the current hit count to zero for all the rules in the policy.

RELATED DOCUMENTATION

[Using Job Management in Security Director | 195](#)

[Disable Firewall Policy Rules Based on Hits Over a Specified Duration | 508](#)

Disable Firewall Policy Rules Based on Hits Over a Specified Duration

IN THIS SECTION

- [Configure the Application Settings | 509](#)
- [Disable Rules Based on Hits | 509](#)

Starting in Junos Space Security Director Release 20.3R1, you can disable firewall policy rules that have not been hit for a specified duration. By disabling rules, you'll notice performance improvement while updating policies on devices. You'll need to first configure the option in Junos Space Network Management Platform and then disable the rules from Security Director.

Configure the Application Settings

By default, the option to disable firewall policy rules with no hits, is disabled in Junos Space Network Management Platform. You must enable the Security Director application settings in Junos Space Network Management Platform. Enable **Disable policy rules with no hits over a specified duration** option and enter the number of days for which you want to disable the firewall policy rules with no hits. See *Modifying Settings of Junos Space Applications*.

Disable Rules Based on Hits

After you have enabled **Disable policy rules with no hits over a specified duration** option and entered the days to disable rules with no hits in Junos Space Network Management Platform, you can disable firewall policy rules from Security Director.

Before You Begin

Right-click a policy and select **Probe Latest Policy Hits** to get the latest policy hit count. See ["Probe Latest Policy Hits" on page 508](#).

To disable firewall policy rules based on hits:

1. Select **Security Director > Configure > <Standard/ Unified Policies>**

The corresponding policies page is displayed.

2. Right-click a policy and select **Disable Rules Based on Hits**.

A confirmation message to disable the policy rules that have not been hit for the configured number of days is displayed.

3. Click **Yes** to disable the policy rules.

The Disable Rules Based on Hits page is displayed.

4. Click the job ID link to view the job status on the Job Management page.

The rules are disabled based on the last hit date on the Hit Count Details page. If the hit date exceeds the number of days configured, the rule is disabled. See ["Firewall Policy Rules Main Page Fields" on page 521](#).



NOTE: The rules which are not hit for a single time, will not display the last hit date in the Hit Count Details page and therefore such rules will not be disabled.

A snapshot of the operation is captured so that you can roll back to the previous policy version, if required. See ["Create and Manage Policy Versions" on page 497](#).

RELATED DOCUMENTATION

[Using Job Management in Security Director | 195](#)

[Probe Latest Policy Hits | 508](#)

Viewing and Synchronizing Out-of-Band Firewall Policy Changes Manually

IN THIS SECTION

- [Viewing Out-of-Band Firewall Policy Changes | 510](#)
- [Importing Out-of-Band Firewall Policy Changes Manually | 511](#)

Starting in Junos Space Security Director Release 19.2R1, when there is an out-of-band firewall policy change in the device, you can see an icon next to the corresponding policy in device-specific and group firewall policies in Security Director. You can manually synchronize the out-of-band changes for a device-specific policy, only when the automatic synchronization is disabled.

When you hover over the icon next to the policy, the tooltip indicates the out-of-band changes. Out-of-band firewall policy changes are applicable for both standard and unified firewall policies.

When a device is discovered in Security Director, the Managed Status is displayed as Managed in the Security Devices page. For manual synchronization of out-of-band policy changes, the managed status of the device must be SD Changed, Device Changed, or In Sync. For this, you must update the device at least once from Security Director. In case of logical systems (LSYS) or tenant systems (TSYS), root device may show the status as Device Changed if a policy is assigned to it. Update the root device so that the status is In Sync.



NOTE: Out-of-band changes are not supported if more than one policy is assigned to a device or if rules are configured in All Devices Policy Pre/Post policies.

Viewing Out-of-Band Firewall Policy Changes

To view out-of-band firewall policy changes:

1. Select **Configure > Firewall Policy > Policies**.

The policies page appears. An icon is displayed for the policies indicating the out-of-band policy changes.

2. Right-click the policy or select **View Device Policy Changes** from the More menu.

The Out of Band Changes page appears.

3. Click **View** to view the configuration changes for a device in CLI and XML format.

The view configuration page for the device is displayed.

After viewing the changes, you can choose to import or reject the out-of-band changes from the device.

4. Click **OK**.



NOTE: To reject all the out-of-band changes, select **Reject all changes** option. The icon next to the policy will be cleared and the policy changes from the device will not be imported into Security Director. During the subsequent update from Security Director, the out-of-band changes will be overwritten in the device.

To import the out-of-band changes to Security Director, see ["Importing Out-of-Band Firewall Policy Changes Manually" on page 511](#).

Importing Out-of-Band Firewall Policy Changes Manually

To import out-of-band firewall policy changes:

1. Select **Configure > Firewall Policy > Policies**.

The policies page appears. An icon is displayed for the policies indicating the out-of-band policy changes.

2. Right-click the policy or select **View Device Policy Changes** from the More menu.

The Out of Band Changes page appears.

3. Select **Select Changes from Device** to accept the out of band firewall policy changes from a device.

4. Select a device and click **OK**.



NOTE: In the case of group policy, you can view all the devices where the policy is associated, but you can select only one device and import the changes. After selecting a device, click **Affected Devices** to see all the devices where the policy is assigned.

In case of both, group policy and device specific policy, an icon is seen next to the device(s) indicating the out-of-band changes.

The Import Device Configuration Changes page appears.

5. Select the firewall policy and click **Next**.

Objects with conflicts are displayed, if any.

6. Select objects and choose a conflict resolution type. Resolve any conflicts after you verify the information, if needed.

7. Click **Finish**.

A summary of the configuration changes is displayed.

You can download the summary report as a ZIP file. The *summaryreport.zip* file contains the complete rules report as a PDF.

8. Click **OK** to complete the import process.

The Job Details page is displayed with status of the import job.

9. Click **OK**.

The policies page is displayed with an icon which indicates that the policy was edited and needs publishing to the device.

10. Click **Publish** to publish the changes.

During the subsequent update from Security Director, the out-of-band changes will be overwritten in the device(s).

RELATED DOCUMENTATION

[Out-of-Band Changes Overview | 1487](#)

[About the Policy Sync Settings Page | 1482](#)

[Viewing the Details of a Job in Security Director | 200](#)

Importing Policies

Starting in Security Director Release 16.1, you can import policy details from a ZIP file to Security Director.



NOTE:

- You can import zipped policies that are in XML format. The XML format of the policy must match with the export policy zip format.
- The import ZIP file must contain policy details of the same Security Director release. You cannot import policy details of the previous release to the current release.

To import policy details:

1. Select **Configure > Policy-Name Policy > Policies**.
The Policies landing page appears.
2. Select **Import Policy From ZIP File** from the More menu.
The Select ZIP File page appears.
3. Click **Browse** to browse to a location where a ZIP file containing policy details is saved.
4. Select the ZIP file and click **OK**.
If there are any conflicts with the imported objects, Object Conflict Resolution (OCR) is done. The OCR window displays all the conflicts.
5. After resolving the conflicts, click **Next** to view the OCR summary report.
6. Click **Finish** to import the ZIP file.
A progress bar appears showing the status of the file upload. Once the import is successful, the policy details are shown on the Policies page.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | Starting in Security Director Release 16.1, you can import policy details from a ZIP file to Security Director. |

RELATED DOCUMENTATION

| [Creating Firewall Policies](#) | 478

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects](#) | 514
- [Replace Policies and Objects](#) | 514

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Firewall Policy > Policies**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to delete, and then select the minus sign (-).

An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete your selection.



NOTE: Before you delete a policy from Security Director, you must ensure that the policy is unassigned from all assigned devices.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.

The addresses, services, or variables page appears.

2. Right-click the shared object that you want to replace, or click **Replace** from the More list.

You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.

3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

| [Creating Firewall Policies](#) | 478

Unassigning Devices from Policies

Once you create a device policy, you can remove the assigned device from it. This allows you to add a preferred device at any time to a device policy. This option is not available for a group policy.

To remove an assigned device from a device policy:

1. Select **Configure > Policy-Name > Policies**.

The Policies landing page appears.

2. Select a device policy and click **More**.

3. Click **Unassign Devices**. You can also right-click a policy and select **Unassign Devices**.

The Unassign Device page appears with a confirmation message.

4. Click **Yes**.

The assigned device is removed for the selected device policy.

RELATED DOCUMENTATION

| [Creating Firewall Policies](#) | 478

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects](#) | 515
- [Clone Policies or Objects](#) | 516

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.
The Clone window appears with editable fields.
3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating Firewall Policies](#) | 478

Publishing Policies

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups, with prerules in the High priority group publishing first, before prerules in the Medium and Low priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other policies in the same priority group. However, such policies do not need to be republished in order for their changes in priority or precedence to take effect for the policies that are implicitly changed by the explicit changes to the republished policy.

To publish a policy:

1. Select **Configure > Policy-Name Policy > Policies**.
2. Select the policy that you want to publish and click **Publish**. The Publish Policy page appears.

3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the policy is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

4. Select **Schedule at a later time** if you want to schedule and publish the configuration later.
5. Select **Run now** if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

[Updating Policies on Devices | 519](#)

Showing Duplicate Policies and Objects

To display duplicate objects:

1. Select the check box beside the object(s).
2. Right click and select **Show Duplicates**. Alternatively, select **Show Duplicates** from the **More** drop-down menu.

The Show Duplicates page appears.

3. Select the check box beside the duplicate object, click **Delete** and confirm to remove it.

To merge duplicate object:

Select the check box beside the duplicate object, select **Merge** from the **More** drop-down menu.

To find the usage of a duplicate object:

Select the check box beside the duplicate object, select **Find Usage** from the **More** drop-down menu.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

Show and Delete Unused Policies and Objects

IN THIS SECTION

- [Show Unused Policies and Objects | 518](#)
- [Delete Unused Policies and Objects | 518](#)

You can show or delete unused policies and objects in your network configurations.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Show Unused Policies and Objects

You can view all unwanted policies or objects that are not used anywhere in your network to take appropriate action.

To show unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are showing.
2. From the landing page, click **More**.
A list of actions appears.
3. Select **Show Unused**.
A list of unused objects (not referenced in any policy) and unused policies appear on the page.

Delete Unused Policies and Objects

You can clear all unwanted policies or objects that are not used anywhere in your network.

To delete unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are deleting.
2. Select the check boxes beside the items that you want to delete. Right-click on the policy or object or click **More** from the landing page.
A list of actions appears.

3. Select **Delete Unused**.

A confirmation window appears before you can delete the unused policies or objects.

4. Click **Yes** to confirm the deletion.

All unused policies or objects are deleted.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Updating Policies on Devices

When you finish creating and verifying your security configurations, you can publish these configurations and keep them ready to be pushed to the security devices. Security Director helps you push all the security configurations to the devices all at once by providing a single interface that is intuitive.

The Publish workflow provides the ability to save and publish different services to be updated at a later time to the appropriate firewalls (during the down time). This permits administrators to review their firewall, VPN, and NAT policies before updating the device. This saves administrators troubleshooting time, avoid errors, and saves costs associated with errors. Verify and tweak your security configurations before updating them to the device by viewing the CLI and XML version of the configuration in the Publish workflow. This approach helps you keep the configurations ready and update these configurations to the devices during the maintenance window.

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups, with prerules in the High priority group publishing first, before prerules in the Medium and Low priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other policies in the same priority group. However, such policies do not need to be republished in order for their changes in priority or precedence to take effect for the policies that are implicitly changed by the explicit changes to the republished policy.

To update a policy:

1. Select **Configure > Policy-Name Policy > Policies**. Select the policy that you want to update and click **Update**. The Update Policy page appears.
2. Select the policy that you want to update and click **Update**. The Update Policy page appears.
3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the policy is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

4. Select **Schedule at a later time** if you want to schedule and publish the configuration later.
5. Select **Run now** if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

- [Creating Firewall Policies | 478](#)
- [Creating IPS Policies | 714](#)
- [Creating NAT Policies | 784](#)
- [Publishing Policies | 730](#)

Firewall Policies Main Page Fields

Use the Firewall Policy page to view and manage all device, group, and global policies associated with your devices. You can filter and sort this information to get a better understanding of what you want to configure. Table 1 describes the fields on this page.

Table 162: Firewall Policies Main Page Fields

| Field | Description |
|-------|---|
| Seq. | Order number for the policy. |
| Name | Name of the firewall policy; maximum length is 63 characters. |
| Type | Type of policy: group, device, all-devices, or global. |

Table 162: Firewall Policies Main Page Fields *(Continued)*

| Field | Description |
|---------------|--|
| Rule Count | Number of rules associated with the policy. |
| Device Count | Number of devices associated with the policy. |
| Publish State | <p>Displays the publish state of the firewall policy configuration.</p> <ul style="list-style-type: none"> • Not Published—Firewall policy is created but not published. • Published—Configuration is published to all devices associated with the policy. • Partially Published—Configuration is published to a few devices associated with the firewall policy. • Re-publish Required—Modifications are made to the firewall policy configuration after it is published. |
| Description | Description of the firewall policy; maximum length is 1024 characters. |

RELATED DOCUMENTATION

[Firewall Policies Overview](#) | 472

[Creating Firewall Policies](#) | 478

Firewall Policy Rules Main Page Fields

Use this page to get an overall, high-level view of your firewall policy rules settings. Details help you keep track of the number and order of rules per policy. You can filter and sort this information to get a better understanding of what you want to view. [Table 163 on page 522](#) describes the fields on this page.

Table 163: Firewall Policy Rules Main Page Fields

| Field | Description |
|--------------|--|
| Seq. | Order number for the policy. Policy lookup is performed in the order that the policies are configured. The first policy that matches the traffic is used. |
| Hit Count | <p>Displays how often a particular policy is used based on traffic flow. The hit count is the number of hits since the last reset. Click on the hit count value to view the details on the Hit Count Details page.</p> <p>Example: The hit count is especially useful when you are using a large policy set and you want to verify which rules are highly used and which ones are rarely used. If you see that some of the rules are not being used, you can verify that the rules are not being shadowed by another policy. This helps you manage the device without having to generate traffic manually.</p> |
| Rule Name | Unique name for the rule. |
| Src. Zone | <p>Source zone (to-zone) that defines the context for the policy. Zone policies are applied on traffic entering one security zone (source zone) to another security zone (destination zone). This combination of a source zone and a destination zone is called a context.</p> <p>For example, all policies within source zone trust and destination zone untrust are in the same context.</p> |
| Src. Address | <p>Address names or address set names to be used as match criteria for incoming traffic.</p> <p>We recommend that you create address sets instead of using multiple address entries. For example, If your organization has common requirements for similar types of access across different rules, leveraging groups can be advantageous.</p> <p>You can have any number of objects with a set (for example, host, network, DNS, wildcard, and so forth)</p> |
| Src. ID | <p>Users and roles to be used as match criteria for the policy.</p> <p>You can have different policy rules based on the user role and user group.</p> <p>If you specify the source identity in any policy within the zone pair, then user and role information is retrieved before policy lookup can proceed. (If all policies in the zone pair are set to any or have no entry in the Source Identity field, user and role information is not required and only the other five standard match criteria are used for policy lookup.)</p> |

Table 163: Firewall Policy Rules Main Page Fields *(Continued)*

| Field | Description |
|---------------|--|
| Dest. Zone | <p>Destination zone (from-zone) that defines the context for the policy.</p> <p>Zone policies are applied on traffic entering one security zone (source zone) to another security zone (destination zone). This combination of a source zone and a destination zone is called a context.</p> <p>For example, all policies within source zone trust and destination zone untrust are in the same context.</p> |
| Dest. Address | <p>Address names or address set names to be used as match criteria for outgoing traffic.</p> <p>We recommend that you create address sets instead of using multiple address entries.</p> <p>For example, if your organization has common requirements for similar types of access across different rules, leveraging groups can be advantageous.</p> <p>You can have any number of objects with a set (for example, host, network, DNS, wildcard, and so forth).</p> |
| Service | <p>The service (application) name in the match criteria has one or more service or service sets.</p> <p>We recommend that you create a service set and refer to the name of the set in a policy instead of using multiple individual service names.</p> <p>For example, for a group of employees, you can create a service set that contains all the approved services. Service objects allow you to specify objects to be used in the match criteria of security policies. You can set numerous attributes to help define what the match criteria of this object should be.</p> |

Table 163: Firewall Policy Rules Main Page Fields *(Continued)*

| Field | Description |
|--------|---|
| Action | <p>Action applies to all traffic that matches the specified criteria.</p> <ul style="list-style-type: none"> • Deny—Device silently drops all packets for the session and does not send any active control messages such as TCP Resets or ICMP unreachable. • Reject—Device sends a TCP Reset if the protocol is TCP and ICMP Reset if the protocols are UDP, ICMP, or any other IP protocol. This option is useful when facing trusted resources so that the applications do not waste time waiting for timeouts and instead get the active message. • Permit—Device permits traffic using the type of firewall authentication you applied to the policy. • Tunnel—Device permits traffic using the type of VPN tunneling options you applied to the policy. |

Starting in Junos Space Security Director Release 16.1, the address and service objects can be created, managed, dragged and dropped to the required rules from the firewall policy rules page. Apart from addresses and services, you can also drag and drop zones. From the Shared Objects list, select **Show Addresses** or **Show Services** to see the required shared objects. To create a new address or service object, click the plus sign (+). You can also modify, delete, and manage these objects. You can search for any object by its name and IP address in the search field available in the top right corner.

You can drag more than one object and drop on the respective columns of any policy rule. Security Director ensures that objects are dropped in the supported columns and it does not permit to drop under any other columns. The drag and drop of objects is supported on the source address, destination address, source zone, destination zone, and service columns. A single address or multiple addresses can be dragged and dropped from source address field to destination address field of same rule or across rules. Similarly, single or multiple services and zones can also be dragged and dropped across rules. To view multiple objects in an address, zone, or service column, click the small horizontal triangle to expand the columns.

You can also drag and drop rules to a single rulegroup or across multiple rulegroups.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.1 | Starting in Junos Space Security Director Release 16.1, the address and service objects can be created, managed, dragged and dropped to the required rules from the firewall policy rules page. Apart from addresses and services, you can also drag and drop zones. |

RELATED DOCUMENTATION

| | |
|--|---------------------|
| Firewall Policies Overview | 472 |
| Creating Firewall Policies | 478 |

Firewall Policy-Unified Policies

IN THIS CHAPTER

- [About the Unified Policies Page | 526](#)
- [Unified Policy Overview | 528](#)
- [Creating Unified Firewall Policies | 530](#)
- [Creating Unified Firewall Policy Rules | 533](#)
- [Configuring a Default SSL Proxy Profile | 544](#)
- [Configure a Default IDP Policy | 547](#)

About the Unified Policies Page

IN THIS SECTION

- [Tasks You Can Perform | 526](#)
- [Field Descriptions | 527](#)

To access this page, click **Configure>Firewall Policy>Unified Policies**.

Unified policies are security policies that enable you to use dynamic applications as match conditions along with the existing 5-tuple or 6-tuple (with user firewall) match conditions to detect application changes over time. If the traffic matches the security policy rule, one or more actions defined in the policy are applied to the traffic.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a unified firewall policy. See ["Creating Unified Firewall Policies" on page 530](#).

- Create a unified firewall policy rule. See ["Creating Unified Firewall Policy Rules" on page 533](#).
- Manually lock the unified firewall policy. See ["Firewall Policy Locking Modes" on page 494](#).
- Configure a default SSL proxy profile. See ["Configuring a Default SSL Proxy Profile" on page 544](#).
- Compare policies. See ["Comparing Policies" on page 501](#).
- Create and manage policy versions. See ["Create and Manage Policy Versions" on page 497](#).
- Export policies. See ["Export Policies" on page 502](#).
- Create custom columns. See ["Creating Custom Columns" on page 503](#).
- Promote a device policy to group policy. See ["Promoting to Group Policy" on page 505](#).
- Create rule name template. See ["Creating Rule Name Template" on page 805](#).
- Edit and clone policies and objects. See ["Edit and Clone Policies and Objects" on page 515](#).
- Assign policies and profiles to domains. See ["Assigning Policies and Profiles to Domains" on page 743](#).
- Publish and update the unified firewall policy. See ["Publishing Policies" on page 516](#) and ["Updating Policies on Devices" on page 519](#).

Field Descriptions

[Table 164 on page 527](#) provides guidelines on using the fields on the Unified Policies page.

Table 164: Fields on the Unified Policies Page

| Field | Description |
|---------|---|
| Seq | Order number for the policy. |
| Name | Name of the firewall policy; maximum length is 63 characters. |
| Rules | Rules associated with the policy. |
| Devices | Devices associated with the policy. |

Table 164: Fields on the Unified Policies Page (Continued)

| Field | Description |
|---------------|---|
| Publish State | <p>Displays the publish state of the Unified policy configuration.</p> <ul style="list-style-type: none"> • Not Published—Firewall policy is created but not published. • Published—Configuration is published to all devices associated with the policy. • Partially Published—Configuration is published to a few devices associated with the firewall policy. • Re-publish Required—Modifications are made to the firewall policy configuration after it is published. |
| Last Modified | The date and time when the policy was modified. |
| Created By | The user who created the policy. |
| Modified By | The user who modified the policy. |
| Domain | The user domain. |

RELATED DOCUMENTATION

[Unified Policy Overview](#) | 528

Unified Policy Overview

Unified policies are security policies that enable you to use the dynamic applications as match conditions along with the existing 5-tuple or 6-tuple (with user firewall) match conditions to detect application changes over time. If the traffic matches the security policy rule, one or more actions defined in the policy are applied to the traffic.

By adding dynamic applications to the match criteria, the data traffic is classified based on the Layer 7 application inspection results. Application ID (AppID) identifies dynamic or real-time Layer 4 through

Layer 7 applications. After an application is identified and the matching policy is found, then the actions such as permit, deny, reject, or deny and redirect are applied according to the policy.

A unified policy leverages the information from AppID to match the application and take action as specified in the firewall policy. In an unified policy configuration, you can use a predefined dynamic application or a user-defined custom application from the application identification signature package as match condition.



NOTE: Configuring dynamic applications as match criteria in a security policy is not mandatory.

You can configure an unified policy with dynamic application options such as none, include any service, and include specific. When you configure a value for dynamic application other than none, the default value of service is junos-defaults.

The junos-defaults group contains preconfigured statements that include predefined values for common applications. As the default protocols and ports are inherited from junos-defaults, there is no requirement to explicitly configure the ports and protocols, thus simplifying the security policy configuration. If the application does not include default ports and protocols, then the application uses the default ports and protocols of the dependent application. The junos-defaults option must be configured along with a dynamic application. If you configure the junos-defaults option without specifying any dynamic application, then an error message is displayed.

A redirect profile can be configured within an unified policy. When a policy blocks HTTP or HTTPS traffic with a deny and reject action, you can define a response in an unified policy to notify the connected clients. When you configure the redirect option, you can specify the custom message or the URL to which the client is redirected.

Starting in Junos Space Security Director Release 19.3R1, you can assign IPS policy to the unified firewall policy rule. The CLI is generated for the IPS policy along with the unified firewall policy (to which the IPS policy is assigned) for devices with Junos OS Release 18.2 onward. The IPS policy name is directly used in the firewall policy rule, therefore the [edit security idp active-policy policy-name] statement is deprecated in Junos OS Release 18.2 onward. You can import and convert the deprecated active policy CLI into a new CLI from Security Director. You can import the IPS policy for the deprecated active-policy for Junos OS version 18.2 and later. After the IPS policy is imported, the rules associated with the firewall policy for the device is updated with IPS policy details. On subsequent update from Security Director, you can see the new firewall policy CLIs, in preview, to attach IDP and the same can be updated to device.



NOTE:

- In a device with Junos OS Release 18.2, you must assign same IPS policy to all the rules in the firewall policy, otherwise commit fails.
- In a device with Junos OS Release 18.3 onward, you can assign different IPS policy to the rules in the firewall policy. You must set a default IDP policy, otherwise commit fails.

RELATED DOCUMENTATION

[About the Unified Policies Page | 526](#)

[Creating Unified Firewall Policies | 530](#)

[Creating Unified Firewall Policy Rules | 533](#)

Creating Unified Firewall Policies

Before You Begin

- Create source (from-zone) and destination (to-zone) zones.
- Create addresses and address sets.
- Create services (applications) and service sets (application sets).

You can configure group or device policies that determine all the network resources within your organization and that identify the required security level for those resources.



NOTE: Any device having standard and unified policies can be imported to unified policies.

To create a unified firewall policy:

1. Select **Configure>Firewall Policy>Unified Policies**.
2. Click the + icon.
3. Complete the configuration according to the guidelines provided in [Table 165 on page 531](#).
4. Click **OK**. A unified firewall policy is created. Select the policy and click the + icon to configure policy rules. See ["Creating Firewall Policy Rules" on page 482](#).

A policy is created according to your configuration. You can use this policy to assign rules, profiles, and schedules. To enable a policy, you must assign it to a domain. See ["Assigning Policies and Profiles to Domains" on page 567](#).

Table 165: Unified Firewall Policy Settings

| Setting | Guideline |
|----------------------------|--|
| <i>General Information</i> | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. Maximum length is 255 characters. |
| Description | Enter a description for the group policy rules; maximum length is 255 characters. Comments entered in this field are sent to the device. |
| <i>Policy Options</i> | |
| Profile | <p>Select a profile for the policy:</p> <ul style="list-style-type: none"> • Log Session Init—Record entries for session start events. A traffic log that records session start events does not include bytes sent and received or session duration, but you can use the log to verify when the session was initially created. • Log Session Close—Record entries for session close events. A traffic log that records session close information also lists a reason for the end of the session. • All Logging Enabled—Logs are created for both session initiation and session closing. Logs can be used for troubleshooting. • All Logging Disabled—Logs are not recorded for both session initiation and session closing. |

Table 165: Unified Firewall Policy Settings *(Continued)*

| Setting | Guideline |
|-------------------------|---|
| Type | <p>Select the type of policy you want to create:</p> <ul style="list-style-type: none"> • Group Policy—Firewall policy that is shared with multiple devices. This type of policy is used when you want to update a specific firewall policy configuration to a large set of devices. You can create group prerules, group postrules, and device rules for a group policy. • Device Policy—Firewall policy that is created per device. This type of policy is used when you want to push a unique firewall policy configuration per device. You can create device rules for a device firewall policy. During a device assignment for a device policy, only devices from the current domain are listed. |
| <i>Device Selection</i> | |
| Devices | <p>Starting Junos Space Security Director Release 16.2, both SRX Series devices and MX Series routers are listed. When a policy is published to a device, device-specific rules are published to the appropriate SRX Series devices or MX Series routers.</p> <p>Select the devices on which the group policy will be published. For a group policy, you can include both SRX Series devices and MX Series routers. Select devices from the Available column and click the right arrow to move these devices to the Selected column. For device only policy, select the device with which you want to associate the policy.</p> <p>NOTE: You can also search for devices by entering the device name, device IP address, or device tags in the Search fields in the Devices area. Once the searched devices appear, you can move them to the Selected pane.</p> <p>You can assign devices with Junos OS Release 18.2 onward.</p> <p>NOTE: Starting in Junos Space Security Director Release 20.1R1, logical system (LSYS) is supported on devices running Junos OS Release 18.3 and later.</p> <p>Starting in Junos Space Security Director Release 21.2R1, tenant system (TSYS) is supported on devices running Junos OS Release 18.3 and later for SRX Series devices and Junos OS Release 20.1 and later for vSRX Virtual Firewall Series devices.</p> |
| <i>Policy Sequence</i> | |
| Policy Placement | <p>This is applicable for Group Policy only. Select Before Device Specific Policies or After Device Specific Policies. This decides the policy order when the devices policy configuration information is updated on the devices.</p> |

Table 165: Unified Firewall Policy Settings (Continued)

| Setting | Guideline |
|---------------------|--|
| Policy Sequence No. | This is applicable for Group Policy only. Select this option to specify the order number for the policy. Policy lookup is performed in the order that the policies are configured. The first policy that matches the traffic is used. For more information, see "Policy Ordering Overview" on page 475 . |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.2 | Starting Junos Space Security Director Release 16.2, both SRX Series devices and MX Series routers are listed. |

RELATED DOCUMENTATION

[About the Unified Policies Page | 526](#)

[Unified Policy Overview | 528](#)


Creating Unified Firewall Policy Rules

Use the Create Rule page to configure firewall rules that control transit traffic within a context (source zone to destination zone). The traffic is classified by matching its source and destination zones, the source and destination addresses, and the application that the traffic carries in its protocol headers with the policy database.

Security Director allows a device to have a device-specific policy and to be part of multiple group policies. Rules for a device are updated in this order:

- Rules within **Policies Applied Before 'Device Specific Policies'**
- Rules within **Device-Specific Policies**
- Rules within **Policies Applied After 'Device Specific Policies'**

Rules within **Policies Applied Before 'Device Specific Policies'** take priority and cannot be overridden. However, you can override rules within **Policies Applied After 'Device Specific Policies'** by adding an overriding rule in the Device-Specific Policies. In an enterprise scenario, “common-must-enforce” rules can be assigned to a device from the **Policies Applied Before 'Device Specific Policies'**, and “common-nice-to-have” rules can be assigned to a device from the **Policies Applied After 'Device Specific Policies'**.




NOTE: An exception can be added on a per device basis in “Device-Specific Policies” . For a complete list of rules applied to a device, select **Configure > Firewall Policy > Devices**. Select a device to view rules associated with that device.

To configure a firewall unified policy rule:

1. Select **Configure>Firewall Policy>Unified Policies**.
2. Select the policy for which you want to define rules and click the + icon.

The Create Rule page appears.



NOTE: To edit the rules inline, click the policy to make the fields editable.

3. Complete the configuration according to the guidelines provided in [Table 166 on page 534](#).
4. Click **OK**.

The rules you configured are associated with the selected policy.

Table 166: Firewall Unified Policy Rules Setting

| Setting | Guideline |
|--|---|
| <i>General Information</i> | |
| Rule Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the; maximum length is 63 characters. |
| Description | Enter a description for the policy rules; maximum length is 1024 characters. Comments entered in this field are sent to the device. |
| <i>Identify the traffic that the rule applies to</i> | |

Table 166: Firewall Unified Policy Rules Setting *(Continued)*

| Setting | Guideline |
|---------------|--|
| (Source) Zone | <p>For SRX Series devices, specify a source zone (from-zone) to define the context for the policy. Zone policies are applied on traffic entering one security zone (source zone) to another security zone (destination zone). This combination of a source zone and a destination zone is called a context.</p> <p>Starting in Junos Space Security Director Release 16.2, for MX Series routers, the source zone field acts as an ingress interface from where the packet enters. The match direction is input, if the packet is entering the interface. The match direction is output, if the packet is leaving the interface. Configure the ingress key by selecting the aggregated multiservices (AMS) value.</p> <p>Starting in Junos Space Security Director Release 16.2, polymorphic zones can be used as source zone and destination zone, when you assign SRX Series devices and MX Series routers to the same group policy.</p> |

Table 166: Firewall Unified Policy Rules Setting *(Continued)*

| Setting | Guideline |
|-------------------------|---|
| (Source) Address(es) | <p>Enter one or more address names or address set names. Click Select to add source addresses.</p> <p>On the Source Address page:</p> <ul style="list-style-type: none"> • Select the Include option to add the selected source addresses or any address to the rule. • Select the Exclude option to exempt the selected source addresses from the rule. • Select the By Metadata Filter option to choose the matching address of a user-defined metadata as the source address. <ul style="list-style-type: none"> • Metadata Filter—Click the field to select the required metadata from the list. The matching addresses are filtered and listed in the Matched Address field. • Matched Addresses—Lists the addresses matching the selected metadata. This address is used as a source address. <p>For every metadata expression, a unique dynamic address group(DAG) is created. This DAG has the feed server URL pointing to the feed server URL of Security Director.</p> <p>Office 365 is now included in the list of third party feeds to push Microsoft Office 365 services endpoint information (IP addresses) to the SRX Series device. This feed works differently from other feeds and requires certain configuration parameters, including a pre-defined name of "ipfilter_office365". You must enable the Office 365 feed in Juniper ATP Cloud. To understand how to enable the Office 365 feed in Juniper ATP Cloud and create a DAG on the SRX Series device that refers to the ipfilter_office365 feed, see Enabling Third Party Threat Feeds.</p> <p>Configure the feed server URL by using the following CLI command to each SRX Series device or vSRX that acts on the metadata based policies.</p> <pre>set security dynamic-address feed-server <SD IP Address> hostname <SD IP Address></pre> <p>See "Creating Addresses and Address Groups" on page 1127.</p> |

Table 166: Firewall Unified Policy Rules Setting (Continued)

| Setting | Guideline |
|---------------------------|--|
| (Source) User ID | <p>Specify the source identity (users and roles) to be used as match criteria for the policy. You can have different policy rules based on user roles and user groups.</p> <p>Click Select to specify source identities to permit or deny. On the User ID page, you can select a user identity from the available list or you can add a new identity by clicking Add New User ID.</p> <p>To delete a user identity from the Security Director database, click Delete User ID and select a value from the drop-down list, which is not configured in any policy. If you try to delete a user identity which is configured in a policy, a message with its reference ID and user ID are displayed.</p> <p>NOTE: The user IDs which are only created in Security Director are displayed in the drop-down list.</p> |
| (Source) End User Profile | <p>Select an end user profile from the list. The firewall policy rule is applied to it.</p> <p>When traffic from device A arrives at an SRX Series device, the SRX Series obtains the IP address of device A from the first traffic packet and uses it to search the device identity authentication table for a matching device identity entry. Then it matches that device identity profile with a security policy whose End User Profile field specifies the device identity profile name. If a match is found, the security policy is applied to traffic issuing from device A.</p> |
| (Destination) Zone | <p>For SRX Series devices, specify a destination zone (to-zone) to define the context for the policy. Zone policies are applied on traffic entering one security zone (source zone) to another security zone (destination zone). This combination of a source zone and a destination zone is called a context.</p> <p>Starting in Junos Space Security Director Release 16.2, for MX Series routers, this field acts as an egress interface from where the packet enters. The match direction is input, if the packet is entering the interface. The match direction is output, if the packet is leaving the interface. Configure the egress key by selecting the aggregated multiservices (AMS) value.</p> <p>Polymorphic zones can be used as source zone and destination zone, when you assign SRX Series devices and MX Series routers to the same group policy.</p> |

Table 166: Firewall Unified Policy Rules Setting (Continued)

| Setting | Guideline |
|-------------------------------|---|
| (Destination) Address(es) | <p>Select one or more address names or address sets. Click Select to add destination addresses.</p> <p>On the Destination Address page:</p> <ul style="list-style-type: none"> • Select the Include option to add the selected destination addresses or any address to the rule. • Select the Exclude option to exempt the selected destination addresses from the rule. • Select the By Metadata Filter option to choose the matching address of a user-defined metadata as the destination address. <ul style="list-style-type: none"> • Metadata Filter—Click the field to select the required metadata from the list. The matching addresses are filtered and listed in the Matched Address field. • Matched Addresses—Lists the addresses matching the selected metadata. This address is used as a destination address. <p>For every metadata expression, a unique dynamic address group(DAG) is created. This DAG has the feed server URL pointing to the feed server URL of Security Director.</p> <p>Office 365 is now included in the list of third party feeds to push Microsoft Office 365 services endpoint information (IP addresses) to the SRX Series device. This feed works differently from other feeds and requires certain configuration parameters, including a pre-defined name of "ipfilter_office365". You must enable the Office 365 feed in Juniper ATP Cloud. To understand how to enable the Office 365 feed in Juniper ATP Cloud and create a DAG on the SRX Series device that refers to the ipfilter_office365 feed, see Enabling Third Party Threat Feeds.</p> <p>Configure the feed server URL by using the following CLI command to each SRX Series device or vSRX that acts on the metadata based policies.</p> <pre>set security dynamic-address feed-server <SD IP Address> hostname <SD IP Address></pre> <p>See "Creating Addresses and Address Groups" on page 1127.</p> |
| (Destination) URL Category | <p>Select one or more predefined or custom URL category as a match criterion. URL category is supported on devices running Junos OS Release 18.4R3 and later.</p> <p>Click Select to select a URL category. Select one or more predefined or custom URL categories from the Available list and move them to the Selected list. Click OK.</p> |

Table 166: Firewall Unified Policy Rules Setting *(Continued)*

| Setting | Guideline |
|------------------------------|---|
| Application Signature | <p>Configure the dynamic application with one of the following values:</p> <ul style="list-style-type: none"> • None—Configuring the dynamic application as “None” ignores classification results from ApplID and does not use the dynamic application in security policy lookups. Within the list of potential match policies, if any policy is configured with a dynamic application as “None”, this policy is matched as the final policy. If Layer 7 policies are configured, deep packet inspection for the traffic is initiated. <p>When upgrading Security Director release (where dynamic applications were not supported), all the traditional policies are considered to be policies with the dynamic application configured as none.</p> <ul style="list-style-type: none"> • Include Any Service—Configuring the dynamic application as “Include Any Service” installs the policy with the application as a wildcard (default). If an application cannot be specified, configure “Include Any Service” as the default application. Data traffic that matches the parameters in a unified policy matches the policy regardless of the application type. <p>If this option is selected, then the default service value is junos-defaults.</p> <ul style="list-style-type: none"> • Include Specific—Add specific predefined or custom application signatures by clicking + icon. <p>If this option is selected, then the default service value is junos-defaults.</p> |
| (Service Protocols) Services | <p>Select one or more service (application) names. Select the Include Any Service to disable the any option in the services list builder. Select Include Specific to permit or deny services from the services list builder available column. Click Add New Service to create a service. See "Creating Services and Service Groups" on page 1140. Select Default to have the service value as junos-default.</p> <p>When user configures a value for dynamic application other than None, the default value of service is junos-default.</p> |

Table 166: Firewall Unified Policy Rules Setting *(Continued)*

| Setting | Guideline |
|------------------|--|
| Rule Action | <p>Action applies to all traffic that matches the specified criteria.</p> <ul style="list-style-type: none"> • Deny—Device silently drops all packets for the session and does not send any active control messages such as TCP Resets or ICMP unreachable. • Reject—Device sends a TCP reset if the protocol is TCP, and device sends an ICMP reset if the protocols are UDP, ICMP, or any other IP protocol. This option is useful when facing trusted resources so that the applications do not waste time waiting for timeouts and instead get the active message. • Permit—Device permits traffic using the type of firewall authentication you applied to the policy. • Deny and Redirect—Device sends a block message with reject reason or a redirect URL to the user. |
| Redirect Profile | Select the redirect profile from the list. This field is displayed only when the action is Deny and Redirect. |

Table 166: Firewall Unified Policy Rules Setting *(Continued)*

| Setting | Guideline |
|-------------------|---|
| Advanced Security | <p>Firewall policies provide a core layer of security that ensures that network traffic is restricted to only that which a policy dictates through its match criteria. When the traditional policy is not enough, select application identification components to create an advanced security profile for the policy:</p> <p>NOTE: For using advanced security options, the rule action must be permit.</p> <ul style="list-style-type: none"> SSL Proxy—Select this option to enable an application-level protocol that provides encryption technology for the Internet. <p>Click Add Forward Proxy to create SSL Forward Proxy Profiles. See "Creating SSL Forward Proxy Profiles" on page 647.</p> <p>Click Add Reverse Proxy to create SSL Reverse Proxy Profiles. See "Creating SSL Reverse Proxy Profiles" on page 656.</p> UTM—Select this option to define Layer 7 protection against client-side threats. <p>Click Add New to create Content Security policies. See "Creating Content Security Policies" on page 835.</p> Threat Prevention Policy—Select an option to provide protection and monitoring for the selected threat profiles, including command and control servers, infected hosts, and malware. IPS Policy—Provides support for IPS policy within unified firewall policy. Select an IPS policy to assign to the firewall policy. This is supported on devices with Junos OS Release 18.2 and later. IPS policies that are not assigned to any device are listed in the drop-down. <p>NOTE: The rule action should be Permit.</p> <p>For devices with Junos OS Release 18.2 onward, CLI is generated for the assigned IPS policy along with the unified firewall policy.</p> |

Table 166: Firewall Unified Policy Rules Setting *(Continued)*

| Setting | Guideline |
|--|--|
| Threat Profiling | <p>Juniper ATP Cloud Adaptive Threat Profiling allows SRX Series devices to generate, propagate, and consume threat feeds based on their own advanced detection and policy-match events.</p> <p>Starting in Junos Space Security Director Release 21.2, you can configure a firewall policy with source and destination addresses as threat types, which injects the source IP address and destination IP address into the selected threat feed when traffic matches the rule. Threat feed can be leveraged by other devices as a dynamic-address-group (DAG).</p> <p>Add Source IP to Feed—Select a security feed from the list. The source IP address is added to the threat feed when the traffic matches the rule.</p> <p>Add Destination IP to Feed—Select a security feed from the list. The destination IP address is added to the threat feed when the traffic matches the rule.</p> <p>NOTE: To use these fields, first enroll the devices in ATP Cloud and then configure Policy Enforcer to display feeds in the drop-down list.</p> |
| <i>Rule Options</i> | |
| Profile | Select a default profile or a custom profile, or you can inherit a policy profile from another policy. Policy profile specifies the basic settings of a security policy. See "Creating Firewall Policy Profiles" on page 557. |
| Schedule | Policy schedules allow you to define when a policy is active, and thus are an implicit match criterion. You can define the day of the week and the time of the day when the policy is active. For instance, you can define a security policy that opens or closes access based on business hours. Multiple schedulers can be applied to different policies, but only one scheduler can be active per policy. Select a pre-saved schedule and the schedule options are populated with the selected schedule's data. Click Add New to create another schedule. |
| <i>Automated Rule Analysis and Placement</i> | |
| Rule Analysis | <p>Select this option if you want to analyze rules to avoid any anomalies.</p> <p>NOTE: All rules with dynamic application "None" is evaluated first.</p> <p>To view the analysis report, click View Analysis Report.</p> |

Table 166: Firewall Unified Policy Rules Setting *(Continued)*

| Setting | Guideline |
|-----------------------|--|
| <i>Rule Placement</i> | |
| Location/ Sequence | <p>Displays the sequence number and the order in which the rule is placed.</p> <p>To view rule placement in a Policy, click View Placement Inside Policy.</p> |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.2 | Starting in Junos Space Security Director Release 16.2, for MX Series routers, the source zone field acts as an ingress interface from where the packet enters. |
| 16.2 | Starting in Junos Space Security Director Release 16.2, polymorphic zones can be used as source zone and destination zone, when you assign SRX Series devices and MX Series routers to the same group policy. |
| 16.2 | Starting in Junos Space Security Director Release 16.2, for MX Series routers, this field acts as an egress interface from where the packet enters. |

RELATED DOCUMENTATION

| |
|---|
| About the Unified Policies Page 526 |
| Unified Policy Overview 528 |
| Creating Unified Firewall Policies 530 |

Configuring a Default SSL Proxy Profile

IN THIS SECTION

- [Creating a default SSL Proxy Profile | 544](#)
- [Editing a Default SSL Proxy Profile | 545](#)
- [Updating a Default SSL Profile on a Device | 545](#)
- [Deleting a Default SSL Proxy Profile | 546](#)

You can configure a default profile for an SSL proxy to manage conflicts when a security policy lookup returns a list of policies before the final application is identified. The initial policy lookup phase occurs prior to identifying a dynamic application. If there are multiple policies present in the potential policy list that contain different SSL proxy profiles, then the SRX Series device applies the default profile until a suitable match is established. You can configure a default SSL proxy profile for both SSL forward and reverse proxy.

The sessions are dropped in case of policy conflicts, if the default SSL proxy profile is not available.

Creating a default SSL Proxy Profile

To create a default SSL proxy profile:

1. Select **Configure > Firewall Policy > <Standard/Unified> Policies**.

The policies page is displayed.

2. Click **Global Options**.

The Global Options page is displayed.

3. Click **+** icon to create default SSL proxy profile.

The Create SSL Proxy page is displayed.

4. Configure the parameters according to the guidelines in [Table 167 on page 545](#).

5. Click **OK**.

The default SSL proxy profile is added. If the selected profile is already available as default, then an error message is displayed.

Table 167: Create SSL Proxy

| Fields | Description |
|-------------------------|---|
| <i>Default SSL</i> | |
| Profile | Select a reverse proxy profile or a forward proxy profile as the default SSL proxy profile. |
| Description | Enter a description for the default SSL proxy profile. |
| <i>Device Selection</i> | |
| Device Selection | Select the devices on which the default SSL proxy profile is applied. |

Editing a Default SSL Proxy Profile

To edit a default SSL Proxy profile:

1. Select **Configure** > **Firewall Policy** > **<Standard/Unified> Policies**.
The policies page is displayed.
2. Click **Global Options**.
The Global Options page is displayed.
3. Select a default SSL proxy profile, right-click and select **Edit** or click the pencil icon.
4. Edit the fields and click **OK**.

Updating a Default SSL Profile on a Device

To update a default SSL proxy on a device:

1. Select **Configure** > **Firewall Policy** > **<Standard/Unified> Policies**.
The policies page is displayed.
2. Click **Global Options**.
The Global Options page is displayed.
3. Select a default SSL profile and click **Update**.
The Update SSL Proxy page is displayed.
4. Select a proxy and click **Update**.
You can view the configuration in the CLI and XML formats for the corresponding device.



NOTE: Before updating default SSL proxy, atleast one firewall rule must be configured with SSL proxy and deployed on the device. Only then you can update a default SSL profile successfully.

Deleting a Default SSL Proxy Profile

To delete a default SSL proxy profile:

1. Select **Configure > Firewall Policy > <Standard/Unified> Policies**.
The policies page is displayed.
2. Click **Global Options**.
The Global Options page is displayed.
3. Select a default SSL proxy profile and click **Delete**. Delete option is also available when you right-click an SSL Proxy Profile or click More.
The Delete SSL Profile page is displayed.
4. Select an option to delete the default SSL profile from Security Director or from both Security Director and the device.
5. Click **OK**.
A confirmation message is displayed.
6. Click **Yes** to delete the default SSL proxy profile.



NOTE: When a device is imported with the default SSL proxy configuration, the default SSL proxy configured is listed in the Global options page.

RELATED DOCUMENTATION

[Creating SSL Forward Proxy Profiles | 647](#)

[Creating SSL Reverse Proxy Profiles | 656](#)

Configure a Default IDP Policy

IN THIS SECTION

- [Create a Default IDP Policy | 547](#)
- [Edit a Default IDP Policy | 548](#)
- [Delete a Default IDP Policy | 548](#)

If multiple IPS policies are configured for a session and when policy conflict occurs, the device applies the default IPS policy for that session and thus resolves any policy conflicts.

If a device has multiple IPS policies attached to standard or unified firewall policy rules, then you must configure a default IPS policy. If a device has more than one IPS policies, but is not attached to any standard or unified firewall policy, then a default IPS policy is not mandatory.

Create a Default IDP Policy

To create a default IDP policy:

1. Select **Configure > Firewall Policy > <Standard/Unified> Policies**.
The policies page is displayed.
2. Click **Global Options**.
The Global Options page is displayed.
3. Click the **IDP Default** tab.
4. Click the **+** icon to create a default IDP policy.
The Create IDP Default page is displayed.
5. Configure the parameters according to the guidelines in [Table 168 on page 547](#).
6. Click **OK**.
The default IDP policy for the selected device (s) is created.

Table 168: Create IDP Default

| Fields | Description |
|-------------|---|
| IDP Profile | Select an IPS policy, which you want to set as default. |

Table 168: Create IDP Default *(Continued)*

| Fields | Description |
|------------------|--|
| Description | Enter a description for the default IDP policy. |
| Device Selection | Select the devices on which the default IDP policy is applied. |

Edit a Default IDP Policy

To edit a default IDP profile:

1. Select **Configure** > **Firewall Policy** > **<Standard/Unified> Policies**.
The policies page is displayed.
2. Click **Global Options**.
The Global Options page is displayed.
3. Click the **IDP Default** tab.
4. Select a default IDP policy, right-click and select **Edit** or click the pencil icon.
5. Edit the fields and click **OK**.

Delete a Default IDP Policy

To delete a default IDP policy:

1. Select **Configure** > **Firewall Policy** > **<Standard/Unified> policies**.
The policies page is displayed.
2. Click **Global Options**.
The Global Options page is displayed.
3. Select the IDP policy and click **Delete**. Delete option is also available when you right-click an IDP policy.
The pop up with a confirmation message is displayed.
4. Click **Yes** to delete the default IDP policy.

RELATED DOCUMENTATION

[Understanding IPS Policies](#) | 746

[Creating Unified Firewall Policy Rules](#) | 533

[Creating Firewall Policy Rules](#) | 482

Firewall Policy-Devices

IN THIS CHAPTER

- [Devices with Firewall Policies Main Page Fields](#) | 549

Devices with Firewall Policies Main Page Fields

Use this page to get an overall, high-level view of your firewall policy device settings. You can also use this page to view detailed information on the number of rules and policies assigned per device. Details help you keep track of the number and order of rules per policy and of all the policies that are assigned to a specific device. You can filter and sort this information to get a better understanding of what you want to view. [Table 169 on page 549](#) describes the fields on this page.

Table 169: Devices with Firewall Policies Main Page Fields

| Field | Description |
|--------------------|---|
| Device Name | Name of the device. |
| Number of Rules | Total number of rules of all the policies assigned to the device. Click the link to view the rules order that is deployed on the device. |
| IP Address | IP address of the device. |
| Platform | Displays the supported device name. For example: SRX Series, vSRX, MX Series. |
| Number of Policies | Total number of NAT policies assigned to the device. |
| Assigned Services | List of all assigned services: firewall, NAT, IPS, and VPN. When a device is assigned to any firewall policy including NAT, IPS and VPN, the policy name is shown in this column. |

Table 169: Devices with Firewall Policies Main Page Fields *(Continued)*

| Field | Description |
|--------------------|---|
| Pending Services | List of the policy names that are assigned and published. Versioning information is included for firewall and NAT policies. |
| Installed Services | List of the policy names that are published and updated to the device (this includes policy names for firewall, NAT, IPS, and VPN). Versioning information is included for firewall and NAT policies. |

RELATED DOCUMENTATION

| |
|--|
| Firewall Policies Overview 472 |
| Creating Firewall Policies 478 |

Firewall Policy-Schedules

IN THIS CHAPTER

- [Schedules Overview | 551](#)
- [Creating Schedules | 552](#)
- [Schedules Main Page Fields | 553](#)

Schedules Overview

A schedule allows a policy to be active for a specified duration. If you want a policy to be active during a scheduled time, you must first create a schedule for that policy or link the policy to an existing schedule. When a schedule timeout expires, the associated policy is deactivated and all sessions associated with the policy are also timed out.

If a policy contains a reference to a schedule, that schedule determines when the policy is active. When a policy is active, it can be used as a possible match for traffic. A schedule lets you restrict access to, or remove a restriction from a resource, for a period of time.

A schedule uses the following guidelines:

- A schedule can have multiple policies associated with it; however, a policy cannot be associated with multiple schedules.
- A policy remains active as long as the schedule it refers to is also active.

A schedule can be active during a single time slot, as specified by a start date and time, and a stop date and time.

- A schedule can be active forever (recurrent), but only as specified by the daily schedule. The schedule on a specific day (time slot) takes priority over the daily schedule.
- A scheduler can be active during a time slot, as specified by the weekday schedule.
- A scheduler be active within two different time slots (daily or for a specified duration).

RELATED DOCUMENTATION

| |
|--|
| Creating Schedules 552 |
| Firewall Policies Overview 472 |
| Firewall Policies Best Practices 481 |

Creating Schedules

Before You Begin

- Read the Schedules Overview topic.
- Review the schedules main page for an understanding of your current data set. See "[Schedules Main Page Fields](#)" on [page 553](#) for field descriptions.

Use schedules to activate a policy at a regular time and for a specified duration. You can define a schedule for a single or recurrent time slot during which a policy is active.

To create policy schedules:

1. Select **Configure > Firewall Policy > Schedules**.
2. Click **Create**.
3. Complete the configuration according to the guidelines provided in [Table 170 on page 552](#).
4. Click **OK**.

A new schedule is created. You can use this schedule to activate firewall policies for the times and dates configured in your schedules.

Table 170: Schedules Settings

| Settings | Guidelines |
|----------------|---|
| <i>General</i> | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the; maximum length is 63 characters. |
| Description | Enter a string of alphanumeric characters that cannot contain special characters (such as &, <, >, and \n). Maximum length is 900 characters. |

Table 170: Schedules Settings *(Continued)*

| Settings | Guidelines |
|---------------|--|
| <i>Dates</i> | |
| Date Range | <p>Select Ongoing if you want your schedules to always be active.</p> <p>Select Custom to configure two sets of start and end dates for a single schedule. A schedule can be active during a single time slot, as specified by a start date and time, and a stop date and time. For the first set, enter dates in the Start Date and End Date fields. You must enter the days in MM/DD/YYYY format.</p> <p>A scheduler will be active within two different time slots if Second Start Date and time and Second End Date and time are entered. For the second set of the schedule, enter the start date in the Second Start Date field and enter the end date in the Second End Date field.</p> |
| <i>Times</i> | |
| Time Ranges | Select Specify Time to enter specific days and times. |
| Daily Options | <p>Create a schedule to be active daily or for any specific times of the day.</p> <p>Click on a specific day to specify time options for an entire day, to exclude a specific day, or to enter time ranges for the selected day. You must enter the time in HH:MM:SS format.</p> <p>For example, if you click on Monday, you get a dialog box that allows you to specify whether you want the schedule to be active all day Monday, exclude Monday from the schedule, or have the schedule be active at specific times.</p> |

RELATED DOCUMENTATION

[Schedules Overview](#) | 551

[Firewall Policies Overview](#) | 472

Schedules Main Page Fields

Use the Schedules page to create, view, and delete schedules. A schedule allows you to restrict access to a resource, or remove a restriction to a resource, for a specified period of time. You can filter and sort

this information to get a better understanding of what you want to configure. Table 1 describes the fields on this page.

Table 171: Schedules Main Page Fields

| Field | Description |
|-------------|---|
| Name | Name of the schedule; maximum length is 63 characters. |
| Description | Description for the schedule; maximum length is 900 characters. |
| Rule Count | Number of rules associated with the policy. |
| Date Ranges | Shows whether the schedule is active always or on specific start and end dates. Dates appear in MM/DD/YYYY format. |
| Time Ranges | Shows whether the schedule is active daily, are any days excluded, or it is only active for specific times of the day. Times appear in HH:MM:SS format. |

RELATED DOCUMENTATION

| | |
|--|---------------------|
| Schedules Overview | 551 |
| Creating Schedules | 552 |
| Creating Firewall Policies | 478 |

Firewall Policy-Profiles

IN THIS CHAPTER

- Understanding Firewall Policy Profiles | 555
- Understanding Captive Portal Support for Unauthenticated Browser Users | 556
- Creating Firewall Policy Profiles | 557
- Edit and Clone Policies and Objects | 565
- Delete and Replace Policies and Objects | 566
- Assigning Policies and Profiles to Domains | 567
- Firewall Policy Profiles Main Page Fields | 568

Understanding Firewall Policy Profiles

When a firewall policy profile is created, Security Director creates an *object* in the Security Director database that represents the firewall policy profile. You can use this object in the security policies.

The following are the Juniper Networks predefined firewall policy profiles:

- All Logging Enabled—All logging options are enabled. Logging is enabled at session initiation and at the close of the session.
- All Logging Disabled—All logging options are disabled.
- Log Session Close—Logging of events is enabled when sessions are closed.
- Log Session Init—Logging of events is enabled when sessions are created.



NOTE: You cannot modify or delete Juniper Networks predefined firewall policy profiles. You can only clone them and create new firewall policy profiles.

You can create an object, which defines the user defined policy profiles for the following settings:

- Log options:

- Log at session initiation
- Log at the close of a session
- Enable counting for the number of packets, bytes, and sessions that enter the firewall for a given policy
- Alarm threshold options
- Firewall authentication advance settings:
 - Service offload
 - Pass-through authentication
 - Web authentication
 - User firewall authentication
 - Infranet authentication
- Traffic redirection options:
 - No traffic redirection
 - Redirect WX–WX redirection for packets that arrive from the LAN
 - Reverse Redirect WX–WX redirection for the reverse flow of packets that arrive from the WAN
 - TCP-SYN Check and TCP Sequence Check–TCP session options for firewall policy profile

RELATED DOCUMENTATION

[Creating Firewall Policy Profiles | 557](#)

[Assigning Policies and Profiles to Domains | 567](#)

[Viewing Policy and Shared Object Details](#)

Understanding Captive Portal Support for Unauthenticated Browser Users

When an unauthenticated user requests access to an SRX Series protected resource using an HTTP or HTTPS browser, the SRX Series device presents the user with a captive portal interface to allow the user to authenticate. Normally, this process occurs without interference. However, prior to introduction of

this feature, HTTP or HTTPS-based workstation services running in the background, such as Microsoft updates and control checks, could trigger captive portal authentication before the HTTP or HTTPS browser-based user's access request did. The situation posed a race condition. If a background process triggered captive portal first, the SRX Series device presented it with a "401 Unauthorized" page. The service discarded the page without informing the browser, and the browser user was never presented with the authentication portal. The SRX Series device did not support simultaneous authentication from the same source IP address on different SPUs.

The SRX Series device now supports simultaneous HTTP or HTTPS pass through authentication across multiple SPUs, including support for web-redirect authentication. If an HTTP or HTTPS packet arrives while the SPU is querying the Captive Portal (CP), the SRX Series device queues the packet to be handled later.

Starting in Junos Space Security Director Release 17.1, Security Director supports Auth Only Browser and Auth User Agent parameters to give you high control over how HTTP or HTTPS traffic is handled.

- **Auth Only Browser**—Authenticate only browser traffic. If you specify this parameter, the SRX Series device distinguishes HTTP or HTTPS browser traffic from other HTTP or HTTPS traffic. The SRX Series device does not respond to non-browser traffic. You can use the `auth-user-agent` parameter in conjunction with this control to further ensure that the HTTP traffic is from a browser.
- **Auth User Agent**—Authenticate HTTP or HTTPS traffic based on the User-Agent field in the HTTP or HTTPS browser header. You can specify one user-agent value per configuration. The SRX Series device checks the user-agent value that you specify against the User-Agent field in the HTTP or HTTPS browser header for a match to determine if the traffic is HTTP or HTTPS browser-based. You can use this parameter with the Auth Only Browser parameter or individually for both Pass Through and User Firewall authentication types.

RELATED DOCUMENTATION

[Understanding Firewall Policy Profiles | 555](#)

[Creating Firewall Policy Profiles | 557](#)

Creating Firewall Policy Profiles

Before You Begin

- Read the "[Understanding Firewall Policy Profiles](#)" on [page 555](#) topic.
- Create zones.
- Create an application (or application set) that indicates that the policy applies to traffic of that type.

- Create the policy.
- Create schedulers if you plan to use them for your policies.
- Review the policy profiles main page for an understanding of your current data set. See ["Firewall Policy Profiles Main Page Fields" on page 568](#) for field descriptions.

Use this page to create an object that specifies the basic settings of a *security policy*. You can configure the following basic settings using a policy profile:

- Log options
- Firewall authentication schemes
- Traffic redirection options

When a policy profile is created, Junos Space creates an object in the Junos Space database to represent the policy profile. You can use this object to create security policies.

The security policies enforce rules for transit traffic, in terms of what traffic can pass through the firewall, and the actions that need to take place on traffic as it passes through the firewall. Also, you can control the traffic flow from zone to zone by defining the kinds of traffic permitted to pass from specified sources to specified destinations at scheduled times.

To configure a policy profile:

1. Select **Configure > Firewall Policy > Profiles**.
2. Click the + icon.
3. Complete the configuration according to the guidelines provided in the [Table 172 on page 558](#).
4. Click **OK**.

A new policy profile with the predefined policy configurations is created. You can use this object in security policies.

Table 172: Firewall Policy Profile Settings

| Settings | Guidelines |
|-------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Description | Enter a description for the policy profile; maximum length is 1024 characters. |

Table 172: Firewall Policy Profile Settings (*Continued*)

| Settings | Guidelines |
|------------------------|--|
| Template | Select a Security Director device template to use the predefined device-deployable configuration by replacing the variables with actual values and evaluating the control logic statements. |
| Logging | |
| Session Initiate | Select this option to enable logging of events when sessions are created. |
| Session Close | Select this option to enable logging of events when sessions are closed. When logging is enabled, the system logs at session close time by default. |
| Count | Select this option to enable counting. Once enabled, the number of packets, bytes, and sessions that enter the device for a given policy are counted. You can configure counts in an individual policy. |
| Alarm Threshold | |
| Bytes to be Logged | Enter the alarm threshold, in bytes per second, of all network traffic the policy allows to pass through the device in both directions from client to server and server to client. The range is from 0 through 4,294,967,295. |
| Count Value | Enter the alarm threshold, in kilobytes per minute, of all network traffic the policy allows to pass through the device in both directions from client to server and server to client. The range is from 0 through 4,294,967,295. |
| Authentication | |

Table 172: Firewall Policy Profile Settings (*Continued*)

| Settings | Guidelines |
|---|--|
| Authentication Type | <p>Select an option to restrict or permit users individually or in groups:</p> <ul style="list-style-type: none"> • None—Allows user without any authentication to restrict or permit clients. • Pass Through—Allows user to use an FTP, Telnet, or HTTP client to access the IP address of the protected resource in another zone. Subsequent traffic from the user or host is allowed or denied based on the result of this authentication. • Web—Policy allows access to users who have previously been authenticated by Web authentication. • User Firewall—Uses the username and role information to determine whether to permit or deny a user's session or traffic. • Infranet—Pushes the user and role information for all authenticated users from the Access Control Service. |
| Authentication Type - Pass Through | |
| Client Name | Enter the names of the users or user groups in a profile for whom this policy allows access. If you do not specify any users or user groups, then any user who is successfully authenticated is allowed access. |
| Client Direction | <p>Enable an option to redirect HTTP request:</p> <ul style="list-style-type: none"> • Redirect to web—Redirects an HTTP request to the device and redirect the client system to a webpage for authentication. This allows users an easier authentication process because they need to know only the name or IP address of the resource they are trying to access. • Redirect to HTTPS—Redirects unauthenticated HTTP requests to the internal HTTPS webserver of the device. |
| Access Profile Name | Enter a name for the access profile to be used for authentication. |

Table 172: Firewall Policy Profile Settings (Continued)

| Settings | Guidelines |
|-------------------|--|
| Auth Only Browser | <p>Enable this option to configure the firewall authentication to ignore non browser HTTP/HTTPS traffic.</p> <p>This ensures that the unauthenticated users issuing access requests through HTTP/HTTPS browsers are presented with a captive portal interface to allow them to authenticate. By default, firewall authentication responds to all HTTP/HTTPS traffic.</p> |
| Auth User Agent | <p>Specify a user agent value to be matched against values specified in the browser's User-Agent header field that identifies the traffic as HTTP/HTTPS browser traffic. You can specify only one user agent value for a security policy configuration. The value must not contain spaces. The length of the string must be 17 characters or less. For example, you can specify Opera to be verified against the browser's User-Agent field for a match.</p> <p>You can either use this parameter for the Pass Through or User Firewall authentication types or in conjunction with the Auth Only Browser parameter.</p> |

Authentication Type - Web

| | |
|-------------|--|
| Client Name | Enter the names of the users or user groups who have already been Web authenticated and for whom this policy allows access. Web authentication must be enabled on one of the addresses on the interface to which the HTTP request is redirected. |
|-------------|--|

Authentication Type - User Firewall

| | |
|---------------------|--|
| Domain Name | <p>Enter a domain name for firewall authentication in the event that the Windows Management Instrumentation client (WMIC) is not available to get IP-to-user mapping for the integrated user firewall feature.</p> <p>The maximum length is 63 characters.</p> |
| Access Profile Name | Enter a name for the access profile to be used for authentication. |

Table 172: Firewall Policy Profile Settings *(Continued)*

| Settings | Guidelines |
|-------------------|--|
| Auth Only Browser | <p>Enable this option to configure the firewall authentication to ignore non browser HTTP/HTTPS traffic.</p> <p>This ensures that the unauthenticated users issuing access requests through HTTP/HTTPS browsers are presented with a captive portal interface to allow them to authenticate. By default, firewall authentication responds to all HTTP/HTTPS traffic.</p> |
| Auth User Agent | <p>Specify a user agent value to be matched against values specified in the browser's User-Agent header field that identifies the traffic as HTTP/HTTPS browser traffic. You can specify only one user agent value for a security policy configuration. The value must not contain spaces. The length of the string must be 17 characters or less. For example, you can specify Opera to be verified against the browser's User-Agent field for a match.</p> <p>You can either use this parameter for the Pass Through or User Firewall authentication types or in conjunction with the Auth Only Browser parameter.</p> |

Authentication Type - User Infranet

| | |
|------------------|--|
| Redirect URL | Enter a URL for the webpage to which the client is directed. For example: https://www.juniper.net/ . |
| Redirect Options | <p>Select an option to redirect encrypted or unencrypted traffic:</p> <ul style="list-style-type: none"> • None—To not redirect any traffic • All Traffic—To redirect the encrypted traffic • Unauthenticated Traffic—To redirect the unencrypted traffic |

Advance Settings

Table 172: Firewall Policy Profile Settings (*Continued*)

| Settings | Guidelines |
|---------------------------------|---|
| Services Offload | <p>Select from the following options:</p> <ul style="list-style-type: none"> • None—Select to delete the configured service from the device. • Enable—Select to enable services offload. When services offload is enabled, only the first packets of a session go to the SPU. The rest of the packets in services offload mode do not go to the SPU; therefore, some security features such as stateful screen are not supported. You can offload services only for TCP and UDP packets. • Disable—Select to disable services offload. <p>NOTE: Both logical systems and tenant systems support the disable services offload feature.</p> |
| Destination Address Translation | <p>Select an option to specify whether the traffic permitted by the policy is limited to packets where the destination IP address has been translated by means of a destination NAT rule or to packets where the destination IP address has not been translated:</p> <ul style="list-style-type: none"> • Drop Untranslated—You do not want to translate the destination address. Traffic permitted by the policy is limited to packets where the destination IP address has not been translated. • Drop Translated—You want to translate the destination address. Traffic permitted by the policy is limited to packets where the destination IP address has been translated by means of a destination NAT rule. |
| Redirect Options | <p>Select an option to define the acceleration policy for WX redirection of packets to the WXC Integrated Service Module (ISM 200) for WAN acceleration:</p> <ul style="list-style-type: none"> • None—You want traffic to be redirected • Redirect WX—You want to enable Wx redirection for packets that arrive from the LAN • Reverse Redirect WX—You want to enable WX redirection for the reverse flow of packets that arrive from the WAN. <p>During the redirection process, the direction of the WX packet and its type determine further processing of the packet.</p> |
| TCP-Session Options | |

Table 172: Firewall Policy Profile Settings (Continued)

| Settings | Guidelines |
|-----------------|--|
| TCP-SYN | Enable this option for the device to reject TCP segments with non-SYN flags set unless they belong to an established session. |
| TCP Sequence | Enable this option to monitor the TCP byte sequence counter and to validate the trusted acknowledgment number against the untrusted sequence number. |
| Window Scale | Enable this option to increase the network transmission speed. |
| Initial TCP MSS | <p>Select the TCP maximum segment size (MSS) for packets arriving at the ingress interface (initial direction). If the value in the packet is higher than the one you select, the configured value overrides the TCP MSS value in the incoming packet.</p> <p>The range is 64 through 65535.</p> |
| Reverse TCP MSS | <p>Select the TCP maximum segment size (MSS) for packets that match a specific policy and travel in the reverse direction of a session. If the value in the packet is higher than the one you select, the configured value replaces the TCP MSS value.</p> <p>The range is 64 through 65535.</p> |

RELATED DOCUMENTATION

[Understanding Firewall Policy Profiles | 555](#)

[Understanding Captive Portal Support for Unauthenticated Browser Users | 556](#)

[Assigning Policies and Profiles to Domains | 567](#)

[Viewing Policy and Shared Object Details](#)

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 565](#)
- [Clone Policies or Objects | 565](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

[Creating Firewall Policy Profiles | 557](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 566](#)
- [Replace Policies and Objects | 566](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.

3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

[Creating Firewall Policy Profiles | 557](#)

Assigning Policies and Profiles to Domains

You can assign or reassign policies or profiles to different domains when it is first configured and whenever you want to implement a change. You can assign only one policy or profile at a time. Before assigning a policy or profile to another domain, Security Director checks for the validity of the move. If the move is not acceptable, a warning message appears.

To assign a policy or profile to a domain:

1. Select **Configure** and select the landing page for the type of policy or profile that you are assigning to a domain.
2. From the landing page, right-click the policy or profile or click **More**.
A list of actions appears.
3. Select **Assign <Policy or Profile> to Domain**.

The Assign <Policy or Profile> to Domain page appears.



NOTE: <Policy or Profile> is the name of the policy or profile that you are assigning to a domain.

4. Select the required items to assign to a domain.
5. Enable this option to ignore warning messages, if any.
6. Click **Assign**.

A policy or profile is assigned to a domain.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Firewall Policy Profiles Main Page Fields

Use the firewall policy profiles main page to get an overall, high-level view of your policy profile settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 173 on page 568](#) describes the fields on this page.

Table 173: Firewall Policy Profiles Main Page Fields

| Field | Description |
|-------------------|---|
| Name | Name of the policy profile. |
| Description | Description of the policy profile. |
| Last Updated By | Login name of the operator who last modified the firewall policy profile. |
| Last Updated Time | Time when the firewall policy profile was last updated . |
| Domain | Domain name of the security device. This information is auto-populated once you select the device. For example: global, system. |

RELATED DOCUMENTATION

[Understanding Firewall Policy Profiles | 555](#)

[Creating Firewall Policy Profiles | 557](#)

Firewall Policy-Templates

IN THIS CHAPTER

- [Understanding Firewall Policy Templates | 569](#)
- [Creating Firewall Policy Templates | 569](#)
- [Edit and Clone Policies and Objects | 571](#)
- [Delete and Replace Policies and Objects | 572](#)
- [Firewall Policy Templates Main Page Fields | 573](#)

Understanding Firewall Policy Templates

With the firewall policy template feature, you can use a CLI-based template editor to send configuration details to multiple devices. Because it is *Device Management Interface* (DMI) schema-driven, this template is used to generate a device deployable configuration by replacing the parameterized elements (variables) with actual values and evaluating the control logic statements.

When you do not have an object in Security Director for a firewall policy, you can create template with the Junos CLI. After you create a template, you can add it in firewall policy and then refer it in rules. When you deploy the firewall policy, all the assigned devices are also deployed. This template is based on the Junos Space CLI quick templates.

RELATED DOCUMENTATION

| [Creating Firewall Policy Templates | 569](#)

Creating Firewall Policy Templates

Before You Begin

- Read the "[Understanding Firewall Policy Templates](#)" on [page 569](#) topic.

- Have a basic understanding of Junos OS CLI commands.
- Review the Firewall Policy Templates main page for an understanding of your current data set. See ["Firewall Policy Templates Main Page Fields" on page 573](#) for field descriptions.
- Create source (from-zone) and destination (to-zone) zones.

Use this page to manage and create policy *templates*. You can use a CLI-based template editor to send configuration details to multiple devices. The template editor is a text-editing area, where you can type or paste Junos OS CLI commands.

To configure a firewall policy template:

1. Select **Configure > Firewall Policy > Templates**.
2. Click the + icon.
3. Complete the configuration according to the guidelines provided in [Table 174 on page 570](#).
4. Click **OK**.

A new firewall policy device template with your configurations is created. Create a policy profile and associate the template in the policy profile. After associating the template, the policy profile can be referred in the firewall rules or firewall policies.

Table 174: Firewall Policy Template Settings

| Settings | Guidelines |
|-----------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Description | Enter a description for the firewall policy device template; maximum length is 1024 characters. |
| Device Family | Displays the autopopulated Juniper Networks SRX Series or LN Series devices as the device family. For example, SRX/vSRX/LN. |
| Release Number | Select a Junos schema release running on the device. For example, 11.4R2.4. |
| Template Editor | Enter or copy the Junos OS CLI commands to send configuration details to multiple devices. |
| Validate | Click the link to validate the configuration on the device. This ensures that the device template is semantically correct. |

RELATED DOCUMENTATION

[Understanding Firewall Policy Templates](#) | 569

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects](#) | 571
- [Clone Policies or Objects](#) | 571

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to edit, and then click the pencil icon.
The Edit window appears, showing the same options as when creating a new policy or object.
3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating Firewall Policy Templates](#) | 569

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects](#) | 572
- [Replace Policies and Objects](#) | 572

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to delete, and then select the minus sign (-).

An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.
3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

| [Creating Firewall Policy Templates](#) | 569

Firewall Policy Templates Main Page Fields

Use the Firewall Policy Templates main page to get an overall, high-level view of your device template settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 175 on page 573](#) describes the fields on this page.

Table 175: Firewall Policy Templates Main Page Fields

| Field | Description |
|-------------------|---|
| Name | Name of the template; maximum length is 63 characters. |
| Template Type | Displays the type of the firewall policy template. |
| Description | Description of the template. |
| OS Version | Junos OS version running on the device. |
| Last Updated By | Login name of the operator who last modified the template . |
| Last Updated Time | Time when the template was last updated . |

Table 175: Firewall Policy Templates Main Page Fields *(Continued)*

| Field | Description |
|--------|---|
| Domain | Domain name of security device, which is autopopulated once you select the device. For example: global, system. |

RELATED DOCUMENTATION

| |
|---|
| Understanding Firewall Policy Templates 569 |
| Creating Firewall Policy Templates 569 |

Firewall Policy-Secure Web Proxy

IN THIS CHAPTER

- [About the Secure Web Proxy Page | 575](#)
- [Create a Secure Web Proxy Profile | 577](#)
- [Edit, Clone, and Delete a Secure Web Proxy Profile | 578](#)
- [Assign Secure Web Proxy Profile to a Domain | 580](#)
- [Find Secure Web Proxy Profile Usage Details | 580](#)

About the Secure Web Proxy Page

IN THIS SECTION

- [Tasks You Can Perform | 576](#)
- [Field Descriptions | 576](#)

To access this page, click **Configure > Firewall Policy > Secure Web Proxy**.

Starting in Junos Space Security Director Release 21.1R1, you can use secure Web proxy to enable traffic for the selected dynamic applications to bypass the external proxy server and sent directly to a webserver. Unified policy can co-exist with the secure Web proxy.

You must define a Web proxy profile by specifying external proxy server details and dynamic application. You can associate this secure Web proxy profile with standard/unified firewall policy rule for advanced security. The traffic matching the firewall rule is sent to the configured external proxy server on the rule, unless the selected dynamic application matches.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a secure Web proxy profile. See ["Create a Secure Web Proxy Profile" on page 577](#).
- Clone, edit, and delete a Web proxy profile. See ["Edit, Clone, and Delete a Secure Web Proxy Profile" on page 578](#).
- Find usage of a secure Web proxy profile. See ["Find Secure Web Proxy Profile Usage Details" on page 580](#).
- Show and delete unused profiles. See ["Show and Delete Unused Policies and Objects" on page 518](#).
- Assign a secure Web proxy profile to a domain. See ["Assign Secure Web Proxy Profile to a Domain" on page 580](#).

Field Descriptions

[Table 176 on page 576](#) provides guidelines on using the fields on the Secure Web Proxy page.

Table 176: Fields on the Secure Web Proxy Page

| Field | Description |
|-------------------------|--|
| Name | Specifies the name of the secure Web proxy profile. |
| Description | Specifies the description of the secure Web proxy profile. |
| Drop on DNS Error | If enabled, drops the Web proxy session on DNS error. |
| Proxy Address | Specifies the name of the external proxy server. |
| Dynamic Web Application | Specifies the dynamic Web application. |
| Domain | Specifies the domain name. |

RELATED DOCUMENTATION

[Junos documentation](#)

Create a Secure Web Proxy Profile

To configure secure Web proxy on the SRX Series device, define a Web proxy profile with external proxy server details and dynamic application.

- 1. Select **Configure > Firewall Policy > Secure Web Proxy**.

The Secure Web Proxy page is displayed.

- 2. Click the **+** icon.

The Create Secure Web Proxy Profile page is displayed.

- 3. Configure the values according to the guidelines provided in [Table 177 on page 577](#).

- 4. Click **OK**.

If the operation is successful, the newly created secure web proxy profile is listed on the Secure Web Proxy page.

You can use the newly created secure web proxy in the standard firewall policy rule for advanced security.

Table 177: Secure Web Proxy Profile

| Fields | Description |
|-------------------|--|
| Name | Enter the name of the secure Web proxy profile. |
| Description | Enter the description of the secure Web proxy profile. |
| Drop on DNS error | Enable to drop the Web proxy session on DNS error. |

Table 177: Secure Web Proxy Profile *(Continued)*

| Fields | Description |
|-------------------------|---|
| Dynamic Web Application | <p>To add application signatures:</p> <ul style="list-style-type: none">a. Click the + icon.The Add Application Signatures page is displayed.b. Select an application signature(s).c. Click OK. |
| Proxy Address | <p>To create a proxy address:</p> <ul style="list-style-type: none">a. Click the + icon.The Create Proxy Address page is displayed.b. Enter the name of the external proxy server.c. Enter the IP address of the external proxy server.d. Enter the prefix. The value must be 1 through 32 for IPv4 and 1 through 128 for IPv6.e. Enter the port number of the external proxy server.f. Click OK. |

RELATED DOCUMENTATION

| [About the Secure Web Proxy Page](#) | 575

Edit, Clone, and Delete a Secure Web Proxy Profile

IN THIS SECTION

● [Edit a Secure Web Proxy Profile](#) | 579

- [Clone a Secure Web Proxy Profile | 579](#)
- [Delete a Secure Web Proxy Profile | 579](#)

You can edit, clone, and delete a secure Web proxy profile.

Edit a Secure Web Proxy Profile

1. Select **Configure** > **Firewall Policy** > **Secure Web Proxy**.
The Secure Web Proxy page is displayed.
2. Select a profile, right-click and then select **Edit** or you can select a profile and click the pencil icon.
The Modify Secure Web Proxy Profile page is displayed.
3. Modify the parameters by following the guidelines provided in ["Create a Secure Web Proxy Profile" on page 577](#).
4. Click **OK**.

Clone a Secure Web Proxy Profile

1. Select **Configure** > **Firewall Policy** > **Secure Web Proxy**.
The Secure Web Proxy page is displayed.
2. Select a profile, right-click or select **Clone** from the More list.
The Clone Secure Web Proxy Profile page is displayed with the values that you provided while creating the secure Web proxy profile.
3. Enter a new name for the profile and modify the parameters following the guidelines provided in ["Create a Secure Web Proxy Profile" on page 577](#).
4. Click **OK**.
A confirmation message appears indicating the status of the clone operation.

Delete a Secure Web Proxy Profile

1. Select **Configure** > **Firewall Policy** > **Secure Web Proxy**.
The Secure Web Proxy page is displayed.
2. Select a profile, right-click and then select **Delete** or you can select a profile and click the delete icon.
A confirmation message is displayed.
3. Click **Yes** to delete the secure Web proxy profile.
Delete operation fails if the secure Web proxy profile is used in any standard firewall policy rule. You must remove the associations before deleting the secure Web proxy profile.

RELATED DOCUMENTATION

[About the Secure Web Proxy Page | 575](#)

Assign Secure Web Proxy Profile to a Domain

You can assign profiles to a domain when they are first configured or when you want to implement a change. Security Director checks domain validity, before assigning a profile to another domain.

1. Select **Configure > Firewall Policy > Secure Web Proxy**.

The Secure Web Proxy page is displayed.

2. Select a profile, right-click or select **Assign Secure Web Proxy Profile to Domain** from the More list.

The Assign Secure Web Proxy Profile to Domain page is displayed.

3. Select a domain to assign the profile.

4. Click **OK**.

The status of Secure Web Proxy Profile objects assignments to the selected domain is displayed.

5. Click **Close**.

The assigned domain is displayed in the Domain column on the Secure Web Proxy page.

RELATED DOCUMENTATION

[About the Secure Web Proxy Page | 575](#)

Find Secure Web Proxy Profile Usage Details

You can find the secure Web proxy profile usage details in a firewall policy.

1. Select **Configure > Firewall Policy > Secure Web Proxy**.

The Secure Web Proxy page is displayed.

2. Right-click a secure web proxy profile and select **Find Usage**.

The Search Results page is displayed with the secure web proxy profile names and its usage details.

RELATED DOCUMENTATION

[About the Secure Web Proxy Page | 575](#)

Firewall Policy-DNS Security & ETI Profile

IN THIS CHAPTER

- [DNS Security and Encrypted Traffic Insights Overview | 581](#)
- [About the DNS Security and ETI Profile Page | 582](#)
- [Create a DNS Security and ETI Profile | 583](#)
- [Clone, Edit, and Delete DNS Security and ETI Profile | 586](#)

DNS Security and Encrypted Traffic Insights Overview

Domain Name System (DNS) Security provides an additional layer of protection between a user and the Internet by blocklisting dangerous sites and filtering out unwanted content. By using secure DNS servers, you can avoid unnecessary risks and the possibility of malicious attack.

Security Director provides support to secure DNS. You can now configure DNS security policies on SRX Series devices. You can create and manage DNS Security and Encrypted Traffic Insights (ETI) profiles and use these profiles to create DNS Security and ETI policies.

DNS Domain Generation Algorithm (DGA) generates seemingly random domain names that are used as rendezvous points with potential C&C servers. DNS DGA detection uses machine learning models as well as known pre-computed DGA domain names and provides domain verdicts, which helps in-line blocking of DNS queries on SRX Series devices.

Encrypted traffic insights helps you to detect malicious threats that are hidden in encrypted traffic without intercepting and decrypting the traffic. ETI monitors network traffic for threats without breaking the encryption of the traffic, thereby adhering to data privacy laws. ETI adds an additional layer of protection beyond traditional information security solutions to help organizations reduce and manage risk.

RELATED DOCUMENTATION

| [About the DNS Security and ETI Profile Page](#)

About the DNS Security and ETI Profile Page

IN THIS SECTION

- [Tasks You Can Perform | 582](#)
- [Field Descriptions | 582](#)

To access this page, click **Configure > Firewall Policy > DNS Security & ETI Profile**.

You'll need to configure the DNS security and ETI profile and use the profiles to configure DNS Security and ETI policies.

Tasks You Can Perform

You can perform following tasks on this page:

- Create DNS Security and ETI profile. See [Create a DNS Security and ETI Profile](#).
- Clone, edit, and delete DNS Security and ETI profiles. See [Clone, Edit, and Delete DNS Security and ETI Profile](#)
- Find the usage of the selected profile. Right-click and select **Find usage**, or select **Find Usage** from the More list.
- Display the detailed view of the selected profile. Right-click the profile and select **Detailed View**, or select **Detailed View** from the More list.

Field Descriptions

[Table 178 on page 582](#) provides guidelines on using fields on the DNS Security and ETI Profile page.

Table 178: Fields on the DNS Security and ETI Profile Page

| Field | Description |
|---------------|---|
| Name | The name of the DNS Security and ETI profile. |
| DGA Detection | Specifies the DGA detection action. |

Table 178: Fields on the DNS Security and ETI Profile Page (Continued)

| Field | Description |
|---------------------------|--|
| Tunnel Detection | Specifies the tunnel detection action. |
| Encrypted Traffic Insight | Specifies whether ETI is enabled or disabled. If the option is enabled, you can detect malicious threats hidden in an encrypted traffic without intercepting and decrypting the traffic. |
| Cache TTL | Specifies whether the cache TTL is enabled or disabled. If the option is enabled, you can store DNS in cache till time-to-live (TTL). |
| Domain | The domain name with which the DNS Security profile is associated. |

Create a DNS Security and ETI Profile

Create a DNS security profile to configure feeds and a threat score to list the domains that are known to be connected to malicious activity.

To create a DNS Security and ETI Profile:

1. Select **Configure > Firewall Policy > DNS Security & ETI Profile**.

The DNS Security & ETI Profile page is displayed.

2. Click the **+** icon.

The Configure DNS Security & ETI Profile page is displayed.

3. Configure the values according to the guidelines provided in [Table 179 on page 584](#).

4. Click **OK**.

You can view the created profile on the DNS Security & ETI Profile page.

Table 179: Create DNS Security and ETI Profile

| Fields | Description |
|----------------------|---|
| Name | Enter a name for the DNS profile. The name must be a unique string of alphanumeric and special characters; 63-character maximum. Special characters such as < and > are not allowed. |
| DGA Detection | Enable DNS Domain Generation Algorithm (DGA) to generate random domain names that are used as rendezvous points with potential C&C servers. |
| Action | <p>Select an action that Security Director must perform when malicious traffic is detected.</p> <ul style="list-style-type: none"> • Deny—Drops the tunnel session. • Sinkhole—Drops the tunnel sessions and sinkholes the domain. • Permit—Permits the tunnel session. |
| Logs | <p>Select the logging action that Security Director must perform when malicious traffic is detected.</p> <ul style="list-style-type: none"> • Log Everything—Generates log for each DNS request and DNS detections. • Log Detections—Generates log only for malicious DNS detections. |
| Verdict-timeout | Select a time in milliseconds to wait for a verdict on DNS packet. The range is 50 to 500 milliseconds. The default timeout value is 100 milliseconds. |
| Fallback-options-log | Enable the fallback option for DNS DGA detection. The fallback options are triggered if DGA verdict is not received within the verdict-timeout configured value. The available option is to log the DNS request. |
| Tunnel Detection | Enable this option to detect DNS tunneling. DNS tunneling is a cyber-attack method that encodes the data of other programs or protocols in DNS queries and responses. It indicates that DNS traffic is likely to be subverted to transmit data of another protocol or malware beaconing. |

Table 179: Create DNS Security and ETI Profile *(Continued)*

| Fields | Description |
|---------------------------------|---|
| Action | <p>Specify the action that SRX Series devices must take when a DNS tunneling is detected. The available options are:</p> <ul style="list-style-type: none"> • Deny—Drops the tunnel session • Permit—Permits the tunnel session |
| Logs | <p>Specify the action taken for DNS tunneling detection. The available options are:</p> <ul style="list-style-type: none"> • Log Everything—Generates log per DNS request and DNS detections. • Log Detections—Generates log only for malicious DNS detections. |
| Inspection-depth | Select the number of packets to be inspected for tunnel detection. The range is 0 through 10. Default is 4 packets. |
| Fallback-options-Log | Enable the fallback option for DNS tunneling detection. The fallback option is triggered if a tunnel is not detected within the specified number of packets (inspections-depth). The available option is to log the DNS request. |
| Encrypted Traffic Insight (ETI) | Enable this option to detect malicious threats hidden in an encrypted traffic without intercepting and decrypting the traffic. |
| Action | The default option is permit (permits tunnel session). |
| Logs | <p>Select an action for ETI detection:</p> <ul style="list-style-type: none"> • Log Everything—Generates log for each DNS request and DNS detections. • Log Detections—Generates log only for malicious DNS detections. |
| Fallback-options-Log | Enable the fallback option for ETI detection. The fallback option is triggered if an ETI is not detected within the specified number of packets. The available option is to log the DNS request. |
| Cache TTL | Enable the option to store DNS in cache till time-to-live (TTL). |

Table 179: Create DNS Security and ETI Profile *(Continued)*

| Fields | Description |
|--------|--|
| Benign | Select a benign TTL value. The range is 60 through 172800 seconds. The default value is 86400 seconds. |
| C2 | Select a C2 TTL value. The range is 60 through 172800 seconds. The default value is 86400 seconds. |

Clone, Edit, and Delete DNS Security and ETI Profile

IN THIS SECTION

- [Clone a DNS Security and ETI Profile | 586](#)
- [Edit a DNS Security and ETI Profile | 586](#)
- [Delete a DNS Security and ETI Profile | 587](#)

Clone a DNS Security and ETI Profile

To clone a DNS Security and ETI profile:

1. Select **Configure** > **Firewall Policy** > **DNS Security & ETI Profile**.
The DNS Security and ETI Profile page is displayed.
2. Select a profile and select **Clone** from the More list.
The Clone DNS Security & ETI profile page is displayed.
3. Configure the values as described in [Create a DNS Security and ETI Profile](#).
4. Click **OK**.

Edit a DNS Security and ETI Profile

To edit a DNS Security and ETI profile:

1. Select **Configure** > **Firewall Policy** > **DNS Security & ETI Profile**.
The DNS Security and ETI Profile page is displayed.

2. Select a profile, right-click and select **Edit**, or click the pencil icon.
The Modify DNS Security & ETI Profile page is displayed.
3. Edit the required details.
4. Click **OK**.

Delete a DNS Security and ETI Profile

To delete a DNS Security and ETI profile:

1. Select **Configure > Firewall Policy > DNS Security & ETI Profile**.
The DNS Security and ETI Profile page is displayed.
2. Select a profile, right-click and select **Delete**, or click the Delete icon.
A confirmation pop up is displayed.
3. Click **Yes**.

Firewall Policy-DNS Security & ETI Policy

IN THIS CHAPTER

- [About the DNS Security and ETI Policy Page | 588](#)
- [Create a DNS Security and ETI Policy | 589](#)
- [Edit and Delete DNS Security and ETI Policy | 590](#)

About the DNS Security and ETI Policy Page

IN THIS SECTION

- [Tasks You Can Perform | 588](#)
- [Field Descriptions | 589](#)

To access this page, click **Configure** > **Firewall Policy** > **DNS Security & ETI Policy**.

Domain Name System (DNS) security provides an additional layer of protection between a user and the internet by blocklisting unwanted sites and filtering out unwanted content. Encrypted traffic insights (ETI) detect malicious threats hidden in encrypted traffic without intercepting and decrypting the traffic.

Tasks You Can Perform

You can perform following tasks from this page:

- Create DNS security and ETI policy. See [Create a DNS Security and ETI Policy](#).
- Modify and delete DNS security and ETI policy. See [Edit and Delete DNS Security and ETI Policy](#).
- Publish DNS security and ETI policy. See ["Publishing Policies" on page 516](#).
- Update DNS security and ETI policy. See ["Updating Policies on Devices" on page 519](#).

Field Descriptions

[Table 180 on page 589](#) provides guidelines on using fields on the DNS security and ETI policy page.

Table 180: Fields on the DNS Security & ETI Policy Page

| Field | Description |
|------------------------------|--|
| Name | Specifies the name for the DNS Security policy. The name must be a unique string of alphanumeric and special characters; 63-character maximum. Special characters such as < and > are not allowed. |
| Source Zone | User traffic received from the zone. |
| Destination Zone | The destination zone of the log. |
| DNS Security and ETI Profile | Specifies the DNS Security and ETI profile. |
| Devices | The devices on which the DNS Security and ETI policy is published. |
| Publish State | Displays the status of the DNS security and ETI policy configuration. |
| Domain | Domain in which the DNS Security and ETI policy is created. |

Create a DNS Security and ETI Policy

You can create a DNS security and ETI policy using the DNS security and ETI profile.

1. Select **Configure > Firewall Policy > DNS Security & ETI Policy**.

The DNS Security & ETI Policy page is displayed.

2. Click the + icon.

The Create DNS Security & ETI Policy page is displayed.

3. Configure the values according to the guidelines provided in [Table 181 on page 590](#).

4. Click **OK**.

Table 181: Create a DNS Security & ETI Policy

| Field | Descriptions |
|-----------------------------|---|
| Name | Enter a name for the DNS Security policy. The name must be a unique string of alphanumeric and special characters; 63-character maximum. Special characters such as < and > are not allowed. |
| Device Association | Click Select to assign devices to the DNS Security and ETI Policy. Select the devices from the Available column and move them to the Selected column. |
| Source Zone | The source zone is where the originating traffic for your connection is coming from. This zone is tied to your interface. If you can determine the interface from where the traffic is processed, you can determine the source zone of the traffic. |
| Destination Zone | The destination zone indicates the zone from where traffic exits the Juniper firewall. You can determine this zone by identifying the interface that the traffic exits after routing. The interface that traffic exits is bound to a zone, and that zone is the destination zone. |
| DNS Security & ETI Profile* | Select a DNS Security & ETI profile. |

Edit and Delete DNS Security and ETI Policy

IN THIS SECTION

- [Edit a DNS Security and ETI Policy | 590](#)
- [Delete a DNS Security & ETI Policy | 591](#)

Edit a DNS Security and ETI Policy

To edit a DNS security and ETI profile:

1. Select **Configure > Firewall Policy > DNS Security & ETI Profile**.

The DNS Security and ETI Profile page is displayed.

2. Select a profile, right-click and select **Edit** or you can click the pencil icon.
The Modify DNS Security & ETI Profile page is displayed.
3. Edit the required details.
4. Click **OK**.

Delete a DNS Security & ETI Policy

To delete a DNS security and ETI profile:

1. Select **Configure > Firewall Policy > DNS Security & ETI Profile**.
The DNS Security and ETI Profile page is displayed.
2. Select a profile, right-click and select **Delete** or you can click on Delete icon.
A confirmation pop up is displayed.
3. Click **Yes** to delete the profile.

Firewall Policy-DNS Sinkhole

IN THIS CHAPTER

- About the DNS Sinkhole Page | 592
- Create a Sinkhole | 594
- Assign Devices to a Sinkhole | 595
- Unassign Devices from a Sinkhole | 595
- Clone a Sinkhole | 595
- Assign a Sinkhole to a Domain | 596
- Publish a DNS Sinkhole Policy | 596
- Update a DNS Sinkhole Policy | 597
- Edit and Delete a Sinkhole | 598

About the DNS Sinkhole Page

IN THIS SECTION

- Tasks You Can Perform | 593
- Field Descriptions | 593

A DNS Sinkhole enables you to reject or resolve DNS requests for disallowed domains. It can be used to prevent access to malicious URLs at an enterprise level. It can also be used to restrict access to specific sites that violate corporate policies, including social networking, abusive content and so on. For more information, see [Juniper Advanced Threat Prevention Cloud Administration Guide](#).

To access the **DNS Sinkhole** page, click **Configure> Firewall Policy> DNS Sinkhole**.

Tasks You Can Perform

You can perform the following tasks from the **DNS Sinkhole** page:

- Create, edit, or delete a sinkhole. See:
 - [Create a Sinkhole](#)
 - [Edit and Delete a Sinkhole](#)
- Assign or unassign devices in a sinkhole. See:
 - [Assign Devices to a Sinkhole](#)
 - [Unassign Devices from a Sinkhole.](#)
- Clone a sinkhole. See, [Clone a Sinkhole](#).
- Assign a sinkhole to a domain. See, [Assign a Sinkhole to a Domain](#).
- Update and publish a sinkhole. See:
 - [Update a DNS Sinkhole Policy](#)
 - [Publish a DNS Sinkhole Policy](#)

Field Descriptions

The following table describes the information displayed on the **DNS Sinkhole** page:

| Column | Description |
|-----------------------------|---|
| Name | The name of the sinkhole. The name is unique, includes a number, an alphabet, and a special character other than < and >. |
| Sinkhole Domain Name | The domain name for the sinkhole. The default value is sinkhole.junipersecurity.net. |
| IPv4 Address | The IPv4 address of the sinkhole. |
| IPv6 Address | The IPv6 address of the sinkhole. |
| Devices | Name or IP addresses of the devices assigned to the sinkhole. |

(Continued)

| Column | Description |
|----------------------|---|
| Publish State | The publishing status of the sinkhole. |
| Domain | The domain to which the sinkhole is assigned. |

Create a Sinkhole

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.

The **DNS Sinkhole** page is displayed.

2. Click the **+** icon.

The **Create DNS Sinkhole** page is displayed.

3. Enter a name for the sinkhole.



NOTE: The name must not exceed 63 characters, be unique, include a number, an alphabet, and a special character other than **<** and **>**.

4. Enter the domain name of the sinkhole. The default value is `sinkhole.junipersecurity.net`.
5. Enter the IPv4 address of the sinkhole. The default value is `44.241.133.101`.
6. Enter the IPv6 address of the sinkhole. The default value is `::1`.
7. Select the devices that you want to assign to the sinkhole in the **Available** section and click the right-arrow icon.
8. In the **Advanced Settings** section, enter the following details, if required:
 - **DNS Response TTL**—The time-to-live (TTL) value in seconds for which a DNS response must be cached. The default value is 1800 seconds.



NOTE: The TTL value must not exceed 3600 seconds.

- **SRV response error code**—The error code that must be sent for bad domain server queries.
- **Test response error code**—The error code that must be sent for bad domain text queries.

- **Wildcarding-Level**-The number of levels that can be examined for a domain. You can examine up to 10 levels and the default value is 2.

9. Click **OK**.

The sinkhole is created and displayed on the **DNS Sinkhole** page.

Assign Devices to a Sinkhole

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.

The **DNS Sinkhole** page is displayed.

2. Select the sinkhole to which you want to assign the devices, click **More**, and then click **Assign Devices**.

The **Assign Devices** page is displayed.

3. In the **Available** section, select the devices that you want to assign to the sinkhole and click the right arrow icon.

The devices are displayed in the **Selected** section.

4. Click **OK**.

The devices are assigned to the sinkhole and the device details are displayed in the **Devices** column on the **DNS Sinkhole** page.

Unassign Devices from a Sinkhole

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.

The **DNS Sinkhole** page is displayed.

2. Select the sinkhole from which you want to unassign devices, click **More**, and then click **Unassign Device**.

You are prompted to confirm that you want to unassign the devices.

3. Click **Yes** to confirm.

All the devices assigned to the sinkhole are unassigned.

4. Publish the sinkhole policy. See [Publish a DNS Sinkhole Policy](#).

Clone a Sinkhole

You can create a new sinkhole by cloning an existing sinkhole.

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.

The **DNS Sinkhole** page is displayed.

2. Select the sinkhole that you want to clone, click the **More** menu, and then click **Clone**.

The **Clone DNS Sinkhole** page is displayed.

3. Edit the required fields and click **OK**.

The sinkhole is created and displayed on the **DNS Sinkhole** page.

Assign a Sinkhole to a Domain

You can assign or reassign a sinkhole to a domain when it is first configured or when you modify it. Before assigning a sinkhole to a domain, Security Director checks for the validity of the move. If the move is not acceptable, a warning is displayed. However, you can choose to ignore the warning.

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.

The **DNS Sinkhole** page is displayed.

2. Select the sinkhole that you want to assign to a domain, click the **More** menu, and then click **Assign DNS Sinkhole to Domains**.

The **Assign DNS Sinkhole to Domain** page is displayed.

3. Select the domains to which you want to assign the sinkhole.
4. Enable the option to ignore warnings that may be displayed if an issue was detected when Security Director validates the assignment, if required.
5. Click **OK**.

Publish a DNS Sinkhole Policy

After you create a sinkhole, you must publish the sinkhole policy before you deploy the policy on the devices.

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.

The **DNS Sinkhole** page is displayed.

2. Select the sinkhole and click **Publish**.

The **Publish DNS Sinkhole Policy** is displayed.

3. Perform one of the following steps:

- Select **Run now** to apply the configuration immediately.
- Select **Schedule at a later time** to schedule and publish the configuration later.

4. Select the devices to which the policy changes will be published.



NOTE: You can search for a specific device by name or IP address on which the policy is published.

5. Click **Publish**.

The **Job Details** page is displayed with the following information: job type, job Id, job name, user name, job state, percentage completed, and the job timestamp. You can click **Export to CSV** to save the job details as a CSV file.

6. Click **OK**.

The **DNS Sinkhole** page is displayed.

Update a DNS Sinkhole Policy

Ensure that the policy is published. See [Publish a DNS Sinkhole Policy](#).

After you create and publish the policy, you must update the policy to deploy it on the devices.

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.

The **DNS Sinkhole** page is displayed.

2. Select the sinkhole and click **Update**.

The **Update DNS Sinkhole Policy** is displayed.

3. Perform one of the following steps:

- Select **Run now** to apply the configuration immediately.
- Select **Schedule at a later time** to schedule and publish the configuration later.

4. Select the devices to which the policy changes will be published.



NOTE: You can search for a specific device by name or IP address on which the policy is published.

5. Click **Publish and Update**.

You are prompted to confirm that you want to update and publish the policy.

6. Click **OK**.

The **Job Details** page is displayed with the following information: job type, job Id, job name, user name, job state, percentage completed, and the job timestamp. You can click **Export to CSV** to save the job details as a CSV file.

7. Click **OK**.

The **DNS Sinkhole** page is displayed.

Edit and Delete a Sinkhole

IN THIS SECTION

- [Edit a Sinkhole | 598](#)
- [Delete a Sinkhole | 598](#)

Edit a Sinkhole

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.
2. Select the required sinkhole and click the edit icon,
The **Modify DNS Sinkhole** page is displayed.
3. Make the required changes and click **OK**.

Delete a Sinkhole

1. Go to **Configure > Firewall Policy > DNS Sinkhole**.
The **DNS Sinkhole** page is displayed.
2. Select the required sinkhole and click the delete icon.
You are prompted to confirm if you want to delete the sinkhole.
3. Click **Yes** to delete the sinkhole.
The sinkhole is deleted and you are prompted to confirm if you want to be redirected to the **Security Devices** page.
4. Perform one of the following steps:
 - Click **Redirect** to go to the **Security Devices** page.
 - Click **No** to go to the **DNS Sinkhole** page.

Environment

IN THIS CHAPTER

- [Environment Variables and Conditions Overview | 599](#)
- [About the Environment Page | 601](#)
- [Creating a New Environment Variable | 604](#)
- [Editing and Deleting Environment Variables | 605](#)
- [Creating a New Environment Condition | 606](#)
- [Editing and Deleting Environment Conditions | 608](#)

Environment Variables and Conditions Overview

IN THIS SECTION

- [Benefits of Environment Variables and Conditions | 601](#)

You can use environment variables and conditions to configure dynamic policy actions for your firewall policy rules. With traditional firewall rules, if you want to block all outbound traffic, then you must manually modify the action of the rules from permit to deny. Similarly, if you want to allow all traffic, you modify the action from deny to permit. When handling critical events, going through hundreds of firewall policy rules and modifying them is both time consuming and inefficient. Further, when the event is over, you might need to revert those rule settings to the previously configured values.

To avoid such manual configurations to the firewall rules and to improve your control over configurations, as a network administrator, you can define environment variables and apply conditions by using these variables. Based on the conditions that you define, certain preconfigured actions are taken on the firewall policy rules dynamically.

Along with the action, you can define certain advanced security properties. You can also disable the rules based on the action and change the logging options.

[Table 182 on page 600](#) and [Table 183 on page 600](#) show examples of the usage of custom-defined environment variables and rule actions based on variable values.

Table 182: Example of Custom-Defined Environment Variables

| Environment Variable | Type | Possible Value | Default Value | Current Value |
|----------------------|--------|-------------------|---------------|---------------|
| Threat Level | String | Low, Medium, High | Low | High |

Table 183: Example of Rule Actions Based on Variable Values

| Rule # | Source | Destination | Service | Firewall | IPS |
|--------|----------|----------------|---------|--|---|
| m | Employee | Internet video | http | If (ThreatLevel= High) Deny Else Permit | None |
| n | WebZone | DBZone | DB | Permit | If (ThreatLevel=High) Adv_profile Else Std_Profile |

[Table 184 on page 600](#) shows an example of how conditions are used. In the Environment Condition column, the condition is first evaluated to identify the related set of action the system will take. For example, if the value of the ThreatLevel environment variable is Medium at any point of time, the system automatically enables the intrusion prevention system (IPS) service for the corresponding traffic.

Table 184: Example of Environment Condition

| Rule Number | Source Traffic Match Criteria | Destination Traffic Match Criteria | Environment Condition | Firewall Action | Other Actions |
|-------------|-------------------------------|------------------------------------|-----------------------|-----------------|------------------------|
| 1000 | Any | MyCriticalServers | ThreatLevel=Low | PERMIT | LOG |
| | | | ThreatLevel=Medium | PERMIT | LOG IPS_STD_PROFILE |
| | | | ThreatLevel=High | DENY | LOG |

Benefits of Environment Variables and Conditions

- Simplifies the task of creating, in advance, different security actions that the security team can take to test the system's behavior under different environmental conditions.
- Reduces the time required to react to security threats or situations and take the required actions. During critical situations, security administrators must focus on identifying the attacks and, with environment variables configured, they do not have to spend too much time and effort in manipulating the rules table.
- Reduces the probability of manual errors, especially during critical events when a large number of firewall policy rules need to be edited.
- Helps reduce business risks by streamlining security operations for normal conditions as well as for other dynamic conditions.

RELATED DOCUMENTATION

[About the Environment Page | 601](#)

[Creating a New Environment Variable | 604](#)

[Creating a New Environment Condition | 606](#)

[Editing and Deleting Environment Variables | 605](#)

[Editing and Deleting Environment Conditions | 608](#)

About the Environment Page

IN THIS SECTION

● [Tasks You Can Perform | 602](#)

● [Field Descriptions | 602](#)

To access this page, click **Configure > Environment**.

Use the Environment page to configure and manage the environment variables and its conditions to dynamically change firewall rule actions.

Every time the environment changes, you do not have to go through the entire rule configuration. Instead, rules are modified dynamically when the environment changes; you are required to only update the value of the variables.

Typically, network administrators configure environment variables and conditions.

Tasks You Can Perform

You can perform the following tasks from the Environment page:

- Create a new environment variable from the Variables tab. See ["Creating a New Environment Variable" on page 604](#).
- Edit or delete the environment variable from the Variables tab. See ["Editing and Deleting Environment Variables" on page 605](#).

You can perform the following tasks from the Environment page:

- Create a new environment condition from the Environment Conditions tab. See ["Creating a New Environment Condition" on page 606](#).
- Edit or delete the environment condition from the Environment Conditions tab. See ["Editing and Deleting Environment Conditions" on page 608](#).

Field Descriptions

[Table 185 on page 602](#) provides guidelines on using the fields on the Environment Variables page.

Table 185: Fields on the Environment Page

| Field | Description |
|-----------------|--|
| Variables tab | |
| Variable | Specifies the name of the environment variable. |
| Possible Values | Specifies the user-defined values for each variable to secure the network situation. |
| Current Value | Specifies the current value of the variable. |

Table 185: Fields on the Environment Page (Continued)

| Field | Description |
|-----------------|--|
| Used In | Specifies the environment conditions where the variable is used and the number of rules assigned to that condition. Click the number of conditions or rules for more information. |
| Last Changed On | Specifies the last modified date and time of the variable. |

Environment Conditions tab

| | |
|-------------------|---|
| Condition Name | Specifies the name of the condition. The green dot before the condition name means that the condition is active. |
| Variables Used | Specifies the environment variables used in that particular condition. |
| Current State | Specifies the current state of the condition. For example, active or inactive. |
| Used In | Specifies the number of rules that matches the condition. |
| Activated Count | Shows the number of times the condition was active. |
| Status Changed On | Specifies the date and time of the state change from active to inactive and vice versa. |

RELATED DOCUMENTATION
[Environment Variables and Conditions Overview | 599](#)
[Creating a New Environment Variable | 604](#)
[Creating a New Environment Condition | 606](#)
[Editing and Deleting Environment Variables | 605](#)
[Editing and Deleting Environment Conditions | 608](#)
[Firewall Policy Rules Main Page Fields | 521](#)

Creating a New Environment Variable

Use the Create a New Environment Variable page to define the new environment variables and assign the threat levels. These variables are used to define the environment conditions.

To create a new environment variable:

1. Select **Configure > Environment**.

The Environment page appears.

2. Select the **Variables** tab and click the + icon.

The Create New Environment Variable page appears.

3. Complete the configuration by using the guidelines in [Table 186 on page 604](#).

4. Click **Save** to save the configuration or **Cancel** to discard the configuration.

Use these environment variables to define the environment conditions. You can create a new condition or edit the existing condition to use these variables.

Table 186: Fields on the Create New Environment Variable Page

| Field | Description |
|--------------------------|--|
| Variable Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. |
| Possible Value Type | <p>Select the type of possible values.</p> <ul style="list-style-type: none"> • Numbers—Select this option to provide a list of numbers. • Number Range—Select this option to define a number range for the possible values. • Text—Select this option to provide the string as a possible value. |
| Possible Values | Enter the list of possible values, based on the possible value type that you have selected. For example, high, medium, low, 2, 4, or 1 to 6. |
| Default Value | Select the default possible value for the environment variable from the list. |
| Current Value (optional) | Select the current possible value for the environment variable from the list. If nothing is defined, the default value is considered the current value. |

RELATED DOCUMENTATION

[Environment Variables and Conditions Overview | 599](#)

[About the Environment Page | 601](#)

[Creating a New Environment Condition | 606](#)

[Editing and Deleting Environment Variables | 605](#)

[Editing and Deleting Environment Conditions | 608](#)

[Firewall Policy Rules Main Page Fields | 521](#)

Editing and Deleting Environment Variables

IN THIS SECTION

- [Editing Environment Variables | 605](#)
- [Deleting an Environment Variable | 606](#)

You can edit or delete the environment variables from the Variables tab.

Editing Environment Variables

To edit an environment variable:

1. Select **Configure > Environment**.

The Environment page appears.

2. Select the variable that you want to edit, and then click the pencil icon.

The Edit Environment Variable page appears showing the same options that were used to create a new variable.

3. Changing the variable values might impact the actions of certain rules. To view the affected rules, click **click here** in the Change Impact section.

The Policy Change List page appears listing the affected firewall policies with rules. Click the rules to preview the changes.

4. Click **Save** to save your changes.

The Policy Change List page appears listing the rules that are modified because of the variable update.

5. Click **Publish** and **Update** to update the modified rules to the device.

Deleting an Environment Variable

You can only delete variables that are not used in any condition. If you try to delete a variable in use, you will receive a failure message with a link to view the list of conditions that have used the selected variable.

To delete a variable that is not used in any condition:

1. Select **Configure > Environment**.
The Environment page appears.
2. Select the variable that you want to delete, and then select the delete icon (X).
An alert message appears confirming the delete operation.
3. Click **Yes** to delete your selection.
If the variable is not used in any condition, then the delete operation is successful. Otherwise you see a failure message.

RELATED DOCUMENTATION

[Environment Variables and Conditions Overview | 599](#)

[About the Environment Page | 601](#)

[Creating a New Environment Variable | 604](#)

[Creating a New Environment Condition | 606](#)

[Editing and Deleting Environment Conditions | 608](#)

[Firewall Policy Rules Main Page Fields | 521](#)

Creating a New Environment Condition

Use the Create New Environment Condition page to create a new environment condition using the environment variables.

To create a new environment condition:

1. Select **Configure > Environment**.
The Environment page appears.
2. Select the **Environment Conditions** tab and click the + icon.
The Create New Environment Condition page appears.
3. Complete the configuration by using the guidelines in [Table 187 on page 607](#).
4. Click **Save** to save the configuration or **Cancel** to discard the configuration.

After defining a new condition, you must apply it to the firewall policy rules. After assigning these conditions to the rules, publish and update to the device.

Table 187: Fields on the Create New Environment Condition Page

| Field | Description |
|----------------|--|
| Condition Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. |
| Description | Enter a description for the environment condition; maximum length is 255 characters. |
| Condition | Click the field and select the environment variable and the required possible values. You can choose one or more variables in a combination. For example, use '=' or '!=' operator to apply OR condition for the possible values. You can choose the AND operator, for the AND condition. |

Security administrators can now use the conditional evaluators based on the environment variables in the firewall policy. Security Director auto-calculates the changes to the relevant rules and based on the administrator's approval, pushes out these changes to the entire network as required.

For example, the firewall policy rule table is updated with environment conditions, as shown in [Table 188 on page 607](#). If the ThreatLevel is Orange at a point of time, the system enables IPS service automatically for the corresponding traffic.

Table 188: Firewall Rule with a Condition

| Rule Number | Source Traffic Match Criteria | Destination Traffic Match Criteria | Environmental Condition | Firewall Action(s) | Other Actions |
|-------------|-------------------------------|------------------------------------|-------------------------|--------------------|------------------------|
| 1000 | Any | MyCriticalServers | ThreatLevel=GREEN | PERMIT | LOG |
| | | | ThreatLevel=ORANGE | PERMIT | LOG IPS_STD_PROFILE |
| | | | ThreatLevel=RED | DENY | LOG |

RELATED DOCUMENTATION

[Environment Variables and Conditions Overview | 599](#)

[About the Environment Page | 601](#)

[Creating a New Environment Variable | 604](#)

[Editing and Deleting Environment Variables | 605](#)

[Editing and Deleting Environment Conditions | 608](#)

[Firewall Policy Rules Main Page Fields | 521](#)

Editing and Deleting Environment Conditions

IN THIS SECTION

- [Editing an Environment Condition | 608](#)
- [Deleting an Environment Condition | 608](#)

You can edit or delete the environment conditions from the Environment Conditions tab.

Editing an Environment Condition

To edit an environment condition:

1. Select **Configure > Environment**.

The Environment page appears.

2. In the Environment Conditions tab, select the condition that you want to edit, and then click the pencil icon.

The Edit Environment Condition page appears displaying the same options that were used to create a new condition.

3. Click **Save** to save the changes or **Cancel** to discard the changes.

Deleting an Environment Condition

To delete an environment condition:

1. Select **Configure > Environment**.

The Environment page appears.

- 2. In the Environment Conditions tab, select the condition that you want to delete, and then select the delete icon (X).
An alert message appears confirming the delete operation.
- 3. Click **Yes** to delete your selection.

RELATED DOCUMENTATION

| |
|---|
| Environment Variables and Conditions Overview 599 |
| About the Environment Page 601 |
| Creating a New Environment Variable 604 |
| Creating a New Environment Condition 606 |
| Editing and Deleting Environment Variables 605 |
| Firewall Policy Rules Main Page Fields 521 |

Application Firewall Policy-Policies

IN THIS CHAPTER

- [Understanding Application Firewall Policies | 610](#)
- [Creating Application Firewall Policies | 611](#)
- [Delete and Replace Policies and Objects | 614](#)
- [Edit and Clone Policies and Objects | 615](#)
- [Show and Delete Unused Policies and Objects | 617](#)
- [Finding Usages for Policies and Objects | 618](#)
- [Application Firewall Policies Main Page Fields | 618](#)

Understanding Application Firewall Policies

Many dynamic applications use HTTP static ports to tunnel non-HTTP traffic through the network. Such applications can permit traffic that might not be adequately controlled by standard network firewall policies, leading to a security threat. Standard policies function based on IP addresses and ports, and therefore are not effective with these dynamic applications. To avoid these security issues, an additional security control for policies was introduced that functions based on the application ID.

The security policies provide firewall security functionality by enforcing rules for the traffic, which pass through the device, is permitted or denied based on the action defined in the rules. The application firewall port in the policies provides additional security control for dynamic applications.

An application firewall provides the following features:

- Permits, rejects, or denies traffic based on the application in use.
- Identifies not only HTTP but also any application running on top of it, letting you properly enforce policies. For example, an application firewall rule could block HTTP traffic from Facebook but allow Web access to HTTP traffic from MS Outlook.

The application firewall policy is defined by a collection of rule sets. A rule set defines the rules that match the application ID detected, based on the application signature. After you create an application firewall policy by adding rules, you can select that policy to be the active policy on your device.

The application firewall policy identifies the application ID as an unknown application ID under the following circumstances:

- No application ID matches the traffic.
- The system encounters an error when identifying the application.
- Application ID is not identified during failover sessions.

When the application ID is identified as unknown, the traffic is processed based on the action defined in the unknown rule in the rule set. When there is no rule defined for unknown in the rule set, the default rule is applied for unknown dynamic applications.

RELATED DOCUMENTATION

[Creating Application Firewall Policies | 611](#)

[Finding Usages for Policies and Objects | 618](#)

Creating Application Firewall Policies

Before You Begin

- Read the "[Understanding Application Firewall Policies](#)" on [page 610](#) topic.
- Have a basic understanding of firewall rules.
- Have a basic understanding of an application (or application set) that indicates that the policy applies to traffic that matches it.
- Review the application firewall policies main page for an understanding of your current data set. See "[Application Firewall Policies Main Page Fields](#)" on [page 618](#) for field descriptions.

Use the Application Firewall Policies page to configure an *application firewall* policy and to specify the rule set to be applied to it.

An application firewall:

- Permits, rejects, or denies traffic based on the application of the traffic.
- Consists of one or more rule sets that specify match criteria and the action to be taken for matching traffic.

- Identifies not only HTTP but also any application running on top of it, letting you properly enforce policies. For example, an application firewall rule could block HTTP traffic from Facebook but allow Web access to HTTP traffic from MS Outlook.

To configure an application firewall policy, you must create a policy and then add rules to it. To create an application firewall policy:

1. Select **Configure > Application Firewall Policy > Policies**.
2. Click the + icon.
3. Complete the configuration according to the guidelines provided in the [Table 189 on page 612](#).
4. Click **OK**.

To add rules to the application firewall policy:

1. Click **Add Rules** for the policy you created.
2. Click +.
3. Complete the configuration according to the guidelines provided in the [Table 190 on page 612](#).
4. Click **OK**.

A new application firewall policy with your configurations is created. You can add rules to this policy to provide additional security.

Table 189: Application Firewall Policies Settings

| Settings | Guidelines |
|-------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Description | Enter a description for the policy; maximum length is 1024 characters. |

Table 190: Add Rule Settings

| Settings | Guidelines |
|-----------|--|
| Rule Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |

Table 190: Add Rule Settings (*Continued*)

| Settings | Guidelines |
|--|--|
| Application Signatures | <p>Select an option to add or delete an application signature.</p> <p>Select one or more available application signatures to add to the rules.</p> |
| Encryption | <p>Select an option to specify different actions for encrypted and unencrypted SSL traffic:</p> <ul style="list-style-type: none"> Any—Matches both encrypted and unencrypted SSL traffic. Yes—Matches encrypted SSL traffic only. No—Matches unencrypted SSL traffic only. |
| Action | <p>Select an option for any traffic that matches the application firewall rule set:</p> <ul style="list-style-type: none"> Permit—Allows the traffic at the firewall. Deny—Blocks traffic, closes the session, and logs the event from an application firewall. By default, no message is returned to the client. But you can choose to send a message. Reject—Drops traffic with a message to the client, closes the session, and logs the event from an application firewall. |
| Notify user on blocking (Deny or Reject) | <p>Select whether or not to notify clients when drop or reject actions are logged from an application firewall:</p> <ul style="list-style-type: none"> Yes—Displays a default message or customized message, or redirects the clients for denied HTTP or HTTPS traffic. All other traffic is dropped silently. No—No message is sent to the client. |
| Default Action— Default Action for other applications (not matching any rule) | <p>Select an option for any traffic that does not match any defined application firewall rule:</p> <ul style="list-style-type: none"> Permit—Allows the traffic at the firewall. Deny—Blocks the traffic and the device drops the packet. By default, no message is returned to the client but you can choose to send a message. Reject—Drops the traffic. By default the device drops the packet and returns a TCP reset (RST) message to the source host and to the server in some cases. For UDP or other protocol traffic, an ICMP unreachable message is returned to both client and server. |

Table 190: Add Rule Settings *(Continued)*

| Settings | Guidelines |
|---|--|
| Block Message— Block Message Type | <p>Select an option to provide a text explanation to the client, redirect the client to an informative webpage, or do nothing after a reject or deny action from an application firewall:</p> <ul style="list-style-type: none">• Not Configured—No message is returned to the client.• Custom Message—Enter text to display with splash screen to inform the client that the traffic has been blocked.• Redirect URL—Enter URL to redirect the client to a custom webpage instead of the default splash screen. For example: https://www.juniper.net/. |

RELATED DOCUMENTATION

[Understanding Application Firewall Policies | 610](#)

[Finding Usages for Policies and Objects | 618](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 615](#)
- [Replace Policies and Objects | 615](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.
3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

| [Creating Application Firewall Policies](#) | 611

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects](#) | 616
- [Clone Policies or Objects](#) | 616

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating Application Firewall Policies](#) | 611

Show and Delete Unused Policies and Objects

IN THIS SECTION

- [Show Unused Policies and Objects | 617](#)
- [Delete Unused Policies and Objects | 617](#)

You can show or delete unused policies and objects in your network configurations.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Show Unused Policies and Objects

You can view all unwanted policies or objects that are not used anywhere in your network to take appropriate action.

To show unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are showing.
2. From the landing page, click **More**.
A list of actions appears.
3. Select **Show Unused**.
A list of unused objects (not referenced in any policy) and unused policies appear on the page.

Delete Unused Policies and Objects

You can clear all unwanted policies or objects that are not used anywhere in your network.

To delete unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are deleting.
2. Select the check boxes beside the items that you want to delete. Right-click on the policy or object or click **More** from the landing page.
A list of actions appears.
3. Select **Delete Unused**.
A confirmation window appears before you can delete the unused policies or objects.
4. Click **Yes** to confirm the deletion.

All unused policies or objects are deleted.

RELATED DOCUMENTATION

[Creating Application Firewall Policies](#) | 611

Finding Usages for Policies and Objects



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

You can find usages for policies or objects and take appropriate action.

To find policies or objects usages:

1. Select **Configure** > and select the landing page for the policy or object for which you want to find usages.
The policies or shared objects page appears
2. Right-click the policy or object or click **More**.
3. Select Find Usage. The usage window appears, showing the usage of the selected policy or object.

RELATED DOCUMENTATION

[Show and Delete Unused Policies and Objects](#) | 617

Application Firewall Policies Main Page Fields

Use the application firewall policies main page to get an overall, high-level view of your application firewall policy settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 191 on page 619](#) describes the fields on this page.

Table 191: Application Firewall Policies Main Page Fields

| Field | Description |
|--------------------------------|---|
| Name | Name of the application firewall policy; maximum length is 63 characters. |
| Default Action | Action taken for any traffic that matches one of the specified applications. For example: Reject, Permit, Deny. |
| Rules | The match criteria, including dynamic applications, and the action to be taken for matching traffic. |
| Block Message Type | The type and content in a block message profile defined in the rule set. For example: Text, URL. |
| Block Message/ Redirect URL | Either a text explanation to the client or a URL redirect of the client to an informative webpage. Occurs when traffic is blocked by a reject action or a deny action from an application firewall. |
| Domain | Domain name of the security device. This information is autopopulated once you select the device. For example: global, system. |
| Description | Description of the application firewall policy. |

RELATED DOCUMENTATION

[Understanding Application Firewall Policies | 610](#)

[Creating Application Firewall Policies | 611](#)

Application Firewall Policy-Signatures

IN THIS CHAPTER

- [Understanding Custom Application Signatures | 620](#)
- [Creating Application Signatures | 623](#)
- [Editing, Cloning, and Deleting Custom Application Signatures | 628](#)
- [Creating Application Signature Groups | 630](#)
- [Application Signatures Main Page Fields | 631](#)

Understanding Custom Application Signatures

IN THIS SECTION

- [ICMP-Based Mapping | 621](#)
- [Address-Based Mapping | 621](#)
- [IP Protocol-Based Mapping | 622](#)
- [Layer 7-Based Signatures | 622](#)

Application identification supports user-defined custom application signatures and signature groups. Custom application signatures are unique to your environment and are not part of the predefined application package when you install them into the device. The custom application signatures are pushed to the device when you publish or update and subsequently, you can use them in the application firewall policy rules only.

The custom application signatures are required:

- To control traffic particular to an environment
- To bring visibility for unknown or unclassified applications by developing custom applications

- To identify applications over Layer 7 that are transiting or temporary applications, and to achieve further granularity of known applications
- To perform QoS for your specific application

Starting in Junos Space Security Director 17.1, you can create the custom application identification for all devices running Junos OS Release 15.1X49-D40 and later. You can use the custom application identification in the application firewall policies similar to the predefined application identifications. If the custom application identifications are not supported by a device, Security Director shows an error during the policy publish or the configuration preview.

You can import the custom application signatures from a device and also push the created custom application signatures to a device, by using the publish and update workflow.



NOTE:

- You can use the custom application signatures only in the application firewall policy rules.
- Security Director and device configurations must be in sync for the application visibility to work with the custom application signatures.

SRX Series devices support the following types of custom signatures:

ICMP-Based Mapping

The ICMP mapping technique maps standard ICMP message types and optional codes to a unique application name. This mapping technique lets you differentiate between various types of ICMP messages.

Address-Based Mapping

Layer 3 and Layer 4 address mapping defines an application by the IP address and optional port range of the traffic.

To ensure adequate security, use address mapping when the configuration of your private network predicts application traffic to or from trusted servers. Address mapping provides efficiency and accuracy in handling traffic from a known application.

With Layer 3 and Layer 4 address-based custom applications, you can match the IP address and port range to destination IP address and port. When IP address and port are configured, they must match the destination tuples (IP address and port range) of the packet.

For example, consider a Session Initiation Protocol (SIP) server that initiates sessions from its known port 5060. Because all traffic from this IP address and port is generated by only the SIP application, the

SIP application can be mapped to an IP address of the server and port 5060 for application identification. In this way, all traffic with this IP address and port is identified as SIP application traffic.

IP Protocol-Based Mapping

Standard IP protocol numbers can map an application to IP traffic. As with address mapping, to ensure an adequate security, use IP protocol mapping only in your private network for trusted servers.

Layer 7-Based Signatures

Layer 7 custom signatures define an application running over TCP or UDP or Layer 7 applications. Layer 7-based custom application signatures are required for the identification of multiple applications running on the same Layer 7 protocols. For example, applications such as Facebook and Yahoo Messenger can run over HTTP, but there is a need to identify them as two different applications running on the same Layer 7 protocol. The custom signature is cacheable for Layer 7 signatures only. You can create multiple signatures and each signature can contain multiple members up to maximum of 15 members.

Layer 7-based custom application signatures detect applications based on the patterns in HTTP contexts. However, some HTTP sessions are encrypted in SSL, also called Transport Layer Security (TLS). Application identification can extract the server name information or the server certification from the TLS or SSL sessions. It can also detect patterns in TCP or UDP payload in Layer 7 applications.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 17.1 | Starting in Junos Space Security Director 17.1, you can create the custom application identification for all devices running Junos OS Release 15.1X49-D40 and later. |

RELATED DOCUMENTATION

| |
|--|
| Creating Application Signatures 623 |
| Editing, Cloning, and Deleting Custom Application Signatures 628 |

Creating Application Signatures

Application identification supports custom application signatures to detect applications as they pass through the device. When you configure custom signatures, make sure that your signatures are unique. Use the Create Application Signature page to create custom application signatures for applications based on ICMP, IP protocol, IP address, and Layer 7.

Before you begin creating the custom application signatures:

- Make sure you have downloaded the application signature database package.
- The SRX Series device must be running Junos OS Release 15.1X49-D40 or later.

To create the custom application signatures:

1. Select **Configure > Application Firewall Policy > Signatures**.

The Application Signatures Page appears.

2. From the Create list, select **Signature**.

The Create Application Signature page appears.

3. Complete the configuration by using the guidelines in [Table 192 on page 623](#).

4. Click **OK** to complete the configuration or **Cancel** to discard the configuration.

Table 192: Fields on the Create Application Signature Page

| Field | Description |
|-------------|---|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. |
| Description | Enter a description for the custom application signature; maximum length is 255 characters. |
| Order | Specify the order for the custom application. Lower order has higher priority. This option is used when multiple custom applications of the same type match the same traffic. However, you cannot use this option to prioritize among different type of applications such as TCP stream-based applications against TCP port-based applications or IP address-based applications against port-based applications. |
| Priority | Select the priority from the list over other signature applications. |

ICMP Mapping

Table 192: Fields on the Create Application Signature Page *(Continued)*

| Field | Description |
|----------------------------|--|
| ICMP Type | <p>Specify the Internet Control Message Protocol (ICMP) value for an application to match. The ICMP mapping technique maps standard ICMP message types and optional codes to a unique application name. This mapping technique lets you differentiate between various types of ICMP messages.</p> <p>Select the numerical value of an ICMP type. The type field identifies the ICMP message.</p> |
| ICMP Code | Select the numerical value of an ICMP code. The code field provides further information about the associated type field. |
| <i>IP Protocol Mapping</i> | |
| IP Protocol | Select the IP protocol value for an application to match. Standard IP protocol numbers can map an application to IP traffic. To ensure an adequate security similar to address mapping, use IP protocol mapping only in your private network for trusted servers. |
| <i>Address Mapping</i> | |
| Add Address Mapping | Use the Add Address Mapping page to create an address mapping that defines an application by the IP address and the port range of the traffic. |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. |
| IP Address | Enter an IPv4 or IPv6 address of the application for address mapping. |
| CIDR | Enter an IPv4 or IPV6 address prefixes for a classless addressing. |
| TCP Port Range | Enter the TCP port range for the application. Example: 1-200. |
| UDP Port Range | Enter the UDP port range for the application. Example: 1-200. |
| <i>L7 Signature</i> | |

Table 192: Fields on the Create Application Signature Page *(Continued)*

| Field | Description |
|------------------|--|
| Cacheable | Set this option to TRUE to enable caching of application identification results. By enabling this option, you can cache the application detection result in an ASC table. If there is an entry in the ASC table, based on the destination IP address, protocol, and the port, you can identify AppID without sending the packet again to engine. |
| Add L7 Signature | <p>Select a protocol over which L7 signatures are added. The available options are:</p> <ul style="list-style-type: none"> • Over HTTP • Over SSL • Over TCP • Over UDP |
| Over Protocol | Shows the type of protocol that you have selected to add the L7 signature. |
| Signature Name | Enter the name of the custom application signature; maximum length is 63 characters. |
| Port Range | Enter the port range for the selected protocol. Range is 1-65535. |
| Add Members | Click the + sign to add members for a custom application signature. You can add maximum of 15 members. |
| Member Name | Member name for a custom application signature. Custom signatures can contain multiple members that define attributes for an application. (The supported member name range is m01 through m15.) |

Table 192: Fields on the Create Application Signature Page *(Continued)*

| Field | Description |
|---------|---|
| Context | <p>Select the context for matching the application running over TCP, UDP, or Layer 7.</p> <p>The available options are:</p> <ul style="list-style-type: none"> • http-get-url-parsed-param-parsed—The decoded and normalized GET URL in an HTTP request along with the decoded CGI parameters (if any). • http-header-content-type—The content-type header in an HTTP transaction. • http-header-cookie—The cookie header in an HTTP transaction. • http-header-host—The host header in an HTTP transaction. • http-header-user-agent—The user-agent header in an HTTP transaction. • http-post-url-parsed-param-parsed—The decoded and normalized POST URL in an HTTP request along with the decoded CGI parameters (if any). • http-post-variable-parsed—The decoded POST URL or form data variables. • http-url-parsed—The decoded and normalized URL in an HTTP request. • http-url-parsed-param-parsed—The decoded and normalized URL in an HTTP request along with the decoded CGI parameters (if any). • ssl-server-name—Server name in the TLS server name extension or the SSL server certificate. This is also known as Server Name Indication (SNI). • stream—TCP or UDP stream data. |

Table 192: Fields on the Create Application Signature Page *(Continued)*

| Field | Description | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------------|--|---------|-----------|----------------------------------|------------------|------------------|------------------|------------------------|------------------|-----------------------------------|------------------|---------------------------|------------------|-----------------|------------------|------------------------------|------------------|--------------------------|---------------------------------------|--------------------|---------------------------------------|-----------------|------------------|--------|---------------------------------------|
| Direction | <p>Select the connection direction of the packets to match pattern from the list. Combinations other than those mentioned in Table 193 on page 627 is not supported.</p> <p>Table 193: Supported Context-Direction Combination</p> <table><tr><th>Context</th><th>Direction</th></tr><tr><td>http-get-url-parsed-param-parsed</td><td>client-to-server</td></tr><tr><td>http-header-host</td><td>client-to-server</td></tr><tr><td>http-header-user-agent</td><td>client-to-server</td></tr><tr><td>http-post-url-parsed-param-parsed</td><td>client-to-server</td></tr><tr><td>http-post-variable-parsed</td><td>client-to-server</td></tr><tr><td>http-url-parsed</td><td>client-to-server</td></tr><tr><td>http-url-parsed-param-parsed</td><td>client-to-server</td></tr><tr><td>http-header-content-type</td><td>any/client-to-server/server-to-client</td></tr><tr><td>http-header-cookie</td><td>any/client-to-server/server-to-client</td></tr><tr><td>ssl-server-name</td><td>client-to-server</td></tr><tr><td>stream</td><td>any/client-to-server/server-to-client</td></tr></table> | Context | Direction | http-get-url-parsed-param-parsed | client-to-server | http-header-host | client-to-server | http-header-user-agent | client-to-server | http-post-url-parsed-param-parsed | client-to-server | http-post-variable-parsed | client-to-server | http-url-parsed | client-to-server | http-url-parsed-param-parsed | client-to-server | http-header-content-type | any/client-to-server/server-to-client | http-header-cookie | any/client-to-server/server-to-client | ssl-server-name | client-to-server | stream | any/client-to-server/server-to-client |
| Context | Direction | | | | | | | | | | | | | | | | | | | | | | | | |
| http-get-url-parsed-param-parsed | client-to-server | | | | | | | | | | | | | | | | | | | | | | | | |
| http-header-host | client-to-server | | | | | | | | | | | | | | | | | | | | | | | | |
| http-header-user-agent | client-to-server | | | | | | | | | | | | | | | | | | | | | | | | |
| http-post-url-parsed-param-parsed | client-to-server | | | | | | | | | | | | | | | | | | | | | | | | |
| http-post-variable-parsed | client-to-server | | | | | | | | | | | | | | | | | | | | | | | | |
| http-url-parsed | client-to-server | | | | | | | | | | | | | | | | | | | | | | | | |
| http-url-parsed-param-parsed | client-to-server | | | | | | | | | | | | | | | | | | | | | | | | |
| http-header-content-type | any/client-to-server/server-to-client | | | | | | | | | | | | | | | | | | | | | | | | |
| http-header-cookie | any/client-to-server/server-to-client | | | | | | | | | | | | | | | | | | | | | | | | |
| ssl-server-name | client-to-server | | | | | | | | | | | | | | | | | | | | | | | | |
| stream | any/client-to-server/server-to-client | | | | | | | | | | | | | | | | | | | | | | | | |

Table 192: Fields on the Create Application Signature Page *(Continued)*

| Field | Description |
|---------|--|
| Pattern | (Optional) Enter the Deterministic Finite Automaton (DFA) pattern matched on the context. The DFA pattern specifies the pattern to be matched for the signature. Maximum length is 128 characters. |

RELATED DOCUMENTATION

[Understanding Custom Application Signatures | 620](#)

[Editing, Cloning, and Deleting Custom Application Signatures | 628](#)

Editing, Cloning, and Deleting Custom Application Signatures

IN THIS SECTION

- [Editing Custom Application Signatures | 628](#)
- [Cloning Custom Application Signatures | 629](#)
- [Deleting Custom Application Signatures | 629](#)

You can edit, clone, and delete the custom application signatures from the Application Signatures page. You clone a custom application signature to easily create a custom application signature. You delete the unused custom application signatures.

Editing Custom Application Signatures

To edit a custom application signature:

1. Select **Configure > Application Firewall Policy > Signatures**.
The Application Signatures page appears.
2. Select the custom application signature that you want to edit, and click the pencil icon.
The Edit Application Signatures page appears, showing the same fields that are displayed when you create a custom application signature.

3. Edit the application signatures fields as needed.
4. Click **OK** to save the changes.

The changes are saved and you are returned to the Application Signatures page.

Cloning Custom Application Signatures

To clone a custom application signature:

1. Select **Configure > Application Firewall Policy > Signatures**.

The Application Signatures page appears.

2. Select the custom application signature that you want to clone, and click the **Clone** button or select **Clone** from the More or right-click menu.

The Clone Application Signature page appears, showing the same fields that are displayed when you create a custom application signature.

3. Modify the application signature fields as needed.
4. Click **OK** to save the changes.

The cloned custom application signature is created and you are returned to the Application Signatures page.

Deleting Custom Application Signatures

To delete one or more custom application signatures:

1. Select **Configure > Application Firewall Policy > Signatures**.

The Application Signatures page appears.

2. Select the custom application signature that you want to delete, and click the **X** icon.

A warning dialog box appears asking you to confirm the deletion.

3. Click **Yes** to delete the selected custom application signatures.

The custom application signatures are deleted and you are returned to the Application Signature page.

RELATED DOCUMENTATION

[Understanding Custom Application Signatures | 620](#)

[Creating Application Signatures | 623](#)

Creating Application Signature Groups

Before You Begin

- Make sure you have downloaded the application signature database package.
- Make sure that the latest updates have been applied.
- Review the Application Signature main page for an understanding of your current data set. See ["Application Signatures Main Page Fields" on page 631](#) for field descriptions.

Juniper Networks regularly updates the predefined application signature database, making it available to subscribers on the Juniper Networks website. This package includes signature definitions of known application objects that can be used to identify applications for tracking, firewall policies, quality-of-service prioritization, and Intrusion Prevention System (IPS).

Use the Application Signature page to view application signatures that are already downloaded and to create custom application signature groups. The application signature page displays the name, object type, category and subcategory, risk, and characteristics of the signature. You can create custom application signature groups with a set of similar signatures for consistent reuse when defining policies.



NOTE: As of Junos OS Release 12.1x47 and later, the nested applications are called *applications*, with the same details converted as the members of application signature. These application signatures are called ngAppIDs. The Application Signature page shows only the ngAppID2.0 applications and application groups.

Application identification supports custom application signatures to detect applications as they pass through the device. When you configure custom signature groups, make sure that your signature groups are unique.

To configure application signature groups:

1. Select **Configure > Application Firewall Policy > Signatures**.
2. Click the + icon.
3. Complete the configuration according to the guidelines provided in [Table 194 on page 631](#).
4. Click **OK** to save.

Table 194: Application Signature Group Settings

| Setting | Guideline |
|---------------|---|
| Name | Enter a unique name that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and maximum length is 63 characters. |
| Group Members | Click the + icon to add signatures to your application group. On the Add Application Signatures page, select the check boxes next to the signatures you want to add to the group. |

RELATED DOCUMENTATION

[Creating Application Firewall Policies | 611](#)

[Creating Firewall Policies | 478](#)

Application Signatures Main Page Fields

Use the application signatures main page to get an overall, high-level view of your application signature settings. You can perform column wise filter and sort this information to get a better understanding of what you want to configure.

Starting in Junos Space Security Director Release 18.4R1, when you click the filter icon, a drop-down list is available for category and subcategory columns. You can select any value and the grid is reloaded with the filtered category and subcategory.

[Table 195 on page 631](#) describes the fields on this page.

Table 195: Application Signatures Main Page Fields

| Field | Description |
|-------------|--|
| Name | Name of the application signature; maximum length is 63 characters. |
| Object Type | Signature type, either application signature or application signature group. |
| Category | UTM category of the application signature. |

Table 195: Application Signatures Main Page Fields *(Continued)*

| Field | Description |
|----------------------|---|
| Sub Category | UTM subcategory of the application signature. |
| Risk | Level of risk of the application signature. |
| Characteristic | One or more characteristics of the application signature. |
| Device Compatibility | Device compatibility version. |
| Predefined/Custom | A list of predefined application signatures and a list of custom application signatures that you created. |
| Domain | IP addresses associated with domain names. |

RELATED DOCUMENTATION

[Creating Application Signature Groups | 630](#)

[Creating Application Firewall Policies | 611](#)

Application Firewall Policy-Redirect Profiles

IN THIS CHAPTER

- [About the Redirect Profiles Page | 633](#)
- [Adding a Redirect Profile | 634](#)
- [Cloning, Editing, and Deleting Redirect Profiles | 636](#)

About the Redirect Profiles Page

IN THIS SECTION

- [Tasks You Can Perform | 633](#)
- [Field Descriptions | 634](#)

To access this page, click **Configure>Application Firewall Policy>Redirect Profiles**.

You can create a redirect profile to provide a reason for the policy action or to redirect the user request to an informative webpage. After you configure the redirect profiles for a policy, when a policy blocks HTTP or HTTPS traffic with a deny or reject action, a message or redirect URL is sent to the user. You can customize the redirect action by adding the text message or specify the URL to which the user is redirected. When the redirect message option is specified, a message notifies the user that the traffic has been blocked and also the reason for blocking the traffic.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a redirect profile. See ["Adding a Redirect Profile" on page 634](#).

- Edit, Clone, and Delete a redirect profile. See ["Cloning, Editing, and Deleting Redirect Profiles" on page 636](#).

Field Descriptions

[Table 196 on page 634](#) provides guidelines on using the fields on the Redirect Profile page.

Table 196: Fields on the Redirect Profile Page

| Field | Description |
|----------------------------|---|
| Name | Name of the profile. |
| Block Message Type | The message type, that is, Text or Redirect URL, which is displayed after a reject and deny action. |
| Block Message/Redirect URL | The custom text or the URL of the webpage to which the user is redirected. If custom-text is specified, both the default block message and the custom-defined block message are displayed. Custom text is inserted below the default message, which includes <i>username</i> , Application Firewall has blocked your request to application <i>application name</i> at <i>dest-ip:dest-port</i> accessed from <i>src-ip:src-port</i> . |
| Domain | The domain of the profile. |
| Description | The description of the profile. |

RELATED DOCUMENTATION

| [Adding a Redirect Profile](#) | 634

Adding a Redirect Profile

You can add a redirect profile and configure a custom block message or redirect URL.

To add a redirect profile:

1. Select **Configure>Application Firewall Policy>Redirect Profiles**.

The Redirect Profiles page is displayed.

2. Click the **+** icon.

The Add Redirect Profile page appears.

3. Configure according to the guidelines in [Table 197 on page 635](#).

4. Click **OK**.

A profile is created and displayed on the redirect profiles page.

Table 197: Add Redirect Profile

| Field | Description |
|--------------------------------|--|
| Name | Enter the name of the redirect profile. |
| Description | Enter the description of the Redirect Profile. |
| Block Message Type | <p>Select the block message type:</p> <ul style="list-style-type: none"> • Text—If custom text is specified, both the default block message and the custom-defined block message are displayed. • Redirect URL—The URL of the webpage to which the client is redirected. The URL must start with http or https. For example: http://www.juniper.net. |
| Block Message/ Redirect URL | Enter the block message or redirect URL |

RELATED DOCUMENTATION

| [Cloning, Editing, and Deleting Redirect Profiles](#) | 636

Cloning, Editing, and Deleting Redirect Profiles

IN THIS SECTION

- [Cloning Redirect Profiles | 636](#)
- [Editing Redirect Profile | 636](#)
- [Deleting Redirect Profile | 636](#)

Cloning Redirect Profiles

To clone a redirect profile:

1. Select **Configure>Application Firewall Policy>Redirect Profiles**.
The Redirect Profiles page is displayed.
2. Right-click a policy or click More and select **Clone**.
The Clone Redirect Profile page is displayed.
3. Edit the details and click **OK**.

Editing Redirect Profile

To edit a redirect profile:

1. Select **Configure>Application Firewall Policy>Redirect Profiles**.
The Redirect Profiles page is displayed.
2. Right-click a policy and select **Edit** or click pencil icon.
The Edit Redirect Profile page is displayed.
3. Edit the details and click **OK**.

Deleting Redirect Profile

To delete a redirect profile:

1. Select **Configure>Application Firewall Policy>Redirect Profiles**.
The Redirect Profiles page is displayed.
2. Select a policy and click delete icon.
A warning message is displayed.
3. Click **Yes** to delete the selected redirect profile.

RELATED DOCUMENTATION

| [Adding a Redirect Profile](#) | 634

SSL Profiles

IN THIS CHAPTER

- [SSL Forward Proxy Overview | 638](#)
- [Creating SSL Forward Proxy Profiles | 647](#)
- [SSL Forward Proxy Profile Main Page Fields | 653](#)
- [SSL Reverse Proxy Overview | 654](#)
- [Creating SSL Reverse Proxy Profiles | 656](#)

SSL Forward Proxy Overview

IN THIS SECTION

- [Supported Ciphers in Proxy Mode | 641](#)
- [Server Authentication | 643](#)
- [Trusted CA List | 643](#)
- [Ignore Server Authentication | 643](#)
- [Root CA | 644](#)
- [Session Resumption | 644](#)
- [SSL Proxy Logs | 644](#)
- [Perfect Forward Secrecy | 645](#)

Secure Sockets Layer (*SSL*) is an application-level protocol that provides encryption technology for the Internet. SSL, also called *Transport Layer Security* (TLS), ensures the secure transmission of data between a client and a server through a combination of privacy, authentication, confidentiality, and data integrity. SSL relies on certificates and private-public key exchange pairs for this level of security.

Server authentication guards against fraudulent transmissions by enabling a Web browser to validate the identity of a Web server. Confidentiality mechanisms ensure that communications are private. SSL enforces confidentiality by encrypting data to prevent unauthorized users from eavesdropping on electronic communications. Finally, message integrity ensures that the contents of a communication have not been tampered with.

SSL forward proxy is a transparent proxy; that is, it performs SSL encryption and decryption between the client and the server, but neither the server nor the client can detect its presence. SSL forward proxy ensures that it has the keys to encrypt and decrypt the payload:

- For the server, SSL forward proxy acts as a client—Because SSL forward proxy generates the shared pre-primary key, it determines the keys to encrypt and decrypt.
- For the client, SSL forward proxy acts as a server—SSL forward proxy first authenticates the original server and replaces the public key in the original server certificate with a key that is known to it. It then generates a new certificate by replacing the original issuer of the certificate with its own identity and signs this new certificate with its own public key (provided as a part of the proxy profile configuration). When the client accepts such a certificate, it sends a shared pre-primary key encrypted with the public key on the certificate. Because SSL forward proxy replaced the original key with its own key, it is able to receive the shared pre-primary key. Decryption and encryption take place in each direction (client and server), and the keys are different for both encryption and decryption.

[Figure 54 on page 640](#) depicts how SSL inspection (on an existing SRX Series IPS module) is typically used to protect servers. SSL inspection requires access to private keys used by the servers so that the SRX Series device can decrypt the encrypted traffic.

Figure 54: SSL Inspection on an Existing SRX Series Firewall

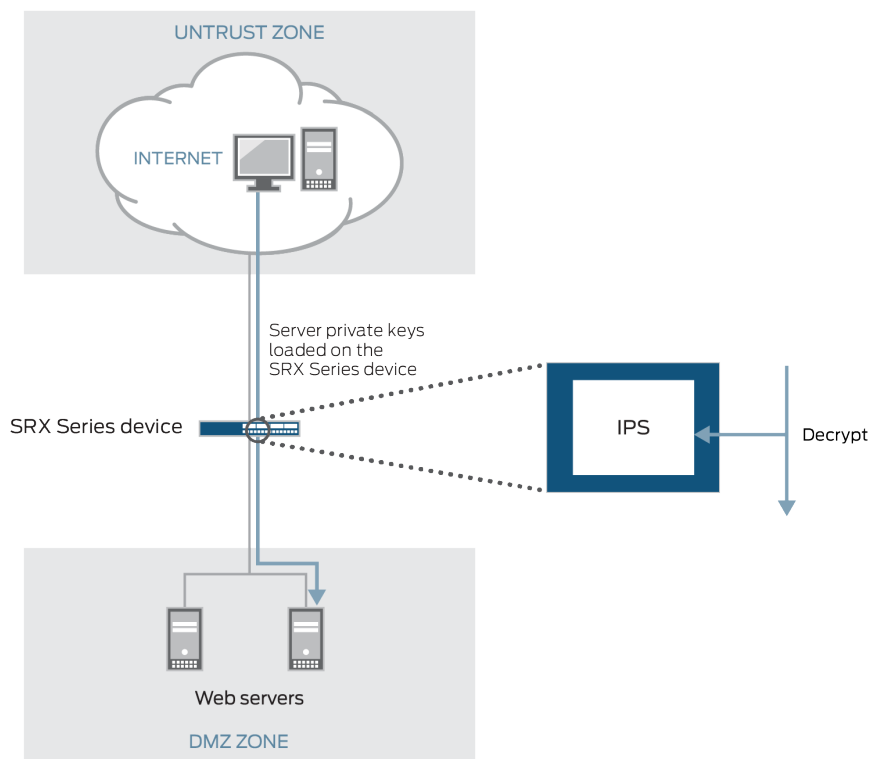



Figure 55 on page 641 shows how SSL forward proxy works on an encrypted payload. When application firewall (AppFW), intrusion prevention system (IPS), or application tracking (AppTrack) is configured, SSL forward proxy acts as an SSL server terminating the SSL session from the client and a new SSL session is established to the server. The device decrypts and then re-encrypts all SSL forward proxy traffic. SSL forward proxy uses the following services:

- SSL-T-SSL terminator on the client side.
- SSL-I-SSL initiator on the server side.
- Configured AppFW, IPS, or AppTrack services use the decrypted SSL sessions.



NOTE: If none of the services (AppFW, IPS, or AppTrack) are configured, then SSL forward proxy services are bypassed even if an SSL proxy profile is attached to a firewall policy. IPS does not perform SSL inspection on a session if SSL forward proxy is enabled for that session. That is, if both SSL inspection and SSL forward proxy are enabled on a session, SSL forward proxy always takes precedence.

Figure 55: SSL Proxy on an Encrypted Payload

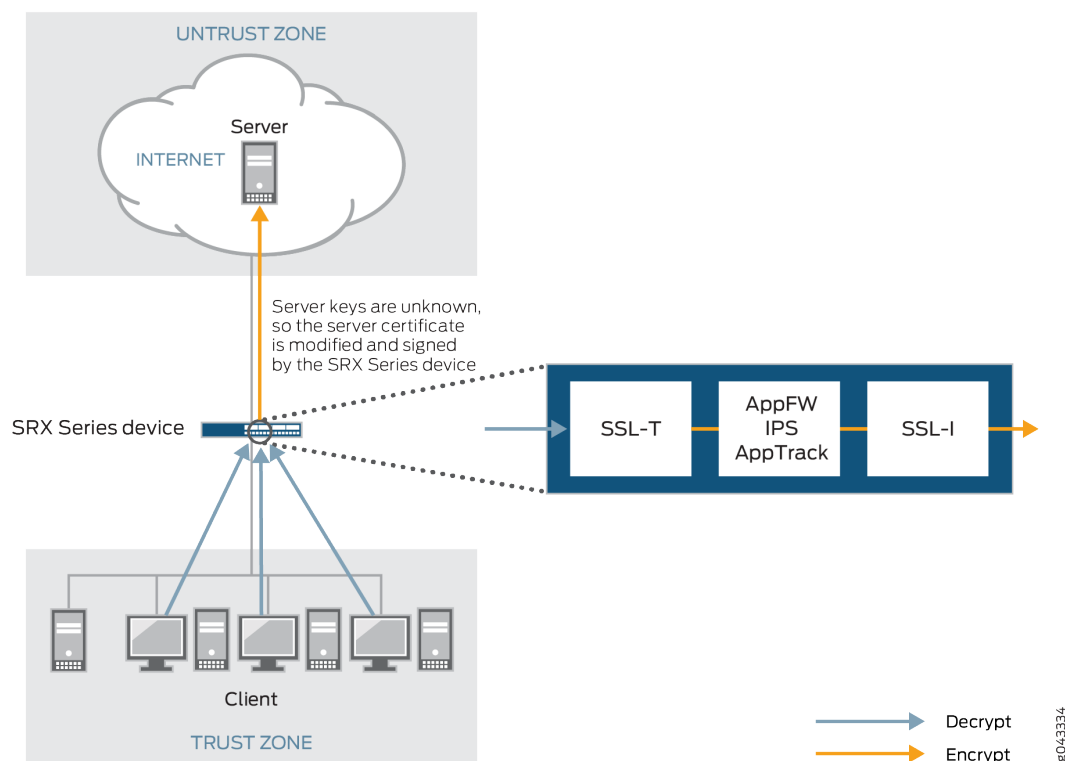

Supported Ciphers in Proxy Mode

An SSL cipher comprises encryption ciphers, authentication method, and compression. [Table 198 on page 641](#) displays a list of supported ciphers. NULL ciphers are excluded.

The following SSL protocols are supported:

- SSLv3
- TLS1

Table 198: Supported Ciphers in Proxy Mode

| SSL Cipher | Key Exchange Algorithm | Data Encryption | Message Integrity |
|----------------------|------------------------|-----------------|-----------------------------|
| RSA_WITH_RC4_128_MD5 | RSA key exchange | 128-bit RC4 | Message Digest 5 (MD5) hash |

Table 198: Supported Ciphers in Proxy Mode (Continued)

| SSL Cipher | Key Exchange Algorithm | Data Encryption | Message Integrity |
|---------------------------------|------------------------|-----------------|----------------------------------|
| RSA_WITH_RC4_128_SHA | RSA key exchange | 128-bit RC4 | Secure Hash Algorithm (SHA) hash |
| RSA_WITH_DES_CBC_SHA | RSA key exchange | DES CBC | SHA hash |
| RSA_WITH_3DES_EDE_CBC_SHA | RSA key exchange | 3DES EDE/CBC | SHA hash |
| RSA_WITH_AES_128_CBC_SHA | RSA key exchange | 128-bit AES/CBC | SHA hash |
| RSA_WITH_AES_256_CBC_SHA | RSA key exchange | 256-bit AES/CBC | SHA hash |
| RSA_EXPORT_WITH_RC4_40_MD5 | RSA-export | 40-bit RC4 | MD5 hash |
| RSA_EXPORT_WITH_DES40_CBC_SHA | RSA-export | 40-bit DES/CBC | SHA hash |
| RSA_EXPORT1024_WITH_DES_CBC_SHA | RSA 1024 bit export | DES/CBC | SHA hash |
| RSA_EXPORT1024_WITH_RC4_56_MD5 | RSA 1024 bit export | 56-bit RC4 | MD5 hash |
| RSA_EXPORT1024_WITH_RC4_56_SHA | RSA 1024 bit export | 56-bit RC4 | SHA hash |
| RSA-WITH-AES-256-GCM-SHA384 | RSA key exchange | 256-bit AES/GCM | SHA384 hash |
| RSA-WITH-AES-256-CBC-SHA256 | RSA key exchange | 256-bit AES/CBC | SHA256 hash |
| RSA-WITH-AES-128-GCM-SHA256 | RSA key exchange | 128-bit AES/GCM | SHA256 hash |
| RSA-WITH-AES-128-CBC-SHA256 | RSA key exchange | 128-bit AES/CBC | SHA256 hash |

Server Authentication

Implicit trust between the client and the device (because the client accepts the certificate generated by the device) is an important aspect of SSL proxy. It is extremely important that server authentication is not compromised; however, in reality, self-signed certificates and certificates with anomalies are in abundance. Anomalies can include expired certificates, instances of common name not matching a domain name, and so forth.

Server authentication is governed by selecting the Ignore Server Authentication option in the SSL forward proxy profile.

If the Ignore Server Authentication option is not selected, the following scenarios occur:

- If authentication succeeds, a new certificate is generated by replacing the keys and changing the issuer name to the issuer name that is configured in the root CA certificate in the proxy profile.
- If authentication fails, the connection is dropped.

If the Ignore Server Authentication option is defined as an action in the SSL forward proxy profile, the following scenarios occur:

- If the certificate is self-signed, a new certificate is generated by replacing the keys only. The issuer name is not changed. This ensures that the client browser displays a warning that the certificate is not valid.
- If the certificate has expired or if the common name does not match the domain name, a new certificate is generated by replacing the keys and changing the issuer name to SSL-PROXY: DUMMY_CERT:GENERATED DUE TO SRVR AUTH FAILURE. This ensures that the client browser displays a warning that the certificate is not valid.

Trusted CA List

SSL forward proxy ensures secure transmission of data between a client and a server. Before establishing a secure connection, SSL forward proxy checks *certificate authority* (CA) certificates to verify signatures on server certificates. For this reason, a reasonable list of trusted CA certificates is required to effectively authenticate servers.

Ignore Server Authentication

You can use the Ignore Server Authentication option to ignore server authentication completely. In this case, SSL forward proxy ignores errors encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry).

We do not recommend this option for authentication, because configuring it results in websites not being authenticated at all. However, you can use this option to effectively identify the root cause for dropped SSL sessions.

Root CA

In a public key infrastructure (PKI) hierarchy, the root CA is at the top of the trust path. The root CA identifies the server certificate as a trusted certificate.

Session Resumption

An SSL session refers to the set of parameters and encryption keys created by performing a full handshake. A connection is the conversation or active data transfer that occurs within the session. The computational overhead of a complete SSL handshake and generation of primary keys is considerable. In short-lived sessions, the time taken for the SSL handshake can be more than the time for data transfer. To improve throughput and still maintain an appropriate level of security, SSL session resumption provides a session caching mechanism so that session information, such as the pre-primary secret key and agreed-upon ciphers, can be cached for both the client and server. The cached information is identified by a session ID. In subsequent connections both parties agree to use the session ID to retrieve the information rather than create a new pre-primary secret key. Session resumption shortens the *handshake* process and accelerates SSL transactions.

SSL Proxy Logs

When logging is enabled in an SSL proxy profile, SSL proxy can generate the messages shown in [Table 199 on page 644](#).

Table 199: SSL Proxy Logs

| Log Type | Description |
|-----------------------------|--|
| SSL_PROXY_SSL_SESSION_DROP | Logs generated when a session is dropped by SSL proxy. |
| SSL_PROXY_SSL_SESSION_ALLOW | Logs generated when a session is processed by SSL proxy even after encountering some minor errors. |
| SSL_PROXY_SESSION_IGNORE | Logs generated if non-SSL sessions are initially mistaken as SSL sessions. |
| SSL_PROXY_SESSION_ALLOWLIST | Logs generated when a session is allowlisted. |

Table 199: SSL Proxy Logs (Continued)

| Log Type | Description |
|-------------------|--|
| SSL_PROXY_ERROR | Logs used for reporting errors. |
| SSL_PROXY_WARNING | Logs used for reporting warnings. |
| SSL_PROXY_INFO | Logs used for reporting general information. |

All logs contain similar information; the message field contains the reason for the log generation. One of three prefixes shown in [Table 200 on page 645](#) identifies the source of the message. Other fields are descriptively labeled.

Table 200: SSL Proxy Log Prefixes

| Prefix | Description |
|-------------------|--|
| system | Logs generated due to errors related to the device or an action taken as part of the SSL proxy profile. Most logs fall into this category. |
| openssl error | Logs generated during the handshaking process if an error is detected by the openssl library. |
| certificate error | Logs generated during the <i>handshaking</i> process if an error is detected in the certificate (x509 related errors). |

Perfect Forward Secrecy

Perfect Forward Secrecy is a specific key agreement protocol that provides assurance that your session keys are not compromised even if the private key of the server is compromised. By generating a unique session key for every session a user initiates, even if a single session keys gets compromised does not affect any data other than that exchanged in a specific session protected by that particular key.

The Elliptic Curve DHE (ECDHE) cipher suits are supported to enable the perfect forward secrecy on SSL forward proxy. The SSL forward proxy still uses RSA for authentication. However, it uses EC Diffie-Hellman ephemeral key exchange to agree on a shared secret.

ECDHE cipher suites are faster than the DHE counterparts and therefore, the SSL forward proxy supports only ECDHE cipher suits. The ECDHE cipher suits are based on the elliptic curve cryptography

which allows you to achieve the same level of security than RSA with smaller keys. For example, a 224 bit elliptic curve is as secure as a 2048 bit RSA key.

[Table 201 on page 646](#) shows the supported ECDHE cipher suits.

Table 201: Supported ECDHE Cipher Suits

| SSL Cipher | Key Exchange Algorithm | Data Encryption | Message Integrity |
|-------------------------------------|------------------------|------------------|-------------------|
| ECDHE-RSA-WITH-AES-256-GCM-SHA384 | ECDHE RSA | 256-bit AES/GCM | SHA 384 hash |
| ECDHE-RSA-WITH-AES-256-CBC-SHA384 | ECDHE RSA | 256-bit AES/CBC | SHA 384 hash |
| ECDHE-RSA-WITH-AES-256-CBC-SHA | ECDHE RSA | 256-bit AES/CBC | SHA hash |
| ECDHE-RSA-WITH-AES-3DES-EDE-CBC-SHA | ECDHE RSA | 3DES AES/EDE/CBC | SHA hash |
| ECDHE-RSA-WITH-AES-128-GCM-SHA256 | ECDHE RSA | 128-bit AES/GCM | SHA 256 hash |
| ECDHE-RSA-WITH-AES-128-CBC-SHA256 | ECDHE RSA | 128-bit AES/CBC | SHA 256 hash |
| ECDHE-RSA-WITH-AES-128-CBC-SHA | ECDHE RSA | 128-bit AES/CBC | SHA hash |

RELATED DOCUMENTATION

[Creating SSL Forward Proxy Profiles | 647](#)


[Creating Firewall Policies | 478](#)

Creating SSL Forward Proxy Profiles

Before You Begin

- Read the [SSL Forward Proxy Overview](#) topic.
- Review the [SSL Forward Proxy Profile](#) main page for an understanding of your current data set. See ["SSL Forward Proxy Profile Main Page Fields"](#) on [page 653](#) for field descriptions.

Use the *SSL Forward Proxy Profile* page to view and manage *SSL proxy* profile details. *SSL proxy* is enabled as an application service within a security policy. You specify the traffic that you want the *SSL proxy* enabled on as match criteria and then specify the *SSL proxy profile* to be applied to the traffic.

 **NOTE:** Starting in Junos Space Security Director Release 21.2, *SSL Forward Proxy* is supported for Logical Systems (LSYS) devices also.

To create an *SSL forward proxy* profile:

1. Select **Configure > SSL Profiles> SSL Proxy Profiles**.
The *SSL Proxy Profiles* page appears.
2. Select **Forward Proxy** from the Create list.
3. Complete the configuration according to the guidelines provided in [Table 202 on page 647](#).
4. Click **OK**.

An *SSL forward proxy* profile is created that can be assigned to a firewall policy for advanced security options.


 **NOTE:** If none of the services (AppFW, IDP, or AppTrack) are configured, then *SSL proxy* services are bypassed even if an *SSL proxy* profile is attached to a firewall policy.

Table 202: SSL Forward Proxy Profile Settings

| Setting | Guideline |
|----------------------------|---|
| <i>General Information</i> | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. |

Table 202: SSL Forward Proxy Profile Settings *(Continued)*

| Setting | Guideline |
|------------------|---|
| Description | Enter a description for the SSL forward proxy profile; maximum length is 1024 characters. |
| Preferred Cipher | <p>Select a preferred cipher. Ciphers are divided into the following categories depending on their key strength.</p> <ul style="list-style-type: none"> • Custom—Configure custom cipher suite and order of preference. • Medium—Use ciphers with key strength of 128 bits or greater. • Strong—Use ciphers with key strength of 168 bits or greater. • Weak—Use ciphers with key strength of 40 bits or greater. |

Table 202: SSL Forward Proxy Profile Settings *(Continued)*

| Setting | Guideline |
|----------------|--|
| Custom Ciphers | <p>Select the set of ciphers the SSH server can use to perform encryption and decryption functions. If this option is not configured, the server accepts any supported suite that is available.</p> <p>The available custom ciphers are:</p> <ul style="list-style-type: none"> • <code>rsa-with-RC4-128-md5</code>—RSA, 128-bit RC4, MD5 hash • <code>rsa-with-RC4-128-sha</code>—RSA, 128-bit RC4, SHA hash • <code>rsa-with-des-cbc-sha</code>—RSA, DES/CBC, SHA hash • <code>rsa-with-3DES-ede-cbc-sha</code>—RSA, 3DES EDE/CBC, SHA hash • <code>rsa-with-aes-128-cbc-sha</code>—RSA, 128-bit AES/CBC, SHA hash • <code>rsa-with-aes-256-cbc-sha</code>—RSA, 256 bit AES/CBC, SHA hash • <code>rsa-export-with-rc4-40-md5</code>—RSA-export, 40 bit RC4, MD5 hash • <code>rsa-export-with-des40-cbc-sha</code>—RSA-export, 40 bit DES/CBC, SHA hash • <code>rsa-export1024-with-des-cbc-sha</code>—RSA 1024 bit export, DES/CBC, SHA hash • <code>rsa-export1024-with-rc4-56-md5</code>—RSA 1024 bit export, 56 bit RC4, MD5 hash • <code>rsa-export1024-with-rc4-56-sha</code>—RSA 1024 bit export, 56 bit RC4, SHA hash • <code>rsa-with-aes-256-gcm-sha384</code>—RSA, 256 bit AES/GCM, SHA384 hash • <code>rsa-with-aes-256-cbc-sha256</code>—RSA, 256 bit AES/CBC, SHA256 hash • <code>rsa-with-aes-128-gcm-sha256</code>—RSA, 128 bit AES/GCM, SHA256 hash • <code>rsa-with-aes-128-cbc-sha256</code>—RSA, 256 bit AES/CBC, SHA256 hash • <code>ecdhe-rsa-with-aes-256-gcm-sha384</code>—ECDHE, RSA, 256 bit AES/GCM, SHA384 hash • <code>ecdhe-rsa-with-aes-256-cbc-sha384</code>—ECDHE, RSA, 256 bit AES/CBC, SHA384 hash • <code>ecdhe-rsa-with-aes-256-cbc-sha</code>—ECDHE, RSA, 256 bit AES/CBC, SHA hash • <code>ecdhe-rsa-with-aes-3des-ede-cbc-sha</code>—ECDHE, RSA, 3DES, EDE/CBC, SHA hash |

Table 202: SSL Forward Proxy Profile Settings (*Continued*)

| Setting | Guideline |
|-------------------------|--|
| | <ul style="list-style-type: none"> • ecdhe-rsa-with-aes-128-gcm-sha256—ECDHE, RSA, 128 bit AES/GCM, SHA256 hash • ecdhe-rsa-with-aes-128-cbc-sha256—ECDHE, RSA, 128 bit AES/CBC, SHA256 hash • ecdhe-rsa-with-aes-128-cbc-sha—ECDHE, RSA, 128 bit AES/CBC, SHA hash |
| Flow Trace | Select this option to enable flow trace for troubleshooting policy-related issues. |
| Root Certificate | <p>Select or add a <i>root certificate</i>. You can select one or more root certificates. In a public key infrastructure (PKI) hierarchy, the root CA is at the top of the trust path. The root CA identifies the server certificate as a trusted certificate.</p> <p>Click Add for a new root certificate. On the Add page, select a device and the trusted CAs to associate to the root certificate.</p> <p>NOTE: To view the SSL certificates in Security Director, select Devices>Security Devices, choose the relevant device, right-click the device or select Refresh Certificate from the More menu. Once the refresh certificate job is completed, you can see SSL certificates. Make sure the device configuration is in sync with Security Director. If the device configuration is out of sync in security devices, resynchronize network and then proceed with refresh certificates.</p> |
| Exempted Address | <p>Select addresses to create allowlists that bypass SSL forward proxy processing.</p> <p>Because SSL encryption and decryption are complicated and expensive procedures, network administrators can selectively bypass SSL proxy processing for some sessions. Such sessions mostly include connections and transactions with trusted servers or domains with which network administrators are very familiar. There are also legal requirements to exempt financial and banking sites. Such exemptions are achieved by configuring the IP addresses or domain names of the servers under allowlists.</p> |
| Exempted URL Categories | <p>Starting in Junos Space Security Director Release 16.2, you can select URL categories to create allowlists that bypass SSL forward proxy processing.</p> <p>These URL categories are exempted during SSL inspection. Only the predefined URL categories can be selected for the exemption.</p> <p>NOTE: Ensure to filter with Enhanced when you select exempted URL categories in the SSL profile.</p> |

Table 202: SSL Forward Proxy Profile Settings *(Continued)*

| Setting | Guideline |
|-------------------------------|---|
| <i>Actions</i> | |
| Server Authentication Failure | <p>Select this option to ignore server authentication completely.</p> <p>In this case, SSL forward proxy ignores errors encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry).</p> <p>We do not recommend this option for authentication, because configuring it results in websites not being authenticated at all. However, you can use this option to effectively identify the root cause for dropped SSL sessions.</p> |
| Session Resumption | <p>Select the Disable Session Resumption option if you do not want session resumption.</p> <p>To improve throughput and still maintain an appropriate level of security, SSL session resumption provides a session caching mechanism so that session information, such as the pre-primary secret key and agreed-upon ciphers, can be cached for both the client and server.</p> |
| Log | <p>Select this option to generate logs. You can choose to log all events, warnings, general information, errors, or different sessions (allowlisted, allowed, dropped, or ignored).</p> |

Table 202: SSL Forward Proxy Profile Settings (Continued)

| Setting | Guideline |
|---------------|--|
| Renegotiation | <p>After a session is created and SSL tunnel transport has been established, a change in SSL parameters requires renegotiation. SSL forward proxy supports both secure (RFC 5746) and nonsecure (TLS v1.0 and SSL v3) renegotiation.</p> <p>Select one of the following options if a change in SSL parameters requires renegotiation:</p> <ul style="list-style-type: none"> • None (selected by default) • Allow • Allow-secure • Drop <p>When session resumption is enabled, session renegotiation is useful in the following situations:</p> <ul style="list-style-type: none"> • Cipher keys need to be refreshed after a prolonged SSL session. • Stronger ciphers need to be applied for a more secure connection. |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.2 | Starting in Junos Space Security Director Release 16.2, you can select URL categories to create allowlists that bypass SSL forward proxy processing. |

RELATED DOCUMENTATION

[SSL Forward Proxy Overview](#) | 638

[Creating Firewall Policies](#) | 478

SSL Forward Proxy Profile Main Page Fields

Use the SSL Forward Proxy Profile page to view and manage SSL proxy profile details. SSL proxy is enabled as an application service within a security policy. You specify the traffic that you want the SSL proxy enabled on as match criteria and then specify the SSL proxy profile to be applied to the traffic. You can filter and sort this information to get a better understanding of what you want to view. [Table 203 on page 653](#) describes the fields on this page.

Table 203: SSL Forward Proxy Profile Main Page Fields

| Field | Description |
|-------------------------------|---|
| Name | Unique string of alphanumeric characters, colons, periods, dashes, and underscores; no spaces allowed; 63-character maximum. |
| Preferred Cipher | Ciphers are divided into three categories depending on their key strength. Strong ciphers are 168 bits or greater; medium ciphers are 128 bits or greater; and weak ciphers are 40 bits or greater. The default is custom, which allows you to configure your own cipher suite. |
| Custom Ciphers | Ciphers selected from each of the categories (Strong, Medium, Weak) to form a custom cipher suite. |
| Exempted Address | Addresses that are selected to bypass SSL forward proxy processing. This allows you to create allowlists and avoid the expense and complication of SSL encryption. |
| Server Authentication Failure | This option ignores errors encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry). |
| Session Resumption | This option enables or disables depending on whether you want session resumption (session caching mechanism). |
| Domain | Domain name to which the SSL forward proxy profile is associated. The IP addresses associated with domain names are dynamic and can change at any time. |
| Description | Description for the SSL proxy profile; maximum length is 1024 characters. |

RELATED DOCUMENTATION

[Creating SSL Forward Proxy Profiles | 647](#)

[SSL Forward Proxy Overview | 638](#)

SSL Reverse Proxy Overview

IN THIS SECTION

- [Benefits of Reverse Proxy | 655](#)

A reverse proxy is a common type of proxy server, which is accessible from the public network. Reverse proxies are managed by the web service, and they are accessed by clients from the public internet.

You can configure the SSL reverse proxy to protect your SSL-enabled web servers against client-to-server attacks from malicious clients. This functions by loading the SSL private key of the webserver onto the SRX Series device to protect your web servers against threats from clients that you do not control. For example, if an external user on the internet is trying to access a corporate web server, they initiate the HTTPS connection to the web server. The SSL reverse proxy profile has the private key details and it intercepts the traffic and sends the decrypted payload info to other L7 services enabled in the security policy, for example, IDP for attack detection.


Like forward proxy, reverse proxy requires a profile to be configured at the firewall rule level. In addition, you must also configure server certificates with private keys for reverse proxy. During an SSL handshake, the SSL proxy performs a lookup for a matching server private key in its server private key hash table database. If the lookup is successful, the handshake continues. Otherwise, SSL proxy terminates the hand shake. Reverse proxy does not intercept server certificates. It forwards the actual server certificate/chain as is to the client without modifying it. Intercepting the server certificate occurs only with forward proxy.

[Figure 56 on page 655](#) shows how SSL reverse proxy works on an encrypted payload. When application firewall (AppFW), intrusion prevention system (IPS), or application tracking (AppTrack) is configured, SSL reverse proxy acts as an SSL server terminating the SSL session from the client and a new SSL session is established to the server. The device decrypts and then re-encrypts all SSL reverse proxy traffic. SSL reverse proxy uses the following services:

- SSL-T-SSL terminator on the client side
- SSL-I-SSL initiator on the server side

- Configured AppFW, IPS, or AppTrack services use the decrypted SSL sessions

Figure 56: SSL Reverse Proxy on an Encrypted Payload

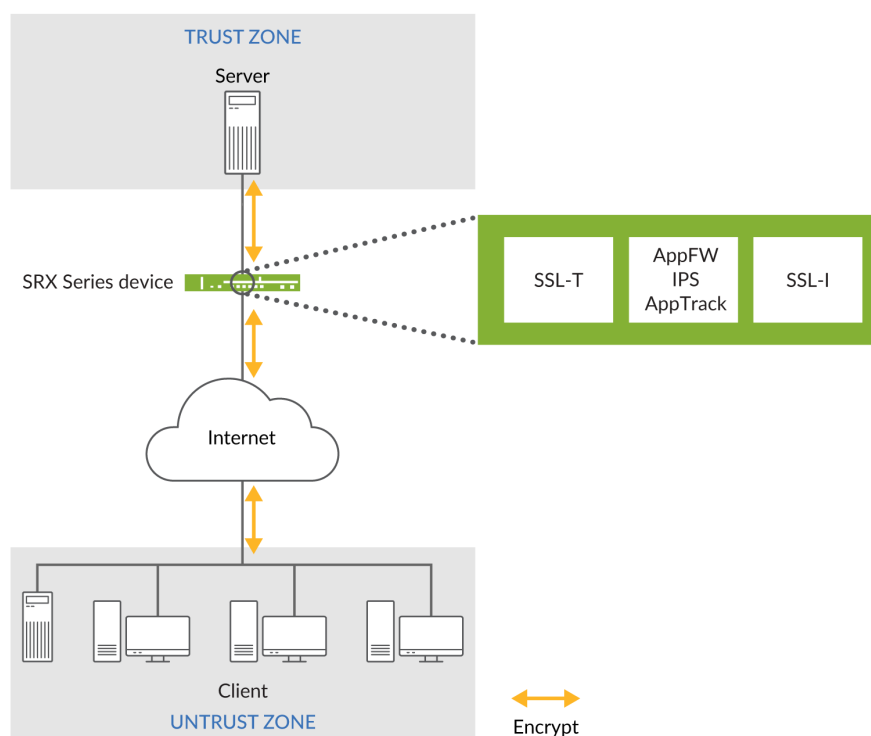

Benefits of Reverse Proxy

- A Reverse proxy can hide the existence and characteristics of origin servers.
- A reverse proxy can distribute the load from incoming requests to several servers, with each server supporting its own application area.

RELATED DOCUMENTATION

[Creating SSL Reverse Proxy Profiles](#) | 656

Creating SSL Reverse Proxy Profiles

Use the SSL Reverse Proxy Profiles page to configure the SSL reverse proxy to protect your SSL-enabled web servers against client-to-server attacks from malicious clients. This functions by loading the SSL private key onto the SRX Series device to protect your clients against threats from web servers that you do not control. For example, if an external user on the internet is trying to access a corporate web server, they initiate the HTTPS connection to the web server. The IPS policy which has the private key of the web server intercepts the traffic, inspects it for attacks, and if no attacks are present, it forwards it onto the destination web server.



NOTE: Starting in Junos Space Security Director Release 21.2, SSL Reverse Proxy is supported for Logical Systems (LSYS) devices also.

To create an SSL reverse proxy profile:

1. Select **Configure > SSL Profiles> SSL Proxy Profiles**.
The SSL Proxy Profiles page appears.
2. Select **Reverse Proxy** from the Create list.
3. Complete the configuration according to the guidelines provide in [Table 204 on page 656](#).
4. Click **OK**.

An SSL reverse proxy profile is created that can be assigned to a firewall policy for advanced security options.

Table 204: Fields on the Create SSL Reverse Proxy Profile Page

| Field | Description |
|----------------------------|---|
| <i>General Information</i> | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. |
| Description | Enter a description for the SSL forward proxy profile; maximum length is 1024 characters. |

Table 204: Fields on the Create SSL Reverse Proxy Profile Page *(Continued)*

| Field | Description |
|------------------|---|
| Preferred Cipher | <p>Select a preferred cipher. Ciphers are divided into the following categories depending on their key strength.</p> <ul style="list-style-type: none"> • Custom—Configure custom cipher suite and order of preference. • Medium—Use ciphers with key strength of 128 bits or greater. • Strong—Use ciphers with key strength of 168 bits or greater. • Weak—Use ciphers with key strength of 40 bits or greater. |

Table 204: Fields on the Create SSL Reverse Proxy Profile Page *(Continued)*

| Field | Description |
|----------------|--|
| Custom Ciphers | <p>Select the set of ciphers the SSH server can use to perform encryption and decryption functions. If this option is not configured, the server accepts any supported suite that is available.</p> <p>The available custom ciphers are:</p> <ul style="list-style-type: none"> • rsa-with-RC4-128-md5—RSA, 128- bit RC4, MD5 hash • rsa-with-RC4-128-sha—RSA, 128-bit RC4, SHA hash • rsa-with-des-cbc-sha—RSA, DES/CBC, SHA hash • rsa-with-3DES-edc-cbc-sha—RSA, 3DES EDE/CBC, SHA hash • rsa-with-aes-128-cbc-sha—RSA, 128-bit AES/CBC, SHA hash • rsa-with-aes-256-cbc-sha—RSA, 256 bit AES/CBC, SHA hash • rsa-export-with-rc4-40-md5—RSA-export, 40 bit RC4, MD5 hash • rsa-export-with-des40-cbc-sha—RSA-export, 40 bit DES/CBC, SHA hash • rsa-export1024-with-des-cbc-sha—RSA 1024 bit export, DES/CBC, SHA hash • rsa-export1024-with-rc4-56-md5—RSA 1024 bit export, 56 bit RC4, MD5 hash • rsa-export1024-with-rc4-56-sha—RSA 1024 bit export, 56 bit RC4, SHA hash • rsa-with-aes-256-gcm-sha384—RSA, 256 bit AES/GCM, SHA384 hash • rsa-with-aes-256-cbc-sha256—RSA, 256 bit AES/CBC, SHA256 hash • rsa-with-aes-128-gcm-sha256—RSA, 128 bit AES/GCM, SHA256 hash • rsa-with-aes-128-cbc-sha256—RSA, 256 bit AES/CBC, SHA256 hash • ecdhe-rsa-with-aes-256-gcm-sha384—ECDHE, RSA, 256 bit AES/GCM, SHA384 hash • ecdhe-rsa-with-aes-256-cbc-sha384—ECDHE, RSA, 256 bit AES/CBC, SHA384 hash • ecdhe-rsa-with-aes-256-cbc-sha—ECDHE, RSA, 256 bit AES/CBC, SHA hash • ecdhe-rsa-with-aes-3des-edc-cbc-sha—ECDHE, RSA, 3DES, EDE/CBC, SHA hash |

Table 204: Fields on the Create SSL Reverse Proxy Profile Page *(Continued)*

| Field | Description |
|-------------------------|---|
| | <ul style="list-style-type: none"> • ecdhe-rsa-with-aes-128-gcm-sha256—ECDHE, RSA, 128 bit AES/GCM, SHA256 hash • ecdhe-rsa-with-aes-128-cbc-sha256—ECDHE, RSA, 128 bit AES/CBC, SHA256 hash • ecdhe-rsa-with-aes-128-cbc-sha—ECDHE, RSA, 128 bit AES/CBC, SHA hash |
| Flow Trace | Select this option to enable flow trace for troubleshooting policy-related issues. |
| Server Certificate | <p>Specify the server certificate identifier.</p> <p>Select the required SRX Series device from the list and assign the server certificate identifier.</p> <p>NOTE: To view the SSL certificates in Security Director, select Devices>Security Devices, choose the relevant device, right-click the device or select Refresh Certificate from the More menu. Once the refresh certificate job is completed, you can see SSL certificates. Make sure the device configuration is in sync with Security Director. If the device configuration is out of sync in security devices, resynchronize network and then proceed with refresh certificates.</p> |
| Exempted Address | <p>Select addresses to create allowlists that bypass SSL forward proxy processing.</p> <p>Because SSL encryption and decryption are complicated and expensive procedures, network administrators can selectively bypass SSL proxy processing for some sessions. Such sessions mostly include connections and transactions with trusted servers or domains with which network administrators are very familiar. There are also legal requirements to exempt financial and banking sites. Such exemptions are achieved by configuring the IP addresses or domain names of the servers under allowlists.</p> |
| Exempted URL Categories | <p>Starting in Junos Space Security Director Release 16.2, you can select URL categories to create allowlists that bypass SSL forward proxy processing.</p> <p>These URL categories are exempted during SSL inspection. Only the predefined URL categories can be selected for the exemption.</p> |
| <i>Actions</i> | |

Table 204: Fields on the Create SSL Reverse Proxy Profile Page (Continued)

| Field | Description |
|--------------------|--|
| Session Resumption | <p>Select the Disable Session Resumption option if you do not want session resumption.</p> <p>To improve throughput and still maintain an appropriate level of security, SSL session resumption provides a session caching mechanism so that session information, such as the pre-primary secret key and agreed-upon ciphers, can be cached for both the client and server.</p> |
| Log | Select this option to generate logs. You can choose to log all events, warnings, general information, errors, or different sessions (allowlisted, allowed, dropped, or ignored). |
| Renegotiation | <p>After a session is created and SSL tunnel transport has been established, a change in SSL parameters requires renegotiation. SSL forward proxy supports both secure (RFC 5746) and nonsecure (TLS v1.0 and SSL v3) renegotiation.</p> <p>Select one of the following options if a change in SSL parameters requires renegotiation:</p> <ul style="list-style-type: none"> • None (selected by default) • Allow • Allow-secure • Drop <p>When session resumption is enabled, session renegotiation is useful in the following situations:</p> <ul style="list-style-type: none"> • Cipher keys need to be refreshed after a prolonged SSL session. • Stronger ciphers need to be applied for a more secure connection. |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.2 | Starting in Junos Space Security Director Release 16.2, you can select URL categories to create allowlists that bypass SSL forward proxy processing. |

RELATED DOCUMENTATION

[SSL Forward Proxy Overview | 638](#)

[Creating SSL Forward Proxy Profiles | 647](#)

User Firewall Management-Active Directory

IN THIS CHAPTER

- [About the Active Directory Profile Page | 662](#)
- [Creating Active Directory Profiles | 664](#)
- [Deploying the Active Directory Profile to SRX Series Devices | 669](#)
- [Editing and Deleting Active Directory Profiles | 671](#)

About the Active Directory Profile Page

IN THIS SECTION

- [Tasks You can Perform | 662](#)
- [Field Descriptions | 663](#)

To access this page, click [Configure > User Firewall Management > Active Directory](#).

Starting in Junos Space Security Director Release 16.1, you can use the Active Directory Profile page to configure the Active Directory profile as an authentication server.

Tasks You can Perform

You can perform the following tasks from this page:

- Create an Active Directory profile. See ["Creating Active Directory Profiles" on page 664](#).
- Modify or delete an existing Active Directory profile. See ["Editing and Deleting Active Directory Profiles" on page 671](#).

- Deploy the Active Directory profile to SRX Series devices. See ["Deploying the Active Directory Profile to SRX Series Devices" on page 669](#).

Field Descriptions

[Table 205 on page 663](#) provides guidelines on using the fields on the Active Directory page.

Table 205: Fields on the Active Directory Profile Page

| Field | Description |
|--------------------------|--|
| Name | Specifies the name of the Active Directory. |
| Description | Describes the Active Directory. |
| Domain | Specifies the domain for which the status is displayed. Example: Global |
| Devices | Lists the assigned devices for a directory. Example: SRX |
| Active Directory Domains | Specifies the domains of the Active Directory. Example: domain.net |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.1 | Starting in Junos Space Security Director Release 16.1, you can use the Active Directory Profile page to configure the Active Directory profile as an authentication server. |

RELATED DOCUMENTATION

[Creating Active Directory Profiles | 664](#)

[Editing and Deleting Active Directory Profiles | 671](#)

Creating Active Directory Profiles

Use the Create Active Directory Profile page to configure the IP address-to-user mapping information and the user-to-group mapping information to access the LDAP server.

To create an Active Directory profile:

1. Select **Configure > User Firewall Management > Active Directory**.
The Active Directory Profile page appears.
2. Click the + icon.
3. Complete the configuration by using the guidelines in [Table 206 on page 664](#).
4. Click **Finish**.
A Summary page providing a preview of the complete configuration appears.
5. Click **OK** to complete the configuration or **Back** to make any modifications.

Table 206: Fields on the Create Active Directory Profile Page

| Field | Description |
|----------------------------|---|
| <i>General Information</i> | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. Maximum length is 255 characters. |
| Description | Enter a description for the Active Directory profile; maximum length is 255 characters. |
| On Demand Probe | <p>Enable the manual on-demand probing of a domain PC as an alternate method for the SRX Series device to retrieve address-to-user mapping information.</p> <p>By default, the manual on-demand probing is not enabled.</p> |
| <i>Timeout</i> | |

Table 206: Fields on the Create Active Directory Profile Page (*Continued*)

| Field | Description |
|------------------------------|---|
| Authentication Entry Timeout | <p>Set the timeout to 0 to avoid having the user's entry being removed from the authentication table after the timeout.</p> <p>Note that when a user is no longer active, a timer is started for that user's entry in the Active Directory authentication table. When the time is up, the user's entry is removed from the table. Entries in the table remain active as long as there are sessions associated with the entry.</p> <p>The default authentication entry timeout is thirty minutes. To disable timeout, set the interval to zero. The range is 10 through 1440 minutes.</p> |
| WMI Timeout | <p>Configure the number of seconds that the domain PC has to respond to the SRX Series device's query through Windows Management Instrumentation (WMI) or Distributed Component Object Module (DCOM).</p> <p>If no response is received from the domain PC within the <code>wmi-timeoutinterval</code>, the probe fails and the system either creates an invalid authentication entry or updates the existing authentication entry as invalid. If an authentication table entry already exists for the probed IP address, and no response is received from the domain PC within the <code>wmi-timeout</code> interval, the probe fails and that entry is deleted from the table.</p> <p>The range is 3 through 120 seconds.</p> |
| <i>Filter</i> | |

Table 206: Fields on the Create Active Directory Profile Page (*Continued*)

| Field | Description |
|----------------------------|--|
| Filter | <p>Set the range of IP addresses that must be monitored or not monitored.</p> <ul style="list-style-type: none"> • Include—Specify to include IP addresses from the Available column. • Exclude—Specify to exclude IP addresses from the Available column. <p>Click Add New Address to create a new IP address and add it as either include or exclude from monitoring.</p> |
| <i>Add Domain Settings</i> | |
| Domain Name | <p>Enter the name of the domain; the length of the name ranges from 1 through 64 characters. The SRX Series device can have the integrated user firewall configured in a maximum of two domains.</p> <p>Example: example.net</p> |
| Description | <p>Enter a description for the LDAP server domain; maximum length is 255 characters.</p> |
| Username | <p>Enter the Active Directory account name. The range is 1 through 64 characters.</p> <p>Example: administrator</p> |
| Password | <p>Enter the password of the Active Directory account. The range is 1 through 128 characters.</p> <p>Example: \$ABC123</p> |

Table 206: Fields on the Create Active Directory Profile Page (*Continued*)

| Field | Description |
|---------------------------------|---|
| Domain Controller(s) | <p>Click the plus(+) sign to create new domain controllers.</p> <ul style="list-style-type: none"> Domain Controller Name— Name can range from 1 through 64 characters. A maximum of 10 domain controllers can be configured. IP Address—IP address of the domain controller. |
| <i>User Group Mapping(LDAP)</i> | |
| IP Address | <p>Specify the IP address of the LDAP server. If no address is specified, the system uses one of the configured Active Directory domain controllers.</p> <p>Example: 192.0.2.15</p> |
| Port | <p>Specify the port number of the LDAP server. If no port number is specified, the system uses port 389 for plaintext or port 636 for encrypted text.</p> |
| Base DN | <p>Enter the LDAP base distinguished name (DN).</p> <p>Example: DC=example,DC=net</p> |
| Username | <p>Enter the username of the LDAP account. If no username is specified, the system will use the configured domain controller's username.</p> <p>Example: administrator</p> |
| Password | <p>Enter the password for the account. If no password is specified, the system uses the configured domain controller's password.</p> <p>Example: xxxxx</p> |

Table 206: Fields on the Create Active Directory Profile Page (*Continued*)

| Field | Description |
|-----------------------------|--|
| Use SSL | Enable Secure Sockets Layer (SSL) to ensure secure transmission with the LDAP server. Disabled by default, then the password is sent in plaintext. |
| Authentication Algorithm | Specify the algorithm used while the SRX Series device communicates with the LDAP server. By default simple is selected to configure simple(plaintext) authentication mode. |
| <i>IP-User Mapping</i> | |
| Discovery Method | <p>Enable the method of discovering IP address-to-user mappings.</p> <ul style="list-style-type: none"> WMI—Windows Management Instrumentation (WMI) is the discovery method used to access the domain controller. |
| Event Log Scanning Interval | Enter the scanning interval at which the SRX Series device scans the event log on the domain controller. The range is 5 through 60 seconds. |
| Initial Event Log TimeSpan | <p>Enter the time of the earliest event log on the domain controller that the SRX Series device will initially scan. This scan applies to the initial deployment only. After WMIC and the user identification start working, the SRX Series device scans only the latest event log.</p> <p>The range is 1 through 168 hours.</p> |
| <i>Assign Device</i> | |

Table 206: Fields on the Create Active Directory Profile Page *(Continued)*

| Field | Description |
|--------|--|
| Device | <p>Select these devices from the Available column and move them to the Selected column.</p> <p>You can also search for the devices in the search field in both the Available and Selected columns. You can search these devices by entering the device name, device IP address, or device tag.</p> |

RELATED DOCUMENTATION

[About the Active Directory Profile Page | 662](#)

[Editing and Deleting Active Directory Profiles | 671](#)

[Deploying the Active Directory Profile to SRX Series Devices | 669](#)

Deploying the Active Directory Profile to SRX Series Devices

To deploy the active directory profile to SRX Series devices:

1. Select **Configure > User Firewall Management > Active Directory**.

The Active Directory Profile page appears.

2. Select the active directory profile that you want to deploy, and click **Update**.

The Update Active Directory Profile page appears. See [Table 207 on page 670](#) to view more details.

3. Select the required SRX Series device to deploy the active directory profile, and click **Update**.

A new job is created.

4. Click the job ID to see the update status.

The Job Management page appears showing the state of the updated job. You can also view the deployed active directory profile information under the Parameters column.

Table 207: Update Active Directory Profile Page Fields

| Column Name | Description |
|----------------------|---|
| Device Name | Name of the SRX Series device. |
| Configuration | The active directory profile configuration can be viewed in either CLI or XML by clicking View . |
| Configuration Status | <p>Configuration status of the device. The different configuration states for a device are as follows:</p> <ul style="list-style-type: none"> • Synchronizing—During the device update, the status is shown as Synchronizing. • Sync Failed—The synchronization operation failed. • In Sync—The synchronization operation completed successfully; Security Director and the device are synchronized. |
| Connection Status | Connection status of the device. The status shows either UP or Down. |
| Domain | Domain of the user. |
| Device IP | IP address of the device. |
| Platform | Platform of the device. For example, SRX Series, vSRX. |
| OS Version | Junos OS version running on the device. |

RELATED DOCUMENTATION
[About the Active Directory Profile Page | 662](#)
[Creating Active Directory Profiles | 664](#)
[Editing and Deleting Active Directory Profiles | 671](#)

Editing and Deleting Active Directory Profiles

IN THIS SECTION

- [Editing Active Directory Profiles | 671](#)
- [Deleting Active Directory Profiles | 671](#)

You can edit and delete Active Directory profiles. This topic contains the following sections:

Editing Active Directory Profiles

To edit an Active Directory profile:

1. Select **Configure > User Firewall Management > Active Directory**.
The Active Directory Profile page appears listing the existing Active Directory profiles.
2. Select the Active Directory profile that you want to edit, right-click and select **Edit Active Directory Profile**, or click the pencil icon.
The Edit Active Directory Profile page appears, showing the same options as when creating a new Active Directory profile.
3. Click **Finish** after completing editing.

Deleting Active Directory Profiles

To delete an Active Directory profile from all devices:

1. Select **Configure > User Firewall Management > Active Directory**.
The Active Directory Profile page appears listing the existing Active Directory profiles.
2. Select the active directory profile that you want to delete, right-click and select **Delete Active Directory Profile**, or click the delete icon.
This deletes the selected active directory profile from all the SRX Series devices. An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

You can unassign a device and delete the Active Directory profile from it.

To unassign a device:

1. Select **Configure > User Firewall Management > Active Directory**.
The Active Directory Profile page appears listing the existing access profiles.

2. Select the active directory profile that you want to edit, right-click and select **Edit Active Directory Profile**, or click the pencil icon.

The Edit Active Directory Profile page appears, showing the same options as when creating a new access profile.

3. Go to the Assign Device section.
4. Move the required device(s) listed under the Selected column to the Available column.
5. Click **Finish**.

The active directory profile configuration is deleted from the selected device(s).

RELATED DOCUMENTATION

| [Creating Active Directory Profiles](#) | 664

User Firewall Management-Access Profile

IN THIS CHAPTER

- [Access Profile Overview | 673](#)
- [About the Access Profile Page | 674](#)
- [Creating Access Profiles | 676](#)
- [Deploying the Access Profile to SRX Series Devices | 683](#)
- [Editing and Deleting Access Profiles | 684](#)

Access Profile Overview

Access profiles enable access configuration on the network—this consists of authentication configuration and accounting configuration. Security Director supports Remote Authentication Dial In User Service (RADIUS), Lightweight Directory Access Protocol (LDAP), and local authentication service as authentication methods. Authentication prevents unauthorized devices and users from gaining access to your network. Accounting servers collect and send information used for billing, auditing, and reporting.

SRX Series devices use the LDAP service to get user and group information necessary to implement the integrated user firewall feature. The SRX Series device acts as an LDAP client communicating with an LDAP server. In a common implementation scenario, the domain controller acts as the LDAP server. The LDAP module in the SRX Series device, by default, queries the Active Directory in the domain controller.

The SRX Series device downloads user and group lists from the LDAP server. The device also queries the LDAP server for user and group updates. The SRX Series device downloads a first-level, user-to-group mapping relationship and then calculates a full user-to-group mapping.

By default, the LDAP authentication method uses simple authentication. The client's username and password are sent to the LDAP server in plaintext. Keep in mind that the password is clear and can be read from the network.

To avoid exposing the password, you can use simple authentication within an encrypted channel, namely Secure Sockets layer (SSL), as long as the LDAP server supports LDAP over SSL. After enabling SSL, the data sent from the LDAP server to the SRX Series device is encrypted.

The LDAP server's username, password, IP address, and port are all optional, but they can be configured.

- If the username and password are not configured, the system uses the configured domain controller's username and password.
- If the LDAP server's IP address is not configured, the system uses the address of one of the configured Active Directory domain controllers.
- If the port is not configured, the system uses port 389 for plaintext or port 636 for encrypted text.

RADIUS is a networking protocol that provides centralized authentication, authorization, and accounting (AAA) management for computers to connect and use a network service. By default, RADIUS servers are used for both accounting and authentication. From Security Director, you can create and manage RADIUS profiles that configure RADIUS server settings.

With local authentication, you can configure a password for each user allowed to log in to the controller or switch.

RELATED DOCUMENTATION

[About the Access Profile Page | 674](#)

[Creating Access Profiles | 676](#)

[Deploying the Access Profile to SRX Series Devices | 683](#)

[Editing and Deleting Access Profiles | 684](#)

About the Access Profile Page

IN THIS SECTION

● [Tasks You Can Perform | 675](#)

● [Field Descriptions | 675](#)

To access this page, click **Configure > User Firewall Management > Access Profile**.

You can use the Access Profile page to configure the Lightweight Directory Access Protocol (LDAP) for SRX Series devices that use the integrated user firewall feature. The SRX Series device acts as an LDAP client communicating with an LDAP server.

Starting in Junos Space Security Director Release 20.3, RADIUS server and Local Authentication service are also supported.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an access profile. See ["Creating Access Profiles" on page 676](#).
- Modify or delete an existing access profile. See ["Editing and Deleting Access Profiles" on page 684](#).
- Deploy the access profile to SRX Series devices. See ["Deploying the Access Profile to SRX Series Devices" on page 683](#).

Field Descriptions

[Table 208 on page 675](#) provides guidelines on using the fields on the Access Profile page.

Table 208: Access Profile Main Page Fields

| Field | Description |
|-------------------------|--|
| Name | Name of the access profile. |
| Authentication Order | Shows the order in which Junos OS tries different authentication methods when verifying that a client can access the devices. |
| Authentication Order 2 | Shows the next authentication method if the authentication method included in the authentication order option is not available, or if the authentication is available but returns a reject response. |
| Description | Describes the access profile. |
| Local Users | Specifies the IP address of the local users. |
| RADIUS Server (Address) | Specifies the IP address of the RADIUS authentication server. |
| LDAP Server (Address) | Specifies the IP address of the LDAP authentication server. |

Table 208: Access Profile Main Page Fields *(Continued)*

| Field | Description |
|--|---|
| Domain | Specifies the domain for which the status is displayed. |
| Devices | Lists the assigned devices for a profile. |
| LDAP Options (Base Distinguished Name) | Shows the series of basic properties that define the user. For example, in the base distinguished name o=juniper, c=us, where <i>o</i> for organization, and <i>c</i> stands for country. |

RELATED DOCUMENTATION

[Access Profile Overview](#) | 673

[Creating Access Profiles](#) | 676

[Deploying the Access Profile to SRX Series Devices](#) | 683

[Editing and Deleting Access Profiles](#) | 684

Creating Access Profiles

Use the Access Profile page to configure LDAP server, RADIUS server, and local authentication service.

To create access profile:

1. Select **Configure > User Firewall Management > Access Profile**.

The Access Profile page is displayed.

2. Click the + icon.

The Create Access Profile page is displayed.

3. Complete the configuration by using the guidelines in [Table 209 on page 677](#).

4. Click **Finish**.

A Summary page providing a preview of the complete configuration is shown.

5. Click **OK** to complete the configuration or **Back** to make any modifications.

Table 209: Access Profile Configuration Parameters

| Field | Description |
|-----------------------|--|
| Access Profile Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. Maximum length is 255 characters. |
| Description | Enter a description for the access profile; maximum length is 255 characters. |
| Device Type | Select the device type as either Root or Tenant Systems (TSYS). |
| Assign Device | |
| Device | <p>Select these devices from the Available column and move them to the Selected column.</p> <p>You can also search for the devices in the search field in both the Available and Selected columns. You can search these devices by entering the device name, device IP address, or device tag.</p> |
| Authentication | |

Table 209: Access Profile Configuration Parameters *(Continued)*

| Field | Description |
|-------|---|
| Local | <p>Select Local to configure local authentication services.</p> <p>Select an address pool for allocation to users.</p> <p>An address pool is a set of Internet Protocol (IP) addresses available for allocation to users, such as in host configurations with the DHCP. An address-assignment pool supports IPv4 address. You can create centralized IPv4 address pools independent of the client applications that use the pools.</p> <p>To create an address pool:</p> <ol style="list-style-type: none"> 1. Click Create Address Pool. <p>The Create Address Pool page is displayed.</p> 2. Enter the following details: <ul style="list-style-type: none"> • Pool Name—Enter the name of the address pool. • Network Address—Enter the network address used by the address pool. • Primary DNS Server—Enter the primary DNS IP address. • Secondary DNS Server—Enter the secondary DNS IP address. • Primary WINS Server—Enter the primary Windows IP address. • Secondary WINS Server—Enter the secondary Windows IP address. <p>Click the + icon to configure a named range of IPv4 addresses, used within an address-assignment pool. Enter the lower and upper limit of an address range.</p> <p>To create a new local authentication user:</p> <ol style="list-style-type: none"> 1. Click +. <p>The Create Local Authentication User page appears.</p> 2. Enter the following details: <ul style="list-style-type: none"> • User Name—Enter the user name of the user requesting access. • Password—Enter the user password. |

Table 209: Access Profile Configuration Parameters *(Continued)*

| Field | Description |
|-------|--|
| | <ul style="list-style-type: none">• XAUTH IP Address—Enter the IPv4 address for the client.• Group—Enter the group name to store several user accounts together. <p>3. Click OK to save changes.</p> <p>To edit, select the local authentication user configuration and click the pencil icon.</p> <p>To delete, select the local authentication user configuration and click the delete icon.</p> |

Table 209: Access Profile Configuration Parameters *(Continued)*

| Field | Description |
|--------|---|
| RADIUS | <p>Select RADIUS to configure RADIUS authentication services.</p> <p>To create a new RADIUS server:</p> <ol style="list-style-type: none"> Click +. <p>The Create RADIUS Server page appears.</p> Enter the following details: <ul style="list-style-type: none"> Address—Enter the IPv4 address of the RADIUS server. Secret—Enter the secret password to access the RADIUS server. Port—Enter the port number on which to contact the RADIUS server. <p>Range is 1 through 65535. Default is 1812.</p> Retry—Enter the number of retries that a device can attempt to contact a RADIUS server. <p>Range is 1 through 100 seconds.</p> Routing Instance—Enter the routing instance name. Source Address—Enter a source IP address configured on one of the device's interfaces. Timeout—Enter the amount of time that the local device waits to receive a response from a RADIUS authentication server. <p>Range is 1 through 1000 seconds.</p> Click OK to save changes. <p>To edit, select the RADIUS server configuration and click the pencil icon.</p> <p>To delete, select the RADIUS server configuration and click the delete icon.</p> |

Table 209: Access Profile Configuration Parameters *(Continued)*

| Field | Description |
|-------------------------|--|
| LDAP | <p>Select LDAP to configure LDAP authentication services.</p> <p>To create a new LDAP server:</p> <ol style="list-style-type: none"> Click +. <p>The Create LDAP Server page appears.</p> <ol style="list-style-type: none"> Enter the following details: <ul style="list-style-type: none"> Address—Enter the IPv4 address of the LDAP server. Port—Enter the port number on which to contact the LDAP server. Range is 1 through 65535. Default is 389. Retry—Enter the number of retries that a device can attempt to contact an LDAP server. Range is 1 through 10 seconds. Routing Instance—Enter the routing instance name. Source Address—Enter a source IP address configured on one of the device's interfaces. Timeout—Enter the amount of time that the local device waits to receive a response from an LDAP authentication server. Range is 3 through 90. Click OK to save changes. <p>To edit, select the LDAP server configuration and click the pencil icon.</p> <p>To delete, select the LDAP server configuration and click the delete icon.</p> |
| LDAP Options | |
| Base Distinguished Name | Specify the base distinguished name that defines the user. |

Table 209: Access Profile Configuration Parameters *(Continued)*

| Field | Description |
|-----------------------------|--|
| Revert Interval | Specify the amount of time that elapses before the primary server is contacted if a backup server is being used. |
| LDAP Option Type | <p>Select assemble or search.</p> <p>Assemble specifies that a user's LDAP distinguished name (DN) is assembled using a common name identifier, the username, and base distinguished name.</p> <p>Search specifies that a search is used to get a user's LDAP distinguished name (DN). The search is performed based on the search filter and the part typed in by the user during authentication.</p> |
| <i>Authentication Order</i> | |
| Order 1 | <p>Configure the order in which the different user authentication methods are tried when a user attempts to log in. For each login attempt, the method for authentication starts with the first one, until the password matches.</p> <p>The method can be one or more of the following:</p> <ul style="list-style-type: none"> • NONE—No authentication for the specified user. • Local—Use local authentication services. • LDAP—The SRX Series device uses this protocol to get user and group information necessary to implement the integrated user firewall feature. • Radius—Use RADIUS authentication services. <p>If RADIUS servers fail to respond or return a reject response, try password authentication, because it is explicitly configured in the authentication order.</p> |
| Order 2 | Configure the next authentication method if the authentication method included in the authentication order option is not available, or if the authentication is available but returns a reject response. |

RELATED DOCUMENTATION

[Access Profile Overview](#) | 673

[About the Access Profile Page | 674](#)[Deploying the Access Profile to SRX Series Devices | 683](#)[Editing and Deleting Access Profiles | 684](#)

Deploying the Access Profile to SRX Series Devices

To deploy the access profile to SRX Series devices:

1. Select **Configure > User Firewall Management > Access Profile**.

The Access Profile page appears.

2. Select the access profile that you want to deploy, and click **Update**.

The Update Access Profile page appears. See [Table 210 on page 683](#) for more information.

3. Select the required SRX Series device to deploy the access profile, and click **Update**.

A new job is created.

4. Click the job ID to see the update status.

The Job Management page appears showing the state of the updated job. You can also view the deployed access profile information under the Parameters column.

Table 210: Update Access Profile Page Fields

| Column Name | Description |
|----------------------|--|
| Device Name | Name of the SRX Series device. |
| Configuration | The access profile configuration can be viewed in either CLI or XML by clicking View . |
| Configuration Status | Configuration status of the device. The different configuration states for a device are as follows: <ul style="list-style-type: none">• Synchronizing—During the device update, the status is shown as Synchronizing.• Sync Failed—The synchronization operation failed.• In Sync—The synchronization operation completed successfully; Security Director and the device are synchronized. |
| Connection Status | Connection status of the device. The status shows either UP or Down. |

Table 210: Update Access Profile Page Fields *(Continued)*

| Column Name | Description |
|-------------|--|
| Domain | Domain of the user. |
| Device IP | IP address of the device. |
| Platform | Platform of the device. For example, SRX Series, vSRX. |
| OS Version | Junos OS version running on the device. |

RELATED DOCUMENTATION

[Access Profile Overview | 673](#)

[About the Access Profile Page | 674](#)

[Creating Access Profiles | 676](#)

[Editing and Deleting Access Profiles | 684](#)

Editing and Deleting Access Profiles

IN THIS SECTION

● [Editing Access Profiles | 684](#)

● [Deleting Access Profiles | 685](#)

You can edit and delete access profiles. This topic contains the following sections:

Editing Access Profiles

To edit an access profile:

1. Select **Configure > User Firewall Management > Access Profile**.

The Access Profile page appears listing the existing access profiles.

2. Select the access profile that you want to edit, right-click and select **Edit Access Profile**, or click the pencil icon.

The Edit Access Profile page appears, showing the same options as when creating a new access profile.

3. Click **Finish** after completing editing.

Deleting Access Profiles

To delete an access profile from all devices:

1. Select **Configure > User Firewall Management > Access Profile**.

The Access Profile page appears listing the existing access profiles.

2. Select the access profile that you want to delete, right-click and select **Delete Access Profile**, or click the delete icon.

This deletes the selected access profile from all the SRX Series devices. An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete your selection.

To delete an access profile from selected devices:

1. Select **Configure > User Firewall Management > Access Profile**.

The Access Profile page appears listing the existing access profiles.

2. Select the access profile that you want to edit, right-click and select **Edit Access Profile**, or click the pencil icon.

The Edit Access Profile page appears, showing the same options as when creating a new access profile.

3. Go to the Assign Device section.
4. Move the required device(s) listed under the Selected column to the Available column.
5. Click **Finish**.

The access profile configuration is deleted from the selected device(s).

RELATED DOCUMENTATION

[Access Profile Overview](#) | 673

[About the Access Profile Page](#) | 674

[Creating Access Profiles](#) | 676

User Firewall Management-Address Pools

IN THIS CHAPTER

- [About the Address Pool Page | 687](#)
- [Create Address Pool | 688](#)
- [Edit and Delete Address Pool | 689](#)

About the Address Pool Page

IN THIS SECTION

- [Tasks You Can Perform | 687](#)
- [Field Descriptions | 688](#)

To access this page, click **Configure > User Firewall Management > Address Pools**.

An address pool is a set of Internet Protocol (IP) addresses available for allocation to users, such as in host configurations with the DHCP. An address-assignment pool supports IPv4 address. You can create centralized IPv4 address pools independent of the client applications that use the pools.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an address pool. See ["Create Address Pool" on page 688](#).
- Edit and clone an address pool. See ["Edit and Delete Address Pool" on page 689](#).

Field Descriptions

Table 211 on page 688 provides guidelines on using the fields on the Address Pool page.

Table 211: Fields on the Address Pool Page

| Field | Description |
|-----------------|---|
| Name | Specifies the address pool name. |
| Network Address | Specifies the network address. |
| Primary DNS | Specifies the primary DNS IP address. |
| Secondary DNS | Specifies the secondary DNS IP address. |
| Primary WINS | Specifies the primary Windows IP address. |
| Secondary WINS | Specifies the secondary Windows IP address. |
| Address Ranges | Specifies the address range name. |

Create Address Pool

An address pool is a set of Internet Protocol (IP) addresses available for allocation to users, such as in host configurations with the DHCP. An address-assignment pool supports IPv4 address. You can create centralized IPv4 address pools independent of the client applications that use the pools.

To create an address pool:

1. Click the + icon.
The Create Address Pool page is displayed.
2. Configure according to the guidelines in [Table 212 on page 689](#).
3. Click the + icon to configure a named range of IPv4 addresses, used within an address-assignment pool.
4. Enter the lower and upper limit of an address range.

5. Click **OK**.

Table 212: Address Pool Configuration Parameters

| Field | Description |
|-------------------------|---|
| General | |
| Pool Name | Enter the name of the address pool. |
| Network Address | Enter the network address used by the address pool. |
| XAUTH Attributes | |
| Primary DNS Server | Enter the primary DNS IP address. |
| Secondary DNS Server | Enter the secondary DNS IP address. |
| Primary WINS Server | Enter the primary Windows IP address. |
| Secondary WINS Server | Enter the secondary Windows IP address. |

RELATED DOCUMENTATION

| [About the Address Pool Page](#) | **687**

Edit and Delete Address Pool

IN THIS SECTION

- [Edit an Address Pool](#) | **690**
- [Delete an Address Pool](#) | **690**

You can edit and delete an address pool.

Edit an Address Pool

To edit an address pool:

1. Select **Configure > User Firewall Management > Address Pools**.

The Address Pool page is displayed.

2. Select an address pool and click the pencil icon or right-click and select **Edit Address Pool**.

The Edit Address Pool page is displayed.

3. Edit the required fields.

4. Click **OK**.

Delete an Address Pool

To delete an address pool:

1. Select **Configure > User Firewall Management > Address Pools**.

The Address Pool page is displayed.

2. Select an address pool and click the delete icon or right-click and select **Delete Address Pool**.

A pop-up is displayed with a confirmation message.

3. Click **Yes** to delete the address object.

RELATED DOCUMENTATION

| [About the Address Pool Page](#) | 687

User Firewall Management-Identity Management

IN THIS CHAPTER

- [Juniper Identity Management Service Overview | 691](#)
- [About the Identity Management Profile Page | 693](#)
- [Creating Identity Management Profiles | 695](#)
- [Editing, Cloning, and Deleting Identity Management Profiles | 699](#)
- [Updating the Identity Management Profile to SRX Series Devices | 700](#)

Juniper Identity Management Service Overview

IN THIS SECTION

- [Access Token Query | 692](#)
- [Batch or Periodic Query | 692](#)
- [IP Address Query | 693](#)
- [User Mapping Query | 693](#)

Juniper Identity Management Service (JIMS) provides a robust and scalable user identification and IP address mapping implementation which includes endpoint context and machine ID. JIMS collects advanced user identities from different authentication sources for SRX Series devices.

Security Director is used to push the JIMS configuration to SRX Series devices. You can use JIMS to obtain IP address or user mapping and device information. SRX Series devices generate the authentication entries for user firewall.

SRX Series devices communicate with JIMS through HTTP or HTTPS connection. Use HTTP connection for debugging and HTTPS for deployments. SRX Series devices consist of primary and secondary JIMS configurations. These devices must always query the primary JIMS. The secondary JIMS is available as a

fall back option with limited resources. The secondary JIMS must be used when the HTTP GET query or number of queries to the primary JIMS fails. SRX Series devices constantly scrutinize the failed primary JIMS and revert to the primary JIMS, once it is up and running.

When you request a JIMS report, the SRX Series device specifies the timestamp. JIMS forms a HTTPS response from the earliest known report since the requested timestamp. SRX Series devices request for the maximum number of reports to include in the response from JIMS. Along with the requested reports, JIMS always returns a cookie. In the subsequent requests to JIMs, SRX Series devices include cookies instead of timestamp to indicate the same context, same beginning timestamp, and to resume the same response from where it has stopped the previous time.



NOTE:

- IP and user mapping information might be inaccurate, if the user identities in JIMS are cleared, delayed, or missing.
- SRX firewall authentication can also push the authentication entries to JIMS.

The SRX Series device communicates with JIMS through HTTP or HTTPS messages to obtain the access token and query for user identities. The following different query modes are available and all queries can happen simultaneously.

Access Token Query

JIMS requires OAuth 2.0 protocol to authenticate or authorize. The SRX Series device user query function requires an access token to query the JIMS server. The SRX Series device uses the client credentials such as client ID and client secret to obtain an access token. These parameters must be consistent with the API client configured on JIMS.

Batch or Periodic Query

At the beginning, SRX Series device sends the batch queries to JIMS sequentially to obtain all the expected user identities. When there are no more entries in JIMS, SRX Series device periodically queries for the newly generated reports with the configured interval.

The timestamp is mentioned in the query to restart the response. The timestamp is expected in the query under the following circumstances:

- SRX Series device queries the JIMS server for the first time
- SRX Series device switches over to the secondary JIMS
- SRX Series device does the error recovery because of an internal error or upon receiving error response from JIMS

For all the other cases, SRX Series device provides the received cookie information in the query instead of a timestamp.

IP Address Query

SRX Series device can provide another query to JIMS specifying the IP address, if it has missed the data for the existing IP address flow. If there are many IP address queries in the queue, SRX Series device can keep multiple concurrent HTTP or HTTPS connections with JIMS to increase the throughput. However, the number of concurrent connections are restricted to less than or equal to 20 connections to reduce the load on JIMS.

User Mapping Query

SRX Series device can engage Captive Portal to obtain the user ID to authenticate the user. Once the user is authenticated, SRX Series device can issue another query to JIMS specifying the user ID and IP address to obtain user information. The firewall authentication uses the `https://<JIMS>/<query-api>/user/ip=<ip>&id=<id>&domain=<domain>` API to push an authentication success entry to JIMS with the user IP, user ID, and the domain. JIMS responds with the user information.

The difference between the IP address query and user query is that the IP address query does not have the user ID. Both these queries insert the user information to the internal cache of JIMS, and all SRX Series Firewalls are updated with user information.

RELATED DOCUMENTATION

[About the Identity Management Profile Page | 693](#)

[Creating Identity Management Profiles | 695](#)

[Editing, Cloning, and Deleting Identity Management Profiles | 699](#)

[Updating the Identity Management Profile to SRX Series Devices | 700](#)

About the Identity Management Profile Page

IN THIS SECTION

● [Tasks You Can Perform | 694](#)

● [Field Descriptions | 694](#)

To access this page, click [Configure > User Firewall Management > Identity Management](#).

Use the Identity Management Profile page to obtain advanced user identity from different authentication sources for SRX Series devices.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create the identity management profile. See ["Creating Identity Management Profiles" on page 695](#).
- Edit, clone, and delete an existing identity management profile. See ["Editing, Cloning, and Deleting Identity Management Profiles" on page 699](#).
- Deploy the identity management profile. See ["Updating the Identity Management Profile to SRX Series Devices" on page 700](#).

Field Descriptions

[Table 213 on page 694](#) provides guidelines on using the fields on the Identity Management Profile page.

Table 213: Fields on the Identity Management Profile Page

| Field | Description |
|--------------------|--|
| Name | Specifies the name of the identity management profile. |
| Description | Specifies the description for the identity management profile. |
| Primary IP Address | Specifies the IP address of the primary Juniper Identity Management System (JIMS). |
| Domain | Specifies the active directory domains required for SRX Series devices. |
| Devices | Specifies the name of a SRX Series device. |

RELATED DOCUMENTATION

| | |
|--|-----|
| Creating Identity Management Profiles | 695 |
| Editing, Cloning, and Deleting Identity Management Profiles | 699 |
| Updating the Identity Management Profile to SRX Series Devices | 700 |

Creating Identity Management Profiles

Use the Create Identity Management Profile page to create a JIMS profile and to obtain user identities.

To create an identity management profile:

1. Select **Configure > User Firewall Management > Identity Management Profile**.
The Identity Management Profile page appears.
2. Click the + sign.
The Create Identity Management Profile page appears.
3. Complete the configuration by using the guidelines in [Table 214 on page 695](#).
4. Click **Finish**.

Table 214: Fields on the Create Identity Management Profile Page

| Field | Description |
|--|---|
| <i>General Information</i> | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. Maximum length is 255 characters. |
| Description | Enter a description for the identity management profile; maximum length is 255 characters. |
| <i>General Information—Connection for Primary and Secondary Identity</i> | |

Table 214: Fields on the Create Identity Management Profile Page (*Continued*)

| Field | Description |
|------------------------|--|
| Connection Type | <p>Select the application protocol from the list used for the SRX Series device connection to Juniper Identity Management System (JIMS). You identify the connection protocol along with the configuration that identifies JIMS . The user query function allows the SRX Series device to request user authentication and identity information for an individual user from JIMS.</p> <ul style="list-style-type: none"> • HTTP—Protocol that JIMS uses to connect to the SRX Series device. • HTTPS—Secure version of the protocol that JIMS uses to connect to the SRX Series device. <p>If the connection type option is not configured, HTTPS is used by default.</p> |
| Port | <p>Select the connection port of the JIMS server, from the list. Default port number is 443. The range is 1 to 65535.</p> |
| Primary IP Address | <p>Enter a valid IPv4 address of the primary JIMS server.</p> <p>SRX Series devices always query the primary JIMS to obtain the user identities.</p> |
| Primary CA Certificate | <p>Enter the certificate of the primary JIMS server. The SRX Series device uses this certificate to verify the certificate of the JIMS server for the SSL connection that is used for the user query function. For example: <code>'/var/tmp/RADIUSServerCertificate.crt'</code></p> <p>When SRX Series device does not receive the information from JIMS through the Web API POST requests, user query enables the SRX Series device to query JIMS for authentication and identity information for an individual user.</p> |
| Secondary Identity | <p>Enable this option to use the secondary JIMS server as a fallback when the primary JIMS server fails. By default, this option is disabled.</p> |
| Secondary IP Address | <p>Enter a valid IPv4 address of the secondary JIMS server.</p> <p>The secondary JIMS is available as a fall back option with limited resources. Use the secondary JIMS when the HTTP GET query or number of queries to the primary JIMS fails.</p> |

Table 214: Fields on the Create Identity Management Profile Page (*Continued*)

| Field | Description |
|--------------------------|---|
| Secondary CA Certificate | Enter the certificate of the secondary JIMS server. The SRX Series device uses this certificate to verify the JIMS server certificate for the SSL connection, used for the user query function. |
| Token API | <p>Enter the token API used to generate the URL to acquire an access token. The token API is combined with the connection method and the IP address of JIMS to produce the complete URL used to acquire an access token.</p> <p>For example, if the token API is oauth, the connection method is HTTPS, and the IP address of JIMS is 192.0.2.199, the complete URL to acquire an access token would be https://192.0.2.199/api/oauth. This is a required parameter.</p> <p>The default token API is oauth_token/oauth.</p> |
| Query API | <p>Enter the query API to specify the path of the URL that the SRX Series device uses to query JIMS for an individual user. For the SRX Series device to be able to make a request, you must have configured the query API to obtain an access token.</p> <p>The SRX Series device generates the complete URL for the user query request by combining the query API string with the connection method (HTTP/HTTPS) and the JIMS IP address.</p> |

Advanced Settings—Batch Query

| | |
|-----------------|---|
| Items per Batch | Enable this option to specify the maximum number of reports to include in the JIMS response. The minimum number of reports is 100. |
| Query Interval | Enable this option to configure the time interval, in seconds, for SRX Series devices to periodically query JIMS for the newly generated user identities. |

Advanced Settings—IP Query

Table 214: Fields on the Create Identity Management Profile Page (*Continued*)

| Field | Description |
|------------------|--|
| Query Delay Time | <p>Enter the time in seconds for the SRX Series device to delay before sending the individual IP queries to JIMS for authentication and identity information for individual users.</p> <p>After the delay timeout expires, the SRX Series device sends the query to JIMS and creates a pending entry for the user in the Routing Engine authentication table.</p> <p>Range: 0 through 60 seconds</p> |
| No IP Query | Enable this option to disable the IP address query function that is enabled by default. |

Advanced Settings—Authentication Timeout

| | |
|------------------------------|---|
| Authentication Entry Timeout | <p>Enter the timeout interval after which, the idle entries in the JIMS authentication table expire. If a value of 0 is specified, the entries will never expire. Default is 60 minutes.</p> <p>The timeout interval begins when the user authentication entry is added to the JIMS authentication table.</p> |
|------------------------------|---|

Assign Devices—Add Assign Devices

| | |
|---------------|--|
| Device Name | Select the SRX Series device from the list for JIMS to send the report on user identities. |
| Client ID | Enter the client ID that the SRX Series device requires to obtain an access token for the JIMS user query function. The client ID must be consistent with the API client configured on JIMS. |
| Client Secret | Enter the client secret used with the client ID that the SRX Series device requires to obtain an access token. The client secret must be consistent with the API client configured on JIMS. |

RELATED DOCUMENTATION

[Juniper Identity Management Service Overview | 691](#)
[About the Identity Management Profile Page | 693](#)

Editing, Cloning, and Deleting Identity Management Profiles

IN THIS SECTION

- [Editing Identity Management Profiles | 699](#)
- [Cloning Identity Management Profiles | 699](#)
- [Deleting Identity Management Profiles | 700](#)

You can edit, clone, and delete the identity management profiles from the Identity Management Profiles page. You clone an identity management profile to easily create a identity management profile. You can delete the unused identity management profiles.

Editing Identity Management Profiles

To edit an identity management profile:

1. Select **Configure > User Firewall Management > Identity Management Profile**.

The Identity Management Profile page appears.

2. Select the identity management profile that you want to edit, and click the pencil icon.

The Edit Identity Management Profile page appears, showing the same fields that are displayed when you create an identity management profile.

3. Edit the identity management profile fields as needed.

The changes are saved and you are returned to the Identity Management Profile landing page.

Cloning Identity Management Profiles

To clone an identity management profile:

1. Select **Configure > User Firewall Management > Identity Management Profile**.

The Identity Management Profile page appears.

2. Select the identity management profile that you want to clone, and select **Clone** from the More list or right-click menu..

The Clone Identity Management Profile page appears, showing the same fields that are displayed when you create an identity management profile.

3. Modify the identity management profile fields as needed.

4. Click **OK** to save the changes.

The cloned identity management profile is created and you are returned to the Identity Management Profile page.

Deleting Identity Management Profiles

To delete one or more identity management profiles:

1. Select **Configure > User Firewall Management > Identity Management Profile**.

The Identity Management Profile page appears.

2. Select the identity management profile that you want to delete, and click the **X** icon.

A warning dialog box appears asking you to confirm the deletion.

3. Click **Yes** to delete the selected identity management profiles.

The identity management profiles are deleted and you are returned to the Identity Management Profile page.

RELATED DOCUMENTATION

[Juniper Identity Management Service Overview | 691](#)

[About the Identity Management Profile Page | 693](#)

[Creating Identity Management Profiles | 695](#)

[Updating the Identity Management Profile to SRX Series Devices | 700](#)

Updating the Identity Management Profile to SRX Series Devices

To update the identity management profiles to SRX Series devices:

1. Select **Configure > User Firewall Management > Identity Management Profile**.

The Identity Management Profile page appears.

2. Select the identity management profile that you want to update, and click **Update**.

The Update Identity Management Profile page appears. See [Table 215 on page 701](#) for more details.

3. Select the required SRX Series device to update the identity management profile, and click **Update**.

A new job is created.

4. Click the job ID to see the update status

The Job Management page appears showing the state of the updated job.

Table 215: Fields on the Update Identity Management Profile page

| Column Name | Description |
|----------------------|---|
| Device Name | Name of the SRX Series device. |
| Configuration | You can view the identity management profile configuration in CLI or XML by clicking View . |
| Configuration Status | Configuration status of the device. The different configuration states for a SRX Series device are as follows: <ul style="list-style-type: none"> • Synchronizing—During the device update, the status is shown as Synchronizing. • Sync Failed—The synchronization operation failed. • In Sync—The synchronization operation completed successfully; Security Director and the device are synchronized. |
| Connection Status | Connection status of the device. The status shows either UP or Down. |
| Domain | Domain of the user. |
| Device IP | IP address of the device. |
| Platform | Platform of the device. For example, SRX Series, vSRX. |
| OS Version | Junos OS version running on the device. |

RELATED DOCUMENTATION

[Juniper Identity Management Service Overview | 691](#)

[About the Identity Management Profile Page | 693](#)

[Creating Identity Management Profiles | 695](#)

[Editing, Cloning, and Deleting Identity Management Profiles | 699](#)

User Firewall Management-End User Profile

IN THIS CHAPTER

- [End User Profile Overview | 702](#)
- [About the End User Profile Page | 703](#)
- [Creating an End User Profile | 704](#)
- [Edit and Delete End User Profile | 706](#)
- [End User Profile Operations | 707](#)

End User Profile Overview

An end user profile is a device identity profile. It is a collection of attributes that are characteristics of a specific group of devices, or of a specific device, depending on the attributes configured in the profile. The Packet Forwarding Engine of the SRX Series device maps the IP address of a device to the device identity profile. This feature supports Microsoft Windows Active Directory and third-party network access control (NAC) systems as authentication sources.

When traffic from device A arrives at an SRX Series device, the SRX Series device obtains the IP address of device A from the first traffic packet and uses it to search the device identity authentication table for a matching device identity entry. Then it matches that device identity profile with a security policy whose End User Profile field specifies the device identity profile name. If a match is found, the security policy is applied to traffic issuing from device A.

The same device identity profile can also apply to other devices sharing the same attributes. However, to apply the same security policy, the device and its traffic must match all other fields in the security policy.

A device identity profile must contain a domain name. It might contain more than one set of attributes, but it must contain at least one value in each attribute.

The end user profile feature is useful when you cannot or do not want to use user identity to control access to network resources. The device identity feature allows you to use the identity of a device and its attributes to control access to network resources instead of the identity of the user of that device. You might want to control network access based on the device identity for various reasons. For example, you might allow users to use their own devices (BYOD) to access network resources and you do not

want to use captive portal authentication. Also, some companies might have older switches that do not support 802.1, or they might not have a NAC system.

RELATED DOCUMENTATION

[About the End User Profile Page | 703](#)

[Creating an End User Profile | 704](#)

[End User Profile Operations | 707](#)

[Creating Firewall Policy Rules | 482](#)

[Modifying the Device Information Source Configuration for Security Devices | 356](#)

About the End User Profile Page

IN THIS SECTION

● [Tasks You Can Perform | 703](#)

● [Field Descriptions | 704](#)

To access this page, select **Configure > User Firewall Management > End User Profile**.

Use the End User Profile page to create an end user profile by specifying the name of the profile, one or more of its attributes, and the name of the active directory domain to which the SRX Series device belongs.



NOTE: It is mandatory to specify the device attributes and the domain that the device belongs to.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an end user profile. See ["Creating an End User Profile" on page 704](#).
- Edit and delete an end user profile. See ["Edit and Delete End User Profile" on page 706](#).

- Clone, view details, and find policies that use a specific end user profile. See ["End User Profile Operations" on page 707](#).

Field Descriptions

[Table 216 on page 704](#) provides guidelines on using the fields on the End User Profile page.

Table 216: Fields on the End User Profile Page

| Field | Description |
|---------------|--|
| Name | Specifies the name of the end user profile. |
| Device Domain | Specifies the name of the domain to which the device belongs; for example, domain1. |
| Attributes | Specifies one or more values for predefined attributes, such as name, category, manufacturer, type, operating system, and version of the operating system. You can create custom attributes as well. |
| Description | Specifies a description for the end user profile. |
| Domain | Specifies the domain of the user. |

RELATED DOCUMENTATION

| |
|--|
| End User Profile Overview 702 |
| Creating an End User Profile 704 |
| End User Profile Operations 707 |
| Creating Firewall Policy Rules 482 |

Creating an End User Profile

Use the Create End User Profile page to create an end user profile. You can apply the end user profile to the firewall policy rules.

To create an end user profile:

- 1. Select **Configure > User Firewall Management > End User Profile**.

The End User Profile page is displayed.

- 2. Click the **+** icon.

The Create End User Profile page is displayed.

- 3. Complete the configuration according to the guidelines provided in [Table 217 on page 705](#).

- 4. Click **OK** to create an end user profile or **Cancel** to discard the profile.

An end user profile is created in the End User Profile page. While creating firewall policy rules, you can select an end user profile. When traffic arrives from a device, it matches that device identity profile with a security policy whose End User Profile field specifies the device identity profile name. If a match is found, the security policy is applied to traffic issuing from the device.

Table 217: Fields on the Create End User Profile Page

| Field | Description |
|-----------------------|---|
| Name | Enter a unique string of alphanumeric characters, dashes, and underscores. No spaces are allowed. Maximum length is 64 characters. |
| Description | Enter a description of the end user profile; maximum length is 1024 characters. |
| Device Domain | Enter a device domain name to which the SRX Series device belongs, using a string of alphanumeric characters, dashes, and underscores. |
| <i>Add Attributes</i> | |
| | <p>Click the + icon.</p> <p>The Add Attributes page is displayed. Use this page to add a predefined attribute or create a custom attribute. You can specify one or more values to an attribute and click OK.</p> <p>To edit the attributes, click the pencil icon and edit the details.</p> |
| Attribute Type | <p>Select an attribute, either predefined or custom.</p> <p>Click Create to create a custom attribute.</p> |

Table 217: Fields on the Create End User Profile Page *(Continued)*

| Field | Description |
|----------------------------------|--|
| Attribute Value | <p>Enter one or more values to the attribute, separated by commas. Attribute value must be a string consisting of letters, numbers, dashes, underscores, and dots. Maximum length is 64 characters.</p> <p>Maximum attribute values allowed for an attribute-type are 20. Each value should be less than 64 characters.</p> <p>The maximum attribute values per profile are 100.</p> |
| <i>Create New Attribute Type</i> | |
| | <p>In the Add Attribute page, click Create to create unique custom attribute types.</p> <p>The Create New Attribute Type page is displayed.</p> |
| Attribute Type | <p>Enter a unique attribute type name. It can be a string of alphanumeric characters, dashes, and underscores. No spaces are allowed. Maximum length is 64 characters.</p> |

RELATED DOCUMENTATION

- [End User Profile Overview | 702](#)
- [About the End User Profile Page | 703](#)
- [End User Profile Operations | 707](#)
- [Creating Firewall Policy Rules | 482](#)

Edit and Delete End User Profile

IN THIS SECTION

- [Edit End User Profile | 707](#)
- [Delete End User Profile | 707](#)

You can edit an end user profile and delete an unused profile.

Edit End User Profile

To edit an end user profile:

1. Select **Configure > User Firewall Management > End User Profile**.

The End User Profile page is displayed.

2. Select a profile that you want to edit and click the pencil icon.

The Edit End User Profile page is displayed, showing the same options as when creating a new end user profile.

3. Edit the details and click **OK** to save your changes.

Delete End User Profile

To delete an end user profile:

1. Select **Configure > User Firewall Management > End User Profile**.

The End User Profile page is displayed.

2. Select a profile and click **X** icon.

A confirmation message appears to verify that you want to delete your selection.

3. Click **Yes** to delete your selection.

RELATED DOCUMENTATION

[End User Profile Overview | 702](#)

[About the End User Profile Page | 703](#)

[Creating an End User Profile | 704](#)

[End User Profile Operations | 707](#)

[Creating Firewall Policy Rules | 482](#)

End User Profile Operations

IN THIS SECTION

● [Cloning an End User Profile | 708](#)

- Finding a Profile That Uses a Specific End User Profile | 708
- Viewing Details of an End User Profile | 708

You can clone an end user profile, find policies that use a specific end user profile, and view details of an end user profile.

Cloning an End User Profile

You can clone an end user profile to easily create a similar profile.

1. Select **Configure** > **User Firewall Management** > **End User Profile**.
The End User Profile page is displayed.
2. Select an end user profile. Click **More** or use the right-click menu and select **Clone**.
The Clone End User Profile page appears with editable fields.
3. Click **OK** to save your changes.

Finding a Profile That Uses a Specific End User Profile

You can search for the policies that are using an end user profile.

1. Select **Configure** > **User Firewall Management** > **End User Profile**.
The End User Profile page is displayed.
2. Select an end user profile. Click **More** or use the right-click menu and select **Find Usage**.
A search result page is displayed with the firewall policies that are using the selected end user profile.
Click the policy link to navigate to the Firewall Policy page.

Viewing Details of an End User Profile

You can view all the details of a profile, such as profile name, device domain, and attribute type and value.

1. Select **Configure** > **User Firewall Management** > **End User Profile**.
The End User Profile page is displayed.
2. Select an end user profile and click **More** or use the right-click menu and select **Detailed View**.
The End User Profile Details page is displayed.
3. Click **Close** to close the page.

RELATED DOCUMENTATION

| |
|---|
| End User Profile Overview 702 |
| About the End User Profile Page 703 |
| Creating an End User Profile 704 |
| Creating Firewall Policy Rules 482 |

IPS Policy-Policies

IN THIS CHAPTER

- Understanding IPS Policies | 710
- Creating IPS Policies | 714
- Creating IPS Policy Rules | 716
- Publishing Policies | 730
- Updating Policies on Devices | 730
- Assigning Devices to Policies | 731
- Create and Manage Policy Versions | 732
- Creating Rule Name Template | 735
- Export Policies | 736
- Unassigning Devices to Policies | 737
- Viewing and Synchronizing Out-of-Band IPS Policy Changes Manually | 738
- Edit and Clone Policies and Objects | 741
- Delete and Replace Policies and Objects | 742
- Assigning Policies and Profiles to Domains | 743
- IPS Policies Main Page Fields | 744

Understanding IPS Policies

IN THIS SECTION

- IPS Policy Support for Unified and Standard Firewall Policy | 712
- Multiple IPS Policies for Unified and Standard Firewall Policies | 713
- IPS in Logical Systems | 713

An Intrusion prevention system (IPS) policy enables you to selectively enforce various attack detection and prevention techniques on network traffic passing through an IPS-enabled device. There are two types of policy options:

- **Group Policy**—select this option, when you want to push a configuration to a group of devices. You can create rules for a group policy.

During a device assignment for a group policy, only devices from the current and child domains (with view parent enabled) are listed. Devices in the child domain with view parent disabled are not listed. Not all the group policies of the Global domain are visible in the child domain. Group policies of the Global domain (including All device policy) are not visible to the child domain, if the view parent of that child domain is disabled. Only the group policies of the Global domain, which has devices from the child domain assigned to it, are visible in the child domain. If there is a group policy in global domain with devices from both D1 and the Global domains assigned to it, only this group policy of the Global domain is visible in the D1 domain along with only the D1 domain devices. No other devices, that is the Device-Exception policy, of the Global domain is visible in the D1 domain.

You cannot edit a group policy of the Global domain from the child domain. This is true for All Devices policy as well. Modifying the policy, deletion of the policy, managing a snapshot, snapshot policy and acquiring the policy lock is also not allowed. Similarly, you cannot perform these actions on the Device-Exception policy of the D1 domain from the Global domain. You can prioritize group policies from the current domain. Group policies from the other domains are not listed.

- **Device Policy**—Select this option, when you want to push a unique IPS policy configuration per device. You can create device rules for a device IPS policy.

Security Director views a logical system or tenant system like it does any other security device, and it takes ownership of the security configuration of the logical system or tenant system. In Security Director, each logical system or tenant system is managed as a unique security device.

During a device assignment for a device policy, only devices from the current domain are listed.



NOTE: If Security Director discovers the root logical system, the root LSYS discovers all other user LSYS and TSYS inside the device.

An IPS policy consists of rulebases and each rulebase contains a set of rules. It allows you to define policy rules to match a section of traffic based on a zone, network, and application, and then take active or passive preventive actions on that traffic.

An IPS rulebase protects your network from attacks by using attack objects to detect known and unknown attacks. It detects attacks based on stateful signature and protocol anomalies.

An exempt rulebase works in conjunction with the IPS rulebase. You must have rules in the IPS rulebase before you can create exempt rules. If traffic matches a rule in the IPS rulebase, the IPS policy attempts to match the traffic against the exempt rulebase before performing the specified action or creating a log

record for the event. If the IPS policy detects traffic that matches the source or destination pair and the attack objects specified in the exempt rulebase, it automatically exempts that traffic from attack detection.

Configure an exempt rulebase in the following conditions:

- When an IPS rule uses an attack object group that contains one or more attack objects that produce false positives or irrelevant log records.
- When you want to exclude a specific source, destination, or source-destination pair from matching an IPS rule. This prevents IPS from generating unnecessary alarms.

After you create an IPS policy by adding rules in one or more rulebases, you can publish or update the policy. You can also view a list of security devices with IPS policies assigned to them. This list assists you in viewing the details of all the IPS policies and rules assigned per device.

IPS Policy Support for Unified and Standard Firewall Policy

Starting in Junos Space Security Director Release 19.3, you can assign IPS policy to the standard and unified firewall policies. With the support of IPS policy within firewall policy:

- All the IPS matches will now be handled within the standard or unified firewall policies unless explicit source, destination, or application is defined in the IPS policy.
- You need not configure source or destination address, source and destination-except, from and to zone, or application, as the match happens in the firewall policy. However, you can configure match conditions in IPS policy to achieve additional granularity.
- Initial firewall policy match might result in single or multiple policy matches. As a part of session interest check, IPS will be enabled if IPS policy is present in any of the matched rules.



NOTE: For devices with Junos OS Release 18.2, single IPS policy is supported in the firewall policy rules. For devices with Junos OS Release 18.3 onward, multiple IPS policies are supported in the firewall policy rules.

If you have configured a traditional firewall policy (with 5-tuples matching condition or dynamic-application configured as none) and an unified policy (with 6-tuple matching condition), the traditional firewall policy matches the traffic first, prior to the unified policy.

When you configure a unified policy with a dynamic application as one of the matching condition, the configuration eliminates the additional steps involved in IPS policy configuration. All the IPS policy configurations are handled within the unified firewall policy and simplifies the task of configuring IPS policy to detect any attack or intrusions for a given session.

From Junos OS Release 18.2 onward, the CLI configuration for IPS policy is generated along with the standard or unified firewall policy, to which the IPS policy is attached.

Multiple IPS Policies for Unified and Standard Firewall Policies

When an SRX Series device is configured with standard and unified firewall policies, you can configure multiple IPS policies and set one of those policies as the default policy. If multiple IPS policies are configured for a session and when policy conflict occurs, the device applies the default IPS policy for that session and thus resolves any policy conflicts.



NOTE: If you have configured two or more IPS policies in a firewall policy, then you must configure the default IPS policy.

The initial security policy lookup phase, which occurs prior to a dynamic application being identified, might result in multiple potential policy matches. IPS is enabled on the session if at least one of the matched security policies have an IPS policy configured.

If only one IPS policy is configured in the potential policy list, then that IPS policy is applied for the session. If there are multiple IPS policies configured for a session in the potential policy list, then the SRX Series device applies the IPS policy that is configured as the default IPS policy.

IPS in Logical Systems

Starting in Junos Space Security Director Release 20.1R1, an IPS policy enables you to selectively enforce various attack detection and prevention techniques on network traffic passing through a logical system (LSYS).

You can configure IPS policies at the root level. Configuring an IPS policy for LSYS is similar to configuring an IPS policy on a device that is not configured for LSYS. This can include the configuration of custom attack objects. IPS policy templates installed in root LSYS are visible and used by all LSYS. Specify an IPS policy in the security profile that is bound to a LSYS. Although you can configure multiple IPS policies, a LSYS can have only one active IPS policy at a time. For user LSYS, you can either bind the same IPS policy to multiple user LSYS or bind a unique IPS policy to each user LSYS.

If you have configured more than one IPS policy in a security policy, then configuring default IPS policy configuration is mandatory. If the IPS policy is not configured for a user LSYS, the default IPS policy configured is used.

You must install the IPS signature license at the root level. Once IPS is enabled at the root level, it can be used with any LSYS on the device. A single IPS security package is installed for all LSYS on the device at the root level. The download and install options can only be executed at the root level. The same version of the IPS attack database is shared by all LSYS.



NOTE: Devices running Junos OS Release 18.3 onward supports IPS for Logical System.

To configure IPS policy in a firewall policy and to import a firewall policy that has IPS policy configured, see the [In Focus Guide](#).

RELATED DOCUMENTATION

[Creating IPS Policies | 714](#)

[Creating IPS Policy Rules | 716](#)

[Publishing Policies | 730](#)

[Updating Policies on Devices | 730](#)

[Assigning Policies and Profiles to Domains | 743](#)

[Configure a Default IDP Policy | 547](#)

Creating IPS Policies

Before You Begin

- Read the ["Understanding IPS Policies" on page 710](#) topic.
- Configure network interfaces and security zones.
- Enable *intrusion prevention system* (IPS) in security policies.
- Review the IPS Policies main page for an understanding of your current data set. See ["IPS Policies Main Page Fields" on page 744](#) for field descriptions.

Use this page to define how your device handles network traffic and to define policy rules. It allows you to enforce various attack detection and prevention techniques on traffic traversing your network.

To configure an IPS policy:

1. Select **Configure > IPS Policy > Policies**.
2. Click the + icon.
3. Complete the configuration according to the guidelines provided in the [Table 218 on page 715](#).
4. Click **OK**.

A new IPS policy with your configurations is created. After you create an IPS policy, add rules in one or more rulebases and publish the policy. For more information on the IPS policy rules, see ["Creating](#)

[IPS Policy Rules" on page 716](#) To enable the IPS policy, apply it to a domain, see ["Assigning Policies and Profiles to Domains" on page 743](#).

Table 218: IPS Policy Settings

| Settings | Guidelines |
|-------------------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters. |
| Description | Enter a description for the IPS policy; maximum length is 2048 characters. |
| Policy Options | |
| Configuration Mode | Select Advanced to create a policy that allows you to modify custom IPS rules independent of the predefined template. In addition, you can start with a predefined template that copies the predefined rules to your policy, and then edit or delete the rules as necessary. |
| Policy Templates | Select the predefined and custom policy templates from the Available column to include in the selected list for grouping all rules. |
| Type | <p>Select an option either to update a specific firewall policy configuration to a large set of devices or to push a unique firewall policy configuration per device:</p> <ul style="list-style-type: none"> • Group Policy—Use this option when you want to push a configuration to a group of devices. You can create rules for a group policy. • Device Policy—Use this option when you want to push a unique IPS policy configuration per device. You can create device rules for a device IPS policy. |
| Device Selection | |

Table 218: IPS Policy Settings *(Continued)*

| Settings | Guidelines |
|------------------------|---|
| Devices | <p>If you selected device policy template type, then select a device on which the policy will be published.</p> <p>If you selected group policy template type, then select the devices from the Available column to include in the selected list for the group policy that will be published.</p> <p>You can assign devices with Junos OS Release until 18.1. You must assign devices with Junos OS Release 18.2 onward from firewall policies.</p> <p>NOTE: Starting in Junos Space Security Director Release 20.1R1, logical system (LSYS) is supported on devices running Junos OS Release 18.3 and later.</p> <p>Starting in Junos Space Security Director Release 21.2R1, tenant system (TSYS) is supported on devices running Junos OS Release 18.3 and later for SRX Series devices and Junos OS Release 20.1 and later for vSRX Virtual Firewall Series devices.</p> |
| Policy Sequence | |
| Placement | Select an option to display or place the policy you have created before or after the device-specific policies. |
| Sequence No. | Select this option to specify the policy sequence number. This number identifies the location of your policy in relation to the entire sequence. |
| Select Policy Sequence | Move and place the policy to your preferred sequence in the list. This helps you to organize your policy in the required sequence. |

RELATED DOCUMENTATION

[Understanding IPS Policies](#) | 746

Creating IPS Policy Rules

Before You Begin

- Read the "[Understanding IPS Policies](#)" on page 746 topic.

- Read the ["Understanding IPS Policy Templates" on page 773](#) topic.
- Create IPS policies and IPS policy templates. See ["Creating IPS Policies" on page 714](#) and ["Creating IPS Policy Templates" on page 774](#).

Use this page to create intrusion prevention system (IPS) rules that define actions to be taken when the matching traffic pattern is found. You can add, edit, or delete rules to an IPS policy.

You can use the predefined IPS templates while creating an IPS policy. These templates contain rules that use default actions associated with attack objects. You can customize these templates to work on your network by selecting your own source and destination addresses and choosing IPS actions that reflect your security needs.

IPS rules protect your network from attacks by using attack objects to detect known and unknown attacks based on stateful signature and protocol anomalies. IPS exempt rules prevent unnecessary alarms from being generated.

To configure an IPS policy rule:

1. Select **Configure > IPS Policy > Policies > or Templates**.
2. Click the **Add Rules** link in the created policy.
3. Click **Create** and then select **IPS Rule or Exempt Rule**.
4. Complete the configuration according to the guidelines provided in [Table 219 on page 717](#) and [Table 220 on page 724](#).
5. Click **Publish**.

A new IPS rule with your configuration is created. You can use this rule in an IPS policy or an IPS policy template.

Table 219: IPS Policy Rule Settings

| Settings | Guidelines |
|---------------------------|---|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters. |
| IPS Type | Display the rule of the specified type. For example, IPS, Exempt. |
| Src. Zone | Click the Source Zone field and configure the source zone editor settings. |
| Source Zone Editor | |

Table 219: IPS Policy Rule Settings (Continued)

| Settings | Guidelines |
|--------------------------------|--|
| Zone | Select any zone for the source. You can also use zone exceptions to specify unique to zones for each device. Specify any to monitor network traffic originating from any zone. The default value is any. |
| Src. Address | Click the Source Address field and configure the source address settings. |
| Source Address | |
| Address Selection | Include or exclude addresses from the selected address list for the rule. You can also select to include any of the IP addresses of the source objects. |
| Addresses | Select one or more available IP addresses from the Available column to include in the selected list for the rule. |
| Add New Source Address | Click the button to add a new source address. |
| Dest. Zone | Click the Destination Zone field and configure the destination zone editor settings. |
| Destination Zone Editor | |
| Zone | Select any zone for the destination. You can also use zone exceptions to specify unique from zones for each device. Specify any to monitor network traffic to any zone. The default value is any. |
| Dest. Address | Click the Destination Address field and configure the destination address settings. |
| Destination Address | |
| Address Selection | Include or exclude addresses from the selected address list for the rule. You can also select to include any of the IP addresses of the source objects. |

Table 219: IPS Policy Rule Settings (Continued)

| Settings | Guidelines |
|-----------------------------|--|
| Addresses | Select one or more available IP addresses from the Available column to include in the selected list for the policy rule. |
| Add New Destination Address | Click the button to add a new destination address. |
| Service | Click the Service field and configure the service editor settings. |
| Service Editor | |
| Services | <p>Select an available services for the policy rule. For example:</p> <ul style="list-style-type: none"> • ftp—FTP allows the sending and receiving of files between machines. • ssh—SSH is a program to log into another computer over a network through strong authentication and secure communications on a channel that is not secure. • Web—Policy allows access to users who have previously been authenticated by Web authentication. • User Firewall—Uses the username and role information to determine whether to permit or deny a user's session or traffic. • Infranet—Pushes the user and role information for all authenticated users from the Access Control Service. <p>The default value is Default. A service in Security Director refers to an application on a device, such as Domain Name System (DNS). Services are based on protocols and ports and when added to a policy can be applied across all devices managed by Security Director.</p> |
| Add New Service | Click the button to add a new service. |
| IPS Signature | Click the IPS Signature field and configure the IPS signature settings. |
| IPS Signature | |

Table 219: IPS Policy Rule Settings *(Continued)*

| Settings | Guidelines |
|-----------------------|--|
| IPS Signatures | Select one or more available IPS signatures from the Available column to include in the selected list for the policy rule. |
| Add New IPS Signature | Click the button to add a new IPS signature. |
| Action | Click the Action field and configure the action settings. |
| Action | |

Table 219: IPS Policy Rule Settings *(Continued)*

| Settings | Guidelines |
|----------|---|
| Action | <p>Select an option for the action you want IPS to take when the monitored traffic matches the attack objects specified in the rules:</p> <ul style="list-style-type: none"> • No Action—Does not take action. Use this action when you only want to generate logs for some traffic. • Ignore—Stops scanning traffic for the rest of the connection if an attack match is found. IPS disables the rulebase for the specific connection. <p>NOTE: This action does not mean ignore an attack.</p> <ul style="list-style-type: none"> • Drop Packet—Drops a matching packet before it can reach its destination but does not close the connection. Use this action to drop packets for attacks in traffic that is prone to spoofing, such as UDP traffic. Dropping a connection for such traffic could result in a denial of service that prevents you from receiving traffic from a legitimate source IP address. • Drop Connection—Drops all packets associated with the connection, preventing traffic for the connection from reaching its destination. Use this action to drop connections for traffic that is not prone to spoofing. • Close Client—Closes the connection and sends an RST packet to the client but not to the server. • Close Server—Closes the connection and sends an RST packet to the server but not to the client. • Close Client and Server—Closes the connection and sends an RST packet to both the client and the server. • Recommended—Gives a list of all attack objects that Juniper Networks considers to be serious threats, organized into categories. For example, severity groups attack objects by the severity assigned to the attack. • Diffserv Marking—Assigns the indicated Differentiated Services code point (DSCP) value to the packet in an attack, then passes the packet on normally. <p>When you select Diffserv Marking, you need to enter code value.</p> <ul style="list-style-type: none"> • Code Point for Diffserv Marking—Enter a code point value. Based on the DSCP value, behavior aggregate classifiers set the forwarding class and loss priority for the traffic deciding the forwarding treatment the traffic receives. |

Table 219: IPS Policy Rule Settings *(Continued)*

| Settings | Guidelines |
|--------------------------|--|
| | NOTE: The DSCP value is not applied to the first packet that is detected as an attack, but is applied to subsequent packets. |
| Notification Opt. | Click the Notification field and configure the notification settings. |
| Notification Opt. | |
| Attack Logging | Enable this option to log attacks. |
| Alert Flag | Enable this option to add an alert flag to an attack log. |
| Log Packets | Enable this option to log packet capture when a rule matches. |
| Packets Before | Enter the number of packets processed before the attack is captured. |
| Packets After | Enter the number of packets processed after the attack is captured. |
| Post Window Timeout | Enter the time limit for capturing post-attack packets for a session. No packet capture is conducted after the timeout has expired. Range is from 0 through 1800 seconds. |
| IP Action Opt. | Click the IP Action field and configure the IP action settings. |
| IP Action Opt. | |

Table 219: IPS Policy Rule Settings *(Continued)*

| Settings | Guidelines |
|-----------------|---|
| IP Action | <p>Select an option to apply actions on future connections that use the same IP action attributes:</p> <ul style="list-style-type: none"> • None—Does not take any action against future traffic. • IP Notify—Does not take any action against future traffic but logs the event. This is the default. • IP Close—Closes any new sessions matching this IP action rule by sending RST packets to the client and server. • IP Block—All packets of any session matching the IP action rule are dropped silently. <p>When traffic matches multiple rules, the most severe IP action of all matched rules is applied. The most severe IP action is the Close Session action, the next in severity is the Drop/Block Session action, and then the Notify action.</p> |
| IP Target | <p>Select an option to block future connections:</p> <ul style="list-style-type: none"> • None—Does not match any traffic. • Destination Address—Matches traffic based on the destination address of the attack traffic. • Service—For TCP and UDP, matches traffic based on the source address, source port, destination address, and destination port of the attack traffic. This is the default. • Source Address—Matches traffic based on the source address of the attack traffic. • Source Zone—Matches traffic based on the source zone of the attack traffic. • Source Zone Address—Matches traffic based on the source zone and source address of the attack traffic. • Zone Service—Matches traffic based on the source zone, destination address, destination port, and protocol of the attack traffic. |
| Refresh Timeout | <p>Enable this option to refresh the IP action timeout so it does not expire when future connections match the IP action filter.</p> |

Table 219: IPS Policy Rule Settings (Continued)

| Settings | Guidelines |
|------------------------|--|
| Timeout Value | <p>Enter the number of seconds that you want the IP action to remain in effect after a traffic match.</p> <p>Default value is 0 seconds and the range is from 0 through 64,800 seconds.</p> |
| Log Taken | Enable this option to log information about the IP action against the traffic that matches a rule. |
| Log Creation | Enable this option to generate a log event on the IP action filter. |
| Additional Opt. | Click the Additional field and configure the additional settings. |
| Additional Opt. | |
| Severity | Select a severity level to override the inherited attack severity in the rules. Levels, in order of increasing severity, are info, warning, minor, major, and critical. The most dangerous level is critical, which attempts to crash your server or gain control of your network. Informational is the least dangerous level and is used by network administrators to discover holes in their security systems. |
| Terminal | Enable this option to set a terminal rule flag. The device stops matching rules for a session when a terminal rule is matched. |
| Description | Enter a description for the IPS policy rule; maximum length is 4096 characters. |

Table 220: IPS Policy Templates Rule Settings

| Settings | Guidelines |
|----------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| IPS Type | Display the rule of the specified type. For example, IPS, Exempt. |

Table 220: IPS Policy Templates Rule Settings *(Continued)*

| Settings | Guidelines |
|-----------------------|--|
| IPS Signature | Click the IPS Signature field and configure the IPS signature settings. |
| IPS Signature | |
| IPS Signatures | Select one or more available IPS signatures from the Available column to include in the selected list for the policy rule. |
| Add New IPS Signature | Click the button to add a new IPS signature. |
| Action | Click the Action field and configure the action settings. |
| Action | |

Table 220: IPS Policy Templates Rule Settings (*Continued*)

| Settings | Guidelines |
|----------|--|
| Action | <p>Select an option for the action you want IPS to take when the monitored traffic matches the attack objects specified in the rules:</p> <ul style="list-style-type: none"> • No Action—Does not take action. Use this action when you only want to generate logs for some traffic. • Ignore—Stops scanning traffic for the rest of the connection if an attack match is found. IPS disables the rulebase for the specific connection. <p>NOTE: This action does not mean ignore an attack.</p> <ul style="list-style-type: none"> • Drop Packet—Drops a matching packet before it can reach its destination but does not close the connection. Use this action to drop packets for attacks in traffic that is prone to spoofing, such as UDP traffic. Dropping a connection for such traffic could result in a denial of service that prevents you from receiving traffic from a legitimate source IP address. • Drop Connection—Drops all packets associated with the connection, preventing traffic for the connection from reaching its destination. Use this action to drop connections for traffic that is not prone to spoofing. • Close Client—Closes the connection and sends an RST packet to the client but not to the server. • Close Server—Closes the connection and sends an RST packet to the server but not to the client. • Close Client and Server—Closes the connection and sends an RST packet to both the client and the server. • Recommended—Gives a list of all attack objects that Juniper Networks considers to be serious threats, organized into categories. For example, severity groups attack objects by the severity assigned to the attack. • Diffserv Marking—Assigns the indicated Differentiated Services code point (DSCP) value to the packet in an attack, then passes the packet on normally. <p>When you select Diffserv Marking, you need to enter code value.</p> <ul style="list-style-type: none"> • Code Point for Diffserv Marking—Enter a code point value. Based on the DSCP value, behavior aggregate classifiers set the forwarding class and loss priority for the traffic deciding the forwarding treatment the traffic receives. |

Table 220: IPS Policy Templates Rule Settings *(Continued)*

| Settings | Guidelines |
|--------------------------|--|
| | NOTE: The DSCP value is not applied to the first packet that is detected as an attack, but is applied to subsequent packets. |
| Notification Opt. | Click the Notification field and configure the notification settings. |
| Notification Opt. | |
| Attack Logging | Enable this option to log attacks. |
| Alert Flag | Enable this option to add an alert flag to an attack log. |
| Log Packets | Enable this option to log packet capture when a rule matches. |
| Packets Before | Enter the number of packets processed before the attack is captured. |
| Packets After | Enter the number of packets processed after the attack is captured. |
| Post Window Timeout | Enter the time limit for capturing post-attack packets for a session. No packet capture is conducted after the timeout has expired. Range is from 0 through 1800 seconds. |
| IP Action Opt. | Click the IP Action field and configure the IP action settings. |
| IP Action Opt. | |

Table 220: IPS Policy Templates Rule Settings *(Continued)*

| Settings | Guidelines |
|-----------------|---|
| IP Action | <p>Select an option to apply actions on future connections that use the same IP action attributes:</p> <ul style="list-style-type: none"> • None—Does not take any action against future traffic. • IP Notify—Does not take any action against future traffic but logs the event. This is the default. • IP Close—Closes any new sessions matching this IP action rule by sending RST packets to the client and server. • IP Block—All packets of any session matching the IP action rule are dropped silently. <p>When traffic matches multiple rules, the most severe IP action of all matched rules is applied. The most severe IP action is the Close Session action, the next in severity is the Drop/Block Session action, and then the Notify action.</p> |
| IP Target | <p>Select an option to block future connections:</p> <ul style="list-style-type: none"> • None—Does not match any traffic. • Destination Address—Matches traffic based on the destination address of the attack traffic. • Service—For TCP and UDP, matches traffic based on the source address, source port, destination address, and destination port of the attack traffic. This is the default. • Source Address—Matches traffic based on the source address of the attack traffic. • Source Zone—Matches traffic based on the source zone of the attack traffic. • Source Zone Address—Matches traffic based on the source zone and source address of the attack traffic. • Zone Service—Matches traffic based on the source zone, destination address, destination port, and protocol of the attack traffic. |
| Refresh Timeout | <p>Enable this option to refresh the IP action timeout so it does not expire when future connections match the IP action filter.</p> |

Table 220: IPS Policy Templates Rule Settings *(Continued)*

| Settings | Guidelines |
|------------------------|--|
| Timeout Value | <p>Enter the number of seconds that you want the IP action to remain in effect after a traffic match.</p> <p>Default value is 0 seconds and the range is from 0 through 64,800 seconds.</p> |
| Log Taken | Enable this option to log information about the IP action against the traffic that matches a rule. |
| Log Creation | Enable this option to generate a log event on the IP action filter. |
| Additional Opt. | Click the Additional field and configure the additional settings. |
| Additional Opt. | |
| Severity | Select a severity level to override the inherited attack severity in the rules. Levels, in order of increasing severity, are info, warning, minor, major, and critical. The most dangerous level is critical, which attempts to crash your server or gain control of your network. Informational is the least dangerous level and is used by network administrators to discover holes in their security systems. |
| Terminal | Enable this option to set a terminal rule flag. The device stops matching rules for a session when a terminal rule is matched. |
| Description | Enter a description for the IPS policy rule; maximum length is 1024 characters. |

RELATED DOCUMENTATION

[Assigning Devices to Policies | 731](#)

[Unassigning Devices to Policies | 737](#)

[Creating Rule Name Template | 735](#)

[Assigning Policies and Profiles to Domains | 743](#)

Publishing Policies

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups, with prerules in the High priority group publishing first, before prerules in the Medium and Low priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other policies in the same priority group. However, such policies do not need to be republished in order for their changes in priority or precedence to take effect for the policies that are implicitly changed by the explicit changes to the republished policy.

To publish a policy:

1. Select **Configure > Policy-Name Policy > Policies**.
2. Select the policy that you want to publish and click **Publish**. The Publish Policy page appears.
3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the policy is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

4. Select **Schedule** at a later time if you want to schedule and publish the configuration later.
5. Select **Run now** if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

[Updating Policies on Devices | 730](#)

Updating Policies on Devices

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups, with

prerules in the High priority group publishing first, before prerules in the Medium and Low priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other policies in the same priority group. However, such policies do not need to be republished in order for their changes in priority or precedence to take effect for the policies that are implicitly changed by the explicit changes to the republished policy.

To update a policy:

1. Select **Configure > Policy-Name Policy > Policies**.
2. Select the policy that you want to update and click **Update**. The Update Policy page appears.
3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the policy is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

4. Select **Schedule at a later time** if you want to schedule and publish the configuration later.
5. Select **Run now** if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

[Publishing Policies | 730](#)

Assigning Devices to Policies

Once you create a group or device policy, you can assign devices to it.

To assign devices to a policy:

1. Select **Configure > Policy-Name Policy > Policies**.
The Policies landing page appears.

2. Right-click the policy to which you want to assign devices, or select **Assign Devices** from the More menu.

The Assign Devices page appears. The Name field shows the name of the selected policy and is not editable.

3. Select the **Show only devices without policy assigned** check box.

Only devices that are not assigned to any policy are displayed in the Device Selection section.

4. Select the devices you want to add to the policy from the Available column and click the right arrow to move these devices to the Selected column. You cannot assign devices with Junos OS Release greater than 18.1. You must assign devices with Junos OS Release 18.2 onward from firewall policies.



NOTE: There is an option to search for devices in the Selected column on the Assign Devices page. By default, all selected devices are sorted in a list and you can search for devices again, if required.

5. Click **OK** to assign the selected devices to the selected policy.



NOTE: If you do not have permission to certain devices, those devices are not visible while assigning devices to a new or existing policy.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Create and Manage Policy Versions

IN THIS SECTION

- [Create Policy Snapshots | 733](#)
- [Manage Policy Versions | 733](#)
- [Roll Back Policy Versions | 734](#)
- [Compare Policy Versions | 734](#)

You create a policy version by taking a snapshot of another policy. You can create versions for all types of policies including All Devices, Group, Device, and Device exceptions.

The maximum number of versions maintained for any policy is 60. If the maximum limit is reached, you must delete the unwanted versions before saving a new version. Versioning and rollback are independent operations for each policy.

For example, if you take a snapshot of a group firewall policy, or roll back to a previous firewall policy version, it does not change the version for all device policy rules; you must separately version each policy rule.

Create Policy Snapshots

To create a policy version:

1. Select **Configure > IPS Policy > Policies**.
2. Select the check box next to the policy for which you are taking a snapshot, and then right-click the policy or click **More**.
A list of actions appears.
3. Select **Manage/Rollback Policy**.
The Manage Version page appears.
4. Click **Create Snapshot**.
The Snapshot Policy page appears.
5. Enter your comments in the Comments field, and click **Create** to take a snapshot. The Snapshot Policy window appears, showing the status of the version as it is created.



NOTE: During policy publish, Security Director takes an automatic snapshot of the policy.

Manage Policy Versions

You can view or manage all available versions of a selected policy. You can perform the following tasks on the snapshots:

- Roll back to a specific version.
- View the differences between any two versions (including the current version) of the policy

- Delete one or more versions from the system.

Roll Back Policy Versions

To roll back the selected version so it becomes the current version:

1. Select **Configure > IPS Policy > Policies**.
2. Select the check box next to the policy for which you are rolling back a version, and then right-click the policy or click **More**.
A list of actions appears.
3. Select **Manage/Rollback Policy**.
The Manage Version page appears.
4. Select the version that you want to make as the current version, and click **Rollback**.
The rollback operation replaces all the rules and rule groups of the current version with rules and rule groups from the selected version. For all the shared objects, Object Conflict Resolution (OCR) is done. If there are any conflicts between the versioned data and the current objects in the system, the OCR window is displayed.
5. After finishing any conflict resolution, click Next to view the OCR summary report.
6. Click **Finish** to replace the current policy with the versioned data. A summary of the snapshot policy is shown by clicking **Snapshot**.

Compare Policy Versions

To compare two different versions of a policy:

1. Select **Configure > IPS Policy > Policies**.
2. Select the check box next to the policy for which you want to compare versions, and then right-click the policy or click **More**.
A list of actions appears
3. Select **Manage/Rollback Policy**.
The Manage Version page appears.
4. Select the versions to be compared, and click **Compare**. You can only compare two versions at a time.
The Compare Versions page appears.
5. Click **Compare** to view the results.
A Compare Versions results window appears showing the differences between the selected versions.

The Compare Versions results window has the following sections:

- Policy Property Changes—Shows policy changes for the modified rules.
- Rule Changes—Displays rules that are added, modified, or deleted.
- Column Changes—Shows the differences between the column content for modified rules.

Delete Policy Versions

To delete a policy version:

1. Select **Configure > IPS Policy > Policies**.
2. Right-click the policy or profile or click **More**.
A list of actions appears.
3. Click **Manage/Rollback Policy**.
The Manage Version page appears.
4. Select the policy version you want to delete and click Delete.
A warning message is displayed.
5. Click **Yes** to confirm the deletion.
The selected policy version is deleted.

RELATED DOCUMENTATION

| [Creating IPS Policies](#) | 714

Creating Rule Name Template

Rule name template provides a mechanism to control the rule name generation based on the rule name template. You can use the rule name templates for all types of rules in Firewall, NAT, and IPS policies.

To create a rule name template for policies:

1. Select **Configure > Policies**.
The Policies page appears.
2. Right-click the policy you want to take a snapshot, or select **Rule Name Template Builder** from the More list.
3. The Rule Name Template Builder page appears.
Select the **Enable** check box to use the rule name template.
4. Select the compliance mode.
 - a. Strict Mode—Warns the user with an error message.
 - b. Weak Mode—Warns the user with a warning message.
5. Click the plus sign (+) to add a new template builder name.
You can define a template for a new or cloned rule with the following variables:

- Action
- Constant String
- Custom String
- Date (YYYYMMDD format)
- Date Short
- Egress
- Ingress
- Rule Type
- Time (HHmmss format)
- Time (HHMM format)
- User ID

6. Click **OK** to create a new rule name template.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Export Policies

IN THIS SECTION

- [Export a policy to PDF | 737](#)
- [Export a policy to a ZIP file: | 737](#)

Starting in Security Director Release 16.1, you can export any policies (firewall, IPS, or NAT) in a PDF or ZIP file from their respective Policies landing page.

Export a policy to PDF

- 1. Select **Configure > IPS Policy > Policies**.
The IPS Policies page appears.
- 2. Right-click the policy you want to export or select **Export Policy to PDF** from the More menu.
The Export Policy to PDF page appears.
- 3. Click **Export**.
The selected policy details are exported into a PDF file.

Export a policy to a ZIP file:

- 1. Select **Configure > IPS Policy > Policies**.
The IPS Policies page appears.
- 2. Right-click the policy you want to export or select **Export Policy to Zip File** from the More menu.
The Export Policy page appears.
- 3. Click **Export**.
The selected policy details are exported into a ZIP file.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | Starting in Security Director Release 16.1, you can export any policies (firewall, IPS, or NAT) in a PDF or ZIP file from their respective Policies landing page. |

RELATED DOCUMENTATION

| [Creating IPS Policies](#) | 714

Unassigning Devices to Policies

Once you create a device policy, you can remove the assigned device from it. This allows you to add a preferred device at any time to a device policy. This option is not available for a group policy.

To remove an assigned devices from a device policy:

- 1. Select **Configure > *Policy-Name* > Policies**.

The Policies landing page appears.

2. Select a device policy and then click **More**.

3. Click **Unassign Devices**.

The Unassign Device page appears with a confirmation message.

You can also right-click a policy and select **Unassign Devices**.

4. Click **Yes**.

The assigned device is removed for the selected device policy.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Viewing and Synchronizing Out-of-Band IPS Policy Changes Manually

IN THIS SECTION

- [Viewing Out-of-Band IPS Policy Changes | 739](#)
- [Importing Out-of-Band IPS Policy Changes Manually | 739](#)

Starting in Junos Space Security Director Release 19.4R1, when there is an out-of-band IPS policy change in the device, you can see an icon next to the corresponding policy in device-specific and group IPS policies in Security Director. You can manually synchronize the out-of-band changes for a device-specific policy, only when the automatic synchronization is disabled.

When you hover over the icon next to the policy, the tooltip indicates the out-of-band changes.



NOTE: For devices running Junos OS Release 18.2 and later, you can synchronize the IPS policy changes from standard or unified firewall policies page. For devices with Junos OS Release 18.1 and earlier, you can synchronize the IPS policy changes from the IPS Policies page.

When a device is discovered in Security Director, the Managed Status is displayed as Managed in the Security Devices page. For manual synchronization of out-of-band policy changes, the managed status of the device must be SD Changed, Device Changed, or In Sync. For this, you must update the device atleast once from Security Director. In case of logical system (LSYS) or tenant system (TSYS), root device may show the status as Device Changed if a policy is assigned to it. Update the root device so that the status is In Sync.



NOTE: Out-of-band changes are not supported if more than one policy is assigned to a device or if rules are configured in All Devices Policy Pre/Post policies.

Viewing Out-of-Band IPS Policy Changes

To view out-of-band IPS policy changes:

1. Select **Configure > IPS Policy > Policies**.

The IPS Policies page appears. An icon is displayed for the policies indicating the out-of-band policy changes.

2. Right-click the policy or select **View Device Policy Changes** from the More menu.

The Out of Band Changes page appears.

3. Click **View** to view the configuration changes for a device in CLI and XML format.

The view configuration page for the device is displayed.

After viewing the changes, you can choose to import or reject the out-of-band changes from the device.

4. Click **OK**.



NOTE: To reject all the out-of-band changes, select **Reject all changes** option. The icon next to the policy will be cleared and the policy changes from the device will not be imported into Security Director. During the subsequent update from Security Director, the out-of-band changes will be overwritten in the device.

To import the out-of-band changes to Security Director, see "[Importing Out-of-Band IPS Policy Changes Manually](#)" on page 739.

Importing Out-of-Band IPS Policy Changes Manually

To import out-of-band IPS policy changes:

1. Select **Configure > IPS Policy > Policies**.

The IPS Policies page appears. An icon is displayed for the policies indicating the out-of-band policy changes.

2. Right-click the policy or select **View Device Policy Changes** from the More menu.

The Out of Band Changes page appears.

3. Select **Select Changes from Device** to accept the out of band IPS policy changes from a device.
4. Select a device and click **OK**.



NOTE: In the case of group policy, you can view all the devices where the policy is associated, but you can select only one device and import the changes. After selecting a device, click **Affected Devices** to see all the devices where the policy is assigned.

In case of both, group policy and device specific policy, an icon is seen next to the device(s) indicating the out-of-band changes.

The Import Device Configuration Changes page appears.

5. Select the IPS policy and click **Next**.
Objects with conflicts are displayed, if any.
6. Select objects and choose a conflict resolution type. Resolve any conflicts after you verify the information, if needed.
7. Click **Finish**.

A summary of the configuration changes is displayed.

You can download the summary report as a ZIP file. The *summaryreport.zip* file contains the complete rules report as a PDF.

8. Click **OK** to complete the import process.

The Job Details page is displayed with status of the import job.

9. Click **OK**.

The policies page is displayed with an icon which indicates that the policy was edited and needs publishing to the device.

10. Click **Publish** to publish the changes.

During the subsequent update from Security Director, the out-of-band changes will be overwritten in the device(s).

RELATED DOCUMENTATION

[Out-of-Band Changes Overview | 1487](#)

[About the Policy Sync Settings Page | 1482](#)

[Viewing the Details of a Job in Security Director | 200](#)

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 741](#)
- [Clone Policies or Objects | 741](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating IPS Policies | 714](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 742](#)
- [Replace Policies and Objects | 742](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.

3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

[Creating IPS Policies | 714](#)

Assigning Policies and Profiles to Domains

You can assign or reassign policies or profiles to different domains when it is first configured and whenever you want to implement a change. You can assign only one policy or profile at a time. Before assigning a policy or profile to another domain, Security Director checks for the validity of the move. If the move is not acceptable, a warning message appears.

To assign a policy or profile to a domain:

1. Select **Configure** and select the landing page for the type of policy or profile that you are assigning to a domain.
2. From the landing page, right-click the policy or profile or click **More**.
A list of actions appears.
3. Select **Assign <Policy or Profile> to Domain**.

The Assign <Policy or Profile> to Domain page appears.



NOTE: <Policy or Profile> is the name of the policy or profile that you are assigning to a domain.

4. Select the required items to assign to a domain.
5. Enable this option to ignore warning messages, if any.
6. Click **Assign**.

A policy or profile is assigned to a domain.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

IPS Policies Main Page Fields

Use the IPS Policies main page to get an overall, high-level view of your IPS policy settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 221 on page 744](#) describes the fields on this page.

Table 221: IPS Policies Main Page Fields

| Field | Description |
|---------------|--|
| Seq. | Policy sequence number in relation to the entire sequence. |
| Name | Name of the IPS policy. |
| Rules | Total number of rules created for an IPS policy. |
| Devices | Total number of devices on which the IPS policy is published. |
| Publish State | <p>Displays the status of the IPS policy configuration.</p> <ul style="list-style-type: none"> • Not Published—IPS policy is created but not published. • Published—Configuration is published to all devices involved in the policy. • Partially Published—Configuration is published to only fewer devices involved in the IPS policy. • Re-publish Required—Modifications are made to the IPS policy configuration after it is published. |
| Created By | Login name of the operator who created the IPS policy . |
| Last Modified | Time when the IPS policy was last modified . |
| Modified By | Login name of the operator who last modified the IPS policy . |
| Domain | Domain name of security device, which is autopopulated once you select the device. For example: global, system. |

RELATED DOCUMENTATION

| | |
|----------------------------------|--|
| Creating IPS Policies 714 | |
| Understanding IPS Policies 710 | |

IPS Policy-Devices

IN THIS CHAPTER

- [Understanding IPS Policies | 746](#)
- [Devices with IPS Policies Main Page Fields | 748](#)

Understanding IPS Policies

An Intrusion prevention system (IPS) policy enables you to selectively enforce various attack detection and prevention techniques on network traffic passing through an IPS-enabled device. There are two types of policy options:

- **Group Policy**—select this option, when you want to push a configuration to a group of devices. You can create rules for a group policy.

During a device assignment for a group policy, only devices from the current and child domains (with view parent enabled) are listed. Devices in the child domain with view parent disabled are not listed. Not all the group policies of the Global domain are visible in the child domain. Group policies of the Global domain (including All device policy) are not visible to the child domain, if the view parent of that child domain is disabled. Only the group policies of the Global domain, which has devices from the child domain assigned to it, are visible in the child domain. If there is a group policy in global domain with devices from both D1 and the Global domains assigned to it, only this group policy of the Global domain is visible in the D1 domain along with only the D1 domain devices. No other devices, that is the Device-Exception policy, of the Global domain is visible in the D1 domain.

You cannot edit a group policy of the Global domain from the child domain. This is true for All Devices policy as well. Modifying the policy, deletion of the policy, managing a snapshot, snapshot policy and acquiring the policy lock is also not allowed. Similarly, you cannot perform these actions on the Device-Exception policy of the D1 domain from the Global domain. You can prioritize group policies from the current domain. Group policies from the other domains are not listed.

- **Device Policy**—Select this option, when you want to push a unique IPS policy configuration per device. You can create device rules for a device IPS policy.

Security Director views a logical system or tenant system like it does any other security device, and it takes ownership of the security configuration of the logical system or tenant system. In Security Director, each logical system or tenant system is managed as a unique security device.

During a device assignment for a device policy, only devices from the current domain are listed.



NOTE: If Security Director discovers the root logical system, the root LSYS discovers all other user LSYS and TSYS inside the device.

An IPS policy consists of rulebases and each rulebase contains a set of rules. It allows you to define policy rules to match a section of traffic based on a zone, network, and application, and then take active or passive preventive actions on that traffic.

An IPS rulebase protects your network from attacks by using attack objects to detect known and unknown attacks. It detects attacks based on stateful signature and protocol anomalies.

An exempt rulebase works in conjunction with the IPS rulebase. You must have rules in the IPS rulebase before you can create exempt rules. If traffic matches a rule in the IPS rulebase, the IPS policy attempts to match the traffic against the exempt rulebase before performing the specified action or creating a log record for the event. If the IPS policy detects traffic that matches the source or destination pair and the attack objects specified in the exempt rulebase, it automatically exempts that traffic from attack detection.

Configure an exempt rulebase in the following conditions:

- When an IPS rule uses an attack object group that contains one or more attack objects that produce false positives or irrelevant log records.
- When you want to exclude a specific source, destination, or source-destination pair from matching an IPS rule. This prevents IPS from generating unnecessary alarms.

After you create an IPS policy by adding rules in one or more rulebases, you can publish or update the policy. You can also view a list of security devices with IPS policies assigned to them. This list assists you in viewing the details of all the IPS policies and rules assigned per device.

RELATED DOCUMENTATION

[Creating IPS Policies | 714](#)

[Creating IPS Policy Rules | 716](#)

[Publishing Policies | 730](#)

[Updating Policies on Devices | 730](#)

[Assigning Policies and Profiles to Domains | 743](#)

Devices with IPS Policies Main Page Fields

Use this page to get an overall, high-level view of your IPS policy device settings. This page helps you track the number of *rules*, and the order of the rules, of all the policies that are assigned to a device. You can filter and sort this information to get a better understanding of what you want to view. [Table 222 on page 748](#) describes the fields on this page.

Table 222: Devices with IPS Policies Main Page Fields

| Field | Description |
|--------------------|--|
| Device Name | Name of the device. |
| Rules | Total number of rules of all the policies assigned to the device. Click the link to view the rules order that is deployed on the device. |
| IP Address | IP address of the device. |
| Platform | Displays the supported device name. For example: SRX Series, vSRX. |
| Assigned Services | Displays the policy name when a device is assigned to an IPS policy. |
| Pending Services | Displays the versioning information for the IPS policy. |
| Installed Services | Displays the policies that are published and updated to the device. |
| Domain | Domain name of security device, which is autopopulated once you select the device. For example: global, system. |

RELATED DOCUMENTATION

[Understanding IPS Policies | 710](#)

[Creating IPS Policies | 714](#)

[Creating IPS Policy Rules | 716](#)

IPS Policy-Signatures

IN THIS CHAPTER

- [Understanding IPS Signatures | 749](#)
- [Creating IPS Signatures | 750](#)
- [Creating IPS Signature Static Groups | 759](#)
- [Creating IPS Signature Dynamic Groups | 760](#)
- [Edit and Clone Policies and Objects | 769](#)
- [Delete and Replace Policies and Objects | 770](#)
- [IPS Policy Signatures Main Page Fields | 771](#)

Understanding IPS Signatures

The intrusion prevention system (IPS) compares traffic against signatures of known threats and blocks traffic when a threat is detected. Network intrusions are attacks on, or other misuses of, network resources. To detect such activity, IPS uses signatures. A signature specifies the types of network intrusions that you want the device to detect and report. Whenever a matching traffic pattern to a signature is found, IPS triggers the alarm and blocks the traffic from reaching its destination. The signature database is one of the major components of IPS. It contains definitions of different objects, such as attack objects, application signature objects, and service objects, which are used in defining IPS policy rules.

To keep IPS policies organized and manageable, attack objects can be grouped. An attack object group can contain one or more types of attack objects. Junos OS supports the following three types of attack groups:

- **IPS signature**—Contains objects present in the signature database.
- **Dynamic group**—Contains attack objects based on certain matching criteria. During a signature update, dynamic group membership is automatically updated based on the matching criteria for that group. For example, you can dynamically group the attacks related to a specific application using dynamic attack group filters.

- Static group—Contains a list of attacks that are specified in the attack definition.

Signature attack objects use a stateful attack signature (a pattern that always exists within a specific section of the attack) to detect known attacks. They also include:

- The protocol or service used to perpetrate the attack and the context in which the attack occurs.
- The properties that are specific to signature attacks—attack context, attack direction, attack pattern, and protocol-specific parameters (TCP, UDP, ICMP, or IP header fields).

Signatures can produce false positives, because certain normal network activity can be construed as malicious. For example, some network applications or operating systems send out numerous ICMP messages, which a signature-based detection system might interpret as an attempt by an attacker to map out a network segment. You can minimize false positives by editing your signature parameters (to fine-tune your signatures).

You can create, filter, modify, or delete IPS signatures on the IPS Policy Signatures page in Security Director. You can download and install the signature database to security devices. You can automate the download and install process by scheduling the download and install tasks and configuring these tasks to recur at specific time intervals. This ensures that your signature database is current.

RELATED DOCUMENTATION

[Creating IPS Signatures | 750](#)

[Creating IPS Signature Static Groups | 759](#)

[Creating IPS Signature Dynamic Groups | 760](#)

[Viewing Policy and Shared Object Details](#)

Creating IPS Signatures

Before You Begin

- Read the ["Understanding IPS Signatures" on page 749](#) topic
- Have a basic understanding of what attacks and patterns are.
- Review the IPS policy signatures main page for an understanding of your current data set. See ["IPS Policy Signatures Main Page Fields" on page 771](#) for field descriptions.

Use the Create IPS Signature page to monitor and prevent intrusions. The intrusion prevention system (IPS) compares traffic against signatures of known threats and blocks traffic when a threat is detected.

The signature database is one of the major components of IPS. It contains definitions of different objects, such as *attack objects*, application signature objects, and service objects, which are used in defining IPS policy rules. There are more than 8,500 signatures for identifying anomalies, attacks, spyware, and applications.

To keep IPS policies organized and manageable, attack objects can be grouped. An attack object group can contain one or more types of attack objects. Junos OS supports the following three types of attack groups:

- IPS signature—Contains objects present in the signature database.
- Dynamic—Contains attack objects based on certain matching criteria.
- Static—Contains customer-defined attack groups and can be configured through the CLI.

To configure an IPS signature:

1. Select **Configure > IPS Policy > Signatures**.
2. Click **Create**.
3. Select **IPS Signature**.
4. Complete the configuration according to the guidelines provided in the [Table 223 on page 751](#).
5. Click **OK**.

A new IPS signature with the predefined configurations is created. You can use this signature in IPS policies.

Table 223: IPS Signatures Settings

| Settings | Guidelines |
|-------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Description | Enter a description for the IPS signature; maximum length is 1024 characters. |
| Category | Enter a predefined or a new category. Use this category to group the attack objects. Within each category, attack objects are grouped by severity. For example: FTP, TROJAN, SNMP. |

Table 223: IPS Signatures Settings *(Continued)*

| Settings | Guidelines |
|----------|---|
| Action | <p>Select an action you want IPS signature to take when the monitored traffic matches the attack objects specified in the rules:</p> <ul style="list-style-type: none"> • None—No action is taken. Use this action to only generate logs for some traffic. • Close Client & Server—Closes the connection and sends an RST packet to both the client and the server. • Close Client—Closes the connection and sends an RST packet to the client but not to the server. • Close Server—Closes the connection and sends an RST packet to the server but not to the client. • Ignore—Stops scanning traffic for the rest of the connection if an attack match is found. IPS disables the rulebase for the specific connection. • Drop—Drops all packets associated with the connection, preventing traffic for the connection from reaching its destination. Use this action to drop connections for traffic that is not prone to spoofing. • Drop Packet—Drops a matching packet before it can reach its destination but does not close the connection. Use this action to drop packets for attacks in traffic that is prone to spoofing, such as UDP traffic. Dropping a connection for such traffic could result in a denial of service that prevents you from receiving traffic from a legitimate source-IP address. |
| Keywords | <p>Enter unique identifiers that can be used to search and sort log records. Keywords should related to the attack and the attack object. For example, Amanda Amindexd Remote Overflow.</p> |

Table 223: IPS Signatures Settings *(Continued)*

| Settings | Guidelines |
|----------|---|
| Severity | <p>Select a severity level for the attack that the signature will report:</p> <ul style="list-style-type: none">• Critical—Contains attack objects matching exploits that attempt to evade detection, cause a network device to crash, or gain system-level privileges.• Info—Contains attack objects matching normal, harmless traffic containing URLs, DNS lookup failures, SNMP public community strings, and peer-to-peer (P2P) parameters. You can use informational attack objects to obtain information about your network.• Major—Contains attack objects matching exploits that attempt to disrupt a service, gain user-level access to a network device, or activate a Trojan horse previously loaded on a device.• Minor—Contains attack objects matching exploits that detect reconnaissance efforts attempting to access vital information through directory traversal or information leaks.• Warning—Contains attack objects matching exploits that attempt to obtain noncritical information or scan a network with a scanning tool. <p>The most dangerous level is critical, which attempts to crash your server or gain control of your network. Informational is the least dangerous level and is used by network administrators to discover holes in their security systems.</p> |

Signature Details

Table 223: IPS Signatures Settings *(Continued)*

| Settings | Guidelines |
|----------------|--|
| Binding | <p>Select an option to detect the service or protocol that the attack uses to enter your network:</p> <ul style="list-style-type: none"> • IP—Allows IPS to match the signature for a specified IP protocol type. • ICMP—Allows IPS to match the signature for a specified ICMP ID. • TCP—Allows IPS to match the signature for specified TCP port(s). • UDP—Allows IPS to match the signature for specified UDP port(s). • RPC—Allows IPS to match the signature for a specified remote procedure call (RPC) program number. The RPC protocol is used by distributed processing applications to handle interaction between processes remotely. • Service—Allows IPS to match the signature for a specified service. • IPv6 or ICMPv6—Specifies the header match information for the signature attack. You can specify that IPS search a packet for a pattern match for IPv6 and ICMPv6 header information. |
| Protocol | Enter the name of the network protocol. For example: IGMP, IP-IP. |
| Next Header | <p>Enter the type of IP protocol for the header that immediately follows the IPv6 header.</p> <p>For example, if the device performs IPsec on exchanged packets, the Next Header value is probably 50 (ESP extension header) or 51 (AH extension header).</p> |
| Port Range(s) | Enter the port ranges for TCP and UDP protocol types. |
| Program Number | Enter the program ID for the RPC protocol. |
| Service | <p>Specify the service that the attack uses to enter your network. You can select the specific service used to perpetrate the attack as the service binding.</p> <p>For example, suppose you select the DISCARD service. Discard protocol is an Application Layer protocol where TCP/9, UDP/9 describes the process for discarding TCP or UDP data sent to port 9.</p> |

Table 223: IPS Signatures Settings *(Continued)*

| Settings | Guidelines |
|-----------------|---|
| Time Scope | <p>Select the scope within which the count of an attack occurs:</p> <ul style="list-style-type: none"> • Source IP—Detect attacks from the source address for the specified number of times, regardless of the destination address. • Dest IP—Detect attacks sent to the destination address for the specified number of times, regardless of the source address. • Peer—Detect attacks between source and destination IP addresses of the sessions for the specified number of times. |
| Time Count | <p>Specify the number of times that the attack object must detect an attack within the specified scope before the device considers the attack object to match the attack.</p> <p>The range is from 0 through 4,294,967,295.</p> |
| Match Assurance | <p>Specify this filter to track attack objects based on the frequency that the attack produces a false positive on your network.</p> <p>Select an option:</p> <ul style="list-style-type: none"> • High—Provides information on the frequently tracked false positive occurrences. • Medium—Provides information on the occasionally tracked false positive occurrences. • Low—Provides information on the rarely tracked false positive occurrences. |

Table 223: IPS Signatures Settings *(Continued)*

| Settings | Guidelines |
|--------------------|--|
| Performance Impact | <p>Specify this filter to filter out slow-performing attack objects. You can use this filter to only select the appropriate attacks based on performance impacts.</p> <p>Select an option:</p> <ul style="list-style-type: none"> • High—Add a high performance impact attack object that is vulnerable to an attack. The performance impact of signatures is high7 to high9, where the application identification is slow. • Medium—Add a medium performance impact attack object that is vulnerable to an attack. The performance impact of signatures is medium4 to medium6, where the application identification is normal. • Low—Add a low performance impact attack object that is vulnerable to an attack. The performance impact of signatures is low1 to low3, where the application identification is faster. • Unknown—Set all attack objects to unknown by default. As you fine-tune IPS to your network traffic, you can change this setting to help you track performance impact. The performance impact of signatures is 0 = unknown, where the application identification is also unknown. |
| Expression | <p>Enter a Boolean expression of attack members used to identify the way attack members should be matched.</p> <p>For example: m01 AND m02, where m01, m02 are the attack members.</p> |
| Scope | <p>Specify if the attack is matched within a session or across transactions in a session:</p> <ul style="list-style-type: none"> • session—Allows multiple matches for the object within the same session. • transaction—Matches the object across multiple transactions that occur within the same session. |
| Reset | <p>Enable this option to generate a new log each time an attack is detected within the same session. If this option is not selected, then the attack is logged only once per session.</p> |

Table 223: IPS Signatures Settings *(Continued)*

| Settings | Guidelines |
|----------------------|---|
| Ordered | <p>Enable this option to create a compound attack object that must match each member signature or protocol anomaly in the order you specify. If you do not specify an order, the compound attack object still must match all members, but the pattern or protocol anomalies can appear in the attack in any order.</p> <p>A compound attack object detects attacks that use multiple methods to exploit a vulnerability.</p> |
| Add Signature | |
| Context | <p>Select an option to define the location of the signature.</p> <p>If you know the service and the specific service context, specify that service and then specify the appropriate service contexts.</p> <p>If you know the service, but are unsure of the specific service context, specify one of the general contexts.</p> <p>For example: line—Specify this context to detect a pattern match within a specific line within your network traffic.</p> |
| Direction | <p>Specify the connection direction of the attack:</p> <ul style="list-style-type: none"> • Client to Server—Detects the attack only in client-to-server traffic. • Server to Client—Detects the attack only in server-to-client traffic. • Any—Detects the attack in either direction. <p>Using a single direction (instead of Any) improves performance, reduces false positives, and increases detection accuracy.</p> |
| Pattern | <p>Enter a signature pattern of the attack you want to detect. A signature is a pattern that always exists within an attack; if the attack is present, so is the signature.</p> <p>To create the attack pattern, you must first analyze the attack to detect a pattern (such as a segment of code, a URL, or a value in a packet header), and then create a syntactical expression that represents that pattern.</p> <p>For example: Use <code>\[<character-set>\]</code> for case-insensitive matches.</p> |

Table 223: IPS Signatures Settings (Continued)

| Settings | Guidelines |
|---------------------|--|
| Regex | <p>Enter a regular expression to define rules to match malicious or unwanted behavior over the network.</p> <p>For example: For the syntax <code>\[hello\]</code>, the expected pattern is hello, which is case sensitive.</p> <p>The example matches can be: hElLo, HEllO, and heLLO.</p> |
| Negated | <p>Select this option to exclude the specified pattern from being matched.</p> <p>Negating a pattern means that the attack is considered matched if the pattern defined in the attack does not match the specified pattern.</p> |
| Add Anomaly | |
| Anomaly | <p>Select an option to detect abnormal or ambiguous messages within a connection according to the set of rules for the particular protocol being used.</p> <p>Protocol anomaly detection works by finding deviations from protocol standards, most often defined by RFCs and common RFC extensions.</p> |
| Direction | <p>Specify the connection direction of the attack:</p> <ul style="list-style-type: none"> • Client to Server—Detects the attack only in client-to-server traffic. • Server to Client—Detects the attack only in server-to-client traffic. • Any—Detects the attack in either direction. <p>Using a single direction (instead of Any) improves performance, reduces false positives, and increases detection accuracy.</p> |
| Supported Detectors | <p>Click the Supported Detectors link to display a table that shows the device platforms and the version number of the IPS protocol detector currently running on the device.</p> <p>For example:</p> <ul style="list-style-type: none"> • Platform - SRX550 • Detector Version - 9.1.140080400 |

RELATED DOCUMENTATION

[Understanding IPS Signatures | 749](#)

[Creating IPS Signature Static Groups | 759](#)

[Creating IPS Signature Dynamic Groups | 760](#)

[Viewing Policy and Shared Object Details](#)

Creating IPS Signature Static Groups

Before You Begin

- Read the ["Understanding IPS Signatures" on page 749](#) topic.
- Have a basic understanding of what attacks are.
- Read the Creating IPS Signatures topic. See ["Creating IPS Signatures" on page 750](#).
- Review the IPS signatures main page for an understanding of your current data set. See ["IPS Policy Signatures Main Page Fields" on page 771](#) for field descriptions.

Use the IPS Signature Static Group page to configure a specific, finite set of attack objects or groups.

Static groups require more maintenance than dynamic groups because you must manually add or remove attack objects in a static group to change its members.

Use an IPS signature static group for the following tasks:

- Group your custom attack objects.
- Dynamic—Contains attack objects based on certain matching criteria.
- Static—Contains customer-defined attack groups and can be configured through the CLI.

To configure an IPS signature static group:

1. Select **Configure > IPS Policy > Signatures**.
2. Click **Create**.
3. Select **Static Group**.
4. Complete the configuration according to the guidelines provided in the [Table 224 on page 760](#).
5. Click **OK**.

A new IPS signature static group with the predefined configurations is created. You can use this signature in IPS policies.

Table 224: IPS Signature Static Group Settings

| Settings | Guidelines |
|--------------------|---|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Group Members | <p>Add or delete group members of a static group.</p> <p>Group members include custom groups whose members are predefined attacks, predefined attack groups, custom attacks, or custom dynamic groups.</p> <p>A custom group defines:</p> <ul style="list-style-type: none">• A specific set of critical attack objects that you know your network is vulnerable against.• A specific set of informational attack objects that you need to stay aware of events on your network. |
| Add IPS Signatures | |
| IPS Signatures | Select one or more available IPS signatures to include in a static group. |

RELATED DOCUMENTATION

| |
|---|
| Understanding IPS Signatures 749 |
| Creating IPS Signatures 750 |
| Creating IPS Signature Dynamic Groups 760 |
| Viewing Policy and Shared Object Details |


Creating IPS Signature Dynamic Groups

Before You Begin

- Read the "Understanding IPS Signatures" on page 749 topic.
- Have a basic understanding of what attacks and patterns are.
- Read the Creating IPS Signatures topic. See "Creating IPS Signatures" on page 750.

- Review the IPS signatures main page for an understanding of your current data set. See ["IPS Policy Signatures Main Page Fields"](#) on page 771 for field descriptions.

Use the IPS Signature Dynamic Group page to configure attack objects based on a certain matching criteria. Dynamic group members can be either predefined or custom attack objects. During a signature update, the dynamic group membership is automatically updated based on the matching criteria for that group. For example, you can dynamically group the attacks related to a specific application using the dynamic attack group filters.

 **NOTE:** A dynamic group cannot contain another group (predefined, static, or dynamic). However, you can include a dynamic group as a member of a static group.

You use dynamic groups so that an attack database update automatically populates the group with relevant members. This eliminates the need to review each new signature to determine if you need to use it in your existing security policy.

To configure an IPS signature dynamic group:

1. Select **Configure > IPS Policy > Signatures**.
2. Click **Create**.
3. Select **Dynamic Group**.
4. Complete the configuration according to the guidelines provided in the [Table 225 on page 761](#).
5. Click **OK**.

A new IPS signature dynamic group with the predefined configurations is created. You can use this signature in IPS policies.

Table 225: IPS Signature Dynamic Group Settings

| Settings | Guidelines |
|----------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |

Table 225: IPS Signature Dynamic Group Settings *(Continued)*

| Settings | Guidelines |
|-------------|--|
| Severity | <p>Specify a severity filter to add attack objects based on attack severity levels.</p> <p>Select an option:</p> <ul style="list-style-type: none"> • Info—Provides information about activity on the network, such as applications that are running, potential vulnerable software, and best practice violations. Generally, information attacks are not malicious activity. • Major—Provides information of attacks that try to gain user level access to a system to crash a particular service or application. • Critical—Provides information of attacks that try to gain root level access to a system to crash the entire system. • Minor—Provides information of attacks that try to perform information leakage techniques, including those that exploit vulnerabilities to reveal information about the target. • Warning—Issues a warning when attack matches. Warning attacks are attacks that are suspicious in nature, such as scans and other reconnaissance attempts. |
| Service | Select one or more available services to include in a dynamic group. |
| Category | Select one or more available categories to include in a dynamic group. |
| Recommended | <p>Specify this filter to add recommended Juniper Networks predefined attack objects to the dynamic group, or specify non-recommended attack objects to the dynamic attack group.</p> <p>Specify an option:</p> <ul style="list-style-type: none"> • Yes—Adds predefined attacks recommended by Juniper Networks to the dynamic group. • No—Specifies non-recommended attack objects in the dynamic attack group. |

Table 225: IPS Signature Dynamic Group Settings (*Continued*)

| Settings | Guidelines |
|-----------|--|
| Direction | <p>Specify this filter to add predefined attacks to the dynamic group based on the direction specified in the attacks.</p> <p>Select an option:</p> <ul style="list-style-type: none"> Any—Monitors traffic from client-to-server or server-to-client. CTS—Monitors traffic from client-to-server only. Most attacks occur over client-to-server connections. STC—Monitors traffic from server-to-client only. Expression—Matches the expression with member name patterns using Boolean operators. A member name is the name of an attack member in an IPS attack: <ul style="list-style-type: none"> AND—If both member name patterns match, the expression matches. OR—If either of the member name patterns match, the expression matches. <p>For SRX Series devices, expression and order cannot be configured together. Only one of them can be specified. For example: m01 AND m02, where m01, m02 are the attack members.</p> |

Table 225: IPS Signature Dynamic Group Settings (Continued)

| Settings | Guidelines |
|--------------------|--|
| Performance Impact | <p>Specify this filter to filter out slow-performing attack objects. You can use this filter to only select the appropriate attacks based on performance impacts.</p> <p>Select an option:</p> <ul style="list-style-type: none"> • High—Add a high performance impact attack object that is vulnerable to an attack. The performance impact of signatures is high7 to high9, where the application identification is slow. • Medium—Add a medium performance impact attack object that is vulnerable to an attack. The performance impact of signatures is medium4 to medium6, where the application identification is normal. • Low—Add a low performance impact attack object that is vulnerable to an attack. The performance impact of signatures is low1 to low3, where the application identification is faster. • Unknown—Set all attack objects to unknown by default. As you fine-tune IPS to your network traffic, you can change this setting to help you track performance impact. The performance impact of signatures is 0 = unknown, where the application identification is also unknown. |

Table 225: IPS Signature Dynamic Group Settings *(Continued)*

| Settings | Guidelines |
|-----------------|---|
| False Positives | <p>Specify this filter to track attack objects based on the frequency that the attack produces a false positive on your network.</p> <p>Select an option:</p> <ul style="list-style-type: none"> • High—Add a high performance impact attack object that is vulnerable to an attack. The performance impact of signatures is high7 to high9, where the application identification is slow. • Medium—Add a medium performance impact attack object that is vulnerable to an attack. The performance impact of signatures is medium4 to medium6, where the application identification is normal. • Low—Add a low performance impact attack object that is vulnerable to an attack. The performance impact of signatures is low1 to low3, where the application identification is faster. • Unknown—Set all attack objects to unknown by default. As you fine-tune IPS to your network traffic, you can change this setting to help you track performance impact. The performance impact of signatures is 0 = unknown, where the application identification is also unknown. |
| Object Type | <p>Specify this filter to group attack objects by type (anomaly or signature).</p> <p>Select an option:</p> <ul style="list-style-type: none"> • Protocol Anomaly—Detects unknown or sophisticated attacks that violate protocol specifications (RFCs and common RFC extensions). You cannot create new protocol anomalies, but you can configure a new attack object that controls how your device handles a predefined protocol anomaly when detected. • Signature—Detects known attacks using stateful attack signatures. A stateful attack signature is a pattern that always exists within a specific section of the attack. Stateful signature attack objects also include the protocol or service used to perpetrate the attack and the context in which the attack occurs. |

Table 225: IPS Signature Dynamic Group Settings (*Continued*)

| Settings | Guidelines |
|--------------------|---|
| Vendor Description | <p>Specify this filter to add attack objects based on the application that is vulnerable to the attack.</p> <ul style="list-style-type: none"> Product Type—Specify this filter to include signatures belonging to the selected product type. <p>NOTE: Starting in Junos OS Release 18.2 onward, only the product type value All is supported. Therefore, all vendor names are displayed in the drop-down.</p> <p>For Junos OS Release 18.1 and earlier, you can select a value for the product type and corresponding vendor name is displayed in the drop-down.</p> Vendor Name—Select the name of the vendor for the dynamic signature. For example: Juniper Networks. Title/Product Name—Specify this filter to include signatures belonging to the selected product name. The product names are populated only when you select a product type and a vendor. |

Table 225: IPS Signature Dynamic Group Settings *(Continued)*

| Settings | Guidelines |
|------------|--|
| CVSS-Score | <p>Specify the Common Vulnerability Scoring System (CVSS) to be used as a filter criteria to include IPS signatures as part of the dynamic group.</p> <ul style="list-style-type: none"> • Less-than—Select the Enable check box if the CVSS score of the attack must be less than the value you specified. <p>Select the CVSS score as a filter criterion to include IPS signatures as a part of the dynamic group. The range is 0 through 10.</p> <ul style="list-style-type: none"> • Greater-than—Select the Enable check box if the CVSS score of the attack must be greater than the value you specified. <p>Select the CVSS score as a filter criterion to include IPS signatures as a part of the dynamic group. The range is 0 through 10.</p> <p>NOTE: CVSS-Score is supported on devices running Junos OS Release 18.2 onward. If you try to publish IPS policy on devices running Junos OS Release 18.1 or earlier, then publish will fail.</p> <p>The CVSS is an open framework, which is used to rate the severity and risk of computer system security.</p> <p>Scores range from 0 to 10, with 10 being the most severe. The CVSS assessment measures three areas of concern:</p> <ul style="list-style-type: none"> • Base Metrics for qualities intrinsic to a vulnerability • Temporal Metrics for characteristics that evolve over the lifetime of vulnerability • Environmental Metrics for vulnerabilities that depend on a particular implementation or environment <p>A numerical score is generated for each of these metric groups.</p> |

Table 225: IPS Signature Dynamic Group Settings (*Continued*)

| Settings | Guidelines |
|--------------------|--|
| Age of attack | <ul style="list-style-type: none"> Select the Enable check box if the age of attack (in years) in the signature must be less than the value you specified. <p>Select the age of the attack as a filter criterion to include IPS signatures as a part of the dynamic group. The range is 1 through 100.</p> <ul style="list-style-type: none"> Select the Enable check box if the age of attack (in years) in the signature must be greater than the value you specified. <p>Select the age of the attack as a filter criterion to include IPS signatures as part of the dynamic group. The range is 1 through 100.</p> <p>NOTE: Age of attack is supported on devices running Junos OS Release 18.2 onward. If you try to publish IPS policy on devices running Junos OS Release 18.1 or earlier, then publish will fail.</p> |
| File Type | <p>Select the file type of the attack as a filter criterion; for example, PDF.</p> <p>NOTE: File Type is supported on devices running Junos OS Release 18.2 onward. If you try to publish IPS policy on devices running Junos OS Release 18.1 or earlier, then publish will fail.</p> |
| Vulnerability Type | <p>Select the vulnerability type of the attack as a filter criterion; for example, overflow.</p> <p>NOTE: Vulnerability Type is supported on devices running Junos OS Release 18.2 onward. If you try to publish IPS policy on devices running Junos OS Release 18.1 or earlier, then publish will fail.</p> <p>Vulnerabilities are the intersection of three elements: a system susceptibility or flaw, attacker access to the flaw, and attacker capability to exploit the flaw. Using vulnerability type, you can perform vulnerability scanning. Vulnerability scanning is an inspection of the potential points of exploit on a network to identify security issues. A vulnerability scan detects and classifies system weaknesses in a networks and predicts the effectiveness of countermeasures.</p> |

RELATED DOCUMENTATION

[Understanding IPS Signatures | 749](#)

[Creating IPS Signatures | 750](#)

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 769](#)
- [Clone Policies or Objects | 769](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to edit, and then click the pencil icon.
The Edit window appears, showing the same options as when creating a new policy or object.
3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating IPS Signatures | 750](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 770](#)
- [Replace Policies and Objects | 770](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to delete, and then select the minus sign (-).

An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.
3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

| [Creating IPS Signatures](#) | 750

IPS Policy Signatures Main Page Fields

Use the IPS Policy Signatures main page to get an overall, high-level view of your IPS signature settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 226 on page 771](#) describes the fields on this page.

Table 226: IPS Policy Signatures Main Page Fields

| Field | Description |
|--------------------|--|
| Name | Name of the IPS signature. |
| Age of attack | Age of the attack (in years) to be used as a filter criteria to include IPS signatures as part of the dynamic group. |
| CVSS-Score | Common Vulnerability Scoring System (CVSS) to be used as a filter criteria to include IPS signatures as part of the dynamic group. |
| File Type | File type of the attack to be used as a filter criteria; for example, flash. |
| Vulnerability Type | Vulnerability type of the attack to be used as a filter criteria; for example, overflow. |
| Severity | Severity level of the attack that the signature will report. |

Table 226: IPS Policy Signatures Main Page Fields *(Continued)*

| Field | Description |
|--------------------|---|
| Category | Category of the attack objects. |
| Object Type | Objects that are used in defining IDP policy rules. |
| Recommended | Predefined attacks recommended by Juniper Networks to the dynamic group. |
| Action | An IPS signature action taken when the monitored traffic matches the attack objects specified in the rules. |
| Pre-defined/Custom | Detected known attack patterns and protocol anomalies within the network traffic. |
| Domain | Domain name of security device. This information is auto-populated once you select the device. For example: global, system. |

RELATED DOCUMENTATION

[Understanding IPS Signatures | 749](#)

[Creating IPS Signatures | 750](#)

IPS Policy-Templates

IN THIS CHAPTER

- [Understanding IPS Policy Templates | 773](#)
- [Creating IPS Policy Templates | 774](#)
- [Edit and Clone Policies and Objects | 775](#)
- [Delete and Replace Policies and Objects | 776](#)
- [IPS Policy Templates Main Page Fields | 777](#)

Understanding IPS Policy Templates

Juniper Networks provides predefined policy templates that you can use as a starting point for creating your own policies. Each policy template contains rules that use the default actions associated with the attack objects. You can customize these templates to work on your network by selecting your own source and destination addresses and choosing intrusion prevention system (IPS) actions that reflect your security needs. You can modify the template either by using the Advance option in the IPS Policy page or cloning the template.

IPS policies are collections of rules and rulebases. An IPS policy supports two types of rulebases—IPS rulebase and exempt rulebase. A rulebase is an ordered set of rules that use a specific detection method to identify and prevent attacks. When a rule is matched, it means that an attack has been detected in the network traffic, triggering the action for that rule. The IPS system performs the specified action and protects your network from that attack. Each rulebase can have multiple rules—you determine the sequence in which rules are applied to network traffic by placing them in the desired order. Each rulebase in the IPS system uses specific detection methods to identify and prevent attacks. For more information on the IPS policy rulebases, see ["Understanding IPS Policies" on page 710](#).

RELATED DOCUMENTATION

[Creating IPS Policy Templates | 774](#)

[Creating IPS Policy Rules | 716](#)

Creating IPS Policy Templates

Before You Begin

- Read the ["Understanding IPS Policy Templates" on page 773](#) topic.
- Read the ["Understanding IPS Policies" on page 710](#) topic.
- Configure network interfaces.
- Review the IPS policy template main page for an understanding of your current data set. See ["IPS Policy Templates Main Page Fields" on page 777](#) for field descriptions.

Use the IPS Policy Templates page to configure intrusion prevention system (IPS) policy templates. Juniper Networks provides predefined policy templates that you can use as a guideline for creating policies. Each template is set of rules of a specific rulebase type. You can modify the template either by using the Advance option in the IPS Policy page or cloning the template. This approach allows you to make changes to the policy and to avoid future issues due to changes in the policy templates.

To configure an IPS policy template:

1. Select **Configure > IPS Policy > Policy Template**.
2. Click **Create**.
3. Complete the configuration according to the guidelines provided in the [Table 227 on page 774](#).
4. Click **OK**.

A new IPS policy template with your configurations is created. After you create the policy template, add rules in one or more rulebases to select that policy template as the active policy template on your policy. See ["Creating IPS Policy Rules" on page 716](#). You can use this policy template in IPS policies. To enable the IPS policy, apply it to a domain; see ["Assigning Policies and Profiles to Domains" on page 743](#).

Table 227: IPS Policy Template Settings

| Settings | Guidelines |
|-------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters. |
| Description | Enter a description for the policy template; maximum length is 1024 characters. |

RELATED DOCUMENTATION

[Understanding IPS Policy Templates | 773](#)

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 775](#)
- [Clone Policies or Objects | 775](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to edit, and then click the pencil icon.
The Edit window appears, showing the same options as when creating a new policy or object.
3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating IPS Policy Templates | 774](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 776](#)
- [Replace Policies and Objects | 776](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to delete, and then select the minus sign (-).

An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.
3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

| [Creating IPS Policy Templates](#) | 774

IPS Policy Templates Main Page Fields

Use the IPS Policy Templates main page to get an overall, high-level view of your policy template settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 228 on page 777](#) describes the fields on this page.

Table 228: IPS Policy Templates Main Page Fields

| Field | Description |
|--------------|---|
| Name | Name of the IPS policy template. |
| No. of Rules | Total number of rules created for an IPS policy template. |
| Description | Description of the IPS policy template. |
| Domain | Domain name of security device, which is autopopulated once you select the device. For example: global, system. |

RELATED DOCUMENTATION

| [Creating IPS Policy Templates](#) | 774

NAT Policy-Policies

IN THIS CHAPTER

- [NAT Overview | 779](#)
- [NAT Global Address Book Overview | 783](#)
- [Creating NAT Policies | 784](#)
- [Publishing Policies | 786](#)
- [NAT Policy Rules Main Page Field | 787](#)
- [Creating NAT Rules | 789](#)
- [Updating Policies on Devices | 794](#)
- [Edit and Clone Policies and Objects | 795](#)
- [Delete and Replace Policies and Objects | 797](#)
- [Assigning Policies and Profiles to Domains | 798](#)
- [Comparing Policies | 799](#)
- [Create and Manage Policy Versions | 799](#)
- [Export Policies | 802](#)
- [Assigning Devices to Policies | 803](#)
- [Unassigning Devices to Policies | 804](#)
- [Creating Rule Name Template | 805](#)
- [Viewing and Synchronizing Out-of-Band NAT Policy Changes Manually | 806](#)
- [Configuring NAT Rule Sets | 809](#)
- [Auto Grouping | 809](#)
- [NAT Policies Main Page Fields | 810](#)

NAT Overview

Network Address Translation (NAT) is a form of network masquerading where you can hide devices between the zones or interfaces. A trust zone is a segment of the network where security measures are

applied. It is usually assigned to the internal LAN. An untrust zone is the Internet. NAT modifies the IP addresses of the packets moving between the trust and untrust zones.

Whenever a packet arrives at the NAT device, the device performs a translation on the packet's IP address by rewriting it with an IP address that was specified for external use. After translation, the packet appears to have originated from the gateway rather than from the original device within the network. This helps you hide internal IP addresses from the other networks and keep your network secure.

Using NAT also allows you to use more internal IP addresses. Because these IP addresses are hidden, there is no risk of conflict with an IP address from a different network. This helps you conserve IP addresses.

Junos Space Security Director supports three types of NAT:

- **Source NAT**--Translates the source IP address of a packet leaving the trust zone (outbound traffic). It translates the traffic originating from the device in the trust zone. Using source NAT, an internal device can access the network by using the IP addresses specified in the NAT policy. The following use cases are supported with IPv6 NAT:
 - Translation from one IPv6 subnet to another IPv6 subnet without Port Address Translation (PAT)
 - Translation from IPv4 addresses to IPv6 prefixes along with IPv4 address translation
 - Translation from IPv6 host(s) to IPv6 host(s) with or without PAT
 - Translation from IPv6 host(s) to IPv4 host(s) with or without PAT
 - Translation from IPv4 host(s) to IPv6 host(s) with or without PAT
- **Destination NAT**--Translates the destination IP address of a packet entering the trust zone (inbound traffic). It translates the traffic originating from a device outside the trust zone. Using destination NAT, an external device can send packets to a hidden internal device. The following use cases are supported with IPv6 NAT:
 - Mapping of one IPv6 subnet to another IPv6 subnet
 - Mapping between one IPv6 host and another IPv6 host
 - Mapping of one IPv6 host (and optional port number) to another special IPv6 host (and optional port number)
 - Mapping of one IPv6 host (and optional port number) to another special IPv4 host (and optional port number)
 - Mapping of one IPv4 host (and optional port number) to another special IPv6 host (and optional port number)

- Static NAT-- Always translates a private IP address to the same public IP address. It translates traffic from both sides of the network (both source and destination). For example, a webserver with a private IP address can access the Internet using a static, one-to-one address translation. The following use cases are supported with IPv6 NAT:
 - Mapping of one IPv6 subnet to another IPv6 subnet
 - Mapping between one IPv6 host and another IPv6 host
 - Mapping between IPv4 address a.b.c.d and IPv6 address Prefix::a.b.c.d
 - Mapping between IPv4 host(s) and IPv6 host(s)
 - Mapping between IPv6 host(s) and IPv4 host(s)

Table 1 shows the persistent NAT support for different source NAT and destination NAT addresses.

Table 229: Persistent NAT Support

| Source NAT Address | Translated Address | Destination NAT Address | Persistent NAT |
|--------------------|--------------------|-------------------------|----------------|
| IPv4 | IPv6 | IPv4 | No |
| IPv4 | IPv6 | IPv6 | No |
| IPv6 | IPv4 | IPv4 | Yes |
| IPv6 | IPv6 | IPv6 | No |

Table 2 and Table 3 show the translated address pool selection for source NAT, destination NAT, and static NAT addresses.

Table 230: Translated Address Pool Selection for Source NAT

| Source NAT Address | Destination Address | Pool Address |
|--------------------|---------------------------------------|--------------|
| IPv4 | IPv4 | IPv4 |
| IPv4 | IPv6 - Subnet must be greater than 96 | IPv6 |

Table 230: Translated Address Pool Selection for Source NAT (Continued)

| Source NAT Address | Destination Address | Pool Address |
|--------------------|---------------------|--------------|
| IPv6 | IPv4 | IPv4 |
| IPv6 | IPv6 | IPv6 |

Table 231: Translated Address Pool Selection for Destination NAT And Static NAT

| Source NAT Address | Destination Address | Pool Address |
|--------------------|---------------------------------------|--------------|
| IPv4 | IPv4 | IPv4 or IPv6 |
| IPv4 | IPv6 - Subnet must be greater than 96 | IPv4 or IPv6 |
| IPv6 | IPv4 | IPv4 |
| IPv6 | IPv6 | IPv4 or IPv6 |

- For source NAT, the proxy NDP is available for NAT pool addresses. For destination NAT and static NAT, the proxy NDP is available for destination NAT addresses.
- A NAT pool can have a single IPv6 subnet or multiple IPv6 hosts.
- You cannot configure the overflow pool if the address type is IPv6.
- NAT pools permit address entries of only one version type: IPv4 or IPv6.

Junos Space Security Director provides you with a workflow where you can create and apply NAT policies on devices in a network.

Security Director views each logical system or tenant system as any other security device and takes ownership of the security configuration of the logical system or tenant system. In Security Director, each logical system or tenant system is managed as a unique security device.



NOTE: If the root logical system is discovered, all other user logical systems inside the device, will also be discovered.

Because an SRX Series logical system device does not support interface NAT, Security Director also does not allow interface NAT configuration of logical system. The logical system cannot participate in group NAT in Security Director. For a device NAT policy, the interface based translation selection and pool with Overflow Pool as interface are not supported in logical systems. The configuration is validated during the publishing of the NAT policy to avoid commit failures in the device.

RELATED DOCUMENTATION

| [Creating NAT Policies](#) | 784

NAT Global Address Book Overview

IN THIS SECTION

- [Differences Between Global and Zone-Based Address Books](#) | 783

In Junos OS Release 11.2 and later releases, the address book is moved from the zone level to the device global level. This permits objects to be used across many zones and avoids inefficient use of resources. This change also permits nested groups to be configured within the address book, removing redundancy from repeating address objects.

The Security Director application manages its address book at the global level, assigning objects to devices that are required to create policies. If the device is capable of using a global address book, Security Director pushes address objects used in the policies to the device global address book. Nested address group capability is used in the publish and update feature of Security Director depending on the device capability.

Differences Between Global and Zone-Based Address Books

The global address book is supported in Junos OS Release 11.2 and later releases.

- An address book is not configured within a specific zone; therefore, one address book can be associated with multiple zones.
- If a global address book is defined, you cannot create zone-based address books.
- By default, there is an address book called global associated with all zones.

- A zone can be attached to only one address book in addition to the global address book, which contains all zones by default.
- Address name overlaps are possible between the global address book and zone address book. For example, Security Director will attempt to match an address in the zone-based address book first, and, if the address is not found, the global address book is checked. You must ensure that the correct address objects are used in the policy.
- NAT rules can use address objects only from the global address book. They cannot use addresses from user-defined address books.



NOTE: Beginning in Junos OS Release 12.1, zone-based address books are no longer supported. Devices running Junos OS Release 12.1 or later must use the global address book.



NOTE: Beginning in Junos OS Release 11.2, NAT rules can use address objects from the global address book. However, Security Director will still continue to define the NAT address in the rule itself rather than referring to the global address book.

RELATED DOCUMENTATION

| [NAT Overview](#) | 779

Creating NAT Policies

Before You Begin

- Read the "[NAT Overview](#)" on page 779 topic.
- Read the "[NAT Global Address Book Overview](#)" on page 783 topic.
- Review the NAT policies main page for an understanding of your current data set. See "[NAT Policies Main Page Fields](#)" on page 810 descriptions.

Use the Network Address Translation (NAT) policy page to perform basic NAT configuration.

NAT is a form of network masquerading where you can hide devices between zones or interfaces. NAT modifies the IP addresses of the packets moving between the trust and untrust zones. A trust zone is a segment of the network where security measures are applied. It is usually assigned to the internal LAN. An untrust zone is the Internet.

Whenever a packet arrives at a NAT device, the device performs a translation on the IP address of the packet by rewriting it with an IP address that was specified for external use. After translation, the packet appears to have originated from the gateway rather than from the original device within the network. This process hides your internal IP addresses from the other networks and keeps your network secure.

Also, NAT permits you to use more internal IP addresses. Because these IP addresses are hidden, there is no risk of conflict with an IP address from a different network. This feature helps you conserve IP addresses.

To configure a NAT policy:

1. Select **Configure > NAT Policy > Policies**.
2. Click the plus sign (+) to create a new NAT policy.
3. Complete the configuration according to the guidelines provided in [Table 232 on page 785](#).
4. A new NAT policy is created. After you create a NAT policy, add rules in one or more rulebases to select that policy to be the active policy on your device, see ["Creating NAT Rules" on page 789](#). You can also assign NAT policy to a domain; see ["Assigning Policies and Profiles to Domains" on page 798](#).

Table 232: NAT Policy Settings

| Setting | Guideline |
|-------------------------|---|
| Names | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters. |
| Description | Enter a description for the NAT policy; maximum length is 255 characters. |
| <i>Policy Options</i> | |
| Auto ARP Configuration | Select this option to respond to incoming Address Resolution Protocol (ARP) requests. ARP translates IPv4 addresses to MAC addresses. |
| Type | Select the type of NAT policy you want to create: <ul style="list-style-type: none"> • Group policy • Device policy |
| <i>Device Selection</i> | |

Table 232: NAT Policy Settings (*Continued*)

| Setting | Guideline |
|------------------------|--|
| Device Selection | <p>Select the devices on which the group policy will be published. Select these devices from the Available column and move them to the Selected column.</p> <p>You can also search for the devices in the search field available in both Available and Selected columns. You can search these devices by entering the device name, device IP address, or device tag.</p> <p>NOTE: During a device assignment for a group policy, only devices from the current and child domains (with view parent enabled) are listed. Devices in the child domain with view parent disabled are not listed.</p> |
| Devices | Select the device on which the device policy will be published. During a device assignment for a device policy, only devices from the current <i>domain</i> are listed. |
| <i>Policy Sequence</i> | |
| Policy Placement | Select an option to place the newly created global policy either before the existing device policies or after the device policies. Once you select the policy placement for your global policy, you can choose the sequence number. |
| Policy Sequence No. | Click Select to reorder your NAT policy among the existing device policies. |

RELATED DOCUMENTATION

[NAT Overview](#) | 779

[NAT Global Address Book Overview](#) | 783

Publishing Policies

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups, with prerules in the High priority group publishing first, before prerules in the Medium and Low priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other policies in the same priority group. However, such policies do not need to be republished in order for their changes in priority or precedence to take effect for the policies that are implicitly changed by the explicit changes to the republished policy.

To publish a policy:

1. Select **Configure > Policy-Name Policy > Policies**.
2. Select the policy that you want to publish and click **Publish**. The Publish Policy page appears.
3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the policy is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

4. Select **Schedule** at a later time if you want to schedule and publish the configuration later.
5. Select **Run** now if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

[Updating Policies on Devices | 794](#)

NAT Policy Rules Main Page Field

Use this page to get an overall, high-level view of your NAT policy rules settings. Details help you keep track of the number and order of rules per policy. You can filter and sort this information to get a better understanding of what you want to view. [Table 233 on page 788](#) describes the fields on this page.

Table 233: NAT Policy Rules Main Page Field

| Field | Description |
|-------------------------------|--|
| Name | Unique name for the rule. |
| NAT Type | Type of the NAT rule such as source, destination, or static. |
| Source Ingress | Displays the source ingress type, For example: zone, interface, or routing instance. |
| Source Address | Displays the source address of the NAT policy. |
| Source Port | Displays the source port of the NAT policy. |
| Protocol | Displays the protocol to permit or deny the traffic. |
| Destination Egress | Displays the destination egress type. For example: zone, interface, or routing interface. |
| Destination Address | Displays the destination address of the policy. |
| Destination Port | Displays the destination port of the policy. |
| Service | Service to permit or deny for the source and destination type NAT rules. This is supported for devices running Junos OS Release 12.1X47. |
| Translated Packet Source | Source address translated to an IP address for packet matching. |
| Translated Packet Destination | Destination address translated to an IP address for packet matching. |
| Description | Description of the NAT rule. |

Starting in Junos Space Security Director Release 16.1, the address, service, and NAT pools objects can be created, managed, dragged and dropped to the required rules from the NAT policy rules page. From the Shared Objects list, select **Show Addresses**, **Show Services**, or **Show Pools** to see the required shared objects. To create a new address, service, or NAT pool, click the plus sign (+). You can also modify,

delete, and manage these objects. You can search for any object by its name and IP address in the search field available in the top right corner.

You can drag more than one object and drop on the respective columns in the policy tabular view. Security Director ensure that objects are dropped in the supported columns and it does not permit to drop under any other columns. The drag and drop of objects is supported on the Source Address, Destination Address, and Service columns. You can drag source or destination NAT pool and drop into source or destination NAT rule. A single or multiple addresses, services, and NAT pools can be dragged and dropped across rules. To view multiple objects in an address, service, or NAT pool column, click the small horizontal triangle to expand the columns.

You can drag and drop the shared objects such as addresses and services to the corresponding cells in the rules grid. You can drag and drop data from source ingress to destination egress and vice versa, source port to destination port and vice versa, and source address to destination address and vice versa. You can also drag and drop the port, address, and protocols across the rules in the grid.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.1 | Starting in Junos Space Security Director Release 16.1, the address, service, and NAT pools objects can be created, managed, dragged and dropped to the required rules from the NAT policy rules page. |

RELATED DOCUMENTATION

| [Creating NAT Rules](#) | 789

Creating NAT Rules

Before You Begin

- Read the "[NAT Overview](#)" on [page 779](#) topic.
- Read the "[Creating NAT Policies](#)" on [page 784](#) topic.

NAT processing centers on the evaluation of NAT rule sets and rules. A rule set determines the overall direction of the traffic to be processed. Once a rule set that matches the traffic has been found, each rule in the rule set is evaluated in order for a match. NAT rules can match on the following packet information:

- Source and destination address
- Source port (for source and static NAT only)
- Destination port

The first rule in the rule set that matches the traffic is used. If a packet matches a rule in a rule set during session establishment, traffic is processed according to the action specified by that rule.

When you create a new NAT policy, click on the NAT policy name to configure the rules. You can configure the following types of NAT rules:

- Source
- Static
- Destination

Depending on the type of rule you have chosen, some fields in the rule will not be applicable. In addition to defining rules between zones and interfaces, you can define NAT rules with virtual routers defined on the device. These rules can be successfully published and updated on the device.

To configure a NAT rule:

1. Select **Configure > NAT Policies > Policies**.
2. Click the NAT policy name.
The Rules page appears.
3. Add a rule by clicking **Create**. Select the type of rule you want to add (source, static, or destination).
4. Complete the configuration according to the guidelines provided in [Table 234 on page 790](#).
5. Click **Save**.

A new NAT rule is configured for a NAT policy.

Table 234: NAT Rules Settings

| Setting | Guideline |
|---------|---|
| Seq. | Displays the sequence number assigned to the NAT rule. |
| Name | Select the name of the NAT policy that you want to add a rule to. |

Table 234: NAT Rules Settings *(Continued)*

| Setting | Guideline |
|----------------|--|
| NAT Type | <p>Select the type of NAT rule:</p> <ul style="list-style-type: none"> • Source • Static • Destination |
| Source Ingress | <p>Click the Source Ingress field to configure the ingress type.</p> <ul style="list-style-type: none"> • Ingress Type—Select an ingress type: zone, interface, or routing instance. • From the appropriate selector, select the zones, interfaces, or routing instance that you want to associate the rule to, from the Available column. <p>For the Routing Instance option, you can select one or more of the available virtual routers on the device. For the group NAT policy, you will see a consolidated list of all virtual routers on all devices that the policy is assigned to.</p> <ul style="list-style-type: none"> • Click OK. |
| Source Address | <p>Click the Source Address field to assign the source address for the policy, from the Available list.</p> <p>Starting in Security Director Release 21.3R1 hot patch v3, while creating NAT rules for a group policy, you can select a polymorphic address as source address.</p> |
| Source Port | <p>Click the Source Port field to configure the source port for the policy.</p> <ul style="list-style-type: none"> • Enter a maximum of eight ports and port ranges separated by commas. • Select the required port set from the Available list. <p>Create a source port inline by clicking Add New Source Port.</p> |
| Protocol | <p>Select the protocol from the Available list to permit or deny traffic.</p> |

Table 234: NAT Rules Settings *(Continued)*

| Setting | Guideline |
|---------------------|--|
| Destination Egress | <p>Click the Destination Egress field to configure the egress type.</p> <ul style="list-style-type: none"> • Select an egress type: zone, interface, or routing instance. • From the appropriate selector, select the zones, interfaces, or routing instance that you want to associate the rule to, from the Available column. • Click OK. |
| Destination Address | <p>Click the Destination Address field to assign the destination address for the policy, from the Available list. Create a destination address inline by clicking Add New Destination Address.</p> <p>Starting in Security Director Release 21.3R1 hot patch v3, while creating NAT rules for a group policy, you can select a polymorphic address as the destination address.</p> <p>NOTE: Polymorphic addresses are not supported in static NAT destination addresses.</p> |
| Destination Port | <p>Click the Destination Port field to configure the destination port for the policy.</p> <ul style="list-style-type: none"> • Enter a maximum of eight ports and port ranges separated by commas. Devices running Junos OS Release 12.1X47 and later support multiple ports and ranges, in the same way as Source ports. • Select the required port set from the Available list. <p>Create a destination port inline by clicking Add New Source Port.</p> |
| Service | <p>Select the service to permit or deny for the source and destination type NAT rules. This is supported for devices running Junos OS Release 12.1X47.</p> <p>Select one of the following options:</p> <ul style="list-style-type: none"> • Include Any Service • Include Specific |

Table 234: NAT Rules Settings *(Continued)*

| Setting | Guideline |
|--------------------------|---|
| Translated Packet Source | <p>Click Translated Packet Source.</p> <p>Select the appropriate source address. This option is available only for the source NAT rule.</p> <p>You can select the translation type as None, Interface, or Pool.</p> <ul style="list-style-type: none"> • None—No translation is required. • Interface—Enable interface NAT with or without port overloading. • Pool- IP addresses are used from the NAT pool. <p>If you select Pool, then select the source NAT pool from where the IP addresses are used for translation.</p> <p>If you enable proxy ARP, the switch captures and routes traffic to the intended destination.</p> <p>Enable the Persistent check box to ensure that all requests from the same internal transport address are mapped to the same reflexive transport address.</p> <p>Configure the Persistent NAT type:</p> <ul style="list-style-type: none"> • Permit any remote host—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. (The reflexive transport address is the public IP address and port created by the NAT device closest to the STUN server.) Any external host can send a packet to the internal host by sending the packet to the reflexive transport address. • Permit target host—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. An external host can send a packet to an internal host by sending the packet to the reflexive transport address. The internal host must have previously sent a packet to the external host's IP address. • Permit target host port—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. An external host can send a packet to an internal host by sending the packet to the reflexive transport address. The internal host must have previously sent a packet to the external host's IP address and port. <p>Select Inactivity timeout. It is the amount of time, in seconds, that the persistent NAT binding remains in the Juniper Networks device's memory when all the sessions of the binding entry are gone. When the configured timeout is reached, the binding is removed from memory. The range is 60 through 7200 seconds.</p> <p>Select the Maximum session number. It is the maximum number of sessions with which a persistent NAT binding can be associated. For example, if the max-session-number of the</p> |

Table 234: NAT Rules Settings *(Continued)*

| Setting | Guideline |
|-------------------------------|--|
| | <p>persistent NAT rule is 65,536, then a 65,537th session cannot be established if that session uses the persistent NAT binding created from the persistent NAT rule. The range is 8 through 65,536. The default is 30 sessions.</p> <p>Enable address mapping to allow requests from a specific internal IP address to be mapped to the same reflexive IP address.</p> |
| Translated Packet Destination | <p>Click Translated Packet Destination.</p> <p>Select the appropriate destination address. This option is available only for the destination NAT rule.</p> <p>You can select the translation type as None or Pool.</p> <ul style="list-style-type: none"> • None—No translation is required. • Pool- IP addresses are used from the NAT pool. <p>If you select Pool, then select the destination pool from where the IP addresses are used for translation.</p> |
| Description | Enter a description for the NAT rule; maximum length is 4096 characters. |

RELATED DOCUMENTATION

[Creating NAT Policies](#) | 784

[NAT Overview](#) | 779

Updating Policies on Devices

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups, with prerules in the High priority group publishing first, before prerules in the Medium and Low priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other

policies in the same priority group. However, such policies do not need to be republished in order for their changes in priority or precedence to take effect for the policies that are implicitly changed by the explicit changes to the republished policy.

To update a policy:

1. Select **Configure** > *Policy-Name Policy* > **Policies**.
2. Select the policy that you want to update and click **Update**. The Update Policy page appears.
3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the policy is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

4. Select **Schedule** at a later time if you want to schedule and publish the configuration later.
5. Select **Run** now if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

[Publishing Policies | 786](#)

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 796](#)
- [Clone Policies or Objects | 796](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating NAT Policies](#) | 784

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 797](#)
- [Replace Policies and Objects | 797](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.
3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

[Creating NAT Policies | 784](#)

Assigning Policies and Profiles to Domains

You can assign or reassign policies or profiles to different domains when it is first configured and whenever you want to implement a change. You can assign only one policy or profile at a time. Before assigning a policy or profile to another domain, Security Director checks for the validity of the move. If the move is not acceptable, a warning message appears.

To assign a policy or profile to a domain:

1. Select **Configure** and select the landing page for the type of policy or profile that you are assigning to a domain.
2. From the landing page, right-click the policy or profile or click More.
A list of actions appears.
3. Select Assign *<Policy or Profile>* to Domain.
The Assign *<Policy or Profile>* to Domain page appears.



NOTE: *<Policy or Profile>* is the name of the policy or profile that you are assigning to a domain.

4. Select the required items to assign to a domain.
5. Enable this option to ignore warning messages, if any.
6. Click **Assign**.
A policy or profile is assigned to a domain.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Comparing Policies

Security Director enables you to compare two policies.

To compare any two policies:

1. Select **Configure** and select the landing page for the type of policy that you want to compare. For example, Select **Firewall Policies**.
2. From the landing page, right-click the policy or click **More**.
A list of actions appears.
3. Select **Compare Policy** to compare with other policies.
The Compare Policy page appears.
4. Select the policy to compare with, and click **OK**.
The compare result of the two policies are displayed.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Create and Manage Policy Versions

IN THIS SECTION

- [Create Policy Snapshots | 800](#)
- [Manage Policy Versions | 800](#)
- [Roll Back Policy Versions | 800](#)
- [Compare Policy Versions | 801](#)
- [Delete Policy Versions | 801](#)

You create a policy version by taking a snapshot of another policy. You can create versions for all types of policies including All Devices, Group, Device, and Device exceptions.

The maximum number of versions maintained for any policy is 60. If the maximum limit is reached, you must delete the unwanted versions before saving a new version. Versioning and rollback are independent operations for each policy.

For example, if you take a snapshot of a group firewall policy, or roll back to a previous firewall policy version, it does not change the version for all device policy rules; you must separately version each policy rule.

Create Policy Snapshots

To create a policy version:

1. Select **Configure > NAT Policy > Policies**.
2. Select the check box next to the policy for which you are taking a snapshot, and then right-click the policy or click **More**.
A list of actions appears.
3. Select **Manage/Rollback Policy**.
The Manage Version page appears.
4. Click **Create Snapshot**.
The Snapshot Policy page appears.
5. Enter your comments in the Comments field, and click **Create** to take a snapshot. The Snapshot Policy window appears, showing the status of the version as it is created.



NOTE: During policy publish, Security Director takes an automatic snapshot of the policy.

Manage Policy Versions

You can view or manage all available versions of a selected policy. You can perform the following tasks on the snapshots:

- Roll back to a specific version.
- View the differences between any two versions (including the current version) of the policy
- Delete one or more versions from the system.

Roll Back Policy Versions

To roll back the selected version so it becomes the current version:

1. Select **Configure > NAT Policy > Policies**.

2. Select the check box next to the policy for which you are rolling back a version, and then right-click the policy or click **More**.

A list of actions appears.

3. Select **Manage/Rollback Policy**.

The Manage Version page appears.

4. Select the version that you want to make as the current version, and click **Rollback**.

The rollback operation replaces all the rules and rule groups of the current version with rules and rule groups from the selected version. For all the shared objects, Object Conflict Resolution (OCR) is done. If there are any conflicts between the versioned data and the current objects in the system, the OCR window is displayed.

5. After finishing any conflict resolution, click Next to view the OCR summary report.

6. Click **Finish** to replace the current policy with the versioned data. A summary of the snapshot policy is shown by clicking **Snapshot**.

Compare Policy Versions

To compare two different versions of a policy:

1. Select **Configure > NAT Policy > Policies**.

2. Select the check box next to the policy for which you want to compare versions, and then right-click the policy or click **More**.

A list of actions appears

3. Select **Manage/Rollback Policy**.

The Manage Version page appears.

4. Select the versions to be compared, and click **Compare**. You can only compare two versions at a time.

The Compare Versions page appears.

5. Click **Compare** to view the results.

A Compare Versions results window appears showing the differences between the selected versions.

The Compare Versions results window has the following sections:

- Policy Property Changes—Shows policy changes for the modified rules.
- Rule Changes—Displays rules that are added, modified, or deleted.
- Column Changes—Shows the differences between the column content for modified rules.

Delete Policy Versions

To delete a policy version:

1. Select **Configure > NAT Policy > Policies**.

2. Right-click the policy or profile or click **More**.

A list of actions appears.

3. Click **Manage/Rollback Policy**.

The Manage Version page appears.

4. Select the policy version you want to delete and click Delete.

A warning message is displayed.

5. Click **Yes** to confirm the deletion.

The selected policy version is deleted.

RELATED DOCUMENTATION

| [Creating NAT Policies](#) | 784

Export Policies

IN THIS SECTION

- [Export a policy to PDF](#) | 802
- [Export a policy to a ZIP file:](#) | 802

Starting in Security Director Release 16.1, you can export any policies (firewall, IPS, or NAT) in a PDF or ZIP file from their respective Policies landing page.

Export a policy to PDF

1. Select **Configure > NAT Policy > Policies**.

The NAT Policies page appears.

2. Right-click the policy you want to export or select **Export Policy to PDF** from the More menu.

The Export Policy to PDF page appears.

3. Click **Export**.

The selected policy details are exported into a PDF file.

Export a policy to a ZIP file:

1. Select **Configure > NAT Policy > Policies**.

The NAT Policies page appears.

- 2. Right-click the policy you want to export or select **Export Policy to Zip File** from the More menu.

The Export Policy page appears.

- 3. Click **Export**.

The selected policy details are exported into a ZIP file.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.1 | Starting in Security Director Release 16.1, you can export any policies (firewall, IPS, or NAT) in a PDF or ZIP file from their respective Policies landing page. |

RELATED DOCUMENTATION

| [Creating NAT Policies](#) | 784

Assigning Devices to Policies

Once you create a group or device policy, you can assign devices to it.

To assign devices to a policy:

- 1. Select **Configure > Policy-Name Policy > Policies**.

The Policies landing page appears.

- 2. Right-click the policy to which you want to assign devices, or select **Assign Devices** from the More menu.

The Assign Devices page appears. The Name field shows the name of the selected policy and is not editable.

- 3. Select the Show only devices without policy assigned check box.

Only devices that are not assigned to any policy are displayed in the Device Selection section.

- 4. Select the devices you want to add to the policy from the Available column and click the right arrow to move these devices to the Selected column.



NOTE: There is an option to search for devices in the Selected column on the Assign Devices page. By default, all selected devices are sorted in a list and you can search for devices again, if required.

5. Click **OK** to assign the selected devices to the selected policy.



NOTE: If you do not have permission to certain devices, those devices are not visible while assigning devices to a new or existing policy.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Unassigning Devices to Policies

Once you create a device policy, you can remove the assigned device from it. This allows you to add a preferred device at any time to a device policy. This option is not available for a group policy.

To remove an assigned devices from a device policy:

1. Select **Configure** > *Policy-Name* > **Policies**.

The Policies landing page appears.

2. Select a device policy and then click **More**.

3. Click **Unassign Devices**

The Unassign Device page appears with a confirmation message.

You can also right-click a policy and select **Unassign Devices**.

4. Click **Yes**.

The assigned device is removed for the selected device policy.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

Creating Rule Name Template

Rule name template provides a mechanism to control the rule name generation based on the rule name template. You can use the rule name templates for all types of rules in Firewall, NAT, and IPS policies.

To create a rule name template for policies:

1. Select **Configure > Policies**.

The Policies page appears.

2. Right-click the policy you want to take a snapshot, or select **Rule Name Template Builder** from the More list.

3. The Rule Name Template Builder page appears.

Select the Enable check box to use the rule name template.

4. Select the compliance mode.

- a. Strict Mode—Warns the user with an error message.

- b. Weak Mode—Warns the user with a warning message.

5. Click the plus sign (+) to add a new template builder name.

You can define a template for a new or cloned rule with the following variables:

- Action
- Constant String
- Custom String
- Date (YYYYMMDD format)
- Date Short
- Egress
- Ingress
- Rule Type
- Time (HHmmss format)
- Time (HHMM format)

- User ID

6. Click **OK** to create a new rule name template.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Viewing and Synchronizing Out-of-Band NAT Policy Changes Manually

IN THIS SECTION

- [Viewing Out-of-Band NAT Policy Changes | 807](#)
- [Importing Out-of-Band NAT Policy Changes Manually | 807](#)

Starting in Junos Space Security Director Release 20.1R1, when there is an out-of-band NAT policy change in the device, you can see an icon next to the corresponding policy in device-specific and group NAT policies in Security Director. You can manually synchronize the out-of-band changes for a device-specific policy, only when the automatic synchronization is disabled.

When you hover over the icon next to the policy, the tooltip indicates the out-of-band changes.

When a device is discovered in Security Director, the Managed Status is displayed as Managed in the Security Devices page. For manual synchronization of out-of-band policy changes, the managed status of the device must be SD Changed, Device Changed, or In Sync. You must update the device at least once from Security Director. In case of logical system (LSYS) or tenant system (TSYS), root device may show the status as Device Changed if a policy is assigned to it. Update the root device so that the status is In Sync.

After you synchronize the policy changes, the policy shows that you'll need to republish the policy. A dummy publish and update has to be performed in order to set the managed status as In sync.

The custom rule group in a policy is not supported. If the policy has a custom rule group, then the custom rule group is deleted after synchronizing the policy and all the rules are grouped inside device-specific or predefined rule groups.

**NOTE:**

- Out-of-band changes are not supported if more than one policy is assigned to a device or if rules are configured in All Devices Policy Pre/Post policies.
- The out-of-band changes does not support synchronization of duplicate rule-sets in a NAT policy.

Viewing Out-of-Band NAT Policy Changes

To view out-of-band NAT policy changes:

1. Select **Configure > NAT Policy > Policies**.

The NAT Policies page appears. An icon is displayed for the policies indicating the out-of-band policy changes.

2. Right-click the policy or select **View Device Policy Changes** from the More menu.

The Out of Band Changes page appears.

3. Click **View** to view the configuration changes for a device in CLI and XML format.

The view configuration page for the device is displayed.

After viewing the changes, you can choose to import or reject the out-of-band changes from the device.

4. Click **OK**.



NOTE: To reject all the out-of-band changes, select **Reject all changes** option. The icon next to the policy will be cleared and the policy changes from the device will not be imported into Security Director. During the subsequent update from Security Director, the out-of-band changes will be overwritten in the device.

To import the out-of-band changes to Security Director, see "[Importing Out-of-Band NAT Policy Changes Manually](#)" on page 807.

Importing Out-of-Band NAT Policy Changes Manually

To import out-of-band NAT policy changes:

1. Select **Configure > NAT Policy > Policies**.

The NAT Policies page appears. An icon is displayed for the policies indicating the out-of-band policy changes.

2. Right-click the policy or select **View Device Policy Changes** from the More menu.

The Out of Band Changes page appears.

3. Select **Select Changes from Device** to accept the out of band NAT policy changes from a device.
4. Select a device and click **OK**.



NOTE: In the case of group policy, you can view all the devices where the policy is associated, but you can select only one device and import the changes. After selecting a device, click **Affected Devices** to see all the devices where the policy is assigned.

In case of both, group policy and device specific policy, an icon is seen next to the device(s) indicating the out-of-band changes.

The Import Device Configuration Changes page appears.

5. Select the NAT policy and click **Next**.
Objects with conflicts are displayed, if any.
6. Select objects and choose a conflict resolution type. Resolve any conflicts after you verify the information, if needed.

7. Click **Finish**.

A summary of the configuration changes is displayed.

You can download the summary report as a ZIP file. The *summaryreport.zip* file contains the complete rules report as a PDF.

8. Click **OK** to complete the import process.

The Job Details page is displayed with status of the import job.

9. Click **OK**.

The policies page is displayed with an icon which indicates that the policy was edited and needs publishing to the device.

10. Click **Publish** to publish the changes.

During the subsequent update from Security Director, the out-of-band changes will be overwritten in the device(s).

RELATED DOCUMENTATION

[Out-of-Band Changes Overview | 1487](#)

[About the Policy Sync Settings Page | 1482](#)

[Viewing the Details of a Job in Security Director | 200](#)

Configuring NAT Rule Sets

A rule set determines the overall direction of the traffic to be processed. For example, a rule set can select traffic from a particular interface or to a specific zone. A rule set can contain multiple rules. Once a rule set is found that matches specific traffic, each rule in the rule set is evaluated for a match. Each rule in the rule set further specifies the traffic to be matched and the action to be taken when traffic matches the rule.

To configure a NAT rule set:

1. Select **Configure > NAT Policy > Policies**.

The NAT Policies page appears.

2. Right-click the NAT policy you want to take a snapshot, or select **Configure Rule Sets** from the More list.

The Configure Rule Sets page appears.

3. Modify the rule set name in the Rule Set column and click **OK** to save the changes.

RELATED DOCUMENTATION

[Creating NAT Policies | 784](#)

[NAT Overview | 779](#)

Auto Grouping

In NAT policies, the rule group name is the same as the rule set name. The rule set name is a combination of source ingress and destination egress values. If you modify the value of source ingress or destination egress and save the changes, the policy rule set name changes and it is pushed to the device. However, because the rule group is specific to Security Director, the rule group name does not change and the modified rule is a part of the existing rule group. Starting in Security Director Release 18.3R1, if you modify the source ingress and destination egress values, you can rearrange the NAT policy rules, and the modified policy rules are grouped based on the rule set name.

To group the rules automatically:

1. Select **Configure>NAT Policies>Policies**.

2. Click a policy.

The corresponding rules page is displayed.

3. Click the Source Ingress and Destination Egress fields and modify the corresponding values.

4. Click **Save**.

5. Right-click the rule that you want to group, or select **Auto Group** from the More list.
A message that the policy is modified is displayed.
6. Click **OK**
A rule group is created based on the corresponding rule set name and the modified rule is moved to the created rule group.

If a rule group already exists with the new rule set name, new rule group will not be created, instead modified rule is grouped under the existing rule group.

RELATED DOCUMENTATION

| [Creating NAT Rules | 789](#)

NAT Policies Main Page Fields

Use Network Address Translation (NAT) for modifying or translating network address information in packet headers. NAT can include the translation of port numbers as well as IP addresses. [Table 235 on page 810](#) describes the fields on this page.

Table 235: NAT Policies Main Page Fields

| Field | Description |
|-------------------|--|
| Name | Name of the NAT policy. |
| Number of Rules | Number of rules assigned to the NAT policy. |
| Number of Devices | Number of devices on which the group or device policies are published. |

Table 235: NAT Policies Main Page Fields *(Continued)*

| Field | Description |
|---------------|---|
| Publish Date | <p>Displays the publish state of the NAT policy configuration. You can verify your NAT configurations before updating them to the device.</p> <ul style="list-style-type: none">• Not Published—NAT policy is created but not published.• Published—Configuration is published to all devices involved in the policy.• Partially Published—Configuration is published to only fewer devices involved in the NAT policy.• Re-publish Required—Modifications are made to the NAT policy configuration after it is published. |
| Last Modified | Last modified date and time of the NAT policy. |
| Modified By | User who modified the NAT policy. |

RELATED DOCUMENTATION

| |
|---|
| Creating NAT Policies 784 |
| NAT Overview 779 |

NAT Policy-Devices

IN THIS CHAPTER

- [Devices with NAT Policies Main Page Fields](#) | 812

Devices with NAT Policies Main Page Fields

Use the Devices with NAT Policies main page to get an overall, high-level view of your NAT policy device settings. You can also use this page when you want to view the details of any number of rules and policies assigned per device. This helps you to keep track of how many rules, and the order of the rules, of all the policies that are assigned to a device. You can filter and sort this information to get a better understanding of what you want to view. [Table 236 on page 812](#) describes the fields on this page.

Table 236: Devices Main Page Fields

| Field | Description |
|--------------------|--|
| Name | Name of the device. |
| IP Address | IP address of the device. |
| Number of Rules | Total number of rules of all the policies assigned to the device. Click the link to view the rules order that is deployed on the device. |
| Number of Policies | Total number of NAT policies assigned to the device. |
| Platform | Displays the supported device name. For example: SRX Series, vSRX. |

RELATED DOCUMENTATION

[Creating NAT Policies](#) | 784

[NAT Overview](#) | 779

NAT Policy-Pools

IN THIS CHAPTER

- [Creating NAT Pools | 814](#)
- [Edit and Clone Policies and Objects | 818](#)
- [Delete and Replace Policies and Objects | 819](#)
- [Show and Delete Unused Policies and Objects | 820](#)
- [Showing Duplicate Policies and Objects | 821](#)
- [Assigning Policies and Profiles to Domains | 822](#)
- [NAT Pools Main Page Fields | 823](#)

Creating NAT Pools

Before You Begin

- Read the ["NAT Overview" on page 779](#) topic
- Review the NAT pools main page for an understanding of your current data set. See ["NAT Pools Main Page Fields" on page 823](#) for field descriptions.

A NAT pool is a set of IP addresses that you can define and use for translation. NAT policies perform address translation by translating internal IP addresses to the addresses in these pools. Unlike static NAT, where there is a one-to-one mapping that includes destination IP address translation in one direction and source IP address translation in the reverse direction, with source NAT, you translate the original source IP address to an IP address in the address pool. With destination NAT, you translate the original destination address to an IP address in the address pool.



NOTE: Do not overlap NAT addresses for source NAT, destination NAT, and static NAT within one routing instance.

To configure a NAT pool:

1. Select **Configure > NAT Policy > Pools**.

2. Click the plus sign (+) to create a new NAT pool.
3. Complete the configuration according to the guidelines provided in [Table 237 on page 815](#).
4. Click **OK**.

A new NAT pool with your configurations is created. You can also assign NAT pools to a domain; see ["Assigning Policies and Profiles to Domains" on page 822](#).

Table 237: NAT Pool Settings

| Setting | Guideline |
|----------------------------|---|
| <i>General Information</i> | |
| Name | Enter a unique string of alphanumeric characters, colons, periods, slashes, dashes, and underscores; no spaces allowed; 31-character maximum. |
| Description | Enter a description for the new NAT pool; maximum length is 255 characters. |
| Pool Type | Select a NAT pool type to configure: <ul style="list-style-type: none"> • Source • Destination |
| Pool Address | Select a NAT pool address or click Create to create a new NAT pool address. |
| <i>Routing Instance</i> | |
| Device | Select a device for a routing instance. |
| Routing Instance | Select the required routing instance from the list of available routing instances for the selected device. |
| Port | Enter the port number for the destination Nat pool type. |

Table 237: NAT Pool Settings (*Continued*)

| Setting | Guideline |
|-------------------|---|
| <i>Advanced</i> | |
| Host Address Base | Specify the base address of the original source IP address range. This is used for IP address shifting. |
| Translation | <p>Specify the following translation type for the incoming traffic:</p> <ul style="list-style-type: none"> • No Translation—There is no translation required for the incoming traffic. • Port/Range—Set the global default single port range for source NAT pools with port translation. • Overload |
| Address Pooling | <p>Specify a NAT address pooling behavior:</p> <ul style="list-style-type: none"> • Paired—Use this option for applications that require all sessions associated with one internal IP address to be translated to the same external IP address for multiple sessions. • Non-Paired—Use this option for applications that can be assigned IP addresses in a round-robin fashion. |
| Address Sharing | Specify that multiple internal IP addresses can be mapped to the same external IP address. Use this option only when the source NAT pool is configured with no port translation. When a source NAT pool has only one or few external IP addresses available, the address sharing option with a many-to-one address mapping increases NAT resources and improves traffic. |

Table 237: NAT Pool Settings (*Continued*)

| Setting | Guideline |
|-------------------------|---|
| Overflow Pool Type | <p>Specify a source pool to use when the current address pool is exhausted.</p> <ul style="list-style-type: none"> • Interface—Allow the interface pool to support overflow. • Pool—Name of the source address pool. • Overflow Pool—Once addresses from the original source NAT pool are exhausted, IP addresses and port numbers are allocated from the overflow pool. A user-defined source NAT pool or an egress interface can be used as the overflow pool. (When the overflow pool is used, the pool ID is returned with the address.) |
| Start | Specify the beginning port range for the source NAT pools, if the Translation type is Port/Range. The starting and ending port range is 1024 through 65535. |
| End | Specify the end port range. The starting and ending port range is 1024 through 65535. |
| Port Overloading Factor | Configure the port overloading-capacity for a source NAT pool. If the factor is set to x, each translated IP address has x times the maximum number of ports available. The range is 2 through 32. |

RELATED DOCUMENTATION

Creating NAT Pools | 814

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 818](#)
- [Clone Policies or Objects | 818](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating NAT Pools | 814](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 819](#)
- [Replace Policies and Objects | 819](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.

3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

| [Creating NAT Pools | 814](#)

Show and Delete Unused Policies and Objects

IN THIS SECTION

- [Show Unused Policies and Objects | 820](#)
- [Delete Unused Policies and Objects | 820](#)

You can show or delete unused policies and objects in your network configurations.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Show Unused Policies and Objects

You can view all unwanted policies or objects that are not used anywhere in your network to take appropriate action.

To show unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are showing.
2. From the landing page, click **More**.
A list of actions appears.
3. Select **Show Unused**.
A list of unused objects (not referenced in any policy) and unused policies appear on the page.

Delete Unused Policies and Objects

You can clear all unwanted policies or objects that are not used anywhere in your network.

To delete unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are deleting.
2. Select the check boxes beside the items that you want to delete. Right-click on the policy or object or click More from the landing page.
A list of actions appears.
3. Select **Delete Unused Items**.
A confirmation window appears before you can delete the unused policies or objects.
4. Click **Yes** to confirm the deletion.
All unused policies or objects are deleted.



NOTE: If you want to delete unused NAT pools from the device when the device is updated from Security Director, go to Junos Space Network Management Platform, select **Administration > Application > Modify Application Settings > Update Device** and select **Delete unused NAT pool** check box.

RELATED DOCUMENTATION

| [Creating NAT Pools | 814](#)

Showing Duplicate Policies and Objects

To display duplicate objects:

1. Select the check box beside the object(s).
2. Right-click the object(s) or select **Show Duplicates** from the More list.
The Show Duplicates page appears, which displays the duplicate objects.
3. Select the duplicate object(s), and perform any of the following actions:

- To merge policies or objects, select multiple policies, right-click or select **Merge** from the More list.

The merge operation deletes or replaces the reference for only the custom services and not the predefined services. If the selected duplicate objects are referenced in any other services (firewall policy) and security objects (service groups), a warning message is provided before the objects are merged.

Starting in Junos Space Security Director Release 18.4, you can view duplicate objects in Show Duplicates page from parent domain and subdomains. You can merge shared objects from parent domain to subdomain and vice versa.



NOTE: You can view the duplicate objects of subdomain only if the users of the subdomain have read and execute privileges to parent domain objects.

- To locate the usage of the duplicate objects, select a policy or shared object, right-click or select **Find usage** from More list.
- To delete the policies or shared objects, select the policies or shared objects, right-click and select **Delete** or click delete icon. You can delete objects only from current domain. If you select multiple objects from across the domains, then the delete option is disabled.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Assigning Policies and Profiles to Domains

You can assign or reassign policies or profiles to different domains when it is first configured and whenever you want to implement a change. You can assign only one policy or profile at a time. Before assigning a policy or profile to another domain, Security Director checks for the validity of the move. If the move is not acceptable, a warning message appears.

To assign a policy or profile to a domain:

1. Select **Configure** and select the landing page for the type of policy or profile that you are assigning to a domain.
2. From the landing page, right-click the policy or profile or click **More**.
A list of actions appears.
3. Select **Assign <Policy or Profile> to Domain**.
The Assign <Policy or Profile> to Domain page appears.



NOTE: <Policy or Profile> is the name of the policy or profile that you are assigning to a domain.

4. Select the required items to assign to a domain.

- 5. Enable this option to ignore warning messages, if any.
- 6. Click **Assign**.
A policy or profile is assigned to a domain.

RELATED DOCUMENTATION

| |
|--|
| Creating Firewall Policies 478 |
| Creating NAT Policies 784 |
| Creating IPS Policies 714 |

NAT Pools Main Page Fields

NAT pool is a continuous range of IP addresses that you can use to create a NAT policy. NAT policies perform address translation by translating internal IP addresses to the addresses in these pools. [Table 238 on page 823](#) describes the fields on this page.

Table 238: NAP Pools Main Page Fields

| Field | Description |
|--------------|---|
| Name | Name of the NAT pool. |
| Pool Address | NAT pool address. It can be of type host, range, or network only. |
| Description | Description of the NAT pool. |
| Pool Type | Type of NAT pool; either source or destination. |
| Domain | Display the user domain for mapping objects and managing sections of a network. |

RELATED DOCUMENTATION

| |
|--|
| Creating NAT Pools 814 |
| NAT Overview 779 |

NAT Policy-Port Sets

IN THIS CHAPTER

- [Creating Port Sets | 824](#)
- [Delete and Replace Policies and Objects | 825](#)
- [Edit and Clone Policies and Objects | 826](#)
- [Show and Delete Unused Policies and Objects | 827](#)
- [Showing Duplicate Policies and Objects | 829](#)
- [Assigning Policies and Profiles to Domains | 830](#)
- [Port Sets Main Page Fields | 830](#)

Creating Port Sets

Before You Begin

- Read the ["NAT Overview" on page 779](#) topic.
- Review the port sets main page for an understanding of your current data set. See ["Port Sets Main Page Fields" on page 830](#) for field descriptions.

Use the Port Set page to group a set of ports or port ranges. These port sets are referenced using NAT rules as source and destination ports of NAT policies.

To configure a port set:

1. Select **Configure > NAT Policy > Port Sets**.
2. Click the plus sign (+) to create a new port set.
3. Complete the configuration according to the guidelines provided in [Table 239 on page 825](#).
4. Click **OK**.

A new port set with your configurations is created. You can also assign the profile to a domain; see ["Assigning Policies and Profiles to Domains" on page 830](#).

Table 239: Port Set Settings

| Setting | Description |
|----------------------|---|
| Name | Enter a unique string of alphanumeric characters, colons, periods, slashes, dashes, and underscores; no spaces allowed; 63-character maximum. |
| Description | Enter a description for the new port set; maximum length is 1024 characters. |
| Ports or Port-Ranges | Enter comma-separated ports, port ranges, or both; maximum number of ports and port ranges for a single port is 8. |

RELATED DOCUMENTATION

| [NAT Overview](#) | [779](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects](#) | [825](#)
- [Replace Policies and Objects](#) | [826](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to delete, and then select the minus sign (-).

An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.

The addresses, services, or variables page appears.

2. Right-click the shared object that you want to replace, or click **Replace** from the More list.

You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.

3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

| [Creating Port Sets | 824](#)

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 827](#)
- [Clone Policies or Objects | 827](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating Port Sets | 824](#)

Show and Delete Unused Policies and Objects

IN THIS SECTION

- [Show Unused Policies and Objects | 828](#)
- [Delete Unused Policies and Objects | 828](#)

You can show or delete unused policies and objects in your network configurations.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Show Unused Policies and Objects

You can view all unwanted policies or objects that are not used anywhere in your network to take appropriate action.

To show unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are showing.
2. From the landing page, click **More**.
A list of actions appears.
3. Select **Show Unused**.
A list of unused objects (not referenced in any policy) and unused policies appear on the page.

Delete Unused Policies and Objects

You can clear all unwanted policies or objects that are not used anywhere in your network.

To delete unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are deleting.
2. Select the check boxes beside the items that you want to delete. Right-click on the policy or object or click **More** from the landing page.
A list of actions appears.
3. Select **Delete Unused**.
A confirmation window appears before you can delete the unused policies or objects.
4. Click **Yes** to confirm the deletion.
All unused policies or objects are deleted.

RELATED DOCUMENTATION

| [Creating Port Sets](#) | 824

Showing Duplicate Policies and Objects

To display duplicate objects:

1. Select the check box beside the object(s).
2. Right-click the object(s) or select **Show Duplicates** from the More list.

The Show Duplicates page appears, which displays the duplicate objects.

3. Select the duplicate object(s), and perform any of the following actions:
 - To merge policies or objects, select multiple policies, right-click or select **Merge** from the More list.

The merge operation deletes or replaces the reference for only the custom services and not the predefined services. If the selected duplicate objects are referenced in any other services (firewall policy) and security objects (service groups), a warning message is provided before the objects are merged.

Starting in Junos Space Security Director Release 18.4, you can view duplicate objects in Show Duplicates page from parent domain and subdomains. You can merge shared objects from parent domain to subdomain and vice versa.



NOTE: You can view the duplicate objects of subdomain only if the users of the subdomain have read and execute privileges to parent domain objects.

- To locate the usage of the duplicate objects, select a policy or shared object, right-click or select **Find usage** from More list.
- To delete the policies or shared objects, select the policies or shared objects, right-click and select **Delete** or click delete icon. You can delete objects only from current domain. If you select multiple objects from across the domains, then the delete option is disabled.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Assigning Policies and Profiles to Domains

You can assign or reassign policies or profiles to different domains when it is first configured and whenever you want to implement a change. You can assign only one policy or profile at a time. Before assigning a policy or profile to another domain, Security Director checks for the validity of the move. If the move is not acceptable, a warning message appears.

To assign a policy or profile to a domain:

1. Select **Configure** and select the landing page for the type of policy or profile that you are assigning to a domain.
2. From the landing page, right-click the policy or profile or click **More**.
A list of actions appears.
3. Select **Assign <Policy or Profile> to Domain**.
The Assign <Policy or Profile> to Domain page appears



NOTE: <Policy or Profile> is the name of the policy or profile that you are assigning to a domain.

4. Select the required items to assign to a domain.
5. Enable this option to ignore warning messages, if any.
6. Click **Assign**.
A policy or profile is assigned to a domain.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Port Sets Main Page Fields

Port set is a set of ports or port ranges. These port sets are referenced using NAT rules as source and destination ports. [Table 240 on page 831](#) describes the fields on this page.

Table 240: Port Sets Main Page Fields

| Field | Description |
|-----------------|---|
| Name | Name of the port set. |
| Description | Description of the port set. |
| Domain | Display the user domain for mapping objects and managing sections of a network. |
| Created By | User who created the port set. |
| Port/Port Range | Number of ports or port ranges. |

RELATED DOCUMENTATION

| [Creating Port Sets](#) | 824

Content Security Policy-Policies

IN THIS CHAPTER

- [Content Security Overview | 832](#)
- [Creating Content Security Policies | 835](#)
- [Comparing Policies | 836](#)
- [Delete and Replace Policies and Objects | 837](#)
- [Viewing Policy and Shared Object Details | 838](#)
- [Assigning Policies and Profiles to Domains | 839](#)
- [Showing Duplicate Policies and Objects | 840](#)
- [Edit and Clone Policies and Objects | 840](#)
- [Show and Delete Unused Policies and Objects | 841](#)
- [Content Security Policies Main Page Fields | 843](#)

Content Security Overview

IN THIS SECTION

- [Content Security Licensing | 833](#)
- [Content Security Components | 834](#)

Content Security is a term used to describe the consolidation of several security features into one device to protect against multiple threat types. The advantage of Content Security is a streamlined installation and management of multiple security capabilities.

The following security features are provided as part of the Content Security solution:

- **Antispam**—This feature examines transmitted messages to identify e-mail spam. E-mail spam consists of unwanted messages usually sent by commercial, malicious, or fraudulent entities. When the device detects an e-mail message deemed to be spam, it either drops the message or tags the message header or subject field with a preprogrammed string. The antispam feature uses a constantly updated Spamhaus Block List (SBL). Sophos updates and maintains the IP-based SBL.
- **Full file-based antivirus**—A virus is an executable code that infects or attaches itself to other executable code to reproduce itself. Some malicious viruses erase files or lock up systems. Other viruses merely infect files and overwhelm the target host or network with bogus data. The full file-based antivirus feature provides file-based scanning on specific *application layer* traffic, checking for viruses against a virus signature database. The antivirus feature collects the received data packets until it has reconstructed the original application content, such as an e-mail file attachment, and then scans this content. Kaspersky Lab provides the internal scan engine.
- **Express antivirus**—Express antivirus scanning is offered as a less CPU-intensive alternative to the full file-based antivirus feature. The express antivirus feature is similar to the antivirus feature in that it scans specific application layer traffic for viruses against a virus signature database. However, unlike full antivirus, express antivirus does not reconstruct the original application content. Rather, it just sends (streams) the received data packets, as is, to the scan engine. With express antivirus, the virus scanning is executed by a hardware pattern-matching engine. This improves performance while scanning is occurring, but the level of security provided is lessened. Juniper Networks provides the scan engine.
- **Content filtering**—Content filtering blocks or permits certain types of traffic based on the MIME type, file extension, protocol command, and embedded object type.
- **Web filtering**—Web filtering lets you manage Internet usage by preventing access to inappropriate Web content. The following types of Web filtering solutions are available:
 - **Integrated Web filtering**—Blocks or permits Web access after the device identifies the category for a URL either from user-defined categories or from a category server (Websense provides the SurfControl Content Portal Authority (CPA) server).
 - **Redirect Web filtering**—Intercepts HTTP requests and forwards the server URL to an external URL filtering server to determine whether to block or permit the requested Web access. Websense provides the URL filtering server.
 - **Juniper local Web filtering**—Blocks or permits Web access after the device identifies the category for a URL from user-defined categories stored on the device.

Content Security Licensing

All Content Security components require licenses with the exception of content filtering with custom URLs only. This is because Juniper Networks leverages third-party technology that is constantly updated

to provide the most up-to-date inspection capabilities. Licenses can be purchased individually or as bundled licenses with other features like *AppSecure* and IPS. The licenses are term based.

Content Security Components

Content Security components include custom objects, feature profiles, and Content Security policies that can be configured on SRX Series devices. From a high-level, feature profiles specify how a feature is configured and then applied to Content Security policies, which then in turn is applied to firewall policies, as shown in Figure 1.

Figure 57: Content Security Components



Content Security profiles do not have their own seven-tuple rulebase; in a sense they inherit the rules from the firewall rule. The strength of the Content Security feature comes from URL filtering, where you can have a separate configuration for different users or user groups.

- **Custom Object**—Although SRX Series Firewalls support predefined feature profiles that can handle most typical use cases, there are some cases where you might need to define your own objects, specifically for URL filtering, antivirus filtering, and content filtering.
- **Feature Profiles**—Feature profiles specify how components of each profile should function. You can configure multiple feature profiles that can be applied through different Content Security policies to firewall rules.
- **Content Security Policies**—Content Security policies perform as a logical container for individual feature profiles. Content Security profiles are then applied to specific traffic flows based on the classification of rules in the firewall policy. This allows you to define separate Content Security policies per firewall rule to differentiate the enforcement per firewall rule. Essentially, the firewall rulebase acts as the match criteria, and the Content Security policy is the action to be applied.
- **Firewall Policy**—You can predefine feature profiles for the Content Security policy that are then applied to the firewall rules. This gives you the advantage of using the predefined Content Security policy for that one Content Security technology (for example, antivirus or URL filtering), not both.

RELATED DOCUMENTATION

[Creating Content Security Policies](#) | 835

[Creating Content Filtering Profiles | 865](#)

[Creating Device Profiles | 870](#)

[Creating Web Filtering Profiles | 844](#)

[Selecting a Web Filtering Solution | 849](#)

Creating Content Security Policies

Before You Begin

- Read the Content Security Overview topic.
- Review the Content Security Policy main page for an understanding of your current data set. See ["UTM Policies Main Page Fields" on page 843](#) for field descriptions.
- Decide the filtering profile you want for the Content Security policy: Web Filtering, Antispam, Antivirus, or Content Filtering.

Use the Content Security policy page to configure Content Security policies. Content Security consolidates several security features into one device to protect against multiple threat types. The Content Security policy wizard provides step-by-step procedures to create a Content Security policy. You can configure multiple profiles by launching the respective wizards from the Content Security policy wizard.

To configure Content Security policies:

1. Select **Configure > UTM Policy**.
2. Click the + icon to create a new Content Security policy.
3. Complete the configuration according to the guidelines provided in [Table 241 on page 836](#).
4. Configure a filtering profile for your Content Security policy:
 - Antispam—Examine transmitted e-mail messages to identify e-mail spam over SMTP. For more information, see ["Creating Antispam Profiles" on page 861](#).
 - Antivirus—Inspect files transmitted over several protocols (HTTP, FTP upload and download, IMAP, SMTP, and POP3) to determine if the files exchanged are known malicious files, similar to how desktop antivirus software scans files for the same purpose. For more information, see ["Creating Antivirus Profiles" on page 857](#).
 - Content filtering—Block or permit certain types of traffic over several protocols (HTTP, FTP upload and download, IMAP, SMTP, and POP3) based on the MIME type, file extension, protocol command, and embedded object type. For more information, see ["Creating Content Filtering Profiles" on page 865](#).

- Web Filtering-Manage Internet usage by preventing access to inappropriate Web content over HTTP. For more information, see ["Creating Web Filtering Profiles" on page 844](#).
- Device—Configure Content Security global options for a device. The device profile refers to the antispam, antivirus, and Web filtering profiles. For more information, see ["Creating Device Profiles" on page 870](#).

5. Click **Finish**. A new Content Security policy is created.

Table 241: Content Security Policy Settings

| Setting | Guideline |
|-----------------|--|
| Name | Enter a unique name for the Content Security policy that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |
| Description | Enter a description for the Content Security policy; maximum length is 255 characters. |
| Traffic Options | <p>Specify traffic options for the Content Security policy.</p> <p>In an attempt to consume all available resources, a malicious user might generate a large amount of traffic all at once. To prevent such activity from succeeding, you can impose traffic options:</p> <ul style="list-style-type: none">• Connection limit per client—Specify the connection limit per client; default is 2000.• Action when connection limit is reached—Specify the action that must be taken once the connection limit is reached. The available actions are None, Log and Permit, and Block. |

RELATED DOCUMENTATION

| [Content Security Overview](#) | [832](#)

Comparing Policies

Security Director enables you to compare two policies.

To compare any two policies:

1. Select **Configure** and select the landing page for the type of policy that you want to compare. For example, Select **Firewall Policies**.
2. From the landing page, right-click the policy or click **More**.
A list of actions appears.
3. Select **Compare Policy** to compare with other policies.
The Compare Policy page appears
4. Select the policy to compare with, and click **OK**.
The compare result of the two policies are displayed.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 837](#)
- [Replace Policies and Objects | 838](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).

An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.

The addresses, services, or variables page appears.

2. Right-click the shared object that you want to replace, or click **Replace** from the More list.

You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.

3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

[Creating Content Security Policies](#) | 835

Viewing Policy and Shared Object Details

On a policy or a shared object landing page, you can get a detailed view of the existing policies or objects. The Detail View page lists all the configured parameters of a policy or an object. The Landing page of a policy or shared object lists only some of the configured parameters and not all. The Detail View option helps you to get a consolidated view of all the configured parameters.



NOTE: The detailed view is in read-only mode; you cannot edit any fields.

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears

2. Right-click the policy or shared object that you want to see the detailed view for, or select **Detail View** from the More list.

The Detail View page appears showing the configuration information.

You can also get a detailed view by hovering over the name and clicking the Detailed View icon before the policy or shared object name.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Assigning Policies and Profiles to Domains

You can assign or reassign policies or profiles to different domains when it is first configured and whenever you want to implement a change. You can assign only one policy or profile at a time. Before assigning a policy or profile to another domain, Security Director checks for the validity of the move. If the move is not acceptable, a warning message appears.

To assign a policy or profile to a domain:

1. Select **Configure** and select the landing page for the type of policy or profile that you are assigning to a domain.
2. From the landing page, right-click the policy or profile or click **More**.

A list of actions appears.

3. Select **Assign <Policy or Profile> to Domain**.

The Assign *<Policy or Profile>* to Domain page appears.



NOTE: *<Policy or Profile>* is the name of the policy or profile that you are assigning to a domain.

4. Select the required items to assign to a domain.
5. Enable this option to ignore warning messages, if any.
6. Click **Assign**.

A policy or profile is assigned to a domain.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Showing Duplicate Policies and Objects

To display duplicate objects:

1. Select the check box beside the object(s).
2. Right click and select **ShowDuplicates**.
The Show Duplicates page appears.
3. Select the check box beside the duplicate object, click **Delete** and confirm to remove it.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 840](#)
- [Clone Policies or Objects | 841](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

| [Creating Content Security Policies](#) | 835

Show and Delete Unused Policies and Objects

IN THIS SECTION

- [Show Unused Policies and Objects](#) | 842
- [Delete Unused Policies and Objects](#) | 842

You can show or delete unused policies and objects in your network configurations.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Show Unused Policies and Objects

You can view all unwanted policies or objects that are not used anywhere in your network to take appropriate action.

To show unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are showing.
2. From the landing page, click **More**.
A list of actions appears.
3. Select **Show Unused**.
A list of unused objects (not referenced in any policy) and unused policies appear on the page.

Delete Unused Policies and Objects

You can clear all unwanted policies or objects that are not used anywhere in your network.

To delete unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are deleting.
2. Select the check boxes beside the items that you want to delete. Right-click on the policy or object or click **More** from the landing page.
A list of actions appears.
3. Select **Delete Unused**.
A confirmation window appears before you can delete the unused policies or objects.
4. Click **Yes** to confirm the deletion.
All unused policies or objects are deleted.

RELATED DOCUMENTATION

| [Creating Content Security Policies](#) | 835

Content Security Policies Main Page Fields

Use the Content Security policies main page to get an overall, high-level view of your Content Security policies settings. You can filter and sort this information to get a better understanding of what you want to configure. Table 1 describes the fields on this page.

Table 242: Content Security Policy Main Page Fields

| Field | Description |
|-------------------|--|
| Name | Name of the Content Security policy. |
| Domain | Domain name to which the Content Security policy is assigned. |
| Antispam | Antispam filtering examines transmitted e-mail messages for spam. |
| Antivirus | Antivirus filtering scans specific application layer traffic and checks for viruses against a virus signature database. |
| Content Filtering | Content filtering blocks or permits types of traffic based on the MIME type, file extension, protocol command, and embedded object type. |
| Web Filtering | Web filtering manages Internet usage by preventing access to inappropriate Web content. |
| Description | A brief description of the Content Security policy. |

RELATED DOCUMENTATION

- [Creating Antispam Profiles | 861](#)
- [Content Security Overview | 832](#)
- [Creating Content Security Policies | 835](#)
- [Creating Antivirus Profiles | 857](#)
- [Creating Content Filtering Profiles | 865](#)
- [Creating Device Profiles | 870](#)
- [Creating Web Filtering Profiles | 844](#)

Content Security Policy-Web Filtering Profiles

IN THIS CHAPTER

- [Creating Web Filtering Profiles | 844](#)
- [Selecting a Web Filtering Solution | 849](#)
- [Web Filtering Profile Main Page Fields | 850](#)

Creating Web Filtering Profiles

Before You Begin

- Read the Content Security Overview topic.
- Decide the filtering profile you want for the Content Security policy: Web Filtering, Antispam, Antivirus, or Content Filtering.
- Review the Web Filtering Profile main page for an understanding of your current data set. See "[Web Filtering Profile Main Page Fields](#)" on page 850 for field descriptions.

Use the Content Security policy page to configure Web filtering profiles.

Web filtering lets you manage Internet usage by preventing access to inappropriate Web content. The following Web filtering solutions are supported:

- Integrated Web Filtering—Blocks or permits Web access after the device identifies the category for a URL, either from user-defined categories or from a category server (SurfControl Content Portal Authority provided by Websense).



NOTE: Integrated Web filtering feature is a separately licensed subscription service.

- Redirect Web Filtering—Intercepts HTTP requests and forwards the server URL to an external URL filtering server to determine whether to block or permit the requested Web access. Websense provides the URL filtering server.



NOTE: Redirect Web filtering does not require a license.

- Juniper Local Web Filtering—Intercepts every HTTP request in a TCP connection. In this case, the decision making is done on the device after it looks up a URL to determine if it is in the allowlist or blocklist based on its user-defined category.



NOTE: Local Web filtering does not require a license or a remote category server.

Once you create a profile, you can assign it to Content Security policies. Within the Content Security policy, you can apply either the same Web filtering profile or create one inline.

To create a Web filtering profile:

1. Select **Configure > UTM Policy > Web Filtering**.
2. Click the + icon to create a new Web filtering profile.
3. Complete the configuration according to the guidelines provided in [Table 243 on page 845](#).
4. Click **Finish**. A new Web filtering profile is created that you can associate with an Content Security policy.

Table 243: Web Filtering Profile Settings

| Setting | Guideline |
|----------------------------|--|
| General Information | |
| Name | Enter a unique name for the Web filtering profile that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |
| Description | Enter a description for the Web filtering profile; maximum length is 255 characters. |
| Engine Type | <p>Select the required engine type from the drop-down list:</p> <ul style="list-style-type: none"> • Juniper Enhanced— Configure Content Security enhanced Web filtering. • Surf Control—Configure a profile for the Web filtering surf-control integrated feature. • Websense Redirect—Configure a redirect Web filtering profile. |

Table 243: Web Filtering Profile Settings (Continued)

| Setting | Guideline |
|---------------------------|--|
| Default Action | <p>Select the default action from the drop-down list.</p> <p>NOTE: This option is available only for Juniper Enhanced and Surf Control engine types.</p> |
| Safe Search | <p>Select a safe search solution to ensure that the embedded objects such as images on the URLs received from the search engines are safe and that no undesirable content is returned to the client.</p> <p>By default, the Safe Search check box is selected</p> <p>NOTE: This option is available only for the Juniper Enhanced engine type. Safe search redirect supports HTTP only. You cannot extract the URL for HTTPS. Therefore, it is not possible to generate a redirect response for HTTPS search URLs. Safe search redirects can be disabled by clearing the Safe Search check box.</p> |
| Custom Block Message | <p>Specify a custom message to be sent when HTTP requests are blocked.</p> <p>NOTE: If a message begins with http: or https:, the message is considered a block message URL. Messages that begin with values other than http: or https: are considered custom block messages.</p> |
| Custom Quarantine Message | <p>Custom Quarantine Message Use Content Security enhanced Web filtering to support block, log and permit, and permit actions on HTTP/HTTPS requests. Additionally, it supports the quarantine action, which allows or denies access to the blocked site based on the user's response to the message.</p> <p>The quarantine message contains the following information:</p> <ul style="list-style-type: none"> • URL name • Quarantine name • Category (if available) • Site-reputation (if available) <p>Example: If you set the action for Enhanced_Search_Engines_and_Portals to quarantine, and you try to access www.search.yahoo.com, the quarantine message is as follows:</p> <p>***The requested webpage is blocked by your organization's access policy***.</p> |

Table 243: Web Filtering Profile Settings (*Continued*)

| Setting | Guideline |
|----------------------------------|---|
| Base Filter | When a URL category version is downloaded, a predefined base filter with default actions are also downloaded. All categories have default actions in a base filter. The base filter can be attached to user profile, which acts like a backup filter. The base filter takes action for the categories that are not configured in a user profile. |
| URL Categories | |
| | <p>A URL category is a list of URL patterns grouped under a single title so a single action that applies to all URL patterns can be performed on the list.</p> <p>Click the + icon to select one or more URL categories, an action, and a redirect profile. A redirect profile is applicable only for block and quarantine actions. You can create a new redirect profile by clicking Create New Redirect Profile. The created redirect profile is displayed in the Redirect Profile drop-down list. The following actions are available:</p> <ul style="list-style-type: none"> • Log and Permit—Create a list of URL patterns that are logged, then permitted. • Block—Create a list of URL patterns that are denied access. • Quarantine—Create a list of URL patterns that are quarantined. • Permit—Create a list of URL patterns that are permitted. <p>Edit the action or redirect profile by clicking Apply Actions and updating the action and redirect profile.</p> <p>Delete the URL category by selecting the URL category and clicking the X icon.</p> |
| Fallback Options | |
| | <p>The fallback options are used when the web filtering system experiences errors and must fallback to one of the previously configured actions to either deny (block) or permit the object.</p> <ul style="list-style-type: none"> • Default Action— Select Log and Permit or Block from the drop-down list. |
| Global Reputation Actions | |

Table 243: Web Filtering Profile Settings (*Continued*)

| Setting | Guideline |
|---------------------------|--|
| Uncategorized URL Actions | <p>Select this check box if you want to apply global reputation actions.</p> <p>Enhanced Web filtering intercepts HTTP and HTTPS requests and sends the HTTP URL or the HTTPS source IP to the Websense ThreatSeeker Cloud (TSC). The TSC categorizes the URL into one of the predefined categories and also provides site reputation information for the URL to the device. The device determines if it can permit or block the request based on the information provided by the TSC.</p> <p>The URLs can be processed using their reputation score if there is no category available. Select the action that you wish to take for the uncategorized URLs based on their reputation score:</p> <ul style="list-style-type: none"> • Very Safe—Permit, log and permit, block, or quarantine a request if a site reputation of 90 through 100 is returned. By default, Permit is selected. • Moderately Safe—Permit, log and permit, block, or quarantine a request if a site reputation of 80 through 89 is returned. By default, Log and Permit is selected. • Fairly Safe—Permit, log and permit, block or quarantine a request if a site-reputation of 70 through 79 is returned. By default, Log and Permit is selected. • Suspicious—Permit, log and permit, block, or quarantine a request if a site reputation of 60 through 69 is returned. By default, Quarantine is selected. • Harmful—Permit, log and permit, block, or quarantine a request if a site reputation of 1 through 59 is returned. By default, Block is selected. <p>NOTE: The Use global reputation check box is selected by default.</p> |

RELATED DOCUMENTATION

[Content Security Overview | 832](#)

[Selecting a Web Filtering Solution | 849](#)

[Creating Content Security Policies | 835](#)

[Creating Antispam Profiles | 861](#)

[Creating Antivirus Profiles | 857](#)

[Creating Content Filtering Profiles | 865](#)

Selecting a Web Filtering Solution

There are three options for enabling Web filtering. Use Table 1 to help you decide which option is right. The Web filtering solutions table gives you the pros and cons of each option.

Table 244: Web Filtering Solutions

| Web Filtering Option | Pros | Cons |
|-----------------------------|---|---|
| Integrated Web Filtering | <p>Is the most powerful integrated method in terms of detection.</p> <p>It has a granular list of URL categories, support for Google Safe Search, and a reputation engine.</p> <p>This option can also redirect you to a custom URL for block pages</p> | <p>Requires an Internet connection to be able to contact the Threatseeker cloud.</p> <p>Integrated Web filtering is also a separately licensed subscription service.</p> |
| Redirect Web Filtering | <p>Does not require an Internet connection; all queries are tracked locally.</p> <p>This option has a slightly lower latency because the server is onsite.</p> | <p>Requires a separate Websense server.</p> <p>Redirect Web filtering does not have as much functionality as directing the entire HTTP session through the Websense server.</p> |
| Juniper Local Web Filtering | <p>Does not require a license.</p> <p>Juniper local Web filtering is good for defining your own blocklist or allowlist.</p> <p>This option is good if you have only a handful of URLs on which you want to enforce a policy.</p> | <p>Is not ideal for broad URL filtering support.</p> |

RELATED DOCUMENTATION

[Content Security Overview | 832](#)

[Creating Web Filtering Profiles | 844](#)

Web Filtering Profile Main Page Fields

Use the Web Filtering main page to get an overall, high-level view of your Web filtering settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 245 on page 850](#) describes the fields on this page.

Table 245: Web Filtering Profile Main Page Fields

| Field | Description |
|----------------|---|
| Name | Name of the Web filtering profile. |
| Domain | Domain name to which the Web filtering profile is assigned. |
| Profile Type | Type of engine used for the profile: Juniper-enhanced, Surf-control, or Websense redirect. |
| Default Action | Default action for the connection limit. |
| Timeout | Action taken when the connection limit is reached. Available actions are None, Log and Permit, and Block. |
| Description | Description of the Web filtering profile. |

RELATED DOCUMENTATION

[Creating Web Filtering Profiles | 844](#)

[Creating Content Security Policies | 835](#)

[Content Security Overview | 832](#)

Content Security Policy-Category Update

IN THIS CHAPTER

- About the Category Update Page | 851
- Configuring the Download URL Settings | 853
- Downloading and Installing URL Categories | 854
- Uploading and Installing URL Categories | 855
- Installing URL Categories on SRX Series Devices | 856

About the Category Update Page

IN THIS SECTION

- Tasks You Can Perform | 852
- Field Descriptions | 852

To access this page, click **Configure > Content Security Policy > Category Update**.

Use the Category Update page to download and install a URL category dynamically. You can download the Websense Enhanced Web Filtering category version from the category download site at <https://update.juniper-updates.net> and install it without upgrading Security Director. Websense occasionally releases new Enhanced Web Filtering categories. The category list is available in a file in JSON format. It supports a predefined base filter and all categories have default actions in the base filter. The base filter can be attached to a user profile, which acts like a backup filter. The base filter takes action for the categories that are not configured in a user profile.

The category file is downloaded into Junos Space server in the following ways:

- Security Director automatically downloads the category file from the category download site for the first time, if there is no category version available.

- You can download required version or latest version of category file.
- You can upload category file into Junos Space server. This is useful when you do not have internet connection to the Junos Space server.



NOTE:

- Maximum available Websense categories are 1000.
- Maximum available base filters are 16.

Tasks You Can Perform

You can perform the following tasks from this page:

- Configure URL settings. See ["Configuring the Download URL Settings" on page 853](#).
- Download a category file and install it on SRX Series devices with an Enhanced Web Filtering license. See ["Downloading and Installing URL Categories" on page 854](#).
- Uploading and installing a category file to the Junos Space Server. See ["Uploading and Installing URL Categories" on page 855](#).
- Installing categories on newly added devices. See ["Installing URL Categories on SRX Series Devices" on page 856](#).

Field Descriptions

[Table 246 on page 852](#) provides guidelines on using the fields on the Category Update page.

Table 246: Fields on the Category Update Page

| Field | Description |
|--------------|---|
| File Version | Specifies the downloaded category file version. |
| Publish Date | Specifies the date when the Enhanced Web Category File was published in the download site, that is, https://update.juniper-updates.net . |

Table 246: Fields on the Category Update Page (*Continued*)

| Field | Description |
|-----------------|--|
| Supported Junos | Specifies the Junos version on which the category file is supported. NOTE: Content Security category update is supported only from Junos 17.4 version. |
| Select Filter | Select a predefined base filter, which has default actions for all categories, for Web filtering. |
| Name | Specifies the category name in the base filter. |
| Action | Specifies the action for the categories in the base filter. |

RELATED DOCUMENTATION

[Configuring the Download URL Settings | 853](#)

[Downloading and Installing URL Categories | 854](#)

[Uploading and Installing URL Categories | 855](#)

[Installing URL Categories on SRX Series Devices | 856](#)

Configuring the Download URL Settings

You can configure the download site URL from wherever the URL category package needs to be downloaded. By default, <https://update.juniper-updates.net> is the download URL. Whenever a new category is released from Websense, it will be available at the Juniper Networks download site at <https://update.juniper-updates.net>. Websense occasionally releases new Enhanced Web Filtering categories.

To configure the download URL:

1. Select **Configure > UTM Policy > Category Update**.

The Category Update page is displayed.

2. Click **Settings**.

The Settings page is displayed.

3. Enter the URL from where the URL category package has to be downloaded. By default, the Juniper Networks download site URL is displayed. For example, you see <https://update.juniper-updates.net>.
4. Browse and select a Content Security server certificate file (*.crt or *.pem).
5. Enable the option to send the download configuration traffic through a proxy server.
6. Click **OK**.

RELATED DOCUMENTATION

[About the Category Update Page | 851](#)

[Downloading and Installing URL Categories | 854](#)

[Uploading and Installing URL Categories | 855](#)

[Installing URL Categories on SRX Series Devices | 856](#)

Downloading and Installing URL Categories

You can download the current URL category version or a specific version. Besides downloading the category file, you can also choose to install it. You can also specify whether you want to run a job immediately or schedule it for a later time.

Before You Begin

Configure the download URL settings. See "[Configuring the Download URL Settings](#)" on page 853.

To download and install a URL category:

1. Select **Configure > UTM Policy > Category Update**.
The Category Update page is displayed.
2. Click **Download**.
The Download and Install Settings page is displayed.
3. Select the latest version option or specify an available version number.
4. Select the **Download and Install** option if you want to install the categories after downloading them.
5. Specify whether you want to run a job immediately or schedule it for a later time.
6. Click **OK**.

If you have not selected the Download and Install option, the Job Detail:Download URL Categories page with a summary of download status is displayed.

If you have selected the Download and Install option, the Job Status page is displayed with the status of the URL category download, probing for devices with an EWF license or category version, and installing URL categories on SRX Series devices with an EWF license.

RELATED DOCUMENTATION

- [About the Category Update Page | 851](#)
- [Configuring the Download URL Settings | 853](#)
- [Uploading and Installing URL Categories | 855](#)
- [Installing URL Categories on SRX Series Devices | 856](#)

Uploading and Installing URL Categories

You can upload a URL category package file to a Junos Space server and choose to install the URL categories after the upload.

Before You Begin

Download the EWF URL category file *utm_category_package_1.tgz* from <https://update.juniper-updates.net/EWF/> and save it in your local system.

To upload and install categories:

1. Select **Configure > UTM Policy > Category Update**.

The Category Update page is displayed.

2. Click **Offline Upload**.

The Upload page is displayed.

3. Browse and select the category file *utm_category_package_1.tgz* from your local system.

4. Select **Upload and Install** to install the URL categories on the SRX Series devices with an EWF license after uploading it to the Junos Space server.

5. Click **Upload**.

If you did not select Upload and Install, then the URL categories are only uploaded to the Junos Space server.

The Job Detail:Download URL Categories (Offline) page for downloading URL categories is displayed.

RELATED DOCUMENTATION

- [About the Category Update Page | 851](#)
- [Configuring the Download URL Settings | 853](#)
- [Downloading and Installing URL Categories | 854](#)
- [Installing URL Categories on SRX Series Devices | 856](#)

Installing URL Categories on SRX Series Devices

You can install URL categories on SRX Series devices with an EWF license. All SRX Series devices with an EWF license are listed in a table. If your device is not listed, then you can probe for SRX Series devices to show up in the table.

To install URL categories on devices with an EWF license:

1. Select **Configure > UTM Policy > Category Update**.

The Category Update page is displayed.

2. Click **Install**.

The Install Category page is displayed. A category version is also displayed in the page title, depending on the category version downloaded.

3. Select the devices with an EWF license.

If a device is not displayed, you can click **Probe Devices** to probe for devices.

4. Specify whether you want to run a job for installing the categories immediately or schedule it for a later time.

5. Click **OK**.

The Job Details page is displayed with details, such as type, ID, user state, and so on.

RELATED DOCUMENTATION

[About the Category Update Page | 851](#)

[Configuring the Download URL Settings | 853](#)

[Downloading and Installing URL Categories | 854](#)

[Uploading and Installing URL Categories | 855](#)

Content Security Policy-Antivirus Profiles

IN THIS CHAPTER

- [Creating Antivirus Profiles | 857](#)
- [Antivirus Profile Main Page Fields | 860](#)

Creating Antivirus Profiles

Before You Begin

- Read the Content Security Overview topic.
- Decide what kind of filtering you want for the Content Security policy: Web Filtering, Antispam, Antivirus, or Content Filtering.
- Review the Antivirus Profile main page for an understanding of your current data set. See ["Antivirus Profile Main Page Fields" on page 860](#) for field descriptions.

Use the Content Security policy page to configure antivirus profiles.

The *antivirus* profile defines the content to scan for any malware and the action to be taken when malware is detected. Once you create a profile, you can assign it to Content Security policies. Within the Content Security policy, you can apply either the same antivirus profile or create one inline to scan Web, file transfer, and e-mail traffic.

Configuring Antivirus Profile Settings

To create an antivirus profile:

- Select **Configure > UTM Policy > Antivirus Profiles**.
- Click the + icon to create a new antivirus profile.
- Complete the configuration according to the guidelines provided in [Table 247 on page 858](#).
- Click **Finish**. An antivirus profile is created that can be associated with an Content Security policy.

Table 247: Antivirus Profile Settings

| Setting | Guideline |
|---------|-----------|
|---------|-----------|

General Information

| | |
|-------------|--|
| Name | Enter a unique name for the antivirus profile that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |
| Description | Enter a description for the antivirus profile; maximum length is 255 characters. |
| Engine Type | <p>Select the required engine type from the drop-down list:</p> <ul style="list-style-type: none"> • Kaspersky—Kaspersky Lab engine is responsible for scanning all the data it receives. • Juniper Express—You configure a profile for the Juniper Express engine. Mostly used for express antivirus scanning. • Sophos—Sophos antivirus is an in-the-cloud antivirus solution. The virus and malware database is located on external servers maintained by Sophos (Sophos Extensible List) servers, thus there is no need to download and maintain large pattern databases on the Juniper Networks device. <p>NOTE: By default, Juniper Express is selected.</p> |

Fallback Options

Table 247: Antivirus Profile Settings *(Continued)*

| Setting | Guideline |
|---------|--|
| | <p>The fallback options are used when the antivirus system experiences errors and must fall back to one of the previously configured actions to either deny (block) or permit the object.</p> <p>Use the fallback options to be configured when there is a failure, or select the default action if no specific options are to be configured:</p> <ul style="list-style-type: none"> • Content Size—Select Block or Log and Permit. If the content size exceeds a set limit, the content is either passed or blocked. The default action is Block. • Content Size Limit—Enter the content size limit in kilobytes (KB). The limit range is 20 - 40,000 KB. The content size limit check occurs before the scan request is sent. The content size refers to accumulated TCP payload size. • Engine Error—Select Block or Log and Permit. The default action is Block. Note: Engine error combines all errors, engine not ready, timeout, too many requests, and out of resources, into a single fallback option. • Default Action—Select Block or Log and Permit. |

Notification Options

| | |
|--|---|
| | <p>Use the notification options to configure a method of notifying the user when a fallback occurs or a virus is detected:</p> <ul style="list-style-type: none"> • Fallback Deny—Select this option to notify mail senders that their messages were blocked. • Fallback Non-Deny—Select this option to warn mail recipients that they received unblocked messages despite problems. • Virus Detected—Select this option to notify mail recipients that their messages were blocked. |
|--|---|

RELATED DOCUMENTATION

[Content Security Overview | 832](#)

[Creating Antispam Profiles | 861](#)

[Creating Content Filtering Profiles | 865](#)

[Creating Device Profiles | 870](#)

[Creating Web Filtering Profiles | 844](#)

Antivirus Profile Main Page Fields

Use the Antivirus main page to get an overall, high-level view of your antivirus settings. You can filter and sort this information to get a better understanding of what you want to configure. Table 1 describes the fields on this page.

Table 248: Antivirus Main Page Fields

| Field | Description |
|--------------------|---|
| Name | Name of the antivirus profile. |
| Domain | Domain name to which the antivirus profile is assigned. |
| Profile Type | Type of engine used for the antivirus profile: Juniper express, Kaspersky, or Sophos. |
| Content Size Limit | Content size limit, in kilobytes, refers to accumulated TCP payload size. |
| Trickling Timeout | Number of seconds to wait for a response from the server. |
| Description | Description of the antivirus profile. |

RELATED DOCUMENTATION

[Content Security Overview | 832](#)

[Creating Content Security Policies | 835](#)

[Creating Antivirus Profiles | 857](#)

[Creating Antispam Profiles | 861](#)

[Creating Content Filtering Profiles | 865](#)

[Creating Device Profiles | 870](#)

[Creating Web Filtering Profiles | 844](#)

Content Security Policy-Antispam Profiles

IN THIS CHAPTER

- [Creating Antispam Profiles | 861](#)
- [Antispam Profile Main Page Fields | 863](#)

Creating Antispam Profiles

Before You Begin

- Read the Content Security Overview topic
- Decide what kind of filtering you want for the Content Security policy: Web filtering, antispam, antivirus, or content filtering.
- Review the Antispam Profile main page for an understanding of your current data set. See "[Antispam Profile Main Page Fields](#)" on page 863 for field description.

Use the Content Security policy page to configure *antispam* profiles.

E-mail spam consists of unwanted e-mail messages usually sent by commercial, malicious, or fraudulent entities. When the device detects an e-mail message deemed to be spam, it either blocks the message or tags the message header or subject field with a preprogrammed string. Antispam filtering allows you to use both a third-party server-based spam block list (SBL) and to optionally create your own local allowlists (benign) and blocklists (malicious) for filtering against e-mail messages.



NOTE: Sophos updates and maintains the IP-based SBL. Antispam is a separately licensed subscription service.

Once you create a profile, you can assign it to Content Security policies. Within the Content Security policy, you can apply either the same antispam profile or create one inline to scan e-mail traffic.

To create an antispam profile:

1. Select **Configure > UTM Policy > Antispam Profiles**.

2. Click the + icon to create a new antispam profile.
3. Complete the configuration according to the guidelines provided in [Table 249 on page 862](#).

Table 249: Antispam Profile Settings

| Setting | Guideline |
|----------------------------|---|
| <i>General Information</i> | |
| Name | Enter a unique name for the antispam profile that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |
| Description | Enter a description for the antispam profile; maximum length is 255 characters. |
| Use Sophos Blocklist | <p>Select this check box to use server-based spam filtering. This check box is selected by default. If the box is unchecked, local spam filtering is used. Server-based antispam filtering requires Internet connectivity with the spam block list (SBL) server. Domain Name Service (DNS) is required to access the SBL server. The firewall performs SBL lookups through the DNS protocol.</p> <p>NOTE: Server-based spam filtering supports only IP-based spam block list blocklist lookup. Sophos updates and maintains the IP-based spam block list. Server-based antispam filtering is a separately licensed subscription service.</p> |
| <i>Action</i> | |
| Default Action | <p>Select the antispam action that the device should take when it detects spam:</p> <ul style="list-style-type: none"> • Tag Email Subject Line • Tag SMTP Header • Block Email • Note |
| Custom Tag | Enter a custom string for identifying a message as spam. By default, the device uses ***SPAM*** . |

RELATED DOCUMENTATION

| |
|---|
| Content Security Overview 832 |
| Creating Antivirus Profiles 857 |
| Creating Content Filtering Profiles 865 |
| Creating Device Profiles 870 |
| Creating Web Filtering Profiles 844 |

Antispam Profile Main Page Fields

Use the Antispam main page to get an overall, high-level view of your antispam settings. You can filter and sort this information to get a better understanding of what you want to configure. Table 1 describes the fields on this page.

Table 250: Antispam Profile Main Page Fields

| Field | Description |
|-------------|--|
| Name | Name of the antispam profile. |
| Domain | Domain name to which the antispam profile is assigned. |
| Blocklist | Indicates whether server-based spam filtering, Sophos Blocklist, or local spam filtering is used. |
| Action | Action selected for the antispam profile: Tag Email Subject Line, Tag SMTP Header, Block Email, or None. |
| Custom Tag | Custom-defined tag that identifies an e-mail message as spam. |
| Description | Description of the antispam profile. |

RELATED DOCUMENTATION

| |
|--|
| Creating Antispam Profiles 861 |
| Content Security Overview 832 |

[Creating Content Security Policies | 835](#)

[Creating Antivirus Profiles | 857](#)

[Creating Content Filtering Profiles | 865](#)

[Creating Device Profiles | 870](#)

[Creating Web Filtering Profiles | 844](#)

Content Security Policy-Content Filtering Profiles

IN THIS CHAPTER

- [Creating Content Filtering Profiles | 865](#)
- [Content Filtering Profile Main Page Fields | 868](#)

Creating Content Filtering Profiles

Before You Begin

- Read the Content Security Overview topic.
- Decide what kind of filtering you want for the Content Security policy: Web Filtering, Antispam, Antivirus, or Content Filtering.
- Review the Content Filtering Profile main page for an understanding of your current data set. See ["Content Filtering Profile Main Page Fields" on page 868](#) for field descriptions.

Use the Content Security policy page to configure content filtering profiles.

Content filtering blocks or permits certain types of traffic based on the MIME type, file extension, and protocol command. The content filter controls file transfers across the device by checking traffic against configured filter lists.



NOTE: The content filter profile evaluates traffic before all other Content Security profiles, except Web Filtering. Therefore, if traffic meets criteria configured in the content filter, the content filter acts first upon this traffic.

You can configure the following types of content filters:

- MIME pattern filter—MIME patterns are used to identify the type of traffic in HTTP and MAIL protocols. There are two lists of MIME patterns that are used by the content filter to determine the action to be taken. The block MIME list contains a list of MIME type traffic that is to be blocked. The MIME exception list contains MIME patterns that are not to be blocked by the content filter and are generally subsets of items on the block list.



NOTE: The exception list has a higher priority than the block list.

- **Block Extension List**—Because the name of a file is available during the transfers, using file extensions is a highly practical way to block or allow file transfers. All protocols support the use of the block extension list.
- **Protocol Command Block and Permit Lists**—Different protocols use different commands to communicate between servers and clients. By blocking or allowing certain commands, traffic can be controlled on the protocol command level. The block or permit command lists are intended to be used in combination, with the permit list acting as an exception list to the block list.



NOTE: If a protocol command appears on both the permit list and the block list, the command is permitted.

To create a content filtering profile:

1. Select **Configur > UTM Policy > Content Filtering Profiles**.
2. Click the + icon to create a new content filtering profile.
3. Complete the configuration according to the guidelines provided in [Table 251 on page 866](#).
4. Click **Finish**. A content filtering profile is created that can be associated with an Content Security policy.

Table 251: Content Filtering Profile Settings

| Setting | Guideline |
|-----------------------------|---|
| <i>General Information</i> | |
| Name | Enter a unique name for the content filtering profile that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |
| Description | Enter a description for the content filtering profile; maximum length is 255 characters. |
| <i>Notification Options</i> | |

Table 251: Content Filtering Profile Settings (*Continued*)

| Setting | Guideline |
|--------------------------|--|
| | <p>Use the <i>notification</i> options to configure a method of notifying the user when a failure occurs or a virus is detected:</p> <ul style="list-style-type: none"> • Notify Mail Sender—Select this check box if you want to notify the sender. • Notification Type—Select the type of notification, Protocol or Message from the drop-down list. • Custom Notification Message—Enter a custom notification message. |
| <i>Protocol Commands</i> | |
| | <p>Use content filtering to block specific commands for HTTP, FTP, SMTP, IMAP, and POP3 protocols. Select the following options:</p> <ul style="list-style-type: none"> • Command Block List—Enter the protocol commands to be blocked. Use commas to separate each command. • Command Permit List—Enter the protocol commands to be permitted. Use commas to separate each command. |
| <i>Content Types</i> | |
| | <p>Use the content filter to block other types of harmful files that the MIME type or the file extension cannot control.</p> <p>Block Content Type—Select from the following types of content blocking (supported only for HTTP):</p> <ul style="list-style-type: none"> • Active X • Windows executables (.exe) • HTTP cookie • Java applet • ZIP files |

Table 251: Content Filtering Profile Settings *(Continued)*

| Setting | Guideline |
|------------------------|---|
| <i>File Extensions</i> | |
| | <p>Use a file extension list to define a set of file extensions to block over HTTP, FTP, SMTP, IMAP, and POP3.</p> <ul style="list-style-type: none"> Extension Block List—Enter file extensions to block separated by commas. For example, exe, pdf, js, and so forth. |
| <i>MIME Types</i> | |
| | <p>Use content filtering to block or permit special MIME types over HTTP, FTP, SMTP, IMAP, and POP3 connections. Specify the MIME(s) to be blocked or permitted:</p> <ul style="list-style-type: none"> MIME Block List—Enter the MIME types you wish to block. Use commas to separate each MIME type. MIME Permit List—Enter the MIME types you wish to permit. Use commas to separate each MIME type. |

RELATED DOCUMENTATION

[Creating Content Security Policies | 835](#)

[Content Security Overview | 832](#)

[Creating Antispam Profiles | 861](#)

[Creating Antivirus Profiles | 857](#)

Content Filtering Profile Main Page Fields

Use the Content Filtering Profile main page to get an overall, high-level view of your content filtering settings. You can filter and sort this information to get a better understanding of what you want to configure. Table 1 describes the fields on this page.

Table 252: Content Filtering Profile Main Page Fields

| Field | Description |
|---------------------|--|
| Name | Name of the content filtering profile. |
| Domain | Domain name to which the content filtering profile is assigned. |
| Permit Command List | List of protocol commands to be permitted. It allows you to control traffic at the protocol-command level. |
| Block Command List | List of protocol commands to be blocked. It allows you to control traffic at the protocol-command level. |
| Notification Type | Type of notification that is sent when a fallback option of block is triggered |
| Description | Description of the content filtering profile. |

RELATED DOCUMENTATION

[Creating Web Filtering Profiles | 844](#)

[Content Security Overview | 832](#)

[Creating Content Security Policies | 835](#)

Content Security Policy-Global Device Profiles

IN THIS CHAPTER

- [Creating Device Profiles | 870](#)
- [Device Profiles Main Page Fields | 873](#)

Creating Device Profiles

Before You Begin

- Read the Content Security Overview topic.
- Decide which kind of filtering you want for the Content Security policy: Web filtering, antispam, antivirus, content filtering, or device.
- Review the device profile main page for an understanding of your current data set. See ["Device Profiles Main Page Fields" on page 873](#) for field descriptions.



WARNING: When you configure the MIME allowlist feature, be aware that, because header information in HTTP traffic can be spoofed, you cannot always trust HTTP headers to be legitimate. When a Web browser is determining the appropriate action for a given file type, it detects the file type without checking the MIME header contents. However, the MIME allowlist feature does refer to the MIME encoding in the HTTP header. For these reasons, it is possible in certain cases for a malicious website to provide an invalid HTTP header. For example, a network administrator might inadvertently add a malicious website to a MIME allowlist, and, because the site is in the allowlist, it will not be blocked by Sophos even though Sophos has identified the site as malicious in its database. Internal hosts would then be able to reach this site and could become infected.

Use the Content Security policy page to configure device profiles.

The device profile is used to configure Content Security global options for a device. The device profile refers to the antispam, antivirus, and Web filtering profiles.

To create a device profile:

1. Select **Configure > UTM Policy > Device Profiles**.
2. Click **Create**.
3. Complete the configuration according to the guidelines provided in [Table 253 on page 871](#).
4. Click **Finish**.

Table 253: Device Profile Settings

| Setting | Guideline |
|---------|-----------|
|---------|-----------|

General Information

| | |
|-------------|---|
| Name | Enter a unique name for the device profile that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters. |
| Description | Enter a description for the device profile; maximum length is 255 characters. |
| Devices | Assign a device or devices to a profile by selecting the device or devices in the Available column and moving them to the Selected column. NOTE: If a device is already assigned to a profile, it will not be listed in the Available column. |

Antispam Profile

| | |
|-------------------|--|
| Address Allowlist | Select an address allowlist for local spam filtering. Allowlist include addresses that you want to exclude from undergoing antispam processing. (These lists are configured as custom objects.) NOTE: When both the allowlist and blocklist are in use, the allowlist is checked first. If there is no match, then the blocklist is checked. A |
| Address Blocklist | Select an address blocklist for local spam filtering. Blocklists include addresses that you want to exclude. (These lists are configured as custom objects.) Note: When both the allowlist and blocklist are in use, the allowlist is checked first. If there is no match, then the blocklist is checked. |

Antivirus Profile

Table 253: Device Profile Settings *(Continued)*

| Setting | Guideline |
|------------------------------|--|
| MIME Allowlist | <p>Enter MIME types to create MIME bypass lists and exception lists. The device uses MIME types to decide which traffic may bypass antivirus scanning. The MIME allowlist defines a list of MIME types and can contain one or many MIME entries. You can use your own custom object lists, or you can use the default list that ships with the device called junos-default-bypass-mime.</p> <p>The following limitations apply:</p> <ul style="list-style-type: none"> • The maximum number of MIME items in a MIME list is 50. • The maximum length of each MIME entry is restricted to 40 bytes. • The maximum length of a MIME list name string is restricted to 40 bytes. |
| Exception MIME Allowlist | <p>Enter MIME types to create an exception MIME allowlist that excludes some MIME types from the MIME allowlist. This list is a subset of MIME types found in the MIME allowlist.</p> <p>For example, if the MIME allowlist includes the entry, video/ and the exception list includes the entry video/x-shockwave-flash, by using these two lists, you can bypass objects with “video/” MIME type but not bypass “video/x-shockwave-flash” MIME type.</p> |
| URL Allowlist | <p>Enter URLs or IP addresses to create a list of websites that are always bypassed for scanning.</p> <p>Because antivirus scanning is a CPU and memory intensive action, if there are URLs and IP addresses that you are confident do not require scanning, you might want to create this custom list and add them to it.</p> |
| <i>Web Filtering Profile</i> | |
| URL Allowlist | <p>Enter URLs to create a allowlist of websites that are always permitted. With local Web filtering, the firewall intercepts every HTTP request in a TCP connection and extracts the URL. The decision is done on the device after it looks up a URL to determine if it is in the allowlist or blocklist based on its user-defined category.</p> <p>NOTE: A Web filtering profile can contain one allowlist or one blocklist with multiple user-defined categories each with a permit or block action.</p> |

Table 253: Device Profile Settings (*Continued*)

| Setting | Guideline |
|-----------------|--|
| URL Blocklist | <p>Enter URLs to create a <i>blocklist</i> of websites that are always blocked.</p> <p>NOTE: A Web filtering profile can contain one allowlist or one blocklist with multiple user-defined categories each with a permit or block action.</p> |
| Site Reputation | Choose a reputation level. An action will be taken based on the reputation level returned for all types of URLs, whether categorized or uncategorized. |

RELATED DOCUMENTATION

[Content Security Overview | 832](#)

[Creating Content Security Policies | 835](#)

[Creating Antispam Profiles | 861](#)

[Creating Antivirus Profiles | 857](#)

[Creating Web Filtering Profiles | 844](#)

Device Profiles Main Page Fields

Use the Device Profiles main page to get an overall, high-level view of your device profile settings. You can filter and sort this information to get a better understanding of what you want to configure. Table 1 describes the fields on this page.

Table 254: Device Profiles Main Page Fields

| Field | Description |
|--------|--|
| Name | Name of the device profile. |
| Domain | Domain name to which the device profile is assigned. |

Table 254: Device Profiles Main Page Fields *(Continued)*

| Field | Description |
|-----------------------------|--|
| Antispam Address Allowlist | Antispam address allowlists (benign) consist of addresses or domain names that you want excluded when scanning e-mail messages for antispam. |
| Antispam Address Blocklist | Antispam address blocklists (malicious) consist of addresses or domain names that you want blocked when scanning e-mail messages for antispam. |
| Antivirus URL Allowlist | Exception MIMEs and URL addresses that compose the allowlist. The list can contain one or many MIME entries. |
| Web Filtering URL Allowlist | URLs or IP addresses that are excluded from Web filtering. |
| Web Filtering URL Blocklist | URLs or IP addresses that are blocked from Web access. |
| Description | Description of the device profile. |

RELATED DOCUMENTATION
[Creating Device Profiles | 870](#)
[Creating Content Security Policies | 835](#)
[Content Security Overview | 832](#)

Content Security Policy-Default Configuration

IN THIS CHAPTER

- [About the Default Configuration Page | 875](#)
- [Create a Default Content Security Configuration | 877](#)
- [Edit and Clone the Default Configuration | 894](#)
- [View and Delete Unused Default Configuration | 895](#)

About the Default Configuration Page

IN THIS SECTION

- [Tasks You Can Perform | 875](#)
- [Field Descriptions | 876](#)

To access this page, click **Configure > UTM Policy > Default Configuration**.

You can configure the default Content Security configuration for web filtering, antivirus, antispam, and content filtering profiles on the selected device(s). You can assign the default configuration on the device(s) with Junos OS Release 18.2 and later. You can configure only one default configuration on each device.

If any parameter in a specific Content Security feature profile is not configured, then the corresponding parameter is applied from the Content Security default configuration. The Content Security default configuration CLI is generated as part of unified or standard firewall policy, where the corresponding device with default Content Security configuration is assigned.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a default Content Security default configuration. See ["Create a Default Content Security Configuration" on page 877](#).
- Edit and clone a default Content Security configuration. See ["Edit and Clone the Default Configuration" on page 894](#).
- View and delete unused default configurations. See ["View and Delete Unused Default Configuration" on page 895](#).

Field Descriptions

[Table 255 on page 876](#) provides guidelines on using the fields on the Default Configuration page.

Table 255: Fields on the Default Configuration Page

| Field | Description |
|------------------------|---|
| Name | Name of the default Content Security configuration. |
| Description | Provides description of the default Content Security configuration. |
| Domain | Specifies the user domain. |
| Antispam Type | Specifies the Antispam type. Antispam examines transmitted messages to identify any e-mail spam. |
| Antivirus Type | Specifies the Antivirus type. Antivirus implements a file-based scanning process on specific application layer traffic to check for viruses against a virus signature database. |
| Content Filtering Type | Specifies the Content Filtering type. Content filtering specifies the kind of traffic to block or permit based on the MIME type, file extension, and protocol commands. |
| Web Filtering Type | Specifies the Web Filtering type. Web filtering specifies the kind of traffic to block or permit based on the MIME type, file extension, and protocol commands. |
| Devices | The device(s) on which you want to assign the default configuration. |

RELATED DOCUMENTATION

| [Content Security Overview](#) | 832

Create a Default Content Security Configuration

You can define the default parameters for security features in Content Security . You can configure the parameters for the following:

- **Web Filtering**—Web filtering allows you to manage internet usage by preventing access to inappropriate web content.
- **Antivirus**—The antivirus profile defines the content to scan for any malware and the action to be taken when malware is detected.
- **Antispam**—Antispam examines transmitted messages to identify any e-mail spam.
- **Content Filtering**—Content filtering blocks or permits certain types of traffic based on the MIME type, file extension, protocol command, and embedded object type.

To create a default Content Security configuration:

1. Select **Configure > UTM Policy > Default Configuration**.
2. Click **+** icon.
The Create Default Configuration page is displayed.
3. Complete the configuration according to the guidelines provided in [Table 256 on page 877](#).
4. Click **Finish**.
The configuration summary is displayed.
5. Click **OK**.
The default Content Security configuration is created and assigned to the selected device(s).

Table 256: Default Content Security Configuration Settings

| Field | Description |
|----------------------------|--|
| General | |
| General Information | |
| Name | Enter the name of the default configuration. |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|---|---|
| Description | Enter a description for the default configuration. The maximum length is 255 characters. |
| Device | Select the device(s) on which you want to assign default configuration. Devices with Junos OS Release 18.2 onward are listed here. |
| Web Filtering | |
| Web Filtering Profiles by Traffic Protocol | |
| HTTP Persist | Enable to configure the web-filtering engine type. |
| HTTP Reassemble | Enable to specify a unique customized list of all URLs or IP addresses for a given category that are bypassed for scanning. |
| Type | <p>Select a web-filtering engine type.</p> <ul style="list-style-type: none"> • Web-filter None—If you select this option for the first time, the type in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for type is deleted from the device. • Juniper Enhanced—Select this option to enable enhanced Web filtering on the device. • Juniper Local—Select this option to enable Juniper Networks local URL filtering on the device. • Websense Redirect—Select this option to redirect the URL to the Websense server. |
| URL Blocklist | <p>Select the URL blocklist category to block the URLs in that category. To create a new URL blocklist category, click Create New URL Category.</p> <p>A Web filtering profile can contain one allowlist or one blocklist with multiple user-defined categories each with a permit or block action.</p> |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|----------------------|--|
| URL Allowlist | <p>Select the URL allowlist category to bypass all the URLs in that category. To create a new URL allowlist category, click Create New URL Category. With local Web filtering, the firewall intercepts every HTTP request in a TCP connection and extracts the URL.</p> <p>A Web filtering profile can contain one allowlist or one blocklist with multiple user-defined categories each with a permit or block action.</p> |
| Global | |
| Base Filter | <p>This field is applicable only when the Web Filtering Profile type is Juniper Enhanced.</p> <p>When a URL category version is downloaded, a predefined base filter with default actions are also downloaded. All categories have default actions in a base filter. The base filter can be attached to user profile, which acts like a backup filter. The base filter takes action for the categories that are not configured in a user profile.</p> <p>Select a predefined base filter, which has default actions for all categories, for Web filtering.</p> |
| Account | <p>This field is applicable only when the Web Filtering Profile type is Websense Redirect.</p> <p>Enter the websense redirect account.</p> |
| Custom Block Message | <p>Specify a custom message to be displayed when HTTP requests are blocked.</p> <p>NOTE: If a message begins with http: or https:, the message is considered a block message URL. Messages that begin with values other than http: or https: are considered custom block messages.</p> |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|---------------------------|---|
| Default Action | <p>This is applicable only when the Web Filtering Profile type is Juniper Enhanced or Juniper Local.</p> <p>Select a default action for the profile for requests that experience internal errors in the web filtering module.</p> <p>Select a default action.</p> <ul style="list-style-type: none"> • None—If you select this option for the first time, the default action in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for default action is deleted from the device. • Permit—Permit the traffic. • Log and Permit—Log the error and permit the traffic. • Block—Log the error and deny the traffic. • Quarantine—Quarantine the traffic. |
| Safe Search | <p>This option is applicable only when the Web Filtering Profile type is Juniper Enhanced.</p> <p>Select a safe search solution to ensure that the embedded objects such as images on the URLs received from the search engines are safe and that no undesirable content is returned to the client.</p> <p>NOTE: Safe search redirect supports HTTP only. You cannot extract the URL for HTTPS. Therefore, it is not possible to generate a redirect response for HTTPS search URLs. Safe search redirects can be disabled by clearing the Safe Search check box.</p> |
| Quarantine Custom Message | Enter the quarantine custom message. |
| Sockets | <p>This is applicable only when the Web Filtering Profile type is Websense Redirect.</p> <p>Enter the number of sockets used for communicating between the client and server.</p> <p>The range is 1 to 32.</p> |

Table 256: Default Content Security Configuration Settings (Continued)

| Field | Description |
|---|--|
| Timeout | Select a timeout interval from 1 to 1800 seconds. |
| Cache | |
| This section is applicable only when the Web Filtering Profile type is Juniper Enhanced. | |
| Size | Specify a Juniper enhanced cache size. Select a cache size from 0 to 4096 Killobytes. |
| Timeout | Specify Juniper enhanced cache timeout. Select a timeout interval from 1 to 1800 minutes. |
| Block Message | |
| Type | <p>Select the type of block message.</p> <ul style="list-style-type: none"> None—If you select this option for the first time, the type in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for type is deleted from the device. Custom Redirect URL- Configure a URL that redirects unauthenticated hosts to a central Web authentication (CWA) server. |
| URL | Enter URL of the block messages. |
| Fallback Settings | |
| <p>The fallback options are used when the web filtering system experiences errors and must fallback to one of the previously configured actions to either deny (block) or permit the object.</p> <p>If you select None for the first time, the field in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for the fields is deleted from the device.</p> | |
| Default | Specifies all errors other than the categorized settings. These could include either unhandled system exceptions (internal errors) or other unknown errors. Select an action: None, Block, or Log and permit. |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|---------------------------|--|
| Server Connectivity | Specifies that the server connection is not established during certain processes. Select an action: None, Block, or Log and permit. |
| Timeout | Specifies that if the time taken to scan exceeds the timeout setting in the Web filtering profile, the processing is terminated and the content is passed or blocked without completing filtering. Select an action: None, Block, or Log and permit. |
| Too-many-requests | Specifies that if the total number of messages received concurrently exceeds the device limits, the content is passed or blocked depending on the too-many-request fallback option. Select an action: None, Block, or Log and permit. |
| URL Categories | |
| | <p>Select an URL category.</p> <p>A URL category is a list of URL patterns grouped under a single title so a single action that applies to all URL patterns can be performed on the list.</p> <p>Click the + icon to select one or more URL categories, an action, and a redirect profile. A redirect profile is applicable only for block and quarantine actions. You can create a new redirect profile by clicking Create New Redirect Profile. The created redirect profile is displayed in the Redirect Profile drop-down list. The following actions are available:</p> <ul style="list-style-type: none"> • Log and Permit—Create a list of URL patterns that are logged, then permitted • Block—Create a list of URL patterns that are denied access. • Quarantine—Create a list of URL patterns that are quarantined. • Permit—Create a list of URL patterns that are permitted. <p>Edit the action or redirect profile by clicking Apply Actions and updating the action and redirect profile.</p> <p>Delete the URL category by selecting the URL category and clicking the X icon.</p> |
| Quarantine Message | |

Table 256: Default Content Security Configuration Settings (Continued)

| Field | Description |
|--|---|
| Type | <p>Select a type of quarantine message.</p> <ul style="list-style-type: none"> None—If you select None for the first time, the type in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for type is deleted from the device. Custom Redirect URL—Configure a URL that redirects unauthenticated hosts to a central Web authentication (CWA) server. |
| URL | Enter a valid URL. |
| Server | |
| This section is applicable only when the Web Filtering Profile type is Juniper Enhanced or Websense Redirect. | |
| Host | Enter the address of the host server. |
| Port | Enter the port number of the server. |
| Site Reputation Action | |
| Specify the action to be taken depending on the site reputation returned for all types of URLs whether it is categorized or uncategorized. | |
| This section is applicable only when the Web Filtering Profile type is Juniper Enhanced. | |
| If you select None for the first time, the field in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for the field is deleted from the device. | |
| Fairly Safe | Permit, log and permit, block, or quarantine a request if a site-reputation of 70 through 79 is returned. |
| Harmful | Permit, log and permit, block, or quarantine a request if a site-reputation of zero through 59 is returned. |

Table 256: Default Content Security Configuration Settings (*Continued*)

| Field | Description |
|-----------------|--|
| Moderately safe | Permit, log and permit, block, or quarantine a request if a site-reputation of 80 through 89 is returned. |
| Suspicious | Permit, log and permit, block, or quarantine a request if a site-reputation of 60 through 69 is returned. |
| Very Safe | Permit, log and permit, block, or quarantine a request if a site-reputation of 90 through 100 is returned. |
| Reset | Click Reset to position the slider to the recommended levels. |

Antivirus

Antivirus Profiles by Traffic Protocol

| | |
|---------------|--|
| Type | <p>Select the anti-virus engine that will be used on the device. Select an engine type:</p> <ul style="list-style-type: none"> • Anti-Virus None—If you select None for the first time, the type in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for type is deleted from the device. • Sophos Engine—Sophos antivirus is an in-the-cloud antivirus solution. The virus and malware database is located on external servers maintained by Sophos (Sophos Extensible List) servers, thus there is no need to download and maintain large pattern databases on the Juniper Networks device. • Avira Engine—This provides a full file-based virus scanning function which is available through a licensed subscription service. |
| URL Allowlist | <p>Select a unique customized list of all URLs for a given category that are bypassed for scanning.</p> <p>To create a URL category, see "Creating Custom URL Category Lists" on page 899.</p> |

MIME Allowlist

Table 256: Default Content Security Configuration Settings (Continued)

| Field | Description |
|--|--|
| <p>Enter MIME types to create MIME bypass lists and exception lists. The device uses MIME types to decide which traffic may bypass antivirus scanning. The MIME allowlist defines a list of MIME types and can contain one or many MIME entries.</p> | |
| MIME Block List | Enter the special MIME types you want to block over HTTP, FTP, SMTP, and POP3 connections. Use commas to separate each MIME type. |
| MIME Permit List | Enter the special MIME types you want to permit over HTTP, FTP, SMTP, and POP3 connections. Use commas to separate each MIME type. |
| Scan Options | |
| URI Check | Select the check-box to enable URI check. It specifies Uniform Resource Identifier blocking; an effective measure for preventing malware from reaching the endpoint. URI lookup is performed against an in-the-cloud malicious/infected URI database on each URI requested via HTTP. |
| Content Size Limit | Specifies the accumulated TCP payload size. Enter the content size limit value from 20 to 40,000 kilobytes. |
| Decompress Layer Limit | <p>Specifies the number of layers of nested compressed files and files with internal extractable objects, such as archive files (tar), the internal antivirus scanner can decompress before it executes the virus scan.</p> <p>Select a value between 0 to 10.</p> |
| Timeout | <p>Specifies the time frame from when the scan request is generated to when the scan result is returned by the scan engine.</p> <p>Enter the time interval from 1 to 1800 seconds.</p> |
| Pre Detection | Enable or disable the anti-virus pre-detection. |
| Sophos Engine | |
| General Settings | |

Table 256: Default Content Security Configuration Settings (Continued)

| Field | Description |
|------------------------|---|
| Timeout | Specify the antivirus engine timeout. Select a value from 1 to 5 seconds. |
| Retry | Specifies the number of times to retry the Sophos antivirus engine query. Select the number of retry value from 0 to 5. |
| Server | |
| Server IP | Specify the DNS Server IP. Enter a valid DNS server IP address. |
| Pattern Update | |
| URL | Specifies the URL of the database server. Enter the URL for the pattern database. |
| Interval | Specifies the interval at which the database server is queried for a new version of the database. Enter the time interval for automatically updating the pattern database. The range is from 10 to 10080 seconds. The default interval is 60 seconds. |
| No Auto Update | Specifies that the automatic download and update of the antivirus engine and signature database are disabled. |
| Email Notify | |
| Admin Email | Enter a valid admin e-mail ID to notify about the pattern file update. |
| Custom Message Subject | Specify the custom message subject for notification. Enter the subject of the custom message. |
| Custom Message | Enter the custom message for notification. |
| Proxy | |
| Proxy Server | Enter the IP address or hostname of the proxy server. |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|--------------------------|--|
| Port | Select the proxy server port. Port range is from 0 to 65535 |
| Username | Enter the username of the proxy server. |
| Password | Enter the password for proxy server. It consists of up to 32 characters. |
| Confirm password | Re-enter the password to verify the login password for the proxy server. |
| Fallback Settings | |
| Default | Specifies all errors other than the categorized settings. This could include either unhandled system exceptions (internal errors) or other unknown errors. Select None, Block, Log and Permit, or Permit action. |
| Content Size | Specifies that if the content size exceeds a set limit, the content is passed or blocked depending on the max-content-size fallback option. Select None, Block, Log and Permit, or Permit action. |
| Engine-not-ready | Specifies that the scan engine is not ready during certain processes, for example, while the signature database is loading. Select None, Block, Log and Permit, or Permit action. |
| Timeout | Specifies that if the time taken to scan exceeds the timeout setting in the antivirus profile, the processing is terminated and the content is passed or blocked without completing the virus checking. Select None, Block, Log and Permit, or Permit action. |
| Out-of-resources | Specifies the resource constraints error received during virus scanning. This error can be sent by the scan engine (as a scan-code) or scan manager. When the system is out of resources occurs, scanning is terminated. Select None, Block, Log and Permit, or Permit action. |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|------------------------|---|
| Too-many-requests | Specifies that if the total number of messages received concurrently exceeds the device limits, the content is passed or blocked depending on the too-many-request fallback option. Select None, Block, Log and Permit, or Permit action. |
| Trickling | |
| Trickling Timeout | <p>Specifies the mechanism used to prevent the HTTP client or server from timing-out during a file transfer or during antivirus scanning.</p> <p>Enter the trickling timeout interval from 0 to 600 seconds.</p> |
| Virus Detection | |
| Type | <p>Specifies the type of notification to be sent when a virus is detected. Select Protocol Only or Message options.</p> <ul style="list-style-type: none"> None—If you select None for the first time, the type in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for type is deleted from the device. Message—Send a generic notification. Protocol-only—Send a protocol-specific notification. |
| Notify Mail Sender | Specifies whether or not a notification is sent to the virus-detection notification e-mail address when a virus is detected. Enable to send a notification and disable to not send a notification. |
| Custom Message Subject | Specifies the subject line text for your custom message for the virus detection notification. Enter the subject line text for your custom message. |
| Custom Message | Specifies the customized message text for the virus detection notification. Enter the text for the custom notification message. |
| Fallback Block | |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|---------------------------|--|
| Type | <p>Specifies the type of notification sent when a fallback option of block is triggered. Select Protocol Only or Message options.</p> <ul style="list-style-type: none"> • Message—Send a generic notification. • Protocol-only—Send a protocol-specific notification. |
| Notify Mail Sender | Specifies that when a virus is detected and a fallback option of block is triggered, an e-mail is sent to the administrator. Enable this option. |
| Custom Message Subject | Specifies the subject line text for your custom message for the fallback block notification. Enter the subject line text for your custom message. |
| Custom Message | Specifies the customized message text for the fallback block notification. Enter the text for this custom notification message. |
| Fallback Non Block | |
| Notify Mail Recipient | Specifies that the fallback nonblock notification is sent when a fallback e-mail option without a blocking action is triggered. Enable the option. |
| Custom Message Subject | Specifies the subject line for your custom message for the fallback nonblock notification. Enter the subject line text for your custom message. |
| Custom Message | Specifies the customized message text for the fallback nonblock notification. Enter the text for this custom notification message. |
| Avira Engine | |

Table 256: Default Content Security Configuration Settings (Continued)

| Field | Description |
|-------|-------------|
|-------|-------------|

The scan engine, Avira, scans the data by accessing the virus pattern database. It provides a full file-based antivirus scanning function that is available through a separately licensed subscription service. When your antivirus license key expires, you can continue to use the locally stored antivirus signatures without any updates. If you delete the local database, then antivirus scanning is also disabled.

You can download and install the antivirus scan engine on your SRX Series device either manually or by using the Internet to connect to a Juniper Networks-hosted URL or a user-hosted URL. The virus pattern database is located at <https://update.juniper-updates.net/avira>. By default, the pattern updates are downloaded through the SRX Series devices.

After configuring Avira as the antivirus type, reboot the device for the new scan engine to take effect.

On Box AV Load Flavor

| | |
|------|--|
| Type | The on-device antivirus scan engine scans the data by accessing the virus pattern database. Select the on-box Antivirus traffic load type. |
|------|--|

Pattern Update

| | |
|----------------|--|
| URL | Specifies the URL of the database server. Enter the URL for the pattern database. |
| Interval | Specifies the interval at which the database server is queried for a new version of the database. Enter the time interval for automatically updating the pattern database. The range is from 10 through 10080 seconds. The default interval is 60 seconds. |
| No Auto Update | Specifies that the automatic download and update of the antivirus engine and signature database are disabled. |
| Start Time | Specifies the time when the device automatically starts downloading the updated signature database from the specified URL. Enter a value in the format: YYYY-MM-DD.HH:MM:SS |

Email Notify

| | |
|-------------|--|
| Admin Email | Enter a valid administrator e-mail ID for notifying about the pattern file update. |
|-------------|--|

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|--|--|
| Custom Message Subject | Specify the custom message subject for notification. Enter the subject of the custom message. |
| Custom Message | Enter the custom message for notification. |
| Antispam | |
| Antispam Profiles by Traffic Protocol | |
| Address Allowlist | <p>Select an address allowlist for local spam filtering. Allowlist include addresses that you want to exclude from undergoing antispam processing. These lists are configured as custom objects. To create a list of URLs for allowlist, see "Creating URL Patterns" on page 897.</p> <p>NOTE: When both the allowlist and blocklist are in use, the allowlist is checked first. If there is no match, then the blocklist is checked.</p> |
| Address Blocklist | <p>Specifies a list of MIME types to be excluded from the allowlist. These lists are configured as custom objects. To create a list of URLs for blocklist, see "Creating URL Patterns" on page 897.</p> <p>NOTE: When both the allowlist and blocklist are in use, the allowlist is checked first. If there is no match, then the blocklist is checked.</p> |
| Type | <p>Specify the antispam type.</p> <ul style="list-style-type: none"> • Anti-spam None—If you select None for the first time, the type in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for type is deleted from the device. • Anti-spam Sophos sbl—Select this option to use a third-party server-based spam block list (SBL). |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|---|---|
| Sophos Blocklist | <p>Select this option to use server-based spam filtering. Un-select the check box to use, local spam filtering.</p> <p>Server-based antispam filtering requires Internet connectivity with the spam block list (SBL) server. Domain Name Service (DNS) is required to access the SBL server. The firewall performs SBL lookups through the DNS protocol.</p> <p>NOTE: Server-based spam filtering supports only IP-based spam block list blocklist lookup. Sophos updates and maintains the IP-based spam block list. Server-based antispam filtering is a separately licensed subscription service.</p> |
| Action | |
| Default Action | <p>Select a default antispam action that the device should take when it detects spam.</p> <ul style="list-style-type: none"> None—If you select None for the first time, the default action in the CLI configuration is ignored. If you modify any other value to None, then existing CLI configuration for default action is deleted from the device. Block e-mail—Block the spam e-mail. Tag header of e-mail—Add the custom string to the e-mail header. Tag subject of e-mail—Add the custom string at the beginning of the subject of an e-mail. |
| Custom Tag | <p>Enter a custom string for identifying a message as spam. Maximum length is 512 characters. By default, the device uses ***SPAM***.</p> |
| Content Filtering | |
| Content Filtering Profiles by Traffic Protocol | |
| Command Block List | <p>Enter the protocol commands to be blocked. Use commas to separate each command.</p> <p>Use content filtering to block specific commands for HTTP, FTP, SMTP, IMAP, and POP3 protocols.</p> |

Table 256: Default Content Security Configuration Settings (Continued)

| Field | Description |
|-----------------------------|--|
| Command Permit List | <p>Enter the protocol commands to be permitted. Use commas to separate each command.</p> <p>Use content filtering to block specific commands for HTTP, FTP, SMTP, IMAP, and POP3 protocols.</p> |
| Type | Select the content filtering type. The options are Content-Filtering None and Content filtering local. |
| Block Content Type | <p>Select types of harmful HTTP content you want to block that the MIME type or file extension cannot control.</p> <ul style="list-style-type: none"> • Active X • Windows executables (.exe) • HTTP cookie • Java applet • ZIP files |
| Extension Block List | Enter the file extensions that you want to block over HTTP, FTP, SMTP, IMAP, and POP3 connections. Use only commas to separate values and the maximum allowed characters for each value is 29 characters. Do not use spaces to separate values. For example: exe,pdf,js |
| MIME Block List | Enter the special MIME types you want to block over HTTP, FTP, SMTP, and POP3 connections. Use commas to separate each MIME type. |
| MIME Permit List | Enter the special MIME types you wish to permit over HTTP, FTP, SMTP, and POP3 connections. Use commas to separate each MIME type. |
| Notification Options | |
| Notify Mail Sender | Select the check box to notify sender when a content block is triggered. |

Table 256: Default Content Security Configuration Settings *(Continued)*

| Field | Description |
|-----------------------------|--|
| Notification Type | <p>Specifies the type of notification sent when a content block is triggered. Select Protocol or Message.</p> <ul style="list-style-type: none"> • Message—Send a generic notification. • Protocol-only—Send a protocol-specific notification. |
| Custom Notification Message | <p>Specifies the customized message text for the content-block notification. Enter the text for the custom notification message. Maximum length is 512 characters.</p> |

RELATED DOCUMENTATION

[Content Security Overview | 832](#)

[About the Default Configuration Page | 875](#)

Edit and Clone the Default Configuration

IN THIS SECTION

- [Edit the Default Configuration | 894](#)
- [Clone the Default Configuration | 895](#)

You can edit or clone the default configurations.

Edit the Default Configuration

To edit the default configuration:

1. Select **Configure > UTM Policy > Default Configuration**.
The Default Configuration page is displayed.
2. Select the policy and click pencil icon or right-click the policy and select Edit Policy.

The Modify Default Configuration page is displayed, showing the same options as when creating a new configuration.

3. Click **OK**.

Clone the Default Configuration

To clone the default configuration:

1. Select **Configure > UTM Policy > Default Configuration**.

The Default Configuration page is displayed.

2. Right-click the policy or select Clone from the More list.

The Clone Default Configuration page is displayed.

3. Click **OK**.

RELATED DOCUMENTATION

[Create a Default Content Security Configuration | 877](#)

[Edit and Clone the Default Configuration | 894](#)

View and Delete Unused Default Configuration

IN THIS SECTION

- [View Unused Default Configuration | 895](#)
- [Deleting Unused Default Configuration | 896](#)

You can view and delete the default configuration that are not used anywhere in the network.

View Unused Default Configuration

To view the unused default configuration:

1. Select **Configure > UTM Policy > Default Configuration**.

The Default Configuration page is displayed.

2. Right-click the policy or select Show Unused from More list.

A list of unused default configuration, which are not referenced in any policy, appear on the page.

Deleting Unused Default Configuration

To delete the unused default configuration:

1. Select **Configure > UTM Policy > Default Configuration**.

The Default Configuration page is displayed.

2. Right-click the policy or select Delete Unused Items from the More list.

A confirmation window appears before you delete the unused configuration.

3. Click **Yes** to confirm the deletion.

The selected unused items are deleted.

RELATED DOCUMENTATION

| [Create a Default Content Security Configuration](#) | 877

Content Security Policy-URL Patterns

IN THIS CHAPTER

- [Creating URL Patterns](#) | 897

Creating URL Patterns

Before You Begin

- Read the ["UTM Overview" on page 832](#) topic.
- Decide what kind of filtering you want for the Content Security policy: Web filtering, antispam, antivirus, or content filtering.

Use the Create URL Patterns page to create custom URL patterns. A URL pattern is a list of URLs organized into a group. You can later assign this list to a URL category.

To create URL patterns:

1. Select **Configure > UTM Policy > URL Patterns**.
2. Click the + icon to create a new custom URL pattern list.
3. Complete the configuration according to the guidelines provided in [Table 257 on page 897](#).
4. Click **Finish**. A new custom URL pattern list is created.

Table 257: URL Pattern Settings

| Settings | Guidelines |
|----------------------------|--|
| <i>General Information</i> | |
| Name | Enter a unique name for the URL category that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |

Table 257: URL Pattern Settings *(Continued)*

| Settings | Guidelines |
|-------------|--|
| Description | Enter a description for the URL pattern list; maximum length is 255 characters. |
| Add URLs | Enter URLs in the Add URLs box, and click Add . Separate multiple URLs with commas. The URL List field supports the *, ., [,], and ? wildcard characters. Precede all wildcard characters with http://. You can only use * at the beginning of a URL followed by a period, and you can only use ? at the end of a URL. |

RELATED DOCUMENTATION

| |
|--|
| Creating Web Filtering Profiles 844 |
| Content Security Overview 832 |
| Creating Content Security Policies 835 |

Content Security Policy-Custom URL Categories

IN THIS CHAPTER

- [Creating Custom URL Category Lists | 899](#)

Creating Custom URL Category Lists

Before You Begin

- Read the ["UTM Overview" on page 832](#) topic.
- Decide what kind of filtering you want for the Content Security policy: Web filtering, antis spam, antivirus, or content filtering.

Use the Create URL Category page to create custom URL category lists. A URL category is a list of URL patterns grouped under a single title.



NOTE: This page will also list the predefined URL categories.

To create URL category lists:

1. Select **Configure > UTM Policy > Custom URL Categories**.
2. Click the + icon to create a new custom URL category list.
3. Complete the configuration according to the guidelines provided in [Table 258 on page 899](#).
4. Click **Finish**. A new custom URL category list is created.

Table 258: URL Category Lists Settings

| Settings | Guidelines |
|----------|------------|
|----------|------------|

General Information

Table 258: URL Category Lists Settings *(Continued)*

| Settings | Guidelines |
|--------------|--|
| Name | Enter a unique name for the URL category that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |
| Description | Enter a description for the URL category list; maximum length is 255 characters. |
| URL Patterns | <p>To add URLs to a list, select the URLs in the Available column and move them to the Selected column.</p> <p>Click Create a New Pattern to create a new URL pattern. Note: A URL pattern is a list of URLs organized into a group. You can later assign this list to a URL category.</p> <p>Separate multiple URLs with commas. The URL List field supports the *, ., [,], and ? wildcard characters. Precede all wildcard characters with http://. You can only use * at the beginning of a URL followed by a period, and you can only use ? at the end of a URL.</p> |

RELATED DOCUMENTATION

[Creating Web Filtering Profiles | 844](#)

[Content Security Overview | 832](#)

[Creating Content Security Policies | 835](#)

Application Routing Policies

IN THIS CHAPTER

- [Understanding Application-Based Routing | 901](#)
- [About the Application Routing Policies Page | 904](#)
- [Configuring Advanced Policy-Based Routing Policy | 906](#)
- [About the Rules Page \(Advanced Policy-Based Routing\) | 907](#)
- [Creating Advanced Policy-Based Routing Rules | 908](#)
- [About the App Based Routing Page | 910](#)
- [Edit and Clone Policies and Objects | 912](#)
- [Assigning Devices to Policies | 913](#)
- [Customizing Profile Names | 914](#)
- [Publishing Policies | 914](#)
- [Updating Policies on Devices | 915](#)

Understanding Application-Based Routing

The relentless growth of voice, data, and video traffic and applications traversing the network requires that networks recognize traffic types to effectively prioritize, segregate, and route traffic without compromising performance or availability. SRX Series Services Gateways support advanced policy-based routing (APBR), also known as application-based routing, to address these requirements.



NOTE: APBR Monitoring Widget is not supported in Security Director.

APBR is a type of session-based, application-aware routing. This mechanism combines policy-based routing with an application-aware traffic management solution. APBR implies classifying flows based on the attributes of the applications and applying filters based on these attributes to redirect the traffic. The flow-classifying mechanism is based on packets representing the application in use.

APBR implements:

- Deep packet inspection (DPI) and pattern-matching capabilities of application identification to identify application traffic or a user session within an application
- Lookup in the application system cache (ASC) for application type and the corresponding destination IP address, destination port, protocol type, and service for a matching rule

If a matching rule is found, the traffic is directed to an appropriate route and the corresponding interface or device.

APBR provides the following advantages:


- Enables you to define the routing behavior based on application attributes.
- Extends the scope of static routes by providing more flexible traffic-handling capabilities by offering granular control for forwarding packets based on application attributes.

APBR involves the following workflow:

- Creating an APBR profile (also referred to as an application profile in this document) that will match the type of traffic that you are going to direct to a different next hop. The profile includes multiple rules. Each rule can contain multiple applications or application groups. If the application matches any of the application or application groups of a rule in a profile, the application profile rule is considered as a match.
- Associating a routing instance with the application profile rule. When the traffic on the ingress zone and interface matches an application profile, the associated static route and next hop defined in the routing instance are used to route the traffic for the particular session.
- Associating the application profile to the ingress traffic. The application profile can be attached to a security zone or it can be attached to a specific logical or physical interface associated with the security zone. If the application profile is applied to a security zone, then all interfaces belonging to that zone are attached to the application profile by default unless a specific configuration already exists for that interface.

[Figure 58 on page 903](#) shows the sequence in which APBR techniques are applied.

Figure 58: APBR Flow Diagram

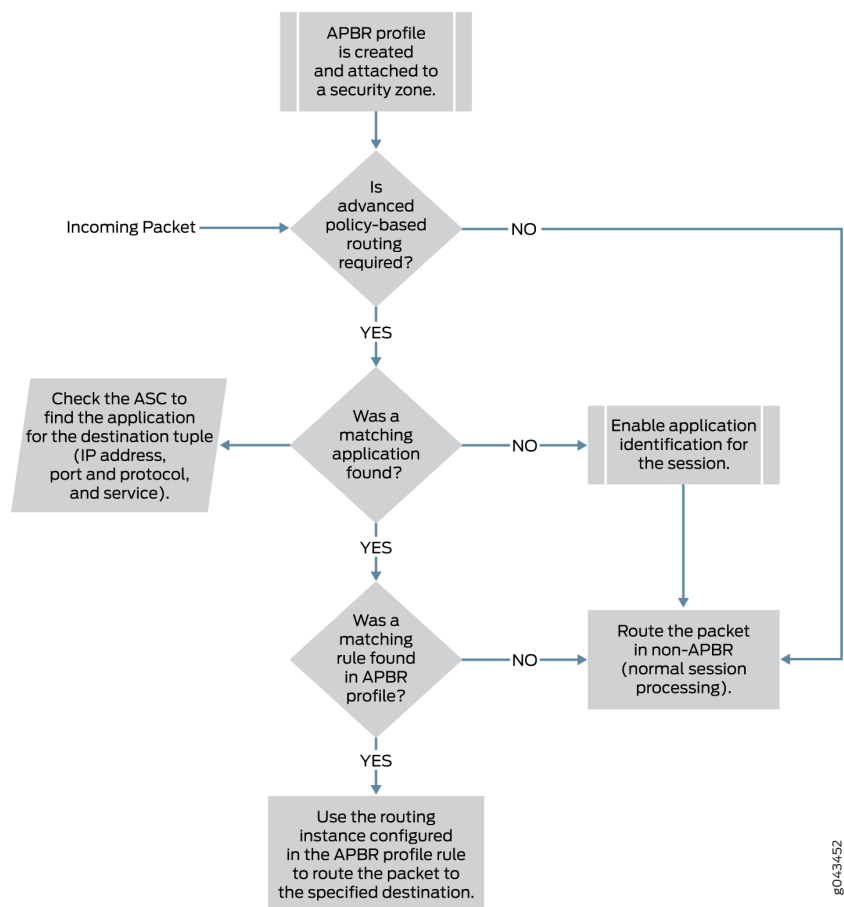

The following procedure explains the application-based routing:

1. APBR evaluates the packets based on incoming interface to determine whether the session is a candidate for application-based routing. If the traffic has not been flagged for application-based routing, it undergoes normal processing (non-APBR route).
2. If the session needs application-based routing, APBR queries the application system cache (ASC) module to get the application attributes details (IP address, destination port, protocol type, and service).

If the application is found, it is further processed for a matching rule in the APBR profile (see Step 3).
3. APBR uses the application details to look for a matching rule in the APBR profile (application profile). If a matching rule is found, the traffic is redirected to the specified routing instance for route lookup.

RELATED DOCUMENTATION

[Configuring Advanced Policy-Based Routing Policy | 906](#)

[About the Application Routing Policies Page | 904](#)

[About the Rules Page \(Advanced Policy-Based Routing\) | 907](#)

[Creating Advanced Policy-Based Routing Rules | 908](#)

[About the App Based Routing Page | 910](#)

About the Application Routing Policies Page

IN THIS SECTION

- [Tasks You Can Perform | 904](#)
- [Field Descriptions | 905](#)

To access this page, select **Configure > App Routing Policies**.

Use the Application Routing Policies page to configure advanced policy-based routing (APBR) profiles. In advanced WAN routing space, the need for application-aware routing is gaining popularity. Enterprise customers and cloud service providers are taking a software-defined WAN (SD-WAN) approach to minimize the operating cost and to improve or optimize resource usage. The APBR profiles support such emerging network deployments. APBR provides a capability to specify routes based on certain attributes of an end user application. The APBR profile evaluates the application-aware traffic and permits or denies traffic based on the applications and application groups.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an APBR policy. See "[Configuring Advanced Policy-Based Routing Policy](#)" on page 906
- Manage an APBR policy.
- Create and manage APBR policy rules. See "[Creating Advanced Policy-Based Routing Rules](#)" on page 908

Field Descriptions

Table 259 on page 905 provides guidelines on using the fields on the Application Routing Policies page.

Table 259: Fields on the Application Routing Policies Page

| Field | Description |
|-------------------|---|
| Policy Name | Specifies the name of the APBR policy. |
| Rules | Specifies the number of rules created for the APBR policy. |
| Devices | Specifies the number of devices associated with the APBR policy. |
| Deployment Status | Specifies the publish and update status of the APBR policy. |
| Last Modified | Specifies the last modified date and time of the APBR policy. |
| Created By | Specifies the username of a user who created the APBR policy. |
| Description | Specifies the description of the APBR policy, if any. |
| Domain | Specifies the domain name to which the APBR policy is associated. |

RELATED DOCUMENTATION

| |
|--|
| Understanding Application-Based Routing 901 |
| Configuring Advanced Policy-Based Routing Policy 906 |
| About the Rules Page (Advanced Policy-Based Routing) 907 |
| Creating Advanced Policy-Based Routing Rules 908 |
| About the App Based Routing Page 910 |

Configuring Advanced Policy-Based Routing Policy

You can use the Add APBR Policy page to create an advanced policy-based routing (APBR) profile (also known as an application profile) to match applications and application groups and redirect the packets that match the profile to the specified routing instance for route lookup. The APBR profile evaluates the application-aware traffic and permits or denies traffic based on attributes of the applications and application groups. The context established in the first packet of a session must match the context contained in all subsequent packets, if a session is to remain active.

The APBR profile is associated to the ingress traffic. The application profile can be attached to a security zone or it can be attached to a specific logical or physical interface associated with the security zone.

To configure an APBR profile:

1. Select **Configure > Application Routing Policies**.

The Application Routing Policies page appears.

2. Click the create icon (+).

The Add APBR Policy page appears.

3. Complete the configuration by using the guidelines in [Table 260 on page 906](#).

4. Click **OK** to complete the configuration.

A new APBR profile is created. Click **Add Rule** or the policy name to configure policy rules. See ["About the Rules Page \(Advanced Policy-Based Routing\)" on page 907](#).

Click **Cancel** to discard the configuration.

Table 260: Fields on the Add APBR Policy Page

| Field | Description |
|-------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. |
| Description | Enter a description for the APBR profile; maximum length is 255 characters. |
| Devices | <p>Select one or more devices to associate them with a policy. However, a device can have only one APBR policy associated, at a time.</p> <p>Select a device in the Available column and move it to the Selected column.</p> |

RELATED DOCUMENTATION

| | | |
|--|--|---------------------|
| Understanding Application-Based Routing | | 901 |
| About the Application Routing Policies Page | | 904 |
| About the Rules Page (Advanced Policy-Based Routing) | | 907 |
| Creating Advanced Policy-Based Routing Rules | | 908 |
| About the App Based Routing Page | | 910 |

About the Rules Page (Advanced Policy-Based Routing)

IN THIS SECTION

- [Tasks You Can Perform](#) | [907](#)
- [Field Descriptions](#) | [907](#)

To access this page, select **Configure > App Routing Policies > *Policy Name* or *Rules***.

Use this page to create, edit, clone, or delete APBR policy rules. An APBR profile includes multiple rules. Each rule can contain multiple applications or application groups. If an application profile matches any of the application or application groups of a rule in a profile, the application profile rule is considered to be a match. The traffic is then redirected to the defined routing instance for the route lookup.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a new rule. See "[Creating Advanced Policy-Based Routing Rules](#)" on page 908.
- Edit, clone, or delete the rule. Hover over the rule name and click a specific icon to edit, clone, or delete a rule.

Field Descriptions

[Table 261 on page 908](#) provides guidelines on using the fields on the Rules page.

Table 261: Fields on the Rules Page

| Field | Description |
|------------------|--|
| Source | Specifies the source zone (to-zone) that defines the context for the policy. |
| Application | Specifies the application that is associated with the rule for matching. |
| Routing Instance | Specifies a specific routing instance to which the device sends the matched packets. |
| Rule Name | Specifies the name of the rule. |

RELATED DOCUMENTATION

[Understanding Application-Based Routing | 901](#)

[Configuring Advanced Policy-Based Routing Policy | 906](#)

[About the Application Routing Policies Page | 904](#)

[Creating Advanced Policy-Based Routing Rules | 908](#)

[About the App Based Routing Page | 910](#)

Creating Advanced Policy-Based Routing Rules

Use this page to configure rules for an advanced policy-based routing (APBR) profile (also known as an application profile). You can then associate the rules with one or more than one applications (example: for HTTP) or application groups.

To create a rule:

1. Select **Configure > Application Routing Policies**.
The Application Routing Policies page appears.
2. Click the policy name or rules.
The Rules page appear.
3. Click the add icon (+).
4. Complete the configuration according to the guidelines provided in [Table 262 on page 909](#).
5. Click **Save**.

The rules you configured are associated with the selected policy.

Table 262: Fields on the Rule Page

| Fields | Description |
|------------------|--|
| Source | <p>Click the add icon (+) to select a source zone from the list.</p> <p>You can select one or more zones for the application profile.</p> |
| Application | <p>Click the add icon (+) to select the application from the list.</p> <p>If the application matches any of the application or application groups of a rule in a profile, the application profile rule is considered as a match.</p> <p>You can select one or more applications.</p> |
| Routing Instance | <p>Click the + icon to select a routing instance from the list, that are configured on a device. The device sends the matched packet to the specified routing instance. The routing instances specify the routing table and the destination to which a packet is forwarded.</p> <p>When traffic arrives at the specified zone, it is matched by the advanced application profile. The application profile matches applications and application groups and if the matching rule is found, the packets are routed to the routing instance that sends the traffic to a different interface as specified in the next-hop IP address.</p> |
| Rule Name | <p>The rule name is automatically generated by Security Director. For example, Rule-<i>incremental value</i>.</p> |



NOTE: An APBR policy designed in Security Director is equal to one or more policies on a device, based on the unique security zones and rule set.

RELATED DOCUMENTATION

[Understanding Application-Based Routing | 901](#)

[Configuring Advanced Policy-Based Routing Policy | 906](#)

[About the Rules Page \(Advanced Policy-Based Routing\) | 907](#)

[About the App Based Routing Page | 910](#)

About the App Based Routing Page

IN THIS SECTION

- [Tasks You Can Perform | 910](#)
- [Field Descriptions | 910](#)

To access this page, select **Monitor > App Based Routing**.

You can use the App Based Routing page to monitor the APBR profile data. You can view information on the link utilization of an application for a selected duration, top ten applications using the app based routing, list of devices, and a step graph showing how many times an application took an APBR path and a default path.

Tasks You Can Perform

You can perform the following task from this page:

- Monitor the overall link usage, device level utilization of link usage, and step graph representation of application routing information.

Field Descriptions

[Table 263 on page 910](#) provides guidelines on using the widgets on the App Based Routing page.

Table 263: Widgets on the App Based Routing Page

| Widget | Description |
|---------------------------------|--|
| Top 10 Applications | Shows top ten applications with their throughput in Mbps. |
| Preferred vs Default Link Usage | <p>Shows a graphical representation for how long an application took APBR path and default path, for a selected duration. The data is shown for all devices.</p> <p>By default, the result is shown for all applications. To view the result for any particular application, select the application from the Apps list. You can also choose the time period.</p> |

Table 263: Widgets on the App Based Routing Page (Continued)

| Widget | Description |
|--------------|---|
| Devices List | <p>Shows list of devices assigned with the APBR profile. The list contains the root devices, logical systems (LSYS), and tenant systems (TSYS).</p> <p>Click on the device name to view more details on the link usage and other information about APBR at the device level, as described in Table 264 on page 911.</p> |

Table 264: Widgets for the Selected Device

| Widget | Description |
|--|--|
| Links | Shows a graphical representation of different interfaces of a device and applications using those interfaces. |
| Top 10 Applications | Shows top 10 applications with the most sessions for the selected time period. |
| Link Utilization | <p>Select a required interface from the list and view the link utilization data by different applications.</p> <p>You can filter the data for a different time period.</p> |
| App Routing: Preferred vs Default Link Usage | Shows a graphical representation for how long an application took APBR path and default path, for a selected duration. This data is shown for the selected device. |
| Preferred vs Default Link Usage | Shows an overall statistics of all applications taking the APBR path and default path, for a selected duration. The data is shown for the selected device. |

RELATED DOCUMENTATION

[Understanding Application-Based Routing | 901](#)

[Configuring Advanced Policy-Based Routing Policy | 906](#)

[About the Application Routing Policies Page | 904](#)

[Creating Advanced Policy-Based Routing Rules | 908](#)

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 912](#)
- [Clone Policies or Objects | 912](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Assigning Devices to Policies

Once you create a group or device policy, you can assign devices to it.

To assign devices to a policy:

1. Select **Configure > Policy-Name Policy > Policies**.

The Policies landing page appears.

2. Right-click the policy to which you want to assign devices, or select **Assign Devices** from the More menu.

The Assign Devices page appears. The Name field shows the name of the selected policy and is not editable.

3. Select the **Show only devices without policy assigned** check box.

Only devices that are not assigned to any policy are displayed in the Device Selection section.

4. Select the devices you want to add to the policy from the Available column and click the right arrow to move these devices to the Selected **column**.



NOTE: There is an option to search for devices in the Selected column on the Assign Devices page. By default, all selected devices are sorted in a list and you can search for devices again, if required.

5. Click **OK** to assign the selected devices to the selected **policy**.



NOTE: If you do not have permission to certain devices, those devices are not visible while assigning devices to a new or existing policy.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

Customizing Profile Names

You can customize the profile names, which are automatically generated by Security Director. Each automatically created profile contains rules and these rules are associated to a zone. For example, you add two rules to an application-based policy and assign the rules to zone 10 and add the third rule and assign it to zone 11, then the first two rules are automatically created as one profile and the third rule is automatically created as another profile.

To customize the profile names:

1. Select **Configure > Application Policy Based Routing**.

The Application Policy Based Routing page is displayed.

2. Right-click the policy name for which you want to customize the profile or select **Configure profile** from the **More** menu.

The Configure profile page is displayed. It displays the zones configured on the rules and the profile name.

3. Click the profile name and enter the customized profile name.
4. Click **OK** to customize the profile names.

RELATED DOCUMENTATION

[Configuring Advanced Policy-Based Routing Policy | 906](#)

[Creating Advanced Policy-Based Routing Rules | 908](#)

Publishing Policies

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups, with prerules in the High priority group publishing first, before prerules in the Medium and Low priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other policies in the same priority group. However, such policies do not need to be republished in order for their changes in priority or precedence to take effect for the policies that are implicitly changed by the explicit changes to the republished policy.

To publish a policy:

1. Select **Configure > Policy-Name Policy > Policies**.

2. Select the policy that you want to publish and click **Publish**. The Publish Policy page appears.
3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the policy is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

4. Select **Schedule at a later time** if you want to schedule and publish the configuration later.
5. Select **Run now** if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

[Updating Policies on Devices | 519](#)

Updating Policies on Devices

When you finish creating and verifying your security configurations, you can publish these configurations and keep them ready to be pushed to the security devices. Security Director helps you push all the security configurations to the devices all at once by providing a single interface that is intuitive.

The Publish workflow provides the ability to save and publish different services to be updated at a later time to the appropriate firewalls (during the down time). This permits administrators to review their firewall, VPN, and NAT policies before updating the device. This saves administrators troubleshooting time, avoid errors, and saves costs associated with errors. Verify and tweak your security configurations before updating them to the device by viewing the CLI and XML version of the configuration in the Publish workflow. This approach helps you keep the configurations ready and update these configurations to the devices during the maintenance window.

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups, with prerules in the High priority group publishing first, before prerules in the Medium and Low priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other policies in the same priority group. However, such policies do not need to be republished in order for their changes in priority or precedence to take effect for the policies that are implicitly changed by the explicit changes to the republished policy.

To update a policy:

1. Select **Configure > Policy-Name Policy > Policies**. Select the policy that you want to update and click **Update**. The Update Policy page appears.
2. Select the policy that you want to update and click **Update**. The Update Policy page appears.
3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the policy is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

4. Select **Schedule at a later time** if you want to schedule and publish the configuration later.
5. Select **Run now** if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

[Publishing Policies | 730](#)

Threat Prevention - Policies

IN THIS CHAPTER

- [Creating Threat Prevention Policies | 917](#)
- [Threat Prevention Policy Overview | 924](#)
- [Threat Policy Analysis Overview | 927](#)
- [Implementing Threat Policy on VMWare NSX | 928](#)

Creating Threat Prevention Policies

You can create threat prevention policies for various profiles from the Policies page.



NOTE: If you are creating policies for the first time, you are given the option of setting up Policy Enforcer with Juniper ATP Cloud or configuring Juniper ATP Cloud alone. Clicking either button takes you to quick setup for your selection. See *Comparing the Juniper Connected Security and non-Juniper Connected Security Configuration Steps* for a configuration comparison.

Before You Begin

- Determine the type of profile you will use for this policy; command & control server, infected hosts, malware. You can select one or more threat profiles in a policy. Note that you configure Geo IP policies separately. See *Creating Geo IP Policies*.
- Determine what action to take if a threat is found.
- Know what policy enforcement group you will add to this policy. To apply the policy, you must assign one or more policy enforcement groups. See the instructions for assigning groups to policies at the bottom of this page.
- Once policies are configured with one more groups assigned, you can save a policy in draft form or update it. Policies changes do not go live until they have been updated.

- If you are using Juniper ATP Cloud without Policy Enforcer, you must assign your threat prevention policy to a firewall rule for it to take affect. See the instructions at the bottom of this page.
- If you delete a threat prevention policy that is assigned to a policy enforcement group, a status screen appears displaying the progress of the deletion and the affected configuration items.

To create a threat prevention policy:

1. Select **Configure>Threat Prevention > Policies**.

2. Click the + icon.

The Create Threat Prevention Policy page appears.

3. Complete the configuration by using the guidelines in the [Table 265 on page 918](#), [Table 266 on page 919](#), [Table 267 on page 919](#), [Table 268 on page 920](#), and [Table 269 on page 923](#) below.

4. Click **OK**.

Table 265: Fields on the Threat Prevention Policy Page

| Field | Description |
|---|---|
| Name | Enter a unique string that must begin with an alphanumeric character and can include underscores; no spaces allowed; 63-character maximum. |
| Description | Enter a description; maximum length is 1024 characters. You should make this description as useful as possible for all administrators. |
| Profiles | <p>Include the following profiles to your threat prevention policy. You must include at least one profile. An error message is shown if you try to create the threat prevention policy without selecting a profile.</p> <ul style="list-style-type: none"> • C&C profile—See Table 266 on page 919. • Infected host profile—See Table 267 on page 919. • Malware profile—See Table 268 on page 920. • DDoS profile—See Table 269 on page 923. |
| Log Setting (Policy setting for all profiles) | Select the log setting for the policy. You can log all traffic, log only blocked traffic, or log no traffic. |

[Table 266 on page 919](#) shows the management of command and control server threat in a policy.

Table 266: C&C Server Profile Management

| Field | Description |
|--|--|
| Command and Control Server | Select and choose settings for command and control servers. A C&C is a centralized computer that issues commands to botnets (compromised networks of computers) and receives reports back from them. Botnets can be used to gather sensitive information, such as account numbers or credit card information, or to participate in a distributed denial-of-service (DDoS) attack. |
| <i>Include C&C profile in policy</i> | Select the check box to include management for this threat type in the policy. |
| Threat Score | Use the slider to change the action to be taken based on the threat score. Threat scores are assigned using several criteria. Refer to the monitoring pages in the UI to investigate, located under Monitor > Threat Management . |
| Actions | <p>If the threat score is high enough to cause a connection to be blocked, you have following configurable options:</p> <ul style="list-style-type: none"> • Drop connection silently (This is the default and recommended setting.) • Close connection and do not send a message <ul style="list-style-type: none"> • Close connection and redirect to URL—In the field provided, enter a URL to redirect users to when connections are dropped. • Send custom message—In the field provided, enter a message to be shown to users when connections are dropped. |

Table 267 on page 919 shows the management of infected host threat in a policy.

Table 267: Infected Host Profile Management

| Field | Description |
|----------------------|---|
| Infected Host | Infected hosts are systems for which there is a high confidence that attackers have gained unauthorized access. Infected hosts data feeds are listed with the IP address or IP subnet of the host, along with a threat score. |

Table 267: Infected Host Profile Management (*Continued*)

| Field | Description |
|--|---|
| <i>Include infected host profile in policy</i> | <p>Select the check box to include management for this threat type in the policy.</p> <p>NOTE: If you want to enforce an infected host policy <i>within</i> the network, you must include a switch in the site.</p> |
| Actions | <p>You have following options:</p> <ul style="list-style-type: none"> • Drop connection silently (This is the default and recommended setting.) • Monitor—Choose this option to log all the traffic for certain infected hosts and monitor it. You can then choose to perform any action on the monitored data. <p>NOTE: The PEG must contain only Space subnets or devices. The Monitor action for the infected host profile is not applicable to any third party connector devices. An error message is shown.</p> • Quarantine—In the field provided, enter a VLAN to which quarantined files are sent. (Note that the fallback option is to block and drop the connection silently.) |

Table 268 on page 920 shows the management of malware threat in a policy.

Table 268: Malware Threat Profile Management

| Field | Description |
|---|---|
| Malware (HTTP file download, SMTP File attachment, and IMAP attachments) | Malware is files that are downloaded by hosts or received as email attachments and found to be suspicious based on known signatures, URLs. or other heuristics. |
| <i>Include malware profile in policy</i> | Select the check box to include management for this threat type in the policy. |
| HTTP file download | Turn this feature on to scan files downloaded over HTTP and then select a file scanning device profile. The device profile is configured using Juniper ATP Cloud. |

Table 268: Malware Threat Profile Management *(Continued)*

| Field | Description |
|-----------------------|--|
| Scan HTTPS | Turn this feature to scan encrypted files downloaded over HTTPS. |
| Device Profile | Select ATP Cloud device profile. This is configured through ATP Cloud. ATP Cloud profiles let you define which files to send to the cloud for inspection. You can group types of files to be scanned together under a common name and create multiple profiles based on the content you want scanned. |
| Actions | <p>If the threat score is high enough to cause a connection to be blocked, you have following configurable options:</p> <ul style="list-style-type: none"> • Drop connection silently (This is the default and recommended setting.) • Close connection and do not send a message <ul style="list-style-type: none"> • Close connection and redirect to URL—In the field provided, enter a URL to redirect users to when connections are dropped. • Send custom message—In the field provided, enter a message to be shown to users when connections are dropped. |
| SMTP File Attachments | Turn this feature on to inspect files received as email attachments (over SMTP only). |
| Scan SMTPS | <p>Enable this option to configure reverse proxy for SMTP.</p> <p>The reverse proxy does not prohibit server certificates. It forwards the actual server certificate or chain as is to the client without modifying it.</p> |
| Device Profile | <p>If you do not click the Change button to select a device profile for SMTP scanning, the device profile selected for HTTP will be used by default.</p> <p>Select Change to use a different device profile for SMTP.</p> <p>Device profiles are configured through ATP Cloud and define which files to send to the cloud for inspection.</p> |
| Threat Score | Use the slider to change the action to be taken based on the threat score. Threat scores are assigned using several criteria. This threat score applies to all malware, HTTP and SMTP. (Note: There is no monitoring setting for malware.) |

Table 268: Malware Threat Profile Management *(Continued)*

| Field | Description |
|------------------|---|
| Actions | Actions for SMTP File Attachments include: Quarantine, Deliver malicious messages with warning headers added, and Permit. This actions are set in ATP Cloud. Refer to the Juniper ATP Cloud documentation for information. |
| IMAP Attachments | Turn this feature on to select a a file scanning device profile and threat score ranges to apply to IMAP e-mails. |
| Scan IMAPS | Enable this option to configure reverse proxy for IMAP e-mails. |
| Device Profile | <p>If you do not click the Change button to select a device profile for IMAP scanning, the device profile selected for HTTP will be used by default.</p> <p>Select Change to use a different device profile for IMAP.</p> <p>Device profiles are configured through ATP Cloud and define which files to send to the cloud for inspection.</p> |
| Actions | Actions for IMAP Attachments include: Block, Deliver malicious messages with warning headers added, and Permit. This actions are set in ATP Cloud. Refer to the Juniper ATP Cloud documentation for information. |
| Threat Score | Use the slider to change the action to be taken based on the threat score. Threat scores are assigned using several criteria. This threat score applies to all malware, HTTP, SMTP, and IMAP. (Note: There is no monitoring setting for malware.) |

Table 269 on page 923 shows the management of DDoS threat in a policy

Table 269: DDoS Threat Profile Management

| Field | Description |
|---------------------------------------|--|
| <i>Include DDoS Profile in Policy</i> | <p>Enable this option to include the management of Distributed denial-of-service (DDoS) protection that enables the MX router to quickly identify an attack and prevent a flood of malicious control packets from exhausting system resources.</p> <p>When you create a threat policy for the DDoS profile, it is not pushed to the device because the policy is not yet assigned to any device. Assign the policy to the policy enforcement group. Because the policy is created for the MX router, rule analysis is not initiated when a policy is assigned to the policy enforcement group (PEG).</p> |
| Actions | <p>Select the following actions from the list for the DDoS profile:</p> <ul style="list-style-type: none"> • Block—Use this option to block the DDoS attack. • Rate Limit Value—Use this option to limit the bandwidth on the flow route. You can express the rate limit value in Kbps, Mbps, or Gbps units. The rate limit range is 10Kbps to 100Gbps. • Forward to—Use this option to configure the routing next hop to forward the packets for scrubbing. |
| Scrubbing Site | Specify a routing instance to which packets are forwarded in the <i>as-number:community-value</i> format, where each value is a decimal number. For example, 65001:100. |

Once you have a threat prevention policy, you assign one or more groups to it:

1. In the threat prevention policy main page (located under **Configure>Threat Prevention > Policy**), find the appropriate policy.
2. In the Policy Enforcement Groups column, click the **Assign to Groups** link that appears here when there are no policy enforcement groups assigned or click the group name that appears in this column to edit the existing list of assigned groups. You can also select the check box beside a policy and click the **Assign to Groups** button at the top of the page. See *Policy Enforcement Groups Overview*.

For the infected host profiles created with Monitor action, you cannot assign a policy enforcement group if it contains only the third-party connector devices or the combination of both Junos Space and third-party connector devices. You must have only the Junos Space subnets in the policy enforcement groups to assign them to the infected host profiles with Monitor action.

If you edit an existing infected host profile with either Drop Connection or Quarantine action to Monitor action, you cannot assign any policy enforcement group having only third-party connector devices or the combination of Junos Space and third-party connector devices.

3. In the Assign to Groups page, select the check box beside a group in the Available list and click the > icon to move it to the Selected list. The groups in the Selected list will be assigned to the policy.
4. Click **OK**.
5. Once one or more policy enforcement groups have been assigned, a **Ready to Update** link appears in the Status column. You must update to apply your new or edited policy configuration. Clicking the Ready to Update link takes you the Threat Policy Analysis page. See *Threat Policy Analysis Overview*. From there you can view your changes and choose to Update now, Update later, or Save them in draft form without updating.
6. If you are using Juniper ATP Cloud without Policy Enforcer, you must assign your threat prevention policy to a firewall rule for it to take affect. Navigate to **Configure > Firewall Policy > Policies**. In the Advanced Security column, click an item to access the Edit Advanced Security page and select the threat prevention policy from the **Threat Prevention** pulldown list.

RELATED DOCUMENTATION

| |
|--|
| <i>Comparing the Juniper Connected Security and non-Juniper Connected Security Configuration Steps</i> |
| <i>Creating Policy Enforcement Groups</i> |
| <i>Threat Policy Analysis Overview</i> |
| <i>Creating Geo IP Policies</i> |
| <i>Threat Prevention Policy Overview</i> |
| <i>Policy Enforcer Overview</i> |
| <i>Benefits of Policy Enforcer</i> |
| <i>Policy Enforcer Components and Dependencies</i> |
| Juniper ATP Cloud Overview |

Threat Prevention Policy Overview

IN THIS SECTION

- [Benefits of Threat Prevention Policy | 926](#)

Threat prevention policies provide protection and monitoring for selected threat profiles, including command and control servers, infected hosts, and malware. Using feeds from ATP Cloud and optional custom feeds that you configure, ingress and egress traffic is monitored for suspicious content and behavior. Based on a threat score, detected threats are evaluated and action may be taken once a verdict is reached.

Once policies are configured, the following fields are available on the Security Director main page to provide an overview of each policy.

Table 270: Threat Prevention Policy Fields

| Field | Description |
|------------------------|---|
| Name | The user-created name for the policy. |
| Profile: C&C Server | Threat score settings overview if selected for the policy. (Otherwise this field is empty.) For example: Block: 8-10 Monitor: 5-7 Permit: 1-4 |
| Profile: Infected Host | Threat score settings overview if selected for the policy. (Otherwise this field is empty.) |
| Profile: Malware HTTP | Threat score settings overview if selected for the policy. (Otherwise this is empty.) |
| Profile: Malware SMTP | Threat score settings overview if selected for the policy. (Otherwise this field is empty.) |

Table 270: Threat Prevention Policy Fields (Continued)

| Field | Description |
|--------------------------|---|
| Status | <p>This displays the status of the policy. This status is a clickable link you can use to change the policy status. When you first create a policy and assign it to a group, this field reads View Analysis. Read <i>Threat Policy Analysis Overview</i> for more information on this field.</p> <p>If the status is Update Failed, click Retry to perform the rule analysis again. You can click the Update Failed status to see the corresponding job details. The rule analysis retry option is available only when the status is Update Failed.</p> <p>NOTE: If the policy has been updated after it has already been pushed to the endpoint, the status here is Update with a warning icon to notify you the policy has been changed but not pushed.</p> |
| Policy Enforcement Group | This is the group to which the policy is assigned. |
| Log | This field displays the log setting for the policy. |
| Description | The user-created description for the policy. |

Benefits of Threat Prevention Policy

- Enables you to define and enforce policies for controlling specific applications and embedded social networking widgets.
- Reduces the need for manual updates and automatically applies policies and enforcement rules, driving down the costs of managing network security.
- Leverages the network for multiple enforcement points across the infrastructure. Enables you to stop threats closer to infection points and to prevent threats from spreading, which greatly improves the efficacy of security operations.

RELATED DOCUMENTATION

| |
|--|
| <i>Creating Threat Prevention Policies</i> |
| <i>Policy Enforcement Groups Overview</i> |
| <i>Creating Geo IP Policies</i> |
| <i>Policy Enforcer Overview</i> |
| <i>Benefits of Policy Enforcer</i> |
| <i>Policy Enforcer Components and Dependencies</i> |
| <i>Juniper ATP Cloud Overview</i> |

Threat Policy Analysis Overview

In the Threat Prevention Policies page, click the **Ready to Update** link in the Status column to update policy changes. Policies must be updated before they can go live.



NOTE: If the policy has been updated after it has already been pushed to the endpoint, the status here is **Update** with a warning icon to notify you that the policy has been changed but not pushed.

Use the threat policy analysis page to view your pending policy changes in chronological order. Click the **View Analysis** link to view the changes. In the Action section, you can select to Update now, Update later, or Save the changes without updating. If you select to update later, you can schedule a time to update.

By clicking on the policy links, you can update only the policies you select and choose not to update others.

RELATED DOCUMENTATION

| |
|--|
| <i>Threat Prevention Policy Overview</i> |
| <i>Creating Threat Prevention Policies</i> |

Implementing Threat Policy on VMWare NSX

IN THIS SECTION

- [VMWare NSX Integration with Policy Enforcer and Juniper ATP Cloud Overview | 928](#)
- [Before You Begin | 931](#)
- [Configuring VMware NSX with Policy Enforcer | 933](#)
- [Example: Creating a Firewall Rule in VMWare vCenter Server Using SDSN_BLOCK Tag | 936](#)

VMWare NSX Integration with Policy Enforcer and Juniper ATP Cloud Overview

IN THIS SECTION

- [Implementation of Infected Hosts Policy Overview for VMware NSX | 930](#)
- [Registering NSX Micro Service as Policy Enforcer Connector Instance Overview | 931](#)

Juniper Networks Advanced Threat Prevention Cloud (Juniper ATP Cloud) identifies the infected virtual machines (VMs) running on VMWare NSX and tags these VMs as infected. This is based on a malware file exchange from the infected VMs and/or based on the Command and Control communication with known botnet sites on the internet.


Based on this identification of infected or compromised hosts, you can take one of the following actions:

- Enable additional security features such as Layer-7 Application Firewall and Intrusion Prevention (IPS) leveraging vSRX
- Enforce Layer-2 to Layer-4 controls using NSX Distributed Firewall
- Leverage NSX integration with Host-Based security vendors (<https://www.vmware.com/products/nsx/technology-partners.html>) to take host-based security actions such as running antivirus or anti malware features on the infected VMs.

Policy Enforcer provides a set of Connector APIs for the third-party adaptors. The NSX Connector integrates with the Policy Enforcer using these APIs to enable enforcement of the infected hosts policy on Secure Fabric. For NSX connectors, the NSX Manager, its associated vCenter, and an edge firewall form the Secure Fabric.

The following topology shows how NSX Manager and the edge firewall create a Secure Fabric to use with Policy Enforcer.

Figure 59: Topology of NSX Integration with Policy Enforcer

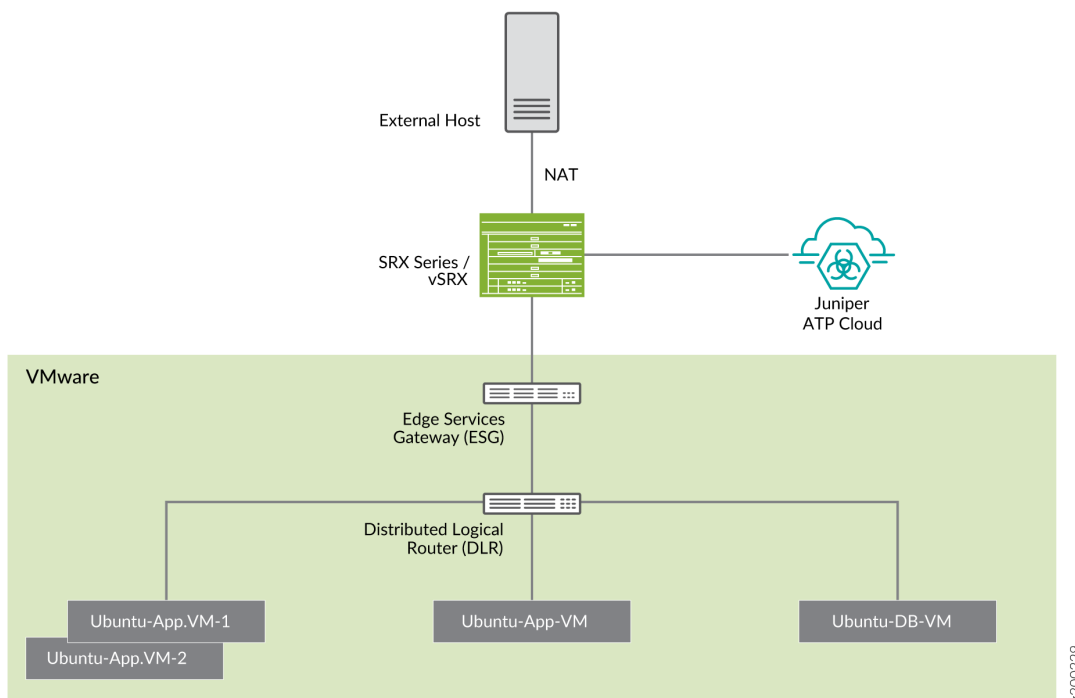

Within the NSX Manager, the virtual machines (VM) connect to logical networks, shown as green and yellow colour logical networks, as shown in [Figure 59 on page 929](#). The logical switches connect to each other using a Distributed Logical Router(DLR). To form the Secure Fabric, configure the edge service gateway (ESG) to point to SRX Series devices or vSRX as the gateway for the networks hosted on NSX. This is implemented by establishing IBGP session between ESG and vSRX or SRX Series device. This ensures that all the north-south traffic passes through the vSRX edge firewall. The vSRX edge gateway is enrolled with Juniper ATP Cloud for the traffic inspection.

If NAT services are required, it must be configured on the vSRX and not on the ESG. Configure NAT services using the following CLI commands.

```
set security nat source rule-set trust-to-untrust from zone trust
set security nat source rule-set trust-to-untrust to zone untrust
set security nat source rule-set trust-to-untrust rule snat-rule match source-address 0.0.0.0/0
set security nat source rule-set trust-to-untrust rule snat-rule then source-nat interface
```


To establish a BGP session, use the following configuration commands:

```
set routing-options autonomous-system 10

set protocols bgp group nsx neighbor 5.0.0.2 peer-as 10
```

You can view the BGP configuration in VMWare vCenter Server, as shown in [Figure 60 on page 930](#).

Figure 60: VMWare vCenter BGP Configuration

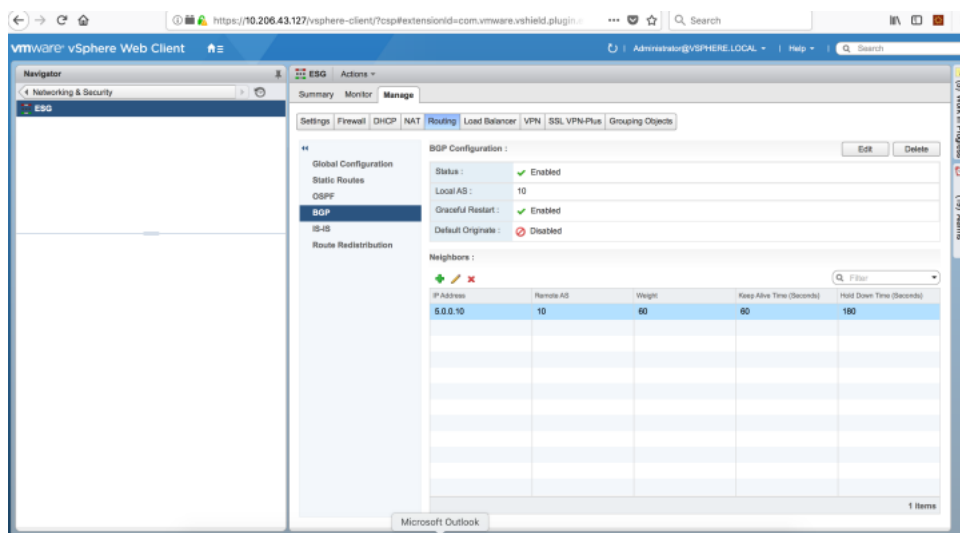

NOTE: You can register the NSX Manager with Security Director only when the Policy Enforcer is configured. The NSX micro service is bundled with the Policy Enforcer VM. However, the NSX micro service is packaged as a standalone rpm, so that the NSX micro service upgrade and patches can be performed independent of the Policy Enforcer VM.

Implementation of Infected Hosts Policy Overview for VMware NSX

The vSRX or SRX Series devices running as an edge firewall is enrolled to send all the suspected traffic to Juniper ATP Cloud.

The following steps explain the high-level workflow:

- If an infection is detected, Juniper ATP Cloud notifies the Policy Enforcer about the infected IP addresses
- If the infected IP address belongs to Secure Fabric associated with the NSX domain, Policy Enforcer calls the NSX plugin APIs to notify the NSX Connector about the list of infected IP addresses
- NSX service will then retrieve the VM corresponding to the IP addresses sent and then calls the NSX API to tag to an appropriate VM with a security tag, SDSN_BLOCK.

You can then create a policy to block the infected hosts using the SDSN_BLOCK tag by creating VMWare Distributed Firewall (DFW) rules. The block policy consists of two rules for ingress block and egress block. The ingress block rule applies to any traffic originating from a security group composed of VMs tagged with a block tag to any destination. Similarly, the egress block rule applies to any traffic destined to security group composed of VMs tagged with block tag from any source.

The creation of security groups associated with the SDSN_BLOCK tag, creation of ingress and egress block rules, and the action to take on the matching packets must be configured by the VMWare administrators. The NSX Connector will simply apply the SDSN_BLOCK tag on the infected VM.

Registering NSX Micro Service as Policy Enforcer Connector Instance Overview

The integration of each NSX manager discovered in Security Director with Policy Enforcer is triggered automatically.

The automatic registration of a connector instance involves the following steps:

1. Discovering the NSX Manager in Security Director. This triggers an auto creation of the Policy Enforcer connector instance.
2. Secure Fabric is created to manage the discovered NSX Manager.
3. Creation of threat prevention policy requires the knowledge of Juniper ATP Cloud realm and the edge firewall device. These are taken as inputs from the user.

Before You Begin

IN THIS SECTION

- [Infected Hosts Workflow in VMware vCenter Server | 931](#)

Before you begin to configure NSX with Policy Enforcer, configure the infected hosts workflow in VMWare vCenter Server.

Infected Hosts Workflow in VMware vCenter Server

To block the infected hosts:

1. Log in to the vSphere Web Client through the VMware vCenter Server.
2. From the vSphere Web Client, click **Networking & Security** and then click **NSX Managers**.
Under the Manage section, click **Security Tags** column head and create SDSN_BLOCK security tag for NSX, as shown in [Figure 61 on page 932](#).

Figure 61: SDSN_BLOCK Security Tag

| Name | VM Count | Description | System Defined |
|---|----------|---|----------------|
| AntiVirus.virusFound | 0 | This tag is now deprecated. Please use ANTI_VI... | Yes |
| ANTI_VIRUS_VirusFound.threat-high | 0 | Tag indicates that the viruses found have a high ... | Yes |
| ANTI_VIRUS_VirusFound.threat-low | 0 | Tag indicates that the viruses found have a low l... | Yes |
| ANTI_VIRUS_VirusFound.threat-medium | 0 | Tag indicates that the viruses found have a med... | Yes |
| DATA_SECURITYviolationsFound | 0 | Tag indicates that data violation was detected | Yes |
| IDS_IPS.threat-high | 0 | Tag indicates that the data violation detected ha... | Yes |
| IDS_IPS.threat-low | 0 | Tag indicates that the data violation detected ha... | Yes |
| IDS_IPS.threat-medium | 0 | Tag indicates that the data violation detected ha... | Yes |
| SDSN_BLOCK | 0 | | No |
| VULNERABILITY_MGMT.VulnerabilityFoun... | 0 | Tag indicates that the vulnerability found has a h... | Yes |
| VULNERABILITY_MGMT.VulnerabilityFoun... | 0 | Tag indicates that the vulnerability found has a l... | Yes |
| VULNERABILITY_MGMT.VulnerabilityFoun... | 0 | Tag indicates that the vulnerability found has a ... | Yes |

The feed for the infected hosts will be triggered by Juniper ATP Cloud down to Policy Enforcer. When there is a trigger, the SDSN_BLOCK tag is attached to the VM. Click on the VM Count column to see the VM details attached to the tag.

3. Select **Networking & Security** and then click **Service Composer**.

The Service Composer page appears. From the Service Composer, click the **Security Groups** tab. The security administrator can create the security group based on the security tag.

4. Click the **New Security Group** icon to create a new security group.

5. Enter a name and description for the security group and then click **Next**.

6. On the Define dynamic membership page, define the criteria that an object must meet for it to be added to the security group you are creating.

In the Criteria Details row, select **Security Tag** from the list and provide the SDSN_BLOCK tag name, as shown in [Figure 62 on page 933](#).

Figure 62: Define Dynamic Membership Page

Click **Next**.

7. In the Ready to Complete page, verify the parameters and click **Finish**.

In the Service Composer page, under the Security Groups tab, you can see that the security group has been created and the VM with the security tag is assigned to the security group.

Configuring VMware NSX with Policy Enforcer

The following steps explain configuring VMWare NSX with Policy Enforcer:

1. Add the NSX Manager to the Security Director database, as shown in [Figure 63 on page 934](#). To know more about adding a NSX Manager, see [Adding the NSX Manager](#).

Figure 63: Adding NSX Manager Page

Add NSX Manager ?

1 NSX Manager 2 Service Manager Registration 3 vCenter Server

Name * ? NSX-134

Host * ?

Port * ? 443

Username * ? admin

Password * ?

Description ?

SSL Certificate ?

Certificate:
Data:
Version: 3 (0x2)
Serial Number: 1727849944 (0x66fce5d8)
Signature Algorithm: sha256WithRSAEncryption
Issuer: C=US, ST=CA, L= Palo Alto

Accept SSL Certificate * ? ☒

Cancel Next

2. After discovering the NSX Manager in Security Director, use the Guided Setup workflow to configure the following parameters:

- Secure Fabric
- Policy Enforcement Group (PEG)
- Juniper ATP Cloud Realm
- Threat policies for the following threat types:
 - Command and Control (C&C) Server
 - Infected Hosts
 - Malware


3. Select **Configuration > Guided Setup > Threat Prevention**.

The Threat Prevention Policy Setup page appears.

4. Click **Stat Setup**.

The Threat Prevention Policy Setup page appears, as shown in [Figure 64 on page 935](#). Some of the resources are already configured as you discover the NSX Manager.

Figure 64: Guided Setup Page

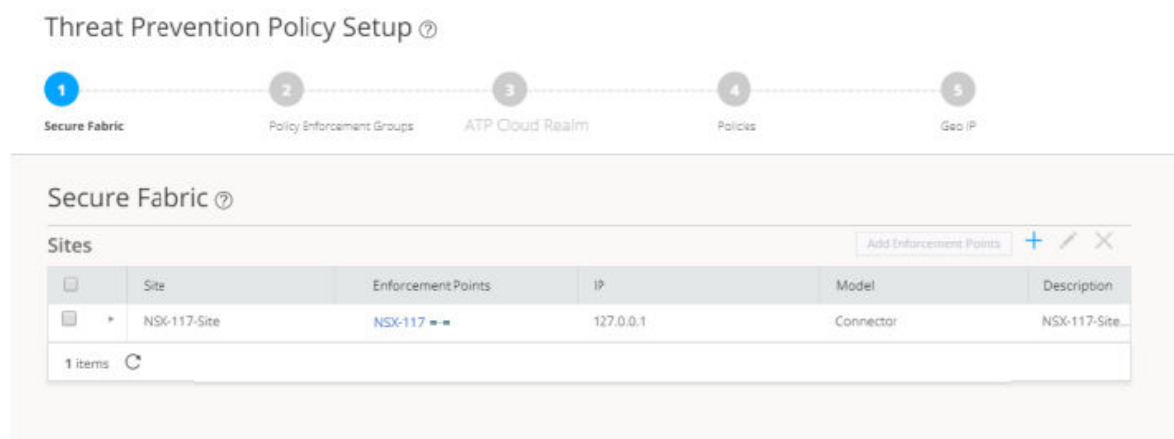

5. In the Secure Fabric page, the site is already created. For that site, one enforcement point is also added.

To create a secure fabric site in Policy Enforcer for NSX based environment, you require two parts : NSX Manager and edge firewall. In the Add Enforcement Points page, add vSRX, as shown in the topology, as a edge firewall. Select the vSRX device listed under the Available column and move it to the Selected column. You now have two enforcement points within the Secure Fabric.

Click **Next**.

6. In the Policy Enforcement Groups page, the policy enforcement group is already created based on the Location Group Type. The location points to the Secure Fabric site created for NSX.

Click. **Next**.

7. In the ATP Cloud Realm page, associate the Secure Fabric with ATP Cloud realm.

If the ATP Cloud realm is already created, click **Assign Sites** in the Sites Assigned column and chose the Secure Fabric site. The ATP Cloud realm and Secure Fabric are now associated.

Click. **Next**.

8. In the Policies page, create a threat prevention policy by choosing the profile types depending on the type of threat prevention this policy provides (C&C Server, Infected Host, Malware) and an action for the profile. The DDoS profile is not supported by the NSX Connector. Once configured, you apply policies to PEGs.

Click **Assign groups** in the Policy Enforcement Group column to associate the policy enforcement group with the policy.

Security Director takes the snapshot of the firewall by performing the rule analysis and threat remediation rules are pushed into the edge firewall.

Click **Finish**.



NOTE: The GeoIP feeds are not used with the NSX Connectors.

9. The last page is a summary of the items you have configured using quick setup. Click **OK** to be taken to the Policies page under Configure > Threat Prevention > Policies and your policy is listed there.

Example: Creating a Firewall Rule in VMWare vCenter Server Using SDSN_BLOCK Tag

The following example shows the firewall rule creation using the SDSN_BLOCK security tag:

1. Log in to the vSphere Web Client through the VMware vCenter Server.
2. Select **Networking & Security** and then click **Service Composer**.
The Service Composer page appears.
3. Select **Security Policies** tab in the Service Composer page.
Create a security policy to block the traffic coming from the infected hosts.
4. Select the **Create Security Policy** icon.
The New Security Policy page appears.
5. Enter a name and description for the security policy, and click **Next**.
6. Select the **Firewall Rules** option from the left pane.
The Firewall Rules page appears.
7. Select the New Firewall Rule icon (+) to create a new firewall rule.
The New Firewall Rule page appears.
8. Enter the name of the firewall rule.
9. In the Action field, select the **Block** option.
10. In the Source field, click **Change** and select the security group.
11. In the Destination field, click **Change** and select the security group to add as Any.
Click **Ok**. [Figure 65 on page 937](#) shows a sample firewall rule configuration.

Figure 65: New Firewall Rule Page

New Firewall Rule

Name:

Description/Comments:

Action: ☐ Allow ☒ Block ☐ Reject

Source: Policy's Security Groups [Change...](#)
☐ Negate source

Destination: Any [Change...](#)
☐ Negate destination

i Either source or destination selection (or both) must be "Policy's Security Groups". Current selection will apply to "Outgoing" traffic from the security groups where this policy gets applied to specified Destination.

Service: Any [Change...](#)

State: ☒ Enabled ☐ Disabled

Log: ☐ Log ☒ Do not log

OK **Cancel**


12. Click Finish.

A new policy is created. You can apply this policy to the security group.

13. In the Security Policies page, right-click on the policy name and select **Apply Policy.**

The Apply Policy to Security Groups page appears, as shown in [Figure 66 on page 938](#).

Figure 66: Apply Policy to SG Page

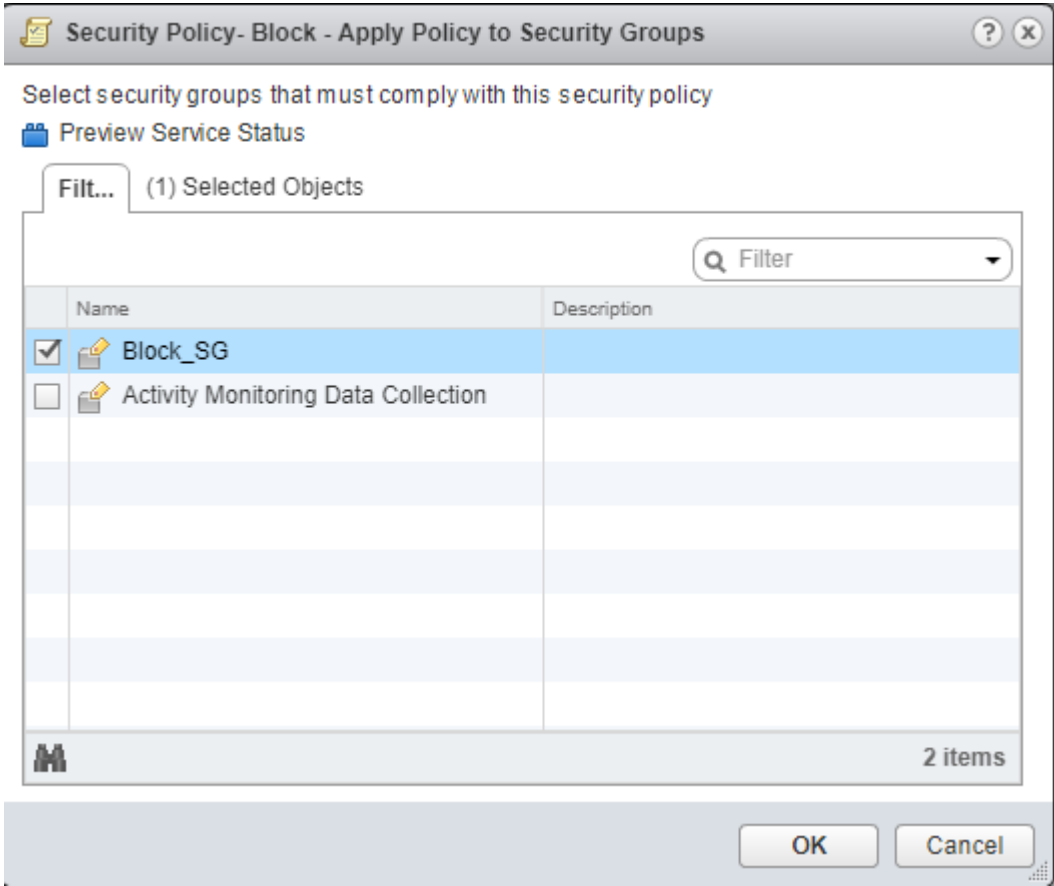

14. Select the security group that you have created and assign to a policy.
Security administrator is now able to block the traffic coming from the infected hosts.

Threat Prevention - Feed Sources

IN THIS CHAPTER

- [About the Feed Sources Page | 939](#)
- [Juniper ATP Cloud Realm Overview | 945](#)
- [Juniper ATP Cloud Malware Management Overview | 945](#)
- [Juniper ATP Cloud Email Management Overview | 946](#)
- [File Inspection Profiles Overview | 948](#)
- [Juniper ATP Cloud Email Management: SMTP Settings | 949](#)
- [Configure IMAP Settings | 952](#)
- [Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites | 955](#)
- [Modifying Juniper ATP Cloud Realm | 959](#)
- [Creating File Inspection Profiles | 960](#)
- [Creating Allowlist for Juniper ATP Cloud Email and Malware Management | 963](#)
- [Creating Blocklists for Juniper ATP Cloud Email and Malware Management | 964](#)
- [Add ATP Appliance Server | 966](#)
- [Edit or Delete a ATP Appliance Server | 968](#)
- [Custom Feed Sources Overview | 969](#)
- [Creating Custom Feeds | 971](#)
- [Example: Creating a Dynamic Address Custom Feed and Firewall Policy | 976](#)
- [Configuring Settings for Custom Feeds | 978](#)

About the Feed Sources Page

IN THIS SECTION

- [Tasks You Can Perform | 940](#)

To access this page, click **Configure > Threat Prevention > Feed Sources**.

Policy Enforcer uses threat feeds to provide actionable intelligence to policies about various types of threats. These feeds can come from different sources, such as Juniper ATP Cloud, Juniper ATP, and from lists that you can customize by adding IP addresses, domains, and URLs.

You can add allowlist and blocklist in Juniper ATP Cloud and as well as in Custom feeds. When you add an allowlist or blocklist in Custom feeds, a warning message shows that it will erase the existing allowlist or a blocklist in Juniper ATP Cloud, if any. You can only have one source for allowlist, blocklist, and infected host feeds.

Tasks You Can Perform

You can perform the following tasks from the Juniper ATP Cloud page:

- Add ATP Cloud realm. See [Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#).
- Inspect and manage email attachments sent over SMTP. See *Sky ATP Email Management: SMTP Settings*.
- Configure email management for IMAP. See *Configure IMAP Settings*.
- Configure Allowlist and Blocklist. See *Creating Whitelists for Sky ATP Email and Malware Management* and *Creating Blacklists for Sky ATP Email and Malware Management*.
- Configure file inspection profiles. See *Creating File Inspection Profiles*.
- Edit the ATP Cloud realm. See [Modifying Juniper ATP Cloud Realm](#).
- Delete the ATP Cloud realm.

You can perform the following tasks from the ATP Appliance page:

- Add ATP Appliance server. See *Add JATP Server*.
- Edit the ATP Appliance server configuration. See *Edit or Delete a JATP Server*.
- Delete the ATP Appliance server.

You can perform the following tasks from the Custom Feeds page:

- Create custom feeds for the dynamic address, allowlist, blocklist, infected hosts, DDoS, and C&C Server feed types. See *Creating Custom Feeds*.
- Configure settings. See *Configuring Settings for Custom Feeds*.
- Edit the custom feed.
- Delete the custom feed.

Field Descriptions

Table 271 on page 941 provides guidelines on using the fields on the Feed Sources page.

Table 271: Fields on the Feed Sources Page

| Field | Description |
|-------------------|--|
| ATP Cloud | |
| Realm | Name of the Juniper ATP Cloud realm. |
| Sites | Name of the site associated to the realm. |
| Devices | Name of the perimeter firewall devices that are enrolled to Juniper ATP Cloud. |
| Location | Region of the Juniper ATP Cloud realm. |
| Enrollment Status | Enrollment status of the realm. |

Table 271: Fields on the Feed Sources Page *(Continued)*

| Field | Description |
|-----------------|---|
| Token Expiry | <p>Expiry date and time of a token generated at the Juniper ATP Cloud side when a realm is registered. The token will be valid for one year. Once the token expires, the status is flipped to Expired.</p> <p>Thirty days prior to the expiry date, renew option is enabled to renew the token. Click Renew to renew the token. Enter the realm credentials in the renew window and if the realm credentials are valid, a new token is generated and assigned to the realm. The old and the expired token is deleted.</p> <p>NOTE: The username (e-mail address) that you provide as realm credentials must exactly match with the username that is used while creating a realm in Juniper ATP Cloud. To view the username in the Juniper ATP Cloud user interface, go to Administration>Users.</p> <p>The e-mail address used as a username is case sensitive. If there is a mismatch in the username, the validation of realm credentials fails and the token will not be renewed.</p> |
| Feed Status | <p>The consolidated status of all the feeds of a selected Juniper ATP Cloud realm is shown here.</p> <p>If the status of any one of the feeds is FAILED, then the consolidated status is shown as FAILED. Hover over the field to see the individual status of each feed. The status of IPv6 feeds are also listed along with other feed sources.</p> |
| Last Downloaded | <p>The date and time of the last time Policy Enforcer has requested the feeds from Juniper ATP Cloud is shown here. Hover over the field to view a detailed list of date and time of each feed download.</p> |
| JATP | |
| Zone Name | Name of the Juniper ATP zone. |
| Sites | Name of the site associated to the zone. |

Table 271: Fields on the Feed Sources Page (Continued)

| Field | Description |
|-------------------------|--|
| Feed Status | <p>The consolidated status of all the feeds of a selected Juniper ATP zone is shown here. Hover over the field to see the individual status of each feed. The status of IPv6 feeds are also listed along with other feed sources.</p> <p>If the status of any one of the feeds is FAILED, then the consolidated status is shown as FAILED.</p> |
| Last Downloaded | The date and time of the last time Policy Enforcer has requested the feeds from Juniper ATP is shown here. Hover over the field to view a detailed list of date and time of each feed download. |
| Devices | Name of the perimeter firewall devices that are enrolled to Juniper ATP. |
| Enrollment Status | Enrollment status of the zone. |
| Server IP Address | The IP address of the configured Juniper ATP appliance. |
| Custom Feeds | |
| Name | Name of the custom feed. |
| Feed Type | Type of the custom feed. For example, dynamic address, allowlist, blocklist, infected hosts, DDoS, or C&C Server. |
| Last Updated | Date and time when the selected custom feed was last updated. |
| Days to Become Inactive | Number of days within which the custom feed is going to expire or become inactive. |

Table 271: Fields on the Feed Sources Page *(Continued)*

| Field | Description |
|------------------------|---|
| Remote Download Status | <p>View the status of downloading feeds from a remote file server to Policy Enforcer. This field is blank for the locally created custom feeds.</p> <p>The following statuses are shown under different scenarios:</p> <ul style="list-style-type: none"> • Pending—Status is shown as pending until Policy Enforcer downloads the new feeds from the remote file server. • Success—Status is shown as success when Policy Enforcer downloads the feeds successfully. • Failed—Status is shown as failed when downloading the feeds fails. |
| Description | View the description of your custom feed. |

In the Custom Feeds page, you can search for any particular custom feed by its name and type of the custom feed. Click the filter icon and the following fields can be searchable:

- Name—Enter the name of the custom feed to be searched.
- Feed Type—Select the feed type from the list.

RELATED DOCUMENTATION

[Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#)

Sky ATP Email Management: SMTP Settings

Configure IMAP Settings

Creating Whitelists for Sky ATP Email and Malware Management

Creating Blacklists for Sky ATP Email and Malware Management

Creating File Inspection Profiles

Creating Custom Feeds

Configuring Settings for Custom Feeds

Add JATP Server

Edit or Delete a JATP Server

Juniper ATP Cloud Realm Overview

A security realm is a group identifier for an organization used to restrict access to Web applications. You must create at least one security realm to login into Juniper ATP Cloud. Once you create a realm, you can enroll SRX Series devices into the realm. You can also give more users (administrators) permission to access the realm.

If you have multiple security realms, note that each SRX Series device can only be bound to one realm, and users cannot travel between realms.

RELATED DOCUMENTATION

About the Feed Sources Page

[Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites | 955](#)

[Using Guided Setup for Juniper ATP Cloud | 1334](#)

[Configuring Juniper ATP Cloud \(No Juniper Connected Security and No Guided Setup\) Overview | 1343](#)

Juniper ATP Cloud Malware Management Overview

Malware management includes profiles you can create to group file types together for scanning. It also lets you configure customized allowlists and blocklists.

- File inspection profiles let you define which files to send to the cloud for inspection. By grouping similar file types together to be scanned (such as .tar, .exe, and .java) under a common name, you can create multiple profiles based on the content you want scanned. Then enter the profile names on eligible SRX Series devices to apply them.
- Use the allowlist and blocklist pages to configure custom trusted and untrusted URLs and IPs. Content downloaded from locations on the allowlist is trusted and does not have to be inspected for malware. Hosts cannot download content from locations on the blocklist because those locations are untrusted.

RELATED DOCUMENTATION

Creating File Inspection Profiles

Juniper ATP Cloud Email Management Overview

IN THIS SECTION

- [Quarantine Release | 947](#)
- [Blocklist and Allowlist | 947](#)

With Email Management, enrolled devices transparently submit potentially malicious email attachments to the cloud for inspection. Once an attachment is evaluated, Juniper ATP Cloud assigns the file a threat score between 0-10 with 10 being the most malicious.




NOTE: If an email contains no attachments, it is allowed to pass without any analysis.

Configure one of the following actions when an email attachment is determined to be malicious:

- **Quarantine Malicious Messages**—If you select to quarantine emails with attachments found to be malicious, those emails are stored in the cloud in an encrypted form and a replacement email is sent to the intended recipient. That replacement email informs the recipient of the quarantined message and provides a link to the Juniper ATP Cloud quarantine portal where the email can be previewed. The recipient can then choose to release the email by clicking a Release button (or request that the administrator release it) or Delete the email.
- **Deliver malicious messages with warning headers added**—When you select this option, headers are added to emails that most mail servers recognize and filter into Spam or Junk folders.
- **Permit**—You can select to permit the email and the recipient receives it intact.

Figure 67: Email Management Overview

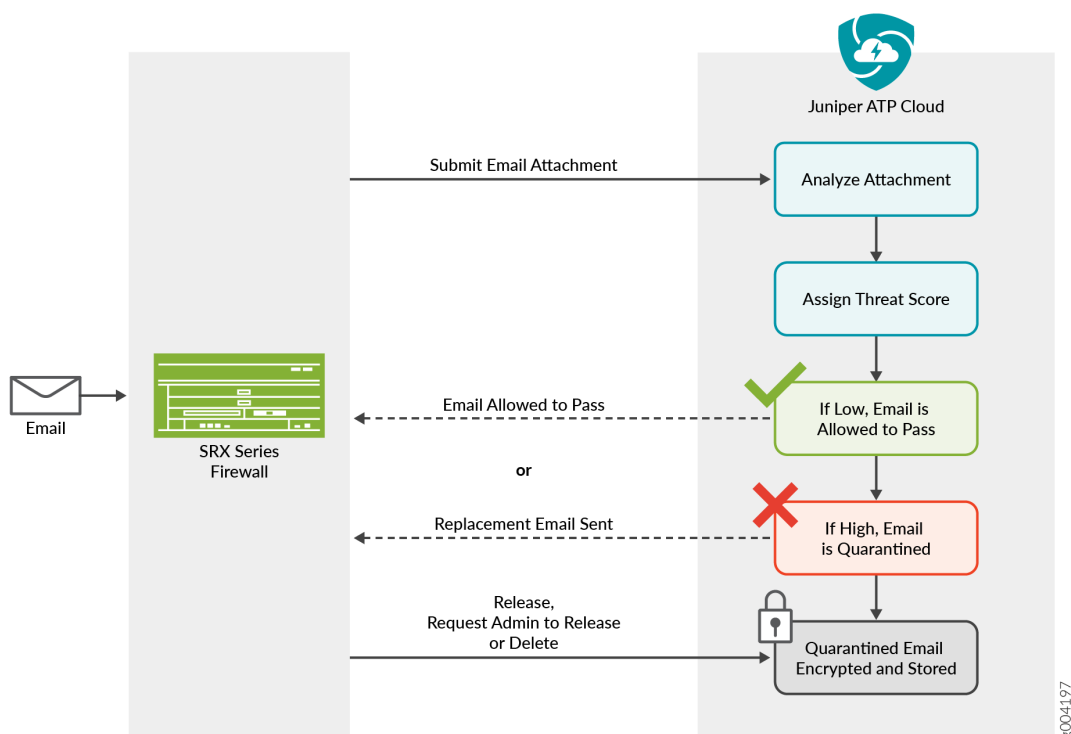

Quarantine Release

If the recipient selects to release a quarantined email, it is allowed to pass through the SRX series with a header message that prevents it from being quarantined again, but the attachments are placed in a password-protected ZIP file. The password required to open the ZIP file is also included as a separate attachment. The administrator is notified when the recipient takes an action on the email (either to release or delete it).

If you configure Juniper ATP Cloud to have the recipient send a request to the administrator to release the email, the recipient previews the email in the Juniper ATP Cloud quarantine portal and can select to Delete the email or Request to Release. The recipient receives a message when the administrator takes action (either to release or delete the email.)

Blocklist and Allowlist

Emails are checked against administrator-configured blocklists and allowlists using information such as Envelope From (MAIL FROM), Envelope To (RCPT TO), Body Sender, Body Receiver. If an email matches the allowlist, that email is allowed through without any scanning. If an email matches the blocklist, it is considered to be malicious and is handled the same way as an email with a malicious attachment.

RELATED DOCUMENTATION

| *Juniper ATP Cloud Email Management: SMTP Settings*

File Inspection Profiles Overview

File Inspection profiles let you define which files to send to the cloud for inspection. You can group types of files to be scanned together (such as .tar, .exe, and .java) under a common name and create multiple profiles based on the content you want scanned. Then enter the profile names on eligible devices to apply them.

Table 272: File Category Contents

| Category | Description |
|------------------|--|
| Archive | Archive files |
| Configuration | Configuration files |
| Document | All document types except PDFs |
| Executable | Executable binaries |
| Java | Java applications, archives, and libraries |
| Library | Dynamic and static libraries and kernel modules |
| Mobile | Mobile formats |
| OS package | OS-specific update applications |
| PDF | PDF, e-mail, and MBOX files |
| Rich Application | Installable Internet Applications such as Adobe Flash, JavaFX, Microsoft Silverlight |

Table 272: File Category Contents (*Continued*)

| Category | Description |
|----------|-----------------|
| Script | Scripting files |

You can also define the maximum file size requirement per each category to send to the cloud. If a file falls outside of the maximum file size limit the file is automatically downloaded to the client system.



NOTE: Once the profile is created, use the set services advanced-anti-malware policy CLI command to associate it with the Juniper ATP Cloud profile.



NOTE: If you are using the free model of Juniper ATP Cloud, you are limited to only the executable file category.

RELATED DOCUMENTATION

Creating File Inspection Profiles

Juniper ATP Cloud Malware Management Overview

File Scanning Limits

Juniper ATP Cloud Email Management: SMTP Settings

Use the SMTP Settings page to inspect and manage email attachments sent over SMTP.

Before You Begin

- Read the *Juniper ATP Cloud Email Management Overview* topic.
- Decide how malicious emails are handled: quarantined, delivered with headers, or permitted.

To configure the email management settings for the Juniper ATP Cloud realm:

1. Select **Configure > Threat Prevention > Feed Sources**.

The Feed Sources page appears

2. Under the ATP Cloud tab, right-click ATP Cloud Realm or from the More list, select **SMTP Settings**.

3. Based on your selections, configuration options described in [Table 273 on page 950](#), [Table 274 on page 951](#), and [Table 275 on page 952](#).

Table 273: Configure Quarantine Malicious Messages

| Setting | Guideline |
|--|--|
| Action to take | Quarantine malicious messages (the default)—When you select to quarantine malicious email messages, in place of the original email, intended recipients receive a custom email you configure with information on the quarantining. Both the original email and the attachment are stored in the cloud in an encrypted format. |
| Release option | <ul style="list-style-type: none"> Recipients can release email—This option provides recipients with a link to the Juniper ATP Cloud quarantine portal where they can preview the email. From the portal, recipients can select to Release the email or Delete it. Either action causes a message to be sent to the administrator. <p>NOTE: If a quarantined email has multiple recipients, any individual recipient can release the email from the portal and all recipients will receive it. Similarly, if one recipient deletes the email from the portal, it is deleted for all recipients.</p> Recipients can request administrator to release email—This option also provides recipients with a link to the Juniper ATP Cloud quarantine portal where they can preview the email. From the portal, recipients can select to Request to Release the email or Delete it. Either choice causes a message to be sent to the administrator. When the administrator takes action on the email, a message is sent to the recipient. <p>NOTE: When a quarantined email is released, it is allowed to pass through the SRX series with a header message that prevents it from being quarantined again, but the attachment is placed inside a password-protected zip file with a text file containing the password that the recipient must use to open the file.</p> |
| <i>Email Notifications for End Users</i> | |
| Learn More Link URL | If you have a corporate web site with further information for users, enter that URL here. If you leave this field blank, this option will not appear to the end user. |

Table 273: Configure Quarantine Malicious Messages *(Continued)*

| Setting | Guideline |
|------------------|--|
| Subject | When an email is quarantined, the recipient receives a custom message informing them of their quarantined email. For this custom message, enter a subject indicating a suspicious email sent to them has been quarantined, such as "Malware Detected." |
| Custom Message | Enter information to help email recipients understand what they should do next. |
| Custom Link Text | <p>Enter custom text for the Juniper ATP Cloud quarantine portal link where recipients can preview quarantined emails and take action on them.</p> <p>Click Preview to view the custom message that will be sent to a recipient when an email is quarantined.</p> |

Table 274: Configure Deliver with Warning Headers

| Setting | Guideline |
|----------------|---|
| Action to take | Deliver malicious messages with warning headers added—When you select to deliver a suspicious email with warning headers, you can add headers to emails that most mail servers will recognize and filter into spam or junk folders. |
| SMTP Headers | <ul style="list-style-type: none"> • X-Distribution (Bulk, Spam)—Use this header for messages that are sent to a large distribution list and are most likely spam. You can also select "Do not add this header." • X-Spam-Flag—This is a common header added to incoming emails that are possibly spam and should be redirected into spam or junk folders. You can also select "Do not add this header." • Subject Prefix—You can prepend headers with information for the recipient, such as "Possible Spam." |

Table 275: Permit

| Setting | Guideline |
|----------------|---|
| Action to take | Permit—You can select to permit the message and no further configuration is required. |

To send notifications to administrators when emails are quarantined or released from quarantine:

1. Click the + sign to add an administrator.
2. Enter the administrator's email address.
3. Select the **Quarantine Notification** check box to receive those notifications.
4. Select the **Release Notifications** check box to receive those notifications.
5. Click **OK**.

RELATED DOCUMENTATION

Juniper ATP Cloud Email Management Overview

Configure IMAP Settings

Use the IMAP Settings page to configure email management for IMAP. With email management for IMAP, the enrolled SRX Series devices can transparently submit suspicious emails to Juniper ATP Cloud for inspection and blocking.

Before You Begin

- Read the *Juniper ATP Cloud Email Management Overview* topic.
- Decide how malicious emails are handled. For IMAP, the available options are to block or permit email. Unlike SMTP, there is no quarantine option for IMAP and there is no option to preview a blocked email.

To configure the IMAP settings:

1. Select **Configure > Threat Prevention > Feed Sources**.
The Feed Sources page appears
2. Under the ATP Cloud tab, right-click ATP Cloud Realm or from the More list, select **IMAP Settings**.

3. Complete the configuration as per the guidelines given in [Table 276 on page 953](#).
Based on your selections, configuration options will vary.

Table 276: Configure Block Malicious Messages

| Setting | Guideline |
|----------------|---|
| Action to take | <ul style="list-style-type: none">Permit download of attachments—Allow email attachments, either from all IMAP servers or specific IMAP servers, through to their destination. NOTE: In Permit mode, blocklists and allowlists are not checked. Emails from blocklisted addresses are not sent to the cloud for scanning. They are allowed through to the client.Block download of attachments—Block email attachments, either from all IMAP servers or specific IMAP servers, from reaching their destination. NOTE: In Block mode, blocklists and allowlists are checked. Emails from blocklisted addresses are blocked. Emails from allowlisted addresses are allowed through to the client. Recipients can send a request to an administrator to release the email. Enter the email address to which recipients should send a release request. NOTE: If a blocked email has multiple recipients, any individual recipient can request to release the email and all recipients will receive it. <p>When you select to block email attachments, in place of the original email, intended recipients receive a custom email you configure with information on the block action. Both the original email and the attachment are stored in the cloud in an encrypted format.</p> |

Table 276: Configure Block Malicious Messages *(Continued)*

| Setting | Guideline |
|--|---|
| IMAP Server | <ul style="list-style-type: none"> • All IMAP Servers—The permitting or blocking of email attachments applies to all IMAP servers. • Specific IMAP Server—The permitting or blocking of email attachments applies only to IMAP servers with hostnames that you add to a list. A configuration section to add the IMAP server name appears when you select this option. <p>When you add IMAP servers to the list, it is sent to the SRX Series device to filter emails sent to Juniper ATP Cloud for scanning. For emails that are sent for scanning, if the returned score is above the set policy threshold on the SRX, then the email is blocked.</p> |
| IMAP Servers | <p>Select the Specific IMAP Server option above and click the + sign to add IMAP server hostnames to the list.</p> <p>NOTE: You must use the IMAP server hostname and not the IP address.</p> |
| <i>Email Notifications for End Users</i> | |
| Learn More Link URL | <p>If you have a corporate web site with further information for users, enter that URL here. If you leave this field blank, this option will not appear to the end user.</p> |
| Subject | <p>When an email is blocked, the recipient receives a custom message informing them of their blocked email. For this custom message, enter a subject indicating a suspicious email sent to them has been blocked, such as "Malware Detected."</p> |
| Custom Message | <p>Enter information to help email recipients understand what they should do next.</p> |
| Custom Link Text | <p>Enter custom text for the Juniper ATP Cloud quarantine portal link where recipients can preview blocked emails and take action on them.</p> <p>Click Preview to view the custom message that will be sent to a recipient when an email is blocked.</p> |

To send notifications to administrators when emails are blocked or released from quarantine:

1. Click the + sign to add an administrator.
2. Enter the email address of the administrator and click **OK**.
3. Once the administrator is created, you can uncheck or check which notification types the administrator will receive.
 - Block Notifications—If you enable this option, a notification is sent when an email is blocked.
 - Unblock Notifications—If you enable this option, a notification is sent when a user releases a blocked email.

RELATED DOCUMENTATION


| *About the Feed Sources Page*

Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites

You can select a geographical location and enter your Juniper ATP Cloud credentials to create a realm and associate sites or devices with the realm.

If you do not have Juniper ATP Cloud account, select a geographical region and click [here](#). You are redirected to the Juniper ATP Cloud account page.

Before You Begin

-  **NOTE:**
 - Policy Enforcer does not support the Multi-factor authentication (MFA) feature in Cloud ATP. Disable the MFA feature in the Cloud ATP before adding realms to the Security Director.
 - You cannot use single sign-on (SSO) credentials to add the Juniper ATP realm to Security Director.

Use the login credentials used to create the realm.
- Understand which type of Juniper ATP Cloud license you have: free, basic, or premium. The license controls which Juniper ATP Cloud features are available.

- To configure a Juniper ATP Cloud realm, you must already have Juniper ATP Cloud account with an associated license.
- Ensure that the internet connectivity is available for Policy Enforcer. Without the internet connectivity, you cannot create a realm.
- Decide which region will be covered by the realm you are creating. You must select a region when you configure a realm.
- Note that adding a device to a realm results in one or more commit operations occurring on the device to apply the Juniper ATP Cloud or Policy Enforcer configuration.

To configure ATP Cloud Realm:

1. Select **Configure>Threat Prevention>Feed Sources**.
The Feed Sources page appears.
2. In the ATP Cloud tab, click the + icon to add a realm.
3. Complete the initial configuration by using the guidelines in [Table 277 on page 956](#) below.
4. Click **Finish**.

Table 277: Fields on the Add ATP Cloud Realm Page

| Field | Description |
|------------------------------------|--|
| <i>ATP Cloud Realm Credentials</i> | |
| Location | <p>Select a region of the world from the available choices.</p> <p>The following options are available in the Location list:</p> <ul style="list-style-type: none">• North America• European Region• Canada• Asia Pacific <p>By default, the North America value appears in the list. To know more about the geographic region, see here.</p> |
| Username | <p>Enter your e-mail address. Your username for Juniper ATP Cloud is your e-mail address.</p> |

Table 277: Fields on the Add ATP Cloud Realm Page (*Continued*)

| Field | Description |
|-------------|--|
| Password | Enter a unique string at least 8 characters long. Include both uppercase and lowercase letters, at least one number, and at least one special character (~!@#\$%^&*()_+={}[] ;:<>.,/?); no spaces are allowed, and you cannot use the same sequence of characters that are in your username. |
| Realm | <p>Enter a name for the security realm. This should be a name that is meaningful to your organization. A realm name can only contain alphanumeric characters and the dash symbol. Once created, this name cannot be changed.</p> <p>NOTE: When you create a custom feed with a realm, the feed is associated at the site level and not at the realm level. If you modify this realm and associate new sites to it, a warning message is shown that there are custom feeds are associated with this realm. Changing the site information will change the custom feed information. You must go and edit the custom feed that was associated with this realm and verify the realm association.</p> |
| <i>Site</i> | |
| Site | <p>Select one or more sites to enroll into the realm. If there are no sites associated with the realm, click Create new site. To know more about creating a new site, see <i>Creating Secure Fabric and Sites</i>.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • If you are using Juniper ATP Cloud without Policy Enforcer, you are not prompted to select a site. • Assigning a site to the realm will cause a change in the device configuration in the associated devices. • You must select the sites either with tenants or without tenants. You cannot select both at a time. |

Table 277: Fields on the Add ATP Cloud Realm Page (*Continued*)

| Field | Description |
|-----------------------------|---|
| Unmanaged Devices | <p>Lists all devices from the realm that are not managed in Security Director. You must manually discover them.</p> <p>If you are using Juniper ATP Cloud with Policy Enforcer and you have no devices enrolled in the realm, you are asked to select devices in the box on the left and move them to the right to enroll them. All selected devices are automatically enrolled with Juniper ATP Cloud when you finish the guided setup. To disenroll a device, you can edit a realm and move the device back to the left side box.</p> <p>NOTE: Adding a device to a realm results in one or more commit operations occurring on the device to apply the Juniper ATP Cloud or Policy Enforcer configuration.</p> |
| <i>Global Configuration</i> | |
| IPv6 Feeds | Enable this option to receive IPv6 feeds (C&C and Geo IP) from Policy Enforcer. |
| Threat Level Threshold | <p>Select a threshold level to block the infected hosts and to send an e-mail to the selected administrators notifying about the infected host events.</p> <p>Click the+ sign if you want to add new administrators to the list.</p> |
| Logging | Enable this option to log the Malware or the Host Status event or both the event types. |
| Proxy Servers | <p>Click the add icon (+) to enter the trusted IPv4 address of the proxy server, in the Server IP column.</p> <p>When there is a proxy server between users on the network and a firewall, the firewall might see the proxy server IP address as the source of an HTTP or HTTPS request, instead of the actual address of the user making the request.</p> <p>With this in mind, X-Forwarded-For (XFF) is a standard header added to packets by a proxy server that includes the real IP address of the client making the request. Therefore, if you add trusted proxy servers IP addresses to the list in Juniper ATP Cloud, by matching this list with the IP addresses in the HTTP header (X-Forwarded-For field) for requests sent from the SRX Series devices, Juniper ATP Cloud can determines the originating IP address.</p> <p>NOTE: XFF only applies to HTTP or HTTPS traffic, and only if the proxy server supports the XFF header.</p> |



NOTE: If you enrolled a device into a realm from within Security Director and you want to disenroll it, you must do that from within Security Director. If you enrolled a device into a realm from within Juniper ATP Cloud and you want to disenroll it, you must do that from within Juniper ATP Cloud. You cannot disenroll a device from within Security Director that was enrolled from within Juniper ATP Cloud.

RELATED DOCUMENTATION

About the Feed Sources Page

[Juniper ATP Cloud Realm Overview | 945](#)

[Using Guided Setup for Juniper ATP Cloud | 1334](#)

Creating Secure Fabric and Sites

Modifying Juniper ATP Cloud Realm

Use the Modify ATP Cloud Realm page to modify the site information and global configuration information of an existing ATP Cloud realm. You can also view devices from the realm that are not managed by Security Director.

To modify a Juniper ATP Cloud realm:

1. Select **Configure>Threat Prevention> Feed Sources**.

The Feed Sources page appears.

2. Select the realm and click the pencil icon to modify the configuration.

The Modify ATP Cloud Realm page appears.

3. Complete the configuration by using the guidelines in [Table 278 on page 960](#).

4. Click **Finish** to complete the configuration or **Cancel** to discard the changes.



NOTE: Assigning a site to the realm will cause a change in the device configuration in the associated devices.

Table 278: Fields on the Modify ATP Cloud Realm page

| Field | Description |
|-----------------------------|---|
| <i>Site</i> | |
| Site | Select a site to enroll into the realm. If there are no sites associated with the realm, click Create new site . |
| Unmanaged Devices | Lists all devices from the realm that are not managed in Security Director. You must manually discover them. |
| <i>Global Configuration</i> | |
| IPv6 Feeds | Enable this option to receive IPv6 feeds from Policy Enforcer. |
| Threat Level Threshold | Select a threshold level to block the infected hosts and to send an e-mail to the selected administrators notifying about the infected host events. |
| Logging | Enable or disable logging for the Malware or the Host Status event. |
| Proxy Servers | Click the add icon (+) to enter the IPv4 address of the proxy server, in the Server IP column. You can also edit the existing IP address or delete them. |

RELATED DOCUMENTATION

[Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites | 955](#)

About the Feed Sources Page

Creating File Inspection Profiles

Use the ATP Cloud File Inspection Profiles page to create profiles to define which files to send to the cloud for inspection.

Before you Begin

- Read the *File Inspection Profiles Overview* topic.
- Read the *File Scanning Limits* topic.
- Note that if you are using the free version of Juniper ATP Cloud, only executable files are scanned.

To configure file inspection profiles:

1. Select **Configure>Threat Prevention> Feed Sources**.

The Feed Sources page appears.

2. Under the ATP Cloud tab, select ATP Cloud realm, right-click or from the More list, select **File Inspection Profiles**.

The ATP Cloud File Inspection Profiles page appears showing the existing file inspection profiles.

3. Click the + sign to create new profiles.

The Create Profile page appears.

4. Enter a name for the profile. (You can create multiple profiles for file inspection.)

5. In the File Categories section, select the file categories and the following actions from the list for each file category:

- Do not scan—The file category will not be scanned.
- Scan file up to max size—The maximum files size (up to 32MB) to scan. If a file falls outside of the maximum file size limit, the file is automatically downloaded to the client system.
- Hash lookup only—Hash lookups are not recommended because, they are compared with the files that are already evaluated before.

See [Table 279 on page 961](#) for the list of file types for each category.

6. Click **OK**.

Table 279: File Category Contents

| Category | Description |
|---------------|--------------------------------|
| Archive | Archive files |
| Configuration | Configuration files |
| Document | All document types except PDFs |

Table 279: File Category Contents *(Continued)*

| Category | Description |
|------------------|--|
| Executable | Executable binaries |
| Java | Java applications, archives, and libraries |
| Library | Dynamic and static libraries and kernel modules |
| Mobile | Mobile formats |
| OS package | OS-specific update applications |
| PDF | PDF, e-mail, and MBOX files |
| Script | Scripting files |
| Rich Application | Installable Internet Applications such as Adobe Flash, JavaFX, Microsoft Silverlight |



NOTE: Once the profile is created, use the set services advanced-anti-malware policy CLI command to associate it with the Juniper ATP Cloud profile.

RELATED DOCUMENTATION

File Inspection Profiles Overview

Juniper ATP Cloud Malware Management Overview

File Scanning Limits

About the Feed Sources Page

Creating Allowlist for Juniper ATP Cloud Email and Malware Management

Use the Modify Allowlist page to add email addresses, IP addresses, and URLs to the allowlist. An allowlist contains known trusted IP addresses, URLs, and domains. Content downloaded from locations on the allowlist does not have to be inspected for malware.

Before You Begin

- Read the *Juniper ATP Cloud Email Management Overview* topic.
- Read the *Juniper ATP Cloud Malware Management Overview* topic.
- Decide on the type of location you intend to define: URL or IP address.
- Review the current list of entries to ensure that the item you are adding does not already exist.

To configure the allowlists:

1. Select **Configure>Threat Prevention> Feed Sources**.
The Feed Sources page appears.
2. Under the ATP Cloud tab, right-click the ATP Cloud realm or from the More list, select **Allowlist**.
The Modify Allowlist page appears.
3. Click the + sign to add more entries to the allowlist.
4. Complete the configuration by using the guidelines in [Table 280 on page 963](#).
5. Click **OK**.

Table 280: Fields on the Modify Allowlist Page

| Field | Description |
|---------------------|---|
| <i>Email List</i> | |
| Email Sender | <p>The allowed email senders are listed here.</p> <p>To add more email senders to the allowlist, click the + sign.</p> <p>Enter the full address in the format name@domain.com or wildcard the name to permit all emails from a specific domain. For example, *@domain.com.</p> |
| <i>Malware List</i> | |

Table 280: Fields on the Modify Allowlist Page (*Continued*)

| Field | Description |
|------------|--|
| IP and URL | <p>Enter an IP address or a URL.</p> <ul style="list-style-type: none"> IP—Enter an IPV4 address in standard four octet format. CIDR notation and IP address ranges are also accepted. Any of the following formats are valid: 1.2.3.4, 1.2.3.4/30, or 1.2.3.4-1.2.3.6. URL—Enter the URL using the following format: juniper.net. Wildcards and protocols are not valid entries. The system automatically adds a wildcard to the beginning and end of URLs. Therefore juniper.net also matches a.juniper.net, a.b.juniper.net, and a.juniper.net/abc. If you explicitly enter a.juniper.net, it matches b.a.juniper.net, but not c.juniper.net. You can enter a specific path. If you enter juniper.net/abc, it matches x.juniper.net/abc, but not x.juniper.net/123. |

To edit an existing allowlist entry, select the allowlist that you want to edit and click the pencil icon.

Juniper ATP Cloud periodically polls for new and updated content and automatically downloads it to your SRX Series device. There is no need to manually push your allowlist files.

RELATED DOCUMENTATION

Juniper ATP Cloud Email Management Overview

Juniper ATP Cloud Malware Management Overview

About the Feed Sources Page

Creating Blocklists for Juniper ATP Cloud Email and Malware Management

Use the Modify Blocklist page to add email addresses, IP addresses, and URLs to the blocklist. A blocklist contains known untrusted IP addresses, URLs, and domains. Access to locations on the blocklist is blocked, and therefore no content can be downloaded from those sites.

Before You Begin

- Read the *Juniper ATP Cloud Email Management Overview* topic.
- Read the *Juniper ATP Cloud Malware Management Overview* topic.

- Compile a list of known malicious email addresses or domains to add to your blocklist. If an email matches the blocklist, it is considered to be malicious and is handled the same way as an email with a malicious attachment, blocked and a replacement email is sent. If an email matches the allowlist, that email is allowed through without any scanning.
- It is worth noting that attackers can easily fake the “From” email address of an email, making blocklists a less effective way to stop malicious emails.
- Decide on the type of location you intend to define: URL or IP address.
- Review the current list of entries to ensure that the item you are adding does not already exist.

To configure the blocklists:

1. Select **Configure>Threat Prevention> Feed Sources**.
The Feed Sources page appears.
2. Under the ATP Cloud tab, right-click the ATP Cloud realm or from the More list, select **Blocklist**.
The Modify Blocklist page appears.
3. Click the + sign to add more entries to the blocklist.
4. Complete the configuration by using the guidelines in [Table 281 on page 965](#).
5. Click **OK**.

Table 281: Fields on the Modify Blocklist Page

| Field | Description |
|---------------------|---|
| <i>Email List</i> | |
| Email Sender | <p>The allowed email senders are listed here.</p> <p>To add more email senders to the blocklist, click the + sign.</p> <p>Enter the full address in the format name@domain.com or wildcard the name to permit all emails from a specific domain. For example, *@domain.com.</p> |
| <i>Malware List</i> | |

Table 281: Fields on the Modify Blocklist Page (Continued)

| Field | Description |
|------------|--|
| IP and URL | <p>Enter an IP address or a URL.</p> <ul style="list-style-type: none"> • IP—Enter an IPV4 address in standard four octet format. CIDR notation and IP address ranges are also accepted. Any of the following formats are valid: 1.2.3.4, 1.2.3.4/30, or 1.2.3.4-1.2.3.6. • URL—Enter the URL using the following format: juniper.net. Wildcards and protocols are not valid entries. The system automatically adds a wildcard to the beginning and end of URLs. Therefore juniper.net also matches a.juniper.net, a.b.juniper.net, and a.juniper.net/abc. If you explicitly enter a.juniper.net, it matches b.a.juniper.net, but not c.juniper.net. You can enter a specific path. If you enter juniper.net/abc, it matches x.juniper.net/abc, but not x.juniper.net/123. |

To edit an existing blocklist entry, select the blocklist that you want to edit and click the pencil icon.

Juniper ATP Cloud periodically polls for new and updated content and automatically downloads it to your SRX Series device. There is no need to manually push your blocklist files.

RELATED DOCUMENTATION

Juniper ATP Cloud Email Management Overview

Juniper ATP Cloud Malware Management Overview

About the Feed Sources Page

Add ATP Appliance Server

Configure the Juniper ATP appliance in Policy Enforcer to receive threat feeds for threat mitigation.

Before You Begin

Before you add the Juniper ATP Appliance:

- Obtain the IP address of the Juniper ATP appliance.
- Generate the API Authorization key for the Juniper ATP admin user. This is required to provide authorized programmatic access to the Juniper ATP Appliance REST API. The configured Authorization Key for that user is then applied each time an API request is made by that user.

- In the Juniper ATP Appliance web UI, navigate to **Config>System Profiles>Users** and click on an existing user account.
- In the Update User page, select the **Generate New API Key** option.

For more information, see [Updating a User Account and Setting an API Authorization Key](#).

- Configure multi-tenancy Web Collector Zones for Managed Security Service Provider (MSSP) support.
- In the Juniper ATP Appliance web UI, navigate to **Config>System Profiles>Zones**.

For more information, see [Configuring MSSP Multi-Tenancy Zones](#).

To add a Juniper ATP server:

1. Select **Configure>Threat Prevention>Feed Sources**.

The Feed Source page appears.

2. In the ATP Appliance page, click the + sign.

The Add ATP Appliance Server page appears.

3. Complete the configuration according to the guidelines provided in [Table 282 on page 967](#).

4. Click **Finish**.

The required Juniper ATP appliance is added to Policy Enforcer for threat monitoring.

Table 282: Fields on the Add ATP Appliance Server Page

| Field | Description |
|--------------------------------------|--|
| ATP Appliance Server Settings | |
| ATP Appliance Server IP Address | Enter the IP address of the Juniper ATP appliance. |
| API Key | <p>Enter the API Authorization key of the Juniper ATP appliance user. The same API key is used for general Juniper ATP RESTful API access and also to integrate with SRX Series devices.</p> <p>The API key is used only once to obtain the application token from the ATP Appliance server. The obtained application token is provided to Policy Enforcer and this token never expires.</p> <p>To know more about generating the API key, see Updating a User Account and Setting an API Authorization Key.</p> |

Table 282: Fields on the Add ATP Appliance Server Page (*Continued*)

| Field | Description |
|-------------------|--|
| Zone Name | Enter the configured zone name. You can enroll Policy Enforcer with the Juniper ATP default zone or with a specific Juniper ATP zone. This enrollment is authenticated with an API authorization key. |
| Site | |
| Site | Select the site to be enrolled to the zone from the list. If there are no sites associated with the realm, click Add new Site . |
| Unmanaged Devices | Lists all devices from the zone that are not managed in Security Director. You must manually discover them. |
| IPv6 Feeds | Enable this option to receive IPv6 feeds (C&C and Geo IP) from Policy Enforcer. |

RELATED DOCUMENTATION

About the Feed Sources Page

Edit or Delete a JATP Server

[JATP Operator's Guide](#)

Edit or Delete a ATP Appliance Server

You can modify the site information of an existing Juniper ATP zone or delete a Juniper ATP server, from the Feed Sources page.

To edit or delete a Juniper ATP server:

1. Select **Configure>Threat Prevention>Feed Sources>JATP**.

The Feed Sources page appears.

2. Select the zone you want to edit or delete and then right-click.

- Select **Edit** to modify site information. The Modify ATP Appliance Server page appears. Make the changes and click **Finish**.

You can also click the pencil icon to modify the configuration.

- Select **Delete** to remove the Juniper ATP server. An alert message appears verifying that you want to delete your selection. Click **Yes** to delete your selection.

You can also click the delete icon to delete the Juniper ATP server.

RELATED DOCUMENTATION

Add JATP Server

About the Feed Sources Page

Custom Feed Sources Overview

IN THIS SECTION

- [Benefits of Custom Feed Sources | 970](#)

Policy Enforcer uses threat feeds to provide actionable intelligence to policies about various types of threats. These feeds can come from different sources, such as Juniper ATP Cloud, and from lists that you can customize by adding IP addresses, domains, and URLs.



NOTE: Juniper ATP Cloud feeds and custom feeds are mutually exclusive. You can only have one source for dynamic address, allowlist, blocklist, infected host feeds, and C&C Server.



NOTE: When dynamic address custom feeds are available, you cannot use office_365 feeds from Juniper ATP Cloud.

The following types of custom threat feeds are available:

- A dynamic address is a group of IP addresses that can be imported from external sources. These IP addresses are for specific domains or for entities that have a common attribute such as a particular

undesired location that poses a threat. You can then configure security policies to use the dynamic addresses within a security policy.

- An allowlist contains known trusted IP addresses, URLs, and domains. Content downloaded from locations on the allowlist does not have to be inspected for malware.
- A blocklist contains known untrusted IP addresses, URLs, and domains. Access to locations on the blocklist is blocked, and therefore no content can be downloaded from those sites.
- Infected hosts are hosts known to be compromised. Enter host IP addresses manually or upload a text file with the IP addresses of infected hosts.
- Using DDoS threat feed, policy Enforcer blocks source IP addresses in the feed, rate limit the traffic from the source IP addresses, and takes BGP Flowspec action to apply null-route filtering or redirect the traffic to scrubbing centers.
- Command and Control Server (C&C Server) is a centralized computer that issues commands to botnets (compromised networks of computers) and receives reports back from them. Botnets can be used to gather sensitive information, such as account numbers or credit card information, or to participate in a distributed DDoS attack.

For threat management policies to use these feeds, you must enter configuration information for each feed type.

Benefits of Custom Feed Sources

- Provides relevant and timely intelligence that you can use to create enforcement policies. Enables you to customize threat feeds specific to your industry or organization.
- Provides flexible mechanisms to synchronize threat information to:
 - Configure Policy Enforcer to poll from local file and remote file custom feeds.
 - Push threat feeds to Policy Enforcer using the Threat Feed API .

RELATED DOCUMENTATION

Creating Custom Feeds

Example: Creating a Dynamic Address Custom Feed and Firewall Policy

Creating Custom Feeds

Use the Create Custom Feed page to configure the Dynamic Address, Allowlist, Blocklist, Infected Hosts, DDoS, and C&C Server custom feeds. These feeds provide relevant and timely intelligence that you can use to create enforcement policies.

Before You Begin

- Know what type of feed you are configuring and have all the necessary information on hand. Local feeds are created on your local system and uploaded from there.
- Note that infected hosts are hosts known to be compromised. For an infected host custom feed, enter host IP addresses manually or upload a text file with the IP addresses of infected hosts.
- If you create an allowlist, blocklist, or infected hosts feed, it will override the respective Juniper ATP Cloud/ATP Appliance feed.
- Note that when ATP Cloud/ATP Appliance only mode is selected as the Threat Prevention Type, the infected host and DDoS custom feeds are not available.

To create local file and remote file custom feeds:

1. Select **Configure>Threat Prevention> Feed Sources**.

The Feed Sources page appears. You will see only custom feeds available as the threat prevention type, if you make no selection for ATP Cloud/ATP Appliance Configuration Type in the Policy Enforcer Settings page.

2. Click **Create** and select one of the following:

- Feeds with local files—Enter your data manually into the provided fields or upload from a text file on your location machine.
- Feeds with remote file server—Configure communication with the remote server to fetch the data feed from it.

3. Complete the configuration by using the guidelines in [Table 283 on page 972](#) or [Table 284 on page 974](#).

4. Click **OK**.



NOTE:

- To use a custom feed of dynamic-address type, apply it to the source or destination address in a firewall rule. In the firewall rule, you can filter addresses to show only the custom feeds.

If there is a firewall policy rule created using the dynamic address, you cannot delete the same dynamic address from the Feed Sources page. You must first delete the firewall policy rule and then , delete the dynamic address from the Feed Sources page.

- When you have no ATP Cloud/ATP Appliance Configuration Type selected (No selection), ATP Cloud/ATP Appliance realms are disabled. Because site selection is usually done from the ATP Cloud/ATP Appliance realm page, you must select sites from the Create Custom Feed page when in “No selection” mode. The custom feeds are then downloaded to the devices in the chosen sites. This is the only time site selection available in the Create Custom Feed page.

Table 283: Fields on the Create Custom Feed Page, Feeds with Local Files

| Field | Description |
|-------------|--|
| Name | Enter a unique string that must begin with an alphanumeric character and can include only dashes and underscores; no spaces allowed; 32-character maximum. |
| Description | Enter a description for your custom feed; maximum length is 64 characters. You should make this description as useful as possible for all administrators. |
| Feed Type | <p>Select one of the following custom feeds as a threat prevention type:</p> <ul style="list-style-type: none"> • Dynamic Address • Allowlist • Blocklist • Infected Hosts • DDoS • CC |

Table 283: Fields on the Create Custom Feed Page, Feeds with Local Files *(Continued)*

| Field | Description |
|--|--|
| Sites | <p>Select the required <i>sites</i> from the list to associate them with the dynamic address or allowlists, blocklists, or C&C Server feeds.</p> <p>In the default mode (no ATP Cloud), only sites are listed because of no ATP Cloud. You can share a site across the same feed type for dynamic address, allowlist, blocklist, and C&C Server. For Infected hosts and DDoS, sites cannot be shared across the same feed type. However, you can share a site across different feed types.</p> |
| Zones/Realms | <p>Select the required <i>realms</i> from the list, if you are in Cloud feeds only, ATP Cloud/JATP, or ATP Cloud/ATP Appliance with Juniper Connected Security mode.</p> <p>Associate these realms with dynamic address or allowlists, blocklists, and C&C Server feeds. You can share a realm across the same feed type for dynamic address, allowlist, blocklist, and CC. For Infected hosts and DDoS, realms cannot be shared across the same feed type. However, you can share a realm across different feed types.</p> <p>The ATP Cloud/ATP Appliance realm without any assigned sites are not listed here. Only realms with sites associated are listed here.</p> <p>NOTE: If a site is associated with a tenant, the ATP Cloud/ATP Appliance realm displays the list in the <realm-name>(Tenant:<tenant-name>) format.</p> |
| User Input Type (Available for Allowlist and Blocklist) | <p>Select one of the following input types for Allowlist and Blocklist:</p> <ul style="list-style-type: none"> IP, Subnet and Range—Enter an IPV4 address in standard four octet format. CIDR notation and IP address ranges are also accepted. Any of the following formats are valid: 1.2.3.4, 1.2.3.4/30, or 1.2.3.4-1.2.3.6. URL and Domain—The following formats are valid: <ul style="list-style-type: none"> http://www.yourfeed.com https://www.yourfeed.com www.yourfeed.com yourfeed.com yourfeed.com/abc <p>Wildcards and protocols are not valid entries.</p> |

Table 283: Fields on the Create Custom Feed Page, Feeds with Local Files *(Continued)*

| Field | Description |
|-------------|---|
| Custom List | <p>Do one of the following:</p> <ul style="list-style-type: none"> Click Upload File to upload a text file with an IP address list. Click the Add button to include the address list in your custom list. <p>For infected host and DDoS, the uploading file must have the string <i>add</i> at the beginning, followed by the IP addresses. If you want to delete certain IP addresses, enter the string <i>delete</i> followed by the IP addresses to delete.</p> <p>Note that the file must contain only one item per line (no commas or semi colons). All items are validated before being added to the custom list.</p> <p>The file must not contain more than 500 entries. An error message is shown if you try to upload a file containing more than 500 IP addresses. Use the Feeds with remote file server option to upload a file containing more than 500 IP addresses.</p> <ul style="list-style-type: none"> Manually enter your item and threshold value in the space provided in the Custom List section. To add more items, click + to add more spaces. <p>For syntax, enter an IPv4 address in standard four octet format. CIDR notation and IP address ranges are also accepted. Any of the following formats are valid: 1.2.3.4, 1.2.3.4/30, or 1.2.3.4-1.2.3.6.</p> |

Table 284: Fields on the Create Custom Feed Page, Feeds with Remote File Server

| Field | Description |
|-------------|--|
| Name | Enter a unique string that must begin with an alphanumeric character and can include only dashes and underscores; no spaces allowed; 32-character maximum. |
| Description | Enter a description for your custom feed; maximum length is 64 characters. You should make this description as useful as possible for all administrators. |

Table 284: Fields on the Create Custom Feed Page, Feeds with Remote File Server (*Continued*)

| Field | Description |
|--|--|
| Feed Type | <p>Select one of the following custom feeds as a threat prevention type:</p> <ul style="list-style-type: none"> • Dynamic Address • Allowlist • Blocklist • Infected Hosts • DDoS • CC |
| Type of Server URL | <p>Select one of the following:</p> <ul style="list-style-type: none"> • http • https |
| Server File URL | Enter the URL for the remote file server. |
| Certificate Upload (If the URL type is HTTPS) | <p>Click Browse and select the CA certificate to upload.</p> <p>If you do not upload a certificate for https server URL, a warning message is shown that a certificate is not uploaded and to whether proceed further or not. Click Yes to proceed further without uploading a certificate or No to go back and upload the certificate.</p> |
| Username | <p>Enter the credentials for the remote file server.</p> <p>This is not a mandatory field. You can still proceed to create a custom feed without entering the username.</p> |
| Password | <p>Enter the credentials for the remote file server.</p> <p>This is a mandatory field, if you have provided the username.</p> |
| Update Interval | Select how often updates are retrieved from the remote files server: Hourly, Daily, Weekly, Monthly, Never |

Table 284: Fields on the Create Custom Feed Page, Feeds with Remote File Server *(Continued)*

| Field | Description |
|-------|---|
| Sites | Select the required <i>sites</i> from the list to associate them with the custom feeds. |

If you try to disenroll a site in an infected host, a warning message is shown to resolve all the current infected hosts from the respective endpoints within a site. To resolve the infected hosts, log-in to ATP Cloud UI, resolve the hosts, and then unassign sites from Policy Enforcer. Ensure that you always resolve the infected hosts before unassigning sites. Once you unassign sites, you cannot resolve the hosts.

RELATED DOCUMENTATION

Custom Feed Sources Overview

About the Feed Sources Page

Configuring Settings for Custom Feeds

Example: Creating a Dynamic Address Custom Feed and Firewall Policy

As stated earlier, dynamic addresses provide dynamic IP address information to security policies. A dynamic address entry (DAE) is a group of IP addresses, not just a single IP prefix, that can be entered manually or imported from external sources. The DAE feature allows feed-based IP objects to be used in security policies to either deny or allow traffic based on either source or destination IP criteria. For example, a DAE may contain IP addresses for specific domains or for entities that have a common attribute such as a particular undesired location that poses a threat. When the DAE is updated, the changes automatically become part of the security policy. There is no need to manually update the policy; no configuration commit action is required.

This topic steps you through a simple example of creating a DAE and associating it with a policy. For complete information in creating firewall policies in Security Director, see [Creating Firewall Policies](#).

1. Click **Configure>Threat Prevention>Feed Sources**.
The Feed Sources page appears.
2. In the Custom Feeds tab, click **Create > Feeds with local files**.
3. Enter **DAE_example1** as the name.
4. Select **Dynamic Address** from the Feed Type list.
5. Select the ATP Cloud realms from the Realms field.
6. In the Custom List field, click the plus sign (+) to add individual entries to the custom list.

7. Add the following IP addresses. See the online help for information on supported formats.
 - 192.0.2.0
 - 192.0.2.1/10
 - 198.51.100.0-198.51.100.5
8. Make sure all entries in the custom list are unchecked and click **OK**.
9. Click **Configure > Firewall Policy > Policies**.



NOTE: This example uses simplistic rules to show how to associate a DAE with an allowlist firewall policy. When creating your own firewall policy, you will have to configure the rules that meet your company's requirements.

10. Click the plus sign (+) to create a new firewall policy.
11. Enter **dynamic_address_test** as the name.
12. Select **All Logging Enabled** from the Profile pull-down menu.
13. Select **Device Policy** as the Type and select a device from the Device pull-down menu.
14. Click **OK**.
After a few seconds, the **dynamic_address_test** policy appears in the list.
15. Click **Add Rule** next to the **dynamic_address_test** policy to start the rule wizard.
16. Enter **dynamic_rule** as the name and click **Next**.
17. In the Source window, select **untrust** from the Zone pulldown menu and click **Select** under the Address(es) field.
18. In the Source Address window, select the **Include Specific** radio button.
19. Select **DAE_example1** in the left table and click the right arrow to move it to the right table. Then click **Next**.
The Source window reappears and **DAE_example1** appears in the address(es) field.
20. In the Destination window, select **trust** from the Zone pulldown menu and click **Next**.
21. In the Advanced Security window, select **permit** from the Rule Action pulldown menu and click **Next**.
22. In the Rule Options window, click **Next** to use the default settings.
23. Click **Select** in the Address(es) section and click the **Include Specifics** radio button.
24. In the Rule Analysis window, select the **Analyze the new rule to suggest a placement to avoid anomalies** checkbox and click **Next**.
After a few seconds, an analysis of your rule appears, including where it should be placed, etc.
25. Click **Finish** and then **OK** to exit the wizard.
26. In the resulting page, click **Save** (located near the top of the window.)
27. Check the checkbox for the **dynamic_rule** policy and click **Publish**.

When you publish rules, the process takes into account the priority and precedence values set on the policy and the order of rules on the device.

Configuring Settings for Custom Feeds

Use the Settings page to specify the number of days for the custom feed to be active and expire once the duration is crossed. Also, specify how often the feeds must be updated.

In the ATO Cloud with Juniper Connected Security, Clouds feed only, and No ATO Cloud modes, you can configure the Time To Live (TTL) settings for dynamic address, allowlist, blocklist, infected host, DDoS, and C&C Server feed types. In the ATO Cloud mode, you can configure TTL settings for only dynamic address, allowlist, blocklist, and C&C Server feed types.



NOTE: When you configure a TTL setting for a particular feed type, the configuration is applicable for all the custom feeds belonging to that particular feed type. For example, if you set TTL for Allowlist feed type to 45 days, then all Allowlist feeds will have the same configuration.

To configure Settings:

1. Select **Configure>Threat Prevention>Feed Source**.

The Feed Sources page appears.

2. In the Custom Feeds tab, select **Settings**.

The Settings page appears.

3. Complete the configuration by using the guidelines in [Table 285 on page 979](#).

4. Click **Update**.

The settings are updated and a success message is shown that the Settings are updated successfully.

At the beginning of the Settings page, the last updated settings information is shown. This message is refreshed whenever you update the setting.

Table 285: Fields on the Settings Page

| Option | Description |
|-----------------|---|
| Time to live | <p>Select one of the following options:</p> <ul style="list-style-type: none">Specify manually—Select this option to specify the number of days for the required custom feed type to be active.Expires in (days)—Enter the number of days for the required custom feed to be active. Default value is 30 days. The available range is 1 to 365 days. <p>The number of days that you configure in this field appears in the Days to Become Inactive field on the Custom Feeds page. If you make any changes to this field, the same information is refreshed in the Days to Become Inactive field and the timer is adjusted to the updated value.</p> <ul style="list-style-type: none">Never Expire—Select this option if you do not want any custom feed type to be inactive or expire. |
| Update Interval | <p>Specify how often each feed type must be updated.</p> <p>By default, all feeds are updated every 5 minutes.</p> <p>Valid range is 1 through 5 minutes.</p> |

RELATED DOCUMENTATION

| |
|-------------------------------------|
| <i>Custom Feed Sources Overview</i> |
| <i>Creating Custom Feeds</i> |

IPsec VPN-VPNs

IN THIS CHAPTER

- [IPsec VPN Overview | 981](#)
- [Create a Site-to-Site VPN | 984](#)
- [Create a Hub-and-Spoke \(Establishment All Peers\) VPN | 998](#)
- [Create a Hub-and-Spoke \(Establishment by Spokes\) VPN | 1010](#)
- [Create a Hub-and-Spoke Auto Discovery VPN | 1023](#)
- [Create a Full Mesh VPN | 1035](#)
- [Create a Remote Access VPN—Juniper Secure Connect | 1047](#)
- [Create a Remote Access VPN—NCP Exclusive Client | 1057](#)
- [IPsec VPN Global Settings | 1067](#)
- [Understanding IPsec VPN Modes | 1069](#)
- [Comparison of Policy-Based VPNs and Route-Based VPNs | 1069](#)
- [Understanding IPsec VPN Routing | 1071](#)
- [Understanding IKE Authentication | 1072](#)
- [Publishing IPsec VPNs | 1073](#)
- [Updating IPsec VPN | 1074](#)
- [Modify IPsec VPN Settings | 1074](#)
- [Viewing Tunnels | 1075](#)
- [Importing IPsec VPNs | 1076](#)
- [Deleting IPsec VPN | 1079](#)
- [IPsec VPN Main Page Fields | 1079](#)

IPsec VPN Overview

IN THIS SECTION

- [IPsec VPN Topologies | 982](#)

IPsec VPN provides a means to securely communicate with remote computers across a public WAN such as the Internet. A VPN connection can link two LANs (site-to-site VPN) or a remote dial-up user and a LAN. The traffic that flows between these two points passes through shared resources such as routers, switches, and other network equipment that make up the public WAN. To secure VPN communication that passes through the WAN, you'll need to create an IPsec tunnel.

Security Director simplifies the management and deployment of IPsec VPNs. In general, VPN configurations are tedious and repetitive when deploying over a large number of SRX Series devices and for full-meshed VPN deployments. With Security Director, you can use VPN profiles to group common settings and apply them to multiple VPN tunnel configurations across multiple SRX Series devices. You can mass deploy site-to-site, hub-and-spoke, and fully meshed VPNs. Security Director determines the necessary deployment scenarios and publishes the required configuration for all SRX Series devices.

Security Director supports policy-based and route-based IPsec VPNs on SRX Series devices. Policy-based VPNs are supported only in the site-to-site deployments, where you configure two endpoints. If you have two or more SRX Series devices, then route-based VPNs offer more flexibility and scalability. To allow data to be securely transferred between a branch office and the corporate office, configure a policy-based or route-based IPsec VPN. For an enterprise-class deployment, configure a hub-and-spoke IPsec VPN.

Use route-based tunnel mode if:

- Participating gateways are Juniper Networks products.
- Either source or destination NAT must occur when traffic traverses the VPN.
- Dynamic routing protocols must be used for VPN routing.
- Primary and backup VPNs are required in the setup.

Use policy-based tunnel mode if:

- The remote VPN gateway is a non-Juniper Networks device.
- Access to the VPN must be restricted for specific application traffic.

When you create a policy-based or route-based IPsec VPN, a topology is displayed for representation. You'll need to click on the icons to configure the remote gateway.



NOTE:

- Security Director views each logical system as any other security device and takes ownership of the security configuration of the logical system. In Security Director, each logical system is managed as a unique security device.
- Security Director ensures that the tunnel interfaces are exclusively assigned to the individual logical systems of a device. No tunnel interface is assigned to more than one logical system of the same device.
- Security Director does not support VPN over Point-to-Point Protocol over Ethernet (PPPoE).


IPsec VPN Topologies

The following IPsec VPNs are supported:


- Site-to-Site VPNs—Connects two sites in an organization together and allows secure communications between the sites.




- Hub-and-Spoke (establishment all peers)—Connects branch offices to the corporate office in an enterprise network. You can also use this topology to connect spokes together by sending traffic through the hub.

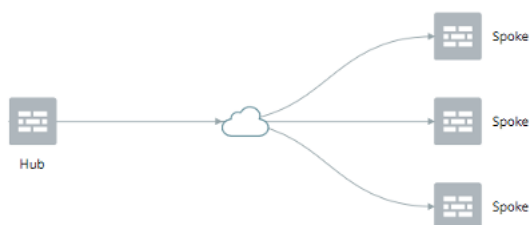


- Hub-and-Spoke (establishment by spokes)—Auto-VPN supports an IPsec VPN aggregator (hub) that serves as a single termination point for multiple tunnels to remote sites (spokes). Auto-VPN allows network administrators to configure a hub for current and future spokes. No configuration changes are required on the hub when spoke devices are added or deleted, thus allowing administrators flexibility in managing large-scale network deployments.

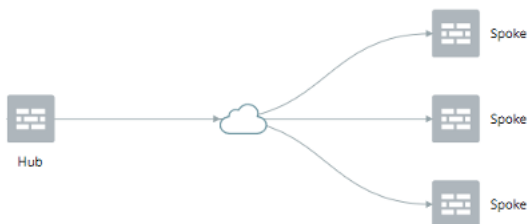

- **Hub-and-Spoke (Auto Discovery VPN)**—Auto Discovery VPN (ADVPN) is a technology that allows the central hub to dynamically inform spokes about a better path for traffic between two spokes. When both spokes acknowledge the information from the hub, they establish a shortcut tunnel and change the routing topology for the host to reach the other side without sending traffic through the hub.

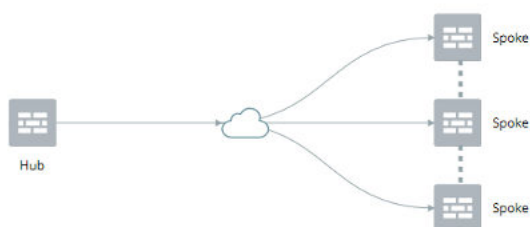

- **Full Mesh**— Connects two or more participating gateways and sets up a separate tunnel with every other device in the group.

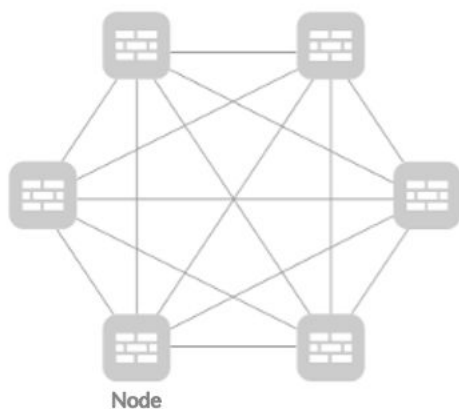

- **Remote Access VPN (Juniper Secure Connect)**—Juniper Secure Connect provides secure remote access for the users to connect to the corporate networks and resources remotely using the Internet. Juniper Secure Connect downloads the configuration from SRX Services devices and chooses the most effective transport protocols during connection establishment.



- Remote Access VPN (NCP exclusive client)—Remote Access VPN allows users working at home or traveling, to connect to the corporate office and its resource. The Network Control Protocol (NCP) Exclusive Remote Access Client is part of the NCP Exclusive Remote Access solution for Juniper SRX Series Gateways. The VPN client is only available with NCP Exclusive Remote Access Management. Use the NCP Exclusive Client to establish secure, IPsec-based data links from any location when connected with SRX Series Gateways.



RELATED DOCUMENTATION

[Create a Site-to-Site VPN](#)

[Create a Hub-and-Spoke \(Establishment All Peers\) VPN | 998](#)

[Create a Hub-and-Spoke \(Establishment by Spokes\) VPN | 1010](#)

[Create a Hub-and-Spoke Auto Discovery VPN | 1023](#)

[Create a Full Mesh VPN | 1035](#)

[Create a Remote Access VPN—Juniper Secure Connect | 1047](#)

[Create a Remote Access VPN—NCP Exclusive Client | 1057](#)

[Understanding IKE Authentication | 1072](#)

[Understanding IPsec VPN Routing | 1071](#)

[Understanding IPsec VPN Modes | 1069](#)

[Comparison of Policy-Based VPNs and Route-Based VPNs | 1069](#)

Create a Site-to-Site VPN

Before You Begin

- Read the ["IPsec VPN Overview" on page 981](#) topic.

- Review the IPsec VPN main page for an understanding of your current data set. See ["IPsec VPN Main Page Fields" on page 1079](#) for field descriptions.
- Create addresses and address sets. See ["Creating Addresses and Address Groups" on page 1127](#).
- Create VPN profiles. See ["Creating VPN Profiles" on page 1085](#).
- Define extranet devices. See ["Creating Extranet Devices" on page 1081](#).

A site-to-site VPN connects two sites in an organization and allows secure communications between the sites.

To configure a site-to-site VPN:

1. Select **Configure > IPsec VPN > IPsec VPNs**.

The IPsec VPNs page is displayed.

2. Click **Create VPN > <Policy Based/Route Based> Site to Site**.

The Create Site to Site VPN page is displayed.

3. Complete the VPN configuration parameters according to the guidelines provided in [Table 286 on page 986](#) through [Table 289 on page 993](#).



NOTE: Click each device icon in the topology to configure the devices. Click **View IKE/IPSec Settings** to view or edit VPN profiles. If the VPN profile is default, you can edit the configurations. If the profile is shared, you can only view the configurations. The VPN connectivity will change from gray to blue line in the topology to show that the configuration is complete.

4. Click **Save** to save the IPsec VPN configuration.

Figure 68: Create Site-to-Site VPN

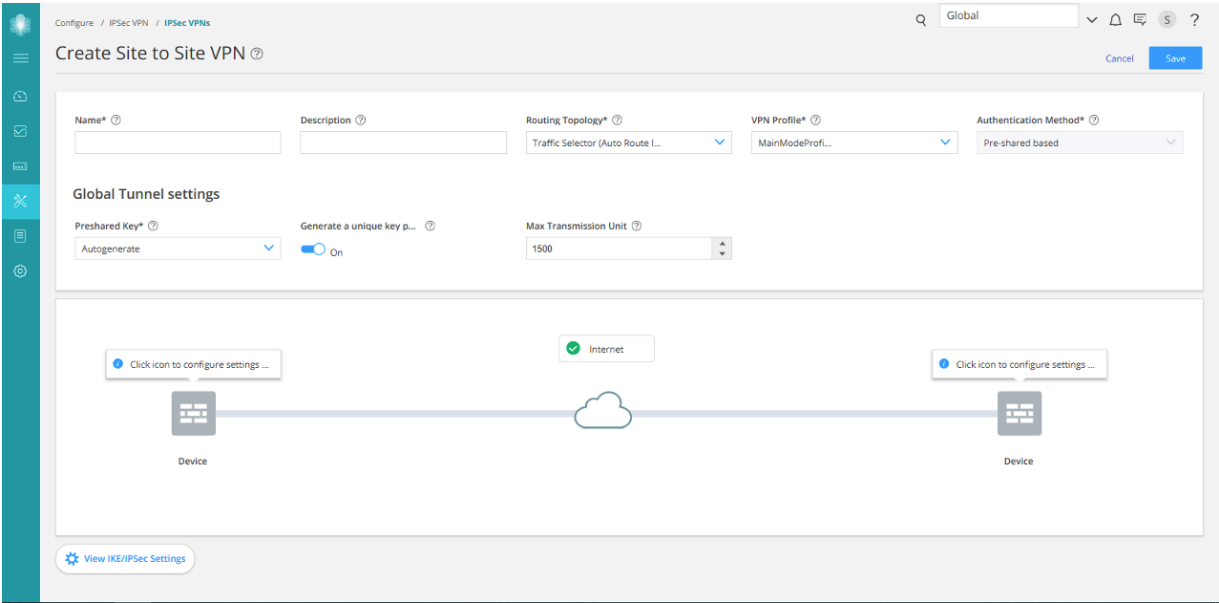


Table 286: IPsec VPN Configuration Parameters

| Settings | Guidelines |
|-------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores; spaces are not allowed; maximum length is 62 characters. |
| Description | Enter a description for the VPN; maximum length is 255 characters. |

Table 286: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------|--|
| Routing Topology | <p>Select one of the following options:</p> <ul style="list-style-type: none"> • Traffic Selector (Auto Route Insertion)—A traffic selector is an agreement between Internet Key Exchange (IKE) peers to permit traffic through a tunnel if the traffic matches a specified pair of local and remote addresses. • Static routing—Generates static routing based on the protected networks or zones per device. • OSPF-Dynamic Routing—Generates OSPF configuration. • RIP-Dynamic Routing—Generates RIP configuration. • eBGP-Dynamic Routing—Generates eBGP configuration. <p>NOTE: Routing Topology is applicable only for Route-based VPNs.</p> |
| VPN Profile | <p>Select a VPN profile from the drop-down list based on the deployment scenario.</p> <p>Default profile is applicable to a particular IPsec VPN only. You can view and edit the details by clicking View IKE/IPsec settings on the Create VPN page.</p> <p>Shared profile can be used by one or more IPsec VPNs. You can only view the details of the shared profiles by clicking View IKE/IPsec settings.</p> <p>If you select the VPN Profile value as Default, then while saving the IPsec VPN, you can choose to save the new profile as either VPN specific or shared. If you are saving it as shared, then the profile will be listed on the VPN Profiles page.</p> |

Table 286: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------------|--|
| Authentication Method | <p>Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages.</p> <ul style="list-style-type: none"> • Pre-shared based—Specifies that a pre-shared key, which is a secret key shared between the two peers, is used during authentication to identify the peers to each other. The same key must be configured for each peer. • RSA Signatures—Specifies that a public key algorithm, which supports encryption and digital signatures is used. • DSA Signatures—Specifies that the Digital Signature Algorithm (DSA) is used. • ECDSA Signatures 256—Specifies that the Elliptic Curve DSA (ECDSA) using the 256-bit elliptic curve secp256r1, as specified in the Federal Information Processing Standard (FIPS) Digital Signature Standard (DSS) 186-3 is used. • ECDSA Signatures 384—Specifies that the ECDSA using the 384-bit elliptic curve secp384r1, as specified in the FIPS DSS 186-3 is used. |
| Global Tunnel Settings | |

Table 286: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|-----------------------|--|
| Pre-shared Key | <p>Establish a VPN connection using pre-shared keys, which is essentially a password that is same for both parties. Pre-shared keys are commonly deployed for site-to-site IPsec VPNs, either within a single organization or between different organizations.</p> <p>Select the type of pre-shared key you want to use:</p> <ul style="list-style-type: none"> • Autogenerate—Select if you want to automatically generate a unique key per tunnel. When selected, the Generate Unique key per tunnel option is automatically enabled. If you disable the Generate Unique key per tunnel option, Security Director generates a single key for all tunnels. • Manual—Select to enter the key manually. By default, the manual key is masked. <p>NOTE: This is applicable only if the authentication method is pre-shared based.</p> |
| Network IP | <p>Enter the IP address of the numbered tunnel interface. This is the subnet address from where the IP address is automatically assigned for tunnel interfaces.</p> |
| Max Transmission Unit | <p>Select the maximum transmission unit (MTU) in bytes. This defines the maximum size of an IP packet, including the IPsec overhead. You can specify the MTU value for the tunnel endpoint.</p> <p>The valid range is 68 to 9192 bytes.</p> <p>The default value is 1500 bytes.</p> |

Table 287: View or Select Devices

| Settings | Guidelines |
|-----------|---|
| Endpoint | <p>Select either Devices or Extranet devices as endpoints.</p> <p>NOTE: To add extranet devices inline, click Add Extranet Devices.</p> |
| Available | <p>View all devices from the current and child domains, with view parent enabled. Devices from the child domain with view parent disabled are not shown.</p> <p>You can select a device and add it as an endpoint.</p> <p>The following filter criteria are applied for the device selection:</p> <ul style="list-style-type: none"> • SRX Series devices mapped to Junos OS Release 12.1X46 and later Junos-es schemas are not listed. • Logical systems and tenant systems are not listed. • Routing option is not applicable. |

Table 288: Device Configuration Parameters

| Settings | Guidelines |
|--------------------|---|
| External Interface | Select the outgoing interface for IKE security associations (SAs). |
| Tunnel Zone | <p>Select the tunnel zone. They are logical areas of address space that can support dynamic IP (DIP) address pools for NAT applications to pre and post-encapsulated IPsec traffic.</p> <p>Tunnel zones also provide great flexibility in combining tunnel interfaces with VPN tunnels.</p> <p>NOTE: This is applicable for only route-based site-to-site VPN.</p> |
| Routing instance | <p>Select the required routing instance.</p> <p>NOTE: This is applicable for only route-based site-to-site VPN.</p> |

Table 288: Device Configuration Parameters (*Continued*)

| Settings | Guidelines |
|---------------------|---|
| Initiator/Recipient | <p>Select an option:</p> <ul style="list-style-type: none"> • Initiator • Recipient <p>NOTE: This is applicable when the VPN profile is Aggressive Mode profile.</p> |
| Certificate | <p>Select a certificate to authenticate the virtual private network (VPN) initiator and recipient.</p> <p>This is applicable in one of the following scenarios:</p> <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |
| Trusted CA/Group | <p>Select the certificate authority (CA) profile from the list to associate it with the local certificate.</p> <p>This is applicable in one of the following scenarios:</p> <ul style="list-style-type: none"> • The VPN profile is RSA profile, ADVPN profile, or default profile with any signature type. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |

Table 288: Device Configuration Parameters *(Continued)*

| Settings | Guidelines |
|-------------------------|---|
| Export | <ul style="list-style-type: none"> • Select the Static Routes check box to export static routes. <p>Security Director simplifies VPN address management by enabling the administrator to export static routes to a remote site over a tunnel, allowing the static route networks to participate in the VPN.</p> <p>For eBGP Dynamic Routing, by default, the Static Routes check box is selected.</p> <ul style="list-style-type: none"> • Select the RIP Routes check box to export RIP routes. <p>NOTE: You can export RIP routes only when Routing Topology is OSPF Dynamic Routing.</p> <ul style="list-style-type: none"> • Select the OSPF Routes check box to export OSPF routes. <p>NOTE: You can export OSPF routes only when Routing Topology is RIP-Dynamic Routing.</p> <p>If you select OSPF or RIP export, the OSPF or RIP routes outside the VPN network is imported into a VPN network through OSPF or RIP Dynamic routing protocols.</p> |
| OSPF Area | <p>Select an OSPF area ID within the range of 0 to 4,294,967,295, where the tunnel interfaces of this VPN need to be configured.</p> <p>NOTE: This is applicable when the routing topology is OSPF-Dynamic Routing in route-based site-to-site VPN.</p> |
| Max Retransmission Time | <p>Select the retransmission timer to limit the number of times the RIP demand circuit re-sends update messages to an unresponsive peer. If the configured retransmission threshold is reached, routes from the next-hop router are marked as unreachable and the hold-down timer starts. You must configure a pair of RIP demand circuits for this timer to take effect.</p> <p>The retransmission range is from 5 through 180 seconds and the default value is 50 seconds.</p> <p>NOTE: This is applicable only when routing topology is RIP-Dynamic Routing in route-based site-to-site VPN.</p> |

Table 288: Device Configuration Parameters *(Continued)*

| Settings | Guidelines |
|--------------------|---|
| AS Number | <p>Select a unique number to assign to the autonomous system (AS). The AS number identifies an autonomous system and enables the system to exchange exterior routing information with other neighboring autonomous systems. The valid range is from 0 through 4294967294.</p> <p>NOTE: This is applicable only when routing topology is e-BGP Dynamic Routing in route-based site-to-site VPN.</p> |
| Protected Networks | <p>Configure the addresses or interface type for the selected device to protect one area of the network from the other.</p> <p>When a dynamic routing protocol is selected, the interface option is displayed.</p> <p>You can also create addresses by clicking Add New Address.</p> <p>NOTE: This is applicable for only route-based site-to-site VPN.</p> |

Table 289: View or Edit IKE and IPsec Settings

| Settings | Guidelines |
|---------------------|--|
| IKE Settings | |
| IKE Version | <p>Select the required IKE version, either V1 or V2, that is used to negotiate dynamic security associations (SAs) for IPsec. By default, IKE V2 is used.</p> |
| Mode | <p>Select an IKE policy mode.</p> <ul style="list-style-type: none"> • Main—Uses six messages in three peer-to-peer exchanges to establish the IKE SA. These three steps include the IKE SA negotiation, a Diffie-Hellman exchange, and authentication of the peer. Also provides identity protection. • Aggressive—Takes half the number of messages of main mode, has less negotiation power, and does not provide identity protection. <p>NOTE: Mode is applicable when the IKE Version is V1.</p> |

Table 289: View or Edit IKE and IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------------|--|
| Dead Peer Detection | Enable to permit the two gateways to determine if the peer gateway is up and responding to the Dead Peer Detection (DPD) messages that are negotiated during IPsec establishment. |
| DPD Mode | <p>Select a DPD Mode.</p> <ul style="list-style-type: none"> Optimized: R-U-THERE messages are triggered if there is no incoming IKE or IPsec traffic within a configured interval after the device sends outgoing packets to the peer. This is the default mode. Probe Idle Tunnel: R-U-THERE messages are triggered if there is no incoming or outgoing IKE or IPsec traffic within a configured interval. R-U-THERE messages are sent periodically to the peer until there is traffic activity. Always-send: R-U-THERE messages are sent at configured intervals regardless of traffic activity between the peers. |
| DPD Interval | Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds. |
| DPD Threshold | Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5. |
| Custom Proposal | |
| Name | Enter a name for the VPN. |
| Diffie Hellman group | Select a group. Diffie-Hellman (DH) groups determine the strength of the key used in the key exchange process. |
| Authentication-algorithm | Select an algorithm. The device uses this algorithm to verify the authenticity and integrity of a packet. |
| Encryption-algorithm | Select the appropriate encryption mechanism. |

Table 289: View or Edit IKE and IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------------------|---|
| Lifetime-seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Advance Configuration | |
| General IKE ID | Enable this option to accept peer IKE ID. This option is disabled by default. If General IKE ID is enabled, the IKE ID option is disabled automatically. |
| IKEv2 Re Authentication | Select a reauthentication frequency. Reauthentication can be disabled by setting the reauthentication frequency to 0. Range is 0 to 100. |
| IKEv2 Re Fragmentation Support | IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level. |
| IKE ID | Select an option: <ul style="list-style-type: none"> • None • Distinguished name • Hostname • IPv4 address • E-mail Address IKE ID is applicable only when General IKE ID is disabled. |
| NAT-T | Enable Network Address Translation-Traversal (NAT-T) if the dynamic endpoint is behind a NAT device. |
| Keep Alive | Select a value. NAT Keepalives are required to maintain the NAT translation during the connection between the VPN peers. Range is from 1 to 300 seconds. |
| IPSec Settings | |

Table 289: View or Edit IKE and IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------------|---|
| Perfect Forward Secrecy | Select Perfect Forward Secrecy (PFS) as the method that the device uses to generate the encryption key. The PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security but require more processing time. |
| Establish Tunnel | <p>Select an option to specify when IKE is activated.</p> <ul style="list-style-type: none"> Immediately—IKE is activated immediately after VPN configuration changes are committed. On-traffic—IKE is activated only when data traffic flows and must be negotiated with the peer gateway. This is the default behavior. |
| Custom Proposal | |
| Name | Enter a name for the VPN. |
| Authentication Algorithm | Select an algorithm. The device uses these algorithms to verify the authenticity and integrity of a packet. |
| Protocol | <p>Select the required protocol to establish the VPN.</p> <ul style="list-style-type: none"> ESP—The Encapsulating Security Payload (ESP) protocol provides both encryption and authentication. AH—The Authentication Header (AH) protocol provides data integrity and data authentication. |
| Encryption Algorithm | <p>Select the necessary encryption method.</p> <p>This is applicable if the Protocol is ESP.</p> |
| Lifetime Seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Lifetime kilobytes | Select the lifetime (in kilobytes) of an IPsec security association (SA). The range is from 64 through 4294967294 kilobytes. |

Table 289: View or Edit IKE and IPsec Settings *(Continued)*

| Settings | Guidelines |
|------------------------------|--|
| Advance Configuration | |
| VPN Monitor | Enable this option to send Internet Control Message Protocol (ICMP) to determine if the VPN is up. |
| Anti Replay | By default, Anti-Replay detection is enabled. IPsec protects against a VPN attack by using a sequence of numbers that are built into the IPsec packet—the system does not accept a packet for which it has already seen the same sequence number. It checks the sequence numbers and enforces the check, rather than just ignoring the sequence numbers. Disable it if there is an error with the IPsec mechanism that results in out-of-order packets, preventing proper functionality. |
| Install interval | Select the maximum number of seconds to allow for the installation of a re-keyed outbound security association (SA) on the device. |
| Idle Time | Select the appropriate idle time interval. The sessions and their corresponding translations typically time out after a certain period if no traffic is received. |
| DF Bit | <p>Select an option to process the Don't Fragment (DF) bit in IP messages.</p> <ul style="list-style-type: none"> • Clear—Disable the DF bit from the IP messages. This is the default. • Copy—Copy the DF bit to the IP messages. • Set—Enable the DF bit in the IP messages. |
| Copy Outer DSCP | Enable copying of Differentiated Services Code Point (DSCP) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner class-of-service (CoS) rules. |

RELATED DOCUMENTATION
[IPsec VPN Overview](#) | 981

Create a Hub-and-Spoke (Establishment All Peers) VPN

Before You Begin

- Read the ["IPsec VPN Overview" on page 981](#) topic.
- Review the IPsec VPN main page for an understanding of your current data set. See ["IPsec VPN Main Page Fields" on page 1079](#) for field descriptions.
- Create addresses and address sets. See ["Creating Addresses and Address Groups" on page 1127](#).
- Create VPN profiles. See ["Creating VPN Profiles" on page 1085](#).
- Define extranet devices. See ["Creating Extranet Devices" on page 1081](#).

The hub-and-spoke (establishment all peers) VPN connects spokes together by sending traffic through the hub.

To configure hub-and-spoke (establishment all peers):

1. Select **Configure > IPsec VPN > IPsec VPNs**.

The IPsec VPNs page is displayed.

2. Click **Create VPN > <Route Based>Hub and Spoke (Establishment All Peers)**.

The Create Hub-and-Spoke (Establishment All Peers) VPN page is displayed.

3. Complete the VPN configuration parameters according to the guidelines provided in [Table 290 on page 999](#) through [Table 293 on page 1005](#).



NOTE: Click each hub and spoke icon in the topology to configure the devices. Click **View IKE/IPSec Settings** to view or edit VPN profiles. If the VPN profile is default, you can edit the configurations. If the profile is shared, you can only view the configurations. The VPN connectivity will change from gray to blue line in the topology to show that the configuration is complete.

The topology displayed for hub-and-spoke is only a representation. You can configure any number of hubs and spokes.

4. Click **Save** to save the IPsec VPN configuration.

Figure 69: Create Hub-and-Spoke (Establishment All Peers) VPN

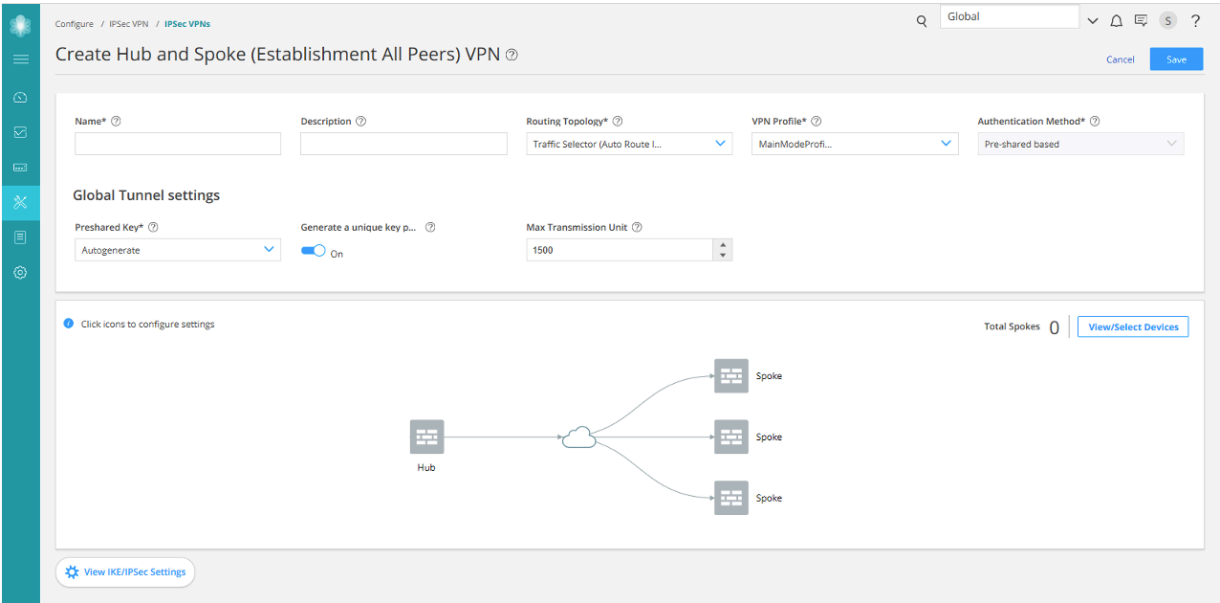


Table 290: IPsec VPN Configuration Parameters

| Settings | Guidelines |
|-------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores; spaces are not allowed; maximum length is 62 characters. |
| Description | Enter a description for the VPN; maximum length is 255 characters. |

Table 290: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------|---|
| Routing Topology | <p>Select one of the following options:</p> <ul style="list-style-type: none"> • Traffic Selector (Auto Route Insertion)—A traffic selector is an agreement between Internet Key Exchange (IKE) peers to permit traffic through a tunnel if the traffic matches a specified pair of local and remote addresses. • Static routing—Generates static routing based on the protected networks or zones per device. • OSPF-Dynamic Routing—Generates OSPF configuration. • RIP-Dynamic Routing—Generates RIP configuration. • eBGP-Dynamic Routing—Generates eBGP configuration. |
| VPN Profile | <p>Select a VPN profile from the drop-down list based on the deployment scenario.</p> <p>Default profile is applicable to a particular IPsec VPN only. You can view and edit the details by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>Shared profile can be used by one or more IPsec VPNs. You can only view the details of the shared profiles by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>If you select the VPN Profile value as Default, then while saving the IPsec VPN, you'll need to save the new profile as either VPN specific or shared. If you are saving it as shared, then the profile will be listed on the VPN Profiles page.</p> |

Table 290: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------------|--|
| Authentication Method | <p>Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages.</p> <ul style="list-style-type: none"> • Pre-shared based—Specifies that a pre-shared key, which is a secret key shared between the two peers, is used during authentication to identify the peers to each other. The same key must be configured for each peer. • RSA Signatures—Specifies that a public key algorithm, which supports encryption and digital signatures is used. • DSA Signatures—Specifies that the Digital Signature Algorithm (DSA) is used. • ECDSA-Signatures-256—Specifies that the Elliptic Curve DSA (ECDSA) using the 256-bit elliptic curve secp256r1, as specified in the Federal Information Processing Standard (FIPS) Digital Signature Standard (DSS) 186-3 is used. • ECDSA-Signatures-384—Specifies that the ECDSA using the 384-bit elliptic curve secp384r1, as specified in the FIPS DSS 186-3 is used. |
| Global Tunnel Settings | |

Table 290: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|--|--|
| Pre-shared Key | <p>Establish a VPN connection using pre-shared keys, which is essentially a password that is same for both parties.</p> <p>Select the type of pre-shared key you want to use:</p> <ul style="list-style-type: none"> • Autogenerate—Select if you want to automatically generate a unique key per tunnel. When selected, the Generate Unique key per tunnel option is automatically enabled. If you disable Generate Unique key per tunnel option, Security Director generates a single key for all tunnels. • Manual—Select to enter the key manually. By default, the manual key is masked. <p>NOTE: This is applicable only if the authentication method is Preshared based.</p> |
| Network IP | Enter the IP address of the numbered interface. This is the subnet address from where the IP address is automatically assigned for tunnel interfaces. |
| Number of Spoke Devices Per Tunnel Interface | Select All or specify the number of spoke devices to share one tunnel interface on hub. |
| Max Transmission Unit | Select the maximum transmission unit (MTU) in bytes. This defines the maximum size of an IP packet, including the IPsec overhead. You can specify the MTU value for the tunnel endpoint. The valid range is 68 to 9192 bytes. The default value is 1500 bytes. |

Table 291: View or Select Devices

| Settings | Guidelines |
|----------|---|
| Hub | <p>Select either Devices or Extranet devices as hubs.</p> <p>NOTE: To add extranet devices, click Add Extranet Devices.</p> |

Table 291: View or Select Devices (Continued)

| Settings | Guidelines |
|-----------|--|
| Spoke | <p>Select either Devices or Extranet devices as spokes.</p> <p>NOTE: To add extranet devices, click Add Extranet Devices.</p> |
| Available | <p>View all devices from the current and child domains, with view parent enabled. Devices from the child domain with view parent disabled are not shown.</p> <p>Select hub and spoke devices.</p> <p>The following filter criteria are applied for the device selection:</p> <ul style="list-style-type: none"> • SRX Series devices mapped to Junos OS Release 12.1X46 and later Junos-es schemas are not listed. • Logical systems and tenant systems are not listed. • Routing option is not applicable. |

Table 292: Device Configuration Parameters

| Settings | Guidelines |
|--------------------|--|
| External Interface | Select the outgoing interface for IKE security associations (SAs). This interface is associated with a zone that acts as its carrier, providing firewall security for it. |
| Tunnel Zone | <p>Select the tunnel zone. They are logical areas of address space that can support dynamic IP (DIP) address pools for NAT applications to pre- and post-encapsulated IPsec traffic.</p> <p>Tunnel zones also provide great flexibility in combining tunnel interfaces with VPN tunnels.</p> |
| Metric | Specify the cost for an access route for the next hop. |
| Routing instance | Select the required routing instance. |

Table 292: Device Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------|--|
| Certificate | <p>Select a certificate to authenticate the virtual private network (VPN) initiator and recipient.</p> <p>This is applicable in one of the following scenarios:</p> <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |
| Trusted CA/Group | <p>Select the certificate authority (CA) profile from the list to associate it with the local certificate.</p> <p>This is applicable in one of the following scenarios:</p> <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |
| Export | <ul style="list-style-type: none"> • Select the Static Routes check box to export static routes. <p>Security Director simplifies VPN address management by enabling the administrator to export static routes to a remote site over a tunnel, allowing the static route networks to participate in the VPN. However, only devices on the hub side can export static default routes to the device side. Devices at the spoke side cannot export static default routes over a tunnel.</p> <p>NOTE: For eBGP Dynamic Routing, by default, the Static Routes check box is selected.</p> <ul style="list-style-type: none"> • Select the RIP Routes check box to export RIP routes. <p>NOTE: You can export RIP routes only when Routing Topology is OSPF Dynamic Routing.</p> <ul style="list-style-type: none"> • Select the OSPF Routes check box to export OSPF routes. <p>NOTE: You can export OSPF routes only when Routing Topology is RIP-Dynamic Routing.</p> <p>If you select OSPF or RIP export, the OSPF or RIP routes outside the VPN network is imported into a VPN network through OSPF or RIP Dynamic routing protocols.</p> |

Table 292: Device Configuration Parameters (*Continued*)

| Settings | Guidelines |
|-------------------------|--|
| OSPF Area | <p>Select an OSPF area ID within the range of 0 to 4,294,967,295, where the tunnel interfaces of this VPN need to be configured.</p> <p>This is applicable when the Routing Topology is OSPF-Dynamic Routing.</p> |
| Max Retransmission Time | <p>Select the retransmission timer to limit the number of times the RIP demand circuit re-sends update messages to an unresponsive peer. If the configured retransmission threshold is reached, routes from the next-hop router are marked as unreachable and the hold-down timer starts. You must configure a pair of RIP demand circuits for this timer to take effect.</p> <p>The retransmission range is from 5 through 180 seconds and the default value is 50 seconds.</p> <p>NOTE: This is applicable only when Routing Topology is RIP-Dynamic Routing.</p> |
| AS Number | <p>Select a unique number to assign to the autonomous system (AS). The AS number identifies an autonomous system and enables the system to exchange exterior routing information with other neighboring autonomous systems. The valid range is from 0 through 4294967295.</p> <p>NOTE: This is applicable only when Routing Topology is e-BGP Dynamic Routing.</p> |
| Protected Networks | <p>Configure the addresses or interface type for the selected device to protect one area of the network from the other.</p> <p>When a dynamic routing protocol is selected, the interface option is displayed.</p> <p>NOTE: You can also create addresses by clicking Add New Address.</p> |

Table 293: View or Edit IKE or IPsec Settings

| Settings | Guidelines |
|---------------------|---|
| IKE Settings | |
| IKE Version | <p>Select the required IKE version, either V1 or V2, that is used to negotiate dynamic security associations (SAs) for IPsec. By default, IKE V2 is used.</p> |

Table 293: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------------|--|
| Mode | <p>Select an IKE policy mode.</p> <ul style="list-style-type: none"> • Main—Uses six messages in three peer-to-peer exchanges to establish the IKE SA. These three steps include the IKE SA negotiation, a Diffie-Hellman exchange, and authentication of the peer. Also provides identity protection. • Aggressive—Takes half the number of messages of main mode, has less negotiation power, and does not provide identity protection. <p>NOTE: Mode is applicable when the IKE Version is V1.</p> |
| Encryption-algorithm | Select the appropriate encryption mechanism. |
| Authentication-algorithm | Select an algorithm. The device uses this algorithm to verify the authenticity and integrity of a packet. |
| Diffie Hellman group | Select a group. Diffie-Hellman (DH) groups determine the strength of the key used in the key exchange process. |
| Lifetime-seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Dead Peer Detection | Enable to permit the two gateways to determine if the peer gateway is up and responding to the Dead Peer Detection (DPD) messages that are negotiated during IPsec establishment. |
| DPD Mode | <p>Select a DPD Mode.</p> <ul style="list-style-type: none"> • Optimized: R-U-THERE messages are triggered if there is no incoming IKE or IPsec traffic within a configured interval after the device sends outgoing packets to the peer. This is the default mode. • Probe Idle Tunnel: R-U-THERE messages are triggered if there is no incoming or outgoing IKE or IPsec traffic within a configured interval. R-U-THERE messages are sent periodically to the peer until there is traffic activity. • Always-send: R-U-THERE messages are sent at configured intervals regardless of traffic activity between the peers. |

Table 293: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------------------|---|
| DPD Interval | Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds. |
| DPD Threshold | Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5. |
| Advance Configuration | |
| General IKE ID | Enable this option to accept peer IKE ID. This option is disabled by default. If General IKE ID is enabled, the IKE ID option is disabled automatically. |
| IKEv2 Re Authentication | Select a reauthentication frequency. Reauthentication can be disabled by setting the reauthentication frequency to 0. Range is 0 to 100. |
| IKEv2 Re Fragmentation Support | IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level. |
| IKEv2 Re-fragment Size | Select the size of the packet at which messages are fragmented. By default, the size is 576 bytes for IPv4. Range is 570 to 1320. |

Table 293: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------------|---|
| IKE ID | <p>Select an option:</p> <ul style="list-style-type: none"> • None • Distinguished name • Hostname • IPv4 address • E-mail Address <p>IKE ID is applicable only when General IKE ID is disabled.</p> |
| NAT-T | Enable Network Address Translation-Traversal (NAT-T) if the dynamic endpoint is behind a NAT device. |
| Keep Alive | Select a value. NAT Keepalives are required to maintain the NAT translation during the connection between the VPN peers. Range is from 1 to 300 seconds. |
| IPSec Settings | |
| Protocol | <p>Select the required protocol to establish the VPN.</p> <ul style="list-style-type: none"> • ESP—The Encapsulating Security Payload (ESP) protocol provides both encryption and authentication. • AH—The Authentication Header (AH) protocol provides data integrity and data authentication. |
| Encryption Algorithm | <p>Select the necessary encryption method.</p> <p>This is applicable if the Protocol is ESP.</p> |
| Authentication Algorithm | Select an algorithm. The device uses these algorithms to verify the authenticity and integrity of a packet. |

Table 293: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|------------------------------|--|
| Perfect Forward Secrecy | Select Perfect Forward Secrecy (PFS) as the method that the device uses to generate the encryption key. The PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security but require more processing time. |
| Establish Tunnel | <p>Select an option to specify when IKE is activated.</p> <ul style="list-style-type: none"> • Immediately—IKE is activated immediately after VPN configuration changes are committed. • On-traffic—IKE is activated only when data traffic flows and must be negotiated with the peer gateway. This is the default behavior. |
| Advance Configuration | |
| VPN Monitor | Enable this option to send Internet Control Message Protocol (ICMP) to determine if the VPN is up. |
| Optimized | When VPN monitoring optimization is enabled, the SRX Series device only sends ICMP echo requests (pings) when there is outgoing traffic and no incoming traffic from the configured peer, through the VPN tunnel. If there is incoming traffic through the VPN tunnel, the SRX Series device considers the tunnel to be active and does not send pings to the peer. |
| Anti Replay | By default, Anti-Replay detection is enabled. IPsec protects against a VPN attack by using a sequence of numbers that are built into the IPsec packet—the system does not accept a packet for which it has already seen the same sequence number. It checks the sequence numbers and enforces the check, rather than just ignoring the sequence numbers. Disable it if there is an error with the IPsec mechanism that results in out-of-order packets, preventing proper functionality. |
| Install interval | Select the maximum number of seconds to allow for the installation of a re-keyed outbound security association (SA) on the device. |
| Idle Time | Select the appropriate idle time interval. The sessions and their corresponding translations typically time out after a certain period if no traffic is received. |

Table 293: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------|---|
| DF Bit | <p>Select an option to process the Don't Fragment (DF) bit in IP messages.</p> <ul style="list-style-type: none"> • Clear—Disable the DF bit from the IP messages. This is the default. • Copy—Copy the DF bit to the IP messages. • Set—Enable the DF bit in the IP messages. |
| Copy Outer DSCP | <p>Enable copying of Differentiated Services Code Point (DSCP) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner class-of-service (CoS) rules.</p> |
| Lifetime Seconds | <p>Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds.</p> |
| Lifetime kilobytes | <p>Select the lifetime (in kilobytes) of an IPsec security association (SA). The range is from 64 through 4294967294 kilobytes.</p> |

RELATED DOCUMENTATION

| [IPsec VPN Overview](#) | 981

Create a Hub-and-Spoke (Establishment by Spokes) VPN

Before You Begin

- Read the ["IPsec VPN Overview" on page 981](#) topic.
- Review the IPsec VPN main page for an understanding of your current data set. See ["IPsec VPN Main Page Fields" on page 1079](#) for field descriptions.
- Create addresses and address sets. See ["Creating Addresses and Address Groups" on page 1127](#).
- Create VPN profiles. See ["Creating VPN Profiles" on page 1085](#).

Auto-VPN allows you to configure a hub for current and future spokes. No configuration changes are required on the hub when spoke devices are added or deleted, thus allowing administrators flexibility in managing large-scale network deployments.

To configure hub-and-spoke (establishment by spokes):

1. Select **Configure > IPsec VPN > IPsec VPNs**.

The IPsec VPNs page is displayed.

2. Click **Create VPN > <Route Based>Hub and Spoke (Establishment by Spokes)**.

The Create Hub-and-Spoke (Establishment by Spokes) VPN page is displayed.

3. Complete the VPN configuration parameters according to the guidelines provided in [Table 294 on page 1012](#) through [Table 297 on page 1018](#).



NOTE: Click each hub and spoke icon in the topology to configure the devices. Click **View IKE/IPSec Settings** to view or edit VPN profiles. If the VPN profile is default, you can edit the configurations. If the profile is shared, you can only view the configurations. The VPN connectivity will change from gray to blue line in the topology to show that the configuration is complete.

The topology displayed for hub-and-spoke is only a representation. You can configure any number of hubs and spokes.

4. Click **Save** to save the IPsec VPN configuration.

Figure 70: Create Hub-and-Spoke (Establishment by Spokes) VPN

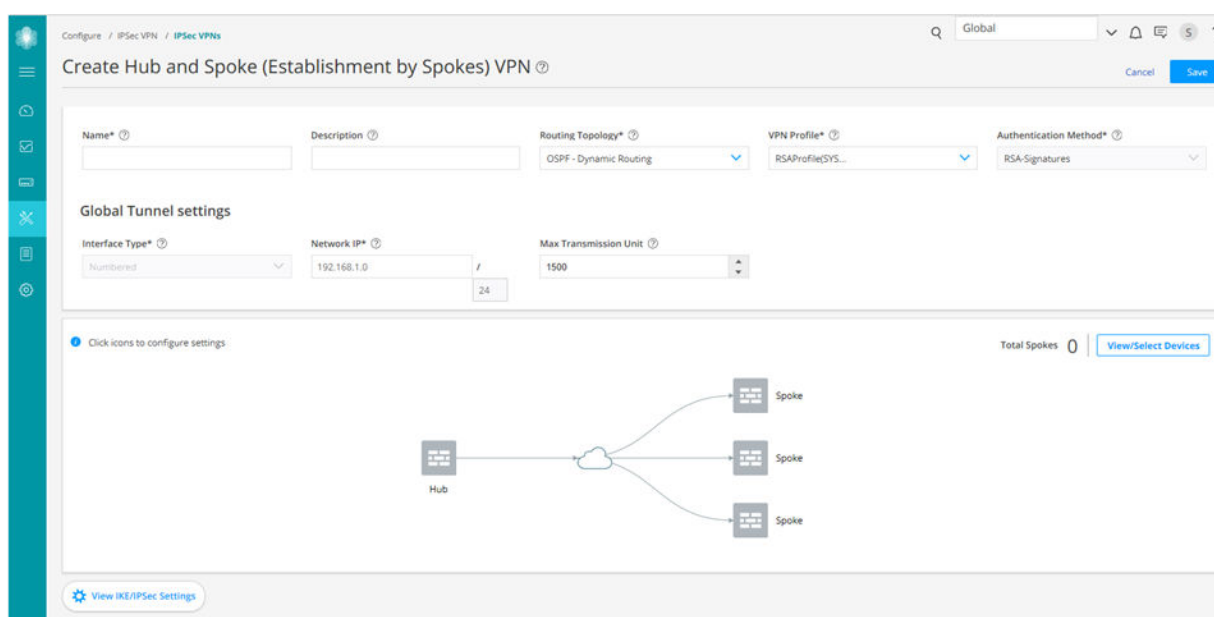


Table 294: IPsec VPN Configuration Parameters

| Settings | Guidelines |
|------------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores; spaces are not allowed; maximum length is 62 characters. |
| Description | Enter a description for the VPN; maximum length is 255 characters. |
| Routing Topology | <p>Select one of the following options:</p> <ul style="list-style-type: none"> • Traffic Selector (Auto Route Insertion)—A traffic selector is an agreement between Internet Key Exchange (IKE) peers to permit traffic through a tunnel if the traffic matches a specified pair of local and remote addresses. • Static routing—Generates static routing based on the protected networks or zones per device. • OSPF-Dynamic Routing—Generates OSPF configuration. • RIP-Dynamic Routing—Generates RIP configuration. • eBGP-Dynamic Routing—Generates eBGP configuration. |

Table 294: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|-------------|---|
| VPN Profile | <p>Select a VPN profile from the drop-down list based on the deployment scenario.</p> <p>Default profile is applicable to a particular IPsec VPN only. You can view and edit the details by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>Shared profile can be used by one or more IPsec VPNs. You can only view the details of the shared profiles by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>If you select the VPN Profile value as Default, then while saving the IPsec VPN, you'll need to save the new profile as either VPN specific or shared. If you are saving it as shared, then the profile will be listed on the VPN Profiles page.</p> |

Table 294: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------------|---|
| Authentication Method | <p>Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages.</p> <ul style="list-style-type: none"> • Pre-shared based—Specifies that a pre-shared key, which is a secret key shared between the two peers, is used during authentication to identify the peers to each other. The same key must be configured for each peer. • RSA Signatures—Specifies that a public key algorithm, which supports encryption and digital signatures, is used. • DSA Signatures—Specifies that the Digital Signature Algorithm (DSA) is used. • ECDSA-Signatures-256—Specifies that the Elliptic Curve DSA (ECDSA) using the 256-bit elliptic curve secp256r1, as specified in the Federal Information Processing Standard (FIPS) Digital Signature Standard (DSS) 186-3 is used. • ECDSA-Signatures-384—Specifies that the ECDSA using the 384-bit elliptic curve secp384r1, as specified in the FIPS DSS 186-3 is used. |
| Global Tunnel Settings | |

Table 294: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|-----------------------|---|
| Pre-shared Key | <p>Establish a VPN connection using pre-shared keys, which is essentially a password that is same for both parties.</p> <p>Select the type of pre-shared key you want to use:</p> <ul style="list-style-type: none"> • Autogenerate—Select if you want to automatically generate a unique key per tunnel. When selected, the Generate Unique key per tunnel option is automatically enabled. If you disable Generate Unique key per tunnel option, Security Director generates a single key for all tunnels. • Manual—Select to enter the key manually. By default, the manual key is masked. <p>NOTE: This is applicable only if the authentication method is Pre-shared based.</p> |
| Network IP | Enter the IP address of the numbered interface. This is the subnet address from where the IP address is automatically assigned for tunnel interfaces. |
| Max Transmission Unit | Select the maximum transmission unit (MTU) in bytes. This defines the maximum size of an IP packet, including the IPsec overhead. You can specify the MTU value for the tunnel endpoint. The valid range is 68 to 9192 bytes. The default value is 1500 bytes. |

Table 295: View or Select Devices

| Settings | Guidelines |
|----------|---------------------------|
| Hub | Select Devices as hubs. |
| Spoke | Select Devices as spokes. |

Table 295: View or Select Devices (Continued)

| Settings | Guidelines |
|-----------|--|
| Available | <p>View all devices from the current and child domains, with view parent enabled. Devices from the child domain with view parent disabled are not shown.</p> <p>Select hub and spoke devices.</p> <p>The following filter criteria are applied for the device selection:</p> <ul style="list-style-type: none"> • SRX Series devices mapped to Junos OS Release 12.1X46 and later Junos-es schemas are not listed. • Logical systems and tenant systems are not listed. • Routing option is not applicable. |

Table 296: Device Configuration Parameters

| Settings | Guidelines |
|--------------------|---|
| External Interface | Select the outgoing interface for IKE security associations (SAs). This interface is associated with a zone that acts as its carrier, providing firewall security for it. |
| Tunnel Zone | <p>Select the tunnel zone. They are logical areas of address space that can support dynamic IP (DIP) address pools for NAT applications to pre- and post-encapsulated IPsec traffic.</p> <p>Tunnel zones also provide great flexibility in combining tunnel interfaces with VPN tunnels.</p> |
| Metric | Specify the cost for an access route for the next hop. |
| Routing instance | Select the required routing instance. |
| Certificate | <p>Select a certificate to authenticate the virtual private network (VPN) initiator and recipient.</p> <p>This is applicable in one of the following scenarios:</p> <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |

Table 296: Device Configuration Parameters (*Continued*)

| Settings | Guidelines |
|------------------|--|
| Trusted CA/Group | <p>Select the certificate authority (CA) profile from the list to associate it with the local certificate.</p> <p>This is applicable in one of the following scenarios:</p> <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |
| Export | <ul style="list-style-type: none"> • Select the Static Routes check box to export static routes. <p>Security Director simplifies VPN address management by enabling the administrator to export static routes to a remote site over a tunnel, allowing the static route networks to participate in the VPN. However, only devices on the hub side can export static default routes to the device side. Devices at the spoke side cannot export static default routes over a tunnel.</p> <p>NOTE: For eBGP Dynamic Routing, by default, the Static Routes check box is selected.</p> <ul style="list-style-type: none"> • Select the RIP Routes check box to export RIP routes. <p>NOTE: You can export RIP routes only when Routing Topology is OSPF Dynamic Routing.</p> <ul style="list-style-type: none"> • Select the OSPF Routes check box to export OSPF routes. <p>NOTE: You can export OSPF routes only when Routing Topology is RIP-Dynamic Routing.</p> <p>If you select OSPF or RIP export, the OSPF or RIP routes outside the VPN network is imported into a VPN network through OSPF or RIP Dynamic routing protocols.</p> |
| OSPF Area | <p>Select an OSPF area ID within the range of 0 to 4,294,967,295, where the tunnel interfaces of this VPN need to be configured.</p> <p>This is applicable when the Routing Topology is OSPF-Dynamic Routing.</p> |

Table 296: Device Configuration Parameters (*Continued*)

| Settings | Guidelines |
|-------------------------|--|
| Max Retransmission Time | <p>Select the retransmission timer to limit the number of times the RIP demand circuit re-sends update messages to an unresponsive peer. If the configured retransmission threshold is reached, routes from the next-hop router are marked as unreachable and the hold-down timer starts. You must configure a pair of RIP demand circuits for this timer to take effect.</p> <p>The retransmission range is from 5 through 180 seconds and the default value is 50 seconds.</p> <p>NOTE: This is applicable only when Routing Topology is RIP-Dynamic Routing.</p> |
| AS Number | <p>Select a unique number to assign to the autonomous system (AS). The AS number identifies an autonomous system and enables the system to exchange exterior routing information with other neighboring autonomous systems. The valid range is from 0 through 4294967295.</p> <p>NOTE: This is applicable only when Routing Topology is e-BGP Dynamic Routing.</p> |
| Protected Networks | <p>Configure the addresses or interface type for the selected device to protect one area of the network from the other.</p> <p>When a dynamic routing protocol is selected, the interface option is displayed.</p> <p>NOTE: You can also create addresses by clicking Add New Address.</p> |

Table 297: View or Edit IKE or IPsec Settings

| Settings | Guidelines |
|---------------------|---|
| IKE Settings | |
| IKE Version | <p>Select the required IKE version, either V1 or V2, that is used to negotiate dynamic security associations (SAs) for IPsec. By default, IKE V2 is used.</p> |

Table 297: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------------|--|
| Mode | <p>Select an IKE policy mode.</p> <ul style="list-style-type: none"> • Main—Uses six messages in three peer-to-peer exchanges to establish the IKE SA. These three steps include the IKE SA negotiation, a Diffie-Hellman exchange, and authentication of the peer. Also provides identity protection. • Aggressive—Takes half the number of messages of main mode, has less negotiation power, and does not provide identity protection. <p>NOTE: Mode is applicable when the IKE Version is V1.</p> |
| Encryption-algorithm | Select the appropriate encryption mechanism. |
| Authentication-algorithm | Select an algorithm. The device uses this algorithm to verify the authenticity and integrity of a packet. |
| Diffie Hellman group | Select a group. Diffie-Hellman (DH) groups determine the strength of the key used in the key exchange process. |
| Lifetime-seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Dead Peer Detection | Enable to permit the two gateways to determine if the peer gateway is up and responding to the Dead Peer Detection (DPD) messages that are negotiated during IPsec establishment. |
| DPD Mode | <p>Select a DPD Mode.</p> <ul style="list-style-type: none"> • Optimized: R-U-THERE messages are triggered if there is no incoming IKE or IPsec traffic within a configured interval after the device sends outgoing packets to the peer. This is the default mode. • Probe Idle Tunnel: R-U-THERE messages are triggered if there is no incoming or outgoing IKE or IPsec traffic within a configured interval. R-U-THERE messages are sent periodically to the peer until there is traffic activity. • Always-send: R-U-THERE messages are sent at configured intervals regardless of traffic activity between the peers. |

Table 297: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------------------|---|
| DPD Interval | Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds. |
| DPD Threshold | Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5. |
| Advance Configuration | |
| General IKE ID | Enable this option to accept peer IKE ID. This option is disabled by default. If General IKE ID is enabled, the IKE ID option is disabled automatically. |
| IKEv2 Re Authentication | Select a reauthentication frequency. Reauthentication can be disabled by setting the reauthentication frequency to 0. Range is 0 to 100. |
| IKEv2 Re Fragmentation Support | IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level. |
| IKEv2 Re-fragment Size | Select the size of the packet at which messages are fragmented. By default, the size is 576 bytes for IPv4. Range is 570 to 1320. |

Table 297: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------------|---|
| IKE ID | <p>Select an option:</p> <ul style="list-style-type: none"> • None • Distinguished name • Hostname • IPv4 address • E-mail Address <p>IKE ID is applicable only when General IKE ID is disabled.</p> |
| NAT-T | Enable Network Address Translation-Traversal (NAT-T) if the dynamic endpoint is behind a NAT device. |
| Keep Alive | Select a value. NAT Keepalives are required to maintain the NAT translation during the connection between the VPN peers. Range is from 1 to 300 seconds. |
| IPSec Settings | |
| Protocol | <p>Select the required protocol to establish the VPN.</p> <ul style="list-style-type: none"> • ESP—The Encapsulating Security Payload (ESP) protocol provides both encryption and authentication. • AH—The Authentication Header (AH) protocol provides data integrity and data authentication. |
| Encryption Algorithm | <p>Select the necessary encryption method.</p> <p>This is applicable if the Protocol is ESP.</p> |
| Authentication Algorithm | Select an algorithm. The device uses these algorithms to verify the authenticity and integrity of a packet. |

Table 297: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|------------------------------|--|
| Perfect Forward Secrecy | Select Perfect Forward Secrecy (PFS) as the method that the device uses to generate the encryption key. The PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security but require more processing time. |
| Establish Tunnel | <p>Select an option to specify when IKE is activated.</p> <ul style="list-style-type: none"> Immediately—IKE is activated immediately after VPN configuration changes are committed. On-traffic—IKE is activated only when data traffic flows and must be negotiated with the peer gateway. This is the default behavior. |
| Advance Configuration | |
| VPN Monitor | Enable this option to send Internet Control Message Protocol (ICMP) to determine if the VPN is up. |
| Optimized | When VPN monitoring optimization is enabled, the SRX Series device only sends ICMP echo requests (pings) when there is outgoing traffic and no incoming traffic from the configured peer, through the VPN tunnel. If there is incoming traffic through the VPN tunnel, the SRX Series device considers the tunnel to be active and does not send pings to the peer. |
| Anti Replay | By default, Anti-Replay detection is enabled. IPsec protects against a VPN attack by using a sequence of numbers that are built into the IPsec packet—the system does not accept a packet for which it has already seen the same sequence number. It checks the sequence numbers and enforces the check, rather than just ignoring the sequence numbers. Disable it if there is an error with the IPsec mechanism that results in out-of-order packets, preventing proper functionality. |
| Install interval | Select the maximum number of seconds to allow for the installation of a re-keyed outbound security association (SA) on the device. |
| Idle Time | Select the appropriate idle time interval. The sessions and their corresponding translations typically time out after a certain period if no traffic is received. |

Table 297: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------|---|
| DF Bit | <p>Select an option to process the Don't Fragment (DF) bit in IP messages.</p> <ul style="list-style-type: none"> • Clear—Disable the DF bit from the IP messages. This is the default. • Copy—Copy the DF bit to the IP messages. • Set—Enable the DF bit in the IP messages. |
| Copy Outer DSCP | <p>Enable copying of Differentiated Services Code Point (DSCP) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner class-of-service (CoS) rules.</p> |
| Lifetime Seconds | <p>Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds.</p> |
| Lifetime kilobytes | <p>Select the lifetime (in kilobytes) of an IPsec security association (SA). The range is from 64 through 4294967294 kilobytes.</p> |

RELATED DOCUMENTATION

| [IPsec VPN Overview](#) | 981

Create a Hub-and-Spoke Auto Discovery VPN

Before You Begin

- Read the ["IPsec VPN Overview" on page 981](#) topic.
- Review the IPsec VPN main page for an understanding of your current data set. See ["IPsec VPN Main Page Fields" on page 1079](#) for field descriptions.
- Create addresses and address sets. See ["Creating Addresses and Address Groups" on page 1127](#).
- Create VPN profiles. See ["Creating VPN Profiles" on page 1085](#).

The Auto-Discovery VPN (ADVPN) dynamically establishes VPN tunnels between spokes to avoid routing traffic through the hub.

To configure Hub and Spoke ADVPN:

1. Select **Configure > IPsec VPN > IPsec VPNs**.

The IPsec VPNs page is displayed.

2. Click **Create VPN > <Route Based>Hub and Spoke (ADVPN - Auto Discovery VPN)**.

The Create Hub-and-Spoke (ADVPN - Auto Discovery VPN) page is displayed.

3. Complete the VPN configuration parameters according to the guidelines provided in [Table 298 on page 1025](#) through [Table 301 on page 1030](#).



NOTE: Click each hub and spoke icon in the topology to configure the devices. Click **View IKE/IPSec Settings** to view or edit VPN profiles. If the VPN profile is default, you can edit the configurations. If the profile is shared, you can only view the configurations. The VPN connectivity will change from gray to blue line in the topology to show that the configuration is complete.

The topology displayed for hub-and-spoke is only a representation. You can configure any number of hubs and spokes.

4. Click **Save** to save the IPsec VPN configuration.

Figure 71: Create Hub-and-Spoke Auto Discovery VPN

Configure / IPsec VPN / IPsec VPNs

Create Hub and Spoke (ADVPN - Auto Discovery VPN) VPN

Name* Description* Routing Topology* VPN Profile* Authentication Method*

OSPF - Dynamic Routing ADVPNProfileS... RSA-Signatures

Shortcut Connection Limit* Idle Threshold* Idle Time*

Enter a value between 0 to 4294967295 Enter a value between 3 to 5000 Enter a value between 60 to 86400

Global Tunnel settings

Interface Type* Network IP* Max Transmission Unit*

Numbered 192.168.1.0 / 24 1500

Click icons to configure settings

Total Spokes 0 View/Select Devices

Hub Spoke Spoke Spoke

Table 298: IPsec VPN Configuration Parameters

| Settings | Guidelines |
|------------------|---|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores; spaces are not allowed; maximum length is 62 characters. |
| Description | Enter a description for the VPN; maximum length is 255 characters. |
| Routing Topology | <p>Select one of the following options:</p> <ul style="list-style-type: none"> • OSPF-Dynamic Routing—Generates OSPF configuration. • RIP-Dynamic Routing—Generates RIP configuration. • eBGP-Dynamic Routing—Generates eBGP configuration. |
| VPN Profile | <p>Select a VPN profile from the drop-down list based on the deployment scenario.</p> <p>Default profile is applicable to a particular IPsec VPN only. You can view and edit the details by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>Shared profile can be used by one or more IPsec VPNs. You can only view the details of the shared profiles by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>If you select the VPN Profile value as Default, then while saving the IPsec VPN, you'll need to save the new profile as either VPN specific or shared. If you are saving it as shared, then the profile will be listed on the VPN Profiles page.</p> |

Table 298: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|-------------------------------|---|
| Authentication Method | <p>Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages.</p> <ul style="list-style-type: none"> • RSA Signatures—Specifies that a public key algorithm, which supports encryption and digital signatures is used. • DSA Signatures—Specifies that the Digital Signature Algorithm (DSA) is used. • ECDSA-Signatures-256—Specifies that the Elliptic Curve DSA (ECDSA) using the 256-bit elliptic curve secp256r1, as specified in the Federal Information Processing Standard (FIPS) Digital Signature Standard (DSS) 186-3 is used. • ECDSA-Signatures-384—Specifies that the ECDSA using the 384-bit elliptic curve secp384r1, as specified in the FIPS DSS 186-3 is used. |
| Shortcut Connection Limit | <p>Select the maximum number of shortcut tunnels that can be created with different shortcut partners using a particular gateway. The maximum number, which is also the default, is platform-dependent.</p> |
| Idle Threshold | <p>Select the rate, in packets per second, below which the shortcut is brought down.</p> <p>Range: 3 through 5,000 packets per second.</p> |
| Idle Time | <p>Select the duration, in seconds, after which the shortcut is deleted if the traffic remains below the idle-threshold value.</p> <p>Range: 60 seconds through 86,400 seconds.</p> |
| Global Tunnel Settings | |

Table 298: IPsec VPN Configuration Parameters (Continued)

| Settings | Guidelines |
|-----------------------|--|
| Network IP | Enter the IP address of the numbered interface. This is the subnet address from where the IP address is automatically assigned for tunnel interfaces. |
| Max Transmission Unit | Select the maximum transmission unit (MTU) in bytes. This defines the maximum size of an IP packet, including the IPsec overhead. You can specify the MTU value for the tunnel endpoint. The valid range is 68 to 9192 bytes. The default value is 1500 bytes. |

Table 299: View or Select Devices

| Settings | Guidelines |
|-----------|--|
| Hub | Select Devices as hubs. |
| Endpoint | Select Devices as spokes. |
| Available | <p>View all devices from the current and child domains, with view parent enabled. Devices from the child domain with view parent disabled are not shown.</p> <p>Select hub and spoke devices.</p> <p>The following filter criteria are applied for the device selection:</p> <ul style="list-style-type: none"> • SRX Series devices mapped to Junos OS Release 12.1X46 and later Junos-es schemas are not listed. • Logical systems and tenant systems are not listed. • Routing option is not applicable. |

Table 300: Device Configuration Parameters

| Settings | Guidelines |
|--------------------|--|
| External Interface | Select the outgoing interface for IKE security associations (SAs). This interface is associated with a zone that acts as its carrier, providing firewall security for it. |
| Tunnel Zone | Select the tunnel zone. They are logical areas of address space that can support dynamic IP (DIP) address pools for NAT applications to pre- and post-encapsulated IPsec traffic. Tunnel zones also provide great flexibility in combining tunnel interfaces with VPN tunnels. |
| Metric | Specify the cost for an access route for the next hop. |
| Routing instance | Select the required routing instance. |
| Certificate | Select a certificate to authenticate the virtual private network (VPN) initiator and recipient. This is applicable in one of the following scenarios: <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |
| Trusted CA/Group | Select the certificate authority (CA) profile from the list to associate it with the local certificate. This is applicable in one of the following scenarios: <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |
| Container | The hub authenticates the spoke's IKE ID if the subject fields of the spoke's certificate exactly match the values configured on the hub. Multiple entries can be specified for each subject field. The order of values in the fields must match. |
| Wildcard | The hub authenticates the spoke's IKE ID if the subject fields of the spoke's certificate match the values configured on the hub. The wildcard match supports only one value per field. The order of the fields is inconsequential |

Table 300: Device Configuration Parameters (*Continued*)

| Settings | Guidelines |
|-------------------------|--|
| Export | <ul style="list-style-type: none"> • Select the Static Routes check box to export static routes. Security Director simplifies VPN address management by enabling the administrator to export static routes to a remote site over a tunnel, allowing the static route networks to participate in the VPN. However, only devices on the hub side can export static default routes to the device side. Devices at the spoke side cannot export static default routes over a tunnel. NOTE: For eBGP Dynamic Routing, by default, the Static Routes check box is selected. • Select the RIP Routes check box to export RIP routes. NOTE: You can export RIP routes only when Routing Topology is OSPF Dynamic Routing. • Select the OSPF Routes check box to export OSPF routes. NOTE: You can export OSPF routes only when Routing Topology is RIP-Dynamic Routing. <p>If you select OSPF or RIP export, the OSPF or RIP routes outside the VPN network is imported into a VPN network through OSPF or RIP Dynamic routing protocols.</p> |
| OSPF Area | <p>Select an OSPF area ID within the range of 0 to 4,294,967,295, where the tunnel interfaces of this VPN need to be configured.</p> <p>This is applicable when the Routing Topology is OSPF-Dynamic Routing.</p> |
| Max Retransmission Time | <p>Select the retransmission timer to limit the number of times the RIP demand circuit re-sends update messages to an unresponsive peer. If the configured retransmission threshold is reached, routes from the next-hop router are marked as unreachable and the hold-down timer starts. You must configure a pair of RIP demand circuits for this timer to take effect.</p> <p>The retransmission range is from 5 through 180 seconds and the default value is 50 seconds.</p> <p>NOTE: This is applicable only when Routing Topology is RIP-Dynamic Routing.</p> |

Table 300: Device Configuration Parameters (*Continued*)

| Settings | Guidelines |
|--------------------|---|
| AS Number | <p>Select a unique number to assign to the autonomous system (AS). The AS number identifies an autonomous system and enables the system to exchange exterior routing information with other neighboring autonomous systems. The valid range is from 0 through 4294967295.</p> <p>NOTE: This is applicable only when Routing Topology is e-BGP Dynamic Routing.</p> |
| Protected Networks | <p>Configure the addresses or interface type for the selected device to protect one area of the network from the other.</p> <p>When a dynamic routing protocol is selected, the interface option is displayed.</p> <p>NOTE: You can also create addresses by clicking Add New Address.</p> |

Table 301: View or Edit IKE or IPsec Settings

| Settings | Guidelines |
|--------------------------|--|
| IKE Settings | |
| IKE Version | Select the required IKE version, either V1 or V2, that is used to negotiate dynamic security associations (SAs) for IPsec. By default, IKE V2 is used. |
| Mode | <p>Select an IKE policy mode.</p> <ul style="list-style-type: none"> • Main—Uses six messages in three peer-to-peer exchanges to establish the IKE SA. These three steps include the IKE SA negotiation, a Diffie-Hellman exchange, and authentication of the peer. Also provides identity protection. • Aggressive—Takes half the number of messages of main mode, has less negotiation power, and does not provide identity protection. <p>NOTE: Mode is applicable when the IKE Version is V1.</p> |
| Encryption-algorithm | Select the appropriate encryption mechanism. |
| Authentication-algorithm | Select an algorithm. The device uses this algorithm to verify the authenticity and integrity of a packet. |

Table 301: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|------------------------------|--|
| Diffie Hellman group | Select a group. Diffie-Hellman (DH) groups determine the strength of the key used in the key exchange process. |
| Lifetime-seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Dead Peer Detection | Enable to permit the two gateways to determine if the peer gateway is up and responding to the Dead Peer Detection (DPD) messages that are negotiated during IPsec establishment. |
| DPD Mode | <p>Select a DPD Mode.</p> <ul style="list-style-type: none"> Optimized: R-U-THERE messages are triggered if there is no incoming IKE or IPsec traffic within a configured interval after the device sends outgoing packets to the peer. This is the default mode. Probe Idle Tunnel: R-U-THERE messages are triggered if there is no incoming or outgoing IKE or IPsec traffic within a configured interval. R-U-THERE messages are sent periodically to the peer until there is traffic activity. Always-send: R-U-THERE messages are sent at configured intervals regardless of traffic activity between the peers. |
| DPD Interval | Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds. |
| DPD Threshold | Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5. |
| Advance Configuration | |
| General IKE ID | Enable this option to accept peer IKE ID. This option is disabled by default. If General IKE ID is enabled, the IKE ID option is disabled automatically. |

Table 301: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------------------|---|
| IKEv2 Re Authentication | <p>Select a reauthentication frequency. Reauthentication can be disabled by setting the reauthentication frequency to 0.</p> <p>Range is 0 to 100.</p> |
| IKEv2 Re Fragmentation Support | <p>IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level.</p> |
| IKEv2 Re-fragment Size | <p>Select the size of the packet at which messages are fragmented. By default, the size is 576 bytes for IPv4.</p> <p>Range is 570 to 1320.</p> |
| IKE ID | <p>Select an option:</p> <ul style="list-style-type: none"> • None • Distinguished name • Hostname • IPv4 address • E-mail Address <p>IKE ID is applicable only when General IKE ID is disabled.</p> |
| NAT-T | <p>Enable Network Address Translation-Traversal (NAT-T) if the dynamic endpoint is behind a NAT device.</p> |
| Keep Alive | <p>Select a value. NAT Keepalives are required to maintain the NAT translation during the connection between the VPN peers. Range is from 1 to 300 seconds.</p> |
| IPSec Settings | |

Table 301: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|------------------------------|--|
| Protocol | <p>Select the required protocol to establish the VPN.</p> <ul style="list-style-type: none"> • ESP—The Encapsulating Security Payload (ESP) protocol provides both encryption and authentication. • AH—The Authentication Header (AH) protocol provides data integrity and data authentication. |
| Encryption Algorithm | <p>Select the necessary encryption method.</p> <p>This is applicable if the Protocol is ESP.</p> |
| Authentication Algorithm | <p>Select an algorithm. The device uses these algorithms to verify the authenticity and integrity of a packet.</p> |
| Perfect Forward Secrecy | <p>Select Perfect Forward Secrecy (PFS) as the method that the device uses to generate the encryption key. The PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security but require more processing time.</p> |
| Establish Tunnel | <p>Select an option to specify when IKE is activated.</p> <ul style="list-style-type: none"> • Immediately—IKE is activated immediately after VPN configuration changes are committed. • On-traffic—IKE is activated only when data traffic flows and must be negotiated with the peer gateway. This is the default behavior. |
| Advance Configuration | |
| VPN Monitor | <p>Enable this option to send Internet Control Message Protocol (ICMP) to determine if the VPN is up.</p> |
| Optimized | <p>When VPN monitoring optimization is enabled, the SRX Series device only sends ICMP echo requests (pings) when there is outgoing traffic and no incoming traffic from the configured peer, through the VPN tunnel. If there is incoming traffic through the VPN tunnel, the SRX Series device considers the tunnel to be active and does not send pings to the peer.</p> |

Table 301: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------|--|
| Anti Replay | By default, Anti-Replay detection is enabled. IPsec protects against a VPN attack by using a sequence of numbers that are built into the IPsec packet—the system does not accept a packet for which it has already seen the same sequence number. It checks the sequence numbers and enforces the check, rather than just ignoring the sequence numbers. Disable it if there is an error with the IPsec mechanism that results in out-of-order packets, preventing proper functionality. |
| Install interval | Select the maximum number of seconds to allow for the installation of a re-keyed outbound security association (SA) on the device. |
| Idle Time | Select the appropriate idle time interval. The sessions and their corresponding translations typically time out after a certain period if no traffic is received. |
| DF Bit | <p>Select an option to process the Don't Fragment (DF) bit in IP messages.</p> <ul style="list-style-type: none"> • Clear—Disable the DF bit from the IP messages. This is the default. • Copy—Copy the DF bit to the IP messages. • Set—Enable the DF bit in the IP messages. |
| Copy Outer DSCP | Enable copying of Differentiated Services Code Point (DSCP) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner class-of-service (CoS) rules. |
| Lifetime Seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Lifetime kilobytes | Select the lifetime (in kilobytes) of an IPsec security association (SA). The range is from 64 through 4294967294 kilobytes. |

RELATED DOCUMENTATION
[IPsec VPN Overview](#) | 981

Create a Full Mesh VPN

Before You Begin

- Read the ["IPsec VPN Overview" on page 981](#) topic.
- Review the IPsec VPN main page for an understanding of your current data set. See ["IPsec VPN Main Page Fields" on page 1079](#) for field descriptions.
- Create addresses and address sets. See ["Creating Addresses and Address Groups" on page 1127](#).
- Create VPN profiles. See ["Creating VPN Profiles" on page 1085](#).
- Define extranet devices. See ["Creating Extranet Devices" on page 1081](#).

A full mesh VPN connects two or more participating gateways and sets up a separate tunnel with every other device in the group.

To configure a full mesh VPN:

1. Select **Configure > IPsec VPN > IPsec VPNs**.

The IPsec VPNs page is displayed.

2. Click **Create VPN > <Route Based>Full Mesh VPN**.

The Create Full Mesh VPN page is displayed.

3. Complete the VPN configuration parameters according to the guidelines provided in [Table 302 on page 1036](#) through [Table 305 on page 1042](#).



NOTE: Click a node in the topology to configure the devices. Click **View IKE/IPSec Settings** to view or edit VPN profiles. If the VPN profile is default, you can edit the configurations. If the profile is shared, you can only view the configurations.

The VPN connectivity will change from gray to blue line in the topology to show that the configuration is complete.

The topology displayed for full mesh is only a representation. Maximum of six nodes are displayed in the topology. You can configure any number of nodes.

4. Click **Save** to save the IPsec VPN configuration.

Table 302: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------|---|
| Routing Topology | <p>Select one of the following options:</p> <ul style="list-style-type: none"> • Traffic Selector (Auto Route Insertion)—A traffic selector is an agreement between Internet Key Exchange (IKE) peers to permit traffic through a tunnel if the traffic matches a specified pair of local and remote addresses. • Static routing—Generates static routing based on the protected networks or zones per device. • OSPF-Dynamic Routing—Generates OSPF configuration. • RIP-Dynamic Routing—Generates RIP configuration. |
| VPN Profile | <p>Select a VPN profile from the drop-down list based on the deployment scenario.</p> <p>Default profile is applicable to a particular IPsec VPN only. You can view and edit the details by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>Shared profile can be used by one or more IPsec VPNs. You can only view the details of the shared profiles by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>If you select the VPN Profile value as Default, then while saving the IPsec VPN, you'll need to save the new profile as either VPN specific or shared. If you are saving it as shared, then the profile will be listed on the VPN Profiles page.</p> |

Table 302: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------------|--|
| Authentication Method | <p>Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages.</p> <ul style="list-style-type: none"> • Pre-shared based—Specifies that a pre-shared key, which is a secret key shared between the two peers, is used during authentication to identify the peers to each other. The same key must be configured for each peer. • RSA Signatures—Specifies that a public key algorithm, which supports encryption and digital signatures is used. • DSA Signatures—Specifies that the Digital Signature Algorithm (DSA) is used. • ECDSA-Signatures-256—Specifies that the Elliptic Curve DSA (ECDSA) using the 256-bit elliptic curve secp256r1, as specified in the Federal Information Processing Standard (FIPS) Digital Signature Standard (DSS) 186-3 is used. • ECDSA-Signatures-384—Specifies that the ECDSA using the 384-bit elliptic curve secp384r1, as specified in the FIPS DSS 186-3 is used. |
| Global Tunnel Settings | |

Table 302: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|-----------------------|---|
| Pre-shared Key | <p>Establish a VPN connection using pre-shared keys, which is essentially a password that is same for both parties.</p> <p>Select the type of pre-shared key you want to use:</p> <ul style="list-style-type: none"> • Autogenerate—Select if you want to automatically generate a unique key per tunnel. When selected, the Generate Unique key per tunnel is automatically enabled. If you disable Generate Unique key per tunnel, Security Director generates a single key for all tunnels. • Manual—Select to enter the key manually. By default, the manual key is masked. <p>NOTE: This is applicable only if the authentication method is Pre-shared based.</p> |
| Network IP | Enter the IP address of the numbered interface. This is the subnet address from where the IP address is automatically assigned for tunnel interfaces. |
| Max Transmission Unit | Select the maximum transmission unit (MTU) in bytes. This defines the maximum size of an IP packet, including the IPsec overhead. You can specify the MTU value for the tunnel endpoint. The valid range is 68 to 9192 bytes. The default value is 1500 bytes. |

Table 303: View or Select Devices

| Settings | Guidelines |
|----------|---|
| Endpoint | <p>Select either Devices or Extranet devices as endpoints.</p> <p>NOTE: To add extranet devices inline, click Add Extranet Devices.</p> |

Table 303: View or Select Devices (Continued)

| Settings | Guidelines |
|-----------|--|
| Available | <p>View all devices from the current and child domains, with view parent enabled. Devices from the child domain with view parent disabled are not shown.</p> <p>Select devices to add as endpoints.</p> <p>The following filter criteria are applied for the device selection:</p> <ul style="list-style-type: none"> • SRX Series devices mapped to Junos OS Release 12.1X46 and later Junos-es schemas are not listed. • Logical systems and tenant systems are not listed. • Routing option is not applicable. |

Table 304: Device Configuration Parameters

| Settings | Guidelines |
|--------------------|---|
| External Interface | Select the outgoing interface for IKE security associations (SAs). This interface is associated with a zone that acts as its carrier, providing firewall security for it. |
| Tunnel Zone | <p>Select the tunnel zone. They are logical areas of address space that can support dynamic IP (DIP) address pools for NAT applications to pre- and post-encapsulated IPsec traffic.</p> <p>Tunnel zones also provide great flexibility in combining tunnel interfaces with VPN tunnels.</p> |
| Metric | Specify the cost for an access route for the next hop. |
| Routing instance | Select the required routing instance. |
| Certificate | <p>Select a certificate to authenticate the virtual private network (VPN) initiator and recipient.</p> <p>This is applicable in one of the following scenarios:</p> <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |

Table 304: Device Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------|--|
| Trusted CA/Group | <p>Select the certificate authority (CA) profile from the list to associate it with the local certificate.</p> <p>This is applicable in one of the following scenarios:</p> <ul style="list-style-type: none"> • The VPN profile is RSA profile or ADVPN profile. • The authentication method is RSA-Signatures, DSA-Signatures, ECDSA-Signatures-256, or ECDSA-Signatures-384. |
| Export | <ul style="list-style-type: none"> • Select the Static Routes check box to export static routes. <p>Security Director simplifies VPN address management by enabling the administrator to export static routes to a remote site over a tunnel, allowing the static route networks to participate in the VPN. However, only devices on the hub side can export static default routes to the device side. Devices at the spoke side cannot export static default routes over a tunnel.</p> <p>NOTE: For eBGP Dynamic Routing, by default, the Static Routes check box is selected.</p> <ul style="list-style-type: none"> • Select the RIP Routes check box to export RIP routes. <p>NOTE: You can export RIP routes only when Routing Topology is OSPF Dynamic Routing.</p> <ul style="list-style-type: none"> • Select the OSPF Routes check box to export OSPF routes. <p>NOTE: You can export OSPF routes only when Routing Topology is RIP-Dynamic Routing.</p> <p>If you select OSPF or RIP export, the OSPF or RIP routes outside the VPN network is imported into a VPN network through OSPF or RIP Dynamic routing protocols.</p> |
| OSPF Area | <p>Select an OSPF area ID within the range of 0 to 4,294,967,295, where the tunnel interfaces of this VPN need to be configured.</p> <p>This is applicable when the Routing Topology is OSPF-Dynamic Routing.</p> |

Table 304: Device Configuration Parameters *(Continued)*

| Settings | Guidelines |
|-------------------------|--|
| Max Retransmission Time | <p>Select the retransmission timer to limit the number of times the RIP demand circuit re-sends update messages to an unresponsive peer. If the configured retransmission threshold is reached, routes from the next-hop router are marked as unreachable and the hold-down timer starts. You must configure a pair of RIP demand circuits for this timer to take effect.</p> <p>The retransmission range is from 5 through 180 seconds and the default value is 50 seconds.</p> <p>NOTE: This is applicable only when Routing Topology is RIP-Dynamic Routing.</p> |
| Protected Networks | <p>Configure the addresses or interface type for the selected device to protect one area of the network from the other.</p> <p>When a dynamic routing protocol is selected, the interface option is displayed.</p> <p>NOTE: You can also create addresses by clicking Add New Address.</p> |

Table 305: View or Edit IKE or IPsec Settings

| Settings | Guidelines |
|----------------------|--|
| IKE Settings | |
| IKE Version | Select the required IKE version, either V1 or V2, that is used to negotiate dynamic security associations (SAs) for IPsec. By default, IKE V2 is used. |
| Mode | <p>Select an IKE policy mode.</p> <ul style="list-style-type: none"> • Main—Uses six messages in three peer-to-peer exchanges to establish the IKE SA. These three steps include the IKE SA negotiation, a Diffie-Hellman exchange, and authentication of the peer. Also provides identity protection. • Aggressive—Takes half the number of messages of main mode, has less negotiation power, and does not provide identity protection. <p>NOTE: Mode is applicable when the IKE Version is V1.</p> |
| Encryption-algorithm | Select the appropriate encryption mechanism. |

Table 305: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|------------------------------|--|
| Authentication-algorithm | Select an algorithm. The device uses this algorithm to verify the authenticity and integrity of a packet. |
| Diffie Hellman group | Select a group. Diffie-Hellman (DH) groups determine the strength of the key used in the key exchange process. |
| Lifetime-seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Dead Peer Detection | Enable to permit the two gateways to determine if the peer gateway is up and responding to the Dead Peer Detection (DPD) messages that are negotiated during IPsec establishment. |
| DPD Mode | <p>Select a DPD Mode.</p> <ul style="list-style-type: none"> Optimized: R-U-THERE messages are triggered if there is no incoming IKE or IPsec traffic within a configured interval after the device sends outgoing packets to the peer. This is the default mode. Probe Idle Tunnel: R-U-THERE messages are triggered if there is no incoming or outgoing IKE or IPsec traffic within a configured interval. R-U-THERE messages are sent periodically to the peer until there is traffic activity. Always-send: R-U-THERE messages are sent at configured intervals regardless of traffic activity between the peers. |
| DPD Interval | Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds. |
| DPD Threshold | Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5. |
| Advance Configuration | |

Table 305: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------------------|--|
| General IKE ID | Enable this option to accept peer IKE ID. This option is disabled by default. If General IKE ID is enabled, the IKE ID option is disabled automatically. |
| IKEv2 Re Authentication | Select a reauthentication frequency. Reauthentication can be disabled by setting the reauthentication frequency to 0. Range is 0 to 100. |
| IKEv2 Re Fragmentation Support | IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level. |
| IKEv2 Re-fragment Size | Select the size of the packet at which messages are fragmented. By default, the size is 576 bytes for IPv4. Range is 570 to 1320. |
| IKE ID | Select an option: <ul style="list-style-type: none"> • None • Distinguished name • Hostname • IPv4 address • E-mail Address <p>IKE ID is applicable only when General IKE ID is disabled.</p> |
| NAT-T | Enable Network Address Translation-Traversal (NAT-T) if the dynamic endpoint is behind a NAT device. |
| Keep Alive | Select a value. NAT Keepalives are required to maintain the NAT translation during the connection between the VPN peers. Range is from 1 to 300 seconds. |
| IPSec Settings | |

Table 305: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|------------------------------|--|
| Protocol | <p>Select the required protocol to establish the VPN.</p> <ul style="list-style-type: none"> • ESP—The Encapsulating Security Payload (ESP) protocol provides both encryption and authentication. • AH—The Authentication Header (AH) protocol provides data integrity and data authentication. |
| Encryption Algorithm | <p>Select the necessary encryption method.</p> <p>This is applicable if the Protocol is ESP.</p> |
| Authentication Algorithm | <p>Select an algorithm. The device uses these algorithms to verify the authenticity and integrity of a packet.</p> |
| Perfect Forward Secrecy | <p>Select Perfect Forward Secrecy (PFS) as the method that the device uses to generate the encryption key. The PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security but require more processing time.</p> |
| Establish Tunnel | <p>Select an option to specify when IKE is activated.</p> <ul style="list-style-type: none"> • Immediately—IKE is activated immediately after VPN configuration changes are committed. • On-traffic—IKE is activated only when data traffic flows and must be negotiated with the peer gateway. This is the default behavior. |
| Advance Configuration | |
| VPN Monitor | <p>Enable this option to send Internet Control Message Protocol (ICMP) to determine if the VPN is up.</p> |
| Optimized | <p>When VPN monitoring optimization is enabled, the SRX Series device only sends ICMP echo requests (pings) when there is outgoing traffic and no incoming traffic from the configured peer, through the VPN tunnel. If there is incoming traffic through the VPN tunnel, the SRX Series device considers the tunnel to be active and does not send pings to the peer.</p> |

Table 305: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------|--|
| Anti Replay | By default, Anti-Replay detection is enabled. IPsec protects against a VPN attack by using a sequence of numbers that are built into the IPsec packet—the system does not accept a packet for which it has already seen the same sequence number. It checks the sequence numbers and enforces the check, rather than just ignoring the sequence numbers. Disable it if there is an error with the IPsec mechanism that results in out-of-order packets, preventing proper functionality. |
| Install interval | Select the maximum number of seconds to allow for the installation of a re-keyed outbound security association (SA) on the device. |
| Idle Time | Select the appropriate idle time interval. The sessions and their corresponding translations typically time out after a certain period if no traffic is received. |
| DF Bit | <p>Select an option to process the Don't Fragment (DF) bit in IP messages.</p> <ul style="list-style-type: none"> • Clear—Disable the DF bit from the IP messages. This is the default. • Copy—Copy the DF bit to the IP messages. • Set—Enable the DF bit in the IP messages. |
| Copy Outer DSCP | Enable copying of Differentiated Services Code Point (DSCP) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner class-of-service (CoS) rules. |
| Lifetime Seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Lifetime kilobytes | Select the lifetime (in kilobytes) of an IPsec security association (SA). The range is from 64 through 4294967294 kilobytes. |

RELATED DOCUMENTATION

[IPsec VPN Overview](#) | 981

Create a Remote Access VPN—Juniper Secure Connect

Before You Begin

- Read the ["IPsec VPN Overview" on page 981](#) topic.
- Review the IPsec VPN main page for an understanding of your current data set. See ["IPsec VPN Main Page Fields" on page 1079](#) for field descriptions.
- Create addresses and address sets. See ["Creating Addresses and Address Groups" on page 1127](#).
- Create VPN profiles. See ["Creating VPN Profiles" on page 1085](#).
- Define extranet devices. See ["Creating Extranet Devices" on page 1081](#).

Juniper Secure Connect is Juniper's client-based SSL-VPN solution that offers secure remote access for your network resources. Juniper Secure Connect downloads the configuration from SRX Services devices and chooses the most effective transport protocols during connection establishment.

To configure a remote access Juniper secure connect:

1. Select **Configure > IPsec VPN > IPsec VPNs**.

The IPsec VPNs page is displayed.

2. Click **Create VPN > <Route Based> Remote Access Juniper Secure Connect**.

The Create Remote Access (Juniper Secure Connect) page is displayed.

3. Complete the IPsec VPN configuration parameters according to the guidelines provided in [Table 306 on page 1048](#) through [Table 310 on page 1054](#).



NOTE: Click the remote user and local gateway icons to configure remote user and local gateway. Click **View IKE/IPsec Settings** to view or edit VPN profiles. If the VPN profile is default, you can edit the configurations. If the profile is shared, you can only view the configurations.

The VPN connectivity will change from gray to blue line in the topology to show that the configuration is complete.

The topology displayed is only for representation.

4. Click **Save** to save the IPsec configuration.

Figure 73: Create Remote Access Juniper Secure Connect

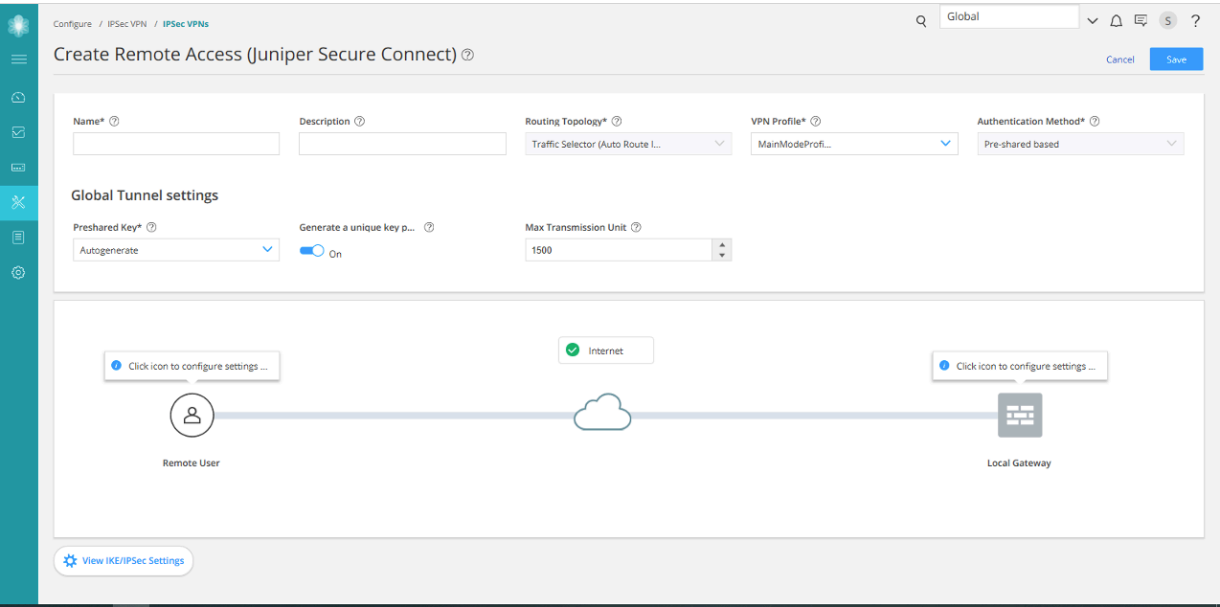


Table 306: IPsec VPN Configuration Parameters

| Settings | Guidelines |
|------------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores; spaces are not allowed; maximum length is 62 characters. |
| Description | Enter a description for the VPN; maximum length is 255 characters. |
| Routing Topology | Traffic Selector (Auto Route Insertion)—A traffic selector is an agreement between Internet Key Exchange (IKE) peers to permit traffic through a tunnel if the traffic matches a specified pair of local and remote addresses. |

Table 306: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------------|---|
| VPN Profile | <p>Select a VPN profile from the drop-down list based on the deployment scenario.</p> <p>Default profile is applicable to a particular IPsec VPN only. You can view and edit the details by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>Shared profile can be used by one or more IPsec VPNs. You can only view the details of the shared profiles by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>If you select the VPN Profile value as Default, then while saving the IPsec VPN, you'll need to save the new profile as either VPN specific or shared. If you are saving it as shared, then the profile will be listed on the VPN Profiles page.</p> |
| Authentication Method | <p>Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages.</p> <ul style="list-style-type: none"> • Pre-shared based—Specifies that a pre-shared key, which is a secret key shared between the two peers, is used during authentication to identify the peers to each other. The same key must be configured for each peer. • RSA Signatures—Specifies that a public key algorithm, which supports encryption and digital signatures is used. |
| Global Tunnel Settings | |

Table 306: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|-----------------------|---|
| Pre-shared Key | <p>Establish a VPN connection using pre-shared keys, which is essentially a password that is same for both parties.</p> <p>Select the type of pre-shared key you want to use:</p> <ul style="list-style-type: none"> • Autogenerate—Select if you want to automatically generate a unique key per tunnel. When selected, the Generate Unique key per tunnel option is automatically enabled. If you disable the Generate Unique key per tunnel option, Security Director generates a single key for all tunnels. • Manual—Select to enter the key manually. By default, the manual key is masked. <p>NOTE: This is applicable only if the authentication method is pre-shared-based.</p> |
| Max Transmission Unit | <p>Select the maximum transmission unit (MTU) in bytes. This defines the maximum size of an IP packet, including the IPsec overhead. You can specify the MTU value for the tunnel endpoint. The valid range is 68 to 9192 bytes. The default value is 1500 bytes.</p> |

Table 307: View or Select Devices

| Settings | Guidelines |
|----------|---|
| Endpoint | Select a device to add it as an endpoint. |

Table 307: View or Select Devices *(Continued)*

| Settings | Guidelines |
|-----------|---|
| Available | <p>View all devices from the current and child domains, with view parent enabled. Devices from the child domain with view parent disabled are not shown.</p> <p>Select a device and add it as an endpoint.</p> <p>The following filter criteria are applied for the device selection:</p> <ul style="list-style-type: none"> • SRX Series devices mapped to Junos OS Release 12.1X46 and later Junos-es schemas are not listed. • Logical systems and tenant systems are not listed. • Routing option is not applicable. |

Table 308: Remote User Settings

| Settings | Guidelines |
|-----------------|---|
| Default Profile | <p>Enable this option to use the configured VPN name as remote access default profile.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • This option is not available if the default profile is configured. • You must enable the default profile. If not enabled, configure the default profile under VPN > IPsec VPN > Global Settings > Remote Access VPN. |
| Connection Mode | <p>Select one of the following options from the list to establish the Juniper Secure Connect client connection:</p> <ul style="list-style-type: none"> • Manual—You need to manually connect to the VPN tunnel every time you log in. • Always—You are automatically connected to the VPN tunnel every time you log in. <p>The default connection mode is Manual.</p> |

Table 308: Remote User Settings (Continued)

| Settings | Guidelines |
|--------------------------|---|
| SSL VPN | <p>Enable this option to establish SSL VPN connection from the Juniper Secure Connect Client to the SRX Series device.</p> <p>By default this option is enabled.</p> <p>NOTE: This is a fallback option when IPsec ports are not reachable.</p> |
| Biometric Authentication | <p>Enable this option to authenticate the client system using unique configured methods.</p> <p>An authentication prompt is displayed when you connect in the client system. The VPN connection will only be initiated after successful authentication through the method configured for Windows Hello (fingerprint recognition, face recognition, PIN entry, and so on).</p> <p>Windows Hello must be preconfigured on the client system if the Biometric authentication option is enabled.</p> |
| Dead Peer Detection | <p>Enable this option to allow the Juniper Secure Connect client to detect if the SRX Series device is reachable.</p> <p>Disable this option to allow the Juniper Secure Connect client to detect till the SRX Series device connection reachability is restored.</p> <p>This option is enabled by default.</p> <p>DPD Interval—Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds.</p> <p>DPD Threshold—Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5.</p> |
| Window logon | <p>Enable this option to provide users to securely log on to the Windows domain before logging on to the Windows system. The client supports domain logon using a credential service provider after establishing a VPN connection to the company network.</p> |

Table 309: Local Gateway Configuration Parameters

| Settings | Guidelines |
|---------------------|--|
| External Interface | Select the outgoing interface for IKE security associations (SAs). This interface is associated with a zone that acts as its carrier, providing firewall security for it. |
| Tunnel Zone | <p>Select the tunnel zone. They are logical areas of address space that can support dynamic IP (DIP) address pools for NAT applications to pre- and post-encapsulated IPsec traffic.</p> <p>Tunnel zones also provide great flexibility in combining tunnel interfaces with VPN tunnels.</p> |
| User Authentication | <p>Select the authentication profile from the list that will be used to authenticate a user accessing the remote access VPN.</p> <p>Click Add to create a new access profile. For more information on creating a new access profile, see "Creating Access Profiles" on page 676.</p> <p>NOTE: LDAP authentication is not supported in a remote VPN.</p> |
| SSL VPN Profile | <p>Select a SSL VPN profile from the list to terminate the remote access connection.</p> <p>To create a new SSL VPN profile:</p> <ol style="list-style-type: none"> 1. Click Add. <p>The Add SSL VPN Profile page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the SSL VPN profile name. 3. Enable Logging option to log for SSL VPN. 4. Enter a SSL termination profile name. 5. Select a server certificate. 6. Click OK. |
| NAT Traffic | <p>Enable this option so that all traffic from the Juniper Secure Connect client is NATed to the selected interface by default.</p> <p>If disabled, you must ensure that you have a route from your network pointing to the SRX Series devices for handling the return traffic correctly.</p> |

Table 309: Local Gateway Configuration Parameters (Continued)

| Settings | Guidelines |
|--------------------|--|
| Certificate | Select a certificate to authenticate the virtual private network (VPN) initiator and recipient. |
| Trusted CA/Group | Select the certificate authority (CA) profile from the list to associate it with the local certificate. This is applicable when authentication method is RSA-Signatures. |
| Protected Networks | Configure the addresses type for the selected device to protect one area of the network from the other. NOTE: You can also create addresses by clicking Add New Address . |

Table 310: View or Edit IKE or IPsec Settings

| Settings | Guidelines |
|--------------------------|---|
| IKE Settings | |
| Encryption-algorithm | Select the appropriate encryption mechanism. |
| Authentication-algorithm | Select an algorithm. The device uses this algorithm to verify the authenticity and integrity of a packet. |
| Diffie Hellman group | Select a group. Diffie-Hellman (DH) groups determine the strength of the key used in the key exchange process. |
| Lifetime-seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Dead Peer Detection | Enable to permit the two gateways to determine if the peer gateway is up and responding to the Dead Peer Detection (DPD) messages that are negotiated during IPsec establishment. |

Table 310: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------------------|--|
| DPD Mode | <p>Select a DPD Mode.</p> <ul style="list-style-type: none"> Optimized: R-U-THERE messages are triggered if there is no incoming IKE or IPsec traffic within a configured interval after the device sends outgoing packets to the peer. This is the default mode. Probe Idle Tunnel: R-U-THERE messages are triggered if there is no incoming or outgoing IKE or IPsec traffic within a configured interval. R-U-THERE messages are sent periodically to the peer until there is traffic activity. Always-send: R-U-THERE messages are sent at configured intervals regardless of traffic activity between the peers. |
| DPD Interval | Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds. |
| DPD Threshold | Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5. |
| Advance Configuration | |
| IKEv2 Re-Fragmentation Support | This option is enabled, by default. IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level. |
| IKEv2 Re-fragment Size | <p>Select the size of the packet at which messages are fragmented. By default, the size is 576 bytes for IPv4.</p> <p>Range is 570 to 1320.</p> |
| NAT-T | Enable Network Address Translation-Traversal (NAT-T) if the dynamic endpoint is behind a NAT device. |
| Keep Alive | Select a value. NAT Keepalives are required to maintain the NAT translation during the connection between the VPN peers. Range is from 1 to 300 seconds. |

Table 310: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|------------------------------|--|
| IKE Connection Limit | Select the number of concurrent connections that the VPN profile supports. When the maximum number of connections is reached, no more Remote Access User (VPN) endpoints attempting to access an IPsec VPN can begin Internet Key Exchange (IKE) negotiations. |
| IPSec Settings | |
| Encryption Algorithm | Select the necessary encryption method. This is applicable if the Protocol is ESP. |
| Authentication Algorithm | Select an algorithm. The device uses these algorithms to verify the authenticity and integrity of a packet. |
| Perfect Forward Secrecy | Select Perfect Forward Secrecy (PFS) as the method that the device uses to generate the encryption key. The PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security but require more processing time. |
| Advance Configuration | |
| VPN Monitor | Enable this option to send Internet Control Message Protocol (ICMP) to determine if the VPN is up. |
| Optimized | When VPN monitoring optimization is enabled, the SRX Series device only sends ICMP echo requests (pings) when there is outgoing traffic and no incoming traffic from the configured peer, through the VPN tunnel. If there is incoming traffic through the VPN tunnel, the SRX Series device considers the tunnel to be active and does not send pings to the peer. |
| Anti Replay | By default, Anti-Replay detection is enabled. IPsec protects against a VPN attack by using a sequence of numbers that are built into the IPsec packet—the system does not accept a packet for which it has already seen the same sequence number. It checks the sequence numbers and enforces the check, rather than just ignoring the sequence numbers. Disable it if there is an error with the IPsec mechanism that results in out-of-order packets, preventing proper functionality. |

Table 310: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------|--|
| Install interval | Select the maximum number of seconds to allow for the installation of a re-keyed outbound security association (SA) on the device. |
| Idle Time | Select the appropriate idle time interval. The sessions and their corresponding translations typically time out after a certain period if no traffic is received. |
| DF Bit | <p>Select an option to process the Don't Fragment (DF) bit in IP messages.</p> <ul style="list-style-type: none"> • Clear—Disable the DF bit from the IP messages. This is the default. • Copy—Copy the DF bit to the IP messages. • Set—Enable the DF bit in the IP messages. |
| Copy Outer DSCP | Enable copying of Differentiated Services Code Point (DSCP) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner class-of-service (CoS) rules. |
| Lifetime Seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Lifetime kilobytes | Select the lifetime (in kilobytes) of an IPsec security association (SA). The range is from 64 through 4294967294 kilobytes. |

RELATED DOCUMENTATION
[IPsec VPN Overview | 981](#)
[IPsec VPN Global Settings | 1067](#)
Create a Remote Access VPN—NCP Exclusive Client**Before You Begin**

- Read the ["IPsec VPN Overview" on page 981](#) topic.
- Review the IPsec VPN main page for an understanding of your current data set. See ["IPsec VPN Main Page Fields" on page 1079](#) for field descriptions.
- Create addresses and address sets. See ["Creating Addresses and Address Groups" on page 1127](#).
- Create VPN profiles. See ["Creating VPN Profiles" on page 1085](#).
- Define extranet devices. See ["Creating Extranet Devices" on page 1081](#).

The Network Control Protocol (NCP) Exclusive Remote Access Client is part of the NCP Exclusive Remote Access solution for Juniper SRX Series Gateways. The VPN client is only available with NCP Exclusive Remote Access Management. Use the NCP Exclusive Client to establish secure, IPsec-based data links from any location when connected with SRX Series Gateways.

To configure a remote access NCP exclusive client:

1. Select **Configure > IPsec VPN > IPsec VPNs**.

The IPsec VPNs page is displayed.

2. Click **Create VPN > <Route Based> Remote Access NCP Exclusive Client**.

The Create Remote Access (NCP Exclusive Client) page is displayed.

3. Complete the IPsec VPN configuration parameters according to the guidelines provided in [Table 311 on page 1059](#) through [Table 314 on page 1064](#).



NOTE: Click Local Gateway icon in the topology to configure a local gateway. Click **View IKE/IPsec Settings** to view or edit VPN profiles. If the VPN profile is default, you can edit the configurations. If the profile is shared, you can only view the configurations. The VPN connectivity will change from gray to blue line in the topology to show that the configuration is complete.

The topology displayed is only for representation.

4. Click **Save** to save the IPsec configuration.

Figure 74: Create Remote Access NCP Exclusive Client

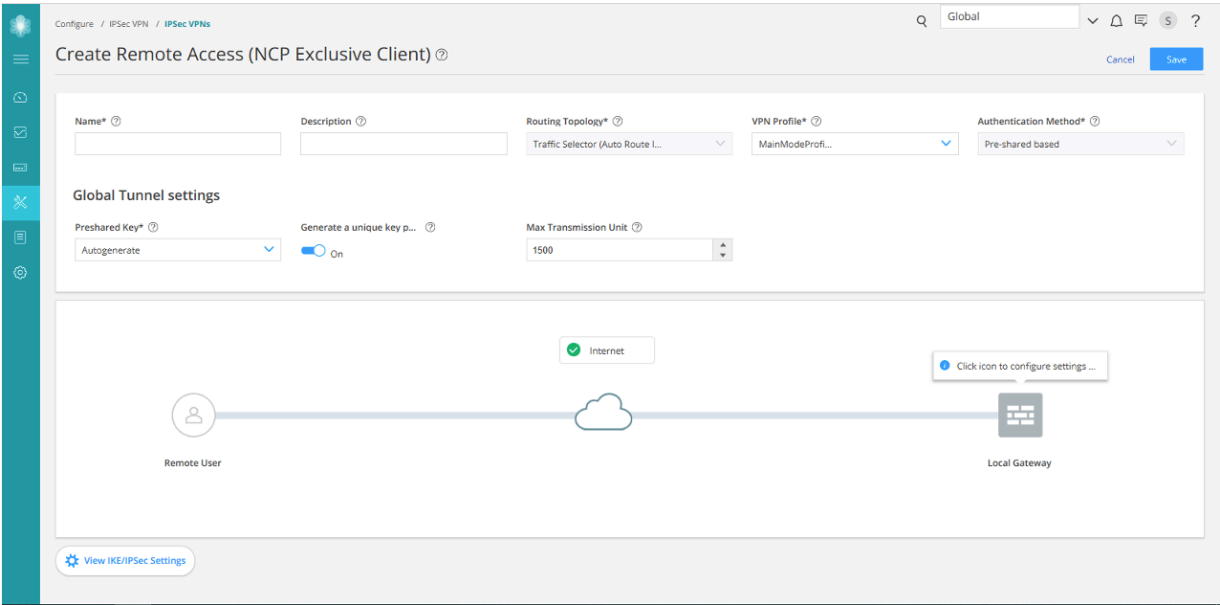


Table 311: IPsec VPN Configuration Parameters

| Settings | Guidelines |
|------------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores; spaces are not allowed; maximum length is 62 characters. |
| Description | Enter a description for the VPN; maximum length is 255 characters. |
| Routing Topology | Traffic Selector (Auto Route Insertion)—A traffic selector is an agreement between Internet Key Exchange (IKE) peers to permit traffic through a tunnel if the traffic matches a specified pair of local and remote addresses. |

Table 311: IPsec VPN Configuration Parameters *(Continued)*

| Settings | Guidelines |
|------------------------|---|
| VPN Profile | <p>Select a VPN profile from the drop-down list based on the deployment scenario.</p> <p>Default profile is applicable to a particular IPsec VPN only. You can view and edit the details by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>Shared profile can be used by one or more IPsec VPNs. You can only view the details of the shared profiles by clicking View IKE/IPsec settings on the Create IPsec VPN page.</p> <p>If you select the VPN Profile value as Default, then while saving the IPsec VPN, you'll need to save the new profile as either VPN specific or shared. If you are saving it as shared, then the profile will be listed on the VPN Profiles page.</p> |
| Authentication Method | <p>Select an authentication method from the list that the device uses to authenticate the source of Internet Key Exchange (IKE) messages.</p> <ul style="list-style-type: none"> • Pre-shared based—Specifies that a pre-shared key, which is a secret key shared between the two peers, is used during authentication to identify the peers to each other. The same key must be configured for each peer. • RSA Signatures—Specifies that a public key algorithm, which supports encryption and digital signatures is used. |
| Global Tunnel Settings | |

Table 311: IPsec VPN Configuration Parameters (Continued)

| Settings | Guidelines |
|-----------------------|--|
| Pre-shared Key | <p>Establish a VPN connection using preshared keys, which is essentially a password that is same for both parties.</p> <p>Select the type of pre-shared key you want to use:</p> <ul style="list-style-type: none"> • Autogenerate—Select if you want to automatically generate a unique key per tunnel. When selected, the Generate Unique key per tunnel option is automatically enabled. If you disable the Generate Unique key per tunnel option, Security Director generates a single key for all tunnels. • Manual—Select to enter the key manually. By default, the manual key is masked. <p>NOTE: This is applicable only if the authentication method is pre-shared-based.</p> |
| Max Transmission Unit | <p>Select the maximum transmission unit (MTU) in bytes. This defines the maximum size of an IP packet, including the IPsec overhead. You can specify the MTU value for the tunnel endpoint. The valid range is 68 to 9192 bytes. The default value is 1500 bytes.</p> |

Table 312: View or Select Devices

| Settings | Guidelines |
|----------|---|
| Endpoint | Select a device to add it as an endpoint. |

Table 312: View or Select Devices *(Continued)*

| Settings | Guidelines |
|-----------|---|
| Available | <p>View all devices from the current and child domains, with view parent enabled. Devices from the child domain with view parent disabled are not shown.</p> <p>Select a device and add it as an endpoint.</p> <p>The following filter criteria are applied for the device selection:</p> <ul style="list-style-type: none"> • SRX Series devices mapped to Junos OS Release 12.1X46 and later Junos-es schemas are not listed. • Logical systems and tenant systems are not listed. • Routing option is not applicable. |

Table 313: Local Gateway Configuration Parameters

| Settings | Guidelines |
|---------------------|--|
| External Interface | Select the outgoing interface for IKE security associations (SAs). This interface is associated with a zone that acts as its carrier, providing firewall security for it. |
| Tunnel Zone | <p>Select the tunnel zone. They are logical areas of address space that can support dynamic IP (DIP) address pools for NAT applications to pre and post-encapsulated IPsec traffic.</p> <p>Tunnel zones also provide great flexibility in combining tunnel interfaces with VPN tunnels.</p> |
| User Authentication | <p>Select the authentication profile from the list that will be used to authenticate a user accessing the remote access VPN.</p> <p>Click Add to create a new access profile. For more information on creating a new access profile, see "Creating Access Profiles" on page 676.</p> <p>NOTE: LDAP authentication is not supported in a remote VPN.</p> |

Table 313: Local Gateway Configuration Parameters (*Continued*)

| Settings | Guidelines |
|--------------------|--|
| SSL VPN Profile | <p>Select a SSL VPN profile from the list to terminate the remote access connection.</p> <p>To create a new SSL VPN profile:</p> <ol style="list-style-type: none"> 1. Click Add. <p>The Add SSL VPN Profile page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the SSL VPN profile name. 3. Enable Logging option to log for SSL VPN. 4. Enter a SSL termination profile name. 5. Select a server certificate. 6. Click OK. |
| NAT Traffic | <p>Enable this option so that all traffic from the Juniper Secure Connect client is NATed to the selected interface by default.</p> <p>If disabled, you must ensure that you have a route from your network pointing to the SRX Series devices for handling the return traffic correctly.</p> |
| Certificate | <p>Select a certificate to authenticate the virtual private network (VPN) initiator and recipient.</p> |
| Trusted CA/Group | <p>Select the certificate authority (CA) profile from the list to associate it with the local certificate.</p> <p>This is applicable when authentication method is RSA-Signatures.</p> |
| Protected Networks | <p>Configure the addresses type for the selected device to protect one area of the network from the other.</p> <p>NOTE: You can also create addresses by clicking Add New Address.</p> |

Table 314: View or Edit IKE or IPsec Settings

| Settings | Guidelines |
|--------------------------|--|
| IKE Settings | |
| IKE Version | Select the required IKE version, either V1 or V2, that is used to negotiate dynamic security associations (SAs) for IPsec. By default, IKE V2 is used. |
| Mode | <p>Select an IKE policy mode.</p> <ul style="list-style-type: none"> • Main—Uses six messages in three peer-to-peer exchanges to establish the IKE SA. These three steps include the IKE SA negotiation, a Diffie-Hellman exchange, and authentication of the peer. Also provides identity protection. • Aggressive—Takes half the number of messages of main mode, has less negotiation power, and does not provide identity protection. <p>NOTE: Mode is applicable when the IKE Version is V1.</p> |
| Encryption-algorithm | Select the appropriate encryption mechanism. |
| Authentication-algorithm | Select an algorithm. The device uses this algorithm to verify the authenticity and integrity of a packet. |
| Diffie Hellman group | Select a group. Diffie-Hellman (DH) groups determine the strength of the key used in the key exchange process. |
| Lifetime-seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Dead Peer Detection | Enable to permit the two gateways to determine if the peer gateway is up and responding to the Dead Peer Detection (DPD) messages that are negotiated during IPsec establishment. |

Table 314: View or Edit IKE or IPsec Settings (Continued)

| Settings | Guidelines |
|--------------------------------|--|
| DPD Mode | <p>Select a DPD Mode.</p> <ul style="list-style-type: none"> Optimized: R-U-THERE messages are triggered if there is no incoming IKE or IPsec traffic within a configured interval after the device sends outgoing packets to the peer. This is the default mode. Probe Idle Tunnel: R-U-THERE messages are triggered if there is no incoming or outgoing IKE or IPsec traffic within a configured interval. R-U-THERE messages are sent periodically to the peer until there is traffic activity. Always-send: R-U-THERE messages are sent at configured intervals regardless of traffic activity between the peers. |
| DPD Interval | Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds. |
| DPD Threshold | Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5. |
| Advance Configuration | |
| IKEv2 Re Fragmentation Support | IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level. |
| IKEv2 Re-fragment Size | <p>Select the size of the packet at which messages are fragmented. By default, the size is 576 bytes for IPv4.</p> <p>Range is 570 to 1320.</p> |
| NAT-T | Enable Network Address Translation-Traversal (NAT-T) if the dynamic endpoint is behind a NAT device. |
| Keep Alive | Select a value. NAT keepalives are required to maintain the NAT translation during the connection between the VPN peers. Range is from 1 to 300 seconds. |

Table 314: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|------------------------------|--|
| IKE Connection Limit | Select the number of concurrent connections that the VPN profile supports. When the maximum number of connections is reached, no more Remote Access User (VPN) endpoints attempting to access an IPsec VPN can begin Internet Key Exchange (IKE) negotiations. |
| IPSec Settings | |
| Encryption Algorithm | Select the necessary encryption method. This is applicable if the Protocol is ESP. |
| Perfect Forward Secrecy | Select Perfect Forward Secrecy (PFS) as the method that the device uses to generate the encryption key. The PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security but require more processing time. |
| Advance Configuration | |
| VPN Monitor | Enable this option to send Internet Control Message Protocol (ICMP) to determine if the VPN is up. |
| Optimized | When VPN monitoring optimization is enabled, the SRX Series device only sends ICMP echo requests (pings) when there is outgoing traffic and no incoming traffic from the configured peer, through the VPN tunnel. If there is incoming traffic through the VPN tunnel, the SRX Series device considers the tunnel to be active and does not send pings to the peer. |
| Anti Replay | By default, Anti-Replay detection is enabled. IPsec protects against a VPN attack by using a sequence of numbers that are built into the IPsec packet—the system does not accept a packet for which it has already seen the same sequence number. It checks the sequence numbers and enforces the check, rather than just ignoring the sequence numbers. Disable it if there is an error with the IPsec mechanism that results in out-of-order packets, preventing proper functionality. |
| Install interval | Select the maximum number of seconds to allow for the installation of a re-keyed outbound security association (SA) on the device. |

Table 314: View or Edit IKE or IPsec Settings *(Continued)*

| Settings | Guidelines |
|--------------------|--|
| Idle Time | Select the appropriate idle time interval. The sessions and their corresponding translations typically time out after a certain period if no traffic is received. |
| DF Bit | <p>Select an option to process the Don't Fragment (DF) bit in IP messages.</p> <ul style="list-style-type: none"> • Clear—Disable the DF bit from the IP messages. This is the default. • Copy—Copy the DF bit to the IP messages. • Set—Enable the DF bit in the IP messages. |
| Copy Outer DSCP | Enable copying of Differentiated Services Code Point (DSCP) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner class-of-service (CoS) rules. |
| Lifetime Seconds | Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Lifetime kilobytes | Select the lifetime (in kilobytes) of an IPsec security association (SA). The range is from 64 through 4294967294 kilobytes. |

RELATED DOCUMENTATION

[IPsec VPN Overview | 981](#)

[IPsec VPN Global Settings | 1067](#)

IPsec VPN Global Settings

The Global Settings page displays the default settings that apply to the devices in your remote access VPN topology. You can view or modify the VPN global configuration details.

1. Select **Configure > IPsec VPN > VPN**.

The IPsec VPN page is displayed.

2. Click **Global Settings**.

The Global Settings page is displayed.

3. Click the pencil icon to modify the global settings.

The Modify Global Settings page is displayed.

Table 315: Global Settings

| Field | Description |
|-------------------------|---|
| Default Profile Name | <p>Select a default profile name from the list.</p> <p>NOTE: This option is available when at least one Juniper Secure Connect VPN is created.</p> |
| SSL VPN Tunnel tracking | <p>Enable this option to track Encapsulated Security Payload (ESP) tunnels.</p> |
| SSL VPN Profiles | <p>Lists the SSL VPN profiles.</p> <p>NOTE: This option displays associated IPsec VPNs when at least one remote access VPN is created.</p> <p>To create a new SSL VPN profile:</p> <ol style="list-style-type: none"> 1. Click Add. <p>The Add SSL VPN Profile page is displayed.</p> <ol style="list-style-type: none"> 2. Enter the name for a SSL VPN profile. 3. Enable Logging option to log for SSL VPN. 4. Enter a SSL termination profile name. 5. Select a server certificate from the list. 6. Click OK. <p>To edit a SSL VPN profile, select the profile you want to edit and click on the pencil icon.</p> <p>To delete a SSL VPN profile, select the profile you want to delete and click on the delete icon.</p> |

RELATED DOCUMENTATION

[IPsec VPN Overview](#) | 981

Understanding IPsec VPN Modes

The following two modes determine how traffic is exchanged in the VPN:

- **Tunnel Mode**—This mode encapsulates the original IP packet within another packet in the VPN tunnel. This is most commonly used when hosts within separate private networks want to communicate over a public network. Both VPN gateways establish the VPN tunnel to each other, and all traffic between the two gateways appears to be from the two gateways, with the original packet embedded within the exterior IPsec packet.
- **Transport Mode**—This mode does not encapsulate the original packet in a new packet, as tunnel mode does; rather, transport mode sends the packet directly between the two hosts that have established the IPsec tunnel.

Tunnel mode is the most common VPN mode on the Internet because it easily allows entire networks (particularly those with private address space) to communicate over public IP networks. Transport mode is primarily used when encrypting traffic between two hosts to secure communication where IP address overlap is not an issue (for example, between a host and a server on a private network).

RELATED DOCUMENTATION

[IPsec VPN Overview | 981](#)

[Understanding IPsec VPN Routing | 1071](#)

[Understanding IKE Authentication | 1072](#)

[Comparison of Policy-Based VPNs and Route-Based VPNs | 1069](#)

Comparison of Policy-Based VPNs and Route-Based VPNs

Security Director supports configuring two types of VPNs for SRX Series devices – policy-based and route-based VPNs. The underlying IPsec functionality is essentially the same in terms of traffic being encrypted.

Table 1 summarizes the differences between policy-based VPNs and route-based VPNs.

Table 316: Differences between Policy-Based and Route-Based VPNs

| Policy-Based VPNs | Route-Based VPNs |
|---|---|
| A tunnel is treated as an object that, together with source, destination, application, and action, constitutes a tunnel policy permitting VPN traffic. | A policy does not specifically reference a VPN tunnel. |
| A tunnel policy specifically references a VPN tunnel by name. | A route determines which traffic is sent through the tunnel based on a destination IP address. |
| The number of policy-based VPN tunnels that you can create is limited by the number of tunnels that the device supports. | The number of route-based VPN tunnels that you can create is limited by the number of st0 interfaces (for point-to-point VPNs) or the number of tunnels that the device supports, whichever is lower. |
| Although you can create numerous tunnel policies referencing the same VPN tunnel, each tunnel policy pair creates an individual IPsec security association (SA) with the remote peer. Each SA counts as an individual VPN tunnel. | Because the route, not the policy, determines which traffic goes through the tunnel, multiple policies can be supported with a single SA or VPN. |
| The action must be permit and must include a tunnel. | The regulation of traffic is not coupled to the means of its delivery. |
| The exchange of dynamic routing information is not supported. | Route-based VPNs support the exchange of dynamic routing information through VPN tunnels. You can enable an instance of a dynamic routing protocol, such as OSPF, on a st0 interface that is bound to a VPN tunnel. |
| If you need more granularity than a route can provide to specify the traffic sent to a tunnel, using a policy-based VPN with security policies is the best choice. | Route-based VPNs use routes to specify the traffic sent to a tunnel; a policy does not specifically reference a VPN tunnel. |

Table 316: Differences between Policy-Based and Route-Based VPNs *(Continued)*

| Policy-Based VPNs | Route-Based VPNs |
|--|---|
| You can consider a tunnel as an element in the construction of a policy. | When the security device does a route lookup to find the interface through which it must send traffic to reach an address, it finds a route through a secure tunnel (st0) interface. With a route-based VPN tunnel, you can consider a tunnel as a means for delivering traffic, and you can consider the policy as a method for either permitting or denying the delivery of that traffic. |

Proxy ID is supported for both route-based and policy-based VPNs. However, the multi-proxy ID is supported for only route-based VPNs. The multi-proxy ID is also known as traffic selector. A traffic selector is an agreement between IKE peers to permit traffic through a tunnel, if the traffic matches a specified pair of local and remote addresses. You define a traffic selector within a specific route-based VPN, which can result in multiple Phase 2 IPsec SAs. Only traffic that conforms to a traffic selector is permitted through an SA. The traffic selector is commonly required when remote gateway devices are non-Juniper Networks devices.

RELATED DOCUMENTATION

[IPsec VPN Overview | 981](#)

[Understanding IPsec VPN Routing | 1071](#)

[Understanding IPsec VPN Modes | 1069](#)

[Understanding IKE Authentication | 1072](#)

Understanding IPsec VPN Routing

SRX Series devices must know how to reach destination networks. This can be done through the use of static routing or dynamic routing. In Security Director, route-based VPNs support OSPF, RIP, and eBGP routing along with static routing. Static routing requires that administrators specify the list of host or network addresses at each site as part of the VPN. For example, in a retail scenario, where thousands of spokes can be part of a VPN, the static routing approach generates a huge configuration at each device. Static routing requires administrator to manually configure each route. Problems occur as the infrastructure changes or when the administrator does not have access to the addresses for the protected network. Keeping routes up-to-date manually creates tremendous overhead.

RELATED DOCUMENTATION

[IPsec VPN Overview | 981](#)

[Understanding IKE Authentication | 1072](#)

[Understanding IPsec VPN Modes | 1069](#)

[Comparison of Policy-Based VPNs and Route-Based VPNs | 1069](#)

Understanding IKE Authentication

The IKE negotiations only provide the ability to establish a secure channel over which two parties can communicate. You still need to define how they authenticate each other. This is where IKE authentication is used to ensure that the other party is authorized to establish the VPN.

The following IKE authentications are available:

- **Preshared key authentication**—The most common way to establish a VPN connection is to use preshared keys, which is essentially a password that is the same for both parties. This password must be exchanged in advance in an out-of-band mechanism, such as over the phone, through a verbal exchange, or through less secure mechanisms, even e-mail. The parties then authenticate each other by encrypting the preshared key with the peer's public key, which is obtained in the Diffie-Hellman exchange.

Preshared keys are commonly deployed for site-to-site IPsec VPNs, either within a single organization or between different organizations. To ensure that preshared keys are used in the most secure fashion, a preshared key must consist of at least 8 characters (12 or more is recommended) using a combination of letters, numbers, and nonalphanumeric characters, along with different cases for the letters (the preshared key should not use a dictionary word).

- **Certificate authentication**—Certificate-based authentication is considered more secure than preshared key authentication because the certificate key cannot be compromised easily. Certificates are also far more ideal in larger scale environments with numerous peer sites that should not all share a preshared key. Certificates are composed of a public and private key, and can be signed by a primary certificate known as a certificate authority (CA). In this way, certificates can be checked to see if they are signed with a CA that is trusted.

RELATED DOCUMENTATION

[IPsec VPN Overview | 981](#)

[Understanding IPsec VPN Routing | 1071](#)

[Understanding IPsec VPN Modes | 1069](#)

Publishing IPsec VPNs



NOTE: A check box, **Disable host inbound services** is provided under **Modify Application Settings** for Security Director, to enable or disable the host inbound configurations to be generated as part of the VPN configuration. When you select the check box, the host inbound traffic is not displayed in the view configuration page.

To publish an IPsec VPN:

1. Select **Configure > IPSec VPN > IPSec VPNs**.
2. Select the VPN that you want to publish and click **Publish**. The Publish Policy page appears.
3. Select the check boxes next to the devices to which the policy changes will be published.



NOTE: You can search for a specific device on which the VPN is published by entering the search criteria in the search field in the top-right corner of the Services page. You can search the devices by their name, IP address, or the device OS version.



NOTE: If the VPN is to be published on a large number of devices, the devices are displayed across multiple pages. You can use the pagination and display options available on the lower ribbon, just below the list of devices, to view all devices on which the VPN is published.

4. Select **Schedule at a later time** if you want to schedule and publish the configuration later.
5. Select **Run now** if you want to apply the configuration immediately.
6. Click **Publish**. The Affected Devices page displays the devices on which the VPN will be published.

RELATED DOCUMENTATION

Updating IPSec VPN | 1074

Updating IPsec VPN

To update a VPN:

1. Select the VPN policy that you want to update and click **Update**. The Update VPN page appears.
2. Select the check boxes next to the devices to which the VPN changes will be published.



NOTE: You can search for a specific device on which the VPN is published by entering the search criteria in the search field. You can search the devices by their name and IP address.

3. Select **Schedule at a later time** if you want to schedule and publish the configuration later.
4. Select **Run now** if you want to apply the configuration immediately.
5. Click **Publish and Update**. The Affected Devices page displays the devices on which the policies will be published.

RELATED DOCUMENTATION

[IPsec VPN Overview](#) | 981

Modify IPsec VPN Settings

IN THIS SECTION

- [Modify Device Selection](#) | 1075

To modify the IPsec VPN settings:

1. Select **Configure > IPsec VPN > IPsec VPNs**.

The IPsec VPNs page is displayed.

2. Right-click the IPsec VPN that you want to modify and select **Modify VPN** or select the IPsec VPN and click the pencil icon.

Based on the VPN topology the corresponding edit IPsec VPN page appears.

3. Edit the required fields and click **OK**.

Follow the applicable configuration guidelines used while creating the IPsec VPN.

You can also edit the tunnel settings on the device configuration page by clicking View/Edit Tunnels.

Modify Device Selection

To view or edit the devices:

1. Select **Configure > IPsec VPN > VPNs**.
The IPsec VPNs page is displayed.
2. Select an IPsec VPN and click the pencil icon.
The Modify IPsec VPN page is displayed.
3. Click **View/Select Devices**.
4. Edit the device selection.
5. Click **OK**.

RELATED DOCUMENTATION

| [IPsec VPN Overview](#) | 981

Viewing Tunnels

You can view all the tunnels configured for your VPN using this option.

To view the tunnel information of a VPN:

1. Select **Configure > IPsec VPN > IPsec VPNs**.
The IPsec VPN page appears.
2. Right-click the VPN and select View Tunnels, or select **View Tunnels** from the More list.
The Tunnels page appears showing the summary of tunnel configurations for device associated with the selected VPN.
3. Click **OK**.

RELATED DOCUMENTATION

| [IPsec VPN Overview](#) | 981

Importing IPsec VPNs

Junos Space Security Director lets you import your existing large and complex VPN configurations into Security Director. You do not have to recreate the same VPN environment to allow Security Director to manage it. During the VPN import, all VPN-related objects are also imported along with the VPN.

To import a VPN:

1. Select **IPSec VPN > IPSec VPNs**.

The existing VPNs are listed on the right pane.

2. Select **Import VPN** from the More option.

The Import VPN page appears.

3. Click **Next**.

The Select Devices page appears. You can select one or more devices from which the VPN configuration must be imported. The filter option enables you to perform the free text search on the device name, IP address, and device platform.

4. Select the security device to import its VPN settings. Click **Next**.

A progress bar appears showing the analysis of the device configurations.

5. After analyzing the VPN configuration, Security Director performs the configuration parsing and the endpoint correlation. During the endpoint correlation if any conflicting configurations are found, you can either proceed to ignore the conflicts during the import and log this detail as a job or cancel the operation. Click Yes to ignore the conflicts and import the remaining configuration or No to terminate the import and proceed to the next step to select devices.

The conflict occurs when the combination of IKE and IPsec parameters are same between the endpoints. The following points explain the scenarios under which the conflicts occur for different VPN configuration types:

- Preshared key and Main Mode
 - Preshared key
 - Local IKE ID of local endpoint and remote IKE ID of remote endpoint
 - Remote IKE ID of local endpoint and local IKE ID of remote endpoint
 - Preshared key and Aggressive Mode
 - Preshared key
 - Local IKE ID of local endpoint and remote IKE ID of remote endpoint
- OR
- Remote IKE ID of local endpoint and local IKE ID of remote endpoint

- Certificate, Main Mode, and DN type IKE ID
 - Remote IKE ID of local endpoint and DN of the certificate of remote endpoint
 - DN of the certificate of the local endpoint and remote IKE ID of remote endpoint
 - Certificate, Main Mode and other IKE ID type
 - Local IKE ID of the local endpoint and remote IKE ID of the remote endpoint
 - Remote IKE ID of local endpoint and local IKE ID of remote endpoint
 - Certificate, Aggressive Mode, and DN type IKE ID
 - Remote IKE ID of local endpoint and DN of the certificate of remote endpoint
 - DN of the certificate of the local endpoint and remote IKE ID of remote endpoint
 - Certificate, Aggressive Mode, and other IKE ID type
 - Local IKE ID of local endpoint and remote IKE ID of remote endpoint
- OR
- Remote IKE ID of local endpoint and local IKE ID of remote endpoint

If there are no conflicts, you can directly proceed to Step 6.

6. The Select EndPoints page appears showing the VPN settings.

All the imported VPNs will have autogenerated names, which you have the option to modify. Click the VPN name and enter the name. There is a predefined quick filter available to list all the errors and warnings. Click the drop-down list to select the required filter parameter.

The Select EndPoints page lists the VPNs discovered from the configuration and allows you to explore the devices, or endpoints for each of the discovered VPNs. You can also perform a free text search on the VPN name, device name, and endpoint names.

Table 1 shows the description of each column.

Table 317: Settings Guidelines

| Settings | Guidelines |
|------------------------|---|
| Column Name | Description |
| VPNs & Local Endpoints | Lists all the discovered VPNs and their associated devices and endpoints in a tree structure. |

Table 317: Settings Guidelines (*Continued*)

| Settings | Guidelines |
|------------------|---|
| Remote Endpoints | Shows matching endpoint details. |
| Warning | Displays any information, error, and warning messages detected during the import. |

7. The Summary page appears. All the VPNs listed on this page are saved in the Security Director database for further management.

Click **Finish**. A progress bar appears showing the progress of the import. Once the import is successful, you can manage the VPNs from the VPN landing page.

8. The final summary page appears showing the number of VPNs, devices, and endpoints imported. To view the complete job details, click full log details. The Job Details page appears.
9. Click **Close**. All the imported VPN configurations appear on the VPN landing page.



NOTE: At any point of the import workflow, you can choose to exit. All your settings and progress are discarded.

Note:

- The schema version of the device must be mapped to the Junos version to import all the VPN settings.
- You must republish the imported VPNs before modifying them further.
- VPN imported without IKE IDs configured on devices is not available for any modifications, unless you modify any VPN settings. On modifying these imported VPNs generate local or remote IKE IDs.
- Single-ProxyID, Multi-ProxyID, and the preshared key settings are imported at the tunnel level.
- By default, for the imported VPNs, the preshared key type is shown as Auto-generate. However, a new key is not generated for the already imported tunnels. If a new device is added to the VPN, only for that device, a new key is autogenerated.

RELATED DOCUMENTATION

| [IPsec VPN Overview](#) | 981

Deleting IPsec VPN

To delete one or more IPsec VPNs:

1. Select **Configure > IPsec VPN > IPsec VPNs**.
2. Select one or more IPsec VPNs.
3. Click X to delete the IPsec VPNs.

A message is displayed to confirm the delete operation.

4. Click **Yes** to delete the selected IPsec VPNs.

The IPsec VPNs are deleted from the IPsec VPNs page.

A warning is displayed for confirmation on deleting these IPsec VPNs from the device.

5. Click **Redirect** to navigate to the Security Devices page.
6. Select the device, right-click and select **Preview Changes** to run the Preview Changes job. Post validation, select the device, right-click and select **Update Changes** to proceed with the Update Changes job to delete the IPsec VPNs from the device.

RELATED DOCUMENTATION

[IPsec VPN Overview](#) | 981

IPsec VPN Main Page Fields

Use IPsec VPN to secure your network traffic with encryption and authentication. The VPN tunnels are central components of networks and secure the data between different sites and remote users. Table 1 describes the fields on this page.

Table 318: IPsec VPN Main Page Fields

| Field | Description |
|-------------|-------------------------------|
| Name | Name of the IPsec VPN. |
| Description | Description of the IPsec VPN. |

Table 318: IPsec VPN Main Page Fields *(Continued)*

| Field | Description |
|---------------------|--|
| Type | There are different types of topology deployments for IPsec VPN: site-to-site, full-mesh, hub-and-spoke. |
| Profile Type | The profile type, that is, Inline Profile or Shared Profile. |
| Profile Name | Name of the VPN profile. The security parameters are defined in this profile to establish VPN connection between two sites. |
| Tunnel Mode | The tunnel mode, that is, Route Based or Policy Based. |
| Configuration State | The configuration state of the IPsec VPN. |
| Publish State | <p>Display the publish state of the VPN configuration. You can verify your VPN configurations before updating them to the device.</p> <p>Published - Configuration is published to all devices involved in the VPN.</p> <p>Partially Published - Configuration is published to only fewer devices involved in the VPN.</p> <p>Unpublished - VPN is created but not published.</p> <p>Republish Required - Modifications are made to the VPN configuration after it is published.</p> |
| Domain Name | Display the user domain for mapping objects and managing sections of a network. |

RELATED DOCUMENTATION

| [IPsec VPN Overview](#) | 981

IPsec VPN-Extranet Devices

IN THIS CHAPTER

- [Creating Extranet Devices | 1081](#)
- [Find Usage for Extranet Devices | 1082](#)
- [Extranet Devices Main Page Fields | 1083](#)

Creating Extranet Devices

Before you begin

- Review the Extranet Devices main page for an understanding of your current data set. See "[Extranet Devices Main Page Fields](#)" on [page 1083](#) for field descriptions
- To avoid duplicate IP address while creating extranet devices, enable **Prevent extranet device with duplicate content** option for shared objects in Junos Space Network Management Platform. See *Modifying Settings of Junos Space Applications*.

When you create an extranet device in Security Director with duplicate IP address, an error message is displayed.

Use the Extranet devices page to manage the third-party devices that Junos Space does not directly control or manage. Extranet devices can be ScreenOS devices or other vendor VPN-capable firewall devices that cannot be managed by Security Director. Extranet devices in the Security Director help users design and manage VPNs residing between SRX Series devices and third-party devices without actually being connected to them.

To configure extranet devices:

1. Select **Configure > IPsec VPN > Extranet Devices**.
2. Click the plus sign (+) to create a new extranet device.
Complete the configuration according to the guidelines provided in [Table 319 on page 1082](#).
3. Click **OK** to save.

Your changes are saved. A new extranet device is added to Security Director.

Table 319: Extranet Device Settings

| Setting | Guideline |
|-------------|--|
| Name | Enter a name that begins with an alphanumeric character and can include colons, periods, slashes, and underscores, for a maximum length of 63 characters. |
| Description | Enter a description for the extranet device; maximum length is 255 characters. |
| IP Address | Enter the IPv4/IPv6 address for the extranet device. |
| Hostname | Enter a DNS resolvable name for the extranet device. This hostname is used to generate an IKE ID. The hostname can include alphanumeric characters, dashes, and underscores, for a maximum length of 255 characters. |
| Created | Displays the name of the user who created the extranet device. |
| Domain Name | Displays the user domain for mapping objects and managing sections of a network. |

RELATED DOCUMENTATION

| [Extranet Devices Main Page Fields](#) | 1083

Find Usage for Extranet Devices

Starting in Junos Space Security Director Release 20.3, you can find the usage of extranet devices in IPsec VPNs.

To find an extranet device usage:

1. Select **Configure > IPsec VPN > Extranet Devices**.

The Extranet Devices page is displayed.

- 2. Right-click an extranet device and select **Find Usage**.

The Search Results page is displayed with the IPsec VPN names where the extranet device is used. If the extranet device is not used by any VPN, the search result will not display any IPsec VPNs.

RELATED DOCUMENTATION

| [Creating Extranet Devices](#) | 1081

Extranet Devices Main Page Fields

Use extranet device objects to reference third-party devices that you do not have login or other device controls over. Extranet devices are firewalls that Junos Space does not directly control and manage.

Table 320: Extranet Devices Main Page Fields

| Field | Description |
|-------------|---|
| Name | Name of the extranet device. |
| Description | Description of the extranet device. |
| Hostname | DNS resolvable name of the extranet device. This hostname is used to generate IKE ID. |
| IP Address | IPv4 address of the device. |
| Created By | User who created the extranet device. |
| Domain Name | User domain for mapping objects and managing sections of a network. |

RELATED DOCUMENTATION

| [Creating Extranet Devices](#) | 1081

IPsec VPN-Profiles

IN THIS CHAPTER

- [VPN Profiles Overview | 1084](#)
- [Creating VPN Profiles | 1085](#)
- [Edit and Clone IPsec VPN profiles | 1092](#)
- [Assigning Policies and Profiles to Domains | 1093](#)
- [VPN Profiles Main Page Fields | 1094](#)

VPN Profiles Overview

You can use the VPN Profile page to create an object that specifies the parameters used in a IPsec VPN. You can configure the Internet Key Exchange (IKE) and IPsec settings in VPN profile.

When a VPN profile is created, Junos Space creates an object in the Junos Space database to represent the VPN profile. You can use this object to create a route-based or policy-based IPsec VPN.

SRX Series devices support the following authentication methods in IKE negotiations for IPsec VPN:

- Pre-shared key
- RSA signature
- DSA signature
- ECDSA signature 256
- ECDSA signature 384

The predefined VPN profile is available for both RSA and DSA certificates-based authentication. The PKI certificate list from the device is automatically retrieved during the device discovery.

SRX Series devices support pre-shared key and PKI certificate-based authentication methods in IKE negotiation for IPsec VPNs. The RSA certificate and DSA certificate-based authentication are supported for IKE negotiation. The predefined VPN profile is available with both RSA and DSA certificates-based

authentication. The PKI certificate list from the device is automatically retrieved during the device discovery and update-based syslog notifications.

RELATED DOCUMENTATION

| [Creating VPN Profiles](#) | 1085

Creating VPN Profiles

Before You Begin

Review the VPN profiles main page for an understanding of your current data set. See ["VPN Profiles Main Page Fields" on page 1094](#) for field descriptions.

Use the VPN Profiles page to configure VPN profiles that define security parameters when establishing a VPN connection. You can reuse the same profile to create more VPN tunnels. When a VPN profile is created, Junos Space creates an object in the Security Director database to represent the VPN profile. You can use this object to create either route-based or policy-based IPsec VPNs.



NOTE: You cannot modify or delete Juniper Networks Predefined VPN profiles. You can only clone them and create new profiles.

Starting in Junos Space Security Director Release 20.3, you can create a VPN profile based on a VPN topology. You can create:

- Site-to-site VPN profile
- Hub-and-spoke (establishment all peers) VPN profile
- Hub-and-spoke (establishment by spokes) VPN profile
- Hub-and-spoke Auto Discovery VPN profile
- Full mesh VPN profile
- Remote access (Juniper Secure Connect) profile
- Remote access (NCP Exclusive Client) profile

To configure a VPN profile:

1. Select **Configure > IPsec VPN > Profiles**.

The VPN Profiles page is displayed.

2. Click **Create VPN Profile** and select a VPN topology based on which you want to create a VPN profile.

The corresponding create VPN profile page is displayed.

3. Complete the configuration according to the guidelines provided in [Table 321 on page 1086](#).
4. Click **Save**.

A new VPN profile is created. You can use this object to create IPsec VPNs.

Table 321: VPN Profile Settings

| Settings | Guidelines |
|-----------------------|--|
| Name | Enter a unique string of alphanumeric characters, dashes and underscores; no spaces allowed; 62-character maximum. |
| Description | Enter a description for the VPN profile; maximum length is 255 characters. |
| IKE Settings | |
| Authentication Method | <p>Select the required authentication method:</p> <ul style="list-style-type: none"> • Pre-shared based • RSA-Signatures • DSA-Signatures • ECDSA-Signatures-256 • ECDSA-Signatures-384 <p>NOTE: For Remote VPN, only Pre-shared based and RSA-Signatures are supported.</p> |
| IKE Version | <p>Select the required IKE version, either V1 or V2, that is used to negotiate dynamic security associations (SAs) for IPsec. By default, IKE V2 is used.</p> <p>NOTE: This is not applicable for remote access VPN profiles.</p> |

Table 321: VPN Profile Settings (Continued)

| Settings | Guidelines |
|------------------------|--|
| Mode | <p>Select an IKE policy mode.</p> <ul style="list-style-type: none"> • Main—Uses six messages in three peer-to-peer exchanges to establish the IKE SA. These three steps include the IKE SA negotiation, a Diffie-Hellman exchange, and authentication of the peer. Also provides identity protection. • Aggressive—Takes half the number of messages of main mode, has less negotiation power, and does not provide identity protection. <p>NOTE: Mode is applicable when the IKE Version is V1. Mode is not applicable for remote access VPN profiles.</p> |
| Dead Peer Detection | <p>Enable to permit the two gateways to determine if the peer gateway is up and responding to the Dead Peer Detection (DPD) messages that are negotiated during IPsec establishment.</p> |
| DPD Mode | <p>Select a DPD Mode.</p> <ul style="list-style-type: none"> • Optimized: R-U-THERE messages are triggered if there is no incoming IKE or IPsec traffic within a configured interval after the device sends outgoing packets to the peer. This is the default mode. • Probe Idle Tunnel: R-U-THERE messages are triggered if there is no incoming or outgoing IKE or IPsec traffic within a configured interval. R-U-THERE messages are sent periodically to the peer until there is traffic activity. • Always-send: R-U-THERE messages are sent at configured intervals regardless of traffic activity between the peers. |
| DPD Interval | <p>Select an interval in seconds to send dead peer detection messages. The default interval is 10 seconds, with a permissible range of 2 to 60 seconds.</p> |
| DPD Threshold | <p>Select the failure DPD threshold value. This specifies the maximum number of times the DPD messages must be sent when there is no response from the peer. The default number of transmissions is 5 times, with a permissible range of 1 to 5.</p> |
| Custom Proposal | |

Table 321: VPN Profile Settings *(Continued)*

| Settings | Guidelines |
|--------------------------|--|
| Name | Enter a name for the VPN. |
| Diffie Hellman group | Select a group. Diffie-Hellman (DH) groups determine the strength of the key used in the key exchange process. |
| Authentication-algorithm | Select an algorithm. The device uses these algorithms to verify the authenticity and integrity of a packet. |
| Encryption-algorithm | Select the appropriate encryption mechanism. |
| Lifetime-seconds | <p>Select a lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds.</p> <p>NOTE: You can create a maximum of four custom profiles, and edit or delete the existing custom profiles.</p> |

Advance Configuration

| | |
|--------------------------------|--|
| General IKE ID | <p>Enable this option to accept peer IKE ID. This option is disabled by default. If General IKE ID is enabled, the IKE ID option is disabled automatically.</p> <p>NOTE: This is not applicable for remote access VPN profiles.</p> |
| IKEv2 Re Authentication | <p>Select a re-authentication frequency. Re-authentication can be disabled by setting the re-authentication frequency to 0.</p> <p>Range is 0 to 100.</p> <p>NOTE: This is not applicable for remote access VPN profiles.</p> |
| IKEv2 Re Fragmentation Support | <p>IKEv2 fragmentation splits a large IKEv2 message into a set of smaller ones so that there is no fragmentation at the IP level.</p> <p>This is applicable when authentication method is RSA-Signatures.</p> |

Table 321: VPN Profile Settings *(Continued)*

| Settings | Guidelines |
|-------------------------|--|
| IKE ID | <p>Select an option:</p> <ul style="list-style-type: none"> • None • Distinguished name • Hostname • IPv4 address • E-mail Address <p>IKE ID is applicable only when General IKE ID is disabled.</p> <p>NOTE: Only E-mail ID is applicable for remote access VPN profiles.</p> |
| NAT-T | <p>Enable Network Address Translation-Traversal (NAT-T) if the dynamic endpoint is behind a NAT device.</p> |
| Keep Alive | <p>Select a value. NAT Keepalives are required to maintain the NAT translation during the connection between the VPN peers. Range is from 1 to 300 seconds.</p> |
| IPsec Settings | |
| Perfect Forward Secrecy | <p>Select Perfect Forward Secrecy (PFS) as the method that the device uses to generate the encryption key. The PFS generates each new encryption key independently from the previous key. The higher numbered groups provide more security but require more processing time.</p> |
| Establish Tunnel | <p>Select an option to specify when IKE is activated.</p> <ul style="list-style-type: none"> • Immediately—IKE is activated immediately after VPN configuration changes are committed. • On-traffic—IKE is activated only when data traffic flows and must be negotiated with the peer gateway. This is the default behavior. <p>NOTE: This is not applicable for remote access VPN profiles.</p> |
| Custom Proposal | |

Table 321: VPN Profile Settings *(Continued)*

| Settings | Guidelines |
|------------------------------|--|
| Name | Enter a name for the VPN. |
| Authentication Algorithm | Select an algorithm. The device uses these algorithms to verify the authenticity and integrity of a packet. |
| Protocol | <p>Select the required protocol to establish the VPN.</p> <ul style="list-style-type: none"> • ESP—The Encapsulating Security Payload (ESP) protocol provides both encryption and authentication. • AH—The Authentication Header (AH) protocol provides data integrity and data authentication. <p>NOTE: This is not applicable for remote access VPN profiles.</p> |
| Encryption Algorithm | <p>Select the necessary encryption method.</p> <p>This is applicable if the Protocol is ESP.</p> |
| Lifetime Seconds | Select the lifetime of an IKE security association (SA). The valid range is from 180 through 86,400 seconds. |
| Lifetime kilobytes | <p>Select the lifetime (in kilobytes) of an IPsec security association (SA). The range is from 64 through 4294967294 kilobytes.</p> <p>NOTE: You can create a maximum of four custom profiles, and edit or delete the existing custom profiles.</p> |
| Advance Configuration | |
| VPN Monitor | Enable this option to send Internet Control Message Protocol (ICMP) to determine if the VPN is up. |

Table 321: VPN Profile Settings *(Continued)*

| Settings | Guidelines |
|------------------|--|
| Anti Replay | By default, Anti-Replay detection is enabled. IPsec protects against the VPN attack by using a sequence of numbers that are built into the IPsec packet—the system does not accept a packet for which it has already seen the same sequence number. It checks the sequence numbers and enforces the check, rather than just ignoring the sequence numbers. Disable it if there is an error with the IPsec mechanism that results in out-of-order packets, preventing proper functionality. |
| Install interval | Select the maximum number of seconds to allow for the installation of a re-keyed outbound security association (SA) on the device. |
| Idle Time | Select the appropriate idle time interval. The sessions and their corresponding translations typically time out after a certain period if no traffic is received. |
| DF Bit | <p>Select an option to process the Don't Fragment (DF) bit in IP messages.</p> <ul style="list-style-type: none"> • Clear—Disable the DF bit from the IP messages. This is the default. • Copy—Copy the DF bit to the IP messages. • Set—Enable the DF bit in the IP messages. |
| Copy Outer DSCP | Enable copying of Differentiated Services Code Point (DSCP) field from the outer IP header encrypted packet to the inner IP header plain text message on the decryption path. The benefit in enabling this feature is that after IPsec decryption, clear text packets can follow the inner class-of-service (CoS) rules. |

RELATED DOCUMENTATION

[VPN Profiles Main Page Fields | 1094](#)

[VPN Profiles Overview | 1084](#)

Edit and Clone IPsec VPN profiles

IN THIS SECTION

- [Edit a VPN Profile | 1092](#)
- [Clone IPsec VPN Profile | 1092](#)

You can edit or clone a custom IPsec VPN profile. Starting in Junos Space Security Director Release 20.3, when you edit or clone a VPN profile migrated from an earlier release, you need to select a VPN topology for the VPN profile.



NOTE: You cannot modify or delete Juniper Networks Predefined VPN profiles. You can only clone them and create new profiles.

Edit a VPN Profile

1. Select **Configure > IPsec VPN > Profiles**.

The VPN Profiles page is displayed.

2. Select the IPsec VPN that you want to edit, and then click the pencil icon.

The edit window appears, showing the same options as when creating a new VPN profile.



NOTE: Starting in Junos Space Security Director Release 20.3, you'll need to select a VPN topology while creating an IPsec VPN. When you edit a VPN profile migrated from an earlier release, you'll need to select a VPN topology for the VPN profile.

3. Click **Save** to save your changes.

Clone IPsec VPN Profile

1. Select **Configure > IPsec VPN > Profiles**.

The VPN Profiles page is displayed.

2. Right-click the VPN Profile that you want to clone and select **Clone**. You can also select Clone from the More list.

The Clone window appears with editable fields.



NOTE: Starting in Junos Space Security Director Release 20.3, you'll need to select a VPN topology while creating an IPsec VPN. When you clone a VPN profile migrated from an earlier release, you'll need to select a VPN topology for the VPN profile.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

[Creating VPN Profiles](#) | 1085

Assigning Policies and Profiles to Domains

You can assign or reassign policies or profiles to different domains when it is first configured and whenever you want to implement a change. You can assign only one policy or profile at a time. Before assigning a policy or profile to another domain, Security Director checks for the validity of the move. If the move is not acceptable, a warning message appears.

To assign a policy or profile to a domain:

1. Select **Configure** and select the landing page for the type of policy or profile that you are assigning to a domain.
2. From the landing page, right-click the policy or profile or click **More**.
A list of actions appears.
3. Select **Assign <Policy or Profile> to Domain**.

The Assign <Policy or Profile> to Domain page appears.



NOTE: <Policy or Profile> is the name of the policy or profile that you are assigning to a domain.

4. Select the required items to assign to a domain.
5. Enable this option to ignore warning messages, if any.
6. Click **Assign**.

A policy or profile is assigned to a domain.

RELATED DOCUMENTATION

| |
|--|
| Creating Firewall Policies 478 |
| Creating NAT Policies 784 |
| Creating IPS Policies 714 |

VPN Profiles Main Page Fields

Use the VPN profiles main page to get an overall, high-level view of your VPN settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 322 on page 1094](#) describes the fields on this page.

Table 322: VPN Profiles Main Page Fields

| Field | Description |
|--------------|---|
| Name | Name of the VPN profile. |
| Type | A VPN profile type can be predefined or custom. You can use these predefined sets or create your own. |
| Description | Description of the VPN profile. |
| Mode | IKE negotiation mode (main or aggressive) is used to determine the type and number of message exchanges that occur in a phase. Only one mode is used for negotiation, and the same mode must be configured on both sides of the tunnel. |
| VPN Topology | The VPN topology of the profile. |
| Created By | User who created the VPN profile. |
| Domain Name | User domain for mapping objects and managing sections of a network. |
| IPsec VPN | Specifies the list of IPsec VPNs to which the profile is associated. |

RELATED DOCUMENTATION

[Creating VPN Profiles | 1085](#)

[VPN Profiles Overview | 1084](#)

Insights

IN THIS CHAPTER

- [About the Log Parsers Page | 1096](#)
- [Create a New Log Parser | 1098](#)
- [Edit and Delete a Log Parser | 1103](#)
- [About the Log Sources Page | 1104](#)
- [Add a Log Source | 1106](#)
- [Edit and Delete a Log Source | 1107](#)
- [View Log Statistics | 1108](#)
- [About the Event Scoring Rules Page | 1109](#)
- [Create an Event Scoring Rule | 1110](#)
- [Edit and Delete Event Scoring Rules | 1112](#)
- [About the Incident Scoring Rules Page | 1113](#)
- [Create an Incident Scoring Rule | 1115](#)
- [Edit and Delete Incident Scoring Rules | 1116](#)

About the Log Parsers Page

IN THIS SECTION

- [Tasks You Can Perform | 1097](#)
- [Field Descriptions | 1097](#)

To access this page, click **Configure > Insights > Log Parsers**.

Use the flexible log parser to define how the system log data must be parsed. The flexible parser enables you to provide a sample of your logs to create a new parser, parse the logs, normalize the fields, filter logs based on your configured criteria, and assign severity and semantics to various fields. You can create multiple parsers for different log sources. You can also import the parsers from a file or export the parsers to a standard file that can be saved and shared.

Security Director Insights includes prepackaged parsers for SRX Series device logs. You can export a prepackaged parser to a file and save a copy of that parser. This is a sample parser. You can add any logs to it, change the filter criteria, or modify the conditions for severity settings according to your environment and Security Operation Center (SOC) process. Before modifying a prepackaged log parser, it's good to export it to a file and save a copy of the default parser. You can always import it back to the SRX Series device if you need it later.

Tasks You Can Perform

You can perform the following tasks from the Log Parsers page:

- Create a new log parser. See *Create a New Log Parser*.
- Edit and delete a log parser. See *Edit and Delete a Log Parser*.

Field Descriptions

[Table 323 on page 1097](#) provides guidelines to configure the Log Parsers.

Table 323: Fields on the Log Parsers Page

| Field | Description |
|-------------|--|
| Name | Specifies the name of the log parser that you have created. |
| Description | Specifies the corresponding description provided for the log parser. |

RELATED DOCUMENTATION

| |
|-------------------------------------|
| <i>Create a New Log Parser</i> |
| <i>Edit and Delete a Log Parser</i> |

Create a New Log Parser

Use the New Log Parser page to create your own log parser by using sample logs. You can build your own parser by mapping fields in your sample logs to Security Director Insights event fields, indicating which types of events will generate an incident.

To create a new log parser:

1. Select **Configure > Insights > Log Parsers**.
The Log Parsers page appears.
2. Select the plus icon (+).
The New Log Parser page appears.
3. Complete the configuration according to the guidelines provided in [Table 324 on page 1098](#).
4. Click **Finish**, and you are presented with the results of your flexible log parser as they are applied to the sample logs provided.
Review the results carefully to determine whether your mapping, filtering, and assignment conditions are as expected.

Table 324: Add New Log Parser

| Setting | Guideline |
|---------------------------|--|
| <i>Create/Edit Parser</i> | |
| Name | Enter a unique and descriptive name for the log parser. |
| Description | Enter a description for the log parser. |
| <i>Parse Log File</i> | |
| Raw Log | Upload the raw log file by browsing to it, or paste the log data in a separate field provided below the Browse button. Ensure the log file contains an RFC-compliant syslog header. |

Table 324: Add New Log Parser *(Continued)*

| Setting | Guideline |
|--|---|
| Log File Format | <p>Specify the format of the sample log file. The available options are:</p> <ul style="list-style-type: none"> • XML • JSON • CSV • Others |
| CSV Headers (if the log file format is CSV) | <p>If your log file is in CSV format, you may provide a comma-delimited list of field names in this field. If the CSV headers are not provided, the fields will be named as csv<i>N</i>, where <i>N</i> is the field position.</p> |
| Grok Pattern (if the log file format is others) | <p>If you select the Others option for the log file format, you must supply a grok pattern for the log file. A grok pattern may consist of one or more lines. The grok pattern line beginning with LOGPATTERN is the pattern that will be applied to the logs. A grok pattern must include a pattern named LOGPATTERN, otherwise the parser will not have any pattern to use.</p> |

Field Mapping

Table 324: Add New Log Parser *(Continued)*

| Setting | Guideline |
|-------------------------------------|--|
| Mapped Fields and Unmapped Fields | <p>In the Unmapped Field section, select a field in the Parsed Fields column and then select a value in the Insights Fields column to map. After selecting both the fields, click Map. The mapped fields now appear in the Mapped Fields section, which lists all fields that have been mapped to each other.</p> <p>You can perform the following actions from the Field Mapping page:</p> <ul style="list-style-type: none"> • Click a circular arrow icon in the Mapped Fields section to undo a mapping. • Click the filter icon in the Unmapped Fields section to enter text for searching. • In the Unmapped Fields section, you can select multiple fields from the Parsed Fields column and map them to one field from the Insights Fields column. When you do this, a sort icon appears in the Mapped Fields section. Use the Sort capability to select the order in which multiple fields are applied based on whether those fields contain a valid value or not. Higher in the order takes priority. • Select the Counter check box to count the number of times a field appears. <p>NOTE: Fields marked with * are mandatory.</p> |
| <i>Date Format</i> | |
| Field Mapping: Format Date and Time | <p>This is an optional configuration. You can leave this field blank, if your log file is using a standard time as dictated by RFC 3164 or RFC 5424. Those headers are automatically parsed. If the timestamp cannot be parsed, use the Ruby strftime to provide a format string so that Security Director Insights can interpret the date and time in your log file as the event start time.</p> <p>For more information about the Ruby strftime format, see https://ruby-doc.org/core-2.3.0/Time.html#method-i-strftime.</p> |
| <i>Log Filtering</i> | |

Table 324: Add New Log Parser *(Continued)*

| Setting | Guideline |
|---------------|--|
| Log Filtering | <p>You can create filters to notify Security Director Insights about malicious and unmalicious events as you decide what logs are to be kept and which ones can be ignored. Log filtering removes logs that are “noisy” and not of particular interest and retains logs that are related to malicious events.</p> <p>With these filters, you can select exact match or contains filter for the string you enter.</p> <p>Click Add and configure filtering conditions as follows:</p> <ul style="list-style-type: none"> • Select a log file field from the list. • Select a suitable filter condition from the list such as Matches, Contains, Does not Contain, and so on. If you select Matches, your provided string must match the selected field exactly. If you select Contains, your provided string must appear as a substring within the selected field. • In the edit field, enter a string to filter log files, and then click Add. <p>Click OK and your condition is added to the filter. You can add multiple filters. An “or” condition is applied to the list of filters; therefore, the order of filters is not relevant.</p> <p>NOTE: Select the check box for a filter and click Delete to remove that filter.</p> |

Conditions Assignment

Table 324: Add New Log Parser *(Continued)*

| Setting | Guideline |
|-------------------|--|
| Assign Conditions | <p>You can assign different conditions to an event, based on the filtering parameters you configure.</p> <ul style="list-style-type: none"> Event Severity—Assign conditions to define the severity of an event. Click Add and set conditions as follows: <ul style="list-style-type: none"> Select a severity level. The options are Benign, Low, Medium, High, and Critical. Select a field from the list to set the severity level for that field. Select a condition. For example, If you select Matches, your string must match the selected field exactly. If you select Contains, your string must appear as a substring within the selected field. In the edit field, enter a string to filter log files and click Add. Progression—Assign conditions to define the progression of an event. Click Add and set conditions as follows: <ul style="list-style-type: none"> Select a progression level. The options are Phishing, Exploit, Download, Infection, and Execution. Select a field from the list to set the progression level for that field. Select a condition. For example, If you select Matches, your string must match the selected field exactly. If you select Contains, your string must appear as a substring within the selected field. In the edit field, enter a string to filter log files and click Add. Blocked—Assign conditions to define the event is blocked or not. Click Add and set conditions as follows: <ul style="list-style-type: none"> Select a blocked level. The options are True and False. Select a field from the list to set the block level for that field. Select a condition. For example, If you select Matches, your string must match the selected field exactly. If you select Contains, your string must appear as a substring within the selected field. In the edit field, enter a string to filter log files and click Add. |

RELATED DOCUMENTATION

About the Log Parsers Page

Edit and Delete a Log Parser

Import and Export Log Parsers

Edit and Delete a Log Parser

IN THIS SECTION

- [Edit a Log Parser | 1103](#)
- [Delete a Log Parser | 1103](#)

You can edit and delete a log parser from the Log Parsers page.

Edit a Log Parser

To edit a log parser:

1. Select **Configure > Insights > Log Parsers**.

The Log Parsers page appears.

2. Select the log parser that you want to edit, and click the pencil icon.

The Edit Log Parser page appears, displaying the same fields that were presented when you added new log parsers.

3. Modify the log parser fields.

4. Click **Finish** to save your changes.

You are taken to the Log Parsers page. A confirmation message appears, indicating the status of the edit operation.

Delete a Log Parser

To delete a log parser:

1. Select **Configure > Insights > Log Parsers**.

The Log Parsers page appears.

2. Select a log parser that you want to delete and click the delete icon.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the log parser.

A confirmation message appears, indicating the status of the delete operation.

RELATED DOCUMENTATION

About the Log Parsers Page

Create a New Log Parser

Import and Export Log Parsers

About the Log Sources Page

IN THIS SECTION

- [Tasks You Can Perform | 1105](#)
- [Field Descriptions | 1105](#)

To access this page, select **Configure > Insights > Log Sources**.

Security products such as Juniper Secure Analytics (JSA) can act as a log source. You can create multiple log parsers for different log sources. The log source name is the hostname portion of the syslog message that Security Director Insights uses to identify the log source, and how Security Director Insights will parse its logged events.

Starting in Security Director Insights Release 21.3, you can enable Security Director log collector to receive logs from Junos only. Use the `set log-collector junoslog-only` CLI command in the application mode, as shown in [Figure 75 on page 1105](#).

Figure 75: Enable Junoslog-Only Mode

```

Welcome admin. It is now Mon Nov  8 17:23:40 UTC 2021
i:Core# applications
Entering the Applications configuration mode...
i:Core#(applications)# set log-collector junoslog-only on

Enabled Junos Only mode in SD Log Collector

i:Core#(applications)# █

```

Tasks You Can Perform

You can perform the following tasks from the Log Sources page:

- Add log sources. See *Add a Log Source*.
- Edit and delete log sources. See *Edit and Delete a Log Source*.
- View log statistics. See *View Log Statistics*.
- Enable or disable the third-party log sources by toggling the **Enable Third-Party Log Sources** option.

If you enable this option, support for Junos Release 21.X logs is disabled. If you disable this option, support for Junos Release 21.X logs is enabled.

Field Descriptions

[Table 325 on page 1105](#) provides guidelines on using the fields on the Log Sources page.

Table 325: Fields on the Log Sources Page

| Field | Description |
|-----------------------|--|
| Log Source Identifier | Specifies the unique string that needs to be looked for. |
| Parser | Specifies the name of the log parser assigned to that particular log source. |
| Severity | Specifies the severity of the log parser. |

Table 325: Fields on the Log Sources Page *(Continued)*

| Field | Description |
|---------|---|
| Actions | Specifies different actions that you can take for a log source. |

RELATED DOCUMENTATION

Add a Log Source

Edit and Delete a Log Source

View Log Statistics

Add a Log Source

Use the Add Log Source page to create a log source and assign the log parser with a severity level.

To add a log source:

1. Select **Configure > Insights > Log Sources**.
The Log Sources page appears.
2. Click **Create**.
The Add Log Source page appears.
3. Complete the configuration according to the guidelines provided in [Table 326 on page 1106](#).
4. Click **Save**.
A new log source is created and listed on the Log Sources page.

Table 326: Fields on the Add Log Source Page

| Setting | Guideline |
|-----------------------|---|
| Log Source Identifier | Enter a unique name for the log source. |
| Parser | Select a required log parser from the list. |
| SSL | You can enable or disable SSL. |

Table 326: Fields on the Add Log Source Page *(Continued)*

| Setting | Guideline |
|------------------|--|
| Default Severity | Assign a default severity level from the list. |

RELATED DOCUMENTATION

| |
|-------------------------------------|
| <i>About the Log Sources Page</i> |
| <i>Edit and Delete a Log Source</i> |
| <i>View Log Statistics</i> |

Edit and Delete a Log Source

IN THIS SECTION

- [Edit a Log Source | 1107](#)
- [Delete a Log Source | 1108](#)

You can edit and delete log sources from the Log Sources page.

Edit a Log Source

To edit a log source:

1. Select **Configure>Insights>Log Sources**.
The Log Sources page appears.
2. Select the log source that you want to edit, click the pencil icon.
The Update Log Sources page appears, displaying the same fields that were presented when you added new log sources.
3. Modify the log source fields.
4. Click **Save** to save your changes.

You are taken to the Log Sources page. A confirmation message appears, indicating the status of the edit operation.

Delete a Log Source

To delete a log source:

1. Select **Configure>Insights>Log Sources**.

The Log Sources page appears.

2. Select the log source that you want to delete, click the delete icon.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the log source.

A confirmation message appears, indicating the status of the delete operation.

RELATED DOCUMENTATION

About the Log Sources Page

Add a Log Source

View Log Statistics

View Log Statistics

The counter for each log source shows the number of logs collected over five minutes, one hour, one day, one week intervals, and a total count, broken down by the fields you chose when creating the custom log parser.

To view logs statistics:

1. Select **Configure>Insights>Log Sources**.

The Log Sources page appears.

2. Click **Counters**.

The All Logs page appears.

The logs statistics may include the following information:

- All Incoming Logs: Aggregate (lifetime), Last five minutes, Last one hour, Last twenty four hours, and Last seven days

- All Created Events: Aggregate(lifetime), Last five minutes, Last one hour, Last twenty four hours, and Last seven days

3. Click **Reset** to reset the counter or **Close** to close the page.

RELATED DOCUMENTATION

About the Log Sources Page

Add a Log Source

Edit and Delete a Log Source

About the Event Scoring Rules Page

IN THIS SECTION

- [Tasks You Can Perform | 1109](#)
- [Field Descriptions | 1110](#)

To access this page, select **Configure > Insights > Event Scoring Rules**.

You can use the event scoring rules to customize the log event to match your security operation center (SOC) processes. Rules comprise the following elements:

- **Condition**—The rules engine supports several match operations for different field types. For example, the matching operations include conditions such as Matches, Contains, Greater Than, and Less Than. You can combine multiple matching criteria in an ANY (OR) configuration or an ALL (AND) configuration. To apply a condition, select a normalized field from the event and match the criteria that trigger the rule.
- **Action**—An action is a response to an event. You can configure, increase, or lower the severity or look up a threat intelligence source.

Tasks You Can Perform

You can perform the following tasks from the Event Scoring Rules page:

- Create an event scoring rule. See *Create an Event Scoring Rule*.

- Edit and delete an event scoring rule. See *Edit and Delete Event Scoring Rules*.
- Enable or disable an event scoring rule.

Field Descriptions

Table 327 on page 1110 provides guidelines on using the fields on the Event Scoring Rules page.

Table 327: Fields on the Event Scoring Rules Page

| Field | Description |
|---------------------|---|
| Rule Name | Specifies the name of the rule. |
| Rule Description | Specifies the condition applied for the rule. |
| Match Any/All Rules | Specifies the matching criteria set for the rule. |
| Actions | Specifies the action to be taken when the condition of a rule is met. |
| Status | Specifies the status of the rule, whether enabled or disabled. |

Click **Enable** or **Disable** to either enable the event scoring rule or disable it.

RELATED DOCUMENTATION

| |
|--|
| <i>Create an Event Scoring Rule</i> |
| <i>Edit and Delete Event Scoring Rules</i> |

Create an Event Scoring Rule

You can create rules for the log events by defining the matching condition and corresponding actions to take when a condition is met.

To create a rule for scoring log events:

1. Select **Configure > Insights > Event Scoring Rules**.
The Event Scoring Rules page appears.

2. Click the plus icon (+).

A page appears, on which you can define the rule's condition and actions.

3. In the text box that appears at the top of the page, enter a unique name for the rule.

4. In the Condition section:

- Select a matching condition from the list: **Match Any** or **Match All**.
- Select the type of event from the list. You can select from options such as:
 - Detection Method
 - Endpoint IP
 - Endpoint User Name
 - Event Name
 - Event Severity
 - File Hash
 - File Name
 - File Path
 - HTTP Content-Type
 - HTTP Referer
 - HTTP Status
 - Log Severity
 - Progression
 - Signature ID
 - Threat Source Host Name
 - Threat Source IP
 - Threat Source User Name
 - URL
 - URL Hostname
 - URL Path
 - URL Query

- URL Scheme
 - Vendor Response
 - For the selected event, select a condition from the list.
 - For the selected condition, provide necessary additional data.
 - If you are defining more than one condition, click **Add**.
5. In the Action(s) section:
- a. Select a required action from the list, such as Raise or Lower Severity (by 0.25, 0.50, 0.75, or 1.0), Set Severity (value), Check feed, and Skip remaining rules.
 - b. For the selected action, assign the additional actions from the list.
 - c. If you are defining more than one action, click **Add**.
6. Click **Confirm**.
- A new rule is created and listed on the Event Scoring Rules page.

RELATED DOCUMENTATION

About the Event Scoring Rules Page

Edit and Delete Event Scoring Rules

Edit and Delete Event Scoring Rules

IN THIS SECTION

- [Edit an Event Scoring Rule | 1112](#)
- [Delete an Event Scoring Rule | 1113](#)

You can edit and delete event rules from the Event Scoring Rules page.

Edit an Event Scoring Rule

To edit an event scoring rule:

1. Select **Configure > Insights > Event Scoring Rules**.

The Event Scoring Rules page appears.

2. Select the rule that you want to edit, and click the pencil icon.

An edit page appears, displaying the same fields that were presented when you created a new rule.

3. Modify the rule.

4. Click **Confirm** to save your changes.

You are taken to the Event Scoring Rules page. A confirmation message appears, indicating the status of the edit operation.

Delete an Event Scoring Rule

To delete an event scoring rule:

1. Select **Configure > Insights > Event Scoring**.

The Event Scoring Rules page appears.

2. Select the rule that you want to delete, and click the delete icon.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the rule.

A confirmation message appears, indicating the status of the delete operation.

RELATED DOCUMENTATION

About the Event Scoring Rules Page

Create an Event Scoring Rule

About the Incident Scoring Rules Page

IN THIS SECTION

- [Tasks You Can Perform | 1114](#)
- [Field Descriptions | 1114](#)

To access this page, select **Configure > Insights > Incident Scoring Rules**.

Use incident scoring rules to score the risk of an incident by verifying that the indicators of compromise are already blocked from execution or mitigated by other events that contributed toward this incident. Rules comprise the following elements:

- Condition—The only matching condition available for any field type is *mitigated by another event*.
- Action—An action is a response to an incident. You can raise or lower the severity, set the severity value, or skip the remaining rules.

Tasks You Can Perform

You can perform the following tasks from the Incident Scoring Rules page:

- Create an incident scoring rule. See *Create an Incident Scoring Rule*.
- Edit and delete an incident scoring rule. See *Edit and Delete Incident Scoring Rules*.
- Enable or disable an incident scoring rule.

Field Descriptions

[Table 328 on page 1114](#) provides guidelines on using the fields on the Incident Scoring Rules page.

Table 328: Fields on the Incident Scoring Rules Page

| Field | Description |
|---------------------|---|
| Rule Name | Specifies the name of the rule. |
| Rule Description | Specifies the condition applied for the rule. |
| Match Any/All Rules | Specifies the match criteria set for the rule. |
| Actions | Specifies the action to be taken when the condition of a rule is met. |
| Status | Specifies the status of the rule, whether enabled or disabled. |

RELATED DOCUMENTATION

[Create an Incident Scoring Rule](#)

Create an Incident Scoring Rule

You can create rules for incidents by defining the matching condition and corresponding actions to take when a condition is met.

To create a rule for scoring incidents:

1. Select **Configure > Insights > Incident Scoring Rules**.

The Incident Scoring Rules page appears.

2. Click the plus icon (+).

A page appears, on which you can define the rule's condition and actions.

3. In the Rule Description field, enter a unique name for the rule.

4. In the Condition section:

- a. Select a matching condition from the list: **Match Any** or **Match All**.
- b. Select the type of incident from the list: **File Hash**, **Threat Source IP**, or **URL**.
- c. For the selected incident, select **mitigated by another event** as the condition.



NOTE: To add multiple conditions, click **Add**.

5. In the Action(s) section:

- a. Select a required action from the list, such as **Raise or Lower Severity (%)**, **Set Severity (value)**, or **Skip remaining rules**.
- b. Based on the action you have selected, provide additional data.



NOTE: To add multiple actions, click **Add**.

6. Click **Confirm**.

A new rule is created and listed in the Incident Scoring Rules page.

Click **Enable** or **Disable** to either enable the incident scoring rule or disable it.

RELATED DOCUMENTATION

About the Incident Scoring Rules Page

Edit and Delete Incident Scoring Rules

IN THIS SECTION

- [Edit an Incident Scoring Rule | 1116](#)
- [Delete an Incident Scoring Rule | 1116](#)

You can edit and delete an incident scoring rule from the Incident Scoring Rules page.

Edit an Incident Scoring Rule

To edit an incident scoring rule:

1. Select **Configure** > **Insights** > **Incident Scoring Rules**.

The Incident Scoring Rules page appears.

2. Select the rule that you want to edit, and click the pencil icon.

An edit page appears, displaying the same fields that were presented when you created a new rule.

3. Modify the rule.

4. Click **Confirm** to save your changes.

You are taken to the Incident Scoring Rules page. A confirmation message appears, indicating the status of the edit operation.

Delete an Incident Scoring Rule

To delete an incident scoring rule:

1. Select **Configure** > **Insights** > **Incident Scoring Rules**.

The Incident Scoring Rules page appears.

2. Select the rule that you want to delete, and click the delete icon.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the rule.

A confirmation message appears, indicating the status of the delete operation.

RELATED DOCUMENTATION

About the Incident Scoring Rules Page

Create an Incident Scoring Rule

Shared Objects-Geo IP

IN THIS CHAPTER

- [Creating Geo IP Policies | 1118](#)
- [Geo IP Overview | 1120](#)
- [Delete and Replace Policies and Objects | 1120](#)

Creating Geo IP Policies

You can create Geo IP policies from the Geo IP policies page.

Before You Begin

- You must have Juniper ATP Cloud account to receive Geo IP feeds. Make sure you configure the necessary steps for Juniper ATP Cloud before creating a Geo IP policy.
- Geo IP filtering is a useful tool when you are experiencing certain types of attacks, such as DDOS from specific geographical locations.
- If you are using Juniper ATP Cloud without Policy Enforcer, you must select your Geo IP policy as the source and/or destination of a firewall rule to apply it.

To create a Geo IP policy:

1. Select **Configure>Shared Objects>Geo IP**.
2. Click the **+** icon.
3. Complete the configuration by using the guidelines in [Table 329 on page 1118](#) below.
4. Click **OK**.

Table 329: Fields on the Geo IP Policy Page

| | |
|------|--|
| Name | Enter a unique string that must begin with an alphanumeric character and can include underscores; no spaces allowed; 63-character maximum. |
|------|--|

| | |
|---------------|---|
| Description | Enter a description; maximum length is 1024 characters. You should make this description as useful as possible for all administrators. |
| Countries | Select the check box beside the countries in the Available list and click the > icon to move them to the Selected list. The countries in the Selected list will be included in the policy and action will be taken according to their threat level. |
| Block Traffic | Choose what traffic to block from the selected countries. Incoming traffic, Outgoing traffic, or Incoming and Outgoing traffic. (Policy Enforcer only) |
| Log Setting | Choose to log all traffic or only blocked traffic. (Policy Enforcer only) |

Once you have a Geo IP policy, you assign it to one more groups (Policy Enforcer only):

To assign a Geo IP policy to a group or groups:

1. In the Group column, click the **Assign to Groups** link that appears here when there are no groups assigned or click the group name that appears in this column to edit the existing list of assigned groups.
2. In the Assign to Groups page, select the check box beside a group in the Available list and click the > icon to move it to the Selected list. The groups in the Selected list will be assigned to the policy.
3. Click **OK**.
4. Once one or more groups have been assigned, a **Ready to Update** link appears in the Status column. You must update to apply your new or edited policy configuration. Clicking the Ready to Update link takes you the Threat Policy Analysis page. See *Threat Policy Analysis Overview*. From there you can view your changes and choose to Update now, Update later, or Save them in draft form without updating.
5. If you are using Juniper ATP Cloud without Policy Enforcer, you must select your Geo IP policy as the source and/or destination of a firewall rule. Navigate to **Configure > Firewall Policy > Policies**.

RELATED DOCUMENTATION

Creating Policy Enforcement Groups

Creating Threat Prevention Policies

Threat Policy Analysis Overview

Geo IP Overview

Configuring Cloud Feeds Only

Geo IP Overview

Geo IP refers to the method of locating a computer terminal's geographic location by identifying that terminal's IP address. A Geo IP feed is an up-to-date mapping of IP addresses to geographical regions. By mapping IP address to the sources of attack traffic, geographic regions of origin can be determined, giving you the ability to filter traffic to and from specific locations in the world.

RELATED DOCUMENTATION

Creating Geo IP Policies

Threat Prevention Policy Overview

[Juniper ATP Cloud Realm Overview](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 1120](#)
- [Replace Policies and Objects | 1121](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.

The addresses, services, or variables page appears.

2. Right-click the shared object that you want to replace, or click **Replace** from the More list.

You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.

3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

| [Creating Geo IP Policies](#) | 1118

Shared Objects-Policy Enforcement Groups

IN THIS CHAPTER

- [Creating Policy Enforcement Groups | 1122](#)
- [Policy Enforcement Groups Overview | 1124](#)

Creating Policy Enforcement Groups

You can create policy enforcement groups from the policy enforcement groups page.

Before You Begin

- Know what type of endpoints you are including in your policy enforcement group: IP address/subnet, or location.
- Determine what endpoints you will add to the group based on how you will configure threat prevention according to location, users and applications, or threat risk.
- Keep in mind that endpoints *cannot* belong to multiple policy enforcement groups.

To create a policy enforcement group:

1. Select **Configure>Shared Objects>Policy Enforcement Groups**.
2. Click the + icon.
3. Complete the configuration by using the guidelines in the [Table 330 on page 1122](#) below.
4. Click **OK**.

Table 330: Fields on the Policy Enforcement Group Page

| Field | Description |
|-------|--|
| Name | Enter a unique string that must begin with an alphanumeric character and can include only dashes and underscores; no spaces allowed; 32-character maximum. |

Table 330: Fields on the Policy Enforcement Group Page (*Continued*)

| Field | Description |
|---------------|---|
| Description | Enter a description; maximum length is 64 characters. You should make this description as useful as possible for all administrators. |
| Group Type | Select a group type from the available choices. IP Address/Subnet or Location. |
| Connector IPs | <p>This field is available only if the Group Type field is IP Address/Subnet</p> <p>The subnets of all connectors added in the Connector page are dynamically listed in the Available column. If the Group Type is IP Address/Subnet, the subnets within the connector instances that have the threat remediation enabled are only listed.</p> <p>When using Junos Space, Policy Enforcer is able to dynamically discover subnets configured on Juniper switches. Policy Enforcer does not have the same insight with third-party devices. Therefore you can add subnets to your connector configuration and select them here. This allows you to selectively apply policies to those subnets.</p> <p>If you have not configured a connector, you will see only Junos Space subnets discovered by Policy Enforcer. If you have a connector configured, you can see the subnets of a connector in the Available column. Hover over subnets to view the description for these subnets entered during the connector creation. You will not see any description if it is not entered during creating a connector. The description will show “No description available” for subnets that come from Junos Space.</p> <p>The Available and Selected columns have filters listed with connectors or Space. You can choose a connector and filter only the subnets belonging to that particular connector. The result shows the name of a device to which the subnet belongs and also the type of the device.</p> <p>You can also use the search bar to search and filter the result based on subnet, name of the device, or type of the device.</p> <p>Click Refresh Available IPs to refresh the available IP addresses or subnets. If you edit any selected items in the Selected column, the list is refreshed to the initial selected list after the refresh. A progress bar is shown with the refresh progress in percentage.</p> <p>In a scenario where there are no IP addresses or subnets, the refresh will still be successful. A message is displayed showing that the refresh was successful but there are no IP addresses or subnets found.</p> |

Table 330: Fields on the Policy Enforcement Group Page (*Continued*)

| Field | Description |
|---------------|---|
| Additional IP | <p>This field is available only if the Group Type field is IP Address/Subnet</p> <p>Enter an IP address and select the connector type from the list to add to PEG. The IP address must be within the subnet range of the selected connector. Click Add to add the additional IP address to the Selected column of the Connector IPs field.</p> <p>A validation is performed to check if the additional IP address is within the subnet range of the selected connector. If not, an error message is shown to enter the IP address within the subnet range.</p> |
| Sites | <p>Sites with the threat remediation enabled instances are only listed, if the Group Type is Location. Select the check box beside the sites in the Available list and click the > icon to move them to the Selected list.</p> <p>The endpoints in the Selected list will be included in the policy enforcement group.</p> |

You can create a policy enforcement group with subnets from different connectors based on how they have grouped their network segments. For example, If you have Junos Space EX switch with subnets HR: 1.1.1.1/24 and Finance: 2.2.2.2/24, ClearPass connector with subnets HR: 1.1.1.1/24 and Marketing: 2.2.2.2/24, Cisco ISE with subnets HR: 1.1.1.1/24 and Finance: 2.2.2.2/24. You can create a single policy enforcement group and name it as HR by choosing the following subnets: Junos Space EX HR: 1.1.1.1/24, ClearPass connector subnet HR: 1.1.1.1/24, and Cisco ISE connector subnet HR: 1.1.1.1/24.

RELATED DOCUMENTATION

Policy Enforcement Groups Overview

Using Guided Setup for Juniper ATP Cloud with Juniper Connected Security

Policy Enforcement Groups Overview

A policy enforcement group is a grouping of endpoints to which threat prevention policies are applied. Create a policy enforcement group by adding endpoints (firewalls, switches, subnets, set of end users) under one common group name and later applying a threat prevention policy to that group.

RELATED DOCUMENTATION

Creating Policy Enforcement Groups

Threat Prevention Policy Overview

Shared Objects-Addresses

IN THIS CHAPTER

- [Addresses and Address Groups Overview | 1126](#)
- [Creating Addresses and Address Groups | 1127](#)
- [Import and Export CSV Files | 1131](#)
- [Assigning Addresses and Address Groups to Domains | 1134](#)
- [Showing Duplicate Policies and Objects | 1135](#)
- [Delete and Replace Policies and Objects | 1136](#)
- [Addresses Main Page Fields | 1137](#)

Addresses and Address Groups Overview

Addresses specify an IP address or a hostname. You can create addresses that can be used across all devices managed by Security Director. Addresses are used in firewall, *NAT*, *IPS*, and *VPN* services and apply to corresponding SRX Series devices. If you only know the hostname, you enter it into the Hostname field and use the address resolution option to resolve it to an IP address. You can also resolve an IP address to the corresponding hostname.

Once you create an address, you can combine it with other addresses to form an address group. Address groups are useful when you want to apply the same policy to multiple addresses.

Security Director manages its address book at the global level, assigning objects to devices that are required to create policies. An address book is a collection of addresses and address groups that are available in a *security zone*. If the device is capable of using a global address book, Security Director pushes address objects used in the policies to the device global address book.



NOTE: Starting in Junos Space Security Director Release 21.1, you can import a valid source or destination inline address for an IPS Policy from an SRX Series device to Security Director. In the case of an inline address, the address object can be assigned in the device without creating the address object in the address-book. After import of

inline address, you can edit the inline address in shared object. You can edit the name and IP address listed on the Addresses page. This is applicable for devices with Junos OS release 18.1 or later.

RELATED DOCUMENTATION

[Creating Addresses and Address Groups | 1127](#)

[Finding Usages for Policies and Objects | 1165](#)

[Assigning Policies and Profiles to Domains | 567](#)

[Viewing Policy and Shared Object Details](#)

Creating Addresses and Address Groups

Before You Begin

- Read the topic.
- Decide on the type of address object to define: Host, Range, Network, Wildcard, or DNS Host.
- Review the addresses main page for an understanding of your current data set. See "[Addresses Main Page Fields](#)" on [page 1137](#) for field descriptions.

Use the Addresses page to create addresses that can be used across all devices managed by Security Director. Addresses are used in firewall, *NAT*, IPS, and *VPN* services and apply to corresponding SRX Series devices.

Once you create an address, you can combine it with other addresses to form an address group. Address groups are useful when you want to apply the same policy to multiple devices.

To create an *address object*:

1. Select **Configure > Shared Objects > Addresses**.
2. Click **Create**.
3. Complete the configuration according to the guidelines provided in [Table 331 on page 1128](#) and [Table 332 on page 1130](#).
4. Click **OK**.

A new address or address group with your configurations is created. You can use this object in policies. You can also assign it to a domain; see [Assigning Policies and Profiles to Domains](#).

Table 331: Fields on the Create Addresses Page

| Setting | Guideline |
|-------------|---|
| Object Type | Select Address or Address Group. If you select Address Group, then the screen changes so you can select the addresses you want to include in your address group. Table 332 on page 1130 describes address group configuration parameters. |
| Name | Enter a unique name for the address. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed. |
| Description | Enter a description for your address; maximum length is 1,024 characters. You should make this description as useful as possible for all administrators. |

Table 331: Fields on the Create Addresses Page (*Continued*)

| Setting | Guideline |
|---------|--|
| Type | <p>Select a type of address and fill in the corresponding fields. Available types are:</p> <ul style="list-style-type: none"> • Host <ul style="list-style-type: none"> • Host IP—Enter the IPv4 or IPv6 host IP address. For example: 1.2.3.4 or 0:0:0:0:FFFF:0102:0304. If you do not know the IP address, you can enter the hostname and click Look up hostname. • Hostname—Enter the hostname. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed. If you do not know the host name, you can enter the IP address and click Look up IP address. For example, enter www.company.com and click Look up IP address. Hostname lookup is supported for IPv4 and IPv6 addresses. • Range <ul style="list-style-type: none"> • Start Address—Enter a starting IPv4 or IPv6 address for the address range. For example: 10.0.0.0 or 0:0:0:0:FFFF:A00:0. • End Address—Enter an ending IPv4 or IPv6 address for the address range. The range is validated once you enter the address. <p>NOTE: An address range is configured on managed device(s) as address-set with one or more network address objects covering the specified address range. Security Director supports range address objects in 'mem*' format.</p> • Network <ul style="list-style-type: none"> • Network—Enter the network IP address. For example: 10.0.0.0. IPv6 is also supported. For example: 4001:334:244:2255:24a2:244:: • Subnet Mask—Enter the <i>subnet mask</i> for the network range. For example, IPv4 netmask: 10.0.0.0/24. The subnet mask is validated as you enter it. You should enter the correct subnet mask in accordance with the network value. For example, IPv6 netmask: 4001:334:244:2255:24a2:244:: / 126. • Wildcard <ul style="list-style-type: none"> • Network—Enter the network IPv4 or IPv6 address. For example: 1.2.3.4 or 2001:4860:800f::68 • Wildcard Mask—Enter the wildcard mask for the network range. For example: 0.0.0.255. |

Table 331: Fields on the Create Addresses Page (*Continued*)

| Setting | Guideline |
|-----------------|---|
| | <ul style="list-style-type: none"> • DNS Host <ul style="list-style-type: none"> • DNS Name—Enter the DNS name. For example: www.example.com. Only alphanumeric characters, dashes, and periods are accepted. This name cannot exceed 69 characters and must end with an alphanumeric character. • DNS Type—Select the DNS type as IPv4-only or IPv6-only. <p>Starting in Security Director Release 18.3R1, while creating an address object, if you enter a duplicate host IP address, address range, network IP address, wildcard mask, or DNS name, then the creation of addresses with duplicate content is based on the shared objects settings in Junos Space Network Management Platform.</p> <p>By default, you can create duplicate address. If you do not want to allow creation of duplicate addresses in Security Director, go to Network Management Platform and select Administration>Application>Modify Application Settings>Shared Objects. Select the check box to prevent creation of addresses with duplicate content. When any duplicate content is selected in Security Director, an error message is displayed.</p> |
| Assign Metadata | <p>Select the required metadata from the list to assign to an address object.</p> <p>Only host and range address types are supported.</p> <p>When associating the address (host or range) with metadata, you can use only AND operator.</p> <p>For example: Location = Bengaluru AND Location = Chennai AND Zone = East.</p> |

Table 332: Address Group Settings

| Setting | Guideline |
|-------------|--|
| Object Type | Select Address Group. When you select Address Group, then the screen changes so you can select the addresses you want to include in your address group. |
| Name | Enter a unique name for the address group. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed. |
| Description | Enter a description for your address group. You should make this description as useful as possible for all administrators. |

Table 332: Address Group Settings *(Continued)*

| Setting | Guideline |
|-----------|---|
| Addresses | <p>Select the check box beside each address you want to include in the address group. Click the arrow to move the selected address or addresses from the Available column to the Selected column. Note that you can use the fields at the top of each column to search for addresses.</p> <p>While address groups are being created, if the selected address groups are already available, then the creation of address groups with duplicate content is based on the shared objects settings in Junos Space Network Management Platform.</p> <p>By default, you can create duplicate address groups. If you do not want to allow creation of duplicate addresses in Security Director, go to Network Management Platform and select Administration > Application > Modify Application Settings > Shared Objects. Select the check box to prevent creation of address groups with duplicate content. When any duplicate content is selected in Security Director, an error message is displayed.</p> |

RELATED DOCUMENTATION

[Addresses and Address Groups Overview | 1126](#)

[Finding Usages for Policies and Objects | 1165](#)

[Showing Duplicate Policies and Objects | 1167](#)

[Assigning Policies and Profiles to Domains | 567](#)

[Viewing Policy and Shared Object Details](#)

Import and Export CSV Files

IN THIS SECTION

- [Import from a CSV file | 1132](#)
- [Export to a CSV File | 1134](#)

You can export all the columns on the Addresses page to a comma-separated value (.csv) file. You can also import information from a CSV file.

Starting in Junos Space Security Director Release 20.3, while importing an address object, you can resolve object conflicts, if any. Junos Space Security Director uses object name as the unique identifier for the object (per domain). During import, all the Security Director objects and device objects are compared by name.

- If the object name does not exist in Security Director, the object is added to Security Director.
- If the object name exists in Security Director with the same content, the existing object in Security Director is used.
- If the object name exists in Security Director with different content, the object conflict resolution screen is displayed.



NOTE: Objects that are not linked to a policy are imported into Security Director and then removed from the device configuration as part of device update.

Import from a CSV file

To import configurations from a CSV file:

1. Select **Configure > Shared Objects > Addresses**.

The Addresses page is displayed.

2. Right-click an address object and select **Import from CSV**. You can also select **Import from CSV** from the More list.

The Addresses Import CSV Wizard page is displayed.

3. Click **Browse** to locate the CSV file that you want to import and then click **Upload** to upload the file to the Security Director database.



NOTE: To view a sample CSV file, click **View sample CSV file**.

4. Click **Next**.

5. Resolve object conflicts, if any.

An object conflict occurs when the name of the object to be imported matches an existing object, but the definition of the object does not match. You can take the following actions for the conflicting objects:

- **Rename Object**—Provide a new name to the conflicting object. "_1" is added by default to the name, or users can specify a new unique name. Device Preview or Update deletes the original object and adds the object with the new name.
- **Overwrite with Imported Value**—Overwrite the existing object with the new object. The object is replaced in Security Director with the new object. The change appears in the next preview/update for all other devices that use this object.

- **Keep Existing Object**—Keep the existing object and ignore the new object. The object in Security Director is used instead of the device object.

6. Click **Finish**.

A summary of configuration changes is displayed.

7. Click **OK** to import the CSV file.

Example: During import, when object conflict occurs between the device and Security Director you must choose a conflict resolution as in [Table 333 on page 1133](#).

Table 333: OCR While Importing Addresses to Security Director

| Object Name | Object Type | Value | Imported Value | Conflict Resolution | New Object Name |
|-------------|-------------|---------------|----------------|-------------------------------|-----------------|
| Address1 | Address | 198.51.100.10 | 203.0.113.10 | Keep Existing Object | Address1_1 |
| Address2 | Address | 198.51.100.20 | 203.0.113.20 | Overwrite with Imported value | Address2_1 |
| Address3 | Address | 198.51.100.30 | 203.0.113.30 | Rename Object | Address3_1 |

The object values and the result after resolving conflicts are listed in [Table 334 on page 1133](#).

Table 334: After Importing Addresses to Security Director

| Discovered Object Name in Security Director | Discovered Value in Security Director | Result |
|---|---------------------------------------|--------------------|
| Address1 | 198.51.100.10 | No change |
| Address2 | 203.0.113.20 | Value changed |
| Address3 | 198.51.100.30 | No change |
| Address3_1 | 203.0.113.30 | Address3_1 created |



NOTE: Once the initial conflict is resolved, the object conflict resolution checks for further conflicts with the new name and definition until resolution is complete. If

Security Director finds further conflicts, the Conflict Resolution page is refreshed to display the new conflicts.

Export to a CSV File

To export configurations to a CSV file:

1. Select **Configure > Shared Objects > Addresses**.

The Addresses page is displayed.

2. Right-click the address object that you want to export and select **Export to CSV**. You can also select **Export to CSV** from the More list.

The Export Addresses pop-up is displayed.

3. Click **Export All** or **Export Selected**.

The Addresses Export CSV Status page is displayed with the status of download percentage.

When the CSV file is available, you can open or save the file.

RELATED DOCUMENTATION

[Creating Addresses and Address Groups | 1127](#)

[Addresses Main Page Fields | 1137](#)

Assigning Addresses and Address Groups to Domains

You can assign or reassign addresses to different *domain*. You can assign only one address at a time; multiple selections are not allowed. Before assigning an address to other domains, Security Director checks for the validity of the move. For example, you cannot move an address in the Global domain to a child domain, if it is used by a policy in the Global domain. A warning message is shown for such scenarios.

To assign an address to a domain:

1. Select **Configure and Provision > Shared Objects > Addresses**.

The Address page appears.

2. Select the address or address group, right click and select **Assign Address to Domain**.

The Assign Address to Domain page appears.

3. Select the domain assignment.

4. Click **Assign**.

The selected domain is assigned to the address.

Showing Duplicate Policies and Objects

To display duplicate objects:

1. Select the check box beside the object(s).
2. Right-click the object(s) or select **Show Duplicates** from the More list.
The Show Duplicates page appears, which displays the duplicate objects.
3. Select the duplicate object(s), and perform any of the following actions:

- To merge policies or objects, select multiple policies, right-click or select **Merge** from the More list.

The merge operation deletes or replaces the reference for only the custom services and not the predefined services. If the selected duplicate objects are referenced in any other services (firewall policy) and security objects (service groups), a warning message is provided before the objects are merged.

Starting in Junos Space Security Director Release 18.4, you can view duplicate objects in Show Duplicates page from parent domain and subdomains. You can merge shared objects from parent domain to subdomain and vice versa.



NOTE: You can view the duplicate objects of subdomain only if the users of the subdomain have read and execute privileges to parent domain objects.

- To locate the usage of the duplicate objects, select a policy or shared object, right-click or select **Find usage** from More list.
- To delete the policies or shared objects, select the policies or shared objects, right-click and select **Delete** or click delete icon. You can delete objects only from current domain. If you select multiple objects from across the domains, then the delete option is disabled.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 1136](#)
- [Replace Policies and Objects | 1136](#)
- [Delete Unused Policies and Objects | 1137](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:


1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.
3. Click **Yes** to continue the replacement operation.

Delete Unused Policies and Objects

You can clear all unwanted policies or objects that are not used anywhere in your network.

To delete unused policies or objects:

- 1. Select **Configure** and select the landing page for type of policy or object you are deleting.
- 2. Select the check boxes beside the items that you want to delete. Right-click on the policy or object or click More from the landing page.
A list of actions appears.
- 3. Select **Delete Unused Items**.
A confirmation window appears before you can delete the unused policies or objects.
- 4. Click **Yes** to confirm the deletion.
All unused policies or objects are deleted.

 **NOTE:** If you want to delete unused address and address groups from the device when the device is updated from Security Director, go to Junos Space Network Management Platform, select **Administration > Application > Modify Application Settings > Update Device** and select **Delete unused addresses and address groups** check box.

RELATED DOCUMENTATION

| [Creating Addresses and Address Groups](#) | 1127

Addresses Main Page Fields

Use address and address groups to define policies across devices. Addresses are a combination of IP addresses, hostnames, and domains and once created, can be combined to form address groups.

Table 335: Addresses Main Page Fields

| Field | Description |
|-------|---------------------------------------|
| Name | Name of the address or address group. |

Table 335: Addresses Main Page Fields *(Continued)*

| Field | Description |
|-------------|---|
| Type | Type determines how the address is defined: host, range, network, wildcard, DNS host, or address group. |
| Hostname | Name of the host for the selected type. |
| IP Address | IP address of the host for the selected type or members of the address group. |
| Description | Description of your address or address group. |
| Domain | Domain or child domain of the address or address group. |

RELATED DOCUMENTATION

- [Addresses and Address Groups Overview | 1126](#)
- [Creating Addresses and Address Groups | 1127](#)

Shared Objects-Services

IN THIS CHAPTER

- [Services and Service Groups Overview | 1139](#)
- [Creating Services and Service Groups | 1140](#)
- [Import and Export CSV Files | 1147](#)
- [Delete and Replace Policies and Objects | 1150](#)
- [Showing Duplicate Policies and Objects | 1151](#)

Services and Service Groups Overview

A service in Security Director refers to an application on a device. For example, Domain Name Service (*DNS*). Services are based on protocols and ports used by an application, and when added to a policy, a configured service can be applied across all devices managed by Security Director. The protocols used to create a service include: *TCP*, *UDP*, *MS-RPC*, *SUN-RPC*, *ICMP*, and *ICMPv6*. Security Director also includes predefined, commonly used services, and you cannot modify or delete them.

Once you create a service, you can combine it with other services to form a service group. Service groups are useful when you want to apply the same policy to multiple services. This lets you create fewer policies.

Note that Security Director manages services in the same way it manages addresses, by always deleting the unused services (those services that are not referenced by any policy on the device) from the device during publish or update. If the option is disabled, Security Director will never try to delete a service from the device, even if that service is unused.

RELATED DOCUMENTATION

- [Creating Services and Service Groups | 1140](#)
- [Finding Usages for Policies and Objects | 1165](#)
- [Showing Duplicate Policies and Objects | 1167](#)

Creating Services and Service Groups

Before You Begin

- Read the topic.
- Gather all the information for the protocols you are using to create the service, including source and destination ports and protocol type such as TCP or UDP.
- Check to see if cloning an existing service might be more efficient than creating a new one.
- Review the services main page for an understanding of your current data set. See for field descriptions.

A service in Security Director refers to an application on a device, such as Domain Name Service (*DNS*). Services are based on protocols and ports used by an application, and when added to a policy, a configured service can be applied across all devices managed by Security Director. Once you create a service, you can combine it with other services to form a service group. Service groups are useful when you want to apply the same policy to multiple services.

The protocols available to create a service include: *TCP*, *UDP*, *SUN-RPC*, *MS-RPC*, *ICMP*, *ICMPv6*, and *Other*.

During a device update, you can delete all unused services and service groups by selecting an option available under Update Device in Junos Space. By default, this option is enabled when you perform a fresh install of Security Director or upgrade from the previous release.



NOTE: There are Juniper Networks defined service objects for commonly used services, but you cannot modify or delete them. These services appear when you install a fresh version of Security Director.

To configure a service:

1. Select **Configure > Shared Objects > Services**.
2. Click **Create**.
3. Complete the configuration according to the guidelines in [Table 336 on page 1141](#) through [Table 338 on page 1146](#).
4. Click **OK**.

A new service or service group with your configurations is created. You can use this object in policies. You can also assign it to a domain; see ["Assigning Policies and Profiles to Domains" on page 567](#).

Table 336: Service Settings

| Setting | Guideline |
|----------------------------|--|
| <i>General Information</i> | |
| Object Type | Select Service or Service Group. If you select Service Group, then the screen changes so you can select the services you want to include in your service group. |
| Name | Required. Enter a unique name for the service. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed. |
| Description | Enter a description for your service. You should make this description as useful as possible for all administrators. |
| <i>Create Protocol</i> | |
| Name | Enter a unique name for the protocol. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed. |
| Description | Enter a description for your protocol. It cannot exceed 1,024 characters. |
| Type | Select a type of protocol and fill in the corresponding fields. Available types are: TCP, UDP, ICMP, SUN-RPC, MS-RPC, ICMPv6, and Other. If you select TCP, continue with this table. See Table 2 for the other protocol types. |
| Destination Port | <p>Enter a destination port number for TCP. This is a value or value range from 0 through 65,535.</p> <p>If you do not provide any value in the destination port field, a message is displayed that the default value will be Any. "Any" represents null or empty. Click Cancel and enter the destination port or click OK to continue with the default value.</p> |
| <i>Advanced Settings</i> | |

Table 336: Service Settings (Continued)

| Setting | Guideline |
|------------------------------|--|
| Enable Inactivity Timeout | Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes. |
| ALG | Select an <i>ALG</i> (Application Layer Gateway) service option if applicable. |
| Source Ports and Port Ranges | Enter the source port or port range for the protocol. If you do not provide any value in the source port field, a message is displayed that the default value will be Any. "Any" represents null or empty. Click Cancel and enter the source port or click OK to continue with the default value. |



NOTE: Starting in Security Director Release 18.3R1, you cannot create a service object with duplicate protocol details such as name, destination port, timeout duration, and source port or port ranges. The creation of services with duplicate content is based on the shared objects settings in Junos Space Network Management Platform.

By default, you can create duplicate service objects. If you do not want to allow creation of duplicate services in Security Director, go to **Network Management Platform** and select **Administration>Application>Modify Application Settings>Shared Objects**. Select the check box to prevent creation of services with duplicate content. When any duplicate content is selected in Security Director, an error message is displayed.

[Table 337 on page 1142](#) includes the settings and guidelines for the various protocol types.

Table 337: Create Protocol Type Settings

| Setting | Guideline |
|------------------|--|
| <i>UDP</i> | |
| Destination Port | Enter a destination port number for UDP. This is a value or value range from 0 through 65,535. If you do not provide any value in the destination port field, a message is displayed that the default value will be Any. "Any" represents null or empty. Click Cancel to enter the destination port or click OK to continue with the default value. |

Table 337: Create Protocol Type Settings *(Continued)*

| Setting | Guideline |
|--|--|
| <i>Advanced Settings</i> | |
| Enable Inactivity Timeout | Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes. |
| ALG | Select an ALG (Application Layer Gateway) service option if applicable. |
| Source Ports and Port Ranges | <p>Enter a source port or port range for UDP. This is a value or value range from 0 through 65,535.</p> <p>If you do not provide any value in the source port field, a message is displayed that the default value will be Any. "Any" represents null or empty. Click Cancel to enter the source port or click OK to continue with the default value.</p> |
| <i>ICMP</i> | |
| Enable Inactivity Timeout | Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes. |
| ICMP Type | Enter a value from 0 through 225 for the ICMP message type. For example, enter 1 for host unreachable. You can find these values in RFC 792. |
| ICMP Code | Enter a value from 0 through 225 for the ICMP code. For example, enter 0 for echo reply. You can find these values in RFC 792. |
| <i>SUN-RPC</i> | |
| Destination Port (available if Enable ALG is selected) | <p>Enter a destination port for SUN-RPC. This is a value or value range from 0 through 65,535.</p> <p>If you do not provide any value in the destination port field, a message is displayed that the default value will be Any. "Any" represents null or empty. Click Cancel to enter the destination port or click OK to continue with the default value.</p> |

Table 337: Create Protocol Type Settings (*Continued*)

| Setting | Guideline |
|--|--|
| Enable Inactivity Timeout | Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes. |
| Enable ALG | Not selected by default. If you enable ALG for this protocol, you must enter a destination port in the field that becomes available. |
| RPC Program Number | Enter a value or value range for the RPC (remote procedure call) service. For example, enter 100,017 for remote execution. You can find these values in RFC 5531. |
| Protocol Type | Select TCP or UDP for the protocol type. |
| <i>MS-RPC</i> | |
| Destination Port (available if Enable ALG is selected) | <p>Enter a destination port for MS-RPC. This is a value or value range from 0 through 65,535.</p> <p>If you do not provide any value in the destination port field, a message is displayed that the default value will be Any. "Any" represents null or empty. Click Cancel to enter the destination port and click OK to continue with the default value.</p> |
| Enable Inactivity Timeout | Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes. |
| Enable ALG | Not selected by default. If you enable ALG for this protocol, you must enter a destination port number in the field that becomes available. |
| UUID | Enter the corresponding <i>UUID</i> value for the MS-RPC service. For predefined values, refer to MS-RPC UUID Mappings. |
| Protocol Type | Select TCP or UDP for the protocol type. |
| <i>ICMPv6</i> | |

Table 337: Create Protocol Type Settings *(Continued)*

| Setting | Guideline |
|------------------------------|--|
| Enable Inactivity Timeout | Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes. |
| ICMP Type | Enter a value from 0 through 225 for the ICMPv6 message type. You can find these values in RFC 4443. |
| ICMP Code | Enter a value from 0 through 225 for the ICMPv6 code. You can find these values in RFC 4443. |
| Destination Port | <p>Use other to create protocols that do not match the provided type categories. Enter a destination port for the other protocol. This is a value or value range from 0 through 65,535.</p> <p>If you do not provide any value in the destination port field, a message is displayed that the default value will be Any. "Any" represents null or empty. Click Cancel to enter the destination port and click OK to continue with the default value.</p> |
| <i>Advanced Settings</i> | |
| Enable Inactivity Timeout | Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes. |
| ALG | Select an ALG (Application Layer Gateway) service option if applicable. |
| Source Ports and Port Ranges | <p>Enter the source port or port range for the other protocol.</p> <p>If you do not provide any value in the source port field, a message is displayed that the default value will be Any. "Any" represents null or empty. Click Cancel to enter the source port or click OK to continue with the default value.</p> |
| Protocol Number | Enter a protocol number for the protocol type. RFC 791 contains a list of protocols and their corresponding numbers. This number identifies the service in the next higher level in the protocol stack to which data is passed. |

Table 338 on page 1146 includes the settings and guidelines for service groups.

Table 338: Service Group Settings

| Setting | Guideline |
|----------------------------|--|
| <i>General Information</i> | |
| Object Type | Select Service Group. When you select Service Group, then the screen changes so you can select the services you want to include in your service group. |
| Name | Enter a unique name for the service group. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed. |
| Description | Enter a description for your service group. You should make this description as useful as possible for all administrators. |
| Services | <p>Select the check box beside each service you want to include in the service group. Click the arrow to move the selected service or services from the Available column to the Selected column. Note that you can use the fields at the top of each column to search for listed services.</p> <p>If the selected service groups are already available, the creation of service groups with duplicate content is based on the shared objects settings in Junos Space Network Management Platform.</p> <p>By default, you can create duplicate service groups. If you do not want to allow creation of duplicate service groups in Security Director, go to Network Management Platform and select Administration>Application>Modify Application Settings>Shared Objects. Select the check box to prevent creation of service groups with duplicate content. When any duplicate content is selected in Security Director, an error message is displayed.</p> |

RELATED DOCUMENTATION
[Services and Service Groups Overview | 1139](#)
[Finding Usages for Policies and Objects | 1165](#)
[Showing Duplicate Policies and Objects | 1167](#)
[Assigning Policies and Profiles to Domains | 567](#)
[Viewing Policy and Shared Object Details](#)

Import and Export CSV Files

IN THIS SECTION

- [Import from a CSV file | 1147](#)
- [Export to a CSV File | 1149](#)

You can export all the columns on the Services page to a comma-separated value (.csv) file. You can also import information from a CSV file.

Starting in Junos Space Security Director Release 20.3, you can import service objects from a CSV file. While importing a service object, you can resolve object conflicts, if any. Junos Space Security Director uses object name as the unique identifier for the object (per domain). During import, all the Security Director objects and device objects are compared by name.

- If the object name does not exist in Security Director, the object is added to Security Director.
- If the object name exists in Security Director with the same content, the existing object in Security Director is used.
- If the object name exists in Security Director with different content, the object conflict resolution screen is displayed.



NOTE: Objects that are not linked to a policy are imported into Security Director and then removed from the device configuration as part of device update.

Import from a CSV file

To import configurations from a CSV file:

1. Select **Configure > Shared Objects > Services**.

The Services page is displayed.

2. Right-click a service object and select **Import from CSV**. You can also select **Import from CSV** from the More list.

The Services Import CSV Wizard page is displayed.

3. Click **Browse** to locate the CSV file that you want to import and then click **Upload** to upload the file to the Security Director database.



NOTE: To view a sample CSV file, click [View sample CSV file](#).

4. Click **Next**.

5. Resolve object conflicts, if any.

An object conflict occurs when the name of the object to be imported matches an existing object, but the definition of the object does not match. You can take the following actions for the conflicting objects:

- **Rename Object**—Provide a new name to the conflicting object. "_1" is added by default to the name, or users can specify a new unique name. Device Preview or Update deletes the original object and adds the object with the new name.
- **Overwrite with Imported Value**—Overwrite the existing object with the new object. The object is replaced in Security Director with the new object. The change appears in the next preview/update for all other devices that use this object.
- **Keep Existing Object**—Keep the existing object and ignore the new object. The object in Security Director is used instead of the device object.

6. Click **Finish**.

A summary of configuration changes is displayed.

7. Click **OK** to import the CSV file.

Example: During import, when object conflict occurs between the device and Security Director you must choose a conflict resolution as in [Table 339 on page 1148](#).

Table 339: OCR While Importing Services to Security Director

| Object Name | Object Type | Value | Imported Value | Conflict Resolution | New Object Name |
|-------------|-------------|--|--|----------------------------------|-----------------|
| Service1 | Service | Service_1, Protocol:TCP, Destination Port:25 | Service_1, Protocol:TCP, Destination Port:26 | Rename Object | Service1_1 |
| Service2 | Service | Service_2, Protocol:TCP, Destination Port:30 | Service_2, Protocol:TCP, Destination Port:31 | Overwrite with Imported value | Service2_1 |
| Service3 | Service | Service_3, Protocol:TCP, Destination Port:40 | Service_3, Protocol:TCP, Destination Port:41 | Keep Existing Object | Service3_1 |

The object values and the result after resolving conflicts are listed in Table [Table 340 on page 1149](#).

Table 340: After Importing Services to Security Director

| Discovered Object Name in Security Director | Discovered Value in Security Director | Result |
|---|--|--------------------|
| Service1 | Service_1, Protocol:TCP, Destination Port:25 | No change |
| Service2 | Service_2, Protocol:TCP, Destination Port:31 | Value changed |
| Service3 | Service_3, Protocol:TCP, Destination Port:40 | No change |
| Service1_1 | Service_1, Protocol:TCP, Destination Port:26 | Service1_1 created |



NOTE: Once the initial conflict is resolved, the object conflict resolution checks for further conflicts with the new name and definition until resolution is complete. If Security Director finds further conflicts, the Conflict Resolution page is refreshed to display the new conflicts.

Export to a CSV File

To export configurations to a CSV file:

1. Select **Configure > Shared Objects > Services**.

The Services page is displayed.

2. Right-click the service object that you want to export and select **Export to CSV**. You can also select **Export to CSV** from the More list.

The Export Services pop-up is displayed.

3. Click **Export All** or **Export Selected**.

The Services Export CSV Status page is displayed with the status of download percentage.

When the CSV file is available, you can open or save the file.

RELATED DOCUMENTATION

[Creating Services and Service Groups](#) | 1140

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 1150](#)
- [Replace Policies and Objects | 1150](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.
3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

[Creating Services and Service Groups | 1140](#)

Showing Duplicate Policies and Objects

To display duplicate objects:

1. Select the check box beside the object(s).
2. Right-click the object(s) or select **Show Duplicates** from the More list.
The Show Duplicates page appears, which displays the duplicate objects.
3. Select the duplicate object(s), and perform any of the following actions:

- To merge policies or objects, select multiple policies, right-click or select **Merge** from the More list.

The merge operation deletes or replaces the reference for only the custom services and not the predefined services. If the selected duplicate objects are referenced in any other services (firewall policy) and security objects (service groups), a warning message is provided before the objects are merged.

Starting in Junos Space Security Director Release 18.4, you can view duplicate objects in Show Duplicates page from parent domain and subdomains. You can merge shared objects from parent domain to subdomain and vice versa.



NOTE: You can view the duplicate objects of subdomain only if the users of the subdomain have read and execute privileges to parent domain objects.

- To locate the usage of the duplicate objects, select a policy or shared object, right-click or select **Find usage** from More list.
- .
- To delete the policies or shared objects, select the policies or shared objects, right-click and select **Delete** or click delete icon. You can delete objects only from current domain. If you select multiple objects from across the domains, then the delete option is disabled.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

Shared Objects-Variables

IN THIS CHAPTER

- [Variables Overview | 1153](#)
- [Creating Variables | 1154](#)
- [Editing Variables | 1157](#)
- [Import and Export CSV Files | 1157](#)
- [Showing Duplicate Policies and Objects | 1158](#)


Variables Overview

A variable is useful when similar rules can be applied across devices where only the zone or address might differ. Using variables instead of static values allows you to create fewer rules and use them more widely. You can achieve this by creating a variable address or a variable zone that you configure for all devices to which you are applying a group policy.

For example:

- Group firewall policy FW-G1 has two devices, Dev-1 and Dev-2. Each device has its own unique address. Dev-1 has address A1. Dev-2 has address A2.
- You want to apply the same rule to both devices, but you do not want to configure two rules with all the same criteria except for the address. It is more efficient to configure one rule with a variable default address and apply it to both devices.
- You can achieve this by creating an address variable with a default address, A3, and making A3 common to Dev-1 and Dev-2 in your rule. When you configure default address A3, you map it to the real address of each device, A1 for Dev-1 and A2 for Dev-2.
- When group firewall policy FW-G1 is applied, these mappings are used to replace the default address with the real address for each device.

Variables are only used in group policies. They are not applicable to device policies.

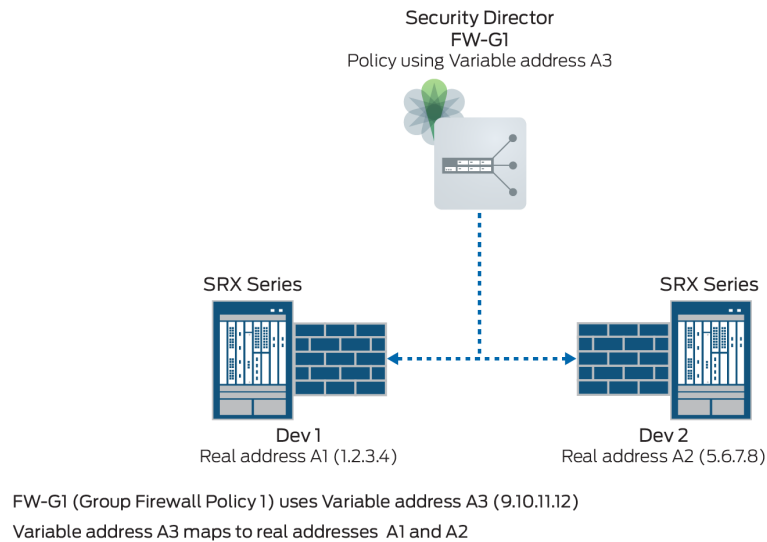Figure 76: Variable Address Usage**RELATED DOCUMENTATION**
[Creating Variables | 1154](#)
[Assigning Policies and Profiles to Domains | 567](#)
[Viewing Policy and Shared Object Details](#)
Creating Variables**Before You Begin**

- Read the topic.
- Decide on the type of variable to define, either address or zone.
- Check to see if cloning an existing variable might be more efficient than creating a new one.
- Review the Variables main page for an understanding of your current data set. See for field descriptions.

Use variables to dynamically obtain addresses and zones in group firewall policies that are applied to multiple devices. A variable is useful when similar rules can be used across devices where only the zone or address might differ. Using variables instead of static values allows you to create fewer rules and use them more widely.

When you configure variables, you map specific devices to configured values and default values are replaced by these mapping when policies are applied. Note that variables are only used in group policies. They are not applicable to device policies.

To create a variable object:

1. Select **Configure > Shared Objects > Variables**.
2. Click **Create**.
3. Complete the configuration according to the guidelines provided in [Table 341 on page 1155](#) to [Table 343 on page 1156](#).
4. Click **OK**.

A new variable with your configurations is created. You can use this object in policies. You can also assign it to a domain; see [Assigning Policies and Profiles to Domains](#).

Table 341: Variable Profile Settings

| Setting | Guideline |
|-------------|---|
| Name | Enter a unique name for this variable. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed. |
| Description | Enter a description for your variable; maximum length is 1,024 characters. You should make this description as useful as possible for all administrators. |
| Type | Select a type of variable and fill in the corresponding fields. Available types are: Address or Zone. When you select a type, the required fields for that type are shown. See Table 342 on page 1155 for address types. See Table 343 on page 1156 for zone types. |

Table 342: Create Variable Address Profile Setting

| Setting | Guideline |
|-----------------|--|
| Default Address | Select a predefined address by clicking anywhere within this field and choosing an address from the Select Address window or click Add to create a new default address. This default address is replaced with the mapped device-specific address when applied to the group firewall policy. |
| Context Value | Select the check box beside each device to which you want to map this variable address. Click the arrow to move the selected device or devices from the Available column to the Selected column. Only devices from the current and child domain are listed. Note that you can use the fields at the top of each column to search for listed devices. |

Table 342: Create Variable Address Profile Setting (Continued)

| Setting | Guideline |
|---------|---|
| Address | Select a predefined address by clicking anywhere within this field and choosing an address from the Select Address window. The default address is replaced by this device-specific address when applied to a policy that includes the selected device or devices. |

Table 343: Create Zone Profile Settings

| Setting | Guideline |
|---------------|---|
| Default Zone | Enter a zone. This default zone is replaced with the mapped zone when applied to the group firewall policy. The default value is trust . |
| Context Value | Select the check box beside each device to which you want to map this variable zone. Click the arrow to move the selected device or devices from the Available column to the Selected column. Note that you can use the fields at the top of each column to search for listed devices. |
| Zone | <p>For SRX Series devices, select a zone from the list. The default zone is replaced by this device-specific zone when applied to a policy that includes the selected device or devices.</p> <p>Starting in Junos Space Security Director Release 16.2, if you select an MX Series router, the Zone field lists all the AMS interfaces that are assigned to the service set. If you select both SRX Series devices and MX Series routers, both zones and AMS values are listed.</p> |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.2 | Starting in Junos Space Security Director Release 16.2, if you select an MX Series router, the Zone field lists all the AMS interfaces that are assigned to the service set. If you select both SRX Series devices and MX Series routers, both zones and AMS values are listed. |

RELATED DOCUMENTATION

[Finding Usages for Policies and Objects | 1165](#)

[Showing Duplicate Policies and Objects | 1167](#)

Editing Variables

To edit a variable:

1. Select **Configure and Provision > Shared Objects > Variables**.
The Variables page appears.
2. Select the address or zone variable you want to edit and click **Edit**.
The Edit Variable page appears.
3. Edit the variable as needed, including the name, description, default address, context value, and (mapped) address for an address variable. For a zone variable, you can edit the name, description, default zone, context value, and (mapped) zone.
4. Click **OK** to save the changes.

Import and Export CSV Files

IN THIS SECTION

- [Import from a CSV file | 1157](#)
- [Export to a CSV File | 1158](#)

You can export all the columns on the Security Director Devices page to a comma-separated value (.csv) file. You can also import information from a CSV file.

Import from a CSV file

To import configurations from a CSV file:

1. Select **Configure > Shared Objects > Variables**.
2. From the landing page, click **More**.
A list of actions appears.
3. Select **Import from CSV**.
The Select **CSV File** window appears.

4. Click **Browse** to locate the CSV file you are importing.
5. Click **Import**.

Export to a CSV File

To export configurations to a CSV file:

1. Select **Configure > Shared Objects > Variables**.
2. Select the check box(es) beside the item(s) you want to export. Click **More** or right click on the page.
A list of actions appears.
3. Select **Export to CSV**
The Select **CSV File** window appears.
4. Click **Export All** or **Export Selected**.
The Export CSV Job Status page appears.
5. When the export file is ready, click the provided link in the CSV Job Status page to download the file.
You can also access the download link in the job manager.

RELATED DOCUMENTATION

| [Creating Variables](#) | 1154

Showing Duplicate Policies and Objects

To display duplicate objects:

1. Select the check box beside the object(s).
2. Right click and select **Show Duplicates**.
The Show Duplicates page appears.
3. Select the check box beside the duplicate object, click **Delete** and confirm to remove it.

RELATED DOCUMENTATION

| [Creating Firewall Policies](#) | 478

| [Creating NAT Policies](#) | 784

| [Creating IPS Policies](#) | 714

Shared Objects-Zone Sets

IN THIS CHAPTER

- Understanding Zone Sets | 1159
- Creating Zone Sets | 1161
- Edit and Clone Policies and Objects | 1163
- Delete and Replace Policies and Objects | 1164
- Finding Usages for Policies and Objects | 1165
- Show and Delete Unused Policies and Objects | 1165
- Showing Duplicate Policies and Objects | 1167
- Viewing Policy and Shared Object Details | 1168
- Zone Sets Main Page Fields | 1168

Understanding Zone Sets

Security zones are the building blocks for policies; they are logical entities to which one or more interfaces are bound. Security zones provide a means of distinguishing groups of hosts (user systems and servers) and their resources from one another to apply different security measures to them.


A zone set is a grouping of two or more zones in a network to regulate and secure the traffic through the security platform running Junos OS. With zone-based security, you can define multiple security zones, group similar interfaces, and apply the same policies to all zones. Zone sets are referenced in the global firewall group to avoid creating multiple policies across every possible interface.



NOTE: In Security Director, a zone set is a group of multiple zones and not a device-level object.


Figure 77 on page 1160 shows a zone set with three zones, Zone 1, Zone 2, and Zone 3. Zone 1 provides access from hosts H1 and H3 to the data residing on server S1. Zone 2 provides access from host H3 to the data residing on server S2. Zone 3 provides access from host H2 to the data residing on server S2.

Figure 77: Hierarchy of Zone Set, Zones, and Zone Members

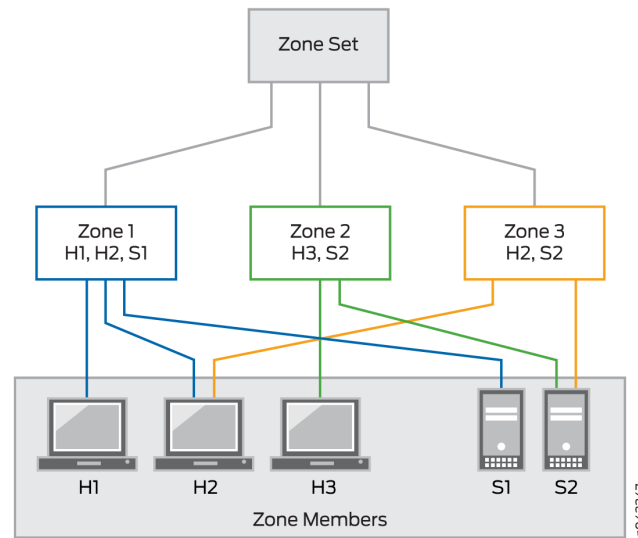

Interfaces act as a doorway through which traffic enters and exits a Juniper Networks device. Many interfaces can share exactly the same security requirements; however, different interfaces can also have different security requirements for inbound and outbound data packets. Interfaces with identical security requirements can be grouped together into a single security zone. See [Figure 78 on page 1160](#), which shows a basic zone topology that includes a router connected to three interfaces.

Figure 78: Basic Zone Topology

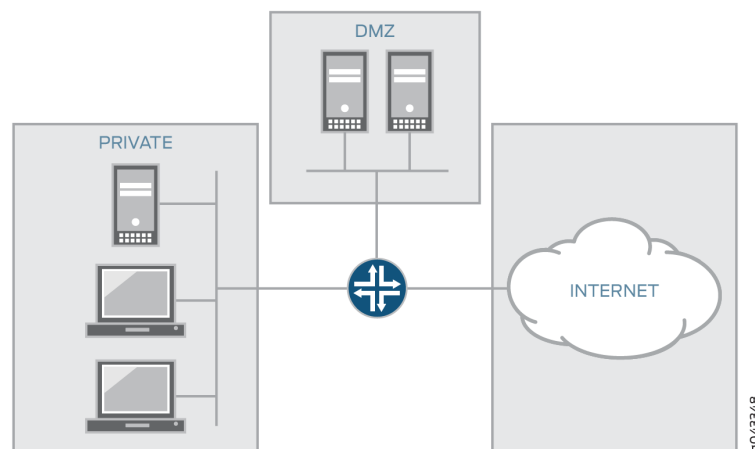

[Figure 78 on page 1160](#) shows a basic zone topology with three zones, private LAN, DMZ, and public Internet. A router within the zone to three interfaces:

- One interface connected to the public Internet

- One interface connected to a private LAN that must not be accessible from the public Internet
- One interface connected to an Internet service demilitarized zone (DMZ), where a webserver, Domain Name System (DNS) server, and e-mail server must be accessible to the public Internet

Each interface in this network is assigned to its own zone, although you might want to allow varied access from the public Internet to specific hosts in the DMZ and varied application use policies for hosts in the protected LAN.

In this network, there are three main policies:

- Private zone connectivity to the Internet
- Private zone connectivity to DMZ hosts
- Internet zone connectivity to DMZ hosts

If an additional interface is added to the private zone, the hosts connected to the new interface in the zone can pass traffic to all hosts on the existing interface in the same zone. Also, the traffic from the hosts to hosts in other zones is similarly affected by existing policies.

RELATED DOCUMENTATION

[Creating Zone Sets | 1161](#)

[Finding Usages for Policies and Objects | 1165](#)

[Showing Duplicate Policies and Objects | 1167](#)

[Viewing Policy and Shared Object Details | 1168](#)

Creating Zone Sets

Before You Begin

- Read the "[Understanding Zone Sets](#)" on [page 1159](#) topic.
- Define a security zone.
- Add logical interfaces to the zone.
- Review the zone sets main page for an understanding of your current data set. See "[Zone Sets Main Page Fields](#)" on [page 1168](#) for field descriptions.

Use zone sets page to group one or more zones and reference them in the global firewall group.

A zone set is a grouping of one or more zones in a network to regulate and secure traffic through the security platform running Junos OS. With the zone-based security, you can define multiple security zones, group similar *interfaces*, and apply the same policies to the zones to avoid creating multiple policies across every possible interface.

Zone sets are referenced in the global firewall group to provide you with the flexibility to perform actions on traffic without the restrictions of zone specifications.

To configure a zone set:

1. Select **Configure > Shared Objects > Zone Sets**.
2. Click the + icon.
3. Complete the configuration according to the guidelines provided in the [Table 344 on page 1162](#).
4. Click **OK**.

A new zone set with the predefined configurations is created. You can use this zone set in firewall policy.

Table 344: Zone Set Settings

| Settings | Guidelines |
|-------------|--|
| Name | Enter a unique name for the zone set that begins with alphanumeric characters. Colons, periods, slashes, dashes, and underscores are allowed. The maximum length is 63 characters. |
| Description | Enter a description for the zone set; maximum length is 1024 characters. |
| Zones | <p>Select one or more predefined or unique zones from the Available column for inclusion in the zone set. For example: DMZ, junos-host.</p> <p>The unique zones and predefined zones on your firewall depend on the device managed by Security Director.</p> |

RELATED DOCUMENTATION

| |
|---|
| Understanding Zone Sets 1159 |
| Finding Usages for Policies and Objects 1165 |
| Showing Duplicate Policies and Objects 1167 |
| Viewing Policy and Shared Object Details 1168 |

Edit and Clone Policies and Objects

IN THIS SECTION

- [Edit Policies or Objects | 1163](#)
- [Clone Policies or Objects | 1163](#)

You can edit or clone policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Edit Policies or Objects

To edit a policy or a shared objects:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Select the policy or shared object that you want to edit, and then click the pencil icon.

The Edit window appears, showing the same options as when creating a new policy or object.

3. Click **OK** to save your changes.



NOTE: After the published firewall policy rules are edited and saved, you see an icon next to the check box for each saved policy rule on the Firewall Policies page. When you hover over the icon, a message appears, indicating that the policy was edited and needs to be pushed to the device. For updating the policy, see ["Updating Policies on Devices" on page 519](#).

Clone Policies or Objects

To clone a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to clone, or select **Clone** from the More list.

The Clone window appears with editable fields.

3. Click **OK** to save your changes.

RELATED DOCUMENTATION

[Creating Zone Sets | 1161](#)

Delete and Replace Policies and Objects

IN THIS SECTION

- [Delete Policies and Objects | 1164](#)
- [Replace Policies and Objects | 1164](#)

You can delete or replace policies and objects from the policies and shared objects main page.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Delete Policies and Objects

To delete a policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.
The policies or shared objects page appears.
2. Select the policy or shared object that you want to delete, and then select the minus sign (-).
An alert message appears verifying that you want to delete your selection.
3. Click **Yes** to delete your selection.

Replace Policies and Objects

You can select one or more shared objects and replace them with other objects of the same type.

To replace one or more object:

1. Select **Configure > Shared Objects > Addresses, Services, or Variables**.
The addresses, services, or variables page appears.
2. Right-click the shared object that you want to replace, or click **Replace** from the More list.
You can replace a single object or multiple objects. If the selected object is used in any policy, a warning message appears before they are replaced.

3. Click **Yes** to continue the replacement operation.

RELATED DOCUMENTATION

[Creating Zone Sets](#) | 1161

Finding Usages for Policies and Objects



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

You can find usages for policies or objects and take appropriate action.

To find policies or objects usages:

1. Select **Configure** > and select the landing page for the policy or object for which you want to find usages.
The policies or shared objects page appears
2. Right-click the policy or object or click **More**.
3. Select **Find Usage**. The usage window appears, showing the usage of the selected policy or object.

RELATED DOCUMENTATION

[Show and Delete Unused Policies and Objects](#) | 1165

Show and Delete Unused Policies and Objects

IN THIS SECTION

- [Show Unused Policies and Objects](#) | 1166
- [Delete Unused Policies and Objects](#) | 1166

You can show or delete unused policies and objects in your network configurations.



NOTE: Some tasks in this topic might not apply to your feature. Refer to the tasks relevant to you.

Show Unused Policies and Objects

You can view all unwanted policies or objects that are not used anywhere in your network to take appropriate action.

To show unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are showing.
2. From the landing page, click **More**.
A list of actions appears.
3. Select **Show Unused**.
A list of unused objects (not referenced in any policy) and unused policies appear on the page.

Delete Unused Policies and Objects

You can clear all unwanted policies or objects that are not used anywhere in your network.

To delete unused policies or objects:

1. Select **Configure** and select the landing page for type of policy or object you are deleting.
2. Select the check boxes beside the items that you want to delete. Right-click on the policy or object or click **More** from the landing page.
A list of actions appears.
3. Select **Delete Unused**.
A confirmation window appears before you can delete the unused policies or objects.
4. Click **Yes** to confirm the deletion.
All unused policies or objects are deleted.

RELATED DOCUMENTATION

| [Creating Zone Sets](#) | 1161

Showing Duplicate Policies and Objects

To display duplicate objects:

1. Select the check box beside the object(s).
2. Right-click the object(s) or select **Show Duplicates** from the More list.

The Show Duplicates page appears, which displays the duplicate objects.

3. Select the duplicate object(s), and perform any of the following actions:
 - To merge policies or objects, select multiple policies, right-click or select **Merge** from the More list.

The merge operation deletes or replaces the reference for only the custom services and not the predefined services. If the selected duplicate objects are referenced in any other services (firewall policy) and security objects (service groups), a warning message is provided before the objects are merged.

Starting in Junos Space Security Director Release 18.4, you can view duplicate objects in Show Duplicates page from parent domain and subdomains. You can merge shared objects from parent domain to subdomain and vice versa.



NOTE: You can view the duplicate objects of subdomain only if the users of the subdomain have read and execute privileges to parent domain objects.

- To locate the usage of the duplicate objects, select a policy or shared object, right-click or select **Find usage** from More list.
- To delete the policies or shared objects, select the policies or shared objects, right-click and select **Delete** or click delete icon. You can delete objects only from current domain. If you select multiple objects from across the domains, then the delete option is disabled.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating NAT Policies | 784](#)

[Creating IPS Policies | 714](#)

Viewing Policy and Shared Object Details

On a policy or a shared object landing page, you can get a detailed view of the existing policies or objects. The Detail View page lists all the configured parameters of a policy or an object. The Landing page of a policy or shared object lists only some of the configured parameters and not all. The Detail View option helps you to get a consolidated view of all the configured parameters.



NOTE: The detailed view is in read-only mode; you cannot edit any fields.

To see a detailed view of the policy or a shared object:

1. Select **Configure > Policies or Shared Objects**.

The policies or shared objects page appears.

2. Right-click the policy or shared object that you want to see the detailed view for, or select **Detail View** from the More list.

The Detail View page appears showing the configuration information.

You can also get a detailed view by hovering over the name and clicking the Detailed View icon before the policy or shared object name.

RELATED DOCUMENTATION

[Creating Firewall Policies | 478](#)

[Creating IPS Policies | 714](#)

[Creating NAT Policies | 784](#)

Zone Sets Main Page Fields

Use the zone sets main page to get an overall, high-level view of your zone sets settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 345 on page 1169](#) describes the fields on this page.

Table 345: Zone Sets Main Page Fields

| Field | Description |
|-------------|---|
| Name | Name of the zone set. |
| Description | Description of the zone set. |
| Domain | Domain name of the zone set for securing and managing the zone settings of your network. For example: global, system. |
| Zones | Unique zones defined by the user or predefined zones to include in the zone sets. For example: DMZ, junos-host. |

RELATED DOCUMENTATION

| |
|--|
| Understanding Zone Sets 1159 |
| Creating Zone Sets 1161 |

Shared Objects-Metadata

IN THIS CHAPTER

- [Metadata-Based Policy Enforcement Overview | 1170](#)
- [About the Metadata Page | 1171](#)
- [Creating a Metadata | 1172](#)

Metadata-Based Policy Enforcement Overview

IN THIS SECTION

- [Benefits of Metadata-Based Policies | 1171](#)

Traditionally, firewall policies are created using source and destination address objects. These objects are usually addresses or address groups. To create a firewall policy, you must know the IP address or range of IP addresses you want to target.

The introduction of metadata enables you to appropriately tag these addresses. You can use these metadata tags when you create the firewall policy.

The metadata-based policy enforcement involves the following steps:

1. **Metadata definition**—Define the metadata key values you want to use. For example, Location = Bengaluru; Sunnyvale, OS = Windows, Mac, Linux; Role = Database, application, Web.
2. **Metadata association**—Associate the defined metadata with the addresses of type host or range.
3. **Metadata expressions evaluation**—When you create a rule for a firewall policy, you choose the source and destination addresses based on metadata expressions, instead of IP addresses, address groups, or network ranges.

Benefits of Metadata-Based Policies

- The use of metadata tags facilitates a wide range of security automation operations and significantly reduces the number of rules required to implement a solution.
- Metadata-based policies ensure that the defined security policy is instantiated on the firewalls even before the applications and application components are created. When the new application components are instantiated, the relevant firewall policies are automatically updated with the metadata for the application components, thereby enabling automatic policy enforcement at the time of instantiation of the application components. The security administrators do not need to manually commit changes related to the metadata of addresses unless the rules are changed.
- Whether you deploy the application components inside a data center or in different public cloud locations, you can leverage the same metadata-based policy and deploy it to different SRX Series devices or vSRX instances in different locations and achieve a consistent security posture.
- Security administrators can see a more holistic picture about each network entity based on the metadata assignments. The administrators are no longer limited to knowing the network entity based on only the IP address of the entity.

RELATED DOCUMENTATION

[About the Metadata Page | 1171](#)

[Creating a Metadata | 1172](#)

[Creating Addresses and Address Groups | 1127](#)

About the Metadata Page

IN THIS SECTION

● [Tasks You Can Perform | 1172](#)

● [Field Descriptions | 1172](#)

To access this page, select **Configure > Shared Objects > Object Metadata**.

Use the Metadata page to view the user defined metadata.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create metadata. See ["Creating a Metadata" on page 1172](#).
- Edit, clone, or delete the metadata.

Field Descriptions

[Table 346 on page 1172](#) provides guidelines on using the fields on the Metadata page.

Table 346: Fields on the Metadata Page

| Field | Description |
|-----------------|---|
| Name | Specifies the name of the metadata. |
| Possible Values | Specifies the possible values of a metadata. |
| Provider | <p>Specifies the provider information of the metadata. For example, Security Director or any external provider.</p> <p>By default, the system generated provider is shown. You cannot modify or use this provider in any configuration.</p> |

RELATED DOCUMENTATION

[Metadata-Based Policy Enforcement Overview | 1170](#)

[Creating a Metadata | 1172](#)

Creating a Metadata

Use the Create Metadata page to define new metadata of your choice. The metadata is assigned to address objects and used in the firewall policy rules.



NOTE: Metadata cannot be assigned to address groups.

To create a new metadata:

- 1. Select **Configure > Shared Objects > Object Metadata**.
The Metadata page appears.
 - 2. Click the add icon (+).
The Create Metadata page appears.
 - 3. Complete the configuration according to the guidelines provided in [Table 347 on page 1173](#).
 - 4. Click **Ok**.
A new metadata is created. Associate the new metadata to an address. See "[Creating Addresses and Address Groups](#)" on page 1127.
- Click **Cancel** to discard the changes.

Table 347: Fields on the Create Metadata Page

| Field | Description |
|----------------|--|
| Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. For example: Location |
| Possible Value | Define the possible metadata values. You can use only alphabetical characters. Values must be comma separated. For example, Bengaluru, Sunnyvale, and so on. |

RELATED DOCUMENTATION

- [Metadata-Based Policy Enforcement Overview | 1170](#)
- [About the Metadata Page | 1171](#)
- [Creating Addresses and Address Groups | 1127](#)

Change Management-Change Requests

IN THIS CHAPTER

- [Change Control Workflow Overview | 1174](#)
- [Creating a Firewall or NAT Policy Change Request | 1177](#)
- [About the Changes Submitted Page | 1179](#)
- [Approving and Updating Changes Submitted | 1181](#)
- [Creating and Updating a Firewall Policy Using Change Control Workflow | 1183](#)
- [Editing, Denying, and Deleting Change Requests | 1191](#)
- [About the Changes Not Submitted Page | 1192](#)
- [Discarding Policy Changes | 1194](#)
- [Viewing Submitted and Unsubmitted Policy Changes | 1195](#)

Change Control Workflow Overview

IN THIS SECTION

- [Benefits of the Change Control Workflow | 1176](#)
- [Setting Up the Change Control Workflow | 1176](#)

The change control workflow allows you to request an approval for changes to a firewall or a NAT policy. Traditionally, when a policy is published and/or updated, all the changes to the policy are published. You cannot select a subset of changes to publish. For example, suppose two rules, R1 and R2, are added to a policy. When the policy is published, both the rules are published. R1 and R2 rule additions cannot be published separately.

The change control workflow represents a set of changes made to a policy to achieve a logical goal (usually a request in an IT ticketing system). For example, a new finance user in a company requests

access to the server that hosts the payroll management system. The user files a ticket requesting access. At this point, the requester creates a change request. The approver can either approve or deny the change request, individually or as part of a batch. The Change Management workspace allows the requester (in this case, the firewall administrator) to create and update change requests and the approver to approve or deny change requests.

[Table 348 on page 1175](#) describes the roles for the change control workflow.

Table 348: Predefined Roles in the Change Control Workflow

| Role | Description |
|--|--|
| Security Director Change Control Requester | <p>A user with access permission needed to make changes to designated policies; submit them for approval; and, once approved, update them to the network.</p> <p>For example, an administrator can provide the required information about the change to the firewall or NAT policy.</p> |
| Security Director Change Control Approver | <p>A user with access permission needed to approve change requests from a requester. For example, a senior administrator or manager can act as an approver, after which a firewall administrator, acting as the requester, can update the changes to the appropriate firewall or NAT policy.</p> |

At a high level, the following change control workflow tasks, and who performs them, are described:

1. The administrator opens a new session to modify the security or network environment, or both, by using Security Director.
2. The administrator configures the security policy and application settings in Security Director.
3. The administrator submits the completed session for approval.
4. The manager reviews the proposed modifications and either approves or denies the request, or returns it to the administrator with a request to make the proposed changes.
5. The administrator makes the requested changes and resubmits the session for approval, if the manager initially denied the request and requested modifications.
6. The manager approves the request.
7. The administrator installs the policy for all approved sessions.



NOTE:

- Before you can install a policy, all sessions must be approved,
- If a user publishes a policy, all change requests created for that policy are deleted and all current changes on the policy are pushed to the device.

The following sections provide more information about the change control workflow:

Benefits of the Change Control Workflow

- The request resembles a request in an IT ticketing system. The approver can either approve changes to a firewall or NAT policy or deny the change request, individually or as part of batch.
- The policies that are modified within an activity (or configuration session) are locked and thereby prevented from being modified within other activities. This prevents conflicting changes from being made.

Setting Up the Change Control Workflow

To set up the change control workflow:

1. Select **Network Management Platform > Administration > Applications**.

A page appears listing the available Network Management Platform applications.

2. Right-click **Security Director** and select **Modify Application Settings**.

3. Click **Change-Control-Workflow** and provide the information, as described in [Table 349 on page 1176](#).

Table 349: Fields on the Change Control Workflow Setting Page

| Option | Description |
|--------------------------------|--|
| Enable Change Control Workflow | Approve all firewall and NAT policy changes before updateing the policy changes. All Security Director users will be logged out after this option is selected. |
| Default approval days | Number of days within which the request must be approved or denied. The default number of days is 7. |

Table 349: Fields on the Change Control Workflow Setting Page (*Continued*)

| Option | Description |
|-----------------------------|--|
| Default ticket field name | Ticket field name for creating the change request. The default field name is Ticket Number. |
| Enable e-mail notifications | Receive e-mail notifications when the change request is created, approved, or denied. The notification is sent to both the requester and the approver. |
| Maximum requests per policy | Maximum number of outstanding change requests per policy. The default value is 10. |



NOTE: If you disable the change control workflow, all the change requests created for firewall and NAT policies are deleted.

RELATED DOCUMENTATION

[Creating a Firewall or NAT Policy Change Request | 1177](#)

[Approving and Updating Changes Submitted | 1181](#)

[Editing, Denying, and Deleting Change Requests | 1191](#)

[About the Changes Submitted Page | 1179](#)

[About the Changes Not Submitted Page | 1192](#)

[Discarding Policy Changes | 1194](#)

[Viewing Submitted and Unsubmitted Policy Changes | 1195](#)

[About the Change Request History Page | 1197](#)

Creating a Firewall or NAT Policy Change Request

Use the Create Change Request page to create change requests for a firewall or NAT policy.

To create a change request:

1. Select **Configure** > *<Policy-Name>* > **Policies**.

The Policies page appears.

2. Select the policy that you want to request a change, and click **Request Change**.

The Create Change Request page appears.

3. Complete the configuration by using the guidelines in [Table 350 on page 1178](#).
4. Click **OK** to complete the configuration or **Cancel** to discard the configuration.

Table 350: Fields on the Create Change Request Page

| Field | Description |
|------------------|---|
| Request Name | Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters. |
| Description | Enter a description for the change request; maximum length is 255 characters. |
| Ticket Number | <p>Enter the ticket number of the change request; maximum length is 255 characters.</p> <p>This is an identifier to a ticket in the customer's ticketing system. This helps in correlating the change request to an item in the customer's ticketing system. More than one change request can be mapped to a ticket. Because a change request is for a single policy, a ticket could involve changes to multiple policies.</p> <p>Different customers use different terminologies to represent the ticketing system. Therefore, the name of this field is configurable. For example, you can name this field as ticket number, work-flow, tracking ID, or any other name.</p> |
| Request Priority | <p>Select the priority from the list for your change request. The change requests are processed according to the priority.</p> <p>The available options are:</p> <ul style="list-style-type: none"> • Low • Medium • High • Critical <p>This field indicates the criticality of the change request and helps the approver to prioritize the review of their outstanding tickets. Apart from prioritizing the reviews, this does not affect the change request workflow in any other way.</p> |

Table 350: Fields on the Create Change Request Page *(Continued)*

| Field | Description |
|-------------------|---|
| Approval Due Date | Select a due date for approval. If you do not select a date, a default duration of 5 days from the current date is set as a due date for approval. |
| Changes | Click View to view the unsubmitted changes of a policy. |

RELATED DOCUMENTATION

- [Change Control Workflow Overview | 1174](#)
- [Approving and Updating Changes Submitted | 1181](#)
- [Editing, Denying, and Deleting Change Requests | 1191](#)
- [About the Changes Submitted Page | 1179](#)
- [About the Changes Not Submitted Page | 1192](#)
- [Discarding Policy Changes | 1194](#)
- [Viewing Submitted and Unsubmitted Policy Changes | 1195](#)
- [About the Change Request History Page | 1197](#)

About the Changes Submitted Page

IN THIS SECTION

- [Tasks You Can Perform | 1180](#)
- [Field Descriptions | 1180](#)

To access this page, click Configure > Change Management > Change Requests.

Use the Changes Submitted page to take appropriate actions on the changes submitted such as approve, deny, update, edit, and delete.

Tasks You Can Perform

You can perform the following tasks from this page:

- Approve the request. See ["Approving and Updating Changes Submitted" on page 1181](#).
- update the approved changes. ["Approving and Updating Changes Submitted" on page 1181](#).
- Deny the request. See ["Editing, Denying, and Deleting Change Requests" on page 1191](#).
- Edit or delete the change request. See ["Editing, Denying, and Deleting Change Requests" on page 1191](#).

Field Descriptions

[Table 351 on page 1180](#) provides guidelines on using the fields on the Changes Submitted page.

Table 351: Fields on the Changes Submitted Page

| Field | Description |
|--------------|--|
| Request Name | <p>Name of the change submit request.</p> <p>Click the request name to view the following information:</p> <ul style="list-style-type: none"> • Summary of changes • Delta of changes • Compare the changes between change requests • List of affected devices |
| Status | Specifies the status of the change request such as, pending, approved, denied, updated, in progress, and update failed. |
| Priority | Specifies the priority of the change request and helps approvers prioritize reviews of their outstanding tickets. |
| Dependencies | Specifies if the policy has any dependencies with other policies. If a change request depends on other change requests, this column contains a link to view the dependencies. For example, a rule is added in CR1. The same rule is then modified in a subsequent change request, CR2. CR2 is now dependent on CR1 (CR1 is a dependency of CR2). |

Table 351: Fields on the Changes Submitted Page *(Continued)*

| Field | Description |
|-------------------|---|
| Approval Due Date | Specifies the date by which the requestor is asking the approver to complete the review of the change request. |
| Policy Name | Specifies the name of the policy for which the change request has been created. |
| Service Type | Specifies the service type of the policy. For example: Firewall, NAT |
| Ticket Number | Specifies the ticket number. This information helps in correlating the change request to an item in the customer's ticketing system. Note that more than one change request could map to a ticket and could involve changes to multiple policies. |
| Description | Specifies the description of the change request. This field is autopopulated from the comments the user enters while saving changes to the policy. If user performs multiple saves, this field is populated with a concatenated list of all saved comments. |
| Created By | Specifies the name of the requester. |

RELATED DOCUMENTATION

[Creating a Firewall or NAT Policy Change Request | 1177](#)

[Approving and Updating Changes Submitted | 1181](#)

[Editing, Denying, and Deleting Change Requests | 1191](#)

[About the Change Request History Page | 1197](#)

Approving and Updating Changes Submitted

To approve the change requests and update the policy changes:

1. Select **Configure > Change Management > Change Requests**.

The Changes Submitted page appears.

2. Select the change request and click **Approve**.

3. The submitted change request is displayed in the approvers workspace.
4. The approver reviews the change request and checks for any dependencies. Dependencies can be viewed by clicking the View link.
5. If there are no dependencies, the approver enters the comments in the Approve Request window and then clicks **Yes**. A pop-up message shows the status as approval successful.
6. The change request workspace of the firewall administrator shows all the change requests that were approved or rejected.
7. The administrator then selects an approved change request and schedules it to publish and update.
8. The administrator selects **Update** to update immediately or schedule to update later. If the selected change request has dependencies, then the user is notified that update of dependency change requests will also be scheduled (if they have not been already) or advanced (if they have been scheduled for a later time) to the same time as that of the selected change request. The list of dependency change requests that are also updated will be displayed. A new snapshot of the policy is created. This snapshot is used as the source for publish and update. This new snapshot is essentially the previously updated snapshot of the policy along with the changes from the selected change request. This snapshot is visible in the Manage Snapshots list.

Updating a change request is same as publishing and updating together. If either of publish or update jobs fail, the change request is moved to the Update Failed state. You can reupdate the failed change requests.

9. The administrator views and verifies the job status.



NOTE:

- You must approve all the parent change requests before approving a child change request, if there is a dependency.
- You must deny all child change requests before denying a parent change request, if there is a dependency.

RELATED DOCUMENTATION

[Change Control Workflow Overview | 1174](#)

[Creating a Firewall or NAT Policy Change Request | 1177](#)

[Editing, Denying, and Deleting Change Requests | 1191](#)

[About the Change Request History Page | 1197](#)

Creating and Updating a Firewall Policy Using Change Control Workflow

IN THIS SECTION

- [Creating a Change Request | 1183](#)
- [Approving a Change Request | 1186](#)
- [Publishing and Updating the Approved Change Request | 1189](#)

To create, approve, and update a firewall policy using the Change Control Workflow, perform these tasks:

Creating a Change Request

The following procedure explains the steps policy administrators need to take to submit change requests.

To create a change request:

1. Configure the Change Control Workflow:

- a. Select **Network Management Platform** > **Administration** > **Applications**.**

The Applications page appears.

- b. Right-click **Security Director** and click **Modify Application Settings**.**

The Modify Security Director Settings page appears.

- c. Click **Change-Control-Workflow**.**

The Change Control Workflow page appears in the right pane, as shown in [Figure 79 on page 1184](#).

Figure 79: Change Control Workflow Configuration

Administration > Applications > Modify Application Settings

Modify Security Director Settings

- Application
- Hit-Count
- Update-Device
- Locking
- Snapshot
- VPNImport
- Policy-Import
- Change-Control-Workflow**

Change-Control-Workflow

☒ Enable Change Control Workflow

Default approval days: [default]

Default ticket field name:

☒ Enable email notifications when a change request is created, approved or denied

Maximum number of requests per policy: [default]

Modify **Cancel**

- d. Select the Enable Change Control Workflow option to enable the Change Control Workflow for all the firewall and NAT policies.

By default, the Change Control Workflow option is disabled. When you enable this option, you are logged out of Security Director.


- e. In the Default approval days field, enter the default number of days for reviewers to approve or deny the change request. The default value is five days.
- f. In the Default ticket field name field, enter the ticket name.

The ticket name that you enter here appears on the Create Change Request page as a separate field where you can enter the ticket number. The default name is Ticket Number.

- g. Enable the e-mail notification option for approvers and requesters when a change request is created, approved, or denied. By default, this option is disabled.
- h. In the Maximum number of requests per policy field, enter the maximum number of outstanding change requests that can exist in an undeployed state for a policy. The default value is 10 requests.
- i. Click **Modify**.

A confirmation page appears to enable the Change Control Workflow, as shown in [Figure 80 on page 1185](#).

Figure 80: Confirm Change Control Workflow

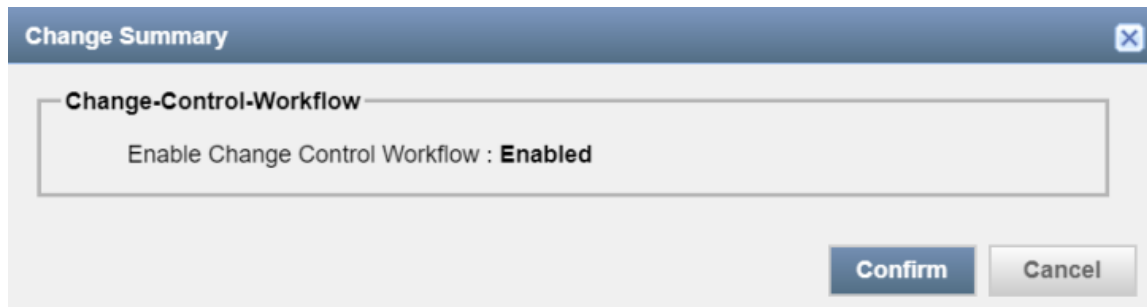

j. Click **Confirm**.

2. Request approval for a change request.

a. In the Firewall Policies page, select the policy, and click **Request Change**.

The Create Change Request page appears, as shown in [Figure 81 on page 1185](#). You can also edit a policy rule and create a change request from the Policy Rules page.

Figure 81: Create Change Request Page

b. In the Request Name field, enter the name of your change request. You can enter a maximum of 63 characters.

c. In the Description field, enter the description for your change request. You can use a maximum of 255 characters.

- d. In the Ticket Number field, enter the ticket number for your change request. The maximum length is 255 characters.

This number is an identifier to a ticket in your ticketing system. You can map more than one change request to a ticket.

- e. From the Request Priority list, select the priority for your change request to let the approver know the criticality of your change request.

The default priority is High.

- f. In the Approval Due Date field, select a due date for approval.

By default, the number of days that you configured in Step 1 are set for approval.

- g. In the Changes field, click **View** to view the unsubmitted changes before creating a change request.

- h. Click **Ok**.

A change request for your policy is created for approval. Any changes to the shared objects or rules of the policy are also submitted for change request approval. This change request appears in the workspace of the approver to take appropriate action.

Approving a Change Request

The following steps explain the procedure for approvers to take necessary action on the submitted change requests:

1. Review the submitted change requests by the policy administrators.
 - a. Click **Security Director > Configure > Change Management > Change Requests**.

Approver can see the changes submitted information, as shown in [Figure 82 on page 1187](#).

Figure 82: Change Requests Page

Configure / Change Management / Change Requests

Change Requests ?

Changes Submitted Approve Deny Update ✕ 🔍

| <input type="checkbox"/> | Request Name | Status | Comments | Priority | Dependencies | Policy Name | Service Type | Ticket Number | Description | Created By | Approval |
|--------------------------|--------------|---------|----------|----------|--------------|-------------|-----------------|---------------|---------------------|------------|----------|
| <input type="checkbox"/> | ccr-1 | Pending | | MEDIUM | None | test | Firewall Policy | 101 | rule change request | super | Sun Sep |

1 items

Changes Not Submitted Request Change Edit Policy Discard Policy Changes 🔍

| <input type="checkbox"/> | Policy Name | Unsubmitted Changes | Last Modified | Change Saved By |
|--------------------------|--------------------|----------------------|--|-----------------|
| ▼ | Firewall Policy | | | |
| <input type="checkbox"/> | device1 | View | Tue Aug 29 2017 12:52:28 (India Standard Ti... | super |
| <input type="checkbox"/> | AllEdge-SRX-Policy | View | Tue Aug 29 2017 15:02:27 (India Standard Ti... | super |
| <input type="checkbox"/> | 10.206.47.55 | View | Thu Aug 31 2017 14:53:14 (India Standard Ti... | super |

- b. Under the Changes Submitted section, review the change request in the pending state and check for any dependencies. In the Dependencies column, click **View** to view dependencies.
2. Approve or deny the change request.
 - a. After reviewing the change request, click **Approve** or **Deny**.

A confirmation window appears to approve or deny the change request. A comment in the confirmation window for the Deny action is mandatory, as shown in [Figure 83 on page 1188](#) and [Figure 84 on page 1188](#).

Figure 83: Approve Request Page

Approve Request ?

Do you want to approve the changes for the following request(s)?
ccr-1

Comments (optional).

No

Yes

Figure 84: Deny Request Page

Deny Request ?

Do you want to deny the changes for the following request(s)?
ccr-1

Comments (mandatory).

! Please enter comments

No

Yes

**NOTE:**

- Ensure that the change request does not have any dependencies before the approval. If there is a dependency, you must approve all the parent change requests before approving a child change request.
- Before denying a change request, you must ensure that all the change requests that are dependent on the selected change request for denial are already in the denied state. A warning message is displayed if the dependent change requests are not in the denied state.

- b. Click **Yes** to approve or deny the request.

The change request workspace of the policy administrator shows all the change requests that were approved or rejected. An e-mail is sent to the requester and other approvers about the approval or denial of the corresponding change request.

Publishing and Updating the Approved Change Request

The change request workspace of the policy administrator shows the change requests that are approved or rejected. The policy administrators can update only the approved change requests. Updating a change request is the same as publishing and updating in succession. You can either update the change request immediately or schedule to update later.

To update a change request:

1. Click **Security Director > Configure > Change Management > Change Requests**.

You see the information on changes submitted.

2. In the Changes Submitted area, select the approved change request and click **Update**.

The Update Change Request page appears, as shown in [Figure 85 on page 1190](#).

Figure 85: Update Change Request Page

Update Change Request ?

Update * ?

☐ Run now
☒ Schedule at a later time

09/05/2017 11:25:18 AM

[Cancel](#) [Update Request](#)

3. Select the **Run now** option to update the changes immediately or the **Schedule at a later time** option to schedule the update later.

If the selected change request has dependencies, then the user is notified that the deployment of dependency change requests will also be scheduled (if they have not been already) or advanced (if they have been scheduled for a later time) to the same time as that of the selected change request.

A new snapshot of the policy is created. This snapshot is used as the source to publish and update. This new snapshot is essentially the previously deployed snapshot of the policy along with the changes from the selected change request. This snapshot is visible in the Manage Snapshots list.

4. Click **Update Request**.

If either the publish job or update job fails, then the change request is moved to the Deployment Failed state. You can redeploy the failed change requests.

5. Review and verify the publish and update job status.

The review, verification, and update is performed by the policy administrators.

RELATED DOCUMENTATION

[Change Control Workflow Overview](#) | 1174

Editing, Denying, and Deleting Change Requests

IN THIS SECTION

- [Editing Changes Submitted | 1191](#)
- [Denying Changes Submitted | 1191](#)
- [Deleting Changes Submitted | 1192](#)

You can edit, deny, and delete the change requests from the Changes Submitted page. You can deny the approved change request to remove the changes.

Editing Changes Submitted

To edit a change request:

1. Select **Configure** > **Change Management** > **Change Requests**.

The Changes Submitted page appears.

2. Select the submitted change request that you want to edit, and click the pencil icon.

The Edit Change Request page appears, showing the same fields that are displayed when you create a new change request.

3. Edit the change request fields as needed.

4. Click **OK** to save changes.

The changes are saved and you are returned to the Changes Submitted page.

Denying Changes Submitted

To deny a change request:

1. Select **Configure** > **Change Management** > **Change Requests**.

The Changes Submitted page appears.

2. Select a changed request that you want to deny, and click **Deny**.

The Deny Request page appears to confirm the deny action. You can select multiple change requests for denial.

3. Enter your comment for the denial.

This is a mandatory field. You must ensure that all the change requests that are dependent on the selected change request for denial are already in the denied state. A warning message is displayed, if the dependent change requests are not in the denied state.

4. Click **Yes** to deny the request.

A confirm message shows the denial as successful and the status is changed from Approved to Denied, on the Changes Submitted landing page. An e-mail is sent to the requester of the change request and other approvers about the denial of the change request.

Deleting Changes Submitted

To delete a change request:

1. Select **Configure > Change Management > Change Requests**.

The Changes Submitted page appears.

2. Select the change request that you want to delete and click the **X** icon.

A warning dialog box appears asking you to confirm the deletion.

3. Click **Yes** to delete the selected change request.

The change request is deleted and you are returned to the Changes Submitted page.



NOTE: You cannot select more than one change request for deletion.

RELATED DOCUMENTATION

[Creating a Firewall or NAT Policy Change Request | 1177](#)

[About the Changes Submitted Page | 1179](#)

[Approving and Updating Changes Submitted | 1181](#)

About the Changes Not Submitted Page

IN THIS SECTION

- [Tasks You Can Perform | 1193](#)
- [Field Descriptions | 1193](#)

To access this page, click Configuration > Change Management > Change Requests.

Use the Changes Not Submitted page to view all policy changes that are not submitted. You can also perform the required actions such as initiating the change request, editing the policy, and discarding the policy changes.

A policy can be submitted for change request, if one or more of the following conditions match:

- If the policy is explicitly locked and being modified by the current user.
- If the policy is implicitly modified because of a change in a referred shared object (except if the policy is locked by another user).



NOTE: Changes to a shared object can be made by any user with the appropriate permissions.

- The policy is newly created, imported, or migrated from NSM.

A policy cannot be submitted for change request for the following reasons:

- If a policy is not assigned to any device.
- If a policy is locked by some other user.

Tasks You Can Perform

You can perform the following tasks from this page:

- Initiate the change request. See ["Creating a Firewall or NAT Policy Change Request" on page 1177](#).
- Edit the policy details.
- Discard the policy changes. See ["Discarding Policy Changes" on page 1194](#).

Field Descriptions

[Table 352 on page 1193](#) provides guidelines on using the fields on the Changes Not Submitted page.

Table 352: Fields on the Changes Not Submitted Page

| Field | Description |
|-------------|--|
| Policy Name | Specifies the name of the policy. Click the Policy Name link to view the summary of changes to the policy. |

Table 352: Fields on the Changes Not Submitted Page (*Continued*)

| Field | Description |
|---------------------|---|
| Unsubmitted Changes | Click View to view detailed information about the unsubmitted changes. |
| Service Type | Specifies the type of policy (firewall or NAT). |
| Last Modified | Specifies date and time at which the policy was modified. |
| Change Saved By | Specifies the name of the user who saved the changes. |

RELATED DOCUMENTATION

[Creating a Firewall or NAT Policy Change Request | 1177](#)

[Discarding Policy Changes | 1194](#)

[Viewing Submitted and Unsubmitted Policy Changes | 1195](#)

Discarding Policy Changes

At any time, you can undo all changes made during the current session. This action removes the changes and the policy reverts to its previous state.

To discard all the changes made during the current session:

1. Select **Configuration > Change Management > Change Request**.
2. In the Changes Not Submitted section, select the unsubmitted policy, and click **Discard Policy Changes**.

A warning dialog box appears asking you to confirm the discard operation.

3. Click **Yes**.

This operation also includes discarding changes to the referred shared objects. The Object Conflict Resolution (OCR) is performed to check for any conflicts while rolling back the changes. If there are any conflicts between the versioned data and the current changes in the system, the OCR window is displayed. After resolving all conflicts, click **Next** to view the OCR summary report.

4. Click **Finish** to discard the changes.

RELATED DOCUMENTATION

| |
|---|
| Creating a Firewall or NAT Policy Change Request 1177 |
| Viewing Submitted and Unsubmitted Policy Changes 1195 |

Viewing Submitted and Unsubmitted Policy Changes

Using the Submitted Changes and Unsubmitted Changes page, you can view the details of the policy changes.

To see a detailed view of submitted or unsubmitted policy changes:

1. Select **Configure > Change Management > Change Requests**.
2. To view the details, click the request name under the Changes Submitted section or click **View** in the Unsubmitted Changes column under the Changes Not Submitted section.

The Submitted Changes or Unsubmitted Changes page appears. [Table 353 on page 1195](#) explains details available on this page.

Table 353: Detailed View of Changes

| Name | Description |
|---------------------|--|
| Summary of Changes | <p>Displays the general summary of a policy or a change request with the following information:</p> <ul style="list-style-type: none">• Name of the policy or a change request• Status of the change request, if changes are submitted• Modified date of a policy or a change request• Change summary information |
| Delta Configuration | <p>Displays the differences between the configurations. Click on the device name to see the delta configurations. You can view the delta in a CLI configuration or an XML configuration window.</p> |
| Compare Changes | <p>Displays a detailed report of current changes from the last created change request.</p> |

Table 353: Detailed View of Changes *(Continued)*

| Name | Description |
|------------------|---|
| Affected Devices | <p>Displays the total number of devices that are associated with the policy. The following device details are displayed:</p> <ul style="list-style-type: none">• Device name• IP address of a device• Connection status of a device• Platform details of a device• Configuration status of a device |

RELATED DOCUMENTATION

| |
|---|
| Change Control Workflow Overview 1174 |
| About the Changes Submitted Page 1179 |
| About the Changes Not Submitted Page 1192 |

Change Management-Change Request History

IN THIS CHAPTER

- [About the Change Request History Page | 1197](#)

About the Change Request History Page

IN THIS SECTION

- [Tasks You Can Perform | 1197](#)
- [Field Descriptions | 1197](#)

To access this page, click [Configure > Change Management > Change Request History](#).

Use the Change Request History page to view the history of all the updated change requests. You click on the request name to view more details about the changes.

Tasks You Can Perform

You can perform the following tasks from this page:

- Click the request name to view the details of the changes.
- Click the update Job ID to view job details of each change request.

Field Descriptions

[Table 354 on page 1198](#) provides guidelines on using the fields on the Change Request History page.

Table 354: Fields on the Change Request History Page

| Field | Description |
|-----------------|--|
| Request Name | <p>Name of the change submit request.</p> <p>Click the request name to view the following information:</p> <ul style="list-style-type: none"> • Summary of changes • Delta of changes • Compare the changes between change requests • List of affected devices |
| Dependencies | <p>Specifies if the policy has any dependencies with other policies</p> <p>For all the successfully updated change requests, this field is shown as None.</p> |
| Policy Name | Specifies the name of the policy for which the change request has been created. |
| Service Type | Specifies the service type of the policy. For example: Firewall, NAT |
| Ticket Number | Specifies the ticket number of a change request. |
| Description | Specifies the description of the change request. This field is autopopulated from the comments the user enters while saving changes to the policy. If user performs multiple saves, this field is populated with a concatenated list of all saved comments. |
| Created By | Specifies the name of the requester. |
| Request Created | Specifies the change request created date and time. |
| Priority | Specifies the priority of the change request. |
| Comments | Specifies the comments entered by the approver while approving the change request. |
| Approved By | Specifies the name of the approver who has approved the change request. |

Table 354: Fields on the Change Request History Page (Continued)

| Field | Description |
|---------------|--|
| Updated By | Specifies the name of user who has updated the approved change request. |
| Update Job ID | Specifies the job ID of the update. Click the job ID to view the complete job details. |
| Update Date | Specifies the date and time of the change request update. |

RELATED DOCUMENTATION[Creating a Firewall or NAT Policy Change Request | 1177](#)[Approving and Updating Changes Submitted | 1181](#)[Editing, Denying, and Deleting Change Requests | 1191](#)[About the Changes Submitted Page | 1179](#)

Overview of Policy Enforcer and Juniper ATP Cloud

IN THIS CHAPTER

- [Policy Enforcer Overview | 1200](#)
- [Benefits of Policy Enforcer | 1203](#)
- [Juniper ATP Cloud Overview | 1205](#)

Policy Enforcer Overview

IN THIS SECTION


- [Supported Topologies | 1201](#)

Policy Enforcer, a component of the Junos Space Security Director user interface, integrates with Juniper ATP Cloud to provide centralized threat management and monitoring to your Juniper connected security network, giving you the ability to combine threat intelligence from different solutions and act on that intelligence from one management point.

It also automates the enforcement of security policies across the network and quarantines infected endpoints to prevent threats across firewalls and switches. Working with Juniper ATP Cloud, it protects perimeter-oriented threats as well as threats within the network. For example, if a user downloads a file from the Internet and that file passes through an SRX Series firewall, the file can be sent to the Juniper ATP Cloud cloud for malware inspection. If the file is determined to be malware, Policy Enforcer identifies the IP address and MAC address of the host that downloaded the file. Based on a user-defined policy, that host can be put into a quarantine VLAN or blocked from accessing the Internet.

[Figure 86 on page 1201](#) illustrates the flow diagram of Policy Enforcer over a traditional SRX Series configuration.

Figure 86: Comparing Traditional SRX Customers to Policy Enforcer Customers

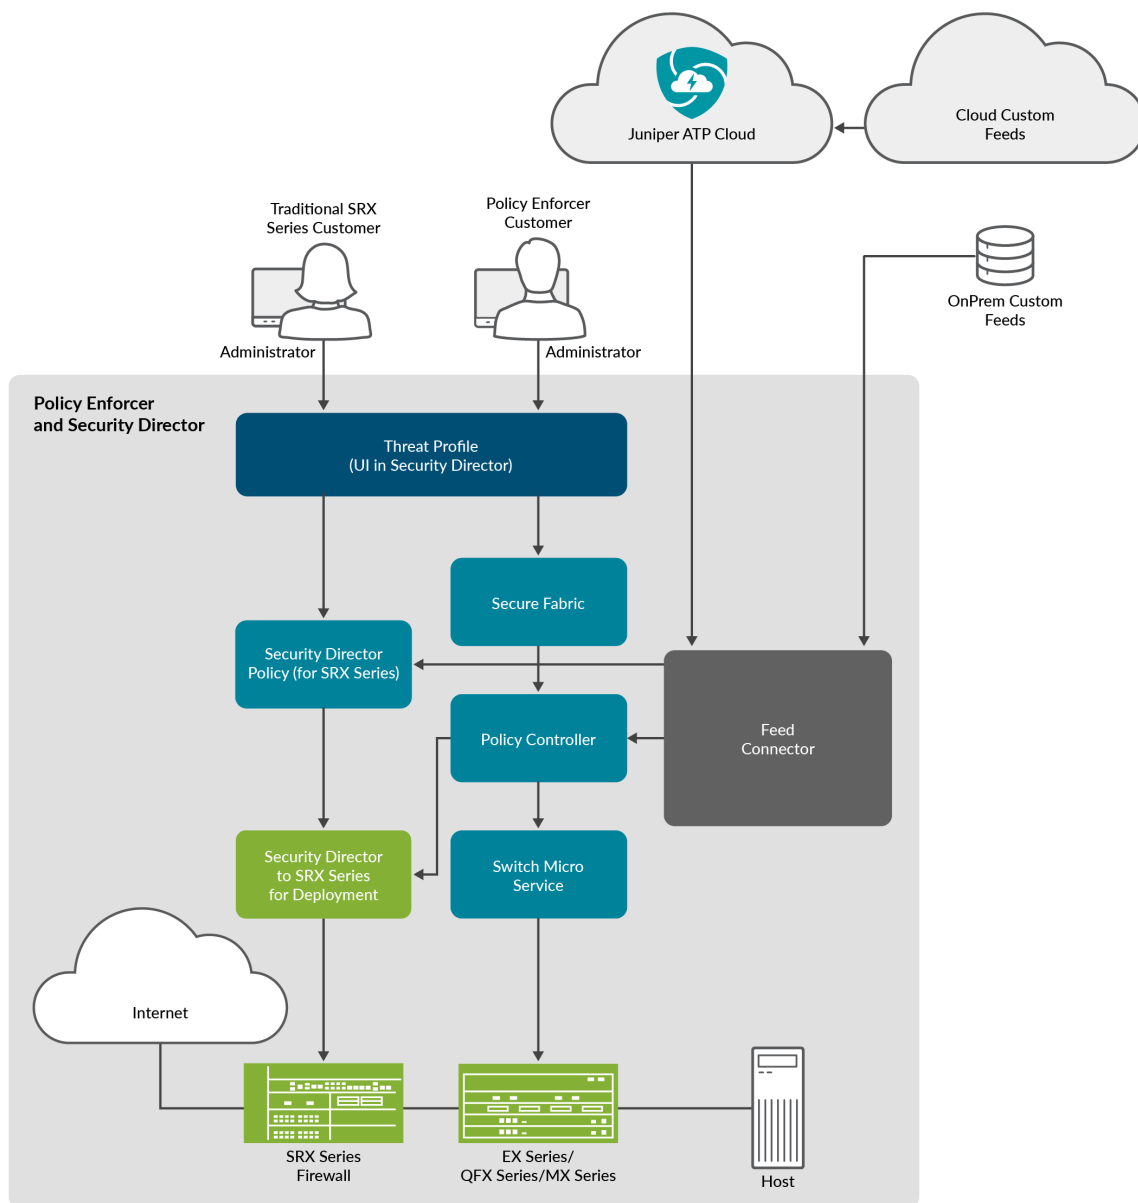

g004185

Supported Topologies


Policy Enforcer supports the following topologies:

- Client to Layer 2 switch to Layer 3 SRX (IRB)
- Client to Layer 2 switch to Layer 3 switch (IRB)

- Client to Layer 2/Layer 3 switch (IRB)

Figure 87 on page 1202 illustrates the Policy Enforcer deployment topologies.

Figure 87: Policy Enforcer Deployment Topologies

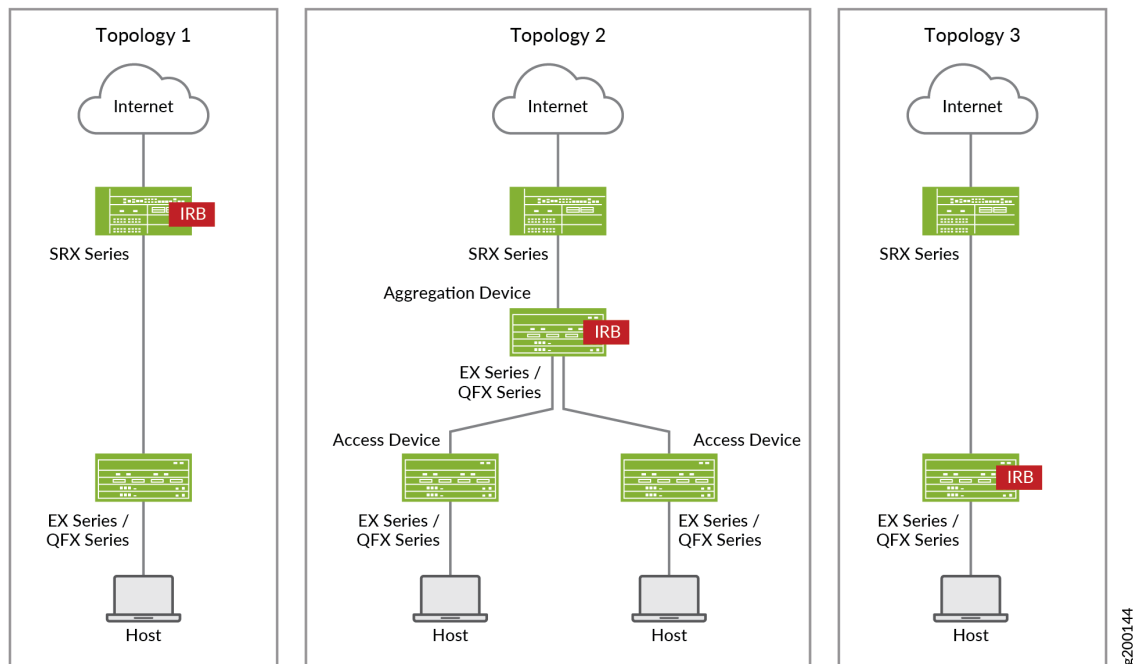

RELATED DOCUMENTATION

[Juniper Networks Connected Security Overview](#)

[Policy Enforcer Components and Dependencies](#)

[Policy Enforcer Configuration Concepts](#)

[Juniper ATP Cloud Overview](#)

[Policy Enforcer Installation Overview](#)


[Using Guided Setup for Sky ATP with SDSN](#)

[Using Guided Setup for Juniper ATP Cloud](#)

Benefits of Policy Enforcer

Most enterprise computer security revolves around creating a wall around the perimeter of an organization. See [Figure 88 on page 1203](#).

Figure 88: Perimeter-Defined Security Model

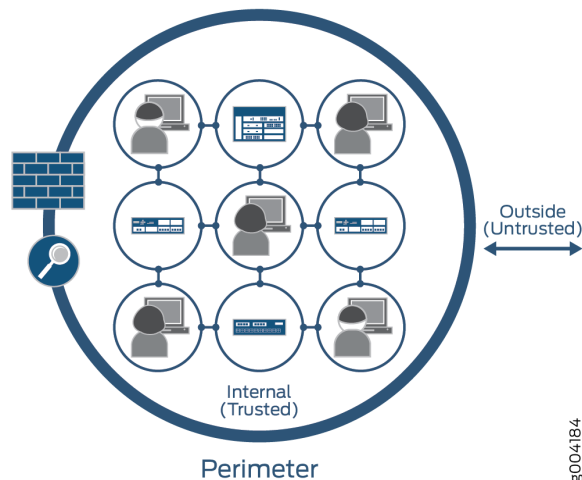

With this perimeter oriented security, networks are built with an inherently trusted model where the applications or users connecting to a network (for example, VLAN) can fundamentally talk to each other and network security solutions like firewalls and Intrusion Prevention Systems (IPS) are deployed in the perimeter to provide security. Firewalls are often configured with all possible rules in an effort to prevent unknown malware, application and network attacks from penetrating the enterprise. This architecture is based on a model where it is assumed that “Everything already inside the network is fundamentally trusted” and “Everything outside the network is untrusted” so the perimeter is the location where all security controls are deployed.


This architecture is consistent across data centers, and campus and branch configurations. Unfortunately, there are flaws to this security architecture. They don't help in protecting against internal threats. Despite the popularity of firewalls, the sophistication of applications and malware in recent years has found a way to circumvent perimeter defenses. Once inside the enterprise, these threats can easily spread; where someone's infected laptop or desktop could make Enterprise networks a botnet army and become a source of internal and external attacks. Enterprises can protect against internal threats by deploying multiple layers of firewalls, but that requires careful planning since it is difficult to take all internal traffic through a separate layer of firewalls.

The security framework become a highly fragmented approach due to multiple administrators, management systems and reliance on a lot of manual coordination among different administrators and systems:

- There is a network security team that manages security policies on perimeter firewalls primarily to manage external threats.
- There is a network operations team, that typically manages security policies by using network and application isolation to protect against internal attacks and unauthorized access.
- Then there is third team, an IT team, that manages end-points such as laptops, desktops and application servers to make sure that they have the correct security posture.

In contrast, Policy Enforcer and Juniper Connected Security, see [Figure 89 on page 1204](#), simplifies network security by providing protection based on logical policies and not security devices. Policy Enforcer does provide perimeter security, but it's no longer just protecting the inside from the outside. The fact that somebody is connected to the internal network does not mean that they can get unrestricted access to the network. This model is fundamentally more secure because even if one application on the network is compromised, companies can limit the spread of that infection/threat to other potentially more critical assets inside the network.

Figure 89: Policy Enforcer and Juniper Connected Security

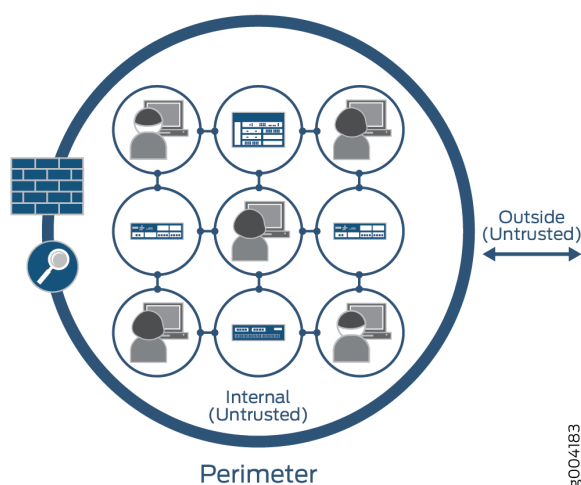

Policy Enforcer is a model where the information security is controlled and managed by security software. New devices are automatically covered by security policies, instead of having to identify its IP address as with other models. Because it's software-defined, environments can be moved without affecting security policies and controls already in place. Other advantages include:

- Better and more detailed security—By providing better visibility into network activity, you can respond faster to cyber threats and other security incidents. Threats can be detected faster by leveraging threat intelligence from multiple sources (including third-party feeds) and the cloud. A central control lets you analyze security challenges without interfering with standard network

activity and to distribute security policies throughout your organization. For example, you can selectively block malicious traffic while allowing normal traffic flow.

- Scalability and cost savings—A software-based model allows you to quickly and easily scale security up or down based on your immediate needs all without having to add or subtract hardware that is expensive to buy and maintain.
- Simpler solution—Hardware security architectures can be complex due to the servers and specialized physical devices that are required. In a software model, security is based on policies. Information can be protected anywhere it resides without depending on its physical location.

RELATED DOCUMENTATION

Policy Enforcer Overview

[Juniper ATP Cloud Overview](#)

Using Guided Setup for Sky ATP with SDSN

[Using Guided Setup for Juniper ATP Cloud](#)

Configuring Sky ATP with SDSN (Without Guided Setup) Overview

Juniper ATP Cloud Overview

Juniper ATP Cloud is a cloud-based solution that integrates with Policy Enforcer. Cloud environments are flexible and scalable, and a shared environment ensures that everyone benefits from new threat intelligence in near real-time. Your sensitive data is secured even though it is in a cloud shared environment. Security administrators can update their defenses when new attack techniques are discovered and distribute the threat intelligence with very little delay.

Juniper ATP Cloud offers the following features:

- Communicates with firewalls and switches to simplify threat prevention policy deployment and enhance the anti-threat capabilities across the network.
- Delivers protection against “zero-day” threats using a combination of tools to provide robust coverage against sophisticated, evasive threats.
- Checks inbound and outbound traffic with policy enhancements that allow users to stop malware, quarantine infected systems, prevent data exfiltration, and disrupt lateral movement.
- Provides deep inspection, actionable reporting, and inline malware blocking.

- Provides feeds for GeolIP, C&C, allowlist and blocklist, infection hosts, custom configured feeds and file submission.

Figure 90 on page 1206 lists the Juniper ATP Cloud components.

Figure 90: Juniper ATP Cloud Components

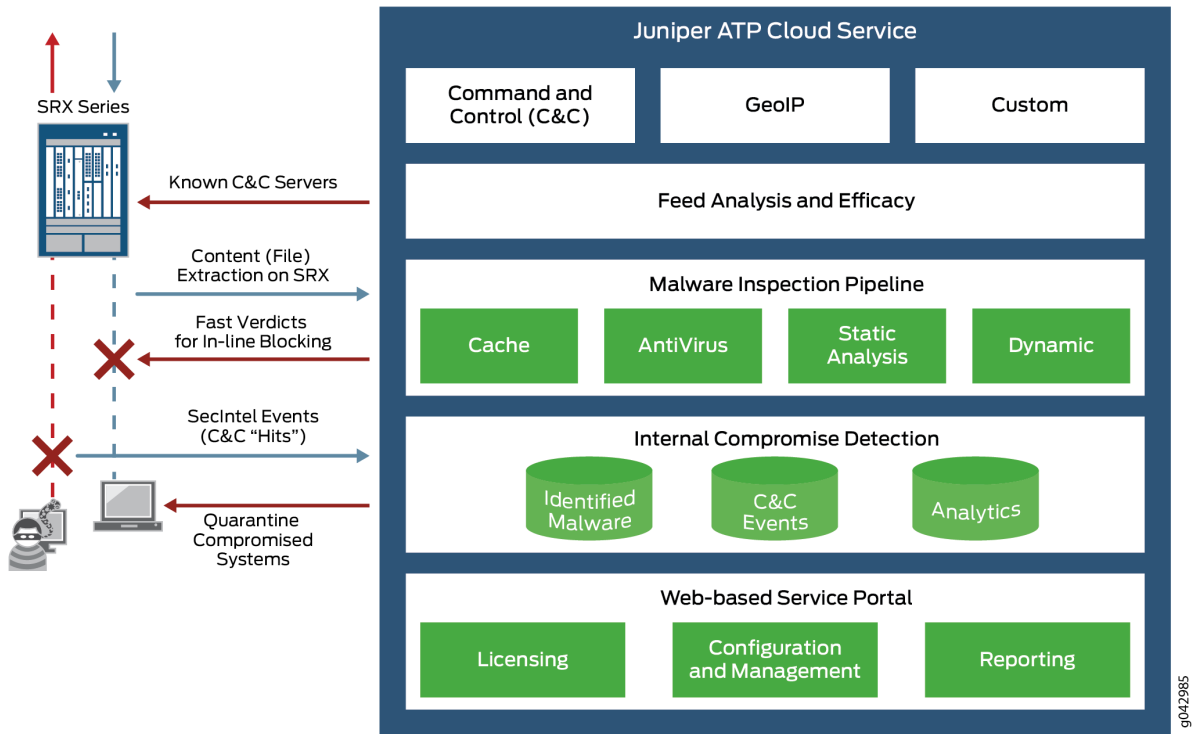


Table 355 on page 1206 briefly describes each Juniper ATP Cloud component's operation.

Table 355: Juniper ATP Cloud Components

| Component | Operation |
|---------------------------------------|--|
| Command and control (C&C) cloud feeds | C&C feeds are essentially a list of servers that are known command and control for botnets. The list also includes servers that are known sources for malware downloads. See <i>Command and Control Servers Overview</i> . |
| GeolIP cloud feeds | GeolIP feeds is an up-to-date mapping of IP addresses to geographical regions. This gives you the ability to filter traffic to and from specific geographies in the world. |

Table 355: Juniper ATP Cloud Components (*Continued*)

| Component | Operation |
|-------------------------------|--|
| Infected host cloud feeds | Infected hosts indicate local devices that are potentially compromised because they appear to be part of a C&C network or other exhibit other symptoms. See <i>Infected Hosts Overview</i> . |
| Custom Feeds | Lists you customize by adding IP addresses, domains, and URLs to your own lists. See <i>Custom Feed Sources Overview</i> . |
| Allowlist and blocklists | An allowlist is simply a list of known IP addresses that you trust and a blocklist is a list that you do not trust. |
| Malware inspection pipeline | Performs malware analysis and threat detection. |
| Internal compromise detection | Inspects files, metadata, and other information. |

RELATED DOCUMENTATION

[Juniper ATP Cloud Realm Overview | 945](#)

[Using Guided Setup for Juniper ATP Cloud | 1334](#)

[Configuring Juniper ATP Cloud \(No Juniper Connected Security and No Guided Setup\) Overview | 1343](#)

Concepts and Configuration Types to Understand Before You Begin (Policy Enforcer and Juniper ATP Cloud)

IN THIS CHAPTER

- [Policy Enforcer Components and Dependencies | 1208](#)
- [Policy Enforcer Configuration Concepts | 1214](#)
- [Juniper ATP Cloud Configuration Type Overview | 1215](#)
- [Features By Juniper ATP Cloud Configuration Type | 1219](#)
- [Available UI Pages by Juniper ATP Cloud Configuration Type | 1220](#)
- [Comparing the Juniper Connected Security and non-Juniper Connected Security Configuration Steps | 1223](#)

Policy Enforcer Components and Dependencies

The Policy Enforcer management interface is a component of Junos Space Security Director and requires the following to be configured and deployed:

- Junos Space Platform—Junos Space is a comprehensive network management solution that simplifies and automates management of Juniper Networks switching, routing, and security devices. Junos Space Virtual Appliance includes the complete Junos Space software package as well as the Junos OS operating system. It requires users to create a virtual machine (VM) in order to deploy the appliance.
- Security Director—Junos Space Security Director provides centralized and orchestrated security policy management through a web-based interface. Security administrators can use Security Director to manage all phases of the security policy life cycle for every SRX Series physical and virtual device.
- Policy Enforcer—Policy Enforcer itself is installed on a VM and uses RESTful APIs to communicate with both Security Director and Juniper Networks Advanced Threat Prevention Cloud (Juniper ATP Cloud). Policy Enforcer contains two components:

- **Policy Controller**—Defines the logical grouping of the network into secure fabric, automates the enrollment of SRX Series devices with Juniper ATP Cloud, and configures the SRX firewall policies.
- **Feed Connector**—Aggregates the cloud and customer feeds and is the server for SRX Series devices to download feeds.
- **Juniper ATP Cloud**—Juniper ATP Cloud employs a pipeline of technologies in the cloud to identify varying levels of risk, and provides a higher degree of accuracy in threat protection. It integrates with SRX Series gateways to deliver deep inspection, inline malware blocking, and actionable reporting.

Juniper ATP Cloud's identification technology uses a variety of techniques to quickly identify a threat and prevent an impending attack, including:

- Rapid cache lookups to identify known files.
- Dynamic analysis that involves unique deception techniques applied in a sandbox to trick malware into activating and self-identifying.
- Machine-learning algorithms to adapt to and identify new malware.
- **SRX Series device**—SRX Series gateways provide security enforcement and deep inspection across all network layers and applications. Users can be permitted or prohibited from accessing specific business applications and Web applications, regardless of the network ports and protocols that are used to transmit the applications.

[Figure 91 on page 1210](#) illustrates how the components in the Policy Enforcer Deployment Model interact.

Figure 91: Components of the Policy Enforcer Deployment Model


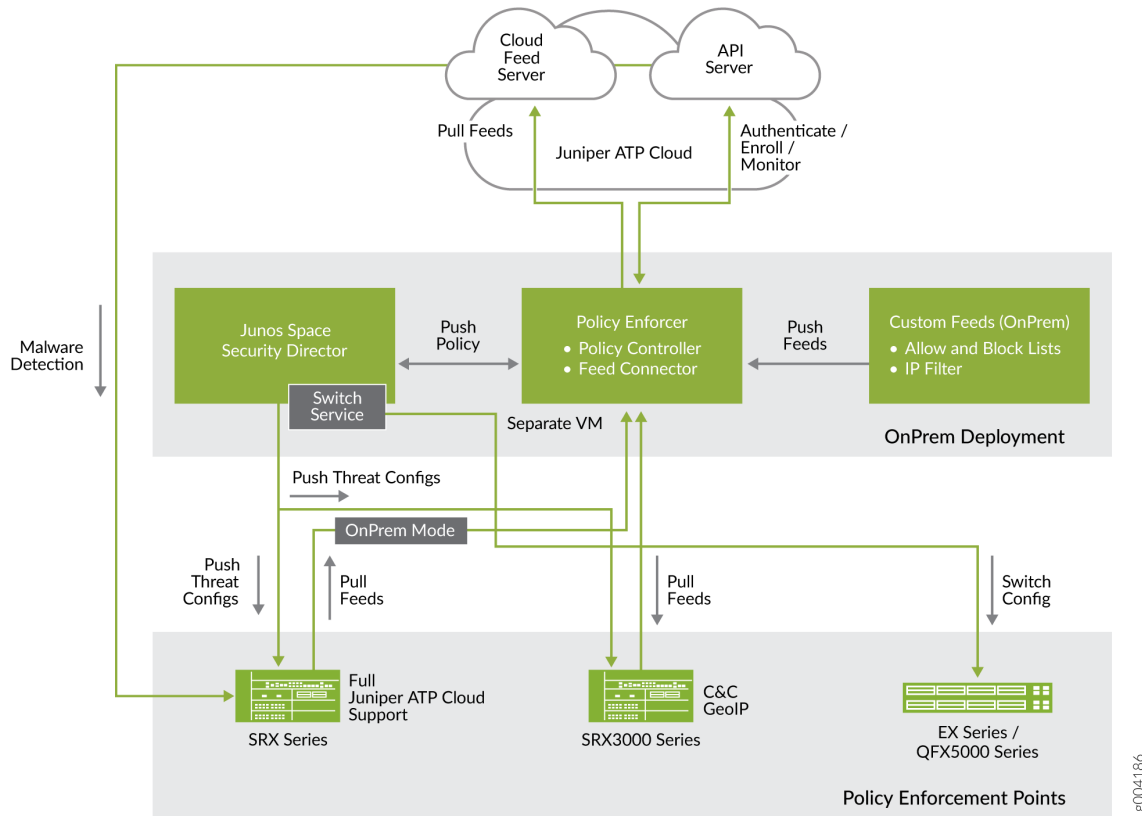


Figure 92 on page 1211 shows an example infected endpoint scenario to illustrate how some of the components work together.


Figure 92: Blocking an Infected Endpoint

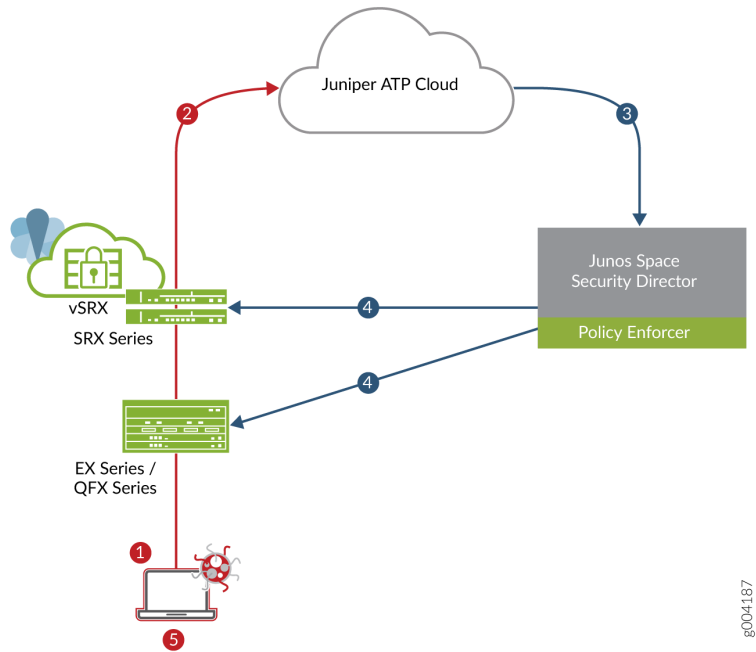

| Step | Action |
|------|---|
| 1 | A user downloads a file from the Internet. |
| 2 | Based on user-defined policies, the file is sent to the Juniper ATP Cloud cloud for malware inspection. |
| 3 | The inspection determines this file is malware and informs Policy Enforcer of the results. |
| 4 | The enforcement policy is automatically deployed to the SRX Series device and switches. |
| 5 | The infected endpoint is quarantined. |

Policy Enforcer can track the infected endpoint and automatically quarantine it or block it from accessing the Internet if the user moves from one campus location to another. See [Figure 93 on page 1212](#).

Figure 93: Tracking Infected Endpoint Movement

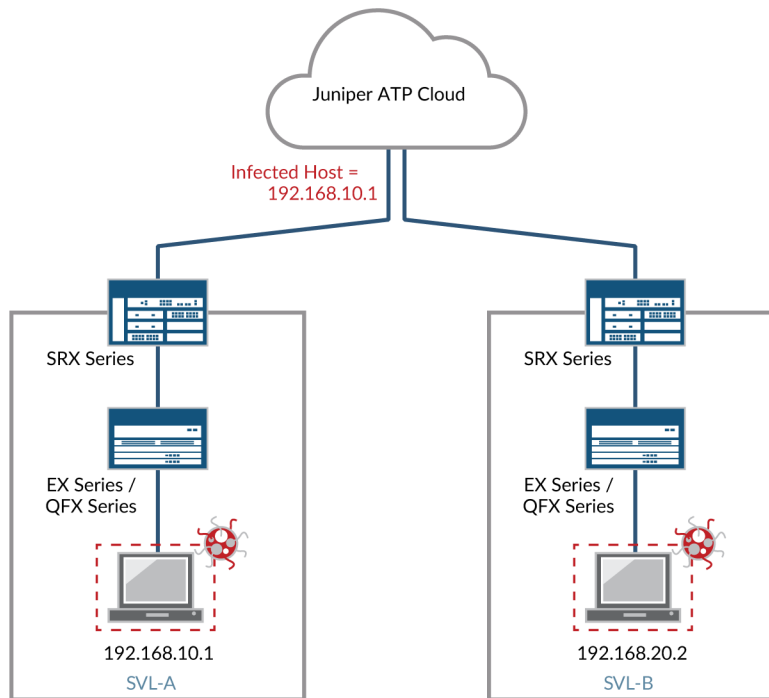


In this example, Juniper ATP Cloud identifies the endpoint as having an IP address of 192.168.10.1 and resides in SVL-A. The EX Series switch quarantines it because it has been labeled as an infected host by Juniper ATP Cloud. Suppose the infected host physically moves from location SVL-A to location SVL-B. The EX Series switch (in SVL-B) microservice tracks the MAC address to the new IP address and automatically quarantines it. Policy Enforcer then informs Juniper ATP Cloud of the new MAC address-to-IP address binding.

Policy Enforcer can also quarantine infected hosts even if those hosts are connected to third-party switches, as shown in [Figure 94 on page 1213](#).

For Policy Enforcer to provide threat remediation to endpoints connecting through third-party devices, it must be able to authenticate those devices and determine their state. It does this using a tracking and accounting threat remediation plug-in to gather information from a RADIUS server and enforce policies such as terminate session and quarantine. For more information, see *Policy Enforcer Connector Overview*

Figure 94: Third-Party Switch Support

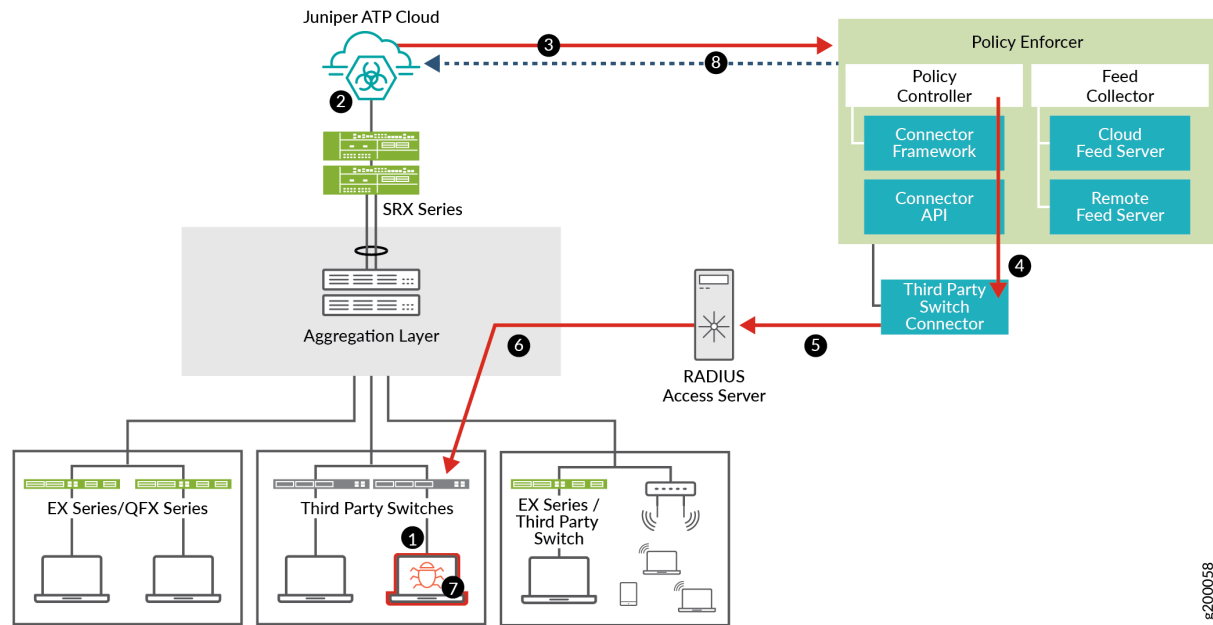

6200058

| Step | Action |
|------|---|
| 1 | An end-user authenticates to the network through IEEE 802.1X or through MAC-based authentication. |
| 2 | Juniper ATP Cloud detects the end point is infected with malware and adds it to the infected host feed. |
| 3 | Policy Enforcer downloads the infected host feed. |
| 4 | Policy Enforcer enforces the infected host policy using the Connector. See <i>Policy Enforcer Connector Overview</i> . |
| 5 | The Connector queries the RADIUS server for the infected host endpoint details and initiates a Change of Authorization (CoA) for the infected host. |
| 6 | The CoA can be either block or quarantine the infected host. |
| 7 | The enforcement occurs on the NAC device the infected host is authenticated with. |

(Continued)

| Step | Action |
|------|---|
| 8 | Policy Enforcer communicates the infected host details back to Juniper ATP Cloud. |

RELATED DOCUMENTATION

Policy Enforcer Overview

Policy Enforcer Configuration Concepts

[Juniper ATP Cloud Overview](#)

Policy Enforcer Installation Overview

Using Guided Setup for Sky ATP with SDSN

[Using Guided Setup for Juniper ATP Cloud](#)

Configuring Sky ATP with SDSN (Without Guided Setup) Overview

Policy Enforcer Configuration Concepts

You have some options for how you can approach the initial setup of Juniper ATP Cloud and Policy Enforcer. There is a “Guided Setup” approach which walks you through the necessary steps for getting the product up and running. This is the recommended approach. If you prefer, you can manually configure each part of the product.

Either way, before you begin the configuration, you need to understand the concepts behind the configuration items required to successfully deploy threat management policies across your network. These items include security realms for Juniper ATP Cloud, secure fabric for sites, and policy groups for endpoints. These are explained in this section.

- **Security Realm**—When configuring Juniper ATP Cloud or Policy Enforcer with Juniper ATP Cloud, there are Realm selection fields at the top of several pages. A security realm is a group identifier for an organization used to restrict access to Web applications. You must create at least one security realm to login into Juniper ATP Cloud. Once you create a realm, you can enroll SRX Series devices into the realm. You can also give more users (administrators) permission to access the realm.

If you have multiple security realms, note that each SRX Series device can only be bound to one realm, and users cannot travel between realms.

- **Policy Enforcement Groups**—A policy enforcement group is a grouping of endpoints to which threat prevention policies are applied. Create a policy enforcement group by adding endpoints (firewalls, switches, subnets, set of end users) under one common group name and later applying a threat prevention policy to that group.

Some information to know about enforcement groups is as follows: Determine what endpoints you will add to the group based on how you will configure threat prevention, either according to location, users and applications, or threat risk. Endpoints cannot belong to multiple policy enforcement groups.

- **Threat Prevention Policies**—Once you have a Threat Prevention Policy, you assign one or more Policy Enforcement Groups to it. Threat prevention policies provide protection and monitoring for selected threat profiles, including command & control servers, GeolIP, infected hosts, and malware. Using feeds from Juniper ATP Cloud and custom feeds you configure, ingress and egress traffic is monitored for suspicious content and behavior. Based on a threat score, detected threats are evaluated and action may be taken once a verdict is reached.
- **Secure Fabric**—For your configuration you must create one or more sites for your secure fabric. Secure fabric is a collection of sites which contain network devices (switches, routers, firewalls, and other security devices), used in policy enforcement groups. When threat prevention policies are applied to policy enforcement groups, the system automatically discovers to which sites those groups belong. This is how threat prevention is aggregated across your secure fabric.

Some information to know about sites is as follows: When you create a site, you must identify the perimeter firewalls so you can enroll them with Juniper ATP Cloud. If you want to enforce an infected host policy within the network, you must assign a switch to the site. Devices cannot belong to multiple sites.

RELATED DOCUMENTATION

Juniper ATP Cloud Configuration Type Overview

Using Guided Setup for Sky ATP with SDSN

[Using Guided Setup for Juniper ATP Cloud](#)

Policy Enforcer Overview

[Juniper ATP Cloud Overview](#)

Juniper ATP Cloud Configuration Type Overview

Juniper ATP Cloud or ATP Appliance with Policy Enforcer can be used in four different configuration types, which will be explained here.



NOTE: If you are using Juniper ATP Cloud without Policy Enforcer, you must dis-enroll the devices from Juniper ATP Cloud before you re-enroll to Policy Enforcer.



NOTE: The license you purchase determines if you can use the available configurations and feature sets for your selected ATP Cloud Configuration Type.

Configuration Type is set here in the UI: **Administration > Policy Enforcer > Settings**.

The following Juniper ATP Cloud Configuration Types and corresponding workflows are available. Workflows are the items you configure for each selection.



NOTE:

ATP Cloud or JATP with Juniper Connected Security—This is the full version of the product. All Policy Enforcer features and threat prevention types are available.

Here is the Juniper ATP Cloud with Juniper Connected Security workflow:

- Secure Fabric
- Policy Enforcement Group
- Juniper ATP Cloud Realm
- Threat Prevention Policies for the following threat types:
 - C&C Server
 - Infected Hosts
 - Malware
 - Geo IP

Here is the ATP Appliance with Juniper Connected Security workflow:

- Secure Fabric
- Policy Enforcement Group
- Threat Prevention Policies for the following threat types:
 - C&C Server
 - Infected Hosts

- Malware
- Geo IP



NOTE: After you upgrade from one threat prevention type to ATP Cloud or ATP Appliance with Juniper Connected Security configuration type, an additional rule is being created and pushed to the next update in the analysis window.

ATP Cloud or JATP—This includes all threat prevention types, but does not include the benefits of Secure Fabric, Policy Enforcement Groups, and Threat Prevention policies provided by Policy Enforcer. All enforcement is done through SRX Series Firewall policies.

Here is the Juniper ATP Cloud workflow:

- Juniper ATP Cloud Realm
- Threat Prevention Policies for the following threat types:
 - C&C Server
 - Infected Hosts
 - Malware
 - Geo IP

Here is the ATP Appliance workflow:

- Threat Prevention Policies for the following threat types:
 - C&C Server
 - Infected Hosts
 - Malware
 - Geo IP

Cloud feeds only—The prevention types available are command and control server, infections hosts, and Geo IP feeds. Policy Enforcer Secure Fabric, Policy Enforcement Groups, and Threat Prevention policies are also available. All enforcement is done through SRX Series Firewall policies.

Here is the Cloud feeds only workflow:

- Secure Fabric
- Policy Enforcement Group
- Juniper ATP Cloud Realm

- Threat Prevention Policies for the following threat types:
 - C&C Server
 - Infected Hosts
 - Geo IP

No ATP Cloud (no selection)—You would make no Juniper ATP Cloud selection to configure Juniper Connected Security using custom feeds. Custom feeds are available for dynamic address, allowlist, blacklist, infected hosts, and C&C Server. With this setting, there are no feeds available from Juniper ATP Cloud, but the benefits of Secure Fabric, Policy Enforcement Groups, and Threat Prevention policies provided by Policy Enforcer are available. Infected hosts is the only prevention type available.

Here is the No selection workflow:

- Secure Fabric
- Policy Enforcement Group
- Custom Feeds
- Threat Prevention Policies for the following threat type:
 - Infected Hosts



NOTE: Moving between configuration types is not supported in all cases. You can only move from one Juniper ATP Cloud Configuration Type to a “higher” configuration type. You cannot move to a lower type. Please note the following hierarchy:

- Juniper ATP Cloud or ATP Appliance with Juniper Connected Security (highest)
- Juniper ATP Cloud or JATP
- Cloud feeds only
- No Juniper ATP Cloud or JATP- No selection (lowest)

For each configuration type, certain features and UI pages are available. Please see the links below for details.

- *Features By Sky ATP Configuration Type*
- *Available UI Pages by Sky ATP Configuration Type*

RELATED DOCUMENTATION

Policy Enforcer Overview

Policy Enforcer Components and Dependencies

Benefits of Policy Enforcer

Policy Enforcer Configuration Concepts

Features By Juniper ATP Cloud Configuration Type

For each configuration type, certain features and UI pages are available.

Refer to the following table for the features available for each configuration type.

Table 356: List of features by Juniper ATP Cloud Configuration Type

| Feature | ATP Cloud/ATP Appliance with Juniper Connected Security | ATP Cloud/JATP | Cloud feeds only | No ATP Cloud/JATP (no selection) |
|---|--|--|------------------|----------------------------------|
| Full Threat Prevention Support | YES Support with Policy Enforcement Groups across the entire Secure Fabric (including Third-party switch support) | YES Support with existing SRX Series policies. (No Secure Fabric, Policy Enforcement Group or Third-party switch support) | Not Available | Not Available |
| SRX Series Firewall Malware Scanning | YES | YES | Not Available | Not Available |
| SRX Series Firewall Infected Host Blocking with Juniper ATP Cloud or JATP | YES | YES | Not Available | Not Available |

Table 356: List of features by Juniper ATP Cloud Configuration Type (Continued)

| Feature | ATP Cloud/ATP Appliance with Juniper Connected Security | ATP Cloud/JATP | Cloud feeds only | No ATP Cloud/JATP (no selection) |
|--|---|----------------|------------------|----------------------------------|
| Cloud Feeds for Command and Control Servers and GeolP with Juniper ATP Cloud or JATP | YES | YES | YES | Not Available |
| Infected Hosts Custom Feeds | YES | YES | YES | YES |
| Dynamic Address Custom Feeds | YES | YES | YES | YES |
| Custom Allowlist and Blocklists | YES | YES | YES | YES |

RELATED DOCUMENTATION

Available UI Pages by Sky ATP Configuration Type

Juniper ATP Cloud Configuration Type Overview

Available UI Pages by Juniper ATP Cloud Configuration Type

For each configuration type, certain features and UI pages are available.

Refer to the following table for the UI pages available for each configuration type.

Table 357: List of available UI pages by ATP Cloud Configuration Type

| UI Page | ATP Cloud/ATP Appliance with Juniper Connected Security | ATP Cloud/JATP | Cloud feeds only | No ATP Cloud/JATP (no selection) |
|---------|---|----------------|------------------|----------------------------------|
|---------|---|----------------|------------------|----------------------------------|

Monitor Pages: Threat Prevention

| | | | | |
|--------------------|-----|---------------|---------------|---------------|
| Hosts | YES | YES | Not Available | Not Available |
| CC | YES | YES | Not Available | Not Available |
| HTTP File Download | YES | YES | Not Available | Not Available |
| SMTP Quarantine | YES | YES | Not Available | Not Available |
| Email Attachments | YES | YES | Not Available | Not Available |
| Manual Upload | YES | YES | Not Available | Not Available |
| All Hosts Status | YES | YES | YES | YES |
| DDoS Feeds Status | YES | Not Available | YES | YES |

Devices Page

| | | | | |
|---------------|-----|---------------|-----|-----|
| Secure Fabric | YES | Not Available | YES | YES |
|---------------|-----|---------------|-----|-----|

Configure Pages: Threat Prevention

| | | | | |
|----------|-----|-----|-----|-----|
| Policies | YES | YES | YES | YES |
|----------|-----|-----|-----|-----|

Table 357: List of available UI pages by ATP Cloud Configuration Type *(Continued)*

| UI Page | ATP Cloud/ATP Appliance with Juniper Connected Security | ATP Cloud/JATP | Cloud feeds only | No ATP Cloud/JATP (no selection) |
|---|---|-----------------------------|------------------|----------------------------------|
| Custom Feeds (Dynamic Address, Allowlist, Blocklist, CC) | YES | YES | YES | YES |
| Custom Feeds (Infected Host, DDoS) | YES | Not Available | YES | YES |
| ATP Cloud Realms | YES (Only for ATP Cloud) | YES (Only for ATP Cloud) | YES | Not Available |
| Email Management | YES | YES | Not Available | Not Available |
| Malware Management | YES | YES | Not Available | Not Available |
| <i>Shared Objects</i> | | | | |
| Policy Enforcement Groups | YES | Not Available | YES | YES |
| Geo IP | YES | YES | YES | Not Available |
| <i>Administration: Policy Enforcer</i> | | | | |
| Settings | YES | YES | YES | YES |
| Connectors | YES | Not Available | YES | YES |



NOTE: SMTP Quarantine is available only for Juniper ATP Cloud. It is not available for JATP.

RELATED DOCUMENTATION

- Features By Juniper ATP Cloud Configuration Type*
- Juniper ATP Cloud Configuration Type Overview*

Comparing the Juniper Connected Security and non-Juniper Connected Security Configuration Steps

The remainder of this guide describes how to configure Security Director for either Policy Enforcer with Juniper ATP Cloud (Juniper Connected Security) or Juniper ATP Cloud with no Policy Enforcer (non-Juniper Connected Security). An optional quick setup configuration is available to step you through the configuration tasks. Or you can use Security Director windows to configure each step manually.

[Table 358 on page 1223](#) compares the basic steps for both.

Table 358: Comparing the Juniper Connected Security Configuration Steps to the non-Juniper Connected Security Configuration Steps

| Juniper Connected Security Configuration Steps | Non-Juniper Connected Security Configuration Steps |
|---|--|
| <p>Create your secure fabric.</p> <p>A secure fabric is a collection of sites which contain network devices such as switches, routers, firewalls, and other security devices.</p> | <p>Register one or more Juniper ATP Cloud accounts.</p> |
| <p>Create your policy enforcement groups.</p> <p>You can create policy enforcement groups based on, for example, location or IP subnets. Policy enforcement groups are basically endpoints.</p> | <p>Select your SRX Series devices to register. Only SRX Series devices managed by Security Director are supported.</p> |

Table 358: Comparing the Juniper Connected Security Configuration Steps to the non-Juniper Connected Security Configuration Steps (Continued)

| Juniper Connected Security Configuration Steps | Non-Juniper Connected Security Configuration Steps |
|--|--|
| Register one or more Juniper ATP Cloud accounts. | Create the Juniper ATP Cloud profiles and policies. You can create C&C (threat score and actions to take), malware and infected host policies. |
| <p>Create threat prevention policies.</p> <p>Threat prevention policies provide protection and monitoring for selected threat profiles, including command & control servers, infected hosts, and malware.</p> | Add the Juniper ATP Cloud policy as a rule in your firewall policy. |
| <p>Apply your threat prevention policies to policy enforcement groups.</p> <p>When threat prevention policies are applied to policy enforcement groups, the system automatically discovers to which sites those groups belong. When you dynamically add sites, the policy enforcement groups and threat prevention policies are updated automatically.</p> | |

RELATED DOCUMENTATION

Using Guided Setup for Juniper ATP Cloud with Juniper Connected Security

[Using Guided Setup for Juniper ATP Cloud](#)

Configuring Sky ATP with SDSN (Without Guided Setup) Overview

[Configuring Juniper ATP Cloud \(No Juniper Connected Security and No Guided Setup\) Overview](#)

Policy Enforcer Overview

Benefits of Policy Enforcer

Policy Enforcer Components and Dependencies

[Juniper ATP Cloud Overview](#)

Installing Policy Enforcer

IN THIS CHAPTER

- Policy Enforcer Installation Overview | **1225**
- Deploying and Configuring the Policy Enforcer with OVA files | **1227**
- Installing Policy Enforcer with KVM | **1234**
- Policy Enforcer Ports | **1243**
- Identifying the Policy Enforcer Virtual Machine In Security Director | **1246**
- Obtaining a Juniper ATP Cloud License | **1247**
- Creating a Juniper ATP Cloud Web Portal Login Account | **1248**
- Loading a Root CA | **1248**
- Upgrading Your Policy Enforcer Software | **1250**

Policy Enforcer Installation Overview

[Table 359 on page 1226](#) lists the general steps to install and configure Policy Enforcer.

Table 359: Overview of Steps to Install and Configure Policy Enforcer

| Step | Description | See |
|------|--|---|
| 1 | <p>Install and configure Junos Space and Security Director 16.1 or later.</p> <p>NOTE: After installing Junos Space and Security Director, you must update to the latest Junos Space device schema. See your Junos Space Security Director documentation for more information on upgrading your schema.</p> | <p>Junos Space Network Management Platform software download</p> <p>Junos Space Security Director software download</p> |
| 2 | <p>Install and configure your SRX Series devices, EX Series switches or QFX Series switches. Switches are “discoverable” through Junos Space.</p> <p>For information on discovering switches, see <i>Using Guided Setup for Juniper ATP Cloud with Juniper Connected Security</i>.</p> | Juniper Tech Library |
| 3 | <p>Download, deploy and configure the Policy Enforcer virtual machine.</p> <p>You install Policy Enforcer on an industry-standard x86 server running a hypervisor, either the kernel-based virtual machine (KVM) hypervisor or the VMware ESXi hypervisor.</p> | <p><i>Deploying and Configuring the Policy Enforcer with OVA files</i></p> <p><i>Installing Policy Enforcer with KVM</i></p> |
| 4 | Use the Policy Enforcer Settings screen in Security Director (Administration > Policy Enforcer Settings) to identify the Policy Enforcer virtual machine to communicate with. | <i>Identifying the Policy Enforcer Virtual Machine In Security Director</i> |
| 5 | Obtain a Juniper ATP Cloud license and create a Juniper ATP Cloud portal account. | <p>Obtaining a Juniper ATP Cloud License</p> <p>Creating a Juniper ATP Cloud Web Portal Login Account</p> |

Table 359: Overview of Steps to Install and Configure Policy Enforcer (Continued)

| Step | Description | See |
|------|---|--|
| 6 | Install the root CA on your Juniper ATP Cloud-supported SRX Series devices. | <i>Loading a Root CA</i> |
| 7 | Configure ClearPass or Cisco ISE as a connector for third-party products (non-Juniper Networks) to unify policy enforcement across all network elements. | <i>ClearPass Configuration for Third-Party Plug-in</i> <i>Cisco ISE Configuration for Third-Party Plug-in</i> |
| 8 | Use the Guided Setup screens in Security Director to configure Threat Prevention policies and deploy to devices. Optionally, you can configure policies without guided setup. | <i>Using Guided Setup for Sky ATP with SDSN</i> Using Guided Setup for Juniper ATP Cloud |

RELATED DOCUMENTATION*Deploying and Configuring the Policy Enforcer with OVA files**Policy Enforcer Overview**Benefits of Policy Enforcer**Policy Enforcer Components and Dependencies***Deploying and Configuring the Policy Enforcer with OVA files**

As with other Juniper Networks virtual appliances, Policy Enforcer requires either a VMware ESX server version 4.0 or later or a VMware ESXi server version 4.0 or later that can support a virtual machine with the following configuration:

- 2 CPU
- 8-GB RAM (16-GB recommended)
- 120-GB disk space

If you are not familiar with using VMware ESX or ESXi servers, see [VMware Documentation](#) and select the appropriate VMware vSphere version.

To deploy and configure the Policy Enforcer with OVA files, perform the following tasks:

1. Download the Policy Enforcer virtual machine OVA image from the Juniper Networks software [download page](#).



NOTE: Do not change the name of the Policy Enforcer virtual machine image file that you download from the Juniper Networks support site. If you change the name of the image file, the creation of the Policy Enforcer virtual machine can fail.

2. Launch the vSphere Client that is connected to the ESX server where the Policy Enforcer virtual machine is to be deployed.
3. Select **File > Deploy OVF Template** from the menu bar.
4. Click **Browse** to locate the OVA file you downloaded in Step 1.
5. Click **Next** and follow the instructions in the installation wizard.
It may take a few minutes to deploy your virtual machine. Once deployed, its name appears in the left side of the vSphere Client.
6. Right-click the virtual machine name in the left side of the vSphere Client and select **Open Console** to start configuring your network settings.
7. Log in to your virtual machine using `root` and `abc123` as the username and password, respectively. You will be required to change the password at a later step.
The welcome page appears.
8. Click **OK**.
The End User License Agreement (EULA) window appears.
9. Click **Accept** to acknowledge the EULA. If you do not agree with the EULA, click **Cancel**. Your configuration will stop and you will return to the main vSphere Client page.
The Network configuration page appears. See [Figure 95 on page 1229](#).

Figure 95: Defining the Basic Network Configuration Settings

Networking configuration

Please specify the Connector networking configuration

Hostname

IP address

Network mask

Default gateway

Primary DNS Server

Secondary DNS Server

Skip DNS servers check ☒

Apply changes

10. Enter the following configuration information.

| Option | Description |
|----------------------|---|
| Hostname | Enter the hostname for the Policy Enforcer virtual machine; for example, <code>pe.juniper.net</code> . |
| IP address | Enter the IP address for the Policy Enforcer virtual machine. NOTE: Make note of this IP address as you'll need it in a later step. |
| Network mask | Enter the netmask for the Policy Enforcer virtual machine. |
| Default gateway | Enter the IP address of the default gateway that connects your internal network to external networks. |
| Primary DNS server | Enter the IP address of your primary system registered to join the Domain Name System (DNS). |
| Secondary DNS server | Enter the IP address of a secondary DNS server. Policy Enforcer uses this address only when the primary DNS server is unavailable. |

(Continued)


| Option | Description |
|------------------------|---|
| Skip DNS servers check | Select this check box if you do not want to check basic network settings. By default, the system will ping the gateway to ensure it receives a response indicating your settings are correct. |

11. Click **Apply Changes**.

Your network settings are applied. A progress window indicates the status.


When the system is finished updating your network settings, an NTP server window appears and prompts you to configure the NTP server list. See [Figure 96 on page 1230](#).

Figure 96: Prompt for Configuring the NTP Servers

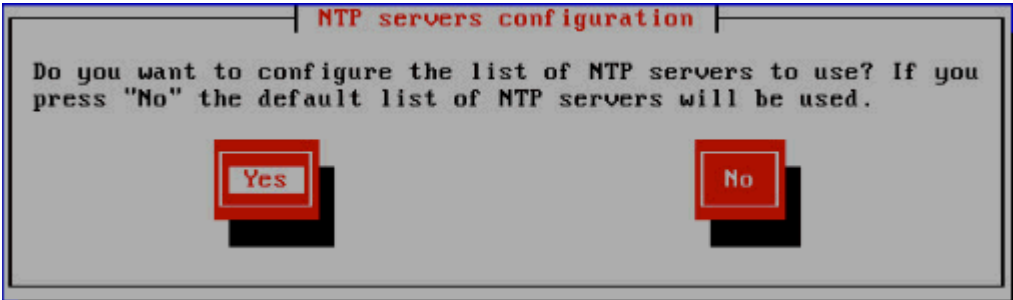


12. Click **Yes** to customize the NTP server list. Click **No** to use the default list of 0, 1, 2 and 3.centos.pool.ntp.org.
13. (Optional) Specify the NTP servers to use. See [Figure 97 on page 1231](#). Click **Apply Changes** to accept your edits, **Clear All** to clear all fields in this window, or **Cancel** to discard any edits and continue to the next step.

Figure 97: Configuring the NTP Servers

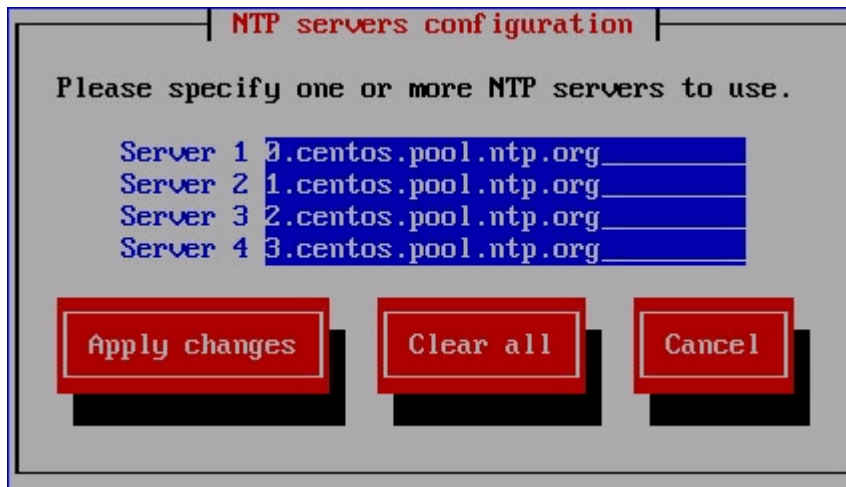


14. The Root password change page appears. See [Figure 98 on page 1231](#).

Figure 98: Changing the Root Password

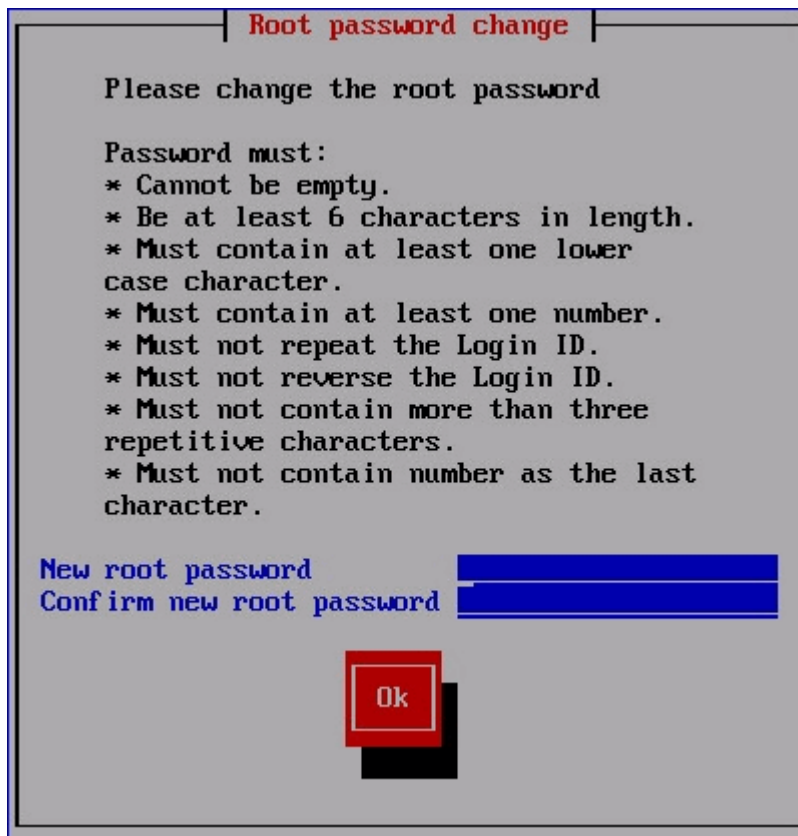

15. Enter and re-enter a new administrator password for the Policy Enforcer virtual machine.


Password restrictions are listed in the screen.

 **NOTE:** Make note of this password as you'll need it in a later step.

If you forget your password, see [CentOS root password reset instructions](#).

16. Click **OK**.
- The Juniper Networks Policy Enforcer page appears. See [Figure 99 on page 1232](#).

Figure 99: Reviewing and Changing Your Configuration Settings

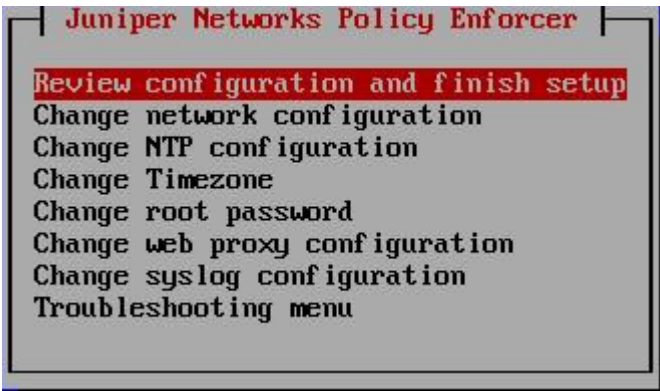


17. Select one of the options and press **Enter**.

| Option | Description |
|---------------------------------------|--|
| Review configuration and finish setup | Lets you review the configuration settings you defined one last time before applying them to the Policy Enforcer virtual machine. We recommend that you do not change your configuration settings after Policy Enforcer is set up within Security Director. |
| Change... | Select a setting to update its value. |
| Troubleshooting menu | Lets you ping the default gateway and custom IP address and lets you perform a DNS lookup to verify that your settings are correct. |

The Review configuration page appears. See [Figure 100 on page 1233](#).

Figure 100: Reviewing Your Configuration Settings

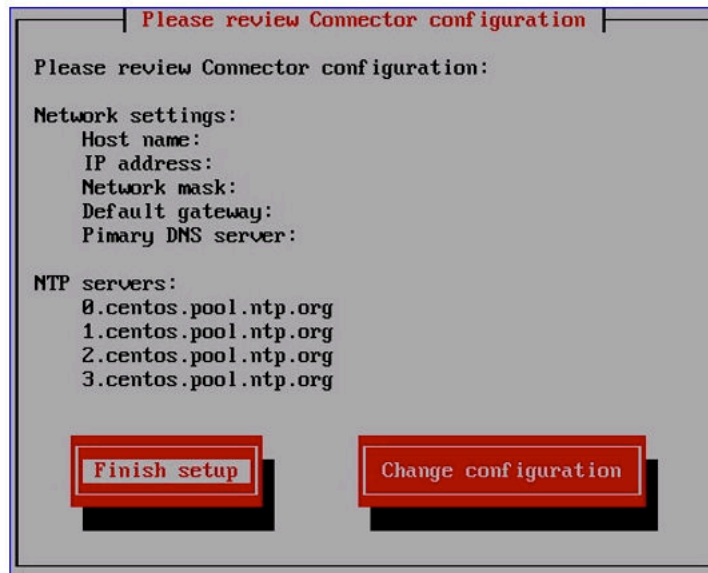

18. Review your configuration settings and click **Finish setup**. To change any of the settings, click **Change configuration**.

When you click **Finish setup**, the configuration settings are applied to the Policy Enforcer virtual machine. A status page indicates the progress.

When done, the Setup Complete page appears.



19. Click **Finish** to return to the main vSphere Client page.



NOTE: Each time you log in to the Policy Enforcer virtual machine, you are given the option to review or change any of these settings.

RELATED DOCUMENTATION

Identifying the Policy Enforcer Virtual Machine In Security Director

Policy Enforcer Overview

Benefits of Policy Enforcer

Policy Enforcer Components and Dependencies

Installing Policy Enforcer with KVM

IN THIS SECTION

- [Installing Policy Enforcer with virt-manager | 1235](#)
- [Installing Policy Enforcer with virt-install | 1235](#)
- [Configuring Policy Enforcer Settings | 1237](#)
- [Connecting to the KVM Management Console | 1243](#)

The Policy Enforcer Virtual Appliance Release 17.1R2 and later can be deployed on qemu-kvm (KVM) Release 1.5.3-105.el7 or later which is on CentOS Release 6.8 or later.



NOTE: Juniper Networks does not provide any support for installing and configuring the KVM server. You must install the virtual appliance image and configure it as per the recommended specifications for the virtual appliance. Juniper Networks will provide support only after the Policy Enforcer Virtual Appliance has booted successfully.

The prerequisites to deploy a Policy Enforcer Virtual Appliance on a KVM server are as follows:

- Knowledge about configuring and installing a KVM server.

- The KVM server and supported packages must be installed on a CentOS machine with the required kernels and packages. For information about installing a KVM server and supported packages on CentOS, refer to <http://wiki.centos.org/HowTos/KVM>.
- The Virtual Machine Manager (VMM) client must be installed on your local system.
- You use `virt-manager` or `virt-install` to install Policy Enforcer VMs. See your host OS documentation for complete details on these packages.

The following are the minimum requirements for installing the Policy Enforcer VM.

- 2 CPU
- 8-GB RAM (16 GB recommended)
- 120-GB disk space

This topic includes:

Installing Policy Enforcer with `virt-manager`

Ensure that sure you have already installed KVM, `qemu`, `virt-manager`, and `libvirt` on your host OS.

You can install and launch Policy Enforcer with the *KVM*`virt-manager` GUI package.

To install Policy Enforcer with `virt-manager`:

1. Download the Policy Enforcer KVM image from the Juniper software [download site](#).
2. On your host OS, type **virt-manager**. The Virtual Machine Manager appears.



NOTE: You must have admin rights on the host OS to use `virt-manager`.

3. Click **Create a new virtual machine**. The New VM wizard appears .
4. Enter a name for the virtual machine, select **Import existing disk image**, and click **Forward**.
5. Browse to the location of the downloaded Policy Enforcer image and select it.
6. Select **Linux** from the OS type list and select **Show all OS options** from the Version list.
7. Select **Red Hat Enterprise Linux 6** or later from the expanded Version list and click **Forward**.
8. Set the RAM to 8192 MB and set CPUs to 1. Click **Forward**.
9. Under Advanced Options, select **Specify shared device name** and enter the name of the bridge (typically **br0**) into the text box.
10. Click **Finish**. The VM manager creates the virtual machine and launches the Policy Enforcer console.

Installing Policy Enforcer with `virt-install`

Ensure that sure you have already installed KVM, `qemu`, `virt-install`, and `libvirt` on your host OS.



NOTE: You must have root access on the host OS to use the `virt-install` command.

The `virt-install` and `virsh` tools are CLI alternatives to installing and managing Policy Enforcer VMs on a Linux host.

To install Policy Enforcer with `virt-install`:

1. Download the Policy Enforcer KVM image from the Juniper software [download site](#).
2. On your host OS, use the **`virt-install`** command with the mandatory options listed in [Table 360 on page 1236](#).



NOTE: See the official `virt-install` documentation for a complete description of available options.

Table 360: virt-install Options

| Command Option | Description |
|--|--|
| <code>--name <i>name</i></code> | Name the Policy Enforcer VM. |
| <code>--ram <i>megabytes</i></code> | Allocate RAM for the VM, in megabytes. |
| <code>--cpu <i>cpu-model, cpu-flags</i></code> | <p>Enable the <code>vmx</code> feature for optimal throughput. You can also enable <code>aes</code> for improved cryptographic throughput.</p> <p>NOTE: CPU flag support depends on your host OS and CPU.</p> <p>Use <code>virsh capabilities</code> to list the virtualization capabilities of your host OS and CPU.</p> |
| <code>--vcpus <i>number</i></code> | Allocate the number of vCPUs for the Policy Enforcer VM. |

Table 360: virt-install Options (*Continued*)

| Command Option | Description |
|---|--|
| <code>--disk <i>path</i></code> | Specify disk storage media and size for the VM. Include the following options: <ul style="list-style-type: none"> • <code>size=<i>gigabytes</i></code> • <code>device=disk</code> • <code>bus=ide</code> • <code>format=qcow2</code> |
| <code>--os-type <i>os-type</i></code> <code>--os-variant <i>os-type</i></code> | Configure the guest OS type and variant. |
| <code>--import</code> | Create and boot the Policy Enforcer VM from an existing image. |

The following example creates a Policy Enforcer VM with 8192 MB RAM, 1 vCPUs, and disk storage up to 120 GB:

```
hostOS# virt-install --name vPEM --ram 8192 --cpu SandyBridge,+vmx,-invtnsc --vcpus=1 --
arch=x86_64 --disk path=/mnt/pe.qcow2,size=120,device=disk,bus=ide,format=qcow2 --os-type
linux --os-variant rhel6 --import
```

Configuring Policy Enforcer Settings


By default, when you create the Policy Enforcer VM through virt-manager or virt-install, the console window appears for you to set up and configure the Policy Enforcer settings. You can open the console at any time after the initial configuration to review or edit your settings.

To configure Policy Enforcer settings:

1. Log in to your virtual machine using **root** and **abc123** as the username and password, respectively. You will be required to change the password at a later step.
The welcome page appears.
2. Click **OK**.
The End User License Agreement (EULA) window appears.
3. Click **Accept** to acknowledge the EULA. If you do not agree with the EULA, click **Cancel**. Your configuration will stop and you will return to the main vSphere Client page.

The Network configuration page appears. See [Figure 101 on page 1238](#).

Figure 101: Defining the Basic Network Configuration Settings

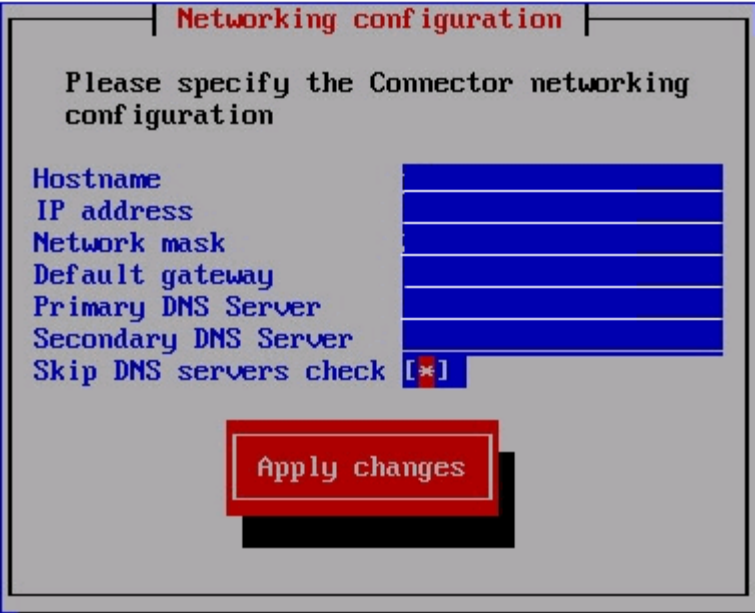

4. Enter the following configuration information.

| Option | Description |
|--------------------|---|
| Hostname | Enter the hostname for the Policy Enforcer virtual machine; for example, <code>pe.juniper.net</code> . |
| IP address | Enter the IP address for the Policy Enforcer virtual machine. NOTE: Make note of this IP address as you'll need it in a later step. |
| Network mask | Enter the netmask for the Policy Enforcer virtual machine. |
| Default gateway | Enter the IP address of the default gateway that connects your internal network to external networks. |
| Primary DNS server | Enter the IP address of your primary system registered to join the Domain Name System (DNS). |

(Continued)


| Option | Description |
|------------------------|---|
| Secondary DNS server | Enter the IP address of a secondary DNS server. Policy Enforcer uses this address only when the primary DNS server is unavailable. |
| Skip DNS servers check | Select this check box if you do not want to check basic network settings. By default, the system will ping the gateway to ensure it receives a response indicating your settings are correct. |

5. Click **Apply Changes**.

Your network settings are applied. A progress window indicates the status.


When the system is finished updating your network settings, an NTP server window appears and prompts you to configure the NTP server list. See [Figure 102 on page 1239](#).

Figure 102: Prompt for Configuring the NTP Servers

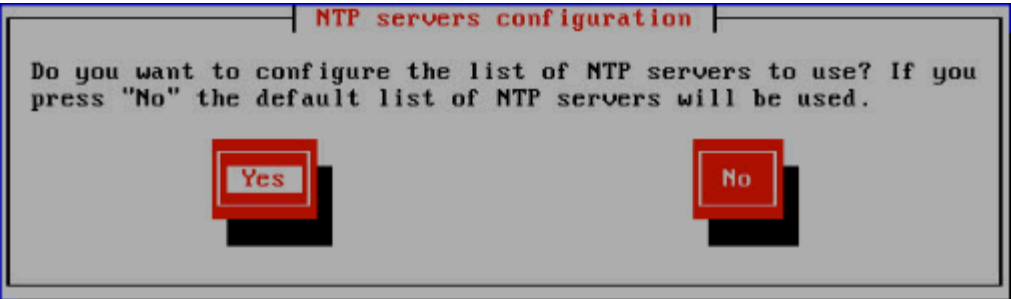


6. Click **Yes** to customize the NTP server list. Click **No** to use the default list of 0, 1, 2 and 3.centos.pool.ntp.org.
7. (Optional) Specify the NTP servers to use. See [Figure 103 on page 1240](#). Click **Apply Changes** to accept your edits, **Clear All** to clear all fields in this window, or **Cancel** to discard any edits and continue to the next step.

Figure 103: Configuring the NTP Servers

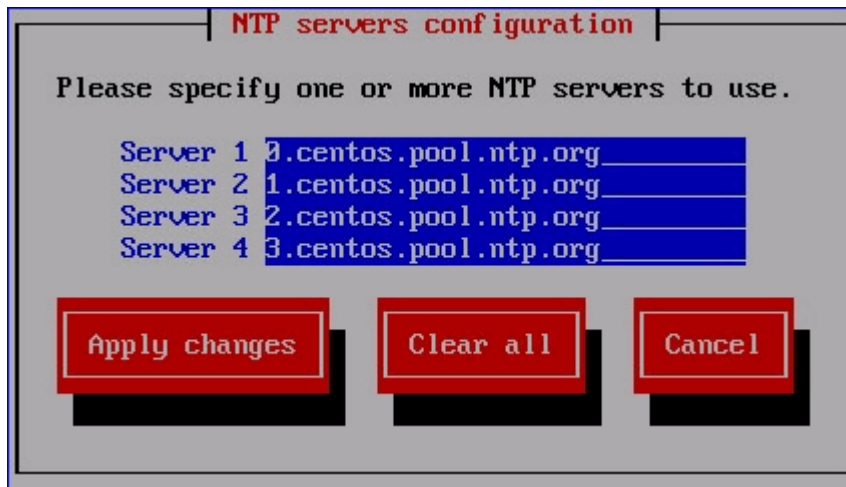

8. The Root password change page appears. See [Figure 104 on page 1240](#).

Figure 104: Changing the Root Password

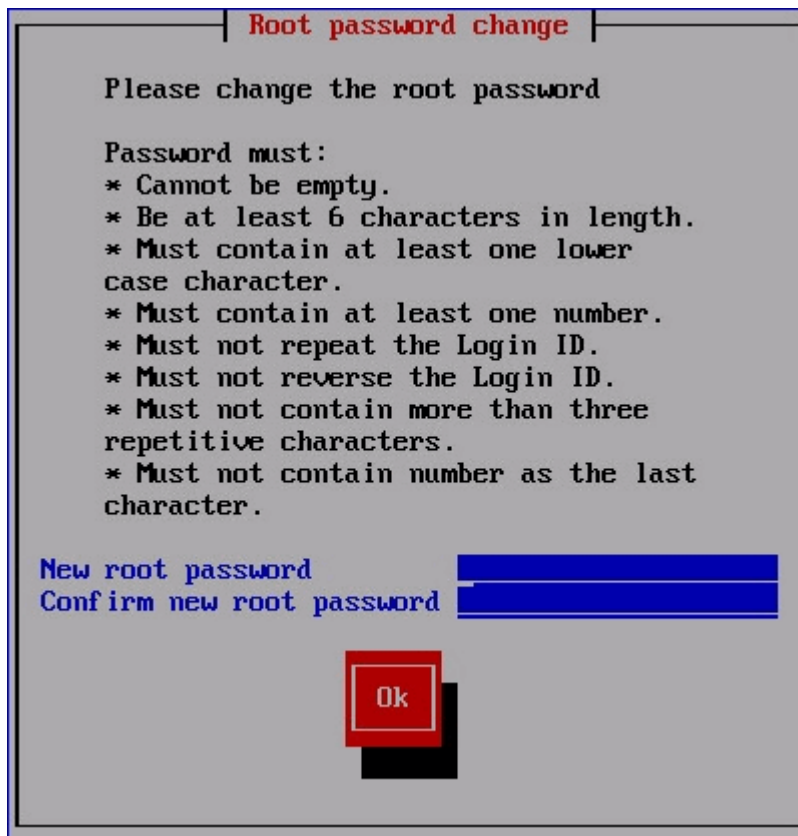

9. Enter and re-enter a new administrator password for the Policy Enforcer virtual machine.

Password restrictions are listed in the screen.




NOTE: Make note of this password as you'll need it in a later step.

If you forget your password, see [CentOS root password reset instructions](#).

10. Click **OK**.

The Juniper Networks Policy Enforcer page appears. See [Figure 105 on page 1241](#).

Figure 105: Reviewing and Changing Your Configuration Settings

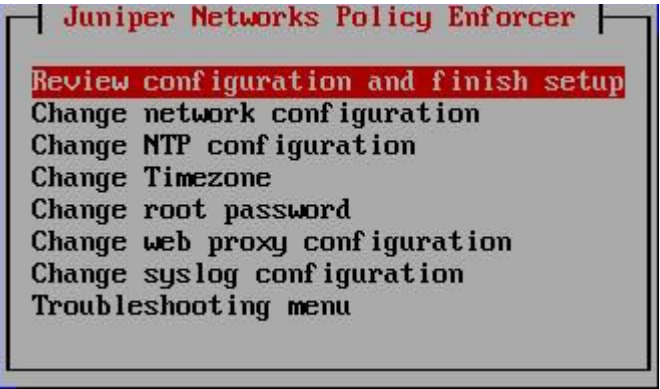


11. Select one of the options and press **Enter**.

| Option | Description |
|---------------------------------------|--|
| Review configuration and finish setup | Lets you review the configuration settings you defined one last time before applying them to the Policy Enforcer virtual machine. We recommend that you do not change your configuration settings after Policy Enforcer is set up within Security Director. |
| Change... | Select a setting to update its value. |
| Troubleshooting menu | Lets you ping the default gateway and custom IP address and lets you perform a DNS lookup to verify that your settings are correct. |

The Review configuration page appears. See [Figure 106 on page 1242](#).

Figure 106: Reviewing Your Configuration Settings

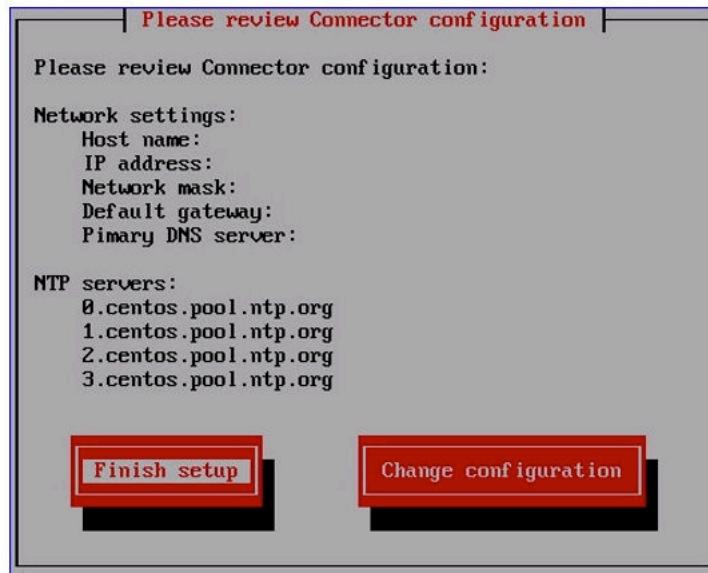

12. Review your configuration settings and click **Finish setup**. To change any of the settings, click **Change configuration**.

When you click **Finish setup**, the configuration settings are applied to the Policy Enforcer virtual machine. A status page indicates the progress.

When done, the Setup Complete page appears.



13. Click **Finish** to return to the main vSphere Client page.



NOTE: Each time you log in to the Policy Enforcer virtual machine, you are given the option to review or change any of these settings.

Connecting to the KVM Management Console

By default, when you create the Policy Enforcer VM the console window appears for you to set up and configure the Policy Enforcer settings. You can open the console at any time after the initial configuration to review or edit your settings. To do this, you must have the `virt-manager` package or `virsh` installed on your host OS.

To connect to the Policy Enforcer console using `virt-manager`:

1. Launch `virt-manager`.
2. Highlight the Policy Enforcer VM you want to connect to from the list of VMs displayed.
3. Click **Open**.
4. Select **View>Text Consoles>Serial 1**. The Policy Enforcer console appears.

To connect to the Policy Enforcer console with `virsh`:

1. Use the `virsh console` command on the Linux host OS. For example:

```
user@host# virsh console PE-kvm-2
Connected to domain PE-kvm-2
```

2. The Policy Enforcer console appears.

RELATED DOCUMENTATION

Policy Enforcer Installation Overview

Policy Enforcer Ports

Policy Enforcer Ports



NOTE: While using Policy Enforcer in Connected Security deployment, SRX Series Firewalls do not submit files for detection via Policy Enforcer. SRX Series Firewalls still need to reach the ATP Cloud server via internet to submit files for malware detection

and analysis. If SRX Series Firewalls are connected to the internet via another firewall or proxy, then that device must have 8080 and 443 ports open.

You will need to open ports for Policy Enforcer to communicate with other products and devices.

[Table 361 on page 1244](#) lists the ports that Policy Enforcer uses to communicate with Security Director.

Table 361: Policy Enforcer Ports to Communicate with Security Director

| Service | Protocol | Port | In | Out |
|---------|----------|------|----|-----|
| HTTPS | TCP | 8080 | X | |
| HTTPS | TCP | 443 | | X |

[Table 362 on page 1244](#) lists the ports that Policy Enforcer uses to communicate with SRX Series Firewalls.

Table 362: Policy Enforcer Ports to Communicate with SRX Series Firewalls

| Service | Protocol | Port | In | Out |
|---------|----------|------|----|-----|
| HTTPS | TCP | 443 | X | |

[Table 363 on page 1244](#) lists the ports that Policy Enforcer uses to communicate with the Juniper ATP Cloud server to download feeds.



NOTE: Connectivity between Juniper ATP Cloud and Policy Enforcer is certificate-based. Once the trust is established, every request is within a context of valid token.

[Table 364 on page 1245](#) lists the ports that Policy Enforcer uses to communicate with ca.junipersecurity.net.

Table 363: Policy Enforcer Ports to Communicate with cloudfeeds.sky.junipersecurity.net

| Service | Protocol | Port | In | Out |
|---------|----------|------|----|-----|
| HTTPS | TCP | 443 | | X |

[Table 364 on page 1245](#) lists the ports that Policy Enforcer uses to communicate with ca.junipersecurity.net.

Table 364: Policy Enforcer Ports to Communicate with ca.junipersecurity.net

| Service | Protocol | Port | In | Out |
|---------|----------|------|----|-----|
| HTTPS | TCP | 8080 | | X |

[Table 365 on page 1245](#) lists the remaining Policy Enforcer services.

Table 365: Policy Enforcer Services

| Service | Comments |
|---------|---|
| DNS | Used for basic network connection. |
| NTP | Used to synchronize system clocks with the Network Time Protocol (NTP). |

If you are using NSX with Policy Enforcer (or Security Director), the following ports must be opened on NSX.

Table 366: NSX Ports

| Port | In | Out | Comments |
|------|----|-----|---|
| 443 | X | | Used for communication between NSX and Security Director. |
| 7804 | X | | Used for outbound SSH based auto discovery of devices. |
| 22 | X | | Used for host management and image upload over sftp. |

RELATED DOCUMENTATION

Deploying and Configuring the Policy Enforcer with OVA files

Installing Policy Enforcer with KVM

Identifying the Policy Enforcer Virtual Machine In Security Director

You must identify the Policy Enforcer virtual machine in Security Director so that they can communicate with each other. To do so, follow these steps:

1. Log in to Security Director and select **Administration > PE Settings**.
2. Enter the IP address of the Policy Enforcer virtual machine and the root password and click **OK**.
3. Select a Threat Prevention Type:
 - ATP Cloud with PE—All Juniper Connected Security features and threat prevention types are available.



NOTE: If you upgrade from cloud feeds or ATP Cloud, you cannot roll back again. Upgrading resets all devices previously participating in threat prevention. Use the setup wizard to expedite the process configuring threat prevention policies.

- ATP Cloud—All threat prevention types are available: Command and control server, Geo IP, and Infected hosts.



NOTE: If you upgrade from cloud feeds only to ATP Cloud, you cannot roll back again. Upgrading resets all devices previously participating in threat prevention, and you must re-enroll them with ATP Cloud. Use the setup wizard to expedite the process configuring threat prevention policies.

- Cloud Feeds only—Command and control server and Geo IP are the only threat prevention types available.

For more information on these threat prevention types, see *Policy Enforcer Settings*.

If you change the Policy Enforcer VM password (see [Deploying and Configuring the Policy Enforcer Virtual Machine](#)), the Policy Enforcer VM still communicates with Security Director even if you do not update the Policy Enforcer password in the **Administration > PE Settings** window in Security Director. You can, however, update the information in the PE Settings page with the new password to keep your credentials consistent.

RELATED DOCUMENTATION

[Obtaining a Juniper ATP Cloud License](#)

Policy Enforcer Overview

Benefits of Policy Enforcer

Obtaining a Juniper ATP Cloud License

Contact your local sales office or a Juniper Networks partner to place an order for a Juniper ATP Cloud premium license. Once the order is complete, an authorization code is e-mailed to you. You will use this code in conjunction with your SRX Series device serial number to generate a premium license entitlement. (Use the `show chassis hardware` CLI command to find the serial number of the SRX Series device.)

To obtain a Juniper ATP Cloud premium or basic license, follow these steps:

1. Go to https://www.juniper.net/generate_license/ and log in with your Juniper Networks Customer Support Center (CSC) credentials.
2. In the Generate Licenses list, select J Series Service Routers and SRX Series Firewalls.
3. Using your authorization code and SRX Series serial number, follow the instructions to generate your license key. (Note that you do not enter this license key anywhere.)

Once generated, your license key is automatically transferred to the cloud server. It can take up to 24 hours for your activation to be updated in the Juniper ATP Cloud cloud server

The free version does not require you to generate a license. The SRX Series device only needs to be enrolled to the cloud, and it will automatically be entitled to the free version.

Unlike with physical SRX Series devices, you must install Juniper ATP Cloud premium licenses onto your vSRX instances. Installing the Juniper ATP Cloud license follows the same procedure as with most standard vSRX licenses. For more information on installing the Juniper ATP Cloud license onto your vSRX instance, see the *License Management and vSRX Deployments* section within [Managing the Advanced Threat Prevention Cloud License](#).

RELATED DOCUMENTATION

[Creating a Juniper ATP Cloud Web Portal Login Account](#) | 1248

[Policy Enforcer Overview](#)

[Benefits of Policy Enforcer](#)

[Policy Enforcer Components and Dependencies](#)

Creating a Juniper ATP Cloud Web Portal Login Account

To create a Juniper ATP Cloud account, you must first have a Customer Support Center (CSC) user account. For more information, see [Creating a User Account](#). If you forget to do this step, you will be reminded during the quick setup.

1. Go to <https://sky.junipersecurity.net> and select your region. On the next screen, click **Create a security realm**.
2. Enter the following required information and continue to click **Next** until you are finished:
 - Your single sign-on or Juniper Networks CSC credentials.
 - A security realm name — for example, **Juniper-Mktg-Sunnyvale**. Realm names can only contain alphanumeric characters and the dash (“-”) symbol.
 - Your contact information.
 - An e-mail address and password. This will be your login information to access the Juniper ATP Cloud management interface.
3. When you click **Finish**, you are automatically logged in and taken to the Juniper ATP Cloud Web UI dashboard.

RELATED DOCUMENTATION

Loading a Root CA

Using Guided Setup for Juniper ATP Cloud with Juniper Connected Security

[Using Guided Setup for Juniper ATP Cloud | 1334](#)

Loading a Root CA

After the Policy Enforcer virtual machine is configured and created and before creating any ATP policy, you must set up certificates on any Juniper ATP Cloud-supported SRX Series device. For a list of Juniper ATP Cloud-supported devices, see [Juniper ATP Cloud Supported Platforms Guide](#).



NOTE: The following is simply an example. You will need to modify the group name, profile and policy name to match your configuration.

To set up certificates for Policy Enforcer:

1. Create the CA profile using the following CLI command. A CA profile configuration contains information specific to a CA.

```
root@host# request security pki generate-key-pair certificate-id ssl-inspect-ca size 2048 type rsa
root@host# request security pki local-certificate generate-self-signed certificate-id ssl-inspect-ca
domain-name www.juniper.net subject "CN=www.juniper.net,OU=IT,O=Juniper Networks,L=Sunnyvale,ST=CA,C=US"
email security-admin@juniper.net
```

2. Configure the CA profile.



NOTE: The CA profile name must be policyEnforcer.

```
root@host# set security pki policyEnforcer ssl-inspect-ca ca-identity ssl-inspect-ca
root@host# set security pki ca-profile policyEnforcer ca-identity ssl-profile-ca
```

3. Load the default trusted CA.

```
root@host# request security pki ca-certificate ca-profile-group load ca-group-name All-Trusted-CA-Def
filename default
```

4. Enable HTTPS on the threat prevention policy.

When creating your threat prevention policy (in Security Director, select **Configure>Threat Prevention > Policy**), enable the **Scan HTTPS** option to scan files downloaded over HTTPS. For more information on creating threat prevention policies, see the Security Director online help.

When you enable HTTPS on the threat prevention policy, Policy Enforcer sends the following configuration to the devices:

```
##Security Firewall Policy : trust - untrust##
set security policies from-zone trust to-zone untrust policy PolicyEnforcer-Rule1-1 then
permit application-services ssl-proxy profile-name policyEnforcer
##Security Firewall Policy : global ##
set security policies global policy PolicyEnforcer-Rule1-1 then permit application-services
ssl-proxy profile-name policyEnforcer
##SSL Forward proxy Profile Configurations##
set services ssl proxy profile policyEnforcer trusted-ca all
set services ssl proxy profile policyEnforcer root-ca ssl-inspect-ca
```

5. Export the locally generated certificate from the SRX Series device and install it on clients as a trusted CA to avoid some of the certificate errors that may occur.

Each website or browser behaves slightly different. Some require exceptions to be added to your browser to display the content while others may not work because the local certificate is weak.

```
root@host# request security pki local-certificate export certificate-id ssl-inspect-ca type
pem filename ssl-inspect-ca.pem
```

6. (Optional) You can limit some certificate warning messages using the following CLI command:

```
root@host# set services ssl proxy profile policyEnforcer actions ignore-server-auth-failure
```

Upgrading Your Policy Enforcer Software

To upgrade to the latest release of Policy Enforcer, download and run the rpm file available from Juniper Network's software download page. You must have a version of Policy Enforcer already installed to run the upgrade script. If you do not, download the latest software version from the [Policy Enforcer software download page](#) and follow the [Policy Enforcer Installation Overview](#) instructions.



NOTE: You can upgrade only from the previous release. For example, you can upgrade from 16.1R1 to 16.1R2 or from 16.1R2 to 17.1. You cannot skip a release. For example, upgrading from 16.1R1 to 17.1R1 is not supported.

To upgrade your Policy Enforcer software to the latest release:

1. Access the Policy Enforcer software download page
<https://www.juniper.net/support/downloads/?p=sdpe>
2. Select the Software tab.
3. From the Version drop-down menu, select the version you want to install.
4. From under the Application Package heading, download the Policy Enforcer RPM to your Policy Enforcer virtual appliance.
5. On your Policy Enforcer virtual appliance, change directory to where you downloaded the RPM bundle and install it using the following command:

```
[root@hostname~]# rpm -Uvh filename.rpm
```

For example:

```
[root@hostname~]# rpm -Uvh Policy_Enforcer-22.1R1-XXXX-PE-Upgrade.rpm
```

It may take a few minutes to install the RPM bundle. Once installed, the Policy Enforcer screens within Security Director and any schema changes are updated. The configuration settings you used when you deployed the Policy Enforcer VM are retained.

To verify your upgrade:

- In Security Director, select **Administration > PE settings**. This page shows the current installed Policy Enforcer version number.
- Check the log file for any errors.
- (Upgrading from 16.1R1 to 16.2R1) Check the `/var/log/pe_upgrade.log` file for any errors. The following is an example output of the `pe_upgrade.log` file for a successful upgrade.

```
Location: /var/log/pe_upgrade.log
Update text:
Preparing... ##### [100%]
  1:Policy_Enforcer ##### [100%]
Upgrading..
root
Stopping services
Service: feed_scheduler
Stopping service...
Service stopped
Service: feed_server
Stopping service...
Service stopped
Service: config_server
Stopping service...
Service stopped
Extracting spotlight-connector package
Extracting security-common-lib package
Executing sql table
Copying spotlight-connector package
Copying security-common-lib package
Starting services
Service: config_server
Starting service...
Service started
Service: feed_server
Starting service...
Service started
Service: feed_scheduler
Starting service...
```

```
Service started  
root  
Done.
```

- (Upgrading from 17.1R1 to 17.2R1) Check the following log files for errors:
 - /var/log/pe_upgrade_17_2.log
 - /var/log/pe_upgrade_17_2_3rd_party_adapter.log
 - /var/log/pe_upgrade_nsx.log

RELATED DOCUMENTATION

Policy Enforcer Installation Overview

Configuring Policy Enforcer Settings and Connectors

IN THIS CHAPTER

- [Policy Enforcer Settings | 1253](#)
- [Policy Enforcer Connector Overview | 1256](#)
- [Creating a Policy Enforcer Connector for Public and Private Clouds | 1259](#)
- [Creating a Policy Enforcer Connector for Third-Party Switches | 1270](#)
- [Editing and Deleting a Connector | 1275](#)
- [Viewing VPC or Projects Details | 1277](#)
- [Integrating ForeScout CounterACT with Juniper Networks Connected Security | 1279](#)
- [ClearPass Configuration for Third-Party Plug-in | 1290](#)
- [Cisco ISE Configuration for Third-Party Plug-in | 1296](#)
- [Integrating Pulse Policy Secure with Juniper Networks Connected Security | 1306](#)
- [Policy Enforcer Backup and Restore | 1322](#)

Policy Enforcer Settings

To configure your Policy Enforcer, perform the following actions.

Before You Begin

- Policy Enforcer Release version and Security Director Release version must be compatible. The Settings page shows the current release version of Policy Enforcer. If there is an incompatibility, an error message is shown that there is a mismatch between Security Director and Policy Enforcer release versions. To know more about the supported software versions, see *Policy Enforcer Release Notes*.

You cannot proceed further if the Policy Enforcer and Security Director Release versions are incompatible.

- A valid Policy Enforcer VM password is required to have a fully functional Policy Enforcer. If the password is valid, a message is shown at the top of the Settings page that the Policy Enforcer Space

user (pe_user) password is currently valid and the date by when the password expires. The pe_user has the same capabilities as the super user.

If the password is invalid, an error message is shown at the top of the Settings page. To fix this issue, login to the Policy Enforcer VM, change the root password, and then enter the new root password in the Settings page.

- Policy Enforcer with Security Director can be used in four different configuration types. For each configuration type, certain features are available. Read the following topic: [Juniper ATP Cloud Configuration Type Overview](#) before you make a Juniper ATP Cloud or Juniper Advanced Threat Prevention (JATP) Configuration Type selection on the Policy Enforcer Settings page.
- If you are using Juniper ATP Cloud or ATP Appliance without Juniper Connected Security or Cloud Feeds only, you must still download Policy Enforcer and create a policy enforcer virtual machine.
- Juniper ATP Cloud license and account are needed for three of the configuration types (Juniper ATP Cloud or ATP Appliance with Juniper Connected Security, Juniper ATP Cloud or JATP, and Cloud Feeds only), but not for the default mode (No Selection). If you do not have a Juniper ATP Cloud license, contact your local sales office or Juniper Networks partner to place an order for a Juniper ATP Cloud premium license. If you do not have a Juniper ATP Cloud account, when you configure Juniper ATP Cloud, you are redirected to the Juniper ATP Cloud server to create one. Please obtain a license before you try to create a Juniper ATP Cloud account. Refer to [Policy Enforcer Installation Overview](#) for instructions on obtaining a Juniper ATP Cloud premium license.

To set up ATP Cloud or ATP Appliance Configuration Type, you must do the following:

1. Select **Security Director>Administration>Policy enforcer>Settings**.
2. Enter the IP address for the policy enforcer virtual machine. (This is the IP address you configured during the PE VM installation. You can locate this IP address in the vSphere Center portal.)
3. Enter the password for the policy enforcer virtual machine. (This is the same password you use to login to the VM with your root credentials. Note that the username defaults to root)



NOTE: Refer to [Deploying and Configuring the Policy Enforcer with OVA files](#) for instructions on downloading Policy Enforcer and creating your policy enforcer virtual machine.

4. If you want to use certificate based authentication, enable the **Certificate Based Authentication** option.

Browse the X509 certificate file and X509 certificate Key file.

5. Select ATP Cloud Configuration Type. If you do not select a type, Policy Enforcer works in *default mode*. (See [Sky ATP Configuration Type Overview](#) for more information.)

Refer [Table 367 on page 1255](#) to understand the supported threat prevention types for different Policy Enforcer modes:

Table 367: Supported Threat Prevention Types for Different PE Modes

| Threat Prevention Type | No Selection (Default) | Cloud Feeds Only | ATP Cloud or JATP | ATP Cloud or ATP Appliance with Juniper Connected Security |
|--|------------------------|------------------|-------------------|--|
| Custom feeds | Yes | Yes | Yes | Yes |
| Command and Control (C&C) feeds | Yes | Yes | Yes | Yes |
| Infected Host feed | - | Yes | Yes | Yes |
| Malware inspection | - | - | Yes | Yes |
| Enforcement on EX Series and QFX Series switches or using 3rd party Connectors | - | - | - | Yes |

You cannot change or modify a higher configuration to a basic mode. For example, you cannot change:

- Juniper ATP Cloud or JATP ->Cloud feeds only
- Juniper ATP Cloud or ATP Appliance with Juniper Connected Security ->Cloud feeds only
- Juniper ATP Cloud or JATP ->No Selection (Default)



WARNING: If you change to a lower mode, you must reinstall Security Director and Policy Enforcer.

However, you can change or modify your configuration to a higher mode. For example you can change:

- Cloud feeds only-> Juniper ATP Cloud or JATP
- Cloud feeds only ->Juniper ATP Cloud with Juniper Connected Security

- Juniper ATP Cloud or JATP -> Juniper ATP Cloud with Juniper Connected Security
6. Polling timers affect how often the system polls to discover endpoints. There are two polling timers, one that polls network wide and one that polls site wide. They each have default settings, but you can change those defaults to poll more or less often.
 - Network wide polling interval (value in hours): The default is 24 hours. You can set this range from between 1 to 48 hours. This timer polls all endpoints added to the secure fabric.
 - Site wide polling interval (value in minutes): The default is 5 minutes. You can set this range from 1 minute to 60 minutes. This timer polls infected endpoints moving within the sites that are a part of Secure fabric.
 7. Click **Enable Feeds Purge** to enable the purge option. You can purge the feeds that are older than a specified number of days.
 8. The Purge History determines the number of days you can preserve the history of the feeds in Policy Enforcer. You can set a range between 300 to 600 days. The default is 365 days.

The purge job runs every day at 12:00 PM and makes sure that the data set on the purge history is maintained.
 9. Click the **Download** button to view or save Policy Enforcer data logs to your local system. These logs are in a compressed file format.

RELATED DOCUMENTATION

[Comparing the SDSN and non-SDSN Configuration Steps](#)

[Using Guided Setup for Sky ATP with SDSN](#)

No Link Title

[Configuring Cloud Feeds Only](#)

No Link Title


Policy Enforcer Connector Overview


IN THIS SECTION

- [Benefits of Policy Enforcer Connector](#) | 1258

Configure a connector for third-party products (non-Juniper Networks) to unify policy enforcement across all network elements. This protects endpoints, wired and wireless, connecting to third-party devices as well as Juniper devices.

For Policy Enforcer to provide threat remediation to endpoints connecting through third-party devices, it must be able to authenticate those devices and determine their state. It does this using a tracking and accounting threat remediation plug-in to gather information from a RADIUS server and enforce policies such as terminate session and quarantine.

 **NOTE:** All third-party switches being used with Policy Enforcer must support AAA/RADIUS and Dynamic Authorization Extensions to RADIUS protocol (RFC 3579 and RFC 5176).

 **NOTE:** All Cisco Systems switch models that adhere to Radius IETF attributes and support Radius Change of Authorization from Aruba ClearPass are supported by Policy Enforcer for threat remediation.

Once configured, the connector uses an API to gather endpoint MAC address information from the RADIUS server. If a host is found to be suspicious, the RADIUS server sends a CoA to disconnect the active session and quarantine the host. Once the threat has been mitigated, the interface can return to the network again, but must be authorized to do so by Policy Enforcer using the plug-in and information gathered from the RADIUS server.

Once you have a connector configured, the following information is provided on the Connectors main page.

Table 368: Connectors Information- Main Page

| Field | Description |
|-------|--|
| Name | The name you entered for the connector. |
| Type | This field always reads Third Party Switch at this time. |

Table 368: Connectors Information- Main Page *(Continued)*

| Field | Description |
|-----------------|--|
| Status | <p>The current status of the connector. (Active or Inactive.)</p> <p>Hover over the status to see more details of connector instances and their respective status.</p> <p>The following statuses are shown:</p> <ul style="list-style-type: none"> • Active status with green icon—All connector instances inside a connector are active • Inactive status with red icon—All connector instances inside a connector are inactive • Active status with red icon—One of the connectors is inactive and other connectors are active. • In progress status with green icon—All connectors are still in progress. • Pending (not in progress) status with green icon—All connectors are still pending. |
| Description | Specifies the description of a connector. |
| Identity Server | Specifies the IP address of the product management server. |
| IP Address | The IP address of the ClearPass RADIUS server. |

Benefits of Policy Enforcer Connector

- **Custom threat feed and automation** - Automates the threat remediation workflows for third-party products.
- **RESTful APIs** - Provides a network vendor agnostic mechanism for threat remediation. Enables you to automate configuration and management of physical, logical, or virtual devices.

RELATED DOCUMENTATION

[ClearPass Configuration for Third-Party Plug-in | 1290](#)

[Cisco ISE Configuration for Third-Party Plug-in | 1296](#)

[Creating a Policy Enforcer Connector for Third-Party Switches | 1270](#)

Creating a Policy Enforcer Connector for Public and Private Clouds

Before You Begin

- For Amazon Web Services (AWS) connector:
 - Create access key and password for your AWS account. This will be a unique username and password for your Amazon account required to create a connector. See [Managing Access Keys for Your AWS Account](#).
 - Create Virtual Private Clouds(VPC) for the required region. See [Getting Started With Amazon VPC](#).
 - Instantiate the vSRX instance in the required VPC and set the tag identifier, for example AWS_SDSN_VSRX. This tag identifier must match with the vSRX instance tag key in AWS.
 - Create a Security Group in AWS required to create a threat prevention policy for the AWS connector.
 - Deploy workloads in the required VPC and set the resource tags to the workloads.
- For Microsoft Azure connector:
 - Get started with Microsoft Azure. See [Getting Started With Microsoft Azure](#).
 - Create tenant ID for you Azure account. See [Managing Access Keys for Your Microsoft Azure Account](#).

Perform the following actions to configure connectors for the public and private clouds.

To configure threat remediation for a public or private cloud, you must install and register the threat remediation plug-in with Policy Enforcer as follows:

1. Select **Administration > Policy Enforcer > Connectors**.

The Connectors page appears.

2. Click the create icon (+).

The Create Connector page appears.

3. Complete the configuration using the information in [Table 369 on page 1260](#).

4. Click **OK**.



NOTE: Once configured, you select the connector name as an Enforcement Point in your Secure Fabric.

Table 369: Fields on the Create Connector Page for AWS and Contrail

| Field | Description |
|----------------|---|
| <i>General</i> | |
| Name | Enter a unique string that must begin with an alphanumeric character and can include underscores; no spaces allowed; 63 characters maximum. |
| Description | Enter a description; maximum length is 1024 characters. You should make this description as useful as possible for all administrators. |
| Connector Type | Select Amazon Web Services, Contrail, or Microsoft Azure from the list to connect to your secure fabric and create policies for this network. |
| IP Address/URL | <p>Enter the IP (IPv4 or IPv6) address or URL of AWS, Contrail, or Microsoft Azure.</p> <p>For AWS, this field is set to www.aws.amazon.com, by default. This is where all VPCs are located. You cannot edit this field.</p> <p>For Microsoft Azure, this field is set to management.azure.com, by default. This is where all virtual networks are located. You cannot edit this field.</p> |
| Port | <p>For AWS and Microsoft Azure connectors, the port is set to 443 by default and you cannot edit this field.</p> <p>For Contrail connector, provide the port number as 8081.</p> |
| Username | <p>Enter the username of the server for the selected connector type.</p> <p>For AWS, enter the generated access key for your Amazon account. This is not same as your Amazon account username.</p> |

Table 369: Fields on the Create Connector Page for AWS and Contrail *(Continued)*

| Field | Description |
|--|---|
| Password | <p>Enter the password for the selected connector type.</p> <p>For AWS, enter your secret password generated along with your access key. This is not same password as your amazon account.</p> |
| Subscription ID <i>(only for Microsoft Azure connector)</i> | Enter the Azure subscription ID available per tenant basis. |
| Tenant ID <i>(only for Microsoft Azure connector)</i> | Enter the Microsoft Azure tenant ID. |
| <i>Network Details</i> | |

Table 369: Fields on the Create Connector Page for AWS and Contrail (*Continued*)

| Field | Description |
|--|--|
| Connector Type: AWS Virtual Private Clouds | <p>One or more virtual networks under the AWS account are discovered. They are called virtual private cloud (<i>VPC</i>). Only VPCs having vSRX instances deployed are managed. The VPCs are region specific. Select a region from the Region list and the corresponding VPCs are listed. By default, the VPCs for the first available region are listed.</p> <p>Security Director suggests a default Secure Fabric site name for the VPC, in the <i><connector name>_<vpc name>_site</i> format. Click the Secure Fabric site name to edit it. When you edit the name, you will also see the other Secure Fabric sites that do not have any switches or connectors assigned to them. You can also assign these Secure Fabric sites to the connectors. If the edited site name is already existing with a connector or a switch, an alert message is shown and the Secure Fabric site name is reverted to its previous name.</p> <p>You must enable either Threat Remediation or Next Generation Firewall options or both. You cannot create a connector instance without enabling at least one option. If you navigate to the next page without enabling these options, an error message is shown insisting the user to enable either Threat Remediation or Next Generation Firewall to proceed further.</p> <p>You can get a detailed view of the VPC by hovering over the name and clicking the Detailed View icon. See <i>Viewing VPC or Projects Details</i>.</p> <p>NOTE: You can perform search on VPCs. Search is not supported for the site names.</p> |

Table 369: Fields on the Create Connector Page for AWS and Contrail *(Continued)*

| Field | Description |
|---|---|
| <p>Connector Type: Microsoft Azure</p> <p>Virtual Networks</p> | <p>One or more virtual networks under the Microsoft Azure account are discovered. These virtual networks are based on the Azure subscription per tenant basis. A tenant can have more than one subscription and a single subscription can contain one or more virtual networks.</p> <p>Security Director suggests a default site name for the project, in the <code><connector name>_<virtual network name>_site</code> format. Click the site name to edit it. When you edit the site name, you will also see the other sites that do not have any switches or connectors assigned to them. You can also assign these sites to the connectors. If the edited site name is already existing with a connector or a switch, an alert message is shown and the site name is reverted to its previous name.</p> <p>You must enable either Threat Remediation or Next Generation Firewall options or both. You cannot create a connector instance without enabling at least one of the two options. If you navigate to the next page without enabling these options, an error message is shown insisting the user to enable either Threat Remediation or Next Generation Firewall to proceed further.</p> <p>You can get a detailed view of the virtual network by hovering over the name and clicking the Detailed View icon.</p> |

Table 369: Fields on the Create Connector Page for AWS and Contrail *(Continued)*

| Field | Description |
|---|--|
| <p>Connector Type: Contrail</p> <p>Project</p> | <p>Tenant information determined from the Contrail connector is listed.</p> <p>Security Director suggests a default site name for the project, in the <code><connector name>_<project name>_site</code> format. Click the site name to edit it. When you edit the site name, you will also see the other sites that do not have any switches or connectors assigned to them. You can also assign these sites to the connectors. If the edited site name is already existing with a connector or a switch, an alert message is shown and the site name is reverted to its previous name.</p> <p>You must enable either Threat Remediation or Next Generation Firewall options or both. You cannot create a connector instance without enabling at least one of the two options. If you navigate to the next page without enabling these options, an error message is shown insisting the user to enable either Threat Remediation or Next Generation Firewall to proceed further.</p> <p>You can get a detailed view of the project by hovering over the name and clicking the Detailed View icon. See <i>Viewing VPC or Projects Details</i>.</p> <p>NOTE: You can perform search on Project names. Search is not supported for the site names.</p> |
| Subnets | <p>The subnet information for Contrail, Microsoft Azure, and AWS is determined from the respective systems. For AWS and Microsoft Azure, subnets are the availability zones and for Contrail, subnets are virtual networks. You can create Policy Enforcement Groups for one or more of the subnets, if threat remediation is selected.</p> <p>Subnets for AWS, Microsoft Azure, and Contrail are allocated to be within the tenant IP Address Management (IPAM) scheme.</p> |

Table 369: Fields on the Create Connector Page for AWS and Contrail *(Continued)*

| Field | Description |
|----------------------|-------------|
| <i>Configuration</i> | |

Table 369: Fields on the Create Connector Page for AWS and Contrail *(Continued)*

| Field | Description |
|---------------|--|
| Configuration | <p data-bbox="841 363 943 390"><i>Metadata</i></p> <p data-bbox="841 422 1419 558">Specifies the resource tag information and the resource tag values that you have determined from the projects or VPC. The tag information appears only if the Next Generation Firewall option is enabled.</p> <p data-bbox="841 590 1409 726">For AWS and Microsoft Azure connector, the resource tag values are fetched from AWS and Microsoft Azure for all the endpoints and then mapped them to the Security Director generated metadata names.</p> <p data-bbox="841 758 1409 1073">Based on the resource tag name, Security Director checks if a metadata with the same resource tag name is already available. If available, it automatically maps the resource tag name to its metadata. If there is no match found, Security Director suggests a new metadata name for the corresponding tag. The suggested metadata name is same as the resource tag name. You can also edit the suggested metadata name and customize the resource tag name.</p> <p data-bbox="841 1104 1393 1199">However, in the Generated MetaData Name column, you cannot use the following predefined metadata names:</p> <ul data-bbox="841 1230 984 1398" style="list-style-type: none"> <li data-bbox="841 1230 951 1262">• Tenant <li data-bbox="841 1293 967 1325">• Provider <li data-bbox="841 1356 984 1388">• Controller <p data-bbox="841 1430 1344 1493">If you provide these names, an appropriate error message is shown to choose a different name.</p> <p data-bbox="841 1524 1419 1839">Select the Map option to map the resource tag to the generated Security Director Metadata while creating the connector instance. If the Map option is not selected, the connector instance is created for a project or VPC without any resource tags. For example, if you have multiple resource tags for a project, you can choose one or more resource tags to map to the corresponding generated metadata, by selecting the Import option. The project or VPC with the selected</p> |

Table 369: Fields on the Create Connector Page for AWS and Contrail *(Continued)*

| Field | Description |
|-------|---|
| | <p>resource tags are created when the connector instance is created.</p> <p>Mapping of Contrail, Microsoft Azure, and AWS connector resource tags to Security Director metadata enables you to create the next generation firewall policy definitions for the source and destination rules, based on the metadata expressions. Policy Enforcer dynamically determines the matching VM instances in AWS, Microsoft Azure, or Contrail connector to the metadata expressions and pushes the IP address content as dynamic address groups to the enforcement points in the tenant specific vSRX firewall instance.</p> <p>In the Configuration Value column, provide any additional information required for this particular connector connection. For example, if the connector type is ForeScout CounterACT, you are required to provide the WebAPI username and password. Similarly for other connectors if the additional configuration parameters are required, they are listed in this column.</p> <p>After the successful completion, the subnet you have created is mapped to that particular connector instance.</p> <p>For AWS and Microsoft Azure, provide the following configuration parameters:</p> <ul style="list-style-type: none"> • SRX username—Specify the username of the vSRX device that you have instantiated for a VPC or a virtual network. • SRX identifier tag—Specify the tag name of the vSRX device, if the recommended vSRX name was not used. If you do not specify any value for this field, Policy Enforcer uses <i>vSRX</i> as a default tag name to identify the device. <p>This enables discovery of this particular vSRX device in Junos Space. This vSRX device is also added to a specific secure fabric site.</p> |

Table 369: Fields on the Create Connector Page for AWS and Contrail *(Continued)*

| Field | Description |
|-------|--|
| | <ul style="list-style-type: none"> • Infected Host Security Group—Specify the security group name that you would want to tag an infected workload for threat remediation. • SRX authentication key—Specify the authentication key file to access the vSRX device. Editing this in the grid prompts you to either upload the authentication key file or view an already existing uploaded authentication key. <p>For Contrail, provide the following configuration parameters:</p> <ul style="list-style-type: none"> • SRX username • SRX password • Infected host security group |

**NOTE:**

- For AWS, Microsoft Azure, and Contrail connectors, the site association is achieved in the Connectors page itself.
- When a connector is added to the site, Policy Enforcer discovers the vSRX Series associated with the connector and assigns it to the site. Hover over the connector name to view the corresponding vSRX with its IP address as a tool tip.
- If the mode in PE Setting page is Juniper Connected Security with ATP Cloud, then you must create ATP Cloud realm and assign the sites associated with the VPC or Project to the realm. Otherwise the vSRX instances in the VPC or Project does not download the dynamic address group objects, that is the list of workloads in the VPC or Project that match a policy metadata expression.

Threat Remediation Workflow

Once you create an AWS, Microsoft Azure, or a Contrail connector with Threat Remediation option, a site is created in the Secure Fabric page.

Perform the following actions for threat remediation:

1. Select **Configure > Threat Prevention > ATP Cloud Realms**.

Select the associated Secure Fabric sites to the respective VPC, virtual networks, or Project that is successfully added. Add the secure fabric site to a Juniper ATP Cloud realm and enrol the vSRX devices to the Juniper ATP Cloud. Enroll devices by clicking **Add Devices** in the list view once the realm is created.

2. Select **Configure > Shared Objects > Policy Enforcement Groups**.

Click the add icon to create a new policy enforcement group. You will see a list of all subnets that you have created in a VPC or virtual network. Select the required subnets for this VPC or a virtual network and create a policy enforcement group. Associate this policy enforcement group to threat remediation policy.

3. Select **Configure > Threat Prevention > Policies**.

Click the add icon to create a new threat prevention policy. Add the threat prevention policy, including profiles for one or more threat types. The security group that you had selected during connector configuration is used when the host gets infected within a corresponding VPC or a virtual network.

Next Generation Firewall Workflow

When you create an AWS, Microsoft Azure, or a contrail connector with Next Generation Firewall option, it means that for a particular VPC or a virtual network, Layer 7 firewall policy is enabled. Perform the following actions to enable next generation firewall:

1. Select **Configure > Firewall Policy**.

2. Select the policy for which you want to define rules and click **Add Rule**.

The Create Rules page appears.

3. In the General tab, enter the name of the rule and description of the rule

4. In the Source tab, click **Select** for the Address(es) field to select the source address.

The Source Address page appears.

- In the Address Selection field, click **By Metadata Filter** option.
- In the Metadata Provider field, select **PE** as a provider from the list.
- In the Metadata Filter field, all the generated metadatas during the connector configuration are listed. Using these metadatas, create a required metadata expression. For example, Application = Web and Tier = App.

- In the Matched Addresses field, addresses matching the selected metadata are listed. This address is used as a source address. For every metadata expression, a unique dynamic address group (DAG) is created.
- Click **Ok** and complete configuring other parameters for the rule.
- Publish and update the configuration immediately or schedule it later.

RELATED DOCUMENTATION

Policy Enforcer Connector Overview

Editing and Deleting a Connector

Viewing VPC or Projects Details

Creating a Policy Enforcer Connector for Third-Party Switches

Before You Begin

- Have your ClearPass, Cisco ISE, ForeScout, Pulse Secure server information available.
- To obtain an evaluation copy of ForeScout CounterACT to use with Policy Enforcer, click [here](#).
- Once configure, you select the Connector as an Enforcement Point in your Secure Fabric.
- Review the *Policy Enforcer Connector Overview* topic.
- To create a connector for a public or a private cloud, see *Creating a Policy Enforcer Connector for Public and Private Clouds*.

Perform the following actions to create connectors for the third-party switches.

To configure threat remediation for third-party devices, you must install and register the threat remediation plug-in with Policy Enforcer as follows:

1. Select **Administration > Policy Enforcer > Connectors**.

The Connectors page appears.

2. Click the create icon (+).

The Create Connector page appears.

3. Complete the configuration using the information in [Table 370 on page 1271](#).
4. Click **OK**.



NOTE: Once configured, you select the connector name as an Enforcement Point in your Secure Fabric.

Table 370: Fields on the Create Connector Page

| Field | Description |
|----------------|---|
| <i>General</i> | |
| Name | Enter a unique string that must begin with an alphanumeric character and can include underscores; no spaces allowed; 63 characters maximum. |
| Description | Enter a description; maximum length is 1024 characters. You should make this description as useful as possible for all administrators. |
| Connector Type | Select the required third-party network of devices to connect to your secure fabric and create policies for this network. The available connectors are Cisco ISE, HP ClearPass, Pulse Secure, and ForeScout CounterACT. |
| IP Address/URL | Enter the IP (IPv4 or IPv6) address of the product management server. |
| Port | Select the port to be used from the list. When this is left blank, port 443 is used as the default. |

Table 370: Fields on the Create Connector Page (*Continued*)

| Field | Description |
|--|---|
| Username | <p>Enter the username of the server for the selected connector type.</p> <ul style="list-style-type: none"> • ClearPass—Enter the Client ID created while setting up the ClearPass API client. See <i>ClearPass Configuration for Third-Party Plug-in</i> for details. • Cisco ISE—Enter the username you used when you created the API Client in the Cisco ISE UI. See <i>Cisco ISE Configuration for Third-Party Plug-in</i>. • ForeScout—Enter the username of your DEX plugin. See <i>Integrating ForeScout CounterACT with Juniper Networks SDSN</i>. |
| Password | <p>Enter the password of the server for the selected connector type.</p> <ul style="list-style-type: none"> • ClearPass—Enter the Client Secret string created while setting up the ClearPass API client. See <i>ClearPass Configuration for Third-Party Plug-in</i> for details. <p>WARNING: When the Access Token Lifetime expires, you must generate a new Client Secret in ClearPass and update it here too.</p> <ul style="list-style-type: none"> • Cisco ISE—Enter the password you used when you created the API Client in the Cisco ISE UI. See <i>Cisco ISE Configuration for Third-Party Plug-in</i>. • ForeScout—Enter the password of your DEX plugin. See <i>Integrating ForeScout CounterACT with Juniper Networks SDSN</i>. |
| DEX User Role (For ForeScout connector type only) | <p>Enter the Data Exchange (DEX) user role information to authenticate and connect to the ForeScout connector. See <i>Integrating ForeScout CounterACT with Juniper Networks SDSN</i>.</p> |

Table 370: Fields on the Create Connector Page (*Continued*)

| Field | Description |
|------------------------|---|
| <i>Network Details</i> | |
| Subnets | <p>Connector Type: ClearPass, ForeScout CounterACT, Pulse Secure, and Cisco ISE</p> <p>Add subnet information to the connector configuration so you can include those subnets in groups and then apply policies to the groups. When using Junos Space, Policy Enforcer is able to dynamically discover subnets configured on Juniper switches. Policy Enforcer does not have the same insight with third-party devices.</p> <p>When you add subnets as part of the connector configuration, those subnets become selectable in Policy Enforcement Groups.</p> <p>To add subnet information, do one of the following:</p> <ul style="list-style-type: none"> Click Upload File to upload a text file with an IP address list. <p>Note that the file you upload must contain only one item per line (no commas or semi colons). All items are validated before being added to the list.</p> <p>OR</p> <ul style="list-style-type: none"> Manually enter the IP addresses. For example: 192.168.0.1/24. <p>Click the add icon (+) to add more IP addresses.</p> <p>NOTE: It is mandatory to add at least one IP subnet to a connector. You cannot proceed to next step without adding a subnet.</p> |
| <i>Configuration</i> | |

Table 370: Fields on the Create Connector Page *(Continued)*

| Field | Description |
|---------------|---|
| Configuration | <p>Provide any additional information required for this particular connector connection. After the successful completion, the subnet you have created is mapped to that particular connector instance.</p> <p>NOTE: For ClearPass and Cisco ISE connectors no additional configuration information are required.</p> |



NOTE:

- You can associate ClearPass, Cisco ISE, Pulse Secure, or Forescout connector to a site only in your Secure Fabric.
- When a connector is added to the site, Policy Enforcer discovers the vSRX Series associated with the connector and assigns it to the site. Hover over the connector name to view the corresponding vSRX with its IP address as a tool tip.



WARNING: Ensure that the correct credentials are provided for the ClearPass, Cisco ISE, Pulse Secure, and ForeScout identity servers. If the initial connection fails, an error message is shown only at that time. Once that message disappears, the status of connectivity to the identity server is not shown in Policy Enforcer. Note that the identity servers are only queried on-demand.

RELATED DOCUMENTATION

Policy Enforcer Connector Overview

ClearPass Configuration for Third-Party Plug-in

Cisco ISE Configuration for Third-Party Plug-in

Editing and Deleting a Connector

Viewing VPC or Projects Details

Editing and Deleting a Connector

IN THIS SECTION

- [Editing a Connector | 1275](#)
- [Deleting a Connector | 1276](#)

You can edit or delete a connector from the Connector page.

Editing a Connector

To edit a connector:

1. Select **Administration > Policy Enforcer > Connectors**.

The Connectors page appears.

2. Select the connector you want to edit , and then click the pencil icon.

The Edit Connector page appears displaying the same options that were used to create a new connector. Note that you cannot edit the Name and IP Address/URL fields.

For the AWS connector, when you select a new region, you must enter the configuration parameters for the VPCs in that region. This enables you to maintain different vSRX authentication keys across different regions.

For AWS and Contrail connectors, you can enable or disable the threat remediation and next generation firewall features. If you disable the next generation firewall feature from a project or VPC, that particular project or VPC connector instance will be deleted. The VPCs are deleted from the corresponding regions.

A warning message is shown if you edit the existing generated metadata name. If you edit the existing metadata name, duplicate metadata objects are created that are associated to a firewall policy. To edit the metadata name, select **Configure > Shared Objects > Object Metadata** and edit the required metadata name. Also if the firewall policies are associated with this metadata, select **Configure > Firewall Policy > Policies** and edit the corresponding metadata expression.

To delete the mapping of the tag name with the generated metadata, disable the Map option for the corresponding project or VPC. A warning message is shown that there could be a firewall policy associated with this metadata. Select **Configure > Firewall Policy > Policies** and edit the corresponding metadata expression. The mapping is deleted at the end of the edit workflow. You can also enable the Import option for the tags that were not mapped to the generated metadata while creating the connector.

3. Modify the required field values and click **Save** to save your changes.

If you discover a new connector instance, you can enable the threat remediation or next generation firewall option. A new site is created when you enable one of these options. You must add these new sites to a realm to perform the threat remediation. At the end of the edit connector workflow, a reminder message is shown to add the sites to a realm.



NOTE:

- During the AWS connector editing, if you change the region, changes that you have made in the current session are discarded. An alert message is shown when you change the region.
- During the ClearPass or Cisco ISE connector editing, you cannot delete subnets that are already assigned to a policy enforcement group. However, you can add of any new subnets and edit their descriptions.

Deleting a Connector

To delete a connector:

1. Select **Administration > Policy Enforcer > Connectors**.

The Connectors page appears.

2. Select the connector that you want to delete, and select the delete icon (X).

Deleting a connector deletes the connector instances and its references as well. A warning message is shown listing all the connector instances that will be deleted, before deleting the connector.

3. Click **Delete** to delete your selection.

If the connector instances that you want to delete has PEG assigned, a warning message is shown to unassign the subnets from PEG first and then delete the connector, as shown in [Figure 107 on page 1277](#).

Figure 107: Deletion Failed Warning



For AWS and Contrail connectors, if there are connector instances with PEG assigned, only those connector instances are not deleted. However, other connector instances without PEG assigned are deleted.

**NOTE:**

- You cannot delete the ClearPass or Cisco ISE connector if its subnets are assigned to a policy enforcement group. You must unassign those subnets from that particular policy enforcement group and then delete the connector.
- You cannot delete a connector if it is assigned as an enforcement point to a site. Before deleting a connector, you must unassign it from the site on Secure Fabric.

RELATED DOCUMENTATION

Policy Enforcer Connector Overview

Creating a Policy Enforcer Connector for Third-Party Switches

Viewing VPC or Projects Details

To view the complete details of a VPC or a project:

1. Select **Administration > Policy Enforcer > Connectors**.

The Connectors page appears.


2. Select the connector you want to edit , and then click the pencil icon.

The Edit Connector page appears displaying the same options that were used to create a new connector.

- 3. In the Network Details section, get a detailed view by hovering over the VPC or project name and click the Detailed View icon before the VPC or project name.

The Detailed View page appears, as shown in [Figure 108 on page 1278](#).

Figure 108: Detailed View Page

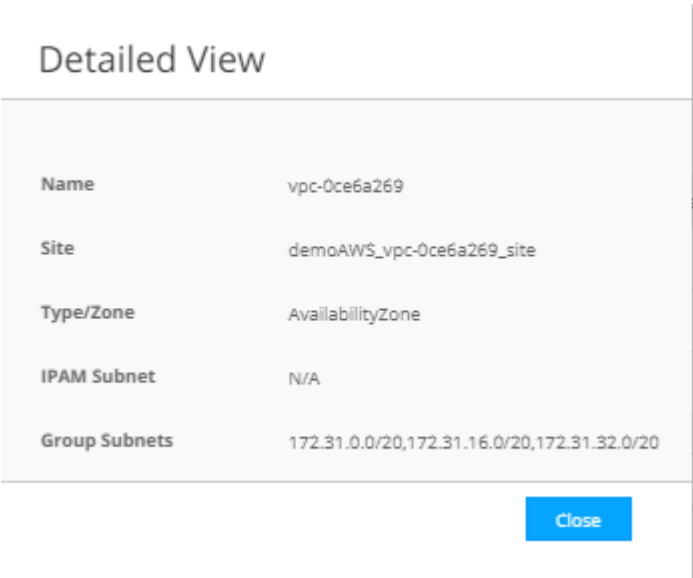

[Table 371 on page 1278](#) explains fields on the Detailed View page.

Table 371: Fields on the Detailed View Page

| Field | Description |
|---------------|--|
| Name | Specifies name of a VPC or project. |
| Secure Fabric | Specifies the site to which the VPC or project s allocated. |
| Type/Zone | Specifies the connector type. For example, virtual network for Contrails and AvailabilityZone for AWS. |
| IPAM Subnet | Specifies the IP Address Management (IPAM) subnets allocated to the respective VPC or project. |

Table 371: Fields on the Detailed View Page *(Continued)*

| Field | Description |
|---------------|--|
| Group Subnets | <p>Specifies the group of subnets allocated to the VPC or project.</p> <p>For Contrail, you will see a key value of Tier. For example, the group is called web and assigned subnet is x.x.x.x/xx. For AWS, you will see only the group of subnets.</p> <p>For Contrail, they are still group of subnets. However, each of the subnets are allocated to a tag, for example, database, tier, application, and so on.</p> |

RELATED DOCUMENTATION

Creating a Policy Enforcer Connector for Third-Party Switches

Editing and Deleting a Connector

Integrating ForeScout CounterACT with Juniper Networks Connected Security

IN THIS SECTION

- [Configuring the DEX Plug-in | 1280](#)
- [Configuring the Web API Plug-in | 1284](#)
- [Creating ForeScout CounterACT Connector in Security Director | 1286](#)

This topic provides instructions on how to integrate the third-party device ForeScout CounterACT with Juniper Networks Connected Security solution to remediate threats from infected hosts for enterprises. ForeScout CounterACT is an agentless security appliance that dynamically identifies and evaluates network endpoints and applications the instant they connect to your network. CounterACT applies an agentless approach and integrates with Juniper Connected Security to block or quarantine infected hosts on Juniper Networks' devices, third-party switches, and wireless access controllers with or without 802.1x protocol integration.

To integrate ForeScout CounterACT with Juniper Connected Security, you must create a connector in Policy Enforcer that enables CounterACT to connect to your secure fabric and create policies for CounterACT. Before you configure the ForeScout CounterACT connector, you must ensure that ForeScout CounterACT is installed and running with the Open Integration Module (OIM). The ForeScout OIM consists of two plug-ins: Data Exchange (DEX) and Web API. Install both the plug-ins and ensure that they are running. You must configure these plug-ins before you create a connector in Policy Enforcer.

If you do not have ForeScout CounterACT installed in your network, obtain an evaluation copy from [here](#).

This topic includes the following sections:

Configuring the DEX Plug-in

The DEX plug-in receives API information about infected hosts from the ForeScout CounterACT connector. Messages from infected hosts are either blocked or quarantined.

When you configure the DEX plug-in, you also configure a new property, Test, for DEX. When configured, this property ensures that Web services are available for Policy Enforcer, monitors the network status, and validates usernames and passwords.

To configure the DEX plug-in:

1. Select **Tools > Options > Data Exchange (DEX)** in the CounterACT UI.
The Data Exchange configuration page appears.
2. On the Data Exchange (DEX) page, select the **CounterACT Web Services > Accounts** tab, as shown in [Figure 109 on page 1281](#).
The DEX Accounts page appears.

Figure 109: DEX Accounts Page

Data Exchange (DEX)

Use DEX to exchange data with external sources.
Define external databases and web services, and map data to custom endpoint properties.

SQL/LDAP External Web Services **CounterACT Web Service** General Settings

Accounts Properties Security Settings

Define account credentials to log in to the CounterACT Web Service.
Requests sent to the web service must include account credentials.
Host properties defined in the CounterACT Web Service Properties tab are associated with an account defined here.

Search

| Name | Description | User Name |
|---------------|-----------------|-----------|
| Administrator | Policy Enforcer | admin |

+ Add...
✎ Edit...
🗑 Remove
📄 Import...
📄 Export...

? Help Apply Cancel

3. Select **Add**.
The Add page appears.
4. In the Name field, enter the name for the CounterACT Web service account.
Enter this name in the DEX User Role field (see Step 3) while configuring the ForeScout connector in Security Director.
5. In the Description field, enter a brief description of the purpose of the Web service account.
6. In the Username field, enter the username that will be used to authorize CounterACT to access the Web service account.
7. In the Password field, enter the password that will be used to authorize CounterACT to access this Web service account.
8. Click **OK**.
9. In the Properties tab, click **Add**.
The General pane of the Add Property from CounterACT Web Service wizard opens, as shown in [Figure 110 on page 1282](#).

Figure 110: Add Property-General Pane Page

Add Property from CounterACT Web Service

General

Define a host property that is set via the CounterACT Web Service. Associate the property with a CounterACT web service account. Only requests submitted to the web service using this account can set the property.

Property Name

Property Tag (ASCII only)

Description

Account

[Help](#) [Previous](#) [Next](#) [Finish](#) [Cancel](#)

10. Add properties such as block, quarantine, and Test, as shown in [Figure 111 on page 1283](#). You must include the Test property. Otherwise, you cannot add CounterACT as a third-party connector to Policy Enforcer successfully.

Figure 111: DEX Properties Page

Data Exchange (DEX)

Use DEX to exchange data with external sources.
Define external databases and web services, and map data to custom endpoint properties.

SQLLDAP External Web Services **CounterACT Web Service** General Settings

Accounts **Properties** Security Settings

Define host properties that are set by the CounterACT Web Service.
Each host property defined in this tab is associated with one of the accounts in the CounterACT Web Service Accounts tab.
To set a property, a client must send a request that uses the account credentials of the associated account for authentication.

Search

| Name | Description | Type | Account |
|------------|-----------------------------------|---------|---------------|
| block | Policy Enforcer Block Action | Boolean | Administrator |
| quarantine | Policy Enforcer Quarantine Action | Boolean | Administrator |
| Test | | Boolean | Administrator |

+ Add...
Edit...
Remove
Import...
Export...

Help Apply Cancel

11. In the Security Settings tab, click **Add** and add the IP address range from where communication is expected, as shown in [Figure 112 on page 1283](#).

Figure 112: Add IP Range Page

Add IP Range

☐ All IPs

☒ IP Range -

OK Cancel

Click **OK**. The IP address appears in the IP Address Range list, as shown in [Figure 113 on page 1284](#).

Figure 113: DEX Security Settings Page

Data Exchange (DEX)

Use DEX to exchange data with external sources.
Define external databases and web services, and map data to custom endpoint properties.

SQL/LDAP External Web Services **CounterACT Web Service** General Settings

Accounts Properties **Security Settings**

Define security setting for CounterACT Web Service.

Manage the list of IP ranges that are allowed to access CounterACT Web Service.

| IP Address Range |
|------------------|
| 172.30.77.104 |

+ Add...
Remove
Edit...

? Help Apply Cancel

12. On the Data Exchange (DEX) page, click **Apply**.

The configuration is saved and the configuration settings are applied.

Configuring the Web API Plug-in

The Web API plug-in enables external entities to communicate with CounterACT by using simple, yet powerful Web service requests based on HTTP interaction. You configure the Web API plug-in to create an account for Policy Enforcer integration.

To configure the Web API plug-in:

1. Select **Tools > Options > Web API** in the CounterACT UI.

The Web API page appears.

2. In the User Settings tab, select **Add**.

The Add Credentials page appears.

3. Use the same username and password that you created for the DEX configuration (see Step 6 and Step 7) and click **OK**, as shown in [Figure 114 on page 1285](#).

Figure 114: Web API User Settings Page

Web API

User Settings Client IPs

Manage user credentials and authentication settings of CounterACT Web APIs.

User Credentials

Manage the credential of users that are allowed to access CounterACT Web APIs.

Search

| Users |
|-------|
| admin |

+ Add...
Remove
Edit...

Apply Cancel

4. Select the **Client IPs** tab and click **Add**.

Add the Policy Enforcer IP address into the access list.

5. Click **OK**.

The IP address appears in the IP Address Range list, as shown in [Figure 115 on page 1285](#).

Figure 115: Web API Client IPs Page

Web API

User Settings Client IPs

Manage the list of client IP ranges that are allowed to access CounterACT Web APIs.

| IP Address Range |
|------------------|
| 172.30.77.104 |

+ Add...
Remove
Edit...

Apply Cancel

6. Click **Apply** to save and apply your configuration.

Creating ForeScout CounterACT Connector in Security Director

After you configure the DEX and Web API plug-ins, you need to create a connector for ForeScout CounterACT in Policy Enforcer.

To create a ForeScout CounterACT connector in Junos Space Security Director:

1. Select **Security Director > Administration > Policy Enforcer > Connectors**.

The Connectors page appears.

2. Click the create icon (+).

The Create Connector page appears.

3. In the General tab, select ForeScout CounterACT as the connector type and provide the username, DEX user role, and password, as shown in [Figure 116 on page 1286](#). (The DEX user role is the one that you created in Step 4).

Specify 443 as the port number for communication.


Figure 116: Edit Connector Page

The screenshot displays the 'Edit Connector' page in the Junos Space Security Director. The page has a breadcrumb trail: Administration / Policy Enforcer / Connectors. On the left, a table lists connectors, with 'forescoutconnector' selected. The main area shows the 'General' tab of the 'Edit Connector' form. The form includes the following fields:

- Name ***: forescoutconnector
- Description ***: fs
- ConnectorType ***: ForescoutCounterACT (selected from a dropdown)
- Primary Identity Server** section:
 - IP Address ***: 10.92.82.139
 - Port ***: 443
- Username ***: admin
- Password ***: (masked with asterisks)
- Dex User Role ***: Administrator

Navigation tabs at the top indicate the steps: 1 General, 2 Network Details, and 3 Configuration.

4. In the Network Details tab, configure the IP subnets, as shown in [Figure 117 on page 1287](#).
CounterACT treats the IP subnets as endpoints and takes action.

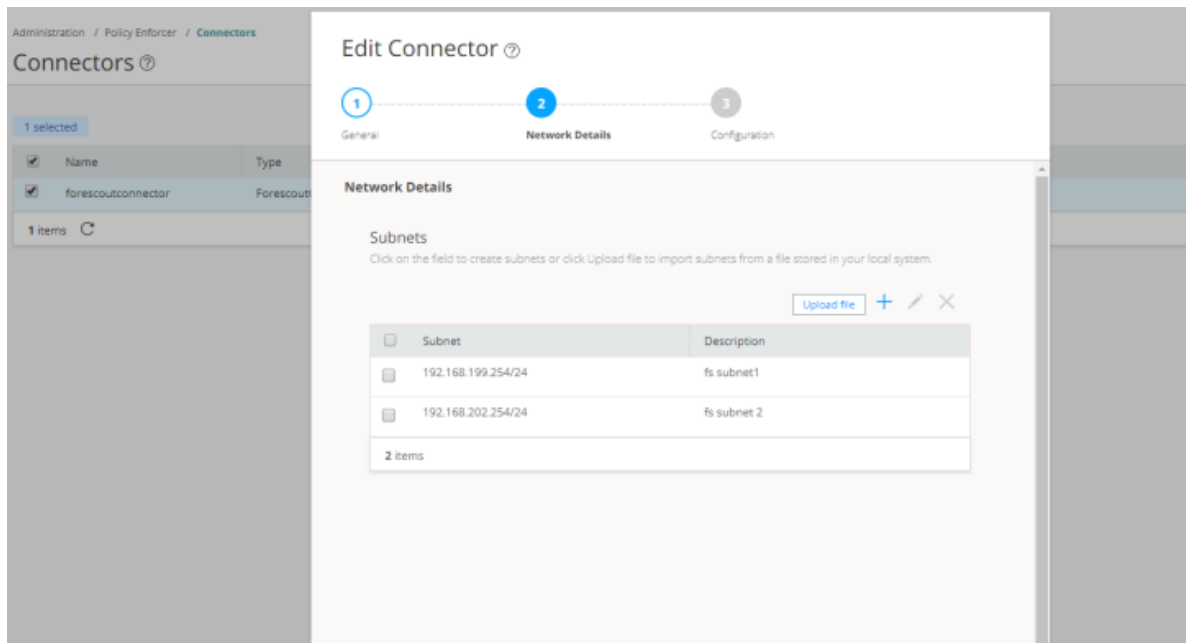Figure 117: Edit Connector - Network Details Page

5. In the Configuration tab, specify the Web API username and password, as shown in [Figure 118 on page 1288](#).

Figure 118: ForeScout Connector - Configuration Tab

Edit Connector ?

1 General
 2 Network Details
 3 Configuration

Configuration

Enter configuration values for the configuration keys.

| Configuration Key | Configuration Value |
|--|---------------------|
| User ID of CounterACT web application | admin |
| Password of CounterACT web application | **** |

Cancel
Back
Finish

6. Click **Finish**.

A new ForeScout CounterACT connector is created.

7. Verify that the communication between Policy Enforcer and CounterACT is working.

After installing ForeScout CounterACT and configuring a connector, in the CounterACT UI, create policies for CounterACT to take the necessary action on the infected hosts. The Hosts page lists compromised hosts and their associated threat levels, as shown in [Figure 119 on page 1289](#).

Figure 119: Host Information

| | | | | | | |
|-----------------------|----------------|------------|--------------|--|-----------------------|--------------------------|
| ENGLABSISDSN-WINDO... | 10.92.83.154 | Subnet_101 | 005056bb37f6 | | | |
| ENGLABSISDSN-WINDO... | 10.92.83.153 | Subnet_101 | 005056bb754f | | | |
| ENGLABSISDSN-WINDO... | 10.92.83.144 | Subnet_101 | 005056bb2326 | | | |
| ENGLABSISDSN-WINDO... | 10.92.83.155 | Subnet_101 | 005056bb4fc0 | | | |
| ENGLABSISDSN-WINDO... | 10.92.83.143 | Subnet_101 | 005056bb2dbf | | | |
| 192.168.199.9 | 192.168.199.9 | Subnet_101 | 00505693c442 | | | |
| 192.168.199.5 | 192.168.199.5 | Subnet_101 | 7819f77096e8 | | | |
| 192.168.199.3 | 192.168.199.3 | Subnet_101 | d067e5468910 | | 10.92.81.115:ge-0/0/4 | ge-0/0/4 (missing alias) |
| 192.168.199.25 | 192.168.199.25 | Subnet_101 | 005056bb0eab | | 10.92.81.115:ge-0/0/2 | ge-0/0/2 (missing alias) |
| 192.168.199.22 | 192.168.199.22 | Subnet_101 | 005056bb667f | | | |
| 192.168.199.21 | 192.168.199.21 | Subnet_101 | 005056bb72b9 | | | |
| 192.168.199.20 | 192.168.199.20 | Subnet_101 | 005056bb5e1b | | 10.92.81.115:ge-0/0/2 | ge-0/0/2 (missing alias) |

| | | |
|---|------------|--------------|
| Profile | Compliance | All policies |
| IP Address: 192.168.199.25 Connectivity: Internal | | |
| MAC Address: 005056bb0eab | | |

| | |
|---------------------------|--------------------------|
| Host Information | |
| IP Address: | 192.168.199.25 |
| MAC Address: | 005056bb0eab |
| NIC Vendor: | VMWARE, INC. |
| Block: | Yes |
| Switch IP: | 10.92.81.115 |
| Switch Hostname: | js-ex42k-01 |
| Switch Port Name: | ge-0/0/2 |
| Switch Port Alias: | ge-0/0/2 (missing alias) |
| Switch IP and Port Name: | 10.92.81.115:ge-0/0/2 |
| Switch Port VLAN: | 999 |
| Switch Port ACL: | |
| Switch Port VLAN Name: | quarantine |
| Switch Port Voice Device: | No |

Table 372 on page 1289 shows the recommended actions performed by CounterACT on the infected hosts that are blocked or quarantined.

Table 372: Recommended Action to Be Performed on the Infected Hosts

| Infected Host Policy Enforcer Action | Connection State | Action Performed by CounterACT |
|--------------------------------------|------------------|---|
| Blocked | Wired | Apply access control list (ACL) to block inbound and outbound traffic for a specific MAC address. |
| | Wireless | Apply WLAN block on the endpoint, which will block the traffic based on the wireless MAC address. |
| | Dot1x | Apply CoA. |
| Quarantined | Wired | Apply VLAN. This action is specified by Policy Enforcer. |
| | Wireless | Apply VLAN. This action is specified by Policy Enforcer. |

RELATED DOCUMENTATION

Policy Enforcer Connector Overview

Creating a Policy Enforcer Connector for Third-Party Switches

ClearPass Configuration for Third-Party Plug-in

On ClearPass you will configure the following:

- API Client
- Custom Attribute
- Enforcement Profiles
- Enforcement Policy

Policy Enforcer's ClearPass Connector communicates with the Clearpass Radius server using the Clearpass API. As part of threat remediation, Policy Enforcer's Clearpass Connector uses enforcement profiles. This section provides information for configuring Clearpass so that Policy Enforcer can invoke the appropriate enforcement profiles.

As part of the configuration, on ClearPass you will create two enforcement profiles, one for quarantine and one for terminate. Then you will use them in the ClearPass enforcement policy. Once ClearPass is configured, you will configure a ClearPass Connector on Policy Enforcer.



NOTE:

- Always use a third-party switch that supports 802.1x, Radius CoA, Radius Accounting, and DHCP snooping features. Enabling DHCP snooping is important which configures the Radius attribute, Framed-IP-Address. Only after configuring Framed-IP-Address, Policy Enforcer can detect the session related to the infected-host IP addresses and terminate the session.
- The stale sessions in ClearPass cannot be terminated and therefore, the actual East-West traffic block will not be active until you reauthenticate the session. You must ensure to clear the stale sessions in ClearPass frequently.

To configure the API Client:

1. In ClearPass, navigate to **Administration > API Services > API Clients** and create a client with the following attributes:



NOTE: You must login as ClearPass Guest to see the API services menu.

- Client ID: sdsncient
- Enabled: Select the check box for **Enable API client**
- Operator Profile: Create a profile from Administrator > Operator Logins > Profiles for the API client with minimum access privileges as shown in [Figure 120 on page 1291](#).

Figure 120: ClearPass API Client Operator Profile Minimum Privileges

| Operator Profile | | |
|------------------|---|--|
| Name: | sdsnop | |
| Description: | | |
| Operator logins: | Enabled | |
| Privileges: | <div> API Services Custom </div> <div> Allow API Access Allow Access </div> <div> Guest Manager Custom </div> <div> Active Sessions Full Access </div> <div> Active Sessions History Read Only </div> <div> Policy Manager Custom </div> <div> Identity - Endpoints Read and Write </div> <div> Insight - Endpoints Read and Write </div> | |
| Skin: | | |
| Start Page: | (Default) | |
| Language: | (Default) | |
| Time Zone: | (GMT-08:00) America/Los Angeles; Pacific Time | |

- Grant Type: Select **Client credentials** (`grant_type = client_credentials`)
- Client Secret: Copy and save this. It will not be shown again.
- Access Token Lifetime: Enter 5 minutes as a time-frame.


Figure 121: ClearPass Edit API Client




ClearPass Guest

Home » Administration » API Services » API Clients

Edit API Client (sdsncient)

Use this form to edit the API client 'sdsncient'.

 Changing properties other than the description will invalidate any existing access tokens.

| Edit API Client | |
|--|---|
| * Client ID: | sdsncient <small>The unique string identifying this API client. Use this value in the OAuth2 "client_id" parameter.</small> |
| Description: | <div></div> <small>Use this field to store comments or notes about this API client.</small> |
| Enabled: | <input checked="" type="checkbox"/> Enable API client |
| * Operator Profile: | sdsnop <small>The operator profile applies role-based access control to authorized OAuth2 clients. This determines what API objects and methods are available for use.</small> |
| * Grant Type: | Client credentials (grant_type=client_credentials) <small>Only the selected authentication method will be permitted for use with this client ID.</small> |
| Client Secret: |  Encrypted, not shown <input type="checkbox"/> Generate a new client secret |
| Access Token Lifetime: | 5 minutes <small>Specify the lifetime of an OAuth2 access token.</small> |
| <div>  Save Changes  Cancel </div> | |

* required field

2. Click **Save Changes**.

To configure a Custom Attribute:

1. Select ClearPass Policy Manager and navigate to **Administration > Dictionaries > Attributes** to create a custom attribute. Then add it into the Dictionary: sdsnEpStatus. Enter the following:

- Entity Type: **Endpoint**
- Name: sdsnEpStatus (Note that you must use this name - sdsnEpStatus)
- Data Type: **List**
- Is Mandatory: **Yes**
- Allowed Values: **healthy, blocked, quarantine**
- Default Value: **healthy**

Figure 122: ClearPass Edit Attribute

Administration » Dictionaries » Attributes

Attributes

Filter: contains

| # | <input type="checkbox"/> Name ▲ | Entity | Data Type |
|----|---------------------------------------|----------|-----------|
| 1. | <input type="checkbox"/> sdsnEpStatus | Endpoint | List |

Showing 1-1 of 1

Edit Attribute

| | |
|--------------------------|--|
| Entity | EndPoint |
| Name | <input type="text" value="sdsnEpStatus"/> |
| Data Type | List |
| Is Mandatory | Yes |
| Allowed Value | <input type="text" value="healthy, blocked, quarantine"/> (e.g., example1,example2,example3) |
| Default Value (optional) | <input type="text" value="healthy"/> Select from the list |

2. Click **Save**.

To configure Enforcement Profiles:

1. In ClearPass, navigate to **Configuration > Enforcement > Profiles** and create two enforcement profiles.
2. Profile 1: Create the following profile to quarantine infected endpoints:
 - Name: **Name of the enforcement profile**
 - Description: **Quarantine profile for Juniper Connected Security**
 - Type: **RADIUS**
 - Action: **Accept**

Figure 123: ClearPass Enforcement Profile: Quarantine

ClearPass Policy Manager

[Support](#) | [Help](#) | [Logout](#)
admin (Super Administrator)

Configuration » Enforcement » Profiles » Edit Enforcement Profile - JNPR SDSN Quarantine

Enforcement Profiles - JNPR SDSN Quarantine

Summary | **Profile** | **Attributes**

Profile:

| | |
|--------------------|----------------------|
| Name: | JNPR SDSN Quarantine |
| Description: | |
| Type: | RADIUS |
| Action: | Accept |
| Device Group List: | - |

Attributes:

| Type | Name | Value |
|----------------|-------------------------|----------------|
| 1. Radius:IETF | Tunnel-Private-Group-Id | = v100 |
| 2. Radius:IETF | Tunnel-Type | = VLAN (13) |
| 3. Radius:IETF | Tunnel-Medium-Type | = IEEE-802 (6) |
| 4. Radius:IETF | Acct-Interim-Interval | = 60 |

[Back to Enforcement Profiles](#) Copy Save Cancel



NOTE: The data displayed at the bottom of the screen is for example and not for configuration purposes. Note that the 4th attribute can be set for the accounting packets to be sent by the NAS device to the Clearpass Radius server.

3. Profile 2: Create the following profile to block infected endpoints:



NOTE: To configure this profile, copy the default system profile Juniper Terminate Session and edit the profile name and attributes.

- Name: **JNPR SDSN Terminate Session**
- Description: **Block profile for SDSN**
- Type: **RADIUS_CoA**
- Action: **Disconnect**



NOTE: If there are any vendor-specific additional attributes required for the Terminate COA, those needs to be added here. For example, in the case of Juniper Networks Trapeze Wireless Clients, the JNPR SDSN Terminate Session profile requires two additional attributes: NAS-IP-Address and User-Name.

Figure 124: ClearPass Enforcement Profile: Terminate

ClearPass Policy Manager [Support](#) | [Help](#) | [Logout](#)
admin (Super Administrator)

Configuration » Enforcement » Profiles » Edit Enforcement Profile - Juniper SDSN Terminate Session

Enforcement Profiles - Juniper SDSN Terminate Session

Summary | Profile | Attributes

Profile:

| | |
|--------------------|---|
| Name: | Juniper SDSN Terminate Session |
| Description: | System-defined profile to disconnect user (Juniper) |
| Type: | RADIUS_CoA |
| Action: | Disconnect |
| Device Group List: | - |

Attributes:

| Type | Name | Value |
|----------------|--------------------|-------------------------------------|
| 1. Radius:IETF | Calling-Station-Id | = %{Radius:IETF:Calling-Station-Id} |
| 2. Radius:IETF | Acct-Session-Id | = %{Radius:IETF:Acct-Session-Id} |

[Back to Enforcement Profiles](#) [Copy](#) [Save](#) [Cancel](#)

Configure an Enforcement Policy:

In ClearPass, navigate to **Configuration > Enforcement > Policies**. Both profiles you created must be added to all the enforcement policies for endpoints addressed by Policy Enforcer.

Figure 125: ClearPass Enforcement Policy

ClearPass Policy Manager [Support](#) | [Help](#) | [Logout](#)
admin (Super Administrator)

Configuration » Enforcement » Policies » Edit - HR Windows Policy

Enforcement Policies - HR Windows Policy

Enforcement policy has not been saved

Summary | Enforcement | Rules

Enforcement:

| | |
|-------------------|--------------------|
| Name: | HR Windows Policy |
| Description: | |
| Enforcement Type: | RADIUS |
| Default Profile: | HR Windows Profile |

Rules:

Rules Evaluation Algorithm: First applicable

| Conditions | Actions |
|--|--------------------------------|
| 1. (Endpoint:sdsnEpStatus EQUALS blocked) | Juniper SDSN Terminate Session |
| 2. (Endpoint:sdsnEpStatus EQUALS quarantine) | JNPR SDSN Quarantine |
| 3. (LocalUser:Department EQUALS HR) | [RADIUS] HR Windows Profile |

[Back to Enforcement Policies](#) [Copy](#) [Save](#) [Cancel](#)



NOTE: Rules Evaluation should be set to "First applicable."



NOTE: Make sure the default termination enforcement profile for each of the supported vendors is not superseded by any of its enforcement profile copies. Also make sure that all the attributes required for termination are set in the profile. (As in the previous Juniper Networks Trapeze Wireless Clients example.)

Enable Insight:

1. In ClearPass, navigate to **Administration > Server Manager > Server Configuration** for the server in use.
2. Enable Insight in the **System** tab.

Set the Log accounting Interim-update Packets as TRUE:

1. In ClearPass, navigate to **Administration > Server Manager > Server Configuration** for the server in use.
2. Select the **Service Parameters** tab.
3. In the **Select Service** drop down list, select **Radius Server** and set the Log accounting Interim-update Packets as **TRUE**.
4. Proceed to *Creating a Policy Enforcer Connector for Third-Party Switches* to finish the configuration with Policy Enforcer.

RELATED DOCUMENTATION

Creating a Policy Enforcer Connector for Third-Party Switches

Policy Enforcer Connector Overview

Cisco ISE Configuration for Third-Party Plug-in

Policy Enforcer's Cisco ISE Connector communicates with the Cisco Identity Services Engine server using the Cisco ISE API. As part of threat remediation, Policy Enforcer's Connector uses enforcement profiles. This section provides information for configuring Cisco ISE so that Policy Enforcer can invoke the appropriate enforcement profiles.

As part of the configuration, on Cisco ISE you will create two enforcement profiles, one for quarantine and one for terminate. Then you will use them in the Cisco ISE enforcement policy. Once Cisco ISE is configured, you will configure a Cisco ISE Connector on Policy Enforcer.

On Cisco ISE you will configure the following:


- Change policy modes
- Create an API client
- Configure network profiles
- Add a custom attribute
- Configure authorization profiles
- Set an authorization policy

On Cisco ISE, the Simple Mode policy model is selected by default. For creating an API client, Policy Sets should be enabled.

- Navigate to **Administration > System > Settings > Policy Sets** and Enable **Policy Sets** mode.

You are prompted to login again after changing the mode.

Figure 126: Cisco ISE: Enable Policy Sets Mode

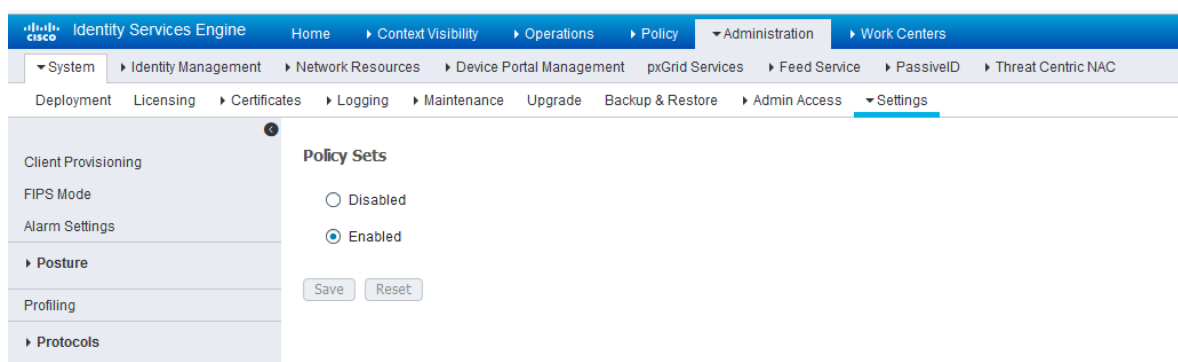

Create an API Client:

1. Using the Cisco ISE web UI, create an Admin User by navigating to **Administration > System > Admin Access > Administrator > Admin User**.
2. Create an Admin User and assign it to the following Admin Groups: **ERS Admin, MnT Admin**.
Make note of the username and password. You will need them when you configure the connector portion in Policy Enforcer later on.

Figure 127: Cisco ISE: Create Admin User and Assign to Admin Groups

The screenshot shows the Cisco ISE Administration interface. The left sidebar has a menu with 'Authentication', 'Authorization', 'Administrators', 'Admin Users', 'Admin Groups', and 'Settings'. The 'Administrators' section is selected, displaying a table of administrators.

| Status | Name | Description | First Name | Last Name | Email Address | Admin Groups |
|---|--------|-----------------------------|------------|---------------|---------------------|---------------------|
| <input checked="" type="checkbox"/> Enabled | admin | Default Admin User | srinivasan | veeraraghavan | sriniv@juniper.net | Super Admin |
| <input type="checkbox"/> Disabled | ers | ERS admin user | ERS | Admin | binhlie@juniper.net | ERS Admin,MnT Admin |
| <input checked="" type="checkbox"/> Enabled | pe_api | | api | user | admin@dummy.com | ERS Admin,MnT Admin |
| <input checked="" type="checkbox"/> Enabled | Prad | | | | | ERS Admin,MnT Admin |
| <input checked="" type="checkbox"/> Enabled | sdsn | APIs access user - for S... | SDSN | Plugin | binhlie@juniper.net | ERS Admin,MnT Admin |
| <input type="checkbox"/> Disabled | sriniv | | Srinivasan | V | sriniv@juniper.net | Super Admin |
| <input checked="" type="checkbox"/> Enabled | sunil | APIs access user - for S... | Sunil | R | binhlie@juniper.net | ERS Admin,MnT Admin |
| <input checked="" type="checkbox"/> Enabled | toby | | | | | ERS Admin |

Enable the External RESTful Services API (ERS) for the Administration Node:

1. Navigate to **Administration > System > Settings > ERS Settings** and select **Enable ERS for Read/Write**.
2. Click **Save**.

Figure 128: Cisco ISE: Enable ERS

The screenshot shows the Cisco ISE Administration interface with the 'Settings' menu item selected. The left sidebar shows a menu with 'Client Provisioning', 'FIPS Mode', 'Alarm Settings', 'Posture', 'Profiling', 'Protocols', 'Proxy', 'SMTP Server', 'SMS Gateway', 'System Time', 'Policy Sets', 'ERS Settings', 'Smart Call Home', and 'DHCP & DNS Services'. The 'ERS Settings' section is selected, displaying the 'ERS Settings' page.

ERS Settings

General

External RESTful Services (ERS) is a REST API based on HTTPS over port 9060. The ERS service is disabled by default. An ISE Administrator with the "ERS-Admin" or "ERS-Operator" group assignment is required to use the API. For more information, please visit the ERS SDK page at: <https://10.92.82.150:9060/ers/sdk>

ERS Setting for Administration Node

☒ Enable ERS for Read/Write

☐ Disable ERS

Save Reset

Configure network profiles:

Devices managed by ISE must support RADIUS CoA and have the proper network profiles assigned to handle the CoA commands sent by the ISE server:

1. Navigate to **Administration > Network Resources > Network Device Profiles** and verify the existing network device profile list.

If you are creating a new profile, proceed to the next step for information.

Figure 129: Cisco ISE: Network Device Profiles List

| Name | Description | Vendor | Source |
|------------------|--|----------|----------------|
| AlcatelWired | Profile for Alcatel switches | Alcatel | Cisco Provided |
| ArubaWireless | Profile for Aruba wireless network access devices | Aruba | Cisco Provided |
| BrocadeWired | Profile for Brocade switches | Brocade | Cisco Provided |
| Cisco | Generic profile for Cisco network access devices | Cisco | Cisco Provided |
| Prad | | Cisco | User Defined |
| HPWired | Profile for HP switches | HP | Cisco Provided |
| HPWired_SNMP_CoA | Profile for HP switches with no RADIUS CoA | HP | Cisco Provided |
| HPWireless | Profile for HP wireless network access devices | HP | Cisco Provided |
| Juniper | Profile for Juniper Switches - created by Binh. | Juniper | User Defined |
| MotorolaWireless | Profile for Motorola wireless network access devices | Motorola | Cisco Provided |
| RuckusWireless | Profile for Ruckus wireless network access devices | Ruckus | Cisco Provided |

2. If you are configuring a new profile, you must minimally set the following:
 - Enable RADIUS and add a corresponding dictionary in the supported protocol list.

Figure 130: Cisco ISE: Network Device Profile, Enable RADIUS

Network Device Profile List > [New Network Device Profile](#) Submit Cancel

Network Device Profile

* Name:

Description:

Icon:

Vendor:

Supported Protocols

RADIUS: ☒

TACACS+: ☐

TrustSec: ☐

RADIUS Dictionaries:

- Enable and configure the Change of Authorization (CoA) according to the figure below.

Figure 131: Cisco ISE: Configure Change of Authorization (CoA)

▼ **Change of Authorization (CoA)**

CoA by RADIUS

* Default CoA Port 3799 ⓘ

* Timeout Interval 5 seconds ⓘ

* Retry Count 2 ⓘ

Send Message-Authenticator ☐

- Configure the Disconnection and Re-authenticate operation with the proper RADIUS attributes and vendor specific VSA to handle the standard disconnect and reauthenticate operations. Below is the sample configuration for Juniper's EX devices.

Figure 132: Sample Configuration for Juniper EX

Disconnect

☒ RFC 5176

| | | | | |
|------------------------|---|---|---|---|
| Radius:Acct-Session-Id | = | 0 | - | + |
| Radius:Event-Timestamp | = | 0 | - | + |
| Radius:User-Name | = | 0 | - | + |

☐ Port Bounce

| | | | | |
|-----------------------|---|---------------|---|---|
| Radius:VendorSpecific | = | "Port-Bounce" | - | + |
|-----------------------|---|---------------|---|---|

☐ Port Shutdown

| | | | | |
|------------------------|---|------------------------|---|---|
| Radius:Acct-Session-Id | = | Radius:Acct-Session-Id | - | + |
|------------------------|---|------------------------|---|---|

Re-authenticate

☒ Basic

| | | | | |
|---------------------------|---|---|---|---|
| Radius:Calling-Station-ID | = | 0 | - | + |
| Radius:User-Name | = | 0 | - | + |

☐ Rerun

| | | | | |
|----------------|---|--|---|---|
| Select an item | = | | - | + |
|----------------|---|--|---|---|

☐ Last

| | | | | |
|----------------|---|--|---|---|
| Select an item | = | | - | + |
|----------------|---|--|---|---|


CoA Push

☐ RFC 5176

Configure a custom attribute.


1. Navigate to **Administration > Identity Management > Settings > Endpoint Custom Attribute** and add attribute **sdsnEpStatus** with type string.

Figure 133: Cisco ISE: Add Attribute sdsnEpStatus

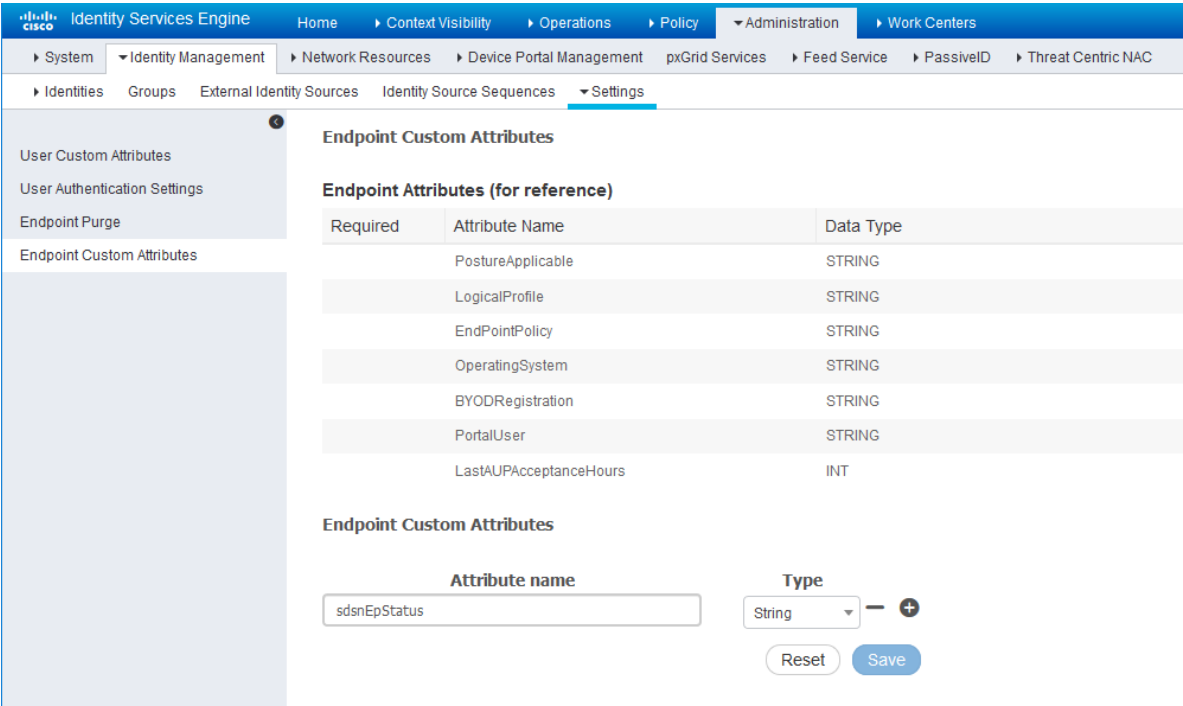

2. Verify the attribute under **Policy > Policy Elements > Dictionaries > System > Endpoints**.

Figure 134: Cisco ISE: Verify Attribute

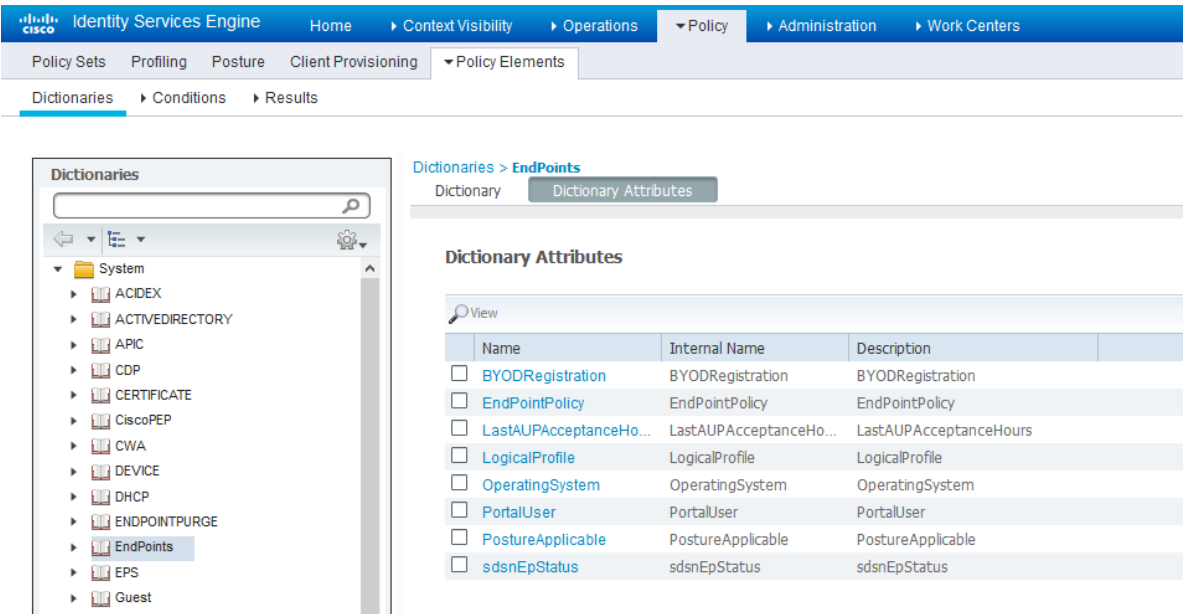

3. Navigate to **Policy > Policy Elements > Conditions > Authorization > Simple Conditions**. Add there authorization simple conditions using the **sdsnEpStatus** attribute you created.

In the screen below, there are three conditions created using sdsnEpStatus attribute. The condition names do not need to be the same as in the screen here, but the expressions must be matched. These conditions will be used in Policy Sets to handle the threat remediation for managed endpoints as described later in the Policy Sets setting section. Only the sdsnEpStatus-blocked and sdsnEpStatus-quarantine conditions will be used there. sdsnEpStatus-healthy is created for fulfillment purpose and can be ignored for now.


Figure 135: Cisco ISE: Configure Simple Conditions, Match Expression

The screenshot shows the Cisco Identity Services Engine (ISE) web interface. The top navigation bar includes 'Home', 'Context Visibility', 'Operations', 'Policy', 'Administration', and 'Work Centers'. The 'Policy' tab is selected, and the breadcrumb trail is 'Policy > Policy Elements > Conditions > Authorization > Simple Conditions'. The left sidebar shows a tree view with 'Authentication' and 'Authorization' expanded, with 'Simple Conditions' selected. The main content area is titled 'Authorization Simple Condition List > sdsnEpStatus-blocked' and 'Authorization Simple Conditions'. It contains a form with the following fields:

- * Name:** sdsnEpStatus-blocked
- Description:** sdsnEpStatus is blocked
- * Attribute:** EndPoints:sdsnEpStatus
- * Operator:** Equals
- * Value:** blocked

At the bottom of the form are 'Save' and 'Reset' buttons.

Figure 136: Cisco ISE: Configure Simple Conditions, Match Expression

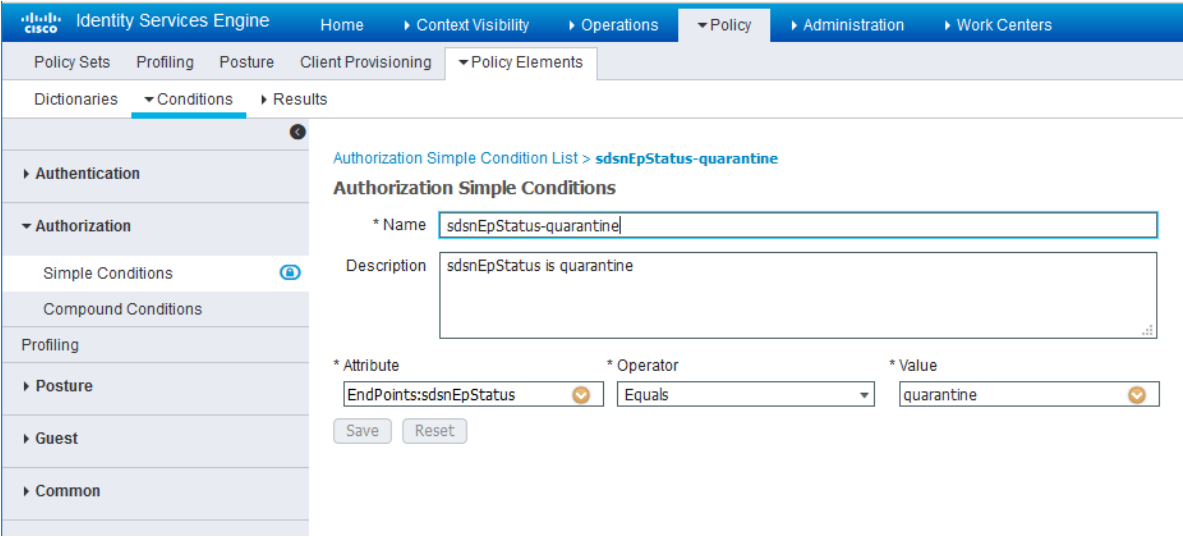

Configure permission/authorization profiles.

You can create the authorization profiles corresponding to “block” and “quarantine” actions as fits your needs. In the sample configuration provided here, the block action will result as total denial access to the network, and the quarantine profile will move the endpoint to another designated VLAN.

1. Navigate to From **Policy > Policy Elements > Results > Authorization > Authorization Profiles**.

Refer to the figures below for sample configurations.

Figure 137: Cisco ISE: Configure Authorization Profiles

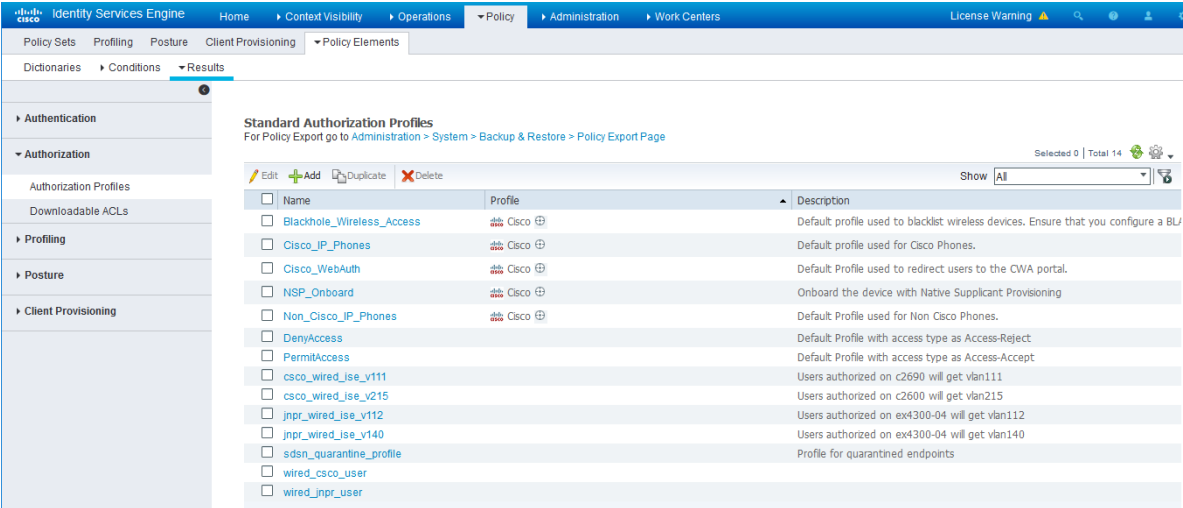


Figure 138: Cisco ISE: Configure Authorization Profiles

The screenshot displays the Cisco Identity Services Engine (ISE) Administration interface. The top navigation bar includes tabs for Home, Context Visibility, Operations, Policy, Administration, and Work Centers. The left sidebar shows a tree view with categories like Authentication, Authorization, Profiling, Posture, and Client Provisioning. The main content area is titled 'Authorization Profiles > sdsn_quarantine_profile' and shows the configuration for an 'Authorization Profile'.

Authorization Profile Configuration:

- Name:** sdsn_quarantine_profile
- Description:** Profile for quarantined endpoints
- Access Type:** ACCESS_ACCEPT
- Network Device Profile:** Any
- Service Template:** ☐
- Track Movement:** ☐ (i)
- Passive Identity Tracking:** ☐ (i)

Common Tasks:

- ☐ ACL
- ☐ VLAN

Advanced Attributes Settings:

| Attribute | Value | Tag ID | Action |
|--------------------------------|-------|--------|----------|
| Radius:Acct-Interim-Interval | 60 | | |
| Radius:Tunnel-Medium-Type | 802 | 1 | Edit Tag |
| Radius:Tunnel-Private-Group-ID | 200 | 1 | Edit Tag |
| Radius:Tunnel-Type | VLAN | 1 | Edit Tag |




NOTE: For blocking a host, the default 'DenyAccess' profile is used.

Set the authorization policy:

1. Create two rules as Local Exceptions, applying the conditions and authorization/permission profiles we created in the previous step. Names may be different, but these two rules must be at the top of the Exception list.

Refer to the figure below for a sample configuration.

Figure 139: Cisco ISE: Local Exception Rules, Example

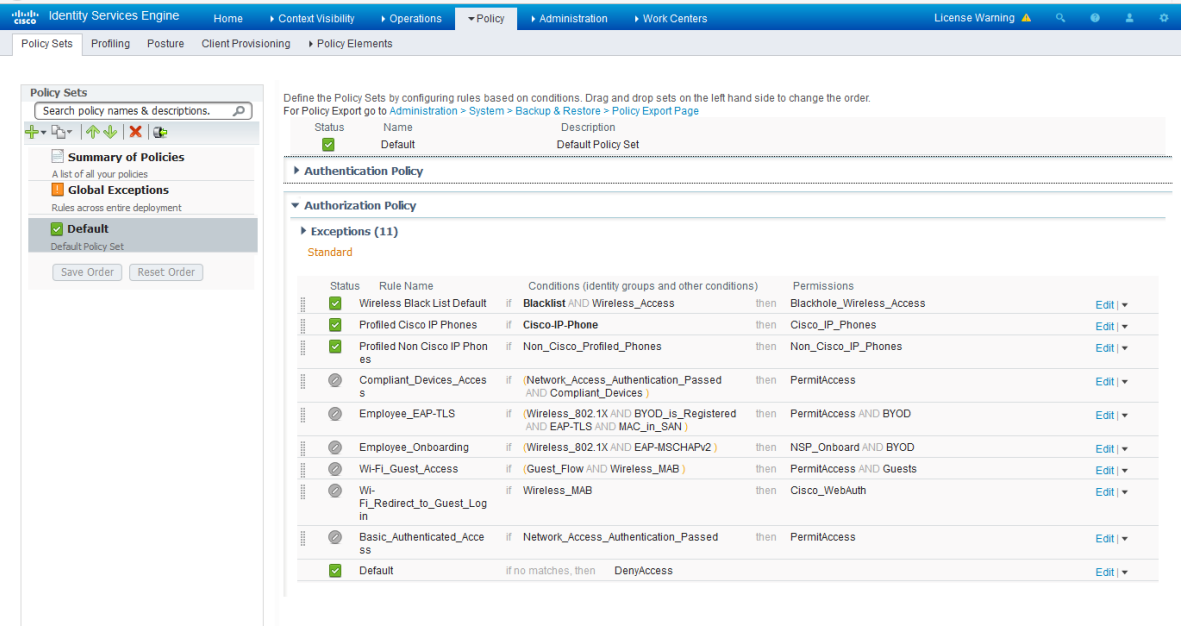

NOTE: Find this under **Policy > Policy Sets > Authorization Policy**.

2. Proceed to *Creating a Policy Enforcer Connector for Third-Party Switches* to finish the configuration with Policy Enforcer.

RELATED DOCUMENTATION

Creating a Policy Enforcer Connector for Third-Party Switches
Policy Enforcer Connector Overview

Integrating Pulse Policy Secure with Juniper Networks Connected Security

IN THIS SECTION

Overview | 1307

- [Deployment of Pulse Policy Secure with Juniper Connected Security | 1307](#)
- [Configuring Pulse Policy Secure with Juniper Connected Security | 1308](#)
- [Creating Pulse Policy Secure Connector in Security Director | 1316](#)
- [Troubleshooting | 1318](#)

Overview

IN THIS SECTION

- [Benefits of the Pulse Policy Secure Integration with Juniper Connected Security | 1307](#)

This topic provides instructions on how to integrate the third-party device Pulse Policy Secure (PPS) with Juniper Networks Connected Security solution to remediate threats from infected hosts for enterprises. The Juniper Connected Security solution provides end-to-end network visibility that enables enterprises to secure their entire physical and virtual networks. PPS provides visibility into the network by detecting and continuously monitoring the network. Using the threat detection and policy enforcement, the PPS and Juniper Connected Security solution automates the network security and supports centralised management, in a multi-vendor environment.

PPS integrates with Juniper Networks Connected Security solution through RESTful APIs and takes appropriate action based on the admission control policies. The PPS integration with Juniper Connected Security solution detects and enforces threat prevention policies and provides a collaborative and comprehensive approach towards complete network security. It enables users to leverage the existing trusted threat feed sources to provide a consistent and automated defense across diverse environments.

Benefits of the Pulse Policy Secure Integration with Juniper Connected Security

- PPS has more visibility of endpoints connected to the network.
- Based on the threat alerts received from Juniper Connected Security, PPS enhances the security by isolating or acting at the endpoint level.

Deployment of Pulse Policy Secure with Juniper Connected Security

The following high level workflow describes the deployment of PPS with Juniper Connected Security. PPS receives the threat alert information from Juniper Connected Security solution and takes an action on the endpoint based on the admission control policies.

1. User successfully authenticates with the PPS server.
2. User downloads a file from the Internet. The perimeter firewall (SRX Series device) scans the file and based on the user-defined policies, sends the scanned file to Juniper ATP Cloud for analysis.
3. Juniper ATP Cloud detects that the file contains malware, identifies the endpoint as an infected host, and notifies the SRX Series device and Policy Enforcer.
4. Policy Enforcer downloads the infected host feed and sends a threat action to PPS.
5. The PPS server quarantines or blocks the endpoint.

PPS tracks the infected host and does not allow the infected host to acquire full access until the endpoint is disinfected. When the host is disinfected and cleared from Juniper ATP Cloud or Policy Enforcer, PPS receives a *clear* event from the Policy Enforcer connector. After receiving the *clear* event, PPS removes the infected host. The host is now authenticated and an appropriate role is assigned to it.

Configuring Pulse Policy Secure with Juniper Connected Security

IN THIS SECTION

- [Admission Control Template | 1313](#)
- [Admission Control Policies | 1313](#)
- [Admission Control Client | 1316](#)

The network security devices are configured with PPS for admission access control.

A high-level overview of the configuration steps required to set up and run the integration is described below:

1. The administrator configures the basic PPS configurations such as creating an authentication server, authenticating realm, user roles, and role mapping rules. To know more about configuring your PPS, see [Pulse Policy Secure Administration Guide](#).
2. Configure Policy Enforcer as a client in PPS. PPS acts as a RESTful API server for Policy Enforcer.

The RESTful API access for the admin user must be enabled by accessing the serial console or alternatively from the PPS admin user interface (UI). Select **Authentication>Auth Server>Administrators>Users**. Click **Admin** and enable the **Allow access to REST APIs** option.

3. Configure PPS to block or quarantine the endpoint based on the threat prevention policy.

You must configure the admission control client to obtain the Policy Enforcer IP address that sends events to PPS and admission control policy to understand the PPS event types such as, events-block-endpoint, quarantine-endpoint, clear-blocked-endpoint, and clear-quarantine-endpoint.

4. Configure the Switches or WLC as RADIUS Client in PPS by selecting **Endpoint Policy>Network Access>Radius Clients>New Radius Client**. The switch is configured with PPS as a RADIUS server.
5. Configure RADIUS return attribute policies, to define the action upon receiving the quarantine event.
 - Quarantine using VLANs:

The PPS determines which quarantine VLAN to send to RADIUS Client when a quarantine-endpoint event is received, as shown in [Figure 140 on page 1310](#).

Figure 140: RADIUS Return Attributes for Quarantine-Host

Pulse Secure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

General

* Name: Quarantine_Host Required: Label to reference 1
 Description:

Location Group

Location Groups
Specify the Location Group for which this policy applies.

Available Location Groups: Guest, Guest Wired, Cert Auth
 Selected Location Groups: Default

Selected Radius Clients
 Below list is populated dynamically based on the selected Location Groups

| Vendor (Manufacturer) | Client Details |
|------------------------------|--------------------------------------|
| Juniper Networks Inc (JUNOS) | un-ex4300-08 , js-ex33k-01 , un-ex4: |

Access Control Policy Settings

Select below option to control the access level for the device/user connecting to the network:

☐ Provide full Access (Open Port)
☒ Control the Access

Note: Selecting this option will result in opening the port without any restrictions
 Note: Selecting this option enables control of the device or user access

Access can be controlled using the VLAN Id, ACLs and Radius Return Attribute settings below

☒ Control using VLAN Id: 999 (1 - 4094)
 Note: This option is used for assigning devices to corresponding VLAN on the switch

Specify the PPS interface to which end points will connect while they are assigned to above VLAN

☒ Automatic ☐ Internal ☐ External

☐ Control access using Access Control List (ACL) settings (Supported only for Cisco, Juniper, HP)
☒ Control access using Radius Return Attributes

Note: These attributes are sent to switch for controlling the access

| Return Attribute | Radius Auth Server Attribute Value | Auth Server Catalog Attribute Value | Value |
|------------------------------|------------------------------------|-------------------------------------|-------------------|
| Filter-Id | -none- | -none- | |
| Juniper-Firewall-filter-name | -none- | -none- | PERMIT-PULSE-ONLY |

☐ Add Session-Timeout attribute
 Specify the action that needs to be taken for the device upon expiration of session timeout on the switch

☐ Terminate the session ☒ Re-authenticate the session

Note: This will send session timeout attribute equal to session lifetime

Roles

Select the roles to which this policy is applicable

☐ Any Role ☒ Selected below ☐ Other than selected below

- Quarantine using ACLs:

For environments that has flat VLAN, the PPS provides the ability to quarantine users by applying a preconfigured firewall filter. Also, this is a preferred method in environments that use static IP address assignment for end devices.

The following example shows the firewall filter configuration on the switch. The firewall filter name is then passed on as RADIUS return attribute, as shown in [Figure 141 on page 1312](#).

Configure the PERMIT-PULSE-ONLY and PERMIT-ALL firewall filters on the switch using the following commands:

```
set firewall family ethernet-switching filter PERMIT-PULSE-ONLY term pps from destination-address  
10.92.81.113/32  
  
set firewall family ethernet-switching filter PERMIT-PULSE-ONLY term pps then accept  
  
set firewall family ethernet-switching filter PERMIT-PULSE-ONLY term dhcp_allow from destination-port 67  
  
set firewall family ethernet-switching filter PERMIT-PULSE-ONLY term dhcp_allow then accept  
  
set firewall family ethernet-switching filter PERMIT-PULSE-ONLY term pps-discard then discard  
  
deactivate firewall family ethernet-switching filter PERMIT-PULSE-ONLY  
  
set firewall family ethernet-switching filter PERMIT-ALL term ALLOW-ALL from destination-address 0.0.0.0/0  
  
set firewall family ethernet-switching filter PERMIT-ALL term ALLOW-ALL then accept  
  
deactivate firewall family ethernet-switching filter PERMIT-ALL
```

To assign these filters in PPS, select **Endpoint Policy>Network Access>Radius Attributes>Return Attributes**.

Figure 141: RADIUS Return Attributes for Clear-Quarantine

PulseSecure System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Network Access > Radius Attributes > RADIUS Return Attributes > Clear_Quarantine

Clear_Quarantine

General

* Name: Required: Label to reference !

Description:

Location Group

Location Groups
Specify the Location Group for which this policy applies.

Available Location Groups:

Selected Location Groups:

Selected Radius Clients
Below list is populated dynamically based on the selected Location Groups

| Vendor (Manufacturer) | Client Details |
|------------------------------|--------------------------------------|
| Juniper Networks Inc (JUNOS) | un-ex4300-08 , js-ex33k-01 , un-ex4: |

Access Control Policy Settings

Select below option to control the access level for the device/user connecting to the network:

☐ Provide full Access (Open Port)

☒ Control the Access

Access can be controlled using the VLAN Id, ACLs and Radius Return Attribute settings below

☐ Control using VLAN Id: (1 - 4094)

☐ Control access using Access Control List (ACL) settings (Supported only for Cisco, Juniper, HP)

☒ Control access using Radius Return Attributes

| Return Attribute | Radius Auth Server Attribute Value | Auth Server Catalog Attribute Value | Value |
|---|-------------------------------------|-------------------------------------|----------------------|
| <input type="text" value="Filter-Id"/> | <input type="text" value="-none-"/> | <input type="text" value="-none-"/> | <input type="text"/> |
| <input type="checkbox"/> Juniper-Firewall-filter-name | <input type="text" value="-none-"/> | <input type="text" value="-none-"/> | PERMIT-ALL |

☐ Add Session-Timeout attribute

Specify the action that needs to be taken for the device upon expiration of session timeout on the switch

☐ Terminate the session ☒ Re-authenticate the session

Roles

Select the roles to which this policy is applicable

☐ Any Role ☒ Selected below ☐ Other than selected below

**NOTE:**

- Ensure that PPS has the endpoint IP address for the enforcement to work correctly.
- Since the endpoint IP address is mandatory, deployments where the user is behind a NAT might not work as expected. This is because PPS might have the actual IP address, and Juniper Connected Security might send the NATed IP address.

- To receive the endpoint IP address (accounting information) by PPS, you must use the Pulse Secure client on endpoints when they are connected to EX4300 Series switches.

Admission Control Template

The admission control template provides a list of possible events that can be received from the network security device along with the regular expression to parse the message. The template also provides possible actions that can be taken for an event.

PPS is loaded with default templates for Policy Enforcer. The administrators can create templates for other security devices and upload those templates.

To view the admission control templates, select **Endpoint Policy>Admission Control>Templates**, as shown in [Figure 142 on page 1313](#). You can view the list of configured integration templates with the list of network security devices and the supported protocol types.

Figure 142: Pulse Secure Templates Page

| | Name | File Name | Protocol Type | Vendor | Device Type |
|---|--|--------------------------------|---------------|--------------------|---------------|
| 1 | paloaltonetworksw-ietf-bad.tpl Syslog integration with Palo Alto Networks Firewall using IETF/BSD format messages. | paloaltonetworksw-ietf-bad.tpl | Syslog | Palo Alto Networks | Firewall |
| 2 | fortigate-text.tpl Syslog integration with Fortinet Fortigate Firewall using text format messages. | fortigate-text.tpl | Syslog | Fortinet | Firewall |
| 3 | fortianalyzer-text.tpl Syslog integration with FortiAnalyzer using text format messages. | fortianalyzer-text.tpl | Syslog | Fortinet | Analyzer |
| 4 | fortianalyzer-cef.tpl Syslog integration with FortiAnalyzer using CEF format messages. | fortianalyzer-cef.tpl | Syslog | Fortinet | Analyzer |
| 5 | juniper-policy-engine-http.tpl Integration with Juniper's Policy Engine which sends endpoint control commands to PPS. | juniper-policy-engine-http.tpl | HTTP | Juniper | Policy Engine |

Admission Control Policies

The admission control policies define the list of actions to be performed on PPS for the user sessions. The actions are based on the event and the severity of the information received from the network security device.

To view and add the new integration policy:

1. Select **Endpoint Policy>Admission Control>Policies**.
2. Click **New Policy**.

The New Policy page appears, as shown in [Figure 143 on page 1314](#).

Figure 143: Pulse Secure - New Policy Page

New Policy

* Name: Label to reference this policy.

* Template: Template used by the client

| Template name | Vendor | Device | Protocol | Format | Description |
|------------------------------------|------------------|-----------------|----------|--------|---|
| juniper-policy-enforcer-http.itmpl | Juniper Networks | Policy Enforcer | HTTP | JSON | Integration with Juniper's Policy Enforcer which sends endpoint control commands to PPS |

▼ Rule on receiving ▼

- Select -
- block-endpoint
- quarantine-endpoint
- clear-blocked-endpoint
- clear-quarantined-endpoint
- Any

*Events: - Select - ☐ Events supported

3. Enter the policy name.
4. Select **Juniper Networks Policy Enforcer** as a template.
5. In the Rule on receiving section, select one of the following event types and the severity level. The event types and the severity level are based on the selected template.

The following event types are supported on sessions:

- **Block-endpoint**—Blocks the host MAC Address on the PPS permanently. If the administrator chooses to clear the blocked endpoint, it can be cleared either by using the Junos Space Security Director application or by using the PPS Administration UI.
- **Quarantine-endpoint (Change user roles)**—Changes the roles assigned to the user on PPS so that restrictions or privileges for the user can be changed. The administrator can choose to apply these roles permanently or temporarily. If it is permanent, system is directly quarantined regardless of which network it connects to.
- **Clear Blocked Endpoint**—Clears a previously blocked MAC Address.
- **Clear Quarantined Endpoint**—Clears a previously quarantined MAC Address.

6. In the then perform this action section, select the following desired action:

- Select a role and assign it to the endpoint to put that endpoint into a quarantine network.
- In the Make this role assignment option, specify the following actions:
 - Permanent—To apply the role assignment permanently. This is the recommended option. Choose this option for the action to persist.
 - For this session only—To apply the role assignment only for the current session.

7. In the Roles section, specify the following options:

- Policy applies to ALL roles—To apply the policy to all users.
- Policy applies to SELECTED roles—To apply this policy only to users who are mapped to roles in the Selected roles list. You must add roles to this list from the Available roles list.
- Policy applies to all roles OTHER THAN those selected below—To apply this policy to all users except for those who are mapped to the roles in the Selected roles list. You must add roles to this list from the Available roles list.



NOTE: These options are applicable to both quarantine and block actions.

8. Click **Save changes**.

Once the policy is created, you can see the summary page. [Figure 144 on page 1315](#) shows the different policies created for different events with different user roles.

Figure 144: Pulse Secure - Policies Configure Page

POLICIES

Configure

Templates

Clients

Policies

New Policy

Duplicate

Delete

Save Changes

10 records per page

Search:

| <input type="checkbox"/> | Name | Protocol Type | Vendor | Device Type | Event | Severity | Action | Applies to |
|--------------------------|---------------------------------------|---------------|------------------|-----------------|----------------------------|----------|--------------------------|---|
| <input type="checkbox"/> | 1 Quarantine_Hosts | HTTP | Juniper Networks | Policy Enforcer | quarantine-endpoint | | quarantineEndpoint | Contractor_FullAccess_Role Engineering Sales Users |
| <input type="checkbox"/> | 2 Clear_Quarantine | HTTP | Juniper Networks | Policy Enforcer | clear-quarantined-endpoint | | clearQuarantinedEndpoint | All |
| <input type="checkbox"/> | 3 Block_Hosts | HTTP | Juniper Networks | Policy Enforcer | block-endpoint | | blockEndpoint | Contractor_FullAccess_Role Engineering Sales Users |
| <input type="checkbox"/> | 4 Clear_Blocked_Hosts | HTTP | Juniper Networks | Policy Enforcer | clear-blocked-endpoint | | clearBlockedEndpoint | All |

Admission Control Client

The admission control clients are the network security devices on which the syslog forwarding is enabled. The messages are received by the syslog server module running on PPS.

To add a client:

1. Select **Endpoint Policy>Admission Control>Clients**.
2. Click **New Client**.

The New Client page appears, as shown in [Figure 145 on page 1316](#).

Figure 145: Pulse Secure - New Client Page

System Authentication Administrators Users **Endpoint Policy** Maintenance Wizards

Admission Control > Configure > Clients > New Client

New Client

* Name: Label to reference this client.

Description:

* IP Address: IP Address of this client.

* Template: Template used by the client.

Selected Template Details

| Template name | Vendor | Device | Protocol | Format | Description |
|------------------------------------|------------------|-----------------|----------|--------|---|
| juniper-policy-enforcer-http.itmpl | Juniper Networks | Policy Enforcer | HTTP | JSON | Integration with Juniper's Policy Enforcer which sends endpoint control |

3. Enter the name of the Juniper Networks Policy Enforcer. This is added as a client in the PPS.
4. Enter the description.
5. Enter the IP address of the client.
6. Select the template used by the client: JuniperNetworks-Policy Enforcer-HTTP-JSON.
7. Click **Save Changes**.

Policy Enforcer is added a new client in the PPS.

Creating Pulse Policy Secure Connector in Security Director

Once you add Policy Enforcer as a client in PPS, create a connector for PPS to configure the Juniper Connected Security to send the event information.

To create a connector for PPS and configure Juniper Connected Security using Security Director:

1. Select **Security Director>Administration>Policy Enforcer>Connectors**.
The Connectors page appears.
2. Click the create icon (+).
The Create Connector page appears, as shown in [Figure 146 on page 1317](#).

Figure 146: Create Connector Page

3. In the General tab, select **Pulse Policy Secure** in the ConnectorType list.
4. In the IP Address/URL field, enter the IP address of PPS.
5. Retain the default port number as 443.
6. Enter the username and password of PPS.
Note that you must have enabled the REST API access on PPS (Authentication > Auth Server > Administrators > Users > click “admin”, enable Allow access to REST APIs).
7. Click **Next**.
8. In the Network Details section, configure the IP subnets, as shown in [Figure 147 on page 1318](#).

Figure 147: Create Connector Network Details Page

Create Connector ?

1 General 2 **Network Details** 3 Configuration

Network Details

SUBNETS

Click on the field to create subnets or click Upload file to import subnets from a file stored in your local system.

1 selected Upload file + ✕

| Subnet | Description |
|--|----------------------|
| 10.204.88.0/22 | Engineering Subnet |
| 10.96.64.0/19 | |
| <input checked="" type="checkbox"/> <input type="text"/> | <input type="text"/> |

Cancel Back Next

9. In the Configuration tab, provide any additional information required for this specific connector connection.
10. Click **Finish**.

Once the configuration is successful the following page is displayed, as shown in [Figure 148 on page 1318](#).

Figure 148: Connectors Page

The connector instance for PPS has been successfully updated

Connectors ?

1 selected + - ✕

| Name | Type | Status | Description | Identity Server IP | Port |
|------------|---------------------|--------|-------------|--------------------|------|
| pps_8880 | Pulse Policy Secure | Active | | 10.204.88.80 | 443 |
| PPS-AP-245 | Pulse Policy Secure | Active | | 10.204.89.245 | 443 |
| PPS | Pulse Policy Secure | Active | | 10.204.88.100 | 443 |

3 items

11. Verify that the communication between Policy Enforcer and PPS is working.
- After installing PPS and configuring a connector, in the PPS UI, create policies for PPS to take the necessary action on the infected hosts.


Troubleshooting

The following troubleshooting logs are available:

- To verify the event logs on PPS, select **System>Log/Monitoring>Events**.

You can verify that the event logs are generated every time when an event is received from Policy Enforcer, as shown in [Figure 149 on page 1319](#).


Figure 149: Pulse Secure Events Page

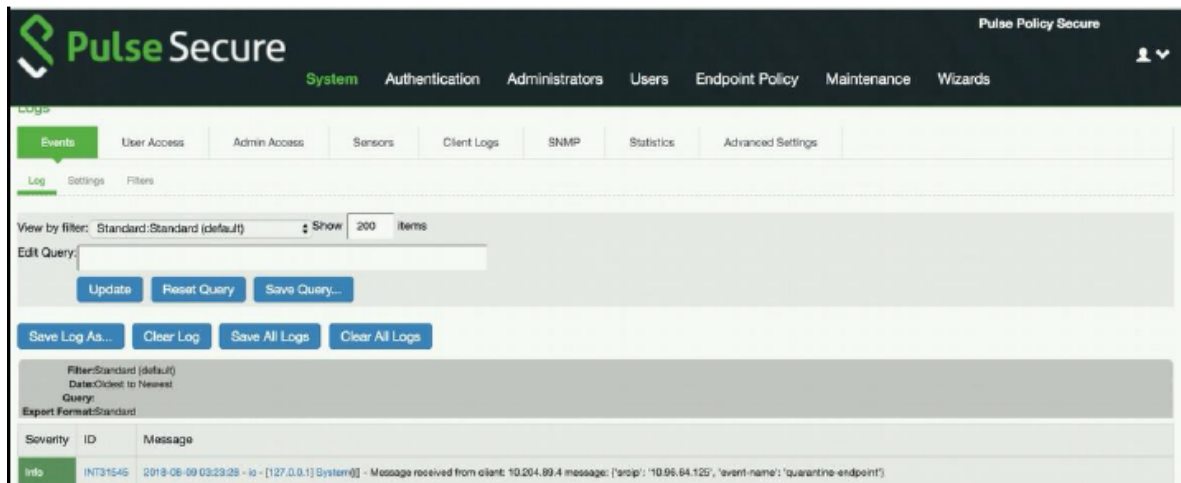

- To verify the user login related logs such as realm, roles, username, and IP address, select **System>Logs & Monitoring>User Access**.
- To verify the reports, select **System>Reports>Infected Hosts**.


You can verify whether the quarantined or blocked host is listed in the Infected Devices report. This report lists the MAC address, IP address, and the device status, as shown in [Figure 150 on page 1320](#).

Figure 150: Infected Hosts Reports Page

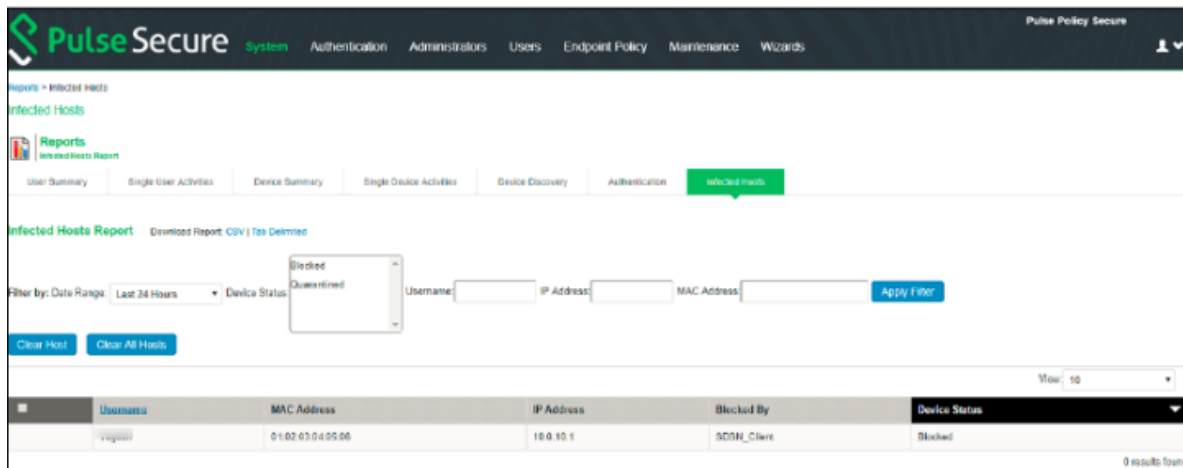

- To enable the debug logs for troubleshooting, select **Maintenance>Troubleshooting>Monitoring>Debug Log**, as shown in [Figure 151 on page 1320](#).

Figure 151: Debug Log Monitoring Page

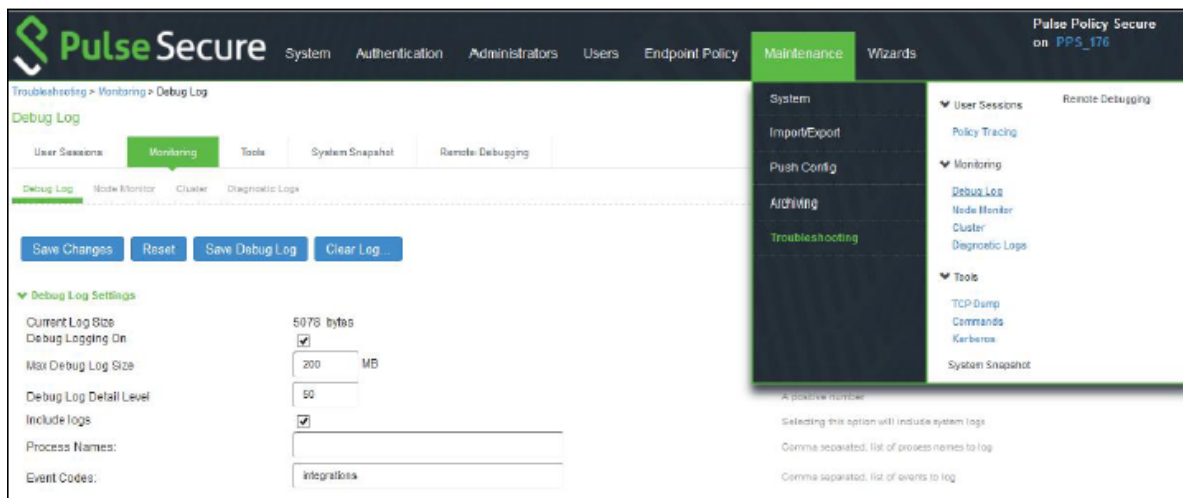

- To troubleshoot any issues on the Policy Enforcer, download and verify the Policy Enforcer logs from **Security Director>Administration>Policy Enforcer>Settings** page, as shown in [Figure 152 on page 1321](#).

Figure 152: Policy Enforcer Settings Page

Settings ⓘ

① Specify the Policy Enforcer virtual machine and login credentials to use for threat prevention.

IP Address*

Username*

Password*

If you are planning to use certificate based authentication later, enable the following toggle button to upload certificate and key for Policy Enforcer.

Certificate Based Authen... ⓘ ☐

The System is not configured with ATP Cloud. The threat prevention support is through Infected Hosts Custom Feeds

ATP Cloud Configuration ... ⓘ

Configure polling timers to discover hosts in your network

Poll Network wide endpo... ⓘ hours

Poll Site wide endpoints* ⓘ mins

Enable purge to delete old feeds data. You can set the purge History to determine how many days of feeds history to be stored in Policy Enforcer.

Enable Feeds Purge ⓘ ☒

Purge History* ⓘ days

Purge Days Per Run* ⓘ days

Policy Enforcer Logs

- The administrators can also verify the Hosts table from Juniper ATP Cloud to check the status of the host, as shown in [Figure 153 on page 1321](#).

You can clear the host entry if the State Of Investigation field value is Resolved-Fixed.

Figure 153: Juniper ATP Cloud Hosts Page

Hosts ⓘ

Threat level: ● High ● Medium ● Low ● None; clean

| <input type="checkbox"/> | Host ID#... | Host IP | Threat Level | Infected Host Fe... | First Host Activity | Last Host Activity | C&C Hits | Malwar... | Policy | State of investigation |
|--------------------------|----------------|--------------|--------------|---------------------|----------------------|----------------------|----------|-----------|-----------------------|------------------------|
| <input type="checkbox"/> | 10.96.64.125 | 10.96.64.125 | ✓ 0 | Excluded | Jul 30, 2018 4:32... | Sep 12, 2018 12:... | 0 | 76 | Use configured policy | Resolved-Fixed |
| <input type="checkbox"/> | 10.96.74.82 | 10.96.74.82 | ✓ 0 | Excluded | Aug 16, 2018 4:2... | Aug 17, 2018 19:... | 0 | 2 | Use configured policy | Resolved-Fixed |
| <input type="checkbox"/> | 10.204.90... | 10.204.90... | ✓ 0 | Excluded | Aug 3, 2018 12:2... | Aug 3, 2018 10:3... | 0 | 6 | Use configured policy | Resolved-Fixed |
| <input type="checkbox"/> | 10.204.90... | N/A | ✓ 0 | Excluded | Jul 26, 2018 11:4... | Aug 3, 2018 12:0... | 0 | 4 | Use configured policy | Resolved-Fixed |
| <input type="checkbox"/> | 00:50:56:0f... | N/A | ✓ 0 | Excluded | Jul 7, 2018 12:44... | Jul 26, 2018 11:3... | 0 | 14 | Use configured policy | Resolved-Fixed |

Policy Enforcer Backup and Restore


IN THIS SECTION

- [Backing-Up Policy Enforcer | 1323](#)
- [Restoring Policy Enforcer from a Backup File | 1326](#)

Policy Enforcer provides the option of backing-up all Policy Enforcer configuration and storing it as a .tar file. In the event of any unforeseen circumstances such as a malicious attack or system failure you can use the backup file to restore Policy Enforcer to a previously saved configuration. You can also take a backup before you change some configuration in Policy Enforcer, and revert to the backed up configuration, if needed. You can take multiple backups and choose to restore the Policy Enforcer configuration from any of these backup files.

Policy Enforcer backup includes Policy Enforcer configurations such as .yaml files, databases or sequences, and device configurations. Policy Enforcer also communicates with multiple components to obtain information, as shown in [Figure 154 on page 1323](#).

Figure 154: Policy Enforcer Communication with Multiple Components

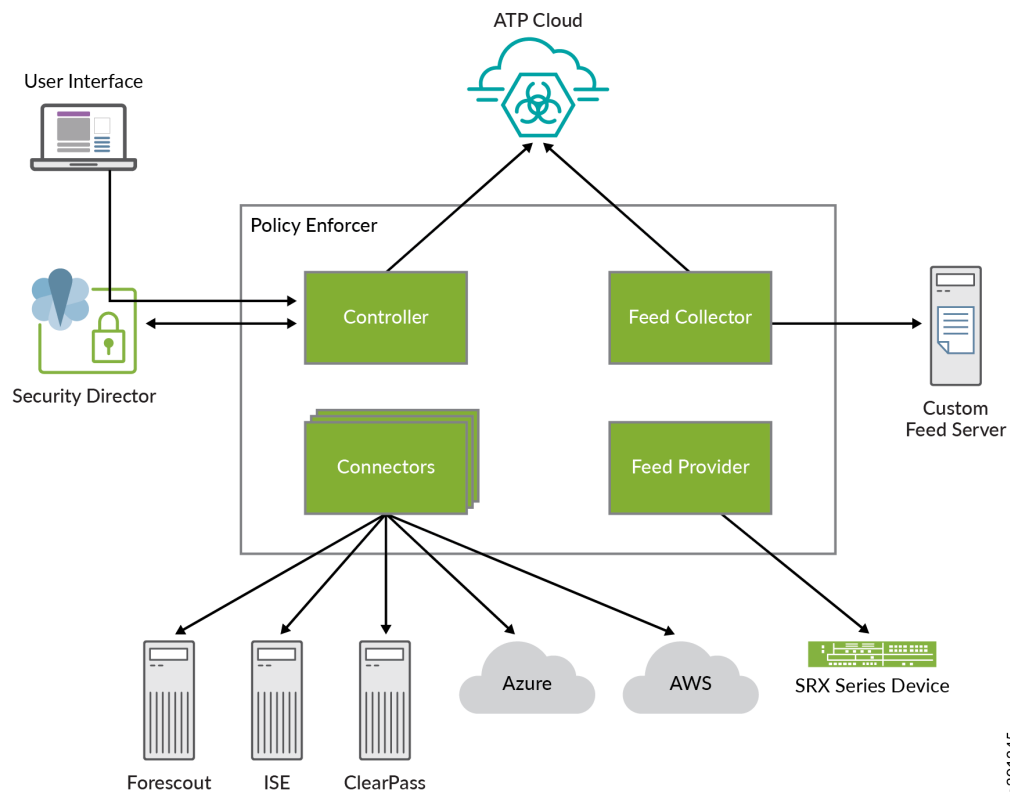

Policy Enforcer communicates with:

- Juniper ATP Cloud/ ATP Appliance for feeds
- Security Director for profiles and configurations
- Junos Space Network Management Platform and Security Director to discover network connectivity like endpoints
- Connectors to connect to AWS, Azure, ClearPass, Contrail, PulseSecure, and ForeScout

Policy Enforcer backup includes the backup of all these configurations and dependencies. When you backup Policy Enforcer, both Policy Enforcer and Security Director configurations are backed up.



NOTE: Policy Enforcer backup does not include feed data.

Backing-Up Policy Enforcer

Before You Begin

You must be aware of the following before you initiate a Policy Enforcer backup:

- When you initiate a backup/restore, Policy Enforcer goes into maintenance mode and will be unresponsive until the backup/restore process is complete. Ensure that you complete all the tasks with Policy Enforcer before you start the backup/restore process.
- If you are saving the backup .tar file on a remote server, ensure that there is enough space for the file on that server.
- Ensure that Policy Enforcer and Security Director backups are taken and restored at the same time to prevent unexpected application behavior.
- Ensure Policy Enforcer and connected Junos Space Security Director database backups are taken at the same time and no changes are made when backups are happening.

To take a backup of Policy Enforcer:

1. Select **Administration > Policy Enforcer > Backup and Restore**.

The Backup and Restore page appears.

2. Click **Backup** on the top-right corner of the page.

The Backup page appears.

3. Complete the configuration using the information in [Table 373 on page 1325](#).

4. Click **OK**.

A job is created to execute the backup process. To see the progress of the backup, go to the Job Management page.



NOTE: Policy Enforcer will be in maintenance mode and will be unavailable till the backup process is complete.

After the backup process is complete, the backup .tar file is listed on the Backup and Restore page.

Table 373: Fields on the Backup Page

| Field | Description |
|-------------|--|
| Server Type | <p>Select whether you want to save the backup .tar file to a local server or to a remote server.</p> <ul style="list-style-type: none"> • Local—Saves the backup .tar file locally in the <code>/opt/policyEnforcer/feeder/backup</code> folder. • Remote—Saves the backup .tar file in the device that you specify in the IP Address field. |
| Description | Enter a description; maximum length is 1024 characters. Make this description as useful as possible for everyone. |
| Username | Enter the username of the remote server where you want to save the backup .tar file. |
| Password | Enter the password for the selected remote server. |
| IP Address | Enter the IPv4 or IPv6 address of the remote server where you want to save the backup .tar file. |
| Directory | Enter the filepath and folder name on the remote server where you want to save the backup .tar file. |

Table 373: Fields on the Backup Page *(Continued)*

| Field | Description |
|-----------------|--|
| Schedule Backup | <p>To select a schedule for the backup:</p> <ol style="list-style-type: none"> 1. Click Add Schedule. The Backup Schedule page opens. In the Type field: <ul style="list-style-type: none"> • Select Run now to start the backup immediately. • Select Schedule at a later time and select the date and time of the backup. 2. Click OK. The Backup page appears with the schedule details. <p>You can also edit or delete the backup schedule by clicking Edit or Delete, respectively.</p> |

Restoring Policy Enforcer from a Backup File

Before You Begin

You must be aware of the following before you restore Policy Enforcer from a backup file:

- When you initiate a backup/restore, Policy Enforcer goes into maintenance mode and will be unresponsive until the backup/restore process is complete. Ensure that you complete all the tasks with Policy Enforcer before you start the backup/restore process.
- Ensure that Policy Enforcer and Security Director backups are taken and restored at the same time to prevent unexpected application behavior.
- When you restore Policy Enforcer from a backup file, ensure the matching Security Director backup is also restored at the same time. Do not make any changes to managed devices in Security Director or devices connected to Policy Enforcer as the system does not check for this.

To restore Policy Enforcer from a backup file:

1. Select **Administration > Policy Enforcer > Backup and Restore**.
The Backup and Restore page appears.
2. Select the backup file from which you want to restore Policy Enforcer configurations and click **Restore** on the top-right corner of the page.

A pop-up page appears asking for confirmation to restore Policy Enforcer from the backup file.

3. Click **Restore** to start the restore process.

RELATED DOCUMENTATION

Policy Enforcer Settings

Policy Enforcer Connector Overview

Guided Setup-ATP Cloud with SDSN

IN THIS CHAPTER

- [Using Guided Setup for Juniper ATP Cloud with Juniper Connected Security | 1328](#)

Using Guided Setup for Juniper ATP Cloud with Juniper Connected Security

Guided Setup is the most efficient way to complete your Juniper ATP Cloud with Juniper Security configuration. To locate Guided Setup, navigate to **Configure > Guided Setup > Threat Prevention** in the Junos Space Security Director Portal.

Before You Begin

- The ATP Cloud Configuration type you select on the Policy Enforcer Settings page determines the guided setup process. Guided setup provides all the configuration items you need for your chosen type. See *Juniper ATP Cloud Configuration Type Overview* for details on each configuration type.
- Before you begin the guided setup process, you must enter the IP address and login credentials for the policy enforcer virtual machine on the Policy Enforcer Settings page. If you haven't yet done that, go to **Administration > Policy Enforcer > Settings** and enter the necessary information. See *Policy Enforcer Settings* for more information.
- Ensure that all the devices that you want to set up threat prevention for are already discovered and available on Junos Space. See [Overview of Device Discovery in Security Director](#).
- Ensure that you install the proper Schema that is suitable with the OS Version of the device.
- Ensure that device version should not be less than 15.x.
- Juniper ATP Cloud license and account are needed for all Juniper ATP Cloud Configuration Types. (Juniper ATP Cloud with Juniper Connected Security, Juniper ATP Cloud, and Cloud Feeds only). If you do not have a Juniper ATP Cloud license, contact your local sales office or Juniper Networks partner to place an order for a Juniper ATP Cloud premium or basic license. If you do not have a Juniper ATP Cloud account, when you configure Juniper ATP Cloud, you are redirected to the Juniper ATP Cloud server to create one. Please obtain a license before you try to create a Juniper

ATP Cloud account. Refer to [Obtaining a Juniper ATP Cloud License](#) for instructions on obtaining a Juniper ATP Cloud license.

- There are some concepts you should understand before you begin the configuration. We recommend that you read about them here in advance. *Policy Enforcer Configuration Concepts*.

This video provides a complete overview of how you can set up use Policy Enforcer threat prevention to block malicious servers and domains. You can refer to the procedure below for more elaborate instructions.




Video: [Using Guided Setup for Set Up Threat Prevention](#)

The Guided Setup process offers the following steps for configuring Juniper ATP Cloud with Juniper Connected Security threat prevention.

1. Navigate to the **Guided Setup** page from the **Configuration > Guided Setup > Threat Prevention** menu.


The Threat Prevention Policy Setup page appears as shown in [Figure 155 on page 1329](#).

Figure 155: Threat Presentation Guided Setup

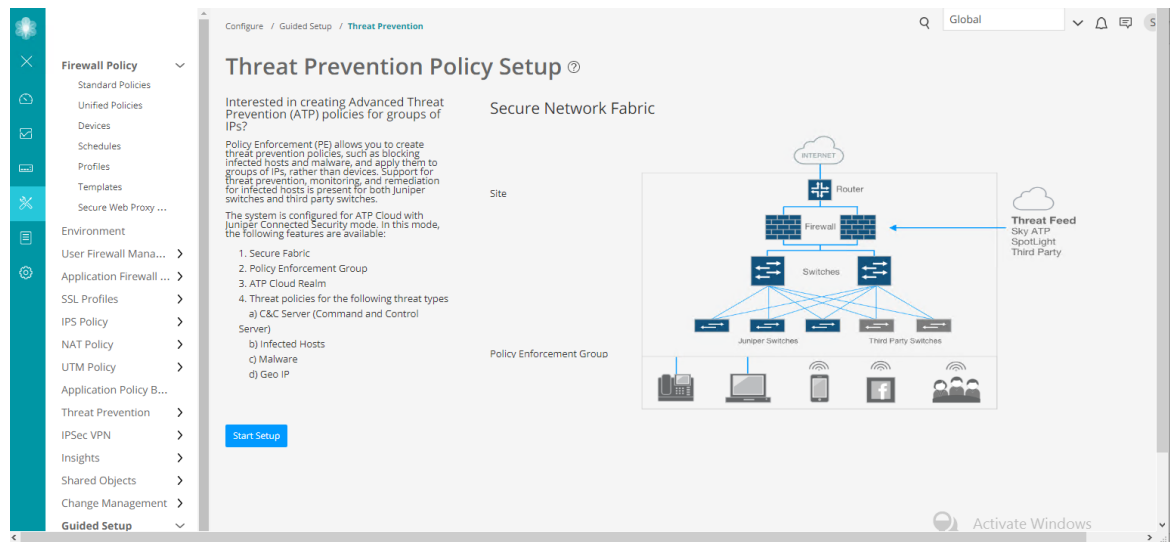


2. Click **Start Setup** to begin the guided setup.

The guided setup takes you through the various configuration, the first being Tenants, as shown in [Figure 156 on page 1330](#).

3.  **NOTE:** This step is not applicable for SRX Series devices. Tenants are only applicable for MX Series devices.

Create a tenant representing an enterprise by clicking **+** on the top-right corner of the page. The Create Tenant page appears.

Use the instructions provided in section *Create Secure Fabric Tenants* to create a tenant.

-  **NOTE:** When a tenant is created, a VRF instance is assigned to the tenant. When a site is associated with this tenant, only those devices that have the VRF instance associated with the tenant can be added to the site.

Click **OK** to move on to the next step.

The Secure Fabric page appears.


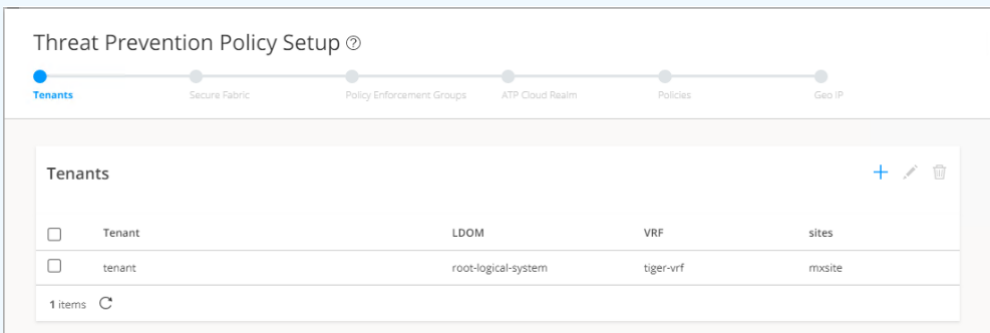
-  **NOTE:** In Policy Enforcer Release 20.1R1, only MX series devices support LSYS and VRF. Also, only root-logical system is supported. All the sites of a realm are either with tenants or without tenants.

Figure 156: Threat Prevention Configuration



4. A Secure Fabric is a collection of network devices (switches, routers, firewalls, and other security devices), used by users or user groups, to which policies for aggregated threat prevention are applied. Create a Secure Fabric by clicking **+** on the top-right corner of the page. The Create Site page appears.

Use the instructions provided in section *Creating Secure Fabric and Sites* to create a site.

After you create a site, you must add the devices for which you want to apply a common security policy, to the site. To do so, click **Add Enforcement Points** in the Enforcement Points column of a device or, alternately select a device and click **Add Enforcement Points** on the top-right corner of the page. Use the instructions provided in section *Adding Enforcement Points* to add endpoints to the site.



NOTE:

- A device can belong to only one site and you must remove it from any other site where it is used.
- Firewall devices are automatically enrolled with ATP Cloud as part of this step. No manual enrollment is required.

You can find the newly created Secure Fabric on the Devices page.

Click **OK** to move on to the next step.

The Policy Enforcement Group page appears.

5. A policy enforcement group is a grouping of endpoints ready to receive advance threat prevention policies. Create a policy enforcement group by clicking + on the top-right corner of the page. The Policy Enforcement Group page appears.

Use the instructions provided in section *Creating Policy Enforcement Groups* to create a policy enforcement group.

You can find the newly created policy enforcement group on the **Configure > Shared Objects** page.

Click **OK** to move on to the next step.

The ATP Cloud Realm page appears.

6. A security realm is a group identifier for an organization used to restrict access to Web applications. You can create one or multiple realms. If you have not created a realm from within your ATP Cloud account, you can create and register it here by clicking the + sign on the top-right corner of the page.

Use the instructions provided in section [Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#) to create and register a realm, and then enroll SRX Series devices into the realm.

If a realm is already created with a site assigned, all devices in a site are listed under the Devices in Site(s) column that includes EX Series, SRX Series, all enforcement points, and devices that are originally from a realm. Devices that are marked as perimeter firewall devices are listed under the Perimeter Firewall column.

Click **OK** to move on to the next step.

The Threat Prevention Policy page appears.

7. Create a threat prevention policy by clicking **+** on the top-right corner of the page. The Create Threat Prevention Policy page appears.

Use the instructions provided in section *Creating Threat Prevention Policies* to create a threat prevention policy.

The newly created threat prevention policy is available on page **Configure > Threat Prevention > Policies**.

Click **OK** to move on to the next step.

The Geo IP page appears.

8. (Optional) Geo IP refers to the method of locating a computer terminal's geographic location by identifying that terminal's IP address. A Geo IP feed is an up-to-date mapping of IP addresses to geographical regions. By mapping IP address to the sources of attack traffic, the geographic regions of origin can be determined, giving you the ability to filter traffic to and from specific locations in the world. Create a Geo IP by clicking **+** on the top-right corner of the page. The Create Geo IP page appears as shown in [Figure 157 on page 1332](#).

Use the instructions provided in section *Creating Geo IP Policies* to create a Geo IP.

Click **Finish** to move on to the Summary page.

The Geo IP page appears.

Figure 157: Create Geo IP

Create GeoIP ?

Select countries to block

Name* ? block-everyone

Description

Countries

255 Available

0 Selected

Country

Anonymous Proxy

Asia/Pacific Region

Afghanistan

Åland Islands

Albania

No selected items

Cancel OK

9. The last page is a summary of the parameters you have configured using quick setup. Click **OK** to create the threat prevention policy. The Policies page appears with the newly created policy listed.
10. You must apply your new or edited policy configuration to Policy Enforcer in order for the policy configuration to go live. In order to do that, click the **Ready to Update** link in the Status column. The Threat Policy Analysis page appears.

Use the Threat Policy Analysis page to view your pending policy changes in chronological order. Click the **View Analysis** link to view the changes.

In the Action section, you can choose to: **Update now** to , **Update later**, or **Save the changes without updating**.

- **Update now**—Apply the policy configuration immediately.
- **Update later**—Apply the policy configuration at a scheduled date and time of your choice.
- **Save the changes without updating**—Save the policy changes without applying them to Policy Enforcer.

RELATED DOCUMENTATION

Policy Enforcer Configuration Concepts

Policy Enforcer Settings

Configuring Sky ATP with SDSN (Without Guided Setup) Overview

[Using Guided Setup for Juniper ATP Cloud](#)

Guided Setup-ATP Cloud

IN THIS CHAPTER

- [Using Guided Setup for Juniper ATP Cloud | 1334](#)

Using Guided Setup for Juniper ATP Cloud

Guided Setup is the most efficient way to complete your initial configuration. Locate Guided Setup from the **Configuration > Guided Setup > Threat Prevention** menu.

- The Juniper ATP Cloud Configuration type you select on the Policy Enforcer Settings page determines the guided setup process. Guided setup provides all the configuration items you need for your chosen type. See *Juniper ATP Cloud Configuration Type Overview* for details on each configuration type.
- Before you begin the guided setup process, you must enter the IP address and login credentials for the policy enforcer virtual machine on the Policy Enforcer Settings page. If you haven't yet done that, go to **Administration > Policy Enforcer > Settings** and enter the necessary information. See *Policy Enforcer Settings* for more information.
- Juniper ATP Cloud license and account are needed for all Juniper ATP Cloud Configuration Types. (Juniper ATP Cloud with Juniper Connected Security, Juniper ATP Cloud, and Cloud Feeds only). If you do not have a Juniper ATP Cloud license, contact your local sales office or Juniper Networks partner to place an order for a Juniper ATP Cloud premium or basic license. If you do not have a Juniper ATP Cloud account, when you configure Juniper ATP Cloud, you are redirected to the Juniper ATP Cloud server to create one. Please obtain a license before you try to create a Juniper ATP Cloud account. Refer to ["Obtaining a Juniper ATP Cloud License" on page 1247](#) for instructions on obtaining a Juniper ATP Cloud license.
- There are some concepts you should understand before you begin the configuration. Read ["Juniper ATP Cloud Overview" on page 1205](#) for further information.

Click **Start Setup** from **Configuration > Guided Setup > Threat Prevention** to begin.

1. **Add a ATP Cloud Realm**—If you have not created a realm from within your Juniper ATP Cloud account, you can create it here by clicking the + sign. Once you add a realm, you can enroll SRX

Series devices into the realm. A security realm is a group identifier for an organization used to restrict access to Web applications. You can create one or multiple realms. See ["Juniper ATP Cloud Realm Overview" on page 945](#) for information. A realm has the following configuration fields

- **Username and Password**—These are credentials you must provide, obtained through your Juniper ATP Cloud account.
- **Realm**—This is the name of the realm you are creating.

2. Click **Add devices** to enroll them in threat prevention before proceeding to the next step. Devices designated as perimeter firewalls are automatically enrolled with Juniper ATP Cloud.

3. **Create a Policy**—You create a name for the policy, choose one or more profile types depending on the type of threat prevention this policy provides (C&C Server, Infected Host, Malware), and select a log setting.

- Once configured, threat prevention policies are located under **Configure > Threat Prevention > Policies**. A policy has the following fields:
 - **Name and Description**.
 - **Profiles**—The type of threat this policy manages:
 - **C&C Server** (Command and Control Server)—A C&C server is a centralized computer that issues commands to botnets (compromised networks of computers) and receives reports back from them. A C&C profile provides information on C&C servers that have attempted to contact and compromise hosts on your network. Information such as IP address, threat level, and country of origin are gathered.
 - **Infected Host**—An infected host profile provides information on compromised hosts and their associated threat levels. Host information includes IP address, threat level, blocked status, when the threat was seen, command and control hits, and malware detections.
 - **Malware**—A malware profile provides information on files downloaded by hosts and found to be suspicious based on known signatures or URLs. The filename, file type, signature, date and time of download, download host, URL, and file verdict are gathered.
 - **Logging**—All traffic is logged by default. Use the pulldown to narrow the types of traffic to be logged.

4. **Geo IP**—Geo IP refers to the method of locating a computer terminal's geographic location by identifying that terminal's IP address. A Geo IP feed is an up-to-date mapping of IP addresses to geographical regions. By mapping IP address to the sources of attack traffic, geographic regions of origin can be determined, giving you the ability to filter traffic to and from specific locations in the world. For Geo IP, you configure the following:

- **Name and Description**

- **Countries**—Select the check box beside the countries in the Available list and click the > icon to move them to the Selected list. The countries in the Selected list will be included in the policy and action will be taken according to their threat level.
 - **Block Traffic**—Choose what traffic to block from the selected countries. Incoming traffic, Outgoing traffic, or Incoming and Outgoing traffic.
5. The last page is a summary of the items you have configured. Click **OK** to be taken to the Policies page under **Configure > Threat Prevention**, and your policy is listed there.



NOTE: When you are using Juniper ATP Cloud without Policy Enforcer, you must assign the policy to a firewall rule before it can take affect. Navigate to **Configure > Firewall Policy > Policies**. In the Advanced Security column, click an existing item to access the Edit Advanced Security page and select the Threat Prevention Policy from the **Threat Prevention** pulldown list.

RELATED DOCUMENTATION

[Juniper ATP Cloud Overview | 1205](#)

[Juniper ATP Cloud Realm Overview | 945](#)

[Configuring Juniper ATP Cloud \(No Juniper Connected Security and No Guided Setup\) Overview | 1343](#)

Creating Geo IP Policies

Guided Setup for No ATP Cloud (No Selection)

IN THIS CHAPTER

- [Using Guided Setup for No Juniper ATP Cloud \(No Selection\) | 1337](#)

Using Guided Setup for No Juniper ATP Cloud (No Selection)

Guided Setup is the most efficient way to complete your initial configuration. Locate Guided Setup from the **Configuration > Guided Setup > Threat Prevention** menu.

You would make no ATP Cloud selection to configure Juniper Connected Security using only custom feeds. Custom feeds are the only threat prevention type available if you make no selection for ATP Cloud Configuration Type in the Policy Enforcer Settings page.

- Before you begin the guided setup process, you must enter the IP address and login credentials for the policy enforcer virtual machine on the Policy Enforcer Settings page. If you haven't yet done that, go to **Administration > Policy Enforcer > Settings** and enter the necessary information. See *Policy Enforcer Settings* for more information.
- There are some concepts you should understand before you begin the configuration. It is recommended you read about them here in advance. *Policy Enforcer Configuration Concepts*.

The Guided Setup process offers the following steps for configuring threat prevention with custom feeds (No ATP Cloud selection). Click **Start Setup** to begin.

1. **Tenants**—You can create a tenant representing an Enterprise. When a tenant is created, a VRF is assigned to the tenant. When a site is associated with this tenant, only those devices that have the VRF associated with the tenant can be added to the site.



NOTE: In Policy Enforcer Release 20.1R1, only MX series devices support LSYS and VRF. Also, only root-logical system is supported. All the sites of a realm are either with tenants or without tenants.

2. **Secure Fabric**—Secure Fabric is a collection of network devices (switches, routers, firewalls, and other security devices), used by users or user groups, to which policies for aggregated threat prevention are applied. Once created, secure fabric is located under **Devices**. For secure fabric, the following is configured:

- **Sites**—A site is a collection of network devices participating in threat prevention. Using quick setup, you can create your own site, but note that a device can only belong to one site and you must remove it from the any other site where it is used to use it elsewhere.

Click **Add Devices** in the Device Name column or in the IP address column to add devices to a site. Using the check boxes in the device list, you should indicate which devices are firewalls or switches.

3. **Policy Enforcement Group**—A policy enforcement group is a grouping of endpoints ready to receive advance threat prevention policies. Create a policy enforcement group by adding endpoints (firewalls and switches) under one common group name and later applying a security policy to that group. For policy enforcement group, the following is configured:

- Once configured, policy enforcement groups are located under **Configure > Shared Objects**. A policy enforcement groups has the following fields:
 - **Name and Description.**
 - **Group Type**—IP Address, Subnet, or Location
 - **Endpoint**—IP addresses included in the group

4. **Custom Feeds**— Policy Enforcer uses threat feeds to provide actionable intelligence to policies about various types of threats. These feeds can come from different sources. In this case, the feeds are customized by adding IP addresses, domains, and URLs to your own lists.

The following types of custom threat feeds are available:

- **Dynamic Address**—A dynamic address is a group of IP addresses that can be imported from external sources. These IP addresses are for specific domains or for entities that have a common attribute such as a particular undesired location that poses a threat. You can then configure security policies to use the dynamic addresses within a security policy.
- **Allowlist**—An allowlist contains known trusted IP addresses, URLs, and domains. Content downloaded from locations on the allowlist does not have to be inspected for malware.
- **Blocklist**—A blocklist contains known untrusted IP addresses, URLs, and domains. Access to locations on the blocklist is blocked, and therefore no content can be downloaded from those sites.
- **Infected Host**—Infected hosts are hosts known to be compromised.



NOTE: The Juniper ATP Cloud advanced anti-malware detection of the infected host is not supported in SRX Series 300 and SRX Series 320 devices, if these devices are running Junos OS release prior to 18.3R1.

- **DDoS**—Using DDoS threat feed, policy Enforcer blocks source IP addresses in the feed, rate limit the traffic from the source IP addresses, and takes BGP Flowspec action to apply null-route filtering or redirect the traffic to scrubbing centers.
 - **Command and Control Server (C&C)**—C&C is a centralized computer that issues commands to botnets (compromised networks of computers) and receives reports back from them. Botnets can be used to gather sensitive information, such as account numbers or credit card information, or to participate in a distributed DDoS attack.
5. **Threat Prevention Policy**—A threat prevention policy requires you to create a name for the policy, choose one or more profile types depending on the type of threat prevention this policy provides (infected hosts), and select a log setting. Once configured, you apply policies to policy enforcement groups.
- Once configured, threat prevention policies are located under **Configure > Threat Prevention > Policies**. A policy has the following fields:
 - **Name** and Description.
 - **Profiles**—The type of threat this policy manages:
 - **Infected Hosts**—An infected host profile would provide information on compromised hosts and their associated threat levels. Host information includes IP address, threat level, blocked status, when the threat was seen, command and control hits, and malware detections.
 - **Logging**—All traffic is logged by default. Use the pulldown to narrow the types of traffic to be logged.
 - **Group**—Once your policy is created, it is applied to the policy enforcement group.
6. The last page is a summary of the items you have configured using quick setup. Click **OK** to be taken to the Policies page under **Configure > Threat Prevention > Policies** and your policy is listed there.
7. You must update to apply your new or edited policy configuration. Clicking the **Ready to Update** link takes you the Threat Policy Analysis page. See *Threat Policy Analysis Overview*. From there you can view your changes and choose to Update now, Update later, or Save them in draft form without updating.

RELATED DOCUMENTATION

| |
|---|
| <i>Creating Custom Feeds</i> |
| <i>About the Feed Sources Page</i> |
| <i>Policy Enforcer Configuration Concepts</i> |
| <i>Policy Enforcer Settings</i> |

Manual Configuration- ATP Cloud with SDSN

IN THIS CHAPTER

- [Configuring Juniper ATP Cloud with Juniper Connected Security \(Without Guided Setup\) Overview](#) | 1341

Configuring Juniper ATP Cloud with Juniper Connected Security (Without Guided Setup) Overview

This is an outline of the tasks required to configure ATP Cloud with Juniper Connected Security.



NOTE: If you prefer to use quick setup, which automatically takes you through the steps listed below, it is located under **Configure>Guided Setup >ATP Cloud with PE**.

Before You Begin

- Juniper ATP Cloud license and account are needed for all threat prevention types (Juniper ATP Cloud with PE, Juniper ATP Cloud, and Cloud Feeds only). If you do not have Juniper ATP Cloud license, contact your local sales office or Juniper Networks partner to place an order for Juniper ATP Cloud premium or basic license. If you do not have Juniper ATP Cloud account, when you configure Juniper ATP Cloud, you are redirected to the Juniper ATP Cloud server to create one. Please obtain a license before you try to create Juniper ATP Cloud account. Refer to [Obtaining a Juniper ATP Cloud License](#) for instructions on obtaining Juniper ATP Cloud license.
- Before you configure Policy Enforcer, you must enter the IP address and login credentials for the policy enforcer virtual machine. Go to **Administration > Policy Enforcer > Settings**. Once this information is entered, you can begin the setup process. See *Policy Enforcer Settings*. (Refer to *Policy Enforcer Installation Overview* for instructions on downloading Policy Enforcer and creating your policy enforcer virtual machine.)

To configure Juniper ATP Cloud with Juniper Connected Security:

1. Create one or more Juniper ATP Cloud realms and enroll SRX Series devices in the appropriate realm. (Enroll devices by clicking **Add Devices** in the list view once the realm is created.)

In the UI, navigate to **Configure>Threat Prevention>ATP Cloud Realms**. Click the + icon to add a new ATP Cloud realm.

See [Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#) for details.

2. Create sites and add devices to those sites.

In the UI, navigate to **Devices >Secure Fabric**. Click the + icon to create a new site.

See *Creating Secure Fabric and Sites* for details.

3. Create a policy enforcement group.

In the UI, navigate to **Configure>Shared Objects>Policy Enforcement Groups**. Click the + icon to create a new policy enforcement group.

See *Creating Policy Enforcement Groups* for details.

4. Add the threat prevention policy, including profiles for one or more threat types: C&C server, infected host, malware.

In the UI, navigate to **Configure> Threat Prevention > Policies**. Click the + icon to create a new threat prevention policy.

See *Creating Threat Prevention Policies* for details.

RELATED DOCUMENTATION

Policy Enforcer Settings

[Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#)

Secure Fabric Overview

Creating Secure Fabric and Sites

Creating Policy Enforcement Groups

Creating Threat Prevention Policies

Creating Geo IP Policies

Policy Enforcer Overview

Benefits of Policy Enforcer

Policy Enforcer Components and Dependencies

Manual Configuration-ATP Cloud

IN THIS CHAPTER

- [Configuring Juniper ATP Cloud \(No Juniper Connected Security and No Guided Setup\) Overview | 1343](#)
- [Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites | 1344](#)

Configuring Juniper ATP Cloud (No Juniper Connected Security and No Guided Setup) Overview

This is an outline of the configuration tasks you must complete to configure Juniper ATP Cloud mode without Juniper Connected Security mode.



NOTE: Configuring Policy Enforcer (Juniper Connected Security mode) is required if you want to work on the Juniper Connected Security architecture from within Security Director.

If you prefer to use guided setup, which automatically takes you through the steps listed below, it is located under **Configure>Guided Setup >ATP Cloud**.

- Juniper ATP Cloud license and account are needed for all threat prevention types (Juniper ATP Cloud with PE, Juniper ATP Cloud, and Cloud Feeds only). If you do not have a Juniper ATP Cloud license, contact your local sales office or Juniper Networks partner to place an order for a Juniper ATP Cloud premium license. If you do not have a Juniper ATP Cloud account, when you configure Juniper ATP Cloud, you are redirected to the Juniper ATP Cloud server to create one. Please obtain a license before you try to create a Juniper ATP Cloud account. Refer to ["Obtaining a Juniper ATP Cloud License" on page 1247](#) for instructions on obtaining a Juniper ATP Cloud premium license.
- Before you configure Juniper ATP Cloud you must enter the IP address and login credentials for the policy enforcer virtual machine. Go to **Administration > Policy Enforcer > Settings**. Once this information is entered, you can begin the setup process. See *Policy Enforcer Settings*. (Refer to *Policy Enforcer Installation Overview* for instructions on downloading Policy Enforcer and creating your policy enforcer virtual machine.)

1. Create one or more Juniper ATP Cloud realms and enroll SRX Series devices in the appropriate realm. (Enroll devices by clicking **Add Devices** in the list view once the realm is created.)

In the UI, navigate to **Configure>Threat Prevention>ATP Cloud Realms**. Click the + icon to add a new ATP Cloud realm.

See "[Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#)" on page 955 for details.

2. Create a threat prevention policy, including profiles for one or more threat types: C&C server, infected host, or malware.

In the UI, navigate to **Configure>Threat Prevention >Policy**. Click the + icon to create a new threat prevention policy.

See *Creating Threat Prevention Policies* for details.

3. You must assign a threat prevention policy to a firewall rule before it can take affect.

In the UI, navigate to **Configure > Firewall Policy > Policies**. In the Advanced Security column, click an item to access the Edit Advanced Security page and select the threat prevention policy from the **Threat Prevention** pulldown list.

RELATED DOCUMENTATION

[Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites | 955](#)

Creating Threat Prevention Policies


Creating Geo IP Policies

Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites

You can select a geographical location and enter your Juniper ATP Cloud credentials to create a realm and associate sites or devices with the realm.

If you do not have Juniper ATP Cloud account, select a geographical region and click [here](#). You are redirected to the Juniper ATP Cloud account page.

Before You Begin

-  **NOTE:**
 - Policy Enforcer does not support the Multi-factor authentication (MFA) feature in Cloud ATP. Disable the MFA feature in the Cloud ATP before adding realms to the Security Director.
 - You cannot use single sign-on (SSO) credentials to add the Juniper ATP realm to Security Director.

Use the login credentials used to create the realm.
- Understand which type of Juniper ATP Cloud license you have: free, basic, or premium. The license controls which Juniper ATP Cloud features are available.
- To configure a Juniper ATP Cloud realm, you must already have Juniper ATP Cloud account with an associated license.
- Ensure that the internet connectivity is available for Policy Enforcer. Without the internet connectivity, you cannot create a realm.
- Decide which region will be covered by the realm you are creating. You must select a region when you configure a realm.
- Note that adding a device to a realm results in one or more commit operations occurring on the device to apply the Juniper ATP Cloud or Policy Enforcer configuration.

To configure ATP Cloud Realm:

1. Select **Configure>Threat Prevention>Feed Sources**.
The Feed Sources page appears.
2. In the ATP Cloud tab, click the + icon to add a realm.
3. Complete the initial configuration by using the guidelines in [Table 374 on page 1345](#) below.
4. Click **Finish**.

Table 374: Fields on the Add ATP Cloud Realm Page

| Field | Description |
|-------|-------------|
|-------|-------------|

ATP Cloud Realm Credentials

Table 374: Fields on the Add ATP Cloud Realm Page (*Continued*)

| Field | Description |
|----------|--|
| Location | <p>Select a region of the world from the available choices.</p> <p>The following options are available in the Location list:</p> <ul style="list-style-type: none"> • North America • European Region • Canada • Asia Pacific <p>By default, the North America value appears in the list. To know more about the geographic region, see here.</p> |
| Username | Enter your e-mail address. Your username for Juniper ATP Cloud is your e-mail address. |
| Password | Enter a unique string at least 8 characters long. Include both uppercase and lowercase letters, at least one number, and at least one special character (~!@\$%^&*()_-=+{}[] ;:<>,./?); no spaces are allowed, and you cannot use the same sequence of characters that are in your username. |
| Realm | <p>Enter a name for the security realm. This should be a name that is meaningful to your organization. A realm name can only contain alphanumeric characters and the dash symbol. Once created, this name cannot be changed.</p> <p>NOTE: When you create a custom feed with a realm, the feed is associated at the site level and not at the realm level. If you modify this realm and associate new sites to it, a warning message is shown that there are custom feeds are associated with this realm. Changing the site information will change the custom feed information. You must go and edit the custom feed that was associated with this realm and verify the realm association.</p> |

Site

Table 374: Fields on the Add ATP Cloud Realm Page (*Continued*)

| Field | Description |
|-----------------------------|--|
| Site | <p>Select one or more sites to enroll into the realm. If there are no sites associated with the realm, click Create new site. To know more about creating a new site, see <i>Creating Secure Fabric and Sites</i>.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • If you are using Juniper ATP Cloud without Policy Enforcer, you are not prompted to select a site. • Assigning a site to the realm will cause a change in the device configuration in the associated devices. • You must select the sites either with tenants or without tenants. You cannot select both at a time. |
| Unmanaged Devices | <p>Lists all devices from the realm that are not managed in Security Director. You must manually discover them.</p> <p>If you are using Juniper ATP Cloud with Policy Enforcer and you have no devices enrolled in the realm, you are asked to select devices in the box on the left and move them to the right to enroll them. All selected devices are automatically enrolled with Juniper ATP Cloud when you finish the guided setup. To disenroll a device, you can edit a realm and move the device back to the left side box.</p> <p>NOTE: Adding a device to a realm results in one or more commit operations occurring on the device to apply the Juniper ATP Cloud or Policy Enforcer configuration.</p> |
| <i>Global Configuration</i> | |
| IPv6 Feeds | Enable this option to receive IPv6 feeds (C&C and Geo IP) from Policy Enforcer. |
| Threat Level Threshold | <p>Select a threshold level to block the infected hosts and to send an e-mail to the selected administrators notifying about the infected host events.</p> <p>Click the+ sign if you want to add new administrators to the list.</p> |
| Logging | Enable this option to log the Malware or the Host Status event or both the event types. |

Table 374: Fields on the Add ATP Cloud Realm Page *(Continued)*

| Field | Description |
|---------------|--|
| Proxy Servers | <p>Click the add icon (+) to enter the trusted IPv4 address of the proxy server, in the Server IP column.</p> <p>When there is a proxy server between users on the network and a firewall, the firewall might see the proxy server IP address as the source of an HTTP or HTTPS request, instead of the actual address of the user making the request.</p> <p>With this in mind, X-Forwarded-For (XFF) is a standard header added to packets by a proxy server that includes the real IP address of the client making the request. Therefore, if you add trusted proxy servers IP addresses to the list in Juniper ATP Cloud, by matching this list with the IP addresses in the HTTP header (X-Forwarded-For field) for requests sent from the SRX Series devices, Juniper ATP Cloud can determine the originating IP address.</p> <p>NOTE: XFF only applies to HTTP or HTTPS traffic, and only if the proxy server supports the XFF header.</p> |



NOTE: If you enrolled a device into a realm from within Security Director and you want to disenroll it, you must do that from within Security Director. If you enrolled a device into a realm from within Juniper ATP Cloud and you want to disenroll it, you must do that from within Juniper ATP Cloud. You cannot disenroll a device from within Security Director that was enrolled from within Juniper ATP Cloud.

RELATED DOCUMENTATION

About the Feed Sources Page

[Juniper ATP Cloud Realm Overview | 945](#)

[Using Guided Setup for Juniper ATP Cloud | 1334](#)

Creating Secure Fabric and Sites

Cloud Feeds Only Threat Prevention

IN THIS CHAPTER

- [Configuring Cloud Feeds Only | 1349](#)

Configuring Cloud Feeds Only

This is an outline of the configuration tasks you must complete to configure Cloud feeds only threat prevention.



NOTE: Since devices are not enrolled to ATP Cloud in Cloud feed only mode, there is no information to display under Monitor > Threat Prevention, and therefore those screens are unavailable.

- Juniper ATP Cloud license and account are needed for the following (Juniper ATP Cloud with Juniper Connected Security, Juniper ATP Cloud, and Cloud feeds only). If you do not have a Juniper ATP Cloud license, contact your local sales office or Juniper Networks partner to place an order for a Juniper ATP Cloud premium license. If you do not have a Juniper ATP Cloud account, when you configure Juniper ATP Cloud, you are redirected to the Juniper ATP Cloud server to create one. Please obtain a license before you try to create a Juniper ATP Cloud account. Refer to [Obtaining a Juniper ATP Cloud License](#) for instructions on obtaining a Juniper ATP Cloud premium license.
- Before you configure Cloud Feeds you must enter the IP address and login credentials for the policy enforcer virtual machine. Go to **Administration > Policy Enforcer > Settings**. Once this information is entered, you can begin the setup process. See *Policy Enforcer Settings*. (Refer to *Deploying and Configuring the Policy Enforcer with OVA files* for instructions on downloading Policy Enforcer and creating your policy enforcer virtual machine.)

To configure Security Director for Cloud feed only threat prevention, do the following:



NOTE: Cloud feed only configuration is similar to ATP Cloud (without Juniper Connected Security) configuration. The only differences being that devices do not have to be

enrolled to Juniper ATP Cloud and the only threat prevention types available are command and control server and Geo IP.

1. Create a tenant representing an Enterprise. When a tenant is created, a VRF is assigned to the tenant.

In the UI, navigate to **Devices > Secure Fabric > Tenants**. Click the + icon to create a new tenant.

See *Create Secure Fabric Tenants* for details.



NOTE: In Policy Enforcer Release 20.1R1, only MX series devices support LSYS and VRF. Also, only root-logical system is supported. All the sites of a realm are either with tenants or without tenants.

2. Create one or more Juniper ATP Cloud realms and add devices to the realm. (Note that devices do not have to be enrolled to Juniper ATP Cloud for Cloud Feed only mode.)

In the UI, navigate to **Configure > Threat Prevention > ATP Cloud Realms**. Click the + icon to add a new ATP Cloud realm.

See [Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#) for details.

3. Create sites and add devices to those sites.

In the UI, navigate to **Devices > Secure Fabric**. Click the + icon to create a new site.

See *Creating Secure Fabric and Sites* for details.

4. Create a policy enforcement group.

In the UI, navigate to **Configure > Shared Objects > Policy Enforcement Groups**. Click the + icon to create a new policy enforcement group.

See *Creating Policy Enforcement Groups* for details.

5. Create a threat prevention policy for Command and Control server, Geo IP, or Infected hosts.

In the UI, navigate to **Configure > Threat Prevention > Policy**. Click the + icon to create a new threat prevention policy.

See *Creating Threat Prevention Policies* for details.

6. Configure Geo IP settings for inclusion in a firewall policy. See *Creating Geo IP Policies*.

You must select your Geo IP policy as the source and/or destination of a firewall rule before it can take effect. Navigate to **Configure > Firewall Policy > Policies**.

RELATED DOCUMENTATION

| |
|--|
| Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites |
| <i>Creating Geo IP Policies</i> |
| <i>Creating Threat Prevention Policies</i> |
| <i>Policy Enforcer Settings</i> |

Configuring No ATP Cloud (No Selection) (without Guided Setup)

IN THIS CHAPTER

- [Configuring No ATP Cloud \(No Selection\) \(without Guided Setup\) Overview | 1352](#)

Configuring No ATP Cloud (No Selection) (without Guided Setup) Overview

You would make no ATP Cloud selection to configure Juniper Connected Security using only custom feeds. Custom feeds are the only threat prevention type available if you make no selection for ATP Cloud Configuration Type in the Policy Enforcer Settings page.

- Before you configure Policy Enforcer, you must enter the IP address and login credentials for the policy enforcer virtual machine. Go to **Administration > Policy Enforcer > Settings**. Once this information is entered, you can begin the setup process. See ["Policy Enforcer Settings" on page 1253](#). (Refer to ["Policy Enforcer Installation Overview" on page 1225](#) for instructions on downloading Policy Enforcer and creating your policy enforcer virtual machine.)
- There are some concepts you should understand before you begin the configuration. It is recommended you read about them here in advance. ["Policy Enforcer Configuration Concepts" on page 1214](#).

To configure Policy Enforcer with no ATP Cloud selection and without the guided setup:

1. In the Secure Fabric page, create sites and add devices to those sites.

In the UI, navigate to **Devices > Secure Fabric**. Click the + icon to create a new site.

See ["Creating Secure Fabric and Sites" on page 394](#) for details.

2. Create a policy enforcement group.

In the UI, navigate to **Configure > Shared Objects > Policy Enforcement Groups**. Click the + icon to create a new policy enforcement group.

See ["Creating Policy Enforcement Groups" on page 1122](#) for details.

3. Create a custom feed and select one of the following custom feeds as a threat prevention types:

- Dynamic Address
- Allowlist
- Blocklist
- Infected Hosts
- DDoS

In the UI, navigate to **Configure>Threat Prevention> Feed Sources**. Click **Create** to create a custom feed.

See ["Creating Custom Feeds" on page 971](#) for details.

4. Add the threat prevention policy, including profiles for one or more threat types: C&C server, infected host, malware.

In the UI, navigate to **Configure> Threat Prevention > Policies**. Click the + icon to create a new threat prevention policy.

See ["Creating Threat Prevention Policies" on page 917](#) for details.

RELATED DOCUMENTATION

[Secure Fabric Overview | 396](#)

[Creating Secure Fabric and Sites | 394](#)

[Creating Policy Enforcement Groups | 1122](#)

[Creating Custom Feeds | 971](#)

[Threat Prevention Policy Overview | 924](#)

[Creating Threat Prevention Policies | 917](#)

Migration Instructions for Spotlight Secure Customers

IN THIS CHAPTER

- [Moving From Spotlight Secure to Policy Enforcer | 1354](#)

Moving From Spotlight Secure to Policy Enforcer

IN THIS SECTION

- [Spotlight Secure and Policy Enforcer Deployment Comparison | 1355](#)
- [License Requirements | 1355](#)
- [Juniper ATP Cloud and Spotlight Secure Comparison Table | 1355](#)
- [Migrating Spotlight Secure to a Policy Enforcer Configuration Overview | 1357](#)
- [Installing Policy Enforcer | 1358](#)
- [Configuring Advanced Threat Prevention Features: Spotlight Secure/Policy Enforcer Comparison | 1361](#)

The Spotlight Secure Threat Intelligence Platform aggregates threat feeds from multiple sources to deliver open, consolidated, actionable intelligence to SRX Series Firewalls across an organization. This product is now superseded by the Juniper Connected Security Policy Enforcer. The Juniper Connected Security framework delivers enhanced security from external as well as internal attacks by leveraging both security as well as network devices as a coherent security system.

Policy Enforcer is an orchestration solution that orchestrates user intent policy enforcement for threat remediation as well as micro-segmentation across the entire network. This document talks about the logistics of migrating from Spotlight Secure to Policy Enforcer.

Spotlight Secure and Policy Enforcer with Juniper ATP Cloud are two different platforms and therefore a direct migration of threat policies from Spotlight Secure to Policy Enforcer is not supported. Instead it is

recommended that you remove Spotlight Connector from your Space Fabric and remove threat related configurations on Security Director before you install Policy Enforcer. Then you will need to reconfigure your data and threat feeds. The following sections provide an overview of the transition process from Spotlight Secure to Policy Enforcer with Juniper ATP Cloud.

Spotlight Secure and Policy Enforcer Deployment Comparison

The function of Spotlight Secure connector, to bring together all the available threat intelligence and make it available to security policies, is now done via Policy Enforcer with Juniper ATP Cloud. In addition, Policy enforcer is a key part of the Juniper Connected Security Solution.

Spotlight Secure was installed to a separate virtual machine and then added as a specialized node to the Junos Space Fabric on Junos Space until version 15.1. Policy Enforcer is shipped as a virtual machine that is deployed independently. Instead of adding the new VM as a Junos Space node, the configuration has been simplified with a workflow using the Security Director user interface.



NOTE: Spotlight Secure supported a HA deployment. The current version of Policy Enforcer is supported only as a single stand-alone deployment.

License Requirements

For existing Spotlight Secure customers, no new additional license is needed. If you have a Spot-CC license, it can be used with Policy Enforcer and Juniper ATP Cloud as well. A Policy Enforcer license would only be needed if you want to use the complete set of Juniper Connected Security features with Juniper ATP Cloud. Juniper Connected Security/Policy Enforcer features includes all threat prevention types: C&C, infected hosts, malware, GeolP, and policy management and deployment features such as secure fabric and threat prevention policies. See *Features By Juniper ATP Cloud Configuration Type* for more details.

Juniper ATP Cloud and Spotlight Secure Comparison Table

The following table provides a product comparison:

Table 375: Juniper ATP Cloud and Spotlight support Quick Summary

| Feature | Support in Spotlight Secure | Support with Policy Enforcer and Juniper ATP Cloud | Workflow using Juniper ATP Cloud, Security Director and Policy Enforcer |
|--------------------------|--|---|--|
| Command and Control Feed | Fully Supported | Fully Supported | <ul style="list-style-type: none"> • Create a Realm in Juniper ATP Cloud if you do not already have one • Configure Policy Enforcer in Cloud feed only or Juniper ATP Cloud or Juniper ATP Cloud with Juniper Connected Security modes to connect to the realm • Configure a Threat Prevention Profile using Command and Control options • Use this Threat Prevention Profile in Firewall Policy |
| Custom Feeds | Blocklist, Allowlist and Dynamic Address features are fully supported. | Blocklist, Allowlist, Infected Host, and Dynamic Address features are fully supported | <ul style="list-style-type: none"> • Create a Realm in Juniper ATP Cloud if you do not already have one • Configure Policy Enforcer Setting in Juniper ATP Cloud mode • Create a Custom Feed using Blocklist, Allowlist or Dynamic address options selecting static IP or file options |
| Infected Host | Not directly supported by Spotlight. You must create custom feeds | Juniper ATP Cloud supports an Infected Host feed, natively integrated with Policy Enforcer and Security Director. | Juniper ATP Cloud supports an Infected Host feed, natively integrated with Policy Enforcer and Security Director. |

Table 375: Juniper ATP Cloud and Spotlight support Quick Summary *(Continued)*

| Feature | Support in Spotlight Secure | Support with Policy Enforcer and Juniper ATP Cloud | Workflow using Juniper ATP Cloud, Security Director and Policy Enforcer |
|---|---|---|---|
| Infected Host Remediation at the Access Network level | Not supported using Spotlight and Security Director | <p>Juniper ATP Cloud supports an Infected Host feed which is natively integrated with Policy Enforcer. Policy Enforcer can take block/quarantine actions at the access network level.</p> <p>NOTE: This requires a Policy Enforcer license and does not come with a SPOT_CC license.</p> | Juniper ATP Cloud supports an Infected Host feed which is natively integrated with Policy Enforcer. Policy Enforcer can take block/quarantine actions at the switch port level. |

Migrating Spotlight Secure to a Policy Enforcer Configuration Overview

In this section, there is a side by side comparison of feature configuration for Spotlight Secure on Security Director 15.1 and Policy Enforcer on Security Director 16.1 and higher to aid in re-configuring your threat policies.

This is an overview of the tasks needed to migrate:

1. Document the current data and feed configuration from current version of Security Director.
2. Remove Spotlight Connector from your Junos Space Fabric and remove the threat prevention configuration.
3. Upgrade to the latest versions of Junos Space and Security Director.



NOTE: Since the underlying operation system is upgraded to Centos6.8 on Junos Space version 16.1, first upgrade Junos Space and applications to 15.2R2 and then follow the documentation to restore the database before deploying 16.1 or higher. Please refer to the [Junos Space 16.1 release notes](#) for details.

4. Deploy the Policy Enforcer virtual machine. See instructions in the following section.

5. Deploy Security Director and install Policy Enforcer to Security Director.
6. Configure a Juniper ATP Cloud realm and enroll SRX Series devices into the realm. For all deployment models, it is necessary to configure ATP Cloud Realm and enroll firewalls.
7. Configure feeds and threat policies.

Installing Policy Enforcer

Policy Enforcer provides centralized, integrated management of all your security devices (both physical and virtual), allowing you to combine threat intelligence from different solutions and act on that intelligence from one management point. Using Policy Enforcer and the intelligence feeds it offers through Juniper ATP Cloud, you can create threat prevention policies that provide monitoring and actionable intelligence for threat types such as known malware, command and control servers, infected hosts, and Geo IP-based server data.

Policy enforcer is shipped as a OVA file that should be deployed over VMware ESX.

1. Download the Policy Enforcer virtual machine OVA image from the Juniper Networks software [download page](#). It is recommended to deploy Policy Enforcer on the same ESX server as Junos Space.



NOTE: Do not change the name of the Policy Enforcer virtual machine image file that you download from the Juniper Networks support site. If you change the name of the image file, the creation of the Policy Enforcer virtual machine can fail.

Figure 158: Deploy Policy Enforcer OVF File 1


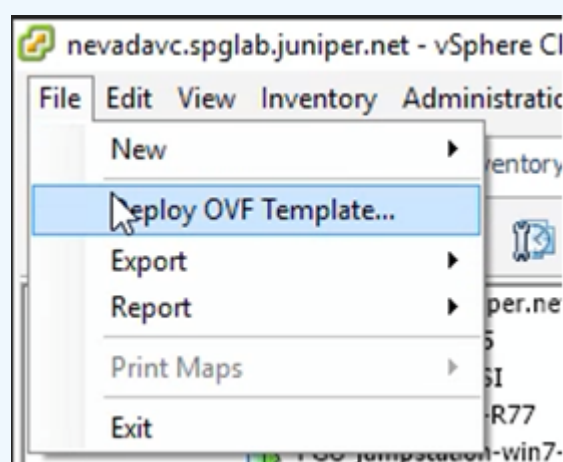



Figure 159: Deploy Policy Enforcer OVF File 2

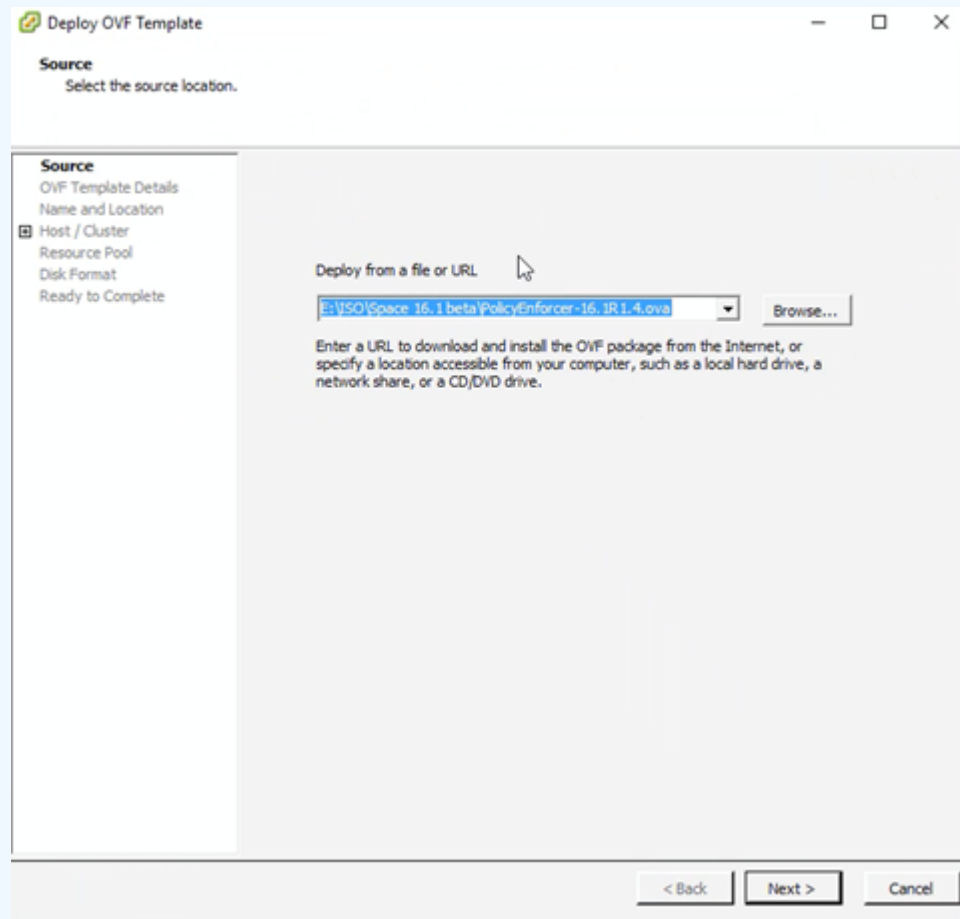

NOTE: See *Deploying and Configuring the Policy Enforcer with OVA files* for the complete Policy Enforcer installation documentation.

2. Initial configuration is done through the console. In addition to network and host configuration, you must set a customer ID and reset the root password. The default login to Policy Enforcer is Username: **root**, Password: **abc123**

Figure 160: Policy Enforcer Configuration Summary

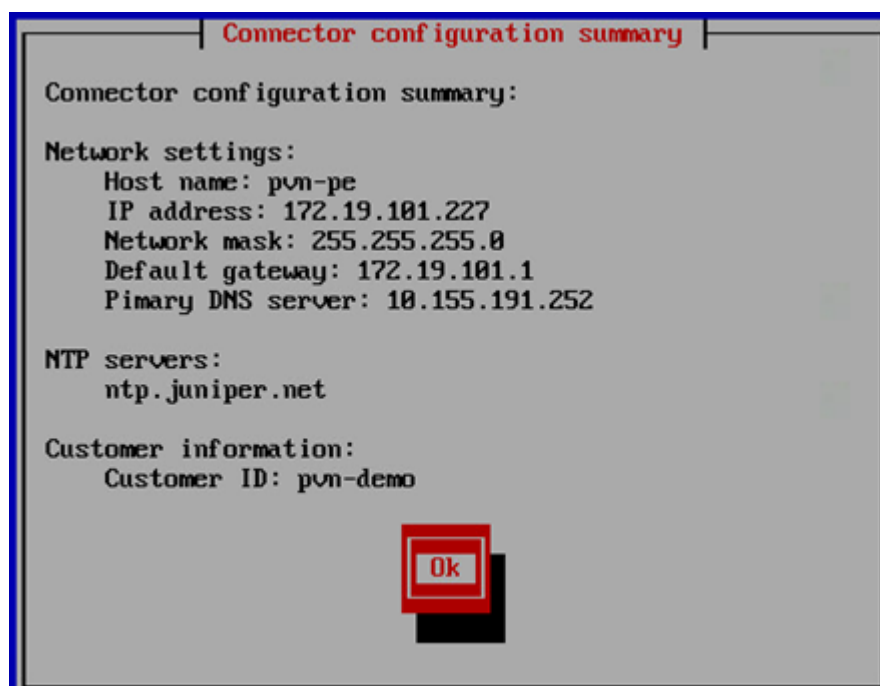



3. Once Policy Enforcer is deployed, it must be added to Security Director via Security Director User Interface. From the Security Director UI, navigate to **Administration > Policy Enforcer > Settings**.





NOTE: Unlike Spotlight Secure, Policy Enforcer does not need to be added to Junos Space Fabric. The addition is done only through the Security Director UI.

4. On the Settings page, there three ATP Cloud Configuration Types to choose from.
 - ATP Cloud with Juniper Connected Security—All Policy Enforcer features and threat prevention types are available
 - ATP Cloud—All threat prevention types are available: Command and control server, Geo IP, and Infected hosts.
 - Cloud feeds only—Command and control server and Geo IP are the only threat prevention types available.
 - No selection (No ATP Cloud)—You can choose to make no selection. When you make no selection, there are no feeds available from Juniper ATP Cloud, but the benefits of Secure Fabric, Policy Enforcement Groups, and Threat Prevention policies provided by Policy Enforcer are available. Infected hosts is the only prevention type available

 **NOTE:** You can switch from Cloud feeds only to ATP Cloud, or ATP Cloud to ATP Cloud with Juniper Connected Security, but the reverse is not supported.

 **NOTE:** If you upgrade from Cloud feeds only to ATP Cloud, you cannot roll back again. Upgrading resets all devices previously participating in threat prevention, and you must re-enroll them with ATP Cloud. This is true for upgrading from ATP Cloud to ATP Cloud with Juniper Connected Security. “ATP Cloud with Juniper Connected Security” is for the Juniper Connected Security solution and not covered in this section.

 **NOTE:** See *Juniper ATP Cloud Configuration Type Overview* for the Policy Enforcer documentation on this topic.

 **NOTE:** Policy Enforcer with ATP Cloud does not support a workflow for removing Policy Enforcer. To switch to a different Policy Enforcer, replace the IP and login information in the Policy Enforcer settings page.

Configuring Advanced Threat Prevention Features: Spotlight Secure/Policy Enforcer Comparison

The following section is a side by side comparison of how advanced threat prevention features were configured on Spotlight Secure compared to how they are configured with Policy Enforcer.


Configuring Command and Control and Infected Host

Spotlight Secure: C&C and Infected Host

This is how C&C and infected host feeds were configured on Security Director 15.1 with Spotlight Secure:


1. Under **Security intelligence > Information Source**, click **+** to add a new information source. Select **Spotlight Secure Cloud** as source.

Figure 161: Spotlight Secure: Add Information Source

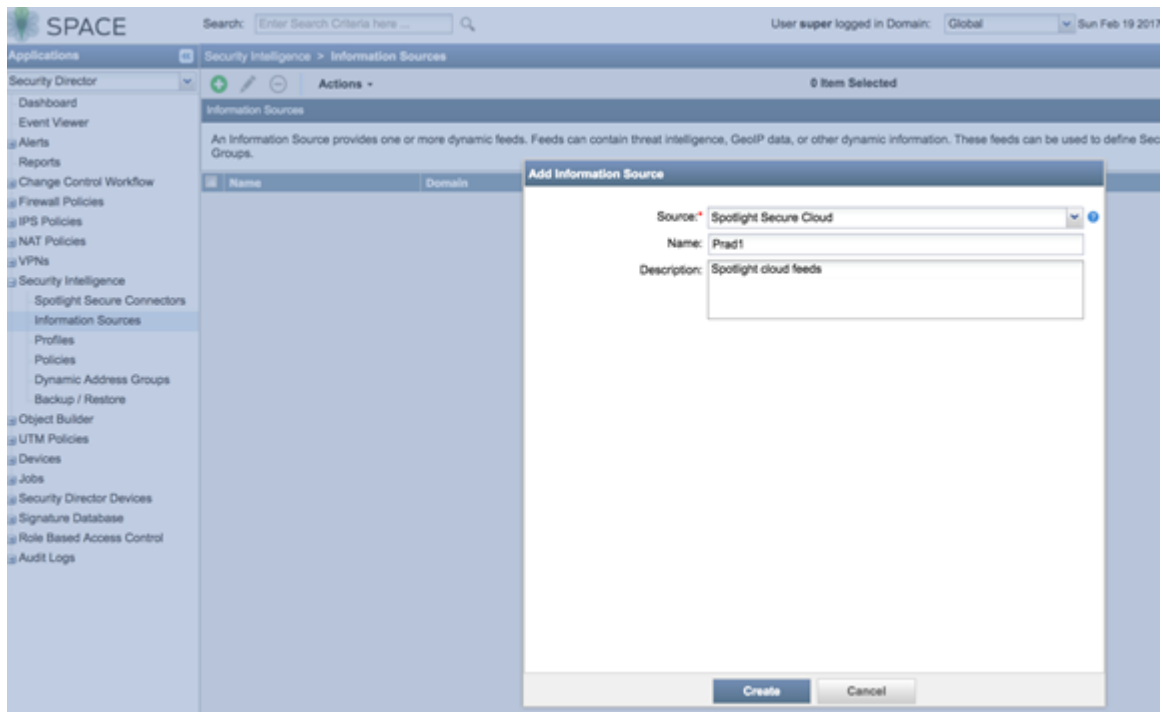


2. Create a Security Intelligence profile from **Security intelligence > Profiles** . Choose **Command and Control** as the feed category and set the Blocking threshold. Configure Block Options and Logging.

Figure 162: Spotlight Secure: Create Security Intelligence Profile

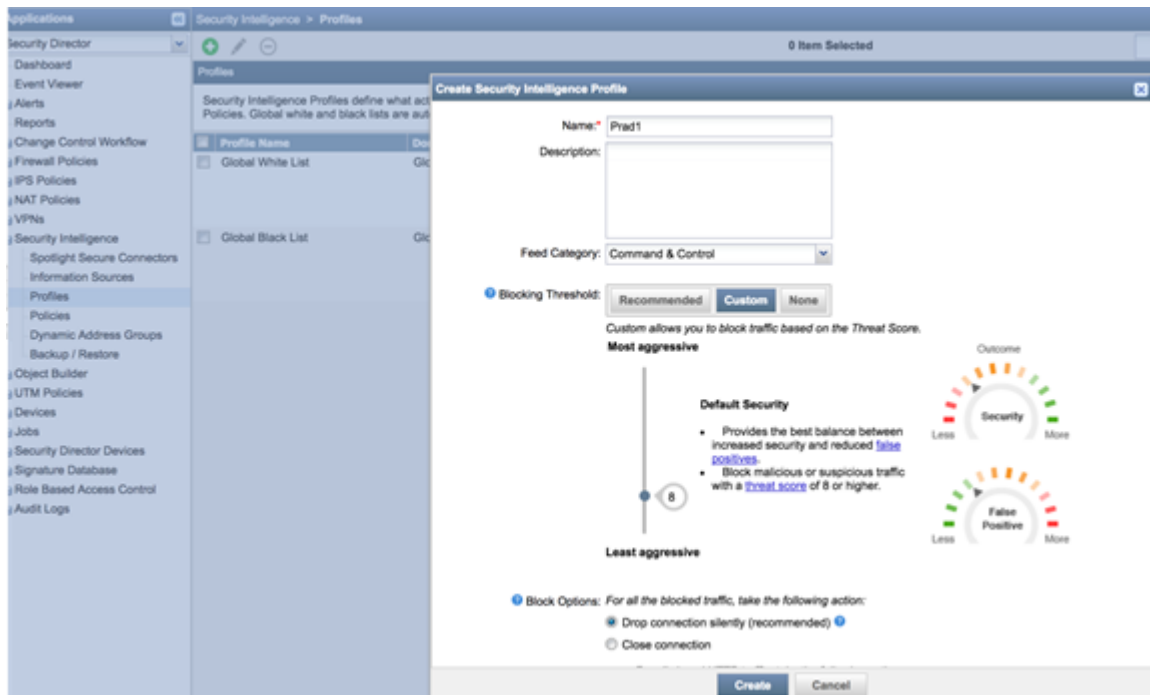


3. Complete the workflow to create a profile.

Figure 163: Spotlight Secure: Create Profile

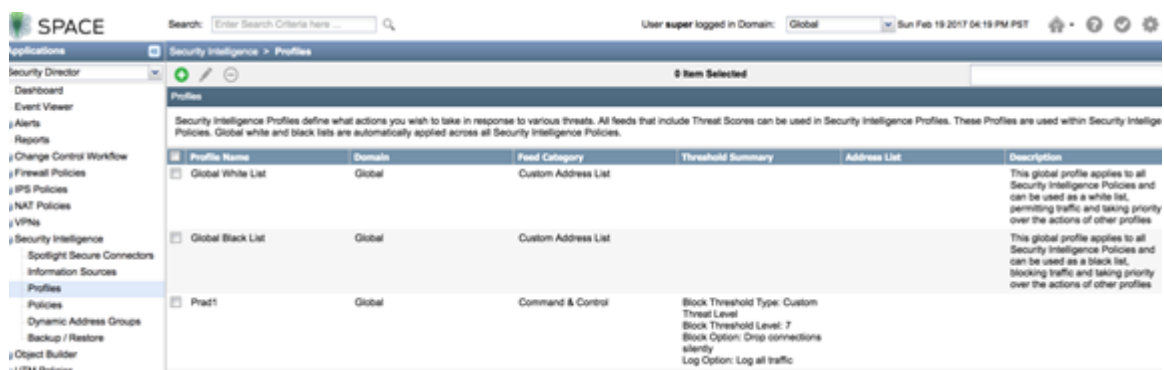


4. Create a security intelligence policy.

Figure 164: Spotlight Secure: Create Security Intelligence Policy

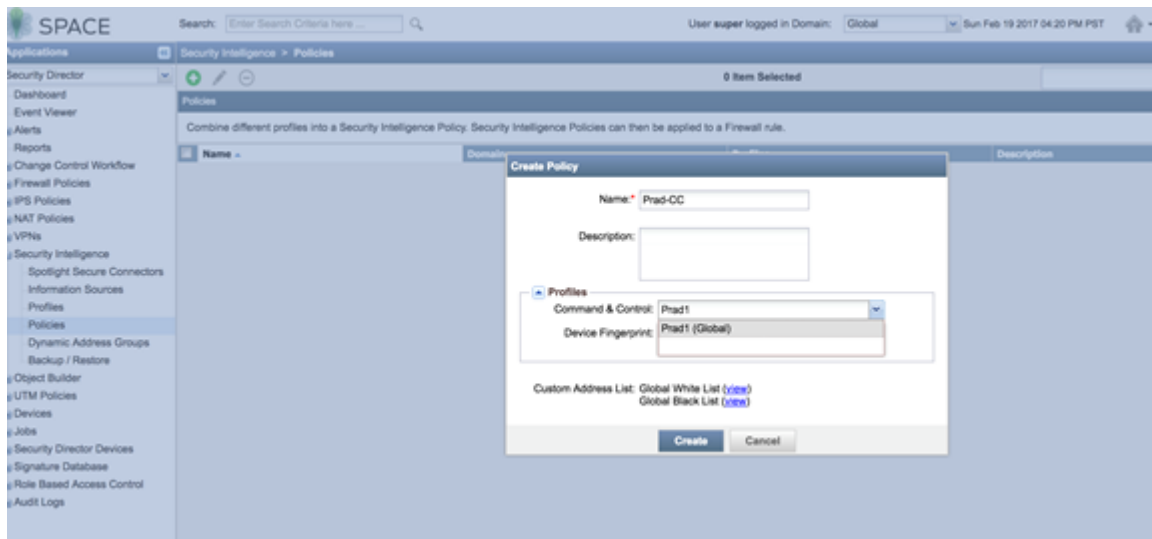

5. Apply the security intelligence policy to a firewall policy.

Figure 165: Spotlight Secure: Apply Security Intelligence Policy to Firewall Policy

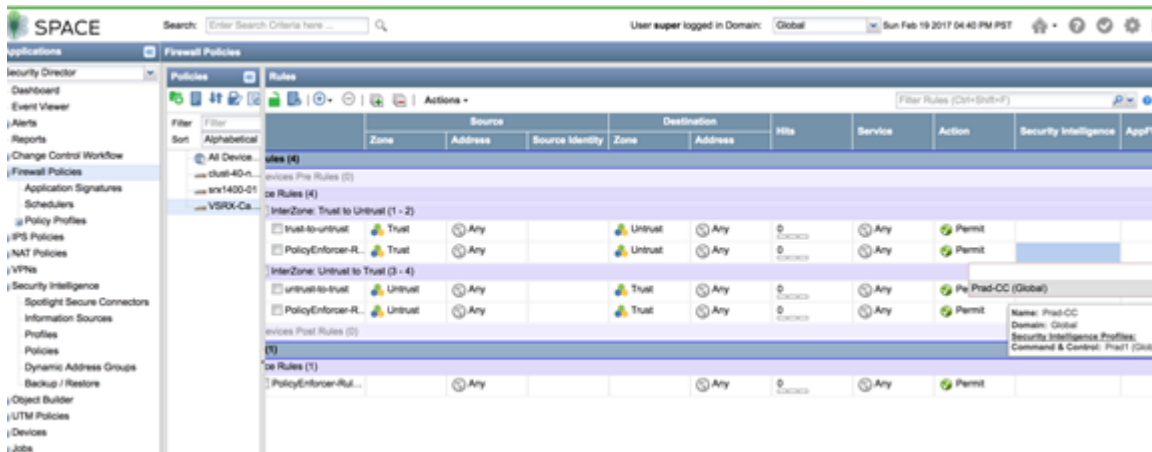

Policy Enforcer with ATP Cloud: C&C and Infected Host

This is how C&C and infected host feeds are configured on Security Director 16.1 and higher with Policy Enforcer:



NOTE: Policy Enforcer can be configured with Juniper ATP Cloud or Cloud feeds only to enable Command and Control feeds. The following instructions are for Cloud feeds only.



NOTE: In addition to the instructions provided here, Threat Prevention Guided Setup under **Configuration > Guided Setup > Threat Prevention** can be leveraged for a wizard driven workflow.

1. Configure a Juniper ATP Cloud Realm by navigating to **Configure > Threat Prevention > ATP Cloud Realms**. Click + to create a realm.

(You must have a Juniper ATP Cloud account to configure a realm. If you do not have an account please click on the link provided in the Juniper ATP Cloud Realm window to create one at the Juniper ATP Cloud account page. See [Creating Juniper ATP Cloud Realms and Enrolling Devices or Associating Sites](#) for details).



NOTE: You do not need a Juniper ATP Cloud premium license to create an account or realm.

2. Once the ATP Cloud realm is created, add a policy by navigating to **Configure > Threat Prevention > Policies**. Click + to create a policy. Enable the check box to **Include C&C profile in policy** and set threat score thresholds, actions, and logging.

Figure 166: Policy Enforcer: Create Threat Prevention Policy

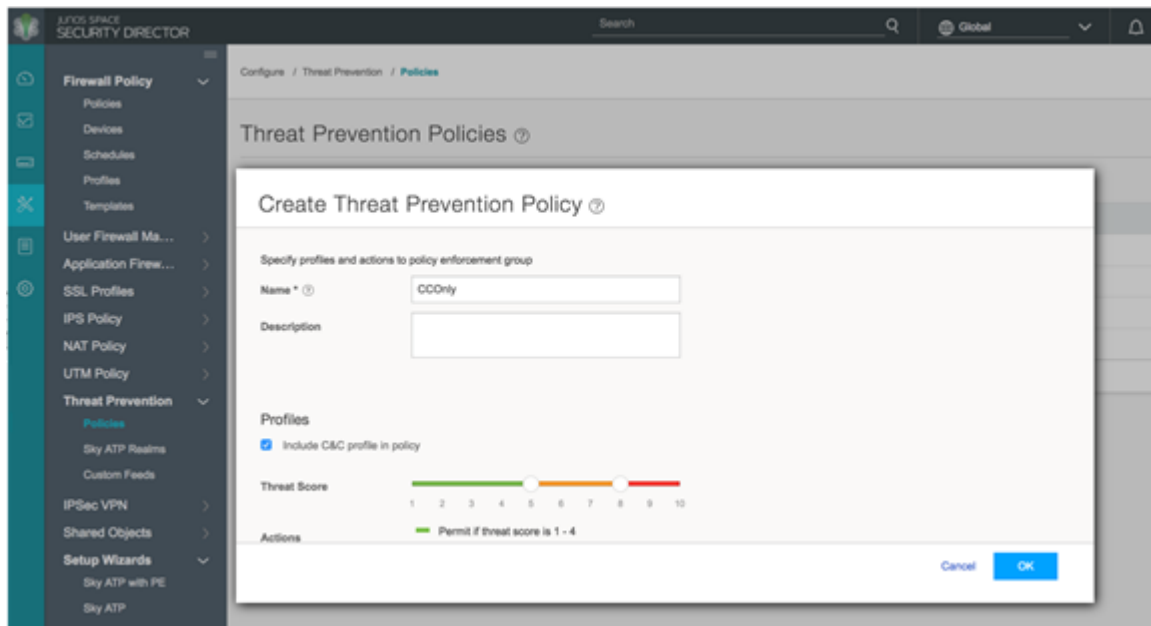


Figure 167: Policy Enforcer: Create Threat Prevention Policy, Select Threat Score and Logging

Threat Prevention Policies ?

Create Threat Prevention Policy ?

Threat Score

1 2 3 4 5 6 7 8 9 10

Actions

- Permit if threat score is 1 - 4
- Monitor if threat score is 5 - 7
- Block if threat score is 8 - 10

Log Setting

- Drop connection silently (recommended) ✓
- Drop connection silently (recommended)
- Close connection and do not send message
- Close connection and redirect to URL
- Close connection and send custom message

Cancel OK

3. Apply the threat prevention policy to a firewall policy.

Figure 168: Policy Enforcer: Apply Threat Prevention Policy to Firewall Policy

LUPO SPACE SECURITY DIRECTOR

Configure / Firewall Policy / Policies

Campus-Edge-Policy / Rules

Currently editing this policy...

App Firewall: Select an option

SSL Forward Proxy: Select an option

IPS: Off

UTM: Select an option

Threat Prevention Policy: Policy-Sky-InfectedHost

TPP-1

CampusA_FEG_Pol

TPP-2


Policy-Sky-InfectedHost

COOnly

Cancel OK

4. Publish, verify the configuration and update to the firewall.

Figure 169: Policy Enforcer: Update Firewall Policy

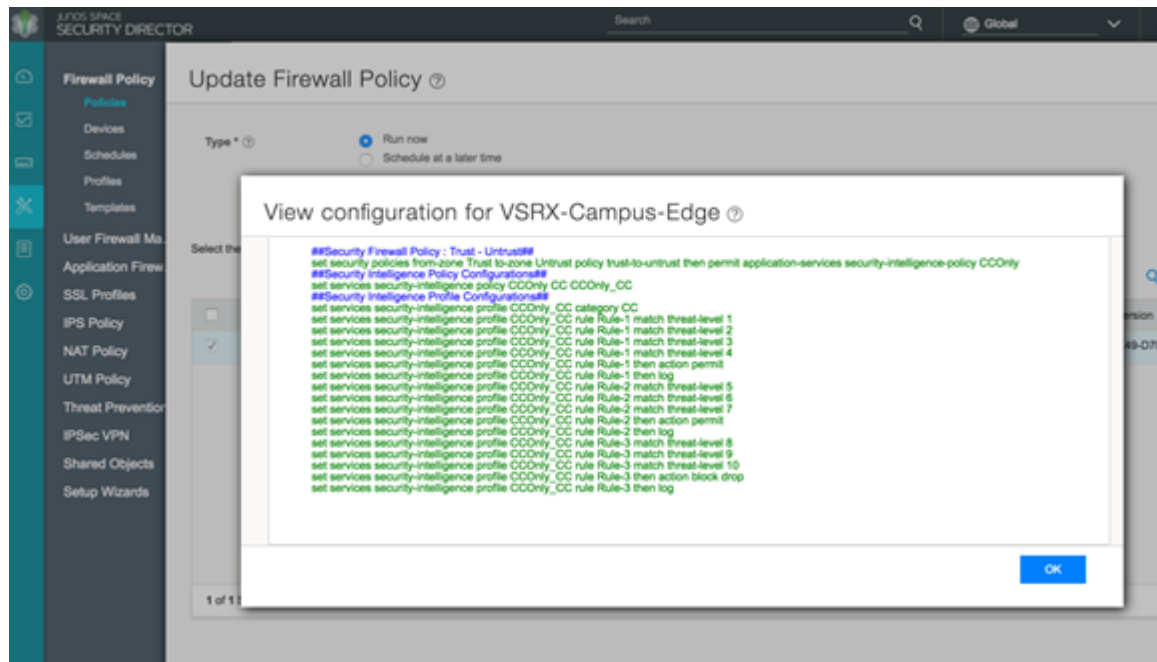

NOTE: If ATP Cloud is chosen as the ATP Cloud Configuration Type under **Administration > Policy Enforcer > Settings**, the workflow remains the same, but additional parameters become available for configuring anti-malware.


Configuring Custom Feeds

Spotlight Secure: Custom Feeds

This is how custom feeds were configured on Security Director 15.1 with Spotlight Secure:


1. Create an information source by navigating to **Security Intelligence > Information Source**. Click + to add a source. (Note that WebApp Secure is no longer supported.)

Figure 170: Spotlight Secure: Add Information Source

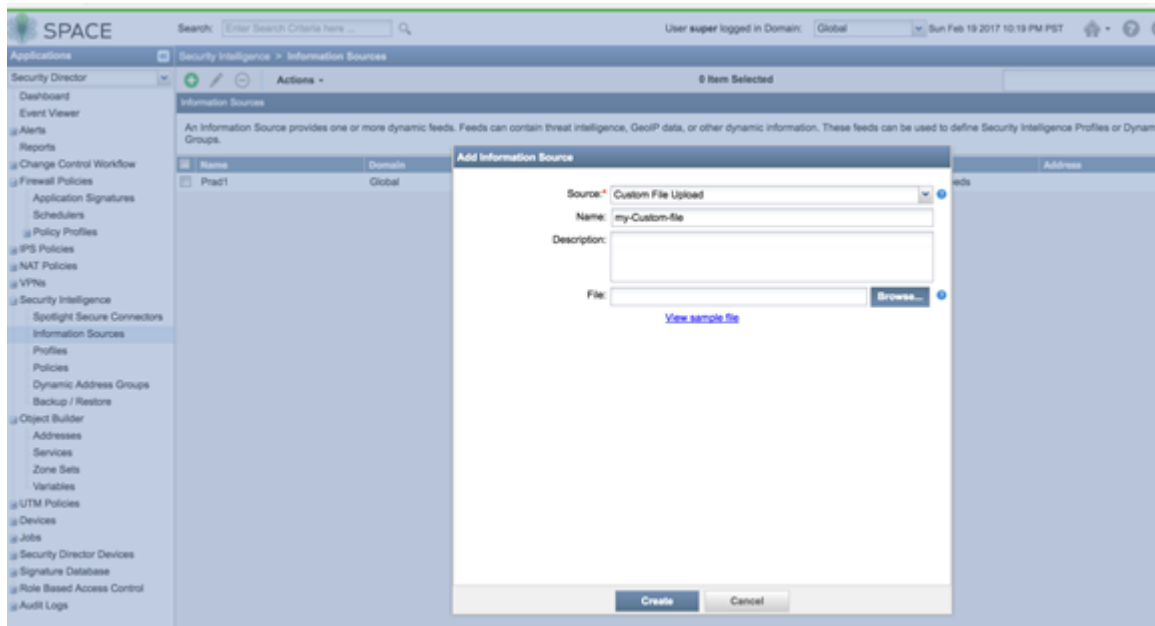


2. Upload from a custom file. Select **Source** as **Custom File Upload** and point to a local file.

Figure 171: Spotlight Secure: Configure Custom File Upload

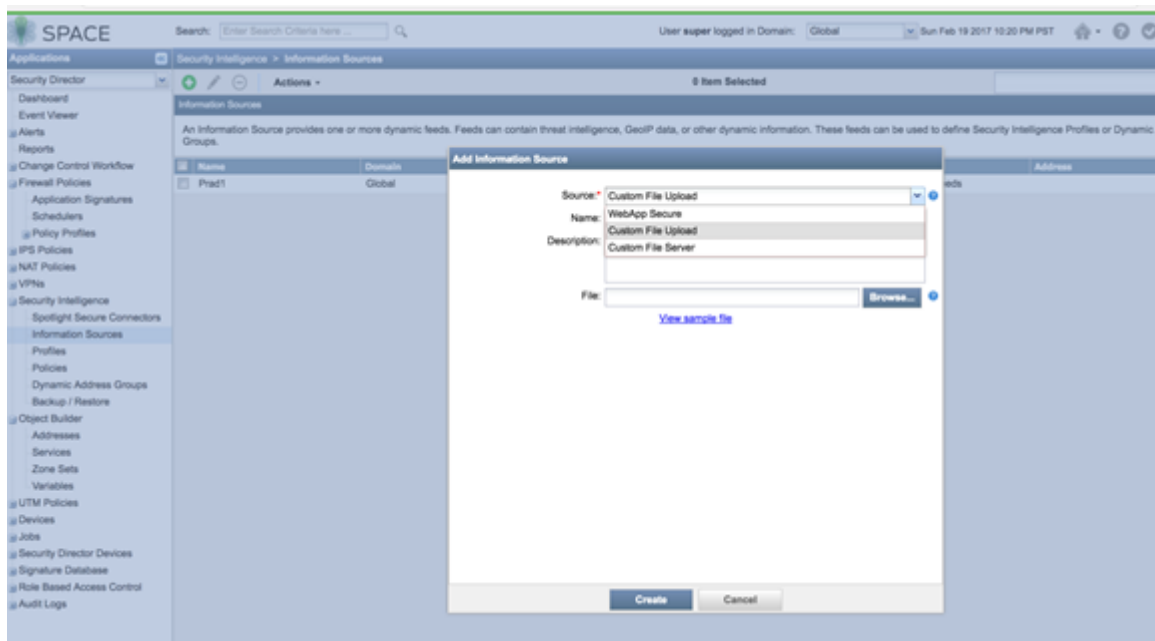


3. Configure a periodic upload from a remote file server. Provide the full URL to the plain text file you want to poll and enter server login information, **Username** and **Password**.

Figure 172: Spotlight Secure: Enter Server Login for Custom File Upload

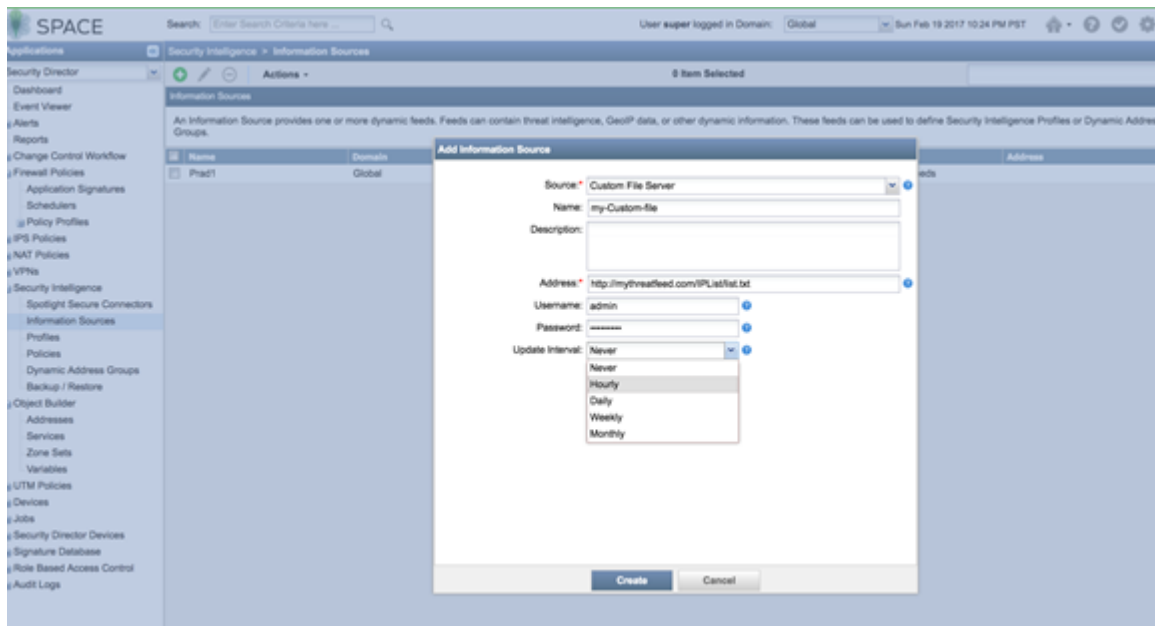


4. Create a dynamic object by navigating to **Security Intelligence > Dynamic Address Group**. Configure the feed as the custom feed that was created in the previous step.

Figure 173: Spotlight Secure: Select Custom Feed in Dynamic Address Group

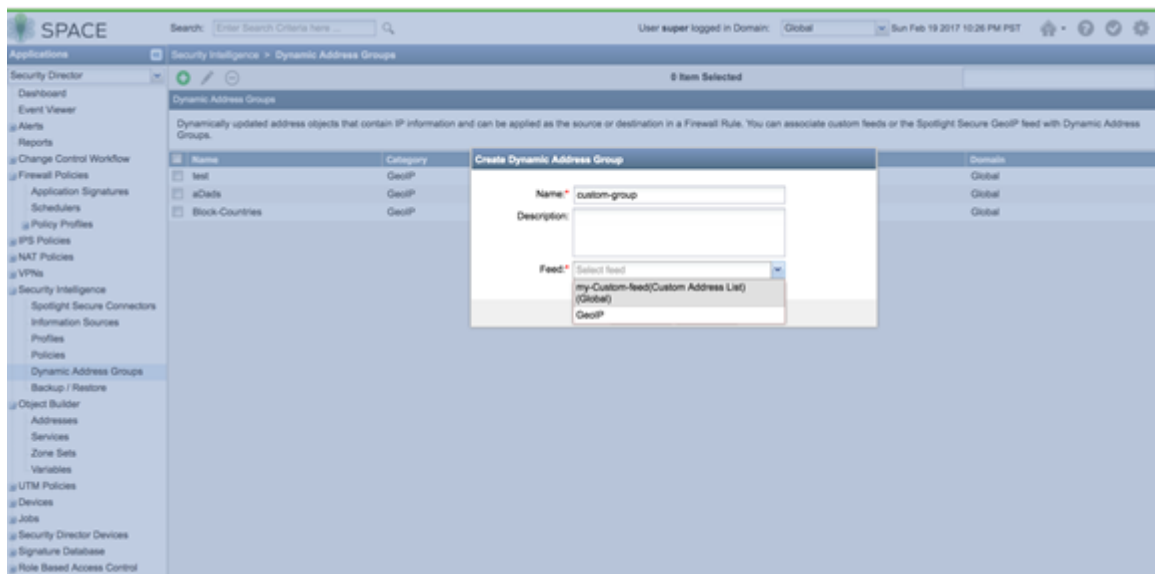

5. Use the dynamic object in a security policy.

Figure 174: Spotlight Secure: Select Dynamic Address in Security Policy

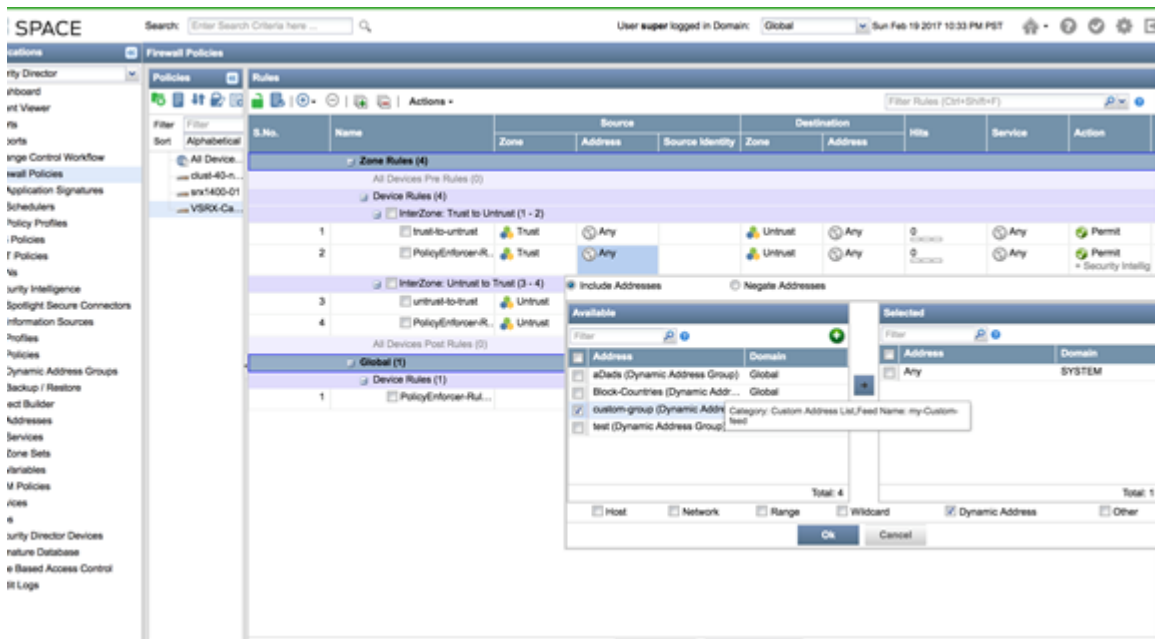

6. Configure a custom feed as an allowlist or blocklist by navigating to **Security Intelligence > Profiles**. Edit **Global Allow List** or **Global Back List** to add a custom feed created in the previous steps.

Policy Enforcer with ATP Cloud: Custom Feeds

This is how custom feeds are configured on Security Director 16.1 and higher with Policy Enforcer:



NOTE: In addition to the instructions provided here, Threat Prevention Guided Setup under **Configuration > Guided Setup > Threat Prevention** can be leveraged for a wizard driven workflow.

Policy Enforcer supports manually adding or uploading custom feed information from a file server. The custom feed can be a dynamic object, infected hosts list, allowlist or blocklist which can then be used within the match criteria of a firewall rule.

1. Create Custom Feeds by navigating to **Configure > Threat Prevention > Custom Feeds**. Click + to create a new feed.
2. Provide a Name and Description for the custom feed and choose the tab for the type of feed: **Dynamic Address**, **Blocklist**, **Allowlist** or **Infected Host**.
3. Manually configure the IP list or upload it from a local file. The IP list can be defined as individual IP addresses, IP address ranges, or subnets. See *Creating Custom Feeds* for complete details.




NOTE: Dynamic objects can be used within a firewall policy to match criteria as a source or destination address object.



NOTE: Policy Enforcer supports only cloud based C&C feeds and not custom C&C feeds. Policy Enforcer APIs can be used to extend this functionality.

4. Upload a local file. Select the **Upload file** option in the right corner of the page.
5. If you have configured an allowlist, downloads from those IP addresses are considered trusted. For blocklists, all downloads from those IP addresses are blocked. Dynamic objects can be used within a firewall policy match criteria as a source or destination address object.

Figure 175: Policy Enforcer: Use Dynamic Addresses in Firewall Policy

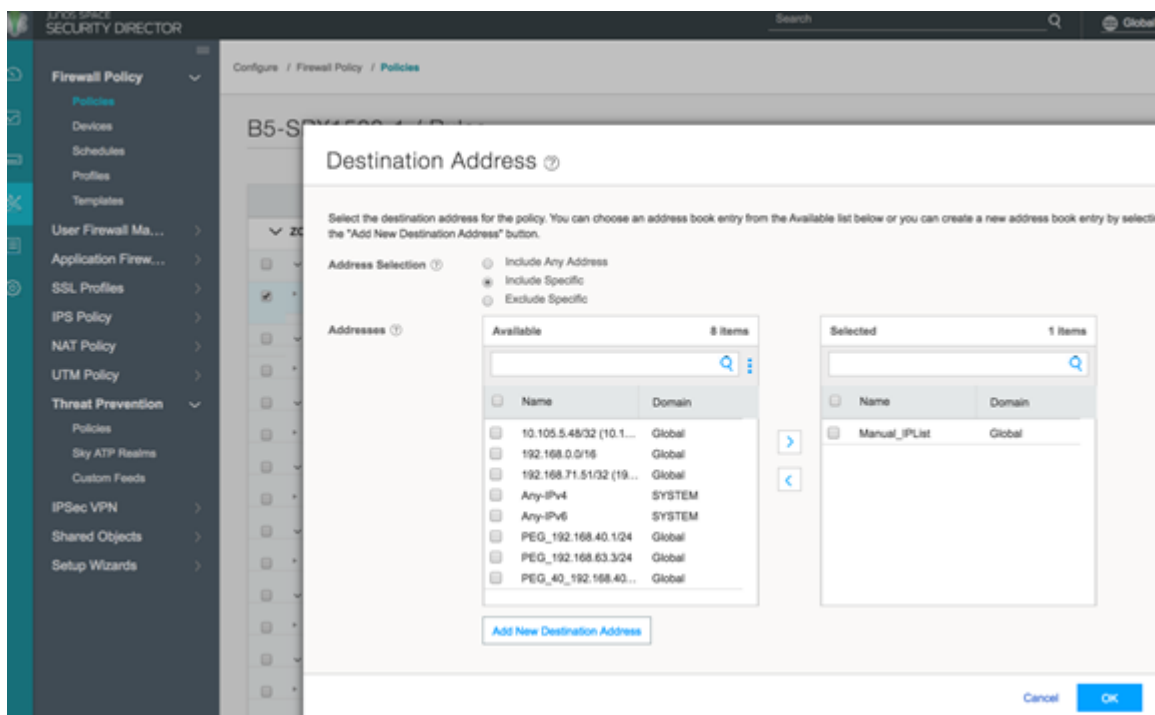


Configuring Geo IP

Spotlight Secure: Geo IP

This is how Geo IP feeds were configured on Security Director 15.1 with Spotlight Secure:


1. Create a GeoIP object under dynamic object by navigating to **Security Intelligence > Dynamic Address Group**. Select the feed as **GeoIP** and pick the countries from the drop down list.

Figure 176: Spotlight Secure: Create Geo IP with Dynamic Address Group

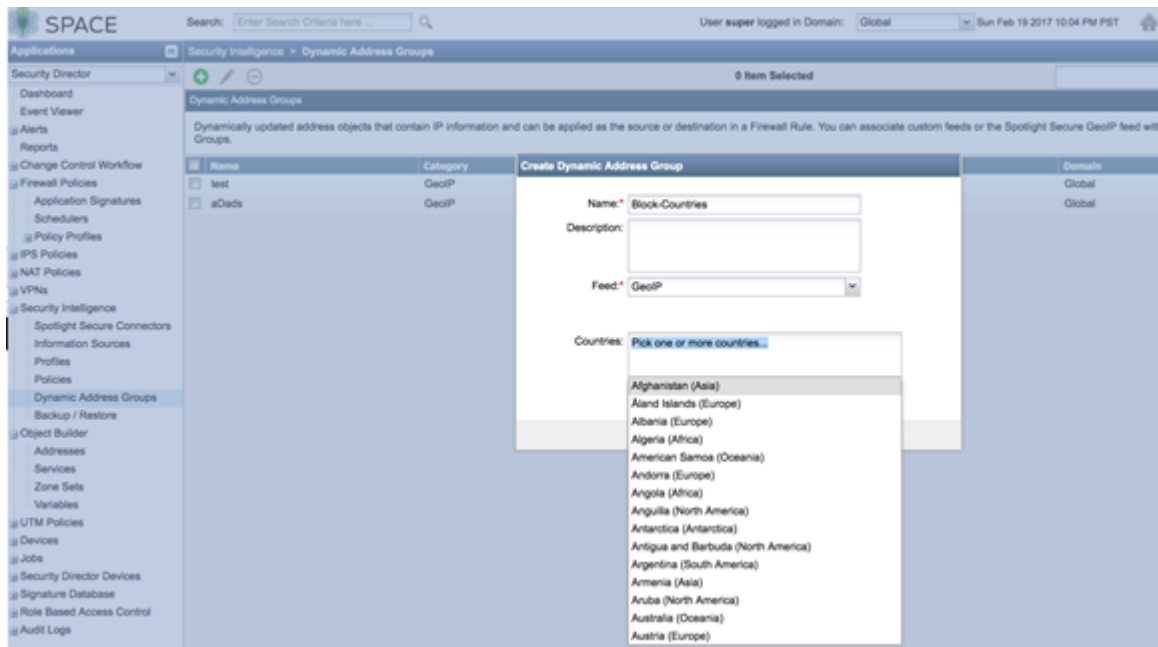

2. Use the Geo IP object in a firewall policy.

Figure 177: Spotlight Secure: Use Geo IP in Firewall Policy

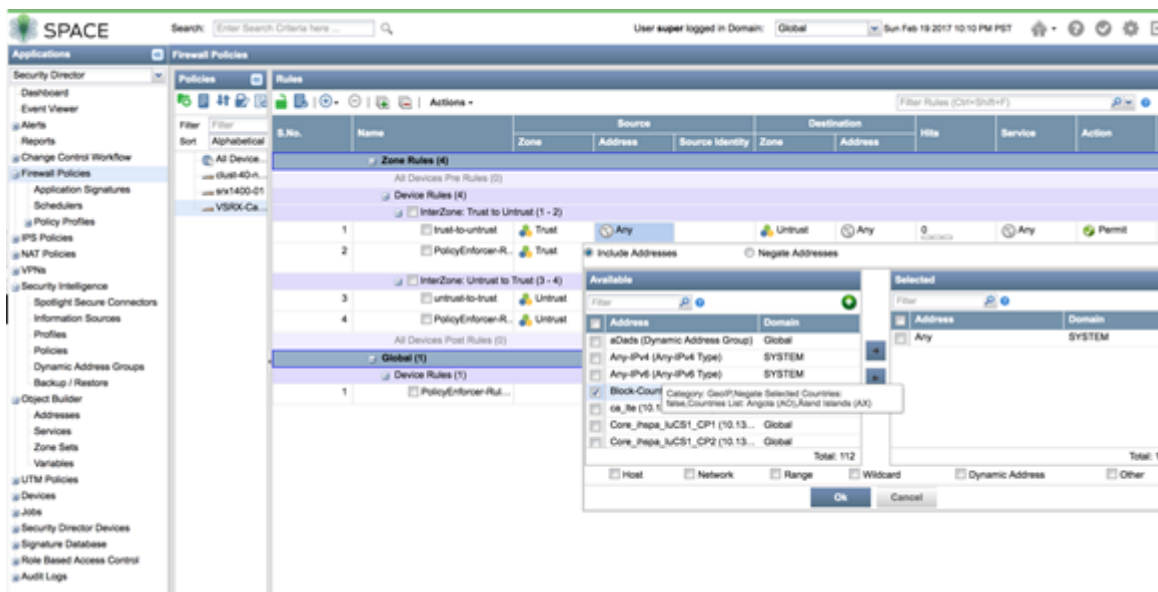


Policy Enforcer with ATP Cloud: Geo IP

This is how Geo IP feeds are configured on Security Director 16.1 and higher with Policy Enforcer:


1. Define GeoIP objects that can then be used within the match criteria of a firewall policy by navigating to **Configure > Shared Objects > Geo IP**. Create a Geo IP feed and choose countries to include from the list. (This feature requires a SecIntel or Juniper ATP Cloud license.)

Figure 178: Policy Enforcer: Create Geo IP

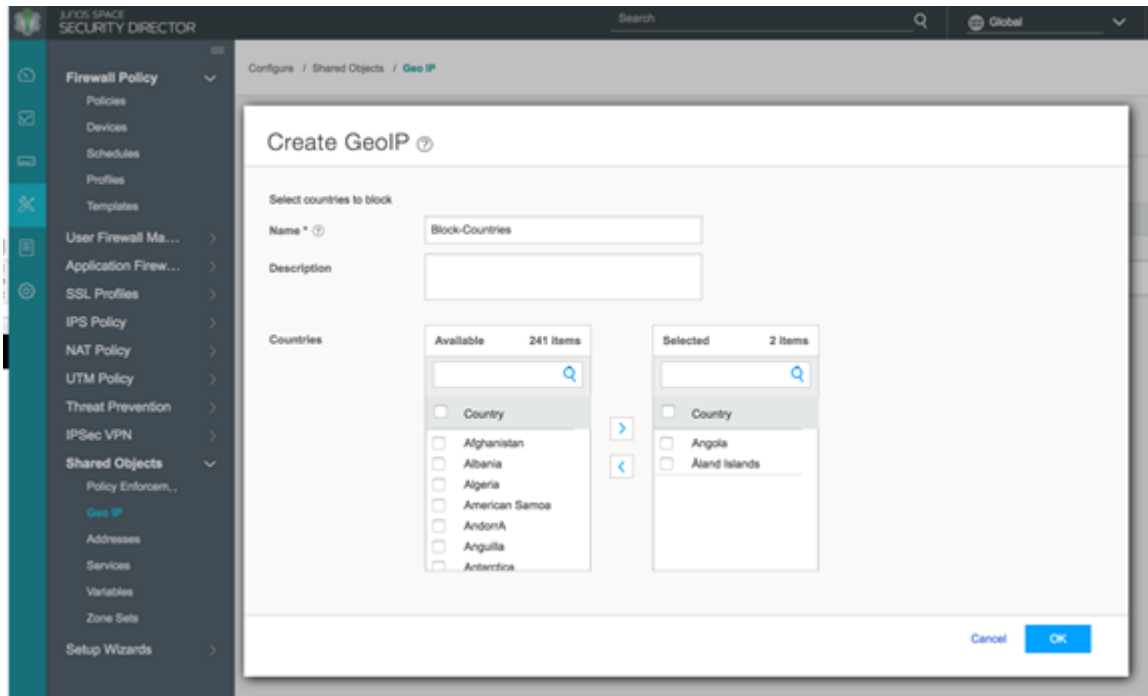

2. Use the Geo IP feed you created as the source or destination address in a firewall policy.

Figure 179: Policy Enforcer: Use Geo IP in the Firewall Policy

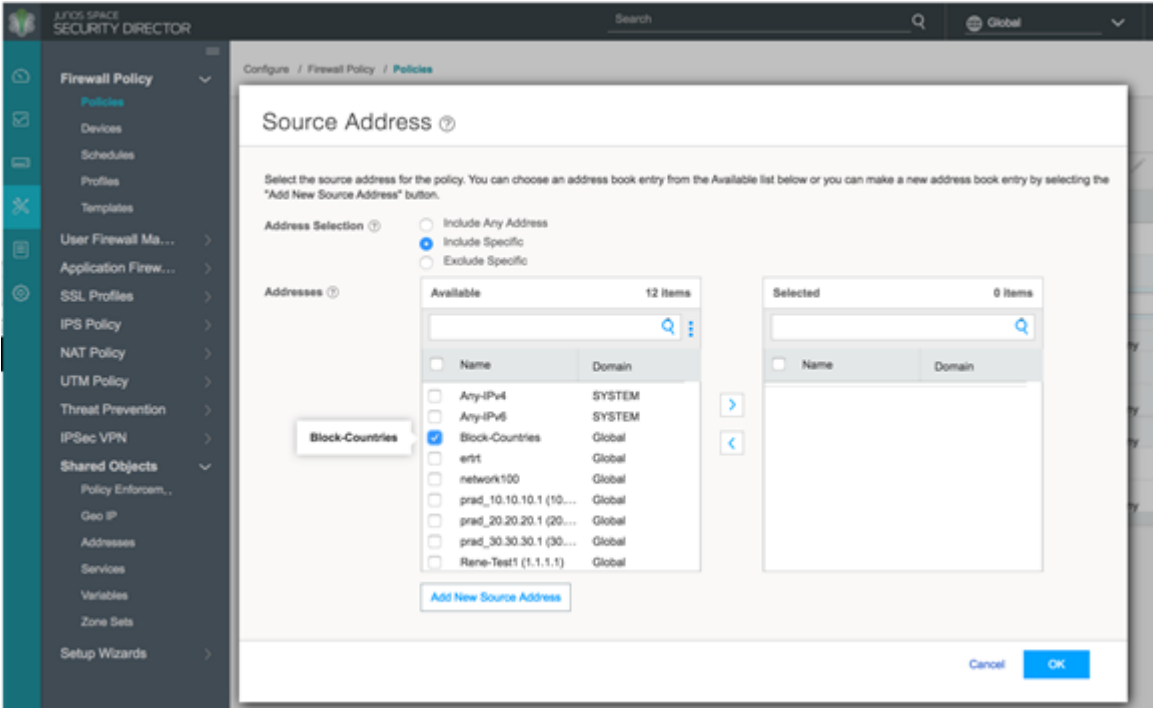



Reports

[Reports](#) | 1376

Reports

IN THIS CHAPTER

- [Creating Log Report Definitions | 1376](#)
- [Creating Policy Analysis Report Definitions | 1380](#)
- [Creating Bandwidth Report Definitions | 1383](#)
- [Reports Overview | 1385](#)
- [Using Reports | 1386](#)
- [Using Report Definitions | 1388](#)
- [Editing Report Definitions | 1389](#)
- [Deleting Report Definitions | 1390](#)
- [Managing Report | 1390](#)
- [Report Definition Main Page Fields | 1393](#)

Creating Log Report Definitions

Use this page to create log report definitions. Log-based reports help you to schedule reports based on default reports and default filters defined. You can also generate reports with different data criteria, including filters, aggregation criteria, and time range.

Before You Begin

- Read the ["Reports Overview" on page 1385](#) topic.
- Review the Reports main page for an understanding of your current data set. See ["Using Report" on page 1390](#) for field descriptions.

To configure a log report definition:

1. Select **Report > Report Definitions**.
2. Click **Create** and then select **Log Report Definition**.
3. Complete the configuration according to the guidelines provided in the [Table 376 on page 1377](#).

- 4. Click **Preview as PDF** to review the configuration.
- 5. Click **OK** to save the report definition.
- 6. Click **Send Report Now** to send the report through e-mail to the recipient immediately.

A new log report definition with the defined configurations is created. You can use the created policy definition to identify the issues with the firewall rules.

Table 376: Log Report Definition Settings

| Settings | Guidelines |
|----------------------------|--|
| <i>General Information</i> | |
| Report Name | Enter a unique name for the report definition that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters |
| Description | Enter a description for the report definition; maximum length is 1024 characters. |
| <i>Content</i> | |

Table 376: Log Report Definition Settings (*Continued*)

| Settings | Guidelines |
|--------------------------------|--|
| Use Data Criteria from Filters | <p>Click Use Data Criteria from Filters.</p> <p>Select the data criteria from the list of default and user-created filters that are saved from the Events and Logs page.</p> <p>The details of the filters displayed are:</p> <ul style="list-style-type: none"> • Filter Name—Name of the filter. • Filter Description—Description of the filter. • Group By—Select group by option. • Time Span (Last)—Select a period in Minutes/Hours/Days/Weeks/Months or select a time range to generate reports. • Filter By—Specify the filter criteria based on which the report must be generated. <p>Example: If you want to generate a report with event category as antivirus and event name as AV_VIRUS_Detected_MT, then the value must be: <i>Event Category = antivirus AND Event Name = AV_VIRUS_DETECTED_MT.</i></p> <ul style="list-style-type: none"> • Chart—Select the chart type for the report. • Show Top—Select the number of top records to be displayed in the generated report. Valid range is 1 to 1000. <p>NOTE: The default time stamp value is last 3 hours.</p> |
| <i>Schedule</i> | |

Table 376: Log Report Definition Settings (*Continued*)

| Settings | Guidelines |
|------------------|---|
| Add Schedule | <p>Click Add Schedule.</p> <p>Select the type of report schedule that you want to use:</p> <ul style="list-style-type: none"> • Run now—Select this option to schedule and publish the configuration at the current time. • Schedule at a later time—Select this option if you want to schedule and publish the configuration at a later time. <p>Select the recurring schedule for report generation. The available options are:</p> <ul style="list-style-type: none"> • Repeat—Select this option to generate the report on an hourly, daily, weekly, monthly, or yearly basis. • Every—Select the number of days, weeks, or months for which the recurring report will be generated. • Ends—Select the end date and end time for the report. |
| <i>Email</i> | |
| Email Recipients | <p>Click Add Email Recipients</p> <ul style="list-style-type: none"> • Recipients—Enter or select the e-mail addresses of the recipients. By default, you can search by first name and select registered users. You can also type in external email addresses. • Subject—Enter the subject for the e-mail notification. • Comment—Enter the comments for the e-mail notification. <p>NOTE: The reports are not sent if a specified recipient does not have permission for a device or domain included in the report configuration when the report is generated.</p> |

RELATED DOCUMENTATION

[Reports Overview | 1385](#)
[Creating Policy Analysis Report Definitions | 1380](#)

Creating Policy Analysis Report Definitions

Use the Reports page to create policy analysis report definitions. Policy analysis reports help you to analyze the firewall rule base for policies managed by Security Director. These reports also identify the firewall rules that contain issues.

Before You Begin

- Read the ["Reports Overview" on page 1385](#) topic.
- Review the Reports main page for an understanding of your current data set. See ["Report Definition Main Page Fields" on page 1393](#) for field descriptions.

Configuring Policy Analysis Report Definitions

To configure a policy analysis report definition:

1. Select **Reports > Report Definitions**.
2. Click **Create** and then select **Policy Analysis Report Definition**.
3. Complete the configuration according to the guidelines provided in the [Table 377 on page 1380](#).
4. Click **OK** to save the report definition.
5. Click **Preview as PDF** to review the configuration.
6. Click **Send Report Now** to send the report through e-mail to the recipient immediately.

A new policy analysis report definition with the defined configurations is created. You can use the created policy definition to identify the issues with the firewall rules.

Table 377: Policy Analysis Report Definition Settings

| Settings | Guidelines |
|----------------------------|---|
| <i>General Information</i> | |
| Report Name | Enter a unique name for the report definition that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |

Table 377: Policy Analysis Report Definition Settings (*Continued*)

| Settings | Guidelines |
|---------------------------|--|
| Description | Enter a description for the report definition; maximum length is 1024 characters. |
| <i>Content</i> | |
| Anomalies | <p>Select the anomaly type that you want to include in the report:</p> <ul style="list-style-type: none"> Shadowed—Select this option to identify any shadowed rules. A rule is shadowed when all the packets of a previous rule match with the current rule. By selecting this option, the shadowed rules are not evaluated. Redundant—Select this option to identify redundant or duplicate rules. A redundant rule performs the same action on the same packets as another rule. The security policy is not affected by removing the redundant rules. Expired Scheduler—Select this option to identify rules with an expired schedule. Logging Disabled—Select this option to identify rules that have predefined policy profile with all the logging functionality disabled. Unused Rules—Select this option to identify any unused rules. <p>NOTE: By default the report is generated for all types of anomalies.</p> |
| TimeSpan for unused rules | <p>Select time period for which you want to generate the report for unused rules. Default value is Last day.</p> <p>NOTE: This field is displayed only when you select Unused Rules option for Anomalies.</p> |
| Policy Type | <p>Select a firewall policy type based on which you want to create a policy analysis report definition:</p> <ul style="list-style-type: none"> Standard—The policy analysis report definitions are created based on standard firewall policies. Unified—The policy analysis report definitions are created based on unified firewall policies. |
| Firewall Policy | Select the firewall policy filter to be added by selecting the policy name from the list. |

Table 377: Policy Analysis Report Definition Settings (*Continued*)

| Settings | Guidelines |
|------------------|---|
| <i>Schedule</i> | |
| Add Schedule | <p>Click Add Schedule.</p> <p>Select the type of report schedule that you want to use:</p> <ul style="list-style-type: none"> • Run now—Select this option to schedule and publish the configuration at the current time. • Schedule at a later time—Select this option if you want to schedule and publish the configuration at a later time. <p>Select the recurring schedule for report generation. The available options are:</p> <ul style="list-style-type: none"> • Repeat—Select this option to generate the report on an hourly, daily, weekly, monthly, or yearly basis. • Every—Select the number of days, weeks, or months for which the recurring report will be generated. • Ends—Select the end date and end time for the report. |
| <i>Email</i> | |
| Email Recipients | <p>Click Add Email Recipients</p> <ul style="list-style-type: none"> • Recipients—Enter or select the e-mail addresses of the recipients. By default, you can search by first name and select registered users. You can also type in external email addresses. • Subject—Enter the subject for the e-mail notification. • Comment—Enter the comments for the e-mail notification. <p>NOTE: The reports are not sent if a specified recipient does not have permission for a device or domain included in the report configuration when the report is generated.</p> |

RELATED DOCUMENTATION

[Reports Overview](#) | [1385](#)

Creating Bandwidth Report Definitions

Use the Reports page to create bandwidth analysis report definitions. Bandwidth reports helps in analyzing the bandwidth usage of an application or an user. It gives you important information on bandwidth usage and helps you in identifying top applications and top users consuming more bandwidth.

Before You Begin

- Read the ["Reports Overview" on page 1385](#) topic.
- Review the Reports main page for an understanding of your current data set. See ["Report Definition Main Page Fields" on page 1393](#) for field descriptions.

Configuring Bandwidth Report Definitions

To configure a bandwidth analysis report definition:

1. Select **Reports> Report Definitions**.
2. Click **Create** and then select **Bandwidth Report Definition**.
3. Complete the configuration according to the guidelines provided in the [Table 378 on page 1383](#).
4. Click **Preview as PDF** to review the configuration.
5. Click **OK** to save the report definition.
6. Click **Send Report Now** to send the report through e-mail to the recipient immediately.

A new bandwidth analysis report definition with the defined configurations is created. You can use the created policy definition to identify the issues with the bandwidth usage.

Table 378: Bandwidth Report Definition Settings

| Settings | Guidelines |
|----------------------------|---|
| <i>General Information</i> | |
| Report Name | Enter a unique name for the report definition that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |

Table 378: Bandwidth Report Definition Settings (*Continued*)

| Settings | Guidelines |
|-------------------|--|
| Description | Enter a description for the report definition; maximum length is 1024 characters. |
| <i>Content</i> | |
| Show Top | Select the number of top records to be displayed in the generated report. Valid range is 1 to 1000. |
| Last | Select a period in Minutes/Hours/Days/Weeks/Months or select a time range to generate reports. |
| Type of Bandwidth | <p>Choose the type of bandwidth report that you want to generate:</p> <ul style="list-style-type: none"> • Application and User Usage—Select this option to generate a report on the bandwidth usage statistics by application and user. • Top Talkers—Select this option to generate a report on the source IPs, with the highest bandwidth usage or maximum sessions, over a specified period. |
| <i>Schedule</i> | |
| Add Schedule | <p>Click Add Schedule.</p> <p>Select the type of report schedule that you want to use:</p> <ul style="list-style-type: none"> • Run now—Select this option to schedule and publish the configuration at the current time. • Schedule at a later time—Select this option if you want to schedule and publish the configuration at a later time. <p>Select the recurring schedule for report generation. The available options are:</p> <ul style="list-style-type: none"> • Repeat—Select this option to generate the report on an hourly, daily, weekly, monthly, or yearly basis. • Every—Select the number of days, weeks, or months for which the recurring report will be generated. • Ends—Select the end date and end time for the report. |

Table 378: Bandwidth Report Definition Settings *(Continued)*

| Settings | Guidelines |
|------------------|--|
| <i>Email</i> | |
| Email Recipients | <div>Click Add Email Recipients</div> <ul style="list-style-type: none">• Recipients- Enter or select the e-mail addresses of the recipients. By default, you can search by first name and select registered users. You can also type in external email addresses.• Subject- Enter the subject for the e-mail notification.• Comment- Enter the comments for the e-mail notification. <p>NOTE: The reports are not sent if a specified recipient does not have permission for a device or domain included in the report configuration when the report is generated.</p> |

RELATED DOCUMENTATION

| |
|--|
| Reports Overview 1385 |
| Creating Log Report Definitions 1376 |
| Creating Policy Analysis Report Definitions 1380 |
| Deleting Report Definitions 1390 |
| Report Definition Main Page Fields 1393 |

Reports Overview

Reports are generated based on a summary of network activity and overall network status. These generated reports can help you to perform a trend analysis of your network's activities to study changes in traffic patterns. You can use the predefined reports as is, or you can build custom reports that meet specific needs.

**NOTE:** Starting in Junos Space Security Director Release 21.2, Tenant Systems (TSYS) devices are also supported.

Using reports, you can:

- Schedule reports based on the defined filters.
- Schedule reports based on the available default reports.
- Generate daily, weekly, and monthly reports, and send e-mail notifications to defined recipients.
- Generate reports with multiple sections, each section having its own criterion.

For example, if you are an administrator, you can schedule reports on a daily, weekly, or monthly basis, and configure them to include multiple criteria. You can also personalize the reports by adding your company logo, cover page, header, footer, and so on.

A Juniper Networks branded cover page is the default cover sheet of the reports. It contains the report title, name, and date of report creation. You can provide your company logo on the cover page along with the Juniper Networks logo. You can also provide the text for the footer and the logo for the header. If you do not provide the header and footer, the Juniper Networks branded header and footer are used. The generated report includes Table of Contents (TOC) with links to each section of the report. When the system generates a report, you and other designated recipients receive the report in PDF format through e-mail.

RELATED DOCUMENTATION

[Creating Log Report Definitions | 1376](#)

[Creating Policy Analysis Report Definitions | 1380](#)

[Deleting Report Definitions | 1390](#)

Using Reports

IN THIS SECTION

- [Logging | 1387](#)

Reports are generated based on a summary of network activity and overall network status. These generated reports can help you to perform a trend analysis of your network's activities to study changes in traffic patterns. You can use the predefined reports as is, or you can build custom reports that meet specific needs.

Using reports, you can:

- Schedule reports based on the defined filters.
- Schedule reports based on the available default reports.
- Generate daily, weekly, and monthly reports, and send e-mail notifications to defined recipients.
- Generate reports with multiple sections, each section having its own criterion.

For example, If you are an administrator, you can schedule reports on a daily, weekly, or monthly basis, and configure them to include multiple criteria. You can also personalize the reports by adding your company logo, cover page, header, footer, and so on.

A Juniper Networks branded cover page is the default cover sheet reports. It contains the report title, name, and date of report creation. You can provide your company logo on the cover page along with the Juniper Networks logo. You can also provide the text for the footer and the logo for the header. If you do not provide the header and footer, the Juniper Networks branded header and footer are used. The generated report includes Table of Contents (TOC) with links to each section of the report. When the system generates a report, you and other designated recipients receive the report in PDF format through e-mail.

Logging

Logs, also called event logs, provide vital information for managing network security incident investigation and response. Logging provides the following features:

- Receives events from SRX Series devices and application logs.
- Stores events for a defined period of time or a set volume of data.
- Parses and indexes logs to help speed up searching.
- Provides queries and helps in data analysis and historical events investigation.

RELATED DOCUMENTATION

[Creating Log Report Definitions | 1376](#)

[Creating Log Report Definitions | 1376](#)

[Deleting Report Definitions | 1390](#)

[Domain RBAC Overview | 1417](#)

Using Report Definitions

You can use the Report Definitions page to view a summary of network activity and overall network status. You can use the predefined reports as is, or you can build custom reports.

To use report definitions:

1. Select **Reports > Report Definitions**.

The Report Definitions page is displayed.

2. Click a column header. The available options are:

- Sort Ascending—Sorts reports in ascending order; for example, A to Z or 1 to 10.
- Sort Descending—Sorts reports in descending order; for example Z to A or 10 to 1.
- Show or Hide Columns—Provides a list of columns with check boxes to add or remove columns from the report definitions table. [Table 379 on page 1388](#) lists the columns that you can add to the table or remove from the table.
- Check boxes—Each row has a check box. Select the check box to perform operations like, run now, preview as PDF, send report, edit recipients, edit schedule, clone, edit the report definitions, and delete the report definitions.

By default, some predefined reports are available.

Table 379: Report Definitions Columns

| Field | Description |
|----------------|---|
| Name | Name of the report (user-created or predefined). |
| Description | Description of the report definition. |
| Type | Type of report definition used such as log reports, bandwidth report, or policy analysis reports. |
| Report Content | Details of the sections in the report such as Top Applications, Top Applications Blocked, Top Roles, and so on. |
| Schedule | Report generation schedule such as daily, weekly, or monthly. |

Table 379: Report Definitions Columns *(Continued)*

| Field | Description |
|----------------|---|
| Recipients | Recipients of the generated reports. |
| Last Generated | Time when the last report was generated, along with the status. |
| Job ID | Job ID of the report. |

RELATED DOCUMENTATION
[Reports Overview | 1385](#)
[Creating Policy Analysis Report Definitions | 1380](#)
[Deleting Report Definitions | 1390](#)
[Managing Report | 1390](#)
Editing Report Definitions

To edit a report definition:

1. Select **Reports > Report Definitions**.

The Report Definitions page appears.

2. Select a report definition by clicking the appropriate check box.

3. On the upper right side of the Report Definitions page, click the **Edit** button.

The edit report definition page is displayed. The options available on the create report definition page are available for editing.

4. Click **OK** to save your changes.

RELATED DOCUMENTATION
[Reports Overview | 1385](#)
[Creating Log Report Definitions | 1376](#)
[Creating Policy Analysis Report Definitions | 1380](#)

Deleting Report Definitions

You can clear all unwanted report definitions that are not used anywhere in your network.

To delete a report definition:

1. Select **Reports > Report Definitions**.

The report definitions page appears.

2. Select the report definition that you want to delete, and then select the (-) minus sign. An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete your selection.

The delete report notification is displayed.

4. Click **OK**.



NOTE: An error message appears if the report definition is used by any object.

RELATED DOCUMENTATION

[Reports Overview | 1385](#)

[Creating Policy Analysis Report Definitions | 1380](#)

[Report Definition Main Page Fields | 1393](#)

Managing Report

Before You Begin

You can perform various actions using reports, such as run a report immediately, edit a schedule, edit e-mail recipients, preview a report in pdf format, send reports, clone reports, and view report definition details.

To perform these actions:

1. Select **Reports > Report Definitions**.
2. Select the report definition and then right-click the report definition or click the **More** drop-down list.

3. Select the appropriate action from the drop-down list:

Run Now—Starting in Junos Space Security Director Release 16.1, you can select the **Run Now** option that runs the report immediately and provides a link to view the report in pdf format. You can view the archived reports by clicking the **Generated Reports** link on the left navigation pane. This option is also available as the **Run Now** button on the Report Definitions page.

- a. Configure according to the guidelines provided in the [Table 380 on page 1392](#).
- b. Click **OK**. The report is generated and a link is displayed to download the report in pdf format.

Preview as PDF—You can preview the generated report in pdf format. You can generate the report as needed.

- a. Configure according to the guidelines provided in the [Table 380 on page 1392](#).
- b. Click **OK**. The report is generated and a link is displayed to download the report in pdf format.

Send Report—Sends the report through e-mail to the recipient. The user receives a notification once the report is sent. The user can also use the job ID to see more details of the job. You can generate the report as needed.

- a. Configure according to the guidelines provided in the [Table 380 on page 1392](#).
- b. Click **OK**.
The Edit Recipients page is displayed.
- c. Modify or add the recipients, subject line, or any comments for the e-mail notifications.
- d. Click **OK** to send the report to the recipients.

A success message is displayed.

Edit Recipients—Allows user to edit or add the recipients, e-mail address, subject, and comments.

- a. Modify or add recipients, subject, and comments in the e-mail.
- b. Click **OK**.

Edit Schedule—Allows user to edit the schedule such as adding a recurrence, start date, end date, and time.

- a. Select an option:
 - **Run Now**—To schedule the job immediately.
 - **Schedule at a later time**—Select a date and time to schedule the job at a later period of time.
- b. Select **Recurrence** to add details, such as the interval at which job should run and when the job should end.

Clone— Allows the user to clone an existing report definition.

- a. Edit the details of the report.
- b. Click **OK**.

Detailed View—Starting in Junos Space Security Director Release 16.2, you can view the report name, description, report content type, report definition type, and its contents in Report Definition Details page.

You can also click the icon next to Name in the Report Definitions page to view the Report Definitions Details page.

Table 380: Run Now Settings

| Fields | Description |
|------------------|--|
| Types | <p>Choose an option from the following types:</p> <ul style="list-style-type: none"> • Run Now—To generate the report immediately, for the default time duration. • Custom Time Range Selection—To generate the report immediately, for a selected time range. <p>NOTE: If you select the type as Custom Time Range Selection, then Show Top and Time Span (Last) fields are displayed.</p> |
| Show Top | Select the number of top records to be displayed in the generated report. Valid range is 1 to 1000. |
| Time Span (Last) | Select a period in Minutes/Hours/Days/Weeks/Months or select Custom to choose the time range to generate reports. |
| Devices | <p>Select all devices or specific devices. By default, data is displayed for all the devices in the network.</p> <p>Choose the Selective option to select specific devices.</p> <p>Select devices from the Available column and click the right arrow to move these devices to the Selected column.</p> |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.2 | Starting in Junos Space Security Director Release 16.2, you can view the report name, description, report content type, report definition type, and its contents in Report Definition Details page. |
| 16.1 | Run Now —Starting in Junos Space Security Director Release 16.1, you can select the Run Now option that runs the report immediately and provides a link to view the report in pdf format. You can view the archived reports by clicking the Generated Reports link on the left navigation pane. |

RELATED DOCUMENTATION

[Reports Overview | 1385](#)

[Creating Policy Analysis Report Definitions | 1380](#)

[Creating Log Report Definitions | 1376](#)

Report Definition Main Page Fields

Use this page to get an overall, high-level view of your report definition settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 381 on page 1393](#) describes the fields on the Report Definitions page and [Table 382 on page 1394](#) describes the predefined report definitions.

Table 381: Report Definition Main Page Fields

| Field | Description |
|-----------------|---|
| Name | Name of the report (user-created or predefined). |
| Description | Description of the report definition. |
| Definition Type | Predefined report or Custom report. |
| Type | Type of report definition used such as log reports, bandwidth report, or policy analysis reports. |

Table 381: Report Definition Main Page Fields (Continued)

| Field | Description |
|----------------|---|
| Report Content | Details of the sections in the report such as Top Applications, Top Applications Blocked, Top Roles, and so on. |
| Schedule | Report generation schedule such as daily, weekly, or monthly. |
| Recipients | Recipients of the generated reports. |
| Last Generated | Time when the last report was generated, along with the status. |
| Job ID | Job ID of the report. |

**NOTE:**

- Starting in Junos Space Security Director Release 17.1, Antivirus, URL Report, Application and User Usage, IPS Threat Environment, and Threat Report predefined report definitions are added.
- Starting in Junos Space Security Director Release 16.2, IPS Report predefined report definition is added, which displays consolidated report of all IPS events.
- Starting in Junos Space Security Director Release 16.1, Top Destination Countries and Top Source Countries predefined report definitions are added.
- Starting in Junos Space Security Director Release 15.2, Top Firewall Rules and Top Encrypted Applications predefined report definitions are added.

Table 382: Predefined Report Definitions

| Name | Description |
|---------------------------|---|
| Top Firewall Service Deny | Displays report on top firewall service deny. |
| Top Services Detected | Displays report on top services detected in system by firewall. |

Table 382: Predefined Report Definitions (Continued)

| Name | Description |
|--------------------------------|---|
| Top Applications Blocked | Displays reports on top applications blocked. |
| Top Firewall Rules | Displays report on top firewall generating logs. |
| Top Source IPs | Displays report on top source IP addresses by count. |
| Top Source Countries | Displays report on top source IP addresses by countries. |
| Top Roles | Displays reports on top roles by count. |
| Top Destination Countries | Displays report on top destinations IP addresses by countries. |
| Top URLs Detected | Displays report on top URLs detected. |
| Top Firewall Deny Sources | Displays report on top firewall deny sources IP addresses. |
| Top SECINTEL and AAMW events | Displays report on top security intelligence and AAMW events. |
| Top Destination IPs | Displays report on top destination IP addresses by count. |
| Top Encrypted Applications | Displays report on top applications that are using encryption. |
| Top Web Apps | Displays reports on top Web applications by count. |
| Top Firewall Events | Displays report on top firewall events by count. |
| Top Anti Spam Detected | Displays report on top antispam detected. |
| Top Firewall Deny Destinations | Displays report on top firewall deny destinations IP addresses. |

Table 382: Predefined Report Definitions (Continued)

| Name | Description |
|------------------------------------|--|
| IPS Report | Displays a consolidated report on all IPS events statistics. |
| Antivirus | Displays a consolidated report on all antivirus events statistics. |
| URL Report | Displays a consolidated report on all URL events statistics. |
| Application and User Usage | Displays a report on the bandwidth usage statistics by application and user. |
| Top Talkers | Displays a report on the source IPs, with the highest bandwidth usage or maximum sessions, over a specified period. |
| IPS Threat Environment | Displays a consolidated report on all IPS threat events. |
| Threat Report | Displays the statistics related to top threats identified through IDP, Antivirus, Antispam, Screen, and Device Authentication failure events. |
| Threat Application Risk Assessment | Displays the statistics of threats and risks like top high risk applications, Threats and Malware, Top Bandwidth Usage by Apps and Top Malware Source Countries and so on for application risk assessment, threat and malware assessment, and user and web access assessment. |
| URLs visited per User | <p>Displays statistics related to a specific user. You can generate the report using run now option, preview as PDF or send it over an email. You can choose to have a complete record or top ten records for a user.</p> <p>The report displays various statistics for users such as top URLs by session, top high risk URLs visited, total bandwidth used by high risk URL categories, breakdown of URL categories visited, total session used on risky URLs, and so on.</p> |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 17.1 | Starting in Junos Space Security Director Release 17.1, Antivirus, URL Report, Application and User Usage, IPS Threat Environment, and Threat Report predefined report definitions are added. |
| 16.2 | Starting in Junos Space Security Director Release 16.2, IPS Report predefined report definition is added, which displays consolidated report of all IPS events. |
| 16.1 | Starting in Junos Space Security Director Release 16.1, Top Destination Countries and Top Source Countries predefined report definitions are added. |
| 15.2 | Starting in Junos Space Security Director Release 15.2, Top Firewall Rules and Top Encrypted Applications predefined report definitions are added. |

RELATED DOCUMENTATION

[Creating Log Report Definitions](#) | 1376

[Creating Policy Analysis Report Definitions](#) | 1380

[Deleting Report Definitions](#) | 1390

7

PART

Administration

[My Profile](#) | 1399

[Users and Roles-Users](#) | 1402

[Users and Roles-Roles](#) | 1417

[Users and Roles-Domains](#) | 1431

[Users and Roles-Remote Profiles](#) | 1443

[Logging Management](#) | 1449

[Logging Management-Logging Nodes](#) | 1451

[Logging Management-Statistics & Troubleshooting](#) | 1457

[Logging Management-Logging Devices](#) | 1459

[Monitor Settings](#) | 1464

[Signature Database](#) | 1467

[License Management](#) | 1474

[Migrating Content from NSM to Security Director](#) | 1478

[Policy Sync Settings](#) | 1482

[Insights Management](#) | 1489

My Profile

IN THIS CHAPTER

- [Modifying Your User Profile in Security Director | 1399](#)

Modifying Your User Profile in Security Director

Before You Begin

- Read the ["Overview of Users in Security Director" on page 1402](#) topic.

Use the My Profile page to modify some details of your user profile.

User accounts are created by the administrator and the My Profile page lets you modify some details of your user profile.

To modify the user profile:

1. Select **Administration > My Profile** or, in the Utility bar, click the arrow next to the username and select **My Profile**.

The My Profile page appears.

2. Modify your user profile according to the guidelines provided in [Table 383 on page 1399](#).
3. Click **OK**.

Your modifications are saved and a confirmation message is displayed.

Table 383: My Profile Settings

| Setting | Description |
|--------------------------|--|
| <i>Basic Information</i> | |
| Username | Displays your username; this field cannot be modified. |

Table 383: My Profile Settings (*Continued*)

| Setting | Description |
|--|---|
| Change Password | <p>Click Change Password to change your password.</p> <p>The Change Password page appears. Modify the fields according to the guidelines provided in Table 384 on page 1400.</p> |
| First Name | Modify your first name, which can be a string of alphanumeric characters and some special characters (- _ . @). The maximum length is 32 characters. |
| Last Name | Modify your last name, which can be a string of alphanumeric characters and some special characters (- _ . @). The maximum length is 32 characters. |
| E-Mail Address | Modify the e-mail address, which must be in the user@domain format. |
| <i>X.509 Certificate</i> | |
| Certificate Subject Name | <p>Displays the details of the certificate parameters, if a certificate was previously uploaded for the user.</p> <p>Click Clear to clear the certificate subject name and the X.509 certificate file.</p> |
| X.509 Certificate File | Upload an X.509 certificate file (.cer, .crt, or .pem extension), which is used to authenticate the user instead of the username and password. |
| <i>Object Visibility</i> | |
| Manage objects from all assigned domains | Select this check box to view and manage objects from all domains to which you are assigned. |

Table 384: Change Password Settings

| Setting | Description |
|--------------|-------------------------------|
| Old Password | Enter your existing password. |

Table 384: Change Password Settings *(Continued)*

| Setting | Description |
|------------------|--|
| Password | <p>Enter a password for the user.</p> <p>The password must be at least six characters long, contain at least one lowercase letter, contain at least one number that is not in the last position, must not contain the username or the username in reverse, and must not have three characters repeated in succession.</p> <p>The password strength indicator displays the efficiency of the password that you entered.</p> <p>NOTE: You cannot proceed to the next step if the password strength indicator shows that the password is weak.</p> |
| Confirm Password | <p>Reenter the password for confirmation.</p> <p>Click OK. The password is changed and you are taken to the My Profile page.</p> |

RELATED DOCUMENTATION

[Creating Users in Security Director | 1403](#)

[Overview of Users in Security Director | 1402](#)

Users and Roles-Users

IN THIS CHAPTER

- [Overview of Users in Security Director | 1402](#)
- [Creating Users in Security Director | 1403](#)
- [Editing and Deleting Users in Security Director | 1407](#)
- [Viewing and Terminating Active User Sessions in Security Director | 1408](#)
- [Viewing the User Details in Security Director | 1410](#)
- [Clearing Local Passwords for Users in Security Director | 1411](#)
- [Disabling and Enabling Users in Security Director | 1413](#)
- [Unlocking Users in Security Director | 1414](#)
- [Users Main Page Fields | 1415](#)

Overview of Users in Security Director

Junos Space Security Director supports the authentication and authorization of users. A Junos Space Super Administrator or User Administrator creates users and assigns roles to the users so that they can access and manage users, devices, services, and so on. To access and manage Junos Space Security Director, a user must be assigned one or more roles, which are validated during authorization.

Users receive permission to perform tasks only through the roles that they are assigned. In most cases, a single role assignment enables a user to view and to perform tasks on the objects within a workspace. For example, a user assigned the Device Manager role can discover devices, resynchronize devices, view the physical inventory and interfaces for devices, and delete managed devices. A user that is assigned the User Administrator role can create, modify, and delete other users in Junos Space, and perform actions, like creating, modifying, deleting, and so on, specific to roles, domains, and remote profiles.

Junos Space is shipped with the superuser account (username *super*) that has Super Administrator privileges, which provides full access to Junos Space. When you first log in to Junos Space as the default Super Administrator, you can perform all tasks and access all Junos Space system resources. Super administrators can create new users and assign roles and domains to those users to specify which tasks users can perform.

RELATED DOCUMENTATION

| |
|--|
| Creating Users in Security Director 1403 |
| Editing and Deleting Users in Security Director 1407 |
| Disabling and Enabling Users in Security Director 1413 |
| Viewing the User Details in Security Director 1410 |
| Domain RBAC Overview 1417 |

Creating Users in Security Director

Use the Users page to create new users and assign one or more roles and domains to the users. You assign roles and domains to users based on the network management tasks that they perform. You need to have the privileges of a super administrator or user administrator to create users.

Before You Begin

- Read the ["Overview of Users in Security Director" on page 1402](#) topic.
- Review the Users main page to view the existing users. See ["Users Main Page Fields" on page 1415](#) for field descriptions.

To configure a user:

1. Select **Administration > Users & Roles > Users**.
The Users page appears.
2. Click **Create**.
The Create User page appears.
3. Complete the configuration according to the guidelines provided in [Table 385 on page 1403](#).



NOTE: Fields marked with * are mandatory

4. Click **OK**.
A new user is created and you are returned to the Users page.

Table 385: User Settings

| Setting | Description |
|---------|-------------|
|---------|-------------|

General

Table 385: User Settings (Continued)

| Setting | Description |
|--------------------------------------|---|
| Username | Enter a unique string of alphanumeric characters and some special characters (- _ . @). No spaces are allowed and the maximum length is 128 characters. |
| Temporary Password | Select this option to generate a temporary password for the user. The user can log in with the temporary password and change the password using the My Profile page. |
| Temporary password will expire after | Specify the duration after which the temporary password expires. The user must log in within this duration and change the temporary password; after the expiry of the password, the user is not allowed to log in. The default is 24 hours and the range is 1 through 10,000 hours. NOTE: This field is visible only if the Temporary Password check box is selected. |
| Temporary Password | Displays the system-generated temporary password. Click the Generate button to generate another password NOTE: This field is visible only if the Temporary Password check box is selected. |
| E-mail password to user | Select this check box to send the generated temporary password to the e-mail address specified for the user. This check box is enabled only when the SMTP server is configured for Junos Space. If the e-mail does not reach the user or the password is lost, the administrator must generate a new temporary password. There is no option to resend the old temporary password. NOTE: This field is visible only if the Temporary Password check box is selected. |
| Password | Enter a password for the user. The password must be at least six characters long, contain at least one lowercase letter, contain at least one number that is not in the last position, must not contain the username or the username in reverse, and must not have three characters repeated in succession. The password strength indicator displays the efficiency of the password that you entered. NOTE: You cannot proceed to the next step if the password strength indicator shows that the password is weak. |

Table 385: User Settings (*Continued*)

| Setting | Description |
|--------------------------------|---|
| Confirm Password | Reenter the password for confirmation. |
| First Name | Enter a string of alphanumeric characters and some special characters (- _ . @). The maximum length is 32 characters. |
| Last Name | Enter a string of alphanumeric characters and some special characters (- _ . @). The maximum length is 32 characters. |
| E-Mail Address | Enter a valid e-mail address in the user@domain format. |
| Maximum Concurrent UI Sessions | Select the global setting or specify the maximum number of concurrent UI sessions allowed. The range is 0 through 999; 0 indicates unlimited concurrent UI sessions. |
| X.509 Certificate File | <p>Upload an X.509 certificate file (.cer, .crt, or .pem extension), which is used to authenticate the user instead of the username and password.</p> <p>Click Next to continue.</p> |
| <i>Role Assignment</i> | |
| Use Same Roles Assigned to | <p>Specify the username of an existing user whose roles you want to assign to the new user.</p> <p>The roles for the user that you selected are displayed in the Selected column of the Role field.</p> |
| Role | <p>Select one or more roles in the Available column and click the forward arrow to confirm your selection.</p> <p>The selected roles are displayed in the Selected column.</p> <p>NOTE: You must select at least one role.</p> |

Table 385: User Settings (Continued)

| Setting | Description |
|------------------------------|--|
| Job Management View | <p>Select whether the user can view only the jobs triggered by that user (the default) or all jobs.</p> <p>Click Back to return to the previous section or Next to continue.</p> |
| <i>Domain Assignment</i> | |
| Use Same Domains Assigned to | Specify the username of an existing user whose domains you want to assign to the new user. |
| Available Domains | <p>Select one or more domains to assign to the user. If you select a domain with subdomains, the subdomains are also included. You must select at least one domain.</p> <p>If you do not assign a domain to the user, the Global domain is assigned to the user by default.</p> <p>Click Back to return to the previous section or Finish to go to a summary page.</p> |

RELATED DOCUMENTATION
[Editing and Deleting Users in Security Director | 1407](#)
[Disabling and Enabling Users in Security Director | 1413](#)
[Viewing the User Details in Security Director | 1410](#)
[Unlocking Users in Security Director | 1414](#)
[Clearing Local Passwords for Users in Security Director | 1411](#)
[Viewing and Terminating Active User Sessions in Security Director | 1408](#)

Editing and Deleting Users in Security Director

IN THIS SECTION

- [Editing Users | 1407](#)
- [Deleting Users | 1407](#)

You can edit and delete users from the Users page. If the tasks performed by a user, or the user is no longer needed, then the administrator can delete the user.

Editing Users

To edit a user:

1. Select **Administration > Users & Roles > Users**.

The Users page appears.

2. Select the user that you want to edit, and click the pencil icon. Alternatively, right-click a user and select **Edit User**.

The Edit User page appears, showing the same fields that are presented when you create a user.

3. Edit the user fields as needed.



NOTE: Some fields cannot be edited.

4. The Edit User page appears, showing the same fields that are presented when you create a user.
5. Click **OK** to save the changes.

The changes are saved and you are returned to the Users page.

Deleting Users

To delete a user:

1. Select **Administration > Users & Roles > Users**.

The Users page appears.

2. Select the user that you want to delete, and click the X icon.

The Delete Users page appears, displaying the list of users selected for deletion.

3. (Optional) Delete users who have jobs that are in progress or scheduled to run later, by clearing the **Exclude users who have scheduled or in-progress jobs** check box..

4. Click **OK** to delete the selected users.

The users are deleted and you are returned to the Users page.

RELATED DOCUMENTATION

[Overview of Users in Security Director | 1402](#)

[Creating Users in Security Director | 1403](#)

Viewing and Terminating Active User Sessions in Security Director

IN THIS SECTION

- [Viewing Active User Sessions | 1408](#)
- [Terminating Active User Sessions | 1409](#)

As a Junos Space user administrator, you can view and terminate user sessions before starting a maintenance cycle. You can view the list of users who are logged in along with details of their IP addresses, including where they logged in and the duration of their sessions. You can view and terminate user sessions from the Users page.

Viewing Active User Sessions

To view active user sessions:

1. Select **Administration > Users & Roles > Users**.

The Users page appears.

2. Click the **Active Sessions** button.

The Active Sessions page appears, displaying the list of active user sessions. [Table 386 on page 1409](#) describes the fields on this page.

3. Click **Close** to close the page.

You are returned to the Users page.

Table 386: Active Sessions Fields

| Field | Description |
|--------------------|--|
| Username | Username of the user. |
| Current Domain | Current domain to which the user belongs. |
| IP Address | IP address of the client from which the user has logged in. |
| Fabric Node Name | Name of the node in the Junos Space fabric that is currently serving the user session. |
| Session Start Time | Date and time at which the user session was initiated. |
| Session Duration | Duration of the user session. |

Terminating Active User Sessions

To terminate one or more active user sessions:



NOTE: You cannot terminate sessions of a user with the username super

1. Select **Administration > Users & Roles > Users**.

The Users page appears.

2. Click the **Active Sessions** button.

The Active Sessions page appears, displaying the list of active user sessions.

3. Select the sessions that you want to terminate, and click **End Session**.

The End User Sessions page appears displaying the sessions selected for termination.

4. Specify whether you want to terminate the sessions immediately or later. If you specify that you want to terminate the sessions later, you must enter a date and time (in MM/DD/YYYY and HH:MM:SS AM/PM/24-hour formats).

5. Click **OK**.

The Job Detail: Terminate User Session page appears displaying the details of the session termination job.

6. Click **OK** to close the Job Detail page.

You are returned to the Users page.

RELATED DOCUMENTATION

- Overview of Users in Security Director | 1402
- Creating Users in Security Director | 1403

Viewing the User Details in Security Director

You can view the details of users, which allows you to view information about a user at a quick glance on one page, from the Users page.

To view the details of a user:

1. Select **Administration > Users & Roles> Users**.
The Users page appears.
2. Double-click the user for which you want to view the details. Alternatively, select a user and, from the More menu, click View User Details.
The User Details page appears. [Table 387 on page 1410](#) describes the fields on this page.
3. Click **Close**.
You are returned to the Users page.

Table 387: Users Details Page Fields

| Field | Description |
|-----------|---|
| Username | Username of the user. |
| Name | Name of the user. |
| E-mail | E-mail address of the user. |
| User Type | Indicates whether the user was created manually (local) or added automatically by Junos Space through remote login (remote). |
| Status | Indicates whether the user is enabled or disabled. Users are enabled by default. A user whose account is disabled cannot log in to Junos Space. |

Table 387: Users Details Page Fields (*Continued*)

| Field | Description |
|--------------------------------|---|
| Use Global Settings | Indicates whether the global settings must be used to determine the maximum number of concurrent UI sessions permitted for the user. |
| Maximum concurrent UI sessions | Maximum number of concurrent UI sessions permitted for the user. If this field is set, then this value overrides the global settings. |
| Locked Out | Indicates whether a user is locked out or not. Users who are locked out cannot log in to Junos Space and must request an administrator to unlock their user accounts. |
| Password Status | Indicates whether the user's password is active, expired, or temporary. |
| View Jobs | Indicates whether the user can view only the jobs triggered by that user or all jobs. |
| Assigned Roles | Roles to which the user is assigned. For the selected role, the Role Summary field on the right side of the page displays the tasks associated with that role. |
| Assigned Domains | Domains to which the user is assigned. Users can access only those objects within the domain to which they are assigned. |

RELATED DOCUMENTATION

[Creating Users in Security Director | 1403](#)

[Overview of Users in Security Director | 1402](#)

Clearing Local Passwords for Users in Security Director

The Clear Local Passwords feature lets you remove the local password that you assign to users when remote or remote-local authentication is enabled.



NOTE: This feature is enabled in Security Director only if you have configured remote authentication or remote-local authentication in Junos Space Network Management Platform.

A local password is an emergency password that allows remote users to log in to Junos Space using local authentication (username and password) in the following cases:

- If the authentication server goes down (in remote mode)
- If remote authentication fails (in remote-local mode)

To remove local users passwords, you must have the permission to perform the *Clear Local Passwords* action. However, if you are logged in to Security Director, you cannot perform this action for the user account that you used for logging in.

To clear local passwords for one or more users:

1. Select **Administration > Users & Roles > Users**.

The Users page appears.

2. Select the users for whom you want to clear the local passwords. From the More or right-click menu, select **Clear Local Passwords**.

The Clear Local Passwords page appears, displaying the list of users for whom you want to remove the local passwords.

3. Click **Clear Local Passwords** to confirm that you want to clear the local passwords for the selected users.

The local passwords for the selected users are cleared and you are returned to the Users page.

RELATED DOCUMENTATION

[Overview of Users in Security Director | 1402](#)

[Creating Users in Security Director | 1403](#)

Disabling and Enabling Users in Security Director

IN THIS SECTION

- [Disabling Users | 1413](#)
- [Enabling Users | 1413](#)

You can disable and enable disabled users from the Users page. The Status column on the Users page displays the status of the users.

Administrators can disable users to prevent them from logging into Security Director and performing any actions. By default, all users are enabled.



NOTE: You cannot disable your own user account or the super user account (username *super*).

When a user is disabled and tries to log in, a message indicating that the account is disabled is displayed. If the user is logged in at the time when the user is disabled, the system logs off the user and displays a message indicating that the user account is disabled.

Disabling Users

To disable one or more users:

1. Select **Administration > Users & Roles > Users**.
The Users page appears.
2. Select the users that you want to disable. From either the More or right-click menu, select **Disable Users**.
The Disable Users page appears, displaying the list of users selected for disabling.
3. Click **Yes** to confirm the disable operation.
The users are disabled and you are returned to the Users page.

Enabling Users

To enable one or more users:

1. Select **Administration > Users & Roles > Users**.
The Users page appears.

2. Select the disabled users that you want to disable. From either the More or right-click menu, select **Enable Users**.

The Enable Users page appears, displaying the list of users selected for enabling.

3. Click **Yes** to confirm the enable operation.

The users are enabled and you are returned to the Users page.

RELATED DOCUMENTATION

[Creating Users in Security Director | 1403](#)

[Overview of Users in Security Director | 1402](#)

Unlocking Users in Security Director

Junos Space Security Director locks out users who enter more than the permitted number of incorrect passwords. If your user account is locked out, then an error message is displayed when you try to log in to Security Director. You can try logging in from another client or request the administrator to unlock your account.

By default, a user is locked out after four unsuccessful login attempts. Administrators can configure the number of unsuccessful login attempts after which a user should be logged out in the Administration workspace of Junos Space Network Management Platform.

To unlock one or more users:

1. Select **Administration > Users & Roles > Users**.

The Users page appears.

2. Select the locked users that you want to unlock. From the More or right-click menu, select **Unlock Users**.

The Unlock Users page appears, displaying the list of users selected for unlocking.

3. Click **Yes** to confirm that you want to unlock the users.

The users are unlocked and you are returned to the Users page.

RELATED DOCUMENTATION

[Overview of Users in Security Director | 1402](#)

[Creating Users in Security Director | 1403](#)

Users Main Page Fields

Use the Users page to view, create, modify, and delete users. You can also disable and enable users, unlock users, clear local passwords, and view active sessions. Every user must be assigned at least one role and belong to at least one domain. You can filter and sort the users displayed, and view details of each user. [Table 388 on page 1415](#) describes the fields on this page.

Table 388: Users Main Page Fields

| Field | Description |
|-----------------|---|
| Username | Username of the user. |
| First Name | First name of the user. |
| Last Name | Last name of the user. |
| E-mail | E-mail address of the user. |
| Assigned Domain | Domains to which the user is assigned. Users can access only those objects within the domain to which they are assigned. |
| User Type | Indicates whether the user was created manually (local) or automatically by Junos Space through remote login (remote). |
| Status | Indicates whether the user is enabled or disabled. Users are enabled by default. A user whose account is disabled cannot log in to Junos Space. |
| Password Status | Indicates whether the user's password is active, expired, or temporary. |
| Locked Out | Indicates whether a user is locked out or not. Users who are locked out cannot log in to Junos Space and must request an administrator to unlock their user accounts. |

RELATED DOCUMENTATION

[Creating Users in Security Director](#) | 1403

Users and Roles-Roles

IN THIS CHAPTER

- [Domain RBAC Overview | 1417](#)
- [Creating Customized Roles in Security Director | 1424](#)
- [Understanding Roles in Security Director | 1426](#)
- [Editing, Cloning, and Deleting Roles in Security Director | 1426](#)
- [Viewing the Details of a Role in Security Director | 1428](#)
- [Importing and Exporting Roles in Security Director | 1429](#)
- [Roles Main Page Fields | 1430](#)

Domain RBAC Overview

IN THIS SECTION

- [About Domains | 1418](#)
- [About Objects or Services | 1420](#)
- [About Predefined Objects | 1424](#)

A *domain* is a sphere or a boundary around which you can interact with a system. A Junos Space Network Management Platform domain encompasses all Junos Space objects; it enforces access, controls visibility, and provides for management of network objects. By creating a domain, you create a container for interacting with the system. Devices are the key elements in a domain. You use domains and the devices within those domains to configure a device-management partitioning scheme allowing for role-based access control (RBAC).

Domains allow you to control and partition a network from the management point of view. You can create a network based on certain criteria while providing users with management access to their


devices. At the same time, domains allow sharing of objects and certain configuration enforcements. Objects in the Global domain can only be accessed in read-only mode by the child domains, if view parent is enabled. Access across peer domains is not allowed. This kind of network partitioning is required for both managed security service providers (MSSP) and enterprise customers. The Network Management Platform enables users to manage objects from all the allowed domains in the aggregated view. However, Security Director does not support this functionality. Starting in Security Director 15.2, RBAC is available on the Administration tab, under the Users & Roles section on the left navigation pane.

The following sections explain the impact of domain RBAC on Security Director objects and services.

About Domains

By default, Junos Space and, therefore, Security Director comes with only the Global domain defined. New domains can be created as child domains of the Global domain. When you create a domain, you work with roles and users. [Figure 180 on page 1418](#) shows a simple domain scheme that will be used as a reference throughout this document. For more information about creating domains, see "[Creating Domains in Security Director](#)" on page 1432.

Figure 180: Security Director Domains

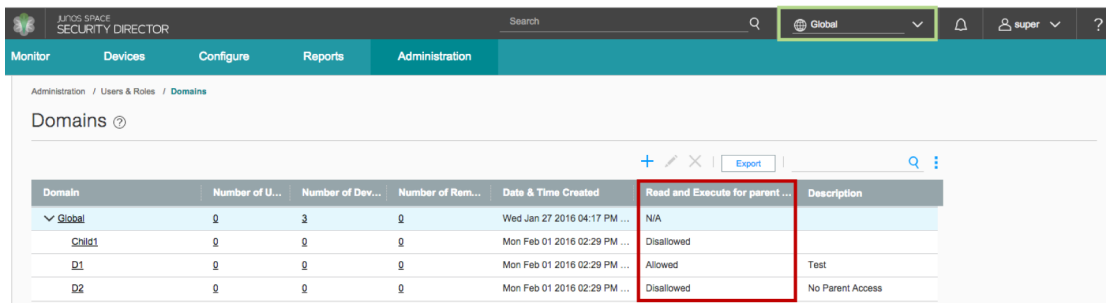


| Domain | Number of U... | Number of Dev... | Number of Rem... | Date & Time Created | Read and Execute for parent ... | Description |
|--------|----------------|------------------|------------------|------------------------------|---------------------------------|------------------|
| Global | 0 | 3 | 0 | Wed Jan 27 2016 04:17 PM ... | N/A | |
| Child1 | 0 | 0 | 0 | Mon Feb 01 2016 02:29 PM ... | Disallowed | |
| D1 | 0 | 0 | 0 | Mon Feb 01 2016 02:29 PM ... | Allowed | Test |
| D2 | 0 | 0 | 0 | Mon Feb 01 2016 02:29 PM ... | Disallowed | No Parent Access |

Working with Roles

Roles are used to group access permissions for easier assignment to users. For example, the Super Administrator role assigns read and write access to all aspects of Junos Space, Security Director, and the functions within. On the other hand, the Domain Administrator has read and write access to some functions, read-only access to other functions, and no access to some other functions. Security Director comes with several predefined roles that cannot be changed, including the Super Administrator and the Domain Administrator. User-defined roles can be created by cloning and then editing the predefined roles or by creating new roles from scratch. Users are assigned to roles during the creation of their accounts or by editing the user accounts after creation.

Users can be assigned to multiple roles. If a user is assigned to multiple roles that have conflicting permissions, the least restrictive permissions are applied to that user account. For example, suppose the Administrative Auditor role restricts users to only viewing report definitions and the Report Definition Administrator role allows users to modify report definitions. If a user is assigned to both roles, that user will be able to modify report definitions. [Figure 181 on page 1419](#) illustrates this principle.

Figure 181: Security Director Roles

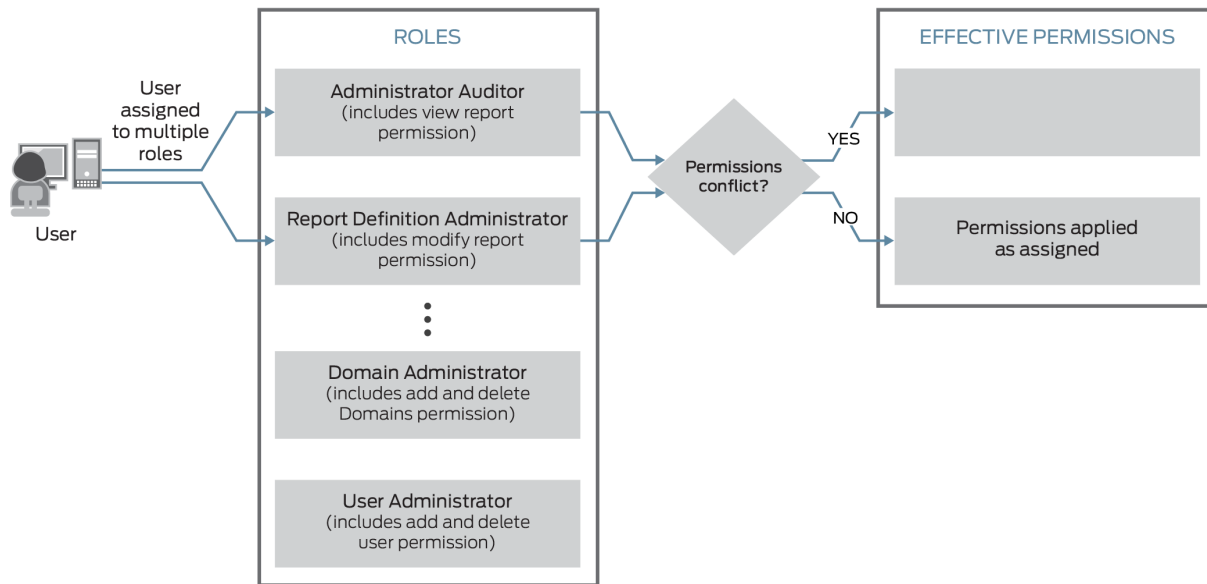

Working with Users

User accounts can be thought of as the recipients of RBAC policies. In Security Director, users are assigned to specific domains and to specific roles. Access to domains defines which devices and objects users can work with and assignment of users to roles defines what functions users can perform on the objects to which they have access. For more information about working with users, see ["Creating Users in Security Director" on page 1403](#).

[Figure 182 on page 1420](#) shows the Global domain view of the Junos Space users list. Note the Assigned Domain column outlined in green.

Figure 182: Security Director Users

| | Username | First Name | Last Name | Email | Assigned Domain | User Type | Status | Password Status | Locked Out |
|-------------------------------------|--------------|----------------|-----------|---------------------|-----------------|-----------|---------|-----------------|------------|
| <input type="checkbox"/> | auditor | Administrative | Auditor | auditor@example.com | Global | Local | Enabled | Active | No |
| <input checked="" type="checkbox"/> | noc_operator | NOC | Operator | nocop@example.com | GlobalD1 | Local | Enabled | Active | No |
| <input type="checkbox"/> | super | Open | Space | super@juniper.net | Global | Local | Enabled | Active | No |

About Objects or Services

Prior to domain RBAC, you only needed write permission for a domain to create an object or service in it. Now with domain RBAC, you also need access to a domain to create an object or service in that domain. For example, suppose you have domains D1, D2, and Global. To create an object in D1, you must switch to the D1 domain before you can create an object in that domain.



NOTE: You cannot create an object or service in one domain while you are in a different domain.

In Security Director Release 13.2 and later, the REST API cannot be used to create objects in child domains, even if the user account used with the API has write access to the child domain. All objects created through the REST API are created in the Global domain.

All the objects that are created internally as part of an operation are part of the domain in which the operation is triggered. For example, all audit logs for an operation are created in the domain in which the operation is triggered.


Reading or Viewing Objects or Services

You can view all objects in a domain to which you have access. In Security Director, you must switch the view to the D1 domain to view objects in that domain. If you have read access to both the D1 and D2 domains, you cannot see D2 domain objects from the D1 domain view, and vice versa. You can see objects in the Global domain from the D1 domain, provided the D1 domain has view parent permission. You cannot see D1 or D2 objects from the Global domain.

The ability to read or write objects in any given domain is dependent on switching your view to that specific domain from the Domains menu. However, Security Director also allows you to view objects in the parent domain as read-only if the view parent setting is enabled. For example, given the domain structure shown in [Figure 180 on page 1418](#), the resulting views of the shared address objects in

domains D1 and D2 are shown in [Figure 183 on page 1421](#) and [Figure 184 on page 1421](#) and respectively.


Figure 183: D1 Domain Addresses

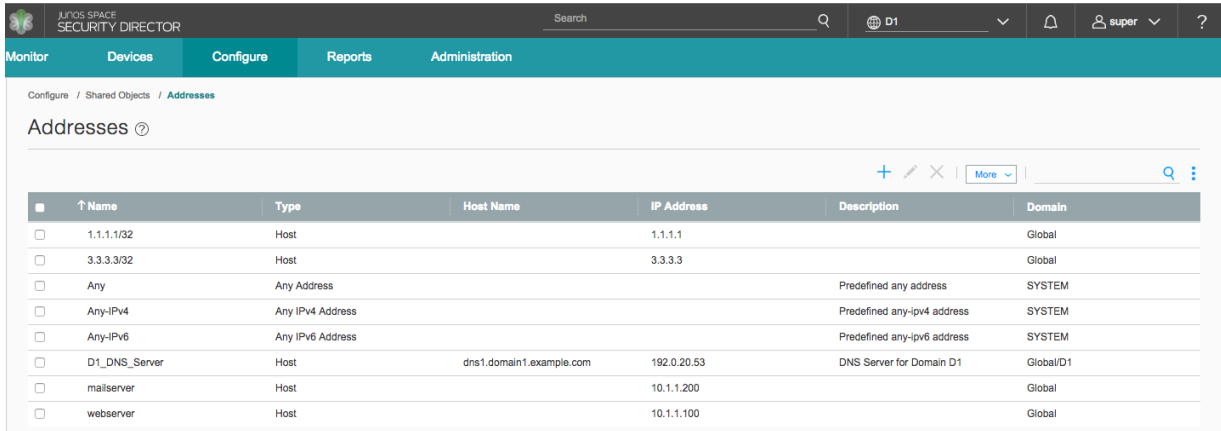

| | ↑ Name | Type | Host Name | IP Address | Description | Domain |
|--------------------------|---------------|------------------|--------------------------|-------------|-----------------------------|-----------|
| <input type="checkbox"/> | 1.1.1.1/32 | Host | | 1.1.1.1 | | Global |
| <input type="checkbox"/> | 3.3.3.3/32 | Host | | 3.3.3.3 | | Global |
| <input type="checkbox"/> | Any | Any Address | | | Predefined any address | SYSTEM |
| <input type="checkbox"/> | Any-IPv4 | Any IPv4 Address | | | Predefined any-ipv4 address | SYSTEM |
| <input type="checkbox"/> | Any-IPv6 | Any IPv6 Address | | | Predefined any-ipv6 address | SYSTEM |
| <input type="checkbox"/> | D1_DNS_Server | Host | dns1.domain1.example.com | 192.0.20.53 | DNS Server for Domain D1 | Global/D1 |
| <input type="checkbox"/> | mailserver | Host | | 10.1.1.200 | | Global |
| <input type="checkbox"/> | webserver | Host | | 10.1.1.100 | | Global |

In the D1 Domain view, address objects from the System, Global, and D1 Domains are visible. These address objects can be used with devices and policies in the D1 Domain.

Figure 184: D2 Domain Addresses

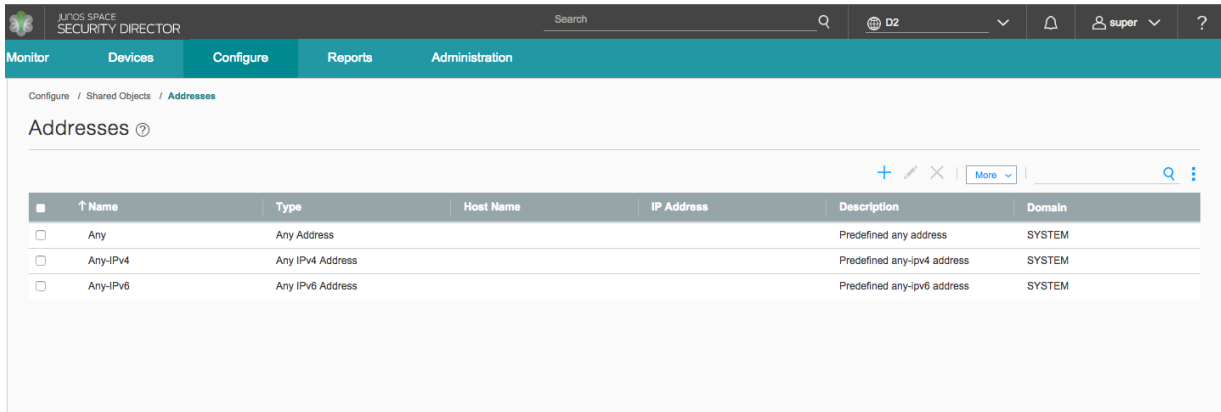

| | ↑ Name | Type | Host Name | IP Address | Description | Domain |
|--------------------------|----------|------------------|-----------|------------|-----------------------------|--------|
| <input type="checkbox"/> | Any | Any Address | | | Predefined any address | SYSTEM |
| <input type="checkbox"/> | Any-IPv4 | Any IPv4 Address | | | Predefined any-ipv4 address | SYSTEM |
| <input type="checkbox"/> | Any-IPv6 | Any IPv6 Address | | | Predefined any-ipv6 address | SYSTEM |

Because the view parent setting is disabled in D2, the only visible addresses in the D2 domain are the ones that exist in the System Domain. Any address created later in the D2 Domain would also show in this view.

Updating or Modifying Objects or Services

To modify a domain object through Security Director, you must switch to that domain. You cannot switch to a domain for which you do not have access. You cannot modify an object in one domain if you are in a different domain.

Modifying objects through REST is ID based. To modify an object in a domain, you must have write access to that domain and your user role must include modify permissions for the object type in question. Objects in the System domain are in read-only mode so you cannot modify them.

Deleting Objects or Services


To delete a domain object through Security Director, you must switch to that domain. You cannot delete an object in one domain if you are in a different domain.

Deleting objects through REST is ID based. To delete an object in a domain, you must have write access to that domain and your user role must include delete permissions for the object type in question. Objects in the System domain are in read-only mode so you cannot delete them.

Referencing Objects

An object can always reference another object in the same domain, with no restrictions. An object in the D1 domain can reference other objects in the D1 domain. The rules are more complex for referencing objects in a different domain. For example, a D1 domain object can reference objects in the D1 domain or in its parent domain, the Global domain. However, D1 objects cannot reference D2 objects. Objects in the Global domain cannot reference objects in child domains, D1 and D2. See [Figure 185 on page 1423](#).

Figure 185: Security Director Domain References

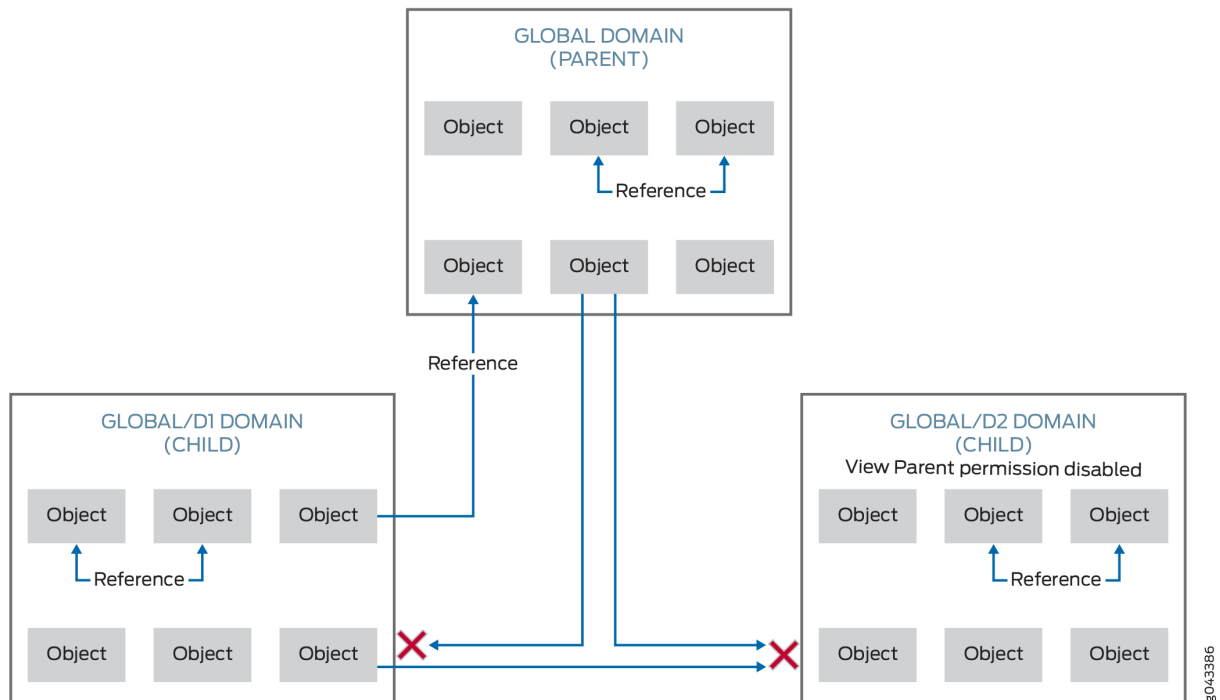

There is an exception to this rule when it comes to referencing devices. Objects in the D1 domain can reference devices in the same domain or they can reference devices in the D2 domain. But this is not true in reverse; that is, objects in the D1 domain cannot reference devices in the Global domain.



NOTE: Services cannot reference other services even within the same domain.

Moving Objects Across Domains

You can move objects from one domain to another, in general. For example, you can move an object from the D1 domain to the Global domain and from the Global domain back to the D1 domain. A validation is performed to check that the move was valid. Invalid moves are not allowed. Moving an object becomes complex if the object is referenced by another object. An object in the D1 domain can be moved up to the Global domain if it is referenced by another object that is either in the D1 domain or in the Global domain. However, moving an object from the Global domain to the D1 domain is not allowed if the object is referenced by another object in the Global domain.

The rules are different for moving device objects between domains. You can move a device from the Global domain to the D1 domain if the device is used by an object in either the Global or the D1 domain. However, moving a device from the D1 domain to the Global domain is not allowed if an object in the D1 domain is using that device.

To move a device that is part of a cluster, you must move both members of the cluster. You cannot move only the primary or only the secondary device. You can move an object from the D1 domain to the Global domain only if you have write access to the Global domain and view parent access enabled in the D1 domain.

Naming Objects in a Domain

The name of an object must be unique within a domain hierarchy. Objects with the same name cannot be created in both the D1 and Global domains. The domain hierarchy includes the current domain, its parent, and its child domains.

All the name validations consider domains as one of the constraints.

The object name must be a string beginning with a number or letter and consisting of alphanumeric characters, colons, periods, slashes, dashes, and underscores. The object name must not contain special characters such as &, <, >, and \n.

About Predefined Objects

All Security Director predefined objects are in the System domain. The predefined services, addresses, signatures, and so on are visible from all the domains in read-only mode.

All device-specific predefined objects are also in the System domain. When a new predefined object is discovered during the device discovery process, that object is also placed in the System domain. The All Device policy is placed in the Global domain and you can modify that policy.

RELATED DOCUMENTATION

[Overview of Domains in Security Director | 1431](#)

[Edit and Delete Domains in Security Director | 1434](#)

[Junos Space Security Director Overview | 2](#)

Creating Customized Roles in Security Director

Use the Roles page to create customized (user-defined) roles.

After you create roles, you can assign the roles to various user accounts that you created in Junos Space or to remote profiles for remote authorization. Roles allow you to segregate users based on the functionality that they are allowed to access.

When a user logs in to Junos Space, the workspaces that the user can access and the tasks that they can perform are determined by the roles that have been assigned to that particular user account.

Before You Begin

- Read the ["Understanding Roles in Security Director" on page 1426](#) topic.
- Review the Roles main page to view the existing users. See ["Roles Main Page Fields" on page 1430](#) for field descriptions.

To configure a role:

1. Select **Administration > Users & Roles > Roles**.
The Roles page appears.
2. Click **Create**.
The Create Role page appears.
3. Complete the configuration according to the guidelines provided in [Table 389 on page 1425](#).
4. Click **OK**.
A new role is created and you are returned to the Roles page.

Table 389: Role Settings

| Setting | Description |
|-------------|--|
| Title | Enter a unique title for the role that is a string containing alphanumeric characters, spaces, and some special characters (- . _). The title must not start with a space and the maximum length is 32 characters. |
| Description | Enter a description unique string containing alphanumeric characters, spaces, and some special characters (- . _). The maximum length is 256 characters. |
| Privileges | Select one or more tasks to assign to the custom (user-defined) Role. You must associate at least one task with a role. |

RELATED DOCUMENTATION

| |
|--|
| Viewing the Details of a Role in Security Director 1428 |
| Editing, Cloning, and Deleting Roles in Security Director 1426 |
| Importing and Exporting Roles in Security Director 1429 |

Understanding Roles in Security Director

Roles define the functionality or tasks that a user can perform in Junos Space, and they enable you to segregate users based on the functionality that they are allowed to access. You do this by assigning a different set of roles to various user accounts (in the case of local user accounts created in Junos Space) or to remote profiles to be used for remote authorization. When a user logs in to Junos Space, the tasks that they can perform are determined by the roles that have been assigned to that particular user account.

There are two types of roles: predefined roles, which are created by Junos Space, and user-defined (customized) roles, which must be created manually. The list of predefined user roles that Junos Space Security Director supports is available on the Roles page (select **Administration** > **Users & Roles** > **Roles**).

Roles can only be created by users who are assigned the User Administrator or Super Administrator or by a user with the Create Role permission.

RELATED DOCUMENTATION

[Creating Customized Roles in Security Director | 1424](#)

[Roles Main Page Fields | 1430](#)

[Domain RBAC Overview | 1417](#)

Editing, Cloning, and Deleting Roles in Security Director

IN THIS SECTION

- [Editing Roles | 1426](#)
- [Cloning Roles | 1427](#)
- [Deleting Roles | 1427](#)

You can edit, clone, and delete roles from the Roles page.

Editing Roles

To edit a role:



NOTE: Predefined roles cannot be edited.

1. Select **Administration > Users & Roles > Roles**.

The Roles page appears.

2. Select the role that you want to edit, and click the pencil icon or select **Edit Role** from the right-click menu.

The Edit Role page appears, showing the same fields that are presented when you create a role.

3. Edit the role fields as needed.



NOTE: The role title cannot be edited.

4. Click **OK** to save the changes.

The changes are saved and you are returned to the Roles page.

Cloning Roles

To clone a role:

1. Select **Administration > Users & Roles > Roles**.

The Roles page appears.

2. Select the role that you want to clone. From the More or the right-click menu, select **Clone Role**.

The Clone Role page appears, showing the same fields that are presented when you create a role.

3. Modify the role fields as needed.

4. Click **OK** to save the changes.

The cloned role is created and you are returned to the Roles page.

Deleting Roles

To delete one or more roles:



NOTE: Predefined roles cannot be deleted.

1. Select **Administration > Users & Roles > Roles**.

The Roles page appears.

2. Select the roles that you want to delete and click the X icon. Alternatively, select the roles and from the More menu, select **Delete Roles**.

The Confirm Delete page appears.

3. Click **Yes** to delete the selected roles.

The changes are saved and you are returned to the Roles page.

RELATED DOCUMENTATION

- [Creating Customized Roles in Security Director | 1424](#)
- [Understanding Roles in Security Director | 1426](#)

Viewing the Details of a Role in Security Director

You can view the details of roles from the Roles page.

To view the details of a role:

1. Select **Administration > Users & Roles > Roles**.
The Roles page appears.
2. Double-click the role for which you want to view the details. Alternatively, select a role and from the More or right-click menu, click **View Role Details**.
The Roles Details page appears. [Table 390 on page 1428](#) describes the fields on this page.
3. Click **Close**.
You are returned to the Roles page.

Table 390: Roles Details Page Fields

| Field | Description |
|----------------------|--|
| Title | Title of the role. |
| Description | Describes the custom role. |
| Workspaces and Tasks | Junos Space workspaces and tasks associated with the role. |

RELATED DOCUMENTATION

- [Creating Users in Security Director | 1403](#)
- [Roles Main Page Fields | 1430](#)

Importing and Exporting Roles in Security Director

IN THIS SECTION

- [Importing Roles | 1429](#)
- [Exporting Roles | 1429](#)

You can import and export roles from the Roles page. You import roles from an XML file to add new roles to Junos Space Security Director. If you are importing roles for the first time, we recommend that you view the sample XML file first. You export user-defined (customized) roles from the Junos Space database to access details about the roles and download the file to your local computer.

Importing Roles

To import one or more roles:

1. Select **Administration > Users & Roles > Roles**.
The Roles page appears.
2. Click **Import**.
The Import Roles page appears.
3. Use the Browse button to select the file that you want to import.



NOTE: Click the View Sample XML File link to view or download the sample XML file.

4. Click Import Roles to import the selected roles.
The Job Details page appears displaying details of the job.
5. Click **OK** to close the Job Details page.
You are returned to the Roles page.

Exporting Roles

To export one or more roles:



NOTE: Predefined roles cannot be exported.

1. Select **Administration > Users & Roles > Roles**.
The Roles page appears.

- 2. Select the roles that you want to export. From the More or right-click menu, select **Export Roles**.
The Export Roles page appears.
- 3. Click **Yes** to confirm the export operation.
The Job Details: Export Roles page appears displaying the details of the job. Use the link in the Download field to download the exported roles.
- 4. Click **OK** to close the Job Details page.
You are returned to the Roles page.

RELATED DOCUMENTATION

| |
|---|
| Creating Customized Roles in Security Director 1424 |
| Understanding Roles in Security Director 1426 |

Roles Main Page Fields

Use the Roles main page to view, create, edit, clone, and delete customized (user-defined) roles. You can also import roles from, and export roles to, a comma-separated values (CSV) file. You can filter and sort the roles displayed, and view details of each role. [Table 391 on page 1430](#) describes the fields on this page.

Table 391: Roles Main Page Fields

| Field | Description |
|-------------|--|
| Role Title | Title of the role. |
| Type | Indicates whether the role is predefined (system-defined) or a custom (user-defined) role. |
| Description | Describes the custom role. |

RELATED DOCUMENTATION

| |
|---|
| Creating Customized Roles in Security Director 1424 |
| Viewing the Details of a Role in Security Director 1428 |

Users and Roles-Domains

IN THIS CHAPTER

- [Overview of Domains in Security Director | 1431](#)
- [Creating Domains in Security Director | 1432](#)
- [Edit and Delete Domains in Security Director | 1434](#)
- [Exporting Domains in Security Director | 1435](#)
- [Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director | 1436](#)
- [Assigning Devices to Domains in Security Director | 1438](#)
- [Assigning and Unassigning Remote Profiles to Domains in Security Director | 1439](#)
- [Assigning and Unassigning Users to Domains in Security Director | 1440](#)
- [Domains Main Page Fields | 1441](#)

Overview of Domains in Security Director

IN THIS SECTION

- [Switching Between Domains | 1432](#)

A domain is a logical mapping of objects, such as devices, to users who access and manage the network by using these objects. Junos Space allows a hierarchical structure for domains. The top-level domain is called the Global domain. You can create a hierarchy of up to five levels of subdomains under the Global domain. You can use these subdomains to create easily manageable sections of your network. When you assign objects and users to these subdomains, users can manage these objects partially or completely based on the roles assigned to them.

You can assign or unassign users and remote profiles to domains, and assign devices to domains.

Switching Between Domains

If you have access to more than one domain, you can switch between domains without having to log out and in to Security Director. To switch between domains, click the Domain Switcher in the Security Director banner, which is displayed at the top of every Security Director page, and then select the domain to which you want to switch.

RELATED DOCUMENTATION

[Creating Domains in Security Director | 1432](#)

[Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director | 1436](#)

[Domain RBAC Overview | 1417](#)

Creating Domains in Security Director

Use the Add Domain page to create new domains and assign users or devices to the domains.

You add a domain when you want to create a logical grouping of objects and users. The top-level domain is called the Global domain and is created by the system. You can add up to five levels of subdomains under the Global domain.

Before You Begin

- Read the ["Overview of Domains in Security Director" on page 1431](#) topic.
- Review the Domains main page for an understanding of your existing domains. See ["Domains Main Page Fields" on page 1441](#) for field descriptions.

To configure a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. Click **Create**.

The Add Domain page appears.

3. Complete the configuration according to the guidelines provided in [Table 392 on page 1433](#).



NOTE: Fields marked with * are mandatory

4. Click **OK**.

A new domain is created and you are returned to the Domains page.

Table 392: Domain Settings

| Setting | Description |
|---|---|
| <i>Domain Information</i> | |
| Domain Name | Enter a unique string containing only alphanumeric characters and some special characters (_ .). No spaces are allowed and the maximum length is 254 characters. |
| Allow users of this domain to have read and execute access to parent domain objects | Select the check box to allow users of this domain to have read and execute access to the objects in the parent domain. |
| Description | <p>Enter a string containing alphanumeric characters and some special characters (_ . @). The maximum length is 255 characters.</p> <p>Click Next to continue.</p> |
| <i>User Assignment</i> | |
| | <p>Select the users that you want to assign to the domain by clicking the check box corresponding to the users.</p> <p>WARNING: Users will lose some privileges when they are moved to the child-domain</p> <p>Click Back to return to the previous section or Next to continue.</p> |
| <i>Device Assignment</i> | |
| | <p>Select the devices that you want to assign to the domain by clicking the check box corresponding to the devices.</p> <p>Click Back to return to the previous section or Finish to go to a summary page.</p> |

RELATED DOCUMENTATION

[Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director](#) | 1436

[Assigning and Unassigning Users to Domains in Security Director | 1440](#)

[Assigning Devices to Domains in Security Director | 1438](#)

[Assigning and Unassigning Remote Profiles to Domains in Security Director | 1439](#)

[Exporting Domains in Security Director | 1435](#)

Edit and Delete Domains in Security Director

IN THIS SECTION

- [Edit Domains | 1434](#)
- [Delete Domains | 1434](#)

You can edit and delete domains from the Domains page.



NOTE: Before deleting a domain, you must ensure that all jobs and audit logs associated with the domain are purged.

Edit Domains

To edit a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. Select the domain that you want to edit, and click the pencil icon.

The Edit Domain page appears, showing the same fields that are presented when you create a domain.

3. Edit the domain fields as needed.
4. Click **OK**.

The changes are saved and you are returned to the Domains page, where a confirmation message is displayed at the top of the page.

Delete Domains

To delete a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. Select the domain that you want to delete, and click the X icon.

The Confirm Delete page appears, asking you to confirm your selection.

3. Click **Yes** to delete the selected domain.

The Job Detail: Delete Domain page appears listing the details of the job. If the deletion is successful, the Job State displays SUCCESS; if the deletion is unsuccessful, the Job State displays FAILURE.

4. Click **OK** to close the Job Details page.

You are returned to the Domains page.

RELATED DOCUMENTATION

[Overview of Domains in Security Director | 1431](#)

[Creating Domains in Security Director | 1432](#)

Exporting Domains in Security Director

You export domains from the Junos Space database to access details of the domains. When you export a domain, the details of the domain are saved in a comma-separated values (CSV) file. You export domains if you want to view the domain information in an external application or e-mail the information.

To export a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. Select the domain that you want to export, and click the **Export** button.

The Export Domain page appears, asking you to confirm your selection.

3. Click **Yes**.

The Job Details: Export Domain page appears displaying the details of the job. Use the Download link to download file containing the exported domains.

4. Click **OK** to close the Job Details page.

You are returned to the Domains page.

RELATED DOCUMENTATION

[Overview of Domains in Security Director | 1431](#)

[Creating Domains in Security Director | 1432](#)

Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director

You can view the users, devices, and remote profiles assigned to a domain from the Domains page. This enables you to view the users, devices, and remote profiles assigned to a particular domain at a quick glance on one page.

To view the details of a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. Click the domain name link to view the users, devices, and remote profiles assigned to the domain.

The *Domain-Name* page appears with the Assigned Users tab selected by default. [Table 393 on page 1436](#) describes the fields on this page.

3. Click the **Assigned Devices** tab to view the devices assigned to the domain.

The *Domain-Name* page appears with the Assigned Devices tab selected. [Table 394 on page 1437](#) describes the fields on this page.

4. Click the **Assigned Remote Profiles** tab to view the devices assigned to the domain.

The *Domain-Name* page appears with the with the Assigned Remote Profiles tab. [Table 395 on page 1437](#) describes the fields on this page.

5. Click **Domains** in the left-hand menu to return to the Domains page.

You are returned to the Domains page

Table 393: Assigned Users Tab Fields

| Field | Description |
|----------------|--|
| Username | Username of the user assigned to the domain. |
| First Name | First name of the user assigned to the domain. |
| Last Name | Last name of the user assigned to the domain. |
| E-Mail Address | E-mail address of the user assigned to the domain. |
| Status | Indicates whether the user is enabled or disabled. |

Table 393: Assigned Users Tab Fields (Continued)

| Field | Description |
|------------------|--|
| Assigned Domains | Domains to which the user is assigned. |

Table 394: Assigned Devices Tab Fields

| Field | Description |
|-------------|---|
| Device Name | Name of the device assigned to the domain. |
| IP Address | IP address of the device assigned to the domain |
| Platform | Name of the device assigned to the domain. |

Table 395: Assigned Remote Profiles Tab Fields

| Field | Description |
|------------------|---|
| Profile Name | Name of the remote profile assigned to the domain. |
| Description | Description of the remote profile assigned to the domain. |
| Assigned Domains | Domains to which the remote profile is assigned. |

RELATED DOCUMENTATION

[Creating Domains in Security Director | 1432](#)

[Assigning and Unassigning Users to Domains in Security Director | 1440](#)

[Assigning and Unassigning Remote Profiles to Domains in Security Director | 1439](#)

[Assigning Devices to Domains in Security Director | 1438](#)

Assigning Devices to Domains in Security Director

You can assign devices to domains using the Domains page. You assign devices to domains if you want to logically group devices in domains. If you switch from one domain to another, then only the devices belonging to that domain are accessible.

To assign devices to a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. From the Number of Devices column, click the numbered link corresponding to the domain to which you want to assign devices.

You are taken to the *Domain-Name* page with the Assigned Devices tab selected.

3. Click the **+** icon.

The Assign Devices to Domain *Domain-Name* page appears displaying a list of devices that can be assigned. You can click the **View Audit Log** link to view the details of the audit log entry for the domain assignment. You are taken to the Audit Logs page in Junos Space Network Management Platform.

4. Select one or more devices by clicking the check boxes corresponding to the remote profiles.

5. Click **OK**.

The Assign Objects to Domain Status page appears displaying the status of the domain assignment. Click the **View Audit Log** link to view the audit log entry in the Audit Logs page.

6. Click **OK**.

You are taken to the *Domain-Name* page.

RELATED DOCUMENTATION

[Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director | 1436](#)

[Assigning and Unassigning Users to Domains in Security Director | 1440](#)

[Assigning and Unassigning Remote Profiles to Domains in Security Director | 1439](#)

[Overview of Domains in Security Director | 1431](#)

[Creating Domains in Security Director | 1432](#)

Assigning and Unassigning Remote Profiles to Domains in Security Director

IN THIS SECTION

- [Assigning Remote Profiles to Domains | 1439](#)
- [Unassigning Remote Profiles from Domains | 1439](#)

You can assign remote profiles to domains or unassign remote profiles from domains using the Domains page. You assign a remote profile to a domain if you want to restrict the objects only to that domain to which users associated with the remote profile have access. You unassign a remote profile from a domain if you no longer want to provide users associated with the remote profile access to that domain.

Assigning Remote Profiles to Domains

To assign remote profiles to a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. From the Number of Remote Profiles column, click the numbered link corresponding to the domain to which you want to assign remote profiles.

You are taken to the *Domain-Name* page with the Assigned Remote Profiles tab selected.

3. Click the **+** icon.

The Assign Remote Profiles to Domain *Domain-Name* page appears displaying a list of remote profiles that can be assigned.

4. Select one or more remote profiles by clicking the check boxes corresponding to the remote profiles.
5. Click **OK**.

The remote profiles are assigned to the domain and you are returned to the Domain-Name page.

Unassigning Remote Profiles from Domains

To unassign remote profiles from a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. From the Number of Remote Profiles column, click the numbered link corresponding to the domain from which you want to unassign remote profiles.

You are taken to the *Domain-Name* page with the Assigned Remote Profiles tab selected.

3. Select the remote profiles that you want to unassign.
4. Click the X icon.

The selected remote profiles are unassigned from the domain and you are returned to the *Domain-Name* page.

SEE ALSO

[Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director | 1436](#)

[Assigning and Unassigning Users to Domains in Security Director | 1440](#)

[Assigning Devices to Domains in Security Director | 1438](#)

[Overview of Domains in Security Director | 1431](#)

[Creating Domains in Security Director | 1432](#)

Assigning and Unassigning Users to Domains in Security Director

IN THIS SECTION

- [Assigning Users to Domains | 1440](#)
- [Unassigning Users from Domains | 1441](#)

You can assign users to domains or unassign users from domains using the Domains page. You assign users to a domain if you want to restrict the objects to which the users have access only to that domain. You unassign users from a domain if you no longer want to provide users access to that domain.

Assigning Users to Domains

To assign users to a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. From the Number of Users column, click the numbered link corresponding to the domain to which you want to assign users.

You are taken to the *Domain-Name* page with the Assigned Users tab selected.

3. Click the Assign User icon.

The Assign Users to Domain *Domain-Name* page appears displaying a list of users that can be assigned.

4. Select one or more users by clicking the check boxes corresponding to the users.
5. Click **OK**.

The users are assigned to the domain and you are returned to the Domain-Name page.

Unassigning Users from Domains

To unassign users from a domain:

1. Select **Administration > Users & Roles > Domains**.

The Domains page appears.

2. From the Number of Users column, click the numbered link corresponding to the domain from which you want to unassign users.

You are taken to the *Domain-Name* page with the Assigned Users tab selected.

3. Select the users that you want to unassign.
4. Click the Unassign User icon.

The users are unassigned from the domain and you are returned to the *Domain-Name* page

SEE ALSO

[Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director | 1436](#)

[Assigning and Unassigning Users to Domains in Security Director | 1440](#)

[Assigning and Unassigning Remote Profiles to Domains in Security Director | 1439](#)

[Overview of Domains in Security Director | 1431](#)

[Creating Domains in Security Director | 1432](#)

Domains Main Page Fields

Use the Domains main page to create, modify, delete, and export domains. You can also assign and unassign users and remote profiles to domains as well as assign devices to domains. You can filter and sort the domains displayed, and view details of each domain. [Table 396 on page 1442](#) describes the fields on this page.

Table 396: Domains Main Page Fields

| Field | Description |
|--|---|
| Domain | Name of the domain. Click a domain name link to view the users, devices, and remote profiles assigned to the domain. See "Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director" on page 1436. |
| Number of Users | Number of users assigned to the domain. Click a <i>number-of-users</i> link to view the users assigned to the domain. See "Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director" on page 1436. |
| Number of Devices | Number of devices assigned to the domain. Click a <i>number-of-devices</i> link to view the devices assigned to the domain. See "Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director" on page 1436. |
| Number of Remote Profiles | Number of remote profiles assigned to the domain. Click a <i>number-of-remote-profiles</i> link to view the remote profiles assigned to the domain. See "Viewing Users, Devices, and Remote Profiles Assigned to a Domain in Security Director" on page 1436. |
| Date and Time Created | Date and time at which the domain was created. |
| Read and Execute for parent domain objects | Indicates whether users assigned to the domain have read and execute access to the objects in the parent domain or not. This field is not applicable to global domains. |
| Description | Description of the domain. |

RELATED DOCUMENTATION

[Overview of Domains in Security Director | 1431](#)

[Creating Domains in Security Director | 1432](#)

Users and Roles-Remote Profiles

IN THIS CHAPTER

- [Creating Remote Profiles in Security Director | 1443](#)
- [Overview of Remote Profiles in Security Director | 1445](#)
- [Edit and Delete Remote Profiles in Security Director | 1445](#)
- [Viewing the Details of a Remote Profile in Security Director | 1446](#)
- [Remote Profiles Main Page Fields | 1448](#)

Creating Remote Profiles in Security Director

Use the Create Remote Profile page to create a new remote profile and assign one or more roles and domains to the remote profile. You must associate at least one role and one domain with a remote profile. Remote profiles are used to authenticate users remotely.

Before You Begin

- Read the ["Overview of Remote Profiles in Security Director" on page 1445](#) topic.
- Review the Remote Profiles main page for an understanding the existing remote profiles. See ["Remote Profiles Main Page Fields" on page 1448](#) for field descriptions.

To configure a remote profile:

1. Select **Administration > Users & Roles > Remote Profiles**.

The Remote Profiles page appears.

2. Click **Create**.

The Create Remote Profile page appears.

3. Complete the configuration according to the guidelines provided in [Table 397 on page 1444](#).



NOTE: Fields marked with * are mandatory

4. Click **OK**.

A new remote profile is created and you are returned to the Remote Profiles page.

Table 397: Remote Profile Settings

| Setting | Description |
|--------------------------|--|
| <i>Role assignment</i> | |
| Name | Enter a unique string containing alphanumeric characters and some special characters (- . _). No spaces are allowed and the maximum length is 32 characters. |
| Description | Enter a unique string containing alphanumeric characters and some special characters (- . _). The maximum length is 256 characters. |
| Job Management View | Select whether the user assigned to the remote profile can view only the jobs triggered by that remote profile or all jobs. |
| Role | <p>Select one or more roles in the Available column and click the forward arrow to confirm your selection.</p> <p>The selected roles are displayed in the Selected column.</p> <p>NOTE: You must select at least one role.</p> <p>Click Next to continue.</p> |
| <i>Domain Assignment</i> | |
| Available Domains | <p>Select one or more domains to assign to the remote profile. If you select a domain with subdomains, the subdomains are also included. You must select at least one domain.</p> <p>If you do not assign a domain to the user, the Global domain is assigned to the user by default.</p> <p>Click Back to return to the previous section or Finish to go to a summary page.</p> |

RELATED DOCUMENTATION

[Edit and Delete Remote Profiles in Security Director | 1445](#)

[Viewing the Details of a Remote Profile in Security Director | 1446](#)

Overview of Remote Profiles in Security Director

Remote profiles are used to assign a specific set of roles to users when remote authentication and authorization are enabled in Junos Space. A remote profile is a collection of roles defining the set of functions that a user is allowed to perform.

Junos Space does not create remote profiles by default, and if you want to use remote authentication and authorization, you must create one or more remote profiles. When you create a remote profile, you must specify one or more roles and domains to associate with the remote profile. You can then configure the name of the remote profile for one or more user accounts in the remote authentication servers (RADIUS or TACACS+) that you are using for authentication and authorization. Remote profile names can be configured as a vendor-specific attribute (VSA) in RADIUS servers and as an attribute-value pair (AVP) in TACACS+ servers.

When a remote authentication server successfully authenticates a user session, the server includes the configured remote profile name for that user in the response message that is sent to Junos Space. Junos Space looks up the remote profile based on this name and determines the set of roles for the user. Junos Space then uses this information to control the set of workspaces the user can access and the tasks the user is allowed to perform.

RELATED DOCUMENTATION

[Creating Remote Profiles in Security Director | 1443](#)

[Remote Profiles Main Page Fields | 1448](#)

Edit and Delete Remote Profiles in Security Director

IN THIS SECTION

- [Edit Remote Profiles | 1446](#)
- [Delete Remote Profiles | 1446](#)

You can edit and delete remote profiles from the Remote Profiles page.

Edit Remote Profiles

To edit a remote profile:

1. Select **Administration > Users & Roles > Remote Profiles**.

The Remote Profiles page appears.

2. Select the remote profile that you want to edit, and click the pencil icon.

The Edit Remote Profile page appears, showing the same fields that are presented when you create a remote profile.

3. Edit the remote profile fields as needed.



NOTE: Some fields cannot be edited.

4. Click **OK** to save the changes.

The changes are saved and you are returned to the Remote Profiles page.

Delete Remote Profiles

To delete remote profiles:

1. Select **Administration > Users & Roles > Remote Profiles**.

The Remote Profiles page appears.

2. Select the remote profiles that you want to delete, and click the X icon.

The Delete Remote Profiles page appears, displaying the list of remote profiles selected for deletion.

3. Click **Yes** to delete the selected remote profiles.

The remote profiles are deleted and you are returned to the Remote Profiles page.

RELATED DOCUMENTATION

[Creating Remote Profiles in Security Director | 1443](#)

[Overview of Remote Profiles in Security Director | 1445](#)

[Remote Profiles Main Page Fields | 1448](#)

Viewing the Details of a Remote Profile in Security Director

You can view the details of remote profiles, which allows you to view information about the remote profile at a quick glance on one page, from the Remote Profiles page.

To view the details of a remote profile:

- 1. Select **Administration > Users & Roles > Remote Profiles**.

The Remote Profiles page appears.

- 2. Double-click the remote profile for which you want to view the details. (Alternatively, select a remote profile and select **View Remote Profile Details** from the shortcut menu, or click the Detailed View icon, which appears when you mouse over a remote profile entry, to view the details.)

The Remote Profiles Details page appears. [Table 398 on page 1447](#) describes the fields on this page.

Table 398: Remote Profiles Details Page Fields

| Field | Description |
|-------------------|--|
| Name | Name of the remote profile. |
| Description | Description of the remote profile. |
| View Jobs | Indicates whether the user assigned to the remote profile can view only the jobs triggered by that user or all jobs. |
| Assigned Roles | Indicates the roles that are associated with the remote profile. |
| Available Domains | Indicates the domains that are associated with the remote profile. |
| Role Summary | Displays the hierarchy of tasks that are assigned to the role selected in the Assigned Role field. |

RELATED DOCUMENTATION

| |
|---|
| Creating Remote Profiles in Security Director 1443 |
| Overview of Remote Profiles in Security Director 1445 |
| Remote Profiles Main Page Fields 1448 |

Remote Profiles Main Page Fields

Use the Remote Profiles page to create, modify, and delete remote profiles. Remote profiles are used to authenticate users remotely. You can filter and sort the remote profiles displayed, and view details of each remote profile. [Table 399 on page 1448](#) describes the fields on this page.

Table 399: Remote Profiles Main Page Fields

| Field | Description |
|--------------|------------------------------------|
| Profile Name | Name of the remote profile. |
| Description | Description of the remote profile. |

RELATED DOCUMENTATION

[Creating Remote Profiles in Security Director | 1443](#)

[Overview of Remote Profiles in Security Director | 1445](#)

Logging Management

IN THIS CHAPTER

- [Logging and Reporting Overview](#) | 1449

Logging and Reporting Overview

The Junos Space Security Director Logging and Reporting module enables log collection across multiple SRX Series devices and enables log visualization.

You can use either Security Director Log Collector or Juniper Secure Analytics (JSA) as a log collector. For details on deploying and configuring JSA, see [Juniper Secure Analytics](#) documentation.

The Logging and Reporting module provides:

- Device health and events monitoring.
- Visualization of security events resulting from complex and dynamic firewall policies using dashboard and event viewer.
- Device health monitoring of CPU and memory.
- Alert notification about specific events or upon attaining threshold limits.
- Scalable virtual machine (VM) based log collection and log collector management.



NOTE: For details on installing Security Director and setting up Log Collector, see *Security Director Installation and Upgrade Guide*.

Logs, also called event logs, provide vital information for managing network security, incident investigation, and response. Logging provides the following features:

- Receives events from SRX Series devices and application logs.
- Stores events for a defined period of time or a set volume of data.

- Parses and indexes logs to help speed up searching.
- Provides queries and helps in data analysis and historical events investigation.

You must configure Security Director and SRX Series Firewalls to receive logs. Select **Security Director** > **Devices** > **Device Management** to configure syslog to receive SRX Series device logs.

RELATED DOCUMENTATION

[Using the Log Statistics and Troubleshooting | 1457](#)

[Adding Logging Nodes | 1451](#)

[Logging Devices Main Page Fields | 1459](#)

[Using the Log Statistics and Troubleshooting | 1457](#)

[Creating Security Logs | 1461](#)

[Modifying the Security Logging Configuration for Security Devices | 302](#)

[Enabling Logging on Branch SRX Series Devices](#)

[Enabling Logging on High-End SRX Series Devices](#)

Logging Management-Logging Nodes

IN THIS CHAPTER

- [Adding Logging Nodes | 1451](#)
- [Enabling Log Forwarding | 1454](#)
- [Logging Nodes Main Page Fields | 1455](#)

Adding Logging Nodes

Use this page to configure logging nodes. You must deploy either Security Director Log Collector or Juniper Secure Analytics (JSA) as a log collector and then add it to Security Director to view the log data in the Dashboard, Events and Logs, Reports, and Alerts pages.

Before You Begin

- Read the ["Logging and Reporting Overview" on page 1449](#) topic.
- Configure system log and security logging configuration from **Devices > Security Devices > Modify Configuration**. See ["Modifying the Configuration of Security Devices" on page 261](#).
- Review the Logging Management main page for an understanding of your current data set. See ["Logging Nodes Main Page Fields" on page 1455](#) for field descriptions.
- While adding SRX firewall as a log source in JSA or QRadar, set the log source type to Juniper Junos Platform and not Juniper SRX Series Services Gateway.
- You must have the recent version of Juniper Junos Device Support Module (DSM) installed on JSA or QRadar.
- For information on JSA, see [Juniper Secure Analytics](#) documentation.

To add Log Collector to Security Director:

1. Select **Administration > Logging Management > Logging Nodes**.
2. Click the + icon to add logging nodes. The Add Logging Node page appears.
3. Choose the Log Collector type as **Security Director Log Collector** or **Juniper Secure Analytics**.



NOTE: Starting in Junos Space Security Director Release 16.2, the Log Collector type Juniper Secure Analytics is added.

- 4. Click **Next**.
- 5. Complete the configuration for Add Collector/JSA Node according to the guidelines provided in [Table 400 on page 1452](#).



NOTE: From Junos Space Security Director Release 17.2, for distributed Log Collector deployment, you must add only Log Receiver node.

- 6. Click **Next**.
The certificate details are displayed.
- 7. Click **Finish**.
- 8. Review the summary of configuration changes from the summary page and click **Edit** to modify the details, if required.
- 9. Click **OK** to add the node.

A new logging node with your configurations is added. To verify if the node is configured correctly, click **Logging Management > Logging Nodes** to check the status of the node.




NOTE: In Junos Space Security Director Release 16.2, the JSA node is added only via Security Director, so the JSA node is not displayed in **Space > Administration > Fabric**.

Table 400: Logging Node Settings

| Settings | Guidelines |
|------------|--|
| Node Name | Enter a unique name for the node that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 29 characters. |
| IP Address | Enter an IPv4 or IPv6 address for the node. Starting in Junos Space Security Director Release 18.2R1, IPv6 address is supported while adding JSA node. |

Table 400: Logging Node Settings (Continued)
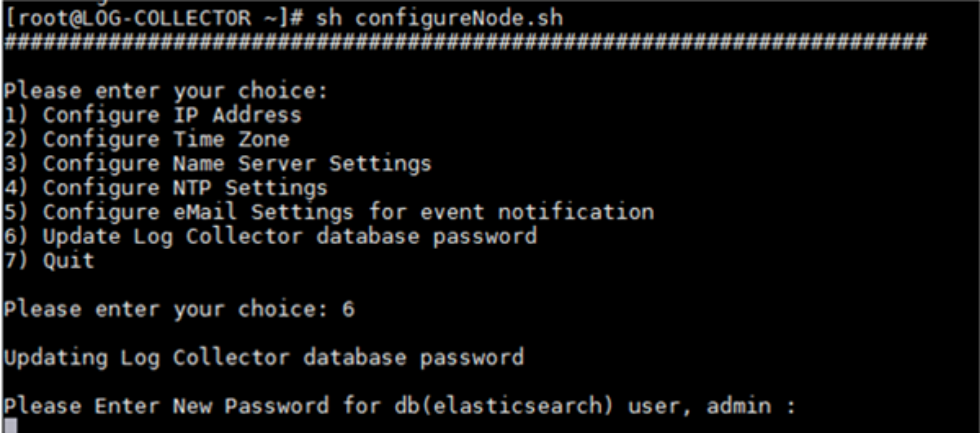
| Settings | Guidelines |
|------------------------|---|
| User Name and Password | <p>For Security Director Log Collector, provide the default credentials: Username is admin and Password is juniper123. You must change the default password using the Log Collector CLI configureNode.sh command as shown in Figure 186 on page 1453.</p> <p>Figure 186: Change Password</p>  <pre> [root@LOG-COLLECTOR ~]# sh configureNode.sh ##### Please enter your choice: 1) Configure IP Address 2) Configure Time Zone 3) Configure Name Server Settings 4) Configure NTP Settings 5) Configure eMail Settings for event notification 6) Update Log Collector database password 7) Quit Please enter your choice: 6 Updating Log Collector database password Please Enter New Password for db(elasticsearch) user, admin : </pre> <p>For JSA, provide the admin credentials that is used to log in to the JSA console.</p> |

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|---|
| 16.2 | Starting in Junos Space Security Director Release 16.2, the Log Collector type Juniper Secure Analytics is added. |
| 16.2 | In Junos Space Security Director Release 16.2, the JSA node is added only via Security Director, so the JSA node is not displayed in Space > Administration > Fabric . |

RELATED DOCUMENTATION

| |
|---|
| Logging and Reporting Overview 1449 |
| Logging Devices Main Page Fields 1459 |

Enabling Log Forwarding

To enable log forwarding:

- 1. Select **Administration > Logging Management > Logging Nodes**.
- 2. On the upper right side of the page, click the Log Forwarding button.
- 3. Complete the configuration.

Table 401: Log Forwarding

| Settings | Guidelines |
|-------------------|---|
| Syslog Forwarding | Enable this option to forward the logs to a syslog server. |
| Destination IP | Specifies the IP address to which the syslog is forwarded. |
| Port Number | Specifies the port number to which the syslog is forwarded. |
| Protocol | Specifies the protocol to which the syslog is forwarded. The available protocols are TCP and UDP. |



NOTE: Starting in Junos Space Security Director Release 16.2 onward, log forwarding is not supported on JSA.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.2 | Starting in Junos Space Security Director Release 16.2 onward, log forwarding is not supported on JSA. |

RELATED DOCUMENTATION

| |
|---|
| Logging and Reporting Overview 1449 |
| Logging Devices Main Page Fields 1459 |
| Using the Log Statistics and Troubleshooting 1457 |
| Adding Logging Nodes 1451 |

Logging Nodes Main Page Fields

Use this page to manage and configure Log Collector. You can add, remove, log forward, or change the database password for the logging nodes. You can also view log information such as node name, type of node, node IP address, status, version, and the last boot time of the logging node.

[Table 402 on page 1455](#) describes the fields on this page.

Table 402: Logging Management Main Page Fields

| Field | Description |
|-------------|--|
| Node Name | Name of the Log Collector node. |
| Node Type | Type of Log Collector used for logging. |
| Node IPv4 | IPv4 address of the Log Collector. |
| Node IPv6 | IPv6 address of the Log Collector. |
| Status | Current network status of the Log Collector, that is, UP or DOWN. |
| Application | Displays the status of the Log Collector. <ul style="list-style-type: none">• GREEN—Log Collector is healthy and is receiving logs.• YELLOW—Log Collector is not functioning as expected. For example, Log Collector services might be down.• RED—Log Collector is down. |

Table 402: Logging Management Main Page Fields *(Continued)*

| Field | Description |
|----------------|-------------------------------|
| Version | Version of the Log Collector. |
| Last Boot Time | Last system reboot time. |



NOTE: Starting in Junos Space Security Director Release 16.2 onward, the Status, Application, Version, and Last Boot Time are not displayed for the JSA node. The Log Forwarding and Change Log Password options are not available for JSA node.

RELATED DOCUMENTATION

- [Logging and Reporting Overview | 1449](#)
- [Logging Devices Main Page Fields | 1459](#)
- [Using the Log Statistics and Troubleshooting | 1457](#)
- [Adding Logging Nodes | 1451](#)

Logging Management-Statistics & Troubleshooting

IN THIS CHAPTER

- [Using the Log Statistics and Troubleshooting | 1457](#)

Using the Log Statistics and Troubleshooting

Before You Begin

- Read the **Logging and Reporting Overview** topic.
- Review the Logging Management main page for an understanding of your current data set. See ["Logging Devices Main Page Fields" on page 1459](#) for field descriptions.

Use this page to view the statistical information for each node. The log statistics is displayed as a time series chart, which shows the average event rate per day. You can view the event pattern for up to 90 days.

You can also view the complete statistic details such as node name, node type, events per second rate, time when the last log was received, total disk space, free space, health status, CPU usage, memory usage, and disk I/O wait period. You can use this information to troubleshoot issues with your node.

To use the Log Statistics and Troubleshooting Page:

1. Select **Administration > Logging Management > Statistics & Troubleshooting**.
The Node Statistics page appears.
2. Use the guidelines provided in [Table 403 on page 1457](#) to learn about the page.

Table 403: Node Statistics

| Action | Guideline |
|---------|--|
| Refresh | Refreshes the node statistics information. |



NOTE: Starting in Junos Space Security Director Release 16.2, information is not displayed for the JSA node.

RELATED DOCUMENTATION

[Logging and Reporting Overview | 1449](#)

[Logging Devices Main Page Fields | 1459](#)

[Adding Logging Nodes | 1451](#)

Logging Management-Logging Devices

IN THIS CHAPTER

- Logging Devices Main Page Fields | 1459
- Creating Security Logs | 1461

Logging Devices Main Page Fields

IN THIS SECTION

- Device Configuration | 1460

Use the Logging Devices section to view the details about your log receiver nodes. These nodes receive logs from devices, you can view details such as name, IP address, and the average events per second received on each node.

To use the Logging Device page:

1. Select **Administration > Logging Management > Logging Devices**. The Logging Devices page appears.
2. Read the descriptions provided in [Table 404 on page 1459](#) to learn about the page.

Table 404: Logging Devices Main Page Fields

| Field | Description |
|-----------|--|
| Node Name | Name of the Security Director Log Collector or Juniper Secure Analytics. |
| Node IP | IP address of the node. |

Table 404: Logging Devices Main Page Fields (Continued)

| Field | Description |
|-------------|---|
| Average EPS | Average events per second (eps) on an hourly basis. |

Device Configuration

Use the Device Configuration section to view the configured log collector details for your device such as its IP address, average events per second rate, and the last updated timestamp. See [Table 405 on page 1460](#) to learn about the page.

Table 405: Device Configuration Main Page Fields

| Field | Description |
|---------------------------------|---|
| Device Name | Name of the device. |
| Device IP | IP address of the device. |
| Sending Logs To (Receiver Node) | IP address of the receiving node. |
| Average EPS (Hourly) | Average events per second (eps) on an hourly basis. |
| Last Updated | Last updated timestamp. |

RELATED DOCUMENTATION

[Logging and Reporting Overview | 1449](#)

[Adding Logging Nodes | 1451](#)

[Using the Log Statistics and Troubleshooting | 1457](#)

Creating Security Logs

To configure security logging:

1. Select **Security Director > Devices > Device Management**.

The Device Management page appears.

2. Right-click a device and select **Device Configuration > Modify Configuration**.

The View/Edit Configuration page appears.

3. Under the Security section, click **Security Logging**.

The Create Security Logging page appears.

4. Under the General Settings section, configure the following parameters:

- From the Mode list, select the mode of logging as stream or event.
- To specify a source IP address or the IP address used when exporting security logs, enter the IP address in the Source Address field.
- From the Format list, select the logging format as syslog, sd-syslog, or binary.
- To limit the rate per second at which data plane logs are generated, enter the rate value in the Rate-Cap field.
- To disable security logging for a device, select the **Disable Logging** check box.
- To use Coordinated Universal Time (UTC) for security log timestamps, select the **UTC-Timestamp** check box.
- To limit the rate per second at which logs are streamed, enter the event rate in the Event-rate field.

5. Under the Stream section, configure the following parameters:

To create a new stream configuration:

- Click the plus sign (+).

The Stream Configuration page appears.

- In the Stream Name field, enter the name of the new stream configuration.
- In the Host field, enter the IPv4 or IPv6 address.
- In the Port field, enter the port number.
- In the Severity list, select one of the following available required severity types:
 - Emergency

- Alert
- Critical
- Error
- Warning
- Notice
- Info
- Debug
- In the Category list, select the type of category as all or content-security.
- In the Format list, select the type of format as syslog, sd-syslog, welf, or binary.
- To create a new stream, click **Ok**.

You can modify or delete the existing streams. To modify or edit a stream, select the stream and click the pencil icon. To delete a stream, select the stream and click the minus sign (-).

6. Expand the File section and configure the following parameters:

- In the File Name field, enter a filename for the log data file.
- In the File Path field, enter the path where the log file is saved.
- In the File Size field, enter the maximum size of the log file in megabytes.
- In the Max No. Of files field, enter the maximum number of log files to create for each session.

7. Expand the Cache section, and configure the following parameters:

- In the Limit field, enter the maximum number of log entries to store in the cache memory. The default value is 10,000 entries.

8. To restrict the device from logging certain configurations, you can create different exclude configurations.

To create a new exclude configuration:

- Under the Exclude section, click the plus sign (+).

The Exclude Configuration page appears.

- In the Name field, enter the name of a new exclude configuration.
- Under the Destination section, in the IP Address field, enter the destination IP address in IPv4 or IPv6 address format. The audit log does not include security alarms from the specified destination IP address.

In the Port field, enter the destination IP address port.

- Under the Source section, in the IP Address field, enter the source IP address in IPv4 or IPv6 address format. The audit log does not include security alarms from the specified source IP address.

In the Port field, enter the source IP address port.

- Under the Other Filters section, configure the following parameters:
 - In the Event Id field, enter the event ID of the security event. The audit log does not include security alarms for this event ID.
 - To restrict the logging of failed events, select the **Failure** check box.
 - In the Interface field, enter the name of the interface. The audit log does not include security alarms from the specified interface.
 - In the Policy Name field, enter the policy name.
 - In the Process field, specify the name of the process that is generating the events.
 - In the Protocol field, enter the protocol name.
 - To restrict the logging of successful events, select the **Success** check box.
 - In the User Name field, enter the name of the authenticated user. All security events that are enabled by this user are not generated in the audit log.
- To create a new exclude configuration, click **Ok**.

9. To create a new security log, click **Ok**.



NOTE: Security logging is not supported for the logical systems devices.

Monitor Settings

IN THIS CHAPTER

- [About the Monitor Settings Page | 1464](#)
- [Monitor Settings Overview | 1465](#)

About the Monitor Settings Page

IN THIS SECTION

- [Tasks You Can Perform | 1464](#)
- [Field Descriptions | 1464](#)

To access this page, click **Administration > Monitor Settings**.

You can use the Monitor Settings page to enable and disable polling of data from devices. Polling allows Security Director to pull data specific to traffic, resource usage, and sessions across user-specified time intervals.

Tasks You Can Perform

You can perform the following task from this page:

- Configure monitor settings. To change the status of a device, select a device, click **Enable** or **Disable** and follow the guidelines in [Table 406 on page 1465](#).

Field Descriptions

[Table 406 on page 1465](#) provides guidelines on using the fields on the Monitor Settings page.

Table 406: Fields on the Monitor Settings Page

| Field | Description |
|------------------------|--|
| Device Monitoring | Enable or disable device monitoring. By default, device monitoring is enabled. |
| Traffic Polling | Enable or disable traffic polling. The allowed range is 1 to 60 minutes. By default, traffic polling is enabled every 15 minutes. |
| Resource Usage Polling | Enable or disable resource usage polling. The allowed range is 1 to 60 minutes. By default, resource usage polling is enabled every 10 minutes. |
| Session Polling | Enable or disable session polling. The allowed range is 1 to 60 minutes. By default, session polling is disabled. Session polling can be enabled every 30 minutes, by default. |
| Device Name | Name of a device. Example, device1. |
| IP Address | IP address of a device. Example, 10.0.0.0. |
| Platform | The SRX Series Firewall"?">SRX Series Firewall platform. Example, SRX1500. |
| Status | <p>The status of a device. The options are:</p> <ul style="list-style-type: none"> • Enable – Enables device polling. • Disable – Disables device polling. |

RELATED DOCUMENTATION

[Monitor Settings Overview](#) | 1465

Monitor Settings Overview

Device monitoring allows Security Director to poll devices for health and system data. The collected data is shown in the widgets on the dashboard.

You can enable and disable polling of data from devices. Polling allows Security Director to pull data specific to traffic, resource usage, and sessions across user-specified time intervals.

To change the status of a device, select a device and click **Enable** or **Disable**.

You can enable or disable polling when you need information on the devices that are managed by Security Director. If polling is enabled, then data is displayed in the widgets in the dashboard. If polling is disabled, then data is not displayed in the widgets. The following device widgets in the dashboard are dependent on the configured monitor settings:

- Devices Most CPU Usage
- Devices Most Memory Usage
- Devices Most Sessions
- Devices Most Bandwidth by Bytes
- Zones Most Bandwidth by Bytes
- Devices Most Dropped Packets
- Zones Most Dropped Packets
- Devices Most Bandwidth by Packets
- Zones Most Bandwidth by Packets
- Devices Most Storage

RELATED DOCUMENTATION

[About the Monitor Settings Page | 1464](#)

[Dashboard Overview | 23](#)

Signature Database

IN THIS CHAPTER

- [Using the Signature Database | 1467](#)
- [Understanding Signature Databases | 1468](#)
- [Signature Database Main Page Fields | 1469](#)
- [Installing the Signature Database Configuration | 1471](#)
- [Downloading the Signature Database Configuration | 1472](#)
- [Uploading the Signature Database Configuration from a File System | 1473](#)

Using the Signature Database

Use the Signature Database page to download and install the intrusion prevention system (IPS) signature database and application firewall signature database to security devices. This database includes signature definitions of attacks and applications that can be used to identify applications for tracking firewall policies, quality of service prioritization, and IPS.

Before You Begin

- Read the ["Understanding Signature Databases" on page 1468](#) topic.
- Ensure that your device has a connection to the Internet to download security package updates.
- Review the signature database main page for an understanding of your current data set. See ["Signature Database Main Page Fields" on page 1469](#) for field descriptions.

To download and install the signature database configuration:

If signature database is not downloaded, navigate to **Administration > Signature Database** to download the latest signatures.

1. To download the signature database configuration, perform the steps provided in ["Downloading the Signature Database Configuration" on page 1472](#).
2. To upload the signature database configuration, perform the steps provided in ["Uploading the Signature Database Configuration from a File System" on page 1473](#).

3. To install the signature database configuration, perform the steps provided in "[Installing the Signature Database Configuration](#)" on page 1471 .

Once you download and install the signatures, you can use them to configure application services.

RELATED DOCUMENTATION

[Understanding Signature Databases](#) | 1468

[Signature Database Main Page Fields](#) | 1469

Understanding Signature Databases

The signature database is one of the major components of the intrusion prevention system (IPS). This database includes signature definitions of attacks and applications that can be used to identify applications for tracking firewall policies, quality of service prioritization, and IPS.

The IPS signature database is stored on an IPS enabled device and contains definitions of predefined attack objects and groups. These attack objects and groups are designed to detect known attack patterns and protocol anomalies within the network traffic. You can configure attack objects and groups as match conditions in IPS policy rules.

The following download options are available in the signature database for the signature download:

- Delta Download—Downloads only the updates from the previously downloaded version.
- Full Download—Downloads the complete signature database; the download might take a longer amount of time.

All of the downloaded signatures are created in the system domain in read-only mode. The configurations that are downloaded are also saved in the system domain.

Security Director sends the full signature database update if any one of the following scenarios is true:

- You install an older version of the signature files.
- The corresponding diff files do not exist.
- A signature file is added using the offline update.

You can perform an offline update of the signature database files by downloading the latest signature version from <https://services.netscreen.com/space/2/latest/latest-space-update.zip> and storing it locally.

You can configure the signature database settings to install the latest signature on to the device. Once the latest signatures are available, you can use them to configure application services.

RELATED DOCUMENTATION

| |
|--|
| Using the Signature Database 1467 |
| Downloading the Signature Database Configuration 1472 |
| Uploading the Signature Database Configuration from a File System 1473 |
| Installing the Signature Database Configuration 1471 |

Signature Database Main Page Fields

Use the signature database main page to get an overall, high-level view of your signature database settings. You can filter and sort this information to get a better understanding of what you want to configure. [Table 407 on page 1469](#) describes the fields on this page.

Table 407: Signature Database Main Page Fields

| Field | Description |
|--------------------------|--|
| Active Database on Space | |
| Database Version | Version of signature database. |
| Publish Date | Date when the signature database was published. |
| Update Job | Job ID that you can use to update job details in the Job Management page. |
| Installed Device Count | Number of devices installed. |
| Detectors | Version number of the IPS protocol detector currently running on the device. |
| Action | Install signature database configuration. |

Table 407: Signature Database Main Page Fields *(Continued)*

| Field | Description |
|----------------------------------|---|
| Scheduled Download | Displays the time set to download the signature database settings. |
| Latest List of Signatures | |
| Database Version | Version of latest signature database. |
| Publish Date | Date when the signature database was published. |
| Update Summary | Display list of updated signature details for the selected database. |
| Detectors | Version number of the IPS protocol detector currently running on the device. |
| Action | <ul style="list-style-type: none"> • Delta Download—Download only the updates from the previously downloaded signature database version. • Full Download—Download the complete signature database; the download might take a while to complete. |
| Download History | |
| User Name | Name of the user who downloaded the signature database. |
| User IP | IP address of the user host where the download was done. |
| Task Name | Name of the task. For example, Download IPS/Application Signatures. |
| Timestamp | Time details when the signature database was downloaded. |
| Result | Successful or failed status of the signature database download. |
| Description | Description of the download task. |

RELATED DOCUMENTATION

[Understanding Signature Databases | 1468](#)

[Using the Signature Database | 1467](#)

Installing the Signature Database Configuration

Once the signature database is downloaded, you can install the active database.

Security Director sends the full signature database update if any one of the following scenarios is true:

- You install an older version of the signature files.
- The corresponding diff files do not exist.
- A signature file is added using the offline update.

When you do not have an Internet connection to download the package, you can perform an offline update of the signature database files by downloading the latest signature version from <https://services.netscreen.com/space/2/latest/latest-space-update.zip> and storing it locally.

To install the signature database:

1. Select **Administration > Signature Database**.

2. Click **Install Signatures**.

The Install Configuration page appears.

3. You can view the summary of active signature database version, which will be installed on your device.

4. Click the check box next to the devices on which you want to install the signature database.

You can select **Full Probe** or **Delta Probe** from Probe Devices or by right-clicking the selected device to validate the intrusion prevention system (IPS) and application firewall licenses.

5. Enable **Incremental Update** to perform an incremental update or a full update of the signature database for the selected device.

6. Select **Run now** to set the signature database to automatically install immediately.

7. Select **Schedule** at a later time to set the signature database to automatically install at the specified time and to take the following actions:

a. Choose a date by clicking the date picker icon.

b. Enter the time.

c. Select the time format from the drop-down menu.

8. Select the **Recurrence** check box to enable the schedule to recur in a given time interval.

9. Click **OK**.

The signature database configuration installation is complete.

RELATED DOCUMENTATION

[Understanding Signature Databases | 1468](#)

[Using the Signature Database | 1467](#)

[Downloading the Signature Database Configuration | 1472](#)

[Uploading the Signature Database Configuration from a File System | 1473](#)

Downloading the Signature Database Configuration

The following download options are available for the signature database configuration download:

- **Delta Download**—Downloads only the updates from the previously downloaded version.
- **Full Download**—Downloads the complete signature database; the download might take a longer amount of time.

To download the signature database configuration:

1. Select **Administration > Signature Database**.

2. Click **Download Configuration**.

The Download Configuration page appears.

3. Enter the destination URL where you want to download the IPS and AppFw signature database in the Download URL field. For example, <https://services.netscreen.com>.

4. Enable the Proxy Server field to send the download configuration traffic.

5. Select **Run now** to automatically download the signature database immediately.

6. Select **Schedule at a later time** to set the signature database to automatically download at the specified time and to take the following actions:

a. Choose a date by clicking the date picker icon.

b. Enter the time.

c. Select the time format from the drop-down menu.

7. Select the **Recurrence** check box to enable the schedule to recur in a given time interval.

8. Click **OK**.

All the downloaded signatures are created in the System domain in read-only mode. The configuration that are downloaded are also saved in the System domain.

RELATED DOCUMENTATION

[Understanding Signature Databases | 1468](#)

[Using the Signature Database | 1467](#)

[Installing the Signature Database Configuration | 1471](#)

[Uploading the Signature Database Configuration from a File System | 1473](#)

Uploading the Signature Database Configuration from a File System

You can upload the signature database if you do not have a latest version of the database updates. You can get the latest version of the database file at: <https://services.netscreen.com/space/2/latest/latest-space-update.zip>.

To upload the signature database:

1. Select **Administration > Signature Database**.
2. Click Upload From File System.
3. Browse and select the attack bundle, which consists of the latest signature versions available at the time.
4. Click Upload to upload the signature to Security Director.

Once the upload is completed, you can install the latest signature file version on to a device.

RELATED DOCUMENTATION

[Understanding Signature Databases | 1468](#)

[Using the Signature Database | 1467](#)

[Downloading the Signature Database Configuration | 1472](#)

[Installing the Signature Database Configuration | 1471](#)

License Management

IN THIS CHAPTER

- [About the License Notification Settings Page | 1474](#)
- [Notification Settings | 1476](#)

About the License Notification Settings Page

IN THIS SECTION

- [Tasks You Can Perform | 1474](#)
- [Field Descriptions | 1475](#)

To access this page, click **Administration > License Management > Notification Settings**.

You can configure the polling schedule to poll the devices for license details. If you want to send notification regarding licenses that are about to expire, you can enable the license notification settings and add the e-mail recipients. An e-mail will be sent to the configured recipient with license expiry details.

Tasks You Can Perform

You can perform the following tasks from this page:

- Schedule license polling. See ["Notification Settings" on page 1476](#).
- Enable e-mail notification, create, edit, and delete e-mail setting. See ["Notification Settings" on page 1476](#).

Field Descriptions

Table 408 on page 1475 provides guidelines on using the fields on the License Notification Settings page.

Table 408: Fields on the License Settings Page

| Field | Description |
|----------------------|--|
| Polling Schedule | |
| Schedule ID | Specifies the schedule ID for polling the devices. |
| Recurrence | Specifies an option to poll devices for license details, that is daily, weekly, or monthly. |
| Schedule Day | Specifies the polling interval. |
| Start Time | Specifies the date and time of the polling. |
| Mail Notification | |
| Mail Recipient | Specifies the e-mail ID of the recipient. |
| Days left for expiry | Specifies the number of days before the license expiry when the notification should be sent to the configured recipient. |

RELATED DOCUMENTATION

| |
|---|
| License Management Overview 464 |
| Notification Settings 1476 |

Notification Settings

IN THIS SECTION

- [Schedule License Polling | 1476](#)
- [Enable License Notification Settings | 1477](#)
- [Create E-mail Settings | 1477](#)

You can configure a license polling schedule with daily, weekly, or monthly polling options to set how frequently should the system check for the license expiration and send e-mail. By default, polling occurs weekly once. Configure the e-mail IDs of the recipients to send e-mail notification. You must enable e-mail notification to notify the users. If the validity of the license is less than 30 days, an alert is generated with the license expiry details on the Generated Alerts page in **Monitor > Alerts & Alarms > Alerts**.

Schedule License Polling

You can configure the schedule for polling devices for license details.

To schedule polling:

1. Select **Administration > License Management > Notification Settings**.

The License Settings page is displayed.

2. Click **Schedule Poll**.

The License Schedule Polling page is displayed.

3. Select whether you want to repeat the polling monthly or weekly.

4. Select the polling interval Daily, Weekly, or Monthly.

For weekly polling, select the day in the week. For monthly polling, select the day of the month when the polling should occur.

5. Specify whether you want to run job immediately or schedule it for a later time.

Select **Run now** to run the job immediately or select **Schedule at a later time** and provide a suitable date and time for the job to run.

6. Click **Submit**.

A job is created and you can view job status in the Job Management page. If you cancel the job manually, configured schedule for License Settings page remains the same. To trigger the job again, select Schedule Poll and click **Submit**.

By default, a job is triggered with default configurations when Security Director is installed. Whenever you modify the schedule, existing job is updated.

Enable License Notification Settings

To enable the license notification setting:

1. Select **Administration > License Management > Notification Settings**.
2. Enable the Mail Notification option.

A confirmation message is displayed for enabling the notification.

You can view the list of e-mail recipients and notification interval. By default, the E-mail notification is disabled.

Create E-mail Settings

To add the recipients to send e-mail notifications regarding the license expiry:

1. Select **Administration > License Management > Notification Settings**.
The License Settings page is displayed.
2. Click + icon.
The Create Mail Settings Page is displayed.
3. Enter the e-mail ID of the recipient and number of days before license expiry to send the e-mail notification.
4. Click **Submit**.

You can see the added e-mail recipient in the License Settings page. You can modify the existing details of the e-mail recipient or delete it.

RELATED DOCUMENTATION

| [License Management Overview](#) | 464

Migrating Content from NSM to Security Director

IN THIS CHAPTER

- [NSM Migration](#) | 1478

NSM Migration

Before You Begin


Migrating policies from NSM requires the NSM database to be exported in .xdiff format. You must copy this file to your local machine and provide its path to migrate policies from NSM to Security Director.

Starting in Junos Space Security Director Release 16.2, you can migrate firewall and NAT policies from Network and Security Manager (NSM) to Security Director for a set of devices. All objects supported by Security Director (addresses, services, address groups, service groups, and schedulers) can be imported with the policy, with the exception of polymorphic objects. Rules referring to unsupported objects are disabled after the migration. For example, if a firewall policy rule is configured with the VPN tunnel or if a NAT pool is configured with a routing instance, such rules are disabled after the migration.

At any time, only a single migration from the NSM workflow can be triggered on Security Director.

[Figure 187 on page 1479](#) shows the device import workflow.

Figure 187: High-Level Device Import Workflow

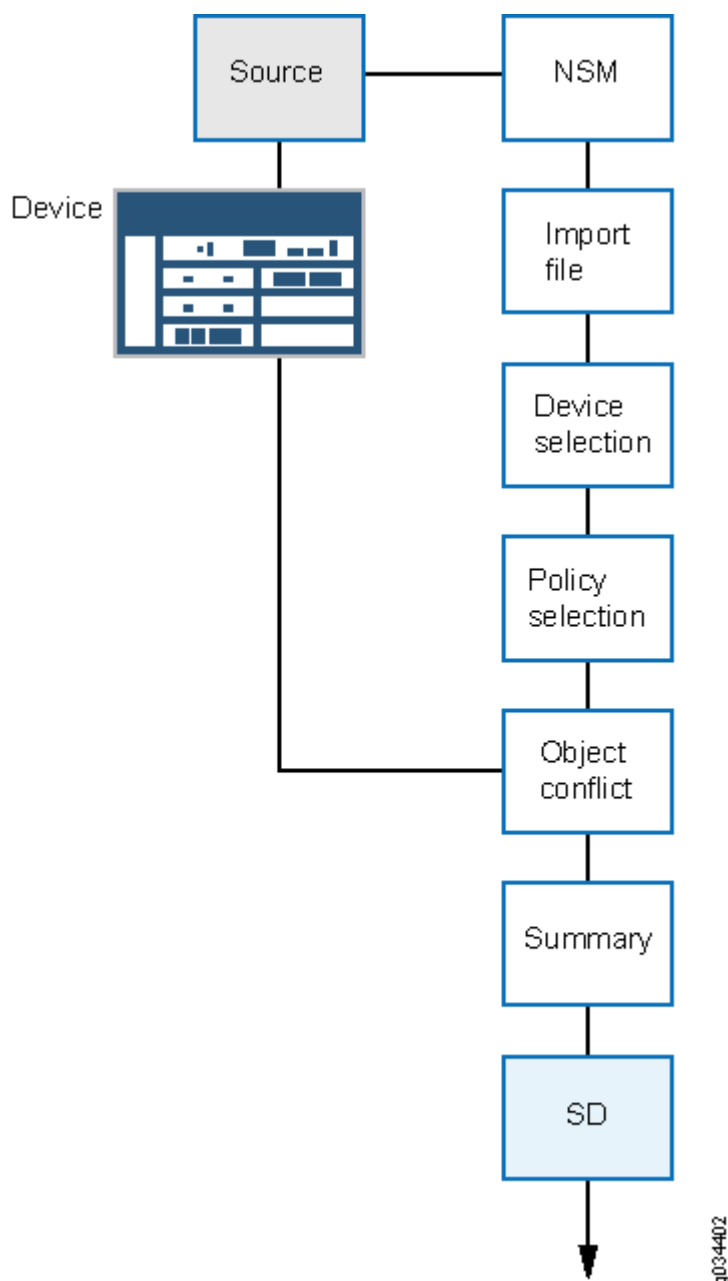

You can migrate policies from the NSM database (for the NSM Release 2010.3 to Release 2012.2) into Security Director.

The following NSM features are supported during the migration:

- Firewall policies with global rules (including support for the global address book)
- NAT policies with support for the global address book

- Nested address group support (Junos OS Release 11.2 and later)
- Negate address group support in firewall rules
- Service offload support in firewall rules
- Source address or source port option in static NAT
- Source port option in source NAT



NOTE: NSM to Security Director migration is not supported for ScreenOS devices.

To import policies from NSM:

1. Select **Administration > **NSM Migration**.**

The Migration From NSM page appears.

2. Click **Launch.**

The NSM Migration page appears.

3. Browse to the path where the .xdiff file is stored, and select the appropriate .xdiff file generated from NSM. Click **OK to import the .xdiff file to the Security Director server.**

The Devices page appears showing the name of the available devices, the IP address of each device, the Junos OS version of each device, the platform, the device family, and the domain.

4. Select the devices for which you want to import the policies, and click **Next.**

The Managed Services summary page appears. This page provides the following information.

- Policy name and type (firewall or NAT)
- Number of rules with errors or warnings
- Summary that includes:
 - Number of IP addresses, services, or NAT pool objects
 - Rules with unsupported objects

5. Select the policy that you want to import, and click **Next.**

The Conflict Resolution page appears showing a list of conflicts, if any. An object conflict occurs when the name of the object to be imported matches an existing object, but the definition of the object does not match.

Conflicting objects can be IP addresses, services, or NAT pool objects. You can take the following actions for the conflicting objects:

- Rename object—Give the conflicting object a new name.
- Overwrite with imported value—Overwrite the existing object with the new object.

- Keep existing object—Keep the existing object, and ignore the new object.

Once the initial naming conflict has been resolved, the object conflict resolution checks for further conflicts with the new name and definition until resolution is complete.



NOTE: If Security Director finds further conflicts, the Conflict Resolution page is refreshed to display the new conflicts.

6. After all object conflicts are resolved, click **Finish**.

After the import is complete, a comprehensive report for each policy imported is available. You can download the summary report from your browser to your local machine. The summary report is saved as SummaryReport.zip.

7. Go to the Firewall Policy or NAT Policy workspace to view the imported policies. Security Director creates a group policy without associating any devices with it. You can continue to import policy objects for all other devices. All imported device policies will show up as group policies in Security Director. You can perform all normal firewall or NAT policy functions on these imported policies.



NOTE:

- If a group has more than 300 rules, Security Director automatically breaks the group into multiple rule groups, each containing 400 rules. The only exception is that these groups are placed last in the list of groups. The size of the last group is calculated by the upper threshold of 300 rules and lower threshold of 100 rules.
- _DE is affixed to the device specific policies name by Security Director. You cannot directly assign device specific policies to a group policy. Assign devices to the device specific policies first, and then assign those devices to the group policies.
- _PRE is affixed to the group policy names that are added before the device specific policies and _POST is affixed to the group policy names that are added after the device specific policies.

Change History Table

Feature support is determined by the platform and release you are using. Use [Feature Explorer](#) to determine if a feature is supported on your platform.

| Release | Description |
|---------|--|
| 16.2 | Starting in Junos Space Security Director Release 16.2, you can migrate firewall and NAT policies from Network and Security Manager (NSM) to Security Director for a set of devices. |

Policy Sync Settings

IN THIS CHAPTER

- [About the Policy Sync Settings Page | 1482](#)
- [Out-of-Band Changes Overview | 1487](#)

About the Policy Sync Settings Page

IN THIS SECTION

- [Tasks You Can Perform | 1483](#)
- [Field Descriptions | 1483](#)

To access this page, click **Administration > Policy Sync Settings**.

Starting in Junos Space Security Director Release 19.2R1, use the Policy Sync Settings page to automatically synchronize out-of-band firewall policy changes from a device to Security Director. The device must be discovered by Security Director. The out-of-band configuration changes are changes you make to a device configuration through any method other than deploying the configuration change from Security Director. By default, the automatic synchronization is disabled.

This page is displayed only in the global domain and applicable for only device-specific firewall policies. Out-of-band firewall policy changes are applicable for both standard firewall and unified firewall policies.

Starting in Junos Space Security Director Release 19.4R1, you can import or reject out-of-band changes for an IPS policy from a device to Security Director manually or automatically. For devices running Junos OS Release 18.2 and later, you can synchronize the changes from standard or unified firewall policies page. For devices with Junos OS Release 18.1 and earlier, you can synchronize the IPS policy changes from the IPS Policies page.

Starting in Junos Space Security Director Release 20.1R1, you can import or reject out-of-band changes for a NAT policy from a device to Security Director manually or automatically.

When a device is discovered in Security Director, the Managed Status is displayed as Managed in the Security Devices page. For automatic synchronization of out-of-band policy changes, the managed status of the device must be SD Changed, Device Changed, or In Sync. You must update the device at least once from Security Director. In case of logical systems (LSYS) or tenant systems (TSYS), root device may show the status as Device Changed if a policy is assigned to it. Update the root device so that the status is In Sync.

**NOTE:**

- The out-of-band changes are not supported if more than one policy is assigned to a device or if rules are configured in All Devices Policy Pre/Post policies.
- The out-of-band changes does not support synchronization of duplicate rule-sets in a NAT policy.

Tasks You Can Perform

You can perform the following tasks from this page:

- Enable automatic synchronization of out-of-band firewall, IPS, and NAT policy changes in the device.
- Choose an option to automatically accept or reject the out-of-band firewall, IPS, and NAT policy changes.

Field Descriptions

[Table 409 on page 1484](#) provides guidelines on using the fields on the Policy Sync Settings page.

Table 409: Fields on the Policy Sync Settings Page

| Field | Description |
|--------------------------|---|
| Auto Sync Policy Changes | <p>By default, the automatic synchronization of out-of-band firewall, IPS, and NAT policy changes is disabled. Enable this option to automatically synchronize out-of-band firewall, IPS, and NAT policy changes from a device to Security Director.</p> <p>When automatic synchronization of out-of-band policy changes is disabled, you can import the out-of-band changes from a device manually.</p> <p>After you synchronize the policy changes, the policy shows that you'll need to republish the policy. A dummy publish and update has to be performed in order to set the managed status as In sync.</p> <p>The custom rule group in a policy is not supported. If the policy has a custom rule group, then the custom rule group is deleted after synchronizing the policy and all the rules are grouped inside device-specific or predefined rule groups.</p> |

Table 409: Fields on the Policy Sync Settings Page (*Continued*)

| Field | Description |
|------------------------|--|
| Policy Source of Truth | <p>The policy “source of truth” is where the device is synchronized to Security Director. All device side out of sync changes are rejected to match Security Director.</p> <ul style="list-style-type: none"> • Select Security Director to automatically reject all out-of-band firewall, IPS, and NAT policy changes from a device to Security Director. • Select Device to automatically synchronize all out-of-band firewall, IPS, and NAT policy changes from a device to Security Director. Select Firewall Policy, IPS Policy, or NAT policy. <p>This triggers Auto Policy Sync job in the Job Management page. After the job is successful, the out-of-band changes are synchronized from the device to Security Director.</p> <p>Before synchronizing the out-of-band changes automatically, Security Director automatically takes snapshot of the policy so that you can revert/rollback to older version of the policy. To roll back a policy version, see "Create and Manage Policy Versions" on page 497.</p> |
| Policies | <p>Select one or more policies (Firewall/NAT/IPS) to be automatically synchronized from a device to Security Director.</p> |

Table 409: Fields on the Policy Sync Settings Page (Continued)

| Field | Description |
|-----------------------------|---|
| Default Action for Policies | <p>Select an option. During automatic synchronization of out-of-band firewall, IPS, and NAT policy changes from a device to Security Director, you can choose to rename object, keep existing value, or overwrite with imported value. By default, Rename Object is selected.</p> <p>Rename object—Provides a new name to the conflicting object. "_1" is added by default to the name. Device Preview or Update deletes the original object and adds the object with the new name.</p> <p>Overwrite with Imported Value—Overwrites the existing object with the new object. The object is replaced in Security Director with the new object. No change is seen in preview for the imported device. The change appears in the next preview/update for all other devices that use this object.</p> <p>Keep Existing Object—Keeps the existing object and ignores the new object. The object in Security Director is used instead of the device object.</p> |

RELATED DOCUMENTATION

[Out-of-Band Changes Overview | 1487](#)

[Viewing and Synchronizing Out-of-Band Firewall Policy Changes Manually | 510](#)

[Viewing and Synchronizing Out-of-Band IPS Policy Changes Manually | 738](#)

[Viewing and Synchronizing Out-of-Band NAT Policy Changes Manually | 806](#)

[Viewing the Details of a Job in Security Director | 200](#)

Out-of-Band Changes Overview

IN THIS SECTION

- [Benefits | 1488](#)

Out-of-band configuration changes are the changes you make to a device configuration through any method other than deploying the configuration change from Security Director.

Out-of-band changes include configuration changes made by:

- Using the device CLI
- Using the device Web-based management interface (J-Web interface)

When you make out-of-band changes, Security Director detects the configuration changes on the device. It sets the device configuration state to Out of Sync because the device configuration does not match with the build mode configuration for the device. You cannot deploy configuration on devices that are in the Out of Sync state. To return the device configuration state to In Sync, click **Resynchronize with Network**. This task resynchronizes the device's configuration stored in Security Director to match the device configuration.

After the configuration status of the device is In Sync, you can see an icon next to policy for which out of band policy changes have been made in the device. You can automatically or manually synchronize the out-of-band firewall, IPS, and NAT policy changes from a device. Automatic synchronization is applicable for only device-specific policies and manual synchronization is applicable for both device-specific and group policies.

Starting in Junos Space Security Director Release 19.4R1, you can import or reject out-of-band changes for an IPS policy from a device to Security Director manually or automatically. For devices running Junos OS Release 18.2 and later, you can synchronize the IPS policy changes from standard firewall policies or unified firewall policies page. For devices running Junos OS Release 18.1 and earlier, you can synchronize the IPS policy changes from the IPS Policies page.

Starting in Junos Space Security Director Release 20.1R1, you can import or reject out-of-band changes for a NAT policy from a device to Security Director manually or automatically.



NOTE: If Space as System of Record (SSOR) is enabled, then the device out-of-band changes should be resolved from the Junos Space UI for Security Director out-of-band changes to work.

Benefits

- Device and Security Director always synchronized—You can use our new Auto Sync Policy Changes setting in **Administration** > **Policy Sync Settings** page to automatically synchronize the out-of-band device-specific firewall and IPS policy changes made on the device with Security Director. You can also manually synchronize the out-of-band changes.
- Better control over configuration changes—You can now view a list of all out-of-band changes made on a managed device. You can accept or reject the changes to synchronize the device with Security Director.

RELATED DOCUMENTATION

[About the Policy Sync Settings Page | 1482](#)

[Viewing and Synchronizing Out-of-Band Firewall Policy Changes Manually | 510](#)

[Viewing and Synchronizing Out-of-Band IPS Policy Changes Manually | 738](#)

[Viewing and Synchronizing Out-of-Band NAT Policy Changes Manually | 806](#)

[Resynchronizing Managed Devices with the Network in Security Director | 244](#)

Insights Management

IN THIS CHAPTER

- [Add Insights Nodes | 1489](#)
- [About the Alerts Settings Page | 1493](#)
- [Create a New Alert Setting | 1494](#)
- [Configure System Settings | 1496](#)
- [About the Identity Settings Page | 1498](#)
- [Add JIMS Configuration | 1499](#)
- [Edit and Delete an Identity Setting | 1501](#)
- [Configure Mitigation Settings | 1502](#)
- [About the Threat Intelligence Page | 1504](#)
- [Configure Threat Intelligence Source | 1505](#)
- [Edit and Delete Threat Intelligence Source | 1506](#)
- [About the ServiceNow Configuration Page | 1507](#)
- [About the Backup & Restore Page | 1509](#)
- [Create a Backup File and Restore the Configuration | 1510](#)
- [Download and Delete a Backup File | 1512](#)

Add Insights Nodes

Use Security Director Insights to automate security operations and take effective actions on security events logged by Juniper Networks Security products. It connects disparate security tools for seamless security operations and incident response. It ingests logs from SRX Series devices and other security vendors to correlate and provide automated enrichment to identify the threats.

Security Director Insights is a single virtual appliance (Service VM) that runs on the VMware vSphere infrastructure. You must configure Security Director Insights as nodes for Security Director to discover the Security Director Insights virtual machine (VM).

You can deploy Security Director Insights as a single node or two nodes (primary and secondary) with high availability (HA).

To configure a standalone or primary (active) node:

1. Select **Security Director > Administration > Insights Management > Insights Nodes**.

The Insights Nodes page appears.

2. Complete the configuration according to the guidelines provided in [Table 410 on page 1490](#).

3. Click **Save**.

If the details provided are valid, the Security Director Insights node is added successfully. Click **Reset** to remove the node.

Table 410: Add Insights Nodes

| Setting | Guidelines |
|------------|---|
| IP Address | Enter the IP address of the Security Director Insights VM. (This is the IP address you configured during the Security Director Insights VM installation). |
| Username | The username to access the VM is always <i>admin</i> . You cannot modify this field. |
| Password | Enter the password to access the Security Director Insights VM. (This is the same password you use to log in to the VM CLI with your admin credentials). |

To configure the secondary (standby) node details:

1. Select the **Enable HA** option.

The HA Setup page appears.

2. Complete the configuration according to the guidelines provided in [Table 411 on page 1491](#).

3. Click **Save & Enable**.

The Insights Nodes page appears. It shows the status of the secondary node activation.

4. Click **Refresh Data** to check the status of the secondary node configuration.

After the configuration is successful, you see the respective IP addresses appearing in the Data/Management Virtual IP and Monitoring Virtual IP columns.



NOTE: Keep clicking the Refresh Data option until you see that the secondary node is configured successfully and all the other errors disappear, if any.

Table 411: Configure HA Setup

| Setting | Guidelines |
|--------------------------------|--|
| <i>Secondary Node Details</i> | |
| Secondary system IP | Enter the IP address of the secondary (standby) node. |
| Username | The username to access the virtual machine is always 'admin'. You cannot modify this field. |
| Password | Enter your SSH password to access the secondary node. (This is the same password you use to log in to the VM CLI with your admin credentials.) |
| <i>HA Settings</i> | |
| Data Virtual IP/Netmask | Enter the virtual IP address for data traffic between primary (active) and secondary (standby) nodes. |
| HA monitor Virtual IP/ Netmask | Enter the virtual IP address for HA monitoring traffic between active and standby nodes. |
| Ping IPs | (Optional) Enter a list of IP addresses for ping tests. |



NOTE: To enable HA, the IP addresses on Security Director Insights must be static.

In the Node Status section, you can see the complete configuration details of the primary (active) and secondary (standby) nodes.

You can take the following actions:

- **Stop standby**—In the Standby section, click **Stop** to temporarily stop HA service on a standby node to perform maintenance tasks.
- **Start standby**—In the Standby section, click **Start** to restart the HA service, if it is stopped.
- **Rebuild standby**—To rebuild out-of-sync data on the standby node, click **Rebuild**.

- Failover—To manually shut down the HA service on the active node, so that the standby node becomes the active node, click **Failover** in the Active section. The virtual IP address will be reassigned to the new active node. You can use the Failover option to perform any maintenance tasks on the active node. You must click **Start** to restart the HA services.

Table 412 on page 1492 shows more details of each Security Director Insights node in the Insights Node page.

Table 412: Insights Node Details

| Field Name | Description |
|-----------------|--|
| Hostname | Specifies the hostname of the node. |
| Data Traffic IP | Specifies the data traffic IP address of the node. |
| HA Monitor IP | Specifies the HA monitoring IP address of the node. |
| CPU Usage | Specifies the CPU usage of the node. |
| Memory Usage | Specifies the memory usage of the node. |
| Online | Specifies whether the node is online or offline. |
| Role | Specifies whether the node is primary (active) or secondary (standby). |
| Status | Specifies the health of the node. |

RELATED DOCUMENTATION

| *Security Director Insights Overview*

About the Alerts Settings Page

IN THIS SECTION

- [Tasks You Can Perform | 1493](#)
- [Field Descriptions | 1493](#)
- [Display, Delete, or Edit an Existing Alert | 1494](#)

To access this page, select **Security Director > Administration > Insights Management > Alert Settings**.

The configurations we do from the Alert Settings page are for system-audit and system-health checks. On this page, you can configure alert settings, so that when the system state reaches a certain threshold, an alert is generated and you are notified.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create new alert settings. See *Create a New Alert Setting*.
- Display, delete, or edit an existing alert configuration.

Field Descriptions

[Table 413 on page 1493](#) describes the fields on the Alert Settings page.

Table 413: Fields on the Alert Settings Page

| Field | Description |
|-------------|---|
| Description | Provides details about the alert settings, such as alert type, event type, report format, and date range. |
| Delivery | Specifies whether an alert is generated based on a trigger or by schedule. |
| Actions | For each generated alert, you can take different actions such as, display the alert, edit the alert setting, or delete the alert. |

Display, Delete, or Edit an Existing Alert

To display, delete, or edit an existing alert configuration:

- Select **Display** to view the details of an alert in HTML or PDF format. You can configure the format.
- Select **Edit** and then **Save** to modify the alert configuration. You can, for example, change details of the system audit and system health alert settings.
- Select **Delete** and then **Save** to delete the current settings of an alert.

RELATED DOCUMENTATION

| *Create a New Alert Setting*

Create a New Alert Setting

You can configure alert settings to generate alerts based on system health or data in the system audit records. You can configure event types to include in the alert notification, date range, whether to notify all users or only the current user, alerts related to the overall health of the system, when there was a data retention, and so on. You can generate an alert immediately or schedule the alert generation for a later day and time. The generated report is sent to the recipient’s e-mail ID in HTML or PDF format.

To create an alert setting:

1. Select **Administration > Insights Management > Alert Settings**.
The Alerts Settings page appears.
2. Click **Create**.
The Create New Alert Setting page appears.
3. Complete the configuration according to the guidelines provided in [Table 414 on page 1494](#).
4. Click **Save**.
A new alert setting is created and displayed on the Alerts Settings page.

Table 414: Create New Alert Setting

| Setting | Guideline |
|---------|--|
| Type | Select the type of alert notification to be configured: System Audit or System Health. |

Table 414: Create New Alert Setting *(Continued)*

| Setting | Guideline |
|-------------------------------------|---|
| <i>System Audit Alert Settings</i> | |
| Event Type | <p>Select the event types to include in the alert notification:</p> <ul style="list-style-type: none"> • Login/Logout—Generate an alert when a user logs in to or logs out of the system. • Add/Update Users—Generate an alert when a new user is added or an existing user's details are updated. • System Settings—Generate alerts when there are changes to the system settings. • Restarts—Generate an alert when the system is restarted. • Remote Support—Generate an alert when a user has sought remote support to address any issues. |
| Users | Select whether to send the alert notification to all users or only to the current user. |
| Date Range | To filter the report notification by time period, select one of the following options: Last Day, Last Week, Last Month, Last Year |
| Max Num Results | Enter the number of rows of results to include in the alert notification (default is 25). |
| Format | Select HTML or PDF as the notification output format. |
| Generate On | <p>Select Trigger to generate an alert immediately.</p> <p>Select By Schedule to schedule the alert generation on a specified day and time. For time, use the format 00:00 am or pm.</p> |
| Recipient's Email | Enter a valid e-mail address of the recipient. You can enter more than one e-mail ID. Separate e-mail IDs with commas. |
| <i>System Health Alert Settings</i> | |

Table 414: Create New Alert Setting *(Continued)*

| Setting | Guideline |
|-------------------|--|
| Health | <p>For system health alerts, select either Overall Health metrics, Data Retention, or HA Alerts.</p> <p>For data retention, you will receive alerts when the device reaches 80% capacity. You must delete old data to store the incoming data.</p> |
| Format | Select HTML or PDF as the notification output format. |
| Generate On | <p>Select Trigger to generate an alert immediately.</p> <p>Select By Schedule to schedule the alert generation on a specified day and time. For time, use the format 00:00 am or pm.</p> <p>NOTE: For HA alerts, you can only trigger an alert. You cannot schedule the alert generation.</p> |
| Recipient's Email | Enter a valid e-mail address of the recipient. You can enter more than one e-mail ID. Separate e-mail IDs with commas. |

RELATED DOCUMENTATION

About the Alerts Settings Page

Add Insights Nodes

Configure System Settings

Use the System Settings page to configure or revise outgoing e-mail notification settings. You can also test the current outgoing mail configuration. E-mail notifications are generated for alert settings configured on the Alert Settings page. Ensure that the Security Director Insights node connectivity is working fine. E-mail messages are sent from the Security Director Insights VM.

To configure outgoing e-mail settings:

1. Select **Administration > Insights Management > System Settings**.

The System Settings page appears.

2. In the Outgoing Email Settings section, complete the configuration according to the guidelines provided in [Table 415 on page 1497](#).

Table 415: Configure Outgoing E-mail Settings

| Setting | Guideline |
|---------------|---|
| SMTP Host | Enter the IP address of the enterprise mail host. |
| SMTP Port | Enter the SMTP port number (default is 587). You can add Gmail. Most of the other e-mail providers use port 465 for SSL. |
| Use SSL | This option is enabled by default. You can use Secure Sockets Layer (SSL) for further protection. Deselect the option to disable the use of SSL. |
| SMTP Login | Enter the username that you want to use for authentication. |
| SMTP Password | Enter an SMTP password for the login account. |
| From Address | Enter the e-mail address of the sender; the default is noreply@juniper.net. |

On the Administration > Insights Management > System Settings page, in the Test Outgoing Email Settings section, you can test the current outgoing mail configuration.

To test an outgoing e-mail setting:

1. Enter an e-mail address (or series of e-mail addresses, separated by commas) to which the test e-mail will be sent by Security Director Insights.
2. Click **Test** to test your e-mail notification configuration. An e-mail will be sent by Security Director Insights to the e-mail address(es) entered, based on the configuration settings.

The format of the test e-mail is This e-mail is a confirmation that your Insights Central Manager (VM name) is correctly configured. This email was sent on Fri, 09 Oct 2020 at 22:02:02 +0000 to abc@xxx.com. For further information, please visit <https://support.juniper.net>.



NOTE: This test verifies the ability to send an e-mail. It does not test the validity of the e-mail address.

RELATED DOCUMENTATION

| *Add Insights Nodes*

About the Identity Settings Page

IN THIS SECTION

- [Tasks You Can Perform | 1498](#)
- [Field Descriptions | 1498](#)

To access this page, select **Administration > Insights Management > Identity Settings**.

Security Director Insights interfaces with Juniper Identity Management Service (JIMS) to map endpoint IP addresses in events and logs to usernames and hostnames. You can configure JIMS to provide access information to Security Director Insights.

Tasks You Can Perform

You can perform the following tasks from the Identity Settings page:

- Add a JIMS configuration. See *Add JIMS Configuration*.
- Delete or edit an existing JIMS configuration. See *Edit and Delete an Identity Setting*.
- Select **Test** to test the JIMS configuration. You can verify the configuration and check whether the Security Director Insights VM can communicate with JIMS successfully.

Field Descriptions

[Table 416 on page 1498](#) provides guidelines to use the fields on the Identity Settings page.

Table 416: Fields on the Identity Settings Page

| Field | Description |
|---------|---|
| Details | Specifies details about the JIMS configuration. |

Table 416: Fields on the Identity Settings Page (Continued)

| Field | Description |
|---------|---|
| Actions | For each JIMS configuration, you can take different actions such as editing or deleting the JIMS configuration. |

RELATED DOCUMENTATION

| |
|--|
| <i>Add JIMS Configuration</i> |
| <i>Edit and Delete an Identity Setting</i> |

Add JIMS Configuration

Use the Add JIMS Configuration page to configure a JIMS profile to obtain user identities. Ensure that you have added the IP address of Security Director Insights in the JIMS server.

To add a JIMS configuration:

1. Select **Administration > Insights Management > Identity Settings**.
The Identity Settings page appears.
2. Click **Create**.
The Add JIMS Configuration page appears.
3. Complete the configuration according to the guidelines provided in [Table 417 on page 1499](#).
4. Click **Save**.
A new JIMS configuration is added to Security Director Insights and listed on the Identity Settings page.

Table 417: Add JIMS Configuration

| Setting | Guideline |
|------------------------------|--|
| JIMS Endpoint Hostname/IP | Enter a valid IPv4 or IPv6 address or the hostname of the JIMS server. |

Table 417: Add JIMS Configuration *(Continued)*

| Setting | Guideline |
|---------------------|--|
| JIMS Port Number | Select the connection port of the JIMS server from the list. The range is 1 to 65,535. |
| SSL | Select an SSL setting: Enabled or Disabled . |
| Identity Sources | Select an identity source to collect data from: Active Directory, Syslog, or both. |
| Use Reverse DNS | Reverse DNS lookup converts an IP address to hostname to identify the domain name of the source. Choose to enable or disable the Use Reverse DNS setting. This option is enabled by default. |
| Exclude hostnames | You can disallow identity mapping for certain hosts. Enter the hostnames separated by commas. Identity mappings for these hosts are ignored and not included in event handling and displays. |
| OAuth Client ID | <p>Enter the Open Authorization (OAuth) client ID that the Security Director Insights provides to the JIMS server as part of its authentication. Security Director Insights must authenticate itself with the JIMS server to obtain an access token that allows it to query the JIMS server for user identity information.</p> <p>The client ID must be consistent with the API client configured on JIMS.</p> |
| OAuth Client Secret | Enter the client secret that Security Director Insights provides to the JIMS server as part of its authentication. The client secret must be consistent with the API client configured on JIMS. |

RELATED DOCUMENTATION

About the Identity Settings Page

Edit and Delete an Identity Setting

Edit and Delete an Identity Setting

IN THIS SECTION

- [Edit a JIMS Configuration | 1501](#)
- [Delete a JIMS Configuration | 1501](#)

You can edit and delete a JIMS configuration from the Identity Settings page.

Edit a JIMS Configuration

To edit a JIMS configuration:

1. Select **Administration>Insights Management>Identity Settings**.
The Identity Settings page appears.
2. Select the JIMS configuration that you want to modify, and click the **Edit** icon.
The Edit JIMS Configuration page appears, displaying the same fields that were presented when you added the JIMS configuration.
3. Modify the JIMS configuration fields.
4. Click **Save** to save your changes.
You are taken to the Identity Settings page. A confirmation message appears, indicating the status of the edit operation.

Delete a JIMS Configuration

To delete a JIMS configuration:

1. Select **Administration>Insights Management>Identity Settings**.
The Identity Settings page appears.
2. Select the JIMS configuration that you want to delete, and click the **Delete** icon.
An alert message appears, asking you to confirm the delete operation.
3. Click **Yes** to delete the selected JIMS configuration.
A confirmation message appears, indicating the status of the delete operation.

RELATED DOCUMENTATION

About the Identity Settings Page

Configure Mitigation Settings

In response to an incident, you can either isolate or quarantine an infected endpoint based on its IP address and block the threat source IP address. This prevents you from downloading files that are known to be harmful or suspicious. Mitigation is performed by either Security Director Policy Enforcer or Juniper Advanced Threat Prevention Cloud (ATP Cloud).

To configure mitigation settings:

1. Select **Administration>Insights Management>Mitigation Settings**.
The Mitigation Settings page appears.
2. Complete the configuration according to the guidelines provided in [Table 418 on page 1502](#).
3. Click **Save**.
The mitigation settings are saved and enabled.

Table 418: Configure Mitigation Settings

| Setting | Guideline |
|------------------------------------|---|
| <i>ATP Cloud</i> | |
| Application Token | Add an application token to allow Security Director Insights or OpenAPI users to securely access ATP Cloud APIs over HTTPS. |
| Open API (Infected hosts) URL | Enter an endpoint URL for the infected host (OpenAPI) and blocklisted API (Gophro). |
| Open API (Threat Intelligence) URL | Enter the Threat Intelligence OpenAPI URL to program the ATP Cloud command-and-control (C&C) server feeds. |
| Blocklist Feed Name | Enter the blocklist feed name. Security Director Insights sends the source IP addresses to the blocklist feed with the specified feed name. You cannot modify the feed name after it is configured. |
| <i>Policy Enforcer</i> | |

Table 418: Configure Mitigation Settings (Continued)

| Setting | Guideline |
|-------------------------|---|
| Hostname | <p>Enter the hostname of the Policy Enforcer VM. (This is the hostname you configured during the installation of the Policy Enforcer VM.)</p> <p>To configure Policy Enforcer running on Security Director Insights, enter the hostname or IP address of the Security Director Insights VM.</p> |
| SSH Username | Enter root as the username of the Policy Enforcer VM (for the standalone Policy Enforcer). For the integrated Policy Enforcer running on Security Director Insights, the 'admin' username is already prepopulated. |
| SSH Password | Enter the root password of the Policy Enforcer VM (for the standalone Policy Enforcer). For the integrated Policy Enforcer running on Security Director Insights, enter the password of the Security Director Insights CLI administrator. |
| API Username | Enter the username of the Policy Enforcer controller API. |
| API Password | Enter the password of the Policy Enforcer controller API. |
| Blocklist Feed Name | Ensure that you have configured the blocklist custom feed under Configure > Threat Prevention > Feed Sources > Create Custom Feed. |
| Infected Host Feed Name | Ensure that you have configured the infected host custom feed under Configure > Threat Prevention > Feed Sources > Create Custom Feed. |

Click **Test** to verify the configuration. Also, you have an option to disable the already enabled mitigation setting.

RELATED DOCUMENTATION

How to Monitor Mitigation

About the Threat Intelligence Page

IN THIS SECTION

- [Tasks You Can Perform | 1504](#)
- [Field Descriptions | 1505](#)

To access this page, select **Administration > Insights Management > Threat Intelligence**.

Look up your trusted threat intelligence providers for indicators of compromise to confirm the maliciousness of the reported event. Indicators of compromise include IP addresses, URLs, and file hash observed in the log data. What is considered malicious is based on available knowledge about the threat intelligence provider's output.

Security Director Insights supports the following threat intelligence sources:

| Source | Data |
|-------------|--------------------------------------|
| IBM X-Force | IP lookup and file hash |
| VirusTotal | File hash and URL lookup |
| Opswat | File hash, URL lookup, and IP lookup |

Tasks You Can Perform

You can perform the following tasks from the Threat Intelligence page:

- Configure a threat intelligence source. See *Configure Threat Intelligence Source*.
- Edit and delete an existing threat intelligence source. See *Edit and Delete Threat Intelligence Source*.
- Click **Test** to test the validity of the API key and check whether the Security Director VM can reach a threat intelligence source.

Field Descriptions

Table 419 on page 1505 provides guidelines on using the fields on the Threat Intelligence page.

Table 419: Fields on the Threat Intelligence Page

| Field | Description |
|-------------|--|
| Source | Specifies the threat intelligence source. |
| Description | Specifies the corresponding API details configured for the threat intelligence source. |

RELATED DOCUMENTATION

| |
|---|
| <i>Configure Threat Intelligence Source</i> |
| <i>Edit and Delete Threat Intelligence Source</i> |

Configure Threat Intelligence Source

Configure the threat intelligence providers for IP address, URL, file hash to confirm the maliciousness of the reported event.

To configure the threat intelligence source:

1. Select **Administration > Insights Management > Threat Intelligence**.
The Threat Intelligence page appears.
2. Click the plus icon (+).
The Create Configuration page appears.
3. Complete the configuration according to the guidelines provided in [Table 420 on page 1506](#).
4. Click **OK**.
A new threat intelligence source is configured and listed on the Threat Intelligence page.

Table 420: Configure Threat Intelligence Source

| Setting | Guideline |
|--------------|---|
| Source Name | Select the threat intelligence providers from the list. The supported threat intelligence providers are IBM X-Force, VirusTotal, and OPSWAT Metadefender. |
| API Key | Enter a valid API key to look up the threat intelligence provider's APIs. <ul style="list-style-type: none"> • VirusTotal API Key • OPSWAT API Key • IBM X-Force API Key |
| API Password | Enter a password, if you using IBM X-Force, to look up the threat intelligence provider's APIs. |

RELATED DOCUMENTATION

About the Threat Intelligence Page

Edit and Delete Threat Intelligence Source

Edit and Delete Threat Intelligence Source**IN THIS SECTION**

- [Edit a Threat Intelligence Source | 1506](#)
- [Delete a Threat Intelligence Source | 1507](#)

You can edit and delete the threat intelligence providers from the Threat Intelligence page.

Edit a Threat Intelligence Source

To edit a threat intelligence source configuration:

1. Select **Administration > Insights Management > Threat Intelligence**.

The Threat Intelligence page appears.

2. Select the threat intelligence source that you want to modify, and click the **Edit** icon (pencil).

The Modify Configuration page appears, displaying the same fields that were presented when you configured the threat intelligence sources.

3. Modify the configuration fields as needed.

4. Click **Save** to save your changes.

You are taken to the Threat Intelligence page. A confirmation message appears, indicating the status of the edit operation.

Delete a Threat Intelligence Source

To delete a threat intelligence source:

1. Select **Administration>Insights Management>Threat Intelligence**.

The Threat Intelligence page appears.

2. Select the threat intelligence source that you want to delete and click the **Delete** icon.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected threat intelligence source.

A confirmation message appears, indicating the status of the delete operation.

RELATED DOCUMENTATION

About the Threat Intelligence Page

Configure Threat Intelligence Source

About the ServiceNow Configuration Page

IN THIS SECTION

- [Tasks You Can Perform | 1508](#)
- [Field Descriptions | 1508](#)

To access this page, select **Administration > Insights Management > ServiceNow Configuration**.

You can configure your ServiceNow account to create tickets for incidents.

Tasks You Can Perform

You can perform the following tasks from the ServiceNow Configuration page:

- Configure your ServiceNow account.
- Reset the already configured ServiceNow account details.

Field Descriptions

Table 421 on page 1508 provides guidelines on using the fields on the ServiceNow Configuration page.

Table 421: Fields on the ServiceNow Configuration Page

| Field | Description |
|-------------------------|--|
| ServiceNow Instance URL | Specify the URL of your ServiceNow account. Ensure that you have provided the correct URL. For example, https://example.service-now.com/ . |
| Username | Specify the username to access the ServiceNow instance URL. |
| Password | Specify the password to access the ServiceNow instance URL. |

After you configure the ServiceNow account successfully, you can start creating ServiceNow tickets for any incident on the Monitor > Insights > Incidents page. Expand an incident and click **Create Ticket**.

RELATED DOCUMENTATION

| |
|---------------------------------|
| <i>How to Monitor Incidents</i> |
| <i>Add Insights Nodes</i> |

About the Backup & Restore Page

IN THIS SECTION

- [Tasks You Can Perform | 1509](#)
- [Field Descriptions | 1509](#)

To access this page, select **Administration > Insights Management > Backup & Restore**.

You can back up different configurations of Security Director Insights (not the data collected by Insights) and restore the configuration from the existing backup configuration files.

The configuration backup includes the configurations for Security Director Insights and Log Collector, but not for Policy Enforcer. You can restore the backup configuration settings to any Security Director Insights and Log Collector systems running the same version. There is no dependency on the data contained within Security Director.

Tasks You Can Perform

You can perform the following tasks from the Backup and Restore page:

- Create a new backup. See *Create a Backup File and Restore the Configuration*.
- Restore the configuration from a backed up configuration of Insights.
- Download and delete the backup configuration. See *Download and Delete a Backup File*.
- View the last restoration status. It is shown in the right-hand side of the page.

Field Descriptions

[Table 422 on page 1509](#) provides guidelines on using the fields on the Backup & Restore page.

Table 422: Fields on the Backup and Restore Page

| Field | Description |
|-----------|--|
| File Name | Specifies the filename of the backup configuration file. |

Table 422: Fields on the Backup and Restore Page *(Continued)*

| Field | Description |
|------------------|--|
| Size | Specifies the size of the backup file. |
| Date | Specifies the date and time when the backup was last taken. |
| Software Version | Specifies the backup software version of Security Director Insights. |

RELATED DOCUMENTATION

Create a Backup File and Restore the Configuration

Download and Delete a Backup File

Create a Backup File and Restore the Configuration

IN THIS SECTION

- Create a New Backup File | 1510
- Restore a Configuration | 1511

You can create a new backup of the current configuration (not the data collected by Insights) from the Backup and Restore page. You can restore the configuration from an existing backup or select a configuration file from your local storage.

Create a New Backup File

To create a new backup file:

- Select **Administration > Insights Management > Backup & Restore**.
The Backup & Restore page appears.
- Click the plus icon (+).

The BACKUP page appears.

3. Click **OK**.

Backup is initiated and you are taken to the Backup & Restore page. After the backup is complete, the backup filename and additional details are listed.



NOTE: You can backup only the configuration. The configuration backup includes the configurations for Security Director Insights and Log Collector, but not for Policy Enforcer.

Restore a Configuration

To restore a configuration:

1. Select **Administration > Insights Management > Backup & Restore**.

The Backup & Restore page appears. You can restore the configuration from an existing backup or select a file from your local storage.

2. To restore the configuration from an existing backup, select the backup file listed on the Backup & Restore page and click the **Restore** icon (clock).

OR

To restore the configuration from a file in your local storage, click the clock icon.

The RESTORE page appears. Click **Browse** and select the configuration file from your local storage.

3. Click **OK**.



NOTE: During restoration, all services are temporarily stopped. You can restore the backup configuration settings to any Security Director Insights and Log Collector systems running the same version. There is no dependency on the data contained within Security Director.

RELATED DOCUMENTATION

About the Backup & Restore Page

Download and Delete a Backup File

Download and Delete a Backup File

IN THIS SECTION

- [Download a Backup File | 1512](#)
- [Delete a Backup File | 1512](#)

You can download a backup file to your local system. You can also delete a backup file.

Download a Backup File

To download a backup to your local system:

1. Select **Administration > Insights Management > Backup & Restore**.
The Backup & Restore page appears.
2. Select the backup file that you want to download and click the download icon.
The backup file is downloaded to your local system as a ZIP file.

Delete a Backup File

To delete a backup file:

1. Select **Administration > Insights Management > Backup & Restore**.
The Backup & Restore page appears.
2. Select the backup file that you want to delete and click the delete icon.
An alert message appears, asking you to confirm the delete operation.
3. Click **Yes** to delete the selected backup file.
A confirmation message appears, indicating the status of the delete operation.

RELATED DOCUMENTATION

About the Backup & Restore Page

Create a Backup File and Restore the Configuration