



NorthStar Planner Web UI Guide

Release
5.0.0



Modified: 2019-08-09

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Screenshots of VMware ESXi are used with permission.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

NorthStar Planner Web UI Guide

5.0.0

Copyright © 2019 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

| | | |
|------------------|---|-----------|
| | About the Documentation | ix |
| | Documentation and Release Notes | ix |
| | Documentation Conventions | ix |
| | Documentation Feedback | xi |
| | Requesting Technical Support | xii |
| | Self-Help Online Tools and Resources | xii |
| | Creating a Service Request with JTAC | xiii |
| Chapter 1 | NorthStar Planner Web UI Introduction | 15 |
| | NorthStar Application UI Overview | 15 |
| | UI Comparison | 15 |
| | Browser Compatibility | 16 |
| | The NorthStar Login Window | 16 |
| | NorthStar Planner Web UI Overview | 19 |
| | Network Browser View | 19 |
| | Topology View | 21 |
| | Dashboard View | 22 |
| | Simulation View | 23 |
| | Report Manager View | 23 |
| | Web Planner Top Menu Bar | 24 |
| Chapter 2 | Managing Networks and Network Files | 29 |
| | Loading Network Files | 29 |
| | Load Network File Window Overview | 29 |
| | Network File Types | 31 |
| | Modifying a Network Model | 32 |
| | Importing Archived Networks from NorthStar Controller | 33 |
| | Import Network Wizard | 35 |
| Chapter 3 | Topology View | 37 |
| | Navigation Functions in the Topology View | 37 |
| | Interactive Map Features | 38 |
| | Right-Click Functions | 38 |
| | Auto Group | 42 |
| | Topology Menu Bar | 44 |
| | Show Paths | 44 |
| | Topology Settings Window | 45 |
| | Topology View Left Pane Options | 47 |
| | Protocols | 48 |
| | Types | 49 |
| | AS | 49 |
| | ISIS Areas | 50 |

| | | |
|------------------|--|-----------|
| | OSPF Areas | 50 |
| | Node/Groups | 51 |
| | Network Information Table Overview | 52 |
| | Sorting and Filtering Options in the Network Information Table | 53 |
| | Sorting from Column Headings | 53 |
| | Filtering from Table Rows | 54 |
| | Filtering Using the Search Function | 56 |
| | Using the Show Path Tool from the Tunnels or Demands Tab | 57 |
| | Network Information Table Bottom Tool Bar | 58 |
| | Navigation Tools | 58 |
| | Column Chooser | 58 |
| | Download Data Tool | 59 |
| | Search Function | 59 |
| Chapter 4 | Simulation View | 61 |
| | Simulation | 61 |
| Chapter 5 | Report Manager View | 65 |
| | Report Manager | 65 |
| | Available Reports | 66 |
| | Sorting Report Data by Column | 66 |
| | Report Manager Bottom Tool Bar | 66 |

List of Figures

| | | |
|------------------|--|-----------|
| Chapter 1 | NorthStar Planner Web UI Introduction | 15 |
| | Figure 1: NorthStar Welcome Window | 17 |
| | Figure 2: NorthStar Planner Desktop Welcome Window | 18 |
| | Figure 3: More Options Menu in the NorthStar Controller Web UI | 18 |
| | Figure 4: Network Browser View | 20 |
| | Figure 5: Topology View | 21 |
| | Figure 6: Dashboard View | 22 |
| | Figure 7: Simulation View | 23 |
| | Figure 8: Report Manager View | 24 |
| | Figure 9: Top Menu Bar | 24 |
| | Figure 10: Active Users Window | 26 |
| | Figure 11: Console Window | 27 |
| Chapter 2 | Managing Networks and Network Files | 29 |
| | Figure 12: Load Network File Window | 30 |
| | Figure 13: Network Browser Archives Tab | 33 |
| | Figure 14: Launch the Import Network Wizard | 35 |
| | Figure 15: Setup Import Window | 36 |
| Chapter 3 | Topology View | 37 |
| | Figure 16: Right-Click Options for Nodes or Groups | 39 |
| | Figure 17: Right-Click Options for Links | 40 |
| | Figure 18: Right-Click Options for the Topology Map as a Whole | 41 |
| | Figure 19: Auto Group Window Example | 42 |
| | Figure 20: Regular Expression Rule Window | 43 |
| | Figure 21: Topology Settings Menu Bar | 44 |
| | Figure 22: Topology Settings Window | 45 |
| | Figure 23: Wrap Links as Great Arcs Example | 46 |
| | Figure 24: Light and Dark Map Styles | 46 |
| | Figure 25: Protocols List | 48 |
| | Figure 26: Left Pane Types List | 49 |
| | Figure 27: AS List | 50 |
| | Figure 28: ISIS Areas List | 50 |
| | Figure 29: OSPF Areas List | 51 |
| | Figure 30: Example Node/Groups List | 52 |
| | Figure 31: Network Information Table | 52 |
| | Figure 32: Right-Click Options Example | 53 |
| | Figure 33: Sort Arrow in Table Column Heading | 54 |
| | Figure 34: Right-Click Filtering Options Example | 54 |
| | Figure 35: Text Search Box | 56 |
| | Figure 36: Text Search Box | 56 |

| | | |
|------------------|--|-----------|
| | Figure 37: Paths Window | 57 |
| | Figure 38: Network Information Table Bottom Tool Bar | 58 |
| | Figure 39: Column Chooser for the Interfaces Tab | 59 |
| Chapter 4 | Simulation View | 61 |
| | Figure 40: Simulation, Step 1 | 62 |
| | Figure 41: Simulation, Step 2 | 63 |
| | Figure 42: Simulation, Step 3 | 63 |
| | Figure 43: Simulation, Step 4 | 64 |
| Chapter 5 | Report Manager View | 65 |
| | Figure 44: Report Manager Overview | 65 |
| | Figure 45: Report Manager Overview | 66 |
| | Figure 46: Report Manager Bottom Tool Bar | 67 |

List of Tables

| | | |
|------------------|---|-----------|
| | About the Documentation | ix |
| | Table 1: Notice Icons | x |
| | Table 2: Text and Syntax Conventions | x |
| Chapter 1 | NorthStar Planner Web UI Introduction | 15 |
| | Table 3: Controller Versus Planner Comparison | 15 |
| | Table 4: Network Browser Tabs | 20 |
| Chapter 2 | Managing Networks and Network Files | 29 |
| | Table 5: Network File Types by Category | 31 |
| Chapter 3 | Topology View | 37 |
| | Table 6: Supported Topology Window Navigation Functions | 37 |
| | Table 7: Right-Click Options for Nodes or Groups | 39 |
| | Table 8: Right-Click Options for Links | 40 |
| | Table 9: Right-Click Options for the Topology Map as a Whole | 41 |
| | Table 10: Regular Expression Examples | 43 |
| | Table 11: NorthStar Planner Topology View Left Pane Options | 47 |
| | Table 12: Right-Click Filtering Options in the Nodes Tab | 55 |
| | Table 13: Right-Click Filtering Options in the Links Tab | 55 |
| | Table 14: Right-Click Filtering Options in the Interfaces Tab | 55 |
| | Table 15: Navigation Tools in the Network Information Bottom Tool Bar | 58 |
| Chapter 5 | Report Manager View | 65 |
| | Table 16: Tools in the Report Manager Bottom Tool Bar | 67 |

About the Documentation

- Documentation and Release Notes on page ix
- Documentation Conventions on page ix
- Documentation Feedback on page xi
- Requesting Technical Support on page xii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

Documentation Conventions

Table 1 on page x defines notice icons used in this guide.

Table 1: Notice Icons







| Icon | Meaning | Description |
|--|--------------------|---|
|  | Informational note | Indicates important features or instructions. |
|  | Caution | Indicates a situation that might result in loss of data or hardware damage. |
|  | Warning | Alerts you to the risk of personal injury or death. |
|  | Laser warning | Alerts you to the risk of personal injury from a laser. |
|  | Tip | Indicates helpful information. |
|  | Best practice | Alerts you to a recommended use or implementation. |

Table 2 on page x defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

| Convention | Description | Examples |
|------------------------------|---|--|
| Bold text like this | Represents text that you type. | To enter configuration mode, type the configure command: user@host> configure |
| Fixed-width text like this | Represents output that appears on the terminal screen. | user@host> show chassis alarms No alarms currently active |
| <i>Italic text like this</i> | <ul style="list-style-type: none"> Introduces or emphasizes important new terms. Identifies guide names. Identifies RFC and Internet draft titles. | <ul style="list-style-type: none"> A policy <i>term</i> is a named structure that defines match conditions and actions. <i>Junos OS CLI User Guide</i> RFC 1997, <i>BGP Communities Attribute</i> |
| <i>Italic text like this</i> | Represents variables (options for which you substitute a value) in commands or configuration statements. | Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i> |


Table 2: Text and Syntax Conventions (continued)

| Convention | Description | Examples |
|--------------------------------|--|---|
| Text like this | Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components. | <ul style="list-style-type: none">To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level.The console port is labeled CONSOLE. |
| < > (angle brackets) | Encloses optional keywords or variables. | stub <default-metric <i>metric</i>>; |
| (pipe symbol) | Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity. | broadcast multicast (<i>string1</i> <i>string2</i> <i>string3</i>) |
| # (pound sign) | Indicates a comment specified on the same line as the configuration statement to which it applies. | rsvp { # Required for dynamic MPLS only |
| [] (square brackets) | Encloses a variable for which you can substitute one or more values. | community name members [<i>community-ids</i>] |
| Indentation and braces ({ }) | Identifies a level in the configuration hierarchy. | <pre>[edit] routing-options { static { route default { nexthop <i>address</i>; retain; } } }</pre> |
| ;(semicolon) | Identifies a leaf statement at a configuration hierarchy level. | |
| GUI Conventions | | |
| Bold text like this | Represents graphical user interface (GUI) items you click or select. | <ul style="list-style-type: none">In the Logical Interfaces box, select All Interfaces.To cancel the configuration, click Cancel. |
| > (bold right angle bracket) | Separates levels in a hierarchy of menu selections. | In the configuration editor hierarchy, select Protocols>Ospf . |

Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

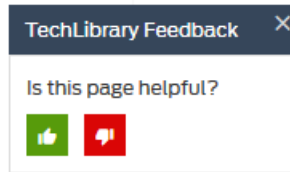

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>

- Join and participate in the Juniper Networks Community Forum:
<https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.

CHAPTER 1

NorthStar Planner Web UI Introduction

- [NorthStar Application UI Overview on page 15](#)
- [NorthStar Planner Web UI Overview on page 19](#)
- [Web Planner Top Menu Bar on page 24](#)

NorthStar Application UI Overview

NorthStar has two user interfaces (UIs):

- NorthStar Controller—web UI for working with a live network
- NorthStar Planner—for simulating the effect of various scenarios on the network, without affecting the live network. The NorthStar Planner is currently in transition from a desktop application to a web UI. Until the transition is complete, both the full-featured desktop application and the in-development web UI are available and documented separately.

UI Comparison

[Table 3 on page 15](#) summarizes the major use cases for the NorthStar Controller and NorthStar Planner.



NOTE: All user administration (adding, modifying, and deleting users) must be done from the NorthStar Controller web UI.



NOTE: A subset of the Planner functionality shown here is currently available in the NorthStar Planner web UI.

Table 3: Controller Versus Planner Comparison

| NorthStar Controller (web client) | NorthStar Planner (Java client) |
|---|--|
| Manage, monitor, and provision a live network in real-time. | Design, simulate, and analyze a network offline. |
| Live network topology map shows node status, link utilization, and LSP paths. | Network topology map shows simulated or imported data for nodes, links, and LSP paths. |

Table 3: Controller Versus Planner Comparison (continued)

| NorthStar Controller (web client) | NorthStar Planner (Java client) |
|---|---|
| Network information table shows live status of nodes, links, and LSPs. | Network information table shows simulated or imported data for nodes, links, and LSPs. |
| Discover nodes, links, and LSPs from the live network using PCEP or NETCONF. | Import or add nodes, links, and LSPs for network modeling. |
| Provision LSPs directly to the network. | Add and stage LSPs for provisioning to the network. |
| Create or schedule maintenance events to re-route LSPs around the impacted nodes and links. | Create or schedule simulation events to analyze the network model from failure scenarios. |
| Dashboard reports shows current status and KPIs of the live network. | Report manager provides extensive reports for simulation and planning. |
| Analytics collects real-time interface traffic or delay statistics and stores the data for querying and chart displays. | Import interface data or aggregate archived data to generate historical statistics for querying and chart displays. |


Browser Compatibility

For accessing the NorthStar Controller web UI, we recommend Google Chrome and Mozilla Firefox browsers for Windows and Mac OS. We also recommend that you keep your browser updated to a recent version.


The NorthStar Login Window

Connect to NorthStar using a recommended browser.

Your external IP address is provided to you when you install the NorthStar application. In the address bar of your browser window, type that secure host external IP address, followed by a colon and port number 8443 (for example, **https://10.0.1.29:8443**). The NorthStar login window is displayed, as shown in [Figure 1 on page 17](#). This same login window grants access to the NorthStar Controller (Operator) and both versions of the NorthStar Planner (Planner for web UI, Planner Desktop for desktop application). Make your selection from the Access Portal drop-down menu. For Operator and Planner, enter your username and password, and click **Sign In**.

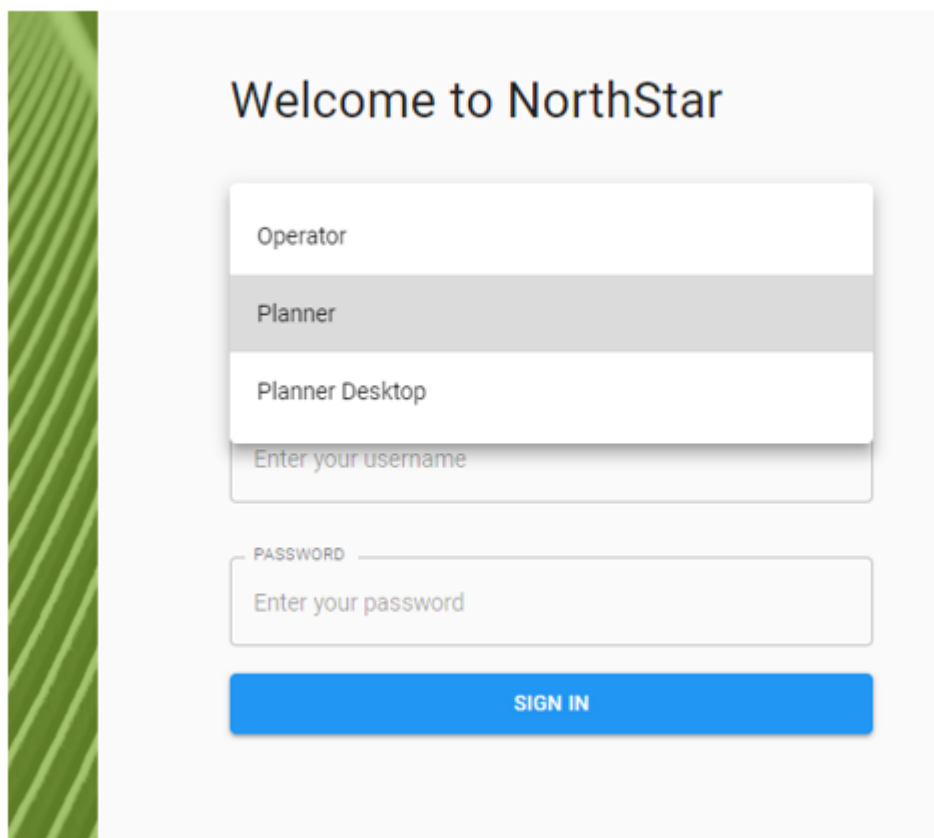
Figure 1: NorthStar Welcome WindowThe image shows the NorthStar Welcome Window. On the left is a green vertical bar with a diagonal line pattern. The main area is light gray. At the top, it says "Welcome to NorthStar". Below this is a white box containing a drop-down menu with three options: "Operator", "Planner" (which is highlighted with a gray background), and "Planner Desktop". Below the drop-down menu is a text input field with the placeholder "Enter your username". Below that is a password input field with the label "PASSWORD" and the placeholder "Enter your password". At the bottom is a blue button with the text "SIGN IN" in white.

If you select NorthStar Planner Desktop from the drop-down menu, the window changes as shown in [Figure 2 on page 18](#).

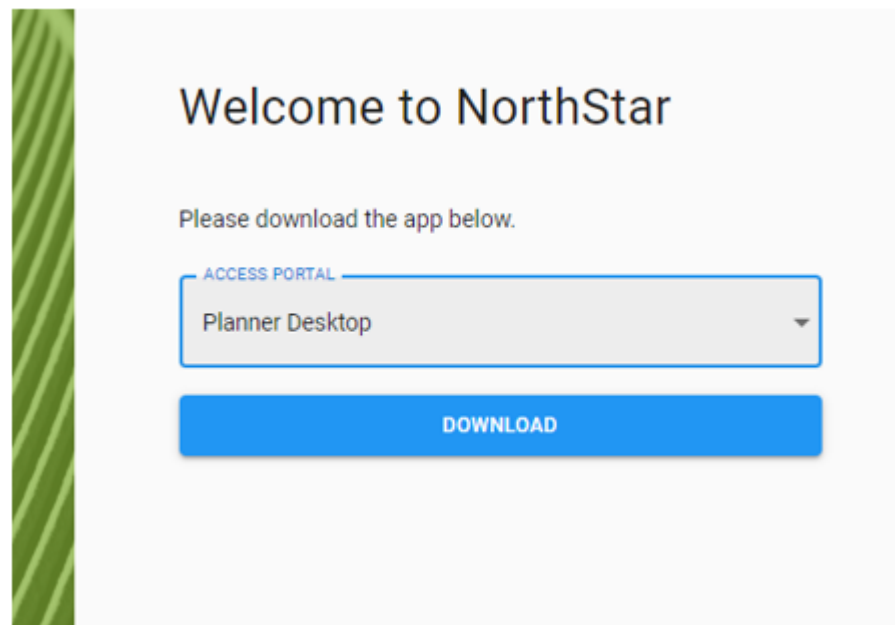Figure 2: NorthStar Planner Desktop Welcome Window

Click **Download**. Depending on the browser you are using when you initiate the download and launch the NorthStar Planner desktop application, a dialog box might be displayed, asking if you want to open or save the .jnlp file, accept downloading of the application, and agree to run the application. Once you respond to all browser requests, a dialog box is displayed in which you enter your user ID and password. Click **Login**.

You can also launch the NorthStar Planner desktop application from within the NorthStar Controller by navigating to **NorthStar Planner** from the NorthStar Controller More Options menu as shown in [Figure 3 on page 18](#):

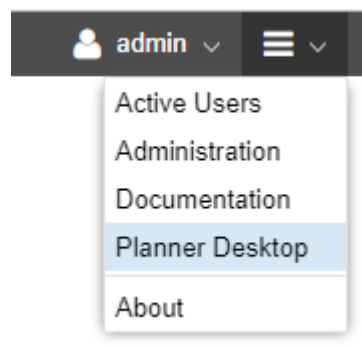Figure 3: More Options Menu in the NorthStar Controller Web UI



NOTE: If you attempt to reach the login window, but instead, are routed to a message window that says, “Please enter your confirmation code to complete setup,” you must go to your license file and obtain the confirmation code as directed. Enter the confirmation code along with your administrator password to be routed to the web UI login window. The requirement to enter the confirmation code only occurs when the installation process was not completed correctly and the NorthStar application needs to confirm that you have the authorization to continue.



WARNING: To avoid a Browser Exploit Against SSL/TLS (BEAST) attack, whenever you log in to NorthStar through a browser tab or window, make sure that the tab or window was not previously used to surf a non-HTTPS website. A best practice is to close your browser and relaunch it before logging in to NorthStar.

A configurable User Inactivity Timer is available to the System Administrator (only). If set, any user who is idle and has not performed any actions (keystrokes or mouse clicks) is automatically logged out of NorthStar after the specified number of minutes. By default, the timer is disabled. To set the timer, navigate to **Administration > System Settings** in the NorthStar Controller web UI.

NorthStar Planner Web UI Overview

The NorthStar Planner web UI has five main views that are summarized here and discussed in detail in later topics:

- Network Browser
- Topology
- Dashboard
- Simulation
- Report Manager

Network Browser View

When you first log into the Planner, the Network Browser view is displayed as shown in [Figure 4 on page 20](#). There are four tabs: Sessions, My Networks, Shared, and Archives, described in [Table 4 on page 20](#).

Once you have opened a network or session, the other main views become available; they are network-specific.

Figure 4: Network Browser View

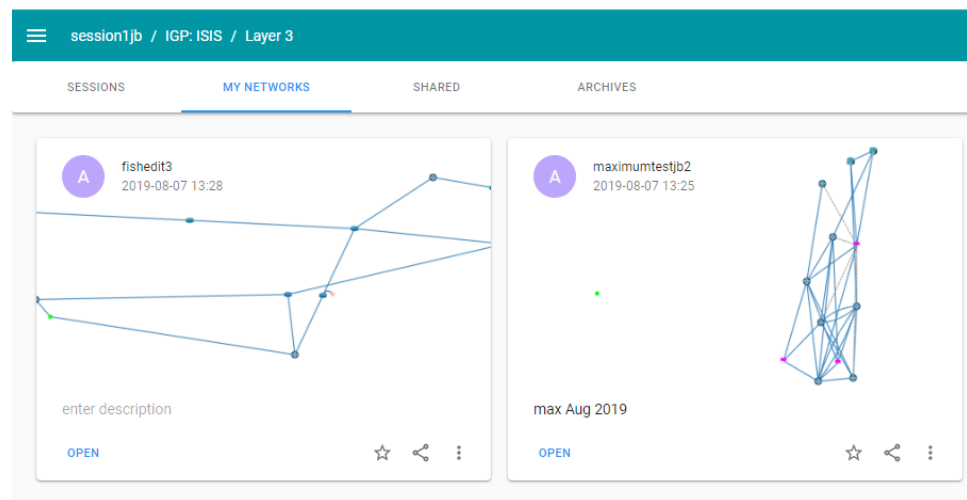


Table 4: Network Browser Tabs

| Network Browser Tab | Description |
|---------------------|--|
| Sessions | A session is like an instance of a network. You can think of it as your working directory. When you open a network, a session instance is created, along with a session file and directory path on the server. In the session, you can make changes to the network, run reports, and run simulations. When you're finished with your work, you can close the session with or without saving. If you save it, it then becomes available in the My Networks tab. If you don't save it, the changes you made are not preserved. |
| My Networks | Also called Specification (Spec) files, the networks listed in the My Networks tab are collections of system files on the server, each collection representing a network model. These networks are stored on the server, not just in memory like sessions. |
| Shared | Spec files that you have access to, but don't own. If you open a shared network and save it (Save As), it becomes available in My Networks. To make a spec file into a shared network for other users, click the Share icon in the lower right corner of the network's "tile" in the Network Browser. |
| Archives | Archived networks are generated in the NorthStar Controller (Administration > Task Scheduler), after which, they are available in the Network Browser under the Archives tab. |

Each network has a "tile" in the Network Browser with the following key features:

- The user group that opened the network is indicated by the letter in the colored circle. For example, in [Figure 4 on page 20](#), the letter "A" beside the network name and timestamp refers to the Admin group. The availability of some of the other features in the tiles are dependent on user group permissions.
- A thumbnail of the network topology is included.
- For networks you own, you can enter a network description by clicking where it says, "enter description".

- In the lower left corner are links for any available actions such as Open, Resume, or Close.
- In the lower right corner are icons that allow you to:
 - Tag the network as a favorite (star icon). Favorites are displayed first in the Network Browser.
 - Share the network with others, in which case, it appears in the Shared tab of the Network Browser.
 - From the More Items icon (vertical dots), you can download the network to your local machine or delete the network.


When you open a network, it opens in Topology view, as shown in [Figure 5 on page 21](#). Click on the menu icon (horizontal bars) in the upper left corner of the Planner to select one of the other main views for the open network or to return to the Network Browser.



NOTE: See “Web Planner Top Menu Bar” on page 24 for information about the features of the top menu bar.

Topology View

Figure 5: Topology View

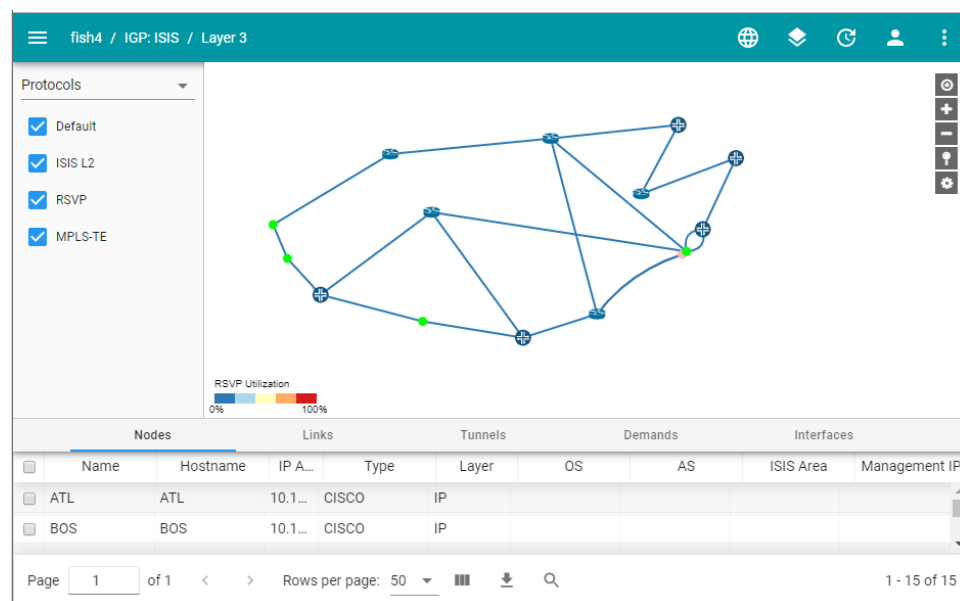

There are three main sections to the Topology view, similar to those in the NorthStar Controller UI:


- The left pane offers a number of display options that are selectable using the drop-down menu.
- The center area is devoted to the topology map of the network.

- Across the bottom of the display is the network information table with five available tabs: Nodes, Links, Tunnels, Demands, and Interfaces.

Dashboard View

The Dashboard view presents a variety of status and statistics information related to the network, in the form of widgets as shown in [Figure 6 on page 22](#). To enlarge a widget to full screen, click the full screen icon in the upper right corner of the widget.

Figure 6: Dashboard View

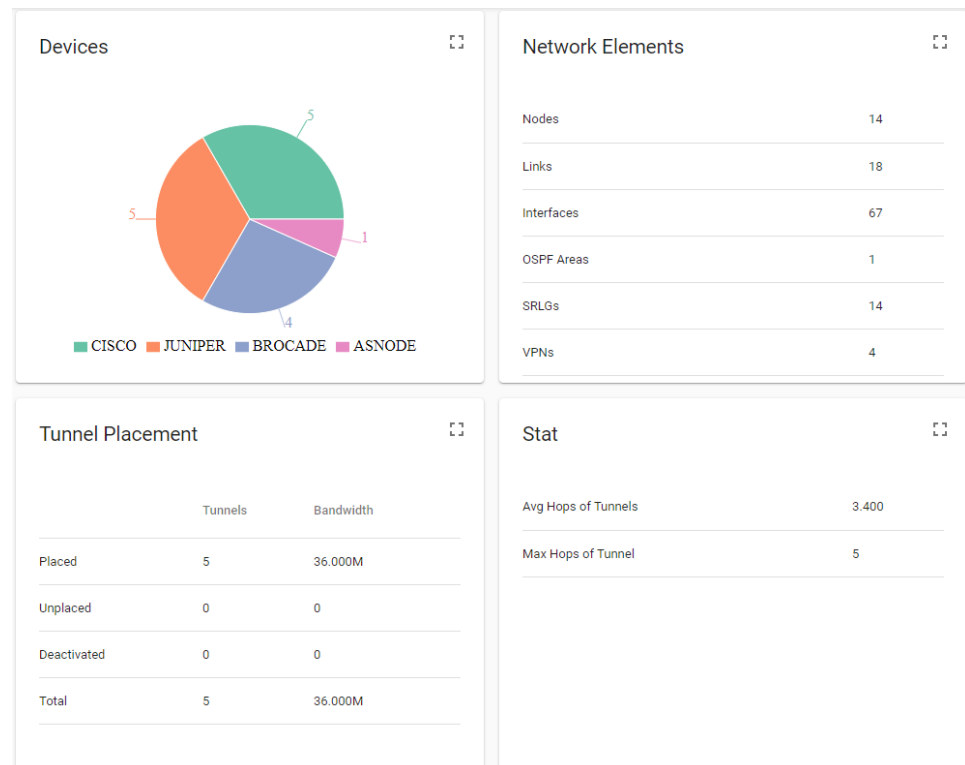

The widgets currently available are:

| Widget | Description |
|------------------|---|
| Devices | Shows the number of devices of each type included in the network, color coded. |
| Network Elements | Shows the number of nodes, links, interfaces, OSPF areas, SRLGs, and VPNs in the network. |
| Tunnel Placement | Shows how many tunnels are placed, unplaced, and deactivated, and their bandwidths. |
| Stat | Shows the average and maximum hops of tunnels in the network. |

Simulation View

The Simulation View, one step of which is shown in [Figure 7 on page 23](#), presents a tool for designing and executing failure simulations.



NOTE: You can run simulations at either Layer 3 or Tunnel/Layer 2 which you select from the top menu bar.

See [“Simulation” on page 61](#) for more information about running simulations.

Figure 7: Simulation View

fish4 / IGP: ISIS / Tunnel Layer

Failure Simulation

- 1 Setup Simulation
- 2 Advanced Settings
Optional
- 3 Create Additional Reports
Optional
- 4 Run Simulation

BACK NEXT

Setup Simulation

Exhaustive Failure Combination
Single

Elements to simulate *

- ☐ Node
- ☐ Link
- ☐ Site
- ☐ SRLG
- ☐ Parallel Links

* Required

Report Manager View

The Report Manager view, shown in [Figure 8 on page 24](#), lists all the configuration and simulation reports that can be generated by the Planner. Click any report name on the left to display the report data on the right. A download option is available for saving reports.

Figure 8: Report Manager View

| Pathname | From | To | Bandwidth(...) | Type | Priority | Path |
|----------|------|-----|----------------|----------------|----------|---------|
| RBOSWDC | BOS | WDC | 10 | R,A2Z,MASK... | 02,02 | BOS-DET |
| RWDCBOS | WDC | BOS | 15 | R,A2Z,PR(W... | 02,02 | WDC-CHI |
| RATLCHI | ATL | CHI | 1.0 | R,A2Z,MASK... | 02,02 | ATL-HOU |
| RHOUWDC | HOU | WDC | 5.0 | R,A2Z,PR(H... | 02,02 | HOU-DAL |
| RSJCCHI | SJC | CHI | 5.0 | R,A2Z,PR(SJ... | 02,02 | SJC-LAX |

See “Report Manager” on page 65 for more information about working with reports.

Related Documentation

- [Web Planner Top Menu Bar on page 24](#)
- [Simulation on page 61](#)
- [Report Manager on page 65](#)

Web Planner Top Menu Bar

The left side of the top menu bar in the NorthStar Planner web UI (all views) displays the main menu icon at the far left (horizontal bars), the name of the currently open network, the protocol the network is using, and the currently selected layer (Tunnel Layer or Layer 3). The right side of the top menu bar displays icons that provide viewing and administrative functions. See [Figure 9 on page 24](#).

Figure 9: Top Menu Bar



NOTE: Many of these options are only available when you have an active session.

Click the network icon (world) for a drop-down list of saving and closing options:

- **Save**

Saves your work to the NorthStar data directory. This option is only available when you open a network from the My Networks tab. To save one of the other network types, use the Save As option.

- **Save As**

Saves a network to the NorthStar data directory. The Save As window prompts you for a network name and an optional description. The saved network is then available to you from the My Networks tab.



NOTE: Spaces and most special characters are not allowed in network names. Hyphens and underscores are allowed. These restrictions do not apply to descriptions.

- **Load**

Loads one of the many files that comprise the current model. You can use the Load option to modify the current model since a direct Modify function is not yet available. The workflow is to download a file, modify it, save it, and then upload the edited version, refreshing the model. See [“Loading Network Files” on page 29](#) for the procedure.

- **Close**

Closes the network you currently have open. The name of the open network disappears from the upper right corner of the Planner window. If you are in any main view other than Network Browser when you close the network, the display returns to Network Browser where you can select a network to open.

It's completely fine to log out of Planner or close your browser without explicitly closing your session; the session will be available for you to resume your work when you log back in because it is still active on the server. This can save you considerable loading time when you start work again. However, we do recommend that you save the session periodically and before you leave it for a period of time (overnight, for example).



NOTE: Remember that if you explicitly close a network without saving it, your work is not preserved.

You can have multiple sessions active on the server, but be aware that each one consumes one Planner license. Also, although you can have multiple sessions active on the server, your browser can be connected to only one at a time. If you have one open in your browser and you open another, it will replace the first.

Click the Layers icon (stacked squares) to select either Layer 3 or Tunnel/Layer 2 for display and simulations. Layer 3 is the default. You can always see which layer is currently selected by looking on the left side of the upper menu bar.

The Update Network icon (clock and arrow) updates the network with changes from the server. NorthStar Planner does not have a way to listen for server changes, but it does get messages from the server when there have been changes. When Planner receives

update messages, it changes the color of the Update Network icon to indicate that updates are pending. You can then choose a convenient time to click the Update Network icon and refresh the display.

Click the user icon in the upper right corner of the Planner window to log out of NorthStar Planner.

Click the More Items icon (vertical dots) to select one of the following options:

- **View Active Users**

Select View Active Users to display a list of users currently logged into the Planner as shown in [Figure 10 on page 26](#).

Figure 10: Active Users Window

| Active Users | | | | | |
|--------------|---------------|------------------|----------|----------------|------------------|
| Username | From | Logged In | Duration | Group | Current Baseline |
| user1jb | 10.104.42.224 | 2019-03-18 20:51 | 0 min | Administrators | sample_fish |
| admin | 10.104.42.224 | 2019-03-18 20:48 | 3 min | Administrators | Operator |
| user1jb | 10.104.42.224 | 2019-03-18 20:49 | 2 min | Administrators | jb1planner |

OK

The Current Baseline column shows the name of the network each user has open.




NOTE: At this time, there is no user management in the NorthStar Planner web UI. New users must be created in the NorthStar Controller. See *User Management*.

- **View Console**

View Console is only available in Topology View. When you select this option, the console opens on the right side of the Planner window as shown in [Figure 11 on page 27](#).

Figure 11: Console Window

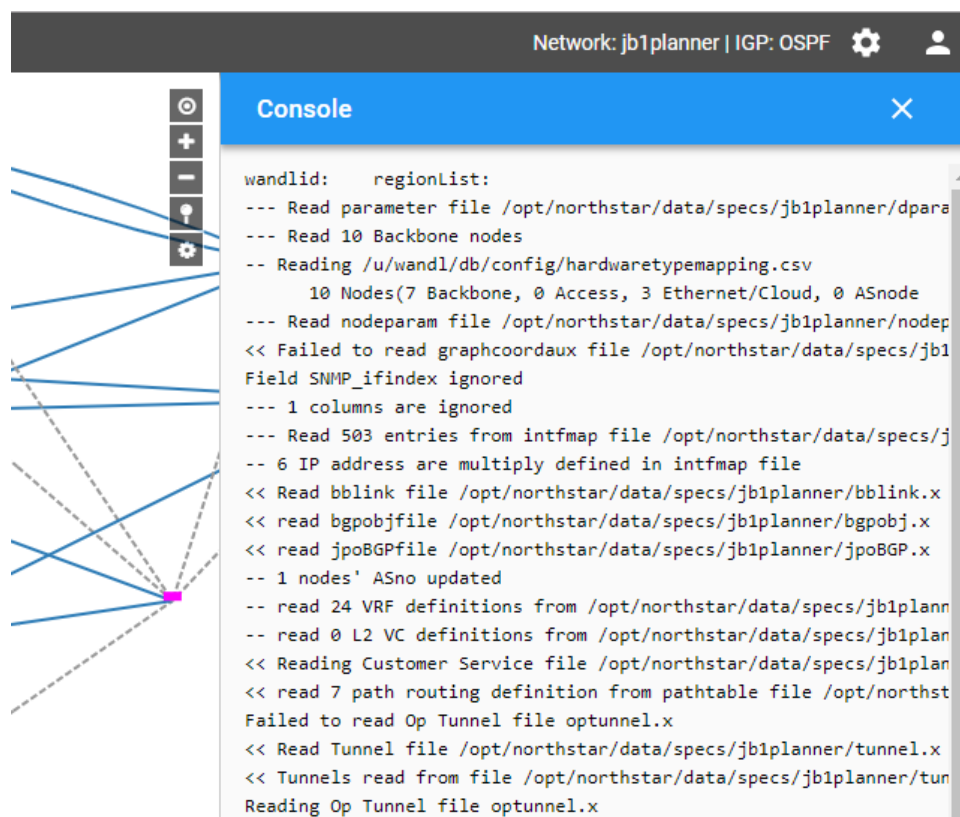

The console displays information when loading a network, reading files, running failure simulation, generating reports, and various other functions. You can use the console to trace through information in detail.

- Related Documentation**
- [NorthStar Planner Web UI Overview on page 19](#)
 - [Loading Network Files on page 29](#)
 - [User Management \(NorthStar Controller User Guide\)](#)

CHAPTER 2

Managing Networks and Network Files

- [Loading Network Files on page 29](#)
- [Importing Archived Networks from NorthStar Controller on page 33](#)
- [Import Network Wizard on page 35](#)

Loading Network Files

From the network icon (world) in the top menu bar of the Planner, you can select **Load** to update any of the network files that contribute to building the current network model. You can use this option to modify the current model since a direct Modify function is not yet available in the web UI. The workflow is to download a file, modify it using a text editor, save it, and then upload the saved version, refreshing the model. Over time, you could accumulate a variety of network files with specific parameters that are then available for you to load. These files are all stored on the NorthStar server.


Loading network files is described in the following sections:

- [Load Network File Window Overview on page 29](#)
- [Network File Types on page 31](#)
- [Modifying a Network Model on page 32](#)

Load Network File Window Overview

[Figure 12 on page 30](#) shows the Load Network File window.

Figure 12: Load Network File Window

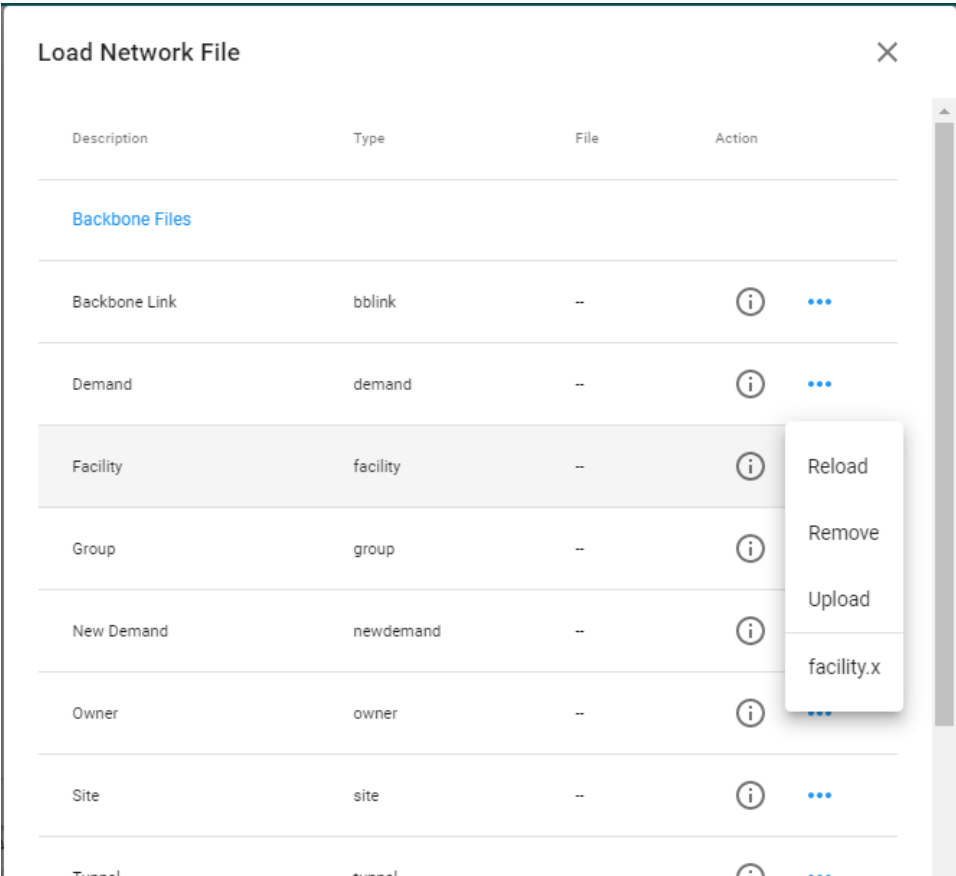

The screenshot shows a window titled "Load Network File" with a close button (X) in the top right corner. Below the title is a table with four columns: "Description", "Type", "File", and "Action". The table lists several network file types, including "Backbone Link", "Demand", "Facility", "Group", "New Demand", "Owner", "Site", and "Tunnel". The "Facility" row is highlighted, and a context menu is open over its "Action" column, showing options: "Reload", "Remove", "Upload", and "facility.x".

| Description | Type | File | Action |
|--------------------------------|-----------|------|---------|
| Backbone Files | | | |
| Backbone Link | bblink | -- | (i) ... |
| Demand | demand | -- | (i) ... |
| Facility | facility | -- | (i) ... |
| Group | group | -- | (i) ... |
| New Demand | newdemand | -- | (i) ... |
| Owner | owner | -- | (i) ... |
| Site | site | -- | (i) ... |
| Tunnel | tunnel | -- | (i) ... |

Key features of the window include:

- The first column (Description) shows a descriptive label for each network file type. The actual file type names are listed in the second column (Type).
- The third column (File) displays the specific file of each file type being used to build the current model.
- The Information icon ("i") is available for all file types. Click it for information about the file type's contents and definition.
- In the Action column, click the More Actions icon (...) to display a drop-down menu from which you can choose one of the following options:
 - **Reload:** Reloads the existing file and refreshes the model.
 - **Remove:** Removes the current file so it is no longer used to build the model. The model is refreshed without the features that were contributed by that file.

- **Upload:** Uploads a different file of the same file type from the server and refreshes the model using the information provided by that file instead of the information provided by the original file.
- Filenames listed below the dividing line are the files stored on the server that are associated with the current model and are available to load. Any files that you previously saved and uploaded would be listed there.

Network File Types

The file types available for loading are described in [Table 5 on page 31](#).



NOTE: Click the Information icon (“i”) beside each file type in the Load Network File window for additional information about the file type.

Table 5: Network File Types by Category

| File | Description |
|-----------------------|--|
| Backbone Files | |
| bblink | Contains backbone link information for the network. |
| demand | Contains user traffic requirements. |
| facility | A facility is a set of nodes and links likely to fail together. The facility file defines the links and/or nodes associated with a facility. |
| group | Defines the grouping of nodes in the network topology. |
| newdemand | Allows you to specify an additional file containing user traffic requirements besides the demand file. The purpose is to reduce your effort in manually modifying the existing demand file, and/or having multiple versions. In addition, the newdemand file is often used in theoretical “What if...” situations in determining capacity planning for the current network state. |
| owner | Facilitates identifying the ownership of nodes and demands. |
| site | Specifies site information. The site file is used to define nodes in the same physical location such as a building or campus. |
| tunnel | Contains information about LSP tunnels. |
| Cost Files | |
| custrate | Assign tariffs for links used in the network to approximate the total cost of the network. |
| Traffic Files | |
| egress | Contains egress traffic of the network interfaces load. Egress traffic specifies traffic that is going out of the network interfaces. This data is used for calculating link utilization and load. |

Table 5: Network File Types by Category (continued)

| File | Description |
|------------------------------|--|
| ingress | Contains ingress traffic of the network interfaces load. Ingress traffic specifies traffic that is going into the network interfaces. This data is used for calculating link utilization and load. |
| trafficload | Allows you to import measured bandwidth utilizations based on data collected from the network. Traffic loads for each PVC can be specified over the time intervals for which the data was collected. |
| t_trafficload | Similar to the trafficload file, but for LSP tunnels (layer 2 instead of layer 3). |
| Device-Specific Files | |
| tbit | Stores names for the tunnel attributes. |
| usertunneldef | Stores user tunnel definition information. |

Modifying a Network Model

To modify a network model, use the following example procedure:

1. The File column of the Load Network File window displays a link to the specific file of each file type being used to build the current model. Click a link to open a window where you can save the file to the server, with a new name.

NorthStar Planner file type extensions appear first in the file name. For example, “bblink” is a file type extension. In order to group network files correctly according to type, NorthStar Planner requires that the correct extension be used. If you don’t name your file using the correct extension when you save a file to the server, NorthStar Planner will add the extension for you. Be aware of that when you look for your files later. For example, if you save a bblink file as testing.1, NorthStar Planner will save it as bblink.testing.1.
2. Open the new file in a text editor and modify it to suit your purpose. Save the file.
3. In the Load Network File window, click the More Actions icon (...) and select **Upload**. Navigate to the file you saved and select it for upload. The new file now appears in the File column.
4. In the Topology view of the model, the model now reflects the information in the newly uploaded network file.
5. Returning to the Load Network File window, click the More Actions icon for that same file type to see that both the original file and the new one you created are listed (below the dividing line), and are available for you to load into the model.

Related Documentation

- [Web Planner Top Menu Bar on page 24](#)

Importing Archived Networks from NorthStar Controller


Archived networks are generated in the NorthStar Controller and saved, after which, they are available in the NorthStar Planner under the Archives tab in the Network Browser view.

Use the following procedure:

1. In the NorthStar Controller, ensure the device profiles are set up correctly. Test connectivity of all devices and troubleshoot as needed until all devices are reachable. See *Device Profile and Connectivity Testing* in the *NorthStar Controller User Guide*.
2. Create and run a device collection task to collect configuration data for the devices. See *Scheduling Device Collection for Analytics* in the *NorthStar Controller User Guide*.
3. Create and run a Network Archive task to archive the collected data. See *Collection Tasks to Create Network Archives* in the *NorthStar Controller User Guide*. **IMPORTANT:** Be sure to select the option to **Archive network data after processing**.

Archived networks created in this way are then available in the Network Browser, Archives Tab as shown in [Figure 13 on page 33](#).

Figure 13: Network Browser Archives Tab

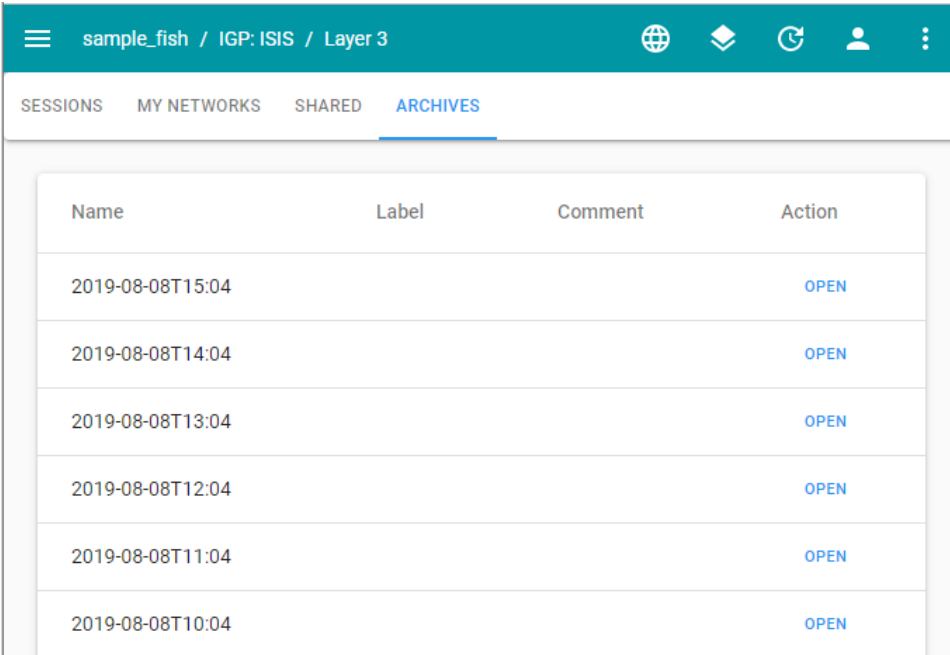

| Name | Label | Comment | Action |
|------------------|-------|---------|----------------------|
| 2019-08-08T15:04 | | | OPEN |
| 2019-08-08T14:04 | | | OPEN |
| 2019-08-08T13:04 | | | OPEN |
| 2019-08-08T12:04 | | | OPEN |
| 2019-08-08T11:04 | | | OPEN |
| 2019-08-08T10:04 | | | OPEN |



NOTE: The Name of the archived network is a timestamp of the creation time/date; it is not the same as the name you gave to the corresponding Network Archive task in the Task Scheduler. In this release, the Label and Comment fields are not used.

When you open an archived network from the Network Browser, it opens in a temporary file that you cannot save. If you want to work with an archived network and then save it, you can select **Save As** from the Network icon (world) in the top menu bar of the Planner. Once saved, you can continue to access that network from the My Networks tab in the Network Browser.


**Related
Documentation**

- *Device Profile and Connectivity Testing (NorthStar Controller User Guide)*
- *Scheduling Device Collection for Analytics (NorthStar Controller User Guide)*
- *Collection Tasks to Create Network Archives (NorthStar Controller User Guide)*

Import Network Wizard

The Import Network Wizard is an interactive tool that allows you to import data files that are converted into a NorthStar Planner network model. You can specify the import input directory and select other options for parsing a set of data files. Launch the wizard from the My Networks tab of the Network Browser by clicking the blue circle with the + sign on the right side of the window as shown in [Figure 14 on page 35](#).

Figure 14: Launch the Import Network Wizard

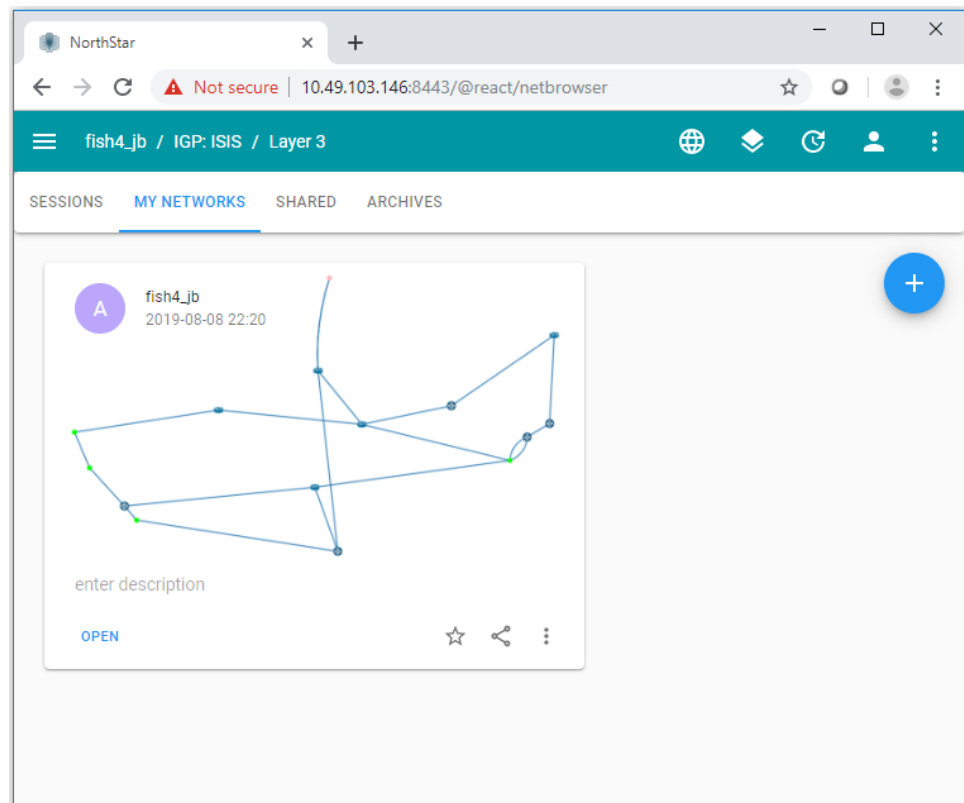

Once you have launched the wizard, proceed as follows:

1. Click **Next** on the wizard landing page to display the Setup Import window shown in [Figure 15 on page 36](#).

Figure 15: Setup Import Window

2. Use the Import Type drop-down menu to select one of the following import type options:



NOTE: Important: Currently, only .tar and .gz files can be imported (.zip files are not supported), and the file cannot contain subdirectories.

- Routers and Switches
 - OSPF/ISIS Database
 - TED Database
 - Spec Files
3. Enter a network name and click **Upload**. Options available for the import type you selected are displayed. If there are no options available, the options step is skipped.
 4. Select options by clicking the corresponding check boxes. Click **Next** to complete the import. Once imported, the network is available in the My Networks tab of the Network Browser.

CHAPTER 3

Topology View

- [Navigation Functions in the Topology View on page 37](#)
- [Interactive Map Features on page 38](#)
- [Topology View Left Pane Options on page 47](#)
- [Network Information Table Overview on page 52](#)
- [Sorting and Filtering Options in the Network Information Table on page 53](#)
- [Network Information Table Bottom Tool Bar on page 58](#)

Navigation Functions in the Topology View

Many familiar navigation functions are supported in the Topology window, and are summarized in [Table 6 on page 37](#).

Table 6: Supported Topology Window Navigation Functions




| Function | Method |
|---|--|
| Drag and drop | Left-click an element, hold while repositioning the cursor, then release. |
| Select an element | Click a link or node to select it. |
| Select multiple elements | <ol style="list-style-type: none">1. Hold down the Shift key and left mouse button while dragging the mouse to create a rectangular selection box. All elements within the box are selected.2. Hold down the Shift key and click multiple nodes, one at a time. <p>One application for selecting multiple elements is creating node groups.</p> |
| Zoom to fit  | Click the circular button that looks like a bull's eye in the upper right corner of the window to size and center the topology map to fit the window. |
| Zoom in and out   | <ol style="list-style-type: none">1. Use the mouse scroll wheel.2. Click the +/- buttons in the upper right corner of the Planner window. |
| Right-click to access functions | Right-click a blank part of the topology map or on a map element to access context-relevant functions. |

Table 6: Supported Topology Window Navigation Functions (continued)

| Function | Method |
|--------------|---|
| Hover | You can hover over some network elements in the topology map to display the element name or ID. |
| Resize panes | You can click and drag many of the pane margins to resize the panes in a display. |

Interactive Map Features

The topology map is interactive, meaning that you can use features within the map itself to customize it. The map uses a geographic coordinate reference system. Some features enabled by that system include:

- Constrained zooming: NorthStar Controller performs coordinate checking so the view is constrained to the coordinates of the earth.
- World wrapping/map wrapping: Scrolling the map in one direction is like spinning a globe. This enables representation of links across an ocean, for example.

The following sections describe additional map features and functionality:

- [Right-Click Functions on page 38](#)
- [Auto Group on page 42](#)
- [Topology Menu Bar on page 44](#)
- [Show Paths on page 44](#)
- [Topology Settings Window on page 45](#)

Right-Click Functions

Right-click a node, selected nodes, or node group on the topology map to display node-specific filtering options as shown in [Figure 16 on page 39](#) and described in [Table 7 on page 39](#).

Figure 16: Right-Click Options for Nodes or Groups

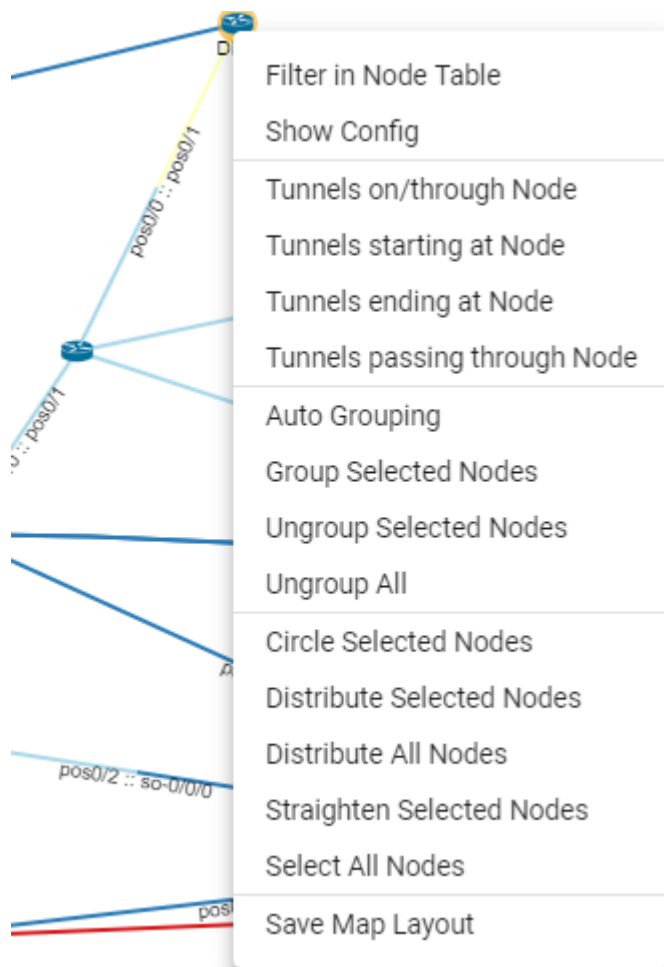



Table 7: Right-Click Options for Nodes or Groups

| Option | Function |
|--------------------------|--|
| Filter in Node Table | Filters the nodes displayed in the network information table to display only the selected node(s) or node group(s). To clear the filter in the network information table, click Clear Filter in the lower right corner. |
| Tunnels on/through Node | Filters the tunnels displayed in the network information table to include only those that meet the On or Through Node criteria. |
| Tunnels starting at Node | Filters the tunnels displayed in the network information table to include only those that meet the Starting at Node criteria. |
| Tunnels ending at Node | Filters the tunnels displayed in the network information table to include only those that meet the Ending at Node criteria. |
| Auto Grouping | Opens the Auto Group tool window on the right side of the topology view. The Auto Group tool allows you to establish rules for automatic node-grouping. There is more information about this tool later in this topic. |

Table 7: Right-Click Options for Nodes or Groups (continued)

| Option | Function |
|---------------------------|--|
| Group Selected Nodes | Prompts you to give the group of selected nodes a name, after which the group can be expanded or collapsed on the topology map. |
| Ungroup Selected Nodes | Ungroups the nodes in the selected group. |
| Ungroup All | Ungroups the nodes in all groups. |
| Circle Selected Nodes | Arranges the selected nodes in a roughly circular pattern with the nodes and links separated as much as possible. |
| Distribute Selected Nodes | Forces the selected elements away from each other and minimizes overlap. |
| Straighten Selected Nodes | Aligns the selected nodes in a horizontal pattern. |
| Select All Nodes | Selects all nodes on the topology map. This is a shortcut to using shift-left-click to create a selection box around all nodes or individually shift-clicking on all nodes. |
| Save Map Layout | Saves the current map layout (mapview.json) in the server spec directory, which is then displayed the next time you open the same network. You will not see any confirmation that the save was successful. |

Right-click a link on the topology map to display link-specific filtering options as shown in [Figure 17 on page 40](#) and described in [Table 8 on page 40](#).

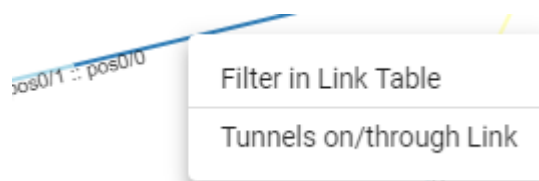Figure 17: Right-Click Options for Links**Table 8: Right-Click Options for Links**

| Option | Function |
|-------------------------|--|
| Filter in Link Table | Filters the links or tunnels displayed in the network information table to display only the selected link. |
| Tunnels on/through Link | Filters the links or tunnels displayed in the network information table to include only those that meet the On or Through Link criteria. |



NOTE: To clear the tunnel filter so that all links or tunnels are again displayed, click **Clear Filter** in the lower right corner of the network information table.

Right-click blank space in the topology map pane to access the whole-map functions shown in [Figure 18 on page 41](#) and described in [Table 9 on page 41](#).

Figure 18: Right-Click Options for the Topology Map as a Whole

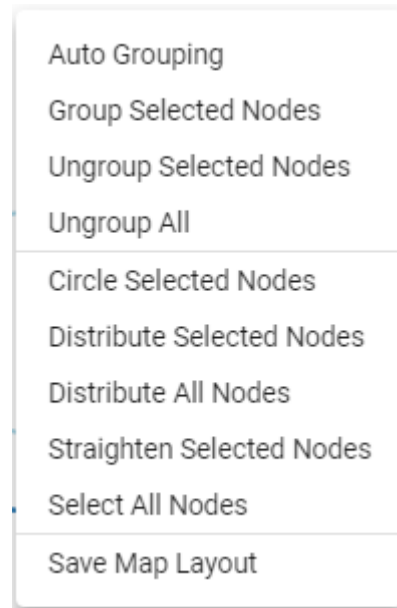



Table 9: Right-Click Options for the Topology Map as a Whole

| Option | Function |
|---------------------------|--|
| Auto Grouping | Opens the Auto Group tool window on the right side of the topology view. The Auto Group tool allows you to establish rules for automatic node-grouping. There is more information about this tool later in this topic. |
| Group Selected Nodes | Prompts you to give the group of selected nodes a name, after which the group can be expanded or collapsed on the topology map. |
| Ungroup Selected Nodes | Ungroups the nodes in the selected group. |
| Ungroup All | Ungroups the nodes in all groups. |
| Circle Selected Nodes | Arranges the selected nodes in a roughly circular pattern with the nodes and links separated as much as possible. |
| Distribute Selected Nodes | Forces the selected elements away from each other and minimizes overlap. |
| Straighten Selected Nodes | Aligns the selected nodes in a horizontal pattern. |
| Select All Nodes | Selects all nodes on the topology map. This is a shortcut to using shift-left-click to create a selection box around all nodes or individually shift-clicking on all nodes. |
| Save Map Layout | Saves the current map layout (mapview.json) in the server spec directory, which is then displayed the next time you open the same network. You will not see any confirmation that the save was successful. |

Auto Group

Launch the Auto Group tool by right-clicking a node in the topology map and selecting **Auto Grouping**. Auto Group allows you to use multiple rules in sequence to group nodes using rule set builder functionality. This is an alternative to creating groups manually. For example, you could set up rules that first group by AS number and then by hostnames that begin with **vm**. [Figure 19 on page 42](#) shows the Auto Group window with that example set up.

Figure 19: Auto Group Window Example

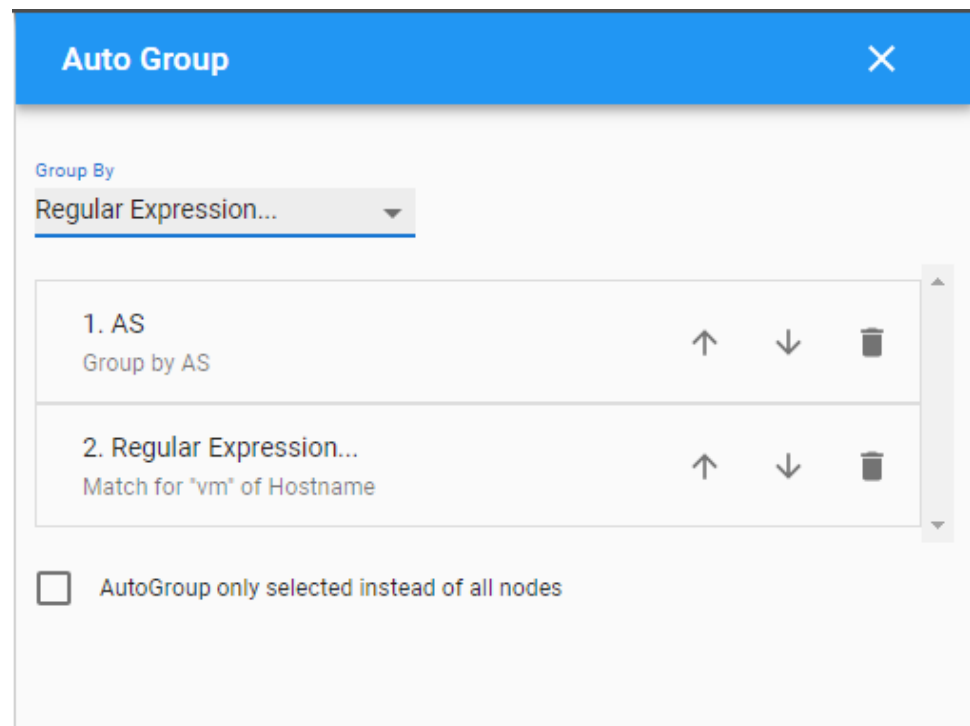


To begin, first click the Group By down arrow and select your first rule. Click the Group By down arrow again to select your second rule, and so on until you have all the rules you need.



NOTE: You can set up a maximum of six rules.

When you select Regular Expression as the rule type, the Regular Expression Rule window is displayed as shown in [Figure 20 on page 43](#).

Figure 20: Regular Expression Rule Window

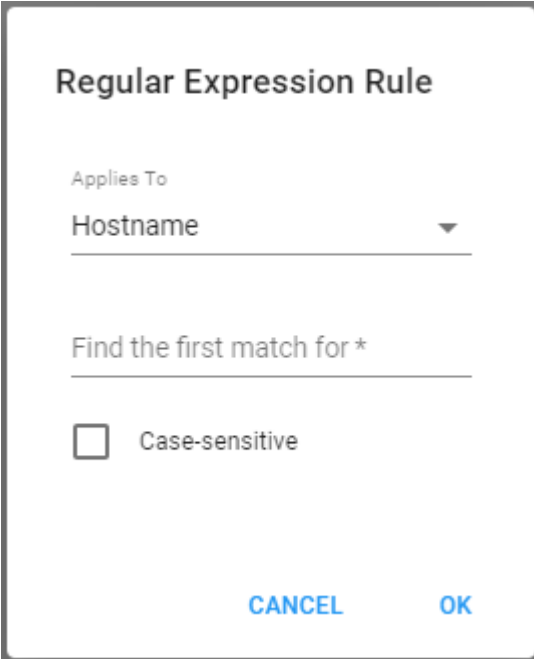

The dialog box is titled "Regular Expression Rule". It contains a section labeled "Applies To" with a dropdown menu currently showing "Hostname". Below this is a text input field labeled "Find the first match for *". At the bottom left, there is an unchecked checkbox labeled "Case-sensitive". At the bottom right, there are two buttons: "CANCEL" and "OK".

Use the Applies To drop down menu to select Hostname, Name, IP Address, or Type. Enter the text in the **Find the first match for*** field. Standard regular expression syntax is supported, so for example, you could select **Name** and then type `..` and the tool would group nodes whose names start with the same first two digits. Click the check box if you want the match to be case sensitive. Click **OK** to add the rule to your list.

Table 10 on page 43 shows some examples of regular expressions.

Table 10: Regular Expression Examples

| Router Names | Regular Expression | Resulting Groups |
|--|---|--|
| GERABC1234 | ... | groups to GER |
| GERABC1234 | <code>^(..)</code> | groups to ER |
| GERABC1234 | <code>^(...)</code> | groups to ERA |
| GERABC1234 | <code>^(....)</code> | groups to ERAB |
| GERABC1234 | <code>...(..)</code> | groups to ABC |
| GERABC1234 | <code>^{3}(...)</code> | groups to ABC |
| P1_ATL, P2_ATL, P3_ATL, P1_NYC, P2_NYC, P3_NYC, P1_CHI, P2_CHI, P3_CHI | <code>*_([A-Z]*)</code> or <code>..(...)</code> | ATL, NYC, and CHI, each containing 3 routers |

In the list of rules you selected/created, use the up and down arrows beside each of the rules to move them up or down in the list. The rules are executed in order, starting with number 1, so order can be significant.

The default is for the auto grouping to be executed for all nodes in the network, but you can click the check box for **AutoGroup only selected instead of all nodes**, if that is your preference. To delete a rule, click the corresponding **Delete** button (trash can icon).

Click **Submit** at the bottom of the Auto Group window to perform the grouping. Check the results in the topology map and in the Node/Groups left pane display.

Topology Menu Bar

On the right side of the topology window is a menu bar offering various topology settings, as shown in [Figure 21 on page 44](#).

Figure 21: Topology Settings Menu Bar



From the menu bar, you can:

- Center the topology in the window (target icon).
- Enlarge the topology in the window (plus symbol).
- Reduce the size of the topology in the window (minus symbol).
- Show paths from a source node to a destination node (map pin icon).
- Access the topology settings window (gear icon).

Show Paths

When you click the show paths icon (map pin), a message appears in the upper left corner of the topology map window, prompting you to select a source node. When you click your desired source node on the map, you are prompted to select a destination node. When you click your desired destination node, the Paths window opens on the right side of the topology display, showing you the current route between the selected nodes and giving you the option to hide unrelated nodes on the map.

For this release, only the current route is displayed. In a future release, configured secondary routes will also be selectable using the Paths drop-down menu.

You can also reach the Paths window from the network information table by right-clicking a tunnel in the Tunnel tab or a demand in the Demands tab.

Topology Settings Window

The Topology Settings window contains many topology display settings, all in one place. [Figure 22 on page 45](#) shows the Topology Settings window.

You can select as many settings as you like by clicking the associated check boxes. When you opt to Show Label for nodes or links, you can select only one label from the corresponding drop-down menu.



NOTE: For readability reasons, NorthStar does not display node or link labels over a certain quantity, even if the Topology Settings call for labels to be displayed.

Figure 22: Topology Settings Window

Topology Settings

Nodes

- ☐ Show Label Hostname
- ☐ Background Shadow
- ☐ Hide Pseudo Node Labels
- ☐ Show only Favorites Labels
- ☐ Hide Isolated Nodes

Links

- ☐ Show Label Interface A::Z
- ☐ Show only if endpoints are in Favorites
- ☒ Show Link Down Marker
- ☒ Draw Down Link as Dashed Line
- ☒ Draw Parallel Links as Curve
- ☒ Wrap Links as Great Arcs
- ☐ Hide Partially Visible Links

Tunnels

- ☐ Draw Path as Curve
- ☐ Draw Path through Layers

Topology View

- ☒ Nodes and Links
- ☐ Clusters and Bundles

Map Style

- ☒ Light
- ☐ Dark
- ☐ Show World Map
- ☐ Graticules
- ☐ Populated Places

General

- ☐ Show Tooltips
- ☒ Show Maintenance Marker
- ☐ Zoom to Selected Node from Table

Label Size: 10



NOTE: Drawing DOWN links as a solid, rather than dashed, line can improve performance when redrawing the topology.

A few of these settings might not be self-explanatory:


- Hide Partially Visible Links

Removes from the display any links for which both end nodes are not within the field of view. This is useful for focusing on a subset of a large network.

- Wrap Links as Great Arcs

Distinguishes links that would have to wrap around the world map. An example is shown in [Figure 23 on page 46](#).


Figure 23: Wrap Links as Great Arcs Example

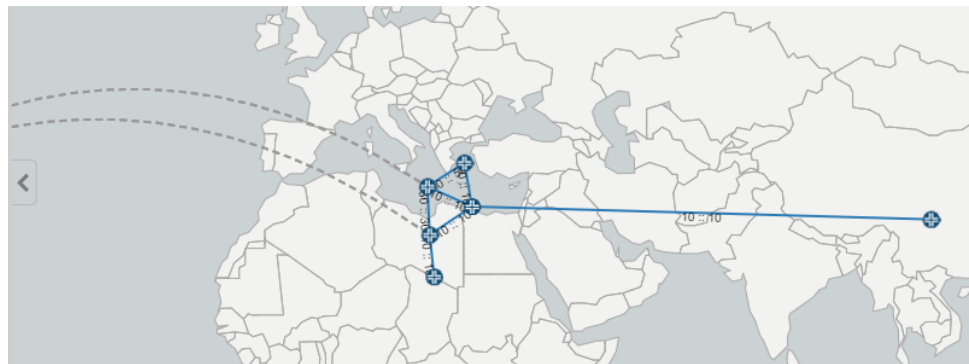

Map Style section

The Light and Dark options available in this section are mutually exclusive; select one radio button or the other. [Figure 24 on page 46](#) shows an example of the light and dark map styles.

Figure 24: Light and Dark Map Styles

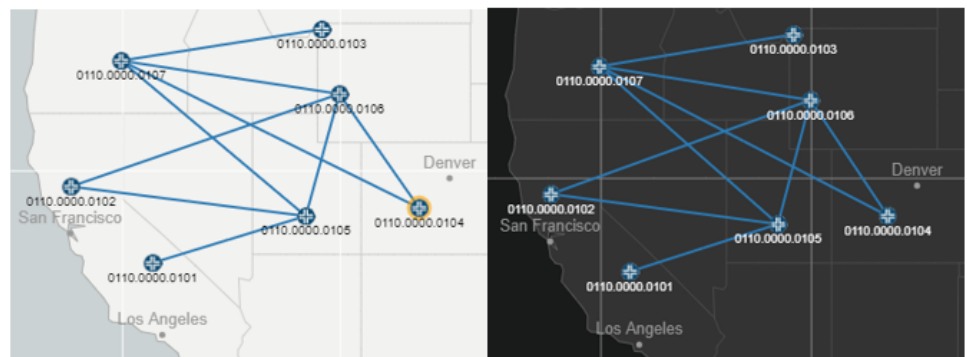

If you select to Show World Map, you can opt to display graticules (a grid of lines parallel to meridians of longitude and parallels of latitude) and labeling of major populated places (both shown in [Figure 24 on page 46](#)).



NOTE: Even if you deselect Show World Map, the topology still behaves according to geographical coordinates in terms of displaying the topology within the field of view.

General section

Select the check boxes for as many of the options in this group as you like:

- **Show Maintenance Marker:** Displays a red M over any link currently part of a maintenance event.
- **Zoom to Selected Node from Table:** With this option enabled, when you click on a node entry in the network information table (Node tab), the topology automatically centers the view on that selected node.

Use the Label Size drop-down menu to select a font size for node and link labels.

Topology View Left Pane Options

The left pane drop-down menu offers several ways to filter the data that is displayed in the NorthStar Planner topology map pane. When you first open a network and display the topology, the initial view shows Protocols. [Table 11 on page 47](#) summarizes the left pane drop-down menu choices.

Table 11: NorthStar Planner Topology View Left Pane Options

| Option | Description |
|------------|--|
| Protocols | <p>Lists protocols you can opt to display or hide on the topology map. Nodes configured with selected protocols are displayed. Selecting Default is the same as selecting all the protocols in the network.</p> <p>Click the check boxes corresponding to the protocols you want to select or deselect.</p> |
| Types | <p>Lists node types you can opt to display or hide on the topology map.</p> <p>Click the check boxes corresponding to the types you want to select or deselect.</p> |
| AS | <p>Selects autonomous systems (ASs) you can opt to display or hide on the topology map.</p> <p>Click the check boxes corresponding to the ASs you want to select or deselect.</p> |
| ISIS Areas | <p>Selects ISIS areas you can opt to display or hide on the topology map.</p> <p>Click the check boxes corresponding to the ISIS areas you want to select or deselect.</p> |

Table 11: NorthStar Planner Topology View Left Pane Options (continued)


| Option | Description |
|-------------|---|
| OSPF Areas | <p>Selects OSPF areas you can opt to display or hide on the topology map.</p> <p>Click the check boxes corresponding to the OSPF areas you want to select or deselect.</p> |
| Node/Groups | <p>Displays user-created groups with or without listing the member nodes. Expanded groups are represented on the topology map by individual node icons. Collapsed groups are represented on the topology map by group icons, and the individual member nodes are not displayed. All nodes start out as ungrouped.</p> |

The following sections describe the left pane display options:

- [Protocols on page 48](#)
- [Types on page 49](#)
- [AS on page 49](#)
- [ISIS Areas on page 50](#)
- [OSPF Areas on page 50](#)
- [Node/Groups on page 51](#)

Protocols

The Protocols list includes all protocols present in the current topology. [Figure 25 on page 48](#) shows an example.

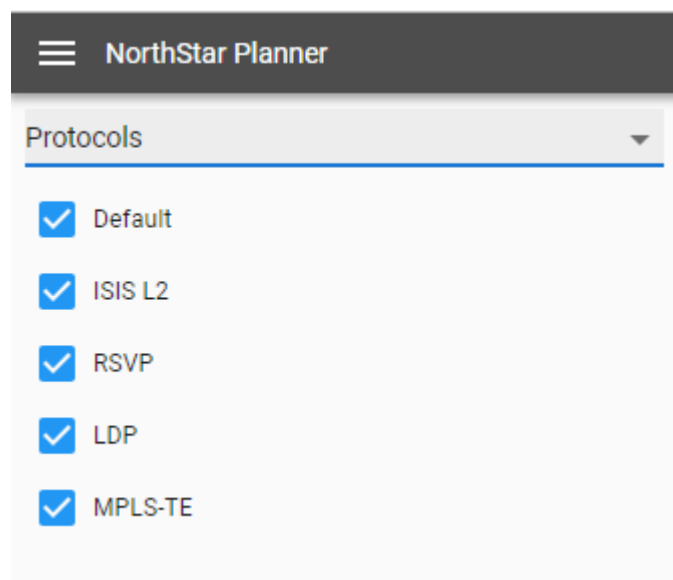Figure 25: Protocols List

Protocols can be selected or deselected by checking or clearing the corresponding check boxes. Only network elements that support selected protocols are displayed in the topology map.




NOTE: Select **Default** to display all protocols on the topology map. If you do not want elements supporting all protocols to be displayed on the topology map, be sure to clear the **Default** check box.

Types

The Types list in the left pane of the Topology view includes categories of nodes and links found in the network. [Figure 26 on page 49](#) shows a sample Types list.

Figure 26: Left Pane Types List

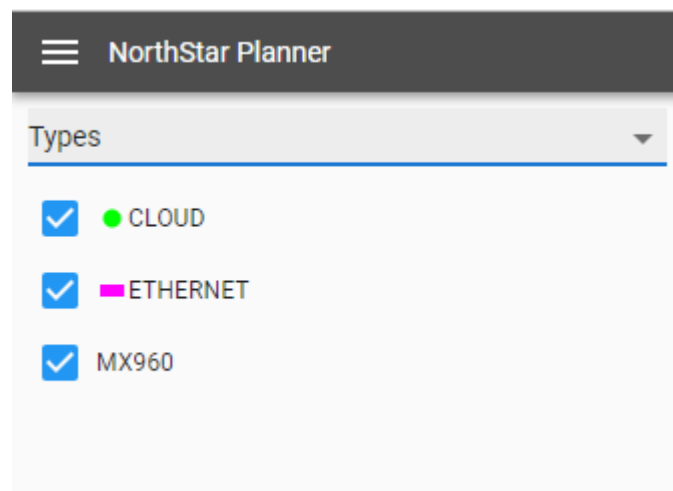

Different types are associated with different icons, which are reflected in the topology map. You can select or deselect a type by checking or clearing the corresponding check box. Only selected options are displayed in the topology map.




NOTE: All nodes of one type use the same icon.

AS

The autonomous systems (AS) list assigns a color, for purposes of representation on the topology map, for each AS number configured in the network. As noted in [Figure 27 on page 50](#), routers configured with AS 65536 would appear on the topology map as red dots. NONE shows the color assigned to routers with no AS configured.

Figure 27: AS List

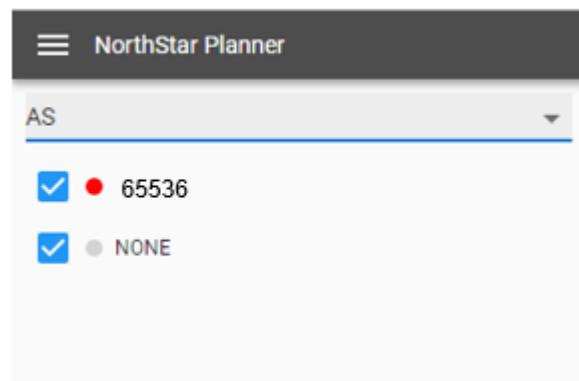


Select or deselect AS numbers by checking or clearing the corresponding check boxes. Only selected AS numbers are displayed in the topology map.

ISIS Areas

The ISIS Areas list assigns a color, for purposes of representation on the topology map, for each IS-IS area identifier configured in the network. The area identifier is the first three bytes of the ISO network entity title (NET) address. As noted in [Figure 28 on page 50](#), routers whose NET addresses include area identifier 11.0007 appear on the topology map as red dots. Those with area identifier 49.0011 appear as green dots. NONE shows the color assigned to routers with no NET address configured.

Figure 28: ISIS Areas List

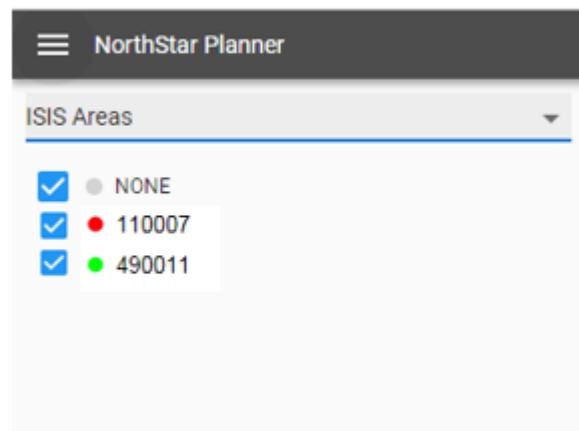


Select or deselect ISIS area identifiers by checking or clearing the corresponding check boxes. Only selected area identifiers are displayed in the topology map.

OSPF Areas

The OSPF Areas list assigns a color, for purposes of representation on the topology map, for each OSPF area configured in the network. NONE shows the color assigned to routers with no OSPF area configured.

As noted in [Figure 29 on page 51](#), routers with OSPF area 0 configured appear on the topology map as red dots. Those with OSPF area 1 appear as green dots. NONE shows the color assigned to routers with no OSPF area configured.

Figure 29: OSPF Areas List

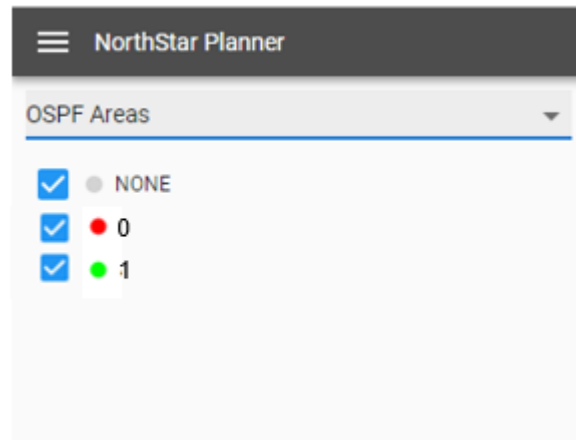


Select or deselect OSPF areas by checking or clearing the corresponding check boxes. Only selected areas are displayed in the topology map.

Node/Groups

You can create groups of nodes by selecting nodes and using the right-click topology map functions. Nodes can also be auto-grouped using criteria that you provide. Once you have groups in your topology, the Node/Groups list in the left pane of the Topology view shows all your node groups, and lists all nodes not included in any group.

When you expand a group listing using the down arrow next to the group name, all the member nodes are listed. When you collapse a group listing using the up arrow next to the group name, only the group name appears in the list. In [Figure 30 on page 52](#), group-1 and group-2 are expanded. The nodes listed below group-2 are ungrouped.

Figure 30: Example Node/Groups List

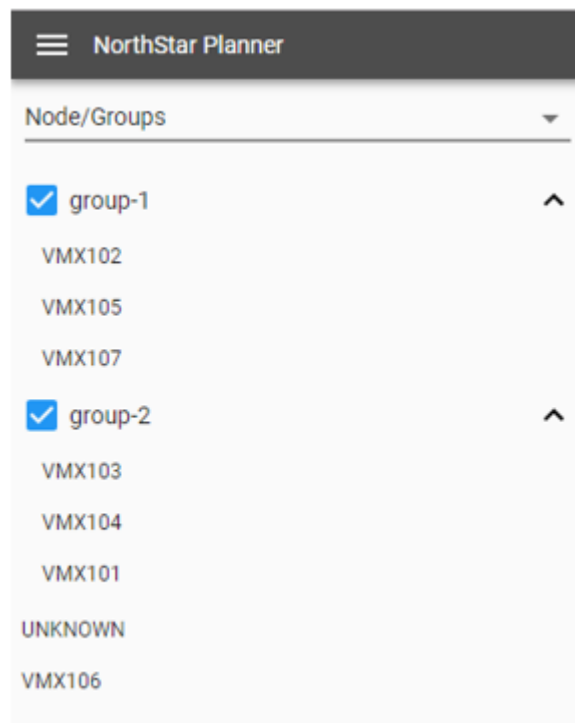

The topology map reflects the expansion and collapse of the groups in the groups list. For an expanded group, all individual nodes are displayed in the topology map, without indication of which group they belong to. For a collapsed group, the individual node icons are collectively represented by a group icon. Hover over or click on the group icon in the map to display the group name.

Network Information Table Overview

Network information is displayed in the pane at the bottom of the Topology view, below the topology map. An example of the table is shown in [Figure 31 on page 52](#).

Figure 31: Network Information Table


| Nodes | | | | Links | | Tunnels | | Demands | | | | Interfaces | |
|---|--------|------|--------|--------|--------|-------------|-------------|---------|---------|--------------|--------------|--------------|--------------|
| <input type="checkbox"/> | Name | Type | Status | Node A | Node Z | Interface A | Interface Z | Node... | Nod... | Bandwidth AZ | Bandwidth ZA | RSVP Util AZ | RSVP Util ZA |
| <input type="checkbox"/> | LINK5 | OC3 | Up | ATL | HOU | pos0/1 | so-0/0/2 | 10.1... | 10.1... | 155M | 155M | 0.0067 | |
| <input type="checkbox"/> | LINK6 | OC3 | Up | ATL | LAX | pos0/0 | so-0/0/3 | 10.1... | 10.1... | 155M | 155M | | |
| <input type="checkbox"/> | LINK14 | OC3 | Up | ATL | WDC | pos0/3 | pos0/0 | 10.1... | 10.1... | 155M | 155M | | |
| <input type="checkbox"/> | LINK3 | OC3 | Up | BOS | DET | pos0/0 | so-0/0/1 | 10.1... | 10.1... | 155M | 155M | 0.0667 | 0.1000 |
| <input type="checkbox"/> | LINK7 | OC3 | Up | BOS | NYC | pos0/1 | so-0/0/0 | 10.1... | 10.1... | 155M | 155M | | |
| <div>Page 1 of 1 < > Rows per page: 50 </div> | | | | | | | | | | | | | |
| 1 - 20 of 20 | | | | | | | | | | | | | |

Tabs appear across the top of the network information table. The columns of information change according to the tab you select (Nodes, Links, Tunnels, Demands, Interfaces). Within the tables, each row represents an element. When you select one or more elements in the network information table, the corresponding elements are highlighted in the

topology map. You can filter the elements (rows) that are included in the table using the right-click functions on the topology map or in the table itself.

For example, if you right-click a node in the Nodes tab of the table, you have the options shown in [Figure 32 on page 53](#).

Figure 32: Right-Click Options Example

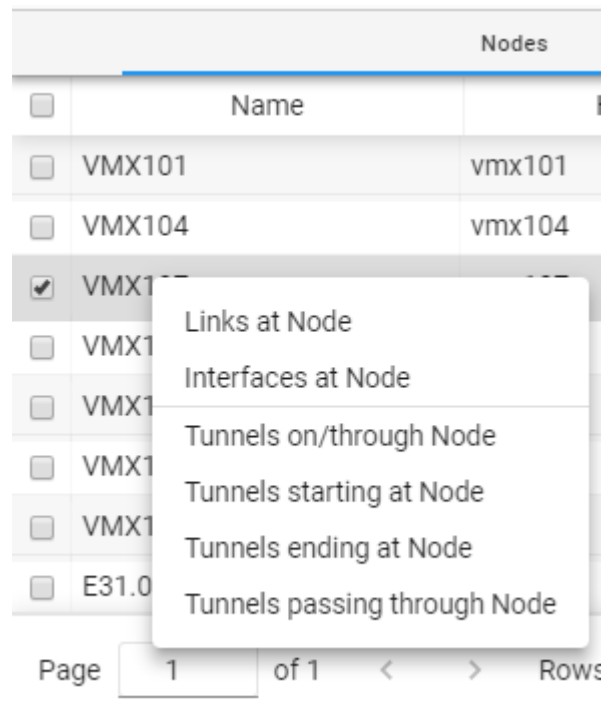

See “[Sorting and Filtering Options in the Network Information Table](#)” on [page 53](#) for details on the filtering options available from the network information table.

The options available in the tool bar across the bottom of the network information table are described in “[Network Information Table Bottom Tool Bar](#)” on [page 58](#).

- Related Documentation**
- [Sorting and Filtering Options in the Network Information Table on page 53](#)
 - [Network Information Table Bottom Tool Bar on page 58](#)

Sorting and Filtering Options in the Network Information Table

This topic describes the sorting and filtering options that are available in the network information table at the bottom of the topology view.

Sorting from Column Headings

You have the option to sort the display of network elements in the network information table by any column heading. Click in the column heading to sort ascending and click

again to sort descending. The up or down arrow in the column heading tells you which sort order is displayed. [Figure 33 on page 54](#) shows an example of the arrow.



NOTE: You only see the up or down arrow when you click in the column heading.

Figure 33: Sort Arrow in Table Column Heading

| Nodes | | |
|--------------------------|--------|--------|
| <input type="checkbox"/> | Name | ↓ |
| <input type="checkbox"/> | VMX107 | vmx107 |
| <input type="checkbox"/> | VMX106 | vmx106 |

Filtering from Table Rows

Right-click on a table row under any of the table tabs (Nodes, Links, Tunnels, Interfaces) to see the filtering options that are available from that network element. For example, if you right-click a node in the Nodes tab of the table, you have the options shown in [Figure 34 on page 54](#).

Figure 34: Right-Click Filtering Options Example

| Nodes | | |
|-------------------------------------|--------|--------|
| <input type="checkbox"/> | Name | |
| <input type="checkbox"/> | VMX101 | vmx101 |
| <input type="checkbox"/> | VMX104 | vmx104 |
| <input checked="" type="checkbox"/> | VMX107 | vmx107 |
| <input type="checkbox"/> | VMX108 | vmx108 |
| <input type="checkbox"/> | VMX109 | vmx109 |
| <input type="checkbox"/> | VMX110 | vmx110 |
| <input type="checkbox"/> | E31.0 | |

Links at Node
Interfaces at Node
Tunnels on/through Node
Tunnels starting at Node
Tunnels ending at Node
Tunnels passing through Node

Page 1 of 1 < > Rows

[Table 12 on page 55](#), [Table 13 on page 55](#), and [Table 14 on page 55](#) describe the options available when right-clicking an element in the Nodes, Links, and Interfaces tabs.

Right-clicking a tunnel in the Tunnels tab or a demand in the Demands tab launches the Show Path tool, which is addressed in a later section.



NOTE: To clear a filter so that all network elements are again displayed, click **Clear Filter** in the lower right corner of the network information table (only visible when a filter is in effect).

Table 12: Right-Click Filtering Options in the Nodes Tab

| Option | Function |
|------------------------------|---|
| Links at Node | Switches the display to the Links tab and shows only those links that have the selected node as Node A or Node Z. |
| Interfaces at Node | Switches the display to the Interfaces tab and shows only those interfaces with the selected node. |
| Tunnels on/through Node | Switches the display to the Tunnels tab and shows only those tunnels that start, end, or run through the selected node. |
| Tunnels starting at Node | Switches the display to the Tunnels tab and shows only those tunnels that start at the selected node. |
| Tunnels ending at Node | Switches the display to the Tunnels tab and shows only those tunnels that end at the selected node. |
| Tunnels passing through Node | Switches the display to the Tunnels tab and shows only those tunnels that pass through the selected node. |

Table 13: Right-Click Filtering Options in the Links Tab

| Option | Function |
|-------------------------|--|
| Nodes on Link | Switches the display to the Nodes tab and shows only those nodes that are on the selected link. |
| Interfaces on Link | Switches the display to the Interfaces tab and shows only those interfaces that are on the selected link. |
| Tunnels on/through Link | Switches the display to the Tunnels tab and shows only those tunnels that run on or through the selected link. |

Table 14: Right-Click Filtering Options in the Interfaces Tab

| Option | Function |
|-------------------|--|
| Link at Interface | Switches the display to the Links tab and shows only those links that have the selected interface. |

Filtering Using the Search Function

The search icon (magnifying glass) in the bottom tool bar of the network information table behaves differently depending on which tab (Nodes, Links, and so on) you are in. For the Nodes and Links tabs, clicking the search icon brings up a simple text box beside the icon as shown in [Figure 35 on page 56](#).

Figure 35: Text Search Box



The rows are filtered to display only those elements satisfying the search criteria. This does not change the topology map. To clear the filter so that all network elements are again displayed, click the X beside the search box.

In the Tunnels, Demands, and Interfaces tabs, clicking the search icon brings up a filter window in which you can enter or select specific search criteria appropriate to that network element type. For example, see the Tunnel Filter window shown in [Figure 36 on page 56](#).


Figure 36: Text Search Box

Once you have entered/selected the search criteria, click **OK**. The filter window closes and the table displays only the rows that satisfy the search criteria. To clear the filter so that all network elements are again displayed, click **Clear Filter** at the far right of the bottom tool bar.

Using the Show Path Tool from the Tunnels or Demands Tab

To launch the Show Path tool, right-click a network element in the Tunnels or Demands tab of the network information table, and select **Show Path**. The Paths window opens to the right of the topology map, displaying the current route for the selected tunnel, hop by hop. An example is shown in [Figure 37 on page 57](#).

Figure 37: Paths Window

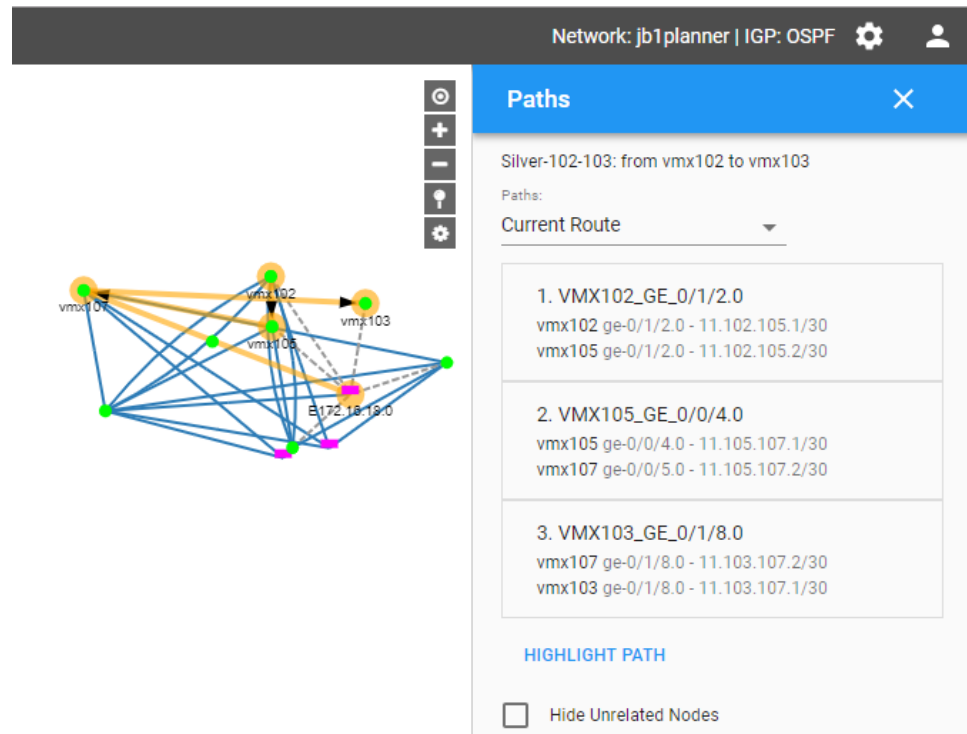

Note that the path is highlighted in the topology map. You can click **Highlight Path** if the path is not already highlighted, which it might not be if you clicked to a different network information table tab and then clicked back.

Currently, only the current route can be displayed. A future release will support secondary route display from the Paths drop-down menu to the right of the Current Route heading.


At the bottom of the display is an option to Hide Unrelated Nodes on the topology map. Click the check box to select or deselect this option.

- Related Documentation**
- [Network Information Table Overview on page 52](#)
 - [Network Information Table Bottom Tool Bar on page 58](#)

Network Information Table Bottom Tool Bar

The bottom tool bar in the network information table has tools for navigating through pages of network element data, selecting columns to display, downloading data, and filtering data. [Figure 38 on page 58](#) shows the bottom tool bar.

Figure 38: Network Information Table Bottom Tool Bar



Navigation Tools

The navigation tools in the network information table bottom tool bar are available to help you navigate through rows and pages of data, and change the number of rows per loaded page. These tools are especially useful for large models with many elements.

[Table 15 on page 58](#) describes the navigation tools in the bottom tool bar.


Table 15: Navigation Tools in the Network Information Bottom Tool Bar

| Tool or Button | Description |
|--------------------------|---|
| Page __ of <total pages> | Shows which page of data is currently displayed. You can use the up and down arrows that appear when you click in the page box to page forward or backward. |
| < | Displays the previous page of data. |
| > | Displays the next page of data. |
| Rows per page | Click the down arrow to select the number of rows per page (10, 50, 100, 500, or 1000) |

Column Chooser

The Column Chooser tool is available for all network information tabs. Launch the tool by clicking the columns icon (vertical bars). The resulting list of available columns is different, depending on the table tab. [Figure 39 on page 59](#) shows the list of columns available in the Interfaces tab, for example.

Figure 39: Column Chooser for the Interfaces Tab

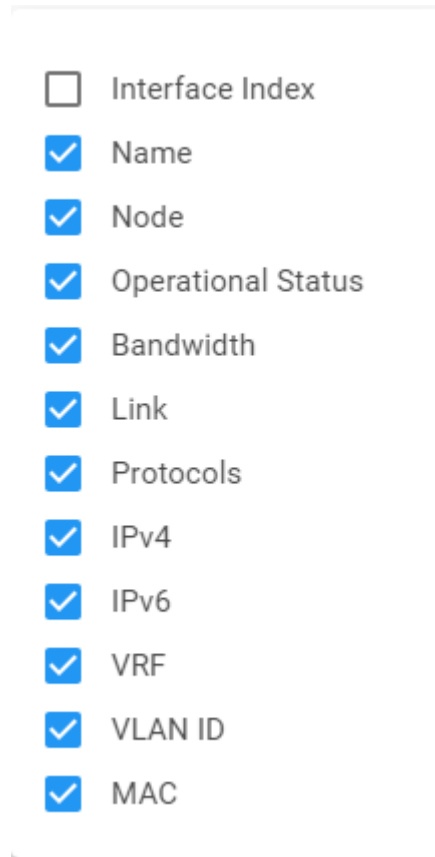

| | |
|-------------------------------------|--------------------|
| <input type="checkbox"/> | Interface Index |
| <input checked="" type="checkbox"/> | Name |
| <input checked="" type="checkbox"/> | Node |
| <input checked="" type="checkbox"/> | Operational Status |
| <input checked="" type="checkbox"/> | Bandwidth |
| <input checked="" type="checkbox"/> | Link |
| <input checked="" type="checkbox"/> | Protocols |
| <input checked="" type="checkbox"/> | IPv4 |
| <input checked="" type="checkbox"/> | IPv6 |
| <input checked="" type="checkbox"/> | VRF |
| <input checked="" type="checkbox"/> | VLAN ID |
| <input checked="" type="checkbox"/> | MAC |

Click the check boxes to select or deselect the columns.

Download Data Tool

The Download Data tool is available for all network information table tabs. Launch the tool by clicking the download icon (down arrow). A csv file is created that contains all the data from the table tab.

The data is downloaded the way you have it sorted and filtered in the network information table.

Search Function

The search function is fully described in [“Sorting and Filtering Options in the Network Information Table” on page 53](#).

The search icon (magnifying glass) behaves differently, depending on the network information table tab.

Related Documentation

- [Network Information Table Overview on page 52](#)
- [Sorting and Filtering Options in the Network Information Table on page 53](#)

CHAPTER 4

Simulation View

- [Simulation on page 61](#)

Simulation

When you click the menu icon (horizontal bars) in the upper left corner of the Planner and select Simulation, the Simulation tool opens in the main window (a network must be open for this option to be available). The Simulation tool allows you to run failure analysis using path provisioning that simulates the hardware's implementation of bandwidth allocation and demand routing on the existing topology. This tool walks you through creating a simulation, step by step.



NOTE: After selecting at least one element in Step 1, you are not restricted to progressing through these steps in order. You can click on any Step number directly to go backward and forward rather than using the Next or Back buttons.

Using this tool, you can design a simulation that uses a single, double, or triple exhaustive failure combination, using network element types of your choice.



NOTE: NorthStar web UI Planner runs modeling and simulation in whichever layer (Tunnel/Layer 2 or Layer 3) that you have selected and that is displayed in the top menu bar.

An exhaustive single failure simulation fails all network elements of a given type, one at a time. For example, an exhaustive node failure fails every node in the network, one at a time. For an exhaustive double failure simulation, two elements are failed at once. For example, if you select Node and Link for a Double exhaustive failure, the simulation would then fail all node and node, node and link, and link and link combinations. An exhaustive triple failure fails three elements at once.

The tool also allows you to select a routing method to use for the simulation, either Normal, Fast Reroute (FRR), or both (the default). Fast Reroute is a mechanism that can be used to protect MPLS traffic engineering LSP tunnels in the event of node or link failures. It accomplishes this with SONET-like restoration times by locally repairing the

LSPs at the point of failure, using backup tunnels that bypass the failure while waiting for the head-end routers to establish a new LSP. The short restoration times are especially desirable for real-time applications such as voice over IP, which often cannot tolerate high delays. “Normal” routing method means “without FRR.”

To design and execute a simulation, use the following procedure.

1. In Step 1, shown in [Figure 40 on page 62](#), select the exhaustive failure combination from the drop-down menu (Single, Double, or Triple) and click the check boxes corresponding to the network elements to be included in the simulation.

Figure 40: Simulation, Step 1

The screenshot displays the 'Failure Simulation' configuration page in the NorthStar Planner. The top navigation bar shows 'NorthStar Planner' and 'Network: jb1planner | IGP: OSPF'. The main content area is divided into two panels. The left panel, titled 'Failure Simulation', contains a vertical progress indicator with four steps: '1 Setup Simulation' (highlighted with a blue circle), '2 Advanced Settings Optional', '3 Create Additional Reports Optional', and '4 Run Simulation'. Below the progress indicator are 'BACK' and 'NEXT' buttons. The right panel, titled 'Setup Simulation', contains a dropdown menu for 'Exhaustive Failure Combination' with 'Single' selected. Below this is a section 'Elements to simulate *' with five checkboxes: 'Node', 'Link', 'Site', 'SRLG', and 'Parallel Links'. A note at the bottom of this section states '* Required'.

The default exhaustive failure combination is Single. No network elements are selected by default. You must select at least one network element type. When the form is complete, click **Next**.

2. In Step 2, shown in [Figure 41 on page 63](#), you can accept the default routing method (Normal and FRR) or use the drop-down menu to select an alternative (Normal alone or FRR alone).

Figure 41: Simulation, Step 2

Failure Simulation

- 1 Setup Simulation
- 2 Advanced Settings
Optional
- 3 Create Additional Reports
Optional
- 4 Run Simulation

BACK NEXT

Advanced Settings

Routing Method

Normal and FRR

Click **Next**.

- In Step 3, shown in [Figure 42 on page 63](#), click the check boxes for any additional reports you would like generated.

Figure 42: Simulation, Step 3

NorthStar Planner Network: demo1 | IGP: ISIS Tunnel Layer

Failure Simulation

- 1 Setup Simulation
- 2 Advanced Settings
Optional
- 3 Create Additional Reports
Optional
- 4 Run Simulation

BACK RUN SIMULATION

Create Additional Reports


- ☐ Include Simulation Events in Peak Link Utilization Report
- ☐ Detailed Reroute Report

Click **Run Simulation**.

- A success message indicates the simulation was executed, as shown in [Figure 43 on page 64](#).

Figure 43: Simulation, Step 4

Failure Simulation

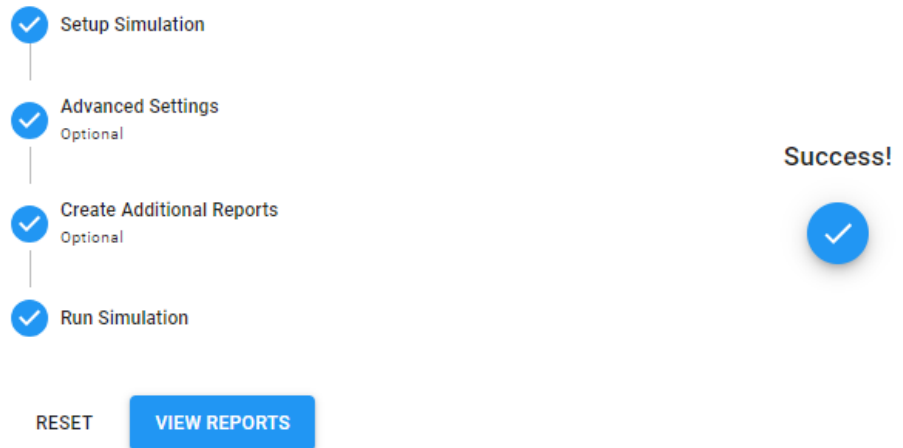

Click **View Reports** to go to the Report Manager where you can access all the simulation reports that were generated. Click **Reset** to begin another simulation.

In the Report Manager, simulation reports are overwritten by the next simulation, so be sure to use the download tool (down arrow icon in the bottom tool bar) to download any reports you want to keep. The Report Manager is fully documented in [“Report Manager” on page 65](#).

Related Documentation

- [Report Manager on page 65](#)

CHAPTER 5

Report Manager View

- [Report Manager on page 65](#)

Report Manager

To reach the Report Manager in the NorthStar Planner web UI, click the menu icon (horizontal bars) in the upper left corner of the Planner and select **Report Manager** (a network must be open for this option to be available).

A list of reports is displayed on the left side of the window and the contents of the selected report displays on the right side. Any report name that is grayed out has not been generated for the network. Reports can generate with no content if there is no applicable data for the report. [Figure 44 on page 65](#) shows an example of the Report Manager with the contents of a selected report displayed on the right. Simulation reports generated at Layer 2 and Layer 3 are available in separate folders.

Figure 44: Report Manager Overview

| Pathname | From | To | Bandwidth(...) | Type | Priority | Path |
|----------|------|-----|----------------|----------------|----------|---------|
| RBOSWDC | BOS | WDC | 10 | R,A2Z,MASK... | 02,02 | BOS-DET |
| RWDCBOS | WDC | BOS | 15 | R,A2Z,PR(W... | 02,02 | WDC-CHI |
| RATLCHI | ATL | CHI | 1.0 | R,A2Z,MASK... | 02,02 | ATL-HOU |
| RHOUWDC | HOU | WDC | 5.0 | R,A2Z,PR(H... | 02,02 | HOU-DAL |
| RSJCCHI | SJC | CHI | 5.0 | R,A2Z,PR(SJ... | 02,02 | SJC-LAX |

Available Reports

Configuration reports are available after running **Administration > Task Scheduler > Device Collection** in the NorthStar Controller (Operator). Collection Options must be set to include **Configuration** as shown in [Figure 45 on page 66](#).

Figure 45: Report Manager Overview

Create New Task - Device Collection

Task Options

Collection Options

Data to be collected or processed

☐ Select All
 ☐ Deselect All

Collect

Configuration☒

Interface☒

Tunnel Path☒

Transit Tunnel☒

Switch CLI☐

Equipment CLI☐

step 2 of 3

Previous

Next

Simulation reports are available after running a simulation in NorthStar Planner.

Sorting Report Data by Column

By clicking in any report column heading, you can sort the report data by that column, either ascending or descending. The report data remains sorted if you download the report.

Report Manager Bottom Tool Bar

At the bottom of the right pane in the Report Manager, there is a tool bar with several useful functions, described in [Table 16 on page 67](#). These tools can help you navigate through pages of report data and filter the columns of data that are displayed. [Figure 46 on page 67](#) shows the tool bar.





66

Copyright © 2019, Juniper Networks, Inc.

Figure 46: Report Manager Bottom Tool Bar



Table 16: Tools in the Report Manager Bottom Tool Bar

| Tool or Button | Description |
|---|---|
| Page __ of <total pages> | Shows which page of data is currently displayed and the total number of pages. If you click in the page box, up and down arrows appear which you can use to page forward or back. |
| < | Displays the previous page of data. |
| > | Displays the next page of data. |
| Rows per page | Click the down arrow to select the number of rows per page (10, 50, 100, 500, or 1000). |
|  | Click the Information icon to display some additional information about the selected report, including the date and time the report was generated. |
|  | Click the Columns icon to launch the Column Chooser tool. The resulting list of available columns is different, depending on the selected report. Click the check boxes to select or deselect the columns for display. If you download the report, your selections remain intact. |
|  | Click the Download icon to download the selected report in a csv file to your local downloads location. Any sorting or filtering you performed remains intact in the downloaded version. |
|  | <p>Click the Search icon to open a search field. Enter your search criteria where it says "Filter this report". The report display changes to include only the rows that match your search criteria. If you download the report, this filtering remains intact.</p> <p>To clear the filter so that all report rows are again displayed, clear the search field.</p> |
| X - Y of Z | Number of rows displayed on the current page and the total number of rows in the report. 1-50 of 60, for example. |

- Related Documentation**
- [Simulation on page 61](#)
 - *Scheduling Device Collection for Analytics* (NorthStar Controller User Guide)

