

# MX240 Universal Routing Platform Hardware Guide

Published  
2025-10-06

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*MX240 Universal Routing Platform Hardware Guide*  
Copyright © 2025 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

## YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

About This Guide | xvi

1

## Fast Track: Initial Installation

Fast Track to Rack Installation and Power | 2

Install the MX240 in a Rack | 2

Connect to Power | 8

Onboard, Configure and Monitor MX240 | 11

2

## Overview

MX240 System Overview | 14

MX240 Chassis | 17

MX240 Chassis Description | 18

MX240 Router Hardware and CLI Terminology Mapping | 22

MX240 Component Redundancy | 24

MX240 Craft Interface Overview | 25

MX240 Alarm Relay Contacts on the Craft Interface | 26

MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button | 26

MX240 Component LEDs on the Craft Interface | 27

MX240 Cooling System | 30

MX240 Cooling System Description | 31

MX240 Fan LED | 33

MX240 Air Deflector Kits | 33

MX240 AC Power System | 38

MX240 Power System Description | 38

MX240 AC Power Supply Description | 39

MX240 AC Power Supply LEDs | 41

AC Power Supply Electrical Specifications for the MX240 Router	42
AC Power Circuit Breaker Requirements for the MX240 Router	44
AC Power Cord Specifications for the MX240 Router	45
Errata with the MX240 Router Documentation	47

## **MX240 DC Power System | 48**

MX240 DC Power Supply Description	48
MX240 DC Power Supply LEDs	50
DC Power Supply Electrical Specifications for MX240 and MX480	51
DC Power Circuit Breaker Requirements for the MX240 Router	54
MX240 Chassis Grounding Specifications	54
DC Power Source Cabling for the MX240 Router	58
DC Power Cable Specifications for the MX240 Router	59
Outstanding Issues with the MX240 Router	60

## **MX240 Host Subsystem Components and Descriptions | 61**

MX240 Host Subsystem Description	62
MX240 Host Subsystem LEDs	62
MX240 Midplane Description	62
MX240 Routing Engine Description	64
RE-S-1800 Routing Engine Description	68
RE-S-X6-64G Routing Engine Description	71
RE-S-X6-128G Routing Engine Description	73
RE-S-X6-128G-K Routing Engine Description	77
RE-S-X6-128G-LT Routing Engine Description	80
MX240 Routing Engine LEDs	84
RE-S-1800 Routing Engine LEDs	84
RE-S-X6-64G Routing Engine LEDs	85

Routing Engine Specifications | 87

Supported Routing Engines by Router | 96

## **MX240 Line Card Components and Descriptions | 121**

Interface Modules—DPCs | 122

MX240 Dense Port Concentrator (DPC) Description | 122

MX240 DPC Port and Interface Numbering | 125

MX240 Dense Port Concentrator (DPC) LEDs | 129

DPCs Supported on MX240, MX480, and MX960 Routers | 129

Interface Modules—FPCs and PICs | 133

MX240 Flexible PIC Concentrator (FPC) Description | 133

MX240 Flexible PIC Concentrator (FPC) LEDs | 136

FPCs Supported by MX240, MX480, and MX960 Routers | 136

MX240 PIC Description | 137

MX240 PIC Port and Interface Numbering | 137

MX240 PIC LEDs | 139

PICs Supported by MX240, MX480, and MX960 Routers | 139

Interface Modules—MPCs and MICs | 141

MIC/MPC Compatibility | 141

MX240 Modular Interface Card (MIC) Description | 155

MICs Supported by MX Series Routers | 155

MX240 Modular Interface Card (MIC) LEDs | 169

MX240 MIC Port and Interface Numbering | 169

MX240 Modular Port Concentrator (MPC) Description | 173

MX240 Modular Port Concentrator (MPC) LEDs | 176

MPCs Supported by MX Series Routers | 176

MX240 Application Services Modular Line Card Description | 187

MX240 AS MSC LEDs | 190

MX240 Application Services Modular Processing Card Description | 191

MX240 AS MXC LEDs | 192

## **MX-SPC3 Services Card | 193**

## **MX-Series Switch Control Board (SCB) Description | 202**

## **Site Planning, Preparation, and Specifications**

## **MX240 Site Preparation Checklist | 208**

## **MX240 Site Guidelines and Requirements | 209**

- MX240 Router Physical Specifications | 209
- MX240 Router Environmental Specifications | 212
- MX240 Router Rack Requirements | 213
- MX240 Router Clearance Requirements for Airflow and Hardware Maintenance | 216
- MX240 Router Cabinet Size and Clearance Requirements | 216
- MX240 Router Cabinet Airflow Requirements | 217

## **MX240 Power Planning | 218**

- Power Requirements for an MX240 Router | 218
- Calculating Power Requirements for MX240 Routers | 230

## **MX240 Network Cable and Transceiver Planning | 233**

- Determining Transceiver Support and Specifications for M Series and T Series Routers | 234
- Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion | 234
- Calculate Power Budget and Power Margin for Fiber-Optic Cables | 236
  - Calculate Power Budget for Fiber-Optic Cables | 236
  - How to Calculate Power Margin for Fiber-Optic Cables | 237
- Routing Engine Interface Cable and Wire Specifications for MX Series Routers | 238

## **MX240 Management and Console Port Specifications and Pinouts | 239**

- RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port | 240
- RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports | 241

## **Initial Installation and Configuration**

### **Installing an MX240 Router Overview | 243**

### **Unpacking the MX240 Router | 244**

- Tools and Parts Required to Unpack the MX240 Router | 244
- Unpacking the MX240 Router | 244
- Verifying the MX240 Router Parts Received | 246

## **Installing the MX240 Router | 249**

Installing the MX240 Router Mounting Hardware for a Rack or Cabinet | 250

Moving the Mounting Brackets for Center-Mounting the MX240 Router | 252

Tools Required to Install the MX240 Router with a Mechanical Lift | 253

Removing Components from the MX240 Router Before Installing it with a Lift | 253

Removing the Power Supplies Before Installing the MX240 Router with a Lift | 253

Removing the Fan Tray Before Installing the MX240 Router with a Lift | 254

Removing the SCBs Before Installing the MX240 Router with a Lift | 255

Removing the DPCs Before Installing the MX240 Router with a Lift | 256

Removing the FPC Before Installing the MX240 Router with a Lift | 257

Installing the MX240 Router By Using a Mechanical Lift | 258

Reinstalling Components in the MX240 Router After Installing it with a Lift | 260

Reinstalling the Power Supplies After Installing the MX240 Router with a Lift | 260

Reinstalling the Fan Tray After Installing the MX240 Router with a Lift | 261

Reinstalling the SCBs After Installing the MX240 Router with a Lift | 262

Reinstalling the DPCs After Installing the MX240 Router with a Lift | 263

Reinstalling the FPCs After Installing the MX240 Router with a Lift | 264

Tools Required to Install the MX240 Router without a Mechanical Lift | 265

Removing Components from the MX240 Router Before Installing it without a Lift | 265

Removing the Power Supplies Before Installing the MX240 Router without a Lift | 266

Removing the Fan Tray Before Installing the MX240 Router without a Lift | 267

Removing the SCBs Before Installing the MX240 Router without a Lift | 268

Removing the DPCs Before Installing the MX240 Router without a Lift | 269

Removing the FPC Before Installing the MX240 Router without a Lift | 270

Installing the MX240 Chassis in the Rack Manually | 271

Reinstalling Components in the MX240 Router After Installing it without a Lift | 273

Reinstalling the Power Supplies After Installing the MX240 Router without a Lift | 273

Reinstalling the Fan Tray After Installing the MX240 Router without a Lift | 274

Reinstalling the SCBs After Installing the MX240 Router without a Lift | 275

Reinstalling the DPCs After Installing the MX240 Router without a Lift | 276

Reinstalling the FPCs After Installing the MX240 Router without a Lift | 277

## **Connecting the MX240 Router to Power | 278**

Tools and Parts Required for MX240 Router Grounding and Power Connections | 279

Grounding the MX240 Router | 279

Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies | 280

Powering On an AC-Powered MX240 Router | 282

Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies | 283

Powering On a DC-Powered MX240 Router with Normal Capacity Power Supplies | 286

Connecting an MX240 AC Power Supply Cord | 287

Connecting an MX240 DC Power Supply Cable | 288

Powering Off the MX240 Router | 290

## **Connecting the MX240 Router to the Network | 291**

Tools and Parts Required for MX240 Router Connections | 291

Connecting the MX240 Router to a Network for Out-of-Band Management | 292

Connecting the MX240 Router to a Management Console or Auxiliary Device | 293

Connecting the MX240 Router to an External Alarm-Reporting Device | 294

Connecting DPC, MPC, MIC, or PIC Cables to the MX240 Router | 295

## **Register Products—Mandatory to Validate SLAs | 297**

## **Initially Configuring the MX240 Router | 298**

# 5

## **Maintaining, Installing and Replacing Components**

### **Maintaining MX240 Components | 304**

Routine Maintenance Procedures for the MX240 Router | 304

Tools and Parts Required to Maintain the MX240 Router | 305

MX240 Field-Replaceable Units (FRUs) | 305

Tools and Parts Required to Replace MX240 Hardware Components | 306

### **Maintaining the MX240 Cooling System Component | 310**

Maintaining the MX240 Air Filter | 310



**Replacing the MX240 Air Filter | 311**

- Removing the MX240 Air Filter | 311

- Installing the MX240 Air Filter | 312

**Maintaining the MX240 Fan Tray | 313****Replacing the MX240 Fan Tray | 316**

- Removing the MX240 Fan Tray | 316

- Installing the MX240 Normal-Capacity Fan Tray | 318

**Maintaining MX240 Host Subsystem Components | 319****Maintaining the MX240 Host Subsystem | 319****Replacing an MX240 Routing Engine | 323**

- Removing an MX240 Routing Engine | 323

- Installing an MX240 Routing Engine | 324

**Replacing an SSD Drive on an RE-S-1800 | 326****Replacing an SSD Drive on an RE-S-X6-64G | 328**

- Replace the SSD Drives on an RE-S-X6-64G | 328

- Copy the Junos OS to the Newly Replaced SSD Using a USB disk (Minimum 16-GB) | 332

**Replacing Connections to MX240 Routing Engine Interface Ports | 335**

- Replacing the Management Ethernet Cable on an MX240 Router | 335

- Replacing the Console or Auxiliary Cable on an MX240 Router | 336

**Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem | 337**

- Removing the Routing Engine | 338

- Installing the Routing Engine RE-S-X6-64G | 341

- Verifying and Configuring the Upgraded Routing Engine as the Primary | 344

- Verifying and Configuring the Upgraded Routing Engine as the Backup | 345

**Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem | 345**

- Removing the Routing Engine | 346

- Installing the Routing Engine RE-S-X6-64G | 346

**Replacing the MX240 Craft Interface | 347**

- Disconnecting the Alarm Relay Wires from the MX240 Craft Interface | 348

- Removing the MX240 Craft Interface | 348

- Installing the MX240 Craft Interface | 349

Connecting the Alarm Relay Wires to the MX240 Craft Interface | 350

## Maintaining MX240 Interface Modules | 351

Maintaining MX240 DPCs | 352

Holding an MX240 DPC | 354

Storing an MX240 DPC | 358

Replacing an MX240 DPC | 358

Removing an MX240 DPC | 359

Installing an MX240 DPC | 361

Maintaining MX240 FPCs | 363

Holding an MX240 FPC | 365

Storing an MX240 FPC | 368

Replacing an MX240 FPC | 369

Removing an MX240 FPC | 370

Installing an MX240 FPC | 372

Replacing an MX240 MIC | 375

Removing an MX240 MIC | 375

Installing an MX240 MIC | 377

Maintaining MX240 MICs | 380

Installing an MX240 Dual-Wide MIC | 381

Maintaining MX240 MPCs | 385

Replacing an MX240 MPC | 388

Removing an MX240 MPC | 388

Installing an MX240 MPC | 390

Maintaining MX240 PICs | 393

Replacing an MX240 PIC | 394

Removing an MX240 PIC | 394

Installing an MX240 PIC | 396

Maintaining Cables that Connect to MX240 DPCs, MPCs, MICs, or PICs | 399

Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC | 400

Removing a Cable on an MX240 DPC, MPC, MIC, or PIC | 401

Installing a Cable on an MX240 DPC, MPC, MIC, or PIC | 402

Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 404

Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 405

Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC | 406

Replacing an MX240 AS MLC | 408

Removing an MX240 AS MLC | 408

Installing an MX240 AS MLC | 410

Replacing an MX240 AS MSC | 412

Removing an MX240 AS MSC | 412

Installing an MX240 AS MSC | 414

Replacing an MX240 AS MXC | 416

Removing an MX240 AS MXC | 416

Installing an MX240 AS MXC | 417

## Maintaining MX-SPC3 Services Card | 420

Maintaining MX-SPC3 Services Card | 420

Replacing an MX-SPC3 | 421

Removing an MX-SPC3 | 421

Installing an MX-SPC3 | 423

## Maintaining MX240 Power System Components | 425

Maintaining the MX240 Power Supplies | 425

Replacing an MX240 AC Normal-Capacity Power Supply | 427

Removing an MX240 AC Normal-Capacity Power Supply | 427

Installing an MX240 AC Normal-Capacity Power Supply | 428

Replacing an MX240 AC Power Supply Cord | 429

Disconnecting an MX240 AC Power Supply Cord | 430

Connecting an MX240 AC Power Supply Cord | 430

Replacing an MX240 DC Normal-Capacity Power Supply | 430

Removing an MX240 DC Power Supply | 431

| Installing an MX240 DC Normal Capacity Power Supply | 432

Replacing an MX240 DC Power Supply Cable | 435

| Disconnecting an MX240 DC Power Supply Cable | 436

| Connecting an MX240 DC Power Supply Cable | 436

## **Maintaining MX240 SFP and XFP Transceivers | 439**

Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 439

| Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 439

| Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC | 441

## **Maintaining MX240 Switch Control Boards | 442**

Replacing an MX240 SCB-MX | 443

| Removing an MX240 SCB-MX | 443

| Installing an MX240 Switch Control Board | 444

Upgrading an MX240 to Use the SCBE-MX | 446

| Prepare for the SCB-MX Upgrade | 447

| Upgrade the MX240 SCB-MX in the Backup Routing Engine | 448

| Upgrade the MX240 SCB-MX in the Primary Routing Engine | 450

| Complete the SCB-MX Upgrade | 452

Upgrading an MX240 to Use the SCBE2-MX | 456

| Prepare the MX240 Router for the SCBE2-MX Upgrade | 457

| Power Off the MX240 Router | 457

| Remove the MX240 Routing Engine | 458

| Install the MX240 Routing Engine into the SCBE2-MX | 458

| Power On the MX240 Router | 458

| Complete the SCBE2-MX Upgrade | 459

Upgrading an MX240, MX480, or MX960 Router to Use the SCBE3-MX | 460

| Upgrade the Routing Engine | 461

| Install the Routing Engine into the SCBE3-MX | 461

| Install the SCBE3-MX into the Router Chassis | 462

| Complete the SCBE3-MX Upgrade | 462

## **Troubleshooting Hardware**

### **Troubleshooting the MX240 Components | 465**

| Troubleshooting Resources for MX240 Routers | 465

Troubleshooting the MX240 Cooling System | 468

Troubleshooting the MX240 DPCs | 469

Troubleshooting the MX240 FPCs | 472

Troubleshooting the MX240 MICs | 475

Troubleshooting the MX240 MPCs | 476

Troubleshooting the MX240 PICs | 478

Troubleshooting the MX240 Power System | 479

## **Contacting Customer Support and Returning the Chassis or Components**

**Contact Customer Support | 485**

**Locating Component Serial Numbers | 485**

Displaying MX240 Router Components and Serial Numbers | 486

MX240 Chassis Serial Number Label | 487

MX240 SCB Serial Number Label | 488

MX240 DPC Serial Number Label | 490

MX240 FPC Serial Number Label | 490

MX240 MIC Serial Number Label | 492

MX240 MPC Serial Number Label | 495

MX240 PIC Serial Number Label | 497

MX240 Power Supply Serial Number Label | 498

MX240 Routing Engine Serial Number Label | 499

**Packing and Returning Components | 500**

How to Return a Hardware Component to Juniper Networks, Inc. | 501

Guidelines for Packing Hardware Components for Shipment | 502

Packing the MX240 Router for Shipment | 502

## **Safety and Compliance Information**

**General Safety Guidelines and Warnings | 506**

Definitions of Safety Warning Levels	507
Qualified Personnel Warning	509
Fire Safety Requirements	509
Warning Statement for Norway and Sweden	511
Preventing Electrostatic Discharge Damage to an MX240 Router	511
Installation Instructions Warning	512
MX240 Chassis Lifting Guidelines	513
Ramp Warning	514
Rack-Mounting and Cabinet-Mounting Warnings	514
Grounded Equipment Warning	518
Laser and LED Safety Guidelines and Warnings	519
Radiation from Open Port Apertures Warning	522
Maintenance and Operational Safety Guidelines and Warnings	523
General Electrical Safety Guidelines and Warnings	529
Prevention of Electrostatic Discharge Damage	530
AC Power Electrical Safety Guidelines	532
AC Power Disconnection Warning	533
MX240 DC Power Electrical Safety Guidelines	534
DC Power Copper Conductors Warning	535
DC Power Disconnection Warning	536
DC Power Grounding Requirements and Warning	537
DC Power Wiring Sequence Warning	538
DC Power Wiring Terminations Warning	539
Midplane Energy Hazard Warning	541
Multiple Power Supplies Disconnection Warning	541

**Action to Take After an Electrical Accident | 542**

**Site Electrical Wiring Guidelines for MX Series Routers | 542**

**Agency Approvals and Compliance Statements | 544**

Agency Approvals for MX Series Routers | 544

Compliance Statements for EMC Requirements | 546

Compliance Statements for Environmental Requirements | 547

Compliance Statements for Data Center | 547

Compliance Statements for Acoustic Noise for the MX240 Router | 548

# About This Guide

Use this guide to install hardware and perform initial software configuration, routine maintenance, and troubleshooting for the MX240 5G Universal Routing Platform. After completing the installation and basic configuration procedures covered in this guide, refer to the Junos OS documentation for information about further software configuration.

## RELATED DOCUMENTATION

| [MX240 Quick Start](#)



# 1

CHAPTER

## Fast Track: Initial Installation

---

### IN THIS CHAPTER

- Fast Track to Rack Installation and Power | 2
  - Onboard, Configure and Monitor MX240 | 11
-

# Fast Track to Rack Installation and Power

## SUMMARY

This procedure guides you through the simplest steps for the most common installation to mount your MX240 router in a rack and connect it to power.

## IN THIS SECTION

- [Install the MX240 in a Rack | 2](#)
- [Connect to Power | 8](#)

## Install the MX240 in a Rack

### IN THIS SECTION

- [Mount the Router | 3](#)

You can mount an MX240 router in a four-post rack, cabinet, or an open-frame rack. We'll walk you through the steps to install an MX240 router and connect it to power.

The router chassis weighs approximately 128 lb (58.1 kg) depending on the configuration.

You can mount the MX240 manually or using a mechanical lift. Because of the router's size and weight, we strongly recommend that you install the router using a mechanical lift.

Ensure that you have a mechanical lift rated for 250 lb (113.4 kg).

You must install the router in a restricted-access location and ensure that the chassis is always grounded properly.

Mount the router at the bottom of the rack if it is the only unit in the rack. On a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.

**Before you install, review the following:**

- ["MX240 Site Preparation Checklist" on page 208](#)
- ["General Safety Guidelines and Warnings" on page 506](#)
- ["Prevention of Electrostatic Discharge Damage" on page 530](#)

- ["Unpacking the MX240 Router" on page 244](#)
- ["MX240 Chassis Lifting Guidelines" on page 513](#)

## Mount the Router


To mount the MX240 router on a four-post rack:

1. If needed, install cage nuts in the holes specified in [Table 1 on page 3](#).


**Table 1: Four-Post Rack Mounting Hole Locations**

Hole	Distance Above U Division		Mounting Shelf
4	2.00 in. (5.1 cm)	1.14 U	X
3	1.51 in. (3.8 cm)	0.86 U	X
2	0.88 in. (2.2 cm)	0.50 U	X
1	0.25 in. (0.6 cm)	0.14 U	X

2. On the back of each rack rail, partially insert a mounting screw into the lowest hole specified in [Table 1 on page 3](#).
3. Install the small shelf on the back of the rack rails. Rest the bottom slot of each flange on a mounting screw.

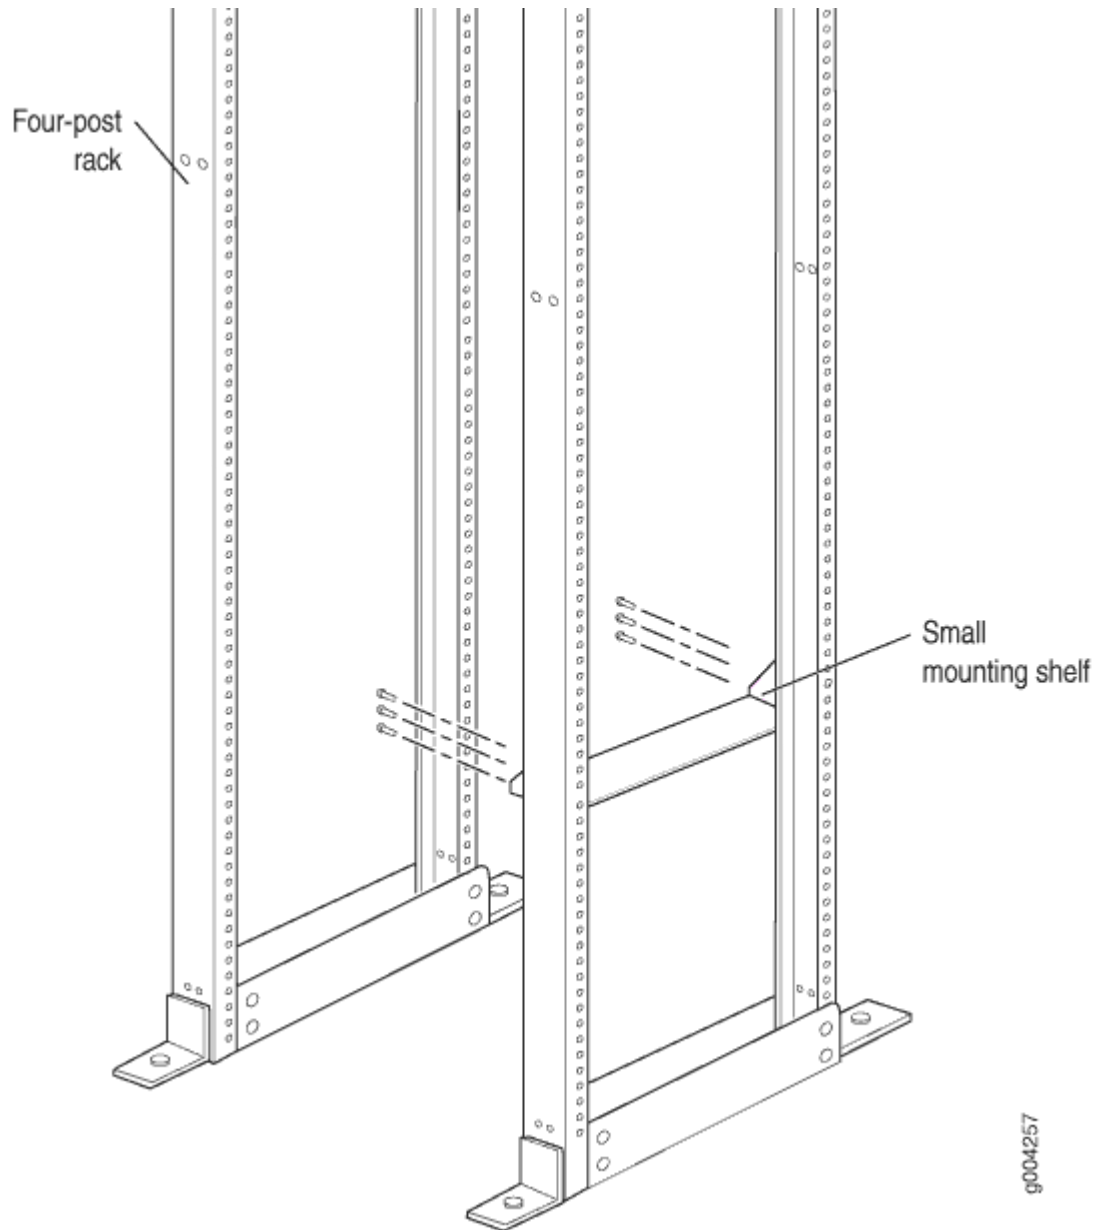

4. Partially insert the remaining screws into the open holes in each flange of the small shelf.
5. Tighten all the screws completely.
6. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point.
7. Because of the router's size and weight, remove all components before installing the router.

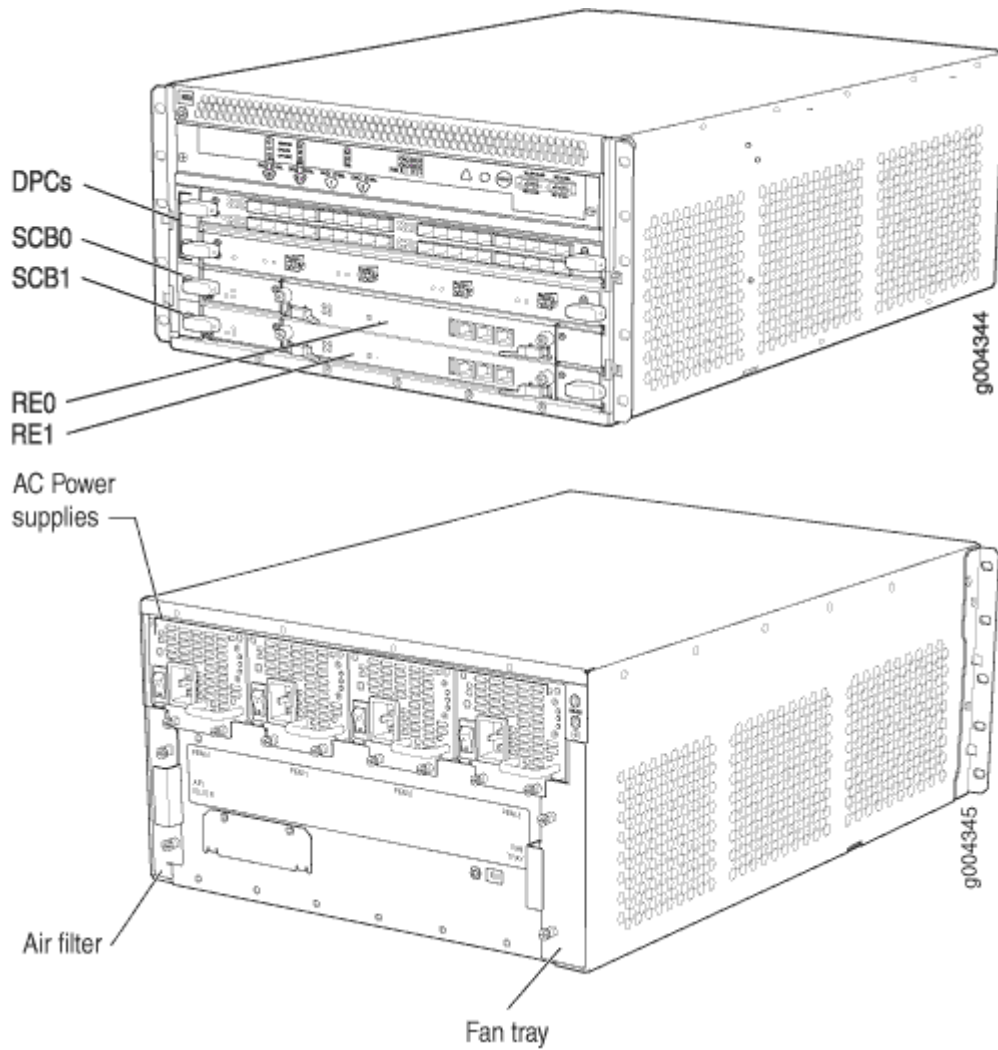

The following components must be removed:

- Power supplies
- Switch Control Boards (SCBs)
- Routing Engines
- Air filter
- Fan tray
- Line cards
  - Dense Port Concentrators (DPCs)
  - Flexible PIC Concentrators (FPCs)
  - Physical Interface Cards (PICs)

- Modular Port Concentrators (MPCs)
- Modular Interface Cards (MICs)

To remove components from the router:

- a. Slide each component out of the chassis evenly so that it does not become stuck or damaged.
- b. Label each component as you remove it so you can reinstall it in the correct location.
- c. Immediately store each removed component in an electrostatic bag.
- d. Do not stack removed components. Lay each one on a flat surface.



**NOTE:** For complete instructions on removing router components, see ["Removing Components from the MX240 Router Before Installing it with a Lift" on page 253.](#)

8. Load the router onto the lift, making sure it rests securely on the lift platform.



9. Using the lift, position the router in front of the rack or cabinet, centering it in front of the mounting shelf.
10. Lift the chassis approximately 0.75 in. above the surface of the mounting shelf and position it as close as possible to the shelf.
11. Carefully slide the router onto the mounting shelf so that the bottom of the chassis and the mounting shelf overlap by approximately 2 inches.
12. Slide the router onto the mounting shelf until the mounting brackets contact the rack rails. The shelf ensures that the holes in the mounting brackets align with the holes in the rack rails.
13. Move the lift away from the rack.

14. Install a mounting screw into each of the open mounting holes aligned with the rack, starting from the bottom.
15. Visually inspect the alignment of the router. If the router is installed properly in the rack, all the mounting screws on one side of the rack should be aligned with the mounting screws on the opposite side, and the router should be level.
16. Reinstall components in the router:
  - a. Slide each component into the chassis evenly so that it does not become stuck or damaged.
  - b. Tighten the captive screws for each component.



**NOTE:** For complete instructions on reinstalling the router components, see ["Reinstalling Components in the MX240 Router After Installing it with a Lift" on page 260.](#)

## Connect to Power

### IN THIS SECTION

- [Ground the Router | 9](#)
- [Connect the Power Cable and Power On the Router | 9](#)

Now that you've mounted your router on the rack, you're ready to ground your router and connect it to power. Depending on your configuration, your router uses either normal-capacity or high-capacity AC or DC power supplies. In this guide, we show you how to connect to normal-capacity AC power.



**CAUTION:** Do not mix AC and DC power supply modules within the same device. Mixing currents can damage the device.

To connect the MX240 router to AC power:



## Ground the Router

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, you must connect the chassis to earth ground. You ground the router by connecting a grounding cable to earth ground and then attaching it to the chassis grounding points using two UNC 1/4-20 screws. Make this connection before you connect the router to power.


To connect the MX240 router to earth ground:

1. Verify that a licensed electrician has attached the cable lug provided with the router to the grounding cable.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Ensure that all grounding surfaces are clean and brought to a bright finish before grounding connections are made.
4. Connect the grounding cable to a proper earth ground.
5. Detach the ESD grounding strap from the site ESD grounding point.
6. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Place the grounding cable lug over the grounding points on the upper rear of the chassis. The bolts are sized for UNC 1/4-20 screws.
8. Secure the grounding cable lug to the grounding points, first with the washers, then with the screws.
9. Dress the grounding cable and verify that it does not touch or block access to router components, and that it does not drape where people could trip on it.

## Connect the Power Cable and Power On the Router

To connect the power cable and power on the MX240 router:

1. Locate the power cords shipped with the router, which should have a plug appropriate for your geographical location.
2. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
3. Insert the appliance coupler end of the power cord into the appliance inlet on the power supply.
4. Connect the power cord to the power supply.

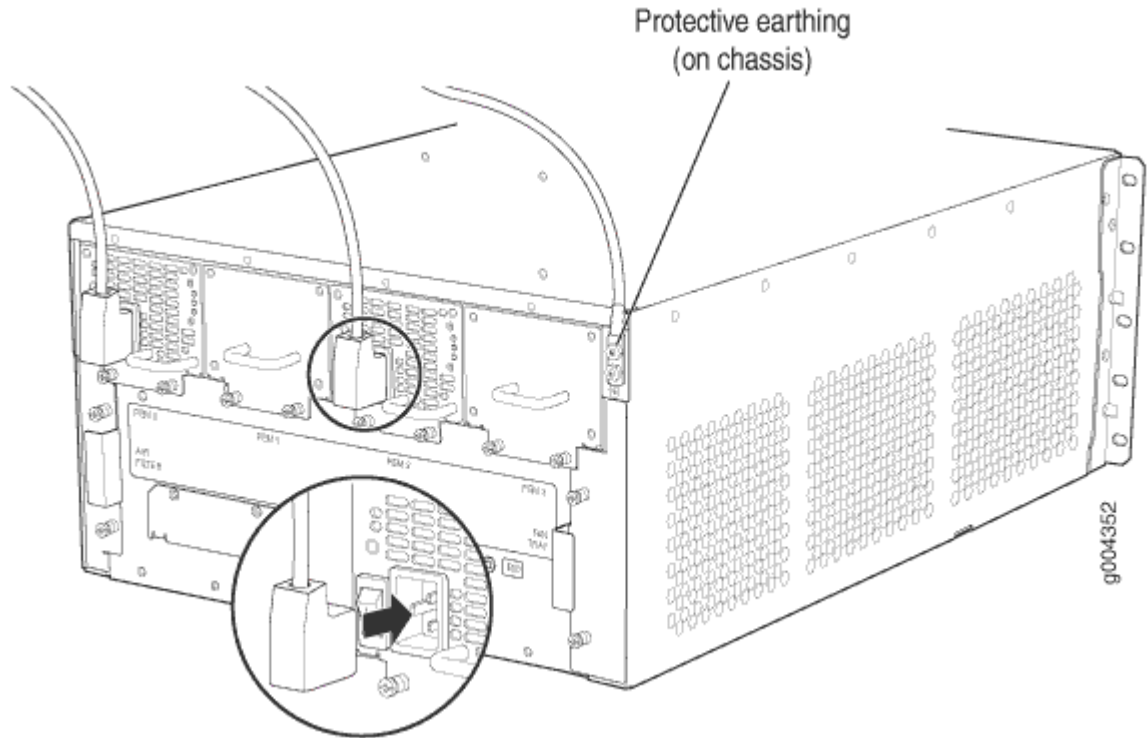

5. Insert the power cord plug into an external AC power source receptacle.



**NOTE:** Each power supply must be connected to a dedicated AC power feed and a dedicated customer site circuit breaker. We recommend that you use a dedicated customer site circuit breaker rated for 15 A (250 VAC) minimum, or as permitted by local code.

6. Route the power cord appropriately. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
7. Repeat step "1" on page 9 to step "6" on page 10 for the remaining power supplies.
8. Switch the AC input switch on each power supply to the on (I) position and observe the status LEDs on each power supply faceplate. If an AC power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures.

# Onboard, Configure and Monitor MX240

## SUMMARY

This topic provides you with pointers to onboard, configure, and monitor MX240 routers using Juniper Routing Director (formerly Juniper Paragon Automation), Juniper Routing Assurance (formerly Juniper Mist Routing Assurance), or Junos OS CLI.

## IN THIS SECTION

- [Juniper Routing Director \(formerly Juniper Paragon Automation\) | 11](#)
- [Juniper Routing Assurance | 11](#)
- [Junos OS CLI | 12](#)

## Juniper Routing Director (formerly Juniper Paragon Automation)

You can use [Juniper Routing Director \(formerly Juniper Paragon Automation\)](#) or [Juniper Paragon Automation](#) to onboard, manage, and monitor MX240.

## Juniper Routing Assurance

You can onboard the MX240 routers and monitor their performance by using Juniper Routing Assurance (formerly Juniper Mist Routing Assurance). You can use the routing insights that Juniper Routing Assurance provides to proactively respond to network events and anomalies. See [Table 2 on page 11](#) for more information.

**Table 2: Onboard and Monitor MX240 Routers Using Juniper Routing Assurance**

If you want to	Then
Setup Juniper Routing Assurance, onboard routers, and monitor their performance	See <a href="#">Juniper Routing Assurance</a> and <a href="#">Onboard Routers Using Juniper Routing Assurance</a>
Use the Juniper Routing Assurance	See <a href="#">Juniper Routing Assurance User Guide</a>
See all documentation available for Mist AI Routing	Visit <a href="#">Juniper Routing Assurance documentation</a>

## Junos OS CLI

You can configure and monitor MX240 routers using the Junos OS CLI. See [Table 3 on page 12](#) for more information.

**Table 3: Configure MX240 Using Junos OS CLI**

If you want to	Then
Customize basic configuration	See <a href="#">"Initially Configuring the MX240 Router" on page 298</a> .
Explore the software features supported on the MX240	See <a href="#">Feature Explorer</a> .
Configure supported software features on the MX240	See <a href="#">User Guides</a> .

# 2

CHAPTER

## Overview

---

### IN THIS CHAPTER

- [MX240 System Overview | 14](#)
  - [MX240 Chassis | 17](#)
  - [MX240 Cooling System | 30](#)
  - [MX240 Air Deflector Kits | 33](#)
  - [MX240 AC Power System | 38](#)
  - [MX240 DC Power System | 48](#)
  - [MX240 Host Subsystem Components and Descriptions | 61](#)
  - [MX240 Line Card Components and Descriptions | 121](#)
  - [MX-SPC3 Services Card | 193](#)
  - [MX-Series Switch Control Board \(SCB\) Description | 202](#)
-

# MX240 System Overview

## IN THIS SECTION

- [Benefits of the MX240 Router | 14](#)
- [MX240 Hardware Overview | 15](#)

The MX240 router is an Ethernet-optimized edge router that provides both switching and carrier-class Ethernet routing. The MX240 enables a wide range of business and residential applications and services, including high-speed transport and VPN services, next-generation broadband multiplay services, high-speed Internet and data center internetworking.

## Benefits of the MX240 Router

- **System Capacity**—MX240 provides 3 Tbps of system capacity for space-constrained cloud, enterprise, data center, service provider, cable, and mobile service core deployments.
- **Always-on infrastructure base**—MX Series routers ensure network and service availability with a broad set of multilayered physical, logical, and protocol-level resiliency aspects. Junos OS Virtual Chassis technology on MX Series routers supports chassis-level redundancy and enables you to manage two routers as a single element. Multichassis link aggregation group (MC-LAG) implementation supports stateful chassis, card, and port redundancy.
- **Application-Aware Networking**—On MX Series routers you can use deep packet inspection to detect applications, and by using the user-defined policies, you can determine traffic treatment for each application. This feature enables highly customized and differentiated services at scale.
- **Programmable Chipset**—The chipset implemented in the MX Series routers has a programmable forwarding data structure that allows fast microcode changes in the hardware itself, and a programmable lookup engine that allows inline service processing. the chip's programmable QoS engine supports coarse and fine-grained queuing to address the requirements of core, edge, and aggregation use cases.
- **Junos Continuity and Unified In-Service Software Upgrade (Unified ISSU)**—With the Junos continuity plug-in package, you can perform a smooth upgrade when new hardware is installed in your MX Series router.

Unified in-service software upgrade (unified ISSU) enables software upgrades and changes without disrupting network traffic.

- **Junos Telemetry Interface**—Using the Junos telemetry interface data, you can stream component-level data to monitor, analyze, and enhance the performance of the network. Analytics derived from this streaming telemetry can identify current and trending congestion, resource utilization, traffic volume, and buffer occupancy.
- **Integrated Hardware-Based Timing**—You do not need to use external clocks because MX Series routers support highly scalable and reliable hardware-based timing, including Synchronous Ethernet for frequency, and the Precision Time Protocol (PTP) for frequency and phase synchronization. Synchronous Ethernet and PTP can be combined in a hybrid mode to achieve a high level of frequency (10 ppb) and phase (<1.5 uS) accuracy.

## MX240 Hardware Overview

The MX240 router is five rack units (U) tall. Several routers can be stacked in a single floor-to-ceiling rack, for increased port density per unit of floor space.

Fully populated, the MX240 provides a maximum aggregate switch fabric capacity of up to 1.92 Tbps and line-rate throughput for up to 48 10-Gigabit Ethernet ports, or four 100-Gigabit Ethernet and eight 10-Gigabit Ethernet ports, or twelve 40-Gigabit Ethernet ports.

Table 4 on page 15 lists the MX240 router capacity.

Table 4: MX240 Router Capacity

Description	Capacity
System capacity	1.92 Tbps full-duplex
Switch fabric capacity per slot	480 Gbps
MPCs and DPCs per chassis	2 or 3
	<b>NOTE:</b> Apart from one dedicated slot for the SCB, another multifunctional slot is available for either one DPC, MPC, or SCB.
Chassis per rack	9

The router provides two dedicated line card slots for Dense Port Concentrators (DPCs), Modular Port Concentrators (MPCs), or Flexible PIC Concentrators (FPCs). DPCs and MPCs each install into a single line-card slot. The FPC installs into both slots. The router also provides one dedicated slot for a Switch Control Board (SCB), and one multifunction slot for either one DPC, MPC, or SCB. Optionally, an FPC can be installed in both the multifunction slot and lowest dedicated line card slot.

An FPC supports up to two PICs. An MPC supports up to two Modular Interface Cards (MICs).

Each DPC includes two or four Packet Forwarding Engines. Each Packet Forwarding Engine enables a throughput of 10 Gbps.

Several types of line cards, are available. For a list of the supported line cards, see the [MX Series Interface Module Reference](#).

Four SCBs are available for the MX240 routers—SCB-MX, the SCBE-MX, SCBE2-MX, and SCBE3-MX.

[Table 5 on page 16](#) compares the fabric bandwidth capacities of SCBs per MX-series router.

**Table 5: Switch Control Board Capacities for MX Series 5G Universal Routing Platforms (Full-Duplex)**

Description	Fabric Bandwidth Per Slot	MX240 Fabric Bandwidth	MX480 Fabric Bandwidth	MX960 Fabric Bandwidth
Enhanced MX Switch Control Board (model SCBE3-MX)	Up to 1.5 Tbps (non-redundant fabric configuration with MPC10E line cards); 1 Tbps (redundant fabric configuration with MPC10E line cards)	Up to 6 Tbps	Up to 18 Tbps	Up to 33 Tbps
Enhanced MX Switch Control Board (SCBE2-MX)	Up to 480 Gbps (non-redundant fabric configuration); 340 Gbps (redundant fabric configuration)	Up to 1.92 Tbps	Up to 5.76 Tbps	Up to 10.56 Tbps
Enhanced MX Switch Control Board (SCBE-MX)	Up to 240 Gbps (non-redundant fabric configuration); 160 Gbps (redundant fabric configuration)	Up to 930 Gbps	Up to 2.79 Tbps	Up to 5.25 Tbps



Table 5: Switch Control Board Capacities for MX Series 5G Universal Routing Platforms (Full-Duplex)  
(Continued)

Description	Fabric Bandwidth Per Slot	MX240 Fabric Bandwidth	MX480 Fabric Bandwidth	MX960 Fabric Bandwidth
Switch Control Board (SCB-MX)	Up to 240 Gbps (non-redundant fabric configuration); 120 Gbps (redundant fabric configuration)	Up to 465 Gbps	Up to 1.39 Tbps	Up to 2.6 Tbps

The connections between line cards and SCBs are organized in three groups:

- Switch fabric—Connects the line cards and provides for packet transport between the line cards.
- Control plane—Gigabit Ethernet links between the combined SCBs/Routing Engines and each DPC, MPC, or FPC. All board-to-board information is passed over Ethernet except for low-level status and commands.
- Management signals—Provide low-level status diagnostic support.

RELATED DOCUMENTATION

<a href="#">MX240 Dense Port Concentrator (DPC) Description   122</a>
<a href="#">MX240 Modular Port Concentrator (MPC) Description   173</a>
<a href="#">MX240 Flexible PIC Concentrator (FPC) Description   133</a>
<a href="#">MX240 Modular Interface Card (MIC) Description   155</a>
<i>SCB-MX Description</i>

# MX240 Chassis

IN THIS SECTION


- [MX240 Chassis Description | 18](#)
- [MX240 Router Hardware and CLI Terminology Mapping | 22](#)

- [MX240 Component Redundancy | 24](#)
- [MX240 Craft Interface Overview | 25](#)
- [MX240 Alarm Relay Contacts on the Craft Interface | 26](#)
- [MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button | 26](#)
- [MX240 Component LEDs on the Craft Interface | 27](#)

## MX240 Chassis Description

The router chassis is a rigid sheet metal structure that houses all the other router components (see [Figure 1 on page 18](#), [Figure 2 on page 19](#), [Figure 3 on page 20](#), [Figure 4 on page 21](#), and [Figure 5 on page 21](#)). The chassis measures 8.71 in. (22.1 cm) high, 17.45 in. (44.3 cm) wide, and 24.5 in. (62.2 cm) deep (from the front-mounting brackets to the rear of the chassis). The chassis installs in standard 800-mm deep (or larger) enclosed cabinets, 19-in. equipment racks, or telco open-frame racks.

**Figure 1: Front View of a Fully Configured MX240 Router**

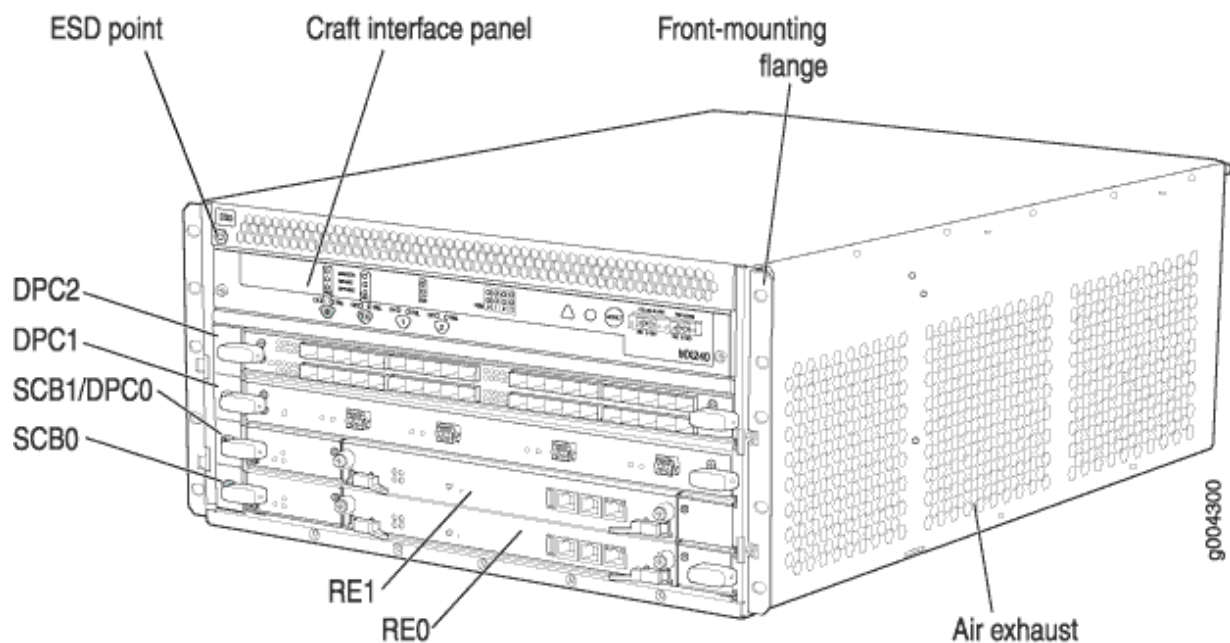

**Figure 2: Rear View of a Fully Configured AC-PoweredMX240 Router (110 V)**

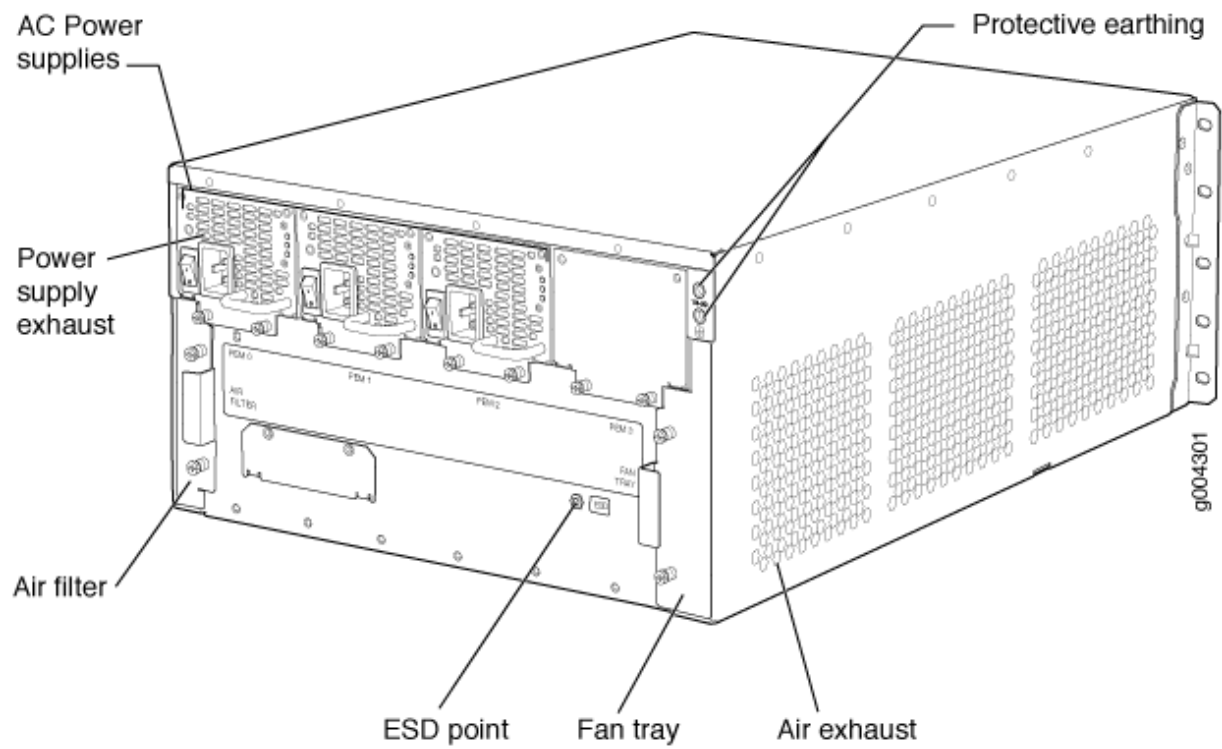


Figure 3: Rear View of a Fully Configured AC-Powered MX240 Router (220 V)

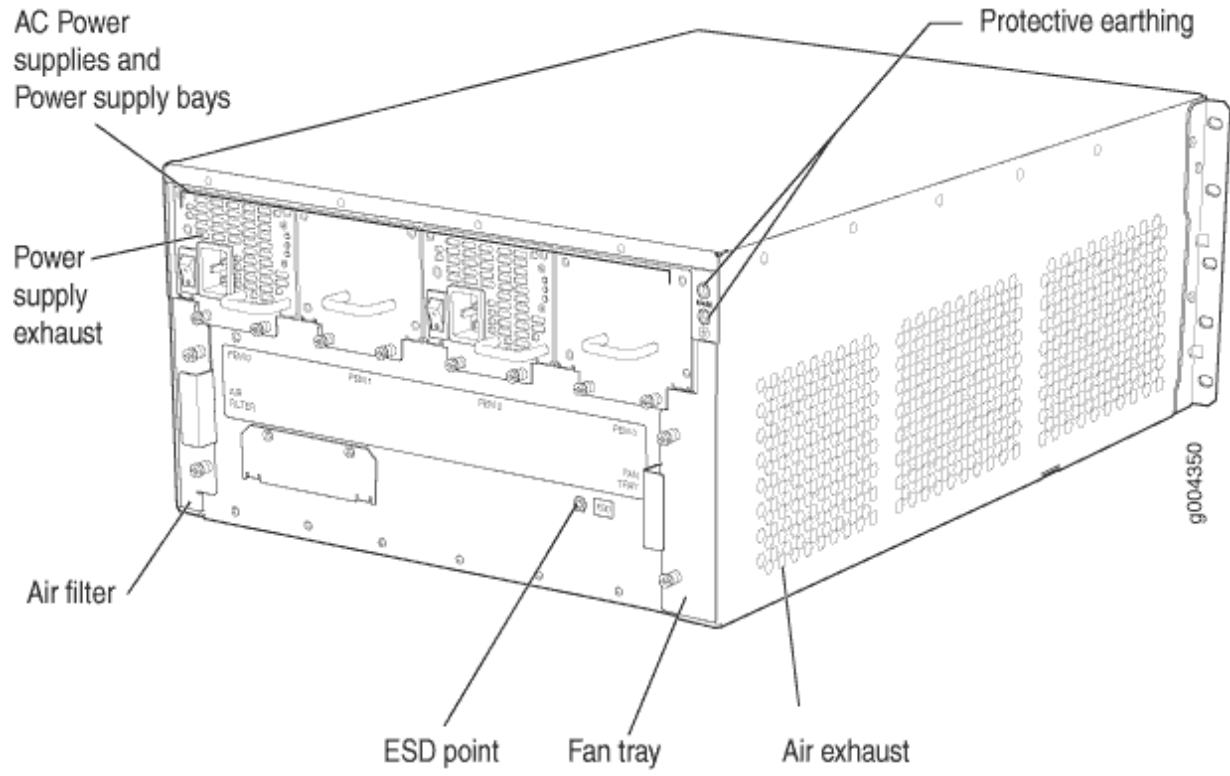


Figure 4: Rear View of a Fully Configured DC-Powered MX240 Router


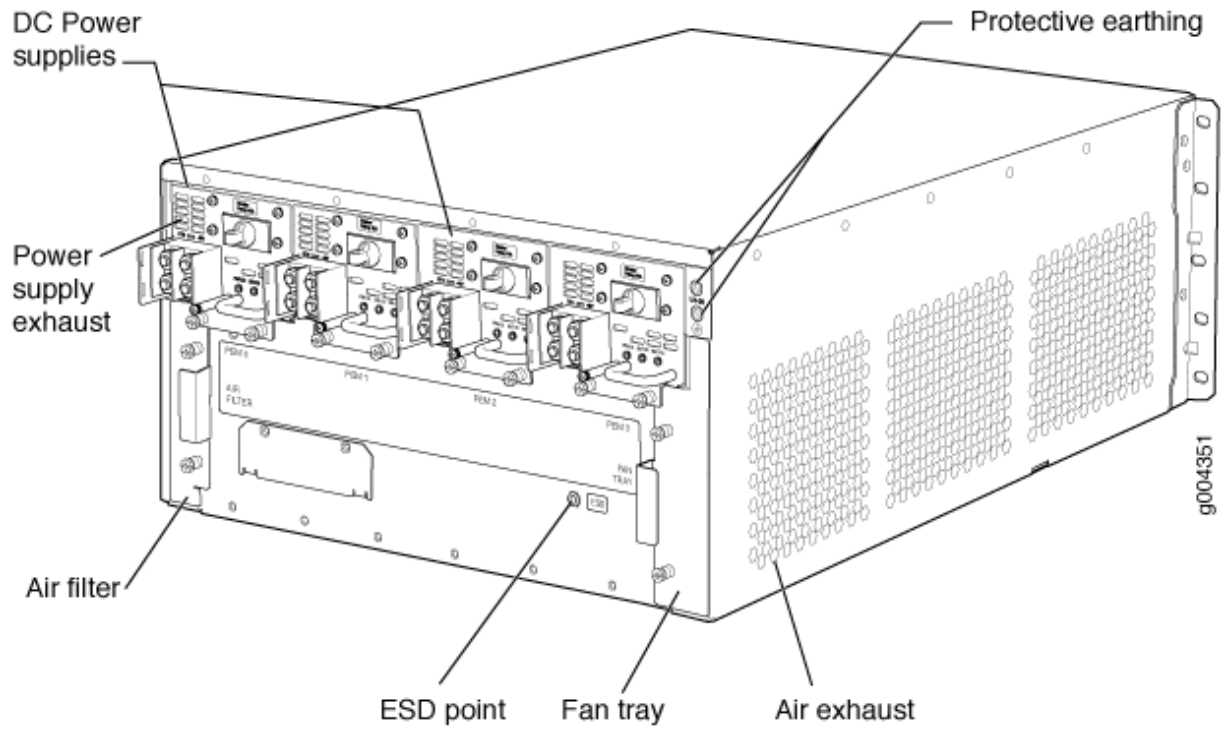


Figure 5: Front View of a MPC Installed Horizontally in the MX240 Router

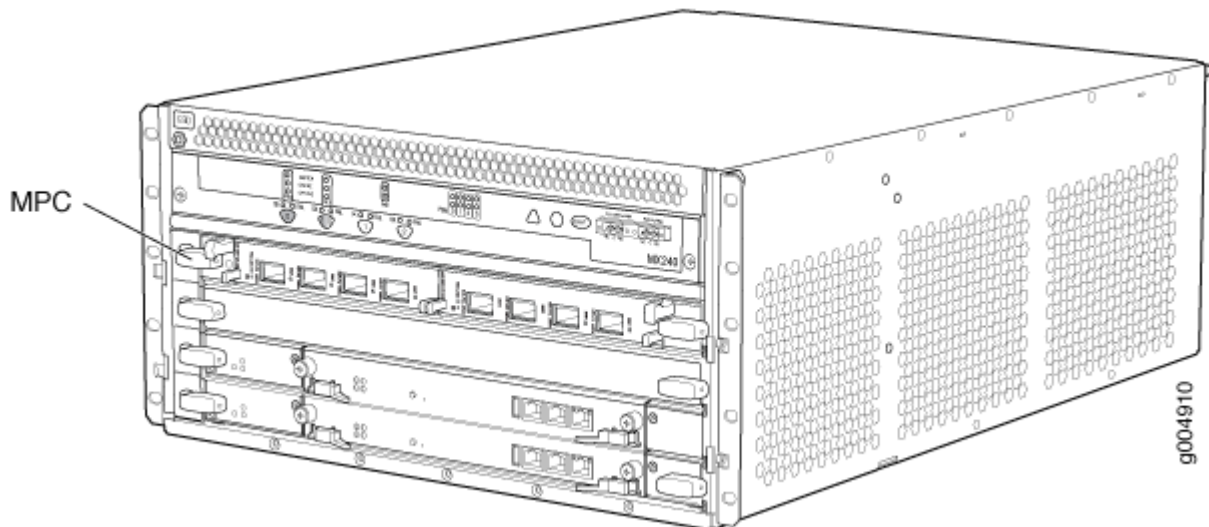

SEE ALSO

| [MX240 Router Physical Specifications](#) | 209

**MX240 Router Hardware and CLI Terminology Mapping**

The MX240 router supports the components in [Table 6 on page 22](#).

**Table 6: MX240 Router Hardware Components and CLI Terminology**

Component	Hardware Model Number	CLI Name	Description
Chassis	CHAS-BP-MX240	MX240	<a href="#">"MX240 Router Physical Specifications" on page 209</a> <a href="#">"MX240 Chassis Description" on page 18</a>
Cooling System			
Fan tray	FFANTRAY-MX240	MX240 Fan Tray	<a href="#">"MX240 Cooling System Description" on page 31</a>
	FFANTRAY-MX240-HC	Enhanced Fan Tray	
Filter kit	FLTR-KIT-MX240	N/A	
Host Subsystem			<a href="#">"MX240 Host Subsystem Description" on page 62</a>
Routing Engine	See <a href="#">"Supported Routing Engines by Router" on page 96</a> .		<a href="#">"MX240 Routing Engine Description" on page 64</a>
SCB	MX240-SCB-S	<b>MX SCB</b>	<a href="#">SCB-MX Description</a>
Interface Modules			

Table 6: MX240 Router Hardware Components and CLI Terminology (*Continued*)

Component	Hardware Model Number	CLI Name	Description
DPC	See "DPCs Supported on MX240, MX480, and MX960 Routers" on page 129 in the <i>MX Series Interface Module Reference</i> .		"MX240 Dense Port Concentrator (DPC) Description" on page 122
FPC	MX-FPC2	<b>MX FPC Type 2</b>	"FPCs Supported by MX240, MX480, and MX960 Routers" on page 136
	MX-FPC3	<b>MX FPC Type 3</b>	
MIC	See "MICs Supported by MX Series Routers" on page 155 in the <i>MX Series Interface Module Reference</i> .		"MX240 Modular Interface Card (MIC) Description" on page 155
MPC	See "MPCs Supported by MX Series Routers" on page 176 in the <i>MX Series Interface Module Reference</i> .		"MPCs Supported by MX Series Routers" on page 176
Transceiver	See <i>MX Series Interface Module Reference</i>	<b>Xcvr</b>	"Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC" on page 439
<b>Power System</b>			"MX240 Power System Description" on page 38
AC power supply	PWR-MX480-AC	AC Power Entry Module	"MX240 AC Power Supply Description" on page 39
	PWR-MX480-1200-AC	PS 1.2-1.7kW 100-240V AC in	
	PWR-MX480-2520-AC	PS 1.4-2.52kW; 90-264V AC in	
DC power supply	PWR-MX480-DC	DC Power Entry Module	"MX240 DC Power Supply Description" on page 48

Table 6: MX240 Router Hardware Components and CLI Terminology (*Continued*)

Component	Hardware Model Number	CLI Name	Description
	PWR-MX480-1600-DC	DC Power Entry Module	
	PWR-MX480-2400-DC	DC 2.4kW Power Entry Module	
Power supply blank panel	PWR-BLANK-MX480	N/A	<a href="#">"MX240 Power System Description" on page 38</a>

## SEE ALSO

[MX240 System Overview | 14](#)
[MX240 DPC Port and Interface Numbering | 125](#)
[MX240 MIC Port and Interface Numbering | 169](#)
[MX240 PIC Port and Interface Numbering | 137](#)
[MX Series Router Interface Names](#)

## MX240 Component Redundancy

The MX240 chassis provides redundancy and resiliency. The hardware system is fully redundant, including power supplies, Routing Engines, and SCBs.

A fully configured router is designed so that no single point of failure can cause the entire system to fail. Only a fully configured router provides complete redundancy. All other configurations provide partial redundancy. The following major hardware components are redundant:

- **Host subsystem**—The host subsystem consists of a Routing Engine functioning together with an SCB. The router can have one or two host subsystems. If two host subsystems are installed, one functions as the primary and the other functions as the backup. If the primary host subsystem (or either of its components) fails, the backup can take over as the primary. To operate, each host subsystem requires a Routing Engine installed directly into in an SCB.
- In the high-line (220 V) AC power configuration, the MX240 router contains one or two AC power supplies, located horizontally at the rear of the chassis in slots **PEM0** and **PEM2** (left to right). The




high-line configuration requires one power supply, with the second power supply providing redundancy. Each AC power supply provides power to all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply fails or is removed, the remaining power supply assumes the entire electrical load without interruption. One power supply can provide the maximum configuration with full power for as long as the router is operational.

- In the low-line (110 V) AC power configuration, the MX240 router contains either two AC power supplies (nonredundant), located horizontally at the rear of the chassis in slots **PEM0** and **PEM1** (left to right); or four AC power supplies (redundant), located in slots **PEM0** through **PEM3** (left to right). The low-line configuration requires two power supplies, and the third and fourth power supplies provide redundancy. Each AC power supply provides power to all components in the router. When two power supplies are present in a non-redundant system or when four power supplies are present in a redundant system, they share power almost equally within a fully populated system. If one power supply in a redundant configuration fails or is removed, the remaining power supplies assume the entire electrical load without interruption. Two power supplies provide the maximum configuration with full power for as long as the router is operational.
- Cooling system—The cooling system has redundant components, which are controlled by the host subsystem. If one of the fans fails, the host subsystem increases the speed of the remaining fans to provide sufficient cooling for the router indefinitely.

## MX240 Craft Interface Overview

The craft interface allows you to view status and troubleshooting information at a glance and to perform many system control functions. It is hot-insertable and hot-removable. The craft interface is located on the front of the router above the card cage and contains LEDs for the router components, the alarm relay contacts, and alarm cutoff button. See [Figure 6 on page 25](#).

**Figure 6: Front Panel of the Craft Interface**

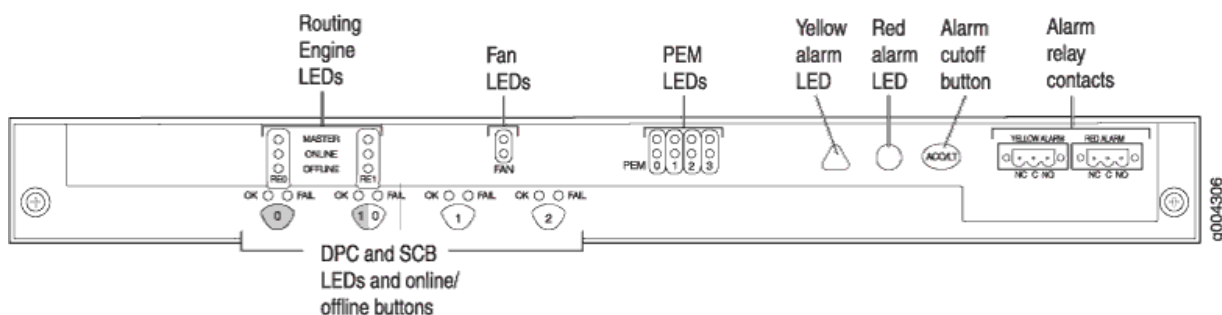




**NOTE:** At least one SCB must be installed in the router for the craft interface to obtain power.

## MX240 Alarm Relay Contacts on the Craft Interface

The craft interface has two alarm relay contacts for connecting the router to external alarm devices (see [Figure 7 on page 26](#)). Whenever a system condition triggers either the red or yellow alarm on the craft interface, the alarm relay contacts are also activated. The alarm relay contacts are located on the upper right of the craft interface.

**Figure 7: Alarm Relay Contacts**

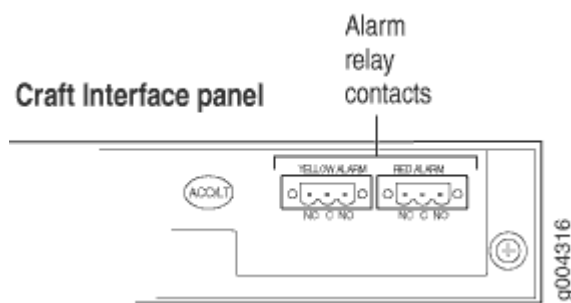

## MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button




Two large alarm LEDs are located at the upper right of the craft interface. The circular red LED lights to indicate a critical condition that can result in a system shutdown. The triangular yellow LED lights to indicate a less severe condition that requires monitoring or maintenance. Both LEDs can be lit simultaneously.

A condition that causes an LED to light also activates the corresponding alarm relay contact on the craft interface.

To deactivate red and yellow alarms, press the button labeled **ACO/LT** (for “alarm cutoff/lamp test”), which is located to the right of the alarm LEDs. Deactivating an alarm turns off both LEDs and deactivates the device attached to the corresponding alarm relay contact on the craft interface.

[Table 7 on page 27](#) describes the alarm LEDs and alarm cutoff button in more detail.

Table 7: Alarm LEDs and Alarm Cutoff/Lamp Test Button

Shape	Color	State	Description
	Red	On steadily	Critical alarm LED—Indicates a critical condition that can cause the router to stop functioning. Possible causes include component removal, failure, or overheating.
	Yellow	On steadily	Warning alarm LED—Indicates a serious but nonfatal error condition, such as a maintenance alert or a significant increase in component temperature.
	–	–	Alarm cutoff/lamp test button—Deactivates red and yellow alarms. Causes all LEDs on the craft interface to light (for testing) when pressed and held.

## MX240 Component LEDs on the Craft Interface

### IN THIS SECTION

- Host Subsystem LEDs on the MX240 Craft Interface | 27
- Power Supply LEDs on the MX240 Craft Interface | 28
- DPC and MPC LEDs on the MX240 Craft Interface | 28
- FPC LEDs on the MX240 Craft Interface | 29
- SCB LEDs on the MX240 Craft Interface | 29
- Fan LED on the MX240 Craft Interface | 30

### Host Subsystem LEDs on the MX240 Craft Interface

Each host subsystem has three LEDs, located in the middle of the craft interface, that indicate its status. The LEDs labeled **RE0** show the status of the Routing Engine in slot **0** and the SCB in slot **0**. The LEDs labeled **RE1** show the status of the Routing Engine and SCB in slot **1/0**. [Table 8 on page 28](#) describes the functions of the host subsystem LEDs.

**Table 8: Host Subsystem LEDs on the Craft Interface**

Label	Color	State	Description
<b>MASTER</b>	Green	On steadily	Host is functioning as the primary.
<b>ONLINE</b>	Green	On steadily	Host is online and is functioning normally.
<b>OFFLINE</b>	Red	On steadily	Host is installed but the Routing Engine is offline.
	–	Off	Host is not installed.

### Power Supply LEDs on the MX240 Craft Interface

Each power supply has two LEDs on the craft interface that indicate its status. The LEDs, labeled **0** through **3**, are located on the upper left of the craft interface next to the **PEM** label. [Table 9 on page 28](#) describes the functions of the power supply LEDs on the craft interface.

**Table 9: Power Supply LEDs on the Craft Interface**

Label	Color	State	Description
<b>PEM</b>	Green	On steadily	Power supply is functioning normally.
	Red	On steadily	Power supply has failed or power input has failed.

### DPC and MPC LEDs on the MX240 Craft Interface

Each DPC or MPC has LEDs on the craft interface that indicate its status. The LEDs, labeled **1/0**, **1**, and **2**, (**1/0** shows status of either SCB1, DPC0, MPC0, or FPC0 depending on which component is installed in the slot), are located along the bottom of the craft interface. See [Table 10 on page 29](#).

**Table 10: DPC and MPC LEDs on the Craft Interface**

Label	Color	State	Description
<b>OK</b>	Green	On steadily	Card is functioning normally.
		Blinking	Card is transitioning online or offline.
	-	Off	The slot is not online.
<b>FAIL</b>	Red	On steadily	Card has failed.

### FPC LEDs on the MX240 Craft Interface

An FPC takes up two DPC slots when installed in an MX Series router. An FPC LED located along the bottom of the craft interface indicates status. The LED corresponds to the lowest DPC slot number in which the FPC is installed. See [Table 11 on page 29](#).

**Table 11: FPC LEDs on the Craft Interface**

Label	Color	State	Description
<b>OK</b>	Green	On steadily	FPC is functioning normally.
		Blinking	FPC is transitioning online or offline.
	-	Off	The slot is not online.
<b>FAIL</b>	Red	On steadily	FPC has failed.

### SCB LEDs on the MX240 Craft Interface

Each SCB has two LEDs on the craft interface that indicates its status. The SCB LEDs, labeled **0** and **1/0** (**1/0** shows the status of either SCB1 DPC0, or FPC0 depending on which component is installed in the multifunction slot), are located along the bottom of the craft interface. [Table 12 on page 30](#) describes the functions of the SCB LEDs.

Table 12: SCB LEDs on the Craft Interface

Label	Color	State	Description
OK	Green	On steadily	SCB: Fabric and control board functioning normally.
		Blinking	SCB is transitioning online or offline.
	-	Off	The slot is not online.
FAIL	Red	On steadily	SCB has failed.

Fan LED on the MX240 Craft Interface

The fan LEDs are located on the top left of the craft interface. [Table 13 on page 30](#) describes the functions of the fan LEDs.

Table 13: Fan LEDs on the Craft Interface

Label	Color	State	Description
FAN	Green	On steadily	Fan is functioning normally.
	Red	On steadily	Fan has failed.

# MX240 Cooling System

IN THIS SECTION

- [MX240 Cooling System Description | 31](#)
- [MX240 Fan LED | 33](#)

## MX240 Cooling System Description


The cooling system consists of the following components:

- Fan tray
- Air filter

The cooling system components work together to keep all router components within the acceptable temperature range (see [Figure 8 on page 31](#), [Figure 9 on page 32](#), and [Figure 10 on page 32](#)). The router has one fan tray and one air filter that install vertically in the rear of the router. The fan tray contains three fans. The MX Series high-capacity fan trays satisfy cooling requirements for high-density DPCs and MPCs, and must be upgraded for proper cooling.

The air intake to cool the chassis is located on the side of the chassis next to the air filter. Air is pulled through the chassis toward the fan tray, where it is exhausted out the side of the system. The air intake to cool the power supplies is located in the front of the router above the craft interface. The exhaust for the power supplies is located on the rear bulkhead power supplies.

**Figure 8: Airflow Through the Chassis**

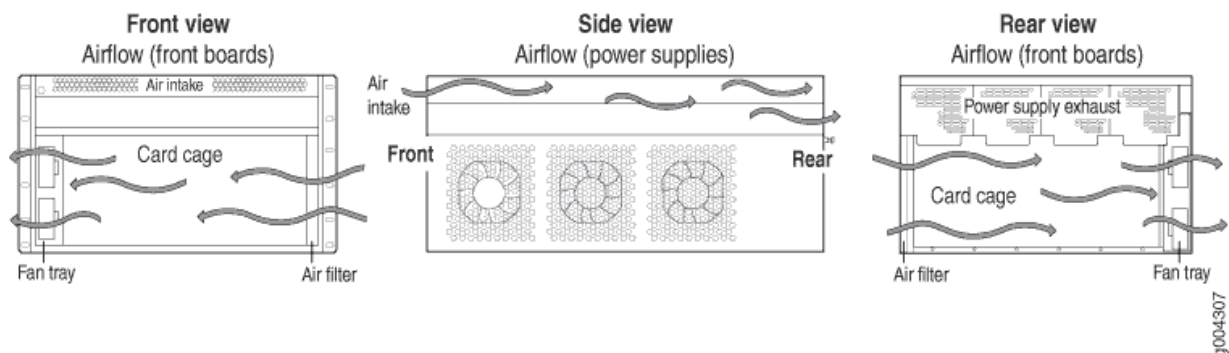

The host subsystem monitors the temperature of the router components. When the router is operating normally, the fans function at lower than full speed. If a fan fails or the ambient temperature rises above a threshold, the speed of the remaining fans is automatically adjusted to keep the temperature within the acceptable range. If the ambient maximum temperature specification is exceeded and the system cannot be adequately cooled, the Routing Engine shuts down the system by disabling output power from each power supply.

Figure 9: Fan Tray


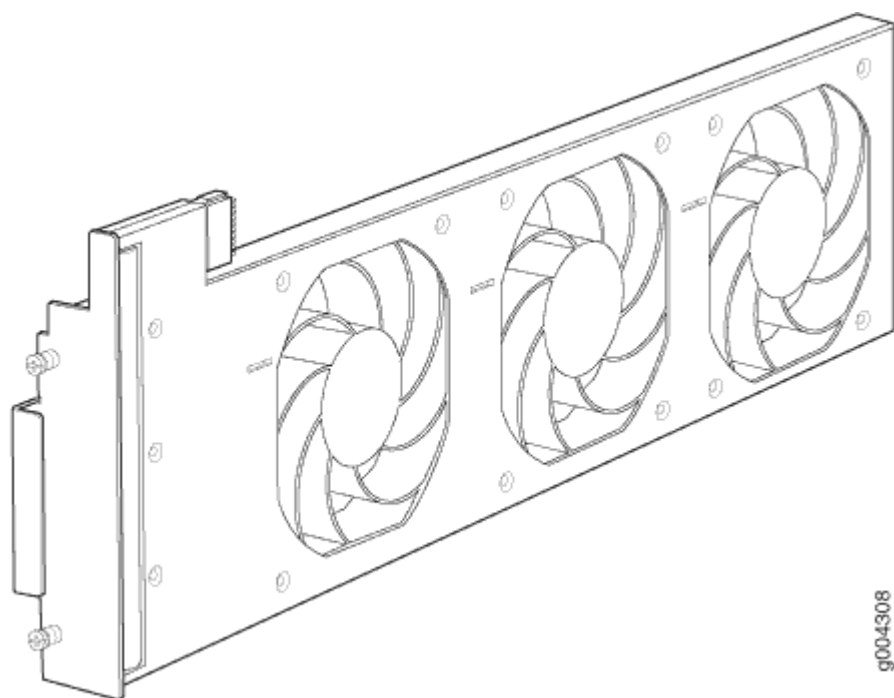


Figure 10: Air Filter



**SEE ALSO**

| [Troubleshooting the MX240 Cooling System](#) | 468

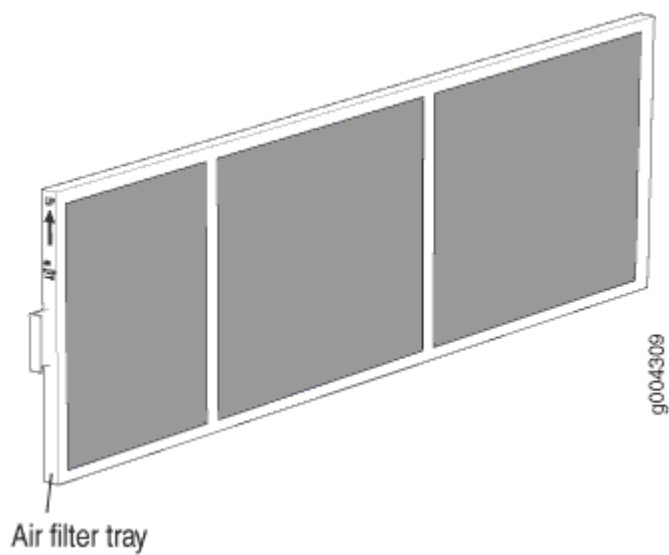

## MX240 Fan LED

Each fan has an LED that displays its status. The fan LEDs are located on the top left of the craft interface. For more information, see ["MX240 Component LEDs on the Craft Interface" on page 27](#).

### SEE ALSO

[Troubleshooting the MX240 Cooling System | 468](#)

## MX240 Air Deflector Kits

Optional air deflector kits are available that let you install the MX240 routers in a ventilation environment with designated hot and cold aisles. These kits convert the MX240 router from side-to-side ventilation into front-to-back ventilation, by directing ventilation with cold air to enter from the front and warm exhaust to exit from the back. The air deflectors contain no additional fans, so they require no additional electrical power.



**NOTE:** The air deflector kit must be installed along with the device. It cannot be installed if the device is already installed on the rack.

The air deflector kits consist of four main components: two intake/exhaust boxes and two side plenums.

- Top plenum
- Bottom plenum
- Right plenum
- Left plenum

The top and bottom plenums are identical to each other, as are the right and left or side plenums. See [Figure 11 on page 34](#) and [Table 14 on page 34](#) for the list of components that comprise the air deflector kit.

Figure 11: Components of the Air Deflector Kit

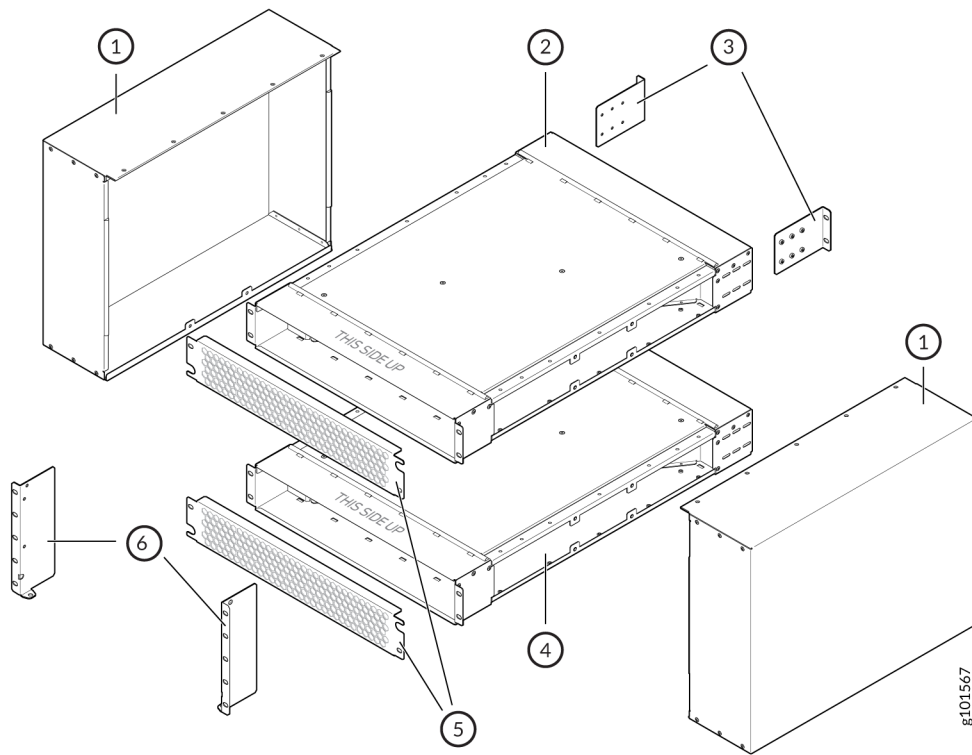


Table 14: Air Deflector Kit Components

Number	Component
1	Two side plenums (one for right and one for left)
2 and 4	Top plenum and bottom plenum
3	Rear mounting brackets
5	Perforated screens
6	Mounting brackets supplied with the air deflector kit for the router


Air flow in the air deflector kit is from front to rear, and the orientation of the top and bottom plenums is critical to ensure air intake happens from the front and exhausts through the rear.

The plenums are installed above and below the router to direct intake air from the air space in front of the router into the side plenum mounted on the intake side of the device. The intake air plenum directs air into the device, and the exhaust air plenum directs the exhaust air to the opposite side of the device. The exhaust plenum directs the exhausted air into the exhaust plenum above the unit, where it is expelled into the air space behind the router.

The air deflector kit requires additional space around the device. [Table 15 on page 35](#) and [Table 16 on page 36](#) summarize the physical specifications and rack space requirements for the air deflector kit. See [Figure 12 on page 36](#) for more information.

**Table 15: Air Deflector Kit Physical Specifications**

Description	Dimensions and Weights	
	Top and Bottom Plenums	Side Plenums
Width	26.16 in. (66.44 cm)	15.64 in. (39.72 cm)
Length	17.62 in. (44.75 cm)	19.9 in. (50.54 cm)
Height	3.5 in. (8.89 cm)	5.55 in. (14.09cm)
Weight	16.5 lb (7.45 kg)	10.6 lb (4.8 kg)

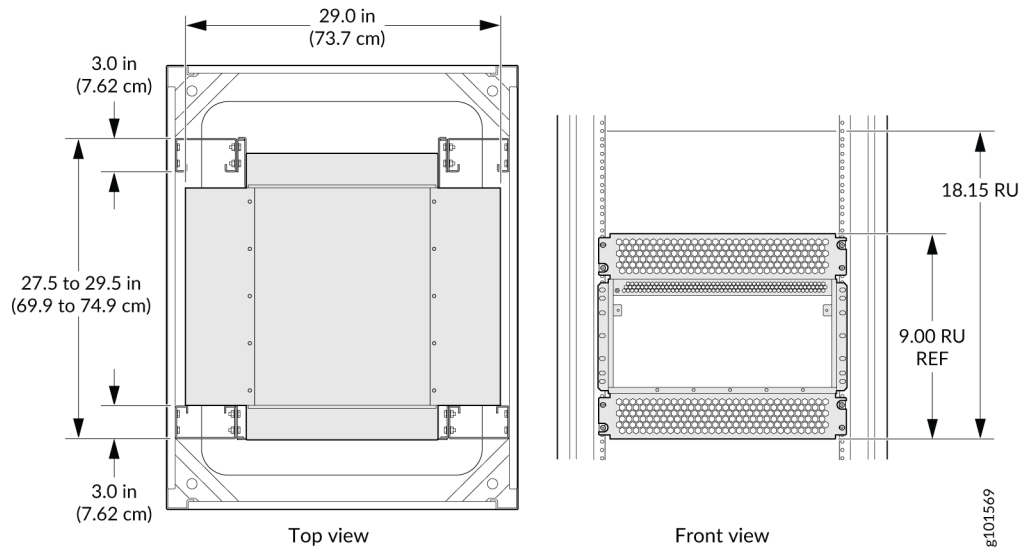**Figure 12: Rack Space Requirements****Table 16: Rack Space Requirements**


Description	Dimensions
Rack height	<p>9 RU (40 cm)</p> <p>This includes 2 RU (8.89 cm) of the top plenum, 5 RU (22.22 cm) of the router, and 2 RU (8.89 cm) of the bottom plenum.</p> <p>During this installation, we recommend that you allocate an optimum rack height of 18.15RU (80.68 cm) for ease of installation.</p>
Distance between the rear rack mounting surface and front rack mounting surface	27.5 in. (69.85 cm) to 29.5 in. (75.43 cm)
Minimum internal space required to install the side plenums (centered horizontally within the rack)	29 in. (73.66 cm)
Maximum depth of space behind the front and rear mounting surfaces	3 in. (7.62 cm)



**NOTE:** As per EIA Standards, the rack mounting surfaces must conform to 19 in. or 48.26 cm.

Figure 13 on page 37 shows the MX240 router installed in typical four-post mounting racks with the air deflector kit parts in place.

**Figure 13: MX240 Router Air Deflector Kit**

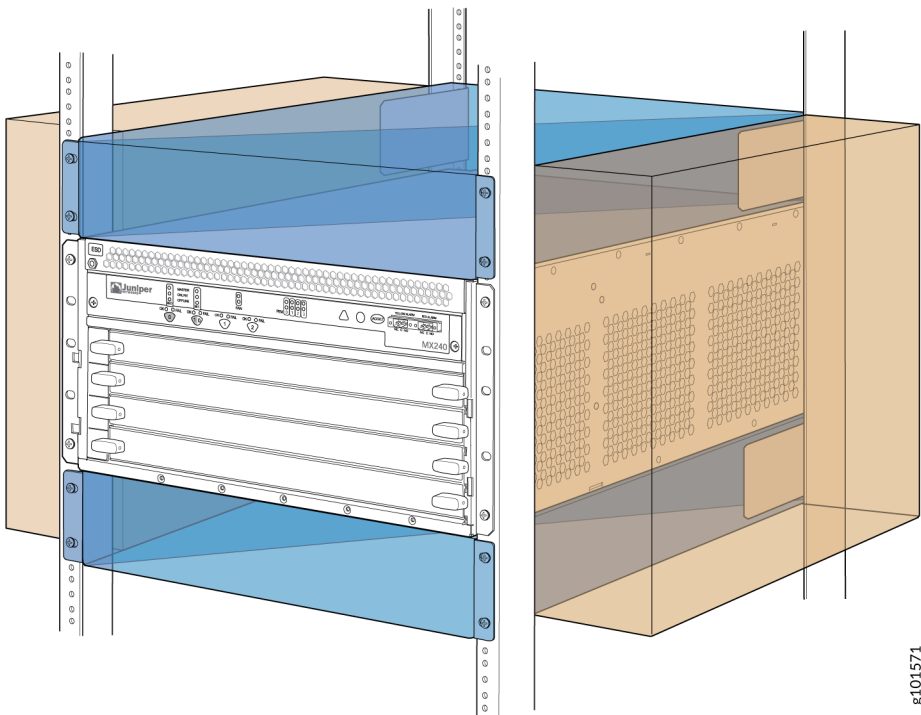

## RELATED DOCUMENTATION

MX240 Chassis | 17

# MX240 AC Power System

## IN THIS SECTION

- [MX240 Power System Description | 38](#)
- [MX240 AC Power Supply Description | 39](#)
- [MX240 AC Power Supply LEDs | 41](#)
- [AC Power Supply Electrical Specifications for the MX240 Router | 42](#)
- [AC Power Circuit Breaker Requirements for the MX240 Router | 44](#)
- [AC Power Cord Specifications for the MX240 Router | 45](#)
- [Errata with the MX240 Router Documentation | 47](#)

## MX240 Power System Description

The MX240 router uses either AC or DC power supplies. Each AC power supply provides power to all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply fails or is removed, the remaining power supply assumes the entire electrical load without interruption. One power supply can provide the maximum configuration with full power for as long as the router is operational.



**CAUTION:** The router cannot be powered from AC and DC power supplies simultaneously.

The MX240 router is configurable with two, three, or four AC power supplies or one or two DC power supplies. The power supplies connect to the midplane, which distributes the different output voltages produced by the power supplies to the router components, depending on their voltage requirements. Each power supply is cooled by its own internal cooling system.

Redundant power supplies are hot-removable and hot-insertable. When you remove a power supply from a router that uses a nonredundant power supply configuration, the router might shut down depending on your configuration.



**NOTE:** Routers configured with DC power supplies are shipped with a blank panel installed over the power distribution modules. Routers configured with AC power supplies have no blank panel.

## SEE ALSO

[Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies | 280](#)

[Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies | 283](#)

[Replacing an MX240 AC Normal-Capacity Power Supply | 427](#)

[MX240 Chassis Grounding Specifications | 54](#)

[Troubleshooting the MX240 Power System | 479](#)


## MX240 AC Power Supply Description

### IN THIS SECTION

- [AC Power Supply Configurations | 41](#)

Each AC power supply weighs approximately 5.0 lb (2.3 kg) and consists of one AC appliance inlet, one AC input switch, a fan, and LEDs to monitor the status of the power supply. [Figure 14 on page 40](#) shows the power supply. For existing power supplies, each inlet requires a dedicated AC power feed and a dedicated 15 A (250 VAC) circuit breaker.


Figure 14: AC Power Supply

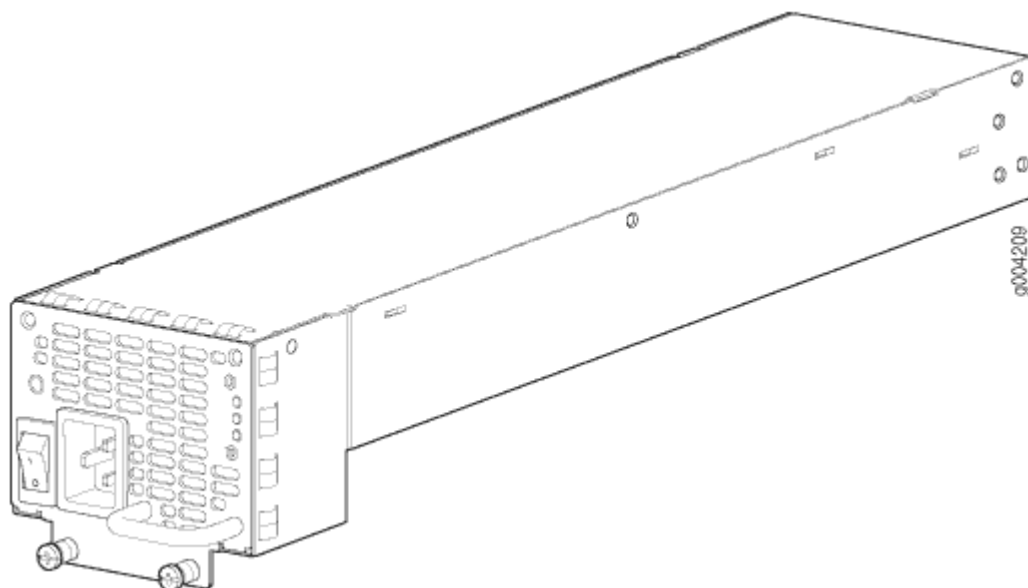

For high-capacity power supplies, each inlet requires a dedicated AC power feed and a dedicated 16.0 A @ 100 VAC or 11.0 A @ 200 VAC circuit breaker, or as required by local code.

Figure 15 on page 40 shows the high-capacity power supply.

Figure 15: High-Capacity AC Power Supply

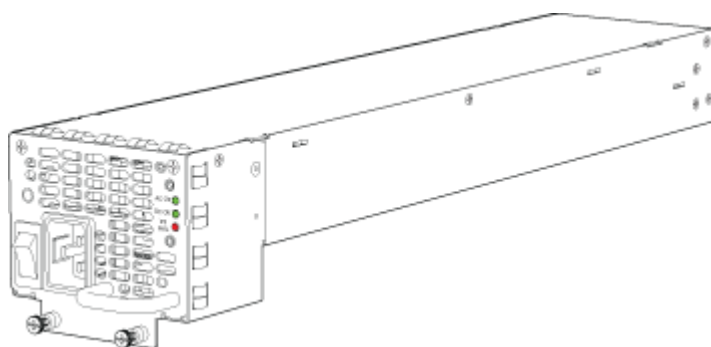

**WARNING:** The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for UNC 1/4-20 ground lugs) provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.



## AC Power Supply Configurations

The MX240 high-capacity and normal-capacity power supplies each support either of the following AC power configurations:

- In the low-line (110 V) AC power configuration, the MX240 router contains either two AC power supplies (nonredundant), located horizontally at the rear of the chassis in slots **PEM0** and **PEM1** (left to right); or four AC power supplies (redundant), located in slots **PEM0** through **PEM3** (left to right). The low-line configuration requires two power supplies, and the third and fourth power supplies provide redundancy. Each AC power supply provides power to all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply in a redundant configuration fails or is removed, the remaining power supplies assume the entire electrical load without interruption. Two power supplies provide the maximum configuration with full power for as long as the router is operational.
- In the high-line (220 V) AC power configuration, the MX240 router contains one or two AC power supplies, located horizontally at the rear of the chassis in slots **PEM0** and **PEM2** (left to right). The high-line configuration requires one power supply, with the second power supply providing redundancy. Each AC power supply provides power to all components in the router. When two power supplies are present, they share power almost equally within a fully populated system. If one power supply fails or is removed, the remaining power supply assumes the entire electrical load without interruption. One power supply can provide the maximum configuration with full power for as long as the router is operational.

### SEE ALSO

---

[Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies | 280](#)  
[MX240 Chassis Grounding Specifications | 54](#)

## MX240 AC Power Supply LEDs

Each AC power supply faceplate contains three LEDs that indicate the status of the power supply (see [Table 17 on page 42](#)). The power supply status is also reflected in two LEDs on the craft interface (see ["MX240 Component LEDs on the Craft Interface" on page 27](#)). In addition, a power supply failure triggers the red alarm LED on the craft interface.

**Table 17: AC Power Supply LEDs**

Label	Color	State	Description
<b>AC OK</b>	Yellow	Off	AC power input voltage is below 78 VAC.
	Green	On	AC power input voltage is within 78–264 VAC.
<b>DC OK</b>	Green	Off	DC power outputs generated by the power supply are not within the normal operating ranges.
		On	DC power outputs generated by the power supply are within the normal operating ranges.
<b>PS FAIL</b>	Red	Off	Power supply is functioning normally.
		On	Power supply is not functioning normally and its output voltage is out of regulation limits. Check <b>AC OK</b> and <b>DC OK</b> LEDs for more information.

**SEE ALSO**

[Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies | 280](#)  
[MX240 Chassis Grounding Specifications | 54](#)

## AC Power Supply Electrical Specifications for the MX240 Router

[Table 18 on page 42](#) lists the AC power supply electrical specifications; [Table 19 on page 44](#) lists the AC power system specifications.

**Table 18: AC Power Supply Electrical Specifications**

Item	Specification
<b>Normal-Capacity Power Supplies</b>	

Table 18: AC Power Supply Electrical Specifications *(Continued)*

Item	Specification
Maximum output power	1027 W (low line) 1590 W (high line)
AC input voltage	Operating range: 100–240 VAC (nominal)
AC input line frequency	50 to 60 Hz (nominal)
AC input current rating	11.0 A @ 200 VAC or 14.5 A @ 110 VAC maximum
Efficiency  <b>NOTE:</b> This value is at full load and nominal voltage.	85% (low line and high line)
<b>High-Capacity Power Supplies</b>	
Maximum output power	1167 W (low line) 2050 W (high line)
AC input voltage	Operating range: 100–240 VAC (nominal)
AC input line frequency	50 to 60 Hz (nominal)
AC input current rating	16 A @ 110 VAC maximum 15.1 A @ 200 VAC maximum
Efficiency  <b>NOTE:</b> This value is at full load and nominal voltage.	84% (low line) 89% (high line)

**Table 19: AC Power System Specifications**

Item	Normal-Capacity-Low Line	Normal-Capacity-High Line	High-Capacity-Low Line	High-Capacity-High Line
Redundancy	2+2	1+1	2+2	1+1
Output power (maximum) per power supply	1027 W	1590 W	1167 W	2050 W
Output power (maximum) per system	2054 W	1590 W	2334 W	2050 W

**SEE ALSO**
[Replacing an MX240 AC Normal-Capacity Power Supply | 427](#)
[Replacing an MX240 AC Power Supply Cord | 429](#)
[MX240 AC Power Electrical Safety Guidelines and Warnings](#)
[AC Power Circuit Breaker Requirements for the MX240 Router | 44](#)

## AC Power Circuit Breaker Requirements for the MX240 Router

We recommend that you use a dedicated customer site circuit breaker rated for 15 A (250 VAC) minimum for each AC power feed, or as required by local code. Doing so enables you to operate the router in any configuration without upgrading the power infrastructure.

**SEE ALSO**
[Replacing an MX240 AC Normal-Capacity Power Supply | 427](#)
[MX240 AC Power Electrical Safety Guidelines and Warnings](#)

## AC Power Cord Specifications for the MX240 Router

Each AC power supply has a single AC appliance inlet located on the power supply that requires a dedicated AC power feed. Most sites distribute power through a main conduit that leads to frame-mounted power distribution panels, one of which can be located at the top of the rack that houses the router. An AC power cord connects each power supply to the power distribution panel.

You can order detachable AC power cords, each approximately 8 ft (2.5 m) long that supply AC power to the router. The C19 appliance coupler end of the cord inserts into the AC appliance inlet coupler, type C20 (right angle) as described by International Electrotechnical Commission (IEC) standard 60320. The plug end of the power cord fits into the power source receptacle that is standard for your geographical location.

[Table 20 on page 45](#) provides specifications and [Figure 16 on page 46](#) depicts the plug on the AC power cord provided for each country or region.


**Table 20: AC Power Cord Specifications**

Country	Model Number	Electrical Specification	Plug Type
Australia	CBL-M-PWR-RA-AU	240 VAC, 50 Hz AC	SAA/3/15
China	CBL-M-PWR-RA-CH	220 VAC, 50 Hz AC	CH2-16P
Europe (except Denmark, Italy, Switzerland, and United Kingdom)	CBL-M-PWR-RA-EU	220 or 230 VAC, 50 Hz AC	CEE 7/7
Italy	CBL-M-PWR-RA-IT	230 VAC, 50 Hz AC	CEI 23-16/VII
Japan	CBL-PWR-RA-JP15	125 VAC, 50 or 60 Hz AC	JIS 8303
	CBL-M-PWR-RA-JP	220 VAC, 50 or 60 Hz AC	NEMA L6-20P
North America	CBL-PWR-RA-US15	125 VAC, 60 Hz AC	NEMA 5-15P
	CBL-PWR-RA-TWLK-US15	125 VAC, 60 Hz AC	NEMA L5-15P

Table 20: AC Power Cord Specifications (Continued)

Country	Model Number	Electrical Specification	Plug Type
	CBL-M-PWR-RA-US	250 VAC, 60 Hz AC	NEMA 6-20
	CBL-M-PWR-RA-TWLK-US	250 VAC, 60 Hz AC	NEMA L6-20P
United Kingdom	CBL-M-PWR-RA-UK	240 VAC, 50 Hz AC	BS89/13

Figure 16: AC Plug Types

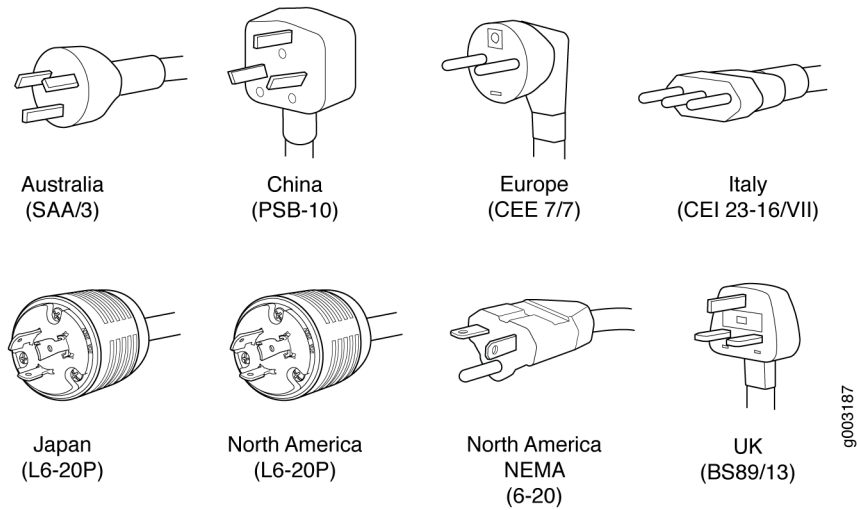

**WARNING:** The AC power cord for the router is intended for use with the router only and not for any other use.



**WARNING:**

注意

付属の電源コードセットはこの製品専用です。  
他の電気機器には使用しないでください。

g017583

Translation from Japanese: The attached power cable is only for this product. Do not use the cable for another product.



**NOTE:** In North America, AC power cords must not exceed 4.5 m (approximately 14.75 ft) in length, to comply with National Electrical Code (NEC) Sections 400-8 (NFPA 75, 5-2.2) and 210-52, and Canadian Electrical Code (CEC) Section 4-010(3). You can order AC power cords that are in compliance.



**WARNING:** The router is pluggable type A equipment installed in a restricted-access location. It has a separate protective earthing terminal (sized for UNC 1/4-20 ground lugs) provided on the chassis in addition to the grounding pin of the power supply cord. This separate protective earthing terminal must be permanently connected to earth.



**CAUTION:** Power cords and cables must not block access to device components or drape where people could trip on them.

## SEE ALSO

[Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies | 280](#)

[Replacing an MX240 AC Normal-Capacity Power Supply | 427](#)

[Replacing an MX240 AC Power Supply Cord | 429](#)

[MX240 AC Power Electrical Safety Guidelines and Warnings](#)

## Errata with the MX240 Router Documentation

This topic lists the outstanding issues with the documentation:

- In the low-line (110 V) AC power configuration (nonredundant), two AC power supplies should be located horizontally at the rear of the chassis in slots **PEM0** and **PEM1** (left to right).

## SEE ALSO

[Outstanding Issues with the MX240 Router | 60](#)

# MX240 DC Power System

## IN THIS SECTION

- [MX240 DC Power Supply Description | 48](#)
- [MX240 DC Power Supply LEDs | 50](#)
- [DC Power Supply Electrical Specifications for MX240 and MX480 | 51](#)
- [DC Power Circuit Breaker Requirements for the MX240 Router | 54](#)
- [MX240 Chassis Grounding Specifications | 54](#)
- [DC Power Source Cabling for the MX240 Router | 58](#)
- [DC Power Cable Specifications for the MX240 Router | 59](#)
- [Outstanding Issues with the MX240 Router | 60](#)

## MX240 DC Power Supply Description

### IN THIS SECTION

- [DC Power Supply Configurations | 49](#)

Each DC power supply weighs approximately 3.8 lb (1.7 kg) and consists of one DC input (–48 VDC and return), one 40 A (–48 VDC) circuit breaker, a fan, and LEDs to monitor the status of the power supply. Each DC power supply requires a dedicated customer site circuit breaker. For normal capacity power supplies, we recommend a dedicated circuit breaker rated for 40 A (–48 VDC) minimum, or as required by local code.

For high capacity power supplies, we recommend that you provision 60 A or 70 A per feed, depending on the selected DIP switch setting.

[Figure 17 on page 49](#) shows the normal capacity DC power supply.

[Figure 18 on page 49](#) shows the high-capacity DC power supply.



Figure 17: DC Power Supply


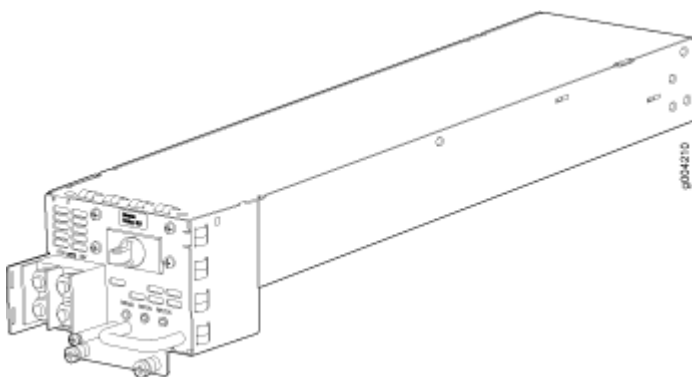


Figure 18: High-Capacity DC Power Supply

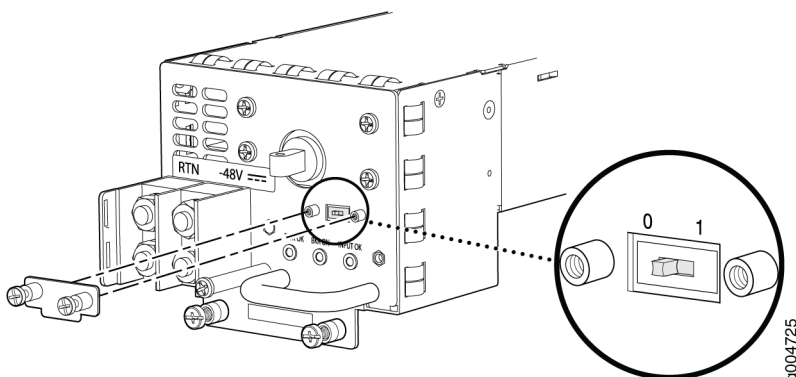

## DC Power Supply Configurations

In the DC power configuration, the router contains either one or two DC power supplies located at the rear of the chassis in slots **PEM0** and **PEM2** (left to right). You can upgrade your DC power system from one to two power supplies. A single DC power supply provides power to all components. A second DC power supply provides redundancy. If a DC power supply in a redundant configuration fails, the redundant power supply takes over without interruption.

High-capacity DC power supplies have a DIP switch that selects the power output.



**NOTE:** Move the input switch to 0 for 60 A input and position 1 for 70 A input.



**NOTE:** Do not set the input mode switch if the power supply is installed in the chassis. If the power supply is already installed, you must remove it before setting the input mode switch.

Table 21 on page 50 shows the components that are powered by each DC power supply slot. The specifications apply to normal capacity and high-capacity power supplies.

**Table 21: Power Supply Redundancy and Power Distribution**

DC Power Supply Slot	Power Supply Provides Power to the Following Components
PEM0	Fan tray, DPC slots 0, 1, and 2, and SCB slots 0 and 1
PEM2	Fan tray, DPC slots 0, 1, and 2, and SCB slots 0 and 1

SEE ALSO

- [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies | 283](#)
- [MX240 Chassis Grounding Specifications | 54](#)

## MX240 DC Power Supply LEDs

Each DC power supply faceplate contains three LEDs that indicate the status of the power supply (see Table 22 on page 51). The power supply status is also reflected in two LEDs on the craft interface (see "MX240 Component LEDs on the Craft Interface" on page 27).In addition, a power supply failure triggers the red alarm LED on the craft interface.



**NOTE:** An SCB must be present for the PWR OK LED to go on.

Table 22: DC Power Supply LEDs

Label	Color	State	Description
<b>PWR OK</b>	Green	Off	Power supply is not functioning normally. Check the <b>INPUT OK</b> LED for more information.
		On	Power supply is functioning normally.
	Yellow	On	The main output voltage is out of range (lower limit: 37.5 V to 39.5 V; upper limit: 72.5 V to 76 V).
<b>BRKR ON</b>	Green	Off	DC power supply circuit breaker is turned off.
		On	DC power input is present and the DC power supply circuit breaker is turned on.
<b>INPUT OK</b>	Green	Off	DC input to the PEM is not present.
		On	DC input is present and is connected in correct polarity.
	Yellow	On	DC input is present, but not in valid operating range or connected in reverse polarity.

## SEE ALSO

[MX240 Component LEDs on the Craft Interface | 27](#)
[Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies | 283](#)
[MX240 Chassis Grounding Specifications | 54](#)

## DC Power Supply Electrical Specifications for MX240 and MX480

Table 23 on page 52 lists the DC power supply electrical specifications. Table 24 on page 53 lists the DC power system specifications.

Table 23: Power Supply Electrical Specifications

Item	Specification	
Normal-Capacity Power Supplies		
Maximum output power	1600 W	
DC input current rating	33.3 A @ -48 V nominal operating voltage	
Maximum Input Current	40 A	
DC input voltage	Operating Range: -40.5 VDC to -72 VDC Nominal: -48 VDC	
Efficiency	~98%	
	NOTE: This value is at full load and nominal voltage.	
Maximum Inrush	The peak of inrush current caused by X-capacitors across input of the PEM shall not exceed 200A for less than 10mSecond. Measurement has to be done with Tektronix current probe and a scope with bandwidth 250MHz. The PEM also shall limit the I²t transient to 5A2S maximum at cold start. No damage shall occur to the PEM from repeated on/off/on cycles under hot or cold conditions.	
Internal Circuit Breaker	40 A	
High-Capacity Power Supplies		
Maximum Input Current	60 A (DIP=0)	70 A (DIP=1)
Maximum output power	2240 W	2440 W
DC input current rating	50 A @ -48 VDC normal operating voltage	54.2 A @ -48 VDC normal operating voltage

**Table 23: Power Supply Electrical Specifications (Continued)**

Item	Specification
DC input voltage	Operating Range: -40.5 VDC to -72 VDC Nominal: -48 VDC
Efficiency	~98%  <b>NOTE:</b> This value is at full load and nominal voltage.
Maximum Inrush	The peak of inrush current caused by X-capacitors across input of the PEM shall not exceed 200A for less than 10mSecond. Measurement has to be done with Tektronix current probe and a scope with bandwidth 250MHz. The PEM also shall limit the I <sup>2</sup> t transient to 5A2S maximum at cold start. No damage shall occur to the PEM from repeated on/off/on cycles under hot or cold conditions.

**Table 24: Power System Specifications**

Item	Normal-Capacity	High-Capacity	
Redundancy	2+2	1+1	
Output power (maximum) per supply	1600 W	60 A (DIP=0)	70 A (DIP=1)
		2240 W	2440 W
Output power (maximum) per system	3200 W	2240 W	2240 W

**SEE ALSO**

*Calculating Power Requirements for MX480 Routers*

## DC Power Circuit Breaker Requirements for the MX240 Router

Each DC power supply has a single DC input (–48 VDC and return) that requires a dedicated circuit breaker. We recommend that you use a dedicated customer site circuit breaker rated for 40 A (–48 VDC) minimum, or as required by local code. Doing so enables you to operate the router in any configuration without upgrading the power infrastructure.

For high-capacity power supplies, we recommend that you use a dedicated customer site circuit breaker rated for 60 A or 70A, or as required by local code, depending on the input switch setting.

If you plan to operate a DC-powered router at less than the maximum configuration and do not provision a 40 A (–48 VDC) circuit breaker, we recommend that you provision a dedicated customer site circuit breaker for each DC power supply rated for at least 125% of the continuous current that the system draws at –48 VDC.

### SEE ALSO

[Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies | 283](#)

[Replacing an MX240 DC Normal-Capacity Power Supply | 430](#)

[DC Power Disconnection Warning for M Series, MX Series, and T Series Routers](#)

[DC Power Source Cabling for the MX240 Router | 58](#)

[DC Power Cable Specifications for the MX240 Router | 59](#)

## MX240 Chassis Grounding Specifications

### IN THIS SECTION

- [MX240 Chassis Grounding Points Specifications | 54](#)
- [MX240 Router Grounding Cable Lug Specifications | 57](#)
- [MX240 Router Grounding Cable Specifications | 58](#)

### MX240 Chassis Grounding Points Specifications

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, the router must be adequately grounded before power is connected. To ground AC-powered and DC-

powered routers, you must connect a grounding cable to earth ground and then attach it to the chassis grounding points using the two screws provided.

Two threaded inserts (PEM nuts) are provided on the upper rear of the chassis for connecting the router to earth ground. The grounding points fit UNC 1/4–20 screws (American). The grounding points are spaced at 0.625-in. (15.86-mm) centers.

See [Figure 19 on page 56](#) for connecting AC power to the router and [Figure 20 on page 57](#) for connecting DC power to the router.



**NOTE:** Additional grounding is provided to an AC-powered router when you plug its power supplies into grounded AC power receptacles.

You must install the MX240 router in a restricted-access location and ensure that the chassis is always properly grounded. The MX240 router has a two-hole protective grounding terminal provided on the chassis. See [Figure 19 on page 56](#) and [Figure 20 on page 57](#). We recommend that you use this protective grounding terminal as the preferred method for grounding the chassis regardless of the power supply configuration. However, if additional grounding methods are available, you can also use those methods. For example, you can use the grounding wire in the AC power cord or use the grounding terminal or lug on a DC power supply. This tested system meets or exceeds all applicable EMC regulatory requirements with the two-hole protective grounding terminal.

Figure 19: Connecting AC Power to the Router


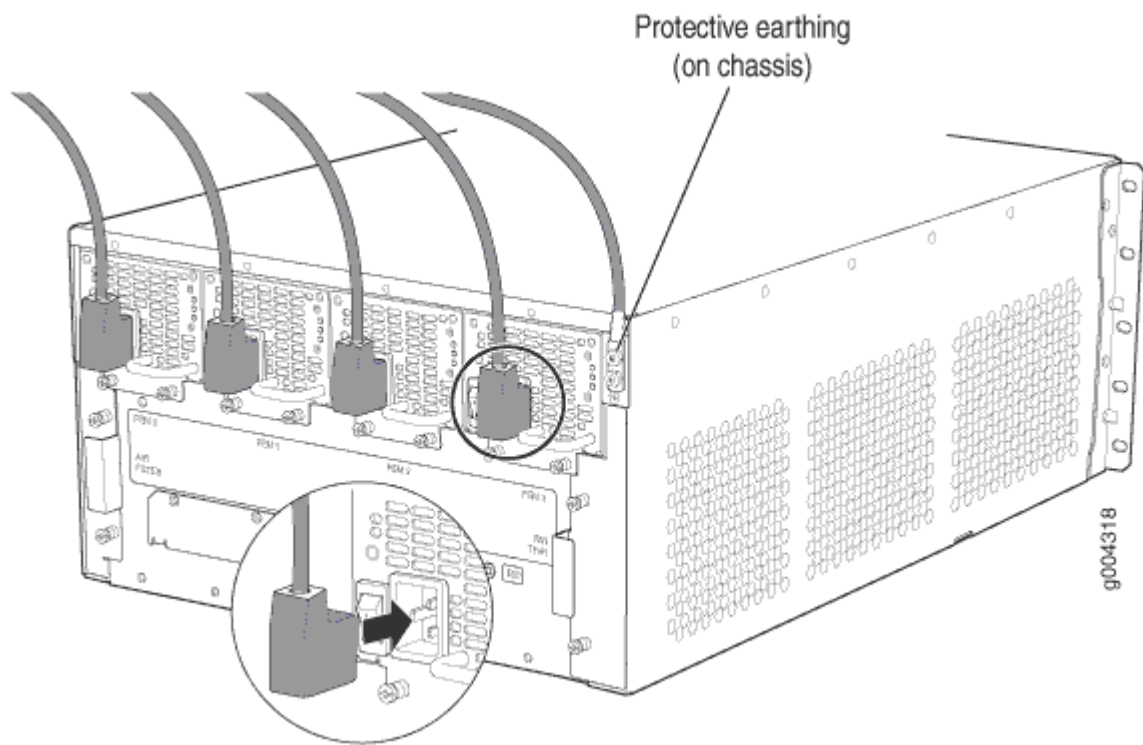





Figure 20: Connecting DC Power to the Router

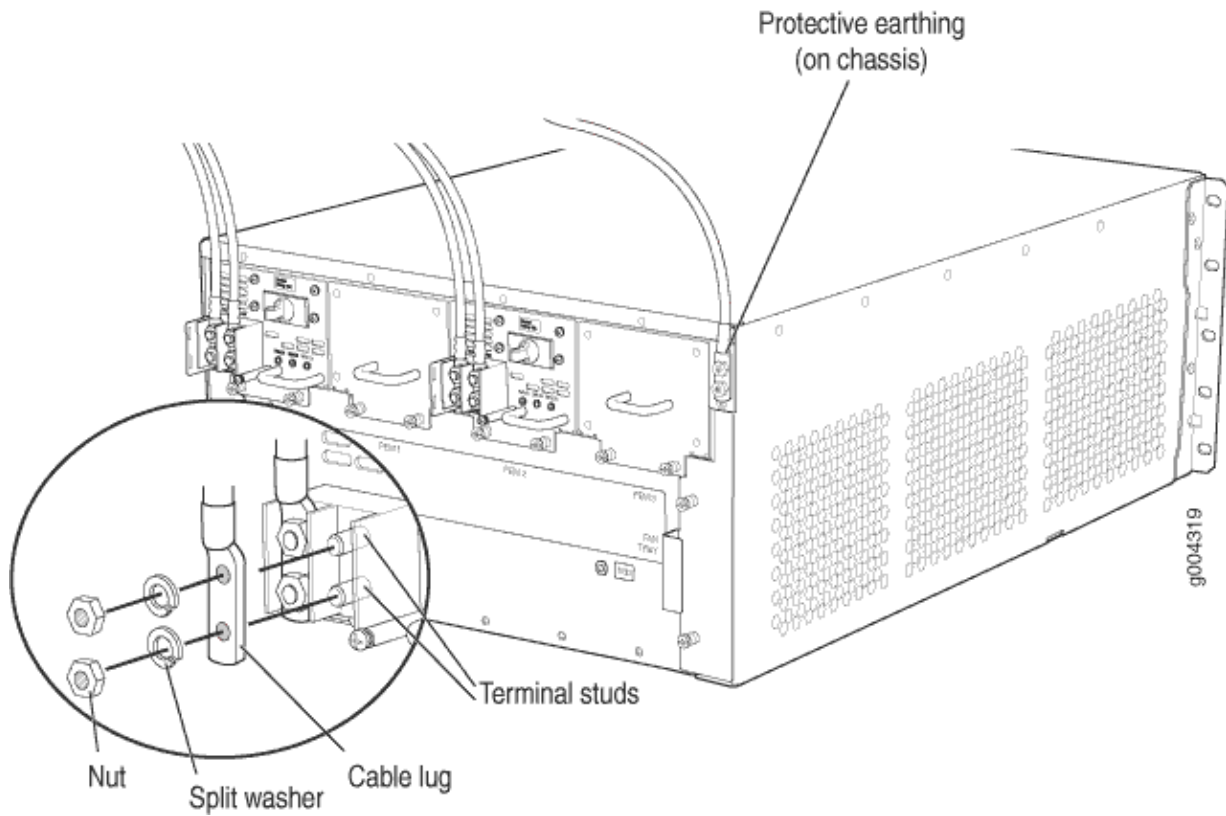

### MX240 Router Grounding Cable Lug Specifications

The accessory box shipped with the router includes one cable lug that attaches to the grounding cable (see [Figure 21 on page 57](#)) and two UNC 1/4-20 screws used to secure the grounding cable to the grounding points.

Figure 21: Grounding Cable Lug

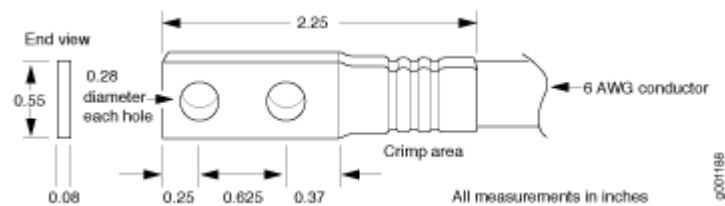



**CAUTION:** Before you install the router, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the router.



**NOTE:** The same cable lug is used for the DC power cables.

## MX240 Router Grounding Cable Specifications

You must provide one grounding cable that meets the following specifications: 6-AWG (13.3 mm<sup>2</sup>), minimum 60°C wire, or as required by the local code.

### SEE ALSO

[Tools and Parts Required for MX240 Router Grounding and Power Connections | 279](#)


[Grounding the MX240 Router | 279](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## DC Power Source Cabling for the MX240 Router

Figure 22 on page 58 shows a typical DC source cabling arrangement.

Figure 22: Typical DC Source Cabling to the Router

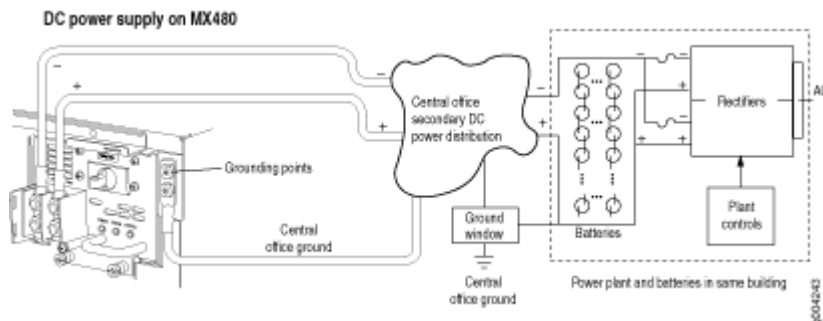

The DC power supply in **PEM0** must be powered by a dedicated power feed derived from feed **A**, and the DC power supply in **PEM2** must be powered by a dedicated power feed derived from feed **B**. This configuration provides the commonly deployed **A/B** feed redundancy for the system.



**CAUTION:** You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (–) to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.



**WARNING:** For field-wiring connections, use copper conductors only.



**CAUTION:** Power cords and cables must not block access to device components or drape where people could trip on them.

## SEE ALSO

[Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies | 283](#)

[Replacing an MX240 DC Power Supply Cable | 435](#)


[General Electrical Safety Guidelines and Electrical Codes for MX240 Routers](#)

[Site Electrical Wiring Guidelines for MX Series Routers | 542](#)

## DC Power Cable Specifications for the MX240 Router

**DC Power Cable Lug Specifications**—The accessory box shipped with the router includes the cable lugs that attach to the terminal studs of each power supply (see [Figure 23 on page 59](#)).

**Figure 23: DC Power Cable Lug**

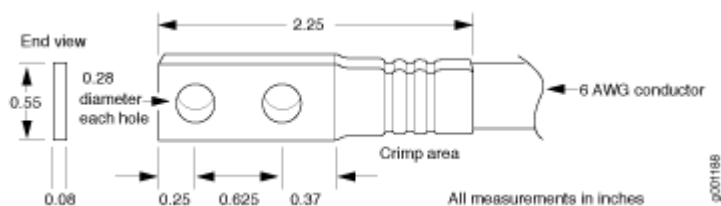



**CAUTION:** Before you install the router, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the router.



**NOTE:** The same cable lug is used for the grounding cable.

DC Power Cable Specifications—You must supply four DC power cables that meet the following specifications: 6-AWG (13.3 mm<sup>2</sup>), minimum 60° C wire, or as required by the local code.

## SEE ALSO

[Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies | 283](#)

[Replacing an MX240 DC Normal-Capacity Power Supply | 430](#)

[Connecting an MX240 DC Power Supply Cable | 288](#)

[Calculating Power Requirements for MX240 Routers | 230](#)

[DC Power Source Cabling for the MX240 Router | 58](#)

[Site Electrical Wiring Guidelines for MX Series Routers | 542](#)

## Outstanding Issues with the MX240 Router

This topic lists outstanding hardware issues with the MX240 router. For information about software issues, see the Junos OS Release Notes.

- On the MX240 DC high capacity power supplies, the input mode switch tells the system what capacity feed is connected (60A or 70A). This is used for power inventory management. When the input mode switch is set to '0' (zero): expect 60A feeds, with a voltage range of -39V to -72VDC. When the input mode switch is set to '1' (one), expect either a 70A feed or a 60A feed with minimum voltage of 42V and up. The default setting of the input mode is 1 (e.g. 60A with voltages above 42VDC, or 70A).

Known bug: In Junos OS Releases 10.0R3, 10.1R2, and 10.2R1, the MX240 DC high capacity power supply input mode switch status is not properly reflected in the power inventory management, generating alarms incorrectly. This does not have any effect on the operation of the supply. [PR532230]

Important notes:

- All supplies should have the same feed setting.
- Correct usage of the feed setting is required for all supplies in order to get the desired power inventory management.

The XFP cages and optics on the MX240 router are industry standard parts that have limited tactile feedback for insertion of optics and fiber. You need to insert the optics and fiber firmly until the latch is securely in place. [PR/98055]

- Do not mix AC and DC power supplies on an MX240 router. Mixing of AC supplies and DC supplies may damage your chassis. [PR/233340]

#### SEE ALSO

[Errata with the MX240 Router Documentation](#) | 47

## MX240 Host Subsystem Components and Descriptions

#### IN THIS SECTION

- [MX240 Host Subsystem Description](#) | 62
- [MX240 Host Subsystem LEDs](#) | 62
- [MX240 Midplane Description](#) | 62
- [MX240 Routing Engine Description](#) | 64
- [RE-S-1800 Routing Engine Description](#) | 68
- [RE-S-X6-64G Routing Engine Description](#) | 71
- [RE-S-X6-128G Routing Engine Description](#) | 73
- [RE-S-X6-128G-K Routing Engine Description](#) | 77
- [RE-S-X6-128G-LT Routing Engine Description](#) | 80
- [MX240 Routing Engine LEDs](#) | 84
- [RE-S-1800 Routing Engine LEDs](#) | 84
- [RE-S-X6-64G Routing Engine LEDs](#) | 85

- [Routing Engine Specifications | 87](#)
- [Supported Routing Engines by Router | 96](#)

## MX240 Host Subsystem Description

The host subsystem provides the routing and system management functions of the router. You can install one or two host subsystems on the router. Each host subsystem functions as a unit; the Routing Engine must be installed directly into the Switch Control Board.



**NOTE:** We recommend that you install two host subsystems for redundant protection. If you install only one host subsystem, we recommend that you install it in slot 0.

Each host subsystem has three LEDs that display its status. The host subsystem LEDs are located in the middle of the craft interface.

### SEE ALSO

[MX240 Component LEDs on the Craft Interface | 27](#)

[Maintaining the MX240 Host Subsystem | 319](#)

[Taking an MX240 Host Subsystem Offline](#)

## MX240 Host Subsystem LEDs

Each host subsystem has three LEDs that display its status. The host subsystem LEDs are located in the middle of the craft interface. For more information, see "[MX240 Component LEDs on the Craft Interface](#)" on page 27.

## MX240 Midplane Description


The midplane is located toward the rear of the chassis and forms the rear of the card cage (see [Figure 24 on page 63](#)). The line cards and SCBs install into the midplane from the front of the chassis, and the

power supplies install into the midplane from the rear of the chassis. The cooling system components also connect to the midplane.

The midplane performs the following major functions:

- Data path—Data packets are transferred across the midplane between the line cards through the fabric ASICs on the SCBs.
- Power distribution—The router power supplies connect to the midplane, which distributes power to all the router components.
- Signal path—The midplane provides the signal path to the line cards, SCBs, Routing Engines, and other system components for monitoring and control of the system.

**Figure 24: Midplane**

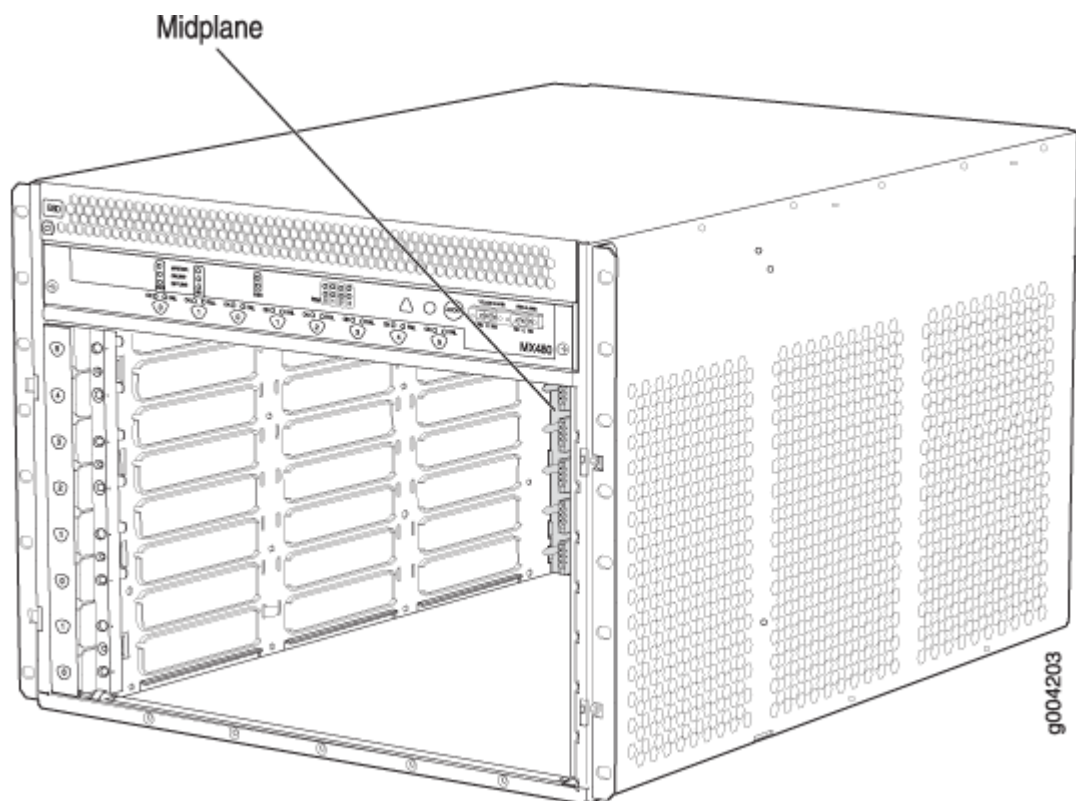

#### SEE ALSO

[MX240 System Overview | 14](#)

[MX240 Chassis Description | 18](#)

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[MX240 SCB-MX Description](#)

[MX240 Flexible PIC Concentrator \(FPC\) Description | 133](#)

[MX240 Power System Description | 38](#)

## MX240 Routing Engine Description

### IN THIS SECTION

- [RE-S-X6-64G and RE-S-X6-64G-LT Routing Engine Components | 66](#)
- [Routing Engine Interface Ports | 67](#)
- [RE-S-X6-64G and RE-S-X6-64G-LT Routing Engine Interface Ports | 67](#)
- [Routing Engine Boot Sequence | 68](#)

The Routing Engine is an Intel-based PC platform that runs Junos OS. Software processes that run on the Routing Engine maintain the routing tables, manage the routing protocols used on the router, control the router interfaces, control some chassis components, and provide the interface for system management and user access to the router.

You can install one or two Routing Engines in the router. The Routing Engines install into the front of the chassis in horizontal slots in the SCBs labeled **0** and **1/0**. Each Routing Engine must be installed directly into an SCB. A USB port on the Routing Engine accepts a USB memory card that allows you to load Junos OS.

If two Routing Engines are installed, one functions as the primary and the other acts as the backup. If the primary Routing Engine fails or is removed and the backup is configured appropriately, the backup takes over as the primary. The Backup Routing Engine is hot-insertable and hot-removable.

The MX240 router supports the RE-S-1300-2048, EE-S-2000-4096, RE-S-1800, RE-S-X6-64G, and RE-S-X6-64G-LT Routing Engines. See [Figure 25 on page 65](#), [Figure 26 on page 65](#), and [Figure 27 on page 65](#).



**NOTE:** If two Routing Engines are installed, they must both be the same hardware model.

The RE-S-X6-64G-LT Routing Engine is equipped with limited encryption support only.



Figure 25: RE-S-2000 Routing Engine

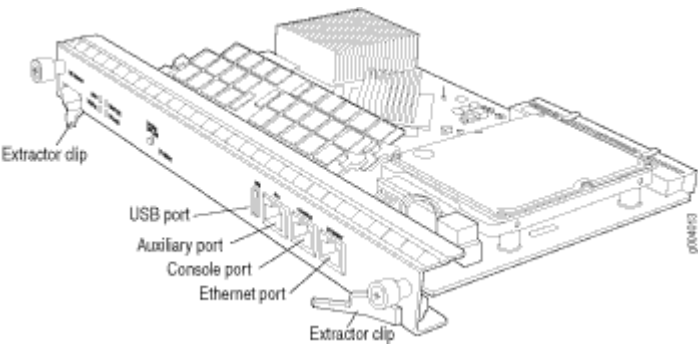


Figure 26: RE-S-1800


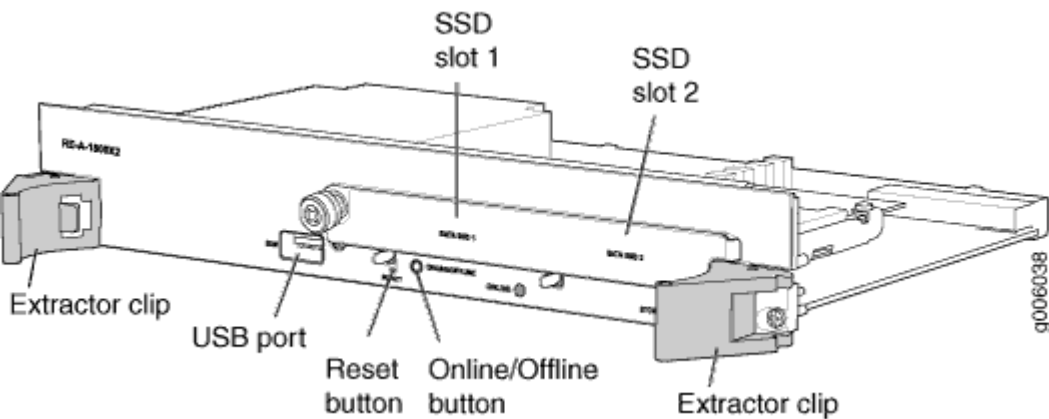



Figure 27: RE-S-X6-64G Routing Engine Front View

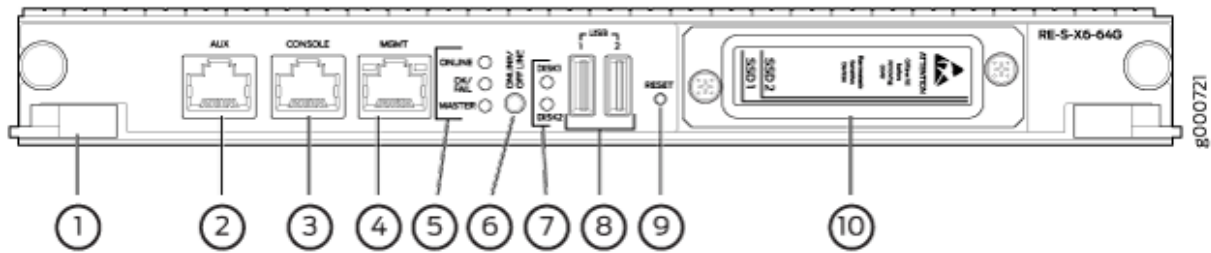

1– Extractor clips	6– <b>ONLINE/OFFLINE</b> Button
2– Auxiliary port ( <b>AUX</b> )	7– SSD LEDs— <b>DISK1</b> and <b>DISK2</b>
3– Console port ( <b>Con</b> )	8– Ports— <b>USB1</b> and <b>USB2</b>
4– Management port ( <b>MGMT</b> )	9– <b>RESET</b> Button

5– LEDs— <b>ONLINE</b> , <b>OK/FAIL</b> , and <b>MASTER</b>	10– SSD card slot cover
---	-------------------------

Figure 28: RE-S-X6-64G-LT Routing Engine Front View

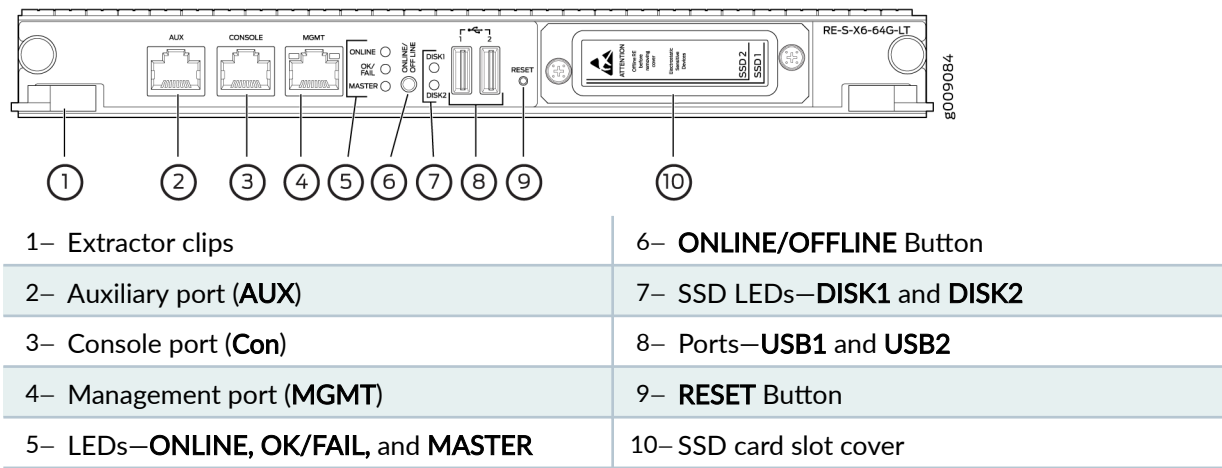

## RE-S-X6-64G and RE-S-X6-64G-LT Routing Engine Components

In MX240 routers with dual Routing Engines, both the Routing Engines must be RE-S-X6-64G Routing Engines.

Each RE-S-X6-64G Routing Engine (shown in [Figure 27 on page 65](#)) consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- One 10-Gigabit Ethernet interface between Routing Engine and Switch Control Board.
- Two 50 GB slim Solid State Drives—SSD1 (primary) and SSD2 (secondary)—Provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from primary SSD fails.
- Two USB ports (**USB1** and **USB2**)—Provide a removable media interface through which you can install Junos OS manually. The Junos OS supports USB versions 3.0, 2.0, and 1.1.
- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management

network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.

- **RESET** Button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** Button—Makes the Routing Engine online or offline when pressed.
- Extractor clips—Control the locking system that secures the Routing Engine.
- LEDs—["MX240 Routing Engine LEDs" on page 84](#) describes the functions of these LEDs.



**NOTE:** For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` command.

## Routing Engine Interface Ports

Three ports, located on the right side of the Routing Engine, connect the Routing Engine to one or more external devices on which system administrators can issue Junos OS command-line interface (CLI) commands to manage the router.

The ports with the indicated labels function as follows:

- **AUX**—Connects the Routing Engine to a laptop, modem, or other auxiliary device through a serial cable with an RJ-45 connector.
- **CONSOLE**—Connects the Routing Engine to a system console through a serial cable with an RJ-45 connector.
- **ETHERNET or MGMT**—Connects the Routing Engine through an Ethernet connection to a management LAN (or any other device that plugs into an Ethernet connection) for out-of-band management. The port uses an autosensing RJ-45 connector to support 10/100/1000-Mbps connections. Two small LEDs on the right of the port indicate the connection in use: The LED on the left indicates speed—green for 1000-Mbps, yellow for 100-Mbps and when the LED is dark, it indicates 10-Mbps speed. The LED on the right indicates activity—flashing green when packets are passing through the port.

## RE-S-X6-64G and RE-S-X6-64G-LT Routing Engine Interface Ports

Three ports, located on the left side of the Routing Engine, connect the Routing Engine to one or more external devices on which system administrators can issue Junos OS command-line interface (CLI) commands to manage the router.

The ports with the indicated labels function as follows:

- **AUX**—Connects the Routing Engine to a laptop, modem, or other auxiliary device through a serial cable with an RJ-45 connector.
- **CONSOLE**—Connects the Routing Engine to a system console through a serial cable with an RJ-45 connector.
- **MGMT**—Connects the Routing Engine through an Ethernet connection to a management LAN (or any other device that plugs into an Ethernet connection) for out-of-band management. The port uses an autosensing RJ-45 connector to support 10/100/1000-Mbps connections. Two small LEDs on the right of the port indicate the connection in use: The LED on the left indicates speed—green for 1000-Mbps, yellow for 100-Mbps and when the LED is dark, it indicates 10-Mbps speed. The LED on the right indicates activity—flashing green when packets are passing through the port.

## Routing Engine Boot Sequence

The Routing Engine boots from the storage media in this order: the USB device (if present), then the CompactFlash card, then the hard disk, then the LAN. The disk from which the router boots is called the *primary boot device*, and the other disk is the *alternate boot device*.



**NOTE:** If the router boots from an alternate boot device, a yellow alarm lights the LED on the router's craft interface.

Booting in a RE-S-X6-64G and in a RE-S-X6-64G-LT Routing Engine follows this sequence—the USB device, SSD1, SSD2, and LAN. SSD1 is the primary boot device. Boot sequence is tried twice for SSD1 and SSD2.

## SEE ALSO

[Replacing an MX240 Routing Engine | 323](#)

[Replacing an MX240 Routing Engine | 323](#)

[MX240 Routing Engine Serial Number Label | 499](#)

## RE-S-1800 Routing Engine Description


### IN THIS SECTION

[RE-S-1800 Routing Engine Components | 69](#)

- RE-S-1800 Routing Engine LEDs | 70
- RE-S-1800 Routing Engine Boot Sequence | 70

Figure 29 on page 69 shows RE-S-1800 routing engine.

Figure 29: RE-S-1800 Front View

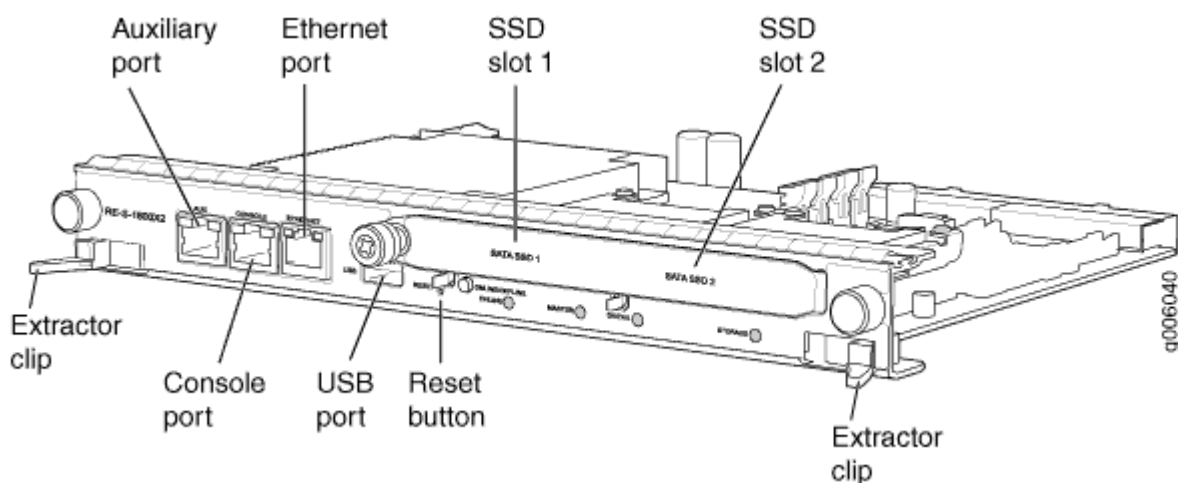


## RE-S-1800 Routing Engine Components

Each Routing Engine consists of the following components:

- CPU—Runs Junos OS to maintain the router's routing tables and routing protocols..
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- USB port—Provides a removable media interface through which you can install Junos OS manually. Junos OS supports USB version 1.0.
- CompactFlash card—Provides primary storage for software images, configuration files, and microcode. The CompactFlash card is fixed and is inaccessible from outside the router.
- Solid-state Drive (SSD)—Provides secondary storage for log files, memory dumps, and rebooting the system if the CompactFlash card fails.
- Interface ports—The **AUX**, **CONSOLE**, and **ETHERNET** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management

network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.

- **EEPROM**—Stores the serial number of the Routing Engine.
- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Takes the Routing Engine online or offline when pressed.
- **Extractor clips**—Used for inserting and extracting the Routing Engine.
- **Captive screws**—Secure the Routing Engine in place.



**NOTE:** For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show chassis routing-engine` command.

RE-S-1800 Routing Engine LEDs

Each Routing Engine has four LEDs that indicate its status. The LEDs, labeled **MASTER**, **STORAGE**, **ONLINE**, and **OK/FAIL**, are located directly on the faceplate of the Routing Engine. [Table 25 on page 70](#) describes the functions of the Routing Engine LEDs.

Table 25: Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the Primary.
STORAGE	Green	Blinking	Indicates activity on the SSD or Compact Flash.
ONLINE	Green	Blinking	Routing Engine is transitioning online.
		On steadily	Routing Engine is functioning normally.
OK/FAIL	Red	On steadily	Routing Engine has failed.

RE-S-1800 Routing Engine Boot Sequence

The router is shipped with Junos OS preinstalled on the Routing Engine. There are three copies of software:

- One copy on the CompactFlash card in the Routing Engine.
- One copy on the hard disk in the Routing Engine.
- One copy on a USB flash drive that can be inserted into the slot on the Routing Engine faceplate.



**NOTE:** The hardware device packages shipped after September 2025 may not include bootable USB flash drives. If your device package does not include a bootable USB flash drive, we recommend that you create a bootable USB flash drive following the instructions provided in [Best Practices for Upgrade/Downgrade from Bootable USB](#). You may obtain a USB flash drive from any commercial source. The USB flash drive must have:

- A minimum of 16 GB storage space
- No security features, such as a keyed boot partition

The Routing Engine boots from the storage media in this order: the USB device (if present), then the CompactFlash card, then the Solid State Disk (SSD), then the LAN. Normally, the router boots from the copy of the software on the CompactFlash card.

## SEE ALSO

*RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports*

*RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port*

*Replacing an MX960 Routing Engine*

[Supported Routing Engines by Router | 96](#)


## RE-S-X6-64G Routing Engine Description

### IN THIS SECTION

- [RE-S-X6-64G Routing Engine Components | 72](#)
- [RE-S-X6-64G Routing Engine Boot Sequence | 73](#)

[Figure 30 on page 72](#) shows the Routing Engine.

Figure 30: RE-S-X6-64G Routing Engine Front View

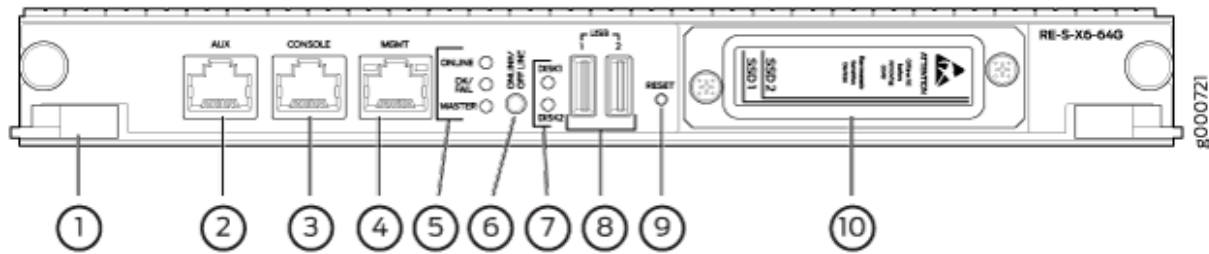

1– Extractor clips	6– <b>ONLINE/OFFLINE</b> button
2– Auxiliary port ( <b>AUX</b> )	7– SSD LEDs— <b>DISK1</b> and <b>DISK2</b>
3– Console port ( <b>CONSOLE</b> )	8– Ports— <b>USB1</b> and <b>USB2</b>
4– Management port ( <b>MGMT</b> )	9– <b>RESET</b> button
5– LEDs— <b>ONLINE</b> , <b>OK/FAIL</b> , and <b>MASTER</b>	10– SSD card slot cover

## RE-S-X6-64G Routing Engine Components

In routers with dual Routing Engines, both Routing Engines must be RE-S-X6-64G Routing Engines.

Each RE-S-X6-64G Routing Engine (shown in [Figure 30 on page 72](#)) consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- One 10-Gigabit Ethernet interface between the Routing Engine and Switch Control Board.
- Two 50-GB slim solid-state drives—**SSD1** (primary) and **SSD2** (secondary)—Provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from primary SSD fails.
- Two USB ports (**USB1** and **USB2**)—Provide a removable media interface through which you can install Junos OS manually. The Junos OS supports USB versions 3.0, 2.0, and 1.1.
- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.



- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Brings the Routing Engine online or takes it offline when pressed.



**NOTE:** The **ONLINE/OFFLINE** button must be pressed for a minimum of 4 seconds for the power off or power on to occur.

- Extractor clips—Control the locking system that secures the Routing Engine.
- LEDs—"RE-S-X6-64G Routing Engine LEDs" on page 85 describes the functions of these LEDs.



**NOTE:** For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` command.

## RE-S-X6-64G Routing Engine Boot Sequence

Booting in a RE-S-X6-64G Routing Engine follows this sequence—the USB device, SSD1, SSD2, LAN. SSD1 is the primary boot device. The boot sequence is tried twice for SSD1 and SSD2.

### SEE ALSO

[Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem | 337](#)

[Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem | 345](#)


## RE-S-X6-128G Routing Engine Description

### IN THIS SECTION

- [RE-S-X6-128G Routing Engine Components | 74](#)
- [RE-S-X6-128G Routing Engine LEDs | 75](#)
- [RE-S-X6-128G Routing Engine Boot Sequence | 76](#)

[Figure 31 on page 74](#) shows the Routing Engine.

**Figure 31: RE-S-X6-128G Routing Engine Front View**

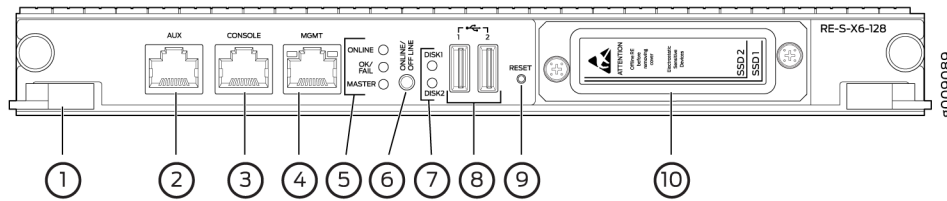

1– Extractor clips	6– <b>ONLINE/OFFLINE</b> button
2– Auxiliary port ( <b>AUX</b> )	7– SSD LEDs— <b>DISK1</b> and <b>DISK2</b>
3– Console port ( <b>CONSOLE</b> )	8– Ports— <b>USB1</b> and <b>USB2</b>
4– Management port ( <b>MGMT</b> )	9– <b>RESET</b> button
5– LEDs— <b>ONLINE</b> , <b>OK/FAIL</b> , and <b>MASTER</b>	10– SSD card slot cover

## RE-S-X6-128G Routing Engine Components

In routers with dual Routing Engines, both Routing Engines must be RE-S-X6-128G Routing Engines.

Each RE-S-X6-128G Routing Engine (shown in [Figure 31 on page 74](#)) consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.
- DRAM—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- One 10-Gigabit Ethernet interface between the Routing Engine and Switch Control Board.
- Two 200-GB slim solid-state drives—**SSD1** (primary) and **SSD2** (secondary)—Provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from primary SSD fails.
- Two USB ports (**USB1** and **USB2**)—Provide a removable media interface through which you can install Junos OS manually. The Junos OS supports USB versions 3.0, 2.0, and 1.1.
- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network, and two asynchronous serial ports—one for connecting to a console and one for connecting to a modem or other auxiliary device.
- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Brings the Routing Engine online or takes it offline when pressed.



**NOTE:** The **ONLINE/OFFLINE** button must be pressed for a minimum of 4 seconds for the power off or power on to occur.

- Extractor clips—Control the locking system that secures the Routing Engine.
- LEDs—[Table 26 on page 75](#) describes the functions of these LEDs.




**NOTE:** For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` command.

RE-S-X6-128G Routing Engine LEDs

Each Routing Engine has five LEDs that indicate its status. The LEDs—labeled **MASTER**, **DISK1**, **DISK2**, **ONLINE**, and **OK/FAIL**—are located on the faceplate of the Routing Engine. [Table 26 on page 75](#) describes the functions of the Routing Engine LEDs.

Figure 32: RE-S-X6-128G Routing Engine LEDs

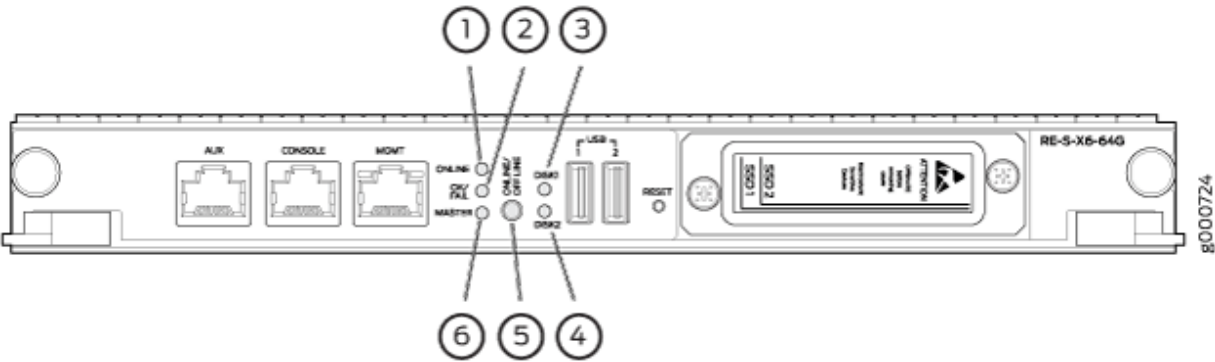

1– <b>ONLINE</b> LED	4– <b>DISK2</b> LED
2– <b>OK/FAIL</b> LED	5– <b>ONLINE/OFFLINE</b> button
3– <b>DISK1</b> LED	6– <b>MASTER</b> LED

Table 26: RE-S-X6-128G Routing Engine LEDs

Label	Color	State	Description
<b>ONLINE</b>	Green	Blinking slowly	Routing Engine is in the process of booting BIOS, and the host OS.

Table 26: RE-S-X6-128G Routing Engine LEDs *(Continued)*

Label	Color	State	Description
		Blinking rapidly	Routing Engine is in the process of booting Junos OS.
	-	Off	Routing Engine is not online or not functioning normally.
<b>DISK1</b>	Green	Blinking	Indicates presence of disk activity.
	-	Off	There is no disk activity.
<b>DISK2</b>	Green	Blinking	Indicates presence of disk activity.
	-	Off	There is no disk activity.
<b>OK/FAIL</b>	Green	On steadily	Routing Engine is powering up.
	Yellow	On steadily	Routing Engine is not powering up, which indicates failure.
<b>MASTER</b>	Blue	On steadily	This Routing Engine is the Primary Routing Engine.

## RE-S-X6-128G Routing Engine Boot Sequence

Booting in a RE-S-X6-128G Routing Engine follows this sequence—the USB device, SSD1, SSD2, LAN. SSD1 is the primary boot device. The boot sequence is tried twice for SSD1 and SSD2.

### SEE ALSO

[Supported Routing Engines by Router | 96](#)

[Routing Engine Specifications | 87](#)

## RE-S-X6-128G-K Routing Engine Description

### IN THIS SECTION


- [RE-S-X6-128G-K Routing Engine Components | 77](#)
- [RE-S-X6-128G-K Routing Engine LEDs | 79](#)
- [RE-S-X6-128G-K Routing Engine Boot Sequence | 80](#)

The RE-S-X6-128G-K is a Routing Engine integrated with Trusted Platform Module 2.0 (TPM 2.0). This Routing Engine is an upgrade to the RE-S-X6-128G-S. The key features of the RE-S-X6-128G-K include:

- Digital cryptographic identity (also called device ID or DevID) embedded in the TPM2.0. The DevID helps the device provide its authenticity to the phone-home, bootstrap, or redirect server.
- RFC 8572-based secure zero-touch provisioning (secure ZTP)

Figure 33 on page 77 shows the Routing Engine.

**Figure 33: RE-S-X6-128G-K Routing Engine Front View**

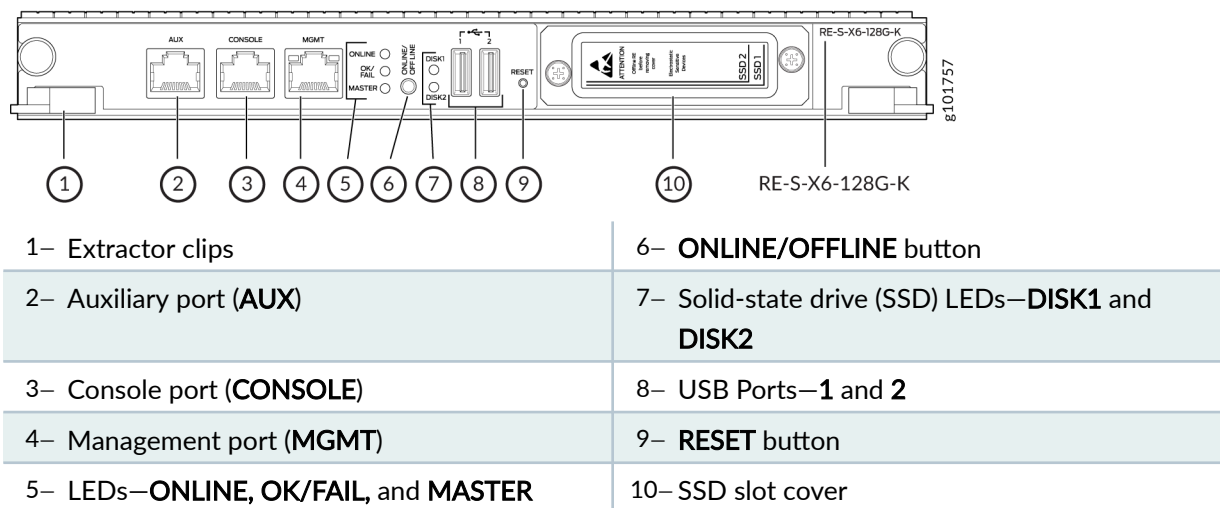

### RE-S-X6-128G-K Routing Engine Components

In routers with dual Routing Engines, you must install the RE-S-X6-128G-K in both Routing Engine slots.



**NOTE:** The RE-S-X6-128G-K Routing Engine must be used with either SCBE2-MX or SCBE3-MX.

Each RE-S-X6-128G-K Routing Engine consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.
- DRAM (128 GB)—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- One 10-Gigabit Ethernet (10GbE) interface between the Routing Engine and Switch Control Board (SCB).
- Two 200-GB slim SSDs—The **SSD1** (primary) and **SSD2** (secondary) solid-state drives provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from the primary SSD (SSD1) fails.
- Two USB ports (**1** and **2**)—Provide a removable media interface through which you can install Junos OS manually. Junos OS supports USB versions 3.0, 2.0, and 1.1.
- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** ports provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network. It also has two asynchronous serial ports—one for connecting to a console and another for connecting to a modem or other auxiliary device.
- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Brings the Routing Engine online or takes it offline when pressed.



**NOTE:** You must keep the **ONLINE/OFFLINE** button pressed for a minimum of 4 seconds for the device to power off or power on.

- Extractor clips—Control the locking system that secures the Routing Engine.
- LEDs—[Table 27 on page 79](#) describes the functions of the LEDs on the RE-S-X6-128G-K Routing Engine.




**NOTE:** For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` CLI command.

### RE-S-X6-128G-K Routing Engine LEDs

Each Routing Engine has five LEDs that indicate its status. You'll see the LEDs—labeled **ONLINE**, **OK/FAIL**, **DISK1**, **DISK2**, and **MASTER**— on the faceplate of the Routing Engine. [Table 27 on page 79](#) describes the functions of the Routing Engine LEDs.

Figure 34: RE-S-X6-128G-K Routing Engine LEDs

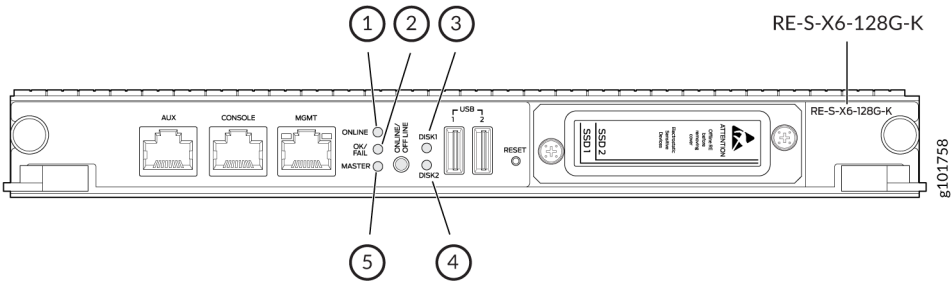

1– <b>ONLINE LED</b>	4– <b>DISK2 LED</b>
2– <b>OK/FAIL LED</b>	5– <b>MASTER LED</b>
3– <b>DISK1 LED</b>	

Table 27: RE-S-X6-128G-K Routing Engine LEDs

Label	Color	State	Description
<b>ONLINE</b>	Green	Blinking slowly	Routing Engine is in the process of booting BIOS and the host OS.
		Blinking rapidly	Routing Engine is in the process of booting Junos OS.
	–	Off	Routing Engine is not online or not functioning normally.
<b>DISK1</b>	Green	Blinking	Indicates presence of disk activity.
	–	Off	No disk activity.
<b>DISK2</b>	Green	Blinking	Indicates presence of disk activity.
	–	Off	No disk activity.

Table 27: RE-S-X6-128G-K Routing Engine LEDs *(Continued)*

Label	Color	State	Description
OK/FAIL	Green	On steadily	Routing Engine is powering on.
	Yellow	On steadily	Routing Engine is not powering on, which indicates failure.
MASTER	Blue	On steadily	This Routing Engine is the primary Routing Engine.

RE-S-X6-128G-K Routing Engine Boot Sequence

Booting in an RE-S-X6-128G-K Routing Engine follows this sequence—the USB device, SSD1, SSD2, LAN. SSD1 is the primary boot device. The Routing Engine tries the booting sequence twice for SSD1 and SSD2.

SEE ALSO

- Supported Routing Engines by Router | 96
- Routing Engine Specifications | 87

RE-S-X6-128G-LT Routing Engine Description

IN THIS SECTION

●

RE-S-X6-128G-LT Routing Engine Components | 81

●

RE-S-X6-128G-LT Routing Engine LEDs | 82

●


RE-S-X6-128G-LT Routing Engine Boot Sequence | 83

The RE-S-X6-128G-LT is an upgrade to the RE-S-X6-64G-LT.

Figure 35 on page 81 shows the Routing Engine.




Figure 35: RE-S-X6-128G-LT Routing Engine Front View

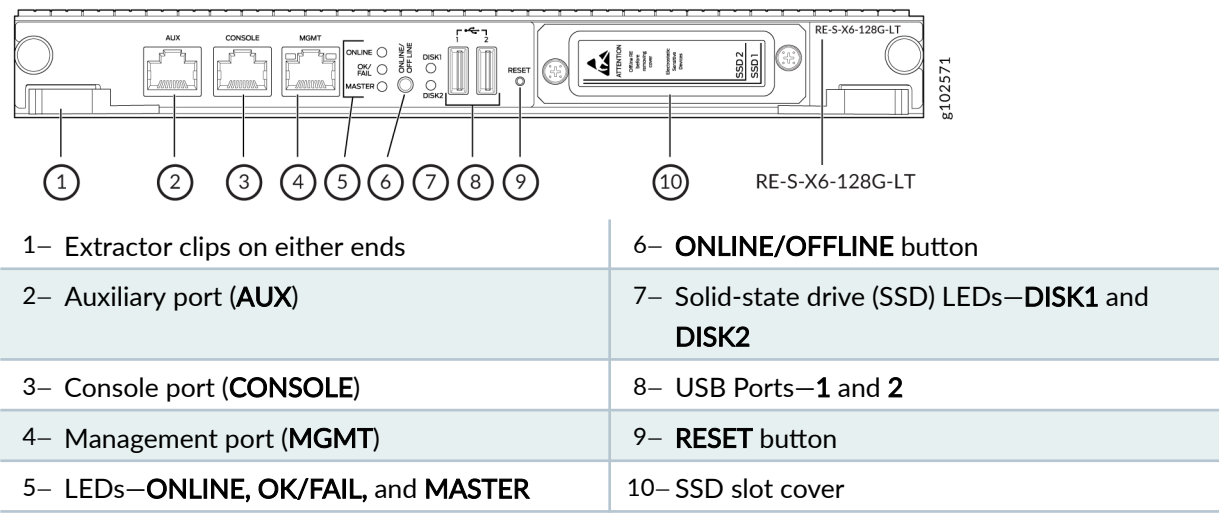

RE-S-X6-128G-LT Routing Engine Components

In routers with dual Routing Engines, you must install the RE-S-X6-128G-LT in both Routing Engine slots.



**NOTE:** The RE-S-X6-128G-LT Routing Engine must be used with either SCBE2-MX or SCBE3-MX.

Each RE-S-X6-128G-LT Routing Engine consists of the following components:

- CPU—Runs Junos OS to maintain the routing tables and routing protocols.
- EEPROM—Stores the serial number of the Routing Engine.
- DRAM (128 GB)—Provides storage for the routing and forwarding tables and for other Routing Engine processes.
- One 10-Gigabit Ethernet (10GbE) interface between the Routing Engine and Switch Control Board (SCB).
- Two 200-GB slim SSDs—The **SSD1** (primary) and **SSD2** (secondary) solid-state drives provide storage for software images, configuration files, microcode, log files, and memory dumps. The Routing Engine reboots from SSD2 when boot from the primary SSD (SSD1) fails.
- Two USB ports (**1** and **2**)—Provide a removable media interface through which you can install Junos OS manually. Junos OS supports USB versions 3.0, 2.0, and 1.1.

- Interface ports—The **AUX**, **CONSOLE**, and **MGMT** ports provide access to management devices. Each Routing Engine has one 10/100/1000-Mbps Ethernet port for connecting to a management network. It also has two asynchronous serial ports—one for connecting to a console and another for connecting to a modem or other auxiliary device.
- **RESET** button—Reboots the Routing Engine when pressed.
- **ONLINE/OFFLINE** button—Brings the Routing Engine online or takes it offline when pressed.

**NOTE:** You must keep the **ONLINE/OFFLINE** button pressed for a minimum of 4 seconds for the device to power off or power on.


- Extractor clips—Two clips at either end of the routing engine, controls the locking system that secures the Routing Engine.
- LEDs—[Figure 36 on page 82](#) describes the functions of the LEDs on the RE-S-X6-128G-LT Routing Engine.

**NOTE:** For specific information about Routing Engine components (for example, the amount of DRAM), issue the `show vmhost hardware` CLI command.

RE-S-X6-128G-LT Routing Engine LEDs

Each Routing Engine has five LEDs that indicate its status. You'll see the LEDs—labeled **ONLINE**, **OK/FAIL**, **DISK1**, **DISK2**, and **MASTER**—on the faceplate of the Routing Engine. [Figure 36 on page 82](#) describes the functions of the Routing Engine LEDs.

Figure 36: RE-S-X6-128G-LT Routing Engine LEDs

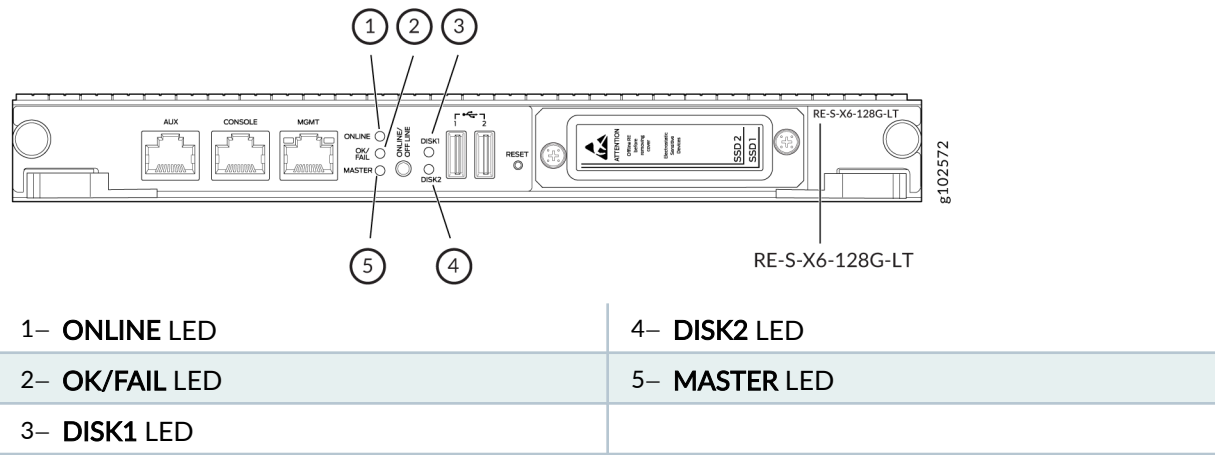

**Table 28: RE-S-X6-128G-LT Routing Engine LEDs**

Label	Color	State	Description
<b>ONLINE</b>	Green	Blinking slowly	Routing Engine is in the process of booting BIOS and the host OS.
		Blinking rapidly	Routing Engine is in the process of booting Junos OS.
	–	Off	Routing Engine is not online or not functioning normally.
<b>DISK1</b>	Green	Blinking	Indicates presence of disk activity.
	–	Off	No disk activity.
<b>DISK2</b>	Green	Blinking	Indicates presence of disk activity.
	–	Off	No disk activity.
<b>OK/FAIL</b>	Green	On steadily	Routing Engine is powering on.
	Yellow	On steadily	Routing Engine is not powering on, which indicates failure.
<b>MASTER</b>	Blue	On steadily	This Routing Engine is the primary Routing Engine.

## RE-S-X6-128G-LT Routing Engine Boot Sequence

Booting in an RE-S-X6-128G-LT Routing Engine follows this sequence—the USB device, SSD1, SSD2, LAN SSD1 is the primary boot device. The Routing Engine tries the booting sequence twice for SSD1 and SSD2.

### SEE ALSO

[Supported Routing Engines by Router | 96](#)

[Routing Engine Specifications | 87](#)

## MX240 Routing Engine LEDs

Each Routing Engine has four LEDs that indicate its status. The LEDs, labeled **MASTER**, **HDD**, **ONLINE**, and **FAIL**, are located directly on the faceplate of the Routing Engine. [Table 29 on page 84](#) describes the functions of the Routing Engine LEDs.

Table 29: Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the primary.
HDD	Green	Blinking	Indicates activity on the hard disk drive.
ONLINE	Green	Blinking	Routing Engine is transitioning online.
		On steadily	Routing Engine is functioning normally.
FAIL	Red	On steadily	Routing Engine has failed.

SEE ALSO

Replacing an MX240 Routing Engine | 323

## RE-S-1800 Routing Engine LEDs

Each Routing Engine has four LEDs that indicate its status. The LEDs, labeled **MASTER**, **STORAGE**, **ONLINE**, and **OK/FAIL**, are located directly on the faceplate of the Routing Engine. [Table 30 on page 85](#) describes the functions of the Routing Engine LEDs.

Table 30: Routing Engine LEDs

Label	Color	State	Description
MASTER	Blue	On steadily	Routing Engine is the Primary.
STORAGE	Green	Blinking	Indicates activity on the SSD or Compact Flash.
ONLINE	Green	Blinking	Routing Engine is transitioning online.
		On steadily	Routing Engine is functioning normally.
OK/FAIL	Red	On steadily	Routing Engine has failed.


SEE ALSO

<a href="#">MX240 Routing Engine Description   64</a>
<i>MX480 Routing Engine Description</i>
<i>MX960 Routing Engine Description</i>

RE-S-X6-64G Routing Engine LEDs

Each Routing Engine has five LEDs that indicate its status. The LEDs—labeled **MASTER**, **DISK1**, **DISK2**, **ONLINE**, and **OK/FAIL**—are located on the faceplate of the Routing Engine. [Table 31 on page 86](#) describes the functions of the Routing Engine LEDs.

Figure 37: RE-S-X6-64G Routing Engine LEDs

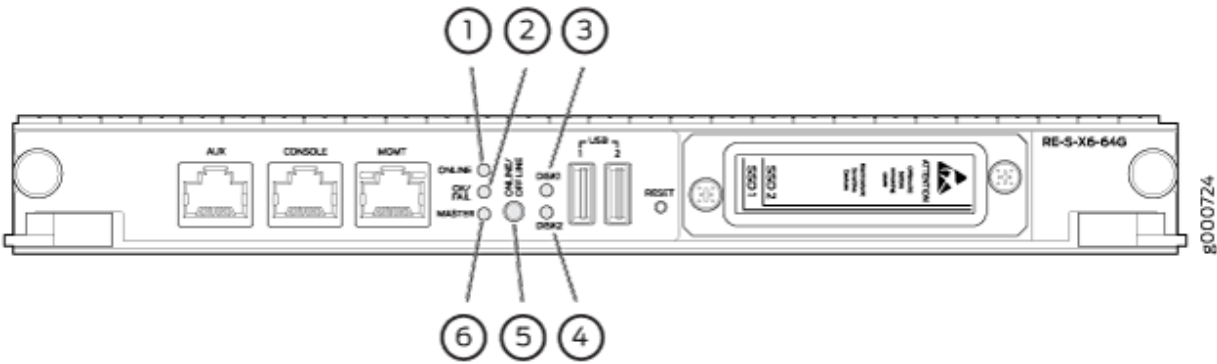

1– <b>ONLINE LED</b>	4– <b>DISK2 LED</b>
2– <b>OK/FAIL LED</b>	5– <b>ONLINE/OFFLINE button</b>
3– <b>DISK1 LED</b>	6– <b>MASTER LED</b>

Table 31: RE-S-X6-64G Routing Engine LEDs

Label	Color	State	Description
<b>ONLINE</b>	Green	Blinking slowly	Routing Engine is in the process of booting BIOS, and the host OS.
		Blinking rapidly	Routing Engine is in the process of booting Junos OS.
	-	Off	Routing Engine is not online or not functioning normally.
	Green	On steadily	Routing Engine has booted both JunOS and host OS.
<b>DISK1</b>	Green	Blinking	Indicates presence of disk activity.
	-	Off	There is no disk activity.
<b>DISK2</b>	Green	Blinking	Indicates presence of disk activity.
	-	Off	There is no disk activity.

Table 31: RE-S-X6-64G Routing Engine LEDs *(Continued)*


Label	Color	State	Description
OK/FAIL	Yellow	On steadily	Routing Engine is not powering up, which indicates failure.
MASTER	Blue	On steadily	This Routing Engine is the Primary Routing Engine.
	-	Off	This Routing Engine is the backup Routing Engine, if the <b>ONLINE</b> LED is solid green.

SEE ALSO

<a href="#">MX240 Routing Engine Description   64</a>
<i>MX960 Routing Engine Description</i>

Routing Engine Specifications

[Table 32 on page 88](#) lists the current specifications for Routing Engines supported on M Series, MX Series, and T Series routers. [Table 33 on page 93](#) lists the hardware specifications of the Routing Engines with VMHost support. [Table 34 on page 95](#) lists the specifications for end-of-life Routing Engines.



**NOTE:** For a list of the routing engines that are supported on the M Series, MX Series, T Series, and PTX routers, see ["Supported Routing Engines by Router" on page 96](#).

**Table 32: Routing Engine Specifications**

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-400-768	400-MHz Celeron	768 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	9.0	–
RE-A-1000-2048	1.0-GHz Pentium	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.1	–
RE-A-2000-4096	2.0-GHz Pentium	4096 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.1	–
RE-S-1300-2048	1.3-GHz Pentium	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.2	SCB, SCBE
RE-S-2000-4096	2.0-GHz Pentium	4096 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	8.2	SCB, SCBE
RE-C1800	1.8-GHz	8 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	T1600 router in a routing matrix: 9.6R2  Standalone T640 or T1600 router: 11.2	CB-T for a standalone router.  CB-LCC for a router in a routing matrix.



Table 32: Routing Engine Specifications *(Continued)*

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
	1.8 Ghz	16 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	32-bit Junos OS on a standalone T1600 router: 11.4R2 32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2  64-bit Junos OS on a standalone T1600 router: 11.4R2 64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	CB-T for a standalone router.  CB-LCC for a router in a routing matrix.
RE-C2600	2.6-GHz	16 GB	Gigabit Ethernet	SSD	4 GB CompactFlash card	TX Matrix Plus router: 9.6R2	–
RE-A-1800x2	1800-MHz	8 GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	–

Table 32: Routing Engine Specifications *(Continued)*

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-S-1800x2	1800-MHz	8 GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	SCB, SCBE, SCBE2, SCBE3
RE-S-1800x4	1800-MHz	8GB or 16 GB	Gigabit Ethernet	32 GB SSD	4 GB CompactFlash card	10.4	SCB, SCBE, SCBE2, SCBE3
RE-S-MX104	1.8-GHz	4 GB	Gigabit Ethernet	–	8 GB NAND Flash	13.2	–
RE-B-1800x1-4G	1.73-GHz	4 GB	Gigabit Ethernet	64 GB SSD	4 GB CompactFlash card	12.1R2, 11.4R4, and 12.2R1	–
RE-MX2000-1800x4	1.8- GHz	16 GB	Gigabit Ethernet	32 GB SSD	4 GB Fixed Internal CompactFlash card	12.3R2	SFB
RE-S-1800X4-32G-S	1.8- Ghz	32 GB	Gigabit Ethernet	32 GB SSD	4 GB Fixed Internal CompactFlash card	<ul style="list-style-type: none"> <li>• 12.3R4</li> <li>• 13.2R1</li> </ul>	SCB, SCBE, SCBE2, SCBE3
REMX2K-1800-32G-S	1.8- Ghz	32 GB	Gigabit Ethernet	32 GB SSD	4GB Fixed Internal CompactFlash card	<ul style="list-style-type: none"> <li>• 12.3R4</li> <li>• 13.2R1</li> </ul>	–

Table 32: Routing Engine Specifications *(Continued)*

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-S-X6-64G, RE-S-X6-64G-LT	2 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	<ul style="list-style-type: none"> <li>15.1F4 and 16.1 (RE-S-X6-64G)</li> <li>17.2R1 (RE-S-X6-64G-LT)</li> </ul>	SCBE2, SCBE3
REMX2K-X8-64G	2 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	15.1F5-S1, 16.1R2, and 16.2R1	-
REMX2K-X8-64G-LT	2 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	17.2R1	-
REMX2008-X8-64G	2.3 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	15.1F7	-
RE-S-1600x8	1.6 Ghz	64 GB	Gigabit Ethernet	Two 50-GB SSDs	-	17.3R1	-
REMX2008-X8-64G-LT	2.1 Ghz	64 GB	Gigabit Ethernet	Two 100-GB SSDs	-	17.2R1	-
REMX2008-X8-128G	2.3 Ghz	128 GB	Gigabit Ethernet	Two 200-GB SSDs	-	18.2R1	-

Table 32: Routing Engine Specifications *(Continued)*

Routing Engine	Processor	Memory	Connection to PFEs	Disk	Media	First Junos OS Support	Switch Control Board
RE-S-X6-128G	2.0 Ghz	128 GB	Gigabit Ethernet	Two 200-GB SSDs	-	18.1R1 (SCBE2) 18.4R1 (SCBE3)	SCBE2, SCBE3
RE-S-X6-128G-K	2.0 Ghz	128 GB	Gigabit Ethernet	Two 200-GB SSDs	-	22.2R1S2	SCBE2, SCBE3
REMX2K-X8-128G	REMX2K-X8-128G	128 GB	Gigabit Ethernet	Two 200-GB SSDs	-	18.1R1	-
JNP10003-RE1	1.6-GHz	64 GB	Gigabit Ethernet	Two 100 GB SSDs	-	17.3R1	-
JNP10003-RE1-LT	1.6-GHz	64 GB	Gigabit Ethernet	Two 100 GB SSDs	-	18.1R1	-
JNP10K-RE0	2.5 GhZ	32 GB	Gigabit Ethernet	Two 50 GB SSDs	-	17.2R1	-
JNP10K-RE1	2.3 GhZ	64 GB	Gigabit Ethernet	Two 200 GB SSDs	-	18.2R1	-
JNP10K-RE1-LT	2.3 GhZ	64 GB	Gigabit Ethernet	Two 200 GB SSDs	-	18.3R1	-
JNP10K-RE1-128	2.3 GhZ	128 GB	Gigabit Ethernet	Two 200 GB SSDs	-	18.3R1	-



**NOTE:** Use **shielded** CAT5e, CAT6, or CAT7 cables for connecting the **AUX**, **CONSOLE**, and **MGMT** ports in RE-S-X6-64G, REMX2K-X8-64G, and REMX2008-X8-64G Routing Engines.

Table 33 on page 93 lists the hardware specifications of the Routing Engines with VMHost support.

**Table 33: Hardware Specifications of the RE-MX-X6, RE-MX-X8, RE-PTX-X8, RCBPTX, RE-QFX10002-60C, and RE-PTX10002-60C Routing Engines**

Model Number	Supported on Device	Specifications
RE-S-X6-64G	MX240, MX480, and MX960	<ul style="list-style-type: none"> <li>6-core Haswell CPU</li> <li>Wellsburg PCH-based Routing Engine with 64-GB DRAM and two 50-GB solid-state drives (SSDs)</li> </ul>
RE-S-X6-128G	MX240, MX480, and MX960	<ul style="list-style-type: none"> <li>6-core Haswell CPU</li> <li>Wellsburg PCH-based Routing Engine with 128-GB DRAM and two 200-GB solid-state drives (SSDs)</li> </ul>
REMX2K-X8-64G	MX2020 and MX2010	<ul style="list-style-type: none"> <li>8-core Haswell CPU</li> <li>Wellsburg PCH-based Routing Engine with 64-GB DRAM and two 100-GB SSDs</li> </ul>
RE-PTX-X8-64G	PTX5000	<ul style="list-style-type: none"> <li>8-core Haswell CPU</li> <li>Wellsburg PCH-based Routing Engine with 64-GB DRAM and two 50-GB SSDs</li> <li>New Control Board CB2-PTX</li> </ul>
RCB-PTX-X6-32G	PTX3000	<ul style="list-style-type: none"> <li>Wellsburg PCH-based Routing Engine with 64-GB DRAM and two 100-GB SSDs</li> <li>Multi-core Haswell CPU</li> </ul> <p>RCB combines the functionality of a Routing Engine, Control Board, and Centralized Clock Generator (CCG)</p>

**Table 33: Hardware Specifications of the RE-MX-X6, RE-MX-X8, RE-PTX-X8, RCBPTX, RE-QFX10002-60C, and RE-PTX10002-60C Routing Engines (Continued)**

Model Number	Supported on Device	Specifications
RE-S-1600x8	MX10003	<ul style="list-style-type: none"> <li>• High-performance 1.6-GHz Intel 8 Core X86 CPU</li> <li>• 64-GB DDR4 RAM</li> <li>• 100-GB SATA SSD</li> </ul>
RE-S-1600x8	MX204	<ul style="list-style-type: none"> <li>• High-performance 1.6-GHz Intel 8 Core X86 CPU</li> <li>• 32-GB DDR4 RAM</li> <li>• 100-GB SATA SSD</li> </ul>
JNP304-RE-S	MX304	<ul style="list-style-type: none"> <li>• 8-core, Intel Icelake Based Multicore Processor CPU</li> <li>• 128-GB of DRAM</li> <li>• Two 200-GB SATA SSD</li> </ul>
RE-QFX10002-60C	QFX10002-60C	<ul style="list-style-type: none"> <li>• High-performance 1.6-GHz Intel 8 Core X86 CPU</li> <li>• 32-GB DDR4 RAM</li> <li>• Two 50-GB SATA SSD</li> </ul>
RE-PTX10002-60C	PTX10002-60C	<ul style="list-style-type: none"> <li>• High-performance 1.6-GHz Intel 8 Core X86 CPU</li> <li>• 32-GB DDR4 RAM</li> <li>• Two 50-GB SATA SSD</li> </ul>
RE-ACX-5448	ACX5448	<ul style="list-style-type: none"> <li>• High-performance 1.6-GHz Intel 8 Core X86 CPU</li> <li>• 32-GB two DIMM DRAM</li> <li>• Two 100-GB SATA SSD</li> </ul>

**Table 33: Hardware Specifications of the RE-MX-X6, RE-MX-X8, RE-PTX-X8, RCBPTX, RE-QFX10002-60C, and RE-PTX10002-60C Routing Engines (Continued)**

Model Number	Supported on Device	Specifications
RE-X10	MX10008	<ul style="list-style-type: none"> <li>High-performance 1.6-GHz Intel 10 Core X86 CPU</li> <li>64-GB DDR4 RAM</li> <li>Two 200-GB SATA SSD</li> </ul>

**Table 34: End-of-Life Routing Engine Specifications**

Routing Engine	Processor	Memory	Connecti on to PFEs	Disk	Media	First Junos OS Support	EOL Details
RE-333-256	333-MHz Pentium II	256 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.4	<a href="#">PSN-2003-01-063</a>
RE-333-768	333-MHz Pentium II	768 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.4	<a href="#">PSN-2003-01-063</a>
RE-600-512	600-MHz Pentium III	512 MB	Fast Ethernet	30 GB hard disk	256 MB CompactFlash card	5.4	<a href="#">PSN-2004-07-019</a>
RE-600-2048	600-MHz Pentium III	2048 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	5.3	<a href="#">PSN-2008-02-018</a>
RE-850-1536	850-MHz Pentium III	1536 MB	Fast Ethernet	40 GB hard disk	1 GB CompactFlash card	7.2	<a href="#">PSN-2011-04-226</a>
RE-M40	200-MHz Pentium	256 MB	Fast Ethernet	6.4 GB hard disk	80 MB CompactFlash card	3.2	<a href="#">FA-HW-0101-001</a>

Table 34: End-of-Life Routing Engine Specifications *(Continued)*

Routing Engine	Processor	Memory	Connecti on to PFEs	Disk	Media	First Junos OS Support	EOL Details
RE-M40-333-768	333-MHz Pentium II	768 MB	Fast Ethernet	10 GB hard disk	80 MB CompactFlash card	4.2	<a href="#">PSN-2003-01-063</a>
RE-M40-600-2048	600-MHz Pentium III	2048 MB	Fast Ethernet	30 GB hard disk	128 MB CompactFlash card	5.4	<a href="#">PSN-2004-11-020</a>
RE-1600-2048	1.6-GHz Pentium M	2048 MB	Gigabit Ethernet	40 GB hard disk	1 GB CompactFlash card	6.2	<a href="#">PSN-2008-02-019</a>



**NOTE:** The memory in [Table 32 on page 88](#) indicates the amount of total memory. To determine the amount of available memory, issue the `show chassis routing-engine` CLI command.

On routers that accept two Routing Engines, you cannot mix Routing Engine types except for a brief period (one minute or so) during an upgrade or downgrade to two Routing Engines of the same type.

## SEE ALSO

[Supported Routing Engines by Router | 96](#)

## Supported Routing Engines by Router

### IN THIS SECTION

- [M7i Routing Engines | 98](#)
- [M10i Routing Engines | 98](#)



- M40e Routing Engines | 99
- M120 Routing Engines | 99
- M320 Routing Engines | 100
- MX5, MX10, MX40, and MX80 Routing Engine | 101
- MX104 Routing Engines | 102
- MX204 Routing Engine | 102
- MX304 Routing Engine | 102
- MX240 Routing Engines | 103
- MX480 Routing Engines | 104
- MX960 Routing Engines | 106
- MX2008 Routing Engines | 108
- MX2010 Routing Engines | 109
- MX2020 Supported Routing Engines | 110
- MX10003 Routing Engines | 111
- MX10008 Routing Engines | 111
- PTX1000 Routing Engines | 112
- PTX3000 Routing Engines | 112
- PTX5000 Routing Engines | 113
- PTX10008 and PTX10016 Routing Engines | 114
- PTX10001 Routing Engine | 115
- PTX10002-60 Routing Engine | 115
- T320 Routing Engines | 115
- T640 Routing Engines | 116
- T1600 Routing Engines | 117
- T4000 Routing Engines | 119
- TX Matrix Routing Engines | 120
- TX Matrix Plus Routing Engines | 120
- TX Matrix Plus (with 3D SIBs) Routing Engines | 121

The following tables list the Routing Engines that each router supports, the first supported release for the Routing Engine in the specified router, the management Ethernet interface, and the internal Ethernet interfaces for each Routing Engine.

## M7i Routing Engines

[Table 35 on page 98](#) lists the Routing Engines supported by the M7i router. The M7i router supports 32-bit Junos OS only.

**Table 35: M7i Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: <a href="#">TSB16445</a> )	RE-5.0	9.0	fxp0	fxp1
RE-850-1536 (EOL details: <a href="#">TSB15553</a> )	RE-850	7.2	fxp0	fxp1
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

## M10i Routing Engines

[Table 36 on page 98](#) lists the Routing Engines supported by the M10i router. The M10i router supports 32-bit Junos OS only.

**Table 36: M10i Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-400-768 (EOL details: <a href="#">TSB16445</a> )	RE-5.0	9.0	fxp0	fxp1 fxp2
RE-850-1536 (EOL details: <a href="#">TSB15553</a> )	RE-850	7.2	fxp0	fxp1 fxp2

**Table 36: M10i Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-B-1800X1-4G	RE-B-1800x1	11.4R4 12.1R2	fxp0	em0

## M40e Routing Engines

[Table 37 on page 99](#) lists the Routing Engines supported by the M40e router.

**Table 37: M40e Routing Engines**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-A-1000-2048	RE-A-1000	8.1	fxp0	fxp1 fxp2

## M120 Routing Engines

[Table 38 on page 99](#) lists the Routing Engines supported by the M120 router.

**Table 38: M120 Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1000-2048	RE-A-1000	8.0R2	–	fxp0	fxp1 fxp2

**Table 38: M120 Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-2000-4096	RE-A-2000	8.0R2	–	fxp0	em0 bcm0
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	fxp1 fxp2
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	fxp1 fxp2
RE-A-1800X4-16G	RE-A-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1

## M320 Routing Engines

Table 39 on page 100 lists the Routing Engines supported by the M320 router.

**Table 39: M320 Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0

**Table 39: M320 Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-A-1800X2-8G	RE-A-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 bcm0
RE-A-1800X2-16G	RE-A-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 bcm0
RE-A-1800X4-8G	RE-A-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> <li>12.2</li> </ul>	10.4	fxp0	em0 em1

## MX5, MX10, MX40, and MX80 Routing Engine

Table 40 on page 101 lists the Routing Engines supported by the MX5, MX10, MX40, and MX80 routers.

**Table 40: MX5, MX10, MX40, and MX80 Routing Engine**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	Routing Engine RE-MX80	12.3	-	fxp0	em0 em1  <b>NOTE:</b> em1 is used to communicate with the MS-MIC when it is inserted.

## MX104 Routing Engines

[Table 41 on page 102](#) lists the Routing Engines supported by MX104 routers.

**Table 41: MX104 Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-MX104	Routing Engine	13.2	–	fxp0	em0 em1

## MX204 Routing Engine

[Table 42 on page 102](#) lists the Routing Engines supported by the MX204 router.

**Table 42: MX204 Routing Engine**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-S-1600x8	–	17.4	fxp0	em2 em3 em4

## MX304 Routing Engine

[Table 43 on page 103](#) lists the Routing Engines supported by the MX304 router.

**Table 43: MX304 Routing Engine**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP304-RE-S	RE 2700 8C 128G	-	22.2R	fxp0	fxp0

## MX240 Routing Engines

Table 44 on page 103 lists the Routing Engines supported by MX240 routers.

**Table 44: MX240 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: <a href="#">TSB16556</a> )	RE-S-1300	9.0	-	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: <a href="#">TSB16735</a> )	RE-S-2000	9.0	-	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800x2-16G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1

**Table 44: MX240 Supported Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1800X4-8G	RE-S-1800X4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800X4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0, em1
RE-S-X6-64G	RE-S-2X00x6	-	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6-LT	-	17.2R1	fxp0	ixlv0, igb0 em0

**Table 44: MX240 Supported Routing Engines (Continued)**

RE-S-X6-128G	RE-S-2X00x6-128	-	18.1R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G-K	RE-S-X6-128G-K	-	22.2R1S2	fxp0	ixlv0, igb0, em0
RE-S-X6-128G-LT	RE-S-X6-128G-LT	-	24.2R1	fxp0	ixlv0, igb0, em0

## MX480 Routing Engines

Table 45 on page 105 lists the Routing Engines supported by MX480 routers.



**Table 45: MX480 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: <a href="#">TSB16556</a> )	RE-S-1300	8.4	–	fxp0	fxp1 fxp2
RE-S-2000-4096 (EOL details: <a href="#">TSB16735</a> )	RE-S-2000	8.4	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X2-16G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0 em1

**Table 45: MX480 Supported Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G-LT	RE-S-2X00x6--LT	–	17.2R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	–	18.1R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G-K	RE-S-X6-128G-K	–	22.2R1S2	fxp0	ixlv0, igb0, em0
RE-S-X6-128G-LT	RE-S-X6-128G-LT	–	24.2R1	fxp0	ixlv0, igb0, em0

## MX960 Routing Engines

Table 46 on page 106 lists the Routing Engines supported by MX960 routers.

**Table 46: MX960 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-1300-2048 (EOL details: <a href="#">TSB16556</a> )	RE-S-1300	8.2	–	fxp0	fxp1 fxp2

Table 46: MX960 Supported Routing Engines *(Continued)*

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-2000-4096 (EOL details: <a href="#">TSB16735</a> )	RE-S-2000	8.2	–	fxp0	fxp1 fxp2
RE-S-1800X2-8G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X2-16G (EOL details: <a href="#">TSB16556</a> )	RE-S-1800x2	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-8G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-16G	RE-S-1800x4	<ul style="list-style-type: none"> <li>11.4R5</li> <li>12.1R3</li> </ul>	10.4	fxp0	em0 em1
RE-S-1800X4-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0 em1
RE-S-X6-64G	RE-S-2X00x6	–	15.1F4 16.1R1	fxp0	ixlv0, igb0
RE-S-X6-64G (For MX960-VC)	RE-S-2X00x6	–	17.2R1	fxp0	ixlv0, igb0

**Table 46: MX960 Supported Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-S-X6-64G-LT	RE-S-2X00x6-LT	-	17.2R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G	RE-S-2X00x6-128	-	18.1R1	fxp0	ixlv0, igb0 em0
RE-S-X6-128G-K	RE-S-X6-128G-K	-	22.2R1S2	fxp0	ixlv0, igb0, em0
RE-S-X6-128G-LT	RE-S-X6-128G-LT	-	24.2R1	fxp0	ixlv0, igb0, em0

## MX2008 Routing Engines

[Table 47 on page 108](#) lists the Routing Engines supported by MX2008 routers.

**Table 47: MX2008 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-64G	RE-MX2008-X8-64G	15.1F7	fxp0	ixlv0 ixlv1
REMX2008-X8-64G-LT	REMX2008-X8-64G-LT	17.2R1	fxp0	ixlv0 ixlv1

**Table 47: MX2008 Supported Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2008-X8-128G	RE-MX2008-X8-128G	18.2R1	fxp0	ixlv0 ixlv1

## MX2010 Routing Engines

[Table 48 on page 109](#) lists the Routing Engines supported by MX2010 routers.

**Table 48: MX2010 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> <li>15.1F5-S1</li> <li>16.1R2</li> <li>16.2R1</li> </ul>	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-64G-LT	RE-S-2X00x8	17.2R1	fxp0	ixlv0 ixlv1 em0

**Table 48: MX2010 Supported Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2K-X8-128G	RE-MX200X8-128G	18.1R1	fxp0	ixlv0 ixlv1

## MX2020 Supported Routing Engines

[Table 49 on page 110](#) lists the Routing Engines supported by MX2020 routers.

**Table 49: MX2020 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-MX2000-1800X4	RE-S-1800x4	12.3R2	fxp0	em0 em1
REMX2K-1800-32G-S	RE-S-1800x4	<ul style="list-style-type: none"> <li>12.3R4</li> <li>13.2R1</li> </ul>	fxp0	em0 em1
REMX2K-X8-64G	RE-S-2X00x8	<ul style="list-style-type: none"> <li>15.1F5-S1</li> <li>16.1R2</li> <li>16.2R1</li> </ul>	fxp0	ixlv0 ixlv1 em0
REMX2K-X8-64G-LT	RE-S-2X00x8	17.2R1	fxp0	ixlv0 ixlv1 em0

**Table 49: MX2020 Supported Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
REMX2K-X8-128G	RE-MX200X8-128G	18.1R1	fxp0	ixlv0 ixlv1 em0

## MX10003 Routing Engines

[Table 50 on page 111](#) lists the Routing Engines supported by MX10003 routers.

**Table 50: MX10003 Supported Routing Engines**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10003-RE1	RE-S-1600x8	17.3R1	fxp0	em3 em4
JNP10003-RE1-LT	RE-S-1600x8	18.1R1	fxp0	em3 em4

## MX10008 Routing Engines

[Table 51 on page 112](#) lists the Routing Engines supported on the MX10008 router.

**Table 51: MX10008 Routing Engines**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1	RE X10	18.2R1	em0	bme0 bme1

## PTX1000 Routing Engines

Table 52 on page 112 lists the Routing Engine supported on the PTX1000.



**NOTE:** The PTX1000 supports 64-bit Junos OS only.

**Table 52: PTX1000 Routing Engines**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-PTX1000	<ul style="list-style-type: none"> <li>16.1X65-D30</li> <li>17.2R1</li> </ul>	em0 em2	bme0 em1

## PTX3000 Routing Engines

Table 53 on page 113 lists the Routing Engines supported on the PTX3000.



**NOTE:** The PTX3000 supports 64-bit Junos OS only.



**Table 53: PTX3000 Routing Engines**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	13.2R2	em0	ixgbe0 ixgbe1
RCB-PTX-X6-32G	RE-PTX-2X00x6	16.1R4 17.1R1  This Routing Engine does not support Junos OS Release 16.2.	em0	ixlv0 ixlv1

## PTX5000 Routing Engines

Table 54 on page 114 lists the Routing Engines supported on the PTX5000.



### NOTE:

- PTX5000 supports 64-bit Junos OS only.
- The PTX5000 router supports two midplanes. The midplane identified as Midplane-8S in the CLI output is supported in Junos OS releases, 12.1X48, 12.3, and 13.2. The enhanced midplane, identified as Midplane-8SeP is supported from Junos OS release 14.1 onwards.

The RE-DUO-2600 routing engine with Junos OS 13.2 or earlier is not supported on the PTX5000BASE2 midplane.

**Table 54: PTX5000 Routing Engines**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-DUO-2600	12.1X48 12.3 13.2  <b>NOTE:</b> The PTX5000 does not support Junos OS Releases 12.1, 12.2, or 13.1.	em0	ixgbe0  ixgbe1
RE-PTX-X8-64G	RE-PTX-2X00x8	15.1F4  16.1R1	em0	ixlv0  ixlv1  em1
RE-PTX-X8-128G	RE-PTX-2X00x8-128G	18.1R1	em0	ixlv0  ixlv1  em1

## PTX10008 and PTX10016 Routing Engines

[Table 55 on page 114](#) lists the Routing Engines supported on the PTX10008 and PTX10016 routers.

**Table 55: PTX10008 and PTX10016 Routing Engines**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE0	RE-PTX-2X00x4	17.2R1	em0, em1	bme0  bme1

**Table 55: PTX10008 and PTX10016 Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
JNP10K-RE1 (on PTX10008)	RE X10	18.2R1	em0	bme0
			em1	bme1

## PTX10001 Routing Engine

[Table 56 on page 115](#) lists the Routing Engine supported on the PTX10001 router (JNP10001-20C).

**Table 56: PTX10001 Routing Engine**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-PTX10001-20C	18.4R1	em0, em2	em1 bme0

## PTX10002-60 Routing Engine

[Table 57 on page 115](#) lists the Routing Engine supported on the PTX10002-60 router.

**Table 57: PTX10002-60 Routing Engine**

Model Number	Name in CLI Output	First Supported Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
Built-in Routing Engine	RE-PTX10002-60C	18.2R1	em0, em2	em1 bme0

## T320 Routing Engines

[Table 58 on page 116](#) lists the Routing Engines supported by the T320 router.

**Table 58: T320 Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	5.3	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0	6.2	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	fxp0	fxp1 fxp2

The T320 router supports the CB-T control board.

## T640 Routing Engines

[Table 59 on page 116](#) lists the Routing Engines supported by the T640 router.

**Table 59: T640 Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	5.3	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0	6.2	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.1	–	fxp0	em0 bcm0

Table 59: T640 Routing Engines *(Continued)*

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.2  32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a standalone T640 router: 11.3  64-bit Junos OS on a T640 router in a routing matrix: 11.4R9	em0	bcm0  em1
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T640 router: 11.4R2  32-bit Junos OS on a T640 router in a routing matrix: 11.4R9	64-bit Junos OS on a standalone T640 router: 11.4R2  64-bit Junos OS on a T640 router in a routing matrix: 11.4R9	em0	bcm0  em1

The T640 standalone router supports CB-T control board and CB-LCC in a T640 routing matrix.

## T1600 Routing Engines

Table 60 on page 118 lists the Routing Engines supported by the T1600 router.



**NOTE:** (Two RE-DUO-C1800-8G or two RE-DUO-C1800-16G are required to connect to a Routing Matrix)

Table 60: T1600 Routing Engines

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	8.5	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0 (RE-1600)	8.5	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-TXP-LCC or RE-DUO-1800	<p>32-bit Junos OS on a T1600 router in a routing matrix: 9.6</p> <p><b>NOTE:</b> Junos OS Releases 9.6 through 10.4 support RE-DUO-C1800-8G only during upgrade to a line-card chassis (LCC) in a routing matrix.</p> <p>32-bit Junos OS on a standalone T1600 router: 11.1</p>	<p>64-bit Junos OS on a T1600 router in a routing matrix: 9.6</p> <p>64-bit Junos OS on a standalone T1600 router: 11.1</p>	em0	bcm0 em1

**Table 60: T1600 Routing Engines (Continued)**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-16G	RE-DUO-1800	32-bit Junos OS on a standalone T1600 router: 11.4R2  32-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	64-bit Junos OS on a standalone T1600 router: 11.4R2  64-bit Junos OS on a T1600 router in a routing matrix: 11.4R2	em0	bcm0  em1

## T4000 Routing Engines

Table 61 on page 119 lists the Routing Engines supported by the T4000 router.



**NOTE:** The T4000 router supports 64-bit Junos OS only.

**Table 61: T4000 Routing Engines**

Model Number	Name in CLI Output	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C1800-8G	RE-DUO-1800	Standalone T4000 router: 12.1  T4000 router in a routing matrix: 13.1	em0	bcm0  em1
RE-DUO-C1800-16G	RE-DUO-1800	Standalone T4000 router: 12.1R2  T4000 router in a routing matrix: 13.1	em0	bcm0  em1

The T4000 router supports the CB-LCC control board.

## TX Matrix Routing Engines

Table 62 on page 120 lists the Routing Engines supported by the TX Matrix router.

**Table 62: TX Matrix Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-600-2048 (EOL details: <a href="#">TSB14373</a> )	RE-3.0 or RE-3.0 (RE-600)	7.0	–	fxp0	fxp1 fxp2
RE-1600-2048 (EOL details: <a href="#">TSB14374</a> )	RE-4.0 (RE-1600)	7.0	–	fxp0	fxp1 fxp2
RE-A-2000-4096	RE-A-2000	8.5	–	fxp0	em0 bcm0
RE-DUO-C1800-8G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1
RE-DUO-C1800-16G	RE-DUO-1800	11.4R9	11.4R9	em0	bcm0 em1

The TXP router supports two control boards, CB-TX and CB-LCC. The CB-LCC is required for both RE-DUO-C1800-8G and RE-DUO-C1800-16G Routing Engines.

## TX Matrix Plus Routing Engines

Table 63 on page 121 lists the Routing Engines supported by the TX Matrix Plus router.



**Table 63: TX Matrix Plus Routing Engines**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	32-bit Junos OS: 9.6	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

The TX Matrix Plus router supports the CB-TXP control board.

## TX Matrix Plus (with 3D SIBs) Routing Engines

[Table 64 on page 121](#) lists the Routing Engines supported by the TX Matrix Plus router with 3D SIBs.

**Table 64: Routing Engines on TX Matrix Plus with 3D SIBs**

Model Number	Name in CLI Output	First Supported 32-bit Junos OS Release	First Supported 64-bit Junos OS Release	Management Ethernet Interface	Internal Ethernet Interface
RE-DUO-C2600-16G	RE-TXP-SFC or RE-DUO-2600	-	64-bit Junos OS: 11.4	em0	ixgbe0 ixgbe1

## SEE ALSO

*Understanding Internal Ethernet Interfaces*

# MX240 Line Card Components and Descriptions

## IN THIS SECTION

● [Interface Modules—DPCs](#) | 122

- Interface Modules—FPCs and PICs | 133
- Interface Modules—MPCs and MICs | 141

## Interface Modules—DPCs

### IN THIS SECTION

- MX240 Dense Port Concentrator (DPC) Description | 122
- MX240 DPC Port and Interface Numbering | 125
- MX240 Dense Port Concentrator (DPC) LEDs | 129
- DPCs Supported on MX240, MX480, and MX960 Routers | 129

## MX240 Dense Port Concentrator (DPC) Description

### IN THIS SECTION

- DPC Components | 124

A Dense Port Concentrator (DPC) is optimized for Ethernet density and supports up to 40 Gigabit Ethernet or four 10-Gigabit Ethernet ports (see [Figure 38 on page 123](#)). Other combinations of Gigabit Ethernet and 10-Gigabit ports are available in various DPC models. For more information about these models, see the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

The DPC assembly combines packet forwarding and Ethernet interfaces on a single board, with either two or four 10-Gbps Packet Forwarding Engines. Each Packet Forwarding Engine consists of one I-chip for Layer 3 processing and one Layer 2 network processor. The DPCs interface with the power supplies and Switch Control Boards (SCBs).

The router has two dedicated line card slots for DPCs, MPCs, or FPCs. DPCs install horizontally in the front of the router (see [Figure 38 on page 123](#)). One multifunction slot numbered **1/0** supports either one DPC or one SCB. The DPC slots are numbered **1/0**, **1**, and **2**, bottom to top. A DPC can be installed in any slot on the router that supports DPCs.

You can install any combination of DPC types in the router.

DPCs are hot-removable and hot-insertable. When you install a DPC in an operating router, the Routing Engine downloads the DPC software, the DPC runs its diagnostics, and the Packet Forwarding Engines housed on the DPC are enabled. Forwarding on other DPCs continues uninterrupted during this process.

If a slot is not occupied by a DPC or an SCB, a blank panel must be installed to shield the empty slot and to allow cooling air to circulate properly through the router.

Figure 38 on page 123 shows typical DPCs supported on the MX240 router. For more information about DPCs, see the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

**Figure 38: Typical DPCs Supported on the MX240 Router**


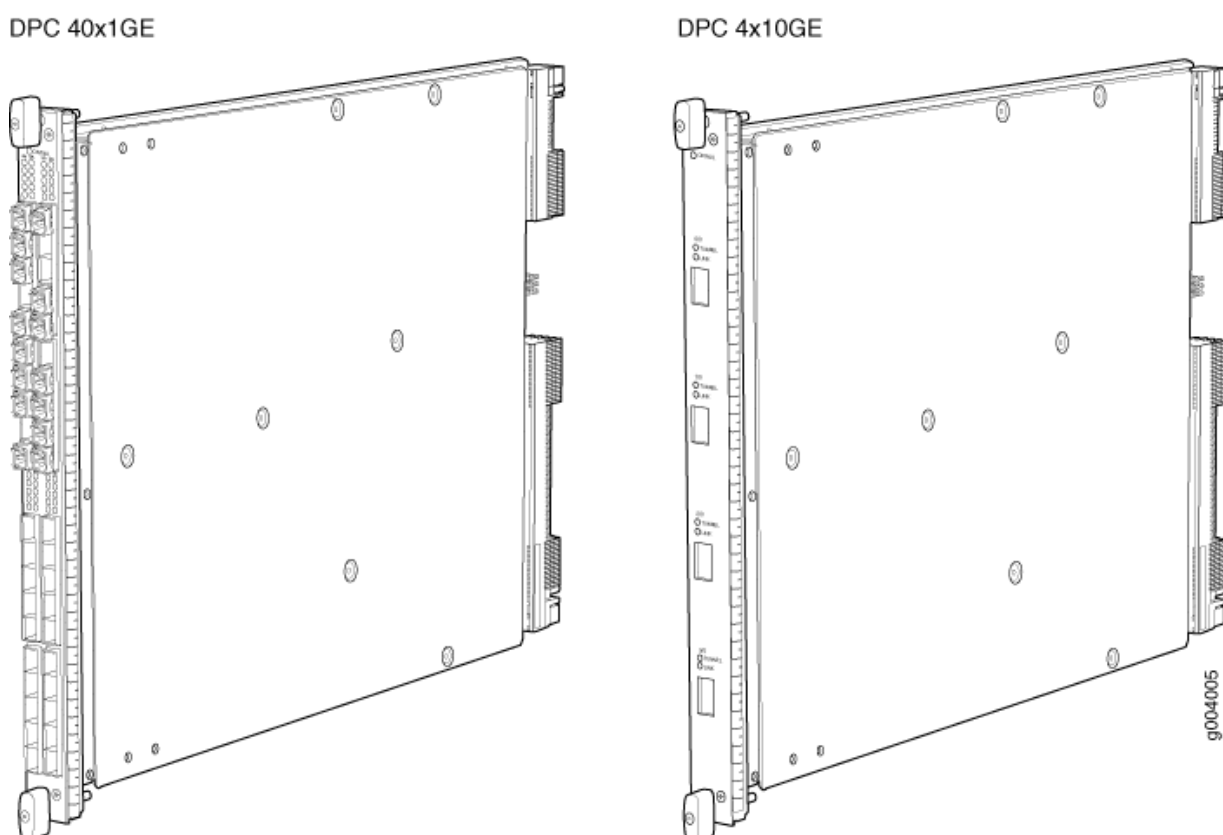


Figure 39: DPC Installed Horizontally in the MX240 Router

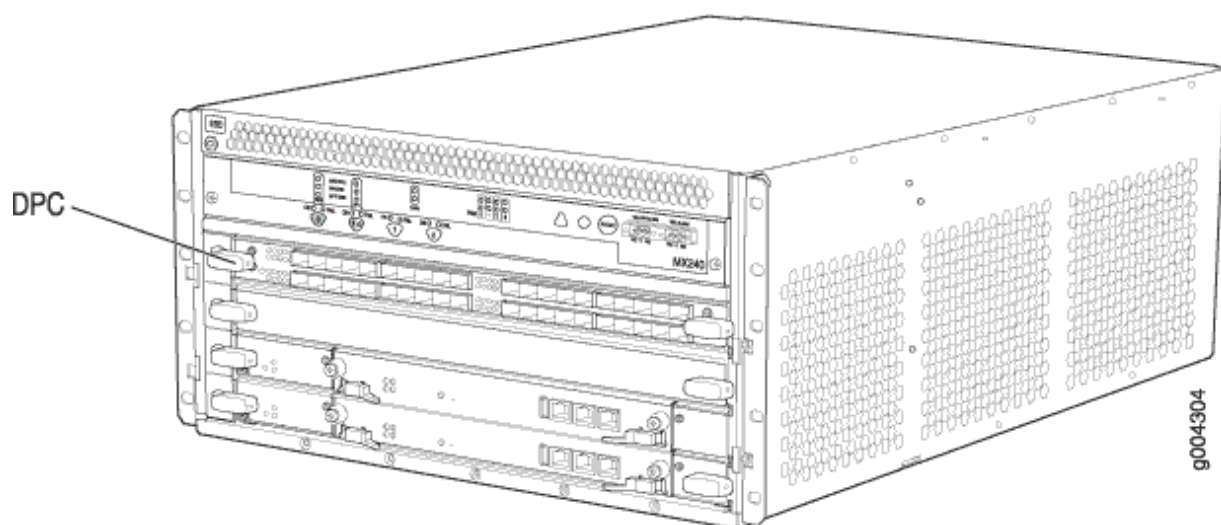

### DPC Components

Each DPC consists of the following components:

- DPC cover, which functions as a ground plane and a stiffener.
- Fabric interfaces.
- Two Gigabit Ethernet interfaces that allow control information, route information, and statistics to be sent between the Routing Engine and the CPU on the DPCs.
- Two interfaces from the SCBs that enable the DPCs to be powered on and controlled.
- Physical DPC connectors.
- Two or four Packet Forwarding Engines.
- Midplane connectors and power circuitry.
- Processor subsystem, which includes a 1.2-GHz CPU, system controller, and 1 GB of SDRAM.
- Online button—Takes the DPC online or offline when pressed.
- LEDs on the DPC faceplate. For more information about LEDs on the DPC faceplate, see the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

Two LEDs, located on the craft interface above the DPC, display the status of the DPC and are labeled **OK** and **FAIL**.

## SEE ALSO

[MX240 Component LEDs on the Craft Interface | 27](#)

[MX240 Field-Replaceable Units \(FRUs\) | 305](#)

[Replacing an MX240 DPC | 358](#)

## MX240 DPC Port and Interface Numbering

Each port on a DPC corresponds to a unique interface name in the CLI.

In the syntax of an interface name, a hyphen (-) separates the media type from the *DPC* number (represented as an *FPC* in the CLI). The DPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the logical PIC number. The last number in the interface matches the port number on the DPC. Slashes (/) separate the DPC number from the logical PIC number and port number.

*type-fpc/pic/port*

- *type*—Media type, which identifies the network device. For example:

- *ge*—Gigabit Ethernet interface
- *so*—SONET/SDH interface
- *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see [Interface Naming Overview](#).

- *fpc*—Slot in which the DPC is installed. On the MX240 router, the DPCs are represented in the CLI as FPC 0 through FPC 2.
- *pic*—Logical PIC on the *DPC*. The number of logical PICs varies depending on the type of DPC. For example, a:
  - 20-port Gigabit Ethernet DPC has two logical PICs, numbered 0 through 1.
  - 40-port Gigabit Ethernet DPC has four logical PICs, numbered 0 through 3.
  - 2-port 10-Gigabit Ethernet DPC has two logical PICs, numbered 0 through 1.
  - 4-port 10-Gigabit Ethernet DPC has four logical PICs, numbered 0 through 3.


For more information on specific DPCs, see "[DPCs Supported on MX240, MX480, and MX960 Routers](#)" on page 129 in the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

- *port*—Port number.

The MX240 router supports up to three DPCs that install horizontally and are numbered from bottom to top.

Figure 40 on page 126 shows a 40-port Gigabit Ethernet DPC with SFP installed in slot 2 on the MX240 router.

Figure 40: MX240 DPC Interface Port Mapping

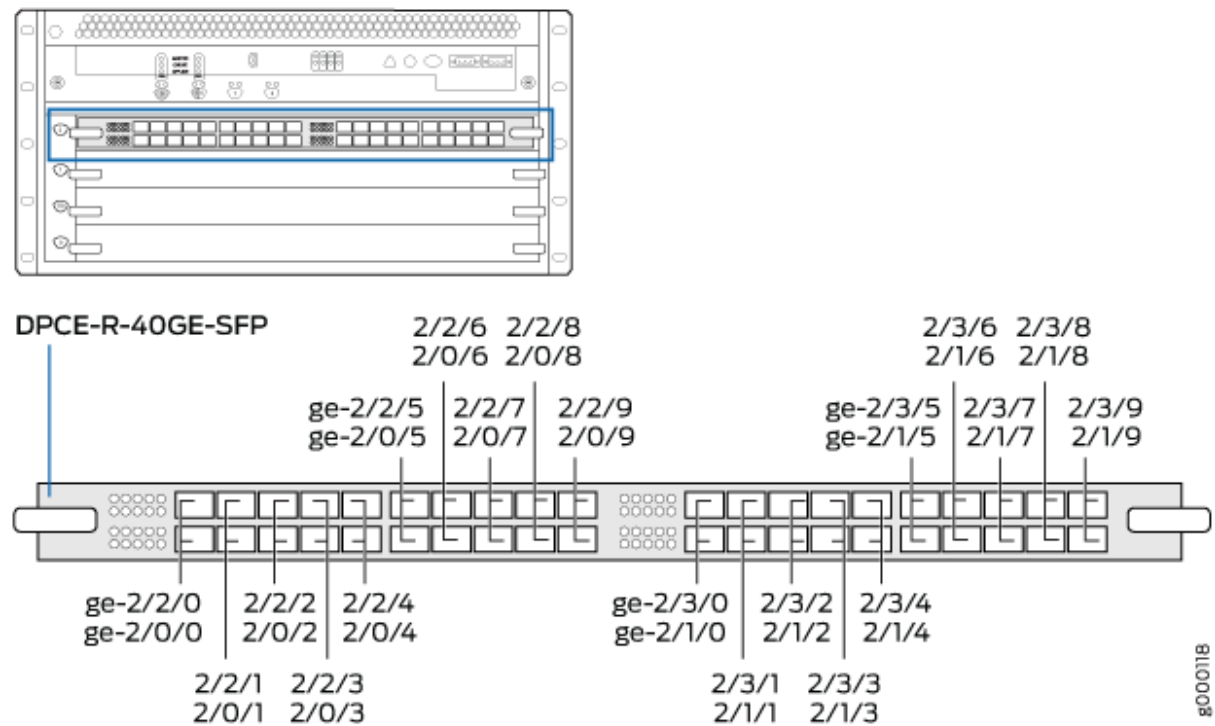

The DPC contains four logical PICs, numbered PIC 0 through PIC 3 in the CLI. Each logical PIC contains 10 ports numbered 0 through 9.

The `show chassis hardware` command output displays a 40-port Gigabit Ethernet DPC with SFP (**DPCE-R-40GE-SFP**) installed in DPC slot 2. The DPC is shown as FPC 2 and the DPC's four logical PICs — 10x 1GE(LAN) — are shown as PIC 0 through PIC 3.

```

user@host> show chassis hardware

...
FPC 2          REV 07   750-018122  KB8222          DPCE 40x 1GE R
CPU           REV 06   710-013713  KA9010          DPC PMB
PIC 0
  Xcvr 0       REV 01   740-011782  PCH2NU4         SFP-SX
  Xcvr 1       REV 01   740-011782  PCH2P4R         SFP-SX
  Xcvr 2       REV 01   740-011782  PCH2NYL         SFP-SX
  Xcvr 3       REV 01   740-011782  PCH2UW6         SFP-SX
  
```

```

Xcvr 4      REV 01  740-011782  PCH2P4N      SFP-SX
Xcvr 5      REV 01  740-011782  PCH2UME      SFP-SX
Xcvr 6      REV 01  740-011613  PCE1H5P      SFP-SX
Xcvr 7      REV 01  740-011782  PCH2UFG      SFP-SX
Xcvr 8      REV 02  740-011613  AM0947SEYU2  SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEYTQ  SFP-SX
PIC 1              BUILTIN    BUILTIN      10x 1GE(LAN)
Xcvr 0      REV 01  740-011782  PCH2UYF      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P4L      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2UCL      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2P4X      SFP-SX
Xcvr 4      REV 01  740-011782  PCH2P1E      SFP-SX
Xcvr 5      REV 01  740-011782  PCH2UD2      SFP-SX
Xcvr 6      REV 01  740-011782  PCH2PLC      SFP-SX
Xcvr 7      REV 01  740-011782  PCH2UDJ      SFP-SX
Xcvr 8      REV 02  740-011613  AM0947SEX7S  SFP-SX
PIC 2              BUILTIN    BUILTIN      10x 1GE(LAN)
Xcvr 0      REV 01  740-011782  PCH2NV7      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P6Q      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2NUG      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2P10      SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEXTB  SFP-SX
PIC 3              BUILTIN    BUILTIN      10x 1GE(LAN)
Xcvr 0      REV 01  740-011782  PCH2PL4      SFP-SX
Xcvr 1      REV 01  740-011782  PCH2P1K      SFP-SX
Xcvr 2      REV 01  740-011782  PCH2PLM      SFP-SX
Xcvr 3      REV 01  740-011782  PCH2UFF      SFP-SX
Xcvr 8      REV 02  740-011613  AM1003SFV5S  SFP-SX
Xcvr 9      REV 02  740-011613  AM0947SEXBX  SFP-SX

```

...

The `show interfaces terse` command output displays the Gigabit Ethernet interfaces that correspond to the 40 ports located on the DPC.

```
user@host> show interfaces terse ge-2*
```

Interface	Admin	Link	Proto	Local	Remote
ge-2/0/0	up	up			
ge-2/0/1	up	down			
ge-2/0/2	up	up			
ge-2/0/3	up	up			
ge-2/0/4	up	up			

ge-2/0/5	up	up
ge-2/0/6	up	up
ge-2/0/7	up	up
ge-2/0/8	up	up
ge-2/0/9	up	up
ge-2/1/0	up	down
ge-2/1/1	up	down
ge-2/1/2	up	down
ge-2/1/3	up	down
ge-2/1/4	up	up
ge-2/1/5	up	up
ge-2/1/6	up	up
ge-2/1/7	up	up
ge-2/1/8	up	up
ge-2/1/9	up	down
ge-2/2/0	up	down
ge-2/2/1	up	down
ge-2/2/2	up	down
ge-2/2/3	up	down
ge-2/2/4	up	down
ge-2/2/5	up	down
ge-2/2/6	up	down
ge-2/2/7	up	down
ge-2/2/8	up	down
ge-2/2/9	up	down
ge-2/3/0	up	down
ge-2/3/1	up	down
ge-2/3/2	up	down
ge-2/3/3	up	down
ge-2/3/4	up	down
ge-2/3/5	up	down
ge-2/3/6	up	down
ge-2/3/7	up	down
ge-2/3/8	up	down
ge-2/3/9	up	down

## SEE ALSO

[MX240 Router Hardware and CLI Terminology Mapping](#) | 22



## MX240 Dense Port Concentrator (DPC) LEDs

Two LEDs, located on the craft interface above the DPC, display the status of the DPC and are labeled **OK** and **FAIL**. For more information about the DPC LEDs on the craft interface, see "[MX240 Component LEDs on the Craft Interface](#)" on page 27.

Each DPC also has LEDs located on the faceplate. For more information about LEDs on the DPC faceplate, see the "LEDs" section for each DPC in the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

### SEE ALSO

- [MX240 Field-Replaceable Units \(FRUs\) | 305](#)
- [MX240 Dense Port Concentrator \(DPC\) Description | 122](#)
- [Replacing an MX240 DPC | 358](#)

## DPCs Supported on MX240, MX480, and MX960 Routers



**NOTE:** These DPCs have all been announced as End of Life (EOL). The End of Support (EOS) milestone dates for each model are published at [https://www.juniper.net/support/eol/mseries\\_hw.html](https://www.juniper.net/support/eol/mseries_hw.html).

[Table 65 on page 129](#) lists the DPCs supported by the MX240, MX480, and MX960 routers.

**Table 65: DPCs Supported in MX240, MX480, and MX960 Routers**

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC
<b>Gigabit Ethernet</b>			
<i><a href="#">Gigabit Ethernet DPC with SFP</a></i>	DPC-R-40GE-SFP	40	40 Gbps
	EOL (see <a href="#">PSN-TSB14931</a> )		
<i><a href="#">Gigabit Ethernet Enhanced DPC with SFP</a></i>	DPCE-R-40GE-SFP	40	40 Gbps
	EOL (see <a href="#">PSN-TSB16810</a> )		

Table 65: DPCs Supported in MX240, MX480, and MX960 Routers *(Continued)*

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC
<i>Gigabit Ethernet Enhanced Ethernet Services DPC with SFP</i>	DPCE-X-40GE-SFP  EOL (see <a href="#">PSN-TSB16810</a> )	40	40 Gbps
<i>Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with SFP</i>	DPCE-X-Q-40GE-SFP  EOL (see <a href="#">PSN-TSB16059</a> )	40	40 Gbps
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i>	DPCE-R-Q-20GE-SFP  EOL (see <a href="#">PSN-TSB16059</a> )	20	20 Gbps
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i>	DPCE-R-Q-40GE-SFP  EOL (see <a href="#">PSN-TSB15618</a> )	40	40 Gbps
<i>10-Gigabit Ethernet DPC with XFP</i>	DPC-R-4XGE-XFP  EOL (see <a href="#">PSN-TSB14931</a> )	4	40 Gbps
<b>10-Gigabit Ethernet</b>			
<i>10-Gigabit Ethernet Enhanced DPCs with XFP</i>	DPCE-R-2XGE-XFP  EOL (see <a href="#">PSN-TSB15618</a> )	2	20 Gbps

Table 65: DPCs Supported in MX240, MX480, and MX960 Routers *(Continued)*

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC
<i>10-Gigabit Ethernet Enhanced DPCs with XFP</i>	DPCE-R-4XGE-XFP  EOL (see <a href="#">PSN-TSB16810</a> )	4	40 Gbps
<i>10-Gigabit Ethernet Enhanced Ethernet Services DPC with XFP</i>	DPCE-X-4XGE-XFP  EOL (see <a href="#">PSN-TSB16810</a> )	4	40 Gbps
<i>10-Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with XFP</i>	DPCE-X-Q-4XGE-XFP  EOL (see <a href="#">PSN-TSB16059</a> )	4	40 Gbps
<i>10-Gigabit Ethernet Enhanced Queuing IP Services DPC with XFP</i>	DPCE-R-Q-4XGE-XFP  EOL (see <a href="#">PSN-TSB15618</a> )	4	40 Gbps
<b>Multi-Rate Ethernet</b>			
<i>Multi-Rate Ethernet Enhanced DPC with SFP and XFP</i>	DPCE-R-20GE-2XGE  EOL (see <a href="#">PSN-TSB15618</a> )	22	40 Gbps
<i>Multi-Rate Ethernet Enhanced Ethernet Services DPC with SFP and XFP</i>	DPCE-X-20GE-2XGE  EOL (see <a href="#">PSN-TSB15618</a> )	22	40 Gbps

Table 65: DPCs Supported in MX240, MX480, and MX960 Routers (*Continued*)

DPC Name	DPC Model Number	Ports	Maximum Throughput per DPC
<i>Multi-Rate Ethernet Enhanced Queuing IP Services DPC with SFP and XFP</i>	DPCE-R-Q-20GE-2XGE  EOL (see <a href="#">PSN-TSB16810</a> )	22	40 Gbps
<b>Tri-Rate Ethernet</b>			
<i>Tri-Rate Enhanced DPC</i>	DPCE-R-40GE-TX  EOL (see <a href="#">PSN-TSB16059</a> )	40	40 Gbps
<i>Tri-Rate Enhanced Ethernet Services DPC</i>	DPCE-X-40GE-TX  EOL (see <a href="#">PSN – TSB15619</a> )	40	40 Gbps
<b>Services</b>			
<i>Multiservices DPC</i>	MS-DPC  EOL (see <a href="#">PSN-TSB16812</a> )	2 (Not supported)	–

**SEE ALSO**

*Protocols and Applications Supported by DPCs and Enhanced DPCs (DPC and DPCE-R)*

*Protocols and Applications Supported by Enhanced Ethernet Services DPCs (DPCE-X)*

*Protocols and Applications Supported by Enhanced Queuing IP Services DPCs (DPCE-R-Q)*

*Protocols and Applications Supported by Enhanced Queuing Ethernet Services DPCs (DPCE-X-Q)*

*Protocols and Applications Supported by the Multiservices DPC (MS-DPC)*

## Interface Modules—FPCs and PICs

### IN THIS SECTION

- [MX240 Flexible PIC Concentrator \(FPC\) Description | 133](#)
- [MX240 Flexible PIC Concentrator \(FPC\) LEDs | 136](#)
- [FPCs Supported by MX240, MX480, and MX960 Routers | 136](#)
- [MX240 PIC Description | 137](#)
- [MX240 PIC Port and Interface Numbering | 137](#)
- [MX240 PIC LEDs | 139](#)
- [PICs Supported by MX240, MX480, and MX960 Routers | 139](#)

## MX240 Flexible PIC Concentrator (FPC) Description

### IN THIS SECTION


- [FPC Components | 135](#)

A Flexible PIC Concentrator (FPC) occupies two DPC slots on an MX Series router. The DPC slots are numbered **1/0**, **1**, and **2**, bottom to top. One FPC can be installed horizontally in either slots **1/0** and **1**, or slots **1** and **2** on the front of the router (see [Figure 42 on page 135](#)). The interface corresponds to the lowest numbered DPC slot for which the FPC is installed.

[Figure 41 on page 134](#) shows typical FPCs supported on the MX240 router.



Figure 42: FPC Installed in the MX240 Router Chassis

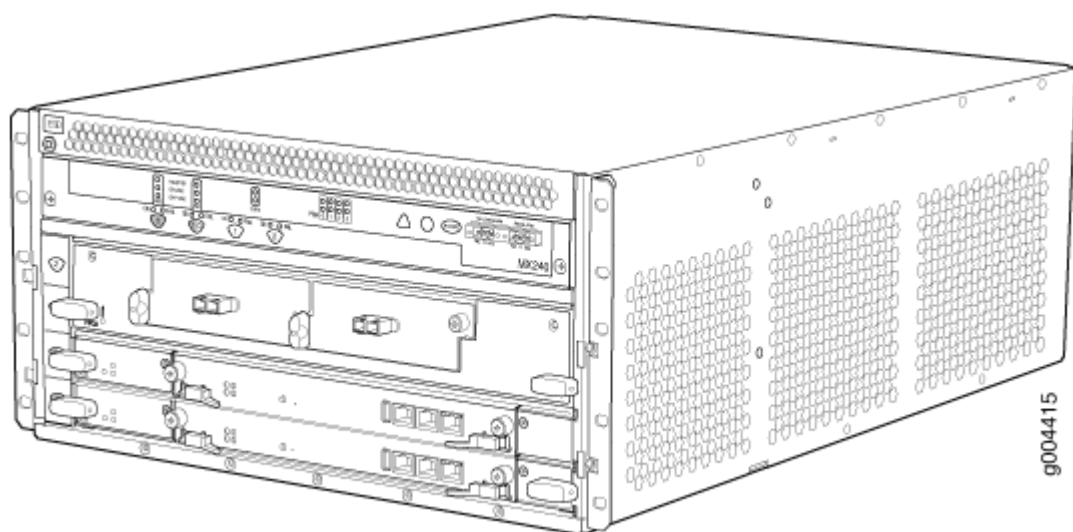

### FPC Components

Each FPC consists of the following components:

- FPC card carrier, which includes two PIC slots.
- Up to two Packet Forwarding Engines, each consisting of one I-chip for Layer 3 processing and one Layer 2 network processor.
- Midplane connectors and power circuitry.
- Processor subsystem (PMB), which includes a 1.2-GHz CPU, system controller, 1 GB of SDRAM, and two Gigabit Ethernet interfaces.
- Two LEDs, located on the craft interface above the FPC, that display the status of the FPC and are labeled **OK** and **FAIL**. For more information about the FPC LEDs located on the craft interface, see ["MX240 Component LEDs on the Craft Interface" on page 27](#).
- FPC online/offline button, located on the craft interface above the FPC

### SEE ALSO

[MX240 FPC Terminology](#)

[Replacing an MX240 FPC | 369](#)

[Maintaining MX240 FPCs | 363](#)

[Troubleshooting the MX240 FPCs | 472](#)

### MX240 Flexible PIC Concentrator (FPC) LEDs

Two LEDs, located on the craft interface above the FPC, that display the status of the FPC and are labeled **OK** and **FAIL**. For more information about the FPC LEDs located on the craft interface, see ["MX240 Component LEDs on the Craft Interface" on page 27](#).

SEE ALSO

<a href="#">MX240 Flexible PIC Concentrator (FPC) Description   133</a>
<a href="#">MX240 FPC Terminology</a>
<a href="#">Replacing an MX240 FPC   369</a>
<a href="#">Maintaining MX240 FPCs   363</a>
<a href="#">Troubleshooting the MX240 FPCs   472</a>

### FPCs Supported by MX240, MX480, and MX960 Routers

An FPC occupies two slots when installed in an MX240, MX480, or MX960 router. The maximum number of supported FPCs varies per router:

- MX960 router—6 FPCs
- MX480 router—3 FPCs
- MX240 router—1 FPC

[Table 66 on page 136](#) lists FPCs supported by MX240, MX480, and MX960 routers.

**Table 66: FPCs Supported by MX240, MX480, and MX960 Routers**

FPC Type	FPC Name	FPC Model Number	Maximum Number of PICs Supported	Maximum Throughput per FPC (Full-duplex)	First Junos OS Release
3	FPC3	MX-FPC3	2	20 Gbps	9.4
2	FPC2	MX-FPC2	2	10 Gbps	9.5

SEE ALSO

<a href="#">MX Series FPC and PIC Overview</a>
--



## MX240 PIC Description

PICs provide the physical connection to various network media types, receiving incoming packets from the network and transmitting outgoing packets to the network. During this process, each PIC performs framing and line-speed signaling for its media type. Before transmitting outgoing data packets, the PICs encapsulate the packets received from the FPCs. Each PIC is equipped with an ASIC that performs control functions specific to the media type of that PIC.

PICs are hot-removable and hot-insertable. You can install up to two PICs in the slots in each FPC. PICs used in an FPC2 have captive screws at their upper and lower corners. PICs used in a Type 3 FPC have an upper ejector handle and a lower captive screw.

### SEE ALSO

---

[PICs Supported by MX240, MX480, and MX960 Routers | 139](#)


---

[MX240 PIC LEDs | 139](#)


---

[Replacing an MX240 PIC | 394](#)


---

## MX240 PIC Port and Interface Numbering

Each port on a PIC corresponds to a unique interface name in the CLI.

In the syntax of an interface name, a hyphen (-) separates the media type from the *FPC* number (represented as an FPC in the CLI). The FPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the PIC number. The last number in the interface matches the port number on the PIC. Slashes (/) separate the FPC slot number from the PIC number and port number:

*type-fpc/pic/port*

- *type*—Media type, which identifies the network device. For example:
  - ge—Gigabit Ethernet interface
  - so—SONET/SDH interface
  - xe—10-Gigabit Ethernet interface

For a complete list of media types, see [Interface Naming Overview](#).

- *fpc*—Lowest slot number in which the FPC is installed. On the MX240 router, the FPC occupies two line card slots and is represented in the CLI as FPC 0 or FPC 1.
- *pic*—PIC number, 0 or 1 depending on the *FPC* slot.


For more information on specific PICs, see ["PICs Supported by MX240, MX480, and MX960 Routers"](#) on page 139 in the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

- *port*—Port number.

The FPC installs horizontally in either slots 1/0 and 1, or slots 1 and 2 and accepts up to two PICs.

[Figure 43 on page 138](#) shows a Channelized OC12/STM4 Enhanced IQ (IQE) PIC with SFP installed in PIC slot 0 of an FPC installed in slot 1 and slot 2.

**Figure 43: MX240 PIC Interface Port Mapping**

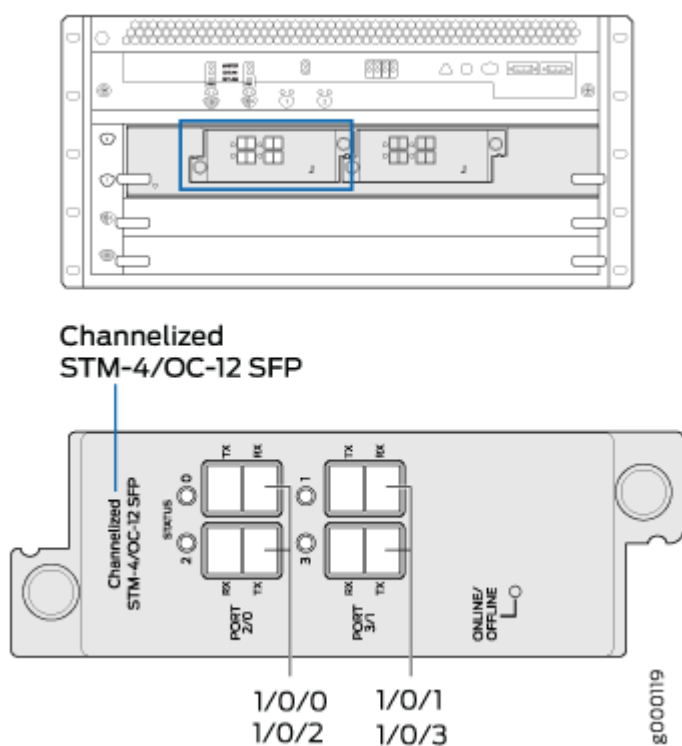

The `show chassis hardware` command output displays a Channelized OC12/STM4 Enhanced IQ (IQE) PIC (4x CHOC12 IQE SONET) installed in MX FPC Type 2.

```
user@host> show chassis hardware
```

```
...
```

FPC 1	REV 01	710-024386	JW9571	MX FPC Type 2
CPU	REV 03	710-022351	KE2986	DPC PMB
PIC 0	REV 00	750-022630	DS1284	4x CHOC12 IQE SONET
Xcvr 0	REV 01	740-011782	PB821SG	SFP-SX
Xcvr 1	REV 01	740-011782	PB829Q6	SFP-SX
Xcvr 2	REV 01	740-011613	P9F15NQ	SFP-SX
Xcvr 3	REV 01	740-011782	P7N036X	SFP-SX...

The `show interfaces terse` command output displays the channelized SONET OC12 interfaces (coc12), that correspond to the four ports located on the PIC.

```
user@host> show interfaces terse coc12*
```

Interface	Admin	Link	Proto	Local	Remote
coc12-1/0/0	up	up			
coc12-1/0/1	up	up			
coc12-1/0/2	up	up			
coc12-1/0/3	up	up			

## SEE ALSO

[MX240 Router Hardware and CLI Terminology Mapping](#) | 22

## MX240 PIC LEDs

Each PIC has LEDs located on the faceplate. For more information about LEDs on the PIC faceplate, see the “LEDs” section for each PIC in the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

## SEE ALSO

[PICs Supported by MX240, MX480, and MX960 Routers](#) | 139

[MX240 PIC Description](#) | 137

[Replacing an MX240 PIC](#) | 394

[Maintaining MX240 PICs](#) | 393

## PICs Supported by MX240, MX480, and MX960 Routers

[Table 67](#) on page 140 lists the PICs supported by MX240, MX480, and MX960 routers.

Table 67: PICs Supported by MX240, MX480, and MX960 Routers

PIC Name	PIC Model Number	Ports	Type	First Junos OS Release
<b>Channelized IQ PICs</b>				
<i>Channelized OC12/STM4 Enhanced IQ (IQE) PIC with SFP</i>	PB-4CHOC12-STM4-IQE-SFP	4	2	9.5
<i>Channelized OC48/STM16 Enhanced IQ (IQE) PIC with SFP</i>	PB-1CHOC48-STM16-IQE	1	2	9.5
<b>SONET/SDH PICs</b>				
<i>SONET/SDH OC3/STM1 (Multi-Rate) PIC with SFP</i>	PB-4OC3-1OC12-SON2-SFP	4	2	9.5
<i>SONET/SDH OC12/STM4 (Multi-Rate) PIC with SFP</i>	PB-4OC3-4OC12-SON-SFP	4	2	9.5
<i>SONET/SDH OC48/STM16 Enhanced IQ (IQE) PIC with SFP</i>	PC-4OC48-STM16-IQE-SFP	4	3	10.4R2
<i>SONET/SDH OC48/STM16 (Multi-Rate) PIC with SFP</i>	PB-1OC48-SON-B-SFP	1	2	9.5
<i>SONET/SDH OC48/STM16 PIC with SFP</i>	PC-4OC48-SON-SFP	4	3	9.4
<i>SONET/SDH OC192c/STM64 PIC</i>	PC-1OC192-SON-VSR	1	3	9.4
<i>SONET/SDH OC192c/STM64 PIC with XFP</i>	PC-1OC192-SON-XFP	1	3	9.4

SEE ALSO

<i>MX Series FPC and PIC Overview</i>
<a href="#">FPCs Supported by MX240, MX480, and MX960 Routers   136</a>
<i>High Availability Features</i>

Interface Modules—MPCs and MICs

IN THIS SECTION

- [MIC/MPC Compatibility | 141](#)
- [MX240 Modular Interface Card \(MIC\) Description | 155](#)
- [MICs Supported by MX Series Routers | 155](#)
- [MX240 Modular Interface Card \(MIC\) LEDs | 169](#)
- [MX240 MIC Port and Interface Numbering | 169](#)
- [MX240 Modular Port Concentrator \(MPC\) Description | 173](#)
- [MX240 Modular Port Concentrator \(MPC\) LEDs | 176](#)
- [MPCs Supported by MX Series Routers | 176](#)
- [MX240 Application Services Modular Line Card Description | 187](#)
- [MX240 AS MSC LEDs | 190](#)
- [MX240 Application Services Modular Processing Card Description | 191](#)
- [MX240 AS MXC LEDs | 192](#)

MIC/MPC Compatibility

The following tables provide a compatibility matrix for the MICs currently supported by MPC1, MPC2, MPC3, MPC6, MPC8, and MPC9 on MX240, MX480, MX960, MX2008, MX2010, MX2020, and MX10003 routers. Each table lists the first Junos OS release in which the MPC supports the MIC. For example, Junos OS Release 10.2 is the first release in which the MX-MPC1-3D supports the Gigabit Ethernet MIC with SFP. An en dash indicates that the MIC is not supported.

Table 68: MIC/MPC1 Compatibility

MIC Name	MPC1	MPC1E	MPC1 Q	MPC1E Q
MIC-3D-8OC3-2O C12-ATM  ( <i>ATM MIC with SFP</i> )	—	—	12.1	12.1R4
MIC-3D-20GE-SFP  ( <i>Gigabit Ethernet MIC with SFP</i> )	10.2	11.2R4	10.2	11.2R4
MIC-3D-20GE-SFP-E  ( <i>Gigabit Ethernet MIC with SFP (E)</i> )	13.2R2	13.2R2	13.2R2	13.2R2
MIC-3D-2XGE-XFP  ( <i>10-Gigabit Ethernet MICs with XFP</i> )	10.2	11.2R4	10.2	11.2R4
MIC-3D-4XGE-XFP  ( <i>10-Gigabit Ethernet MICs with XFP</i> )	—	—	—	—
MIC-3D-40GE-TX  ( <i>Tri-Rate MIC</i> )	10.2	11.2R4	10.2	11.2R4

Table 68: MIC/MPC1 Compatibility (Continued)

MIC Name	MPC1	MPC1E	MPC1 Q	MPC1E Q
MIC-3D-4OC3OC1 2-1OC48, MIC-3D-8OC3OC1 2-4OC48  <i>(SONET/SDH OC3/            STM1 (Multi-Rate)            MICs with SFP)</i>	11.2	11.2R4	11.2	11.2R4
MIC-3D-4COC3-1C OC12-CE  <i>(Channelized OC3/            STM1 (Multi-Rate)            Circuit Emulation            MIC with SFP)</i>	—	—	12.2	12.2
MIC-3D-1OC192- XFP  <i>(SONET/SDH            OC192/STM64            MIC with XFP)</i>	12.2	12.2	12.2	12.2
MIC-3D-4CHOC3- 2CHOC12, MIC-3D-8CHOC3- 4CHOC12  MIC-4COC3-2COC 12-G, MIC-8COC3-4COC 12-G  <i>(Channelized            SONET/SDH OC3/            STM1 (Multi-Rate)            MICs with SFP)</i>	—	—	11.4	11.4

Table 68: MIC/MPC1 Compatibility (Continued)

MIC Name	MPC1	MPC1E	MPC1 Q	MPC1E Q
MIC-3D-16CHE1-T1-CE <i>(Channelized E1/T1 Circuit Emulation MIC)</i>	13.2  <b>NOTE:</b> Support for Non-Channelized MIC only.	13.2  <b>NOTE:</b> Support for Non-Channelized MIC only.	12.3	12.3
MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B <i>(DS3/E3 MIC)</i>  <b>NOTE:</b> You cannot run Channelized DS3 (MIC-3D-8CHDS3-E3) on non-Q MPCs. Channelized DS3 is supported only on Q and EQ-based MPCs.	11.4	11.4	11.4	11.4
MIC-MACSEC-20GE <i>Gigabit Ethernet MIC with 256b-AES MACsec</i>	18.3R1	18.3R1	18.3R1	18.3R1
MS-MIC-16G <i>(Multiservices MIC)</i>	13.2	13.2	13.2	13.2



Table 69: MIC/MPC2 Compatibility

MIC Name	MPC2	MPC2E	MPC2E -3D-NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E -3D- NG-Q
MIC-3D-8OC 3-2OC12- ATM  <i>(ATM MIC with SFP)</i>	—	—	14.1R4, 14.2R3 with Junos Continu ity  15.1	12.1	12.1R4	12.1	12.1R4	—	14.1R4, 14.2R3 with Junos Continu ity  15.1
MIC-3D-20G E-SFP  <i>(Gigabit Ethernet MIC with SFP)</i>	10.1	11.2R4	14.1R4, 14.2R3 with Junos Continu ity  15.1	10.1	11.2R4	10.1	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continu ity  15.1
MIC-3D-20G E-SFP-E  <i>(Gigabit Ethernet MIC with SFP (E))</i>	13.2R2	13.2R2	14.1R4, 14.2R3 with Junos Continu ity  15.1	13.2R2	13.2R2	13.2R2	13.2R2	13.2R2	14.1R4, 14.2R3 with Junos Continu ity  15.1
MIC-3D-2XG E-XFP  <i>(10-Gigabit Ethernet MIC with XFP)</i>	10.2	11.2R4	14.1R4, 14.2R3 with Junos Continu ity  15.1	10.2	11.2R4	10.2	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continu ity  15.1

Table 69: MIC/MPC2 Compatibility (Continued)

MIC Name	MPC2	MPC2E	MPC2E -3D-NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E -3D- NG-Q
MIC-3D-10G E-SFP-E  <i>1-Gigabit/10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	—	—	24.2	—	—	—	—	—	24.2
MIC-3D-4XG E-XFP  <i>(10-Gigabit Ethernet MICs with XFP)</i>	10.1	11.2R4	14.1R4, 14.2R3 with Junos Continu ity  15.1	10.1	11.2R4	10.1	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continu ity  15.1
MIC-3D-40G E-TX  <i>(Tri-Rate MIC)</i>	10.2	11.2R4	14.1R4, 14.2R3 with Junos Continu ity  15.1	10.2	11.2R4	10.2	11.2R4	12.2	14.1R4, 14.2R3 with Junos Continu ity  15.1

Table 69: MIC/MPC2 Compatibility (Continued)

MIC Name	MPC2	MPC2E	MPC2E -3D-NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E -3D- NG-Q
MIC-3D-4OC 3OC12-1OC 48, MIC-3D-8OC 3OC12-4OC 48  ( <i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i> )	11.4	11.4	14.1R4, 14.2R3 with Junos Continu ity  15.1	11.4	11.4	11.4	11.4	—	14.1R4, 14.2R3 with Junos Continu ity  15.1
MIC-3D-4CO C3-1COC12- CE  ( <i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i> )	—	—	—	12.2	12.2	12.2	12.2	12.2	14.1R4, 14.2R3 with Junos Continu ity  15.1
MIC-3D-1OC 192-XFP  ( <i>SONET/SDH OC192/ STM64 MIC with XFP</i> )	12.2	12.2	14.1R4, 14.2R3 with Junos Continu ity  15.1	12.2	12.2	12.2	12.2	12.2	14.1R4, 14.2R3 with Junos Continu ity  15.1

Table 69: MIC/MPC2 Compatibility (Continued)

MIC Name	MPC2	MPC2E	MPC2E -3D-NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E -3D- NG-Q
MIC-3D-4CH OC3-2CHOC 12, MIC-3D-8CH OC3-4CHOC 12  MIC-4COC3- 2COC12-G, MIC-8COC3- 4COC12-G  <i>(Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)</i>	—	—	15.1 with flexible queuing option	11.4	11.4	11.4	11.4	—	15.1  14.1R4, 14.2R3 with Junos Continu ity
MIC-3D-16C HE1-T1-CE  <i>(Channelized E1/T1 Circuit Emulation MIC)</i>	13.2  <b>NOTE:</b> Support for Non- Channelized MIC only.		15.1 with flexible queuing option	12.3	12.3	12.3	12.3	—	14.1R4, 14.2R3 with Junos Continu ity  15.1

Table 69: MIC/MPC2 Compatibility (Continued)

MIC Name	MPC2	MPC2E	MPC2E -3D-NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E -3D- NG-Q
MIC-3D-8DS 3-E3, MIC-3D-8CH DS3-E3-B  <i>(DS3/E3 MIC)</i>  <b>NOTE:</b> You cannot run Channelize d DS3 (MIC-3D-8 CHDS3- E3) on non-Q MPCs. Channelize d DS3 is supported only on Q and EQ- based MPCs.	11.4	11.4	14.1R4, 14.2R3 with Junos Continu ity  15.1	11.4	11.4	11.4	11.4	12.2	14.1R4, 14.2R3 with Junos Continu ity  15.1
MS-MIC-16G  <i>(Multiservice MIC)</i>  <b>NOTE:</b> Only one MS- MIC-16G can be installed into any MPC.	13.2	13.2	14.1R4, 14.2R3 with Junos Continu ity  15.1	13.2	13.2	13.2	13.2	13.2	14.1R4, 14.2R3 with Junos Continu ity  15.1

Table 69: MIC/MPC2 Compatibility (Continued)

MIC Name	MPC2	MPC2E	MPC2E -3D-NG	MPC2 Q	MPC2E Q	MPC2 EQ	MPC2E EQ	MPC2E P	MPC2E -3D- NG-Q
MIC- MACSEC-20 GE <i>Gigabit Ethernet MIC with 256b- AES MACsec</i>	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1	18.3R1

Table 70: MIC/MPC3 Compatibility

MIC Name	MPC3E	MPC3E-3D-NG	MPC3E-3D-NG-Q
MIC-3D-8OC3-2OC12-ATM ( <i>ATM MIC with SFP</i> )	—	14.1R4, 14.2R3 with Junos Continuity  15.1	14.1R4, 14.2R3 with Junos Continuity  15.1
MIC-3D-20GE-SFP ( <i>Gigabit Ethernet MIC with SFP</i> )	12.1	14.1R4, 14.2R3 with Junos Continuity  15.1	14.1R4, 14.2R3 with Junos Continuity  15.1
MIC-3D-20GE-SFP-E ( <i>Gigabit Ethernet MIC with SFP (E)</i> )	13.2R2	14.1R4, 14.2R3 with Junos Continuity  15.1	14.1R4, 14.2R3 with Junos Continuity  15.1
MIC3-3D-1X100GE-CFP ( <i>100-Gigabit Ethernet MIC with CFP</i> )	12.1	14.1R4, 14.2R3 with Junos Continuity  15.1	14.1R4, 14.2R3 with Junos Continuity  15.1
MIC-3D-2XGE-XFP ( <i>10-Gigabit Ethernet MICs with XFP</i> )	12.2	14.1R4, 14.2R3 with Junos Continuity  15.1	14.1R4, 14.2R3 with Junos Continuity  15.1

Table 70: MIC/MPC3 Compatibility (Continued)

MIC Name	MPC3E	MPC3E-3D-NG	MPC3E-3D-NG-Q
MIC-3D-4XGE-XFP (10-Gigabit Ethernet MICs with XFP)	—	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-10GE-SFP-E 1-Gigabit/10-Gigabit Ethernet MIC with SFP+ (10 Ports)	—	24.2	24.2
MIC3-3D-10XGE-SFPP (10-Gigabit Ethernet MIC with SFP+ (10 Ports))	12.3	14.1R4, 14.2 R3 and Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-2X40GE-QSFPP (40-Gigabit Ethernet MIC with QSFP+)	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-3D-1X100GE-CXP (100-Gigabit Ethernet MIC with CXP)	12.2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC3-100G-DWDM (100-Gigabit DWDM OTN MIC with CFP2-ACO)	15.1F515.1F617.1R1	15.1F515.1F617.1R1	15.1F515.1F617.1R1
MIC-3D-4OC3OC12-1OC48 MIC-3D-8OC3OC12-4OC48 (SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP)	13.3	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1

Table 70: MIC/MPC3 Compatibility (Continued)

MIC Name	MPC3E	MPC3E-3D-NG	MPC3E-3D-NG-Q
MIC-3D-1OC192-XFP ( <i>SONET/SDH OC192/STM64 MIC with XFP</i> )	13.3	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4COC3-1COC12-CE ( <i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i> )	—	—	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-16CHE1-T1-CE ( <i>Channelized E1/T1 Circuit Emulation MIC</i> )	—	15.1 with flexible queuing option	15.1
MS-MIC-16G ( <i>Multiservices MIC</i> )  <b>NOTE:</b> On MPC3E, the installation of the Multiservices MIC (MS-MIC-16G) with MIC3-3D-2X40GE-QSFPP, MIC3-3D-10XGE-SFPP, or MIC3-3D-1X100GE-CFP does not meet the NEBS criteria.  <b>NOTE:</b> Only one MS-MIC-16G can be installed into any MPC.	13.2R2	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-40GE-TX ( <i>Tri-Rate MIC</i> )	—	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1
MIC-3D-4OC3OC12-1OC48, MIC-3D-8OC3OC12-4OC48 ( <i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i> )	12.1	14.1R4, 14.2R3 with Junos Continuity 15.1	14.1R4, 14.2R3 with Junos Continuity 15.1



Table 70: MIC/MPC3 Compatibility (Continued)

MIC Name	MPC3E	MPC3E-3D-NG	MPC3E-3D-NG-Q
MIC-3D-4CHOC3-2CHOC12, MIC-3D-8CHOC3-4CHOC12 MIC-4COC3-2COC12-G, MIC-8COC3-4COC12-G <i>Channelized SONET/SDH OC3/ STM1 (Multi-Rate) MICs with SFP</i>	—	15.1 with flexible queuing option	14.1R4, 14.2R3 with Junos Continuity  15.1
MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B <i>DS3/E3 MIC</i>  <b>NOTE:</b> You cannot run Channelized DS3 (MIC-3D-8CHDS3-E3) on non-Q MPCs. Channelized DS3 is supported only on Q and EQ- based MPCs.	12.1	14.1R4, 14.2R3 with Junos Continuity  15.1	14.1R4, 14.2R3 with Junos Continuity  15.1
MIC-MACSEC-20GE <i>Gigabit Ethernet MIC with 256b-AES MACsec</i>	18.3R1	18.3R1	18.3R1

Table 71: MIC/MPC6 Compatibility

MIC Name	MPC6E
MIC6-10G <i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	13.3R2
MIC6-10G-OTN <i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	13.3R3
MIC6-100G-CXP <i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	13.3R2

Table 71: MIC/MPC6 Compatibility (Continued)

MIC Name	MPC6E
MIC6-100G-CFP2 <i>100-Gigabit Ethernet MIC with CFP2</i>	13.3R3

Table 72: MIC/MPC8 Compatibility

MIC Name	MPC8E
MIC-MRATE <i>MIC MRATE</i>	15.1F5 with Junos Continuity 16.1R1
MIC-MACSEC-MRATE <i>Multi-Rate Ethernet MIC</i>	17.4

Table 73: MIC/MPC9 Compatibility

MIC Name	MPC9E
MIC-MRATE <i>MIC MRATE</i>	15.1F5 with Junos Continuity 16.1R1
MIC-MACSEC-MRATE <i>Multi-Rate Ethernet MIC</i>	17.4

Table 74: MIC/MPC10003 Compatibility

MIC Name	MPC10003
JNP-MIC1 <i>Multi-Rate Ethernet MIC</i>	17.3

Table 74: MIC/MPC10003 Compatibility (*Continued*)

MIC Name	MPC10003
JNP-MIC1-MACSEC <i>Multi-Rate Ethernet MIC</i>	17.3R2

## MX240 Modular Interface Card (MIC) Description

Modular Interface Cards (MICs) install into Modular Port Concentrators (MPCs) and provide the physical connections to various network media types. MICs allow different physical interfaces to be supported on a single line card. You can install MICs of different media types on the same router as long as the router supports those MICs.

MICs receive incoming packets from the network and transmit outgoing packets to the network. During this process, each MIC performs framing and high-speed signaling for its media type. Before transmitting outgoing data packets through the MIC interfaces, the MPCs encapsulate the packets received.

MICs are hot-removable and hot-insertable. You can install up to two MICs in the slots in each MPC.

## SEE ALSO

[MICs Supported by MX Series Routers | 155](#)

[MX240 Modular Interface Card \(MIC\) LEDs | 169](#)

[Replacing an MX240 MIC | 375](#)

[Maintaining MX240 MICs | 380](#)

## MICs Supported by MX Series Routers

The following tables list the first supported Junos OS release for the MX Series.

- [Table 75 on page 156](#) lists the first supported Junos OS release for MICs on MX240, MX480, MX960, and MX2008 routers.
- [Table 76 on page 160](#) lists the first supported Junos OS release for MICs on MX2010 and MX2020 routers.
- [Table 77 on page 163](#) list the first supported Junos OS release for MICs on MX5, MX10, and MX40 routers.
- [Table 78 on page 166](#) lists the first supported Junos OS release for MICs on MX80 and MX104 routers.

- [Table 79 on page 169](#) lists the first supported Junos OS release for MICs on MX10003 router.

**Table 75: MICs Supported by MX240, MX480, MX960, and MX2008 Routers**

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
<b>ATM</b>				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC 12-ATM	8	12.1	15.1F7
<b>DS3/E3</b>				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3,  MIC-3D-8CHDS3- E3-B	8	11.4	15.1F7
<b>Circuit Emulation</b>				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1- T1-CE	16	12.3	15.1F7
<b>Gigabit Ethernet</b>				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	10.1	15.1F7
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP- E	20	13.3	15.1F7
<i>Gigabit Ethernet MIC with 256b-AES MACsec</i>	MIC- MACSEC-20GE	20	18.3	—
<b>10-Gigabit Ethernet</b>				

Table 75: MICs Supported by MX240, MX480, MX960, and MX2008 Routers *(Continued)*

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	10.2	15.1F7
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-4XGE-XFP	4	10.1	15.1F7
<i>1-Gigabit/10- Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC-3D-10GE-SFP- E	10	24.2	—
<i>10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC3-3D-10XGE- SFPP	10	12.3	15.1F7
<i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	MIC6-10G	24	—	15.1F7
<i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	MIC6-10G-OTN	24	—	15.1F7
<b>40-Gigabit Ethernet</b>				
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE- QSFP	2	12.2	15.1F7
<b>100-Gigabit Ethernet</b>				
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE -CFP	1	12.1	15.1F7

Table 75: MICs Supported by MX240, MX480, MX960, and MX2008 Routers *(Continued)*

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	1	12.2	15.1F7
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	4	—	15.1F7
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	2	—	15.1F7
<b>100-Gigabit DWDM OTN</b>				
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	1	15.1F5 15.1F6 17.1R1	15.1F7
<b>Multi-Rate</b>				
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC1-2-1OC48	4	11.2	15.1F7
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC1-2-4OC48	8	11.2	15.1F7
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2-CHOC12	4	11.4	15.1F7

Table 75: MICs Supported by MX240, MX480, MX960, and MX2008 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX240, MX480, and MX960 Routers	MX2008 Routers
<i>Channelized SONET/SDH OC3/ STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4 CHOC12	8	11.4	15.1F7
<i>Channelized OC3/ STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1C OC12-CE	4	12.2	15.1F7
<i>MIC MRATE</i> (12- Port Multi-Rate MIC with QSFP+)	MIC-MRATE	12	—	15.1F7
<i>Multi-Rate Ethernet MIC</i> (12-Port Multi- Rate MACsec MIC with QSFP+)	MIC-MACSEC- MRATE	12	—	17.4
<b>Tri-Rate</b>				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	10.2	15.1F7
<b>Services</b>				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	15.1F7
<b>SONET/SDH</b>				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192- XFP	1	12.2	15.1F7

Table 76: MICs Supported by MX2010 and MX2020 Routers

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<b>ATM</b>				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2 OC12-ATM	8	12.3	12.3
<b>DS3/E3</b>				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	12.3	12.3
<b>Circuit Emulation</b>				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	—	—
<b>Gigabit Ethernet</b>				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	12.3	12.3
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.3	13.3
<b>10-Gigabit Ethernet</b>				
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	12.3	12.3
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-4XGE-XFP	4	12.3	12.3



Table 76: MICs Supported by MX2010 and MX2020 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<i>1-Gigabit/10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC-3D-10GE-SFP-E	10	24.2	24.2
<i>10-Gigabit Ethernet MIC with SFP+ (10 Ports)</i>	MIC3-3D-10XGE-SFPP	10	12.3	12.3
<i>10-Gigabit Ethernet MIC with SFP+ (24 Ports)</i>	MIC6-10G	24	13.3R2	13.3R2
<i>10-Gigabit Ethernet OTN MIC with SFP+ (24 Ports)</i>	MIC6-10G-OTN	24	13.3R3	13.3R3
<b>40-Gigabit Ethernet</b>				
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40G E-QSFPP	2	12.3	12.3
<b>100-Gigabit Ethernet</b>				
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100 GE-CFP	1	12.3	12.3
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100 GE-CXP	1	12.3	12.3
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	4	13.3R2	13.3R2
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	2	13.3R3	13.3R3
<b>100-Gigabit DWDM OTN</b>				

Table 76: MICs Supported by MX2010 and MX2020 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<i>100-Gigabit DWDM OTN MIC with CFP2-ACO</i>	MIC3-100G-DWDM	1	15.1F515.1F617.1R1	15.1F515.1F617.1R1
<b>Multi-Rate</b>				
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC12-1OC48	4	12.3	12.3
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC12-4OC48	8	12.3	12.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2CHOC12	4	12.3	12.3
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4CHOC12	8	12.3	12.3
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.3	12.3
<i>MIC MRATE</i> (12-Port Multi-Rate MIC with QSFP+)	MIC-MRATE	12	15.1F5 with Junos Continuity 16.1R1 and later	15.1F5 with Junos Continuity 16.1R1 and later
<i>Multi-Rate Ethernet MIC</i> (12-Port Multi-Rate MACsec MIC with QSFP+)	MIC-MACSEC-MRATE	12	17.4	17.4
<b>Tri-Rate</b>				

Table 76: MICs Supported by MX2010 and MX2020 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX2010 Routers	MX2020 Routers
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	12.3	12.3
<b>Services</b>				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	13.2
<b>SONET/SDH</b>				
<i>SONET/SDH OC192/ STM64 MIC with XFP</i>	MIC-3D-1OC192-XFP	1	12.3	12.3

Table 77: MICs Supported by MX5, MX10, and MX40 Routers

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
<b>ATM</b>					
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC12-ATM	8	12.1	12.1	12.1
<b>DS3/E3</b>					
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3-E3-B	8	11.4	11.4	11.4
<b>Circuit Emulation</b>					
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	16	13.2R2	13.2R2	13.2R2

Table 77: MICs Supported by MX5, MX10, and MX40 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
<i>Channelized E1/T1 Circuit Emulation MIC (H)</i>	MIC-3D-16CHE 1-T1-CE-H	16	—	—	—
<b>Gigabit Ethernet</b>					
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	11.2R4	11.2R4	11.2R4
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.2R2	13.2R2	13.2R2
<i>Gigabit Ethernet MIC with SFP (EH)</i>	MIC-3D-20GE-SFP-EH	20	—	—	—
<b>10-Gigabit Ethernet</b>					
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	11.2R4	11.2R4	11.2R4
<b>Multi-Rate</b>					
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3 OC12-1OC48	4	11.2R4	11.2R4	11.2R4
<i>SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3 OC12-4OC48	8	11.2R4	11.2R4	11.2R4

Table 77: MICs Supported by MX5, MX10, and MX40 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHO C3-2CHOC12	4	11.4	11.4	11.4
<i>Channelized SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHO C3-4CHOC12	8	11.4	11.4	11.4
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	4	12.2	12.2	12.2
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H)</i>	MIC-4COC3-1C OC12-CE-H	—	—	—	—
<b>Tri-Rate</b>					
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	—	11.2R4	11.2R4
<b>Services</b>					
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2 Rear slot only.	13.2 Rear slot only.	13.2 Rear slot only.

Table 77: MICs Supported by MX5, MX10, and MX40 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX5	MX10	MX40
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC19 2-XFP	1	12.2	12.2	12.2

Table 78: MICs Supported by MX80 and MX104 Routers

MIC Name	MIC Model Number	Ports	MX80	MX104
<b>ATM</b>				
<i>ATM MIC with SFP</i>	MIC-3D-8OC3-2OC 12-ATM	8	12.1	13.3
<b>DS3/E3</b>				
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3, MIC-3D-8CHDS3- E3-B	8	11.4	13.3
<b>Circuit Emulation</b>				
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1- T1-CE	16	13.2R2	13.2R2
<i>Channelized E1/T1 Circuit Emulation MIC (H)</i>	MIC-3D-16CHE1- T1-CE-H	16	—	13.2R2
<b>Gigabit Ethernet</b>				
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20GE-SFP	20	10.2	13.2R2

Table 78: MICs Supported by MX80 and MX104 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX80	MX104
<i>Gigabit Ethernet MIC with SFP (E)</i>	MIC-3D-20GE-SFP-E	20	13.2R2	13.2R2
<i>Gigabit Ethernet MIC with SFP (EH)</i>	MIC-3D-20GE-SFP-EH	20	—	13.2R2
<i>Gigabit Ethernet MIC with 256b-AES MACsec</i>	MIC- MACSEC-20GE	20	18.3	18.3
<i>10-Gigabit Ethernet MICs with XFP</i>	MIC-3D-2XGE-XFP	2	10.2	13.2R2
<b>Multi-Rate</b>				
<i>SONET/SDH OC3/ STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4OC3OC1 2-1OC48	4	11.2	13.3
<i>SONET/SDH OC3/ STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8OC3OC1 2-4OC48	8	11.2	13.3
<i>Channelized SONET/SDH OC3/ STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-4CHOC3-2 CHOC12	4	11.4	13.3
<i>Channelized SONET/SDH OC3/ STM1 (Multi-Rate) MICs with SFP</i>	MIC-3D-8CHOC3-4 CHOC12	8	11.4	13.3

Table 78: MICs Supported by MX80 and MX104 Routers (*Continued*)

MIC Name	MIC Model Number	Ports	MX80	MX104
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1C OC12-CE	4	12.2	13.2R2
<i>Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP (H)</i>	MIC-4COC3-1COC 12-CE-H	—	—	13.2R2
<b>Tri-Rate</b>				
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	40	10.2	13.2R2
<b>Services</b>				
<i>Multiservices MIC</i>	MS-MIC-16G	0	13.2	13.3R2
			Rear slot only. Supported on the modular MX80 and fixed MX80-48T	<b>NOTE:</b> Starting From Junos OS 13.3R3, 14.1R2, and 14.2R1, MX104 supports only two Multiservices MICs.
<b>SONET/SDH</b>				
<i>SONET/SDH OC192/STM64 MIC with XFP</i>	MIC-3D-1OC192- XFP	1	12.2	13.3



Table 79: MICs Supported by MX10003 Router

MIC Name	MIC Model Number	Ports	MX10003
<b>Multi-Rate</b>			
<a href="#">MIC MRATE</a> (12-Port Multi-Rate MIC with QSFP+)	JNP-MIC1	12	17.3
<a href="#">Multi-Rate Ethernet MIC</a> (12-Port Multi-Rate MACsec MIC with QSFP+)	JNP-MIC1-MACSEC	12	17.3R2

SEE ALSO

<a href="#">MX Series MIC Overview</a>
<a href="#">MIC/MPC Compatibility</a>

MX240 Modular Interface Card (MIC) LEDs

Each MIC has LEDs located on the faceplate. For more information about LEDs on the MIC faceplate, see the “LEDs” section for each MIC in the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

SEE ALSO

<a href="#">MICs Supported by MX Series Routers   155</a>
<a href="#">MX240 Modular Interface Card (MIC) Description   155</a>
<a href="#">Maintaining MX240 MICs   380</a>
<a href="#">Troubleshooting the MX240 MICs   475</a>
<a href="#">Replacing an MX240 MIC   375</a>

MX240 MIC Port and Interface Numbering

Each port on a MIC corresponds to a unique interface name in the CLI.



**NOTE:** Fixed configuration MPCs, that is, MPCs with built-in MICs follow the port numbering of DPCs.

In the syntax of an interface name, a hyphen (-) separates the media type from the *MPC* number (represented as an *FPC* in the CLI). The MPC slot number corresponds to the first number in the interface. The second number in the interface corresponds to the logical PIC number. The last number in the interface matches the port number on the MIC. Slashes (/) separate the MPC number from the logical PIC number and port number:

*type-fpc/pic/port*

- *type*—Media type, which identifies the network device. For example:

- *ge*—Gigabit Ethernet interface
- *so*—SONET/SDH interface
- *xe*—10-Gigabit Ethernet interface

For a complete list of media types, see [Interface Naming Overview](#).

- *fpc*—Slot in which the MPC is installed. On the MX240 router, the MPCs are represented in the CLI as FPC 0 through FPC 2.
- *pic*—Logical PIC on the *MIC*, numbered 0 or 1 when installed in slot 0, and 2 or 3 when installed in slot 1. The number of logical PICs varies depending on the type of MIC. For example, a:
  - 20-port Gigabit Ethernet MIC has two logical PICs, numbered 0 and 1 when installed in slot 0, or 2 and 3 when installed in slot 1.
  - 4-port 10-Gigabit Ethernet MIC has two logical PICs numbered 0 and 1 when installed in slot 0, or 2 and 3 when installed in slot 1.
  - 100-Gigabit Ethernet MIC with CFP has one logical PIC numbered 0 when installed in slot 0, or 2 when installed in slot 1.

For more information on specific MICs, see MICs Supported by MX Series Routers in the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

- *port*—Port number.



**NOTE:** The MIC number is not included in the interface name.


The MX240 router supports up to three MPCs that install horizontally and are numbered from bottom to top. Each MPC accepts up to two MICs.

Figure 44 on page 171 shows an example of a 20-port Gigabit Ethernet MIC with SFP installed in slot 0 of an MPC in slot 2.



**NOTE:** The 20-port Gigabit Ethernet MIC with SFP-E has a different port numbering. See [Gigabit Ethernet MIC with SFP \(E\)](#)

Figure 44: MX240 MIC Interface Port Mapping

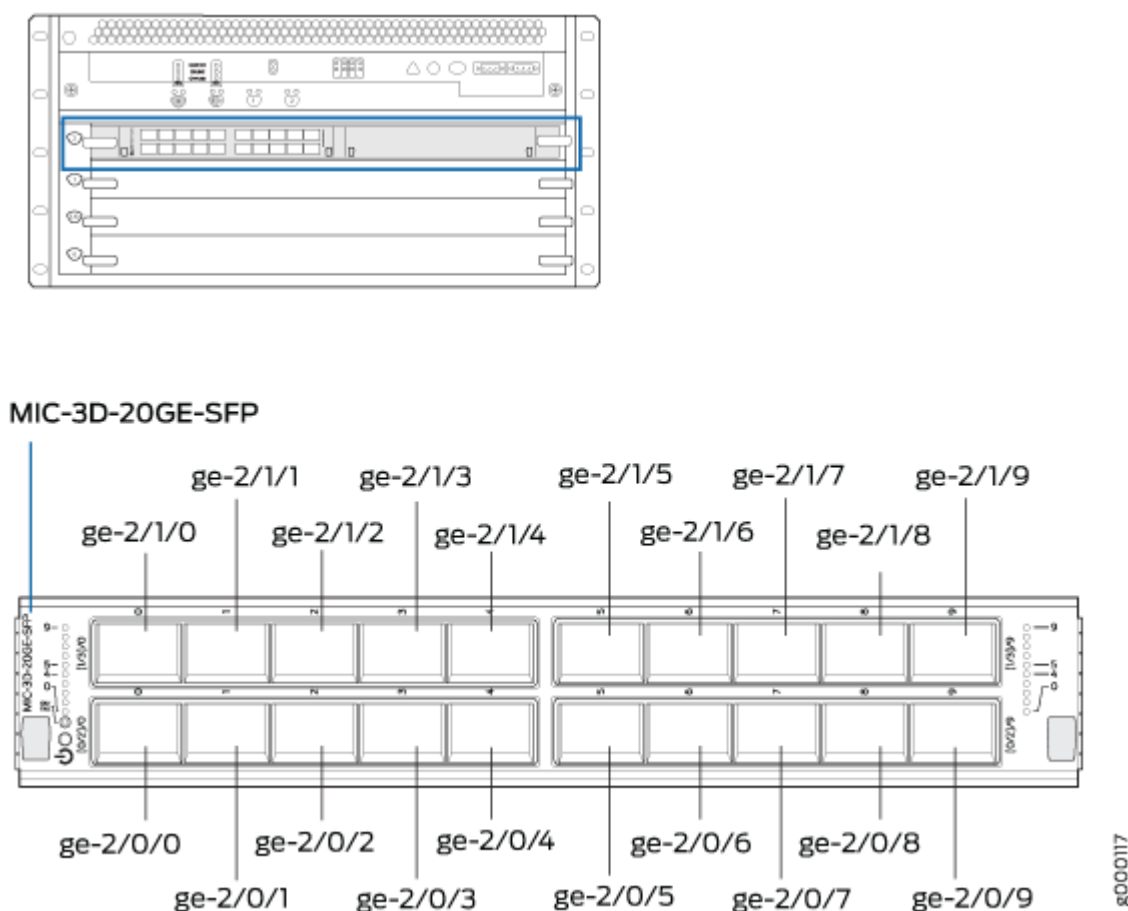

The MIC contains two logical PICs, numbered PIC 0 through PIC 1 in the CLI. Each logical PIC contains 10 ports numbered 0 through 9.

The `show chassis hardware` command output displays a 20-port Gigabit Ethernet MIC with SFP — **3D 20x 1GE(LAN) SFP** — installed in slot 0 of an MPC in slot 2. The MPC (**MPC Type 2 3D EQ**) is shown as FPC 2 in the CLI. The MIC's two logical PICs — 10x 1GE(LAN) SFP — are shown as PIC 0 and PIC 1.

```
user@host> show chassis hardware
```

```
...
FPC 2          REV 28   750-031090   YH8181          MPC Type 2 3D EQ
  CPU          REV 06   711-030884   YH9437          MPC PMB 2G
  MIC 0        REV 22   750-028392   YD0439          3D 20x 1GE(LAN) SFP
    PIC 0              BUILTIN   BUILTIN         10x 1GE(LAN) SFP
      Xcvr 0    REV 01   740-011613   PCE14D5         SFP-SX
      Xcvr 1    REV 01   740-011782   P9C280T         SFP-SX
      Xcvr 2    REV 01   740-011782   P9C2512         SFP-SX
      Xcvr 3    REV 02   740-011613   AM0951SFF3Z     SFP-SX
      Xcvr 4    REV 02   740-011613   AM0951SFF33     SFP-SX
      Xcvr 5    REV 02   740-011613   AM0951SFF3Y     SFP-SX
      Xcvr 6    REV 02   740-011613   AM0951SFF4B     SFP-SX
      Xcvr 7    REV 01   740-011613   E08H01273       SFP-SX
      Xcvr 8    REV 02   740-011613   AM0951SFFWK     SFP-SX
    PIC 1              BUILTIN   BUILTIN         10x 1GE(LAN) SFP
      Xcvr 0    REV 01   740-011613   E08H00516       SFP-SX
      Xcvr 1    REV 01   740-011613   E08G03648       SFP-SX
      Xcvr 2    REV 01   740-011613   E08H00514       SFP-SX
...
```

The `show interfaces terse` command output displays the Gigabit Ethernet interfaces that correspond to the 20 ports located on the MIC.

```
user@host> show interfaces terse ge-2*
```

Interface	Admin	Link	Proto	Local	Remote
ge-2/0/0	up	down			
ge-2/0/1	up	down			
ge-2/0/2	up	down			
ge-2/0/3	up	up			
ge-2/0/4	up	up			
ge-2/0/5	up	up			
ge-2/0/6	up	up			
ge-2/0/7	up	up			
ge-2/0/8	up	up			
ge-2/0/9	up	down			
ge-2/1/0	up	up			
ge-2/1/1	up	up			
ge-2/1/2	up	up			

ge-2/1/3	up	down
ge-2/1/4	up	down
ge-2/1/5	up	down
ge-2/1/6	up	down
ge-2/1/7	up	down
ge-2/1/8	up	down
ge-2/1/9	up	down

SEE ALSO

| [MX240 Router Hardware and CLI Terminology Mapping](#) | 22

MX240 Modular Port Concentrator (MPC) Description

IN THIS SECTION

- [MPC Components](#) | 175

Modular Port Concentrators (MPCs) provide packet forwarding services. The MPCs are inserted into a slot in a router. Modular Interface Cards (MICs) provide the physical interfaces and install into the MPCs. You can install up to two MICs of different media types on the same router as long as the router supports those MICs.

A specialized fixed configuration MPC provides higher port density over MICs and combines packet forwarding and Ethernet interfaces onto a single line card. The fixed configuration MPC is inserted into a slot in a router and contains no slots for MICs.

MICs receive incoming packets from the network and transmit outgoing packets to the network. During this process, each MIC performs framing and high-speed signaling for its media type. Before transmitting outgoing data packets through the MIC interfaces, the MPCs encapsulate the packets received. Each MPC is equipped with up to four Junos Trio chipsets, which perform control functions tailored to the MPC's media type. The MPCs interface with the power supplies and Switch Control Boards (SCBs). You must install redundant SCBs to support full line-rate.

The MX240 router supports up to three MPCs. You must install a high-capacity fan tray to use an MPC. For power requirements, see "[Calculating Power Requirements for MX240 Routers](#)" on page 230.

The router has two dedicated line card slots for DPCs, MPCs, or FPCs. MPCs install horizontally in the front of the router (see [Figure 45 on page 174](#)). One multifunction slot numbered **1/0** supports either one line card or one SCB. The line card slots are numbered **1/0**, **1**, and **2**, bottom to top. An MPC can be

installed in any slot on the router that supports MPCs. You can install any combination of line card types in the router.

When a slot is not occupied by an MPC or other line card, you must insert a blank DPC panel to fill the empty slot and ensure proper cooling of the system.

MPCs are hot-removable and hot-insertable. When you install an MPC in an operating router, the Routing Engine downloads the MPC software, the MPC runs its diagnostics, and the Packet Forwarding Engines housed on the MPC are enabled. Forwarding on other MPCs continues uninterrupted during this process.

[Figure 45 on page 174](#) shows a typical MPC supported on the MX240 router. [Figure 46 on page 175](#) shows an MPC installed horizontally in the MX240 Router. For more information about MPCs, see the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

**Figure 45: Typical MPC Supported on the MX240 Router**


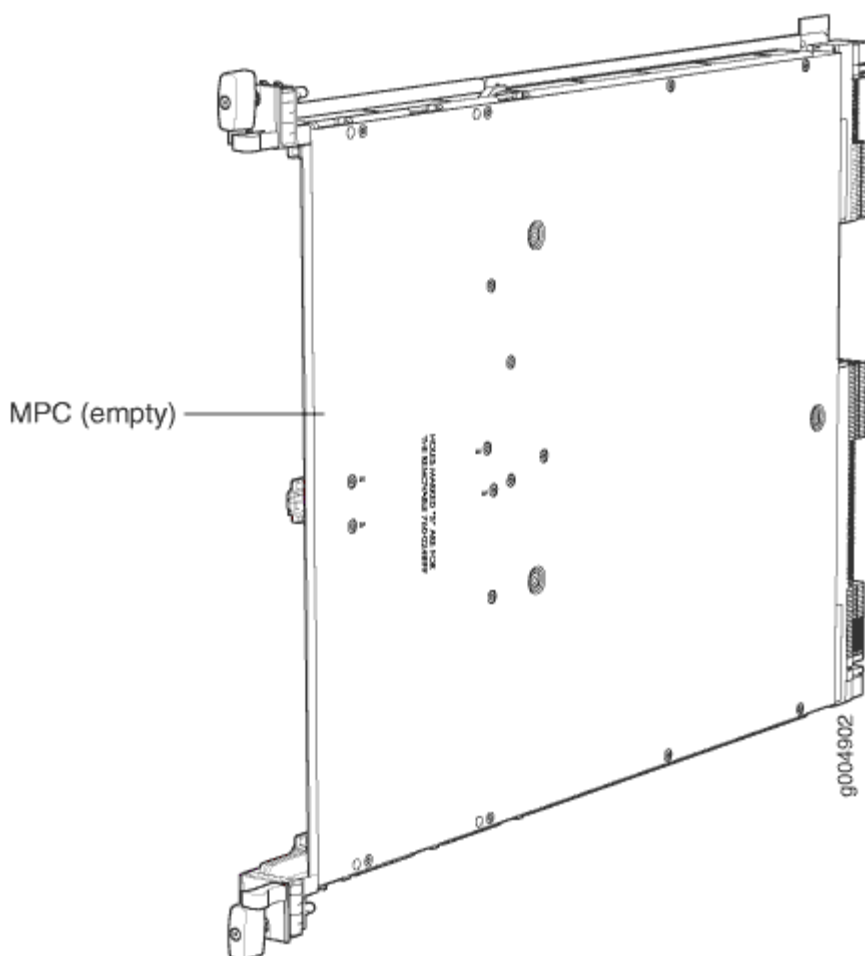


Figure 46: MPC Installed Horizontally in the MX240 Router

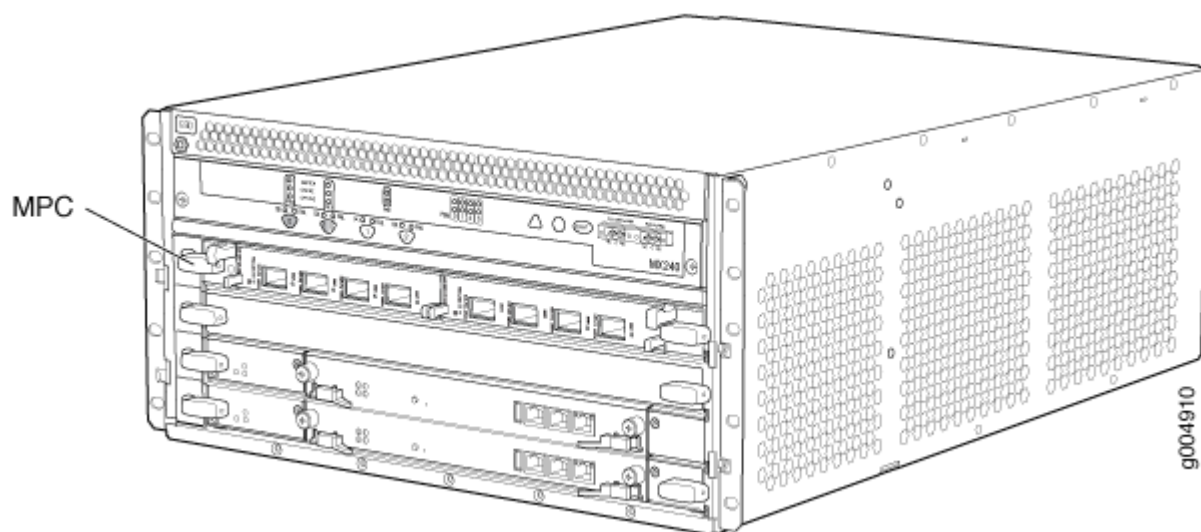

### MPC Components

Each MPC consists of the following components:

- MPC card carrier, which includes two MIC slots (excludes the fixed configuration MPC).
- Fabric interfaces.
- Two Gigabit Ethernet interfaces that allow control information, route information, and statistics to be sent between the Routing Engine and the CPU on the MPCs.
- Two interfaces from the SCBs that enable the MPCs to be powered on and controlled.
- Physical MPC connectors.
- Up to four Junos Trio chipsets, which perform control functions tailored to the MPC's media type.
- Midplane connectors and power circuitry.
- Processor subsystem, which includes a 1.5-GHz CPU, system controller, and 1 GB of SDRAM.
- Online button which takes the MPC online or offline when pressed.
- **OK/Fail** LED on the MPC faceplate. For more information about LEDs on the MPC faceplate, see the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

Two LEDs, located on the craft interface above the MPC, display the status of the line cards and are labeled **OK** and **FAIL**.

## SEE ALSO

---

[MX240 Modular Port Concentrator \(MPC\) LEDs | 176](#)

---

[MX240 Field-Replaceable Units \(FRUs\) | 305](#)

---

[Replacing an MX240 MPC | 388](#)

---

## MX240 Modular Port Concentrator (MPC) LEDs

Two LEDs, located on the craft interface above the MPC, display the status of the line cards and are labeled **OK** and **FAIL**. For more information about the line card LEDs on the craft interface, see "[MX240 Component LEDs on the Craft Interface](#)" on page 27.

Each MPC also has LEDs located on the faceplate. For more information about LEDs on the MPC faceplate, see the "LEDs" section for each MPC in the [MX Series 5G Universal Routing Platform Interface Module Reference](#).

## SEE ALSO

---

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

---

[Maintaining MX240 MPCs | 385](#)

---

[Troubleshooting the MX240 MPCs | 476](#)

---

[Replacing an MX240 MPC | 388](#)

---

## MPCs Supported by MX Series Routers

[MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers on page 177](#) lists the MPCs and their first supported Junos OS release on MX240, MX480, MX960, MX10003, MX10004, and MX10016, MX2008, MX2010, and MX2020 routers.



**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
----------	------------------	---	---	---	---	---	--	--	--

#### Fixed Configuration MPCs

<a href="#">MPC-3D-16XGE-SFPP</a>	MPC-3D-16XGE-SFP	10.0R2	-	-	-	15.1F7	12.3	12.3
<a href="#">Multiservices MPC</a>	MS-MPC	13.2R4	-	-	-	15.1F7	15.1	15.1
<a href="#">32x10GE MPC4E</a>	MPC4E-3D-32XGE-SFPP	12.3R2	-	-	-	15.1F7	12.3R2	12.3R2
<a href="#">2x100GE + 8x10GE MPC4E</a>	MPC4E-3D-2CGE-8XGE	12.3R2	-	-	-	15.1F7	12.3R2	12.3R2
<a href="#">6x40GE + 24x10GE MPC5E</a>	MPC5E-40G10G	13.3R2	-	-	-	15.1F7	13.3R2	13.3R2
<a href="#">6x40GE + 24x10GE MPC5EQ</a>	MPC5EQ-40G10G	13.3R2	-	-	-	15.1F7	13.3R2	13.3R2

**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
<a href="#">2x100GE + 4x10GE MPC5E</a>	MPC5E-100G10G	13.3R3	-	-	-		15.1F7	13.3R3	13.3R3
<a href="#">2x100GE + 4x10GE MPC5EQ</a>	MPC5EQ-100G10G	13.3R3	-	-	-		15.1F7	13.3R3	13.3R3
<a href="#">MPC7E-MRATE</a>	MPC7E-MRATE	<ul style="list-style-type: none"> <li>15.1F4 with Junos Continuity</li> <li>16.1R1 and later</li> </ul>	-	-	-		15.1F7	<ul style="list-style-type: none"> <li>15.1F4 with Junos Continuity</li> <li>16.1R1 and later</li> </ul>	<ul style="list-style-type: none"> <li>15.1F4 with Junos Continuity</li> <li>16.1R1 and later</li> </ul>

**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
<a href="#">MPC7E-1 OG</a>	MPC7E-1 OG	<ul style="list-style-type: none"> <li>15.1F5 with Junos Continuity</li> <li>16.1R1 and later</li> </ul>	-	-	-	-	15.1F7	<ul style="list-style-type: none"> <li>15.1F5 with Junos Continuity</li> <li>16.1R1 and later</li> </ul>	<ul style="list-style-type: none"> <li>15.1F5 with Junos Continuity</li> <li>16.1R1 and later</li> </ul>
<a href="#">MPC10E-10C-MRATE</a>	MPC10E-10C-MRATE	19.2R1	-	-	-	-	-	-	-
<a href="#">MPC10E-15C-MRATE</a>	MPC10E-15C-MRATE	19.1R1	-	-	-	-	-	-	-

Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
<a href="#">MX2K-MPC11E Modular Port Concentrator</a>	MX2K-MPC11E	-	-	-	-	-	<ul style="list-style-type: none"><li>• 19.3 R2 and later 19.3 releases</li><li>• 20.1 R1</li></ul>	<ul style="list-style-type: none"><li>• 19.3 R2 and later 19.3 releases</li><li>• 20.1 R1</li></ul>	<ul style="list-style-type: none"><li>• 19.3 R2 and later 19.3 releases</li><li>• 20.1 R1</li></ul>

**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
								C is n ot su p p or te d in a n y 1 9. 4 re le as es .	C is n ot su p p or te d in a n y 1 9. 4 re le as es .
<i>MPC1</i>	MX-MPC1-3D	10.2	<b>MPCs</b>				15.1F7	12.3	12.3
<i>MPC1E</i>	MX-MPC1E-3D	11.2R4	-		-		15.1F7	12.3	12.3

**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
<i>MPC1 Q</i>	MX-MPC1-3D-Q	10.2	-	-	-	-	15.1F7	12.3	12.3
<i>MPC1E Q</i>	MX-MPC1E-3D-Q	11.2R4	-	-	-	-	15.1F7	12.3	12.3
<i>MPC2</i>	MX-MPC2-3D	10.1	-	-	-	-	15.1F7	12.3	12.3
<i>MPC2E</i>	MX-MPC2E-3D	11.2R4	-	-	-	-	15.1F7	12.3	12.3
<i>MPC2 Q</i>	MX-MPC2-3D-Q	10.1	-	-	-	-	15.1F7	12.3	12.3
<i>MPC2E Q</i>	MX-MPC2E-3D-Q	11.2R4	-	-	-	-	15.1F7	12.3	12.3
<i>MPC2 EQ</i>	MX-MPC2-3D-EQ	10.1	-	-	-	-	15.1F7	12.3	12.3

**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
<i>MPC2E EQ</i>	MX-MPC2E-3 D-EQ	11.2R4	-	-		15.1F7	12.3	12.3
<i>MPC2E P</i>	MX-MPC2E-3 D-P	12.2	-	-		15.1F7	12.3	12.3
<i>MPC2E NG</i>	MX-MPC2E-3 D-NG	14.1R4, 14.2R3 and Junos Continuity 15.1	-	-		15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1
<i>MPC2E NG Q</i>	MX-MPC2E-3 D-NG-Q	14.1R4, 14.2R3 and Junos Continuity 15.1	-	-		15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1
<i>MPC3E D</i>	MX-MPC3E-3 D	12.1	-	-		15.1F7	12.3	12.3

**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
<i>MPC3E-3 D-NG</i>	MX-MPC3E-3 D-NG	14.1R4, 14.2R3 and Junos Continuity 15.1	-	-	-		15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1
<i>MPC3E-3 D-NG-Q</i>	MX-MPC3E-3 D-NG-Q	14.1R4, 14.2R3 and Junos Continuity 15.1	-	-	-		15.1F7	14.1R4, 14.2R3 and Junos Continuity 15.1	14.1R4, 14.2R3 and Junos Continuity 15.1
<i>MPC6E</i>	MX2K-MPC6E	-	-	-	-		15.1F7	13.3R2	13.3R2



**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
<i>MPC8E</i>	MX2K-MPC8E	-	-	-	-	-	15.1F7	<ul style="list-style-type: none"> <li>15.1 F5 with Junos Cont inuit y</li> <li>16.1 R1 and later</li> </ul>	<ul style="list-style-type: none"> <li>15.1 F5 with Junos Cont inuit y</li> <li>16.1 R1 and later</li> </ul>
<i>MPC9E</i>	MX2K-MPC9E	-	-	-	-	-	15.1F7	<ul style="list-style-type: none"> <li>15.1 F5 with Junos Cont inuit y</li> <li>16.1 R1 and later</li> </ul>	<ul style="list-style-type: none"> <li>15.1 F5 with Junos Cont inuit y</li> <li>16.1 R1 and later</li> </ul>



**Table 80: MPCs Supported by MX240, MX480, MX960, MX10003, MX10004, MX10016, MX2008, MX2010, and MX2020 Routers (Continued)**

MPC Name	MPC Model Number	First Junos OS Release on MX240, MX480, and MX960 Routers	First Junos OS Release on MX10003 Routers	First Junos OS Release on MX10004 Routers	First Junos OS Release on MX10008 Routers	First Junos OS Release on MX10016 Routers	First Junos OS Release on MX2008 Routers	First Junos OS Release on MX2010 Routers	First Junos OS Release on MX2020 Routers
MX-SPC3 Services Card	JNP-SPC3	19.3R2	-	-	-	-	-	-	-

## SEE ALSO

*MX Series MPC Overview*

*MX Series MPC Overview*

*MX Series MIC Overview*

[MICs Supported by MX Series Routers | 155](#)

[MIC/MPC Compatibility | 141](#)

[Pathfinder: Hardware Supported by Junos Continuity Software](#)

## MX240 Application Services Modular Line Card Description

### IN THIS SECTION


- [MX240 AS MLC Function | 188](#)
- [AS MLC Components | 189](#)
- [MX240 SCB, Power Supply, and Cooling System Requirements for AS MLC | 189](#)

The Application Services Modular Line Card (AS MLC) is an X86-based card for MX960, MX480, and MX240 routers to deliver integrated application service solutions. See [Figure 47 on page 188](#). The first

application that network operators can take advantage of is the Junos Content Encore system, a high-throughput, solid state storage platform for media rich content delivery. Additionally, the AS MLC can serve as the platform for Juniper Networks JunosV App Engine, powering a host of network applications directly embedded into your MX Series 5G Universal Routing Platforms.

AS MLC is modular and decouples CPU and storage in individual field-upgradeable units. The AS MLCs are designed to enable application throughput up to 50 Gbps and a storage capacity of 400 gigabytes (GB) of NAND Flash.

**Figure 47: Application Services Modular Line Card (AS MLC)**

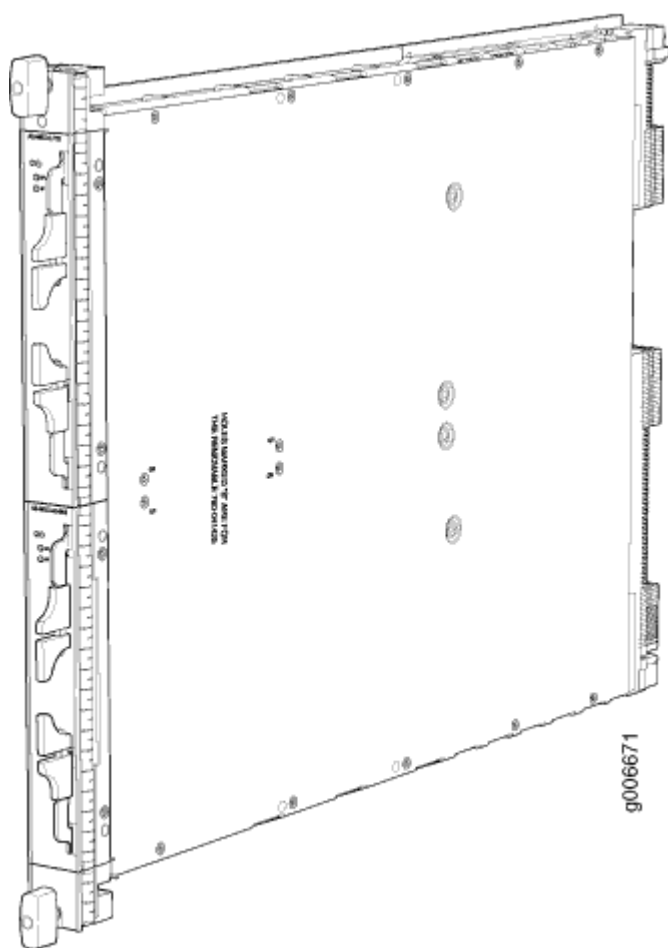

### **MX240 AS MLC Function**

The AS MLC provides modular processing and modular storage. Installed on the AS MLC, the Junos Content Encore system operates as a caching application, in either HTTP reverse proxy mode or HTTP transparent proxy mode, to manage client requests for content and the distribution of the content to clients from origin servers. In the future, AS MLC will run other Juniper Networks router services and

applications as well as serve as a virtualized platform for third-party applications. AS MLC provides Ethernet switching and high-speed fabric interface to MX routers. *Graceful Routing Engine switchover* is also supported on the AS MLC.

Integrated with application forwarding on MX Series routers, the AS MLC provides increased service flexibility with reduced power and space requirements for the network infrastructure.

## AS MLC Components

Each AS MLC consists of the following components:

- AS MLC Modular Carrier Card (AS MCC), which fits horizontally in front of the MX240 router, includes two slots for the Application Services Modular Storage Card (AS MSC) and Application Services Modular Processing Card (AS MXC)
- AS MXC with 64 GB RAM for processing
- AS MSC with 400 GB NAND Flash capacity for modular storage



**NOTE:** The AS MCC, AS MXC, and AS MSC are hot-removable and hot-insertable

- Switch fabric interfaces to the chassis
- XM ASIC chip, which owns and manages the packet data memory built from external DDR3 memory chips, the fabric queuing system, a portion of the WAN queuing system, and the host queuing system
- LU ASIC chip, which performs all functions relating to header processing including input processing, route lookup, classification, filtering, policing, accounting, encapsulation, and statistics
- Midplane connectors and power circuitry
- Processor Mezzanine Board (PMB), which contains the host processor and supporting peripherals.
- LED on the AS MCC, which displays the status of the AS MLC

## MX240 SCB, Power Supply, and Cooling System Requirements for AS MLC

Each MX240 router requires specific SCB, power supply, and cooling system models to run the AS MLC:

- SCB—Enhanced MX Switch Control Board (SCBE-MX). See [MX240 SCBE-MX Description](#) for details
- Power supply:
  - 2520W AC power supply—Model PWR-MX480-2520-AC
  - 2400W DC power supply—Model PWR-MX480-2400-DC

- Power requirement for AS MLC:
  - AS MCC—191W
  - AS MXC—259W
  - AS MSC—50W
- Cooling system—Required fans and fan tray models:
  - Fans:
    - For AC power supply: PWR-FAN-MX240-ACH-HC-U and PWR-MX240-ACL-HC-U
    - For DC power supply: PWR-FAN-MX2400-DC-HC-U
  - Fan tray—FFANTRAY-MX240-HC

### SEE ALSO

[Replacing an MX240 AS MLC | 408](#)

[Replacing an MX240 AS MSC | 412](#)

[Replacing an MX240 AS MXC | 416](#)

### MX240 AS MSC LEDs

Two LEDs (**CPU** and **AP**) indicate the status of the AS MSC and are located on the AS MSC. [Table 81 on page 190](#) describes the functions of the AS MSC LEDs.

**Table 81: AS MSC LEDs**

Label	Color	State	Description
<b>CPU</b>	Green	On steadily	AS MSC operates normally.
	Red	On steadily	AS MSC has an error or has failed.
	–	Off	AS MSC is offline.
<b>AP</b>	Green	On steadily	AS MSC storage operation is normal.

**Table 81: AS MSC LEDs** *(Continued)*

Label	Color	State	Description
	Red	On steadily	AS MSC storage operation has an error.
	–	Off	AS MSC storage operation is not activated.

**SEE ALSO**

[MX240 Application Services Modular Storage Card Description](#)

[Replacing an MX240 AS MSC | 412](#)


**MX240 Application Services Modular Processing Card Description**

The Application Services Modular Processing Card (AS MXC) is a pluggable X86-based card that can be inserted into the lower slot of the Application Services Modular Line Card (AS MLC). The AS MXC serves as the processing card for the Junos Content Encore system and contains the two X86, Intel 8-core processors with interface ability greater than 80 Gbps. The AS MXC (see [Figure 48 on page 192](#)) is equivalent to a PIC or MIC (Modular Interface Card).

AS MXCs are hot-removable and hot-insertable. One MXC can be installed in the lower slot of each AS MLC. Each MXC has these components:

- Two 8-core Intel processors—Contains eight execution cores with Ring Interconnect architecture. Each core supports two threads, up to 16 threads per socket.
- 64 GB DRAM—On DIMM sockets.
- LEDs—Two LEDs on the faceplate display the CPU and application status.

Figure 48: Application Services Modular Processing Card (AS MXC)

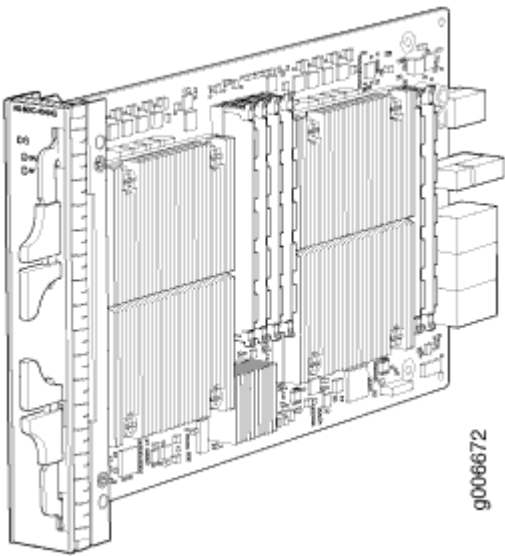

SEE ALSO

[MX240 AS MXC LEDs | 192](#)

[Replacing an MX240 AS MXC | 416](#)

MX240 AS MXC LEDs

Two LEDs (**CPU** and **AP**) indicate the status of the AS MXC and are located on the AS MXC. [Table 82 on page 192](#) describes the functions of the AS MXC LEDs.

Table 82: AS MXC LEDs

Label	Color	State	Description
CPU	Green	On steadily	AS MXC operates normally.
	Red	On steadily	AS MXC has an error or has failed.
	–	Off	AS MXC is offline.
AP	Green	On steadily	AS MXC applications operation is normal.



Table 82: AS MXC LEDs (Continued)

Label	Color	State	Description
	Red	On steadily	AS MXC applications operation has an error.
	–	Off	AS MXC applications are not activated.

## SEE ALSO

[MX240 Application Services Modular Processing Card Description | 191](#)
[Replacing an MX240 AS MXC | 416](#)


## MX-SPC3 Services Card







The MX-SPC3 (Model number: JNP-SPC3) is a Services Processing Card (SPC) that provides additional processing power to run Next Gen Services. Next Gen Services provide capabilities for manipulating traffic before it's delivered to its destination. The MX-SPC3 Services Card is supported on MX240, MX480, and MX960 routers.

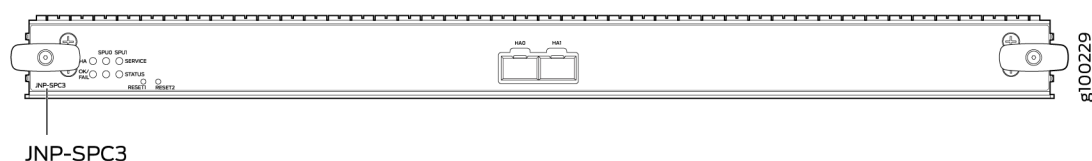It contains two Services Processing Units (SPUs) with 128 GB of memory per SPU. Line cards such as DPCs, MICs, and MPCs intelligently distribute all traffic traversing the router to the SPUs to have services processing applied to it (see [Figure 49 on page 193](#)).

You can install the MX-SPC3 in any of the slots that are not reserved for Switch Control Board (SCB). If a slot is not occupied by a card, you must install a blank panel to shield the empty slot and to allow cooling air to circulate properly through the device.

Figure 49: MX-SPC3 Services Card



Software release	<ul style="list-style-type: none"> <li>Junos OS Release 19.3R2 and later</li> </ul>
Description	<p>Services Processing Card (SPC) with two SPUs of 256 GB memory.</p> <ul style="list-style-type: none"> <li>Model number: JNP-SPC3</li> <li>Power requirement: 650 W maximum</li> <li>Weight: Approximately 18 lb (8.3 kg)</li> </ul>
Hardware features	<ul style="list-style-type: none"> <li>Two 10-Gigabit Ethernet small form-factor pluggable plus (SFP+) chassis cluster control ports for connecting multiple devices into a redundant chassis cluster.</li> <li>Fabric interfaces</li> <li>One Gigabit Ethernet switch that provides control connectivity to the Routing Engine.</li> <li>Two interfaces from the SCBs that enable the boards to be powered on and controlled.</li> <li>Physical SPC connectors</li> <li>Midplane connectors and power circuitry</li> <li>Each SPU includes:             <ul style="list-style-type: none"> <li>Two 2.3-GHz CPUs</li> <li>One Crypto Engine</li> <li>128 GB memory</li> </ul> </li> <li>Two 128 GB solid state-drives (SSDs).</li> <li>LEDs on the faceplate that indicate the SPC and SPU status.</li> </ul>
Supported Slots	<ul style="list-style-type: none"> <li>MX240—Any slot, except the bottom slot <b>0</b> (  ) which is reserved for SCB/RE.</li> <li>MX480—Any slot, except the bottom slots <b>0</b> (  ) or <b>1</b> (  ) which are reserved for SCB/RE.</li> <li>MX960—Any slot, except slot <b>11</b> (  ), and slots <b>0</b> (  ) or <b>1</b> (  ) which are reserved for SCB/RE.</li> </ul>

**Compatibility**

The MX-SPC3 services card is compatible end-to-end with the MX Series Switch Fabrics, Routing Engines and MPC line cards. See [Table 83 on page 198](#).

---

## LEDs

**OK/FAIL LED**, one bicolor:

- Steady green–The SPC is operating normally.
- Red–The SPC has failed and is not operating normally.
- Off–The SPC is powered down.

**STATUS LED**, one tricolor for each SPU **SPU 0** and **SPU 1**:

- Off–The SPU is offline.
- Blinking Amber–The SPU is initializing.
- Green–The SPU initialization is done and it is operating normally.
- Red–The SPU has encountered an error or a failure.

**SERVICE LED**, one tricolor for each SPU **SPU 0** and **SPU 1**:

- Off–The SPU is offline.
- Blinking Red–The SPU initialization is done.
- Blinking Amber–Service is initializing on the SPU.
- Green–Service is running on the SPU under acceptable load.
- Solid Red–Service encountered an error or a failure.

**HA LED**, one tricolor:

- Green–Clustering is operating normally. All cluster members and monitored links are available, and no error conditions are detected.
- Red–A critical alarm is present on clustering. A cluster member is missing or unreachable, or the other node is no longer part of a cluster because it has been disabled by the dual membership and detection recovery process in reaction to a control-link or fabric-link failure.
- Amber–All cluster members are present, but an error condition has compromised the performance and resiliency of the cluster. The reduced bandwidth could cause packets to be dropped or could result in reduced resiliency because a single point of failure might exist. The error condition might be caused by:
  - The loss of chassis cluster links which causes an interface monitoring failure.

- An error in an SPU or NPU.
- Failure of the spu-monitoring or cold-sync-monitoring processes.
- A chassis cluster IP monitoring failure.
- Off—The node is not configured for clustering or it has been disabled by the dual membership and detection recovery process in reaction to a control link or fabric link failure.

**LINK/ACT LED**, one for each of the two ports **CHASSIS CLUSTER CONTROL 0** and **CHASSIS CLUSTER CONTROL 1**:

- Green—Chassis cluster control port link is active.
- Off—No link.

---

The MX-SPC3 services card is compatible end-to-end with the MX Series Switch Fabrics, Routing Engines and MPC line cards on MX240, MX480, and MX960 routers. See [Table 83 on page 198](#).



**NOTE:**

Routing Engines use the following naming conventions:

- *BB*: Routing Engines suffixed with *BB* refer to the Base Bundle (BB) Routing Engine. You can only order it with a Chassis Bundle suffixed with *BB*.
- *R*: Routing Engines suffixed with *R* refer to a Redundant (R ) Routing Engine. You can only order it with the Chassis Bundle and can't order it separately.
- *S*: Routing Engines suffixed with *S* refer to a standalone Routing Engine that you can order without the Chassis. You can either use it as a spare or when upgrading a non-redundant system to make it redundant.

**Table 83: MX-SPC3 Services Card Compatibility with MX Series Switch Fabrics, Routing Engines and MPC Line Cards**

Switch Fabric	Route Engine	MPC Line Cards
SCBE	RE-S-1800X4-16G-BB	MPC2E-3D
	RE-S-1800X4-16G-UPG-BB	MPC2-3D-NG
	RE-S-1800X4-16G-S	MPC3E and MPC3E-3D-NG
	RE-S-1800X4-16G-R	MPC4E-3D
	RE-S-1800X4-32G-BB	MPC-3D-16XGE
	RE-S-1800X4-32G-UB	
	RE-S-1800X4-32G-S	
	RE-S-1800X4-32G-R	
SCBE2	RE-S-1800X4-16G-BB	MPC2E-3D
	RE-S-1800X4-16G-UPG-BB	MPC2-3D-NG
	RE-S-1800X4-16G-S	MPC3E and MPC3E-3D-NG
	RE-S-1800X4-16G-R	MPC4E-3D
	RE-S-1800X4-32G-BB	MPC5E and MPC5EQ
	RE-S-1800X4-32G-UB	MPC7E and MPC7EQ
	RE-S-1800X4-32G-S	MPC-3D-16XGE
	RE-S-1800X4-32G-R	
	RE-S-X6-64G-UB	
	RE-S-X6-64G-S	
	RE-S-X6-64G-R	
	RE-S-X6-64G-BB	
	RE-S-X6-128G-S-S	
	RE-S-X6-128G-S-R	
	RE-S-X6-128G-S-BB	

**Table 83: MX-SPC3 Services Card Compatibility with MX Series Switch Fabrics, Routing Engines and MPC Line Cards (Continued)**

Switch Fabric	Route Engine	MPC Line Cards
SCBE3	RE-S-1800X4-16G-BB	MPC2-3D-NG
	RE-S-1800X4-16G-UPG-BB	MPC4E-3D
	RE-S-1800X4-16G-S	MPC5E and MPC5EQ
	RE-S-1800X4-16G-R	MPC7E and MPC7EQ
	RE-S-1800X4-32G-BB	MPC-3D-16XGE
	RE-S-1800X4-32G-UB	MPC10E-10C
	RE-S-1800X4-32G-S	MPC10E-15C
	RE-S-1800X4-32G-R	
	RE-S-X6-64G-BB	
	RE-S-X6-64G-UB	
	RE-S-X6-64G-S	
	RE-S-X6-64G-R	
	RE-S-X6-128G-S-BB	
	RE-S-X6-128G-S-S	
	RE-S-X6-128G-S-R	

Table 84 on page 199 provides a summary of Next Gen Services supported by MX-SPC3.

**Table 84: Next Gen Services Supported by MX-SPC3 Services Card**

Feature Category / Feature		First Supported Junos OS Release
Carrier Grade NAT	Basic-NAT44	19.3R2
	Basic-NAT66	19.3R2
	Dynamic-NAT44	19.3R2

Table 84: Next Gen Services Supported by MX-SPC3 Services Card *(Continued)*

Feature Category / Feature		First Supported Junos OS Release
	Static Destination NAT	19.3R2
	Basic-NAT-PT	19.3R2
	NAPT-PT	19.3R2
	NAPT44	19.3R2
	NAPT66	19.3R2
	Port Block Allocation	19.3R2
	Deterministic-nat44 and nat64	19.3R2
	End Point Independent Mapping (EIM)/End Point	19.3R2
	Independent Filtering (EIF)	19.3R2
	Persistent NAT – Application Pool Pairing (APP)	19.3R2
	Twice-NAT44 – Basic, Dynamic and NAPT	19.3R2
	NAT64	19.3R2
	XLAT-464	19.3R2
	NPTv6	19.3R2



Table 84: Next Gen Services Supported by MX-SPC3 Services Card *(Continued)*

Feature Category / Feature		First Supported Junos OS Release
	Port Control Protocol (PCP) – v1 and v2	20.1R1
	DS-Lite	20.2R1
	NAT46	20.2R1
Stateful Firewall Services		19.3R2
Intrusion Detection Services (IDS)		19.3R2
Traffic Load Balancer		19.3R2
DNS Request Filtering		19.3R2
Aggregated Multiservices Interfaces		19.3R2
Inter-chassis High Availability	CGNAT, Stateful Firewall, and IDS Flows	19.3R2
URL Filtering		20.1R1
HTTP Content Manager (HCM)		20.2R1
IPsec		21.1R1

# MX-Series Switch Control Board (SCB) Description

## IN THIS SECTION

- [CLI Identification | 205](#)
- [Power Requirements for Switch Control Boards | 206](#)

At the heart of the MX Series 5G Universal Routing Platform is the Switch and Control Board (SCB). The SCB is a single-slot card and has a carrier for the routing engine in the front. It has three primary functions: switch data between the line cards, control the chassis, and house the routing engine.

The MX-Series SCB:

- Controls power to MPCs
- Manages clocking, resets and boots
- Monitors and controls systems functions, such as the fan speed, Power Distribution Module (PDM) status, and the system front panel.

The switch fabric is Integrated into the SCB, interconnecting all the DPCs and MPCs within the chassis and supporting up to 48 Packet Forwarding Engines. The routing engine installs directly into the SCB.

The number of SCBs supported varies, depending on the MX chassis and the level of redundancy. The MX240 and MX480 require two SCBs for 1+1 redundancy, whereas the MX960 requires three SCBs for 2+1 redundancy.

There are four generations of SCBs for the MX Series 5G Universal Routing Platform: SCB-MX, SCBE-MX, SCBE2-MX, and SCBE3-MX.

- SCB-MX is the first-generation switch control board. The SCB-MX is designed to work with first-generation DPC line cards.
- The SCBE-MX is the second generation switch control board and is designed specifically for use with MPC3E line cards to provide full line-rate performance and redundancy without a loss of bandwidth.
- The SCBE2-MX provides improved fabric performance for high-capacity line cards using the third generation fabric XF2 chip (MPC4E, MPC5E, MPC2/3 NG, and MPC7E).
- The SCBE3-MX Enhanced Switch Control Board provides improved fabric performance and bandwidth capabilities for high-capacity line cards using the ZF-based switch fabric.

[Table 85 on page 203](#) compares the SCB capacities of the MX Series 5G Universal Routing Platforms.

[Table 86 on page 204](#) lists the supported routing engines per SCB.

**Table 85: Switch Control Board Capacities for MX Series 5G Universal Routing Platforms (Full-Duplex)**

Description	Fabric Bandwidth Per Slot	MX240 Fabric Bandwidth	MX480 Fabric Bandwidth	MX960 Fabric Bandwidth
Enhanced MX Switch Control Board (SCBE3-MX)	Up to 1.5 Tbps (non-redundant fabric configuration with MPC10E line cards); 1 Tbps (redundant fabric configuration with MPC10E line cards)	Up to 6 Tbps	Up to 18 Tbps	Up to 33 Tbps
Enhanced MX Switch Control Board (SCBE2-MX)	Up to 480 Gbps (non-redundant fabric configuration); 340 Gbps (redundant fabric configuration)	Up to 1.92 Tbps	Up to 5.76 Tbps	Up to 10.56 Tbps
Enhanced MX Switch Control Board (SCBE-MX)	Up to 240 Gbps (non-redundant fabric configuration); 160 Gbps (redundant fabric configuration)	Up to 930 Gbps	Up to 2.79 Tbps	Up to 5.25 Tbps
Switch Control Board (SCB-MX)	Up to 240 Gbps (non-redundant fabric configuration); 120 Gbps (redundant fabric configuration)	Up to 465 Gbps	Up to 1.39 Tbps	Up to 2.6 Tbps

**Table 86: Supported Routing Engines for MX Series 5G Universal Routing Platforms Switch Control Boards**

Switch Control Board	First Supported Routing Engines
SCBE3-MX	RE-S-1800x2
	RE-S-1800x4
	RE-S-X6-64G
	RE-S-X6-128G
	RE-S-X6-64G-LT
SCBE2-MX	RE-S-1300 (EOLed)
	RE-S-2000 (EOLed)
	RE-S-1800 (all variants)
	RE-S-X6-64G
	RE-S-X6-128G
SCBE-MX	RE-S-1300 (EOLed)
	RE-S-2000 (EOLed)
	RE-S-1800 (all variants)
SCB-MX	RE-S-1300 (EOLed)
	RE-S-2000 (EOLed)
	RE-S-1800



**NOTE:** The MX240, MX480, and MX960 routers support Enhanced Ethernet Network Services mode and Enhanced IP Network Services mode with MPCs, MS-MPCs, and MS-DPCs only. See [Network Services Mode for MX Series 5G Routers](#) and [network-services](#) for more information.

You can also use the [Feature Explorer](#) to confirm platform and release support for specific features.

## CLI Identification

The SCBs are identified in the CLI as:

SCB Model	CLI Identification
SCB-MX	MX SCB
SCBE-MX	Enhanced MX SCB
SCBE2-MX	SCBE2-MX-S
SCBE3-MX	SCBE3-MX-S

```
user@host> show chassis hardware | match SCB
```

Item	Version	Part Number	Serial Number	Description
CB0	REV 07	710-021523	ABBC8281	MX SCB
CB1	REV 07	710-021523	ABBC8323	MX SCB
CB2	REV 07	710-021523	ABBD1410	MX SCB

```
user@host> show chassis hardware models | match SCBE
```

Item	Version	Part Number	Serial Number	Description
CB0	REV 02	750-031391	YE8505	Enhanced MX SCB
CB1	REV 07	710-031391	YL6769	Enhanced MX SCB
CB2	REV 07	710-031391	YE8492	Enhanced MX SCB

```
user@host> show chassis hardware models | match SCBE2
```

Item	Version	Part Number	Serial Number	Description
CB0	REV 01	750-062572	CAGN2123	SCBE2-MX-S
CB1	REV 07	750-062572	CAGN2456	SCBE2-MX-S

```
CB2    REV 07    750-062572    CAGN2789    SCBE2-MX-S
```

```
user@host> show chassis hardware models | match SCBE3
```

Item	Version	Part number	Serial number	FRU model number
CB 0	REV 23	750-070866	CALH6007	SCBE3-MX-S
CB 1	REV 23	750-070866	CALH6017	SCBE3-MX-S
CB 2	REV 23	750-070866	CALH6015	SCBE3-MX-S

## Power Requirements for Switch Control Boards

Component	Part Number	Maximum Power Requirement
<i>SCB-MX</i>	SCB-MX (applies to MX240, MX480, and MX960)	185 W at 55° C 160 W at 40° C 155 W at 25° C
<i>SCBE-MX</i>	SCBE-MX (applies to MX240, MX480, and MX960)	160 W at 55° C 130 W at 40° C 120 W at 25° C
<i>SCBE2-MX</i>	SCBE2-MX (applies to MX240, MX480, and MX960)	185 W at 55° C 160 W at 40° C 155 W at 25° C
<i>SCBE3-MX</i>	SCBE3-MX (applies to MX240, MX480, and MX960)	275 W at 55° C 260 W at 40° C 245 W at 25° C

# 3

CHAPTER

## Site Planning, Preparation, and Specifications

---

### IN THIS CHAPTER

- [MX240 Site Preparation Checklist | 208](#)
  - [MX240 Site Guidelines and Requirements | 209](#)
  - [MX240 Power Planning | 218](#)
  - [MX240 Network Cable and Transceiver Planning | 233](#)
  - [MX240 Management and Console Port Specifications and Pinouts | 239](#)
-

# MX240 Site Preparation Checklist

The checklist in [Table 87 on page 208](#) summarizes the tasks you must perform when preparing a site for router installation.

**Table 87: Site Preparation Checklist**

Item or Task	For More Information	Performed By	Date
Verify that environmental factors such as temperature and humidity do not exceed router tolerances.	<a href="#">"MX240 Router Environmental Specifications" on page 212</a>		
Select the type of rack or cabinet.	<a href="#">"MX240 Router Rack Requirements" on page 213,</a> <a href="#">"MX240 Router Cabinet Size and Clearance Requirements" on page 216</a>		
Plan rack or cabinet location, including required space clearances.	<a href="#">"MX240 Router Rack Requirements" on page 213,</a> <a href="#">"MX240 Router Clearance Requirements for Airflow and Hardware Maintenance" on page 216,</a> <a href="#">"MX240 Router Cabinet Size and Clearance Requirements" on page 216</a>		
If a rack is used, secure rack to floor and building structure.	<a href="#">"MX240 Router Rack Requirements" on page 213</a>		
Acquire cables and connectors.			
Locate sites for connection of system grounding.	<a href="#">"MX240 Chassis Grounding Specifications" on page 54</a>		
Measure distance between external power sources and router installation site.			



Table 87: Site Preparation Checklist *(Continued)*

Item or Task	For More Information	Performed By	Date
Calculate the optical power budget and optical power margin.	<a href="#">"Calculate Power Budget and Power Margin for Fiber-Optic Cables" on page 236</a>		

RELATED DOCUMENTATION

<a href="#">MX240 Router Rack Requirements   213</a>
<a href="#">MX240 Router Clearance Requirements for Airflow and Hardware Maintenance   216</a>

# MX240 Site Guidelines and Requirements

IN THIS SECTION

- [MX240 Router Physical Specifications | 209](#)
- [MX240 Router Environmental Specifications | 212](#)
- [MX240 Router Rack Requirements | 213](#)
- [MX240 Router Clearance Requirements for Airflow and Hardware Maintenance | 216](#)
- [MX240 Router Cabinet Size and Clearance Requirements | 216](#)
- [MX240 Router Cabinet Airflow Requirements | 217](#)

## MX240 Router Physical Specifications

[Table 88 on page 210](#) summarizes the physical specifications for the router chassis.

**Table 88: Physical Specifications**

Description	Weight	Width	Depth	Height
Chassis dimensions	Chassis with midplane, fan tray, air filter: 52 lb (23.6 kg)  Maximum configuration: 128 lb (58.1 kg)	17.45 in. (44.3 cm)	24.5 in. (62.2 cm) (from front-mounting bracket to chassis rear)  Total depth: 27.75 in. (70.5 cm)	8.71 in. (22.1 cm)
Routing Engine (RE-S-1800)	2.4 lb (1.1 kg)	11 in. (27.9 cm)	7.75 in. (19.7 cm)	1.25 in. (3.2 cm)
Routing Engine (RE-S-X6-64G)	2.69 lb (1.18 kg)	10.7 in. (27.18 cm)	7.47 in. (18.97 cm)	1.19 in. (3.02 cm)
SCB	9.6 lb (4.4 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
SCBE	9.6 lb (4.4 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
SCBE2	9.6 lb (4.4 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
DPC	Maximum up to 14.5 lb (6.6 kg)  Blank panel in DPC slot: 9 lb (4.1 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
FPC	FPC2: 13 lb (5.9 kg)  FPC3: 14 lb (6.5 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	2.5 in. (6.4 cm)
PIC	2 lb (0.9 kg)	7.75 in. (28.3 cm)	11.125 in. (19.7 cm)	4.125 in. (10.5 cm)
MPC (fixed configuration)	18.35 lb (8.3 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)

**Table 88: Physical Specifications (Continued)**

Description	Weight	Width	Depth	Height
MPC (without MICs)	14 lb (6.4 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.25 in. (3.2 cm)
MIC	Maximum up to 1.2 lb (0.54 kg)	6.25 in. (15.9 cm)	6.8 in. (17.3 cm)	1.25 in. (3.2 cm)
Craft interface	1.1 lb (0.5 kg)	21.25 in. (54 cm)	8.5 in. (21.6 cm)	6.25 in. (15.9 cm)
Fan tray	4.2 lb (1.9 kg)	17 in. (43.2 cm)	22 in. (55.9 cm)	1.5 in. (3.8 cm)
Air filter	1 lb (0.5 kg)	0.31 in. (0.8 cm)	22.23 in. (56.5 cm)	5 in. (12.7 cm)
DC power supply	3.8 lb (1.7 kg)	14.5 in. (36.8 cm)	4 in. (10.2 cm)	1.75 in. (4.4 cm)
High-capacity DC power supply	6.2 lb (2.81 kg)	14.5 in. (36.8 cm)	4 in. (10.2 cm)	1.75 in. (4.4 cm)
AC power supply	5 lb (2.3 kg)	14.5 in. (36.8 cm)	4 in. (10.2 cm)	1.75 in. (4.4 cm)
High-capacity AC power supply	6.6 lb (2.99 kg)	14.5 in. (36.8 cm)	4 in. (10.2 cm)	1.75 in. (4.4 cm)

**SEE ALSO**


---

[MX240 System Overview | 14](#)


---

[MX240 Chassis Description | 18](#)


---

[MX240 Chassis Lifting Guidelines | 513](#)

# MX240 Router Environmental Specifications

Table 89 on page 212 specifies the environmental specifications required for normal router operation. In addition, the site should be as dust-free as possible.

**Table 89: Routers Environmental Specifications**

Description	Value
Altitude	No performance degradation to 10,000 ft (3048 m)
Relative humidity	Normal operation ensured in relative humidity range of 5% to 90%, noncondensing
Temperature	Normal operation ensured in temperature range of 32°F (0°C) to 104°F (40°C)  Nonoperating storage temperature in shipping container: -40°F (-40°C) to 158°F (70°C)
Seismic	Designed to meet Telcordia Technologies Zone 4 earthquake requirements
Maximum thermal output	AC power: 7161 BTU/hour (2100 W)  DC power: 5074 BTU/hour (1488 W)



**NOTE:** Install the router only in restricted areas, such as dedicated equipment rooms and equipment closets, in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code, ANSI/NFPA 70.

## SEE ALSO

[Routine Maintenance Procedures for the MX240 Router](#) | 304

*General Safety Guidelines for Juniper Networks Devices*

*General Safety Warnings for Juniper Networks Devices*

[Compliance Statements for Environmental Requirements](#) | 547

## MX240 Router Rack Requirements

The router can be installed in many types of racks, including four-post (telco) racks and open-frame racks.

The router can be installed in many types of racks, including four-post (telco) racks and open-frame racks. An example of an open-frame rack appears in [Figure 50 on page 215](#). [Table 90 on page 213](#) summarizes rack requirements and specifications for an MX240 Router.

**Table 90: Rack Requirements and Specifications for an MX240 Router**

Rack Requirement	Guidelines
Rack type and mounting bracket hole spacing	<p>Use a four-post rack or a two-post rack. You can mount the router on any four-post or two-post rack that provides bracket holes or hole patterns spaced at 1 U (1.75-in./4.44-cm) increments and that meets the size and strength requirements specified in this table.</p> <p>A U is the standard rack unit defined <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronic Components Industry Association (ECIA).</p>


Table 90: Rack Requirements and Specifications for an MX240 Router *(Continued)*

Rack Requirement	Guidelines
Rack size and strength	<ul style="list-style-type: none"> <li>• Ensure that the rack is a 19-in. rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association.</li> <li>• Ensure that the rack is one of the following standard lengths: <ul style="list-style-type: none"> <li>• 23.62 in. (600 mm)</li> <li>• 30.0 in. (762 mm)</li> <li>• 31.5 in. (800 mm)</li> </ul> </li> <li>• The rack rails must be spaced widely enough to accommodate the router chassis's external dimensions: 8.71 in. (221 mm) high, 24.5 in. (622 mm) deep, and 17.45 in. (443 mm) wide. The spacing of rails and adjacent racks must also allow for the clearances around the router and rack that are specified in <a href="#">"MX240 Router Clearance Requirements for Airflow and Hardware Maintenance"</a> on page 216.</li> <li>• The chassis height of 8.71 in. (22.1 cm) is approximately 5 U. A U is the standard rack unit defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association. You can stack several MX240 Router units in a rack that has sufficient usable vertical space.</li> <li>• The rack must be strong enough to support the weight of the fully configured router, up to 128 lb (58.1 kg). If you stack multiple fully configured routers in one rack, it must be capable of supporting the combined weight of the routers.</li> <li>• Ensure that the spacing of rails and adjacent racks allows for the proper clearance around the switch and rack as specified in <a href="#">"MX240 Router Clearance Requirements for Airflow and Hardware Maintenance"</a> on page 216.</li> </ul>

Table 90: Rack Requirements and Specifications for an MX240 Router *(Continued)*

Rack Requirement	Guidelines
Rack connection to the building structure	<ul style="list-style-type: none"><li>Secure the rack to the building structure.</li><li>If earthquakes are a possibility in your geographical area, secure the rack to the floor.</li><li>Secure the rack to the ceiling brackets as well as wall or floor brackets for maximum stability.</li></ul>

Figure 50: Typical Open-Frame Rack

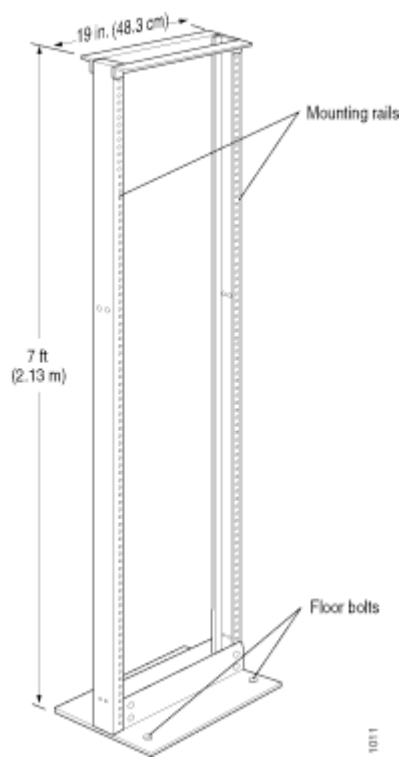

SEE ALSO

[Installing the MX240 Router Mounting Hardware for a Rack or Cabinet | 250](#)

*Installation Safety Warnings for Juniper Networks Devices*


## MX240 Router Clearance Requirements for Airflow and Hardware Maintenance

When planning the installation site, allow sufficient clearance around the rack (see [Figure 51 on page 216](#)):

- For the cooling system to function properly, the airflow around the chassis must be unrestricted. Allow at least 8 in. (20.3 cm) of clearance between side-cooled routers. Allow 5.5 in. (14 cm) between the side of the chassis and any non-heat-producing surface such as a wall.
- For service personnel to remove and install hardware components, there must be adequate space at the front and back of the router. At least 24 in. (61 cm) is required both in front of and behind the router. NEBS GR-63 recommends that you allow at least 30 in. (72.6 cm) in front of the rack and 24 in. (61.0 cm) behind the rack.

Airflow must always be from front to back with respect to the rack. If the device has side to rear airflow, then provisions must be made to ensure that fresh air from the front of the rack is supplied to the inlets, and exhaust exits the rear of the rack. The device must not interfere with the cooling of other systems in the rack. Fillers must be used as appropriate in the rack to ensure there is no recirculation of heated exhaust air back to the front of the rack. Care must also be taken around cables to ensure that no leakage of air in situations where recirculation may result.

**Figure 51: Chassis Dimensions and Clearance Requirements**

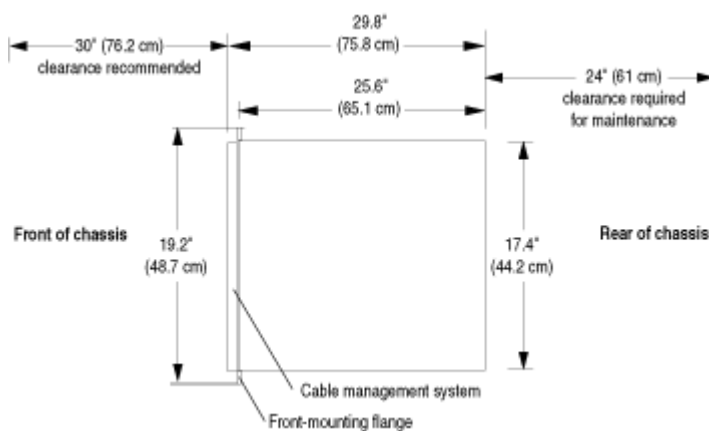

## MX240 Router Cabinet Size and Clearance Requirements

The minimum-sized cabinet that can accommodate the router is 482-mm wide and 800-mm deep. A cabinet larger than the minimum requirement provides better airflow and reduces the chance of



overheating. To accommodate a single router, the cabinet must be at least 13 U high. If you provide adequate cooling air and airflow clearance, you can stack several routers in a cabinet that has sufficient usable vertical space. Each router requires 5 U.


The minimum total clearance inside the cabinet is 30.7 in. (780 mm) between the inside of the front door and the inside of the rear door.

## MX240 Router Cabinet Airflow Requirements

Before you install the router in a cabinet, you must ensure that ventilation through the cabinet is sufficient to prevent overheating. Consider the following requirements to when planning for chassis cooling:

- Ensure that the cool air supply you provide through the cabinet can adequately dissipate the thermal output of the router.
- Ensure that the cabinet allows the chassis hot exhaust air to exit from the cabinet without recirculating into the router. An open cabinet (without a top or doors) that employs hot air exhaust extraction from the top allows the best airflow through the chassis. If the cabinet contains a top or doors, perforations in these elements assist with removing the hot air exhaust. For an illustration of chassis airflow, see [Figure 52 on page 217](#).
- Install the router as close as possible to the front of the cabinet so that the cable management brackets just clear the inside of the front door. This maximizes the clearance in the rear of the cabinet for critical airflow.
- Route and dress all cables to minimize the blockage of airflow to and from the chassis.

**Figure 52: Airflow Through the Chassis**

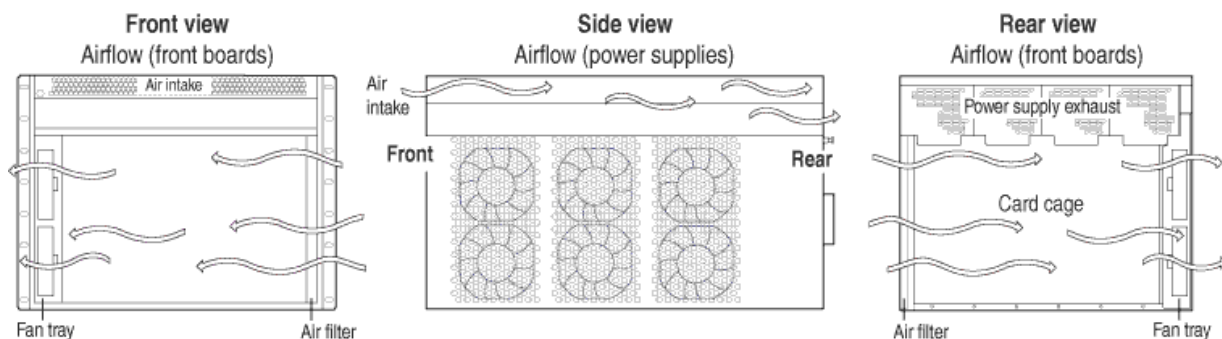

g004211

# MX240 Power Planning

## IN THIS SECTION

- [Power Requirements for an MX240 Router | 218](#)
- [Calculating Power Requirements for MX240 Routers | 230](#)

## Power Requirements for an MX240 Router

The following tables list the MX240 component power requirements. [Table 91 on page 218](#) lists the MX240 base system power requirements. [Table 92 on page 219](#) lists the Switch Control Board (SCB) power requirements. [Table 93 on page 219](#) lists the FRU power requirements for Routing Engines, Modular Port Concentrators (MPCs), Modular Interface Cards (MICs), and Dense Port Concentrators (DPCs).

**Table 91: MX240 Common Component Power Requirements**

Component	Maximum Power Requirement (Watts)
Base system	40 W
Normal-capacity cooling system	70 W
High-capacity cooling system	85 W



**NOTE:** The power for the cooling system comes from a different tap on the power supply, reserved for the cooling system only. The cooling system power requirement does not need to be deducted from the output power budget of the power supply.

**Table 92: Maximum Power Consumption for SCB Models (MX240)**

SCB Model	Ambient Temperature	Maximum Power Consumption
<i>SCB-MX</i>	55°C	185 W
	40°C	160 W
	25C°	155 W
<i>SCBE-MX</i>	55°C	160 W
	40°C	130 W
	25C°	120 W
<i>SCBE2-MX</i>	55°C	185 W
	40°C	160 W
	25C°	155 W
<i>SCBE3-MX</i>	55°C	275 W (SCB 0 (Primary); 295 W SCB 1 (Backup)
	40°C	260 W (SCB 0 (Primary); 285 W SCB 1 (Backup)
	25C°	245 W (SCB 0 (Primary); 265 W SCB 1 (Backup)

**Table 93: FRU Power Requirements**

Component	Part Number	Maximum Power Requirement
Routing Engines		
	RE-S-X6-64G	110 W
	RE-S-X6-128G	

Table 93: FRU Power Requirements (*Continued*)

Component	Part Number	Maximum Power Requirement
	RE-S-1300-2048 (EOL'd)	90 W
	RE-S-2000-4096 (EOL'd)	
	RE-S-1800 (all variants)	
Fixed Configuration Modular Port Concentrators (MPC)		
MPC-3D-16XGE-SFPP	MPC-3D-16XGE-SFPP MPC-3D-16XGE-SFPP-R-B	440 W at 131° F (55° C) ambient  423 W at 77° F (25° C) ambient
Multiservices MPC	MS-MPC-128G	590 W
32x10GE MPC4E	MPC4E-3D-32XGE-SFPP	610 W  With optics: 607 W at 131° F (55° C), with SFPP ZR optics  584 W at 40° C, with SFPP ZR optics  565 W at 77° F (25° C), with SFPP ZR optics

Table 93: FRU Power Requirements (*Continued*)

Component	Part Number	Maximum Power Requirement
<a href="#">2x100GE + 8x10GE MPC4E</a>	MPC4E-3D-2CGE-8XGE	610 W  <b>With optics:</b> 607 W at 131° F (55° C), with SFPP ZR and CFP LR4 optics  584 W at 104° F (40° C), with SFPP ZR and CFP LR4 optics  565 W at 77° F (25° C), with SFPP ZR and CFP LR4 optics
<a href="#">6x40GE + 24x10GE MPC5E</a>  <a href="#">6x40GE + 24x10GE MPC5EQ</a>	MPC5E-40G10G  MPC5EQ-40G10G	<b>With optics:</b> 607 W at 131° F (55° C)  541 W at 104° F (40° C)  511 W at 77° F (25° C)
<a href="#">2x100GE + 4x10GE MPC5E</a>  <a href="#">2x100GE + 4x10GE MPC5EQ</a>	MPC5E-100G10G  MPC5EQ-100G10G	<b>With optics:</b> 607 W at 131° F (55° C)  541 W at 104° F (40° C)  511 W at 77° F (25° C)
<a href="#">MPC7E-MRATE</a>	MPC7E-MRATE	<b>With optics:</b> 545 W at 131° F (55° C)  465 W at 104° F (40° C)  440 W at 77° F (25° C)

Table 93: FRU Power Requirements (*Continued*)

Component	Part Number	Maximum Power Requirement
<i>MPC10E-10C-MRATE</i>	MPC10E-10C-MRATE	620 W at 131° F (55° C) 590 W at 104° F (40° C) 545 W at 77° F (25° C)
<i>MPC10E-15C-MRATE</i>	MPC10E-15C-MRATE	785 W at 104° F (40° C): 720 W at 77° F (25° C)
Modular Port Concentrators (MPC)		
<i>MPC1</i> <i>MPC1E</i>	MX-MPC1-3D MX-MPC1E-3D	165 W <b>With MICs and optics:</b> 239 W at 131° F (55° C) 227 W at 104° F (40° C) 219 W at 77° F (25° C)
<i>MPC1 Q</i> <i>MPC1E Q</i>	MX-MPC1-3D-Q MX-MPC1E-3D-Q	175 W <b>With MICs and optics:</b> 249 W at 131° F (55° C) 237 W at 104° F (40° C) 228 W at 77° F (25° C)
<i>MPC2</i> <i>MPC2E</i>	MX-MPC2-3D MX-MPC2E-3D	274 W <b>With MICs and optics:</b> 348 W at 131° F (55° C) 329 W at 104° F (40° C) 315 W at 77° F (25° C)

Table 93: FRU Power Requirements (*Continued*)

Component	Part Number	Maximum Power Requirement
<i>MPC2 Q</i>	MX-MPC2-3D-Q	294 W
<i>MPC2E Q</i>	MX-MPC2E-3D-Q	<b>With MICs and optics:</b>
<i>MPC2 EQ</i>	MX-MPC2-3D-EQ	368 W at 131° F (55° C)
<i>MPC2E EQ</i>	MX-MPC2E-3D-EQ	347 W at 104° F (40° C)
		333 W at 77° F (25° C)
<i>MPC2E P</i>	MX-MPC2E-3D-P	294 W
		<b>With MICs and optics:</b>
		368 W at 131° F (55° C)
		347 W at 104° F (40° C)
		333 W at 77° F (25° C)
<i>MPC2E NG</i>	MPC2E-3D-NG	474 W
		<b>With MICs and optics:</b>
		474 W at 131° F (55° C)
		417 W at 104° F (40° C)
		400 W at 77° F (25° C)
<i>MPC2E NG Q</i>	MPC2E-3D-NG-Q	529 W
		<b>With MICs and optics:</b>
		529 W at 131° F (55° C)
		460 W at 104° F (40° C)
		438 W at 77° F (25° C)

Table 93: FRU Power Requirements (*Continued*)

Component	Part Number	Maximum Power Requirement
<i>MPC3E</i>	MX-MPC3E-3D	<p>440W</p> <p><b>With MICs and optics:</b></p> <p>500 W at 131° F (55° C), two 40 W MICs</p> <p>485 W at 104° F (40° C), two CFP MICs with LR4 optics</p> <p>473 W at 77° F (25° C), two CFP MICs with LR4 optics</p>
<i>MPC3E-3D-NG</i>	MPC3E-3D-NG	<p>534 W</p> <p><b>With MICs and optics:</b></p> <p>534 W at 131° F (55° C)</p> <p>485 W at 104° F (40° C)</p> <p>461 W at 77° F (25° C)</p>
<i>MPC3E-3D-NG-Q</i>	MPC3E-3D-NG-Q	<p>583 W</p> <p><b>With MICs and optics:</b></p> <p>583 W at 131° F (55° C)</p> <p>532 W at 104° F (40° C)</p> <p>503 W at 77° F (25° C)</p>
Modular Interface Cards (MIC)		



Table 93: FRU Power Requirements (*Continued*)

Component	Part Number	Maximum Power Requirement
<i>ATM MIC with SFP</i>	MPC4E-3D-2CGE-8XGE	<p>610 W</p> <p><b>With optics:</b></p> <p>607 W at 131° F (55° C), with SFPP ZR and CFP LR4 optics</p> <p>584 W at 40° C, with SFPP ZR and CFP LR4 optics</p> <p>565 W at 77° F (25° C), with SFPP ZR and CFP LR4 optics</p>
<i>Gigabit Ethernet MIC with SFP</i>	MIC-3D-20-GE-SFP	37 W
<i>10-Gigabit Ethernet MICs with XFP</i>	<p>2-Port: MIC-3D-2XGE-XFP</p> <p>4-Port: MIC-3D-4XGE-XFP</p>	<p>2-Port: 29 W</p> <p>4-Port: 37 W</p>
<i>40-Gigabit Ethernet MIC with QSFP+</i>	MIC3-3D-2X40GE-QSFPF	18 W
<i>100-Gigabit Ethernet MIC with CFP</i>	MIC3-3D-1X100GE-CFP	40 W
<i>100-Gigabit Ethernet MIC with CFP2</i>	MIC6-100G-CFP2	104 W
<i>100-Gigabit Ethernet MIC with CXP</i>	MIC3-3D-1X100GE-CXP	20 W
<i>100-Gigabit Ethernet MIC with CXP (4 Ports)</i>	MIC6-100G-CXP	57 W

Table 93: FRU Power Requirements (*Continued*)

Component	Part Number	Maximum Power Requirement
100-Gigabit DWDM OTN MIC with CFP2	MIC3-100G-DWDM	<b>With optics:</b> 91 W at 131° F (55° C) 83 W at 77° F (25° C)
100-Gigabit DWDM OTN MIC with CFP2-ACO	MIC3-100G-DWDM	<b>With optics:</b> 91 W at 131° F (55° C) 83 W at 77° F (25° C)
Multiservices MIC	MS-MIC-16G	60 W
SONET/SDH OC3/STM1 (Multi-Rate) MICs with SFP	4-Port: MIC-3D-4OC3OC12-1OC48	4-Port: 24 W at 131° F (55° C) 22.75 W at 40° C 21.5 W at 77° F (25° C)
	8-Port: MIC-3D-8OC3OC12-4OC48	8-Port: 29 W at 131° F (55° C) 27.75 W at 40° C 26.5 W at 77° F (25° C)
SONET/SDH OC192/STM64 MIC with XFP	MIC-3D-1OC192-XFP	41 W at 131° F (55° C) 38.5 W at 40° C 36 W at 77° F (25° C)

Table 93: FRU Power Requirements (*Continued*)

Component	Part Number	Maximum Power Requirement
<i>Channelized SONET/SDH OC3/ STM1 (Multi-Rate) MICs with SFP</i>	4-Port: MIC-3D-4CHOC3-2CHOC12	4-Port:  41 W at 131° F (55° C)  40 W at 40° C  39 W at 77° F (25° C)
	8-Port: MIC-3D-8CHOC3-4CHOC12	8-Port:  52 W at 131° F (55° C)  50.5 W at 40° C  49 W at 77° F (25° C)
<i>Tri-Rate MIC</i>	MIC-3D-40GE-TX	41 W
<i>DS3/E3 MIC</i>	MIC-3D-8DS3-E3	36 W at 131° F (55° C)
	MIC-3D-8CHDS3-E3-B	35 W at 40° C  34 W at 77° F (25° C)
<i>Channelized E1/T1 Circuit Emulation MIC</i>	MIC-3D-16CHE1-T1-CE	29.08 W at 131° F (55° C)  27.84 W at 40° C  26.55 W at 77° F (25° C)
<i>Channelized OC3/ STM1 (Multi-Rate) Circuit Emulation MIC with SFP</i>	MIC-3D-4COC3-1COC12-CE	36.48 W at 131° F (55° C)  35.04 W at 40° C  33.96 W at 77° F (25° C)

Dense Port Concentrators (DPC)

**Table 93: FRU Power Requirements (Continued)**

Component	Part Number	Maximum Power Requirement
<i>Gigabit Ethernet DPC with SFP</i>	DPC-R-40GE-SFP	335 W
<i>Gigabit Ethernet Enhanced DPC with SFP</i>	DPCE-R-40GE-SFP DPCE-X-40GE-SFP	335 W
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i> <i>Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with SFP</i>	DPCE-R-Q-40GE-SFP DPCE-X-Q-40GE-SFP	365 W
<i>Gigabit Ethernet Enhanced Queuing IP Services DPCs with SFP</i>	DPCE-R-Q-20GE-SFP	200 W
<i>10-Gigabit Ethernet DPC with XFP</i>	DPC-R-4XGE-XFP	310 W
<i>10-Gigabit Ethernet Enhanced DPC with XFP</i>	DPCE-R-2XGE-XFP	175 W
<i>10-Gigabit Ethernet Enhanced DPCs with XFP</i>	DPCE-R-4XGE-XFP DPCE-X-4XGE-XFP	310 W

**Table 93: FRU Power Requirements (Continued)**

Component	Part Number	Maximum Power Requirement
<i>10-Gigabit Ethernet Enhanced Queuing Ethernet Services DPC with XFP</i>	DPCE-R-Q-4XGE-XFP DPCE-X-Q-4XGE-XFP	330 W
<i>Multi-Rate Ethernet Enhanced Ethernet Services DPC with SFP and XFP</i>	DPCE-R-20GE-2XGE DPCE-X-20GE-2XGE	333 W
<i>Multi-Rate Ethernet Enhanced Queuing IP Services DPC with SFP and XFP</i>	DPCE-R-Q-20GE-2XGE	335 W
<i>Tri-Rate Enhanced DPC or Tri-Rate Enhanced Ethernet Services DPC</i>	DPCE-R-40GE-TX DPCE-X-40GE-TX	320 W
<i>Multiservices DPC</i>	MS-DPC	265 W
Flexible PIC Concentrators (FPC)		
FPC Type 2	MX-FPC2	190 W (with PICs and optics)
FPC Type 3	MX-FPC3	265 W (with PICs and optics)

**SEE ALSO**

[Calculating Power Requirements for MX240 Routers | 230](#)

[AC Power Supply Electrical Specifications for the MX240 Router | 42](#)

## Calculating Power Requirements for MX240 Routers

The information in this topic helps you determine which power supplies are suitable for various configurations, as well as which power supplies are not suitable because output power is exceeded. You determine suitability by subtracting the total power draw from the maximum output of the power supplies. Afterward, the required input power is calculated. Finally, you calculate the thermal output. A sample configuration is provided in [Table 94 on page 231](#).

We recommend that you provision power according to the maximum input current listed in the power supply electrical specifications (see ["AC Power Supply Electrical Specifications for the MX240 Router" on page 42](#) and [DC Power Supply Electrical Specifications for the MX240 Router](#)).

Use the following procedures to calculate the power requirement:

1. Calculate the power requirement.
2. Evaluate the power budget.
3. Calculate input power.
4. Calculate thermal output (BTUs) for cooling requirements.

The following sample configuration shows an MX240 router with:

- Two 16-port 10-Gigabit Ethernet MPCs with SFP+
- Two SCBs with two (redundant) RE-1800x2 routing engines
- High-capacity cooling system



**NOTE:** The high-capacity cooling system satisfies cooling requirements of MPCs, and must be used for proper cooling.

1. Calculate the power requirements (usage) using the values in ["Power Requirements for an MX240 Router" on page 218](#) as shown in [Table 94 on page 231](#).

**Table 94: Sample Power Requirements for an MX240 Router**

Chassis Component	Part Number	Power Requirement
Base system	MX240BASE-AC-HIGH	40 W
High-capacity cooling system	FANTRAY-MX240-HC	85 W
MPC - Slot 2 -	MPC-3D-16XGE-SFPP-R-B	440 W
MPC - Slot 1	MPC-3D-16XGE-SFPP-R-B	440 W
SCB 1/Slot 0	SCBE2-MX with RE-S-1800X2-8G	185 W 90 W
SCB 0	SCBE2-MX with RE-S-1800X2-8G	185 W 90 W
Total output power		1555 W
Output power excluding cooling system		1470 W

2. Evaluate the power budget. In this step, we check the total output power against the maximum output power of available power supply options.



**NOTE:** The power for the cooling system comes from a different tap on the power supply, reserved for the cooling system only. The cooling system power requirement does not need to be deducted from the output power budget of the power supply.

Table 95 on page 232 lists the power supplies, their maximum output power, and unused power (or a power deficit). See ["DC Power Supply Electrical Specifications for the MX240 Router" on page 48](#) and ["AC Power Supply Electrical Specifications for the MX240 Router" on page 42](#) for more information about the MX240 power supply electrical specifications.

**Table 95: Calculating Power Budget**

Power Supply	Maximum System Output Power	Unused Power <sup>1</sup>
MX240 AC Normal-capacity (low-line)	2054 W	654 W
MX240 AC Normal-capacity (high-line)	1590 W	190 W
MX240 AC High-capacity (low-line)	2334 W	934 W
MX240 AC High-capacity (high-line)	2050 W	650 W
MX240 DC Normal-capacity	1600 W	200 W
MX240 DC High-capacity (DIP=0)	2400 W	1000 W
MX240 DC High-capacity (DIP=1)	2600 W	1200 W

<sup>1</sup> For this configuration, output power excluding the cooling system is 1400 W.

3. Calculate input power. In this step, the input power requirements for the example configuration are calculated. To do this, divide the total output requirement by the efficiency of the power supply as shown in [Table 96 on page 232](#).

**Table 96: Calculating Input Power Examples**

Power Supply	Power Supply Efficiency <sup>1</sup>	Input Power Requirement <sup>2</sup>
MX240 AC Normal-capacity (high-line)	85 %	1747 W
MX240 AC High-capacity (high-line)	89 %	1669 W
MX240 DC Normal-capacity	~98 %	1515 W
MX240 DC High-capacity	~98 %	1515 W

<sup>1</sup> These values are at full load and nominal voltage.



<sup>2</sup> For this configuration, total power is 1485 W.

4. Calculate thermal output (BTUs). To calculate this, multiply the input power requirement (in watts) by 3.41. See [Table 97 on page 233](#).

**Table 97: Calculating Thermal Output**

Power Supply	Thermal Output (BTUs per hour)
MX240 AC Normal-capacity (high-line)	$1747 * 3.41 = 5957 \text{ BTU/hr}$
MX240 AC High-capacity (high-line)	$1669 * 3.41 = 5576 \text{ BTU/hr}$
MX240 DC Normal-capacity	$1515 * 3.41 = 5166 \text{ BTU/hr}$
MX240 DC High-capacity	$1515 * 3.41 = 5166 \text{ BTU/hr}$

**SEE ALSO**

[Power Requirements for an MX240 Router | 218](#)

[AC Power Supply Electrical Specifications for the MX240 Router | 42](#)

[MX240 DC Power System | 48](#)

# MX240 Network Cable and Transceiver Planning

**IN THIS SECTION**

- [Determining Transceiver Support and Specifications for M Series and T Series Routers | 234](#)
- [Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion | 234](#)
- [Calculate Power Budget and Power Margin for Fiber-Optic Cables | 236](#)
- [Routing Engine Interface Cable and Wire Specifications for MX Series Routers | 238](#)

## Determining Transceiver Support and Specifications for M Series and T Series Routers

You can find information about the pluggable transceivers supported on your Juniper Networks device by using the Hardware Compatibility Tool. In addition to transceiver and connector type, the optical and cable characteristics—where applicable—are documented for each transceiver. The Hardware Compatibility Tool allows you to search by product, displaying all the transceivers supported on that device, or category, displaying all the transceivers by interface speed or type. The Hardware Compatibility Tool is located at <https://apps.juniper.net/hct/>.

Some transceivers support additional monitoring using the operational mode CLI command `show interfaces diagnostics optics`. Use the Hardware Compatibility Tool to determine if your transceiver supports monitoring. See the Junos OS documentation for your device for a description of the monitoring fields.



**CAUTION:** The Juniper Networks Technical Assistance Center (JTAC) provides complete support for Juniper-supplied optical modules and cables. However, JTAC does not provide support for third-party optical modules and cables that are not qualified or supplied by Juniper Networks. If you face a problem running a Juniper device that uses third-party optical modules or cables, JTAC may help you diagnose host-related issues if the observed issue is not, in the opinion of JTAC, related to the use of the third-party optical modules or cables. Your JTAC engineer will likely request that you check the third-party optical module or cable and, if required, replace it with an equivalent Juniper-qualified component.

Use of third-party optical modules with high-power consumption (for example, coherent ZR or ZR+) can potentially cause thermal damage to or reduce the lifespan of the host equipment. Any damage to the host equipment due to the use of third-party optical modules or cables is the users' responsibility. Juniper Networks will accept no liability for any damage caused due to such use.

## Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion

### IN THIS SECTION

- [Signal Loss in Multimode and Single-Mode Fiber-Optic Cable | 235](#)
- [Attenuation and Dispersion in Fiber-Optic Cable | 235](#)

## Signal Loss in Multimode and Single-Mode Fiber-Optic Cable

Multimode fiber is large enough in diameter to allow rays of light to reflect internally (bounce off the walls of the fiber). Interfaces with multimode optics typically use LEDs as light sources. However, LEDs are not coherent sources. They spray varying wavelengths of light into the multimode fiber, which reflects the light at different angles. Light rays travel in jagged lines through a multimode fiber, causing signal dispersion. When light traveling in the fiber core radiates into the fiber cladding, higher-order mode loss results. Together these factors limit the transmission distance of multimode fiber compared with single-mode fiber.

Single-mode fiber is so small in diameter that rays of light can reflect internally through one layer only. Interfaces with single-mode optics use lasers as light sources. Lasers generate a single wavelength of light, which travels in a straight line through the single-mode fiber. Compared with multimode fiber, single-mode fiber has a higher bandwidth and can carry signals for longer distances.

Exceeding the maximum transmission distances can result in significant signal loss, which causes unreliable transmission.

## Attenuation and Dispersion in Fiber-Optic Cable

Correct functioning of an optical data link depends on modulated light reaching the receiver with enough power to be demodulated correctly. *Attenuation* is the reduction in power of the light signal as it is transmitted. Attenuation is caused by passive media components such as cables, cable splices, and connectors. Although attenuation is significantly lower for optical fiber than for other media, it still occurs in both multimode and single-mode transmission. An efficient optical data link must have enough light available to overcome attenuation.

*Dispersion* is the spreading of the signal over time. The following two types of dispersion can affect an optical data link:

- Chromatic dispersion—Spreading of the signal over time, resulting from the different speeds of light rays.
- Modal dispersion—Spreading of the signal over time, resulting from the different propagation modes in the fiber.

For multimode transmission, modal dispersion—rather than chromatic dispersion or attenuation—usually limits the maximum bit rate and link length. For single-mode transmission, modal dispersion is not a factor. However, at higher bit rates and over longer distances, chromatic dispersion rather than modal dispersion limits maximum link length.

An efficient optical data link must have enough light to exceed the minimum power that the receiver requires to operate within its specifications. In addition, the total dispersion must be less than the limits specified for the type of link in Telcordia Technologies document GR-253-CORE (Section 4.3) and International Telecommunications Union (ITU) document G.957.

When chromatic dispersion is at the maximum allowed, its effect can be considered as a power penalty in the power budget. The optical power budget must allow for the sum of component attenuation, power penalties (including those from dispersion), and a safety margin for unexpected losses.

## Calculate Power Budget and Power Margin for Fiber-Optic Cables

### IN THIS SECTION

- [Calculate Power Budget for Fiber-Optic Cables | 236](#)
- [How to Calculate Power Margin for Fiber-Optic Cables | 237](#)

Use the information in this topic and the specifications for your optical interface to calculate the power budget and power margin for fiber-optic cables.



**TIP:** You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

To calculate the power budget and power margin, perform the following tasks:

### Calculate Power Budget for Fiber-Optic Cables

To ensure that fiber-optic connections have sufficient power for correct operation, you need to calculate the link's power budget ( $P_B$ ), which is the maximum amount of power it can transmit. When you calculate the power budget, you use a worst-case analysis to provide a margin of error, even though all the parts of an actual system do not operate at the worst-case levels. To calculate the worst-case estimate of  $P_B$ , you assume minimum transmitter power ( $P_T$ ) and minimum receiver sensitivity ( $P_R$ ):

$$P_B = P_T - P_R$$

The following hypothetical power budget equation uses values measured in decibels (dB) and decibels referred to one milliwatt (dBm):

$$P_B = P_T - P_R$$

$$P_B = -15 \text{ dBm} - (-28 \text{ dBm})$$

$$P_B = 13 \text{ dB}$$

# How to Calculate Power Margin for Fiber-Optic Cables

After calculating a link's  $P_B$ , you can calculate the power margin ( $P_M$ ), which represents the amount of power available after subtracting attenuation or link loss (LL) from the  $P_B$ . A worst-case estimate of  $P_M$  assumes maximum LL:

$$P_M = P_B - LL$$

$P_M$  greater than zero indicates that the power budget is sufficient to operate the receiver.

Factors that can cause link loss include higher-order mode losses, modal and chromatic dispersion, connectors, splices, and fiber attenuation. [Table 98 on page 237](#) lists an estimated amount of loss for the factors used in the following sample calculations. For information about the actual amount of signal loss caused by equipment and other factors, refer to vendor documentation.

**Table 98: Estimated Values for Factors Causing Link Loss**

Link-Loss Factor	Estimated Link-Loss Value
Higher-order mode losses	Single mode—None Multimode—0.5 dB
Modal and chromatic dispersion	Single mode—None Multimode—None, if product of bandwidth and distance is less than 500 MHz-km
Faulty connector	0.5 dB
Splice	0.5 dB
Fiber attenuation	Single mode—0.5 dB/km Multimode—1 dB/km

The following sample calculation for a 2-km-long multimode link with a  $P_B$  of 13 dB uses the estimated values from [Table 98 on page 237](#). This example calculates LL as the sum of fiber attenuation (2 km @ 1 dB/km, or 2 dB) and loss for five connectors (0.5 dB per connector, or 2.5 dB) and two splices (0.5 dB per splice, or 1 dB) as well as higher-order mode losses (0.5 dB). The  $P_M$  is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 2 \text{ km} (1 \text{ dB/km}) - 5 (0.5 \text{ dB}) - 2 (0.5 \text{ dB}) - 0.5 \text{ dB}$$

$$P_M = 13 \text{ dB} - 2 \text{ dB} - 2.5 \text{ dB} - 1 \text{ dB} - 0.5 \text{ dB}$$

$$P_M = 7 \text{ dB}$$

The following sample calculation for an 8-km-long single-mode link with a  $P_B$  of 13 dB uses the estimated values from [Table 98 on page 237](#). This example calculates LL as the sum of fiber attenuation (8 km @ 0.5 dB/km, or 4 dB) and loss for seven connectors (0.5 dB per connector, or 3.5 dB). The  $P_M$  is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 8 \text{ km} (0.5 \text{ dB/km}) - 7(0.5 \text{ dB})$$

$$P_M = 13 \text{ dB} - 4 \text{ dB} - 3.5 \text{ dB}$$

$$P_M = 5.5 \text{ dB}$$

In both the examples, the calculated  $P_M$  is greater than zero, indicating that the link has sufficient power for transmission and does not exceed the maximum receiver input power.

## Routing Engine Interface Cable and Wire Specifications for MX Series Routers

[Table 99 on page 238](#) lists the specifications for the cables that connect to management ports and the wires that connect to the alarm relay contacts.



**NOTE:** In routers where the Routing Engine (RE) and Control Board (CB) are integrated into a single board, a CB-RE is known as Routing and Control Board (RCB). The RCB is a single FRU that provides RE and CB functionality.

**Table 99: Cable and Wire Specifications for Routing Engine and RCB Management and Alarm Interfaces**

Port	Cable Specification	Maximum Length	Router Receptacle
Routing Engine console or auxiliary interface	RS-232 (EIA-232) serial cable	1.83 m	RJ-45 socket

**Table 99: Cable and Wire Specifications for Routing Engine and RCB Management and Alarm Interfaces**  
(Continued)

Port	Cable Specification	Maximum Length	Router Receptacle
Routing Engine Ethernet interface	Category 5 cable or equivalent suitable for 100Base-T operation	100 m	RJ-45 autosensing
Alarm relay contacts	Wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm <sup>2</sup> )	None	—



**NOTE:**

We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.

## MX240 Management and Console Port Specifications and Pinouts

### IN THIS SECTION

- [RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port | 240](#)

## RJ-45 Connector Pinouts for an MX Series Routing Engine ETHERNET Port

The port on the Routing Engine labeled **ETHERNET** is an autosensing 10/100-Mbps Ethernet RJ-45 receptacle that accepts an Ethernet cable for connecting the Routing Engine to a management LAN (or other device that supports out-of-band management). [Table 100 on page 240](#) describes the RJ-45 connector pinout.

**Table 100: RJ-45 Connector Pinout for the Routing Engine ETHERNET Port**

Pin	Signal
1	TX+
2	TX-
3	RX+
4	Termination network
5	Termination network
6	RX-
7	Termination network
8	Termination network



# RJ-45 Connector Pinouts for MX Series Routing Engine AUX and CONSOLE Ports

The ports on the Routing Engine labeled **AUX** and **CONSOLE** are asynchronous serial interfaces that accept an RJ-45 connector. The ports connect the Routing Engine to an auxiliary or console management device. [Table 101 on page 241](#) describes the RJ-45 connector pinout.

**Table 101: RJ-45 Connector Pinout for the AUX and CONSOLE Ports**

Pin	Signal	Description
1	RTS	Request to Send
2	DTR	Data Terminal Ready
3	TXD	Transmit Data
4	Ground	Signal Ground
5	Ground	Signal Ground
6	RXD	Receive Data
7	DSR/DCD	Data Set Ready
8	CTS	Clear to Send

# 4

CHAPTER

## Initial Installation and Configuration

---

### IN THIS CHAPTER

- Installing an MX240 Router Overview | 243
  - Unpacking the MX240 Router | 244
  - Installing the MX240 Router | 249
  - Connecting the MX240 Router to Power | 278
  - Connecting the MX240 Router to the Network | 291
  - Register Products—Mandatory to Validate SLAs | 297
  - Initially Configuring the MX240 Router | 298
-

# Installing an MX240 Router Overview

To install the MX240 router:

1. Prepare your installation site as described in ["MX240 Site Preparation Checklist" on page 208](#).
2. Review the safety guidelines and warnings.
  - [General Safety Guidelines for Juniper Networks Devices](#)
  - [General Safety Warnings for Juniper Networks Devices](#)
3. Unpack the router and verify the parts.
  - a. ["Unpacking the MX240 Router" on page 244](#)
  - b. ["Verifying the MX240 Router Parts Received" on page 246](#)
4. Install the mounting hardware.
  - ["Installing the MX240 Router Mounting Hardware for a Rack or Cabinet" on page 250](#)
  - ["Moving the Mounting Brackets for Center-Mounting the MX240 Router" on page 252](#)
5. Lift the router on to the rack. Because of the weight of the router, we recommend that you use a mechanical lift.
  - ["Installing the MX240 Router By Using a Mechanical Lift" on page 258](#)
  - ["Installing the MX240 Chassis in the Rack Manually" on page 271](#)
6. Connect cables to the network and external devices as described in [Connecting the MX240 Router to Management and Alarm Devices](#).
7. Connect the grounding cable as described in ["Grounding the MX240 Router" on page 279](#).
8. Connect the AC power cord or DC power cables:
  - ["Powering On an AC-Powered MX240 Router" on page 282](#)
  - ["Powering On a DC-Powered MX240 Router with Normal Capacity Power Supplies" on page 286](#)
9. Power on the router:
10. Perform the initial system configuration as described in ["Initially Configuring the MX240 Router" on page 298](#).

## RELATED DOCUMENTATION

*Definition of Safety Warning Levels*

[MX240 Router Physical Specifications](#) | 209

# Unpacking the MX240 Router

## IN THIS SECTION

- [Tools and Parts Required to Unpack the MX240 Router | 244](#)
- [Unpacking the MX240 Router | 244](#)
- [Verifying the MX240 Router Parts Received | 246](#)

## Tools and Parts Required to Unpack the MX240 Router

To unpack the router and prepare for installation, you need the following tools:

- Phillips (+) screwdriver, number 2
- 1/2-in. or 13-mm open-end or socket wrench to remove bracket bolts from the shipping pallet
- Blank panels to cover any slots not occupied by a component

## Unpacking the MX240 Router

The router is shipped in a wooden crate. A wooden pallet forms the base of the crate. The router chassis is bolted to this pallet. Quick Start installation instructions and a cardboard accessory box are also included in the shipping crate.

The shipping container measures 21 in. (53.3 cm) high, 23.5 in. (60.0 cm) wide, and 32.5 in. (82.5 cm) deep. The total weight of the container containing the router and accessories can range from 93 lb (42.2 kg) to 169 lb (76.7 kg).




**NOTE:** The router is maximally protected inside the shipping crate. Do not unpack it until you are ready to begin installation.

To unpack the router (see [Figure 53 on page 245](#)):

1. Move the shipping crate to a staging area as close to the installation site as possible, where you have enough room to remove the components from the chassis. While the chassis is bolted to the pallet, you can use a forklift or pallet jack to move it.
2. Position the shipping crate with the arrows pointing up.
3. Open all the latches on the shipping crate.
4. Remove the front door of the shipping crate cover and set it aside.
5. Slide the remainder of the shipping crate cover off the pallet.
6. Remove the foam covering the top of the router.
7. Remove the accessory box and the Quick Start installation instructions.
8. Verify the parts received against the lists.
9. Remove the vapor corrosion inhibitor (VCI) packs attached to the pallet, being careful not to break the VCI packs open.
10. To remove the brackets holding the chassis on the pallet, use a 1/2-in. socket wrench and a number 2 Phillips screwdriver to remove the bolts and screws from the brackets.
11. Store the brackets and bolts inside the accessory box.
12. Save the shipping crate cover, pallet, and packing materials in case you need to move or ship the router at a later time.

**Figure 53: Contents of the Shipping Crate**

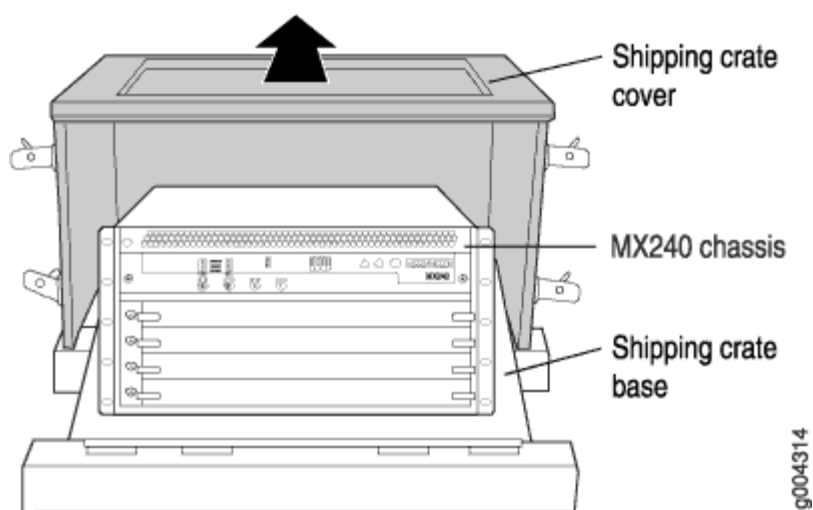

## Verifying the MX240 Router Parts Received

A packing list is included in each shipment. Check the parts in the shipment against the items on the packing list. The packing list specifies the part numbers and descriptions of each part in your order.

If any part is missing, contact a customer service representative.

A fully configured router contains the router chassis with installed components, listed in [Table 102 on page 246](#), and an accessory box, which contains the parts listed in [Table 103 on page 247](#). The parts shipped with your router can vary depending on the configuration you ordered.

**Table 102: Parts List for a Fully Configured Routers**

Component	Quantity
Chassis, including midplane, craft interface, and rack-mounting brackets	1
DPCs	Up to 3
MPCs	Up to 3
FPC	Up to 1
Routing Engines	1 or 2
SCBs	1 or 2
DC power supplies	1 or 2
AC power supplies (220 V)	1 or 2
AC power supplies (110 V)	2 or 4
Fan tray	1
Air filter	1

**Table 102: Parts List for a Fully Configured Routers (Continued)**

Component	Quantity
Air filter tray	1
Quick start installation instructions	1
Mounting shelf	1
Blank panels for slots without components installed	One blank panel for each slot not occupied by a component

**Table 103: Accessory Box Parts List**

Part	Quantity
Screws to mount chassis and small shelf	22
DC power terminal Lugs, 6-AWG	5
Terminal block plug, 3-pole, 5.08 mm spacing, 12A, to connect the router alarms	2
Label, accessories contents, MX240	1

Table 103: Accessory Box Parts List *(Continued)*

Part	Quantity
USB flash drive with Junos OS  <b>NOTE:</b> The hardware device packages shipped after September 2025 may not include bootable USB flash drives. If your device package does not include a bootable USB flash drive, we recommend that you create a bootable USB flash drive following the instructions provided in <a href="#">Best Practices for Upgrade/Downgrade from Bootable USB</a> . You may obtain a USB flash drive from any commercial source. The USB flash drive must have: <ul style="list-style-type: none"> <li>• A minimum of 16 GB storage space</li> <li>• No security features, such as a keyed boot partition</li> </ul>	1
Read me first document	1
Affidavit for T1 connection	1
Juniper Networks Product Warranty	1
End User License Agreement	1
Document sleeve	1
3 in. x 5 in. pink bag	2
9 in. x 12 in. pink bag, ESD	2
Accessory box, 19 in. x 12 in. x 3 in.	1
ESD wrist strap with cable	1



**NOTE:**

We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.

## Installing the MX240 Router

### IN THIS SECTION

- Installing the MX240 Router Mounting Hardware for a Rack or Cabinet | 250
- Moving the Mounting Brackets for Center-Mounting the MX240 Router | 252
- Tools Required to Install the MX240 Router with a Mechanical Lift | 253
- Removing Components from the MX240 Router Before Installing it with a Lift | 253
- Installing the MX240 Router By Using a Mechanical Lift | 258
- Reinstalling Components in the MX240 Router After Installing it with a Lift | 260
- Tools Required to Install the MX240 Router without a Mechanical Lift | 265
- Removing Components from the MX240 Router Before Installing it without a Lift | 265
- Installing the MX240 Chassis in the Rack Manually | 271
- Reinstalling Components in the MX240 Router After Installing it without a Lift | 273

# Installing the MX240 Router Mounting Hardware for a Rack or Cabinet

The router can be installed in a four-post rack or cabinet or an open-frame rack. Install the mounting hardware on the rack before installing the router.

Install the mounting shelf, which is included in the shipping container, before installing the router. We recommend that you install the mounting shelf because the weight of a fully loaded chassis can be up to 128 lb (58.1 kg).

[Table 104 on page 250](#) specifies the holes in which you insert cage nuts and screws to install the mounting hardware required (an **X** indicates a mounting hole location). The hole distances are relative to one of the standard U divisions on the rack. The bottom of all mounting shelves is at 0.04 in. (0.02 U) above a “U” division.

**Table 104: Four-Post Rack or Cabinet Mounting Hole Locations**

Hole	Distance Above U Division		Mounting Shelf
4	2.00 in. (5.1 cm)	1.14 U	<b>X</b>
3	1.51 in. (3.8 cm)	0.86 U	<b>X</b>
2	0.88 in. (2.2 cm)	0.50 U	<b>X</b>
1	0.25 in. (0.6 cm)	0.14 U	<b>X</b>

To install the mounting shelf on the front rails of a four-post rack or cabinet, or the rails of an open-frame rack:

1. If needed, install cage nuts in the holes specified in [Table 104 on page 250](#).
2. On the back of each rack rail, partially insert a mounting screw into the lowest hole specified in [Table 104 on page 250](#).
3. Install the small shelf on the back of the rack rails. Rest the bottom slot of each flange on a mounting screw.
4. Partially insert the remaining screws into the open holes in each flange of the small shelf (see [Figure 54 on page 251](#) or [Figure 55 on page 252](#)).
5. Tighten all the screws completely.

Figure 54: Installing the Front-Mounting Hardware for a Four-Post Rack or Cabinet


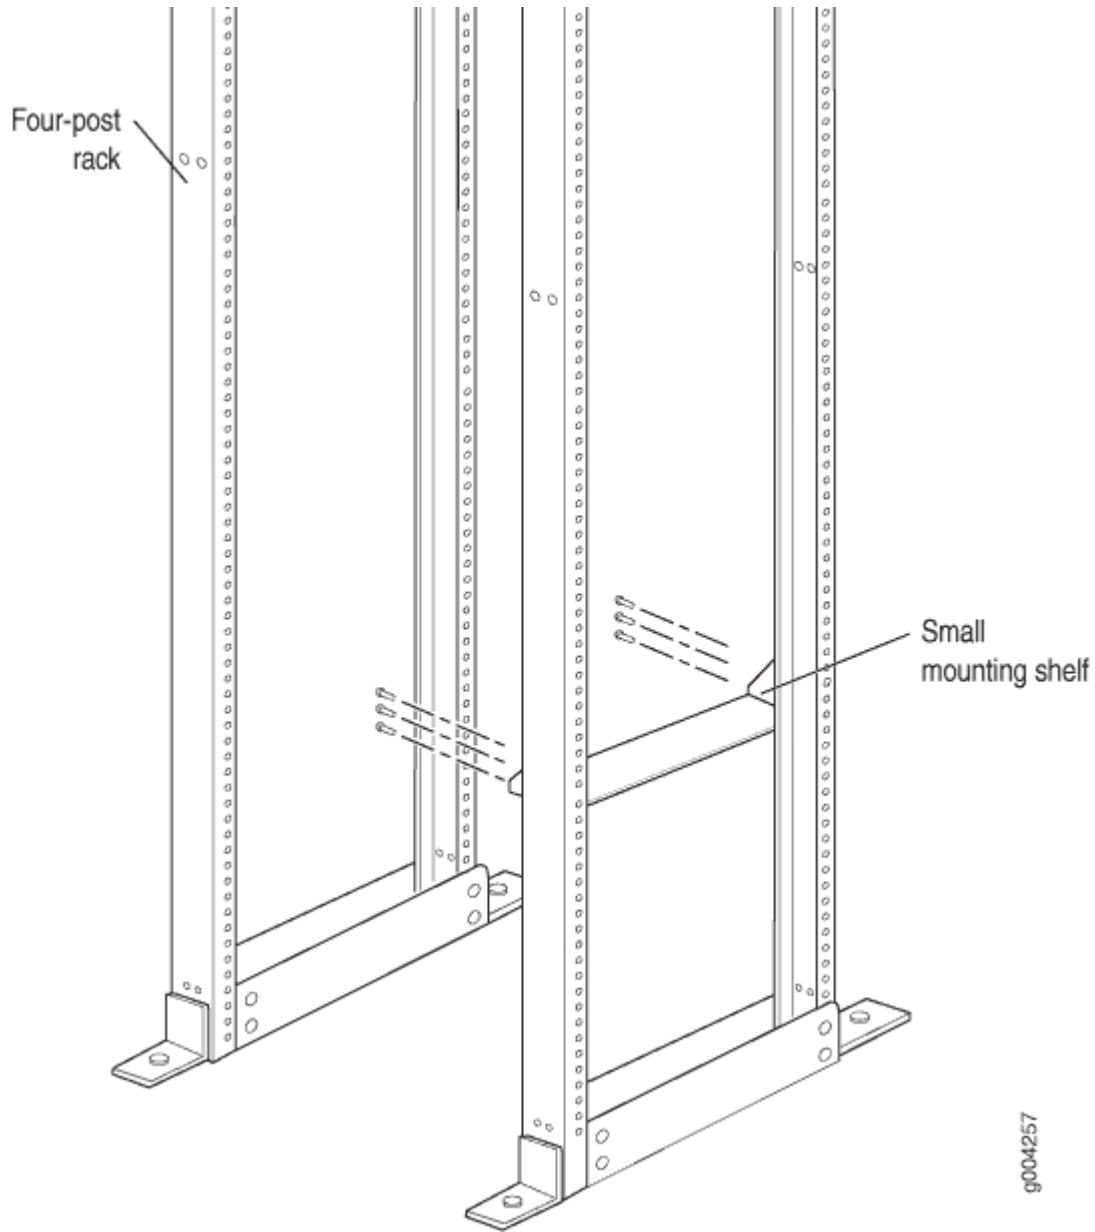


Figure 55: Installing the Mounting Hardware for an Open-Frame Rack

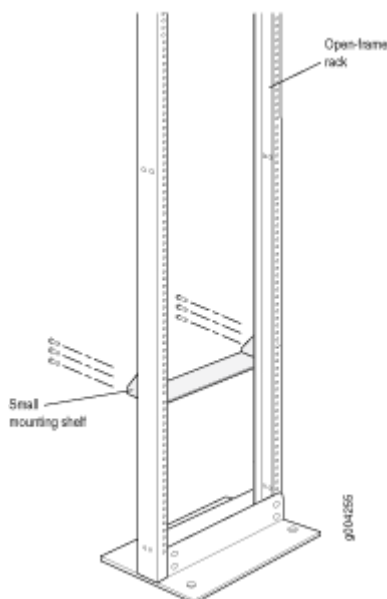

## Moving the Mounting Brackets for Center-Mounting the MX240 Router

Two removable mounting brackets are attached to the mounting holes closest to the front of the chassis. You can move the pair of brackets to another position on the side of the chassis for center-mounting the router.

To move the mounting brackets from the front of the chassis toward the center of the chassis:

1. Remove the three screws at the top and center of the bracket.
2. Pull the top of the bracket slightly away from the chassis. The bottom of the bracket contains a tab that inserts into a slot in the chassis.
3. Pull the bracket away from the chassis so that the tab is removed from the chassis slot.
4. Insert the bracket tab into the slot in the bottom center of the chassis.
5. Align the bracket with the two mounting holes located toward the top center of the chassis.

There is no mounting hole in the center of the chassis that corresponds to the hole in the center of the bracket.

6. Insert the two screws at the top of the bracket and tighten each partially.

Two screws are needed for mounting the bracket on the center of the chassis. You do not need the third screw.

7. Tighten the two screws completely.
8. Repeat the procedure for the other bracket.

## Tools Required to Install the MX240 Router with a Mechanical Lift

To install the router, you need the following tools:

- Mechanical lift
- Phillips (+) screwdriver, number 2
- 7/16-in. (11 mm) nut driver
- ESD grounding wrist strap

## Removing Components from the MX240 Router Before Installing it with a Lift

### IN THIS SECTION

- [Removing the Power Supplies Before Installing the MX240 Router with a Lift | 253](#)
- [Removing the Fan Tray Before Installing the MX240 Router with a Lift | 254](#)
- [Removing the SCBs Before Installing the MX240 Router with a Lift | 255](#)
- [Removing the DPCs Before Installing the MX240 Router with a Lift | 256](#)
- [Removing the FPC Before Installing the MX240 Router with a Lift | 257](#)

To make the router light enough to install, you first remove most components from the chassis. The procedures in this section for removing components from the chassis are for initial installation only, and assume that you have not connected power cables to the router. The following procedures describe how to remove components from the chassis, first from the rear and then from the front:

### Removing the Power Supplies Before Installing the MX240 Router with a Lift


Remove the leftmost power supply first and then work your way to the right. To remove the AC or DC power supplies (see Figure 3):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. For an AC-powered router, switch the AC input switch on the power supply to the off (O) position. For a DC-powered router, switch the DC circuit breaker on the power supply to the off (O) position.

We recommend this even though the power supplies are not connected to power sources.

3. Pull the power supply straight out of the chassis.

**Figure 56: Removing a Power Supply Before Installing the Router**

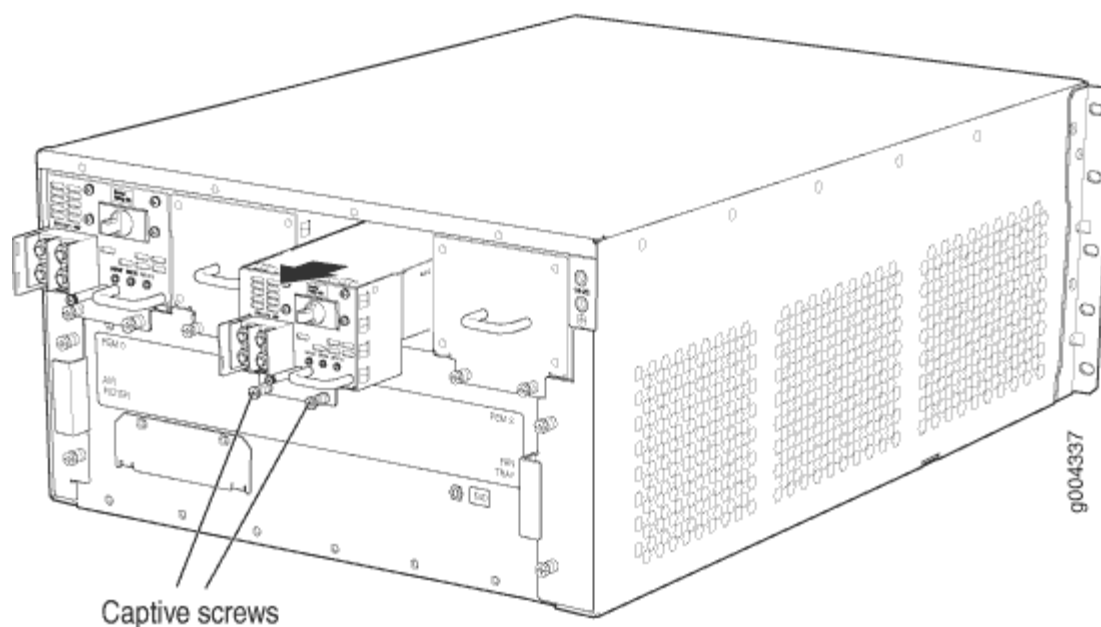


### Removing the Fan Tray Before Installing the MX240 Router with a Lift

To remove the fan tray (see [Figure 57 on page 255](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. Loosen the captive screws on the fan tray faceplate.
3. Grasp the fan tray handle and pull it out approximately 1 to 3 inches.
4. Press the latch located on the inside of the fan tray to release it from the chassis.
5. Place one hand under the fan tray to support it and pull the fan tray completely out of the chassis.

**Figure 57: Removing the Fan Tray**

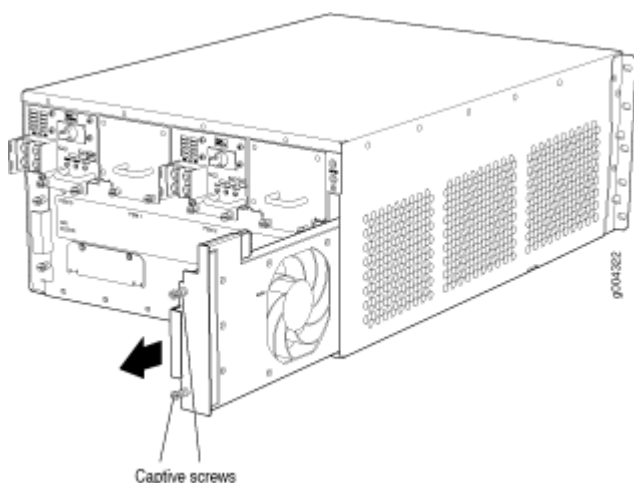

## Removing the SCBs Before Installing the MX240 Router with a Lift

To remove the SCBs (see [Figure 58 on page 256](#)):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Rotate the ejector handles simultaneously counterclockwise to unseat the SCB.
4. Grasp the ejector handles and slide the SCB about halfway out of the chassis.
5. Place one hand underneath the SCB to support it and slide it completely out of the chassis. Place it on the antistatic mat.



**CAUTION:** Do not stack hardware components on one another after you remove them. Place each component on an antistatic mat resting on a stable, flat surface.

6. Repeat the procedure for the second SCB.

Figure 58: Removing an SCB

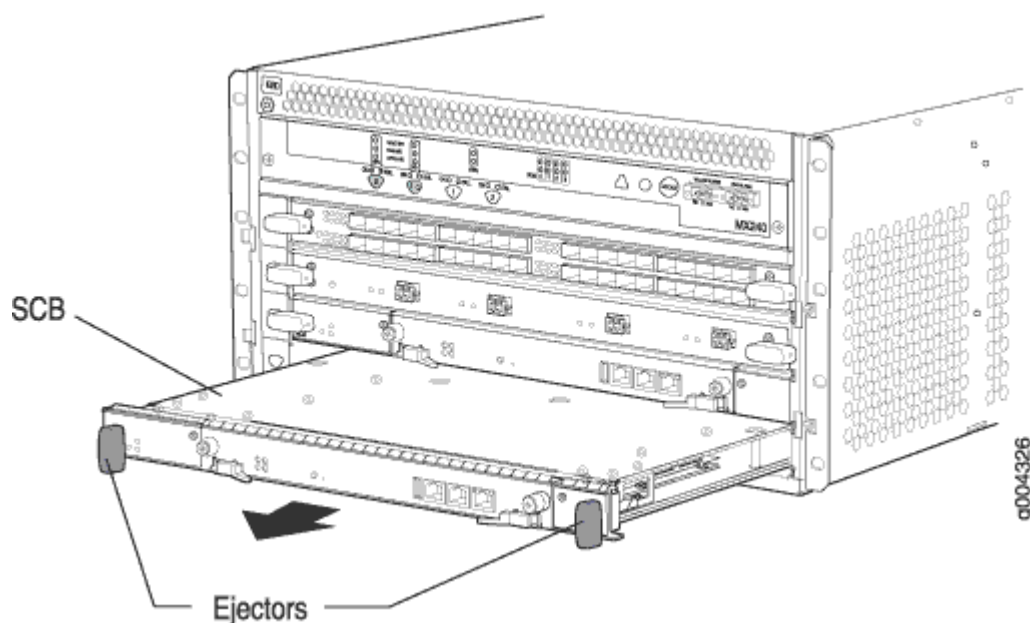

### Removing the DPCs Before Installing the MX240 Router with a Lift

To remove a DPC (see [Figure 59 on page 257](#)):

1. Have ready an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC using an optical interface on the DPC that you are removing.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Simultaneously turn both the ejector handles counterclockwise to unseat the DPC.
4. Grasp the handles and slide the DPC straight out of the card cage halfway.
5. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.




**CAUTION:** The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis. When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Do not stack DPC on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.



Figure 59: Removing a DPC

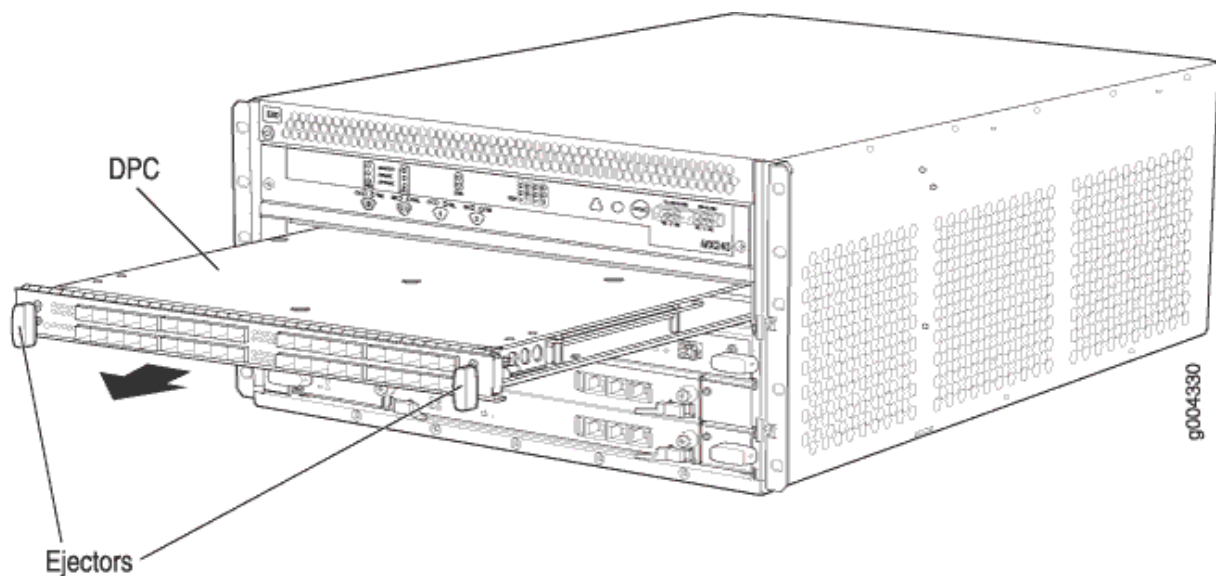

### Removing the FPC Before Installing the MX240 Router with a Lift


To remove an FPC (see [Figure 60 on page 258](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
2. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
3. Grasp the handles and slide the FPC straight out of the card cage halfway.
4. Place one hand around the front of the FPC and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



**CAUTION:** The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis. When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Figure 60: Removing an FPC

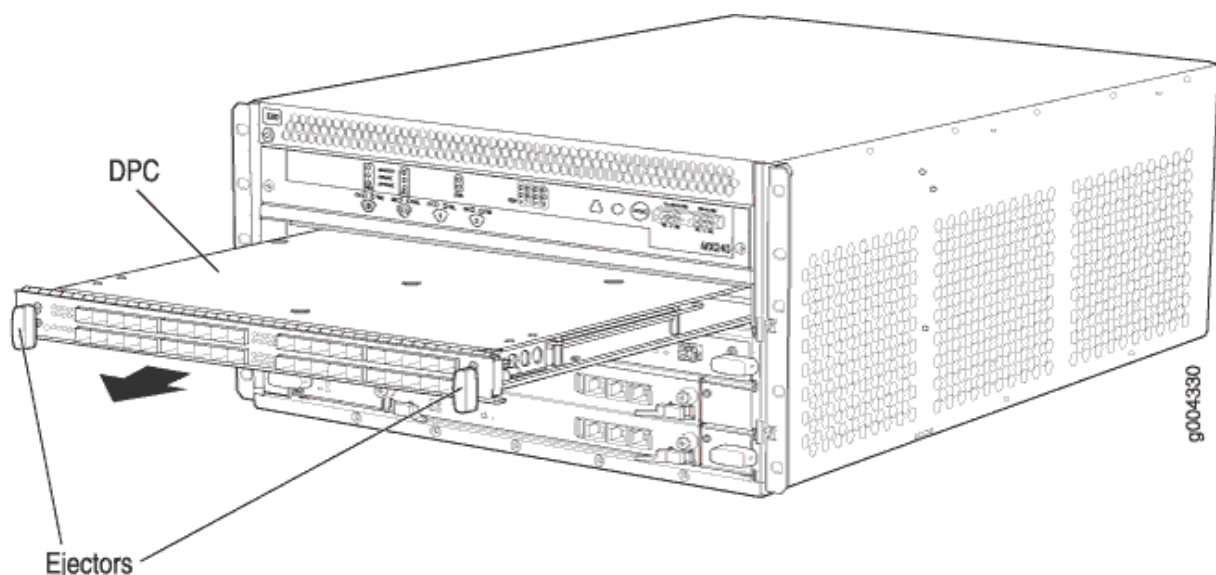

## Installing the MX240 Router By Using a Mechanical Lift

Because of the router's size and weight—up to 128 lb (58.1 kg) depending on the configuration—we strongly recommend that you install the router using a mechanical lift. To make the router light enough to install with a lift, you must first remove most components from the chassis.




**CAUTION:** Before front mounting the router in a rack, have a qualified technician verify that the rack is strong enough to support the router's weight and is adequately supported at the installation site.

To install the router using a lift (see [Figure 61 on page 259](#)):

1. Ensure that the rack is in its permanent location and is secured to the building. Ensure that the installation site allows adequate clearance for both airflow and maintenance.
2. Load the router onto the lift, making sure it rests securely on the lift platform.
3. Using the lift, position the router in front of the rack or cabinet, centering it in front of the mounting shelf.
4. Lift the chassis approximately 0.75 in. above the surface of the mounting shelf and position it as close as possible to the shelf.
5. Carefully slide the router onto the mounting shelf so that the bottom of the chassis and the mounting shelf overlap by approximately two inches.

6. Slide the router onto the mounting shelf until the mounting brackets contact the rack rails. The shelf ensures that the holes in the mounting brackets of the chassis align with the holes in the rack rails.
7. Move the lift away from the rack.
8. Install a mounting screw into each of the open mounting holes aligned with the rack, starting from the bottom.
9. Visually inspect the alignment of the router. If the router is installed properly in the rack, all the mounting screws on one side of the rack should be aligned with the mounting screws on the opposite side and the router should be level.

**Figure 61: Installing the Router in the Rack**

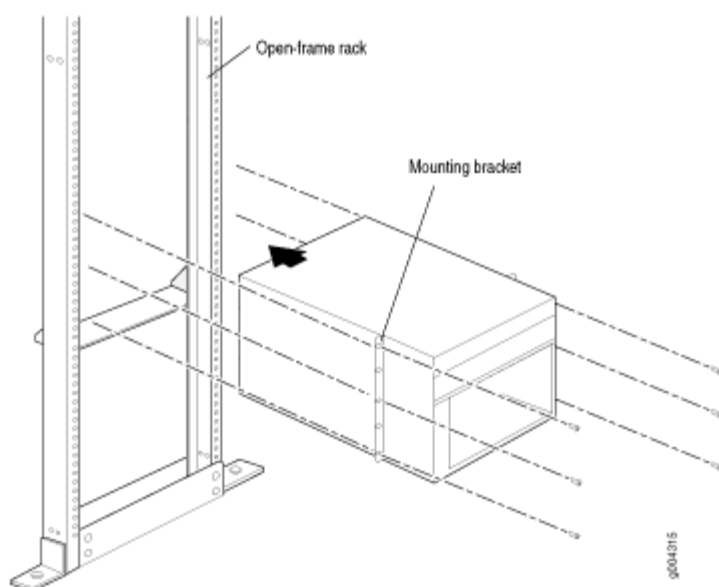

**NOTE:** This illustration depicts the router being installed in an open-frame rack. For an illustration of the mounting hardware required for a four-post open rack or open cabinet, see ["Installing the MX240 Router Mounting Hardware for a Rack or Cabinet" on page 250](#).

## Reinstalling Components in the MX240 Router After Installing it with a Lift

### IN THIS SECTION

- [Reinstalling the Power Supplies After Installing the MX240 Router with a Lift | 260](#)
- [Reinstalling the Fan Tray After Installing the MX240 Router with a Lift | 261](#)
- [Reinstalling the SCBs After Installing the MX240 Router with a Lift | 262](#)
- [Reinstalling the DPCs After Installing the MX240 Router with a Lift | 263](#)
- [Reinstalling the FPCs After Installing the MX240 Router with a Lift | 264](#)


After the router is installed in the rack, you reinstall the removed components before booting and configuring the router. The following procedures describe how to reinstall components in the chassis, first in the rear and then in the front:

### Reinstalling the Power Supplies After Installing the MX240 Router with a Lift

Reinstall the rightmost power supply first and then work your way to the left. To reinstall the AC or DC power supplies (see Figure 9, which shows the installation of the DC power supplies):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. For an AC-powered router, switch the AC input switch on the power supply to the off (O) position. For a DC-powered router, switch the circuit breaker on the power supply to the off (O) position. We recommend this even though the power supplies are not connected to power sources.
3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten the captive screws.

**Figure 62: Reinstalling a Power Supply**

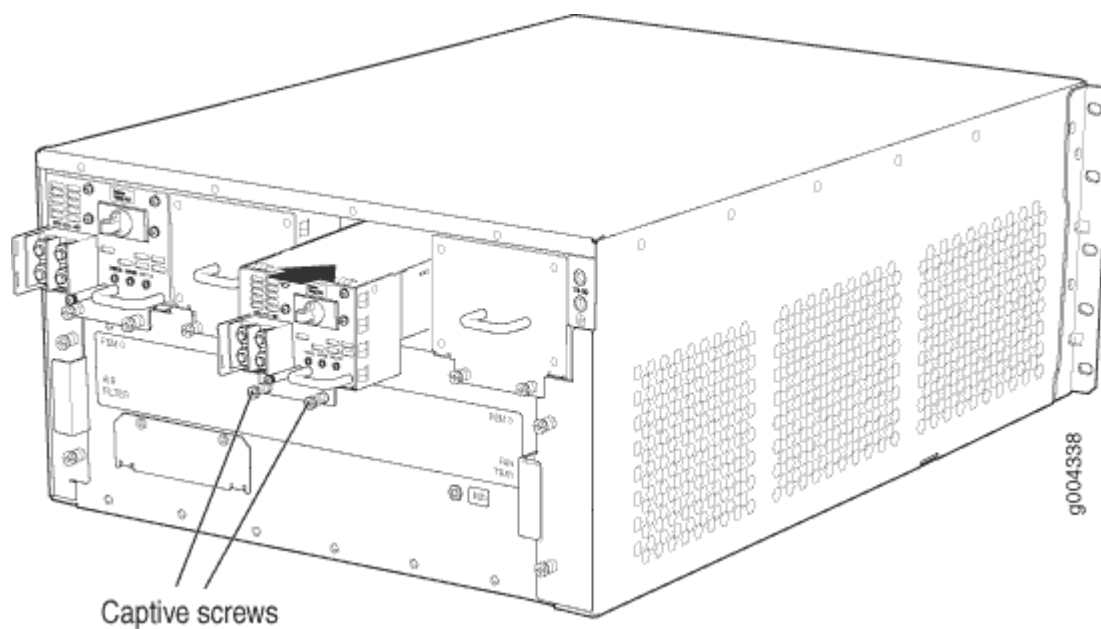


### **Reinstalling the Fan Tray After Installing the MX240 Router with a Lift**

To reinstall the fan tray (see [Figure 63 on page 262](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray on each side and insert it straight into the chassis. Note the correct orientation by the "this side up" label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 63: Reinstalling a Fan Tray

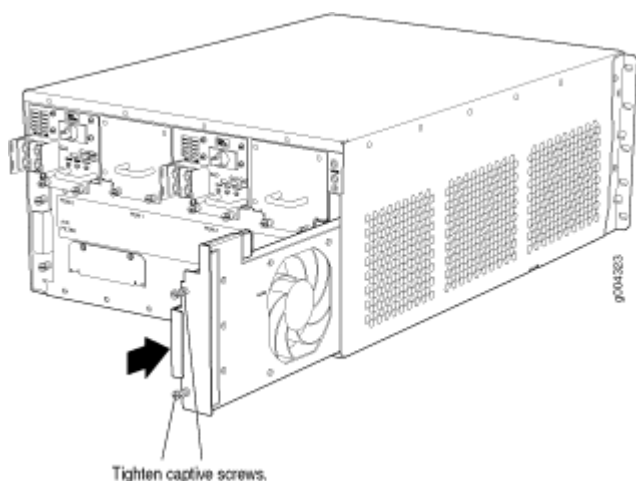

## Reinstalling the SCBs After Installing the MX240 Router with a Lift


To reinstall an SCB (see [Figure 64 on page 263](#)):



**CAUTION:** Before removing or replacing an SCB, ensure that the ejector handles are stored vertically and pressed toward the center of the SCB.

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the SCB with the guides inside the chassis.
3. Slide the SCB into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles and rotate them simultaneously clockwise until the SCB is fully seated.
5. Place the ejector handles in their proper position, horizontally and toward the center of the board. To avoid blocking the visibility of the LEDs position the ejectors over the PARK icon.

**Figure 64: Reinstalling an SCB**

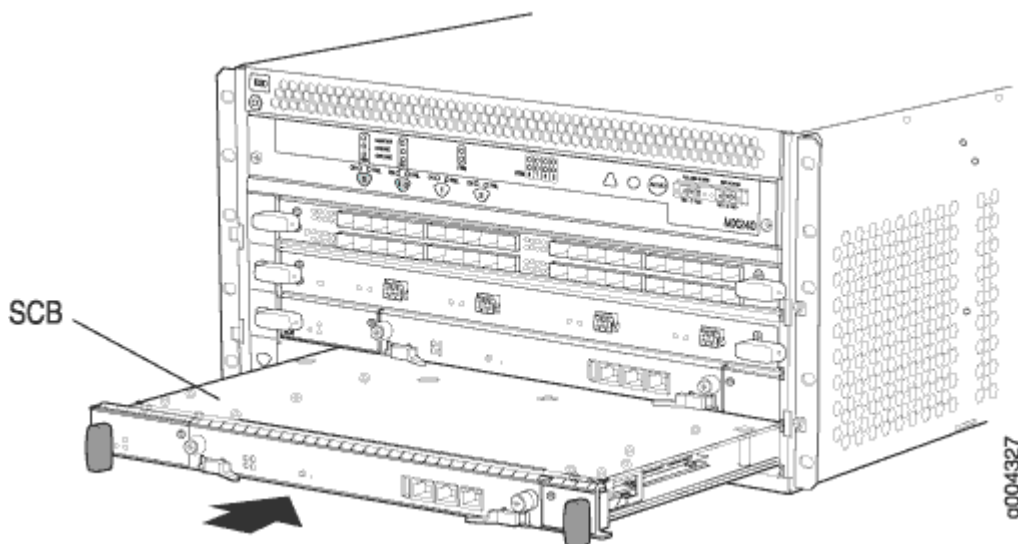


### Reinstalling the DPCs After Installing the MX240 Router with a Lift

To reinstall a DPC (see [Figure 65 on page 264](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you.
6. Lift the DPC into place and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles and rotate them clockwise simultaneously until the DPC is fully seated.

**Figure 65: Reinstalling a DPC**

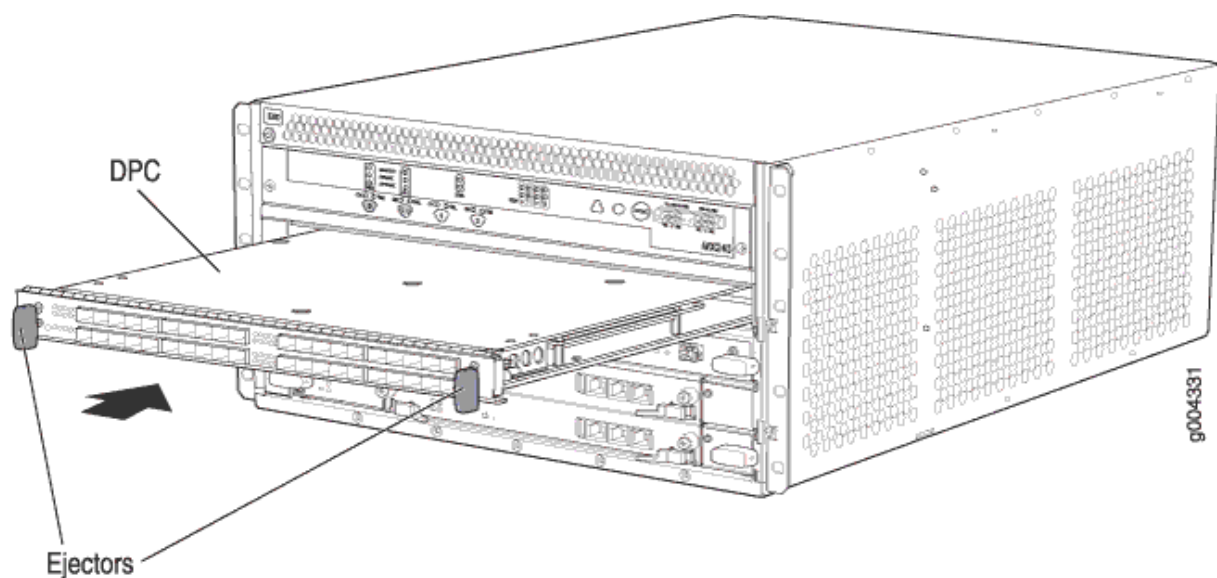


### Reinstalling the FPCs After Installing the MX240 Router with a Lift

To reinstall a DPC (see [Figure 66 on page 265](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat or remove it from its electrostatic bag.
3. Identify the two DPC slots on the router where the FPC will be installed.
4. Verify that each fiber-optic transceiver on the PIC is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the FPC so that the faceplate faces you.
6. Lift the FPC into place and carefully align the sides of the FPC with the guides inside the card cage.
7. Slide the FPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles and rotate them clockwise simultaneously until the FPC is fully seated.



Figure 66: Reinstalling an FPC

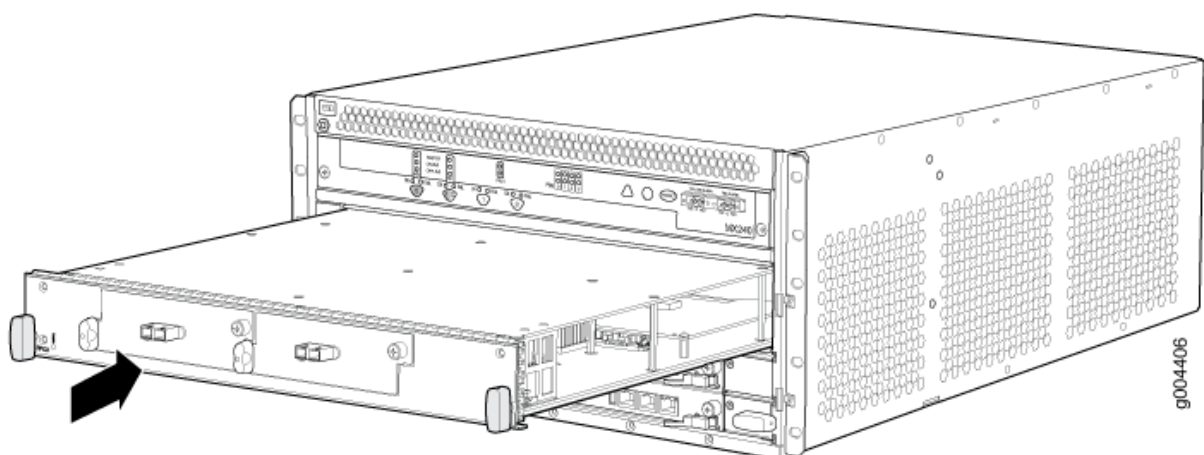

## RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

## Tools Required to Install the MX240 Router without a Mechanical Lift

To install the router, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 7/16-in. nut driver
- ESD grounding wrist strap

## Removing Components from the MX240 Router Before Installing it without a Lift

### IN THIS SECTION

- [Removing the Power Supplies Before Installing the MX240 Router without a Lift](#) | 266

- [Removing the Fan Tray Before Installing the MX240 Router without a Lift | 267](#)
- [Removing the SCBs Before Installing the MX240 Router without a Lift | 268](#)
- [Removing the DPCs Before Installing the MX240 Router without a Lift | 269](#)
- [Removing the FPC Before Installing the MX240 Router without a Lift | 270](#)


To make the router light enough to install manually, you first remove most components from the chassis. The procedures in this section for removing components from the chassis are for initial installation only, and assume that you have not connected power cables to the router. The following procedures describe how to remove components from the chassis, first from the rear and then from the front:

### **Removing the Power Supplies Before Installing the MX240 Router without a Lift**

Remove the leftmost power supply first and then work your way to the right. To remove the AC or DC power supplies (see Figure 14):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an approved site ESD grounding point. See the instructions for your site.
2. For an AC-powered router, switch the AC input switch on the power supply to the off (O) position. For a DC-powered router, switch the DC circuit breaker on the power supply to the off (O) position. We recommend this even though the power supplies are not connected to power sources.
3. Pull the power supply straight out of the chassis.

**Figure 67: Removing a Power Supply Before Installing the Router**

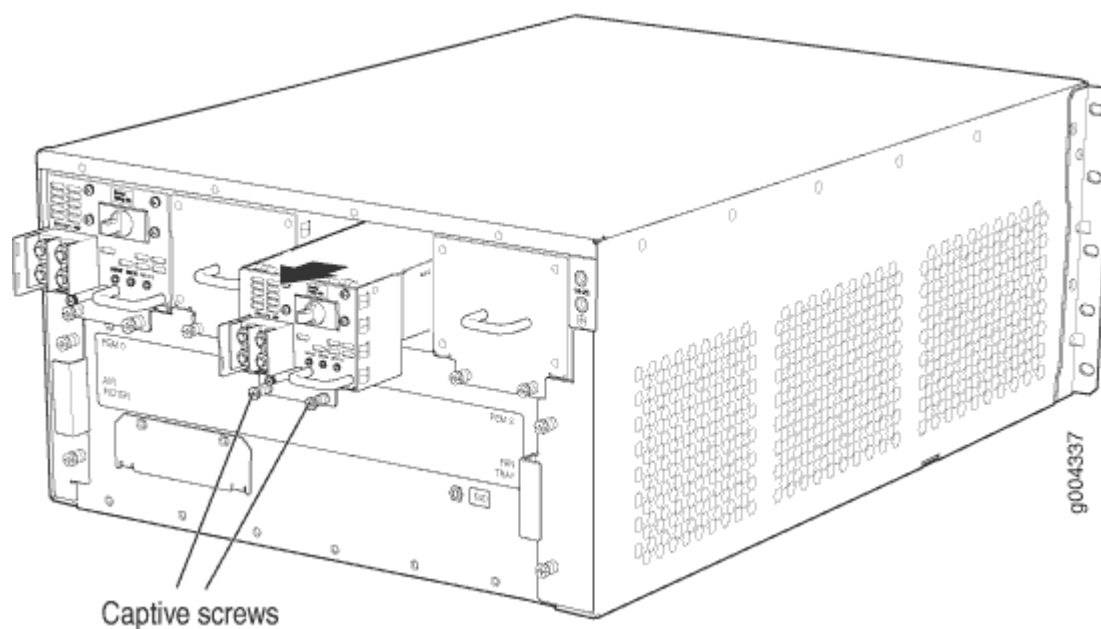


### **Removing the Fan Tray Before Installing the MX240 Router without a Lift**

To remove the fan tray (see [Figure 68 on page 268](#)):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an approved site ESD grounding point. See the instructions for your site.
2. Loosen the captive screws on the fan tray faceplate.
3. Grasp the fan tray handle, and pull it out approximately 1 to 3 inches.
4. Press the latch located on the inside of the fan tray to release it from the chassis.
5. Place one hand under the fan tray to support it, and pull the fan tray completely out of the chassis.

**Figure 68: Removing the Fan Tray**

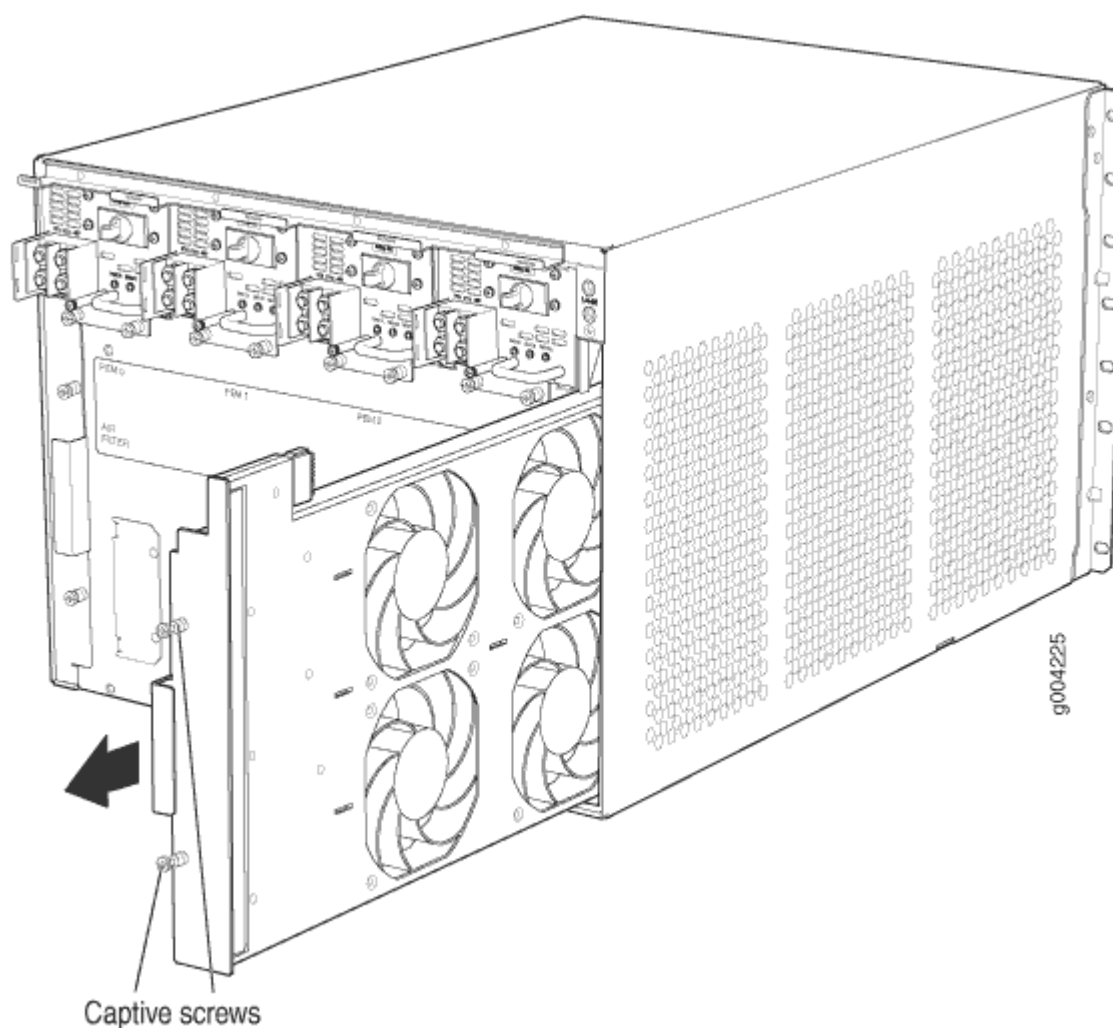

### Removing the SCBs Before Installing the MX240 Router without a Lift

To remove the SCBs (see [Figure 69 on page 269](#)):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an approved site ESD grounding point. See the instructions for your site.
3. Rotate the ejector handles simultaneously counterclockwise to unseat the SCB.
4. Grasp the ejector handles, and slide the SCB about halfway out of the chassis.
5. Place one hand underneath the SCB to support it, and slide it completely out of the chassis. Place it on the antistatic mat.



**CAUTION:** Do not stack hardware components on one another after you remove them. Place each component on an antistatic mat resting on a stable, flat surface.

6. Repeat the procedure for each SCB.

**Figure 69: Removing an SCB**

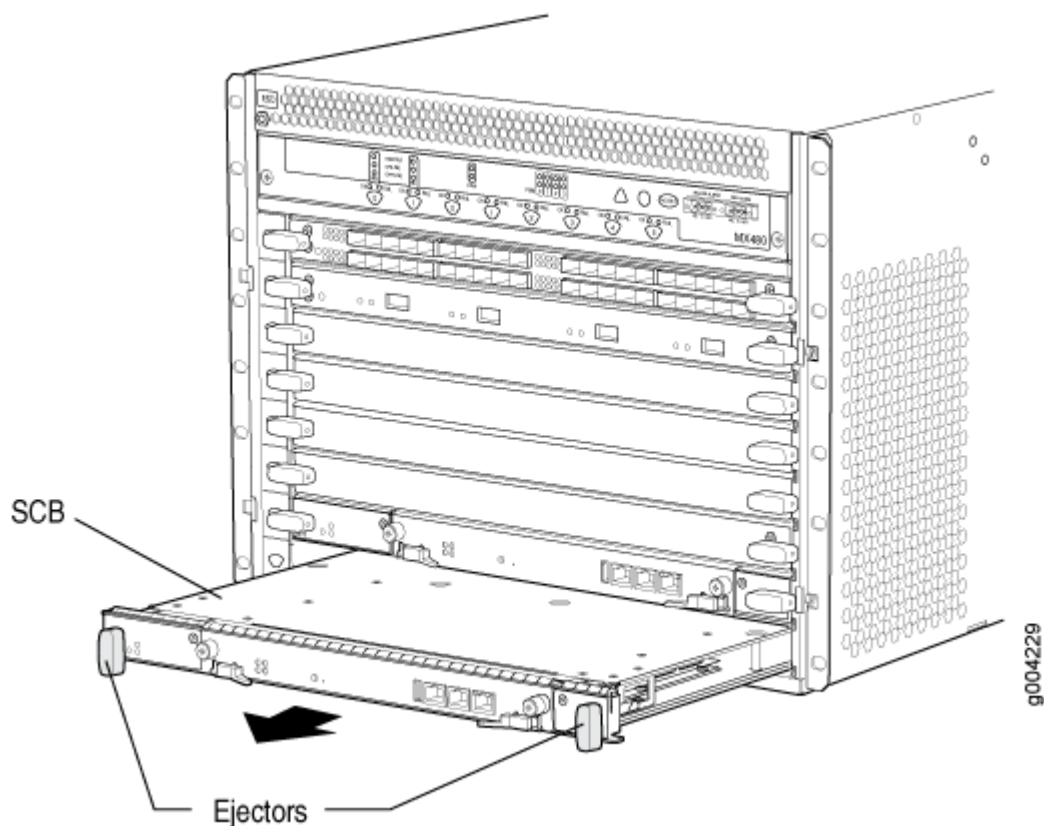

### Removing the DPCs Before Installing the MX240 Router without a Lift


To remove a DPC (see [Figure 70 on page 270](#)):

1. Have ready an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC using an optical interface on the DPC that you are removing.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an approved site ESD grounding point. See the instructions for your site.
3. Simultaneously turn both the ejector handles counterclockwise to unseat the DPC.
4. Grasp the handles, and slide the DPC straight out of the card cage halfway.
5. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.

**CAUTION:** The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis. When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Do not stack DPC on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

**Figure 70: Removing a DPC**

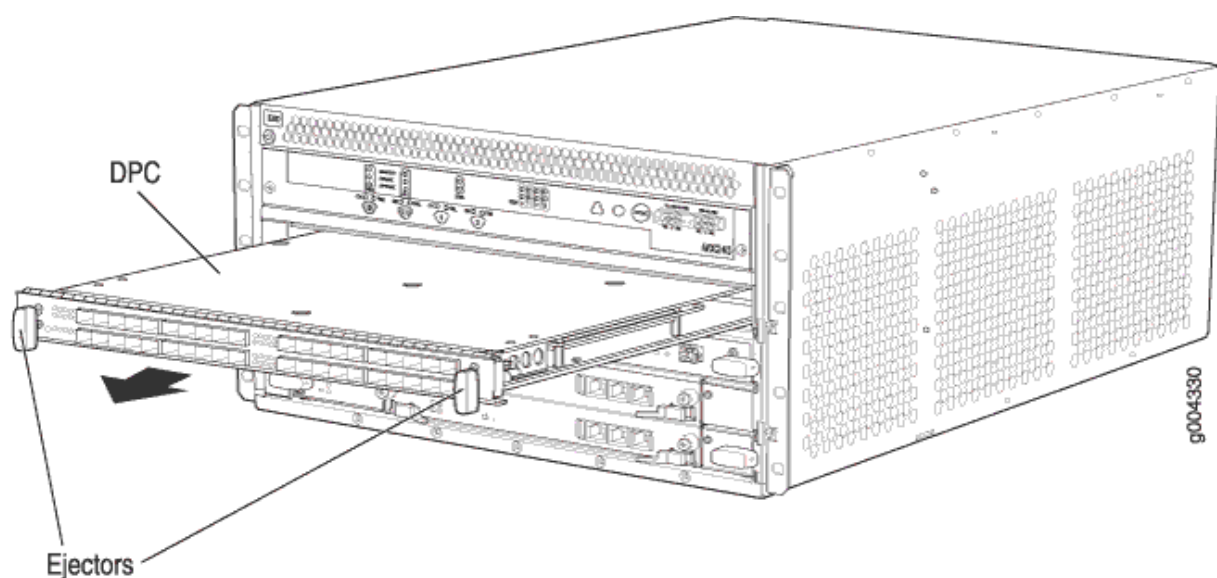

### Removing the FPC Before Installing the MX240 Router without a Lift


To remove an FPC (see [Figure 71 on page 271](#)):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an approved site ESD grounding point. See the instructions for your site.
2. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
3. Grasp the handles and slide the FPC straight out of the card cage halfway.
4. Place one hand around the front of the FPC and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.

**CAUTION:** The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis.

When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Figure 71: Removing an FPC

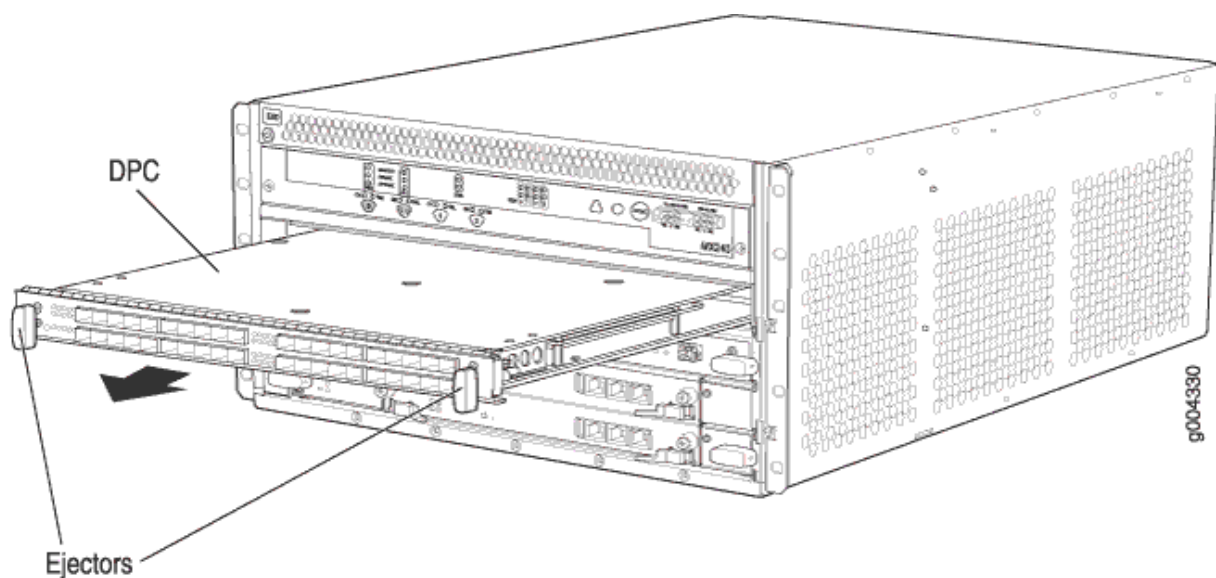

## Installing the MX240 Chassis in the Rack Manually

To install the router in the rack (see [Figure 72 on page 272](#)):



**CAUTION:** If you are installing more than one router in a rack, install the lowest one first. Installing a router in an upper position in a rack or cabinet requires a lift.



**CAUTION:** Before front mounting the router in a rack, have a qualified technician verify that the rack is strong enough to support the router's weight and is adequately supported at the installation site.



**CAUTION:** Lifting the chassis and mounting it in a rack requires two people. The empty chassis weighs approximately 52.0 lb (23.6 kg).

1. Ensure that the rack is in its permanent location and is secured to the building. Ensure that the installation site allows adequate clearance for both airflow and maintenance.


2. Position the router in front of the rack or cabinet, centering it in front of the mounting shelf. Use a pallet jack if one is available.
3. With one person on each side, hold onto the bottom of the chassis and carefully lift it onto the mounting shelf.



**WARNING:** To prevent injury, keep your back straight and lift with your legs, not your back. Avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

4. Slide the router onto the mounting shelf until the mounting brackets contact the rack rails. The shelf ensures that the holes in the mounting brackets of the chassis align with the holes in the rack rails.
5. Install a mounting screw into each of the open mounting holes aligned with the rack, starting from the bottom.
6. Visually inspect the alignment of the router. If the router is installed properly in the rack, all the mounting screws on one side of the rack should be aligned with the mounting screws on the opposite side and the router should be level.

**Figure 72: Installing the Router in the Rack**

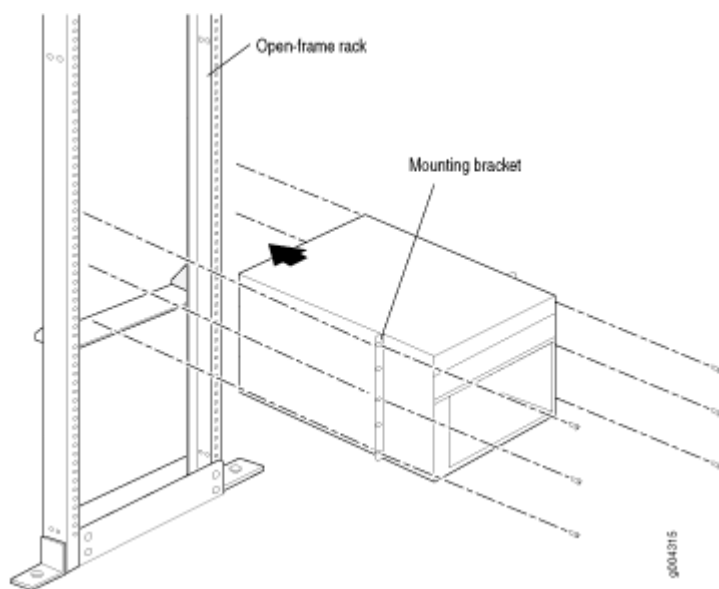

**NOTE:** This illustration depicts the router being installed in an open-frame rack. For an illustration of the mounting hardware required for a four-post rack or cabinet, see ["Installing the MX240 Router Mounting Hardware for a Rack or Cabinet" on page 250.](#)



## Reinstalling Components in the MX240 Router After Installing it without a Lift

### IN THIS SECTION

- [Reinstalling the Power Supplies After Installing the MX240 Router without a Lift | 273](#)
- [Reinstalling the Fan Tray After Installing the MX240 Router without a Lift | 274](#)
- [Reinstalling the SCBs After Installing the MX240 Router without a Lift | 275](#)
- [Reinstalling the DPCs After Installing the MX240 Router without a Lift | 276](#)
- [Reinstalling the FPCs After Installing the MX240 Router without a Lift | 277](#)


After the router is installed in the rack, you reinstall the removed components before booting and configuring the router. The following procedures describe how to reinstall components in the chassis, first in the rear and then in the front:

### Reinstalling the Power Supplies After Installing the MX240 Router without a Lift

Reinstall the rightmost power supply first and then work your way to the left. To reinstall the AC or DC power supplies (see Figure 20, which shows the installation of the DC power supplies):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. For an AC-powered router, switch the AC input switch on the power supply to the off (O) position. For a DC-powered router, switch the circuit breaker on the power supply to the off (O) position. We recommend this even though the power supplies are not connected to power sources.
3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten the captive screws.

**Figure 73: Reinstalling a Power Supply**

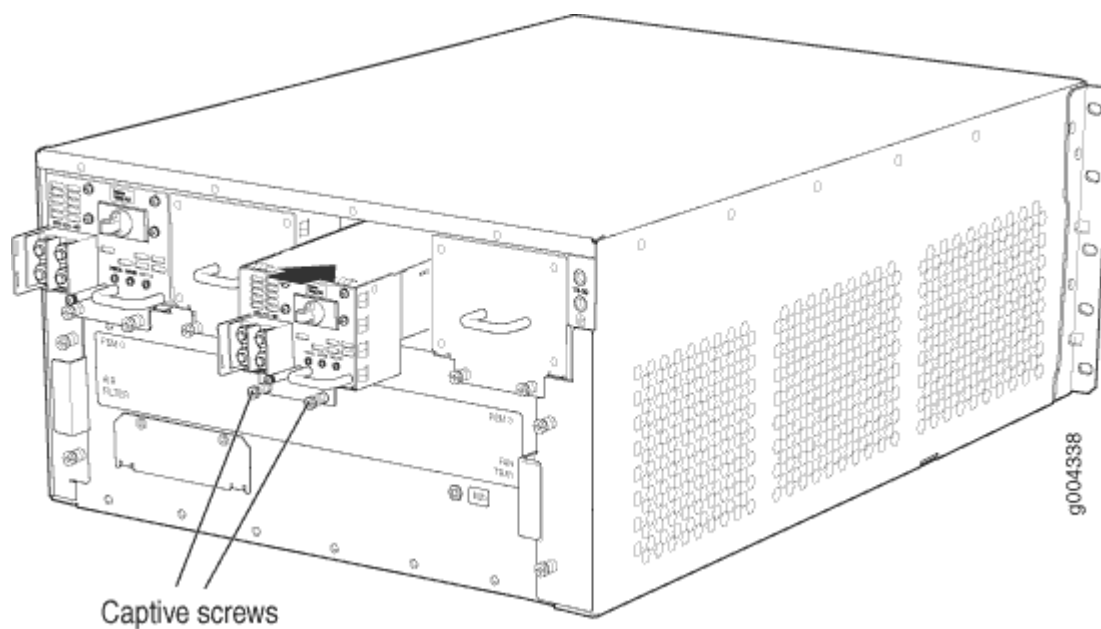


### Reinstalling the Fan Tray After Installing the MX240 Router without a Lift

To reinstall the fan tray (see [Figure 74 on page 275](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Grasp the fan tray on each side and insert it straight into the chassis. Note the correct orientation by the "this side up" label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

Figure 74: Reinstalling a Fan Tray

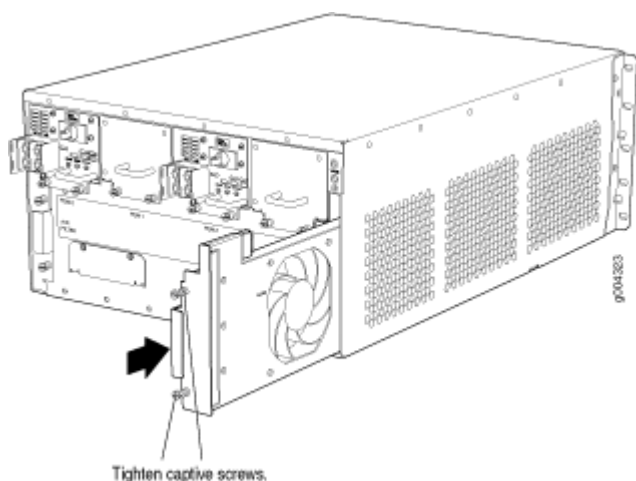

## Reinstalling the SCBs After Installing the MX240 Router without a Lift


To reinstall an SCB (see [Figure 75 on page 276](#)):



**CAUTION:** Before removing or replacing an SCB, ensure that the ejector handles are stored vertically and pressed toward the center of the SCB.

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the SCB with the guides inside the chassis.
3. Slide the SCB into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles and rotate them simultaneously clockwise until the SCB is fully seated.
5. Place the ejector handles in their proper position, horizontally and toward the center of the board. To avoid blocking the visibility of the LEDs position the ejectors over the PARK icon.

**Figure 75: Reinstalling an SCB**

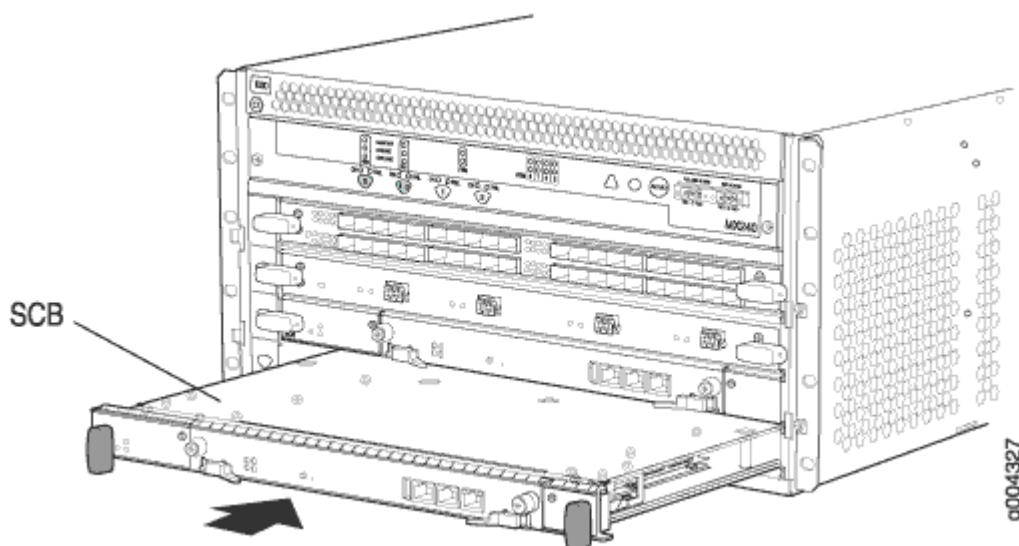


### Reinstalling the DPCs After Installing the MX240 Router without a Lift

To reinstall a DPC (see [Figure 76 on page 277](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Place the DPC on an antistatic mat or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you.
6. Lift the DPC into place and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles and rotate them clockwise simultaneously until the DPC is fully seated.

**Figure 76: Reinstalling a DPC**

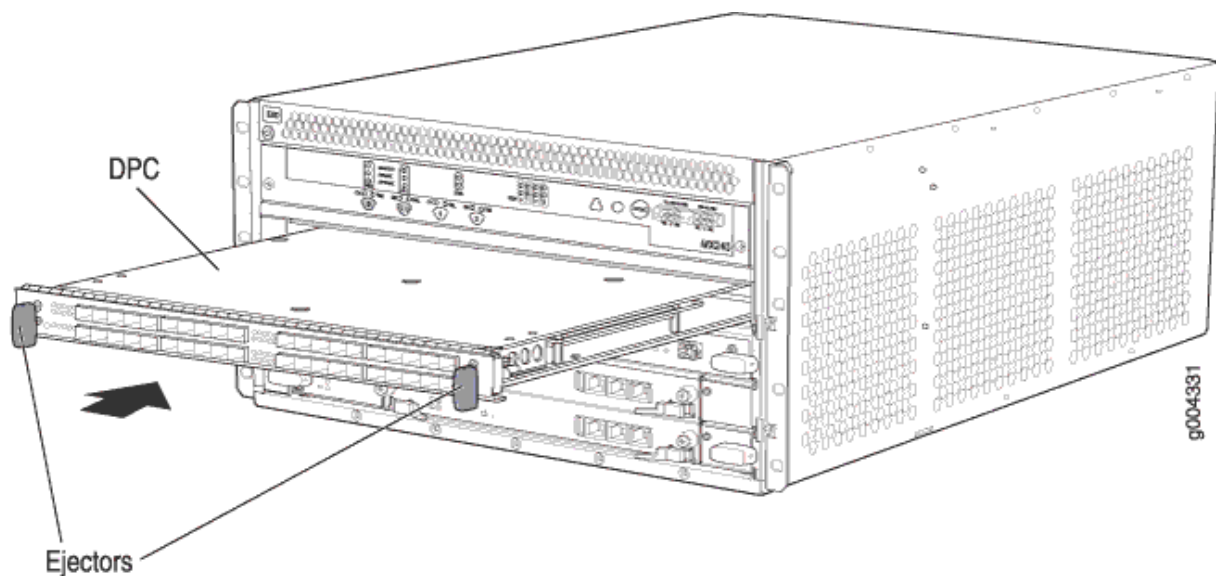


### Reinstalling the FPCs After Installing the MX240 Router without a Lift

To reinstall a DPC (see [Figure 77 on page 278](#)):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Place the FPC on an antistatic mat or remove it from its electrostatic bag.
3. Identify the two DPC slots on the router where the FPC will be installed.
4. Verify that each fiber-optic transceiver on the PIC is covered by a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the FPC so that the faceplate faces you.
6. Lift the FPC into place and carefully align the sides of the FPC with the guides inside the card cage.
7. Slide the FPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles and rotate them clockwise simultaneously until the FPC is fully seated.

**Figure 77: Reinstalling an FPC**

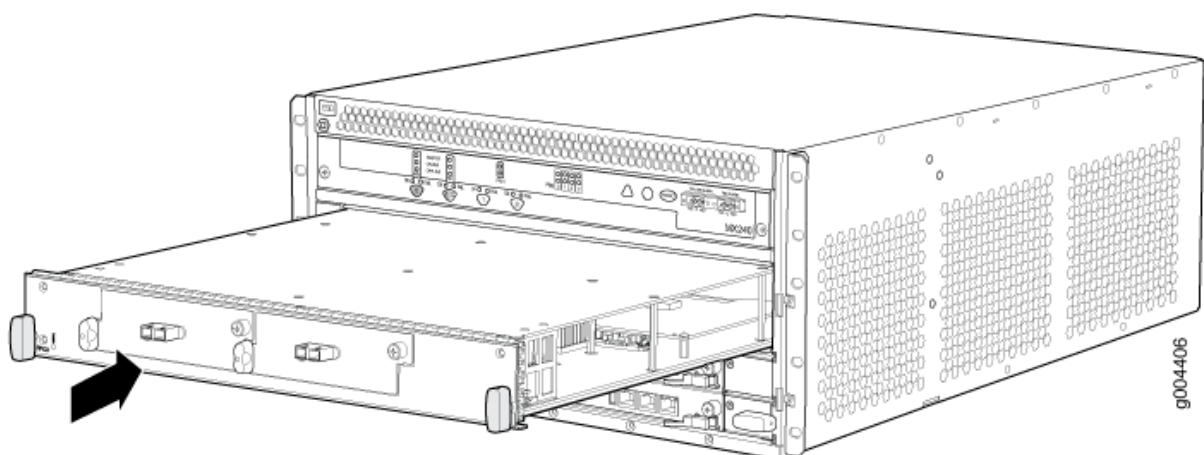

## RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

# Connecting the MX240 Router to Power

## IN THIS SECTION

- [Tools and Parts Required for MX240 Router Grounding and Power Connections](#) | 279
- [Grounding the MX240 Router](#) | 279
- [Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies](#) | 280
- [Powering On an AC-Powered MX240 Router](#) | 282
- [Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies](#) | 283
- [Powering On a DC-Powered MX240 Router with Normal Capacity Power Supplies](#) | 286
- [Connecting an MX240 AC Power Supply Cord](#) | 287
- [Connecting an MX240 DC Power Supply Cable](#) | 288
- [Powering Off the MX240 Router](#) | 290

## Tools and Parts Required for MX240 Router Grounding and Power Connections

To ground and provide power to the router, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 2.5-mm flat-blade (–) screwdriver
- 7/16-in. (11 mm) hexagonal-head external drive socket wrench, or nut driver, with a torque range between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm), for tightening nuts to terminal studs on each power supply on a DC-powered router.
- Wire cutters
- Electrostatic discharge (ESD) grounding wrist strap



**CAUTION:** The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs. Use an appropriately-sized driver or socket wrench, with a maximum torque capacity of 50 lb-in. or less. Ensure that the driver is undamaged and properly calibrated and that you have been trained in its use. You may wish to use a driver that is designed to prevent overtorque when the preset torque level is achieved.

### SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[MX240 Chassis Grounding Specifications | 54](#)

## Grounding the MX240 Router

You ground the router by connecting a grounding cable to earth ground and then attaching it to the chassis grounding points using UNC 1/4-20 two screws. You must provide the grounding cables (the cable lugs are supplied with the router).

1. Verify that a licensed electrician has attached the cable lug provided with the router to the grounding cable.

2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to an approved site ESD grounding point. See the instructions for your site.
3. Ensure that all grounding surfaces are clean and brought to a bright finish before grounding connections are made.
4. Connect the grounding cable to a proper earth ground.
5. Detach the ESD grounding strap from the site ESD grounding point.
6. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Place the grounding cable lug over the grounding points on the upper rear of the chassis. The bolts are sized for UNC 1/4-20 bolts.
8. Secure the grounding cable lug to the grounding points, first with the washers, then with the screws.
9. Dress the grounding cable and verify that it does not touch or block access to router components, and that it does not drape where people could trip on it.

#### SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

## Connecting Power to an AC-Powered MX240 Router with Normal-Capacity Power Supplies



**CAUTION:** Do not mix AC and DC power supply modules within the same device. Mixing currents can damage the device.

You connect AC power to the router by attaching power cords from the AC power sources to the AC appliance inlets located on the power supplies. The power cords are provided.

To connect the AC power cords to the router for each power supply (see [Figure 78 on page 281](#)):

1. Locate the power cords shipped with the router, which should have a plug appropriate for your geographical location. For more information, see "[Connecting an MX240 AC Power Supply Cord](#)" on [page 287](#).
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
4. Connect the power cord to the power supply.
5. Insert the power cord plug into an external AC power source receptacle.






**NOTE:** Each power supply must be connected to a dedicated AC power feed and a dedicated customer site circuit breaker. We recommend that you use a dedicated customer site circuit breaker rated for 15 A (250 VAC) minimum, or as required by local code.

6. Route the power cord appropriately. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
7. Repeat Step 1 through Step 6 for the remaining power supplies.

**Figure 78: Connecting AC Power to the Routers**

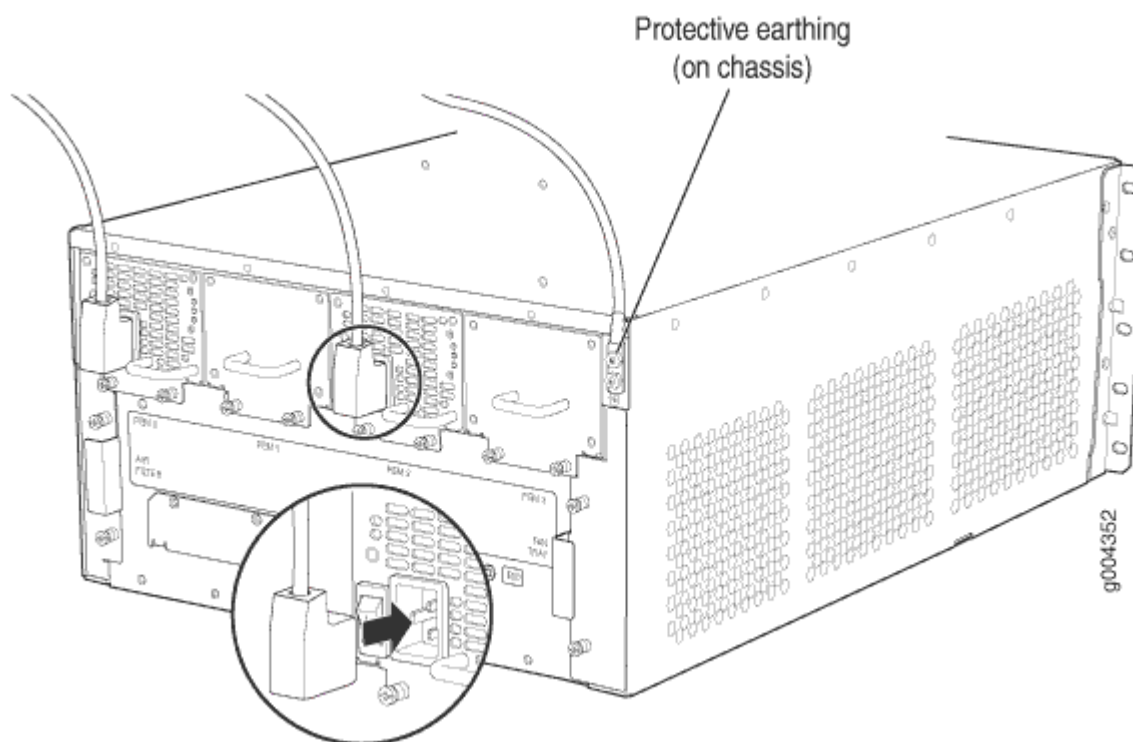

#### SEE ALSO

[Replacing an MX240 AC Power Supply Cord | 429](#)

[AC Power Cord Specifications for the MX240 Router | 45](#)

## Powering On an AC-Powered MX240 Router

To power on an AC-powered router:

1. Verify that the power supplies are fully inserted in the chassis.
2. Verify that each AC power cord is securely inserted into its appliance inlet.
3. Verify that an external management device is connected to one of the Routing Engine ports (**AUX**, **CONSOLE**, or **ETHERNET**).
4. Turn on the power to the external management device.
5. Switch on the dedicated customer site circuit breakers for the power supplies. Follow the instructions for your site.
6. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
7. Switch the AC input switch on each power supply to the on (I) position and observe the status LEDs on each power supply faceplate. If an AC power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures .



**NOTE:** After you power off a power supply, wait at least 60 seconds before you turn it back on. Likewise, after you power on a power supply, wait at least 60 seconds before you turn it off.

If the system is completely powered off when you power on the power supply, the Routing Engine (or RCB) boots as the power supply completes its startup sequence. If the Routing Engine finishes booting and you need to power off the system again, first issue the CLI request `system halt` command.

After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the `show chassis` command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

8. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.

### SEE ALSO

[Replacing an MX240 AC Power Supply Cord | 429](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Connecting Power to a DC-Powered MX240 Router with Normal-Capacity Power Supplies



**CAUTION:** Do not mix AC and DC power supply modules within the same device. Mixing currents can damage the device.



**WARNING:** Before you perform DC power procedures, ensure there is no power to the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

You connect DC power to the router by attaching power cables from the external DC power sources to the terminal studs on the power supply faceplates. You must provide the power cables (the cable lugs are supplied with the router). For power cable specifications, see ["DC Power Cable Specifications for the MX240 Router" on page 59](#).

To connect the DC source power cables to the router for each power supply:

1. Switch off the dedicated customer site circuit breakers. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Switch the DC circuit breaker on the power supply faceplate to the off (0) position.
4. Remove the clear plastic cover protecting the terminal studs on the faceplate.
5. Verify that the DC power cables are correctly labeled before making connections to the power supply. In a typical power distribution scheme where the return is connected to chassis ground at the battery plant, you can use a multimeter to verify the resistance of the **-48V** and **RTNDC** cables to chassis ground:
  - The cable with very large resistance (indicating an open circuit) to chassis ground is **-48V**.
  - The cable with very low resistance (indicating a closed circuit) to chassis ground is **RTN**.



**CAUTION:** You must ensure that power connections maintain the proper polarity. The power source cables might be labeled **(+)** and **(-)** to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.

6. Install heat-shrink tubing insulation around the power cables.

To install heat-shrink tubing:


- a. Slide the tubing over the portion of the cable where it is attached to the lug barrel. Ensure that tubing covers the end of the wire and the barrel of the lug attached to it.
- b. Shrink the tubing with a heat gun. Ensure that you heat all sides of the tubing evenly so that it shrinks around the cable tightly.

Figure 79 on page 284 shows the steps to install heat-shrink tubing.



**NOTE:** Do not overheat the tubing.

**Figure 79: How to Install Heat-Shrink Tubing**

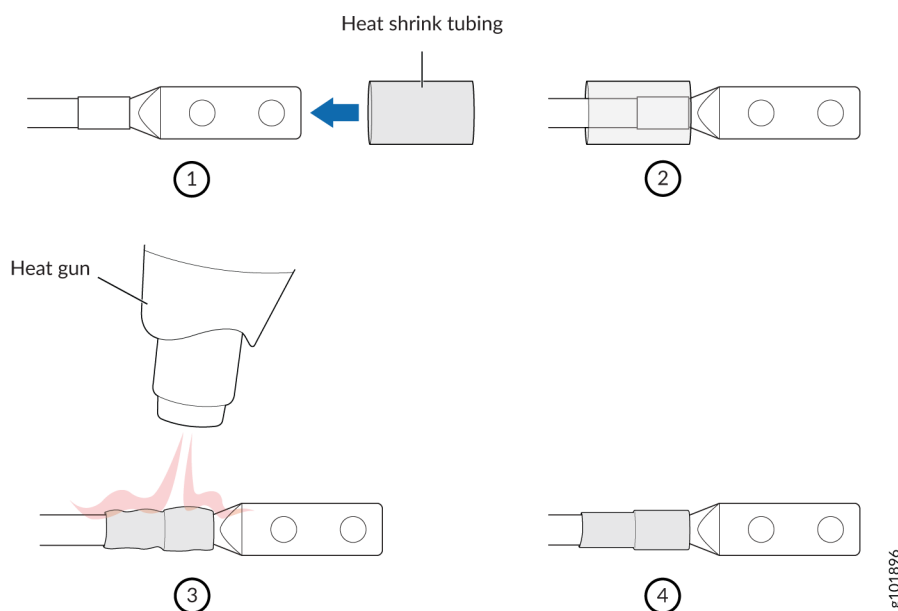

7. Remove the nuts and washers from the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
8. Secure each power cable lug to the terminal studs, first with the flat washer, then with the nut (see Figure 80 on page 285). Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut. Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)
  - a. Secure each positive (+) DC source power cable lug to the **RTN**(return) terminal.
  - b. Secure each negative (-) DC source power cable lug to the **48V** (input) terminal.



**CAUTION:** Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.




**CAUTION:** The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.



**NOTE:** The DC power supply in slot **PEM0** must be powered by a dedicated power feed derived from feed **A**, and the DC power supply in slot **PEM2** must be powered by a dedicated power feed derived from feed **B**. This configuration provides the commonly deployed **A/B** feed redundancy for the system.

9. Replace the clear plastic cover over the terminal studs on the faceplate.
10. Verify that the power cables are connected correctly, that they are not touching or blocking access to router components, and that they do not drape where people could trip on them.
11. If you are installing two power supplies, repeat Steps 3 through 10 for the other power supply.

**Figure 80: Connecting DC Power to the Router**

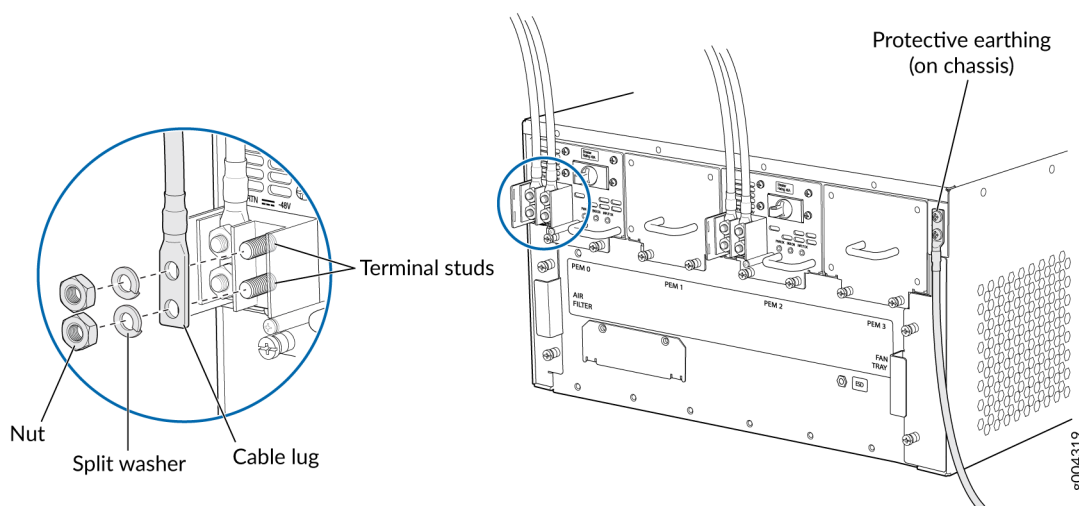

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[DC Power Cable Specifications for the MX240 Router | 59](#)

## Powering On a DC-Powered MX240 Router with Normal Capacity Power Supplies

To power on a DC-powered MX240 Router with normal capacity power supplies:

1. Verify that an external management device is connected to one of the Routing Engine ports (**AUX**, **CONSOLE**, or **ETHERNET**).
2. Turn on the power to the external management device.
3. Verify that the power supplies are fully inserted in the chassis.
4. Verify that the source power cables are connected to the appropriate terminal: the positive (+) source cable to the return terminal (labeled **RTN**) and the negative (–) source cable to the input terminal (labeled **–48V**).
5. Switch on the dedicated customer site circuit breakers to provide power to the DC power cables.
6. Check that the **INPUT OK** LED is lit steadily green to verify that power is present.
7. If power is not present:
  - Verify that the fuse is installed correctly, and turn on the breaker at the battery distribution fuse board or fuse bay.
  - Check the voltage with a meter at the terminals of the power supply for correct voltage level and polarity.
8. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
9. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



**NOTE:** The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

10. Observe the status LEDs on each power supply faceplate. If a DC power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.
11. If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures .



**NOTE:** After you power off a power supply, wait at least 60 seconds before you turn it back on. Likewise, after you power on a power supply, wait at least 60 seconds before you turn it off.

If the system is completely powered off when you power on the power supply, the Routing Engine (or RCB) boots as the power supply completes its startup sequence. If the Routing Engine finishes booting and you need to power off the system again, first issue the CLI request `system halt` command.

After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the `show chassis` command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

12. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.

## SEE ALSO

[Installing an MX240 DC High-Capacity Power Supply](#)

[Replacing an MX240 DC Power Supply Cable | 435](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[DC Power Cable Specifications for the MX240 Router | 59](#)

## Connecting an MX240 AC Power Supply Cord

To connect the AC power cord:

1. Locate a replacement power cord with the type of plug appropriate for your geographical location (see ["AC Power Cord Specifications for the MX240 Router" on page 45](#)).
2. Connect the power cord to the power supply.
3. Insert the power cord plug into an external AC power source receptacle.
4. Route the power cord appropriately. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
5. Switch the AC input switch on the each power supply to the on (I) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

## Connecting an MX240 DC Power Supply Cable



**WARNING:** Before you perform DC power procedures, ensure there is no power to the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To connect a power cable for a DC power supply:

1. Locate a replacement power cable that meets the specifications.
2. Verify that a licensed electrician has attached a cable lug to the replacement power cable.
3. Verify that the **INPUT OK** LED is off.
4. Install heat-shrink tubing insulation around the power cables.

To install heat-shrink tubing:

- a. Slide the tubing over the portion of the cable where it is attached to the lug barrel. Ensure that tubing covers the end of the wire and the barrel of the lug attached to it.
- b. Shrink the tubing with a heat gun. Ensure that you heat all sides of the tubing evenly so that it shrinks around the cable tightly.


[Figure 81 on page 289](#) shows the steps to install heat-shrink tubing.



**NOTE:** Do not overheat the tubing.



Figure 81: How to Install Heat-Shrink Tubing

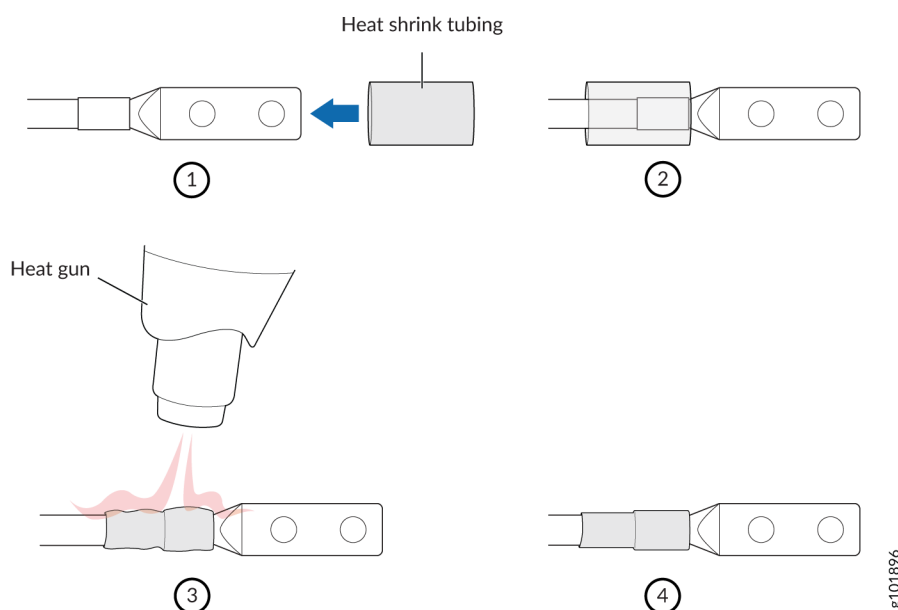

5. Secure the power cable lug to the terminal studs, first with the flat washer, then with the nut. Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut (see [Figure 82 on page 290](#)). Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)




**CAUTION:** Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



**CAUTION:** The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.

Figure 82: Connecting DC Power to the Router

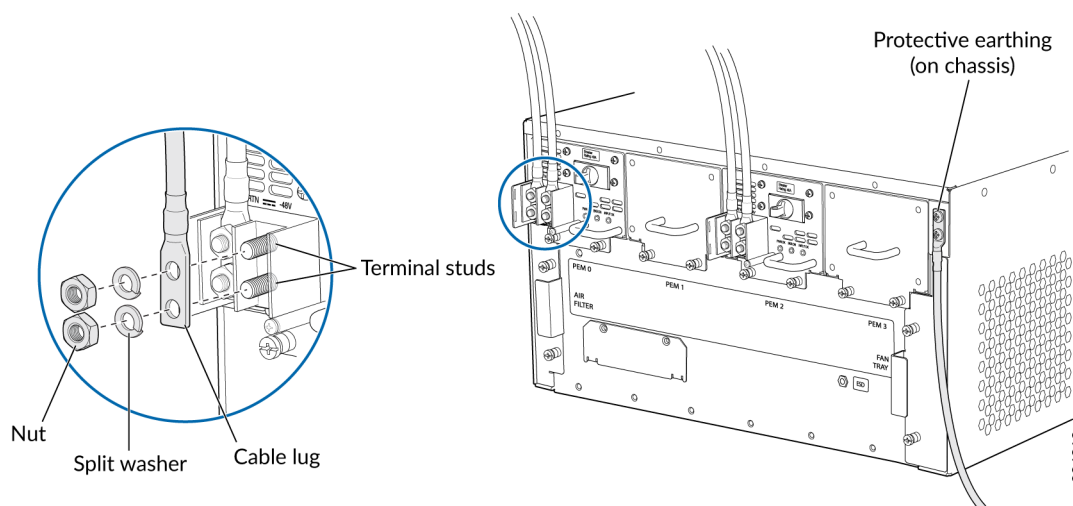

6. Verify that the DC power cable is connected correctly, that it does not touch or block access to router components, and that it does not drape where people could trip on it.
7. Replace the clear plastic cover over the terminal studs on the faceplate.
8. Attach the power cable to the DC power source.
9. Turn on the dedicated customer site circuit breaker to the power supply.
10. Verify that the **INPUT OK** LED on the power supply is lit steadily.
11. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



**NOTE:** The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.

## Powering Off the MX240 Router



**NOTE:** After powering off a power supply, wait at least 60 seconds before turning it back on.

To power off the router:

1. On the external management device connected to the Routing Engine, issue the **request system halt both-routing-engines** operational mode command. The command shuts down the Routing Engines cleanly, so their state information is preserved. (If the router contains only one Routing Engine, issue the `request system halt` command.)

```
user@host> request system halt both-routing-engines
```

2. Wait until a message appears on the console confirming that the operating system has halted. For more information about the command, see the [CLI Explorer](#).
3. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
4. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power supply faceplate to the off (0) position.

#### SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

## Connecting the MX240 Router to the Network

### IN THIS SECTION

- [Tools and Parts Required for MX240 Router Connections](#) | 291
- [Connecting the MX240 Router to a Network for Out-of-Band Management](#) | 292
- [Connecting the MX240 Router to a Management Console or Auxiliary Device](#) | 293
- [Connecting the MX240 Router to an External Alarm-Reporting Device](#) | 294
- [Connecting DPC, MPC, MIC, or PIC Cables to the MX240 Router](#) | 295

### Tools and Parts Required for MX240 Router Connections

To connect the router to management devices and line cards, you need the following tools and parts:

- Phillips (+) screwdrivers, numbers 1 and 2
- 2.5-mm flat-blade (-) screwdriver
- 2.5-mm Phillips (+) screwdriver
- Wire cutters
- Electrostatic discharge (ESD) grounding wrist strap

## Connecting the MX240 Router to a Network for Out-of-Band Management

To connect the Routing Engine to a network for out-of-band management, connect an Ethernet cable with RJ-45 connectors to the **ETHERNET** port on the Routing Engine. To connect to the **ETHERNET** port on the Routing Engine:

1. Turn off the power to the management device.
2. Plug one end of the Ethernet cable ([Figure 84 on page 292](#) shows the connector) into the **ETHERNET** port on the Routing Engine. [Figure 83 on page 292](#) shows the port.
3. Plug the other end of the cable into the network device.

Figure 83: Ethernet Port

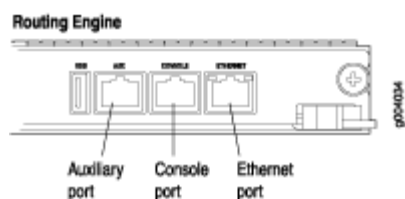


Figure 84: Routing Engine Ethernet Cable Connector



## Connecting the MX240 Router to a Management Console or Auxiliary Device

To use a system console to configure and manage the Routing Engine, connect it to the appropriate **CONSOLE** port on the Routing Engine. To use a laptop, modem, or other auxiliary device, connect it to the **AUX** port on the Routing Engine. Both ports accept a cable with an RJ-45 connector. To connect a device to the **CONSOLE** port and another device to the **AUX** port, you must supply two separate cables.



### NOTE:

We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.

To connect a management console or auxiliary device:

1. Turn off the power to the console or auxiliary device.
2. Plug the RJ-45 end of the serial cable ([Figure 86 on page 294](#) shows the connector) into the **AUX** port or **CONSOLE** port on the Routing Engine. [Figure 85 on page 294](#) shows the ports.
3. Plug the female DB-9 end into the device's serial port.



**NOTE:** For console devices, configure the serial port to the following values:

- Baud rate—9600
- Parity—N
- Data bits—8
- Stop bits—1

- Flow control—none

Figure 85: Auxiliary and Console Ports

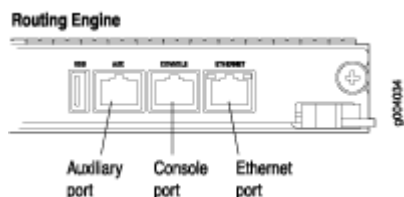


Figure 86: Routing Engine Console and Auxiliary Cable Connector



## SEE ALSO

[Routing Engine Interface Cable and Wire Specifications for MX Series Routers](#) | 238

## Connecting the MX240 Router to an External Alarm-Reporting Device

To connect the router to external alarm-reporting devices, attach wires to the **RED** and **YELLOW** relay contacts on the craft interface. (See [Figure 87 on page 295](#).) A system condition that triggers the red or yellow alarm LED on the craft interface also activates the corresponding alarm relay contact.

The terminal blocks that plug into the alarm relay contacts are supplied with the router. They accept wire of any gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm<sup>2</sup>), which is not provided. Use the gauge of wire appropriate for the external device you are connecting.

To connect an external device to an alarm relay contact (see [Figure 87 on page 295](#)):


1. Prepare the required length of wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm<sup>2</sup>).
2. While the terminal block is not plugged into the relay contact, use a 2.5-mm flat-blade screwdriver to loosen the small screws on its side. With the small screws on its side facing left, insert wires into the

slots in the front of the block based on the wiring for the external device. Tighten the screws to secure the wire.

3. Plug the terminal block into the relay contact, and use a 2.5-mm flat-blade screwdriver to tighten the screws on the face of the block.
4. Attach the other end of the wires to the external device.

To attach a reporting device for the other kind of alarm, repeat the procedure.

**Figure 87: Alarm Relay Contacts**

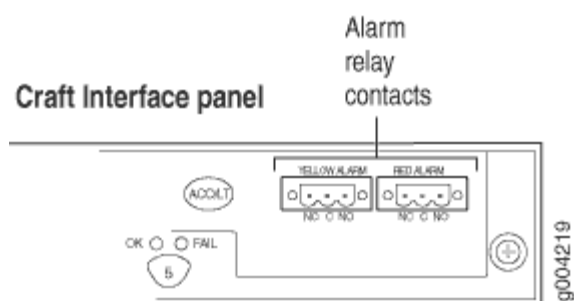

## SEE ALSO

[Replacing the MX240 Craft Interface](#) | 347

## Connecting DPC, MPC, MIC, or PIC Cables to the MX240 Router

To connect the DPCs, MPCs, MICs, or PICs to the network (see [Figure 88 on page 296](#) and [Figure 89 on page 297](#)):

1. Have ready a length of the type of cable used by the component. For cable specifications, see the [MX Series Interface Module Reference](#).
2. Remove the rubber safety plug from the cable connector port.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when inserting or removing a cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

3. Insert the cable connector into the cable connector port on the faceplate.


**NOTE:** The XFP cages and optics on the components are industry standard parts that have limited tactile feedback for insertion of optics and fiber. You need to insert the optics and fiber firmly until the latch is securely in place.

4. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.

**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.


Figure 88: Attaching a Cable to a DPC

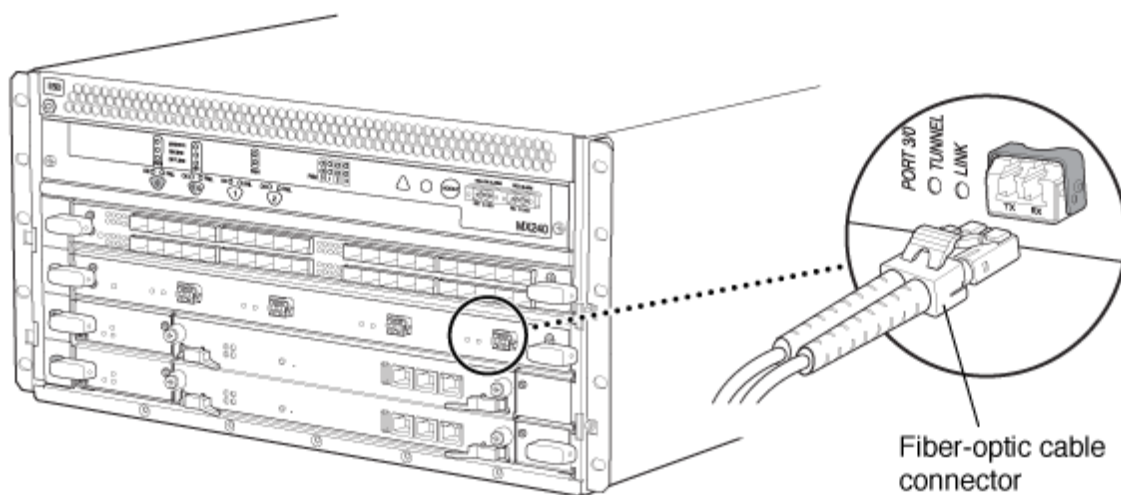

9004317



Figure 89: Attaching a Cable to a MIC

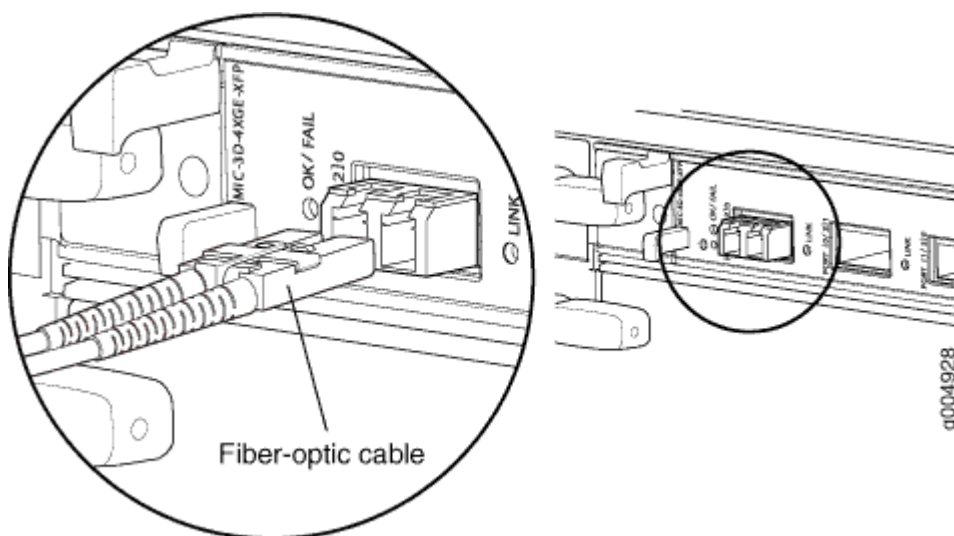

## SEE ALSO

[Replacing an MX240 DPC | 358](#)
[Replacing an MX240 PIC | 394](#)
[Replacing an MX240 MPC | 388](#)
[Replacing an MX240 MIC | 375](#)

## Register Products—Mandatory to Validate SLAs

Juniper Networks auto registers newly purchased products based on the end customer information provided at the point of sale. Registering products and changes to products activates your hardware replacement service-level agreements (SLAs).



**CAUTION:** Update the installation base data if any installation base data is added or changed or if the installation base is moved. Juniper Networks is not responsible for customers not meeting the hardware replacement service-level agreement (SLA) for products that do not have registered serial numbers or accurate installation base data. To know more about how to register your product and update your installation base, see [Juniper Networks Product Registration and Install Base Management](#).

# Initially Configuring the MX240 Router

The MX240 router is shipped with Junos OS preinstalled and ready to be configured when the MX240 router is powered on. There are three copies of the software: one on a CompactFlash card in the Routing Engine, one on a rotating hard disk in the Routing Engine, and one on a USB flash drive that can be inserted into the slot in the Routing Engine faceplate.



**NOTE:** The hardware device packages shipped after September 2025 may not include bootable USB flash drives. If your device package does not include a bootable USB flash drive, we recommend that you create a bootable USB flash drive following the instructions provided in [Best Practices for Upgrade/Downgrade from Bootable USB](#).

You may obtain a USB flash drive from any commercial source. The USB flash drive must have:

- A minimum of 16 GB storage space
- No security features, such as a keyed boot partition

When the router boots, it first attempts to start the image on the USB flash drive. If a USB flash drive is not inserted into the Routing Engine or the attempt otherwise fails, the router next tries the CompactFlash card (if installed), and finally the hard disk.

You configure the router by issuing Junos OS command-line interface (CLI) commands, either on a console device attached to the **CONSOLE** port on the Routing Engine, or over a telnet connection to a network connected to the **ETHERNET** port on the Routing Engine.

Gather the following information before configuring the router:

- Name the router will use on the network
- Domain name the router will use
- IP address and prefix length information for the Ethernet interface
- IP address of a default router
- IP address of a DNS server
- Password for the root user

This procedure connects the router to the network but does not enable it to forward traffic. For complete information about enabling the router to forward traffic, including examples, see the Junos OS configuration guides.

To configure the software:

1. Verify that the router is powered on.
2. Log in as the “root” user. There is no password.
3. Start the CLI.

```
root# cli
root@>
```

4. Enter configuration mode.

```
cli> configure
[edit]
root@#
```

5. Configure the name of the router. If the name includes spaces, enclose the name in quotation marks (“ ”).

```
[edit]
root@# set system host-name host-name
```

6. Create a management console user account.

```
[edit]
root@# set system login user user-name authentication plain-text-password
New password: password
Retype new password: password
```

7. Set the user account class to super-user.

```
[edit]
root@# set system login user user-name class super-user
```

8. Configure the router’s domain name.

```
[edit]
root@# set system domain-name domain-name
```

9. Configure the IP address and prefix length for the router's Ethernet interface.

```
[edit]
root@# set interfaces fxp0 unit 0 family inet address address/prefix-length
```

10. Configure the IP address of a backup router, which is used only while the routing protocol is not running.

```
[edit]
root@# set system backup-router address
```

11. Configure the IP address of a DNS server.

```
[edit]
root@# set system name-server address
```

12. Set the root authentication password by entering either a clear-text password, an encrypted password, or an SSH public key string (DSA or RSA).

```
[edit]
root@# set system root-authentication plain-text-password
New password: password
Retype new password: password
```

or

```
[edit]
root@# set system root-authentication encrypted-password encrypted-password
```

or

```
[edit]
root@# set system root-authentication ssh-dsa public-key
```

or

```
[edit]
root@# set system root-authentication ssh-rsa public-key
```

13. (Optional) Configure the static routes to remote subnets with access to the management port. Access to the management port is limited to the local subnet. To access the management port from a remote subnet, you need to add a static route to that subnet within the routing table. For more information about static routes, see the [Junos OS Administration Library for Routing Devices](#).

```
[edit]
root@# set routing-options static route remote-subnet next-hop destination-IP retain no-
readvertise
```

14. Configure the telnet service at the [edit system services] hierarchy level.

```
[edit]
root@# set system services telnet
```

15. (Optional) Display the configuration to verify that it is correct.

```
[edit]
root@# show
system {
    host-name host-name;
    domain-name domain-name;
    backup-router address;
    root-authentication {
        authentication-method (password | public-key);
    }
    name-server {
        address;
    }
}
interfaces {
    fxp0 {
        unit 0 {
            family inet {
                address address/prefix-length;
            }
        }
    }
}
```

16. Commit the configuration to activate it on the router.

```
[edit]
root@# commit
```

17. (Optional) Configure additional properties by adding the necessary configuration statements. Then commit the changes to activate them on the router.

```
[edit]
root@host# commit
```

18. When you have finished configuring the router, exit configuration mode.

```
[edit]
root@host# exit
root@host>
```



**NOTE:** To reinstall Junos OS, you boot the router from the removable media. Do not insert the removable media during normal operations. The router does not operate normally when it is booted from the removable media.

When the router boots from the storage media (removable media, CompactFlash card, or hard disk) it expands its search in the **/config** directory of the routing platform for the following files in the following order: **juniper.conf** (the main configuration file), **rescue.conf** (the rescue configuration file), and **juniper.conf.1** (the first rollback configuration file). When the search finds the first configuration file that can be loaded properly, the file loads and the search ends. If none of the file can be loaded properly, the routing platform does not function properly. If the router boots from an alternate boot device, Junos OS displays a message indication this when you log in to the router.

# 5

CHAPTER

## Maintaining, Installing and Replacing Components

---

### IN THIS CHAPTER

- Maintaining MX240 Components | 304
  - Maintaining the MX240 Cooling System Component | 310
  - Maintaining MX240 Host Subsystem Components | 319
  - Maintaining MX240 Interface Modules | 351
  - Maintaining MX-SPC3 Services Card | 420
  - Maintaining MX240 Power System Components | 425
  - Maintaining MX240 SFP and XFP Transceivers | 439
  - Maintaining MX240 Switch Control Boards | 442
-

# Maintaining MX240 Components

## IN THIS SECTION

- [Routine Maintenance Procedures for the MX240 Router | 304](#)
- [Tools and Parts Required to Maintain the MX240 Router | 305](#)
- [MX240 Field-Replaceable Units \(FRUs\) | 305](#)
- [Tools and Parts Required to Replace MX240 Hardware Components | 306](#)

## Routine Maintenance Procedures for the MX240 Router

### IN THIS SECTION

- [Purpose | 304](#)
- [Action | 304](#)

### Purpose

For optimum router performance, perform preventive maintenance procedures.

### Action

- Inspect the installation site for moisture, loose wires or cables, and excessive dust. Make sure that airflow is unobstructed around the router and into the air intake vents.
- Check the status-reporting devices on the craft interface—System alarms and LEDs.
- Inspect the air filter at the left rear of the router, replacing it every 6 months for optimum cooling system performance. Do not run the router for more than a few minutes without the air filter in place.



SEE ALSO

<a href="#">Maintaining the MX240 Air Filter   310</a>
<a href="#">Maintaining the MX240 Fan Tray   313</a>
<a href="#">Maintaining the MX240 Host Subsystem   319</a>

## Tools and Parts Required to Maintain the MX240 Router

To maintain hardware components, you need the following tools and parts:

- ESD grounding wrist strap
- Flat-blade (–) screwdriver
- Phillips (+) screwdriver, number 1
- Phillips (+) screwdriver, number 2

SEE ALSO

<a href="#">Routine Maintenance Procedures for the MX240 Router   304</a>
<a href="#">Maintaining the MX240 Host Subsystem   319</a>

## MX240 Field-Replaceable Units (FRUs)

Field-replaceable units (FRUs) are router components that can be replaced at the customer site. Replacing most FRUs requires minimal router downtime. The router uses the following types of FRUs:

- Hot-removable and hot-insertable FRUs—You can remove and replace these components without powering off the router or disrupting the routing functions.
- Hot-pluggable FRUs—You can remove and replace these components without powering off the router, but the routing functions of the system are interrupted when the component is removed.

[Table 105 on page 306](#) lists the FRUs for the MX960 router. Before you replace an SCB or a Routing Engine, you must take the host subsystem offline.

**Table 105: Field-Replaceable Units**

Hot-Removable and Hot-Insertable FRUs	Hot-Pluggable FRUs
<ul style="list-style-type: none"> <li>• Air filter</li> <li>• Craft interface</li> <li>• Backup Switch Control Board (SCB) (if redundant)</li> <li>• Primary Switch Control Board (SCB) (if nonstop active routing is configured)</li> <li>• Backup Routing Engine (if redundant)</li> <li>• Primary Routing Engine (if nonstop active routing is configured)</li> <li>• Dense Port Concentrators (DPCs)</li> <li>• Flexible PIC Concentrators (FPCs)</li> <li>• Modular Port Concentrators (MPCs)</li> <li>• Modular Interface Cards (MICs)</li> <li>• PICs</li> <li>• AC, DC, and HVDC/HVAC power supplies (if redundant)</li> <li>• Fan tray</li> </ul>	<ul style="list-style-type: none"> <li>• Primary Switch Control Board (SCB) (if nonstop active routing is not configured)</li> <li>• Primary Routing Engine (if nonstop active routing is not configured)</li> <li>• Switch Control Board (SCB) (nonredundant)</li> <li>• Routing Engine (nonredundant)</li> <li>• Solid-state drives (SSDs) of Routing Engines</li> </ul>

**SEE ALSO**
[MX240 Host Subsystem Description | 62](#)
[Taking an MX240 Host Subsystem Offline](#)

## Tools and Parts Required to Replace MX240 Hardware Components

To replace hardware components, you need the tools and parts listed in [Table 106 on page 307](#).

To remove components from the router or the router from a rack, you need the following tools and parts:

- 2.5-mm flat-blade (–) screwdriver, for detaching alarm relay terminal block
- 7/16-in. (11 mm) nut driver
- Blank panels to cover empty slots
- Electrostatic bag or antistatic mat, for each component
- Electrostatic discharge (ESD) grounding wrist strap
- Flat-blade (–) screwdriver
- Mechanical lift, if available
- Phillips (+) screwdrivers, numbers 1 and 2
- Rubber safety cap for fiber-optic interfaces or cable
- Wire cutters

**Table 106: Tools and Parts Required to Replace Hardware Components**

Tool or Part	Components
2.5-mm flat-blade (–) screwdriver	<ul style="list-style-type: none"><li>• Alarm relay terminal block</li></ul>
7/16-in. nut driver or socket wrench	<ul style="list-style-type: none"><li>• Cables and connectors</li><li>• DC power supply</li></ul>

Table 106: Tools and Parts Required to Replace Hardware Components *(Continued)*

Tool or Part	Components
Blank panels (if component is not reinstalled)	<ul style="list-style-type: none"> <li>• DPC</li> <li>• FPC</li> <li>• MIC</li> <li>• MPC</li> <li>• PIC</li> <li>• Power supply</li> <li>• Routing Engine</li> <li>• SCB</li> </ul>
Electrostatic bag or antistatic mat	<ul style="list-style-type: none"> <li>• Craft Interface</li> <li>• SCB</li> <li>• DPC</li> <li>• FPC</li> <li>• PIC</li> <li>• MPC</li> <li>• MIC               <ul style="list-style-type: none"> <li>• Routing Engine</li> </ul> </li> </ul>
Electrostatic discharge (ESD) grounding wrist strap	All
Flat-blade (-) screwdriver	Cables and connectors  DPC

**Table 106: Tools and Parts Required to Replace Hardware Components *(Continued)***

Tool or Part	Components
Phillips (+) screwdrivers, numbers 1 and 2	Air filter Routing Engine Craft interface SCB Cables and connectors Fan tray
Rubber safety cap	DPC PIC MPC MIC
Wire cutters	Cables and connectors DC power supply

**SEE ALSO**

[Maintaining the MX240 Cooling System Component | 310](#)

[Maintaining MX240 Host Subsystem Components | 319](#)

[Maintaining MX240 Switch Control Boards | 442](#)

[Maintaining MX240 Interface Modules | 351](#)

[Maintaining MX240 Power System Components | 425](#)

# Maintaining the MX240 Cooling System Component

## IN THIS SECTION

- [Maintaining the MX240 Air Filter | 310](#)
- [Replacing the MX240 Air Filter | 311](#)
- [Maintaining the MX240 Fan Tray | 313](#)
- [Replacing the MX240 Fan Tray | 316](#)

## Maintaining the MX240 Air Filter

### IN THIS SECTION

- [Purpose | 310](#)
- [Action | 310](#)

### Purpose

For optimum cooling, verify the condition of the air filters.

### Action

- Regularly inspect the air filter. A dirty air filter restricts airflow in the unit, producing a negative effect on the ventilation of the device. The filter degrades over time. You must replace the filter every 6 months.



**CAUTION:** Always keep the air filter in place while the device is operating, except during replacement. The fans are very powerful and can pull small bits of wire or other materials into the device if the air filter isn't in place. These materials can damage device components.

- The shelf life of polyurethane filter varies from two years to five years depending on the storage conditions. Store in a cool, dry, and dark environment. Wrap the media in plastic and store in an environment with relative humidity between 40%- 80% and temperature between 40° F (4° C) to 90° F (32° C). Note that if the material flakes, or becomes brittle when rubbed or deformed, it is no longer usable.

## SEE ALSO

[MX240 Cooling System Description | 31](#)

[Troubleshooting the MX240 Cooling System | 468](#)

## Replacing the MX240 Air Filter

### IN THIS SECTION

- [Removing the MX240 Air Filter | 311](#)
- [Installing the MX240 Air Filter | 312](#)

## Removing the MX240 Air Filter



**CAUTION:** Do not run the device for more than a few minutes without the air filter in place.




**CAUTION:** Always keep the air filter in place while the device is operating, except during replacement. The fans are very powerful and can pull small bits of wire or other materials into the device if the air filter isn't in place. These materials can damage device components.

To remove the air filter (see Figure 1):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Loosen the captive screws on the air filter cover.
3. Remove the air filter cover.

4. Slide the air filter out of the chassis.

**Figure 90: Removing the Air Filter**

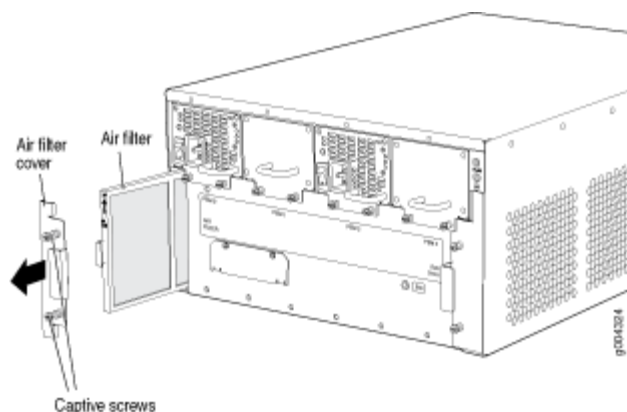

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511


## Installing the MX240 Air Filter

To install the air filter (see Figure 2):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Locate the up arrow and ensure that the air filter is right side up.
3. Slide the air filter straight into the chassis until it stops.
4. Align the captive screws of the air filter cover with the mounting holes on the chassis.
5. Tighten the captive screws on the air filter cover.



Figure 91: Installing the Air Filter

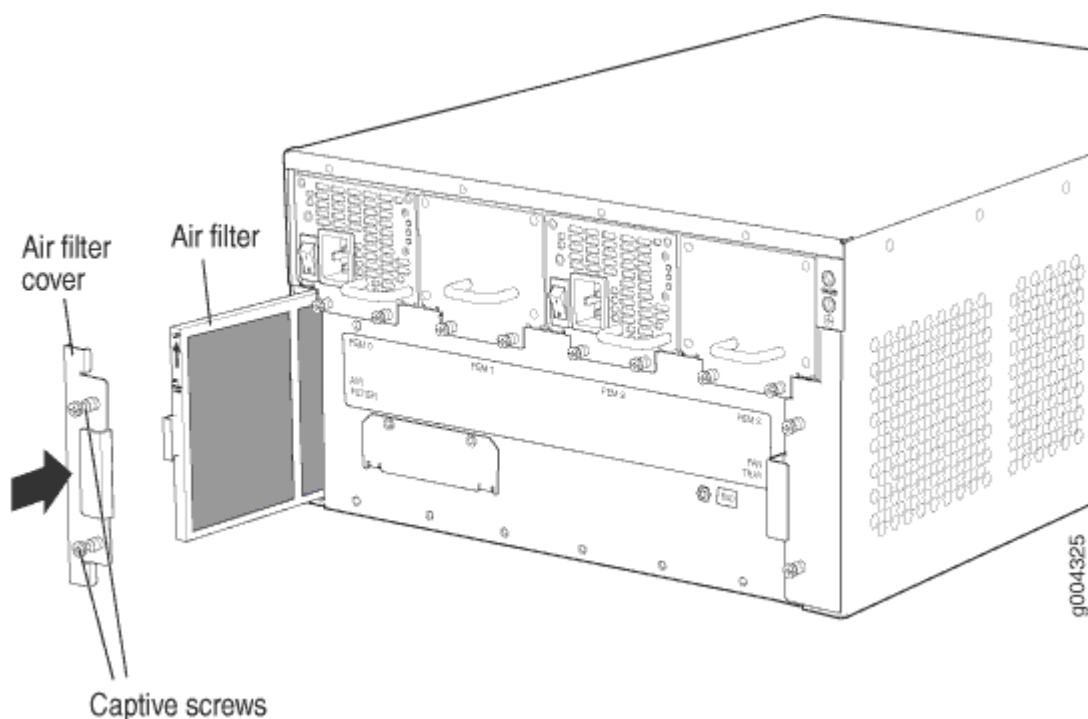

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## RELATED DOCUMENTATION

[MX240 Cooling System Description | 31](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Maintaining the MX240 Fan Tray

### IN THIS SECTION

- [Purpose | 314](#)
- [Action | 314](#)

## Purpose

For optimum cooling, verify the condition of the fans.

## Action

- Monitor the status of the fans. A fan tray contains multiple fans that work in unison to cool the router components. If one fan fails, the host subsystem adjusts the speed of the remaining fans to maintain proper cooling. A red alarm is triggered when a fan fails, and a yellow alarm and red alarm is triggered when a fan tray is removed.
- To display the status of the cooling system, issue the **show chassis environment** command. The output is similar to the following:

```
user@host> show chassis environment
```

Class	Item	Status	Measurement
Temp	PEM 0	OK	40 degrees C / 104 degrees F
	PEM 1	Absent	
	PEM 2	Absent	
	PEM 3	OK	40 degrees C / 104 degrees F
	Routing Engine 0	OK	39 degrees C / 102 degrees F
	Routing Engine 1	OK	42 degrees C / 107 degrees F
	CB 0 Intake	OK	26 degrees C / 78 degrees F
	CB 0 Exhaust A	OK	27 degrees C / 80 degrees F
	CB 0 Exhaust B	OK	27 degrees C / 80 degrees F
	CB 0 ACBC	OK	26 degrees C / 78 degrees F
	CB 0 SF A	OK	37 degrees C / 98 degrees F
	CB 0 SF B	OK	35 degrees C / 95 degrees F
	CB 1 Intake	OK	27 degrees C / 80 degrees F
	CB 1 Exhaust A	OK	30 degrees C / 86 degrees F
	CB 1 Exhaust B	OK	28 degrees C / 82 degrees F
	CB 1 ACBC	OK	27 degrees C / 80 degrees F
	CB 1 SF A	OK	36 degrees C / 96 degrees F
	CB 1 SF B	OK	36 degrees C / 96 degrees F
	CB 2 Intake	Absent	
	CB 2 Exhaust A	Absent	
	CB 2 Exhaust B	Absent	
	CB 2 ACBC	Absent	
	CB 2 SF A	Absent	
	CB 2 SF B	Absent	
	FPC 2 Intake	OK	22 degrees C / 71 degrees F

FPC 2 Exhaust A	OK	27 degrees C / 80 degrees F
FPC 2 Exhaust B	OK	33 degrees C / 91 degrees F
FPC 2 I3 0 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 0 Chip	OK	35 degrees C / 95 degrees F
FPC 2 I3 1 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 1 Chip	OK	33 degrees C / 91 degrees F
FPC 2 I3 2 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 I3 2 Chip	OK	30 degrees C / 86 degrees F
FPC 2 I3 3 TSensor	OK	30 degrees C / 86 degrees F
FPC 2 I3 3 Chip	OK	30 degrees C / 86 degrees F
FPC 2 IA 0 TSensor	OK	33 degrees C / 91 degrees F
FPC 2 IA 0 Chip	OK	36 degrees C / 96 degrees F
FPC 2 IA 1 TSensor	OK	30 degrees C / 86 degrees F
FPC 2 IA 1 Chip	OK	35 degrees C / 95 degrees F
FPC 4 Intake	OK	22 degrees C / 71 degrees F
FPC 4 Exhaust A	OK	28 degrees C / 82 degrees F
FPC 4 Exhaust B	OK	31 degrees C / 87 degrees F
FPC 4 I3 0 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 0 Chip	OK	34 degrees C / 93 degrees F
FPC 4 I3 1 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 1 Chip	OK	33 degrees C / 91 degrees F
FPC 4 I3 2 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 I3 2 Chip	OK	29 degrees C / 84 degrees F
FPC 4 I3 3 TSensor	OK	29 degrees C / 84 degrees F
FPC 4 I3 3 Chip	OK	29 degrees C / 84 degrees F
FPC 4 IA 0 TSensor	OK	35 degrees C / 95 degrees F
FPC 4 IA 0 Chip	OK	37 degrees C / 98 degrees F
FPC 4 IA 1 TSensor	OK	31 degrees C / 87 degrees F
FPC 4 IA 1 Chip	OK	35 degrees C / 95 degrees F
FPC 7 Intake	OK	20 degrees C / 68 degrees F
FPC 7 Exhaust A	OK	21 degrees C / 69 degrees F
FPC 7 Exhaust B	OK	21 degrees C / 69 degrees F
FPC 7 I3 0 TSensor	OK	31 degrees C / 87 degrees F
FPC 7 I3 0 Chip	OK	36 degrees C / 96 degrees F
FPC 7 I3 1 TSensor	OK	32 degrees C / 89 degrees F
FPC 7 I3 1 Chip	OK	35 degrees C / 95 degrees F
FPC 7 I3 2 TSensor	OK	32 degrees C / 89 degrees F
FPC 7 I3 2 Chip	OK	30 degrees C / 86 degrees F
FPC 7 I3 3 TSensor	OK	30 degrees C / 86 degrees F
FPC 7 I3 3 Chip	OK	31 degrees C / 87 degrees F
FPC 7 IA 0 TSensor	OK	34 degrees C / 93 degrees F
FPC 7 IA 0 Chip	OK	37 degrees C / 98 degrees F
FPC 7 IA 1 TSensor	OK	31 degrees C / 87 degrees F

	FPC 7 IA 1 Chip	OK	35 degrees C / 95 degrees F
Fans	Top Fan Tray Temp	OK	27 degrees C / 80 degrees F
	Top Tray Fan 1	OK	Spinning at high speed
	Top Tray Fan 2	OK	Spinning at high speed
	Top Tray Fan 3	OK	Spinning at high speed
	Top Tray Fan 4	OK	Spinning at high speed
	Top Tray Fan 5	OK	Spinning at high speed
	Top Tray Fan 6	OK	Spinning at high speed
	Bottom Fan Tray Temp	OK	28 degrees C / 82 degrees F
	Bottom Tray Fan 1	OK	Spinning at high speed
	Bottom Tray Fan 2	OK	Spinning at high speed
	Bottom Tray Fan 3	OK	Spinning at high speed
	Bottom Tray Fan 4	OK	Spinning at high speed
	Bottom Tray Fan 5	OK	Spinning at high speed
	Bottom Tray Fan 6	OK	Spinning at high speed

SEE ALSO


- [MX240 Cooling System Description | 31](#)
- [Troubleshooting the MX240 Cooling System | 468](#)

## Replacing the MX240 Fan Tray

IN THIS SECTION

- [Removing the MX240 Fan Tray | 316](#)
- [Installing the MX240 Normal-Capacity Fan Tray | 318](#)

### Removing the MX240 Fan Tray



**NOTE:** To prevent overheating, install the replacement fan tray immediately after removing the existing fan tray.

To remove the fan tray (see Figure 3):


1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Loosen the captive screws on the fan tray faceplate.
3. Grasp the fan tray handle, and pull it out approximately 1 to 3 inches.



**WARNING:** To prevent injury, keep tools and your fingers away from the fans as you slide the fan module out of the device. The fans might still be spinning.

4. Press the latch located on the inside of the fan tray to release it from the chassis.
5. Place one hand under the fan tray to support it, and pull the fan tray completely out of the chassis.

**Figure 92: Removing the Fan Tray**

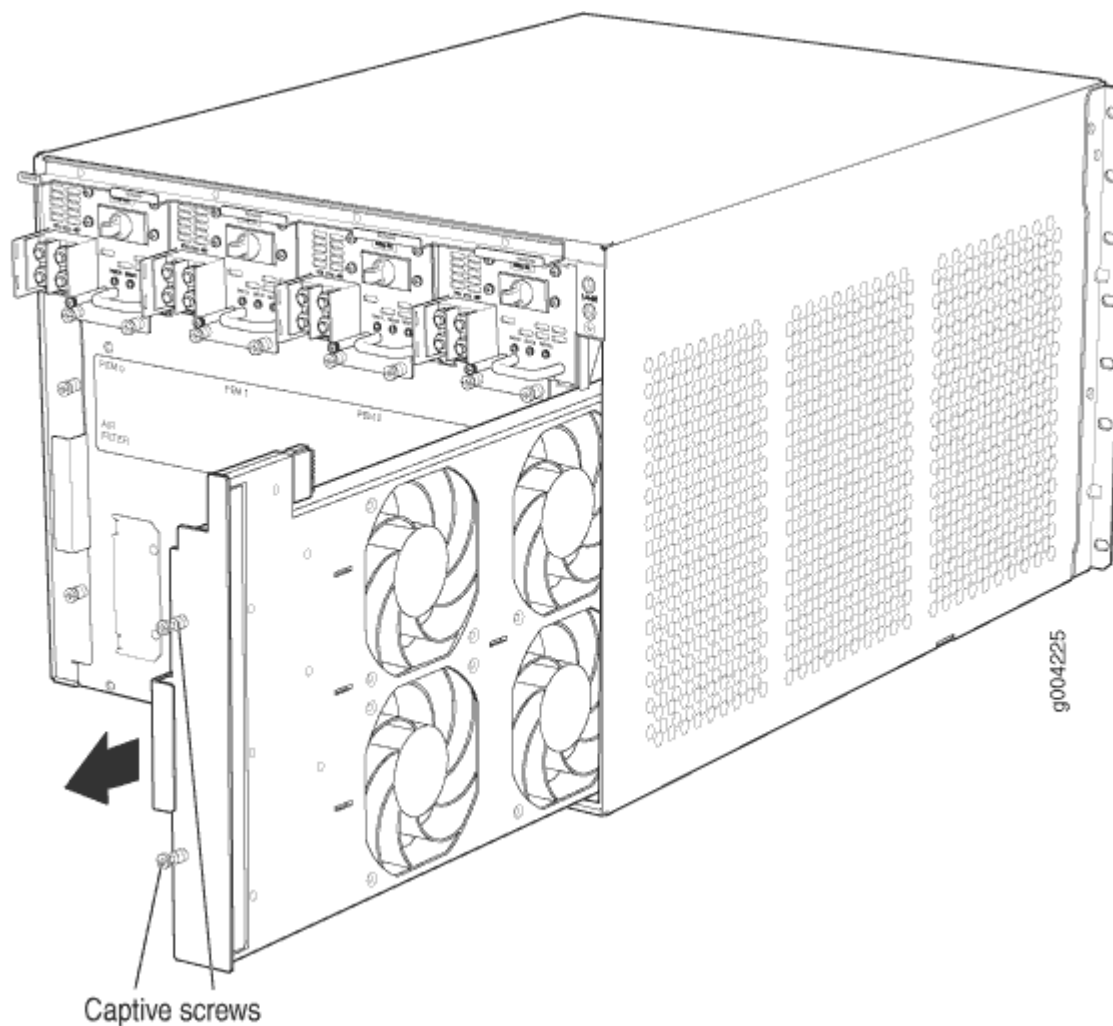

## SEE ALSO

[Replacing the MX240 Fan Tray | 316](#)


[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Installing the MX240 Normal-Capacity Fan Tray

To install the fan tray (see Figure 4):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Grasp the fan tray handle, and insert it straight into the chassis. Note the correct orientation by the **this side up** label on the top surface of the fan tray.
3. Tighten the captive screws on the fan tray faceplate to secure it in the chassis.

**Figure 93: Installing the Fan Tray**

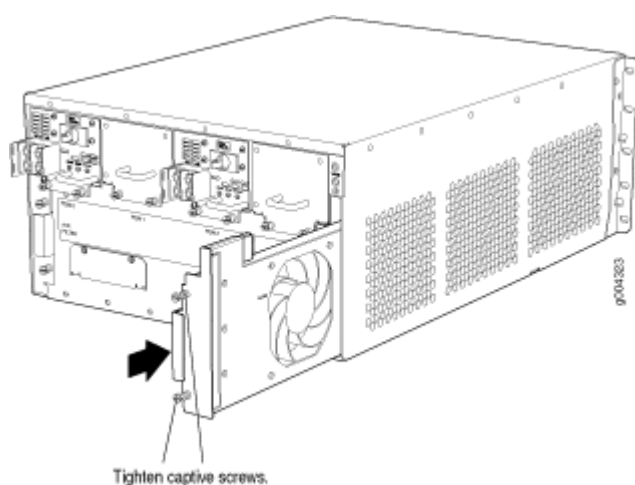

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## RELATED DOCUMENTATION

[MX240 Cooling System Description | 31](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

# Maintaining MX240 Host Subsystem Components

## IN THIS SECTION

- [Maintaining the MX240 Host Subsystem | 319](#)
- [Replacing an MX240 Routing Engine | 323](#)
- [Replacing an SSD Drive on an RE-S-1800 | 326](#)
- [Replacing an SSD Drive on an RE-S-X6-64G | 328](#)
- [Replacing Connections to MX240 Routing Engine Interface Ports | 335](#)
- [Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem | 337](#)
- [Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem | 345](#)
- [Replacing the MX240 Craft Interface | 347](#)

## Maintaining the MX240 Host Subsystem

### IN THIS SECTION

- [Purpose | 319](#)
- [Action | 319](#)

### Purpose

For optimum router performance, verify the condition of the host subsystem. The host subsystem comprises an SCB and a Routing Engine installed into a slot in the SCB.

### Action

On a regular basis:

- Check the LEDs on the craft interface to view information about the status of the Routing Engines.
- Check the LEDs on the SCB faceplate.

- Check the LEDs on the Routing Engine faceplate.
- To check the status of the Routing Engines, issue the `show chassis routing-engine` command. The output is similar to the following:

```

user@host> show chassis routing-engine

Routing Engine status:
Slot 0:
  Current state           Master
  Election priority       Master (default)
  Temperature             45 degrees C / 113 degrees F
  CPU temperature         43 degrees C / 109 degrees F
  DRAM                    2048 MB
  Memory utilization      15 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                8 percent
    Interrupt             0 percent
    Idle                  92 percent
  Model                   RE-S-1300
  Serial ID               1000694968
  Start time              2007-07-10 12:27:39 PDT
  Uptime                  1 hour, 40 minutes, 37 seconds
  Load averages:          1 minute   5 minute   15 minute
                        0.11         0.06         0.01

Routing Engine status:
Slot 1:
  Current state           Backup
  Election priority       Backup (default)
  Temperature             46 degrees C / 114 degrees F
  CPU temperature         42 degrees C / 107 degrees F
  DRAM                    2048 MB
  Memory utilization      13 percent
  CPU utilization:
    User                  0 percent
    Background            0 percent
    Kernel                0 percent
    Interrupt             0 percent
    Idle                  100 percent
  Model                   RE-S-1300

```



Serial ID	1000694976
Start time	2007-06-19 14:17:00 PDT
Uptime	20 days, 23 hours, 51 minutes, 4 seconds

- To check the status of the SCBs, issue the `show chassis environment cb` command. The output is similar to the following:

```
user@host> show chassis environment cb
```

CB 0 status:

State	Online Master
Temperature	40 degrees C / 104 degrees F
Power 1	
1.2 V	1208 mV
1.5 V	1521 mV
1.8 V	1807 mV
2.5 V	2507 mV
3.3 V	3319 mV
5.0 V	5033 mV
12.0 V	12142 mV
1.25 V	1243 mV
3.3 V SM3	3312 mV
5 V RE	5059 mV
12 V RE	11968 mV
Power 2	
11.3 V bias PEM	11253 mV
4.6 V bias MidPlane	4814 mV
11.3 V bias FPD	11234 mV
11.3 V bias POE 0	11176 mV
11.3 V bias POE 1	11292 mV
Bus Revision	42
FPGA Revision	1

CB 1 status:

State	Online Standby
Temperature	40 degrees C / 104 degrees F
Power 1	
1.2 V	1202 mV
1.5 V	1514 mV
1.8 V	1807 mV
2.5 V	2500 mV
3.3 V	3293 mV
5.0 V	5053 mV

12.0 V	12200 mV
1.25 V	1260 mV
3.3 V SM3	3319 mV
5 V RE	5059 mV
12 V RE	12007 mV
Power 2	
11.3 V bias PEM	11311 mV
4.6 V bias MidPlane	4827 mV
11.3 V bias FPD	11330 mV
11.3 V bias POE 0	11292 mV
11.3 V bias POE 1	11311 mV
Bus Revision	42
FPGA Revision	1

To check the status of a specific SCB, issue the `show chassis environment cb` command and include the slot number of the SCB. The output is similar to the following:

```
user@host> show chassis environment cb 0
CB 0 status:
State                Online
Temperature Intake    66 degrees C / 150 degrees F
Temperature Exhaust A 67 degrees C / 152 degrees F
Temperature Exhaust B 73 degrees C / 163 degrees F
Power
  1.2 V                1153 mV
  1.5 V                1417 mV
  1.8 V                1704 mV
  2.5 V                2375 mV
  3.3 V                3138 mV
  5.0 V                4763 mV
  1.2 V Rocket IO     1160 mV
  1.5 V Rocket IO     1408 mV
  1.8 V RLDRAM         1717 mV
I2C Slave Revision    15
```

For more information about using the CLI, see the Junos OS documentation.

## SEE ALSO

[MX240 Host Subsystem Description](#) | 62

*SCB-MX Description*

[MX240 Routing Engine Description | 64](#)

[MX240 Craft Interface Overview | 25](#)

## Replacing an MX240 Routing Engine

### IN THIS SECTION

- [Removing an MX240 Routing Engine | 323](#)
- [Installing an MX240 Routing Engine | 324](#)

### Removing an MX240 Routing Engine

Before you remove a Routing Engine, remove the cables that connect to it.



**CAUTION:** Before you replace a Routing Engine, you must take the host subsystem offline. If there is only one host subsystem, taking the host subsystem offline shuts down the router.



**CAUTION:** If the Routing Engine to be replaced is currently functioning as the primary Routing engine, switch it to be the backup before removing it.

To remove a Routing Engine from an SCB (see Figure 1):


1. Take the Routing Engine offline gracefully.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.
3. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
4. Verify that the Routing Engine LEDs are off.
5. Loosen the captive screws on the left and right of the Routing Engine.
6. Flip the ejector handles outward to unseat the Routing Engine.
7. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
8. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis.

- Place the Routing Engine on the antistatic mat.



**NOTE:** To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

**Figure 94: Removing a Routing Engine**

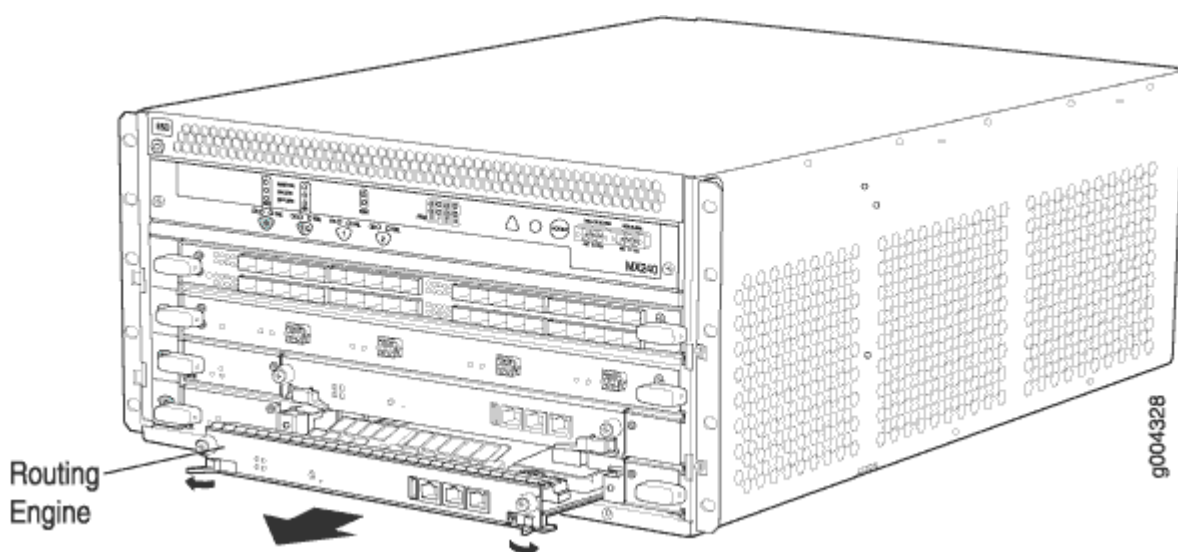

## SEE ALSO

[MX240 Routing Engine Description | 64](#)

[Effect of Taking the MX240 Host Subsystem Offline](#)

[Replacing Connections to MX240 Routing Engine Interface Ports | 335](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Installing an MX240 Routing Engine

To install a Routing Engine into an SCB (Figure 2):

- Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
- Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
- Place one hand underneath the Routing Engine to support it.

4. Carefully align the sides of the Routing Engine with the guides inside the opening on the SCB.
5. Slide the Routing Engine into the SCB until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.

**CAUTION:**

An incorrect alignment of the Routing Engine on the guides can damage the components on the rear side of the Routing Engine.

6. Press both of the ejector handles inward to seat the Routing Engine.
7. Tighten the captive screws on the left and right of the Routing Engine.
8. Connect the management device cables to the Routing Engine.

The Routing Engine might require several minutes to boot.

After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **RE0**, and **RE1** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED lights steadily. If the red **FAIL** LED lights steadily instead, remove and install the Routing Engine again. If the red **FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

To check the status of the Routing Engine, use the CLI command:


```
user@host> show chassis routing-engine
Routing Engine status:      Slot 0:      Current state      Master ...
```

For more information about using the CLI, see the Junos OS documentation.



**NOTE:** If enhanced IP network services is configured on the chassis, all routing engines must be rebooted after synchronizing the routing engines. For more information on synchronizing the routing engines, see [Synchronizing Routing Engines](#).

Figure 95: Installing an MX480 Routing Engine

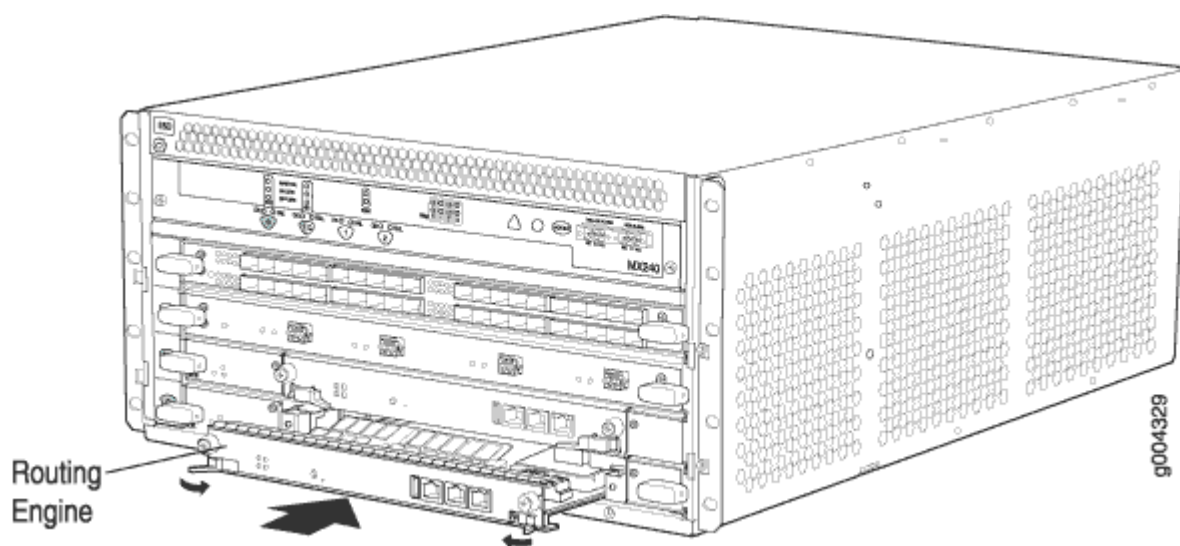

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[Replacing Connections to MX240 Routing Engine Interface Ports | 335](#)

[MX240 Routing Engine Description | 64](#)

## RELATED DOCUMENTATION

*SCB-MX Description*

[Effect of Taking the MX240 Host Subsystem Offline](#)

[Taking an MX240 Host Subsystem Offline](#)

[Replacing Connections to MX240 Routing Engine Interface Ports | 335](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)


*Synchronizing Routing Engines*

## Replacing an SSD Drive on an RE-S-1800

Each RE-S-1800 Routing Engine supports two solid-state drives (SSD) specified by Juniper Networks. The RE-S-1800 ships with one SSD installed in the slot labeled **SATA SSD 1**. The spare SSD is Juniper

part number SSD-32G-RE-S. [Figure 96 on page 327](#) shows the arrangement of storage drive slots on a RE-S-1800 Routing Engine.

**Figure 96: RE-S-1800 Storage Drive Slots**

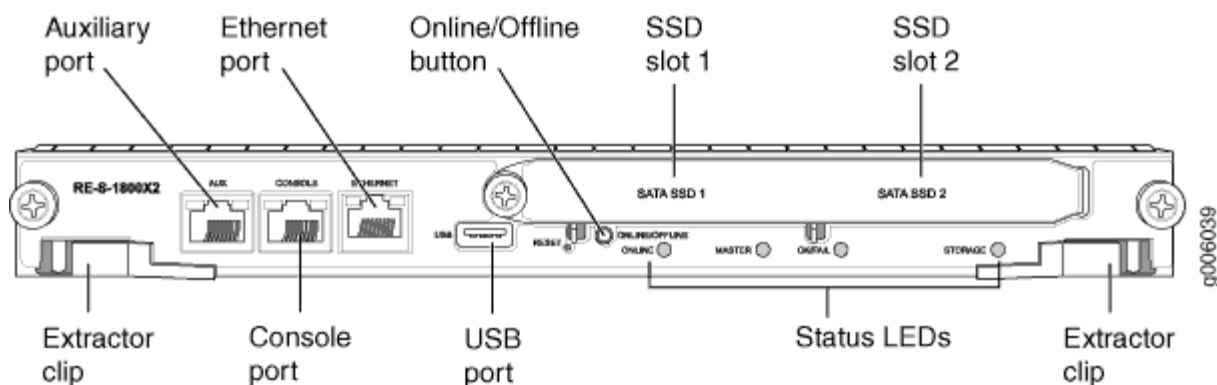

The following drive has been verified to work in the RE-S-1800 Routing Engine:

- SSD-32G-RE-S

To replace a storage drive:

1. Disable and deactivate the storage drive—press and hold the *Online/Offline* button till the LED starts blinking; wait till the RE LEDs are off.
2. Remove the storage drive.
  - a. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to an ESD point on the appliance.  
For more information about ESD, see *Preventing Electrostatic Discharge Damage* in the hardware guide for your router.
  - b. Unfasten the thumbscrew that secures the access door in front of the storage drive slots, and open the door.
  - c. Slide the lock on the ejector to the unlocked position.
  - d. Carefully slide the drive out of the slot.
3. Reinstall a storage drive.
  - a. Carefully align the sides of the drive with the guides in the slot.
  - b. Slide the drive into the slot until you feel resistance, carefully ensuring that it is correctly aligned.
  - c. Close the access door and tighten the thumbscrew to secure the door.

## SEE ALSO

| *How to Return a Hardware Component to Juniper Networks, Inc.*

## Replacing an SSD Drive on an RE-S-X6-64G

### IN THIS SECTION

- [Replace the SSD Drives on an RE-S-X6-64G | 328](#)
- [Copy the Junos OS to the Newly Replaced SSD Using a USB disk \(Minimum 16-GB\) | 332](#)

### Replace the SSD Drives on an RE-S-X6-64G

Each RE-S-X6-64G Routing Engine supports two solid-state drives (SSD) specified by Juniper Networks. The RE-S-X6-64G ships with two SSDs installed in the slot labeled **SSD1** and **SSD2**. Figure 4 shows the arrangement of storage drive slots on a RE-S-X6-64G Routing Engine.




**NOTE:** Make sure that the Routing Engine does not contain a mix of 50 GB and 200 GB SSDs. The SSDs on the Routing Engine must be from the same vendor. Both SSDs in the routing engine must be of the same type and must contain the same disk capacity. You must upgrade the two 50 GB SSDs to two 200 GB SSDs at the same time as mixed-mode operation is not supported.

Replacing an SSD drive in a RE-S-X6-64G Routing Engine consists of the following two stages:

1. Replacing the SSD drives in the Routing Engine
2. Copy the Junos OS to the newly replaced SSD



Figure 97: RE-S-X6-64G Storage Drive Slots

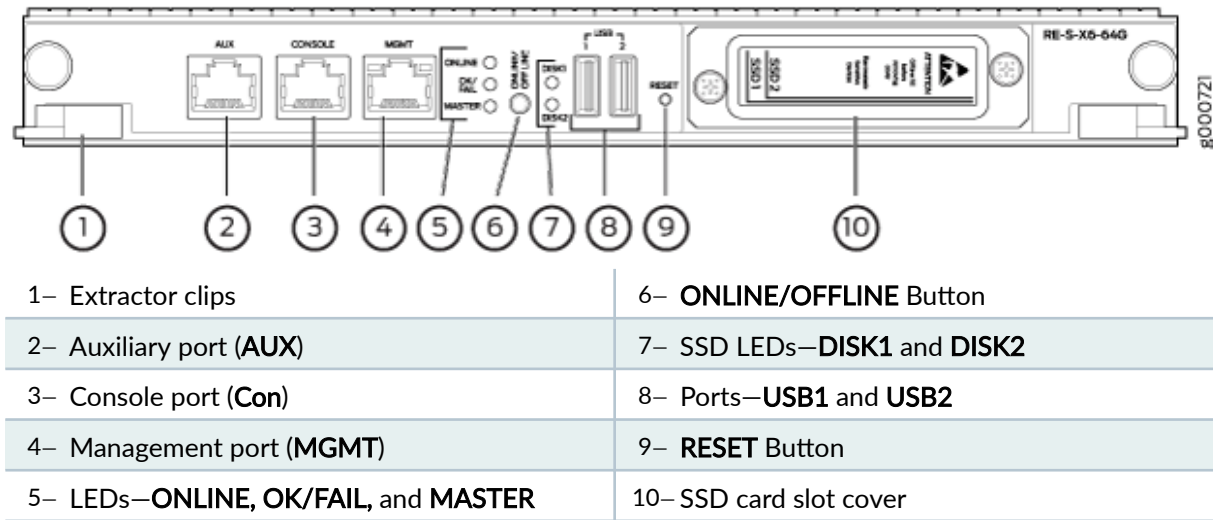

Replacing Both the SSDs in the Routing Engine:



**NOTE:** Make sure that the Routing Engine does not contain a mix of 50 GB and 200 GB SSDs. The SSDs on the Routing Engine must be from the same vendor. Both SSDs in the routing engine must be of the same type and must contain the same disk capacity. You must upgrade the two 50 GB SSDs to two 200 GB SSDs at the same time as mixed-mode operation is not supported.



**NOTE:** Ensure that you keep a bootable USB disk ready if installing vmhost and Junos OS using an USB disk. To prepare a bootable USB disk, see [Creating an Emergency Boot Device for Routing Engines with VM Host Support](#).

1. Configure the set chassis redundancy gracefulswitchover, set system commit synchronize, set routing-options nonstop-routing commands to enable graceful switchover (GRES), commit synchronize (required for nonstop routing) and nonstop routing (NSR).
2. Bring the backup Routing Engine (RE1) offline by pressing the **ONLINE/OFFLINE** button.




**NOTE:** To disable and deactivate, press and hold the **ONLINE/OFFLINE** button until the LED start blinking and wait until all Routing Engine LEDs are Off.



**NOTE:** If you have only one Routing Engine installed, you can bring it offline and follow the steps below. Traffic is interrupted when the Routing Engine is offline.


3. From the backup Routing Engine (RE1), remove the SSDs from slot SSD1 and slot SSD2.
  - a. Attach an ESD grounding strap to your bare wrist, and connect the strap to an ESD point on the appliance.
  - For more information about ESD, see *Preventing Electrostatic Discharge Damage* in the hardware guide for your router.
  - b. Unfasten the thumbscrew that secures the access door in front of the storage drive slots, and open the door.
  - c. Slide the lock on the ejector to the unlocked position.
  - d. Carefully slide the drive out of the slot. See Figure 5.

**Figure 98: Removing an SSD in the Routing Engine RE-S-X6-64G**

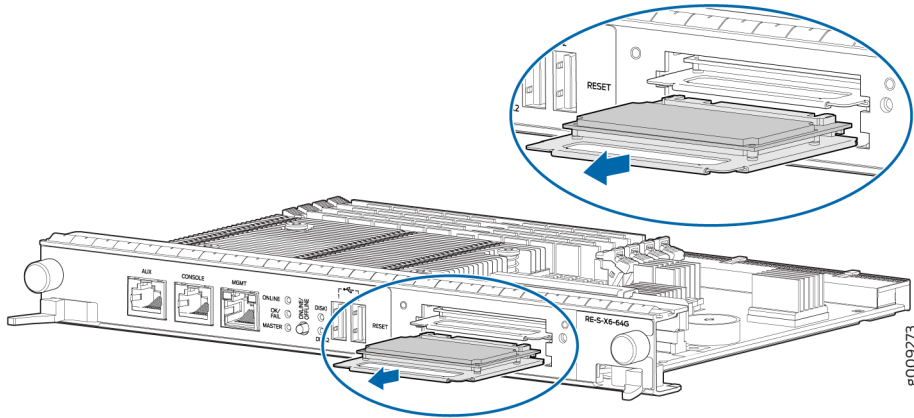

4. Insert the new SSDs in slot SSD1 and slot SSD2. See Figure 6.

**Figure 99: Installing an SSD in the Routing Engine RE-S-X6-64G**

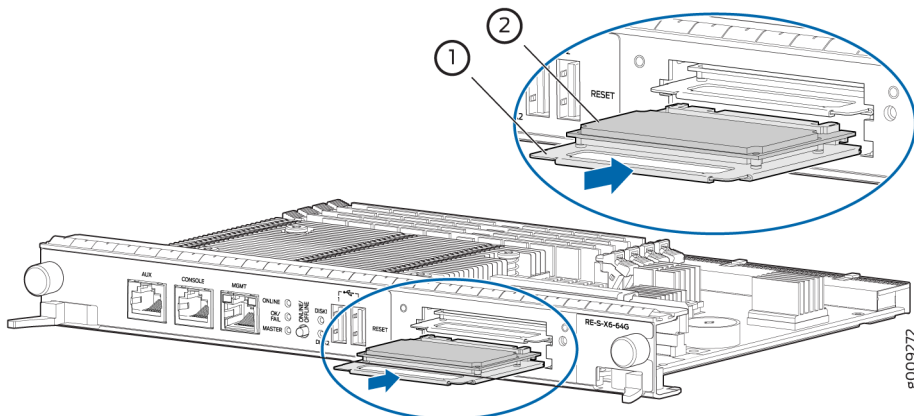

## 1– Carrier

## 2– SSD card

- a. Carefully align the sides of the drive with the guides in the slot.
  - b. Slide the drive into the slot until you feel resistance, carefully ensuring that it is correctly aligned.
  - c. Close the access door and tighten the thumbscrew to secure the door.
5. Use the USB disk to install Junos OS (see ["Copy the Junos OS to the Newly Replaced SSD Using a USB disk \(Minimum 16-GB\)" on page 332](#)).

**Replacing Disk2 (SSD2) Only in the Routing Engine:**

**NOTE:** Make sure that the Routing Engine does not contain a mix of 50 GB and 200 GB SSDs. The SSDs on the Routing Engine must be from the same vendor. Both SSDs in the routing engine must be of the same type and must contain the same disk capacity. You must upgrade the two 50 GB SSDs to two 200 GB SSDs at the same time as mixed-mode operation is not supported.

1. Make sure the router is booted up and running from an image from disk1 (execute the request `vmhost reboot disk1` command to boot from disk1).
2. Remove disk2 and replace with a new disk (refer step 3 to step 4).
3. Reboot the Routing Engine by executing the request `vmhost reboot` command.
4. The router boots from disk1 when disk2 is replaced. To be able to boot from disk2, execute the request `vmhost snapshot partition` command.

**Replacing Disk1 (SSD1) Only:**

**NOTE:** Make sure that the Routing Engine does not contain a mix of 50 GB and 200 GB SSDs. The SSDs on the Routing Engine must be from the same vendor. Both SSDs in the routing engine must be of the same type and must contain the same disk capacity. You must upgrade the two 50 GB SSDs to two 200 GB SSDs at the same time as mixed-mode operation is not supported.

1. Make sure the router is booted up and running from an image from disk2 (execute the request `vmhost reboot disk2` command to boot from disk2).
2. Remove disk1 and replace with a new disk (refer step 3 to step 4).
3. Reboot the Routing Engine by executing the request `vmhost reboot` command.
4. The router boots from disk2 when disk1 is replaced. To be able to boot from disk1, execute the request `vmhost snapshot recovery partition` command.

5. Boot from disk1 by executing the request `vmhost reboot disk1` command.

## SEE ALSO

[How to Return a Hardware Component to Juniper Networks, Inc.](#)

[Upgrading the SSD Firmware on Routing Engines with VM Host Support](#)

## Copy the Junos OS to the Newly Replaced SSD Using a USB disk (Minimum 16-GB)

Once you have replaced the SSD, you can now copy the VM Host and Junos OS to a newly replaced SSD using a USB disk:



**NOTE:** In addition to installing Junos OS from the USB device, you can also install the VM Host and Junos OS using a Preboot Execution Environment (PXE) boot server. For more information, see [Installing, Upgrading, Backing Up, and Recovery of VM Host](#).

1. Insert the USB disk (with bootable image) in the **USB** slot on the Routing Engine.



**NOTE:** See [Creating an Emergency Boot Device for Routing Engines with VM Host Support](#) for creating the bootable USB.

2. Log in to the backup Routing Engine (RE1) through the console session.
3. Bring the Routing Engine online by pressing the **ONLINE/OFFLINE** button.
4. After the Routing Engine starts booting from the USB, press **y** when you are prompted to confirm Install vmhost and Junos software on Primary and Secondary disk [y/N?] on the console.
5. After the installation completes, press **y** when prompted to confirm Reboot now? [y/N]? to reboot from the SSD disk.
6. Once the backup Routing Engine boots:
  - a. Verify the status of backup Routing Engine (RE1) is online by entering the `show chassis routing-engine` CLI.
  - b. On the Routing Engine (RE1), verify the new SSDs capacity by entering the `show vmhost hardware` CLI. The output is similar to the following.

```
user@host> show vmhost hardware
Compute cluster: rainier-re-cc
Compute node: rainier-re-cn
Hardware inventory
Item          Capacity    Part number    Serial
```

number	Description		
0x31C6F8A6	DIMM 0	16384 MB	HMA82GR8AMR4N-TF
	DDR4	2133 MHz	
0x31C6F8A5	DIMM 1	16384 MB	HMA82GR8AMR4N-TF
	DDR4	2133 MHz	
0x0DEFE489	DIMM 2	16384 MB	36ADS2G72PZ-2G1A1
	DDR4	2133 MHz	
0x0DEFE47E	DIMM 3	16384 MB	36ADS2G72PZ-2G1A1
	DDR4	2133 MHz	
P1T14006008707200259	Disk1	200 GB	StorFly-VSF202CC200G
	SLIM SATA SSD		
P1T14006216304250010	Disk2	200 GB	StorFly-VSF202CC200G
	SLIM SATA SSD		

- c. On the backup Routing Engine (RE1), verify that the vmhost versions are same as Routing Engine (RE0) by entering the show vmhost version CLI. The output is similar to the following.

```

user@host> show vmhost version

Current root details,          Device sda, Label: jrootp_P, Partition:
sda3

Current boot disk: Primary
Current root set: p
UEFI      Version: NGRE_v00.53.00.01

Primary Disk, Upgrade Time: <fresh install>

Version: set p
VMHost Version: 7.2540
VMHost Root: vmhost-x86_64-21.4R3-20220823_0241_builder
VMHost Core: vmhost-core-x86-64-21.4R3-S3.4
kernel: 5.2.60-rt15-LTS19
Junos Disk: junos-install-mx-x86-64-21.4R3-S3.4

Version: set b
VMHost Version: 7.2540
VMHost Root: vmhost-x86_64-21.4R3-20220823_0241_builder
VMHost Core: vmhost-core-x86-64-21.4R3-S3.4
kernel: 5.2.60-rt15-LTS19
Junos Disk: junos-install-mx-x86-64-21.4R3-S3.4

```

- d. From the primary Routing Engine (RE0), perform `commit synchronize` command.
  - e. If the **Network Services Mode: Enhanced-IP** configuration was previously applied, then a warning message indicating the changes in the network services mode displays. Perform a reboot on the backup Routing Engine in order to enable the **Network Services Mode** to apply **Enhanced IP**.
7. Make sure both the Routing Engines are in SYNC and ready for the switchover:
- a. On the backup Routing Engine (RE1), verify the GRES readiness by entering the `show system switchover` CLI. Output is similar to the following:

```
{backup}
user@host> show system switchover
Graceful switchover: On
Configuration database: Ready
Kernel database: Ready
Switchover Status: Ready
```

- b. On the primary Routing Engine (RE0), check the switchover state by entering the following command:

```
{master}
user@host> request chassis routing-engine master switch check
Switchover Ready
```

- c. On the primary Routing Engine (RE0), check the replication state if nonstop-routing is enabled by entering the `show task replication` CLI. The output is similar to the following:

```
{master}
user@host> show task replication
Stateful Replication: Enabled
RE mode: Master
```

Protocol	Synchronization Status
OSPF	Complete
BGP	Complete
MPLS	Complete
RSVP	Complete
LDP	Complete

8. Switch the current primary Routing Engine (RE0) to RE1 by executing the request chassis routing-engine master switch command on the primary Routing Engine.
9. Once the Routing Engine (RE1) becomes the primary Routing Engine and is carrying traffic, repeat the steps in ["Replacing an SSD Drive on an RE-S-X6-64G" on page 328](#) and ["Copy the Junos OS to the Newly Replaced SSD Using a USB disk \(Minimum 16-GB\)" on page 332](#) on the new backup Routing Engine (RE0).

## Replacing Connections to MX240 Routing Engine Interface Ports

### IN THIS SECTION

- [Replacing the Management Ethernet Cable on an MX240 Router | 335](#)
- [Replacing the Console or Auxiliary Cable on an MX240 Router | 336](#)

### Replacing the Management Ethernet Cable on an MX240 Router

To replace the cable connected to the **ETHERNET** port:

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Press the tab on the connector, and pull the connector straight out of the port. Figure 7 shows the connector.
3. Disconnect the cable from the network device.
4. Plug one end of the replacement cable into the **ETHERNET** port. Figure 8 shows the port.
5. Plug the other end of the cable into the network device.

**Figure 100: Cable Connector**





Figure 101: Ethernet Port

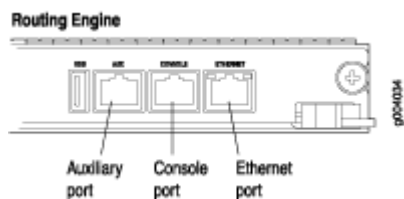

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[Routing Engine Interface Cable and Wire Specifications for MX Series Routers | 238](#)

## Replacing the Console or Auxiliary Cable on an MX240 Router

To use a system console to configure and manage the Routing Engine, connect it to the **CONSOLE** port on the Routing Engine. To use a laptop, modem, or other auxiliary device, connect it to the **AUX** port on the Routing Engine. Both ports accept a cable with an RJ-45 connector. If you want to connect a device to both ports, you must supply two separate cables.

**NOTE:**

We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.


To replace a cable connected to a management console or auxiliary device:

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Press the tab on the connector, and pull the connector straight out of the port.
3. Disconnect the cable from the console or auxiliary device.



4. Plug the RJ-45 end of the replacement serial cable into the **CONSOLE** or **AUX** port. Figure 9 shows the external device ports on the Routing Engine.
5. Plug the female DB-9 end into the console or auxiliary device's serial port.

**Figure 102: Auxiliary and Console Ports**

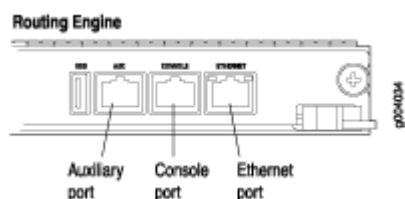

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[Routing Engine Interface Cable and Wire Specifications for MX Series Routers | 238](#)

## RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[Routing Engine Interface Cable and Wire Specifications for MX Series Routers | 238](#)

## Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem

### IN THIS SECTION

- [Removing the Routing Engine | 338](#)
- [Installing the Routing Engine RE-S-X6-64G | 341](#)
- [Verifying and Configuring the Upgraded Routing Engine as the Primary | 344](#)
- [Verifying and Configuring the Upgraded Routing Engine as the Backup | 345](#)

A redundant host subsystem consists of a primary Routing Engine (RE0) and a backup Routing Engine (RE1). To upgrade the host subsystem to use the RE-S-X6-64G Routing Engine, you must first uninstall the backup Routing Engine and install the RE-S-X6-64G Routing Engine, which then becomes the backup Routing Engine. You then switch over this backup Routing Engine to make it the primary Routing Engine. Replace the other Routing Engine and configure it as the backup Routing Engine.

Ensure that the Switch Control Board in the chassis is SCBE2 or SCBE3 because the RE-S-X6-64G Routing Engine is not compatible with the Switch Control Boards SCB or SCBE. To upgrade the Switch Control Board to SCBE2, see ["Upgrading an MX240 to Use the SCBE2-MX" on page 456](#), [Upgrading an MX480 to Use the SCBE2-MX](#) or [Upgrading an MX960 to Use the SCBE2-MX](#), depending on the chassis on which the Routing Engine is being upgraded. To upgrade the Switch Control Board to SCBE3 [Upgrading an MX240, MX480, or MX960 Router to Use the SCBE3-MX](#).



**NOTE:** Save the router configuration before proceeding with the Routing Engine upgrade.



**NOTE:** Nonstop active routing (NSR) and graceful Routing Engine switchover (GRES) are not supported during the upgrade and they must be temporarily disabled. Disable NSR by removing the nonstop-routing statement from the [edit routing-options] hierarchy level and by removing the graceful-switchover statement from the [edit chassis redundancy] hierarchy level .

## Removing the Routing Engine

To remove the backup Routing Engine from the chassis (see Figure 10, Figure 11, and Figure 12):

1. On the external management device connected to the Routing Engine, shut down the host subsystem by using the `request system power-off` command.
2. Wait until a message appears on the console confirming that the operating system has halted.
3. Remove the cables connected to the Routing Engine.
4. Place an electrostatic bag or antistatic mat on a flat, stable surface. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
5. Verify that the Routing Engine LEDs are off. Loosen the captive screws on the top and bottom of the Routing Engine.
6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis. Place the Routing Engine on the antistatic mat.



**NOTE:** To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

Figure 103: Removing a Routing Engine from an MX240 Router



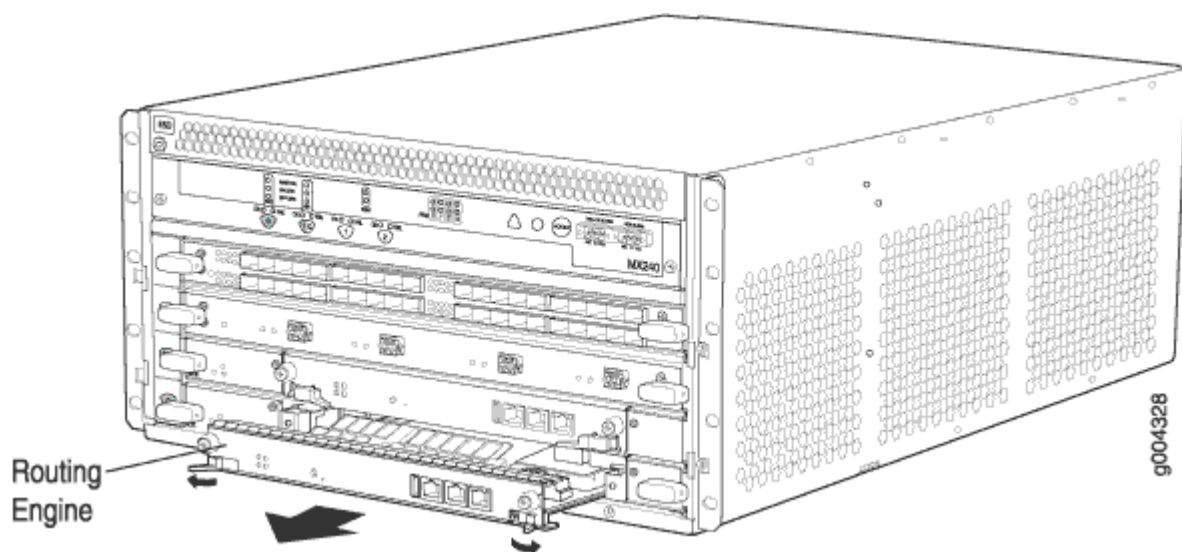


Figure 104: Removing a Routing Engine from an MX480 Router

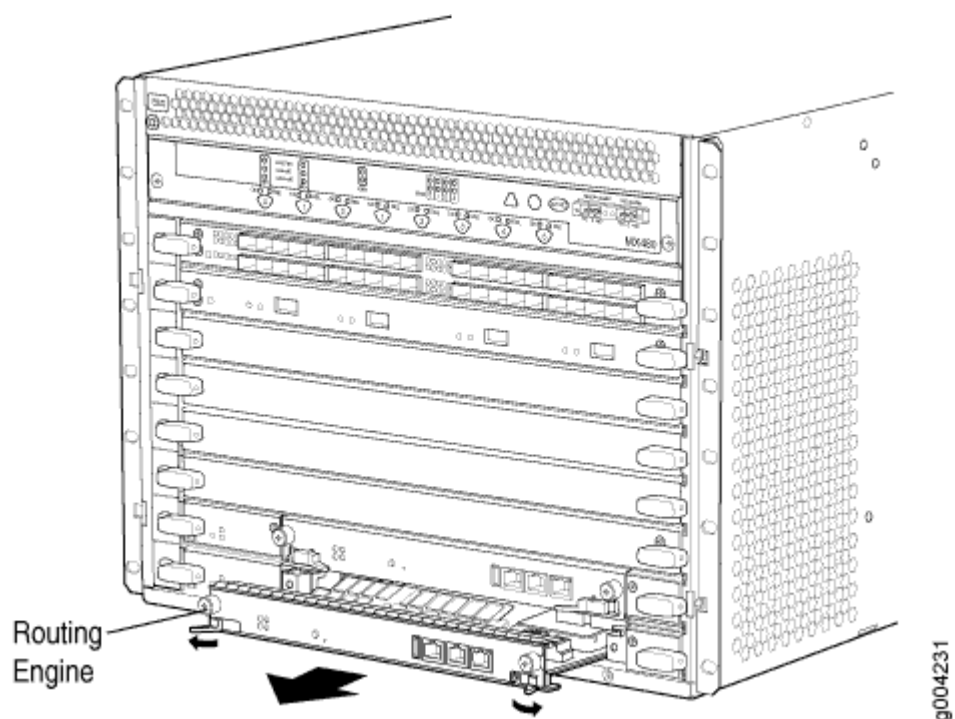

**Figure 105: Removing a Routing Engine from an MX960 Router**

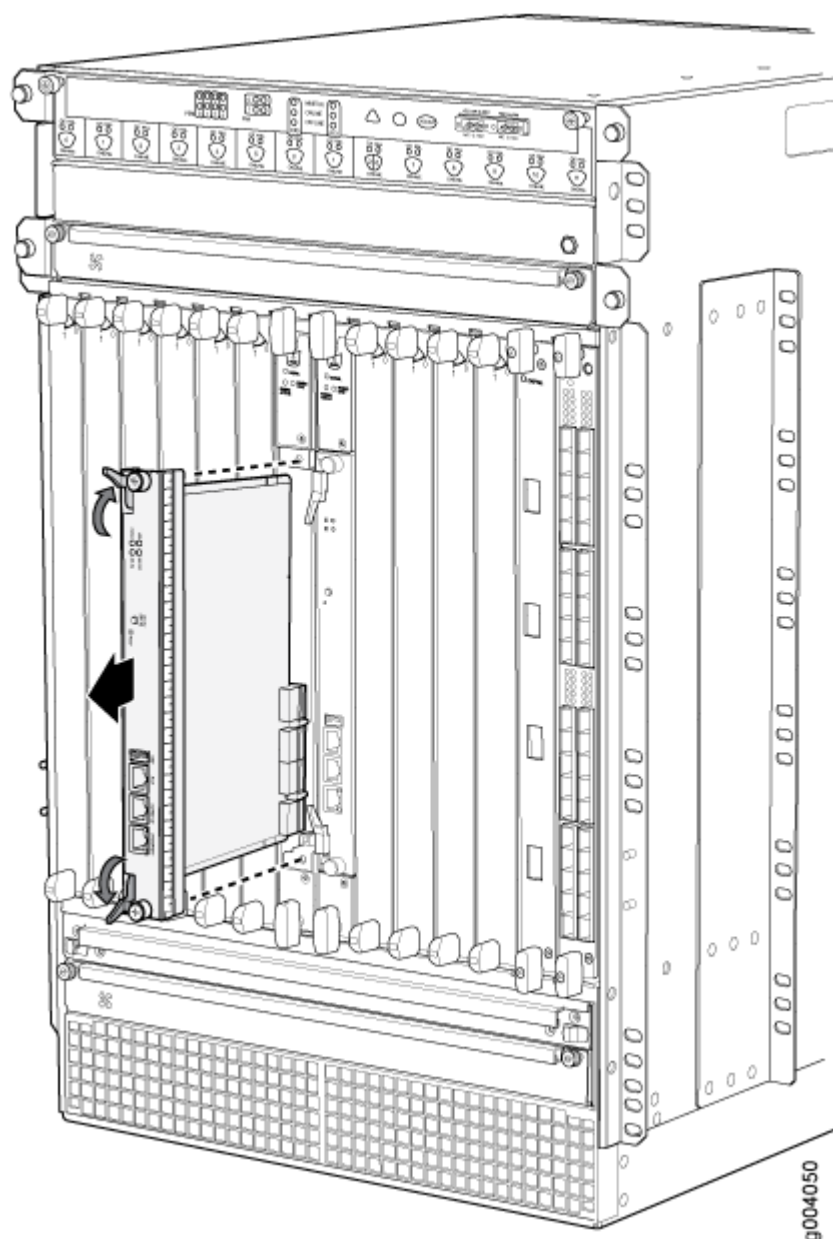

### **Installing the Routing Engine RE-S-X6-64G**

To install the Routing Engine RE-S-X6-64G:

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.

3. Place one hand underneath the Routing Engine to support it and carefully align the sides of the Routing Engine with the guides inside the opening on the Switch Control Board SCBE2 or SCBE3.



**NOTE:** The Routing Engine RE-S-X6-64G is supported only on the SCBE2 or SCBE3. RE-S-X6-64G is not compatible with the SCB or the SCBE.

4. Slide the Routing Engine into the SCBE2 or SCBE3 until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.
5. Press both of the ejector handles inward to seat the Routing Engine. Tighten the captive screws on the top and bottom of the Routing Engine.
6. Connect the management device cables to the Routing Engine. After the Routing Engine is installed, the **ONLINE** LED starts blinking green slowly.
7. Replace the former primary Routing Engine, RE0, with the Routing Engine RE-S-X6-64G.



**NOTE:** The Routing Engine RE-S-X6-64G is supported only on the SCBE2 and SCBE3. RE-S-X6-64G is not compatible with the SCB or the SCBE.

The Routing Engine might require several minutes to boot. After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **RE0**, and **RE1** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED on the Routing Engine lights steadily. If the red **FAIL** LED on the Routing Engine lights steadily instead, remove and install the Routing Engine again. If the red **FAIL** LED still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

**Figure 106: Installing a Routing Engine in an MX240 Router**



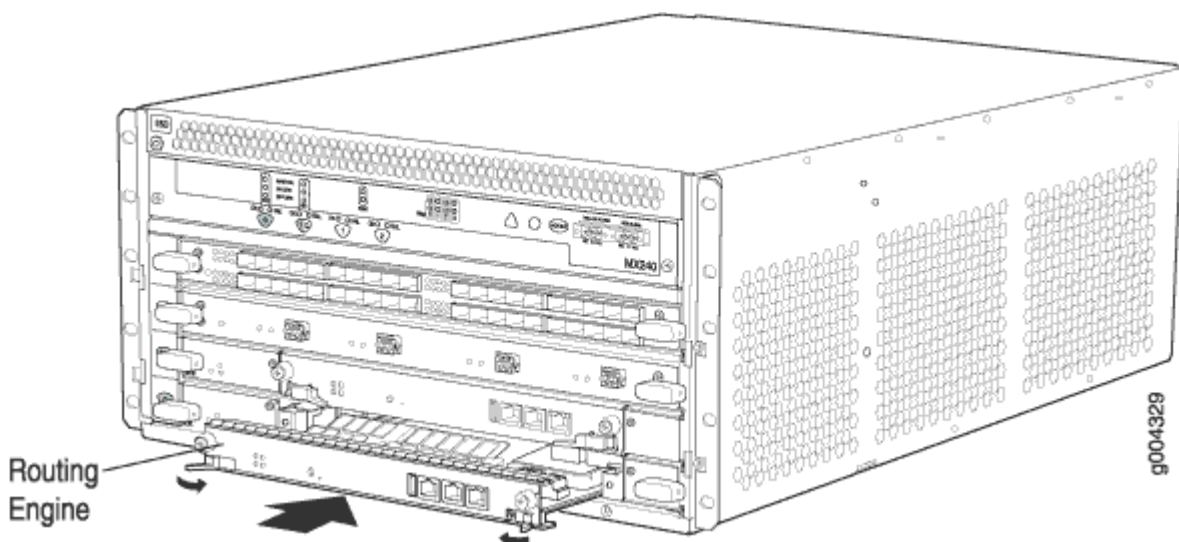


Figure 107: Installing a Routing Engine in an MX480 Router

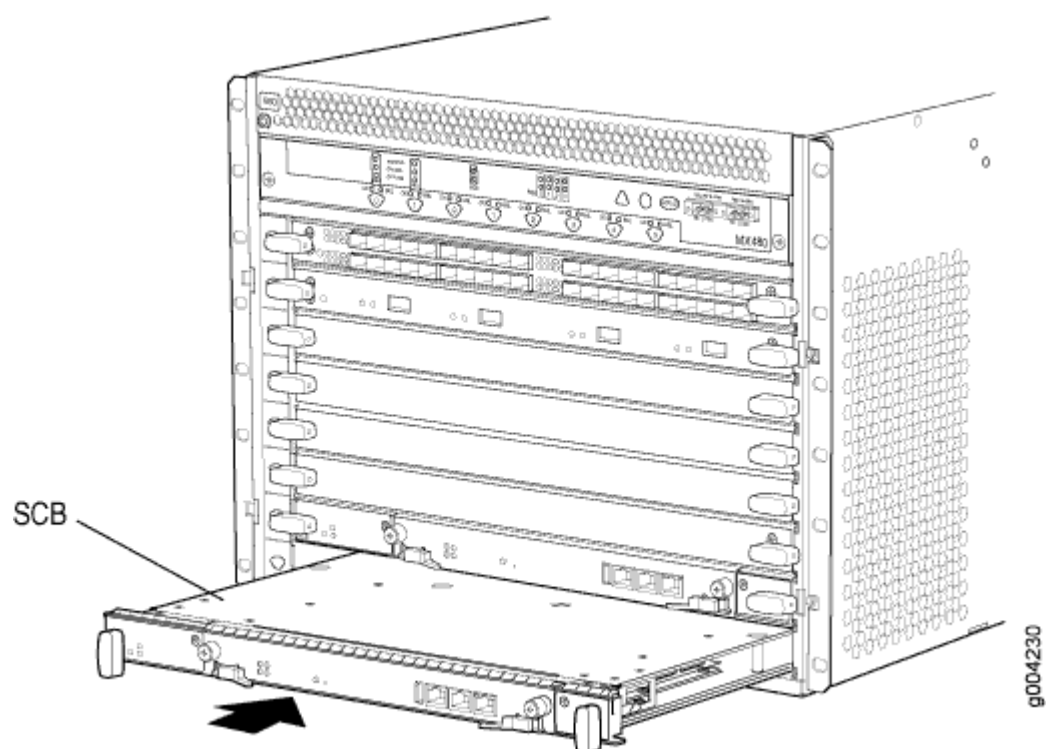

**Figure 108: Installing a Routing Engine in an MX960 Router**

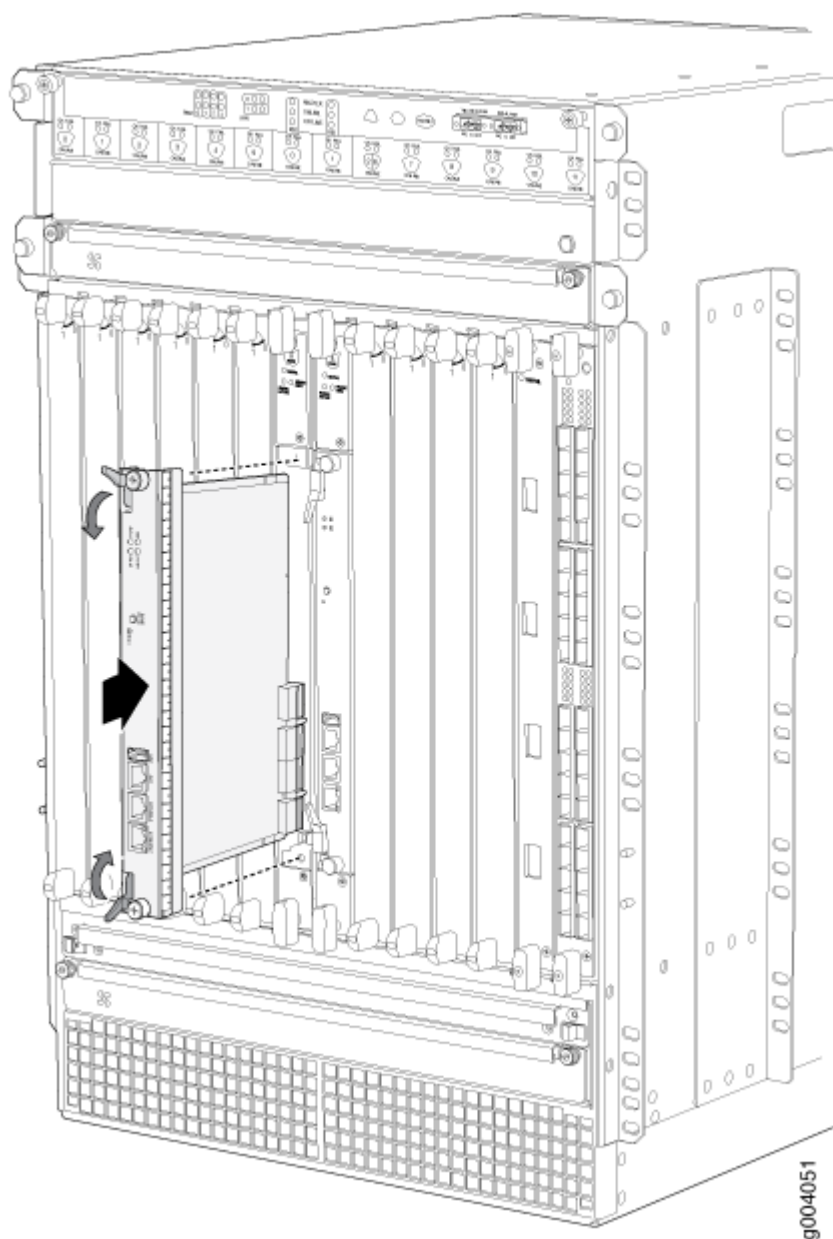

### **Verifying and Configuring the Upgraded Routing Engine as the Primary**

After replacing the backup Routing Engine with the RE-S-X6-64G Routing Engine, perform the following steps:

1. Verify that the SCBE2 or SCBE3 and RE-S-X6-64G Routing Engine are online by issuing the `show chassis hardware` command.



2. After you install the RE-S-X6-64G Routing Engine into the SCBE2 or SCBE3, the Routing Engine gets automatically powered on and comes up in *amnesiac* mode as it is loaded with factory defaults. After the Routing Engine comes up in *amnesiac* mode, load the base configuration and commit.
3. Configure the backup Routing Engine by using the `commit synchronize` command to copy the configuration to the backup Routing Engine.
4. Use the `request chassis routing-engine master switch` command to make the Routing Engine RE-S-X6-64G (RE1) the primary Routing Engine. All FPCs reboot after this step.

## Verifying and Configuring the Upgraded Routing Engine as the Backup

1. Use the `request chassis routing-engine master switch` command to make newly installed RE-S-X6-64G (RE0) the backup Routing Engine.
2. Use the `commit synchronize` command to copy the active configuration from the primary Routing Engine to the backup Routing Engine.

## RELATED DOCUMENTATION

[RE-S-X6-64G Routing Engine Description](#) | 71

## Upgrading to the RE-S-X6-64G Routing Engine in a Nonredundant Host Subsystem

### IN THIS SECTION

- [Removing the Routing Engine](#) | 346
- [Installing the Routing Engine RE-S-X6-64G](#) | 346

In a nonredundant host subsystem, only one Routing Engine and one Switch Control Board are present in the chassis. When you are upgrading the Routing Engine, taking the host subsystem offline shuts down the router. To upgrade the host subsystem with the RE-S-X6-64G Routing Engine, you must uninstall the existing Routing Engine and install the RE-S-X6-64G Routing Engine. Ensure that the Switch Control Board in the chassis is SCBE2 because the RE-S-X6-64G Routing Engine is not compatible with the Switch Control Boards SCB or SCBE. To upgrade the Switch Control Board to SCBE2, see ["Upgrading an MX240 to Use the SCBE2-MX" on page 456](#), [Upgrading an MX480 to Use](#)

*the SCBE2-MX or Upgrading an MX960 to Use the SCBE2-MX*, depending on the chassis on which the Routing Engine is being upgraded. .



**NOTE:** Save the router configuration before proceeding with the Routing Engine upgrade.

## Removing the Routing Engine

To remove the Routing Engine from the chassis:

1. On the external management device connected to the Routing Engine, shut down the host subsystem by using the `request system power-off` command.
2. Wait until a message appears on the console confirming that the operating system has halted.
3. Remove the cables connected to the Routing Engine.
4. Place an electrostatic bag or antistatic mat on a flat, stable surface. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
5. Verify that the Routing Engine LEDs are off. Loosen the captive screws on the top and bottom of the Routing Engine.
6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis. Place the Routing Engine on the antistatic mat.



**NOTE:** To maintain proper airflow through the chassis, do not leave an SCB installed in the chassis without a Routing Engine for extended periods of time. If a Routing Engine is removed, a replacement Routing Engine should be installed as soon as possible.

## Installing the Routing Engine RE-S-X6-64G

To install the new Routing Engine (RE-S-X6-64G):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it and carefully align the sides of the Routing Engine with the guides inside the opening on the SCBE2.



**NOTE:** The Routing Engine RE-S-X6-64G is supported only on the SCBE2. RE-S-X6-64G is not compatible with the SCB or the SCBE.

4. Slide the Routing Engine into the SCBE2 until you feel resistance, and then press the Routing Engine's faceplate until it engages the connectors.
5. Press both of the ejector handles inward to seat the Routing Engine. Tighten the captive screws on the top and bottom of the Routing Engine.
6. Connect the management device cables to the Routing Engine. After the Routing Engine is installed, the **ONLINE** LED starts blinking green slowly.
7. Verify that the SCBE2 and RE-S-X6-64G Routing Engine are online by issuing the `show chassis hardware` command.
8. After you install the RE-S-X6-64G Routing Engine into the SCBE2, the Routing Engine gets automatically powered on and comes up in *amnesiac* mode as it is loaded with factory defaults. After the Routing Engine comes up in *amnesiac* mode, load the base configuration and commit.

The Routing Engine might require several minutes to boot. After the Routing Engine boots, verify that it is installed correctly by checking the **FAIL**, **RE0**, and **RE1** LEDs on the craft interface. If the router is operational and the Routing Engine is functioning properly, the green **ONLINE** LED on the Routing Engine lights steadily. If the red **FAIL** LED lights steadily instead, remove the Routing Engine and reinstall it. If the red **FAIL** LED on the Routing Engine still lights steadily, the Routing Engine is not functioning properly. Contact your customer support representative.

## RELATED DOCUMENTATION

[RE-S-X6-64G Routing Engine Description | 71](#)

[Upgrading to the RE-S-X6-64G Routing Engine in a Redundant Host Subsystem | 337](#)

## Replacing the MX240 Craft Interface

### IN THIS SECTION


- [Disconnecting the Alarm Relay Wires from the MX240 Craft Interface | 348](#)
- [Removing the MX240 Craft Interface | 348](#)
- [Installing the MX240 Craft Interface | 349](#)
- [Connecting the Alarm Relay Wires to the MX240 Craft Interface | 350](#)

## Disconnecting the Alarm Relay Wires from the MX240 Craft Interface

To disconnect the alarm relay wires from the router and an alarm-reporting device (see Figure 16):

1. Disconnect the existing wire at the external device.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Using a 2.5-mm flat-blade screwdriver, loosen the small screws on the face of the terminal block and remove the block from the relay contact.
4. Using the 2.5-mm flat-blade screwdriver, loosen the small screws on the side of the terminal block. Remove existing wires from the slots in the front of the block.

**Figure 109: Alarm Relay Contacts**

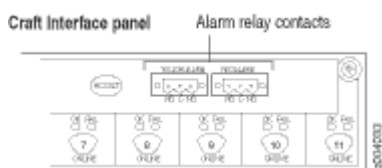

### SEE ALSO

[MX240 Craft Interface Overview | 25](#)

[Replacing the MX240 Craft Interface | 347](#)


[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Removing the MX240 Craft Interface

To remove the craft interface (see Figure 17):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Detach any external devices connected to the craft interface.
3. Loosen the captive screws at the left and right corners of the craft interface faceplate.
4. Grasp the craft interface faceplate and carefully tilt it toward you until it is horizontal.
5. Disconnect the ribbon cable from the back of the faceplate by gently pressing on both sides of the latch with your thumb and forefinger. Remove the craft interface from the chassis.

**Figure 110: Removing the Craft Interface**

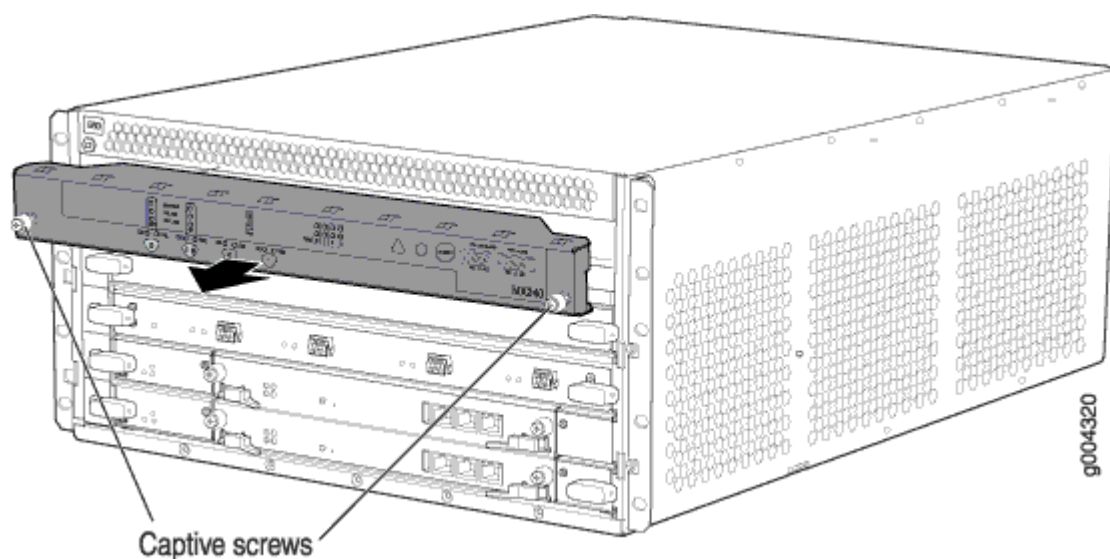

## SEE ALSO

[MX240 Craft Interface Overview | 25](#)


[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Installing the MX240 Craft Interface

To install the craft interface (see Figure 18):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Grasp the craft interface with one hand, and hold the bottom edge of the craft interface with the other hand to support its weight.
3. Orient the ribbon cable so that it plugs into the connector socket. The connector is keyed and can be inserted only one way.
4. Align the bottom of the craft interface with the sheet metal above the card cage and press it into place.
5. Tighten the screws on the left and right corners of the craft interface faceplate.
6. Reattach any external devices connected to the craft interface.

**Figure 111: Installing the Craft Interface**

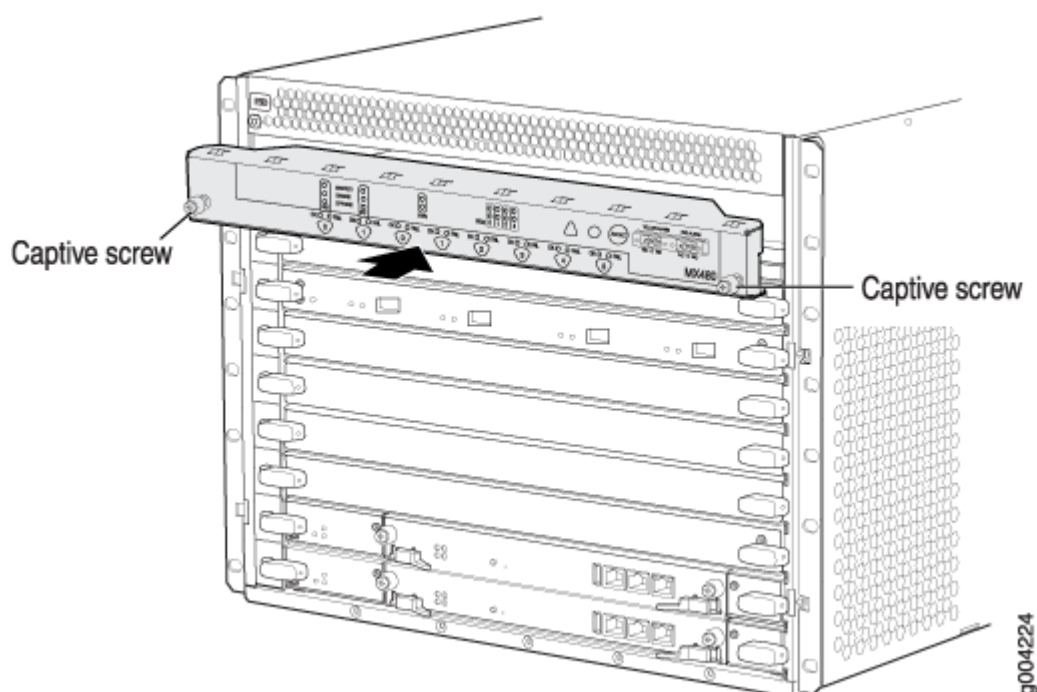

## SEE ALSO

[MX240 Craft Interface Overview | 25](#)


[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Connecting the Alarm Relay Wires to the MX240 Craft Interface

To connect the alarm relay wires between a router and an alarm-reporting device (see Figure 19):

1. Prepare the required length of replacement wire with gauge between 28-AWG and 14-AWG (0.08 and 2.08 mm<sup>2</sup>).
2. Insert the replacement wires into the slots in the front of the block. Use a 2.5-mm flat-blade screwdriver to tighten the screws and secure the wire.
3. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
4. Plug the terminal block into the relay contact, and use a 2.5-mm flat-blade screwdriver to tighten the screws on the face of the block.
5. Attach the other end of the wires to the external device.

**Figure 112: Alarm Relay Contacts**

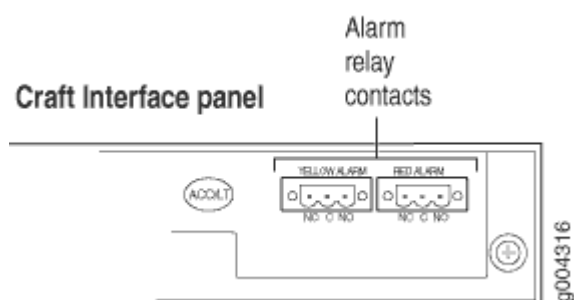

## SEE ALSO

[MX240 Craft Interface Overview | 25](#)

[Replacing the MX240 Craft Interface | 347](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## RELATED DOCUMENTATION

[MX240 Craft Interface Overview | 25](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

# Maintaining MX240 Interface Modules

## IN THIS SECTION

- [Maintaining MX240 DPCs | 352](#)
- [Holding an MX240 DPC | 354](#)
- [Storing an MX240 DPC | 358](#)
- [Replacing an MX240 DPC | 358](#)
- [Maintaining MX240 FPCs | 363](#)
- [Holding an MX240 FPC | 365](#)
- [Storing an MX240 FPC | 368](#)

- [Replacing an MX240 FPC | 369](#)
- [Replacing an MX240 MIC | 375](#)
- [Maintaining MX240 MICs | 380](#)
- [Installing an MX240 Dual-Wide MIC | 381](#)
- [Maintaining MX240 MPCs | 385](#)
- [Replacing an MX240 MPC | 388](#)
- [Maintaining MX240 PICs | 393](#)
- [Replacing an MX240 PIC | 394](#)
- [Maintaining Cables that Connect to MX240 DPCs, MPCs, MICs, or PICs | 399](#)
- [Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC | 400](#)
- [Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 404](#)
- [Replacing an MX240 AS MLC | 408](#)
- [Replacing an MX240 AS MSC | 412](#)
- [Replacing an MX240 AS MXC | 416](#)

## Maintaining MX240 DPCs

### IN THIS SECTION

- [Purpose | 352](#)
- [Action | 352](#)

### Purpose

For optimum router performance, verify the condition of the Dense Port Concentrators (DPCs). The router can have up to three DPCs mounted horizontally in the DPC card cage at the front of the chassis.

### Action

On a regular basis:



- Check the LEDs on the craft interface directly above each DPC slot. The green LED labeled **OK** lights steadily when a DPC is functioning normally.
- Check the **OK/FAIL** LED on the DPC. If the DPC detects a failure, the DPC sends an alarm message to the Routing Engine.
- Issue the CLI `show chassis fpc` command to check the status of installed DPCs. As shown in the sample output, the value `State` in the column labeled `State` indicates that the DPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Utilization (%)
			Total Interrupt	DRAM (MB) Heap Buffer
0	Online	41	9 0	1024 15 57
1	Online	43	5 0	1024 16 57
2	Online	43	11 0	1024 16 57

For more detailed output, add the `detail` option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

Slot 0 information:

State	Online
Temperature	33 degrees C / 91 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2007-12-06 11:33:00 PST
Uptime:	4 hours, 34 minutes, 49 seconds

Slot 1 information:

State	Online
Temperature	33 degrees C / 91 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2007-12-06 11:33:01 PST
Uptime:	4 hours, 34 minutes, 48 seconds

Slot 2 information:

State	Online
Temperature	33 degrees C / 91 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB

Start time:	2007-12-06 11:33:05 PST
Uptime:	4 hours, 34 minutes, 44 seconds

- Issue the CLI `show chassis fpc pic-status` command. The DPC slots are numbered **1/0**, **1**, and **2**, bottom to top:

```
user@host> show chassis fpc pic-status
Slot 0   Online      DPCE 4x 10GE R
  PIC 0   Online      1x 10GE(LAN/WAN)
  PIC 1   Online      1x 10GE(LAN/WAN)
  PIC 2   Online      1x 10GE(LAN/WAN)
  PIC 3   Online      1x 10GE(LAN/WAN)
Slot 1   Online      DPCE 40x 1GE R
  PIC 0   Online      10x 1GE(LAN)
  PIC 1   Online      10x 1GE(LAN)
  PIC 2   Online      10x 1GE(LAN)
  PIC 3   Online      10x 1GE(LAN)
Slot 2   Online      DPCE 40x 1GE R
  PIC 0   Online      10x 1GE(LAN)
  PIC 1   Online      10x 1GE(LAN)
  PIC 2   Online      10x 1GE(LAN)
  PIC 3   Online      10x 1GE(LAN)
```

For further description of the output from the command, see the [CLI Explorer](#).

## SEE ALSO

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[MX240 Dense Port Concentrator \(DPC\) LEDs | 129](#)

[Troubleshooting the MX240 DPCs | 469](#)

## Holding an MX240 DPC

When carrying a DPC, you can hold it either vertically or horizontally.



**NOTE:** A DPC weighs 14.5 lb (6.6 kg). Be prepared to accept the full weight of the DPC as you lift it.

To hold a DPC vertically:

1. Orient the DPC so that the faceplate faces you. To verify orientation, confirm that the text on the DPC is right-side up and the electromagnetic interference (EMI) strip is on the right-hand side.
2. Place one hand around the DPC faceplate about a quarter of the way down from the top edge. To avoid deforming the EMI shielding strip, do not press hard on it.
3. Place your other hand at the bottom edge of the DPC.

If the DPC is horizontal before you grasp it, place your left hand around the faceplate and your right hand along the bottom edge.

To hold a DPC horizontally:


1. Orient the DPC so that the faceplate faces you.
2. Grasp the top edge with your left hand and the bottom edge with your right hand.

You can rest the faceplate of the DPC against your body as you carry it.

As you carry the DPC, do not bump it against anything. DPC components are fragile.

Never hold or grasp the DPC anywhere except places that this document indicates. In particular, never grasp the connector edge, especially at the power connector in the corner where the connector and bottom edges meet. See [Figure 113 on page 356](#).

**Figure 113: Do Not Grasp the Connector Edge**

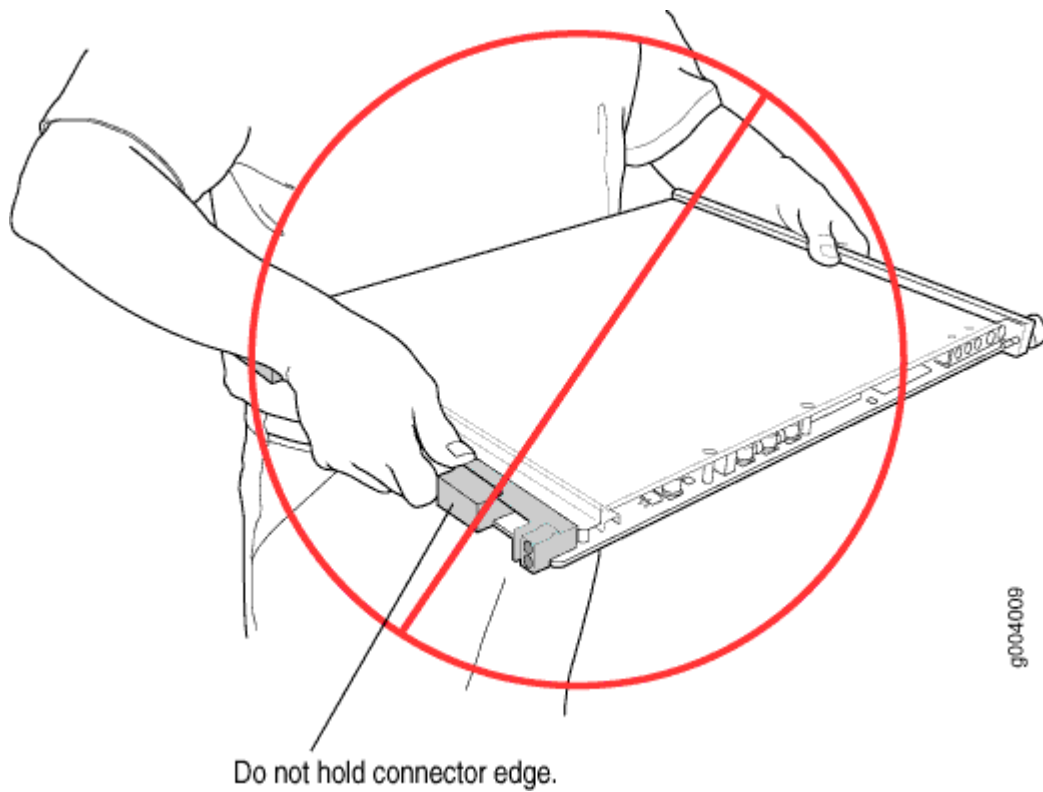


Never carry the DPC by the faceplate with only one hand.

Do not rest any edge of a DPC directly against a hard surface (see [Figure 114 on page 357](#)).

Do not stack DPCs.

Figure 114: Do Not Rest the DPC on an Edge

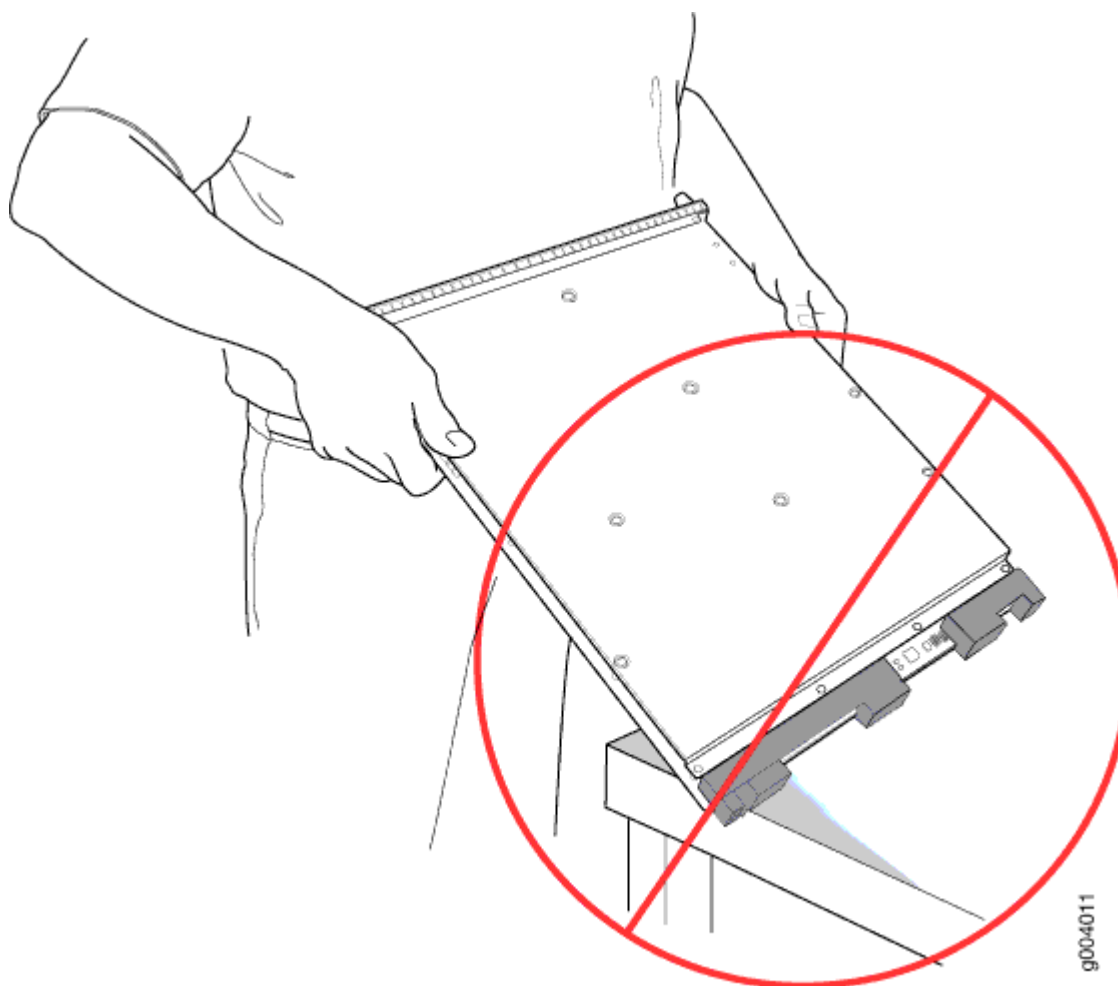

Do not rest connectors on any surface.

If you must rest the DPC temporarily on an edge while changing its orientation between vertical and horizontal, use your hand as a cushion between the edge and the surface.

#### SEE ALSO

[MX240 DPC Terminology](#)

[Storing an MX240 DPC | 358](#)

[Troubleshooting the MX240 DPCs | 469](#)

[Replacing an MX240 DPC | 358](#)

## Storing an MX240 DPC

You must store a DPC as follows:

- In the router
- In the container in which a spare DPC is shipped
- Horizontally and sheet metal side down

When you store a DPC on a horizontal surface or in the shipping container, always place it inside an antistatic bag. Because the DPC is heavy, and because antistatic bags are fragile, inserting the DPC into the bag is easier with two people. To do this, one person holds the DPC in the horizontal position with the faceplate facing the body, and the other person slides the opening of the bag over the DPC connector edge.

If you must insert the DPC into a bag by yourself, first lay the DPC horizontally on a flat, stable surface, sheet metal side down. Orient the DPC with the faceplate facing you. Carefully insert the DPC connector edge into the opening of the bag, and pull the bag toward you to cover the DPC.

Never stack a DPC under or on top of any other component.

### SEE ALSO

[MX240 DPC Terminology](#)

[Holding an MX240 DPC | 354](#)

[Troubleshooting the MX240 DPCs | 469](#)

## Replacing an MX240 DPC

### IN THIS SECTION

- [Removing an MX240 DPC | 359](#)
- [Installing an MX240 DPC | 361](#)

## Removing an MX240 DPC

A DPC weighs up to 13.1 lb (5.9 kg). Be prepared to accept its full weight.

To remove a DPC (see Figure 3):

1. Have ready a replacement DPC or DPC blank panel and an antistatic mat for the DPC. Also have ready rubber safety caps for each DPC you are removing that uses an optical interface.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Label the cables connected to each port on the DPC so that you can later reconnect the cables to the correct ports.
4. Use one of the following methods to take the DPC offline:
  - Press and hold the corresponding DPC online button on the craft interface. The green **OK** LED next to the button begins to blink. Hold the button down until the LED goes off.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).

5. Disconnect the cables from the DPC.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when you are inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. Immediately cover each optical transceiver and the end of each fiber-optic cable with a rubber safety cap.
7. Arrange the disconnected cables to prevent the cables from developing stress points.
8. Simultaneously turn both of the ejector handles counterclockwise to unseat the DPC.

9. Grasp the handles and slide the DPC straight out of the card cage halfway.
10. Place one hand around the front of the DPC and the other hand under it to support it. Slide the DPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



**CAUTION:** The weight of the DPC is concentrated in the back end. Be prepared to accept the full weight—up to 13.1 lb (5.9 kg)—as you slide the DPC out of the chassis.

When the DPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack DPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

11. If you are not reinstalling a DPC into the emptied DPC slot within a short time, install a blank DPC panel over the slot to maintain proper airflow in the DPC card cage.



**CAUTION:** After removing a DPC from the chassis, wait at least 30 seconds before reinserting it, removing a DPC from a different slot, or inserting a DPC into a different slot.

**Figure 115: Removing a DPC**

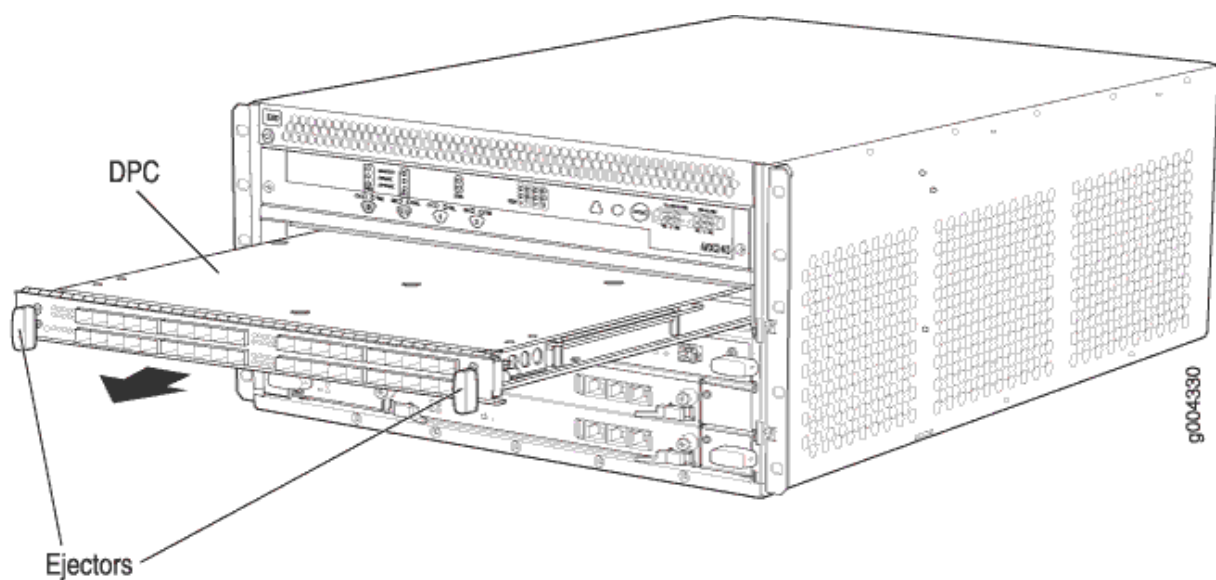



## SEE ALSO

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[MX240 Dense Port Concentrator \(DPC\) LEDs | 129](#)

[Troubleshooting the MX240 DPCs | 469](#)

## Installing an MX240 DPC

A DPC weighs up to 14.5 lb (6.6 kg). Be prepared to accept its full weight.

To install a DPC (see Figure 4):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Place the DPC on an antistatic mat, or remove it from its electrostatic bag.
3. Identify the slot on the router where it will be installed.
4. Verify that each fiber-optic transceiver is covered with a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the DPC so that the faceplate faces you.
6. Lift the DPC into place, and carefully align the sides of the DPC with the guides inside the card cage.
7. Slide the DPC all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the DPC is fully seated.
9. Remove the rubber safety cap from each fiber-optic transceiver and cable.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

10. Insert the cables into the cable connector ports on each DPC (see Figure 5).
11. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

12. Use one of the following methods to bring the DPC online:

- Press and hold the corresponding DPC online button on the craft interface until the green **OK** LED next to the button lights steadily, in about 5 seconds.
- Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```

For more information about the command, see the [CLI Explorer](#).



**CAUTION:** After the **OK** LED turns green, wait at least 30 seconds before removing the DPC again, removing a DPC from a different slot, or inserting a DPC in a different slot.

You can also verify that the DPC is functioning correctly by issuing the **show chassis fpc** and **show chassis fpc pic-status** commands.

**Figure 116: Installing a DPC**


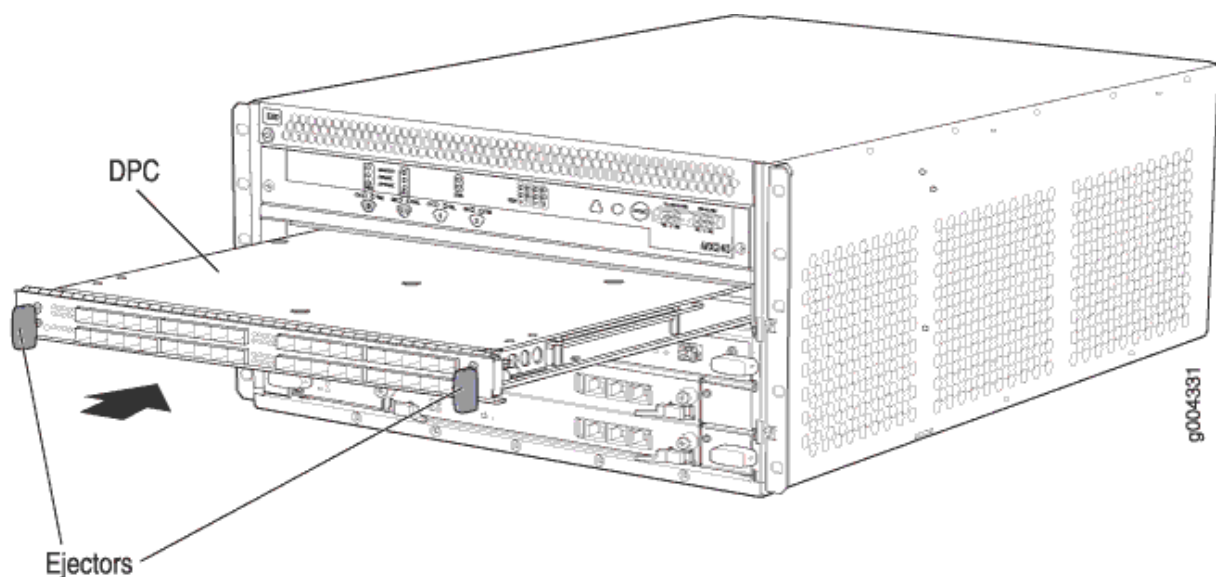


Figure 117: Attaching a Cable to a DPC

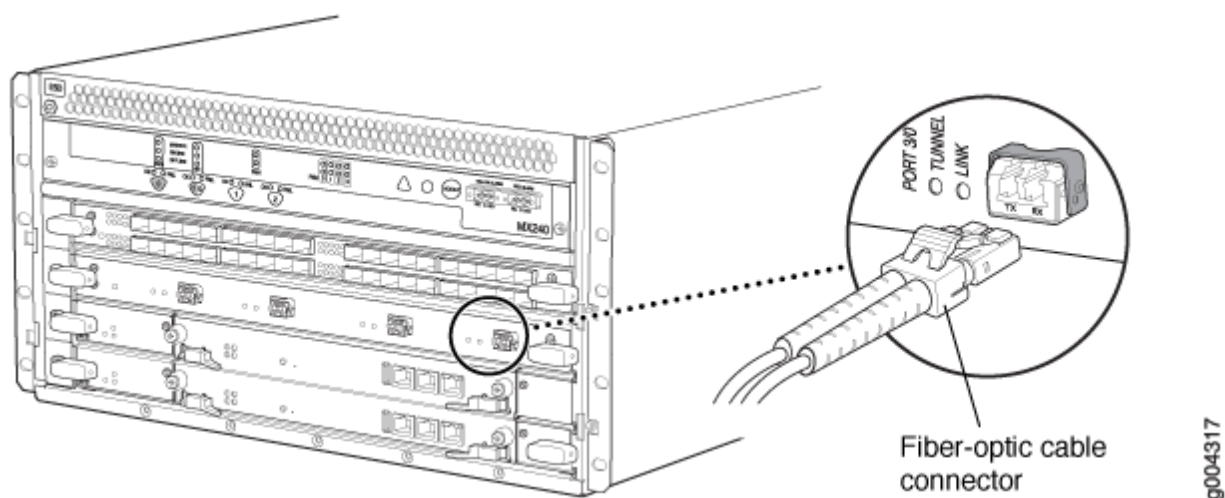

## RELATED DOCUMENTATION

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[MX240 Dense Port Concentrator \(DPC\) LEDs | 129](#)

[Troubleshooting the MX240 DPCs | 469](#)

## Maintaining MX240 FPCs

### IN THIS SECTION

- [Purpose | 363](#)
- [Action | 364](#)

### Purpose

The MX240 router can have one Flexible PIC Concentrator (FPC) installed horizontally in the front of the chassis. For optimum router performance, verify the condition of the FPC.

## Action

On a regular basis:

- Check the LEDs on the craft interface directly above the FPC. The green LED labeled **OK** lights steadily when an FPC is functioning normally.
- Check the **OK/FAIL** LED on the FPC. If the FPC detects a failure, the FPC sends an alarm message to the Routing Engine.
- Issue the CLI `show chassis fpc` command to check the status of the installed FPC. As shown in the sample output, the value State in the column labeled State indicates that the FPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Utilization (%)
			Total Interrupt	DRAM (MB) Heap Buffer
0	Online	33	8 0	1024 18 30
1	Online	37	3 0	1024 12 21
2	Empty			

For more detailed output, add the `detail` option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

Slot 0 information:

State	Online
Temperature	33 degrees C / 91 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2008-11-25 11:16:41 PST
Uptime:	25 minutes, 28 seconds

Slot 1 information:

State	Online
Temperature	37 degrees C / 98 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	128 MB
Total DDR DRAM	2048 MB
Start time:	2008-11-25 11:16:43 PST
Uptime:	25 minutes, 26 seconds

- Issue the CLI `show chassis fpc pic-status` command. The following example shows an FPC installed in DPC slots **1** and **2**:

```
user@host> show chassis fpc pic-status
Slot 0   Online      DPC 40x 1GE R
  PIC 0   Online      10x 1GE(LAN)
  PIC 1   Online      10x 1GE(LAN)
  PIC 2   Online      10x 1GE(LAN)
  PIC 3   Online      10x 1GE(LAN)
Slot 1   Online      MX FPC Type 3
  PIC 0   Online      1x OC-192 SONET
  PIC 1   Online      1x OC-192 SONET
```



**NOTE:** An FPC takes up two DPC slots when installed on an MX Series router. The slot number corresponds to the lowest numbered DPC slot.

For further description of the output from the command, see the [CLI Explorer](#).

## SEE ALSO

[MX240 Flexible PIC Concentrator \(FPC\) LEDs | 136](#)

[Holding an MX240 FPC | 365](#)

[Storing an MX240 FPC | 368](#)

[Troubleshooting the MX240 FPCs | 472](#)

## Holding an MX240 FPC



**CAUTION:** Many components on the FPC are fragile. Failure to handle FPCs as specified in this document can cause irreparable damage.




**NOTE:** An FPC configured with PICs installed can weigh as much as 18 lb (8.2 kg). Be prepared to accept the full weight of the FPC as you lift it.

To prevent damage when handling or carrying FPCs:


- As you carry the FPC, do not bump it against anything. FPC components are fragile.
- Do not grasp the FPC anywhere except places that this document indicates. In particular, never grasp the connector edge, especially at the power connector in the corner where the connector and bottom edges meet (see [Figure 118 on page 366](#)).

**Figure 118: Do Not Grasp the Connector Edge**

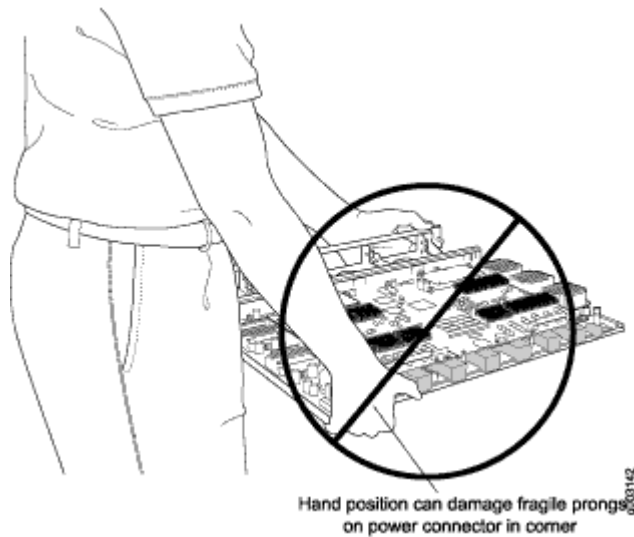

- Do not carry the FPC by the faceplate with only one hand (see [Figure 119 on page 367](#)).

**Figure 119: Do Not Carry an FPC with Only One Hand**

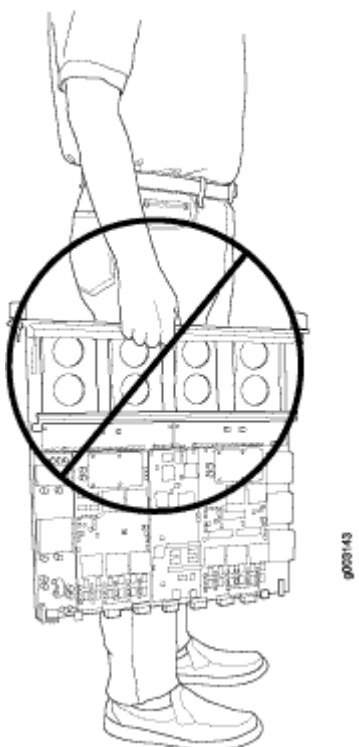

- Do not rest any edge of an FPC directly against a hard surface (see [Figure 120 on page 367](#)). If you must rest the FPC temporarily on an edge while changing its orientation between vertical and horizontal, use your hand as a cushion between the edge and the surface.

**Figure 120: Do Not Rest the FPC on an Edge**




You hold an FPC horizontally when installing it into the chassis or an equipment rack. To hold an FPC vertically (see [Figure 121 on page 368](#)):

1. Orient the FPC so that the faceplate faces you.

2. Place one hand around the FPC faceplate about a quarter of the way down from the top edge. To avoid deforming the electromagnetic interference (EMI) shielding strip, do not press hard on it.
3. Place your other hand at the bottom edge of the FPC. If the FPC has heat sinks about midway between the faceplate and connector edge, place your other hand against the heat sinks.

**Figure 121: Holding an FPC Vertically**

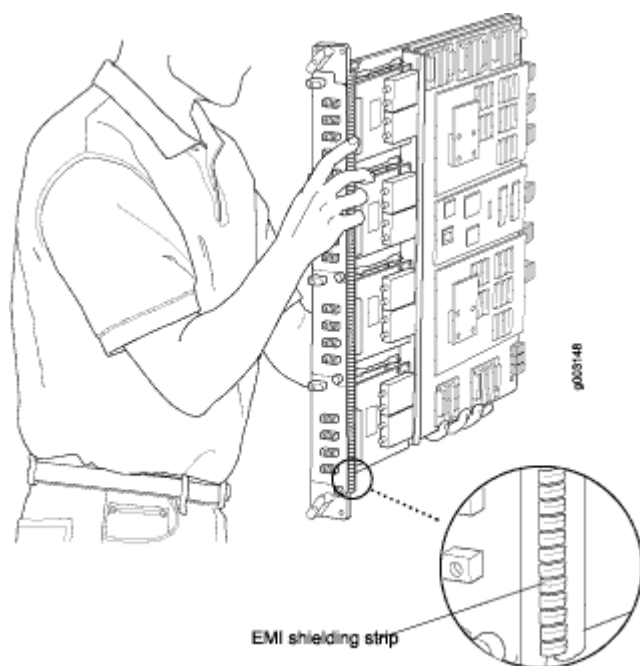

#### SEE ALSO

[MX240 FPC Terminology](#)

[Storing an MX240 FPC | 368](#)

## Storing an MX240 FPC

When not installed in the routers, FPCs must be either stored in the container in which a spare FPC is shipped or stored horizontally with the component-side up on a flat, stable surface. When you store an FPC on a horizontal surface or in the shipping container, always place it inside an antistatic bag. Because the FPC is heavy and because antistatic bags are fragile, inserting the FPC into the bag is easier with two people. The storage guidelines are as follows:



- When two people are storing an FPC, one person holds the FPC in the horizontal position with the faceplate facing their body, the other person slides the opening of the bag over the FPC connector edge.
- When one person is storing an FPC, you must insert the FPC into a bag by yourself. First lay the FPC horizontally on a flat, stable surface, component-side up. Orient the FPC with the faceplate facing you. Carefully insert the FPC connector edge into the opening of the bag, and pull the bag toward you to cover the FPC.



**CAUTION:** To prevent damage when storing FPCs:

- Never lay an FPC component-side down.
- Never stack an FPC under or on top of any other component (see [Figure 122 on page 369](#)).

Figure 122: Do Not Stack FPCs



#### SEE ALSO

[MX240 FPC Terminology](#)

[Holding an MX240 FPC | 365](#)

## Replacing an MX240 FPC

#### IN THIS SECTION

● [Removing an MX240 FPC | 370](#)

## Removing an MX240 FPC

When you remove an FPC, the router continues to function, although the PIC interfaces installed on the FPC being removed no longer function.

An FPC takes up two DPC slots on the MX240 router. One FPC can be installed horizontally in the front of the router. The FPCs are hot-insertable and hot-removable. A fully configured FPC can weigh up to 18 lb (8.2 kg). Be prepared to accept its full weight.

To remove an FPC (see Figure 11):

1. Have ready a replacement FPC or FPC blank panel and an antistatic mat for the FPC. Also have ready rubber safety caps for each PIC using an optical interface on the FPC that you are removing.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Label the cables connected to each PIC on the FPC so that you can later reconnect the cables to the correct PICs.
4. Use one of the following methods to take the FPC offline:
  - Press and hold the FPC online/offline button. The green **OK** LED next to the button begins to blink. Hold the button down until the LED goes off. The LEDs and online/offline button for each FPC are located directly above it on the craft interface.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot  
                slot-number  
                offline
```

For more information about the command, see the [CLI Explorer](#).



**NOTE:** The slot number corresponds to the lowest numbered slot for which the FPC is installed.

5. Disconnect the cables from the PICs installed in the FPC.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when inserting or removing a cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. If a PIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.
7. Simultaneously turn both the ejector handles counterclockwise to unseat the FPC.
8. Grasp the handles and slide the FPC straight out of the card cage halfway.
9. Place one hand around the front of the FPC (the PIC housing) and the other hand under it to support it. Slide the FPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



**CAUTION:** The weight of the FPC is concentrated in the back end. Be prepared to accept the full weight—up to 18 lb (8.2 kg)—as you slide the FPC out of the chassis. When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack FPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

10. If necessary, remove each installed PIC from the FPC.
11. After you remove each PIC, immediately place it on an antistatic mat or in an electrostatic bag.
12. If you are not reinstalling an FPC into the emptied DPC slots within a short time, install a blank DPC panel over each slot to maintain proper airflow in the card cage.



**CAUTION:** After removing an FPC from the chassis, wait at least 30 seconds before reinserting it or inserting an FPC into a different slot.

**Figure 123: Removing an FPC**

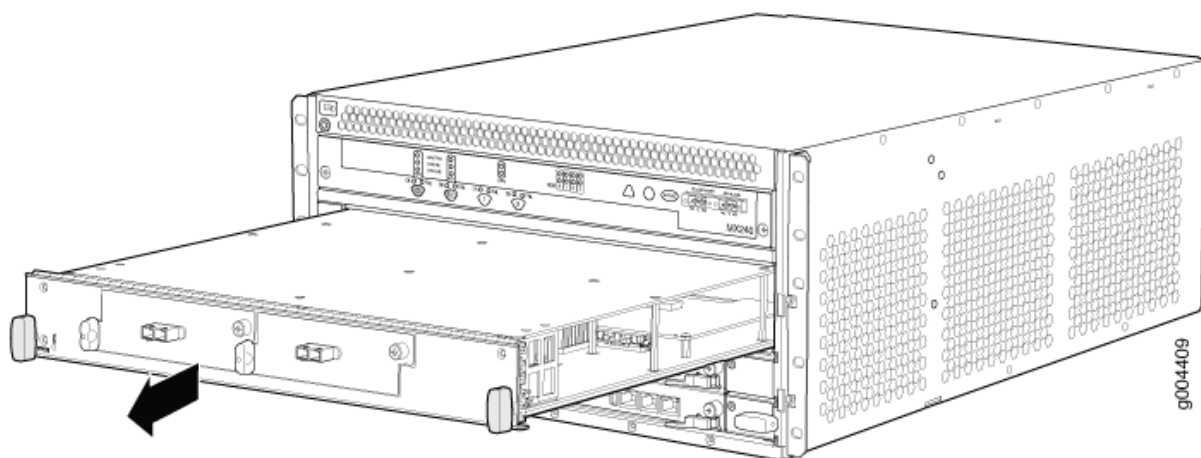

## SEE ALSO

[MX240 Flexible PIC Concentrator \(FPC\) Description | 133](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[MX240 FPC Serial Number Label | 490](#)

## Installing an MX240 FPC

An FPC takes up two DPC slots on the MX240 router. One FPC can be installed horizontally in the front of the router. The FPCs are hot-insertable and hot-removable. A fully configured FPC can weigh up to 18 lb (8.2 kg). Be prepared to accept its full weight.

To install an FPC (see Figure 12):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Place the FPC on an antistatic mat.
3. Take each PIC to be installed in the replacement FPC out of its electrostatic bag and identify the slot on the FPC where it will be connected.
4. Verify that each fiber-optic PIC has a rubber safety cap covering the PIC transceiver. If it does not, cover the transceiver with a safety cap.
5. Install each PIC into the appropriate slot on the FPC.
6. Locate the slots in the card cage in which you plan to install the FPC.
7. Orient the FPC so that the faceplate faces you.
8. Lift the FPC into place and carefully align the sides of the FPC with the guides inside the card cage.



**CAUTION:** When the FPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

9. Slide the FPC all the way into the card cage until you feel resistance.
10. Grasp both ejector handles and rotate them clockwise simultaneously until the FPC is fully seated.
11. If any of the PICs on the FPC connect to fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

12. Insert the appropriate cable into the cable connector ports on each PIC on the FPC. Secure the cables so that they are not supporting their own weight. Placing fasteners on a loop helps to maintain its shape.



**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

13. Use one of the following methods to bring the FPC online:
  - Press and hold the FPC online/offline button until the green **OK** LED next to the button lights steadily, in about 5 seconds. The LEDs and online/offline button for each FPC are located directly above it on the craft interface.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```


For more information about the command, see the [CLI Explorer](#).



**CAUTION:** After the **OK** LED lights steadily, wait at least 30 seconds before removing the FPC again, removing an FPC from a different slot, or inserting an FPC in a different slot.

You can also verify correct FPC and PIC functioning by issuing the `show chassis fpc` and `show chassis fpc pic-status` commands described in ["Maintaining MX240 FPCs" on page 363](#) and ["Maintaining MX240 PICs" on page 393](#).

**Figure 124: Installing an FPC**

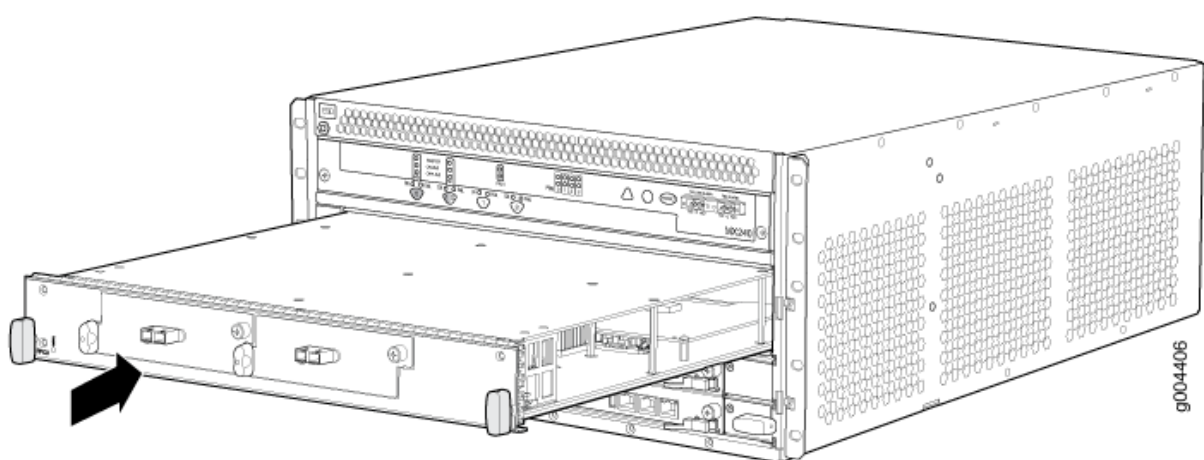

## SEE ALSO

[MX240 Flexible PIC Concentrator \(FPC\) Description | 133](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[MX240 DPC Serial Number Label | 490](#)

## RELATED DOCUMENTATION

[MX240 Flexible PIC Concentrator \(FPC\) Description | 133](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[MX240 DPC Serial Number Label | 490](#)

## Replacing an MX240 MIC

### IN THIS SECTION

- [Removing an MX240 MIC | 375](#)
- [Installing an MX240 MIC | 377](#)

### Removing an MX240 MIC

MICs are hot-insertable and hot-removable. When you remove a MIC, the router continues to function, although the MIC interfaces being removed no longer function.

The MICs are located in the MPCs installed in the front of the router. A MIC weighs less than 2 lb (0.9 kg).

To remove a MIC (see Figure 13 and Figure 14):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the MIC. If the MIC connects to fiber-optic cable, have ready a rubber safety cap for each transceiver and cable.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Use one of the following methods to take the MIC offline:
  - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the MIC **OK/FAIL** LED goes off (about 5 seconds).
  - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

4. Label the cables connected to the MIC so that you can later reconnect each cable to the correct MIC.
5. Disconnect the cables from the MIC. If the MIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when you are inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

6. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


7. On the MPC, pull the ejector lever that is adjacent to the MIC you are removing away from the MPC faceplate. Pulling the ejector lever disconnects the MIC from the MPC.



**NOTE:** To remove a dual-wide MIC that takes up both MIC slots, you must pull both ejector levers away from the MPC faceplate.


8. Grasp the handles on the MIC faceplate, and slide the MIC out of the MPC card carrier. Place it in the electrostatic bag or on the antistatic mat.
9. If you are not reinstalling a MIC into the emptied MIC slot within a short time, install a blank MIC panel over the slot to maintain proper airflow in the MPC card cage.

**Figure 125: Removing a MIC**

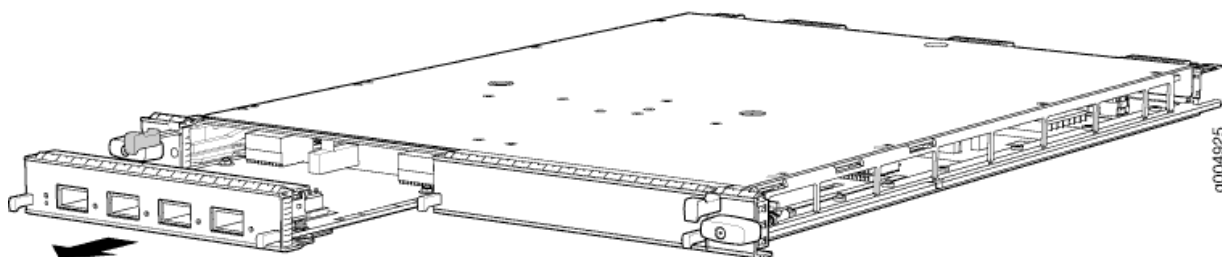



**Figure 126: Removing a Dual-Wide MIC**

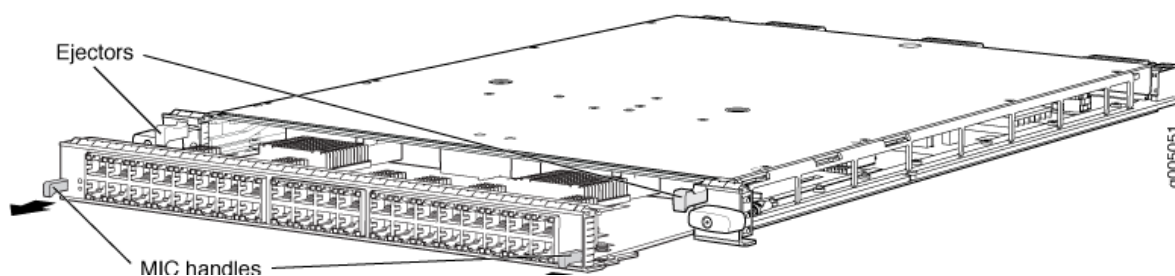

## SEE ALSO

[MX240 Modular Interface Card \(MIC\) Description | 155](#)

[Troubleshooting the MX240 MICs | 475](#)


[MX240 MIC Serial Number Label | 492](#)

## Installing an MX240 MIC

To install a MIC (see Figure 16):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. If you have used a dual-wide MIC and are now replacing it with two "single" MICs, install the septum (see Figure 15):
  - a. Place the MPC on a flat surface (if necessary, remove the MPC from the router as described in ["Replacing an MX240 MPC" on page 388](#)).
  - b. Position the septum in the center of the MPC so that it lines up with holes labeled **S** on the top of the MPC.
  - c. Insert a screw into each of the two holes labeled **S**, and then tighten completely.
  - d. On the bottom of the MPC, insert a screw into each of the four holes labeled **S**, and then tighten completely.
  - e. Install the MPC as described in ["Replacing an MX240 MPC" on page 388](#).

Figure 127: Installing the Septum

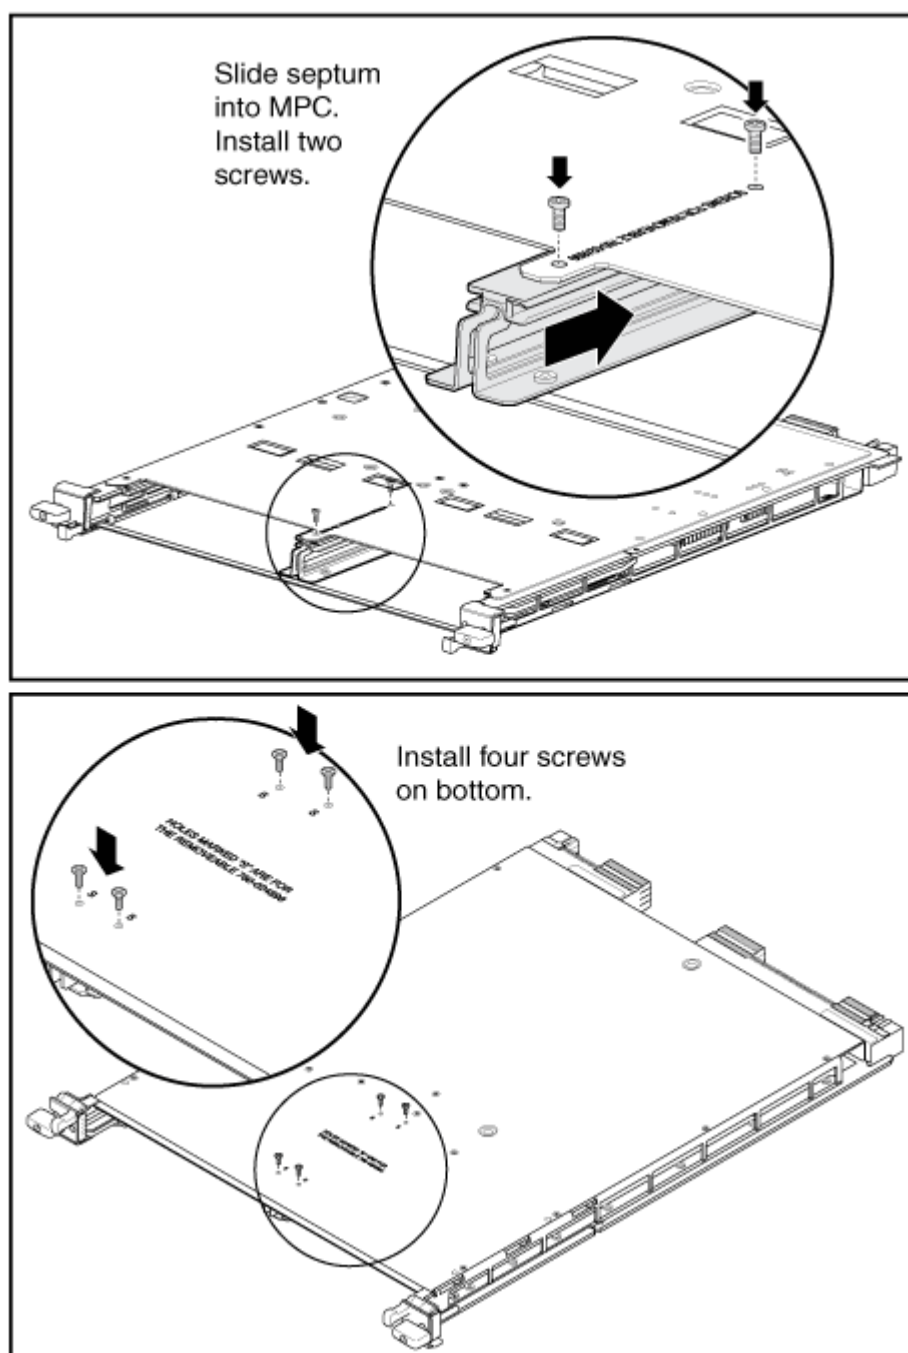

3. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
4. On the MPC, pull the ejector lever that is adjacent to the MIC you are installing away from the MPC faceplate.
5. Align the rear of the MIC with the guides located at the corners of the MIC slot.
6. Slide the MIC into the MPC until it is firmly seated in the MPC.



**CAUTION:** Slide the MIC straight into the slot to avoid damaging the components on the MIC.

7. Verify that the ejector lever is engaged by pushing it toward the MPC faceplate.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when you are inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.
10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


11. Use one of the following methods to bring the MIC online:
  - Press the MIC offline/online button until the MIC **OK/FAIL** LED lights green.
  - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the `show chassis fpc pic-status` command described in "[Maintaining MX240 MICs](#)" on page 380.

**Figure 128: Installing a MIC**

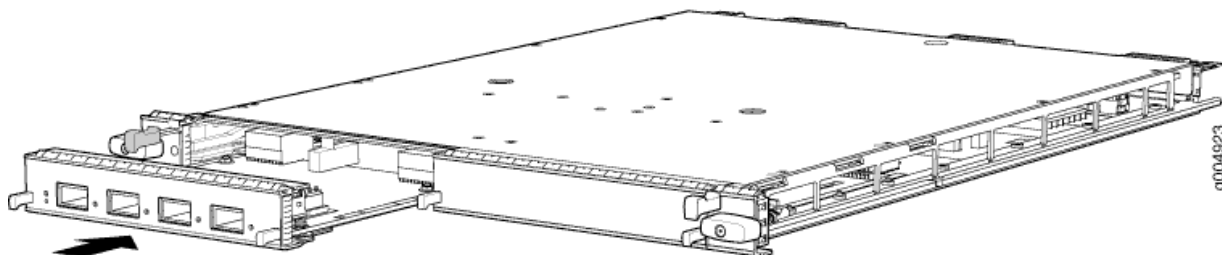

## SEE ALSO

[MX240 Modular Interface Card \(MIC\) Description | 155](#)

[Troubleshooting the MX240 MICs | 475](#)

[MX240 MIC Serial Number Label | 492](#)

## RELATED DOCUMENTATION

[MX240 Modular Interface Card \(MIC\) Description | 155](#)

[Troubleshooting the MX240 MICs | 475](#)

[MX240 MIC Serial Number Label | 492](#)

## Maintaining MX240 MICs

### IN THIS SECTION

● [Purpose | 381](#)

● [Action | 381](#)

Purpose

For optimum router performance, verify the condition of the MICs.

Action

On a regular basis:

- Check the LEDs on MIC faceplates. The meaning of the LED states differs for various MICs. For more information, see the [MX Series Interface Module Reference](#). If the MPC that houses the MIC detects a MIC failure, the MPC generates an alarm message to be sent to the Routing Engine.
- Issue the CLI `show chassis fpc pic-status` command. The MIC slots in an MPC are numbered **PIC 0/1** and **PIC 2/3**, left to right:

```
user@host> show chassis fpc pic-status
Slot 0   Online      MPC Type 2 3D EQ
  PIC 0   Online      1x 10GE XFP
  PIC 1   Online      1x 10GE XFP
Slot 1   Online      MPC 3D 16x 10GE
  PIC 0   Online      4x 10GE(LAN) SFP+
  PIC 1   Online      4x 10GE(LAN) SFP+
  PIC 2   Online      4x 10GE(LAN) SFP+
  PIC 3   Online      4x 10GE(LAN) SFP+
Slot 2   Online      MS-DPC
  PIC 0   Online      MS-DPC PIC
  PIC 1   Online      MS-DPC PIC
```

For further description of the output from the command, see the [CLI Explorer](#).

SEE ALSO


<a href="#">MX240 Modular Interface Card (MIC) Description   155</a>
<a href="#">MX240 Modular Interface Card (MIC) LEDs   169</a>
<a href="#">Troubleshooting the MX240 MICs   475</a>

Installing an MX240 Dual-Wide MIC

To install a dual-wide MIC (see [Figure 130 on page 385](#)):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Remove the septum, if necessary (see [Figure 129 on page 383](#)):
  - a. Place the MPC on a flat surface (if necessary, remove the MPC from the router as described in ["Replacing an MX240 MPC" on page 388](#)).
  - b. Remove the four screws labeled **S** on the bottom of the MPC.
  - c. Remove the two screws labeled **S** on the top of the MPC.
  - d. Slide the septum towards you and out of the MPC.
  - e. Store the septum and screws for later use.
  - f. Install the MPC as described in ["Replacing an MX240 MPC" on page 388](#).

Figure 129: Removing the Septum

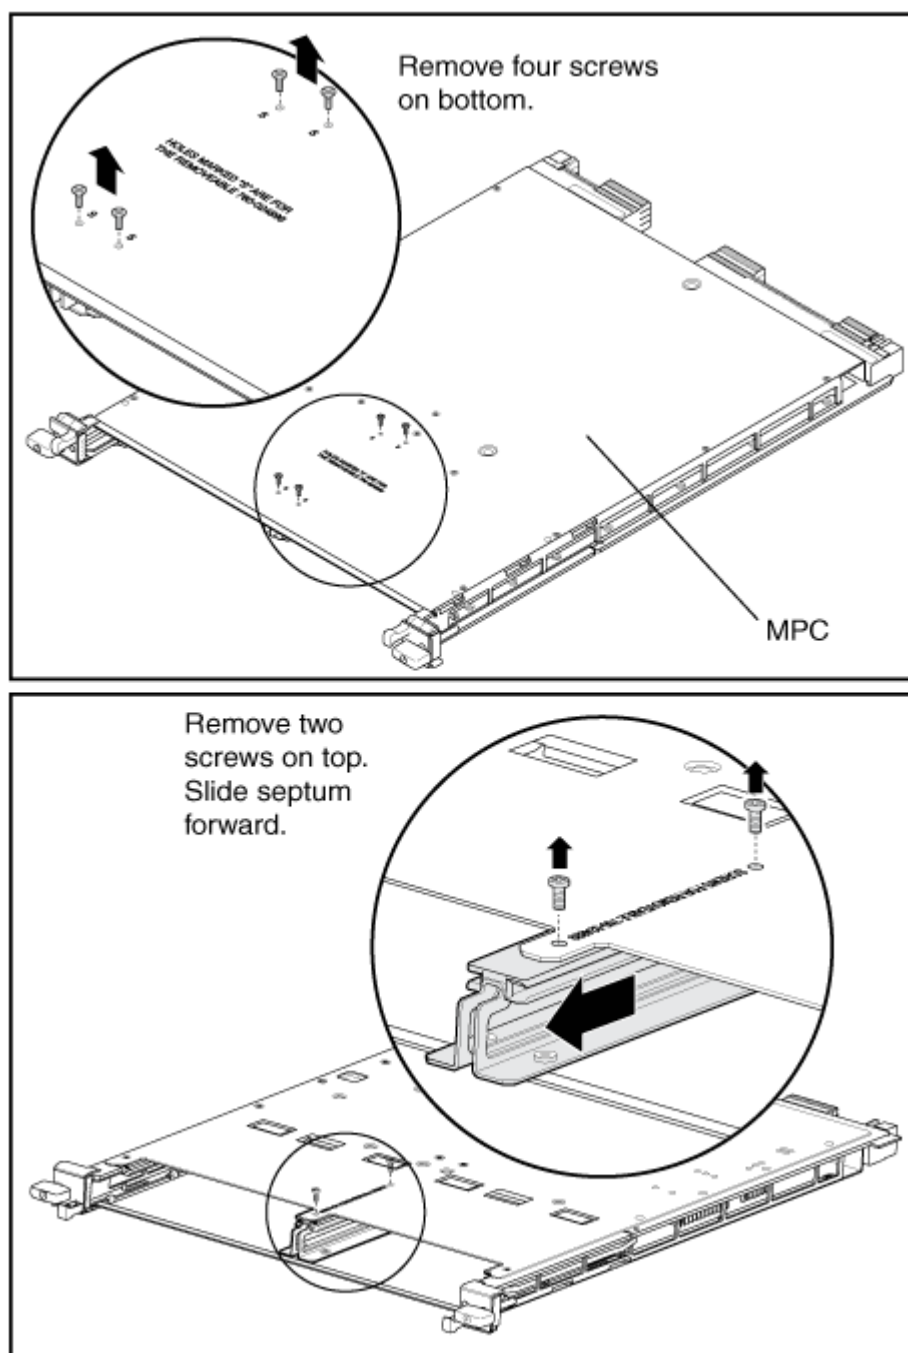

3. If the MIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.
4. Pull the ejector lever above both MIC slots away from the router.
5. Align the rear of the MIC with the guides located at the corners of the MIC slot.
6. Slide the MIC into the MIC slot until it is firmly seated in the chassis.



**CAUTION:** Slide the MIC straight into the slot to avoid damaging the components on the MIC.

7. Verify that the ejector levers are engaged by pushing them toward the router.
8. If the MIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when you are inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

9. Insert the appropriate cables into the cable connectors on the MIC.
10. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.


11. Use one of the following methods to bring the MIC online:
  - Press the MIC offline/online button until the MIC **OK/FAIL** LED lights green.
  - Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot mic-slot mic-slot online
```



The normal functioning status LED confirms that the MIC is online. You can also verify correct MIC functioning by issuing the `show chassis fpc pic-status` command described in "[Maintaining MX240 MICs](#)" on page 380.

**Figure 130: Installing a Dual-Wide MIC**

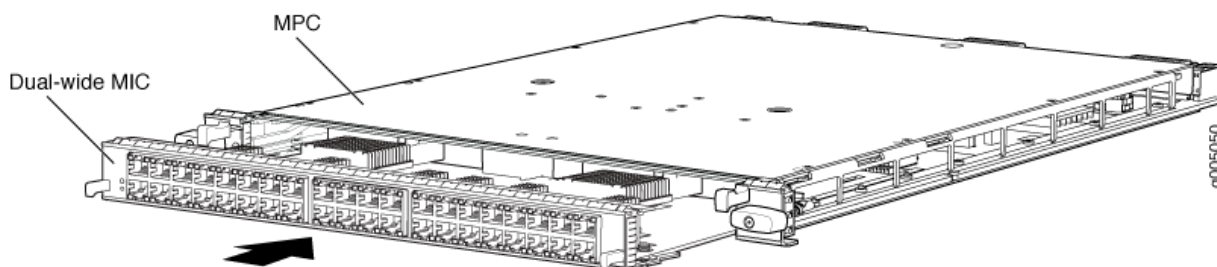

#### SEE ALSO

[MX240 Modular Interface Card \(MIC\) Description](#) | 155

[Troubleshooting the MX240 MICs](#) | 475

[MX240 MIC Serial Number Label](#) | 492

## Maintaining MX240 MPCs

#### IN THIS SECTION

● [Purpose](#) | 385

● [Action](#) | 386

### Purpose

For optimum router performance, verify the condition of the Modular Port Concentrators (MPCs). The router can have up to three MPCs mounted horizontally in the card cage at the front of the chassis.

## Action

On a regular basis:

- Check the LEDs on the craft interface directly above each MPC slot. The green LED labeled **OK** lights steadily when an MPC is functioning normally.
- Check the **OK/FAIL** LED on the MPC. If the MPC detects a failure, the MPC sends an alarm message to the Routing Engine.
- Issue the CLI `show chassis fpc` command to check the status of installed MPCs. As shown in the sample output, the value `State` in the column labeled `State` indicates that the MPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory Utilization (%)	DRAM (MB)	Heap	Buffer
0	Online	36	3	0	2048	14	13
1	Online	40	5	0	2048	26	13
2	Online	41	6	0	1024	7	43

For more detailed output, add the `detail` option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

Slot 0 information:

State	Online
Temperature	36 degrees C / 96 degrees F
Total CPU DRAM	2048 MB
Total RLDRAM	806 MB
Total DDR DRAM	2632 MB
Start time:	2009-12-22 12:27:04 PST
Uptime:	6 days, 3 hours, 8 minutes, 41 seconds
Max Power Consumption	450 Watts

Slot 1 information:

State	Online
Temperature	40 degrees C / 104 degrees F
Total CPU DRAM	2048 MB
Total RLDRAM	1324 MB
Total DDR DRAM	5120 MB
Start time:	2009-12-22 12:27:02 PST
Uptime:	6 days, 3 hours, 8 minutes, 43 seconds
Max Power Consumption	440 Watts

## Slot 2 information:

State	Online
Temperature	41 degrees C / 105 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	128 MB
Total DDR DRAM	2048 MB
Start time:	2009-12-22 12:26:48 PST
Uptime:	6 days, 3 hours, 8 minutes, 57 seconds
Max Power Consumption	265 Watts

- Issue the CLI `show chassis fpc pic-status` command. The MPC slots are numbered **1/0**, **1**, and **2**, bottom to top:

```
user@host> show chassis fpc pic-status
Slot 0   Online      MPC Type 2 3D EQ
  PIC 0   Online      1x 10GE XFP
  PIC 1   Online      1x 10GE XFP
Slot 1   Online      MPC 3D 16x 10GE
  PIC 0   Online      4x 10GE(LAN) SFP+
  PIC 1   Online      4x 10GE(LAN) SFP+
  PIC 2   Online      4x 10GE(LAN) SFP+
  PIC 3   Online      4x 10GE(LAN) SFP+
Slot 2   Online      MS-DPC
  PIC 0   Online      MS-DPC PIC
  PIC 1   Online      MS-DPC PIC
```

For further description of the output from the command, see the [CLI Explorer](#).

## SEE ALSO

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

[MX240 Modular Port Concentrator \(MPC\) LEDs | 176](#)

[Troubleshooting the MX240 MPCs | 476](#)

## Replacing an MX240 MPC

### IN THIS SECTION

- [Removing an MX240 MPC | 388](#)
- [Installing an MX240 MPC | 390](#)

### Removing an MX240 MPC

When you remove an MPC, the router continues to function, although the MIC interfaces installed on the MPC being removed no longer function.

An MPC installs horizontally in the front of the router. The MPCs are hot-insertable and hot-removable. A fully configured MPC can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.

To remove an MPC (see Figure 19):

1. Have ready a replacement MPC or DPC blank panel and an antistatic mat for the MPC. Also have ready rubber safety caps for each MIC using an optical interface on the MPC that you are removing.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Label the cables connected to each MIC on the MPC so that you can later reconnect the cables to the correct MICs.
4. Use one of the following methods to take the MPC offline:
  - Press and hold the corresponding online button on the craft interface. The green **OK/FAIL** LED next to the button begins to blink. Hold the button down until the LED goes off.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot  
                slot-number  
                offline
```

For more information about the command, see the [CLI Explorer](#).

5. Disconnect the cables from the MICs installed in the MPC.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when inserting or removing a cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. If a MIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.
7. Simultaneously turn both the ejector handles counterclockwise to unseat the MPC.
8. Grasp the handles and slide the MPC straight out of the card cage halfway.
9. Place one hand around the front of the MPC (the MIC housing) and the other hand under it to support it. Slide the MPC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



**CAUTION:** The weight of the MPC is concentrated in the back end. Be prepared to accept the full weight—up to 18.35 lb (8.3 kg)—as you slide the MPC out of the chassis.

When the MPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack MPCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

10. If necessary, remove each installed MIC from the MPC.
11. After you remove each MIC, immediately place it on an antistatic mat or in an electrostatic bag.
12. If you are not reinstalling an MPC into the emptied line card slots within a short time, install a blank DPC panel over each slot to maintain proper airflow in the card cage.



**CAUTION:** After removing an MPC from the chassis, wait at least 30 seconds before reinserting it or inserting an MPC into a different slot.

**Figure 131: Removing an MPC**

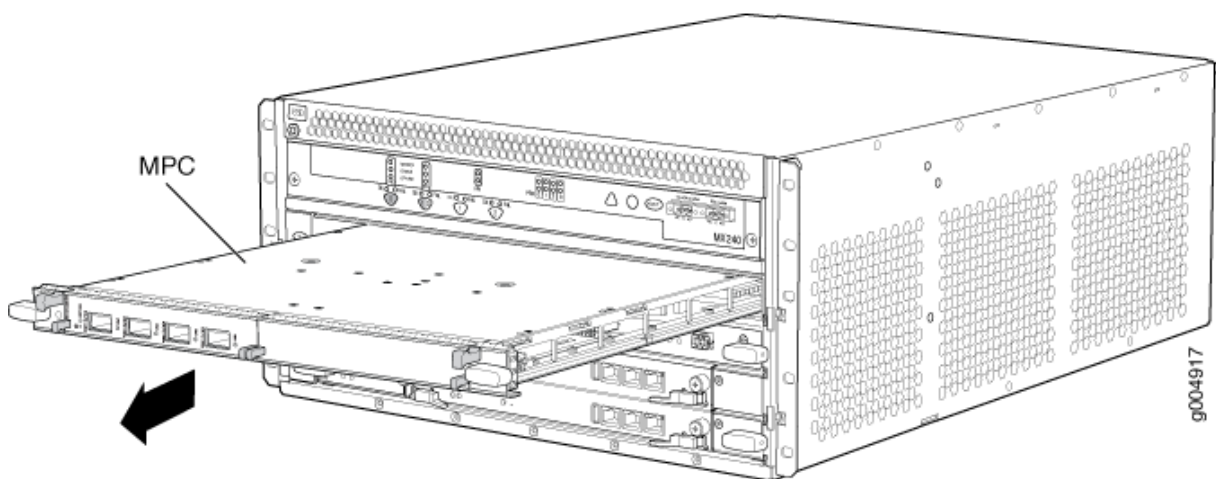

#### SEE ALSO

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

[MX240 MPC Serial Number Label | 495](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

#### Installing an MX240 MPC

An MPC installs horizontally in the front of the router. The MPCs are hot-insertable and hot-removable. A fully configured MPC can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.

To install an MPC (see Figure 20):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Place the MPC on an antistatic mat.
3. Take each MIC to be installed in the replacement MPC out of its electrostatic bag and identify the slot on the MPC where it will be connected.
4. Verify that each fiber-optic MIC has a rubber safety cap covering the MIC transceiver. If it does not, cover the transceiver with a safety cap.
5. Install each MIC into the appropriate slot on the MPC.
6. Locate the slot in the card cage in which you plan to install the MPC.
7. Orient the MPC so that the faceplate faces you.
8. Lift the MPC into place and carefully align the sides of the MPC with the guides inside the card cage.



**CAUTION:** When the MPC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

9. Slide the MPC all the way into the card cage until you feel resistance.
10. Grasp both ejector handles and rotate them clockwise simultaneously until the MPC is fully seated.
11. If any of the MICs on the MPC connect to fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

12. Insert the appropriate cable into the cable connector ports on each MIC on the MPC. Secure the cables so that they are not supporting their own weight. Placing fasteners on a loop helps to maintain its shape.



**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

13. Use one of the following methods to bring the MPC online:
  - Press and hold the corresponding MPC online button on the craft interface until the green **OK/FAIL** LED next to the button lights steadily, in about 5 seconds.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot
                slot-number
                online
```


For more information about the command, see the [CLI Explorer](#).



**CAUTION:** After the **OK/FAIL** LED lights steadily, wait at least 30 seconds before removing the MPC again, removing an MPC from a different slot, or inserting an MPC in a different slot.

You can also verify correct MPC and MIC functioning by issuing the **show chassis fpc** and **show chassis fpc pic-status** commands described in ["Maintaining MX240 MPCs" on page 385](#) and ["Maintaining MX240 MICs" on page 380](#).

**Figure 132: Installing an MPC**

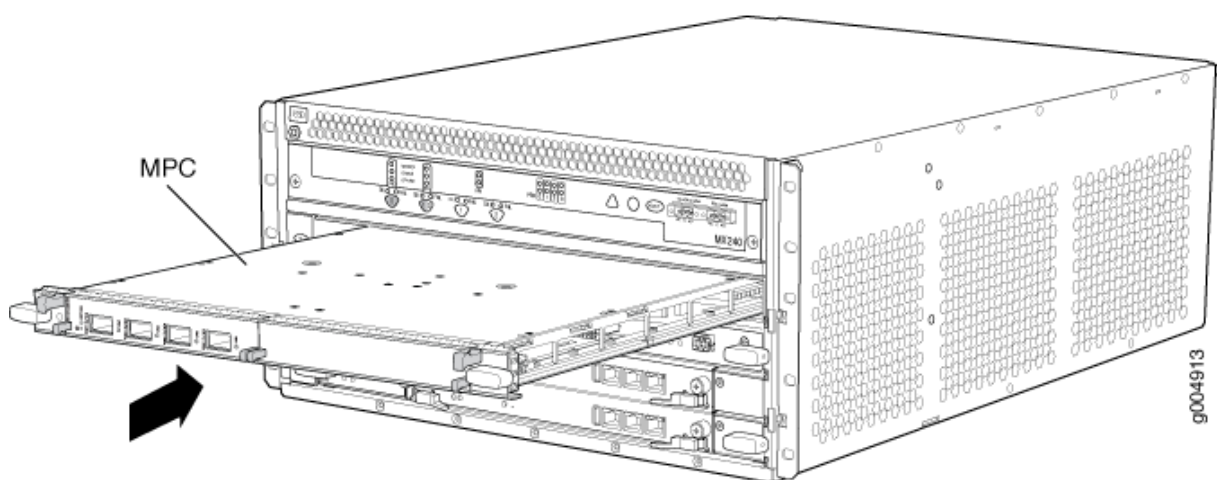

#### SEE ALSO

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

[MX240 MPC Serial Number Label | 495](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

#### RELATED DOCUMENTATION

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

[MX240 MPC Serial Number Label | 495](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)



# Maintaining MX240 PICs

IN THIS SECTION

- Purpose | 393
- Action | 393

## Purpose

For optimum router performance, verify the condition of the PICs and PIC cables.

## Action

On a regular basis:

- Check the LEDs on PIC faceplates. The meaning of the LED states differs for various PICs. For more information, see the [MX Series Interface Module Reference](#). If the FPC that houses the PIC detects a PIC failure, the FPC generates an alarm message to be sent to the Routing Engine.
- Issue the CLI `show chassis fpc pic-status` command. The PIC slots in an FPC are numbered from **0** through **1**, left to right:

```
user@host> show chassis fpc pic-status
Slot 0   Online      DPC 40x 1GE R
  PIC 0   Online      10x 1GE(LAN)
  PIC 1   Online      10x 1GE(LAN)
  PIC 2   Online      10x 1GE(LAN)
  PIC 3   Online      10x 1GE(LAN)
Slot 1   Online      MX FPC Type 3
  PIC 0   Online      1x OC-192 SONET
  PIC 1   Online      1x OC-192 SONET
```

For further description of the output from the command, see the [CLI Explorer](#).

## SEE ALSO

[MX240 PIC Description | 137](#)

## Replacing an MX240 PIC

### IN THIS SECTION

- [Removing an MX240 PIC | 394](#)
- [Installing an MX240 PIC | 396](#)

### Removing an MX240 PIC

PICs are hot-insertable and hot-removable. When you remove a PIC, the router continues to function, although the PIC interfaces being removed no longer function.

The PICs are located in the FPCs installed in the front of the router. A PIC weighs less than 2 lb (0.9 kg).

To remove a PIC (see Figure 21):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the PIC. If the PIC connects to fiber-optic cable, have ready a rubber safety cap for each transceiver and cable.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Use one of the following methods to take the PIC offline:
  - Press its online/offline button. For a PIC installed in FPC3, use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the PIC LED goes off (about 5 seconds).
  - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

4. Label the cables connected to the PIC so that you can later reconnect each cable to the correct PIC.
5. Disconnect the cables from the PIC. If the PIC uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when you are inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.


6. Arrange the cable to prevent it from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

7. For an FPC3 PIC, loosen the captive screw at the bottom of the PIC faceplate, then twist the ejector handle at the top of the faceplate counterclockwise to unseat the PIC.
8. Slide the PIC out of the FPC card carrier and place it in the electrostatic bag or on the antistatic mat.
9. If you are not reinstalling a PIC into the emptied PIC slot within a short time, install a blank PIC panel over the slot to maintain proper airflow in the FPC card cage.

Figure 133: Removing a PIC

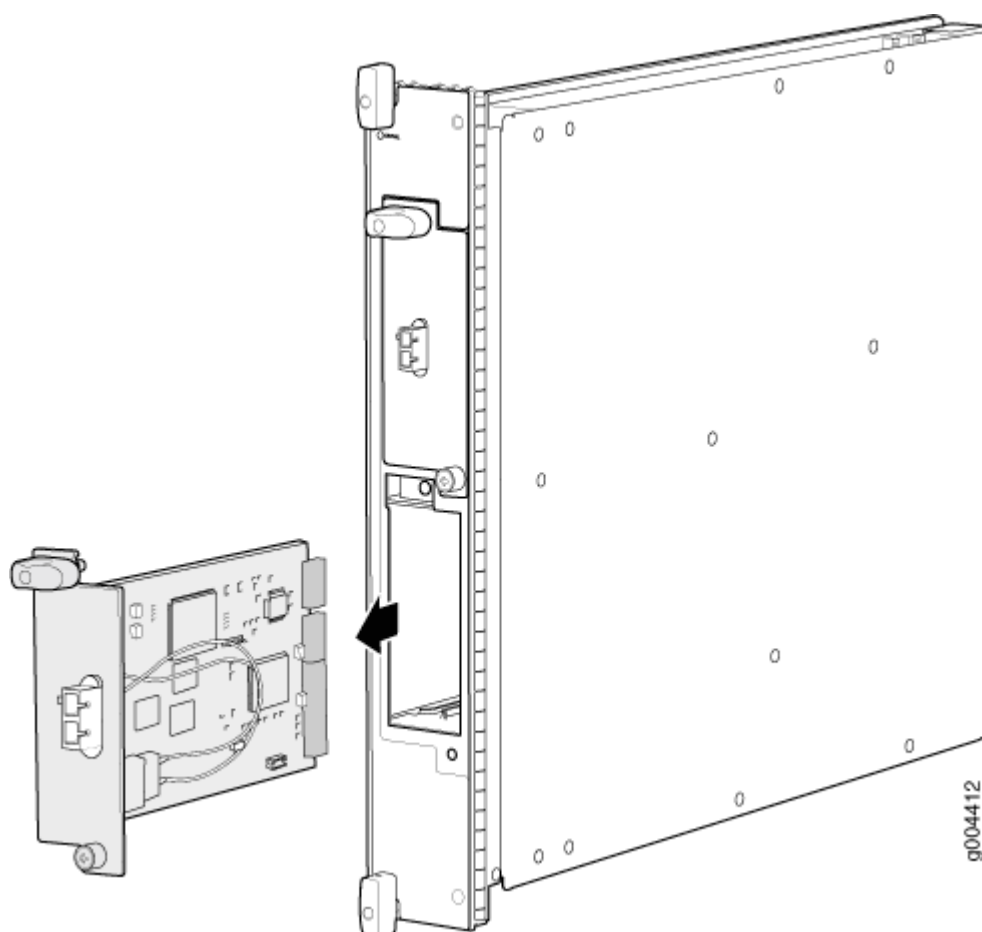

## SEE ALSO

[MX240 PIC Description | 137](#)

[Troubleshooting the MX240 PICs | 478](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[MX240 PIC Serial Number Label | 497](#)

## Installing an MX240 PIC

To install a PIC (see Figure 22):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. If the PIC uses fiber-optic cable, verify that a rubber safety cap is over each transceiver on the faceplate. Install a cap if necessary.

3. Align the notches in the connector at the rear of the PIC with the notches in the PIC slot in the FPC and then slide the PIC in until it lodges firmly in the FPC.



**CAUTION:** Slide the PIC straight into the slot to avoid damaging the components on the bottom of the PIC.

4. For an FPC3 PIC, turn the ejector handle at the top of the PIC faceplate clockwise, then tighten the captive screw at the bottom of the faceplate to secure the PIC in the FPC.
5. If the PIC uses fiber-optic cable, remove the rubber safety cap from each transceiver and the end of each cable.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when you are inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

6. Insert the appropriate cables into the cable connectors on the PIC.
7. Arrange each cable to prevent the cable from dislodging or developing stress points. Secure the cable so that it is not supporting its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop.



**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

8. Use one of the following methods to bring the PIC online:
  - Press the PIC offline/online button until the PIC LED lights green. For a PIC installed in FPC3, use a narrow-ended tool that fits inside the opening that leads to the button.


- Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the PIC is online. You can also verify correct PIC functioning by issuing the `show chassis fpc pic-status` command described in "[Maintaining MX240 PICs](#)" on page 393.

**Figure 134: Installing a PIC**

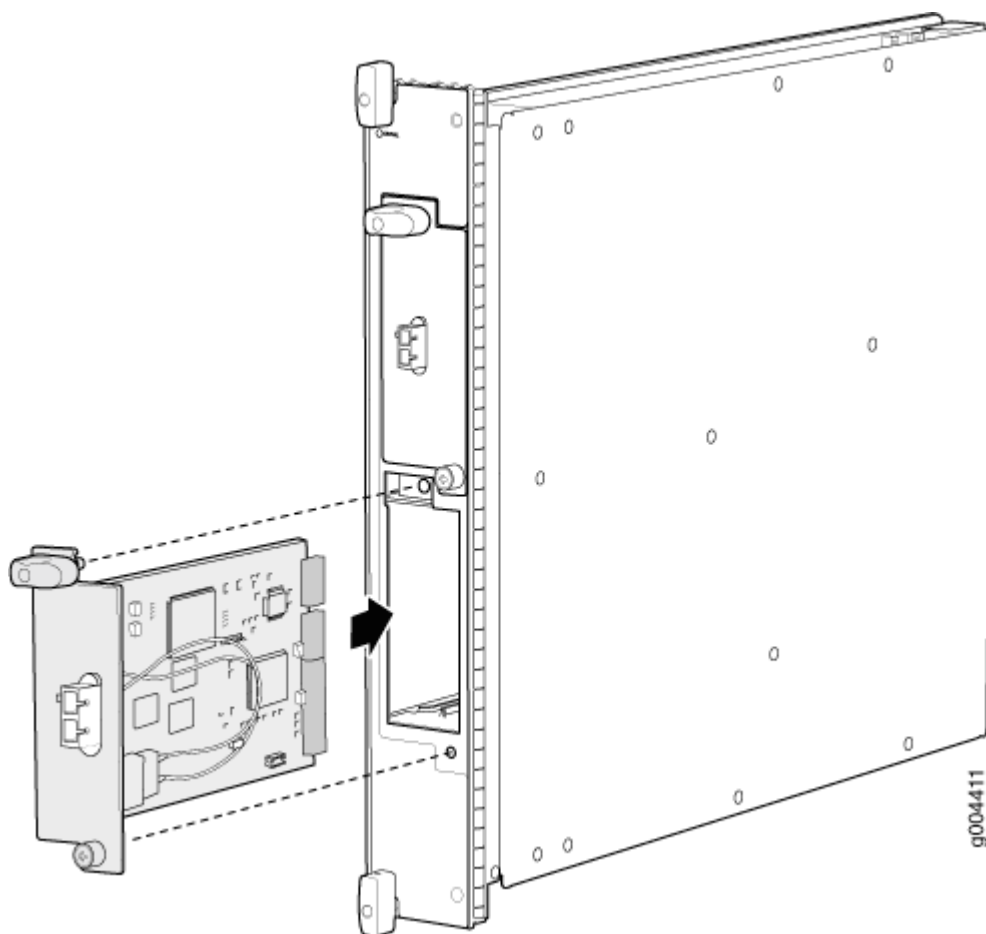

## SEE ALSO

[MX240 PIC Description](#) | 137

[Troubleshooting the MX240 PICs | 478](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[MX240 PIC Serial Number Label | 497](#)

## RELATED DOCUMENTATION

[MX240 PIC Description | 137](#)

[Troubleshooting the MX240 PICs | 478](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[MX240 PIC Serial Number Label | 497](#)

## Maintaining Cables that Connect to MX240 DPCs, MPCs, MICs, or PICs

### IN THIS SECTION

● [Purpose | 399](#)

● [Action | 399](#)

### Purpose

For optimum router performance, verify the condition of the cables that connect to the DPCs, MPCs, MICs, or PICs.

### Action

On a regular basis:

- Keep the cable connections clean and free of dust and other particles, which can cause drops in the received power level. Always inspect cables and clean them if necessary before connecting an interface.
- Label both ends of the cables to identify them.

The following guidelines apply specifically to fiber-optic cables:

- When you unplug a fiber-optic cable, always place a rubber safety plug over the transceiver on the faceplate and on the end of the cable.
- Anchor fiber-optic cables to avoid stress on the connectors. Be sure to secure fiber-optic cables so that they do not support their own weight as they hang to the floor. Never let fiber-optic cable hang free from the connector.
- Avoid bending fiber-optic cable beyond its bend radius. An arc smaller than a few inches can damage the cable and cause problems that are difficult to diagnose.
- Frequent plugging and unplugging of fiber-optic cable into and out of optical instruments can cause damage to the instruments that is expensive to repair. Instead, attach a short fiber extension to the optical equipment. Any wear and tear due to frequent plugging and unplugging is then absorbed by the short fiber extension, which is easy and inexpensive to replace.
- Keep fiber-optic cable connections clean. Small microdeposits of oil and dust in the canal of the transceiver or cable connector could cause loss of light, reducing signal power and possibly causing intermittent problems with the optical connection.

To clean the transceivers, use an appropriate fiber-cleaning device, such as RIFOCS Fiber Optic Adaptor Cleaning Wands (part number 946). Follow the directions for the cleaning kit you use.

After you clean an optical transceiver, make sure that the connector tip of the fiber-optic cable is clean. Use only an approved alcohol-free fiber-optic cable cleaning kit, such as the Opptex Cletop-S Fiber Cleaner. Follow the directions for the cleaning kit you use.

## SEE ALSO

[Maintaining MX240 DPCs | 352](#)

[Maintaining MX240 PICs | 393](#)

[Maintaining MX240 MPCs | 385](#)

[Maintaining MX240 MICs | 380](#)

## Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC

### IN THIS SECTION

- [Removing a Cable on an MX240 DPC, MPC, MIC, or PIC | 401](#)



## Removing a Cable on an MX240 DPC, MPC, MIC, or PIC

Removing and installing cables on a DPC, MPC, MIC, or PIC does not affect router function, except that the component does not receive or transmit data while its cable is disconnected.

To remove a cable:

1. If the component connects to fiber-optic cable, have ready a rubber safety cap for each cable and transceiver.
2. If removing all cables connected to the component, use one of the following methods to take the component offline:
  - To take a DPC or an MPC offline:
    - Press and hold the corresponding online button on the craft interface. The green **OK** LED next to the button begins to blink. Hold the button down until the LED goes off.
    - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).

- To take a PIC offline:
  - Press the online/offline button on the PIC. For a PIC installed in an FPC2 or FPC3, use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the PIC LED goes off (about 5 seconds).
  - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

- To take a MIC offline:
  - Press the online/offline button on the MIC. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the MIC LED goes off (about 5 seconds).

- Issue the following CLI command:

```
user@host> request chassis mic fpc-slot mpc-slot pic-slot mic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

3. Unplug the cable from the cable connector port. If the component uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when you are inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

## Installing a Cable on an MX240 DPC, MPC, MIC, or PIC

To install a cable on a DPC, MPC, MIC, or PIC:

1. Have ready a length of the type of cable used by the component. For cable specifications, see the [MX Series Interface Module Reference](#).
2. If the cable connector port is covered by a rubber safety plug, remove the plug.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when you are inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

3. Insert the cable connector into the cable connector port on the faceplate.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.



**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.

4. Insert the other end of the cable into the destination port.
5. Repeat the previous steps for any additional cables.
6. If the component is offline (its failure indicator LED is lit), use one of the following methods to bring the PIC online:

- To bring a DPC or an MPC online:
  - Press and hold the corresponding online button on the craft interface until the green **OK** LED next to the button lights steadily, in about 5 seconds.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```

For more information about the command, see the [CLI Explorer](#).

- To bring a PIC online:
  - Press the PIC offline/online button until the PIC LED lights green. For a PIC installed in FPC3, use a narrow-ended tool that fits inside the opening that leads to the button.
  - Issue the following CLI command:

```
user@host>request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

- To bring a MIC online:
  - Press the MIC offline/online button until the PIC LED lights green.
  - Issue the following CLI command:

```
user@host>request chassis mic fpc-slot mpc-slot pic-slot mic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning indicator LED confirms that the component is online. You can also verify correct DPC or MPC functioning by issuing the `show chassis fpc` command or correct MIC or PIC functioning by issuing the `show chassis fpc pic-status`.

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[Maintaining MX240 DPCs | 352](#)

[Maintaining MX240 MPCs | 385](#)

[Maintaining MX240 MICs | 380](#)

[Maintaining MX240 PICs | 393](#)

## RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[Maintaining MX240 PICs | 393](#)

[Troubleshooting the MX240 PICs | 478](#)

[MX240 PIC Serial Number Label | 497](#)

[MX240 PIC Description | 137](#)

[Replacing an MX240 FPC | 369](#)

## Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC

### IN THIS SECTION

- [Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 405](#)
- [Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC | 406](#)

Small form-factor pluggable transceivers (SFPs) and XFPs are optical transceivers that are installed in a DPC, MPC, MIC, or PIC. SFPs and XFPs are hot-insertable and hot-removable.

### Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC

Removing an SFP or XFP does not interrupt DPC, MPC, MIC, or PIC functioning, but the removed SFP or XFP no longer receives or transmits data.

To remove an SFP or XFP transceiver (see Figure 23):

1. Have ready a replacement transceiver or a transceiver slot plug, an antistatic mat, and a rubber safety cap for the transceiver.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Label the cables connected to the transceiver so that you can reconnect them correctly later.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

4. Remove the cable connector from the transceiver.
5. Pull the ejector handle out from the transceiver to unlock the transceiver.




**CAUTION:** Make sure that you open the ejector handle completely until you hear it click. This prevents damage to the transceiver.

Use needlenose pliers to pull the ejector handle out from the transceiver.

6. Grasp the transceiver ejector handle, and pull the transceiver approximately 0.5 in. (1.3 cm) out of the DPC, MPC, MIC, or PIC.
7. Using your fingers, grasp the body of the transceiver, and pull it the rest of the way out of the DPC, MPC, MIC, or PIC.

Figure 135: Removing SFPs or XFPs

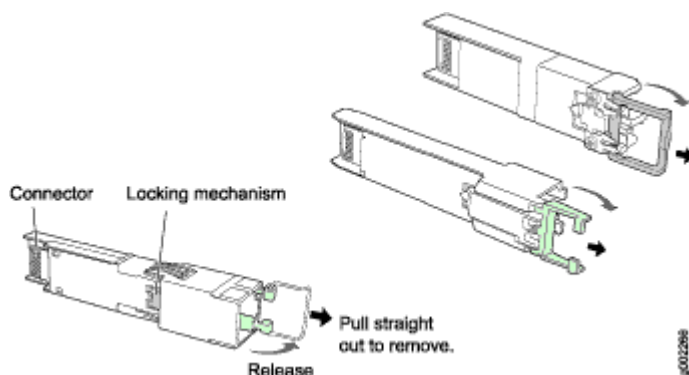

8. Place a rubber safety cap over the transceiver.
9. Place the removed transceiver on an antistatic mat or in an electrostatic bag.



**CAUTION:** After removing a transceiver from the chassis, wait at least 30 seconds before reinserting it or inserting a transceiver into a different slot.

## SEE ALSO

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[MX240 PIC Description | 137](#)

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

[MX240 Modular Interface Card \(MIC\) Description | 155](#)

[Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC | 400](#)

[Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 404](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC

To install an SFP or XFP:

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Take each transceiver to be installed out of its electrostatic bag, and identify the slot on the component where it will be installed.
3. Verify that each transceiver is covered by a rubber safety cap. If it is not, cover the transceiver with a safety cap.

4. Carefully align the transceiver with the slots in the component. The connectors should face the component.
5. Slide the transceiver until the connector is seated in the component slot. If you are unable to fully insert the transceiver, make sure the connector is facing the right way.
6. Close the ejector handle of the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable. Insert the cable into the transceiver.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

8. Verify that the status LEDs on the component faceplate indicate that the SFP or XFP is functioning correctly. For more information about the component LEDs, see the [MX Series Interface Module Reference](#).

## SEE ALSO

---

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

---

[MX240 PIC Description | 137](#)

---

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

---

[MX240 Modular Interface Card \(MIC\) Description | 155](#)

---

[Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC | 400](#)

---

[Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 404](#)

---

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## RELATED DOCUMENTATION

---

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

---

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Replacing an MX240 AS MLC

### IN THIS SECTION

- [Removing an MX240 AS MLC | 408](#)
- [Installing an MX240 AS MLC | 410](#)

### Removing an MX240 AS MLC

When you remove an Application Services Modular Line Card (AS MLC), the router continues to function, although the modular cards (AS MXC and AS MSC) installed on the AS MLC being removed no longer function.

Up to five AS MLCs can be installed horizontally in the front of the MX240 router. The AS MLCs are hot-insertable and hot-removable. An empty AS MLC weighs 10.5 lb (4.76 kg). A fully configured AS MLC can weigh up to 15.27 lb (6.93 kg). Be prepared to accept its full weight.

To remove an AS MLC (see Figure 24):

1. Have ready a replacement AS MLC or an AS MLC blank panel and an antistatic mat for the AS MLC.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Use one of the following methods to take the AS MLC offline:
  - Press and hold the AS MLC online/offline button. The green **OK** LED next to the button begins to blink. Hold the button down until the LED goes out. The online/offline button for each AS MLC is located directly above it on the craft interface.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot  
                slot-number  
                offline
```

For more information about the command, see the [CLI Explorer](#).





**NOTE:** The slot number corresponds to the lowest numbered slot for which the AS MLC is installed.

4. Simultaneously turn both the ejector handles counterclockwise to unseat the AS MLC.
5. Grasp the handles, and slide the AS MLC straight out of the card cage halfway.
6. Place one hand around the front of the AS MLC (the modular card housing) and the other hand under it to support it. Slide the AS MLC completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



**CAUTION:** The weight of the AS MLC is concentrated in the back end. Be prepared to accept the full weight—up to 15.27 lb (6.93 kg)—as you slide the AS MLC out of the chassis.

When the AS MLC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.


Do not stack AS MLCs on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

7. If necessary, remove each installed AS MSC and AS MXC from the AS MLC.
8. After you remove each modular card, immediately place it on an antistatic mat or in an electrostatic bag.
9. If you are not reinstalling an AS MLC into the emptied slots within a short time, install a blank AS MLC panel over each slot to maintain proper airflow in the card cage.



**CAUTION:** After removing an AS MLC from the chassis, wait at least 30 seconds before reinserting it or inserting an AS MLC into a different slot.

**Figure 136: Removing an AS MLC**

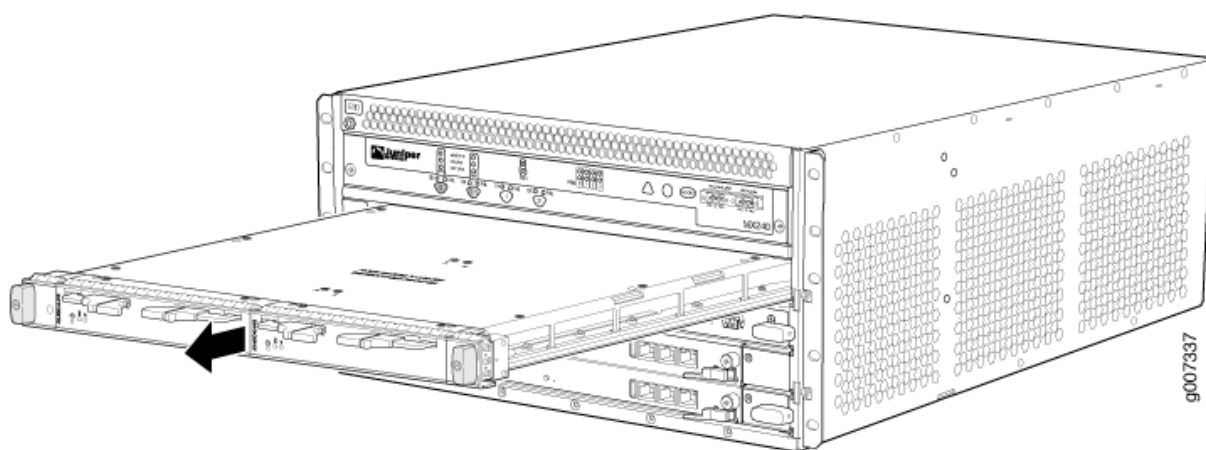

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Installing an MX240 AS MLC

You can install up to five Application Services Modular Line Cards (AS MLCs) horizontally in the front of the MX240 router. The AS MLCs are hot-insertable and hot-removable. An empty AS MLC weighs 10.5 lb (4.76 kg). A fully configured AS MLC can weigh up to 15.27 lb (6.93 kg). Be prepared to accept its full weight.

To install an AS MLC (see Figure 25):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Place the AS MLC on an antistatic mat.
3. Take the AS MSC and AS MXC (the modular cards) to be installed in the AS MLC out of its electrostatic bag. The AS MSC must be inserted in the left slot and the AS MXC in the right slot.
4. Install the AS MSC and AS MXC into the appropriate slot on the AS MLC.
5. Locate the slots in the card cage in which you plan to install the AS MLC.
6. Orient the AS MLC so that the faceplate faces you.
7. Lift the AS MLC into place, and carefully align the sides of the AS MLC with the guides inside the card cage.



**CAUTION:** When the AS MLC is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

8. Slide the AS MLC all the way into the card cage until you feel resistance.
9. Grasp both ejector handles, and rotate them clockwise simultaneously until the AS MLC is fully seated.
10. Use one of the following methods to bring the AS MLC online:
  - Press and hold the AS MLC online/offline button until the green **OK** LED next to the button lights steadily, in about 5 seconds. The LEDs and online/offline button for each AS MLC are located above it on the craft interface.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot
                slot-number
                online
```


For more information about the command, see the [CLI Explorer](#).



**CAUTION:** After the **OK** LED lights steadily, wait at least 30 seconds before removing the AS MLC again, removing an AS MLC from a different slot, or inserting an AS MLC in a different slot.

You can also verify correct AS MLC and AS MSC or AS MXC functioning by issuing the `show chassis fpc` and `show chassis fpc pic-status`.

**Figure 137: Installing an AS MLC**

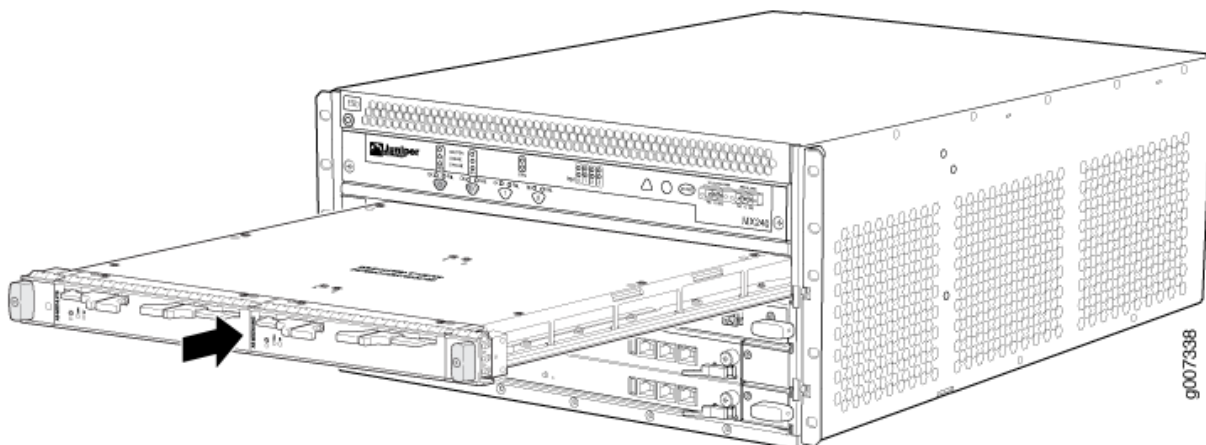

## SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

## RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

# Replacing an MX240 AS MSC

## IN THIS SECTION

- [Removing an MX240 AS MSC](#) | 412
- [Installing an MX240 AS MSC](#) | 414

## Removing an MX240 AS MSC

AS MSCs are hot-insertable and hot-removable. When you remove an AS MSC, the router continues to function.

The AS MSCs are located in the AS MLCs installed in the front of the router. An AS MSC weighs 1.4 lb (0.6 kg).

To remove an AS MSC (see Figure 26):


1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the AS MSC.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Use one of the following methods to take the AS MSC offline:
  - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the AS MSC LED goes out (about 5 seconds).
  - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

4. Slide the AS MSC out of the AS MLC card carrier by pulling the handles, and place it in the electrostatic bag or on the antistatic mat.
5. If you are not reinstalling an AS MSC into the emptied AS MSC slot within a short time, install a blank AS MSC panel over the slot to maintain proper airflow in the AS MLC card cage.

**Figure 138: Removing an AS MSC**

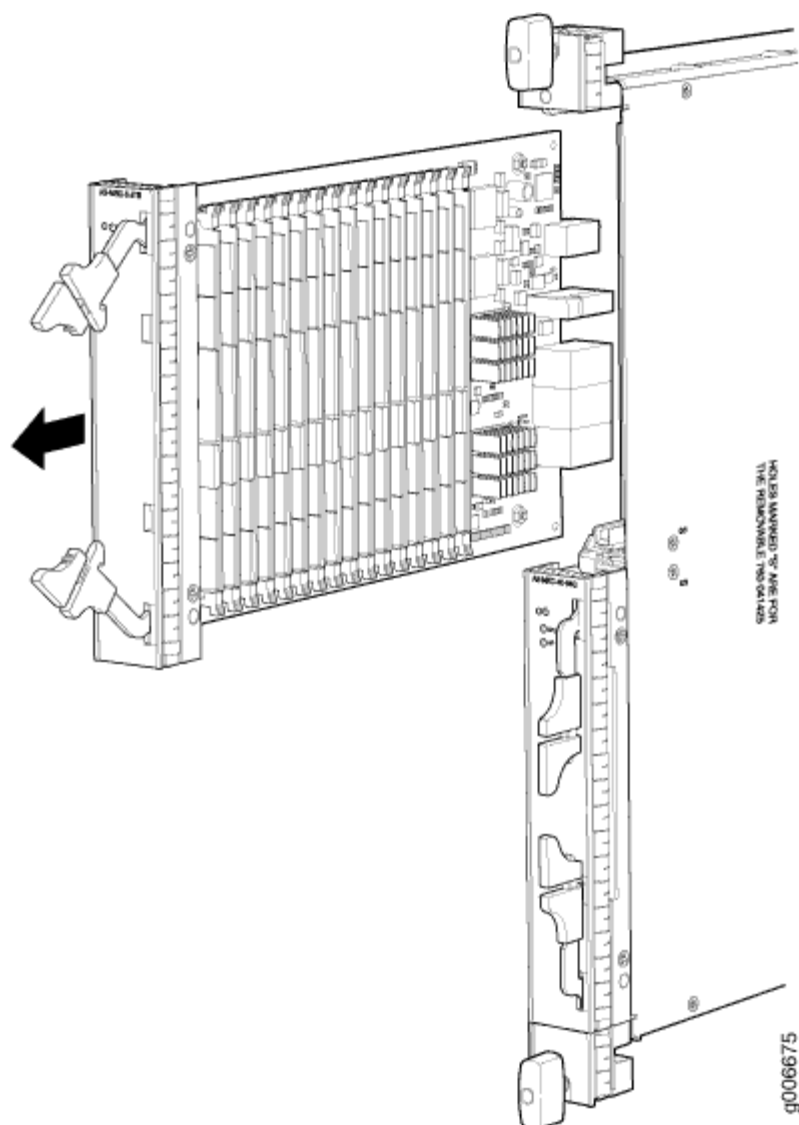

#### SEE ALSO

[MX240 Application Services Modular Storage Card Description](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

## Installing an MX240 AS MSC

To install an AS MSC (see Figure 27):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Align the notches in the connector at the rear of the AS MSC with the notches in the AS MSC slot (slot 0—the top slot in the AS MLC ), and then slide the AS MSC in until it lodges firmly in the AS MLC.



**CAUTION:** Slide the AS MSC straight into the slot to avoid damaging the components on the bottom of the AS MSC.


3. Use one of the following methods to bring the AS MSC online:
  - Press the AS MSC offline/online button until the LED light turns green.
  - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the AS MSC is online. You can also verify correct AS MSC functioning by issuing the `show chassis fpc pic-status`.

Figure 139: Installing an AS MSC

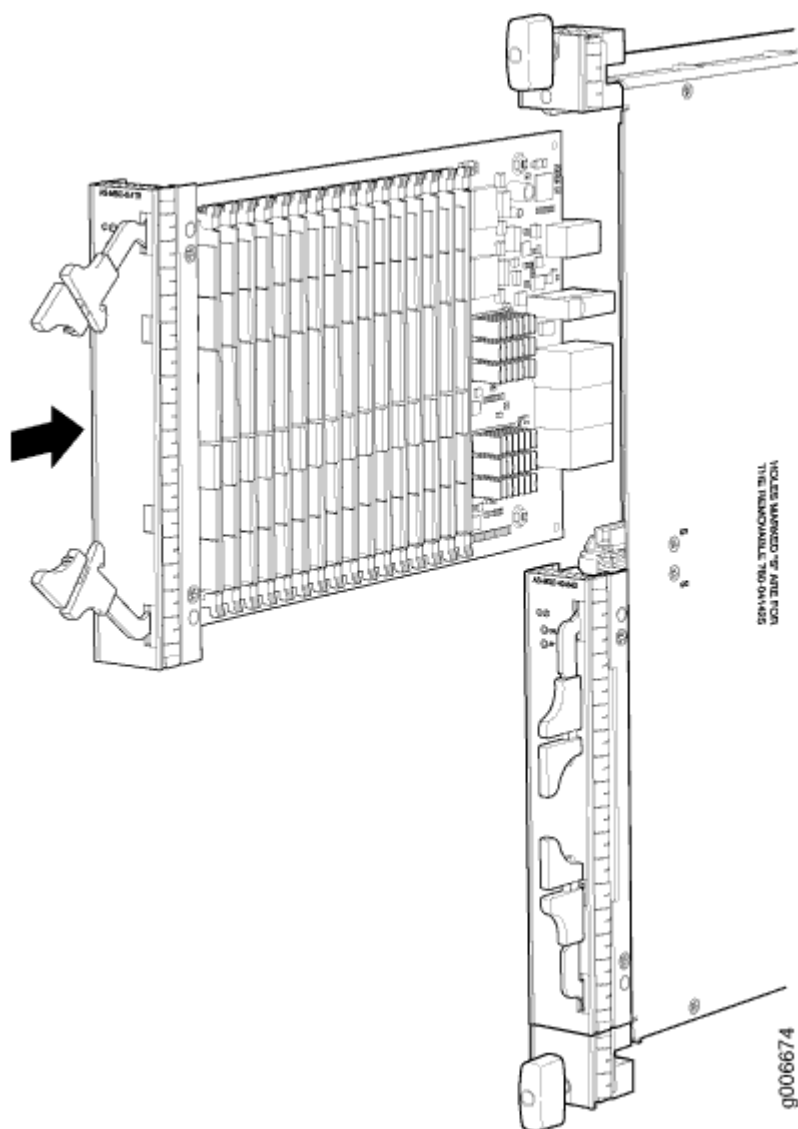

## SEE ALSO

[MX240 Application Services Modular Storage Card Description](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

## RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router](#) | 511

[MX240 Application Services Modular Storage Card Description](#)

## Replacing an MX240 AS MXC

### IN THIS SECTION

- Removing an MX240 AS MXC | 416
- Installing an MX240 AS MXC | 417

### Removing an MX240 AS MXC

AS MXCs are hot-insertable and hot-removable. When you remove an AS MXC, the router continues to function.

The AS MXCs are located in the AS MLCs installed in the front of the router. An AS MXC weighs 1.4 lb (0.6 kg).

To remove an AS MXC (see Figure 28):

1. Place an electrostatic bag or antistatic mat on a flat, stable surface to receive the AS MXC.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Use one of the following methods to take the AS MXC offline:
  - Press its online/offline button. Use a narrow-ended tool that fits inside the opening that leads to the button. Press and hold the button until the AS MXC LED goes out (about 5 seconds).
  - Issue the following CLI command:


```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot offline
```

For more information about the command, see the [CLI Explorer](#).

- 4.
5. Slide the AS MXC out of the AS MLC card carrier by pulling the handles, and place it in the electrostatic bag or on the antistatic mat.
6. If you are not reinstalling an AS MXC into the emptied AS MXC slot within a short time, install a blank AS MXC panel over the slot to maintain proper airflow in the AS MLC card cage.



Figure 140: Removing an AS MXC

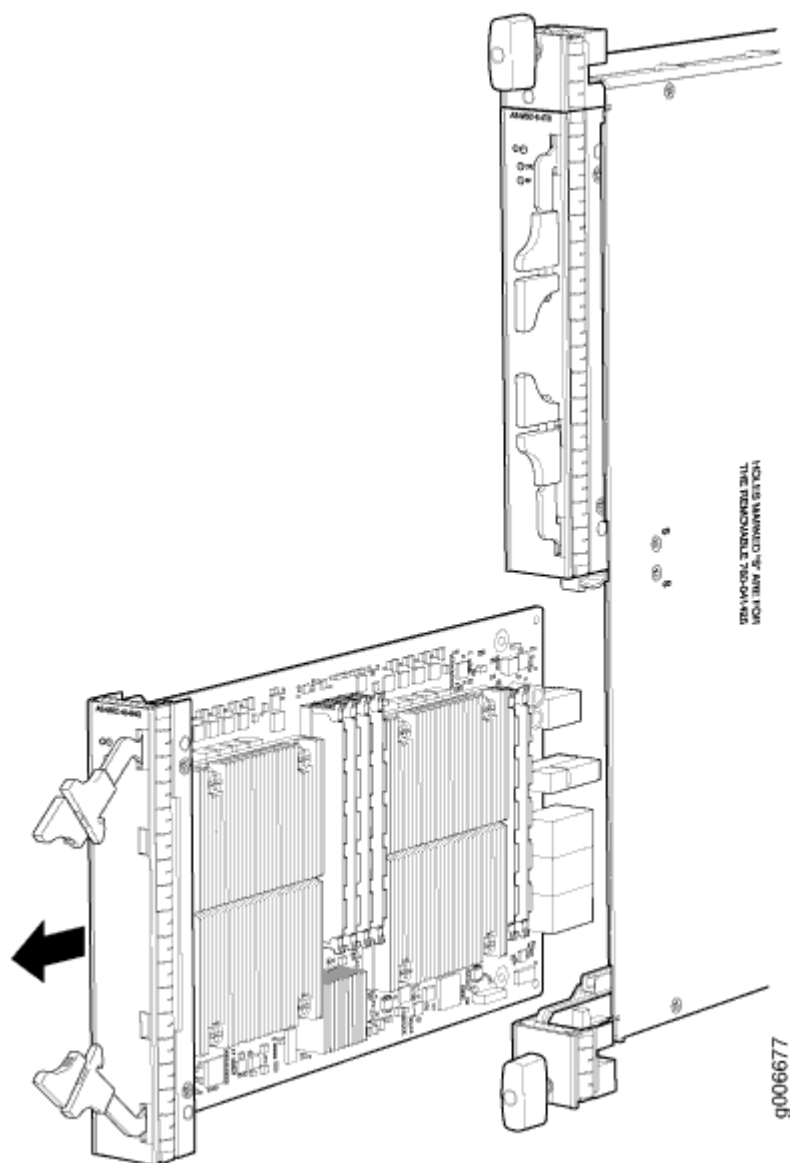

#### SEE ALSO

[MX240 Application Services Modular Processing Card Description | 191](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

#### Installing an MX240 AS MXC

To install an AS MXC (see Figure 29):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Align the notches in the connector at the rear of the AS MXC with the notches in the AS MXC slot (slot 1—the bottom slot in the AS MLC), and then slide the AS MXC in until it lodges firmly in the AS MLC.



**CAUTION:** Slide the AS MXC straight into the slot to avoid damaging the components on the bottom of the AS MXC.


3. Use one of the following methods to bring the AS MXC online:
  - Press the AS MXC offline/online button until the LED light turns green.
  - Issue the following CLI command:

```
user@host> request chassis pic fpc-slot fpc-slot pic-slot pic-slot online
```

For more information about the command, see the [CLI Explorer](#).

The normal functioning status LED confirms that the AS MXC is online. You can also verify correct AS MXC functioning by issuing the `show chassis fpc pic-status` command.

Figure 141: Installing an AS MXC

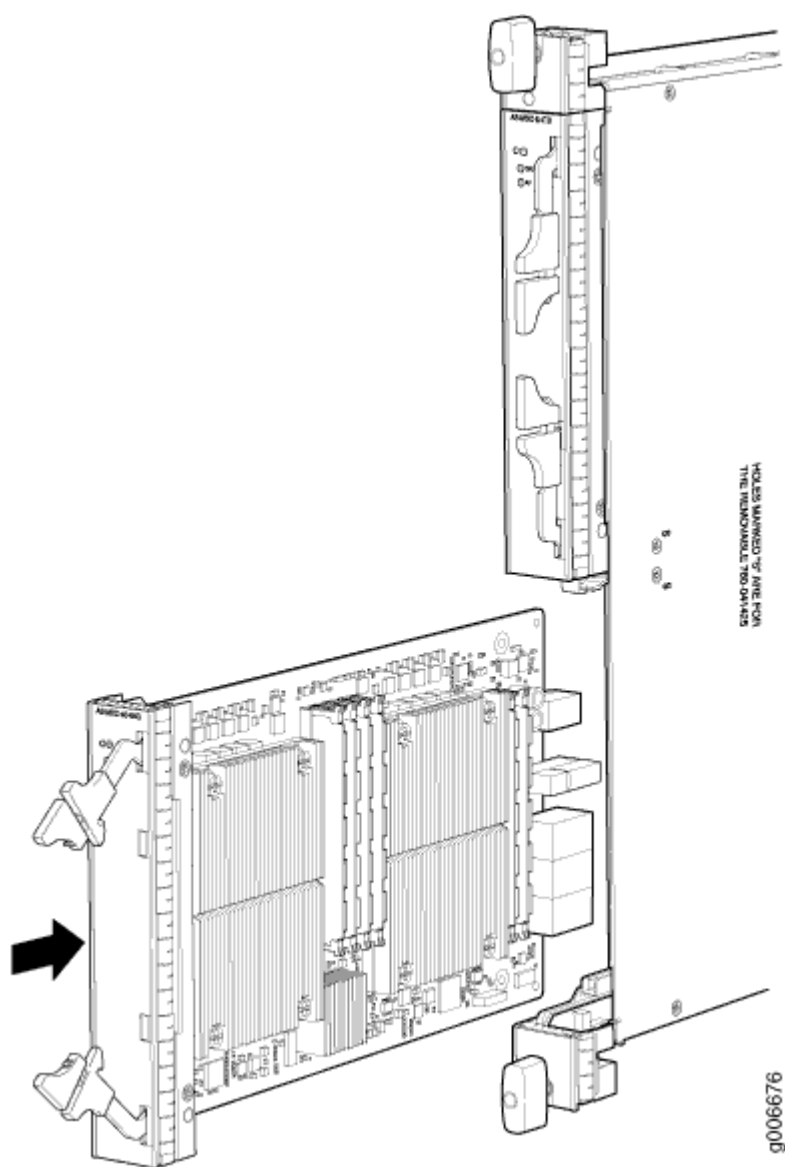

#### SEE ALSO

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[MX240 Application Services Modular Processing Card Description | 191](#)

#### RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Maintaining MX-SPC3 Services Card

### IN THIS SECTION

- [Maintaining MX-SPC3 Services Card | 420](#)
- [Replacing an MX-SPC3 | 421](#)

## Maintaining MX-SPC3 Services Card

### IN THIS SECTION

- [Purpose | 420](#)
- [Action | 420](#)

### Purpose

For optimum router performance, verify the condition of the MX-SPC3 Services Card. To maintain MX-SPC3s cards, perform the following procedures regularly.

### Action

On a regular basis:

- Check the LEDs on the craft interface corresponding to the slot for each MX-SPC3. The green LED labeled **OK** lights steadily when a MX-SPC3 is functioning normally.
- Check the **OK/FAIL** LED on the MX-SPC3. If the MX-SPC3 detects a failure, the MX-SPC3 sends an alarm message to the Routing Engine.

- Issue the CLI `show chassis fpc` command to check the status of installed MX-SPC3s.

```
user@host> show chassis fpc
```

For more detailed output, add the `detail` option.

```
user@host> show chassis fpc detail
```

- Issue the CLI `show chassis fpc pic-status` command.

```
user@host> show chassis fpc pic-status
```

For further description of the output from the command, see the [CLI Explorer](#).

## Replacing an MX-SPC3

### IN THIS SECTION

- [Removing an MX-SPC3 | 421](#)
- [Installing an MX-SPC3 | 423](#)

## Removing an MX-SPC3

The MX-SPC3 installs horizontally in the front of the MX240 & MX480 routers and vertically in the MX960 router. The MX-SPC3s are hot-insertable and hot-removable and the router continues to function when you remove an MX-SPC3.

A fully configured MX-SPC3 can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.

To remove an MX-SPC3:

1. Have ready a replacement MX-SPC3 or a blank panel and an antistatic mat for the MX-SPC3. Also have ready rubber safety caps for transceivers.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.

3. Label the cables connected to each port on the MX-SPC3 so that you can later reconnect the cables to the correct ports.
4. Use one of the following methods to take the MX-SPC3 offline:
  - Press and hold the corresponding online button on the craft interface. The green **OK/FAIL** LED next to the button begins to blink. Hold the button down until the LED goes off.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number offline
```

For more information about the command, see the [CLI Explorer](#).

5. Disconnect the cables from the MX-SPC3. If the MX-SPC3 uses fiber-optic cable, immediately cover each transceiver and the end of each cable with a rubber safety cap.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered, except when inserting or removing a cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

6. Arrange the disconnected cables in the cable manager to prevent the cables from developing stress points.
7. Simultaneously turn both the ejector handles counterclockwise to unseat the MX-SPC3.
8. Grasp the handles, and slide the MX-SPC3 straight out of the card cage halfway.
9. Place one hand around the front of the MX-SPC3 and the other hand under it to support it. Slide the MX-SPC3 completely out of the chassis, and place it on the antistatic mat or in the electrostatic bag.



**CAUTION:** The weight of the MX-SPC3 is concentrated in the back end. Be prepared to accept the full weight—up to 18.35 lb (8.3 kg)—as you slide the MX-SPC3 out of the chassis.

When the MX-SPC3 is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

Do not stack MX-SPC3s on top of one another after removal. Place each one individually in an electrostatic bag or on its own antistatic mat on a flat, stable surface.

10. If you are not reinstalling an MX-SPC3 into the emptied line card slots within a short time, install a blank panel over each slot to maintain proper airflow in the card cage.



**CAUTION:** After removing an MX-SPC3 from the chassis:

- Check the back panel connectors of the MX-SPC3 for damages. A damaged connector on the MX-SPC3 card can damage the chassis back plane.
- Wait for at least 30 seconds before reinserting the MX-SPC3 into the same slot or inserting it into a different slot.

## Installing an MX-SPC3

The MX-SPC3 installs horizontally in the front of the MX240 & MX480 routers and vertically in the MX960 router.

A fully configured MX-SPC3 can weigh up to 18.35 lb (8.3 kg). Be prepared to accept its full weight.



**CAUTION:** Before installing an MX-SPC3 into the chassis:

- Check the back panel connectors of the MX-SPC3 for damages. A damaged connector on the MX-SPC3 card can damage the chassis back plane.
- Wait for at least 30 seconds, before reinserting the MX-SPC3 into the same slot or inserting it into a different slot.

To install an MX-SPC3:

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Place the MX-SPC3 on an antistatic mat.
3. Locate the slot in the card cage in which you plan to install the MX-SPC3.

4. Verify that each fiber-optic transceiver is covered with a rubber safety cap. If it does not, cover the transceiver with a safety cap.
5. Orient the MX-SPC3 so that the faceplate faces you.
6. Lift the MX-SPC3 into place, and carefully align first the bottom and then the top of the card with the guides inside the card cage.



**CAUTION:** When the MX-SPC3 is out of the chassis, do not hold it by the ejector handles, bus bars, or edge connectors. They cannot support its weight.

7. Slide the MX-SPC3 all the way into the card cage until you feel resistance.
8. Grasp both ejector handles, and rotate them clockwise simultaneously until the MX-SPC3 is fully seated.
9. If the MX-SPC3 uses fiber-optic cable, remove the rubber safety cap from each transceiver and cable.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

10. Insert the appropriate cables into the cable connector ports on MX-SPC3. Secure the cables so that they are not supporting their own weight. Place excess cable out of the way in a neatly coiled loop, using the cable management system. Placing fasteners on a loop helps to maintain its shape.



**CAUTION:** Do not let fiber-optic cables hang free from the connector. Do not allow the fastened loops of a cable to dangle, which stresses the cable at the fastening point.



**CAUTION:** Do not bend a fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.

11. Use one of the following methods to bring the MX-SPC3 online:
  - Press and hold the corresponding MX-SPC3 online button on the craft interface until the green **OK/FAIL** LED next to the button lights steadily, in about 5 seconds.
  - Issue the following CLI command:

```
user@host>request chassis fpc slot slot-number online
```



For more information about the command, see the [CLI Explorer](#).



**CAUTION:** After the **OK/FAIL** LED lights steadily, wait at least 30 seconds before removing the MX-SPC3 again, removing an MX-SPC3 from a different slot, or inserting an MX-SPC3 in a different slot.

## Maintaining MX240 Power System Components

### IN THIS SECTION

- [Maintaining the MX240 Power Supplies | 425](#)
- [Replacing an MX240 AC Normal-Capacity Power Supply | 427](#)
- [Replacing an MX240 AC Power Supply Cord | 429](#)
- [Replacing an MX240 DC Normal-Capacity Power Supply | 430](#)
- [Replacing an MX240 DC Power Supply Cable | 435](#)

## Maintaining the MX240 Power Supplies

### IN THIS SECTION

- [Purpose | 425](#)
- [Action | 426](#)

### Purpose

For optimum router performance, verify the condition of the power supplies.

# Action

On a regular basis:

- PEM 0 status:

State	Online
Temperature	OK
DC output	OK

- PEM 2 status:

State	Online
Temperature	OK
DC output	OK

- Make sure that the power and grounding cables are arranged so that they do not obstruct access to other router components.
- Routinely check the status LEDs on the power supply faceplates and the craft interface to determine if the power supplies are functioning normally.
- Check the red and yellow alarm LEDs on the craft interface. Power supply failure or removal triggers an alarm that causes one or both of the LEDs to light. You can display the associated error messages by issuing the following command:

```
user@host> show chassis alarms
```

- Periodically inspect the site to ensure that the grounding and power cables connected to the router are securely in place and that there is no moisture accumulating near the router.

## SEE ALSO

[MX240 Component LEDs on the Craft Interface | 27](#)

[MX240 AC Power Supply Description | 39](#)

[MX240 DC Power Supply Description | 48](#)

[MX240 Site Preparation Checklist | 208](#)

[Troubleshooting the MX240 Components | 465](#)

## Replacing an MX240 AC Normal-Capacity Power Supply

### IN THIS SECTION

- [Removing an MX240 AC Normal-Capacity Power Supply | 427](#)
- [Installing an MX240 AC Normal-Capacity Power Supply | 428](#)

### Removing an MX240 AC Normal-Capacity Power Supply

Before you remove a power supply, be aware of the following:



**NOTE:** The minimum number of power supplies must be present in the router at all times.



**CAUTION:** To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.




**NOTE:** After powering off a power supply, wait at least 60 seconds before turning it back on.

To remove an AC power supply (see Figure 1):

1. Switch off the dedicated customer site circuit breaker for the power supply, and remove the power cord from the AC power source. Follow the instructions for your site.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
4. Remove the power cord from the power supply.
5. Unscrew the captive screws on the bottom edge of the power supply.
6. Pull the power supply straight out of the chassis.

**Figure 142: Removing an AC Power Supply**

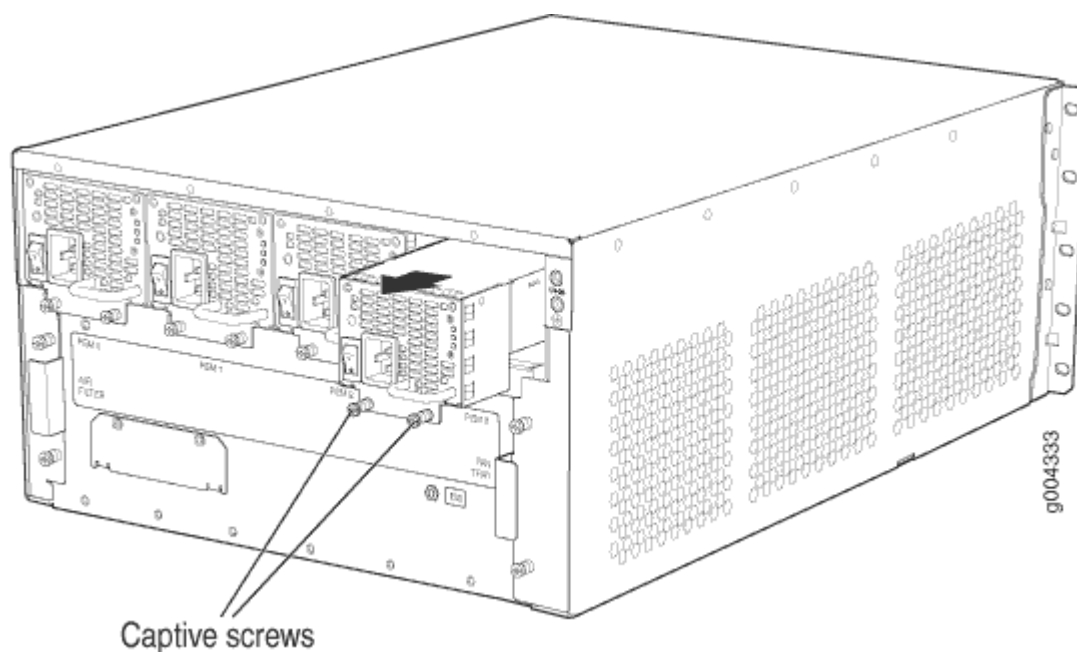

## SEE ALSO

[MX240 AC Power Supply Description | 39](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[AC Power Supply Electrical Specifications for the MX240 Router | 42](#)


## Installing an MX240 AC Normal-Capacity Power Supply

To install an AC power supply (see Figure 2):

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
3. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
4. Tighten both captive screws at the bottom of the power supply.
5. Attach the power cord to the power supply.
6. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker. Follow the instructions for your site.

7. Move the AC input switch next to the appliance inlet on the power supply to the on (I) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

**Figure 143: Installing an AC Power Supply**

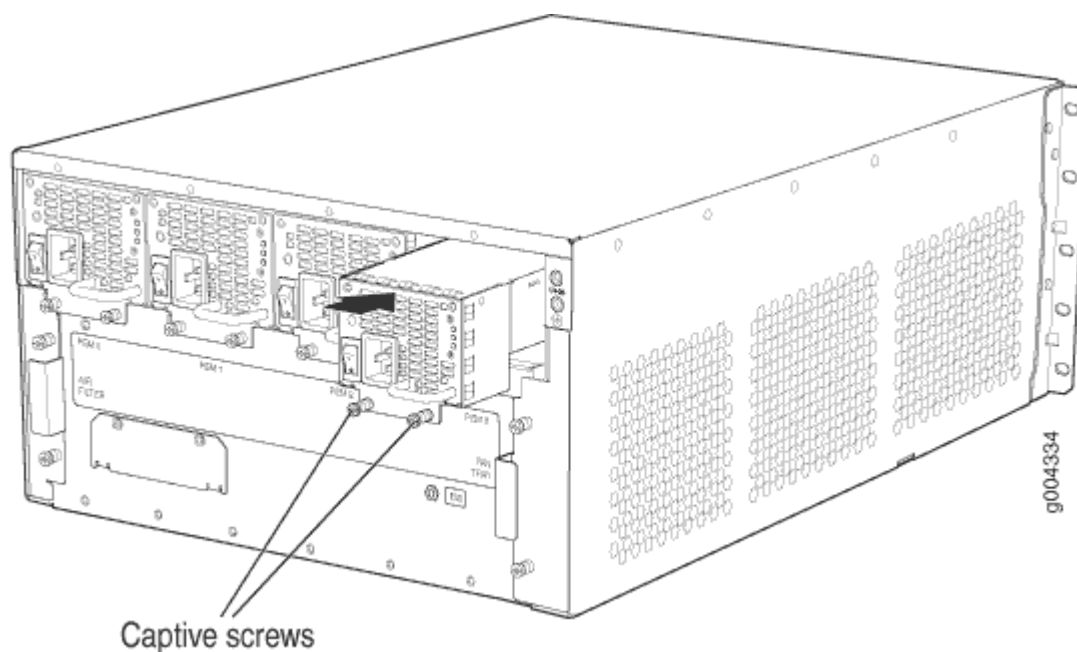

## RELATED DOCUMENTATION

[MX240 AC Power Supply Description | 39](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[AC Power Supply Electrical Specifications for the MX240 Router | 42](#)

## Replacing an MX240 AC Power Supply Cord

### IN THIS SECTION

- [Disconnecting an MX240 AC Power Supply Cord | 430](#)
- [Connecting an MX240 AC Power Supply Cord | 430](#)

## Disconnecting an MX240 AC Power Supply Cord

To disconnect the AC power cord:

1. Switch off the dedicated customer site circuit breaker for the power supply, and remove the power cord from the AC power source. Follow the instructions for your site.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Move the AC input switch next to the appliance inlet on the power supply to the off (0) position.
4. Remove the power cord from the power supply.

## Connecting an MX240 AC Power Supply Cord

To connect the AC power cord:

1. Locate a replacement power cord with the type of plug appropriate for your geographical location (see ["AC Power Cord Specifications for the MX240 Router" on page 45](#)).
2. Connect the power cord to the power supply.
3. Insert the power cord plug into an external AC power source receptacle.
4. Route the power cord appropriately. Verify that the power cord does not block the air exhaust and access to router components, or drape where people could trip on it.
5. Switch the AC input switch on the each power supply to the on (I) position and observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

### RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[AC Power Cord Specifications for the MX240 Router | 45](#)

[MX240 AC Power Electrical Safety Guidelines and Warnings](#)

## Replacing an MX240 DC Normal-Capacity Power Supply

### IN THIS SECTION

● [Removing an MX240 DC Power Supply | 431](#)

● [Installing an MX240 DC Normal Capacity Power Supply | 432](#)

## Removing an MX240 DC Power Supply

Before you remove a power supply, be aware of the following:



**NOTE:** The minimum number of power supplies must be present in the router at all times.



**WARNING:** Before you perform DC power procedures, ensure there is no power to the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.



**CAUTION:** To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.




**NOTE:** After powering off a power supply, wait at least 60 seconds before turning it back on.

To remove a DC power supply (see Figure 3):

1. Switch off the dedicated customer site circuit breaker for the power supply being removed. Follow your site's procedures for ESD.
2. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during the removal process.
3. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
4. Move the DC circuit breaker on the DC power supply faceplate to the off (O) position.
5. Remove the clear plastic cover protecting the terminal studs on the faceplate.
6. Remove the nut and washer from each of the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
7. Remove the cable lugs from the terminal studs.
8. Loosen the captive screws on the bottom edge of the power supply faceplate.
9. Carefully move the power cables out of the way.
10. Pull the power supply straight out of the chassis.

Figure 144: Removing a DC Power Supply from the Router

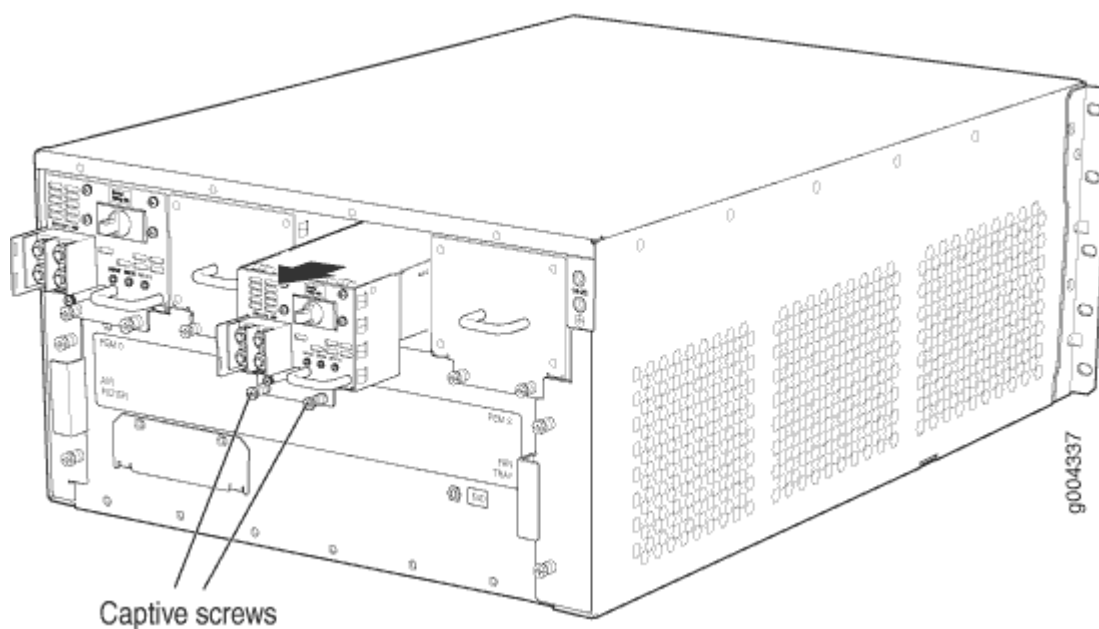

## Installing an MX240 DC Normal Capacity Power Supply



**WARNING:** Before you perform DC power procedures, ensure there is no power to the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To install a DC power supply (see Figure 4):

1. Ensure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cable leads might become active during installation.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Switch the DC circuit breaker on the DC power supply faceplate to the off (O) position.
4. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
5. Tighten the captive screws on the lower edge of the power supply faceplate.
6. Remove the clear plastic cover protecting the terminal studs on the faceplate.
7. Remove the nuts and washers from the terminal studs.



8. Secure each power cable lug to the terminal studs, first with the flat washer, then with the nut (see Figure 5). Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut. Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)
  - a. Secure the positive (+) DC source power cable lug to the **RTN** (return) terminal.
  - b. Secure the negative (-) DC source power cable lug to the **-48V** (input) terminal.



**CAUTION:** Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



**CAUTION:** The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.



**CAUTION:** You must ensure that power connections maintain the proper polarity. The power source cables might be labeled **(+)** and **(-)** to indicate their polarity. There is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the terminal studs on each power supply.



**NOTE:** The DC power supply in **PEM0** must be powered by dedicated power feeds derived from feed **A**, and the DC power supply in **PEM2** must be powered by dedicated power feeds derived from feed **B**. This configuration provides the commonly deployed **A/B** feed redundancy for the system.



**NOTE:** For information about connecting to DC power sources, see [DC Power Supply Electrical Specifications for the MX240 Router](#).

9. Replace the clear plastic cover over the terminal studs on the faceplate.
10. Verify that the power cabling is correct, that the cables are not touching or blocking access to router components, and that they do not drape where people could trip on them.
11. Verify that the **INPUT OK** LED on the power supply is lit green.

12. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



**NOTE:** The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.



**NOTE:** If more than one power supply is being installed, turn on all power supplies at the same time.



**NOTE:** An SCB must be present for the **PWR OK** LED to go on.

Figure 145: Installing a DC Power Supply in the Router


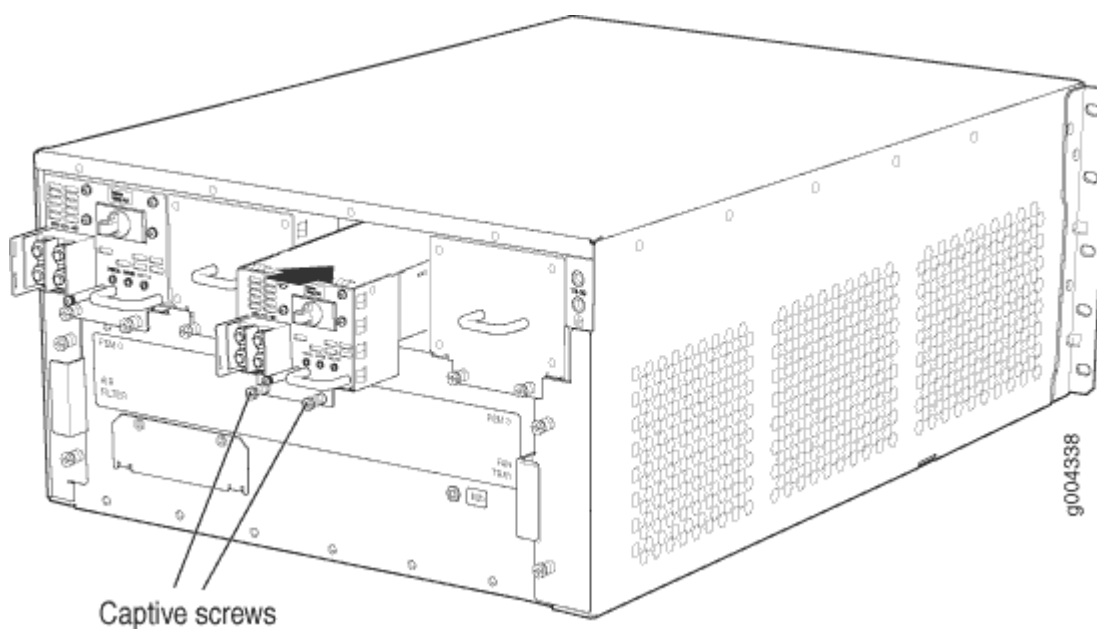


Figure 146: Connecting DC Power to the Router

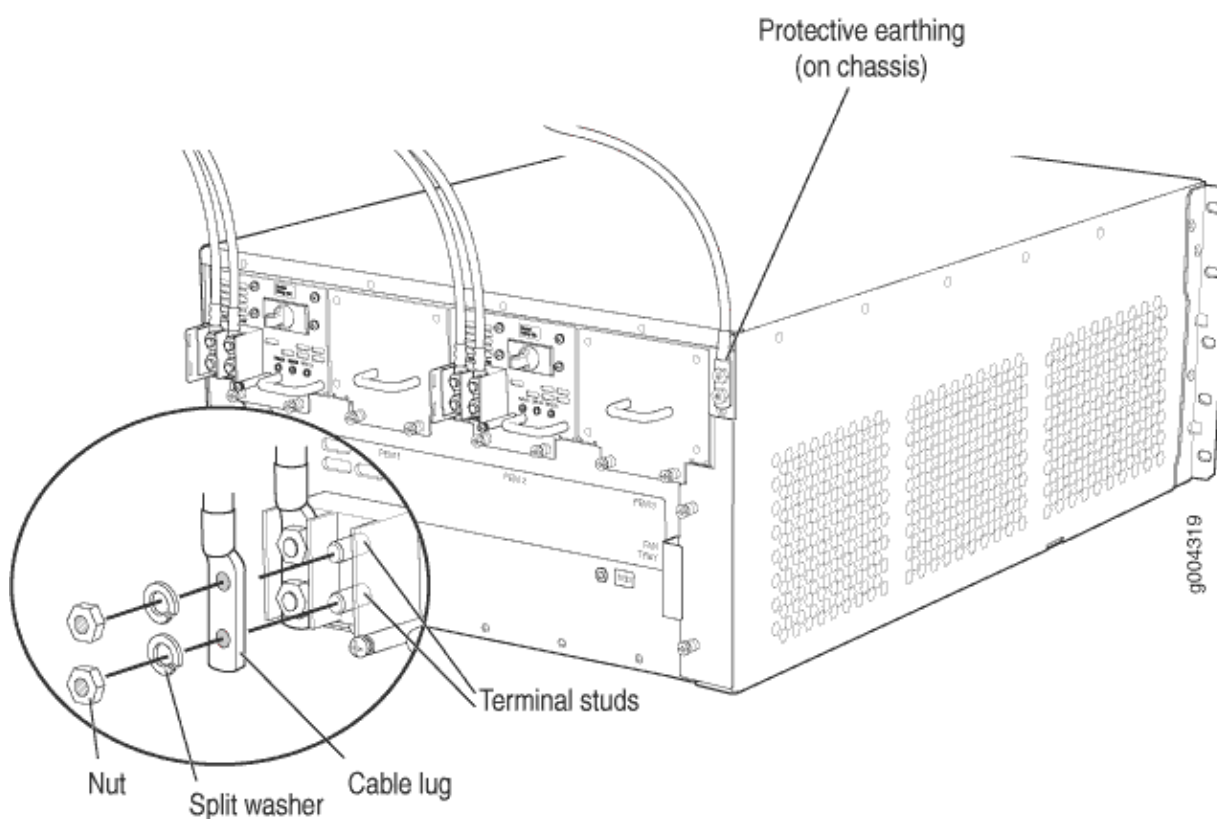

## RELATED DOCUMENTATION

[MX240 DC Power Supply Description | 48](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[DC Power Supply Electrical Specifications for the MX240 Router](#)

[DC Power Wiring Sequence Warning | 538](#)

## Replacing an MX240 DC Power Supply Cable

### IN THIS SECTION

- [Disconnecting an MX240 DC Power Supply Cable | 436](#)
- [Connecting an MX240 DC Power Supply Cable | 436](#)

## Disconnecting an MX240 DC Power Supply Cable



**WARNING:** Before you perform DC power procedures, ensure there is no power to the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To disconnect a power cable for a DC power supply:

1. Switch off the dedicated customer site circuit breaker for the power supply being removed. Follow your site's procedures for ESD.
2. Make sure that the voltage across the DC power source cable leads is 0 V and that there is no chance that the cables might become active during the removal process.
3. Verify that the **INPUT OK** LED on the power supply is not lit.
4. Remove the power cable from the external DC power source.
5. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
6. Switch the DC circuit breaker on the DC power supply faceplate to the off (**O**) position.
7. Remove the clear plastic cover protecting the terminal studs on the faceplate.
8. Remove the nut and washer from each of the terminal studs. (Use a 7/16-in. [11 mm] nut driver or socket wrench.)
9. Remove the cable lug from the terminal studs.
10. Carefully move the power cable out of the way.

## Connecting an MX240 DC Power Supply Cable



**WARNING:** Before you perform DC power procedures, ensure there is no power to the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the off position, and tape the switch handle of the circuit breaker in the off position.

To connect a power cable for a DC power supply:

1. Locate a replacement power cable that meets the specifications.
2. Verify that a licensed electrician has attached a cable lug to the replacement power cable.
3. Verify that the **INPUT OK** LED is off.
4. Install heat-shrink tubing insulation around the power cables.

To install heat-shrink tubing:


- a. Slide the tubing over the portion of the cable where it is attached to the lug barrel. Ensure that tubing covers the end of the wire and the barrel of the lug attached to it.
- b. Shrink the tubing with a heat gun. Ensure that you heat all sides of the tubing evenly so that it shrinks around the cable tightly.

Figure 6 shows the steps to install heat-shrink tubing.



**NOTE:** Do not overheat the tubing.

**Figure 147: How to Install Heat-Shrink Tubing**

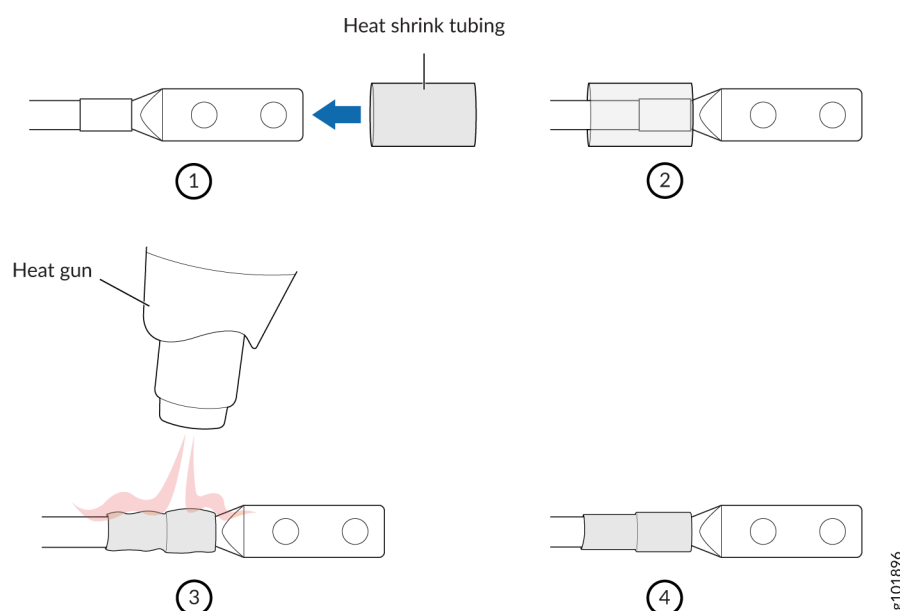

5. Secure the power cable lug to the terminal studs, first with the flat washer, then with the nut. Apply between 23 lb-in. (2.6 Nm) and 25 lb-in. (2.8 Nm) of torque to each nut (see Figure 7). Do not overtighten the nut. (Use a 7/16-in. [11 mm] torque-controlled driver or socket wrench.)




**CAUTION:** Ensure that each power cable lug seats flush against the surface of the terminal block as you are tightening the nuts. Ensure that each nut is properly threaded onto the terminal stud. The nut should be able to spin freely with your fingers when it is first placed onto the terminal stud. Applying installation torque to the nut when improperly threaded may result in damage to the terminal stud.



**CAUTION:** The maximum torque rating of the terminal studs on the DC power supply is 36 lb-in. (4.0 Nm). The terminal studs may be damaged if excessive torque is applied. Use only a torque-controlled driver or socket wrench to tighten nuts on the DC power supply terminal studs.

Figure 148: Connecting DC Power to the Router

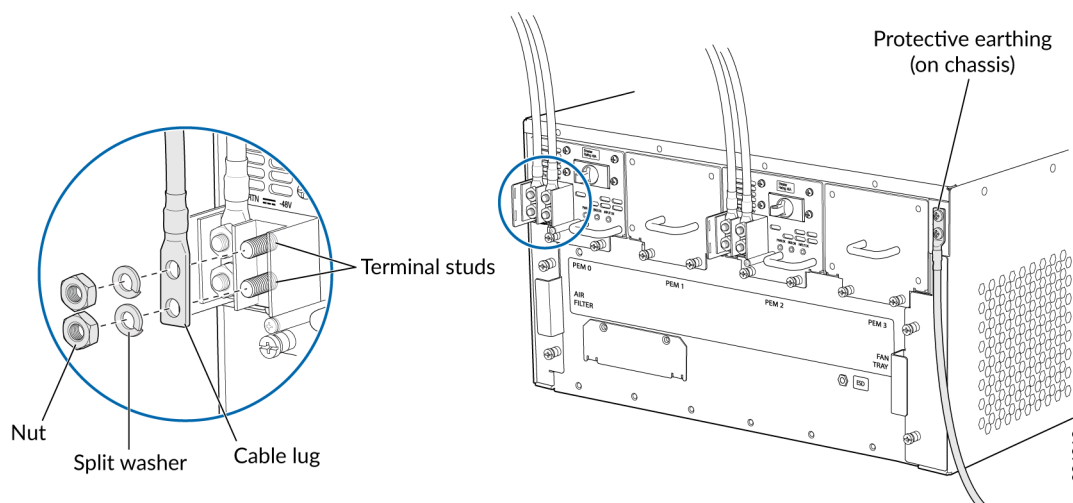

6. Verify that the DC power cable is connected correctly, that it does not touch or block access to router components, and that it does not drape where people could trip on it.
7. Replace the clear plastic cover over the terminal studs on the faceplate.
8. Attach the power cable to the DC power source.
9. Turn on the dedicated customer site circuit breaker to the power supply.
10. Verify that the **INPUT OK** LED on the power supply is lit steadily.
11. On each of the DC power supplies, switch the DC circuit breaker to the center position before moving it to the on (—) position.



**NOTE:** The circuit breaker may bounce back to the off (O) position if you move the breaker too quickly.

Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **PWR OK**, **BRKR ON**, and **INPUT OK** LEDs light green steadily.

## RELATED DOCUMENTATION

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[DC Power Cable Specifications for the MX240 Router | 59](#)

[DC Power Disconnection Warning for M Series, MX Series, and T Series Routers](#)

[MX240 DC Power Electrical Safety Guidelines | 534](#)

# Maintaining MX240 SFP and XFP Transceivers

## IN THIS SECTION

- [Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 439](#)

## Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC

### IN THIS SECTION

- [Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 439](#)
- [Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC | 441](#)

Small form-factor pluggable transceivers (SFPs) and XFPs are optical transceivers that are installed in a DPC, MPC, MIC, or PIC. SFPs and XFPs are hot-insertable and hot-removable.

### Removing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC

Removing an SFP or XFP does not interrupt DPC, MPC, MIC, or PIC functioning, but the removed SFP or XFP no longer receives or transmits data.

To remove an SFP or XFP transceiver (see Figure 1):

1. Have ready a replacement transceiver or a transceiver slot plug, an antistatic mat, and a rubber safety cap for the transceiver.
2. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
3. Label the cables connected to the transceiver so that you can reconnect them correctly later.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

4. Remove the cable connector from the transceiver.
5. Pull the ejector handle out from the transceiver to unlock the transceiver.




**CAUTION:** Make sure that you open the ejector handle completely until you hear it click. This prevents damage to the transceiver.

Use needlenose pliers to pull the ejector handle out from the transceiver.

6. Grasp the transceiver ejector handle, and pull the transceiver approximately 0.5 in. (1.3 cm) out of the DPC, MPC, MIC, or PIC.
7. Using your fingers, grasp the body of the transceiver, and pull it the rest of the way out of the DPC, MPC, MIC, or PIC.

**Figure 149: Removing SFPs or XFPs**

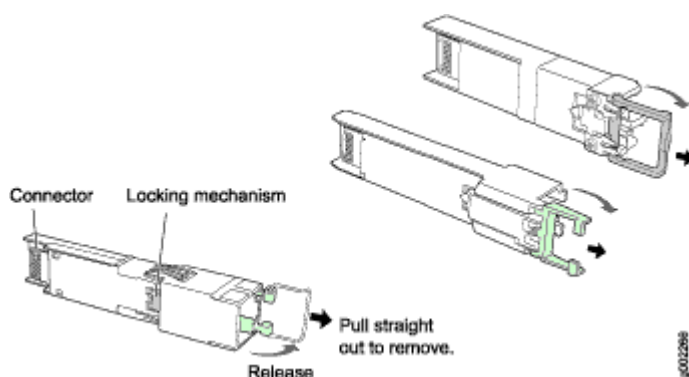

8. Place a rubber safety cap over the transceiver.
9. Place the removed transceiver on an antistatic mat or in an electrostatic bag.





**CAUTION:** After removing a transceiver from the chassis, wait at least 30 seconds before reinserting it or inserting a transceiver into a different slot.

## SEE ALSO

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[MX240 PIC Description | 137](#)

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

[MX240 Modular Interface Card \(MIC\) Description | 155](#)

[Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC | 400](#)

[Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 404](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## Installing an SFP or XFP Transceiver into an MX240 DPC, MPC, MIC, or PIC

To install an SFP or XFP:

1. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
2. Take each transceiver to be installed out of its electrostatic bag, and identify the slot on the component where it will be installed.
3. Verify that each transceiver is covered by a rubber safety cap. If it is not, cover the transceiver with a safety cap.
4. Carefully align the transceiver with the slots in the component. The connectors should face the component.
5. Slide the transceiver until the connector is seated in the component slot. If you are unable to fully insert the transceiver, make sure the connector is facing the right way.
6. Close the ejector handle of the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable. Insert the cable into the transceiver.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to a transceiver emit laser light that can damage your eyes.

8. Verify that the status LEDs on the component faceplate indicate that the SFP or XFP is functioning correctly. For more information about the component LEDs, see the [MX Series Interface Module Reference](#).

## SEE ALSO

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[MX240 PIC Description | 137](#)

[MX240 Modular Port Concentrator \(MPC\) Description | 173](#)

[MX240 Modular Interface Card \(MIC\) Description | 155](#)

[Replacing a Cable on an MX240 DPC, MPC, MIC, or PIC | 400](#)

[Replacing an SFP or XFP Transceiver from an MX240 DPC, MPC, MIC, or PIC | 404](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

## RELATED DOCUMENTATION

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

# Maintaining MX240 Switch Control Boards

## IN THIS SECTION

- [Replacing an MX240 SCB-MX | 443](#)
- [Upgrading an MX240 to Use the SCBE-MX | 446](#)
- [Upgrading an MX240 to Use the SCBE2-MX | 456](#)
- [Upgrading an MX240, MX480, or MX960 Router to Use the SCBE3-MX | 460](#)

## Replacing an MX240 SCB-MX

### IN THIS SECTION

- [Removing an MX240 SCB-MX | 443](#)
- [Installing an MX240 Switch Control Board | 444](#)



**CAUTION:** Before you replace the Switch Control Board, you must take the host subsystem offline. If there is only one host subsystem, taking the host subsystem offline shuts down the router.

Before replacing an SCB-MX, read the guidelines in [Operating and Positioning the MX240 SCB Ejectors](#).

### Removing an MX240 SCB-MX




**CAUTION:** Before removing the Switch Control Board, ensure that you know how to operate the ejector handles properly to avoid damage to the equipment.



**NOTE:** You can remove the Switch Control Board and Routing Engine as a unit, or remove the Routing Engine separately.

1. Take the host subsystem offline.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.
3. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Rotate the ejector handles simultaneously counterclockwise to unseat the Switch Control Board.
5. Grasp the ejector handles, and slide the Switch Control Board about halfway out of the chassis.
6. Place one hand underneath the Switch Control Board to support it, and slide it completely out of the chassis.
7. Place the Switch Control Board on the antistatic mat.
8. If you are not replacing the Switch Control Board now, install a blank panel over the empty slot.

**Figure 150: Removing the Switch Control Board from an MX240 Router**

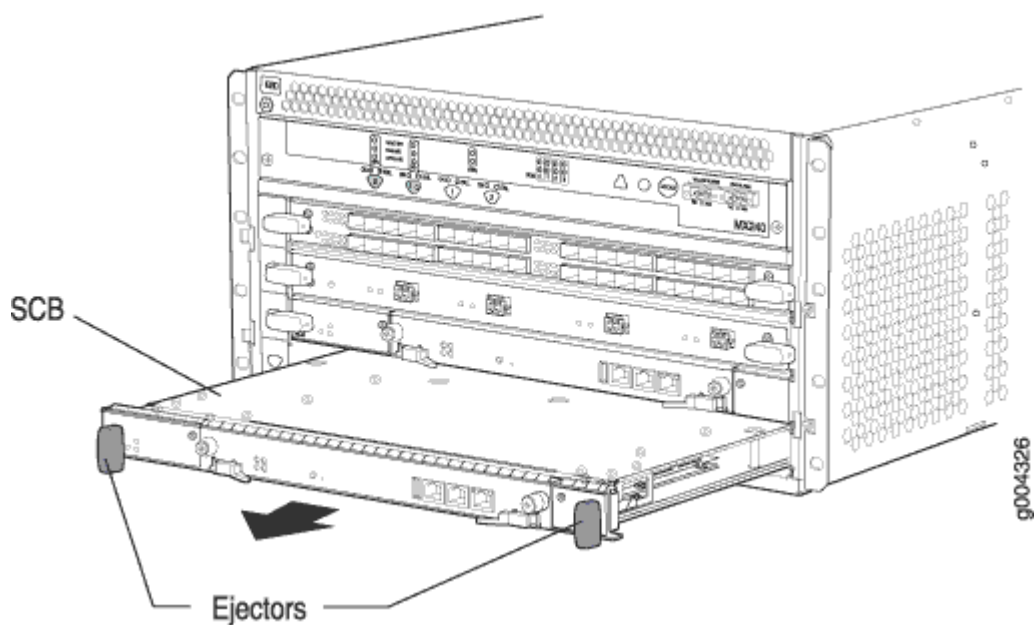


### Installing an MX240 Switch Control Board

To install a Switch Control Board (see [Figure 151 on page 445](#)):

1. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Carefully align the sides of the Switch Control Board with the guides inside the chassis.
3. Slide the Switch Control Board into the chassis until you feel resistance, carefully ensuring that it is correctly aligned.
4. Grasp both ejector handles, and rotate them simultaneously clockwise until the Switch Control Board is fully seated.
5. Place the ejector handles in the proper position, horizontally and toward the center of the board.

Figure 151: Installing a Switch Control Board in the MX480

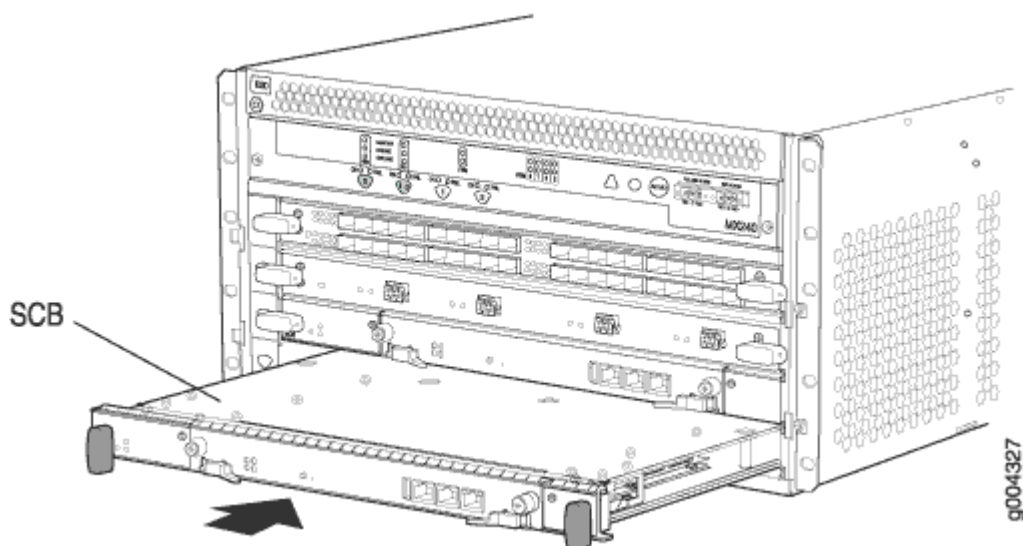

6. Check the LEDs on the Switch Control Board faceplate to verify that it is functioning normally.
  - The green **OK/FAIL** LED should light steadily a few minutes after the Switch Control Board is installed.
  - If the **OK/FAIL** LED is red, remove and install the Switch Control Board again. If the **OK/FAIL** LED still lights steadily, the Switch Control Board is not functioning properly. Contact your customer support representative.
7. Check the status of the Switch Control Board using the **show chassis environment cb** command:

```

user@host> show chassis environment cb
CB 0 status:
State                Online Master
Temperature          25 degrees C / 77 degrees F
Power 1
  1.2 V               1198 mV
  1.5 V               1508 mV
  1.8 V               1830 mV
  2.5 V               5059 mV
  3.3 V               6593 mV
  5.0 V               5111 mV
  12.0 V              12181 mV
  1.25 V              1250 mV
  3.3 V SM3           6587 mV
  5 V RE              5078 mV
  12 V RE             12026 mV
Power 2

```

```

11.3 V bias PEM          11253 mV
4.6 V bias MidPlane      4827 mV
11.3 V bias FPD          11408 mV
11.3 V bias POE 0        11446 mV
11.3 V bias POE 1        11408 mV
Bus Revision              6
FPGA Revision             0
CB 1 status:
State                     Online Standby
Temperature                26 degrees C / 78 degrees F
Power 1
  1.2 V                   1211 mV
  1.5 V                   1517 mV
  1.8 V                   1817 mV
  2.5 V                   2507 mV
  3.3 V                   3312 mV
  5.0 V                   5136 mV
  12.0 V                  12142 mV
  1.25 V                  1260 mV
  3.3 V SM3               3306 mV
  5 V RE                  5085 mV
  12 V RE                 11968 mV
Power 2
  11.3 V bias PEM         11369 mV
  4.6 V bias MidPlane     4814 mV
  11.3 V bias FPD         11427 mV
  11.3 V bias POE 0       11350 mV
  11.3 V bias POE 1       11330 mV
Bus Revision              39
FPGA Revision             1

```

## Upgrading an MX240 to Use the SCBE-MX

### IN THIS SECTION

- [Prepare for the SCB-MX Upgrade | 447](#)
- [Upgrade the MX240 SCB-MX in the Backup Routing Engine | 448](#)

- Upgrade the MX240 SCB-MX in the Primary Routing Engine | 450
- Complete the SCB-MX Upgrade | 452

## Prepare for the SCB-MX Upgrade



**NOTE:** Do not make other changes to the CLI during the entire upgrade process. To insure you don't inadvertently change the CLI, open a telnet session to the primary RE CLI operational mode and issue the `configure exclusive` command. This command locks the configuration procedure.



**TIP:** To prevent traffic loss during the upgrade process, we recommend that you operate the line cards at 50% line rate. This 50% limit must be maintained per PFE on each line card.

To prepare the MX240 router for the Enhanced MX Switch Control Board (SCBE-MX) upgrade:

1. Verify that the system runs Junos OS Release 11.4 or later by issuing the `show version` command on the primary router:

```
user@host> show version
Model: mx240
Junos Base OS Software Suite [11.4-20110530];
```



**NOTE:** The SCBE-MX is supported only in Junos OS Release 11.4 or later.

The latest software ensures a healthy system—that is—Routing Engines, control boards, and FPCs, before the upgrade.

2. Verify that SCB-MX boards are installed:

```
user@host> show chassis hardware
```

Item	Version	Part Number	Serial Number	Description
CB0	REV 07	710-021523	ABBC8281	MX SCB
CB1	REV 07	710-021523	ABBC8323	MX SCB

SCB-MX details are displayed as above, along with other hardware components. The MX240 router has only two SCB-MXs, and each SCB-MX has four fabric planes.

3. Establish console connections to both Routing Engines. You can use a telnet session to connect to the router console by issuing the <router name>-con command. For example, if the router name is juniper, you can connect to RE0 and RE1 consoles by issuing the telnet juniper-con and telnet juniper1-con commands.
4. Ensure that graceful switchover (GRES), commit synchronize (required for nonstop routing), and nonstop routing (NSR) are enabled or configured by running the set chassis redundancy graceful-switchover, set system commit synchronize, set routing-options nonstop-routing commands.



**NOTE:** These commands are mandatory for this upgrade and may be removed, if desired, after the upgrade.

5. Set the upgrade flag on, and start the SCB-MX upgrade by issuing the set chassis state cb-upgrade on command:

```
user@host# set chassis state cb-upgrade on
user@host# configure
user@host# commit
```

6. Determine the order to replace the existing SCB-MXs with upgraded ones. SCB 0 is associated with RE0 and SCB1 is associated with RE1.



**NOTE:** Do not add or remove any router hardware during the upgrade procedure.

## Upgrade the MX240 SCB-MX in the Backup Routing Engine



**TIP:** The MX240 has two slots for an SCB-MX: SCB 0 and SCB 1. These correspond to RE0 and RE1, respectively, where SCB 1 is the first SCB-MX.

To upgrade the SCB-MX in the backup Routing Engine (SCB 1):

1. Power down the backup Routing Engine from the primary Routing Engine by issuing the request system power-off other-routing-engine command.
2. Verify that the Routing Engine is powered down by issuing the show chassis routing-engine 1 command. The slot of the Routing Engine may be 0 or 1, and is shown as 1 in this example:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
```



```
Slot 1:
Current State    Present
```

Verify that the Current State is Present, which indicates that the Routing Engine is offline.

3. Take the fabric plane offline by issuing the request `chassis fabric plane 4 offline` command. SCB1 has four fabric planes numbered, 4, 5, 6, and 7.
4. Verify that the fabric plane is offline:

```
user@host> show chassis fabric summary
Plane      State      Uptime
  4         Offline
  5         Online      1 hour, 15 minutes, 35 seconds
```

Verify that the 'State' of Plane 4 is Offline.

5. Take the remaining fabric planes offline by issuing the request `chassis fabric plane 5/6/7 offline` command—that is, by changing the fabric plane number each time. Verify that the fabric planes are offline by issuing the command given in Step 2.
6. Take the SCB-MX in slot 1 offline by issuing the request `chassis cb offline slot 1` command.
7. Verify that the control SCB-MX is offline:

```
user@host> show chassis environment cb 1
CB 1 status:
State      Offline
Power 1     Disabled
Power 2     Disabled
```

8. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
9. Remove and replace SCB 1 on the router with the SCBE-MX. Use the replacement procedure described in [Replacing an MX240 SCB-MX](#).
10. Verify that the installation is successful and the SCBE-MX is online:

```
user@host> show chassis environment cb 1
CB 1 status
State      Online
Temperature 30 degrees C / 86 degrees F
```

Other details, such as power, are also displayed, along with the state.

11. Verify that the fabric planes come online correctly:

```
user@host> show chassis fabric summary
Plane      State      Uptime
4    Online    2 minutes, 25 seconds
5    Online    2 minutes, 15 seconds
6    Online    2 minutes, 3 seconds
7    Online    1 minute, 49 seconds
```

12. Verify that the backup Routing Engine is back online:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
Slot 1:
Current State      Backup
```

13. Verify the alarms:

```
user@host> show chassis alarms
Alarm Time      Class      Description
2011-06-01 13:26:56 EDT  Major      CB fabrics are of mixed types
```

Because only one SCB-MX has been upgraded, the alarm indicates that the SCB-MXs are of mixed type. This alarm is cleared after all the control boards are upgraded.

## Upgrade the MX240 SCB-MX in the Primary Routing Engine

1. Issue the request chassis routing-engine master switch command so that the backup RE becomes the primary RE. This ensures a Graceful RE Switchover (GRES) to gracefully switch between the primary and backup Routing Engines.
2. Log in to the new primary Routing Engine after the switchover.
3. Switch the configuration mode to ensure that you are still in configure exclusive mode by issuing the exit command and then the configure exclusive command, from the old primary Routing Engine.
4. Log in to the current primary Routing Engine again and issue the configure exclusive command.
5. Issue the request system power-off other-routing-engine command to power down the backup Routing Engine from the primary Routing Engine.

6. Issue the `show chassis routing-engine 0` command to verify that the Routing Engine is powered down.

```
user@host> show chassis routing-engine 0
Routing Engine Status:
Slot 0:
Current State      Present
```

Verify that the Current State is Present, which indicates that the Routing Engine is offline.

7. Issue the `request chassis fabric plane 0 offline` command to take the first fabric plane of the backup Routing Engine offline. SCB 0 has four fabric planes numbered, 0, 1, 2, and 3.
8. Issue the `show chassis fabric summary` command to verify that the fabric plane is offline.

```
user@host> show chassis fabric summary
Plane   State   Uptime
0       Offline
1       Online 3 minutes, 45 seconds
```

Verify that the State of plane 0 is Offline.

9. Take the remaining fabric planes offline by issuing the `request chassis fabric plane 1/2/3 offline` command—that is, by changing the fabric plane number each time.
10. Issue the `configure exclusive` command to verify that the fabric planes are offline.
11. Issue the `request chassis cb offline slot 0` command to take the SCB-MX in slot 0 offline.
12. Issue the `show chassis environment cb 0` command to verify that the SCB is offline.

```
user@host> show chassis environment cb 0
CB 0 status:
State      Offline
Power 1    Disabled
Power 2    Disabled
```

13. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
14. Remove and replace the offline SCB-MX on the Routing Engine with the SCBE-MX. Use the replacement procedure described in Replacing an MX240 SCB-MX.

15. Issue the `show chassis environment cb 0` command to verify that the installation is successful and SCB 0 is online:

```
user@host> show chassis environment cb 0
CB 0 status
State          Online
Temperature    30 degrees C / 86 degrees F
```

Other details such as power are also displayed along with the state.

16. Issue the `show chassis fabric summary` command to verify that the fabric planes come online correctly:

```
user@host> show chassis fabric summary
Plane  State  Uptime
0      Online 2 minutes, 5 seconds
1      Online 1 minute, 55 seconds
2      Online 1 minute, 43 seconds
3      Online 1 minute, 33 seconds
```

17. Issue the `show chassis routing-engine 0` command to verify that the backup Routing Engine is back online:

```
user@host> show chassis routing-engine 0
Routing Engine Status:
Slot 0:
Current State      Backup
```

18. Issue the `show chassis alarms` command to verify the alarms:

```
user@host> show chassis alarms
Alarm Time    Class    Description
2011-06-01 13:26:56 EDT Major CB fabric links require upgrade/training
2011-06-01 12:10:41 EDT Major Require a fan tray upgrade
```

The major alarm has changed from CB fabrics are of mixed types to CB fabric links require upgrade/training, as a SCB-MX requires training to change the link speed from 3G to 6G for the SCBE-MX. This alarm is displayed until the 3G to 6G link transition is completed.

## Complete the SCB-MX Upgrade

1. Check to see if there are any MPCs running at 3G instead of 6G:

```
user@host> request chassis fabric upgrade-bandwidth info
```

Slot	State
0	Upgrade not supported
1	Needs upgrade
2	Empty
3	Empty
4	Empty
5	Empty

In this example, the results indicate that slot 0 does not support the upgrade and slot 1 needs to be upgraded.

2. Issue the `request chassis fabric upgrade-bandwidth fpc all` command to upgrade the bandwidth of all MPCs. If you want to control the MPC line card upgrade, go to Step 3.



**CAUTION:** Use this command only if you are not concerned with the slot upgrade order or if only one old MPC is present in the chassis. Running this command may result in a loss of traffic across the MPC. Using this method may increase the traffic loss, because it does not consider any redundancy or graceful switchover strategies that you may have configured on the system.

3. Issue the `request chassis fabric upgrade-bandwidth fpc slot 1` command to upgrade the MPC in slot 1.
4. Verify that the MPC is upgraded:

```
user@host> request chassis fabric upgrade-bandwidth fpc slot 1
```

Slot	State
0	Upgrade not supported
1	Upgraded
2	Empty

5. Verify the state of the fabric planes for all MPCs:

```
user@host> show chassis fabric summary
```

Plane	State	Uptime
0	Spare	21 seconds
1	Spare	12 seconds
2	Online	12 minutes
3	Online	12 minutes

```

4   Online   30 minutes
5   Online   30 minutes

```

6. Verify the state of the MPCs:

```

user@host> show chassis fabric fpcs
FPC 1
PFE #0
  Plane 0: Links ok
  Plane 1: Links ok
  Plane 2: Plane enabled
  Plane 3: Plane enabled
  Plane 4: Plane enabled
  Plane 5: Plane enabled
PFE #1
  Plane 0: Links ok
  Plane 1: Links ok
  Plane 2: Plane enabled
  Plane 3: Plane enabled
  Plane 4: Plane enabled
  Plane 5: Plane enabled
PFE #2
  Plane 0: Links ok
  Plane 1: Links ok
  Plane 2: Plane enabled
  Plane 3: Plane enabled
  Plane 4: Plane enabled
  Plane 5: Plane enabled
PFE #3
  Plane 0: Links ok
  Plane 1: Links ok
  Plane 2: Plane enabled
  Plane 3: Plane enabled
  Plane 4: Plane enabled
  Plane 5: Plane enabled

```

Fabric plane details of all MPCs are also displayed.

7. Verify if the `show chassis fabric summary` command output shows fabric planes in the 'check' state. This indicates that the fabric plane has an error. You can try to recover the fabric plane to normal operation by issuing the `request chassis fabric plane <#> offline` command, followed by the `request chassis fabric plane <#> online` command, where <#> equals the fabric plane in error.



**NOTE:** After you issue the request chassis fabric plane <#> offline and request chassis fabric plane <#> online commands, issue the show chassis fabric summary command to verify that the fabric plane errors are rectified and to verify the current state of the fabric planes.

8. Verify if any major alarms are displayed:

```
user@host> show chassis alarms
Alarm Time      Class    Description
2011-06-01 13:37:43 EDT  Minor    Require a fan tray upgrade
2011-06-01 13:37:26 EDT  Minor    Backup RE Active
```

In this example, the major alarms are no longer displayed, and the upgrade is successfully completed.

9. Disable the upgrade configuration by issuing the set chassis state cb-upgrade off command and then the commit command.
10. You can delete that command by issuing the delete chassis state cb-upgrade command and then the commit command.
11. Verify the SCBE-MXs before you finish by issuing the show chassis hardware command:

```
user@host> show chassis hardware
Item    Version    Part Number    Serial Number    Description
CB0     REV 02     750-031391     YE8505           Enhanced MX SCB
CB1     REV 07     710-031391     YL6769           Enhanced MX SCB
```

## SEE ALSO

| *SCBE-MX Description*

## Upgrading an MX240 to Use the SCBE2-MX

### IN THIS SECTION

- [Prepare the MX240 Router for the SCBE2-MX Upgrade | 457](#)
- [Power Off the MX240 Router | 457](#)
- [Remove the MX240 Routing Engine | 458](#)
- [Install the MX240 Routing Engine into the SCBE2-MX | 458](#)
- [Power On the MX240 Router | 458](#)
- [Complete the SCBE2-MX Upgrade | 459](#)

Consider the following scenarios when upgrading an MX240 SCB-MX or SCBE-MX to use the SCBE2-MX:

Scenario 1: SCBE2-MX; Routing Engine with Junos OS Release 13.3R1 or later installed.

- Replace the SCB-MXs. Ensure that you replace the SCB-MXs at the same time.
- Ensure that Enhanced IP or Enhanced Ethernet Network Services mode is configured before you power on the router.

Scenario 2: SCB-MX or SCBE-MX; existing Routing Engine with a Junos OS Release 13.3R1 or earlier installed.

- Upgrade the Routing Engine (**RE0** and **RE1**) software to Junos OS Release 13.3 or later.
- Configure Enhanced IP or Enhanced Ethernet Network Services mode.
- Replace the SCB-MXs. Ensure that you replace the SCB-MXs at the same time.

Scenario 3: Failed SCB-MX or SCBE-MX; Routing Engine with a Junos OS Release 13.3R1 or earlier installed.

- Upgrade the software on the Routing Engine hosting the failed SCB-MX or SCBE-MX with Junos OS Release 13.3R1 or later.
- Replace the SCB-MXs. Ensure that you replace the SCB-MXs at the same time.
- Upgrade the software on the Routing Engine hosting the SCBE2-MX with Junos OS Release 13.3R1 or later.
- Configure Enhanced IP or Enhanced Ethernet Network Services mode.



To upgrade the MX240 to use the SCBE2-MX, perform the following steps:



**NOTE:** The SCBE2-MX does not support smooth upgrade.

## Prepare the MX240 Router for the SCBE2-MX Upgrade

Verify that the system runs Junos OS Release 13.3 or later by issuing the **show version** command on the primary router.

```
user@host> show version
Model: mx240
Junos Base OS Software Suite [13.3-yyyymmdd];
...
```



**NOTE:** The SCBE2-MX is supported only on:

- Junos OS Release 13.3R1 or later
- Network Services Mode: Enhanced-IP

The latest software ensures a healthy system—that is, a system that comprises Routing Engines, control boards, and FPCs—before the upgrade.

For information about how to verify and upgrade the Junos OS, see the *Junos OS Installation and Upgrade Guide*.

## Power Off the MX240 Router



**NOTE:** After turning off the power supply, wait at least 60 seconds before turning it back on.

1. On the external management device connected to the Routing Engine, issue the request `system halt both-routing-engines operational mode` command. This command shuts down the Routing Engines cleanly, so that their state information is preserved. (If the router contains only one Routing Engine, issue the request `system halt` command.)

```
user@host> request system halt both-routing-engines
```

2. Wait until a message appears on the console confirming that the operating system has halted.

3. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
4. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power supply faceplate to the off **(O)** position.

### **Remove the MX240 Routing Engine**

1. Remove the cables connected to the Routing Engine.
2. Place an electrostatic bag or antistatic mat on a flat, stable surface.
3. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
4. Loosen the captive screws on the top and bottom of the Routing Engine.
5. Flip the ejector handles outward to unseat the Routing Engine.
6. Grasp the Routing Engine by the ejector handles, and slide it about halfway out of the chassis.
7. Place one hand underneath the Routing Engine to support it, and slide it completely out of the chassis.
8. Place the Routing Engine on the antistatic mat.

### **Install the MX240 Routing Engine into the SCBE2-MX**

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
2. Ensure that the ejector handles are not in the locked position. If necessary, flip the ejector handles outward.
3. Place one hand underneath the Routing Engine to support it.
4. Carefully align the sides of the Routing Engine with the guides inside the opening on the SCBE2-MX.
5. Slide the Routing Engine into the SCBE2-MX until you feel resistance and then press the faceplate of the Routing Engine until it engages the connectors.
6. Press both of the ejector handles inward to seat the Routing Engine.
7. Tighten the captive screws on the top and bottom of the Routing Engine.
8. Connect the management device cables to the Routing Engine.

### **Power On the MX240 Router**

1. Verify that the power supplies are fully inserted in the chassis.
2. Verify that each AC power cord is securely inserted into its appliance inlet.
3. Verify that an external management device is connected to one of the Routing Engine ports (**AUX**, **CONSOLE**, or **ETHERNET**).
4. Turn on the power to the external management device.

5. Switch on the dedicated customer-site circuit breakers. Follow the ESD and safety instructions for your site.
6. Attach an ESD grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
7. Move the AC input switch on the chassis above the AC power supply or the DC circuit breaker on each DC power-supply faceplate to the off (—) position.
8. Check that the AC or the DC power supply is correctly installed and functioning normally. Verify that the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.



**NOTE:** After a power supply is powered on, it can take up to 60 seconds for status indicators—such as the status LEDs on the power supply and the `show chassis` command display—to indicate that the power supply is functioning normally. Ignore error indicators that appear during the first 60 seconds.

If any of the status LEDs indicates that the power supply is not functioning normally, repeat the installation and cabling procedures.

9. On the external management device connected to the Routing Engine, monitor the startup process to verify that the system has booted properly.



**NOTE:** If the system is completely powered off when you power on the power supply, the Routing Engine boots as the power supply completes its startup sequence. Normally, the router boots from the Junos OS on the CompactFlash card. After turning on a power supply, wait at least 60 seconds before turning it off.

## Complete the SCBE2-MX Upgrade

1. Verify that the installation is successful and the SCBE2-MX is online:

```
user@host> show chassis environment cb 0
CB 0 status
State      Online
Temperature 30 degrees C / 86 degrees F
...
user@host> show chassis environment cb 1
CB 1 status
State      Online
Temperature 30 degrees C / 86 degrees F
...
```

Other details, such as, temperature, power, etc are also displayed along with the state.

2. Verify that the fabric planes come online correctly:

```
user@host> show chassis fabric summary
Plane  State    Uptime
  0      Online  2 days, 19 hours, 10 minutes, 9 seconds
  1      Online  2 days, 19 hours, 10 minutes, 9 seconds
...
```

3. Verify that the backup Routing Engine is back online:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
Slot 1:
Current State      Backup
...
```

4. Verify the SCBE2-MXs are installed:

```
user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
CB 0          REV 08   750-048307   CABC9829      Enhanced MX SCB 2
CB 1          REV 08   750-048307   CABC9828      Enhanced MX SCB 2
...
```

## Upgrading an MX240, MX480, or MX960 Router to Use the SCBE3-MX

### IN THIS SECTION

- [Upgrade the Routing Engine | 461](#)
- [Install the Routing Engine into the SCBE3-MX | 461](#)
- [Install the SCBE3-MX into the Router Chassis | 462](#)
- [Complete the SCBE3-MX Upgrade | 462](#)

## Upgrade the Routing Engine



**NOTE:** Ensure that you power down the router before you begin the upgrade from SCBE2 to SCBE3. See [Powering off the MX series router](#) for instructions on powering down the router.

If you are upgrading to the SCBE3-MX from an SCBE2-MX or older SCB, the Routing Engine must be upgraded to the first supported Junos release for the SCBE3-MX (18.4R1) before you install it in the SCBE3-MX. Also, we recommend that you update the recovery snapshot with the 18.4R1 or later image before you begin the upgrade. If the Routing Engine fails to boot from the primary image, it will attempt to boot from the recovery image. Since the older recovery image does not support the SCBE3-MX, the Routing Engine will crash if it attempts to boot from the old recovery image.



**CAUTION:** If you plug the Routing Engine into the SCBE3-MX without first upgrading Junos to 18.4R1 or later, Junos might crash and go to a db prompt. Should this occur, you'll need to recover the router by copying the Junos software image for the 18.4R1 or later release and then booting from the USB drive to install 18.4R1 Junos on the SCBE3-MX. The USB install will wipe out the router configuration and all user files on the Routing Engine.

To upgrade the Routing Engine while it's plugged into an SCBE2-MX or older SCB:

1. Download the software related to your MX Series Routing Engine.
2. If you have not already done so, connect to the console port on the switch from your management device, and log in to the Junos OS CLI.
3. (Optional) Back up the current software configuration to a second storage option. See the [Junos OS Installation and Upgrade Guide](#) for instructions on performing this task.
4. Install the new software.
5. Reboot the Routing Engine and wait for it to boot with the new Routing Engine image.
6. Install the SCBE3-MX into the Router Chassis. See:
  - ["Maintaining MX240 SFP and XFP Transceivers" on page 439](#)
  - [Maintaining MX480 Switch Control Boards](#)
  - [Installing an MX960 Switch Control Board](#)

## Install the Routing Engine into the SCBE3-MX

Refer to the Routing Engine installation procedure for your MX model:

["Installing an MX240 Routing Engine" on page 323](#)

[Installing an MX480 Routing Engine](#)

[Installing an MX960 Routing Engine](#)

## Install the SCBE3-MX into the Router Chassis

Refer to the Switch Control Board installation procedure for your MX model:

Installing an MX240 Switch Control Board

[Installing an MX480 Switch Control Board](#)

[Installing an MX960 Switch Control Board](#)

## Complete the SCBE3-MX Upgrade

1. Verify that the installation is successful and the SCBE3-MX is online:

```
user@host> show chassis environment cb 0
CB 0 status
State      Online
Temperature 30 degrees C / 86 degrees F
...
user@host> show chassis environment cb 1
CB 1 status
State      Online
Temperature 30 degrees C / 86 degrees F
...
```

Other details, such as, temperature, power, etc are also displayed along with the state.

2. Verify that the fabric planes come online correctly:

```
user@host> show chassis fabric summary
Plane  State  Uptime
0      Online 2 days, 19 hours, 10 minutes, 9 seconds
1      Online 2 days, 19 hours, 10 minutes, 9 seconds
...
```

3. Verify that the backup Routing Engine is back online:

```
user@host> show chassis routing-engine 1
Routing Engine Status:
Slot 1:
```

Current State	Backup
...	

4. Verify the SCBE3-MXs are installed:

```
user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
CB 0          REV 29   750-070866   CAKP0543       Enhanced MX SCB 3
CB 1          REV 29   750-070866   CAKP0541       Enhanced MX SCB 3
...
```

RELATED DOCUMENTATION

| *SCBE3-MX Description*

# 6

CHAPTER

## Troubleshooting Hardware

---

### IN THIS CHAPTER

- [Troubleshooting the MX240 Components | 465](#)
-



# Troubleshooting the MX240 Components

## IN THIS SECTION

- [Troubleshooting Resources for MX240 Routers | 465](#)
- [Troubleshooting the MX240 Cooling System | 468](#)
- [Troubleshooting the MX240 DPCs | 469](#)
- [Troubleshooting the MX240 FPCs | 472](#)
- [Troubleshooting the MX240 MICs | 475](#)
- [Troubleshooting the MX240 MPCs | 476](#)
- [Troubleshooting the MX240 PICs | 478](#)
- [Troubleshooting the MX240 Power System | 479](#)

## Troubleshooting Resources for MX240 Routers

### IN THIS SECTION

- [Command-Line Interface | 465](#)
- [Chassis and Interface Alarm Messages | 466](#)
- [Alarm Relay Contacts | 466](#)
- [Craft Interface LEDs | 466](#)
- [Component LEDs | 467](#)
- [Juniper Networks Technical Assistance Center | 468](#)

## Command-Line Interface

The Junos OS command-line interface (CLI) is the primary tool for controlling and troubleshooting router hardware, Junos OS, routing protocols, and network connectivity. CLI commands display information from routing tables, information specific to routing protocols, and information about network connectivity derived from the ping and traceroute utilities.

You enter CLI commands on one or more external management devices connected to ports on the Routing Engine.

For information about using the CLI to troubleshoot Junos OS, see the appropriate Junos OS configuration guide.

## Chassis and Interface Alarm Messages

When the Routing Engine detects an alarm condition, it lights the red or yellow alarm LED on the craft interface as appropriate. To view a more detailed description of the alarm cause, issue the `show chassis alarms` command:

```
user@host> show chassis alarms
```

There are two classes of alarm messages:

- Chassis alarms—Indicate a problem with a chassis component such as the cooling system or power supplies.
- Interface alarms—Indicate a problem with a specific network interface.

## Alarm Relay Contacts

The craft interface has two alarm relay contacts for connecting the router to external alarm devices. Whenever a system condition triggers either the red or yellow alarm on the craft interface, the alarm relay contacts are also activated. The alarm relay contacts are located on the upper right of the craft interface.

## Craft Interface LEDs

The craft interface is the panel on the front of the router located above the DPC cards that contains LEDs and buttons that allow you to troubleshoot the router.

LEDs on the craft interface include the following:

- Alarm LEDs—One large red circular LED and one large yellow triangular LED, located on the upper right of the craft interface, indicate two levels of alarm conditions. The circular red LED lights to indicate a critical condition that can result in a system shutdown. The triangular yellow LED lights to indicate a less severe condition that requires monitoring or maintenance. Both LEDs can be lit simultaneously. A condition that causes an alarm LED to light also activates the corresponding alarm relay contact on the craft interface.

- Host subsystem LEDs—Three LEDs, **MASTER**, **ONLINE**, and **OFFLINE**, indicate the status of the host subsystem. A green **MASTER** LED indicates that the host is functioning as the primary. The **ONLINE** LED indicates that the host is online. The **OFFLINE** LED indicates that the host is installed but the routing engine is offline. The host subsystem LEDs are located on the left of the craft interface and are labeled **RE0** and **RE1**.
- Power supply LEDs—Two LEDs (**PEM**) indicate the status of each power supply. Green indicates that the power supply is functioning normally. Red indicates that the power supply is not functioning normally. The power supply LEDs are located in the center craft interface, and are labeled **0** through **3**.
- DPC LEDs—Two LEDs, **OK** and **FAIL**, indicate the status of each DPC. Green indicates OK and red indicates a failure. The DPC LEDs are located along the bottom of the craft interface.
- FPC LEDs—Two LEDs, **OK** and **FAIL**, indicate the status of an FPC. Green indicates OK and red indicates a failure. The FPC LEDs are located along the bottom of the craft interface.
- SCB LEDs—Two LEDs, **OK** and **FAIL**, indicate the status of each SCB. Green indicates OK and red indicates a failure. The SCB LEDs are located on the left of the craft interface along the bottom.
- Fan LEDs—Two LEDs indicate the status of the fans. Green indicates the fans are functioning normally and red indicates a fan has failed. The fan LEDs are located on the upper left of the craft interface.

## Component LEDs

The following LEDs are located on various router components and display the status of those components:

- DPC LED—One LED labeled **OK/FAIL** on each DPC faceplate indicates the DPC's status. For more information, see the [MX Series Interface Module Reference](#).
- FPC LED—One LED labeled **OK/FAIL** on each FPC faceplate indicates the FPC's status.
- PIC LED—One LED labeled **OK/FAIL** on each PIC faceplate indicates the PIC's status. For more information, see the [MX Series Interface Module Reference](#).
- SCB LEDs—Three LEDs, labeled **FABRIC ACTIVE**, **FABRIC ONLY**, and **OK/FAIL**, on each SCB faceplate indicate the status of the SCB. If no LEDs are lit, the master RE might still be booting or the SCB is not receiving power.
- Routing Engine LEDs—Four LEDs, labeled **MASTER**, **HDD**, **ONLINE**, and **FAIL** on each Routing Engine faceplate indicate the status of the Routing Engine and hard disk drive.
- Power supply LEDs—Two LEDs on each power supply faceplate indicate the status of that power supply.

# Juniper Networks Technical Assistance Center

If you need assistance during troubleshooting, you can contact the Juniper Networks Technical Assistance Center (JTAC) by using the Web or by telephone. For more information see ["Contact Customer Support"](#) on page 485.

## SEE ALSO

<a href="#">MX240 SCB-MX Description</a>
<a href="#">MX240 Routing Engine Description   64</a>
<a href="#">MX240 Craft Interface Overview   25</a>
<a href="#">MX240 Component LEDs on the Craft Interface   27</a>
<a href="#">MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button   26</a>
<a href="#">MX240 Alarm Relay Contacts on the Craft Interface   26</a>
<a href="#">MX240 AC Power Supply Description   39</a>
<a href="#">MX240 DC Power Supply Description   48</a>

## Troubleshooting the MX240 Cooling System

### IN THIS SECTION

- Problem | 468
- Solution | 468

### Problem

#### Description

The fans in the fan tray are not functioning normally.

#### Solution

Follow these guidelines to troubleshoot the fans:

- Check the fan LEDs and alarm LEDs on the craft interface.
- If the red alarm LED on the craft interface lights, use the CLI to get information about the source of an alarm condition: **user@host> show chassis alarms**.

If the CLI output lists only one fan failure, and the other fans are functioning normally, the fan is most likely faulty and you must replace the fan tray.

- Place your hand near the exhaust vents at the side of the chassis to determine whether the fans are pushing air out of the chassis.
- If a fan tray is removed, a yellow alarm and a red alarm occur.
- The following conditions automatically cause the fans to run at full speed and also trigger the indicated alarm:
  - A fan fails (red alarm).
  - The router temperature exceeds the “temperature warm” threshold (yellow alarm).
  - The temperature of the router exceeds the maximum (“temperature hot”) threshold (red alarm and automatic shutdown of the power supplies).

## SEE ALSO

[MX240 Alarm LEDs and Alarm Cutoff/Lamp Test Button | 26](#)

[MX240 Cooling System Description | 31](#)

[Maintaining the MX240 Fan Tray | 313](#)

## Troubleshooting the MX240 DPCs

### IN THIS SECTION

- [Problem | 470](#)
- [Solution | 470](#)

## Problem

## Description

The DPCs are not functioning normally.

## Solution

- Monitor the green LED labeled **OK** above the DPC on the craft interface as soon as a DPC is seated in an operating router.

The Routing Engine downloads the DPC software to it under two conditions: the DPC is present when the Routing Engine boots Junos OS, and the DPC is installed and requested online through the CLI or push button on the front panel. The DPC then runs diagnostics, during which the **OK** LED blinks. When the DPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the DPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.
- Check the **OK/FAIL** LED on the DPC and **OK** and **FAIL** DPC LEDs on the craft interface. When the DPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the **show chassis fpc** command to check the status of installed DPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the DPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%)	Memory	Utilization (%)		
			Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Online	41	9	0	1024	15	57
1	Online	43	5	0	1024	16	57
2	Online	43	11	0	1024	16	57
3	Empty						
4	Empty						
5	Online	42	6	0	1024	16	57



**NOTE:** The **show chassis fpc** command displays the status of the DPCs.

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

Slot 2 information:

State	Online
Temperature	22 degrees C / 71 degrees F
Total CPU DRAM	1024 MB
Total SRAM	256 MB
Total SDRAM	0 MB
Start time	2006-11-03 07:35:40 PST
Uptime	2 hours, 27 minutes, 1 second

Slot 4 information:

State	Online
Temperature	22 degrees C / 71 degrees F
Total CPU DRAM	1024 MB
Total SRAM	256 MB
Total SDRAM	0 MB
Start time	2006-11-03 07:35:48 PST
Uptime	2 hours, 26 minutes, 53 seconds

Slot 7 information:

State	Online
Temperature	24 degrees C / 75 degrees F
Total CPU DRAM	1024 MB
Total SRAM	256 MB
Total SDRAM	0 MB
Start time	2006-11-03 07:35:53 PST
Uptime	2 hours, 26 minutes, 48 seconds

For further description of the output from the commands, see the [Junos OS Administration Library for Routing Devices](#).

## SEE ALSO

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[Maintaining MX240 DPCs | 352](#)

# Troubleshooting the MX240 FPCs

## IN THIS SECTION

- Problem | 472
- Solution | 472

## Problem

### Description

The FPCs are not functioning normally.

### Solution

- Monitor the green LED labeled **OK** above the FPC on the craft interface as soon as an FPC is seated in an operating router.

The Routing Engine downloads the FPC software to it under two conditions: the FPC is present when the Routing Engine boots Junos OS, and the FPC is installed and requested online through the CLI or push button on the front panel. The FPC then runs diagnostics, during which the **OK** LED blinks. When the FPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the FPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.
- Check the **OK/FAIL** LED on the FPC and **OK** and **FAIL** FPC LEDs on the craft interface. When the FPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the **show chassis fpc** command to check the status of installed FPCs. As shown in the sample output, the value **Online** in the column labeled **State** indicates that the FPC is functioning normally:

```
user@host> show chassis fpc
```

		Temp	CPU Utilization (%)		Memory	Utilization (%)	
Slot	State	(C)	Total	Interrupt	DRAM (MB)	Heap	Buffer
0	Online	24	3	0	1024	13	21
1	Empty						
2	Online	41	9	0	1024	15	57
3	Online	43	5	0	1024	16	57



4	Online	43	11	0	1024	16	57
5	Online	41	9	0	1024	15	57
6	Online	43	5	0	1024	16	57
7	Empty						
8	Empty						
9	Empty						
10	Online	24	3	0	1024	13	21
11	Empty						



**NOTE:** The **show chassis fpc** command displays the status of the FPCs.

For more detailed output, add the **detail** option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

Slot 0 information:

State	Online
Temperature	24 degrees C / 75 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	128 MB
Total DDR DRAM	2048 MB
Start time:	2008-12-11 16:53:24 PST
Uptime:	15 hours, 2 minutes, 47 seconds

Slot 2 information:

State	Online
Temperature	29 degrees C / 84 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2008-12-11 16:53:18 PST
Uptime:	15 hours, 2 minutes, 53 seconds

Slot 3 information:

State	Online
Temperature	29 degrees C / 84 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2008-12-11 16:53:18 PST
Uptime:	15 hours, 2 minutes, 53 seconds

## Slot 4 information:

State	Online
Temperature	29 degrees C / 84 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2008-12-11 16:53:18 PST
Uptime:	15 hours, 2 minutes, 53 seconds

## Slot 5 information:

State	Online
Temperature	29 degrees C / 84 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2008-12-11 16:53:22 PST
Uptime:	15 hours, 2 minutes, 49 seconds

## Slot 6 information:

State	Online
Temperature	29 degrees C / 84 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	256 MB
Total DDR DRAM	4096 MB
Start time:	2008-12-11 16:53:18 PST
Uptime:	15 hours, 2 minutes, 53 seconds

## Slot 10 information:

State	Online
Temperature	24 degrees C / 75 degrees F
Total CPU DRAM	1024 MB
Total RLDRAM	128 MB
Total DDR DRAM	2048 MB
Start time:	2008-12-11 16:53:24 PST
Uptime:	15 hours, 2 minutes, 47 seconds

For further description of the output from the commands, see the [Junos OS Administration Library for Routing Devices](#).

## SEE ALSO

---

[MX240 Flexible PIC Concentrator \(FPC\) LEDs | 136](#)

---

[Maintaining MX240 FPCs | 363](#)

---

[Holding an MX240 FPC | 365](#)

---

## Troubleshooting the MX240 MICs

IN THIS SECTION

- Problem | 475
- Solution | 475

### Problem

#### Description

The MICs are not functioning normally.

### Solution

- Check the status of each port on a MIC by looking at the LED located on the MIC faceplate. For information about the meaning of LED states on different MICs, see the [MX Series Interface Module Reference](#).
- Check the status of a MIC by issuing the `show chassis fpc pic-status` CLI command. The MIC slots in the MPC are labeled **PIC 0/1** and **PIC 2/3**, left to right:

```
user@host> show chassis fpc pic-status
Slot 0   Online      MPC Type 2 3D EQ
  PIC 0   Online      1x 10GE XFP
  PIC 1   Online      1x 10GE XFP
Slot 1   Online      MPC 3D 16x 10GE
  PIC 0   Online      4x 10GE(LAN) SFP+
  PIC 1   Online      4x 10GE(LAN) SFP+
  PIC 2   Online      4x 10GE(LAN) SFP+
  PIC 3   Online      4x 10GE(LAN) SFP+
Slot 2   Online      MS-DPC
```

PIC 0	Online	MS-DPC	PIC
PIC 1	Online	MS-DPC	PIC

For further description of the output from the command, see the [CLI Explorer](#).

SEE ALSO

- [MX240 Modular Interface Card \(MIC\) Description | 155](#)
- [Maintaining MX240 MICs | 380](#)

Troubleshooting the MX240 MPCs

IN THIS SECTION

- [Problem | 476](#)
- [Solution | 476](#)

Problem

Description

The MPCs are not functioning normally.

Solution

- Monitor the green LED labeled **OK** above the MPC on the craft interface as soon as an MPC is seated in an operating router.

The Routing Engine downloads the MPC software to it under two conditions: The MPC is present when the Routing Engine boots Junos OS, and the MPC is installed and requested online through the CLI or push button on the front panel. The MPC then runs diagnostics, during which the **OK** LED blinks. When the MPC is online and functioning normally, the **OK** LED lights green steadily.

- Make sure the MPC is properly seated in the midplane. Check that each ejector handle has been turned clockwise and is tight.

- Check the **OK/FAIL** LED on the MPC and **OK** and **FAIL** line card LEDs on the craft interface. When the MPC is online and functioning normally, the **OK** LED lights green steadily.
- Issue the `show chassis fpc` command to check the status of installed MPCs. As shown in the sample output, the value `State` in the column labeled `State` indicates that the MPC is functioning normally:

```
user@host> show chassis fpc
```

Slot	State	Temp (C)	CPU Utilization (%) Total Interrupt	Memory DRAM (MB)	Utilization (%) Heap Buffer
0	Online	36	3 0	2048	14 13
1	Online	40	5 0	2048	26 13
2	Empty				



**NOTE:** The `show chassis fpc` command displays the status of the MPCs.

For more detailed output, add the `detail` option. The following example does not specify a slot number, which is optional:

```
user@host> show chassis fpc detail
```

Slot 0 information:

State	Online
Temperature	36 degrees C / 96 degrees F
Total CPU DRAM	2048 MB
Total RLDRAM	806 MB
Total DDR DRAM	2632 MB
Start time:	2009-12-22 12:27:04 PST
Uptime:	6 days, 3 hours, 8 minutes, 41 seconds
Max Power Consumption	450 Watts

Slot 1 information:

State	Online
Temperature	40 degrees C / 104 degrees F
Total CPU DRAM	2048 MB
Total RLDRAM	1324 MB
Total DDR DRAM	5120 MB
Start time:	2009-12-22 12:27:02 PST
Uptime:	6 days, 3 hours, 8 minutes, 43 seconds
Max Power Consumption	440 Watts

For further description of the output from the commands, see the *Junos OS System Configuration Guide*.

SEE ALSO

- [MX240 Modular Port Concentrator \(MPC\) LEDs | 176](#)
- [Maintaining MX240 MPCs | 385](#)

## Troubleshooting the MX240 PICs

IN THIS SECTION

- [Problem | 478](#)
- [Solution | 478](#)

### Problem

#### Description

The PICs are not functioning normally.

#### Solution

- Check the status of each port on a PIC by looking at the LED located on the PIC faceplate. For information about the meaning of LED states on different PICs, see the [MX Series Interface Module Reference](#).
- Check the status of a PIC by issuing the `show chassis fpc pic-status` CLI command. The PIC slots in the FPC are numbered from **0** through **1**, left to right:

```
user@host> show chassis fpc pic-status
Slot 0  Online      DPC 40x 1GE R
  PIC 0  Online      10x 1GE(LAN)
  PIC 1  Online      10x 1GE(LAN)
  PIC 2  Online      10x 1GE(LAN)
```

PIC 3	Online	10x 1GE(LAN)
Slot 1	Online	MX FPC Type 3
PIC 0	Online	1x OC-192 SONET
PIC 1	Online	1x OC-192 SONET

For further description of the output from the command, see the [CLI Explorer](#).

## SEE ALSO

[MX240 PIC Description | 137](#)

[Maintaining MX240 PICs | 393](#)

[MX240 PIC Serial Number Label | 497](#)

## Troubleshooting the MX240 Power System

### IN THIS SECTION

● [Problem | 479](#)

● [Solution | 479](#)

### Problem

#### Description

The power system is not functioning normally.

#### Solution

- Check the LEDs on each power supply faceplate.
  - If an AC power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LED's light steadily, and the **PS FAIL** LED is not lit.
  - If a DC power supply is correctly installed and functioning normally, the **PWR\_OK**, **INPUT OK**, and **BRKR ON** LED's light steadily.

- Issue the CLI **show chassis environment pem** command to check the status of installed power supply modules. As shown in the sample output, the value **Online** in the rows labeled **State** indicates that each power supply is functioning normally:

```
user@host> show chassis environment pem
PEM 0 status:
  State           Online
  Temperature      OK
  DC output        OK
PEM 2 status:
  State           Online
  Temperature      OK
  DC output        OK
```

If a power supply is not functioning normally, perform the following steps to diagnose and correct the problem:

- If a red alarm condition occurs, issue the **show chassis alarms** command to determine the source of the problem.
- Check that the AC input switch (—) or DC circuit breaker (I) is in the on position and that the power supply is receiving power.
- Verify that the source circuit breaker has the proper current rating. Each power supply must be connected to a separate source circuit breaker.
- Verify that the AC power cord or DC power cables from the power source to the router are not damaged. If the insulation is cracked or broken, immediately replace the cord or cable.
- Connect the power supply to a different power source with a new power cord or power cables. If the power supply status LEDs indicate that the power supply is not operating normally, the power supply is the source of the problem. Replace the power supply with a spare.
- If all power supplies have failed, the system temperature might have exceeded the threshold, causing the system to shut down.



**NOTE:** If the system temperature exceeds the threshold, the Junos OS shuts down all power supplies so that no status is displayed.

The Junos OS also can shut down one of the power supplies for other reasons. In this case, the remaining power supplies provide power to the router, and you can still view the system status through the CLI or display.

To restart a high-capacity AC power supply after a shut down due to an over-temperature situation:



1. Move the power switch on the power supply to the off (o) position.
2. Turn off power to where the AC line goes into the power distribution module (PDM) area.
3. Wait for the power supply LEDs to fade out and for the fans inside the power supply to shutdown. This can take up to 10 seconds.



**CAUTION:** Do not attempt to power-on the power supply if the LED is still lit and the fan is still running. If you do, the router will not reboot.

4. Turn on power to where the AC line goes into the power distribution module (PDM) area.
5. Move the power switch on the power supply to the on (I) position.
6. Verify that the LEDs on the power supply faceplate are properly lit.
7. Issue the CLI **show chassis environment pem** command and verify the State is ONLINE and the Temperature is OK.

To restart a high-capacity DC power supply after a shut down due to an over-temperature situation:

1. Switch off the circuit breaker(s) on the DC distribution panel to remove power to the chassis and power supplies.
2. Switch on the circuit breaker(s) on the distribution panel to power up the chassis and power supplies.




**NOTE:** The power switch on the power supplies is not part of the outer or inner DC circuits and therefore does not need to be switched off when restarting the chassis.



**NOTE:** If output power is not load-balancing correctly in the same zone on an MX router with a high-capacity AC or DC power supply module, connect two feeds and change the DIP switch to **1** to boost the voltage on the power supply module.

Each High Capacity AC or DC power supply accepts two AC or DC feeds in two unique AC or DC receptacles. It is possible to operate with one feed, but there is a reduction in the power supply output. The DIP switch must be set according to the number of AC or DC feeds that are present for the power supply. Refer to [Figure 152 on page 482](#)

Figure 152: MX240 DC High-Capacity Power Supply Input Mode Switch

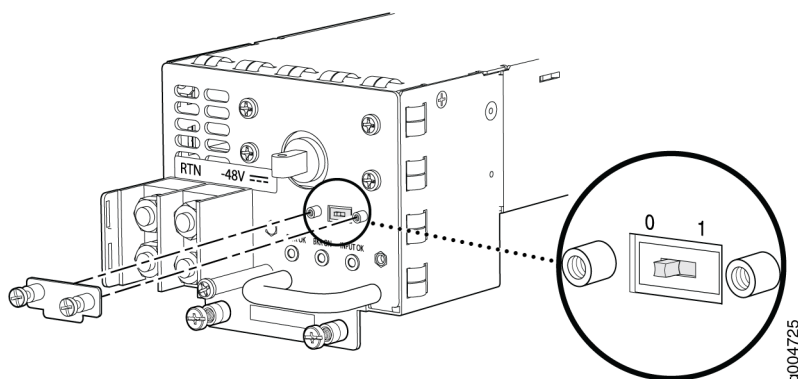

- Position – **0** indicates that only one AC or DC feed is provided.
- Position – **1** indicates that two AC or DC feeds are provided.

To check the DIP switch position:

1. Issue the `show chassis power` command and check to see how many feeds are connected. The following example shows there are two AC input feeds connected for PEM 0 and one AC input feed connected for PEM 1. This indicates that the DIP switch for PEM 0 is in position 1 and the DIP switch for PEM 1 is in position 0. These are the proper settings.

```
# run show chassis power
PEM 0:
State: Online
AC input: OK (2 feed expected, 2 feed connected)
Capacity: 4100 W (maximum 4100 W)
DC output: 855 W (zone 0, 15 A at 57 V, 20% of capacity)

PEM 1:
State: Online
AC input: OK (1 feed expected, 1 feed connected)
Capacity: 1700 W (maximum 4100 W)
DC output: 969 W (zone 1, 17 A at 57 V, 57% of capacity)
```

2. Issue the `show chassis alarms` command to see if there are any active alarms on the DIP switch:

```
> show chassis alarms
4 alarms currently active
Alarm time Class Description 2013-01-11 14:48:26 UTC Minor PEM 0 Dipswitch 0 Feed Connection 2
```

3. If the `show chassis alarms` output shows an alarm on Dipswitch, issue the `show chassis power` command to check the DIP switch position.

```
# run show chassis power
PEM 0:
State: Online
AC input: OK (1 feed expected, 2 feed connected)
Capacity: 4100 W (maximum 4100 W)
DC output: 855 W (zone 0, 15 A at 57 V, 20% of capacity)
```

In this example, the DIP switch is in the wrong position since there is one AC feed expected but two AC feeds are connected. Change the DIP switch to position 1. This should clear the alarm.



**NOTE:** Changing the DIP switch position does not impact traffic. However, it is always recommended to do so in a maintenance window.

## SEE ALSO

---

[MX240 AC Power Supply Description | 39](#)

---

[MX240 DC Power Supply Description | 48](#)

---

[Troubleshooting the MX240 Components | 465](#)

---

[Replacing an MX240 AC Normal-Capacity Power Supply | 427](#)

---

[Replacing an MX240 DC Normal-Capacity Power Supply | 430](#)

# 7

CHAPTER

## Contacting Customer Support and Returning the Chassis or Components

---

### IN THIS CHAPTER

- [Contact Customer Support | 485](#)
  - [Locating Component Serial Numbers | 485](#)
  - [Packing and Returning Components | 500](#)
-

# Contact Customer Support

You can contact Juniper Networks Technical Assistance Center (JTAC) 24 hours a day, 7 days a week in one of the following ways:

- On the Web, using the Service Request Manager link at:

<https://support.juniper.net/support/>

- By telephone:
  - From the US and Canada: 1-888-314-JTAC
  - From all other locations: 1-408-745-9500



**NOTE:** If contacting JTAC by telephone, enter your 12-digit service request number followed by the pound (#) key if this is an existing case, or press the star (\*) key to be routed to the next available support engineer.

When requesting support from JTAC by telephone, be prepared to provide the following information:

- Your existing service request number, if you have one
- Details of the failure or problem
- Type of activity being performed on the device when the problem occurred
- Configuration data displayed by one or more `show` commands
- Your name, organization name, telephone number, fax number, and shipping address

The support representative validates your request and issues an RMA number for return of the component.

## Locating Component Serial Numbers

### IN THIS SECTION

- [Displaying MX240 Router Components and Serial Numbers | 486](#)

- MX240 Chassis Serial Number Label | 487
- MX240 SCB Serial Number Label | 488
- MX240 DPC Serial Number Label | 490
- MX240 FPC Serial Number Label | 490
- MX240 MIC Serial Number Label | 492
- MX240 MPC Serial Number Label | 495
- MX240 PIC Serial Number Label | 497
- MX240 Power Supply Serial Number Label | 498
- MX240 Routing Engine Serial Number Label | 499

## Displaying MX240 Router Components and Serial Numbers

Before contacting Juniper Networks, Inc. to request a Return Materials Authorization (RMA), you must find the serial number on the router or component. To display all of the router components and their serial numbers, enter the following command-line interface (CLI) command:

```
user@host> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			JN10C75C9AFC	MX240
Midplane	REV 01	710-021041	TR1500	MX240 Backplane
FPM Board	REV 01	710-017254	KD4019	Front Panel Display
PEM 0	Rev 02	740-017330	000326	PS 1.2-1.7kW; 100-240V AC in
PEM 1	Rev 02	740-017330	000333	PS 1.2-1.7kW; 100-240V AC in
Routing Engine 0	REV 06	740-013063	1000701796	RE-S-2000
Routing Engine 1				
CB 0	REV 07	710-013385	KD1348	MX SCB
CB 1	REV 07	710-013385	JZ0029	MX SCB
FPC 1	REV 01	750-018124	JY9650	DPCE 4x 10GE R
CPU	REV 06	710-013713	JZ6625	DPC PMB
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014279	KBC03VY	XFP-10G-LR
PIC 1		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014279	KB602C5	XFP-10G-LR
PIC 2		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014279	KB602C3	XFP-10G-LR

PIC 3		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
FPC 2	REV 01	750-018124	JY9642	DPCE 4x 10GE R
CPU	REV 06	710-013713	JY9337	DPC PMB
PIC 0		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014279	KB602BQ	XFP-10G-LR
PIC 1		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014279	KB602BG	XFP-10G-LR
PIC 2		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Xcvr 0	REV 01	740-014279	KBC03W1	XFP-10G-LR
PIC 3		BUILTIN	BUILTIN	1x 10GE(LAN/WAN)
Fan Tray 0	REV 01	710-021113	JS4641	MX240 Fan Tray

Most components also have a small rectangular serial number ID label (see [Figure 153 on page 487](#)) attached to the component body.


**Figure 153: Serial Number ID Label**



## MX240 Chassis Serial Number Label

The chassis serial number is located on the side of the chassis (see [Figure 154 on page 488](#)).

Figure 154: MX240 Chassis Serial Number Label

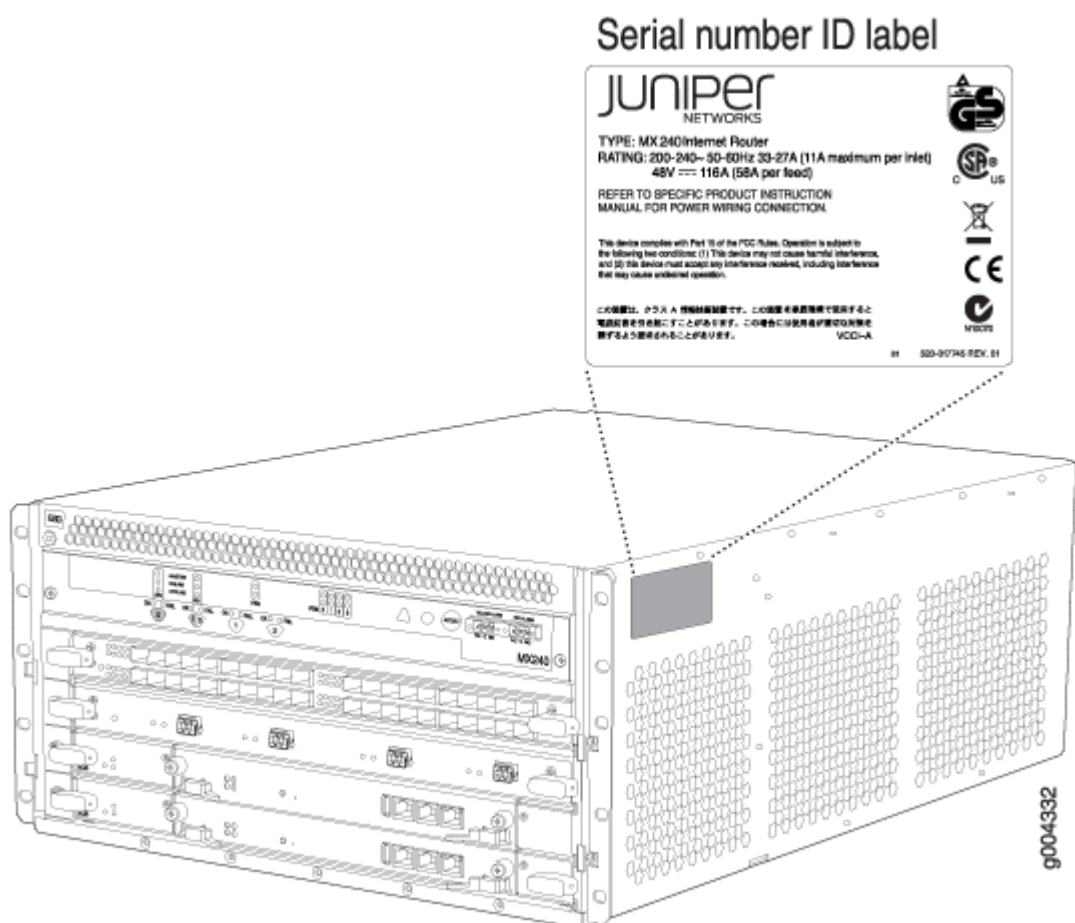

## SEE ALSO


[MX240 Chassis Description | 18](#)
[MX240 Chassis Lifting Guidelines | 513](#)
[Displaying MX240 Router Components and Serial Numbers | 486](#)
[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

## MX240 SCB Serial Number Label

The serial number is located on the right side of the top of the SCB (see [Figure 155 on page 489](#)).



**Figure 155: SCB Serial Number Label**

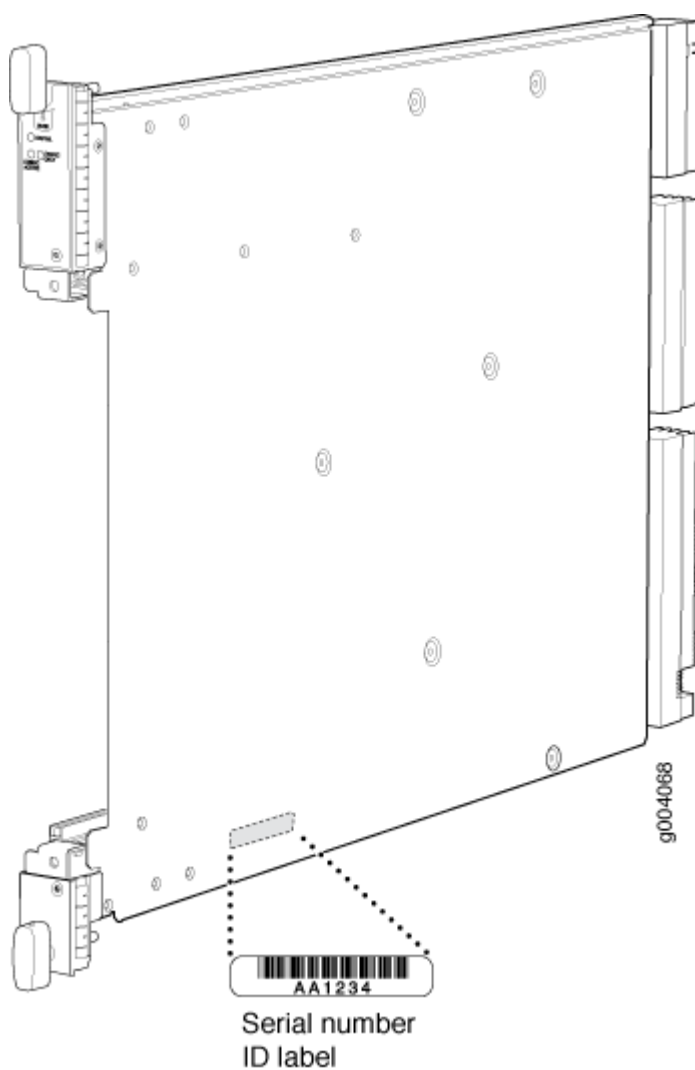

**SEE ALSO**

[MX240 SCB-MX Description](#)

[MX240 SCB LEDs](#)

[Upgrading an MX240 to Use the SCBE-MX | 446](#)

[Displaying MX240 Router Components and Serial Numbers | 486](#)


[Contact Customer Support | 485](#)

[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

## MX240 DPC Serial Number Label

The serial number label is located on the center of the right side of the DPC (see [Figure 156 on page 490](#)).

**Figure 156: DPC Serial Number Label**

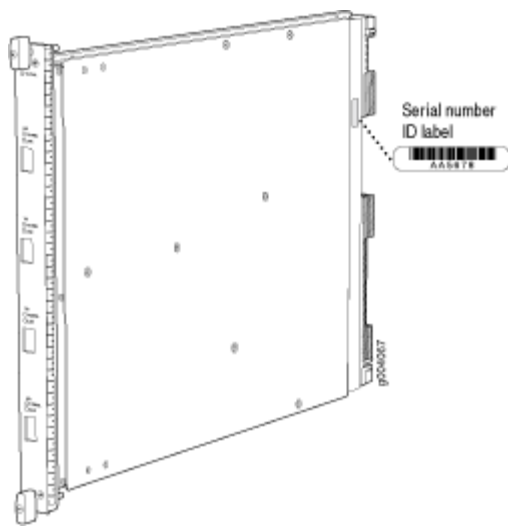

### SEE ALSO

[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)

[Troubleshooting the MX240 DPCs | 469](#)

[Displaying MX240 Router Components and Serial Numbers | 486](#)


[Contact Customer Support | 485](#)

[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

## MX240 FPC Serial Number Label

The serial number label is located on the right side of the FPC (see [Figure 157 on page 491](#)).

Figure 157: FPC Serial Number Label

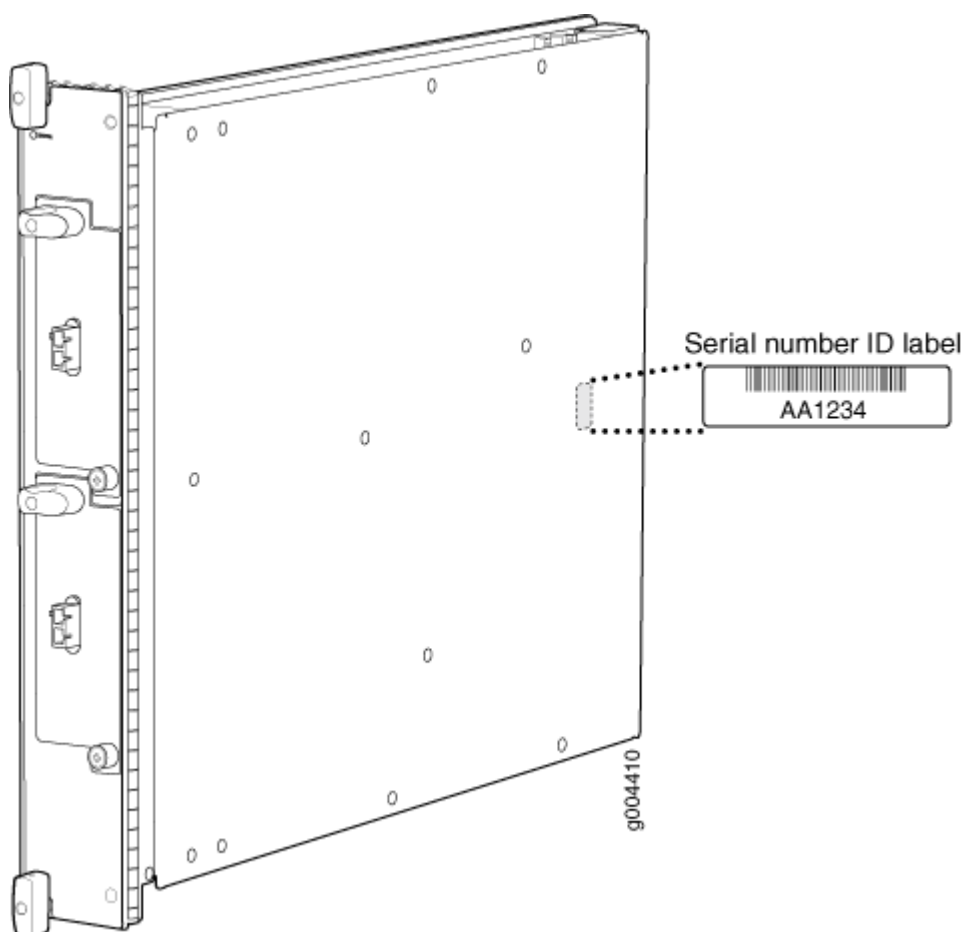

## SEE ALSO

[Replacing an MX240 FPC | 369](#)

[Displaying MX240 Router Components and Serial Numbers | 486](#)

[Contact Customer Support | 485](#)


[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

[Tools and Parts Required to Replace MX240 Hardware Components | 306](#)

## MX240 MIC Serial Number Label

The serial number label location varies per MIC. The exact location may be different on different MICs, depending on the placement of components on the MIC board (see [Figure 158 on page 492](#), [Figure 159 on page 492](#), [Figure 160 on page 493](#), [Figure 161 on page 493](#), and [Figure 162 on page 494](#)).

**Figure 158: 2-Port MIC Serial Number Label**

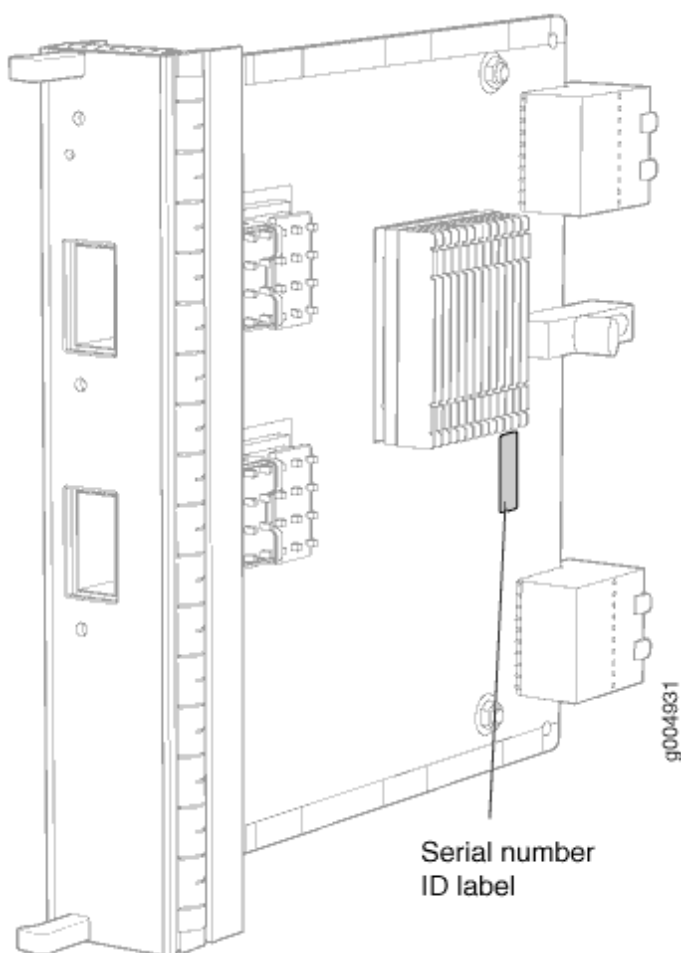

**Figure 159: 4-Port MIC Serial Number Label**

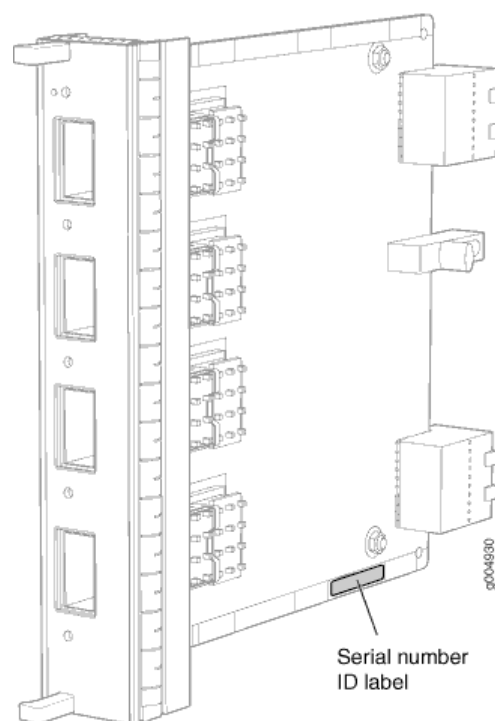


Figure 160: 10-Port MIC Serial Number Label

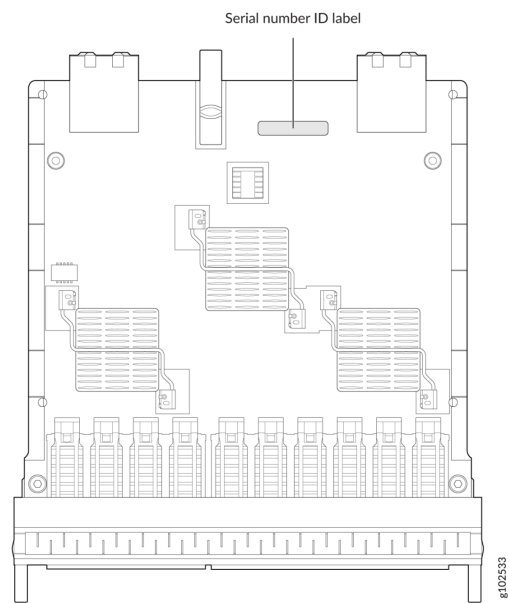


Figure 161: 20-Port MIC Serial Number Label


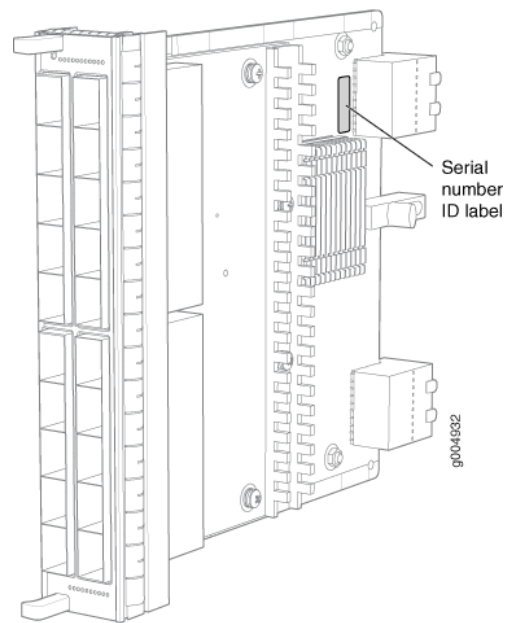


Figure 162: 40-Port MIC Serial Number Label

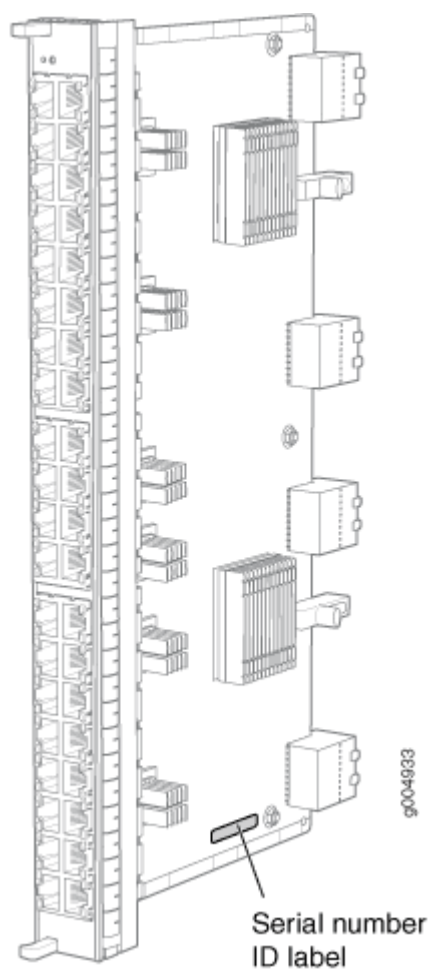

## SEE ALSO

[Troubleshooting the MX240 MICs | 475](#)

[Displaying MX240 Router Components and Serial Numbers | 486](#)


[Contact Customer Support | 485](#)

[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

## **MX240 MPC Serial Number Label**

The serial number label is near the connectors located on the left side of the MPC when it is oriented vertically (see [Figure 163 on page 496](#)).

Figure 163: MPC Serial Number Label

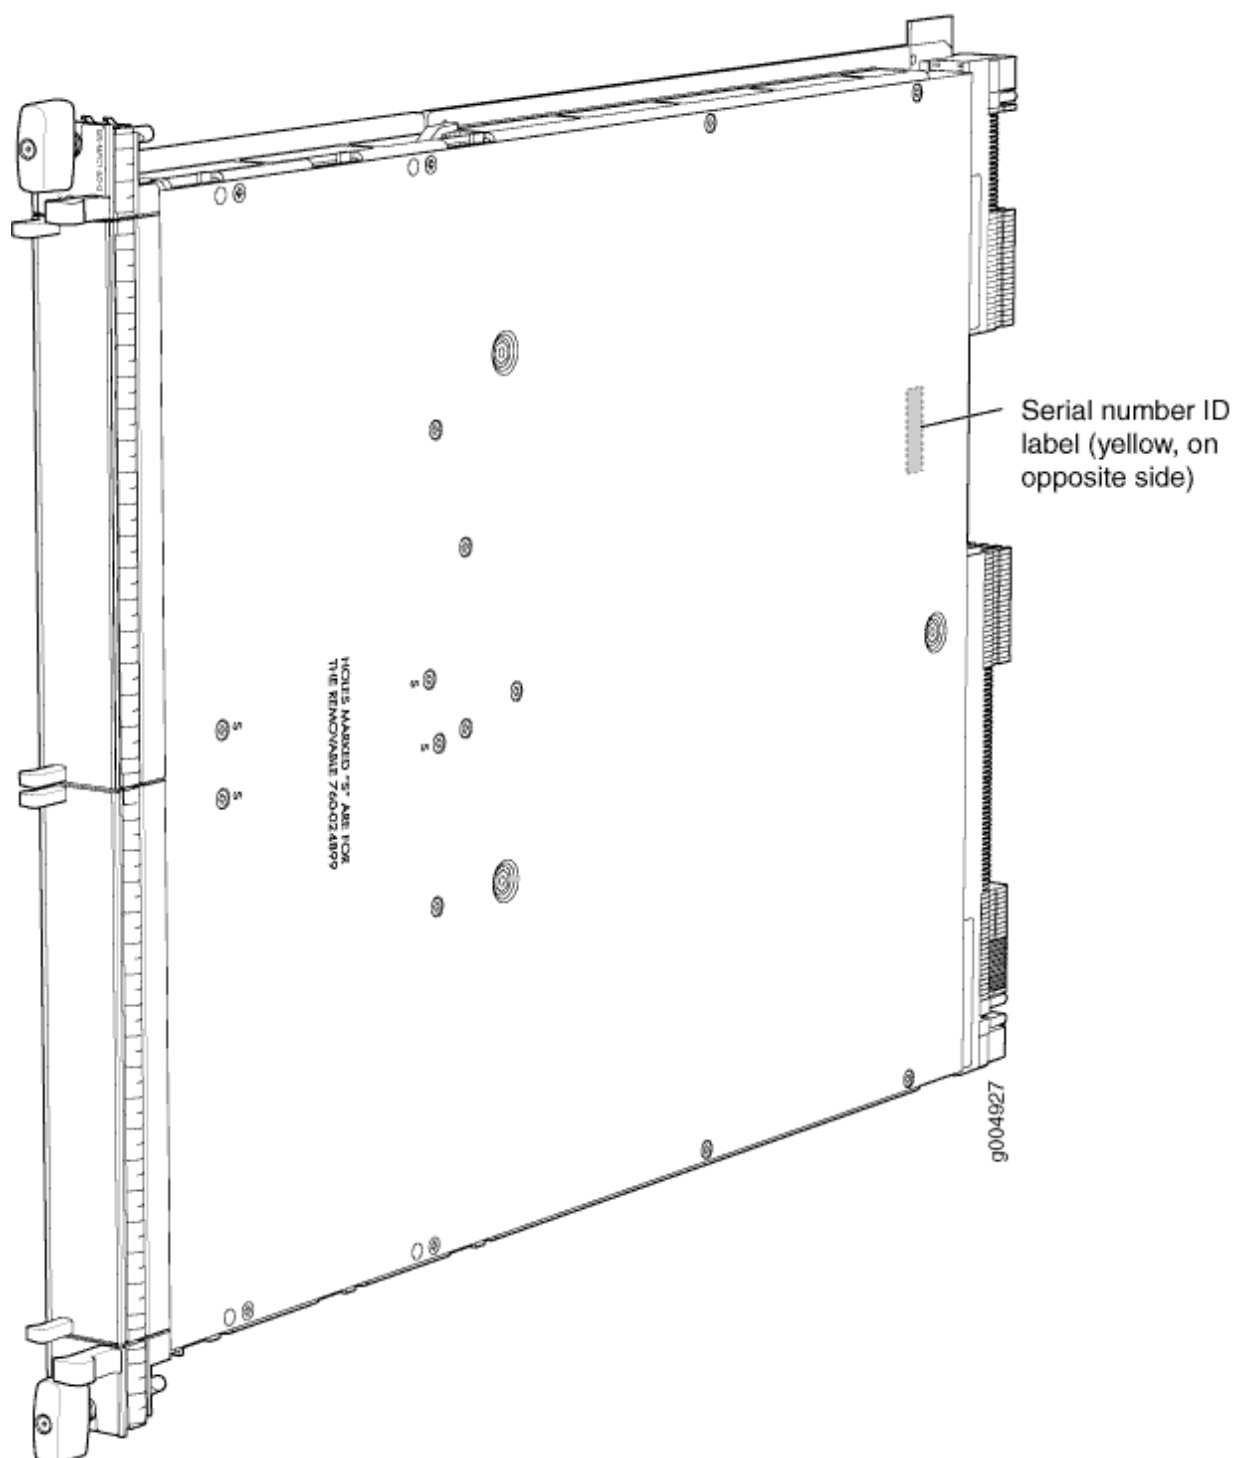




**SEE ALSO**[MX240 Dense Port Concentrator \(DPC\) Description | 122](#)[Troubleshooting the MX240 MPCs | 476](#)[Displaying MX240 Router Components and Serial Numbers | 486](#)[Contact Customer Support | 485](#)[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

## MX240 PIC Serial Number Label

The serial number label is located on the right side of the PIC (see [Figure 164 on page 497](#)), when the PIC is vertically oriented (as it would be installed in the router). The exact location may be slightly different on different PICs, depending on the placement of components on the PIC board.

**Figure 164: PIC Serial Number Label**

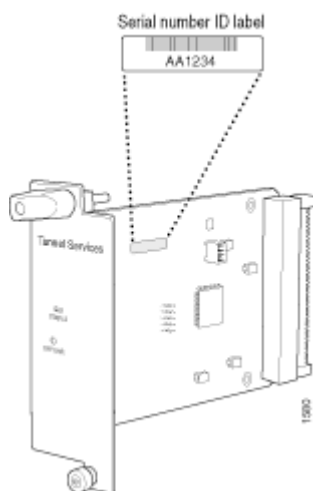**SEE ALSO**[MX240 PIC Description | 137](#)[Replacing an MX240 PIC | 394](#)[Displaying MX240 Router Components and Serial Numbers | 486](#)[Contact Customer Support | 485](#)[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)



**SEE ALSO**[MX240 Power System Description | 38](#)[Replacing an MX240 AC Normal-Capacity Power Supply | 427](#)[Replacing an MX240 DC Normal-Capacity Power Supply | 430](#)[Displaying MX240 Router Components and Serial Numbers | 486](#)[Contact Customer Support | 485](#)[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

## MX240 Routing Engine Serial Number Label

The serial number label is located on the left side of the top of the Routing Engine (see [Figure 167 on page 499](#) and [Figure 168 on page 500](#)).

**Figure 167: Routing Engine Serial Number Label**


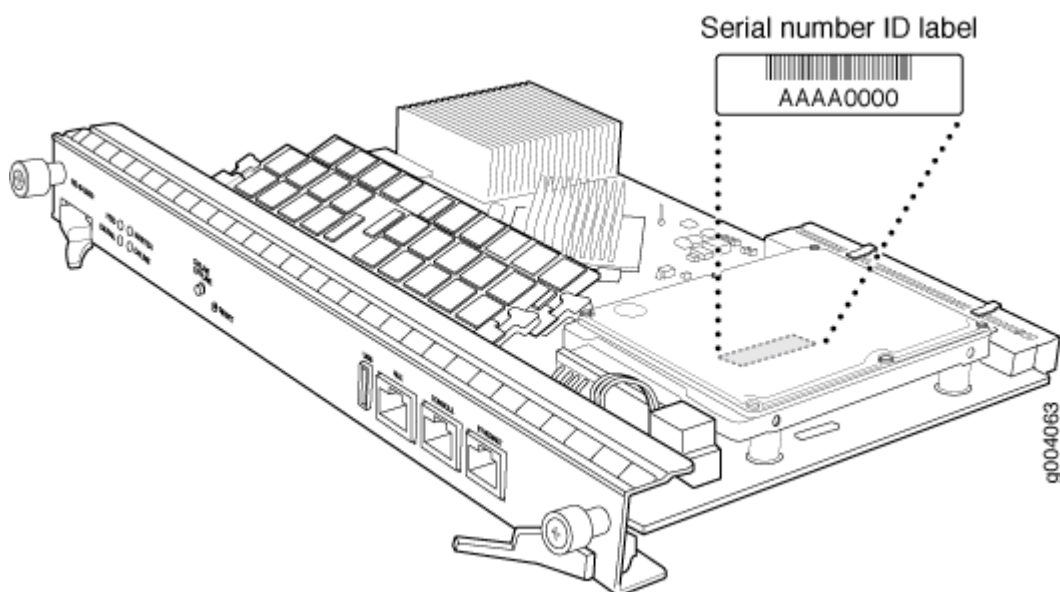


Figure 168: RE-S-X6-64G Routing Engine Serial Number Label

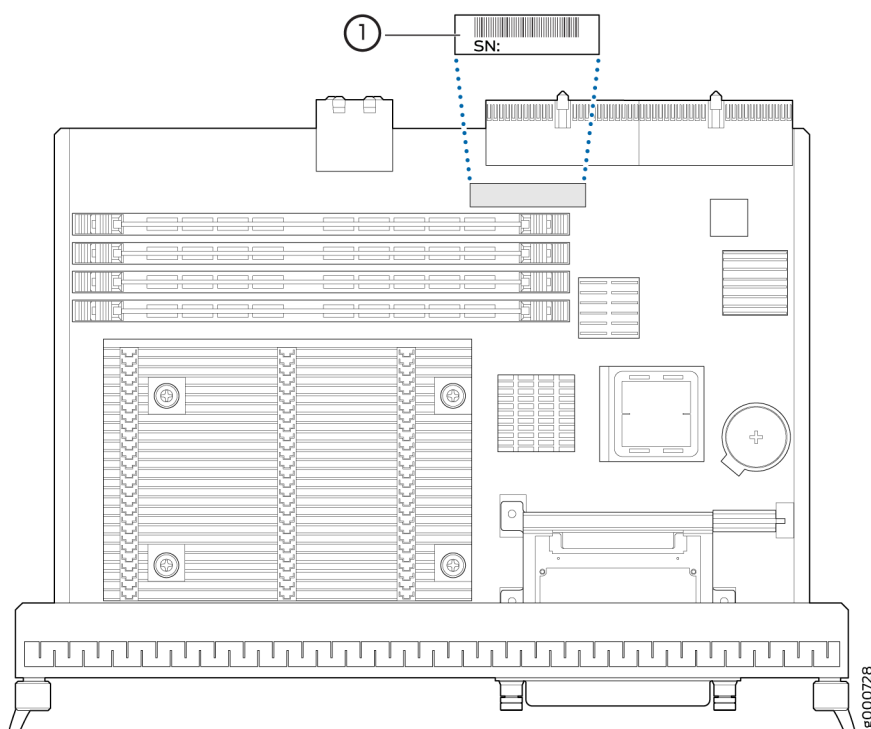

## SEE ALSO

[MX240 Routing Engine Description | 64](#)

[Replacing an MX240 Routing Engine | 323](#)

[Displaying MX240 Router Components and Serial Numbers | 486](#)

[Contact Customer Support | 485](#)

[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

# Packing and Returning Components

## IN THIS SECTION

- [How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

- Guidelines for Packing Hardware Components for Shipment | 502
- Packing the MX240 Router for Shipment | 502

## How to Return a Hardware Component to Juniper Networks, Inc.

If a hardware component fails, you need to contact Juniper Networks, Inc. to obtain a Return Material Authorization (RMA) number. This number is used to track the returned material at the factory and to return repaired or new components to the customer as needed.



**NOTE:** Do not return any component to Juniper Networks, Inc. unless you have first obtained an RMA number. Juniper Networks, Inc. reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the customer by collect freight.

For more information about return and repair policies, see the customer support webpage at <https://support.juniper.net/support/>.

For product problems or technical support issues, contact the Juniper Networks Technical Assistance Center (JTAC) by using the Service Request Manager link at <https://support.juniper.net/support/> or at 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).

To return a defective hardware component:

1. Determine the part number and serial number of the defective component.
2. Obtain an RMA number from the Juniper Networks Technical Assistance Center (JTAC). You can send e-mail or telephone as described above.
3. Provide the following information in your e-mail message or during the telephone call:
  - Part number and serial number of component
  - Your name, organization name, telephone number, and fax number
  - Description of the failure
4. The support representative validates your request and issues an RMA number for return of the component.
5. Pack the component for shipment.

## Guidelines for Packing Hardware Components for Shipment

To pack and ship individual components:

- When you return components, make sure that they are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Use the original shipping materials if they are available.
- Place individual components in antistatic bags.
- Write the RMA number on the exterior of the box to ensure proper tracking.



**CAUTION:** Do not stack any of the hardware components.

## Packing the MX240 Router for Shipment

To pack the router for shipment:

1. Retrieve the shipping crate and packing materials in which the router was originally shipped. If you do not have these materials, contact your Juniper Networks representative about approved packaging materials.
2. On the console or other management device connected to the master Routing Engine, enter CLI operational mode and issue the following command to shut down the router software. (If two Routing Engines are installed, also issue the command on the backup Routing Engine.)

```
user@host> request system halt
```

Wait until a message appears on the console confirming that the operating system has halted.

For more information about the command, see [request system halt](#).

3. Attach an ESD grounding strap to your bare wrist, and connect the other end of the strap to an ESD grounding point.
4. Shut down power to the router by pressing the AC input switch or DC circuit breaker for all power supplies to the off (O) position.
5. Disconnect power from the router.
6. Remove the cables that connect to all external devices.
7. Remove all field replaceable units (FRUs) from the router.
8. Remove the router from the rack:

- If you are using a mechanical lift, place the lift platform under the router, unscrew and remove the mounting screws from the rack, and move the router to the shipping crate.
  - If you are not using a mechanical lift and the router weight is fully supported by a shelf or another router, unscrew and remove the mounting screws from the rack. Three people can then lift the router and move it to the shipping crate.
  - If you are not using a mechanical lift and the router weight is not fully supported by a shelf or another router, three people should grasp the router while a fourth person unscrews and removes the mounting screws from the rack. The three lifters can then move the router to the shipping container.
9. Place the router in the shipping crate or onto the pallet. If on a pallet, bolt the router to the pallet.
  10. Cover the router with an ESD bag and place the packing foam on top of and around the router.
  11. Replace the accessory box on top of the packing foam.
  12. Securely tape the box closed or place the crate cover over the router.
  13. Write the RMA number on the exterior of the box to ensure proper tracking.

## SEE ALSO

[Powering Off the MX240 Router | 290](#)

[Replacing Connections to MX240 Routing Engine Interface Ports | 335](#)

[Replacing an MX240 AC Power Supply Cord | 429](#)

[Replacing an MX240 DC Power Supply Cable | 435](#)

[Preventing Electrostatic Discharge Damage to an MX240 Router | 511](#)

[Contact Customer Support | 485](#)

[How to Return a Hardware Component to Juniper Networks, Inc. | 501](#)

[Tools and Parts Required to Replace MX240 Hardware Components | 306](#)

[Guidelines for Packing Hardware Components for Shipment | 502](#)

# 8

CHAPTER

## Safety and Compliance Information

---

### IN THIS CHAPTER

- General Safety Guidelines and Warnings | 506
- Definitions of Safety Warning Levels | 507
- Qualified Personnel Warning | 509
- Fire Safety Requirements | 509
- Warning Statement for Norway and Sweden | 511
- Preventing Electrostatic Discharge Damage to an MX240 Router | 511
- Installation Instructions Warning | 512
- MX240 Chassis Lifting Guidelines | 513
- Ramp Warning | 514
- Rack-Mounting and Cabinet-Mounting Warnings | 514
- Grounded Equipment Warning | 518
- Laser and LED Safety Guidelines and Warnings | 519
- Radiation from Open Port Apertures Warning | 522
- Maintenance and Operational Safety Guidelines and Warnings | 523
- General Electrical Safety Guidelines and Warnings | 529
- Prevention of Electrostatic Discharge Damage | 530
- AC Power Electrical Safety Guidelines | 532
- AC Power Disconnection Warning | 533
- MX240 DC Power Electrical Safety Guidelines | 534
- DC Power Copper Conductors Warning | 535
- DC Power Disconnection Warning | 536
- DC Power Grounding Requirements and Warning | 537



- [DC Power Wiring Sequence Warning | 538](#)
  - [DC Power Wiring Terminations Warning | 539](#)
  - [Midplane Energy Hazard Warning | 541](#)
  - [Multiple Power Supplies Disconnection Warning | 541](#)
  - [Action to Take After an Electrical Accident | 542](#)
  - [Site Electrical Wiring Guidelines for MX Series Routers | 542](#)
  - [Agency Approvals and Compliance Statements | 544](#)
-

# General Safety Guidelines and Warnings

The following guidelines help ensure your safety and protect the device from damage. The list of guidelines might not address all potentially hazardous situations in your working environment, so be alert and exercise good judgment at all times.

- Perform only the procedures explicitly described in the hardware documentation for this device. Make sure that only authorized service personnel perform other system services.
- Keep the area around the device clear and free from dust before, during, and after installation.
- Keep tools away from areas where people could trip over them while walking.
- Do not wear loose clothing or jewelry, such as rings, bracelets, or chains, which could become caught in the device.
- Wear safety glasses if you are working under any conditions that could be hazardous to your eyes.
- Do not perform any actions that create a potential hazard to people or make the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person to handle.
- Never install or manipulate wiring during electrical storms.
- Never install electrical jacks in wet locations unless the jacks are specifically designed for wet environments.
- Operate the device only when it is properly grounded.
- Follow the instructions in this guide to properly ground the device to earth.
- Replace fuses only with fuses of the same type and rating.
- Do not open or remove chassis covers or sheet-metal parts unless instructions are provided in the hardware documentation for this device. Such an action could cause severe electrical shock.
- Do not push or force any objects through any opening in the chassis frame. Such an action could result in electrical shock or fire.
- Avoid spilling liquid onto the chassis or onto any device component. Such an action could cause electrical shock or damage the device.
- Avoid touching uninsulated electrical wires or terminals that have not been disconnected from their power source. Such an action could cause electrical shock.

- Some parts of the chassis, including AC and DC power supply surfaces, power supply unit handles, SFB card handles, and fan tray handles might become hot. The following label provides the warning for hot surfaces on the chassis:



- Always ensure that all modules, power supplies, and cover panels are fully inserted and that the installation screws are fully tightened.

## Definitions of Safety Warning Levels

The documentation uses the following levels of safety warnings (there are two *Warning* formats):



**NOTE:** You might find this information helpful in a particular situation, or you might overlook this important information if it was not highlighted in a Note.



**CAUTION:** You need to observe the specified guidelines to prevent minor injury or discomfort to you or severe damage to the device.

**Attention** Veillez à respecter les consignes indiquées pour éviter toute incommodité ou blessure légère, voire des dégâts graves pour l'appareil.



**LASER WARNING:** This symbol alerts you to the risk of personal injury from a laser.

**Avertissement** Ce symbole signale un risque de blessure provoquée par rayon laser.



**WARNING:** This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry, and familiarize yourself with standard practices for preventing accidents.

**Waarschuwing** Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient

u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.

**Varoitus** Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.

**Avertissement** Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

**Warnung** Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.

**Avvertenza** Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.

**Advarsel** Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du være oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.

**Aviso** Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer equipamento, familiarize-se com os perigos relacionados com circuitos eléctricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes.

**¡Atención!** Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.

**Varning!** Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

## Qualified Personnel Warning



**WARNING:** Only trained and qualified personnel should install or replace the device.

**Waarschuwing** Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

**Varoitus** Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

**Avertissement** Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

**Warnung** Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.

**Avvertenza** Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.

**Advarsel** Kun kvalifisert personell med riktig opplæring bør montere eller bytte ut dette utstyret.

**Aviso** Este equipamento deverá ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.

**¡Atención!** Estos equipos deben ser instalados y reemplazados exclusivamente por personal técnico adecuadamente preparado y capacitado.

**Varning!** Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

## Fire Safety Requirements

### IN THIS SECTION

- [Fire Suppression | 510](#)
- [Fire Suppression Equipment | 510](#)

In the event of a fire emergency, the safety of people is the primary concern. You should establish procedures for protecting people in the event of a fire emergency, provide safety training, and properly provision fire-control equipment and fire extinguishers.

In addition, you should establish procedures to protect your equipment in the event of a fire emergency. Juniper Networks products should be installed in an environment suitable for electronic equipment. We recommend that fire suppression equipment be available in the event of a fire in the vicinity of the equipment and that all local fire, safety, and electrical codes and ordinances be observed when you install and operate your equipment.

## Fire Suppression

In the event of an electrical hazard or an electrical fire, you should first turn power off to the equipment at the source. Then use a Type C fire extinguisher, which uses noncorrosive fire retardants, to extinguish the fire.

## Fire Suppression Equipment

Type C fire extinguishers, which use noncorrosive fire retardants such as carbon dioxide and Halotron™, are most effective for suppressing electrical fires. Type C fire extinguishers displace oxygen from the point of combustion to eliminate the fire. For extinguishing fire on or around equipment that draws air from the environment for cooling, you should use this type of inert oxygen displacement extinguisher instead of an extinguisher that leaves residues on equipment.

Do not use multipurpose Type ABC chemical fire extinguishers (dry chemical fire extinguishers). The primary ingredient in these fire extinguishers is monoammonium phosphate, which is very sticky and difficult to clean. In addition, in the presence of minute amounts of moisture, monoammonium phosphate can become highly corrosive and corrodes most metals.

Any equipment in a room in which a chemical fire extinguisher has been discharged is subject to premature failure and unreliable operation. The equipment is considered to be irreparably damaged.



**NOTE:** To keep warranties effective, do not use a dry chemical fire extinguisher to control a fire at or near a Juniper Networks device. If a dry chemical fire extinguisher is used, the unit is no longer eligible for coverage under a service agreement.

We recommend that you dispose of any irreparably damaged equipment in an environmentally responsible manner.

## Warning Statement for Norway and Sweden



**WARNING:** The equipment must be connected to an earthed mains socket-outlet.

**Advarsel** Apparatet skal kobles til en jordet stikkontakt.

**Varning!** Apparaten skall anslutas till jordat nätuttag.

## Preventing Electrostatic Discharge Damage to an MX240 Router

Many device components are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:


- Always use an ESD wrist strap or ankle strap, and make sure that it is in direct contact with your skin.



**CAUTION:** For safety, periodically check the resistance value of the ESD strap. The measurement should be in the range of 1 through 10 Mohms.

- When handling any component that is removed from the chassis, make sure the equipment end of your ESD strap is attached to one of the ESD points on the chassis.
- Avoid contact between the component and your clothing. ESD voltages emitted from clothing can still damage components.
- When removing or installing a component, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an electrostatic bag (see [Figure 169 on page 512](#)). If you are returning a component, place it in an electrostatic bag before packing it.

Figure 169: Placing a Component into an Electrostatic Bag

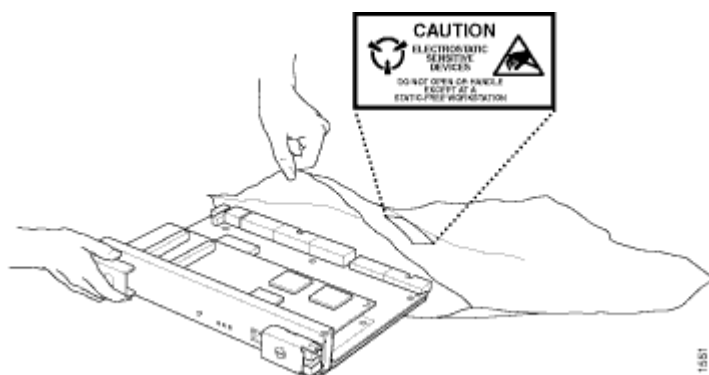

## RELATED DOCUMENTATION

*General Safety Guidelines for Juniper Networks Devices*

*General Safety Warnings for Juniper Networks Devices*

*Fire Safety Requirements for Juniper Networks Devices*

# Installation Instructions Warning



**WARNING:** Read the installation instructions before you connect the device to a power source.

**Waarschuwing** Raadpleeg de installatie-aanwijzingen voordat u het systeem met de voeding verbindt.

**Varoituis** Lue asennusohjeet ennen järjestelmän yhdistämistä virtälähteeseen.

**Avertissement** Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

**Warnung** Lesen Sie die Installationsanweisungen, bevor Sie das System an die Stromquelle anschließen.

**Avvertenza** Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.

**Advarsel** Les installasjonsinstruksjonene før systemet kobles til strømkilden.



**Aviso** Leia as instruções de instalação antes de ligar o sistema à sua fonte de energia.

**¡Atención!** Ver las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

**Varning!** Läs installationsanvisningarna innan du kopplar systemet till dess strömförsörjningsenhet.

## MX240 Chassis Lifting Guidelines

The weight of a fully configured chassis is about 128 lb (58.1 kg). Observe the following guidelines for lifting and moving the router:

- Before moving the router, read the guidelines in ["MX240 Site Preparation Checklist" on page 208](#) to verify that the intended site meets the specified power, environmental, and clearance requirements.
- Do not attempt to lift a fully configured router by yourself. Using a mechanical lift to maneuver the router into a rack is recommended. If a lift cannot be used, a minimum of three people must lift the router, and you must remove components from the chassis before lifting.
- Before lifting or moving the router, disconnect all external cables.

To lift routing devices and components, use the following lifting guidelines:

- Up to 39.7 lbs (18 kg) 1 person lift.
- 39.7 lbs (18 kg) to 70.5 lbs (32 kg) 2 or more person lift.
- 70.5 lbs (32 kg) to 121.2 lbs (55 kg) 3 or more person lift.
- Above 121.2 lbs (55 kg) material handling systems (such as levers, slings, lifts and so on) must be used. When this is not practical, specially-trained persons or systems must be used (riggers or movers).
- As when lifting any heavy object, lift most of the weight with your legs rather than your back. Keep your knees bent and your back relatively straight and avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

### RELATED DOCUMENTATION

*General Safety Guidelines for Juniper Networks Devices*

*General Safety Warnings for Juniper Networks Devices*

[MX240 Site Preparation Checklist | 208](#)

[Removing Components from the MX240 Router Before Installing it without a Lift | 265](#)

[Installing the MX240 Chassis in the Rack Manually | 271](#)

*Installation Safety Warnings for Juniper Networks Devices*

## Ramp Warning



**WARNING:** When installing the device, do not use a ramp inclined at more than 10 degrees.

**Waarschuwing** Gebruik een oprijplaat niet onder een hoek van meer dan 10 graden.

**Varoitus** Älä käyttää sellaista kaltevaa pintaa, jonka kaltevuus ylittää 10 astetta.

**Avertissement** Ne pas utiliser une rampe dont l'inclinaison est supérieure à 10 degrés.

**Warnung** Keine Rampen mit einer Neigung von mehr als 10 Grad verwenden.

**Avvertenza** Non usare una rampa con pendenza superiore a 10 gradi.

**Advarsel** Bruk aldri en rampe som heller mer enn 10 grader.

**Aviso** Não utilize uma rampa com uma inclinação superior a 10 graus.

**¡Atención!** No usar una rampa inclinada más de 10 grados.

**Warning!** Använd inte ramp med en lutning på mer än 10 grader.

## Rack-Mounting and Cabinet-Mounting Warnings

Ensure that the rack or cabinet in which the device is installed is evenly and securely supported. Uneven mechanical loading could lead to a hazardous condition.



**WARNING:** To prevent bodily injury when mounting or servicing the device in a rack, take the following precautions to ensure that the system remains stable. The following directives help maintain your safety:

- Install the device in a rack that is secured to the building structure.
- Mount the device at the bottom of the rack if it is the only unit in the rack.
- When mounting the device on a partially filled rack, load the rack from the bottom to the top, with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing equipment, install the stabilizers before mounting or servicing the device in the rack.

**Waarschuwing** Om lichamelijk letsel te voorkomen wanneer u dit toestel in een rek monteert of het daar een servicebeurt geeft, moet u speciale voorzorgsmaatregelen nemen om ervoor te zorgen dat het toestel stabiel blijft. De onderstaande richtlijnen worden verstrekt om uw veiligheid te verzekeren:

- De Juniper Networks switch moet in een stellage worden geïnstalleerd die aan een bouwsel is verankerd.
- Dit toestel dient onderaan in het rek gemonteerd te worden als het toestel het enige in het rek is.
- Wanneer u dit toestel in een gedeeltelijk gevuld rek monteert, dient u het rek van onderen naar boven te laden met het zwaarste onderdeel onderaan in het rek.
- Als het rek voorzien is van stabiliseringshulpmiddelen, dient u de stabilisatoren te monteren voordat u het toestel in het rek monteert of het daar een servicebeurt geeft.

**Varoitus** Kun laite asetetaan telineeseen tai huolletaan sen ollessa telineessä, on noudatettava erityisiä varotoimia järjestelmän vakavuuden säilyttämiseksi, jotta vältetään loukkaantumisia. Noudata seuraavia turvallisuusohjeita:

- Juniper Networks switch on asennettava telineeseen, joka on kiinnitetty rakennukseen.
- Jos telineessä ei ole muita laitteita, aseta laite telineen alaosaan.
- Jos laite asetetaan osaksi täytettyyn telineeseen, aloita kuormittaminen sen alaosasta kaikkein raskaimmalla esineellä ja siirry sitten sen yläosaan.
- Jos telinettä varten on vakaimet, asenna ne ennen laitteen asettamista telineeseen tai sen huoltamista siinä.

**Avertissement** Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions

spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:

- Le rack sur lequel est monté le Juniper Networks switch doit être fixé à la structure du bâtiment.
- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.
- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

**Warnung** Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen, um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Der Juniper Networks switch muß in einem Gestell installiert werden, das in der Gebäudestruktur verankert ist.
- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

**Avvertenza** Per evitare infortuni fisici durante il montaggio o la manutenzione di questa unità in un supporto, occorre osservare speciali precauzioni per garantire che il sistema rimanga stabile. Le seguenti direttive vengono fornite per garantire la sicurezza personale:

- Il Juniper Networks switch deve essere installato in un telaio, il quale deve essere fissato alla struttura dell'edificio.
- Questa unità deve venire montata sul fondo del supporto, se si tratta dell'unica unità da montare nel supporto.

- Quando questa unità viene montata in un supporto parzialmente pieno, caricare il supporto dal basso all'alto, con il componente più pesante sistemato sul fondo del supporto.
- Se il supporto è dotato di dispositivi stabilizzanti, installare tali dispositivi prima di montare o di procedere alla manutenzione dell'unità nel supporto.

**Advarsel** Unngå fysiske skader under montering eller reparasjonsarbeid på denne enheten når den befinner seg i et kabinett. Vær nøye med at systemet er stabilt. Følgende retningslinjer er gitt for å verne om sikkerheten:

- Juniper Networks switch må installeres i et stativ som er forankret til bygningsstrukturen.
- Denne enheten bør monteres nederst i kabinettet hvis dette er den eneste enheten i kabinettet.
- Ved montering av denne enheten i et kabinett som er delvis fylt, skal kabinettet lastes fra bunnen og opp med den tyngste komponenten nederst i kabinettet.
- Hvis kabinettet er utstyrt med stabiliseringsutstyr, skal stabilisatorene installeres før montering eller utføring av reparasjonsarbeid på enheten i kabinettet.

**Aviso** Para se prevenir contra danos corporais ao montar ou reparar esta unidade numa estante, deverá tomar precauções especiais para se certificar de que o sistema possui um suporte estável. As seguintes directrizes ajudá-lo-ão a efectuar o seu trabalho com segurança:

- O Juniper Networks switch deverá ser instalado numa prateleira fixa à estrutura do edifício.
- Esta unidade deverá ser montada na parte inferior da estante, caso seja esta a única unidade a ser montada.
- Ao montar esta unidade numa estante parcialmente ocupada, coloque os itens mais pesados na parte inferior da estante, arrumando-os de baixo para cima.
- Se a estante possuir um dispositivo de estabilização, instale-o antes de montar ou reparar a unidade.

**¡Atención!** Para evitar lesiones durante el montaje de este equipo sobre un bastidor, oerientemente durante su mantenimiento, se debe poner mucho cuidado en que el sistema quede bien estable. Para garantizar su seguridad, proceda según las siguientes instrucciones:

- El Juniper Networks switch debe instalarse en un bastidor fijado a la estructura del edificio.
- Colocar el equipo en la parte inferior del bastidor, cuando sea la única unidad en el mismo.
- Cuando este equipo se vaya a instalar en un bastidor parcialmente ocupado, comenzar la instalación desde la parte inferior hacia la superior colocando el equipo más pesado en la parte inferior.
- Si el bastidor dispone de dispositivos estabilizadores, instalar éstos antes de montar o proceder al mantenimiento del equipo instalado en el bastidor.

**Warning!** För att undvika kroppsskada när du installerar eller utför underhållsarbete på denna enhet på en ställning måste du vidta särskilda försiktighetsåtgärder för att försäkra dig om att systemet står stadigt. Följande riktlinjer ges för att trygga din säkerhet:

- Juniper Networks switch måste installeras i en ställning som är förankrad i byggnadens struktur.
- Om denna enhet är den enda enheten på ställningen skall den installeras längst ned på ställningen.
- Om denna enhet installeras på en delvis fylld ställning skall ställningen fyllas nedifrån och upp, med de tyngsta enheterna längst ned på ställningen.
- Om ställningen är försedd med stabiliseringsdon skall dessa monteras fast innan enheten installeras eller underhålls på ställningen.

## Grounded Equipment Warning



**WARNING:** This device must be properly grounded at all times. Follow the instructions in this guide to properly ground the device to earth.

**Waarschuwing** Dit apparaat moet altijd goed geaard zijn. Volg de instructies in deze gids om het apparaat goed te aarden.

**Varoitus** Laitteen on oltava pysyvästi maadoitettu. Maadoita laite asianmukaisesti noudattamalla tämän oppaan ohjeita.

**Avertissement** L'appareil doit être correctement mis à la terre à tout moment. Suivez les instructions de ce guide pour correctement mettre l'appareil à la terre.

**Warnung** Das Gerät muss immer ordnungsgemäß geerdet sein. Befolgen Sie die Anweisungen in dieser Anleitung, um das Gerät ordnungsgemäß zu erden.

**Avvertenza** Questo dispositivo deve sempre disporre di una connessione a massa. Seguire le istruzioni indicate in questa guida per connettere correttamente il dispositivo a massa.

**Advarsel** Denne enheten på jordes skikkelig hele tiden. Følg instruksjonene i denne veiledningen for å jorde enheten.

**Aviso** Este equipamento deverá estar ligado à terra. Siga las instrucciones en esta guía para conectar correctamente este dispositivo a tierra.

**¡Atención!** Este dispositivo debe estar correctamente conectado a tierra en todo momento. Siga las instrucciones en esta guía para conectar correctamente este dispositivo a tierra.

**Warning!** Den här enheten måste vara ordentligt jordad. Följ instruktionerna i den här guiden för att jorda enheten ordentligt.

## Laser and LED Safety Guidelines and Warnings

### IN THIS SECTION

- [General Laser Safety Guidelines | 520](#)
- [Class 1 Laser Product Warning | 520](#)
- [Class 1 LED Product Warning | 521](#)
- [Laser Beam Warning | 521](#)

Juniper Networks devices are equipped with laser transmitters, which are considered a Class 1 Laser Product by the U.S. Food and Drug Administration and are evaluated as a Class 1 Laser Product per IEC/EN 60825-1 requirements.

Observe the following guidelines and warnings:

## General Laser Safety Guidelines

When working around ports that support optical transceivers, observe the following safety guidelines to prevent eye injury:

- Do not look into unterminated ports or at fibers that connect to unknown sources.
- Do not examine unterminated optical ports with optical instruments.
- Avoid direct exposure to the beam.



**LASER WARNING:** Unterminated optical connectors can emit invisible laser radiation. The lens in the human eye focuses all the laser power on the retina, so focusing the eye directly on a laser source—even a low-power laser—could permanently damage the eye.

**Avertissement** Les connecteurs à fibre optique sans terminaison peuvent émettre un rayonnement laser invisible. Le cristallin de l'œil humain faisant converger toute la puissance du laser sur la rétine, toute focalisation directe de l'œil sur une source laser, — même de faible puissance—, peut entraîner des lésions oculaires irréversibles.

## Class 1 Laser Product Warning



**LASER WARNING:** Class 1 laser product.

**Waarschuwing** Klasse-1 laser produkt.

**Varoitus** Luokan 1 lasertuote.

**Avertissement** Produit laser de classe I.

**Warnung** Laserprodukt der Klasse 1.

**Avvertenza** Prodotto laser di Classe 1.

**Advarsel** Laserprodukt av klasse 1.

**Aviso** Produto laser de classe 1.

**¡Atención!** Producto láser Clase I.

**Varning!** Laserprodukt av klass 1.



## Class 1 LED Product Warning



**LASER WARNING:** Class 1 LED product.

**Waarschuwing** Klasse 1 LED-product.

**Varoitus** Luokan 1 valodiodituote.

**Avertissement** Alarme de produit LED Class I.

**Warnung** Class 1 LED-Produktwarnung.

**Avvertenza** Avvertenza prodotto LED di Classe 1.

**Advarsel** LED-produkt i klasse 1.

**Aviso** Produto de classe 1 com LED.

**¡Atención!** Aviso sobre producto LED de Clase 1.

**Varning!** Lysdiodprodukt av klass 1.

## Laser Beam Warning



**LASER WARNING:** Do not stare into the laser beam or view it directly with optical instruments.

**Waarschuwing** Niet in de straal staren of hem rechtstreeks bekijken met optische instrumenten.

**Varoitus** Älä katso säteeseen äläkä tarkastele sitä suoraan optisen laitteen avulla.

**Avertissement** Ne pas fixer le faisceau des yeux, ni l'observer directement à l'aide d'instruments optiques.

**Warnung** Nicht direkt in den Strahl blicken und ihn nicht direkt mit optischen Geräten prüfen.

**Avvertenza** Non fissare il raggio con gli occhi né usare strumenti ottici per osservarlo direttamente.

**Advarsel** Stirr eller se ikke direkte p strlen med optiske instrumenter.

**Aviso** Não olhe fixamente para o raio, nem olhe para ele directamente com instrumentos ópticos.

**¡Atención!** No mirar fijamente el haz ni observarlo directamente con instrumentos ópticos.

**Warning!** Rikta inte blicken in mot strålen och titta inte direkt på den genom optiska instrument.

## Radiation from Open Port Apertures Warning



**LASER WARNING:** Because invisible radiation might be emitted from the aperture of the port when no fiber cable is connected, avoid exposure to radiation and do not stare into open apertures.

**Waarschuwing** Aangezien onzichtbare straling vanuit de opening van de poort kan komen als er geen fiberkabel aangesloten is, dient blootstelling aan straling en het kijken in open openingen vermeden te worden.

**Varoitus** Koska portin aukosta voi emittoitua näkymätöntä säteilyä, kun kuitukaapelia ei ole kytkettyä, vältä säteilylle altistumista äläkä katso avoimiin aukkoihin.

**Avertissement** Des radiations invisibles à l'il nu pouvant traverser l'ouverture du port lorsqu'aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures.

**Warnung** Aus der Port-Öffnung können unsichtbare Strahlen emittieren, wenn kein Glasfaserkabel angeschlossen ist. Vermeiden Sie es, sich den Strahlungen auszusetzen, und starren Sie nicht in die Öffnungen!

**Avvertenza** Quando i cavi in fibra non sono inseriti, radiazioni invisibili possono essere emesse attraverso l'apertura della porta. Evitate di esporvi alle radiazioni e non guardate direttamente nelle aperture.

**Advarsel** Unngå utsettelse for stråling, og stirr ikke inn i åpninger som er åpne, fordi usynlig stråling kan emitteres fra portens åpning når det ikke er tilkoblet en fiberkabel.

**Aviso** Dada a possibilidade de emissão de radiação invisível através do orifício da via de acesso, quando esta não tiver nenhum cabo de fibra conectado, deverá evitar an

EXposição à radiação e não deverá olhar fixamente para orifícios que se encontrarem a descoberto.

**¡Atención!** Debido a que la apertura del puerto puede emitir radiación invisible cuando no existe un cable de fibra conectado, evite mirar directamente a las aperturas para no exponerse a la radiación.

**Varning!** Osynlig strålning kan avges från en portöppning utan ansluten fiberkabel och du bör därför undvika att bli utsatt för strålning genom att inte stirra in i oskyddade öppningar.

## Maintenance and Operational Safety Guidelines and Warnings

### IN THIS SECTION

- [Battery Handling Warning | 523](#)
- [Jewelry Removal Warning | 525](#)
- [Lightning Activity Warning | 526](#)
- [Operating Temperature Warning | 527](#)
- [Product Disposal Warning | 528](#)

While performing the maintenance activities for devices, observe the following guidelines and warnings:

### Battery Handling Warning



**WARNING:** Replacing a battery incorrectly might result in an explosion. Replace a battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

**Waarschuwing** Er is ontploffingsgevaar als de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type dat door de fabrikant aanbevolen is. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften weggeworpen te worden.

**Varoitus** Räjähdyksen vaara, jos akku on vaihdettu väärään akkuun. Käytä vaihtamiseen ainoastaan saman- tai vastaavantyyppistä akkua, joka on valmistajan suosittelema. Hävitä käytetyt akut valmistajan ohjeiden mukaan.

**Avertissement** Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

**Warnung** Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

**Advarsel** Det kan være fare for eksplosjon hvis batteriet skiftes på feil måte. Skift kun med samme eller tilsvarende type som er anbefalt av produsenten. Kasser brukte batterier i henhold til produsentens instruksjoner.

**Avvertenza** Pericolo di esplosione se la batteria non è installata correttamente. Sostituire solo con una di tipo uguale o equivalente, consigliata dal produttore. Eliminare le batterie usate secondo le istruzioni del produttore.

**Aviso** Existe perigo de explosão se a bateria for substituída incorrectamente. Substitua a bateria por uma bateria igual ou de um tipo equivalente recomendado pelo fabricante. Destrua as baterias usadas conforme as instruções do fabricante.

**¡Atención!** Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería EXclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

**Varning!** Explosionsfara vid felaktigt batteribyte. Ersätt endast batteriet med samma batterityp som rekommenderas av tillverkaren eller motsvarande. Följ tillverkarens anvisningar vid kassering av använda batterier.

## Jewelry Removal Warning



**WARNING:** Before working on equipment that is connected to power lines, remove jewelry, including rings, necklaces, and watches. Metal objects heat up when connected to power and ground and can cause serious burns or can be welded to the terminals.

**Waarschuwing** Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.

**Varoitus** Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitäntänapoihin.

**Avertissement** Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.

**Warnung** Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.

**Avvertenza** Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.

**Advarsel** Fjern alle smykker (inkludert ringer, halskjeder og klokke) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.

**Aviso** Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.

**¡Atención!** Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.

**Warning!** Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledningar. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakterna.

## Lightning Activity Warning



**WARNING:** Do not work on the system or connect or disconnect cables during periods of lightning activity.

**Waarschuwing** Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.

**Varoitus** Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.

**Avertissement** Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

**Warnung** Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.

**Avvertenza** Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.

**Advarsel** Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lyner.

**Aviso** Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).

**¡Atención!** No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.

**Warning!** Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.

## Operating Temperature Warning



**WARNING:** To prevent the device from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature. To prevent airflow restriction, allow at least 6 in. (15.2 cm) of clearance around the ventilation openings.

**Waarschuwing** Om te voorkomen dat welke switch van de Juniper Networks router dan ook oververhit raakt, dient u deze niet te bedienen op een plaats waar de maximale aanbevolen omgevingstemperatuur van 40° C wordt overschreden. Om te voorkomen dat de luchtstroom wordt beperkt, dient er minstens 15,2 cm speling rond de ventilatie-openingen te zijn.

**Varoitus** Ettei Juniper Networks switch-sarjan reititin ylikuumentuisi, sitä ei saa käyttää tilassa, jonka lämpötila ylittää korkeimman suositellun ympäristölämpötilan 40° C. Ettei ilmanvaihto estyisi, tuuletusaukkojen ympärille on jätettävä ainakin 15,2 cm tilaa.

**Avertissement** Pour éviter toute surchauffe des routeurs de la gamme Juniper Networks switch, ne l'utilisez pas dans une zone où la température ambiante est supérieure à 40° C. Pour permettre un flot d'air constant, dégagez un espace d'au moins 15,2 cm autour des ouvertures de ventilations.

**Warnung** Um einen Router der switch vor Überhitzung zu schützen, darf dieser nicht in einer Gegend betrieben werden, in der die Umgebungstemperatur das empfohlene Maximum von 40° C überschreitet. Um Lüftungsverschluß zu verhindern, achten Sie darauf, daß mindestens 15,2 cm lichter Raum um die Lüftungsöffnungen herum frei bleibt.

**Avvertenza** Per evitare il surriscaldamento dei switch, non adoperateli in un locale che ecceda la temperatura ambientale massima di 40° C. Per evitare che la circolazione dell'aria sia impedita, lasciate uno spazio di almeno 15.2 cm di fronte alle aperture delle ventole.

**Advarsel** Unngå overoppheting av eventuelle rutere i Juniper Networks switch Disse skal ikke brukes på steder der den anbefalte maksimale omgivelsestemperaturen overstiger 40° C (104° F). Sørg for at klaringen rundt lufteåpningene er minst 15,2 cm (6 tommer) for å forhindre nedsatt luftsirkulasjon.

**Aviso** Para evitar o sobreaquecimento do encaminhador Juniper Networks switch, não utilize este equipamento numa área que exceda a temperatura máxima recomendada de 40° C. Para evitar a restrição à circulação de ar, deixe pelo menos um espaço de 15,2 cm à volta das aberturas de ventilação.

**¡Atención!** Para impedir que un encaminador de la serie Juniper Networks switch se recaliente, no lo haga funcionar en un área en la que se supere la temperatura ambiente máxima recomendada de 40° C. Para impedir la restricción de la entrada de aire, deje un espacio mínimo de 15,2 cm alrededor de las aperturas para ventilación.

**Warning!** Förhindra att en Juniper Networks switch överhettas genom att inte använda den i ett område där den maximalt rekommenderade omgivningstemperaturen på 40° C överskrids. Förhindra att luftcirkulationen inskränks genom att se till att det finns fritt utrymme på minst 15,2 cm omkring ventilationsöppningarna.

## Product Disposal Warning



**WARNING:** Disposal of this device must be handled according to all national laws and regulations.

**Waarschuwing** Dit produkt dient volgens alle landelijke wetten en voorschriften te worden afgedankt.

**Varoitus** Tämän tuotteen lopullisesta hävittämisestä tulee huolehtia kaikkia valtakunnallisia lakeja ja säännöksiä noudattaen.

**Avertissement** La mise au rebut définitive de ce produit doit être effectuée conformément à toutes les lois et réglementations en vigueur.

**Warnung** Dieses Produkt muß den geltenden Gesetzen und Vorschriften entsprechend entsorgt werden.

**Avvertenza** L'eliminazione finale di questo prodotto deve essere eseguita osservando le normative italiane vigenti in materia

**Advarsel** Endelig disponering av dette produktet må skje i henhold til nasjonale lover og forskrifter.

**Aviso** A descartagem final deste produto deverá ser efectuada de acordo com os regulamentos e a legislação nacional.

**¡Atención!** El desecho final de este producto debe realizarse según todas las leyes y regulaciones nacionales

**Warning!** Slutlig kassering av denna produkt bör skötas i enlighet med landets alla lagar och föreskrifter.



# General Electrical Safety Guidelines and Warnings



**WARNING:** Certain ports on the device are designed for use as intrabuilding (within-the-building) interfaces only (Type 2 or Type 4 ports as described in *GR-1089-CORE*) and require isolation from the exposed outside plant (OSP) cabling. To comply with NEBS (Network Equipment-Building System) requirements and protect against lightning surges and commercial power disturbances, the intrabuilding ports *must not* be metalically connected to interfaces that connect to the OSP or its wiring. The intrabuilding ports on the device are suitable for connection to intrabuilding or unexposed wiring or cabling only. The addition of primary protectors is not sufficient protection for connecting these interfaces metalically to OSP wiring.

**Avertissement** Certains ports de l'appareil sont destinés à un usage en intérieur uniquement (ports Type 2 ou Type 4 tels que décrits dans le document *GR-1089-CORE*) et doivent être isolés du câblage de l'installation extérieure exposée. Pour respecter les exigences NEBS et assurer une protection contre la foudre et les perturbations de tension secteur, les ports pour intérieur *ne doivent pas* être raccordés physiquement aux interfaces prévues pour la connexion à l'installation extérieure ou à son câblage. Les ports pour intérieur de l'appareil sont réservés au raccordement de câbles pour intérieur ou non exposés uniquement. L'ajout de protections ne constitue pas une précaution suffisante pour raccorder physiquement ces interfaces au câblage de l'installation extérieure.



**CAUTION:** Before removing or installing components of a device, connect an electrostatic discharge (ESD) grounding strap to an ESD point and wrap and fasten the other end of the strap around your bare wrist. Failure to use an ESD grounding strap could result in damage to the device.

**Attention** Avant de retirer ou d'installer des composants d'un appareil, raccordez un bracelet antistatique à un point de décharge électrostatique et fixez le bracelet à votre poignet nu. L'absence de port d'un bracelet antistatique pourrait provoquer des dégâts sur l'appareil.

- Install the device in compliance with the following local, national, and international electrical codes:
  - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
  - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
  - Evaluated to the TN power system.

- Canada—Canadian Electrical Code, Part 1, CSA C22.1.
- Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.

Peut être installé dans des salles de matériel de traitement de l'information conformément à l'article 645 du National Electrical Code et à la NFPA 75.

- Locate the emergency power-off switch for the room in which you are working so that if an electrical accident occurs, you can quickly turn off the power.
- Make sure that you clean grounding surface and give them a bright finish before making grounding connections.
- Do not work alone if potentially hazardous conditions exist anywhere in your workspace.
- Never assume that power is disconnected from a circuit. Always check the circuit before starting to work.
- Carefully look for possible hazards in your work area, such as moist floors, ungrounded power extension cords, and missing safety grounds.
- Operate the device within marked electrical ratings and product usage instructions.
- To ensure that the device and peripheral equipment function safely and correctly, use the cables and connectors specified for the attached peripheral equipment, and make certain they are in good condition.

You can remove and replace many device components without powering off or disconnecting power to the device, as detailed elsewhere in the hardware documentation for this device. Never install equipment that appears to be damaged.

## Prevention of Electrostatic Discharge Damage

Device components that are shipped in antistatic bags are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:

- Always use an ESD wrist strap when you are handling components that are subject to ESD damage, and make sure that it is in direct contact with your skin.

If a grounding strap is not available, hold the component in its antistatic bag (see [Figure 170 on page 531](#)) in one hand and touch the exposed, bare metal of the device with the other hand immediately before inserting the component into the device.



**WARNING:** For safety, periodically check the resistance value of the ESD grounding strap. The measurement must be in the range 1 through 10 Mohms.


**Avertissement** Par mesure de sécurité, vérifiez régulièrement la résistance du bracelet antistatique. Cette valeur doit être comprise entre 1 et 10 mégohms (Mohms).

- When handling any component that is subject to ESD damage and that is removed from the device, make sure the equipment end of your ESD wrist strap is attached to the ESD point on the chassis.

If no grounding strap is available, touch the exposed, bare metal of the device to ground yourself before handling the component.

- Avoid contact between the component that is subject to ESD damage and your clothing. ESD voltages emitted from clothing can damage components.
- When removing or installing a component that is subject to ESD damage, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an antistatic bag (see [Figure 170 on page 531](#)). If you are returning a component, place it in an antistatic bag before packing it.

**Figure 170: Placing a Component into an Antistatic Bag**

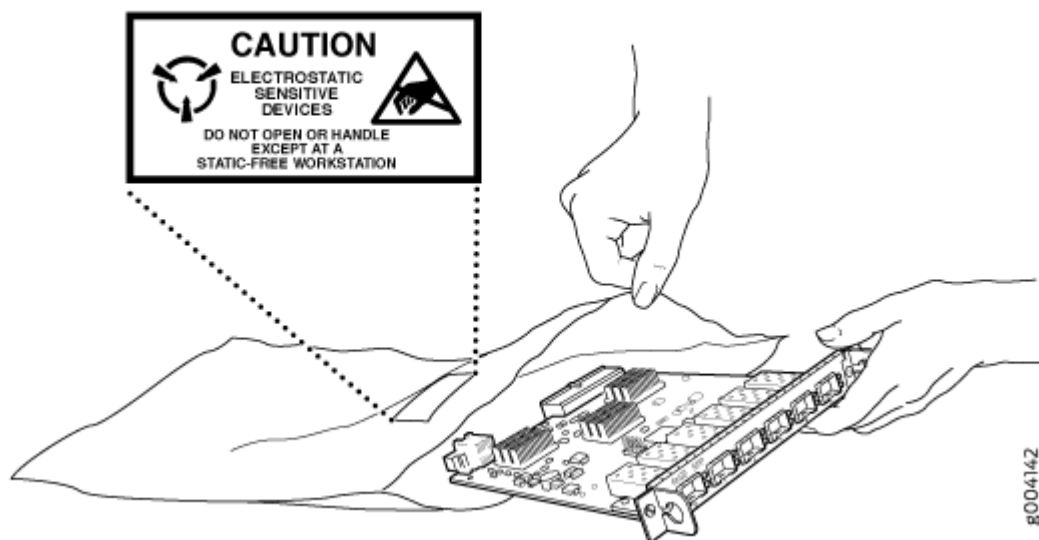



**CAUTION:** ANSI/TIA/EIA-568 cables such as Category 5e and Category 6 can get electrostatically charged. To dissipate this charge, always ground the cables to a suitable and safe earth ground before connecting them to the system.

**Attention** Les câbles ANSI/TIA/EIA-568, par exemple Cat 5e et Cat 6, peuvent emmagasiner des charges électrostatiques. Pour évacuer ces charges, reliez toujours les câbles à une prise de terre adaptée avant de les raccorder au système.

## AC Power Electrical Safety Guidelines

The following electrical safety guidelines apply to AC-powered devices:

- Note the following warnings printed on the device:

**“CAUTION: THIS UNIT HAS MORE THAN ONE POWER SUPPLY CORD. DISCONNECT ALL POWER SUPPLY CORDS BEFORE SERVICING TO AVOID ELECTRIC SHOCK.”**

**“ATTENTION: CET APPAREIL COMPORTE PLUS D'UN CORDON D'ALIMENTATION. AFIN DE PRÉVENIR LES CHOCS ÉLECTRIQUES, DÉBRANCHER TOUT CORDON D'ALIMENTATION AVANT DE FAIRE LE DÉPANNAGE.”**

- AC-powered devices are shipped with a three-wire electrical cord with a grounding-type plug that fits only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding must comply with local and national electrical codes.
- You must provide an external certified circuit breaker (2-pole circuit breaker or 4-pole circuit breaker based on your device) rated minimum 20 A in the building installation.
- The power cord serves as the main disconnecting device for the AC-powered device. The socket outlet must be near the AC-powered device and be easily accessible.
- For devices that have more than one power supply connection, you must ensure that all power connections are fully disconnected so that power to the device is completely removed to prevent electric shock. To disconnect power, unplug all power cords (one for each power supply).

## Power Cable Warning (Japanese)

**WARNING:** The attached power cable is only for this product. Do not use the cable for another product.

### 注意

附属の電源コードセットはこの製品専用です。  
他の電気機器には使用しないでください。

0477263

## AC Power Disconnection Warning



**WARNING:** Before working on the device or near power supplies, unplug all the power cords from an AC-powered device.

**Waarschuwing** Voordat u aan een frame of in de nabijheid van voedingen werkt, dient u bij wisselstroom toestellen de stekker van het netsnoer uit het stopcontact te halen.

**Varoitus** Kytke irti vaihtovirtalaitteiden virtajohto, ennen kuin teet mitään asennuspohjalle tai työskentelet virtälähteiden läheisyydessä.

**Avertissement** Avant de travailler sur un châssis ou à proximité d'une alimentation électrique, débrancher le cordon d'alimentation des unités en courant alternatif.

**Warnung** Bevor Sie an einem Chassis oder in der Nähe von Netzgeräten arbeiten, ziehen Sie bei Wechselstromeinheiten das Netzkabel ab bzw.

**Avvertenza** Prima di lavorare su un telaio o intorno ad alimentatori, scollegare il cavo di alimentazione sulle unità CA.

**Advarsel** Før det utføres arbeid på kabinettet eller det arbeides i nærheten av strømforsyningsenheter, skal strømledningen trekkes ut på vekselstrømsenheter.

**Aviso** Antes de trabalhar num chassis, ou antes de trabalhar perto de unidades de fornecimento de energia, desligue o cabo de alimentação nas unidades de corrente alternada.

**¡Atención!** Antes de manipular el chasis de un equipo o trabajar cerca de una fuente de alimentación, desenchufar el cable de alimentación en los equipos de corriente alterna (CA).

**Varning!** Innan du arbetar med ett chassi eller nära strömförsörjningsenheter skall du för växelströmsenheter dra ur nätsladden.

## MX240 DC Power Electrical Safety Guidelines

The following electrical safety guidelines apply to a DC-powered router:

- A DC-powered router is equipped with a DC terminal block that is rated for the power requirements of a maximally configured router. To supply sufficient power, terminate the DC input wiring on a facility DC source capable of supplying at least 33.3 A @ -48 VDC per input for each power supply. We recommend that the 48 VDC facility DC source should be equipped with a circuit breaker rated at 40 A (-48 VDC) minimum, or as required by local code.

Incorporate an easily accessible disconnect device into the facility wiring. In the United States and Canada, the 48 VDC facility should be equipped with a circuit breaker rated a minimum of 125% of the power provisioned for the input in accordance with the National Electrical Code in the US and the Canadian Electrical Code in Canada.

- Run two wires from the circuit breaker box to a source of 48 VDC. Use appropriate gauge wire to handle up to 40 A.
- Be sure to connect the ground wire or conduit to a solid office (earth) ground. A closed loop ring is recommended for terminating the ground conductor at the ground stud.
- A DC-powered router that is equipped with a DC terminal block is intended only for installation in a restricted access location. In the United States, a restricted access area is one in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code ANSI/NFPA 70.



**NOTE:** Primary overcurrent protection is provided by the building circuit breaker. This breaker should protect against excess currents, short circuits, and earth faults in accordance with NEC ANSI/NFPA70.

- Ensure that the polarity of the DC input wiring is correct. Under certain conditions, connections with reversed polarity might trip the primary circuit breaker or damage the equipment.

- For personal safety, connect the green and yellow wire to safety (earth) ground at both the router and the supply side of the DC wiring.
- The marked input voltage of –48 VDC for a DC-powered router is the nominal voltage associated with the battery circuit, and any higher voltages are only to be associated with float voltages for the charging function.
- Because the router is a positive ground system, you must connect the positive lead to the terminal labeled **RTN**, the negative lead to the terminal labeled **–48V**, and the earth ground to the chassis grounding points.

#### RELATED DOCUMENTATION

| *DC Power Electrical Safety Warnings for Juniper Networks Devices*

## DC Power Copper Conductors Warning



**WARNING:** Use copper conductors only.

**Waarschuwing** Gebruik alleen koperen geleiders.

**Varoitus** Käytä vain kuparijohtimia.

**Attention** Utilisez uniquement des conducteurs en cuivre.

**Warnung** Verwenden Sie ausschließlich Kupferleiter.

**Avvertenza** Usate unicamente dei conduttori di rame.

**Advarsel** Bruk bare kobberledninger.

**Aviso** Utilize apenas fios condutores de cobre.

**¡Atención!** Emplee sólo conductores de cobre.

**Varning!** Använd endast ledare av koppar.

## DC Power Disconnection Warning



**WARNING:** Before performing any of the DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the device handle of the circuit breaker in the OFF position.

**Waarschuwing** Voordat u een van de onderstaande procedures uitvoert, dient u te controleren of de stroom naar het gelijkstroom circuit uitgeschakeld is. Om u ervan te verzekeren dat alle stroom UIT is geschakeld, kiest u op het schakelbord de stroomverbreker die het gelijkstroom circuit bedient, draait de stroomverbreker naar de UIT positie en plakt de schakelaarhendel van de stroomverbreker met plakband in de UIT positie vast.

**Varoitus** Varmista, että tasavirtapiirissä ei ole virtaa ennen seuraavien toimenpiteiden suorittamista. Varmistaaksesi, että virta on KATKAISTU täysin, paikanna tasavirrasta huolehtivassa kojetaulussa sijaitseva suojakytkin, käännä suojakytkin KATKAISTU-asentoon ja teippaa suojakytkimen varsi niin, että se pysyy KATKAISTU-asennossa.

**Avertissement** Avant de pratiquer l'une quelconque des procédures ci-dessous, vérifier que le circuit en courant continu n'est plus sous tension. Pour en être sûr, localiser le disjoncteur situé sur le panneau de service du circuit en courant continu, placer le disjoncteur en position fermée (OFF) et, à l'aide d'un ruban adhésif, bloquer la poignée du disjoncteur en position OFF.

**Warnung** Vor Ausführung der folgenden Vorgänge ist sicherzustellen, daß die Gleichstromschaltung keinen Strom erhält. Um sicherzustellen, daß sämtlicher Strom abgestellt ist, machen Sie auf der Schalttafel den Unterbrecher für die Gleichstromschaltung ausfindig, stellen Sie den Unterbrecher auf AUS, und kleben Sie den Schaltergriff des Unterbrechers mit Klebeband in der AUS-Stellung fest.

**Avvertenza** Prima di svolgere una qualsiasi delle procedure seguenti, verificare che il circuito CC non sia alimentato. Per verificare che tutta l'alimentazione sia scollegata (OFF), individuare l'interruttore automatico sul quadro strumenti che alimenta il circuito CC, mettere l'interruttore in posizione OFF e fissarlo con nastro adesivo in tale posizione.

**Advarsel** Før noen av disse prosedyrene utføres, kontroller at strømmen er frakoblet likestrømkretsen. Sørg for at all strøm er slått AV. Dette gjøres ved å lokalisere strømbryteren på brytertavlen som betjener likestrømkretsen, slå strømbryteren AV og teipe bryterhåndtaket på strømbryteren i AV-stilling.



**Aviso** Antes de executar um dos seguintes procedimentos, certifique-se que desligou a fonte de alimentação de energia do circuito de corrente contínua. Para se assegurar que toda a corrente foi DESLIGADA, localize o disjuntor no painel que serve o circuito de corrente contínua e coloque-o na posição OFF (Desligado), segurando nessa posição a manivela do interruptor do disjuntor com fita isoladora.

**¡Atención!** Antes de proceder con los siguientes pasos, comprobar que la alimentación del circuito de corriente continua (CC) esté cortada (OFF). Para asegurarse de que toda la alimentación esté cortada (OFF), localizar el interruptor automático en el panel que alimenta al circuito de corriente continua, cambiar el interruptor automático a la posición de Apagado (OFF), y sujetar con cinta la palanca del interruptor automático en posición de Apagado (OFF).

**Warning!** Innan du utför någon av följande procedurer måste du kontrollera att strömförsörjningen till likströmskretsen är bruten. Kontrollera att all strömförsörjning är BRUTEN genom att slå AV det överspänningsskydd som skyddar likströmskretsen och tejpa fast överspänningsskyddets omkopplare i FRÅN-läget.

## DC Power Grounding Requirements and Warning

An insulated grounding conductor that is identical in size to the grounded and ungrounded branch circuit supply conductors but is identifiable by green and yellow stripes is installed as part of the branch circuit that supplies the device. The grounding conductor is a separately derived system at the supply transformer or motor generator set.



**WARNING:** When you install the device, the ground connection must always be made first and disconnected last.

**Waarschuwing** Bij de installatie van het toestel moet de aardverbinding altijd het eerste worden gemaakt en het laatste worden losgemaakt.

**Varoitus** Laitetta asennettaessa on maahan yhdistäminen aina tehtävä ensiksi ja maadoituksen irti kytkeminen viimeiseksi.

**Avertissement** Lors de l'installation de l'appareil, la mise à la terre doit toujours être connectée en premier et déconnectée en dernier.

**Warnung** Der Erdanschluß muß bei der Installation der Einheit immer zuerst hergestellt und zuletzt abgetrennt werden.

**Avvertenza** In fase di installazione dell'unità, eseguire sempre per primo il collegamento a massa e disconnetterlo per ultimo.

**Advarsel** Når enheten installeres, må jordledningen alltid tilkobles først og frakobles sist.

**Aviso** Ao instalar a unidade, a ligação à terra deverá ser sempre a primeira a ser ligada, e a última a ser desligada.

**¡Atención!** Al instalar el equipo, conectar la tierra la primera y desconectarla la última.

**Warning!** Vid installation av enheten måste jordledningen alltid anslutas först och kopplas bort sist.

## DC Power Wiring Sequence Warning



**WARNING:** Wire the DC power supply using the appropriate lugs. When connecting power, the proper wiring sequence is ground to ground, +RTN to +RTN, then -48 V to -48 V. When disconnecting power, the proper wiring sequence is -48 V to -48 V, +RTN to +RTN, then ground to ground. Note that the ground wire must always be connected first and disconnected last.

**Waarschuwing** De juiste bedradingsvolgorde verbonden is aarde naar aarde, +RTN naar +RTN, en -48 V naar -48 V. De juiste bedradingsvolgorde losgemaakt is en -48 naar -48 V, +RTN naar +RTN, aarde naar aarde.

**Varoitus** Oikea yhdistettävä kytkentäjäjestys on maajohto maajohtoon, +RTN varten +RTN, -48 V varten -48 V. Oikea irrotettava kytkentäjäjestys on -48 V varten -48 V, +RTN varten +RTN, maajohto maajohtoon.

**Avertissement** Câblez l'alimentation CC En utilisant les crochets appropriés à l'extrémité de câblage. En reliant la puissance, l'ordre approprié de câblage est rectifié pour rectifier, +RTN à +RTN, puis -48 V à -48 V. En débranchant la puissance, l'ordre approprié de câblage est -48 V à -48 V, +RTN à +RTN, a alors rectifié pour rectifier. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois.

**Warnung** Die Stromzufuhr ist nur mit geeigneten Ringösen an das DC Netzteil anzuschliessen. Die richtige Anschlusssequenz ist: Erdanschluss zu Erdanschluss, +RTN zu +RTN und dann -48V zu -48V. Die richtige Sequenz zum Abtrennen der

Stromversorgung ist -48V zu -48V, +RTN zu +RTN und dann Erdanschluss zu Erdanschluss. Es ist zu beachten dass der Erdanschluss immer zuerst angeschlossen und als letztes abgetrennt wird.

**Avvertenza** Mostra la morsettiera dell alimentatore CC. Cablare l'alimentatore CC usando i connettori adatti all'estremità del cablaggio, come illustrato. La corretta sequenza di cablaggio è da massa a massa, da positivo a positivo (da linea ad L) e da negativo a negativo (da neutro a N). Tenere presente che il filo di massa deve sempre venire collegato per primo e scollegato per ultimo.

**Advarsel** Riktig tilkoples tilkoplingssekvens er jord til jord, +RTN til +RTN, -48 V til -48 V. Riktig frakoples tilkoplingssekvens er -48 V til -48 V, +RTN til +RTN, jord til jord.

**Aviso** Ate con alambre la fuente de potencia cc Usando los terminales apropiados en el extremo del cableado. Al conectar potencia, la secuencia apropiada del cableado se muele para moler, +RTN a +RTN, entonces -48 V a -48 V. Al desconectar potencia, la secuencia apropiada del cableado es -48 V a -48 V, +RTN a +RTN, entonces molió para moler. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último.

**¡Atención!** Wire a fonte de alimentação de DC Usando os talões apropriados nan EXTremidade da fiação. Ao conectar a potência, a seqüência apropriada da fiação é moída para moer, +RTN a +RTN, então -48 V a -48 V. Ao desconectar a potência, a seqüência apropriada da fiação é -48 V a -48 V, +RTN a +RTN, moeu então para moer. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último.

**Warning!** Korrekt kopplingssekvens ar jord till jord, +RTN till +RTN, -48 V till -48 V. Korrekt kopplas kopplingssekvens ar -48 V till -48 V, +RTN till +RTN, jord till jord.

## DC Power Wiring Terminations Warning



**WARNING:** When stranded wiring is required, use approved wiring terminations, such as closed-loop or spade-type with upturned lugs. These terminations must be the appropriate size for the wires and must clamp both the insulation and conductor.

**Waarschuwing** Wanneer geslagen bedrading vereist is, dient u bedrading te gebruiken die voorzien is van goedgekeurde aansluitpunten, zoals het gesloten-lus type of het grijperschop type waarbij de aansluitpunten omhoog wijzen. Deze aansluitpunten dienen de juiste maat voor de draden te hebben en dienen zowel de isolatie als de geleider vast te klemmen.

**Varoitus** Jos säikeellinen johdin on tarpeen, käytä hyväksyttyä johdinliitääntää, esimerkiksi suljettua silmukkaa tai kourumaista liitääntää, jossa on ylöspäin käännetyt kiinnityskorvat. Tällaisten liitääntöjen tulee olla kooltaan johtimiin sopivia ja niiden tulee puristaa yhteen sekä eristeen että johdinosan.

**Avertissement** Quand des fils torsadés sont nécessaires, utiliser des douilles terminales homologuées telles que celles à circuit fermé ou du type à plage ouverte avec cosses rebroussées. Ces douilles terminales doivent être de la taille qui convient aux fils et doivent être refermées sur la gaine isolante et sur le conducteur.

**Warnung** Wenn Litzenverdrahtung erforderlich ist, sind zugelassene Verdrahtungsabschlüsse, z.B. für einen geschlossenen Regelkreis oder gabelförmig, mit nach oben gerichteten Kabelschuhen zu verwenden. Diese Abschlüsse sollten die angemessene Größe für die Drähte haben und sowohl die Isolierung als auch den Leiter festklemmen.

**Avvertenza** Quando occorre usare trecce, usare connettori omologati, come quelli a occhiello o a forcilla con linguette rivolte verso l'alto. I connettori devono avere la misura adatta per il cablaggio e devono serrare sia l'isolante che il conduttore.

**Advarsel** Hvis det er nødvendig med flertrådede ledninger, brukes godkjente ledningsavslutninger, som for eksempel lukket sløyfe eller spadetype med oppoverbøyde kabelsko. Disse avslutningene skal ha riktig størrelse i forhold til ledningene, og skal klemme sammen både isolasjonen og lederen.

**Aviso** Quando forem requeridas montagens de instalação eléctrica de cabo torcido, use terminações de cabo aprovadas, tais como, terminações de cabo em circuito fechado e planas com terminais de orelha voltados para cima. Estas terminações de cabo deverão ser do tamanho apropriado para os respectivos cabos, e deverão prender simultaneamente o isolamento e o fio condutor.

**¡Atención!** Cuando se necesite hilo trenzado, utilizar terminales para cables homologados, tales como las de tipo "bucle cerrado" o "espada", con las lengüetas de conexión vueltas hacia arriba. Estos terminales deberán ser del tamaño apropiado para los cables que se utilicen, y tendrán que sujetar tanto el aislante como el conductor.

**Warning!** När flertrådiga ledningar krävs måste godkända ledningskontakter användas, t.ex. kabelsko av sluten eller öppen typ med uppåtvänd tapp. Storleken på dessa kontakter måste vara avpassad till ledningarna och måste kunna hålla både isoleringen och ledaren fastklämda.

## Midplane Energy Hazard Warning



**WARNING:** High levels of electrical energy are distributed across the midplane. Be careful not to contact the midplane connectors, or any component connected to the midplane, with any metallic object while servicing components.

## Multiple Power Supplies Disconnection Warning



**WARNING:** The network device has more than one power supply connection. All connections must be removed completely to remove power from the unit completely.

**Waarschuwing** Deze eenheid heeft meer dan één stroomtoevoerverbinding; alle verbindingen moeten volledig worden verwijderd om de stroom van deze eenheid volledig te verwijderen.

**Varoitus** Tässä laitteessa on useampia virtalähdekytkentöjä. Kaikki kytkennät on irrotettava kokonaan, jotta virta poistettaisiin täysin laitteesta.

**Avertissement** Cette unité est équipée de plusieurs raccordements d'alimentation. Pour supprimer tout courant électrique de l'unité, tous les cordons d'alimentation doivent être débranchés.

**Warnung** Diese Einheit verfügt über mehr als einen Stromanschluß; um Strom gänzlich von der Einheit fernzuhalten, müssen alle Stromzufuhren abgetrennt sein.

**Avvertenza** Questa unità ha più di una connessione per alimentatore elettrico; tutte le connessioni devono essere completamente rimosse per togliere l'elettricità dall'unità.

**Advarsel** Denne enheten har mer enn én strømtilkobling. Alle tilkoblinger må kobles helt fra for å eliminere strøm fra enheten.

**Aviso** Este dispositivo possui mais do que uma conexão de fonte de alimentação de energia; para poder remover a fonte de alimentação de energia, deverão ser desconectadas todas as conexões existentes.

**¡Atención!** Esta unidad tiene más de una conexión de suministros de alimentación; para eliminar la alimentación por completo, deben desconectarse completamente todas las conexiones.

**Varning!** Denna enhet har mer än en strömförsörjningsanslutning; alla anslutningar måste vara helt avlägsnade innan strömtillförseln till enheten är fullständigt bruten.

## Action to Take After an Electrical Accident

If an electrical accident results in an injury, take the following actions in this order:

1. Use caution. Be aware of potentially hazardous conditions that could cause further injury.
2. Disconnect power from the device.
3. If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, and then call for help.

## Site Electrical Wiring Guidelines for MX Series Routers

### IN THIS SECTION

- [Distance Limitations for Signaling | 543](#)
- [Radio Frequency Interference | 543](#)
- [Electromagnetic Compatibility | 543](#)

## Distance Limitations for Signaling

Improperly installed wires can emit radio interference. In addition, the potential for damage from lightning strikes increases if wires exceed recommended distances or if wires pass between buildings. The electromagnetic pulse (EMP) caused by lightning can damage unshielded conductors and destroy electronic devices. If your site has previously experienced such problems, you might want to consult experts in electrical surge suppression and shielding.

## Radio Frequency Interference

You can reduce or eliminate the emission of radio frequency interference (RFI) from your site wiring by using twisted-pair cable with a good distribution of grounding conductors. If you must exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal when applicable.

## Electromagnetic Compatibility

If your site is susceptible to problems with electromagnetic compatibility (EMC), particularly from lightning or radio transmitters, you might want to seek expert advice. Strong sources of electromagnetic interference (EMI) can destroy the signal drivers and receivers in the router and conduct power surges over the lines into the equipment, resulting in an electrical hazard. It is particularly important to provide a properly grounded and shielded environment and to use electrical surge-suppression devices.



**WARNING:** The intrabuilding port(s) of the equipment or subassembly is suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding port(s) of the equipment or subassembly **MUST NOT** be metalically connected to interfaces that connect to the OSP or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE, Issue 4) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metalically to OSP wiring.

# Agency Approvals and Compliance Statements

## IN THIS SECTION

- [Agency Approvals for MX Series Routers | 544](#)
- [Compliance Statements for EMC Requirements | 546](#)
- [Compliance Statements for Environmental Requirements | 547](#)
- [Compliance Statements for Data Center | 547](#)
- [Compliance Statements for Acoustic Noise for the MX240 Router | 548](#)

## Agency Approvals for MX Series Routers

### IN THIS SECTION

- [Compliance Statement for Argentina | 545](#)

The routers comply with the following standards:

- Safety
  - EN 60825-1 Safety of Laser Products - Part 1: Equipment Classification, Requirements and User's Guide
  - CSA 60950-1 Safety of Information Technology Equipment
  - UL 60950-1 Safety of Information Technology Equipment
  - EN 60950-1 Safety of Information Technology Equipment
  - IEC 60950-1 Safety of Information Technology Equipment (with country deviations)
- EMC/EMI/ETSI
  - AS/NZS CISPR22 (Australia/New Zealand)



- EN55022 Class A European Radiated Emissions
- FCC Part 15 Class A USA Radiated Emissions
- VCCI Class A Japanese Radiated Emissions
- ETSI EN-300386 V1.3.3 Telecommunication Network Equipment. Electromagnetic Compatibility Requirements
- Immunity
  - EN 55024 +A1+A2 Information Technology Equipment Immunity Characteristics
  - EN-61000-3-2 Power Line Harmonics
  - EN-61000-3-3 +A1 +A2 +A3 Power Line Voltage Fluctuations and Flicker
  - EN-61000-4-2 +A1 +A2 Electrostatic Discharge
  - EN-61000-4-3 +A1+A2 Radiated Immunity
  - EN-61000-4-4 Electrical Fast Transients
  - EN-61000-4-5 Surge
  - EN-61000-4-6 Immunity to Conducted Disturbances
  - EN-61000-4-11 Voltage Dips and Sags
- NEBS
  - GR-1089-Core: EMC and Electrical Safety for Network Telecommunications Equipment
  - SR-3580 NEBS Criteria Levels (Level 3 Compliance)
  - GR-63-Core: NEBS, Physical Protection

## Compliance Statement for Argentina

EQUIPO DE USO IDÓNEO.

## SEE ALSO

[MX240 Compliance Statements for NEBS](#)

[Compliance Statements for EMC Requirements for the MX240 Router](#)

[Compliance Statements for Environmental Requirements | 547](#)

## Compliance Statements for EMC Requirements

### IN THIS SECTION

- Canada | 546
- European Community | 546
- Israel | 546
- Japan | 547
- United States | 547

### Canada

CAN ICES-3 (A)/NMB-3(A)

### European Community

This is a Class A product. In a domestic environment, this product might cause radio interference in which case the user might be required to take adequate measures.

### Israel

**אזהרה**  
מוצר זה הוא מוצר Class A.  
בסביבה ביתית, מוצר זה עלול לגרום הפרעות בתדר רדיו, ובמקרה זה, המשתמש עשוי להידרש לנקוט אמצעים מתאימים.

Translation from Hebrew—Warning: This product is Class A. In residential environments, the product might cause radio interference, and in such a situation, the user might be required to take adequate measures.

## Japan

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用する  
と電波妨害を引き起こすことがあります。この場合には使用者が適切な対策  
を講ずるよう要求されることがあります。 VCCI-A

The preceding translates as follows:

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this product is used near a radio or television receiver in a domestic environment, it might cause radio interference. Install and use the equipment according to the instruction manual. VCCI-A.

## United States

The hardware equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## Compliance Statements for Environmental Requirements

Batteries in this product are not based on mercury, lead, or cadmium substances. The batteries used in this product are in compliance with EU Directives 91/157/EEC, 93/86/EEC, and 98/101/EEC. The product documentation includes instructional information about the proper method of reclamation and recycling.

## Compliance Statements for Data Center

- The equipment is suitable for installation as part of the Common Bonding Network (CBN).
- The equipment is suitable for installation in locations where the National Electrical Code (NEC) applies.
- The battery return connection is to be treated as an isolated DC return (that is, DC-I), as defined in GR-1089-CORE.

- You must provision a readily accessible device outside of the equipment to disconnect power. The device must also be rated based on local electrical code practice.

## Compliance Statements for Acoustic Noise for the MX240 Router

The router complies with NEBS Level 3 requirements:

- GR-63-CORE: NEBS, Physical Protection
- GR-1089-CORE: EMC and Electrical Safety for Network Telecommunications Equipment

### SEE ALSO

---

[Agency Approvals and Compliance Statements | 544](#)

---

[MX240 Compliance Statements for NEBS](#)

---

[Compliance Statements for EMC Requirements for the MX240 Router](#)

---

[Compliance Statements for Environmental Requirements | 547](#)