

Example: Connecting an Access Switch to a Distribution Switch

In large local area networks (LANs), you commonly need to aggregate traffic from a number of access switches into a distribution switch.

This example describes how to connect an access switch to a distribution switch:

- Requirements on page 1
- Overview and Topology on page 1
- Configuring the Access Switch on page 3
- Configuring the Distribution Switch on page 7
- Verification on page 9

Requirements

This example uses the following hardware and software components:

- For the distribution switch, one EX 4200-24F switch. This model is designed to be used as a distribution switch for aggregation or collapsed core network topologies and in space-constrained data centers. It has twenty-four 1-Gigabit Ethernet fiber SFP ports and an EX-UM-2XFP uplink module with two 10-Gigabit Ethernet XFP ports.
- For the access switch, one EX 3200-24P, which has twenty-four 1-Gigabit Ethernet ports, all of which support Power over Ethernet (PoE), and an uplink module with four 1-Gigabit Ethernet ports.
- JUNOS Release 9.0 or later for EX-series switches

Before you connect an access switch to a distribution switch, be sure you have:

- Installed the two switches. See *Installing and Connecting an EX3200 or EX4200 Switch*.
- Performed the initial software configuration on both switches. See *Connecting and Configuring an EX Series Switch (J-Web Procedure)*.

Overview and Topology

In a large office that is spread across several floors or buildings, or in a data center, you commonly aggregate traffic from a number of access switches into a distribution switch. This configuration example shows a simple topology to illustrate how to connect a single access switch to a distribution switch.

In the topology, the LAN is segmented into two VLANs, one for the sales department and the second for the support team. One 1-Gigabit Ethernet port on the access switch's uplink module connects to the distribution switch, to one 1-Gigabit Ethernet port on the distribution switch.

Figure 1 shows one EX 4200 switch that is connected to the three access switches.

Figure 1: Topology for Configuration

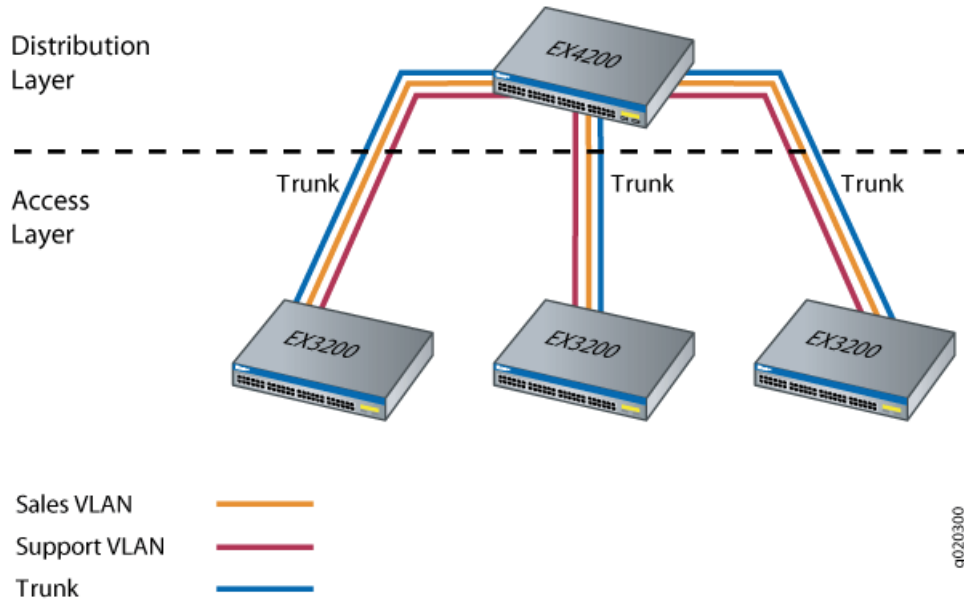


Table 1 explains the components of the example topology. The example shows how to configure one of the three access switches. The other access switches could be configured in the same manner.

Table 1: Components of the Topology for Connecting an Access Switch to a Distribution Switch

Property	Settings
Access switch hardware	EX 3200-24P, 24 1-Gigabit Ethernet ports, all PoE-enabled (ge-0/0/0 through ge-0/0/23); one 4-port 1-Gigabit Ethernet uplink module (EX-UM-4SFP)
Distribution switch hardware	EX 4200-24F, 24 1-Gigabit Ethernet fiber SPF ports (ge-0/0/0 through ge-0/0/23); one 2-port 10-Gigabit Ethernet XFP uplink module (EX-UM-4SFP)
VLAN names and tag IDs	sales, tag 100 support, tag 200
VLAN subnets	sales: 192.0.2.0/25 (addresses 192.0.2.1 through 192.0.2.126) support: 192.0.2.128/25 (addresses 192.0.2.129 through 192.0.2.254)
Trunk port interfaces	On the access switch: ge-0/1/0 On the distribution switch: ge-0/0/0
Access port interfaces in VLAN sales (on access switch)	Avaya IP telephones: ge-0/0/3 through ge-0/0/19 Wireless access points: ge-0/0/0 and ge-0/0/1 Printers: ge-0/0/22 and ge-0/0/23 File servers: ge-0/0/20 and ge-0/0/21
Access port interfaces in VLAN support (on access switch)	Avaya IP telephones: ge-0/0/25 through ge-0/0/43 Wireless access points: ge-0/0/24 Printers: ge-0/0/44 and ge-0/0/45 File servers: ge-0/0/46 and ge-0/0/47

Table 1: Components of the Topology for Connecting an Access Switch to a Distribution Switch (continued)

Unused interfaces on access switch	ge-0/0/2 and ge-0/0/25
------------------------------------	------------------------

Configuring the Access Switch

To configure the access switch:

CLI Quick Configuration To quickly configure the access switch, copy the following commands and paste them into the switch terminal window:

```
[edit]
set interfaces ge-0/0/0 unit 0 description "Sales Wireless access point port"
set interfaces ge-0/0/0 unit 0 family ethernet-switching vlan members sales
set interfaces ge-0/0/3 unit 0 description "Sales phone port"
set interfaces ge-0/0/3 unit 0 family ethernet-switching vlan members sales
set interfaces ge-0/0/22 unit 0 description "Sales printer port"
set interfaces ge-0/0/22 unit 0 family ethernet-switching vlan members sales
set interfaces ge-0/0/20 unit 0 description "Sales file server port"
set interfaces ge-0/0/20 unit 0 family ethernet-switching vlan members sales
set interfaces ge-0/0/24 unit 0 description "Support wireless access point port"
set interfaces ge-0/0/24 unit 0 family ethernet-switching vlan members support
set interfaces ge-0/0/26 unit 0 description "Support phone port"
set interfaces ge-0/0/26 unit 0 family ethernet-switching vlan members support
set interfaces ge-0/0/44 unit 0 description "Support printer port"
set interfaces ge-0/0/44 unit 0 family ethernet-switching vlan members support
set interfaces ge-0/0/46 unit 0 description "Support file server port"
set interfaces ge-0/0/46 unit 0 family ethernet-switching vlan members support
set interfaces ge-0/1/0 unit 0 description "Uplink module port connection to
distribution switch"
set interfaces ge-0/1/0 unit 0 family ethernet-switching port-mode trunk
set interfaces ge-0/1/0 unit 0 family ethernet-switching native-vlan-id 1
set interfaces ge-0/1/0 unit 0 family ethernet switching vlan members [sales
support]
set interfaces vlan unit 0 family inet address 192.0.2.1/25
set interfaces vlan unit 1 family inet address 192.0.2.129/25
set vlans sales interface ge-0/0/0.0
set vlans sales interface ge-0/0/3.0
set vlans sales interface ge-0/0/22.0
set vlans sales interface ge-0/0/20.0
set vlans sales l3-interface vlan.0
set vlans sales vlan-id 100
set vlans sales vlan-description "Sales VLAN"
set vlans support interface ge-0/0/24.0
set vlans support interface ge-0/0/26.0
set vlans support interface ge-0/0/44.0
set vlans support interface ge-0/0/46.0
set vlans support vlan-id 200
set vlans support l3-interface vlan.1
set vlans support vlan-description "Support VLAN"
```

Step-by-Step Procedure To configure the access switch:

1. Configure the 1-Gigabit Ethernet interface on the uplink module to be the trunk port that connects to the distribution switch:

```
[edit interfaces ge-0/1/0 unit 0]
user@access-switch# set description "Uplink module port connection to
distribution switch"
user@access-switch# set ethernet-switching port-mode trunk
```

2. Specify the VLANs to be aggregated on the trunk port:

```
[edit interfaces ge-0/1/0 unit 0]
user@access-switch# set ethernet-switching vlan members [ sales support
]
```

3. Configure the VLAN ID to use for packets that are received with no dot1q tag (untagged packets):

```
[edit interfaces ge-0/1/0 unit 0]
user@access-switch# set ethernet-switching native-vlan-id 1
```

4. Configure the sales VLAN:

```
[edit vlans sales]
user@access-switch# set vlan-description "Sales VLAN"
user@access-switch# set vlan-id 100
user@access-switch# set 13-interface vlan.0
```

5. Configure the support VLAN:

```
[edit vlans support]
user@access-switch# set vlan-description "Support VLAN"
user@access-switch# set vlan-id 200
user@access-switch# set 13-interface vlan.1
```

6. Create the subnet for the sales broadcast domain:

```
[edit interfaces]
user@access-switch# set vlan unit 0 family inet address 192.0.2.1/25
```

7. Create the subnet for the support broadcast domain:

```
[edit interfaces]
user@access-switch# set vlan unit 1 family inet address 192.0.2.129/25
```

8. Configure the interfaces in the sales VLAN:

```
[edit interfaces]
user@access-switch# set ge-0/0/0 unit 0 description "Sales wireless access
point port"
user@access-switch# set ge-0/0/0 unit 0 family ethernet-switching vlan
members sales
```

```

user@access-switch# set ge-0/0/3 unit 0 description "Sales phone port"
user@access-switch# set ge-0/0/3 unit 0 family ethernet-switching vlan
members sales
user@access-switch# set ge-0/0/20 unit 0 description "Sales file server
port"
user@access-switch# set ge-0/0/20 unit 0 family ethernet-switching vlan
members sales
user@access-switch# set ge-0/0/22 unit 0 description "Sales printer port"
user@access-switch# set ge-0/0/22 unit 0 family ethernet-switching vlan
members sales

```

- Configure the interfaces in the support VLAN:

```

[edit interfaces]
user@access-switch# set ge-0/0/24 unit 0 description "Support wireless
access point port"
user@access-switch# set ge-0/0/24 unit 0 family ethernet-switching vlan
members support
user@access-switch# set ge-0/0/26 unit 0 description "Support phone port"
user@access-switch# set ge-0/0/26 unit 0 family ethernet-switching vlan
members support
user@access-switch# set ge-0/0/44 unit 0 description "Support printer
port"
user@access-switch# set ge-0/0/44 unit 0 family ethernet-switching vlan
members support
user@access-switch# set ge-0/0/46 unit 0 description "Support file server
port"
user@access-switch# set ge-0/0/46 unit 0 family ethernet-switching vlan
members support

```

- Configure descriptions and VLAN tag IDs for the sales and support VLANs:

```

[edit vlans]
user@access-switch# set sales vlan-description "Sales VLAN"
user@access-switch# set sales vlan-id 100
user@access-switch# set support vlan-description "Support VLAN"
user@access-switch# set support vlan-id 200

```

- To route traffic between the sales and support VLANs and associate a Layer 3 interface with each VLAN:

```

[edit vlans]
user@access-switch# set sales l3-interface vlan.0
user@access-switch# set support l3-interface vlan.1

```

Results Display the results of the configuration:

```

user@access-switch> show
interfaces {
  ge-0/0/0 {
    unit 0 {
      description "Sales wireless access point port";
      family ethernet-switching {
        vlan members sales;

```

```

    }
  }
}
ge-0/0/3 {
  unit 0 {
    description "Sales phone port";
    family ethernet-switching {
      vlan members sales;
    }
  }
}
ge-0/0/20 {
  unit 0 {
    description "Sales file server port";
    family ethernet-switching {
      vlan members sales;
    }
  }
}
ge-0/0/22 {
  unit 0 {
    description "Sales printer port";
    family ethernet-switching {
      vlan members sales;
    }
  }
}
ge-0/0/24 {
  unit 0 {
    description "Support wireless access point port";
    family ethernet-switching {
      vlan members support;
    }
  }
}
ge-0/0/26 {
  unit 0 {
    description "Support phone port";
    family ethernet-switching {
      vlan members support;
    }
  }
}
ge-0/0/44 {
  unit 0 {
    description "Support printer port";
    family ethernet-switching {
      vlan members sales;
    }
  }
}
ge-0/0/46 {
  unit 0 {
    description "Support file server port";
    family ethernet-switching {
      vlan members support;
    }
  }
}

```

```

    }
  }
}
ge-0/1/0 {
  unit 0 {
    description "Uplink module port connection to distribution switch";
    family ethernet-switching {
      port-mode trunk;
      vlan members [ sales support ];
      native-vlan-id 1;
    }
  }
}
vlan {
  unit 0 {
    family inet address 192.0.2.1/25;
  }
  unit 1 {
    family inet address 192.0.2.129/25;
  }
}
vpls {
  sales {
    vlan-id 100;
    vlan-description "Sales VLAN";
    I3-interface vlan.0;
  }
  support {
    vlan-id 200;
    vlan-description "Support VLAN";
    I3-interface vlan.1;
  }
}
}

```



TIP: To quickly configure the distribution switch, issue the `load merge terminal` command, then copy the hierarchy and paste it into the switch terminal window.

Configuring the Distribution Switch

To configure the distribution switch:

CLI Quick Configuration To quickly configure the distribution switch, copy the following commands and paste them into the switch terminal window:

```

set interfaces ge-0/0/0 description "Connection to access switch"
set interfaces ge-0/0/0 ethernet-switching port-mode trunk
set interfaces ge-0/0/0 ethernet-switching vlan members [ sales support ]
set interfaces ge-0/0/0 ethernet-switching native-vlan-id 1
set interfaces vlan unit 0 family inet address 192.0.2.2/25
set interfaces vlan unit 1 family inet address 192.0.2.130/25
set vpls sales vlan-description "Sales VLAN"

```

```

set vlans sales vlan-id 100
set vlans sales l3-interface vlan.0
set vlans support vlan-description "Support VLAN"
set vlans support vlan-id 200
set vlans support l3-interface vlan.1

```

Step-by-Step Procedure To configure the distribution switch:

1. Configure the interface on the switch to be the trunk port that connects to the access switch:

```

[edit interfaces ge-0/0/0 unit 0]
user@distribution-switch# set description "Connection to access switch"
user@distribution-switch# set ethernet-switching port-mode trunk

```

2. Specify the VLANs to be aggregated on the trunk port:

```

[edit interfaces ge-0/0/0 unit 0]
user@distribution-switch# set ethernet-switching vlan members [ sales
support ]

```

3. Configure the VLAN ID to use for packets that are received with no dot1q tag (untagged packets):

```

[edit interfaces]
user@distribution-switch# set ge-0/0/0 ethernet-switching native-vlan-id
1

```

4. Configure the sales VLAN:

```

[edit vlans sales]
user@distribution-switch# set vlan-description "Sales VLAN"
user@distribution-switch# set vlan-id 100
user@distribution-switch# set l3-interface vlan.0

```

5. Configure the support VLAN:

```

[edit vlans support]
user@distribution-switch# set vlan-description "Support VLAN"
user@distribution-switch# set vlan-id 200
user@distribution-switch# set l3-interface vlan.1

```

6. Create the subnet for the sales broadcast domain:

```

[edit interfaces]
user@distribution-switch# set vlan unit 0 family inet address 192.0.2.2/25

```

7. Create the subnet for the support broadcast domain:

```

[edit interfaces]
user@distribution-switch# set vlan unit 1 family inet address
192.0.2.130/25

```

Results Display the results of the configuration:

```
user@distribution-switch> show
interfaces {
  ge-0/0/0 {
    description "Connection to access switch";
    unit 0 {
      family ethernet-switching {
        port-mode trunk;
        vlan members [ sales support ];
        native-vlan-id 1;
      }
    }
  }
  vlan {
    unit 0 {
      family inet address 192.0.2.2/25;
    }
    unit 1 {
      family inet address 192.0.2.130/25;
    }
  }
}
vlangs {
  sales {
    vlan-id 100;
    vlan-description "Sales VLAN";
    I3-interface vlan.0;
  }
  support {
    vlan-id 200;
    vlan-description "Support VLAN";
    I3-interface vlan.1;
  }
}
```



TIP: To quickly configure the distribution switch, issue the `load merge terminal` command, then copy the hierarchy and paste it into the switch terminal window.

Verification

To confirm that the configuration is working properly, perform these tasks:

- Verifying the VLAN Members and Interfaces on the Access Switch on page 9
- Verifying the VLAN Members and Interfaces on the Distribution Switch on page 10

Verifying the VLAN Members and Interfaces on the Access Switch

Purpose Verify that the sales and support have been created on the switch.

Action List all VLANs configured on the switch:

```
user@switch> show vlans
```

Name	Tag	Interfaces
default		ge-0/0/1.0, ge-0/0/2.0, ge-0/0/4.0, ge-0/0/5.0, ge-0/0/6.0, ge-0/0/7.0, ge-0/0/8.0*, ge-0/0/9.0, ge-0/0/10.0, ge-0/0/11.0*, ge-0/0/12.0, ge-0/0/13.0, ge-0/0/14.0, ge-0/0/15.0, ge-0/0/16.0, ge-0/0/17.0, ge-0/0/18.0, ge-0/0/19.0*, ge-0/0/21.0, ge-0/0/23.0, ge-0/0/25.0, ge-0/0/27.0*, ge-0/0/28.0, ge-0/0/29.0, ge-0/0/30.0, ge-0/0/31.0*, ge-0/0/32.0, ge-0/0/33.0, ge-0/0/34.0, ge-0/0/35.0*, ge-0/0/36.0, ge-0/0/37.0, ge-0/0/38.0, ge-0/0/39.0*, ge-0/0/40.0, ge-0/0/41.0, ge-0/0/42.0, ge-0/0/43.0*, ge-0/0/45.0, ge-0/0/47.0, ge-0/1/1.0*, ge-0/1/2.0*, ge-0/1/3.0*
sales	100	ge-0/0/0.0*, ge-0/0/3.0, ge-0/0/20.0, ge-0/0/22.0, ge-0/1/0.0*,
support	200	ge-0/0/24.0*, ge-0/0/26.0, ge-0/0/44.0, ge-0/0/46.0,
mgmt		me0.0*

Meaning The output shows the sales and support VLANs and the interfaces associated with them.

Verifying the VLAN Members and Interfaces on the Distribution Switch

Purpose Verify that the sales and support have been created on the switch.

Action List all VLANs configured on the switch:

```
user@switch> show vlans
```

Name	Tag	Interfaces
default		ge-0/0/1.0, ge-0/0/2.0, ge-0/0/3.0, ge-0/0/4.0, ge-0/0/5.0, ge-0/0/6.0, ge-0/0/7.0*, ge-0/0/8.0, ge-0/0/9.0, ge-0/0/10.0*, ge-0/0/11.0, ge-0/0/12.0, ge-0/0/13.0, ge-0/0/14.0, ge-0/0/15.0, ge-0/0/16.0, ge-0/0/17.0, ge-0/0/18.0*, ge-0/0/19.0, ge-0/0/20.0, ge-0/0/21.0, ge-0/0/22.0*, ge-0/0/23.0, ge-0/1/1.0*, ge-0/1/2.0*, ge-0/1/3.0*
sales	100	ge-0/0/0.0*
support	200	ge-0/0/0.0*

mgmt

me0.0*

Meaning The output shows the **sales** and **support** VLANs associated to interface **ge-0/0/0.0**. Interface **ge-0/0/0.0** is the trunk interface connected to the access switch.

- Related Topics**
- Example: Setting Up Basic Bridging and a VLAN for an EX Series Switch
 - Example: Setting Up Bridging with Multiple VLANs for EX Series Switches
 - Example: Configure Automatic VLAN Administration Using GVRP
 - Understanding Bridging and VLANs on EX Series Switches

Published: 2009-09-03